

SECTION **IDX**
ALPHABETICAL INDEX

- A
- B
- C
- D
- E
- F
- G
- H
- I
- J
- K
- L

IDX

ALPHABETICAL INDEX

Numerics

1ST - Wiring diagram	AT-136 , AT-509
2ND - Wiring diagram	AT-141 , AT-514
3RD - Wiring diagram	AT-146 , AT-519
4TH - Wiring diagram	AT-152 , AT-524

A

A/C - Wiring diagram	MTC-27
A/C air flow	MTC-21
A/C component layout	MTC-19
A/C compressor clutch removal and installation .	MTC-64
A/C compressor mounting	MTC-63
A/C compressor precaution	MTC-8
A/C compressor special service tool	MTC-11
A/C control linkage adjustment (manual A/C) .	MTC-37
A/C control operation (manual A/C)	MTC-20
A/C diagnostic work flow (manual A/C)	MTC-30
A/C HFC134a (R134a) system identification	MTC-4
A/C HFC134a (R134a) system introduction ...	MTC-15
A/C HFC134a (R134a) system precaution	MTC-3
A/C HFC134a (R134a) system service procedure	MTC-77
A/C HFC134a (R134a) system service tools ..	MTC-12
A/C HFC134a system service equipment precaution ...	MTC-8
A/C lubricant (R134a)	MTC-16
A/C lubrication oil	MTC-16
A/C operational check	MTC-31
A/C performance chart	MTC-53
A/C performance test diagnoses	MTC-53
A/C pressure switch	MTC-15
A/C push control	MTC-20
A/C rera y	MTC-51
A/C service data specification	MTC-86
A/C switch	MTC-20
A/C, M - Wiring diagram	MTC-27
A/F - Wiring diagram ...	EC-223 , EC-230 , EC-237 , EC-244 , EC-545 , EC-815 , EC-821 , EC-827 , EC-834 , EC-1142
A/FH - Wiring diagram	EC-162 , EC-753
A/T - Wiring diagram	AT-405
A/T fluid temperature sensor	AT-124 , AT-492
A/T self-diagnoses	AT-430 , AT-437 , AT-438
A/T shift lock system	AT-251 , AT-631
A/T shift lock system - Wiring diagram	AT-252 , AT-632
A/T trouble diagnoses	AT-56
ABS - Wiring diagram	BRC-10
ABS sensor rotor	RAX-6
Accelerator pedal position (APP) sensor .	EC-514 , EC-535 , EC-1110 , EC-1117 , EC-1132
Air bag	SRS-2
Air bag precautions	GI-3
Air bleeding (hydraulic clutch)	CL-7 , CL-24
Air bleeding for brake system	BR-7
Air cleaner and air duct	EM-106
Air cleaner filter replacementQG18DE	MA-19

Air cleaner filter replacementQR25DE	MA-26
Air conditioner - Wiring diagram	MTC-27
Air control cable adjustment	MTC-39
Air flow meter - See Mass air flow sensor	EC-768 , EC-777
Air fuel ratio sensor 1 ..	EC-220 , EC-227 , EC-234 , EC-241 , EC-543 , EC-812 , EC-819 , EC-825 , EC-831 , EC-1140
Air fuel ratio sensor 1 heater	EC-161 , EC-752
Air mix door control linkage adjustment	MTC-41
Air spoiler, rear	EI-22
Alternator	SC-25
Angular tightening application	EM-5 , EM-94
Antenna	AV-18
Anti-lock brake system - Wiring diagram	BRC-10
APPS1 - Wiring diagram	EC-516 , EC-1112
APPS2 - Wiring diagram	EC-523 , EC-1119
APPS3 - Wiring diagram	EC-537 , EC-1134
ASC/BS - Wiring diagram	EC-478 , EC-1069
ASC/SW - Wiring diagram	EC-470 , EC-1062
ASCBOF - Wiring diagram	EC-551 , EC-1148
ASCD	EC-32 , EC-623
ASCD (automatic speed control device)	ACS-2
ASCD brake switch	EC-1147
ASCD clutch switch	EC-1147
ASCD indicator lamp	EC-1157
ASCIND - Wiring diagram	EC-561 , EC-1158
Audio	AV-2
AUDIO - Wiring diagram	AV-6
Audio and A/C control removal and installation - See Instrument panel	IP-10
Automatic transaxle number	GI-49
Automatic transmission fluid replacement	MA-32
Axle	MA-39

B

BA/FTS - Wiring diagram	AT-198 , AT-570
Back door window	GW-12
BACK/L - Wiring diagram	LT-22
Back-up lamp	LT-22
Back-up lamp switch (M/T)	MT-12
Back-up lamp switch (M/T)Back-up lamp switch	MT-75
Ball joint (front)	FSU-14
Basic inspection	EC-73 , EC-664
Battery	SC-4
Battery/Starting/Charging System Tester	SC-6 , SC-11 , SC-21
Baulk ring (M/T)	MT-19 , MT-82
Bi-level door control linkage adjustment	MTC-39
Block heater	EM-164
Blower motor	MTC-46
Blower resistor	MTC-46
Blower unit	MTC-74
Body alignment	BL-116
Brake booster	BR-16
Brake control valve (Proportioning valve)	BR-10
Brake fluid change	BR-6
Brake fluid level	MA-35

ALPHABETICAL INDEX

Brake fluid level and line check	BR-6
Brake hydraulic line	BR-8
Brake inspectionDisc Brake	MA-36
Brake inspectionDrum Brake	MA-37
Brake lines and cables inspection	MA-35
Brake lining wear temporary checkingDisc Brake .	MA-37
Brake lining wear temporary checkingDrum Brake	MA-37
Brake pedal	BR-11
Brake switch	EC-489 , EC-1085 , EC-1147
BRK/SW - Wiring diagram	EC-490 , EC-1086
Bulb specifications	LT-49
Bumper, front	EI-13
Bumper, rear	EI-18

C

Camshaft	EM-126
Camshaft inspection	EM-35 , EM-37 , EM-128
Camshaft position sensor (PHASE) ..	EC-328 , EC-917
CAN - Wiring diagram .	EC-153 , EC-744 , AT-208 , AT-586 , LAN-16 , LAN-19 , LAN-23
CAN communication ...	EC-152 , EC-155 , EC-743 , EC-746 , AT-207 , AT-585
Canister-See EVAP canister	EC-38 , EC-629
CHARGE - Wiring diagram	SC-20
Charging system	SC-19
Chassis and body maintenance	MA-9 , MA-30
CHIME - Wiring diagram	DI-44
CIGAR - Wiring diagram	WW-10
Cigarette lighter	WW-10
Circuit breaker	PG-46
Closed loop control	EC-28 , EC-619
Closed loop control (Bank 1)	EC-1042
Clutch cover	CL-17 , CL-33
Clutch disc	CL-17 , CL-33
Clutch fluid level	MA-30
Clutch master cylinder	CL-9 , CL-26
Clutch operating cylinder	CL-11 , CL-28
Clutch pedal	CL-7 , CL-24
Clutch release bearing	CL-14 , CL-31
Clutch release mechanism	CL-14 , CL-31
Clutch withdrawal lever	CL-14 , CL-31
Coil spring (front)	FSU-9
Coil spring (rear)	RSU-10
Combination lamp, front, removal and installation	EI-13
Combination lamp, rear, removal and installation	EI-22
Combination meter	DI-4 , DI-26
Combination meter removal and installation - See Instrument panel	IP-10 , DI-26
Combination switch	LT-4
Component Location (manual A/C)	MTC-23
Compression pressure	EM-55
Compressor clutch removal and installation ..	MTC-64
Compressor mounting	MTC-63
Compressor precaution	MTC-8
Compressor special service tool	MTC-11
Connecting rod	EM-72

Connecting rod bearing clearance	EM-77
Connecting rod bushing clearance	EM-78
Connector inspection	GI-23
Console box - See Instrument panel	IP-10
CONSULT for ABS	BRC-16
CONSULT for engine	EC-115 , EC-705
CONSULT general information	GI-36
Control lever (M/T)	MT-13
Control valve (A/T)	AT-296
Converter housing installation	AT-378 , AT-739
COOL/F - Wiring diagram	EC-454 , EC-1047
Coolant mixture ratio	MA-14
Coolant replacementQG18DE	MA-16
Coolant replacementQR25DE	MA-23
Cooling circuit (engine)	CO-7
Cooling fan control	EC-1043
Cooling fan motor	EC-1043
Cooling fan relay	EC-462 , EC-1055
Cooling unit (A/C evaporator)	MTC-75
Coupling sleeve (M/T)	MT-19 , MT-82
Crankcase ventilation system - See Positive crankcase ventilation	EC-48 , EC-639
Crankshaft	EM-74 , EM-165
Crankshaft position sensor (POS)	EC-321 , EC-910
Cylinder block	EM-69 , EM-164
Cylinder block boring	EM-184
Cylinder head	EM-55 , EM-148

D

D/LOCK - Wiring diagram	BL-14
Data link connector	EC-1210
Daytime light system	LT-10
Daytime running light - See Daytime light system ..	LT-10
DEF - Wiring diagram	GW-20
Detonation sensor - See Knock sensor	EC-316
Diagnosis sensor unit	SRS-37
Diagnostic trouble code (DTC) for OBD system	EC-14 , EC-54 , EC-605 , EC-645
Diagnostic trouble code (DTC) inspection priority chart	EC-91 , EC-683
Differential gear (FF A/T)	AT-354
Differential gear (FF M/T)	MT-21 , MT-55 , MT-85
Dimensions	GI-49
DLC - Wiring diagram	EC-601 , EC-1210
Dome light - See Interior lamp	LT-36
Door adjustment (front)	BL-31
Door adjustment (rear)	BL-31
Door glass	BL-31 , GW-6 , GW-12 , GW-13
Door glass Fitting Adjustment	BL-31
Door mirror	GW-14 , GW-16
Door trim	EI-31
Door, front	BL-31 , GW-12
Door, rear	BL-31 , GW-13
Drive belt	EM-103
Drive belt inspectionQG18DE	MA-16
Drive belt inspectionQR25DE	MA-23
Drive plate runout	EM-79

A

B

C

D

E

F

G

H

I

J

K

L

IDX

ALPHABETICAL INDEX

Drive shaft [MA-40](#)
 Drive shaft (front) [FAX-5](#), [FAX-11](#)
 Dropping resistor (A/T) [AT-177](#), [AT-542](#)
 DTC work support [EC-125](#), [EC-715](#)
 DTRL - Wiring diagram [LT-14](#)

E

ECM input/output signal [EC-107](#), [EC-698](#), [EC-719](#)
 ECM power supply [EC-145](#), [EC-433](#), [EC-736](#), [EC-1026](#)
 ECM relay [EC-742](#)
 ECM/PW - Wiring diagram [EC-434](#), [EC-1027](#)
 ECTS - Wiring diagram [EC-201](#), [EC-793](#)
 Electric throttle control actuator [EC-500](#), [EC-507](#), [EC-512](#), [EC-1096](#), [EC-1103](#), [EC-1108](#)
 Electrical diagnoses [GI-23](#)
 Electrical load signal circuit [EC-563](#), [EC-1160](#)
 Electrical units location [PG-43](#)
 Electronic ignition (EI) system [EC-29](#), [EC-620](#)
 ENG SS - Wiring diagram [AT-131](#), [AT-504](#)
 Engine compartment [BL-117](#)
 Engine control circuit diagram [EC-105](#), [EC-696](#)
 Engine control component parts location ... [EC-98](#), [EC-690](#)
 Engine control module (ECM) [EC-437](#), [EC-1030](#)
 Engine control system diagram and chart . [EC-26](#), [EC-617](#)
 Engine coolant temperature sensor (ECTS) ... [EC-199](#), [EC-212](#), [EC-791](#), [EC-804](#)
 Engine fail-safe system [EC-93](#), [EC-685](#)
 Engine oil filter replacementQG18DE [MA-20](#)
 Engine oil filter replacementQR25DE [MA-27](#)
 Engine oil precautions [GI-7](#)
 Engine oil replacementQG18DE [MA-20](#)
 Engine oil replacementQR25DE [MA-26](#)
 Engine outer component parts [EM-15](#)
 Engine removal [EM-65](#), [EM-159](#)
 Engine room - See Engine compartment [BL-117](#)
 Engine serial number [GI-48](#)
 ETC1 - Wiring diagram [EC-501](#), [EC-1097](#)
 ETC2 - Wiring diagram [EC-496](#), [EC-1092](#)
 ETC3 - Wiring diagram [EC-508](#), [EC-1104](#)
 EVAP canister [EC-38](#), [EC-629](#)
 EVAP canister purge volume control solenoid valve [EC-354](#), [EC-362](#), [EC-944](#), [EC-952](#)
 EVAP canister vent control valve [EC-369](#), [EC-376](#), [EC-959](#), [EC-966](#)
 EVAP control system (small leak) diagnosis .. [EC-346](#), [EC-400](#), [EC-935](#), [EC-991](#), [EC-999](#)
 EVAP control system pressure sensor [EC-384](#), [EC-387](#), [EC-393](#), [EC-973](#), [EC-976](#), [EC-983](#)
 EVAP control system purge flow monitoring diagnosis [EC-340](#), [EC-929](#)
 EVAP vapor lines inspectionQG18DE [MA-22](#)
 EVAP vapor lines inspectionQR25DE [MA-29](#)
 Evaporative emission (EVAP) system . [EC-35](#), [EC-626](#)
 Exhaust system [EX-3](#)
 Exhaust system inspection [MA-30](#)
 Exterior [EI-22](#)

F

F/FOG - Wiring diagram [LT-25](#)
 F/PUMP - Wiring diagram [EC-580](#), [EC-1179](#)
 Fan switch [MTC-46](#)
 Final drive (FF A/T) [AT-354](#)
 Final drive (FF M/T) [MT-21](#), [MT-55](#), [MT-85](#)
 Finisher, interior - See Trim [EI-28](#)
 Finisher, trunk lid [EI-33](#)
 Floor trim [EI-28](#)
 Flow charts [GI-26](#)
 Fluid temperature sensor (A/T) [AT-124](#), [AT-492](#)
 Fluids [MA-13](#)
 Flywheel (clutch) [CL-18](#), [CL-34](#)
 Flywheel runout [EM-79](#)
 Fog lamp, front [LT-24](#)
 Fog lamp, front, removal and installation [EI-13](#)
 Fork rod (M/T) [MT-20](#), [MT-84](#)
 Forward clutch [AT-323](#)
 Freeze frame data [EC-55](#), [EC-646](#)
 Front axle [FAX-5](#)
 Front bumper [EI-13](#)
 Front combination lamp removal and installation [EI-13](#)
 Front door [BL-31](#), [GW-12](#)
 Front fog lamp [LT-24](#)
 Front fog lamp removal and installation [EI-13](#)
 Front passenger air bag [SRS-44](#)
 Front seat [SE-3](#)
 Front seat belt [SB-3](#)
 Front washer [WW-3](#)
 Front wiper [WW-3](#)
 FTS - Wiring diagram [AT-121](#), [AT-494](#)
 FTTS - Wiring diagram [EC-295](#), [EC-299](#), [EC-884](#), [EC-888](#)
 FUEL - Wiring diagram [EC-279](#), [EC-287](#), [EC-869](#), [EC-877](#)
 Fuel cut control (at no load high engine speed) [EC-30](#), [EC-621](#)
 Fuel gauge [DI-4](#)
 Fuel injection system .. [EC-277](#), [EC-285](#), [EC-867](#), [EC-875](#)
 Fuel injector and fuel tube [EM-21](#), [EM-121](#)
 Fuel level sensor [EC-416](#), [EC-418](#), [EC-420](#), [EC-1009](#), [EC-1011](#), [EC-1013](#)
 Fuel line inspection [FL-2](#), [MA-19](#)
 Fuel line inspectionQR25DE [MA-25](#)
 Fuel precautions [GI-3](#), [GI-5](#)
 Fuel pressure check [EC-82](#), [EC-673](#)
 Fuel pressure release [EC-82](#), [EC-673](#)
 Fuel pump [EC-579](#), [EC-1178](#)
 Fuel tank temperature sensor ... [EC-293](#), [EC-298](#), [EC-882](#), [EC-887](#)
 Fuel tank vacuum relief valve [EC-38](#), [EC-629](#)
 Fuel tankRemoval and Installtion [FL-7](#)
 Fuse [PG-46](#)
 Fuse and fusible link box [PG-54](#)
 Fuse block [PG-53](#)
 Fusible link [PG-46](#)

ALPHABETICAL INDEX

G

Gauges [DI-4](#)
 Gear components (M/T) [MT-19](#), [MT-82](#)
 Generator [SC-25](#)
 Generator - See Alternator [SC-25](#)
 Generic scan tool (GST) [EC-127](#), [EC-717](#)
 Ground distribution [PG-13](#)

H

H/LAMP - Wiring diagram [LT-7](#)
 H/MIRROR - Wiring diagram [GW-15](#)
 Harness connector [PG-47](#)
 Harness connector inspection [GI-23](#)
 Harness layout [PG-22](#)
 Hazard warning lamp [LT-27](#)
 Headlamp [LT-6](#)
 Headlamp removal and installation [EI-13](#)
 Headlining - See Roof trim [EI-32](#)
 Heated oxygen sensor 2 ... [EC-251](#), [EC-269](#), [EC-841](#),
[EC-849](#), [EC-859](#)
 Heated oxygen sensor 2 heater [EC-166](#), [EC-757](#)
 HEATER - Wiring diagram [MTC-25](#)
 Heater mirror [GW-15](#)
 Heater system - Wiring diagram [MTC-25](#)
 Heater unit (heater core) [MTC-73](#)
 Height (Dimensions) [GI-49](#)
 HFC134a (R134a) system identification [MTC-4](#)
 HFC134a (R134a) system introduction [MTC-15](#)
 HFC134a (R134a) system precaution [MTC-3](#)
 HFC134a (R134a) system service procedure [MTC-77](#)
 HFC134a (R134a) system service tools [MTC-12](#)
 HFC134a system service equipment precaution [MTC-8](#)
 High clutch [AT-317](#)
 HO2S2 - Wiring diagram ... [EC-254](#), [EC-272](#), [EC-844](#),
[EC-852](#), [EC-862](#)
 HO2S2H - Wiring diagram [EC-168](#), [EC-759](#)
 Hood [EI-13](#)
 Horn [WW-9](#)
 HORN - Wiring diagram [WW-9](#)
 How to erase DTC for OBD system [EC-63](#), [EC-653](#)

I

IATS - Wiring diagram [EC-195](#), [EC-787](#)
 Identification plate [GI-48](#)
 Idle air volume learning [EC-80](#), [EC-671](#)
 Idle speed [EC-73](#), [EC-664](#)
 Idle speed control (ISC) ... [EC-424](#), [EC-426](#), [EC-1017](#),
[EC-1019](#)
 Ignition coil [EM-118](#), [EC-584](#), [EC-1184](#)
 Ignition control system [EC-584](#), [EC-1184](#)
 Ignition timing [EC-73](#), [EC-664](#)
 IGNSYS - Wiring diagram [EC-585](#), [EC-1185](#)
 ILL - Wiring diagram [LT-34](#)
 Illumination [LT-33](#)
 INJECT - Wiring diagram [EC-574](#), [EC-1173](#)
 Injector [EC-573](#), [EC-1172](#)

Input shaft (FF M/T) [MT-19](#), [MT-38](#), [MT-82](#)
 Instrument panel [IP-10](#)
 INT/L - Wiring diagram [LT-38](#)
 Intake air temperature sensor ... [EC-194](#), [EC-215](#), [EC-785](#), [EC-807](#)
 Intake door control linkage adjustment [MTC-37](#)
 Intake door motor [MTC-34](#)
 Intake manifold [EM-15](#), [EM-108](#)
 Intake sensor [MTC-61](#)
 Intake valve timing control ... [EC-157](#), [EC-172](#), [EC-748](#)
 Intake valve timing control solenoid valve [EC-172](#), [EC-763](#)
 Interior [EI-28](#)
 Interior lamp [LT-36](#)
 IVC - Wiring diagram [EC-173](#), [EC-764](#)
 IVIS (Infiniti vehicle immobilizer system) precautions ...
[GI-5](#)

J

Junction box (J/B) [PG-53](#)

K

KEYLES - Wiring diagram [BL-38](#)
 Knock sensor (KS) [EC-316](#), [EC-905](#)
 KS - Wiring diagram [EC-317](#), [EC-906](#)

L

Length (Dimensions) [GI-49](#)
 License lamp [LT-19](#)
 Lifting points [GI-39](#)
 Line pressure solenoid valve [AT-157](#), [AT-542](#)
 Line pressure test (A/T) [AT-67](#), [AT-452](#)
 Liquid gasket application [EM-6](#), [EM-95](#)
 LOAD - Wiring diagram [EC-564](#)
 Location of electrical units [PG-43](#)
 Low and reverse brake [AT-331](#)
 LPSV - Wiring diagram [AT-173](#), [AT-544](#)
 Lubricant (R134a) A/C [MTC-16](#)
 Lubrication circuit (engine) [LU-4](#)
 Lubrication oil A/C [MTC-16](#)
 Lubrication-locks, hinges and hood latches [MA-40](#)
 Luggage room lamp [LT-36](#)

M

M/T major overhaul [MT-18](#), [MT-85](#)
 M/T oil replacementM/T oil replacement [MT-73](#)
 M/T removal and installation [MT-15](#)
 MAFS - Wiring diagram [EC-180](#), [EC-188](#), [EC-771](#), [EC-779](#)
 Magnet clutch [MTC-64](#)
 MAIN - Wiring diagram [EC-145](#), [EC-736](#), [AT-111](#), [AT-483](#)
 Main drive gear (M/T) [MT-19](#)
 Mainshaft (M/T) [MT-19](#), [MT-45](#), [MT-82](#)
 Maintenance [MA-5](#)

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Maintenance (engine)QG18DE [MA-16](#)
Maintenance (engine)QR25DE [MA-23](#)
Malfunction indicator lamp (MIL) [EC-64](#), [EC-655](#)
Manual air conditioner - Wiring diagram [MTC-27](#)
Manual transaxle number [GI-49](#)
Manual transmission oil replacement [MA-31](#)
Mass air flow sensor (MAFS) [EC-177](#), [EC-186](#), [EC-768](#), [EC-777](#)
Master cylinder (clutch) [CL-9](#), [CL-26](#)
Meter [DI-4](#)
METER - Wiring diagram [DI-13](#), [DI-62](#)
MIL data link connectors circuit [EC-601](#)
MIRROR - Wiring diagram [GW-14](#)
Mirror defogger [GW-15](#)
Mirror, door [GW-14](#), [GW-16](#)
Mirror, out side [GW-16](#)
Misfire [EC-309](#), [EC-898](#)
Model variation [GI-46](#)
Molding - See Exterior [EI-22](#)
Multiport fuel injection (MFI) system [EC-27](#), [EC-618](#)
Multiport fuel injection precautions [GI-3](#), [GI-6](#)
Multi-remote control system - See Remote keyless entry system [BL-34](#)

N

NATS (Nissan anti-theft system) [BL-96](#)
NONDTC - Wiring diagram [AT-214](#), [AT-592](#)
NVH troubleshooting (BR) [BR-5](#)
NVH troubleshooting (EM) [EM-13](#), [EM-101](#)
NVH troubleshooting (FA) [FAX-4](#)
NVH troubleshooting (RA) [RAX-4](#)
NVH troubleshooting (WT) [WT-2](#)
NVIS (Nissan vehicle immobilizer system) [BL-96](#)
NVIS (Nissan vehicle immobilizer system) precautions [GI-3](#), [GI-5](#)

O

Oil change (capacity) [MA-13](#)
Oil pan (engine) [EM-18](#), [EM-115](#)
Oil pump (A/T) [AT-291](#)
Oil pump (engine) [LU-8](#), [LU-19](#)
Oil pump regulator valve (engine) [LU-10](#)
Oil seal replacement (engine) [EM-52](#), [EM-144](#)
On board diagnostic system [EC-51](#), [EC-642](#)
Operating cylinder (clutch) [CL-11](#), [CL-28](#)
ORVR (On-board Refueling Vapor Recovery) .. [EC-42](#), [EC-633](#)
Overdrive control switch [AT-248](#), [AT-250](#), [AT-626](#)
Overheat [EC-450](#), [EC-1043](#)
Overrun clutch [AT-323](#)
Overrun clutch solenoid valve [AT-563](#)
OVRCSV - Wiring diagram [AT-193](#), [AT-565](#)

P

Park/Neutral position switch [EC-445](#), [EC-1038](#)
Park/neutral position switch (A/T) [AT-114](#), [AT-486](#)

Park/neutral position switch (M/T) [MT-12](#)
Park/neutral position switch (M/T)Park/neutral position switch (M/T) [MT-75](#)
Parking brake control [PB-2](#)
Parking drum brake [BR-38](#)
Parking lamp [LT-19](#)
PCV (positive crankcase ventilation) .. [EC-48](#), [EC-639](#)
Periodic maintenance [MA-7](#)
PGC/V - Wiring diagram [EC-356](#), [EC-364](#), [EC-946](#), [EC-954](#)
PHASE - Wiring diagram [EC-330](#), [EC-919](#)
Piston assembly [EM-79](#)
Piston pin inspection [EM-71](#)
Piston ring inspection [EM-72](#)
Piston to bore clearance [EM-73](#), [EM-184](#)
PNP/SW - Wiring diagram [EC-447](#), [EC-1040](#), [AT-115](#), [AT-488](#)
POS - Wiring diagram [EC-323](#), [EC-912](#)
POWER - Wiring diagram [PG-5](#)
Power door lock [BL-11](#)
Power door mirror [GW-14](#)
Power steering fluid level [PS-8](#), [MA-38](#)
Power steering gear [PS-15](#)
Power steering hydraulic pressure [PS-10](#)
Power steering oil pump [PS-21](#)
Power steering pressure (PSP) sensor ... [EC-428](#), [EC-1021](#)
Power steering system bleeding [PS-8](#)
Power supply routing [PG-3](#)
Power transistor [EC-1184](#)
Power window [GW-7](#)
Power window main switch [GW-7](#)
PRE/SE - Wiring diagram .. [EC-389](#), [EC-395](#), [EC-978](#), [EC-985](#)
Precautions (General) [GI-3](#)
Pressure plate - See Clutch cover [CL-17](#), [CL-33](#)
Pressure test (A/T) [AT-67](#), [AT-452](#)
PS/SEN - Wiring diagram [EC-429](#), [EC-1022](#)

R

Radiator [CO-14](#)
Radio - See Audio [AV-2](#)
Rear air spoiler [EI-22](#)
Rear axle [RAX-5](#)
Rear axle (disc brake type) [RAX-6](#)
Rear axle (drum brake type) [RAX-6](#)
Rear bumper [EI-18](#)
Rear combination lamp removal and installation [EI-22](#)
Rear disc brake [BR-29](#)
Rear door [BL-31](#), [GW-13](#)
Rear drum brake [BR-38](#)
Rear seat [SE-5](#)
Rear seat belt [SB-5](#)
Rear suspension [RSU-5](#)
Rear window [GW-3](#)
Rear window defogger [GW-17](#)
Refrigerant connection precaution [MTC-4](#)
Refrigerant general precaution [MTC-4](#)

ALPHABETICAL INDEX

Refrigerant lines	MTC-77	Steering gear and linkage inspection	MA-38
Refrigerant pressure sensor	EC-596 , EC-1197	Steering linkage	PS-15
Refrigeration cycle	MTC-15	Steering wheel and column	PS-11
Release bearing (clutch)	CL-14 , CL-31	Steering wheel play	PS-7
Remote keyless entry system	BL-34	Steering wheel turning force	PS-9
Removal and installation (A/T)	AT-263	Stop lamp	LT-21
Reverse clutch	AT-312	Stop lamp switch	EC-1085 , EC-1147
Reverse idler shaft (M/T)	MT-18 , MT-82	STOP/L - Wiring diagram	LT-21
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T)	MT-12	Striking rod (M/T)	MT-20
Reverse main gear (M/T)	MT-19 , MT-82	Strut (front)	FSU-9
Revolution sensor (A/T)	AT-498	Strut (rear)	RSU-8
Road wheel size	GI-50	Sub-gear (M/T)	MT-19
Rocker cover	EM-124	Sunroof	RF-10
Roof trim	EI-32	Supplemental restraint system - Wiring diagram	SRS-14
Room lamp - See Interior lamp	LT-36	Suspension	MA-39
RP/SEN - Wiring diagram	EC-597 , EC-1198	Symbols and abbreviations	GI-8 , GI-21

S

SAE J1979 - Mode 1 - 7	EC-51 , EC-642
Seal - See Exterior	EI-22
Seat belt inspection	SB-7 , MA-40
Seat belt, front	SB-3
Seat belt, rear	SB-5
Seat, front	SE-3
Seat, rear	SE-5
SEN/PW - Wiring diagram	EC-441 , EC-1034
Sheft warning system	BL-65
SHIFT - Wiring diagram	AT-252 , AT-632
Shift control components (M/T)	MT-20 , MT-84
Shift control components (M/T)Shift control components (M/T)	MT-76
Shift fork (M/T)	MT-20 , MT-84
Shift lever	MT-13
Shift lock system	AT-251 , AT-631
Shift schedule	AT-384 , AT-746
Shift solenoid valve A (A/T) ..	AT-138 , AT-148 , AT-548
Shift solenoid valve B (A/T)	AT-138 , AT-553
Shock absorber (front)	FSU-9
Shock absorber (rear)	RSU-10
Side trim	EI-28
Smart entrance control unit	BCS-3
Spare tire size	GI-50
Spark plug replacementQG18DE	MA-21
Spark plug replacementQR25DE	MA-28
Specification value	EC-134 , EC-725
Speedometer	DI-4
SROOF - Wiring diagram	RF-11
SRS - Wiring diagram	SRS-14
SRS Trouble diagnoses	SRS-7
SSV/A - Wiring diagram	AT-179 , AT-550
SSV/B - Wiring diagram	AT-183 , AT-555
Stabilizer bar (front)	FSU-11
Stall test (A/T)	AT-63 , AT-448
Standardized relay	PG-51
START - Wiring diagram	SC-8
Starter	SC-15
Starting system	SC-7

Steering gear and linkage inspection	MA-38
Steering linkage	PS-15
Steering wheel and column	PS-11
Steering wheel play	PS-7
Steering wheel turning force	PS-9
Stop lamp	LT-21
Stop lamp switch	EC-1085 , EC-1147
STOP/L - Wiring diagram	LT-21
Striking rod (M/T)	MT-20
Strut (front)	FSU-9
Strut (rear)	RSU-8
Sub-gear (M/T)	MT-19
Sunroof	RF-10
Supplemental restraint system - Wiring diagram	SRS-14
Suspension	MA-39
Symbols and abbreviations	GI-8 , GI-21
Symptom matrix chart	EC-94 , EC-686
Synchronizer (M/T)	MT-19 , MT-82
System readiness test (SRT) code	EC-56 , EC-647

T

Tachometer	DI-4
Tail lamp	LT-19
TAIL/L - Wiring diagram	LT-19
TCCSIG - Wiring diagram	AT-165 , AT-536
TCM circuit diagram	AT-18 , AT-405
TCM inspection table	AT-108 , AT-479
TCV - Wiring diagram	AT-159 , AT-531
Temperature control cable and linkage adjustment	MTC-41
Thermal protector	MTC-71
Thermostat	CO-12 , CO-30
Three way catalyst function	EC-335 , EC-924
Three way catalyst precautions	GI-3 , GI-5
Throttle control motor relay	EC-494 , EC-1090
Throttle position sensor (TPS) ...	EC-205 , EC-302 , EC-464 , EC-466 , EC-528 , EC-797 , EC-891 , EC-1056 , EC-1058 , EC-1125
Throttle position switch	AT-248 , AT-626
Throwout bearing - See Clutch release bearing	CL-14 , CL-31
Tie-rod	PS-19
Tie-rod ball joints	PS-19
Tightening torque of standard bolts	GI-44
Time control system	BCS-10
Timing chain	EM-42 , EM-136
Tire rotation	MA-34
Tire size	GI-50
TLID - Wiring diagram	BL-33
Top tether strap child restraint	SB-10
Torque converter installation	AT-264 , AT-644 , AT-739
Torque convertor clutch solenoid valve	AT-529
Tow truck towing	GI-42
Towing point	GI-43
TPS - Wiring diagram	AT-189 , AT-560
TPS1 - Wiring diagram	EC-304 , EC-893
TPS2 - Wiring diagram	EC-207 , EC-799

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

TPS3 - Wiring diagram	EC-530 , EC-1127	Wheel hub (front)	FAX-6 , FAX-9
Transmission case (M/T)	MT-18 , MT-81	Wheel hub (rear)	RAX-6
Tread-FR&RR (Dimensions)	GI-49	Wheel sensors (ABS)	BRC-44
Trim	EI-28	Wheel size	GI-50
Trouble diagnoses	GI-9 , GI-23	Wheelbase (Dimensions)	GI-49
Trunk lid	EI-18	Width (Dimensions)	GI-49
Trunk lid finisher	EI-33	WINDOW - Wiring diagram	GW-9
Trunk lid opener - See Trunk lid	EI-18	Window, back door	GW-12
Trunk lid opener, electric	BL-33	Window, door	GW-6 , GW-12
Trunk lid trim	EI-33	Window, rear	GW-3
Trunk room lamp	LT-36	Windshield	GW-3
Trunk room trim	EI-33	Windshield washer - See Front washer	WW-3
TURN - Wiring diagram	LT-30	Windshield wiper - See Front wiper	WW-3
Turn signal lamp	LT-27	WIPER - Wiring diagram	WW-5
Two trip detection logic	EC-51 , EC-642	Wiper and washer	WW-3

U

Under body	BL-120
------------	------------------------

V

Vacuum hose (brake system)	BR-18
Vacuum hose drawing (Engine control)	EC-695
Valve clearance	EM-38 , EM-134
Valve guide	EM-61 , EM-154 , EM-155
Valve seat	EM-63 , EM-156
Valve spring	EM-64 , EM-157
Variable induction air control system (VIAS)	EC-1080 , EC-1202
Vehicle identification number	GI-47
Vehicle recovery (freeing a stuck vehicle)	GI-43
Vehicle security (theft warning) system	BL-65
Vehicle speed sensor (VSS)	EC-422 , EC-1015
VEHSEC - Wiring diagram	BL-72
Vent mode switch	MTC-20
VENT/V - Wiring diagram	EC-371 , EC-379 , EC-961 , EC-968
VIAS - Wiring diagram	EC-1204
VIAS/V - Wiring diagram	EC-1081
VIN registration	EC-79 , EC-670
Viscosity number (SAE)	MA-14
VSS A/T - Wiring diagram	AT-127 , AT-500
VSSMTR - Wiring diagram	AT-204 , AT-577 , AT-582

W

WARN - Wiring diagram	DI-29
Warning chime	DI-41
Warning lamps	DI-27
Washer, front	WW-3
Water pump	CO-10
Water temperature gauge	DI-4
Weatherstrip - See Exterior	EI-22
Wheel alignment (front)	FSU-6
Wheel alignment (rear)	RSU-6
Wheel bearing (front axle)	FAX-9
Wheel bearing (front)	FAX-5
Wheel bearing (rear)	RAX-5

Wheel hub (front)	FAX-6 , FAX-9
Wheel hub (rear)	RAX-6
Wheel sensors (ABS)	BRC-44
Wheel size	GI-50
Wheelbase (Dimensions)	GI-49
Width (Dimensions)	GI-49
WINDOW - Wiring diagram	GW-9
Window, back door	GW-12
Window, door	GW-6 , GW-12
Window, rear	GW-3
Windshield	GW-3
Windshield washer - See Front washer	WW-3
Windshield wiper - See Front wiper	WW-3
WIPER - Wiring diagram	WW-5
Wiper and washer	WW-3
Wiper, front	WW-3
Wiring Diagram (Cell code) list	PG-40
Wiring diagrams	GI-8 , GI-14
Withdrawal lever (clutch)	CL-14 , CL-31
Wrist pin - See Piston pin inspection	EM-71