

SECTION **IDX**  
ALPHABETICAL INDEX

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

IDX

# ALPHABETICAL INDEX

## Numerics

4LO switch .....	<a href="#">TF-42</a>
4WD - Wiring diagram .....	<a href="#">TF-23</a>
4WD shift switch .....	<a href="#">TF-45</a>
4WD system description .....	<a href="#">TF-15</a>
4WD system diagram .....	<a href="#">TF-18</a>

## A

A/C air flow .....	<a href="#">MTC-26</a>
A/C compressor clutch removal and installation .	<a href="#">MTC-115</a>
A/C compressor mounting .....	<a href="#">MTC-114</a>
A/C compressor precaution .....	<a href="#">MTC-9</a>
A/C compressor special service tool .....	<a href="#">MTC-12</a>
A/C control operation (auto A/C) .....	<a href="#">MTC-24</a>
A/C diagnostic work flow (auto A/C) .....	<a href="#">MTC-88</a>
A/C evaporator .....	<a href="#">MTC-121</a>
A/C HFC134a (R134a) system identification ....	<a href="#">MTC-6</a>
A/C HFC134a (R134a) system precaution .....	<a href="#">MTC-4</a>
A/C HFC134a (R134a) system service procedure .....	<a href="#">MTC-111</a>
A/C HFC134a (R134a) system service tools ..	<a href="#">MTC-12</a>
A/C HFC134a system service equipment precaution ...	<a href="#">MTC-9</a>
A/C lubricant (R134a) .....	<a href="#">MTC-20</a>
A/C lubrication oil .....	<a href="#">MTC-20</a>
A/C operational check .....	<a href="#">MTC-45</a>
A/C self-diagnoses (auto A/C) .....	<a href="#">MTC-43</a> , <a href="#">MTC-88</a>
A/C service data specification .....	<a href="#">MTC-126</a>
A/C trouble diagnoses (auto A/C) .....	<a href="#">MTC-29</a>
A/C, A - Wiring diagram .....	<a href="#">MTC-35</a>
A/T - Wiring diagram .....	<a href="#">AT-54</a>
A/T fluid checking .....	<a href="#">AT-12</a> , <a href="#">AT-61</a> , <a href="#">MA-21</a>
A/T fluid replacement .....	<a href="#">AT-12</a> , <a href="#">MA-23</a>
A/T fluid temperature sensor .....	<a href="#">AT-133</a>
A/T IND - Wiring diagram .....	<a href="#">DI-37</a>
A/T indicator .....	<a href="#">DI-37</a>
A/T self-diagnoses .....	<a href="#">AT-96</a>
A/T shift lock system .....	<a href="#">AT-243</a>
A/T trouble diagnoses .....	<a href="#">AT-45</a>
ABS - Wiring diagram .....	<a href="#">BRC-16</a> , <a href="#">BRC-58</a> , <a href="#">BRC-106</a>
ABS (anti-lock brake system) .....	<a href="#">BRC-8</a> , <a href="#">BRC-49</a> , <a href="#">BRC-97</a>
Accelerator control system .....	<a href="#">ACC-2</a>
Accelerator pedal position (APP) sensor .	<a href="#">EC-536</a> , <a href="#">EC-542</a> , <a href="#">EC-556</a>
Accelerator pedal released position learning ....	<a href="#">EC-44</a>
AF1B1-Wiring diagram .....	<a href="#">EC-430</a> , <a href="#">EC-438</a> , <a href="#">EC-446</a> , <a href="#">EC-455</a> , <a href="#">EC-465</a> , <a href="#">EC-474</a> , <a href="#">EC-486</a>
AF1B2-Wiring diagram .....	<a href="#">EC-432</a> , <a href="#">EC-440</a> , <a href="#">EC-448</a> , <a href="#">EC-457</a> , <a href="#">EC-467</a> , <a href="#">EC-476</a> , <a href="#">EC-488</a>
AF1HB1-Wiring diagram .....	<a href="#">EC-354</a>
AF1HB2-Wiring diagram .....	<a href="#">EC-356</a>
Aiming adjustment .....	<a href="#">LT-29</a> , <a href="#">LT-73</a>
Air bag .....	<a href="#">SRS-3</a>
Air bag precautions .....	<a href="#">AP-2</a>
Air cleaner and air duct .....	<a href="#">EM-14</a>
Air cleaner filter replacement .....	<a href="#">MA-16</a>

Air conditioner cut control .....	<a href="#">EC-30</a>
Air flow meter - See Mass air flow sensor .....	<a href="#">EC-145</a> , <a href="#">EC-153</a>
Air fuel ratio sensor 1 ..	<a href="#">EC-428</a> , <a href="#">EC-436</a> , <a href="#">EC-444</a> , <a href="#">EC-453</a> , <a href="#">EC-462</a> , <a href="#">EC-471</a> , <a href="#">EC-483</a>
Air fuel ratio sensor 1 heater .....	<a href="#">EC-353</a>
Air mix. door motor .....	<a href="#">MTC-54</a>
Angular tightening application .....	<a href="#">EM-3</a>
APPS1 - Wiring diagram .....	<a href="#">EC-538</a>
APPS2 - Wiring diagram .....	<a href="#">EC-544</a>
APPS3 - Wiring diagram .....	<a href="#">EC-558</a>
ASC/BS - Wiring diagram .....	<a href="#">EC-518</a>
ASC/SW - Wiring diagram .....	<a href="#">EC-511</a>
ASCBOF - Wiring diagram .....	<a href="#">EC-594</a>
ASCD .....	<a href="#">EC-619</a>
ASCD (automatic speed control device) .....	<a href="#">ACS-2</a>
ASCD brake switch .....	<a href="#">EC-516</a> , <a href="#">EC-593</a>
ASCD indicator lamp .....	<a href="#">EC-600</a>
ASCD steering switch .....	<a href="#">EC-509</a>
ASCIND - Wiring diagram .....	<a href="#">EC-601</a>
ATP switch .....	<a href="#">TF-64</a>
AUDIO - Wiring diagram .....	<a href="#">AV-14</a>
Auto air conditioner - Wiring diagram .....	<a href="#">MTC-35</a>
Auto anti-dazzling inside mirror .....	<a href="#">GW-85</a>
Autolamp .....	<a href="#">LT-46</a>
Automatic amplifier .....	<a href="#">MTC-47</a>
Automatic transmission number .....	<a href="#">GI-49</a>
AV and NAVI control unit .....	<a href="#">AV-81</a>
AV communication line .....	<a href="#">AV-105</a>

## B

Back door trim .....	<a href="#">EI-32</a>
Back sonar .....	<a href="#">DI-56</a>
BACK/L - Wiring diagram .....	<a href="#">LT-102</a>
Back-up lamp .....	<a href="#">LT-102</a>
Ball joint (front) .....	<a href="#">FSU-14</a>
Basic inspection .....	<a href="#">EC-79</a>
Battery .....	<a href="#">SC-4</a>
Battery/Starting/Charging System Tester .....	<a href="#">SC-6</a> , <a href="#">SC-12</a> , <a href="#">SC-19</a>
BCM (Body control module) .....	<a href="#">BCS-3</a>
Block heater .....	<a href="#">EM-74</a>
Blower motor .....	<a href="#">MTC-65</a> , <a href="#">MTC-96</a>
Body alignment .....	<a href="#">BL-181</a>
Body component parts .....	<a href="#">BL-163</a>
Body construction .....	<a href="#">BL-179</a>
Body exterior paint color .....	<a href="#">BL-162</a>
Body mounting .....	<a href="#">BL-158</a> , <a href="#">BL-159</a>
Body repair .....	<a href="#">BL-162</a>
Body sealing .....	<a href="#">BL-175</a>
Brake booster .....	<a href="#">BR-18</a>
Brake fluid level .....	<a href="#">MA-28</a>
Brake hydraulic line .....	<a href="#">BR-12</a>
Brake inspection .....	<a href="#">MA-29</a>
Brake lines and cables inspection .....	<a href="#">MA-28</a>
Brake master cylinder .....	<a href="#">BR-15</a>
Brake switch .....	<a href="#">EC-531</a>
BRK/SW - Wiring diagram .....	<a href="#">EC-532</a>

# ALPHABETICAL INDEX

Bulb specifications ..... [LT-167](#)  
 Bumper, front ..... [EI-14](#)  
 Bumper, rear ..... [EI-18](#)

## C

Camshaft ..... [EM-43](#)  
 Camshaft inspection ..... [EM-46](#)  
 Camshaft position sensor (PHASE) ..... [EC-260](#)  
 CAN - Wiring diagram [EC-135](#), [LAN-26](#), [LAN-52](#), [LAN-81](#), [LAN-114](#), [LAN-142](#), [LAN-172](#), [LAN-206](#), [LAN-234](#), [LAN-264](#), [LAN-298](#), [LAN-328](#), [LAN-362](#), [LAN-400](#), [LAN-429](#), [LAN-461](#)  
 CAN (Controller Area Network) . [WT-9](#), [BRC-10](#), [BRC-52](#), [BRC-100](#), [SE-16](#), [LAN-24](#), [LAN-50](#), [LAN-79](#), [LAN-112](#), [LAN-140](#), [LAN-170](#), [LAN-204](#), [LAN-232](#), [LAN-262](#), [LAN-296](#), [LAN-326](#), [LAN-360](#), [LAN-398](#), [LAN-427](#), [LAN-459](#)  
 CAN communication . [EC-31](#), [EC-134](#), [AT-106](#), [TF-19](#), [TF-64](#), [RFD-47](#), [RFD-73](#), [WT-9](#), [BRC-10](#), [BRC-52](#), [BRC-100](#), [SE-16](#), [LAN-24](#), [LAN-50](#), [LAN-79](#), [LAN-112](#), [LAN-140](#), [LAN-170](#), [LAN-204](#), [LAN-232](#), [LAN-262](#), [LAN-296](#), [LAN-326](#), [LAN-360](#), [LAN-398](#), [LAN-427](#), [LAN-459](#)  
 Canister-See EVAP canister ..... [EC-608](#)  
 CHARGE - Wiring diagram ..... [SC-18](#)  
 Charging system ..... [SC-17](#)  
 Chassis and body maintenance ..... [MA-20](#)  
 Chassis and body maintenanceSchedule 1 ..... [MA-8](#)  
 Chassis and body maintenanceSchedule 2 ..... [MA-10](#)  
 CHIME - Wiring diagram ..... [DI-42](#)  
 Circuit breaker ..... [PG-68](#)  
 Closed loop control ..... [EC-27](#)  
 Closed loop control (Bank 1) ..... [EC-406](#)  
 Closed loop control (Bank 2) ..... [EC-406](#)  
 Coil spring (front) ..... [FSU-9](#)  
 Collision diagnosis ..... [SRS-58](#)  
 Combination lamp, front, removal and installation . [LT-31](#)  
 Combination lamp, rear, removal and installation .. [LT-118](#)  
 Combination meter ..... [DI-5](#)  
 Combination switch ..... [LT-92](#)  
 COMBSW - Wiring diagram ..... [LT-92](#)  
 COMM - Wiring diagram ..... [AV-105](#)  
 COMPAS - Wiring diagram ..... [DI-27](#)  
 Compass ..... [DI-26](#)  
 Component Location (auto A/C) ..... [MTC-32](#)  
 Compressor clutch removal and installation [MTC-115](#)  
 Compressor mounting ..... [MTC-114](#)  
 Compressor precaution ..... [MTC-9](#)  
 Compressor special service tool ..... [MTC-12](#)  
 Condenser ..... [MTC-119](#)  
 Connecting rod ..... [EM-92](#)  
 Connecting rod bearing clearance ..... [EM-92](#)  
 Connecting rod bushing clearance ..... [EM-92](#)  
 Console box - See Instrument panel ..... [IP-10](#)  
 CONSULT for VDC ..... [BRC-23](#), [BRC-66](#), [BRC-118](#)  
 CONSULT-4U for engine ..... [EC-103](#)  
 Control units (terminal arrangement) ..... [PG-72](#)

Control valve (A/T) ..... [AT-39](#)  
 Controller Area Network (CAN) . [WT-9](#), [BRC-10](#), [BRC-52](#), [BRC-100](#), [SE-16](#), [LAN-24](#), [LAN-50](#), [LAN-79](#), [LAN-112](#), [LAN-140](#), [LAN-170](#), [LAN-204](#), [LAN-232](#), [LAN-262](#), [LAN-296](#), [LAN-326](#), [LAN-360](#), [LAN-398](#), [LAN-427](#), [LAN-459](#)  
 Converter housing installation ..... [AT-271](#), [AT-274](#)  
 COOL/F - Wiring diagram ..... [EC-412](#)  
 Coolant mixture ratio ..... [MA-12](#)  
 Coolant replacement ..... [MA-13](#)  
 Cooling circuit (engine) ..... [CO-7](#)  
 Cooling fan ..... [CO-13](#)  
 Cooling fan control ..... [EC-409](#)  
 Cooling fan motor ..... [EC-418](#)  
 Cooling unit (A/C evaporator) ..... [MTC-99](#), [MTC-121](#)  
 Corrosion protection ..... [BL-172](#)  
 Crankcase ventilation system - See Positive crankcase ventilation ..... [EC-617](#)  
 Crankshaft ..... [EM-75](#)  
 Crankshaft position sensor (POS) ..... [EC-254](#)  
 Crash zone sensor ..... [SRS-53](#)  
 CVT shift lock system - Wiring diagram ..... [AT-245](#)  
 Cylinder block ..... [EM-74](#)  
 Cylinder block boring ..... [EM-95](#)

## D

D/LOCK - Wiring diagram ..... [BL-21](#), [BL-27](#)  
 Data link connector ..... [EC-105](#)  
 Daytime light system ..... [LT-32](#)  
 Daytime running light - See Daytime light system .. [LT-32](#)  
 Diagnosis sensor unit ..... [SRS-56](#)  
 Diagnostic trouble code (DTC) ..... [EC-53](#)  
 Diagnostic trouble code (DTC) for OBD system .. [EC-8](#)  
 Diagnostic trouble code (DTC) inspection priority chart [EC-76](#)  
 Differential gear oil replacement ..... [MA-25](#)  
 DIFLOC - Wiring diagram ..... [RFD-50](#)  
 Dimensions ..... [GI-50](#)  
 Direct clutch solenoid valve ..... [AT-159](#), [AT-162](#)  
 Display and amp.assembly ..... [MTC-47](#)  
 Display Control Unit ..... [AV-176](#)  
 Dome light - See Interior lamp ..... [LT-126](#)  
 Door glass ..... [GW-77](#), [GW-80](#)  
 Door lock ..... [BL-128](#)  
 Door mirror lamp ..... [LT-126](#)  
 Door trim ..... [EI-32](#)  
 Door, front ..... [BL-123](#), [GW-77](#)  
 Door, rear ..... [BL-123](#), [GW-80](#)  
 Drive belt ..... [EM-12](#)  
 Drive chain (Transfer) ..... [TF-88](#)  
 Driver air bag ..... [SRS-43](#)  
 DTC work support ..... [EC-112](#)  
 DTRL - Wiring diagram ..... [LT-36](#)  
 Duct and grilles ..... [MTC-108](#)  
 DVD Player ..... [AV-78](#)

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

IDX

# ALPHABETICAL INDEX

## E

ECM input/output signal ..... [EC-96](#)  
ECM power supply ..... [EC-127](#), [EC-360](#)  
ECM relay ..... [EC-127](#)  
ECM/PW - Wiring diagram ..... [EC-361](#)  
ECTS - Wiring diagram ..... [EC-166](#)  
Electric sunroof ..... [RF-10](#)  
Electric throttle control actuator ..... [EC-364](#), [EC-366](#)  
Electrical load signal circuit ..... [EC-592](#)  
Electronic ignition (EI) system ..... [EC-28](#)  
Engine control circuit diagram ..... [EC-94](#)  
Engine control component parts location ..... [EC-88](#)  
Engine control module (ECM) ..... [EC-350](#)  
Engine control system diagram and chart ..... [EC-23](#)  
Engine coolant ..... [CO-9](#)  
Engine coolant temperature sensor (ECTS) ... [EC-164](#),  
[EC-177](#)  
Engine fail-safe system ..... [EC-77](#)  
Engine oil ..... [LU-7](#)  
Engine oil filter replacement ..... [MA-17](#)  
Engine oil precautions ..... [GI-6](#)  
Engine oil replacement ..... [MA-17](#)  
Engine removal ..... [EM-70](#)  
Engine room cover ..... [EM-11](#)  
Engine serial number ..... [GI-49](#)  
ETC1 - Wiring diagram ..... [EC-367](#)  
ETC2 - Wiring diagram ..... [EC-374](#)  
ETC3 - Wiring diagram ..... [EC-378](#)  
EVAP canister ..... [EC-608](#)  
EVAP canister purge volume control solenoid valve ...  
[EC-284](#), [EC-495](#)  
EVAP canister vent control valve ..... [EC-291](#), [EC-503](#)  
EVAP control system (small leak) diagnosis .. [EC-275](#),  
[EC-315](#), [EC-323](#)  
EVAP control system pressure sensor .... [EC-298](#), [EC-301](#),  
[EC-307](#)  
EVAP control system purge flow monitoring diagnosis  
[EC-270](#)  
EVAP vapor lines inspection ..... [MA-19](#)  
Evaporative emission (EVAP) system ..... [EC-605](#)  
Evaporator ..... [MTC-121](#)  
Exhaust manifold ..... [EM-19](#)  
Exhaust system ..... [EX-3](#)  
Exhaust system inspection ..... [EX-3](#)  
Expansion valve ..... [MTC-122](#)

## F

F/FOG - Wiring diagram ..... [LT-66](#)  
F/PUMP - Wiring diagram ..... [EC-582](#)  
Final drive pre-inspection ..... [FFD-15](#)  
Final drive removal and installation . [FFD-12](#), [RFD-15](#),  
[RFD-84](#)  
Flow charts ..... [GI-27](#)  
Fluid temperature sensor (A/T) ..... [AT-133](#)  
Fluids ..... [MA-11](#)  
Fluorescent leak detector ..... [MTC-122](#)  
Fog lamp, front ..... [LT-64](#)

Foot lamp ..... [LT-127](#)  
Freeze frame data ..... [EC-54](#), [EC-106](#)  
Front brake solenoid valve ..... [AT-153](#), [AT-156](#)  
Front bumper ..... [EI-14](#)  
Front case (Transfer) ..... [TF-88](#)  
Front combination lamp removal and installation [LT-31](#)  
Front door ..... [BL-123](#), [BL-128](#), [GW-77](#)  
Front Door Trim ..... [EI-32](#)  
Front drive shaft (Transfer) ..... [TF-88](#), [TF-108](#)  
Front fog lamp ..... [LT-64](#)  
Front passenger air bag ..... [SRS-48](#)  
Front seat ..... [SE-92](#)  
Front seat belt ..... [SB-3](#)  
Front seat belt pre-tensioner ..... [SRS-3](#), [SRS-55](#)  
Front washer ..... [WW-3](#)  
Front wiper ..... [WW-3](#)  
FTTS - Wiring diagram ..... [EC-226](#), [EC-231](#)  
Fuel cut control (at no load high engine speed) [EC-30](#)  
Fuel filter replacement ..... [FL-5](#)  
Fuel gauge ..... [DI-5](#)  
Fuel injection system (Bank 1) ..... [EC-207](#), [EC-216](#)  
Fuel injection system (Bank 2) ..... [EC-207](#), [EC-216](#)  
Fuel injector and fuel tube ..... [EM-29](#)  
Fuel level sensor ..... [EC-333](#), [EC-335](#), [EC-337](#)  
Fuel line inspection ..... [FL-3](#)  
Fuel precautions ..... [GI-5](#)  
Fuel pressure check ..... [EC-46](#)  
Fuel pressure release ..... [EC-46](#)  
Fuel pump ..... [EC-581](#)  
Fuel pump and gauge ..... [FL-5](#)  
Fuel system ..... [FL-3](#)  
Fuel tank ..... [FL-10](#)  
Fuel tank temperature sensor ..... [EC-224](#), [EC-230](#)  
Fuel tank vacuum relief valve ..... [EC-608](#)  
FUEL B1 - Wiring diagram ..... [EC-209](#), [EC-218](#)  
FUEL B2 - Wiring diagram ..... [EC-210](#), [EC-219](#)  
Fuse ..... [PG-68](#), [PG-78](#)  
Fuse block ..... [PG-77](#)  
Fusible link ..... [PG-68](#), [PG-78](#)

## G

Garage jack and safety stand ..... [GI-40](#)  
Gauges ..... [DI-5](#)  
Generator ..... [SC-17](#)  
Generic scan tool (GST) ..... [EC-115](#)  
Glass ..... [GW-11](#), [GW-13](#), [GW-77](#), [GW-80](#)  
Glove box lamp ..... [LT-152](#)  
GPS antenna ..... [AV-80](#)  
Grease ..... [MA-11](#)  
Ground distribution ..... [PG-29](#)

## H

Handling precautions for plastics ..... [BL-200](#)  
Harness connector ..... [PG-69](#)  
Harness layout ..... [PG-38](#)  
Hazard warning lamp ..... [LT-75](#)  
Headlamp removal and installation ..... [LT-31](#)

# ALPHABETICAL INDEX

Heated oxygen sensor 2 (bank 1) .... [EC-185](#), [EC-195](#),  
[EC-382](#), [EC-394](#)  
Heated oxygen sensor 2 (bank 2) .... [EC-185](#), [EC-195](#),  
[EC-382](#), [EC-394](#)  
Heated oxygen sensor 2 heater (bank 1) ..... [EC-137](#)  
Heated oxygen sensor 2 heater (bank 2) ..... [EC-137](#)  
Heated seat ..... [SE-87](#)  
Heater and cooling unit (Heater core) . [MTC-99](#), [MTC-101](#)  
Heater unit (heater core) ..... [MTC-99](#), [MTC-101](#)  
Height (Dimensions) ..... [GI-50](#)  
HFC134a (R134a) system identification ..... [MTC-6](#)  
HFC134a (R134a) system precaution ..... [MTC-4](#)  
HFC134a (R134a) system service procedure [MTC-111](#)  
HFC134a (R134a) system service tools ..... [MTC-12](#)  
HFC134a system service equipment precaution [MTC-9](#)  
High & low reverse clutch solenoid valve . [AT-165](#), [AT-168](#)  
Homelink universal transceiver ..... [BL-155](#)  
Horn ..... [WW-33](#)  
HORN - Wiring diagram ..... [WW-33](#)  
How to erase DTC for OBD system ..... [EC-62](#)  
HSEAT - Wiring diagram ..... [SE-89](#)

## I

IATS - Wiring diagram ..... [EC-161](#)  
Identification plate ..... [GI-48](#)  
Idle air volume learning ..... [EC-44](#)  
Idle mixture ratio ..... [EC-33](#)  
Idle speed ..... [EC-33](#)  
Idle speed control (ISC) ..... [EC-341](#), [EC-343](#)  
Ignition coil ..... [EM-26](#), [EC-563](#)  
Ignition control system ..... [EC-563](#)  
Ignition key hole illumination ..... [LT-126](#)  
Ignition timing ..... [EC-33](#)  
IGNSYS - Wiring diagram ..... [EC-564](#)  
ILL - Wiring diagram ..... [LT-157](#)  
Illumination ..... [LT-151](#)  
Illumination control ..... [LT-166](#)  
INJECT - Wiring diagram ..... [EC-576](#)  
Injector ..... [EC-575](#)  
Input clutch solenoid valve ..... [AT-147](#), [AT-150](#)  
Instrument panel ..... [IP-10](#)  
Instrument panel speaker ..... [AV-67](#)  
Intake air temperature sensor ..... [EC-160](#), [EC-180](#)  
Intake door control linkage adjustment [MTC-59](#), [MTC-62](#)  
Intake door motor ..... [MTC-58](#), [MTC-104](#)  
Intake manifold ..... [EM-15](#)  
Intake sensor ..... [MTC-91](#), [MTC-95](#)  
Integrated homelink transmitter - See Homelink universal transceiver ..... [BL-155](#)  
Interior ..... [EI-36](#)  
Interior lamp ..... [LT-126](#)  
Interior lamp on-off control ..... [LT-127](#)  
Internal gear (Transfer) ..... [TF-88](#)  
IPDM (Intelligent power distribution module engine room) ..... [PG-16](#)

## J

Jacking points ..... [GI-40](#)  
Junction box (J/B) ..... [PG-77](#)

## K

Key illumination ..... [LT-127](#)  
KEYLES - Wiring diagram ..... [BL-59](#), [BL-64](#)  
Keyless entry system - See Multi-remote control system [BL-53](#)  
Knock sensor (KS) ..... [EC-249](#)  
KS - Wiring diagram ..... [EC-250](#)

## L

Leaf spring (rear) ..... [RSU-8](#)  
Length (Dimensions) ..... [GI-50](#)  
License lamp ..... [LT-104](#)  
Lifting points ..... [GI-41](#)  
Line pressure solenoid valve ..... [AT-126](#)  
Line pressure test (A/T) ..... [AT-62](#)  
Liquid gasket application [LU-2](#), [FFD-2](#), [RFD-3](#), [RFD-38](#)  
Location of electrical units ..... [PG-65](#)  
Low coast brake solenoid valve ..... [AT-171](#), [AT-174](#)  
Low tire pressure warning system ..... [WT-7](#)  
Low tire pressure warning system - trouble diagnoses [WT-10](#)  
Low tire pressure warning system - Wiring diagram ..... [WT-10](#)  
Lubricant (R134a) A/C ..... [MTC-20](#)  
Lubricants ..... [MA-11](#)  
Lubrication circuit (engine) ..... [LU-5](#)  
Lubrication oil A/C ..... [MTC-20](#)  
Lubrication-locks, hinges and hood latches ..... [MA-31](#)

## M

MAFS - Wiring diagram ..... [EC-148](#), [EC-155](#)  
Magnet clutch ..... [MTC-73](#), [MTC-115](#)  
MAIN - Wiring diagram ..... [EC-127](#)  
Mainshaft (Transfer) ..... [TF-88](#)  
Maintenance (engine)Schedule 1 ..... [MA-7](#)  
Maintenance (engine)Schedule 2 ..... [MA-9](#)  
Major overhaul (Final drive) [FFD-14](#), [RFD-16](#), [RFD-85](#)  
Major overhaul (Transfer) ..... [TF-88](#)  
Malfunction indicator lamp (MIL) ..... [EC-63](#)  
Map lamp ..... [LT-127](#)  
Mass air flow sensor (MAFS) ..... [EC-145](#), [EC-153](#)  
Meter ..... [DI-5](#)  
METER - Wiring diagram ..... [DI-10](#)  
MIL data link connectors circuit ..... [EC-603](#)  
MIL/DL - Wiring diagram ..... [EC-603](#)  
Misfire ..... [EC-242](#)  
Mode door control linkage adjustment ..... [MTC-51](#)  
Mode door motor ..... [MTC-50](#), [MTC-105](#)  
Model variation ..... [GI-46](#)  
Multiport fuel injection (MFI) system ..... [EC-26](#)  
Multiport fuel injection precautions ..... [GI-5](#)

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L



# ALPHABETICAL INDEX

Multi-remote control system ..... [BL-53](#)  
Multi-remote control system - See Remote keyless entry system ..... [BL-53](#)

## N

NATS - Wiring diagram ..... [BL-139](#)  
NAVI - Wiring diagram ..... [AV-97](#)  
NAVI Control Unit ..... [AV-175](#)  
Nissan torque demand (NTD) control system .... [EC-29](#)  
NVH troubleshooting (AX) ..... [FAX-4](#)  
NVH troubleshooting (EM) ..... [EM-9](#)  
NVH troubleshooting (Final drive) ..... [RFD-9](#), [RFD-43](#)  
NVH troubleshooting (Propeller shaft) ..... [PR-3](#)  
NVH troubleshooting (ST) ..... [PS-5](#)  
NVH troubleshooting (Transfer) ..... [TF-11](#)  
NVH troubleshooting (WT)NVH troubleshooting (WT) . [WT-3](#)  
NVIS (Nissan vehicle immobilizer system) ..... [BL-136](#)

## O

O2H2B1 - Wiring diagram ..... [EC-139](#)  
O2H2B2 - Wiring diagram ..... [EC-141](#)  
O2S2B1 - Wiring diagram .. [EC-187](#), [EC-198](#), [EC-385](#), [EC-397](#)  
O2S2B2 - Wiring diagram .. [EC-189](#), [EC-200](#), [EC-387](#), [EC-399](#)  
Oil cooler (engine) ..... [LU-10](#)  
Oil filter ..... [LU-9](#)  
Oil pan (engine) ..... [EM-22](#)  
Oil pressure (engine) ..... [LU-7](#)  
Oil pressure relief valve (engine) ..... [LU-5](#)  
Oil pump (engine) ..... [LU-12](#)  
Oil seal replacement (engine) ..... [EM-56](#)  
Oil seal replacement (front of final drive) ..... [FFD-8](#)  
Oil seal replacement (side of final drive) ..... [FFD-10](#)  
On board diagnostic system ..... [EC-49](#)  
ORVR (On-board Refueling Vapor Recovery) . [EC-612](#)  
Overheat ..... [EC-409](#)

## P

P/SCKT - Wiring diagram ..... [WW-31](#)  
Pantograph jack ..... [GI-40](#)  
Park/Neutral position switch ..... [EC-526](#)  
Park/neutral position switch (A/T) ..... [AT-112](#)  
Parking brake control ..... [PB-4](#)  
PCV (positive crankcase ventilation) ..... [EC-617](#)  
Personal lamp ..... [LT-127](#)  
PGC/V - Wiring diagram ..... [EC-286](#), [EC-497](#)  
PHASE - Wiring diagram ..... [EC-260](#)  
Piston pin inspection ..... [EM-90](#)  
Piston ring inspection ..... [EM-91](#)  
Piston to bore clearance ..... [EM-95](#)  
Planetary carrier (Transfer) ..... [TF-88](#), [TF-104](#)  
PNP/SW - Wiring diagram ..... [EC-528](#)  
POS - Wiring diagram ..... [EC-255](#)  
POWER - Wiring diagram ..... [PG-6](#)

Power door lock ..... [BL-16](#)  
Power seat ..... [SE-83](#)  
Power steering fluid level ..... [MA-30](#)  
Power steering gear ..... [PS-16](#)  
Power steering oil pump ..... [PS-27](#)  
Power steering pressure (PSP) sensor ..... [EC-345](#)  
Power steering system bleeding ..... [PS-6](#)  
Power supply routing ..... [PG-4](#)  
Power window ..... [GW-15](#)  
PRE/SE - Wiring diagram ..... [EC-303](#), [EC-309](#)  
Precautions (General) ..... [GI-3](#)  
Precautions in repairing high strength steel ..... [BL-203](#)  
Pressure switch 1 ..... [AT-156](#), [AT-182](#)  
Pressure switch 2 ..... [AT-174](#)  
Pressure switch 3 ..... [AT-150](#), [AT-185](#)  
Pressure switch 5 ..... [AT-162](#), [AT-188](#)  
Pressure switch 6 ..... [AT-168](#), [AT-191](#)  
Pressure test (A/T) ..... [AT-62](#)  
Propeller shaft ..... [PR-4](#), [PR-8](#)  
Propeller shaft inspection ..... [MA-25](#)  
Propeller shaft on vehicle service ..... [PR-8](#)  
Propeller shaft vibration ..... [PR-4](#), [PR-8](#)  
PS/SEN - Wiring diagram ..... [EC-346](#)

## R

Radiator ..... [CO-10](#)  
Rear Audio Remote Control Unit ..... [AV-68](#)  
Rear bumper ..... [EI-18](#)  
Rear case (Transfer) ..... [TF-88](#)  
Rear combination lamp removal and installation ... [LT-118](#)  
Rear door ..... [BL-123](#), [GW-80](#)  
Rear seat ..... [SE-101](#)  
Rear seat belt ..... [SB-8](#)  
Rear window ..... [GW-13](#)  
Refrigerant connection precaution ..... [MTC-6](#)  
Refrigerant discharging evacuating charging [MTC-111](#)  
Refrigerant general precaution ..... [MTC-5](#)  
Refrigerant lines ..... [MTC-111](#), [MTC-118](#), [MTC-119](#)  
Refrigerant pressure sensor .. [EC-587](#), [MTC-78](#), [MTC-119](#)  
Remote keyless entry system ..... [BL-53](#)  
Removal and installation (A/T) ..... [AT-269](#), [AT-272](#)  
Removal and installation (Transfer) ..... [TF-87](#)  
Revolution sensor (A/T) ..... [AT-115](#)  
Road wheel size ..... [GI-50](#)  
Rocker cover ..... [EM-33](#)  
Room lamp ..... [LT-126](#)  
Room lamp - See Interior lamp ..... [LT-126](#)  
ROOM/L - Wiring diagram ..... [LT-134](#)  
RP/SEN - Wiring diagram ..... [EC-588](#)

## S

SEAT - Wiring diagram ..... [SE-83](#), [SE-84](#)  
Seat belt inspection ..... [SB-10](#), [MA-32](#)  
Seat belt pre-tensioner ..... [SRS-55](#)  
Seat belt, front ..... [SB-3](#)

# ALPHABETICAL INDEX

Seat belt, rear .....	<a href="#">SB-8</a>	TCS component parts and connector location <a href="#">BRC-14</a> , <a href="#">BRC-56</a> , <a href="#">BRC-104</a>	
Seat, front .....	<a href="#">SE-92</a>	TCS wheel sensors .....	<a href="#">BRC-14</a> , <a href="#">BRC-56</a> , <a href="#">BRC-104</a>
Seat, rear .....	<a href="#">SE-101</a>	Theft warning system - See Vehicle security (Theft warn- ing) system .....	<a href="#">BL-91</a>
Self-diagnosis (Transfer) .....	<a href="#">TF-33</a>	Thermometer .....	<a href="#">DI-26</a>
SEN/PW - Wiring diagram .....	<a href="#">EC-424</a>	Three way catalyst .....	<a href="#">EM-19</a>
SHIFT - Wiring diagram .....	<a href="#">AT-245</a>	Three way catalyst function (Bank 1) .....	<a href="#">EC-266</a>
Shift control (Transfer) .....	<a href="#">TF-88</a> , <a href="#">TF-110</a>	Three way catalyst function (Bank 2) .....	<a href="#">EC-266</a>
Shift lock system .....	<a href="#">AT-243</a>	Three way catalyst precautions .....	<a href="#">GI-5</a>
Shock absorber (front) .....	<a href="#">FSU-9</a>	Throttle control motor .....	<a href="#">EC-377</a>
Shock absorber (rear) .....	<a href="#">RSU-7</a>	Throttle control motor relay .....	<a href="#">EC-372</a>
Side air bag (satellite) sensor .....	<a href="#">SRS-54</a>	Throttle position sensor (TPS) ...	<a href="#">EC-170</a> , <a href="#">EC-235</a> , <a href="#">EC-419</a> , <a href="#">EC-421</a> , <a href="#">EC-549</a>
Side curtain air bag .....	<a href="#">SRS-51</a>	Throttle valve closed position learning .....	<a href="#">EC-44</a>
Side trim .....	<a href="#">EI-36</a>	Tie-rod .....	<a href="#">PS-16</a>
SMJ (super multiple junction) .....	<a href="#">PG-75</a>	Timing chain .....	<a href="#">EM-35</a>
SONAR - Wiring diagram .....	<a href="#">DI-59</a>	Tire rotation .....	<a href="#">MA-28</a>
Spare tire size .....	<a href="#">GI-50</a>	Tire size .....	<a href="#">GI-50</a>
Spark plug .....	<a href="#">EM-27</a>	Torque converter installation <a href="#">AT-270</a> , <a href="#">AT-271</a> , <a href="#">AT-273</a> , <a href="#">AT-274</a>	
Spark plug replacement .....	<a href="#">MA-18</a>	Torque converter clutch solenoid valve ...	<a href="#">AT-120</a> , <a href="#">AT-123</a>
Specification value .....	<a href="#">EC-122</a>	Tow truck towing .....	<a href="#">GI-42</a>
Speedometer .....	<a href="#">DI-5</a>	Towing point .....	<a href="#">GI-43</a>
Spiral cable .....	<a href="#">SRS-45</a>	TPS1 - Wiring diagram .....	<a href="#">EC-237</a>
SROOF - Wiring diagram .....	<a href="#">RF-13</a>	TPS2 - Wiring diagram .....	<a href="#">EC-172</a>
SRS - See Supplemental Restraint System .....	<a href="#">SRS-5</a>	TPS3 - Wiring diagram .....	<a href="#">EC-551</a>
SRS - Wiring diagram .....	<a href="#">SRS-12</a>	Traction control system - Wiring diagram .....	<a href="#">BRC-15</a> , <a href="#">BRC-58</a> , <a href="#">BRC-106</a>
SRS Trouble diagnoses .....	<a href="#">SRS-8</a>	Transfer case .....	<a href="#">TF-88</a>
Stabilizer bar (front) .....	<a href="#">FSU-11</a>	Transfer control device .....	<a href="#">TF-60</a>
Stall test (A/T) .....	<a href="#">AT-61</a>	Transfer control unit inspection table .....	<a href="#">TF-27</a>
Standardized relay .....	<a href="#">PG-73</a>	Transfer oil replacement .....	<a href="#">MA-24</a>
START - Wiring diagram .....	<a href="#">SC-11</a>	Transfer serial number .....	<a href="#">GI-49</a>
Starting system .....	<a href="#">SC-10</a>	Transmission serial number .....	<a href="#">GI-49</a>
Steering gear, linkage and transfer gear inspection .... <a href="#">MA-29</a>		TRANSMT - Wiring diagram .....	<a href="#">BL-155</a>
Steering linkage .....	<a href="#">PS-16</a>	Tread-FR&RR (Dimensions) .....	<a href="#">GI-50</a>
Steering wheel and column .....	<a href="#">PS-7</a>	Trim .....	<a href="#">EI-36</a>
Step lamp .....	<a href="#">LT-127</a>	Trouble diagnoses .....	<a href="#">GI-9</a>
Stop lamp .....	<a href="#">LT-98</a>	Turbine revolution sensor .....	<a href="#">AT-136</a>
Stop lamp switch .....	<a href="#">EC-531</a> , <a href="#">EC-593</a>	TURN - Wiring diagram .....	<a href="#">LT-78</a>
STOP/L - Wiring diagram .....	<a href="#">LT-99</a>	Turn signal lamp .....	<a href="#">LT-75</a>
Strut (front) .....	<a href="#">FSU-9</a>	Two trip detection logic .....	<a href="#">EC-49</a>
Sun gear (Transfer) .....	<a href="#">TF-88</a>	Two-pole lift .....	<a href="#">GI-41</a>
Sun roof, electric .....	<a href="#">RF-10</a>		
Sunroof .....	<a href="#">RF-23</a>		
Supplemental Restraint System .....	<a href="#">SRS-5</a>		
Supplemental restraint system - Wiring diagram .	<a href="#">SRS-12</a>		
Symbols and abbreviations .....	<a href="#">GI-9</a> , <a href="#">GI-22</a>		
Symptom matrix chart .....	<a href="#">EC-84</a>		
System readiness test (SRT) code .....	<a href="#">EC-55</a>		

## T

Tachometer .....	<a href="#">DI-5</a>
Tail lamp .....	<a href="#">LT-104</a>
TAIL/L - Wiring diagram .....	<a href="#">LT-106</a>
TCM circuit diagram .....	<a href="#">AT-53</a>
TCM inspection table .....	<a href="#">AT-93</a>
TCS - Wiring diagram .....	<a href="#">BRC-15</a> , <a href="#">BRC-16</a> , <a href="#">BRC-58</a> , <a href="#">BRC-106</a>
TCS (traction control system) <a href="#">BRC-8</a> , <a href="#">BRC-49</a> , <a href="#">BRC-97</a>	

## V

Vacuum hose (brake system) .....	<a href="#">BR-22</a>
Vacuum hose drawing (Engine control) .....	<a href="#">EC-24</a>
Valve clearance .....	<a href="#">EM-52</a>
Valve guide .....	<a href="#">EM-65</a>
Vanity mirror lamp .....	<a href="#">LT-126</a>
VDC (vehicle dynamics control) <a href="#">BRC-8</a> , <a href="#">BRC-49</a> , <a href="#">BRC-97</a>	
VDC -Wiring diagram .....	<a href="#">BRC-16</a> , <a href="#">BRC-58</a> , <a href="#">BRC-106</a>
Vehicle identification number .....	<a href="#">GI-48</a>
Vehicle recovery (freeing a stuck vehicle) .....	<a href="#">GI-43</a>
Vehicle security (theft warning) system .....	<a href="#">BL-91</a>

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
IDX

# ALPHABETICAL INDEX

---

Vehicle speed sensor (VSS) .....	<a href="#">EC-339</a>
VEHSEC - Wiring diagram .....	<a href="#">BL-95</a> , <a href="#">BL-103</a>
VENT/V - Wiring diagram .....	<a href="#">EC-293</a> , <a href="#">EC-505</a>
Video Monitor .....	<a href="#">AV-78</a>
Viscosity number (SAE) .....	<a href="#">MA-12</a>

## W

---

Wait detection switch .....	<a href="#">TF-49</a>
WARN - Wiring diagram .....	<a href="#">DI-31</a>
Warning chime .....	<a href="#">DI-39</a>
Warning lamps .....	<a href="#">DI-30</a>
Washer, front .....	<a href="#">WW-3</a>
Water pump .....	<a href="#">CO-15</a>
Water temperature gauge .....	<a href="#">DI-5</a>
Wheel alignment (front) .....	<a href="#">FSU-6</a>
Wheel balance .....	<a href="#">MA-26</a>
Wheel bearing (front) .....	<a href="#">FAX-5</a>
Wheel size .....	<a href="#">GI-50</a>
Wheelbase (Dimensions) .....	<a href="#">GI-50</a>
Width (Dimensions) .....	<a href="#">GI-50</a>
WINDOW - Wiring diagram .....	<a href="#">GW-21</a> , <a href="#">GW-30</a>
Window, door .....	<a href="#">GW-77</a> , <a href="#">GW-80</a>
Window, rear .....	<a href="#">GW-13</a>
Windshield .....	<a href="#">GW-11</a>
WIPER - Wiring diagram .....	<a href="#">WW-7</a>
Wiper, front .....	<a href="#">WW-3</a>
Wiring Diagram (Cell code) list .....	<a href="#">PG-63</a>
Wiring diagrams .....	<a href="#">GI-14</a>
WT-T/WARN - Wiring diagram .....	<a href="#">WT-10</a>