

SECTION **IDX**  
ALPHABETICAL INDEX

A

B

C

D

E

F

G

H

I

J

K

L

IDX

# ALPHABETICAL INDEX

## Numerics

|                              |                       |
|------------------------------|-----------------------|
| 4LO switch .....             | <a href="#">TF-42</a> |
| 4WD shift switch .....       | <a href="#">TF-45</a> |
| 4WD system description ..... | <a href="#">TF-15</a> |
| 4WD system diagram .....     | <a href="#">TF-18</a> |

## A

|   |  |
|---|--|
| A/C air flow .....                                  | <a href="#">MTC-25</a>   |
| A/C compressor clutch removal and installation .    | <a href="#">MTC-120</a>  |
| A/C compressor mounting .....                       | <a href="#">MTC-119</a>  |
| A/C compressor precaution .....                     | <a href="#">MTC-9</a>  |
| A/C compressor special service tool .....           | <a href="#">MTC-12</a>   |
| A/C control operation (manual A/C) .....            | <a href="#">MTC-24</a>   |
| A/C diagnostic work flow (manual A/C) .....         | <a href="#">MTC-93</a>   |
| A/C evaporator .....                                | <a href="#">MTC-126</a>  |
| A/C HFC134a (R134a) system identification ....      | <a href="#">MTC-6</a>  |
| A/C HFC134a (R134a) system precaution .....         | <a href="#">MTC-4</a>  |
| A/C HFC134a (R134a) system service procedure .....  | <a href="#">MTC-116</a>  |
| A/C HFC134a (R134a) system service tools ..         | <a href="#">MTC-12</a>   |
| A/C HFC134a system service equipment precaution ... | <a href="#">MTC-9</a>  |
| A/C lubricant (R134a) .....                         | <a href="#">MTC-20</a>   |
| A/C lubrication oil .....                           | <a href="#">MTC-20</a>   |
| A/C operational check .....                         | <a href="#">MTC-47</a>   |
| A/C self-diagnoses (auto A/C) .....                 | <a href="#">MTC-45</a>   |
| A/C service data specification .....                | <a href="#">MTC-131</a>  |
| A/C trouble diagnoses (auto A/C) .....              | <a href="#">MTC-28</a>   |
| A/C, A - Wiring diagram .....                       | <a href="#">MTC-37</a>   |
| A/T fluid checking .....                            | <a href="#">AT-13</a> , <a href="#">AT-53</a> , <a href="#">MA-22</a>  |
| A/T fluid replacement .....                         | <a href="#">AT-13</a> , <a href="#">MA-24</a>  |
| A/T fluid temperature sensor .....                  | <a href="#">AT-128</a>   |
| A/T IND - Wiring diagram .....                      | <a href="#">DI-40</a>  |
| A/T indicator .....                                 | <a href="#">DI-40</a>  |
| A/T self-diagnoses .....                            | <a href="#">AT-88</a>  |
| A/T shift lock system .....                         | <a href="#">AT-239</a>   |
| A/T trouble diagnoses .....                         | <a href="#">AT-44</a>  |
| A/T Wiring diagram AT - CAN .....                   | <a href="#">AT-99</a>  |
| A/T Wiring diagram AT - FTS .....                   | <a href="#">AT-129</a>   |
| A/T Wiring diagram AT - MAIN .....                  | <a href="#">AT-174</a>   |
| A/T Wiring diagram AT - MMSW .....                  | <a href="#">AT-163</a>   |
| A/T Wiring diagram AT - NONDTC .....                | <a href="#">AT-183</a>   |
| A/T Wiring diagram AT - PNP/SW .....                | <a href="#">AT-107</a>   |
| A/T Wiring diagram AT - STSIG .....                 | <a href="#">AT-102</a>   |
| A/T Wiring diagram AT - VSS A/T .....               | <a href="#">AT-112</a>   |
| ABS - Wiring diagram .....                          | <a href="#">BRC-16</a> , <a href="#">BRC-55</a> , <a href="#">BRC-102</a>  |
| ABS (anti-lock brake system) .....                  | <a href="#">BRC-8</a> , <a href="#">BRC-46</a> , <a href="#">BRC-93</a>  |
| Accelerator control system .....                    | <a href="#">ACC-2</a>  |
| Accelerator pedal position (APP) sensor .           | <a href="#">EC-580</a> , <a href="#">EC-586</a> , <a href="#">EC-600</a>   |
| Accelerator pedal released position learning .....  | <a href="#">EC-90</a>  |
| AF1B1-Wiring diagram .....                          | <a href="#">EC-469</a> , <a href="#">EC-478</a> , <a href="#">EC-487</a> , <a href="#">EC-497</a> , <a href="#">EC-508</a> , <a href="#">EC-518</a> , <a href="#">EC-530</a> |
| AF1B2-Wiring diagram .....                          | <a href="#">EC-471</a> , <a href="#">EC-480</a> , <a href="#">EC-489</a> , <a href="#">EC-499</a> , <a href="#">EC-510</a> , <a href="#">EC-520</a> , <a href="#">EC-532</a> |
| AF1HB1-Wiring diagram .....                         | <a href="#">EC-387</a>   |

|   |  |
|---|--|
| AF1HB2-Wiring diagram .....                     | <a href="#">EC-389</a>   |
| Aiming adjustment .....                         | <a href="#">LT-29</a> , <a href="#">LT-74</a>  |
| Air bag .....                                   | <a href="#">SRS-3</a>  |
| Air cleaner and air duct .....                  | <a href="#">EM-14</a>  |
| Air cleaner filter replacement .....            | <a href="#">MA-16</a>  |
| Air conditioner cut control .....               | <a href="#">EC-28</a>  |
| Air flow meter - See Mass air flow sensor ..... | <a href="#">EC-175</a> , <a href="#">EC-184</a>  |
| Air fuel ratio sensor 1 ..                      | <a href="#">EC-467</a> , <a href="#">EC-476</a> , <a href="#">EC-485</a> , <a href="#">EC-495</a> , <a href="#">EC-505</a> , <a href="#">EC-515</a> , <a href="#">EC-527</a> |
| Air fuel ratio sensor 1 heater .....            | <a href="#">EC-386</a>   |
| Air mix. door motor .....                       | <a href="#">MTC-57</a>   |
| Angular tightening application .....            | <a href="#">EM-3</a>   |
| APPS1 - Wiring diagram .....                    | <a href="#">EC-582</a>   |
| APPS2 - Wiring diagram .....                    | <a href="#">EC-588</a>   |
| APPS3 - Wiring diagram .....                    | <a href="#">EC-602</a>   |
| ASC/BS - Wiring diagram .....                   | <a href="#">EC-562</a>   |
| ASC/SW - Wiring diagram .....                   | <a href="#">EC-555</a>   |
| ASCSOF - Wiring diagram .....                   | <a href="#">EC-646</a>   |
| ASCD .....                                      | <a href="#">EC-29</a>  |
| ASCD (automatic speed control device) .....     | <a href="#">ACS-2</a>  |
| ASCD brake switch .....                         | <a href="#">EC-560</a> , <a href="#">EC-645</a>  |
| ASCD indicator lamp .....                       | <a href="#">EC-652</a>   |
| ASCD steering switch .....                      | <a href="#">EC-553</a>   |
| ASCIND - Wiring diagram .....                   | <a href="#">EC-653</a>   |
| ATP switch .....                                | <a href="#">TF-64</a>  |
| AUDIO - Wiring diagram .....                    | <a href="#">AV-14</a>  |
| AUT/DP - Wiring diagram .....                   | <a href="#">SE-20</a>  |
| Auto air conditioner - Wiring diagram .....     | <a href="#">MTC-37</a>   |
| Auto anti-dazzling inside mirror .....          | <a href="#">GW-93</a>  |
| Autolamp .....                                  | <a href="#">LT-46</a>  |
| Automatic amplifier .....                       | <a href="#">MTC-49</a>   |
| Automatic drive positioner .....                | <a href="#">SE-11</a>  |
| Automatic transmission number .....             | <a href="#">GI-49</a>  |
| AV communication line .....                     | <a href="#">AV-104</a>   |

## B

|   |  |
|---|--|
| Back door trim .....                          | <a href="#">EI-32</a>  |
| Back sonar .....                              | <a href="#">DI-58</a>  |
| BACK/L - Wiring diagram .....                 | <a href="#">LT-103</a>   |
| Back-up lamp .....                            | <a href="#">LT-103</a>   |
| Ball joint (front) .....                      | <a href="#">FSU-15</a>   |
| Basic inspection .....                        | <a href="#">EC-71</a>  |
| Battery .....                                 | <a href="#">SC-4</a>   |
| Battery/Starting/Charging System Tester ..... | <a href="#">SC-6</a> , <a href="#">SC-12</a> , <a href="#">SC-19</a> |
| BCM (Body control module) .....               | <a href="#">BCS-3</a>  |
| Block heater .....                            | <a href="#">EM-76</a>  |
| Blower motor .....                            | <a href="#">MTC-71</a> , <a href="#">MTC-101</a>                     |
| Body alignment .....                          | <a href="#">BL-184</a>   |
| Body component parts .....                    | <a href="#">BL-166</a>   |
| Body construction .....                       | <a href="#">BL-182</a>   |
| Body exterior paint color .....               | <a href="#">BL-165</a>   |
| Body mounting .....                           | <a href="#">BL-161</a> , <a href="#">BL-162</a>                      |
| Body repair .....                             | <a href="#">BL-165</a>   |
| Body sealing .....                            | <a href="#">BL-178</a>   |
| Brake booster .....                           | <a href="#">BR-18</a>  |
| Brake fluid level .....                       | <a href="#">MA-28</a>  |

# ALPHABETICAL INDEX

|  |  |   |   |     |
|--|--|---|---|-----|
| Brake hydraulic line .....                           | <a href="#">BR-12</a>  | Console box - See Instrument panel .....                                | <a href="#">IP-10</a>   |     |
| Brake inspection .....                               | <a href="#">MA-28</a>  | CONSULT for VDC .....   | <a href="#">BRC-23</a> , <a href="#">BRC-63</a> , <a href="#">BRC-114</a>   | A   |
| Brake lines and cables inspection .....              | <a href="#">MA-28</a>  | CONSULT general information .....                                       | <a href="#">GI-37</a>   |     |
| Brake master cylinder .....                          | <a href="#">BR-15</a>  | CONSULT-II for engine .....   | <a href="#">EC-127</a>  | B   |
| Brake switch .....                                   | <a href="#">EC-560</a> , <a href="#">EC-575</a> , <a href="#">EC-645</a>   | Control units (terminal arrangement) .....                              | <a href="#">PG-73</a>   |     |
| BRK/SW - Wiring diagram .....                        | <a href="#">EC-576</a>   | Control valve (A/T) .....   | <a href="#">AT-38</a>   | B   |
| Bulb specifications .....                            | <a href="#">LT-168</a>   | Controller Area Network (CAN) .....                                     | <a href="#">BRC-10</a> , <a href="#">BRC-49</a> ,<br><a href="#">BRC-96</a> , <a href="#">SE-17</a> , <a href="#">LAN-24</a> , <a href="#">LAN-52</a> , <a href="#">LAN-80</a> , <a href="#">LAN-110</a> ,<br><a href="#">LAN-143</a> , <a href="#">LAN-172</a> , <a href="#">LAN-206</a> , <a href="#">LAN-235</a> , <a href="#">LAN-267</a> , <a href="#">LAN-301</a> , <a href="#">LAN-333</a> , <a href="#">LAN-369</a> , <a href="#">LAN-408</a> | C   |
| Bumper, front .....                                  | <a href="#">EI-14</a>  | Converter housing installation .....                                    | <a href="#">AT-267</a> , <a href="#">AT-270</a>   |     |
| Bumper, rear .....                                   | <a href="#">EI-18</a>  | COOL/F - Wiring diagram .....   | <a href="#">EC-443</a>  | D   |
| <b>C</b>   |  |   |   |     |
| Camshaft .....                                       | <a href="#">EM-44</a>  | Coolant mixture ratio .....   | <a href="#">MA-12</a>   | D   |
| Camshaft inspection .....                            | <a href="#">EM-47</a>  | Coolant replacement .....   | <a href="#">MA-13</a>   |     |
| Camshaft position sensor (PHASE) .....               | <a href="#">EC-292</a>   | Cooling circuit (engine) .....  | <a href="#">CO-8</a>  | E   |
| CAN - Wiring diagram .....                           | <a href="#">EC-165</a> , <a href="#">LAN-26</a> , <a href="#">LAN-54</a> , <a href="#">LAN-82</a> , <a href="#">LAN-112</a> , <a href="#">LAN-145</a> , <a href="#">LAN-174</a> , <a href="#">LAN-208</a> , <a href="#">LAN-237</a> ,<br><a href="#">LAN-269</a> , <a href="#">LAN-303</a> , <a href="#">LAN-335</a> , <a href="#">LAN-371</a> , <a href="#">LAN-410</a>   | Cooling fan .....   | <a href="#">CO-15</a>   |     |
| CAN (Controller Area Network) .....                  | <a href="#">BRC-10</a> , <a href="#">BRC-49</a> ,<br><a href="#">BRC-96</a> , <a href="#">SE-17</a> , <a href="#">LAN-24</a> , <a href="#">LAN-52</a> , <a href="#">LAN-80</a> , <a href="#">LAN-110</a> ,<br><a href="#">LAN-143</a> , <a href="#">LAN-172</a> , <a href="#">LAN-206</a> , <a href="#">LAN-235</a> , <a href="#">LAN-267</a> , <a href="#">LAN-301</a> , <a href="#">LAN-333</a> , <a href="#">LAN-369</a> , <a href="#">LAN-408</a>  | Cooling fan control .....   | <a href="#">EC-440</a>  |     |
| CAN communication ...                                | <a href="#">EC-31</a> , <a href="#">EC-164</a> , <a href="#">AT-98</a> , <a href="#">TF-19</a> ,<br><a href="#">TF-64</a> , <a href="#">RFD-73</a> , <a href="#">BRC-10</a> , <a href="#">BRC-49</a> , <a href="#">BRC-96</a> , <a href="#">SE-17</a> ,<br><a href="#">LAN-24</a> , <a href="#">LAN-52</a> , <a href="#">LAN-80</a> , <a href="#">LAN-110</a> , <a href="#">LAN-143</a> , <a href="#">LAN-172</a> , <a href="#">LAN-206</a> , <a href="#">LAN-235</a> , <a href="#">LAN-267</a> , <a href="#">LAN-301</a> , <a href="#">LAN-333</a> ,<br><a href="#">LAN-369</a> , <a href="#">LAN-408</a> | Cooling fan motor .....   | <a href="#">EC-449</a>  | F   |
| Canister-See EVAP canister .....                     | <a href="#">EC-35</a>  | Cooling unit (A/C evaporator) .....                                     | <a href="#">MTC-104</a> , <a href="#">MTC-126</a>   |     |
| CHARGE - Wiring diagram .....                        | <a href="#">SC-18</a>  | Corrosion protection .....  | <a href="#">BL-175</a>  | G   |
| Charging system .....                                | <a href="#">SC-17</a>  | Crankcase ventilation system - See Positive crankcase ventilation ..... | <a href="#">EC-45</a>   |     |
| Chassis and body maintenance .....                   | <a href="#">MA-21</a>  | Crankshaft .....  | <a href="#">EM-77</a>   | G   |
| Chassis and body maintenanceSchedule 1 .....         | <a href="#">MA-8</a>   | Crankshaft position sensor (POS) .....                                  | <a href="#">EC-285</a>  |     |
| Chassis and body maintenanceSchedule 2 .....         | <a href="#">MA-10</a>  | Crash zone sensor .....   | <a href="#">SRS-53</a>  | H   |
| CHIME - Wiring diagram .....                         | <a href="#">DI-44</a>  | Cylinder block .....  | <a href="#">EM-76</a>   |     |
| Circuit breaker .....                                | <a href="#">PG-68</a>  | Cylinder block boring .....   | <a href="#">EM-97</a>   | I   |
| Closed loop control .....                            | <a href="#">EC-25</a>  | <b>D</b>  |   |     |
| Closed loop control (Bank 1) .....                   | <a href="#">EC-437</a>   | D/LOCK - Wiring diagram .....   | <a href="#">BL-20</a>   |     |
| Closed loop control (Bank 2) .....                   | <a href="#">EC-437</a>   | Data link connector for Consult .....                                   | <a href="#">EC-129</a> , <a href="#">EC-141</a>   | J   |
| Coil spring (front) .....                            | <a href="#">FSU-10</a>   | Daytime light system .....  | <a href="#">LT-32</a>   |     |
| Collision diagnosis .....                            | <a href="#">SRS-58</a>   | Daytime running light - See Daytime light system ..                     | <a href="#">LT-32</a>   | K   |
| Combination lamp, front, removal and installation .. | <a href="#">LT-31</a>  | DEF - Wiring diagram .....  | <a href="#">GW-98</a>   |     |
| Combination lamp, rear, removal and installation ..  | <a href="#">LT-119</a>   | Diagnosis sensor unit .....   | <a href="#">SRS-56</a>  | L   |
| Combination meter .....                              | <a href="#">DI-5</a>   | Diagnostic trouble code (DTC) for OBD system ..                         | <a href="#">EC-8</a> ,<br><a href="#">EC-52</a>   |     |
| Combination switch .....                             | <a href="#">LT-93</a>  | Diagnostic trouble code (DTC) inspection priority chart ..              | <a href="#">EC-102</a>  |     |
| COMBSW - Wiring diagram .....                        | <a href="#">LT-93</a>  | Differential gear oil replacement .....                                 | <a href="#">RFD-11</a> , <a href="#">MA-26</a>  | IDX |
| COMM - Wiring diagram .....                          | <a href="#">AV-104</a>   | DIFLOC - Wiring diagram .....   | <a href="#">RFD-50</a>  |     |
| COMPAS - Wiring diagram .....                        | <a href="#">DI-27</a>  | Dimensions .....  | <a href="#">GI-50</a>   |     |
| Compass .....  | <a href="#">DI-26</a>  | Direct clutch solenoid valve .....                                      | <a href="#">AT-150</a> , <a href="#">AT-152</a>   |     |
| Component Location (auto A/C) .....                  | <a href="#">MTC-34</a>   | Display and amp.assembly .....  | <a href="#">MTC-49</a>  |     |
| Compressor clutch removal and installation .....     | <a href="#">MTC-120</a>  | Display Control Unit .....  | <a href="#">AV-175</a>  |     |
| Compressor mounting .....                            | <a href="#">MTC-119</a>  | Dome light - See Interior lamp .....                                    | <a href="#">LT-127</a>  |     |
| Compressor precaution .....                          | <a href="#">MTC-9</a>  | Door glass .....  | <a href="#">GW-85</a> , <a href="#">GW-88</a>   |     |
| Compressor special service tool .....                | <a href="#">MTC-12</a>   | Door lock .....   | <a href="#">BL-130</a>  |     |
| Condenser .....                                      | <a href="#">MTC-124</a>  | Door mirror lamp .....  | <a href="#">LT-127</a>  |     |
| Connecting rod .....                                 | <a href="#">EM-94</a>  | Door trim .....   | <a href="#">EI-32</a>   |     |
| Connecting rod bearing clearance .....               | <a href="#">EM-94</a>  | Door, front .....   | <a href="#">BL-126</a> , <a href="#">GW-85</a>  |     |
| Connecting rod bushing clearance .....               | <a href="#">EM-94</a>  | Door, rear .....  | <a href="#">BL-126</a> , <a href="#">GW-88</a>  |     |
|  |  | Drive belt .....  | <a href="#">EM-12</a>   |     |
|  |  | Drive chain (Transfer) .....  | <a href="#">TF-88</a>   |     |
|  |  | Driver air bag .....  | <a href="#">SRS-43</a>  |     |
|  |  | DTC work support .....  | <a href="#">EC-137</a>  |     |
|  |  | DTRL - Wiring diagram .....   | <a href="#">LT-36</a>   |     |

# ALPHABETICAL INDEX

Duct and grilles ..... [MTC-113](#)  
DVD Player ..... [AV-77](#)

## E

ECM input/output signal ..... [EC-118](#), [EC-142](#)  
ECM power supply ..... [EC-158](#), [EC-393](#)  
ECM relay ..... [EC-158](#)  
ECM/PW - Wiring diagram ..... [EC-394](#)  
ECTS - Wiring diagram ..... [EC-198](#)  
Electric sunroof ..... [RF-10](#)  
Electric throttle control actuator ..... [EC-397](#), [EC-399](#)  
Electrical load signal circuit ..... [EC-644](#)  
Electronic ignition (EI) system ..... [EC-26](#)  
Engine control circuit diagram ..... [EC-116](#)  
Engine control component parts location ..... [EC-109](#)  
Engine control module (ECM) ..... [EC-383](#)  
Engine control system diagram ..... [EC-23](#)  
Engine coolant ..... [CO-10](#)  
Engine coolant temperature sensor (ECTS) ... [EC-196](#),  
[EC-209](#)  
Engine fail-safe system ..... [EC-104](#)  
Engine oil ..... [LU-7](#)  
Engine oil filter replacement ..... [MA-17](#)  
Engine oil precautions ..... [GI-7](#)  
Engine oil replacement ..... [MA-17](#)  
Engine removal ..... [EM-72](#)  
Engine room cover ..... [EM-11](#)  
Engine serial number ..... [GI-49](#)  
ETC1 - Wiring diagram ..... [EC-400](#)  
ETC2 - Wiring diagram ..... [EC-407](#)  
ETC3 - Wiring diagram ..... [EC-411](#)  
EVAP canister ..... [EC-35](#)  
EVAP canister purge volume control solenoid valve ...  
[EC-318](#), [EC-539](#)  
EVAP canister vent control valve ..... [EC-325](#), [EC-547](#)  
EVAP control system (small leak) diagnosis .. [EC-310](#),  
[EC-349](#), [EC-357](#)  
EVAP control system pressure sensor .... [EC-332](#), [EC-335](#),  
[EC-341](#)  
EVAP control system purge flow monitoring diagnosis  
[EC-305](#)  
EVAP vapor lines inspection ..... [MA-20](#)  
Evaporative emission (EVAP) system ..... [EC-32](#)  
Evaporator ..... [MTC-126](#)  
Exhaust manifold ..... [EM-19](#)  
Exhaust system ..... [EX-3](#)  
Exhaust system inspection ..... [EX-3](#)  
Expansion valve ..... [MTC-127](#)

## F

F/FOG - Wiring diagram ..... [LT-66](#)  
F/PUMP - Wiring diagram ..... [EC-627](#)  
Final drive pre-inspection ..... [FFD-14](#)  
Final drive removal and installation . [FFD-11](#), [RFD-15](#),  
[RFD-88](#)  
Flow charts ..... [GI-27](#)  
Fluid temperature sensor (A/T) ..... [AT-128](#)

Fluids ..... [MA-11](#)  
Fluorescent leak detector ..... [MTC-127](#)  
Fog lamp, front ..... [LT-64](#)  
Foot lamp ..... [LT-128](#)  
FPCM - Wiring diagram ..... [EC-452](#)  
Freeze frame data ..... [EC-53](#), [EC-131](#)  
Front brake solenoid valve ..... [AT-146](#), [AT-148](#)  
Front bumper ..... [EI-14](#)  
Front case (Transfer) ..... [TF-88](#)  
Front combination lamp removal and installation [LT-31](#)  
Front door ..... [BL-126](#), [BL-130](#), [GW-85](#)  
Front Door Trim ..... [EI-32](#)  
Front drive shaft (Transfer) ..... [TF-88](#), [TF-108](#)  
Front fog lamp ..... [LT-64](#)  
Front passenger air bag ..... [SRS-48](#)  
Front seat ..... [SE-92](#)  
Front seat belt ..... [SB-3](#)  
Front seat belt pre-tensioner ..... [SRS-3](#), [SRS-55](#)  
Front washer ..... [WW-4](#)  
Front wiper ..... [WW-4](#)  
FTTS - Wiring diagram ..... [EC-256](#), [EC-261](#)  
Fuel cut control (at no load high engine speed) [EC-27](#)  
Fuel filter replacement ..... [FL-5](#)  
Fuel gauge ..... [DI-5](#)  
Fuel injection system (Bank 1) ..... [EC-237](#), [EC-246](#)  
Fuel injection system (Bank 2) ..... [EC-237](#), [EC-246](#)  
Fuel injector and fuel tube ..... [EM-29](#)  
Fuel level sensor ..... [EC-366](#), [EC-368](#), [EC-370](#)  
Fuel line inspection ..... [FL-3](#)  
Fuel pressure check ..... [EC-94](#)  
Fuel pressure release ..... [EC-94](#)  
Fuel pump ..... [EC-626](#)  
Fuel pump and gauge ..... [FL-5](#)  
Fuel pump control module ..... [EC-450](#)  
Fuel pump dropping resistor ..... [EC-450](#)  
Fuel system ..... [FL-3](#)  
Fuel tank ..... [FL-10](#)  
Fuel tank temperature sensor ..... [EC-254](#), [EC-260](#)  
Fuel tank vacuum relief valve ..... [EC-35](#)  
FUELB1 - Wiring diagram ..... [EC-239](#), [EC-248](#)  
FUELB2 - Wiring diagram ..... [EC-240](#), [EC-249](#)  
Fuse ..... [PG-68](#), [PG-79](#)  
Fuse block ..... [PG-78](#)  
Fusible link ..... [PG-68](#), [PG-79](#)

## G

Garage jack and safety stand ..... [GI-40](#)  
Gauges ..... [DI-5](#)  
Generator ..... [SC-17](#)  
Generic scan tool (GST) ..... [EC-140](#)  
Glass ..... [GW-11](#), [GW-13](#), [GW-85](#), [GW-88](#)  
Glove box lamp ..... [LT-153](#)  
GPS antenna ..... [AV-79](#)  
Grease ..... [MA-11](#)  
Ground distribution ..... [PG-29](#)

# ALPHABETICAL INDEX

## H

Handling precautions for plastics ..... [BL-203](#)  
Harness connector ..... [PG-69](#)  
Harness layout ..... [PG-38](#)  
Hazard warning lamp ..... [LT-76](#)  
Headlamp removal and installation ..... [LT-31](#)  
Heated oxygen sensor 2 (bank 1) ... [EC-217](#), [EC-226](#),  
[EC-415](#), [EC-426](#)  
Heated oxygen sensor 2 (bank 2) ... [EC-217](#), [EC-226](#),  
[EC-415](#), [EC-426](#)  
Heated oxygen sensor 2 heater (bank 1) ..... [EC-167](#)  
Heated oxygen sensor 2 heater (bank 2) ..... [EC-167](#)  
Heated seat ..... [SE-89](#)  
Heater and cooling unit (Heater core) [MTC-104](#), [MTC-106](#)  
Heater unit (heater core) ..... [MTC-104](#), [MTC-106](#)  
Height (Dimensions) ..... [GI-50](#)  
HFC134a (R134a) system identification ..... [MTC-6](#)  
HFC134a (R134a) system precaution ..... [MTC-4](#)  
HFC134a (R134a) system service procedure [MTC-116](#)  
HFC134a (R134a) system service tools ..... [MTC-12](#)  
HFC134a system service equipment precaution [MTC-9](#)  
High & low reverse clutch solenoid valve . [AT-154](#), [AT-156](#)  
Homelink universal transceiver ..... [BL-158](#)  
Horn ..... [WW-34](#)  
HORN - Wiring diagram ..... [WW-34](#)  
How to erase DTC for OBD system ..... [EC-61](#)  
HSEAT - Wiring diagram ..... [SE-90](#)

## I

I/MIRR - Wiring diagram ..... [GW-93](#)  
IATS - Wiring diagram ..... [EC-193](#)  
Identification plate ..... [GI-48](#)  
Idle air volume learning ..... [EC-91](#), [EC-92](#)  
Idle mixture ratio ..... [EC-79](#)  
Idle speed ..... [EC-71](#), [EC-76](#)  
Idle speed control (ISC) ..... [EC-374](#), [EC-376](#)  
Ignition coil ..... [EM-26](#), [EC-608](#)  
Ignition control system ..... [EC-608](#)  
Ignition key hole illumination ..... [LT-127](#)  
Ignition timing ..... [EC-71](#), [EC-76](#)  
IGNSYS - Wiring diagram ..... [EC-609](#)  
ILL - Wiring diagram ..... [LT-158](#)  
Illumination ..... [LT-152](#)  
INJECT - Wiring diagram ..... [EC-621](#)  
Injector ..... [EC-620](#)  
Input clutch solenoid valve ..... [AT-142](#), [AT-144](#)  
Instrument panel ..... [IP-10](#)  
Instrument panel speaker ..... [AV-66](#)  
INT/L - Wiring diagram ..... [GW-120](#)  
Intake air temperature sensor ..... [EC-192](#), [EC-212](#)  
Intake door control linkage adjustment [MTC-63](#), [MTC-67](#)  
Intake door motor ..... [MTC-62](#), [MTC-109](#)  
Intake manifold ..... [EM-15](#)  
Intake sensor ..... [MTC-97](#), [MTC-100](#)

Integrated homelink transmitter - See Homelink universal transceiver ..... [BL-158](#)  
Interior ..... [EI-36](#)  
Interior lamp ..... [LT-127](#)  
Interior lamp on-off control ..... [LT-128](#)  
Internal gear (Transfer) ..... [TF-88](#)  
IPDM (Intelligent power distribution module engine room) ..... [PG-16](#)  
IVIS (Infiniti vehicle immobilizer system) precautions ... [GI-3](#)

## J

Jacking points ..... [GI-40](#)  
Junction box (J/B) ..... [PG-78](#)

## K

Key illumination ..... [LT-128](#)  
KEYLES - Wiring diagram ..... [BL-61](#), [BL-62](#), [BL-67](#)  
Knock sensor (KS) ..... [EC-280](#)  
KS - Wiring diagram ..... [EC-281](#)

## L

Leaf spring (rear) ..... [RSU-8](#)  
Length (Dimensions) ..... [GI-50](#)  
License lamp ..... [LT-105](#)  
Lifting points ..... [GI-41](#)  
Line pressure solenoid valve ..... [AT-121](#)  
Line pressure test (A/T) ..... [AT-54](#)  
Location of electrical units ..... [PG-65](#)  
Low coast brake solenoid valve ..... [AT-158](#), [AT-160](#)  
Low tire pressure warning system ..... [WT-8](#)  
Low tire pressure warning system - trouble diagnoses [WT-11](#)  
Low tire pressure warning system - Wiring diagram ..... [WT-11](#)  
Lubricant (R134a) A/C ..... [MTC-20](#)  
Lubricants ..... [MA-11](#)  
Lubrication circuit (engine) ..... [LU-5](#)  
Lubrication oil A/C ..... [MTC-20](#)  
Lubrication-locks, hinges and hood latches ..... [MA-31](#)

## M

MAFS - Wiring diagram ..... [EC-178](#), [EC-186](#)  
Magnet clutch ..... [MTC-78](#), [MTC-120](#)  
MAIN - Wiring diagram ..... [EC-158](#)  
Mainshaft (Transfer) ..... [TF-88](#)  
Maintenance (engine)Schedule 1 ..... [MA-7](#)  
Maintenance (engine)Schedule 2 ..... [MA-9](#)  
Major overhaul (Final drive) [FFD-13](#), [RFD-16](#), [RFD-89](#)  
Major overhaul (Transfer) ..... [TF-88](#)  
Malfunction indicator lamp (MIL) ..... [EC-63](#)  
Map lamp ..... [LT-128](#)  
Mass air flow sensor (MAFS) ..... [EC-175](#), [EC-184](#)  
Meter ..... [DI-5](#)  
METER - Wiring diagram ..... [DI-10](#)

# ALPHABETICAL INDEX

|   |  |
|---|--|
| MIL data link connectors circuit .....                              | <a href="#">EC-655</a>                           |
| MIL/DL - Wiring diagram .....                                       | <a href="#">EC-655</a>                           |
| MIRROR - Wiring diagram .....                                       | <a href="#">GW-119</a>                           |
| Misfire .....   | <a href="#">EC-272</a>                           |
| Mode door control linkage adjustment .....                          | <a href="#">MTC-53</a>                           |
| Mode door motor .....   | <a href="#">MTC-52</a> , <a href="#">MTC-110</a> |
| Model variation .....   | <a href="#">GI-46</a>                            |
| Multipoint fuel injection (MFI) system .....                        | <a href="#">EC-24</a>                            |
| Multipoint fuel injection precautions .....                         | <a href="#">GI-6</a>                             |
| Multi-remote control system - See Remote keyless entry system ..... | <a href="#">BL-56</a>                            |

## N

|  |  |
|--|--|
| NATS - Wiring diagram .....  | <a href="#">BL-142</a>                         |
| NAVI - Wiring diagram .....  | <a href="#">AV-96</a>                          |
| NAVI Control Unit .....  | <a href="#">AV-80</a> , <a href="#">AV-174</a> |
| NVH troubleshooting (AX) .....   | <a href="#">FAX-4</a>                          |
| NVH troubleshooting (EM) .....   | <a href="#">EM-9</a>                           |
| NVH troubleshooting (Final drive) .....                                      | <a href="#">RFD-9</a> , <a href="#">RFD-43</a> |
| NVH troubleshooting (Propeller shaft) .....                                  | <a href="#">PR-3</a>                           |
| NVH troubleshooting (ST) .....   | <a href="#">PS-5</a>                           |
| NVH troubleshooting (Transfer) .....   | <a href="#">TF-11</a>                          |
| NVH troubleshooting (WT)NVH troubleshooting (WT) .<br><a href="#">WT-4</a>   |  |
| NVIS (Nissan vehicle immobilizer system) .....                               | <a href="#">BL-139</a>                         |
| NVIS (Nissan vehicle immobilizer system) precautions<br><a href="#">GI-3</a> |  |

## O

|   |  |
|---|--|
| O2H2B1 - Wiring diagram .....                     | <a href="#">EC-169</a>   |
| O2H2B2 - Wiring diagram .....                     | <a href="#">EC-171</a>   |
| O2S2B1 - Wiring diagram ..                        | <a href="#">EC-219</a> , <a href="#">EC-229</a> , <a href="#">EC-418</a> ,<br><a href="#">EC-429</a> |
| O2S2B2 - Wiring diagram ..                        | <a href="#">EC-221</a> , <a href="#">EC-231</a> , <a href="#">EC-420</a> ,<br><a href="#">EC-431</a> |
| Oil cooler (engine) .....                         | <a href="#">LU-11</a>  |
| Oil filter .....                                  | <a href="#">LU-10</a>  |
| Oil pan (engine) .....                            | <a href="#">EM-22</a>  |
| Oil pressure (engine) .....                       | <a href="#">LU-7</a>   |
| Oil pressure relief valve (engine) .....          | <a href="#">LU-5</a>   |
| Oil pump (engine) .....                           | <a href="#">LU-13</a>  |
| Oil seal replacement (engine) .....               | <a href="#">EM-57</a>  |
| Oil seal replacement (front of final drive) ..... | <a href="#">FFD-7</a>  |
| Oil seal replacement (side of final drive) .....  | <a href="#">FFD-9</a>  |
| On board diagnostic system .....                  | <a href="#">EC-48</a>  |
| ORVR (On-board Refueling Vapor Recovery) ...      | <a href="#">EC-39</a>  |
| Overheat .....                                    | <a href="#">EC-440</a>   |

## P

|  |                        |
|--|------------------------|
| P/SCKT - Wiring diagram .....              | <a href="#">WW-32</a>  |
| Pantograph jack .....                      | <a href="#">GI-40</a>  |
| Park/Neutral position switch .....         | <a href="#">EC-570</a> |
| Park/neutral position switch (A/T) .....   | <a href="#">AT-106</a> |
| Parking brake control .....                | <a href="#">PB-4</a>   |
| PCV (positive crankcase ventilation) ..... | <a href="#">EC-45</a>  |
| Personal lamp .....                        | <a href="#">LT-128</a> |

|  |   |
|--|---|
| PGC/V - Wiring diagram .....                       | <a href="#">EC-320</a> , <a href="#">EC-541</a> |
| PHASE - Wiring diagram .....                       | <a href="#">EC-292</a> , <a href="#">EC-294</a> |
| Piston pin inspection .....                        | <a href="#">EM-92</a>                           |
| Piston ring inspection .....                       | <a href="#">EM-93</a>                           |
| Piston to bore clearance .....                     | <a href="#">EM-97</a>                           |
| Planetary carrier (Transfer) .....                 | <a href="#">TF-88</a> , <a href="#">TF-104</a>  |
| PNP/SW - Wiring diagram .....                      | <a href="#">EC-572</a>                          |
| POS - Wiring diagram .....                         | <a href="#">EC-287</a>                          |
| POWER - Wiring diagram .....                       | <a href="#">PG-6</a>                            |
| Power door lock .....                              | <a href="#">BL-16</a>                           |
| Power seat .....                                   | <a href="#">SE-85</a>                           |
| Power steering fluid level .....                   | <a href="#">MA-29</a>                           |
| Power steering gear .....                          | <a href="#">PS-16</a>                           |
| Power steering oil pump .....                      | <a href="#">PS-27</a>                           |
| Power steering pressure (PSP) sensor .....         | <a href="#">EC-378</a>                          |
| Power steering system bleeding .....               | <a href="#">PS-6</a>                            |
| Power supply routing .....                         | <a href="#">PG-4</a>                            |
| Power window .....                                 | <a href="#">GW-19</a>                           |
| PRE/SE - Wiring diagram .....                      | <a href="#">EC-337</a> , <a href="#">EC-343</a> |
| Precautions (General) .....                        | <a href="#">GI-4</a>                            |
| Precautions in repairing high strength steel ..... | <a href="#">BL-206</a>                          |
| Pressure switch 1 .....                            | <a href="#">AT-148</a> , <a href="#">AT-166</a> |
| Pressure switch 2 .....                            | <a href="#">AT-160</a>                          |
| Pressure switch 3 .....                            | <a href="#">AT-144</a> , <a href="#">AT-168</a> |
| Pressure switch 5 .....                            | <a href="#">AT-152</a> , <a href="#">AT-170</a> |
| Pressure switch 6 .....                            | <a href="#">AT-156</a> , <a href="#">AT-172</a> |
| Pressure test (A/T) .....                          | <a href="#">AT-54</a>                           |
| Propeller shaft .....                              | <a href="#">PR-4</a> , <a href="#">PR-8</a>     |
| Propeller shaft inspection .....                   | <a href="#">MA-25</a>                           |
| Propeller shaft on vehicle service .....           | <a href="#">PR-8</a>                            |
| Propeller shaft vibration .....                    | <a href="#">PR-4</a> , <a href="#">PR-8</a>     |
| PS/SEN - Wiring diagram .....                      | <a href="#">EC-379</a>                          |

## R

|  |   |
|--|---|
| Radiator .....                                     | <a href="#">CO-12</a>   |
| Rear Audio Remote Control Unit .....               | <a href="#">AV-67</a>   |
| Rear bumper .....                                  | <a href="#">EI-18</a>   |
| Rear case (Transfer) .....                         | <a href="#">TF-88</a>   |
| Rear combination lamp removal and installation ... | <a href="#">LT-119</a>  |
| Rear door .....                                    | <a href="#">BL-126</a> , <a href="#">GW-88</a>                              |
| Rear seat .....                                    | <a href="#">SE-100</a>  |
| Rear seat belt .....                               | <a href="#">SB-8</a>  |
| Rear window .....                                  | <a href="#">GW-13</a>   |
| Rear window defogger .....                         | <a href="#">GW-95</a>   |
| Refrigerant connection precaution .....            | <a href="#">MTC-6</a>   |
| Refrigerant discharging evacuating charging        | <a href="#">MTC-116</a>   |
| Refrigerant general precaution .....               | <a href="#">MTC-5</a>   |
| Refrigerant lines .....                            | <a href="#">MTC-116</a> , <a href="#">MTC-123</a> , <a href="#">MTC-124</a> |
| Refrigerant pressure sensor .....                  | <a href="#">EC-639</a> , <a href="#">MTC-124</a>                            |
| REMOTE - Wiring diagram .....                      | <a href="#">BL-61</a>   |
| Remote keyless entry system .....                  | <a href="#">BL-56</a>   |
| Removal and installation (A/T) .....               | <a href="#">AT-265</a> , <a href="#">AT-268</a>                             |
| Removal and installation (Transfer) .....          | <a href="#">TF-87</a>   |
| Revolution sensor (A/T) .....                      | <a href="#">AT-110</a>  |
| Road wheel size .....                              | <a href="#">GI-50</a>   |
| Rocker cover .....                                 | <a href="#">EM-33</a>   |
| Room lamp .....                                    | <a href="#">LT-127</a>  |

# ALPHABETICAL INDEX

Room lamp - See Interior lamp ..... [LT-127](#)  
 ROOM/L - Wiring diagram ..... [LT-135](#)  
 RP/SEN - Wiring diagram ..... [EC-640](#)

## S

SAE J1979 - Service \$01 - 09 ..... [EC-48](#)  
 SEAT - Wiring diagram ..... [SE-85](#), [SE-86](#)  
 Seat belt inspection ..... [SB-10](#), [MA-32](#)  
 Seat belt pre-tensioner ..... [SRS-55](#)  
 Seat belt, front ..... [SB-3](#)  
 Seat belt, rear ..... [SB-8](#)  
 Seat, front ..... [SE-92](#)  
 Seat, rear ..... [SE-100](#)  
 Self-diagnosis (Transfer) ..... [TF-33](#)  
 SEN/PW - Wiring diagram ..... [EC-463](#)  
 Shift control (Transfer) ..... [TF-88](#), [TF-110](#)  
 Shift lock system ..... [AT-239](#)  
 Shock absorber (front) ..... [FSU-10](#)  
 Shock absorber (rear) ..... [RSU-7](#)  
 Side air bag (satellite) sensor ..... [SRS-54](#)  
 Side curtain air bag ..... [SRS-51](#)  
 Side trim ..... [EI-36](#)  
 SMJ (super multiple junction) ..... [PG-76](#)  
 SONAR - Wiring diagram ..... [DI-61](#)  
 Spare tire size ..... [GI-50](#)  
 Spark plug ..... [EM-27](#)  
 Spark plug replacement ..... [MA-18](#)  
 Specification value ..... [EC-147](#)  
 Speedometer ..... [DI-5](#)  
 Spiral cable ..... [SRS-45](#)  
 SROOF - Wiring diagram ..... [RF-13](#)  
 SRS - See Supplemental Restraint System ..... [SRS-5](#)  
 SRS - Wiring diagram ..... [SRS-12](#)  
 SRS Trouble diagnoses ..... [SRS-8](#)  
 Stabilizer bar (front) ..... [FSU-12](#)  
 Stall test (A/T) ..... [AT-53](#)  
 Standardized relay ..... [PG-74](#)  
 START - Wiring diagram ..... [SC-11](#)  
 Starter ..... [SC-10](#)  
 Starting system ..... [SC-10](#)  
 Steering gear, linkage and transfer gear inspection .....  
[MA-29](#)  
 Steering linkage ..... [PS-16](#)  
 Steering wheel and column ..... [PS-7](#)  
 Step lamp ..... [LT-128](#)  
 Stop lamp ..... [LT-99](#)  
 Stop lamp switch ..... [EC-560](#), [EC-575](#), [EC-645](#)  
 STOP/L - Wiring diagram ..... [LT-100](#)  
 Strut (front) ..... [FSU-10](#)  
 Sun gear (Transfer) ..... [TF-88](#)  
 Sun roof, electric ..... [RF-10](#)  
 Sunroof ..... [RF-25](#)  
 Supplemental Restraint System ..... [SRS-5](#)  
 Supplemental restraint system - Wiring diagram ..... [SRS-12](#)  
 Symbols and abbreviations ..... [GI-10](#), [GI-22](#)  
 Symptom matrix chart ..... [EC-105](#)  
 System readiness test (SRT) code ..... [EC-54](#)

## T

Tachometer ..... [DI-5](#)  
 Tail lamp ..... [LT-105](#)  
 TAIL/L - Wiring diagram ..... [LT-107](#)  
 TCM circuit diagram ..... [AT-52](#)  
 TCM inspection table ..... [AT-85](#)  
 TCS - Wiring diagram ..... [BRC-15](#), [BRC-16](#), [BRC-55](#),  
[BRC-102](#)  
 TCS (traction control system) [BRC-8](#), [BRC-46](#), [BRC-93](#)  
 TCS component parts and connector location [BRC-14](#),  
[BRC-53](#), [BRC-100](#)  
 TCS wheel sensors ..... [BRC-14](#), [BRC-53](#), [BRC-100](#)  
 Theft warning system - See Vehicle security (Theft warn-  
 ing) system ..... [BL-93](#)  
 Thermometer ..... [DI-26](#)  
 Three way catalyst ..... [EM-19](#)  
 Three way catalyst function (Bank 1) ..... [EC-299](#)  
 Three way catalyst function (Bank 2) ..... [EC-299](#)  
 Three way catalyst precautions ..... [GI-5](#)  
 Throttle control motor ..... [EC-410](#)  
 Throttle control motor relay ..... [EC-405](#)  
 Throttle position sensor (TPS) ... [EC-202](#), [EC-265](#), [EC-458](#),  
[EC-460](#), [EC-593](#)  
 Throttle valve closed position learning ..... [EC-90](#)  
 Tie-rod ..... [PS-16](#)  
 Timing chain ..... [EM-35](#)  
 Tire rotation ..... [MA-28](#)  
 Tire size ..... [GI-50](#)  
 Torque converter installation [AT-266](#), [AT-267](#), [AT-269](#),  
[AT-270](#)  
 Torque convertor clutch solenoid valve .... [AT-117](#), [AT-119](#)  
 Towing point ..... [GI-43](#)  
 TPS1 - Wiring diagram ..... [EC-267](#)  
 TPS2 - Wiring diagram ..... [EC-204](#)  
 TPS3 - Wiring diagram ..... [EC-595](#)  
 Traction control system - Wiring diagram ..... [BRC-15](#),  
[BRC-55](#), [BRC-102](#)  
 Transfer case ..... [TF-88](#)  
 Transfer control device ..... [TF-60](#)  
 Transfer control unit inspection table ..... [TF-27](#)  
 Transfer oil replacement ..... [MA-24](#)  
 Transfer serial number ..... [GI-49](#)  
 Transmission serial number ..... [GI-49](#)  
 Tread-FR&RR (Dimensions) ..... [GI-50](#)  
 Trim ..... [EI-36](#)  
 TRNSCV - Wiring diagram ..... [BL-158](#)  
 Trouble diagnoses ..... [GI-11](#)  
 Turbine revolution sensor ..... [AT-133](#)  
 TURN - Wiring diagram ..... [LT-79](#)  
 Turn signal lamp ..... [LT-76](#)  
 Two trip detection logic ..... [EC-48](#)  
 Two-pole lift ..... [GI-41](#)

## V

Vacuum hose (brake system) ..... [BR-22](#)  
 Vacuum hose drawing (Engine control) ..... [EC-115](#)

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

IDX

# ALPHABETICAL INDEX

---

|  |   |
|--|---|
| Valve clearance .....                            | <a href="#">EM-52</a>   |
| Valve guide .....                                | <a href="#">EM-67</a>   |
| Vanity mirror lamp .....                         | <a href="#">LT-127</a>  |
| VDC (vehicle dynamics control) .....             | <a href="#">BRC-8</a> , <a href="#">BRC-46</a> , <a href="#">BRC-93</a>   |
| VDC -Wiring diagram .....                        | <a href="#">BRC-16</a> , <a href="#">BRC-55</a> , <a href="#">BRC-102</a> |
| Vehicle identification number .....              | <a href="#">GI-48</a>   |
| Vehicle recovery (freeing a stuck vehicle) ..... | <a href="#">GI-43</a>   |
| Vehicle security (theft warning) system .....    | <a href="#">BL-93</a>   |
| Vehicle speed sensor (VSS) .....                 | <a href="#">EC-372</a>  |
| VEHSEC - Wiring diagram .....                    | <a href="#">BL-97</a> , <a href="#">BL-104</a>                            |
| VENT/V - Wiring diagram .....                    | <a href="#">EC-327</a> , <a href="#">EC-549</a>                           |
| Video Monitor .....                              | <a href="#">AV-77</a>   |
| VIN registration .....                           | <a href="#">EC-90</a>   |
| Viscosity number (SAE) .....                     | <a href="#">MA-12</a>   |

---

## W

---

|                                       |   |
|---------------------------------------|---|
| Wait detection switch .....           | <a href="#">TF-49</a>                         |
| WARN - Wiring diagram .....           | <a href="#">DI-31</a>                         |
| Warning chime .....                   | <a href="#">DI-42</a>                         |
| Warning lamps .....                   | <a href="#">DI-30</a>                         |
| Washer, front .....                   | <a href="#">WW-4</a>                          |
| Water pump .....                      | <a href="#">CO-17</a>                         |
| Water temperature gauge .....         | <a href="#">DI-5</a>                          |
| Wheel alignment (front) .....         | <a href="#">FSU-6</a>                         |
| Wheel bearing (front) .....           | <a href="#">FAX-5</a>                         |
| Wheel size .....                      | <a href="#">GI-50</a>                         |
| Wheelbase (Dimensions) .....          | <a href="#">GI-50</a>                         |
| Width (Dimensions) .....              | <a href="#">GI-50</a>                         |
| WINDOW - Wiring diagram .....         | <a href="#">GW-26</a> , <a href="#">GW-35</a> |
| Window, door .....                    | <a href="#">GW-85</a> , <a href="#">GW-88</a> |
| Window, rear .....                    | <a href="#">GW-13</a>                         |
| Windshield .....                      | <a href="#">GW-11</a>                         |
| WIPER - Wiring diagram .....          | <a href="#">WW-8</a>                          |
| Wiper, front .....                    | <a href="#">WW-4</a>                          |
| Wiring Diagram (Cell code) list ..... | <a href="#">PG-63</a>                         |
| Wiring diagram (Transfer) .....       | <a href="#">TF-23</a>                         |
| Wiring diagrams .....                 | <a href="#">GI-15</a>                         |
| WT-T/WARN - Wiring diagram .....      | <a href="#">WT-11</a>                         |