

**SECTION IDX
ALPHABETICAL INDEX**

A

B

C

D

E

F

G

H

I

J

K

L

IDX

ALPHABETICAL INDEX

Numerics	
4LO switch	TF-48
4WD - Wiring diagram	TF-24
4WD shift switch	TF-52
4WD system description	TF-15
4WD system diagram	TF-18
A	
A/C air flow	ATC-27 , MTC-26
A/C compressor clutch removal and installation ..	ATC-184 , MTC-116
A/C compressor mounting	ATC-183 , MTC-115
A/C compressor precaution	ATC-9 , MTC-9
A/C compressor special service tool .	ATC-12 , MTC-12
A/C control operation (auto A/C)	ATC-25
A/C control operation (manual A/C)	MTC-25
A/C diagnostic work flow (auto A/C)	ATC-138
A/C evaporator	ATC-190 , MTC-122
A/C HFC134a (R134a) system identification	ATC-5 , MTC-5
A/C HFC134a (R134a) system precaution	ATC-4 , MTC-4
A/C HFC134a (R134a) system service procedure	ATC-180 , MTC-112
A/C HFC134a (R134a) system service tools ..	ATC-12 , MTC-12
A/C HFC134a system service equipment precaution ...	ATC-9 , MTC-9
A/C lubricant (R134a)	ATC-20 , MTC-20
A/C lubrication oil	ATC-20 , MTC-20
A/C operational check	ATC-62 , MTC-46
A/C self-diagnoses (auto A/C)	ATC-60 , ATC-138
A/C service data specification	ATC-195 , MTC-127
A/C trouble diagnoses (auto A/C)	ATC-30
A/C trouble diagnoses (manual A/C)	MTC-29
A/C, A - Wiring diagram	ATC-40
A/C, M - Wiring diagram	MTC-38
A/T fluid checking	AT-12 , AT-54 , MA-22
A/T fluid replacement	AT-12 , MA-24
A/T fluid temperature sensor	AT-129
A/T IND - Wiring diagram	DI-40
A/T indicator	DI-40
A/T self-diagnoses	AT-89
A/T shift lock system	AT-238
A/T trouble diagnoses	AT-45
ABS - Wiring diagram	BRC-15 , BRC-54 , BRC-101
ABS (anti-lock brake system)	BRC-7 , BRC-45 , BRC-92
Accelerator control system	ACC-3
Accelerator pedal position (APP) sensor .	EC-542 , EC-548 , EC-562
Accelerator pedal released position learning	EC-83
AF1B1-Wiring diagram	EC-222 , EC-231 , EC-240 , EC-250 , EC-572
AF1B2-Wiring diagram	EC-224 , EC-233 , EC-242 , EC-252 , EC-574
AF1HB1-Wiring diagram	EC-163
AF1HB2-Wiring diagram	EC-165
Aiming adjustment	LT-29 , LT-74
Air bag	SRS-3
Air cleaner and air duct	EM-15
Air cleaner filter replacement	EM-16 , MA-16
Air conditioner cut control	EC-28
Air flow meter - See Mass air flow sensor	EC-177 , EC-186
Air fuel ratio sensor 1 ..	EC-219 , EC-229 , EC-238 , EC-247 , EC-570
Air fuel ratio sensor 1 heater	EC-162
Air mix. door motor	ATC-77 , MTC-56
Ambient sensor	ATC-143 , ATC-160
Angular tightening application	EM-4
Antenna	AV-79
APPS1 - Wiring diagram	EC-544
APPS2 - Wiring diagram	EC-550
APPS3 - Wiring diagram	EC-564
ASC/BS - Wiring diagram	EC-510
ASC/SW - Wiring diagram	EC-503
ASCBOF - Wiring diagram	EC-582
ASCD	EC-29
ASCD (automatic speed control device)	ACS-2
ASCD brake switch	EC-508 , EC-581
ASCD indicator lamp	EC-588
ASCD steering switch	EC-501
ASCIND - Wiring diagram	EC-589
Audio	AV-6
AUDIO - Wiring diagram	AV-16
AUT/DP - Wiring diagram	SE-16
Auto air conditioner - Wiring diagram	ATC-40
Auto anti-dazzling inside mirror	GW-93
Autolamp	LT-47
Automatic amplifier	ATC-64
Automatic drive positioner	SE-11
Automatic transmission number	GI-49
B	
Back door trim	EI-32
Back sonar	DI-59
BACK/L - Wiring diagram	LT-106
Back-up lamp	LT-106
Ball joint (front)	FSU-15
Basic inspection	EC-71
Battery	SC-4
Battery/Starting/Charging System Tester	SC-6 , SC-12 , SC-19
BCM (Body control module)	BCS-3
Block heater	EM-78
Blower motor ...	ATC-108 , ATC-164 , MTC-70 , MTC-97
Body alignment	BL-184
Body component parts	BL-166
Body construction	BL-182
Body exterior paint color	BL-165
Body mounting	BL-161 , BL-162
Body repair	BL-165
Body sealing	BL-178
Brake booster	BR-19
Brake fluid level	MA-28

ALPHABETICAL INDEX

Brake hydraulic line	BR-13	CONSULT for VDC	BRC-22 , BRC-62 , BRC-113		
Brake inspection	MA-28	CONSULT general information	GI-37		
Brake lines and cables inspection	MA-28	CONSULT-II for engine	EC-120		
Brake master cylinder	BR-16	Control units (terminal arrangement)	PG-75		
Brake switch	EC-508 , EC-518 , EC-581	Control valve (A/T)	AT-39		
BRK/SW - Wiring diagram	EC-519	Converter housing installation	AT-266 , AT-270		
Bulb specifications	LT-172	COOL/F - Wiring diagram	EC-482		
Bumper, front	EI-14	Coolant mixture ratio	MA-12		
Bumper, rear	EI-18	Coolant replacement	CO-10 , MA-13		
C					
Cabin air filter	ATC-165	Cooling circuit (engine)	CO-8		
Camshaft	EM-46	Cooling fan	CO-17		
Camshaft inspection	EM-49	Cooling fan control	EC-479		
Camshaft position sensor (PHASE)	EC-353	Cooling fan motor	EC-488		
CAN - Wiring diagram	EC-158 , AT-100 , LAN-27 , LAN-51 , LAN-65 , LAN-79 , LAN-95 , LAN-112 , LAN-127 , LAN-144 , LAN-162 , LAN-177 , LAN-194 , LAN-212 , LAN-229 , LAN-249 , LAN-271 , LAN-289 , LAN-307 , LAN-326	Cooling unit (A/C evaporator)	ATC-167 , ATC-190 , MTC-100 , MTC-122		
CAN communication	EC-31 , EC-157 , EC-160 , TF-70 , RFD-69	Corrosion protection	BL-175		
Canister-See EVAP canister	EC-35	Crankcase ventilation system - See Positive crankcase ventilation	EC-45		
CHARGE - Wiring diagram	SC-18	Crankshaft	EM-79		
Charging system	SC-17	Crankshaft position sensor (POS)	EC-346		
Chassis and body maintenance	MA-21	Crash zone sensor	SRS-52		
Chassis and body maintenanceSchedule 1	MA-8	Cylinder block	EM-78		
Chassis and body maintenanceSchedule 2	MA-10	Cylinder block boring	EM-99		
CHIME - Wiring diagram	DI-45	D			
CIGAR - Wiring diagram	WW-32	D/LOCK - Wiring diagram	BL-20		
Cigarette lighter	WW-32	Data link connector for Consult	EC-122 , EC-134		
Circuit breaker	PG-17	Daytime light system	LT-33		
Closed loop control	EC-25 , EC-476	Daytime running light - See Daytime light system ..	LT-33		
Closed loop control (Bank 1)	EC-476	DEF - Wiring diagram	GW-99		
Closed loop control (Bank 2)	EC-476	Diagnosis sensor unit	SRS-55		
Coil spring (front)	FSU-10	Diagnostic trouble code (DTC) for OBD system ..	EC-8 , EC-52		
Collision diagnosis	SRS-57	Diagnostic trouble code (DTC) inspection priority chart	EC-95		
Combination lamp, front, removal and installation ..	LT-31	Differential gear oil replacement	MA-26		
Combination lamp, rear, removal and installation ..	LT-122	DIFLOC - Wiring diagram	RFD-47		
Combination meter	DI-5	Dimensions	GI-50		
Combination switch	LT-96	Direct clutch solenoid valve	AT-149 , AT-151		
COMBSW - Wiring diagram	LT-96	Display and amp.assembly	ATC-64		
COMM - Wiring diagram	AV-102	Display Control Unit-Description	AV-91		
COMPAS - Wiring diagram	DI-27	Display Unit-Description	AV-91		
Compass	DI-26	Dome light - See Interior lamp	LT-131		
Component Location (auto A/C)	ATC-36	Door glass	GW-85 , GW-88		
Component Location (manual A/C)	MTC-35	Door lock	BL-130		
Compressor clutch removal and installation	ATC-184 , MTC-116	Door mirror lamp	LT-131		
Compressor mounting	ATC-183 , MTC-115	Door trim	EI-32		
Compressor precaution	ATC-9 , MTC-9	Door, front	BL-126 , GW-85		
Compressor special service tool	ATC-12 , MTC-12	Door, rear	BL-126 , GW-88		
Condenser	ATC-189 , MTC-121	Drive belt	EM-13		
Connecting rod	EM-96	Drive chain (Transfer)	TF-96		
Connecting rod bearing clearance	EM-96	Driver air bag	SRS-43		
Connecting rod bushing clearance	EM-96	DTC work support	EC-130		
Console box - See Instrument panel	IP-10	DTRL - Wiring diagram	LT-37		
Duct and grilles				ATC-177 , MTC-109	
DVD - Wiring Diagram				AV-83	
DVD Entertainment System				AV-80	

IDX

ALPHABETICAL INDEX

DVD Player	AV-81	Fluorescent leak detector	ATC-191 , MTC-123
E			
ECM input/output signal	EC-111 , EC-135	Fog lamp, front	LT-65
ECM power supply	EC-151 , EC-459	Foot lamp	LT-132
ECM relay	EC-151	FPCM - Wiring diagram	EC-491
ECM/PW - Wiring diagram	EC-460	Freeze frame data	EC-53 , EC-124
ECTS - Wiring diagram	EC-200	Front brake solenoid valve	AT-145 , AT-147
Electric sunroof	RF-10	Front bumper	EI-14
Electric throttle control actuator	EC-529 , EC-540	Front case (Transfer)	TF-96
Electrical load signal circuit	EC-591	Front combination lamp removal and installation	LT-31
Electronic ignition (EI) system	EC-26	Front door	BL-126 , BL-130 , GW-85
Engine control circuit diagram	EC-109	Front Door Trim	EI-32
Engine control component parts location	EC-102	Front drive shaft (Transfer)	TF-96 , TF-117
Engine control module (ECM)	EC-463	Front fog lamp	LT-65
Engine control system diagram	EC-23	Front passenger air bag	SRS-47
Engine coolant	CO-10	Front seat	SE-88
Engine coolant temperature sensor (ECTS) ...	EC-198 , EC-211	Front seat belt	SB-3
Engine fail-safe system	EC-97	Front seat belt pre-tensioner	SRS-3 , SRS-54
Engine oil	LU-7	Front washer	WW-3
Engine oil filter replacement	MA-17	Front wiper	WW-3
Engine oil precautions	GI-7	FTS - Wiring diagram	AT-130
Engine oil replacement	MA-17	FTTS - Wiring diagram	EC-317 , EC-322
Engine removal	EM-74	Fuel cut control (at no load high engine speed)	EC-27
Engine room cover	EM-12	Fuel filter replacement	FL-6
Engine serial number	GI-49	Fuel gauge	DI-5
ETC1 - Wiring diagram	EC-530	Fuel injection system (Bank 1)	EC-294 , EC-305
ETC2 - Wiring diagram	EC-525	Fuel injection system (Bank 2)	EC-294 , EC-305
ETC3 - Wiring diagram	EC-536	Fuel injector	EC-592
EVAP canister	EC-35	Fuel injector and fuel tube	EM-31
EVAP canister purge volume control solenoid valve	EC-379 , EC-387	Fuel level sensor	EC-442 , EC-444 , EC-446
EVAP canister vent control valve	EC-394 , EC-401	Fuel line inspection	FL-4
EVAP control system (small leak) diagnosis ..	EC-371 , EC-425 , EC-433	Fuel pressure check	EC-87
EVAP control system pressure sensor	EC-408 , EC-411 , EC-417	Fuel pressure release	EC-87
EVAP control system purge flow monitoring diagnosis		Fuel pump	EC-598
EC-366		Fuel pump and gauge	FL-6
EVAP vapor lines inspection	MA-20	Fuel pump control module	EC-489
Evaporative emission (EVAP) system	EC-32	Fuel pump dropping resistor	EC-489
Evaporator	ATC-190 , MTC-122	Fuel system	FL-4
Exhaust manifold	EM-21	Fuel tank	FL-11
Exhaust system	EX-3	Fuel tank temperature sensor	EC-315 , EC-321
Exhaust system inspection	EX-3	Fuel tank vacuum relief valve	EC-35
Expansion valve	ATC-191 , MTC-123	FUELB1 - Wiring diagram	EC-296 , EC-307
F			
F/FOG - Wiring diagram	LT-67	FUELB2 - Wiring diagram	EC-298 , EC-309
F/PUMP - Wiring diagram	EC-599	Fuse	PG-17 , PG-81
Final drive pre-inspection	FFD-15	Fuse block	PG-80
Final drive removal and installation .	FFD-12 , RFD-14 , RFD-84	Fusible link	PG-17 , PG-81
Flow charts	GI-27	G	
Fluid temperature sensor (A/T)	AT-129	Garage jack and safety stand	GI-40
Fluids	MA-11	Gauges	DI-5

ALPHABETICAL INDEX

<p>H</p> <hr/> <p>H/LAMP - Wiring diagram LT-9 H/MIRROR - Wiring diagram GW-122 Handling precautions for plastics BL-203 Harness connector PG-72 Harness layout PG-41 Hazard warning lamp LT-76 Headlamp removal and installation LT-31 Heated oxygen sensor 2 (bank 1) EC-259, EC-270, EC-283 Heated oxygen sensor 2 (bank 2) EC-259, EC-270, EC-283 Heated oxygen sensor 2 heater (bank 1) EC-169 Heated oxygen sensor 2 heater (bank 2) EC-169 Heated seat SE-85 Heater and cooling unit (Heater core) . ATC-167, ATC-169, MTC-100, MTC-102 Heater unit (heater core) ATC-167, ATC-169, MTC-100, MTC-102 Height (Dimensions) GI-50 HFC134a (R134a) system identification ATC-5, MTC-5 HFC134a (R134a) system precaution .. ATC-4, MTC-4 HFC134a (R134a) system service procedure ATC-180, MTC-112 HFC134a (R134a) system service tools ATC-12, MTC-12 HFC134a system service equipment precaution ATC-9, MTC-9 High and low reverse clutch solenoid valve AT-153, AT-155 Homelink universal transceiver BL-158 Horn WW-36 HORN - Wiring diagram WW-36 How to erase DTC for OBD system EC-61 HSEAT - Wiring diagram SE-86</p> <hr/> <p>I</p> <hr/> <p>I/MIRR - Wiring diagram GW-93 IATS - Wiring diagram EC-195 Identification plate GI-48 Idle air volume learning EC-85 Idle speed EC-71, EC-81 Idle speed control (ISC) EC-450, EC-452 Ignition coil EM-28, EC-611 Ignition control system EC-611 Ignition key hole illumination LT-131 Ignition timing EC-71, EC-81 IGNSYS - Wiring diagram EC-612 ILL - Wiring diagram LT-162 Illumination LT-156 In vehicle sensor ATC-147, ATC-161 In-cabin Microfilter ATC-165 INJECT - Wiring diagram EC-593 Injector EC-592 Input clutch solenoid valve AT-141, AT-143 Instrument panel IP-10 INT/L - Wiring diagram LT-139</p>	<p>Intake air temperature sensor EC-194, EC-214 Intake door control linkage adjustment . ATC-96, ATC-100, MTC-62, MTC-66 Intake door motor . ATC-94, ATC-172, MTC-61, MTC-105 Intake manifold EM-17 Intake sensor .. ATC-155, ATC-163, MTC-93, MTC-96 Integrated homelink transmitter - See Homelink universal tranceiver BL-158 Interior EI-36 Interior lamp LT-131 Interior lamp on-off control LT-132 Internal gear (Transfer) TF-96 IPDM (Intelligent power distribution module engine room) PG-18 IVIS (Infiniti vehicle immobilizer system) precautions ... GI-3</p> <hr/> <p>J</p> <hr/> <p>Jacking points GI-40 Junction box (J/B) PG-80</p> <hr/> <p>K</p> <hr/> <p>Key illumination LT-132 KEYLES - Wiring diagram BL-61, BL-62, BL-67 Knock sensor (KS) EC-341 KS - Wiring diagram EC-342</p> <hr/> <p>L</p> <hr/> <p>Leaf spring (rear) RSU-8 Length (Dimensions) GI-50 License lamp LT-108 Lifting points GI-41 Line pressure solenoid valve AT-124 Line pressure test (A/T) AT-55 Location of electrical units PG-69 Low coast brake solenoid valve AT-157, AT-159 Low tire pressure warning system WT-9 Low tire pressure warning system - trouble diagnoses WT-12 Low tire pressure warning system - Wiring diagram WT-12 Lubricant (R134a) A/C ATC-20, MTC-20 Lubricants MA-11 Lubrication circuit (engine) LU-5 Lubrication oil A/C ATC-20, MTC-20 Lubrication-locks, hinges and hood latches MA-31</p> <hr/> <p>M</p> <hr/> <p>MAFS - Wiring diagram EC-180, EC-188 Magnet clutch ATC-120, ATC-184, MTC-77, MTC-116 MAIN - Wiring diagram EC-151, AT-173 Mainshaft (Transfer) TF-96 Maintenance (engine)Schedule 1 MA-7 Maintenance (engine)Schedule 2 MA-9</p>
--	--

IDX

ALPHABETICAL INDEX

Major overhaul (Final drive)	FFD-14 , RFD-15 , RFD-85
Major overhaul (Transfer)	TF-96
Malfunction indicator lamp (MIL)	EC-63
Map lamp	LT-132
Mass air flow sensor (MAFS)	EC-177 , EC-186
Meter	DI-5
METER - Wiring diagram	DI-10
MIL data link connectors circuit	EC-628
MIL/DL - Wiring diagram	EC-628
MIRROR - Wiring diagram	GW-120
Misfire	EC-333
MMSW - Wiring diagram	AT-162
Mode door control linkage adjustment ..	ATC-70 , MTC-52
Mode door motor ..	ATC-68 , ATC-173 , MTC-51 , MTC-106
Model variation	GI-46
Multiport fuel injection (MFI) system	EC-24
Multiport fuel injection precautions	GI-6
Multi-remote control system - See Remote keyless entry system	BL-56

N

NATS - Wiring diagram	BL-142
NAVI - Wiring diagram	AV-94
NAVI Control Unit	AV-91
Navigation system	AV-89
NONDTC - Wiring diagram	AT-182
NVH troubleshooting (AX)	FAX-4
NVH troubleshooting (EM)	EM-10
NVH troubleshooting (Final drive)	RFD-8 , RFD-40
NVH troubleshooting (Propeller shaft)	PR-3
NVH troubleshooting (ST)	PS-5
NVH troubleshooting (Transfer)	TF-11
NVH troubleshooting (WT)NVH troubleshooting (WT) ..	WT-5
NVIS (Nissan vehicle immobilizer system)	BL-139
NVIS (Nissan vehicle immobilizer system) precautions ..	GI-3

O

O2H2B1 - Wiring diagram	EC-171
O2H2B2 - Wiring diagram	EC-173
O2S2B1 - Wiring diagram ...	EC-262 , EC-273 , EC-286
O2S2B2 - Wiring diagram ...	EC-264 , EC-275 , EC-288
Oil cooler (engine)	LU-11
Oil filter	LU-10
Oil pan (engine)	EM-24
Oil pressure (engine)	LU-7
Oil pressure relief valve (engine)	LU-5
Oil pump (engine)	LU-13
Oil seal replacement (engine)	EM-60
Oil seal replacement (front of final drive)	FFD-8
On board diagnostic system	EC-48
ORVR (On-board Refueling Vapor Recovery) ...	EC-39
Overheat	EC-479

P

Pantograph jack	GI-40
Park/Neutral position switch	EC-471
Park/neutral position switch (A/T)	AT-107
Parking brake control	PB-4
PCV (positive crankcase ventilation)	EC-45
Personal lamp	LT-132
PGC/V - Wiring diagram	EC-381 , EC-389
PHASE - Wiring diagram	EC-355
Piston pin inspection	EM-94
Piston ring inspection	EM-95
Piston to bore clearance	EM-99
Planetary carrier (Transfer)	TF-96 , TF-113
PNP/SW - Wiring diagram	EC-473 , AT-108
POS - Wiring diagram	EC-348
POWER - Wiring diagram	PG-6
Power door lock	BL-16
Power seat	SE-81
Power steering fluid level	MA-29
Power steering gear	PS-16
Power steering oil pump	PS-22
Power steering pressure (PSP) sensor	EC-454
Power steering system bleeding	PS-6
Power supply routing	PG-4
Power window	GW-20
PRE/SE - Wiring diagram	EC-413 , EC-419
Precautions (General)	GI-4
Precautions in repairing high strength steel	BL-206
Pressure switch 1	AT-147 , AT-165
Pressure switch 2	AT-159
Pressure switch 3	AT-143 , AT-167
Pressure switch 5	AT-151 , AT-169
Pressure switch 6	AT-155 , AT-171
Pressure test (A/T)	AT-55
Propeller shaft	PR-4 , PR-8
Propeller shaft inspection	MA-25
Propeller shaft on vehicle service	PR-8
Propeller shaft vibration	PR-4 , PR-8
PS/SEN - Wiring diagram	EC-455

R

Radiator	CO-14
Rear Audio Remote Control Unit-Midline System	AV-8
Rear Audio Remote Control Unit-Premium System	AV-10
Rear bumper	EI-18
Rear case (Transfer)	TF-96
Rear combination lamp removal and installation ...	LT-122
Rear door	BL-126 , GW-88
Rear seat	SE-97
Rear seat belt	SB-8
Rear window	GW-14
Rear window defogger	GW-95
Refrigerant connection precaution	ATC-6 , MTC-6
Refrigerant discharging evacuating charging	ATC-180 , MTC-112

ALPHABETICAL INDEX

Refrigerant general precaution	ATC-5 , MTC-5	
Refrigerant lines	ATC-180 , ATC-187 , ATC-188 , MTC-112 , MTC-119 , MTC-120	A
Refrigerant pressure sensor .	EC-623 , ATC-188 , MTC-120	
REMOTE - Wiring diagram	BL-61	B
Remote keyless entry system	BL-56	
Removal and installation (A/T)	AT-264 , AT-267	C
Removal and installation (Transfer)	TF-95	
Revolution sensor (A/T)	AT-113	D
Road wheel size	GI-50	
Rocker cover	EM-35	E
Room lamp	LT-131	
Room lamp - See Interior lamp	LT-131	F
RP/SEN - Wiring diagram	EC-624	
 S		
SAE J1979 - Service \$01 - 09	EC-48	
SEAT - Wiring diagram	SE-81 , SE-82	G
Seat belt inspection	SB-10 , MA-32	
Seat belt pre-tensioner	SRS-54	H
Seat belt, front	SB-3	
Seat belt, rear	SB-8	I
Seat, front	SE-88	J
Seat, rear	SE-97	K
Self-diagnosis (Transfer)	TF-35	L
SEN/PW - Wiring diagram	EC-467	
SHIFT - Wiring diagram	AT-240	IDX
Shift control (Transfer)	TF-96 , TF-119	
Shift lock system	AT-238	
Shock absorber (front)	FSU-11	
Shock absorber (rear)	RSU-7	
Side air bag (satellite) sensor	SRS-53	
Side curtain air bag	SRS-50	
Side trim	EI-36	
SMJ (super multiple junction)	PG-78	
SONAR - Wiring diagram	DI-62	
Spare tire size	GI-50	
Spark plug	EM-29	
Spark plug replacement	MA-19	
Specification value	EC-140	
Speedometer	DI-5	
Spiral cable	SRS-45	
SROOF - Wiring diagram	RF-13	
SRS - See Supplemental Restraint System	SRS-5	
SRS - Wiring diagram	SRS-12	
SRS Trouble diagnoses	SRS-8	
Stabilizer bar (front)	FSU-12	
Stall test (A/T)	AT-54	
Standardized relay	PG-76	
START - Wiring diagram	SC-11	
Starter	SC-10	
Starting system	SC-10	
Steering gear, linkage and transfer gear inspection	MA-29	
Steering linkage	PS-16	
Steering wheel and column	PS-7	
Step lamp	LT-132	
Stop lamp	LT-102	
Stop lamp switch	EC-508 , EC-518 , EC-581	
STOP/L - Wiring diagram	LT-103	
Strut (front)	FSU-10	
STSIG - Wiring diagram	AT-103	
Sun gear (Transfer)	TF-96	
Sun roof, electric	RF-10	
Sunload sensor	ATC-152	
Sunroof	RF-24	
Supplemental Restraint System	SRS-5	
Supplemental restraint system - Wiring diagram .	SRS-12	
Symbols and abbreviations	GI-10 , GI-22	
Symptom matrix chart	EC-98	
System readiness test (SRT) code	EC-54	

S

SAE J1979 - Service \$01 - 09	EC-48
SEAT - Wiring diagram	SE-81 , SE-82
Seat belt inspection	SB-10 , MA-32
Seat belt pre-tensioner	SRS-54
Seat belt, front	SB-3
Seat belt, rear	SB-8
Seat, front	SE-88
Seat, rear	SE-97
Self-diagnosis (Transfer)	TF-35
SEN/PW - Wiring diagram	EC-467
SHIFT - Wiring diagram	AT-240
Shift control (Transfer)	TF-96 , TF-119
Shift lock system	AT-238
Shock absorber (front)	FSU-11
Shock absorber (rear)	RSU-7
Side air bag (satellite) sensor	SRS-53
Side curtain air bag	SRS-50
Side trim	EI-36
SMJ (super multiple junction)	PG-78
SONAR - Wiring diagram	DI-62
Spare tire size	GI-50
Spark plug	EM-29
Spark plug replacement	MA-19
Specification value	EC-140
Speedometer	DI-5
Spiral cable	SRS-45
SROOF - Wiring diagram	RF-13
SRS - See Supplemental Restraint System	SRS-5
SRS - Wiring diagram	SRS-12
SRS Trouble diagnoses	SRS-8
Stabilizer bar (front)	FSU-12
Stall test (A/T)	AT-54
Standardized relay	PG-76
START - Wiring diagram	SC-11
Starter	SC-10
Starting system	SC-10
Steering gear, linkage and transfer gear inspection	MA-29
Steering linkage	PS-16
Steering wheel and column	PS-7
Step lamp	LT-132

T

Tachometer	DI-5
Tail lamp	LT-108
TAIL/L - Wiring diagram	LT-110
TCM circuit diagram	AT-53
TCM inspection table	AT-86
TCS - Wiring diagram	BRC-14 , BRC-15 , BRC-54 , BRC-101
TCS (traction control system)	BRC-7 , BRC-45 , BRC-92
TCS component parts and connector location	BRC-13 , BRC-52 , BRC-99
TCS wheel sensors	BRC-13 , BRC-52 , BRC-99
Theft warning system - See Vehicle security (Theft warning) system	BL-93
Thermometer	DI-26
Three way catalyst	EM-21
Three way catalyst function (Bank 1)	EC-360
Three way catalyst function (Bank 2)	EC-360
Three way catalyst precautions	GI-5
Throttle control motor	EC-535
Throttle control motor relay	EC-523
Throttle position sensor (TPS)	EC-204 , EC-326 , EC-497 , EC-499 , EC-555
Throttle valve closed position learning	EC-83
Tie-rod	PS-16
Timing chain	EM-37
Tire rotation	MA-28
Tire size	GI-50
Torque converter installation	AT-265 , AT-266 , AT-269 , AT-270
Torque convertor clutch solenoid valve	AT-120 , AT-122
Tow truck towing	GI-42
Towing point	GI-43
TPS1 - Wiring diagram	EC-328
TPS2 - Wiring diagram	EC-206
TPS3 - Wiring diagram	EC-557
Traction control system - Wiring diagram	BRC-14 , BRC-54 , BRC-101
Transfer case	TF-96
Transfer control device	TF-62
Transfer control unit inspection table	TF-29

ALPHABETICAL INDEX

Transfer oil replacement	MA-24
Transfer serial number	GI-49
Transmission serial number	GI-49
Tread-FR&RR (Dimensions)	GI-50
Trim	EI-36
TRNSCV - Wiring diagram	BL-158
Trouble diagnoses	GI-10
Turbine revolution sensor	AT-111
TURN - Wiring diagram	LT-80
Turn signal lamp	LT-76
Two trip detection logic	EC-48
Two-pole lift	GI-41

V

Vacuum hose (brake system)	BR-23
Vacuum hose drawing (Engine control)	EC-108
Valve clearance	EM-55
Valve guide	EM-69
Vanity mirror lamp	LT-131
VDC (vehicle dynamics control) BRC-7 , BRC-45 , BRC-92	
VDC -Wiring diagram	BRC-15 , BRC-54 , BRC-101
Vehicle identification number	GI-48
Vehicle recovery (freeing a stuck vehicle)	GI-43
Vehicle security (theft warning) system	BL-93
Vehicle speed sensor (VSS)	EC-448
VEHSEC - Wiring diagram	BL-97 , BL-104
VENT/V - Wiring diagram	EC-396 , EC-403
VIN registration	EC-83
Viscosity number (SAE)	MA-12
VSS A/T - Wiring diagram	AT-115

W

Wait detection switch	TF-55
WARN - Wiring diagram	DI-31
Warning chime	DI-42
Warning lamps	DI-30
Washer, front	WW-3
Water pump	CO-19
Water temperature gauge	DI-5
Wheel alignment (front)	FSU-6
Wheel bearing (front)	FAX-5
Wheel size	GI-50
Wheelbase (Dimensions)	GI-50
Width (Dimensions)	GI-50
WINDOW - Wiring diagram	GW-27 , GW-36
Window, door	GW-85 , GW-88
Window, rear	GW-14
Windshield	GW-11
WIPER - Wiring diagram	WW-7
Wiper, front	WW-3
Wiring Diagram (Cell code) list	PG-66
Wiring diagrams	GI-15
WT-T/WARN - Wiring diagram	WT-12