

SECTION CHG

CHARGING SYSTEM

CONTENTS

PRECAUTION	2	Inspection Procedure	7
PRECAUTIONS	2	POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM OPERATION INSPECTION	8
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	2	Inspection Procedure	8
Precaution for Power Generation Variable Voltage Control System	2	B TERMINAL CIRCUIT	10
PREPARATION	3	Description	10
PREPARATION	3	Diagnosis Procedure	10
Special Service Tool	3	L TERMINAL CIRCUIT	11
Commercial Service Tool	3	Description	11
BASIC INSPECTION	4	Diagnosis Procedure	11
DIAGNOSIS AND REPAIR WORKFLOW	4	S TERMINAL CIRCUIT	12
Work Flow	4	Description	12
FUNCTION DIAGNOSIS	5	Diagnosis Procedure	12
CHARGING SYSTEM	5	CHARGING SYSTEM	13
System Diagram	5	Wiring Diagram	13
System Description	5	SYMPTOM DIAGNOSIS	18
Component Description	5	CHARGING SYSTEM	18
POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM	6	Symptom Table	18
System Diagram	6	ON-VEHICLE REPAIR	19
System Description	6	GENERATOR	19
Component Description	6	Removal and Installation	19
COMPONENT DIAGNOSIS	7	SERVICE DATA AND SPECIFICATIONS (SDS)	20
CHARGING SYSTEM PRELIMINARY INSPECTION	7	GENERATOR	20
		Generator	20

A
B
C
D
E

F
G
H
I
J
K
L

CHG

N
O
P

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000004834840

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precaution for Power Generation Variable Voltage Control System

INFOID:000000003789321

CAUTION:

For this model, the battery current sensor that is installed to the negative battery cable measures the charging/discharging current of the battery and performs various engine controls. If an electrical component is connected directly to the negative battery terminal, the current flowing through that component will not be measured by the battery current sensor. This condition may cause a malfunction of the engine control system and battery discharge may occur. Do not connect an electrical component or ground wire directly to the battery terminal.

PREPARATION

< PREPARATION >


PREPARATION

PREPARATION

Special Service Tool


INFOID:000000003789322

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

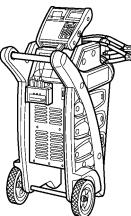Tool number (Kent-Moore No.) Tool name	Description
— (—) Model GR-8 Multitasking Battery Diagnostic Station	 AWI1A1239ZZ

Commercial Service Tool

INFOID:000000003789323

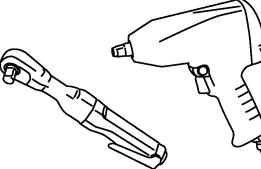Tool name	Description
Power tool	 PBIC0190E

A

B

C

D

E

F

G

H

I

J

K

L

CHG

N

O

P

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000003789324

OVERALL SEQUENCE

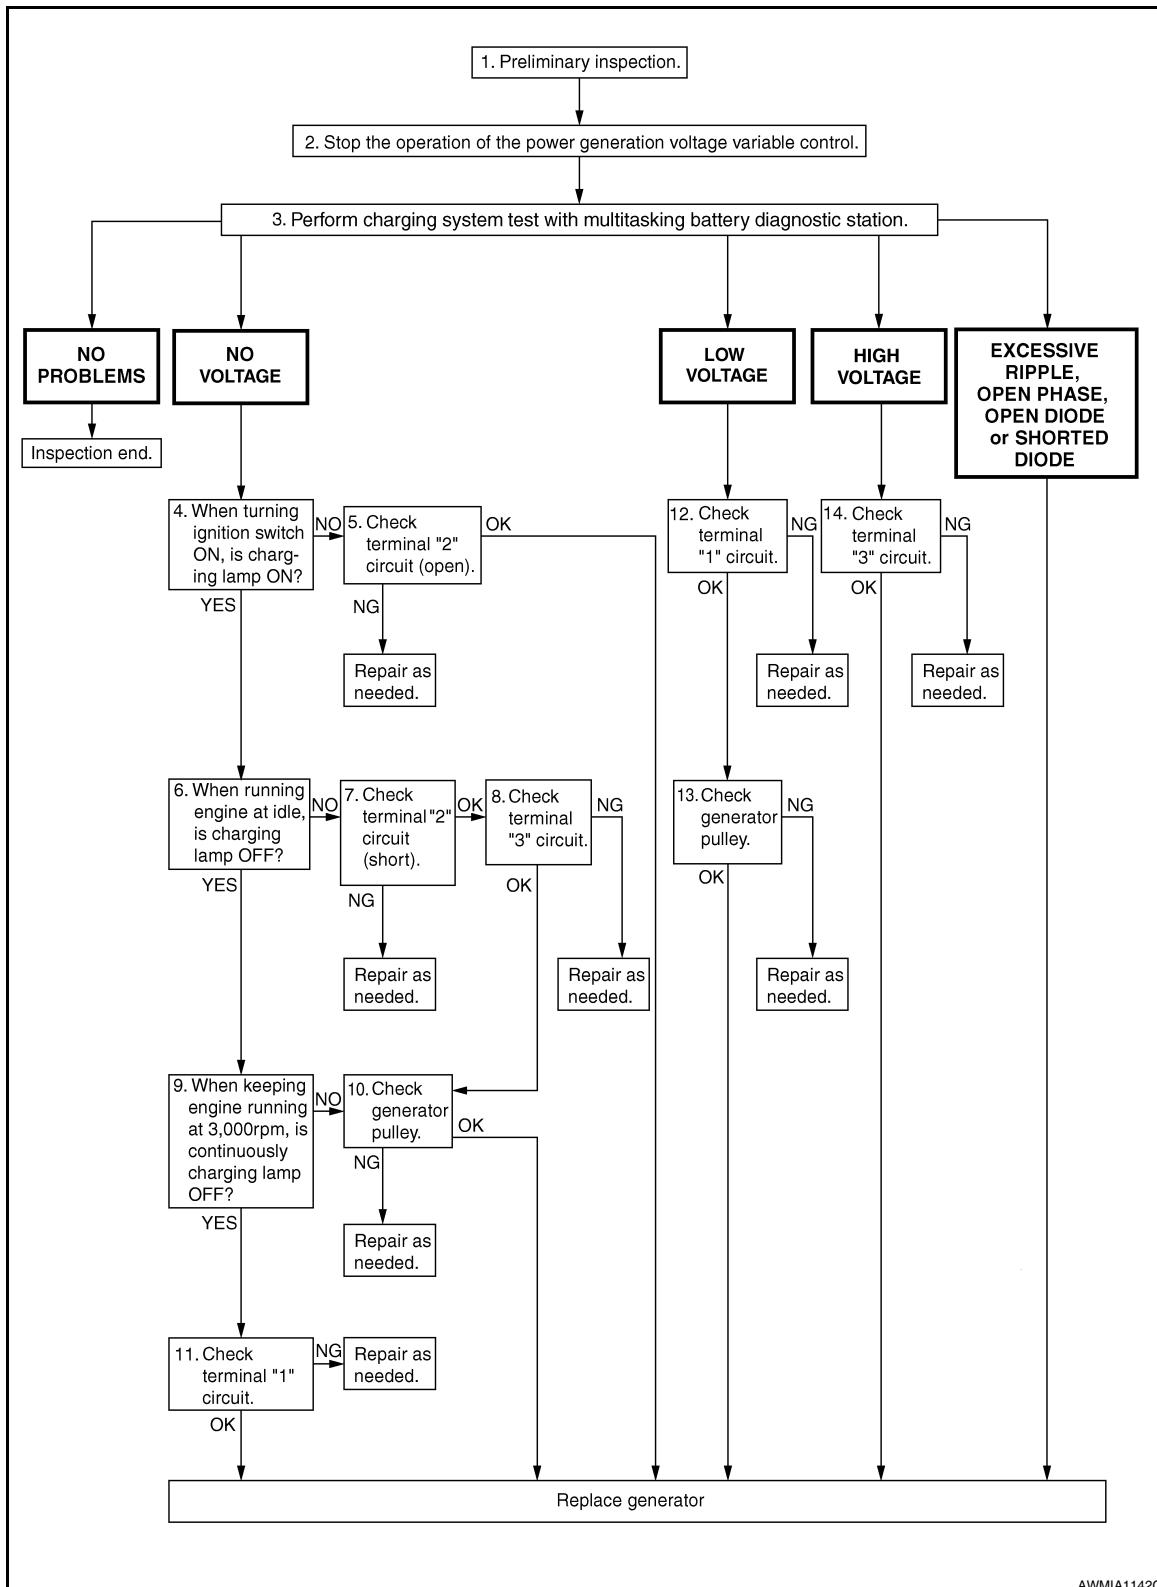

AWMIA1142GB


CHARGING SYSTEM

< FUNCTION DIAGNOSIS >

FUNCTION DIAGNOSIS CHARGING SYSTEM

System Diagram

INFOID:000000003789325

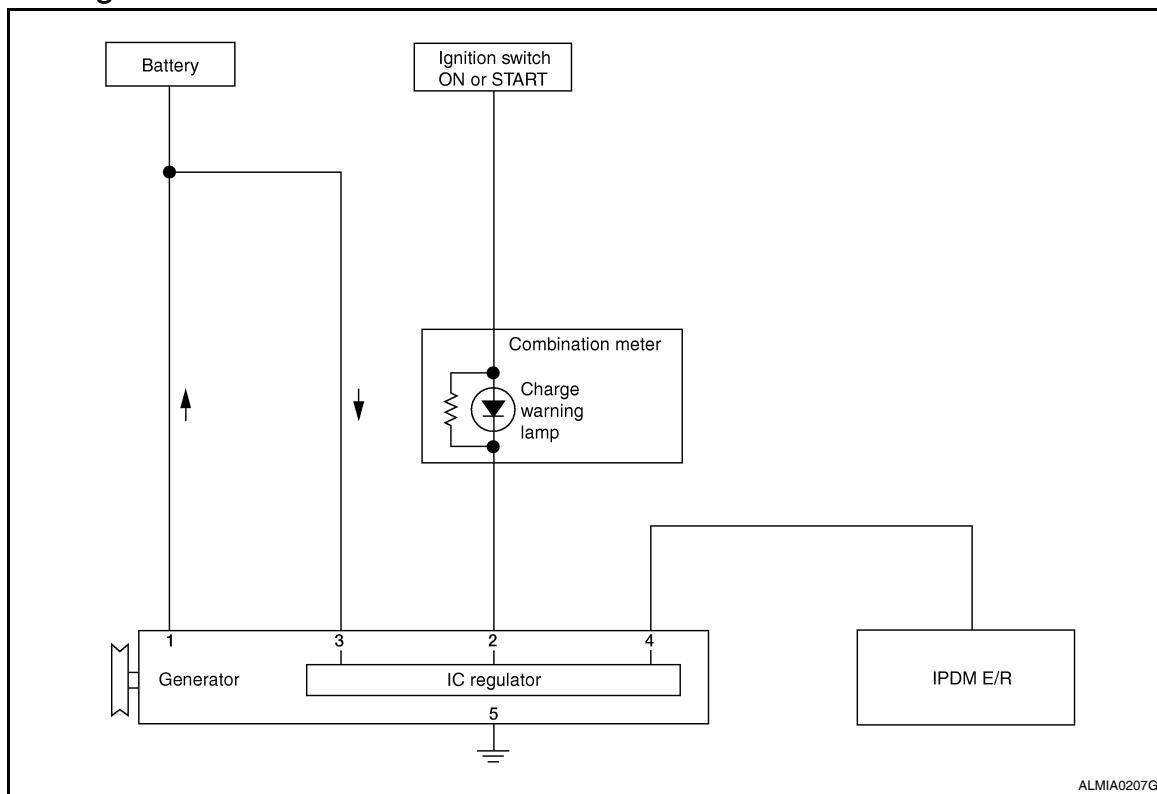

ALMIA0207GB

System Description

INFOID:000000003789326

The generator provides DC voltage to operate the vehicle's electrical system and to keep the battery charged. The voltage output is controlled by the IC regulator.

Component Description

INFOID:000000003789327

Component part		Description
Generator	Terminal "1"	Refer to CHG-10, "Description" .
	Terminal "2"	Refer to CHG-12, "Description" .
	Terminal "3"	Refer to CHG-11, "Description" .
	Terminal "4"	Used for the power generation voltage variable control system. Refer to CHG-6, "System Description" .
Combination meter (Charge warning lamp)		The IC regulator warning function activates to illuminate the charge warning lamp if any of the following symptoms occur while generator is operating: <ul style="list-style-type: none">• Excessive voltage is produced.• No voltage is produced.
IPDM E/R		Used for the power generation voltage variable control system. Refer to CHG-6, "System Description" .

A

B

C

D

E

F

G

H

I

J

K

L

CHG

N

O

P


POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM

< FUNCTION DIAGNOSIS >

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM

System Diagram

INFOID:0000000003789328

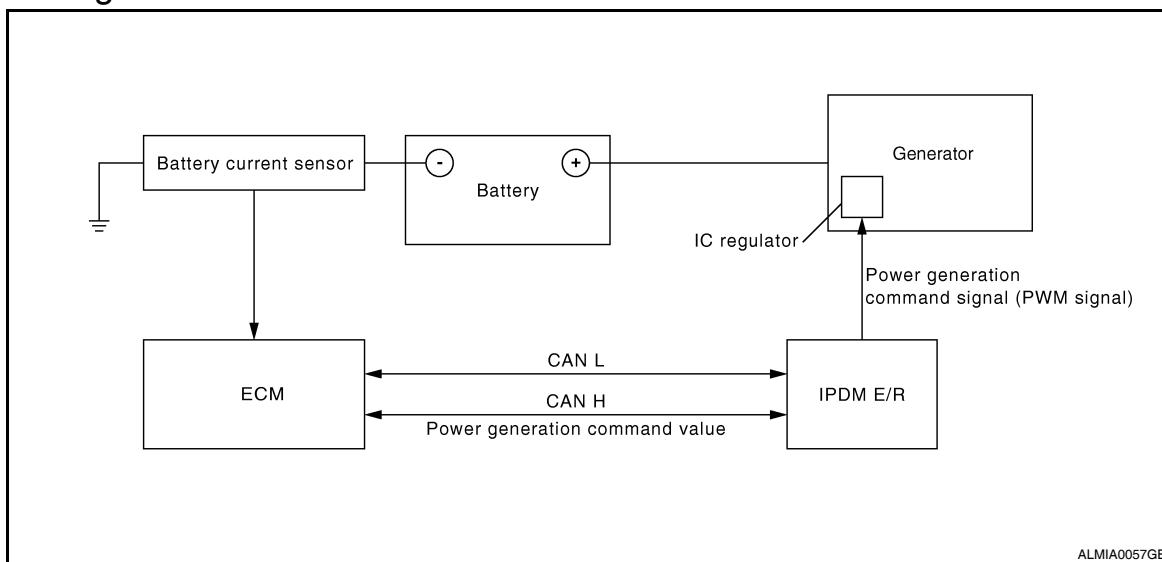

ALMIA0057GB

System Description

INFOID:0000000003789329

Power generation variable voltage control system has been adopted. By varying the voltage to the generator, engine load due to power generation of the generator is reduced and fuel consumption is decreased.

NOTE:

When any malfunction is detected in the power generation variable voltage control system, power generation is performed according to the characteristic of the IC regulator in the generator.

Component Description

INFOID:0000000003789330

Component part	Description
Battery current sensor	The battery current sensor is installed on the battery cable at the negative terminal. The battery current sensor detects the charging/discharging current of the battery and sends a voltage signal to the ECM according to the current value detected.
ECM	The battery current sensor detects the charging/discharging current of the battery. The ECM judges the battery condition based on this signal. The ECM judges whether to request more output via the power generation voltage variable control according to the battery condition. When performing the power generation voltage variable control, the ECM calculates the target power generation voltage according to the battery condition and sends the calculated value as the power generation command value to the IPDM E/R.
IPDM E/R	The IPDM E/R converts the received power generation command value into a pulse width modulated (PWM) command signal and sends it to the IC regulator.
Generator (IC regulator)	The IC regulator controls the power generation voltage by the target power generation voltage based on the received PWM command signal. When there is no PWM command signal, the generator performs the normal power generation according to the characteristic of the IC regulator.

CHARGING SYSTEM PRELIMINARY INSPECTION

< COMPONENT DIAGNOSIS >

COMPONENT DIAGNOSIS

CHARGING SYSTEM PRELIMINARY INSPECTION

Inspection Procedure

INFOID:000000003789331

1.CHECK BATTERY TERMINALS CONNECTION

Check if battery terminals are clean and tight.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair battery terminals connection.

2.CHECK FUSE

Check for blown fuse and fusible link.

Unit	Power source (Power supply terminals)	Fuse or Fusible Link
Generator	Battery (terminal 3)	Fuse 30
	Battery (terminal 1)	Fusible Link A
Combination meter	Ignition switch ON (terminal 2)	Fuse 14

Is the inspection result normal?

YES >> GO TO 3.

NO >> Be sure to eliminate cause of malfunction before installing new fuse or fusible link.

3.CHECK GENERATOR GROUND TERMINAL CONNECTION

Verify connector E206 terminal 5 (generator ground harness) is clean and tight.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair connection.

4.CHECK DRIVE BELT TENSION

Check drive belt tension. Refer to [EM-13, "Checking Drive Belts".](#)

Is the inspection result normal?

YES >> Inspection End.

NO >> Repair as needed.

A

B

C

D

E

F

G

H

I

J

K

L

CHG

N

O

P

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM OPERATION INSPECTION

< COMPONENT DIAGNOSIS >

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM OPERATION INSPECTION

Inspection Procedure

INFOID:000000003789332

CAUTION:

When performing this inspection, always use a charged battery that has completed the battery inspection. (When the charging rate of the battery is low, the response speed of the voltage change will become slow. This can cause an incorrect inspection.)

1. CHECK ECM (CONSULT-III)

Perform ECM self-diagnosis with CONSULT-III. Refer to [EC-67, "CONSULT-III Function \(ENGINE\)".](#)

Self-diagnostic results content

No malfunction detected>> GO TO 2.

Malfunction detected>> Check applicable parts, and repair or replace corresponding parts.

2. CHECK OPERATION OF POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM

1. Connect CONSULT-III and start the engine.
2. The selector lever is in "P" or "N" position and all of the electric loads and A/C, etc. are turned OFF.
3. Select "ALTERNATOR DUTY" in "Active Test" of "ENGINE", and then check the value of "BATTERY VOLT" monitor when DUTY value of "ALTERNATOR DUTY" is set to 40.0 %.

"BATTERY VOLT"

2 seconds after setting the DUTY value of "ALTERNATOR DUTY" to 40.0 % : 12 - 13.6 V

4. Check the value of "BATTERY VOLT" monitor when DUTY value of "ALTERNATOR DUTY" is set to 80.0%.

"BATTERY VOLT"

20 seconds after setting the DUTY value of "ALTERNATOR DUTY" to 80.0 % : +0.5 V or more against the value of "BATTERY VOLT" monitor when DUTY value is 40.0 %

Is the measurement value within specification?

YES >> Inspection End.

NO >> GO TO 3.

3. CHECK IPDM E/R (CONSULT-III)

Perform IPDM E/R self-diagnosis with CONSULT-III. Refer to [PCS-13, "CONSULT - III Function \(IPDM E/R\)".](#)

Self-diagnostic results content


No malfunction detected>> GO TO 4.

Malfunction detected>> Check applicable parts, and repair or replace corresponding parts.

4. CHECK HARNESS BETWEEN GENERATOR AND IPDM E/R

1. Turn ignition switch OFF.
2. Disconnect generator connector E205 and IPDM E/R connector E122.
3. Check continuity between generator harness connector E205 (A) terminal 4 and IPDM E/R harness connector E122 (B) terminal 37.

A		B		Continuity
Connector	Terminal	Connector	Terminal	
E205	4	E122	37	Yes

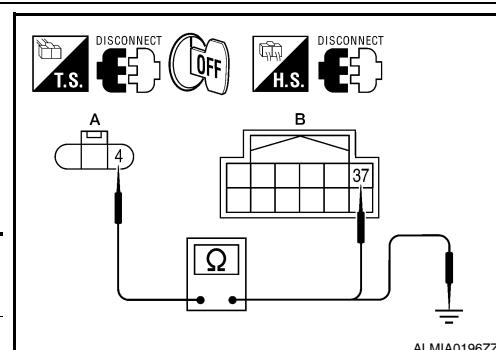

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM OPERATION INSPECTION

< COMPONENT DIAGNOSIS >

4. Check continuity between generator harness connector E122 (A) terminal 4 and ground.

A		—	Continuity
Connector	Terminal		
E205	4	Ground	No

Are the continuity test results as specified?

- YES >> Replace IPDM E/R. Refer to [PCS-30, "Removal and Installation of IPDM E/R"](#).
NO >> Repair harness or connector between IPDM E/R and generator.

A

B

C

D

E

F

G

H

I

J

K

L

CHG

N

O

P

B TERMINAL CIRCUIT

< COMPONENT DIAGNOSIS >

B TERMINAL CIRCUIT

Description

INFOID:0000000003789333

The terminal "1" (B) circuit supplies power to charge the battery and operate the vehicles electrical system.

Diagnosis Procedure

INFOID:0000000003789334

1. CHECK TERMINAL "1" CONNECTION

1. Turn ignition switch OFF.
2. Verify terminal "1" is clean and tight.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair terminal "1" connection. Confirm repair by performing complete Starting/Charging system test. Refer to diagnostic station instruction manual.

2. CHECK TERMINAL "1" CIRCUIT


Check voltage between generator connector E204 terminal 1 and ground.

(+) Connector		(-) Terminal	Voltage
E204	1	Ground	Battery voltage

Is voltage reading as specified?

YES >> GO TO 3.

NO >> Check harness for open between generator and fusible link.

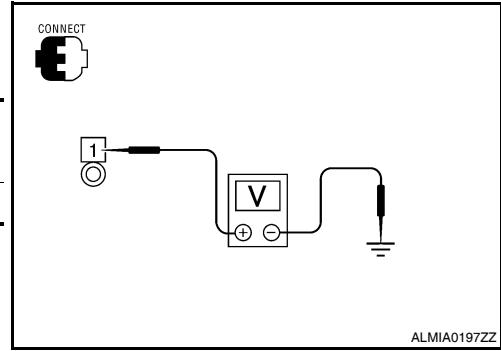

ALMIA0197ZZ

3. CHECK TERMINAL "1" CONNECTION (VOLTAGE DROP TEST)


1. Start engine, then engine running at idle and warm.
2. Check voltage between battery positive terminal and generator connector E204 terminal 1.

(+) Connector		(-) Terminal	Voltage
E204	1	Battery positive terminal	Less than 0.2V

Is the voltage reading as specified?

YES >> Terminal "1" circuit is normal. Refer to [CHG-4, "Work Flow"](#).

NO >> Check harness between battery and generator for high resistance.

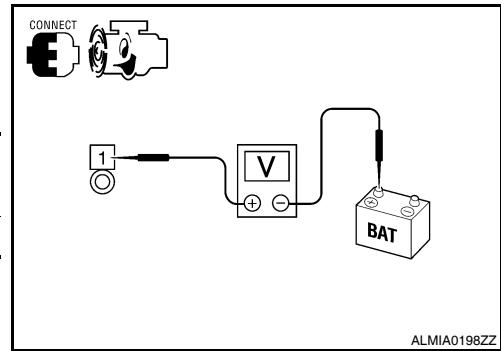

ALMIA0198ZZ

L TERMINAL CIRCUIT

< COMPONENT DIAGNOSIS >

L TERMINAL CIRCUIT

Description

INFOID:0000000003789335

The terminal "2" (L) circuit controls the charge warning lamp. The charge warning lamp illuminates when the ignition switch is set to ON or START. When the generator is providing sufficient voltage with the engine running, the charge warning lamp will go off. If the charge warning lamp illuminates with the engine running, a malfunction is indicated.

Diagnosis Procedure

INFOID:0000000003789336

1. CHECK CHARGE WARNING LAMP CIRCUIT CONNECTION

Verify generator connector E205 terminal 2 is clean and tight.

Is the connection secure?

YES >> GO TO 2.

NO >> Repair the connection. Confirm repair by performing complete Starting/Charging system test.
Refer to diagnostic station instruction manual.


2. CHECK CHARGE WARNING LAMP CIRCUIT

1. Disconnect generator connector E205.
2. Apply ground to generator harness connector E205 terminal 2 with the ignition switch in the ON position.

Charge lamp should illuminate

Does the charge lamp illuminate?

YES >> Check generator function. Refer to [CHG-4, "Work Flow"](#).
NO >> GO TO 3.

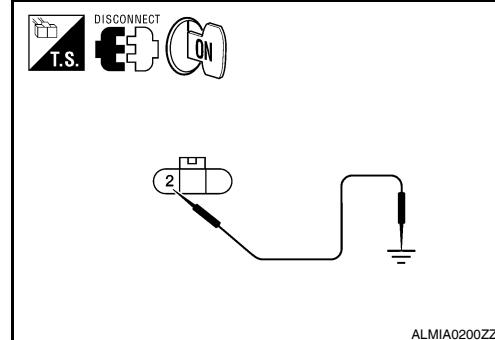

3. CHECK HARNESS CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect the generator connector E205 and combination meter connector M25.
3. Check continuity between generator harness connector E205 (A) terminal 2 and combination meter harness connector M25 (B) terminal 45.


A		B		Continuity
Connector	Terminal	Connector	Terminal	
E205	2	M25	45	Yes

4. Check continuity between generator harness connector E205 (A) terminal 2 and ground.

A		—	Continuity
Connector	Terminal		
E205	2	Ground	No

Are the continuity results as specified?

YES >> Replace the combination meter. Refer to [MWI-103, "Removal and Installation"](#).
NO >> Repair the harness or connector.

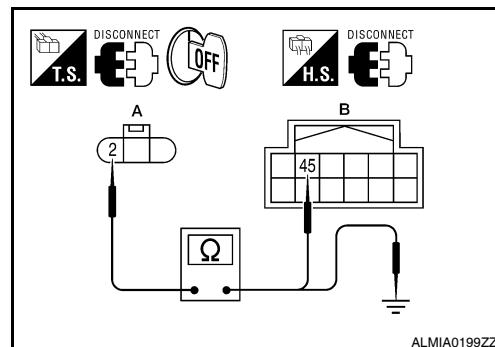

S TERMINAL CIRCUIT

< COMPONENT DIAGNOSIS >

S TERMINAL CIRCUIT

Description

INFOID:0000000003789337

The output voltage of the generator is controlled by the IC regulator at terminal "3" (S) detecting the input voltage. Terminal "3" circuit detects the battery voltage to adjust the generator output voltage with the IC regulator.

Diagnosis Procedure

INFOID:0000000003789338

1. CHECK VOLTAGE REGULATOR CIRCUIT CONNECTION

Check to see if connector E205 terminal 3 is clean and tight.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair terminal connection. Confirm repair by performing complete Starting/Charging system test.
Refer to diagnostic station instruction manual.

2. CHECK VOLTAGE REGULATOR CIRCUIT

Check voltage between generator harness connector E205 terminal 3 and ground.


3 - ground

Battery voltage

Does battery voltage exist?

YES >> Refer to [CHG-4, "Work Flow"](#).

NO >> Check harness for open between generator and fuse.

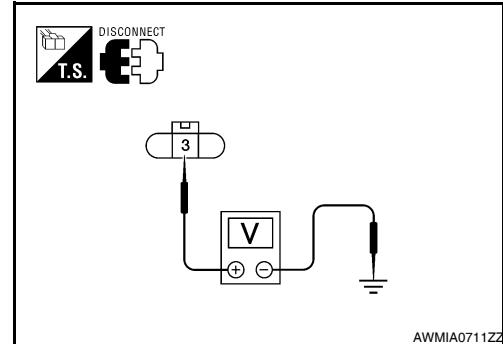


CHARGING SYSTEM

< COMPONENT DIAGNOSIS >

CHARGING SYSTEM

Wiring Diagram

INFOID:0000000003789339

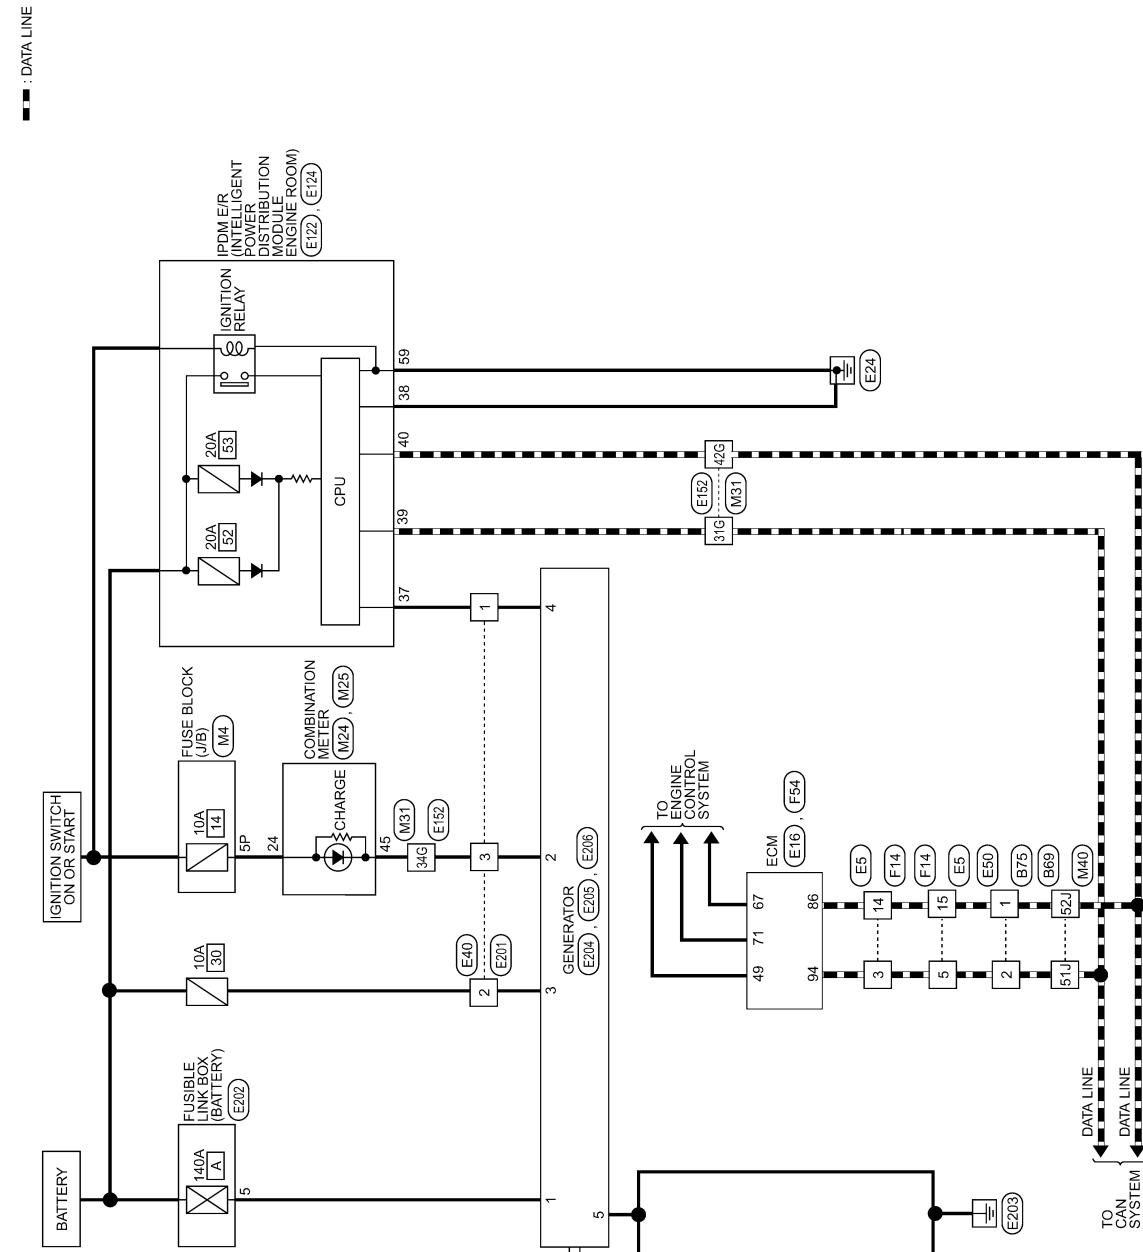


CHARGING SYSTEM

CHARGING SYSTEM

< COMPONENT DIAGNOSIS >

 CHARGING SYSTEM CONNECTORS

Connector No.	M4	Connector No.	M24
Connector Name	FUSE BLOCK (J/B)	Connector Name	COMBINATION METER
Connector Color	WHITE	Connector Color	WHITE
			
Terminal No.	Color of Wire	Signal Name	
5P	O/L	RUN_START	
Connector No.	M31	Connector No.	M40
Connector Name	WIRE TO WIRE	Connector Name	WIRE TO WIRE
Connector Color	WHITE	Connector Color	WHITE
			
Terminal No.	Color of Wire	Signal Name	
24	O/L		
Connector No.	M2	Connector No.	E5
Connector Name	WIRE TO WIRE	Connector Name	WIRE TO WIRE
Connector Color	WHITE	Connector Color	WHITE
			
Terminal No.	Color of Wire	Signal Name	
45	BR/W	CHARGE_IN	
Connector No.	M25	Connector Name	COMBINATION METER
Connector Color	WHITE	Connector Color	WHITE
			
Terminal No.	Color of Wire	Signal Name	
31G	L	-	
34G	BR/W	-	
42G	P	-	

AAMIA0073GB

CHARGING SYSTEM

< COMPONENT DIAGNOSIS >


Connector No.	E40
Connector Name	WIRE TO WIRE
Connector Color	BLACK



Connector No.	E16
Connector Name	ECM
Connector Color	BLACK



Connector No.	E16
Connector Name	ECM
Connector Color	BLACK

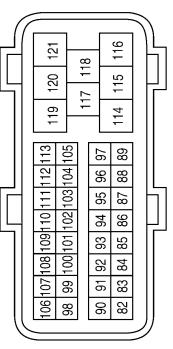


Terminal No.	Color of Wire	Signal Name
86	P	CAN-L
94	L	CAN-H

Terminal No.	Color of Wire	Signal Name
1	Y	-
2	Y/B	-
3	BR/W	-

CHG-15

Terminal No.	Color of Wire	Signal Name
1	P	-
2	L	-

Terminal No.	Color of Wire	Signal Name
1	Y	-
2	Y/B	-
3	BR/W	-

 

Terminal No.	Color of Wire	Signal Name
37	Y	ALT_C_CONT
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L

Terminal No.	Color of Wire	Signal Name
59	B	GND (POWER)

AAMIA0074GB

P

Z

CHG

K





F G H I J

M N

A B C D







CHARGING SYSTEM

< COMPONENT DIAGNOSIS >

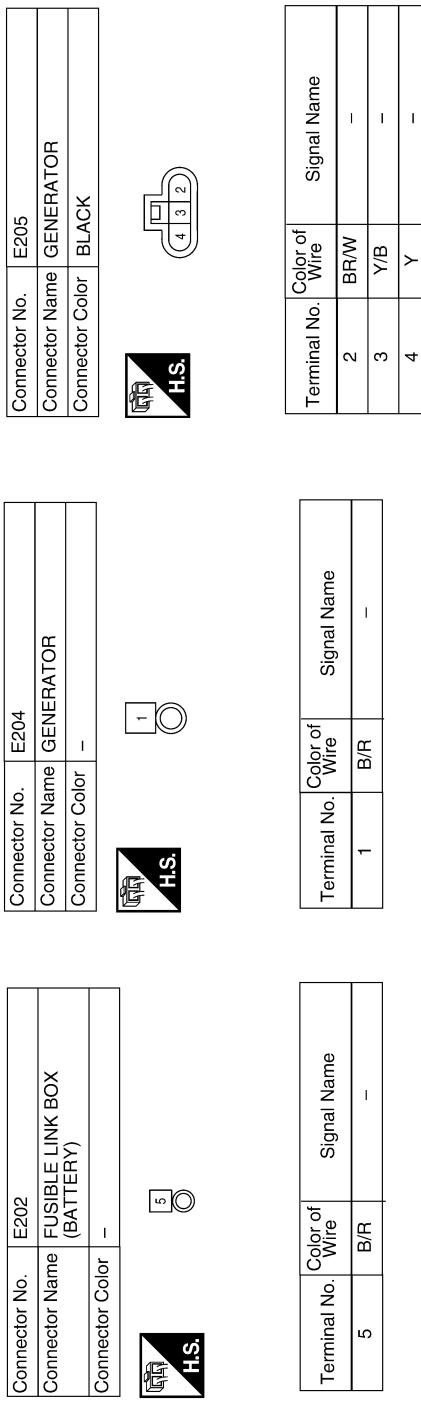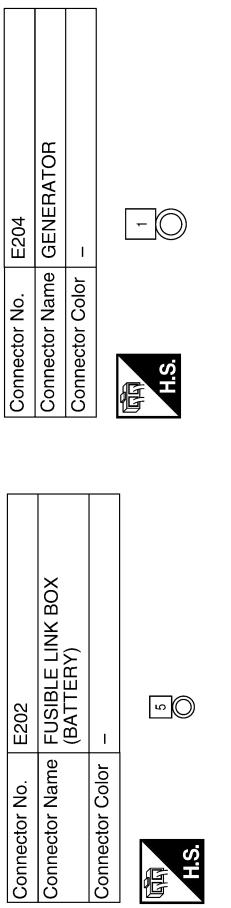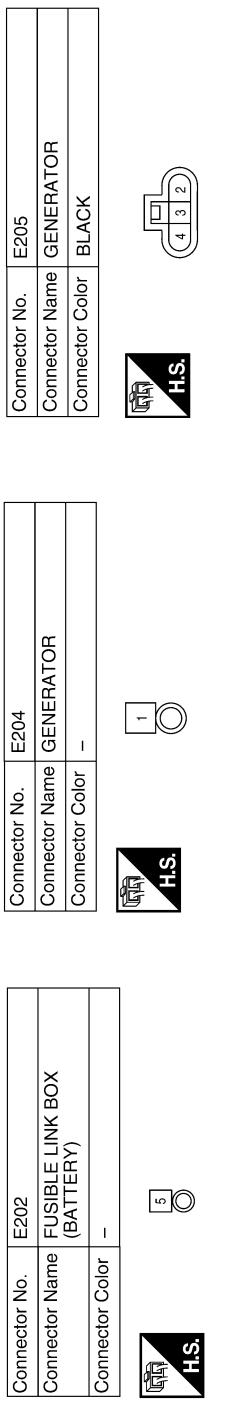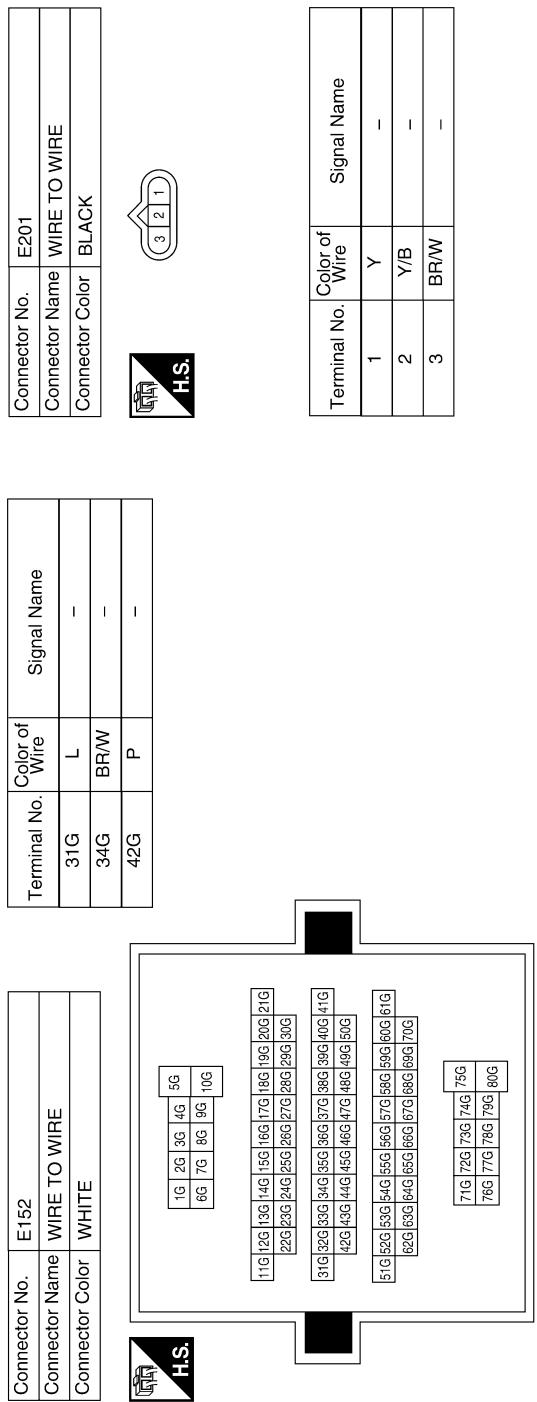

CHARGING SYSTEM
 
< COMPONENT DIAGNOSIS >
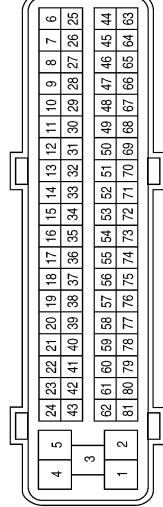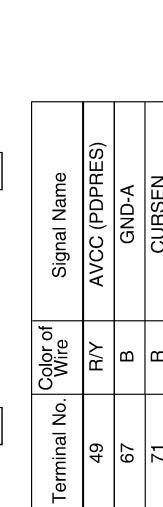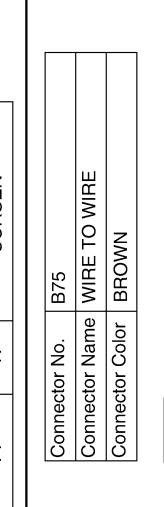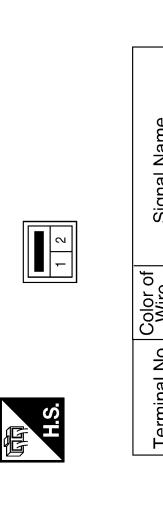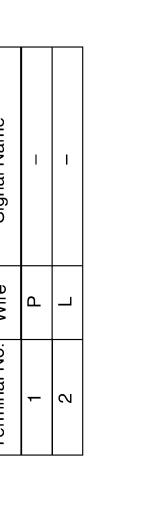
<table border="1"> <tr><td>Connector No.</td><td>E206</td></tr> <tr><td>Connector Name</td><td>GENERATOR</td></tr> <tr><td>Connector Color</td><td>-</td></tr> </table> <p> </p>	Connector No.	E206	Connector Name	GENERATOR	Connector Color	-	<table border="1"> <tr><td>Connector No.</td><td>F14</td></tr> <tr><td>Connector Name</td><td>WIRE TO WIRE</td></tr> <tr><td>Connector Color</td><td>WHITE</td></tr> </table> <p> </p>	Connector No.	F14	Connector Name	WIRE TO WIRE	Connector Color	WHITE	 <table border="1"> <thead> <tr> <th>Terminal No.</th> <th>Color of Wire</th> <th>Signal Name</th> </tr> </thead> <tbody> <tr><td>3</td><td>L</td><td>-</td></tr> <tr><td>5</td><td>L</td><td>-</td></tr> <tr><td>14</td><td>P</td><td>-</td></tr> <tr><td>15</td><td>P</td><td>-</td></tr> <tr><td>71</td><td>R</td><td>CURSEN</td></tr> </tbody> </table>	Terminal No.	Color of Wire	Signal Name	3	L	-	5	L	-	14	P	-	15	P	-	71	R	CURSEN
Connector No.	E206																															
Connector Name	GENERATOR																															
Connector Color	-																															
Connector No.	F14																															
Connector Name	WIRE TO WIRE																															
Connector Color	WHITE																															
Terminal No.	Color of Wire	Signal Name																														
3	L	-																														
5	L	-																														
14	P	-																														
15	P	-																														
71	R	CURSEN																														
<table border="1"> <tr><td>Connector No.</td><td>B69</td></tr> <tr><td>Connector Name</td><td>WIRE TO WIRE</td></tr> <tr><td>Connector Color</td><td>WHITE</td></tr> </table> <p></p>	Connector No.	B69	Connector Name	WIRE TO WIRE	Connector Color	WHITE	 <table border="1"> <thead> <tr> <th>Terminal No.</th> <th>Color of Wire</th> <th>Signal Name</th> </tr> </thead> <tbody> <tr><td>51J</td><td>L</td><td>-</td></tr> <tr><td>52J</td><td>P</td><td>-</td></tr> </tbody> </table> <p></p>	Terminal No.	Color of Wire	Signal Name	51J	L	-	52J	P	-	 <table border="1"> <thead> <tr> <th>Terminal No.</th> <th>Color of Wire</th> <th>Signal Name</th> </tr> </thead> <tbody> <tr><td>49</td><td>RY</td><td>AVCC (PDPRESS)</td></tr> <tr><td>67</td><td>B</td><td>GND-A</td></tr> <tr><td>71</td><td>R</td><td>CURSEN</td></tr> </tbody> </table> <p></p>	Terminal No.	Color of Wire	Signal Name	49	RY	AVCC (PDPRESS)	67	B	GND-A	71	R	CURSEN			
Connector No.	B69																															
Connector Name	WIRE TO WIRE																															
Connector Color	WHITE																															
Terminal No.	Color of Wire	Signal Name																														
51J	L	-																														
52J	P	-																														
Terminal No.	Color of Wire	Signal Name																														
49	RY	AVCC (PDPRESS)																														
67	B	GND-A																														
71	R	CURSEN																														
<table border="1"> <tr><td>Connector No.</td><td>B75</td></tr> <tr><td>Connector Name</td><td>WIRE TO WIRE</td></tr> <tr><td>Connector Color</td><td>BROWN</td></tr> </table> <p></p>	Connector No.	B75	Connector Name	WIRE TO WIRE	Connector Color	BROWN	 <table border="1"> <thead> <tr> <th>Terminal No.</th> <th>Color of Wire</th> <th>Signal Name</th> </tr> </thead> <tbody> <tr><td>1</td><td>P</td><td>-</td></tr> <tr><td>2</td><td>L</td><td>-</td></tr> </tbody> </table> <p></p>	Terminal No.	Color of Wire	Signal Name	1	P	-	2	L	-	 <table border="1"> <thead> <tr> <th>Terminal No.</th> <th>Color of Wire</th> <th>Signal Name</th> </tr> </thead> <tbody> <tr><td>1</td><td>P</td><td>-</td></tr> <tr><td>2</td><td>L</td><td>-</td></tr> </tbody> </table>	Terminal No.	Color of Wire	Signal Name	1	P	-	2	L	-						
Connector No.	B75																															
Connector Name	WIRE TO WIRE																															
Connector Color	BROWN																															
Terminal No.	Color of Wire	Signal Name																														
1	P	-																														
2	L	-																														
Terminal No.	Color of Wire	Signal Name																														
1	P	-																														
2	L	-																														

AAMIA0076GB

A B C D E F G H I J K L M N O P Q R S T Z

CHARGING SYSTEM

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

CHARGING SYSTEM

Symptom Table

INFOID:000000003789340

Symptom	Reference
Battery discharged	Refer to CHG-4, "Work Flow" .
The charge warning lamp does not illuminate when the ignition switch is set to ON.	
The charge warning lamp does not turn OFF after the engine starts.	
The charging warning lamp turns ON when increasing the engine speed.	

< ON-VEHICLE REPAIR >

ON-VEHICLE REPAIR


GENERATOR

Removal and Installation

INFOID:000000003789341

REMOVAL

1. Disconnect the negative battery terminal.
2. Remove the fan shroud. Refer to [CO-15, "Removal and Installation"](#).
3. Remove the drive belt. Refer to [EM-13, "Removal and Installation"](#).
4. Remove lower bracket, using power tools.
5. Remove the generator upper bolt, using power tools.
6. Remove the generator harness terminal nut connectors.
7. Remove the generator.

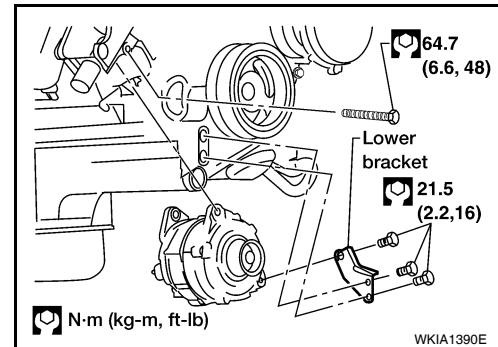

INSTALLATION

Installation is in the reverse order of removal.

- Install the generator and check the tension of the drive belt. Refer to [EM-13, "Checking Drive Belts"](#).

CAUTION:

Tighten terminal nut carefully.

Terminal nut

: 10.8 N·m (1.1 kg-m, 8 ft-lb)

A

B

C

D

E

F

G

H

I

J

K

L

CHG

N

O

P

GENERATOR

< SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

GENERATOR

Generator

INFOID:000000003789342

Model	TG15C13
Manufacturer	Valeo
Nominal rating	14V-130A
Ground polarity	Negative
Minimum revolution under no-load	1,200 rpm
Hot output current (When 13.5 volts is applied)	More than 52A/1,500 rpm More than 82A/1,800 rpm More than 115A/2,500 rpm More than 130A/5,000 rpm
Regulated output voltage	13.5V @ 5,000 rpm @ 20°C
Adjustment range of power generation variable voltage control	11.4-15.6V