

SECTION **IDX**  
ALPHABETICAL INDEX

- A
- B
- C
- D
- E
- F
- G
- H
- I
- J
- K
- L

IDX

# ALPHABETICAL INDEX

## A

A/C air flow ..... [MTC-22](#)  
A/C component layout ..... [MTC-17](#)  
A/C compressor mounting ..... [MTC-85](#)  
A/C compressor precaution ..... [MTC-8](#)  
A/C compressor special service tool ..... [MTC-12](#)  
A/C control operation (manual A/C) ..... [MTC-21](#)  
A/C controller ..... [MTC-62](#)  
A/C evaporator ..... [MTC-91](#)  
A/C HFC134a (R134a) system precaution ..... [MTC-4](#)  
A/C HFC134a (R134a) system service procedure ..... [MTC-81](#)  
A/C HFC134a (R134a) system service tools .. [MTC-12](#)  
A/C HFC134a system service equipment precaution ... [MTC-8](#)  
A/C lubricant (R134a) ..... [MTC-5](#), [MTC-18](#)  
A/C lubrication oil ..... [MTC-97](#)  
A/C operational check ..... [MTC-33](#)  
A/C service data specification ..... [MTC-97](#)  
A/C trouble diagnoses (manual A/C) ..... [MTC-24](#)  
A/C unit assembly ..... [MTC-65](#)  
A/C, M - Wiring diagram ..... [MTC-29](#)  
A/F - Wiring diagram ... [EC-223](#), [EC-229](#), [EC-235](#), [EC-242](#), [EC-547](#)  
A/FH - Wiring diagram ..... [EC-162](#)  
A/T fluid checking ..... [AT-16](#), [MA-22](#)  
A/T fluid replacement ..... [AT-17](#), [MA-23](#)  
A/T fluid temperature sensor ..... [AT-102](#)  
A/T IND - Wiring diagram ..... [DI-38](#)  
A/T indicator ..... [DI-37](#)  
A/T shift control system ..... [AT-223](#)  
A/T shift lock system ..... [AT-229](#)  
A/T shift lock system - Wiring diagram ..... [AT-230](#)  
A/T trouble diagnoses ..... [AT-43](#)  
ABS - Wiring diagram ..... [BRC-13](#)  
ABS (anti-lock brake system) ..... [BRC-5](#)  
ABS sensor rotor ..... [RAX-4](#)  
Accelerator pedal position (APP) sensor . [EC-518](#), [EC-524](#), [EC-537](#)  
Accelerator pedal released position learning ..... [EC-77](#)  
Air bag ..... [SRS-3](#)  
Air bleeding (hydraulic clutch) ..... [CL-8](#)  
Air cleaner filter replacement ..... [MA-16](#)  
Air conditioner cut control ..... [EC-27](#)  
Air fuel ratio sensor 1 .. [EC-220](#), [EC-227](#), [EC-233](#), [EC-239](#), [EC-545](#)  
Air fuel ratio sensor 1 heater ..... [EC-161](#)  
Air mix door control linkage adjustment ..... [MTC-71](#)  
Angular tightening application ..... [EM-4](#)  
Anti-lock brake system - See ABS ..... [BRC-5](#)  
Anti-lock brake system - Wiring diagram ..... [BRC-13](#)  
APPS1 - Wiring diagram ..... [EC-520](#)  
APPS2 - Wiring diagram ..... [EC-526](#)  
APPS3 - Wiring diagram ..... [EC-539](#)  
ASC/BS - Wiring diagram ..... [EC-480](#)  
ASC/SW - Wiring diagram ..... [EC-473](#)  
ASCBOF - Wiring diagram ..... [EC-555](#)  
ASCD ..... [EC-28](#)

ASCD brake switch ..... [EC-478](#), [EC-554](#)  
ASCD clutch switch ..... [EC-478](#), [EC-554](#)  
ASCD steering switch ..... [EC-471](#)  
ASCIND - Wiring diagram ..... [EC-565](#)  
AUDIO - Wiring diagram ..... [AV-9](#)  
Auto anti-dazzling inside mirror ..... [GW-68](#)  
Axle ..... [MA-26](#)

## B

BA/FTS - Wiring diagram ..... [AT-166](#)  
BACK/L - Wiring diagram ..... [LT-75](#)  
Back-up lamp ..... [LT-75](#), [LT-92](#)  
Back-up lamp switch (M/T) ..... [MT-11](#)  
Basic inspection ..... [EC-70](#)  
Battery ..... [SC-4](#)  
Battery/Starting/Charging System Tester [SC-6](#), [SC-16](#), [SC-23](#)  
Baulk ring (M/T) ..... [MT-18](#)  
BCM (Body control module) ..... [BCS-3](#)  
Blower motor ..... [MTC-37](#), [MTC-69](#)  
Blower relay ..... [MTC-38](#)  
Blower resistor ..... [MTC-73](#)  
Body alignment ..... [BL-286](#)  
Body component parts ..... [BL-266](#)  
Body construction ..... [BL-284](#)  
Body exterior paint color ..... [BL-264](#)  
Body repair ..... [BL-264](#)  
Body sealing ..... [BL-278](#)  
Brake booster ..... [BR-19](#)  
Brake fluid level ..... [MA-24](#)  
Brake inspection ..... [MA-25](#)  
Brake lines and cables inspection ..... [MA-24](#)  
Brake pedal ..... [BR-6](#)  
Brake switch ..... [EC-493](#)  
BRK/SW - Wiring diagram ..... [EC-494](#)  
Bulb specifications ..... [LT-119](#)  
Bumper, front ..... [EI-14](#)

## C

Cabin air filter ..... [MA-20](#)  
Camshaft ..... [EM-47](#)  
Camshaft inspection ..... [EM-49](#)  
Camshaft position sensor (PHASE) ..... [EC-327](#)  
CAN - Wiring diagram ..... [EC-152](#), [AT-91](#), [CVT-67](#)  
CAN communication [EC-30](#), [EC-151](#), [EC-154](#), [AT-31](#), [AT-90](#), [CVT-25](#), [CVT-66](#)  
CAN communication (EPS) ..... [STC-6](#)  
CHARGE - Wiring diagram ..... [SC-22](#)  
Charging system ..... [SC-21](#)  
Chassis and body maintenance ..... [MA-8](#), [MA-20](#)  
CHIME - Wiring diagram ..... [DI-50](#)  
Circuit breaker ..... [PG-16](#)  
Closed loop control ..... [EC-24](#), [EC-447](#)  
Clutch cover ..... [CL-13](#)  
Clutch disc ..... [CL-13](#)  
Clutch master cylinder ..... [CL-9](#)  
Clutch pedal ..... [CL-5](#)



# ALPHABETICAL INDEX

EVAP control system (small leak) diagnosis .. [EC-346](#),  
[EC-403](#), [EC-411](#)  
EVAP control system pressure sensor .... [EC-382](#), [EC-386](#), [EC-394](#)  
EVAP control system purge flow monitoring diagnosis  
[EC-340](#)  
EVAP vapor lines inspection ..... [MA-19](#)  
Evaporative emission (EVAP) system ..... [EC-31](#)  
Evaporator ..... [MTC-91](#)  
Exhaust manifold ..... [EM-21](#)  
Exhaust system inspection ..... [MA-20](#), [MA-22](#)  
Expansion valve ..... [MTC-92](#)

## F

F/FOG - Wiring diagram ..... [LT-43](#)  
F/PUMP - Wiring diagram ..... [EC-576](#)  
Final drive (FF M/T) ..... [MT-22](#)  
Floor trim ..... [EI-44](#)  
Flow charts ..... [GI-27](#)  
Fluid temperature sensor (CVT) ..... [CVT-82](#)  
Fluid temperature sensor (A/T) ..... [AT-102](#)  
Fluids ..... [MA-11](#)  
Fluorescent leak detector ..... [MTC-93](#)  
Flywheel (clutch) ..... [CL-13](#)  
Flywheel runout ..... [EM-104](#)  
Fork rod (M/T) ..... [MT-21](#)  
Freeze frame data ..... [EC-52](#), [EC-116](#)  
Front bumper ..... [EI-14](#)  
Front door ..... [GW-44](#)  
Front passenger air bag ..... [SRS-46](#)  
Front seat belt ..... [SB-3](#)  
Front seat belt pre-tensioner ..... [SB-2](#), [SRS-3](#), [SRS-51](#)  
Front washer ..... [WW-4](#)  
Front wiper ..... [WW-4](#)  
FTS - Wiring diagram ..... [AT-99](#), [CVT-83](#)  
FTTS - Wiring diagram ..... [EC-293](#), [EC-298](#)  
FUEL - Wiring diagram ..... [EC-278](#), [EC-286](#)  
Fuel cut control (at no load high engine speed) . [EC-26](#)  
Fuel gauge ..... [DI-5](#)  
Fuel injection system ..... [EC-276](#), [EC-284](#)  
Fuel injector ..... [EC-569](#)  
Fuel injector and fuel tube ..... [EM-33](#)  
Fuel level sensor ..... [EC-420](#), [EC-422](#), [EC-424](#)  
Fuel line inspection ..... [FL-4](#), [MA-15](#)  
Fuel precautions ..... [GI-5](#)  
Fuel pressure check ..... [EC-81](#)  
Fuel pressure release ..... [EC-81](#)  
Fuel pump ..... [EC-575](#)  
Fuel systemCommercial Service Tools ..... [FL-3](#)  
Fuel systemPREPARATION ..... [FL-3](#)  
Fuel tank temperature sensor ..... [EC-291](#), [EC-297](#)  
Fuel tank vacuum relief valve ..... [EC-34](#)  
Fuse ..... [PG-16](#)  
Fuse and fusible link box ..... [PG-82](#)  
Fusible link ..... [PG-16](#)

## G

Gauges ..... [DI-5](#)  
Gear components (M/T) ..... [MT-18](#)  
Generic scan tool (GST) ..... [EC-126](#)  
Glass ..... [GW-11](#), [GW-44](#), [GW-48](#)  
Grille - See Exterior ..... [EI-21](#)  
Ground distribution ..... [PG-31](#)

## H

H/LAMP - Wiring diagram ..... [LT-8](#)  
H/PHON - Wiring diagram ..... [AV-53](#)  
Handling precautions for plastics ..... [BL-303](#)  
Harness connector ..... [PG-73](#)  
Harness layout ..... [PG-40](#)  
Hazard warning lamp ..... [LT-51](#)  
Headlining - See Roof trim ..... [EI-49](#)  
Heated oxygen sensor 2 .... [EC-248](#), [EC-257](#), [EC-267](#)  
Heated oxygen sensor 2 heater ..... [EC-166](#)  
HEATER - Wiring diagram ..... [MTC-28](#)  
Heater system - Wiring diagram ..... [MTC-28](#)  
HFC134a (R134a) system precaution ..... [MTC-4](#)  
HFC134a (R134a) system service procedure . [MTC-81](#)  
HFC134a (R134a) system service tools ..... [MTC-12](#)  
HFC134a system service equipment precaution [MTC-8](#)  
HO2S2 - Wiring diagram .... [EC-251](#), [EC-260](#), [EC-270](#)  
HO2S2H - Wiring diagram ..... [EC-168](#)  
Horn ..... [WW-46](#)  
HORN - Wiring diagram ..... [WW-46](#)  
How to erase DTC for OBD system ..... [EC-60](#)

## I

IATS - Wiring diagram ..... [EC-197](#)  
Idle air volume learning ..... [EC-78](#)  
Idle speed ..... [EC-75](#)  
Idle speed control (ISC) ..... [EC-428](#), [EC-430](#)  
Ignition coil ..... [EC-581](#)  
Ignition control system ..... [EC-581](#)  
Ignition timing ..... [EC-75](#)  
IGNSYS - Wiring diagram ..... [EC-582](#)  
ILL - Wiring diagram ..... [LT-114](#)  
Illumination control ..... [LT-111](#)  
In-cabin Microfilter ..... [MA-20](#)  
INJECT - Wiring diagram ..... [EC-570](#)  
Input shaft (FF M/T) ..... [MT-18](#)  
Input/Output signal of TCM ..... [CVT-25](#)  
Instrument panel ..... [IP-10](#)  
INT/L - Wiring diagram ..... [LT-100](#)  
Intake air temperature sensor ..... [EC-195](#), [EC-215](#)  
Intake door control linkage adjustment ..... [MTC-70](#)  
Intake manifold ..... [EM-18](#)  
Intake valve timing control ..... [EC-156](#)  
Intake valve timing control solenoid valve ..... [EC-173](#)  
Interior ..... [EI-39](#)  
Interior lamp ..... [LT-95](#)  
IPDM (Intelligent power distribution module engine room) ..... [PG-17](#)

# ALPHABETICAL INDEX

IVC - Wiring diagram ..... [EC-174](#)

## K

KEYLES - Wiring diagram ..... [BL-59](#)  
 Knock sensor (KS) ..... [EC-315](#)  
 KS - Wiring diagram ..... [EC-316](#)

## L

L/USSV - Wiring diagram ..... [CVT-154](#)  
 Line pressure and secondary pressure control [CVT-26](#)  
 Line pressure solenoid valve ..... [CVT-110](#), [CVT-115](#)  
 Line pressure test (A/T) ..... [AT-56](#)  
 Liquid gasket application ..... [EM-5](#), [LU-2](#), [CO-3](#)  
 Location of electrical units ..... [PG-69](#)  
 Lock-up and select control ..... [CVT-28](#)  
 Lock-up select solenoid valve ..... [CVT-153](#)  
 Low tire pressure warning system ..... [WT-7](#)  
 Low tire pressure warning system - trouble diagnoses  
[WT-10](#)  
 Low tire pressure warning system - Wiring diagram ....  
[WT-10](#)  
 LPSV - Wiring diagram ..... [AT-142](#), [CVT-111](#)  
 Lubricant (R134a) A/C ..... [MTC-5](#), [MTC-18](#)  
 Lubrication circuit (engine) ..... [LU-4](#)  
 Lubrication oil A/C ..... [MTC-97](#)  
 Luggage compartment trim ..... [EI-55](#)

## M

M/T major overhaul ..... [MT-17](#)  
 M/T removal and installation ..... [MT-15](#)  
 MAFS - Wiring diagram ..... [EC-181](#), [EC-189](#)  
 Magnet clutch ..... [MTC-42](#)  
 MAIN - Wiring diagram ..... [EC-144](#), [AT-178](#)  
 Mainshaft (M/T) ..... [MT-18](#)  
 Maintenance ..... [MA-5](#)  
 Malfunction indicator lamp (MIL) ..... [EC-61](#)  
 Manual air conditioner - Wiring diagram ..... [MTC-29](#)  
 Mass air flow sensor (MAFS) ..... [EC-178](#), [EC-187](#)  
 Master cylinder (clutch) ..... [CL-9](#)  
 Meter ..... [DI-5](#)  
 METER - Wiring diagram ..... [DI-9](#)  
 MIL data link connectors circuit ..... [EC-597](#)  
 MIRROR - Wiring diagram ..... [GW-65](#)  
 Mirror, door ..... [GW-66](#)  
 Mirror, out side ..... [GW-66](#)  
 Misfire ..... [EC-308](#)  
 Mode door control linkage adjustment ..... [MTC-72](#)  
 Molding - See Exterior ..... [EI-25](#), [EI-27](#)  
 Mud guard - See Exterior ..... [EI-30](#), [EI-31](#)  
 Multiport fuel injection (MFI) system ..... [EC-23](#)  
 Multiport fuel injection precautions ..... [GI-6](#)  
 Multi-remote control system - See Remote keyless entry  
 system ..... [BL-56](#)

## N

NATS - Wiring diagram ..... [BL-248](#)  
 NONDTC - Wiring diagram ..... [AT-188](#), [CVT-171](#)  
 NVH troubleshooting (BR) ..... [BR-5](#)  
 NVH troubleshooting (RSU) ..... [RSU-4](#)  
 NVIS (Nissan vehicle immobilizer system) ..... [BL-245](#)

## O

Oil change (capacity) ..... [MA-11](#)  
 Oil cooler (engine) ..... [EM-24](#)  
 Oil filter ..... [LU-8](#)  
 Oil pan (engine) ..... [EM-24](#)  
 Oil pressure (engine) ..... [LU-5](#)  
 Oil seal replacement (engine) . [EM-24](#), [EM-37](#), [EM-59](#),  
[EM-66](#)  
 On board diagnostic system ..... [EC-47](#)  
 ORVR (On-board Refueling Vapor Recovery) ... [EC-38](#)  
 Out side mirror ..... [GW-66](#)  
 Overdrive control switch ..... [AT-181](#), [AT-186](#)  
 Overheat ..... [EC-448](#)  
 OVRCSV - Wiring diagram ..... [AT-158](#)

## P

P/SCKT - Wiring diagram ..... [WW-44](#)  
 Park/Neutral position switch ..... [EC-441](#)  
 Park/neutral position switch (A/T) ..... [AT-93](#), [AT-181](#)  
 Park/neutral position switch (CVT) ..... [CVT-76](#)  
 Park/neutral position switch (M/T) ..... [MT-11](#)  
 Parking brake control ..... [PB-4](#)  
 PCV (positive crankcase ventilation) ..... [EC-44](#)  
 Periodic maintenance ..... [MA-7](#)  
 PGC/V - Wiring diagram ..... [EC-356](#), [EC-364](#)  
 PHASE - Wiring diagram ..... [EC-329](#)  
 Pilot bushing replacement ..... [EM-78](#)  
 Piston assembly ..... [EM-100](#)  
 Piston pin inspection ..... [EM-96](#)  
 Piston ring inspection ..... [EM-97](#)  
 Piston to bore clearance ..... [EM-100](#)  
 PNP/SW - Wiring diagram .... [EC-443](#), [AT-94](#), [CVT-78](#)  
 POS - Wiring diagram ..... [EC-321](#)  
 POWER - Wiring diagram ..... [CVT-141](#), [PG-6](#)  
 Power door lock ..... [BL-23](#)  
 Power socket ..... [WW-44](#)  
 Power steering gear ..... [PS-12](#)  
 Power supply routing ..... [PG-4](#)  
 Power window ..... [GW-18](#)  
 PRE/SE - Wiring diagram ..... [EC-388](#), [EC-396](#)  
 Precautions for Leak detection dye ..... [MTC-10](#)  
 Precautions (General) ..... [GI-4](#)  
 Pressure control solenoid valve A [CVT-110](#), [CVT-115](#)  
 Pressure control solenoid valve B [CVT-118](#), [CVT-121](#)  
 Pressure plate - See Clutch cover ..... [CL-13](#)  
 Pressure test (CVT) ..... [CVT-45](#)  
 Primary pressure sensor ..... [CVT-133](#)  
 Primary Speed Sensor ..... [CVT-87](#)  
 PRIPS - Wiring diagram ..... [CVT-134](#)

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

IDX

# ALPHABETICAL INDEX

PRSCVT - Wiring diagram ..... [CVT-88](#)  
PT/SEN - Wiring diagram ..... [AT-172](#)

## R

Radiator ..... [CO-11](#)  
Rear axle ..... [RAX-4](#)  
Rear combination lamp removal and installation [LT-92](#)  
Rear door ..... [GW-48](#)  
Rear seat belt ..... [SB-6](#)  
Rear suspension ..... [RSU-5](#)  
Rear washer ..... [WW-30](#)  
Rear window defogger ..... [GW-51](#)  
Rear wiper ..... [WW-30](#)  
Refrigerant connection precaution ..... [MTC-5](#)  
Refrigerant discharging evacuating charging . [MTC-81](#)  
Refrigerant general precaution ..... [MTC-5](#)  
Refrigerant lines ..... [MTC-81](#)  
Refrigerant pressure sensor ..... [EC-591](#), [MTC-89](#)  
Refrigeration cycle ..... [MTC-16](#)  
Remote keyless entry system ..... [BL-56](#)  
Removal and installation (A/T) ..... [AT-247](#)  
Reverse idler shaft (M/T) ..... [MT-18](#)  
Reverse lamp switch (M/T) - See Back-up lamp switch  
(M/T) ..... [MT-11](#)  
Reverse main gear (M/T) ..... [MT-18](#)  
Road test ..... [AT-58](#), [AT-61](#), [AT-64](#), [AT-65](#), [CVT-46](#)  
Room lamp - See Interior lamp ..... [LT-95](#)  
RP/SEN - Wiring diagram ..... [EC-592](#)

## S

SAE J1979 - Service \$01 - 09 ..... [EC-47](#)  
Seat belt inspection ..... [SB-9](#), [MA-27](#)  
Seat belt, front ..... [SB-3](#)  
Seat belt, rear ..... [SB-6](#)  
Secondary pressure sensor ..... [CVT-126](#)  
Secondary Speed Sensor ..... [CVT-92](#)  
SECPS - Wiring diagram ..... [CVT-127](#)  
SECPSV - Wiring diagram ..... [CVT-122](#)  
Self-diagnostic results ..... [EC-64](#), [EC-116](#)  
SEN/PW - Wiring diagram ..... [EC-436](#)  
SESCVT - Wiring diagram ..... [CVT-93](#)  
SHIFT - Wiring diagram ..... [AT-230](#), [CVT-186](#)  
Shift control ..... [CVT-26](#)  
Shift control components (M/T) ..... [MT-21](#)  
Shift control system ..... [CVT-190](#)  
Shift fork (M/T) ..... [MT-21](#)  
Shift lever ..... [MT-12](#)  
Shift lock system ..... [AT-229](#)  
Shift schedule ..... [AT-67](#), [CVT-53](#), [CVT-204](#)  
Shock absorber (rear) ..... [RSU-9](#)  
Side air bag (satellite) sensor ..... [SRS-50](#)  
Side curtain air bag ..... [SRS-47](#)  
Side trim ..... [EI-39](#)  
SMJ (super multiple junction) ..... [PG-80](#)  
Specification value ..... [EC-133](#)  
Speedometer ..... [DI-5](#)  
Spiral cable ..... [SRS-44](#)

Spot lamp ..... [LT-110](#)  
SPSW - Wiring diagram ..... [CVT-166](#)  
SROOF - Wiring diagram ..... [RF-13](#)  
SRS - See Supplemental Restraint System ..... [SRS-4](#)  
SRS - Wiring diagram ..... [SRS-13](#)  
SRS Trouble diagnoses ..... [SRS-9](#)  
SSV/A - Wiring diagram ..... [AT-148](#)  
SSV/B - Wiring diagram ..... [AT-153](#)  
Stall Test ..... [CVT-43](#)  
Stall test (A/T) ..... [AT-53](#)  
START - Wiring diagram ..... [SC-10](#)  
Starting system ..... [SC-8](#)  
Steering linkage ..... [PS-12](#)  
Steering wheel and column ..... [PS-6](#), [PS-9](#)  
Steering wheel turning force ..... [PS-6](#)  
Step motor ..... [CVT-159](#), [CVT-163](#)  
STM - Wiring diagram ..... [CVT-160](#)  
Stop lamp ..... [LT-71](#), [LT-92](#)  
Stop lamp switch ..... [EC-493](#)  
STOP/L - Wiring diagram ..... [LT-71](#)  
STSIG - Wiring diagram ..... [CVT-71](#)  
Sun roof, electric ..... [RF-10](#)  
Sunroof ..... [RF-10](#), [RF-22](#)  
Supplemental Restraint System ..... [SRS-4](#)  
Suspension ..... [MA-26](#)  
Swirl control valve ..... [EC-597](#)  
Symbols and abbreviations ..... [GI-10](#), [GI-23](#)  
Symptom matrix chart ..... [EC-92](#)  
Synchronizer (M/T) ..... [MT-18](#)  
System readiness test (SRT) code ..... [EC-52](#)

## T

Tachometer ..... [DI-5](#)  
Tail lamp ..... [LT-92](#)  
TAIL/L - Wiring diagram ..... [LT-80](#)  
TCM circuit diagram ..... [CVT-42](#)  
TCM function ..... [CVT-24](#)  
TCM inspection table ..... [AT-78](#), [CVT-54](#)  
TCV - Wiring diagram ..... [AT-131](#), [CVT-103](#)  
Telephone ..... [AV-50](#)  
Theft warning system - See Vehicle security (Theft warn-  
ing) system ..... [BL-219](#)  
Thermo control amp ..... [MTC-64](#)  
Thermostat ..... [CO-18](#)  
Three way catalyst function ..... [EC-334](#)  
Three way catalyst precautions ..... [GI-5](#)  
Throttle control motor relay ..... [EC-498](#)  
Throttle position sensor (TPS) .. [EC-206](#), [EC-302](#), [EC-465](#), [EC-467](#), [EC-531](#)  
Throttle valve closed position learning ..... [EC-78](#)  
Tie-rod ..... [PS-12](#)  
Timing chain ..... [EM-37](#)  
TLID - Wiring diagram ..... [BL-184](#), [BL-204](#)  
Torque converter installation .... [AT-248](#), [AT-363](#), [CVT-202](#)  
Torque convertor clutch solenoid valve [CVT-102](#), [CVT-107](#)  
TPS1 - Wiring diagram ..... [EC-304](#)

# ALPHABETICAL INDEX

---

TPS2 - Wiring diagram .....	<a href="#">EC-208</a>
TPS3 - Wiring diagram .....	<a href="#">EC-533</a>
Transmission case (M/T) .....	<a href="#">MT-17</a>
Trouble diagnoses .....	<a href="#">GI-11</a>
Trunk lid opener, electric .....	<a href="#">BL-202</a>
Trunk lid trim .....	<a href="#">EI-55</a>
Trunk room trim .....	<a href="#">EI-55</a>
TURN - Wiring diagram .....	<a href="#">LT-55</a>
Turn signal lamp .....	<a href="#">LT-51</a>
Two trip detection logic .....	<a href="#">EC-47</a>

## V

---

Vacuum hose (brake system) .....	<a href="#">BR-22</a>
Vacuum hose drawing (Engine control) .....	<a href="#">EC-102</a>
Valve clearance .....	<a href="#">EM-55</a>
Valve guide .....	<a href="#">EM-68</a>
Valve lifter .....	<a href="#">EM-51</a>
Valve seat .....	<a href="#">EM-70</a>
Valve spring .....	<a href="#">EM-71</a>
Vehicle recovery (freeing a stuck vehicle) .....	<a href="#">GI-44</a>
Vehicle security (theft warning) system .....	<a href="#">BL-219</a>
Vehicle speed sensor (VSS) <a href="#">EC-426</a> , <a href="#">EC-490</a> , <a href="#">EC-491</a>	
VEHSEC - Wiring diagram .....	<a href="#">BL-223</a>
VENT/V - Wiring diagram .....	<a href="#">EC-371</a> , <a href="#">EC-378</a>
Ventilation air filter .....	<a href="#">MTC-75</a>
VIN registration .....	<a href="#">EC-77</a>
Viscosity number (SAE) .....	<a href="#">MA-12</a>
VSS A/T - Wiring diagram .....	<a href="#">AT-105</a>
VSSMTR - Wiring diagram .....	<a href="#">AT-163</a>

## W

---

WARN - Wiring diagram .....	<a href="#">DI-25</a>
Warning chime .....	<a href="#">DI-47</a>
Warning lamps .....	<a href="#">DI-24</a>
Washer, front .....	<a href="#">WW-4</a>
Washer, rear .....	<a href="#">WW-30</a>
Water control valve .....	<a href="#">CO-20</a>
Water pump .....	<a href="#">CO-17</a>
Water temperature gauge .....	<a href="#">DI-5</a>
Wheel alignment (front) .....	<a href="#">FSU-6</a>
Wheel alignment (rear) .....	<a href="#">RSU-5</a>
Wheel balance .....	<a href="#">WT-6</a> , <a href="#">MA-24</a>
Wheel bearing (rear) .....	<a href="#">RAX-4</a>
Wheel hub (rear) .....	<a href="#">RAX-4</a>
Wheel sensor (VDC) .....	<a href="#">BRC-33</a>
Wheel sensors (ABS) .....	<a href="#">BRC-11</a>
WINDOW - Wiring diagram .....	<a href="#">GW-24</a>
Window, door .....	<a href="#">GW-44</a> , <a href="#">GW-48</a>
Windshield .....	<a href="#">GW-11</a>
WIP/R - Wiring diagram .....	<a href="#">WW-33</a>
WIPER - Wiring diagram .....	<a href="#">WW-9</a>
Wiper, front .....	<a href="#">WW-4</a>
Wiper, rear .....	<a href="#">WW-30</a>
Wiring Diagram (Cell code) list .....	<a href="#">PG-66</a>
Wiring diagrams .....	<a href="#">GI-15</a>

A

B

C

D

E

F

G

H

I

J

K

L

IDX