

A  
STR  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# SECTION STR

## STARTING SYSTEM

### CONTENTS

<p><b>PRECAUTION</b> ..... 2</p> <p><b>PRECAUTIONS</b> ..... 2</p> <p style="padding-left: 20px;">Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....2</p> <p style="padding-left: 20px;">Precaution for Power Generation Variable Voltage Control System .....2</p> <p><b>PREPARATION</b> ..... 3</p> <p><b>PREPARATION</b> ..... 3</p> <p style="padding-left: 20px;">Special Service Tool .....3</p> <p style="padding-left: 20px;">Commercial Service Tool .....3</p> <p><b>BASIC INSPECTION</b> ..... 4</p> <p><b>DIAGNOSIS AND REPAIR WORKFLOW</b> ..... 4</p> <p style="padding-left: 20px;">Work Flow .....4</p> <p><b>FUNCTION DIAGNOSIS</b> ..... 7</p> <p><b>STARTING SYSTEM</b> ..... 7</p> <p><b>A/T</b> .....7</p> <p style="padding-left: 20px;">A/T : System Diagram .....7</p> <p style="padding-left: 20px;">A/T : System Description .....7</p> <p style="padding-left: 20px;">A/T : Component Parts Location .....7</p> <p style="padding-left: 20px;">A/T : Component Description .....8</p> <p><b>M/T WITH CLUTCH INTERLOCK CANCEL SYSTEM</b> .....8</p> <p style="padding-left: 20px;">M/T WITH CLUTCH INTERLOCK CANCEL SYSTEM : System Diagram .....8</p> <p style="padding-left: 20px;">M/T WITH CLUTCH INTERLOCK CANCEL SYSTEM : System Description .....8</p> <p style="padding-left: 20px;">M/T WITH CLUTCH INTERLOCK CANCEL SYSTEM : Component Parts Location .....9</p> <p style="padding-left: 20px;">M/T WITH CLUTCH INTERLOCK CANCEL SYSTEM : Component Description .....9</p> <p><b>M/T WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM</b> .....9</p>	<p style="padding-left: 20px;">M/T WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM : System Diagram .....10</p> <p style="padding-left: 20px;">M/T WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM : System Description .....10</p> <p style="padding-left: 20px;">M/T WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM : Component Parts Location .....10</p> <p style="padding-left: 20px;">M/T WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM : Component Description .....11</p> <p><b>COMPONENT DIAGNOSIS</b> ..... 12</p> <p><b>B TERMINAL CIRCUIT</b> ..... 12</p> <p style="padding-left: 20px;">Description .....12</p> <p style="padding-left: 20px;">Diagnosis Procedure .....12</p> <p><b>S CONNECTOR CIRCUIT</b> ..... 13</p> <p style="padding-left: 20px;">Description .....13</p> <p style="padding-left: 20px;">Diagnosis Procedure .....13</p> <p><b>STARTING SYSTEM</b> ..... 14</p> <p style="padding-left: 20px;">Wiring Diagram - With Clutch Interlock Cancel System .....14</p> <p style="padding-left: 20px;">Wiring Diagram - Without Clutch Interlock Cancel System .....21</p> <p><b>SYMPTOM DIAGNOSIS</b> ..... 26</p> <p><b>STARTING SYSTEM</b> ..... 26</p> <p style="padding-left: 20px;">Symptom Table .....26</p> <p><b>ON-VEHICLE REPAIR</b> ..... 27</p> <p><b>STARTER MOTOR</b> ..... 27</p> <p style="padding-left: 20px;">Exploded View .....27</p> <p style="padding-left: 20px;">Removal and Installation .....27</p> <p><b>SERVICE DATA AND SPECIFICATIONS (SDS)</b> ..... 29</p> <p><b>STARTER MOTOR</b> ..... 29</p> <p style="padding-left: 20px;">Starter .....29</p>
--	---

# PRECAUTIONS

< PRECAUTION >

## PRECAUTION

### PRECAUTIONS

#### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000004064125

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### Precaution for Power Generation Variable Voltage Control System

INFOID:000000004064126

#### **CAUTION:**

For this model, the battery current sensor that is installed to the negative battery cable measures the charging/discharging current of the battery and performs various engine controls. If an electrical component is connected directly to the negative battery terminal, the current flowing through that component will not be measured by the battery current sensor. This condition may cause a malfunction of the engine control system and battery discharge may occur. Do not connect an electrical component or ground wire directly to the battery terminal.

# PREPARATION

< PREPARATION >

## PREPARATION


### PREPARATION

#### Special Service Tool

INFOID:000000004064127

A

STR

Tool number (Kent Moore No.) Tool name	Description
<p>— (—) Model GR-8 Multitasking Battery Diagnostic Station</p>  <p style="text-align: right; font-size: small;">©/ HEB 128YY</p>	<p>Tests Batteries, starting and charging system. For operating instructions, refer to diagnostic station instruction manual.</p>


C

D

E

#### Commercial Service Tool

INFOID:000000004064128

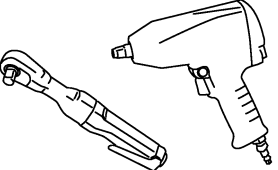Tool name	Description
<p>Power tool</p>  <p style="text-align: right; font-size: small;">QA1B/ 08/ D</p>	<p>Loosening bolts and nuts</p>

F

G

H

I

J

K

L

M

N

O

P

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >


## BASIC INSPECTION

### DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000004064129

#### OVERALL SEQUENCE

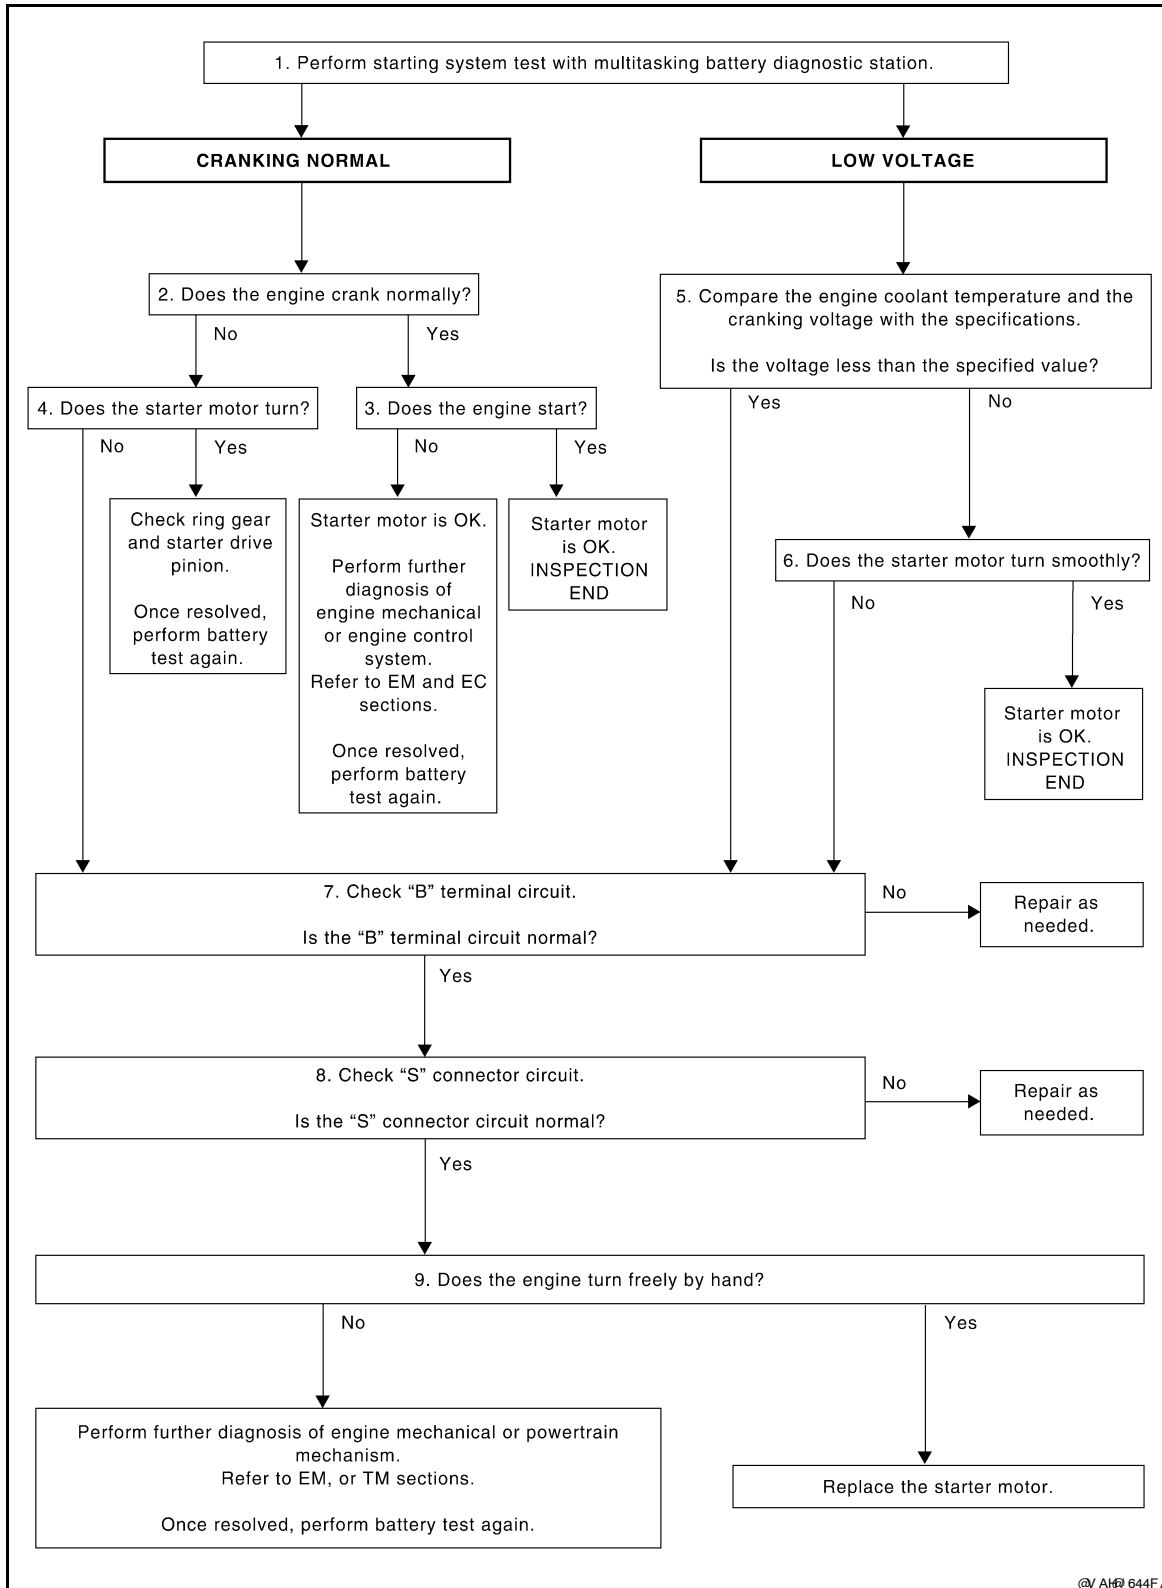

DETAILED FLOW

# DIAGNOSIS AND REPAIR WORKFLOW

## < BASIC INSPECTION >

### NOTE:

To ensure a complete and thorough diagnosis, the battery, starter motor and generator test segments must be done as a set from start to finish.

## 1. DIAGNOSIS WITH MULTITASKING BATTERY DIAGNOSTIC STATION

Perform the starting system test with multitasking battery diagnostic station. For details and operating instructions, refer to diagnostic station instruction manual.

### Test result

CRANKING NORMAL>>GO TO 2

LOW VOLTAGE>>GO TO 5

CHARGE BATTERY>>Perform the slow battery charging procedure. (Initial rate of charge is 10A for 12 hours.) Perform battery test again. Refer to diagnostic station instruction manual.

REPLACE BATTERY>>Before replacing battery, clean the battery cable clamps and battery posts. Perform battery test again. Refer to diagnostic station instruction manual. If second test result is "REPLACE BATTERY", then do so. Perform battery test again to confirm repair.

## 2. CRANKING CHECK

Check that the starter motor operates properly.

### Does the engine crank normally?

YES >> GO TO 3

NO >> GO TO 4

## 3. ENGINE START CHECK

Check that the engine starts.

### Does the engine start?

YES >> Starter motor is OK. Inspection End.

NO >> Perform further diagnosis of engine mechanical or engine control system. Refer to EM and EC sections. Once resolved, perform battery test again.

## 4. STARTER MOTOR ACTIVATION

Check that the starter motor operates.

### Does the starter motor turn?

YES >> Check ring gear and starter motor drive pinion. Once resolved, perform battery test again.

NO >> GO TO 7

## 5. COMPARISON BETWEEN ENGINE COOLANT AND CRANKING VOLTAGE

Compare the engine coolant temperature and verify the cranking voltage is within specification.

Minimum Specification of Cranking Voltage Referencing Coolant Temperature

Engine coolant temperature [°C (°F)]	Voltage [V]
-30 to -20 (-22 to -4)	8.6
-19 to -10 (-2 to 14)	9.1
-9 to 0 (16 to 32)	9.5
More than 1 (More than 34)	9.9

### Is the voltage less than the specified value?

YES >> GO TO 7

NO >> GO TO 6

## 6. STARTER OPERATION

Check the starter operation.

### Does the starter motor turn smoothly?

YES >> Starter motor is OK. Inspection End.

NO >> GO TO 7

## 7. "B" TERMINAL CIRCUIT INSPECTION

Check "B" terminal circuit. Refer to [STR-12, "Diagnosis Procedure"](#).

### Is "B" terminal circuit normal?

## DIAGNOSIS AND REPAIR WORKFLOW

### < BASIC INSPECTION >

---

- YES >> GO TO 8
- NO >> Repair as needed.

### 8. "S" CONNECTOR CIRCUIT INSPECTION

---

Check "S" connector circuit. Refer to [STR-13. "Diagnosis Procedure"](#).

#### Is "S" connector circuit normal?

- YES >> GO TO 9
- NO >> Repair as needed.

### 9. ENGINE ROTATION STATUS

---

Check that the engine can be rotated by hand.

#### Does the engine turn freely by hand?

- YES >> Replace starter motor. Refer to [STR-27. "Removal and Installation"](#).
- NO >> Perform further diagnosis of engine mechanical or powertrain mechanism. Refer to EM or TM sections. Once resolved, perform battery test again. Refer to diagnostic station instruction manual.

# STARTING SYSTEM

< FUNCTION DIAGNOSIS >


## FUNCTION DIAGNOSIS

### STARTING SYSTEM

A/T

A/T : System Diagram

INFOID:000000004064130

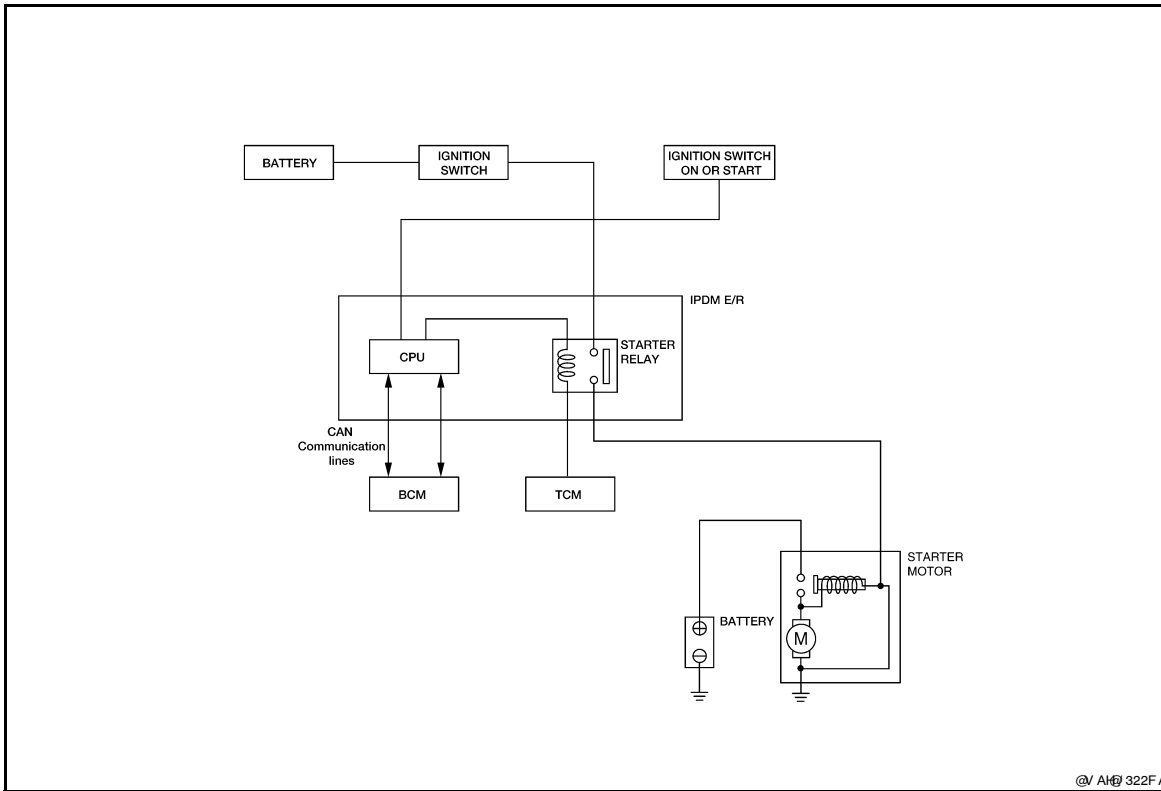

@V AIG 322F A


A/T : System Description

INFOID:000000004064131

The starter motor plunger closes and provides a closed circuit between the battery and the starter motor. The starter motor is grounded to the cylinder block. With power and ground supplied, the starter motor operates.

A/T : Component Parts Location

INFOID:000000004064132

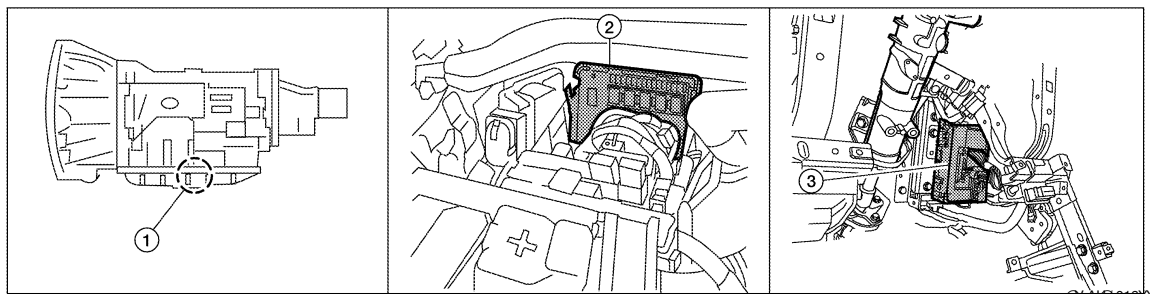

@V AIG 0161Y

1. A/T assembly F9 (with built in TCM F502)
2. IPDM E/R E119, E120, E122, E124
3. BCM M18 (view with lower instrument panel LH removed)

# STARTING SYSTEM

< FUNCTION DIAGNOSIS >

A/T : Component Description


INFOID:000000004064134

Component part	Description
TCM	TCM supplies power to the starter relay inside the IPDM E/R when the selector lever is shifted to the P or N position.
BCM	BCM sends a starter request signal to the CPU of the IPDM E/R over the CAN communication lines.
IPDM E/R	CPU inside IPDM E/R operates the starter relay at the request of the BCM over the CAN communication lines.
Starter motor	The starter motor plunger closes and the motor is supplied with battery power, which in turn cranks the engine, when the "S" terminal is supplied with electric power.

## M/T WITH CLUTCH INTERLOCK CANCEL SYSTEM

### M/T WITH CLUTCH INTERLOCK CANCEL SYSTEM : System Diagram

INFOID:000000004064134

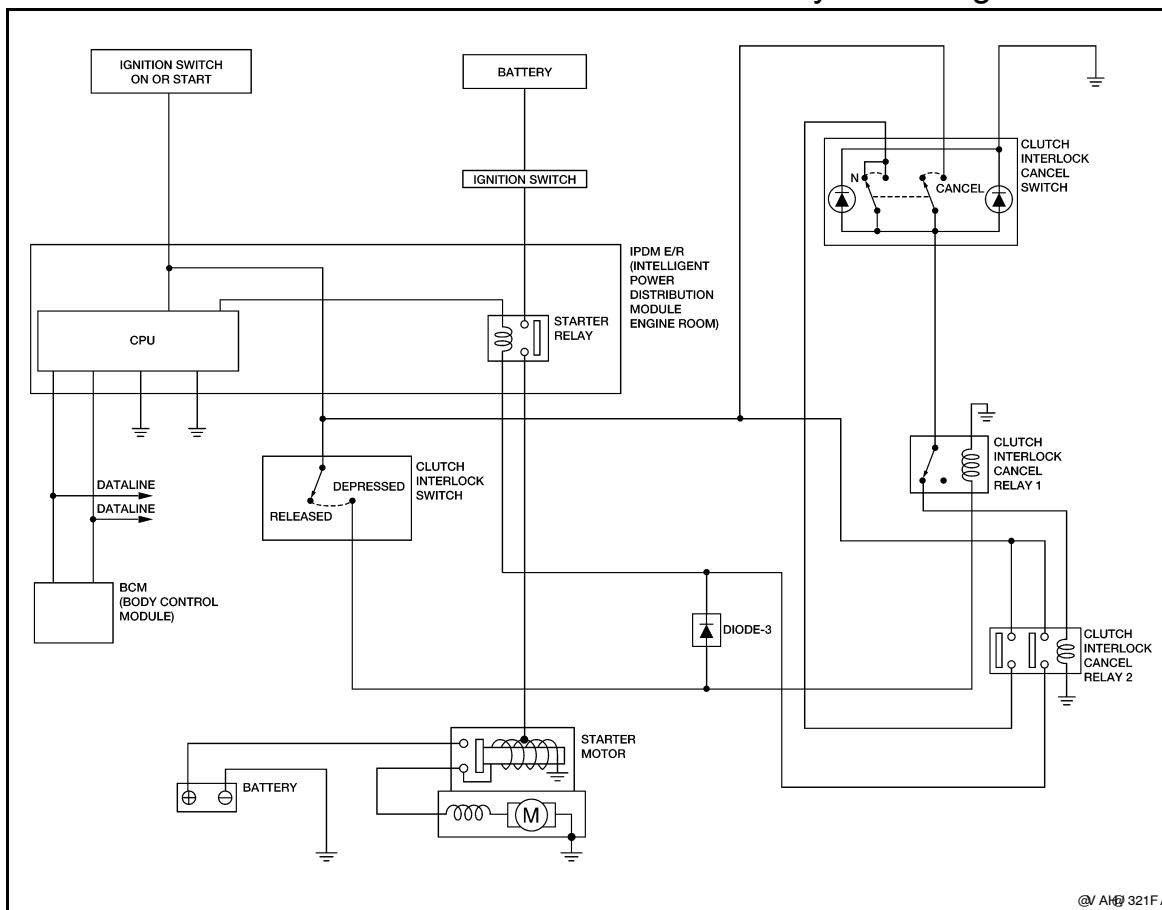

### M/T WITH CLUTCH INTERLOCK CANCEL SYSTEM : System Description

INFOID:000000004064135

The clutch interlock (clutch start) switch allows for starting the engine without depressing the clutch pedal by bypassing the clutch interlock switch. The clutch interlock system is canceled once the ignition switch is turned OFF. Once the clutch interlock system is activated, the starter motor plunger closes and provides a closed circuit between the battery and the starter motor. The starter motor is grounded to the cylinder block. With power and ground supplied, the starter motor operates.




# STARTING SYSTEM

< FUNCTION DIAGNOSIS >

## M/T WITH CLUTCH INTERLOCK CANCEL SYSTEM : Component Parts Location

INFOID:000000004064136

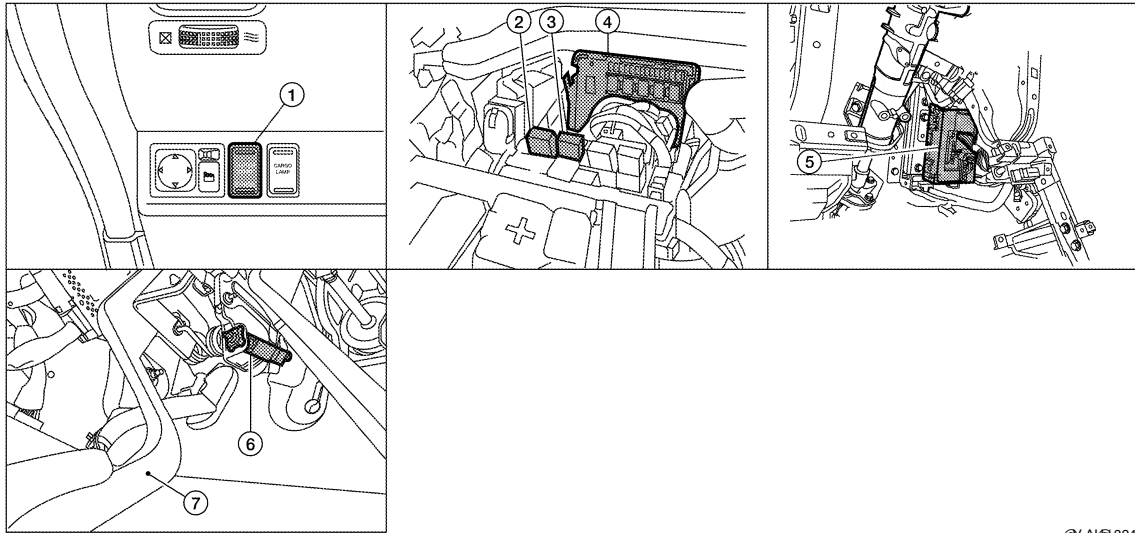

@/ AH@ 324YY

- |  |  |   |
|--|--|---|
| 1. Clutch interlock cancel switch M163 | 2. Clutch interlock cancel relay 2 E166                  | 3. Clutch interlock cancel relay 1 E171 |
| 4. IPDM E/R E119, E120, E122, E124     | 5. BCM M18 (view with lower instrument panel LH removed) | 6. Clutch interlock switch E163         |
| 7. Clutch pedal                        |  |   |

## M/T WITH CLUTCH INTERLOCK CANCEL SYSTEM : Component Description

INFOID:000000004064137

Component part	Description
Clutch interlock switch	Clutch interlock switch supplies power to the coil side of the starter relay when the clutch pedal is depressed to crank the engine.
Clutch interlock cancel switch	Clutch interlock cancel switch bypasses the clutch interlock switch and supplies power to the coil side of the starter relay to crank the engine without the clutch pedal being depressed.
BCM	BCM sends a starter request signal to the CPU of the IPDM E/R over the CAN communication lines.
IPDM E/R	CPU inside IPDM E/R operates the starter relay at the request of the BCM over the CAN communication lines.
Starter motor	The starter motor plunger closes and the motor is supplied with battery power, which in turn cranks the engine, when the "S" terminal is supplied with electric power.


## M/T WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM

# STARTING SYSTEM

< FUNCTION DIAGNOSIS >

## M/T WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM : System Diagram

INFOID:000000004064138

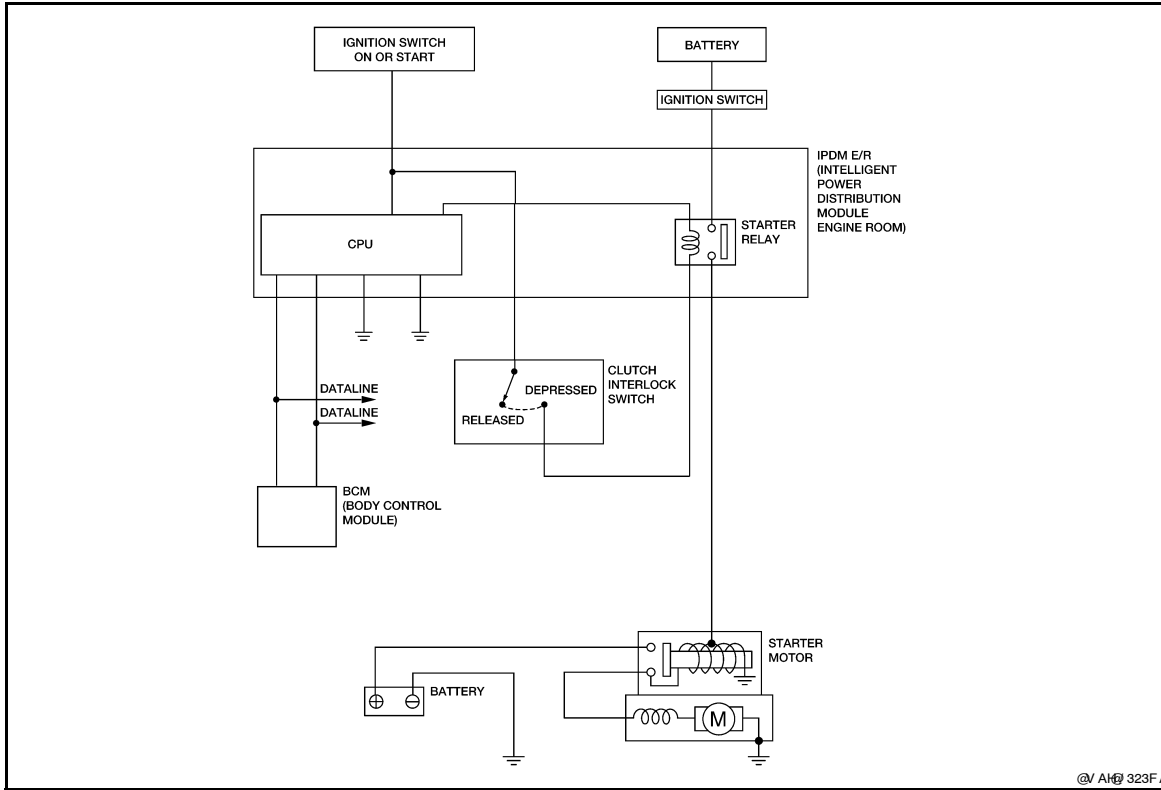


## M/T WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM : System Description

INFOID:000000004064139

The starter motor plunger closes and provides a closed circuit between the battery and the starter motor. The starter motor is grounded to the cylinder block. With power and ground supplied, the starter motor operates.

## M/T WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM : Component Parts Location

INFOID:000000004064140

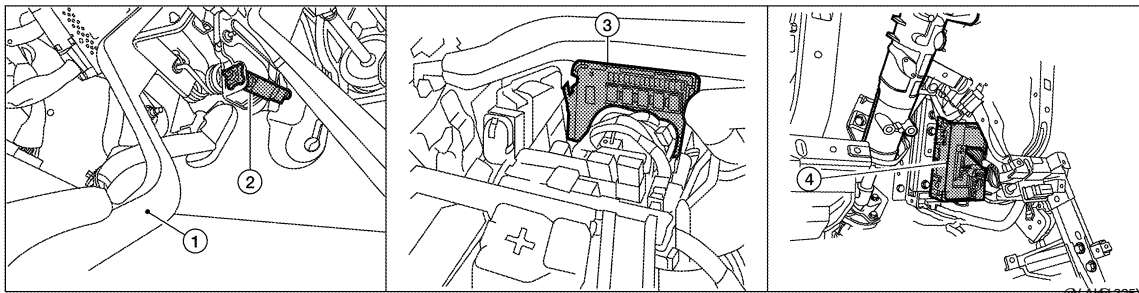

1. Clutch pedal
2. Clutch interlock switch E164
3. IPDM E/R E119, E120, E122, E124
4. BCM M18 (view with lower instrument panel LH removed)

# STARTING SYSTEM

< FUNCTION DIAGNOSIS >

## M/T WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM : Component Description

INFOID:000000004064141

A

Component part	Description
Clutch interlock switch	Clutch interlock switch supplies power to the coil side of the starter relay when the clutch pedal is depressed to crank the engine.
BCM	BCM sends a starter request signal to the CPU of the IPDM E/R over the CAN communication lines.
IPDM E/R	CPU inside IPDM E/R operates the starter relay at the request of the BCM over the CAN communication lines.
Starter motor	The starter motor plunger closes and the motor is supplied with battery power, which in turn cranks the engine, when the "S" terminal is supplied with electric power.

STR

C

D

E

F

G

H

I

J

K

L

M

N

O

P

# B TERMINAL CIRCUIT

< COMPONENT DIAGNOSIS >

## COMPONENT DIAGNOSIS

### B TERMINAL CIRCUIT

#### Description

INFOID:000000004064142

Terminal "2" (B) is constantly supplied with battery power.

#### Diagnosis Procedure

INFOID:000000004064143

#### CAUTION:

Perform diagnosis under the condition that the engine cannot start by the following procedure.

1. Remove fuel pump fuse.
2. Crank or start the engine (where possible) until the fuel pressure is depleted.


#### 1. CHECK TERMINAL 2 POWER SUPPLY VOLTAGE

1. Turn ignition switch OFF.
2. Make sure that starter motor connector E210 terminal 2 connection is clean and tight.
3. Check voltage between starter motor connector E210 terminal 2 and ground.

(+)		(-)	Voltage
Connector	Terminal		
E210	2	Ground	Battery voltage

Is there battery voltage present?

- YES >> GO TO 2  
 NO >> Check harness between battery and starter motor for open circuit.

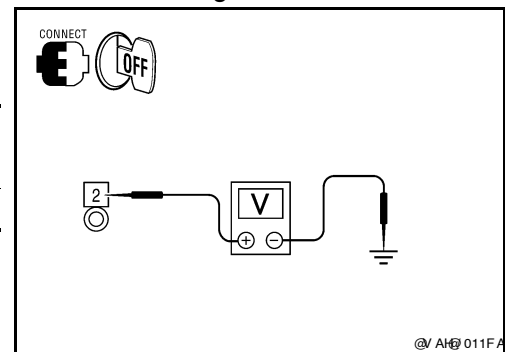


#### 2. CHECK BATTERY CABLE (VOLTAGE DROP TEST)

1. Shift the transmission into park or neutral.
2. Check voltage between battery positive terminal and starter motor connector E210 terminal 2 while cranking the engine.

(-)		(+)	Condition	Voltage
Connector	Terminal			
E210	2	Battery (+) terminal	While cranking the engine	Less than 0.2V

Is the voltage drop less than 0.2V?

- YES >> GO TO 3  
 NO >> Check harness between the battery and the starter motor for high resistance.

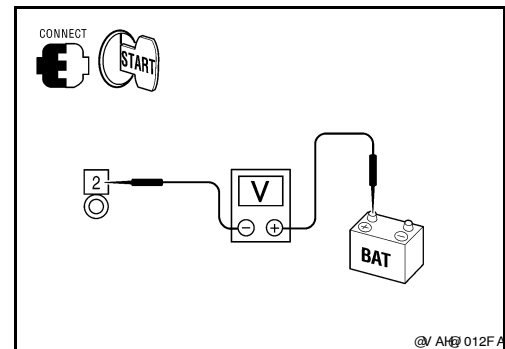


#### 3. CHECK GROUND CIRCUIT STATUS (VOLTAGE DROP TEST)

Check voltage between starter motor case and battery negative terminal while cranking the engine.

(+)	(-)	Condition	Voltage
Starter motor case	Battery (-) terminal	While cranking the engine	Less than 0.2V

Is the voltage drop less than 0.2V?

- YES >> Terminal 2 circuit is OK. Further inspection necessary. Refer to [STR-4, "Work Flow"](#).  
 NO >> Check the starter motor case to engine mounting for high resistance.

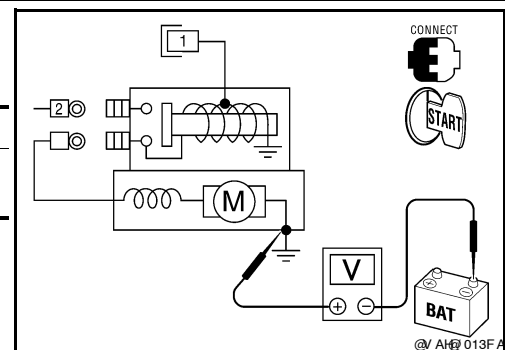

# S CONNECTOR CIRCUIT

< COMPONENT DIAGNOSIS >

## S CONNECTOR CIRCUIT

### Description

INFOID:000000004064144

Terminal "1" (S) is the power supply for the starter motor magnetic switch. Terminal 1 is supplied with power when the ignition switch is turned to the START position while the selector lever is in the P or N position.

STR

### Diagnosis Procedure

INFOID:000000004064145


#### CAUTION:

Perform diagnosis under the condition that engine cannot start by the following procedure.

1. Remove fuel pump fuse.
2. Crank or start the engine (where possible) until the fuel pressure is released.

#### 1. CHECK STARTER MOTOR MAGNETIC SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect starter motor connector E207.
3. Shift transmission into park or neutral.
4. Check voltage between starter motor harness connector E207 terminal 1 and ground with the ignition in START.

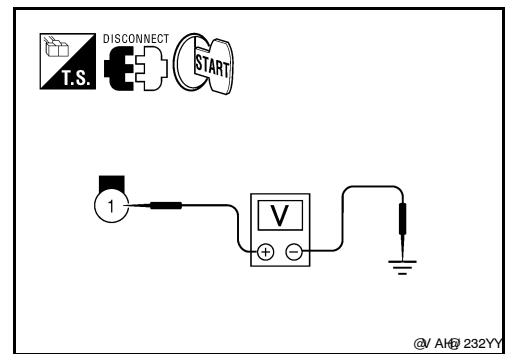

(+)		(-)	Condition	Voltage
Connector	Terminal			
E207	1	Ground	While cranking the engine	Battery voltage

#### Is battery voltage present?

- YES >> Magnetic switch circuit is OK. Further inspection necessary. Refer to [STR-4, "Work Flow"](#).  
 NO >> GO TO 2

#### 2. CHECK CONNECTOR


1. Turn ignition switch OFF.
2. Check the IPDM E/R harness connector E120 and starter motor harness connector E207 for damage, bent pins and loose connections.

#### Is the inspection result normal?

- YES >> GO TO 3  
 NO >> Repair the terminal and connector.

#### 3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect IPDM E/R connector E120 and starter motor connector E207.
2. Check continuity between starter motor harness connector E207 (A) terminal 1 and IPDM E/R harness connector E120 (B) terminal 19.

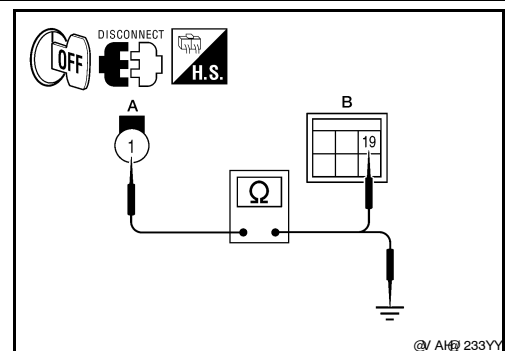

A		B		Continuity
Connector	Terminal	Connector	Terminal	
E207	1	E120	19	Yes

3. Check continuity between starter motor harness connector E207 (A) terminal 1 and ground.

A		—	Continuity
Connector	Terminal		
E207	1	Ground	No

#### Are the continuity test results as specified?

- YES >> Further inspection necessary. Refer to [STR-4, "Work Flow"](#).  
 NO >> Repair the harness.

A  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


# STARTING SYSTEM

< COMPONENT DIAGNOSIS >

## STARTING SYSTEM

### Wiring Diagram - With Clutch Interlock Cancel System

INFOID:000000004064146

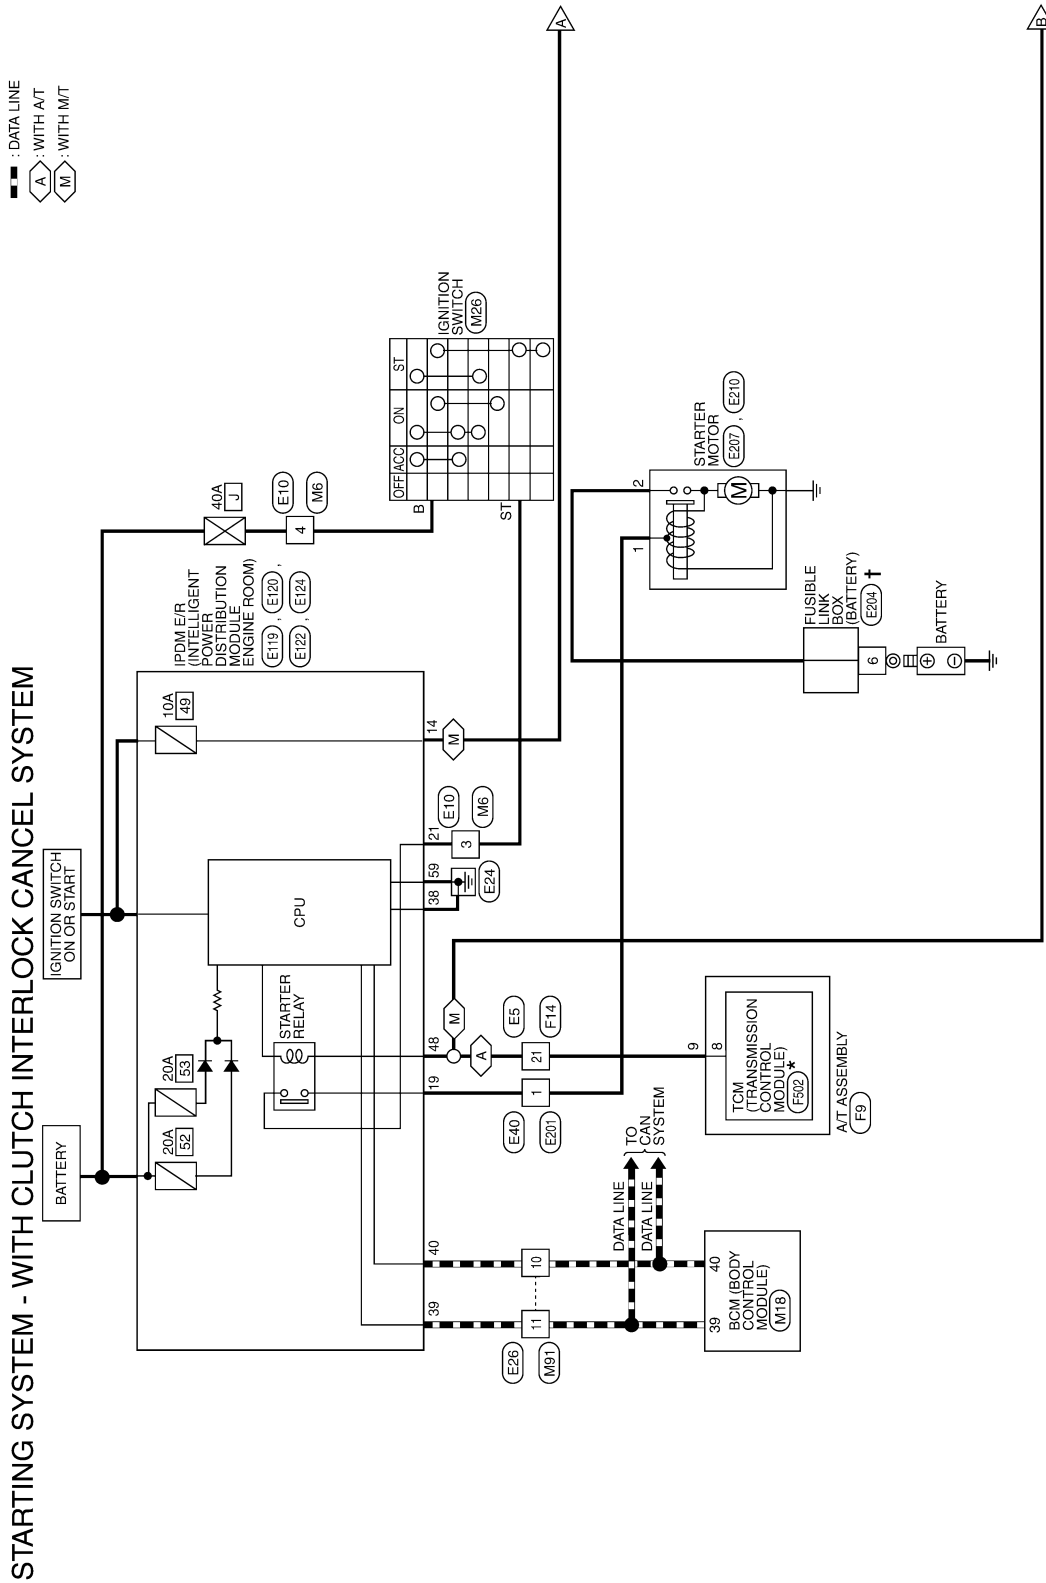


\* : THIS CONNECTOR IS NOT SHOWN IN "HARNES LAYOUT" OF PG SECTION.

† : THIS CONNECTOR IS AN INTEGRAL PART OF THE FUSIBLE LINK BOX (BATTERY).

©AAV @ / 47F /

# STARTING SYSTEM

< COMPONENT DIAGNOSIS >

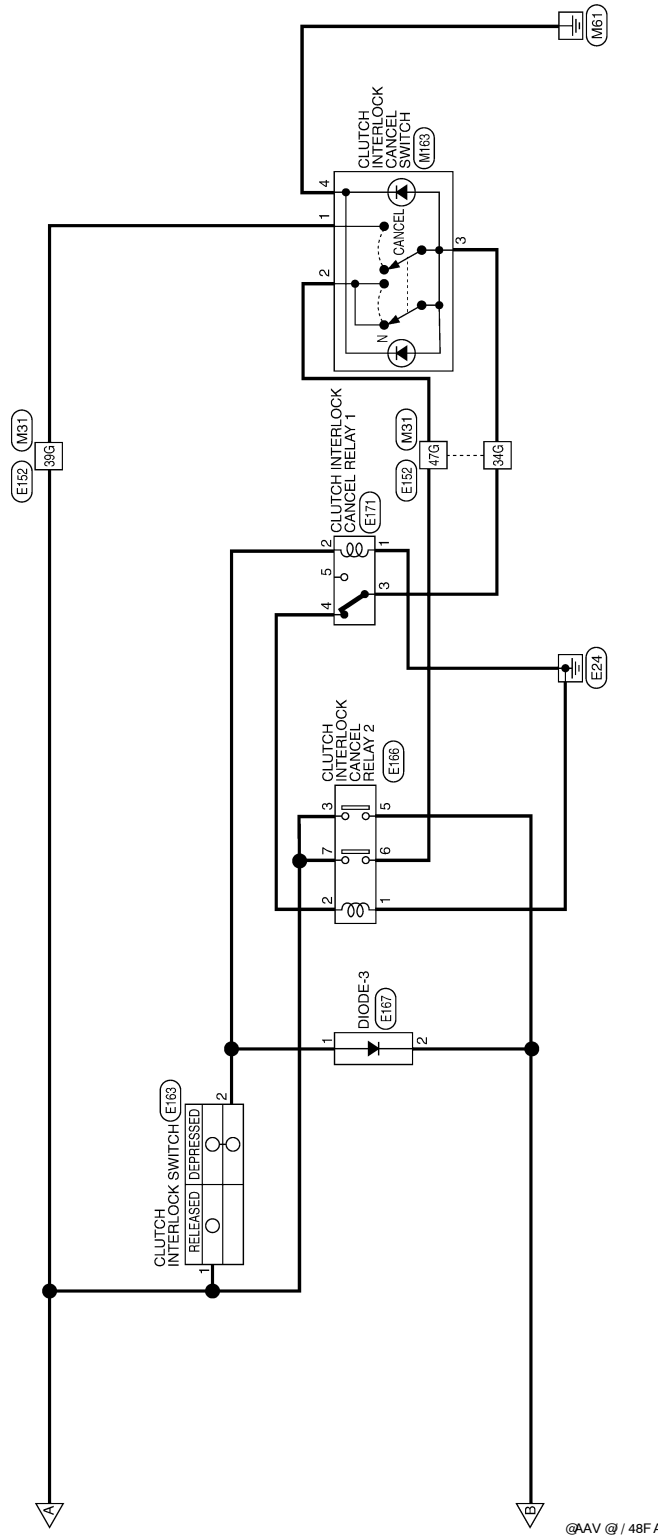

@AAV @ / 48F /

A

STR

C

D

E

F

G

H

I

J

K

L

M

N

O

P


## STARTING SYSTEM CONNECTORS - WITH CLUTCH INTERLOCK CANCEL SYSTEM

 Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	GR	-
4	G	-

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
39	L	CAN-H
40	P	CAN-L

Connector No.	M26
Connector Name	IGNITION SWITCH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
B	G	-
ST	GR	-

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

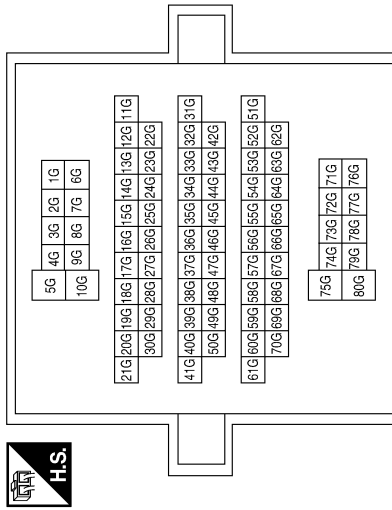


Terminal No.	Color of Wire	Signal Name
34G	O	-
39G	W/G	-
47G	Y	-

Connector No.	M91
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
10	P	-
11	L	-

Connector No.	M163
Connector Name	CLUTCH INTERLOCK CANCEL SWITCH
Connector Color	WHITE

 


 
Terminal No.	Color of Wire	Signal Name
1	W/G	-
2	Y	-
3	O	-
4	B	-



# STARTING SYSTEM


 
## < COMPONENT DIAGNOSIS >

Connector No.	E5
Connector Name	WIRE TO WIRE
Connector Color	WHITE


 
Terminal No.	21	Color of Wire	R	Signal Name	-
--------------	----	---------------	---	-------------	---

Connector No.	E10
Connector Name	WIRE TO WIRE
Connector Color	WHITE


 
Terminal No.	3	Color of Wire	GR	Signal Name	-
4	G	-	-		

Connector No.	E26
Connector Name	WIRE TO WIRE
Connector Color	WHITE


 
Terminal No.	10	Color of Wire	P	Signal Name	-
11	L	-	-		

Connector No.	E40
Connector Name	WIRE TO WIRE
Connector Color	GRAY


 
Terminal No.	1	Color of Wire	W	Signal Name	-
--------------	---	---------------	---	-------------	---

Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

Terminal No.	14	Color of Wire	W/G	Signal Name	AT ECU IGN SUPPLY
--------------	----	---------------	-----	-------------	-------------------

Connector No.	E120
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

Terminal No.	19	Color of Wire	W	Signal Name	STARTER MTR
21	GR	-	-	IGN SW (ST)	

@AAH 06/FA

# STARTING SYSTEM

 
## < COMPONENT DIAGNOSIS >

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
59	B	GND (POWER)

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L
48	R	INHIBIT


Connector No.	E163
Connector Name	CLUTCH INTERLOCK SWITCH (WITH CLUTCH INTERLOCK CANCEL SYSTEM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	W/G	-
2	L	-

Terminal No.	Color of Wire	Signal Name
34G	O	-
39G	W/G	-
47G	Y	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

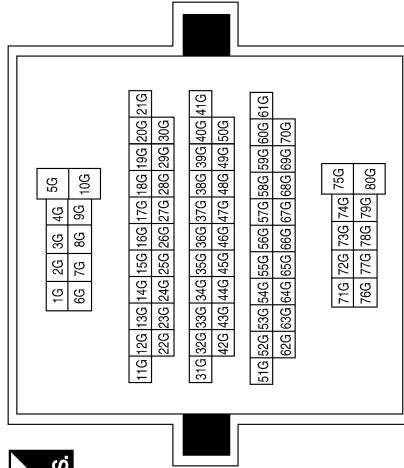

@AAH060FA

# STARTING SYSTEM

## < COMPONENT DIAGNOSIS >

Connector No.	E171
Connector Name	CLUTCH INTERLOCK CANCEL RELAY 1
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	B	-
2	W	-
3	O	-
4	R	-

Connector No.	E167
Connector Name	DIODE-3
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	L	-
2	R	-

Connector No.	E166
Connector Name	CLUTCH INTERLOCK CANCEL RELAY 2
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	B	-
2	R	-
3	W/G	-
5	B	-
6	Y	-
7	W/G	-

Connector No.	E210
Connector Name	STARTER MOTOR
Connector Color	BLACK



 
Terminal No.	Color of Wire	Signal Name
2	B/R	-

Connector No.	E207
Connector Name	STARTER MOTOR
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	W	-

Connector No.	E201
Connector Name	WIRE TO WIRE
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	W	-


@AAH 061FA

A  
STR  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# STARTING SYSTEM

 
## < COMPONENT DIAGNOSIS >

Connector No.	F502
Connector Name	TCM (TRANSMISSION CONTROL MODULE)
Connector Color	GRAY




Terminal No.	8	Color of Wire	G	Signal Name	START-RLY
--------------	---	---------------	---	-------------	-----------

Connector No.	F14
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	21	Color of Wire	R	Signal Name	-
--------------	----	---------------	---	-------------	---

Connector No.	F9
Connector Name	A/T ASSEMBLY
Connector Color	GREEN

 

Terminal No.	9	Color of Wire	R	Signal Name	-
--------------	---	---------------	---	-------------	---

@AAH 062FA

# STARTING SYSTEM


< COMPONENT DIAGNOSIS >

## Wiring Diagram - Without Clutch Interlock Cancel System

INFOID:000000004064147

■ : DATA LINE  
 (A) : WITH A/T  
 (M) : WITH M/T

### STARTING SYSTEM - WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM

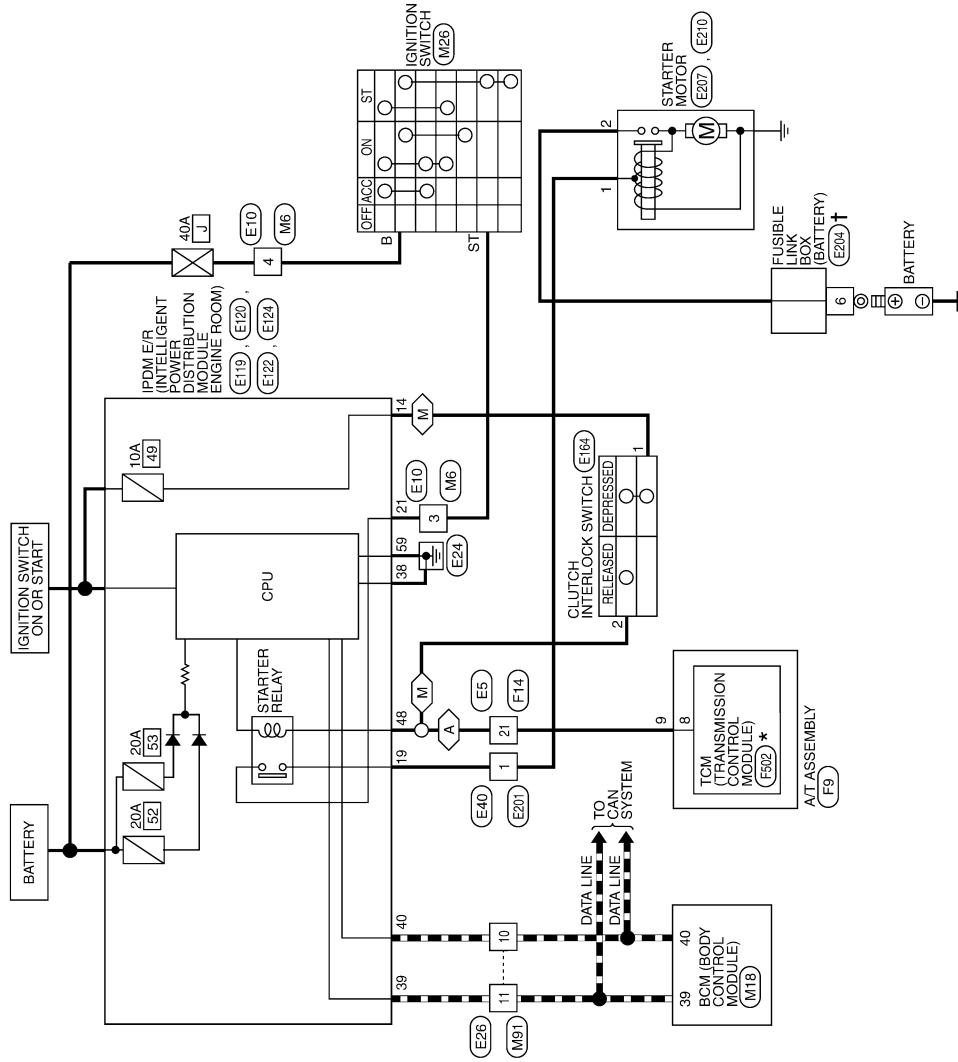

\* : THIS CONNECTOR IS NOT SHOWN IN "HARNES LAYOUT" OF PG SECTION.  
 † : THIS CONNECTOR IS AN INTEGRAL PART OF THE FUSIBLE LINK BOX (BATTERY).

©AAV @ / 5 / F /

A  
STR  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# STARTING SYSTEM

< COMPONENT DIAGNOSIS >

 
## STARTING SYSTEM CONNECTORS - WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	GR	-
4	G	-

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
39	L	CAN-H
40	P	CAN-L

Connector No.	M26
Connector Name	IGNITION SWITCH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
B	G	-
ST	GR	-

Connector No.	M91
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
10	P	-
11	L	-

Connector No.	E5
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
21	R	-

Connector No.	E10
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	GR	-
4	G	-

# STARTING SYSTEM

 
## < COMPONENT DIAGNOSIS >

Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE




Terminal No.	14	Color of Wire	W/G	Signal Name	A/T ECU IGN SUPPLY
--------------	----	---------------	-----	-------------	--------------------

Connector No.	E40
Connector Name	WIRE TO WIRE
Connector Color	GRAY



Terminal No.	1	Color of Wire	W	Signal Name	-
--------------	---	---------------	---	-------------	---

Connector No.	E26
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Terminal No.	10	Color of Wire	P	Signal Name	-
Terminal No.	11	Color of Wire	L	Signal Name	-

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK




Terminal No.	59	Color of Wire	B	Signal Name	GND (POWER)
--------------	----	---------------	---	-------------	-------------

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

 

Terminal No.	38	Color of Wire	B	Signal Name	GND (SIGNAL)
Terminal No.	39	Color of Wire	L	Signal Name	CAN-H
Terminal No.	40	Color of Wire	P	Signal Name	CAN-L
Terminal No.	48	Color of Wire	R	Signal Name	INHIBIT

Connector No.	E120
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

 

Terminal No.	19	Color of Wire	W	Signal Name	STARTER MTR
Terminal No.	21	Color of Wire	GR	Signal Name	IGN SW (ST)

@AAH 063F A

# STARTING SYSTEM

 
## < COMPONENT DIAGNOSIS >

Connector No.	E207
Connector Name	STARTER MOTOR
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	W	-

Connector No.	E201
Connector Name	WIRE TO WIRE
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
1	W	-

Connector No.	E164
Connector Name	CLUTCH INTERLOCK SWITCH (WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM)
Connector Color	BLUE




Terminal No.	Color of Wire	Signal Name
1	W/G	-
2	R	-

Connector No.	F14
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
21	R	-

Connector No.	F9
Connector Name	A/T ASSEMBLY
Connector Color	GREEN

 

Terminal No.	Color of Wire	Signal Name
9	R	-

Connector No.	E210
Connector Name	STARTER MOTOR
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
2	B/R	-



# STARTING SYSTEM

## < COMPONENT DIAGNOSIS >

A

STR

C

D

E

F

G

H

I

J

K

L

 
M

N

O

P

Connector No.	F502
Connector Name	TCM (TRANSMISSION CONTROL MODULE)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
8	G	START-RLY

@AAH0 065F A

# STARTING SYSTEM

< SYMPTOM DIAGNOSIS >

## SYMPTOM DIAGNOSIS

### STARTING SYSTEM

#### Symptom Table

INFOID:000000004064148

Symptom	Reference
No normal cranking	Refer to <a href="#">STR-4, "Work Flow"</a> .
Starter motor does not rotate	

# STARTER MOTOR

< ON-VEHICLE REPAIR >

## ON-VEHICLE REPAIR


### STARTER MOTOR

#### Exploded View

INFOID:000000004064149

A

STR

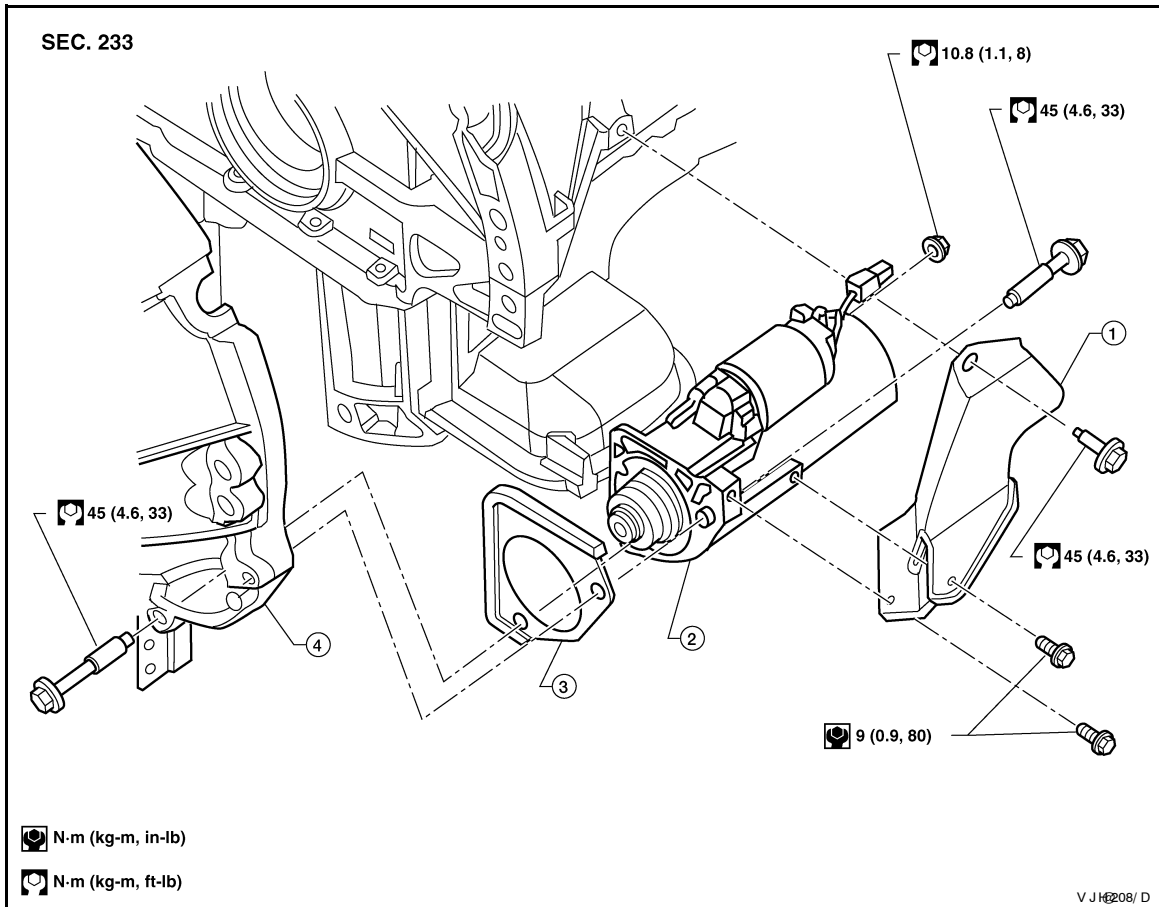

C

D

E

F

G

H

I

J

K

1. Starter cover
2. Starter motor assembly
3. Starter cover plate (rear)
4. Transmission housing

## Removal and Installation

INFOID:000000004064150

### REMOVAL

1. Disconnect the negative battery terminal.
2. Remove engine undercover, using power tools.
3. Remove exhaust manifold cover from exhaust manifold (RH) to gain access to starter cover bolts. Refer to [EM-30. "Removal and Installation"](#).
4. Remove starter cover bolts and starter cover.

L

M

N


O

P

## STARTER MOTOR

### < ON-VEHICLE REPAIR >

5. Disconnect terminal "1" connector and terminal "2" nut.
6. Remove the two starter bolts, using power tools.
7. Remove the starter.

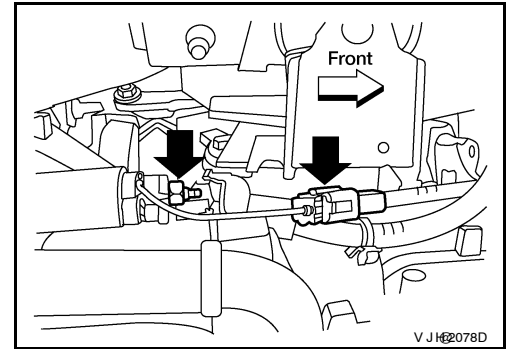

### INSTALLATION

Installation is in the reverse order of removal.

**CAUTION:**

**Tighten terminal "2" nut carefully.**

# STARTER MOTOR

< SERVICE DATA AND SPECIFICATIONS (SDS)

## SERVICE DATA AND SPECIFICATIONS (SDS)

### STARTER MOTOR

Starter

INFOID:000000004064151

A

STR

Application	All Models	
Manufacturer	Mitsubishi M001TA0072	
Type	Reduction gear type	
System voltage	12V	
No-load	Terminal voltage	11V
	Current	Less than 120A
	Revolution	More than 3,100 rpm

C

D

E

F

G

H

I

J

K

L

M

N

O

P