

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Numerics	
2nd brake	AT-663
2nd coast brake	AT-663
2nd coast brake hub	AT-669
A	
A/C air flow	ATC-27
A/C compressor clutch removal and installation ..	ATC-120
A/C compressor mounting	ATC-119
A/C compressor precaution	ATC-9
A/C compressor special service tool	ATC-12
A/C control operation (auto A/C)	ATC-24
A/C diagnostic work flow (auto A/C)	ATC-87
A/C evaporator	ATC-124
A/C HFC134a (R134a) system identification	ATC-6
A/C HFC134a (R134a) system precaution	ATC-4
A/C HFC134a (R134a) system service procedure	ATC-116
A/C HFC134a (R134a) system service tools ...	ATC-12
A/C HFC134a system service equipment precaution ...	ATC-9
A/C lubricant (R134a)	ATC-18
A/C lubrication oil	ATC-18
A/C operational check	ATC-50
A/C self-diagnoses (auto A/C)	ATC-42 , ATC-87
A/C service data specification	ATC-130
A/C system description (auto A/C)	ATC-21
A/C trouble diagnoses (auto A/C)	ATC-30
A/C, A - Wiring diagram	ATC-36
A/T - Wiring diagram	AT-19
A/T fluid checking	AT-400 , AT-439
A/T fluid replacement	AT-400
A/T fluid temperature sensor	AT-112 , AT-479 , AT-484
A/T IND - Wiring diagram	DI-50
A/T indicator	DI-50
A/T self-diagnoses	AT-44 , AT-54 , AT-55 , AT-459 , AT-464
A/T shift lock system	AT-261 , AT-617
A/T shift lock system - Wiring diagram	AT-262 , AT-618
A/T trouble diagnoses	AT-429
A/T Wiring diagram AT - 1ST	AT-129 , AT-500
A/T Wiring diagram AT - 2ND	AT-134 , AT-504
A/T Wiring diagram AT - 3RD	AT-139 , AT-510
A/T Wiring diagram AT - 4TH	AT-144 , AT-516
A/T Wiring diagram AT - 5TH	AT-521
A/T Wiring diagram AT - BA/FTS	AT-194
A/T Wiring diagram AT - CAN	AT-190 , AT-468
A/T Wiring diagram AT - ENG SS	AT-124
A/T Wiring diagram AT - FTS	AT-114 , AT-480
A/T Wiring diagram AT - FTSP	AT-485
A/T Wiring diagram AT - LPSV	AT-164
A/T Wiring diagram AT - MAIN	AT-103
A/T Wiring diagram AT - MMSW	AT-583
A/T Wiring diagram AT - NONDTC	AT-212
A/T Wiring diagram AT - OVRCSV	AT-186
A/T Wiring diagram AT - PC/A	AT-529
A/T Wiring diagram AT - PC/B	AT-564
A/T Wiring diagram AT - PC/C	AT-573
A/T Wiring diagram AT - PC/CS	AT-578
A/T Wiring diagram AT - PNP/SW	AT-108 , AT-475
A/T Wiring diagram AT - PWR/IN	AT-589
A/T Wiring diagram AT - SFTFNC	AT-569
A/T Wiring diagram AT - SSV/A	AT-170 , AT-534
A/T Wiring diagram AT - SSV/B	AT-175 , AT-539
A/T Wiring diagram AT - SSV/C	AT-544
A/T Wiring diagram AT - SSV/CS	AT-549
A/T Wiring diagram AT - SSV/D	AT-554
A/T Wiring diagram AT - SSV/E	AT-559
A/T Wiring diagram AT - TCCSIG	AT-156 , AT-526
A/T Wiring diagram AT - TCV	AT-151
A/T Wiring diagram AT - TPS	AT-181
A/T Wiring diagram AT - TRSC	AT-490
A/T Wiring diagram AT - VSS A/T	AT-120
A/T Wiring diagram AT - VSSATC	AT-494
A/T Wiring diagram AT - VSSMTR	AT-200 , AT-205
Accelerator control system	ACC-2
Accelerator pedal position (APP) sensor	EC-605 , EC-611 , EC-623
Accelerator pedal released position learning	EC-48
Active damper suspension system - Wiring diagram	FSU-4
AF1B1-Wiring diagram	EC-483 , EC-490 , EC-497 , EC-506 , EC-516 , EC-524 , EC-536
AF1B2-Wiring diagram	EC-485 , EC-492 , EC-499 , EC-508 , EC-518 , EC-526 , EC-538
AF1HB1-Wiring diagram	EC-400
AF1HB2-Wiring diagram	EC-402
Aiming adjustment	LT-39
Air bag	SRS-3
Air bag disposal	SRS-53
Air bag precautions	GI-3
Air bleeding (hydraulic clutch)Air bleeding (hydraulic clutch)	CL-7
Air bleeding for brake systemAir bleeding for brake system	BR-8
Air cleaner and air duct	EM-15
Air cleaner filter replacement	MA-16
Air conditioner cut control	EC-33
Air flow meter - See Mass air flow sensor	EC-164 , EC-172
Air fuel ratio sensor 1 ..	EC-481 , EC-488 , EC-495 , EC-504 , EC-513 , EC-521 , EC-533
Air fuel ratio sensor 1 heater	EC-398
Air mix. door motor	ATC-61
Ambient sensor	ATC-89 , ATC-101
Angular tightening application	EM-3
APPS1 - Wiring diagram	EC-607
APPS2 - Wiring diagram	EC-613
APPS3 - Wiring diagram	EC-625
ASC/BS - Wiring diagram	EC-576
ASC/SW - Wiring diagram	EC-569
ASCBOF - Wiring diagram	EC-673
ASCD	EC-702
ASCD brake switch	EC-574 , EC-672
ASCD clutch switch	EC-574 , EC-672

ALPHABETICAL INDEX

Control unit	ATC-100	ECM power supply	EC-140 , EC-406
Control units (terminal arrangement)	PG-64	ECM/PW - Wiring diagram	EC-407
Controller Area Network (CAN)	BRC-11 , BRC-52 , BRC-95 , LAN-8 , LAN-23 , LAN-43 , LAN-65 , LAN-87 , LAN-107 , LAN-129 , LAN-151 , LAN-174 , LAN-199 , LAN-224 , LAN-250 , LAN-276 , LAN-299 , LAN-324 , LAN-349 , LAN-375 , LAN-401 , LAN-424 , LAN-449	ECTS - Wiring diagram	EC-185
Converter housing installation	AT-374	EGR function	EC-289 , EC-545
COOL/F - Wiring diagram	EC-465	EGR temperature sensor	EC-304
Coolant mixture ratio	MA-11	EGR volume control valve	EC-297
Coolant replacementVQ35DE	MA-14	EGR/TS - Wiring diagram	EC-307
Cooling fan	CO-18	EGRC1 - Wiring diagram	EC-293 , EC-549
Cooling fan control	EC-462	EGVC/V - Wiring diagram	EC-299
Cooling fan motor	EC-462	Electric sunroof	RF-10
Cooling unit (A/C evaporator)	ATC-109 , ATC-124	Electric throttle control actuator	EC-417 , EC-419
Cornering lamp	LT-108	Electrical diagnoses	GI-22
Corrosion protection	BL-126	Electrical load signal circuit	EC-671
Coupling sleeve (M/T)	MT-22	Electronic ignition (EI) system	EC-32
Crankcase ventilation system - See Positive crankcase ventilation	EC-700	EMNT - Wiring diagram	EC-662
Crankshaft position sensor (POS)	EC-275	Engine control circuit diagram	EC-102
Crash zone sensor	SRS-49	Engine control component parts location	EC-94
Cylinder block	EM-121	Engine control module (ECM)	EC-395
Cylinder head	EM-99	Engine control system diagram and chart	EC-27

D

Data link connector for Consult	EC-115 , EC-126	Engine mounting control (Front)	EC-661
Daytime light system	LT-43	Engine oil	LU-6
Daytime running light - See Daytime light system ..	LT-43	Engine oil filter replacementQR25DE	MA-17
Diagnosis sensor unit	SRS-52	Engine oil precautions	GI-3 , GI-6
Diagnostic trouble code (DTC) for OBD system ..	EC-10 , EC-58	Engine oil replacementQR25DE	MA-16
Diagnostic trouble code (DTC) inspection priority chart ..	EC-82	Engine removal	EM-116
Differential gear (FF A/T)	AT-677	Engine serial number	GI-44
Differential gear (FF M/T)	MT-27	ETC1 - Wiring diagram	EC-420
Dimensions	GI-44	ETC2 - Wiring diagram	EC-427
Display and amp.assembly	ATC-40 , ATC-52	ETC3 - Wiring diagram	EC-431
Display Control Unit	AV-191	EVAP canister	EC-690
Display Unit	AV-95 , AV-191	EVAP canister purge volume control solenoid valve	EC-329 , EC-552
Door glass	GW-87 , GW-90	EVAP canister vent control valve	EC-336 , EC-560
Door glass Fitting Adjustment(Front)	GW-88	EVAP control system (small leak) diagnosis ..	EC-319 , EC-360 , EC-368
Door glass Fitting Adjustment(Rear)	GW-91	EVAP control system pressure sensor ...	EC-343 , EC-346 , EC-352
Door lock	BL-68	EVAP control system purge flow monitoring diagnosis .	EC-314
Door trim	EI-30	EVAP vapor lines inspection	MA-19
Door, front	BL-65 , GW-87	Evaporative emission (EVAP) system	EC-687
Door, rear	BL-65 , GW-90	Evaporator	ATC-124
Drive shaft (front)	FAX-11	Exhaust manifold	EM-26
Driver air bag	SRS-41	Exhaust system inspection	EX-3 , MA-20
Dropping resistor (A/T)	AT-162	Expansion valve	ATC-125
DTC work support	EC-124		
DTRL - Wiring diagram	LT-46		
Duct and grilles	ATC-114		

E

ECM input/output signal	EC-104 , EC-129
-------------------------------	---

F

F/FOG - Wiring diagram	LT-79
F/PUMP - Wiring diagram	EC-656
Fan control amp.	ATC-113
Final drive (FF M/T)	MT-27
Flow charts	GI-25
Fluid temperature sensor (A/T) ..	AT-112 , AT-479 , AT-484
Fluids	MA-10
Fluorescent leak detector	ATC-126

ALPHABETICAL INDEX

IVCB2 - Wiring diagram [EC-413](#)

J

Jacking points [GI-38](#)

Junction box (J/B) [PG-67](#)

K

Key illumination [LT-151](#)

Keyless entry system - See Multi-remote control system
[BL-37](#)

Knock sensor (KS) [EC-270](#)

KS - Wiring diagram [EC-271](#)

L

LAN system circuit [ATC-55](#)

Length (Dimensions) [GI-44](#)

Lifting points [GI-38](#)

Line pressure solenoid valve [AT-162](#)

Line pressure test (A/T) [AT-72](#), [AT-441](#)

Liquid gasket application [EM-4](#)

Location of electrical units [PG-57](#)

Lubricant (R134a) A/C [ATC-18](#)

Lubricants [MA-10](#)

Lubrication circuit (engine) [LU-4](#)

Lubrication oil A/C [ATC-18](#)

Lubrication-locks, hinges and hood latches [MA-30](#)

Luggage compartment trim [EI-43](#)

M

M/T major overhaul [MT-27](#)

M/T oil replacementM/T oil replacement [MT-11](#)

MAFS - Wiring diagram [EC-167](#), [EC-174](#)

Magnet clutch [ATC-72](#), [ATC-120](#)

MAIN - Wiring diagram [EC-140](#)

Mainshaft (M/T) [MT-22](#)

Maintenance [MA-4](#)

Malfunction indicator lamp (MIL) [EC-70](#)

Manual transaxle number [GI-44](#)

Manual transmission oil replacement [MA-20](#)

Map lamp [LT-151](#)

Mass air flow sensor (MAFS) [EC-164](#), [EC-172](#)

Master cylinder (brake)Master cylinder (brake) . [BR-12](#)

Master cylinder (clutch)Master cylinder (clutch) .. [CL-8](#)

Meter [DI-5](#)

METER - Wiring diagram [DI-11](#)

MIL data link connectors circuit [EC-685](#)

MIL/DL - Wiring diagram [EC-685](#)

Misfire [EC-263](#)

Mode door control linkage adjustment [ATC-60](#)

Mode door motor [ATC-58](#), [ATC-111](#)

Model variation [GI-44](#)

Multipoint fuel injection (MFI) system [EC-30](#)

Multipoint fuel injection precautions [GI-3](#), [GI-5](#)

Multi-remote control system [BL-37](#)

N

NATS - Wiring diagram [BL-101](#)

NAVI - Wiring diagram [AV-113](#)

NAVI Control Unit [AV-191](#)

Navigation system [AV-96](#)

NVH troubleshooting (BR)NVH troubleshooting (BR) ...
[BR-5](#)

NVH troubleshooting (CL)NVH troubleshooting (CL)
[CL-4](#)

NVH troubleshooting (EM) [EM-10](#)

NVH troubleshooting (FA) [FAX-4](#)

NVH troubleshooting (RA) [RAX-4](#)

NVH troubleshooting (RSU)NVH Troubleshooting (RSU)
[RSU-4](#)

NVH troubleshooting (ST) [PS-5](#)

NVH troubleshooting (WT)NVH troubleshooting (WT) ..
[WT-2](#)

O

O2H2B1 - Wiring diagram [EC-157](#)

O2H2B2 - Wiring diagram [EC-159](#)

O2S2B1 - Wiring diagram .. [EC-211](#), [EC-222](#), [EC-438](#),
[EC-450](#)

O2S2B2 - Wiring diagram .. [EC-213](#), [EC-224](#), [EC-440](#),
[EC-452](#)

Oil filter [LU-8](#)

Oil pump (A/T) [AT-663](#)

Oil pump (engine) [LU-9](#)

Oil seal replacement (engine) [EM-93](#)

On board diagnostic system [EC-53](#)

One-way clutch No.1 [AT-669](#)

One-way clutch outer race sub assembly [AT-669](#)

Operating cylinder (clutch)Operating cylinder (clutch) ..
[CL-10](#)

ORVR (On-board Refueling Vapor Recovery) [EC-694](#)

Overdrive control switch [AT-256](#)

Overheat [EC-462](#)

Overrun clutch solenoid valve [AT-184](#)

P

Park/Neutral position switch [EC-587](#)

Park/neutral position switch (A/T) [AT-106](#), [AT-474](#)

Park/neutral position switch (M/T)Park/neutral position
switch (M/T) [MT-14](#)

Parking brake controlParking brake control [PB-2](#)

Parking drum brakeParking drum brake [PB-5](#)

PCV (positive crankcase ventilation) [EC-700](#)

Periodic maintenance [MA-6](#)

Personal lamp [LT-151](#)

PGC/V - Wiring diagram [EC-331](#), [EC-554](#)

PHSB1 - Wiring diagram [EC-282](#)

PHSB2 - Wiring diagram [EC-284](#)

Piston ring inspection [EM-139](#)

PNP/SW - Wiring diagram [EC-589](#)

POS - Wiring diagram [EC-276](#)

POWER - Wiring diagram [PG-5](#)

ALPHABETICAL INDEX

<p>Power seat SE-89</p> <p>Power steering fluid level MA-27</p> <p>Power steering pressure (PSP) sensor EC-390</p> <p>Power supply routing PG-3</p> <p>Power transistor EC-629</p> <p>Power window GW-19</p> <p>PRE/SE - Wiring diagram EC-348, EC-354</p> <p>Precautions (General) GI-3</p> <p>Precautions in repairing high strength steel BL-147</p> <p>Pressure control solenoid valve A AT-528</p> <p>Pressure control solenoid valve B AT-563</p> <p>Pressure control solenoid valve C AT-572</p> <p>Pressure test (A/T) AT-72, AT-441</p> <p>PS/SEN - Wiring diagram EC-391</p>	<p>(M/T) MT-15</p> <p>Shift fork (M/T) MT-25</p> <p>Shift lock system AT-261, AT-617</p> <p>Shift schedule AT-381, AT-448</p> <p>Shift solenoid valve A (A/T) AT-168, AT-533</p> <p>Shift solenoid valve B (A/T) AT-173, AT-538</p> <p>Shift solenoid valve C (A/T) AT-543</p> <p>Shift solenoid valve D (A/T) AT-553</p> <p>Shift solenoid valve E (A/T) AT-558</p> <p>Shock absorber (front) FSU-10</p> <p>Shock absorber (rear)Shock absorber (rear) RSU-8</p> <p>Side air bag (satellite) sensor SRS-50</p> <p>Side curtain air bag SRS-47</p> <p>Side trim EI-33</p> <p>Spare tire size GI-44</p> <p>Spark plug EM-37</p> <p>Spark plug replacementQR25DE MA-18</p> <p>Specification value EC-135</p> <p>Speedometer DI-5</p> <p>Spiral cable SRS-43</p> <p>SROOF - Wiring diagram RF-12</p> <p>SRS - See Supplemental Restraint System SRS-6</p> <p>SRS - Wiring diagram SRS-13</p> <p>SRS Trouble diagnoses SRS-9</p> <p>Stabilizer bar (front) FSU-11</p> <p>Stall test (A/T) AT-69, AT-439</p> <p>Standardized relay PG-65</p> <p>START - Wiring diagram SC-11</p> <p>Starting system SC-10</p> <p>Steering gear and linkage inspection MA-27</p> <p>Steering knuckle FAX-6</p> <p>Step lamp LT-151</p> <p>Stop lamp LT-130</p> <p>Stop lamp switch EC-574, EC-600, EC-672</p> <p>STOP/L - Wiring diagram LT-131</p> <p>Strut (front) FSU-9</p> <p>Sun roof, electric RF-10</p> <p>Sunload sensor ATC-95, ATC-103</p> <p>Sunroof RF-21</p> <p>Supplemental Restraint System SRS-6</p> <p>Supplemental restraint system - Wiring diagram . SRS-13</p> <p>Symbols and abbreviations GI-8, GI-9, GI-20</p> <p>Symptom matrix chart EC-90</p> <p>Synchronizer (M/T) MT-22</p> <p>System readiness test (SRT) code EC-60</p>
R	
<p>Radiator fan - See Cooling fan CO-18</p> <p>Rear bumper EI-16</p> <p>Rear combination lamp removal and installation ... LT-149</p> <p>Rear disc brakeRear disc brake BR-29</p> <p>Rear door BL-65, GW-90</p> <p>Rear seat SE-110</p> <p>Rear seat belt SB-6</p> <p>Rear suspensionRear suspension RSU-5</p> <p>Rear window GW-14</p> <p>Rear window defogger GW-94</p> <p>Refrigerant connection precaution ATC-6</p> <p>Refrigerant discharging evacuating charging ATC-116</p> <p>Refrigerant general precaution ATC-5</p> <p>Refrigerant lines ATC-116</p> <p>Refrigerant pressure sensor ... EC-666, ATC-77, ATC-123</p> <p>Remote keyless entry system BL-37</p> <p>Removal and installation (A/T) AT-275, AT-627</p> <p>Reverse idler shaft (M/T) MT-22</p> <p>Reverse main gear (M/T) MT-22</p> <p>Revolution sensor (A/T) AT-118, AT-493</p> <p>Road wheel size GI-44</p> <p>Rocker cover EM-42</p> <p>Room lamp - See Interior lamp LT-150</p> <p>ROOM/L - Wiring diagram LT-156</p> <p>RP/SEN - Wiring diagram EC-667</p>	<p>Tachometer DI-5</p> <p>TCM circuit diagram AT-19, AT-438</p> <p>TCM inspection table AT-100, AT-456</p> <p>TCS - Wiring diagram BRC-16, BRC-57, BRC-100</p> <p>TCS component parts and connector location BRC-15, BRC-56, BRC-99</p> <p>TCS wheel sensors BRC-15, BRC-56, BRC-99</p> <p>Three way catalyst EM-26</p> <p>Three way catalyst function (Bank 1) EC-310</p> <p>Three way catalyst function (Bank 2) EC-310</p>
S	
<p>SAE J1930 terminology list GI-48</p> <p>SEAT - Wiring diagram SE-89, SE-90</p> <p>Seat belt inspection SB-7, MA-30</p> <p>Seat belt pre-tensioner disposal SRS-53</p> <p>Seat belt, front SB-4</p> <p>Seat belt, rear SB-6</p> <p>Seat, front SE-104</p> <p>Seat, rear SE-110</p> <p>SEN/PW - Wiring diagram EC-478</p> <p>SHIFT - Wiring diagram AT-262, AT-618</p> <p>Shift control components (M/T) MT-25</p> <p>Shift control components (M/T)Shift control components</p>	<p style="text-align: center;">T</p>

ALPHABETICAL INDEX

Three way catalyst precautions	GI-3 , GI-5
Throttle control motor	EC-430
Throttle control motor relay	EC-425
Throttle position sensor (TPS) ..	EC-188 , EC-195 , EC-257 , EC-473 , EC-475 , EC-617
Throttle position switch	AT-256
Throttle valve closed position learning	EC-48
Tightening torque of standard bolts	GI-42
Time lag test	AT-440
Timing chain	EM-56
Tire rotation	MA-25
Tire size	GI-44
Torque converter installation	AT-276 , AT-374 , AT-627
Torque convertor clutch solenoid valve ...	AT-149 , AT-525
Tow truck towing	GI-41
Towing point	GI-41
TPS1 - Wiring diagram	EC-259
TPS2 - Wiring diagram	EC-197
TPS3 - Wiring diagram	EC-190 , EC-619
Traction control system - Wiring diagram	BRC-16 , BRC-57 , BRC-100
Transaxle case cover	AT-671
Transaxle serial number	GI-44
Transmission case (M/T)	MT-21
TRANSMT - Wiring diagram	BL-117
Tread-FR&RR (Dimensions)	GI-44
Trim	EI-33
Trouble diagnoses	GI-9
Trunk lid trim	EI-43
Trunk room trim	EI-43
Turbine revolution sensor	AT-489
TURN - Wiring diagram	LT-94 , LT-111
Turn signal lamp	LT-90 , LT-108
Two trip detection logic	EC-53
Two-pole lift	GI-38

U

Unified meter and A/C amp.	DI-30
---------------------------------	-----------------------

V

Vacuum hose (brake system)Vacuum hose (brake system)	BR-21
Vacuum hose drawing (Engine control)	EC-28
Valve clearance	EM-89
Valve guide	EM-111 , EM-112
Valve seat	EM-113
Valve spring	EM-114
Variable induction air control system (VIAS) ..	EC-595 , EC-641
Vehicle identification number	GI-44
Vehicle recovery (freeing a stuck vehicle)	GI-41
Vehicle speed sensor (VSS)	EC-384
VENT/V - Wiring diagram	EC-338 , EC-562
VIAS - Wiring diagram	EC-643
VIAS/V - Wiring diagram	EC-596
Viscosity number (SAE)	MA-11

W

W/ANT - Wiring diagram	AV-64
WARN - Wiring diagram	DI-42
Warning chime	DI-55
Warning lamps	DI-41
Water temperature gauge	DI-5
Wheel alignment (rear)Wheel alignment (rear) .	RSU-6
Wheel balance	MA-23
Wheel bearing (front axle)	FAX-5
Wheel bearing (rear)	RAX-5
Wheel hub (front)	FAX-5 , FAX-6
Wheel hub (rear)	RAX-5
Wheel size	GI-44
Wheelarch heightWheelarch height	RSU-13
Wheelbase (Dimensions)	GI-44
Width (Dimensions)	GI-44
WINDOW - Wiring diagram	GW-28
Window, door	GW-87 , GW-90
Window, rear	GW-14
Windshield	GW-11
Wiper and washer	WW-3
Wiring Diagram (Cell code) list	PG-54
Wiring diagrams	GI-8 , GI-12