

SECTION **IDX**

ALPHABETICAL INDEX

A

B

C

D

E

F

G

H

I

J

K

L

IDX

ALPHABETICAL INDEX

Numerics	
4LO switch	TF-58
4WD - Wiring diagram	TF-23 , TF-30
4WD shift switch	TF-62
4WD system description	TF-15
4WD system diagram	TF-18
A	
A/C air flow	MTC-25
A/C compressor clutch removal and installation .	MTC-98
A/C compressor mounting	MTC-97
A/C compressor precaution	MTC-9
A/C compressor special service tool	MTC-12
A/C control operation (manual A/C)	MTC-24
A/C evaporator	MTC-104
A/C HFC134a (R134a) system identification	MTC-6
A/C HFC134a (R134a) system precaution	MTC-4
A/C HFC134a (R134a) system service procedure	MTC-94
A/C HFC134a (R134a) system service tools ..	MTC-12
A/C HFC134a system service equipment precaution ...	MTC-9
A/C lubricant (R134a)	MTC-19
A/C lubrication oil	MTC-19
A/C operational check	MTC-38
A/C service data specification	MTC-109
A/C trouble diagnoses (manual A/C)	MTC-27
A/C, M - Wiring diagram	MTC-33
A/T fluid checking	AT-13 , AT-51 , MA-22
A/T fluid cooler cleaning	AT-13
A/T fluid replacement	AT-13 , MA-24
A/T fluid temperature sensor	AT-131
A/T IND - Wiring diagram	DI-38
A/T indicator	DI-38
A/T self-diagnoses	AT-99
A/T shift lock system	AT-224
A/T trouble diagnoses	AT-41
A/T Wiring diagram AT - CAN	AT-102
A/T Wiring diagram AT - FTS	AT-132
A/T Wiring diagram AT - MAIN	AT-173
A/T Wiring diagram AT - NONDTC	AT-181
A/T Wiring diagram AT - PNP/SW	AT-110
A/T Wiring diagram AT - STSIG	AT-105
A/T Wiring diagram AT - VSS A/T	AT-115
ABLS - Wiring diagram	BRC-56
ABLS (active brake limited slip)	BRC-47
ABS - Wiring diagram	BRC-17 , BRC-56 , BRC-102 , BRC-164
ABS (anti-lock brake system) ..	BRC-9 , BRC-47 , BRC-93 , BRC-154
Accelerator control system	ACC-2
Accelerator pedal position (APP) sensor .	EC-639 , EC-645 , EC-659
Accelerator pedal released position learning	EC-89
AF1B1-Wiring diagram	EC-488 , EC-497 , EC-506 , EC-516 , EC-527 , EC-537 , EC-549
AF1B2-Wiring diagram	EC-490 , EC-499 , EC-508 , EC-518 , EC-529 , EC-539 , EC-551
AF1HB1-Wiring diagram	EC-404
AF1HB2-Wiring diagram	EC-406
Aiming adjustment	LT-27 , LT-53
Air bag	SRS-3
Air bleeding (hydraulic clutch)	CL-8
Air cleaner and air duct	EM-15
Air cleaner filter	EM-15
Air cleaner filter replacement	MA-17
Air conditioner cut control	EC-29
Air flow meter - See Mass air flow sensor	EC-184 , EC-193
Air fuel ratio sensor 1 ..	EC-486 , EC-495 , EC-504 , EC-514 , EC-524 , EC-534 , EC-546
Air fuel ratio sensor 1 heater	EC-402
Air mix. door motor	MTC-47
Angular tightening application	EM-4
Antenna	AV-44
Anti-lock brake system - Wiring diagram	BRC-17 , BRC-56 , BRC-102 , BRC-164
APPS1 - Wiring diagram	EC-641
APPS2 - Wiring diagram	EC-647
APPS3 - Wiring diagram	EC-661
ASC/BS - Wiring diagram	EC-609
ASC/SW - Wiring diagram	EC-602
ASCBOF - Wiring diagram	EC-708
ASCD	EC-30
ASCD (automatic speed control device)	ACS-2
ASCIND - Wiring diagram	EC-722
ATP switch	TF-86 , TF-88
Audio	AV-4
AUDIO - Wiring diagram	AV-8
Automatic transmission number	GI-49
B	
B/COMP - Wiring diagram	DI-58
Back door trim	EI-24
BACK/L - Wiring diagram	LT-85
Back-up lamp	LT-85
Back-up lamp switch (M/T)	MT-12 , MT-21
Ball joint (front)	FSU-14
Basic inspection	EC-72
Battery	SC-4
Battery current sensor .	EC-572 , EC-579 , EC-586 , EC-593
Battery/Starting/Charging System Tester	SC-6 , SC-18 , SC-27
Baulk ring (M/T)	MT-23
BCM (Body control module)	BCS-3
Block heater	EM-107
Blower motor	MTC-55 , MTC-81
Board computer	DI-57
Body alignment	BL-140
Body component parts	BL-127
Body construction	BL-139
Body exterior paint color	BL-126
Body mounting	BL-125

ALPHABETICAL INDEX

Body repair	BL-126	Compressor clutch removal and installation ...	MTC-98	
Body sealing	BL-136	Compressor mounting	MTC-97	
Boring/horning cylinder block	EM-128	Compressor precaution	MTC-9	
Brake booster	BR-16	Compressor special service tool	MTC-12	
Brake fluid level	MA-30	Condenser	MTC-102	
Brake hydraulic line	BR-11	Connecting rod	EM-125	
Brake inspection	MA-31	Connecting rod bearing clearance	EM-129	
Brake lines and cables inspection	MA-30	Connecting rod bushing clearance	EM-125	
Brake master cylinder	BR-14	Console box - See Instrument panel	IP-10	
Brake switch	EC-634	CONSULT for ABLS	BRC-64	
BRK/SW - Wiring diagram	EC-635	CONSULT for ABS BRC-24 , BRC-64 , BRC-114 , BRC-177		
Bulb specifications	LT-155	CONSULT for TCS	BRC-114 , BRC-177	
Bumper, front	EI-14	CONSULT for VDC	BRC-114 , BRC-177	
Bumper, rear	EI-15	Control units (terminal arrangement)	PG-74	
C				
Cabin air filter	MTC-82	Control valve (A/T)	AT-35	
Camshaft	EM-74	Controller Area Network (CAN) WT-10 , BRC-11 , BRC-50 , BRC-96 , BRC-158 , LAN-39 , LAN-62 , LAN-85 , LAN-109 , LAN-136 , LAN-165 , LAN-189 , LAN-215 , LAN-241 , LAN-268 , LAN-297 , LAN-327		
Camshaft inspection	EM-76	Converter housing installation	AT-249 , AT-252	
Camshaft position sensor (PHASE)	EC-306	COOL/F - Wiring diagram	EC-470	
CAN - Wiring diagram EC-169 , LAN-41 , LAN-64 , LAN-87 , LAN-111 , LAN-138 , LAN-167 , LAN-191 , LAN-217 , LAN-243 , LAN-270 , LAN-299 , LAN-329		Coolant mixture ratio	MA-12	
CAN (Controller Area Network) WT-10 , BRC-11 , BRC-50 , BRC-96 , BRC-158 , LAN-39 , LAN-62 , LAN-85 , LAN-109 , LAN-136 , LAN-165 , LAN-189 , LAN-215 , LAN-241 , LAN-268 , LAN-297 , LAN-327		Coolant replacement	MA-13	
CAN communication . EC-168 , AT-101 , TF-19 , TF-83 , RFD-80 , RFD-106 , WT-10 , BRC-11 , BRC-50 , BRC-96 , BRC-158 , LAN-39 , LAN-62 , LAN-85 , LAN-109 , LAN-136 , LAN-165 , LAN-189 , LAN-215 , LAN-241 , LAN-268 , LAN-297 , LAN-327		Cooling circuit (engine)	CO-7	
Canister-See EVAP canister	EC-36	Cooling fan	CO-14	
CHARGE - Wiring diagram	SC-26	Cooling fan motor	EC-476	
Charging system	SC-24	Cooling unit (A/C evaporator)	MTC-84 , MTC-104	
Chassis and body maintenance	MA-21	Corrosion protection	BL-133	
Chassis and body maintenanceSchedule 1	MA-8	Counter gear (M/T)	MT-23	
Chassis and body maintenanceSchedule 2	MA-10	Coupling sleeve (M/T)	MT-23	
CHIME - Wiring diagram	DI-43	Crankcase ventilation system - See Positive crankcase ventilation	EC-45	
Circuit breaker	PG-70	Crankshaft	EM-129	
Closed loop control	EC-26	Crankshaft position sensor (POS)	EC-299	
Clutch cover	CL-16	Crash zone sensor	SRS-52	
Clutch disc	CL-16	CUR/SE - Wiring diagram ... EC-574 , EC-581 , EC-588 , EC-595		
Clutch master cylinder	CL-9	Cylinder block	EM-107	
Clutch operating cylinder	CL-11	Cylinder head	EM-92	
Clutch pedal	CL-6	Cylinder head bolt tightening	EM-95	
Clutch release bearing	CL-14	D		
Clutch release mechanism	CL-14	Daytime light system	LT-32	
Clutch withdrawal lever	CL-14	Daytime running light - See Daytime light system ..	LT-32	
Coil spring (front)	FSU-9	DEF - Wiring diagram	GW-65	
Collision diagnosis	SRS-57	Diagnosis sensor unit	SRS-55	
Combination lamp, rear, removal and installation ..	LT-105	Diagnostic trouble code (DTC) for OBD system ..	EC-9	
Combination meter	DI-4	Diagnostic trouble code (DTC) inspection priority chart EC-100		
Combination switch	LT-74	Differential gear oil replacement	MA-27	
COMBSW - Wiring diagram	LT-74	DIFLOC - Wiring diagram	RFD-83	
Component Location (manual A/C)	MTC-30	Dimensions	GI-50	
Compression pressure	EM-92	Direct clutch solenoid valve	AT-153 , AT-155	
		Dome light - See Interior lamp	LT-114	
		Door glass	GW-50 , GW-54	
		Door lock	BL-100	

A
B
C
D
E
F
G
H
I
J
K
L
IDX

ALPHABETICAL INDEX

Door trim	EI-24	F/PUMP - Wiring diagram	EC-696
Door, front	BL-95 , GW-50	Final drive pre-inspection	FFD-17 , RFD-17
Door, rear	BL-95 , GW-54	Final drive removal and installation ..	RFD-14 , RFD-49 , RFD-122
Drive belt	EM-13	Flow charts	GI-28
Drive chain (Transfer)	TF-110 , TF-112 , TF-118	Fluid temperature sensor (A/T)	AT-131
Driver air bag	SRS-42	Fluids	MA-11
DTC work support	EC-138	Fluorescent leak detector	MTC-105
DTRL - Wiring diagram	LT-35	Flywheel (clutch)	CL-16
Duct and grilles	MTC-91	Flywheel runout	EM-132
E			
ECM input/output signal	EC-117	Fog lamp, front	LT-44
ECM power supply	EC-160 , EC-410	Fork rod (M/T)	MT-25
ECM/PW - Wiring diagram	EC-411	Freeze frame data	EC-53
ECTS - Wiring diagram	EC-207	Front brake solenoid valve	AT-149 , AT-151
Electric throttle control actuator ..	EM-18 , EC-421 , EC-423	Front bumper	EI-14
Electrical load signal circuit	EC-706	Front case (Transfer)	TF-110 , TF-112 , TF-118
Electrical units location	PG-67	Front door	BL-95 , BL-100 , GW-50
Electronic ignition (EI) system	EC-27	Front Door Trim	EI-24
Engine control circuit diagram	EC-115	Front drive shaft (Transfer) ..	TF-110 , TF-112 , TF-118 , TF-131
Engine control component parts location	EC-107	Front final drive removal and installation (4WD) ..	FFD-14
Engine control module (ECM)	EC-399	Front fog lamp	LT-44
Engine control system diagram	EC-24	Front passenger air bag	SRS-46
Engine coolant temperature sensor (ECTS) ...	EC-205 , EC-217	Front seat	SE-10
Engine fail-safe system	EC-102	Front seat belt	SB-3
Engine oil	LU-6	Front seat belt pre-tensioner	SRS-3 , SRS-54
Engine oil filter replacement	MA-18	Front washer	WW-4
Engine oil precautions	GI-7	Front wiper	WW-4
Engine oil replacement	MA-17	FTTS - Wiring diagram	EC-269 , EC-274
Engine removal	EM-104	Fuel cut control (at no load high engine speed) ..	EC-28
Engine room cover	EM-12	Fuel filter replacement	FL-6
Engine serial number	GI-49	Fuel gauge	DI-4
ETC1 - Wiring diagram	EC-424	Fuel injection system (Bank 1)	EC-247 , EC-257
ETC2 - Wiring diagram	EC-431	Fuel injection system (Bank 2)	EC-247 , EC-257
ETC3 - Wiring diagram	EC-435	Fuel injector and fuel tube	EM-34
EVAP canister	EC-36	Fuel level sensor	EC-382 , EC-384 , EC-386
EVAP canister purge volume control solenoid valve	EC-335	Fuel line inspection	FL-4
EVAP canister vent control valve	EC-342 , EC-566	Fuel pressure check	EC-92
EVAP control system (small leak) diagnosis ..	EC-327 , EC-366	Fuel pressure release	EC-92
EVAP control system pressure sensor	EC-349 , EC-352 , EC-358	Fuel pump	EC-695
EVAP control system purge flow monitoring diagnosis	EC-321	Fuel pump and gauge	FL-6
EVAP vapor lines inspection	MA-20	Fuel system	FL-4
Evaporative emission (EVAP) system	EC-33	Fuel tank	FL-11
Evaporator	MTC-104	Fuel tank temperature sensor	EC-267 , EC-273
Exhaust manifold	EM-21	Fuel tank vacuum relief valve	EC-36
Exhaust system	EX-3	FUELB1 - Wiring diagram	EC-249 , EC-259
Exhaust system inspection	EX-3	FUELB2 - Wiring diagram	EC-250 , EC-260
Expansion valve	MTC-105	Fuse	PG-70 , PG-80
F			
F/FOG - Wiring diagram	LT-46	Fuse and fusible link box	PG-80
G			
Garage jack and safety stand	GI-41		
Gauges	DI-4		
Gear components (M/T)	MT-23		
Generator	SC-24		

ALPHABETICAL INDEX

Generic scan tool (GST)	EC-140	Intake door control linkage adjustment	MTC-52
Glass	GW-11 , GW-50 , GW-54	Intake door motor	MTC-51 , MTC-87
Grease	MA-11	Intake manifold	EM-19
Ground distribution	PG-30	Intake manifold collector	EM-16
H			
H/LAMP - Wiring diagram	LT-8	Intake sensor	MTC-77 , MTC-80
Handling precautions for plastics	BL-154	Intake valve timing control (Bank 1)	EC-171
Harness connector	PG-71	Intake valve timing control (Bank 2)	EC-171
Harness layout	PG-40	Intake valve timing control solenoid valve (Bank 1) EC-414	
Hazard warning lamp	LT-56	Intake valve timing control solenoid valve (Bank 2) EC-414	
Headlamp	LT-5	Interior	EI-27
Heated oxygen sensor 2 (bank 1)	EC-225 , EC-235 , EC-439 , EC-451	Interior lamp	LT-114
Heated oxygen sensor 2 (bank 2)	EC-225 , EC-235 , EC-439 , EC-451	Interior lamp on-off control	LT-114
Heated oxygen sensor 2 heater (bank 1)	EC-175	Internal gear (Transfer)	TF-110 , TF-112 , TF-118
Heated oxygen sensor 2 heater (bank 2)	EC-175	IPDM (Intelligent power distribution module engine room)	PG-17
Heater and cooling unit (Heater core) .	MTC-84 , MTC-86	IVCB1 - Wiring diagram	EC-415
Heater unit (heater core)	MTC-84 , MTC-86	IVCB2 - Wiring diagram	EC-417
Height (Dimensions)	GI-50	IVIS (Infiniti vehicle immobilizer system) precautions ...	GI-3
HFC134a (R134a) system identification	MTC-6	J	
HFC134a (R134a) system precaution	MTC-4	Jacking points	GI-41
HFC134a (R134a) system service procedure	MTC-94	Junction box (J/B)	PG-79
HFC134a (R134a) system service tools	MTC-12	K	
HFC134a system service equipment precaution	MTC-9	Key illumination	LT-114
High & low reverse clutch solenoid valve .	AT-157 , AT-159	KEYLES - Wiring diagram	BL-48
Horn	WW-56	Knock sensor (KS)	EC-294
HORN - Wiring diagram	WW-56	KS - Wiring diagram	EC-295
How to erase DTC for OBD system	EC-62	L	
I			
I/MIRR - Wiring diagram	GW-59	Leaf spring (rear)	RSU-8
IATS - Wiring diagram	EC-202	Length (Dimensions)	GI-50
Identification plate	GI-48	License lamp	LT-88
Idle air volume learning	EC-90	Lifting points	GI-42
Idle mixture ratio	EC-78	Line pressure solenoid valve	AT-124
Idle speed	EC-78	Line pressure test (A/T)	AT-52
Idle speed control (ISC)	EC-390 , EC-392	Liquid gasket application	EM-5 , LU-2 , CO-2
Ignition coil	EM-31 , EC-666	Location of electrical units	PG-67
Ignition control system	EC-666	Low coast brake solenoid valve	AT-161 , AT-163
Ignition key hole illumination	LT-114	Low tire pressure warning system	WT-8
Ignition timing	EC-78	Low tire pressure warning system - trouble diagnoses	WT-11
IGNSYS - Wiring diagram	EC-667	Low tire pressure warning system - Wiring diagram	WT-11
ILL - Wiring diagram	LT-147	Lubricant (R134a) A/C	MTC-19
Illumination	LT-142	Lubricants	MA-11
Illumination control	LT-142 , LT-154	Lubrication circuit (engine)	LU-4
In-cabin Microfilter	MTC-82	Lubrication oil A/C	MTC-19
INJECT - Wiring diagram	EC-689	Lubrication-locks, hinges and hood latches	MA-33
Injector	EC-688	Luggage room lamp	LT-114
Input clutch solenoid valve	AT-145 , AT-147		
Instrument panel	IP-10		
Instrument panel speaker	AV-42		
INT/L - Wiring diagram	LT-121		
Intake air temperature sensor	EC-200 , EC-220		

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

M

MAFS - Wiring diagram	EC-187 , EC-195
Magnet clutch	MTC-63 , MTC-98
MAIN - Wiring diagram	EC-160
Main drive gear (M/T)	MT-23
Mainshaft (M/T)	MT-23
Mainshaft (Transfer)	TF-110 , TF-112 , TF-118
Maintenance (engine) Schedule 1	MA-7
Maintenance (engine) Schedule 2	MA-9
Major overhaul (Final drive)	FFD-16 , RFD-15 , RFD-50 , RFD-123
Major overhaul (Transfer)	TF-110
Malfunction indicator lamp (MIL)	EC-63
Map lamp	LT-114
Mass air flow sensor (MAFS)	EC-184 , EC-193
Master cylinder (clutch)	CL-9
Meter	DI-4
METER - Wiring diagram	DI-9
MIL data link connectors circuit	EC-724
MIL/DL - Wiring diagram	EC-724
MIRROR - Wiring diagram	GW-82
Misfire	EC-285
Mode door control linkage adjustment	MTC-44
Mode door motor	MTC-43 , MTC-88
Model variation	GI-47
Multiport fuel injection (MFI) system	EC-25
Multiport fuel injection precautions	GI-6
Multi-remote control system - See Remote keyless entry system	BL-43

N

NATS - Wiring diagram	BL-108
NVH troubleshooting (AX)	FAX-4
NVH troubleshooting (EM)	EM-10
NVH troubleshooting (Final drive)	FFD-6 , RFD-8 , RFD-42 , RFD-76
NVH troubleshooting (M/T)	MT-7
NVH troubleshooting (Propeller shaft)	PR-3
NVH troubleshooting (ST)	PS-5
NVH troubleshooting (Transfer)	TF-11
NVH troubleshooting (WT) NVH troubleshooting (WT) .	WT-4
NVIS (Nissan vehicle immobilizer system)	BL-105
NVIS (Nissan vehicle immobilizer system) precautions	GI-3

O

O2H2B1 - Wiring diagram	EC-177
O2H2B2 - Wiring diagram	EC-179
O2S2B1 - Wiring diagram ..	EC-227 , EC-238 , EC-442 , EC-454
O2S2B2 - Wiring diagram ..	EC-229 , EC-240 , EC-444 , EC-456
Oil cooler (engine)	LU-10
Oil filter	LU-9
Oil pan (engine)	EM-26

Oil pressure (engine)	LU-7
Oil pump (A/T)	AT-282
Oil pump (engine)	LU-12
Oil pump regulator valve (engine)	LU-12
Oil seal replacement (engine)	EM-88
Oil seal replacement (front of final drive)	FFD-9 , RFD-11
Oil seal replacement (side of final drive)	FFD-12
On board diagnostic system	EC-48
Operating cylinder (clutch)	CL-11
ORVR (On-board Refueling Vapor Recovery) ..	EC-40
Overheat	EC-466
Oversize piston	EM-127

P

P/SCKT - Wiring diagram	WW-54
Pantograph jack	GI-41
Park/Neutral position switch	EC-622
Park/neutral position switch (A/T)	AT-109
Park/neutral position switch (M/T)	MT-12 , MT-21
Parking brake control	PB-4
Parking lamp	LT-88
PCV (positive crankcase ventilation)	EC-45
PGC/V - Wiring diagram	EC-337 , EC-560
PHSB1 - Wiring diagram	EC-308
PHSB2 - Wiring diagram	EC-310
Pilot bushing replacement - See Pilot converter ...	EM-108
Piston assembly	EM-118
Piston pin inspection	EM-123
Piston ring inspection	EM-124
Piston to bore clearance	EM-127
Planetary carrier (Transfer) ..	TF-110 , TF-112 , TF-118 , TF-127
PNP/SW - Wiring diagram	EC-624
POS - Wiring diagram	EC-301
POWER - Wiring diagram	PG-6
Power door lock	BL-16
Power door mirror	GW-82
Power steering fluid level	MA-32
Power steering gear	PS-15
Power steering oil pump	PS-20
Power steering pressure (PSP) sensor	EC-394
Power steering system bleeding	PS-6
Power supply routing	PG-4
Power window	GW-15
PRE/SE - Wiring diagram	EC-354 , EC-360
Precautions (General)	GI-4
Precautions in repairing high strength steel	BL-157
Pressure plate - See Clutch cover	CL-16
Pressure switch 1	AT-151 , AT-165
Pressure switch 2	AT-163
Pressure switch 3	AT-147 , AT-167
Pressure switch 5	AT-155 , AT-169
Pressure switch 6	AT-159 , AT-171
Pressure test (A/T)	AT-52
Propeller shaft	PR-4 , PR-9
Propeller shaft inspection	MA-26

ALPHABETICAL INDEX

Propeller shaft on vehicle service	PR-9	
Propeller shaft vibration	PR-4 , PR-9	
PS/SEN - Wiring diagram	EC-395	
 R		
Radiator	CO-11	
Radio - See Audio	AV-4	
Rear bumper	EI-15	
Rear case (Transfer)	TF-110 , TF-112 , TF-118	
Rear combination lamp removal and installation ...	LT-105	
Rear cover packing replacement diff.	FFD-13 , RFD-13	
Rear door	BL-95 , GW-54	
Rear seat	SE-16	
Rear seat belt	SB-5	
Rear washer	WW-35	
Rear window defogger	GW-62	
Rear wiper	WW-35	
Refrigerant connection precaution	MTC-6	
Refrigerant discharging evacuating charging .	MTC-94	
Refrigerant general precaution	MTC-5	
Refrigerant lines	MTC-94 , MTC-101 , MTC-102	
Refrigerant pressure sensor	EC-701 , MTC-102	
Relay box	PG-81	
Release bearing (clutch)	CL-14	
Remote keyless entry system	BL-43	
Removal and installation (A/T)	AT-246 , AT-250	
Removal and installation (Transfer)	TF-109	
Reverse idler shaft (M/T)	MT-23	
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T)	MT-12 , MT-21	
Reverse main gear (M/T)	MT-23	
Revolution sensor (A/T)	AT-113	
Road wheel size	GI-50	
Rocker cover	EM-40	
Room lamp	LT-114	
Room lamp - See Interior lamp	LT-114	
ROOM/L - Wiring diagram	LT-121	
RP/SEN - Wiring diagram	EC-702	
 S		
SAE J1979 - Service \$01 - 09	EC-48	
Seat belt inspection	SB-8 , MA-34	
Seat belt pre-tensioner	SRS-54	
Seat belt, front	SB-3	
Seat belt, rear	SB-5	
Seat, front	SE-10	
Seat, rear	SE-16	
Self-diagnosis (Transfer)	TF-44	
SEN/PW - Wiring diagram	EC-482	
SHIFT - Wiring diagram	AT-225	
Shift control (Transfer) ..	TF-110 , TF-112 , TF-118 , TF-133	
Shift control components (M/T)	MT-25	
Shift fork (M/T)	MT-25	
Shift lever	MT-13	
Shift lock system	AT-224	
Shock absorber (front)	FSU-9	A
Shock absorber (rear)	RSU-7	
Side air bag (satellite) sensor	SRS-53	
Side curtain air bag	SRS-50	
Side trim	EI-27	B
SMJ (super multiple junction)	PG-77	
Spare tire size	GI-50	C
Spark plug	EM-32	
Spark plug replacement	MA-19	
Specification value	EC-149	D
Speedometer	DI-4	
Spiral cable	SRS-44	
SRS - See Supplemental Restraint System	SRS-5	
SRS - Wiring diagram	SRS-12	
SRS Trouble diagnoses	SRS-8	E
Stabilizer bar (front)	FSU-11	
Stabilizer bar (rear)	RSU-11	
Stall test (A/T)	AT-51	F
Standardized relay	PG-75	
START - Wiring diagram	SC-12	G
Starting system	SC-10	
Steering gear, linkage and transfer gear inspection	MA-31	H
Steering linkage	PS-15	
Steering wheel and column	PS-8	
Stop lamp	LT-81	I
Stop lamp switch	EC-634	
STOP/L - Wiring diagram	LT-82	J
Striking rod (M/T)	MT-25	
Strut (front)	FSU-9	K
Sun gear (Transfer)	TF-110 , TF-112 , TF-118	L
Supplemental Restraint System	SRS-5	
Symbols and abbreviations	GI-10 , GI-23	IDX
Symptom matrix chart	EC-103	
Synchronizer (M/T)	MT-23	
System readiness test (SRT) code	EC-54	
 T		
T/TOW - Wiring diagram	LT-110	
Tachometer	DI-4	
Tail lamp	LT-88	
TAIL/L - Wiring diagram	LT-91	
TCM circuit diagram	AT-50	
TCM inspection table	AT-84	
TCS - Wiring diagram	BRC-102 , BRC-164	
TCS (traction control system)	BRC-93 , BRC-154	
TCS component parts and connector location ...	BRC-100 , BRC-162	
Theft warning system - See Vehicle security (Theft warning) system	BL-71	
Thermostat	CO-21	
Three way catalyst	EM-21	
Three way catalyst function (Bank 1)	EC-315	
Three way catalyst function (Bank 2)	EC-315	
Three way catalyst precautions	GI-5	
Throttle control motor	EC-434	
Throttle control motor relay	EC-429	
Throttle position sensor (TPS) ...	EC-210 , EC-278 , EC-	

ALPHABETICAL INDEX

477, EC-479, EC-652	
Throwout bearing - See Clutch release bearing	CL-14
Tie-rod	PS-15
Timing chain	EM-54
Tire rotation	MA-30
Tire size	GI-50
Torque converter installation	AT-248, AT-249, AT-252
Torque convertor clutch solenoid valve ...	AT-120, AT-122
Tow truck towing	GI-43
Towing point	GI-44
TPS1 - Wiring diagram	EC-280
TPS2 - Wiring diagram	EC-212
TPS3 - Wiring diagram	EC-654
Traction control system - Wiring diagram	BRC-102, BRC-164
Transfer control device	TF-75, TF-106
Transfer control unit inspection table	TF-36
Transfer serial number	GI-49
Transmission case (M/T)	MT-21
Transmission serial number	GI-49
Tread-FR&RR (Dimensions)	GI-50
Trim	EI-27
Trouble diagnoses	GI-11
Turbine revolution sensor	AT-136
TURN - Wiring diagram	LT-59
Turn signal lamp	LT-56
Two trip detection logic	EC-48
Two-pole lift	GI-42
Warning chime	DI-40
Warning lamps	DI-28
Washer, front	WW-4
Washer, rear	WW-35
Water pump	CO-16
Water temperature gauge	DI-4
Wheel alignment (front)	FSU-6
Wheel balance	MA-28
Wheel bearing (front)	FAX-5
Wheel bearing (rear)	RAX-6, RAX-18
Wheel size	GI-50
Wheelbase (Dimensions)	GI-50
Width (Dimensions)	GI-50
WINDOW - Wiring diagram	GW-21
Window, door	GW-50, GW-54
Windshield	GW-11
Windshield washer - See Front washer	WW-4
Windshield wiper - See Front wiper	WW-4
WIP/R - Wiring diagram	WW-37
WIPER - Wiring diagram	WW-9
Wiper, front	WW-4
Wiper, rear	WW-35
Wiring Diagram (Cell code) list	PG-65
Wiring diagrams	GI-16
Withdrawal lever (clutch)	CL-14
WT-T/WARN - Wiring diagram	WT-11

V

Vacuum hose (brake system)	BR-19
Vacuum hose drawing (Engine control)	EC-114
Valve clearance	EM-83
Valve guide	EM-99, EM-100
Valve lifter	EM-78
Valve seat	EM-101
Valve spring	EM-102, EM-103
Vanity mirror lamp	LT-114
Variable induction air control system (VIAS) ..	EC-629, EC-679
VDC (vehicle dynamics control)	BRC-93, BRC-154
VDC -Wiring diagram	BRC-102, BRC-164
Vehicle identification number	GI-48
Vehicle recovery (freeing a stuck vehicle)	GI-44
Vehicle security (theft warning) system	BL-71
Vehicle speed sensor (VSS)	EC-388, EC-628
VEHSEC - Wiring diagram	BL-76
VENT/V - Wiring diagram	EC-344, EC-568
VIAS - Wiring diagram	EC-681
VIAS/V - Wiring diagram	EC-630
VIN registration	EC-89
Viscosity number (SAE)	MA-12

W

Wait detection switch	TF-66
WARN - Wiring diagram	DI-29