

A
B
C

WT

SECTION

ROAD WHEELS & TIRES

CONTENTS

WT

<p>PRECAUTIONS 3</p> <p style="padding-left: 20px;">Precautions for Battery Service 3</p> <p>PREPARATION 4</p> <p style="padding-left: 20px;">Special Service Tools 4</p> <p style="padding-left: 20px;">Commercial Service Tools 4</p> <p>NOISE, VIBRATION AND HARSHNESS (NVH)</p> <p>TROUBLESHOOTING 5</p> <p style="padding-left: 20px;">NVH Troubleshooting Chart 5</p> <p>ROAD WHEEL 6</p> <p style="padding-left: 20px;">Inspection 6</p> <p style="padding-left: 40px;">ALUMINUM WHEEL 6</p> <p style="padding-left: 40px;">STEEL WHEEL 6</p> <p>ROAD WHEEL TIRE ASSEMBLY 7</p> <p style="padding-left: 20px;">Balancing Wheels (Bonding Weight Type) 7</p> <p style="padding-left: 20px;">REMOVAL 7</p> <p style="padding-left: 20px;">WHEEL BALANCE ADJUSTMENT 7</p> <p style="padding-left: 20px;">Tire Rotation 8</p> <p>LOW TIRE PRESSURE WARNING SYSTEM 9</p> <p style="padding-left: 20px;">System Components 9</p> <p style="padding-left: 20px;">System Description 9</p> <p style="padding-left: 40px;">TRANSMITTER 9</p> <p style="padding-left: 40px;">ANTENNA 9</p> <p style="padding-left: 20px;">LOW TIRE PRESSURE WARNING CONTROL UNIT 10</p> <p style="padding-left: 20px;">DISPLAY (TRIPLE METER) 10</p> <p>CAN COMMUNICATION 11</p> <p style="padding-left: 20px;">System Description 11</p> <p>TROUBLE DIAGNOSES 12</p> <p style="padding-left: 20px;">Schematic 12</p> <p style="padding-left: 20px;">Wiring Diagram 13</p> <p style="padding-left: 20px;">Control Unit Input/Output Signal Standard 16</p> <p style="padding-left: 20px;">ID Registration Procedure 16</p> <p style="padding-left: 40px;">ID REGISTRATION WITH TRANSMITTER ACTIVATION TOOL 16</p> <p style="padding-left: 40px;">ID REGISTRATION WITHOUT TRANSMITTER ACTIVATION TOOL 17</p> <p style="padding-left: 20px;">Transmitter Wake Up Operation 18</p> <p style="padding-left: 40px;">WITH TRANSMITTER ACTIVATION TOOL 18</p> <p style="padding-left: 20px;">Self-Diagnosis 19</p> <p style="padding-left: 20px;">DESCRIPTION 19</p>	<p style="padding-left: 20px;">FUNCTION 19</p> <p style="padding-left: 20px;">CONSULT-II 19</p> <p style="padding-left: 20px;">How to Perform Trouble Diagnosis for Quick and Accurate Repair 21</p> <p style="padding-left: 40px;">INTRODUCTION 21</p> <p style="padding-left: 40px;">WORK FLOW 21</p> <p style="padding-left: 20px;">Preliminary Check 22</p> <p style="padding-left: 20px;">Malfunction Code/Symptom Chart 23</p> <p>TROUBLE DIAGNOSIS FOR SELF-DIAGNOSTIC ITEMS 24</p> <p style="padding-left: 20px;">Inspection 1: Transmitter or Low Tire Pressure Warning Control Unit 24</p> <p style="padding-left: 40px;">MALFUNCTION CODE NO. 21, 22, 23 OR 24 ... 24</p> <p style="padding-left: 20px;">Inspection 2: Transmitter - 1 25</p> <p style="padding-left: 40px;">MALFUNCTION CODE NO. 31, 32, 33, 34, 41, 42, 43, 44, 45, 46, 47 OR 48 25</p> <p style="padding-left: 20px;">Inspection 3: Transmitter - 2 25</p> <p style="padding-left: 40px;">MALFUNCTION CODE NO. 35, 36, 37 OR 38 ... 25</p> <p style="padding-left: 20px;">Inspection 4: Vehicle Speed Signal 26</p> <p style="padding-left: 40px;">MALFUNCTION CODE NO. 52 26</p> <p>TROUBLE DIAGNOSIS FOR SYMPTOMS 27</p> <p style="padding-left: 20px;">Inspection 1: Warning Lamp Does Not Come On When Ignition Switch Is Turned On. 27</p> <p style="padding-left: 20px;">Inspection 2: Warning Lamp Stays On When Ignition Switch Is Turned On. 28</p> <p style="padding-left: 20px;">Inspection 3: Warning Lamp Blinks When Ignition Switch Is Turned On. 29</p> <p style="padding-left: 20px;">Inspection 4: Hazard Warning Lamp Blinks When Ignition Switch Is Turned On. 30</p> <p style="padding-left: 20px;">Inspection 5: "TIRE PRESSURE" Information In Triple Meter Does Not Exist. 30</p> <p style="padding-left: 20px;">Inspection 6: ID Registration Can Not Be Completed. 31</p> <p style="padding-left: 20px;">Inspection 7: CAN Communication Line 31</p> <p>REMOVAL AND INSTALLATION 32</p> <p style="padding-left: 20px;">Transmitter 32</p> <p style="padding-left: 40px;">REMOVAL 32</p> <p style="padding-left: 40px;">INSTALLATION 32</p> <p>SERVICE DATA 34</p> <p style="padding-left: 20px;">Road Wheel 34</p>
---	---

F
G
H
I
J
K
L
M

Tire	34
Tightening Torque	34

PRECAUTIONS

PRECAUTIONS

PPF:00001

Precautions for Battery Service

AES000DR

Before disconnecting the battery, lower both the driver and passenger windows. This will prevent any interference between the window edge and the vehicle when the door is opened/closed. During normal operation, the window slightly raises and lowers automatically to prevent any window to vehicle interference. The automatic window function will not work with the battery disconnected.

A

B

C

D

WT

F

G

H

I

J

K

L

M

PREPARATION


PREPARATION

PFP:00002

Special Service Tools


AES0004K

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

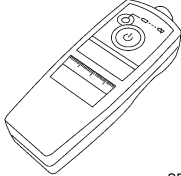Tool number (Kent-Moore No.) Tool name	Description
(J45295) Transmitter activation tool  SEIA0462E	ID registration

Commercial Service Tools

AES0004L

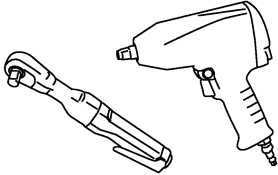Tool name	Description
Power tool  PBIC0190E	Removing wheel nuts

NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

PFP:00003

NVH Troubleshooting Chart

AES0004M

Use the chart below to help you find the cause of the symptom. If necessary, repair or replace these parts.

Reference page		FAX-4,FSU-5	WT-6	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—			
Possible cause and SUSPECTED PARTS		Improper installation, looseness	Out-of-round	Imbalance	Incorrect tire pressure	Uneven tire wear	Deformation or damage	Non-uniformity	Incorrect tire size	PROPELLER SHAFT	DIFFERENTIAL	FRONT AXLE AND FRONT SUSPENSION	REAR AXLE AND REAR SUSPENSION	TIRES	ROAD WHEEL	DRIVE SHAFT	BRAKE	STEERING	—	—	—		
Symptom	TIRES	Noise	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x		
		Shake	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	
		Vibration	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
		Shimmy	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
		Judder	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
		Poor quality ride or handling	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
	ROAD WHEEL	Noise	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
		Shake	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
		Shimmy, judder	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
		Poor quality ride or handling	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x

x: Applicable

A
B
C
D
E
F
G
H
I
J
K
L
M

WT

ROAD WHEEL

ROAD WHEEL

PFP:40300


Inspection ALUMINUM WHEEL

AES000DH

1. Check tires for wear and improper inflation.
2. Check wheels for deformation, cracks and other damage. If deformed, remove wheel and check wheel runout.
 - a. Remove tire from aluminum wheel and mount on a tire balance machine.
 - b. Set dial indicator as shown in the illustration.

Wheel runout (Dial indicator value):

Refer to [WT-34, "SERVICE DATA"](#)

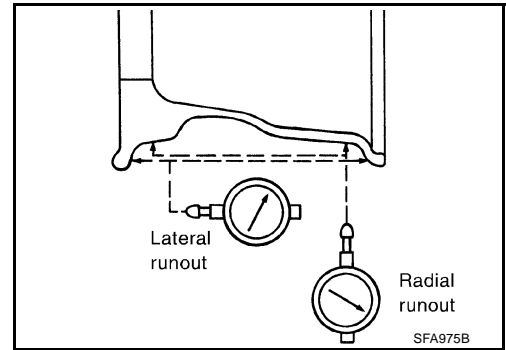

STEEL WHEEL


1. Check tires for wear and improper inflation.
2. Check wheels for deformation, cracks and other damage. If deformed, remove wheel and check wheel runout.
 - a. Remove tire from steel wheel and mount wheel on a tire balance machine.
 - b. Set two dial indicators as shown in the illustration.
 - c. Set each dial indicator to 0.
 - d. Rotate wheel and check dial indicators at several points around the circumference of the wheel.
 - e. Calculate runout at each point as shown below.

Radial runout = (A+B)/2

Lateral runout = (C+D)/2

- f. Select maximum positive runout value and the maximum negative value. Add the two values to determine total runout. In case a positive or negative value is not available, use the maximum value (negative or positive) for total runout. If the total runout value exceeds the limit, replace steel wheel.

Wheel runout : Refer to [WT-34, "SERVICE DATA"](#)

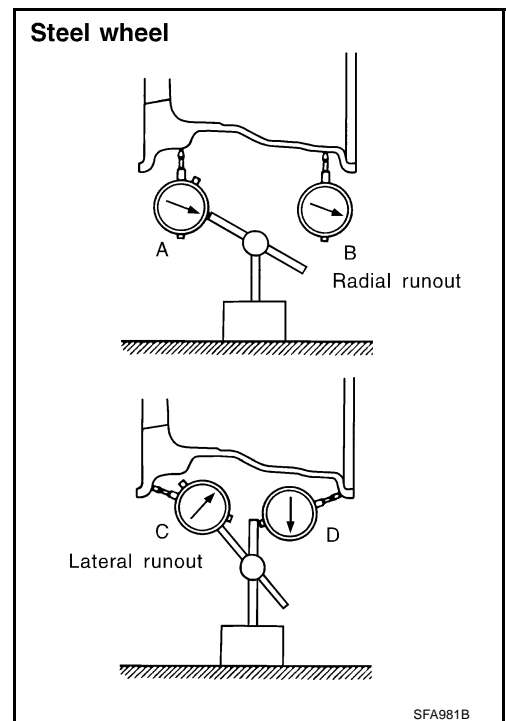

ROAD WHEEL TIRE ASSEMBLY

ROAD WHEEL TIRE ASSEMBLY

PPF:40300

Balancing Wheels (Bonding Weight Type) REMOVAL

AES000DL

1. Remove inner and outer balance weights from the road wheel.

CAUTION:

Be careful not to scratch the road wheel during removal.

2. Using releasing agent, remove double-faced adhesive tape from the road wheel.

CAUTION:

- **Be careful not to scratch the road wheel during removal.**
- **After removing double-faced adhesive tape, wipe clean traces of releasing agent from the road wheel.**

WHEEL BALANCE ADJUSTMENT

- If a tire balance machine has adhesion balance weight mode settings and drive-in weight mode setting, select and adjust a drive-in weight mode suitable for road wheels.

1. Set road wheel on wheel balancer using the center hole as a guide. Start the tire balance machine.
2. When inner and outer unbalance values are shown on the wheel balancer indicator, multiply outer unbalance value by $5/3$ to determine balance weight that should be used. Select the outer balance weight with a value closest to the calculated value above and install it to the designated outer position of, or at the designated angle in relation to the road wheel.

CAUTION:

- **Do not install the inner balance weight before installing the outer balance weight.**
- **Before installing the balance weight, be sure to clean the mating surface of the road wheel.**

Indicated unbalance value $\times 5/3$ = balance weight to be installed

Calculation example:


23 g (0.81 oz) $\times 5/3$ = 38.33 g (1.35 oz) = 40 g (1.41 oz) balance weight (closer to calculated balance weight value)

Note that balance weight value must be closer to the calculated balance weight value.

Example:

37.4 = 35 g (1.23 oz)


37.5 = 40 g (1.41 oz)

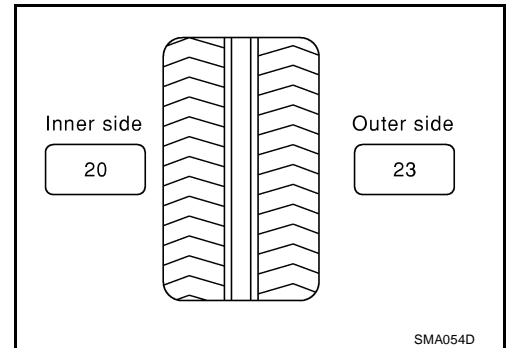

- a. Install balance weight in the position shown in the figure at left.
- b. When installing balance weight to road wheels, set it into the grooved area on the inner wall of the road wheel as shown in the figure so that the balance weight center is aligned with the wheel balancer indication position (angle).

CAUTION:

- **Always use genuine Nissan adhesion balance weights.**
- **Balance weights are un reusable; always replace with new ones.**
- **Do not install more than three sheets of balance weight.**

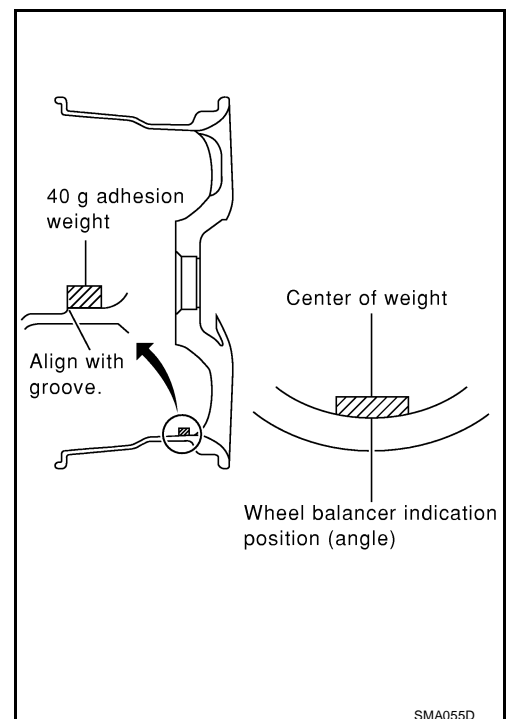

ROAD WHEEL TIRE ASSEMBLY

- c. If calculated balance weight value exceeds 50 g (1.76 oz), install two balance weight sheets in line with each other (as shown in the figure).

CAUTION:

Do not install one balance weight sheet on top of another.


3. Start wheel balancer again.
 4. Install drive-in balance weight on inner side of road wheel in the wheel balancer indication position (angle).

CAUTION:

Do not install more than two balance weights.

5. Start wheel balancer. Make sure that inner and outer residual unbalance values are 10 g (0.35 oz) each or below.
- If either residual unbalance value exceeds 10 g (0.35 oz), repeat installation procedures.

Wheel balance (Maximum allowable unbalance):

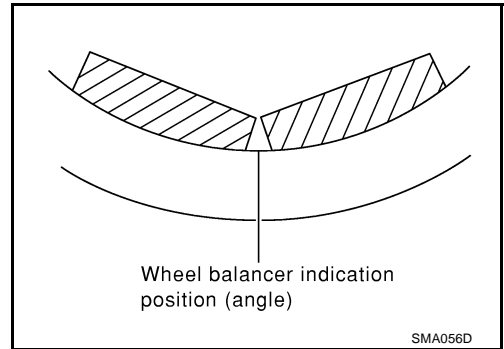

Maximum allowable unbalance	Dynamic (At rim flange)	10 g (0.35 oz) (one side)
	Static (At rim flange)	20 g (0.71 oz)

Tire Rotation

AES000DJ

CAUTION:

Do not include the T-type spare tire when rotating the tires

NOTE:

Tire cannot be rotated in vehicle, as front tire are different size from rear tire and the direction of wheel rotation is fixed in each tire.


LOW TIRE PRESSURE WARNING SYSTEM

LOW TIRE PRESSURE WARNING SYSTEM

PPF:40300

System Components

AES0004Q

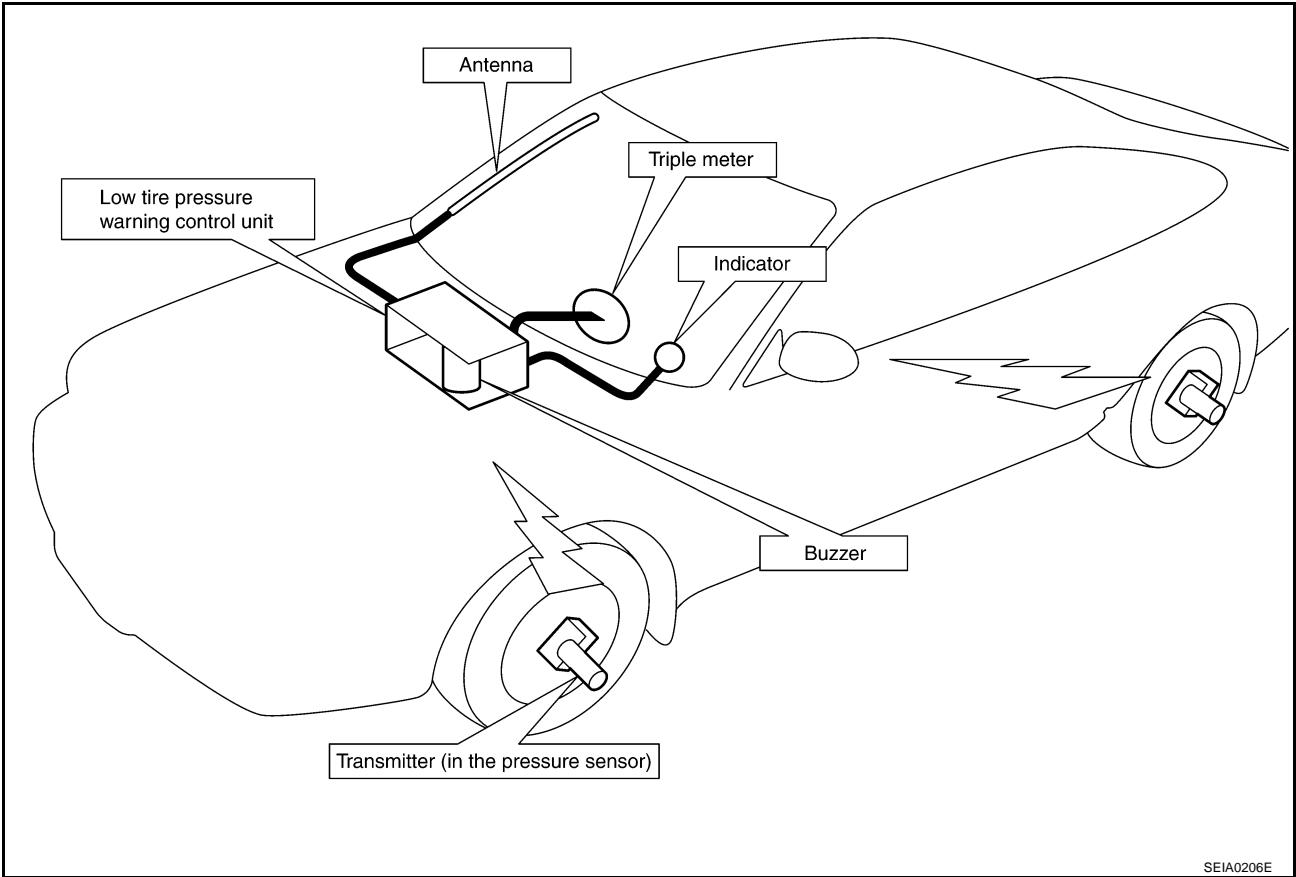


SEIA0206E

System Description TRANSMITTER


AES0004R

A sensor-transmitter integrated with a valve is installed on a wheel, and transmits a detected air pressure signal in the form of a radio wave.

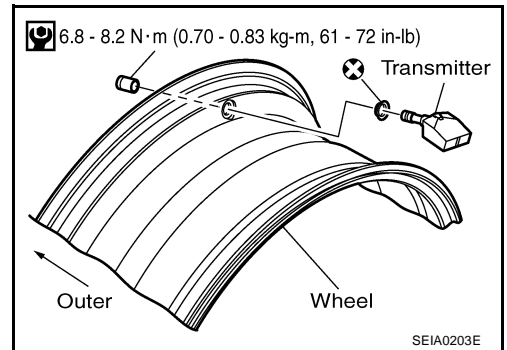

ANTENNA

Receives the radio wave signal transmitted by the transmitter.

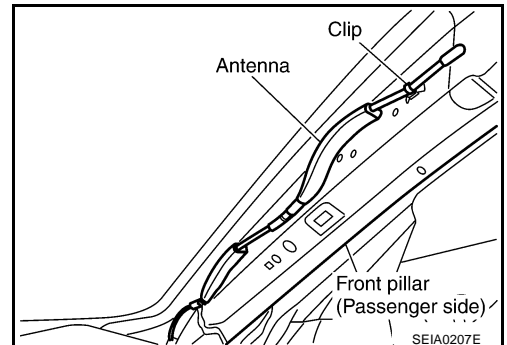


A
B
C
D
WT
F
G
H
I
J
K
L
M

LOW TIRE PRESSURE WARNING SYSTEM

LOW TIRE PRESSURE WARNING CONTROL UNIT

Reads the radio wave signal received by the antenna, and controls the warning lamp and the buzzer operations as shown below. It also has a judgement function to detect a system malfunction.

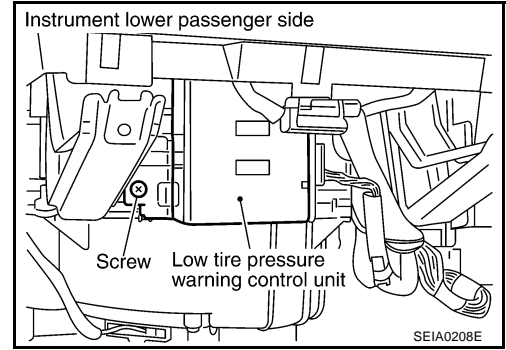


Condition	Warning lamp	Buzzer
Less than 200 kPa (2.0 kg/cm ² , 28 psi) [Flat tire]	ON	Sounds for 10 sec.
System malfunction	ON	OFF

DISPLAY (TRIPLE METER)

Displays the air pressure of each tire.

- After the ignition switch is turned ON, the pressure values are not be displayed until the data of all four wheels stabilizes.

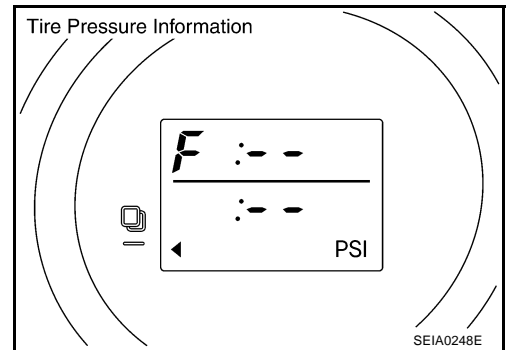

CAN COMMUNICATION

PFP:23710

System Description

AES000DF

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

Refer to [LAN-5, "CAN Communication Unit"](#) .

A
B
C
D

WT

F
G
H
I
J
K
L
M


TROUBLE DIAGNOSES

TROUBLE DIAGNOSES

PFP:00004

Schematic

AES000AW

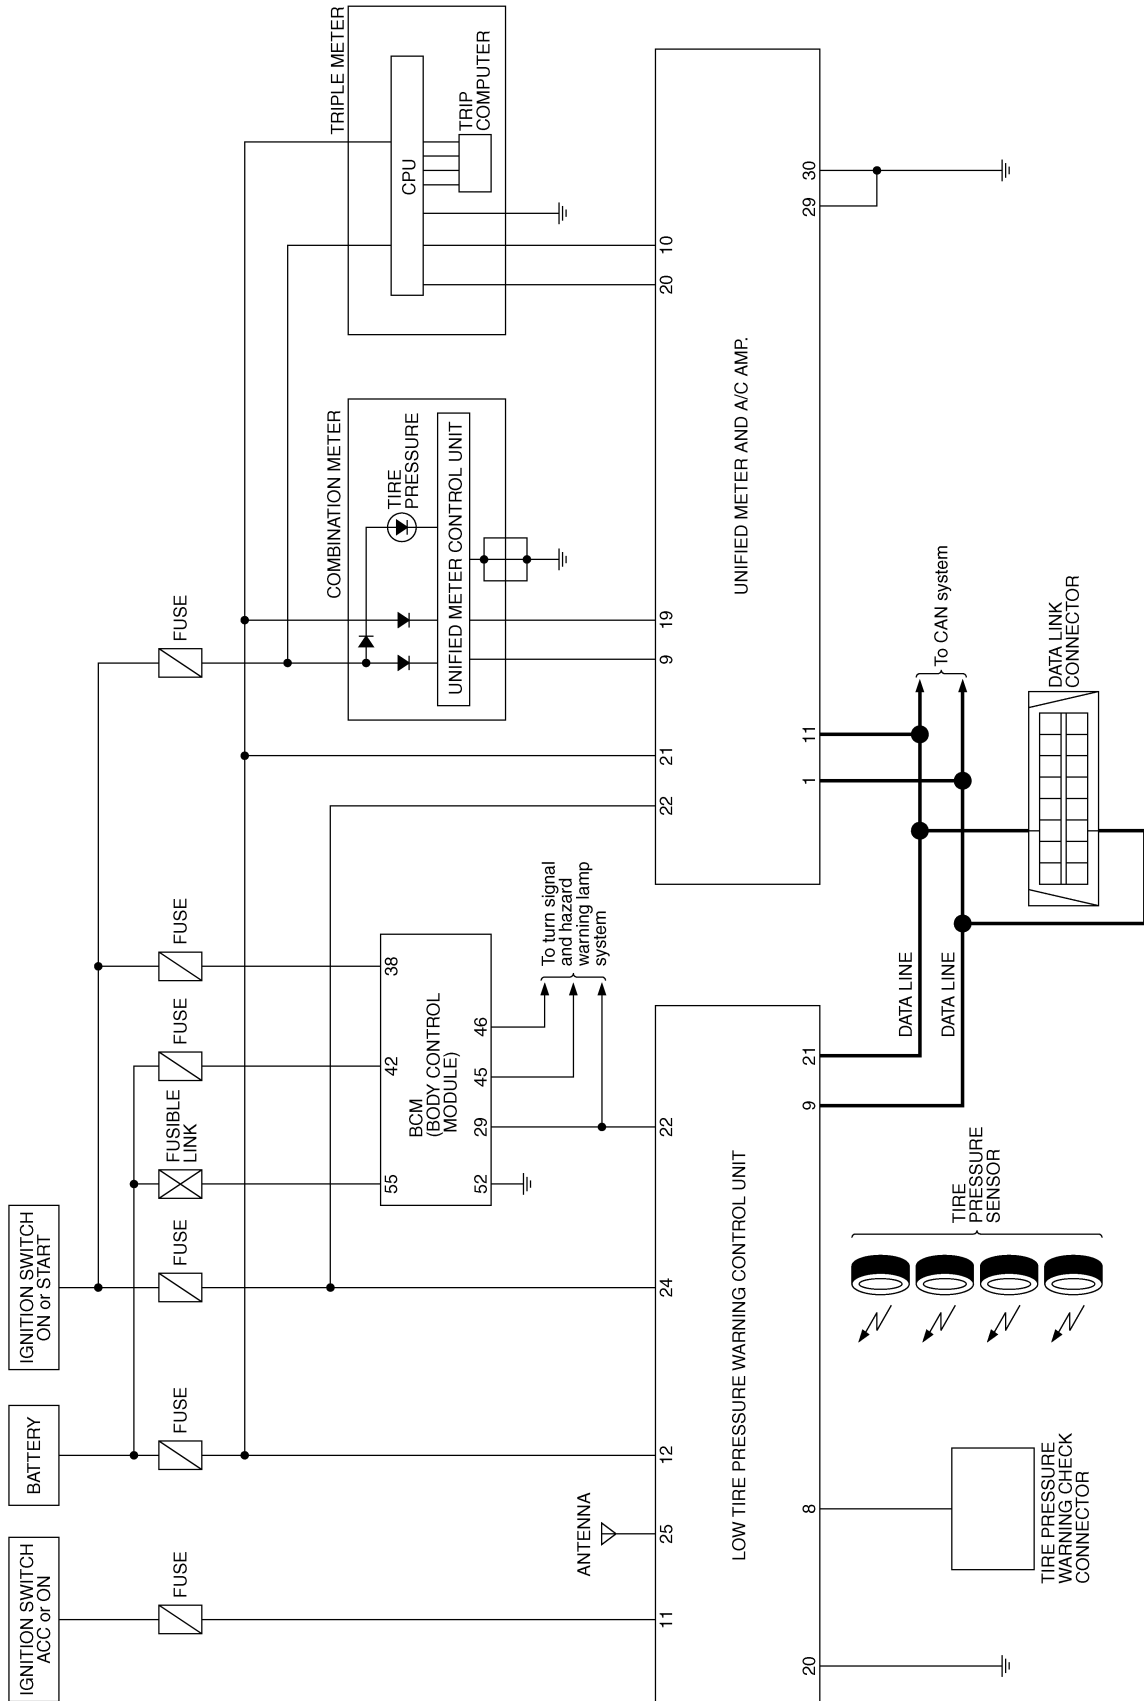





TEWT0014E

TROUBLE DIAGNOSES

Wiring Diagram

AES000AH

WT-T/WARN-01

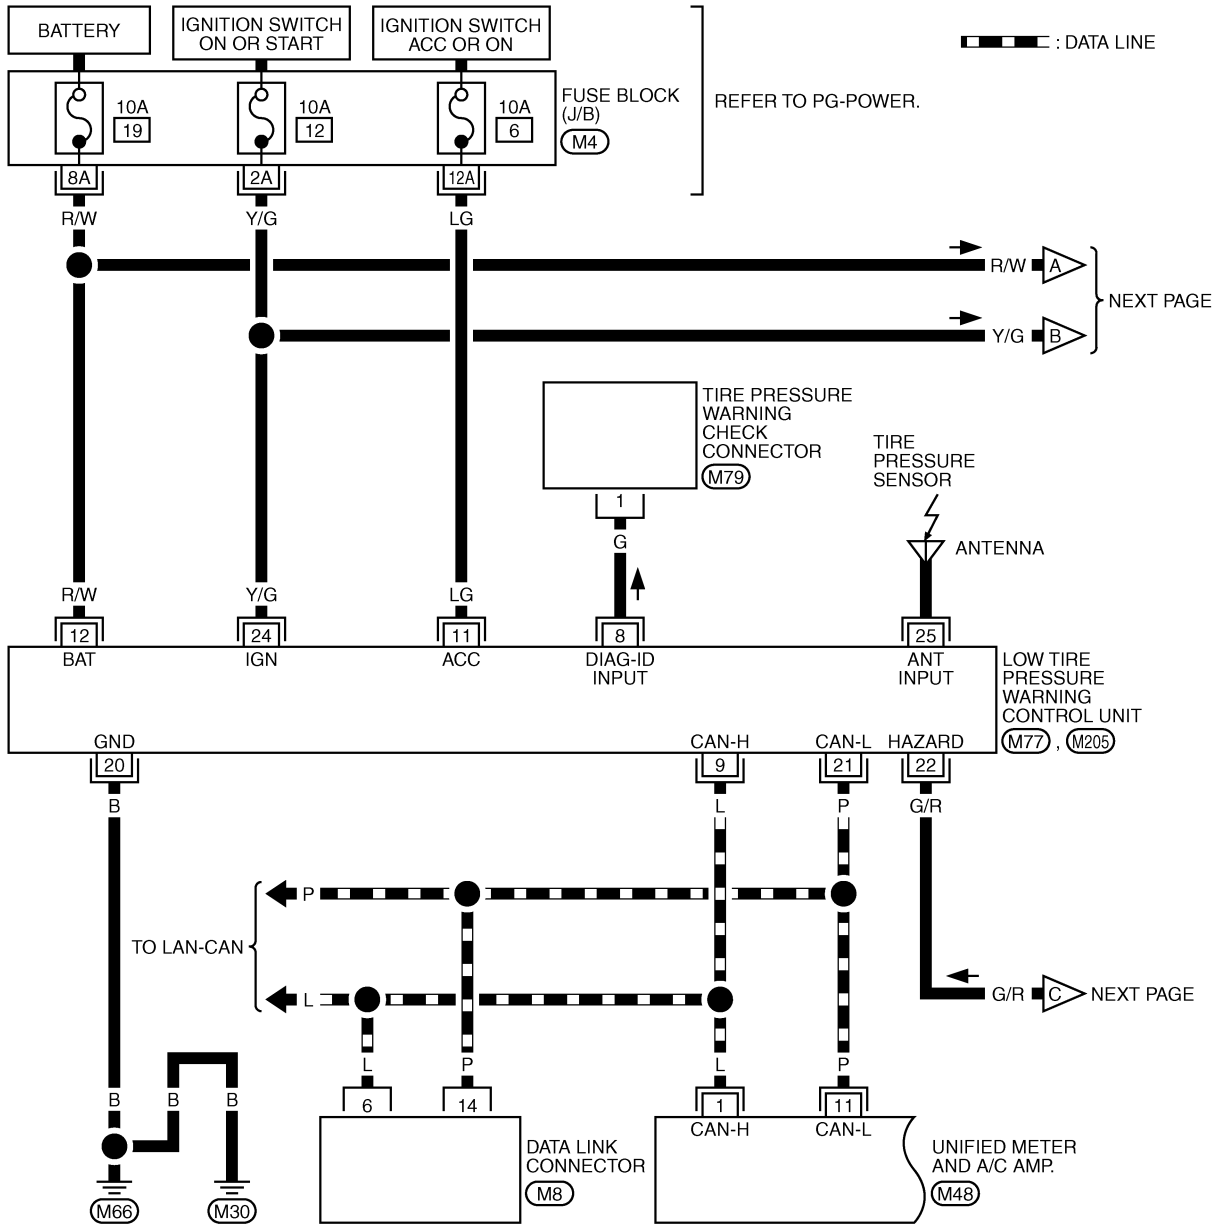

*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT", PG SECTION.





REFER TO THE FOLLOWING.

(M4) - FUSE BLOCK-JUNCTION BOX (J/B)

TEWT0008E

TROUBLE DIAGNOSES

WT-T/WARN-03

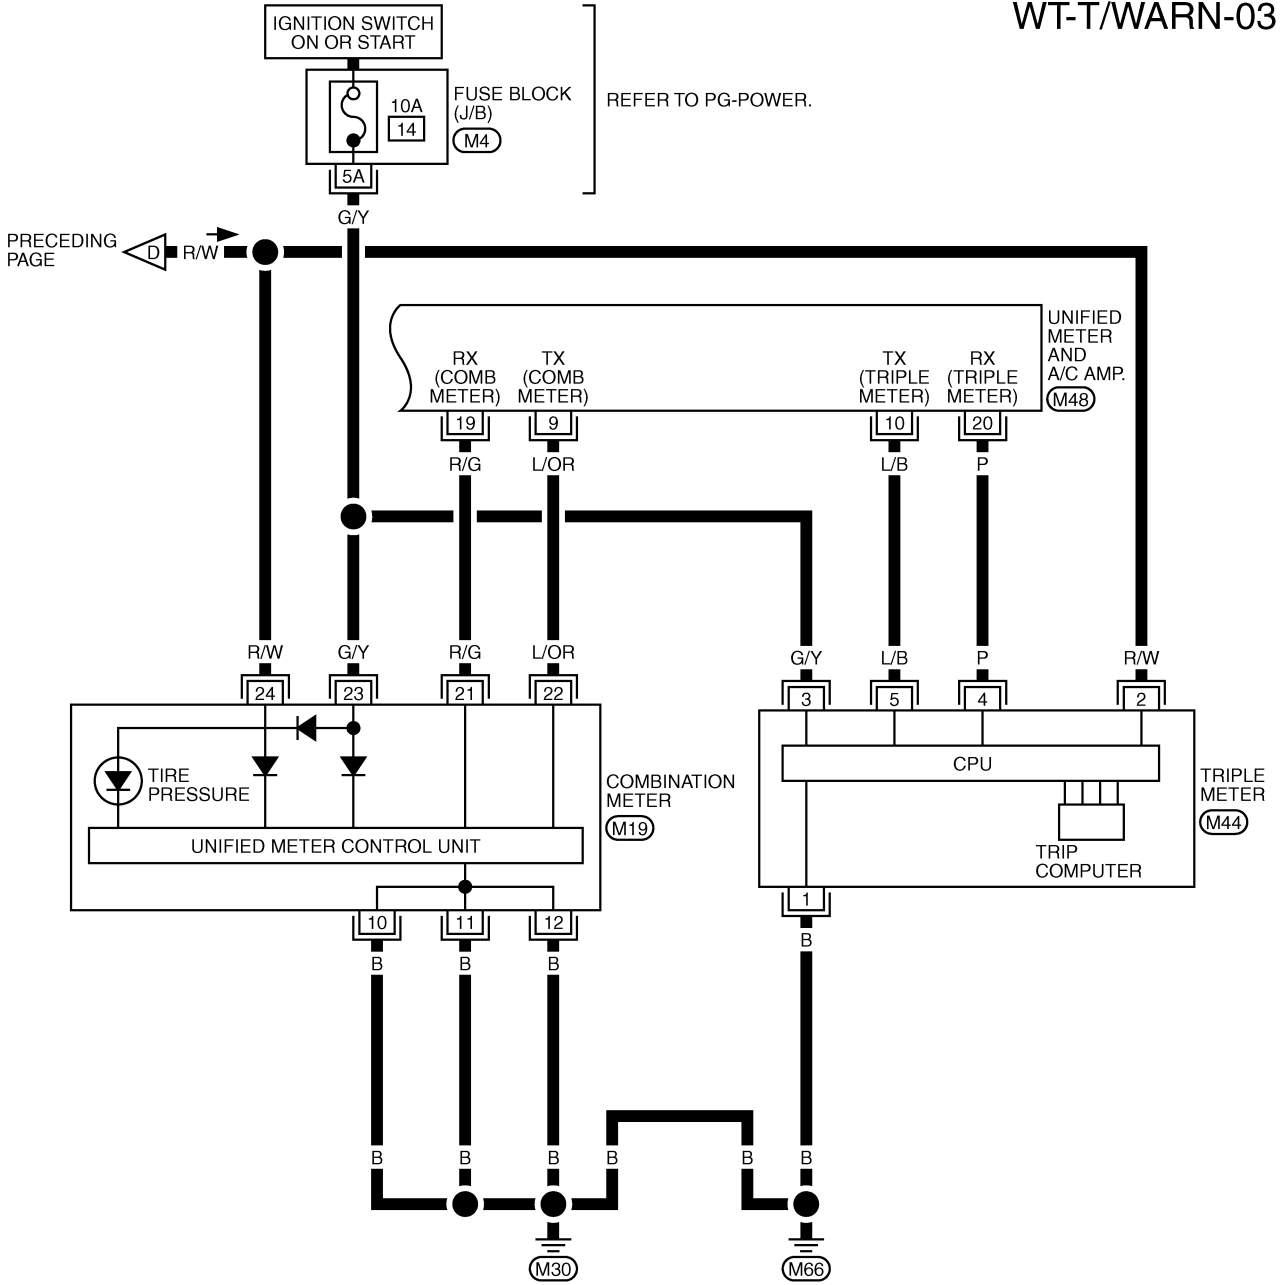

REFER TO THE FOLLOWING.

(M4) - FUSE BLOCK-JUNCTION BOX (J/B)

TEWT0004E

TROUBLE DIAGNOSES

Control Unit Input/Output Signal Standard

AES000AV

Standards using a circuit tester and oscilloscope.

Measurement terminal		Measuring point	Standard value	
+	-			
8 (G)	Body ground	Tire pressure warning check switch	Always	Approx. 5V
9 (L)		Data line (CAN H)	—	—
11 (LG)		Ignition switch ON or ACC	Ignition switch ON	Battery voltage (Approx. 12V)
12 (R/W)		Battery power supply	Always	Battery voltage (Approx. 12V)
20 (B)		GND	—	Approx. 0V
21 (R)		Data line (CAN L)	—	—
22 (G/R)		Hazard	Hazard lamp switch OFF	Battery voltage (Approx. 12V)
			Hazard lamp switch ON	Approx. 0V
24 (Y/G)		Ignition switch ON or IGN		Battery voltage (Approx. 12V)
25		Antenna	—	—

() : Wire color

ID Registration Procedure

AES000AI


ID REGISTRATION WITH TRANSMITTER ACTIVATION TOOL

1. Turn ignition switch "OFF".
2. Connect CONSULT-II and CONSULT-II CONVERTER to data link connector.

NOTE:

If "AIR PRESSURE MONITOR" is not indicated, go to [GI-39, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

3. Touch "AIR PRESSURE MONITOR", "WORK SUPPORT" and "ID REGIST".
4. With the transmitter activation tool (J-45295) pushed against the front-left transmitter, press the button then keep 5 seconds.

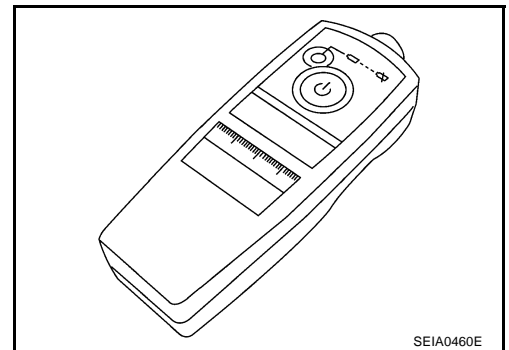

5. Register the IDs in order from FR LH, FR RH, RR RH or RR LH. When ID registration of each wheel has been completed, a buzzer sounds and hazard warning lamp blinks.

Activation tire position	Buzzer	Hazard warning lamp	CONSULT-II
1 Front LH	Once	2 times flashing	"YET" ↓ "DONE"
2 Front RH	2 times		
3 Rear RH	3 times		
4 Rear LH	4 times		

6. After completing all ID registrations, press "END" to complete the procedure.

NOTE:

Be sure to register the IDs in order from FR LH, FR RH, RR RH, to RR LH, or the self-diagnostic results display will not function properly.

TROUBLE DIAGNOSES

ID REGISTRATION WITHOUT TRANSMITTER ACTIVATION TOOL

1. Turn ignition switch "OFF".
2. Connect CONSULT-II and CONSULT-II CONVERTER to data link connector.

NOTE:

If "AIR PRESSURE MONITOR" is not indicated, go to [GI-39, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

3. Touch "AIR PRESSURE MONITOR", "WORK SUPPORT" and "ID REGIST".
4. Adjust the tire pressure to the values shown in the table below for ID registration, and drive the vehicle at 15 km/h (9.4 MPH) or more for a few minutes.

Tire position	Tire pressure kPa (kg/cm ² , psi)
Front – Left	260 (2.6, 37)
Front – Right	240 (2.4, 34)
Rear – Right	220 (2.2, 31)
Rear – Left	200 (2.0, 28)

5. After completing all ID registrations, press "END" to complete the procedure.

Activation tire position	CONSULT-II
Front LH	"YET" ↓ "DONE"
Front RH	
Rear RH	
Rear LH	


A
B
C
D
WT
F
G
H
I
J
K
L
M

TROUBLE DIAGNOSES

Transmitter Wake Up Operation WITH TRANSMITTER ACTIVATION TOOL

AES000DP

1. With the transmitter activation tool (J-45295) pushed against the front-left transmitter, press the button then keep 5 seconds.
 - When ignition switch ON, then warning lamp is blinks as follow diagram transmitter must be waken up.

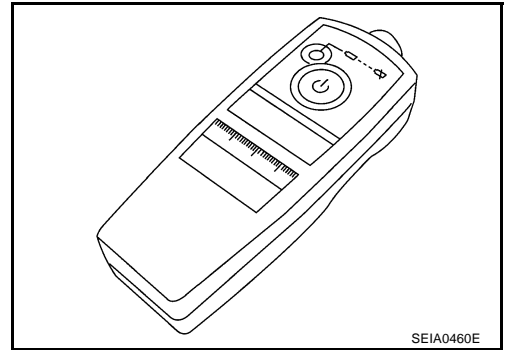

2. Register the IDs in order from FR LH, FR RH, RR RH or RR LH. When ID registration of each wheel has been completed, a hazard warning lamp blinks.

	Warning lamp blinking timing	Need to activation tire position	Hazard warning lamp
1	<p style="font-size: x-small; margin-top: 5px;">a : 0.3sec b : 1.3sec</p>	Front LH	2 time flashing
2	<p style="font-size: x-small; margin-top: 5px;">a : 0.3sec b : 1.3sec</p>	Front RH	
3	<p style="font-size: x-small; margin-top: 5px;">a : 0.3sec b : 1.3sec</p>	Rear RH	
4	<p style="font-size: x-small; margin-top: 5px;">a : 0.3sec b : 1.3sec</p>	Rear LH	
5	<p style="font-size: x-small; margin-top: 5px;">a : 2sec b : 0.2sec</p>	All tire	

SEIA0351E

3. After completing wake up all transmitters, make sure tire pressure warning lamp go out.

TROUBLE DIAGNOSES

AES000AX

Self-Diagnosis DESCRIPTION

During driving, the low tire pressure warning system receives the signal transmitted from the transmitter installed in each wheel, and gives alarms when the tire pressure becomes low. The control unit of this system has pressure judgement and trouble diagnosis functions.

FUNCTION

When the low tire pressure warning system detects low inflation pressure or another unusual symptom, the warning lamps in the combination meter comes on. To start the self-diagnostic results mode, ground the self-diagnostic (check) terminal. The malfunction location is indicated by the warning lamp flashing and the buzzer sounds.

CONSULT-II

CONSULT-II Main Function

In a diagnosis function (main function), there are "WORK SUPPORT", "SELF-DIAGNOSTIC RESULTS", "DATA MONITOR", "CAN DIAG SUPPORT MNTR".

Diagnostic test mode	Function
WORK SUPPORT	This mode enables a technician to adjust some devices faster and more accurately by following the indications on CONSULT-II.
SELF-DIAGNOSTIC RESULTS	Self-diagnostic results can be read and erased quickly.
DATA MONITOR	Input/Output data in the control unit can be read.
CAN DIAG SUPPORT MNTR	The results of transmit/receive diagnosis of communication can be read.

CONSULT-II Application to Low Tire Pressure Warning System

ITEM	SELF-DIAGNOSTIC RESULTS	DATA MONITOR
Front - Left transmitter	×	×
Front - Right transmitter	×	×
Rear - Left transmitter	×	×
Rear - Right transmitter	×	×
Warning lamp	—	×
Vehicle speed	×	×
Buzzer (in control unit)	—	×

× : Applicable

— : Not applicable

TROUBLE DIAGNOSES

Self-Diagnostic Results Mode

Diagnostic item	Diagnostic item is detected when ...
FLAT - TIRE - FL FLAT - TIRE - FR FLAT - TIRE - RR FLAT - TIRE - RL	Front-left tire pressure drops to 200 kPa(2.0 kg/cm ² , 28 psi) or less Front-right tire pressure drops to 200 kPa(2.0 kg/cm ² , 28 psi) or less Rear-right tire pressure drops to 200 kPa(2.0 kg/cm ² , 28 psi) or less Rear-left tire pressure drops to 200 kPa(2.0 kg/cm ² , 28 psi) or less
[NO-DATA] - FL [NO-DATA] - FR [NO-DATA] - RR [NO-DATA] - RL	Data from front-left transmitter cannot be received. Data from front-right transmitter cannot be received. Data from rear-right transmitter cannot be received. Data from rear-left transmitter cannot be received.
[CHECKSUM- ERR] - FL [CHECKSUM- ERR] - FR [CHECKSUM- ERR] - RR [CHECKSUM- ERR] - RL	Checksum data from front-left transmitter is malfunctioning. Checksum data from front-right transmitter is malfunctioning. Checksum data from rear-right transmitter is malfunctioning. Checksum data from rear-left transmitter is malfunctioning.
[PRESSDATA- ERR] - FL [PRESSDATA- ERR] - FR [PRESSDATA- ERR] - RR [PRESSDATA- ERR] - RL	Air pressure data from front-left transmitter is malfunctioning. Air pressure data from front-right transmitter is malfunctioning. Air pressure data from rear-right transmitter is malfunctioning. Air pressure data from rear-left transmitter is malfunctioning.
[CODE- ERR] - FL [CODE- ERR] - FR [CODE- ERR] - RR [CODE- ERR] - RL	Function code data from front-left transmitter is malfunctioning. Function code data from front-right transmitter is malfunctioning. Function code data from rear-right transmitter is malfunctioning. Function code data from rear-left transmitter is malfunctioning.
[BATT - VOLT - LOW] - FL [BATT - VOLT - LOW] - FR [BATT - VOLT - LOW] - RR [BATT - VOLT - LOW] - RL	Battery voltage of front-left transmitter drops. Battery voltage of front-right transmitter drops. Battery voltage of rear-right transmitter drops. Battery voltage of rear-left transmitter drops.
VHCL_SPEED_SIG_ERR	Vehicle speed signal is error.

NOTE:

Before performing the self-diagnosis, be sure to register the ID. Or, the actual malfunction location may be different from that displayed on CONSULT-II.

Data Monitor Mode

MONITOR	CONDITION	SPECIFICATION
VHCL SPEED SE	Drive vehicle.	Vehicle speed (km/h or MPH)
AIR PRESS FL AIR PRESS FR AIR PRESS RR AIR PRESS RL	<ul style="list-style-type: none"> ● Drive vehicle for a few minutes. <li style="text-align: center;">or ● Ignition switch ON and activation tool is transmitting activate signals. 	Tire pressure (kPa or Psi)
ID REGST FL ID REGST FR ID REGST RR ID REGST RL	Ignition switch ON	Registration ID: DONE No registration ID: YET
WARNING LAMP		Warning lamp on: ON Warning lamp off: OFF
BUZZER		Buzzer in Low tire pressure warning control unit on: ON Buzzer in Low tire pressure warning control unit off: OFF

NOTE:

Before performing the self-diagnosis, be sure to register the ID. Or, the actual malfunction location may be different from that displayed on CONSULT-II.

TROUBLE DIAGNOSES


How to Perform Trouble Diagnosis for Quick and Accurate Repair

AES000AY

INTRODUCTION

- Before troubleshooting, verify customer complaints.
- If a vehicle problem is hard to reproduce, harnesses, harness connectors or terminals may often be malfunctioning. Hold and shake these parts by hand to make sure they are securely connected.
- When using a circuit tester to measure voltage or resistance of each circuit, be careful not to expand connector terminals.

WORK FLOW

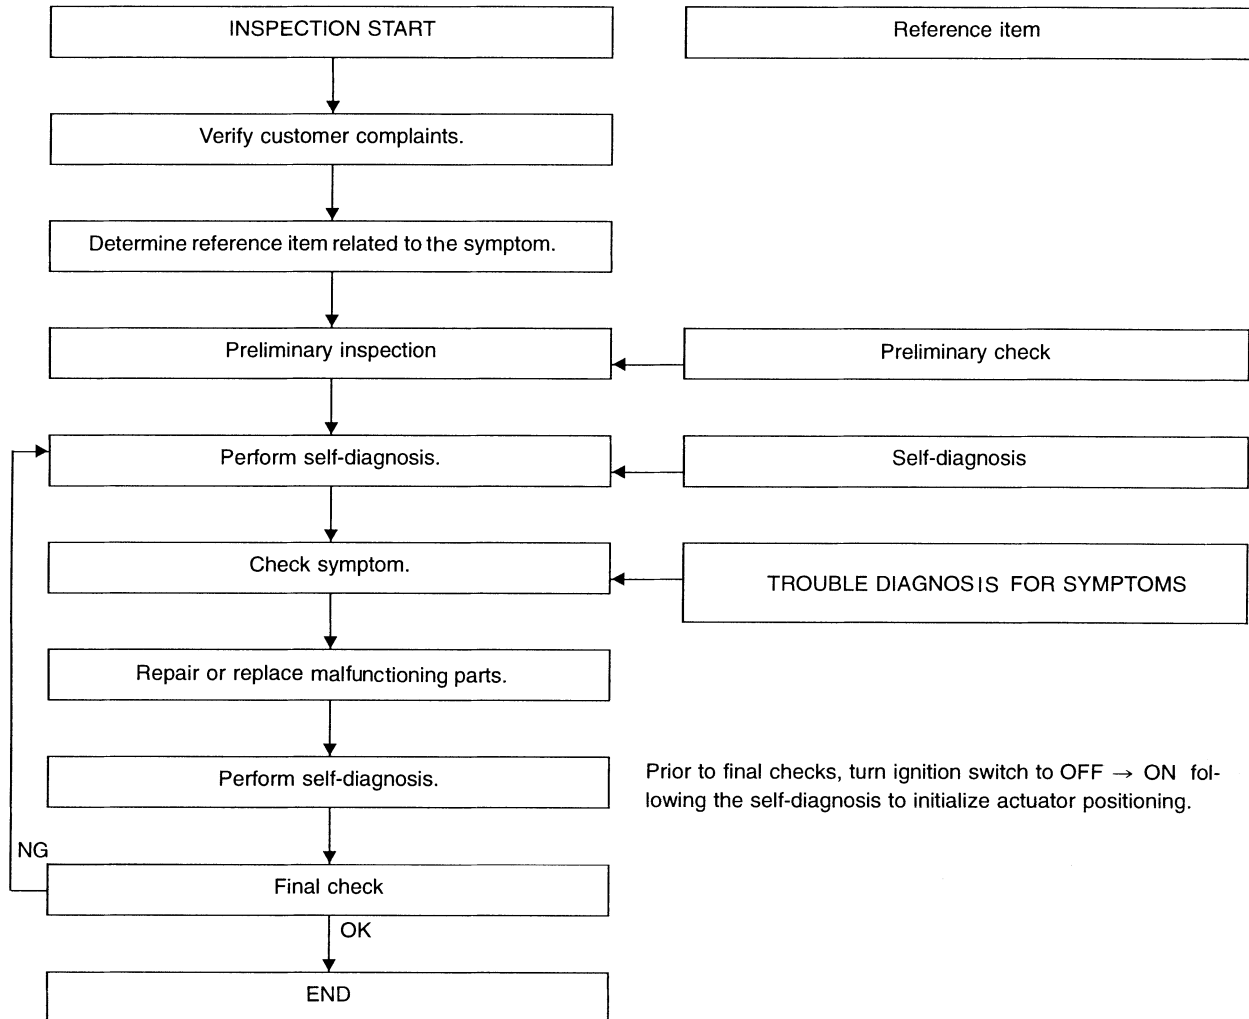

Preliminary check : [WT-22](#)

Self-diagnosis : [WT-19](#)

Trouble diagnosis for symptoms : [WT-27](#)

SEIA0100E

TROUBLE DIAGNOSES

Preliminary Check

AES000AZ

BASIC INSPECTION

1. CHECK ALL TIRES PRESSURES

- Check all tires pressures.

Tire pressure : 240 kPa (2.4 kg/cm² , 34 psi)

OK or NG?

OK >> GO TO 2.

NG >> Adjust tire pressure to specified value.

2. CHECK CONNECTOR

1. Disconnect low tire pressure warning control unit connector M77.
2. Check terminals for damage or loose connection.

Inspection results OK?

OK >> GO TO 3.

NG >> Repair or replace damaged parts.

3. CHECK TRANSMITTER ACTIVATION TOOL

- Check transmitter tool battery.

OK or NG?

OK >> Carry out self-diagnosis.

NG >> Replace transmitter activation tool battery.

TROUBLE DIAGNOSES

Malfunction Code/Symptom Chart

AES000B0

Code/Symptom	Malfunction part	Reference page
15 16 17 18	Front-left tire pressure drops to 200 kPa (2.0 kg/cm ² , 28 psi) or less Front-right tire pressure drops to 200 kPa (2.0 kg/cm ² , 28 psi) or less Rear-right tire pressure drops to 200 kPa (2.0 kg/cm ² , 28 psi) or less Rear-left tire pressure drops to 200 kPa (2.0 kg/cm ² , 28 psi) or less	—
21 22 23 24	Transmitter no data (front - left) Transmitter no data (front - right) Transmitter no data (rear - right) Transmitter no data (rear - left)	WT-24
31 32 33 34	Transmitter checksum error (front - left) Transmitter checksum error (front - right) Transmitter checksum error (rear - right) Transmitter checksum error (rear - left)	WT-25
35 36 37 38	Transmitter pressure data error (front - left) Transmitter pressure data error (front - right) Transmitter pressure data error (rear - right) Transmitter pressure data error (rear - left)	WT-25
41 42 43 44	Transmitter function code error (front - left) Transmitter function code error (front - right) Transmitter function code error (rear - right) Transmitter function code error (rear - left)	WT-25
45 46 47 48	Transmitter battery voltage low (front - left) Transmitter battery voltage low (front - right) Transmitter battery voltage low (rear - right) Transmitter battery voltage low (rear - left)	WT-25
52	Vehicle speed signal	WT-26
Warning lamp does not come on when ignition switch is turned on.	Fuse or unified meter and A/C amp. Low tire pressure warning control unit connector or circuit Low tire pressure warning control unit	WT-27
Warning lamp stays on when ignition switch is turned on.	Fuse or unified meter and A/C amp. Low tire pressure warning control unit connector or circuit Low tire pressure warning control unit	WT-28
Warning lamp blinks when ignition switch is turned on.	Low tire pressure warning control unit harness connector or circuit Low tire pressure warning control unit Transmitter's mode off ID registration not yet	WT-29
Hazard warning lamp blinks when ignition switch is turned on.	Low tire pressure warning control unit harness connector or circuit Low tire pressure warning control unit	WT-30
"TIRE PRESSURE" information in triple meter does not exist.	Fuse Triple meter Low tire pressure warning control unit	WT-30
ID registration can not be operated.	Transmitter Antenna harness connector or circuit Antenna	WT-31

A
B
C
D
WT
F
G
H
I
J
K
L
M

TROUBLE DIAGNOSIS FOR SELF-DIAGNOSTIC ITEMS

TROUBLE DIAGNOSIS FOR SELF-DIAGNOSTIC ITEMS

PFP:00000

Inspection 1: Transmitter or Low Tire Pressure Warning Control Unit MALFUNCTION CODE NO. 21, 22, 23 OR 24

AES0000F

1. CHECK CONTROL UNIT

- Drive for several minutes. Check all tires' pressure with CONSULT-II "DATA MONITOR ITEM".

Are all tires' pressure displayed 0 kPa?

- YES >> GO TO 2.
NO >> GO TO 3.

2. CHECK ANTENNA CONNECTOR

- Check antenna and feeder connector M205 for damage or loose connections.

OK or NG

- OK >> Replace control unit, then GO TO 3.
NG >> Repair or replace antenna or feeder connector.

3. ID REGISTRATION

- Carry out ID registration of all transmitters.

Is there a tire that cannot register ID?

- YES >> Replace transmitter of the tire, then GO TO 5.
NO >> GO TO 4.

4. VEHICLE DRIVING

- Drive at a speed of 40 km/h (25 MPH) or more for several minutes without stopping.
Check all tires' pressure with CONSULT-II "DATA MONITOR ITEM" within 15 minutes after vehicle speed becomes 17 km/h (11 MPH).

Does "DATA MONITOR ITEM" displayed tire pressure as normal without any warning lamp?

- YES >> INSPECTION END.
NO >> GO TO 5.

5. ID REGISTRATION AND VEHICLE DRIVING

1. Carry out ID registration of all transmitters.
2. Drive at a speed of 40 km/h (25 MPH) or more for 3 minutes, and then drive the vehicle at any speed for 10 minutes. Then check all tires' pressure with CONSULT-II "DATA MONITOR ITEM" within 5 minutes.

Does "DATA MONITOR ITEM" displayed tire pressure as normal without any warning lamp?

- YES >> INSPECTION END.
NO >> GO TO the inspection applicable to DTC.

TROUBLE DIAGNOSIS FOR SELF-DIAGNOSTIC ITEMS

Inspection 2: Transmitter - 1

AES0000G

MALFUNCTION CODE NO. 31, 32, 33, 34, 41, 42, 43, 44, 45, 46, 47 OR 48

1. ID REGISTRATION (CORRECTION OF TRANSMITTER LOCATION)

1. Carry out ID registration of all transmitters.
2. Drive at a speed of 40 km/h (25 MPH) or more for 3 minutes, and then drive the vehicle at any speed for 10 minutes. Then check all tires' pressure with CONSULT-II "DATA MONITOR ITEM" within 5 minutes.

>> GO TO 2.

2. REPLACE TRANSMITTER

1. Check warning lamp for blink again, replace malfunctioning transmitter.
2. Carry out ID registration of all transmitter.

Can ID registration of all transmitters be completed?

YES >> GO TO 3.

NO >> GO TO the inspection 1.

3. VEHICLE DRIVING

- Drive at a speed of 40 km/h (25 MPH) or more for 3 minutes, and then drive the vehicle at any speed for 10 minutes. Then check all tires' pressure with CONSULT-II "DATA MONITOR ITEM" within 5 minutes.

Does "DATA MONITOR ITEM" displayed tire pressure as normal without any warning lamp?

YES >> INSPECTION END.

NO >> Replace malfunctioning transmitter, and perform "Step 3" again.

Inspection 3: Transmitter - 2

AES0000H

MALFUNCTION CODE NO. 35, 36, 37 OR 38

1. CHECK ALL TIRE PRESSURE

- Check all tire pressures.

Tire pressure : 240 kPa (2.4 kg/m² , 34 psi)

Are there any tires' which pressure is "64 psi" or more?

YES >> GO TO 2.

NO >> Adjust tire pressure to specified value.

2. VEHICLE DRIVING

1. Carry out ID registration of all transmitters.
2. Drive at a speed of 40 km/h (25 MPH) or more for several minutes without stopping. Check all tires' pressure with CONSULT-II "DATA MONITOR ITEM" within 15 minutes after vehicle speed become 17 km/h (11 MPH).

>> Replace transmitter with new one if "DATA MONITOR ITEM" displayed 64 psi or more. Then GO TO 3.

3. ID REGISTRATION AND VEHICLE DRIVING

1. Carry out ID registration of all transmitters.
2. Drive at a speed of 40 km/h (25 MPH) or more for 3 minutes, and then drive the vehicle at any speed for 10 minutes. Then check all tires' pressure with CONSULT-II "DATA MONITOR ITEM" within 5 minutes.

Does "DATA MONITOR ITEM" displayed tire pressure as normal without any warning lamp?

YES >> INSPECTION END.

NO >> GO TO the inspection applicable to DTC.

TROUBLE DIAGNOSIS FOR SELF-DIAGNOSTIC ITEMS

Inspection 4: Vehicle Speed Signal MALFUNCTION CODE NO. 52

AES00001

1. SELF-DIAGNOSIS RESULT CHECK

1. Connect CONSULT-II and CONSULT-II CONVERTER to data link connector.

NOTE:

If "AIR PRESSURE MONITOR" is not indicated, go to [GI-39, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

2. Select "AIR PRESSURE MONITOR" on "SELECT SYSTEM" screen.
3. Select "SELF-DIAG RESULTS" on "SELECT DIAG MODE" screen.
4. Check display contents in self-diagnostic results.

Is "CAN COMM CIRCUIT" displayed in the self-diagnosis display items?

YES >> Malfunction in CAN communication system. GO TO [LAN-3, "Precautions When Using CONSULT-II"](#).

NO >> Check unified meter and A/C amp. self-diagnostic. Refer to [DI-59, "SELF-DIAGNOSIS RESULTS"](#).

TROUBLE DIAGNOSIS FOR SYMPTOMS

TROUBLE DIAGNOSIS FOR SYMPTOMS

PPF:00007

Inspection 1: Warning Lamp Does Not Come On When Ignition Switch Is Turned On.

AES000AR

Before carrying out the inspection on the following diagnostic procedure, perform the CAN communication line check. Refer to [WT-31, "Inspection 7: CAN Communication Line"](#).

DIAGNOSTIC PROCEDURE

1. CHECK COMBINATION METER

- Check combination meter operation.

Inspection results OK?

OK >> GO TO 2.

NG >> Check combination meter. Refer to [DI-4, "System Description"](#).

2. CHECK WARNING LAMP

- Disconnect low tire pressure warning control unit connector.

Does the warning lamp activate?

YES >> Replace low tire pressure warning control unit.

NO >> GO TO 3.

3. CHECK UNIFIED METER AND A/C AMP. POWER SUPPLY CIRCUIT


- Check voltage between unified meter and A/C amp. harness connector M49 terminal 21 (R/W), 22 (Y/G) and ground.

: Battery voltage should exist. (Approx. 12V)

OK or NG?

OK >> GO TO 4.

NG >> Check unified meter and A/C amp. power supply circuit for open or short.

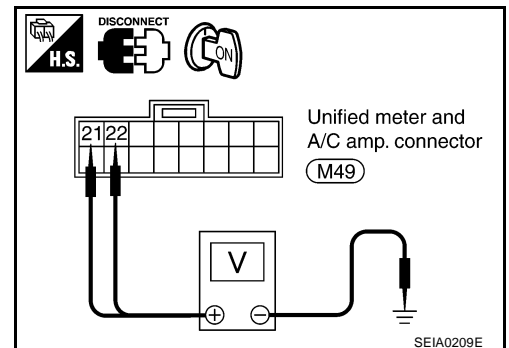

4. CHECK UNIFIED METER AND A/C AMP. GROUND CIRCUIT


- Check continuity between unified meter and A/C amp. connector M49 terminal 29 (B), 30 (B) and ground.

: Continuity should exist.

OK or NG?

OK >> Check unified meter and A/C amp. Refer to [DI-59, "SELF-DIAGNOSIS RESULTS"](#).

NG >> Repair or replace unified meter and A/C amp. ground circuit.

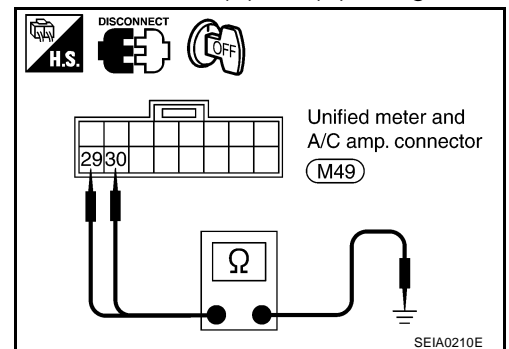

TROUBLE DIAGNOSIS FOR SYMPTOMS

Inspection 2: Warning Lamp Stays On When Ignition Switch Is Turned On.

AES000AS

DIAGNOSTIC PROCEDURE

1. CHECK CONNECTOR

1. Disconnect low tire pressure warning control unit connector.
2. Check terminals for damage or loose connections.

Inspection results OK?

- OK >> GO TO 2.
NG >> Repair or replace damaged parts.


2. CHECK POWER SUPPLY CIRCUIT 1

Check voltage between low tire pressure warning control unit connector M77 terminal 12 (R/W) and ground.

: Battery voltage should exist. (Approx. 12V)

OK or NG?

- OK >> GO TO 3.
NG >> Check low tire pressure warning control unit power supply circuit for open or short.

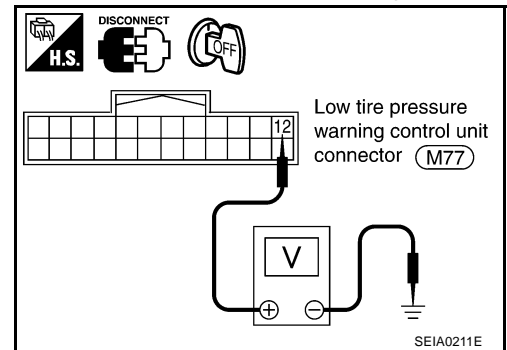


3. CHECK POWER SUPPLY CIRCUIT 2

1. Turn ignition switch ON.
2. Check voltage between low tire pressure warning control unit connector M77 terminals 11 (LG), 24 (Y/G) and ground.

: Battery voltage should exist. (Approx. 12V)

OK or NG?

- OK >> GO TO 4.
NG >> Check low tire pressure warning control unit power supply circuit for open or short.

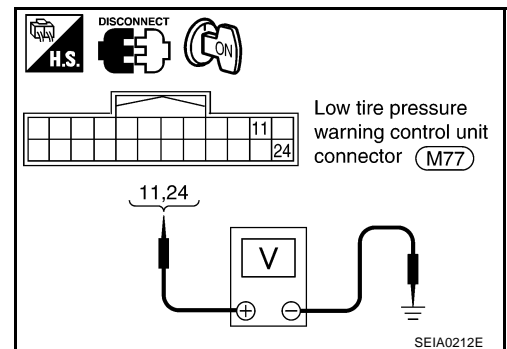


4. CHECK GROUND CIRCUIT

- Check continuity between low tire pressure warning control unit connector M77 terminal 20 (B) and ground.

: Continuity should exist.

OK or NG?

- OK >> Replace low tire pressure warning control unit.
NG >> Repair or replace low tire pressure warning control unit ground circuit.

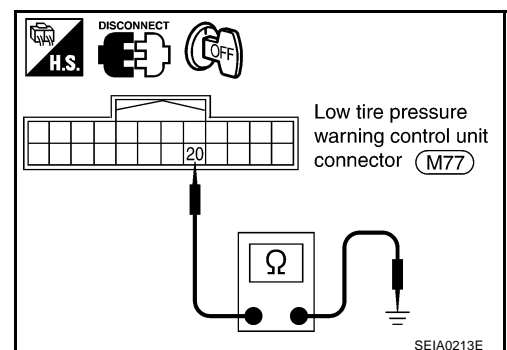

TROUBLE DIAGNOSIS FOR SYMPTOMS

Inspection 3: Warning Lamp Blinks When Ignition Switch Is Turned On.


AES000DB

NOTE:

If warning lamp blink below, the system is normal.

Blink Mode A

- This mode shows transmitter status is OFF-mode. Carry out transmitter wake up operation. Refer to [WT-18](#), "[Transmitter Wake Up Operation](#)".

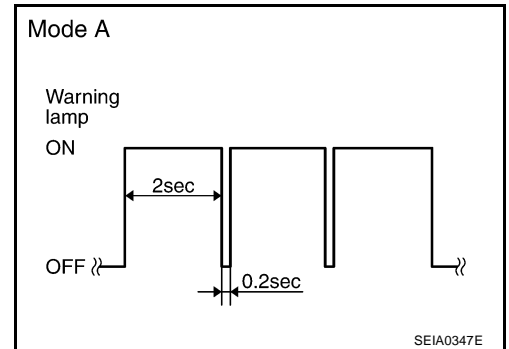

DIAGNOSTIC PROCEDURE

1. CHECK CONNECTOR

- Disconnect low tire pressure warning control unit connector.
- Check terminals for damage or loose connections.

Inspection results OK?

- OK >> GO TO 2.
- NG >> Repair or replace damaged parts.


2. CHECK GROUND CIRCUIT

- Check continuity between low tire pressure warning control unit harness connector M77 terminal 8 (G) and ground.

: Continuity should exist.

OK or NG?

- OK >> Replace low tire pressure warning control unit.
- NG >> Repair or replace harness connector.

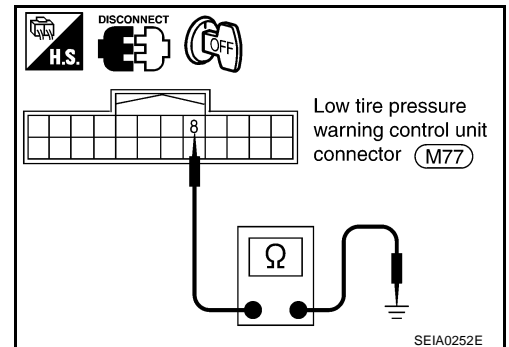

TROUBLE DIAGNOSIS FOR SYMPTOMS

Inspection 4: Hazard Warning Lamp Blinks When Ignition Switch Is Turned On.

AES000DC

DIAGNOSTIC PROCEDURE


1. CHECK GROUND CIRCUIT

- Check continuity between low tire pressure warning control unit harness connector M77 terminal 20 (B) and ground.

: Continuity should exist.

OK or NG?

- OK >> Replace low tire pressure warning control unit.
NG >> Repair or replace low tire pressure warning control unit ground circuit.

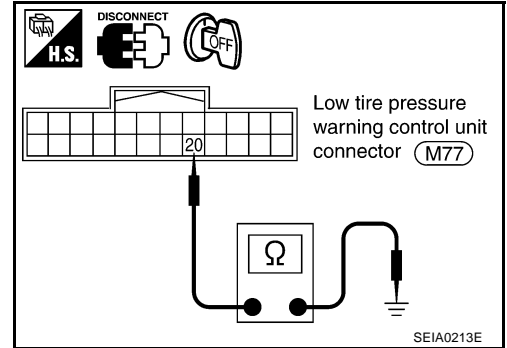

Inspection 5: "TIRE PRESSURE" Information In Triple Meter Does Not Exist.

AES000DA

Before carrying out the inspection on the following diagnostic procedure, perform the CAN communication line check. Refer to [WT-31, "Inspection 7: CAN Communication Line"](#).

DIAGNOSTIC PROCEDURE


1. CHECK TRIPLE METER POWER SUPPLY CIRCUIT

1. Disconnect triple meter connector.
2. Check voltage between triple meter harness connector M44 terminal 2 (R/W), 3 (G/Y) and ground.

: Battery voltage should exist. (Approx. 12V)

OK or NG?

- OK >> GO TO 2.
NG >> Check triple meter power supply circuit for open or short.

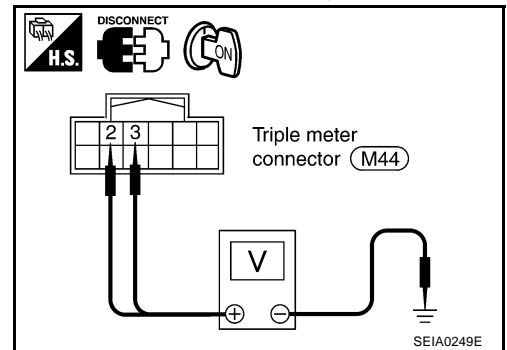


2. CHECK TRIPLE METER GROUND CIRCUIT

- Check continuity between triple meter harness connector M44 terminal 1 (B) and ground.

: Continuity should exist.

OK or NG?

- OK >> Check triple meter. Refer to [DI-43, "Diagnosis Flow"](#).
NG >> Repair or replace triple meter ground circuit.

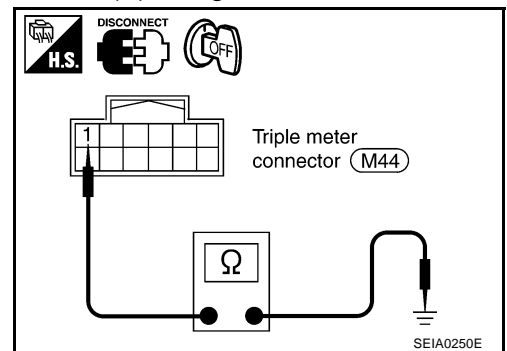

TROUBLE DIAGNOSIS FOR SYMPTOMS

Inspection 6: ID Registration Can Not Be Completed

AES000AU

DIAGNOSTIC PROCEDURE

1. ID REGISTRATION (ALL)

- Carry out ID registration of all transmitter.
- Can ID registration of all transmitter be completed?

OK or NG?

YES >> INSPECTION END.

NO >> GO TO "TROUBLE DIAGNOSIS FOR SELF-DIAGNOSTIC ITEMS" .

Inspection 7: CAN Communication Line

AES000DD

DIAGNOSTIC PROCEDURE

1. SELF-DIAGNOSTIC RESULT CHECK

④ With CONSULT-II

1. Select "AIR PRESSURE MONITOR" on "SELECT SYSTEM" screen.
2. Select "SELF-DIAG RESULTS" on "SELECT DIAG MODE" screen.
3. Check display content in self-diagnostic results.

Is "CAN COMM CIRCUIT" displayed in the self-diagnosis display items?

YES >> Malfunction in CAN communication system. GO TO [LAN-3, "Precautions When Using CONSULT-II"](#) .

NO >> INSPECTION END.

A

B

C

D

WT

F

G

H

I

J

K

L

M

REMOVAL AND INSTALLATION


REMOVAL AND INSTALLATION

PFP:00000


Transmitter REMOVAL

AES00057

1. Deflate tire. Unscrew transmitter retaining nut and allow transmitter to fall into tire.
2. Gently bounce tire so that transmitter falls to bottom of tire. Place on tire changing machine and break both tire beads ensuring that the transmitter remains at the bottom of the tire.

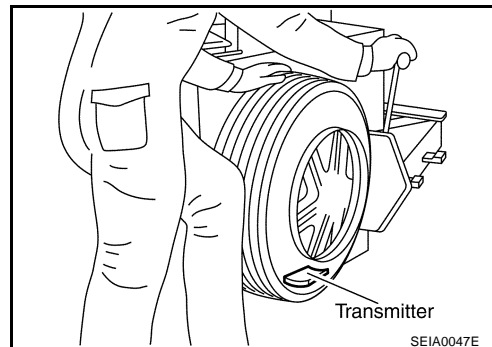


3. Turn tire so that valve hole is at bottom and bounce so that transmitter is near valve hole. Carefully lift tire onto turntable and position valve hole (and transmitter) 270 degree from mounting/dismounting head.
4. Lubricate tire well and remove first side of the tire. Reach inside the tire and remove the transmitter. Remove second side of tire.

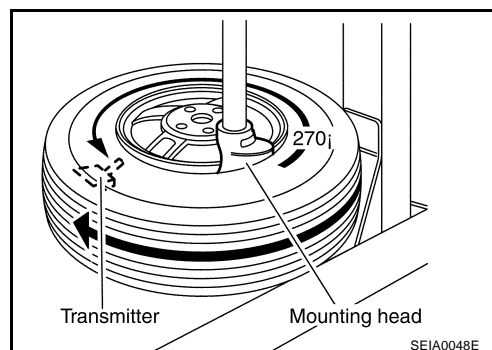


INSTALLATION

1. Put first side of tire onto rim.

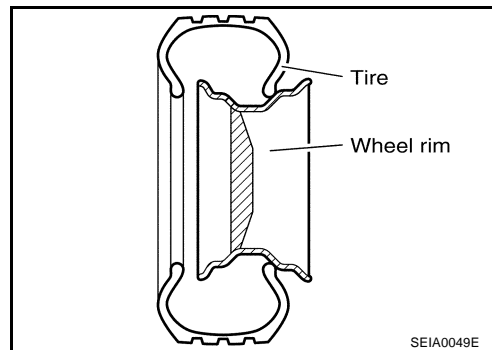

2. Mount transmitter on rim and tighten nut.

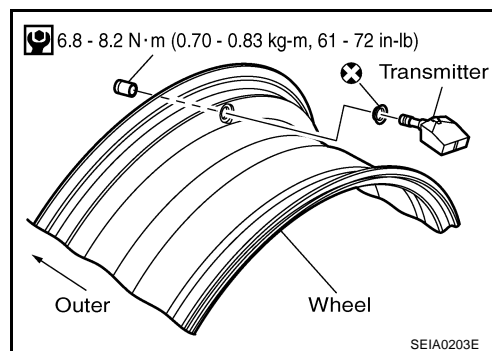


REMOVAL AND INSTALLATION

- Place wheel on turntable of tire machine. Ensure that transmitter is 270 degree from mounting head when second side of tire is fitted.

NOTE:

Do not touch transmitter at mounting head.

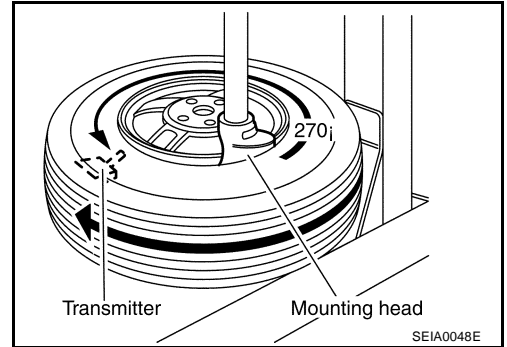

- Lubricate tire well and fit second side of tire as normal. Ensure that tire does not rotate relative to rim.
- Inflate tire and fit to appropriate wheel position.

A
B
C
D

WT

F
G
H
I
J
K
L
M

SERVICE DATA

SERVICE DATA

PFP:00030

Road Wheel

AES00058

Kind of wheel		Aluminum	Steel for emergency use
Deflection limit	Lateral deflection	Less than 0.3 mm (0.012 in)	Less than 1.0mm (0.039 in)
	Vertical deflection	Less than 0.3mm (0.012 in)	Less than 1.2mm (0.047in)
Allowable quantity of residual unbalance	Dynamic (At rim flange)	Less than 10g (0.35oz) (per side)	
	Static (At rim flange)	Less than 20g (0.70oz)	

Tire

AES00059

Unit: kPa (kg/cm², psi)

Tire size	Air pressure	
	Front wheel	Rear wheel
225/50R17 94W 225/45R18 91W	240 (2.4, 35)	—
235/50R17 06W 245/45R18 96W	—	240 (2.4, 35)
T145/96D16 T155/80R17	420 (4.2, 60)	420 (4.2, 60)

Tightening Torque

AES000DK

Wheel nut	98.1 - 127 N·m (10 - 12 kg·m, 73 - 93 ft·lb)
-----------	--