

A
B
C

SECTION SC

STARTING & CHARGING SYSTEM

CONTENTS

| | |
|--|--|
| <p>PRECAUTIONS 2</p> <p style="padding-left: 20px;">Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" 2</p> <p style="padding-left: 20px;">Precautions for Power Generation Variable Voltage Control System 2</p> <p>PREPARATION 3</p> <p style="padding-left: 20px;">Special Service Tools 3</p> <p style="padding-left: 20px;">Commercial Service Tools 3</p> <p>BATTERY 4</p> <p style="padding-left: 20px;">How to Handle Battery 4</p> <p style="padding-left: 40px;">METHODS OF PREVENTING OVER-DISCHARGE 4</p> <p style="padding-left: 40px;">CHECKING ELECTROLYTE LEVEL 4</p> <p style="padding-left: 40px;">SPECIFIC GRAVITY CHECK 5</p> <p style="padding-left: 40px;">CHARGING THE BATTERY 6</p> <p style="padding-left: 20px;">Trouble Diagnoses with Battery/Starting/Charging System Tester 6</p> <p style="padding-left: 40px;">DIAGNOSTIC RESULT ITEM CHART 8</p> <p style="padding-left: 20px;">Removal and Installation 9</p> <p style="padding-left: 40px;">REMOVAL 9</p> <p style="padding-left: 40px;">INSTALLATION 9</p> <p>STARTING SYSTEM 10</p> <p style="padding-left: 20px;">System Description 10</p> <p style="padding-left: 40px;">A/T MODELS 10</p> <p style="padding-left: 40px;">M/T MODELS (WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM) 10</p> <p style="padding-left: 40px;">M/T MODELS (WITH CLUTCH INTERLOCK CANCEL SYSTEM) 11</p> <p style="padding-left: 20px;">Wiring Diagram — START — 12</p> <p style="padding-left: 40px;">A/T MODELS 12</p> <p style="padding-left: 20px;">Schematic — M/T Models — 14</p> <p style="padding-left: 40px;">M/T MODELS 15</p> <p style="padding-left: 20px;">Trouble Diagnoses with Battery/Starting/Charging System Tester 18</p> <p style="padding-left: 40px;">DIAGNOSTIC RESULT ITEM CHART 18</p> <p style="padding-left: 40px;">WORK FLOW 19</p> <p style="padding-left: 40px;">DIAGNOSTIC PROCEDURE 1 20</p> | <p style="padding-left: 20px;">DIAGNOSTIC PROCEDURE 2 21</p> <p style="padding-left: 20px;">MINIMUM SPECIFICATION OF CRANKING VOLTAGE REFERENCING COOLANT TEMPERATURE 22</p> <p style="padding-left: 20px;">Removal and Installation 23</p> <p style="padding-left: 40px;">REMOVAL 23</p> <p style="padding-left: 40px;">INSTALLATION 23</p> <p style="padding-left: 40px;">REMOVAL 24</p> <p style="padding-left: 40px;">INSTALLATION 24</p> <p>CHARGING SYSTEM 25</p> <p style="padding-left: 20px;">System Description 25</p> <p style="padding-left: 40px;">POWER GENERATION VARIABLE VOLTAGE CONTROL SYSTEM 25</p> <p style="padding-left: 20px;">Wiring Diagram — CHARGE — 27</p> <p style="padding-left: 20px;">Trouble Diagnoses with Battery/Starting/Charging System Tester 28</p> <p style="padding-left: 40px;">DIAGNOSTIC RESULT ITEM CHART 29</p> <p style="padding-left: 40px;">WORK FLOW 31</p> <p style="padding-left: 40px;">PRELIMINARY INSPECTION 32</p> <p style="padding-left: 40px;">DIAGNOSTIC PROCEDURE 1 32</p> <p style="padding-left: 40px;">DIAGNOSTIC PROCEDURE 2 33</p> <p style="padding-left: 40px;">DIAGNOSTIC PROCEDURE 3 34</p> <p style="padding-left: 40px;">DIAGNOSTIC PROCEDURE 4 35</p> <p style="padding-left: 20px;">Power Generation Variable Voltage Control System Inspection 36</p> <p style="padding-left: 20px;">Removal and Installation — QR25DE Models 38</p> <p style="padding-left: 40px;">REMOVAL 38</p> <p style="padding-left: 40px;">GENERATOR PULLEY INSPECTION 38</p> <p style="padding-left: 40px;">INSTALLATION 38</p> <p style="padding-left: 20px;">Removal and Installation — VQ40DE Models 39</p> <p style="padding-left: 40px;">REMOVAL 39</p> <p style="padding-left: 40px;">GENERATOR PULLEY INSPECTION 39</p> <p style="padding-left: 40px;">INSTALLATION 39</p> <p>SERVICE DATA AND SPECIFICATIONS (SDS) 41</p> <p style="padding-left: 20px;">Battery 41</p> <p style="padding-left: 20px;">Starter 41</p> <p style="padding-left: 20px;">Generator 41</p> |
|--|--|

A
B
C
D
E
F
G
H
I
J
K
L
M

SC

PRECAUTIONS

PRECAUTIONS

PF0:00001

Precautions for Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER”

EKS00EP5

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER”, used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

Precautions for Power Generation Variable Voltage Control System

EKS00EML

CAUTION:

For this model, the battery current sensor that is installed to the negative battery cable measures the charging/discharging current of the battery and performs various engine controls. If an electrical component is connected directly to the negative battery terminal, the current flowing through that component will not be measured by the battery current sensor. This condition may cause a malfunction of the engine control system and battery discharge may occur. Do not connect an electrical component or ground wire directly to the battery terminal.

PREPARATION


PREPARATION

PFP:00002


Special Service Tools

EKS00B02

| Tool number (Kent-Moore No.) Tool name | Description |
|---|-----------------------------|
| (J-48087) Battery Service Center | Tests and charges batteries |
| J-44373 Model 620 Battery/Starting/Charging system tester | |



WKIA5280E

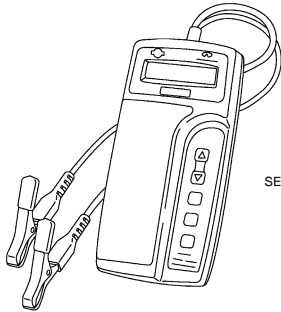


SEL403X

Commercial Service Tools

EKS00B03

| Tool number Tool name | Description |
|--------------------------|--------------------------|
| Power tool | Loosening bolts and nuts |

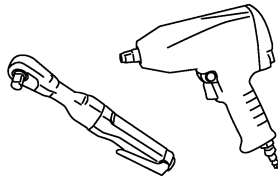

PBIC0190E

A
B
C
D
E
F
G
H
I
J
L
M

SC

BATTERY

PFP:AYBGL

BATTERY

How to Handle Battery

EKS00B04


CAUTION:

- If it becomes necessary to start the engine with a booster battery and jumper cables, use a 12-volt booster battery.
- After connecting battery cables, ensure that they are tightly clamped to battery terminals for good contact.
- Never add distilled water through the hole used to check specific gravity.


METHODS OF PREVENTING OVER-DISCHARGE

The following precautions must be taken to prevent over-discharging a battery.


- The battery surface (particularly its top) should always be kept clean and dry.
- The terminal connections should be clean and tight.
- At every routine maintenance, check the electrolyte level. This also applies to batteries designated as "low maintenance" and "maintenance-free".

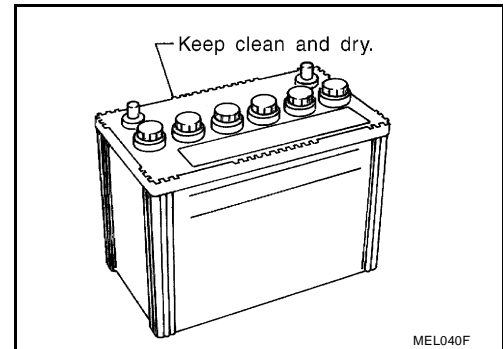

- When the vehicle is not going to be used over a long period of time, disconnect the negative battery terminal.

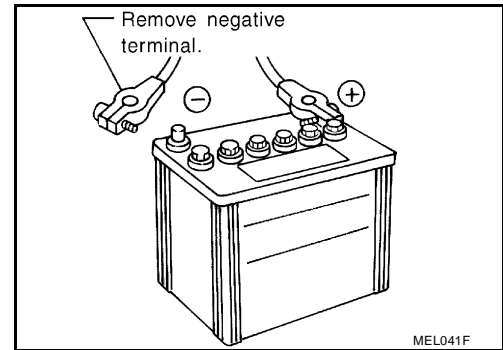

- Check the charge condition of the battery. Periodically check the specific gravity of the electrolyte. Keep a close check on charge condition to prevent over-discharge.

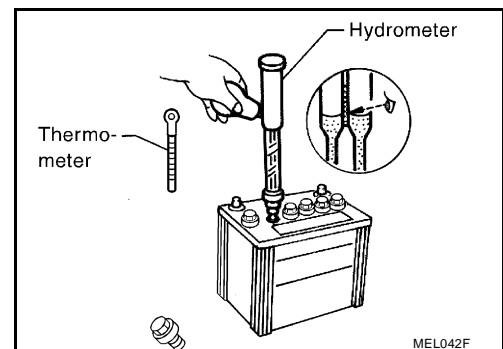


CHECKING ELECTROLYTE LEVEL

WARNING:

Do not allow battery fluid to come in contact with skin, eyes, fabrics, or painted surfaces. After touching a battery, do not touch or rub your eyes until you have thoroughly washed your hands. If acid contacts eyes, skin or clothing, immediately flush with water for 15 minutes and seek medical attention.

BATTERY

- Remove the cell plug using a suitable tool.
- Add distilled water up to the MAX level.

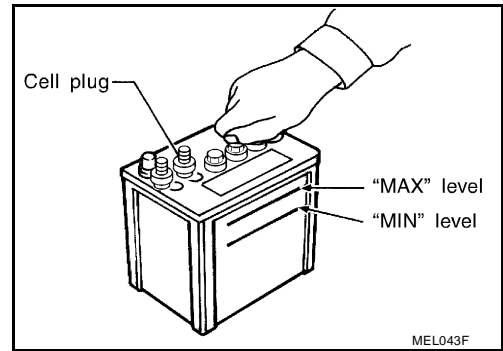


Sulfation

A battery will be completely discharged if it is left unattended for a long time and the specific gravity will become less than 1.100. This may result in sulfation of the cell plates.


To determine if a battery has been sulfated, note its voltage and current when charging it. As shown in the figure, less current and higher voltage are observed in the initial stage of charging sulfated batteries.

A sulfated battery may sometimes be brought back into service by means of a long, slow charge, 12 hours or more, followed by a battery capacity test.

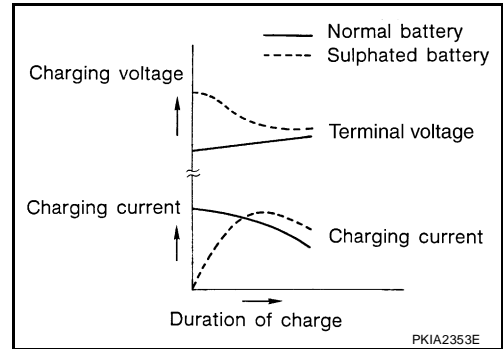

SPECIFIC GRAVITY CHECK

1. Read hydrometer and thermometer indications at eye level.
2. Use the following chart to correct your hydrometer reading according to electrolyte temperature.

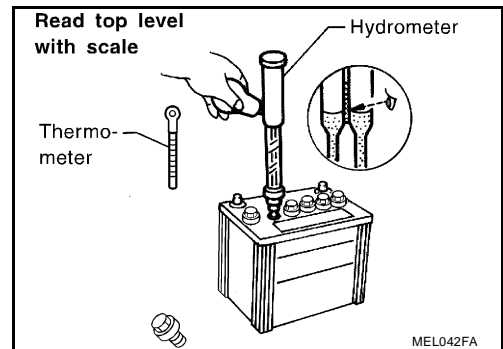

Hydrometer Temperature Correction

| Battery electrolyte temperature °C (°F) | Add to specific gravity reading |
|---|---------------------------------|
| 71 (160) | 0.032 |
| 66 (150) | 0.028 |
| 60 (140) | 0.024 |
| 54 (130) | 0.020 |
| 49 (120) | 0.016 |
| 43 (110) | 0.012 |
| 38 (100) | 0.008 |
| 32 (90) | 0.004 |
| 27 (80) | 0 |
| 21 (70) | -0.004 |
| 16 (60) | -0.008 |
| 10 (50) | -0.012 |
| 4 (40) | -0.016 |
| -1 (30) | -0.020 |
| -7 (20) | -0.024 |

A
B
C
D
E
F
G
H
I
J
SC

BATTERY

| Battery electrolyte temperature °C (°F) | Add to specific gravity reading |
|---|---------------------------------|
| -12 (10) | -0.028 |
| -18 (0) | -0.032 |

| Corrected specific gravity | Approximate charge condition |
|----------------------------|------------------------------|
| 1.260 - 1.280 | Fully charged |
| 1.230 - 1.250 | 3/4 charged |
| 1.200 - 1.220 | 1/2 charged |
| 1.170 - 1.190 | 1/4 charged |
| 1.140 - 1.160 | Almost discharged |
| 1.110 - 1.130 | Completely discharged |

CHARGING THE BATTERY

CAUTION:

- Do not “quick charge” a fully discharged battery.
- Keep the battery away from open flame while it is being charged.
- When connecting the charger, connect the leads first, then turn on the charger. Do not turn on the charger first, as this may cause a spark.
- If battery electrolyte temperature rises above 55°C (131°F), stop charging. Always charge battery at a temperature below 55°C (131°F).

Charging Rates

| Amps | Time |
|------|----------|
| 50 | 1 hour |
| 25 | 2 hours |
| 10 | 5 hours |
| 5 | 10 hours |

Do not charge at more than 50 ampere rate.

NOTE:

The ammeter reading on your battery charger will automatically decrease as the battery charges. This indicates that the voltage of the battery is increasing normally as the state of charge improves. The charging amps indicated above refer to initial charge rate.

- If, after charging, the specific gravity of any two cells varies more than 0.050, the battery should be replaced.

Trouble Diagnoses with Battery/Starting/Charging System Tester

EKS00B05

CAUTION:

When working with batteries, always wear appropriate eye protection.

NOTE:

- To ensure a complete and thorough diagnosis, the battery, starter and generator test segments must be done as a set from start to finish.
- If battery surface charge is detected while testing, the tester will prompt you to turn on the headlights to remove the surface charge.
- If necessary, the tester will prompt you to determine if the battery temperature is above or below 0°C (32°F). Choose the appropriate selection by pressing the up or down arrow button, then press “ENTER” to make the selection.



BATTERY

1. Turn off all loads on the vehicle electrical system. Clean or repair as necessary.
2. Visually inspect the battery, battery terminals and cable ends with ignition switch in "OFF" position.

NOTE:

The contact surface between the battery terminals, cable ends and tester leads must be clean for a valid test. A poor connection will prevent testing and a "CHECK CONNECTION" message will appear during the test procedures. If this occurs, clean the battery post and terminals, reconnect them and restart the test.

3. Connect the red tester lead clamp to the positive battery terminal, and the black to the negative terminal.
4. The tester will turn on automatically. Using the arrow keys, select "IN-VEHICLE" on the tester and then press the "ENTER" key.

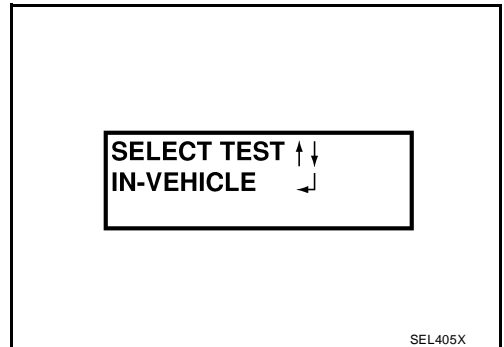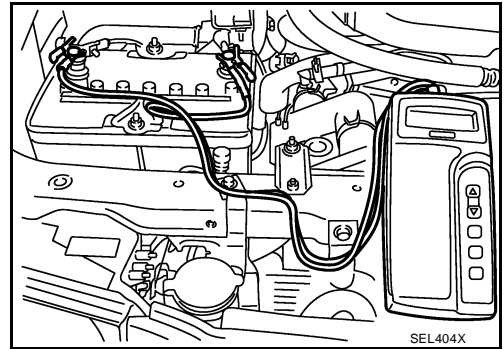

5. Locate the battery type and rating stamped or written on the top case of the battery to be tested.

NOTE:

The battery rating will be either of the following:

- **CCA:** Cold Cranking Amps (490 CCA, 550 CCA, etc.)
- **JIS:** Japanese Industrial Standard.


When using the Battery Tester use the CCA rating only.

- The tester requires the CCA rating for the battery be entered exactly as it is written or stamped on the battery.
 - (U.S. market) Refer to the latest "Battery Testing" Technical Service Bulletin (TSB) for a chart which contains these ratings listed by vehicle.
 - You must not use the JIS rating.
6. Using the arrow and "ENTER" keys alternately, select the battery type and rating.

NOTE:

The tester lists five choices; CCA, JIS, IEC, DIN, and EN. Only use CCA.

7. Press "ENTER" to begin the test. Diagnosis results are displayed on the tester. Refer to [SC-8, "DIAGNOSTIC RESULT ITEM CHART"](#).

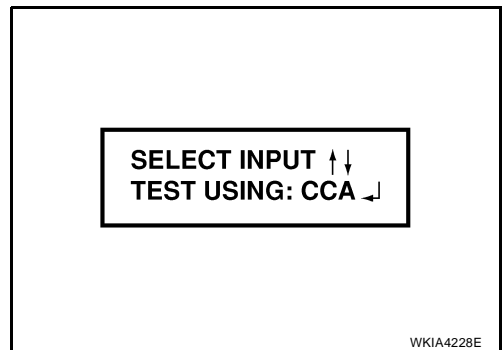


A
B
C
D
E
F
G
H
I
J
SC
L
M

BATTERY

8. Press "ENTER", then test output code is displayed. Record the test output code on the repair order.
9. Toggle back to the "DIAGNOSTIC SCREEN" for test results.

NOTE:

- If necessary, the tester will ask the user to determine if the battery has just been charged. Choose the appropriate selection by pressing the up or down arrow button and then press the "ENTER" button to make the selection.
- When testing a battery installed in a vehicle that has recently been driven, select "BEFORE CHARGE".
- If the battery has just been slow charged due to a "CHARGE & RETEST" decision by the tester, and the tester asks the user "BEFORE CHARGE/AFTER CHARGE", select "AFTER CHARGE".

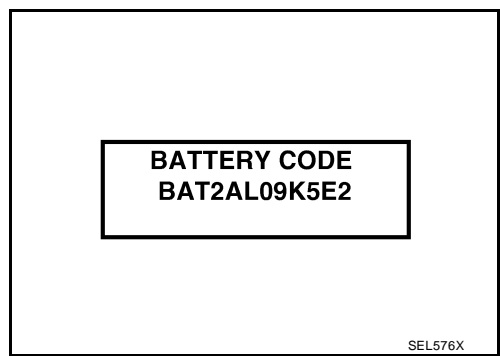

DIAGNOSTIC RESULT ITEM CHART

| Diagnostic item | Service procedure |
|------------------|--|
| GOOD BATTERY | Battery is OK. Refer to SC-18, "Trouble Diagnoses with Battery/Starting/Charging System Tester" . |
| REPLACE BATTERY | Replace battery. Before replacing battery, clean the battery cable clamps and battery posts. Perform battery test again with Battery/Starting/Charging system tester. If second test result is "Replace Battery", then do so. Perform battery test again to confirm repair. |
| BAD CELL-REPLACE | Replace the battery. Perform battery test again with Battery/Starting/Charging system tester to confirm repair. |
| GOOD-RECHARGE | Perform the slow battery charging procedure. (Initial rate of charge is 10A for 12 hours.) Perform battery test again with Battery/Starting/Charging system tester. |
| CHARGE & RETEST | Perform the slow battery charging. (Initial rate of charge is 10A for 12 hours.) Perform battery test again with Battery/Starting/Charging system tester to confirm repair. NOTE: If the tester asks the user "BEFORE CHARGE/AFTER CHARGE", select "AFTER CHARGE". |

BATTERY

Removal and Installation

EKS00B06


REMOVAL

1. Disconnect both negative and positive battery terminals.

CAUTION:

Disconnect negative battery terminal first.

2. Remove battery clamp nuts and battery clamp.
3. Remove battery.

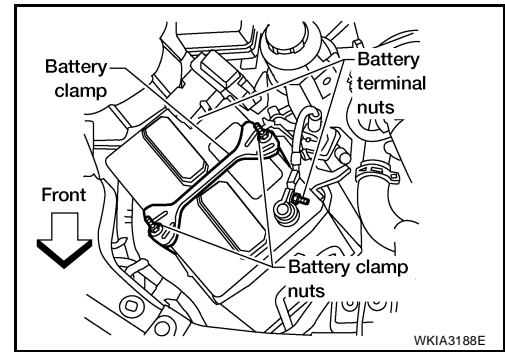

INSTALLATION

Installation is in the reverse order of removal.

Battery clamp nuts : 3.4 N·m (0.35 kg-m, 30 in-lb)

Battery terminal nut : 3.4 N·m (0.35 kg-m, 30 in-lb)

CAUTION:

Connect positive battery terminal first.

A
B
C
D
E
F
G
H
I
J
SC
L
M

STARTING SYSTEM

PF2:23300

EKS00F9V

STARTING SYSTEM

System Description A/T MODELS

Power is supplied at all times

- to starter motor terminal 2 and
- through 40A fusible link (letter. j , located in the fuse and fusible link box)
- to ignition switch terminal B.

With the ignition switch in the START position, power is supplied

- from ignition switch terminal ST
- to IPDM E/R terminal 21.

With the ignition switch in the ON or START position, power is supplied to IPDM E/R (intelligent power distribution module engine room) CPU.

With the selector lever in the P or N position, power is supplied

- through A/T assembly terminal 9
- to IPDM E/R terminal 48.

Ground is supplied at all times

- to IPDM E/R terminals 38 and 59
- through body grounds E9, E15 (all) and E24 (VQ40DE model).

Provided that the IPDM E/R receives a starter relay request ON signal from the BCM over the CAN lines, the IPDM E/R grounds the starter relay and power is supplied

- from terminal 19 of the IPDM E/R
- to terminal 1 of the starter motor.

The starter motor plunger closes and provides a closed circuit between the battery and the starter motor. The starter motor is grounded to the cylinder block. With power and ground supplied, the starter motor operates.

M/T MODELS (WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM)

Power is supplied at all times

- to starter motor terminal 2, and
- through 40A fusible link (letter. j , located in the fuse and fusible link box)
- to ignition switch terminal B.

With the ignition switch in the START position, power is supplied

- from ignition switch terminal ST
- to IPDM E/R terminal 21.

With the ignition switch in the ON or START position, power is supplied

- to IPDM E/R (intelligent power distribution module engine room) CPU, and
- through 10A fuse (No. 49, located in the IPDM E/R)
- to terminal 1 of the clutch interlock switch.

With the clutch pedal depressed, power is supplied

- from clutch interlock switch terminal 2
- to IPDM E/R terminal 48.

Ground is supplied at all times

- to IPDM E/R terminals 38 and 59
- through body grounds E9, E15 (all) and E24 (VQ40DE model).

Provided that the IPDM E/R receives a starter relay request ON signal from the BCM over the CAN lines, the IPDM E/R grounds the starter relay and power is supplied

- from terminal 19 of the IPDM E/R
- to terminal 1 of the starter motor.

The starter motor plunger closes and provides a closed circuit between the battery and the starter motor. The starter motor is grounded to the cylinder block. With power and ground supplied, the starter motor operates.

STARTING SYSTEM

M/T MODELS (WITH CLUTCH INTERLOCK CANCEL SYSTEM)

NOTE:

Vehicles with a manual transmission may be equipped with a clutch interlock cancel switch. This system description describes vehicle starting using the clutch interlock cancel switch. The use of the clutch interlock cancel switch allows the driver to start the vehicle without depressing the clutch pedal.

Power is supplied at all times

- to starter motor terminal 2, and
- through 40A fusible link (letter. j , located in the fuse and fusible link box)
- to ignition switch terminal B.

With the ignition switch in the START position, power is supplied

- from ignition switch terminal ST
- to IPDM E/R terminal 21.

With the ignition switch in the ON or START position, power is supplied

- to IPDM E/R (intelligent power distribution module engine room) CPU, and
- through 10A fuse (No. 49, located in the IPDM E/R)
- to terminal 1 of the clutch interlock switch,
- to terminal 1 of the clutch interlock cancel switch, and
- to terminal 3 of the clutch interlock cancel relay 2.

With the clutch interlock cancel switch depressed, power is supplied

- from clutch interlock cancel switch terminal 3
- through normally closed contacts (terminals 3 and 4) of clutch interlock cancel relay 1
- to terminal 2 of the clutch interlock cancel relay 2.

Ground is supplied at all times

- to IPDM E/R terminals 38 and 59
- through body grounds E9, E15 (all) and E24 (VQ40DE model) and
- to terminal 1 of clutch interlock cancel relay 1,
- to terminal 1 of clutch interlock cancel relay 2
- through body grounds E9, E15 and E24.

The clutch interlock cancel relay 2 is energized and power is supplied

- from terminal 5 of the clutch interlock cancel relay 2
- to IPDM E/R terminal 48.

Provided that the IPDM E/R receives a starter relay request ON signal from the BCM over the CAN lines, the IPDM E/R grounds the starter relay and power is supplied

- from terminal 19 of the IPDM E/R
- to terminal 1 of the starter motor.

The starter motor plunger closes and provides a closed circuit between the battery and the starter motor. The starter motor is grounded to the cylinder block. With power and ground supplied, the starter motor operates.



A
B
C
D
E
F
G
H
I
J
L
M

SC

STARTING SYSTEM

Wiring Diagram — START — A/T MODELS

EKS00EMN

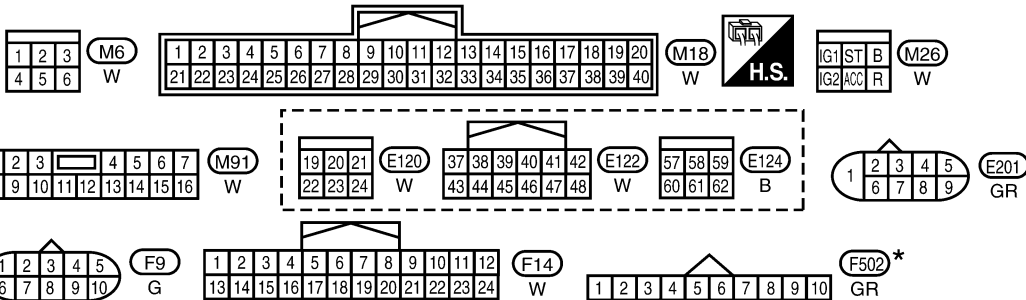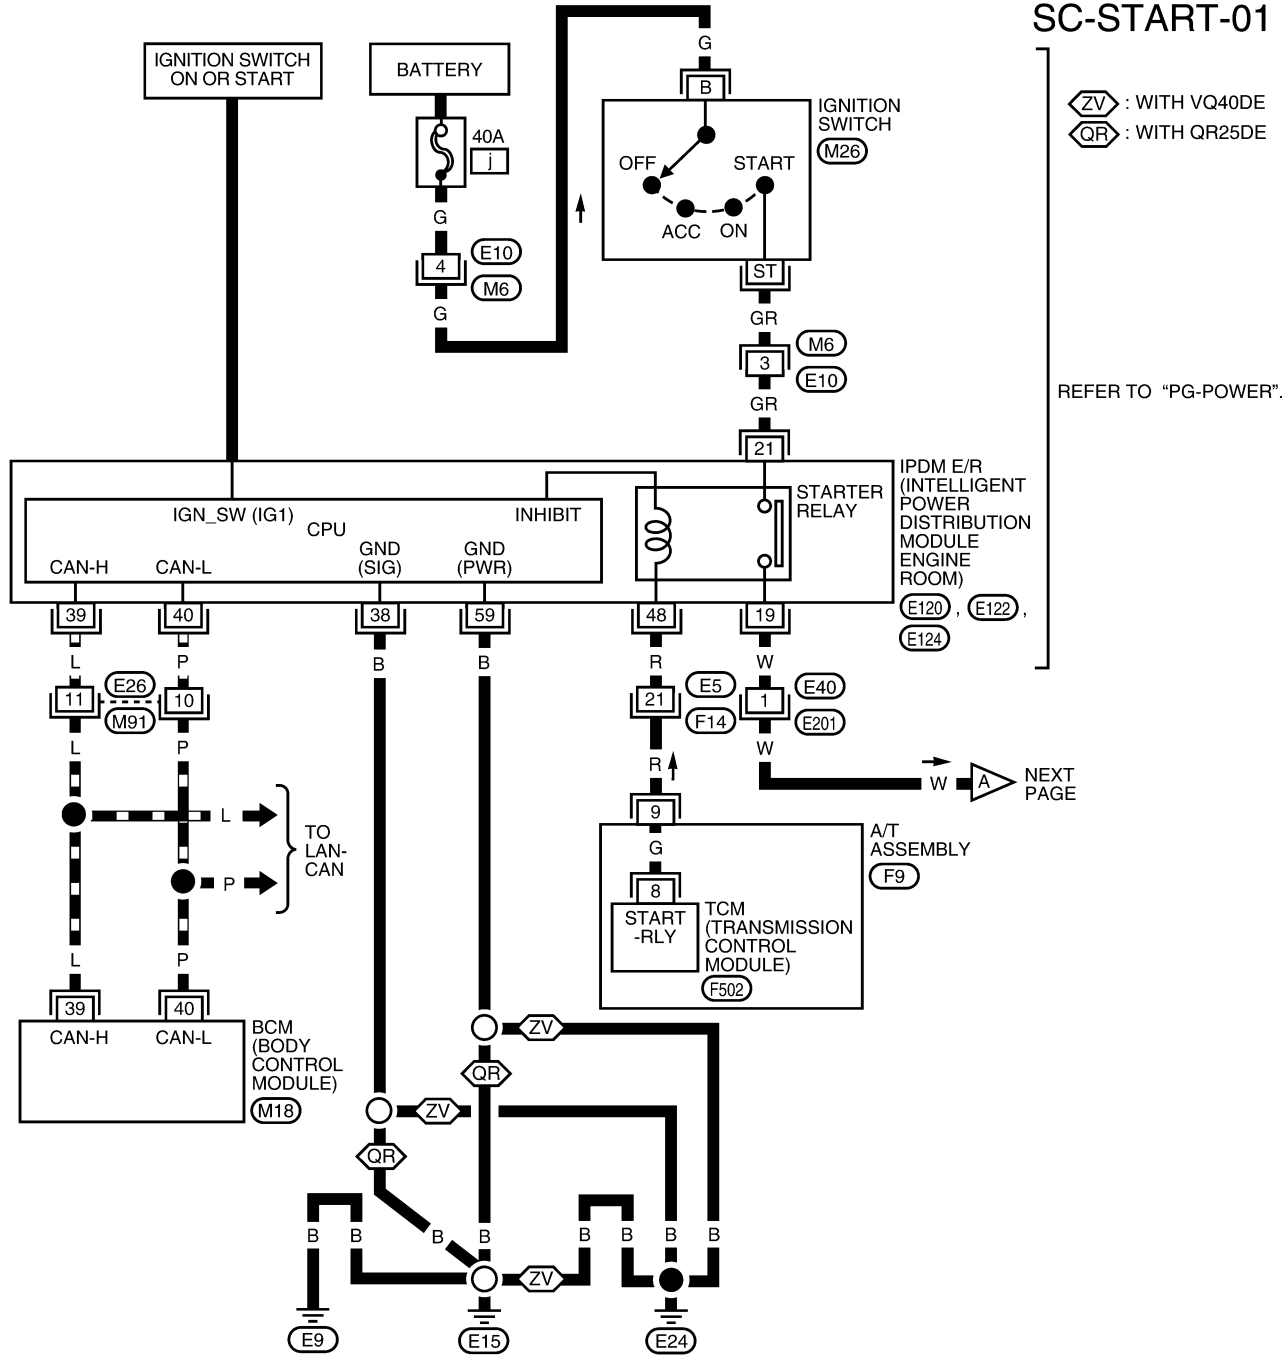





*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.


WKWA5407E

STARTING SYSTEM

SC-START-02

 : WITH VQ40DE
 : WITH QR25DE

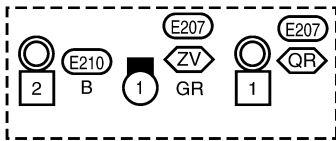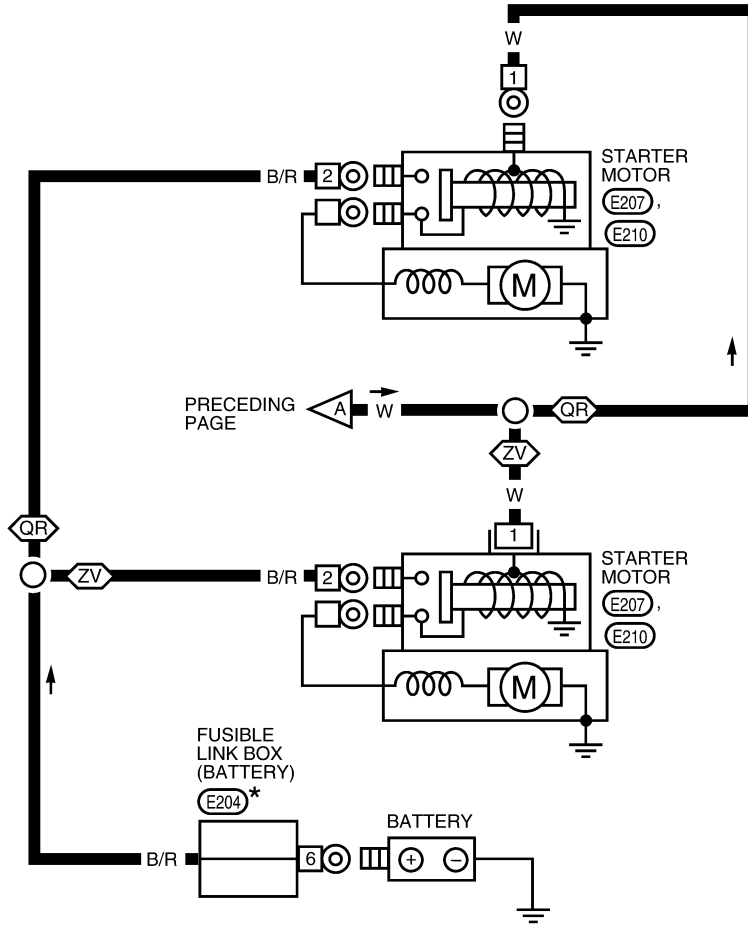


*:  IS AN INTEGRAL PART OF FUSIBLE LINK BOX (BATTERY) ASSEMBLY.

WKWA5408E

STARTING SYSTEM

Schematic — M/T Models —

EKS00EMO

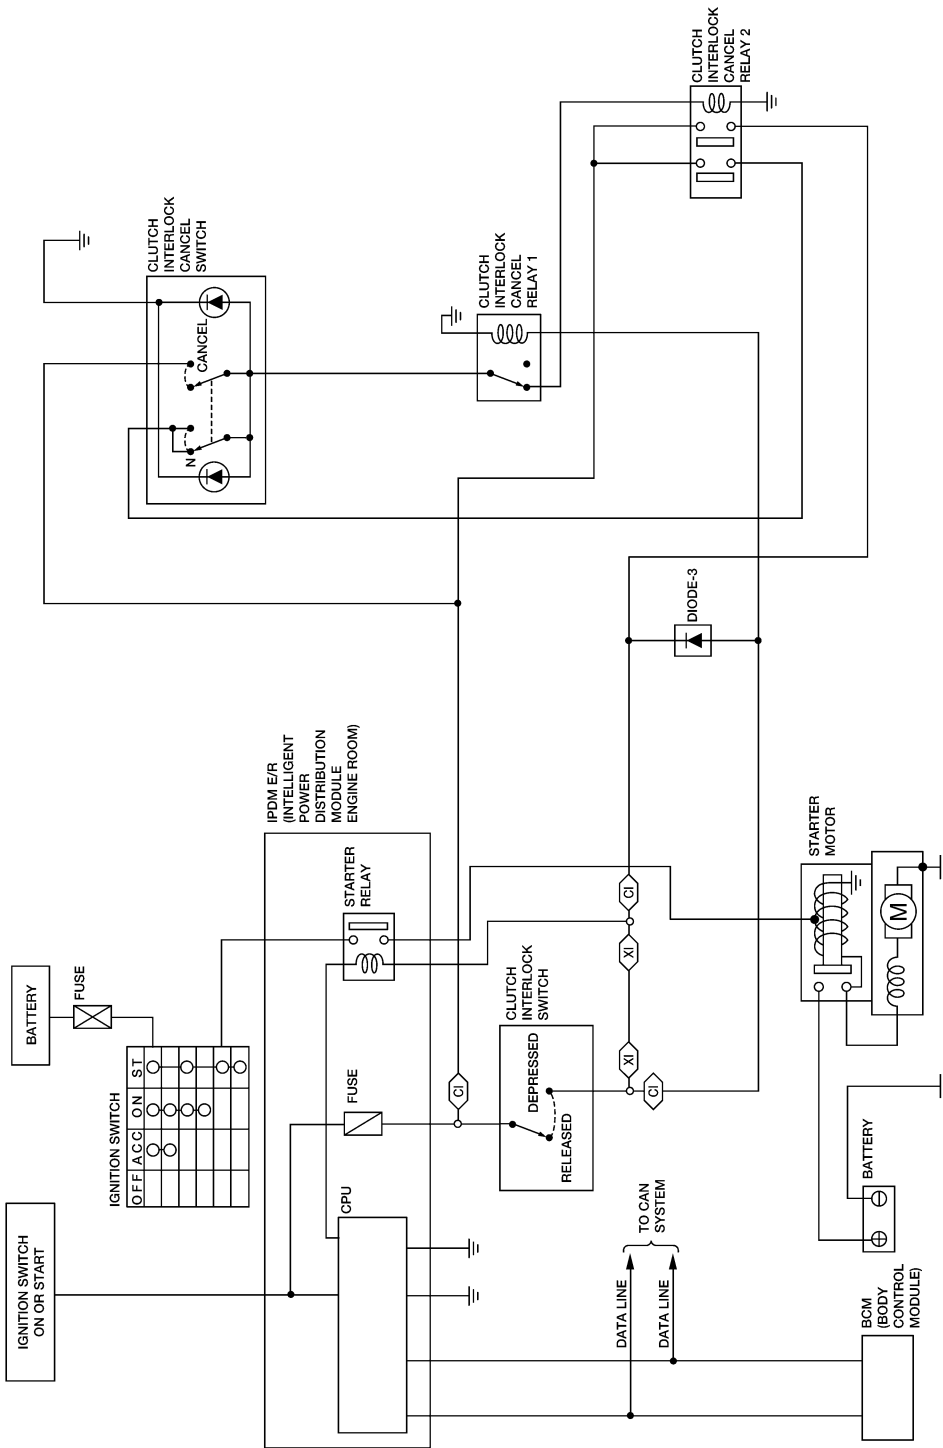

CI : WITH CLUTCH INTERLOCK CANCEL SWITCH
XI : WITHOUT CLUTCH INTERLOCK CANCEL SWITCH

WKWA4329E

STARTING SYSTEM

M/T MODELS



SC-START-03

: WITH CLUTCH INTERLOCK CANCEL SYSTEM

: WITH VQ40DE

: WITH QR25DE



: DATA LINE

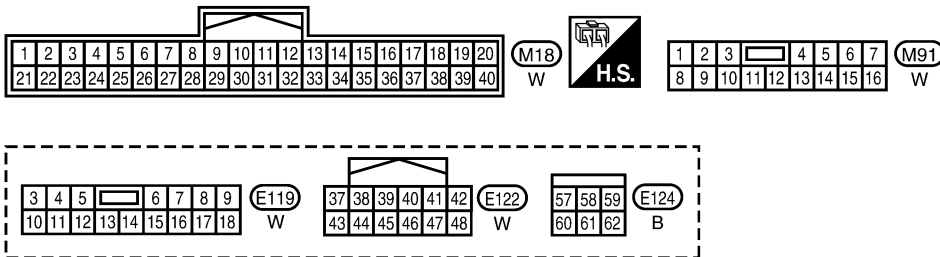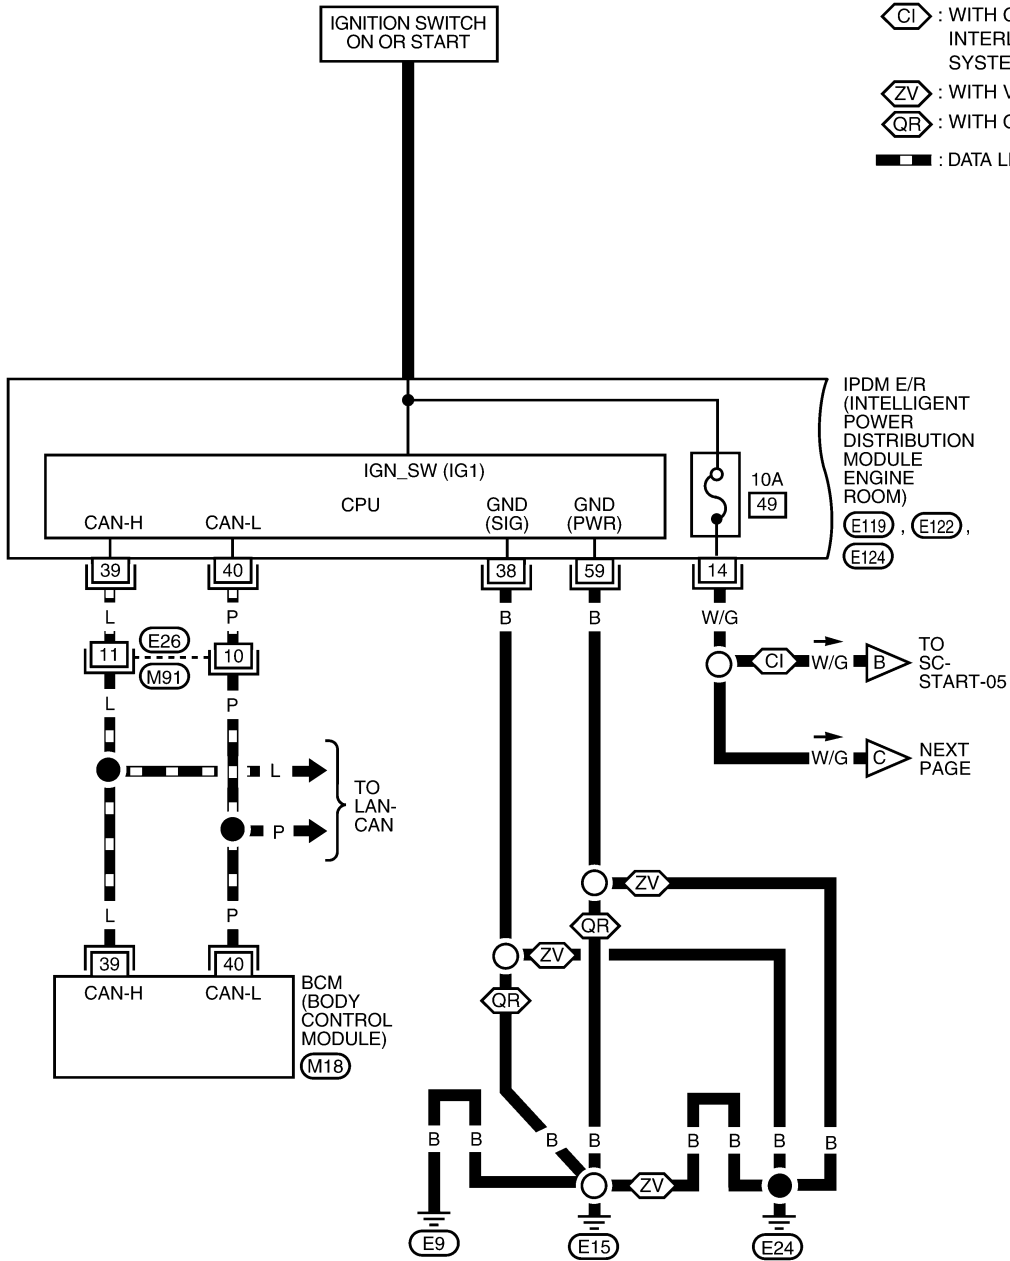

WKWA4330E

STARTING SYSTEM

SC-START-04

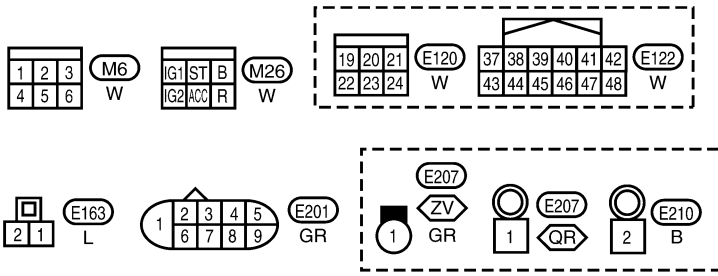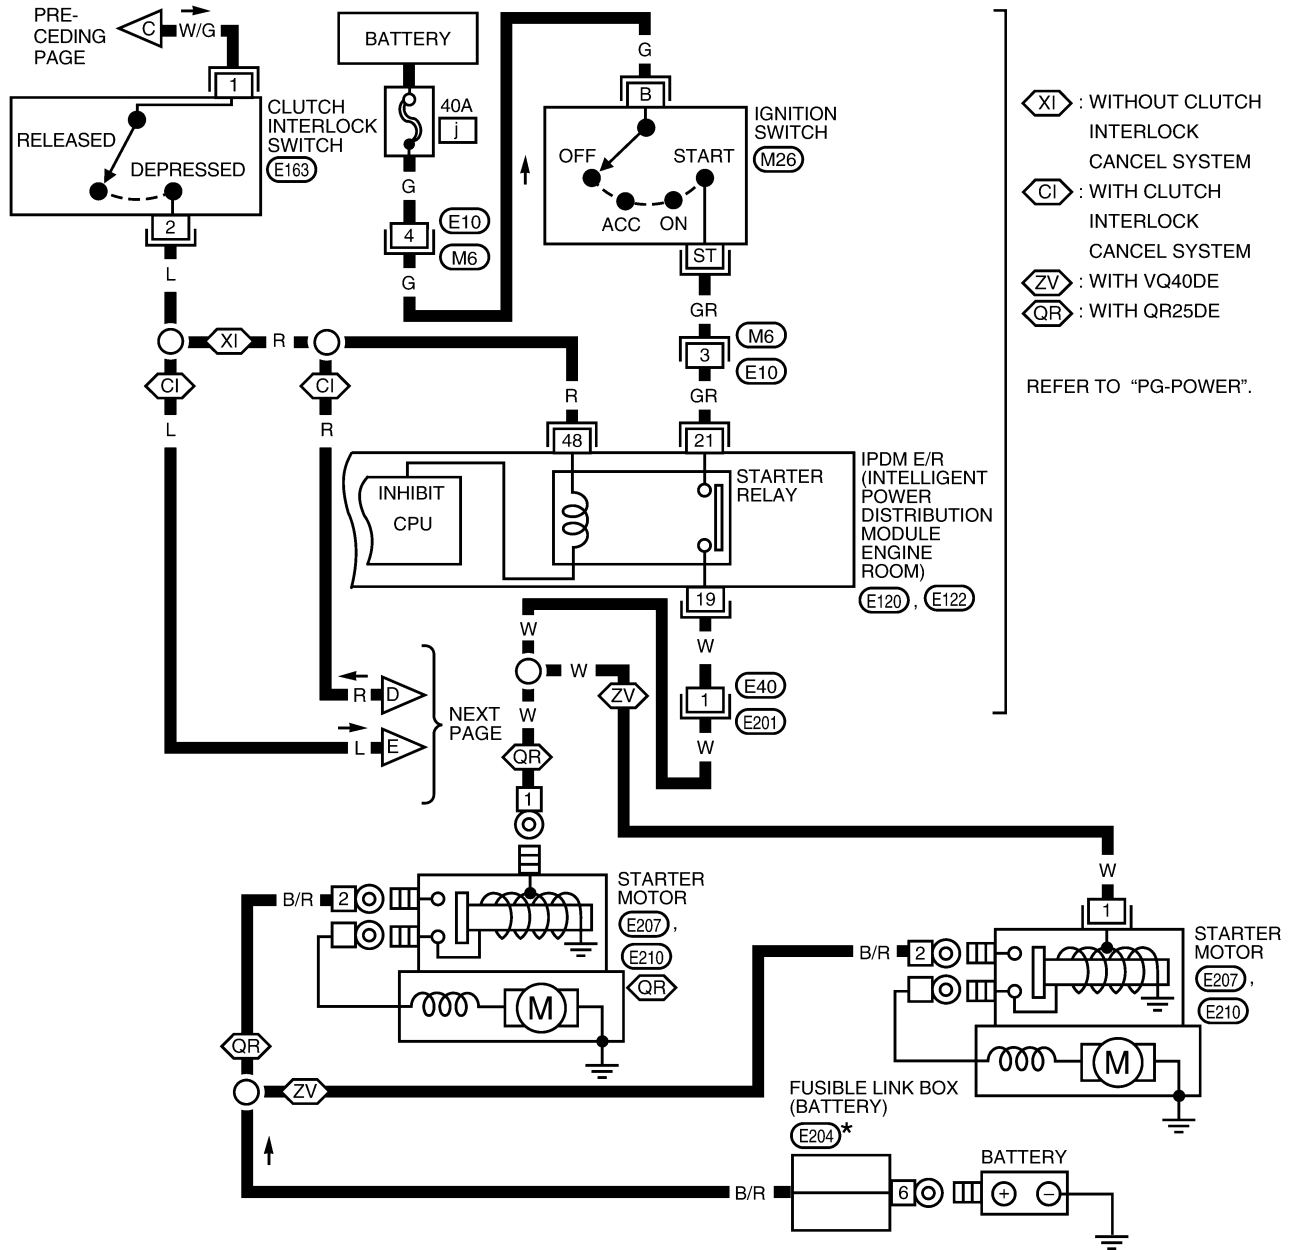


*: (E204) IS AN INTEGRAL PART OF FUSIBLE LINK BOX (BATTERY) ASSEMBLY.


WKWA5409E

STARTING SYSTEM

SC-START-05

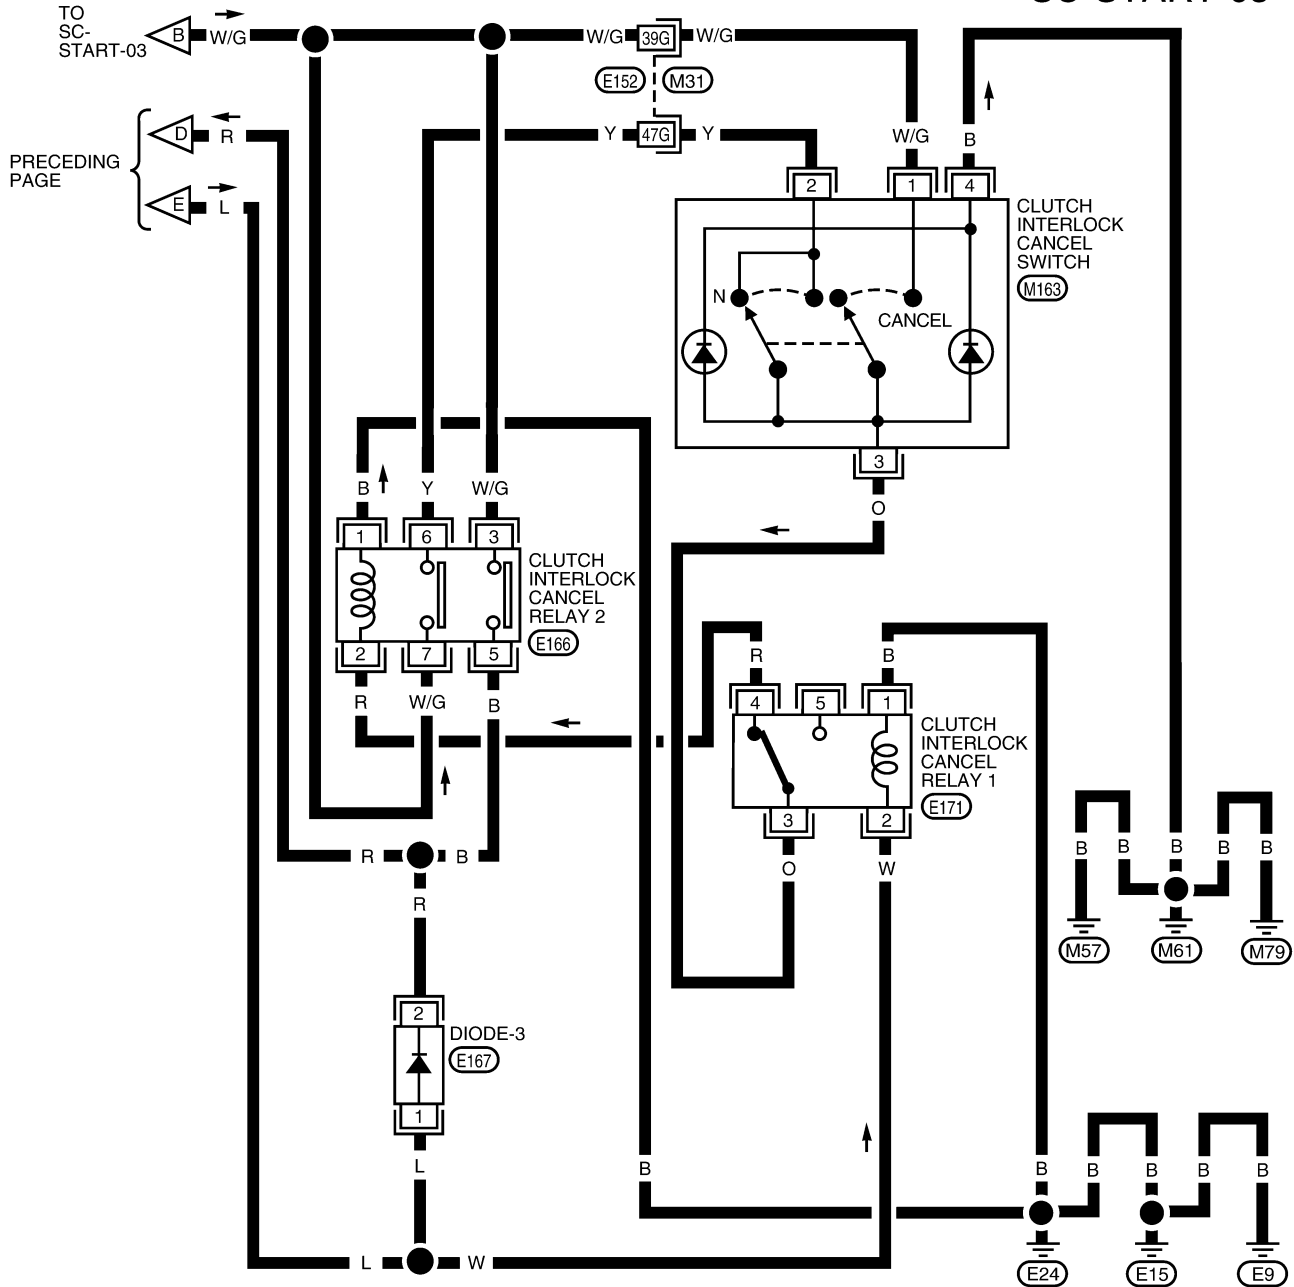

A
B
C
D
E
F
G
H
I
J
SC
L
M



REFER TO THE FOLLOWING.
(M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA5410E

STARTING SYSTEM


Trouble Diagnoses with Battery/Starting/Charging System Tester

EKS00B09


NOTE:

To ensure a complete and thorough diagnosis, the battery, starter and generator test segments must be done as a set from start to finish.

1. Turn off all loads on the vehicle electrical system.
2. Perform battery test with Battery/Starting/Charging system tester. Refer to [SC-6, "Trouble Diagnoses with Battery/Starting/Charging System Tester"](#).
3. Press "ENTER" to begin the starting system test.

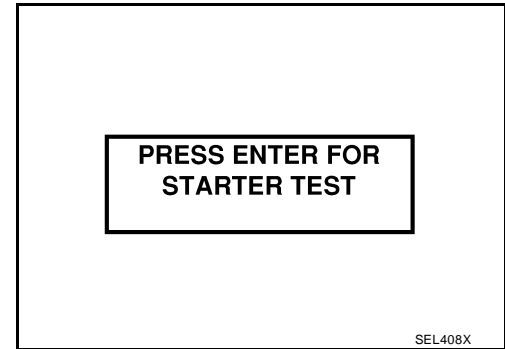


4. Start the engine.

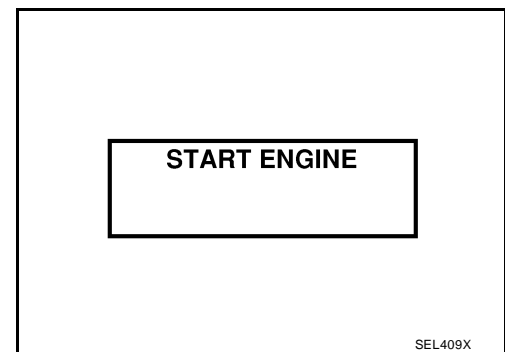

5. Diagnosis result is displayed on the tester. Refer to [SC-18, "DIAGNOSTIC RESULT ITEM CHART"](#).

NOTE:

- If the starter performs normally but the engine does not start, perform engine diagnosis.
- For intermittent "NO CRANK" or "NO STARTER OPERATION" incidents, refer to [SC-21, "DIAGNOSTIC PROCEDURE 2"](#).

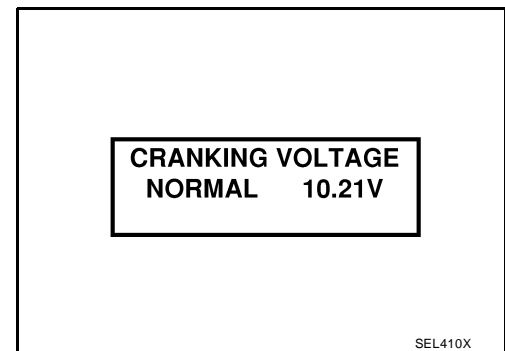


DIAGNOSTIC RESULT ITEM CHART

| Diagnostic item | Service procedure |
|-------------------------|--|
| CRANKING VOLTAGE NORMAL | Go to SC-19, "WORK FLOW" . |
| CRANKING VOLTAGE LOW | |
| CHARGE BATTERY | Perform the slow battery charging procedure. (Initial rate of charge is 10A for 12 hours.) Perform battery test again with Battery/Starting/Charging system tester. Refer to SC-6, "Trouble Diagnoses with Battery/Starting/Charging System Tester" . |
| REPLACE BATTERY | Before replacing battery, clean the battery cable clamps and battery posts. Perform battery test again with Battery/Starting/Charging system tester. Refer to SC-6, "Trouble Diagnoses with Battery/Starting/Charging System Tester" . If second test result is "REPLACE BATTERY", then do so. Perform battery test again to confirm repair. |

STARTING SYSTEM

WORK FLOW

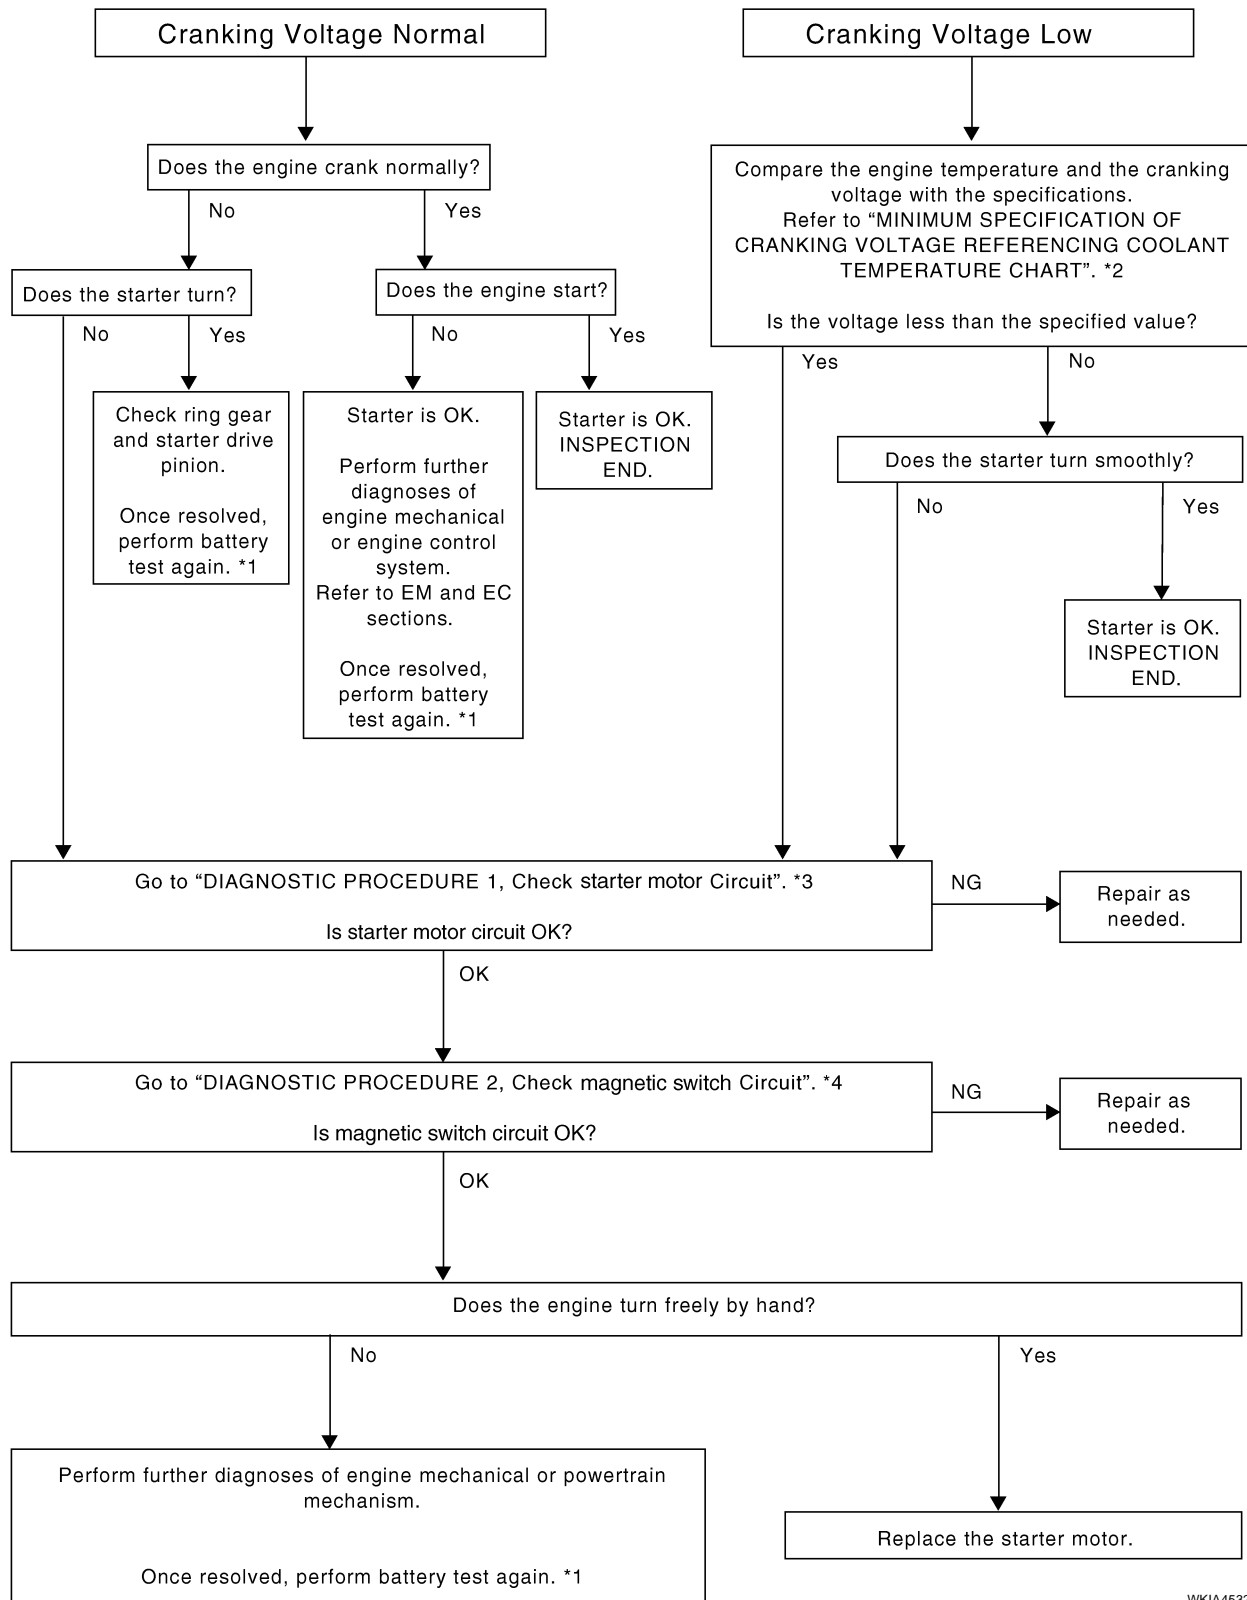

*1 [SC-6](#)

*2 [SC-22](#)

*3 [SC-20](#)

*4 [SC-21](#)

WKIA4532E

STARTING SYSTEM

DIAGNOSTIC PROCEDURE 1

Check Starter Motor Circuit

1. CHECK POWER SUPPLY TO STARTER MOTOR


1. Remove the fuel pump fuse.
2. Crank or start the engine (where possible) until the fuel pressure is released.
3. Turn the ignition switch OFF.
4. Check that the starter motor connector E210 connection is clean and tight.
5. Check voltage between starter motor connector E210 terminal 2 and ground using a digital circuit tester.

Battery voltage should exist.

OK or NG

OK >> GO TO 2.

NG >> Check harness between the battery and the starter motor for open circuit.

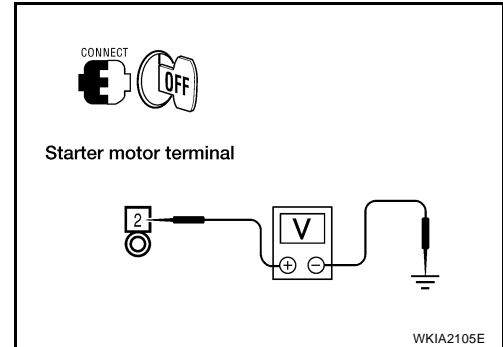

2. CHECK VOLTAGE DROP ON STARTER MOTOR CIRCUIT


Check voltage between starter motor connector E210 terminal 2 and battery positive terminal using a digital circuit tester.

Ignition switch in START : Less than 0.5V

OK or NG

OK >> GO TO 3.

NG >> Check harness between the battery and the starter motor for poor continuity.

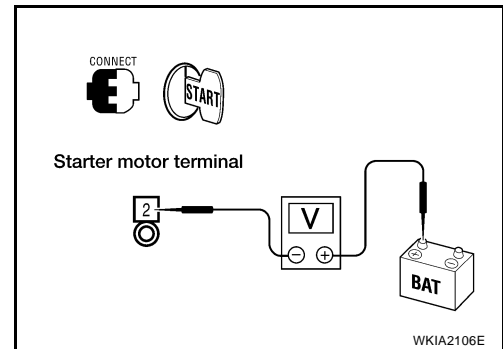

3. CHECK VOLTAGE DROP ON STARTER MOTOR GROUND CIRCUIT


Check voltage between starter motor case and battery negative terminal using a digital circuit tester.

Ignition switch in START : Less than 0.2V

OK or NG

OK >> Starter motor ground circuit is OK. Further inspection is necessary. Refer to [SC-19, "WORK FLOW"](#).

NG >> Check between the starter motor case and battery ground terminal for poor continuity.

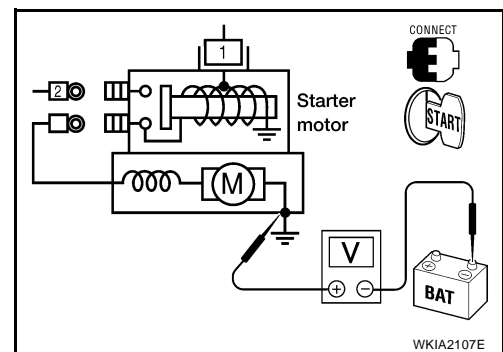

STARTING SYSTEM

DIAGNOSTIC PROCEDURE 2

Check Magnetic Switch Circuit

1. CHECK POWER SUPPLY FOR MAGNETIC SWITCH

1. Remove the fuel pump fuse.
2. Crank or start the engine (where possible) until the fuel pressure is released.
3. Turn the ignition switch OFF.
4. Disconnect starter motor connector E207.
5. Check voltage between starter motor connector E207 terminal 1 and ground using a digital circuit tester.


Ignition switch in START : Battery voltage

OK or NG

OK >> GO TO 2.

NG >> Check the following.

- 40A fusible link (letter j , located in fuse and fusible link box)
- 10A fuse [No. 49 , located in the intelligent power distribution module engine room (IPDM E/R)]
- Ignition switch
- Starter relay [within the intelligent power distribution module engine room (IPDM E/R)]
- Starter relay request ON signal
- Harness for open or short
- Clutch interlock switch (M/T models)

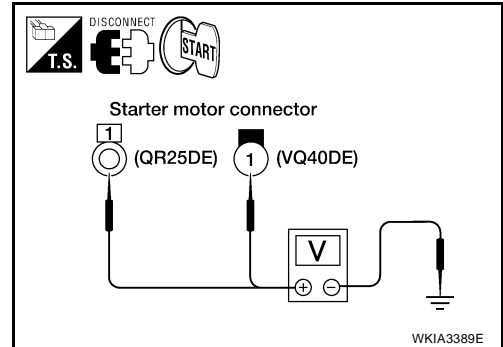

2. CHECK VOLTAGE DROP ON MAGNETIC SWITCH CIRCUIT


1. Turn the ignition switch OFF.
2. Connect starter motor connector E207.
3. Check voltage between starter motor connector E207 terminal 1 and battery positive terminal using a digital circuit tester.

Ignition switch in START : Less than 1V

OK or NG

OK >> Magnetic switch circuit is OK. Further inspection is necessary. Refer to [SC-19, "WORK FLOW"](#).

NG >> Check harness between the battery and the magnetic switch for poor continuity.

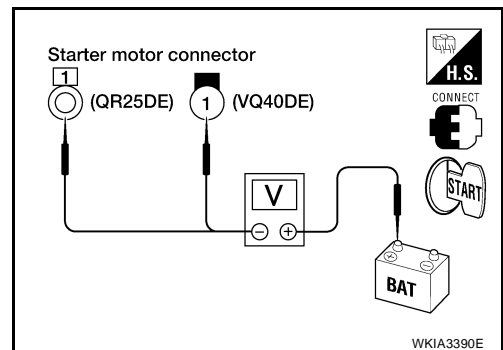

STARTING SYSTEM

MINIMUM SPECIFICATION OF CRANKING VOLTAGE REFERENCING COOLANT TEMPERATURE


| Engine coolant temperature | Voltage V |
|--------------------------------|-----------|
| -30°C to -20°C (-22°F to -4°F) | 8.4 |
| -19°C to -10°C (-2°F to 14°F) | 8.9 |
| -9°C to 0°C (16°F to 32°F) | 9.3 |
| More than 1°C (More than 34°F) | 9.7 |

STARTING SYSTEM

Removal and Installation

EKS00BOA

QR25DE Models

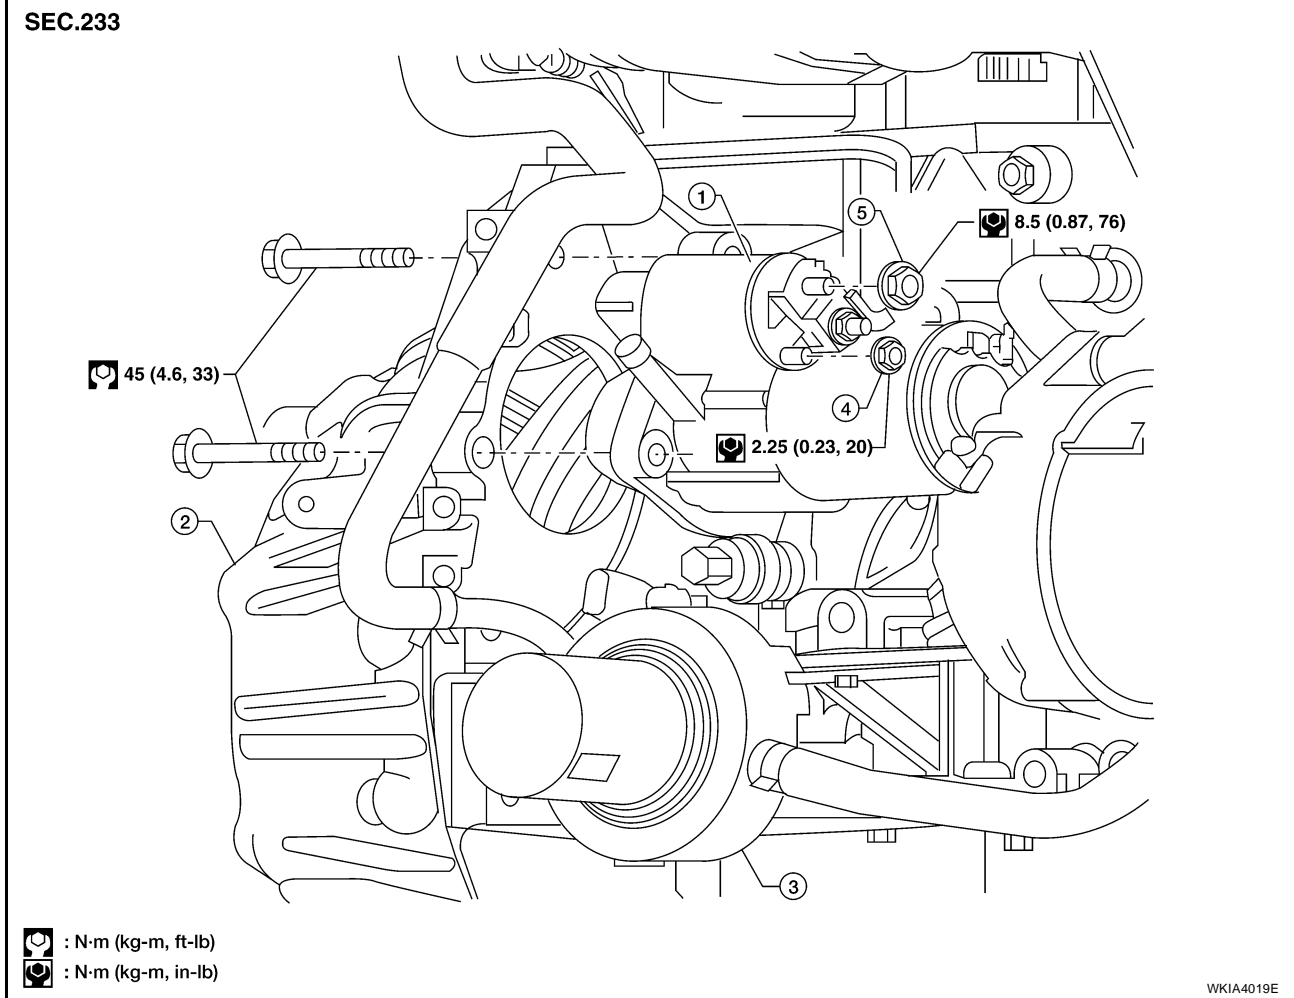

- | | | |
|---------------------------|-------------------------|----------------------|
| 1. Starter motor assembly | 2. Transmission housing | 3. Engine oil cooler |
| 4. Terminal "1" nut | 5. Terminal "2" nut | |

REMOVAL

1. Disconnect the negative battery terminal.
2. Remove the air cleaner cover and the air cleaner to intake manifold collector duct. Refer to [EM-16, "Removal and Installation"](#).
3. Remove the harness protector from the starter motor engine room harness.
4. Remove terminal "1" and "2" nuts.
5. Remove the two starter motor bolts, using power tools.
6. Remove the starter motor.

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

Be sure to tighten terminal nuts carefully.


A
B
C
D
E
F
G
H
I
J

SC

L
M


STARTING SYSTEM

VQ40DE Models

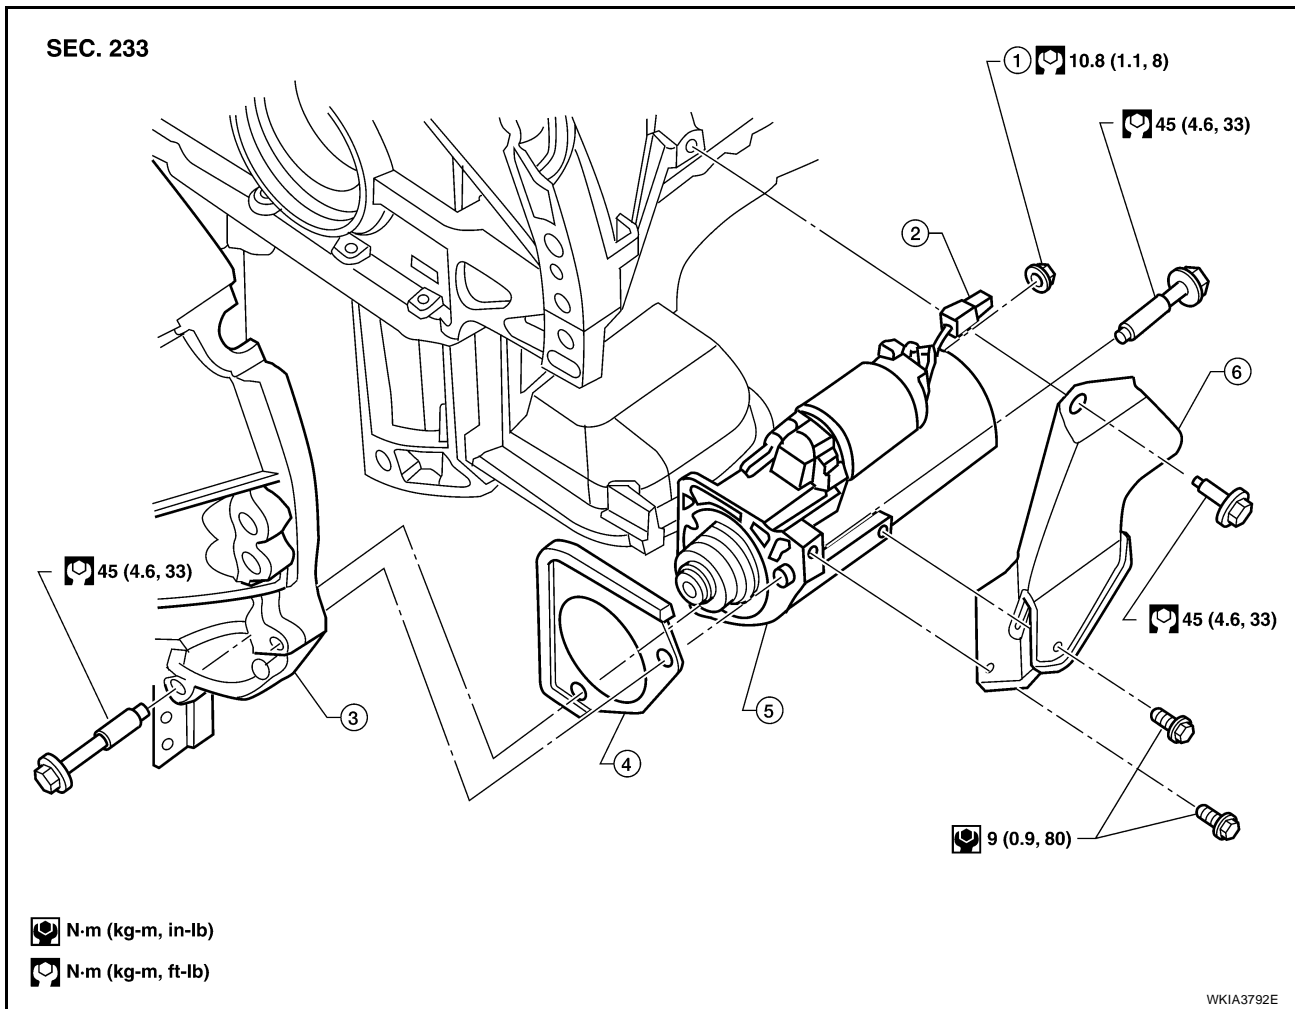

REMOVAL

1. Disconnect the negative battery terminal.
2. Remove engine undercover, using power tools.
3. Remove exhaust manifold cover from exhaust manifold (bank 1) to gain access to starter cover bolts. Refer to [EX-6, "REMOVAL"](#).
4. Remove starter cover bolts and starter cover.
5. Disconnect terminal "1" connector and remove terminal "2" nut.
6. Remove the two starter motor bolts, using power tools.
7. Remove the starter motor.

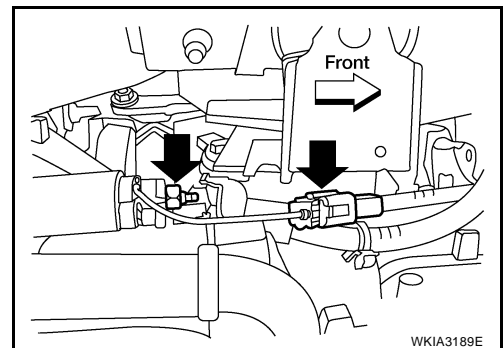

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

Be sure to tighten terminal "2" nut carefully.

CHARGING SYSTEM

PFP:23100

CHARGING SYSTEM

System Description

EKS00D6K

The generator provides DC voltage to operate the vehicle's electrical system and to keep the battery charged. The voltage output is controlled by the IC regulator.

Power is supplied at all times to generator terminal 3 through

- 15A fuse (No. 30, located in the fuse and fusible link box).

Terminal 1 supplies power to charge the battery and operate the vehicle's electrical system. Output voltage is controlled by the IC regulator at terminal 3 detecting the input voltage. A pulse width modulated (PWM) signal is sent from terminal 37 of the IPDM E/R to terminal 4 of the generator. The ECM determines the duty cycle of the power generation variable voltage control system. The charging circuit is protected by the 140A fusible link [letter **a**, located in the fusible link box (battery)].

The generator is grounded through the engine.


With the ignition switch in the ON or START position, power is supplied

- through 10A fuse [No. 14, located in the fuse block (J/B)]
- to combination meter terminal 16 for the charge warning lamp.

Ground is supplied to terminal 2 of the combination meter through terminal 2 of the generator. With power and ground supplied, the charge warning lamp will illuminate. When the generator is providing sufficient voltage with the engine running, the ground is opened and the charge warning lamp will go off. If the charge warning lamp illuminates with the engine running, a fault is indicated. The IC regulator warning function activates to illuminate "CHARGE" warning lamp, if any of the following symptoms occur while generator is operating

- Excessive voltage is produced.
- No voltage is produced.

POWER GENERATION VARIABLE VOLTAGE CONTROL SYSTEM

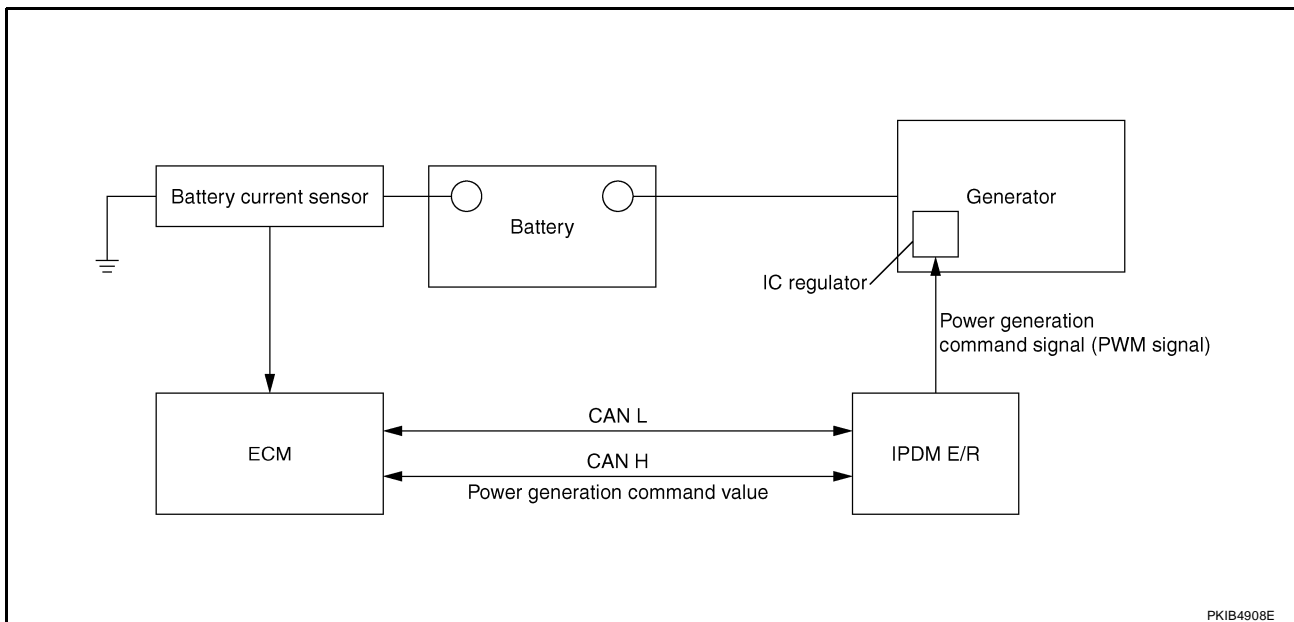

NOTE:

Power generation variable voltage control system has been adopted. By varying the voltage to the generator, engine load due to power generation of the generator is reduced and fuel consumption is decreased.

Operation

- The battery current sensor detects the charging/discharging current of the battery. ECM judges the battery condition based on this signal.
- ECM judges whether to control voltage according to the battery condition.
- ECM calculates the target power generation voltage according to the battery condition and sends the calculated value, through CAN lines, as the power generation command value to IPDM E/R.
- IPDM E/R converts the received power generation command value into the power generation command signal (PWM signal) and sends it to the IC regulator.
- The IC regulator performs final control over the power generation voltage.

CHARGING SYSTEM

- When there is no power generation command signal, the generator performs the normal power generation according to the characteristic of the IC regulator.

NOTE:


When any malfunction is detected in the power generation variable voltage control system, power generation is performed according to the characteristic of the IC regulator in the generator.

Component


Battery current sensor is installed to the negative battery cable and it detects the charging/discharging current of the battery and sends the voltage signal to ECM according to the current value.

BATTERY CURRENT SENSOR

- Models with VQ40DE

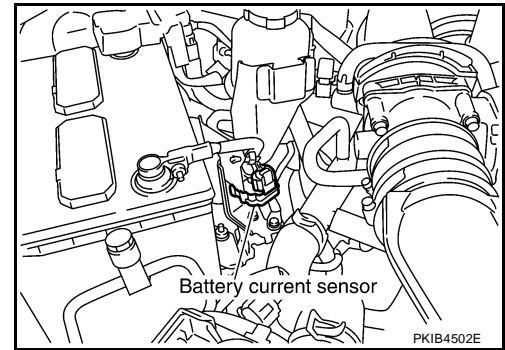


- Models with QR25DE

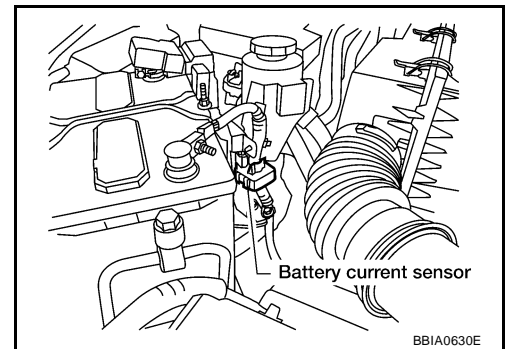


CHARGING SYSTEM

EKS00D6L

Wiring Diagram — CHARGE —

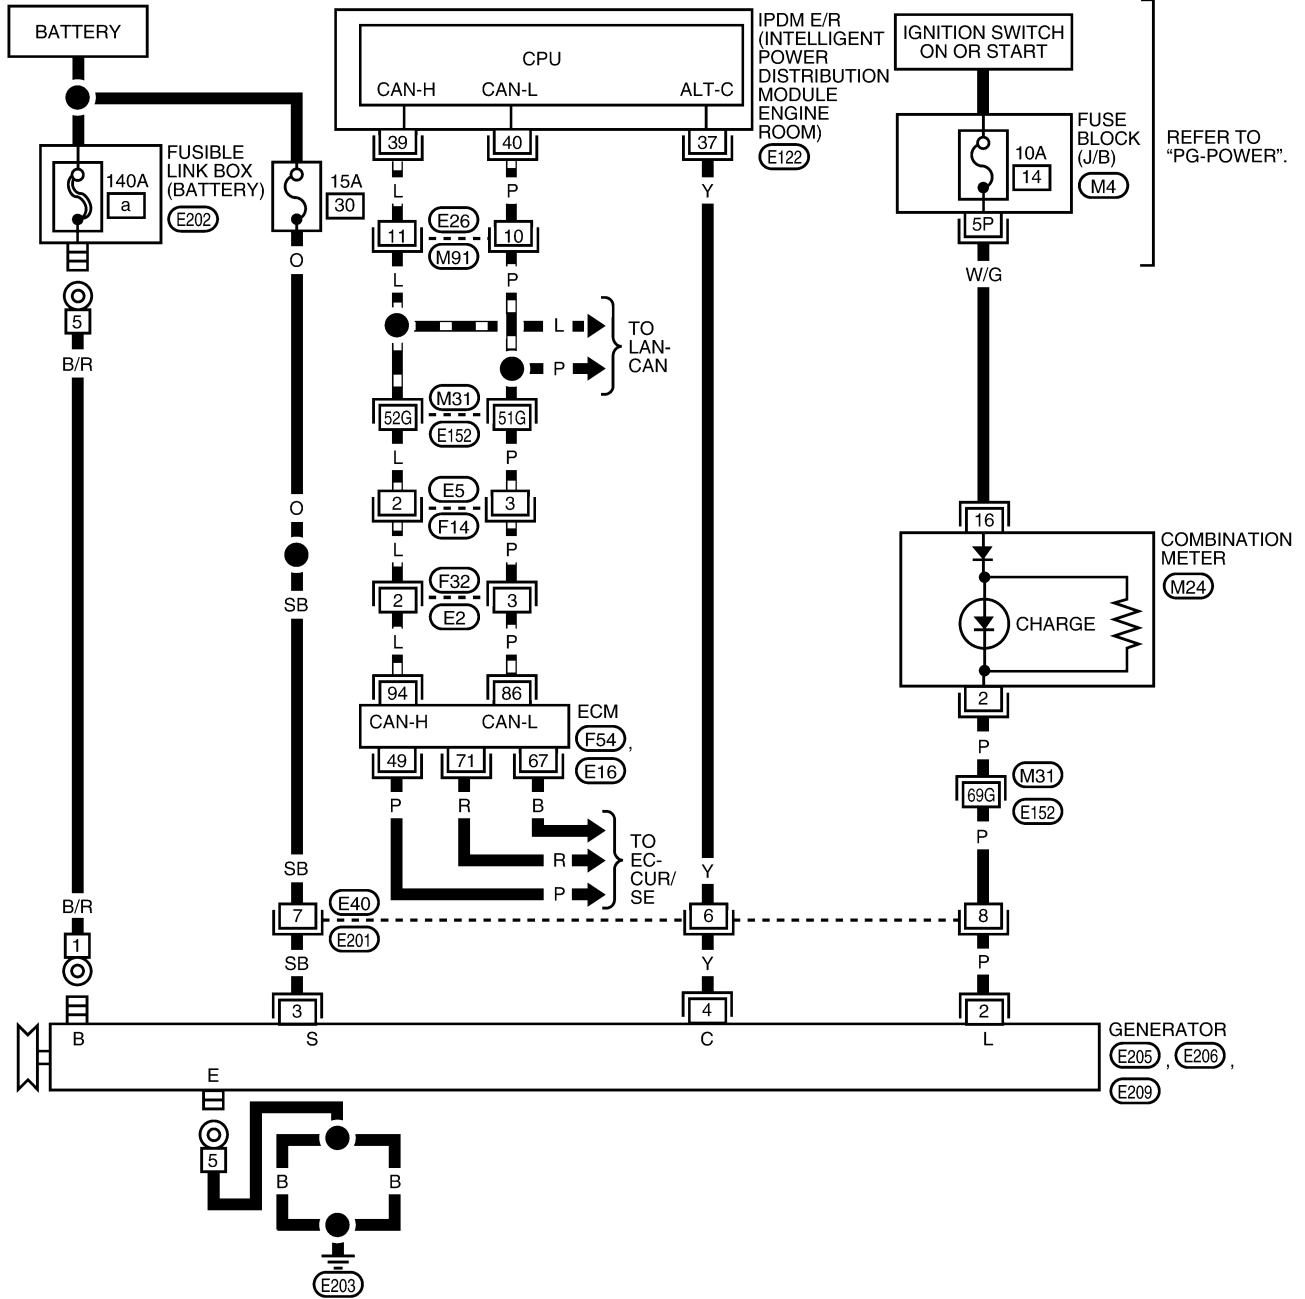

A
B
C
D
E
F
G
H
I
J
SC
L
M

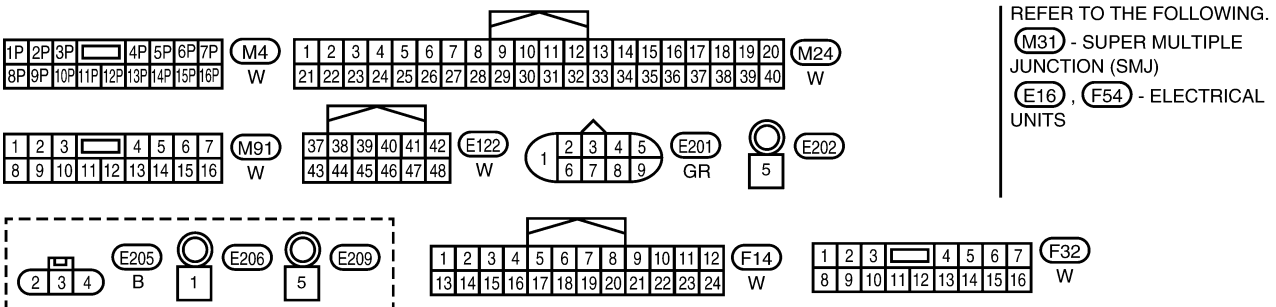

WKWA5411E

CHARGING SYSTEM

Trouble Diagnoses with Battery/Starting/Charging System Tester


EKS00D6M

NOTE:

To ensure a complete and thorough diagnosis, the battery, starter and generator test segments must be done as a set from start to finish.

Before starting, perform the preliminary inspection. Refer to [SC-32, "PRELIMINARY INSPECTION"](#) .


1. Stop the operation of the power generation variable voltage control system using either of the following procedures.
 - Using the CONSULT-II, select "ENGINE" from "SELECT SYSTEM" and set the "ALT DUTY" to 0%. Keep "ALT DUTY" at 0% until the end of the inspection. When the "ALT DUTY" value is 0% or 100%, normal power generation is performed according to the characteristic of the IC regulator in the generator.
 - Turn the ignition switch off, and disconnect the battery current sensor connector. Disconnecting the battery current sensor may cause DTC (P1550 - P1554) to set. After finishing the inspection, connect the battery current sensor connector and erase the self-diagnostic results history of the engine using CONSULT-II.
2. Turn off all loads on the vehicle electrical system.
3. Perform battery and starting system test with Battery/Starting/Charging system tester.
4. Press "ENTER" to begin the charging system test.
5. Start engine.

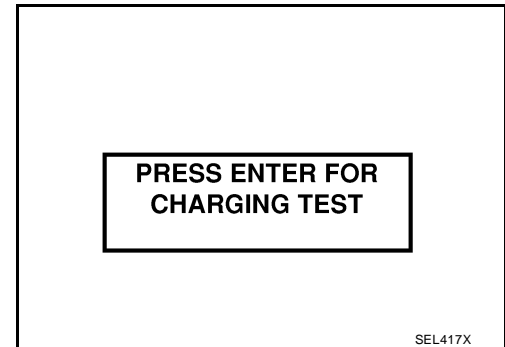

6. Press "ENTER" until "LOADS OFF REV ENGINE 5 SEC" is displayed.
7. Raise and hold the engine speed at 1,500 to 2,000 rpm for about 5 seconds, then return the engine to idle. Once the increase in engine rpm is detected, press "ENTER" to continue.

NOTE:


- If after 30 seconds an increase in engine idle speed is not detected, "RPM NOT DETECTED" will display.
- Some engines may have a higher idle initially after starting, particularly when the engine is cold. The tester may detect this without any other action being taken. If this occurs, continue on with the testing process. The final results will not be affected.

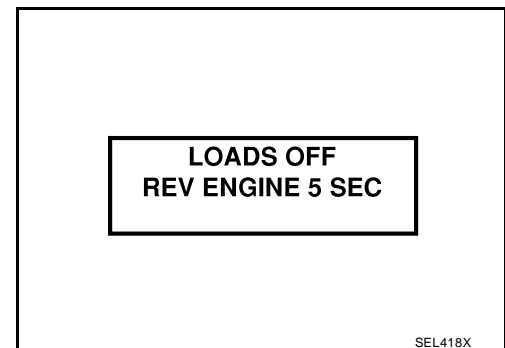

8. The tester now checks the engine at idle and performs the DIODE/RIPPLE check.
9. When complete, the tester will prompt you to turn on the following electrical loads.
 - Heater fan set to highest speed. Do not run the A/C or windshield defroster.
 - Headlamp high beam
 - Rear window defogger

NOTE:

Do not run the windshield wipers or any other cyclical loads.

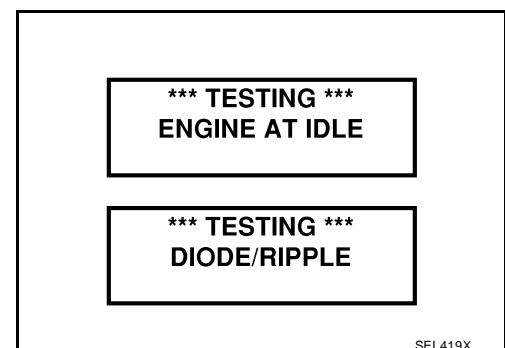

CHARGING SYSTEM

10. Press "ENTER" to continue.

TURN LOADS ON
ENTER TO CONT...

SEL420X

11. Raise and hold the engine speed at 1,500 to 2,000 rpm for about 5 seconds, then return the engine to idle. Once the increase in engine rpm is detected, press "ENTER" to continue.

NOTE:

If after 30 seconds an increase in engine idle speed is not detected, "RPM NOT DETECTED" will be displayed. Press "ENTER" to restart the test.

LOADS ON
REV ENGINE 5 SEC

SEL421X

12. Diagnostic result is displayed on the tester. Refer to [SC-29](#), "[DIAGNOSTIC RESULT ITEM CHART](#)".

CHARGING SYSTEM
NORMAL

SEL422X

13. Press "ENTER" then test output code is displayed. Record the test output code on the repair order.

14. Toggle back to the "DIAGNOSTIC SCREEN" for test results.

CHARGING CODE
ALTSTD7HJ934

SEL577X

DIAGNOSTIC RESULT ITEM CHART


| Diagnostic item | Service procedure |
|------------------------|--|
| CHARGING SYSTEM NORMAL | Charging system is normal and will also show DIODE RIPPLE test result. |
| NO CHARGING VOLTAGE | Go to SC-31 , " WORK FLOW ". |
| LOW CHARGING VOLTAGE | |
| HIGH CHARGING VOLTAGE | |
| DIODE RIPPLE NORMAL | Diode ripple is OK and will also show CHARGING VOLTAGE test result. |

CHARGING SYSTEM

| Diagnostic item | Service procedure |
|---------------------------|---|
| EXCESS RIPPLE DETECTED | Replace the generator. Refer to SC-39, "Removal and Installation — VQ40DE Models" or SC-38, "Removal and Installation — QR25DE Models" . Perform "DIODE RIPPLE" test again using Battery/Starting/Charging system tester to confirm repair. |
| DIODE RIPPLE NOT DETECTED | Go to SC-31, "WORK FLOW" . |

CHARGING SYSTEM

WORK FLOW

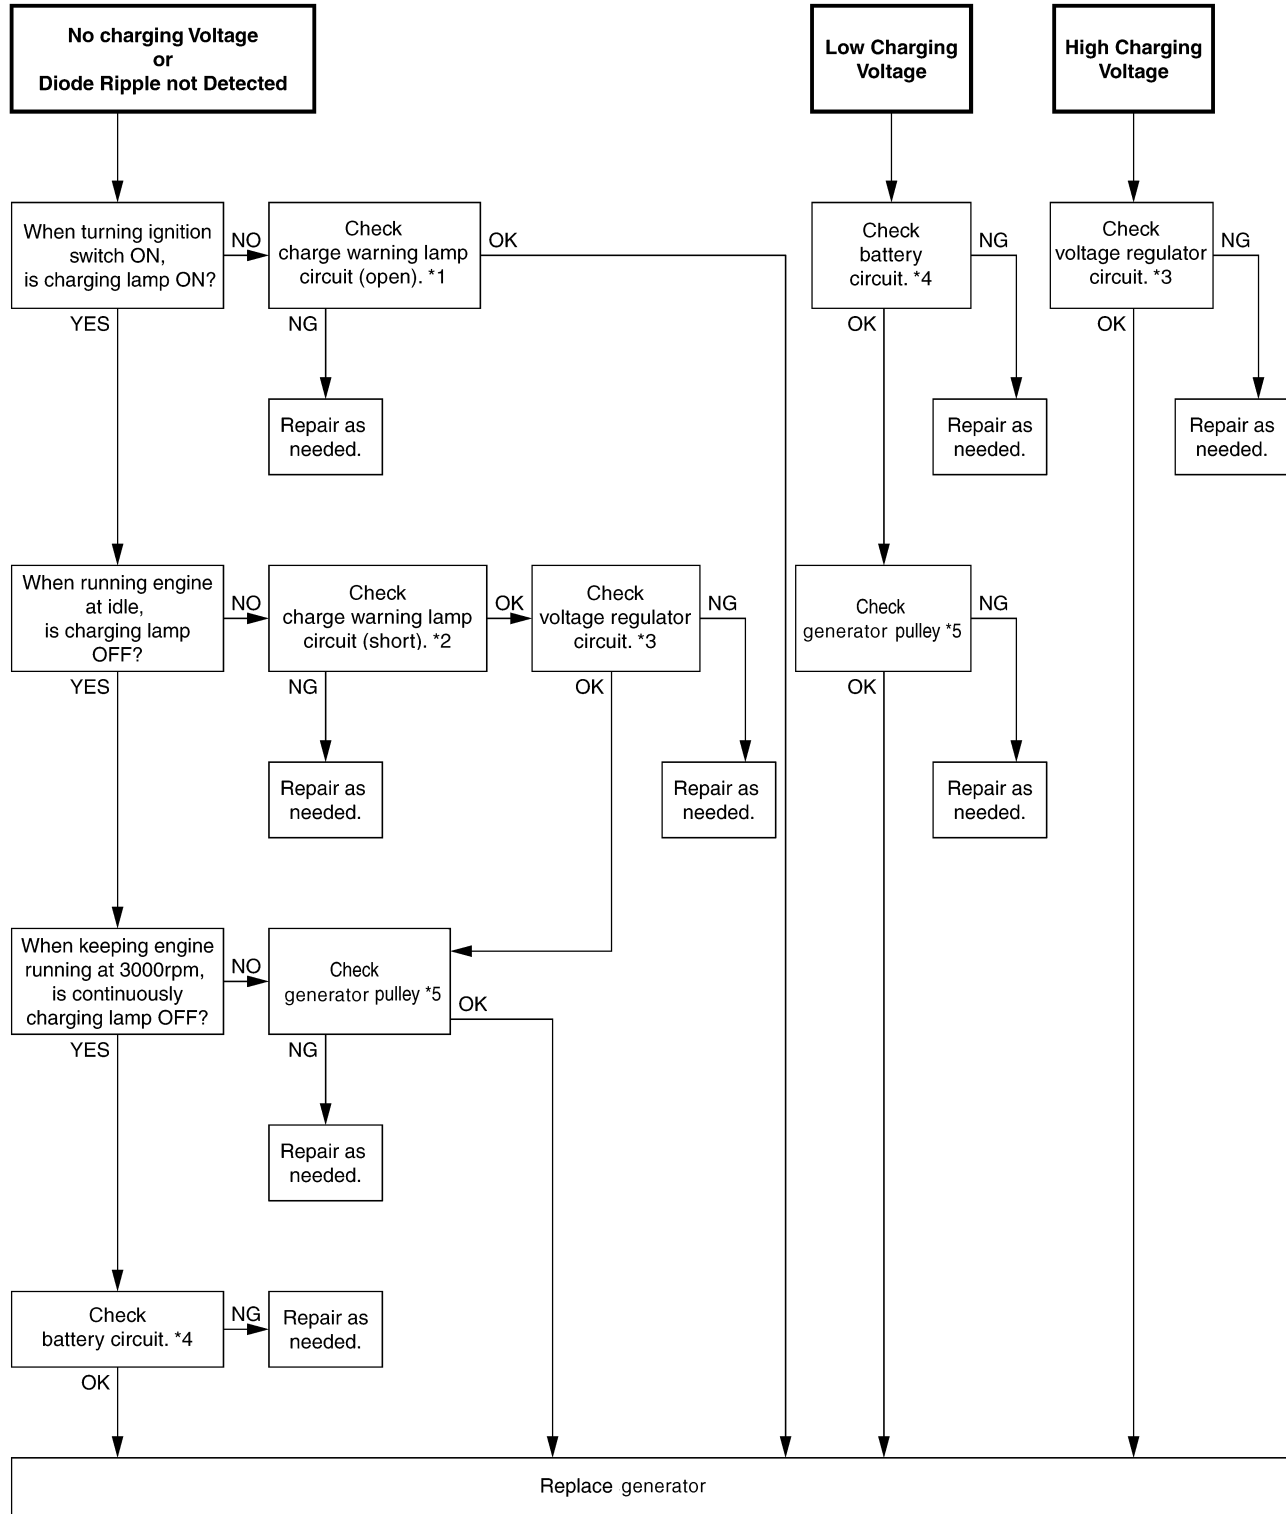

WKIA3717E

*1 [SC-32. "DIAGNOSTIC PROCEDURE 1"](#)

*4 [SC-35. "DIAGNOSTIC PROCEDURE 4"](#)

*2 [SC-35. "DIAGNOSTIC PROCEDURE 4"](#)

*5 [SC-38. "GENERATOR PULLEY INSPECTION" \(QR25DE\)](#)
[SC-39. "GENERATOR PULLEY INSPECTION" \(VQ40DE\)](#)

*3 [SC-33. "DIAGNOSTIC PROCEDURE 2"](#)

CHARGING SYSTEM

PRELIMINARY INSPECTION

1. CHECK BATTERY TERMINALS CONNECTION

Check if battery terminals are clean and tight.

OK or NG

OK >> GO TO 2.

NG >> Repair battery terminal connections.

2. CHECK FUSE AND FUSIBLE LINK

Check for blown fuses and fusible link. Refer to [PG-93, "FUSE AND FUSIBLE LINK BOX"](#) .

| Unit | Power source (Power supply terminals) | Fuse or fusible link |
|-------------------|---------------------------------------|----------------------|
| Generator | Battery ("1" terminal) | a |
| | Battery ("3" terminal) | 30 |
| Combination meter | Ignition switch ON ("2" terminal) | 14 |

OK or NG

OK >> GO TO 3.

NG >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse.

3. CHECK GENERATOR DRIVE BELT TENSION

Check generator drive belt tension. Refer to [EM-14, "Checking Drive Belt"](#) (QR25DE models) or [EM-124, "Checking Drive Belts"](#) (VQ40DE models).

OK or NG

OK >> Inspection End.

NG >> Repair as needed.

DIAGNOSTIC PROCEDURE 1

Check Charge Warning Lamp Circuit (Open)

1. CHECK CHARGE WARNING LAMP CIRCUIT CONNECTION

1. Turn the ignition switch OFF.
2. Check terminal 2 harness connector.

OK or NG

OK >> GO TO 2.

NG >> Repair terminal 2 connection. Confirm repair by performing complete Battery/Starting/Charging system test. Refer to [SC-28, "Trouble Diagnoses with Battery/Starting/Charging System Tester"](#) .

2. CHECK CHARGE WARNING LAMP CIRCUIT (OPEN)

1. Disconnect E205 connector from generator.
2. Apply ground to connector E205 terminal 2 with the ignition switch in the ON position.


CHARGE lamp should light up.

OK or NG

OK >> GO TO [SC-31, "WORK FLOW"](#) .

NG >> Check the following.

- Charge warning lamp (Combination meter)
- Harness for open or short between combination meter and fuse
- Harness for open between combination meter and generator

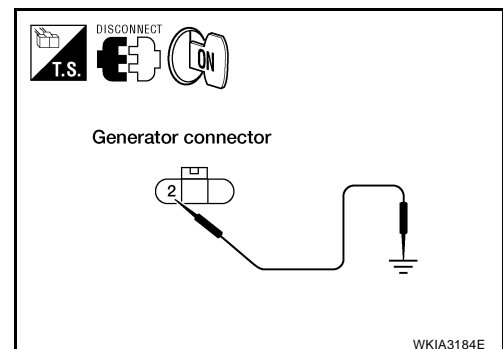

CHARGING SYSTEM

DIAGNOSTIC PROCEDURE 2

Check Charge Warning lamp Circuit (Short)

1. CHECK CHARGE WARNING LAMP CIRCUIT (SHORT)

1. Turn the ignition switch OFF.
2. Disconnect generator connector E205.
3. Turn ignition switch ON.

Does charge warning lamp light up?

YES >> Check the following.

- Harness for short between combination meter and generator
- Charge warning lamp (Combination meter)

NO >> GO TO [SC-31, "WORK FLOW"](#) .

A

B

C

D

E

F

G

H

I

J

SC

L

M

CHARGING SYSTEM

DIAGNOSTIC PROCEDURE 3

Check Voltage Regulator Circuit

1. CHECK VOLTAGE REGULATOR CIRCUIT CONNECTION

1. Turn the ignition switch OFF.
2. Check terminal 3 harness connector.

OK or NG

OK >> GO TO 2.

NG >> Repair terminal 3 connection. Confirm repair by performing complete Battery/Starting/Charging system test. Refer to [SC-28, "Trouble Diagnoses with Battery/Starting/Charging System Tester"](#) .

2. CHECK VOLTAGE REGULATOR CIRCUIT


Check voltage between generator connector E205 terminal 3 and ground using a digital circuit tester.

Battery voltage should exist.

OK or NG

OK >> GO TO [SC-31, "WORK FLOW"](#) .

NG >> Check harness for open between generator and fuse.

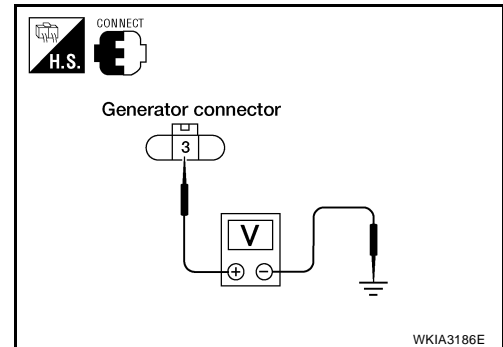

CHARGING SYSTEM

DIAGNOSTIC PROCEDURE 4

Check Battery Circuit

1. CHECK BATTERY CIRCUIT CONNECTION

1. Turn the ignition switch OFF.
2. Check to see if terminal 1 is clean and tight.

OK or NG

OK >> GO TO 2.

NG >> Repair terminal 1 connection. Confirm repair by performing complete Battery/Starting/Charging system test. Refer to [SC-28, "Trouble Diagnoses with Battery/Starting/Charging System Tester"](#) .

2. CHECK BATTERY CIRCUIT


Check voltage between generator connector E206 terminal 1 and ground using a digital circuit tester.

Battery voltage should exist.

OK or NG

OK >> GO TO 3.

NG >> Check harness for open between generator and fusible link.

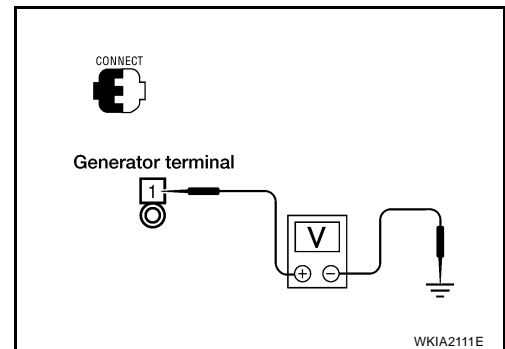

3. CHECK VOLTAGE DROP ON BATTERY CIRCUIT


1. Start engine.
2. While engine is running at idle and warm, check voltage between generator connector E206 terminal 1 and battery positive terminal using a digital circuit tester.

With engine running : Less than 0.2V at idle and warm.

OK or NG

OK >> GO TO [SC-31, "WORK FLOW"](#) .

NG >> Check harness between the battery and the generator for poor continuity.

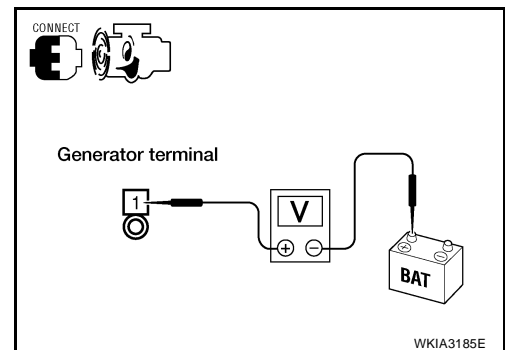

CHARGING SYSTEM

EKS00D6N

Power Generation Variable Voltage Control System Inspection

CAUTION:

- For this model, the battery current sensor that is installed to the negative battery cable measures the charging/discharging current of the battery and performs various engine controls. If an electrical component is connected directly to the negative battery terminal, the current flowing through that component will not be measured by the battery current sensor. This condition may cause a malfunction of the engine control system and battery discharge may occur. Do not connect an electrical component or ground wire directly to the battery terminal.
- When performing this inspection, always use the charged battery that completed the battery inspection. When the charging rate of the battery is low, the response speed of the voltage change will become slow. This is a cause of an incorrect inspection.

INSPECTION PROCEDURE

1. CHECK SELF-DIAGNOSIS OF ECM

CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunction might be detected in self-diagnosis depending on control unit which carries out CAN communication.

Perform ECM self-diagnosis with CONSULT-II.

Self-diagnostic results content

No malfunction detected>>GO TO 2.

Malfunction detected>>Check applicable parts, and repair or replace corresponding parts.

2. CHECK POWER GENERATION VARIABLE VOLTAGE CONTROL SYSTEM OPERATION

- Connect CONSULT-II and CONSULT-II CONVERTER and start the engine.
- Put selector lever in "P" or "N" position (A/T models) and turn all electric loads including A/C OFF.
- Select "ALT DUTY" at "ACTIVE TEST" of "ENGINE", and then check the value of "BATTERY VOLT" when "ALTERNATOR DUTY" is set to 40 %.

"BATTERY VOLT"
seconds after setting "ALTERNATOR DUTY" to 40% **12.0 V - 13.6 V**

Example)

| | | | |
|-----------------|--------|-------|------|
| ACTIVE TEST | | | |
| ALTERNATOR DUTY | 40.0 % | | |
| MONITOR | | | |
| BATTERY VOLT | 12.3V | | |
| BAT CUR SEN | 2190mV | | |
| | | | |
| | | | |
| | | | |
| | | | |
| Qu | UP | DOWN | Qd |
| | | | |
| MODE | BACK | LIGHT | COPY |

PKIB4503E

- Check the value of "BATTERY VOLT" when "ALTERNATOR DUTY" is set to 80%.

"BATTERY VOLT"
20 seconds after setting "ALTERNATOR DUTY" to 80% **0.5 V or more than the value of "BATTERY VOLT" when "ALTERNATOR DUTY" was 40%**

Example)

| | | | |
|-----------------|--------|-------|------|
| ACTIVE TEST | | | |
| ALTERNATOR DUTY | 80.0 % | | |
| MONITOR | | | |
| BATTERY VOLT | 14.5V | | |
| BAT CUR SEN | 2780mV | | |
| | | | |
| | | | |
| | | | |
| | | | |
| Qu | UP | DOWN | Qd |
| | | | |
| MODE | BACK | LIGHT | COPY |

PKIB4504E

OK or NG

- OK >> Inspection End.
 NG >> GO TO 3. (The charging condition of the battery should be normal.)

CHARGING SYSTEM

3. CHECK SELF-DIAGNOSIS OF IPDM E/R

Perform IPDM E/R self-diagnosis with CONSULT-II.

Self-diagnostic results content

No malfunction detected>>GO TO 4.

Malfunction detected>>Check applicable parts, and repair or replace corresponding parts.

4. CHECK HARNESS BETWEEN IPDM AND GENERATOR

1. Disconnect generator connector E205 and IPDM E/R connector E122.

2. Check continuity between generator harness connector E205 terminal 4 and IPDM E/R harness connector E122 terminal 37.

4 – 37 **Continuity should exist.**


3. Check continuity between generator harness connector E205 terminal 4 and ground.

4 – Ground **Continuity should not exist.**

OK or NG

OK >> Replace IPDM E/R. Refer to [PG-32, "Removal and Installation of IPDM E/R"](#) .

NG >> Repair harness or connector between IPDM E/R and generator.

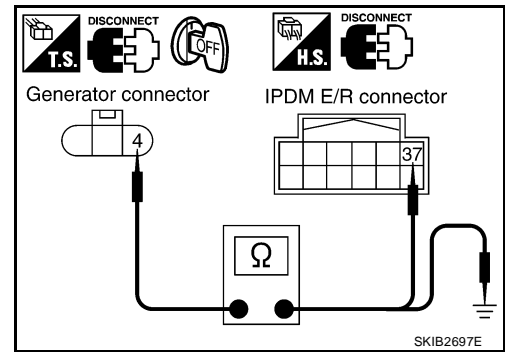


A
B
C
D
E
F
G
H
I
J
SC
L
M

CHARGING SYSTEM

Removal and Installation — QR25DE Models

EKS00D60

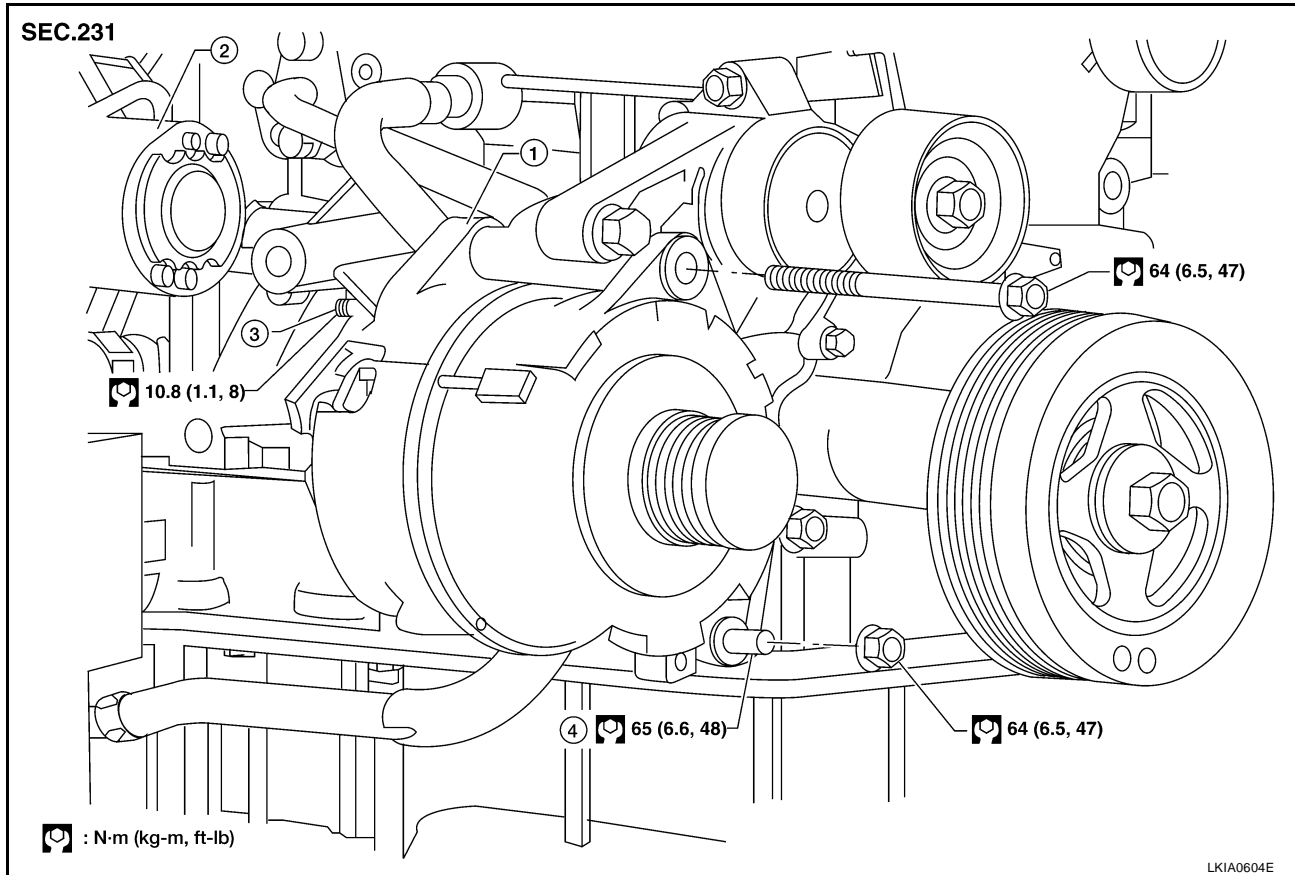

1. Generator
2. Starter motor assembly
3. Terminal "1"
4. Generator lower stud

REMOVAL

1. Disconnect the negative battery terminal.
2. Remove the fan shroud. Refer to [CO-15, "Removal and Installation"](#).
3. Remove the drive belt. Refer to [EM-14, "Removal and Installation"](#).
4. Disconnect the generator harness connectors.
5. Remove generator mounting nut, using power tools.
6. Remove the generator upper bolt, using power tools.
7. Remove the generator.

GENERATOR PULLEY INSPECTION

Perform the following.

- Make sure that the generator pulley does not rattle.
- Make sure that the generator pulley nut is properly tightened.

Generator pulley nut : 118 N-m (12.0 kg-m, 87 ft-lb)

INSTALLATION

Installation is in the reverse order of removal.

- Be sure the generator spacer is in place on the lower stud.
- Install the generator and check tension of drive belt. Refer to [EM-14, "Tension Adjustment"](#).

Terminal "1" nut : 10.8 N-m (1.1 kg-m, 8 ft-lb)

CAUTION:


Be sure to tighten terminal "1" nut carefully.

CHARGING SYSTEM

- For this model, the power generation voltage variable control system that controls the power generation voltage of the generator has been adopted. Therefore, the power generation voltage variable control system operation inspection should be performed after replacing the generator, and then make sure that the system operates normally. Refer to [SC-36, "Power Generation Variable Voltage Control System Inspection"](#).

Removal and Installation — VQ40DE Models

EKS00B0E

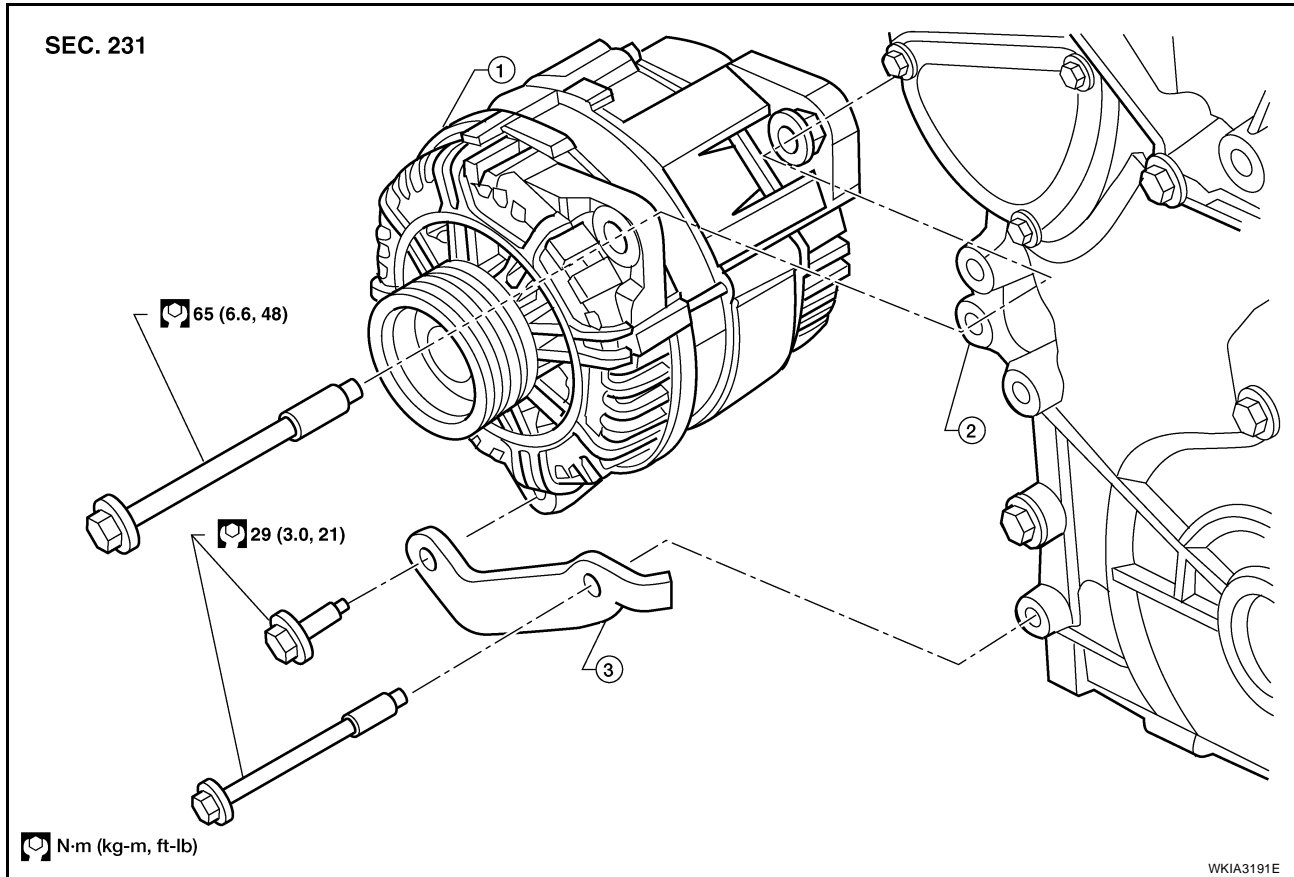

1. Generator

2. Engine block

3. Generator stay

REMOVAL

- Disconnect the negative battery terminal.
- Remove the fan shroud. Refer to [CO-42, "Removal and Installation"](#).
- Remove the drive belt. Refer to [EM-124, "Removal and Installation"](#).
- Remove generator stay, using power tools.
- Remove the generator upper bolt, using power tools.
- Disconnect the generator harness connectors.
- Remove the generator.

GENERATOR PULLEY INSPECTION

Perform the following.

- Make sure that the generator pulley does not rattle.
- Make sure that the generator pulley nut is properly tightened.

Generator pulley nut : 118 N-m (12.0 kg-m, 87 ft-lb)

INSTALLATION

Installation is in the reverse order of removal.

- Install the generator and check tension of drive belt. Refer to [EM-124, "Tension Adjustment"](#).

Terminal "1" nut : 10.8 N-m (1.1 kg-m, 8 ft-lb)

CHARGING SYSTEM

CAUTION:

Be sure to tighten terminal "1" nut carefully.

- For this model, the power generation voltage variable control system that controls the power generation voltage of the generator has been adopted. Therefore, the power generation voltage variable control system operation inspection should be performed after replacing the generator, and then make sure that the system operates normally. Refer to [SC-36, "Power Generation Variable Voltage Control System Inspection"](#) .

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

PFP:00030

Battery

EKS00BOF

| | | |
|--|--------|--------|
| Application (Standard battery) | VQ40DE | QR25DE |
| Type | Gr. 24 | |
| Capacity (20 HR) minimum V-AH | 72 | 63 |
| Cold cranking current A (For reference value) | 550 | |

Starter

EKS00BOG

| | | |
|--|--|---------------------|
| Application | All models | |
| Manufacturer | Mitsubishi M002T85571ZCKD | |
| Type | Reduction gear type | |
| System voltage | 12V | |
| No-load | Terminal voltage | 11V |
| | Current | Less than 145A |
| | Revolution | More than 3,300 rpm |
| Minimum diameter of commutator | 31.4 mm (1.236 in) | |
| Minimum length of brush | 11.0 mm (0.433 in) | |
| Brush spring tension | 26.7-36.1 N (2.72 - 3.68 kg, 5.93 - 8.02 lb) | |
| Clearance between pinion front edge and pinion stopper | 0.5 - 2.0 mm (0.020 - 0.079 in) | |

Generator

EKS00BOH

| | |
|---|--|
| Type | LR1110-725 |
| | Hitachi |
| Nominal rating | 12V-110A |
| Ground polarity | Negative |
| Minimum revolution under no-load (When 13.5 volts is applied) | 1,100 rpm |
| Hot output current (When 13.5 volts is applied) | More than 70A/1,800 rpm More than 91A/2,500 rpm More than 110A/5,000 rpm |
| Regulated output voltage | 14.1 - 14.7V @ 25°C |
| Minimum length of brush | 6 mm (0.24 in) |
| Brush spring pressure | 1.0 - 3.432 N (0.102 - 0.3501 kg, 0.22 - 0.7715 lbs) |
| Slip ring minimum outer diameter | 26 mm (1.02 in) |
| Rotor (Field coil) resistance | 2.1 ohms |

SERVICE DATA AND SPECIFICATIONS (SDS)
