

A
EM
C
D
E
F
G
H
I
J
K
L
M

SECTION **EM**

ENGINE MECHANICAL

CONTENTS

PRECAUTIONS	3	EGR VOLUME CONTROL VALVE	21
Precautions for Drain Coolant	3	Removal and Installation	21
Precautions for Disconnecting Fuel Piping	3	REMOVAL	22
Precautions for Removal and Disassembly	3	INSTALLATION	22
Precautions for Inspection, Repair and Replacement	3	INTAKE MANIFOLD	24
Precautions for Assembly and Installation	3	Removal and Installation	24
Parts Requiring Angular Tightening	3	REMOVAL	24
Precautions for Liquid Gasket	4	INSPECTION AFTER REMOVAL	25
REMOVAL OF LIQUID GASKET SEALING	4	INSTALLATION	25
LIQUID GASKET APPLICATION PROCEDURE.....	4	EXHAUST MANIFOLD AND THREE WAY CATALYST	26
PREPARATION	5	Removal and Installation	26
Special Service Tools	5	REMOVAL	27
Commercial Service Tools	8	INSPECTION AFTER REMOVAL	28
NOISE, VIBRATION, AND HARSHNESS (NVH)		INSTALLATION	28
TROUBLESHOOTING	10	OIL PAN AND OIL STRAINER	30
NVH Troubleshooting — Engine Noise	10	Removal and Installation	30
Use the Chart Below to Help You Find the Cause of the Symptom.	11	REMOVAL	30
DRIVE BELTS	12	INSPECTION AFTER REMOVAL	33
Checking Drive Belts	12	INSTALLATION	33
Tension Adjustment	12	INSPECTION AFTER INSTALLATION	35
GENERATOR AND AIR CONDITIONER COMPRESSOR BELT	13	IGNITION COIL	36
POWER STEERING OIL PUMP BELT	14	Removal and Installation	36
Removal and Installation	14	REMOVAL	36
REMOVAL	14	INSTALLATION	36
INSTALLATION	14	SPARK PLUG (PLATINUM-TIPPED TYPE)	37
AIR CLEANER AND AIR DUCT	15	Removal and Installation	37
Removal and Installation	15	REMOVAL	37
REMOVAL	15	INSPECTION AFTER REMOVAL	37
INSTALLATION	16	INSTALLATION	38
CHANGING AIR CLEANER FILTER	16	FUEL INJECTOR AND FUEL TUBE	39
INTAKE MANIFOLD COLLECTOR	17	Removal and Installation	39
Removal and Installation	17	REMOVAL	39
REMOVAL	18	INSTALLATION	40
INSTALLATION	19	INSPECTION AFTER INSTALLATION	40
		ROCKER COVER	42
		Removal and Installation	42
		REMOVAL	42
		INSTALLATION	43

FRONT TIMING CHAIN CASE	45	How to Select Piston and Bearing	133
Removal and Installation	45	DESCRIPTION	133
REMOVAL	46	HOW TO SELECT A PISTON	133
INSTALLATION	52	HOW TO SELECT CONNECTING ROD BEARINGS	134
TIMING CHAIN	56	HOW TO SELECT MAIN BEARINGS	135
Removal and Installation	56	Inspection After Disassembly	138
REMOVAL	57	CRANKSHAFT END PLAY	138
INSPECTION AFTER REMOVAL	66	CONNECTING ROD SIDE CLEARANCE	138
INSTALLATION	67	PISTON AND PISTON PIN CLEARANCE	138
CAMSHAFT	80	PISTON RING SIDE CLEARANCE	139
Removal and Installation	80	PISTON RING END GAP	139
REMOVAL	81	CONNECTING ROD BEND AND TORSION	140
INSTALLATION	82	CONNECTING ROD BEARING HOUSING	
INSPECTION AFTER REMOVAL	86	DIAMETER (BIG END)	140
INSPECTION AFTER INSTALLATION	88	CONNECTING ROD BUSHING OIL CLEARANCE (SMALL END)	140
INSPECTION OF CAMSHAFT SPROCKET (INT) OIL GROOVE	88	CYLINDER BLOCK DISTORTION	141
Valve Clearance	89	INNER DIAMETER OF MAIN BEARING HOUSING	142
CHECKING	89	PISTON-TO-CYLINDER BORE CLEARANCE ..	142
VALVE ADJUSTING	92	OUTER DIAMETER OF CRANKSHAFT JOURNAL	144
OIL SEAL	93	OUTER DIAMETER OF CRANKSHAFT PIN ...	144
Removal and Installation of Valve Oil Seal	93	OUT-OF-ROUND AND TAPER OF CRANKSHAFT	144
REMOVAL	93	CRANKSHAFT RUNOUT	144
INSTALLATION	93	OIL CLEARANCE OF CONNECTING ROD BEARING	144
Removal and Installation of Front Oil Seal	93	OIL CLEARANCE OF MAIN BEARING	145
REMOVAL	93	CRUSH HEIGHT OF MAIN BEARING	146
INSTALLATION	95	CRUSH HEIGHT OF CONNECTING ROD BEARING	146
Removal and Installation of Rear Oil Seal	97	OUTER DIAMETER OF MAIN BEARING CAP	
REMOVAL	97	BOLTS	146
INSTALLATION	97	OUTER DIAMETER OF CONNECTING ROD	
CYLINDER HEAD	99	BOLTS	147
On-Vehicle Service	99	DRIVE PLATE RUNOUT (A/T)	147
CHECKING COMPRESSION PRESSURE	99	FLYWHEEL RUNOUT (M/T)	147
Removal and Installation	100	OIL JET	148
REMOVAL	100	OIL JET RELIEF VALVE	148
INSPECTION AFTER REMOVAL	102	SERVICE DATA AND SPECIFICATIONS (SDS) ...	149
INSTALLATION	102	Standard and Limit	149
Disassembly and Assembly	109	GENERAL SPECIFICATIONS	149
DISASSEMBLY	110	DRIVE BELT	150
Inspection After Disassembly	111	INTAKE MANIFOLD COLLECTOR, INTAKE	
CYLINDER HEAD DISTORTION	111	MANIFOLD AND EXHAUST MANIFOLD	150
VALVE DIMENSIONS	111	SPARK PLUG	150
VALVE GUIDE CLEARANCE	111	CYLINDER HEAD	151
VALVE GUIDE REPLACEMENT	112	VALVE	151
VALVE SEAT CONTACT	113	CAMSHAFT AND CAMSHAFT BEARING	155
VALVE SEAT REPLACEMENT	113	CYLINDER BLOCK	155
VALVE SPRING SQUARENESS	114	PISTON, PISTON RING AND PISTON PIN	156
VALVE SPRING DIMENSIONS AND VALVE		CONNECTING ROD	157
SPRING PRESSURE LOAD	114	CRANKSHAFT	158
ASSEMBLY	114	AVAILABLE MAIN BEARING	159
ENGINE ASSEMBLY	116	CONNECTING ROD BEARING	159
Removal and Installation	116	MISCELLANEOUS COMPONENTS	160
REMOVAL	116	BEARING CLEARANCE	160
INSTALLATION	118		
INSPECTION AFTER INSTALLATION	120		
CYLINDER BLOCK	121		
Disassembly and Assembly	121		
DISASSEMBLY	122		
ASSEMBLY	126		

PRECAUTIONS

PRECAUTIONS

PFP:00001

Precautions for Drain Coolant

EBS00F2I

- Drain coolant when engine is cooled.

Precautions for Disconnecting Fuel Piping

EBS00F2J

- Before starting work, make sure no fire or spark producing items are in the work area.
- Release fuel pressure before disassembly.
- After disconnecting pipes, plug openings to stop fuel leakage.

Precautions for Removal and Disassembly

EBS00F2K

- When instructed to use special service tools, use the specified tools. Always be careful to work safely, avoid forceful or uninstructed operations.
- Exercise maximum care to avoid damage to mating or sliding surfaces.
- Cover openings of engine system with tape or the equivalent, if necessary, to seal out foreign materials.
- Mark and arrange disassembly parts in an organized way for easy troubleshooting and assembly.
- When loosening nuts and bolts, as a basic rule, start with the one furthest outside, then the one diagonally opposite, and so on. If the order of loosening is specified, do exactly as specified. Power tools may be used where noted in the step.

Precautions for Inspection, Repair and Replacement

EBS00F2L

- Before repairing or replacing, thoroughly inspect parts. Inspect new replacement parts in the same way, and replace if necessary.

Precautions for Assembly and Installation

EBS00F2M

- Use torque wrench to tighten bolts or nuts to specification.
- When tightening nuts and bolts, as a basic rule, equally tighten in several different steps starting with the ones in center, then ones on inside and outside diagonally in this order. If the order of tightening is specified, do exactly as specified.
- Replace with new gasket, packing, oil seal or O-ring.
- Thoroughly wash, clean, and air-blow each part. Carefully check oil or coolant passages for any restriction and blockage.
- Avoid damaging sliding or mating surfaces. Completely remove foreign materials such as cloth lint or dust. Before assembly, oil sliding surfaces well.
- Release air within route after draining coolant.
- Before starting engine, apply fuel pressure to fuel lines with turning ignition switch ON (with engine stopped). Then make sure that there are no leaks at fuel line connections.
- After repairing, start engine and increase engine speed to check coolant, fuel, oil, and exhaust systems for leakage.

Parts Requiring Angular Tightening

EBS00F2N

- Use an angle wrench for the final tightening of the following engine parts:
 - Cylinder head bolts
 - Main bearing cap bolts
 - Connecting rod cap nuts
 - Crankshaft pulley bolt (No angle wrench is required as the bolt flange is provided with notches for angular tightening)
- Do not use a torque value for final tightening.
- The torque value for these parts are for a preliminary step.
- Ensure thread and seat surfaces are clean and coated with engine oil.

PRECAUTIONS

EBS00F20

Precautions for Liquid Gasket REMOVAL OF LIQUID GASKET SEALING

- After removing the mounting bolts and nuts, separate the mating surface using Tool and remove the liquid gasket sealing.

Tool number : KV10111100 (J-37228)


CAUTION:

Be careful not to damage the mating surfaces.

- In areas where the cutter is difficult to use, use a plastic hammer to lightly tap (1) the cutter where the Silicone RTV Sealant is applied. Use a plastic hammer to slide the cutter (2) by tapping on the side.

CAUTION:


If for some unavoidable reason a tool such as a flat-bladed screwdriver is used, be careful not to damage the mating surfaces.

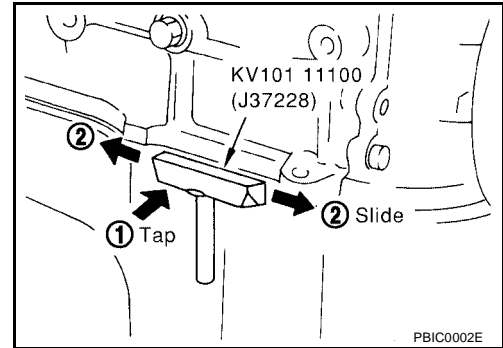

PBIC0002E

LIQUID GASKET APPLICATION PROCEDURE

- Using a scraper, remove the old Silicone RTV Sealant adhering to the gasket application surface and the mating surface.
 - Remove the sealant completely from the groove of the gasket application surface, mounting bolts, and bolt holes.
- Thoroughly clean the gasket application surface and the mating surface and remove adhering moisture, grease and foreign materials.
- Attach the sealant tube to the tube presser.
Use Genuine Silicone RTV Sealant or equivalent. Refer to [GI-43, "RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS"](#).

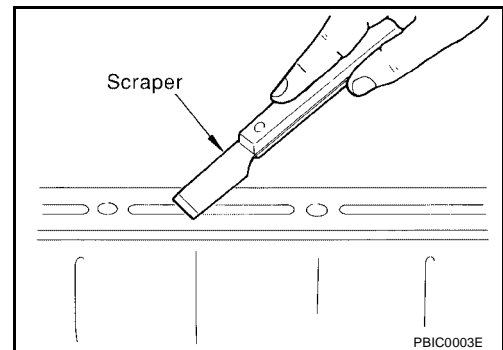


PBIC0003E

- Apply the sealant using Tool without breaks to the specified location.

Tool number : WS39930000 (—)


- If there is a groove for the sealant application, apply the sealant to the groove.
- As for the bolt holes, normally apply the sealant inside the holes. If specified, it should be applied outside the holes. Make sure to read the text of this manual.
- Within five minutes of the sealant application, install the mating component.
- If the sealant protrudes, wipe it off immediately.
- Do not retighten after the installation.
- After 30 minutes or more have passed from the installation, fill the engine with the specified oil and coolant. Refer to [MA-10, "RECOMMENDED FLUIDS AND LUBRICANTS"](#).

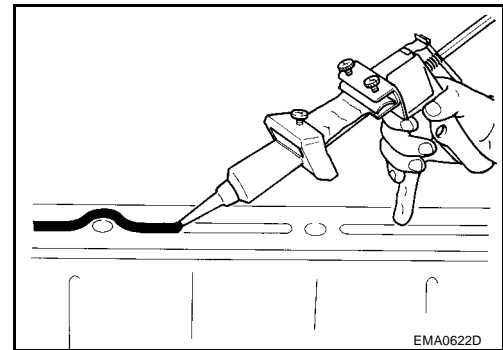

EMA0622D

CAUTION:

Follow all specific instructions in this manual.

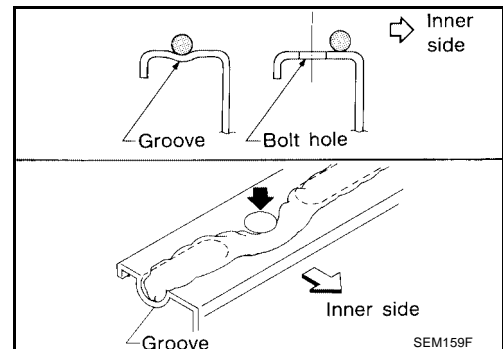

SEM159F

PREPARATION







PF0:00002

PREPARATION








Special Service Tools

EBS00F2P



The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

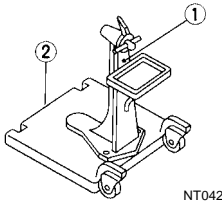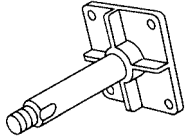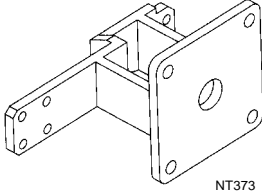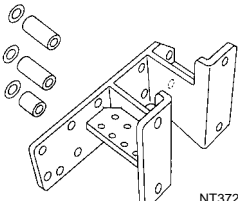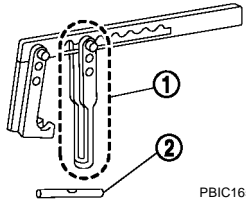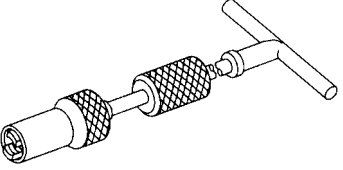Tool number (Kent-Moore No.) Tool name	Description	EM
ST0501S000 (—) Engine stand assembly 1 ST05011000 (—) Engine stand 2 ST05012000 (—) Base	 <p style="text-align: center;">NT042</p>	C
KV10106500 (—) Engine stand shaft	 <p style="text-align: center;">NT028</p>	D
KV10117000 (J-41262) Engine sub-attachment	 <p style="text-align: center;">NT373</p>	E
KV10117001 (—) Engine sub-attachment	 <p style="text-align: center;">NT372</p>	F
KV10116200 (J-26336-B) Valve spring compressor 1 KV10115900 (J-26336-20) Attachment 2 KV1019230 (—)	 <p style="text-align: center;">PBIC1650E</p>	G
KV10107902 (J-38959) Valve oil seal puller	 <p style="text-align: center;">S-NT011</p>	H

PREPARATION

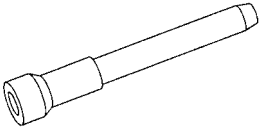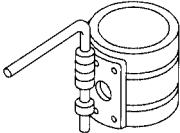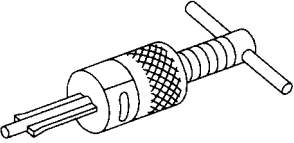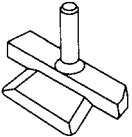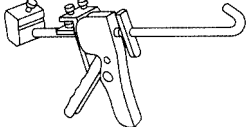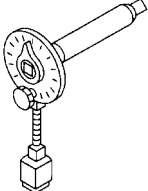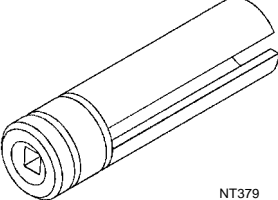Tool number (Kent-Moore No.) Tool name	Description
(J-39386) Valve oil seal drift  <p style="text-align: right; margin-right: 50px;">NT024</p>	Installing valve oil seal
EM03470000 (J-8037) Piston ring compressor  <p style="text-align: right; margin-right: 50px;">NT044</p>	Installing piston assembly into cylinder bore
ST16610001 (J-23907) Pilot bushing puller  <p style="text-align: right; margin-right: 50px;">NT045</p>	Removing crankshaft pilot bushing
KV10111100 (J-37228) Seal cutter  <p style="text-align: right; margin-right: 50px;">NT046</p>	Removing steel oil pan and rear timing chain case
WS39930000 (—) Tube presser  <p style="text-align: right; margin-right: 50px;">NT052</p>	Pressing the tube of liquid gasket
KV10112100 (BT-8653-A) Angle wrench  <p style="text-align: right; margin-right: 50px;">NT014</p>	Tightening bolts for bearing cap, cylinder head, etc.
KV10117100 (J-3647-A) Heated oxygen sensor wrench  <p style="text-align: right; margin-right: 50px;">NT379</p>	Loosening or tightening heated oxygen sensor For 22 mm (0.87 in) hexagon nut

PREPARATION

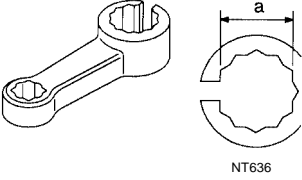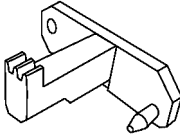Tool number (Kent-Moore No.) Tool name	Description	A
KV10114400 (J-38365) Heated oxygen sensor wrench  <p style="text-align: center;">NT636</p>	Loosening or tightening rear heated oxygen sensor a: 22 mm (0.87 in)	EM C
KV10117700 (J-44716) Ring gear stopper  <p style="text-align: center;">NT822</p>	Removing and installing crankshaft pulley	D E

EM

C

D

E

F

G

H

I

J

K








L

M




PREPARATION

Commercial Service Tools


EBS00F2Q

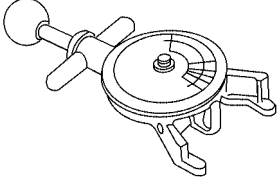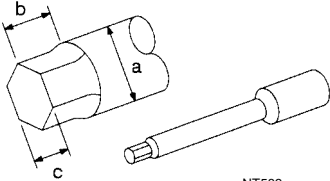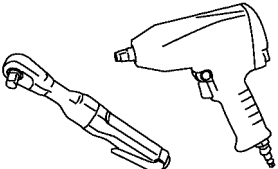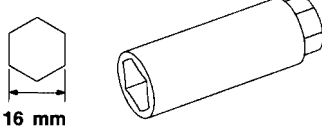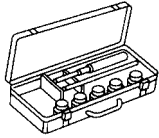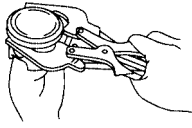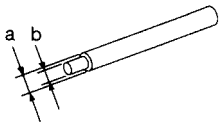(Kent-Moore No.) Tool name	Description
(BT-3373-F) Belt tension gauge  AMA126	Checking drive belt tension
(J-24239-01) Cylinder head bolt wrench  NT583	Loosening and tightening cylinder head bolt a: 13 (0.51) dia. b: 12 (0.47) c: 10 (0.39) Unit: mm (in)
Power tool  PBIC0190E	Loosening bolts and nuts
Spark plug wrench  16 mm (0.63 in) NT047	Removing and installing spark plug
Valve seat cutter set  NT048	Finishing valve seat dimensions
Piston ring expander  NT030	Removing and installing piston ring
Valve guide drift  NT015	Removing and installing valve guide Intake & Exhaust: a = 9.5 mm (0.374 in) dia. b = 5.5 mm (0.217 in) dia.

PREPARATION

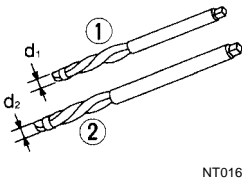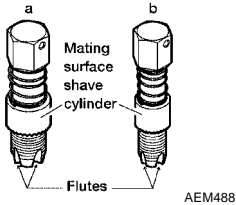(Kent-Moore No.) Tool name	Description
Valve guide reamer 	Reaming valve guide 1 or hole for oversize valve guide 2 Intake & Exhaust: d1 = 6.0 mm (0.236 in) dia. d2 = 10.2 mm (0.402 in) dia.
(J-43897-18) (J-43897-12) Oxygen sensor thread cleaner 	Reconditioning the exhaust system threads before installing a new oxygen sensor (Use with anti-seize lubricant shown below.) a: (18 mm 0.71in) for zirconia oxygen sensor b: (12 mm 0.47 in) for titania oxygen sensor
Anti-seize lubricant (Permatex 133AR or equivalent meeting MIL specification MIL-A-907) 	Lubricating oxygen sensor thread cleaning tool when reconditioning exhaust system threads

A
EM
C
D
E
F
G
H
I
J
K
L
M

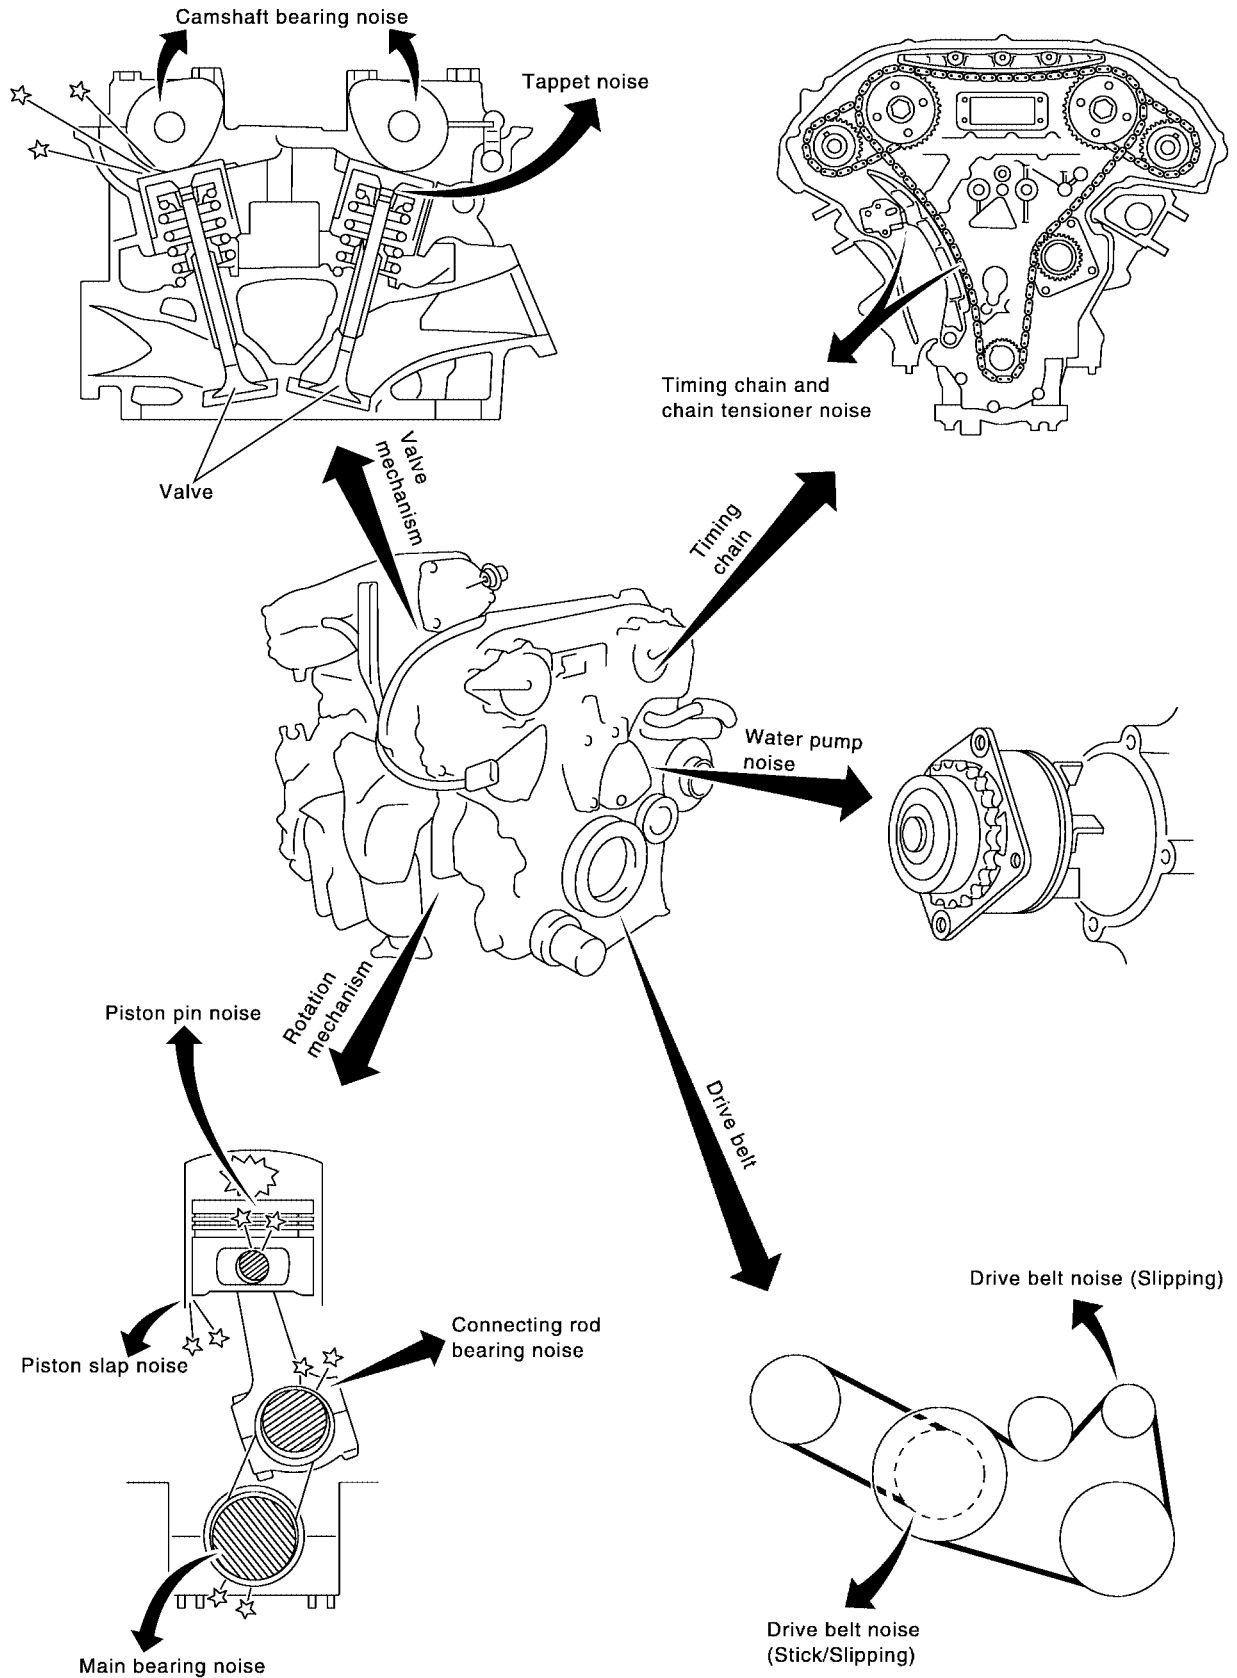

NOISE, VIBRATION, AND HARSHNESS (NVH) TROUBLESHOOTING

EBS00F2S

Use the Chart Below to Help You Find the Cause of the Symptom.

1. Locate the area where noise occurs.
2. Confirm the type of noise.
3. Specify the operating condition of engine.
4. Check specified noise source. Repair or replace the identified part as necessary.

Location of noise	Type of noise	Operating condition of engine						Source of noise	Check item	Reference page
		Before warm-up	After warm-up	When starting	When idling	When racing	While driving			
Top of engine Rocker cover Cylinder head	Ticking or clicking	C	A	—	A	B	—	Tappet noise	Valve clearance	EM-89
	Rattle	C	A	—	A	B	C	Camshaft bearing noise	Camshaft journal clearance Camshaft runout	EM-80
Crankshaft pulley Cylinder block (Side of engine) Oil pan	Slap or knock	—	A	—	B	B	—	Piston pin noise	Piston and piston pin clearance Connecting rod bushing clearance	EM-99
	Slap or rap	A	—	—	B	B	A	Piston slap noise	Piston-to-bore clearance Piston ring side clearance Piston ring end gap Connecting rod bend and torsion	EM-121
	Knock	A	B	C	B	B	B	Connecting rod bearing noise	Connecting rod bushing clearance (Small end) Connecting rod bearing clearance (Big end)	EM-121
	Knock	A	B	—	A	B	C	Main bearing noise	Main bearing oil clearance Crankshaft runout	EM-121
Front of engine Timing chain cover	Tapping or ticking	A	A	—	B	B	B	Timing chain and chain tensioner noise	Timing chain cracks and wear Timing chain tensioner operation	EM-56
Front of engine	Squeaking or fizzing	A	B	—	B	—	C	Drive belts (Sticking or slipping)	Drive belts deflection	EM-12
	Creaking	A	B	A	B	A	B	Drive belts (Slipping)	Idler pulley bearing operation	
	Squall Creak	A	B	—	B	A	B	Water pump noise	Water pump operation	CO-19

A: Closely related B: Related C: Sometimes related —: Not related

DRIVE BELTS

PF0:02117

EBS00F2T

DRIVE BELTS

Checking Drive Belts

WARNING:

Be sure to perform when the engine is not running.

1. Inspect belt for cracks, fraying, wear or oil adhesion. If necessary, replace with a new one.
2. Inspect drive belt deflections by applying 98 N (10kg, 22lb) on the belt midway between pulleys as shown.
3. Measure the belt tension using Tool at the locations shown.



Tool number : BT3373-F

NOTE:

- Inspect drive belt deflection or tension when engine is cold.
- Adjust if belt deflections exceed the limit or if belt tension is not within specifications.

CAUTION:

- **When checking belt deflection or tension immediately after installation, first adjust it to the specification value. Then, after turning the crankshaft two turns or more, readjust to the specified value to avoid variation in deflection between pulleys.**
- **Tighten idler pulley lock nut by hand and measure deflection or tension without looseness.**

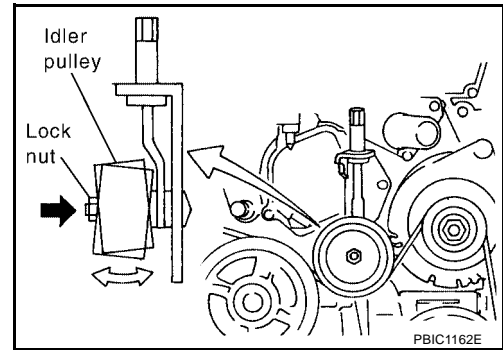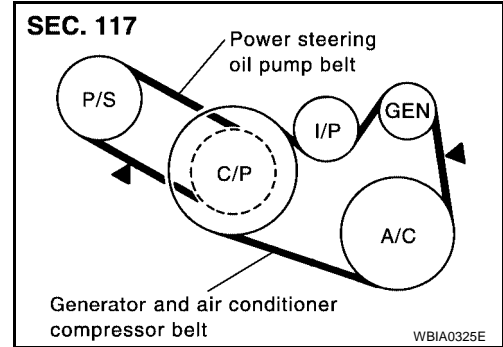

Belt Deflection and Tension

	Deflection adjustment		Unit: mm (in)	Tension adjustment*		Unit: N (kg, lb)
	Used belt		New belt	Used belt		New belt
	Limit	After adjustment		Limit	After adjustment	
Generator and air conditioning compressor	7 (0.28)	4.2 - 4.6 (0.17 - 0.18)	3.7 - 4.1 (0.15 - 0.16)	294 (30, 66)	730 - 818 (74.5 - 83.5, 164 - 184)	838 - 926 (85.5 - 94.5, 188 - 208)
Power steering pump	11 (0.43)	7.3 - 8.0 (0.29 - 0.30)	6.5 - 7.2 (0.26 - 0.28)	196 (20, 44)	495 - 583 (50.5 - 59.5, 111 - 131)	603 - 691 (61.5 - 70.5, 135.6 - 155.4)
Applied pushing force	98N (10kg, 22lb)			—		

*: If belt tension gauge cannot be installed at check points shown, check drive belt tension at different location on the belt.

Tension Adjustment

EBS00G4F

Portion	Belt tightening method for adjustment
Power steering oil pump belt	Adjusting bolt on idler pulley
Generator and air conditioner compressor belt	Adjusting bolt on idler pulley

CAUTION:

- **When belt is replace with a new one, adjust it to value for "New belt" to accommodate for insufficient adaptability with pulley grooves.**

DRIVE BELTS

- When deflection or tension of belt being used exceeds "Used belt limit" adjust it to value for "Used belt".
- When checking belt deflection or tension immediately after installation, first adjust it to the specification value. Then, after turning the crankshaft two turns or more, readjust to the specified value to avoid variation in deflection between pulleys.
- When installing belt, make sure that it is correctly engaged with pulley groove.
- Keep oil and water away from belt.
- Do not twist or bend belt excessively.


GENERATOR AND AIR CONDITIONER COMPRESSOR BELT

1. Remove engine undercover.
2. Loosen idler pulley lock nut (A) and adjust by turning adjusting bolt (B).
 - For specified belt tension, refer to [MA-12, "CHECKING DRIVE BELTS"](#).
3. Tighten lock nut (A).

Lock nut : 25.5 - 32.4 N·m (2.6 - 3.3 kg-m, 19 - 23 ft-lb)

4. Tighten adjusting bolt (B).

Adjusting bolt : 3.9 - 6.9 N·m (0.4 - 0.7 kg-m, 35 - 61 in-lb)

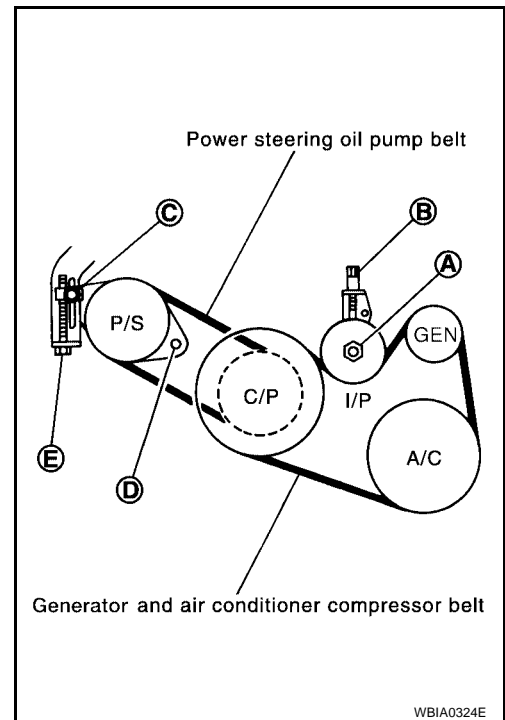

DRIVE BELTS

POWER STEERING OIL PUMP BELT

1. Remove engine undercover.
2. Loosen adjusting bolt (C).
3. Loosen power steering oil pump bolt (D).

NOTE:

Bolt head (D) is at the engine rear side.

4. Adjust by turning the adjusting bolt (E).
 - For specified belt tension, refer to [MA-12, "CHECKING DRIVE BELTS"](#).

NOTE:


Adjusting bolt (E) is loosened with counterclockwise rotation.

5. Tighten adjusting bolt (C).

Adjusting bolt : 15.5 - 18.6 N·m (1.6 - 1.8 kg·m, 12 - 13 ft·lb)

6. Tighten power steering oil pump bolt (D).

Power steering pump bolt : 36.3 - 50.0 N·m (3.7 - 5.1 kg·m, 27 - 36 ft·lb)

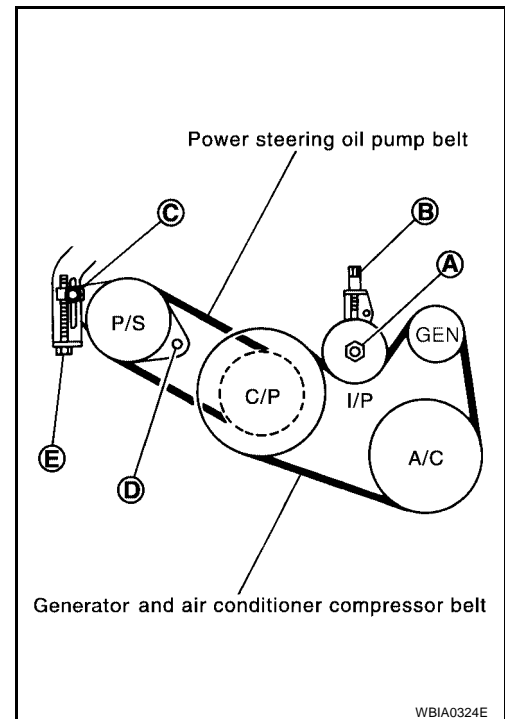

Removal and Installation

REMOVAL

1. Remove engine undercover.
2. Fully loosen each belt. Refer to [MA-14, "Power steering oil pump belt"](#). Remove generator and air conditioner compressor belt and then power steering oil pump belt.

CAUTION:

Grease is applied to idler pulley adjusting bolt. Be careful to keep grease away from the belts.

INSTALLATION

1. Installation is in the reverse order of removal.


CAUTION:

- Make sure belts are correctly engaged with the pulley groove.
 - Clean off any for oil and coolant on belts and each pulley groove.
2. Adjust belt tension. Refer to [MA-14, "Power steering oil pump belt"](#).

EBS00G4G

AIR CLEANER AND AIR DUCT

Removal and Installation

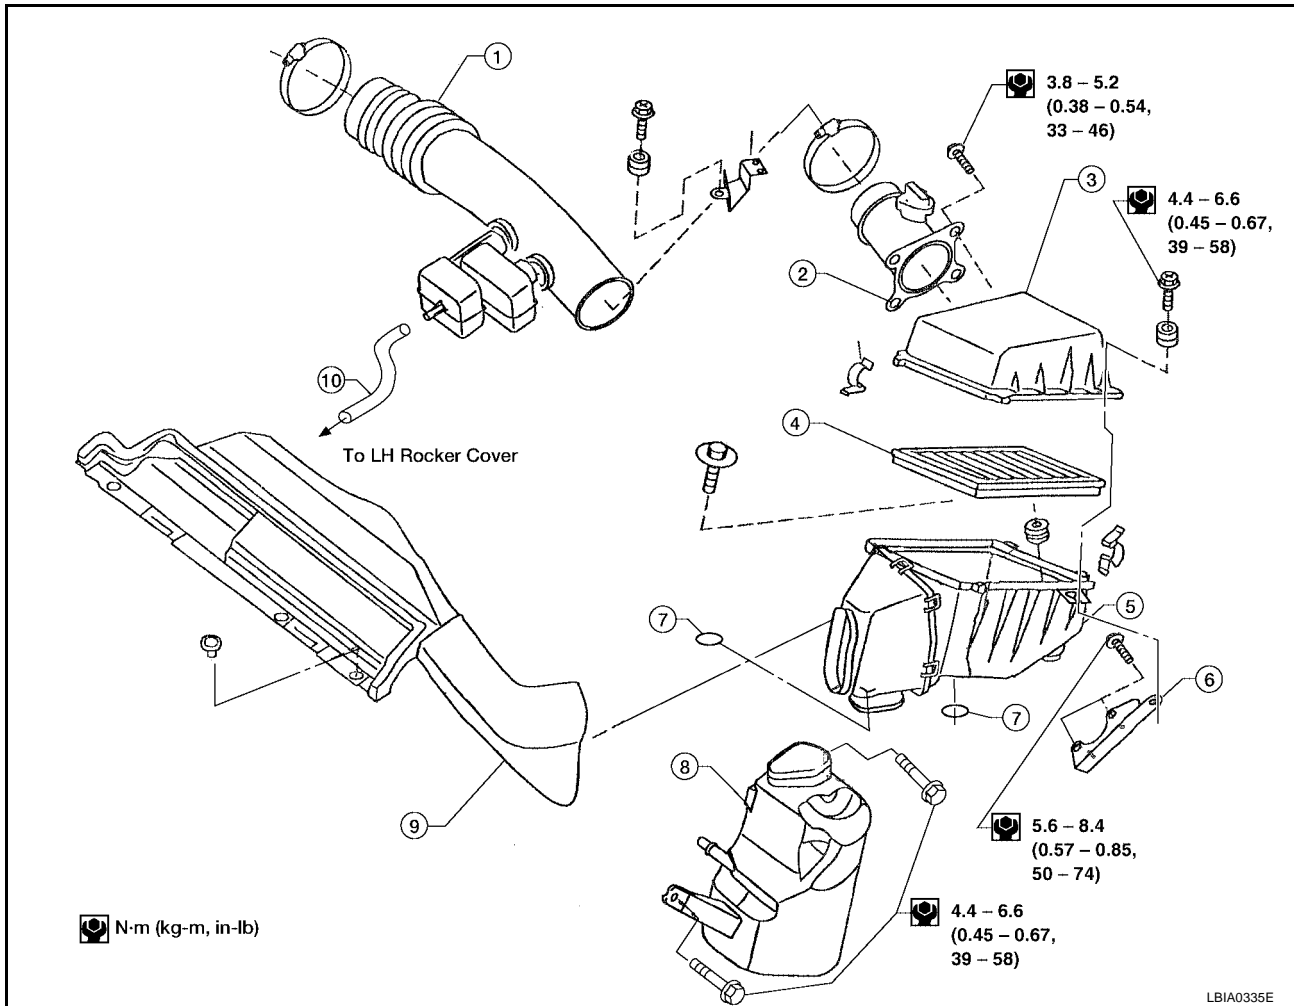

- | | | |
|---|-----------------------------|-----------------------------|
| 1. Air cleaner to electric throttle control actuator tube | 2. Mass air flow sensor | 3. Air cleaner case (upper) |
| 4. Air cleaner filter | 5. Air cleaner case (lower) | 6. Air cleaner case bracket |
| 7. Grommet | 8. Resonator (in fender) | 9. Fresh air duct |
| 10. PCV hose | | |

REMOVAL

1. Remove the grille top cover.
2. Remove the fresh air duct.
3. Disconnect the harness connector from the mass air flow sensor.
4. Disconnect the tube clamp at the electric throttle control actuator.
5. Remove air cleaner to electric throttle control actuator tube, air cleaner case (upper) with the mass air flow sensor attached.
6. Remove mass air flow sensor from air cleaner case (upper), as necessary.

CAUTION:

Handle mass air flow sensor with care.

- Do not shock it.
- Do not disassemble it.
- Do not touch its sensor.

7. Remove the air cleaner case (lower).
8. Remove resonator in the fender, lifting left fender protector, as necessary.

A
EM
C
D
E
F
G
H
I
J
K
L
M

AIR CLEANER AND AIR DUCT

INSTALLATION

Installation is in the reverse order of removal.

CHANGING AIR CLEANER FILTER

1. Disconnect the tube clamp at the electric throttle control actuator and mass air flow sensor.
2. Separate the mass air flow sensor from the air cleaner to electric throttle control actuator tube.
3. Unhook the air cleaner case side clips and remove the air cleaner case (upper).
4. Remove the air cleaner filter.
5. Install a new air cleaner filter.
6. Installation is in the reverse order of removal.


INTAKE MANIFOLD COLLECTOR

INTAKE MANIFOLD COLLECTOR

Removal and Installation

PF14010

EBS00G4I

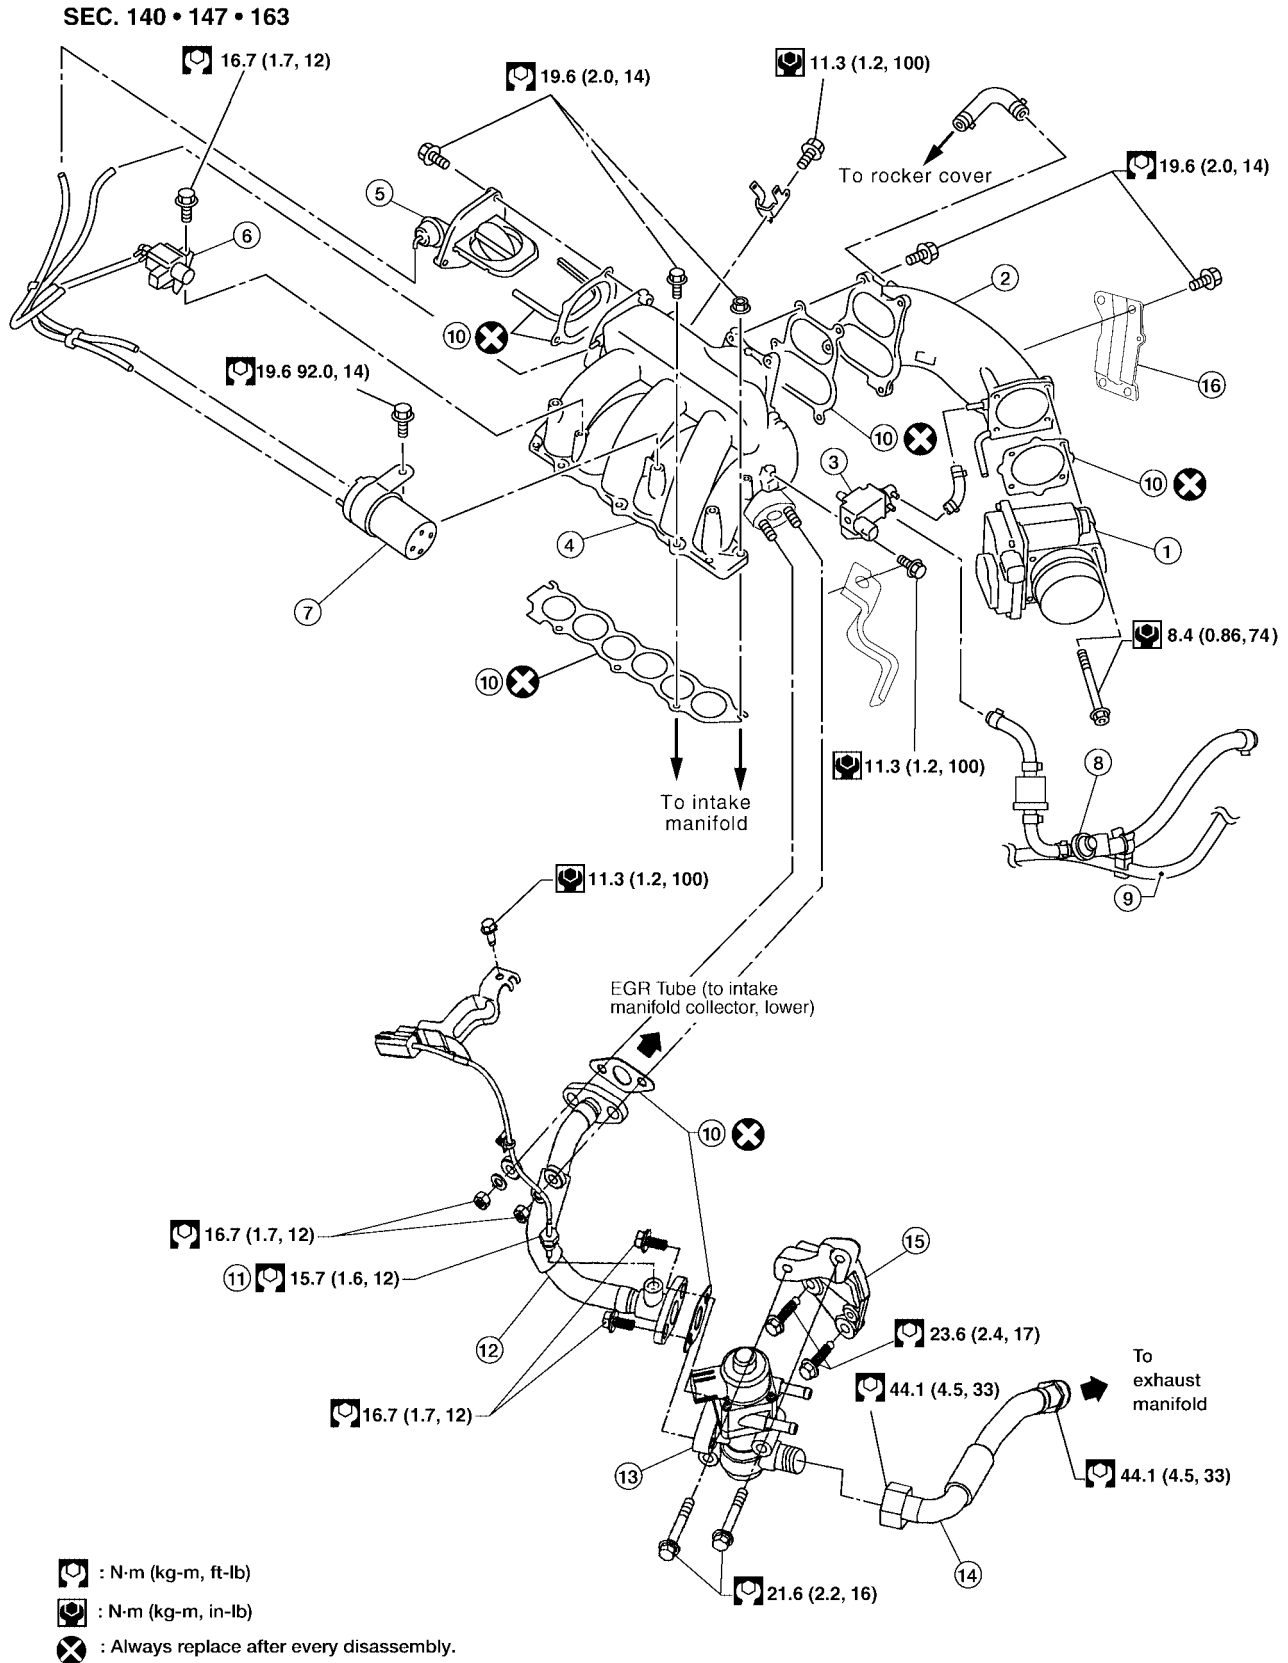

A
C
D
E
F
G
H
I
J
K
L
M

EM

WBIA0501E

INTAKE MANIFOLD COLLECTOR

- | | | |
|---|--------------------------------------|--|
| 1. Electric throttle control actuator | 2. Intake manifold collector (upper) | 3. EVAP canister purge volume control solenoid valve |
| 4. Intake manifold collector (lower) | 5. Power valve | 6. VIAS control solenoid valve |
| 7. Vacuum tank | 8. Service port | 9. Fuel hose |
| 10. Gasket | 11. EGR temperature sensor | 12. EGR tube (to lower intake manifold collector) |
| 13. EGR volume control valve | 14. EGR tube (to exhaust manifold) | 15. EGR volume control valve bracket |
| 16. Intake manifold collector (lower) support bracket | | |

REMOVAL


WARNING:

- To avoid the danger of being scalded, never drain the coolant when the engine is hot.
- The gasket for intake manifold collector (upper) is secured together with intake manifold collector (lower) bolt. Thus, when replacing only the upper gasket the lower gasket must also be replaced.

1. Remove the cowl top. Refer to [EI-19, "Removal and Installation"](#).
2. Remove the windshield wiper assembly. Refer to [WW-26, "Removal and Installation for Wiper Motor and Linkage"](#).
3. Remove the engine cover using power tool.
4. Remove air cleaner case lid and mass air flow sensor, and air intake tube as an assembly. Refer to [EM-15, "Removal and Installation"](#).
5. Partially drain the coolant when the engine is cool. Refer to [MA-14, "DRAINING ENGINE COOLANT"](#).
6. Disconnect the following:
 - Power brake booster vacuum hose
 - Coolant hoses from the intake manifold collector
 - Swirl control vacuum lines to power valve and intake manifold collector upper
 - Fuel injector electrical connectors
 - PCV hose
 - Electric throttle control actuator electrical connector
 - EVAP canister purge hose
 - EGR temperature sensor electrical connector


CAUTION:

- Cover any engine openings to avoid the entry of any foreign material.
7. Remove the EGR tube (to lower intake manifold collector) nuts.
 8. Disconnect the power steering hose bracket from the rear of the intake manifold collector.
 9. Remove the EVAP canister purge volume solenoid valve bracket bolt. Position the valve aside.
 10. Remove the VIAS control solenoid valve bracket bolt. Position the valve aside.
 11. Remove the vacuum tank.
 12. Remove the intake manifold collector support bracket from the back of the intake manifold collector using power tool.

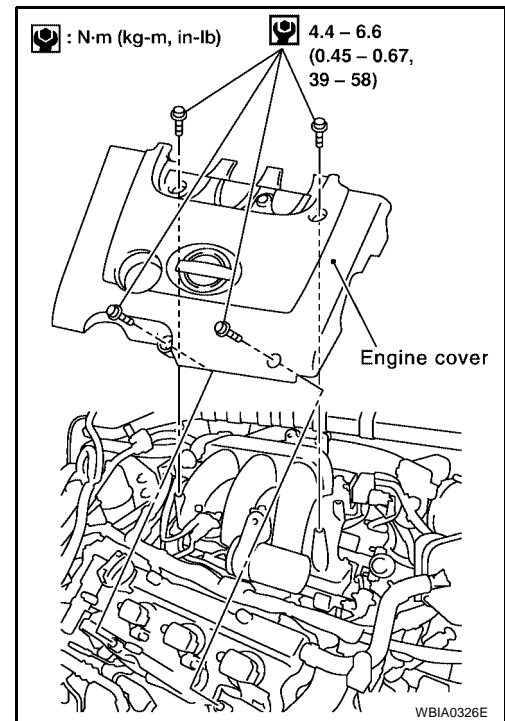

INTAKE MANIFOLD COLLECTOR


13. Loosen the intake manifold collector bolts in the order shown using power tool, and remove the intake manifold collector and gasket.

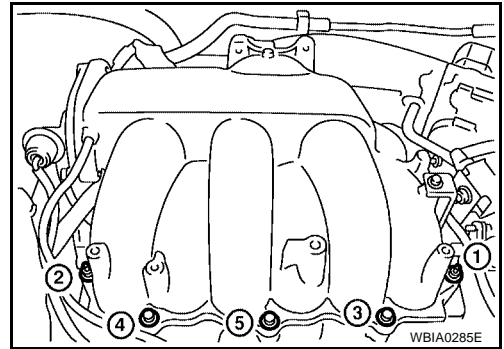

14. If necessary, remove the electric throttle control actuator bolts in the order shown and remove the electric throttle control actuator.

CAUTION:


- Handle carefully to avoid any shock to the electric throttle control actuator.
- Do not disassemble.

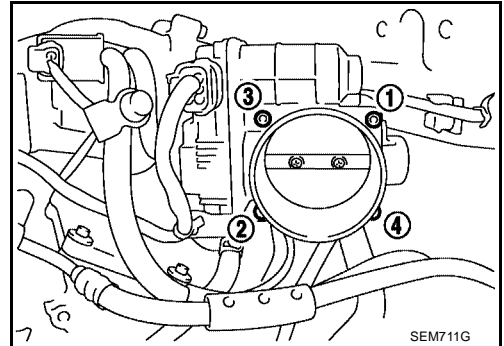

15. If necessary, remove the intake manifold collector (upper) bolts in the order shown, using power tool and remove the intake manifold collector.

CAUTION:


- Handle carefully to avoid any shock to the electric throttle control actuator, if installed.

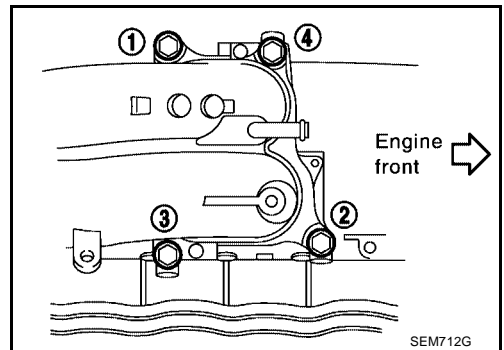

16. If necessary, remove power valve bolts in the order shown and remove the power valve.

17. If necessary remove the following components:

- Vacuum tank
- VIAS control solenoid valve
- EVAP canister purge volume control solenoid valve

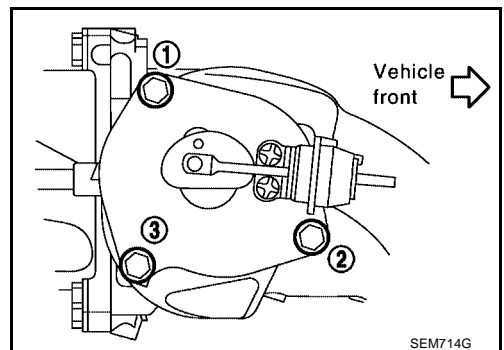

INSTALLATION

Installation is in the reverse order of removal, paying attention to the following.

NOTE:


After installation, it is necessary to re-calibrate the electric throttle control actuator as follows:

1. Perform the "Throttle Valve Closed Position Learning" when harness connector of the electric throttle control actuator is disconnected. Refer to [EC-48, "Throttle Valve Closed Position Learning"](#) .
2. Perform the "Idle Air Volume Learning" when the electric throttle control actuator is replaced. Refer to [EC-49, "Idle Air Volume Learning"](#) .

INTAKE MANIFOLD COLLECTOR


- If necessary, install power valve bolts in the order shown.

Power valve bolts : 17.6 - 21.6 N-m (1.8 - 2.2 kg-m,
13 - 15 ft-lb)

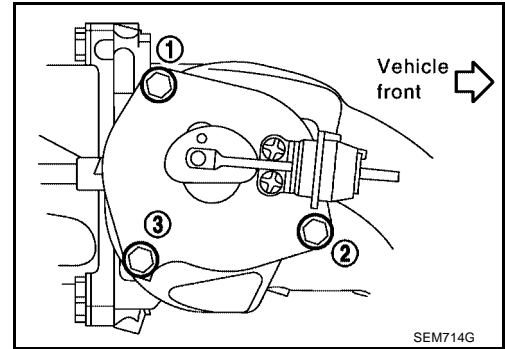


- If necessary, tighten the intake manifold collector pipe bolts in the order shown.

Intake manifold collector pipe bolts : 17.6 - 21.6 N-m (1.8 - 2.2 kg-m,
13 - 15 ft-lb)

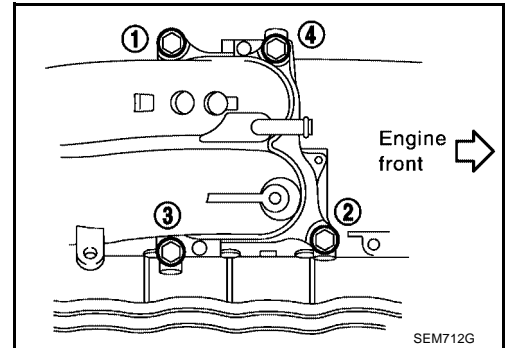


- If necessary, install the electric throttle control actuator bolts in the order shown. Install gasket with three protrusions facing down.

Electric throttle control actuator bolts : 7.2 - 9.6 N-m (0.74 - 0.97 kg-m,
64 - 84 in-lb)

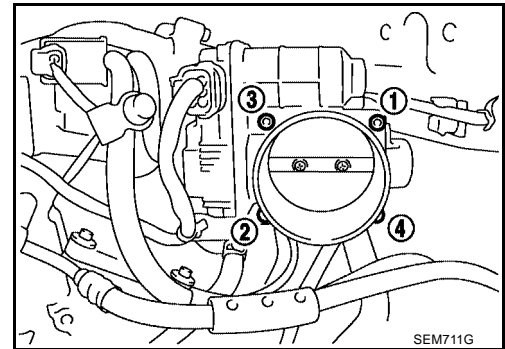

- Install the intake manifold collector bolts in the order shown.

Intake manifold collector bolts : 17.6 - 21.6 N-m (1.8 - 2.2 kg-m,
13 - 15 ft-lb)

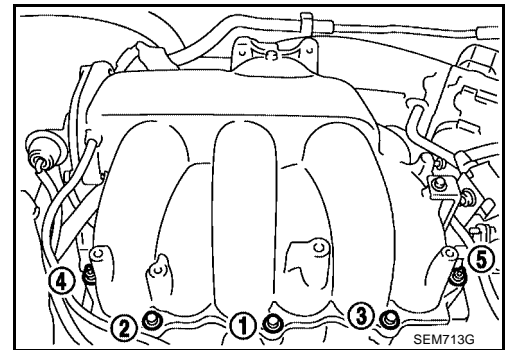

EGR VOLUME CONTROL VALVE


EGR VOLUME CONTROL VALVE

PFP:14710

Removal and Installation

EBS00G4Q

SEC. 147

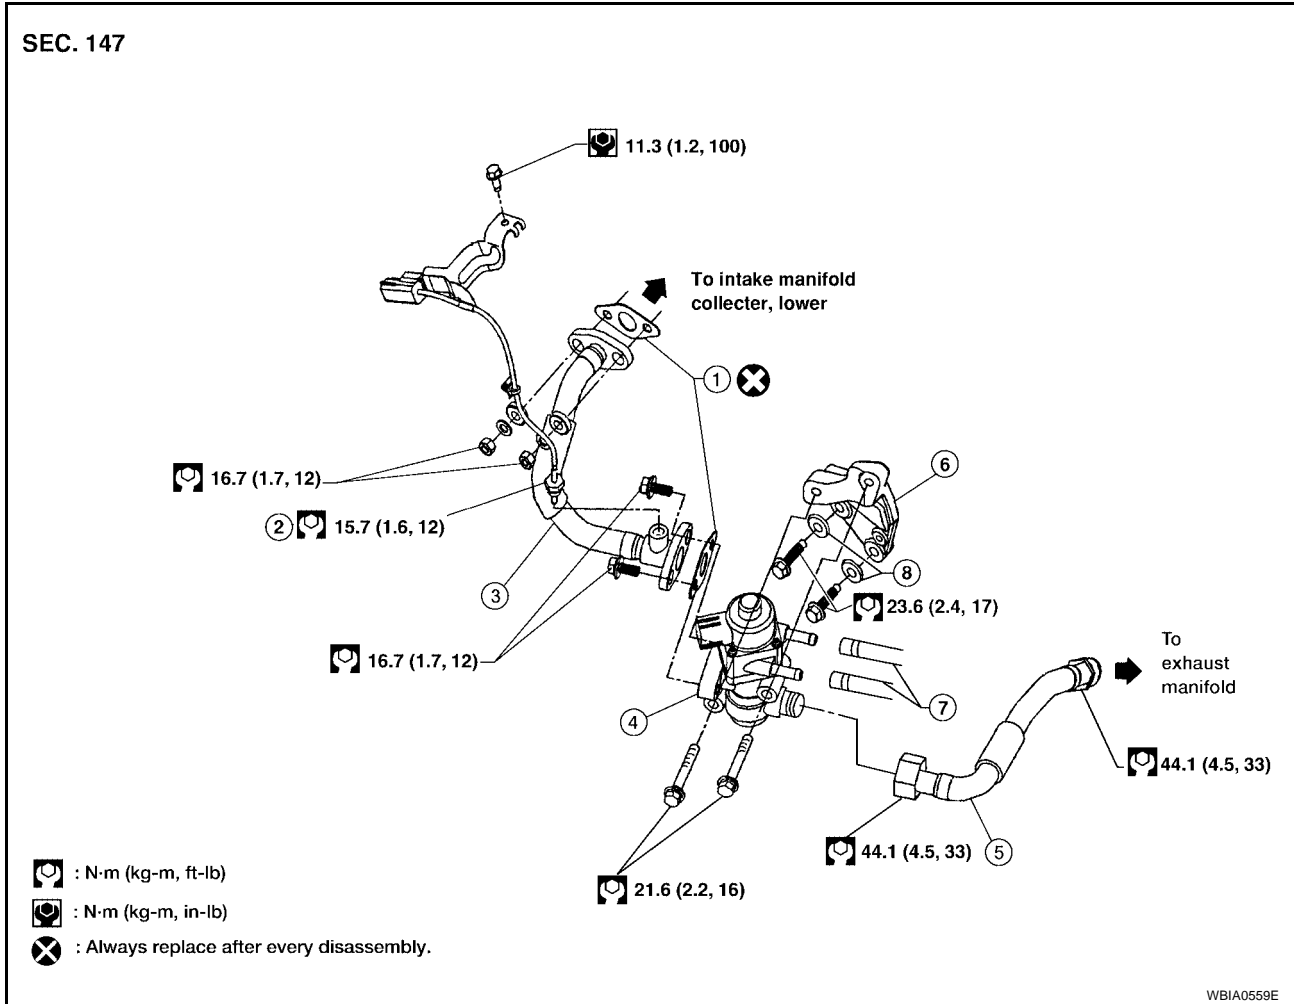

- | | | |
|-----------------------------|-----------------------------------|--|
| 1. Gasket | 2. EGR temperature sensor | 3. EGR tube (to lower intake manifold collector) |
| 4. EGR volume control valve | 5. EGR tube (to exhaust manifold) | 6. EGR volume control valve bracket |
| 7. Coolant lines | | |

WBIA0559E

EGR VOLUME CONTROL VALVE


REMOVAL

1. Remove the engine cover using power tool.
2. Remove air cleaner case lid and mass air flow sensor, and air intake tube as an assembly. Refer to [EM-15, "Removal and Installation"](#).
3. Partially drain the coolant when the engine is cool. Refer to [MA-14, "DRAINING ENGINE COOLANT"](#).

CAUTION:

Cover any engine openings to avoid the entry of any foreign material.

4. Disconnect the EGR temperature sensor electrical connector and bracket.
5. If necessary, remove the EGR temperature sensor.
6. Disconnect the EGR volume control valve electrical connector.
7. Remove the EGR tube (to intake manifold collector) bolts at the intake manifold collector.
8. Remove the EGR tube (to intake manifold collector) bolts at the EGR volume control valve and remove the tube.
9. Loosen the EGR tube (to exhaust manifold) to EGR volume control valve fitting.
10. If necessary remove the EGR tube (to exhaust manifold) as follows:
 - a. Remove the front cowl grille. Refer to [EI-19, "Removal and Installation"](#).
 - b. Remove the windshield wiper assembly. Refer to [WW-26, "Removal and Installation for Wiper Motor and Linkage"](#).
 - c. Remove the EGR tube (to exhaust manifold) to EGR volume control valve fitting.
 - d. Disconnect the air fuel ratio (A/F) sensor 1 (bank 1).
 - e. Remove the RH heat shield.
 - f. Remove the EGR tube (to exhaust manifold) to exhaust manifold fitting.
11. Disconnect the coolant lines at the EGR volume control valve.
12. Remove the EGR volume control valve bolts and the valve.

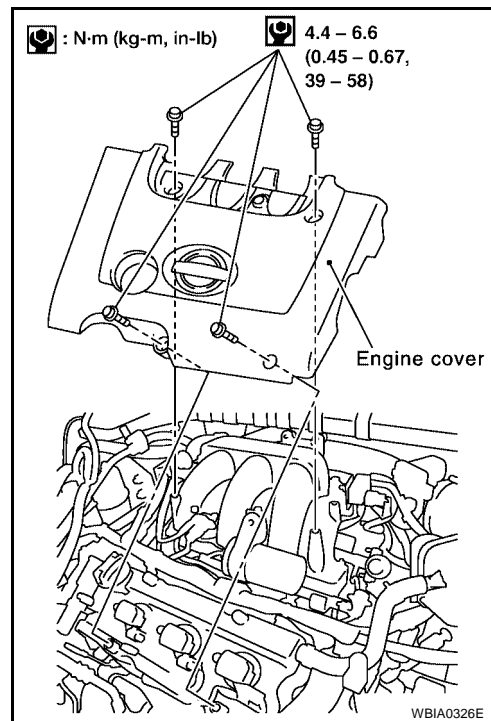

INSTALLATION


Installation is in the reverse order of removal.

EGR VOLUME CONTROL VALVE

- Install the RH heat shield bolts.

RH heat shield bolts

: 5.1 - 6.5 N·m (0.52 - 0.66 kg·m, 46 - 57 in·lb)

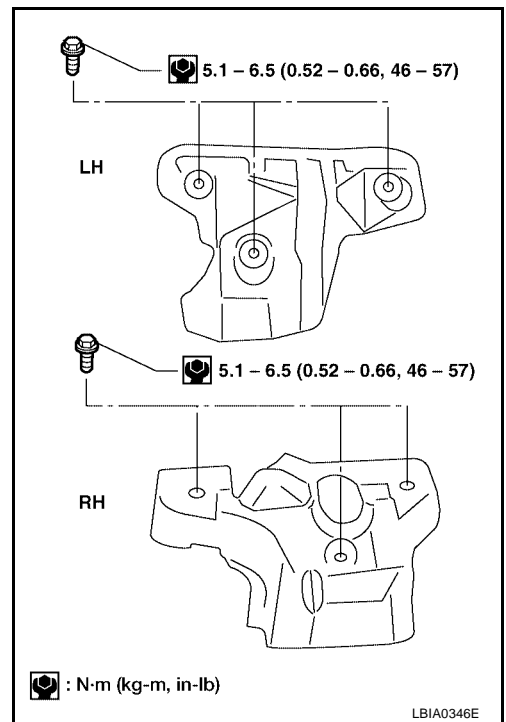

A

EM

C

D

E

F

G

H

I

J

K

L

M


INTAKE MANIFOLD

PF14003

INTAKE MANIFOLD

Removal and Installation

EBS00F2V

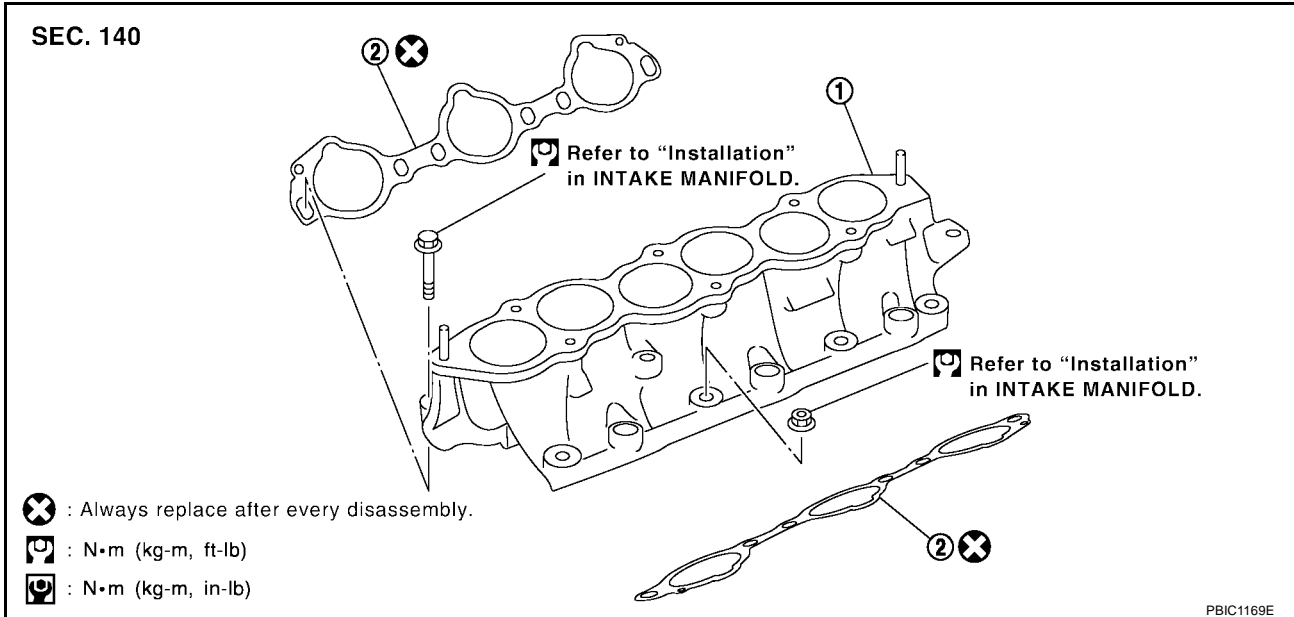


1. Intake manifold

2. Gasket

REMOVAL

1. Release the fuel pressure. Refer to [EC-51, "FUEL PRESSURE RELEASE"](#).
2. Remove the intake manifold collector. Refer to [EM-17, "Removal and Installation"](#).
3. Remove the fuel rail with the fuel injectors. Refer to [EM-39, "Removal and Installation"](#).
4. Loosen the intake manifold nuts and bolts in the order shown using power tool, and remove the intake manifold.

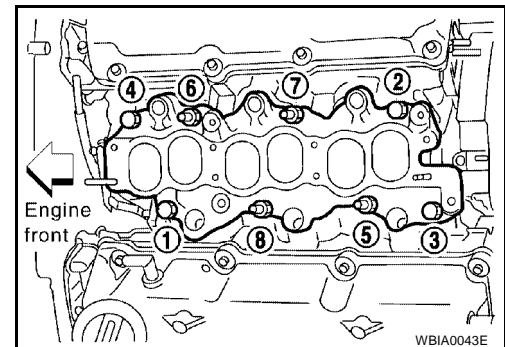



INTAKE MANIFOLD

INSPECTION AFTER REMOVAL

Surface Distortion

Using straightedge and feeler gauge, inspect the surface distortion of both the intake manifold and the intake manifold collector.

Limit : 0.1 mm (0.004 in)

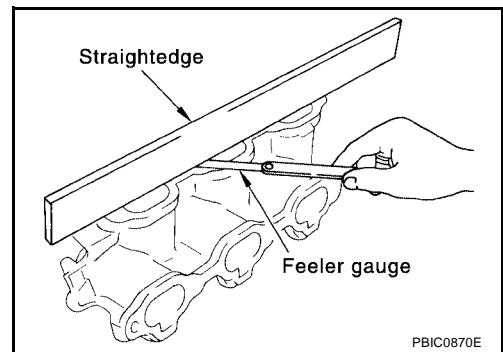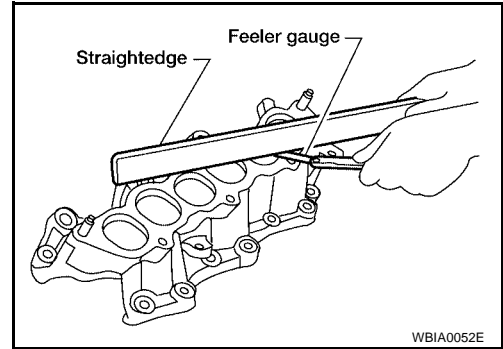

INSTALLATION

Installation is in the reverse order of removal.

- If necessary, install the stud bolts.


Stud bolts : 9.8 - 11.8 N-m (1.0 - 1.2 kg-m, 87 - 104 in-lb)

- Install intake manifold bolts in three steps in the order shown.

Step 1 : 4.9 - 9.8 N-m (0.5 - 0.99 kg-m, 44 - 86 in-lb)

Step 2 : 26.5 - 31.4 N-m (2.7 - 3.2 kg-m, 20 - 23 ft-lb)

Step 3 : 26.5 - 31.4 N-m (2.7 - 3.2 kg-m, 20 - 23 ft-lb)

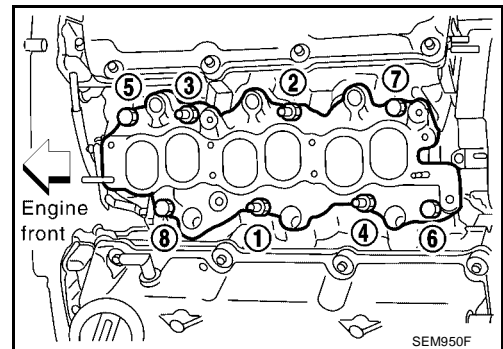


EXHAUST MANIFOLD AND THREE WAY CATALYST

EXHAUST MANIFOLD AND THREE WAY CATALYST

PF1:14004

Removal and Installation

EBS00F2W

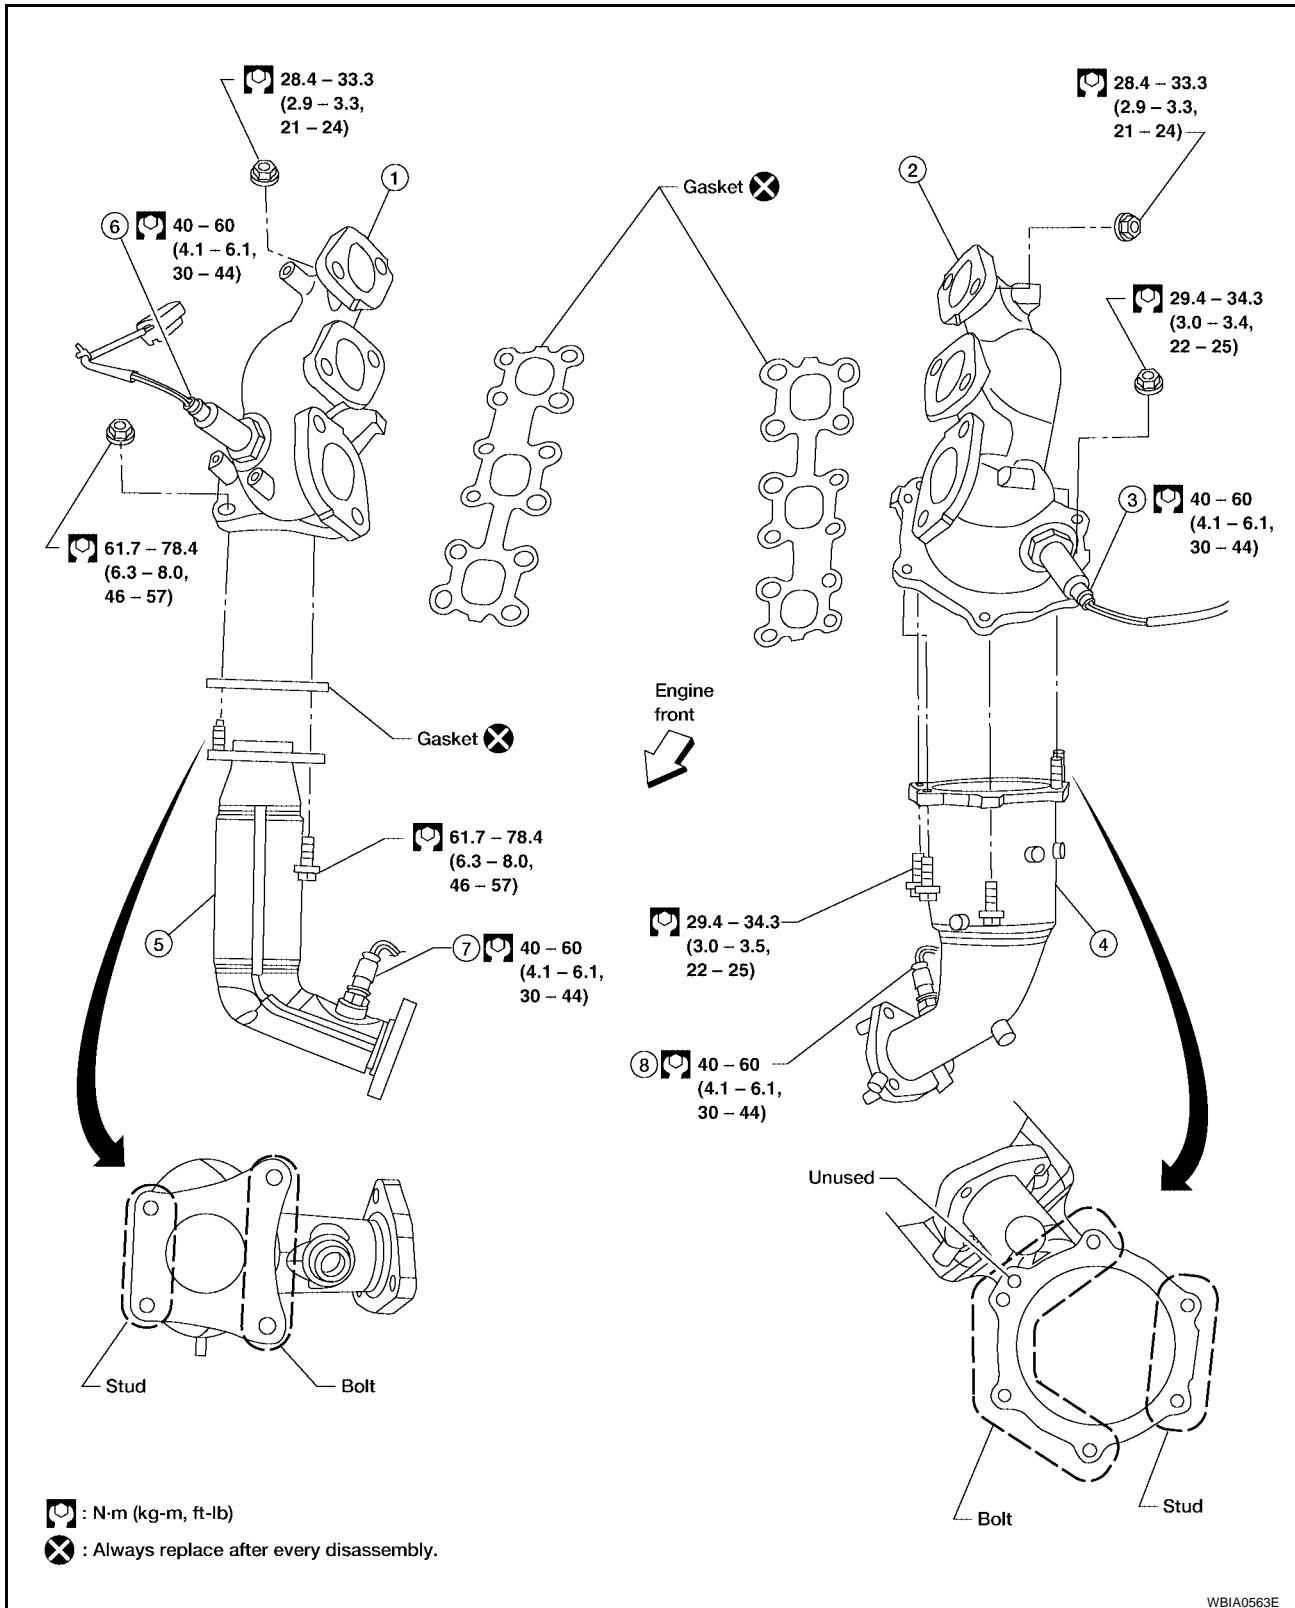

- Exhaust manifold (RH bank)
- Exhaust manifold (LH bank)
- Air fuel ratio (A/F) sensor 1 (bank 2)
- Three way catalyst (manifold) (bank 2)
- Three way catalyst (manifold) (bank 1)
- Air fuel ratio (A/F) sensor 1 (bank 1)
- Heated oxygen sensor 2 (front) (bank 1)
- Heated oxygen sensor 2 (front) (bank 2)


EXHAUST MANIFOLD AND THREE WAY CATALYST

REMOVAL

WARNING:

- Perform the work when the exhaust and cooling system have completely cooled down.
- When removing the front and rear engine mounting through bolts and nuts, lift the engine up slightly for safety. For engine slingers, refer to [EM-116, "REMOVAL"](#).

1. Remove the front wheel and tires using power tool.
2. Remove the engine undercover.
3. Remove the inner wheel well splash shields.
4. Remove the radiator and cooling fan assembly. Refer to [CO-12, "Removal and Installation"](#).
5. Remove the front exhaust tube. Refer to [EX-3, "Removal and Installation"](#).
6. Remove the front suspension member. Refer to [FSU-15, "Removal and Installation"](#).
7. Remove the RH and LH three way catalyst support bolts in the order shown.

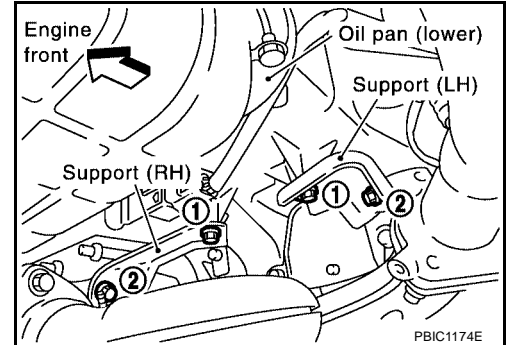


8. Remove heated oxygen sensor 2 (bank 1), heated oxygen sensor 2 (bank 2), air fuel ratio (A/F) sensor 1 (bank 1) and air fuel ratio (A/F) sensor 1 (bank 2).
 - a. Remove harness connector of each sensor, and disconnect the harness from the bracket and middle clamp.
 - b. Remove both heated oxygen sensors and air fuel ratio (A/F) sensors using Tool.


Tool numbers : KV10114400 (J-38365)
: KV10117100 (J-3647-A)

CAUTION:

- Be careful not to damage heated oxygen sensors or air fuel ratio (A/F) sensors.
 - Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; replace with a new sensor.
9. Remove exhaust manifold and three way catalyst heat shields with power tool.
 10. Remove the three way catalyst (manifold) (bank 1) and three way catalyst (manifold) (bank 2) by loosening the bolts first and then removing the nuts and through bolts.
 11. Remove the exhaust manifolds. Loosen the exhaust manifold nuts in the order shown.

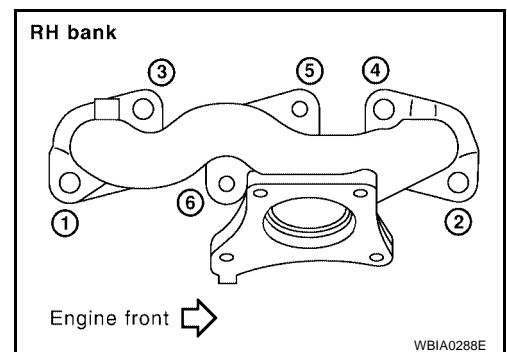

EXHAUST MANIFOLD AND THREE WAY CATALYST

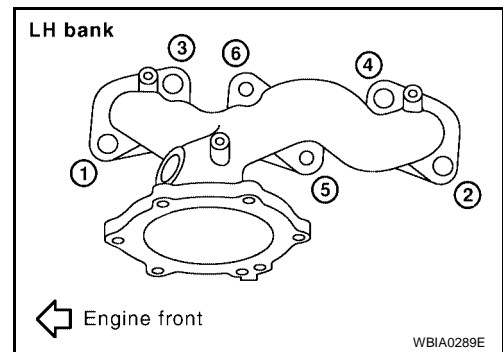


INSPECTION AFTER REMOVAL

Surface Distortion

- Use a reliable straightedge and feeler gauge to check the flatness of the exhaust manifold mating surfaces.

Limit : 0.3 mm (0.012 in)

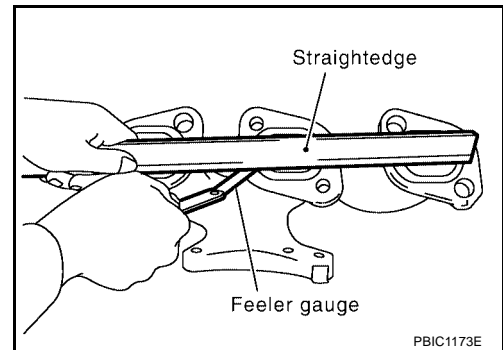

INSTALLATION

Installation is in the reverse order of removal.

- Install the exhaust manifold nuts in the order shown.

Exhaust manifold nuts : 28.4 - 33.3 N·m (2.9 - 3.3 kg·m, 21 - 24 lb·ft)

CAUTION:



- When using the heated oxygen sensor wrench, tighten to the middle of specified torque range, because the length of the Tool may increase the actual tightness. Do not tighten to the maximum specified torque range.

**Tool numbers : KV10114400 (J-38365)
: KV10117100 (J-3647-A)**

- Before installing a heated oxygen sensor or air fuel ratio (A/F) sensor, clean the exhaust manifold threads using the oxygen sensor thread cleaner tool, and apply anti-seize lubricant.

**Tool numbers : J-43897-18
: J-43897-12**


- Do not over-tighten the air fuel ratio (A/F) sensor or heated oxygen sensors. Doing so may cause damage.

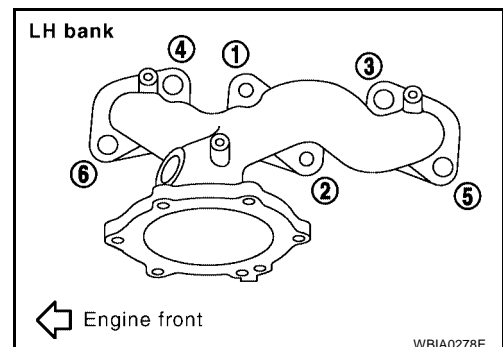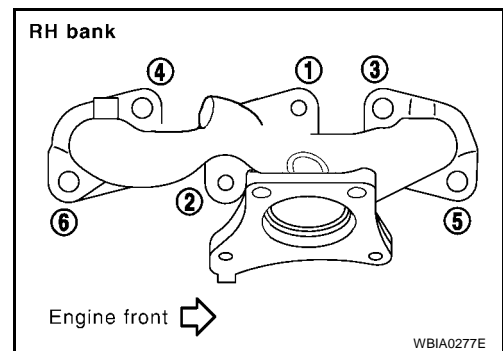

EXHAUST MANIFOLD AND THREE WAY CATALYST

- Install the RH and LH three way catalyst support bolts in the order shown.

Three way catalyst support bolts : 19 - 28 N·m (2.0 - 2.5 kg·m, 14 - 18 ft·lb)

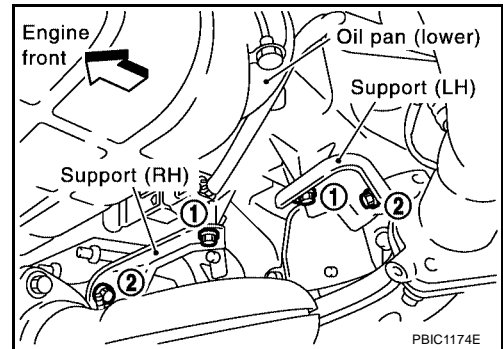


- Install the exhaust manifold heat shield bolts.

Exhaust manifold heat shield bolts : 5.1 - 6.5 N·m (0.52 - 0.66 kg·m, 46 - 57 in·lb)

- Install the three way catalyst heat shield bolts.

Three way catalyst heat shield bolts : 6.7 - 9.8 N·m (0.69 - 0.99 kg·m, 60 - 86 in·lb)

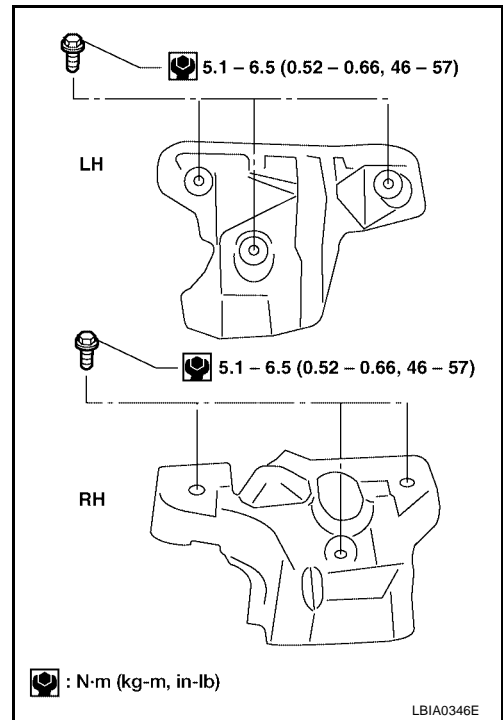

A
EM
C
D
E
F
G
H
I
J
K
L
M


OIL PAN AND OIL STRAINER

OIL PAN AND OIL STRAINER

FPF:11110

Removal and Installation

EBS00G4D

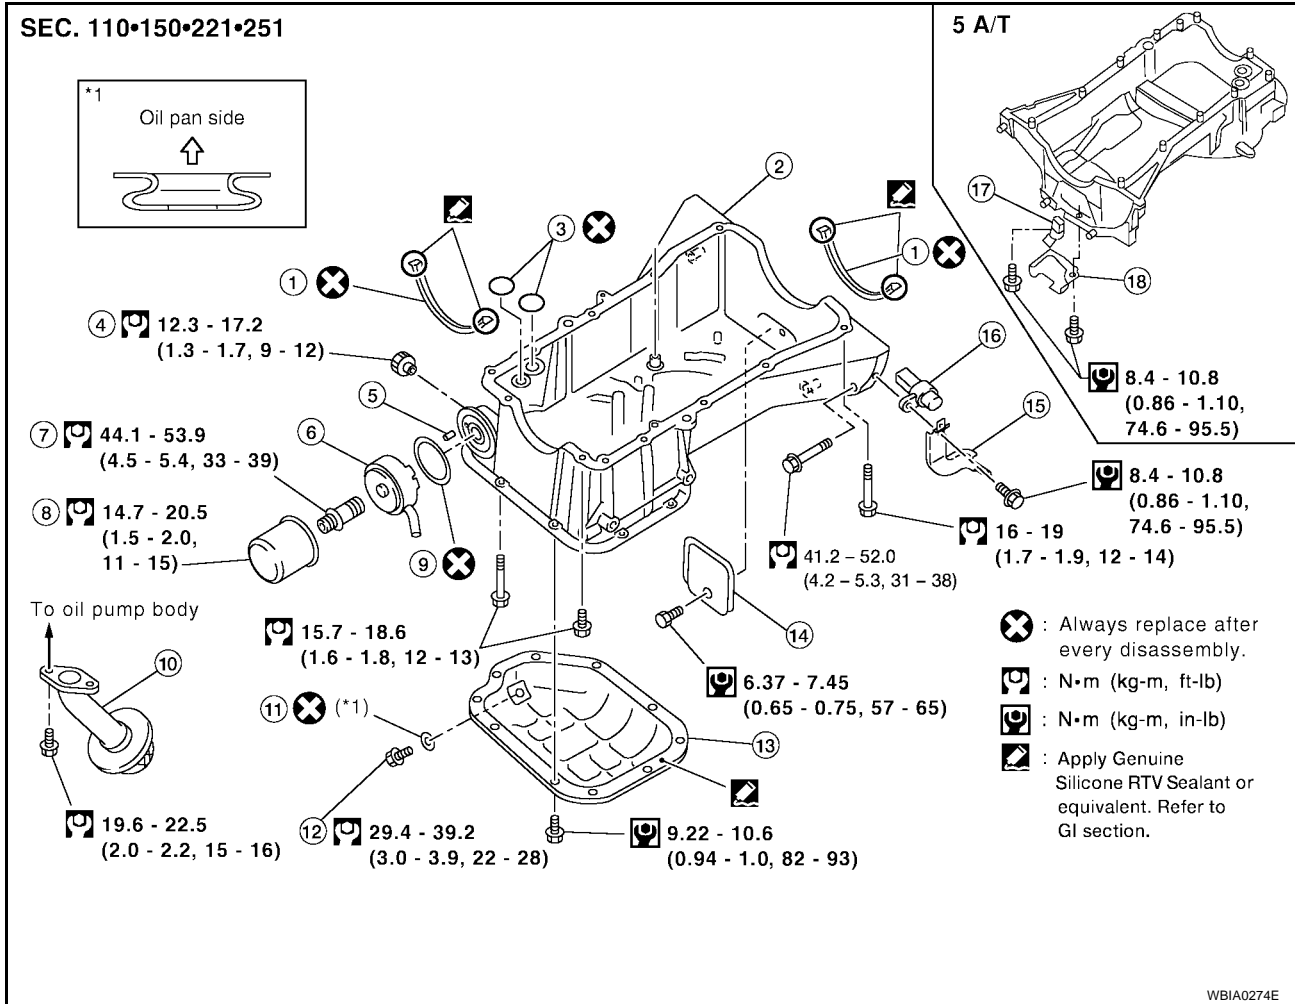

- | | | |
|--|--|---|
| 1. Gasket | 2. Upper oil pan | 3. O-ring |
| 4. Oil pressure switch | 5. Relief valve | 6. Oil cooler |
| 7. Oil cooler connection | 8. Oil filter | 9. Gasket |
| 10. Oil strainer | 11. Gasket | 12. Drain plug |
| 13. Lower oil pan | 14. Rear plate cover | 15. Heated oxygen sensor (bank 2) harness clamp |
| 16. Crankshaft position sensor (POS) (4 A/T & M/T) | 17. Crankshaft position sensor (POS) (5 A/T) | 18. Crankshaft position sensor (POS) (5 A/T) shield |

REMOVAL

WARNING:

- You should not remove the oil pan until the exhaust system and cooling system have completely cooled off.
- When removing the front and rear engine mounting through bolts and nuts, lift the engine up slightly for safety. For engine slingers, refer to step 37 in [EM-116, "REMOVAL"](#).

CAUTION:

When removing the upper oil pan from the engine, first remove the crankshaft position sensor (POS). Be careful not to damage sensor edges or signal plate teeth.

- Remove the front RH wheel and tire using power tool. Refer to [WT-4, "WHEEL AND TIRE ASSEMBLY"](#).
- Disconnect the battery negative terminal.
- Remove the oil dipstick.
- Drain the engine coolant. Refer to [MA-14, "DRAINING ENGINE COOLANT"](#).


OIL PAN AND OIL STRAINER

5. Remove the engine undercover.
6. Remove the RH inner fender splash shield.
7. Remove the A/C drive belt. Refer to [EM-14, "REMOVAL"](#).
8. Remove the front exhaust tube. Refer to [EX-3, "Removal and Installation"](#).
9. Remove coolant pipe bolts.
10. Remove the A/C compressor with piping attached, and position it out of the way securely with wire.


CAUTION:

Do not pull on or crimp the A/C lines and hoses.

11. Disconnect the coolant lines from the engine oil cooler and plug them to prevent coolant loss.
12. Remove the oil filter and engine oil cooler from the upper oil pan.
13. Remove the oil pressure switch, and the crankshaft position sensor (POS) from the upper oil pan.
14. Remove the front drive shafts. Refer to [FAX-11, "Removal and Installation"](#).
15. Remove the front suspension member. Refer to [FSU-15, "Removal and Installation"](#).
16. Disconnect the heated oxygen sensors and air flow ratio (A/F) sensors and remove the two catalytic converters from the exhaust manifolds using power tool. Refer to [EX-3, "Removal and Installation"](#).
17. Remove the rear plate cover from the upper oil pan.

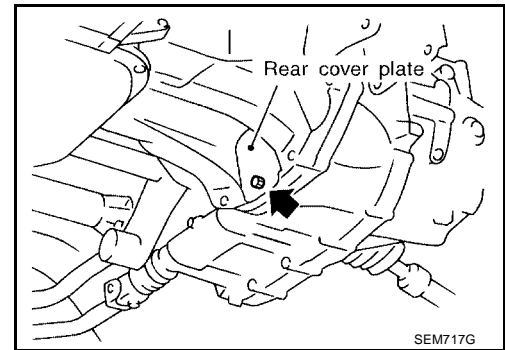


18. Loosen the lower oil pan bolts using power tool in order shown. Remove the lower oil pan.

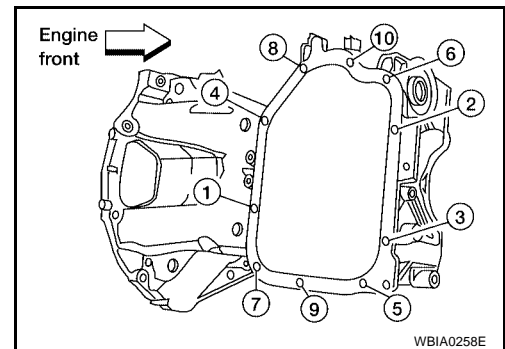

- a. Insert Tool between the lower oil pan and the upper oil pan.


Tool number : KV10111100 (J-37228)

- Be careful not to damage the mating surface.
 - Do not insert a screwdriver, this will damage the mating surfaces.
- b. Slide the Tool by tapping its side with a hammer to remove the lower oil pan from the upper oil pan.

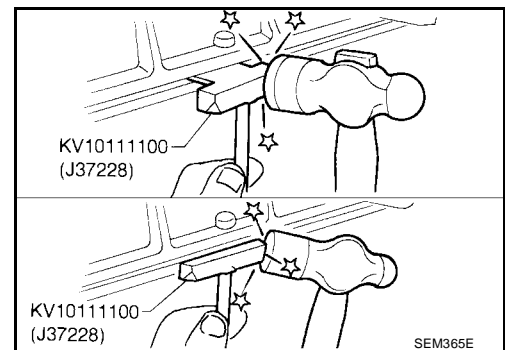


OIL PAN AND OIL STRAINER

19. Remove the four upper oil pan to transaxle bolts.

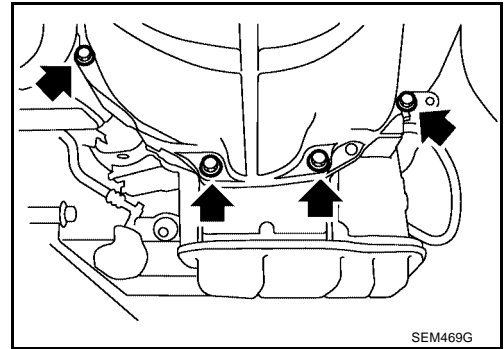


20. Remove the upper oil pan.

a. Loosen the bolts in the order shown, using power tool.

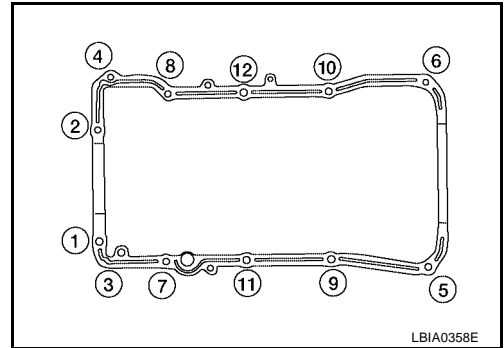


b. Insert an appropriate size tool into the notch (1) of the upper oil pan as shown.

c. Pry off the upper oil pan by moving the tool up and down (2) as shown.

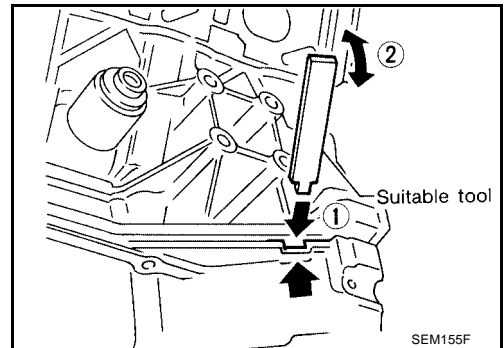


21. Remove the O-ring seals from the bottom of the cylinder block and oil pump housing, use new O-rings for installation.

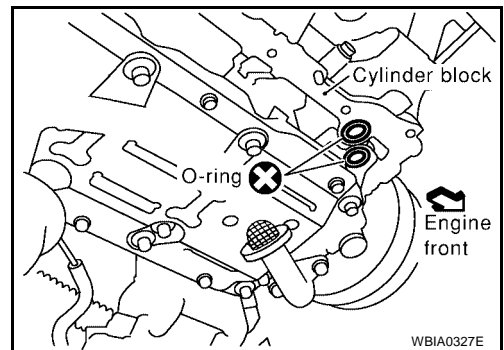

OIL PAN AND OIL STRAINER


22. Remove front cover gasket and rear oil seal retainer gasket.
23. Remove the oil strainer.

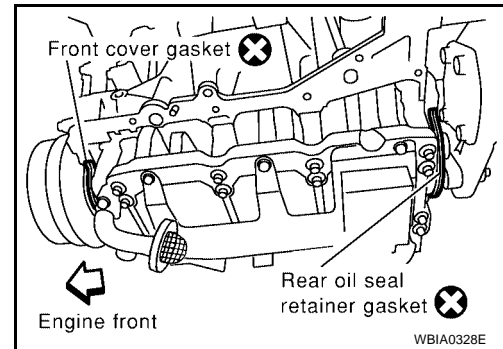

24. If re-installing the original oil pan, remove the old sealant from the mating surfaces using a scraper.
 - Also remove the old sealant from mating surface of the cylinder block.
 - Remove the old sealant from the bolt holes and threads.

CAUTION:

Do not scratch or damage the mating surfaces when cleaning off the old sealant.

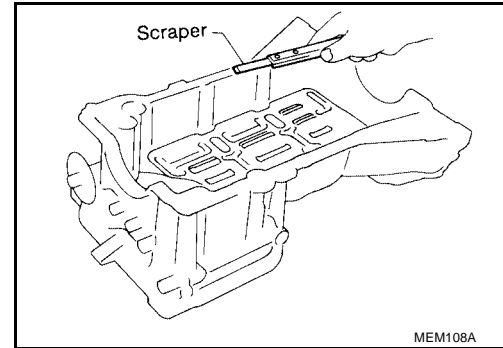

INSPECTION AFTER REMOVAL

Clean oil strainer if any object is attached.

INSTALLATION


CAUTION:

Wait at least 30 minutes before refilling the engine with oil.


1. Install oil strainer.

Oil strainer bolts : 19.6 - 22.5 N·m (2.0 - 2.2 kg-m, 15 - 16 ft-lb)

2. Apply Genuine Silicone RTV Sealant or equivalent, to the front cover gasket and the rear oil seal retainer gasket as shown. Refer to [GI-43, "RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS"](#).


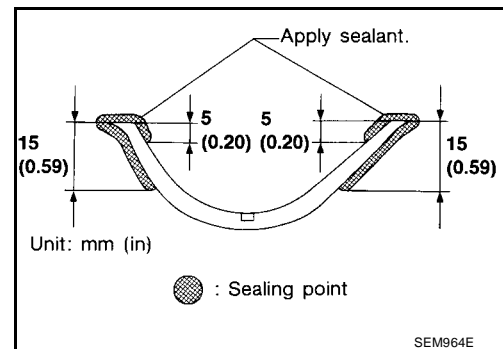


3. Install the front cover gasket and rear oil seal retainer gasket as shown.

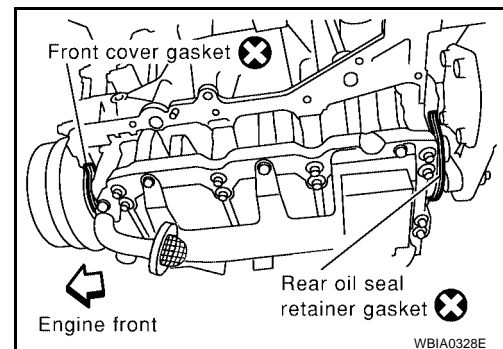


OIL PAN AND OIL STRAINER


4. Apply a bead of sealant to the cylinder block mating surface of the upper oil pan to a limited portion as shown.
- Use Genuine Silicone RTV Sealant, or equivalent. Refer to [GI-43, "RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS"](#).
 - Be sure the sealant is applied to a limited portion as shown, and the sealant is 4.0 - 5.0 mm (0.157 - 0.197 in) or 4.5 - 5.5 mm (0.177 - 0.217 in) wide.
 - Attaching should be done within 5 minutes after coating.

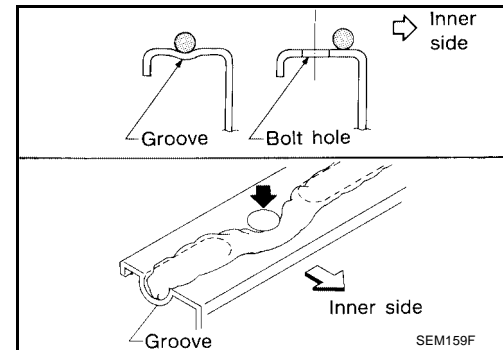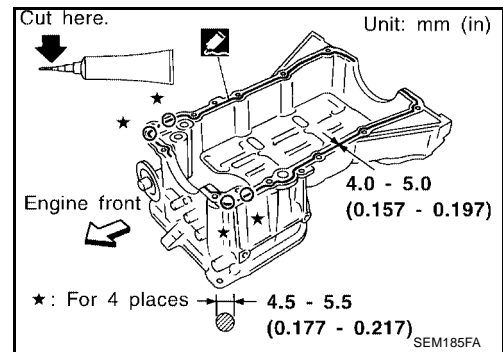


5. Install new O-rings on the cylinder block and oil pump body.

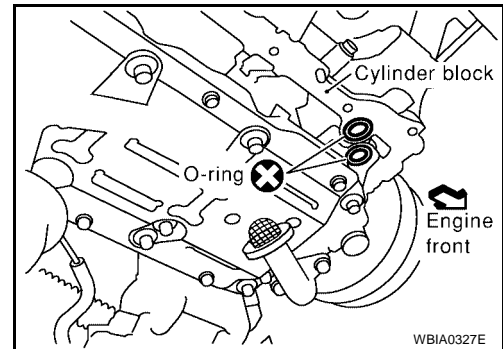

6. Install the upper oil pan.
- Tighten upper oil pan bolts in the order shown.
- Upper oil pan bolts : 15.7 - 18.6 N·m (1.6 - 1.8 kg·m, 12 - 13 ft·lb)**
- Wait at least 30 minutes before refilling the engine with oil.

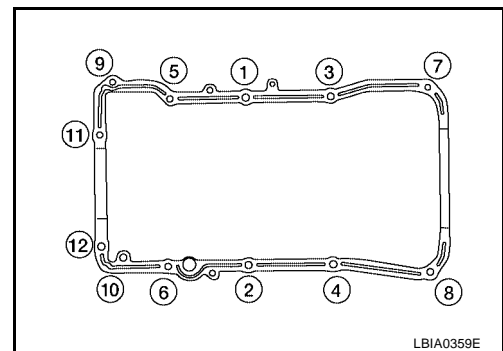


7. Install the four upper oil pan to transaxle bolts. Refer to [EM-118, "INSTALLATION"](#).

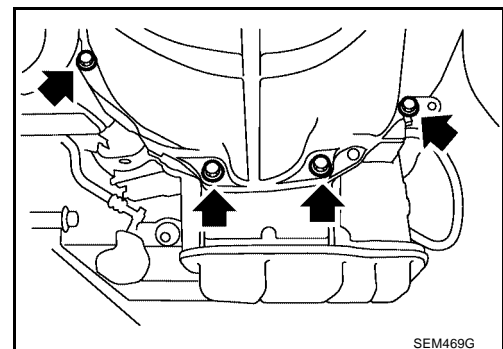

OIL PAN AND OIL STRAINER


8. Apply a continuous bead of sealant to the lower oil pan.
- Use Genuine Silicone RTV Sealant, or equivalent. Refer to [GI-43, "RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS"](#).
 - Be sure the sealant is 4.5 - 5.5 mm (0.177 - 0.217 in) wide.
 - Installation must be done within 5 minutes after applying sealant.

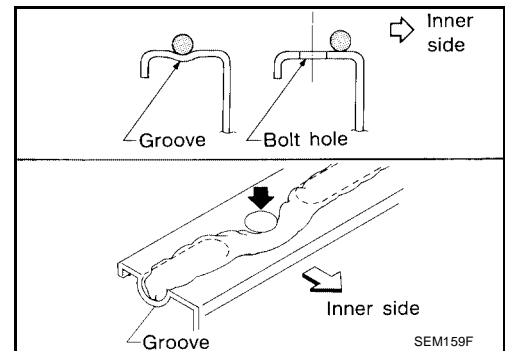

9. Install the lower oil pan. Tighten the lower oil pan bolts in order shown.

Lower oil pan bolts : 9.22 - 10.6 N-m (0.94 - 1.00 kg-m, 82 - 93 in-lb)


- Wait at least 30 minutes before refilling the engine with oil.

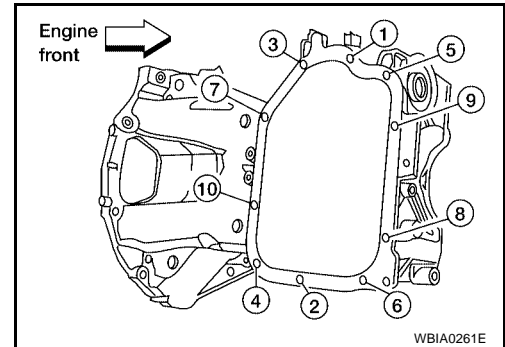

10. Install rear plate cover.

Rear plate cover bolt : 6.37 - 7.45 N-m (0.65 - 0.75 kg-m, 57 - 65 in-lb)

11. Installation of the remaining components is in the reverse order of removal.

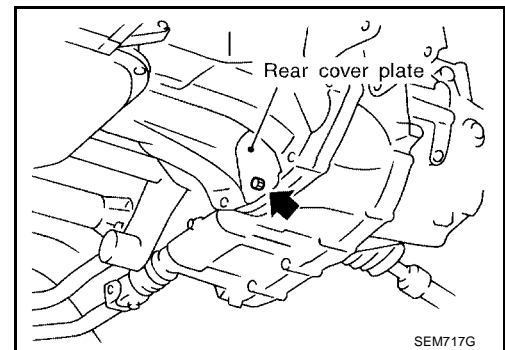

INSPECTION AFTER INSTALLATION

- Start the engine and check for leaks. Refer to [MA-16, "Changing Engine Oil"](#).
- Inspect the engine oil level. Refer to [MA-16, "Changing Engine Oil"](#).


IGNITION COIL

IGNITION COIL

PF2:22448

Removal and Installation

EBS00F2Y

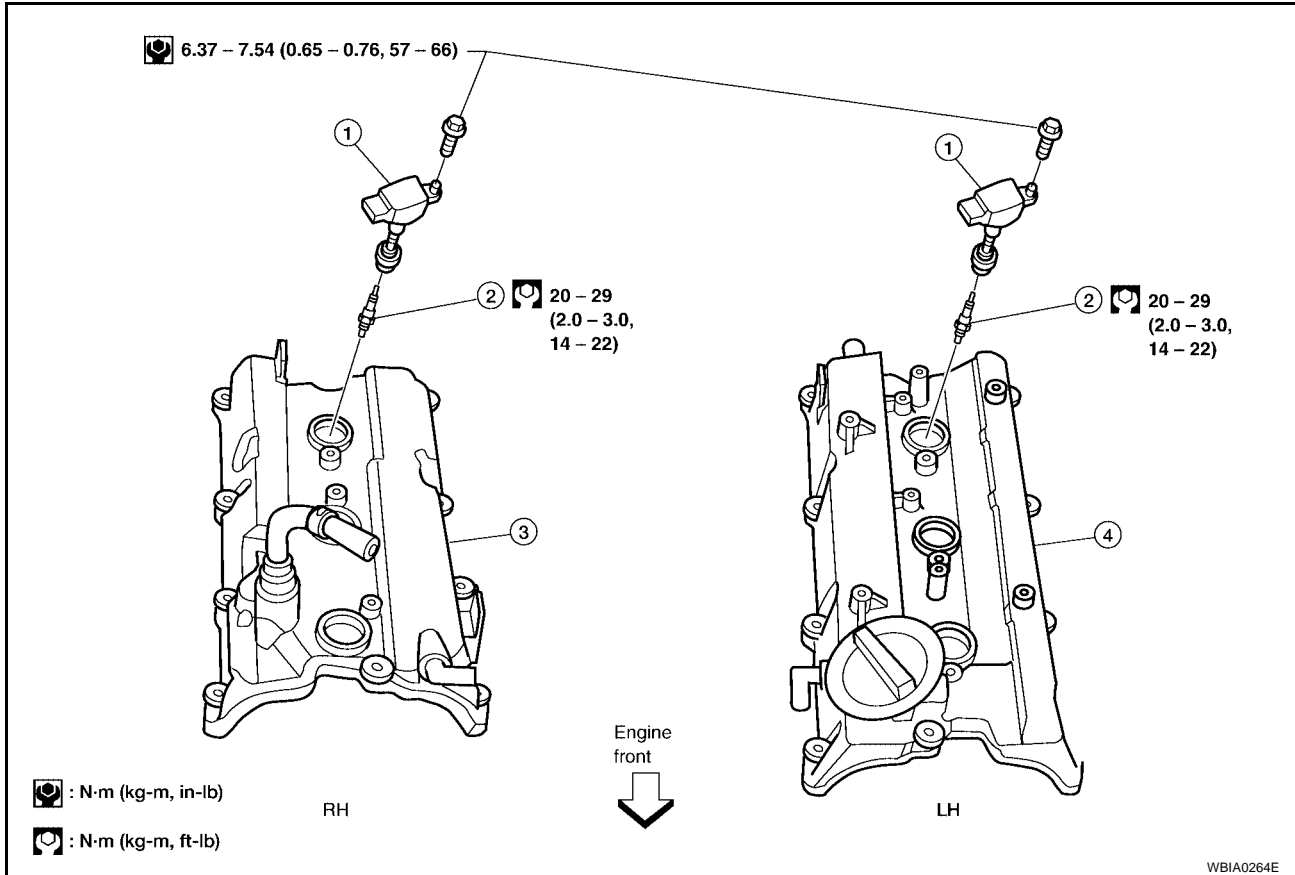

1. Ignition coil
2. Spark plug
3. Rocker cover (right bank)
4. Rocker cover (left bank)

REMOVAL

1. Remove the engine cover using power tool.
2. Drain engine coolant. Refer to [MA-14, "DRAINING ENGINE COOLANT"](#) .
3. Disconnect the mass air flow sensor electrical connector and remove the air cleaner assembly and air intake tubes. Refer to [EM-15, "Removal and Installation"](#) .
4. Remove the intake manifold collector, gasket, and electric throttle control actuator. Refer to [EM-17, "Removal and Installation"](#) .
5. Remove the six ignition coils.

CAUTION:

Do not shock it.

INSTALLATION

Installation is in the reverse order of removal.


SPARK PLUG (PLATINUM-TIPPED TYPE)

PF22401

EBS00F2Z

SPARK PLUG (PLATINUM-TIPPED TYPE)

Removal and Installation

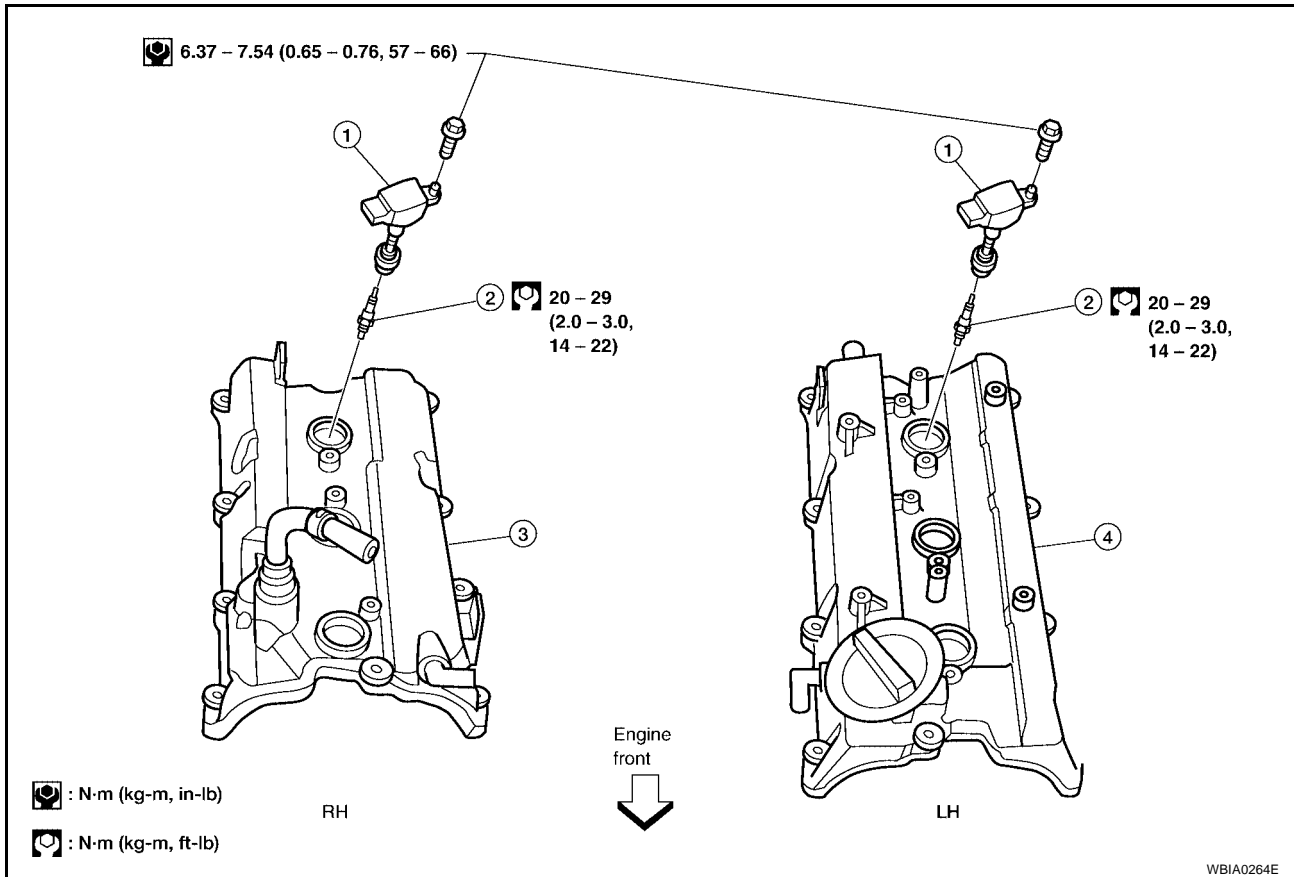

1. Ignition coil
2. Spark plug
3. Rocker cover (right bank)
4. Rocker cover (left bank)


REMOVAL

1. Remove the engine cover, using power tool.
2. Drain engine coolant. Refer to [MA-14, "DRAINING ENGINE COOLANT"](#).
3. Disconnect the mass air flow sensor electrical connector and remove the air cleaner assembly and air intake tubes. Refer to [EM-15, "Removal and Installation"](#).
4. Remove the intake manifold collector, gasket, and electric throttle control actuator. Refer to [EM-17, "Removal and Installation"](#).
5. Remove the six ignition coils.

CAUTION:

Do not shock it.

6. Remove the six spark plugs using a suitable tool.
 - If replacing the spark plugs use the correct spark plug for maximum performance. Refer to [MA-18, "Changing Spark Plugs \(Platinum - Tipped Type\)"](#).

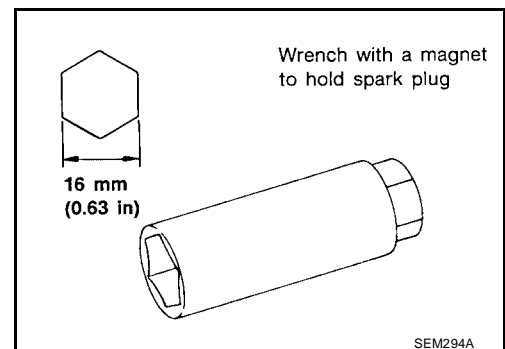

INSPECTION AFTER REMOVAL

Use standard type spark plug for normal driving conditions. Refer to [EM-150, "SPARK PLUG"](#).

SPARK PLUG (PLATINUM-TIPPED TYPE)


The hot type spark plug is suitable when fouling occurs with the standard type spark plug under conditions such as:

- Frequent engine starts
- Low ambient temperatures

The cold type spark plug is suitable when engine spark knock occurs with the standard type spark plug under conditions such as:

- Extended highway driving
- Frequent high engine revolution

Do not use a wire brush for cleaning.

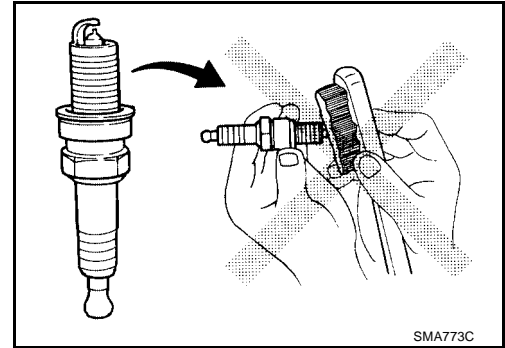


If plug tip is covered with carbon, a spark plug cleaner may be used.

Cleaner air pressure : less than 588 kPa (6 kg/cm² , 85 psi)

Cleaning time : less than 20 seconds

Checking and adjusting plug gap is not required between change intervals.

Gap (nominal) : 1.1 mm (0.043 in)

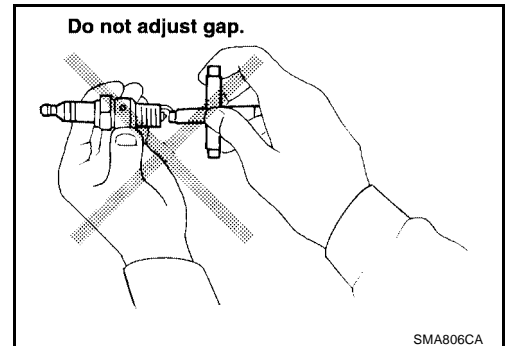

INSTALLATION

Installation is in the reverse order of removal.


FUEL INJECTOR AND FUEL TUBE

PF16600

EBS00F30

FUEL INJECTOR AND FUEL TUBE

Removal and Installation

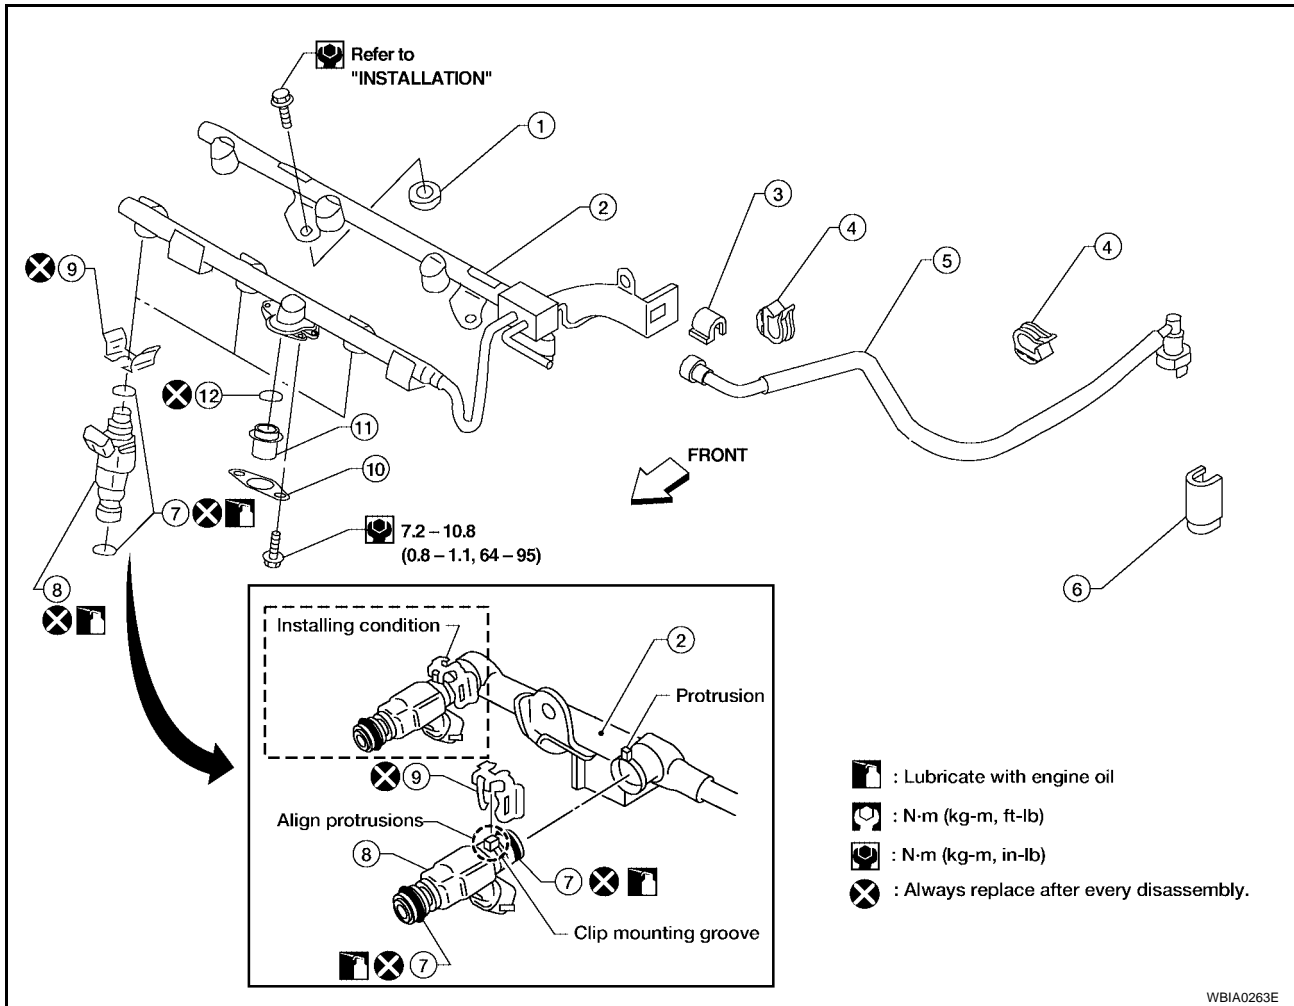

- | | | |
|--------------------------|-----------------------|------------------|
| 1. Insulator | 2. Fuel tube assembly | 3. Connector cap |
| 4. Clip | 5. Fuel hose | 6. Connector cap |
| 7. O-ring | 8. Fuel injector | 9. Clip |
| 10. Fuel damper retainer | 11. Fuel damper | 12. O-ring |

CAUTION:

- Apply new engine oil when installing the parts as specified to do so.
- Do not remove or disassemble parts unless instructed as shown.

REMOVAL


1. Remove the intake manifold collector. Refer to [EM-17, "Removal and Installation"](#).
2. Disconnect fuel tube quick connector at vehicle piping side.
3. To remove the quick connector cap, hold the sides of the connector, push in the tabs and pull out the tube.

NOTE:

If the connector and the tube are stuck together, push and pull several times until they start to move. Then disconnect them by pulling.

CAUTION:


- The tube can be removed when the tabs are completely depressed. Do not twist it more than necessary.
- Do not use any tools to remove the quick connector.
- Keep the resin tube away from heat. Be especially careful when welding near the tube.

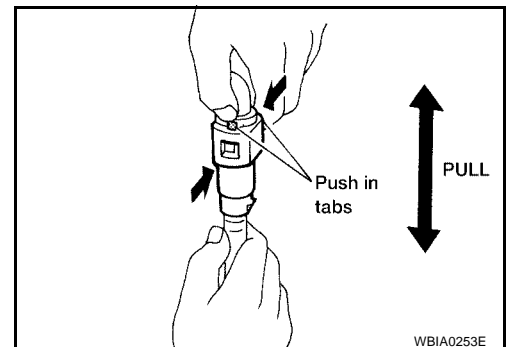

WBIA0253E

FUEL INJECTOR AND FUEL TUBE

- Prevent acid liquids such as battery electrolyte, etc. from getting on the resin tube.
 - Do not bend or twist the tube during removal or installation.
 - Do not remove the remaining retainer on the tube.
 - When the tube is replaced, also replace the retainer with a new one.
 - To keep the connecting portion clean and to avoid damage and foreign materials entering, cover the ends of the fuel tubes with plastic bags or something similar.
4. Remove the fuel rail with the fuel injectors attached, from the intake manifold. Remove the fuel injector O-rings and use new O-rings for installation.
 5. If necessary, remove fuel damper bolts and the fuel dampers. Remove fuel damper O-rings and use new O-rings for installation.

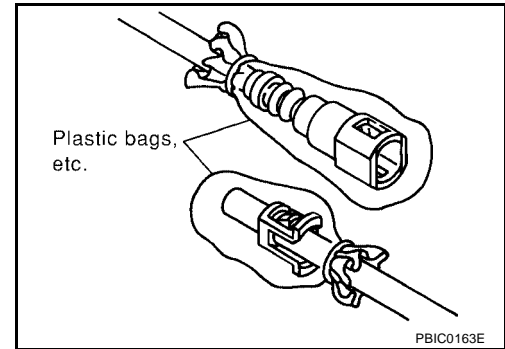

INSTALLATION


1. If necessary, Install fuel damper bolts. Use new O-rings for installation.

Fuel damper bolts : 7.2 - 10.8 (0.8 - 1.1 kg-m, 64 - 95 in-lb)

2. Install the fuel rails with fuel injectors attached.

NOTE:

- Carefully install new O-rings.
- Lubricate O-rings by lightly coating with new engine oil.
- Be careful not to damage the O-rings and surfaces for O-ring sealing surfaces. Do not expand or twist O-rings.
- Discard old clips; replace with new ones.
- Make sure that protrusions of fuel injectors are aligned with cutouts of clips after installation.
- Position clips in grooves on the fuel injectors.
- Align the protrusions of the fuel tube assembly with those of the fuel injectors.

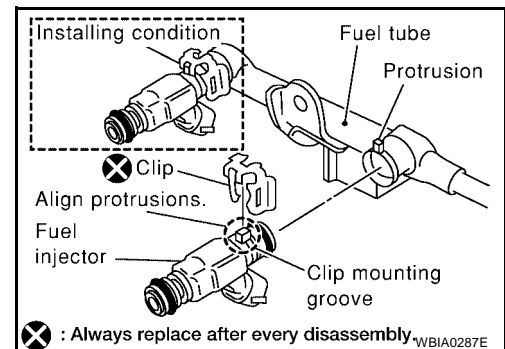

- After properly inserting the fuel injectors onto the fuel tube assembly, check that the fuel tube protrusions are engaged with those of fuel injectors, and the flanges of the fuel tube assembly are fully engaged with the clips.

3. Tighten fuel tube assembly bolts in the order shown, in two steps:


Fuel tube assembly bolts

Step 1 : 9.3 - 10.8 N·m (0.95 - 1.1 kg-m, 6.2 - 7.9 ft-lb)

Step 2 : 20.6 - 26.5 N·m (2.1 - 2.7 kg-m, 16 - 19 ft-lb)

CAUTION:

- After properly connecting fuel tube assembly to injector and fuel hose, check connection for fuel leakage.

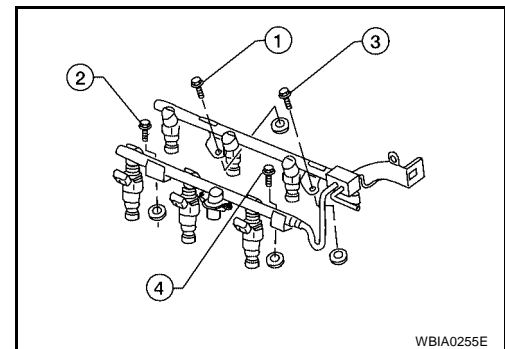

4. Install the quick connector as follows:
 - a. Make sure no foreign substances are deposited in and around the fuel tube and quick connector and that there is no damage.
 - b. Align the center to insert the quick connector straight onto the fuel tube.
 - c. Insert the fuel tube until a click is heard.
5. Installation of the remaining components is in the reverse of removal.

INSPECTION AFTER INSTALLATION

Make sure there is no fuel leakage at connections as follows:

FUEL INJECTOR AND FUEL TUBE

1. Apply fuel pressure to fuel lines by turning ignition switch ON (with engine stopped). Then check for fuel leaks at connections. A
2. Start the engine and rev it up and check for fuel leaks at connections.

NOTE:

Use mirrors for checking on connections out of the direct line of sight.

CAUTION:

Do not touch engine immediately after stopping as engine is extremely hot.

EM

C

D

E

F

G

H

I

J

K

L

M


ROCKER COVER

PFP:13264

ROCKER COVER

Removal and Installation

EBS00F31

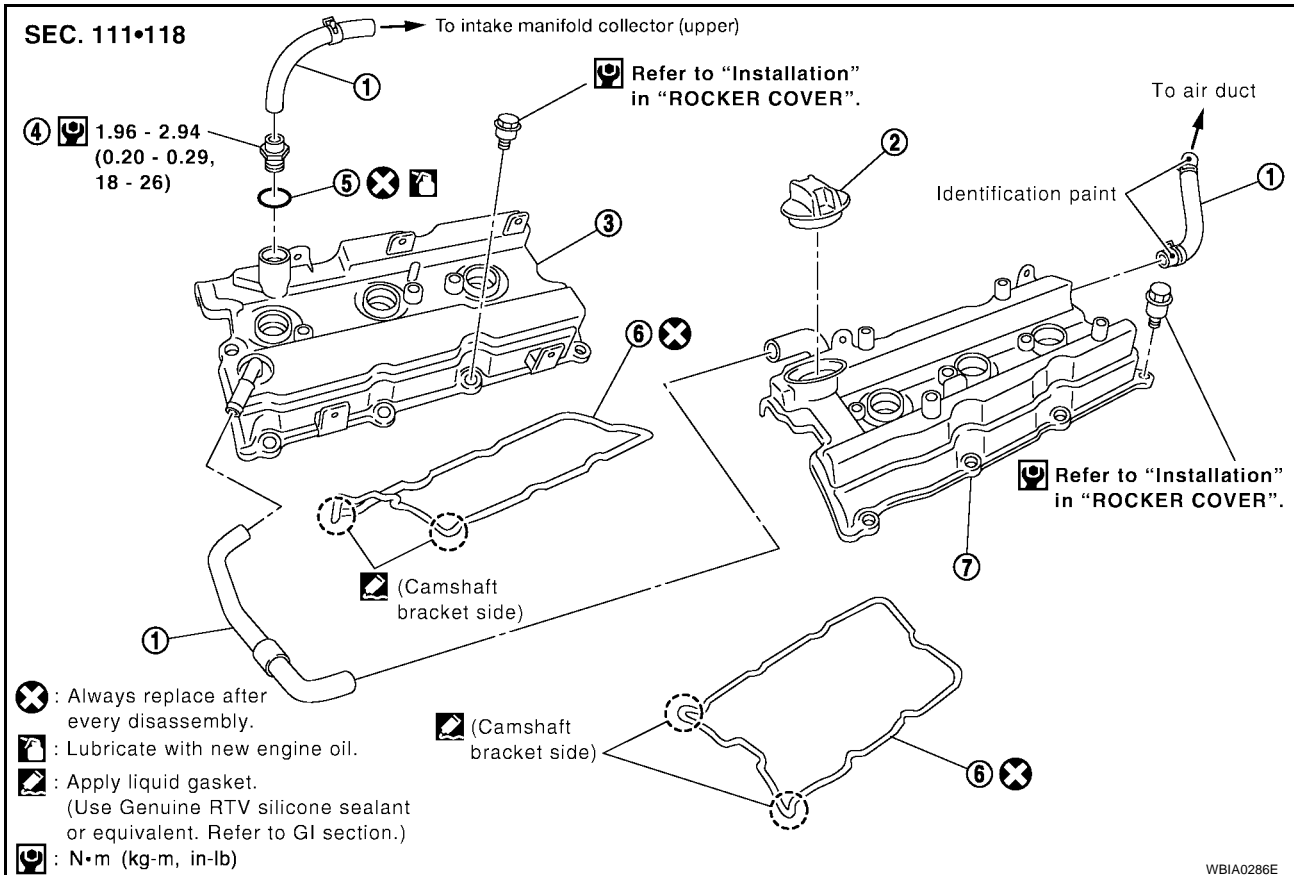


- | | | |
|-----------------------------|-------------------|------------------------------|
| 1. PCV hose | 2. Oil filler cap | 3. Rocker cover (right bank) |
| 4. PCV valve | 5. O-ring | 6. Rocker cover gasket |
| 7. Rocker cover (left bank) | | |

REMOVAL

- Remove the engine cover using power tool. Remove side engine covers.
- If removing RH rocker cover, disconnect the mass air flow sensor electrical connector and remove the air cleaner to electric throttle control actuator tube and air cleaner lid. Refer to [EM-15, "Removal and Installation"](#).
- If removing RH rocker cover, remove the front cowl panel. Refer to [EI-19, "Removal and Installation"](#).
- If removing RH rocker cover, remove the windshield wiper arms and motor assembly. Refer to [WW-26, "Removal and Installation for Wiper Motor and Linkage"](#).
- If removing RH rocker cover, remove the intake manifold collector. Refer to [EM-17, "Removal and Installation"](#).
- If removing LH rocker cover, disconnect the air fuel (A/F) ratio sensor.
- Remove the ignition coils. Refer to [EM-36, "Removal and Installation"](#).
- Position engine harness aside.
- Disconnect PCV hose.
- Remove dipstick.

ROCKER COVER

11. Remove rocker covers bolts in the order shown.

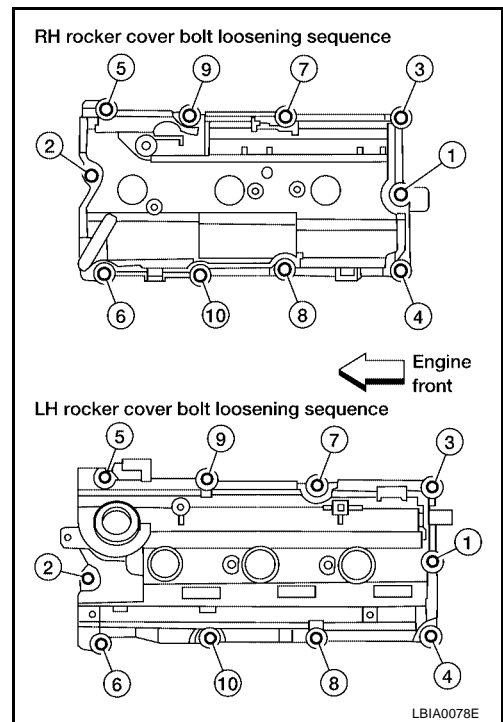

INSTALLATION


Installation is in the reverse order of removal.

- Apply sealant to the areas on the front corners. Refer to [EM-116, "Removal and Installation"](#).
- Use Genuine Silicone RTV Sealant or equivalent. Refer to [GI-43, "RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS"](#).
- Tighten the rocker cover bolts in two steps in the order shown.

Rocker cover bolts


Step 1 : 0.96 - 2.96 N·m (0.10 - 0.30 kg·m, 9 - 26 in·lb)

Step 2 : 7.33 - 9.33 N·m (0.75 - 0.95 kg·m, 65 - 82 in·lb)

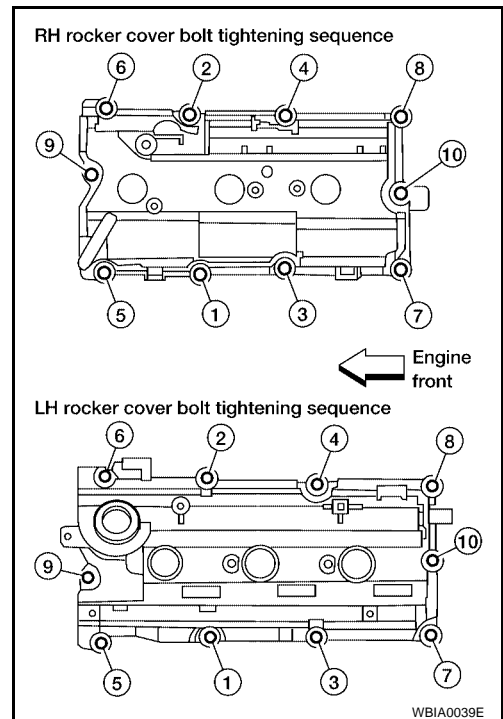

ROCKER COVER

- Install engine cover.

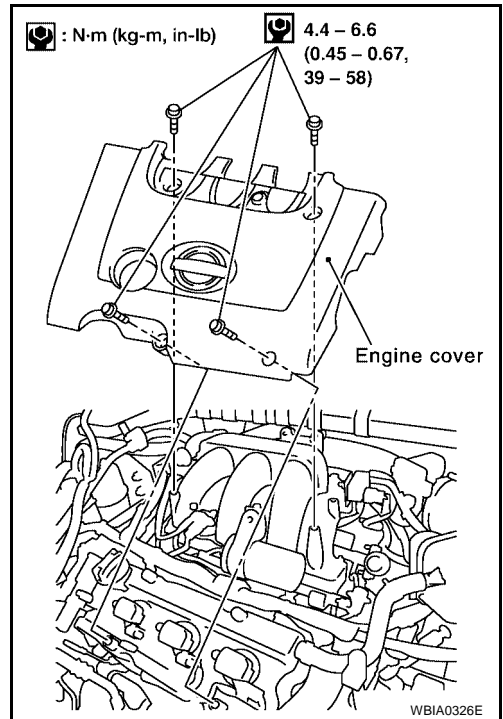

FRONT TIMING CHAIN CASE


FRONT TIMING CHAIN CASE

Removal and Installation

PF1:13599

EBS00G4C

SEC. 120•130•150•210•275

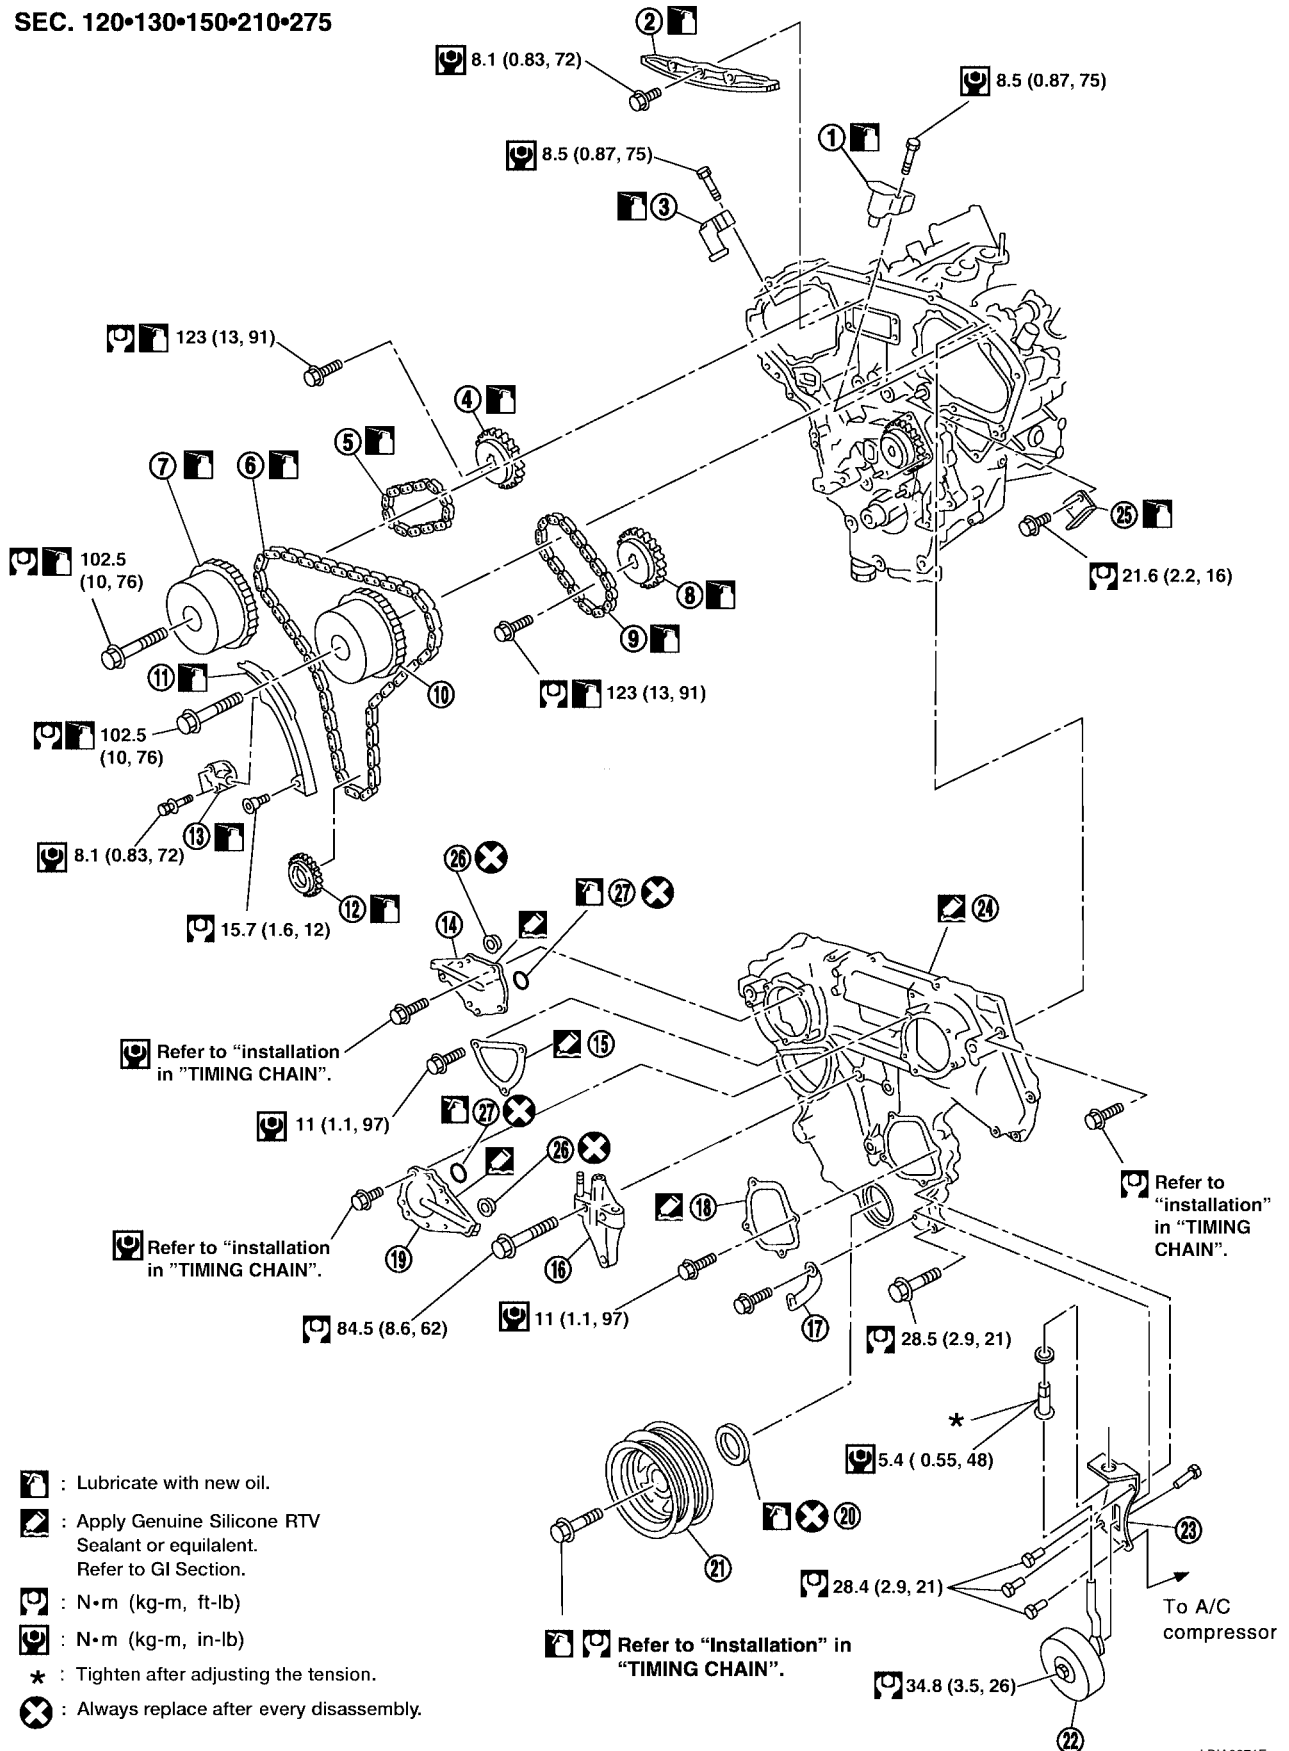

LBIA0371E

FRONT TIMING CHAIN CASE


- | | | |
|------------------------------------|-------------------------------------|-----------------------------|
| 1. Timing chain tensioner | 2. Internal chain guide | 3. Timing chain tensioner |
| 4. Camshaft sprocket (EXH) | 5. Timing chain (secondary) | 6. Timing chain (primary) |
| 7. Camshaft sprocket (INT) | 8. Camshaft sprocket (EXH) | 9. Timing chain (secondary) |
| 10. Camshaft sprocket (INT) | 11. Slack guide | 12. Crankshaft sprocket |
| 13. Timing chain tensioner | 14. IVT control valve cover - right | 15. Chain tensioner cover |
| 16. RH engine mounting bracket | 17. Water hose clamp | 18. Water pump cover |
| 19. IVT control valve cover - left | 20. Front oil seal | 21. Crankshaft pulley |
| 22. Idler pulley | 23. Idler pulley bracket | 24. Front timing chain case |
| 25. Timing tension guide | 26. Collared O-ring | 27. Seal ring |

NOTE:

- This section describes procedures for removal/installation procedure of the front timing chain case and timing chain related parts without removing the oil pan (upper) from the vehicle.
- When oil pan (upper) needs to be removed or installed, or when rear timing chain case is removed or installed, remove oil pans (upper and lower) first. Then remove front timing chain case, timing chain related parts, and rear timing chain case in this order, and install in reverse order of removal. Refer to [EM-56, "TIMING CHAIN"](#).
- Refer to [EM-56, "TIMING CHAIN"](#) for component parts location.

REMOVAL

1. Release the fuel pressure. Refer to [EC-51, "FUEL PRESSURE RELEASE"](#).
2. Disconnect the battery negative terminal.
3. Drain the engine cooling system. Refer to [MA-14, "DRAINING ENGINE COOLANT"](#).
4. Drain engine oil. Refer to [MA-16, "Changing Engine Oil"](#).
5. Remove engine cover using power tool. Remove side engine covers.
6. Remove the intake air duct with the air cleaner case lid and mass air flow sensor. Refer to [EM-15, "REMOVAL"](#).
7. Remove the engine coolant reservoir. Refer to [CO-12, "Removal and Installation"](#).

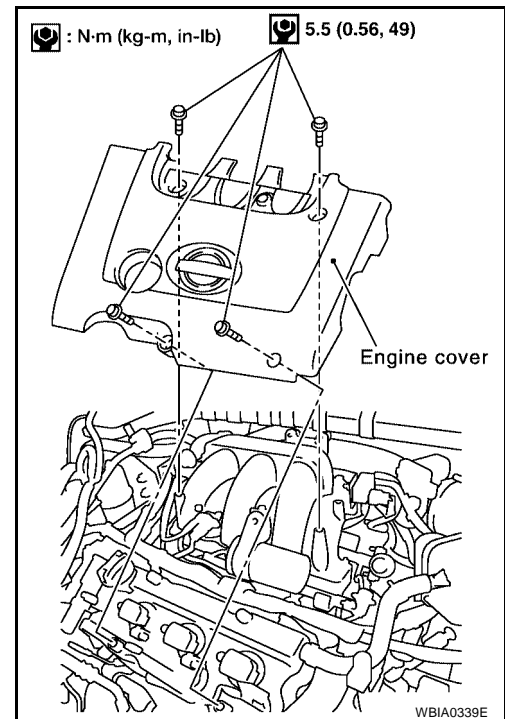

FRONT TIMING CHAIN CASE

8. Disconnect the fuel rail quick connector at the vehicle piping side. Refer to [EM-39, "REMOVAL"](#) .
9. Remove the cowl top. Refer to [EI-19, "Removal and Installation"](#) .
10. Remove the windshield wiper assembly. Refer to [WW-26, "REMOVAL"](#) .
11. Remove the IPDM E/R and position aside. Remove the bracket.
12. Remove the front RH wheel and tire using power tool. Refer to [WT-4, "WHEEL AND TIRE ASSEMBLY"](#) .
13. Remove the engine undercover.
14. Remove the RH inner fender splash shield.
15. Remove the drive belts and idler pulley. Refer to [EM-14, "REMOVAL"](#) .
16. Recover the A/C system R134a and remove the A/C compressor. Refer to [ATC-116, "Evacuating System and Charging Refrigerant"](#) .
17. Remove engine oil cooler pipe bolts.
18. Remove the power steering oil pump and reservoir tank with lines attached and position them aside.
19. Remove the lower oil pans. Refer to [EM-30, "REMOVAL"](#) .
20. Remove the generator. Refer to [SC-34, "REMOVAL"](#) .
21. Disconnect the engine harness and position aside.
22. Remove A/C low pressure line. Refer to [ATC-122, "Removal and Installation for Low-pressure Flexible Hose"](#) .
23. Support the engine and remove the RH engine mounting insulator, mount and bracket. Refer to [EM-116, "Removal and Installation"](#) .
24. Remove the water pump cover and chain tensioner cover from the front timing chain case using Tool.

Tool number : KV10111100 (J37228)



- Be careful not to damage the mating surface.
- Do not insert a screwdriver, this will damage the mating surfaces.

25. Remove the IVT control covers, right and left. Loosen the IVT control cover bolts in the order shown.

NOTE:


The shaft in the cover is inserted into the center hole of the intake camshaft sprocket. Remove the cover by pulling straight out until the cover disengages from the camshaft sprocket.

26. On A/T vehicles, remove the starter motor. Refer to [SC-18, "4-Speed A/T Models"](#) or [SC-19, "5-Speed A/T Models"](#) .
27. Remove the intake manifold collector. Refer to [EM-18, "REMOVAL"](#) .

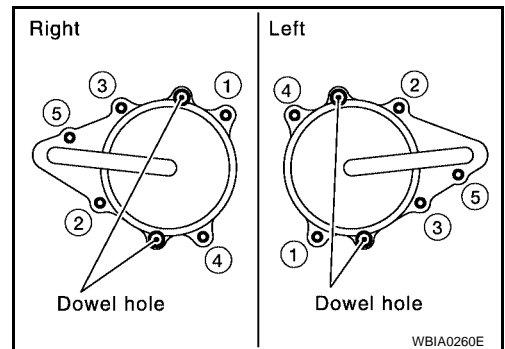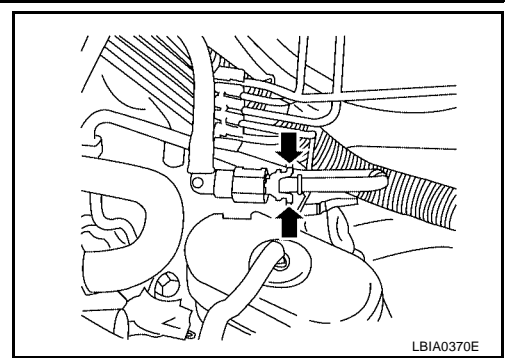


FRONT TIMING CHAIN CASE


28. Remove the six ignition coils.
- NOTE:**
Note locations for installation.
29. Remove the six spark plugs.
 30. Remove the engine oil dipstick.

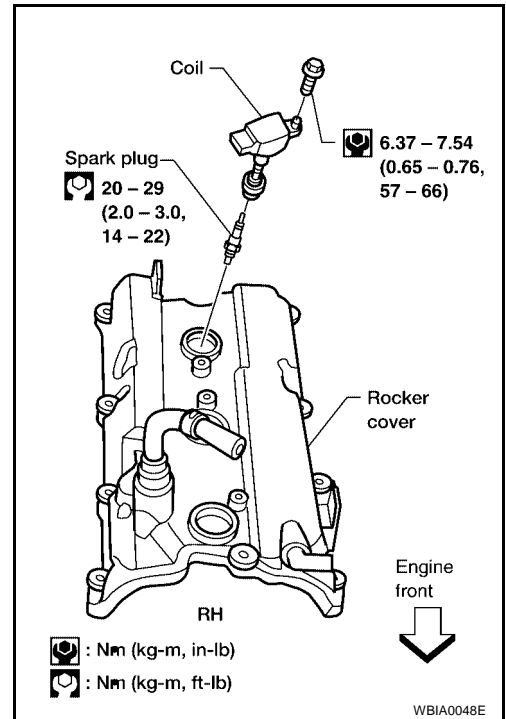

31. If necessary, remove the rocker covers. Loosen the rocker covers bolts in the order shown.
- NOTE:**
Necessary only when removing secondary timing chains.

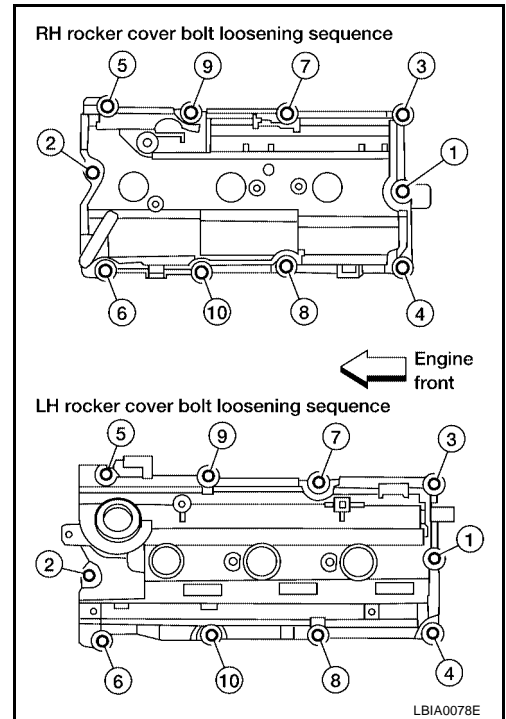


32. Remove the IVT control solenoid valves.
 - Discard the gaskets and use new gaskets for installation.

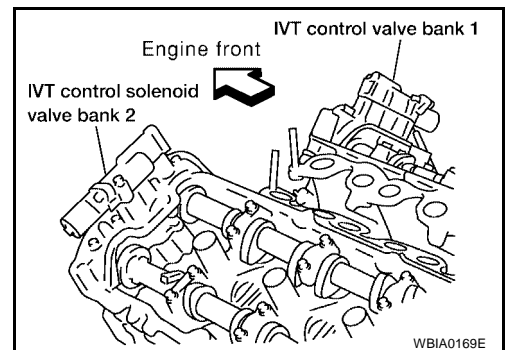

FRONT TIMING CHAIN CASE


33. Obtain compression TDC of No. 1 cylinder as follows:

- a. Rotate crankshaft pulley clockwise to align timing mark (grooved line without color) with timing indicator.

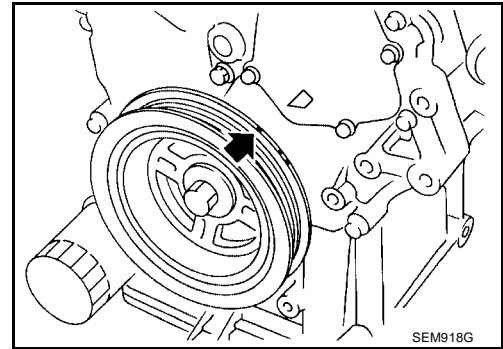

- b. Check that intake and exhaust camshaft lobes on No. 1 cylinder (right bank of engine) are located as shown.

- If not, turn the crankshaft one revolution (360°) and align as shown.


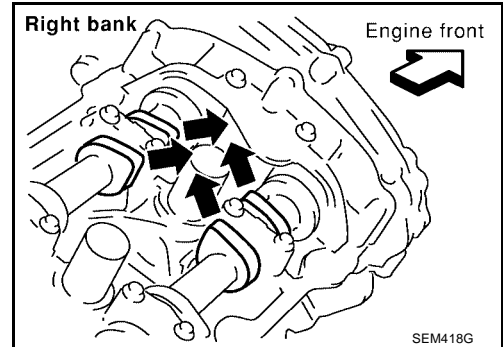


34. Lock the ring gear using Tool attached to the mounting bolt hole.

Tool number : KV10117700 (J44716)


CAUTION:

Do not damage the ring gear teeth, or the signal plate teeth behind the ring gear, when setting the stopper.

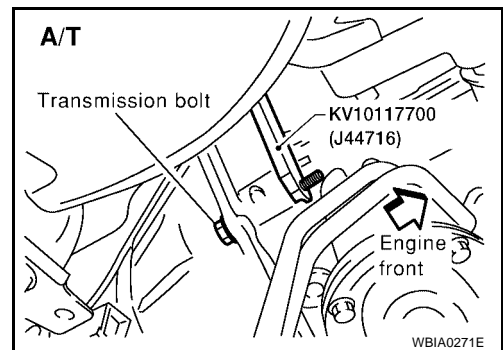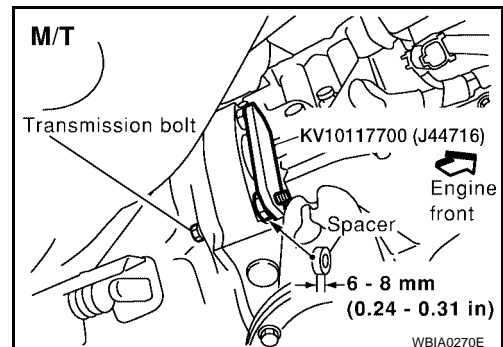

35. Remove the crankshaft pulley as follows:

- a. Loosen crankshaft pulley mounting bolt using pulley holder and locate bolt seating surface at 10 mm (0.39 in) from its original position.

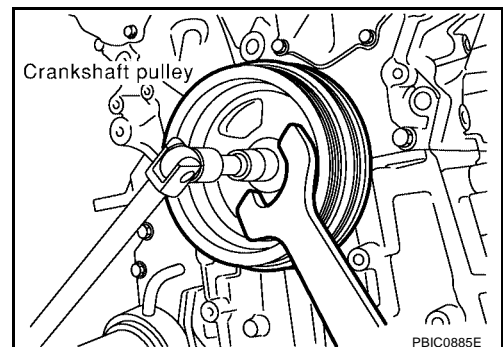


A
EM
C
D
E
F
G
H
I
J
K
L
M

FRONT TIMING CHAIN CASE


- b. Position a pulley puller at recess hole of crankshaft pulley to remove crankshaft pulley.

CAUTION:


Do not use a puller claw on crankshaft pulley periphery.

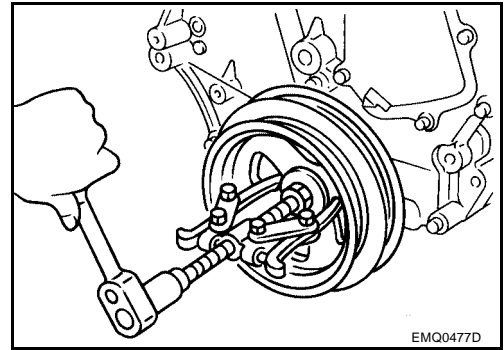


36. Loosen the lower oil pan bolts using power tool in order shown. Remove the lower oil pan.

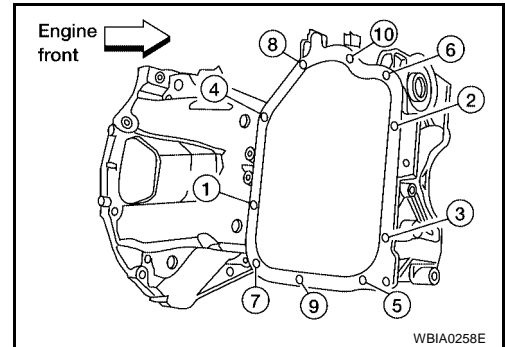

- a. Insert Tool between the lower oil pan and the upper oil pan.
- Be careful not to damage the mating surface.
 - Do not insert a screwdriver, this will damage the mating surfaces.
- b. Slide the Tool by tapping its side with a hammer to remove the lower oil pan from the upper oil pan.

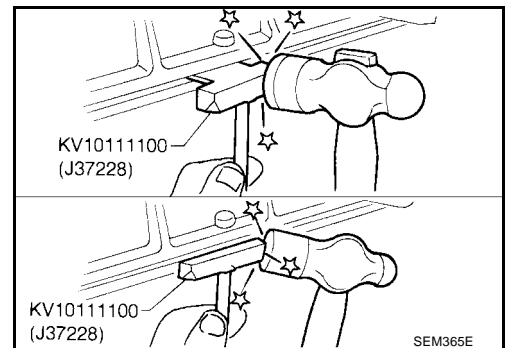

37. Loosen upper oil pan front bolts in the order shown.

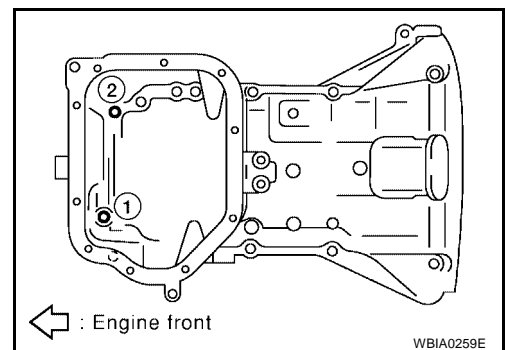


38. Temporarily install lower oil pan.
39. Support front of engine under oil pan using a jack.

FRONT TIMING CHAIN CASE

40. Remove the front timing chain case.

a. Loosen the front timing chain case bolts in the order shown.

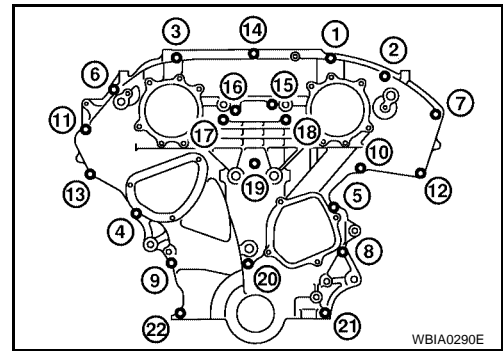

b. Insert the appropriate size tool into the notch (1) at the top of the front timing chain case as shown.


c. Pry off the case by moving the suitable tool (2) as shown.

- Cut liquid gasket for removal using Tool.

Tool number : KV10111100 (J37228)

CAUTION:

- Do not use a screwdriver or similar tool.
- After removal, handle carefully so it does not bend, or warp under a load.

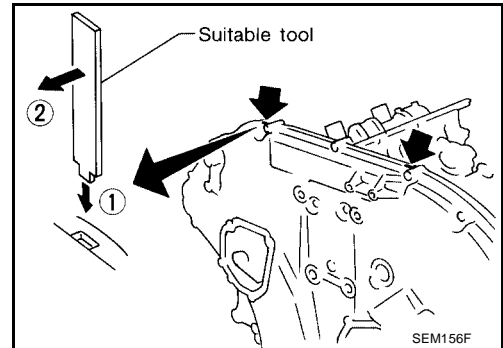


41. Remove the front oil seal from the front timing chain case using a suitable tool.

CAUTION:

Do not damage the front cover.


42. Remove timing chain and related parts. Refer to [EM-46](#), "[REMOVAL](#)".

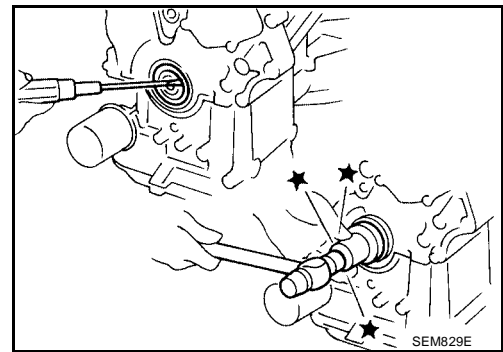

43. Use a scraper to remove all of the old Silicone RTV Sealant from the front timing chain case and opposite mating surfaces.

CAUTION:


Do not damage the mating surfaces.

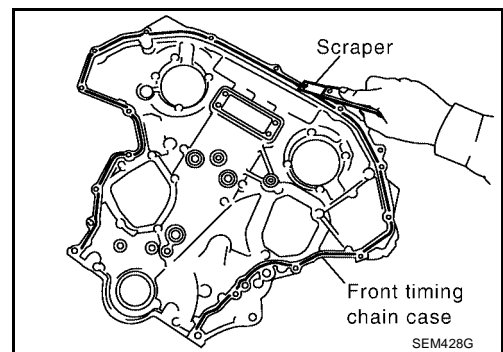


FRONT TIMING CHAIN CASE

INSTALLATION


1. Install timing chain and related parts. Refer to [EM-67, "INSTALLATION"](#) .
2. Install dowel pins (right and left) into front timing chain case up to a point close to taper in order to shorten protrusion length.

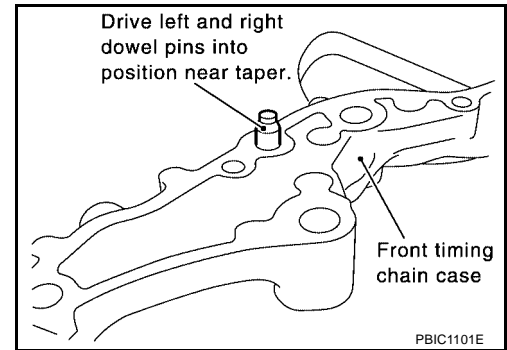

3. Install the front oil seal on the front timing chain case. Apply new engine oil to the oil seal edges.
 - Install it so that each seal lip is oriented as shown.

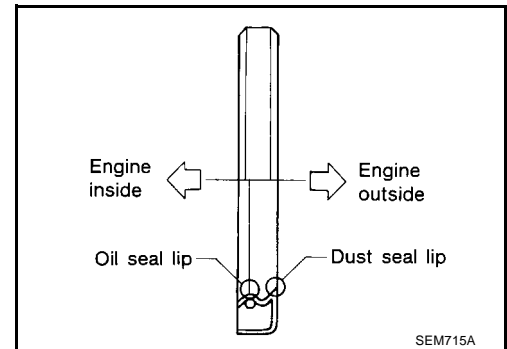


- Make sure the garter spring is in position and seal lip is not inverted.

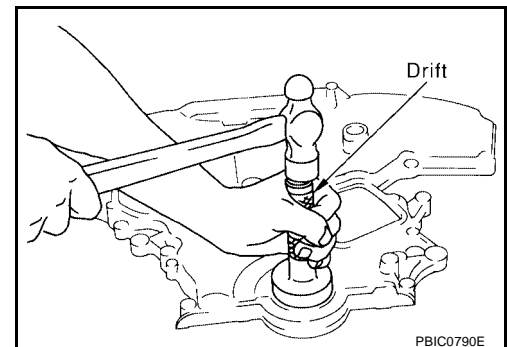


FRONT TIMING CHAIN CASE

4. Apply Silicone RTV Sealant to front timing chain case as shown.
 - Use Genuine Silicone RTV Sealant, or equivalent. Refer to [MA-10, "RECOMMENDED FLUIDS AND LUBRICANTS"](#).
 - Before installation, wipe off the protruding sealant.
 - Install dowel pin on the rear timing chain case into dowel pin hole in front timing chain case.

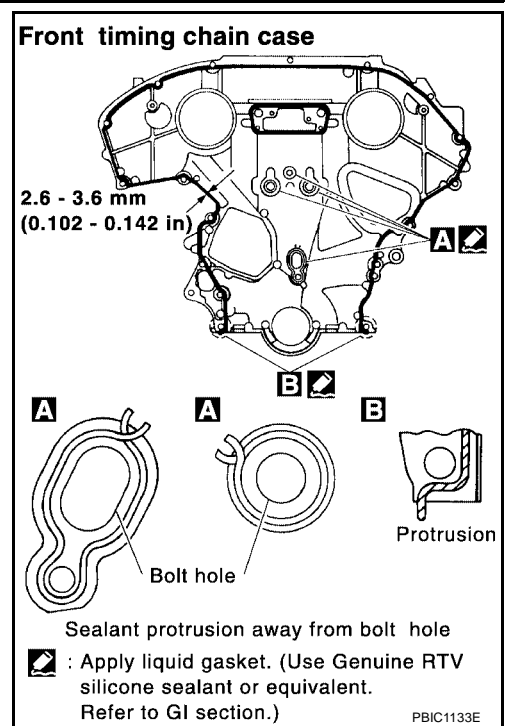


5. Apply Silicone RTV Sealant to top surface of oil pan (upper) as shown.
 - Use Genuine Silicone RTV Sealant, or equivalent. Refer to [MA-10, "RECOMMENDED FLUIDS AND LUBRICANTS"](#).

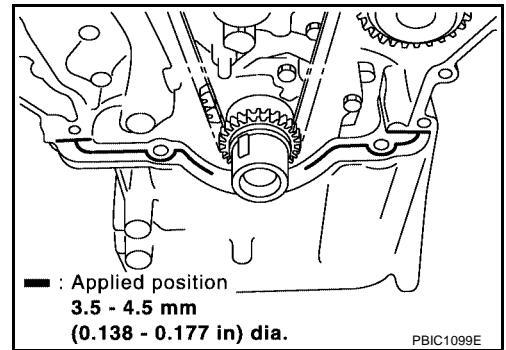


6. Install front timing chain case.
 - a. Install lower end of front timing chain case tightly onto top surface of oil pan (upper).

CAUTION:

Be careful that oil pan gasket is in place.

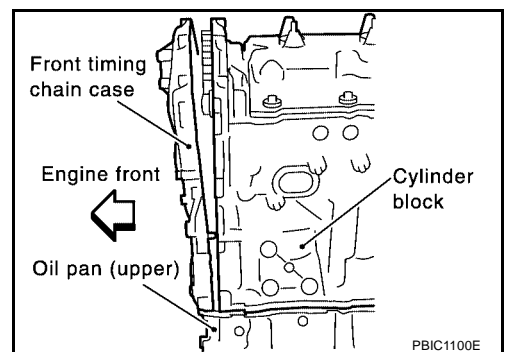

- b. While pressing front timing chain case from its front and top shown, hammer dowel pin until the outer end becomes flush with surface.

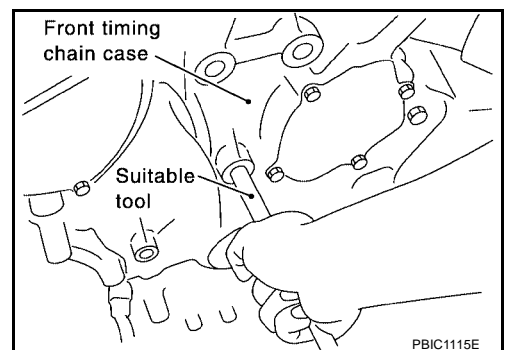

FRONT TIMING CHAIN CASE


7. Loosely install the front timing chain case bolts.

Bolt position	Bolt diameter
1, 2	: 8 mm (0.31 in)
3 – 22	: 6 mm (0.24 in)

8. Tighten the front timing chain case bolts in the order shown.


- Retighten the front timing chain case bolts in the order shown.

Bolt position	Tightening specification
1, 2	: 25.5 - 31.4 N·m (2.6 - 3.2 kg-m, 18.8 - 23.1 ft-lb)
3 – 22	: 11.8 - 13.7 N·m (1.2 - 1.4 kg-m, 8.7 - 10.1 ft-lb)

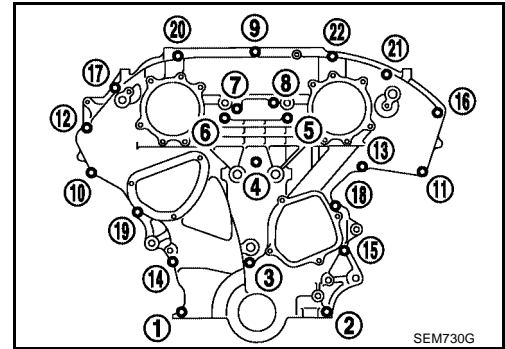


9. Install the upper oil pan front bolts in the order shown.

Upper oil pan front bolts	: 15.7 - 18.6 N·m (1.6 - 1.8 kg-m, 12 - 13 ft-lb)
----------------------------------	--

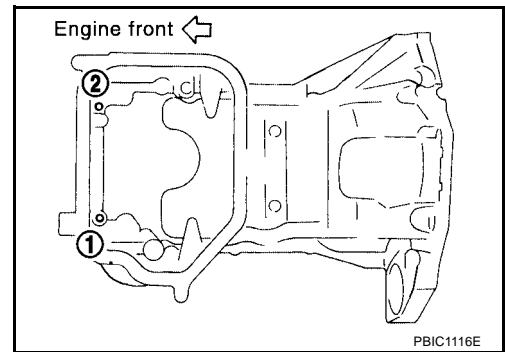

10. Install IVT control valve covers as follows:


a. Install new collared O-rings in front cover oil hole (LH and RH sides).

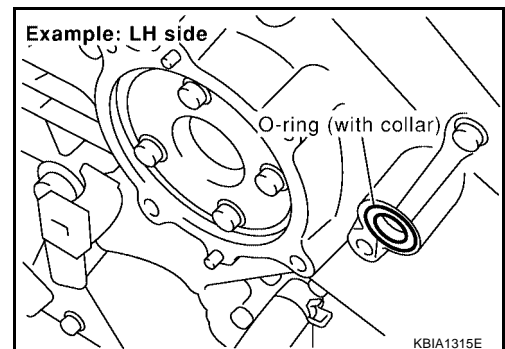

b. Install new seal rings on the IVT control covers.

c. Apply Silicone RTV Sealant to the IVT control covers.


- Use Genuine Silicone RTV Sealant, or equivalent. Refer to [GI-43, "RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS"](#).

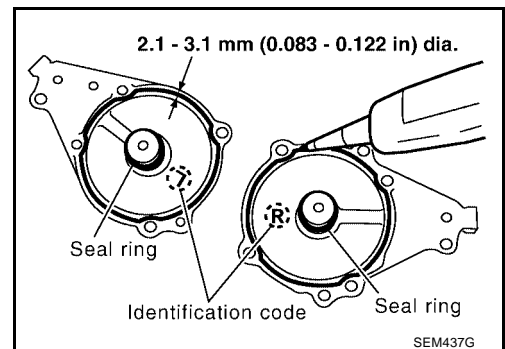

FRONT TIMING CHAIN CASE

- Being careful not to move the seal ring from the installation groove, align the dowel pins on the chain case with the holes to install the IVT control covers.
- Tighten the intake valve timing control cover bolts in the order shown.

Intake valve timing control cover bolts : 9.81 - 12.7 N·m (1.0 - 1.2 kg·m, 87 - 112 in-lb)

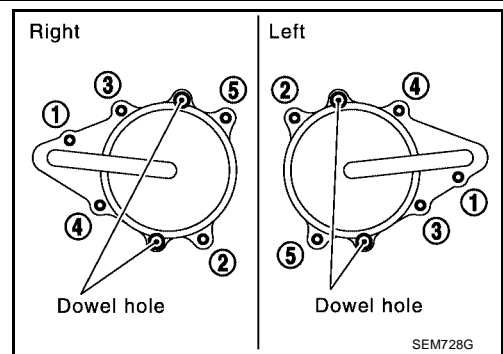


11. Apply liquid gasket and install the water pump cover and the chain tensioner cover.

Water pump cover bolts : 10 - 12 N·m (1.0 - 1.3 kg·m, 87 - 112 in-lb)

Chain tensioner cover bolts : 10 - 12 N·m (1.0 - 1.3 kg·m, 87 - 112 in-lb)

- Use Genuine Silicone RTV Sealant or equivalent. Refer to [GL-43. "RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS"](#).


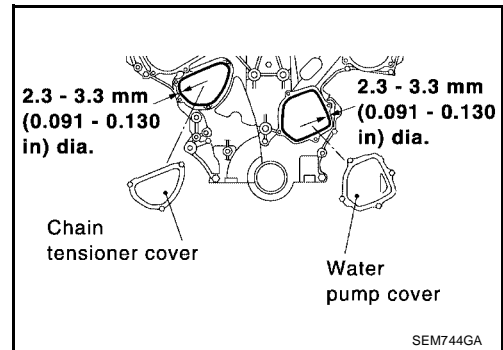


12. Install crankshaft pulley and tighten the bolt in two steps.

- Lubricate thread and seat surface of the bolt with new engine oil.
- Apply a paint mark for the second step of angle tightening.

Step 1 : 39 - 49 N·m (4.0 - 5.0 kg·m, 29 - 36 ft-lb)

Step 2 : 60° - 65° degrees clockwise

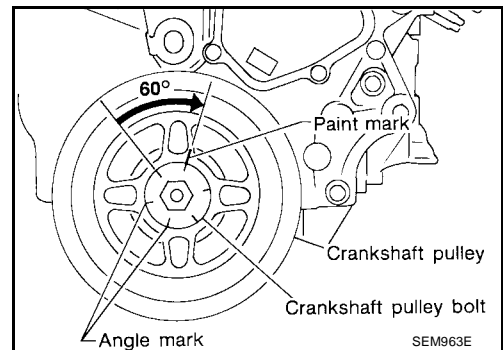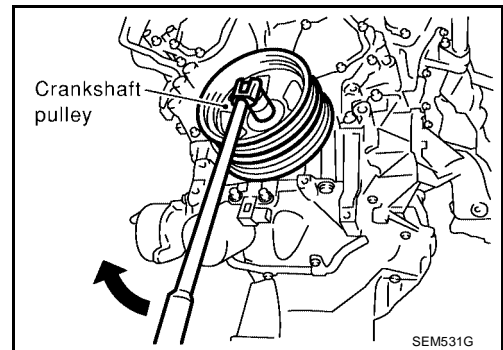

13. Rotate crankshaft pulley in normal direction (clockwise when viewed from front) to confirm it turns smoothly.

14. For the following operations, perform steps in the reverse order of removal.

NOTE:

If hydraulic pressure inside chain tensioner drops after removal/installation, slack in the guide may generate a pounding noise during and just after engine start. This is normal. Noise will stop after hydraulic pressure rises.

TIMING CHAIN


PF1:13028

EBS00F34

TIMING CHAIN

Removal and Installation

SEC. 120•130•150•210•275

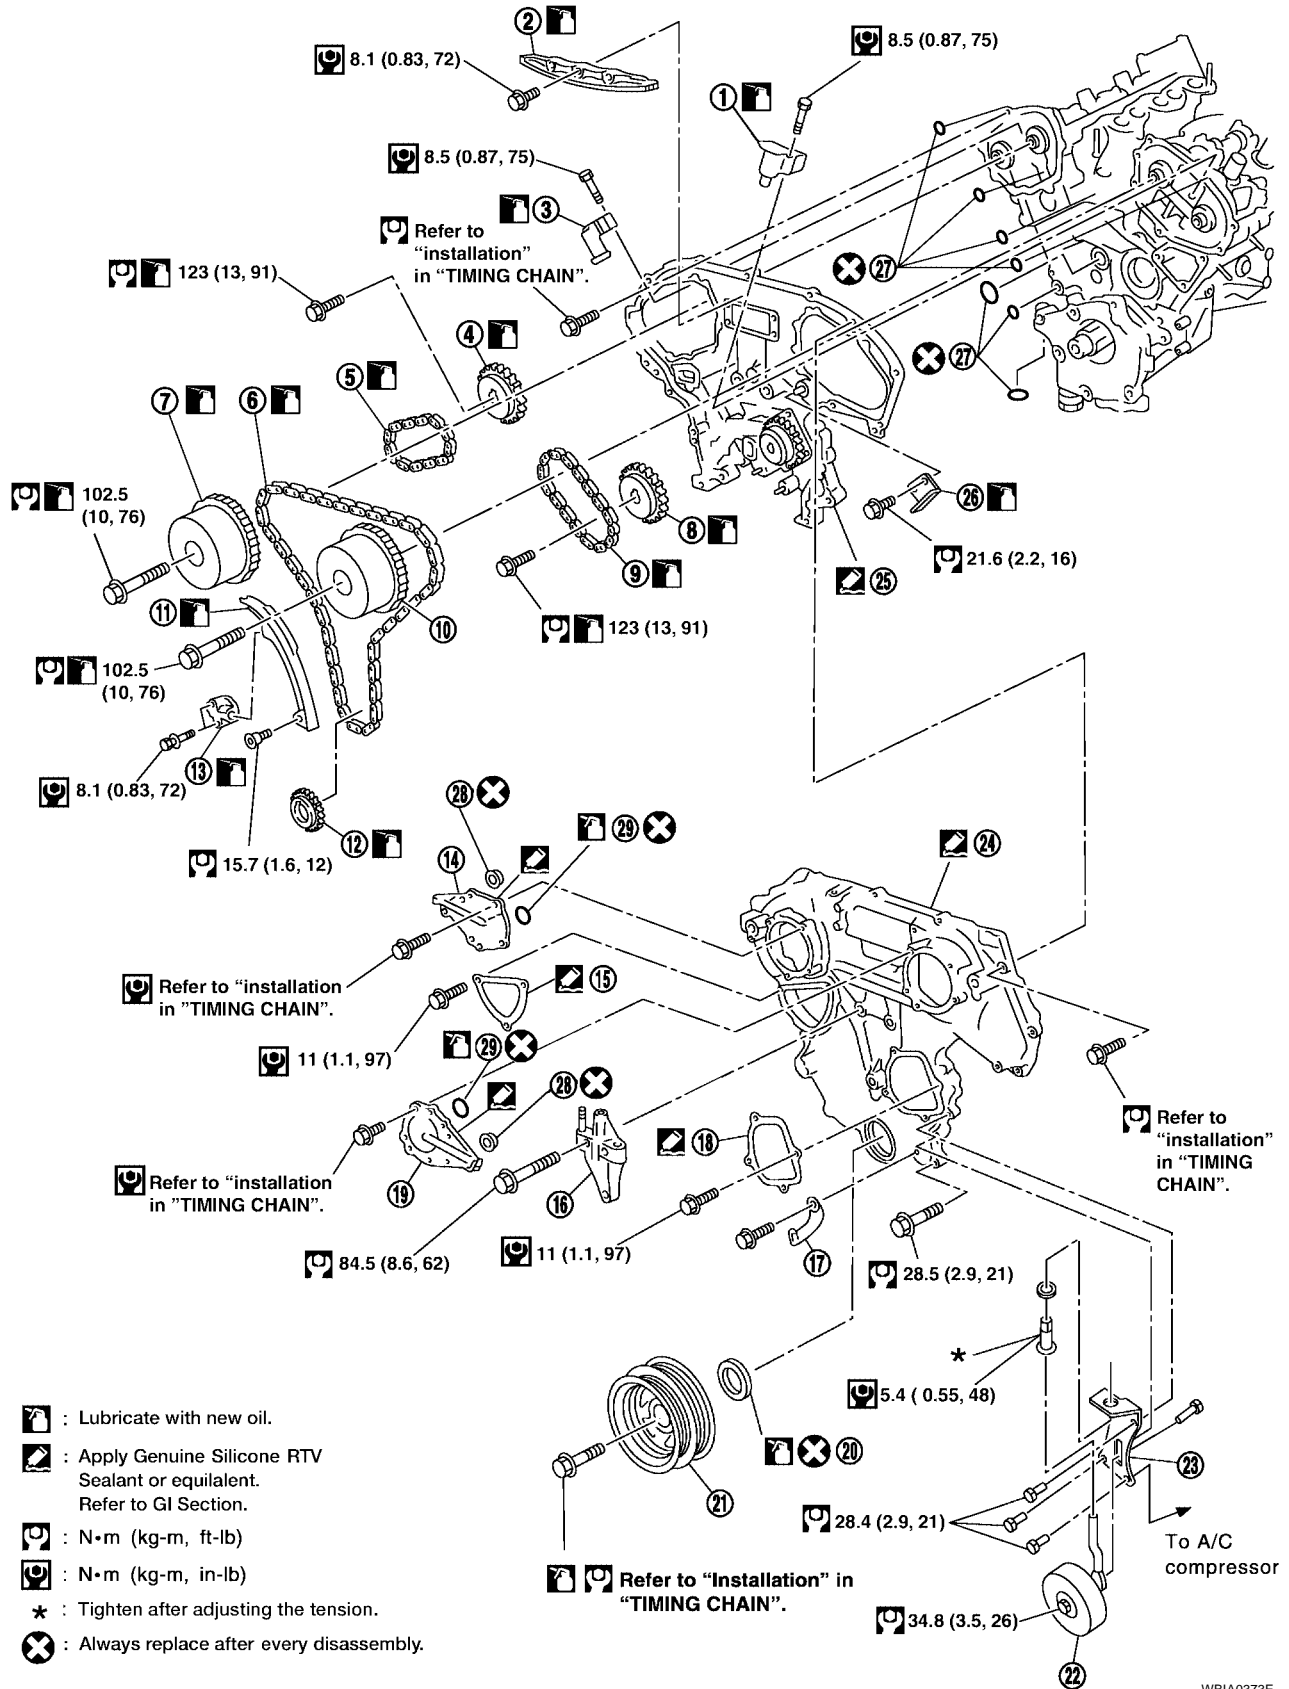

WBIA0373E

TIMING CHAIN

- | | | |
|------------------------------------|-------------------------------------|-----------------------------|
| 1. Timing chain tensioner | 2. Internal chain guide | 3. Timing chain tensioner |
| 4. Camshaft sprocket (EXH) | 5. Timing chain (secondary) | 6. Timing chain (primary) |
| 7. Camshaft sprocket (INT) | 8. Camshaft sprocket (EXH) | 9. Timing chain (secondary) |
| 10. Camshaft sprocket (INT) | 11. Slack guide | 12. Crankshaft sprocket |
| 13. Timing chain tensioner | 14. IVT control valve cover - right | 15. Chain tensioner cover |
| 16. RH engine mounting bracket | 17. Water hose clamp | 18. Water pump cover |
| 19. IVT control valve cover - left | 20. Front oil seal | 21. Crankshaft pulley |
| 22. Idler pulley | 23. Idler pulley bracket | 24. Front timing chain case |
| 25. Rear timing chain case | 26. Timing tension guide | 27. O-ring |
| 28. Collared O-ring | 29. Seal ring | |

CAUTION:


- After removing timing chain, do not turn the crankshaft and camshaft separately, or the valves will strike the pistons.
- When installing camshafts, chain tensioners, oil seals, or other sliding parts, lubricate contacting surfaces with new engine oil.
- Apply new engine oil to bolt threads and seat surfaces when installing camshaft sprockets, camshaft brackets, and crankshaft pulley.
- Before disconnecting fuel hose, release fuel pressure. Refer to [EC-51, "FUEL PRESSURE RELEASE"](#).
- Before removing the upper oil pan, remove the crankshaft position sensor (POS).
- Be careful not to damage sensor edges.
- Do not spill engine oil or coolant on drive belts.

NOTE:

- This section describes procedures for removal/installation procedure of the front timing chain case and timing chain related parts, and rear timing chain case, when oil pan (upper) needs to be removed/installed for engine overhaul, etc.
- To remove/install front timing chain case, timing chain, and its related parts without removing oil pan (upper), refer to [EM-45, "Removal and Installation"](#).

REMOVAL

1. Release the fuel pressure. Refer to [EC-51, "FUEL PRESSURE RELEASE"](#).
2. Disconnect the battery negative terminal.
3. Drain the engine cooling system. Refer to [MA-14, "DRAINING ENGINE COOLANT"](#).
4. Drain engine oil. Refer to [MA-16, "Changing Engine Oil"](#).
5. Remove engine cover using power tool.
6. Remove side engine covers.
7. Remove the intake air duct with the air cleaner case lid and mass air flow sensor. Refer to [EM-15, "Removal and Installation"](#).
8. Remove the engine coolant reservoir.
9. Disconnect the fuel rail quick connector at the vehicle piping side.
10. Remove the cowl top. Refer to [EI-19, "Removal and Installation"](#).
11. Remove the windshield wiper assembly. Refer to [WW-26, "Removal and Installation for Wiper Motor and Linkage"](#).
12. Remove the IPDM E/R and position aside. Remove the bracket.
13. Remove the front RH wheel and tire using power tool.
14. Remove the engine undercover.
15. Remove the RH inner fender splash shield.
16. Remove the drive belts and idler pulley. Refer to [EM-14, "Removal and Installation"](#).
17. Recover the A/C system R134a and remove the A/C compressor. Refer to [ATC-116, "Evacuating System and Charging Refrigerant"](#).

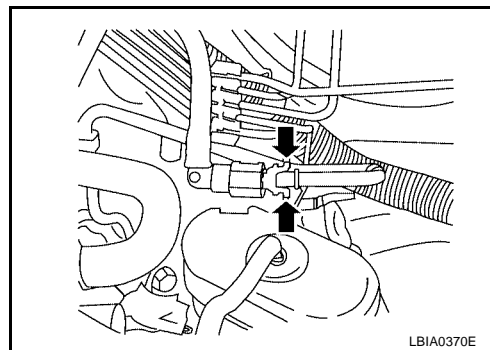


TIMING CHAIN

18. Remove engine oil cooler pipe bolts.
19. Remove the power steering oil pump and reservoir tank with lines attached and position them aside.
20. Remove the upper and lower oil pans. Refer to [EM-30, "Removal and Installation"](#) .
21. Remove the generator. Refer to [SC-34, "Removal and Installation"](#) .
22. Disconnect the engine harness and position aside.
23. Remove the A/C low pressure line. Refer to [ATC-122, "Removal and Installation for Low-pressure Flexible Hose"](#) .
24. Support the engine and remove the RH engine mounting insulator, mount and bracket. Refer to [EM-116, "Removal and Installation"](#) .
25. Remove the chain tensioner cover and water pump cover.
26. Remove the IVT control covers, right and left. Loosen the IVT control cover bolts in the order shown.

NOTE:

The shaft in the cover is inserted into the center hole of the intake camshaft sprocket. Remove the cover by pulling straight out until the cover disengages from the camshaft sprocket.

27. On A/T vehicles, remove the starter motor. Refer to [SC-18, "4-Speed A/T Models"](#) or [SC-19, "5-Speed A/T Models"](#) .
28. Remove the intake manifold collector. Refer to [EM-18, "REMOVAL"](#) .

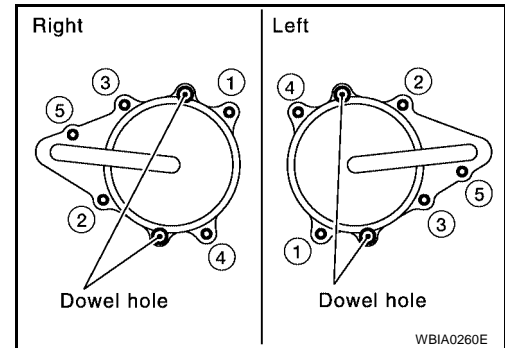


29. Remove the six ignition coils.

NOTE:


Note locations for installation.

30. Remove the six spark plugs.
31. Remove the engine oil dipstick.

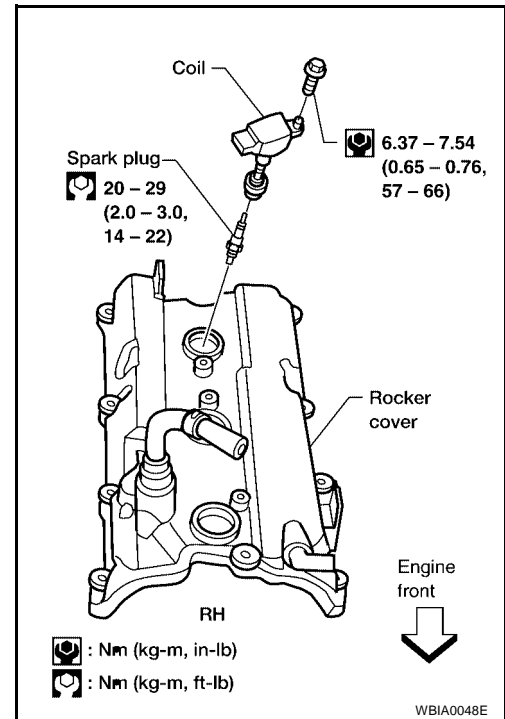


TIMING CHAIN


32. Remove the rocker covers. Loosen the rocker covers bolts in the order shown.

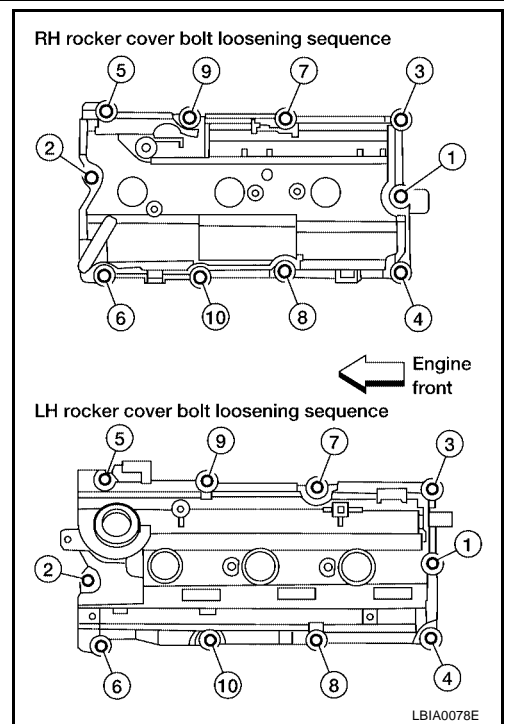

33. Remove the IVT control solenoid valves.
- Discard the gaskets and use new gaskets for installation.

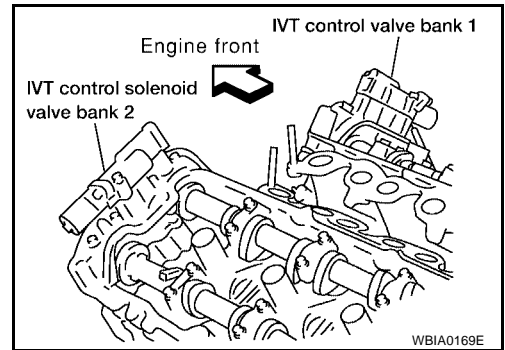


34. Obtain compression TDC of No. 1 cylinder as follows:
- Rotate crankshaft pulley clockwise to align timing mark (grooved line without color) with timing indicator.

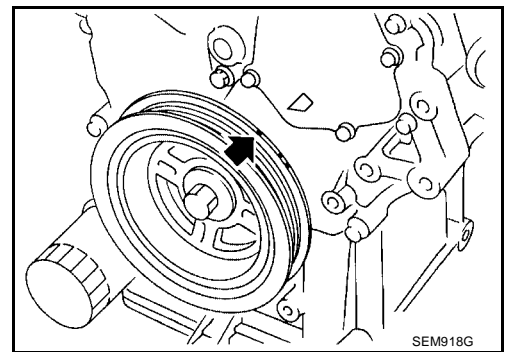

- Check that intake and exhaust camshaft lobes on No. 1 cylinder (right bank of engine) are located as shown.

 - If not, turn the crankshaft one revolution (360°) and align as shown.

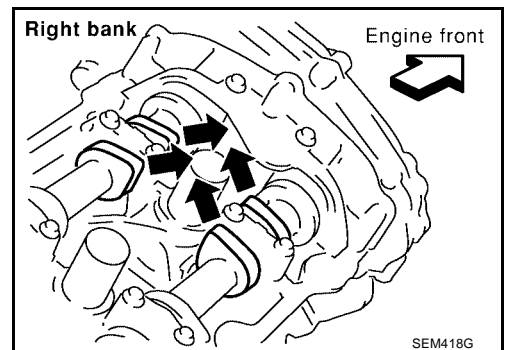

A
EM
C
D
E
F
G
H
I
J
K
L
M



TIMING CHAIN

35. Lock the ring gear using Tool attached to the mounting bolt hole.

Tool number : KV10117700 (J44716)


CAUTION:

Do not damage the ring gear teeth, or the signal plate teeth behind the ring gear, when setting the stopper.

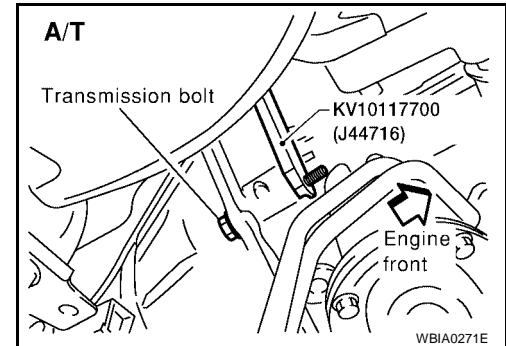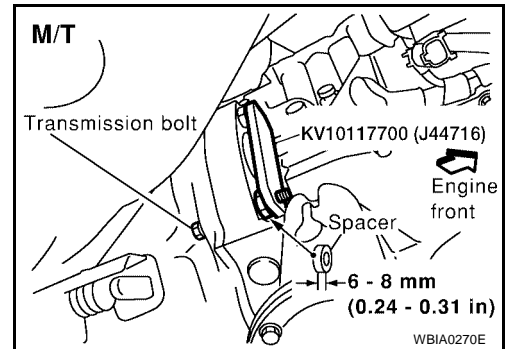

36. Remove the crankshaft pulley as follows:


a. Loosen crankshaft pulley mounting bolt using pulley holder and locate bolt seating surface at 10 mm (0.39 in) from its original position.

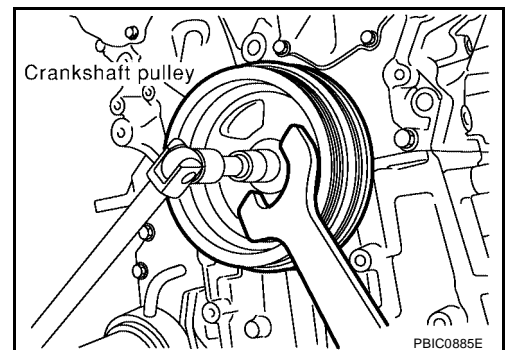

b. Position a pulley puller at recess hole of crankshaft pulley to remove crankshaft pulley.


CAUTION:

Do not use a puller claw on crankshaft pulley periphery.

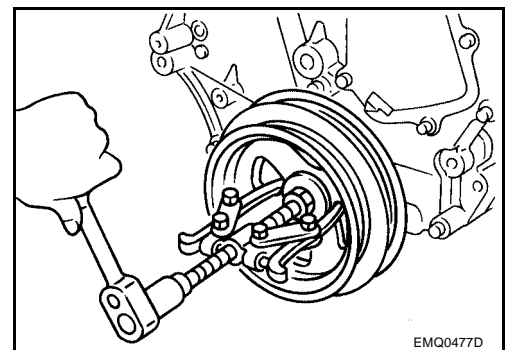

37. Remove the front timing chain case.

a. Loosen the front timing chain case bolts in the order shown.

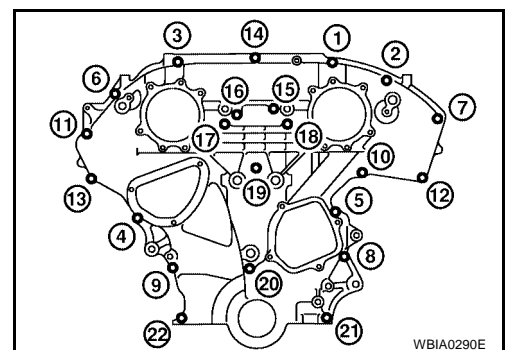


TIMING CHAIN


- b. Insert the appropriate size tool into the notch (1) at the top of the front timing chain case as shown.
- c. Pry off the case by moving the suitable tool (2) as shown.
 - Use seal cutter or an equivalent tool to cut liquid gasket for removal.

CAUTION:

- Do not use a screwdriver or similar tool.
- After removal, handle carefully so it does not bend, or warp under a load.

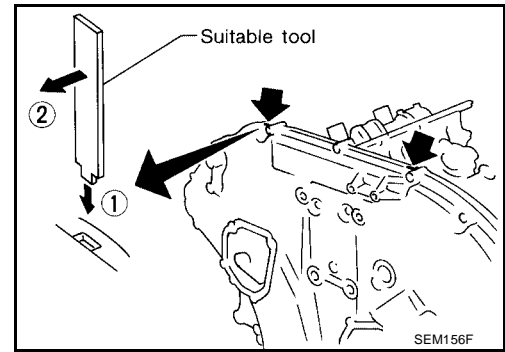


38. Remove the internal chain guide.

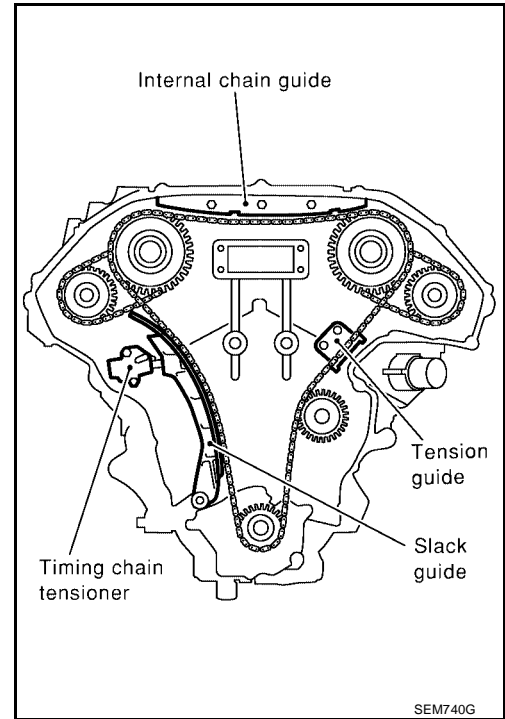

39. Remove the timing chain tensioner and slack guide.

- Place paint marks on the timing chain and sprockets to indicate the correct position of the components for installation.

- a. Pull lever down and release plunger stopper tab. Plunger stopper tab can be pushed up to release (coaxial structure with lever).
- b. Insert stopper pin into tensioner body hole to hold lever, and keep the tab released. An Allen wrench [2.5 mm (0.098 in)] is used for a stopper pin as an example.
- c. Insert plunger into tensioner body by pressing the slack side chain guide.

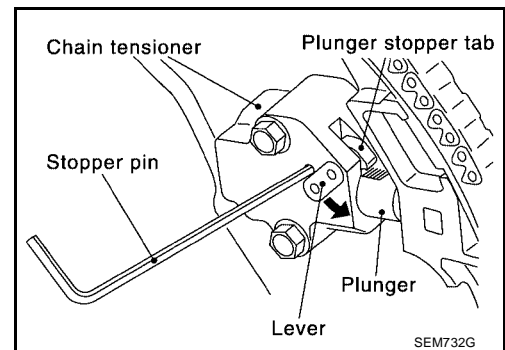


TIMING CHAIN


- d. Keep the slack side chain guide pressed and hold it by pushing the stopper pin through the lever hole and body hole.
 - e. Remove the timing chain tensioner installation bolts and remove the timing chain tensioner.
 - f. Remove slack guide installation bolt and the slack guide.
40. Remove primary timing chain and crankshaft sprocket.

CAUTION:


After removing timing chain, do not turn the crankshaft and camshaft separately, or the valves will strike the pistons.

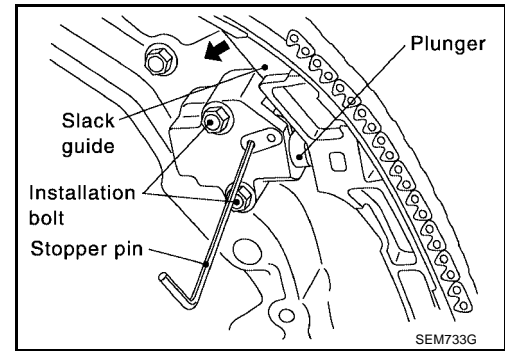

41. Attach a suitable stopper pin to the right and left camshaft chain tensioners (for secondary timing chains).

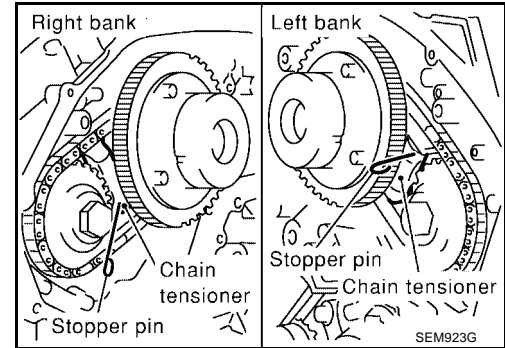


42. Remove the intake and exhaust camshaft sprocket bolts.
- Apply paint to the timing chain and camshaft sprockets for alignment during installation.
 - Secure the hexagonal portion of the camshaft using a wrench to loosen the bolts as shown.

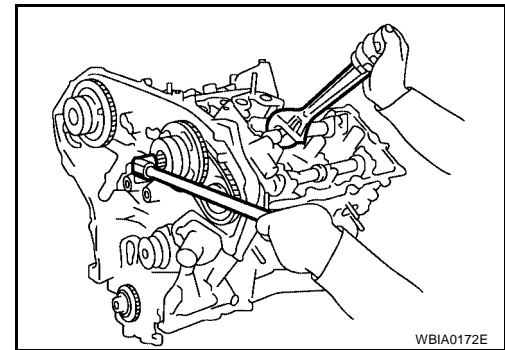

43. Remove the secondary timing chains with camshaft sprockets.
- a. Rotate camshaft slightly, and slacken timing chain of timing chain tensioner side.
 - b. Insert metal or resin plate [0.5 mm (0.020 in)] into guide between timing chain and chain tensioner plunger. Remove cam sprocket and secondary timing chain with timing chain removed from guide groove.
- Intake camshaft sprocket is two-for-one structure of primary and secondary sprockets.
 - Handle the intake sprockets as an assembly.


CAUTION:

- Chain tensioner plunger can move while stopper pin is inserted in tensioner. Plunger can come out of tensioner when timing chain is removed. Use caution during removal.
- Avoid impact or dropping the intake sprockets.

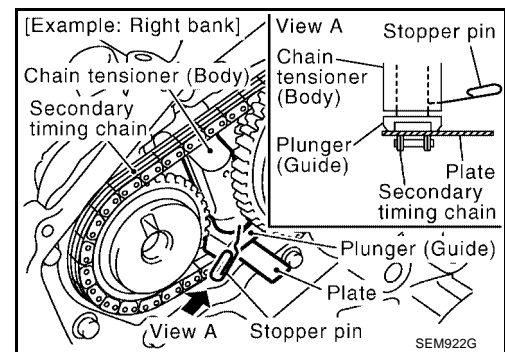

TIMING CHAIN

- Do not disassemble the intake sprockets (never loosen bolts A and B as shown).

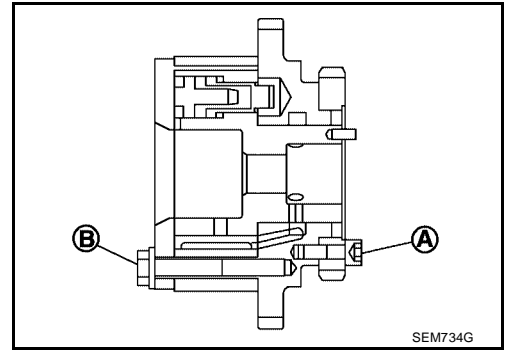


A

EM

C

D

44. Remove the timing chain tension guide.
45. If necessary remove the water pump.

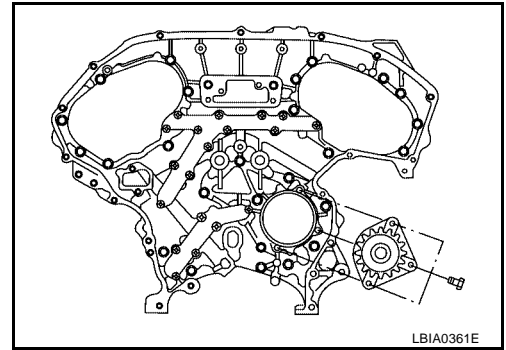

E

F


G

H

46. Remove the rear timing chain case.

CAUTION:

- Do not remove the plate metal cover for the oil passage.
- After removing the chain case, do not apply any load to the case that might bend it.

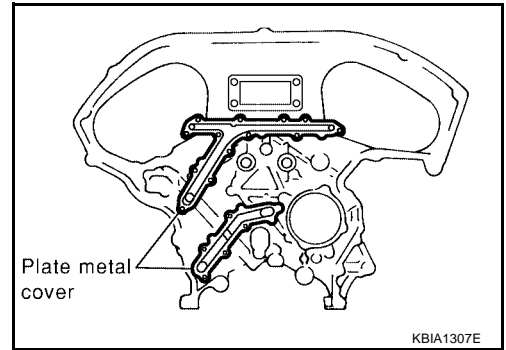


I

J

K

- a. Loosen and remove the rear timing chain case bolts in the order shown.

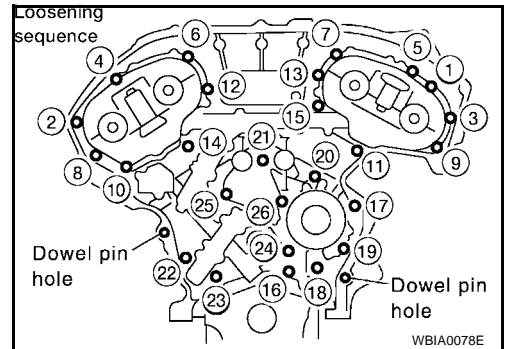


L

M



TIMING CHAIN

- b. Cut the sealant using Tool and remove the rear timing chain case.

Tool number : KV10111100 (J37228)

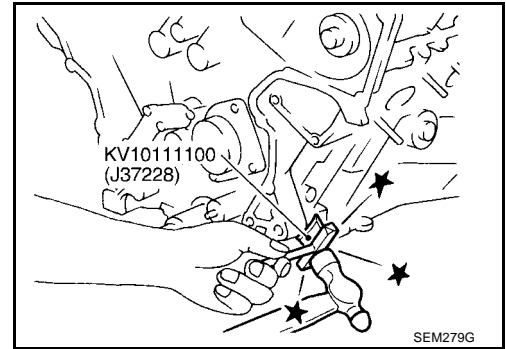


47. Disconnect the inlet coolant hose.
48. Remove the inlet coolant housing, gasket and thermostat.
49. Remove O-rings on the cylinder head and cylinder block.

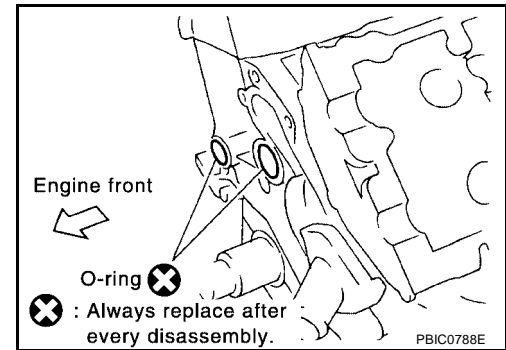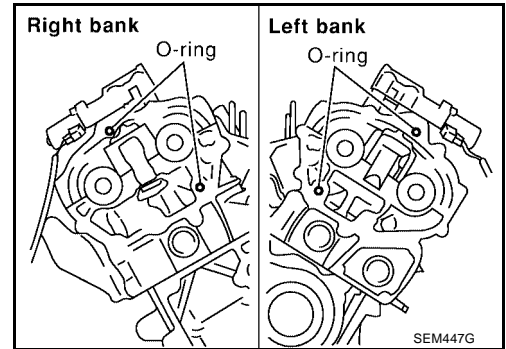

TIMING CHAIN


50. Loosen the No. 1 camshaft bracket bolts in several steps in the order shown and remove No. 1 camshaft brackets.
51. Remove the camshaft chain tensioners (for secondary timing chains).

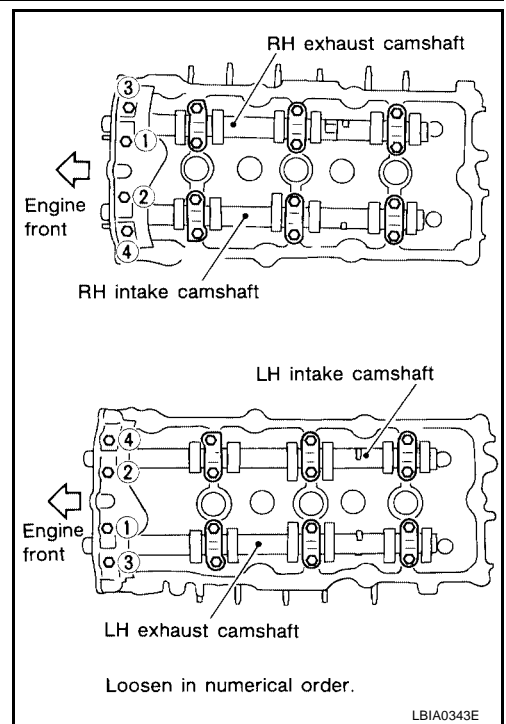

52. Use a scraper to remove all of the old Silicone RTV Sealant from the front and rear timing chain case and opposite mating surfaces.

CAUTION:


Do not damage the mating surfaces.

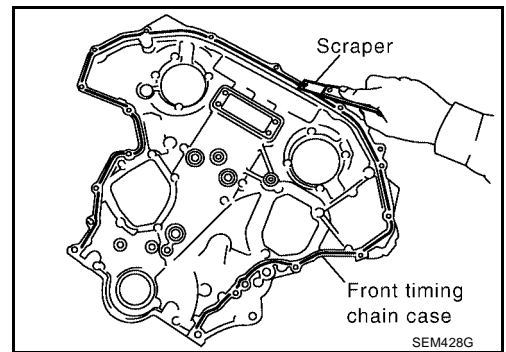

53. Remove all old Silicone RTV Sealant from all the bolt holes and bolts.

CAUTION:


Do not damage the threads or mating surfaces.

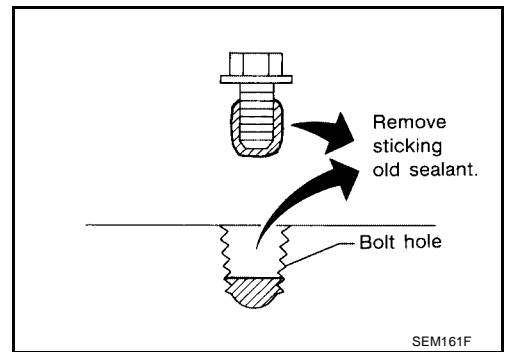

54. Use a scraper to remove all the old Silicone RTV Sealant from the water pump cover, chain tensioner cover and IVT control covers.


CAUTION:

Do not damage the mating surfaces.

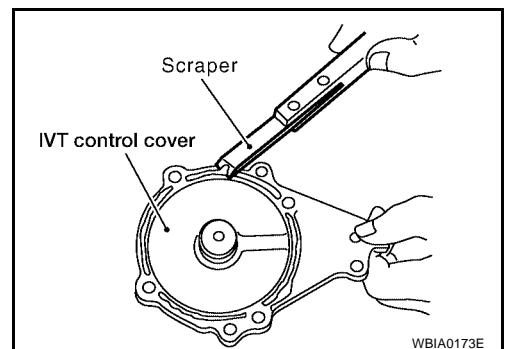


TIMING CHAIN

55. Remove the old Silicone RTV Sealant from the camshaft No. 1 bracket mating surface using a scraper.
- Do not scratch or damage the mating surface.

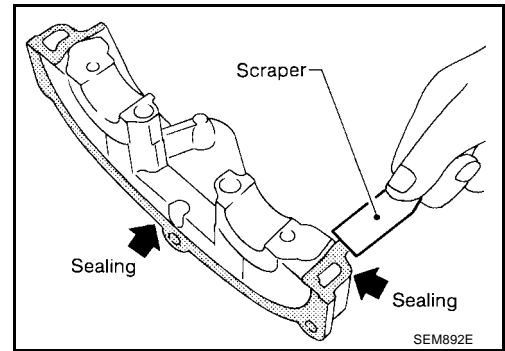


56. Remove the front oil seal from the front timing chain case using a suitable tool.

CAUTION:
Do not damage the front cover.

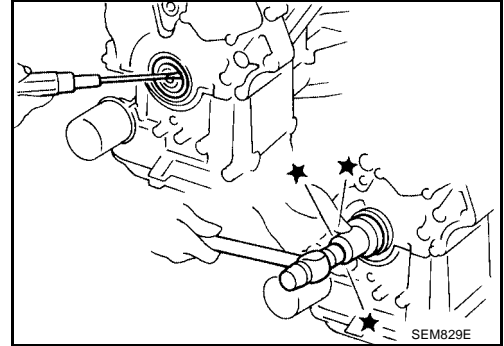

INSPECTION AFTER REMOVAL

Check for cracks and any excessive wear at the roller links of the timing chain. Replace the timing chain as necessary.

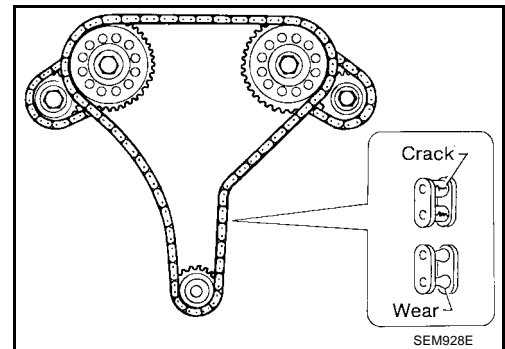


TIMING CHAIN

INSTALLATION

NOTE:

The figure shows the relationship between the mating mark on each timing chain and that on the corresponding sprocket, with the components installed.

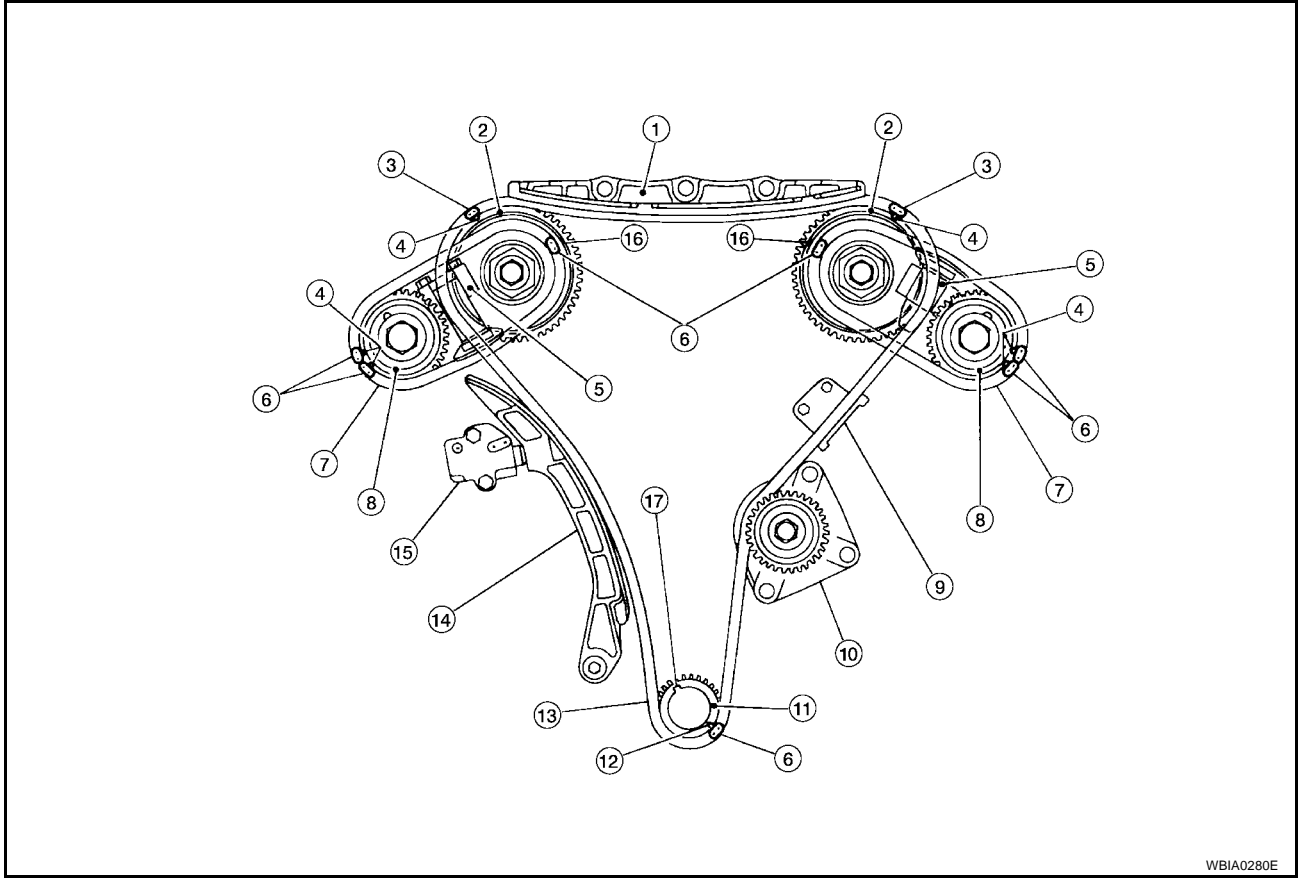


WBIA0280E

- | | | |
|-----------------------------|-------------------------------------|------------------------------------|
| 1. Internal chain guide | 2. Camshaft sprocket (intake) | 3. Mating mark (copper link) |
| 4. Mating mark (punched) | 5. Secondary timing chain tensioner | 6. Mating mark (gold link) |
| 7. Secondary timing chain | 8. Camshaft sprocket (exhaust) | 9. Tensioner guide |
| 10. Water pump | 11. Crankshaft sprocket | 12. Mating mark (notched) |
| 13. Primary timing chain | 14. Slack guide | 15. Primary timing chain tensioner |
| 16. Mating mark (back side) | 17. Crankshaft key | |

1. Install the camshaft chain tensioners (for secondary timing chains).


Camshaft chain tensioner bolts

: 7.0 - 10.0 N·m (0.8 - 1.0 kg·m, 62 - 88 in·lb)

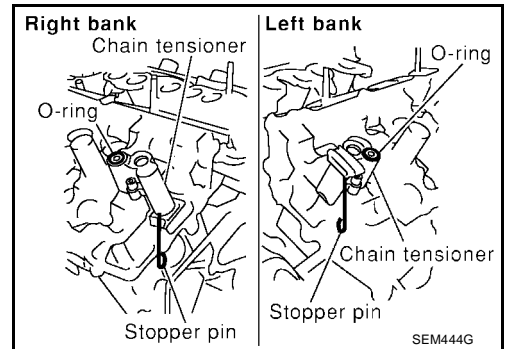

TIMING CHAIN


2. Before installing No. 1 camshaft bracket, apply sealant to mating surface.
 - Use Genuine Silicone RTV Sealant, or equivalent. Refer to [GI-43, "RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS"](#).
 - Before installation, wipe off any protruding sealant.
 - Refer to [EM-4, "Precautions for Liquid Gasket"](#).

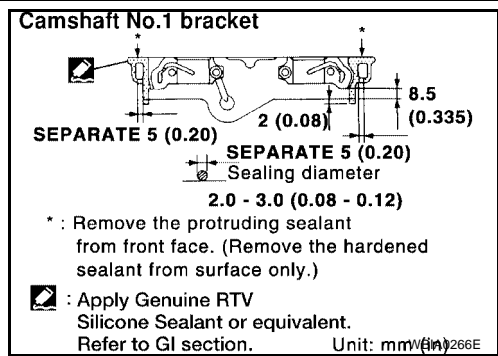

3. Tighten the No. 1 camshaft bracket in three steps, in the order shown.

No. 1 camshaft bracket bolts


- Step 1 : 1.96 N·m (0.2 kg-m, 17 in-lb)**
- Step 2 : 6 N·m (0.6 kg-m, 52 in-lb)**
- Step 3 : 8.30 - 10.3 N·m (0.90 - 1.00 kg-m, 74 - 91 in-lb)**

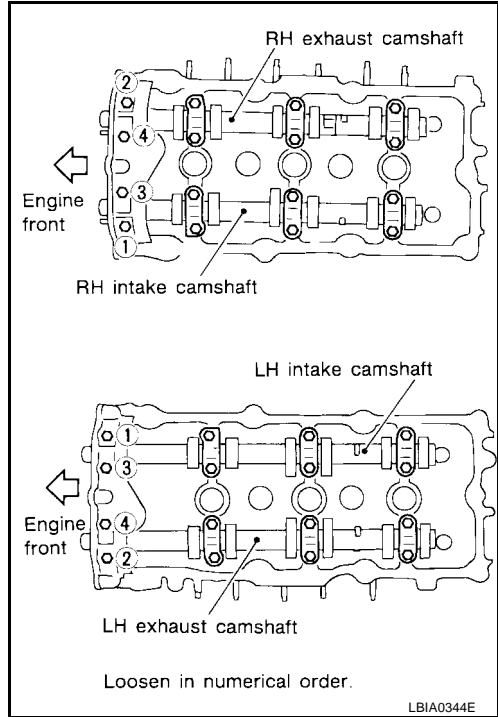

4. Install the thermostat, gasket and coolant inlet housing.


Coolant inlet housing bolts : 8.4 - 11.2 N·m (0.86 - 1.14 kg-m, 74.6 - 99.0 in-lb)

5. Install rear timing chain case as follows:
 - a. Install new O-rings on cylinder block.

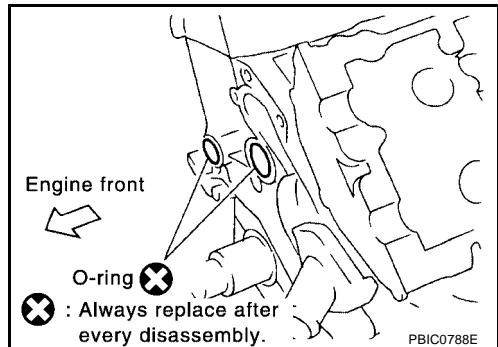


TIMING CHAIN

b. Install new O-rings on cylinder head.

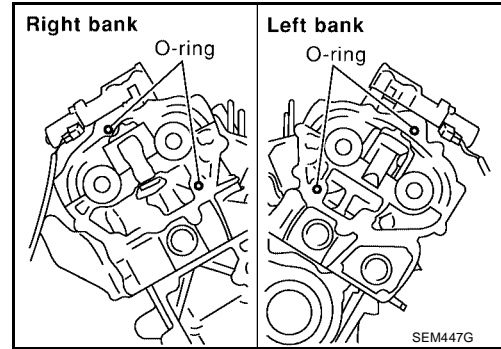

6. Apply Silicone RTV Sealant to rear timing chain case as shown.

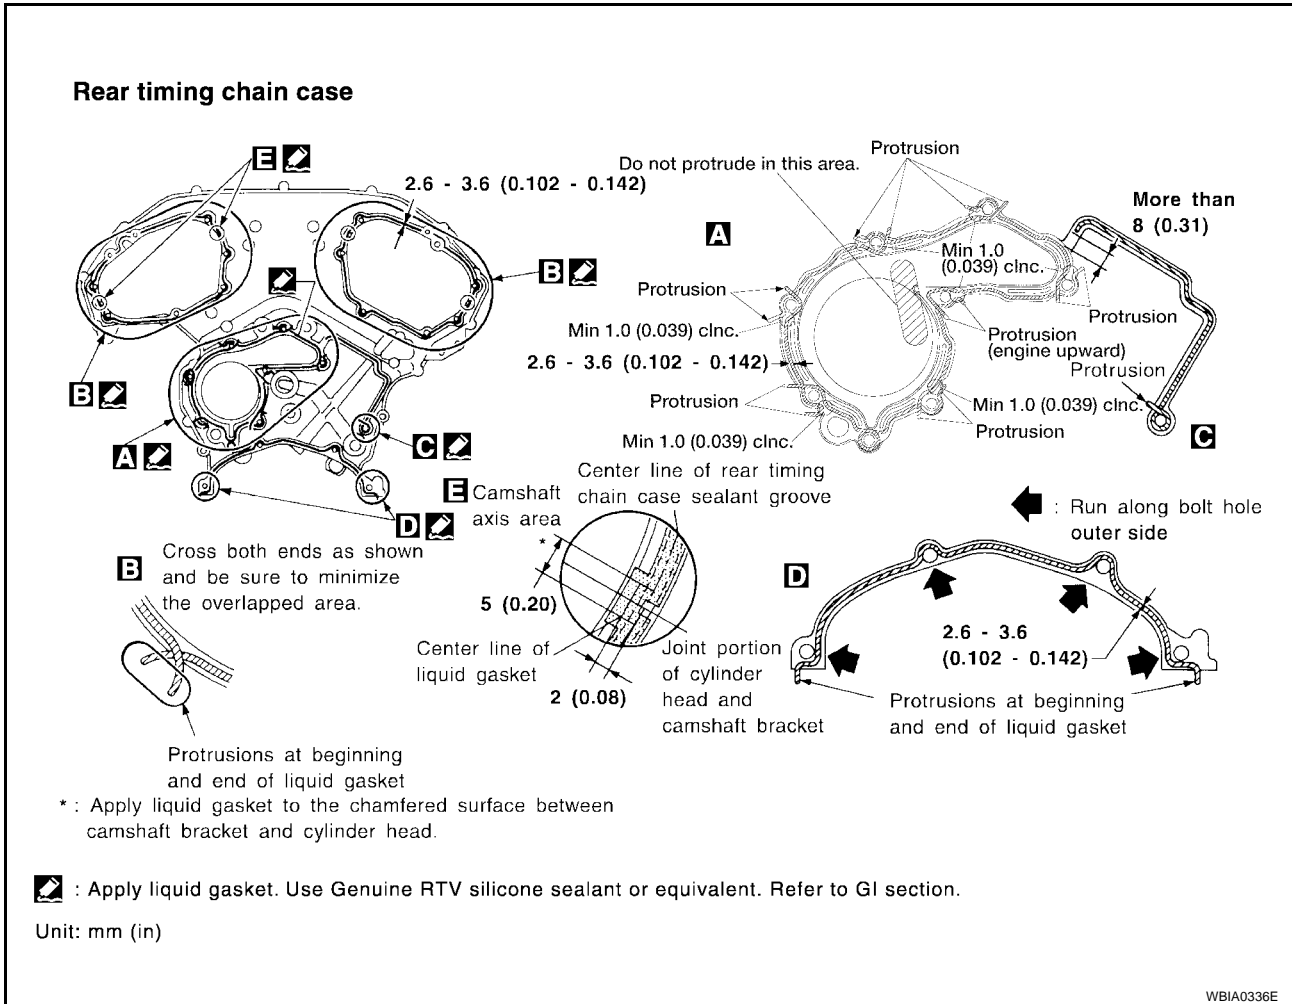


- Use Genuine Silicone RTV Sealant, or equivalent. Refer to [GI-43, "RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS"](#).
- Before installation, wipe off the protruding sealant.

TIMING CHAIN

7. Align the rear timing chain case with the dowel pins (RH and LH) on the cylinder block and install the case. Make sure the O-rings stay in place during installation.
 - a. Loosely install the rear timing chain case in the order shown. There are two bolt lengths used. Follow the chart below for proper bolt length specifications.

Bolt position	Bolt length
1, 2, 3, 6, 7, 8, 9, 10	20 mm (0.79 in)
4, 5, 11 - 26	16 mm (0.63 in)

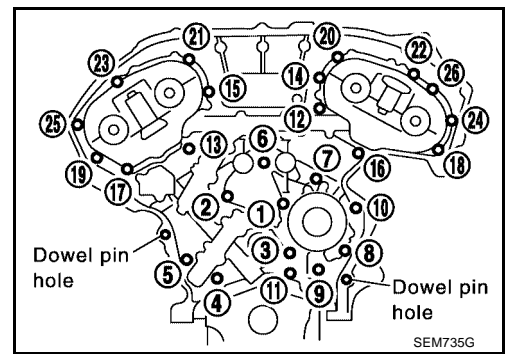

- b. After all bolts are initially tightened, retighten them in the order shown.

Rear timing chain case : 12 - 13 N·m (1.2 - 1.4 kg·m, 9 -10 ft·lb)

8. After installing rear timing chain case, check surface height difference between the rear timing chain case to cylinder block.

Standard : - 0.24 - 0.14 mm (-0.0094 - 0.0055 in)

- If not within standard, repeat above installation procedure.

9. Install the timing chain tension guide.


Timing chain tension guide bolts : 19.6 - 23.5 N·m (2.0 - 2.3 kg·m, 15 -17 ft·lb)

10. Position the crankshaft so No. 1 piston is set at TDC on the compression stroke.

- Make sure that the dowel pin hole, dowel pin and crankshaft key are located as shown.
 Camshaft dowel pin hole (intake side): at cylinder head upper face side in each bank.
 Camshaft dowel pin (exhaust side): at cylinder head upper face side in each bank.
 Crankshaft key: at cylinder head side of RH bank.


CAUTION:

Hole on small diameter side must be used for intake camshaft sprocket dowel pin. Do not misidentify (ignore big diameter side).

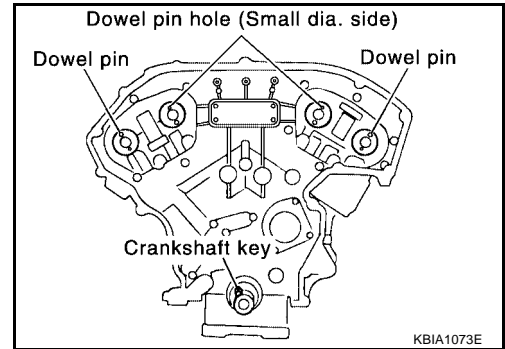

11. If necessary, install the water pump and water pump bolts.

Water pump bolts : 8.5 - 10.7 N·m (0.86 - 1.10 kg·m, 75-95 in·lb)

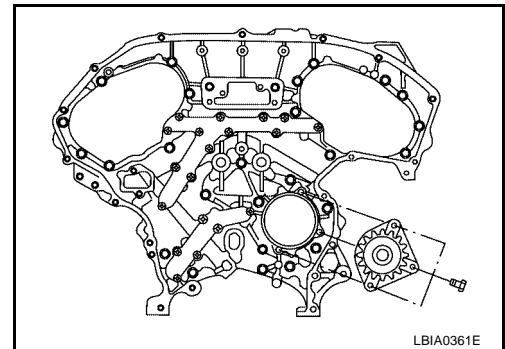


TIMING CHAIN

12. Install the secondary timing chains and camshaft sprockets.

CAUTION:

Matching marks between the timing chain and sprockets slip easily. Confirm all matching mark positions repeatedly during the installation process.

- Push the sleeve of the secondary chain tensioner and keep it pressed in with a stopper pin.

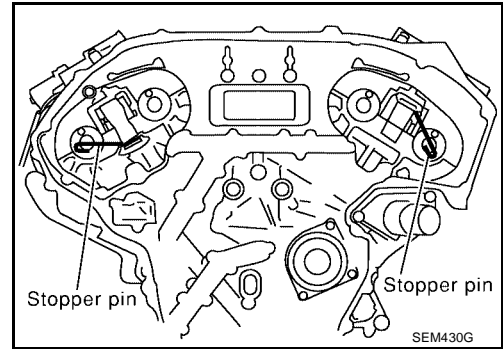


a. Align the matching marks on the secondary timing chain (gold link) with the ones on the intake and exhaust sprockets (stamped), and install them.


- Matching marks for the intake sprocket are on the back side of the secondary sprocket.
- There are two types of matching marks, round and oval types. They should be used for the RH and LH banks, respectively.
RH bank: use round type.
LH bank: use oval type.

b. Align the dowel pin and pin hole on the camshaft with the groove and dowel pin on the sprocket, and install them.

- On the intake side, align the pin hole on the small diameter side of the camshaft front end with the dowel pin on the back side of the camshaft sprocket, and install them.
- On the exhaust side, align the dowel pin on the camshaft front end with the pin groove on the camshaft sprocket, and install them.
- Camshaft sprocket bolts must be tightened in the next step. Tightening them by hand is enough to prevent the dislocation of the dowel pins.

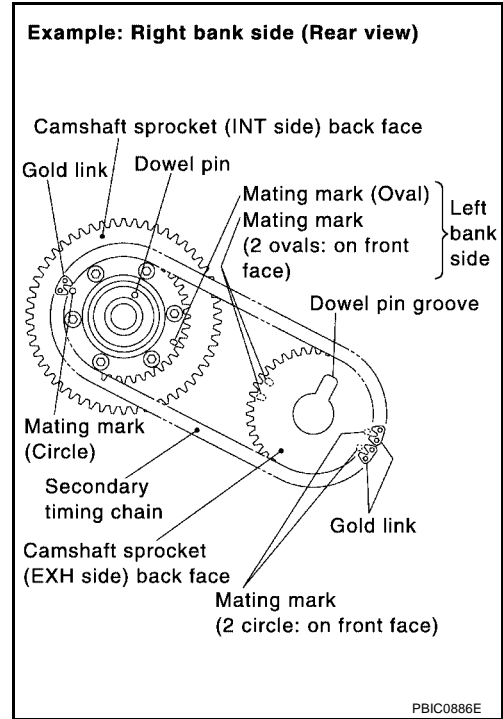


- It may be difficult to visually check the dislocation of mating marks during and after installation. To make the matching easier, make a mating mark on the sprocket teeth in advance with paint.

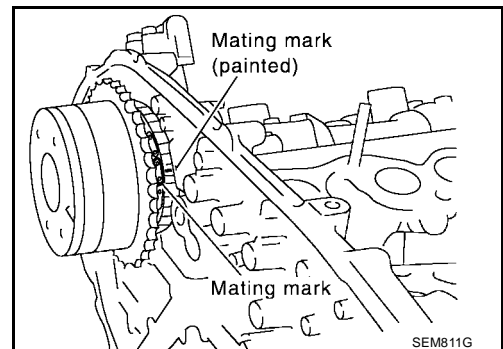

13. After confirming the mating marks are aligned, tighten the camshaft sprocket bolts.

- Secure the camshaft using a wrench at the hexagonal portion to tighten the camshaft sprocket bolts.


Camshaft sprocket bolts : 98 - 107 N-m (10.5 - 10.9 kg-m, 73 - 78 ft-lb)

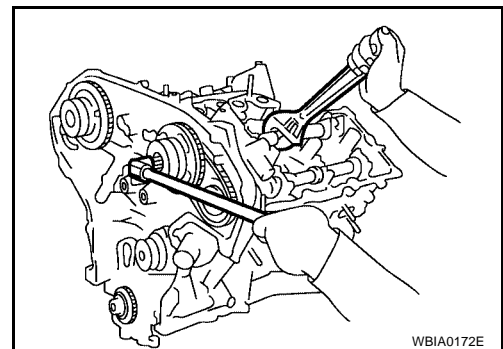

A
EM
C
D
E
F
G
H
I
J
K
L
M


TIMING CHAIN

14. Pull the stopper pins out from the timing chain tensioners (for secondary timing chains).

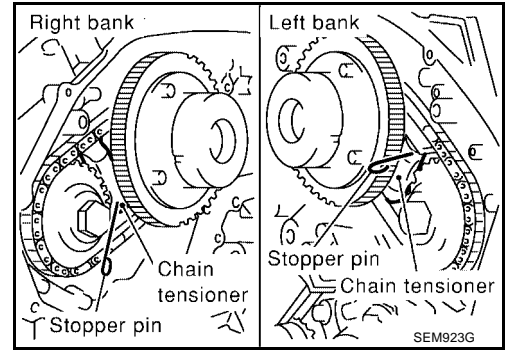


15. Install the crankshaft sprocket on the crankshaft.

- Make sure the mating marks on the crankshaft sprocket face the front of the engine.

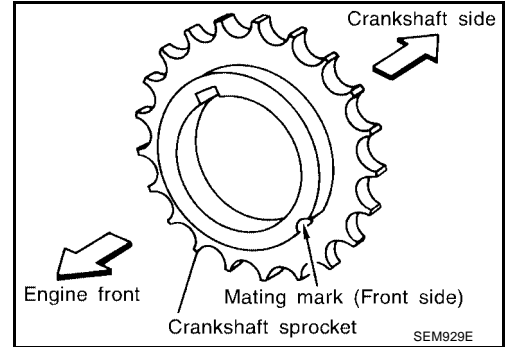

16. Install the primary timing chain.


- Install primary timing chain so the mating mark (punched) on camshaft sprocket is aligned with the copper link on the timing chain, while the mating mark (notched) on the crankshaft sprocket is aligned with the gold link on the timing chain, as shown.
- When it is difficult to align mating marks of the primary timing chain with each sprocket, gradually turn the camshaft using a wrench on the hexagonal portion to align it with the mating marks.
- During alignment, be careful to prevent dislocation of mating mark alignments of the secondary timing chains.

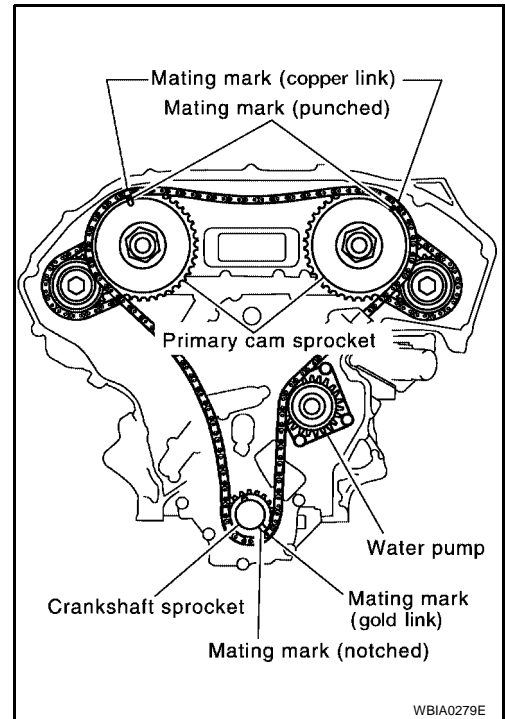

TIMING CHAIN

17. Install the internal chain guide.


Internal chain guide bolts : 6.9 N-m (0.70 - 0.95 kg-m, 61 - 82 in-lb)

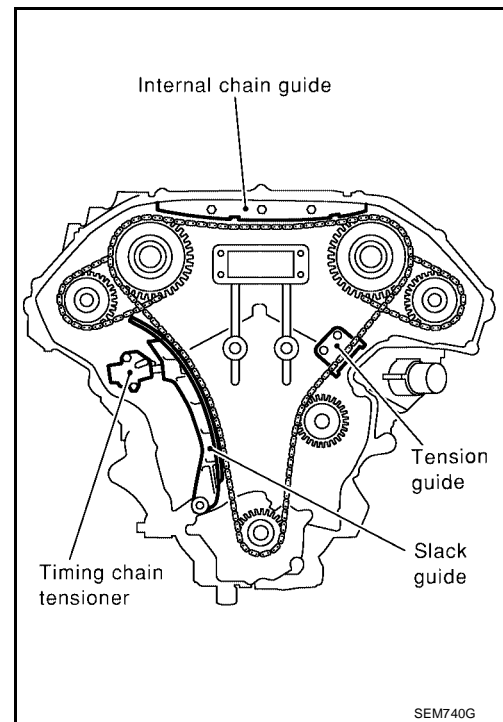

18. Install the slack guide.

- Do not overtighten the slack guide installation bolt. It is normal for a gap to exist under the bolt seats when the installation bolt is tightened to specification.


Slack guide installation bolt : 12.7 - 18.6 N-m (1.3 - 1.8 kg-m, 10 - 13 ft-lb)

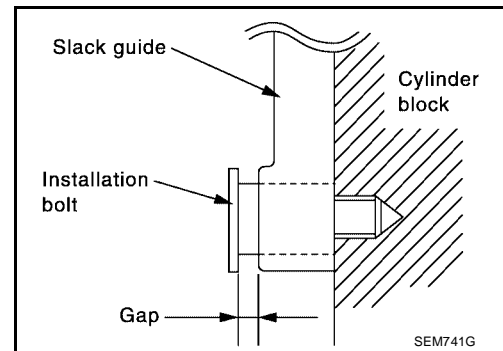

19. Install the timing chain tensioner for the slack guide.

Timing chain tensioner installation bolts : 6.9 - 9.3 N-m (0.70 - 0.95 kg-m, 61 - 82 in-lb)


- When installing the chain tensioner, push in the sleeve and keep it pressed in with the stopper pin.
- Remove any dirt and foreign materials completely from the back and the mounting surfaces of the chain tensioner.
- After installation, pull out the stopper pin by pressing the slack guide.

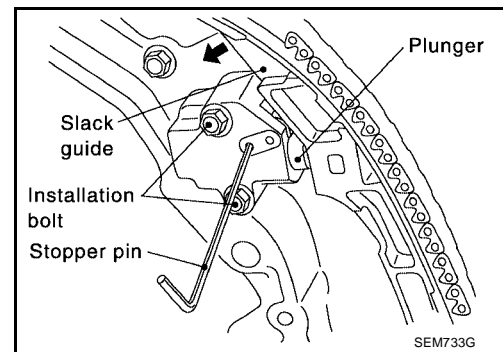

20. Reconfirm that the matching marks on the sprockets and the timing chain have not slipped out of alignment.

TIMING CHAIN

21. Install new O-rings on the rear timing chain case.

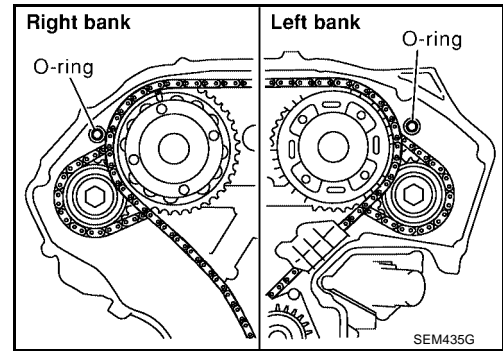

22. Install the front oil seal on the front timing chain case using a suitable tool. Apply clean engine oil to the oil seal edges.

- Install it so that each seal lip is oriented as shown.


Suitable drift

Outer diameter : 59 mm (2.32 in)


Inner diameter : 49 mm (1.93 in)

CAUTION:

Press fit straight and avoid causing burrs or tilting the oil seal.

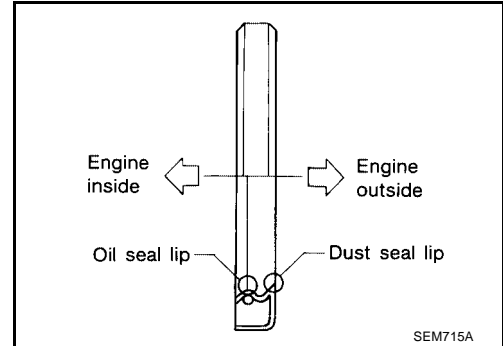


- Using a suitable drift, press-fit oil seal until it becomes flush with timing chain case end face.
- Make sure the garter spring in the oil seal is in position and seal lip is not inverted.

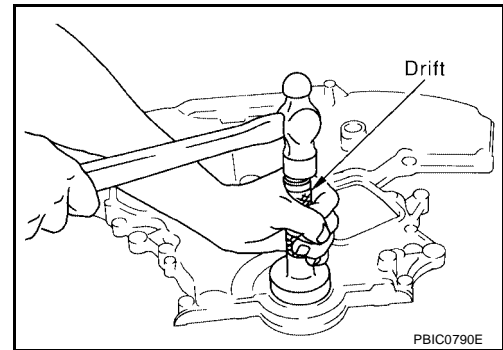

23. Apply Silicone RTV Sealant to front timing chain case as shown.

- Use Genuine Silicone RTV Sealant, or equivalent. Refer to [MA-10, "RECOMMENDED FLUIDS AND LUBRICANTS"](#).
- Before installation, wipe off the protruding sealant.
- Install dowel pin on the rear timing chain case into dowel pin hole in front timing chain case.

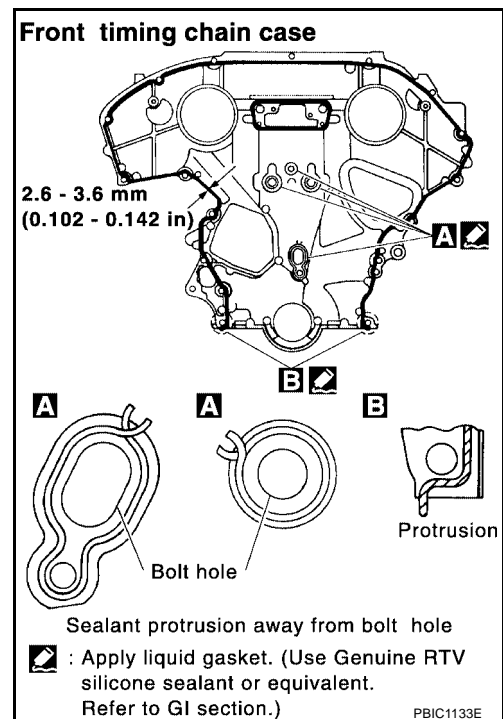

TIMING CHAIN


24. Loosely install the front timing chain case bolts.

Bolt position	Bolt diameter
1, 2	: 8 mm (0.31 in)
3 - 22	: 6 mm (0.24 in)

25. Tighten the front timing chain case bolts in the order shown.

- Retighten the front timing chain case bolts in the order shown.


Bolt position	Tightening specification
1, 2	: 25.5 - 31.4 N·m (2.6 - 3.2 kg·m, 18.8 - 23.1 ft·lb)
3 - 22	: 11.8 - 13.7 N·m (1.2 - 1.4 kg·m, 8.7 - 10.1 ft·lb)

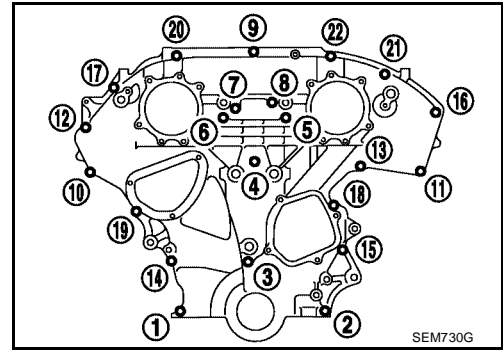

26. After installing the front timing chain case, check the surface height difference between the following parts on the oil pan mounting surface.


- If not within specification, repeat the installation procedure.

Front timing chain case to rear timing chain case	: (-0.14) - 0.14 mm [(-0.0055) - 0.0055 in]
Oil pump to cylinder block	: (-0.36) - (-0.10) mm [(-0.0142) - (-0.0039) in]

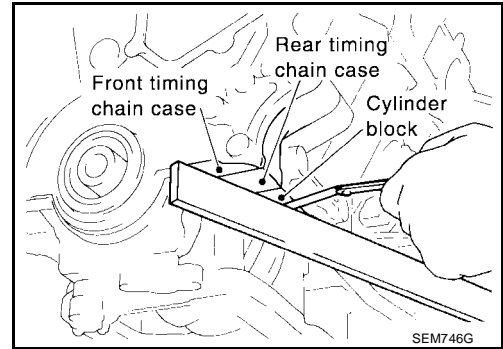


27. Install IVT control valve covers as follows:

- Install new collared O-rings in front cover oil hole (LH and RH sides).

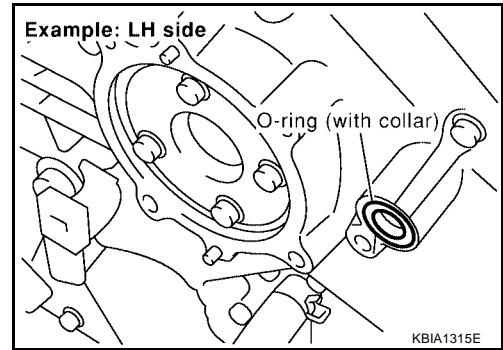


- Install new seal rings on the IVT control covers.
- Apply Silicone RTV Sealant to the IVT control covers.
 - Use Genuine Silicone RTV Sealant, or equivalent. Refer to [MA-10, "RECOMMENDED FLUIDS AND LUBRICANTS"](#).

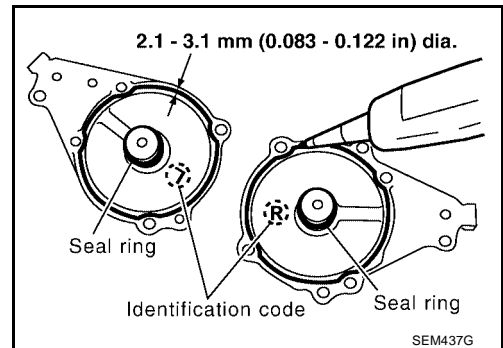

TIMING CHAIN

- Being careful not to move the seal ring from the installation groove, align the dowel pins on the chain case with the holes to install the IVT control covers.
- Tighten the intake valve timing control cover bolts in the order shown.

Intake valve timing control cover bolts : 9.81 - 12.7 N-m (1.0 - 1.2 kg-m, 87 - 112 in-lb)

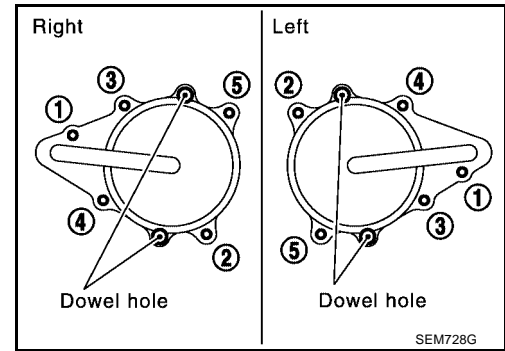


28. Apply liquid gasket and install the water pump cover and the chain tensioner cover.

Water pump cover bolts : 10 - 12 N-m (1.0 - 1.3 kg-m, 87 - 112 in-lb)

Chain tensioner cover bolts : 10 - 12 N-m (1.0 - 1.3 kg-m, 87 - 112 in-lb)

- Use Genuine Silicone RTV Sealant or equivalent. Refer to [MA-10, "RECOMMENDED FLUIDS AND LUBRICANTS"](#).

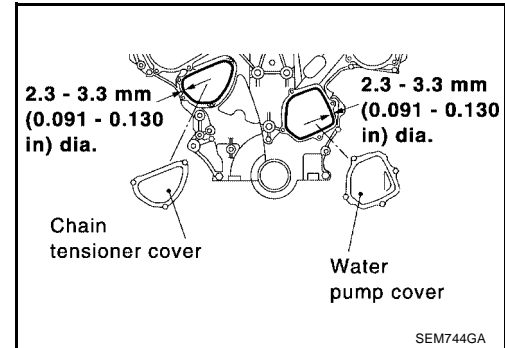


29. Install the RH engine mounting insulator, mount and bracket. Refer to [EM-116, "Removal and Installation"](#).

30. Install the RH and LH rocker covers. Tighten the rocker cover bolts in two steps in the order shown.

Step 1 : 0.96 - 2.96 N-m (0.1 - 0.3 kg-m, 9 - 26 in-lb)

Step 2 : 7.33 - 9.33 N-m (0.75 - 0.95 kg-m, 65 - 82 in-lb)

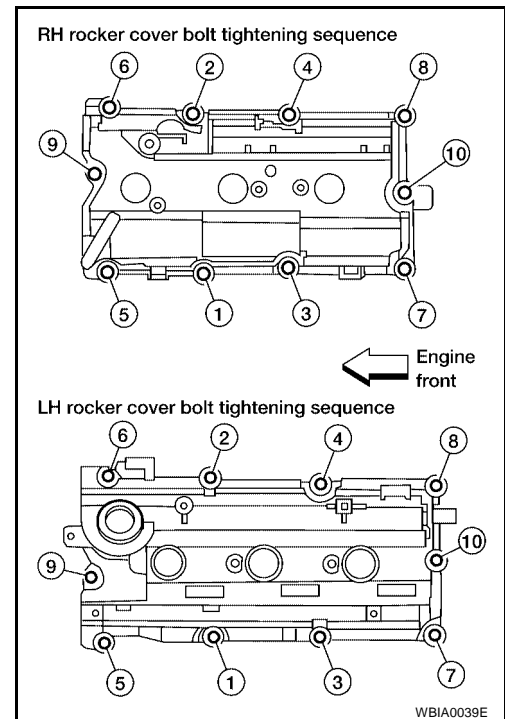


TIMING CHAIN

31. Install the IVT control solenoid valve bank 1 and bank 2.

IVT control solenoid valve bolts : 10 - 12 N·m (1.0 - 1.3 kg-m, 87 - 112 in-lb)

32. Install the engine oil dipstick.

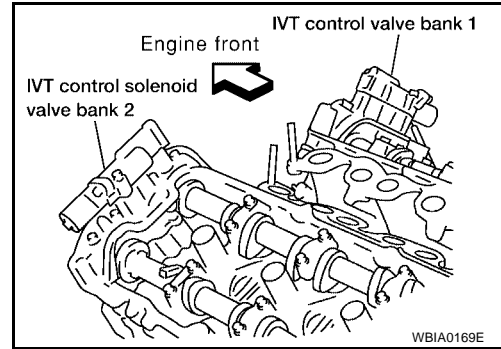


33. Install the six spark plugs in their original positions.

Spark plugs : 20 - 29 N·m (2.0 - 3.0 kg-m, 14 - 22 ft-lb)

34. Install the six ignition coils in their original positions.

Ignition coils : 6.37 - 7.54 N·m (0.65 - 0.76 kg-m, 57 - 66 in-lb)

35. Install the intake manifold collector. Refer to [EM-19, "INSTALLATION"](#).


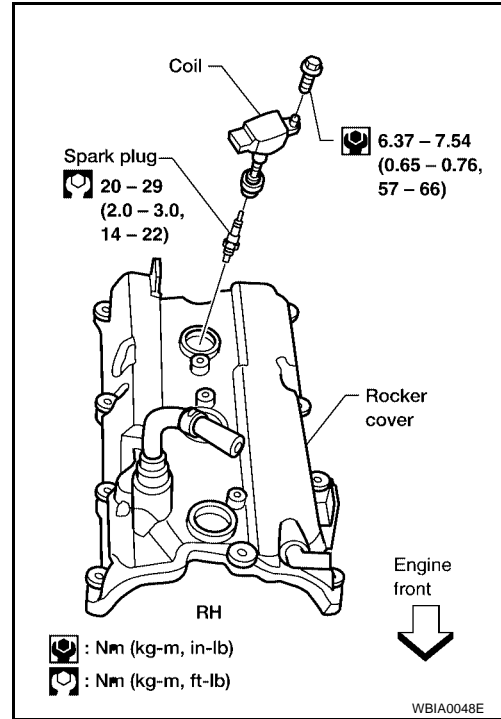


36. Install crankshaft pulley and tighten the bolt in two steps.

- Lubricate thread and seat surface of the bolt with new engine oil.
- Apply a paint mark for the second step of angle tightening.

Step 1 : 39 - 49 N·m (4.0 - 5.0 kg-m, 29 - 36 ft-lb)



Step 2 : 60° - 65° degrees clockwise

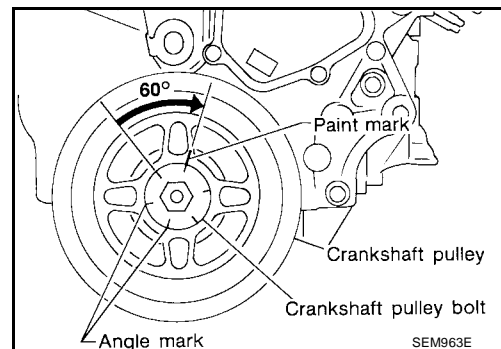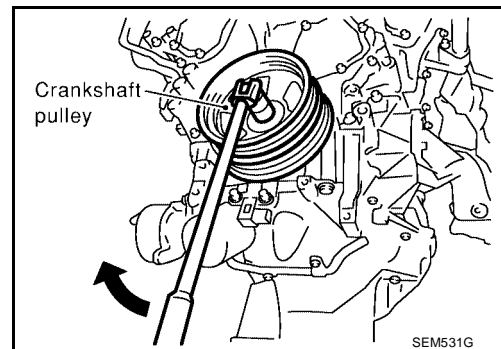

TIMING CHAIN

37. Remove Tool attached to the starter bolt hole.

Tool number : KV10117700 (J44716)

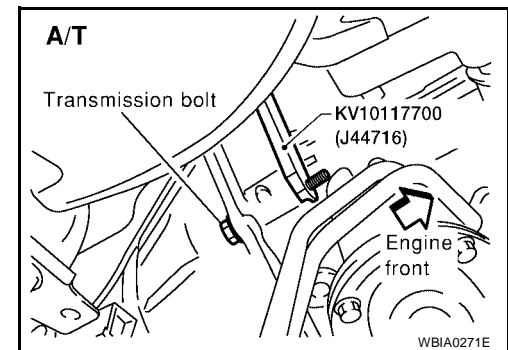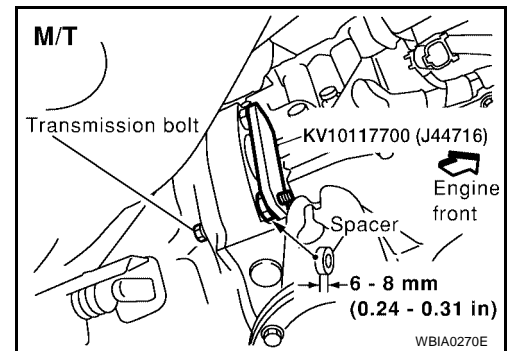

38. Install the starter motor. Refer to [SC-18, "Removal and Installation"](#) .
39. Install the RH engine mounting insulator, mount and bracket. Refer to [EM-116, "Removal and Installation"](#) .
40. Reposition and reconnect the engine harness.
41. Install the generator. Refer to [SC-34, "INSTALLATION"](#) .
42. Install the upper and lower oil pans. Refer to [EM-33, "INSTALLATION"](#) .
43. Install the power steering pump. Refer to [PS-24, "INSTALLATION"](#) .
44. Install the A/C compressor and recharge the system. Refer to [ATC-119, "Removal and Installation for Compressor"](#) .
45. Install the idler pulley and the drive belts. Refer to [EM-14, "Removal and Installation"](#) .
46. Install the inner fender splash shield and the engine undercover.
47. Connect the inlet coolant hose.
48. Install the IPDM E/R and bracket.
49. Install the RH wheel and tire. Refer to [WT-4, "WHEEL AND TIRE ASSEMBLY"](#) .
50. Install the windshield wiper assembly. Refer to [WW-27, "INSTALLATION"](#) .
51. Install the cowl top grille. Refer to [EI-19, "Removal and Installation"](#) .
52. Install the fuel hose quick connector to the fuel tube at the vehicle piping side. Refer to [EM-40, "INSTALLATION"](#) .
53. Install the engine coolant reservoir. [CO-12, "Removal and Installation"](#)
54. Install the intake air duct with the air cleaner case lid and mass air flow sensor. Refer to [EM-16, "INSTALLATION"](#) .

TIMING CHAIN

55. Install engine cover.
56. Refill the coolant. Refer to [MA-14, "REFILLING ENGINE COOLANT"](#) .

CAUTION:


Wait at least 30 minutes for the Silicone RTV Sealant to set before filling the engine with fluids to avoid leaks.

57. Refill the engine oil. Refer to [MA-16, "Changing Engine Oil"](#) .

CAUTION:

Wait at least 30 minutes for the Silicone RTV Sealant to set before filling the engine with fluids to avoid leaks.

58. Connect the battery negative terminal.
59. Activate the fuel system. Check for any leaks when the system is repressurized and correct as necessary.
60. Start the engine and check all systems for leaks or improper operation. Correct as necessary.
 - After starting engine, keep idling for three minutes. Then rev engine up to 3,000 rpm under no load to purge air from the high-pressure oil chamber of the chain tensioners. The engine may produce a rattling noise. This indicates that air still remains in the chamber and is not a matter of concern.

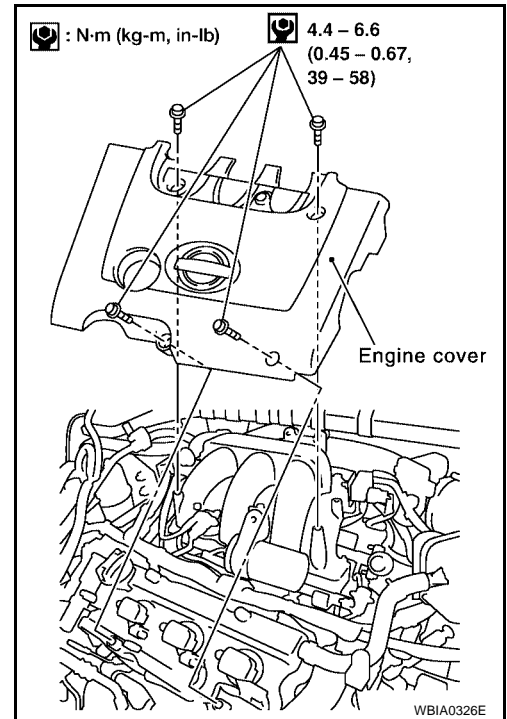

A

EM

C

D

E

F

G

H

I

J

K

L

M

CAMSHAFT


PF1:13001

EBS00F32

CAMSHAFT

Removal and Installation

SEC. 111•118•130•140•220

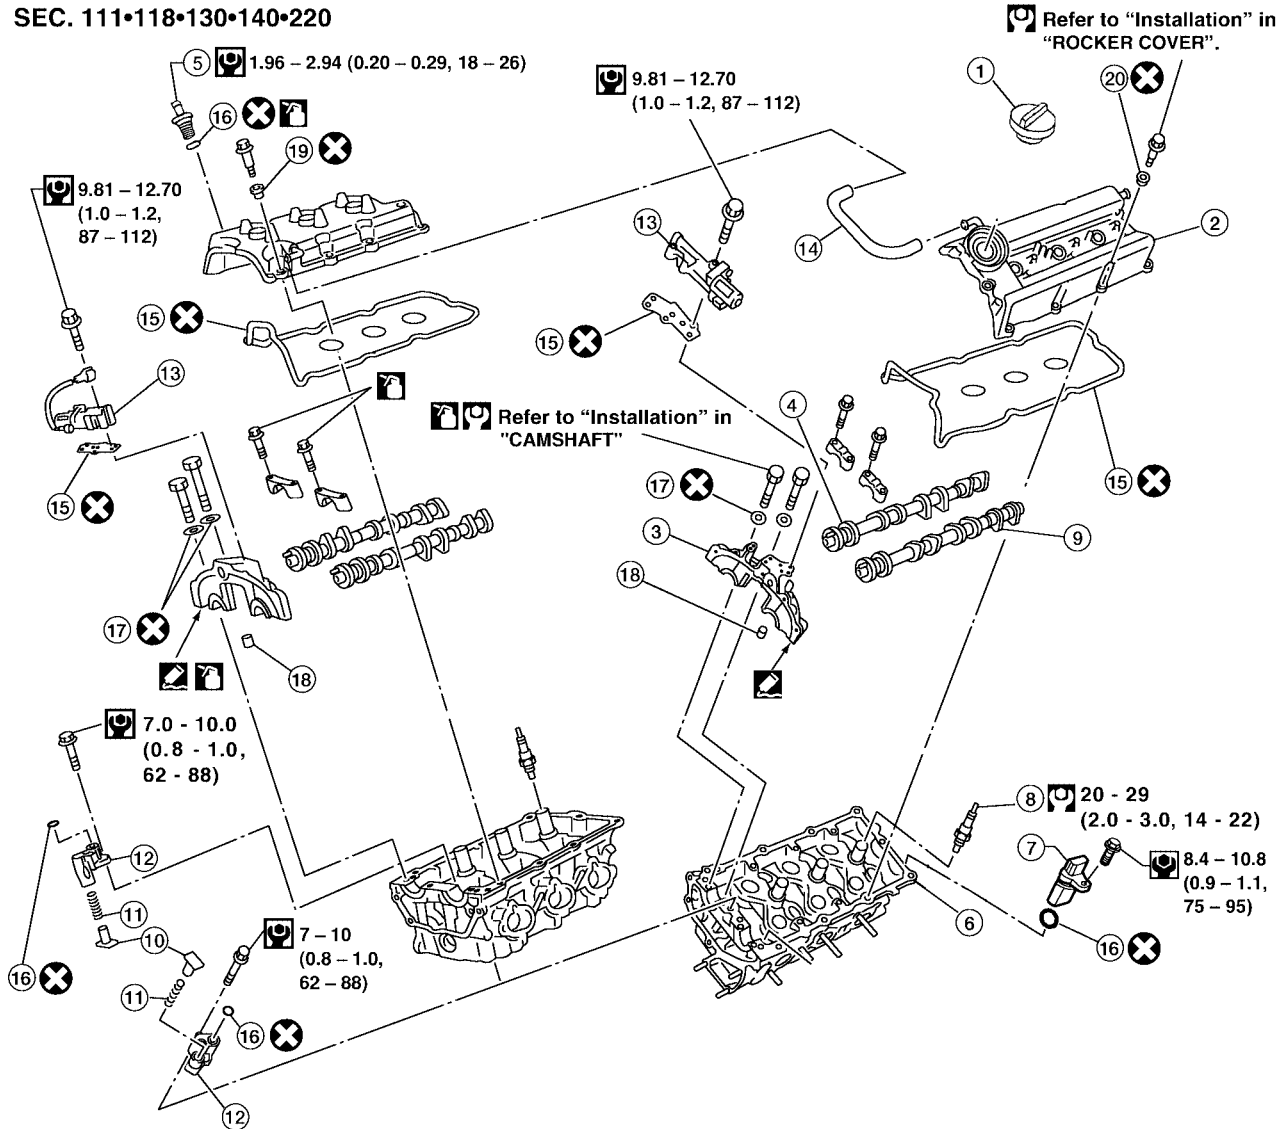

: Apply Genuine Silicone RTV Sealant or equivalent.

Refer to GI Section.

: Lubricate with engine oil

: N·m (kg·m, ft·lb)

: N·m (kg·m, in·lb)

: Always replace after every disassembly.

WBIA0265E

- | | | |
|-------------------------------------|----------------------|------------------------------|
| 1. Oil filler cap | 2. Rocker cover (LH) | 3. Camshaft bracket (LH) |
| 4. Camshaft (INT) | 5. PCV valve | 6. Cylinder head (LH) |
| 7. Camshaft position sensor (PHASE) | 8. Spark plug | 9. Camshaft (EXH) |
| 10. Tensioner sleeve | 11. Tensioner spring | 12. Camshaft chain tensioner |
| 13. IVT control solenoid valve | 14. PCV hose | 15. Gasket |
| 16. O-ring | 17. Seal washer | 18. Dowel pin |
| 19. Washer | 20. Washer | |

CAUTION:

Apply new engine oil to parts marked in illustration before installation.

CAMSHAFT

REMOVAL


1. Remove the timing chains. Refer to [EM-57, "REMOVAL"](#).
2. If necessary, remove camshaft position sensor (PHASE) (right and left bank) from cylinder head back side.

CAUTION:

- Handle carefully to avoid dropping and shocks.
- Do not disassemble.
- Do not allow any metal particles to adhere to magnetic part at sensor tip.
- Do not place sensors in a location where they are exposed to magnetism.


Example: Left bank

Keep off any magnetic materials.

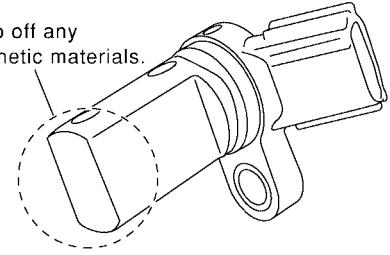


KBIA1046E

3. Remove the IVT control solenoid valves.
 - Discard the IVT control solenoid valve gaskets and use new gaskets for installation.

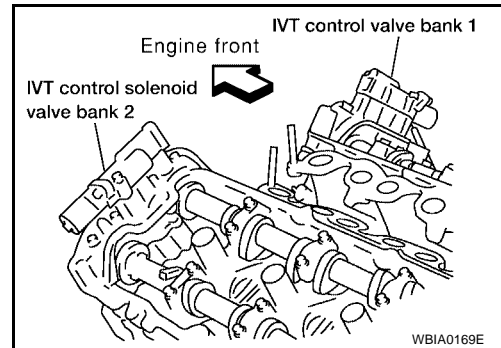


WBIA0169E

4. Remove the intake and exhaust camshaft brackets and the camshafts.
 - Mark the camshafts, camshaft brackets, and bolts so they are placed in the same position and direction for installation.
 - Equally loosen the camshaft bracket bolts in several steps in the order shown.

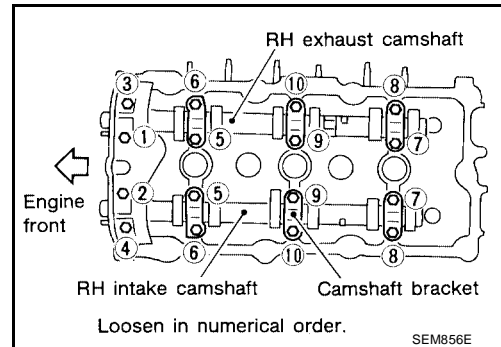

SEM856E

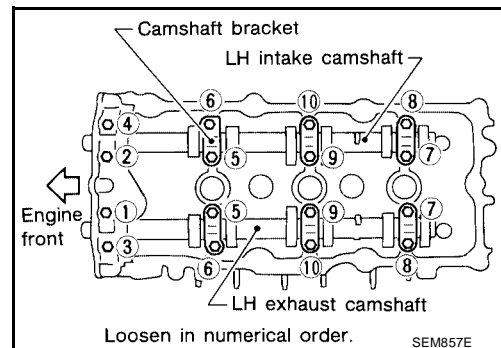

SEM857E

5. Remove valve lifters.

NOTE:

Identify installation positions to ensure proper installation.


A
EM
C
D
E
F
G
H
I
J
K
L
M

CAMSHAFT

- Remove camshaft timing chain tensioner from cylinder head with the stopper pin inserted.

NOTE:


Stopper pin was installed when secondary timing chain was removed.

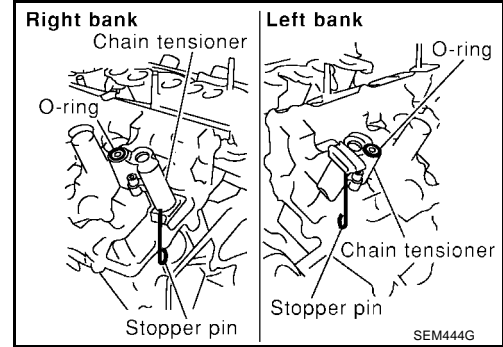

INSTALLATION


- Before installation, remove any old Silicone RTV Sealant from component mating surfaces using a scraper.

- Remove the old Silicone RTV Sealant from the bolt holes and threads.
- Do not scratch or damage the mating surfaces.

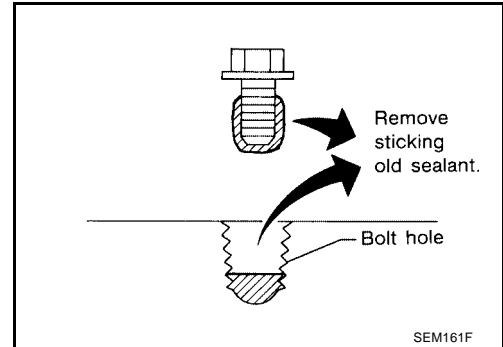


- Before installing the No. 1 camshaft bracket, remove the old Silicone RTV Sealant from the mating surface using a scraper.

- Do not scratch or damage the mating surface.

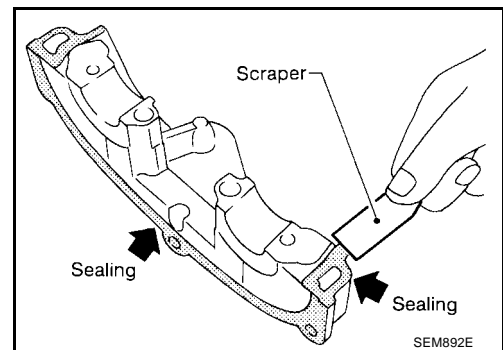

- Turn the crankshaft until No. 1 piston is set at TDC on the compression stroke.


- The crankshaft key should line up with the right bank cylinder center line as shown.

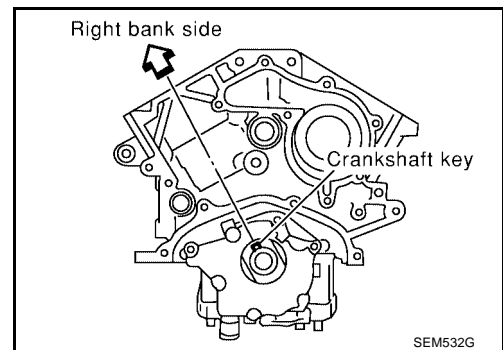

CAMSHAFT

4. Install camshaft chain tensioners on both sides of cylinder head.

Camshaft chain tensioner bolts : 7 - 10 N·m (0.8 - 1.0 kg·m, 62 - 88 in·lb)

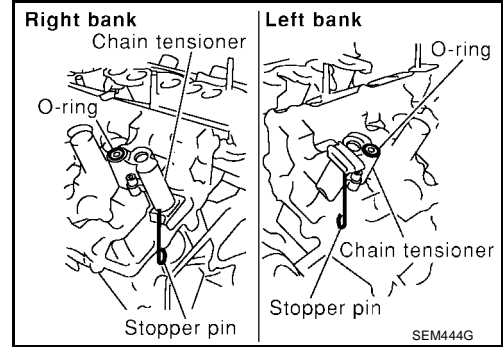


5. Install valve lifters.

NOTE:

Install them in original positions.


6. Install exhaust and intake camshafts and camshaft brackets.

- Intake camshaft has a drill mark on camshaft sprocket mounting flange.

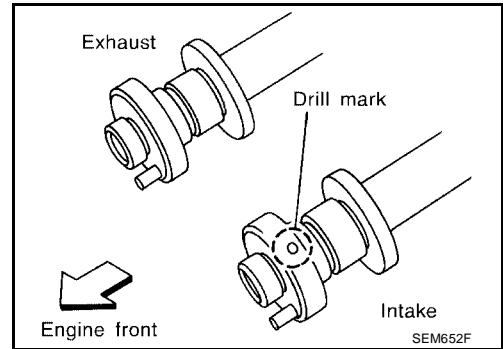


- Follow your identification marks made during removal, or follow the identification marks that are present on the new camshafts components for proper placement and direction of the components.

Bank	INT/EXH	ID mark	Drill mark	Paint marks	
				M1	M2
RH	INT	RE	Yes	Yes	No
	EXH	RE	No	No	Yes
LH	INT	LH	Yes	Yes	No
	EXH	LH	No	No	Yes

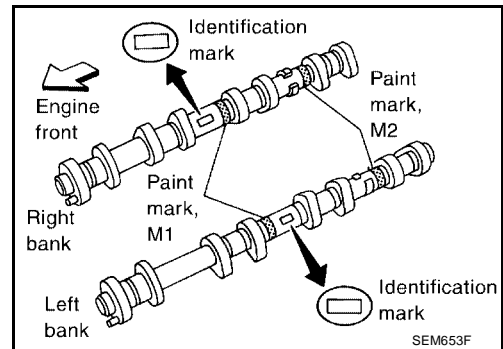


- Position the camshafts:
RH exhaust camshaft dowel pin at about 10 o'clock.
LH exhaust camshaft dowel pin at about 2 o'clock.

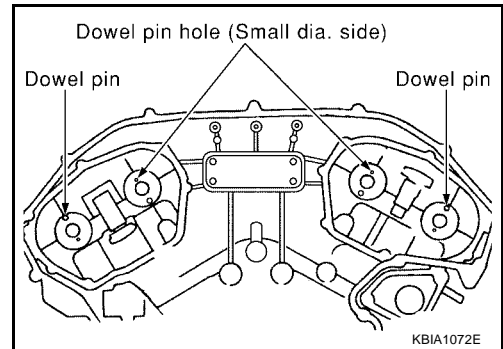


CAMSHAFT


7. Before installing camshaft brackets, apply sealant to mating surface of No. 1 camshaft bracket.
- Use Genuine Silicone RTV Sealant, or equivalent. Refer to [GI-43, "RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS"](#).

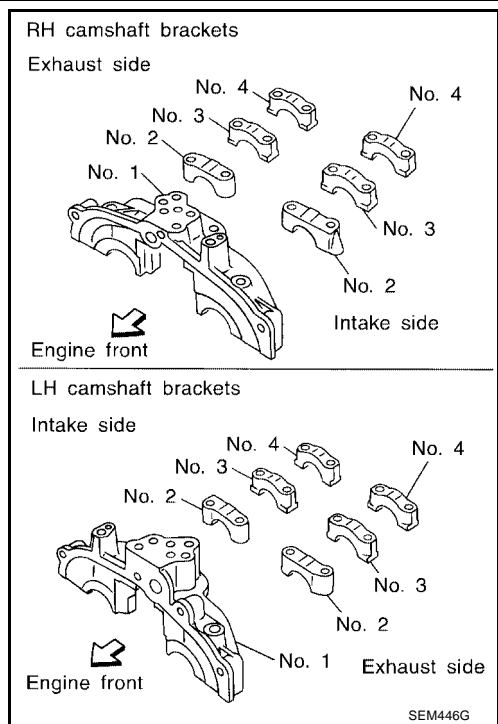

- Before installation, wipe off any protruding sealant.
- Refer to [EM-4, "Precautions for Liquid Gasket"](#).

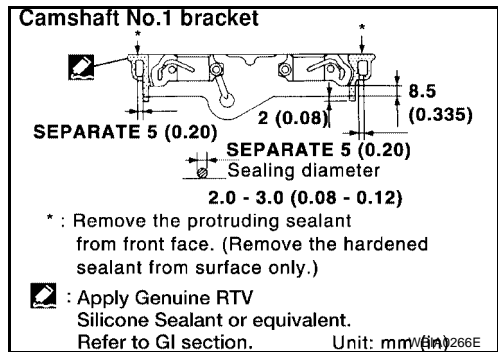

- Install camshaft brackets in their original positions and direction. Align the stamp marks as shown.
- If checking and adjusting any part of valve assembly or camshaft, check valve clearance according to the reference data. Refer to [EM-89, "Valve Clearance"](#).

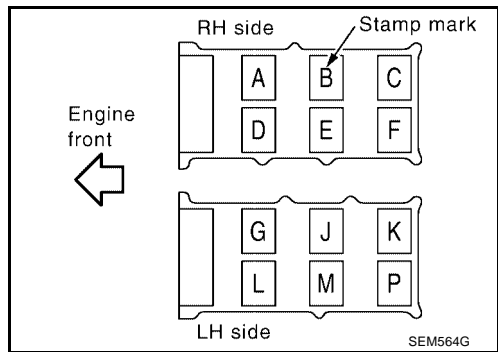

CAMSHAFT

8. Tighten the camshaft brackets in the four steps, in the order shown.

NOTE:

Lubricate the threads and seat surfaces of the camshaft bracket bolts with new engine oil before installation.


Camshaft bracket bolts

Step 1 (bolts 7 - 10) : 1.96 N-m (0.2 kg-m, 17 in-lb)

Step 2 (bolts 1 - 6) : 1.96 N-m (0.2 kg-m, 17 in-lb)

Step 3 : 5.88 N-m (0.6 kg-m, 52 in-lb)


Step 4 (bolts 1 - 6) : 10.4 N-m (1.1 kg-m, 92 in-lb)

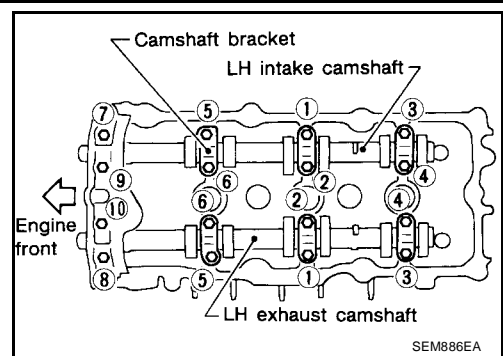

9. Measure difference in levels between front end faces of camshaft No. 1 bracket and cylinder head.


Standard : - 0.14 (- 0.0055 in)

- If measurement is outside the specified range, re-install camshaft and camshaft bracket.

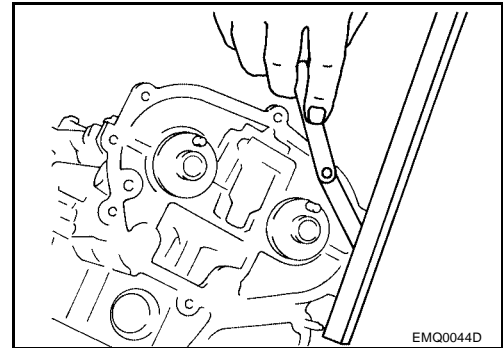

10. Install the IVT control solenoid valves with new gaskets.

IVT control solenoid valve bolts : 9.81 - 12.7 N-m (1.0 - 1.2 kg-m, 87 - 112 in-lb)

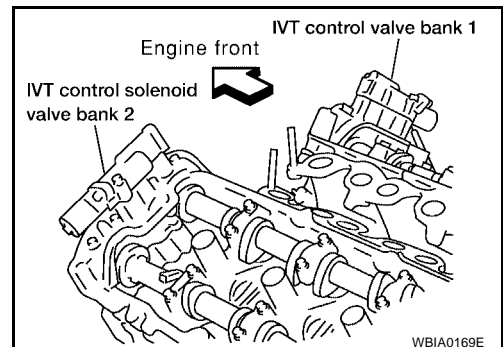

11. If necessary, install camshaft position sensor (PHASE) (RH and LH bank.)

Camshaft position sensor (PHASE) bolt : 8.4 - 10.8 N-m (0.9 - 1.1 kg-m, 15 - 95 in-lb)

12. Install the fuel rail and injectors. Refer to [EM-39, "Removal and Installation"](#) .

13. Install the timing chains. Refer to [EM-67, "INSTALLATION"](#) .

CAMSHAFT

INSPECTION AFTER REMOVAL

Camshaft Visual Check

Check camshaft for scratches, seizure and wear. Replace if necessary.

Camshaft Runout


1. Put V-block on precise flat bed and support No. 2 and No. 4 journal of camshaft as shown.
2. Set dial gauges vertically to No. 3 journal as shown.
3. Turn camshaft in one direction slowly by hand, measure the camshaft runout on the dial gauges.
 - Runout is the largest indicator reading after one full revolution.

Camshaft Runout

Standard : Less than 0.02 mm (0.0008 in)


Limit : 0.05 mm (0.0020 in)

4. If actual runout exceeds the limit, replace the camshaft.

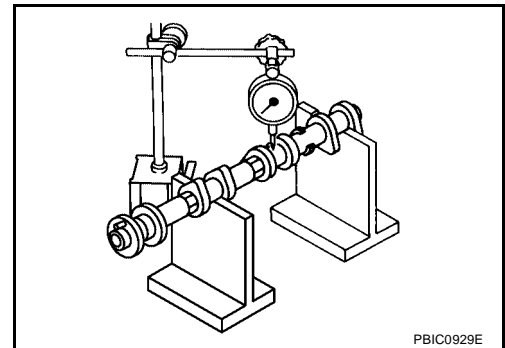

Camshaft Cam Lobe Height

1. Measure camshaft cam lobe height as shown. Refer to [EM-155, "CAMSHAFT AND CAMSHAFT BEARING"](#).
2. If wear has reduced the lobe height below specifications, replace the camshaft.

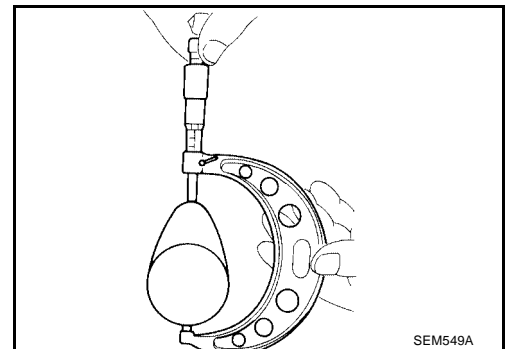


Camshaft Journal Clearance

Outer Diameter of Camshaft Journal

- Measure outer diameter of camshaft journal as shown.

Standard outer diameter, No.1 : 25.935 - 25.955 mm (1.0211 - 1.0218 in)

Standard outer diameter, No.2, 3, 4 : 23.445 - 23.465 mm (0.9230 - 0.9238 in)

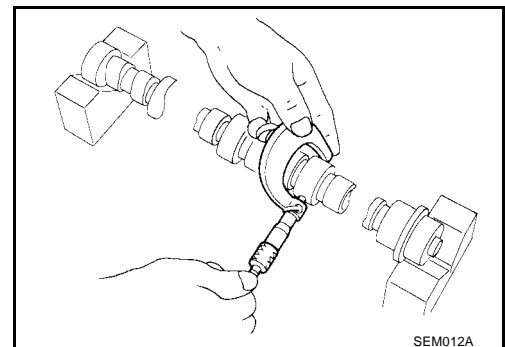


Inner Diameter of Camshaft Bracket

1. Tighten camshaft bracket bolts to specified torque. Refer to [EM-82, "INSTALLATION"](#).
2. Using inside micrometer, measure inner diameter "A" of camshaft bearing.

Standard inner diameter No.1 : 26.000 - 26.021 mm (1.0236 - 1.0244 in)

Standard inner diameter No. 2, 3, 4 : 23.500 - 23.521 mm (0.9252 - 0.9260 in)

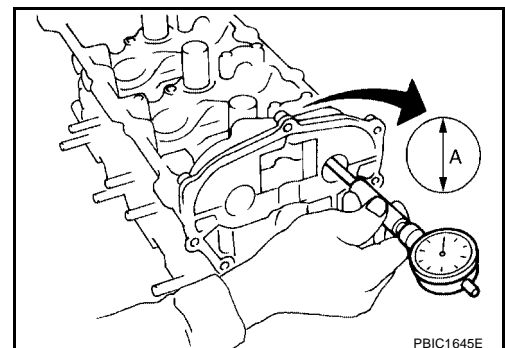

CAMSHAFT

Calculation of Camshaft Journal Clearance

(Journal clearance) = (inner diameter of camshaft bracket) – (outer diameter of camshaft journal)

Standard No.1 : 0.045 - 0.086 mm (0.0018 - 0.0034 in)

Standard No. 2, 3, 4 : 0.035 - 0.076 mm (0.0014 - 0.0030 in)

Limit : 0.15 mm (0.0059 in)

- When out of the specified range, replace either or both camshaft and cylinder head.

NOTICE:

Inner diameter of camshaft bracket is manufactured together with cylinder head. Replace the whole cylinder head assembly.


Camshaft End Play

- Install the camshaft in the cylinder head. Refer to [EM-82, "INSTALLATION"](#).
- Install dial gauge in thrust direction on front end of camshaft. Measure end play when camshaft is moved forward/backward (in direction to axis) as shown.

Standard : 0.115 - 0.188 mm (0.0045 - 0.0074 in)

Limit : 0.24 mm (0.0094 in)

- If out of the specified range, replace with new camshaft and measure again.
- If out of the specified range again, replace with new cylinder head.

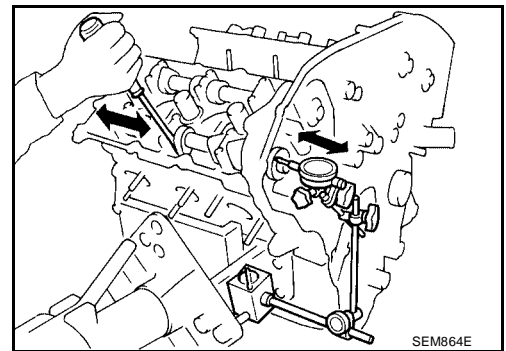


Camshaft Sprocket Runout

- Put V-block on precise flat bed and support No. 2 and No. 4 journal of camshaft as shown.
- Install camshaft sprocket on camshaft.
- Measure camshaft sprocket runout.


Limit : 0.15 mm (0.0059 in)

- If sprocket runout exceeds the limit, replace camshaft sprocket.

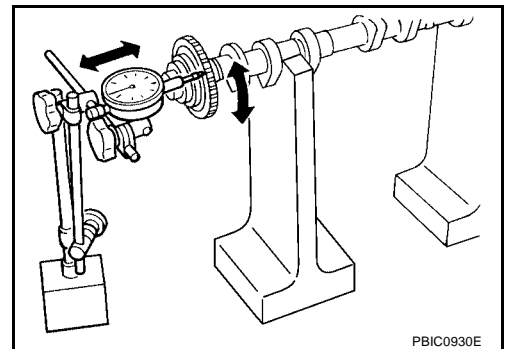

Valve Lifter

- Check if the surface of the valve lifter has any excessive wear or cracks, replace as necessary.

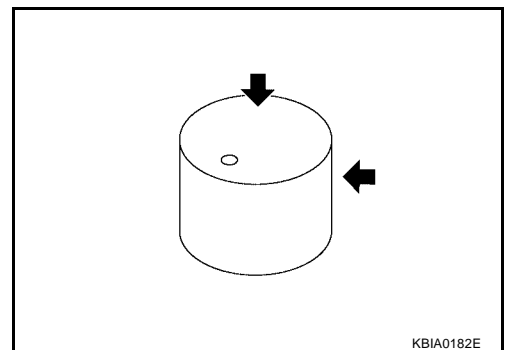


CAMSHAFT

Valve Lifter Clearance


Outer Diameter of Valve Lifter

- Measure the outer diameter of the valve lifter. Refer to [EM-152, "Valve Lifter"](#).
- If out of the specified range, replace the valve lifter.

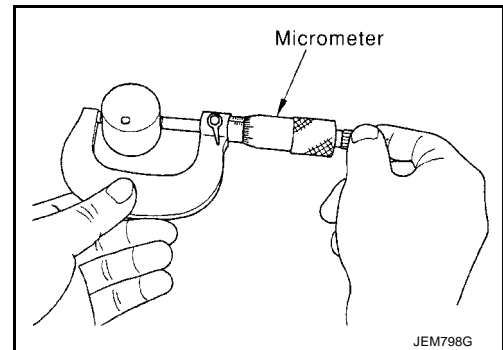

Valve Lifter Bore Diameter

- Using inside micrometer, measure diameter of valve lifter bore of cylinder head. Refer to [EM-152, "Valve Lifter"](#).
- If out of the specified range, replace the cylinder head assembly.

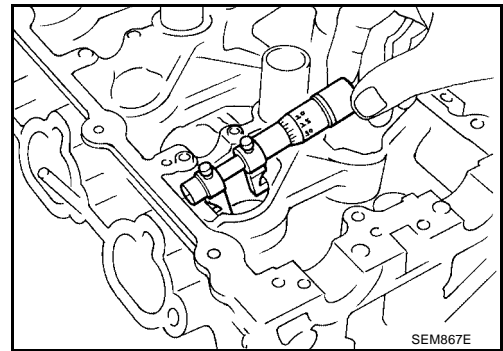

Calculation of Valve Lifter Clearance

- (Valve lifter clearance) = (hole diameter for valve lifter) – (outer diameter of valve lifter). Refer to [EM-152, "Valve Lifter"](#).
- If out of specified range, replace either or both valve lifter and cylinder head assembly.

INSPECTION AFTER INSTALLATION INSPECTION OF CAMSHAFT SPROCKET (INT) OIL GROOVE

EBS00KK9

CAUTION:


- Perform this inspection only when DTC P0011 is detected in self-diagnostic results of CONSULT II and it is directed according to inspection procedure of EC section. Refer to.
 - Check when engine is cold so as to prevent burns from any splashing engine oil.
1. Check engine oil level. Refer to [LU-6, "OIL LEVEL"](#).
 2. Perform the following procedure so as to prevent the engine from being unintentionally started while checking.
 - a. Release fuel pressure. Refer to [EC-51, "FUEL PRESSURE RELEASE"](#).
 - b. Disconnect ignition coil and injector harness connectors if practical.
 3. Remove IVT control solenoid valve.
 4. Crank engine, and then make sure that engine oil comes out from IVT control cover oil hole. End cranking after checking.

WARNING:

Be careful not to touch rotating parts (drive belts, idler pulley, and crankshaft pulley, etc.).

CAUTION:

- Engine oil may squirt from IVT control solenoid valve installation hole during cranking. Use a shop cloth to prevent engine oil from splashing on worker, engine components and vehicle.

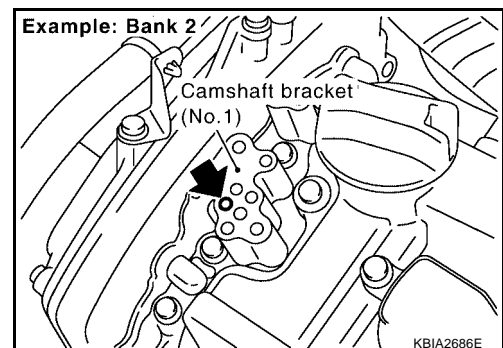

CAMSHAFT

- Do not allow engine oil to get on rubber components such as drive belts or engine mount insulators. Immediately wipe off any splashed engine oil.
5. Clean oil groove between oil strainer and IVT control solenoid valve if engine oil does not come out from IVT control cover oil hole.
 6. Remove components between IVT control solenoid valve and camshaft sprocket (INT), and then check each oil groove for clogging.
 - Clean oil groove if necessary.
 7. After inspection, installation of the remaining components is in the reverse order of removal.



Valve Clearance CHECKING

Perform inspection as follows after removal, installation or replacement of camshaft or valve related parts, or if there is unusual engine conditions regarding valve clearance.


NOTE:

Check valve clearance while engine is cold and not running.

1. Remove the intake manifold collectors. Refer to [EM-18, "REMOVAL"](#).
2. Remove the ignition coils. Refer to [EM-36, "REMOVAL"](#).
3. Remove the spark plugs. Refer to [EM-37, "REMOVAL"](#).
4. Remove the rocker covers. [EM-42, "REMOVAL"](#).
5. Set No.1 cylinder at TDC on its compression stroke.
 - Align pointer with TDC mark on crankshaft pulley.

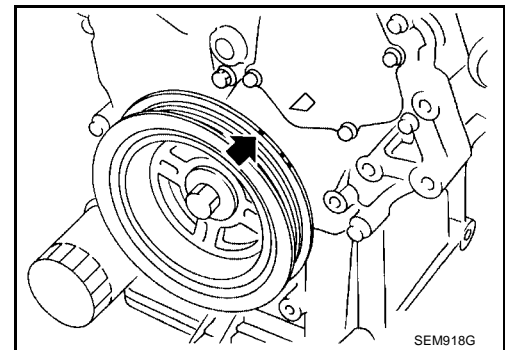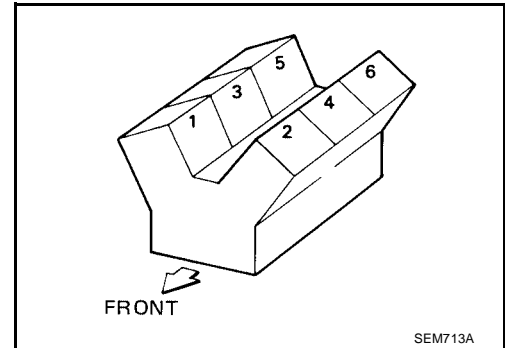

- Check that the valve lifters on No.1 cylinder are loose and valve lifters on No.4 are tight. If not, turn the crankshaft one full revolution (360°) and align as shown.

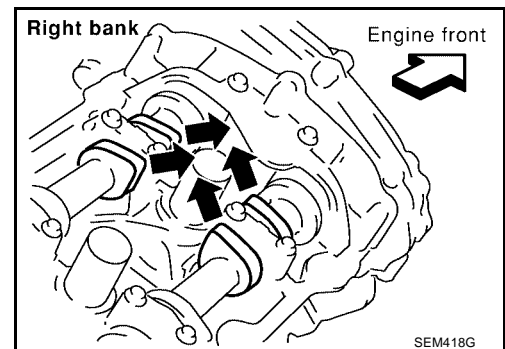

CAMSHAFT

6. Check only the valves as shown.




Crank Position	Valve No. 1	Valve No. 2	Valve No. 3	Valve No. 6
No. 1 TDC	Intake	Exhaust	Exhaust	Intake

- Using a feeler gauge, measure the clearance between the valve lifter and camshaft.
- Record any valve clearance measurements which are out of specification. They will be used later to determine the required replacement lifter size.

Valve Clearance for Checking (cold)

Intake : 0.26 - 0.34 mm (0.010 - 0.013 in)

Exhaust : 0.29 - 0.37 mm (0.011 - 0.015 in)

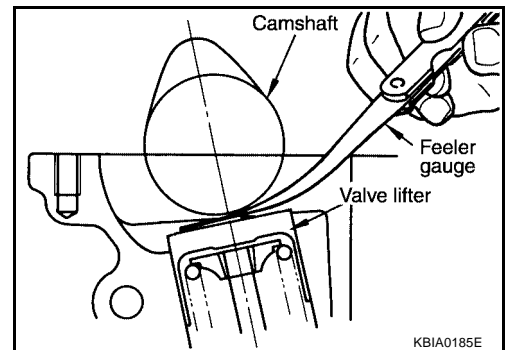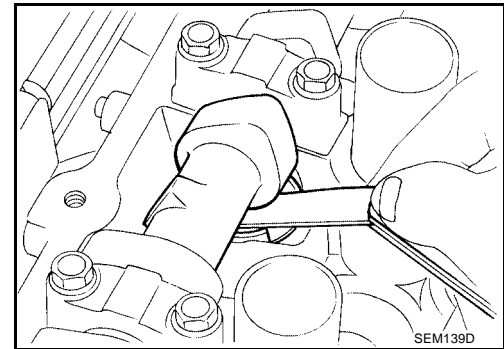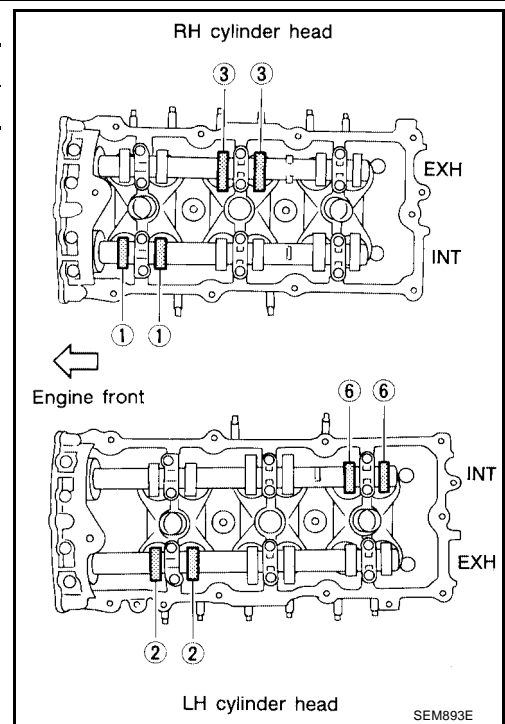


7. Turn crankshaft 240°.
8. Set No.3 cylinder at TDC on its compression stroke.

CAMSHAFT

9. Check only those valves as shown.

Crank Position	Valve No. 2	Valve No. 3	Valve No. 4	Valve No. 5
No. 3 TDC	Intake	Intake	Exhaust	Exhaust

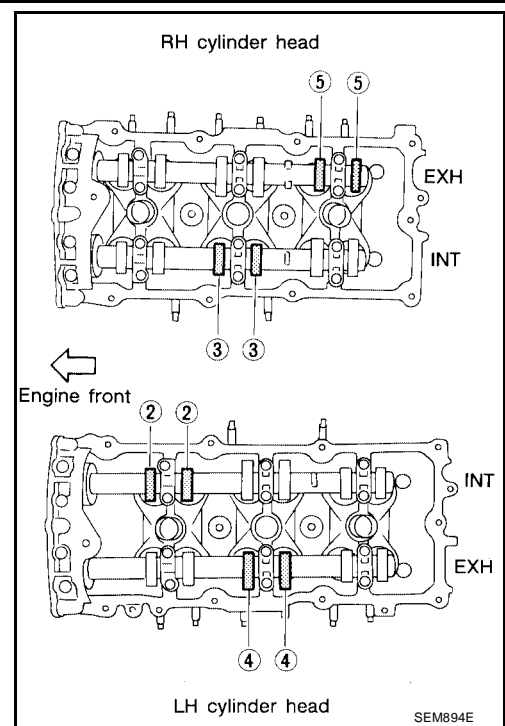

10. Turn the crankshaft 240° and align as above.


11. Set No.5 cylinder at TDC on its compression stroke.

12. Check only those valves as shown.

Crank Position	Valve No. 1	Valve No. 4	Valve No. 5	Valve No. 6
No. 5 TDC	Exhaust	Intake	Intake	Exhaust

13. If all valve clearances are within specification, install the following components. If the valve clearances are out of specification, adjust the valve clearances.

- Rocker covers. Refer to [EM-43, "INSTALLATION"](#).
- All spark plugs. Refer to [EM-38, "INSTALLATION"](#).
- All ignition coils. Refer to [EM-36, "INSTALLATION"](#).
- Intake manifold collectors. Refer to [EM-19, "INSTALLATION"](#).

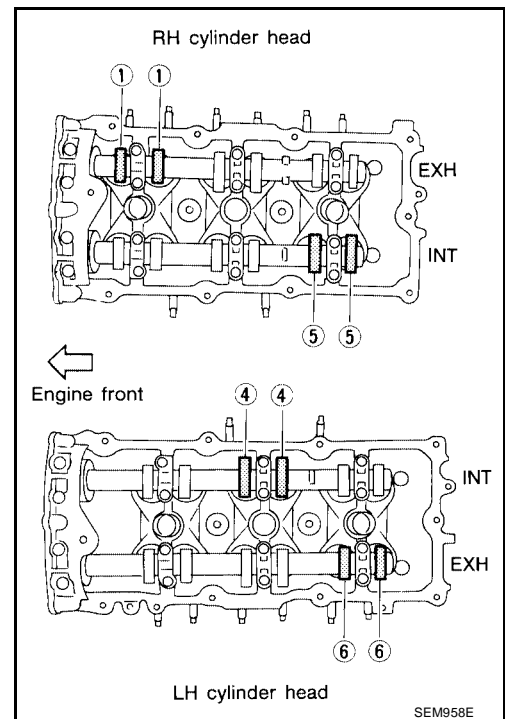

CAMSHAFT


VALVE ADJUSTING

CAUTION:

Adjust valve clearance while engine is cold.

NOTE:

- Perform adjustment by selecting the correct head thickness of the valve lifter (adjusting shims are not used).
 - The specified valve lifter thickness is the dimension at normal temperatures. Ignore dimensional differences caused by temperature. Use specifications for hot engine condition to confirm valve clearances.
1. Remove the camshaft. Refer to [EM-81, "REMOVAL"](#) .
 2. Remove the valve lifter that was measured as being outside the standard specifications.
 3. Measure the center thickness of the removed lifter with a micrometer as shown.

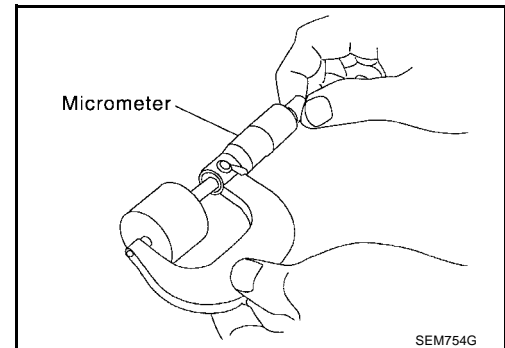

4. Use the equation below to calculate the replacement valve lifter thickness.

Valve lifter thickness calculation equation: $t = t1 + (C1 - C2)$


t = thickness of the replacement lifter

t1 = thickness of the removed lifter

C1 = measured valve clearance

C2 = standard valve clearance

- The thickness of the new valve lifter can be identified by the stamp mark on the reverse side (inside the lifter).
- Available thickness of the valve lifter (factory setting): 7.88 - 8.40 mm (0.3102 - 0.3307 in), in 0.02 mm (0.0008 in) increments, in 27 sizes (intake / exhaust). Refer to [EM-152, "Valve Lifter"](#) .

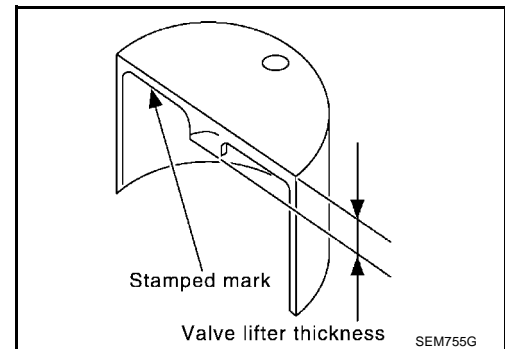

NOTE:

Two types of stamp marks are used for parallel setting and for manufacturer identification.

Value lifter thickness

Intake : 0.30 mm (0.012 in)

Exhaust : 0.33 mm (0.013 in)

5. Install the selected replacement valve lifter.
6. Install the camshaft. Refer to [EM-82, "INSTALLATION"](#) .
7. Rotate the crankshaft a few turns by hand.
8. Confirm that the valve clearances are within specification.
9. After the engine has been run to full operating temperature, confirm that the valve clearances are within specification.

Valve Clearance	Cold	Hot* (reference data)
Intake	0.26 - 0.34 mm (0.010 - 0.013 in)	0.304 - 0.416 mm (0.012 - 0.016 in)
Exhaust	0.29 - 0.37 mm (0.011 - 0.015 in)	0.308 - 0.432 mm (0.012 - 0.017 in)

* Approximately 80°C (176°F)

OIL SEAL

PFP:00100

Removal and Installation of Valve Oil Seal

EBS00F38

REMOVAL


1. Remove camshaft and valve lifter relating to valve oil seal to be removed. Refer to [EM-80, "Removal and Installation"](#).
2. Rotate crankshaft, and set piston whose oil seal is to be removed to top dead center. This prevents valve from dropping inside cylinder.

CAUTION:

When rotating crankshaft, be careful to avoid scarring the front cover with the timing chain.


3. Remove valve collet, valve spring retainer and valve spring using Tool.

Tool numbers : KV10116200 (J26336-A)
 : KV10115900 (J26336-20)

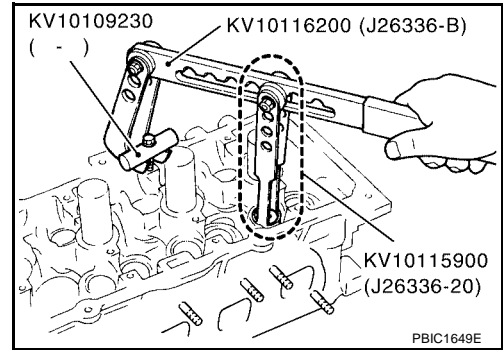

4. Remove valve oil seal using Tool.

Tool number : KV10107902 (J38959)

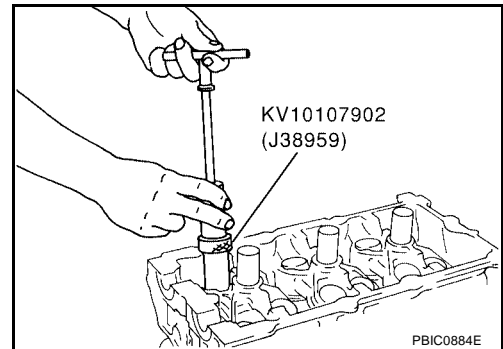

INSTALLATION

1. Apply new engine oil to new valve oil seal joint surface and seal lip.
2. Press in valve oil seal to height "H" using Tool to specified height.


Tool number : (J39386)

NOTE:

Dimension "H": height measured before valve spring seat installation.

Intake and exhaust : 14.3 - 14.9 mm (0.563 - 0.587 in)

3. Installation of the remaining components is in the reverse order of removal.

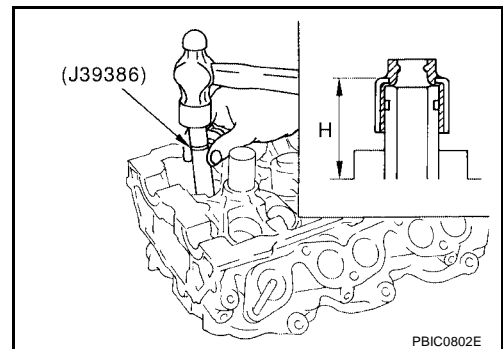

Removal and Installation of Front Oil Seal

EBS00F39

REMOVAL

1. Remove the following parts:
 - Engine undercover.
 - Drive belts. Refer to [EM-12, "DRIVE BELTS"](#).
 - Radiator fan. Refer to [CO-12, "Removal and Installation"](#).
2. Remove the crankshaft pulley as follows:
 - a. Remove the starter motor. Refer to [SC-18, "M/T Models"](#), [SC-18, "4-Speed A/T Models"](#) or [SC-19, "5-Speed A/T Models"](#).



OIL SEAL

- b. Lock the ring gear using Tool attached to the mounting bolt hole.


Tool number : KV10117700 (J44716)

CAUTION:

Do not damage the ring gear teeth, or the signal plate teeth behind the ring gear when setting the stopper.

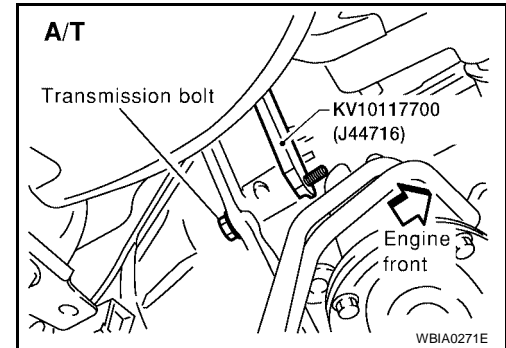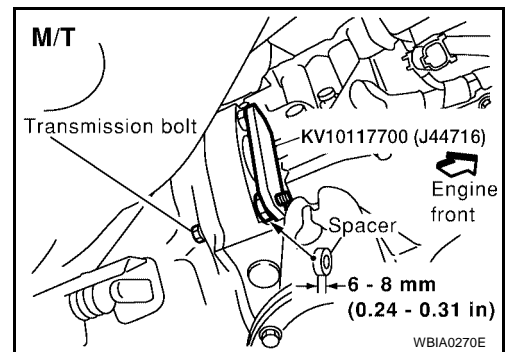


- c. Loosen crankshaft pulley bolt using pulley holder and locate bolt seating surface at 10 mm (0.39 in) from its original position.

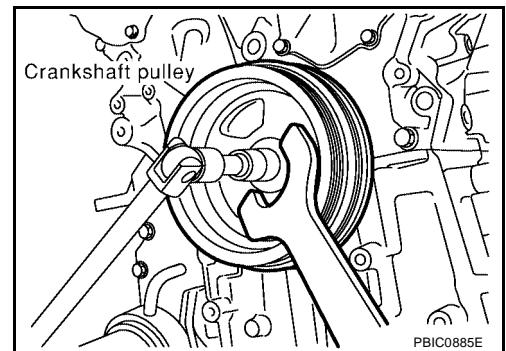

- d. Position a pulley puller at recess hole of crankshaft pulley to remove crankshaft pulley.

CAUTION:


Do not use a puller claw on crankshaft pulley periphery.

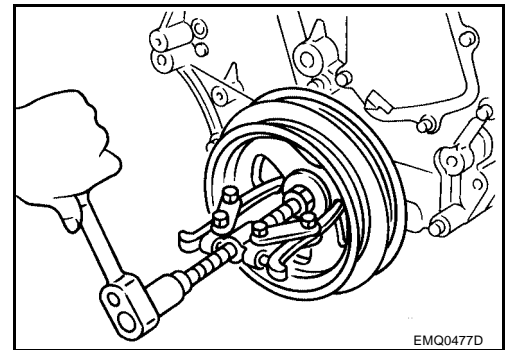

3. Remove front oil seal from front timing chain case.

CAUTION:

Be careful not to damage front timing chain case or crankshaft.

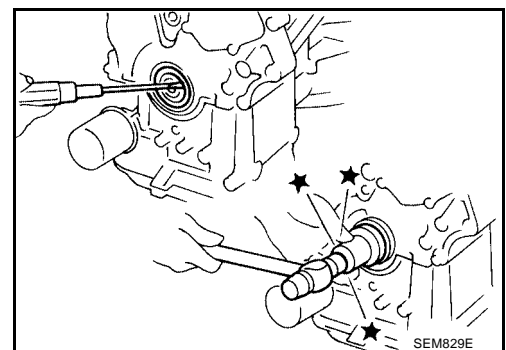

OIL SEAL

INSTALLATION

1. Apply new engine oil to new oil seal and install it flush with front of mounting surface using a suitable tool.
 - Install new oil seal in the direction shown.

Suitable drift

Outer diameter : 59 mm (2.32 in)

Inner diameter : 49 mm (1.93 in)

CAUTION:

Press fit straight and avoid causing burrs or tilting the oil seal.






2. Install crankshaft pulley and tighten the bolt in two steps.
 - Lubricate thread and seat surface of the bolt with new engine oil.
 - Apply a paint mark for the second step of angle tightening.

Step 1 : 39 - 49 N-m (4.0 - 5.0 kg-m, 29 - 36 ft-lb)

Step 2 : 60° - 65° degrees clockwise

3. Remove Tool attached to the mounting bolt hole.

Tool number : KV10117700 (J44716)

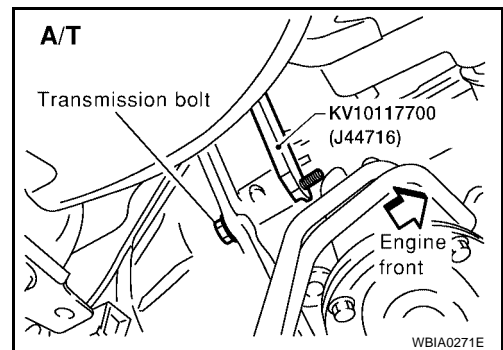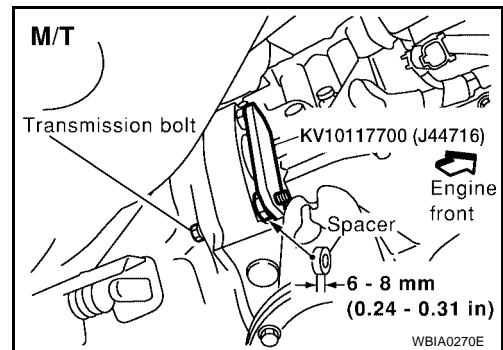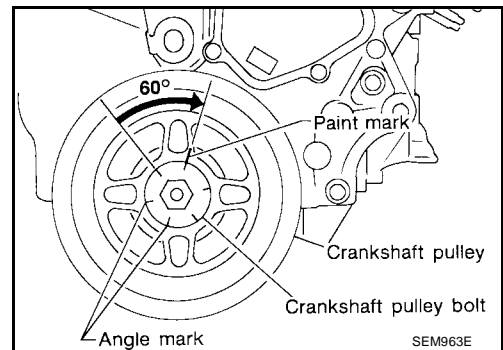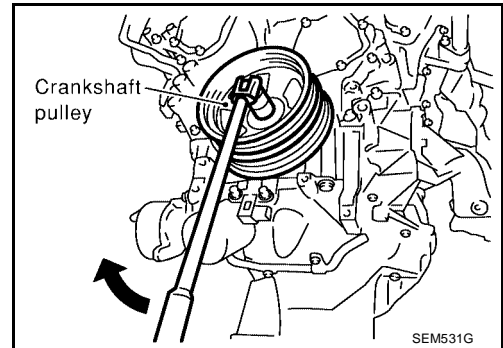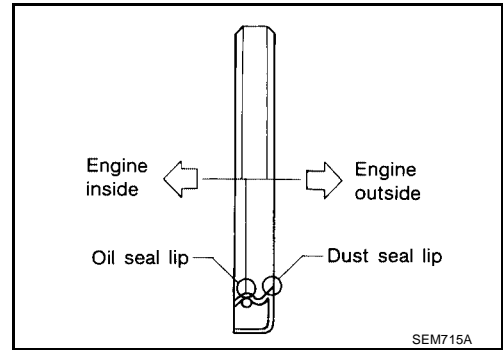

OIL SEAL

4. Installation of the remaining components is in reverse order of removal.

OIL SEAL

EBS00F3A

Removal and Installation of Rear Oil Seal

REMOVAL

1. Remove oil pan (upper). Refer to [EM-30, "Removal and Installation"](#).
2. Remove the transaxle. Refer to [MT-18, "Removal and Installation"](#) (M/T), [AT-275, "REMOVAL AND INSTALLATION"](#) (4 A/T), [AT-627, "REMOVAL AND INSTALLATION"](#) (5 A/T).
3. Remove flywheel (M/T) or drive plate (A/T).
4. Cut away liquid gasket using Tool and remove rear oil seal retainer. Refer to [EM-4, "REMOVAL OF LIQUID GASKET SEALING"](#).


Tool number : KV10111100 (J37228)

CAUTION:

- Be careful not to damage mounting surface.
- If rear oil seal retainer is removed, replace it with a new one.

NOTE:

Rear oil seal and retainer form a single part and are replaced as an assembly.

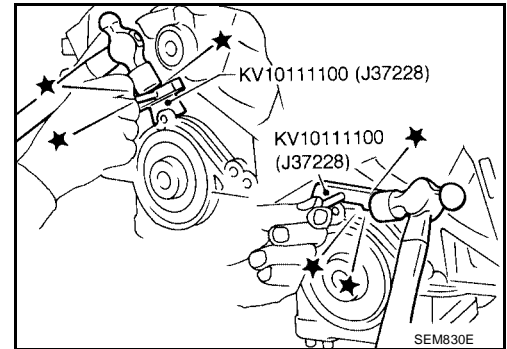


INSTALLATION

1. Remove oil liquid gasket on mating surface of cylinder block and oil pan using a scraper.
2. Apply liquid gasket to rear oil seal retainer using Tool as shown.

Tool number : WS39930000 (-)

- Use Genuine Silicone RTV Sealant or equivalent. Refer to [GI-43, "RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS"](#).
- Assembly should be completed within 5 minutes after coating.

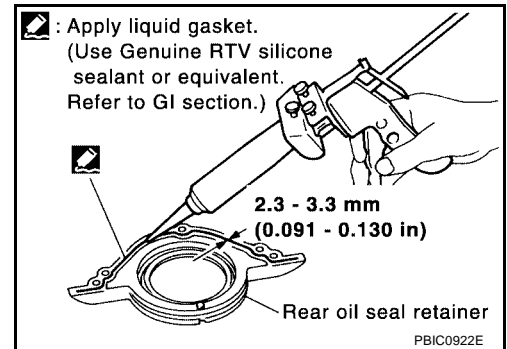


3. Install rear oil seal retainer to cylinder block.

Rear oil seal retainer bolts : 8.2 - 9.3 N·m (0.83 - 0.95 kg·m, 72 - 82 in·lb)

4. Install the flywheel (M/T), if equipped.
 - When installing flywheel to crankshaft, be sure to correctly align crankshaft side dowel pin and flywheel side dowel pin hole.

Flywheel bolts : 83 - 93 N·m (8.5 - 9.5 kg·m, 61 - 69 ft·lb)

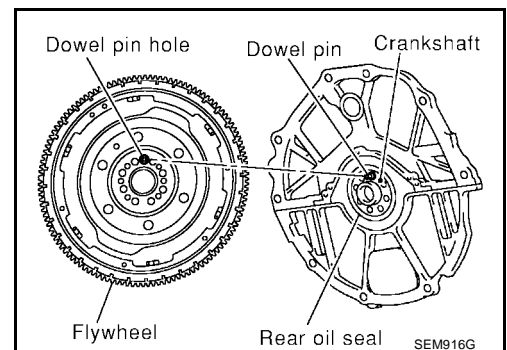


OIL SEAL

5. Install the drive plate (A/T), if equipped.
- Install the drive plate and reinforce plate in the direction shown.
 - Align dowel pins of crankshaft rear and drive plate with pin holes of each part.
 - Secure the crankshaft using Tool.

Tool number : KV10117700 (J44716)

- Tighten the drive plate bolts in one or two steps.

**Drive plate bolts : 83 - 93 N-m (8.5 - 95 kg-m,
61 - 69 ft-lb)**

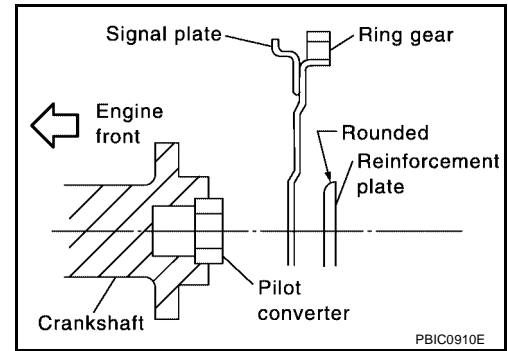

6. Installation of the remaining components is in reverse order of removal.

CYLINDER HEAD

PFP:11041

EBS00F3B

CYLINDER HEAD

On-Vehicle Service


CHECKING COMPRESSION PRESSURE

1. Run the engine until it reaches normal operating temperature.
2. Turn the ignition switch to OFF.
3. Release fuel pressure and leave the fuel pump electrically disconnected. Refer to [EC-51, "FUEL PRESSURE RELEASE"](#).
4. Remove all six spark plugs. Refer to [EM-37, "Removal and Installation"](#).
5. Attach a compression tester to No. 1 cylinder.
6. Depress accelerator pedal fully to keep the electric throttle control actuator butterfly-valve wide open to maximize air intake flow.
7. Crank the engine and record the highest gauge indication.
8. Repeat the measurement on each cylinder (steps 5 - 7).

NOTE:

Always use a fully-charged battery to obtain specified engine speed.

Unit: kPa (kg/cm², psi)/300 rpm

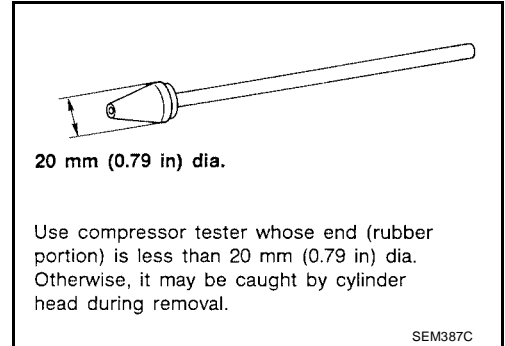

Standard	Minimum	Difference limit between cylinders
1,275 (13.0, 185)	981 (10.0, 142)	98 (1.0, 14)


9. If compression in one or more cylinders is low:
 - a. Pour a small amount of engine oil into cylinders through the spark plug holes.
 - b. Retest compression (steps 5 - 8).
 - If adding oil helps raise compression pressure, then the piston rings may be worn or damaged. If so, replace piston rings after checking piston.
 - If the pressure stays low, a valve may be sticking or is seating improperly. Inspect and repair the valve and/or valve seat. Refer to [EM-151, "VALVE"](#). If the valve and/or valve seat is damaged excessively, replace as necessary.
 - If compression stays low in two or more cylinders that are next to each other:
 - The cylinder head gasket may be leaking.
 - Both cylinders may have valve component damage. Inspect and repair as necessary.
10. After inspection is complete, install removed components.
11. Start engine and confirm that engine runs smoothly.
12. Perform trouble diagnosis. If DTC appears, erase it. Refer to [EC-78, "TROUBLE DIAGNOSIS"](#).

CYLINDER HEAD

EBS00F3C

Removal and Installation

SEC. 111•118•130•140•220

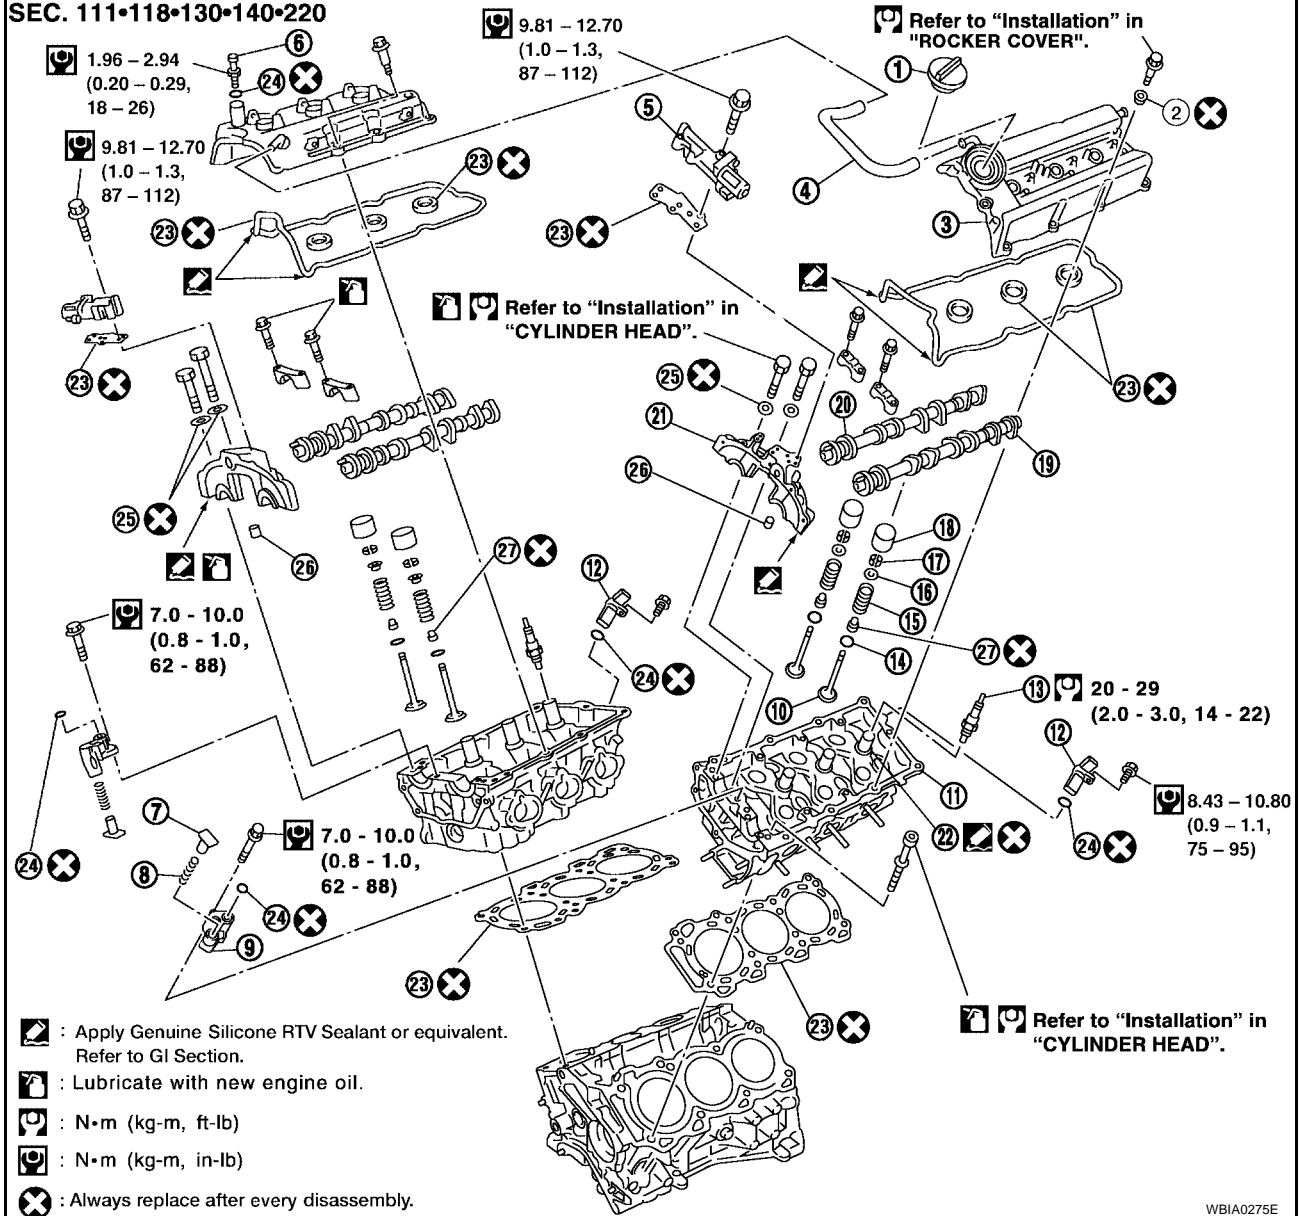

WBIA0275E



- | | | |
|---------------------------|-------------------------------|--------------------------------------|
| 1. Oil filler cap | 2. Washer | 3. Rocker cover |
| 4. PCV hose | 5. IVT control solenoid valve | 6. PCV valve |
| 7. Tensioner sleeve | 8. Spring | 9. Chain tensioner |
| 10. Valve | 11. Cylinder head | 12. Camshaft position sensor (PHASE) |
| 13. Spark plug | 14. Valve spring seat | 15. Valve spring |
| 16. Valve spring retainer | 17. Valve collet | 18. Valve lifter |
| 19. Camshaft (EXH) | 20. Camshaft (INT) | 21. Camshaft bracket |
| 22. Spark plug tube | 23. Gasket | 24. O-ring |
| 25. Seal washer | 26. Dowel pin | 27. Valve oil seal |

REMOVAL



1. Remove the intake manifold. Refer to [EM-24, "REMOVAL"](#) .
2. Remove the timing chains. Refer to [EM-57, "REMOVAL"](#) .
3. Remove the three way catalysts (manifolds), exhaust manifold heat shields and RH exhaust manifold. Refer to [EM-26, "Removal and Installation"](#) .

CYLINDER HEAD


4. Remove the intake and exhaust camshafts and the camshaft brackets.
 - Mark the camshaft brackets so they are placed in the same position and direction for installation.
 - Equally loosen the camshaft bracket bolts in several steps in the order shown.

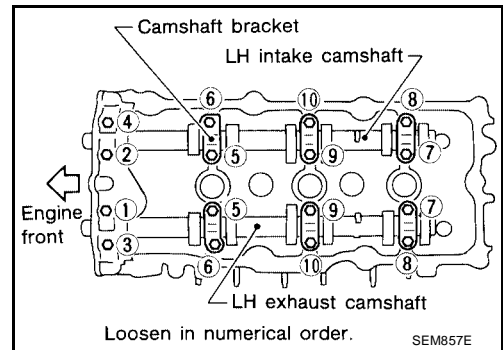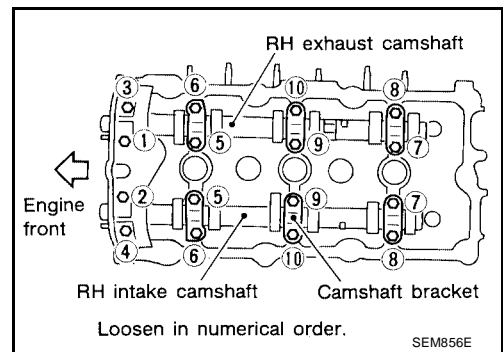

5. Remove the water outlet. Refer to [CO-26. "REMOVAL"](#).
6. Remove the RH and LH cylinder head bolts, using power tool.
 - The bolts should be loosened gradually in three steps in the order shown.

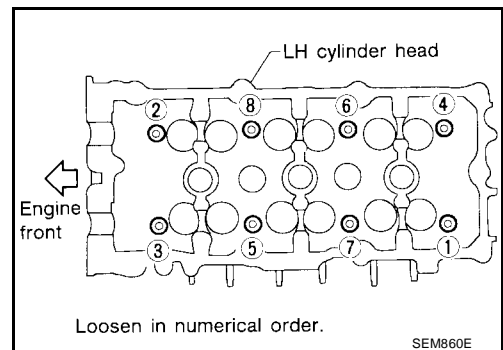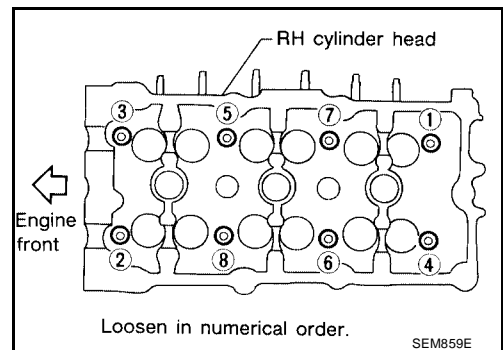



7. Remove cylinder heads and gaskets.
 - Discard the cylinder head gaskets and use new gaskets for installation.

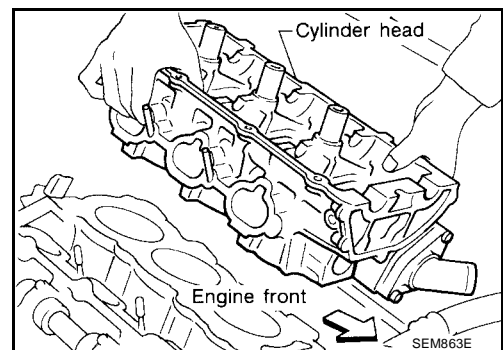

A
EM
C
D
E
F
G
H
I
J
K
L
M

CYLINDER HEAD

8. If necessary, remove the exhaust manifolds. Loosen the exhaust manifold nuts in the order shown.

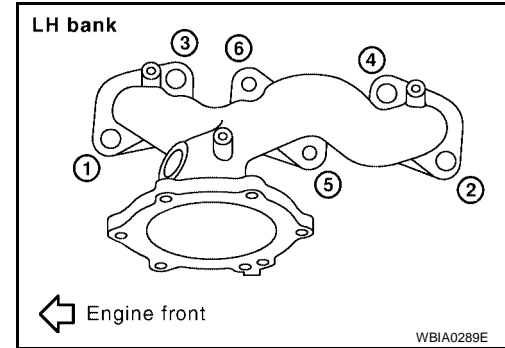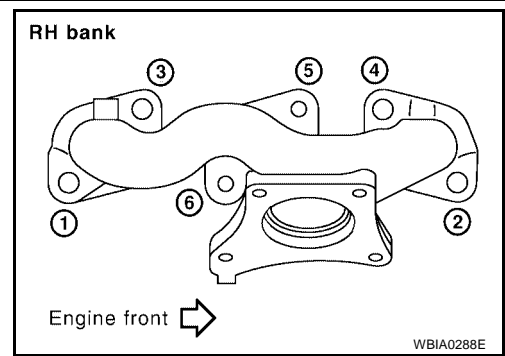

INSPECTION AFTER REMOVAL

Outer Diameter of Cylinder Head Bolts


- Inspect the cylinder head bolts before installing the cylinder heads.

CAUTION:

Cylinder head bolts are tightened by degree rotation tightening method. Whenever the size difference between d1 and d2 exceeds the limit, replace the bolts with new ones.


Limit (d1 - d2) : 0.11 mm (0.0043 in)

- If a reduction in outer diameter appears in a position other than d2, use it as the d2 measuring point.
- Lubricate threads and seat surfaces of the bolts with new engine oil for installation.

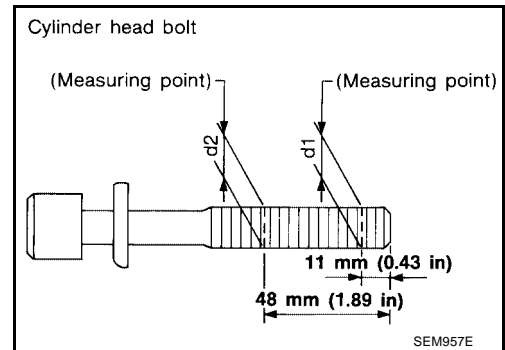


INSTALLATION

1. Before installing the rear timing chain case, remove the old Silicone RTV Sealant from mating surface using a scraper.
 - Also remove old sealant from mating surface of cylinder block.

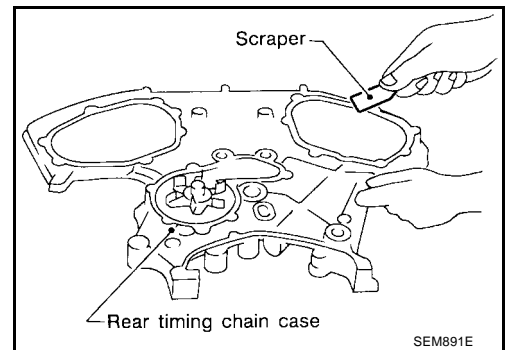


CYLINDER HEAD


- Remove the old Silicone RTV Sealant from the bolt hole and thread.

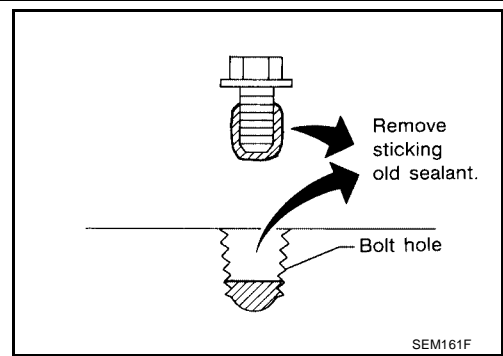

2. Before installing the No. 1 camshaft bracket, remove the old Silicone RTV Sealant from the mating surface using a scraper.
 - Do not scratch the mating surface.

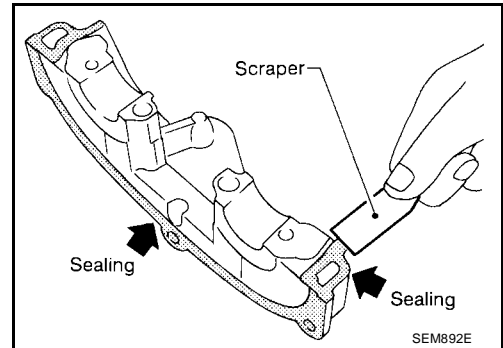


3. Turn the crankshaft until No. 1 piston is set at TDC on the compression stroke.
 - The crankshaft key should line up with the right bank cylinder center line as shown.

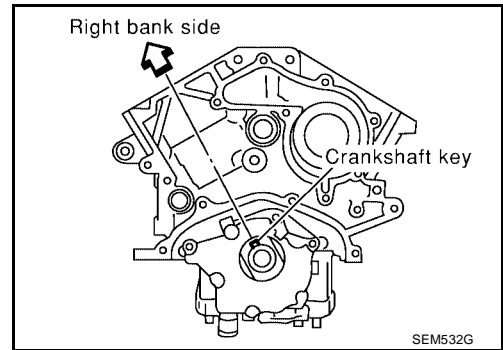


4. Install new gaskets on the cylinder heads.

CAUTION:
Do not rotate crankshaft and camshaft separately or valves will strike piston heads.

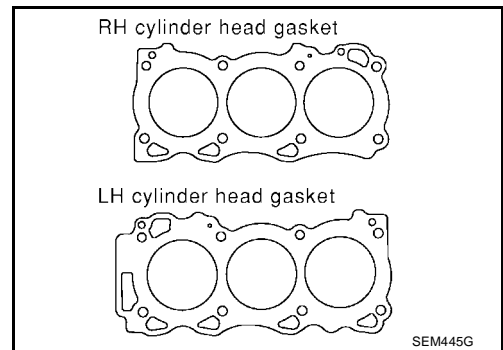


5. If necessary, install the exhaust manifolds. Tighten the exhaust manifold nuts in the order shown.

Exhaust manifold nuts : 28.4 - 33.3 N·m (2.9 - 3.3 kg·m, 21 - 24 ft - lb)

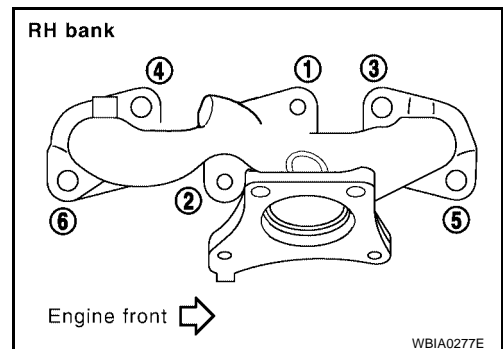

CYLINDER HEAD

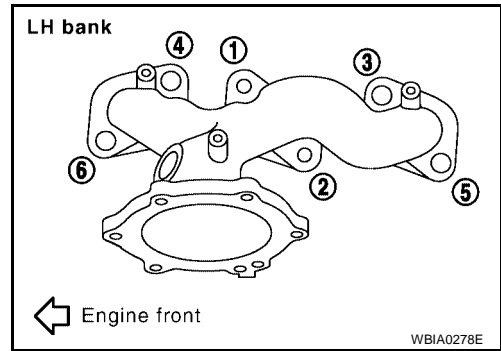

6. Install the cylinder heads on the cylinder block. Tighten the cylinder head bolts in five steps in the order shown.




Step a : 98 N·m (10 kg-m, 72 ft-lb)

Step b : 0N·m Loosen in the reverse order of tightening.

Step c : 32.9 N·m (4.0 kg-m, 29 ft-lb)


Step d : 90° degrees clockwise

Step e : 90° degrees clockwise

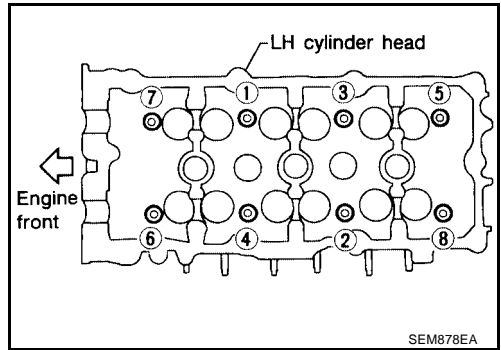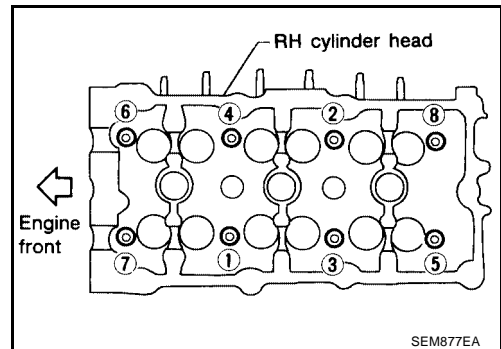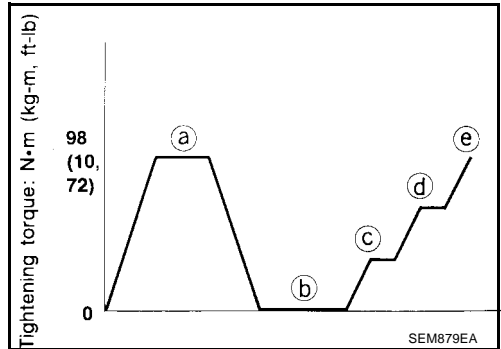

7. Install the water outlet. Refer to [CO-26, "INSTALLATION"](#).
8. Install camshaft chain tensioners on both sides of cylinder head.


Camshaft chain tensioner bolts : 7 - 10 N·m (0.8 - 1.0 kg-m, 62 - 88 in-lb)

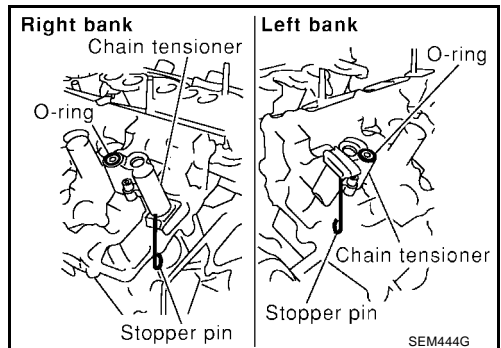

CYLINDER HEAD


9. Install exhaust and intake camshafts and camshaft brackets.

- Intake camshaft has a drill mark on camshaft sprocket mounting flange.

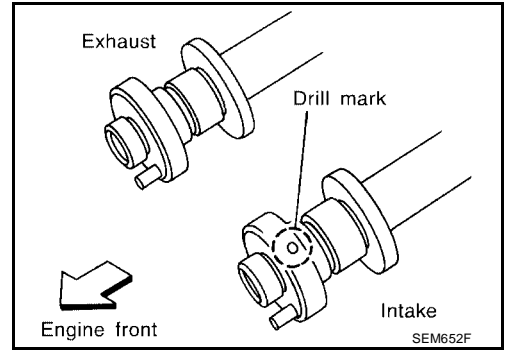


- Follow your identification marks made during removal, or follow the identification marks that are present on the new camshaft components for proper placement.

Bank	INT/EXH	ID mark	Drill mark	Paint marks	
				M1	M2
RH	INT	RE	Yes	Yes	No
	EXH	RE	No	No	Yes
LH	INT	LH	Yes	Yes	No
	EXH	LH	No	No	Yes

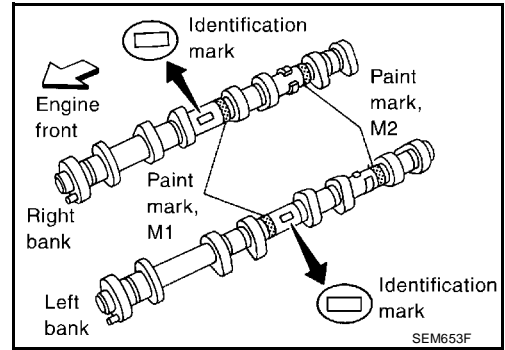

- Position the camshafts:
RH exhaust camshaft dowel pin at about 10 o'clock
LH exhaust camshaft dowel pin at about 2 o'clock.

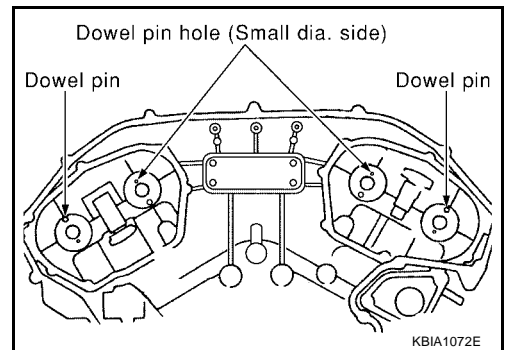


A
EM
C
D
E
F
G
H
I
J
K
L
M


CYLINDER HEAD

10. Before installing No. 1 camshaft bracket, apply sealant to mating surface.


- Use Genuine Silicone RTV Sealant, or equivalent. Refer to [GI-43, "RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS"](#).

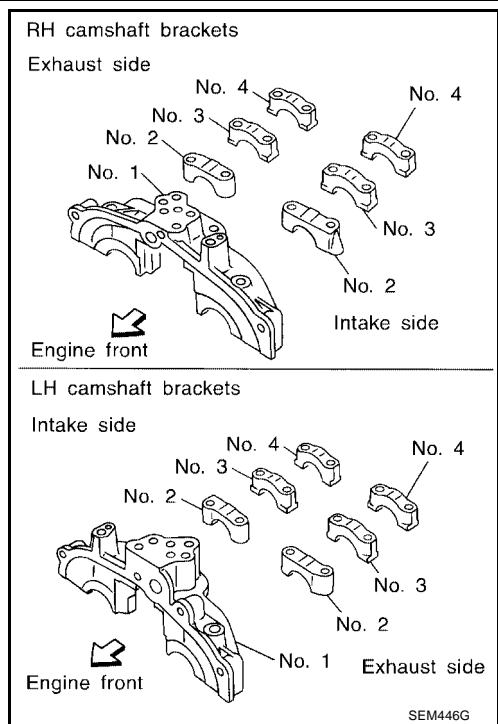

- Before installation, wipe off any protruding sealant.
- Refer to [EM-4, "Precautions for Liquid Gasket"](#).

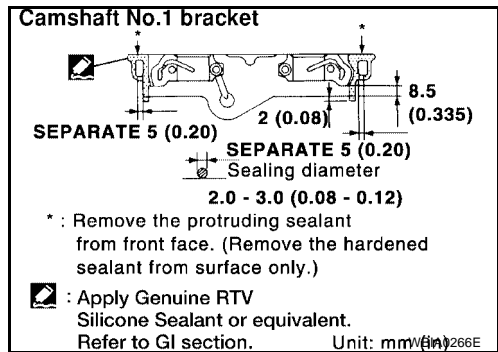

- Install camshaft brackets in their original positions and directions. Align the stamp marks as shown.
- If any part of the valve assembly or camshaft is replaced, check and adjust the valve clearance. Refer to [EM-89, "Valve Clearance"](#).

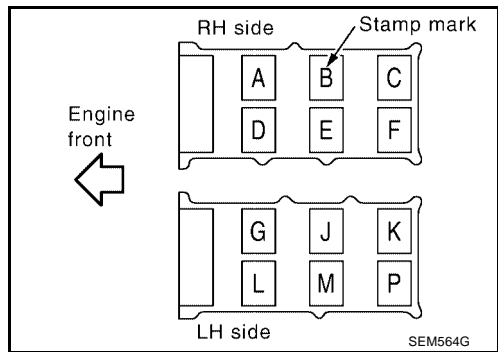

CYLINDER HEAD

11. Tighten the camshaft bracket bolts in five steps in the order shown.

NOTE:

Lubricate the threads and seat surfaces of the camshaft bracket bolts with new engine oil before installation.



Camshaft bracket bolts

Step 1 (bolts 7 - 10) : 1.96 N-m (0.2 kg-m, 17 in-lb)

Step 2 (bolts 1 - 6) : 1.96 N-m (0.2 kg-m, 17 in-lb)


Step 3 : 5.88 N-m (0.6 kg-m, 52 in-lb)

Step 4 (bolts 1 - 6) : 10.4 N-m (1.1 kg-m, 92 in-lb)

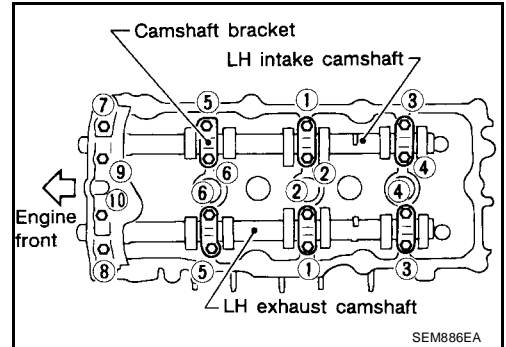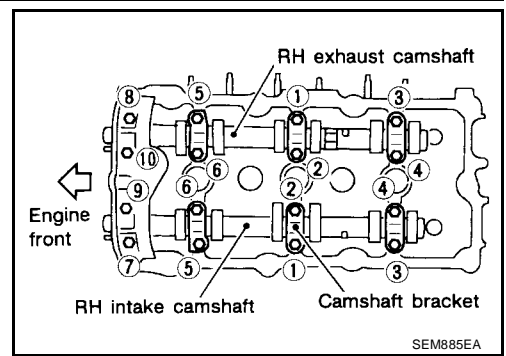


12. Install the IVT control solenoid valves with new gaskets.


IVT control solenoid valve bolts : 10 - 12 N-m (1.0 - 1.3 kg-m, 87 - 112 in-lb)

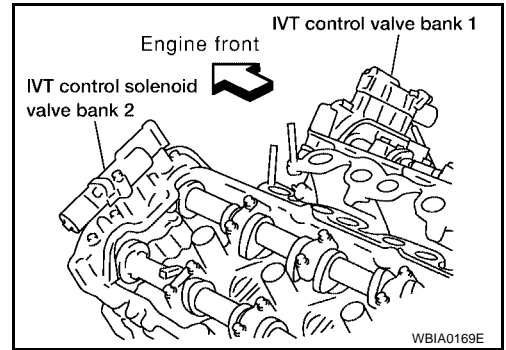

13. Install the new O-rings on the cylinder block.

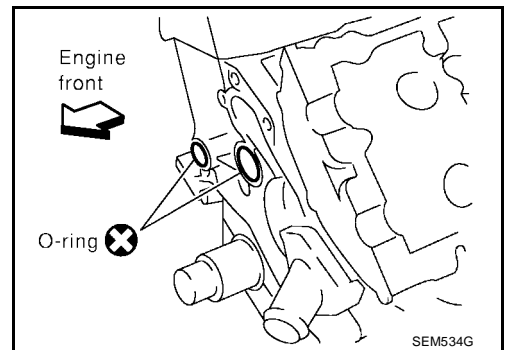

14. Install the new O-rings on the cylinder head.

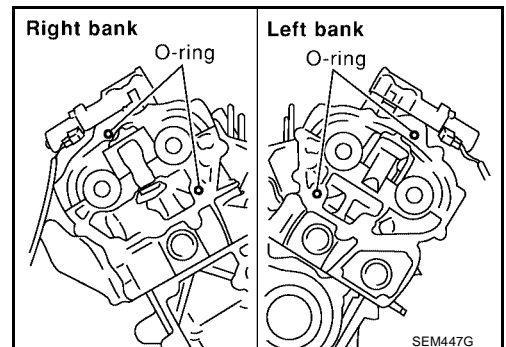

A
EM
C
D
E
F
G
H
I
J
K
L
M

CYLINDER HEAD

15. Install the RH exhaust manifold, three way catalysts (manifolds) and exhaust manifold heat shields. Refer to [EM-26, "Removal and Installation"](#) .
16. Install timing chain. Refer to [EM-56, "Removal and Installation"](#) .
17. Install the intake manifold. Refer to [EM-25, "INSTALLATION"](#) .

CYLINDER HEAD

Disassembly and Assembly

EBS00F3D

A

EM

C

D

E

F

G

H


I

J

K

L

M

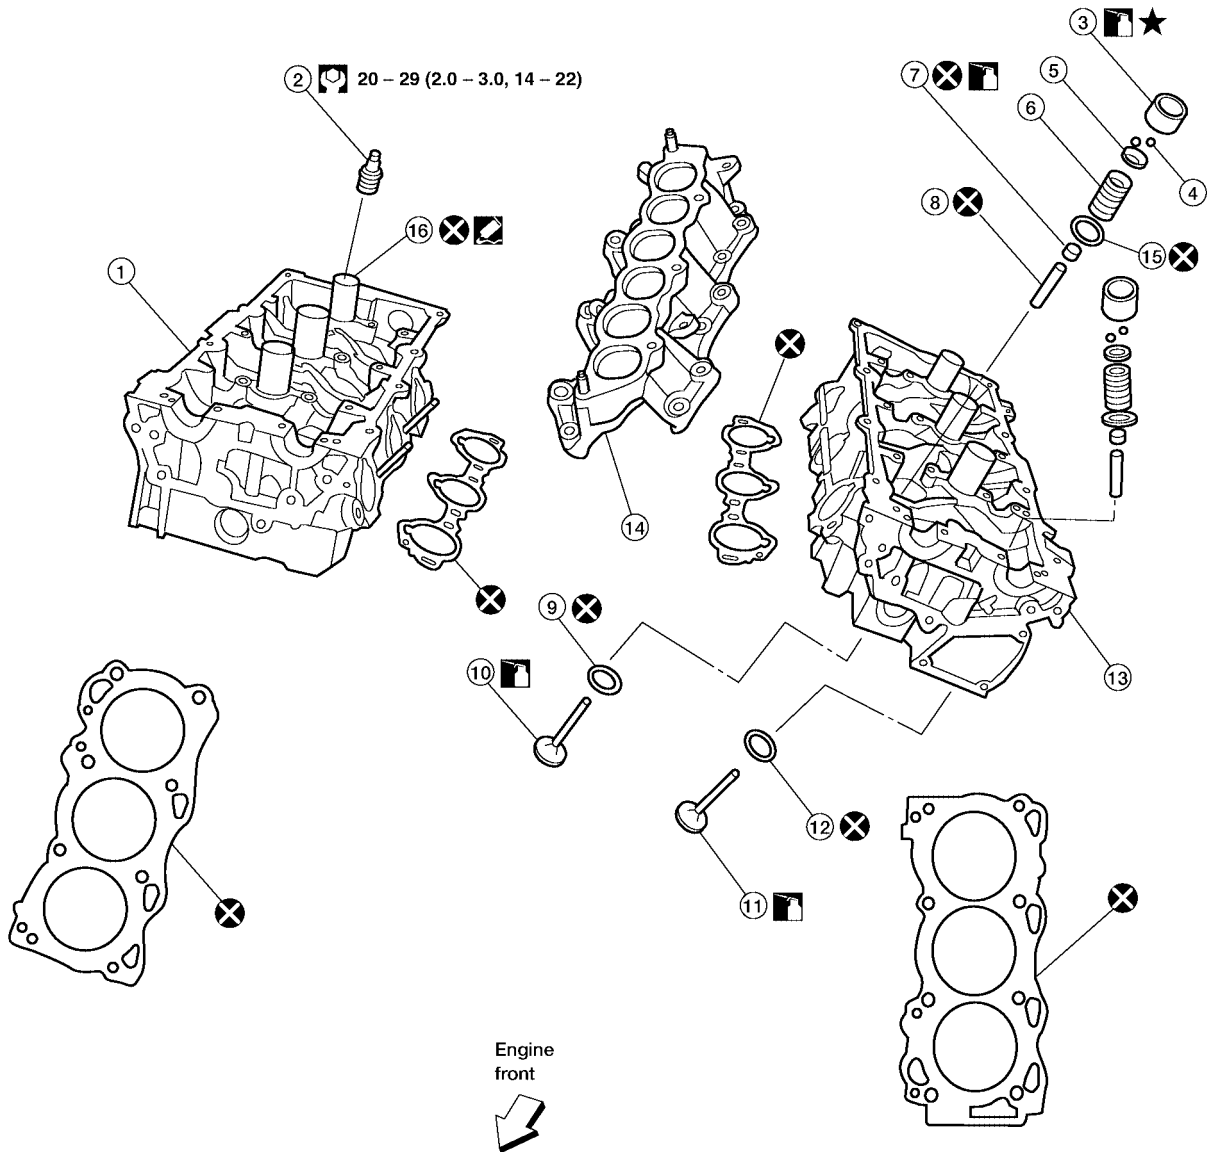

: Apply Genuine Silicone RTV sealant or equivalent. Refer to GI section.

: Selectable parts

: Engine oil

: N·m (kg·m, ft·lb)

: Always replace after every disassembly.

WBIA0216E

- 1. Cylinder head (right bank)
- 4. Valve collet
- 7. Valve oil seal
- 10. Valve (INT)
- 13. Cylinder head (left bank)
- 16. Spark plug tube

- 2. Spark plug
- 5. Valve spring retainer
- 8. Valve guide
- 9. Valve seat (INT)
- 11. Valve (EXH)
- 12. Valve seat (EXH)
- 14. Intake manifold
- 15. Valve spring seat

- 3. Valve lifter
- 6. Valve spring

CYLINDER HEAD

CAUTION:

- When installing camshafts, chain tensioners, oil seals, or other sliding parts, lubricate contacting surfaces with new engine oil.
- Apply new engine oil to threads and seat surface when installing cylinder head, camshaft sprocket, crankshaft pulley, and camshaft bracket.
- Attach tags to valve lifters so as not to mix them up.

DISASSEMBLY

1. Remove valve lifter.
 - Mark position for installation.
2. Remove valve collet.
 - Compress valve spring using Tool. Remove valve collet with magnet driver.

Tool numbers : KV10116200 (J26336-B)
: KV10115900 (J26336-20)
: KV10109230 (-)



3. Remove valve spring retainer, valve spring, and valve spring seat.
4. Push valve stem to combustion chamber side, and remove valve, mark for assembly.

- Inspect valve guide clearance before removal. Refer to [EM-111, "VALVE GUIDE CLEARANCE"](#) .
- Confirm installation point.

5. Remove the valve oil seals using Tool.

Tool number : KV10107902 (J38959)

6. If valve seat must be replaced, refer to [EM-113, "VALVE SEAT REPLACEMENT"](#) .
7. If valve guide must be replaced, refer to [EM-112, "VALVE GUIDE REPLACEMENT"](#) .
8. Remove spark plug with spark plug wrench.
9. Remove spark plug tube, as necessary.
 - Using a pair of pliers, pull spark plug tube out of cylinder head.

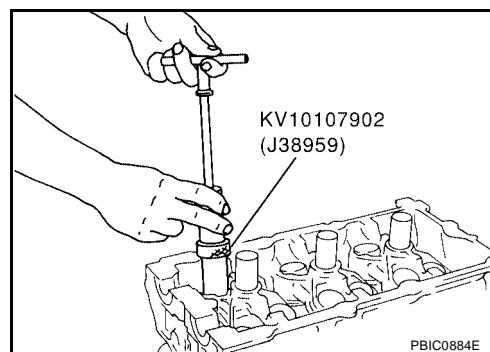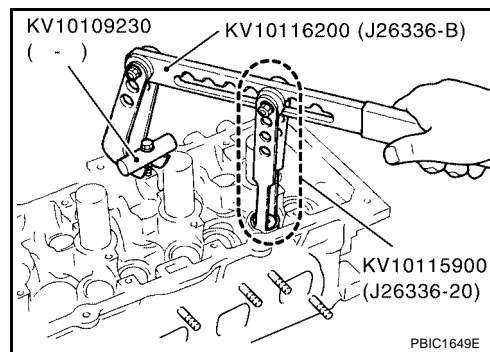

CAUTION:

- Be careful not to damage cylinder head.
- Once removed, a spark plug tube will be deformed and cannot be reused. Do not remove it unless absolutely necessary.

CYLINDER HEAD

EBS00F3E

Inspection After Disassembly CYLINDER HEAD DISTORTION

- Clean the surface of the cylinder head. Use a reliable straightedge and feeler gauge to check the flatness of cylinder head surface.
- Check along six positions as shown.

Head surface distortion

Limit : 0.1 mm (0.004 in)

- If beyond the specified limit, resurface or replace it.
- The limit for cylinder head resurfacing is determined by the cylinder block resurfacing.

Resurfacing Limit



Amount of cylinder head resurfacing is "A".

Amount of cylinder block resurfacing is "B".

The maximum limit : $A + B = 0.2 \text{ mm (0.008 in)}$


- After resurfacing cylinder head, check that camshaft rotates freely by hand. If resistance is felt, cylinder head must be replaced.

Nominal cylinder head height "H" : 126.3 - 126.5 mm (4.972 - 4.980 in)

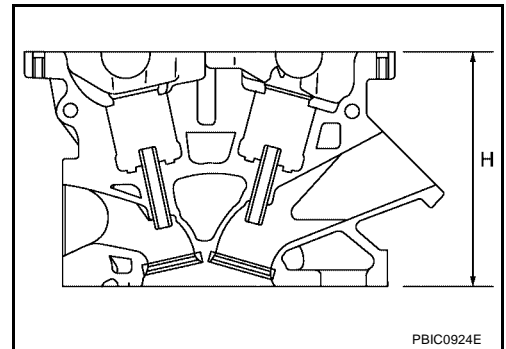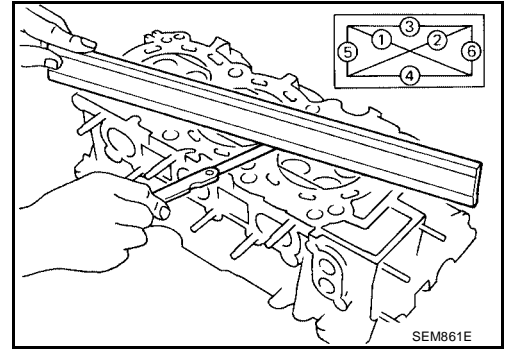

VALVE DIMENSIONS

Check dimensions of each valve, refer to [EM-151, "Valve Dimensions"](#).

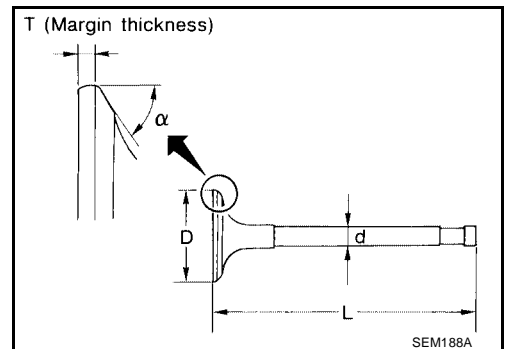


VALVE GUIDE CLEARANCE

1. Measure valve deflection as shown in the figure. (Valve and valve guide mostly wear in this direction.)

Valve deflection limit (dial gauge reading)

Intake : 0.24 mm (0.0094 in)

Exhaust : 0.28 mm (0.0110 in)

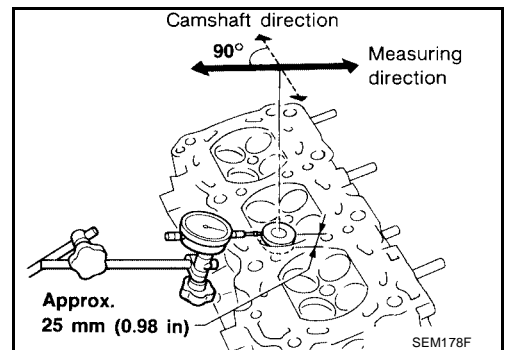

CYLINDER HEAD

2. If it exceeds the limit, check valve to valve guide clearance.
 - a. Measure valve stem diameter and valve guide inner diameter.
 - b. Check that clearance is within specification.

Valve to valve guide clearance standard


Intake : 0.020 - 0.053 mm (0.0008 - 0.0021 in)

Exhaust : 0.030 - 0.063 mm (0.0012 - 0.0025 in)

Valve to valve guide clearance limit

Intake : 0.08 mm (0.0031 in)

Exhaust : 0.09 mm (0.004 in)

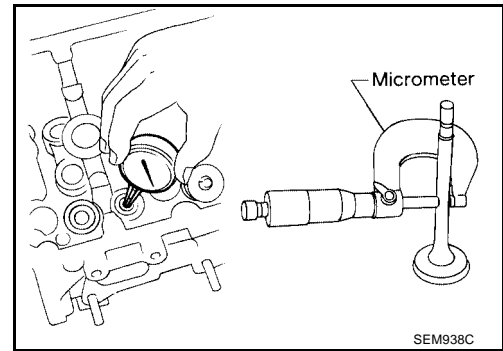


- c. If it exceeds the limit, replace valve or valve guide.

VALVE GUIDE REPLACEMENT

When valve guide is removed, replace with oversized [0.2 mm (0.008 in)] valve guide.


1. To remove valve guide, heat cylinder head to 110° - 130°C (230° - 266°F) by soaking in heated oil.

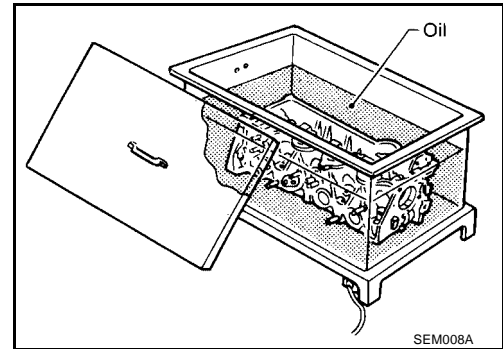

2. Drive out the valve guide with a press [under a 20 kN (2.2 US ton) pressure] or hammer and suitable tool.


WARNING:

Cylinder head is hot. Wear protective equipment to prevent getting burned.

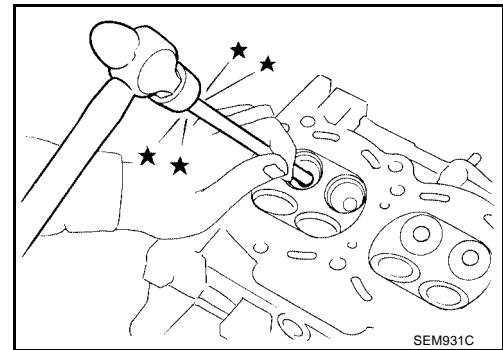

3. Ream cylinder head valve guide hole.


Valve guide hole diameter (for service parts), intake and exhaust : 10.175 - 10.196 mm (0.4006 - 0.4014 in)

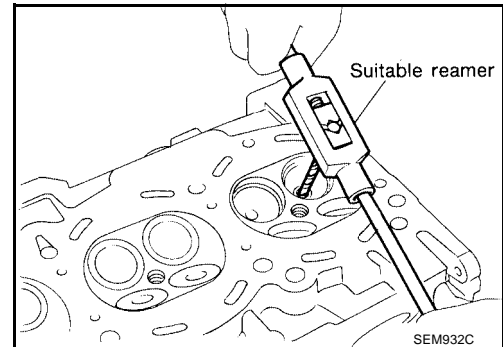

CYLINDER HEAD


- Heat cylinder head to 110° - 130°C (230° - 266°F) by soaking in heated oil and press new valve guide from camshaft side into the cylinder head to the dimensions as shown.

Projection "L" : 12.6 - 12.8 mm (0.496 - 0.504 in)

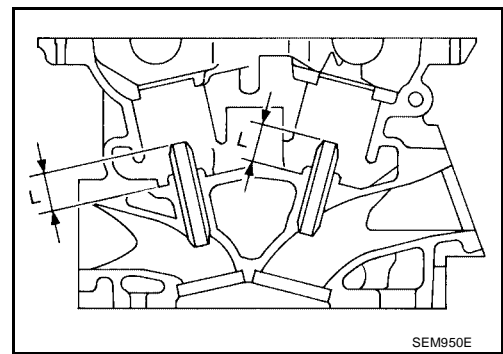


- Using a valve guide reamer, apply a reamer finish to the valve guide.

Intake and exhaust finished size : 6.000 - 6.018 mm (0.2362 - 0.2369 in)

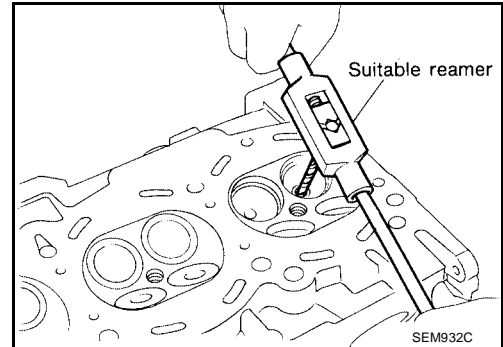

VALVE SEAT CONTACT

- After confirming that the dimensions of valve guides and valves are within specifications, perform this procedure.
- Apply prussian blue onto contacting surface of valve seat to check the condition of the valve contact on the surface.
- Check if the contact area band is continuous all around the circumference.
- If not, grind to adjust valve fitting and check again. If the contacting surface still has N.G conditions even after the re-check, replace valve seat.

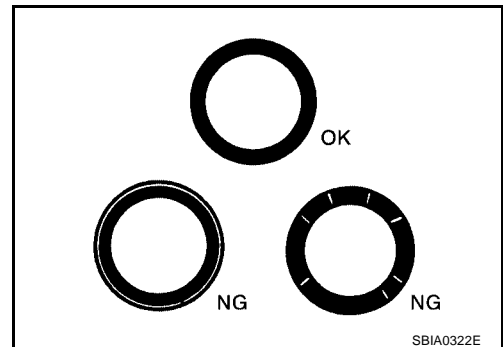

VALVE SEAT REPLACEMENT

- Bore out old seat until it collapses. Boring should not continue beyond the bottom face of the seat recess in cylinder head. Set the machine depth stop to ensure this.
- Ream cylinder head recess for service valve seat.

Oversize : 0.5 mm (0.020 in)

Intake : 38.500 - 38.516 mm (1.5157 - 1.5164 in)

Exhaust : 32.700 - 32.716 mm (1.2874 - 1.2880 in)

- Be sure to ream in circles concentric to the valve guide center.
- This will enable valve seat to fit correctly.


- Heat cylinder head to 110° - 130°C (230° - 266°F) by soaking in heated oil.

- Press fit valve seat until it seats on the bottom.

- Cut or grind valve seat using suitable tool to the specified dimensions. Refer to [EM-151, "VALVE"](#) .


- After cutting, lap valve seat with abrasive compound.

- Check valve seating condition.

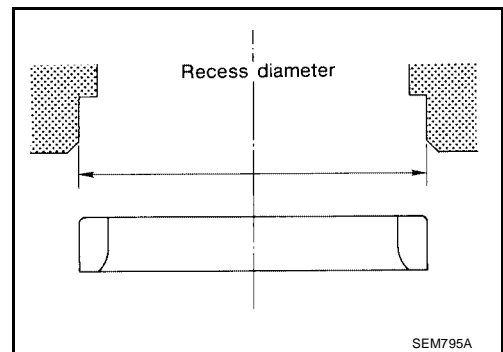


CYLINDER HEAD

Seat face angle " α "	: 45° 25' - 45° 75' degrees/minutes
Contacting width " W " for intake	: 1.09 - 1.31 mm (0.0429 - 0.0516 in)
Contacting width " W " for exhaust	: 1.29 - 1.51 mm (0.0508 - 0.0594 in)

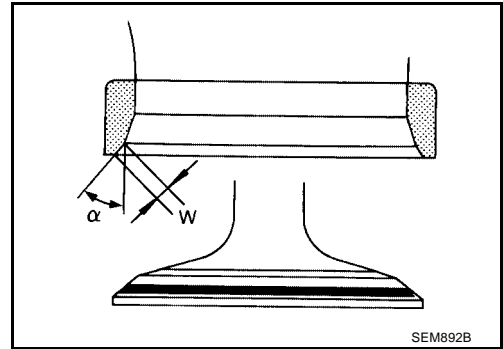

8. Use a depth gauge to measure the distance between the mounting surface of the cylinder head spring seat and the valve stem end. If the distance is shorter than specified, repeat step 5 to adjust it. If it is longer, replace the valve seat with a new one.


Valve seat resurface limit " L " intake	: 41.07 - 41.67 mm (1.6169 - 1.6405 in)
Valve seat resurface limit " L " exhaust	: 41.00 - 41.60 mm (1.6142 - 1.6378 in)

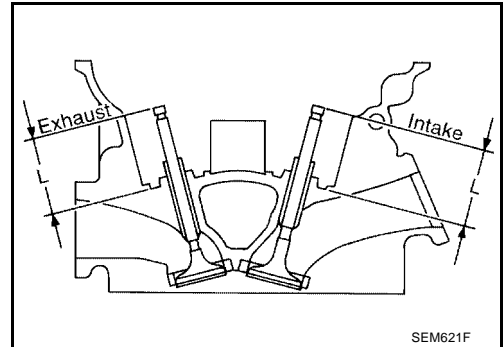

VALVE SPRING SQUARENESS

Set try square along the side of valve spring and rotate the spring. Measure the maximum clearance between the top face of spring and try square.

Out-of-square limit : Less than 2.0 mm (0.079 in)

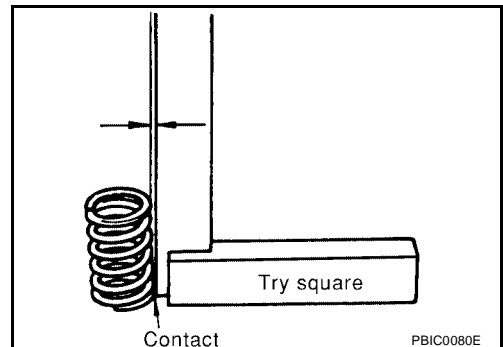


VALVE SPRING DIMENSIONS AND VALVE SPRING PRESSURE LOAD

Check valve spring pressure at specified spring height.

Standard	: 166 - 188 N (16.9 - 19.2 kg, 37.3 - 42.3 lb) at height 37.0 mm (1.457 in)
Limit	: 378 - 426 N (38.6 - 43.5 kg, 85.0 - 95.8 lb) at height 27.8 mm (1.094 in)

If it is not within specifications, replace the spring.

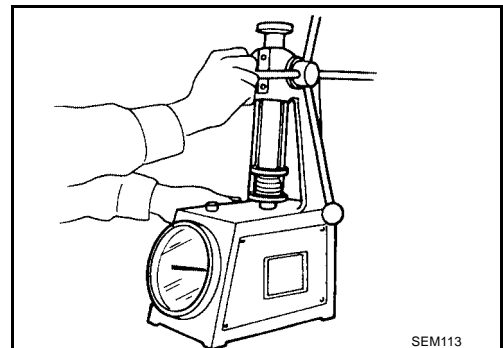

ASSEMBLY

1. Install valve guide. Refer to [EM-112, "VALVE GUIDE REPLACEMENT"](#).
2. Install valve seat. Refer to [EM-113, "VALVE SEAT REPLACEMENT"](#).

CYLINDER HEAD

3. Install new valve spring seats and new valve oil seals using Tool.

Tool number : (J39386)


- Install with valve oil seal drift to match dimension in illustration.

NOTE:

Dimension "H": Height measured before valve spring seat installation.

Height "H"

Intake and exhaust : 14.3 - 14.9 mm (0.563 - 0.587 in)

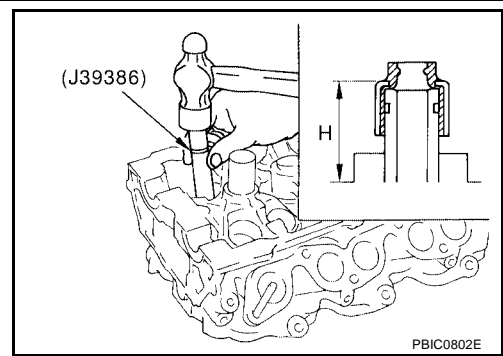


4. Install the valves in their original position, as marked during disassembly.

5. Install valve spring (uneven pitch type).

- Install smaller pitch end (paint mark) to cylinder head side (valve spring seat side).

6. Install valve spring retainer.

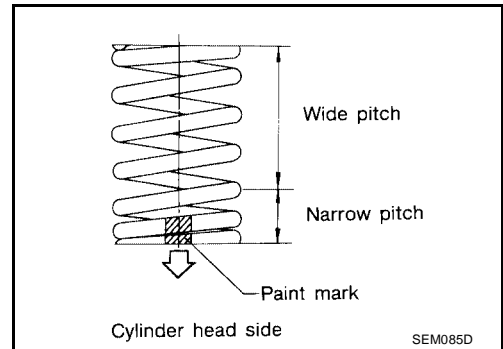

7. Install valve collet.


Tool numbers : KV10116200 (J26336-B)

: KV10115900 (J26336-20)

: KV10109230 (-)

- Compress valve spring using Tool and install valve collet.
- Tap stem edge lightly with plastic hammer after installation to check its installed condition.

8. Install valve lifter.

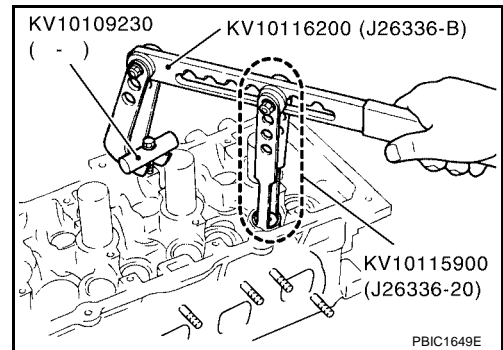


9. Install spark plug tube as follows:

- Remove old liquid gasket from cylinder head mounting hole.
- Apply liquid gasket to area within approximately 12 mm (0.47 in) from edge of spark plug tube press fit side.

- Use Genuine RTV Silicone Sealant or equivalent. Refer to [GI-43, "RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS"](#).

- Using a drift, press fit the spark plug tube so that it height "H" is as specified.

Standard press fit height :38.55 - 38.65 mm
"H" (1.5177 - 1.5217 in)

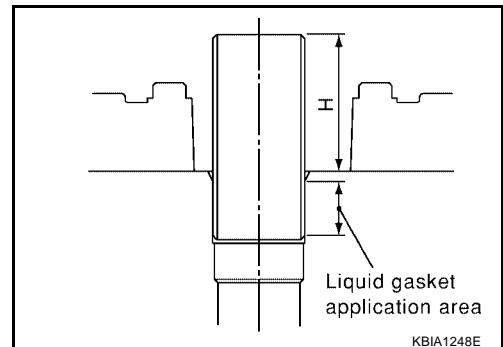

CAUTION:

- When press fitting, take care not to deform spark plug tube.
- After press fitting, wipe off liquid gasket protruding onto cylinder head upper face.

10. Install spark plug with spark plug wrench.

Spark plug : 20 - 29 N·m (2.0 - 3.0 kg·m, 14 - 22 ft·lb)


ENGINE ASSEMBLY

PF1:10001

ENGINE ASSEMBLY

Removal and Installation

EBS00F3F

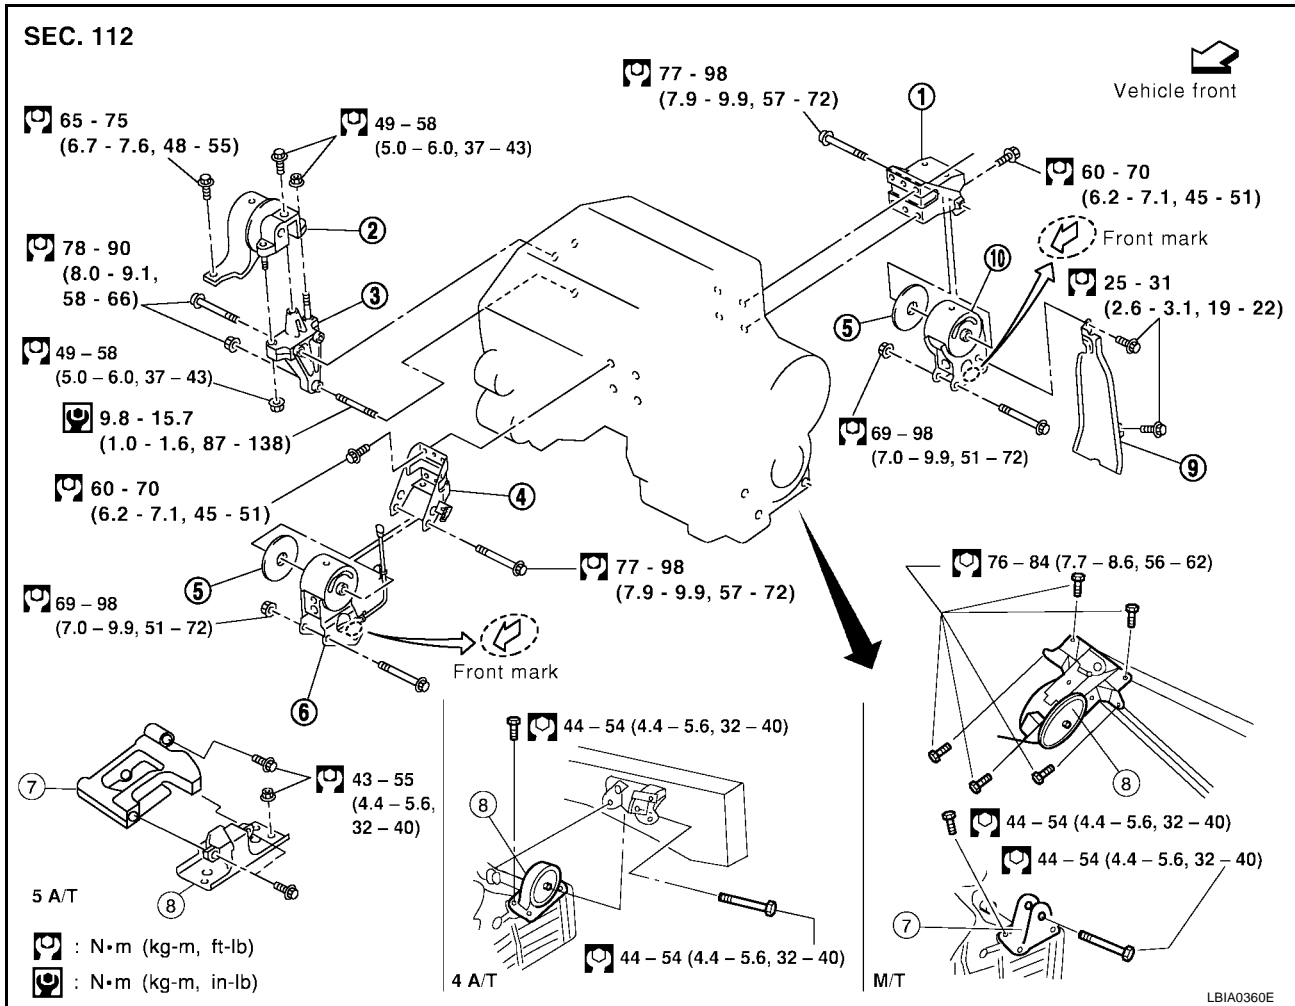

- | | | |
|------------------------------------|------------------------------------|------------------------------------|
| 1. Rear engine mounting bracket | 2. RH engine mounting insulator | 3. RH engine mount |
| 4. Front engine mount | 5. Stopper | 6. Front engine mounting insulator |
| 7. LH transaxle mount | 8. LH transaxle mounting insulator | 9. Air guide (A/T only) |
| 10. Rear engine mounting insulator | | |

WARNING:

- Place chocks at front and back of rear wheels.
- For engines not equipped with engine slingers, attach proper slingers and bolts as described in the NISSAN Parts Catalog.

CAUTION:

- Do not start working until exhaust system and coolant are cool.
- If items or work required are not covered by the engine main body section, refer to the applicable sections.
- Use the correct supporting points for lifting and jacking. Refer to [GI-38, "LIFTING POINT"](#).
- In removing the drive shafts, be careful not to damage any transaxle grease seals.
- Before separating the engine and transaxle, remove the crankshaft position sensor (POS).
- Do not damage the edge of the crankshaft position sensor (POS) or the ring gear teeth.

REMOVAL

1. Drain coolant. Refer to [MA-14, "DRAINING ENGINE COOLANT"](#).
2. Remove the front cowl grille. Refer to [EI-19, "Removal and Installation"](#).
3. Remove the windshield wiper assembly. Refer to [WW-26, "Removal and Installation for Wiper Motor and Linkage"](#).



ENGINE ASSEMBLY

4. Disconnect engine room harness from the engine side and position it aside. Disconnect engine harness ground connections. Access the connector through the glove box opening. Refer to [IP-10, "INSTRUMENT PANEL ASSEMBLY"](#) . A
5. Remove the hood. Refer to [BL-13, "Removal and Installation of Hood Assembly"](#) .
6. Remove the battery and battery tray. Refer to [SC-9, "Removal and Installation"](#) . EM
7. Remove the engine cover using power tool. Remove side engine covers.
8. Disconnect the mass air flow sensor electrical connector.
9. Remove the fresh air intake tube and air cleaner to electric throttle control actuator tube attached to air cleaner lid. Refer to [EM-15, "Removal and Installation"](#) . C
10. Disconnect two connectors below mass air flow sensor attached to the shock tower.
11. Release fuel pressure. Refer to [EC-51, "FUEL PRESSURE RELEASE"](#) . D
12. Disconnect fuel hose quick connection at vehicle piping side. Refer to [EM-39, "Removal and Installation"](#) .
13. Remove and position aside the IPDM E/R and bracket and position aside. Refer to [PG-26, "Removal and Installation of IPDM E/R"](#) . E
14. Remove the radiator assembly, coolant reservoir, and system hoses. Refer to [CO-12, "Removal and Installation"](#) .
15. Disconnect the power brake booster vacuum hose from the back of the intake manifold collector. F
16. Disconnect heater hoses at the cowl.
17. Disconnect the two fusible link connectors at the battery positive terminal. G
18. Disconnect the harness retainers and position the engine harness aside.
19. Remove the ground cable.
20. Remove the clutch operating cylinder with lines attached and position aside. Refer to [CL-10, "Removal and Installation"](#) . H
21. Drain engine oil. Refer to [MA-16, "Changing Engine Oil"](#) .
22. Drain A/T oil. Refer to [MA-22, "Changing A/T Fluid"](#) . I
23. Drain M/T oil. Refer to [MA-20, "Changing M/T Oil"](#) .
24. Disconnect the transaxle shift controls. Refer to [AT-266, "SHIFT CONTROL SYSTEM"](#) (4 A/T) or [AT-615, "SHIFT CONTROL SYSTEM"](#) (5 A/T). J
25. Remove RH splash shield.
26. Remove the front wheel and tires.
27. Remove the drive belts. Refer to [EM-14, "Removal and Installation"](#) . K
28. Remove the front exhaust tube and hanger using power tools. Refer to [EX-3, "Removal and Installation"](#) .
29. Remove engine oil cooler pipe bolts. L
30. Remove the idler pulley and idler bracket.
31. Disconnect the electronically-controlled engine mounting insulator electrical connector (if equipped).
32. Remove the A/C compressor using power tools. Discharge and recover the R134a refrigerant. Refer to [ATC-116, "HFC-134a \(R-134a\) Service Procedure"](#) . M
33. Remove the front drive shafts. Refer to [FAX-11, "Removal and Installation"](#) .
34. Remove the front suspension member. Refer to [FSU-15, "Removal and Installation"](#) .
CAUTION:
Make sure to disconnect electrically controlled engine mounting insulator harness clips and power steering line mounts from the front suspension member prior to removal.
35. Disconnect the power steering pressure switch.
36. Remove the power steering pump, without disconnecting the piping, from the engine and position and secure it aside. Refer to [PS-24, "Removal and Installation"](#) .

ENGINE ASSEMBLY

37. Install engine slingers into front of left bank cylinder head and rear of right bank cylinder head.

Engine slinger bolts : 24.5 - 31.4 N·m (2.5 - 3.2 kg-m, 18 - 23 ft-lb)

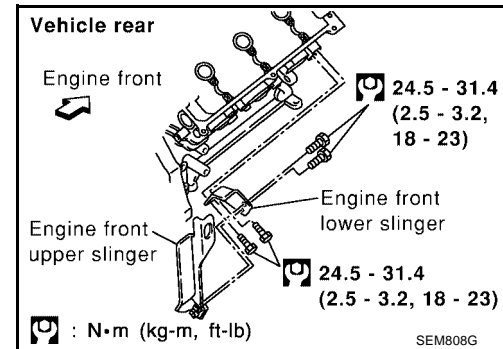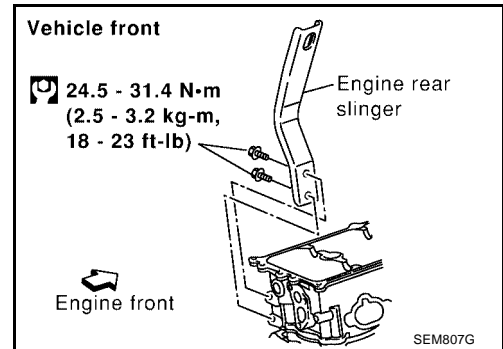

38. Secure a hoist to the engine slingers.
39. Remove the LH transaxle mount through bolt.
40. Remove the RH engine mounting insulator nuts and bolt.
41. Carefully lower the engine and transaxle assembly with the hoist avoiding interference with the vehicle body.

CAUTION:


- Before and during this procedure, always check if any harnesses are left connected.
- Avoid any damage to, or any oil/grease smearing or spills onto the engine mounting insulators.

42. Remove the crankshaft position sensor (POS).
43. Remove the starter motor. Refer to [SC-18, "M/T Models"](#) , [SC-18, "4-Speed A/T Models"](#) or [SC-19, "5-Speed A/T Models"](#) .
44. Disconnect the transmission electrical connectors, harness retainers and position harness aside.
45. Separate the engine and transaxle and mount the engine on a suitable engine stand.

INSTALLATION

Installation is in the reverse order of removal.
Install the electronically-controlled engine mounting insulator harness to match as shown.

Length between A and B : 170 mm (6.69 in)

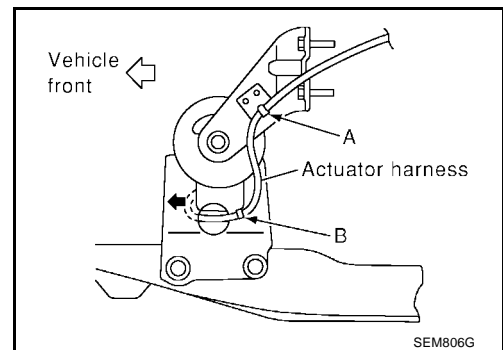

ENGINE ASSEMBLY


Manual Transaxle

CAUTION:

When installing the transaxle, do not allow the transaxle input shaft to contact the clutch cover.

- When installing the transaxle to the engine, use the specified tightening torque in the order shown.


Bolt No.	1	2	3	4	5	6	7	8	9
Tightening torque N·m (kg-m, ft-lb)	70 - 79 (7.1 - 8.1, 52 - 58)					36 - 47 (3.7 - 4.7, 27 - 34)			

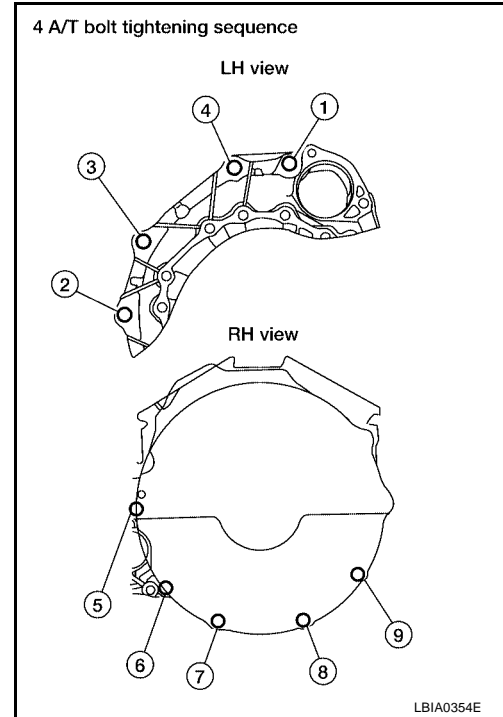

4 A/T

- When installing the transaxle to the engine, use the specified tightening torque in the order shown.

Bolt No.	1	2	3	4	5	6	7	8	9
Tightening torque N·m (kg-m, ft-lb)	70 - 79 (7.1 - 8.1, 52 - 58)					36 - 47 (3.7 - 4.7, 27 - 34)			

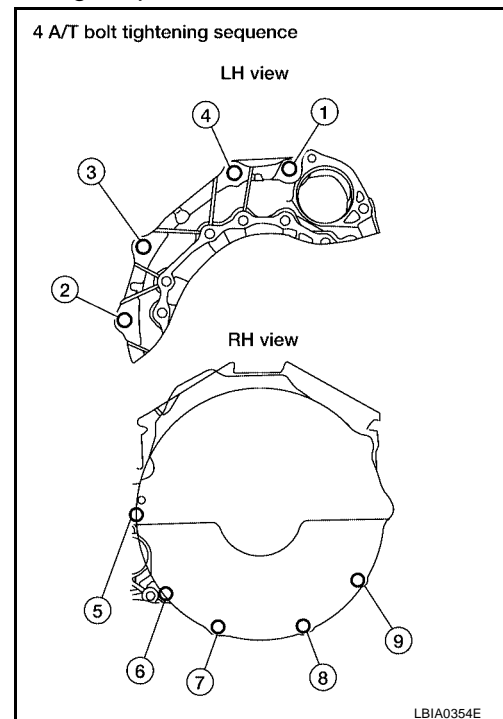


A
EM
C
D
E
F
G
H
I
J
K
L
M

ENGINE ASSEMBLY

5 A/T

- When installing the transaxle to the engine, use the specified tightening torque in the numerical sequence as shown.

Bolt No.	1	2	3	4	5	6	7	8	9
Tightening torque N·m (kg·m, ft·lb)	70 - 79 (7.1 - 8.1, 52 - 58)					36 - 47 (3.7 - 4.7, 27 - 34)			

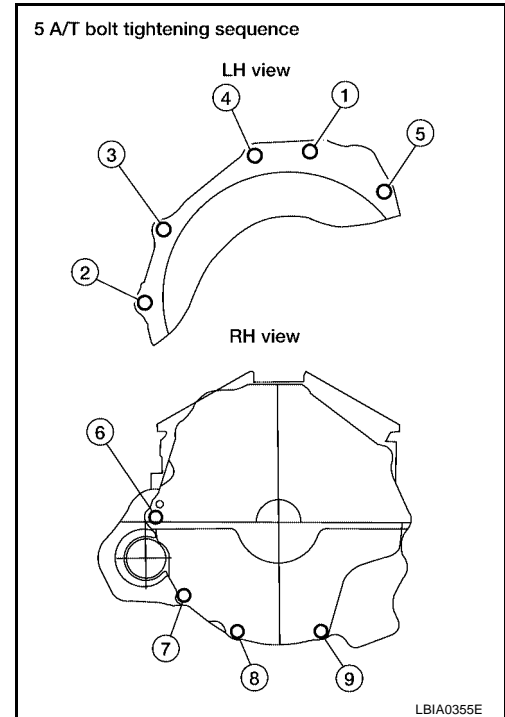

- After installation, check the transaxle oil level, and check for any leaks and any loose mechanisms.
- Install crankshaft position sensor (POS).

Crankshaft position sensor (POS) bolt : 8.4 - 10.8 N·m (0.86 - 0.98 kg·m, 74.6 - 95.5 in·lb)

- Install idler pulley.

Idler pulley bolts : 25 - 31 N·m (2.5 - 3.2 kg·m, 18 - 23 ft·lb)

INSPECTION AFTER INSTALLATION

- Before starting engine, check the levels of coolant, lubrications, working oils, and of air conditioner refrigerant. If less than required quantity, fill to the specified level.
- Run engine to check for unusual noise and vibration.
- Warm up engine thoroughly to make sure there is no leakage of coolant, lubricants, oil, fuel, or exhaust gas.

CYLINDER BLOCK


FPF:11010

EBS00F3G

CYLINDER BLOCK

Disassembly and Assembly

SEC. 110•120•226

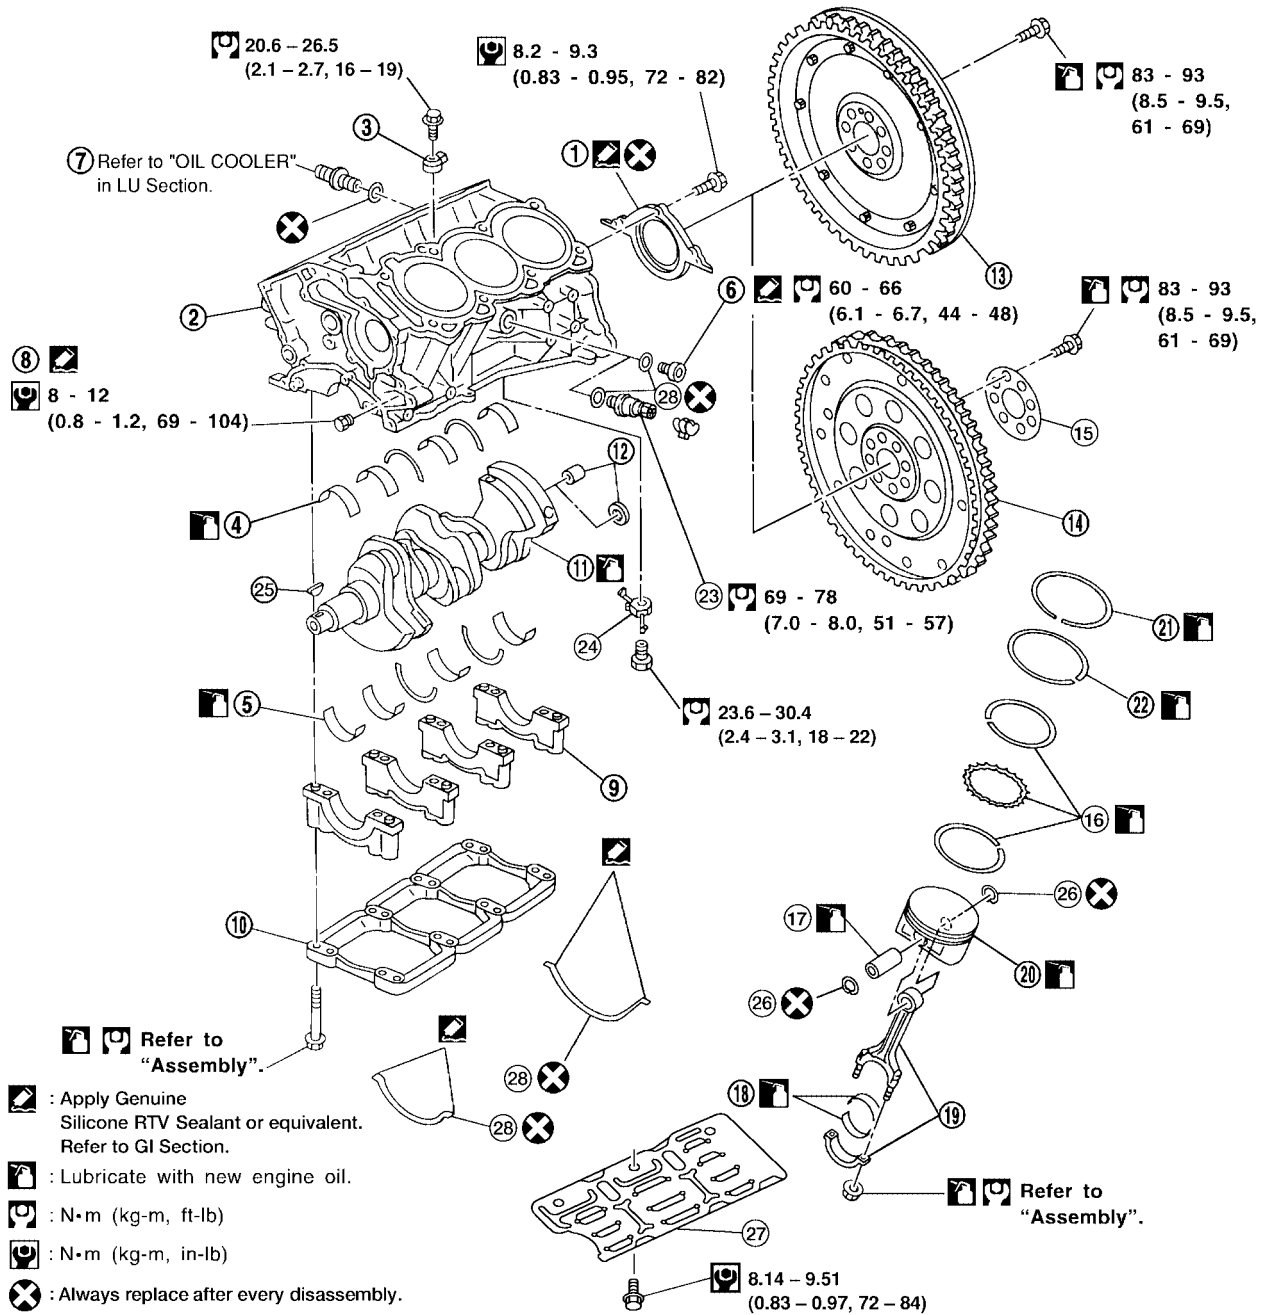


- | | | |
|--------------------------------------|---|--------------------------------------|
| 1. Rear oil seal retainer | 2. Cylinder block | 3. Knock sensor |
| 4. Upper main bearing | 5. Lower main bearing | 6. Water drain plug (LH side) |
| 7. Water connector (RH side) | 8. Water drain plug (water pump side) | 9. Main bearing cap |
| 10. Main bearing beam | 11. Crankshaft | 12. Pilot bushing or pilot converter |
| 13. Flywheel with signal plate (M/T) | 14. Drive plate with signal plate (A/T) | 15. Drive plate reinforcement |
| 16. Oil ring set | 17. Piston pin | 18. Connecting rod bearing |
| 19. Connecting rod | 20. Piston | 21. Top ring |
| 22. Second ring | 23. Cylinder block heater (Canada only) | 24. Oil jet |
| 25. Key | 26. Snap ring | 27. Baffle plate |
| 27. Gasket | | |

WBIA0273E

CYLINDER BLOCK

CAUTION:

- Apply new engine oil to parts as marked in illustrations before installation.
- Place removed parts such as bearings and bearing caps in their proper order and direction.
- When installing the connecting rod nuts, and main bearing cap bolts, apply new engine oil to the threads and mating surfaces
- Do not allow any magnetic materials to contact the signal plate teeth on the drive plate.

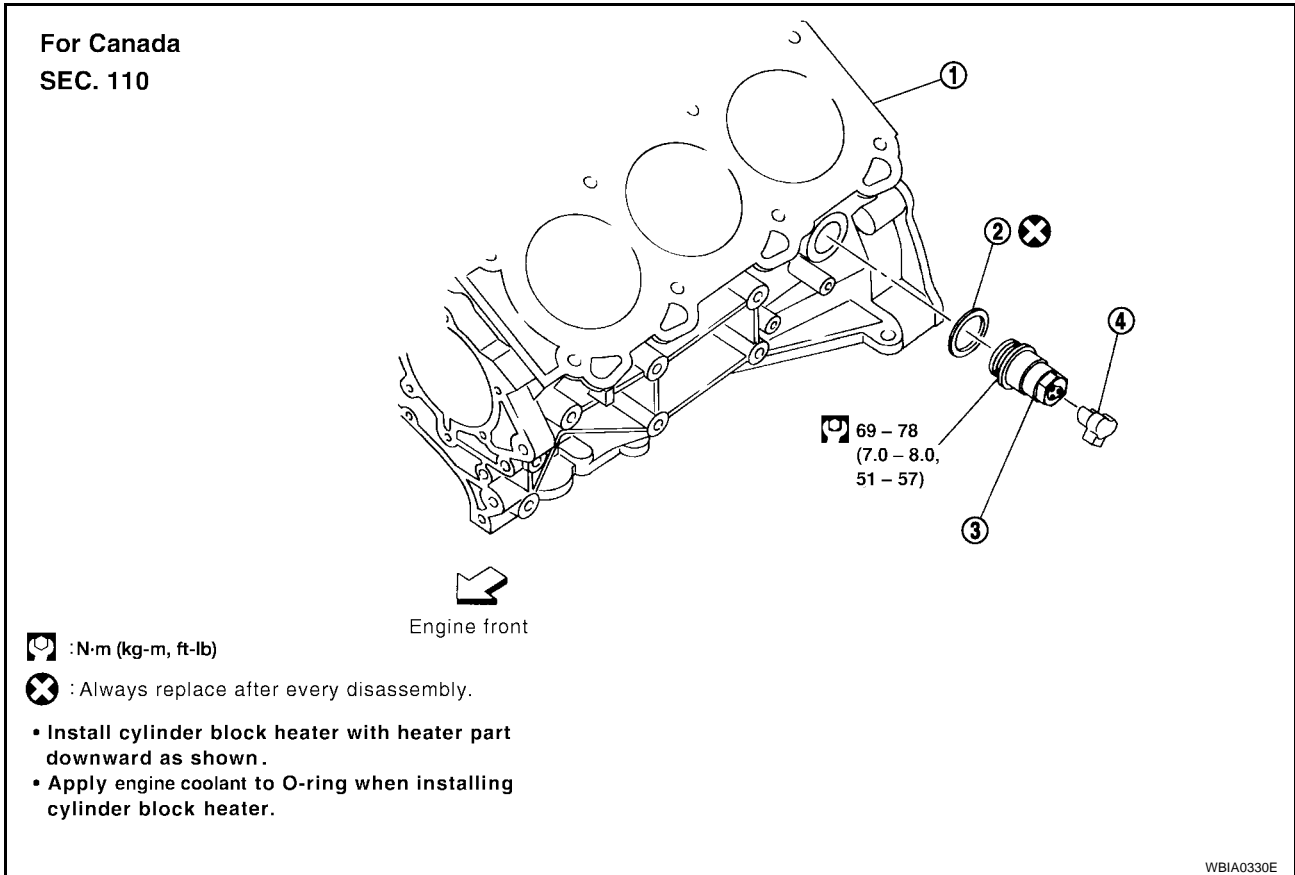


- | | | |
|----------------------------|-----------|--------------------------|
| 1. Cylinder block | 2. O-ring | 3. Cylinder block heater |
| 4. Connector protector cap | | |

DISASSEMBLY

1. Remove the engine assembly. Refer to [EM-116, "ENGINE ASSEMBLY"](#).
2. Install Tools to the right side of cylinder block.

Tool numbers : KV10117001 (-)
 : KV10106500 (-)


Use the spacer on the engine rear side.

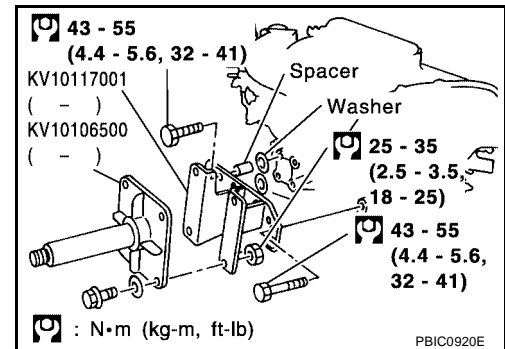

CYLINDER BLOCK

3. Lift engine and mount it on Tool.

Tool numbers : KV10117001 (-)
: KV10106500 (-)
: ST0501S000 (-)

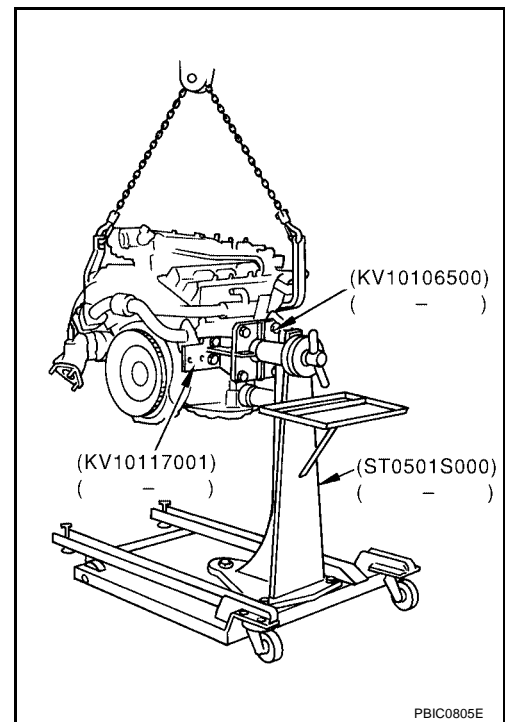


● A commercial engine stand can be used.

CAUTION:

Use an engine stand that has a load capacity of approximately 220kg (441 lb) or more.

NOTE:

This example is an engine stand for holding at the transaxle mounting side with the drive plate removed.

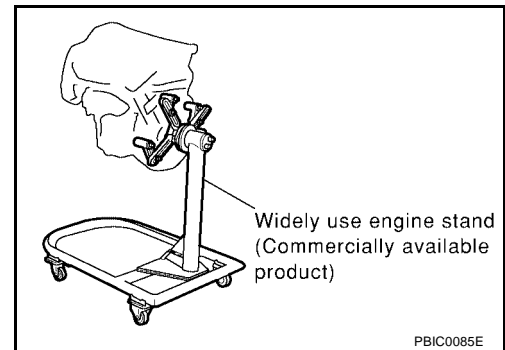

4. Remove the knock sensor.

CAUTION:

Carefully handle sensor avoiding shocking it.

5. Drain the engine of all coolant and oil.

6. Remove the lower and upper oil pans. Refer to [EM-30, "REMOVAL"](#).

7. Remove the timing chain. Refer to [EM-57, "REMOVAL"](#).

8. Remove oil pump. Refer to [LU-9, "REMOVAL"](#).

9. Remove the cylinder heads. Refer to [EM-100, "REMOVAL"](#).

10. Lock crankshaft using Tool, and remove drive plate (A/T) or fly-wheel bolts.

● Loosen the bolts in diagonal order.

Tool number : KV10117700 (J44716)


CAUTION:

● Do not disassemble drive plate.

● Never place the drive plate with signal plate facing down.

● When handling signal plate, take care not to damage or scratch it.


● Handle signal plate in a manner that prevents it from becoming magnetized.

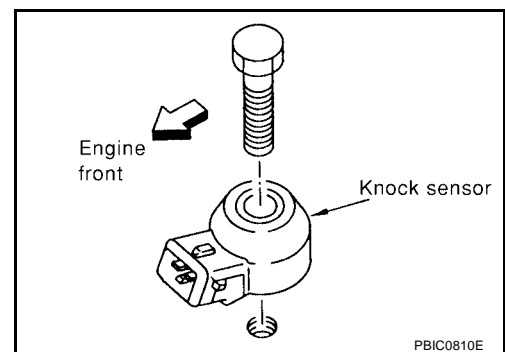

CYLINDER BLOCK

11. Remove pilot bushing (M/T) or pilot converter (A/T) using Tool.

Tool number ST16610001 (J23907)

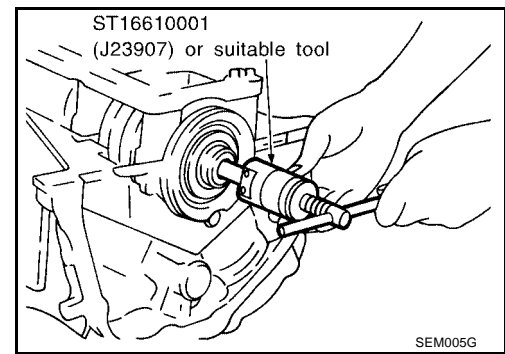

12. Cut away liquid gasket using Tool and remove rear oil seal retainer. Refer to [EM-4, "REMOVAL OF LIQUID GASKET SEALING"](#).


Tool number KV10111100 (J37228)

CAUTION:

- Be careful not to damage mounting surface.
- If rear oil seal retainer is removed, replace it with a new one.

NOTE:


Rear oil seal and retainer form a single part and are handled as an assembly.

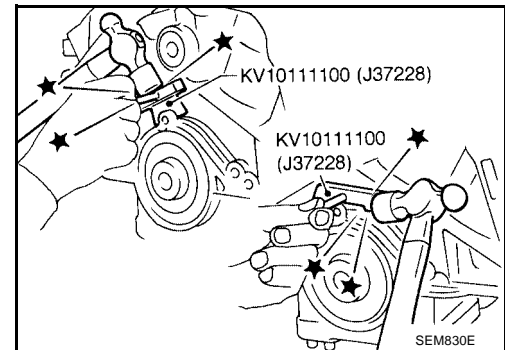

13. Remove baffle plate from main bearing beam.

14. Remove the piston and connecting rod assemblies.

- Position the crankshaft pin corresponding to the connecting rod to be removed onto the bottom dead center.
- Remove the connecting rod cap.
- Using a hammer handle or similar tool, push the piston and connecting rod assembly out to the cylinder head side.
 - Before removing the piston and connecting rod assembly, check the connecting rod side clearance. Refer to [EM-157, "CONNECTING ROD"](#).

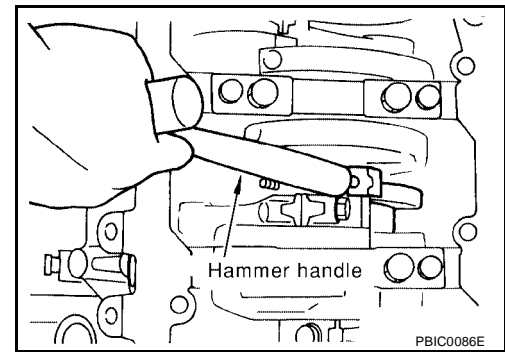

15. Remove the connecting rod bearings.

CAUTION:


- When removing the connecting rod side bearings, note the installation position. Keep them in the correct order.

16. Remove the piston rings from the piston.

- Use a piston ring expander.
- Before removing the piston rings, check the piston ring side clearance. Refer to [EM-139, "PISTON RING SIDE CLEARANCE"](#).

CAUTION:


- When removing the piston rings, be careful not to damage the piston. Do not expand the rings excessively.
- Be careful to mark the rings if they are to be reused so they are installed in their original position.

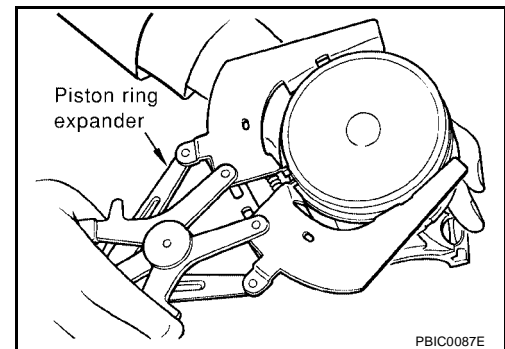


CYLINDER BLOCK

17. Remove the piston from the connecting rod as follows.


a. Using a snap ring pliers, remove the snap ring.

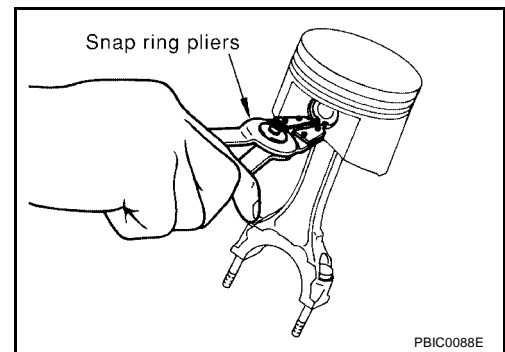

b. Heat the pistons to 60° - 70°C (140° - 158°F).

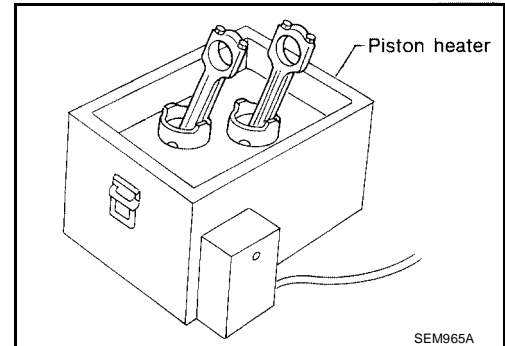


c. Push out the piston pin with a suitable tool, with an outer diameter approximately 20 mm (0.8 in).

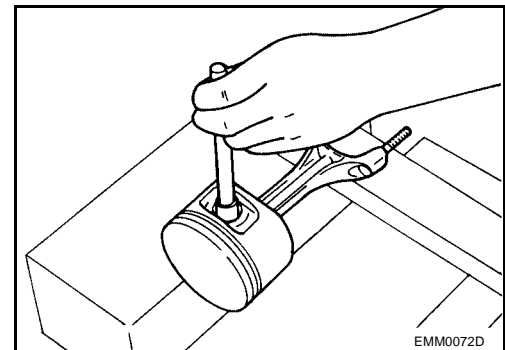

18. Loosen the main bearing cap bolts in the order shown and remove the main bearing beam, bearing caps and crankshaft.

- Before loosening the main bearing cap bolts, measure the crankshaft side clearance. Refer to [EM-144, "OUT-OF-ROUND AND TAPER OF CRANKSHAFT"](#).

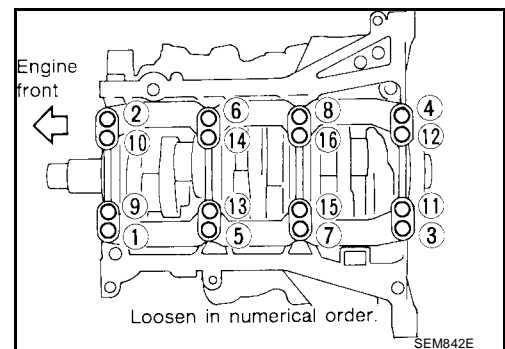


CYLINDER BLOCK

19. Remove the oil jets.
20. Remove the main bearings and thrust bearings from the cylinder block and main bearing caps.

CAUTION:

When removing them, note their direction and position. Keep them in the correct order for installation.

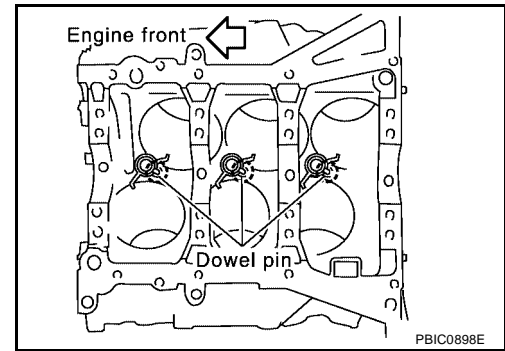

ASSEMBLY

1. Blow out the coolant and oil passages and cylinder bore to remove any foreign materials.

WARNING:


Use goggles to protect your eyes.

2. Apply liquid gasket and install each plug into the cylinder block.
 - Use Genuine Silicone RTV Sealant or equivalent. Refer to [GI-43, "RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS"](#).


3. Install the oil jets.

- Insert the oil jet dowel pin into the cylinder block dowel pin hole, and tighten the oil jet bolts.

Oil jet bolts : 23.6 - 30.4 N·m (2.4 - 3.1 kg·m, 18 - 22 ft·lb)

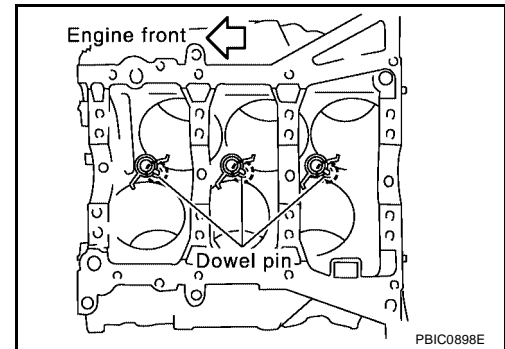


4. Install the main bearings and the thrust bearings.
 - a. Remove dust, dirt, and oil on the bearing mating surfaces of the cylinder block and the main bearing cap.
 - b. Install the thrust bearings to both sides of the No. 3 journal housing on the cylinder block and the main bearing cap.
 - Install the thrust bearings with the oil groove facing the crankshaft arm (outside).
 - Install bearing with a projection on one end on cylinder block and bearing with a projection at center on cap. Align each projection with mating notch.

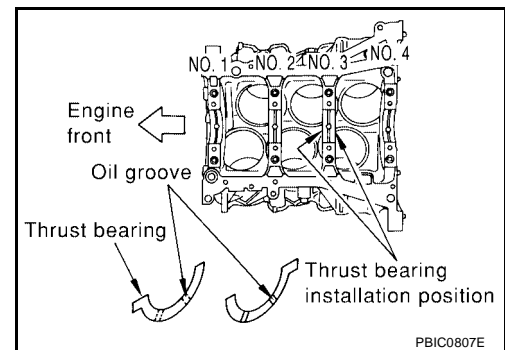

5. Set the upper main bearings in their proper positions on the cylinder block.

- Confirm the correct main bearings are used. Refer to [EM-142, "PISTON-TO-CYLINDER BORE CLEARANCE"](#).

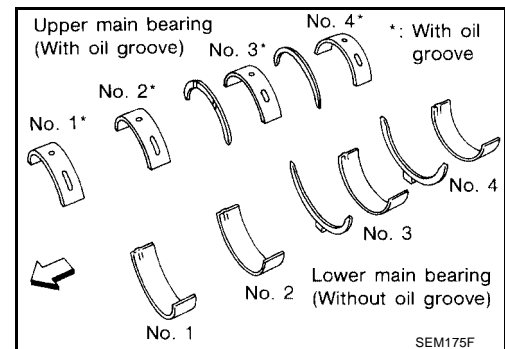


CYLINDER BLOCK

6. Check specifications for the re-use of the main bearing cap bolts.


- Measure d1 and d2 as shown.
- For d2, select the minimum diameter in the measuring area.
- If the difference between d1 and d2 exceeds the limit, replace the bolts for assembly.

Limit (d1 - d2) : 0.11 mm (0.0043 in)

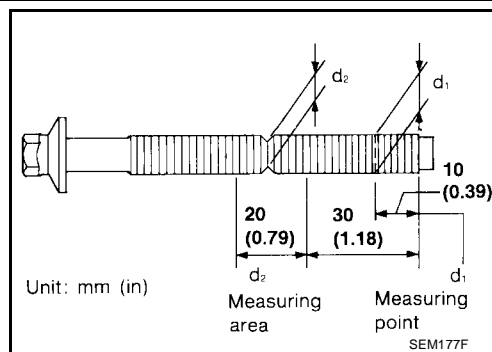

7. After installing the crankshaft, lower main bearings, main bearing caps, main bearing beam, and bearing cap bolts.

- Make sure that the front marks on the main bearing beam faces the front of the engine.
- Prior to tightening all the bearing cap bolts, place the bearing beam in its proper position by shifting the crankshaft in the axial position.
- After tightening the bearing cap bolts, make sure the crankshaft turns smoothly.
- Lubricate the threads and seat surfaces of the bolts with new engine oil.

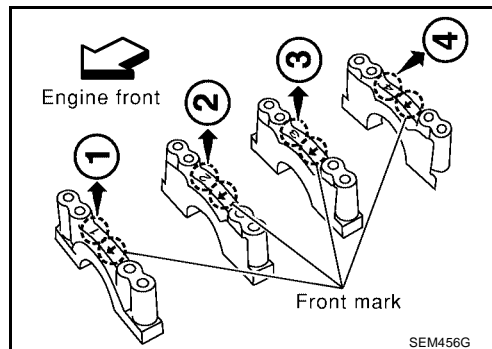

e. Tighten the bearing cap bolts in two steps in the order shown:



Bearing cap bolts

Step 1 : 32 - 38 N·m (3.3 - 3.9 kg·m, 24 - 28 ft-lb)

Step 2 : 90° - 95° degrees clockwise

CAUTION:

Measure the tighten angle with an angle wrench. Do not measure visually.

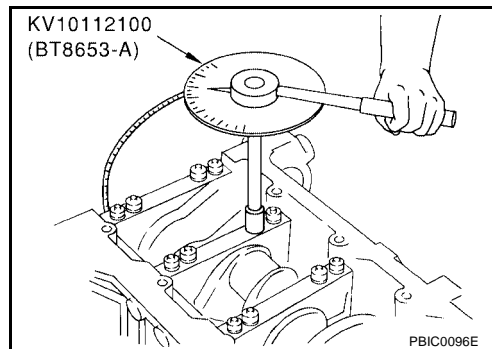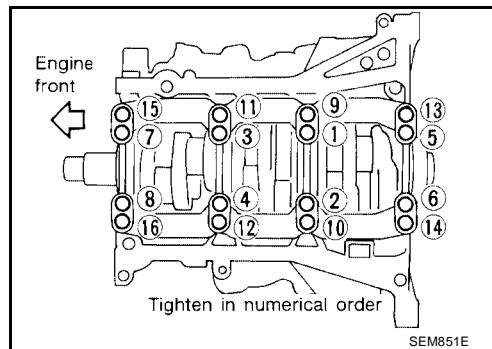


CYLINDER BLOCK

8. Using a dial indicator, measure the clearance between the thrust bearings and the connecting rods when the crankshaft is moved from front to rear.

Standard : 0.10 - 0.25 mm (0.0039 - 0.0098 in)

Limit : 0.30 mm (0.0118 in)

- If beyond the limit, replace the thrust bearings and measure again. If still beyond the limit, replace the crankshaft.

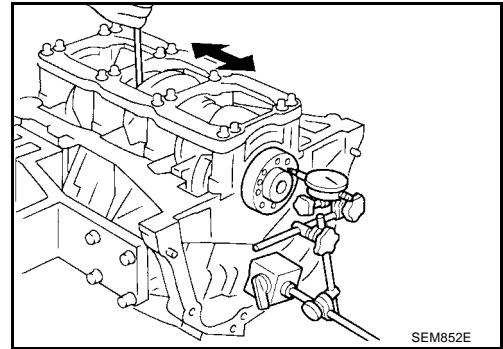

9. Install the rear oil seal retainer.

- Apply sealant to rear oil seal retainer using Tool as shown.


Tool number : WS39930000 (-)

- Use Genuine Silicone RTV Sealant, or equivalent. Refer to [GI-43, "RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS"](#).

Rear oil seal retainer bolts : 8.2 - 9.3 N·m (0.83 - 0.95 kg·m, 72 - 82 in·lb)

CAUTION:


Rear oil seal is replaced with the rear oil seal retainer and must be replaced as an assembly.

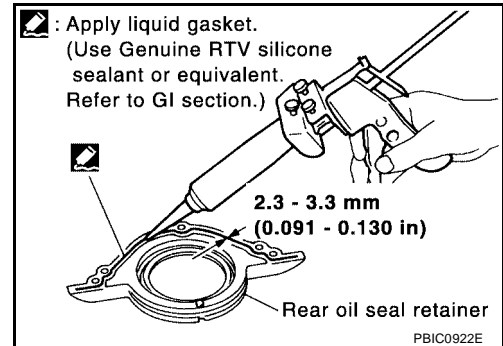

10. Install the piston to the connecting rod.


- a. Using suitable snap ring pliers, install the snap ring into the pin-groove of the piston rear side.

- Insert it fully into groove to install.

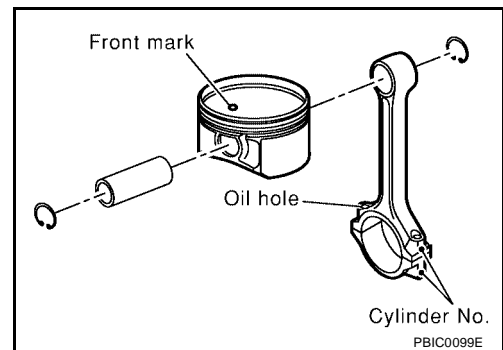


- b. Install the piston to the connecting rod.

- Heat the piston until the piston pin can be pushed in by hand without excess force [approx. 60° - 70°C (140° to 158°F)]. From the front to the rear, insert the piston pin into the piston and through the connecting rod.

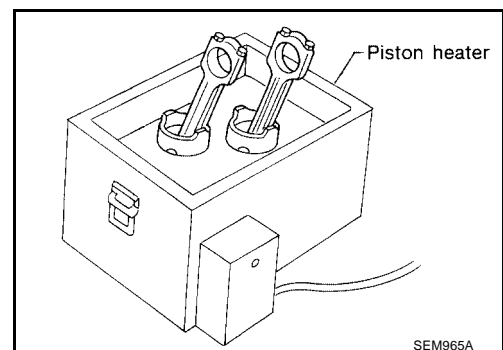


CYLINDER BLOCK

- Assemble so that the front mark on the piston crown and the oil holes and the cylinder No. on the connecting rod are positioned as shown.

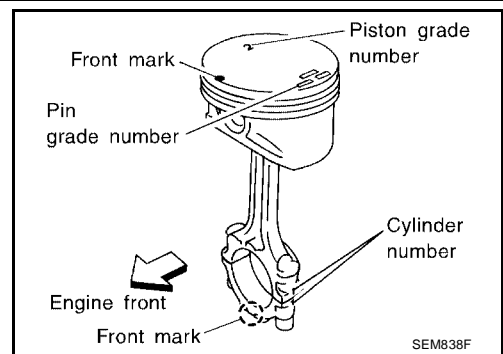


- c. Install the snap ring into the front of the piston pin-groove.
- After installing, check that the connecting rod pivots smoothly on the pin.

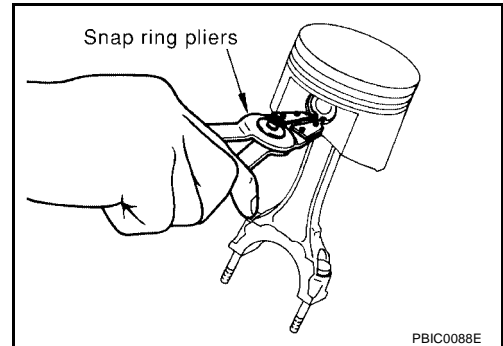


11. Install the piston rings using a piston ring expander.
- Install the top ring and the second ring with the stamped surface facing upward. If the ring is not stamped it can face in either direction.

CAUTION:


- Be careful not to damage the piston.
- When the piston rings are not replaced, remount the rings in their original positions.

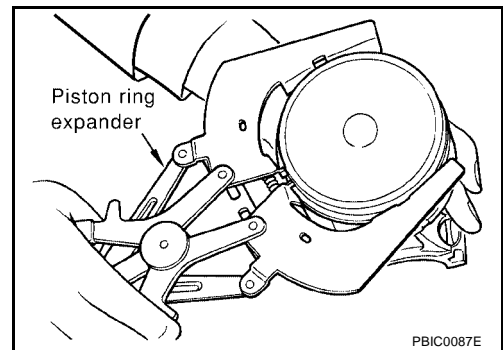

- When replacing the piston rings, those without punchmarks can be mounted either side up.

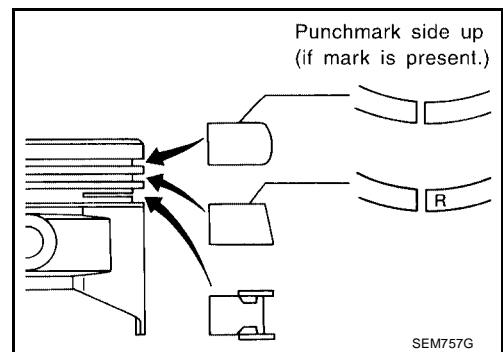

- Position each ring with the gap as shown, referring to the piston front mark.

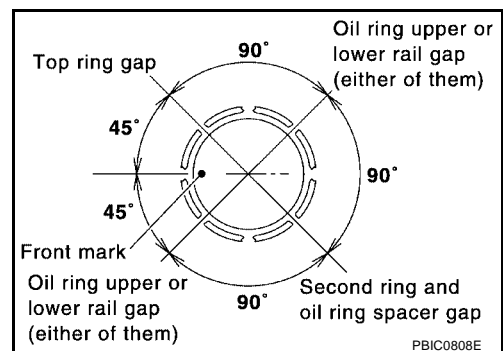


A
EM
C
D
E
F
G
H
I
J
K
L
M

CYLINDER BLOCK


12. Install the connecting rod bearings to the connecting rod and the connecting rod cap.

- When installing the connecting rod bearings, apply engine oil to the bearing surface (crankshaft side). Do not apply oil to the back surface (connecting rod and cap side), but thoroughly clean it.
- When installing, align the connecting rod bearing protrusion with the notch of the connecting rod to install.
- Check that the oil holes on the connecting rod and on the corresponding bearing are aligned.

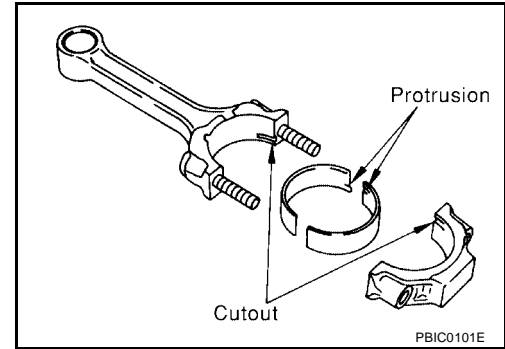

13. Install the piston and connecting rod assembly into the corresponding cylinder.

- Position the crankshaft pin corresponding to the connecting rod to be installed onto the bottom dead center.
- Apply engine oil sufficiently to the cylinder bore, piston, and crankshaft pin.
- Match the cylinder position with the cylinder No. on the connecting rod to install.
- Install the piston using Tool with the front mark on the piston crown facing the front of the engine.

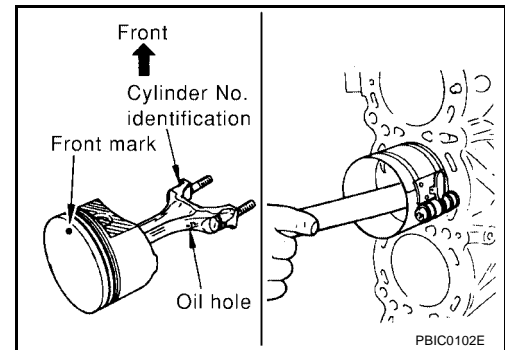


Tool number : EM03470000 (J8037)

CAUTION:

Be careful not to damage the crankshaft pin and cylinder wall, resulting from an interference of the connecting rod big end.

14. Install the connecting rod cap.

- Match the stamped cylinder number marks on the connecting rod with those on the cylinder cap for installation.
- Install the piston connecting rod assembly and cap so that the front mark on the cap and piston are facing the front of the engine.
- Lubricate the threads and seat surfaces with new engine oil.

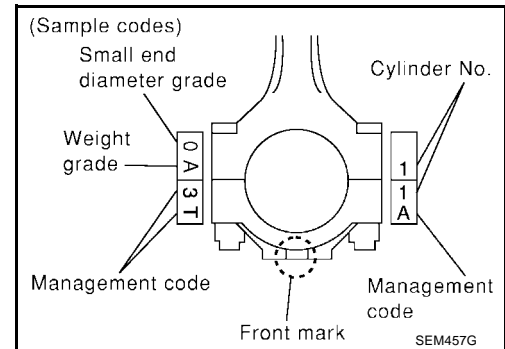


15. Check the connecting rod cap bolts before reusing, then install in their original position in the connecting rod. The bolts should screw in smoothly by hand.

- Measure the outer diameter of the connecting rod cap bolt as shown.

Outer diameter "d" of the connecting rod bolt

Standard : 7.90 - 8.00 mm (0.3110 - 0.3150 in)

Limit : 7.75 mm (0.3051 in)

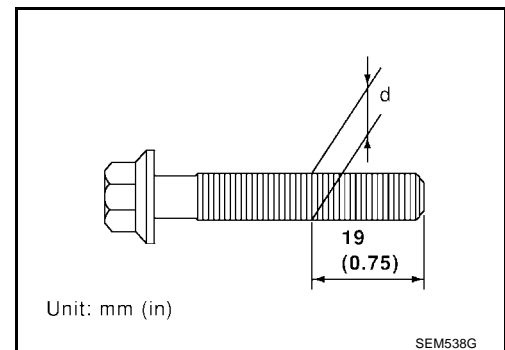

Unit: mm (in)

CYLINDER BLOCK

16. Tighten the connecting rod nuts in two steps:

Step 1 : 19 - 21 N·m (1.9 - 2.1 kg·m, 14 - 15 ft·lb)

Step 2 : 90° - 95° degrees clockwise

CAUTION:

Always use either an angle wrench or protractor. Avoid tightening based on visual check alone.

- Apply engine oil to the threads and seats of the connecting rod bolts and nuts.
- After tightening the nuts, make sure that the crankshaft rotates smoothly.
- Check the connecting rod side clearance. If beyond the limit, replace the connecting rod and/or crankshaft.

Connecting rod side clearance:

Standard : 0.20 - 0.35 mm (0.0079 - 0.0138 in)

Limit : 0.40 mm (0.0157 in)

17. Install the baffle plate.

Baffle plate bolts : 8.14 - 9.51 N·m (0.83 - 0.97 kg·m, 72 - 84 in·lb)

18. Install the knock sensor.

Knock sensor bolt : 16 - 26 N·m (1.6 - 2.7 kg·m, 12 - 20 in·lb)

- Make sure that there is no foreign material on the cylinder block mating surface and the back surface of the knock sensor.
- Install the knock sensor with the connector facing the rear of the engine.
- Do not tighten the knock sensor bolt while holding the connector.
- Make sure that the knock sensor does not interfere with other parts.

CAUTION:




If any impact by dropping occurs to the knock sensor, replace it with new one.

19. Install the pilot bushing (M/T) or pilot converter (A/T) using suitable tool.

Outer diameter of drift


Pilot bushing : Approx. 17 mm (0.67 in)

Pilot converter : Approx. 33 mm (1.30 in)

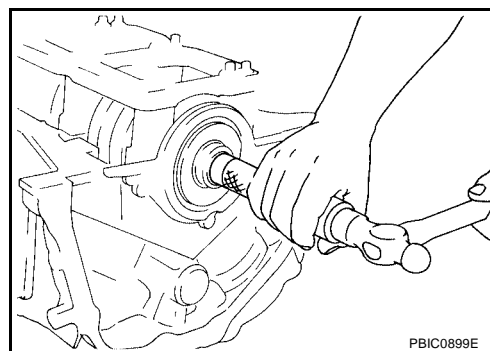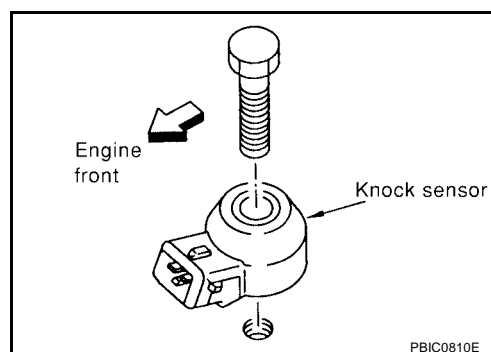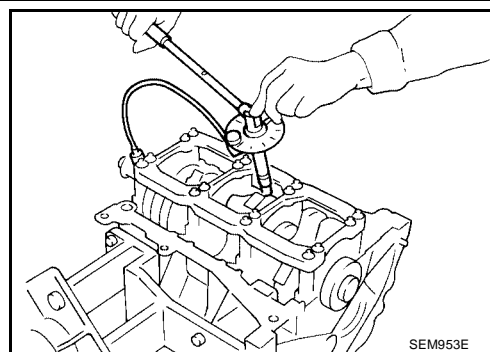

CYLINDER BLOCK


- Install pilot bushing or pilot converter as shown.

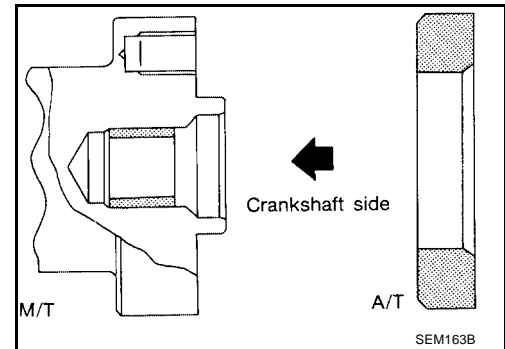

20. Install the flywheel (M/T), if equipped.

- When installing flywheel to crankshaft, be sure to correctly align crankshaft side dowel pin and flywheel side dowel pin hole.

Flywheel bolts : 83 - 93 N·m (8.5 - 95 kg·m, 61 - 69 ft·lb)

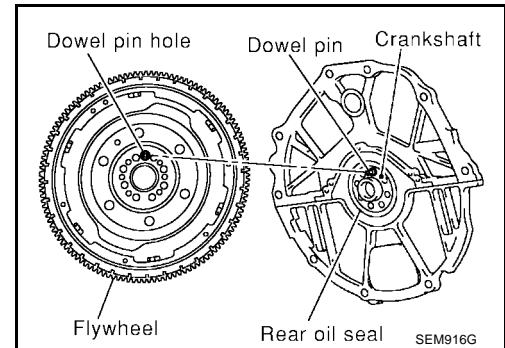


21. Install the drive plate (A/T), if equipped.

- Install the drive plate and reinforce plate in the direction shown.
- Align dowel pins of crankshaft rear and drive plate with pin holes of each part.
- Secure the crankshaft using Tool.

Tool number : KV10117700 (J44716)

- Tighten the drive plate bolts in one or two steps.

Drive plate bolts : 83 - 93 N·m (8.5 - 95 kg·m, 61 - 69 ft·lb)

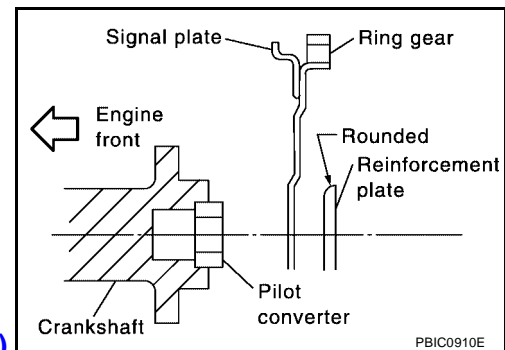

22. Install the cylinder head. Refer to [EM-100, "Removal and Installation"](#) .
23. Install the oil pump. Refer to [LU-9, "INSTALLATION"](#) .
24. Install the timing chain. Refer to [EM-67, "INSTALLATION"](#) .
25. Install the upper and lower oil pans. Refer to [EM-33, "INSTALLATION"](#) .
26. Remove the engine from the stand and install the engine assembly into the vehicle. Refer to [EM-116, "Removal and Installation"](#) .
27. Assembly of the remaining parts is in the reverse order of disassembly.
28. Fill the engine with the specified oil and coolant. Refer to [MA-10, "Fluids and Lubricants"](#) .

CAUTION:

Wait at least 30 minutes for the sealant to set-up before filling the engine with fluids and running it.

CYLINDER BLOCK

How to Select Piston and Bearing DESCRIPTION

EBS00G40

Selection points	Selection parts	Selection items	Selection methods
Between cylinder block and crankshaft	Main bearing	Main bearing grade (bearing thickness)	Determined by matching of cylinder block bearing housing grade (inner diameter of housing) and crankshaft journal grade (outer diameter of journal)
Between crankshaft and connecting rod	Connecting rod bearing	Connecting rod bearing grade (bearing thickness)	Combining service grades for connecting rod big end inner diameter and crankshaft pin outer diameter determine connecting rod bearing selection.
Between cylinder block and piston	Piston and piston pin assembly (The piston is available together with piston pin as an assembly.)	Piston grade (piston outer diameter)	Piston grade = cylinder bore grade (inner diameter of bore)
*Between piston and connecting rod	-	-	-


* For the service parts, the grade for fitting cannot be selected between a piston pin and a connecting rod. (Only 0 grade is available.) The information at the shipment from the plant is described as a reference.

- The identification grade stamped on each part is the grade for the dimension measured in new condition. This grade cannot apply to reused parts.
- For reused or repair parts, measure the dimension accurately. Determine the grade by comparing the measurement with the values or each selection table.
- For details of the measurement method of each part, the reuse standards and the selection method of the selective fitting parts, refer to the text.

HOW TO SELECT A PISTON


When New Cylinder Block is Used

- Check the cylinder bore grade (1, 2 or 3) on rear side of cylinder block, and select a piston of the same grade.
- The piston is available with piston pin as a set for the service part. (Only 0 grade piston pin is available.)

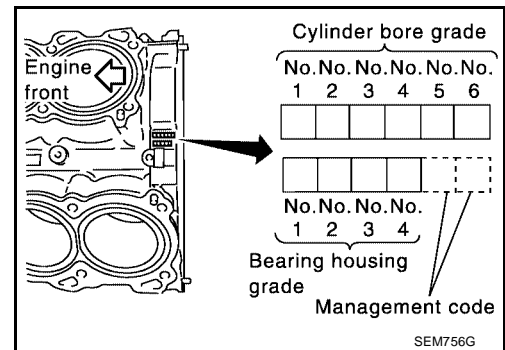

When Cylinder Block is Reused

1. Measure the cylinder block bore inner diameter.
2. Determine the bore grade by comparing the measurement with the values under the cylinder bore inner diameter of the [EM-134, "Piston Selection Table"](#).
3. Select the piston of the same grade.

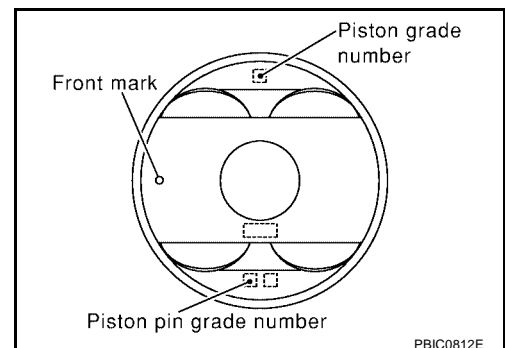

CYLINDER BLOCK

Piston Selection Table

Unit: mm (in)

Grade	1	2 (or no mark)	3
Inner diameter of cylinder bore	95.500 - 95.510 (3.7598 - 3.7602)	95.510 - 95.520 (3.7602 - 3.7606)	95.520 - 95.530 (3.7606 - 3.7610)
Outer diameter of piston	95.480 - 95.490 (3.7590 - 3.7594)	95.490 - 95.500 (3.7594 - 3.7598)	95.500 - 95.510 (3.7598 - 3.7602)

NOTE:

- The piston is available together with piston pin as an assembly.
- The piston pin (piston pin bore) grade is provided only for the parts installed at the plant. For service parts, no piston pin grades can be selected. (Only 0 grade is available.)
- No grade mark is indicated on 2 grade piston.


HOW TO SELECT CONNECTING ROD BEARINGS

When New Connecting Rod and Crankshaft are Used

Check pin diameter grade number (0, 1 or 2) stamped in front of crankshaft and select connecting rod bearing of same grade number.

NOTE:

There is no grading for connecting rod big end inner diameter.

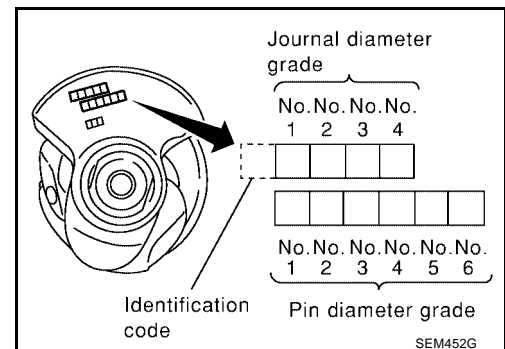

When Crankshaft and Connecting Rod are Reused

1. Measure dimensions of the big end inner diameter of connecting rod and outer diameter of crankshaft pin individually.
2. Confirm the big end inner diameter of connecting rod is within the standard value.
3. Apply the measured dimension to the [EM-134, "Connecting Rod Bearing Selection Table"](#).
4. Determine the grade of crankshaft pin diameter grade by comparing the measurement with the values under the crankshaft pin outer diameter of the [EM-134, "Connecting Rod Bearing Selection Table"](#).

Connecting Rod Bearing Selection Table

Unit: mm (in)

Connecting rod big end inner diameter		55.000 - 55.013 (2.1654 - 2.1659)
Crankshaft pin outer diameter	Grade (Mark)	– (No grade)
51.968 - 51.974 (2.0460 - 2.0462)	0	Bearing grade No. STD 0 Bearing thickness range: 1.500 - 1.503 (0.00591 - 0.0592) Color: Black
51.962 - 51.968 (2.0457 - 2.0460)	1	Bearing grade No. STD 1 Bearing thickness range: 1.503 - 1.506 (0.00592 - 0.0593) Color: Brown
51.956 - 51.962 (2.0455 - 2.0457)	2	Bearing grade No. STD 2 Bearing thickness range: 1.506 - 1.509 (0.00593 - 0.0594) Color: Green

Undersize Bearings Usage Guide

- When the specified oil clearance is not obtained with standard size connecting rod bearings use undersize bearings.
- When using undersize bearings measure the bearing inner diameter with bearing installed and grind the crankshaft pin so that the oil clearance satisfies the standard.

CYLINDER BLOCK


Bearing Undersize Table

Unit: mm (in)

Size	Thickness
0.25 (0.0098)	1.626 - 1.634 (0.0640 - 0.0643)

CAUTION:


In grinding the crankshaft pin to use undersize bearings, keep the fillet R (all crankshaft pins).

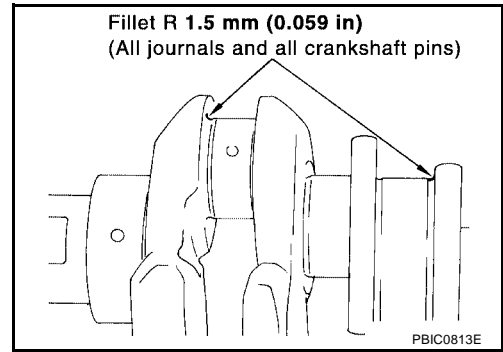


HOW TO SELECT MAIN BEARINGS

When New Cylinder Block and Crankshaft are Used

1. [EM-136, "Main Bearing Selection Table"](#) rows correspond to bearing housing grade on rear left side of cylinder block.

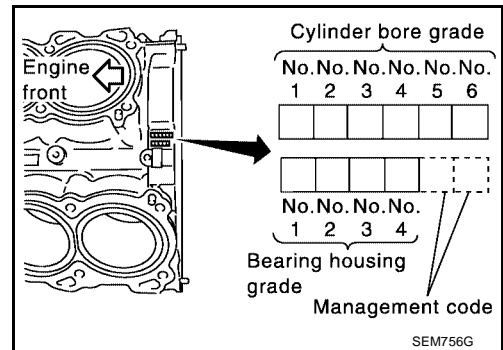

2. Apply journal diameter grade stamped on crankshaft front side to column in [EM-136, "Main Bearing Selection Table"](#).
3. Find sign (main bearing grade) at crossing of row and column in [EM-136, "Main Bearing Selection Table"](#).

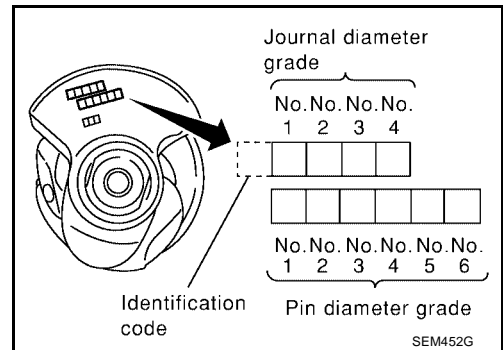

When Cylinder Block and Crankshaft are Reused

1. Measure inner diameter of cylinder block main bearing housing and outer diameter of crankshaft journal.
2. Find measured dimension in "Cylinder block bearing housing inner diameter" row of [EM-136, "Main Bearing Selection Table"](#).
3. Find the measured dimension in "Crankshaft main journal diameter" column in [EM-136, "Main Bearing Selection Table"](#).
4. Select main bearing grade at the point where selected row and column intersect.

CYLINDER BLOCK

Main Bearing Selection Table

Cylinder block bearing housing inner diameter Unit: mm (in) Crankshaft main journal diameter Unit: mm (in)		Mark																								
		Hole diameter	A	B	C	D	E	F	G	H	J	K	L	M	N	P	R	S	T	U	V	W	X	Y	4	7
Mark	Axle diameter																									
A	59.975 - 59.974 (2.3612 - 2.3612)	0	0	0	0	0	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
B	59.974 - 59.973 (2.3612 - 2.3611)	0	0	0	0	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
C	59.973 - 59.972 (2.3611 - 2.3611)	0	0	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
D	59.972 - 59.971 (2.3611 - 2.3611)	0	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
E	59.971 - 59.970 (2.3611 - 2.3610)	0	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
F	59.970 - 59.969 (2.3610 - 2.3610)	0	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
G	59.969 - 59.968 (2.3610 - 2.3609)	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
H	59.968 - 59.967 (2.3609 - 2.3609)	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
J	59.967 - 59.966 (2.3609 - 2.3609)	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
K	59.966 - 59.965 (2.3909 - 2.3608)	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
L	59.965 - 59.964 (2.3608 - 2.3608)	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
M	59.964 - 59.963 (2.3608 - 2.3607)	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
N	59.963 - 59.962 (2.3607 - 2.3607)	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
P	59.962 - 59.961 (2.3607 - 2.3607)	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
R	59.961 - 59.960 (2.3607 - 2.3606)	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
S	59.960 - 59.959 (2.3606 - 2.3606)	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
T	59.959 - 59.958 (2.3606 - 2.3605)	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
U	59.958 - 59.957 (2.3605 - 2.3605)	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
V	59.957 - 59.956 (2.3605 - 2.3605)	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
W	59.956 - 59.955 (2.3605 - 2.3604)	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
X	59.955 - 59.954 (2.3604 - 2.3604)	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
Y	59.954 - 59.953 (2.3604 - 2.3603)	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
4	59.953 - 59.952 (2.3603 - 2.3603)	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
7	59.952 - 59.951 (2.3603 - 2.3603)	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1

PBIC0814E

CYLINDER BLOCK

Main Bearing Grade Table (All Journals)

Grade number	Thickness "T" mm (in)	Width "W" mm (in)	Identification color (UPR/LWR)	Remarks	
0	2.000 - 2.003 (0.0787 - 0.0789)	19.9 - 20.1 (0.783 - 0.791)	Black	Grade is the same for upper and lower bearings.	
1	2.003 - 2.006 (0.0789 - 0.0790)		Brown		
2	2.006 - 2.009 (0.0790 - 0.0791)		Green		
3	2.009 - 2.012 (0.0791 - 0.0792)		Yellow		
4	2.012 - 2.015 (0.0792 - 0.0793)		Blue		
5	2.015 - 2.018 (0.0793 - 0.0794)		Pink		
6	2.018 - 2.021 (0.0794 - 0.0796)		Purple		
7	2.021 - 2.024 (0.0796 - 0.0797)		White	Grade is different for upper and lower bearings.	
01	UPR		2.003 - 2.006 (0.0789 - 0.0790)		Brown/Black
	LWR		2.000 - 2.003 (0.0787 - 0.0789)		
12	UPR		2.006 - 2.009 (0.0790 - 0.0791)		Green/Brown
	LWR		2.003 - 2.006 (0.0789 - 0.0790)		
23	UPR		2.009 - 2.012 (0.0791 - 0.0792)		Yellow/Green
	LWR		2.006 - 2.009 (0.0790 - 0.0791)		
34	UPR	2.012 - 2.015 (0.0792 - 0.0793)	Blue/Yellow		
	LWR	2.009 - 2.012 (0.0791 - 0.0792)			
45	UPR	2.015 - 2.018 (0.0793 - 0.0794)	Pink/Blue		
	LWR	2.012 - 2.015 (0.0792 - 0.0793)			
56	UPR	2.018 - 2.021 (0.0794 - 0.0796)	Purple/Pink		
	LWR	2.015 - 2.018 (0.0793 - 0.0794)			
67	UPR	2.021 - 2.024 (0.0796 - 0.0797)	White/Purple		
	LWR	2.018 - 2.021 (0.0794 - 0.0796)			


Undersize Bearing Usage Guide

- Use undersize bearing when oil clearance with standard size main bearing is not within specification.

CAUTION:

Keep fillet R when grinding crankshaft journal in order to use undersize bearing (all journals).

- When using undersize bearing, measure the bearing inner diameter with bearing installed, and grind journal until oil clearance falls within specification.

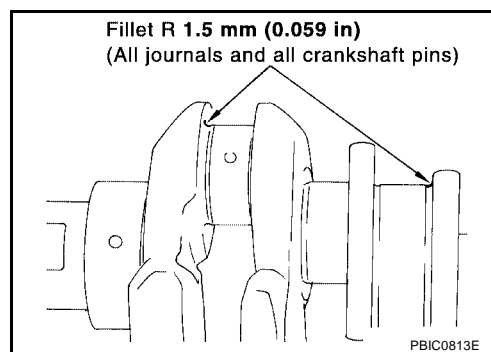

Bearing Undersize Table

Unit: mm (in)

Size	Thickness
0.25 (0.0098)	2.132 - 2.140 (0.0839 - 0.0843)

CYLINDER BLOCK

EBS00F3H


Inspection After Disassembly CRANKSHAFT END PLAY

- Using a dial indicator, measure the clearance between the thrust bearings and the connecting rods when the crankshaft is moved from front to rear.

Standard : 0.10 - 0.25 mm (0.0039 - 0.0098 in)

Limit : 0.30 mm (0.0118 in)

- If beyond the limit, replace the thrust bearings and measure again. If still beyond the limit, replace the crankshaft.

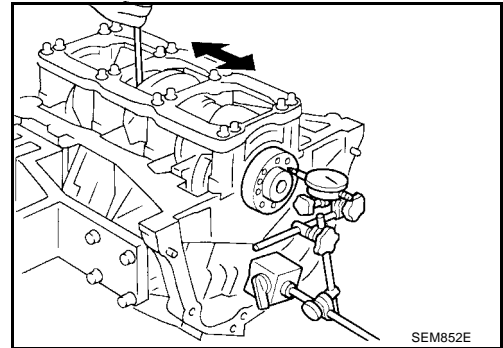


CONNECTING ROD SIDE CLEARANCE

- Measure the side clearance between the connecting rod and crankshaft with a feeler gauge.

Standard : 0.20 - 0.35 mm (0.0079 - 0.0138 in)

Limit : 0.40 mm (0.016 in)

- If beyond the limit, replace the connecting rod and measure again. If still beyond the limit, replace the crankshaft.

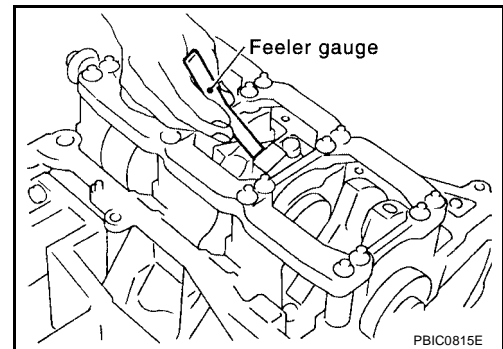

PISTON AND PISTON PIN CLEARANCE


Inner Diameter of Piston Pin Hole

- Measure the inner diameter of piston pin hole "dp".

Standard diameter "dp"

Grade No. 0 : 21.993 - 21.999 mm (0.8659 - 0.8661 in)

Grade No. 1 : 21.999 - 22.005 mm (0.8661 - 0.8663 in)

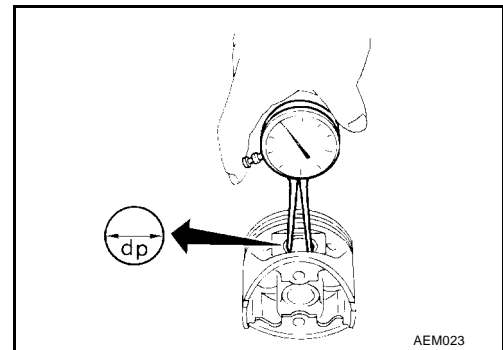


Outer Diameter of Piston Pin

- Measure outer diameter of piston pin "Dp".

Standard diameter "Dp"

Grade No. 0 : 21.989 - 21.995 mm (0.8657 - 0.8659 in)

Grade No. 1 : 21.995 - 22.001 mm (0.8659 - 0.8662 in)

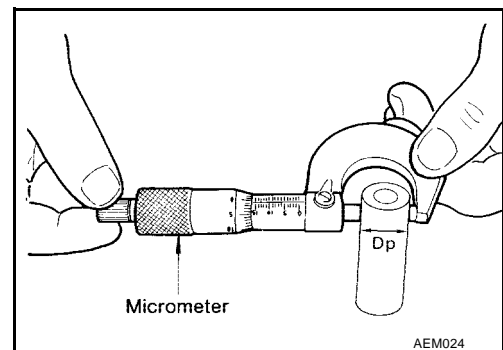


CYLINDER BLOCK

Piston and Piston Pin Interference Fit

Standard Interference Fit = "Dp" – "dp"

Standard : 0.002 mm - 0.006 mm (0.0001 - 0.0002 in)

- If clearance exceeds specification, replace either or both of piston/piston pin assembly and connecting rod assembly with reference to specification of each part.
- When replacing piston/piston pin assembly, refer to [EM-142](#), "[PISTON-TO-CYLINDER BORE CLEARANCE](#)".

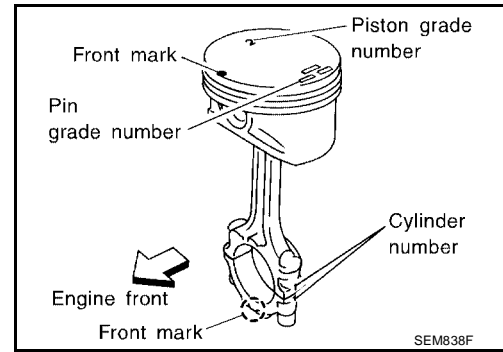

PISTON RING SIDE CLEARANCE

- Measure side clearance of piston ring and piston ring groove with feeler gauge.

Standard Side Clearance

Top ring : 0.045 - 0.080 mm (0.0018 - 0.0031 in)

2nd ring : 0.030 - 0.070 mm (0.0012 - 0.0028 in)


Oil ring : 0.065 - 0.135 mm (0.0026 - 0.0053 in)

Maximum Limit

Top ring : 0.11 mm (0.0043 in)

2nd ring : 0.1 mm (0.004 in)

Oil ring : —

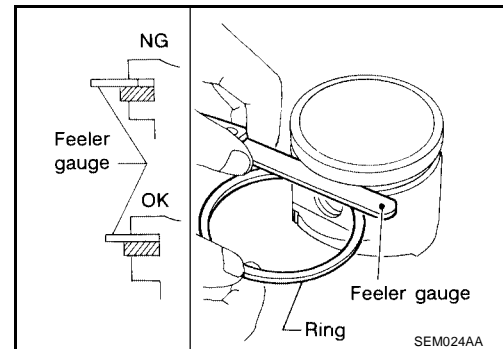

- If out of specification, replace piston ring assembly. If clearance exceeds maximum limit with new rings, replace piston

PISTON RING END GAP

- Check if inner diameter of cylinder bore is within specification. Refer to [EM-142](#), "[PISTON-TO-CYLINDER BORE CLEARANCE](#)".
- Insert piston ring until it is in the middle of the cylinder bore and measure the end gap.

Standard

Top ring : 0.23 - 0.33 mm (0.0091 - 0.0130 in)

2nd ring : 0.33 - 0.48 mm (0.0130 - 0.0189 in)


Oil ring : 0.20 - 0.50 mm (0.0079 - 0.0197 in)

Limit:

Top ring : 0.54 mm (0.0213 in)

2nd ring : 0.80 mm (0.0315 in)

Oil ring : 0.95 mm (0.0374 in)

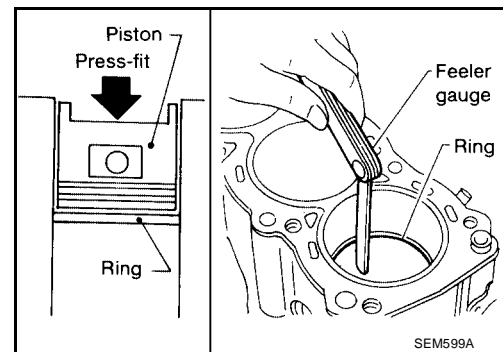


- If out of specification, replace piston ring. If gap still exceeds the limit even with a new ring, re-bore cylinder and use oversized piston and piston ring.

CYLINDER BLOCK


CONNECTING ROD BEND AND TORSION

Bend : Limit 0.15 mm (0.0059 in) per 100 mm (3.94 in) length

Torsion : Limit 0.30 mm (0.0118 in) per 100 mm (3.94 in) length

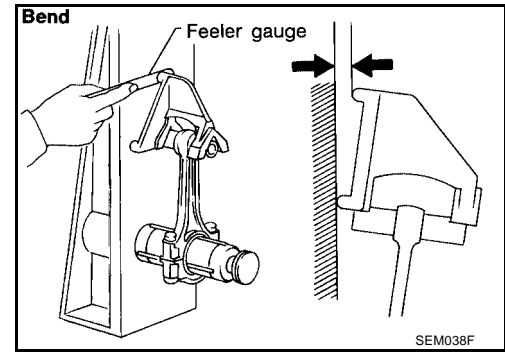


- If it exceeds the limit, replace connecting rod assembly.

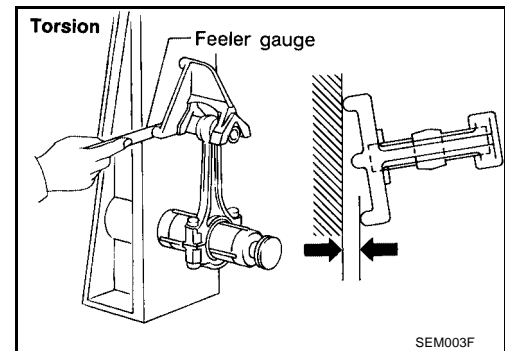

CONNECTING ROD BEARING HOUSING DIAMETER (BIG END)

- Install the connecting rod cap without the connecting rod bearing installed. After tightening the connecting rod nut to the specified torque, measure the connecting rod bearing housing big end inner diameter using an inside micrometer.

Standard : 55.000 - 55.013 mm (2.1654 - 2.1659 in)

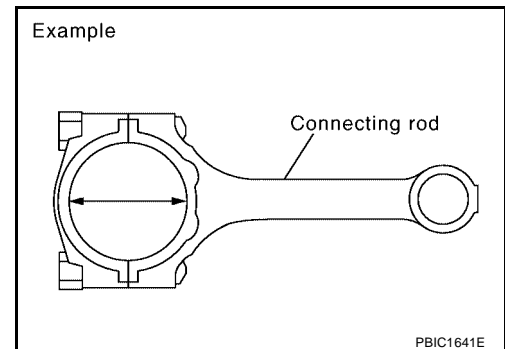

CONNECTING ROD BUSHING OIL CLEARANCE (SMALL END)


Inner Diameter of Connecting Rod (Small End)

- Measure inner diameter of piston pin bushing.

Standard

Grade No. 0 : 22.000 - 22.006 mm (0.8661 - 0.8664 in)

Grade No. 1 : 22.006 - 22.012 mm (0.8664 - 0.8666 in)

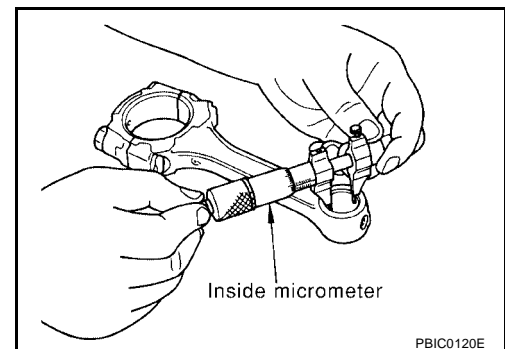

CYLINDER BLOCK


Outer Diameter of Piston Pin

- Measure outer diameter of piston pin.

Standard

Grade No. 0 : 21.989 - 21.995 mm (0.8657 - 0.8659 in)

Grade No. 1 : 21.995 - 22.001 mm (0.8659 - 0.8662 in)

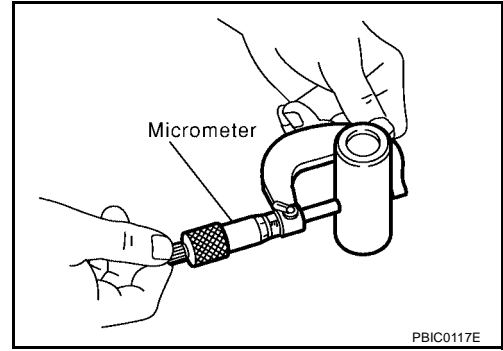


Connecting Rod Bushing Oil Clearance (Small End)

(Connecting rod small end oil clearance) = (Inner diameter of connecting rod small end) – (Outer diameter of piston pin)

Standard : 0.005 - 0.017 mm (0.0002 - 0.0007 in)

Limit : 0.030 mm (0.0012 in)


- If the measured value exceeds the standard, replace the connecting rod assembly and/or piston and piston pin assembly.
- If replacing the piston and piston pin assembly, refer to the Table for Selective Fitting for Piston to select the piston corresponding to the applicable bore grade of the cylinder block to be used. Refer to [EM-142, "PISTON-TO-CYLINDER BORE CLEARANCE"](#).
- If replacing the connecting rod assembly, refer to [EM-140, "CONNECTING ROD BUSHING OIL CLEARANCE \(SMALL END\)"](#).

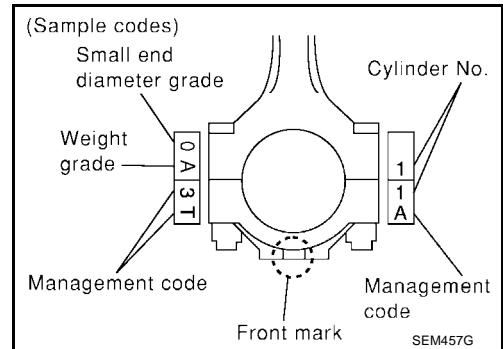

Factory installed parts grading:

- Service parts apply only to grade 0.

Grade	Unit: mm (in)	
	0	1
Piston pin bushing inner diameter*	22.000 - 22.006 (0.8661 - 0.8664)	22.006 - 22.012 (0.8664 - 0.8666)
Piston pin outer diameter	21.989 - 21.995 (0.8657 - 0.8659)	21.995 - 22.001 (0.8659 - 0.8662)
Piston pin hole diameter	21.993 - 21.999 (0.8659 - 0.8661)	21.999 - 22.005 (0.8661 - 0.8663)

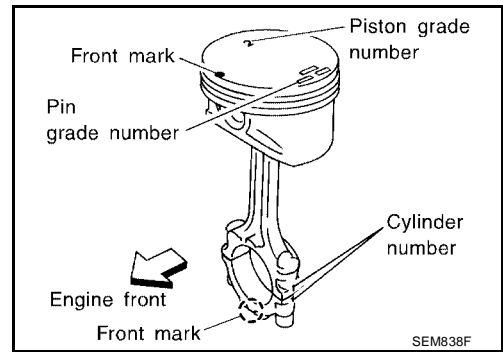

*: After installing in connecting rod

CYLINDER BLOCK DISTORTION

- Using a scraper, remove any old gasket material on the cylinder block surface, and remove any oil, scale, carbon, or other contamination.


CAUTION:

Be careful not to allow gasket flakes to enter the oil or coolant passages.

- Measure the distortion on the block upper face at different points in six directions.

Distortion limit : 0.10 mm (0.0039 in)

- If out of specification, resurface the cylinder block. The allowable amount of resurfacing is dependent on the amount of any cylinder head resurfacing. The resurfacing limit is [amount of cylinder head resurfacing] + [amount of cylinder head resurfacing] = 0.2 mm (0.008 in).

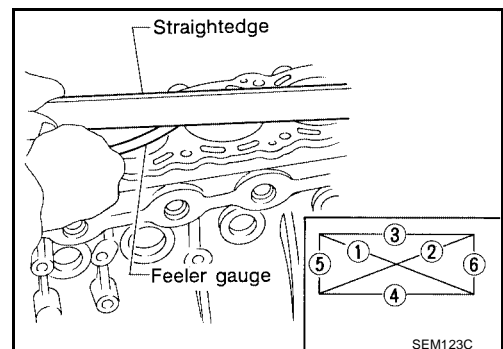

CYLINDER BLOCK

Cylinder block height : 214.95 - 215.05 mm (8.4626 - 8.4665 in)

INNER DIAMETER OF MAIN BEARING HOUSING


- Install the main bearing caps with the main bearings removed, and tighten the mounting bolts to the specified torque.
- Using a bore gauge, measure the inner diameter of the main bearing housing.

Standard : 63.993 - 64.017 mm (2.5194 - 2.5203 in)

- If out of the standard, replace the cylinder block and main bearing caps as an assembly.

NOTE:

These components cannot be replaced individually, since they were processed together.

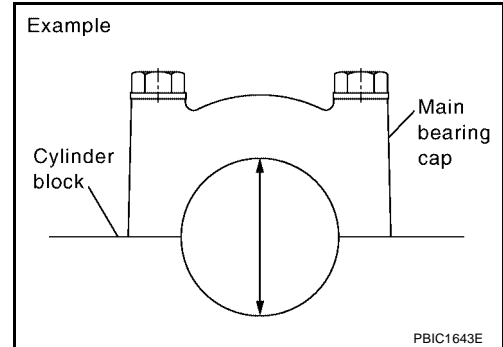


PISTON-TO-CYLINDER BORE CLEARANCE

1. Using a bore gauge, measure cylinder bore for wear, out-of-round and taper. The X axis is in the longitudinal direction of the engine.

Cylinder bore inner diameter


Grade No.	Standard inner diameter	Wear limit
No. 1	95.500 - 95.510 mm (3.7598 - 3.7602 in)	0.20 mm (0.0079 in)
No. 2	95.510 - 95.520 mm (3.7602 - 3.7606 in)	
No. 3	95.520 - 95.530 mm (3.7606 - 3.7610 in)	

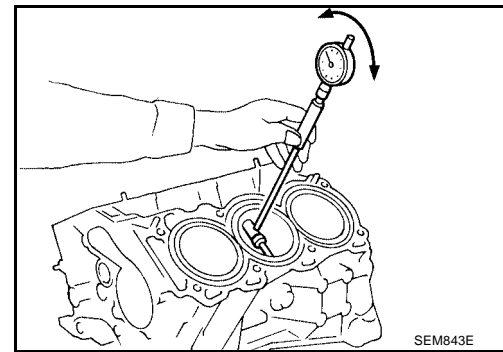

If it exceeds the limit, rebore all cylinders. Replace cylinder block if necessary.


Out-of-round (Difference between, X - Y) : less than 0.015 mm (0.0006 in)

Taper (Difference between, C - A) : less than 0.015 mm (0.0006 in)

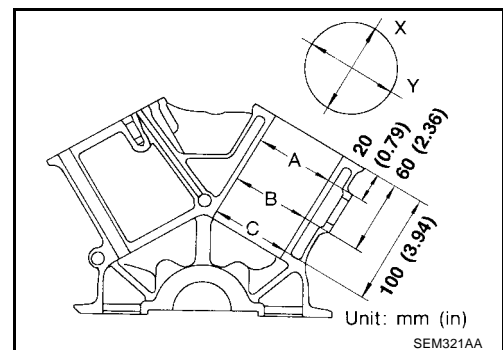

2. Check for scratches and seizure. If seizure is found, hone it.

- If both cylinder block and piston are replaced with new ones, select piston of the same grade number punched on cylinder block rear position. These numbers are punched in either Arabic or Roman numerals.

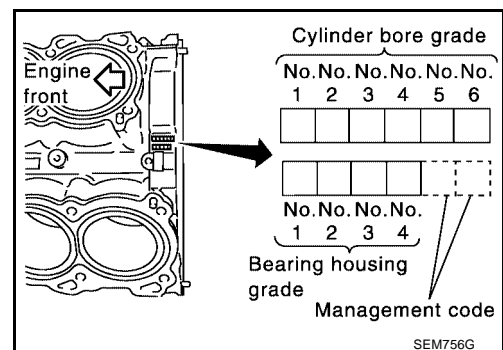


CYLINDER BLOCK

3. Measure piston skirt diameter.

Piston diameter "A" : Refer to [EM-156. "PISTON, PISTON RING AND PISTON PIN"](#) .


Measuring point "a"
(distance from the top) : 41.0 mm (1.614 in)

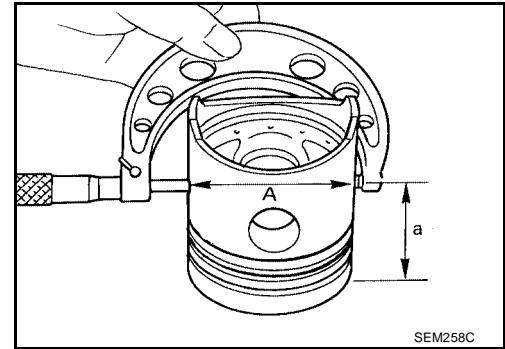

4. Check that piston-to-bore clearance is within specification.

Piston-to-bore clearance at "B" : 0.010 - 0.030 mm (0.0004 - 0.0012 in)

- The piston-to-bore clearance is measured at the "B" level in the cylinder as shown.

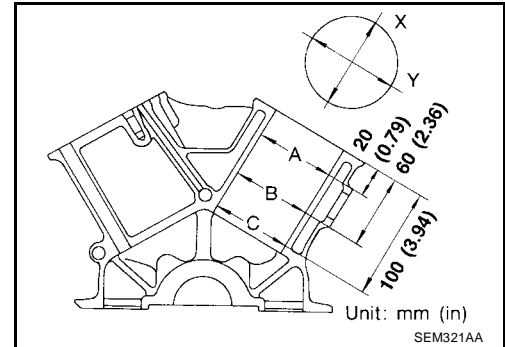

5. Determine piston oversize according to amount of cylinder wear.

- Oversize pistons are available for service.
- If oversize piston is used, use it for all cylinders with oversize piston ring. Refer to [EM-156. "PISTON, PISTON RING AND PISTON PIN"](#) .

6. Cylinder bore size is determined by adding piston-to-bore clearance to piston diameter "A".

Rebored size calculation : $D = A + B - C$

where,

D : Bored diameter
A : Piston diameter as measured
B : Piston-to-bore clearance
C : Honing allowance 0.02 mm (0.0008 in)

7. Install main bearing caps, and tighten to the specified torque. Otherwise, cylinder bores may be distorted after boring.

8. Cut cylinder bores.

- When any cylinder needs boring, all other cylinders must also be bored.
- Do not cut too much out of cylinder bore at a time. Cut only 0.05 mm (0.0020 in) or so in diameter at a time.

- 9.hone cylinders to obtain specified piston-to-bore clearance.


10. Measure finished cylinder bore for out-of-round and taper.

- Measurement should be done after cylinder bore cools down.

CYLINDER BLOCK

OUTER DIAMETER OF CRANKSHAFT JOURNAL

Measure outer diameter of crankshaft journals. Refer to [EM-144, "OUT-OF-ROUND AND TAPER OF CRANKSHAFT"](#).

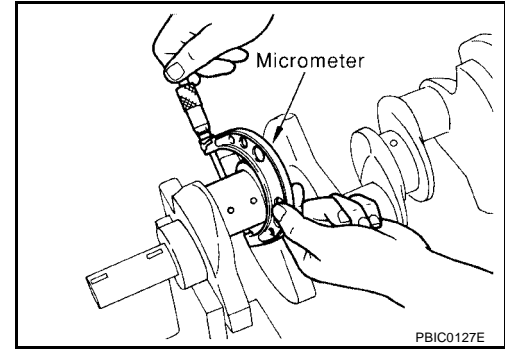

OUTER DIAMETER OF CRANKSHAFT PIN

Measure outer diameter of crankshaft pin. Refer to [EM-144, "OUT-OF-ROUND AND TAPER OF CRANKSHAFT"](#).


OUT-OF-ROUND AND TAPER OF CRANKSHAFT

- Check the crankshaft main and pin journals for scoring, wear, or cracks.
- Measure the journals for taper and out-of-round.

Standard

Out-of-round (difference between, X - Y) : 0.002 mm (0.0001 in)


Taper (difference between, A - B) : 0.002 mm (0.0001 in)

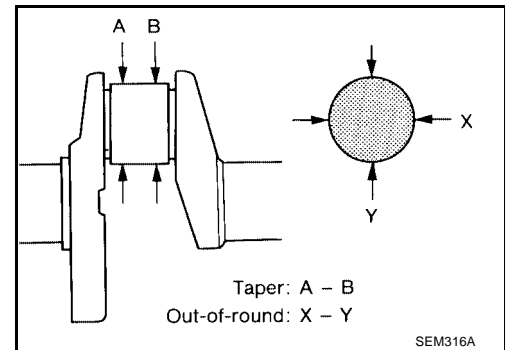

CRANKSHAFT RUNOUT

- Place a V-block on a precise flat table to support the journals on the both ends of the crankshaft.
- Place a dial gauge straight up on the No. 3 journal.
- While rotating the crankshaft, read the movement of the pointer on the dial gauge.

Runout limit (total indicator reading) : less than 0.10 mm (0.0039 in)

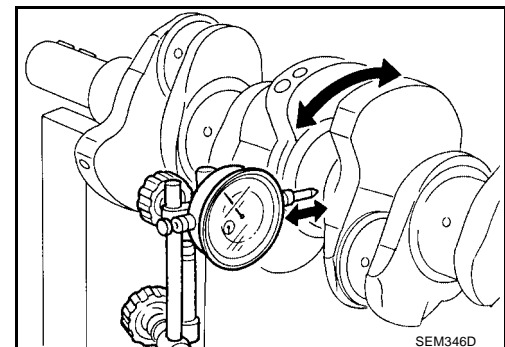


OIL CLEARANCE OF CONNECTING ROD BEARING

Method by Calculation

1. Install the connecting rod bearing to the connecting rod and cap.
2. Install the connecting rod cap to the connecting rod. Tighten to specification. Refer to [EM-126, "ASSEMBLY"](#).

CYLINDER BLOCK

3. Measure the inner diameter "C" of each connecting rod (big end) as shown.

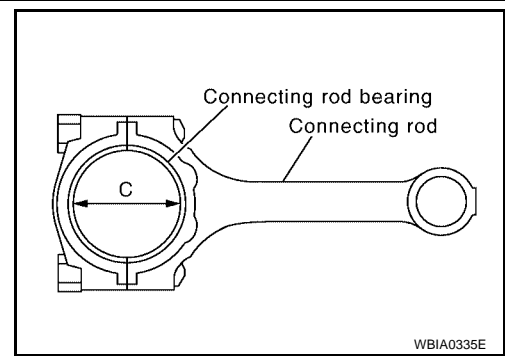


4. Measure the outer diameter "Dp" of each crankshaft pin journal.
5. Calculate the connecting rod bearing clearance.
Connecting rod bearing clearance = C - Dp

Standard : 0.034 - 0.059 mm (0.0013 - 0.0023 in)

Limit : 0.070 mm (0.0028 in)

6. If the clearance cannot be adjusted within the standard of any bearing, grind the crankshaft journal and use undersized bearings. Refer to [EM-134, "HOW TO SELECT CONNECTING ROD BEARINGS"](#).

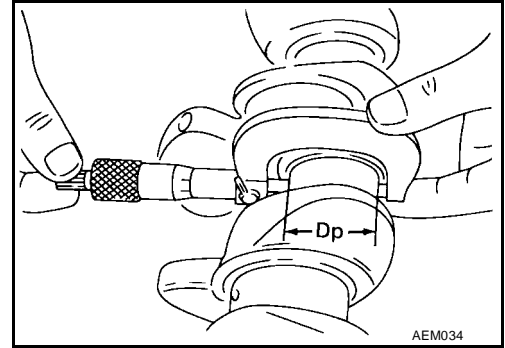

Method of Using Plastigage

- Remove oil and dust on the crankshaft pin and the surfaces of each bearing completely.
- Cut a Plastigage slightly shorter than the bearing width, and place it in crankshaft axial direction, avoiding oil holes.
- Install the connecting rod bearings to the connecting rod cap, and tighten the connecting rod nuts to the specified torque.


CAUTION:

Never rotate the crankshaft.

- Remove the connecting rod cap and bearings, and using the scale on the Plastigage bag, measure the Plastigage width.

NOTE:

The procedure when the measured value exceeds the repair limit is same as that described in [EM-144, "Method by Calculation"](#).

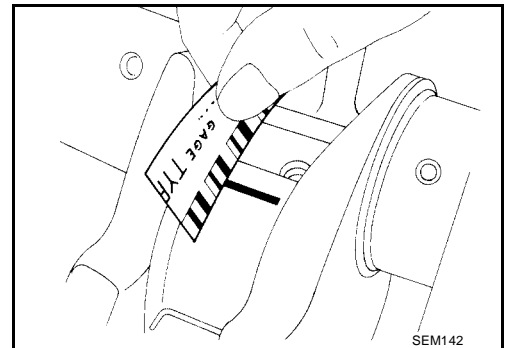

OIL CLEARANCE OF MAIN BEARING


Method by Calculation

1. Install the main bearings to the cylinder block and bearing cap. Refer to [EM-126, "ASSEMBLY"](#).
2. Calculate the main bearing clearance. (Oil clearance) = (Inner diameter of main bearing) - (Outer diameter of crankshaft journal)

Standard : 0.035 - 0.045 mm (0.0014 - 0.0018 in)

Limit : 0.065 mm (0.0026 in)

3. If the calculated clearance exceeds the specified limit, replace the bearings. Refer to [EM-135, "HOW TO SELECT MAIN BEARINGS"](#).

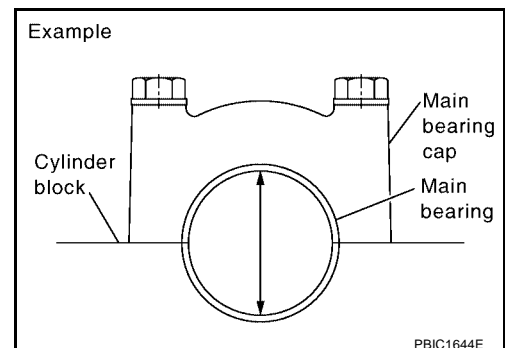

CYLINDER BLOCK

Method of Using Plastigage

- Remove oil and dust on the crankshaft pin and the surfaces of each bearing completely.
- Cut a Plastigage slightly shorter than the bearing width, and place it in crankshaft axial direction, avoiding oil holes.
- Install the main bearings and main bearing caps. Refer to [EM-126. "ASSEMBLY"](#).


CAUTION:

Never rotate the crankshaft.

- Remove the main bearing caps and bearings, and using the scale on the Plastigage bag, measure the Plastigage width.

NOTE:

The procedure when the measured value exceeds the repair limit is same as that described in [EM-145. "Method by Calculation"](#).

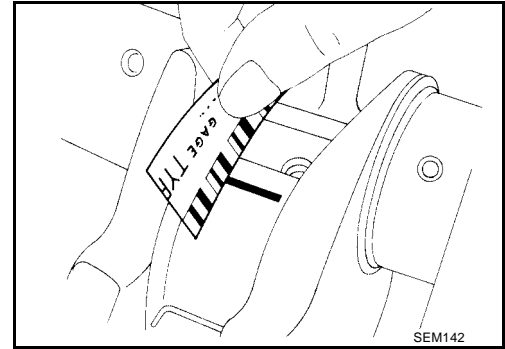


CRUSH HEIGHT OF MAIN BEARING

- When the bearing cap is removed after being tightened to the specified torque with main bearings installed, the tip end of the bearing must protrude. Refer to [EM-126. "ASSEMBLY"](#) for tightening procedure.

Standard : There must be a crush height.

- If the standard is not met, replace main bearings.

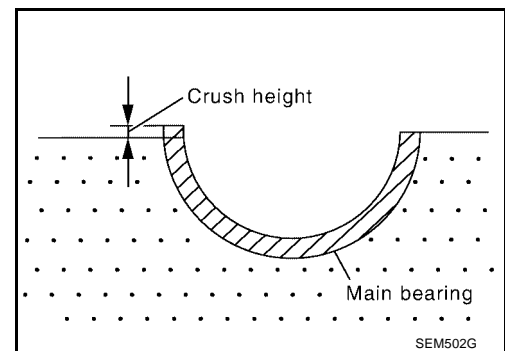


CRUSH HEIGHT OF CONNECTING ROD BEARING

- When the connecting rod bearing cap is removed after being tightened to the specified torque with main bearings installed, the tip end of the bearing must protrude. Refer to [EM-126. "ASSEMBLY"](#) for tightening procedure.

Standard : There must be a crush height.

- If the standard is not met, replace connecting rod bearings.

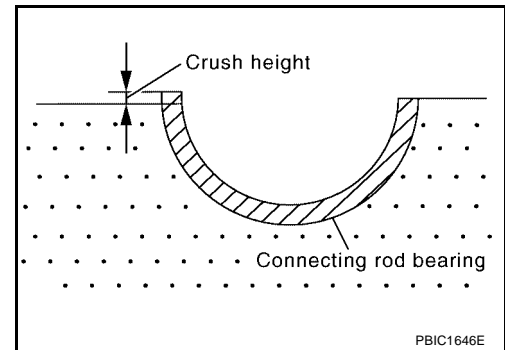


OUTER DIAMETER OF MAIN BEARING CAP BOLTS

- Measure outer diameters (d_1 , d_2) at two positions as shown.
- Measure d_2 at a point with A.

Limit : 0.11 mm (0.0051 in)


- When the value of $d_1 - d_2$ exceeds the limit (a large difference in dimensions) replace the bolt with a new one.

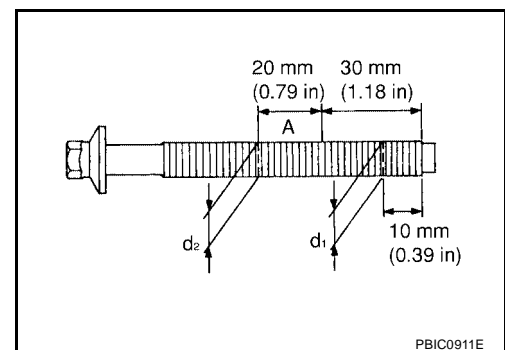

CYLINDER BLOCK

OUTER DIAMETER OF CONNECTING ROD BOLTS

- Measure outer diameter d as shown.
 - Standard** : 7.90 - 8.00 mm (0.3110 - 0.3150 in)
 - Limit** : 7.75 mm (0.3051 in)
- When the value of d exceeds the limit (when it becomes thinner) replace the bolt with a new one.

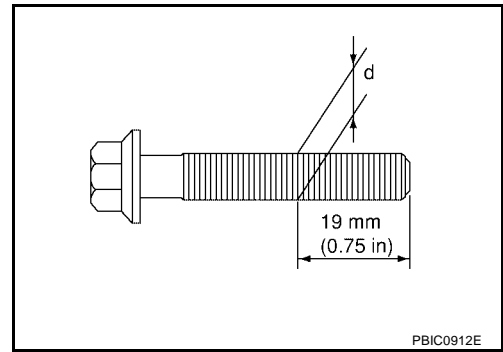



DRIVE PLATE RUNOUT (A/T)

Runout (Total Indicator Reading):

Drive plate (A/T) : less than 0.15 mm (0.0059 in)

CAUTION:

- The signal plate is built into the drive assembly. Be careful not to damage the signal plate, particularly the teeth.
- Check the drive plate and signal plate for deformation or cracks.
- Keep any magnetized objects away from the signal plate, particularly the teeth.

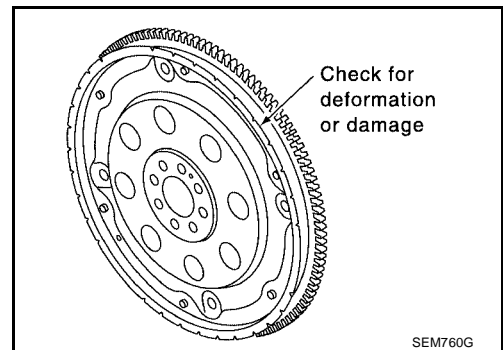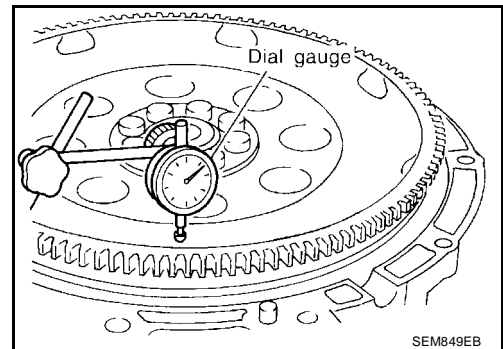

FLYWHEEL RUNOUT (M/T)

NOTE:

- This inspection is for double mass flywheel only.
- Do not disassemble the double mass flywheel.


Flywheel Deflection

- Measure the deflection of the flywheel contact surface to the clutch with a dial gauge.
- Measure the deflection at 210 mm (8.27 in) diameter.

Standard : 0.45 mm (0.0177 in) or less

Limit : 1.3 mm (0.051 in) or less

- When measured value exceeds the limit, replace the flywheel with a new one.

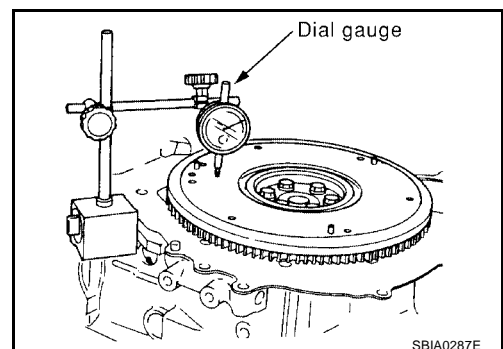

Movement Around in Rotation Direction


Check the movement amount with the following procedure:

CYLINDER BLOCK

1. Install a bolt to clutch cover mounting hole and place a torque wrench on the extended line of the flywheel center line.
 - Tighten the bolt at a force of 9.8 N·m (1 kg·m, 87 in-lb) to keep it from loosening.
2. Put a mating mark on the circumference of the two flywheel masses without applying any load (measurement standard points).
3. Apply a force of 9.8 N·m (1 kg·m, 87 in-lb) in each direction, and mark the movement amount on the mass on the transaxle side.
4. Measure dimensions of movement amounts A and B on the circumference of the flywheel on the transaxle side.

Flywheel movement : 24 mm (0.94 in) or less in rotation direction

- When the measured value exceeds the standard, replace the flywheel.

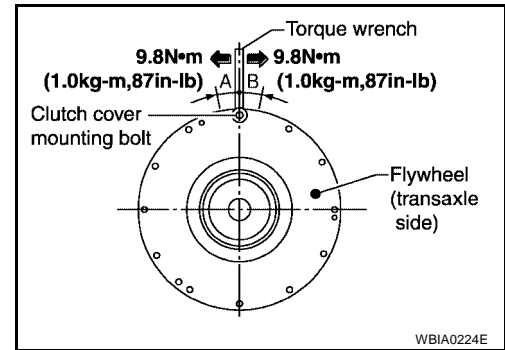


OIL JET

- Check nozzle for deformation and damage.
- Blow compressed air from nozzle, and check for clogs.
- If it is not satisfied, replace oil jet.

OIL JET RELIEF VALVE

- Using a clean plastic stick, press check valve in oil jet relief valve. Make sure that valve moves smoothly with proper reaction force.
- If it is not satisfied, replace oil jet relief valve.

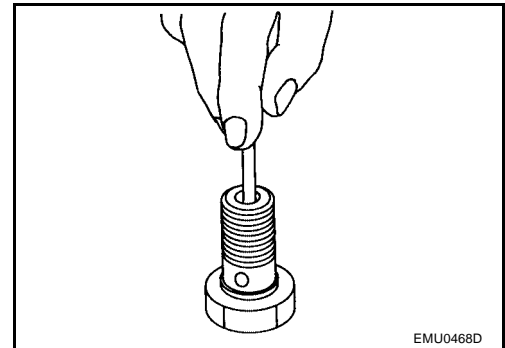

SERVICE DATA AND SPECIFICATIONS (SDS)


SERVICE DATA AND SPECIFICATIONS (SDS)


PF0:00100

Standard and Limit GENERAL SPECIFICATIONS

EBS00F3I

Cylinder arrangement		V-6
Displacement cm ³ (cu in)		3,498 (213.45)
Bore and stroke mm (in)		95.5 x 81.4 (3.760 x 3.205)
Valve arrangement		DOHC
Firing order		1-2-3-4-5-6
Number of piston rings	Compression	2
	Oil	1
Number of main bearings		4
Compression ratio		10.0:1
Compression pressure kPa (kg/cm ² , psi)/300 rpm	Standard	1,275 (13.0, 185)
	Minimum	981 (10.0, 142)
	Differential limit between cylinders	98 (1.0, 14)

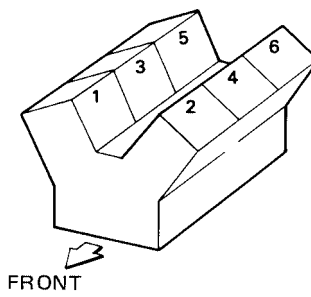
Cylinder number	 <p style="text-align: right; margin-top: 10px;">SEM713A</p>
-----------------	---

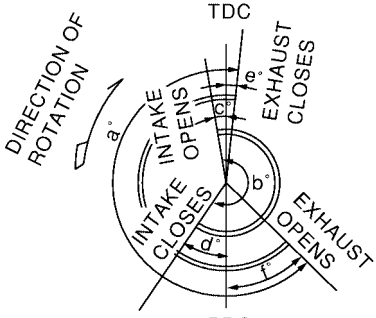Valve timing (IVTC - OFF)	 <p style="text-align: right; margin-top: 10px;">PBIC0187E</p>
---------------------------	--

Unit: degree					
a	b	c	d	e	f
240	238	- 6	64	8	52

SERVICE DATA AND SPECIFICATIONS (SDS)

DRIVE BELT

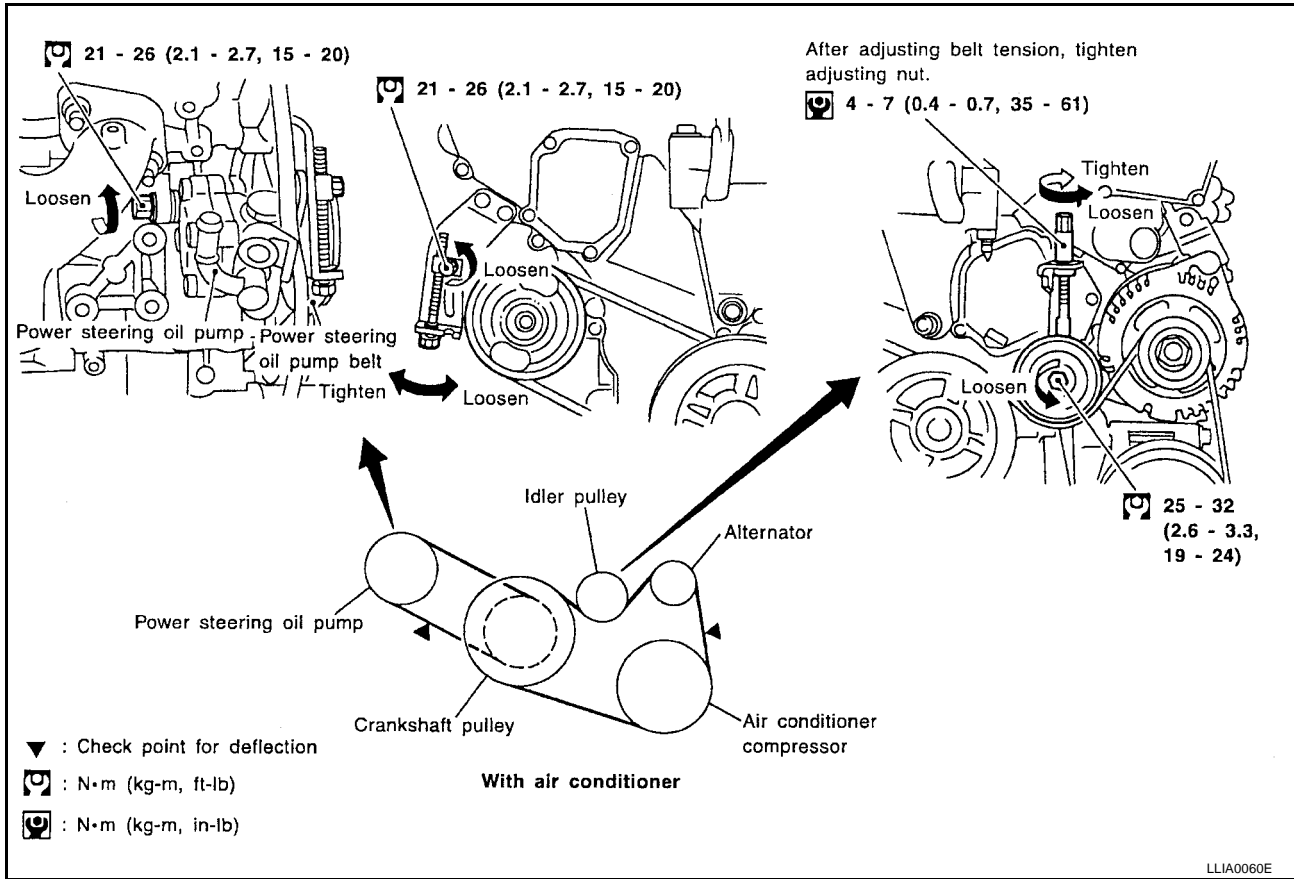

	Deflection adjustment		Unit: mm (in)	Tension adjustment*		Unit: N (kg, lb)
	Used belt		New belt	Used belt		New belt
	Limit	After adjustment		Limit	After adjustment	
Alternator and air conditioning compressor	7 (0.28)	4.2 - 4.6 (0.17 - 0.18)	3.7 - 4.1 (0.15 - 0.16)	294 (30, 66)	730 - 818 (74.5 - 83.5, 164 - 184)	838 - 926 (85.5 - 94.5, 188 - 208)
Power steering pump	11 (0.43)	7.3 - 8.0 (0.29 - 0.30)	6.5 - 7.2 (0.26 - 0.28)	196 (20, 44)	495 - 583 (50.5 - 59.5, 111 - 131)	603 - 691 (61.5 - 70.5, 135.6 - 155.4)
Applied pushing force	98 N (10 kg, 22 lb)			—		

*: If belt tension gauge cannot be installed at check points shown, check drive belt tension at different location on the belt.

INTAKE MANIFOLD COLLECTOR, INTAKE MANIFOLD AND EXHAUST MANIFOLD

Unit: mm (in)

Item	Limit	
Surface distortion	Intake manifold collector	0.1 (0.004)
	Intake manifold	0.1 (0.004)
	Exhaust manifold	0.3 (0.012)


SPARK PLUG

Make	NGK
Standard type	PLFR5A-11
Hot type	PLFR4A-11
Cold type	PLFR6A-11
Gap (nominal)	1.1 mm (0.043 in)

SERVICE DATA AND SPECIFICATIONS (SDS)

CYLINDER HEAD

Unit: mm (in)

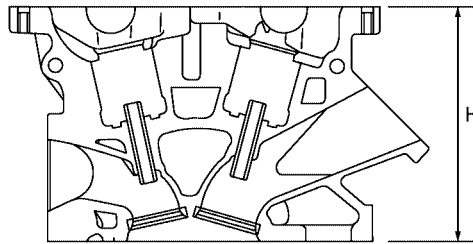


PBIC0924E

	Standard	Limit
Head surface distortion	—	0.1 (0.004)
Nominal cylinder head height "H"	126.3 - 126.5 (4.972 - 4.980)	—

VALVE

Valve Dimensions

Unit: mm (in)

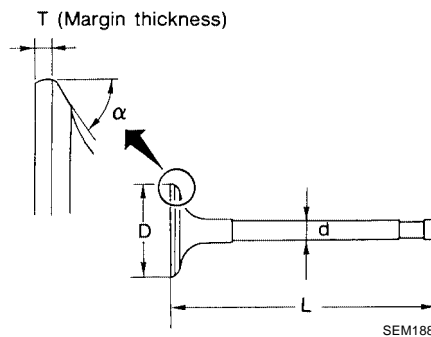

Valve head diameter "D"	Intake	37.0 - 37.3 (1.4567 - 1.4685)
	Exhaust	31.2 - 31.5 (1.228 - 1.240)
Valve length "L"	Intake	96.21 - 96.71 (3.7878 - 3.8075)
	Exhaust	93.74 - 94.24 (3.6905 - 3.7102)
Valve stem diameter "d"	Intake	5.965 - 5.980 (0.2348 - 0.2354)
	Exhaust	5.945 - 5.960 (0.2341 - 0.2346)
Valve seat angle "α"	Intake	45°25' - 45°75'
	Exhaust	
Valve margin "T"	Intake	1.15 - 1.45 (0.0453 - 0.0571)
	Exhaust	1.45 - 1.75 (0.0571 - 0.0689)
Valve margin "T" limit		More than 0.5 (0.020)
Valve stem end surface grinding limit		Less than 0.2 (0.008)
Valve oil seal installation height	14.3 14.9 mm (0.563 - 0.587 in)	

Valve Clearance

Unit: mm (in)

	Cold	Hot* (reference data)
Intake	0.26 - 0.34 (0.010 - 0.013)	0.304 - 0.416 (0.012 - 0.016)
Exhaust	0.29 - 0.37 (0.011 - 0.015)	0.308 - 0.432 (0.012 - 0.017)

*: Approximately 80°C (176°F)

SERVICE DATA AND SPECIFICATIONS (SDS)

Valve Spring


Free height	mm (in)		46.90 (1.8465)
Pressure	N (kg, lb) at height mm (in)	Standard	166 - 188 (16.9 - 19.2, 37.3 - 42.3) at 37.0 (1.457)
		Limit	378 - 426 (38.6 - 43.5, 85.0 - 95.8) at 27.8 (1.094)
Out-of-square	mm (in)		Less than 2.0 (0.079)

Valve Lifter

Unit: mm (in)


Valve lifter outer diameter	33.977 - 33.987 (1.3377 - 1.3381)
Lifter lifter bore diameter	34.000 - 34.016 (1.3386 - 1.3392)
Clearance between lifter and lifter guide	0.013 - 0.039 (0.0005 - 0.0015)

Available Valve Lifter

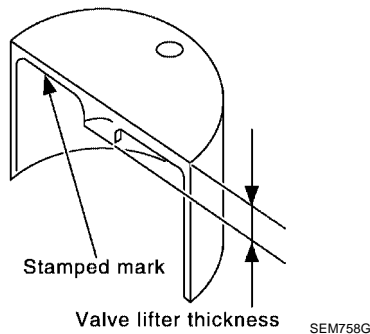

Identification Mark	Thickness mm (in)
788U or R	7.88 (0.3102)
790U or R	7.90 (0.3110)
792U or R	7.92 (0.3118)
794U or R	7.94 (0.3126)
796U or R	7.96 (0.3134)
798U or R	7.98 (0.3142)
800U or R	8.00 (0.3150)
802U or R	8.02 (0.3157)
804U or R	8.04 (0.3165)
806U or R	8.06 (0.3173)
808U or R	8.08 (0.3181)
810U or R	8.10 (0.3189)
812U or R	8.12 (0.3197)
814U or R	8.14 (0.3205)
816U or R	8.16 (0.3213)
818U or R	8.18 (0.3220)
820U or R	8.20 (0.3228)
822U or R	8.22 (0.3236)
824U or R	8.24 (0.3244)
826U or R	8.26 (0.3252)
828U or R	8.28 (0.3260)
830U or R	8.30 (0.3268)
832U or R	8.32 (0.3276)
834U or R	8.34 (0.3283)


SERVICE DATA AND SPECIFICATIONS (SDS)

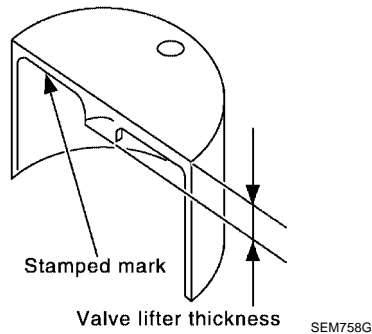

Identification Mark	Thickness mm (in)
836U or R	8.36 (0.3291)
838U or R	8.38 (0.3299)
840U or R	8.40 (0.3307)

Valve Guide

Unit: mm (in)

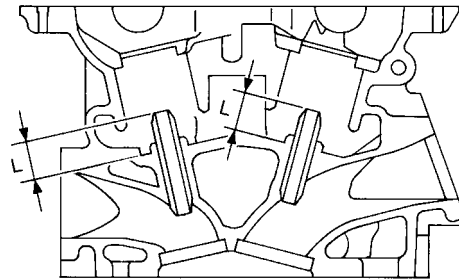


SEM950E

		Standard	Service
Valve guide	Outer diameter	10.023 - 10.034 (0.3946 - 0.3950)	10.223 - 10.234 (0.4025 - 0.4029)
Valve guide	Inner diameter (Finished size)	6.000 - 6.018 (0.2362 - 0.2369)	
Valve guide hole diameter		9.975 - 9.996 (0.3927 - 0.3935)	10.175 - 10.196 (0.4006 - 0.4014)
Interference fit of valve guide		0.027 - 0.059 (0.0011 - 0.0023)	
		Standard	Limit
Valve to valve guide clearance	Intake	0.020 - 0.053 (0.0008 - 0.0021)	0.08 (0.0031)
	Exhaust	0.030 - 0.063 (0.0012 - 0.0025)	0.9 (0.004)
Valve deflection	Intake	—	0.24 (0.0094)
	Exhaust	—	0.28 (0.0110)
Projection length "L"		12.6 - 12.8 (0.496 - 0.504)	


SERVICE DATA AND SPECIFICATIONS (SDS)

Valve Seat

Unit: mm (in)

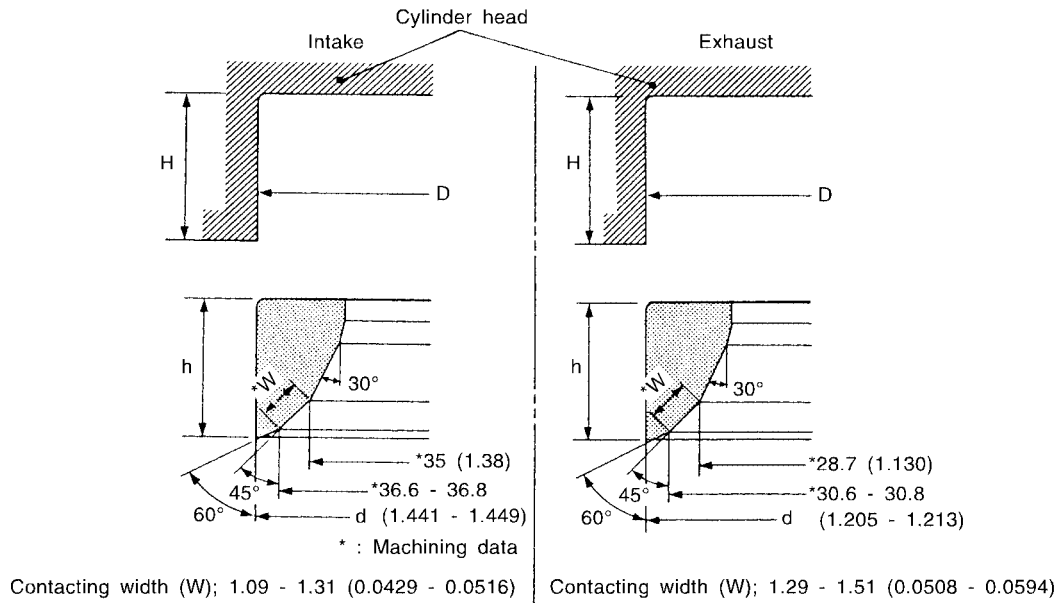

SEM021EB

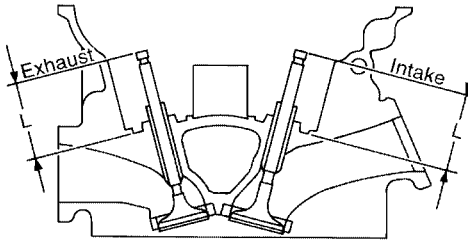

SEM621F

		Standard	Service
Cylinder head seat recess diameter (D)	Intake	38.000 - 38.016 (1.4961 - 1.4967)	38.500 - 38.516 (1.5157 - 1.5164)
	Exhaust	32.200 - 32.216 (1.2677 - 1.2683)	32.700 - 32.716 (1.2874 - 1.2880)
Valve seat interference fit	Intake	0.081 - 0.113 (0.0032 - 0.0044)	
	Exhaust	0.064 - 0.096 (0.0025 - 0.0038)	
Valve seat outer diameter (d)	Intake	38.097 - 38.113 (1.4999 - 1.5005)	38.597 - 38.613 (1.5196 - 1.5202)
	Exhaust	32.280 - 32.296 (1.2709 - 1.2715)	32.780 - 32.796 (1.2905 - 1.2912)
Height (h)	Intake	5.9 - 6.0 (0.232 - 0.236)	5.05 - 5.15 (0.1988 - 0.2028)
	Exhaust	5.9 - 6.0 (0.232 - 0.236)	4.95 - 5.05 (0.1949 - 0.1988)
Depth (H)		5.9 - 6.1 (0.232 - 0.240)	
Valve seat resurface limit (L)	Intake	41.07 - 41.67 (1.6169 - 1.6405)	
	Exhaust	41.00 - 41.60 (1.6142 - 1.6378)	


SERVICE DATA AND SPECIFICATIONS (SDS)

CAMSHAFT AND CAMSHAFT BEARING

Unit: mm (in)

	Standard	Limit
Camshaft journal to bracket clearance	No. 1 0.045 - 0.086 (0.0018 - 0.0034) No. 2, 3, 4 0.035 - 0.076 (0.0014 - 0.0030)	0.15 (0.0059)
Inner diameter of camshaft bracket	No. 1 26.000 - 26.021 (1.0236 - 1.0244) No. 2, 3, 4 23.500 - 23.521 (0.9252 - 0.9260)	—
Outer diameter of camshaft journal	No. 1 25.935 - 25.955 (1.0211 - 1.0218) No. 2, 3, 4 23.445 - 23.465 (0.9230 - 0.9238)	—
Camshaft runout [TIR*]	Less than 0.02 (0.0008)	0.05 (0.0020)
Camshaft sprocket runout [TIR*]	—	0.15 (0.0059)
Camshaft end play	0.115 - 0.188 (0.0045 - 0.0074)	0.24 (0.0094)

*: Total indicator reading

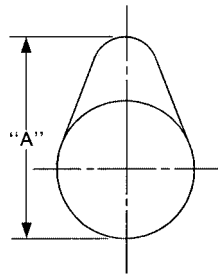


SEM671

Cam lobe height "A"	Intake and exhaust	44.865 - 45.055 (1.7663 - 1.7738)
Wear limit of cam lobe height		0.2 (0.008)

CYLINDER BLOCK

Unit: mm (in)

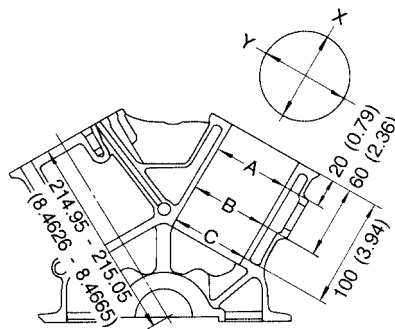

SEM022EA

Surface distortion	Limit	0.10 (0.0039)	
Cylinder bore	Inner diameter	Standard	
		Grade No. 1	95.500 - 95.510 (3.7598 - 3.7602)
		Grade No. 2	95.510 - 95.520 (3.7602 - 3.7606)
		Grade No. 3	95.520 - 95.530 (3.7606 - 3.7610)
	Wear limit	0.20 (0.0079)	
Out-of-round (Difference between X - Y)		Less than 0.015 (0.0006)	


SERVICE DATA AND SPECIFICATIONS (SDS)

Taper (Difference between C - A)	Less than 0.015 (0.0006)
Main journal inner diameter grade (Without bearing)	
Grade No. A	63.993 - 63.994 (2.5194 - 2.5194)
Grade No. B	63.994 - 63.995 (2.5194 - 2.5195)
Grade No. C	63.995 - 63.996 (2.5195 - 2.5195)
Grade No. D	63.996 - 63.997 (2.5195 - 2.5196)
Grade No. E	63.997 - 63.998 (2.5196 - 2.5196)
Grade No. F	63.998 - 63.999 (2.5196 - 2.5196)
Grade No. G	63.999 - 64.000 (2.5196 - 2.5197)
Grade No. H	64.000 - 64.001 (2.5197 - 2.5197)
Grade No. J	64.001 - 64.002 (2.5197 - 2.5198)
Grade No. K	64.002 - 64.003 (2.5198 - 2.5198)
Grade No. L	64.003 - 64.004 (2.5198 - 2.5198)
Grade No. M	64.004 - 64.005 (2.5198 - 2.5199)
Grade No. N	64.005 - 64.006 (2.5199 - 2.5199)
Grade No. P	64.006 - 64.007 (2.5199 - 2.5200)
Grade No. R	64.007 - 64.008 (2.5200 - 2.5200)
Grade No. S	64.008 - 64.009 (2.5200 - 2.5200)
Grade No. T	64.009 - 64.010 (2.5200 - 2.5201)
Grade No. U	64.010 - 64.011 (2.5201 - 2.5201)
Grade No. V	64.011 - 64.012 (2.5201 - 2.5202)
Grade No. W	64.012 - 64.013 (2.5202 - 2.5202)
Grade No. X	64.013 - 64.014 (2.5202 - 2.5202)
Grade No. Y	64.014 - 64.015 (2.5202 - 2.5203)
Grade No. 4	64.015 - 64.016 (2.5203 - 2.5203)
Grade No. 7	64.016 - 64.017 (2.5203 - 2.5203)

PISTON, PISTON RING AND PISTON PIN

Available Piston

Unit: mm (in)

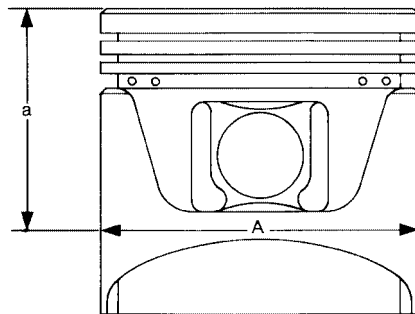

SEM882E

Piston skirt diameter "A"	Standard	Grade No. 1	95.480 - 95.490 (3.7590 - 3.7594)
		Grade No. 2*1	95.490 - 95.500 (3.7594 - 3.7598)
		Grade No. 3	95.500 - 95.510 (3.7598 - 3.7602)
		0.20 (0.0079) oversize (service)	95.680 - 95.710 (3.7669 - 3.7681)
"a" measuring point (distance from the top)			41.0 (1.614)
Piston pin hole diameter		Grade No. 0	21.993 - 21.999 (0.8659 - 0.8661)
		Grade No. 1*2	21.999 - 22.005 (0.8661 - 0.8663)
Piston-to-bore clearance to cylinder block			0.010 - 0.030 (0.0004 - 0.0012)

*1: There may be no grade number stamp.

*2: No service parts available

SERVICE DATA AND SPECIFICATIONS (SDS)

Piston Ring

Unit: mm (in)

		Standard	Limit
Side clearance	Top	0.045 - 0.080 (0.0018 - 0.0031)	0.11 (0.0043)
	2nd	0.030 - 0.070 (0.0012 - 0.0028)	0.1 (0.004)
	Oil ring	0.065 - 0.135 (0.0026 - 0.0053)	—
End gap	Top	0.23 - 0.33 (0.0091 - 0.0130)	0.54 (0.0213)
	2nd	0.33 - 0.48 (0.0130 - 0.0189)	0.80 (0.0315)
	Oil (rail ring)	0.20 - 0.50 (0.0079 - 0.0197)	0.95 (0.0374)

Piston Pin

Unit: mm (in)

Piston pin outer diameter	Grade No. 0	21.989 - 21.995 (0.8657 - 0.8659)
	Grade No. 1*	21.995 - 22.001 (0.8659 - 0.8662)
Interference fit of piston pin to piston		0.002 - 0.006 (0.0001 - 0.0002)
Piston pin to connecting rod bushing oil clearance	Standard	0.005 - 0.017 (0.0002 - 0.0007)
	Limit	0.030 (0.0012)

*: No service parts available.

CONNECTING ROD

Unit: mm (in)

Center distance		144.15 - 144.25 (5.6752 - 5.6791)
Bend [per 100 (3.94)]	Limit	0.15 (0.0059)
Torsion [per 100 (3.94)]	Limit	0.30 (0.0118)
Piston pin bushing inner diameter*1	Grade No. 0	22.000 - 22.006 (0.8661 - 0.8664)
	Grade No. 1*2	22.006 - 22.012 (0.8664 - 0.8666)
Connecting rod big end inner diameter		55.000 - 55.013 (2.1654 - 2.1659)
Connecting rod side clearance	Standard	0.20 - 0.35 (0.0079 - 0.0138)
	Limit	0.40 (0.0157)


*: 1: After installing in connecting rod

*: 2: No service parts available.

SERVICE DATA AND SPECIFICATIONS (SDS)


CRANKSHAFT

Unit: mm (in)

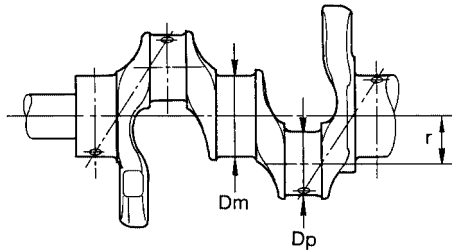

SEM645

Out-of-round $\text{X} - \text{Y}$
Taper $\text{A} - \text{B}$

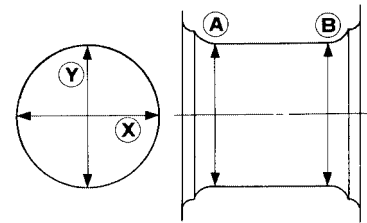


SEM715

Main journal dia. "Dm" grade	Grade No. A	59.975 - 59.974 (2.3612 - 2.3612)
	Grade No. B	59.974 - 59.973 (2.3612 - 2.3611)
	Grade No. C	59.973 - 59.972 (2.3611 - 2.3611)
	Grade No. D	59.972 - 59.971 (2.3611 - 2.3611)
	Grade No. E	59.971 - 59.970 (2.3611 - 2.3610)
	Grade No. F	59.970 - 59.969 (2.3610 - 2.3610)
	Grade No. G	59.969 - 59.968 (2.3610 - 2.3609)
	Grade No. H	59.968 - 59.967 (2.3609 - 2.3609)
	Grade No. J	59.967 - 59.966 (2.3609 - 2.3609)
	Grade No. K	59.966 - 59.965 (2.3609 - 2.3608)
	Grade No. L	59.965 - 59.964 (2.3608 - 2.3608)
	Grade No. M	59.964 - 59.963 (2.3608 - 2.3607)
	Grade No. N	59.963 - 59.962 (2.3607 - 2.3607)
	Grade No. P	59.962 - 59.961 (2.3607 - 2.3607)
	Grade No. R	59.961 - 59.960 (2.3607 - 2.3606)
	Grade No. S	59.960 - 59.959 (2.3606 - 2.3606)
	Grade No. T	59.959 - 59.958 (2.3606 - 2.3605)
Grade No. U	59.958 - 59.957 (2.3605 - 2.3605)	
Grade No. V	59.957 - 59.956 (2.3605 - 2.3605)	
Grade No. W	59.956 - 59.955 (2.3605 - 2.3604)	
Grade No. X	59.955 - 59.954 (2.3604 - 2.3604)	
Grade No. Y	59.954 - 59.953 (2.3604 - 2.3603)	
Grade No. 4	59.953 - 59.952 (2.3603 - 2.3603)	
Grade No. 7	59.952 - 59.951 (2.3603 - 2.3603)	
Pin journal dia. "Dp"	Grade No. 0	51.968 - 51.974 (2.0460 - 2.0462)
	Grade No. 1	51.962 - 51.968 (2.0457 - 2.0460)
	Grade No. 2	51.956 - 51.962 (2.0445 - 2.0457)
Center distance "r"		40.36 - 40.44 (1.5890 - 1.5921)
Out-of-round (Difference between, X - Y)	Standard	Less than 0.002 (0.0001)
Taper (Difference between, A - B)	Standard	Less than 0.002 (0.0001)
Runout [TIR*]	Limit	Less than 0.10 (0.0039)
End play	Standard	0.10 - 0.25 (0.0039 - 0.0098)
	Limit	0.30 (0.0118)

*: Total indicator reading

SERVICE DATA AND SPECIFICATIONS (SDS)

AVAILABLE MAIN BEARING

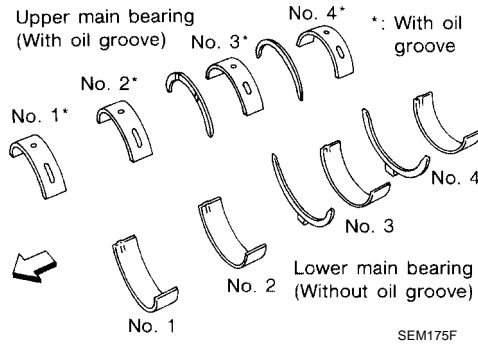

Grade number	Thickness "T" mm (in)	Width "W" mm (in)	Identification color (UPR/LWR)	Remarks
0	2.000 - 2.003 (0.0787 - 0.0789)	19.9 - 20.1 (0.783 - 0.791)	Black	Grade is the same for upper and lower bearings.
1	2.003 - 2.006 (0.0789 - 0.0790)		Brown	
2	2.006 - 2.009 (0.0790 - 0.0791)		Green	
3	2.009 - 2.012 (0.0791 - 0.0792)		Yellow	
4	2.012 - 2.015 (0.0792 - 0.0793)		Blue	
5	2.015 - 2.018 (0.0793 - 0.0794)		Pink	
6	2.018 - 2.021 (0.0794 - 0.0796)		Purple	
7	2.021 - 2.024 (0.0796 - 0.0797)		White	
01	UPR	2.003 - 2.006 (0.0789 - 0.0790)	Brown/Black	Grade is different for upper and lower bearings.
	LWR		2.000 - 2.003 (0.0787 - 0.0789)	
12	UPR	2.006 - 2.009 (0.0790 - 0.0791)	Green/Brown	
	LWR		2.003 - 2.006 (0.0789 - 0.0790)	
23	UPR	2.009 - 2.012 (0.0791 - 0.0792)	Yellow/Green	
	LWR		2.006 - 2.009 (0.0790 - 0.0791)	
34	UPR	2.012 - 2.015 (0.0792 - 0.0793)	Blue/Yellow	
	LWR		2.009 - 2.012 (0.0791 - 0.0792)	
45	UPR	2.015 - 2.018 (0.0793 - 0.0794)	Pink/Blue	
	LWR		2.012 - 2.015 (0.0792 - 0.0793)	
56	UPR	2.018 - 2.021 (0.0794 - 0.0796)	Purple/Pink	
	LWR		2.015 - 2.018 (0.0793 - 0.0794)	
67	UPR	2.021 - 2.024 (0.0796 - 0.0797)	White/Purple	
	LWR		2.018 - 2.021 (0.0794 - 0.0796)	

Undersize

Unit: mm (in)

	Thickness	Main journal diameter "Dm"
0.25 (0.0098)	2.132 - 2.140 (0.0839 - 0.0843)	Grind so that bearing clearance is the specified value.

CONNECTING ROD BEARING

Grade number	Thickness "T" mm (in)	Identification color (mark)
0	1.500 - 1.503 (0.0591 - 0.0592)	Black
1	1.503 - 1.506 (0.0592 - 0.0593)	Brown
2	1.506 - 1.509 (0.0593 - 0.0594)	Green

SERVICE DATA AND SPECIFICATIONS (SDS)

Undersize

Unit: mm (in)

	Thickness	Crank pin journal diameter "Dp"
0.25 (0.0098)	1.626 - 1.634 (0.0640 - 0.0643)	Grind so that bearing clearance is the specified value.

MISCELLANEOUS COMPONENTS

Unit: mm (in)

Flywheel deflection [TIR]* - Standard	Less than 0.45 (0.0177)
Flywheel deflection [TIR]* - Limit	1.3 (0.051)
Drive plate runout [TIR]*	Less than 0.15 (0.0059)
Flywheel movement in rotation direction	Less than 24 (0.94)

*: Total indicator reading

BEARING CLEARANCE

Unit: mm (in)

Main bearing clearance	Standard	0.035 - 0.045 (0.0014 - 0.0018)*
	Limit	0.065 (0.0026)
Connecting rod bearing clearance	Standard	0.034 - 0.059 (0.0013 - 0.0023)*
	Limit	0.070 (0.0028)

*: Actual clearance