

LT
SECTION
LIGHTING SYSTEM

A
B
C

CONTENTS

<p>PRECAUTIONS 4</p> <p style="padding-left: 20px;">Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" 4</p> <p style="padding-left: 20px;">General precautions for service operations 4</p> <p>HEADLAMP (FOR USA) 5</p> <p style="padding-left: 20px;">Component Parts and Harness Connector Location... 5</p> <p style="padding-left: 20px;">System Description 5</p> <p style="padding-left: 40px;">OUTLINE 5</p> <p style="padding-left: 40px;">BATTERY SAVER CONTROL 6</p> <p style="padding-left: 40px;">AUTO LIGHT OPERATION 6</p> <p style="padding-left: 40px;">VEHICLE SECURITY SYSTEM (PANIC ALARM)... 6</p> <p style="padding-left: 20px;">CAN Communication System Description 6</p> <p style="padding-left: 20px;">Schematic 7</p> <p style="padding-left: 20px;">Wiring Diagram — H/LAMP — 8</p> <p style="padding-left: 20px;">Terminals and Reference Values for BCM 12</p> <p style="padding-left: 20px;">Terminals and Reference Values for IPDM E/R 12</p> <p style="padding-left: 20px;">How to Proceed With Trouble Diagnosis 12</p> <p style="padding-left: 20px;">Preliminary Check 12</p> <p style="padding-left: 20px;">CONSULT-II Function (BCM) 12</p> <p style="padding-left: 40px;">CONSULT-II OPERATION 12</p> <p style="padding-left: 40px;">WORK SUPPORT 13</p> <p style="padding-left: 40px;">DATA MONITOR 13</p> <p style="padding-left: 40px;">ACTIVE TEST 14</p> <p style="padding-left: 40px;">SELF-DIAGNOSTIC RESULTS 15</p> <p style="padding-left: 20px;">CONSULT-II Function (IPDM E/R) 15</p> <p style="padding-left: 40px;">CONSULT-II OPERATION 15</p> <p style="padding-left: 40px;">DATA MONITOR 16</p> <p style="padding-left: 40px;">ACTIVE TEST 17</p> <p style="padding-left: 20px;">Headlamp HI Does Not Illuminate (Both Sides) 17</p> <p style="padding-left: 20px;">Headlamp HI Does Not Illuminate (One Side) 19</p> <p style="padding-left: 20px;">High Beam Indicator Lamp Does Not Illuminate ... 20</p> <p style="padding-left: 20px;">Headlamp LO Does Not Illuminate (Both Sides) ... 21</p> <p style="padding-left: 20px;">Headlamp LO Does Not Illuminate (One Side) 23</p> <p style="padding-left: 20px;">Headlamps Do Not Turn OFF 24</p> <p style="padding-left: 20px;">Aiming Adjustment 25</p> <p style="padding-left: 40px;">LOW BEAM AND HIGH BEAM 26</p> <p style="padding-left: 20px;">Bulb Replacement 27</p> <p style="padding-left: 40px;">HEADLAMP BULB 27</p> <p style="padding-left: 40px;">FRONT TURN SIGNAL/PARKING LAMP 27</p>	<p style="padding-left: 20px;">FRONT SIDE MARKER LAMP 27</p> <p style="padding-left: 20px;">Removal and Installation 27</p> <p style="padding-left: 20px;">FRONT COMBINATION LAMP 27</p> <p style="padding-left: 20px;">Disassembly and Assembly 28</p> <p style="padding-left: 20px;">FRONT COMBINATION LAMP 28</p> <p>HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM - 29</p> <p style="padding-left: 20px;">Component Parts and Harness Connector Location.. 29</p> <p style="padding-left: 20px;">System Description 29</p> <p style="padding-left: 40px;">OUTLINE 30</p> <p style="padding-left: 40px;">DAYTIME LIGHT OPERATION 31</p> <p style="padding-left: 40px;">COMBINATION SWITCH READING FUNCTION.. 31</p> <p style="padding-left: 40px;">AUTO LIGHT OPERATION 31</p> <p style="padding-left: 20px;">CAN Communication System Description 31</p> <p style="padding-left: 20px;">Schematic 32</p> <p style="padding-left: 20px;">Wiring Diagram — DTRL — 33</p> <p style="padding-left: 20px;">Terminals and Reference Values for BCM 37</p> <p style="padding-left: 20px;">Terminals and Reference Values for IPDM E/R 37</p> <p style="padding-left: 20px;">How to Proceed With Trouble Diagnosis 37</p> <p style="padding-left: 20px;">Preliminary Check 37</p> <p style="padding-left: 40px;">CHECK BCM CONFIGURATION 37</p> <p style="padding-left: 40px;">INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT 37</p> <p style="padding-left: 40px;">INSPECTION PARKING BRAKE SWITCH CIRCUIT 37</p> <p style="padding-left: 20px;">CONSULT-II Functions 38</p> <p style="padding-left: 20px;">Daytime Light Control Does Not Operate Properly (Normal Headlamps Operate Properly) 38</p> <p style="padding-left: 20px;">Aiming Adjustment 39</p> <p style="padding-left: 20px;">Bulb Replacement 39</p> <p style="padding-left: 20px;">Removal and Installation 39</p> <p style="padding-left: 20px;">Disassembly and Assembly 39</p> <p>AUTO LIGHT SYSTEM 40</p> <p style="padding-left: 20px;">Component Parts and Harness Connector Location.. 40</p> <p style="padding-left: 20px;">System Description 41</p> <p style="padding-left: 40px;">OUTLINE 41</p> <p style="padding-left: 40px;">COMBINATION SWITCH READING FUNCTION.. 41</p> <p style="padding-left: 40px;">EXTERIOR LAMP BATTERY SAVER CONTROL.. 41</p> <p style="padding-left: 40px;">DELAY TIMER FUNCTION 41</p> <p style="padding-left: 20px;">CAN Communication System Description 41</p>
---	--

D
E
F
G
H
I
J
LT
L
M

Major Components and Functions	42	Preliminary Check	69
Schematic	43	CHECK POWER SUPPLY AND GROUND CIR- CUIT	69
Wiring Diagram — AUTO/L —	44	CONSULT-II Function (BCM)	69
Terminals and Reference Values for BCM	47	CONSULT-II OPERATION	69
Terminals and Reference Values for IPDM E/R	47	DATA MONITOR	70
How to Proceed With Trouble Diagnosis	47	ACTIVE TEST	71
Preliminary Check	47	Turn Signal Lamp Does Not Operate	71
SETTING CHANGE FUNCTIONS	47	Rear Turn Signal Lamp Does Not Operate	72
CHECK BCM CONFIGURATION	47	Hazard Warning Lamp Does Not Operate But Turn Signal Lamps Operate	73
CHECK POWER SUPPLY AND GROUND CIR- CUIT	47	Turn Signal Indicator Lamp Does Not Operate	75
CONSULT-II Function (BCM)	47	Bulb Replacement	76
CONSULT-II OPERATION	47	FRONT TURN SIGNAL LAMP	76
WORK SUPPORT	48	REAR TURN SIGNAL LAMP	76
DATA MONITOR	49	Removal and Installation	76
ACTIVE TEST	50	FRONT TURN SIGNAL LAMP	76
CONSULT-II Function (IPDM E/R)	51	REAR TURN SIGNAL LAMP	76
CONSULT-II OPERATION	51	LIGHTING AND TURN SIGNAL SWITCH	77
DATA MONITOR	52	Removal and Installation	77
ACTIVE TEST	52	REMOVAL	77
Trouble Diagnosis Chart by Symptom	53	INSTALLATION	77
Lighting Switch Inspection	53	HAZARD SWITCH	78
Optical Sensor System Inspection	54	Removal and Installation	78
Removal and Installation	55	REMOVAL	78
OPTICAL SENSOR	55	INSTALLATION	78
FRONT FOG LAMP	56	COMBINATION SWITCH	79
Component Parts and Harness Connector Location..	56	Wiring Diagram — COMBSW —	79
System Description	56	Combination Switch Reading Function	80
OUTLINE	56	CONSULT-II Function (BCM)	80
COMBINATION SWITCH READING FUNCTION..	57	CONSULT-II OPERATION	80
EXTERIOR LAMP BATTERY SAVER CONTROL..	57	DATA MONITOR	81
CAN Communication System Description	57	Combination Switch Inspection	82
Wiring Diagram — F/FOG —	58	Removal and Installation	84
Terminals and Reference Values for BCM	60	Switch Circuit Inspection	84
Terminals and Reference Values for IPDM E/R	60	STOP LAMP	85
How to Proceed With Trouble Diagnosis	60	System Description	85
Preliminary Check	60	Wiring Diagram — STOP/L —	86
CHECK POWER SUPPLY AND GROUND CIR- CUIT	60	High-Mounted Stop Lamp	87
CONSULT-II Functions	60	BULB REPLACEMENT	87
Front Fog Lamps Do Not Illuminate (Both Sides) ...	60	REMOVAL AND INSTALLATION	87
Front Fog Lamp Does Not Illuminate (One Side) ...	61	Stop Lamp	87
Aiming Adjustment	62	BULB REPLACEMENT	87
Bulb Replacement	63	REMOVAL AND INSTALLATION	87
Removal and Installation	63	BACK-UP LAMP	88
FRONT FOG LAMP	63	Wiring Diagram — BACK/L —	88
TURN SIGNAL AND HAZARD WARNING LAMPS..	64	Bulb Replacement	89
Component Parts and Harness Connector Location..	64	Removal and Installation	89
System Description	64	PARKING, LICENSE PLATE AND TAIL LAMPS	90
OUTLINE	64	Component Parts and Harness Connector Location..	90
TURN SIGNAL OPERATION	64	System Description	90
HAZARD LAMP OPERATION	65	OPERATION BY LIGHTING SWITCH	90
REMOTE KEYLESS ENTRY SYSTEM OPERA- TION	65	COMBINATION SWITCH READING FUNCTION..	91
COMBINATION SWITCH READING FUNCTION..	66	EXTERIOR LAMP BATTERY SAVER CONTROL..	91
CAN Communication System Description	66	CAN Communication System Description	91
Wiring Diagram — TURN —	67	Schematic	92
Terminals and Reference Values for BCM	69	Wiring Diagram — TAIL/L —	93
How to Proceed With Trouble Diagnosis	69	Terminals and Reference Values for BCM	97
		Terminals and Reference Values for IPDM E/R	97

How to Proceed With Trouble Diagnosis	97	ROOM LAMP TIMER OPERATION	118	
Preliminary Check	97	INTERIOR LAMP BATTERY SAVER CONTROL	118	A
CHECK POWER SUPPLY AND GROUND CIR-		Schematic	119	
CUIT	97	Wiring Diagram — INT/L —	121	
CONSULT-II Functions	97	Terminals and Reference Values for BCM	126	B
Parking, Side Marker, License Plate and/or Tail		How to Proceed With Trouble Diagnosis	126	
Lamps Do Not Illuminate	97	Preliminary Check	126	
Parking, Side Marker, License Plate and Tail Lamps		INSPECTION FOR POWER SUPPLY AND		C
Do Not Turn OFF (After Approx. 10 Minutes)	104	GROUND CIRCUIT	126	
Bulb Replacement	104	CONSULT-II Function (BCM)	126	
FRONT PARKING LAMP	104	CONSULT-II OPERATION	126	
TAIL LAMP	104	WORK SUPPORT	127	D
LICENSE PLATE LAMP	104	DATA MONITOR	128	
Removal and Installation	104	ACTIVE TEST	128	
LICENSE PLATE LAMP	104	Room/Map Lamp Control Does Not Operate	129	E
REAR COMBINATION LAMP	105	Personal Lamp Control Does Not Operate (Room/		
Bulb Replacement	105	Map Lamps Operate)	131	
REMOVAL	105	All Interior Room Lamps Do Not Operate	132	F
INSTALLATION	105	Ignition Keyhole Illumination Control Does Not		
Removal and Installation	105	Operate	132	
REMOVAL	105	ILLUMINATION	135	
INSTALLATION	105	Component Parts and Harness Connector Location	135	G
TRAILER TOW	106	System Description	135	
Component Parts and Harness Connector Location	106	ILLUMINATION OPERATION BY LIGHTING		
System Description	106	SWITCH	136	H
TRAILER TAIL LAMP OPERATION	107	EXTERIOR LAMP BATTERY SAVER CONTROL	137	
TRAILER STOP, TURN SIGNAL AND HAZARD		CAN Communication System Description	137	
LAMP OPERATION	107	Schematic	138	
TRAILER POWER SUPPLY OPERATION	107	Wiring Diagram — ILL —	141	I
Schematic	109	Removal and Installation	150	
Wiring Diagram — T/TOW —	110	ILLUMINATION CONTROL SWITCH	150	
INTERIOR ROOM LAMP	115	BULB SPECIFICATIONS	151	J
Component Parts and Harness Connector Location	115	Headlamp	151	
System Description	116	Exterior Lamp	151	
POWER SUPPLY AND GROUND	116	Interior Lamp/Illumination	151	LT
SWITCH OPERATION	117			

PRECAUTIONS

PRECAUTIONS

PF0:00011

Precautions for Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER”

EKS00FTW

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER”, used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

General precautions for service operations

EKS00FTX

- Never work with wet hands.
- Turn the lighting switch OFF before disconnecting and connecting the connector.
- When checking the headlamp on/off operation, check it on vehicle and with the power connected to the vehicle-side connector.
- Do not touch the headlamp bulb glass surface with bare hands or allow oil or grease to get on it. Do not touch the headlamp bulb just after the headlamp is turned off, because it is very hot.
- When the bulb has burned out, wrap it in a thick vinyl bag and discard. Do not break the bulb.
- Leaving the bulb removed from the headlamp housing for a long period of time can deteriorate the performance of the lens and reflector (dirt, clouding). Always prepare a new bulb and have it on hand when replacing the bulb.
- Do not use organic solvent (paint thinner or gasoline) to clean lamps and to remove old sealant.


HEADLAMP (FOR USA)

HEADLAMP (FOR USA)

PFP:26010

Component Parts and Harness Connector Location

EKS00FTZ

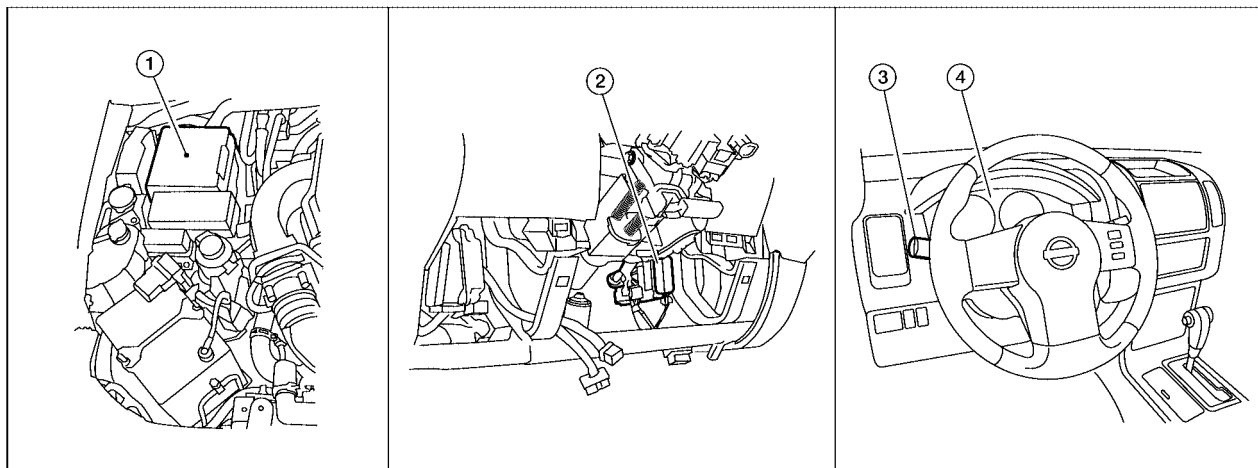

WKIA4957E

- | | | |
|--|--|--|
| 1. IPDM E/R
E118, E119, E120, E121,
E122, E123, E124 | 2. BCM
M18, M19, M20
(view with instrument lower panel LH removed) | 3. Combination Switch (lighting switch)
M28 |
| 4. Combination meter
M24 | | |

System Description

EKS00FU0

Control of the front headlamp system operation is dependent upon the position of the combination switch (lighting switch). When the lighting switch is placed in the 2ND position, the BCM (body control module) receives input requesting the headlamps (and tail lamps) illuminate. This input is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the front headlamp high and front headlamp low relay coils. When energized, these relays direct power to the respective headlamps, which then illuminate.

OUTLINE

Power is supplied at all times

- to ignition relay, located in the IPDM E/R, and
- to headlamp high relay, located in the IPDM E/R, and
- to headlamp low relay, located in the IPDM E/R, and
- through 20A fuse (No. 53, located in the IPDM E/R)
- to CPU of the IPDM E/R, and
- through 50A fusible link (letter **g**, located in the fuse and fusible link box)
- to BCM terminal 70.

With the ignition switch in the ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse [No. 1, located in the fuse block (J/B)]
- to BCM terminal 38.

Ground is supplied

- to BCM terminal 67
- through grounds M57, M61 and M79, and
- to IPDM E/R terminals 38 and 59
- through grounds E9, E15 and E24.

A
B
C
D
E
F
G
H
I
J
LT
L
M

HEADLAMP (FOR USA)

Low Beam Operation

With the lighting switch in 2ND position, the BCM receives input requesting the headlamps to illuminate. This input is communicated to the IPDM E/R across the CAN communication lines. The CPU of the IPDM E/R controls the headlamp low relay coil. When energized, this relay directs power

- through 15A fuse (No. 41, located in the IPDM E/R)
- through IPDM E/R terminal 54
- to front headlamp RH terminal 3, and
- through 15A fuse (No. 40, located in the IPDM E/R)
- through IPDM E/R terminal 52
- to front headlamp LH terminal 3.

Ground is supplied

- to front headlamp LH and RH terminal 2
- through grounds E9, E15 and E24.

With power and ground supplied, low beam headlamps illuminate.

High Beam Operation/Flash-to-Pass Operation

With the lighting switch in 2ND position and placed in HIGH or PASS position, the BCM receives input requesting the headlamp high beams to illuminate. This input is communicated to the IPDM E/R across the CAN communication lines. The CPU of the combination meter controls the ON/OFF status of the HIGH BEAM indicator. The CPU of the IPDM E/R controls the headlamp high relay coil. When energized, this relay directs power

- through 10A fuse (No. 34, located in the IPDM E/R)
- through IPDM E/R terminal 56
- to front headlamp RH terminal 1, and
- through 10A fuse (No. 35, located in the IPDM E/R)
- through IPDM E/R terminal 55
- to front headlamp LH terminal 1.

Ground is supplied

- to front headlamp LH and RH terminal 2
- through grounds E9, E15 and E24.

With power and ground supplied, the high beam headlamps illuminate.

BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 2ND position (ON), and the ignition switch is turned from ON or ACC to OFF, the battery saver control feature is activated.

Under this condition, the headlamps remain illuminated for 5 minutes, unless the combination switch (lighting switch) position is changed. If the combination switch (lighting switch) position is changed, then the headlamps are turned off.

AUTO LIGHT OPERATION

Refer to [LT-41, "System Description"](#) for auto light operation.

VEHICLE SECURITY SYSTEM (PANIC ALARM)

The vehicle security system (panic alarm) will flash the high beams if the system is triggered. Refer to [BL-44, "Panic Alarm Operation"](#).

CAN Communication System Description


Refer to [LAN-25, "CAN COMMUNICATION"](#).

EKS00FU1

HEADLAMP (FOR USA)

EKS00FU2

Schematic

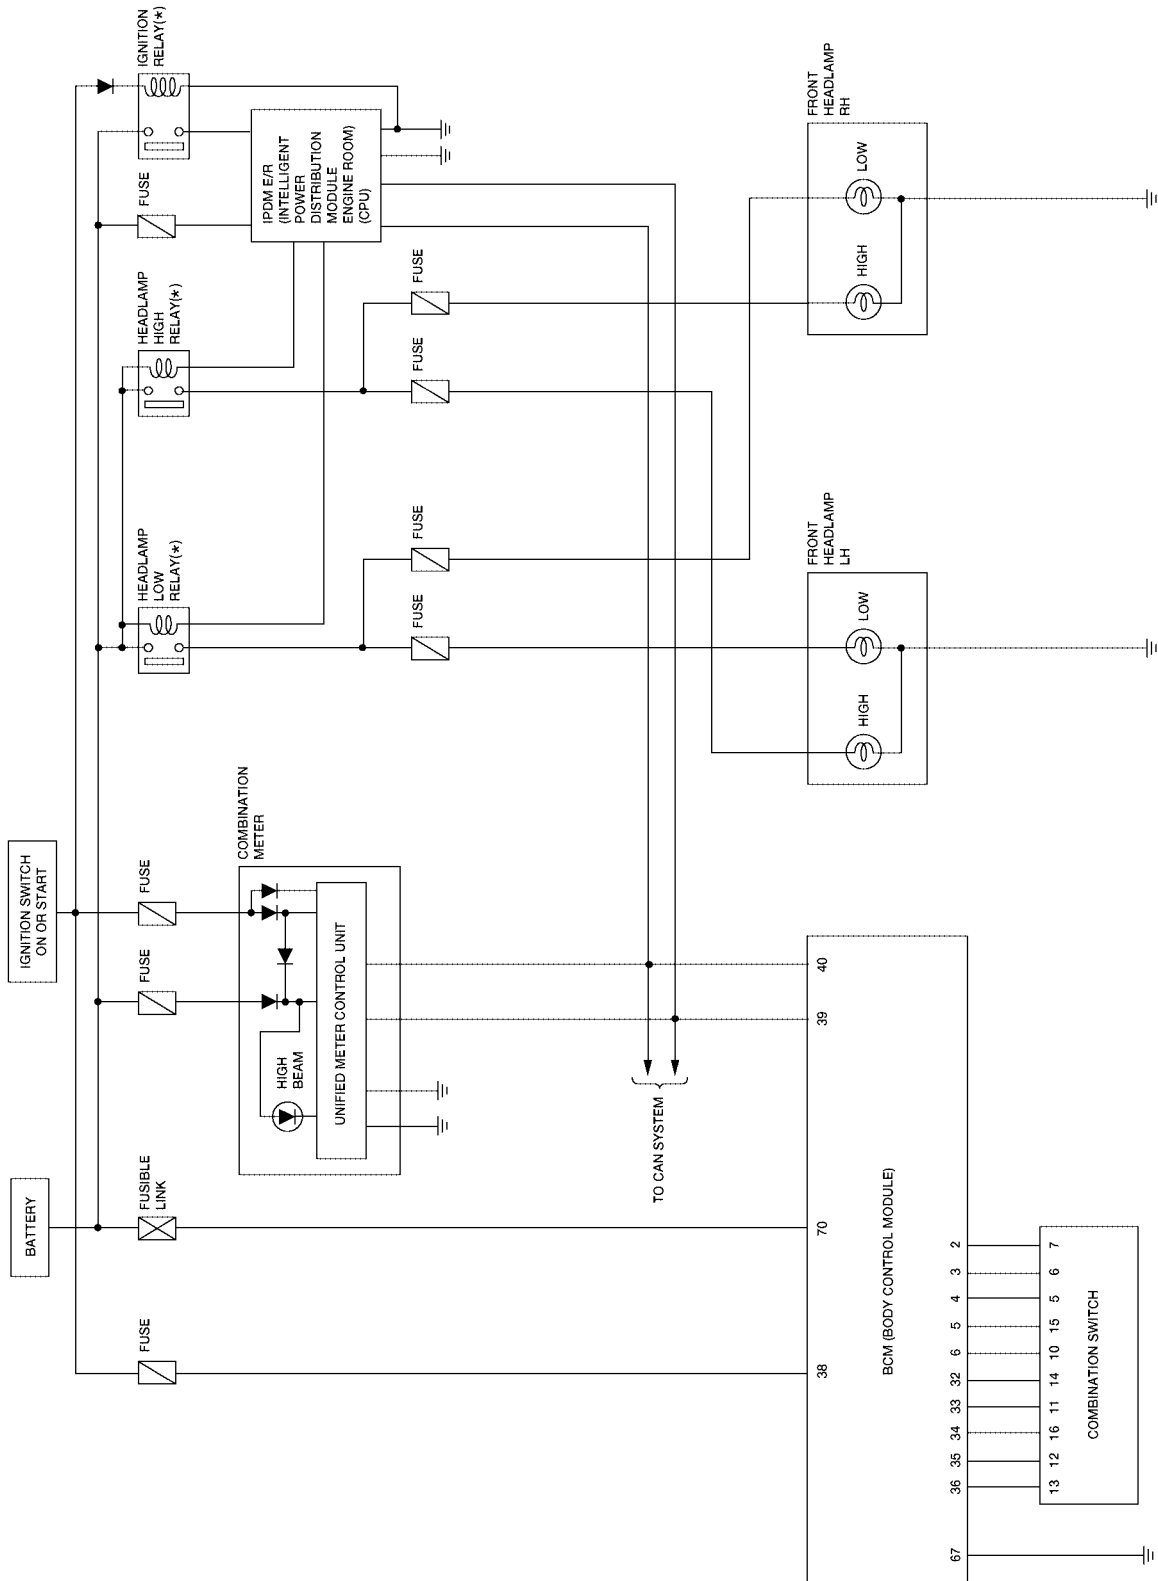

*: THIS RELAY IS BUILT INTO THE IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

A
B
C
D
E
F
G
H
I
J
LT
L
M

WKWA4303E





HEADLAMP (FOR USA)

EKS00FU3

Wiring Diagram — H/LAMP —

LT-H/LAMP-01



— : DATA LINE

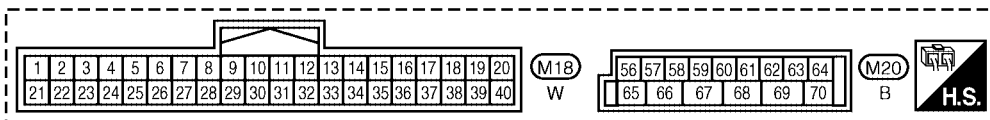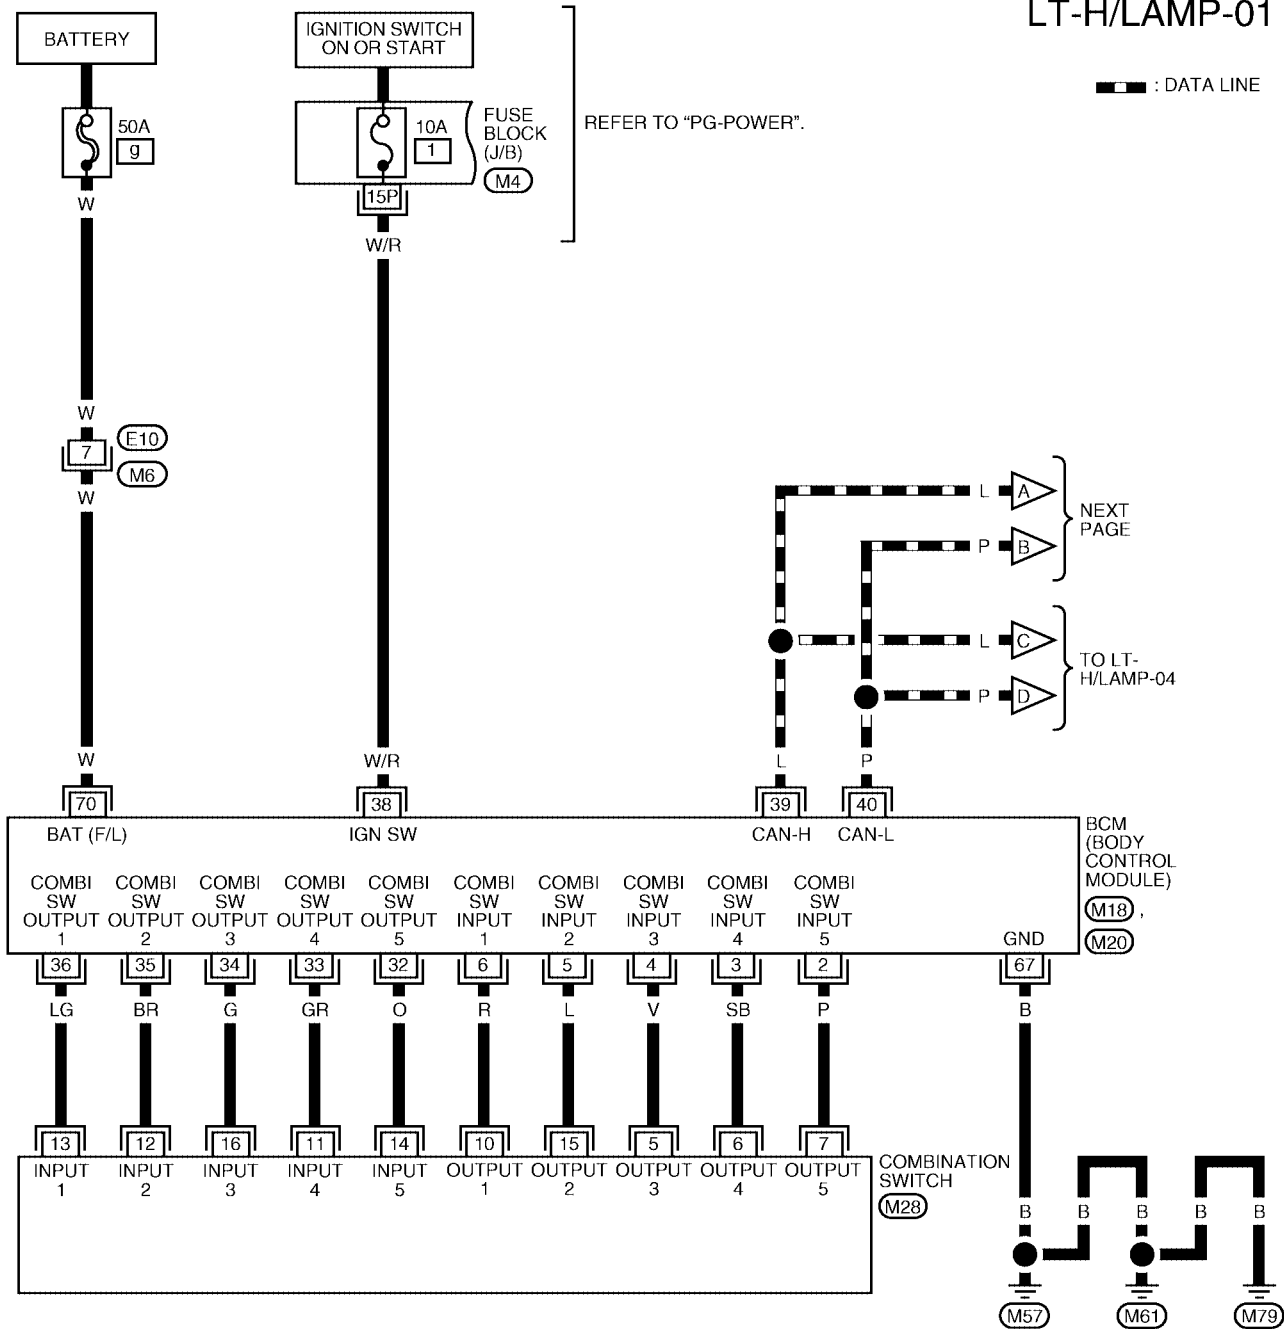

WKWA4221E

HEADLAMP (FOR USA)



LT-H/LAMP-02

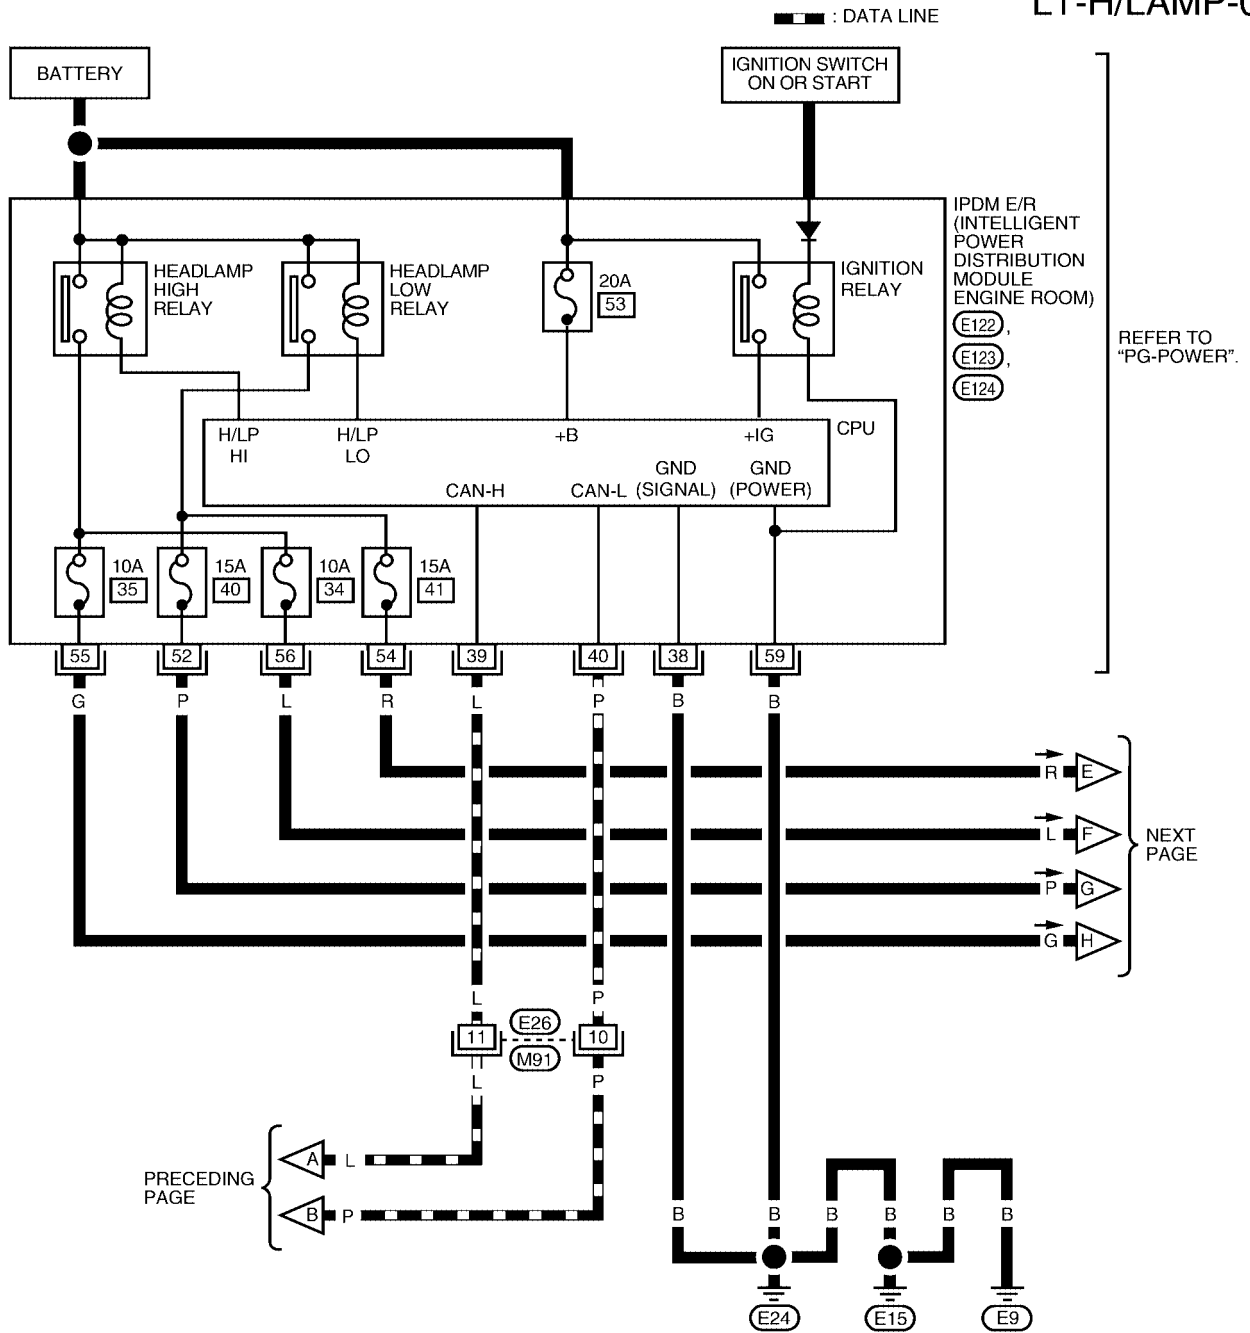

WKWA2018E

HEADLAMP (FOR USA)

LT-H/LAMP-03

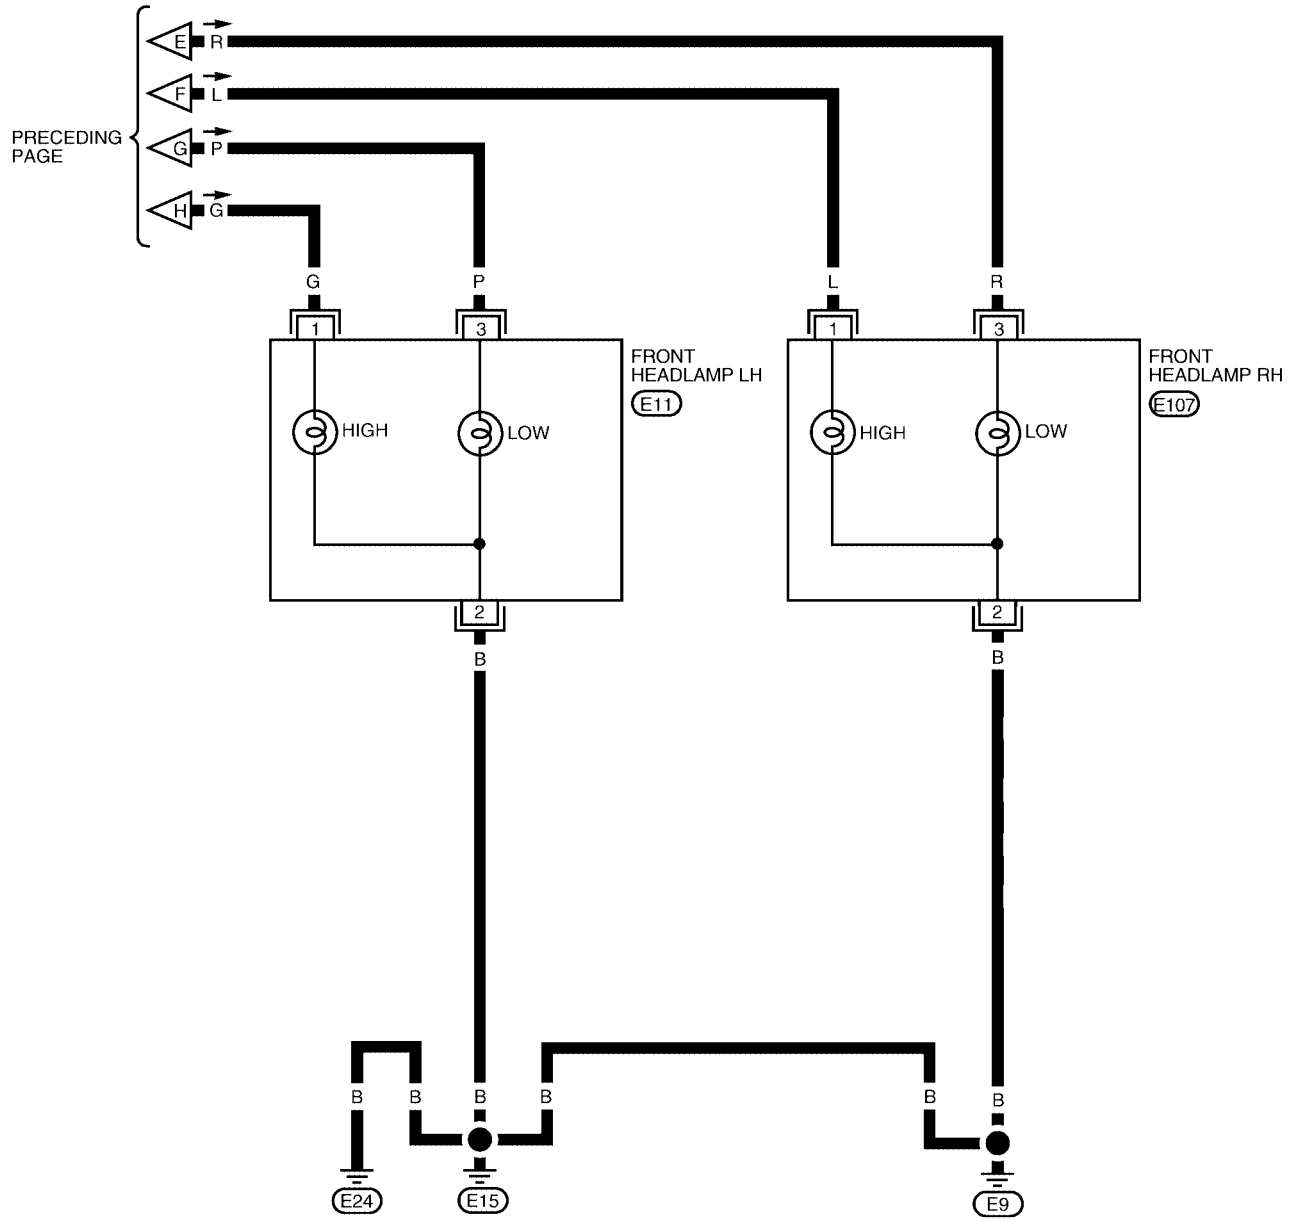


WKWA2019E

HEADLAMP (FOR USA)

LT-H/LAMP-04

— : DATA LINE

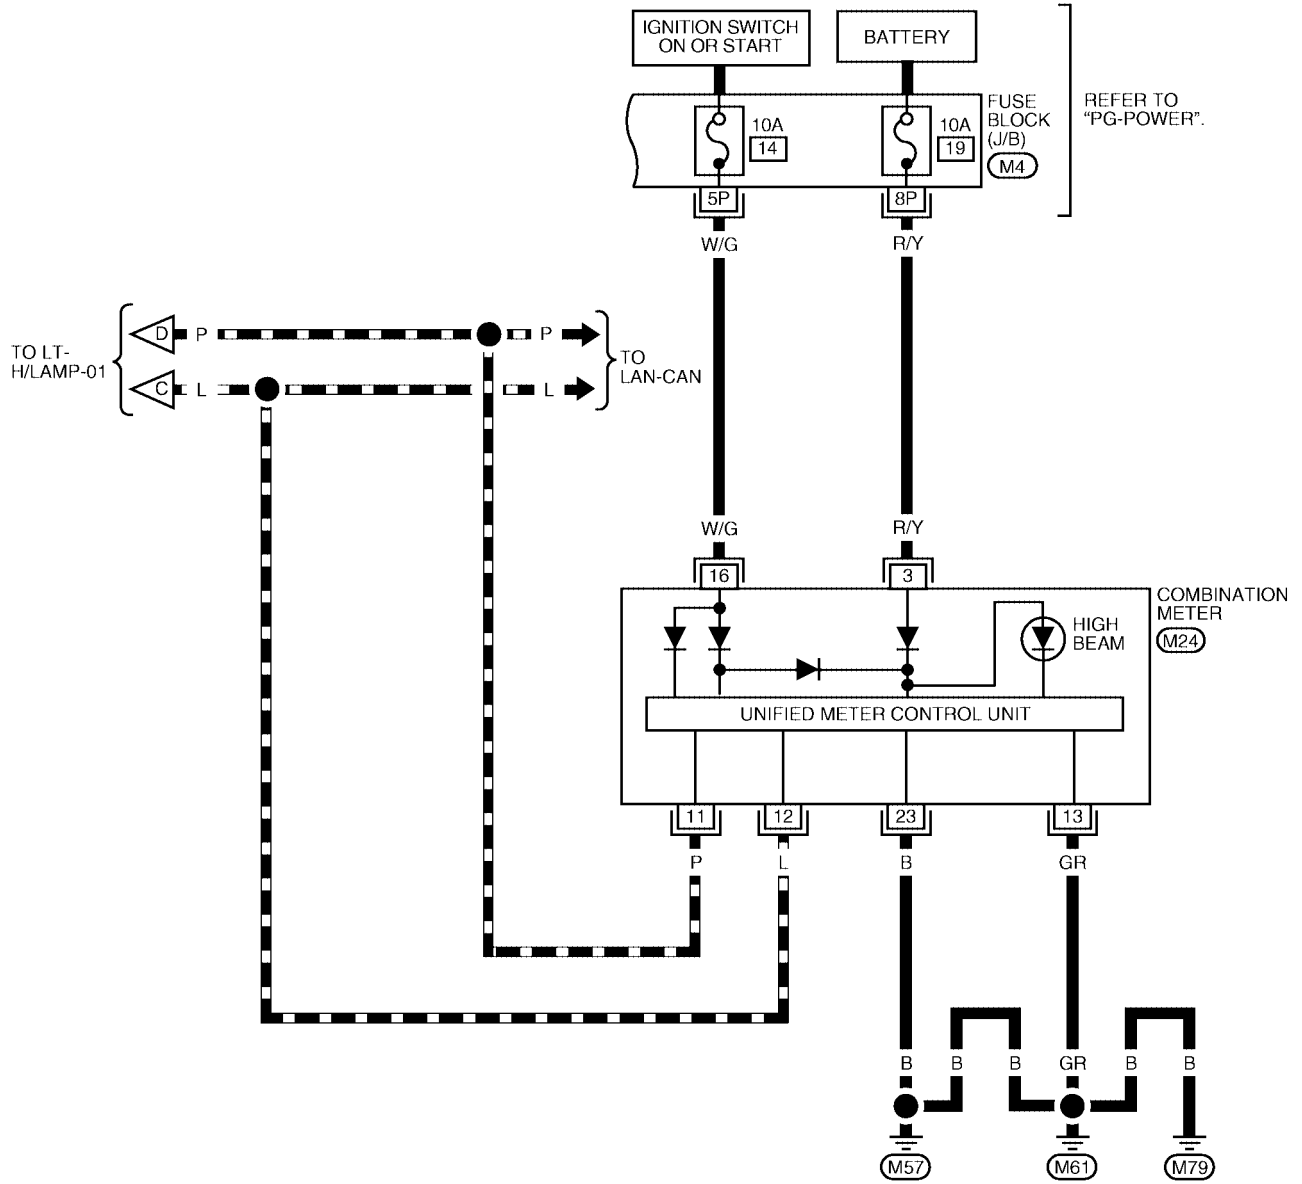

1P	2P	3P	4P	5P	6P	7P	(M4)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	(M24)		
8P	9P	10P	11P	12P	13P	14P	15P	16P	W	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	W

WKWA4222E

HEADLAMP (FOR USA)

Terminals and Reference Values for BCM

EKS00FU4

Refer to [BCS-12, "Terminals and Reference Values for BCM"](#) .

Terminals and Reference Values for IPDM E/R

EKS00FU5

Refer to [PG-28, "Terminals and Reference Values for IPDM E/R"](#)

How to Proceed With Trouble Diagnosis

EKS00FU6

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-5, "System Description"](#) .
3. Perform the Preliminary Check. Refer to [LT-12, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Does the headlamp operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

Preliminary Check

EKS00FU7

Refer to [BCS-16, "BCM Power Supply and Ground Circuit Check"](#) and [PG-30, "IPDM E/R Power/Ground Circuit Inspection"](#) .

CONSULT-II Function (BCM)

EKS00FU8

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

CONSULT-II OPERATION

CAUTION:


If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.

1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

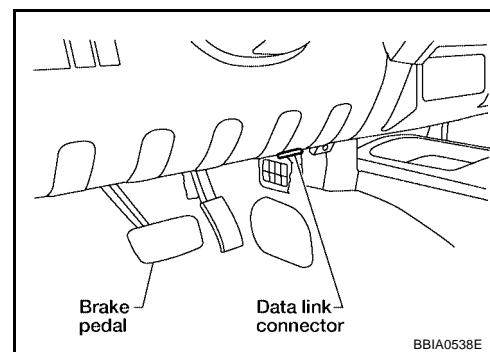


HEADLAMP (FOR USA)


2. Touch "START (NISSAN BASED VHCL)".

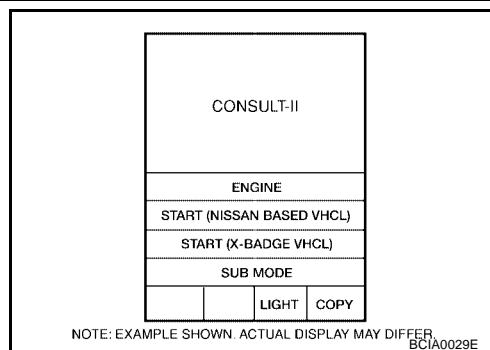

3. Touch "BCM" on "SELECT SYSTEM" screen.
If "BCM" is not indicated, go to [GI-40, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

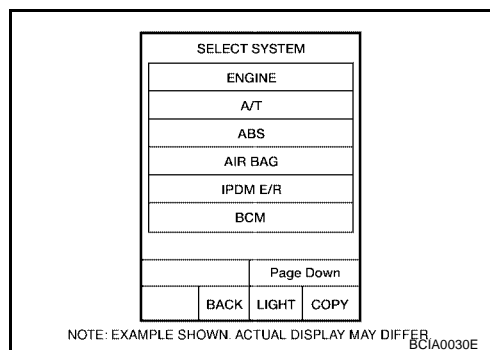

4. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.

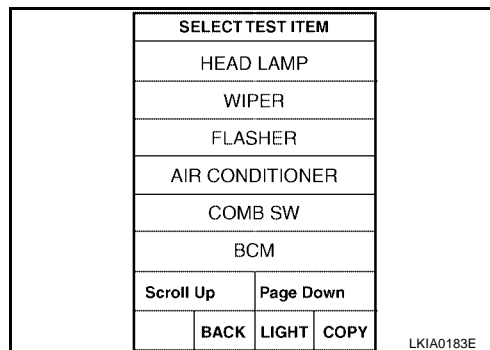

WORK SUPPORT

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "WORK SUPPORT" on "SELECT DIAG MODE" screen.
3. Touch item on "SELECT WORK ITEM" screen.
4. Touch "START".
5. Touch "CHANGE SETT".
6. The setting will be changed and "CUSTOMIZING COMPLETED" will be displayed.
7. Touch "END".

Display Item List

Item	Description	CONSULT-II	Factory setting
BATTERY SAVER SET	Exterior lamp battery saver control mode can be changed in this mode. Selects exterior lamp battery saver control mode between ON/OFF.	ON	×
		OFF	—

DATA MONITOR

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on the "SELECT MONITOR ITEM" screen.

A
B
C
D
E
F
G
H
I
J
LT
L
M

HEADLAMP (FOR USA)

ALL SIGNALS	Monitors all the signals.
SELECTION FROM MENU	Selects and monitors individual signal.

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch individual items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

Display Item List

Monitor item	Contents
IGN ON SW "ON/OFF"	Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
ACC ON SW "ON/OFF"	Displays "ACC (ON)/OFF, Ignition OFF (OFF)" status judged from ignition switch signal.
HI BEAM SW "ON/OFF"	Displays status (high beam switch: ON/Others: OFF) of high beam switch judged from lighting switch signal.
HEAD LAMP SW 1 "ON/OFF"	Displays status (headlamp switch 1: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
HEAD LAMP SW 2 "ON/OFF"	Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
LIGHT SW 1ST "ON/OFF"	Displays status (lighting switch 1st position: ON/Others: OFF) of lighting switch judged from lighting switch signal.
AUTO LIGHT SW "ON/OFF"	Displays status of the lighting switch as judged from the lighting switch signal. (AUTO position: ON/Other than AUTO position: OFF)
PASSING SW "ON/OFF"	Displays status (flash-to-pass switch: ON/Others: OFF) of flash-to-pass switch judged from lighting switch signal.
FR FOG SW "ON/OFF"	Displays status (front fog lamp switch: ON/Others: OFF) of front fog lamp switch judged from lighting switch signal.
DOOR SW-DR "ON/OFF"	Displays status of the front door LH as judged from the front door switch LH signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-AS "ON/OFF"	Displays status of the front door RH as judged from the front door switch RH signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-RR "ON/OFF"	Displays status of the rear door as judged from the rear door switch (RH) signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-RL "ON/OFF"	Displays status of the rear door as judged from the rear door switch (LH) signal. (Door is open: ON/Door is closed: OFF)
BACK DOOR SW "ON/OFF"	Displays status of the back door as judged from the back door switch signal. (Door is open: ON/Door is closed: OFF)
TURN SIGNAL R "ON/OFF"	Displays status (Turn right: ON/Others: OFF) as judged from lighting switch signal.
TURN SIGNAL L "ON/OFF"	Displays status (Turn left: ON/Others: OFF) as judged from lighting switch signal.
CARGO LAMP SW "ON/OFF"	Displays status of cargo lamp switch.
OPTICAL SENSOR [0 - 5V]	Displays "ambient light (close to 5V when dark/close to 0V when light)" judged from optical sensor signal.

ACTIVE TEST

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" deactivates the operation.

HEADLAMP (FOR USA)

Display Item List

Test item	Description
TAIL LAMP	Allows tail lamp relay to operate by switching ON-OFF.
HEAD LAMP	Allows headlamp relay (HI, LO) to operate by switching ON-OFF.
FR FOG LAMP	Allows fog lamp relay to operate by switching ON-OFF.
CORNERING LAMP	Not used.
CARGO LAMP	Allows cargo lamp to operate by switching ON-OFF.

SELF-DIAGNOSTIC RESULTS

Operation Procedure

1. Touch "BCM" on "SELECT TEST ITEM" screen.
2. Touch "SELF-DIAG RESULTS" on "SELECT DIAG MODE" screen.
3. Self-diagnostic results are displayed.

Display Item List

Monitored item	CONSULT-II display	Description
CAN communication	CAN communication [U1000]	Malfunction is detected in CAN communication.
CAN communication system	CAN communication system 1 to 6 [U1000]	Malfunction is detected in CAN system.

CONSULT-II Function (IPDM E/R)

EKS00FU9

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


IPDM E/R diagnostic mode	Description
SELF-DIAG RESULTS	Displays IPDM E/R self-diagnosis results.
DATA MONITOR	Displays IPDM E/R input/output data in real time.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.

CONSULT-II OPERATION

CAUTION:


If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.

1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn the ignition switch ON.

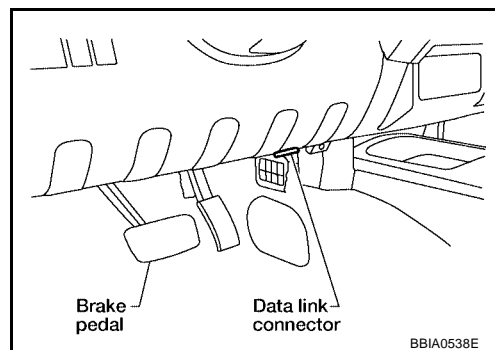


HEADLAMP (FOR USA)


2. Touch "START (NISSAN BASED VHCL)".

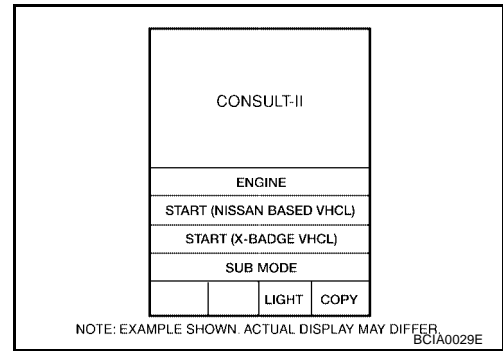

3. Touch "IPDM E/R" on "SELECT SYSTEM" screen.
If "IPDM E/R" is not displayed, refer to [GI-40, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

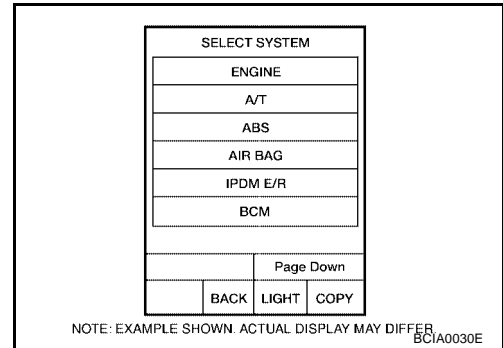

4. Select the desired part to be diagnosed on the "SELECT DIAG MODE" screen.

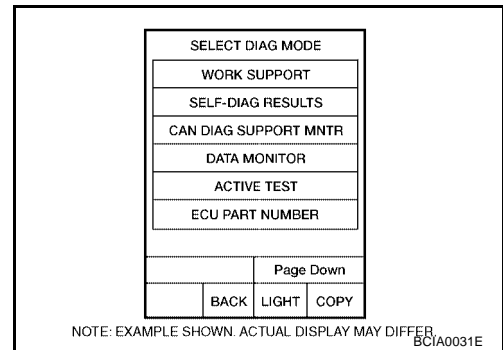

DATA MONITOR

Operation Procedure

1. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Touch "ALL SIGNALS", "MAIN SIGNALS" or "SELECTION FROM MENU" on the "SELECT MONITOR ITEM" screen.

ALL SIGNALS	All items will be monitored.
MAIN SIGNALS	Monitor the predetermined item.
SELECTION FROM MENU	Select any item for monitoring.

3. Touch "START".
4. Touch the required monitoring item on "SELECTION FROM MENU". In "ALL SIGNALS", all items are monitored. In "MAIN SIGNALS", predetermined items are monitored.
5. Touch "RECORD" while monitoring to record the status of the item being monitored. To stop recording, touch "STOP".

HEADLAMP (FOR USA)

All Items, Main Items, Select Item Menu

Item name	CONSULT-II screen display	Display or unit	Monitor item selection			Description
			ALL SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
Parking, license plate and tail lamps request	TAIL&CLR REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp low beam request	HL LO REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp high beam request	HL HI REQ	ON/OFF	×	×	×	Signal status input from BCM
Daytime lights request	DTRL REQ	ON/OFF	×	-	×	Signal status input from BCM
Front fog lamps request	FR FOG REQ	ON/OFF	×	×	×	Signal status input from BCM

NOTE:

Perform monitoring of IPDM E/R data with the ignition switch ON. When the ignition switch is at ACC, the display may not be correct.

ACTIVE TEST

Operation Procedure

1. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Touch "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
3. Touch item to be tested, and check operation.
4. Touch "START".
5. Touch "STOP" while testing to stop the operation.

Test item	CONSULT-II screen display	Description
Tail lamp relay output	TAIL LAMP	Allows tail lamp relay to operate by switching operation ON-OFF at your option.
Headlamp relay (HI, LO) output	LAMPS	Allows headlamp relay (HI, LO) to operate by switching operation (OFF, HI, LO) at your option (Headlamp high beam repeats ON-OFF every 1 second).
Front fog lamp relay (FOG) output		Allows fog lamp relay (FOG) to operate by switching operation ON-OFF at your option.

Headlamp HI Does Not Illuminate (Both Sides)

EKS00FUA

1. CHECK COMBINATION SWITCH INPUT SIGNAL

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "HI BEAM SW" turns ON-OFF linked with operation of lighting switch.

**When lighting switch is in : HI BEAM SW ON
HIGH position**

OK or NG

OK >> GO TO 2.

NG >> Check lighting switch. Refer to [LT-82, "Combination Switch Inspection"](#) .

DATA MONITOR	
MONITOR	MONITOR
HI BEAM SW	ON

SKIA4193E

HEADLAMP (FOR USA)

2. HEADLAMP ACTIVE TEST

1. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Select "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
3. Touch "HI" on "ACTIVE TEST" screen.
4. Make sure headlamp high beam operates.

Headlamp high beam should operate.

OK or NG

- OK >> GO TO 3.
NG >> GO TO 4.

ACTIVE TEST			
EXTERNAL LAMPS		OFF	
		TAIL	
LO		HI	
FOG			
MODE	BACK	LIGHT	COPY

WKIA1438E

3. CHECK IPDM E/R

1. Select "IPDM E/R" on CONSULT-II, and select "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Make sure "HL LO REQ" and "HL HI REQ" turns ON when lighting switch is in HIGH position.

**When lighting switch is in HIGH position : HL LO REQ ON
: HL HI REQ ON**

OK or NG


- OK >> Replace IPDM E/R. Refer to [PG-32, "Removal and Installation of IPDM E/R"](#) .
NG >> Replace BCM. Refer to [BCS-27, "Removal and Installation"](#) .

DATA MONITOR			
MONITOR			
HL LO REQ	ON		
HL HI REQ	ON		
		Page Down	
		RECORD	
MODE	BACK	LIGHT	COPY

SKIA5775E

4. CHECK HEADLAMP INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect front headlamp RH and LH connectors.
3. Turn ignition switch ON.
4. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
5. Select "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
6. Touch "HI" on "ACTIVE TEST" screen.
7. When headlamp high beam is operating, check voltage between front headlamp RH and LH harness connector and ground.

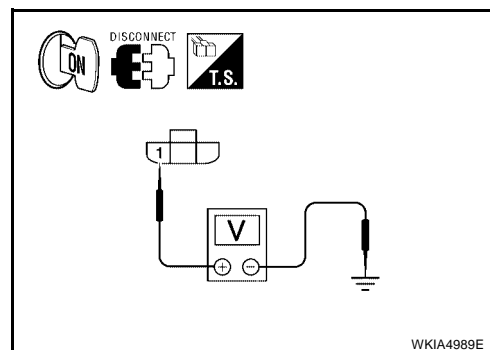

Front headlamp		Terminal	(-)	Voltage
(+) Connector				
RH	E107	1	Ground	Battery voltage
LH	E11			

OK or NG

- OK >> GO TO 6.
NG >> GO TO 5.

HEADLAMP (FOR USA)


5. CHECK HEADLAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector E123 terminal 56 and front headlamp RH harness connector E107 terminal 1.

56 - 1 : Continuity should exist.

4. Check continuity between IPDM E/R harness connector E123 terminal 55 and front headlamp LH harness connector E11 terminal 1.

55 - 1 : Continuity should exist.

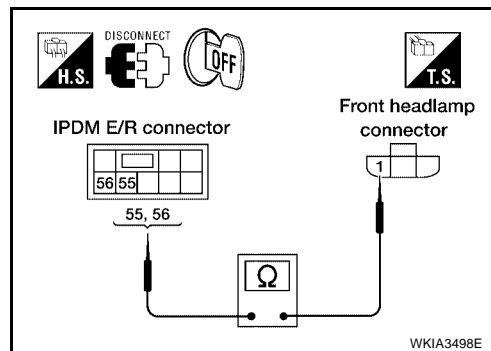

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-32, "Removal and Installation of IPDM E/R"](#).
- NG >> Repair harness or connector.

6. CHECK HEADLAMP GROUND

1. Turn ignition switch OFF.
2. Check continuity between front headlamp RH harness connector E107 terminal 2 and ground.


2 - Ground : Continuity should exist.

3. Check continuity between front headlamp LH harness connector E11 terminal 2 and ground.

2 - Ground : Continuity should exist.

OK or NG

- OK >> Check front headlamp connector for damage or poor connection. Repair as necessary.
- NG >> Repair harness or connector.

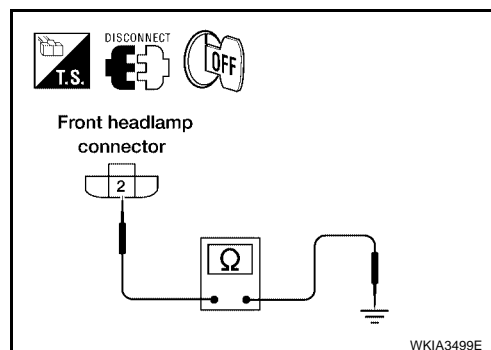

Headlamp HI Does Not Illuminate (One Side)

EKS00FUB

1. BULB INSPECTION

Inspect inoperative headlamp bulb.

OK or NG

- OK >> GO TO 2.
- NG >> Replace headlamp bulb. Refer to [LT-27, "HEADLAMP BULB"](#).

HEADLAMP (FOR USA)


2. CHECK POWER TO HEADLAMP

1. Disconnect inoperative headlamp connector.
2. Turn the high beam headlamps ON.
3. Check voltage between inoperative headlamp terminal and ground.

Front headlamp		Terminal	(-)	Voltage (Approx.)
(+)				
Connector		1	Ground	Battery voltage
RH	E107			
LH	E11			

OK or NG

- OK >> GO TO 3.
 NG >> GO TO 4.

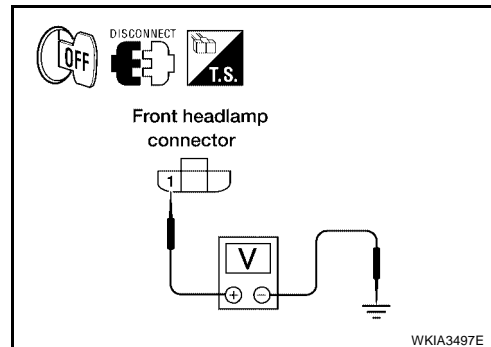


3. CHECK HEADLAMP GROUND

1. Turn the high beam headlamps OFF.
2. Check continuity between inoperative headlamp connector and ground.

Front headlamp		Terminal	Ground	Continuity
Connector				
RH	E107	2	Ground	Yes
LH	E11			

OK or NG

- OK >> Check front headlamp connector for damage or poor connection. Repair as necessary.
 NG >> Repair open circuit in harness between inoperative headlamp and ground.

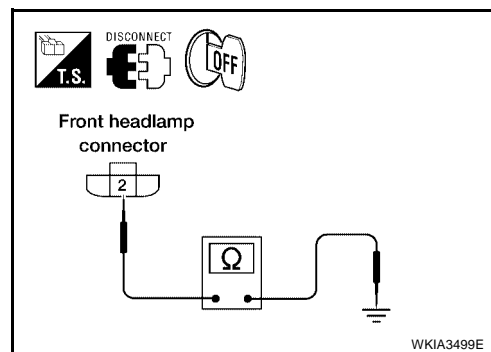


4. INSPECTION BETWEEN IPDM E/R AND HEADLAMPS

1. Disconnect IPDM E/R connector and inoperative headlamp connector.
2. Check continuity between harness connector terminals of IPDM E/R and harness connector terminals of inoperative headlamp.

IPDM E/R		Front headlamp		Continuity
Connector	Terminal	Connector	Terminal	
E123	56	RH	E107	Yes
	55	LH	E11	

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-32, "Removal and Installation of IPDM E/R"](#) .
 NG >> Check for short and open circuits in harness between IPDM E/R and front headlamps. Repair as necessary.

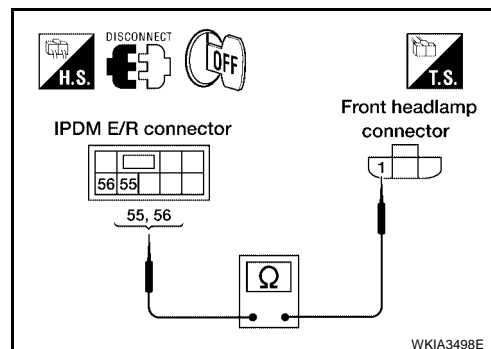

High Beam Indicator Lamp Does Not Illuminate

EKS00FUC

1. BULB INSPECTION

Inspect CAN communication system. Refer to [LAN-25, "CAN COMMUNICATION"](#) .

OK or NG

- OK >> Replace combination meter. Refer to [IP-14, "COMBINATION METER"](#) .
 NG >> Repair as necessary.

HEADLAMP (FOR USA)

EKS00FUD

Headlamp LO Does Not Illuminate (Both Sides)

1. CHECK COMBINATION SWITCH INPUT SIGNAL

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "HEAD LAMP SW 1" and "HEAD LAMP SW 2" turns ON-OFF linked with operation of lighting switch.

**When lighting switch is in 2ND position : HEAD LAMP SW 1 ON
: HEAD LAMP SW 2 ON**

OK or NG

OK >> GO TO 2.

NG >> Check lighting switch. Refer to [LT-82, "Combination Switch Inspection"](#).

DATA MONITOR			
MONITOR			
HEAD LAMP SW 1		ON	
HEAD LAMP SW 2		ON	
			Page Down
			RECORD
MODE	BACK	LIGHT	COPY

WKIA4262E

2. HEADLAMP ACTIVE TEST

1. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Select "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
3. Touch "LO" on "ACTIVE TEST" screen.
4. Make sure headlamp low beam operates.

Headlamp low beam should operate.

OK or NG

OK >> GO TO 3.

NG >> GO TO 4.

ACTIVE TEST			
EXTERNAL LAMPS		OFF	
			TAIL
LO		HI	
FOG			
MODE	BACK	LIGHT	COPY

WKIA1438E

3. CHECK IPDM E/R

1. Select "IPDM E/R" on CONSULT-II, and select "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Make sure "HL LO REQ" turns ON when lighting switch is in 2ND position.

When lighting switch is in 2ND position : HL LO REQ ON

OK or NG

OK >> Replace IPDM E/R. Refer to [PG-32, "Removal and Installation of IPDM E/R"](#).

NG >> Replace BCM. Refer to [BCS-27, "Removal and Installation"](#).

DATA MONITOR			
MONITOR			
HL LO REQ		ON	
			Page Down
			RECORD
MODE	BACK	LIGHT	COPY

SKIA5780E

A
B
C
D
E
F
G
H
I
J
LT
L
M

HEADLAMP (FOR USA)

4. CHECK HEADLAMP INPUT SIGNAL


1. Turn ignition switch OFF.
2. Disconnect front headlamp RH and LH connectors.
3. Turn ignition switch ON.
4. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
5. Select "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
6. Touch "LO" on "ACTIVE TEST" screen.
7. When headlamp low beam is operating, check voltage between front headlamp RH and LH harness connector and ground.

Front headlamp (+)		Terminal	(-)	Voltage
Connector				
RH	E107	3	Ground	Battery voltage
LH	E11			

OK or NG

OK >> GO TO 6.

NG >> GO TO 5.

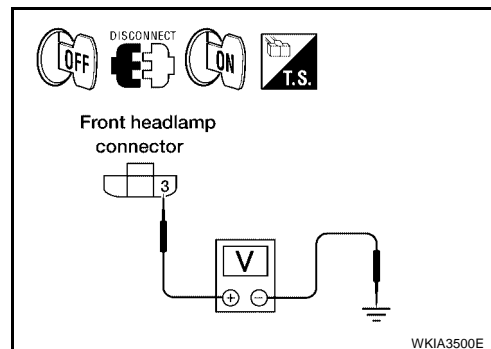

5. CHECK HEADLAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector E123 terminal 54 and front headlamp RH harness connector E107 terminal 3.

54 - 3 : Continuity should exist.

4. Check continuity between IPDM E/R harness connector E123 terminal 52 and front headlamp LH harness connector E11 terminal 3.

52 - 3 : Continuity should exist.

OK or NG

OK >> Replace IPDM E/R. Refer to [PG-32, "Removal and Installation of IPDM E/R"](#).

NG >> Repair harness or connector.

6. CHECK HEADLAMP GROUND

1. Turn ignition switch OFF.
2. Check continuity between front headlamp RH harness connector E107 terminal 2 and ground.

2 - Ground : Continuity should exist.



3. Check continuity between front headlamp LH harness connector E11 terminal 2 and ground.

2 - Ground : Continuity should exist.

OK or NG

OK >> Check front headlamp connector for damage or poor connection. Repair as necessary.

NG >> Repair harness or connector.

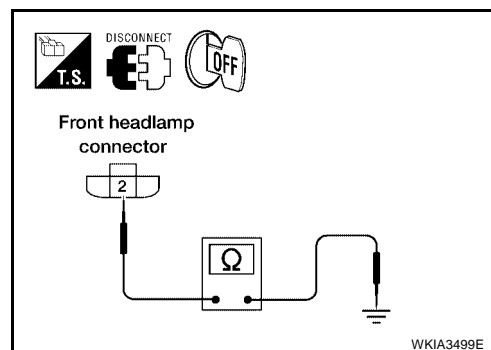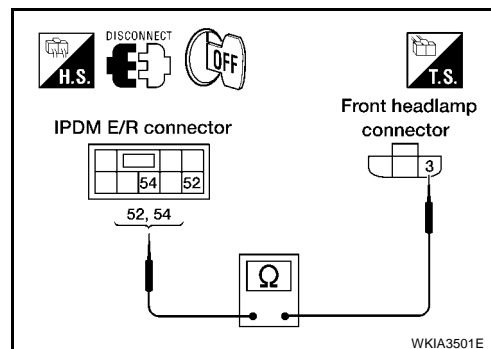

HEADLAMP (FOR USA)

EKS00FUE

Headlamp LO Does Not Illuminate (One Side)

1. BULB INSPECTION

Inspect inoperative headlamp bulb.

OK or NG

OK >> GO TO 2.

NG >> Replace headlamp bulb. Refer to [LT-27, "HEADLAMP BULB"](#).

2. CHECK POWER TO HEADLAMP


1. Disconnect inoperative headlamp connector.
2. Turn the low beam headlamps ON.
3. Check voltage between inoperative headlamp connector terminal and ground.

Front headlamp		Terminal	(-)	Voltage (Approx.)
(+)				
Connector				
RH	E107	3	Ground	Battery voltage
LH	E11			

OK or NG

OK >> GO TO 3.

NG >> GO TO 4.

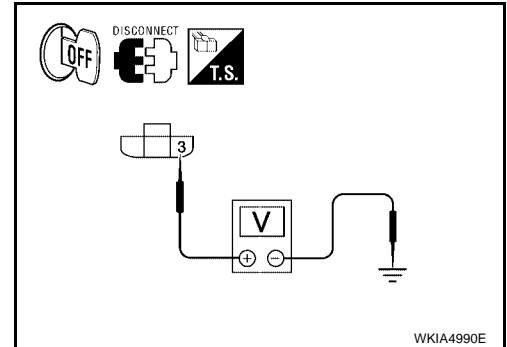

WKIA4990E

3. CHECK HEADLAMP GROUND


1. Turn the low beam headlamps OFF.
2. Check continuity between inoperative headlamp connector terminal and ground.

Front headlamp		Terminal	Ground	Continuity
Connector				
RH	E107	2	Ground	Yes
LH	E11			

OK or NG

OK >> Check front headlamp and IPDM E/R connector. Repair as necessary.

NG >> Repair open circuit in harness between inoperative headlamp and ground.

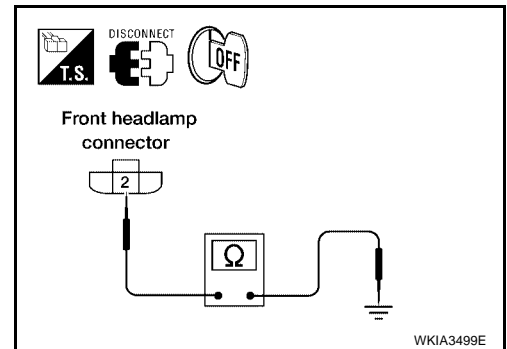

WKIA3499E

4. INSPECTION BETWEEN IPDM E/R AND HEADLAMPS


1. Disconnect IPDM E/R connector.
2. Check continuity between harness connector terminals of IPDM E/R harness connector terminals of inoperative headlamp.

IPDM E/R		Front headlamp		Continuity
Connector	Terminal	Connector	Terminal	
E123	54	RH	E107	Yes
	52	LH	E11	

OK or NG

OK >> Replace IPDM E/R. Refer to [PG-32, "Removal and Installation of IPDM E/R"](#).

NG >> Check for short and open circuits in harness between IPDM E/R and headlamps. Repair as necessary.

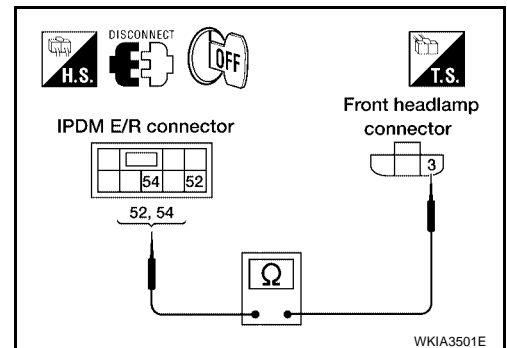


WKIA3501E

HEADLAMP (FOR USA)

Aiming Adjustment

EKS00FUG

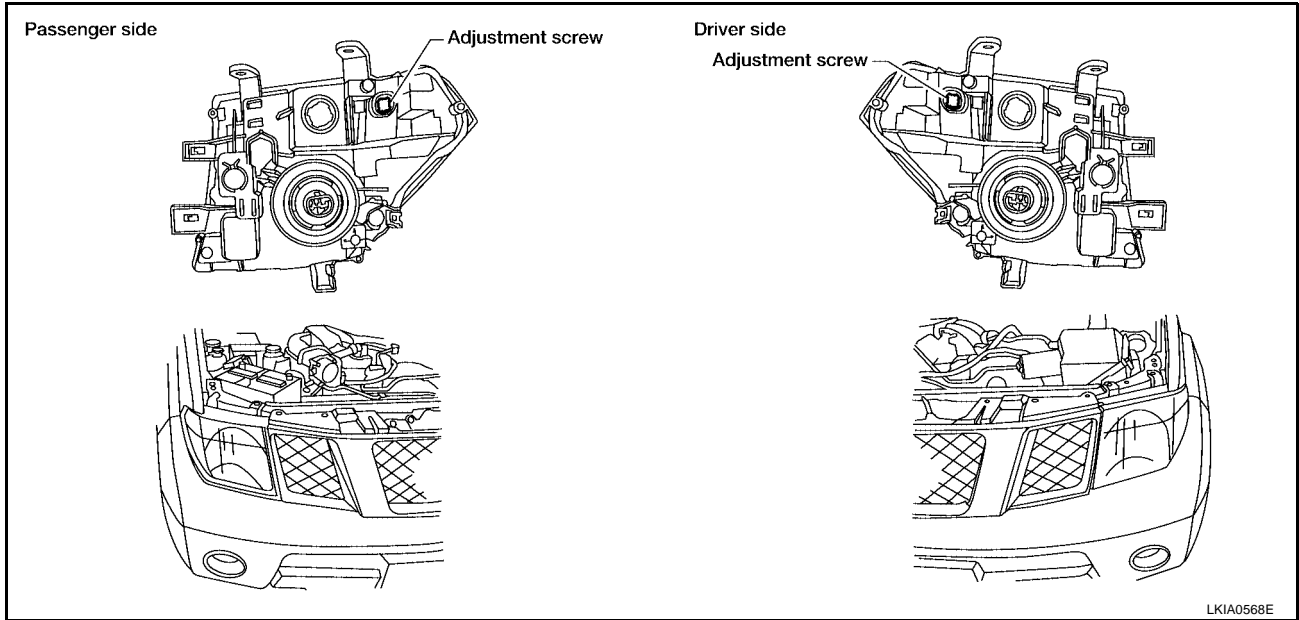

For details, refer to the regulations in your area.

NOTE:


If vehicle front body has been repaired and /or the headlamp assembly has been replaced, check headlamp aiming.

- Before performing aiming adjustment, check the following:
 - Confirm headlamp aiming switch is set to "0" (zero) position.
 - Ensure all tires are inflated to correct pressure.
 - Place vehicle and screen on level surface.
 - Ensure there is no load in vehicle other than the driver (or equivalent weight placed in driver's position). Coolant and engine oil filled to correct level, and fuel tank full.
 - Confirm spare tire, jack and tools are properly stowed.
 - Aim each headlamp individually and ensure other headlamp beam pattern is blocked from screen.
 - Use adjusting screw to perform aiming adjustment

A
B
C
D
E
F
G
H
I
J
LT
L
M

HEADLAMP (FOR USA)

LOW BEAM AND HIGH BEAM

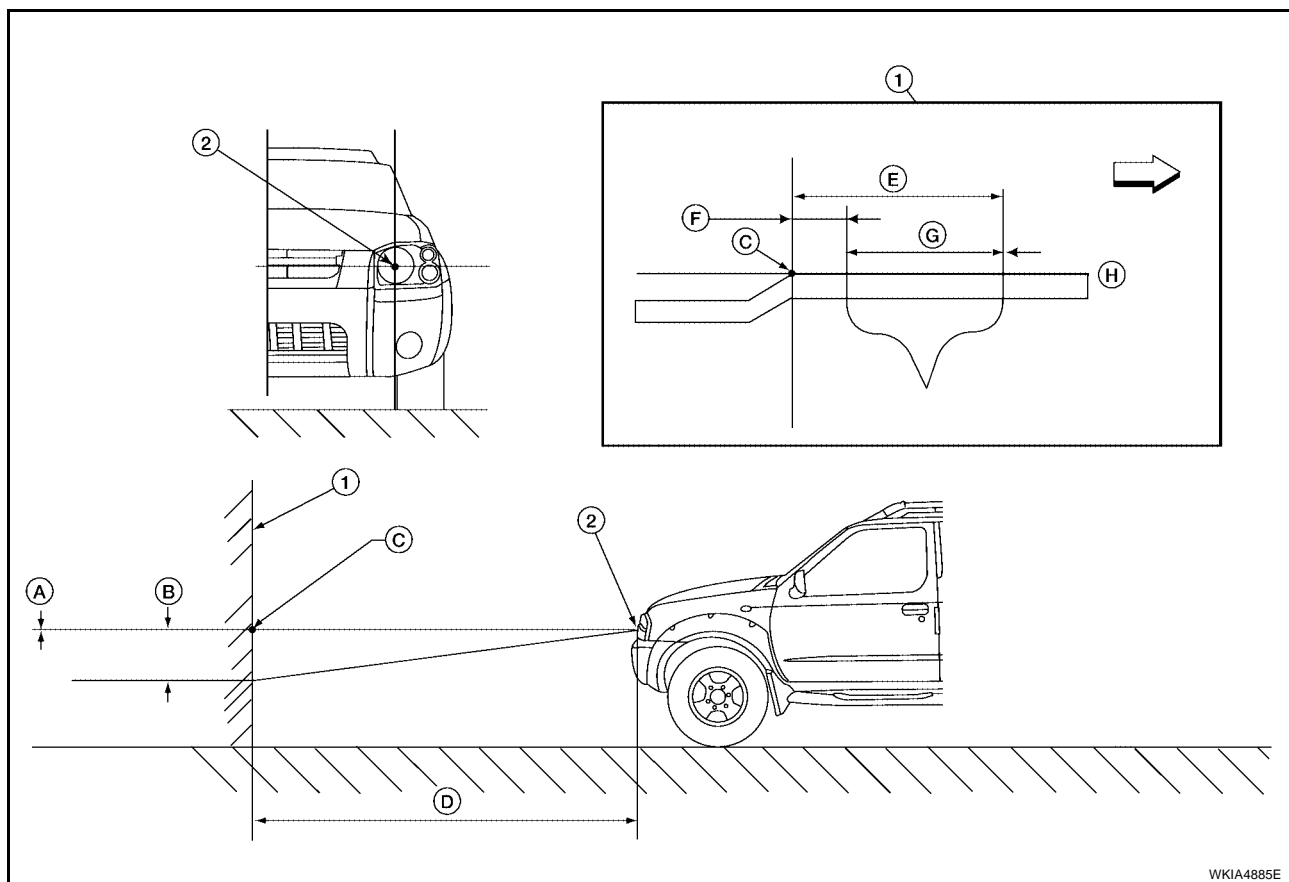

WKIA4885E

- | | | | | | |
|---|---|---|--|---|---|
| 1 | Adjustment screen | 2 | Headlamp bulb center (HV point) | A | Minimum acceptable vertical aim dimension (see aiming chart) |
| B | Maximum acceptable vertical aim dimension (see aiming chart) | C | H-V point | D | Distance of headlamp aiming screen from vehicle 7.62 m (25 ft.) |
| E | Maximum aim evaluation distance from vertical center on aiming screen 399mm (3° R). | F | Minimum aim evaluation distance from vertical center on aiming screen 133 mm (1°R) | G | Aim evaluation area |
| H | Horizontal aiming evaluation line. | ⇒ | Right | | |

Aiming Chart

- | | | |
|--|--------------------------|--------------------|
| A (Minimum acceptable vertical aim dimension) | -3.3 mm (0.13 in) | 0.025° up |
| B (Maximum acceptable vertical aim dimension) | 36.6 mm (1.44 in) | 0.275° down |

NOTE:

- By regulation, no means for horizontal aim adjustment is provided from the factory; only vertical aim is adjustable.
 - Basic illuminating area for evaluation and/or adjustment should be within range shown on aiming chart.
- Use adjustment screw to perform aiming adjustment.

- Cover the opposite lamp and ensure fog lamps, if equipped, are turned off.**

CAUTION:

Do not tighten adjustment screw beyond specified torque or damage may occur.

Adjustment torque **1.67 N.m (17 kg-cm, 14.8 in-lb)**

- Adjust beam pattern until cut-off line (top edge of illumination area) is positioned at the specified height off ground. Measure cut-off line within distance J on H-line. See aiming chart.

HEADLAMP (FOR USA)

EKS00FUH

Bulb Replacement

HEADLAMP BULB

Removal

NOTE:

Reach through engine room for bulb replacement access.

CAUTION:

Grasp only the plastic base when handling the bulb. Never touch the glass envelope.

1. Turn front headlamp switch OFF.
2. Disconnect the electrical connector.
3. Rotate the headlamp bulb retaining ring counterclockwise and remove.
4. Pull the headlamp bulb straight out from the headlamp assembly.

NOTE:

Remove the headlamp bulb from the headlamp assembly just before a replacement bulb is installed. Dust, moisture, foreign materials, etc. entering headlamp body may affect performance.

Installation

Installation is in the reverse order of removal.

FRONT TURN SIGNAL/PARKING LAMP

Removal

NOTE:

Reach through engine room for bulb replacement access.

1. Turn the bulb socket counterclockwise to unlock it.
2. Pull the bulb to remove it from the socket.

Installation

Installation is in the reverse order of removal.

CAUTION:

After installing the bulb, be sure to install the bulb socket securely for watertightness.

FRONT SIDE MARKER LAMP

Removal

NOTE:

Reach through engine room for bulb replacement access.

1. Turn the bulb socket counterclockwise to unlock it.
2. Pull the bulb to remove it from the socket.

Installation

Installation is in the reverse order of removal.

CAUTION:

After installing the bulb, be sure to install the bulb socket securely for watertightness.

Removal and Installation

FRONT COMBINATION LAMP

Removal

1. Remove front portion of front fender protector. Refer to [EI-20, "FENDER PROTECTOR"](#) .
2. Remove the front bumper. Refer to [EI-14, "Removal and Installation"](#) .

EKS00FUI

A

B

C

D

E

F

G

H

I

J


LT

L

M

HEADLAMP (FOR USA)

3. Remove the front combination lamp bolts.

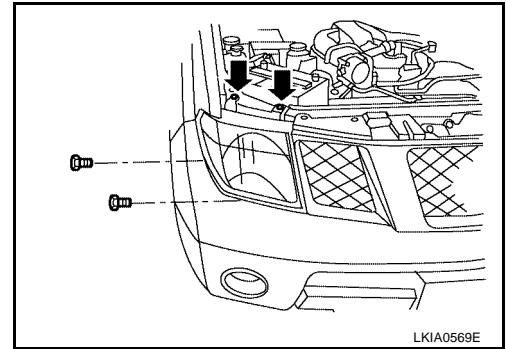

4. Disconnect the front combination lamp connector and remove front combination lamp.


Installation

Installation is in the reverse order of removal.

: 6.0 N·m (0.61 kg·m, 53 in·lb)

Disassembly and Assembly FRONT COMBINATION LAMP

EKS00FUJ

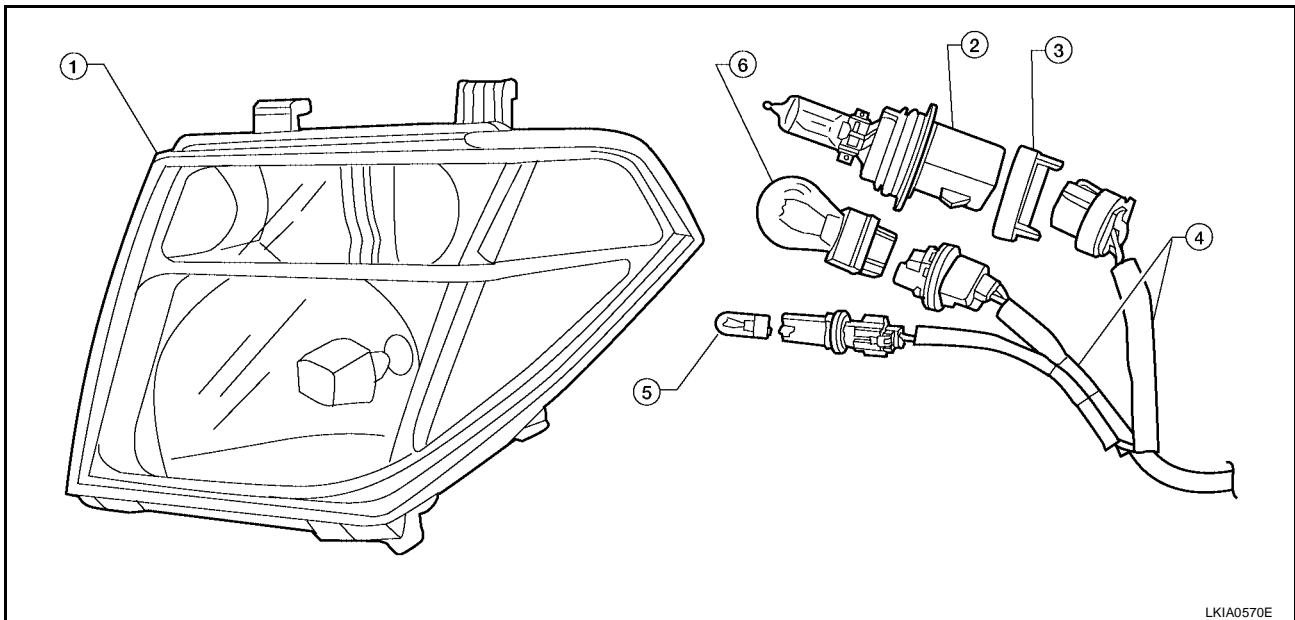

1. Headlamp assembly

2. Headlamp bulb

3. Headlamp bulb retaining ring

4. Wiring harness assembly

5. Front side marker lamp bulb

6. Front turn signal/parking lamp bulb


HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

PF2:26010

Component Parts and Harness Connector Location

EKS00FUK

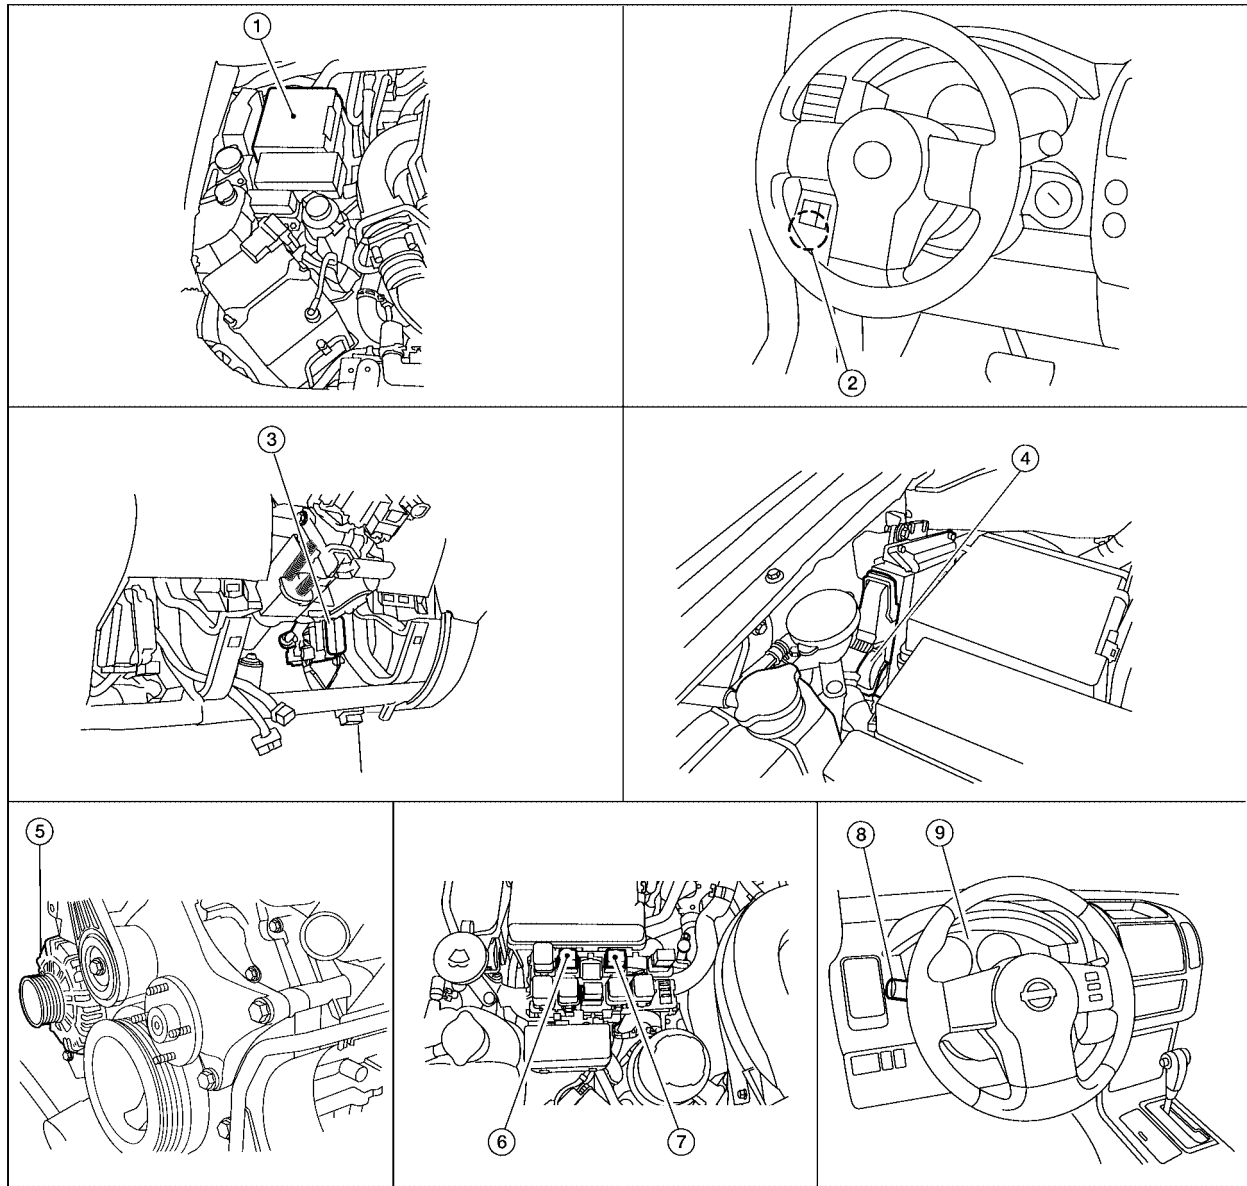

WKIA4958E

- | | | |
|--|--|--|
| 1. IPDM E/R
E118, E119, E120, E121, E122,
E123, E124 | 2. Parking brake switch
E53 | 3. BCM
M18, M19, M20
(view with instrument lower panel LH removed) |
| 4. ECM
E16
(view with ECM cover removed) | 5. Generator
E205 | 6. Daytime light relay 1 |
| 7. Daytime Light Relay 2 | 8. Combination switch (lighting switch)
M28 | 9. Combination meter
M24 |

System Description

EKS00FUL

Daytime light system turns on daytime light lamps while driving. Daytime light lamps are not turned on if engine is activated with parking brake on. Take off parking brake to turn on daytime light lamps. The lamps turn off when lighting switch is in the 2ND position or AUTO position (Headlamp is "ON") and when lighting switch is in the PASSING position. (Daytime light lamps are not turned off only by parking brake itself.)

A parking brake signal and engine run or stop signal are sent to BCM (body control module) by CAN communication line.

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

OUTLINE

Power is supplied at all times

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse [No. 19, located in the fuse block (J/B)]
- to combination meter terminal 3, and
- through 20A fuse (No. 53, located in the IPDM E/R)
- to CPU (central processing unit) of IPDM E/R (intelligent power distribution module engine room), and
- to headlamp high relay, located in the IPDM E/R, and
- to headlamp low relay, located in the IPDM E/R, and
- through 50A fusible link (letter **g**, located in the fuse and fusible link box)
- to BCM terminal 70, and
- through 10A fuse (No. 45, located in the IPDM E/R)
- to daytime light relay 1 terminals 2 and 5.

When the ignition switch is in ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse [No. 14, located in the fuse block (J/B)]
- to combination meter terminal 16, and
- through 10A fuse [No. 1, located in the fuse block (J/B)]
- to BCM terminal 38.

Ground is supplied

- to BCM terminal 67 and
- to combination meter terminals 13 and 23
- through grounds M57, M61 and M79.

Low Beam Operation

With the lighting switch in 2ND position, the BCM receives input requesting the headlamps to illuminate. This input is communicated to the IPDM E/R across the CAN communication lines. The CPU of the IPDM E/R controls the headlamp low relay coil. When energized, this relay directs power

- through 15A fuse (No. 41, located in the IPDM E/R)
- through IPDM E/R terminal 54
- to front headlamp RH terminal 3, and
- through 15A fuse (No. 40, located in the IPDM E/R)
- through IPDM E/R terminal 52
- to daytime light relay 2 terminals 2 and 5, and
- through daytime light relay 2 terminal 3
- to front headlamp LH terminal 3.

Ground is supplied

- to front headlamp RH terminal 2
- to daytime light relay 1 terminal 4
- to daytime light relay 2 terminal 1
- through grounds E9, E15 and E24.

When the CPU of the IPDM E/R energizes the headlamp low relay, it de-energizes daytime relay 1. When de-energized, this relay supplies ground

- to front headlamp LH terminal 2
- through daytime light relay 1 terminal 3.

With power and ground supplied, low beam headlamps illuminate.

High Beam Operation/Flash-to-Pass Operation

With the lighting switch in 2ND position and placed in HIGH or PASS position, the BCM receives input requesting the headlamp high beams to illuminate. This input is communicated to the IPDM E/R across the CAN com-

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

munication lines. The CPU of the combination meter controls the ON/OFF status of the HIGH BEAM indicator. The CPU of the IPDM E/R controls the headlamp high relay coil. When energized, this relay directs power

- through 10A fuse (No. 34, located in the IPDM E/R)
- through IPDM E/R terminal 56
- to front headlamp RH terminal 1, and
- through 10A fuse (No. 35, located in the IPDM E/R)
- through IPDM E/R terminal 55
- to front headlamp LH terminal 1.

Ground is supplied

- to front headlamp RH terminal 2, and
- to daytime light relay 1 terminal 4, and
- to daytime light relay 2 terminal 1
- through grounds E9, E15 and E24.

When the CPU of the IPDM E/R energizes the headlamp high relay, it de-energizes daytime relay 1. When de-energized, this relay supplies ground

- to front headlamp LH terminal 2
- through daytime light relay 1 terminal 3.

With power and ground supplied, the high beam headlamps illuminate.

DAYTIME LIGHT OPERATION

With the engine running, the lighting switch in the OFF or 1ST position and parking brake released, the IPDM E/R receives input requesting the daytime lights illuminate. This input is communicated across the CAN communication lines. The CPU of the IPDM E/R controls daytime light relay 1 coil. When energized, this relay directs power

- through daytime light relay 1 terminal 3
- through front headlamp LH terminal 2
- through front headlamp LH terminal 1
- through IPDM E/R terminal 55
- through 10A fuse (No. 35, located in the IPDM E/R)
- through 10A fuse (No. 34, located in the IPDM E/R)
- through IPDM E/R terminal 56
- to front headlamp RH terminal 1.

Ground is supplied

- to combination lamp RH terminal 2
- through grounds E9, E15 and E24.

With power and ground supplied, the daytime lights illuminate. The high beam headlamps are now wired in series and illuminate at a reduced intensity.

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#) .

AUTO LIGHT OPERATION

For auto light operation, refer to [LT-41, "System Description"](#) in AUTO LIGHT SYSTEM.

CAN Communication System Description


Refer to [LAN-25, "CAN COMMUNICATION"](#) .

EKS00FUM

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

Schematic

EKS00FUN

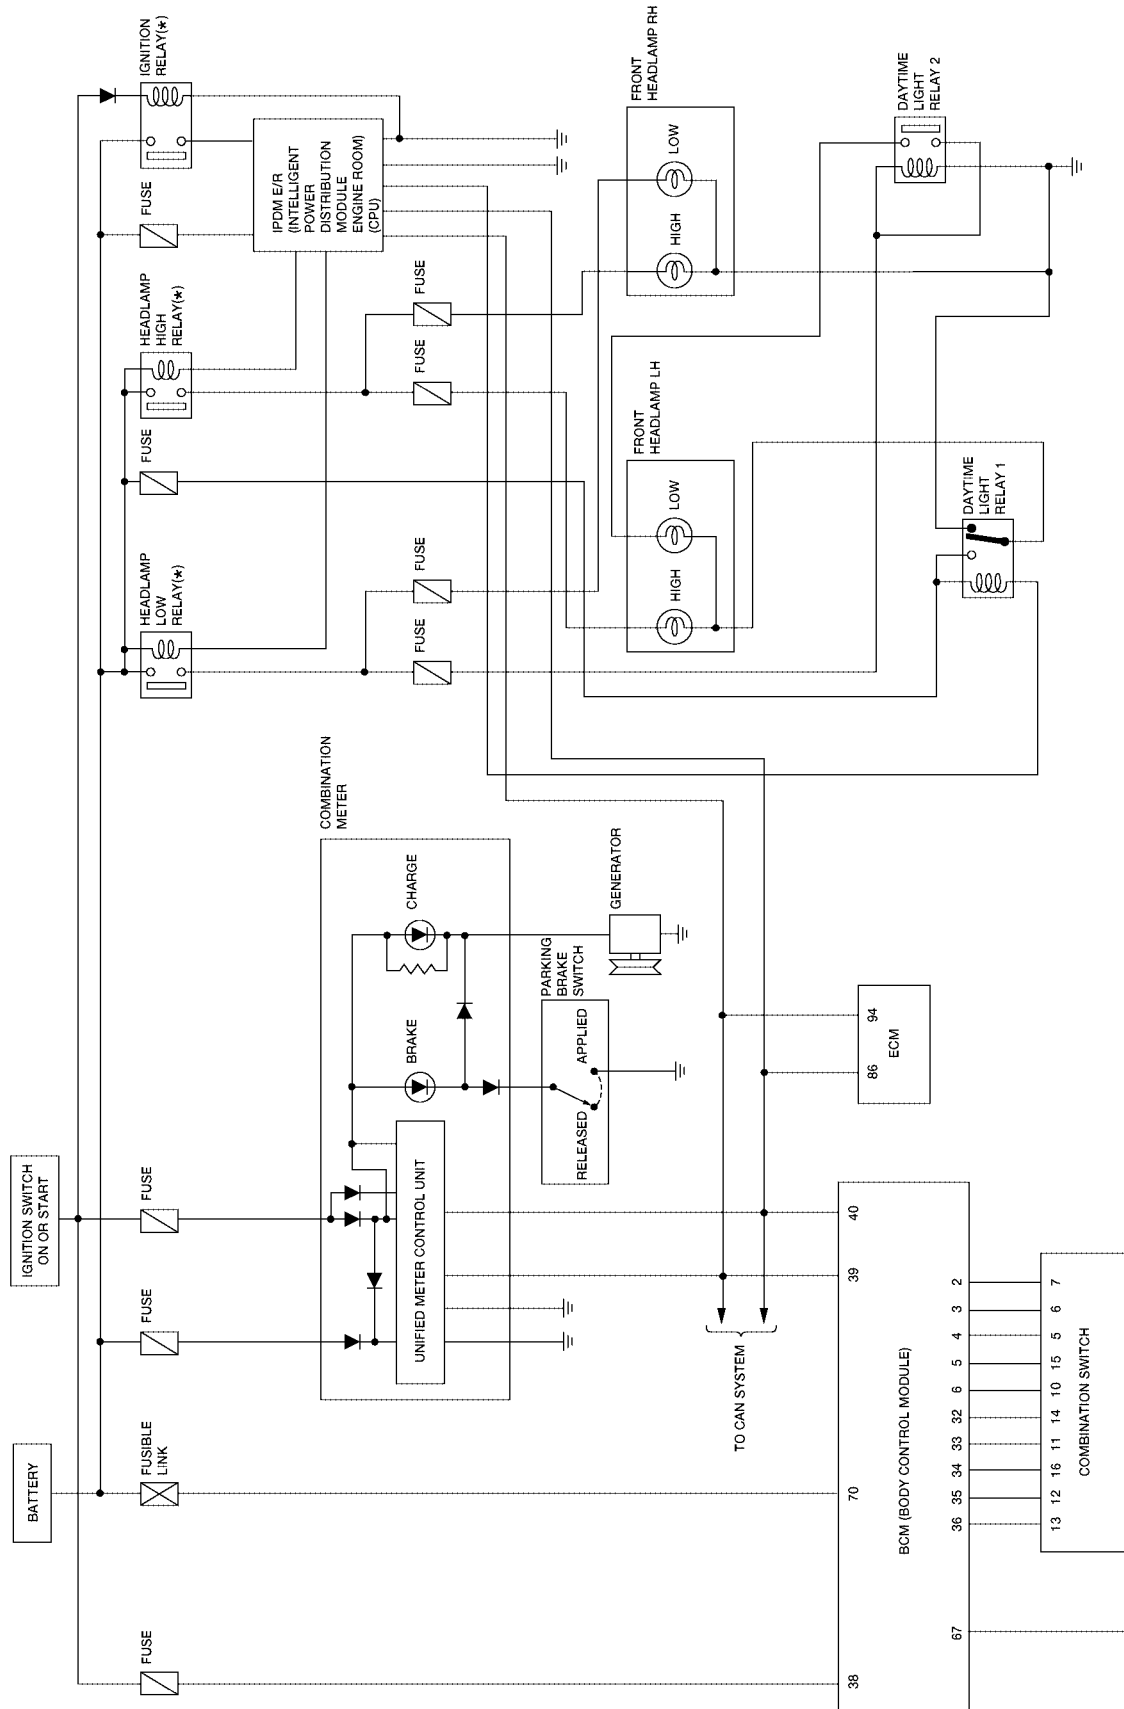

* : THIS RELAY IS BUILT INTO THE IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

WKWA4304E



HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

Wiring Diagram — DTRL —

EKS00FU0

LT-DTRL-01

▬ : DATA LINE

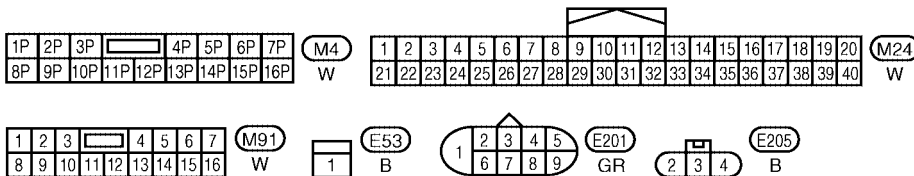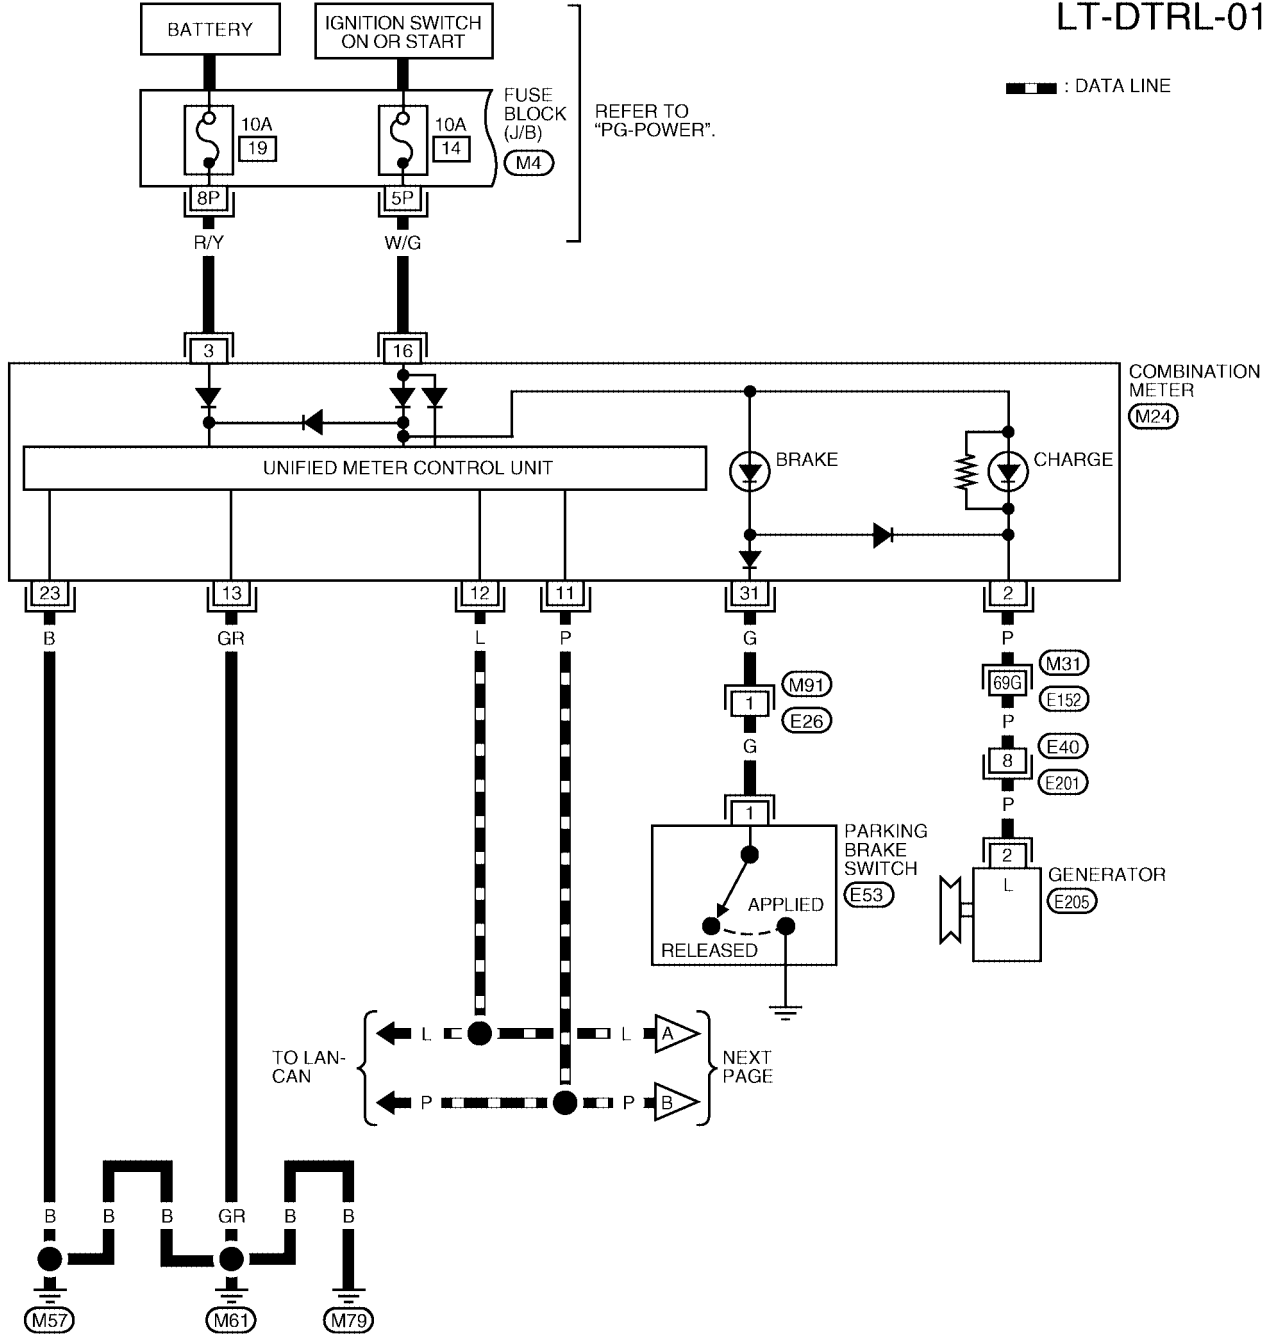


REFER TO THE FOLLOWING.
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA4223E

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

LT-DTRL-02

— : DATA LINE

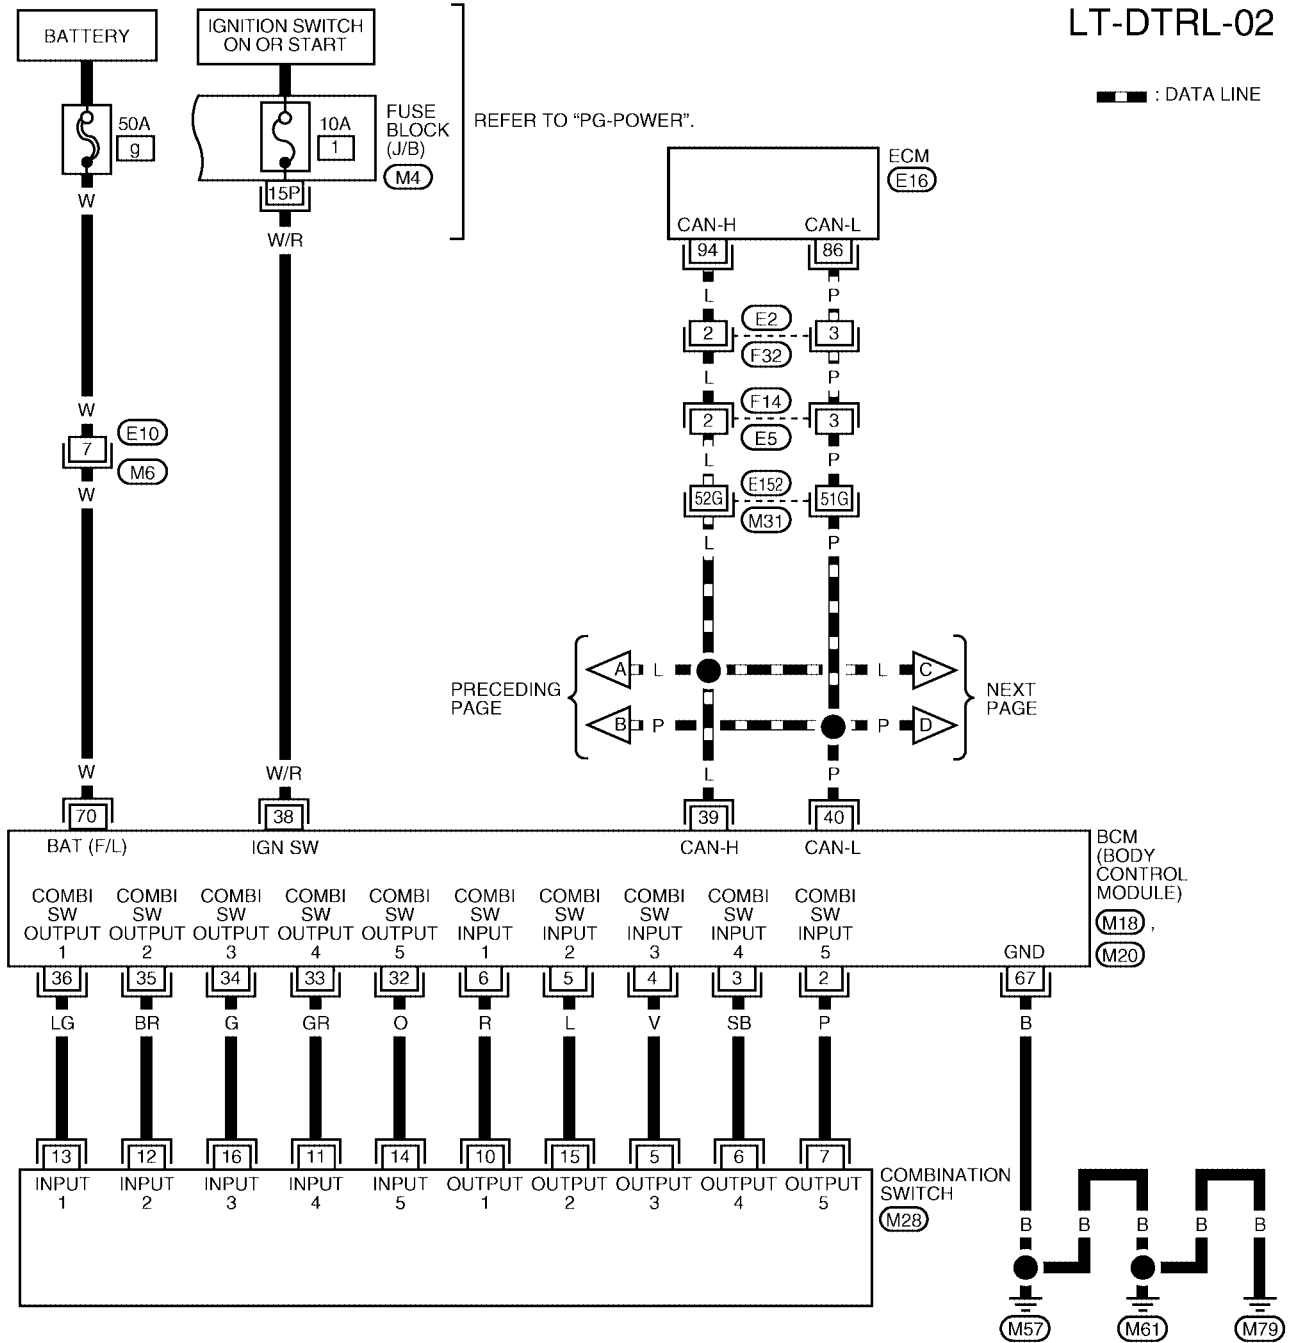


REFER TO "PG-POWER".

PRECEDING PAGE

NEXT PAGE

REFER TO THE FOLLOWING.
 (E16) - ELECTRICAL UNITS
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

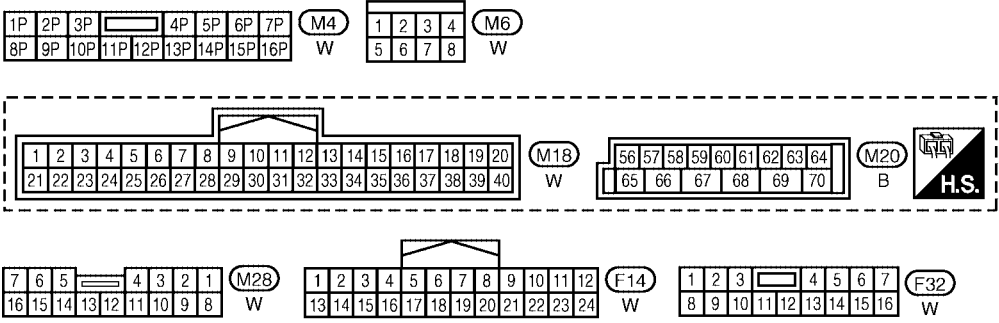


WKWA4224E

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

LT-DTRL-03


A
B
C
D
E
F
G
H
I
J
LT
L
M

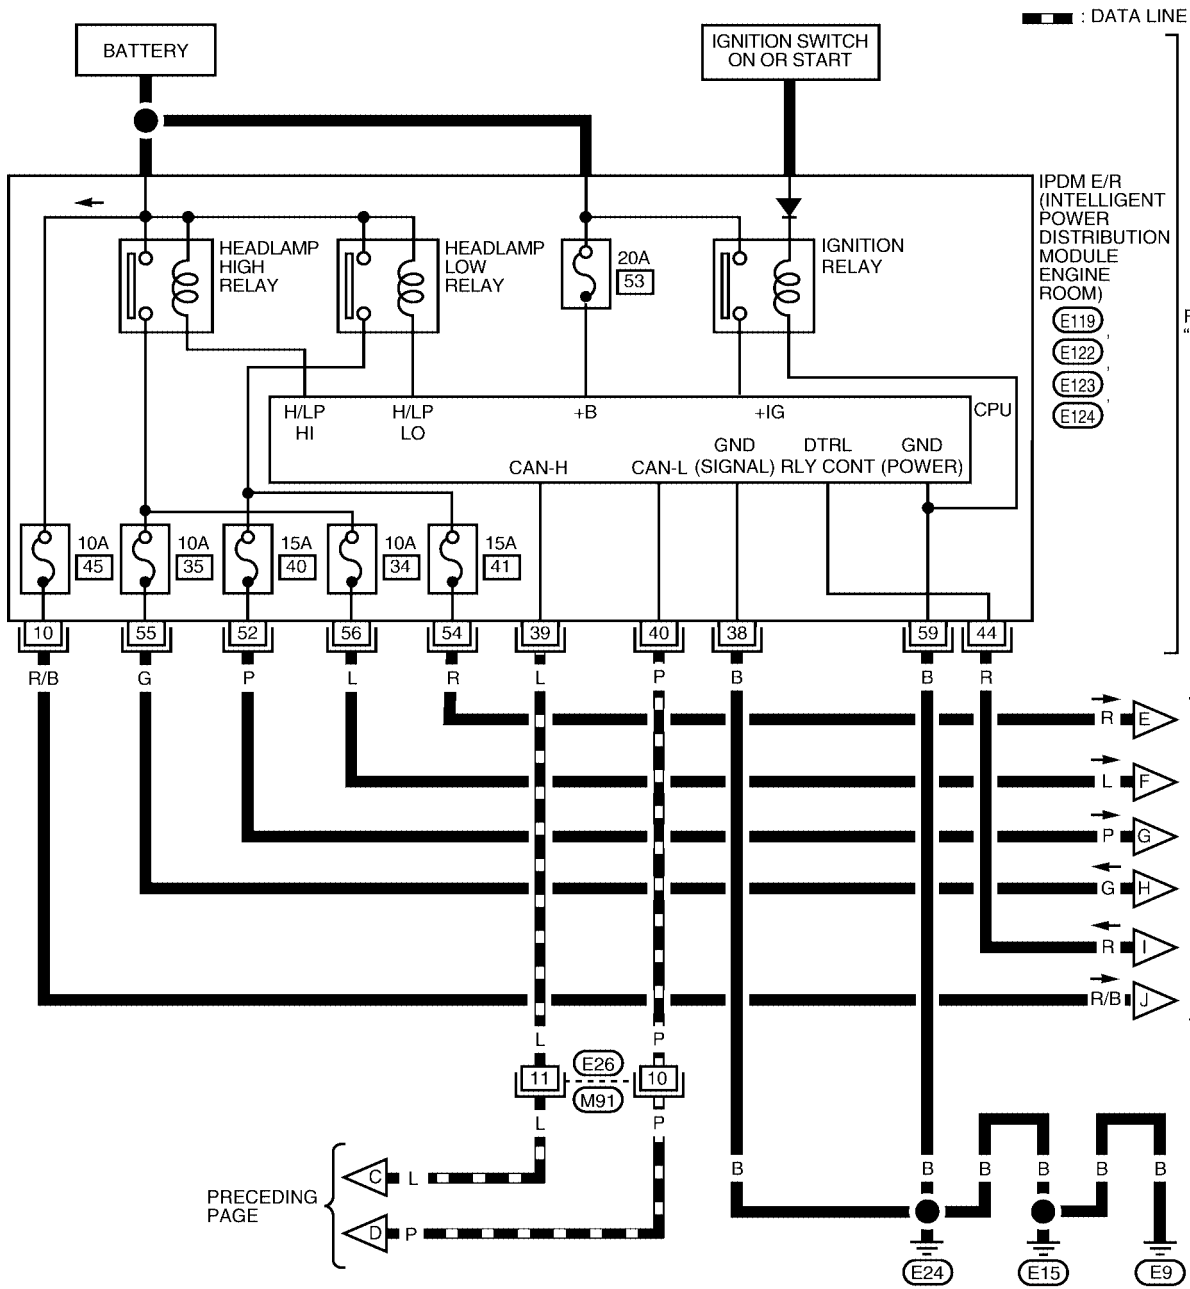

REFER TO "PG-POWER".

NEXT PAGE



PRECEDING PAGE



WKWA4225E

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

LT-DTRL-04

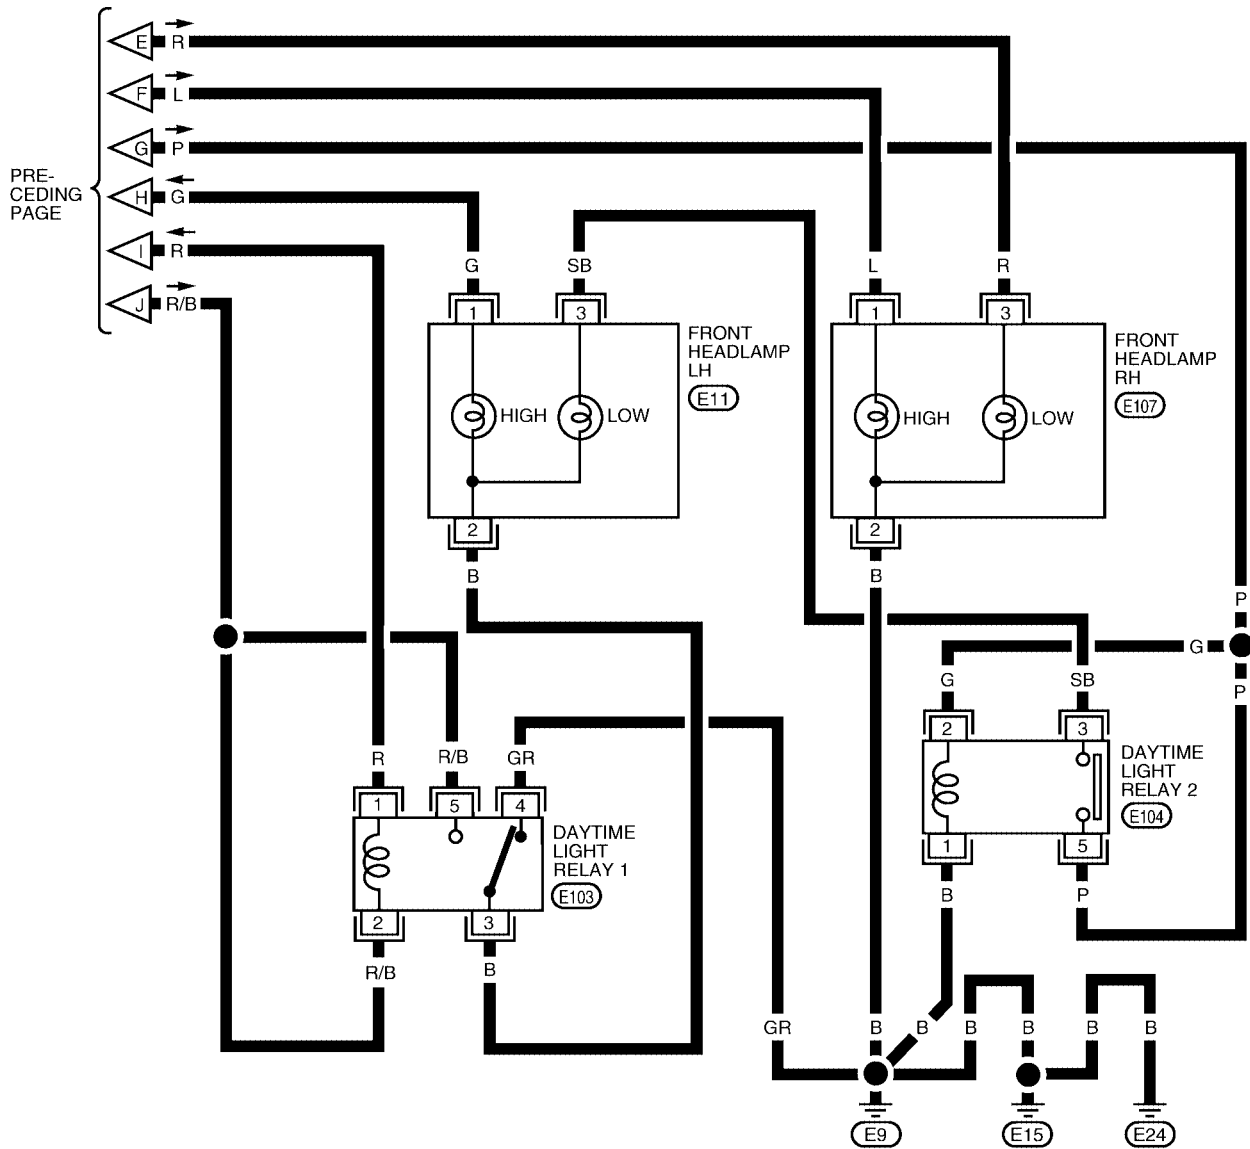

WKWA3081E

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

Terminals and Reference Values for BCM

EKS00FUP

Refer to [BCS-12, "Terminals and Reference Values for BCM"](#) .

Terminals and Reference Values for IPDM E/R

EKS00FUQ

Refer to [PG-28, "Terminals and Reference Values for IPDM E/R"](#) .

How to Proceed With Trouble Diagnosis

EKS00FUR

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-29, "System Description"](#) .
3. Perform the Preliminary Check. Refer to [LT-37, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Does the daytime light system operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

Preliminary Check

EKS00FUS

CHECK BCM CONFIGURATION

1. CHECK BCM CONFIGURATION

Confirm BCM configuration for "DTRL" is set to "WITH". Refer to [BCS-21, "READ CONFIGURATION PROCEDURE"](#) .

OK or NG

- OK >> Continue preliminary check. Refer to [LT-37, "INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT"](#) .
- NG >> Change BCM configuration for "DTRL" to "WITH". Refer to [BCS-23, "WRITE CONFIGURATION PROCEDURE"](#) .

INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT

Refer to [BCS-16, "BCM Power Supply and Ground Circuit Check"](#) and [PG-30, "IPDM E/R Power/Ground Circuit Inspection"](#) .

INSPECTION PARKING BRAKE SWITCH CIRCUIT

1. CHECK BRAKE INDICATOR

1. Turn ignition switch ON.
2. Apply parking brake.
3. Release parking brake.

Brake indicator in combination meter should illuminate when parking brake is applied and turn OFF when released.

OK or NG

- OK >> Inspection End.
- NG >> GO TO 2.


2. CHECK PARKING BRAKE SWITCH SIGNAL

1. Turn ignition switch OFF.
2. Disconnect parking brake switch connector.
3. Turn ignition switch ON.
4. Check voltage between parking brake switch harness connector E53 terminal 1 and ground.

1 - Ground : Battery voltage should exist.

OK or NG

- OK >> Replace parking brake switch.
- NG >> GO TO 3.

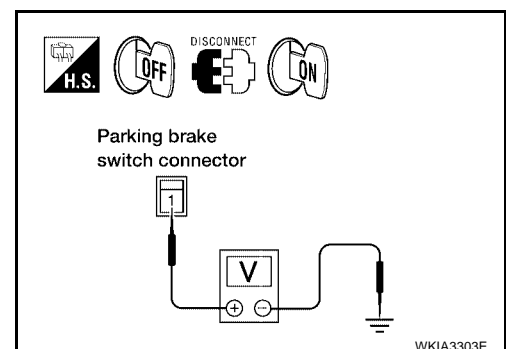

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

3. CHECK PARKING BRAKE SWITCH CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect combination meter connector.
3. Check continuity between combination meter harness connector M24 terminal 31 and parking brake switch harness connector E53 terminal 1.

1 - 31 : Continuity should exist.

OK or NG

OK >> Replace combination meter. Refer to [IP-14, "COMBINATION METER"](#).

NG >> Repair harness or connector.

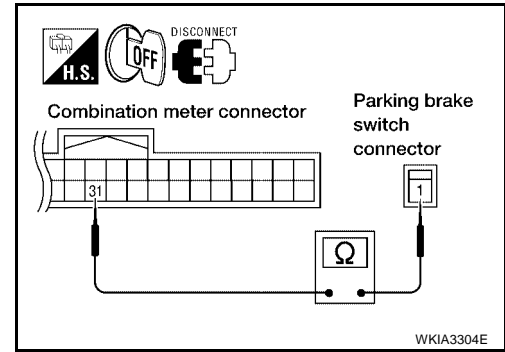

CONSULT-II Functions

Refer to [LT-12, "CONSULT-II Function \(BCM\)"](#) in HEADLAMP (FOR USA).

Refer to [LT-15, "CONSULT-II Function \(IPDM E/R\)"](#) in HEADLAMP (FOR USA).

EKS00FUT

Daytime Light Control Does Not Operate Properly (Normal Headlamps Operate Properly)

EKS00FUU

1. CHECK DAYTIME LIGHT RELAY 1 POWER SUPPLY CIRCUIT


1. Remove daytime light relay 1.
2. Check voltage between daytime light relay 1 harness connector E103 terminals 2, 5 and ground.

2, 5 - Ground : Battery voltage should exist.

OK or NG

OK >> GO TO 2.

NG >> Repair harness or connector.

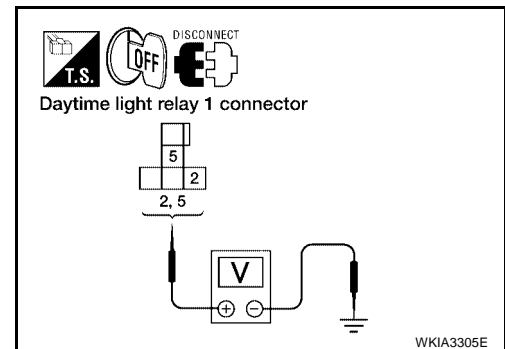

2. CHECK DAYTIME LIGHT RELAY 1


1. Apply battery voltage to daytime light relay 1 terminal 2 and ground terminal 1.
2. Check continuity between terminals 3 and 5.

3 - 5 : Continuity should exist.

OK or NG

OK >> GO TO 3.

NG >> Replace daytime light relay 1.

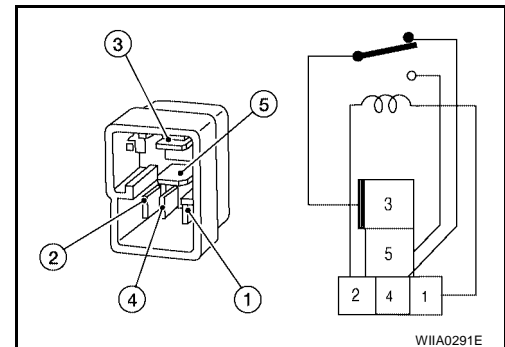

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

3. CHECK INPUT SIGNAL

1. Connect daytime light relay 1.
2. Start engine and release parking brake. Headlamp switch OFF.
3. Select "IPDM E/R" on CONSULT-II. With data monitor, make sure "DTRL REQ" turns ON-OFF linked with operation of parking brake switch.

Parking brake ON : DTRL REQ ON
Parking brake OFF : DTRL REQ OFF

OK or NG

OK >> Replace IPDM E/R. Refer to [PG-32, "Removal and Installation of IPDM E/R"](#) .

NG >> GO TO 4.

DATA MONITOR			
MONITOR			
DTRL REQ		OFF	
		RECORD	
MODE	BACK	LIGHT	COPY

WKIA1449E

4. CHECKING CAN COMMUNICATIONS

Select "BCM" on CONSULT-II and perform self-diagnosis for BCM.

Displayed self-diagnosis results

NO DTC>>Replace BCM. Refer to [BCS-27, "Removal and Installation"](#) .

CAN COMM CIRCUIT>> Check BCM CAN communication system. Refer to [BCS-20, "CAN Communication Inspection Using CONSULT-II \(Self-Diagnosis\)"](#) .

SELF-DIAG RESULTS			
DTC RESULTS		TIME	
CAN COMM CIRCUIT [U1000]		PAST	
ERASE		PRINT	
MODE	BACK	LIGHT	COPY

SKIA1039E

Aiming Adjustment

Refer to [LT-25, "Aiming Adjustment"](#) .

Bulb Replacement

Refer to [LT-28, "Disassembly and Assembly"](#) .

Removal and Installation

Refer to [LT-27, "Removal and Installation"](#) .

Disassembly and Assembly

Refer to [LT-28, "Disassembly and Assembly"](#) .

EKS00FUV

EKS00FUW

EKS00FUX

EKS00FUY


AUTO LIGHT SYSTEM

AUTO LIGHT SYSTEM

PFP:28491

Component Parts and Harness Connector Location

EKS00FUZ

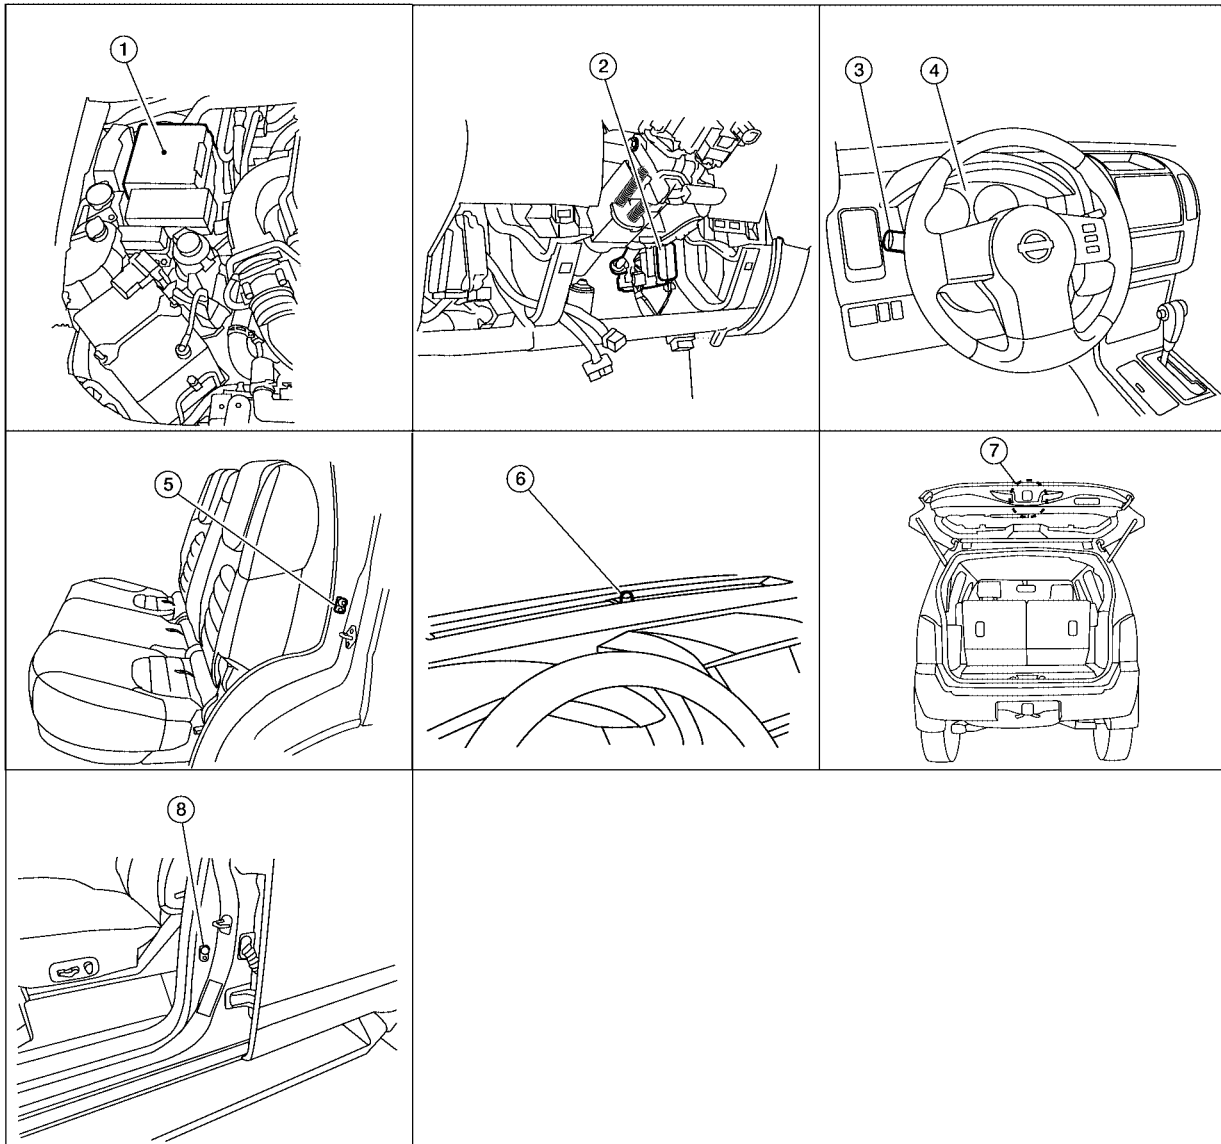

WKIA4959E

- | | | |
|--|--|--|
| 1. IPDM E/R
E118, E119, E120, E121,
E122, E123, E124 | 2. BCM
M18, M19, M20
(view with instrument lower panel LH removed) | 3. Combination switch (lighting switch)
M28 |
| 4. Combination meter
M24 | 5. Rear door switch LH
B18
Rear door switch RH
B116 | 6. Optical sensor
M145 |
| 7. Back door switch
D502 | 7. Front door switch LH
B8
Front door switch RH
B108 | |

AUTO LIGHT SYSTEM

EKS00FV0

System Description

Automatically turns on/off the parking lamps and the headlamps in accordance with ambient light. Timing for when the lamps turn on/off can be selected using four modes.

OUTLINE

The auto light control system uses an optical sensor that detects outside brightness.

When the lighting switch is in "AUTO" position, it automatically turns on/off the parking lamps and the headlamps in accordance with the ambient light. Sensitivity can be adjusted in four steps. For the details of the setting, refer to [LT-47, "SETTING CHANGE FUNCTIONS"](#).

Optical sensor ground is supplied

- to optical sensor terminal 3
- through BCM (body control module) terminal 18.

When ignition switch is turned to "ON" position and when outside brightness is darker than prescribed level, input is supplied

- to BCM terminal 58
- from optical sensor terminal 4.

The headlamps will then illuminate. For a description of headlamp operation, refer to [LT-5, "System Description"](#).

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#).

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the AUTO position, and the ignition switch is turned from ON or ACC to OFF, and one of the front doors is opened, the battery saver control feature is activated.

Under this condition, the headlamps remain illuminated for 5 minutes, then the headlamps are turned off.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

DELAY TIMER FUNCTION

When the ignition switch is ON and auto light switch is ON, the BCM turns on/off the headlamps. In delay timer function, ignition is OFF, auto light sensor power source is OFF and the headlamps are not turned on/off by the BCM. On condition that:

- when the state of ignition switch ON or ACC is ON and output judgment by auto light function is headlamp ON changes to ignition switch and ACC are OFF and any door switch is ON, output judgment by BCM should be headlamp ON for 5 minutes by timer. After time out, output judgment by BCM should be headlamp OFF.
- when the state of any door switch is turned to ON from OFF while 45 second or 5 minute timer is counting, timer stops, and restarts counting for 5 minutes, then BCM judges output as headlamp ON. After time out, BCM judges output as headlamp OFF.
- when the state of front door switch LH, front door switch RH, rear door switch LH, rear door switch RH or back door latch (door ajar switch) is ON turns to all door switches are OFF while 45 second or 5 minute timer is counting, timer stops, and restarts counting for 45 seconds, then BCM judges output as headlamp ON. After timer out, BCM judges output as headlamp OFF.
- when the state is ignition switch ON or ACC is ON or auto light switch OFF while timer is counting, timer stops counting and BCM turns on/off lamps according to headlamp function, front fog lamp function, auto light function and headlamp battery save function.

Delay timer control mode can be changed by the function setting of CONSULT-II or with the display (with NAVI).

CAN Communication System Description

EKS00FV1

Refer to [LAN-25, "CAN COMMUNICATION"](#).

AUTO LIGHT SYSTEM

Major Components and Functions


EKS00FV2

Components	Functions
BCM	<ul style="list-style-type: none">● Turns on/off circuits of tail light and headlamp according to signals from light sensor, lighting switch (AUTO), front door switch LH, front door switch RH, rear door switches, back door switch, and ignition switch (ON, OFF).
Optical sensor	<ul style="list-style-type: none">● Converts ambient light (lux) to voltage, and sends it to BCM. (Detects lightness of 50 to 1,300 lux)

AUTO LIGHT SYSTEM

Schematic

EKS00FV3

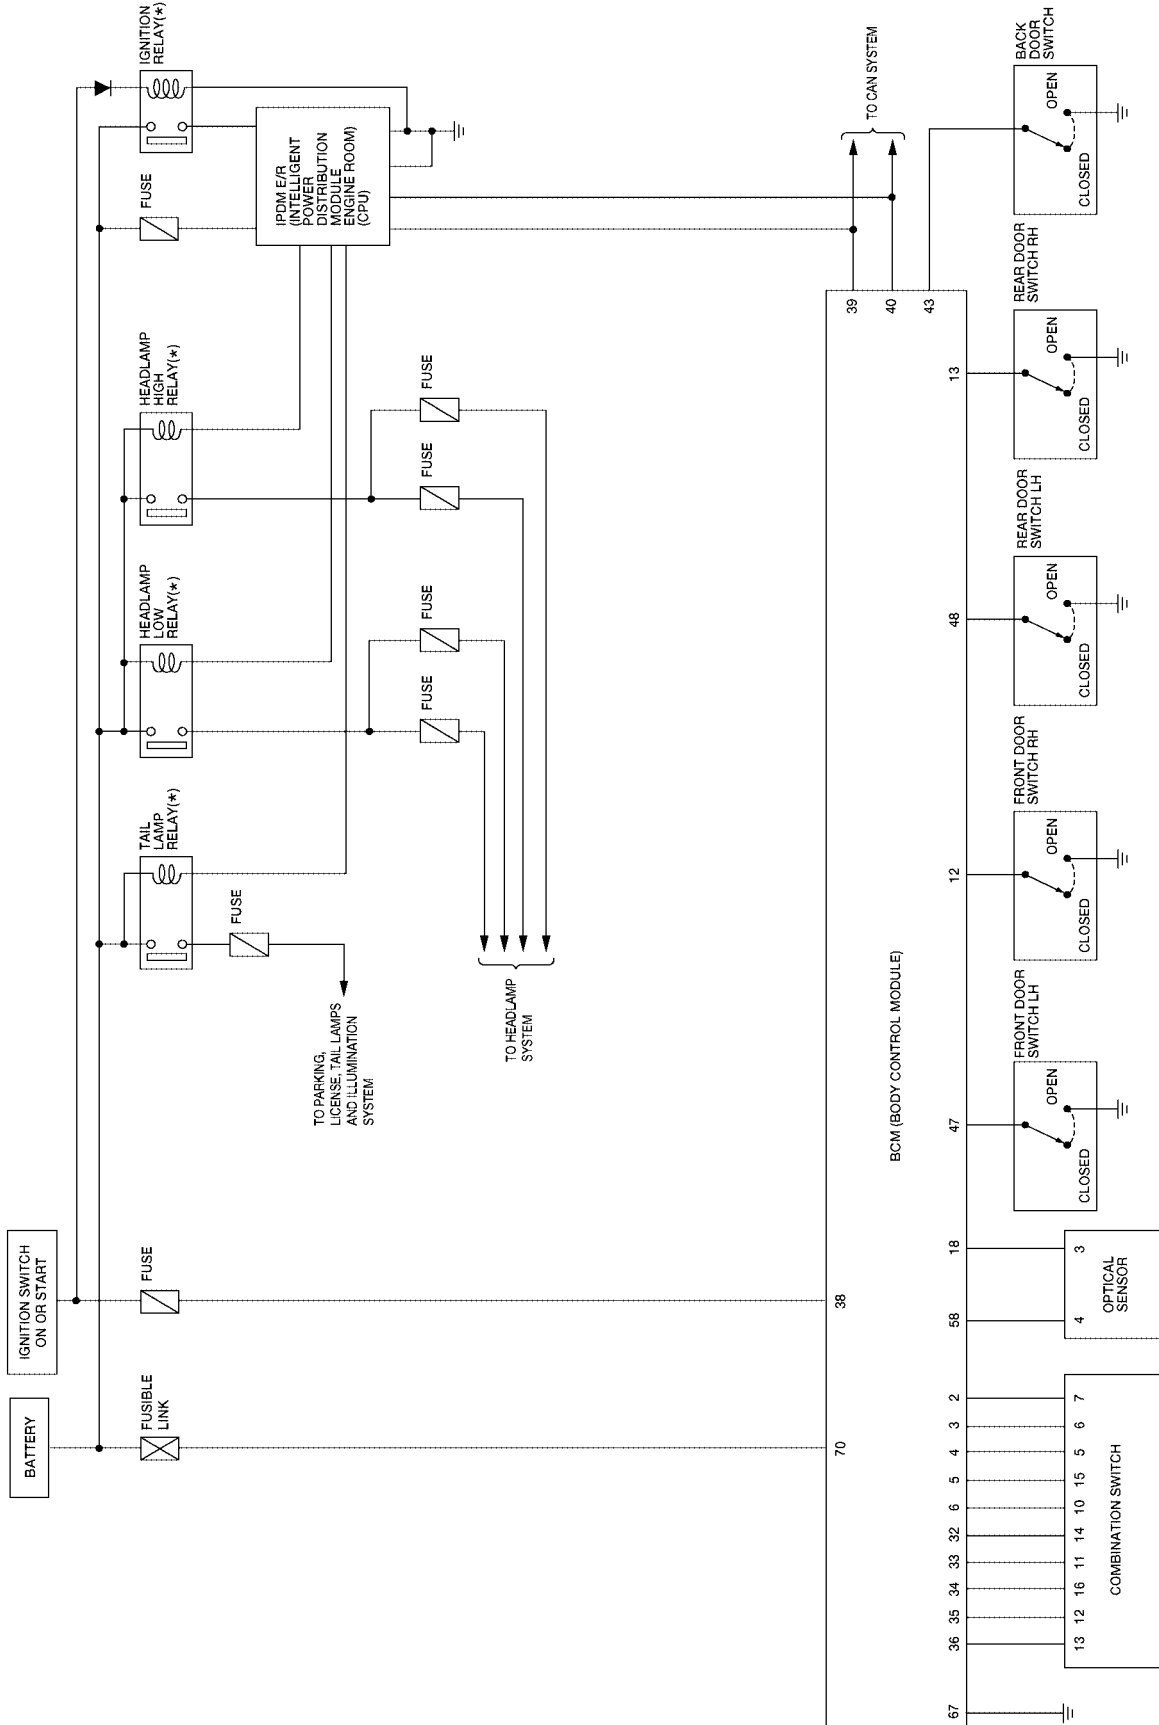

*: THIS RELAY IS BUILT INTO THE IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM).

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
W
X
Y
Z



LT

AUTO LIGHT SYSTEM

Wiring Diagram — AUTO/L —

EKS00FV4

LT-AUTO/L-01

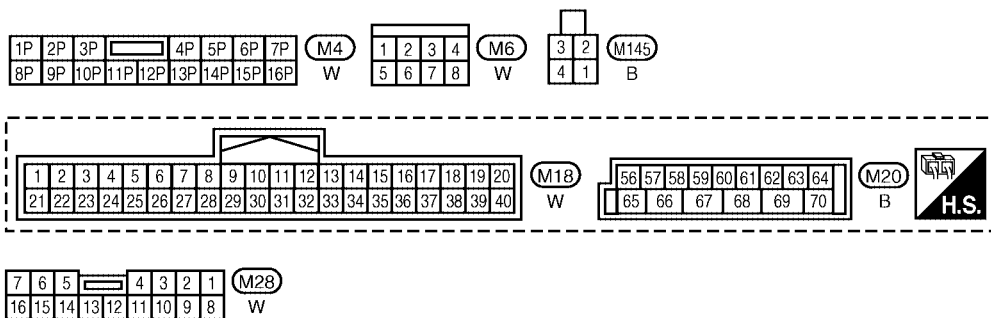
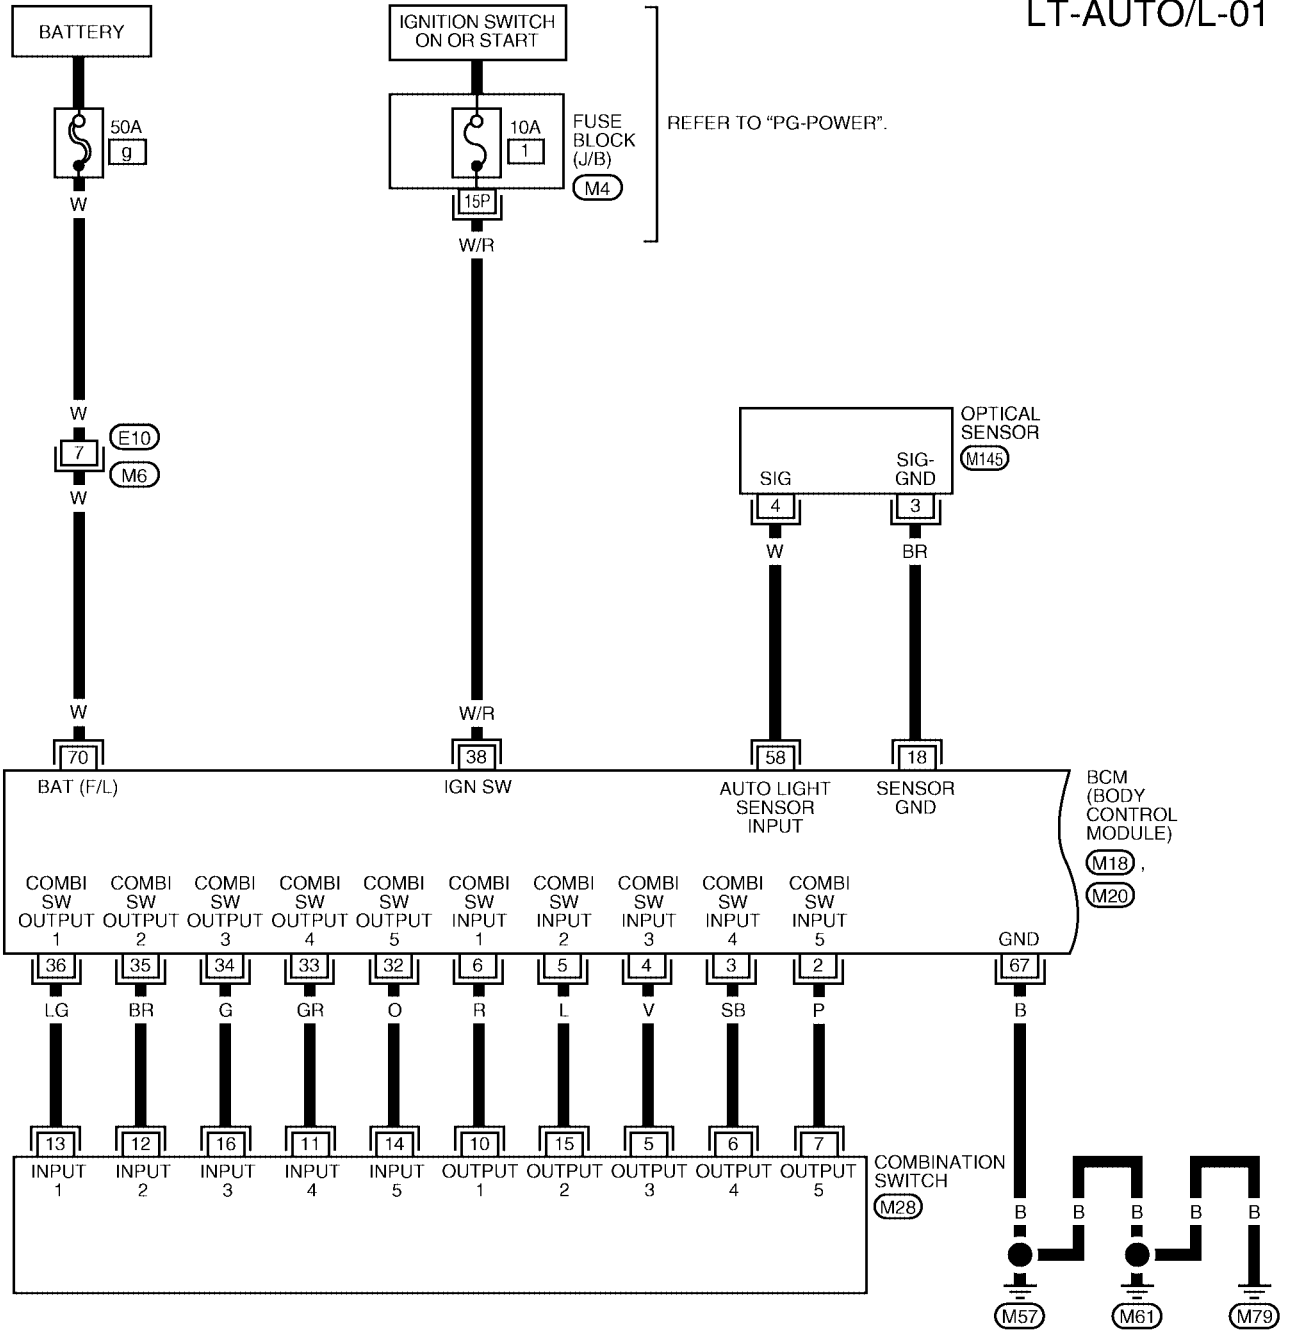


WKWA4226E

AUTO LIGHT SYSTEM

LT-AUTO/L-02

■ : DATA LINE

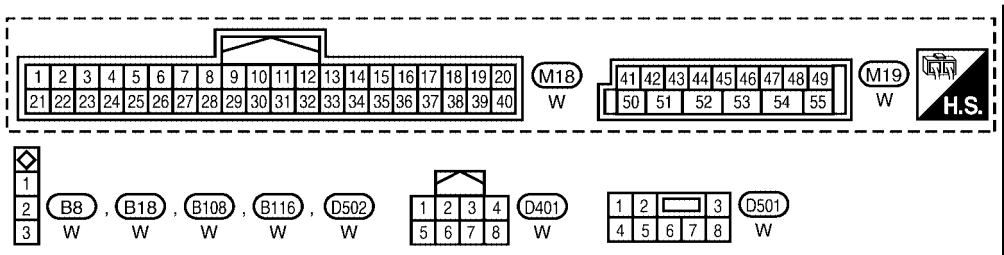
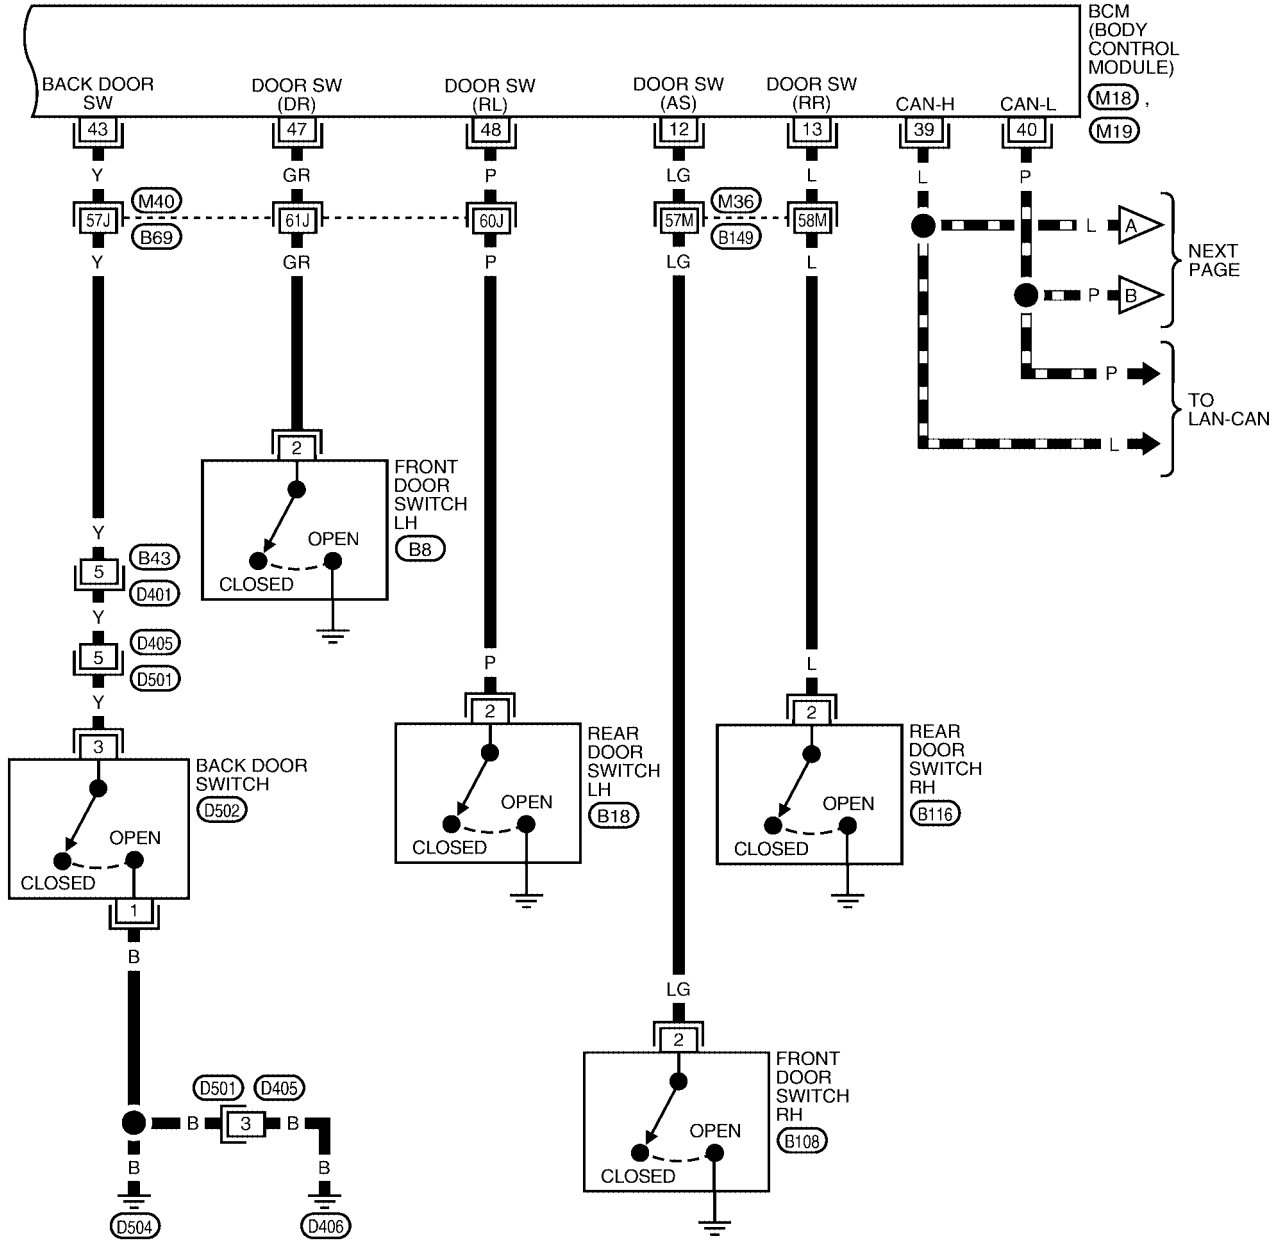


REFER TO THE FOLLOWING.
 (M36), (M40) - SUPER
 MULTIPLE JUNCTION (SMJ)

WKWA2028E

AUTO LIGHT SYSTEM

LT-AUTO/L-03

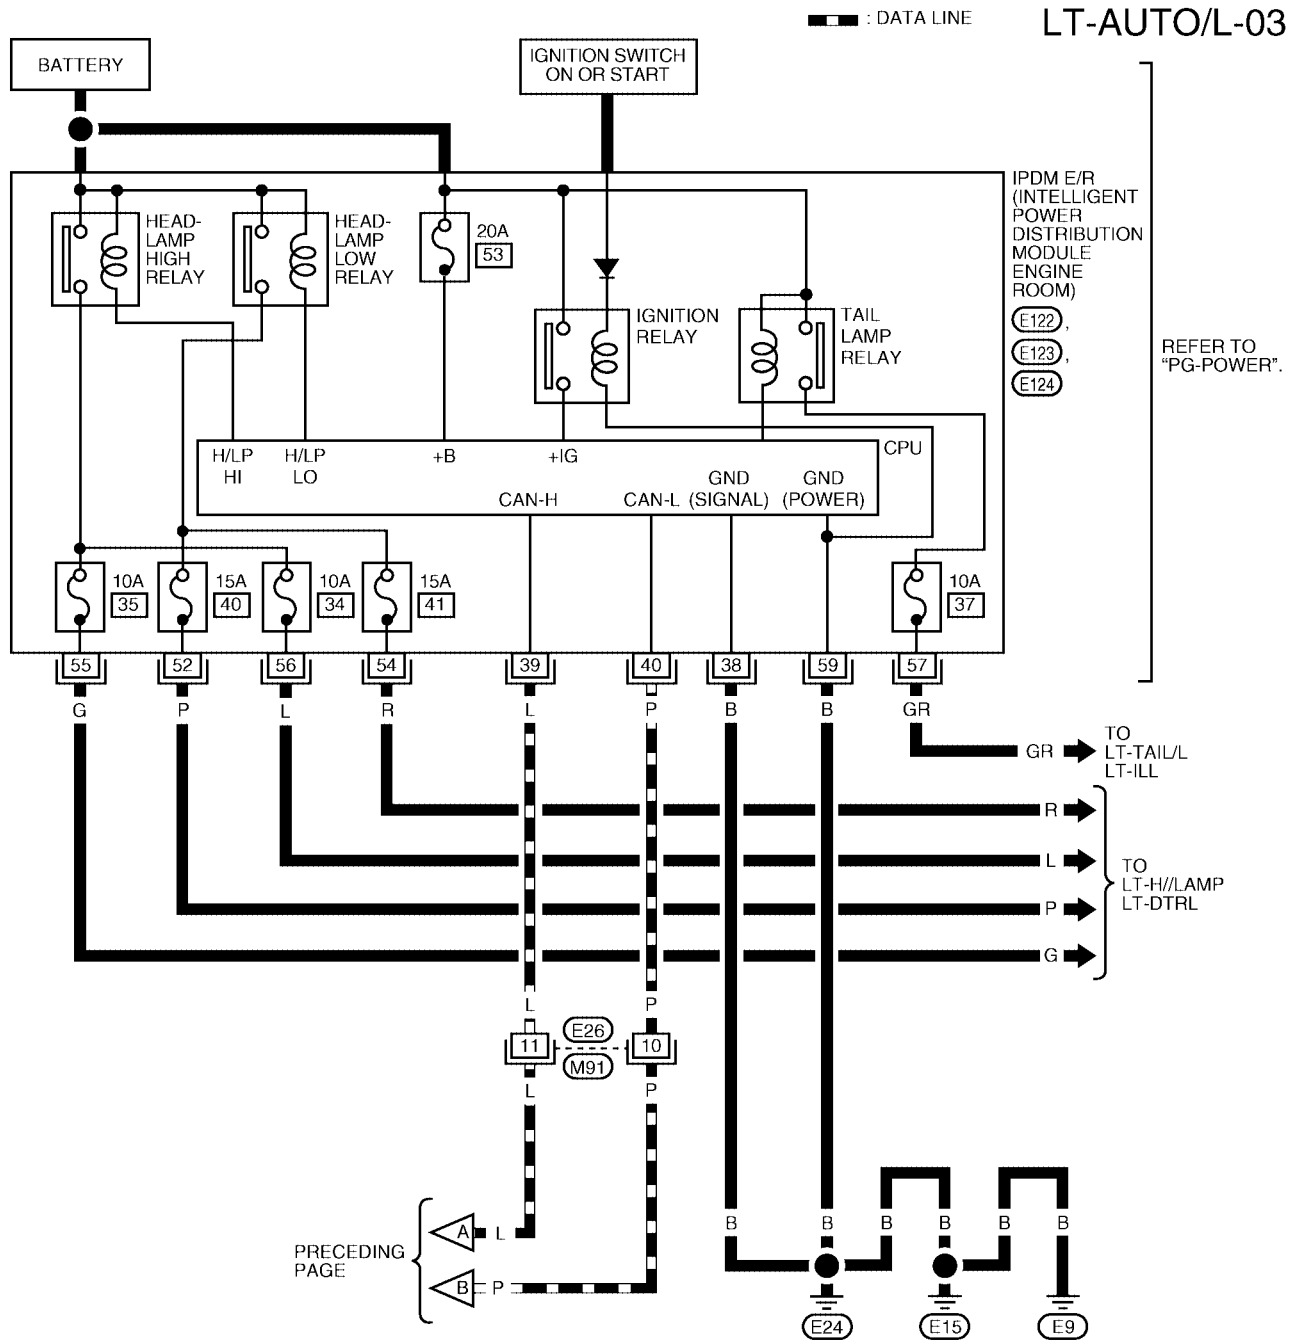

WKWA4306E

AUTO LIGHT SYSTEM

Terminals and Reference Values for BCM

EKS00FV5

Refer to [BCS-12, "Terminals and Reference Values for BCM"](#) .

Terminals and Reference Values for IPDM E/R

EKS00FV6

Refer to [PG-28, "Terminals and Reference Values for IPDM E/R"](#) .

How to Proceed With Trouble Diagnosis

EKS00FV7

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-41, "System Description"](#) .
3. Carry out the Preliminary Check. Refer to [LT-47, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction. Refer to [LT-53, "Trouble Diagnosis Chart by Symptom"](#) .
5. Does the auto light system operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

Preliminary Check

EKS00FV8

SETTING CHANGE FUNCTIONS

- Sensitivity of auto light system can be adjusted using CONSULT-II or with display (with NAVI). Refer to [LT-48, "WORK SUPPORT"](#) .

CHECK BCM CONFIGURATION

1. CHECK BCM CONFIGURATION

Confirm BCM configuration for "AUTO LIGHT" is set to "WITH". Refer to [BCS-21, "READ CONFIGURATION PROCEDURE"](#) .

OK or NG

- OK >> Continue preliminary check. Refer to [LT-47, "CHECK POWER SUPPLY AND GROUND CIRCUIT"](#) .
- NG >> Change BCM configuration for "AUTO LIGHT" to "WITH". Refer to [BCS-23, "WRITE CONFIGURATION PROCEDURE"](#) .

CHECK POWER SUPPLY AND GROUND CIRCUIT

Refer to [BCS-16, "BCM Power Supply and Ground Circuit Check"](#) and [PG-30, "IPDM E/R Power/Ground Circuit Inspection"](#) .

CONSULT-II Function (BCM)

EKS00FV9

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.

BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
CONFIGURATION	Performs BCM configuration read/write functions.	


CONSULT-II OPERATION

CAUTION:


If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.

AUTO LIGHT SYSTEM


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

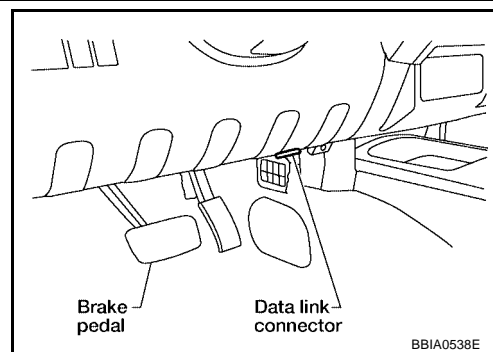


2. Touch "START (NISSAN BASED VHCL)".

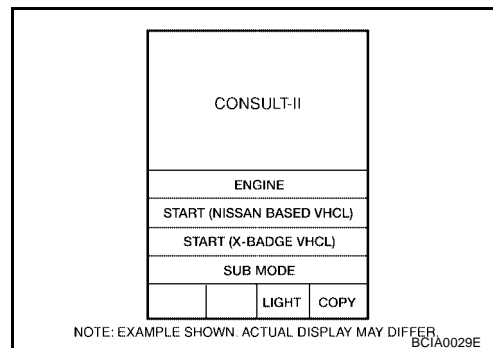

3. Touch "BCM" on "SELECT SYSTEM" screen. If "BCM" is not indicated, go to [GI-40, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

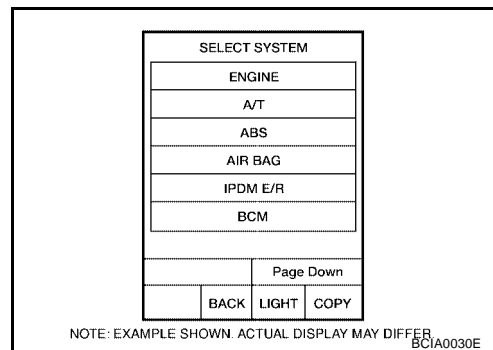

4. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.

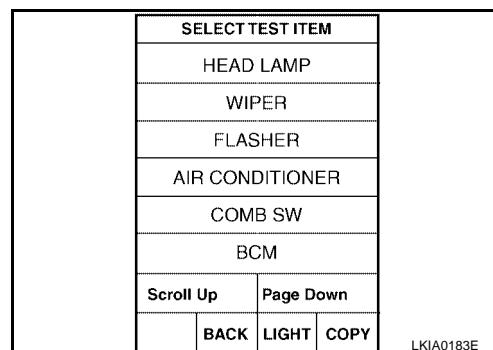

WORK SUPPORT

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "WORK SUPPORT" on "SELECT DIAG MODE" screen.
3. Touch "CUSTOM A/LIGHT SETTING" or "ILL DELAY SET" on "SELECT WORK ITEM" screen.
4. Touch "START".
5. Touch "MODE 1-4" of setting to be changed (CUSTOM A/LIGHT SETTING). Touch "MODE1-8" of setting to be changed (ILL DELAY SET).
6. Touch "CHANGE SETT".

AUTO LIGHT SYSTEM

7. The setting will be changed and "CUSTOMIZING COMPLETED" will be displayed.
8. Touch "END".

Work Support Setting Item

- Sensitivity of auto light can be selected and set from four modes.

Work item	Description
CUSTOM A/LIGHT SETTING	Auto light sensitivity can be changed in this mode. Sensitivity can be adjusted in four modes. ● MODE 1 (Normal-default)/ MODE 2 (Desensitized)/MODE 3 (Sensitive)/MODE4 (Insensitive)
ILL DELAY SET	Auto light delay off timer period can be changed in this mode. Selects auto light delay off timer period among eight modes. ● MODE 1 (45 sec.)/MODE 2 (OFF)/MODE 3 (30 sec.)/MODE 4 (60 sec.)/MODE 5 (90 sec.)/MODE 6 (120 sec.)/MODE 7 (150 sec.)/MODE 8 (180 sec.)

DATA MONITOR

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on the "SELECT MONITOR ITEM" screen.

ALL SIGNALS	Monitors all the signals.
SELECTION FROM MENU	Selects and monitors individual signal.

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch individual items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

Display Item List

Monitor item	Contents
IGN ON SW "ON/OFF"	Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
ACC ON SW "ON/OFF"	Displays "ACC (ON)/OFF, Ignition OFF (OFF)" status judged from ignition switch signal.
HI BEAM SW "ON/OFF"	Displays status (high beam switch: ON/Others: OFF) of high beam switch judged from lighting switch signal.
HEAD LAMP SW 1 "ON/OFF"	Displays status (headlamp switch 1: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
HEAD LAMP SW 2 "ON/OFF"	Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
LIGHT SW 1ST "ON/OFF"	Displays status (lighting switch 1st position: ON/Others: OFF) of lighting switch judged from lighting switch signal.
AUTO LIGHT SW "ON/OFF"	Displays status of the lighting switch as judged from the lighting switch signal. (AUTO position: ON/Other than AUTO position: OFF)
PASSING SW "ON/OFF"	Displays status (flash-to-pass switch: ON/Others: OFF) of flash-to-pass switch judged from lighting switch signal.
FR FOG SW "ON/OFF"	Displays status (front fog lamp switch: ON/Others: OFF) of front fog lamp switch judged from lighting switch signal.
DOOR SW-DR "ON/OFF"	Displays status of the front door LH as judged from the front door switch LH signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-AS "ON/OFF"	Displays status of the front door RH as judged from the front door switch RH signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-RR "ON/OFF"	Displays status of the rear door as judged from the rear door switch (RH) signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-RL "ON/OFF"	Displays status of the rear door as judged from the rear door switch (LH) signal. (Door is open: ON/Door is closed: OFF)

AUTO LIGHT SYSTEM

Monitor item		Contents
BACK DOOR SW	"ON/OFF"	Displays status of the back door as judged from the back door switch signal. (Door is open: ON/Door is closed: OFF)
TURN SIGNAL R	"ON/OFF"	Displays status (Turn right: ON/Others: OFF) as judged from lighting switch signal.
TURN SIGNAL L	"ON/OFF"	Displays status (Turn left: ON/Others: OFF) as judged from lighting switch signal.
CARGO LAMP SW	"ON/OFF"	Displays status of cargo lamp.
OPTICAL SENSOR	[0 - 5V]	Displays "ambient light (close to 5V when dark/close to 0V when light)" judged from optical sensor signal.

ACTIVE TEST

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" deactivates the operation.

Display Item List

Test item	Description
TAIL LAMP	Allows tail lamp relay to operate by switching ON-OFF.
HEAD LAMP	Allows headlamp relay (HI, LO) to operate by switching ON-OFF.
FR FOG LAMP	Allows fog lamp relay to operate by switching ON-OFF.
CARGO LAMP	Allows cargo lamp to operate by switching ON-OFF.

AUTO LIGHT SYSTEM

CONSULT-II Function (IPDM E/R)

EKS00FVA

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


IPDM E/R diagnostic mode	Description
SELF-DIAG RESULTS	Displays IPDM E/R self-diagnosis results.
DATA MONITOR	Displays IPDM E/R input/output data in real time.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.

CONSULT-II OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn the ignition switch ON.

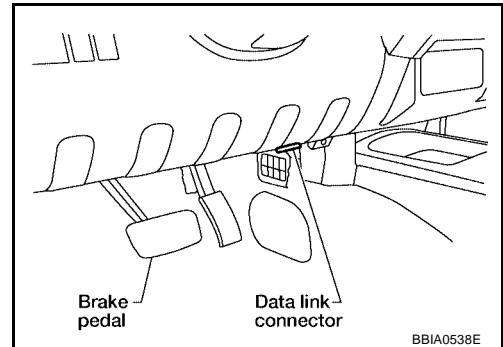

2. Touch "START (NISSAN BASED VHCL)".

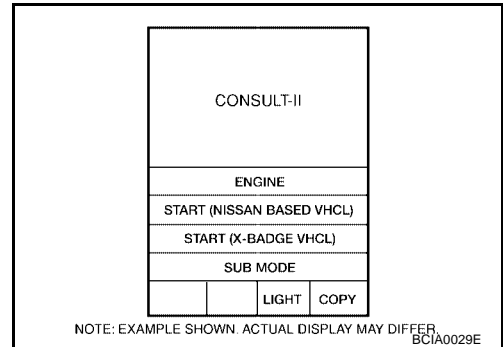


3. Touch "IPDM E/R" on "SELECT SYSTEM" screen.
If "IPDM E/R" is not displayed, go to [GI-40, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

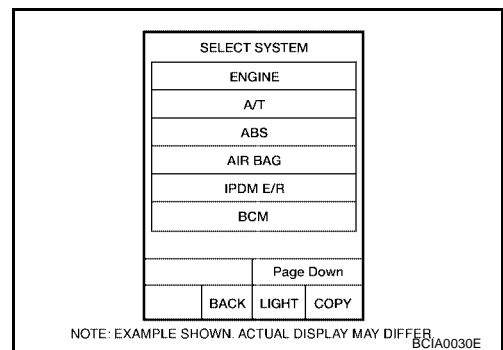

AUTO LIGHT SYSTEM

- Select the desired part to be diagnosed on the "SELECT DIAG MODE" screen.

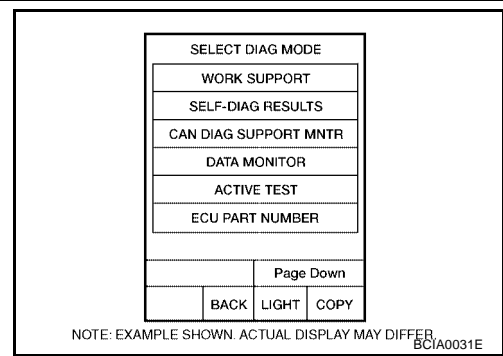

DATA MONITOR

Operation Procedure

- Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
- Touch "ALL SIGNALS", "MAIN SIGNALS" or "SELECTION FROM MENU" on the "SELECT MONITOR ITEM" screen.

ALL SIGNALS	All items will be monitored.
MAIN SIGNALS	Monitor the predetermined item.
SELECTION FROM MENU	Select any item for monitoring.

- Touch "START".
- Touch the required monitoring item on "SELECTION FROM MENU". In "ALL SIGNALS", all items are monitored. In "MAIN SIGNALS", predetermined items are monitored.
- Touch "RECORD" while monitoring to record the status of the item being monitored. To stop recording, touch "STOP".

All Items, Main Items, Select Item Menu

Item name	CONSULT-II screen display	Display or unit	Monitor item selection			Description
			ALL SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
Parking, license plate and tail lamps request	TAIL&CLR REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp low beam request	HL LO REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp high beam request	HL HI REQ	ON/OFF	×	×	×	Signal status input from BCM
Front fog lamps request	FR FOG REQ	ON/OFF	×	×	×	Signal status input from BCM

NOTE:

Perform monitoring of IPDM E/R data with the ignition switch ON. When the ignition switch is at ACC, the display may not be correct.

ACTIVE TEST

Operation Procedure

- Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
- Touch item to be tested, and check operation.
- Touch "START".
- Touch "STOP" while testing to stop the operation.

AUTO LIGHT SYSTEM

Test item	CONSULT-II screen display	Description
Tail lamp relay output	TAIL LAMP	Allows tail lamp relay to operate by switching operation ON-OFF at your option.
Headlamp relay (HI, LO) output	LAMPS	Allows headlamp relay (HI, LO) to operate by switching operation (OFF, HI, LO) at your option (Headlamp high beam repeats ON-OFF every 1 second).
Front fog lamp relay output		Allows fog lamp relay to operate by switching operation ON-OFF at your option.

Trouble Diagnosis Chart by Symptom

EKS00FVB

Trouble phenomenon	Malfunction system and reference
<ul style="list-style-type: none"> ● Parking lamps and headlamps will not illuminate when outside of the vehicle becomes dark. (Lighting switch 1st position and 2nd position operate normally.) ● Parking lamps and headlamp will not go out when outside of the vehicle becomes light. (Lighting switch 1st position and 2nd position operate normally.) ● Headlamps go out when outside of the vehicle becomes light, but parking lamps stay on. 	<ul style="list-style-type: none"> ● Refer to LT-48, "WORK SUPPORT" . ● Refer to LT-53, "Lighting Switch Inspection" . ● Refer to LT-54, "Optical Sensor System Inspection" . If above systems are normal, replace BCM. Refer to BCS-27, "Removal and Installation" .
Parking lamps illuminate when outside of the vehicle becomes dark, but headlamps stay off. (Lighting switch 1st position and 2nd position operate normally.)	<ul style="list-style-type: none"> ● Refer to LT-48, "WORK SUPPORT" . ● Refer to LT-54, "Optical Sensor System Inspection" . If above systems are normal, replace BCM. Refer to BCS-27, "Removal and Installation" .
Auto light adjustment system will not operate. (Lighting switch AUTO, 1st position and 2nd position operate normally.)	<ul style="list-style-type: none"> ● Refer to LT-54, "Optical Sensor System Inspection" . If above system is normal, replace BCM. Refer to BCS-27, "Removal and Installation" .
Auto light adjustment system will not operate.	<ul style="list-style-type: none"> ● CAN communication line to BCM inspection. Refer to BCS-20, "CAN Communication Inspection Using CONSULT-II (Self-Diagnosis)" .
Shut off delay feature will not operate.	<ul style="list-style-type: none"> ● CAN communication line inspection between BCM and combination meter. Refer to BCS-20, "CAN Communication Inspection Using CONSULT-II (Self-Diagnosis)" . ● Refer to BL-29, "Door Switch Check" . If above system is normal, replace BCM. Refer to BCS-27, "Removal and Installation" .

Lighting Switch Inspection

EKS00FVC

1. CHECK LIGHTING SWITCH INPUT SIGNAL

Ⓜ With CONSULT-II

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "AUTO LIGHT SW" turns ON-OFF linked with operation of lighting switch.

When lighting switch is in AUTO position : AUTO LIGHT SW ON

ⓧ Without CONSULT-II

Refer to [LT-82, "Combination Switch Inspection"](#) .

OK or NG

OK >> Inspection End.

NG >> Check lighting switch. Refer to [LT-82, "Combination Switch Inspection"](#) .

DATA MONITOR	
MONITOR	
AUTO LIGHT SW	ON

SKIA4196E

AUTO LIGHT SYSTEM

EKS00FVD

Optical Sensor System Inspection

1. CHECK OPTICAL SENSOR INPUT SIGNAL

④ With CONSULT-II

Select "BCM" on CONSULT-II. With "OPTICAL SENSOR" data monitor, check difference in the voltage when the optical sensor is illuminated and not illuminated.

Illuminated

OPTICAL SENSOR : 3.1V or more

Not illuminated

OPTICAL SENSOR : 0.6V or less

NOTE:

Optical sensor must be completely subjected to work lamp light. If the optical sensor is insufficiently illuminated, the measured value may not satisfy the standard.


⊗ Without CONSULT-II

GO TO 2.

OK or NG

OK >> Inspection End.

NG >> GO TO 2.

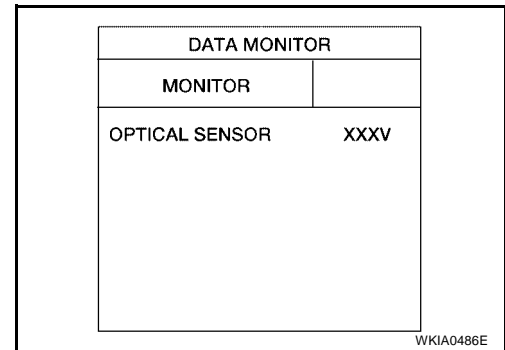

WKIA0486E


2. CHECK OPTICAL SENSOR SIGNAL GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and optical sensor connector.
3. Check continuity (open circuit) between BCM harness connector M18 terminal 18 and optical sensor harness connector M145 terminal 3.

18 - 3 : Continuity should exist.

4. Check continuity (short circuit) between BCM harness connector M18 terminal 18 and ground.

18 - Ground : Continuity should not exist.

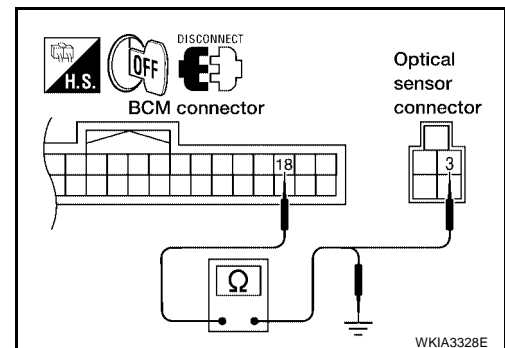

WKIA3328E

OK or NG

OK >> GO TO 3.

NG >> Repair harness or connector.


3. CHECK OPTICAL SENSOR SIGNAL CIRCUIT

1. Check continuity (open circuit) between BCM harness connector M20 terminal 58 and optical sensor harness connector M145 terminal 4.

58 - 4 : Continuity should exist.

2. Check continuity (short circuit) between BCM harness connector M20 terminal 58 and ground.

58 - Ground : Continuity should not exist.

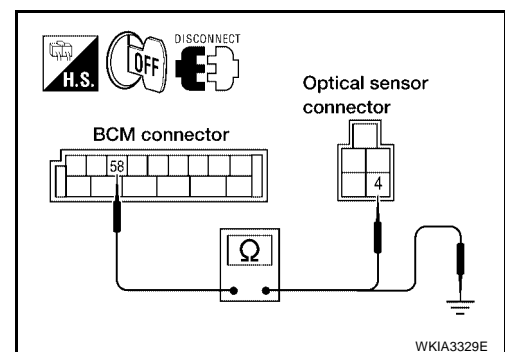

WKIA3329E

OK or NG

OK >> Replace optical sensor. Refer to [LT-55, "Removal and Installation"](#) . Recheck sensor output with CONSULT-II.

If NG, replace BCM. Refer to [BCS-27, "Removal and Installation"](#) .

NG >> Repair harness or connector.

AUTO LIGHT SYSTEM


Removal and Installation

EKS00FVE

OPTICAL SENSOR

Removal

1. Using a thin blade screwdriver, gently pry upward to release optical sensor from defrost grille.
2. Disconnect optical sensor connector.

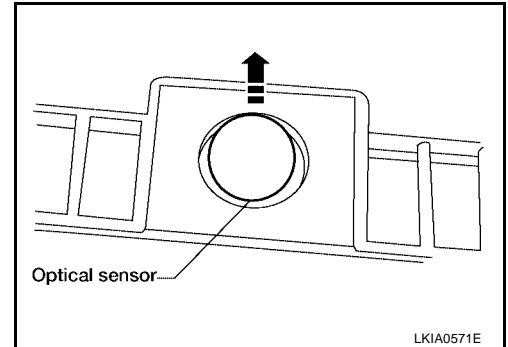

Installation

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
LT
L
M


FRONT FOG LAMP

FRONT FOG LAMP

PFP:26150

Component Parts and Harness Connector Location

EKS00FVF

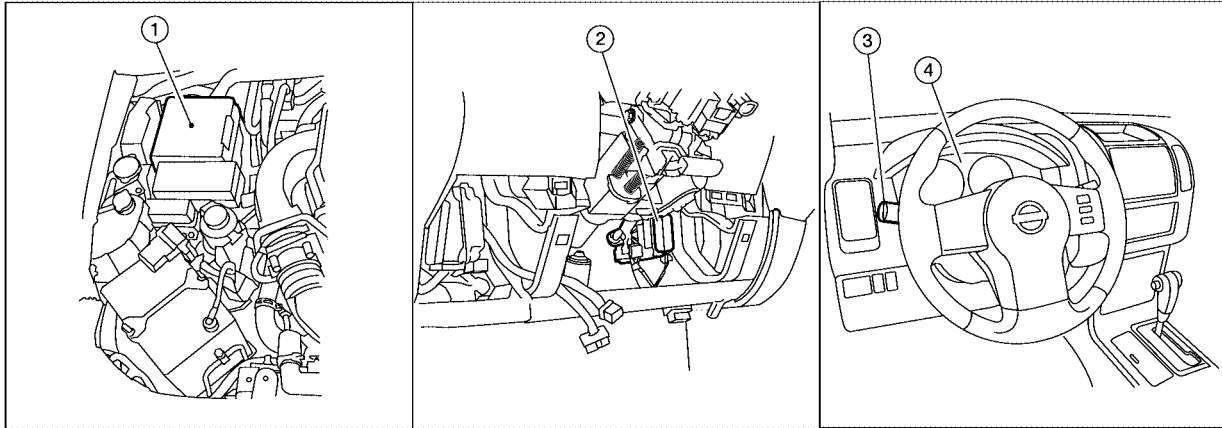

WKIA4960E

1. IPDM E/R
E118, E119, E120, E121,
E122, E123, E124
2. BCM
M18, M19, M20
(view with instrument lower panel RH removed)
3. Combination switch (lighting switch)
M28
4. Combination meter
M24

System Description

EKS00FVG

Control of the fog lamps is dependent upon the position of the combination switch (lighting switch). The lighting switch must be in the 2ND position or AUTO position (LOW beam is ON) for front fog lamp operation. When the lighting switch is placed in the fog lamp position, the BCM (body control module) receives input signal requesting the fog lamps to illuminate. When the headlamps are illuminated, this input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the front fog lamp relay coil. When activated, this relay directs power to the front fog lamps.

OUTLINE

Power is supplied at all times

- to ignition relay, located in the IPDM E/R, and
- to front fog lamp relay, located in the IPDM E/R, and
- through 20A fuse (No. 53, located in the IPDM E/R)
- to CPU of the IPDM E/R, and
- through 50A fusible link (letter **g**, located in the fuse and fusible link box)
- to BCM terminal 70.

When the ignition switch is in ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse [No. 1, located in the fuse block (J/B)]
- to BCM terminal 38.

Ground is supplied

- to BCM terminal 67
- through grounds M57, M61 and M79, and
- to IPDM E/R terminals 38 and 59
- through grounds E9, E15 and E24.

FOG LAMP OPERATION

The fog lamp switch is built into the combination switch. The lighting switch must be in the 2ND position or AUTO position (LOW beam is ON) and the fog lamp switch must be ON for fog lamp operation.

FRONT FOG LAMP

With the fog lamp switch in the ON position, the CPU of the IPDM E/R grounds the coil side of the fog lamp relay. The fog lamp relay then directs power

- through 20A fuse (No. 56, located in the IPDM E/R)
- through IPDM E/R terminal 50
- to front fog lamp LH terminal 1, and
- through IPDM E/R terminal 51
- to front fog lamp RH terminal 1.

Ground is supplied

- to front fog lamp LH and RH terminal 2
- through grounds E9, E15 and E24.

With power and ground supplied, the front fog lamps illuminate.

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#) .

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 2ND position (ON), the fog lamp switch is ON, and the ignition switch is turned from ON or ACC to OFF, the battery saver control feature is activated.

Under this condition, the fog lamps (and headlamps) remain illuminated for 5 minutes, then the fog lamps (and headlamps) are turned off.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

CAN Communication System Description

EKS00FVH

Refer to [LAN-25, "CAN COMMUNICATION"](#) .

A

B

C

D

E

F

G

H

I

J

LT

L

M




FRONT FOG LAMP

EKS00FV1

Wiring Diagram — F/FOG —

LT-F/FOG-01

— : DATA LINE


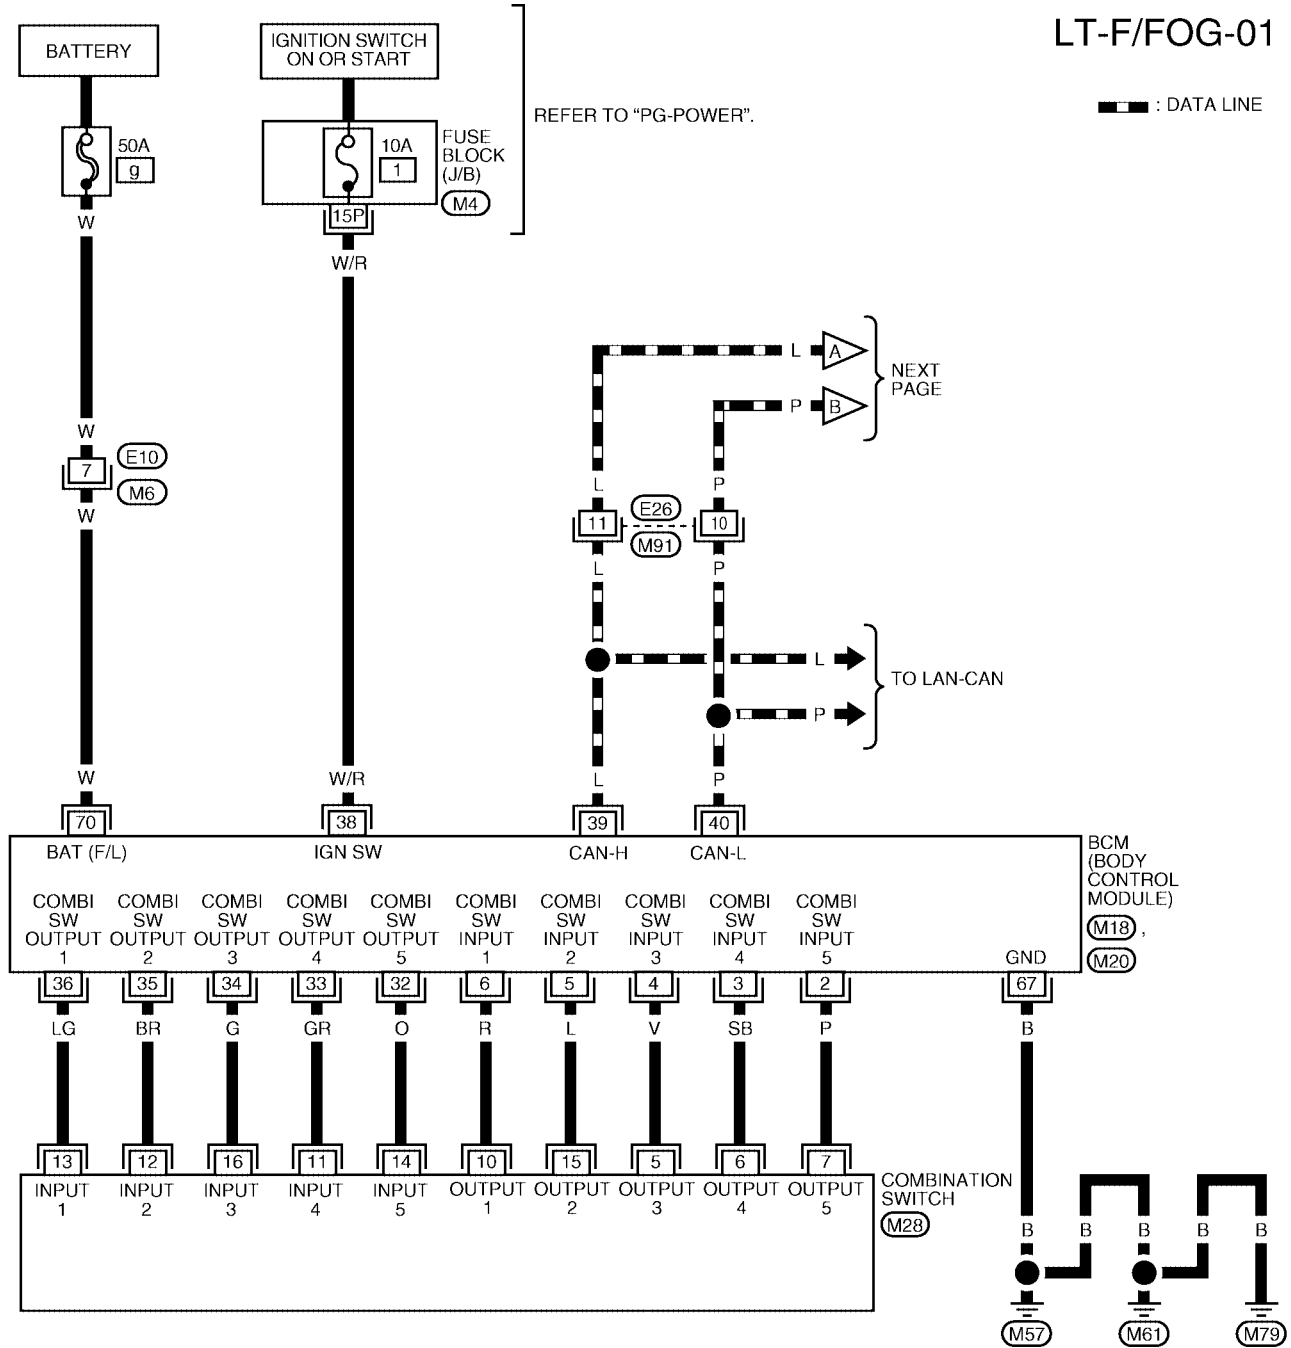


WKWA4227E

FRONT FOG LAMP

LT-F/FOG-02

A
B
C
D
E
F
G
H
I
J
LT
L
M

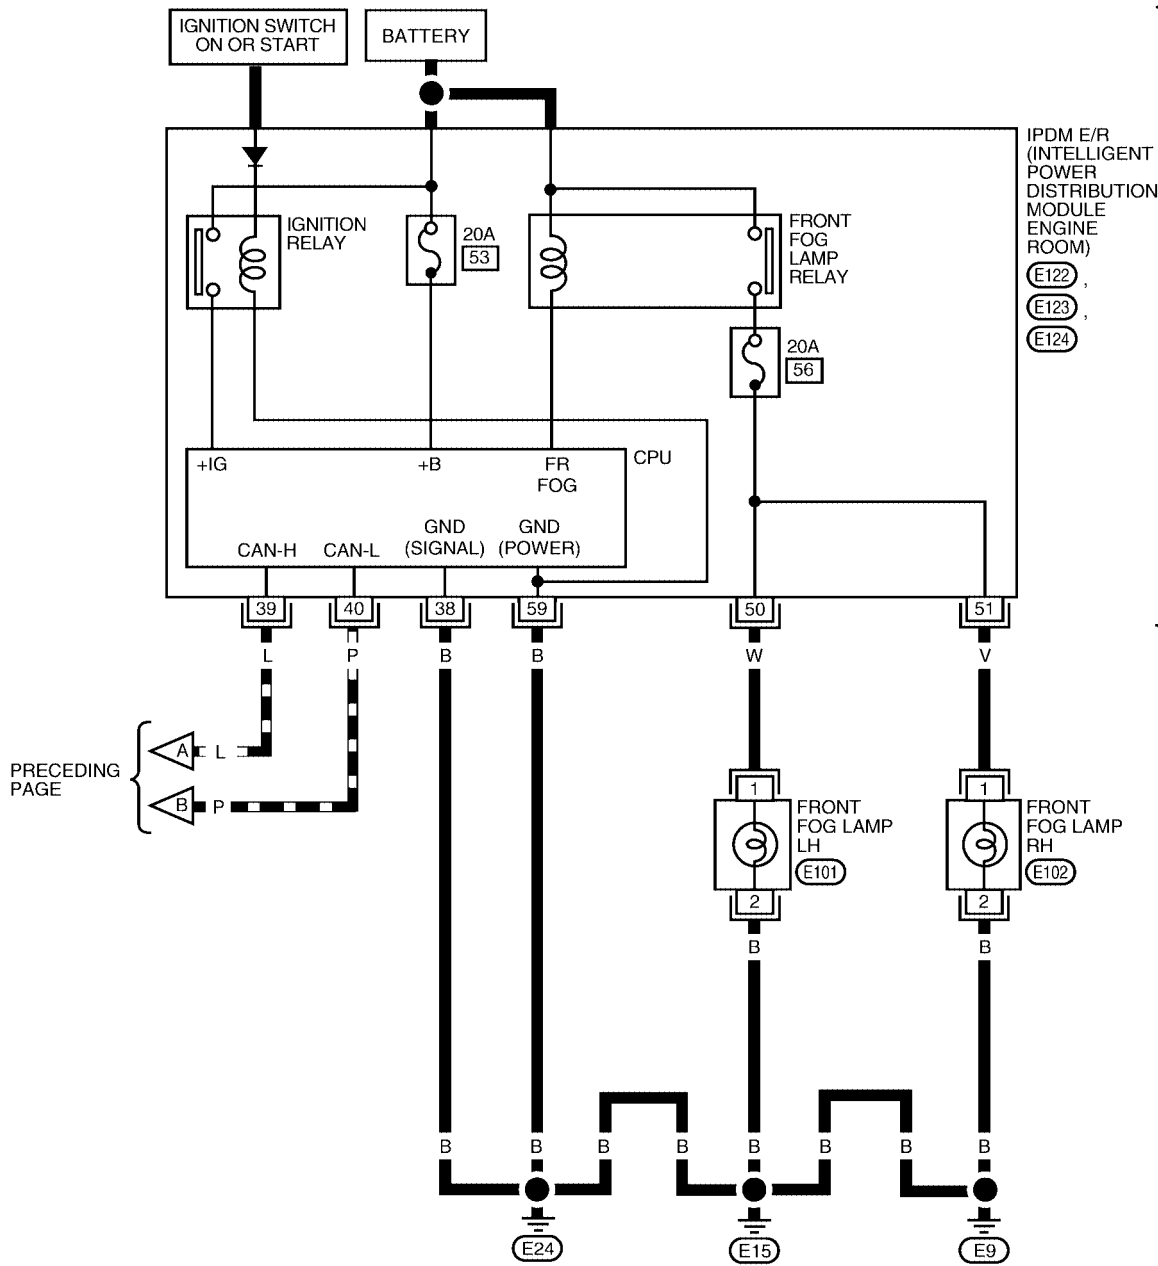

WKWA3082E

FRONT FOG LAMP

Terminals and Reference Values for BCM

EKS00FVJ

Refer to [BCS-12, "Terminals and Reference Values for BCM"](#) .

Terminals and Reference Values for IPDM E/R

EKS00FVK

Refer to [PG-28, "Terminals and Reference Values for IPDM E/R"](#) .

How to Proceed With Trouble Diagnosis

EKS00FVL

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-56, "System Description"](#) .
3. Perform the Preliminary Check. Refer to [LT-60, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Does the front fog lamp operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

Preliminary Check

EKS00FVM

CHECK POWER SUPPLY AND GROUND CIRCUIT

Refer to [BCS-16, "BCM Power Supply and Ground Circuit Check"](#) and [PG-30, "IPDM E/R Power/Ground Circuit Inspection"](#) .

CONSULT-II Functions

EKS00FVN

Refer to [LT-12, "CONSULT-II Function \(BCM\)"](#) in HEADLAMP (FOR USA).

Refer to [LT-15, "CONSULT-II Function \(IPDM E/R\)"](#) in HEADLAMP (FOR USA).

Front Fog Lamps Do Not Illuminate (Both Sides)

EKS00FVO

1. CHECK COMBINATION SWITCH INPUT SIGNAL

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "FR FOG SW" turns ON-OFF linked with operation of lighting switch.

When lighting switch is in FOG position : FR FOG SW ON

OK or NG

OK >> GO TO 2.

NG >> Check lighting switch. Refer to [LT-82, "Combination Switch Inspection"](#) .

DATA MONITOR	
MONITOR	
FR FOG SW	ON

SKIA5897E

2. FOG LAMP ACTIVE TEST

1. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Select "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
3. Touch "FOG" on "ACTIVE TEST" screen.
4. Make sure fog lamps operate.

Fog lamps should operate.

OK or NG

OK >> GO TO 3.

NG >> GO TO 4.

ACTIVE TEST			
EXTERNAL LAMPS		OFF	
		TAIL	
LO		HI	
FOG			
MODE	BACK	LIGHT	COPY

WKIA1438E

FRONT FOG LAMP


3. CHECK IPDM E/R

1. Select "IPDM E/R" on CONSULT-II, and select "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Make sure "FR FOG REQ" turns ON when lighting switch is in FOG position.

When lighting switch is in FOG position : FR FOG REQ ON

OK or NG


- OK >> Replace IPDM E/R. Refer to [PG-32, "Removal and Installation of IPDM E/R"](#).
- NG >> Replace BCM. Refer to [BCS-27, "Removal and Installation"](#).

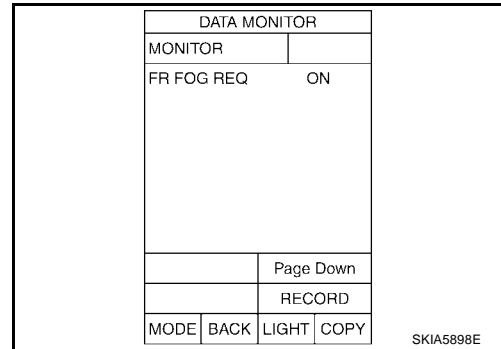

4. IPDM E/R INSPECTION

1. Disconnect fog lamp LH and RH.
2. Start auto active test. Refer to [PG-24, "Auto Active Test"](#). When front fog lamp relay is operating, check voltage between left/right front fog lamp connector terminals and ground.

Front fog lamp		Terminal	(-)	Voltage (Approx.)
(+)				
Connector	Terminal			
LH	E101	1	Ground	Battery voltage
RH	E102			

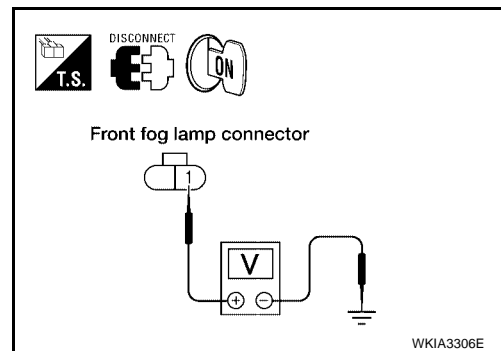

OK or NG

- OK >> Check front fog lamp bulbs and replace as necessary. Refer to [LT-63, "Bulb Replacement"](#).
- NG >> Replace IPDM E/R. Refer to [PG-32, "Removal and Installation of IPDM E/R"](#).

Front Fog Lamp Does Not Illuminate (One Side)

EKS00FVP

1. BULB INSPECTION

Inspect bulb of lamp which does not illuminate.

OK or NG

- OK >> GO TO 2.
- NG >> Replace lamp bulb. Refer to [LT-63, "Bulb Replacement"](#).


2. INSPECTION BETWEEN IPDM E/R AND FRONT FOG LAMPS

1. Disconnect IPDM E/R connector and inoperative front fog lamp connector.
2. Check continuity between harness connector terminals of IPDM E/R and harness connector terminal of front fog lamps.

IPDM E/R		Front fog lamp		Continuity
Connector	Terminal	Connector	Terminal	
E123	50	LH	E101	Yes
	51	RH	E102	

OK or NG

- OK >> Check ground circuit. If OK, replace IPDM E/R. Refer to [PG-32, "Removal and Installation of IPDM E/R"](#). If NG, repair harness or connector.
- NG >> Check for short circuits and open circuits in harness between IPDM E/R and front fog lamps.

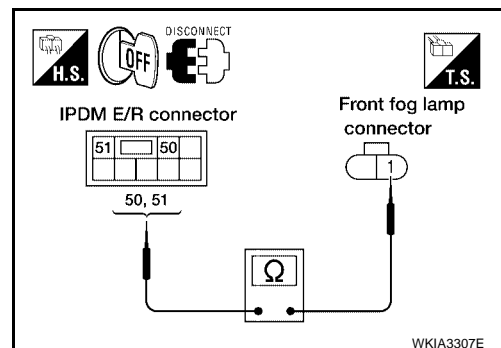

FRONT FOG LAMP

EKS00FVQ

Aiming Adjustment


The fog lamp is a semi-sealed beam type which uses a replaceable halogen bulb. Before performing aiming adjustment, make sure of the following.

- Keep all tires inflated to correct pressure.
- Place vehicle on level ground.
- See that vehicle is unloaded (except for full levels of coolant, engine oil and fuel, and spare tire, jack, and tools). Have the driver or equivalent weight placed in driver seat.


Adjust aiming in the vertical direction by turning the adjustment screw.

NOTE:


Use a Phillips screwdriver to adjust. Turn screw clockwise to raise pattern and counterclockwise to lower pattern.

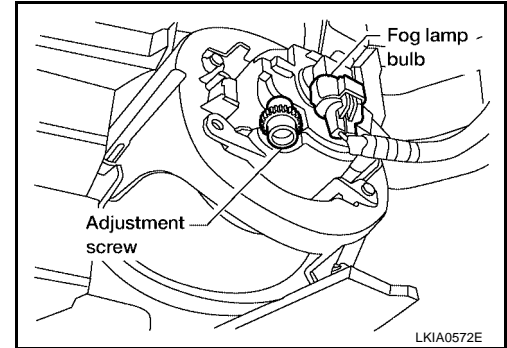

1. Set the distance between the screen and the center of the fog lamp lens as shown.

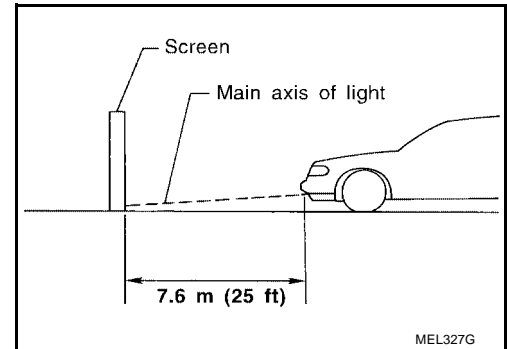

2. Turn front fog lamps ON.
3. Remove front portion of fender protector(s) for adjustment screw access. Refer to [EI-21, "Removal and Installation of Front Fender Protector"](#)
4. Adjust front fog lamps using adjustment screw so that the top edge of the high intensity zone is 100 mm (4 in) below the height of the fog lamp centers as shown.
 - When performing adjustment, if necessary, cover the headlamps and opposite fog lamp.

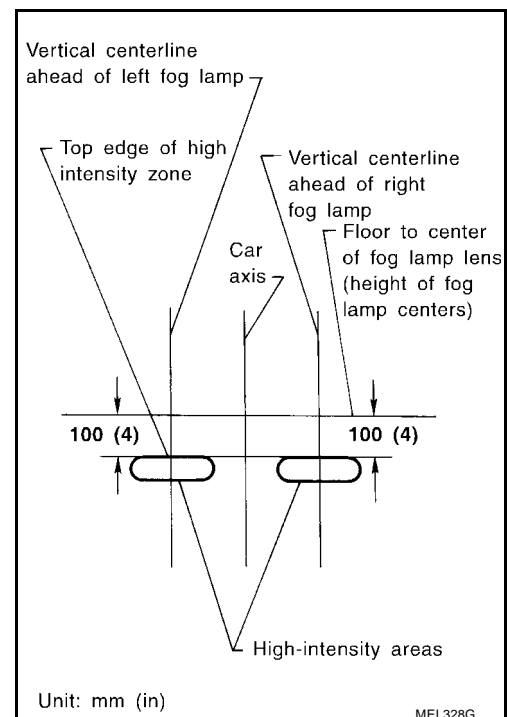

FRONT FOG LAMP


EKS00FVR

Bulb Replacement

1. Remove front portion of fender protector. Refer to [EI-21, "Removal and Installation of Front Fender Protector"](#)
2. Disconnect fog lamp connector.
3. Turn the bulb counterclockwise to remove it.

CAUTION:

- Do not touch the glass of bulb directly by hand. Keep grease and other oily substances away from it. Do not touch bulb by hand while it is lit or right after being turned off. Burning may result.
- Do not leave bulb out of fog lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of fog lamp. When replacing bulb, be sure to replace it with new one.

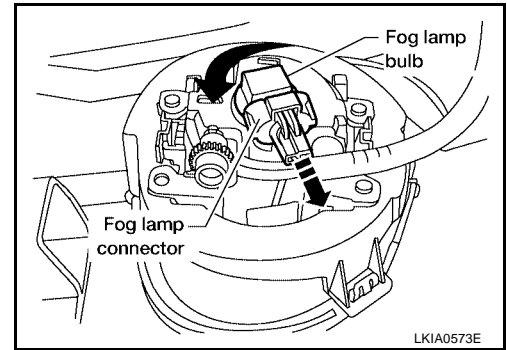

Removal and Installation FRONT FOG LAMP

EKS00FVS


The fog lamp is a semi-sealed beam type which uses a replaceable halogen bulb.

CAUTION:

- Do not leave fog lamp assembly without bulb for a long period of time. Dust, moisture, smoke, etc. entering the fog lamp body may affect the performance. Remove the bulb from the headlamp assembly just before replacement bulb is installed.
- Grasp only the plastic base when handling the bulb. Never touch the glass envelope. Touching the glass could significantly affect the bulb life and/or fog lamp performance.

Removal

1. Remove front portion of fender protector. Refer to [EI-21, "Removal and Installation of Front Fender Protector"](#)
2. Disconnect fog lamp connector.
3. Remove fog lamp screws and pull fog lamp rearward out of front bumper.

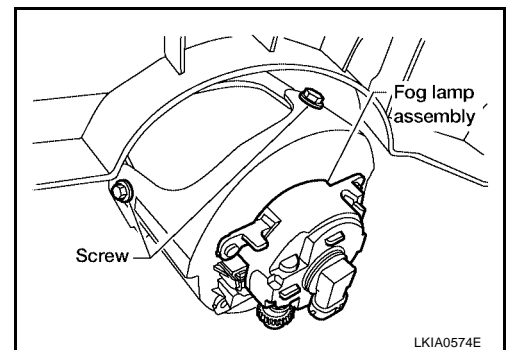

Installation

Installation is in the reverse order of removal.


TURN SIGNAL AND HAZARD WARNING LAMPS

TURN SIGNAL AND HAZARD WARNING LAMPS

PF26120

Component Parts and Harness Connector Location

EKS00FVT

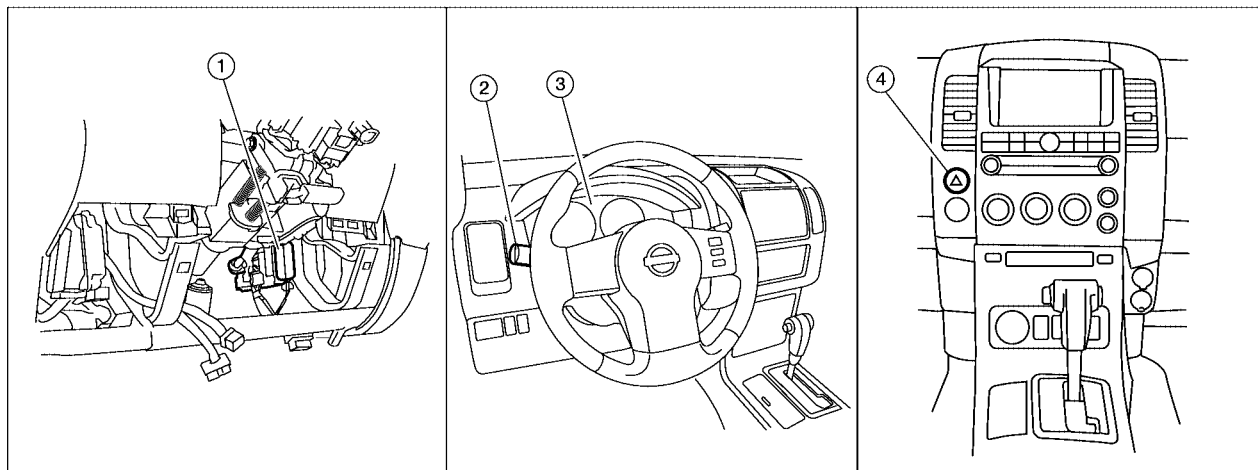

WKIA4961E

1. BCM
M18, M19, M20
(view with instrument lower panel RH removed)
2. Combination switch (lighting switch)
M28
3. Combination meter
M24
4. Hazard switch

System Description OUTLINE

EKS00FVU

Power is supplied at all times

- through 50A fusible link (letter **g**, located in the fuse and fusible link box)
- to BCM (body control module) terminal 70, and
- through 10A fuse [No. 19, located in the fuse block (J/B)]
- to combination meter terminal 3.

TURN SIGNAL OPERATION

When the ignition switch is in the ON or START position, power is supplied

- through 10A fuse [No. 1, located in the fuse block (J/B)]
- to BCM terminal 38, and
- through 10A fuse [No. 14, located in the fuse block (J/B)]
- to combination meter terminal 16.

Ground is supplied

- to BCM terminal 67 and
- to combination meter terminals 13 and 23
- through grounds M57, M61 and M79.

LH Turn

When the turn signal switch is moved to the left position, the BCM, interpreting it as turn signal is ON, outputs turn signal from BCM terminal 60.

The BCM supplies power

- through BCM terminal 60
- to front turn signal lamp LH terminal 1
- through front turn signal lamp LH terminal 3
- to grounds E9, E15 and E24, and
- to rear combination lamp LH (turn signal) terminal 4
- through rear combination lamp LH (turn signal) terminal 5
- to grounds B7 and B19.

TURN SIGNAL AND HAZARD WARNING LAMPS

BCM sends signal to combination meter through CAN communication lines and turns on turn signal indicator lamp within combination meter.

A

RH Turn

When the turn signal switch is moved to the right position, the BCM, interpreting it as turn signal is ON, outputs turn signal from BCM terminal 61.

B

The BCM supplies power

- through BCM terminal 61
- to front turn signal lamp RH terminal 1
- through front turn signal lamp RH terminal 3
- to grounds E9, E15 and E24, and
- to rear combination lamp RH (turn signal) terminal 4
- through rear combination lamp RH (turn signal) terminal 5
- to grounds B117 and B132.

C

D

E

BCM sends signal to combination meter through CAN communication lines, and turns on turn signal indicator lamp within combination meter.

HAZARD LAMP OPERATION

F

Power is supplied at all times

- through 50A fusible link (letter **g** , located in the fuse and fusible link box)
- to BCM terminal 70, and
- through 10A fuse [No. 19, located in the fuse block (J/B)]
- to combination meter terminal 3.

G

H

Ground is supplied

- to BCM terminal 67 and
- to combination meter terminals 13 and 23
- through grounds M57, M61 and M79.

I

When the hazard switch is depressed, ground is supplied

- to BCM terminal 29
- through hazard switch terminal 2
- through hazard switch terminal 1
- through grounds M57, M61 and M79.

J

LT

When the hazard switch is depressed, the BCM, interpreting it as hazard warning lamps are ON, outputs turn signal from BCM terminals 60 and 61.

The BCM supplies power

L

- through BCM terminals 60 and 61
- to front turn signal lamp LH and RH terminal 1
- through front turn signal lamp LH and RH terminal 3
- to grounds E9, E15 and E24, and
- to rear combination lamp LH (turn signal) terminal 4
- through rear combination lamp LH (turn signal) terminal 5
- to grounds B7 and B19, and
- to rear combination lamp RH (turn signal) terminal 4
- through rear combination lamp RH (turn signal) terminal 5
- to grounds B117 and B132.

M

BCM sends signal to combination meter through CAN communication lines and turns on turn signal indicator lamps within combination meter.

REMOTE KEYLESS ENTRY SYSTEM OPERATION

Power is supplied at all times

- through 50A fusible link (letter **g** , located in the fuse and fusible link box)
- to BCM terminal 70, and

TURN SIGNAL AND HAZARD WARNING LAMPS

- through 10A fuse [No. 19, located in the fuse block (J/B)]
- to combination meter terminal 3.

Ground is supplied

- to BCM terminal 67 and
- to combination meter terminals 13 and 23
- through grounds M57, M61 and M79.

When the remote keyless entry system is triggered by input from the keyfob, the BCM, interpreting it as turn signal is ON, outputs turn signal from BCM terminals 60 and 61.

The BCM supplies power

- through BCM terminals 60 and 61
- to front turn signal lamp LH and RH terminal 1
- through front turn signal lamp LH and RH terminal 3
- to grounds E9, E15 and E24, and
- to rear combination lamp LH (turn signal) terminal 4
- through rear combination lamp LH (turn signal) terminal 5
- to grounds B7 and B19, and
- to rear combination lamp RH (turn signal) terminal 4
- through rear combination lamp RH (turn signal) terminal 5
- to grounds B117 and B132.

BCM sends signal to combination meter through CAN communication lines, and turns on turn signal indicator lamps within combination meter.

With power and input supplied, the BCM controls the flashing of the hazard warning lamps when keyfob is used to activate the remote keyless entry system.

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#) .

CAN Communication System Description

Refer to [LAN-25, "CAN COMMUNICATION"](#) .



EKS00FVV

TURN SIGNAL AND HAZARD WARNING LAMPS

Wiring Diagram — TURN —



EKS00FVW

LT-TURN-01

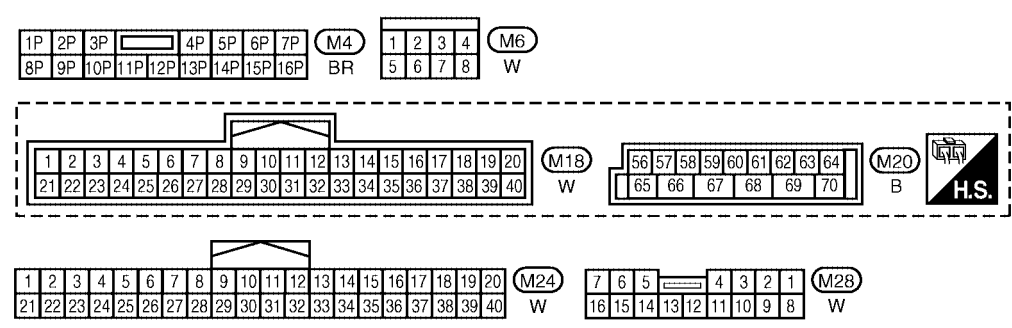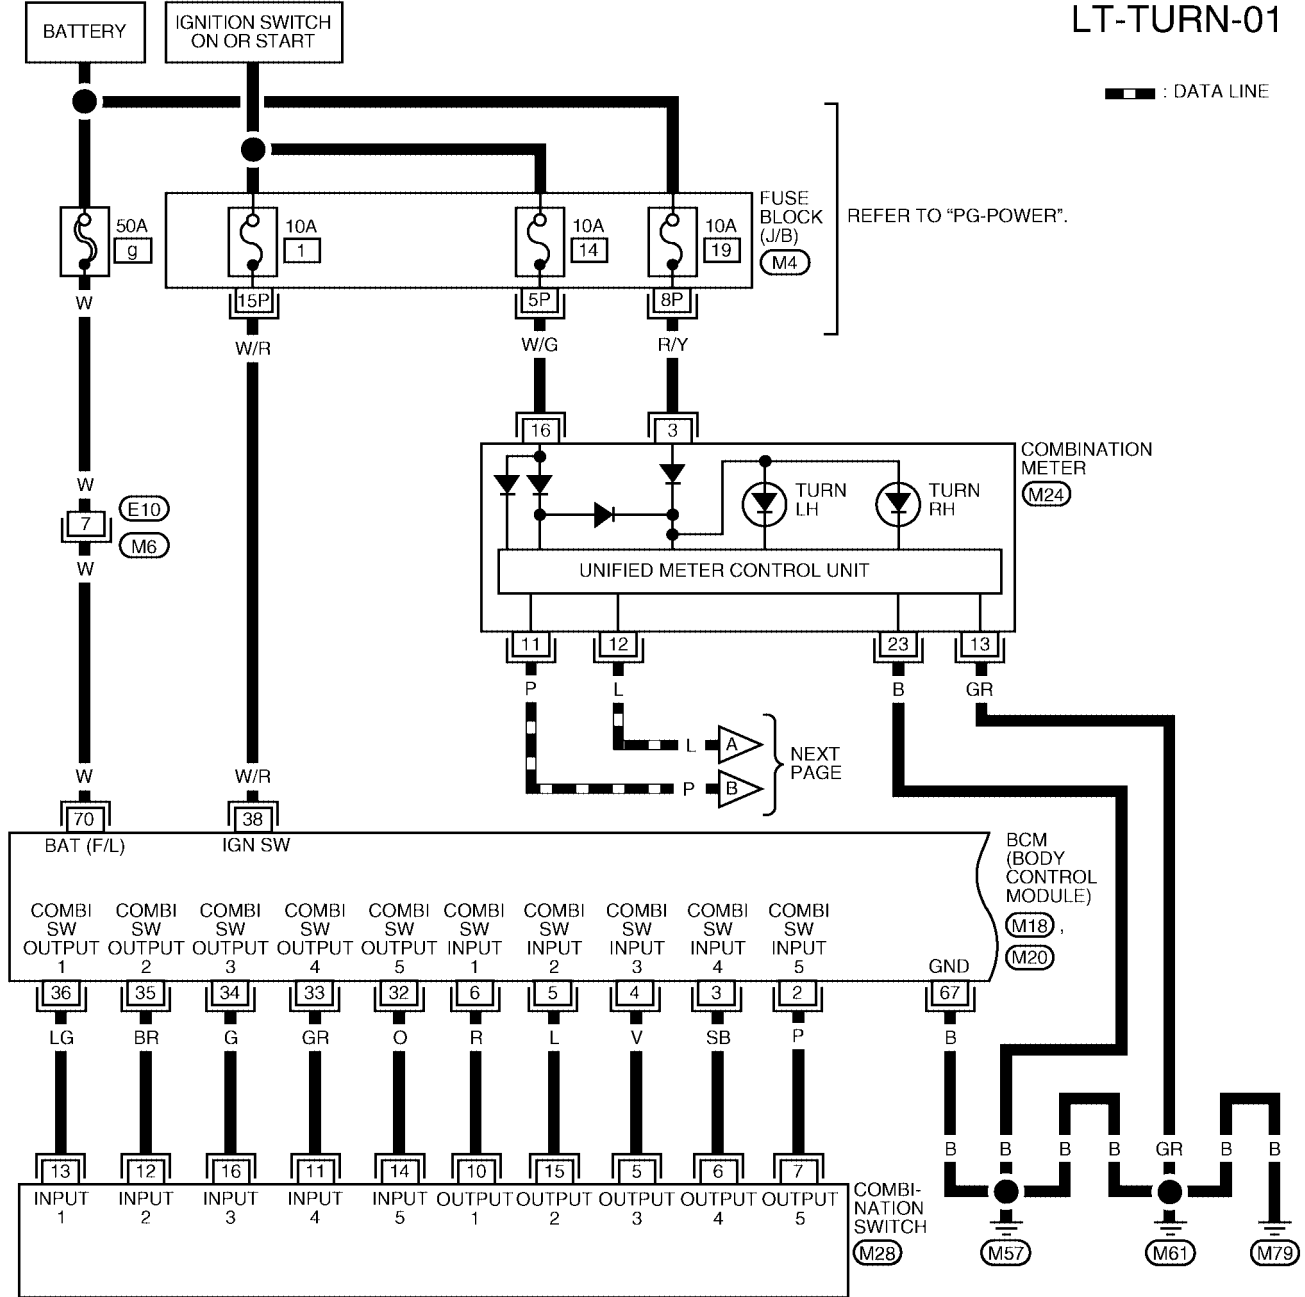

TURN SIGNAL AND HAZARD WARNING LAMPS

LT-TURN-02

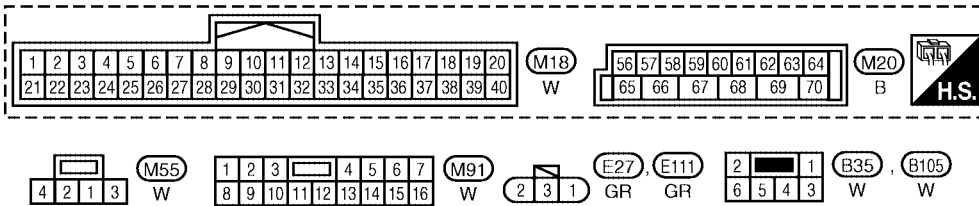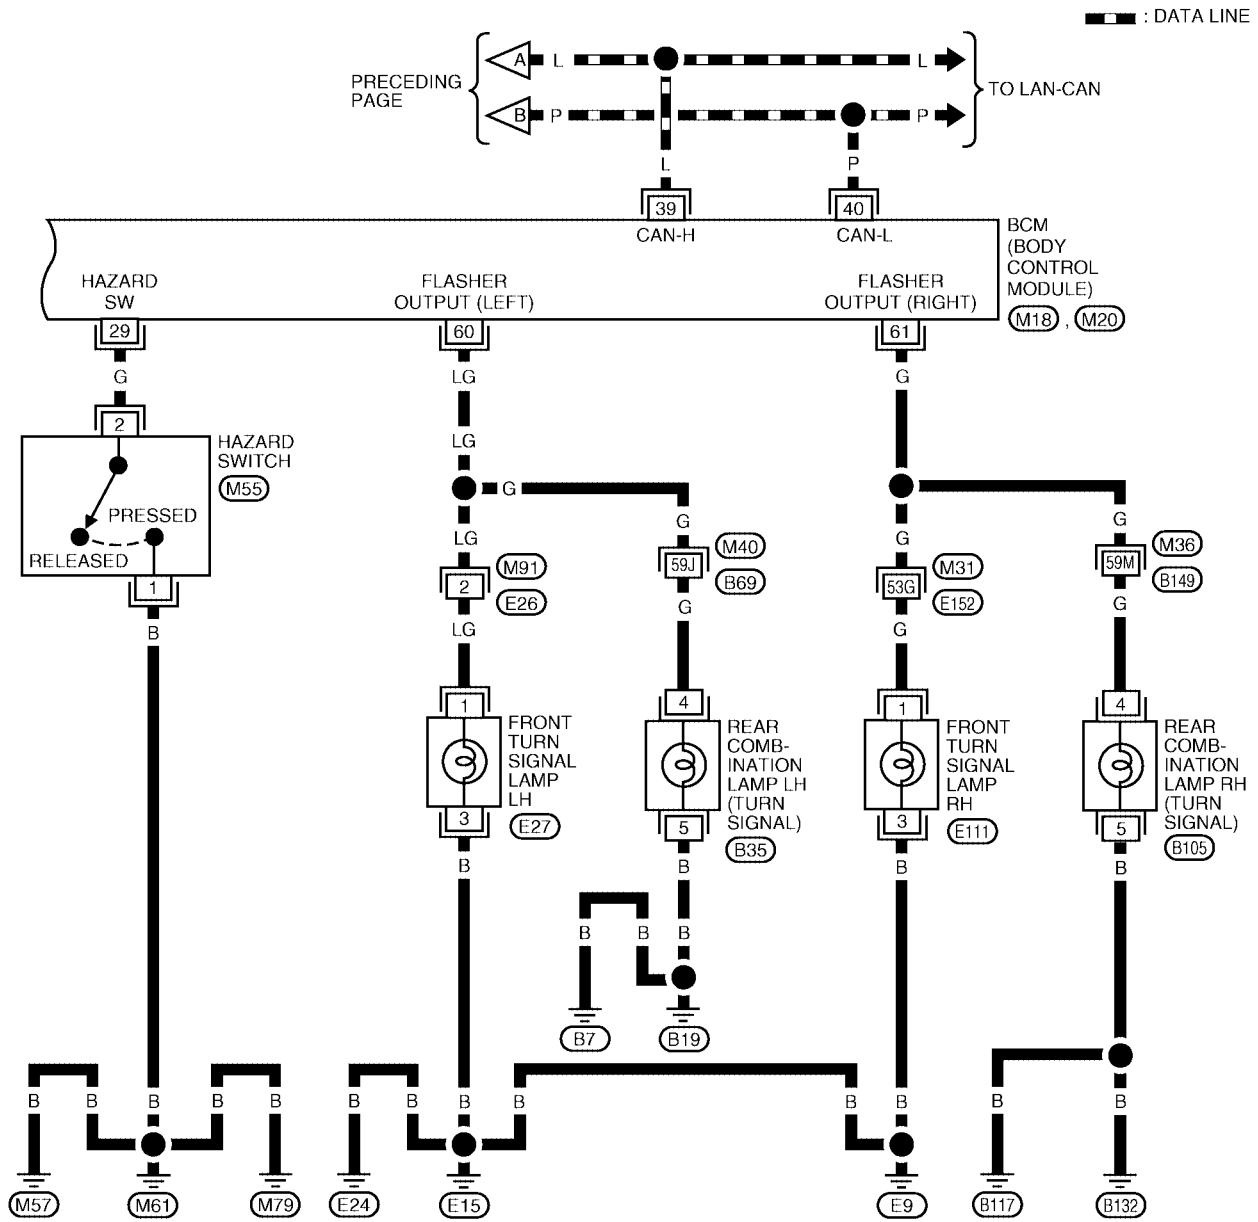

REFER TO THE FOLLOWING.
 (M31), (M36), (M40) - SUPER
 MULTIPLE JUNCTION (SMJ)

WKWA4307E

TURN SIGNAL AND HAZARD WARNING LAMPS

Terminals and Reference Values for BCM

EKS00FVX

Refer to [BCS-12, "Terminals and Reference Values for BCM"](#) .

How to Proceed With Trouble Diagnosis

EKS00FVY

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-64, "System Description"](#) .
3. Perform preliminary check. Refer to [LT-69, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Do turn signal and hazard warning lamps operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

Preliminary Check

EKS00FVZ

CHECK POWER SUPPLY AND GROUND CIRCUIT

Refer to [BCS-16, "BCM Power Supply and Ground Circuit Check"](#) .

CONSULT-II Function (BCM)

EKS00FW0

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

CONSULT-II OPERATION

CAUTION:


If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.

1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

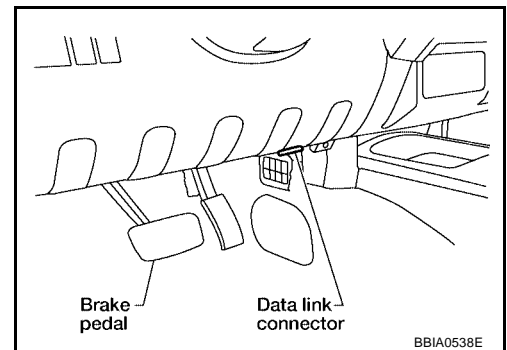


TURN SIGNAL AND HAZARD WARNING LAMPS


2. Touch "START (NISSAN BASED VHCL)".

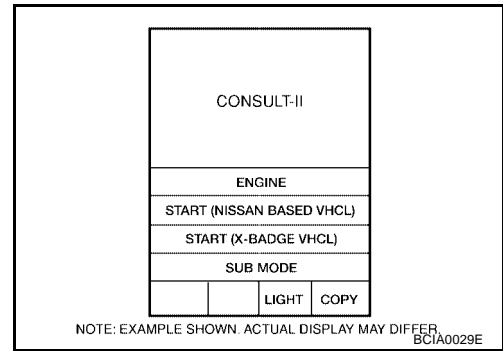

3. Touch "BCM" on "SELECT SYSTEM" screen.
If "BCM" is not indicated, go to [GI-40, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

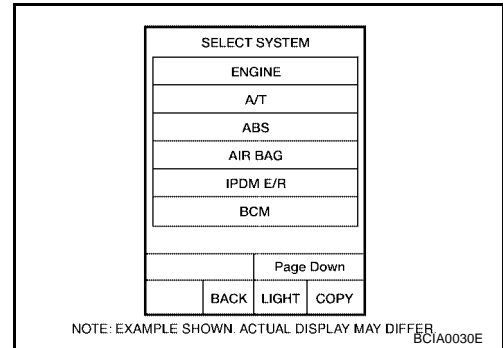

4. Touch "FLASHER" on "SELECT TEST ITEM" screen.

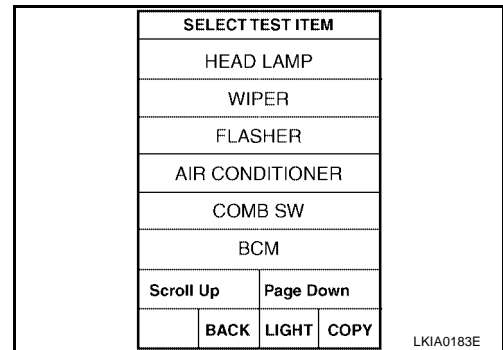

DATA MONITOR

Operation Procedure

1. Touch "FLASHER" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on the "SELECT MONITOR ITEM" screen.

ALL SIGNALS	Monitors all the signals.
SELECTION FROM MENU	Selects and monitors the individual signal.

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

Display Item List

Monitor item	Contents
IGN ON SW "ON/OFF"	Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
HAZARD SW "ON/OFF"	Displays "Hazard ON (ON)/Hazard OFF (OFF)" status, determined from hazard switch signal.

TURN SIGNAL AND HAZARD WARNING LAMPS

Monitor item	Contents	
TURN SIGNAL R	"ON/OFF"	Displays "Turn right (ON)/Other (OFF)" status, determined from lighting switch signal.
TURN SIGNAL L	"ON/OFF"	Displays "Turn left (ON)/Other (OFF)" status, determined from lighting switch signal.
BRAKE SW	"ON/OFF"	Displays status of stop lamp switch.

ACTIVE TEST

Operation Procedure

1. Touch "FLASHER" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" or "OFF" deactivates the operation.

Display Item List

Test item	Description
FLASHER (RH)	Turn signal lamp (right) can be operated by any ON-OFF operations.
FLASHER (LH)	Turn signal lamp (left) can be operated by any ON-OFF operations.

Turn Signal Lamp Does Not Operate

EKS00FW1

1. CHECK COMBINATION SWITCH INPUT SIGNAL

Ⓜ With CONSULT-II

Select "BCM" on CONSULT-II. With "FLASHER" data monitor, make sure "TURN SIGNAL R" and "TURN SIGNAL L" turns ON-OFF linked with operation of lighting switch.

**When lighting switch is in : TURN SIGNAL R ON
TURN RH position**

**When lighting switch is in : TURN SIGNAL L ON
TURN LH position**

ⓧ Without CONSULT-II

Refer to [LT-82, "Combination Switch Inspection"](#) .

OK or NG

OK >> GO TO 2.

NG >> Check lighting switch. Refer to [LT-82, "Combination Switch Inspection"](#) .

DATA MONITOR	
MONITOR	
TURN SIGNAL R	ON
TURN SIGNAL L	ON

SKIA4499E

2. ACTIVE TEST

Ⓜ With CONSULT-II

1. Select "FLASHER" during active test. Refer to [LT-71, "ACTIVE TEST"](#) .
2. Make sure "FLASHER RH" and "FLASHER LH" operate.

ⓧ Without CONSULT-II

GO TO 3.

OK or NG

OK >> Replace BCM. Refer to [BCS-27, "Removal and Installation"](#) .

NG >> GO TO 3.

ACTIVE TEST			
FLASHER		OFF	
RH	LH		
MODE	BACK	LIGHT	COPY

SKIA6190E

TURN SIGNAL AND HAZARD WARNING LAMPS


3. CHECK TURN SIGNAL LAMPS CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and front turn signal lamp LH and RH connectors.
3. Check continuity between BCM harness connector M20 terminal 60 and front turn signal lamp LH harness connector E27 terminal 1.

60 - 1 : Continuity should exist.

4. Check continuity between BCM harness connector M20 terminal 61 and front turn signal lamp RH harness connector E111 terminal 1.

61 - 1 : Continuity should exist.

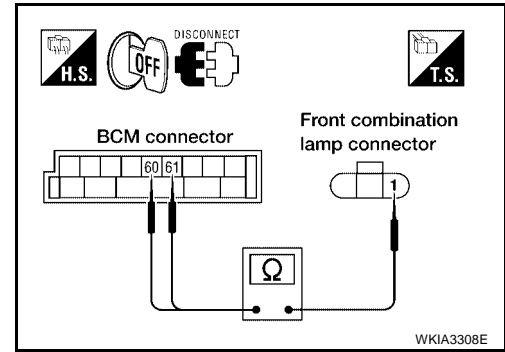

OK or NG

OK >> GO TO 4.

NG >> Repair harness or connector.


4. CHECK GROUND

1. Check continuity between front turn signal lamp LH harness connector E27 terminal 3 and ground.

3 - Ground : Continuity should exist.

2. Check continuity between front turn signal lamp RH harness connector E111 terminal 3 and ground.

3 - Ground : Continuity should exist.

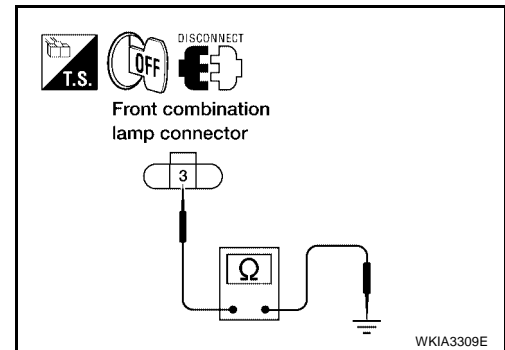

OK or NG

OK >> GO TO 5.

NG >> Repair harness or connector.

5. CHECK BULB

Check bulb standard of each turn signal lamp is correct. Refer to [LT-151, "Exterior Lamp"](#) .

OK or NG

OK >> Replace BCM if turn signal lamps do not work after setting the connector again. Refer to [BCS-27, "Removal and Installation"](#) .

NG >> Replace turn signal lamp bulb. Refer to [LT-27, "FRONT TURN SIGNAL/PARKING LAMP"](#) .

Rear Turn Signal Lamp Does Not Operate

EKS00FW2

1. CHECK TAIL LAMPS AND STOP LAMPS

Check bulb standard of each turn signal lamp is correct. Refer to [LT-151, "Exterior Lamp"](#) .

OK or NG

OK >> GO TO 2.

NG >> Replace turn signal lamp bulb. Refer to [LT-105, "Bulb Replacement"](#) .

TURN SIGNAL AND HAZARD WARNING LAMPS


2. CHECK TURN SIGNAL LAMPS CIRCUIT

1. Disconnect BCM connector and rear combination lamp connector.
2. Check continuity between BCM harness connector M20 terminal 61 and rear combination lamp RH harness connector B105 terminal 4.

61 - 4 : Continuity should exist.

3. Check continuity between BCM harness connector M20 terminal 60 and rear combination lamp LH harness connector B35 terminal 4.

60 - 4 : Continuity should exist.

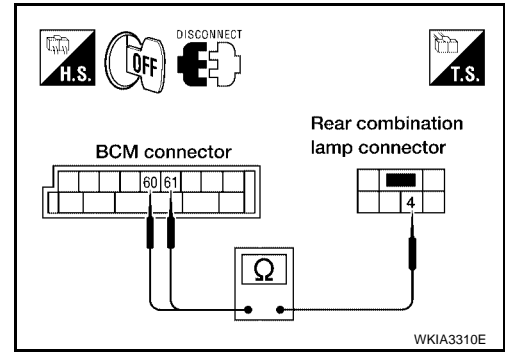

OK or NG

- OK >> GO TO 3.
- NG >> Repair harness or connector.


3. CHECK GROUND CIRCUIT

Check continuity between rear combination lamp harness connector B35 (LH) and B105 (RH) terminal 5 and ground.

5 - Ground : Continuity should exist.

OK or NG

- OK >> Check rear combination lamp connector for proper connection. Repair as necessary.
- NG >> Repair harness or connector.

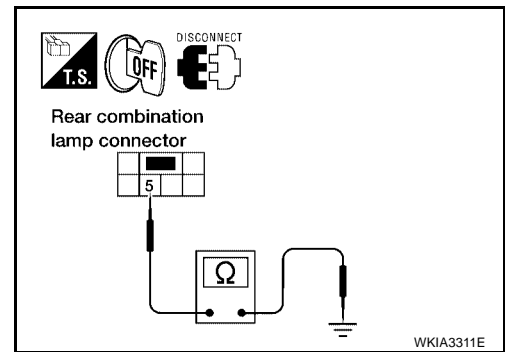

Hazard Warning Lamp Does Not Operate But Turn Signal Lamps Operate

EKS00FW3

1. CHECK BULB

Make sure bulb standard of each turn signal lamp is correct. Refer to [LT-151, "Exterior Lamp"](#).

OK or NG


- OK >> GO TO 2.
- NG >> Replace turn signal lamp bulb. Refer to [LT-27, "FRONT TURN SIGNAL/PARKING LAMP"](#) for front turn signal bulb. Refer to [LT-105, "Bulb Replacement"](#) for rear turn signal bulb.

TURN SIGNAL AND HAZARD WARNING LAMPS

2. CHECK HAZARD SWITCH INPUT SIGNAL

Ⓜ With CONSULT-II
 Select "BCM" on CONSULT-II. With "FLASHER" data monitor, make sure "HAZARD SW" turns ON-OFF linked with operation of hazard switch.

When hazard switch is in ON position : HAZARD SW ON

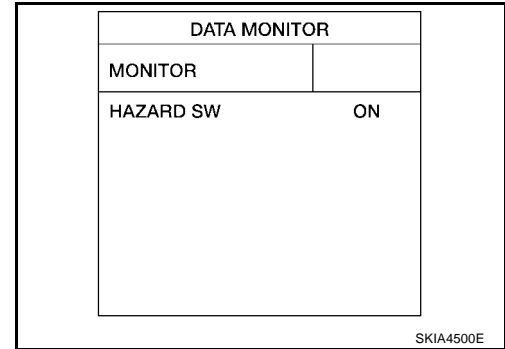


⊗ Without CONSULT-II
 Check voltage between BCM harness connector M18 terminal 29 and ground.

BCM (+)		(-)	Condition	Voltage (Approx.)
Connector	Terminal			
M18	29	Ground	Hazard switch is ON	0V
			Hazard switch is OFF	5V

OK or NG

- OK >> Replace BCM. Refer to [BCS-27, "Removal and Installation"](#).
- NG >> GO TO 3.

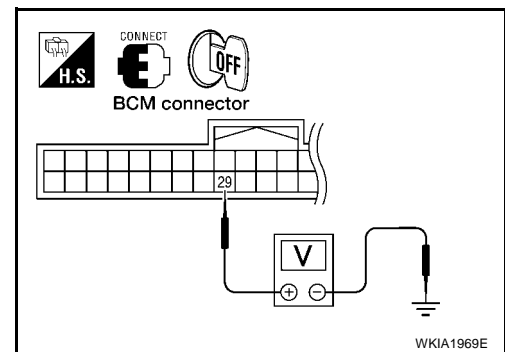


3. CHECK HAZARD SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and hazard switch connector.
3. Check continuity between BCM harness connector M18 terminal 29 and hazard switch harness connector M55 terminal 2.

29 - 2 : Continuity should exist.

OK or NG

- OK >> GO TO 4.
- NG >> Repair harness or connector.

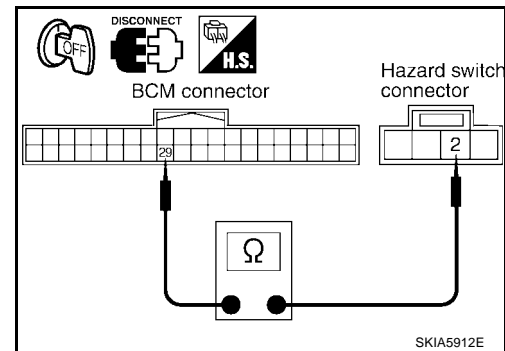


4. CHECK GROUND

Check continuity between hazard switch harness connector M55 terminal 1 and ground.

1 - Ground : Continuity should exist.

OK or NG

- OK >> GO TO 5.
- NG >> Repair harness or connector.

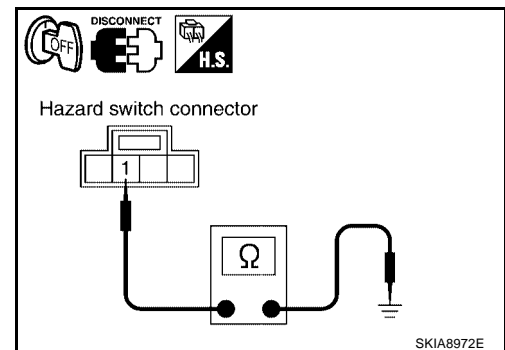

TURN SIGNAL AND HAZARD WARNING LAMPS

5. CHECK HAZARD SWITCH


1. Disconnect hazard switch connector.
2. Check continuity of hazard switch.

Hazard switch		Condition	Continuity
Terminal			
2	1	Hazard switch is ON	Yes
		Hazard switch is OFF	No

OK or NG

OK >> Replace BCM if hazard warning lamps do not work after setting the connector again. Refer to [BCS-27, "Removal and Installation"](#) .

NG >> Replace hazard switch. Refer to [LT-78, "Removal and Installation"](#) .

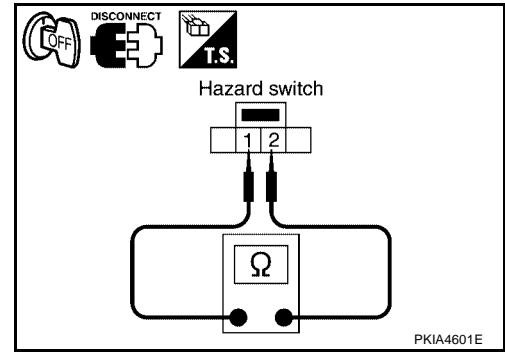

Turn Signal Indicator Lamp Does Not Operate

EKS00FW4

1. CHECK CAN COMMUNICATION SYSTEM

Check CAN communication. Refer to [LAN-25, "CAN COMMUNICATION"](#) .

OK or NG

OK >> Replace combination meter. Refer to [IP-14, "COMBINATION METER"](#) .

NG >> Repair as necessary.

A
B
C
D
E
F
G
H
I
J
LT
L
M

LT

TURN SIGNAL AND HAZARD WARNING LAMPS

Bulb Replacement

EKS00FW5

FRONT TURN SIGNAL LAMP

Refer to [LT-27, "FRONT TURN SIGNAL/PARKING LAMP"](#) .

REAR TURN SIGNAL LAMP

Refer to [LT-105, "Bulb Replacement"](#) .

Removal and Installation

EKS00FW7

FRONT TURN SIGNAL LAMP

Refer to [LT-27, "Removal and Installation"](#) .

REAR TURN SIGNAL LAMP

Refer to [LT-105, "Removal and Installation"](#) .

LIGHTING AND TURN SIGNAL SWITCH

LIGHTING AND TURN SIGNAL SWITCH


PF2:25540

Removal and Installation

EKS00FW9

REMOVAL

1. Remove instrument lower cover LH. Refer to [IP-14, "LOWER INSTRUMENT PANEL LH"](#) .
2. Remove steering column cover.
3. Disconnect the lighting and turn signal switch connector.
4. While pressing tabs, pull lighting and turn signal switch toward driver door and release from the steering column.

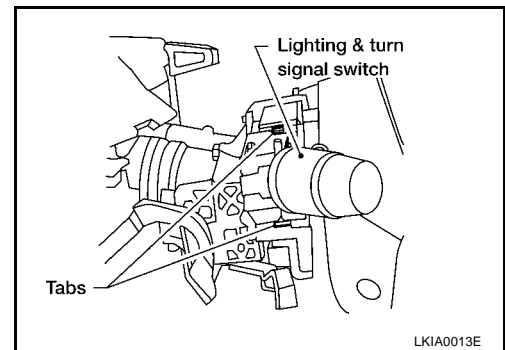

INSTALLATION

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
LT
L
M

HAZARD SWITCH

PFP:25290


HAZARD SWITCH

Removal and Installation

EKS00FWA

REMOVAL

1. Remove cluster lid C. Refer to [IP-11, "CLUSTER LID C -WITHOUT NAVIGATION SYSTEM"](#) .
2. Disconnect the hazard switch connector.
3. Remove the screws and remove the hazard switch.

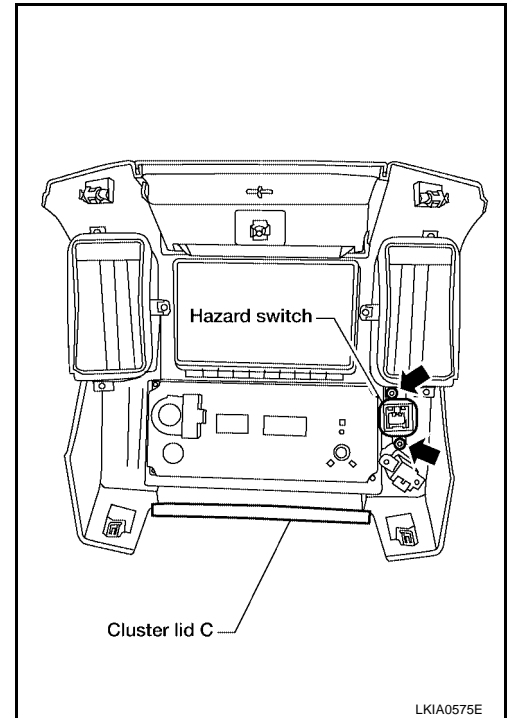

INSTALLATION

Installation is in the reverse order of removal.

COMBINATION SWITCH

COMBINATION SWITCH





PFP:25567

Wiring Diagram — COMBSW —

EKS00FWB

LT-COMBSW-01

▬ : DATA LINE

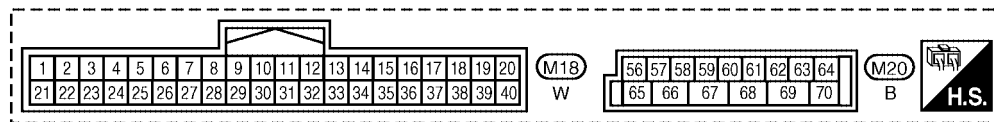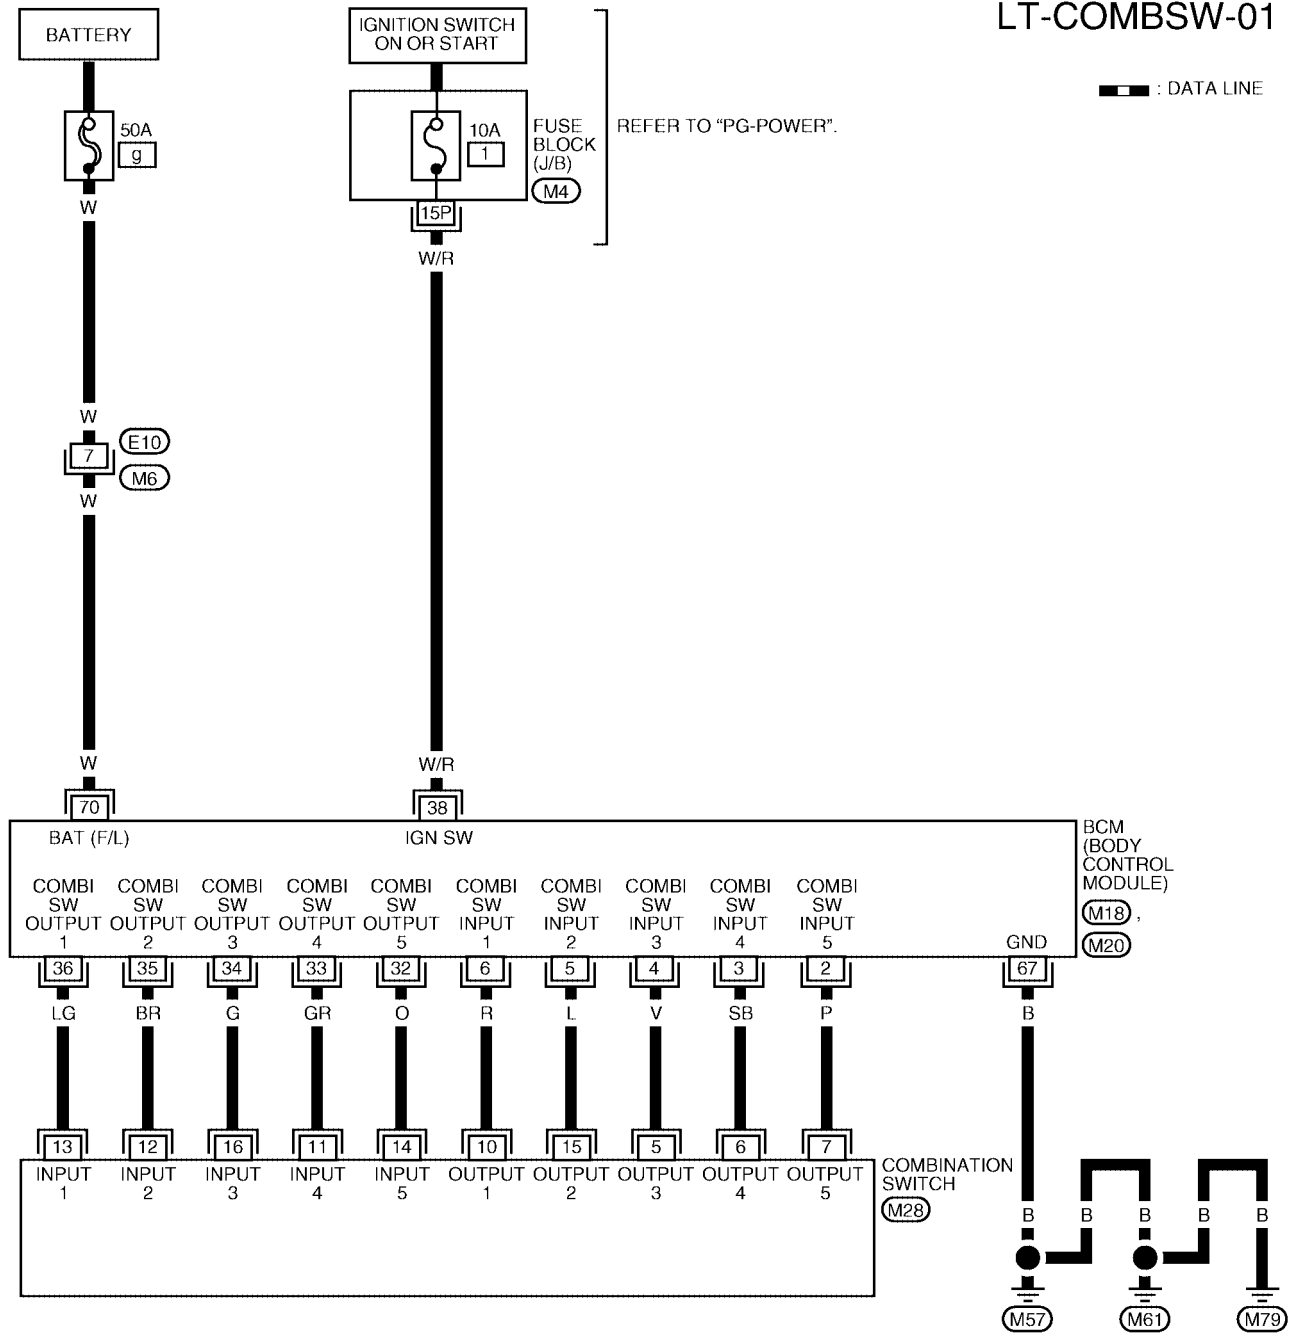

WKWA4229E

COMBINATION SWITCH

Combination Switch Reading Function

EKS00FWC

For details, refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#).

CONSULT-II Function (BCM)

EKS00FWD

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

CONSULT-II OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

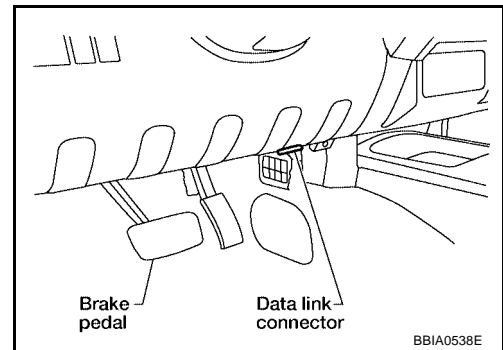

2. Touch "START (NISSAN BASED VHCL)".

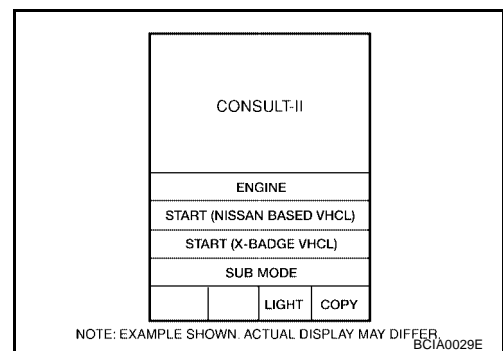


3. Touch "BCM" on "SELECT SYSTEM" screen.
If "BCM" is not indicated, go to [GI-40, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

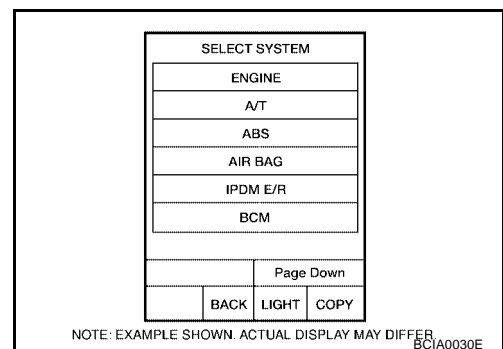

COMBINATION SWITCH

4. Touch "COMB SW" on "SELECT TEST ITEM" screen.

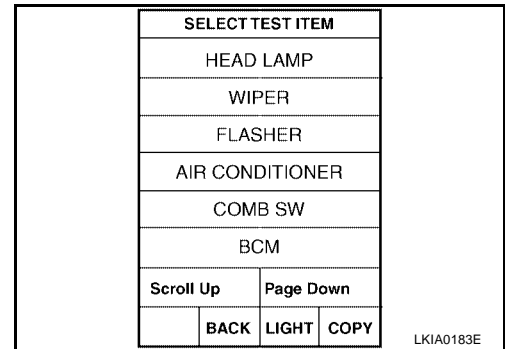

DATA MONITOR

Operation Procedure

1. Touch "COMB SW" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on "SELECT MONITOR ITEM" screen.

ALL SIGNALS	Monitors all the signals.
SELECTION FROM MENU	Selects and monitors individual signal.

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch items to be monitored. When "ALL SIGNALS" is selected, all the signals will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

Display Item List

Monitor item name "OPERATION OR UNIT"	Contents
TURN SIGNAL R "ON/OFF"	Displays "Turn Right (ON)/Other (OFF)" status, determined from lighting switch signal.
TURN SIGNAL L "ON/OFF"	Displays "Turn Left (ON)/Other (OFF)" status, determined from lighting switch signal.
HI BEAM SW "ON/OFF"	Displays status (high beam switch: ON/Others: OFF) of high beam switch judged from lighting switch signal.
HEAD LAMP SW 1 "ON/OFF"	Displays "Headlamp switch 1 (ON)/Other (OFF)" status, determined from lighting switch signal.
HEAD LAMP SW 2 "ON/OFF"	Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
LIGHT SW 1ST "ON/OFF"	Displays status (lighting switch 1st position: ON/Others: OFF) of lighting switch judged from lighting switch signal.
PASSING SW "ON/OFF"	Displays status (flash-to-pass switch: ON/Others: OFF) of flash-to-pass switch judged from lighting switch signal.
AUTO LIGHT SW "ON/OFF"	Displays "Auto light switch (ON)/Other (OFF)" status, determined from lighting switch signal.
FR FOG SW "ON/OFF"	Displays "Front fog lamp switch (ON)/Other (OFF)" status, determined from lighting switch signal.
FR WIPER HI "ON/OFF"	Displays "Front Wiper HI (ON)/Other (OFF)" status, determined from wiper switch signal.
FR WIPER LOW "ON/OFF"	Displays "Front Wiper LOW (ON)/Other (OFF)" status, determined from wiper switch signal.
FR WIPER INT "ON/OFF"	Displays "Front Wiper INT (ON)/Other (OFF)" status, determined from wiper switch signal.
FR WASHER SW "ON/OFF"	Displays "Front Washer Switch (ON)/Other (OFF)" status, determined from wiper switch signal.
INT VOLUME [1 - 7]	Displays intermittent operation knob setting (1 - 7), determined from wiper switch signal.
RR WIPER ON "ON/OFF"	Displays "Rear Wiper (ON)/(OFF)" status, determined from wiper switch signal.
RR WIPER INT "ON/OFF"	Displays "Rear Wiper INT (ON)/(OFF)" status, determined from wiper switch signal.
RR WASHER SW "ON/OFF"	Displays "Rear Washer (ON)/(OFF)" status, determined from wiper switch signal.

COMBINATION SWITCH

EKS00FWE

Combination Switch Inspection

1. SYSTEM CHECK

Referring to table below, check to which system the malfunctioning switch belongs.

System 1	System 2	System 3	System 4	System 5
—	FR WASHER	FR WIPER LO	TURN LH	TURN RH
FR WIPER HI	—	FR WIPER INT	PASSING	HEAD LAMP1
INT VOLUME 1	RR WASHER	—	HEAD LAMP2	HI BEAM
RR WIPER INT	INT VOLUME 3	AUTO LIGHT	—	TAIL LAMP
INT VOLUME 2	RR WIPER ON	—	FR FOG	—

>> GO TO 2.

2. SYSTEM CHECK

 With CONSULT-II

CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.

1. Connect CONSULT-II, and select "COMB SW" on "SELECT TEST ITEM" screen.
2. Select "DATA MONITOR".
3. Select "START", and confirm that other switches in malfunctioning system operate normally.

Example: When auto light switch is malfunctioning, confirm that "FRONT WIPER LOW" and "FRONT WIPER INT" in System 3, to which the auto light switch belongs, turn ON-OFF normally.

DATA MONITOR	
MONITOR	
TURN SIGNAL R	OFF
TURN SIGNAL L	OFF
HIBEAM SW	OFF
HEAD LAMP SW1	OFF
HEAD LAMP SW2	OFF
LIGHT SW 1ST	OFF
PASSING SW	OFF
AUTO LIGHT SW	OFF
FR FOG SW	OFF
	Page Down
	RECORD
MODE	BACK
LIGHT	COPY

SKIA7075E

 Without CONSULT-II

Operate combination switch, and confirm that other switches in malfunctioning system operate normally.

Example: When auto light switch is malfunctioning, confirm that "FRONT WIPER LOW" and "FRONT WIPER INT" in System 3, to which the auto light switch belongs, operate normally.

Check results

Other switches in malfunctioning system operate normally.>>Replace lighting switch or wiper switch.


Other switches in malfunctioning system do not operate normally.>>GO TO 3.

COMBINATION SWITCH

3. HARNESS INSPECTION

1. Turn ignition switch OFF.
2. Disconnect BCM and combination switch connectors.
3. Check for continuity between BCM harness connector of the suspect system and the corresponding combination switch connector terminals.

Suspect system	BCM		Combination switch		Continuity
	Connector	Terminal	Connector	Terminal	
1	M18	Input 1	6	M28	10
		Output 1	36		13
2		Input 2	5		15
		Output 2	35		12
3		Input 3	4		5
		Output 3	34		16
4		Input 4	3		6
		Output 4	33		11
5		Input 5	2		7
		Output 5	32		14

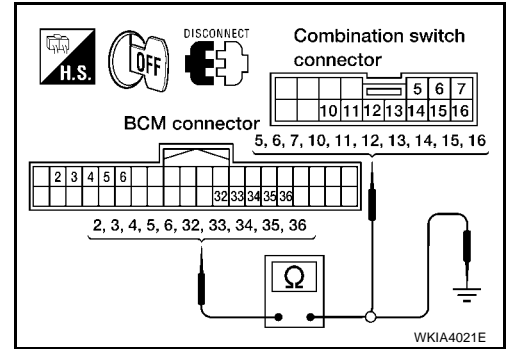

4. Check for continuity between each terminal of BCM harness connector in suspect malfunctioning system and ground.

Suspect system	BCM		Continuity		
	Connector	Terminal			
1	M18	Input 1	6	Ground	No
		Output 1	36		
2		Input 2	5		
		Output 2	35		
3		Input 3	4		
		Output 3	34		
4		Input 4	3		
		Output 4	33		
5		Input 5	2		
		Output 5	32		

OK or NG

OK >> GO TO 4.

NG >> Check harness between BCM and combination switch for open or short circuit.

COMBINATION SWITCH


4. BCM OUTPUT TERMINAL INSPECTION

1. Connect BCM and combination switch connectors.
2. Turn lighting switch and wiper switch to OFF.
3. Set wiper dial to position 4.
4. Turn ignition switch ON, and check combination switch input (BCM output) terminal voltage waveform of suspect malfunctioning system.

Suspect system	Combination switch		
	(+)		
	Connector	Terminal	
1	M28	Input 1	13
2		Input 2	12
3		Input 3	16
4		Input 4	11
5		Input 5	14

OK or NG

- OK >> Open circuit in combination switch, GO TO 5.
 NG >> Replace BCM. Refer to [BCS-27, "Removal and Installation"](#) .

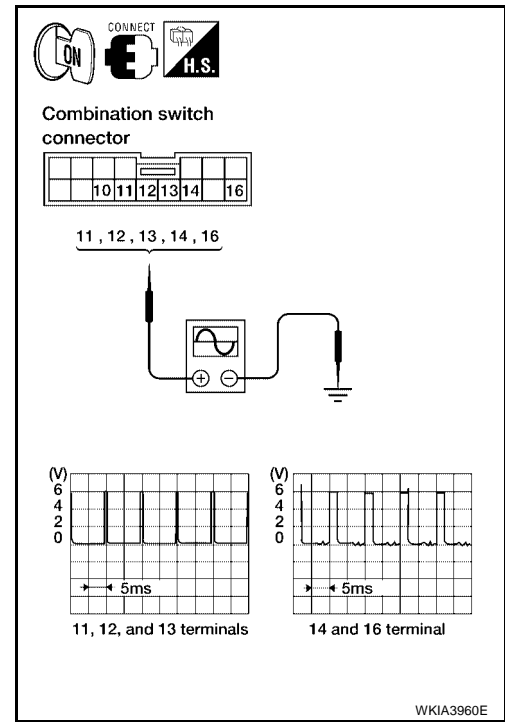

5. COMBINATION SWITCH INSPECTION

Referring to table below, perform combination switch inspection.

Procedure									
1	2		3	4		5	6		7
Replace lighting switch.	Confirm check results.	OK	INSPECTION END	Confirm check results.	OK	INSPECTION END	Confirm check results.	OK	INSPECTION END
		NG	Replace wiper switch.		NG	Replace switch base.		NG	Confirm symptom again.

>> Inspection End.

Removal and Installation

For details, refer to [LT-77, "Removal and Installation"](#) .

Switch Circuit Inspection

For details, refer to [LT-82, "Combination Switch Inspection"](#) .

EKS00FWF

EKS00FWG

STOP LAMP

STOP LAMP

PFP:26550

System Description

EKS00FWH

Power is supplied at all times

- through 10A fuse [No. 20, located in fuse block (J/B)]
- to stop lamp switch terminal 1, and
- to stop lamp relay terminals 2 and 3 (with hill descent control and hill start assist).

When the brake pedal is pressed, the stop lamp switch is closed and power is supplied

- through stop lamp switch terminal 2
- to rear combination lamp LH and RH terminal 2
- to high-mounted stop lamp terminal 1
- to ABS actuator and electric unit (control unit) terminal 41.

Ground is supplied

- to rear combination lamp LH terminal 5
- through grounds B7 and B19, and
- to high-mounted stop lamp terminal 2
- through grounds D406 and D504, and
- to rear combination lamp RH terminal 5
- through grounds B117 and B132.

With power and ground supplied, the stop lamps illuminate.

A
B
C
D
E
F
G
H
I
J
LT
L
M


LT

STOP LAMP

Wiring Diagram — STOP/L —

EKS00FWI


LT-STOP/L-01

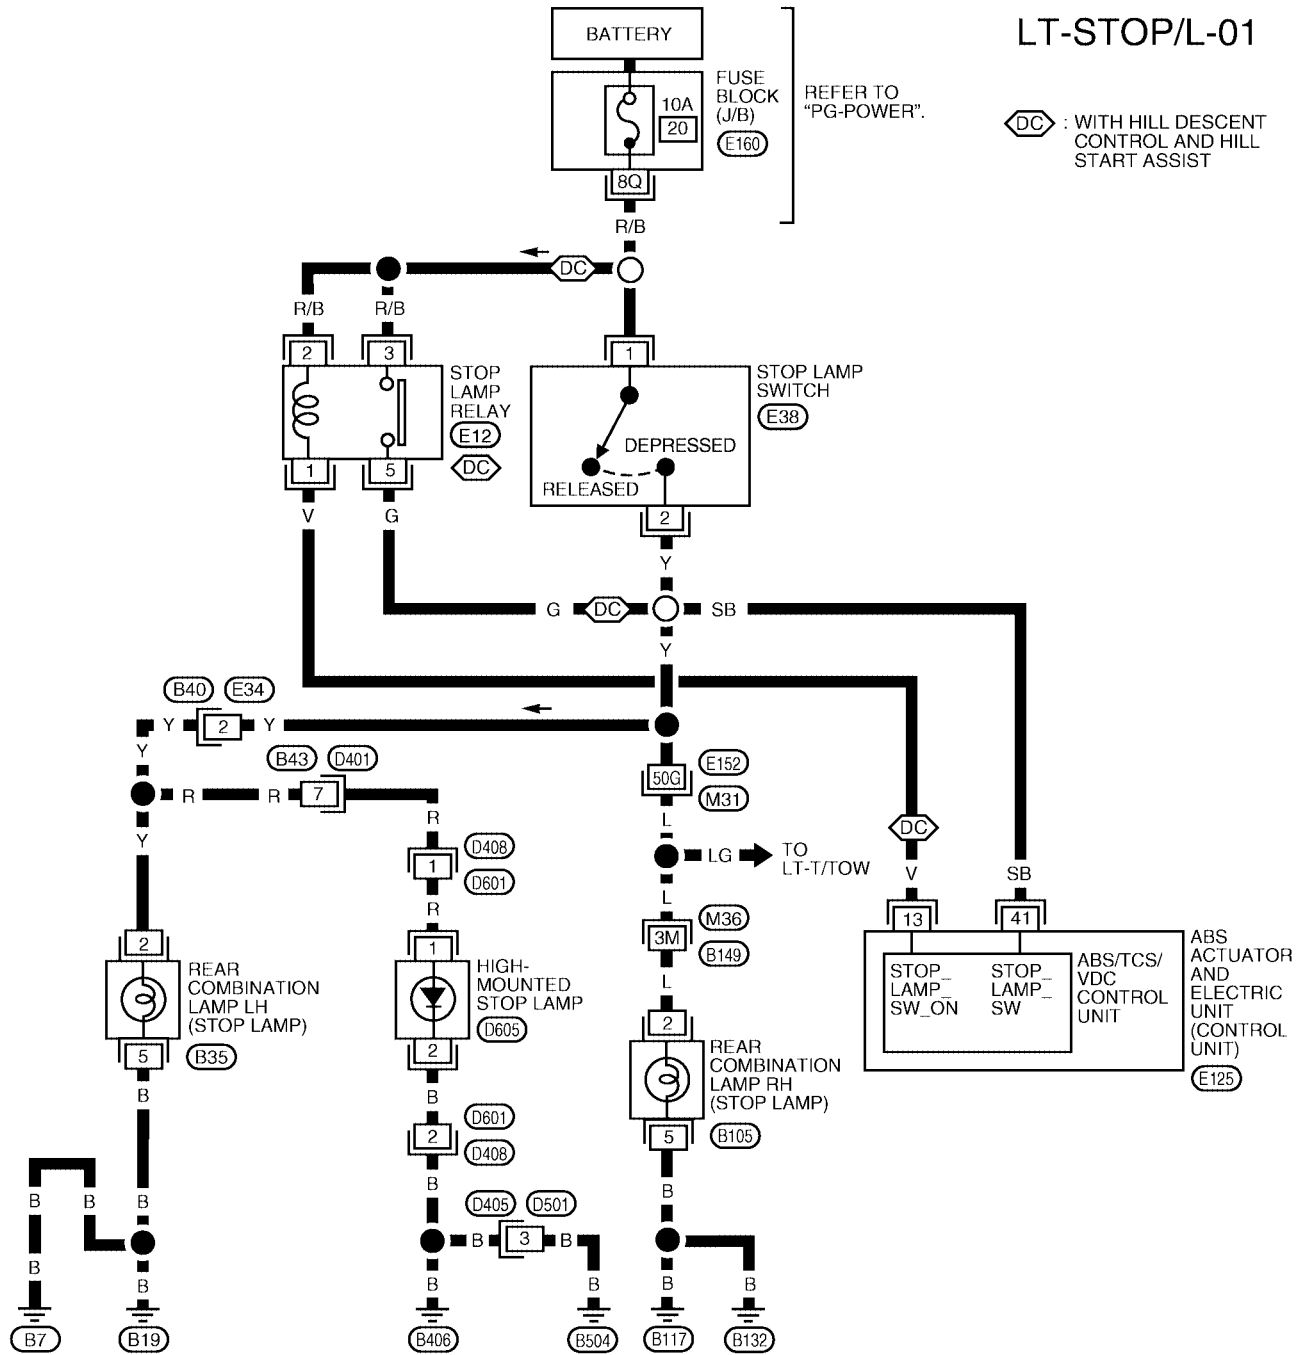

REFER TO THE FOLLOWING.

(M31), (M36) - SUPER MULTIPLE JUNCTION (SMJ)

(E125) - ELECTRICAL UNITS

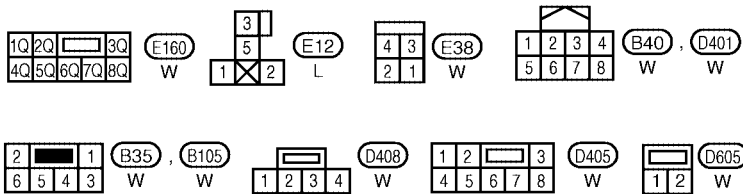

WKWA4341E

STOP LAMP

High-Mounted Stop Lamp BULB REPLACEMENT


EKS00FWJ

The high-mounted stop lamp bulbs are not serviceable.

REMOVAL AND INSTALLATION

Removal

1. Remove back door window garnish.
2. Disconnect high-mounted stop lamp connector.
3. Remove nuts and remove high-mounted stop lamp.

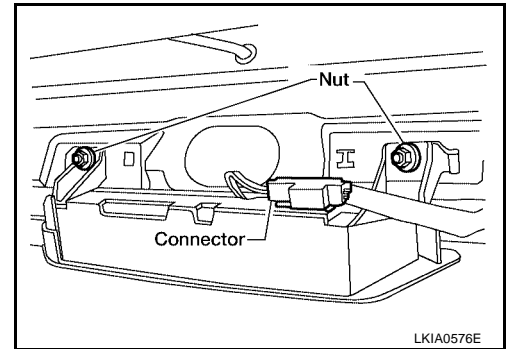

Installation

Installation is in the reverse order of removal.

Stop Lamp BULB REPLACEMENT

EKS00FWK

Refer to [LT-105, "Bulb Replacement"](#) .

REMOVAL AND INSTALLATION

Refer to [LT-105, "Removal and Installation"](#) .

A
B
C
D
E
F
G
H
I
J
LT
L
M

BACK-UP LAMP



PF2:26550

BACK-UP LAMP

Wiring Diagram — BACK/L —

EKS00FWL

LT-BACK/L-01

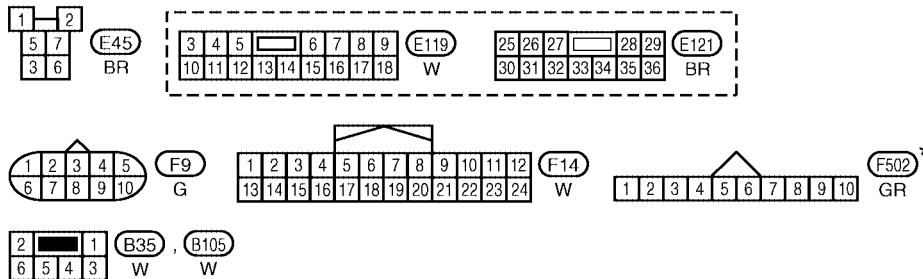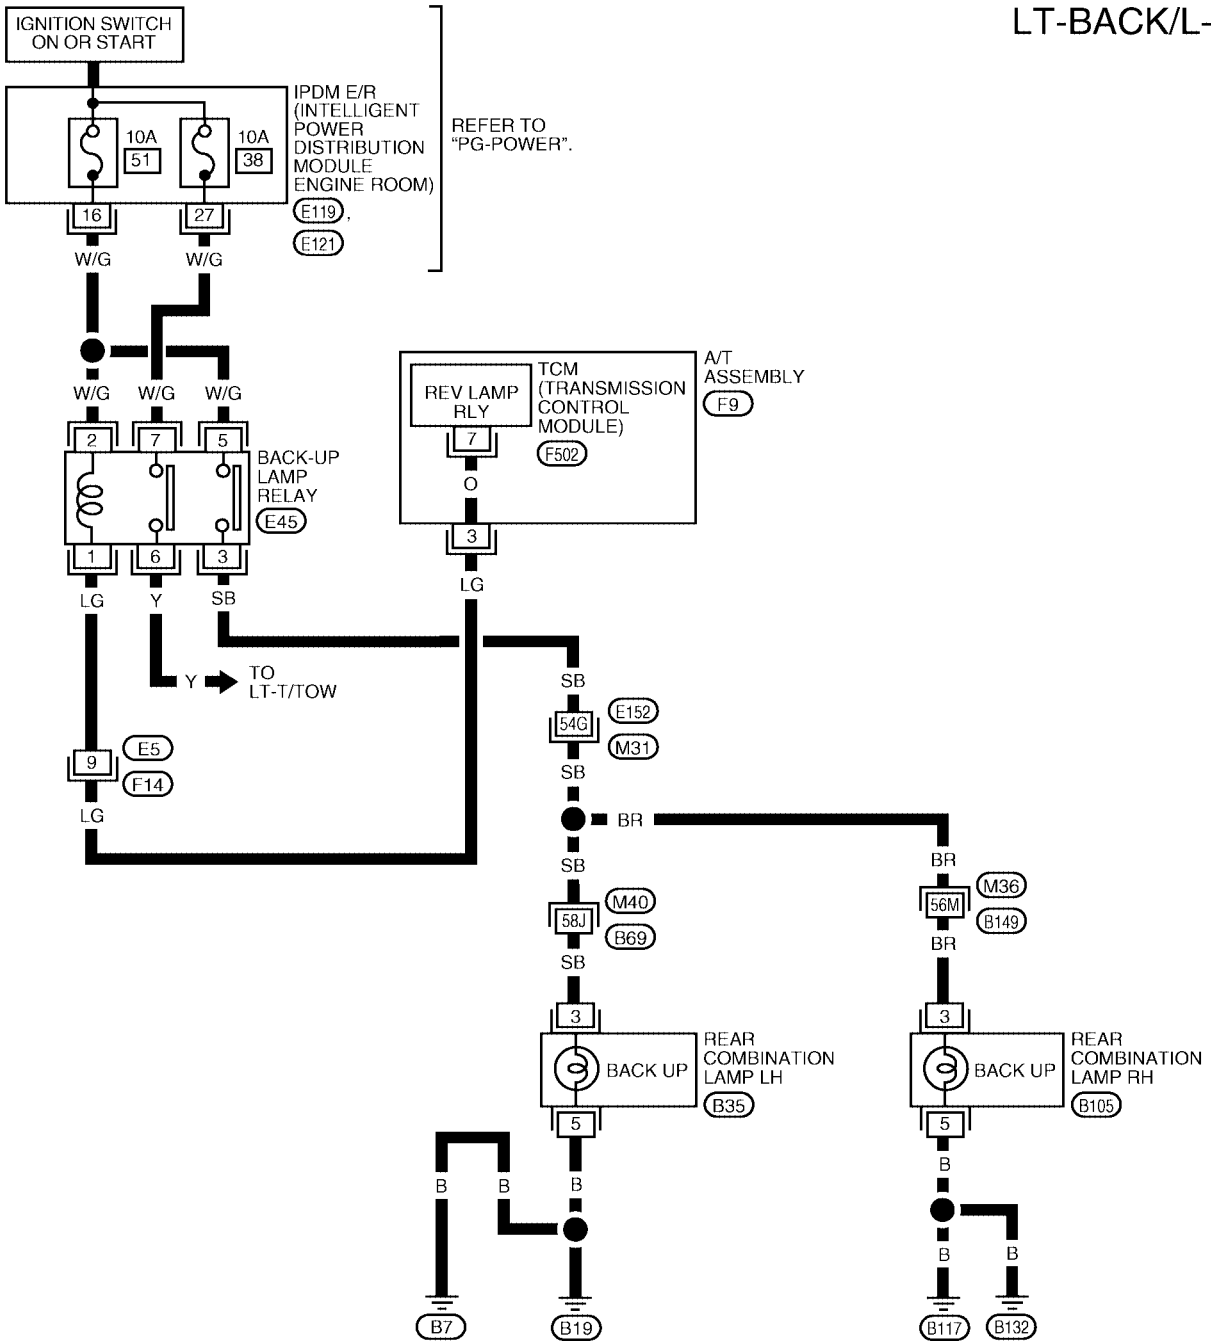

REFER TO THE FOLLOWING.
 (M31) (M36) (M40) - SUPER
 MULTIPLE JUNCTION (SMJ)

*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

WKWA4230E

BACK-UP LAMP

Bulb Replacement

EKS00FWM

Refer to [LT-105, "Bulb Replacement"](#) .

A

Removal and Installation

EKS00FWM

Refer to [LT-105, "Removal and Installation"](#) .

B

C

D

E

F

G

H

I

J

LT

L

M


PARKING, LICENSE PLATE AND TAIL LAMPS

PARKING, LICENSE PLATE AND TAIL LAMPS

PF2:26550

Component Parts and Harness Connector Location

EKS00FWO

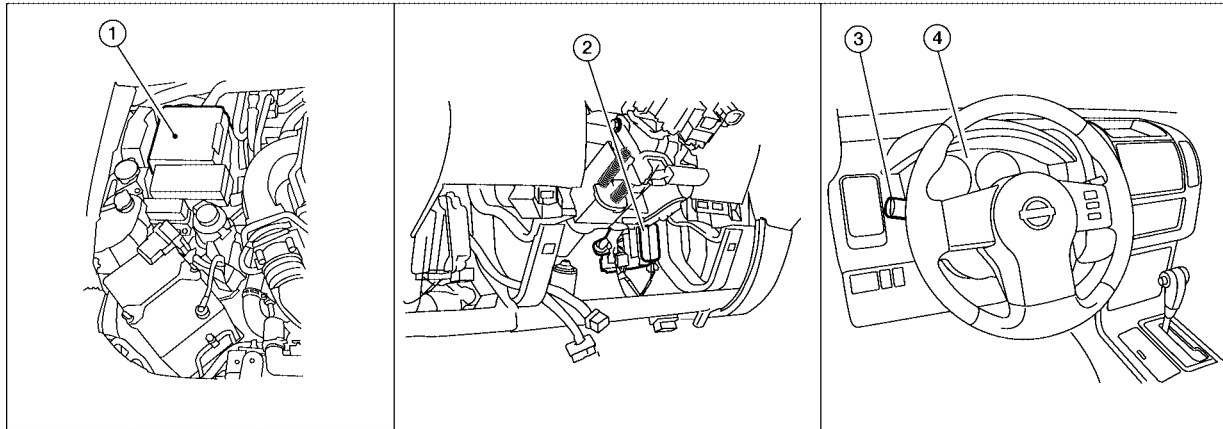

WKIA4963E

- | | | |
|--|--|--|
| 1. IPDM E/R
E118, E119, E120, E121,
E122, E123, E124 | 2. BCM
M18, M19, M20
(view with instrument lower panel LH removed) | 3. Combination switch (lighting switch)
M28 |
| 4. Combination meter
M24 | | |

System Description

EKS00FWP

Control of the parking, front side marker, license plate, and tail lamp operation is dependent upon the position of the lighting switch (combination switch). When the lighting switch is placed in the 1ST position, the BCM (body control module) receives input signal requesting the parking, front side marker, license plate and tail lamps to illuminate. This input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the tail lamp relay coil. This relay, when energized, directs power to the parking, front side marker, license plate and tail lamps, which then illuminate.

Power is supplied at all times

- to ignition relay, located in the IPDM E/R, and
- to tail lamp relay, located in the IPDM E/R, and
- through 20A fuse (No. 53, located in the IPDM E/R)
- to CPU of the IPDM E/R, and
- through 50A fusible link (letter **g**, located in the fuse and fusible link box)
- to BCM terminal 70.

With the ignition switch in the ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R.
- through 10A fuse [No. 1, located in the fuse block (J/B)]
- to BCM terminal 38 and

Ground is supplied

- to BCM terminal 67
- through grounds M57, M61 and M79, and
- to IPDM E/R terminals 38 and 59
- through grounds E9, E15 and E24.

OPERATION BY LIGHTING SWITCH

With the lighting switch in the 1ST or 2ND position (or if the auto light system is activated), the BCM receives input signal requesting the parking, front side marker, license plate and tail lamps to illuminate. This input signal is communicated to the IPDM E/R across the CAN communication lines. The CPU in the IPDM E/R controls the tail lamp relay coil, which when energized, directs power

PARKING, LICENSE PLATE AND TAIL LAMPS

- through 10A fuse (No. 37, located in the IPDM E/R)
- through IPDM E/R terminal 57
- to license plate lamp LH and RH terminal 1
- to rear combination lamp LH and RH (tail/side marker) terminal 1, and
- through 10A fuse (No. 36, located in the IPDM E/R)
- through IPDM E/R terminals 28 and 49
- to front side marker lamp LH and RH terminal 1
- to front parking lamp LH and RH terminal 2.

Ground is supplied

- to front side marker lamp LH and RH terminal 2
- to front parking lamp LH and RH terminal 3
- through grounds E9, E15 and E24, and
- to license plate lamp LH and RH terminal 2
- through grounds D406 and D504, and
- to rear combination lamp LH (tail/side marker) terminal 5
- through grounds B7 and B19, and
- to rear combination lamp RH (tail/side marker) terminal 5
- through grounds B117 and B132.

With power and ground supplied, the parking, side marker, license plate and tail lamps illuminate.

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#).

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 1ST (or 2ND) position, and the ignition switch is turned from ON or ACC to OFF, the battery saver control feature is activated.

Under this condition, the parking, front side marker, license and tail lamps remain illuminated for 5 minutes, then the parking, front side marker, license plate and tail lamps are turned off.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

CAN Communication System Description

EKS00FW0

Refer to [LAN-25, "CAN COMMUNICATION"](#).

A

B

C

D

E

F

G

H

I

J

LT


L

M

PARKING, LICENSE PLATE AND TAIL LAMPS

Schematic

EKS00FWR

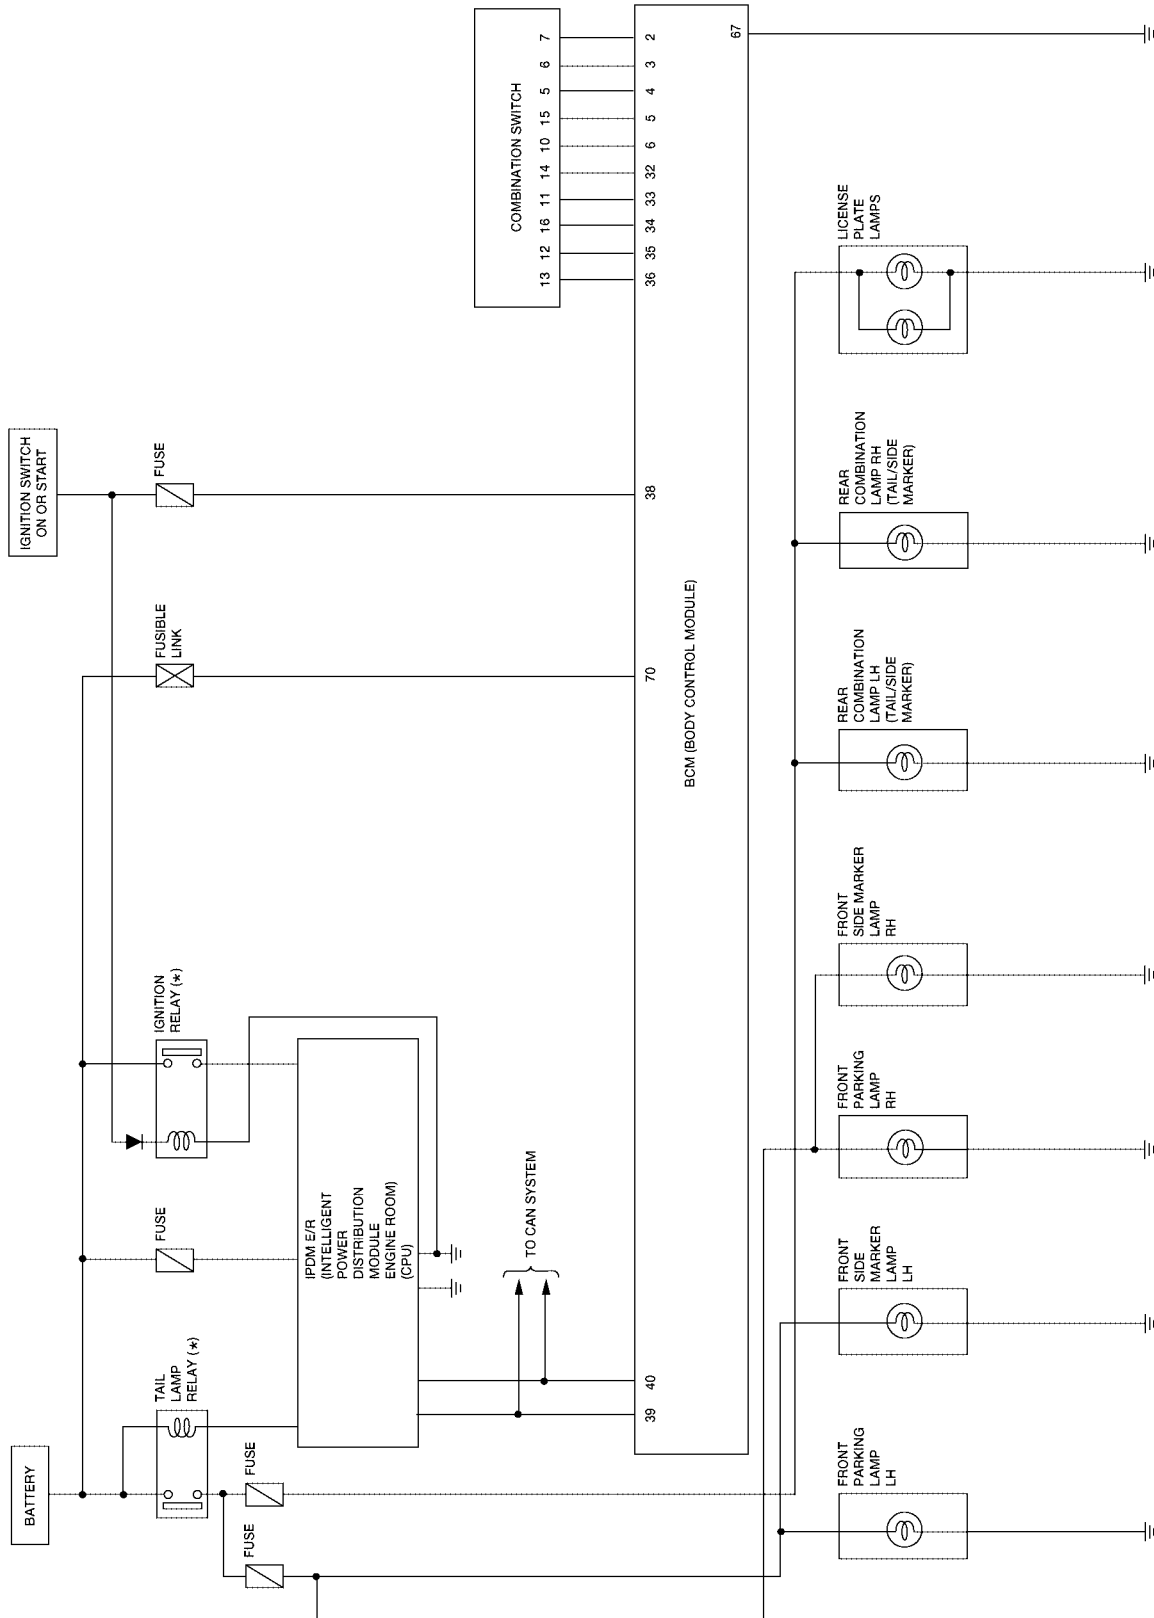

*: THIS RELAY IS BUILT INTO THE IPDM E/R
(INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

WKWA4308E



PARKING, LICENSE PLATE AND TAIL LAMPS

Wiring Diagram — TAIL/L —

EKS00FWS



LT-TAIL/L-01

— : DATA LINE

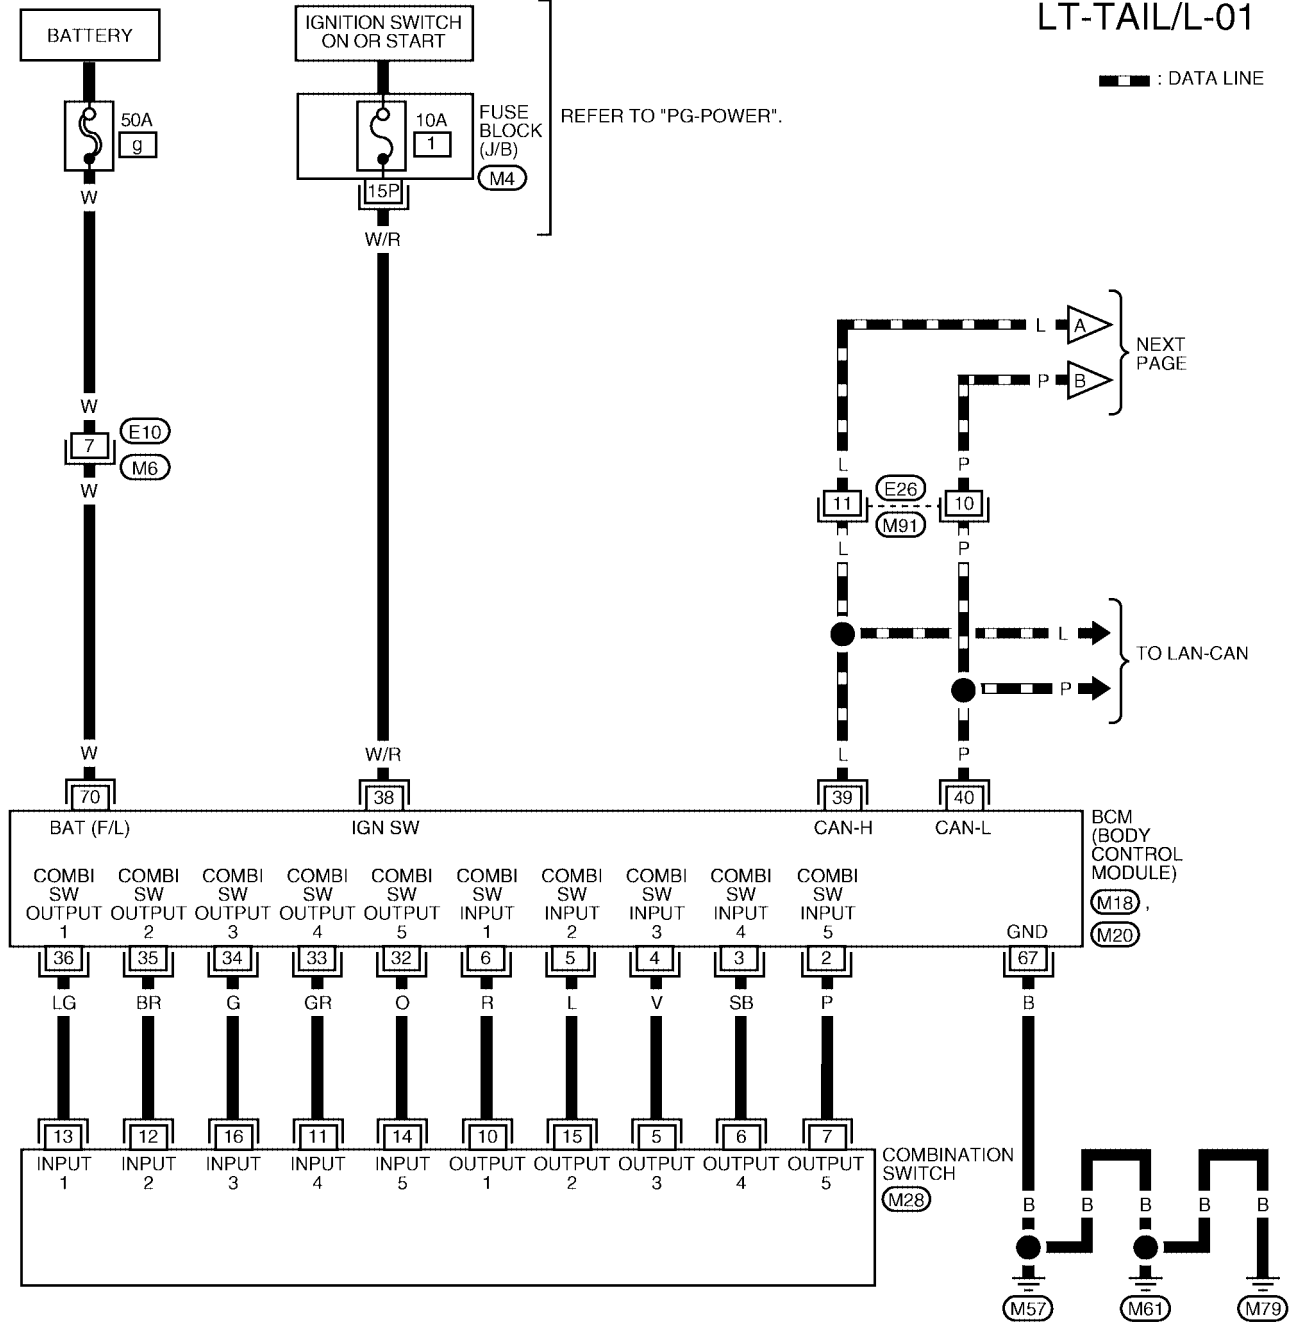

REFER TO THE FOLLOWING.



M31 - SUPER MULTIPLE JUNCTION (SMJ)



WKWA4231E

PARKING, LICENSE PLATE AND TAIL LAMPS



LT-TAIL/L-02

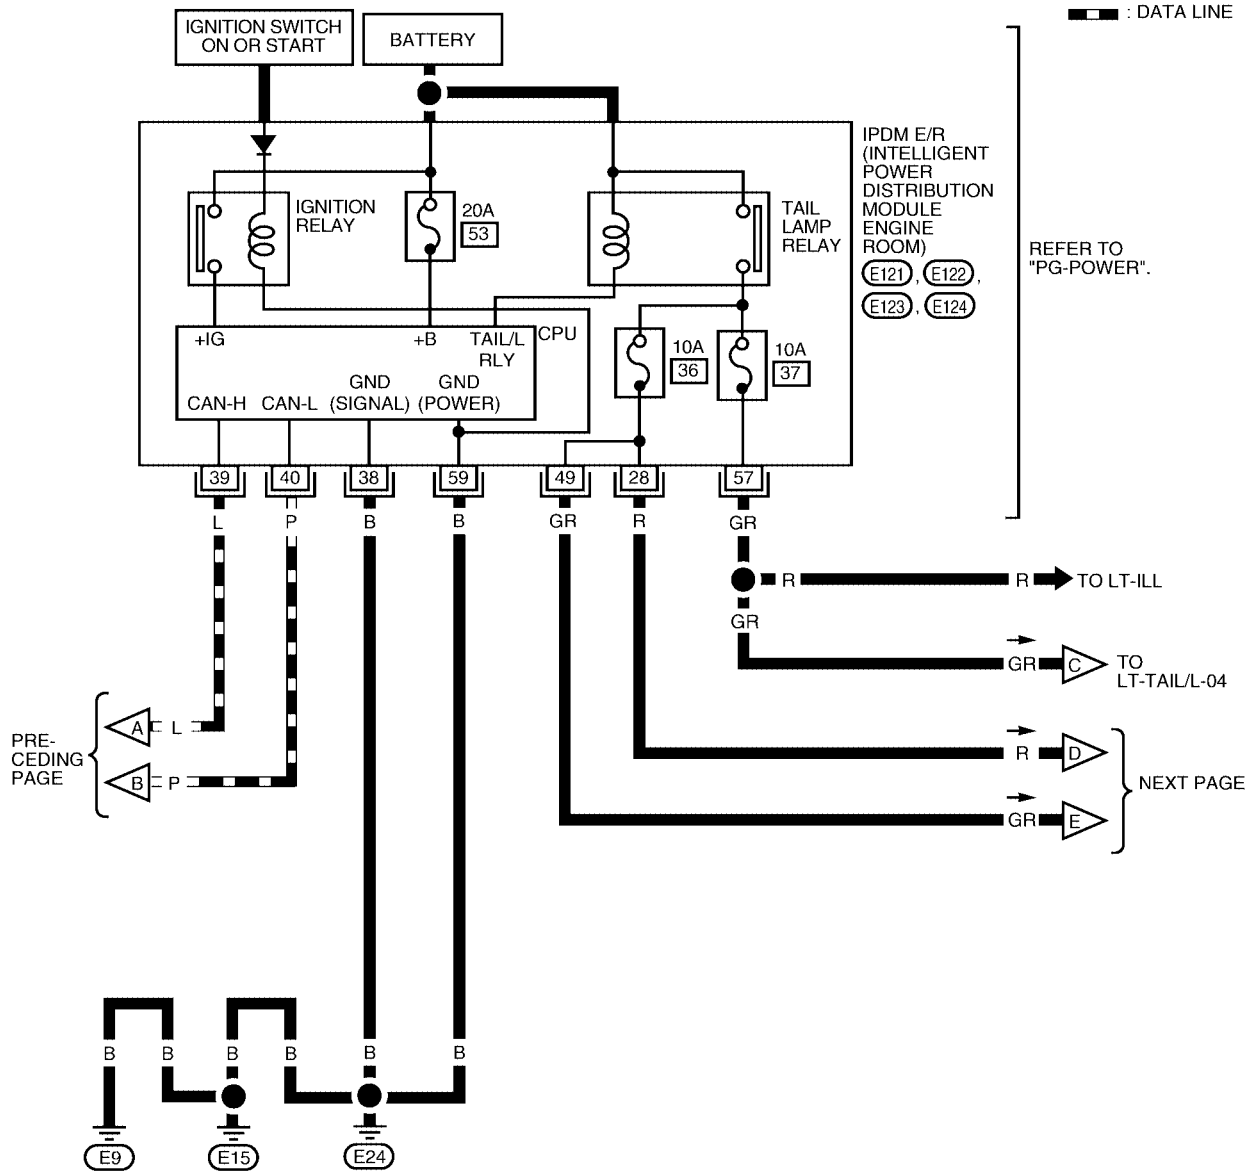

WKWA3087E

PARKING, LICENSE PLATE AND TAIL LAMPS



LT-TAIL/L-03

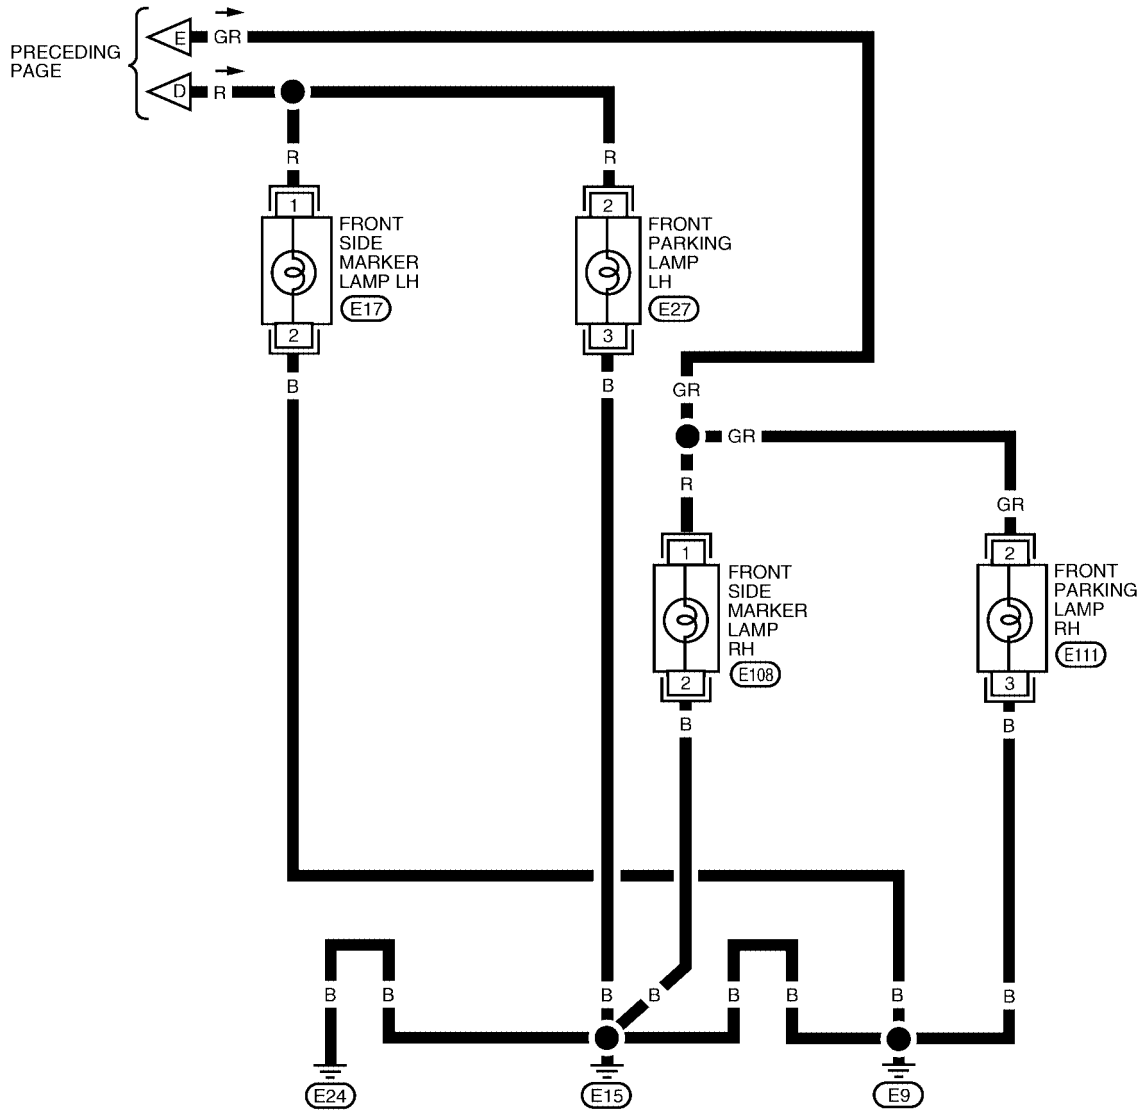

A
B
C
D
E
F
G
H
I
J
LT
L
M

PARKING, LICENSE PLATE AND TAIL LAMPS

LT-TAIL/L-04

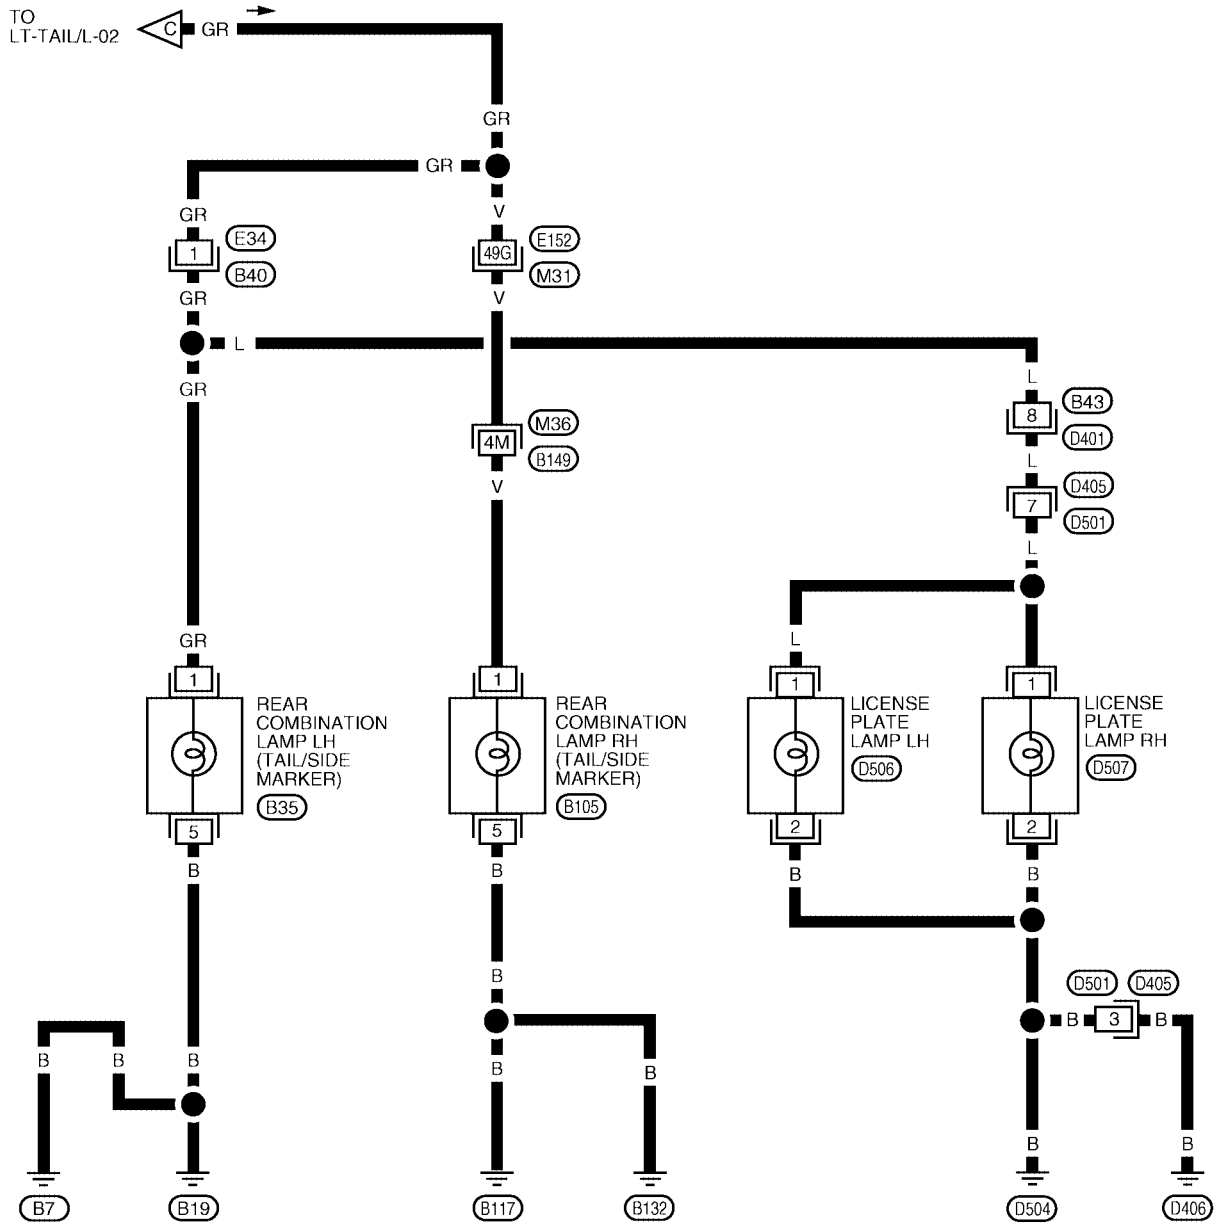

REFER TO THE FOLLOWING.
 (M31), (M36) - SUPER
 MULTIPLE JUNCTION (SMJ)

WKWA4342E

PARKING, LICENSE PLATE AND TAIL LAMPS

Terminals and Reference Values for BCM

EKS00FWT

Refer to [BCS-12, "Terminals and Reference Values for BCM"](#) .

Terminals and Reference Values for IPDM E/R

EKS00FWU

Refer to [PG-28, "Terminals and Reference Values for IPDM E/R"](#) .

How to Proceed With Trouble Diagnosis

EKS00FWV

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-90, "System Description"](#) .
3. Carry out the Preliminary Check. Refer to [LT-97, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Do the parking, front side marker, license and tail lamps operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

Preliminary Check

EKS00FWW

CHECK POWER SUPPLY AND GROUND CIRCUIT

Refer to [BCS-16, "BCM Power Supply and Ground Circuit Check"](#) and [PG-30, "IPDM E/R Power/Ground Circuit Inspection"](#) .

CONSULT-II Functions

EKS00FWX

Refer to [LT-12, "CONSULT-II Function \(BCM\)"](#) in HEADLAMP (FOR USA).
Refer to [LT-15, "CONSULT-II Function \(IPDM E/R\)"](#) in HEADLAMP (FOR USA).

Parking, Side Marker, License Plate and/or Tail Lamps Do Not Illuminate

EKS00FWY

1. CHECK COMBINATION SWITCH INPUT SIGNAL

Ⓟ With CONSULT-II

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "LIGHT SW 1ST" turns ON-OFF linked with operation of lighting switch.

**When lighting switch is in : LIGHT SW 1ST ON
1ST position**

ⓧ Without CONSULT-II

Refer to [LT-82, "Combination Switch Inspection"](#) .

OK or NG

OK >> GO TO 2.

NG >> Check lighting switch. Refer to [LT-82, "Combination Switch Inspection"](#) .

DATA MONITOR	
MONITOR	
LIGHT SW 1ST	ON

SKIA6956E

PARKING, LICENSE PLATE AND TAIL LAMPS

2. ACTIVE TEST

Ⓟ With CONSULT-II

1. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Select "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
3. Touch "TAIL" on "ACTIVE TEST" screen.
4. Make sure parking, front side marker, license plate and tail lamp operation.

Parking, front side marker, license plate and tail lamp should operate

ACTIVE TEST			
EXTERNAL LAMPS		OFF	
		TAIL	
LO		HI	
FOG			
MODE	BACK	LIGHT	COPY

WKIA1438E

ⓧ Without CONSULT-II

1. Start auto active test. Refer to [PG-24, "Auto Active Test"](#).
2. Make sure parking, front side marker, license plate and tail lamp operation.

Parking, front side marker, license plate and tail lamp should operate

OK or NG

- OK >> GO TO 3.
NG >> GO TO 4.

3. CHECK IPDM E/R

1. Select "IPDM E/R" on CONSULT-II, and select "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Make sure "TAIL&CLR REQ" turns ON when lighting switch is in 1ST position.

When lighting switch is in 1ST position : TAIL&CLR REQ ON

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-32, "Removal and Installation of IPDM E/R"](#).
- NG >> Replace BCM. Refer to [BCS-27, "Removal and Installation"](#).

DATA MONITOR			
MONITOR			
TAIL&CLR REQ		ON	
		RECORD	
MODE	BACK	LIGHT	COPY

SKIA5958E

PARKING, LICENSE PLATE AND TAIL LAMPS

4. CHECK INPUT SIGNAL


Ⓜ With CONSULT-II

1. Turn ignition switch OFF.
2. Disconnect front parking lamp, front side marker lamp, license plate lamp and rear combination lamp connectors.
3. Turn ignition switch ON.
4. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
5. Select "TAIL LAMP" on "SELECT TEST ITEM" screen.
6. Touch "ON" on "ACTIVE TEST" screen.
7. When tail lamp is operating, check voltage between front parking lamp, front side marker lamp, license plate lamp, rear combination lamp harness connector and ground.


ⓧ Without CONSULT-II

1. Start auto active test. Refer to [PG-24, "Auto Active Test"](#).
2. When tail lamp is operating, check voltage between front side marker lamp, front parking lamp, license plate lamp, rear combination lamp harness connector and ground.


Front side marker lamp		Terminal	(-)	Voltage
(+)				
Connector				
LH	E17	1	Ground	Battery voltage
RH	E108			

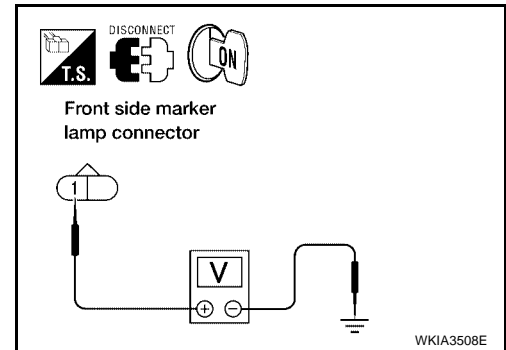

Front parking lamp		Terminal	(-)	Voltage
(+)				
Connector				
LH	E27	2	Ground	Battery voltage
RH	E111			

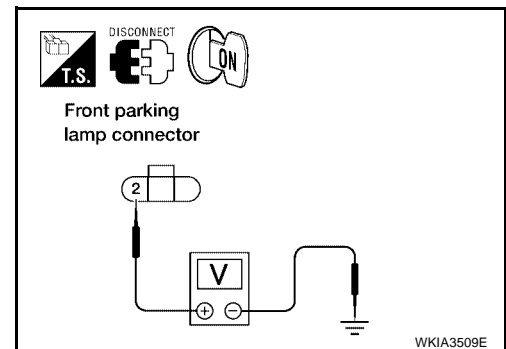

License plate lamp		Terminal	(-)	Voltage
(+)				
Connector				
LH	D506	1	Ground	Battery voltage
RH	D507			

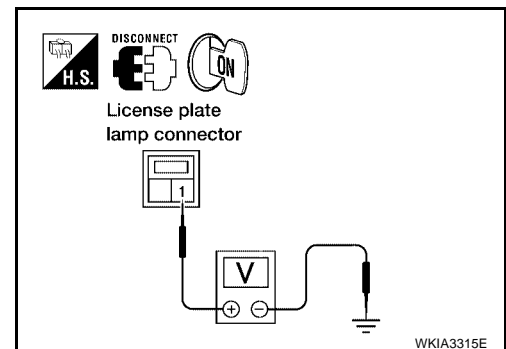


A
B
C
D
E
F
G
H
I
J
LT
L
M

PARKING, LICENSE PLATE AND TAIL LAMPS

Rear combination lamp		(-)	Voltage
(+)			
Connector	Terminal	Ground	Battery voltage
LH	B35		
RH	B105		

OK or NG

OK >> GO TO 6.
 NG >> GO TO 5.

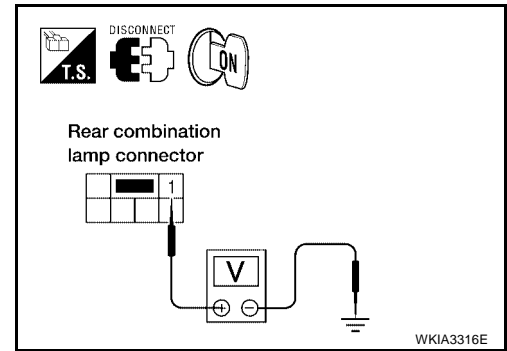


PARKING, LICENSE PLATE AND TAIL LAMPS

5. CHECK PARKING, SIDE MARKER, LICENSE PLATE AND TAIL LAMP CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and front side marker lamp harness connector.

IPDM E/R		Front side marker lamp		Continuity
Connector	Terminal	Connector	Terminal	
E121	28	LH	E17	Yes
E123	49	RH	E108	

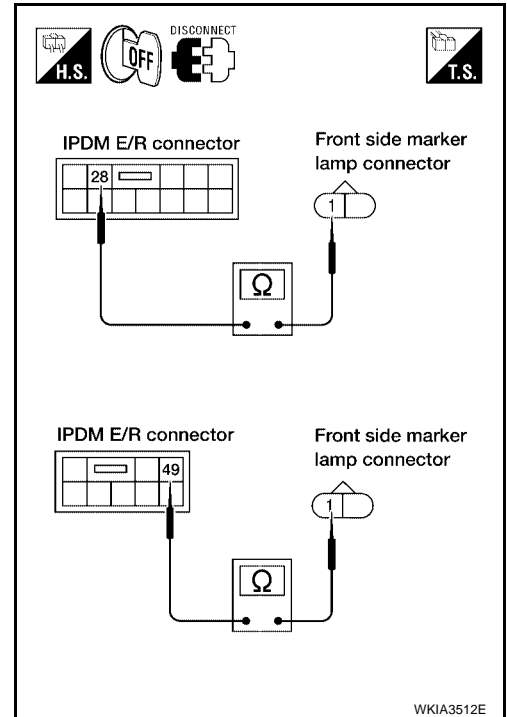

4. Check continuity between IPDM E/R harness connector and front parking lamp harness connector.


IPDM E/R		Front parking lamp		Continuity
Connector	Terminal	Connector	Terminal	
E121	28	LH	E27	Yes
E123	49	RH	E111	

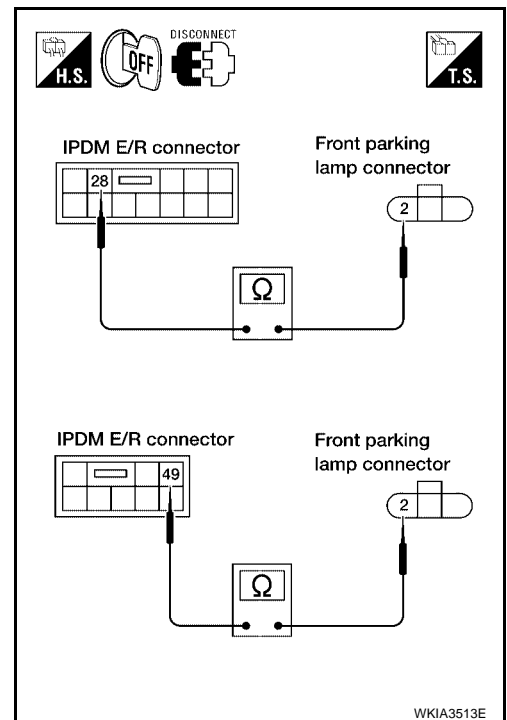

PARKING, LICENSE PLATE AND TAIL LAMPS


5. Check continuity between IPDM E/R harness connector and license plate lamp harness connector.

IPDM E/R		License plate lamp		Continuity	
Connector	Terminal	Connector	Terminal		
E124	57	LH	D506	1	Yes
		RH	D507		

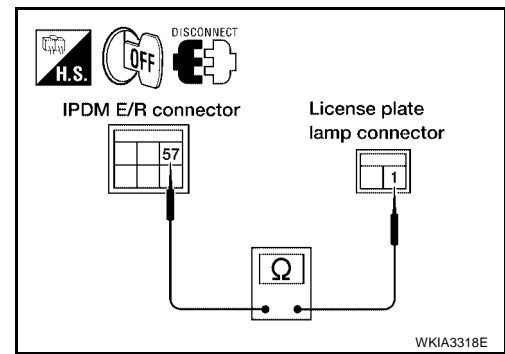

6. Check continuity between IPDM E/R harness connector and rear combination lamp harness connector.

IPDM E/R		Rear combination lamp		Continuity	
Connector	Terminal	Connector	Terminal		
E124	57	LH	B35	1	Yes
		RH	B105		

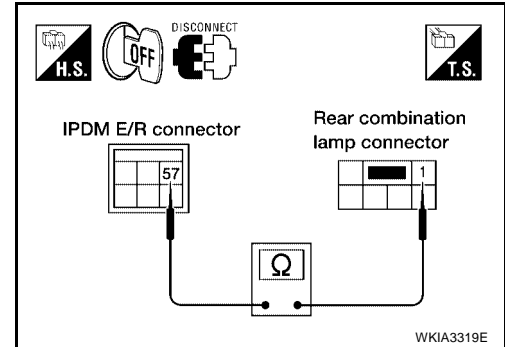

OK or NG


- OK >> Replace IPDM E/R. Refer to [PG-32, "Removal and Installation of IPDM E/R"](#) .
- NG >> Repair harness or connector.

PARKING, LICENSE PLATE AND TAIL LAMPS

6. CHECK GROUND


1. Turn ignition switch OFF.
2. Check continuity between front side marker lamp harness connector and ground.

Front side marker lamp		Terminal	Ground	Continuity
Connector				
LH	E17	2	Ground	Yes
RH	E108			

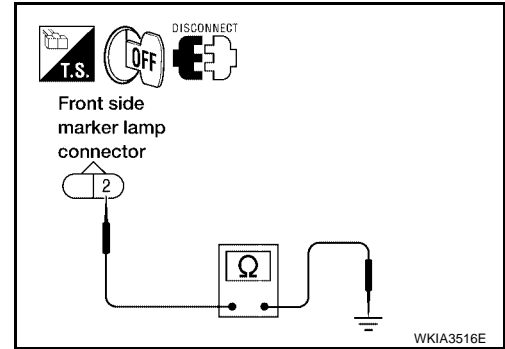


3. Check continuity between front parking lamp harness connector and ground.

Front parking lamp		Terminal	Ground	Continuity
Connector				
LH	E27	3	Ground	Yes
RH	E111			

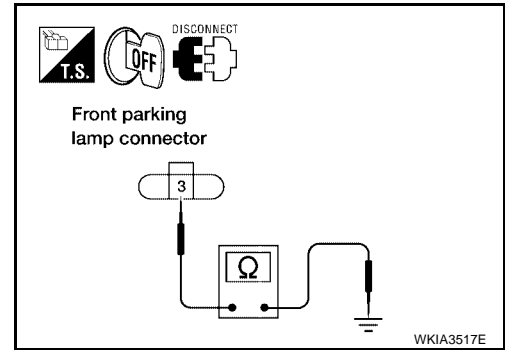


4. Check continuity between license plate lamp harness connector and ground.

License plate lamp		Terminal	Ground	Continuity
Connector				
LH	D506	2	Ground	Yes
RH	D507			

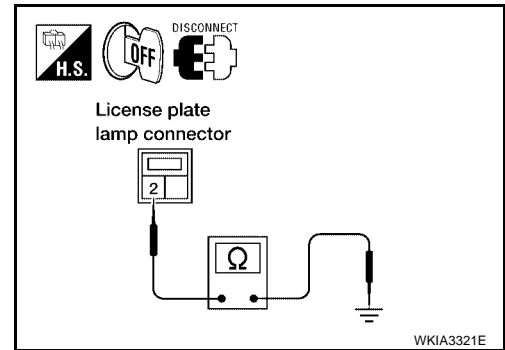

5. Check continuity between rear combination lamp harness connector and ground.

Rear combination lamp		Terminal	Ground	Continuity
Connector				
LH	B35	5	Ground	Yes
RH	B105			

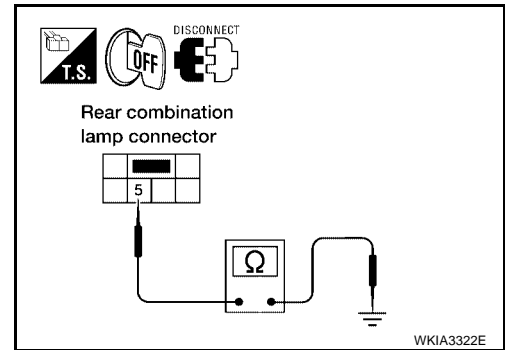

OK or NG

- OK >> Check bulbs.
 NG >> Repair harness or connector.

PARKING, LICENSE PLATE AND TAIL LAMPS

Parking, Side Marker, License Plate and Tail Lamps Do Not Turn OFF (After Approx. 10 Minutes)

EKS00FWZ

1. CHECK IPDM E/R

1. Turn ignition switch ON. Turn the combination switch (lighting switch) to the OFF position. Turn ignition switch OFF.
2. Verify that the parking, front side marker, license plate and tail lamps turn on and off after approximately 10 minutes.

OK or NG

- OK >> Ignition relay malfunction. Refer to [PG-19, "Function of Detecting Ignition Relay Malfunction"](#) .
NG >> Inspection End.

Bulb Replacement FRONT PARKING LAMP

EKS00FX0

Refer to [LT-27, "FRONT TURN SIGNAL/PARKING LAMP"](#) .

TAIL LAMP

For bulb replacement, refer to [LT-105, "Bulb Replacement"](#) .

LICENSE PLATE LAMP

Removal

1. Remove back door finisher. Refer to [EI-35, "BACK DOOR TRIM"](#) .
2. Turn bulb socket counterclockwise and remove bulb socket.
3. Remove license plate lamp bulb.

Installation

Installation is in the reverse order of removal.

Removal and Installation LICENSE PLATE LAMP

EKS00HJU

Removal

1. Remove license lamp finisher. Refer to [EI-19, "LICENSE LAMP FINISHER"](#) .
2. Disconnect license plate lamp harness connector.
3. Remove license plate lamp screw and remove license plate lamp.

Installation

Installation is in the reverse order of removal.

REAR COMBINATION LAMP


REAR COMBINATION LAMP

PFP:26554

Bulb Replacement REMOVAL

EKS00FX2

1. Remove rear combination lamp bolts.
2. Pull rear combination lamp to remove from the vehicle.
3. Turn bulb socket counterclockwise and unlock it.
4. Remove bulb.

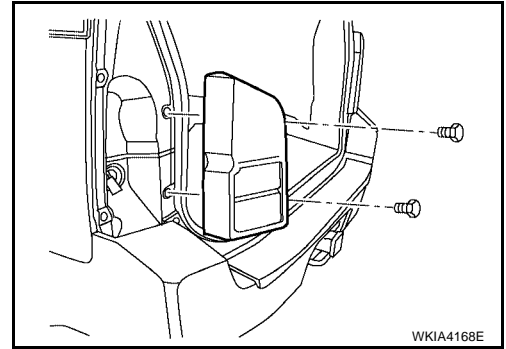

INSTALLATION

Installation is in the reverse order of removal.

Removal and Installation REMOVAL

EKS00FX3

1. Remove rear combination lamp bolts.
2. Pull rear combination lamp to remove from the vehicle.
3. Disconnect rear combination lamp connector.

INSTALLATION

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
LT
L
M


TRAILER TOW

PFP:93020

TRAILER TOW

Component Parts and Harness Connector Location

EKS00FX4

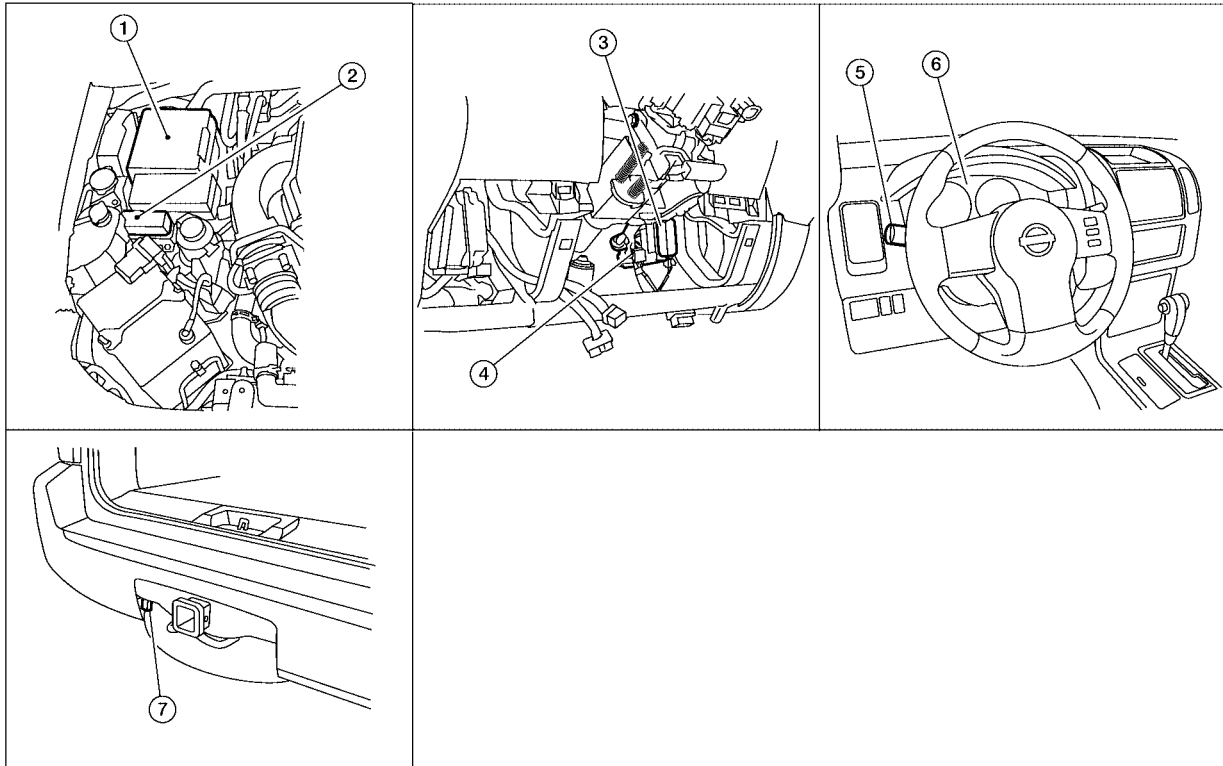

WKIA4962E

- | | | |
|--|--|--|
| 1. IPDM E/R
E118, E119, E120, E121,
E122, E123, E124 | 2. Trailer tow relays
E140, E148 | 3. BCM
M18, M19, M20
(view with instrument lower panel LH removed) |
| 4. Electric brake (pre-wiring)
M76 | 5. Combination switch (lighting switch)
M28 | 6. Combination meter
M24 |
| 7. Trailer connector
C126 | | |

System Description

EKS00FX5

Power is supplied at all times

- to ignition relay, located in the IPDM E/R (intelligent power distribution module engine room), and
- to tail lamp relay, located in the IPDM E/R, and
- through 50A fusible link (letter **g**, located in the fuse and fusible link box)
- to BCM (body control module) terminal 70, and
- to 15A fuse (No. 60, located in the fuse and relay box), and
- to trailer turn relay RH and LH terminal 5, and
- through 20A fuse (No. 53, located in the IPDM E/R)
- to CPU of the IPDM E/R, and
- through 10A fuse (No. 32, located in the IPDM E/R)
- to IPDM E/R terminal 61
- to trailer tow relay 1 terminal 3, and
- through 30A fusible link (letter **m**, located in the fuse and fusible link box)
- to trailer tow relay 2 terminals 3 and 6, and
- through 30A fusible link (letter **h**, located in the fuse and fusible link box)
- to electric brake (pre-wiring) terminal 5.

TRAILER TOW

With the ignition switch in the ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse [No. 1, located in the fuse block (J/B)]
- to BCM terminal 38, and
- through 10A fuse (No. 38, located in the IPDM E/R)
- to IPDM E/R terminal 27, and
- to trailer tow relay 2 terminal 1.

Ground is supplied

- to BCM terminal 67 and
- to electric brake (pre-wiring) terminal 1
- through grounds M57, M61 and M79, and
- to IPDM E/R terminals 38 and 59
- to trailer tow relay 1 terminal 2
- to trailer tow relay 2 terminal 2
- to trailer connector terminal 1 (trailer tow 7 pin) or terminal 4 (trailer tow 4 pin), and
- to trailer turn relay RH and LH terminal 2
- through grounds E9, E15 and E24.

TRAILER TAIL LAMP OPERATION

The trailer tail lamps are controlled by the trailer tow relay 1.

With the lighting switch in the parking and tail lamp ON (1ST) position, AUTO position (and the auto light system is activated) or headlamp ON (2ND) position, power is supplied from the tail lamp relay

- through 10A fuse (No. 37, located in the IPDM E/R)
- through IPDM E/R terminal 29
- to trailer tow relay 1 terminal 1.

When energized, trailer tow relay 1 tail lamp power is supplied

- through trailer tow relay 1 terminal 5
- to trailer connector terminal 3.

TRAILER STOP, TURN SIGNAL AND HAZARD LAMP OPERATION

The trailer stop, turn signal and hazard lamps are controlled by the BCM. If either turn signal or the hazard lamps are turned on, the BCM supplies voltage to the trailer turn relay RH or LH to make them flash. If the BCM receives stop lamp switch signal, the BCM supplies voltage to the trailer turn relay RH and LH to make them illuminate.

Left stop, turn signal and hazard lamp output is supplied

- through BCM terminal 52
- to trailer turn relay LH terminal 1

When energized, trailer turn relay LH supplies power to the left stop, turn signal, and hazard lamp

- through trailer turn relay LH terminal 3
- to trailer connector terminal 2 (trailer tow 7 pin) or terminal 1 (trailer tow 4 pin).

Right stop, turn signal and hazard lamp output is supplied

- through BCM terminal 51
- to trailer turn relay RH terminal 1

When energized, trailer turn relay RH supplies power to the right stop, turn signal, and hazard lamp

- through trailer turn relay RH terminal 3
- to trailer connector terminal 5 (trailer tow 7 pin) or terminal 2 (trailer tow 4 pin).

TRAILER POWER SUPPLY OPERATION

The trailer power supply (trailer tow 7 pin connector only) is controlled by trailer tow relay 2.

When the ignition switch is in the ON or START position, power is supplied

- through 10A fuse (No. 38, located in the IPDM E/R)
- through IPDM E/R terminal 27

A

B

C

D

E

F

G

H

I

J

LT

L

M


TRAILER TOW

- to trailer tow relay 2 terminal 1.
- When energized, trailer tow relay 2 power is supplied
- through trailer tow relay 2 terminals 5 and 7
 - to trailer connector terminal 4.

TRAILER TOW

Schematic

EKS00FX6

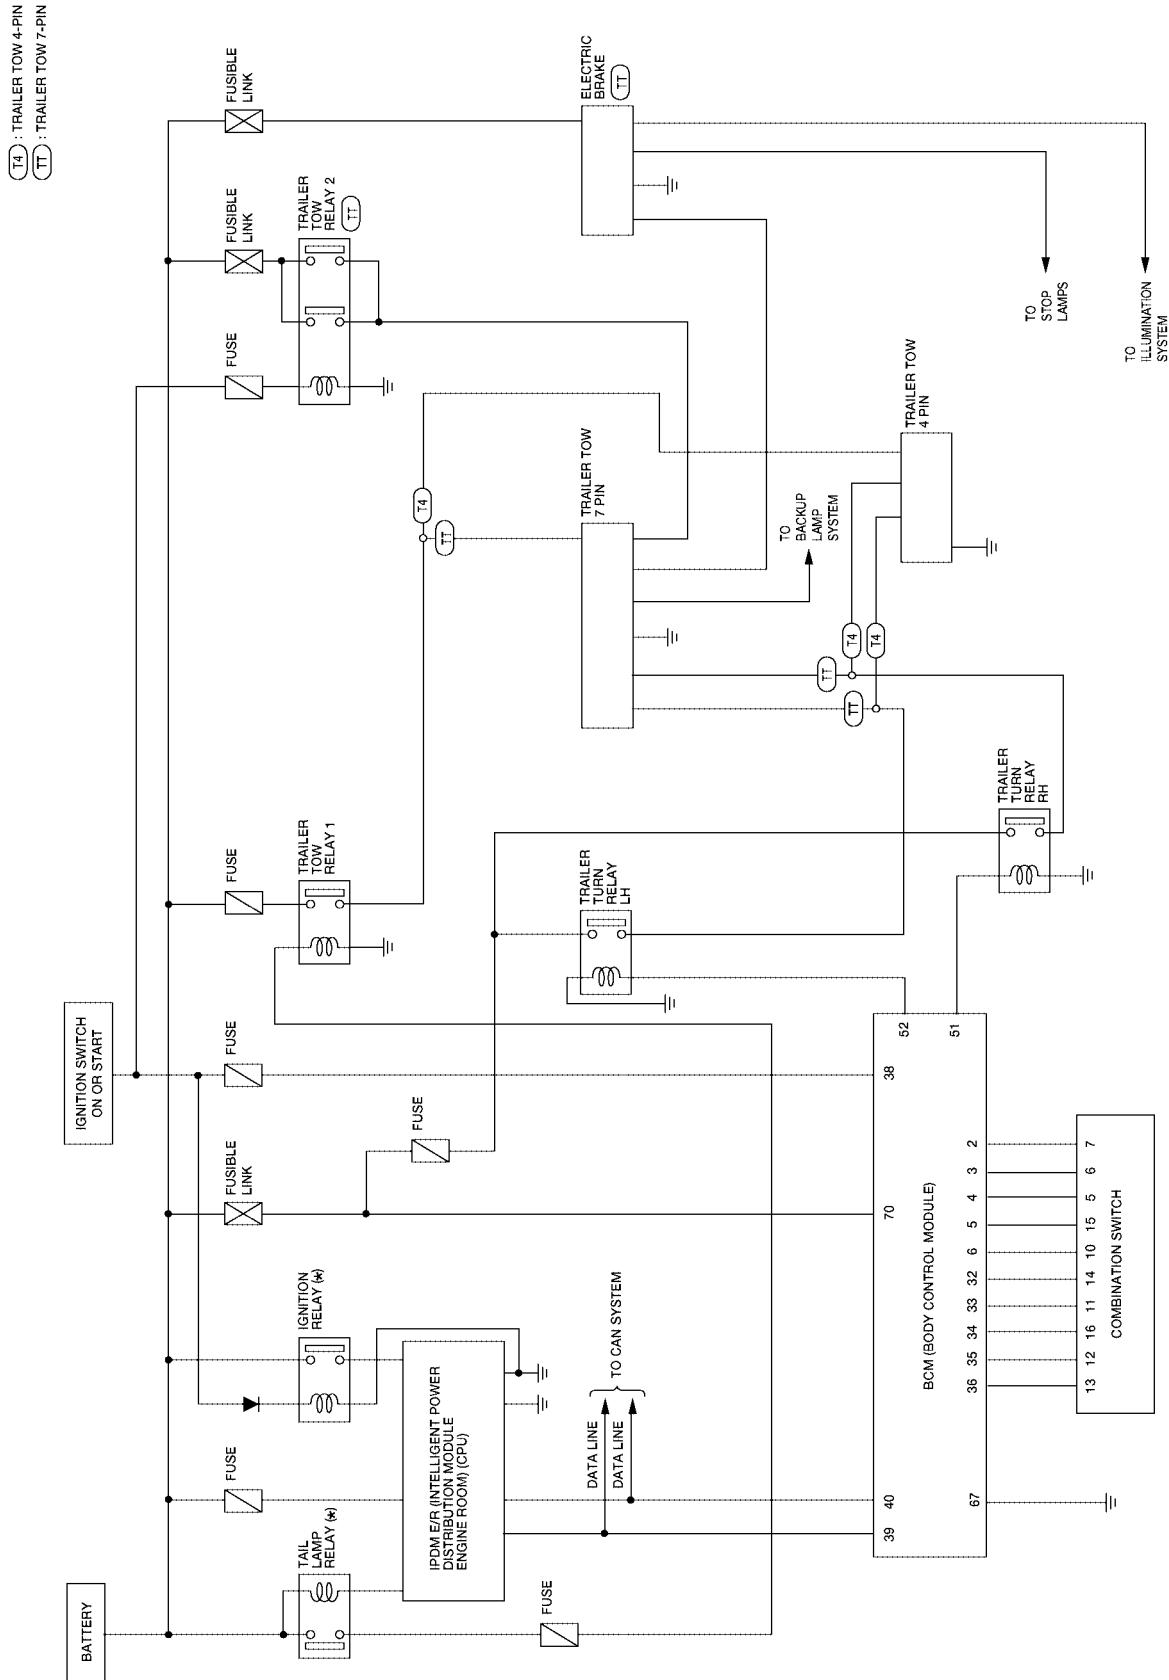

*: THIS RELAY IS BUILT INTO THE IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

A
B
C
D
E
F
G
H
I
J
K
L
M

LT





TRAILER TOW

EKS00FX7

Wiring Diagram — T/TOW —

LT-T/TOW-01

▬ : DATA LINE


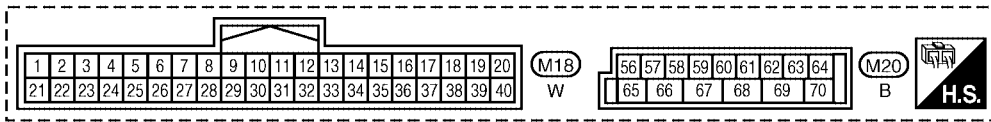

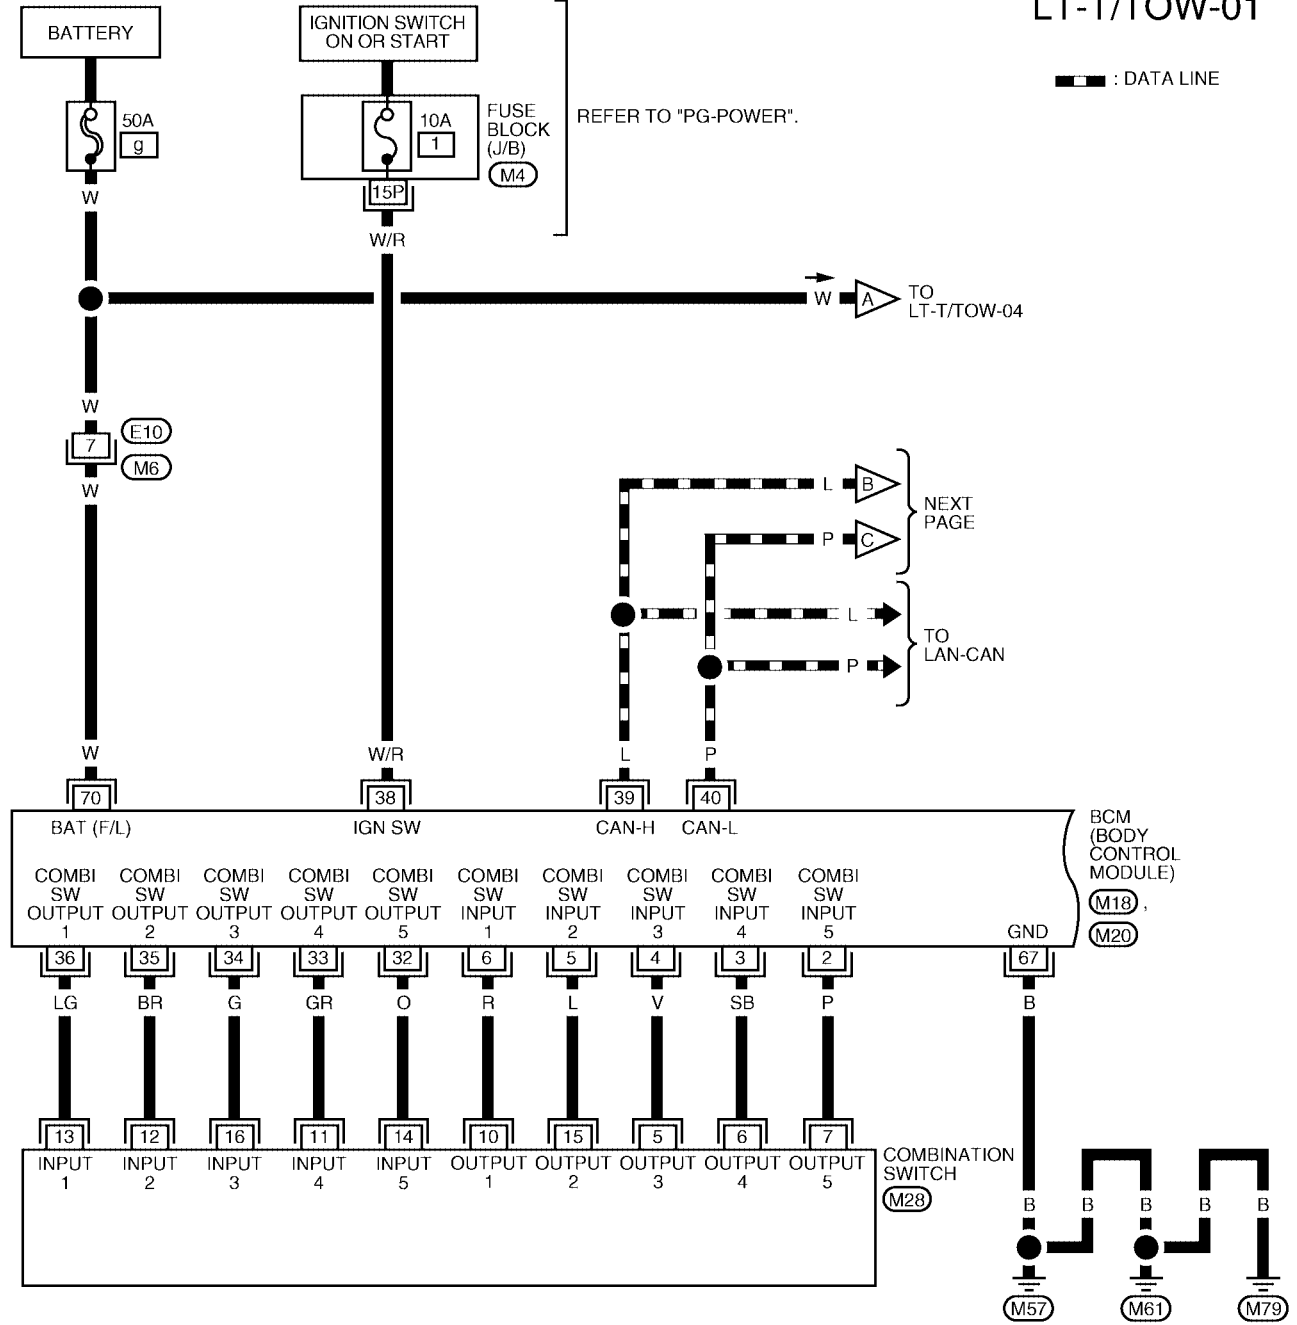


WKWA4233E

TRAILER TOW

LT-T/TOW-03

⬡ TT : TRAILER TOW 7 PIN

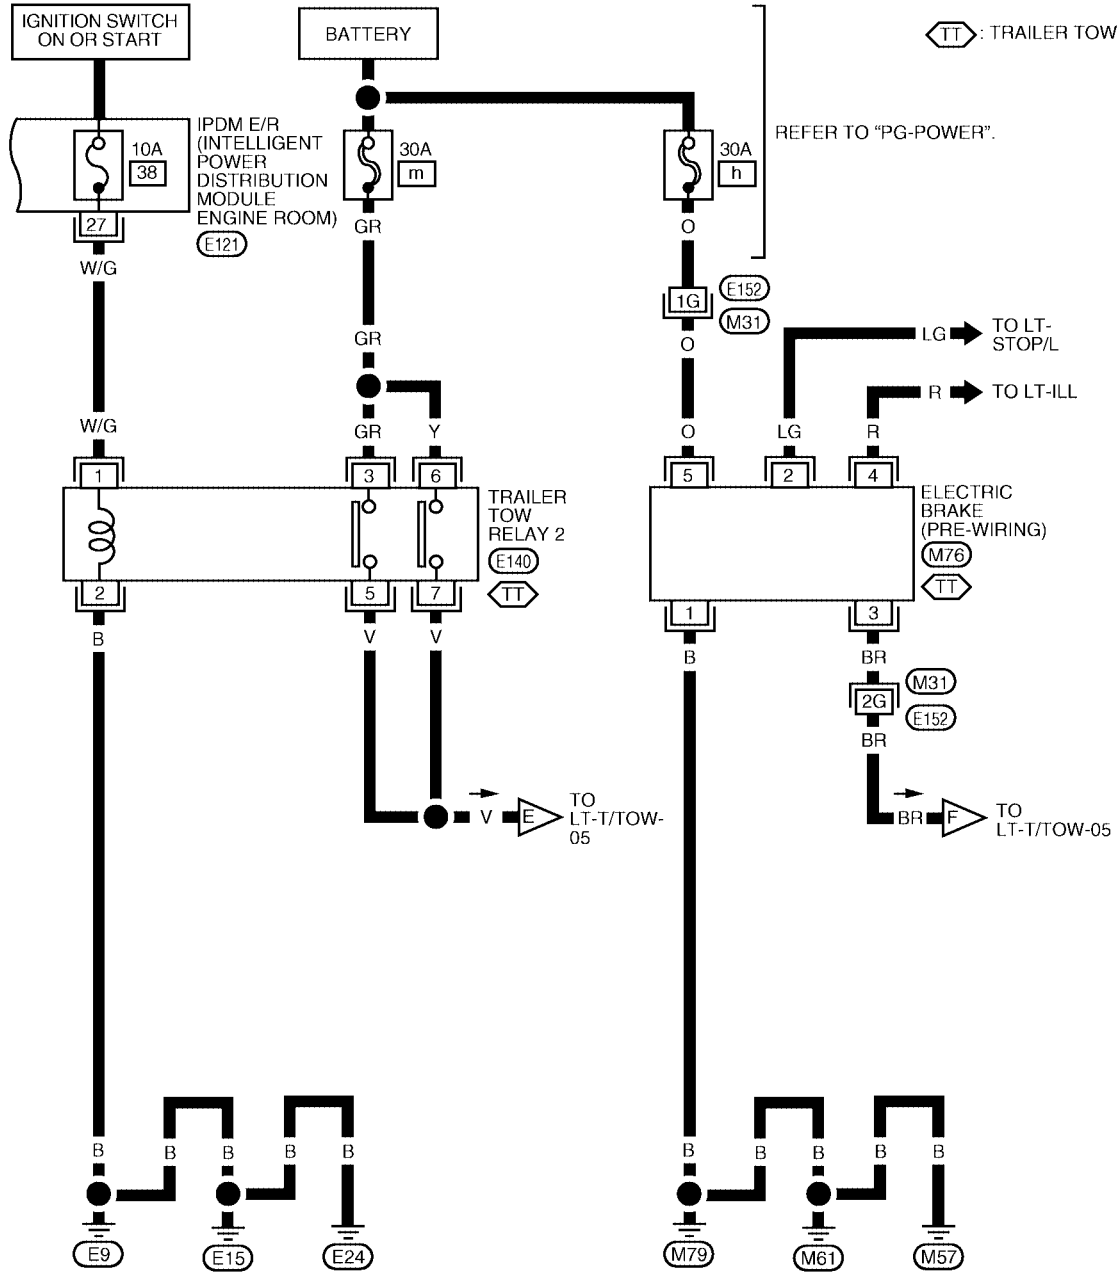


REFER TO THE FOLLOWING.
 ⬡ M31 - SUPER MULTIPLE JUNCTION (SMJ)

WKWA4235E

TRAILER TOW

LT-T/TOW-04


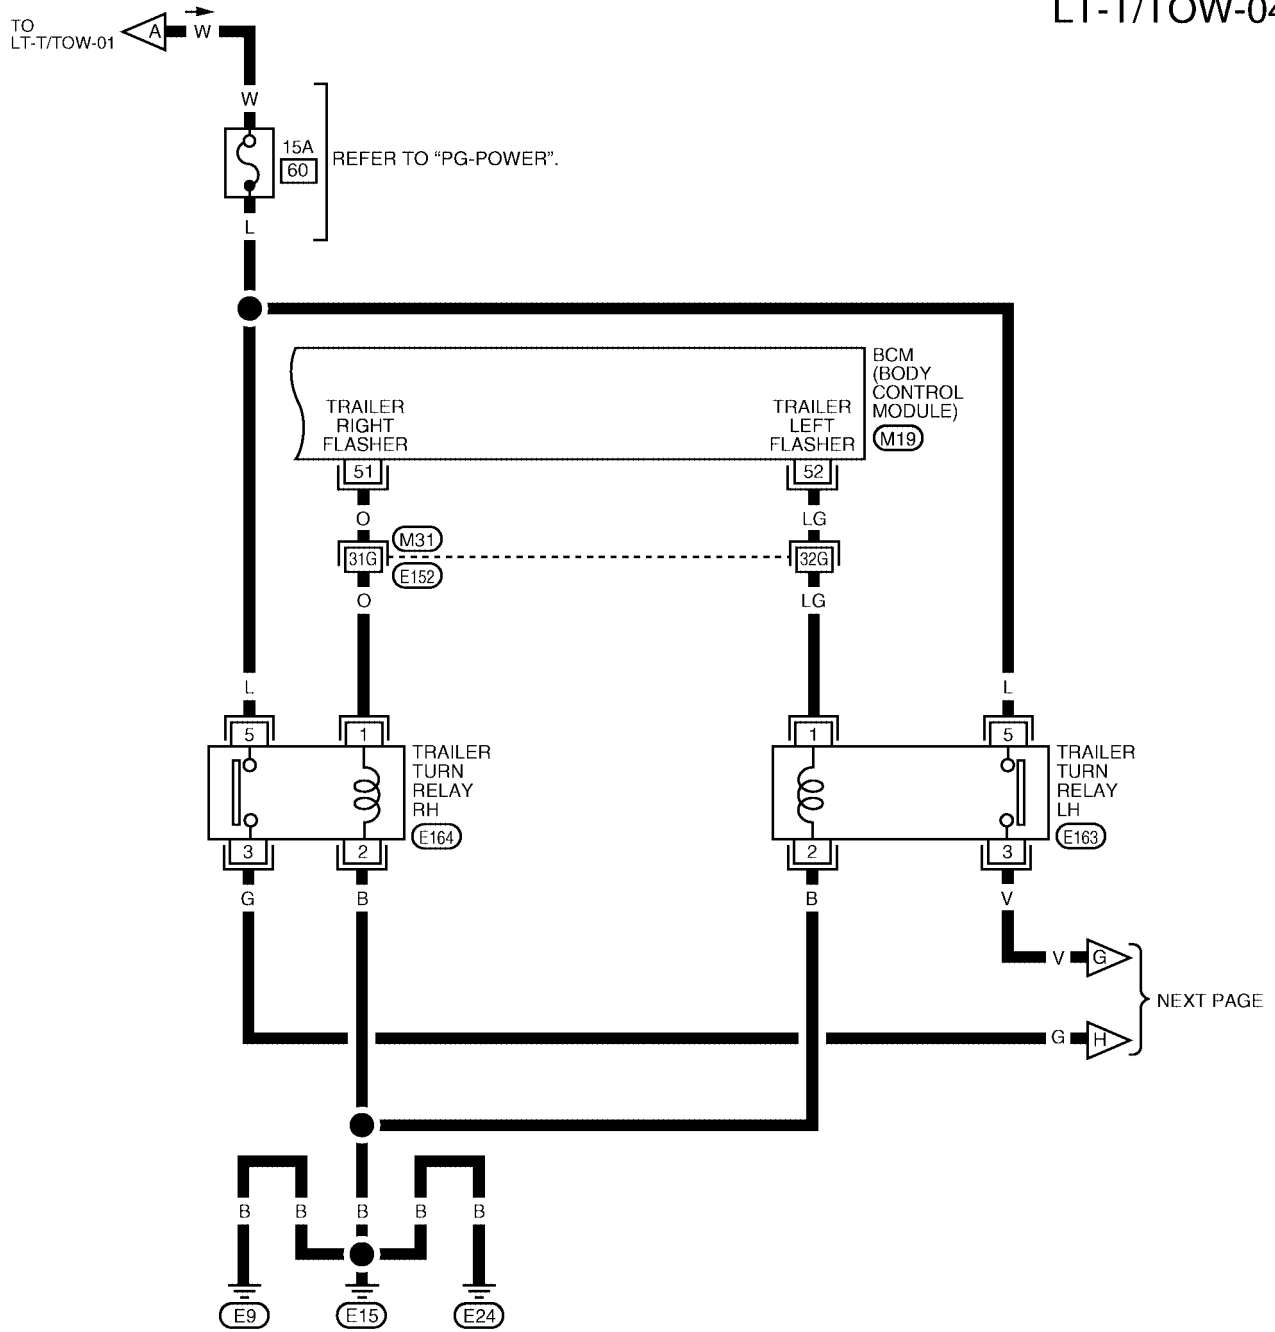


REFER TO THE FOLLOWING.
(M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA4236E

TRAILER TOW

LT-T/TOW-05

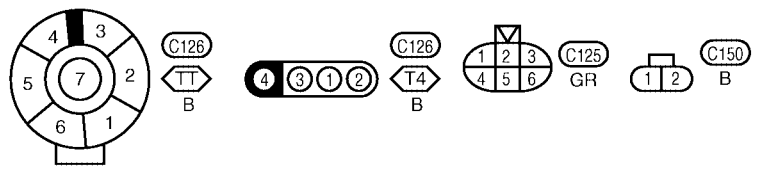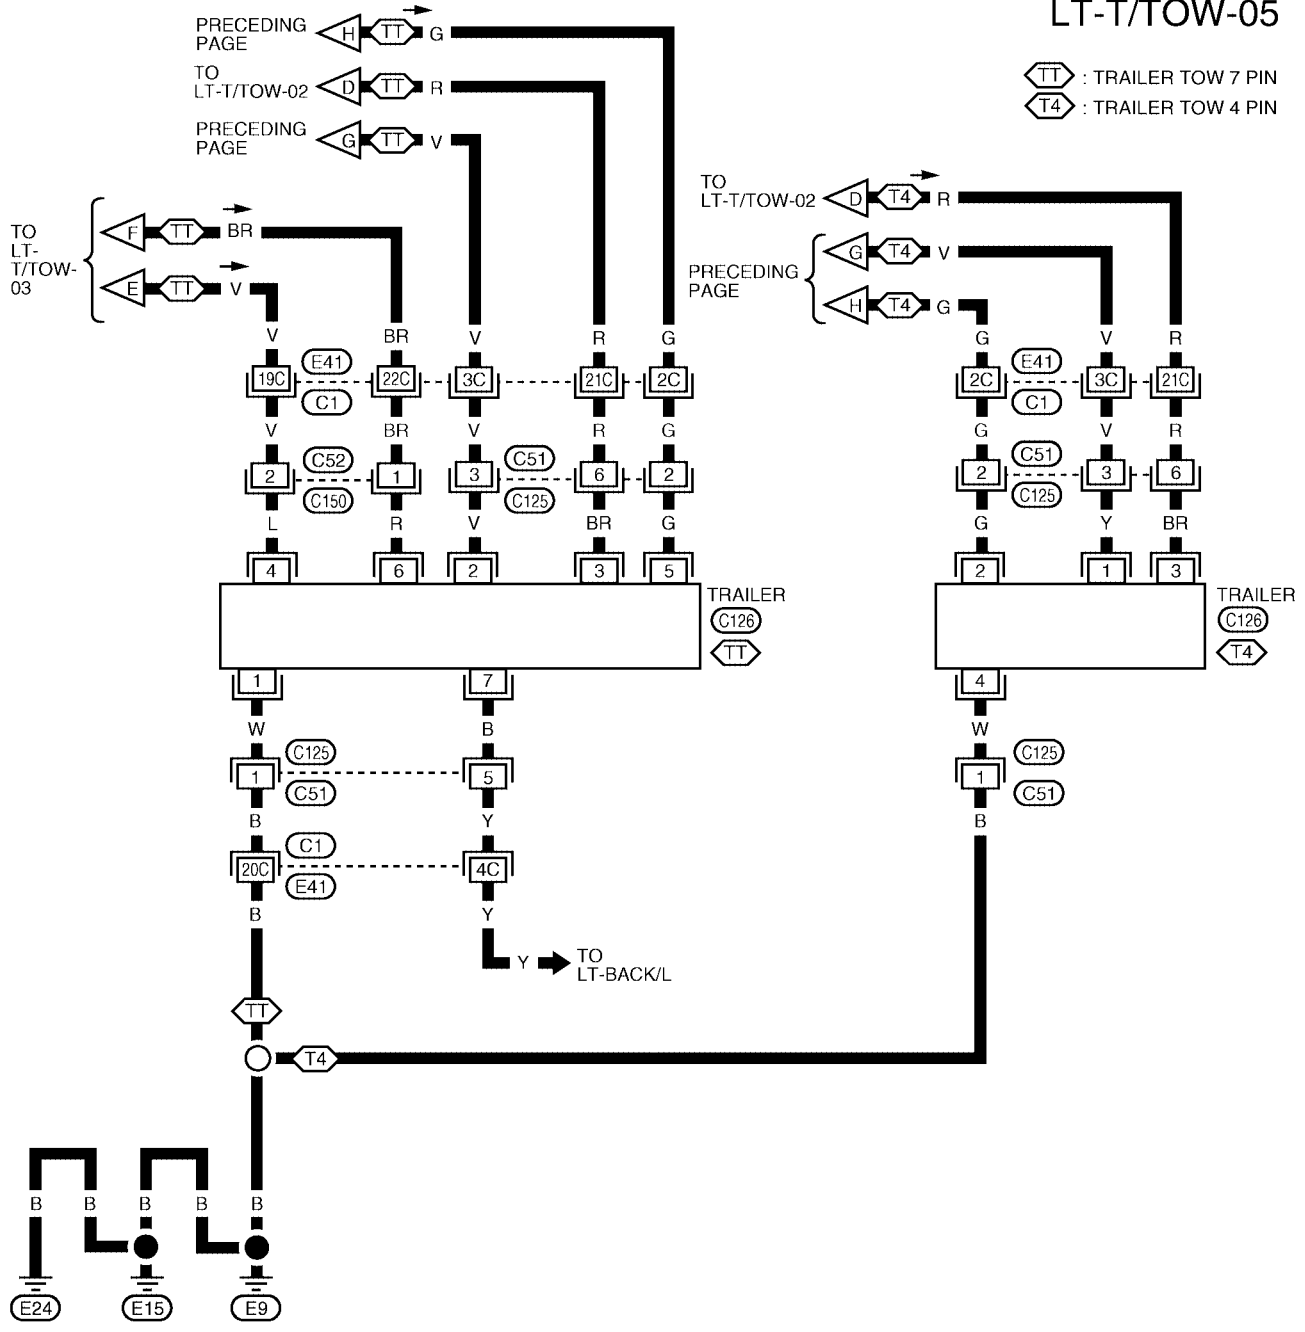

REFER TO THE FOLLOWING.
 C1 - SUPER MULTIPLE JUNCTION (SMJ)

WKWA4237E


INTERIOR ROOM LAMP

PFP:26410

EKS00FX8

INTERIOR ROOM LAMP

Component Parts and Harness Connector Location

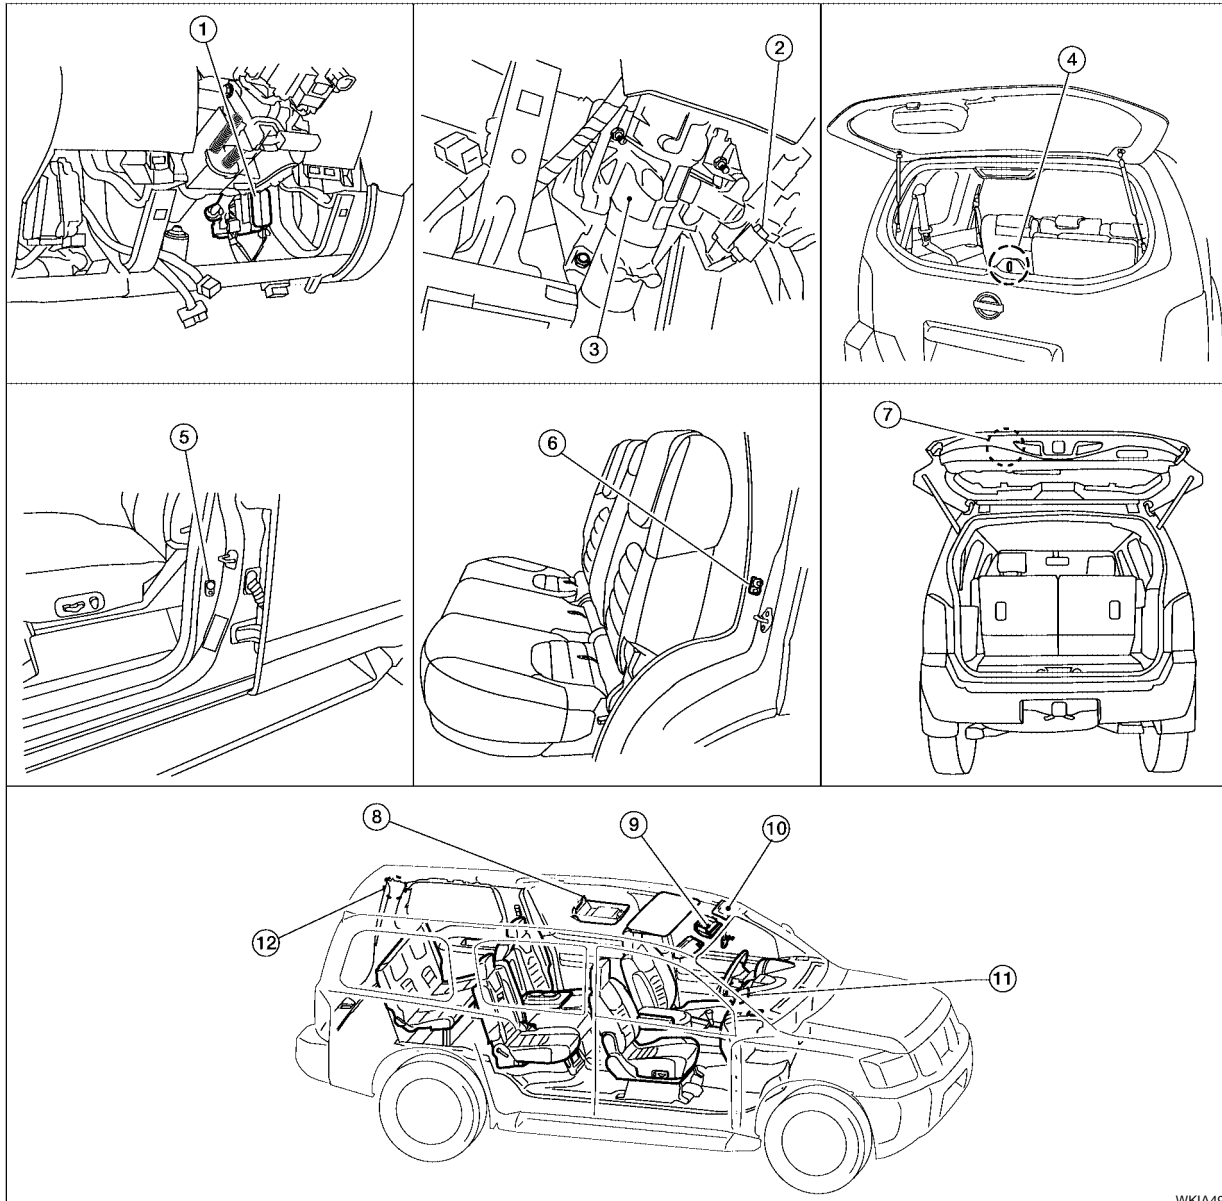

WK1A4971E

- | | | |
|---|--|---|
| 1. BCM
M18, M19, M20
(view with instrument lower panel
LH removed) | 2. Key switch
M27
(view with instrument lower panel LH
removed) | 3. Steering column assembly |
| 4. Glass hatch ajar switch
D506 | 5. Front door switch LH
B8
Front door switch RH
B108 | 6. Rear door switch LH
B18
Rear door switch RH
B116 |
| 7. Back door switch
D502 | 8. Room lamp 2nd row
(without map lamps)
R12
(with rear map lamps)
R10 | 9. Front room/map lamp assembly
(with front map lamps)
R9 |
| 10. Vanity lamps (with vanity lamps)
LH B80
Vanity lamps
RH B81 | 11. Ignition keyhole illumination
M150 | 12. Cargo lamp
R11 |

A
B
C
D
E
F
G
H
I
J
LT
L
M

INTERIOR ROOM LAMP

EKS00FX9

System Description

When room lamp and personal lamp switch is in DOOR position, room lamp and personal lamp ON/OFF is controlled by timer according to signals from switches including key switch, front door switch LH, unlock signal from keyfob, door lock and unlock switch, key cylinder switch, ignition switch and glass hatch ajar switch.

When room/map lamp and personal lamp turns ON, there is a gradual brightening over 1 second. When room/map lamp and personal lamp turns OFF, there is a gradual dimming over 1 second.

The room/map lamp and personal lamp timer is controlled by the BCM (body control module).

Room/map lamp and personal lamp timer control settings can be changed with CONSULT-II.

Ignition keyhole illumination turns ON when front door LH is opened (door switch ON) or key is removed from key cylinder. Illumination turns OFF when front door LH is closed (door switch OFF).

POWER SUPPLY AND GROUND

Power is supplied at all times

- through 10A fuse (No. 25, located in the fuse and fusible link box)
- to key switch terminal 2, and
- through 10A fuse [No. 18, located in the fuse block (J/B)]
- to BCM terminal 57, and
- through 50A fusible link (letter **g**, located in the fuse and fusible link box)
- to BCM terminal 70.

When the key is inserted in key switch, power is supplied

- through the key switch terminal 1
- to BCM terminal 37.

With the ignition switch in the ON or START position, power is supplied

- through 10A fuse [No. 1, located in the fuse block (J/B)]
- to BCM terminal 38.

Ground is supplied

- to BCM terminal 67
- through grounds M57, M61 and M79.

When the front door LH is opened, ground is supplied

- to BCM terminal 47
- through front door switch LH terminal 2
- through case ground of front door switch LH.

When the front door RH is opened, ground is supplied

- to BCM terminal 12
- through front door switch RH terminal 2
- through case ground of front door switch RH.

When the rear door LH is opened, ground is supplied

- to BCM terminal 48
- through rear door switch LH terminal 2
- through case ground of rear door switch LH.

When the rear door RH is opened, ground is supplied

- to BCM terminal 13
- through rear door switch RH terminal 2
- through case ground of rear door switch RH.

When the glass hatch is opened, ground is supplied

- to BCM terminal 42
- through glass hatch ajar switch terminal 1
- through case ground of glass hatch ajar switch.

When the liftgate is opened, ground is supplied

- to BCM terminal 43
- through back door switch terminal 3

INTERIOR ROOM LAMP

- through back door switch terminal 1
- through grounds D406 and D504.

When the front door LH or RH is unlocked by the door lock and unlock switch, BCM receives ground signal

- to BCM terminal 46
- through main power window and door lock/unlock switch terminal 11 or power window and door lock/unlock switch RH terminal 2
- through main power window and door lock/unlock switch terminal 14 or power window and door lock/unlock switch RH terminal 3
- through grounds M57, M61 and M79.

When the front door LH is unlocked by the key, the BCM receives ground signal

- to BCM terminal 7
- through front door lock assembly LH (key cylinder switch) terminal 3
- through front door lock assembly LH (key cylinder switch) terminal 4
- through grounds M57, M61 and M79.

When a signal, or combination of signals is received by BCM, ground is supplied

- to front room/map lamp assembly terminal 2
- to personal lamp 2nd row terminal 2 (with rear map lamps)
- to room lamp 2nd row terminal 1
- through BCM terminal 63, and
- to cargo lamp terminal 1
- through BCM terminal 49.

With power and ground supplied, the lamps illuminate.

SWITCH OPERATION

When any door switch is ON (door is opened), ground is supplied

- to front room/map lamp assembly terminal 2
- to personal lamp 2nd row terminal 2 (with rear map lamps)
- to room lamp 2nd row terminal 1
- through BCM terminal 63, and
- to ignition keyhole illumination terminal 2
- through BCM terminal 1.

And power is supplied

- through BCM terminal 56
- to ignition keyhole illumination terminal 1
- to front room/map lamp assembly terminal 1
- to vanity lamp LH and RH terminal 1 (if equipped)
- to personal lamp 2nd row terminal 1 (with rear map lamps)
- to room lamp 2nd row terminal 2
- to cargo lamp terminal 2.

When front room/map lamp switch is ON, ground is supplied

- to front room/map lamp assembly terminal 3
- through grounds M57, M61 and M79.

When vanity lamp (LH and RH) (if equipped) is ON, ground is supplied

- to vanity lamp (LH and RH) terminal 2
- through grounds B7 and B19.

When personal lamp 2nd row (with rear map lamps) is ON, ground is supplied

- to personal lamp 2nd row terminal 3
- through grounds M57, M61 and M79.

When room lamp 2nd row is ON, ground is supplied through room lamp case ground.

When cargo lamp switch is ON, ground is supplied through cargo lamp case ground.

A

B

C

D

E

F

G

H

I

J

LT

L

M

INTERIOR ROOM LAMP

ROOM LAMP TIMER OPERATION

When lamp switch is in DOOR position, and when all conditions below are met, BCM performs timer control (maximum 30 seconds) for interior room lamp and map lamp ON/OFF.

Power is supplied

- through 10A fuse [No. 25, located in the fuse block (J/B)]
- to key switch terminal 2.

Key is removed from ignition key cylinder (key switch OFF), power will not be supplied to BCM terminal 37.

Ground is supplied

- to BCM terminal 46
- through main power window and door lock/unlock switch terminal 11.

At the time that front door LH is opened, BCM detects that front door LH is unlocked. It determines that interior room lamp and map lamp timer operation conditions are met, and turns the interior room lamps ON for 30 seconds.

Key is in ignition key cylinder (key switch ON), power is supplied

- through key switch terminal 1
- to BCM terminal 37.

When key is removed from key switch and key lock solenoid (key switch OFF), power supply to BCM terminal 37 is terminated. BCM detects that key has been removed, determines that interior room lamp and map lamp timer conditions are met, and turns the interior room lamps ON for 30 seconds.

When front door LH opens → closes, and the key is not inserted in the key switch (key switch OFF), BCM terminal 47 changes between 0V (door open) → 12V (door closed). The BCM determines that conditions for interior room lamp operation are met and turns the interior room lamp ON for 30 seconds.

Timer control is canceled under the following conditions.

- Front door LH is locked [when locked by keyfob, main power window and door lock/unlock switch, or front door lock assembly LH (key cylinder switch)]
- Front door LH is opened (front door switch LH turns ON)
- Ignition switch ON.

INTERIOR LAMP BATTERY SAVER CONTROL

If interior lamp is left ON, it will not be turned off even when door is closed.

BCM turns off interior lamp automatically to save battery 30 minutes after ignition switch is turned off.

BCM controls interior lamps listed below:

- Vanity lamp (if equipped)
- Front room/map lamp
- Cargo lamp
- Personal lamp 2nd row (with rear map lamps)
- Room lamp 2nd row
- Ignition keyhole illumination

After lamps turn OFF by the battery saver system, the lamps illuminate again when


- signal received from keyfob, main power window and door lock/unlock switch or front door lock assembly LH (key cylinder switch) is locked or unlocked
- door is opened or closed
- key is removed from ignition key cylinder or inserted in ignition key cylinder.

Interior lamp battery saver control period can be changed by the function setting of CONSULT-II.

INTERIOR ROOM LAMP

Schematic

EKS00FXA

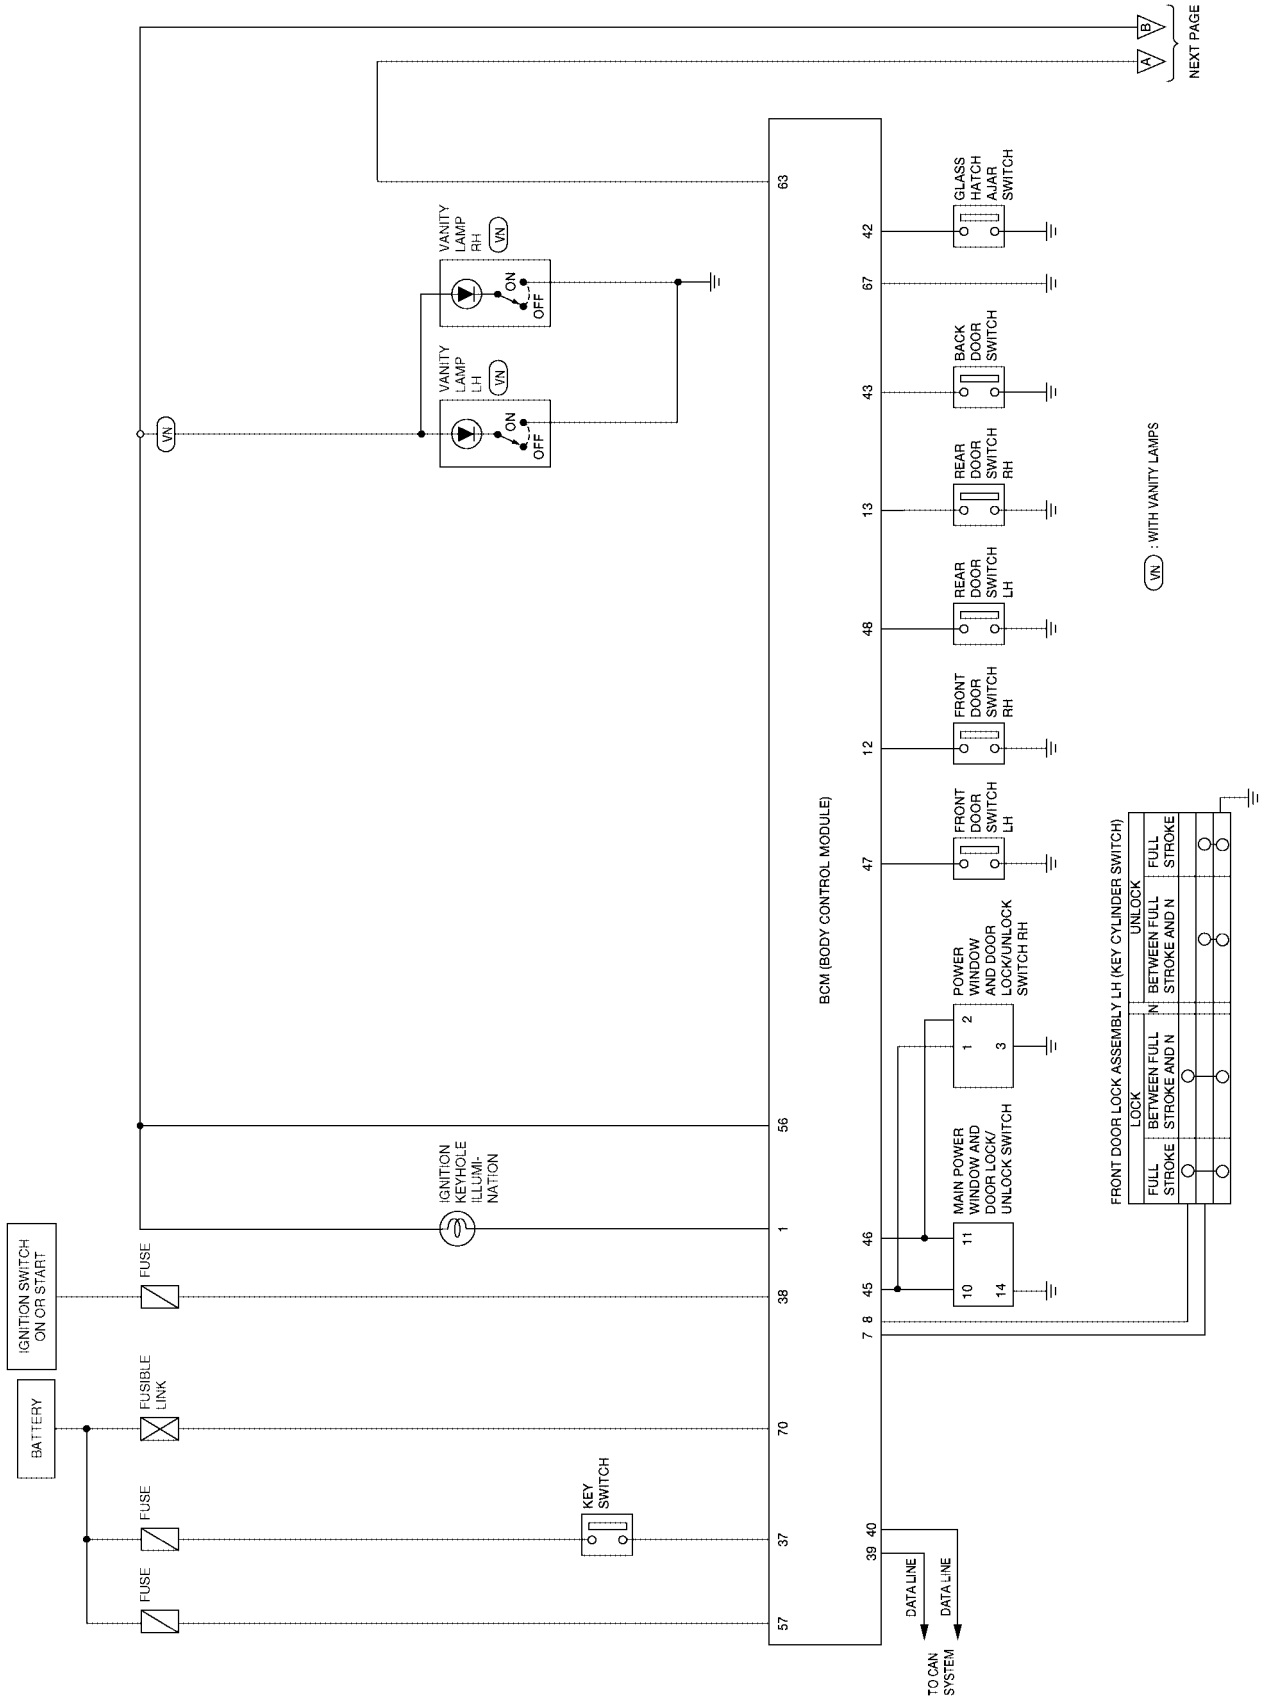


(VN) : WITH VANITY LAMPS

NEXT PAGE

A
B
C
D
E
F
G
H
I
J
K
L
M

LT

INTERIOR ROOM LAMP

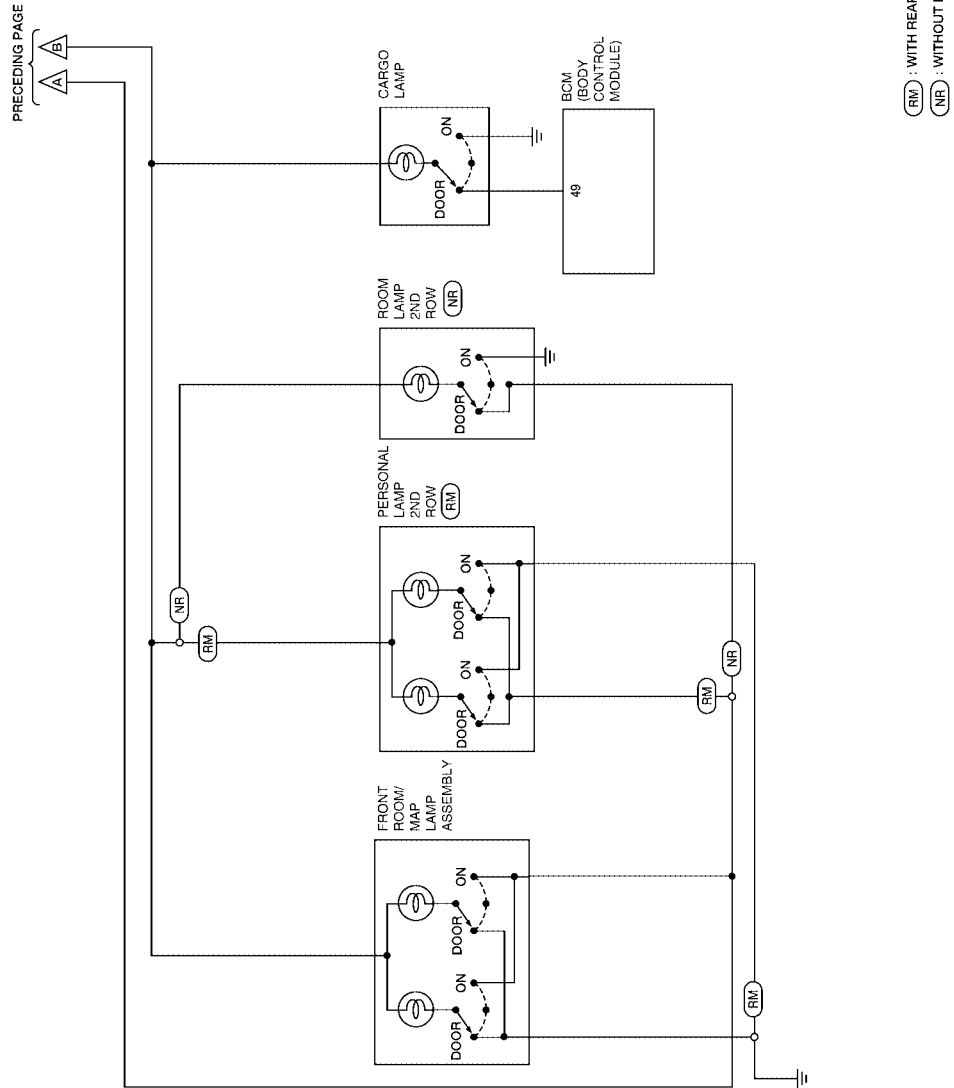

WKWA3092E


INTERIOR ROOM LAMP

Wiring Diagram — INT/L —


EKS00FXB

LT-INT/L-01

— : DATA LINE

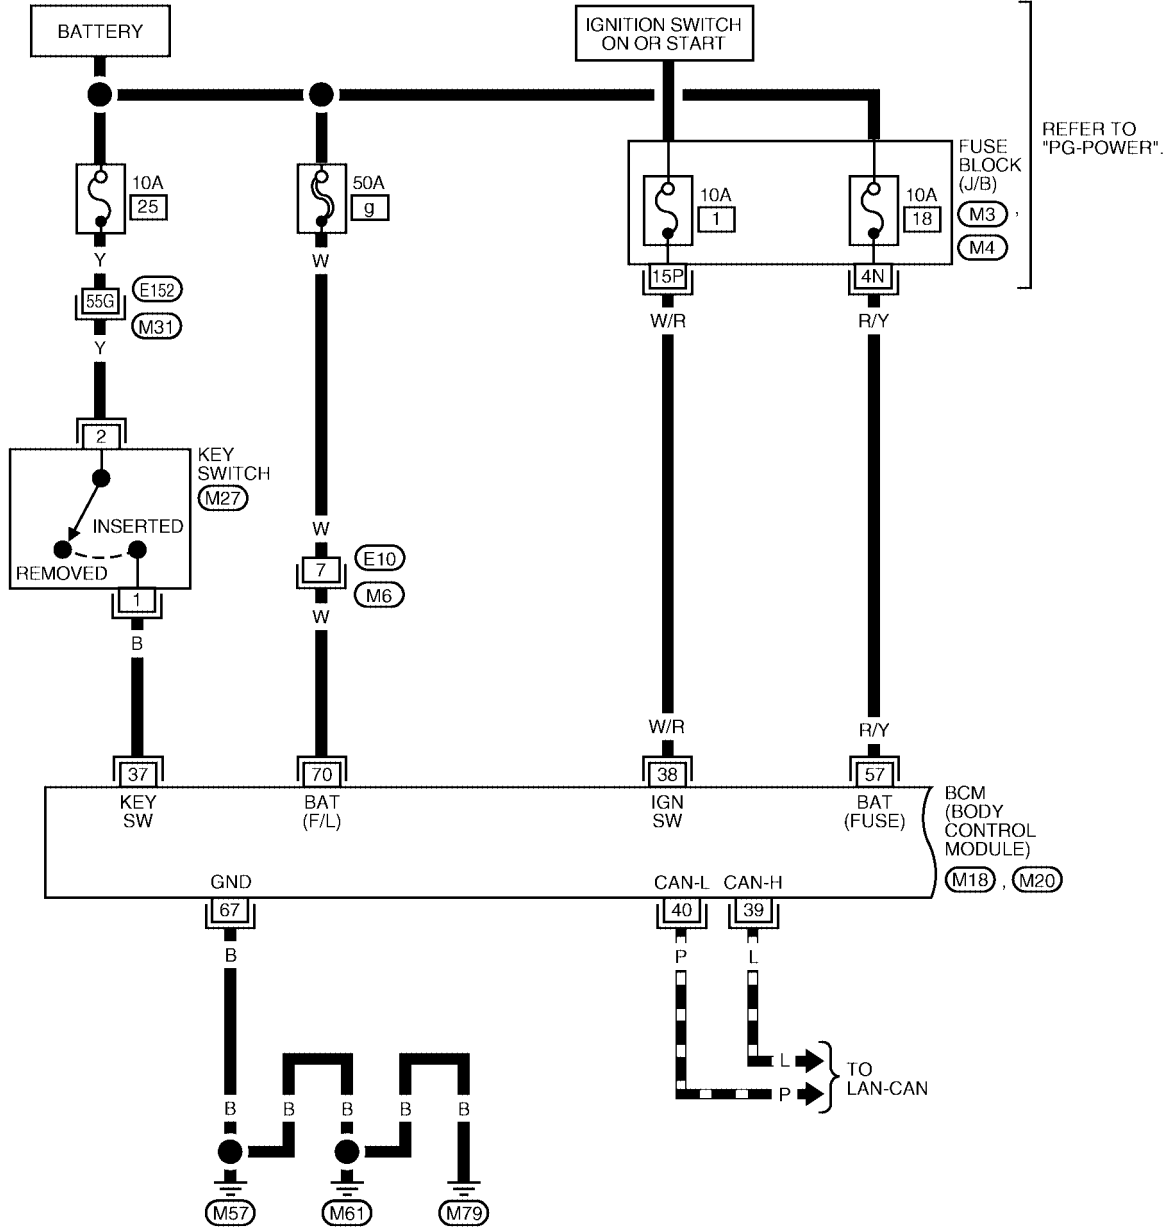

A
B
C
D
E
F
G
H
I
J
LT
L
M


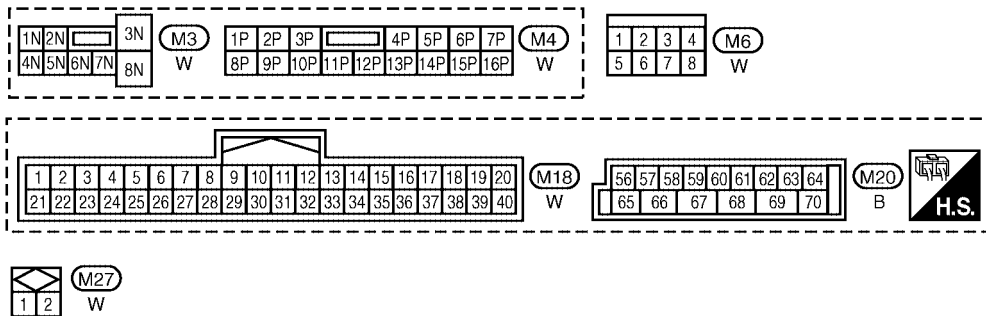


REFER TO THE FOLLOWING.
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA4238E

INTERIOR ROOM LAMP

LT-INT/L-02

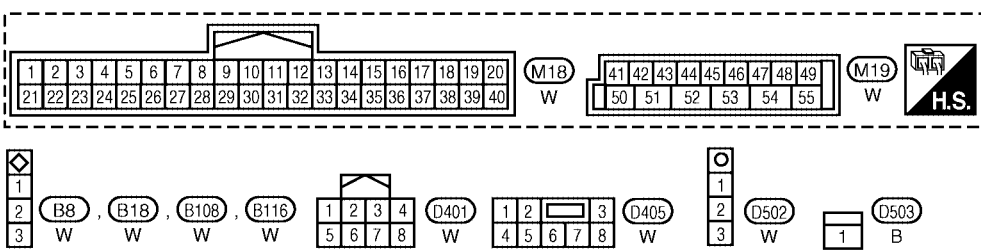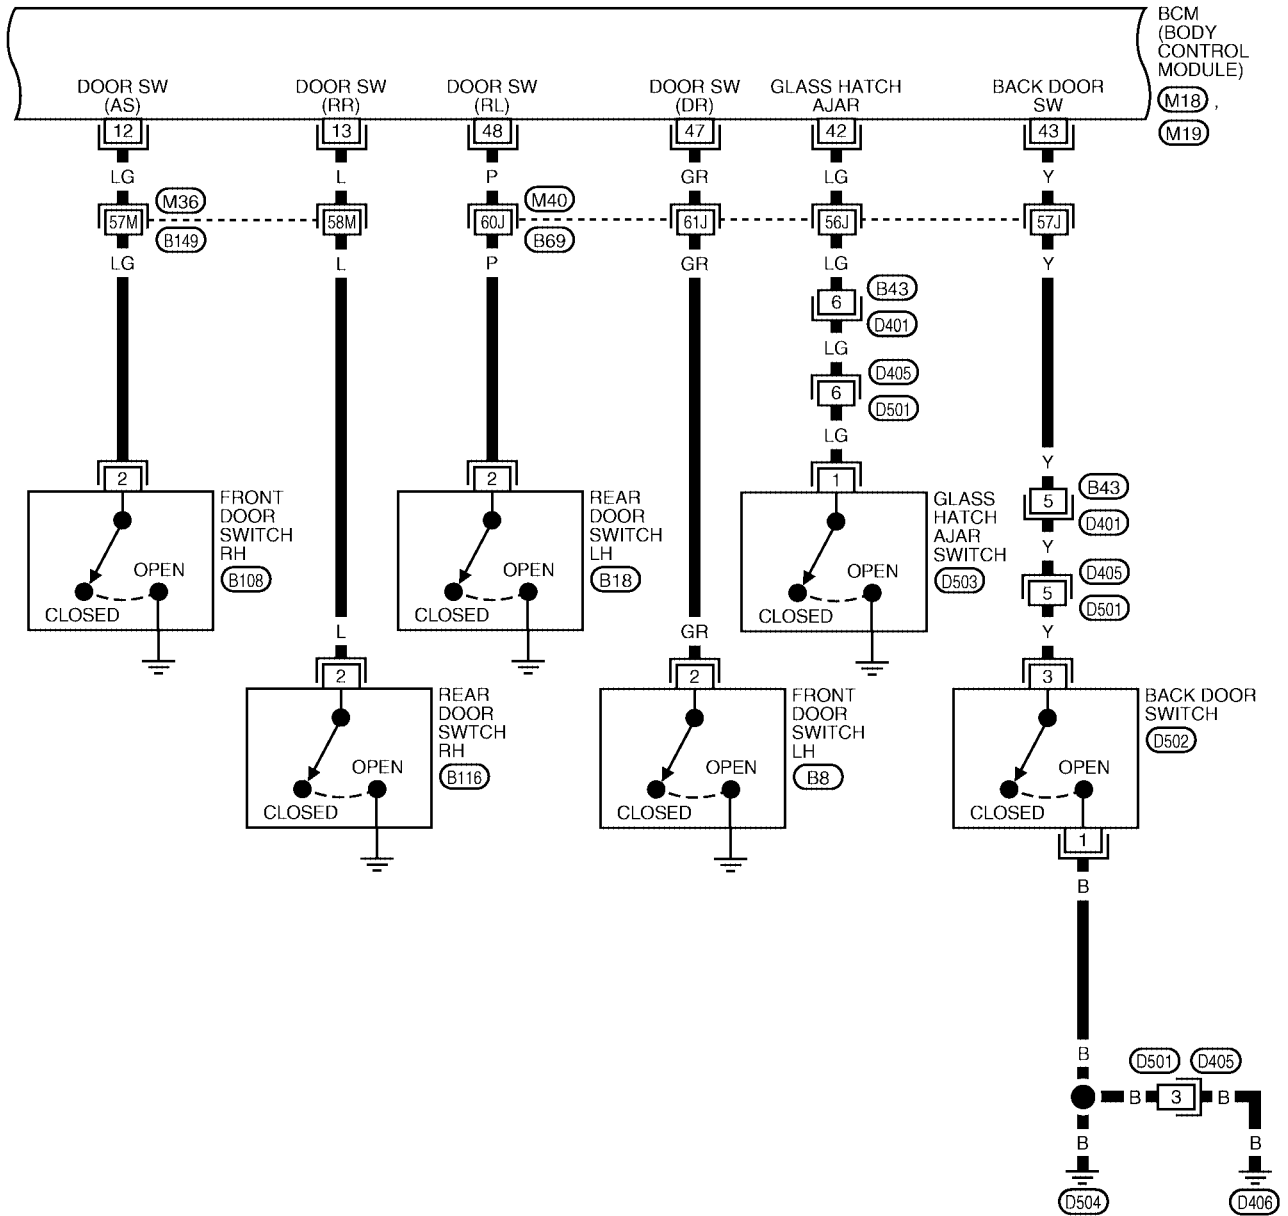





REFER TO THE FOLLOWING.
 (M36), (M40) - SUPER
 MULTIPLE JUNCTION (SMJ)

WKWA4343E

INTERIOR ROOM LAMP

LT-INT/L-03

A
B
C
D
E
F
G
H
I
J
LT
L
M

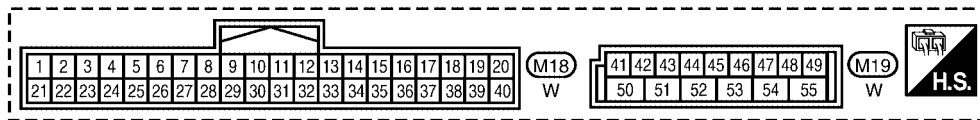
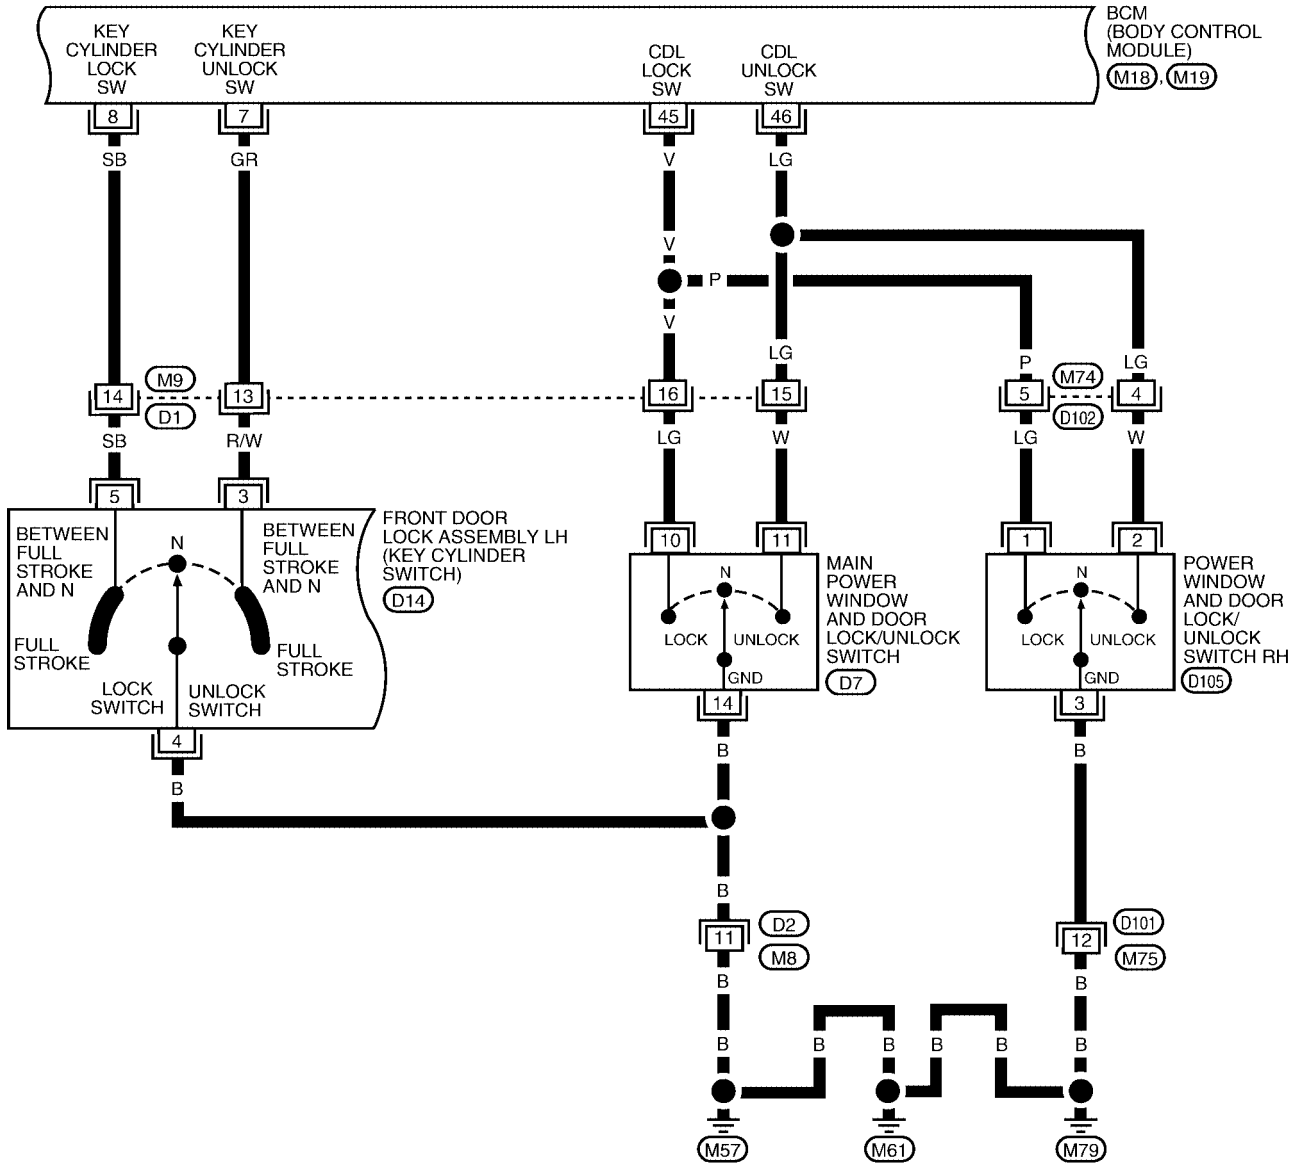


WKWA2070E

INTERIOR ROOM LAMP

LT-INT/L-04

⬡VN⬡ : WITH VANITY LAMPS

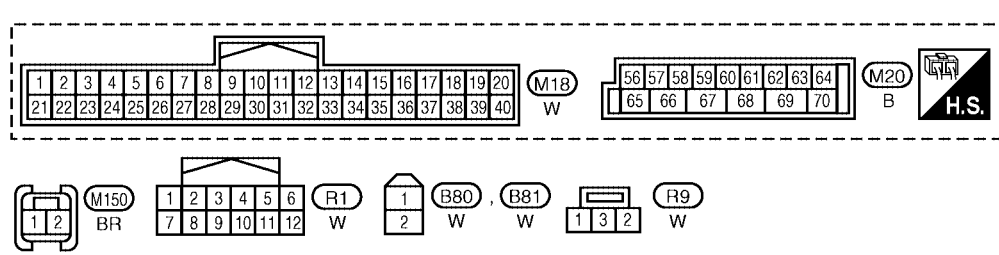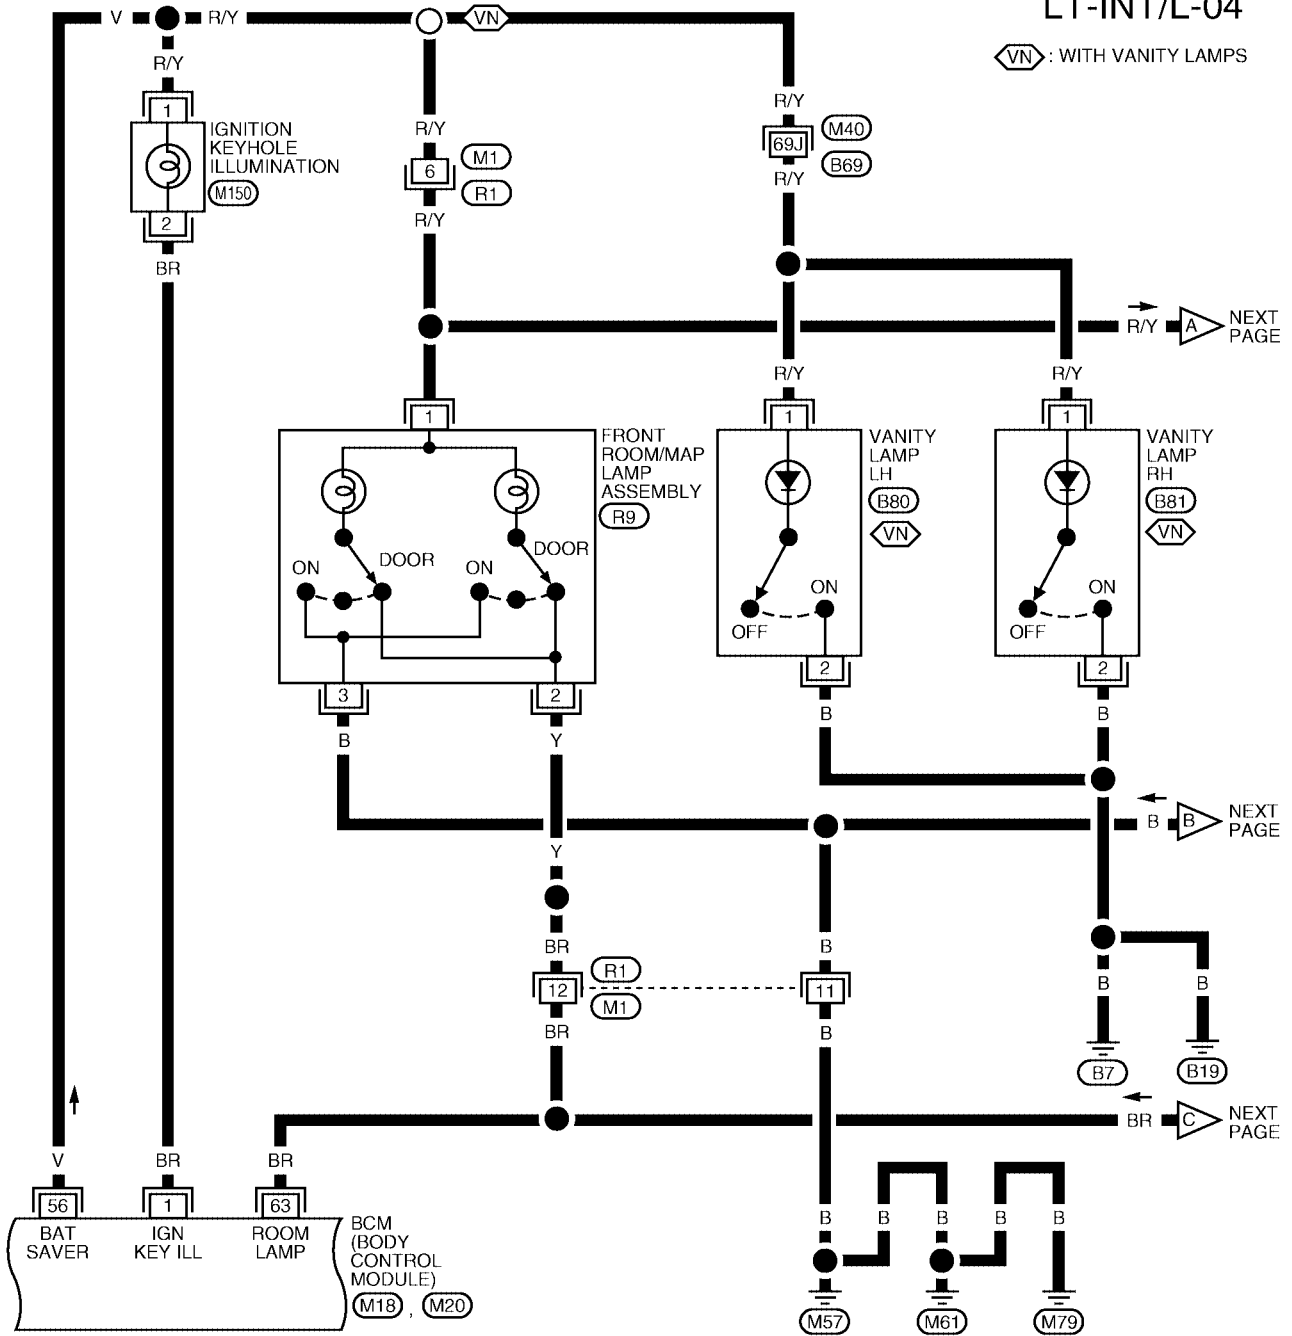


REFER TO THE FOLLOWING.
 ⬡M40⬡ - SUPER MULTIPLE JUNCTION (SMJ)

WKWA4239E


INTERIOR ROOM LAMP

LT-INT/L-05

: WITH REAR MAP LAMPS

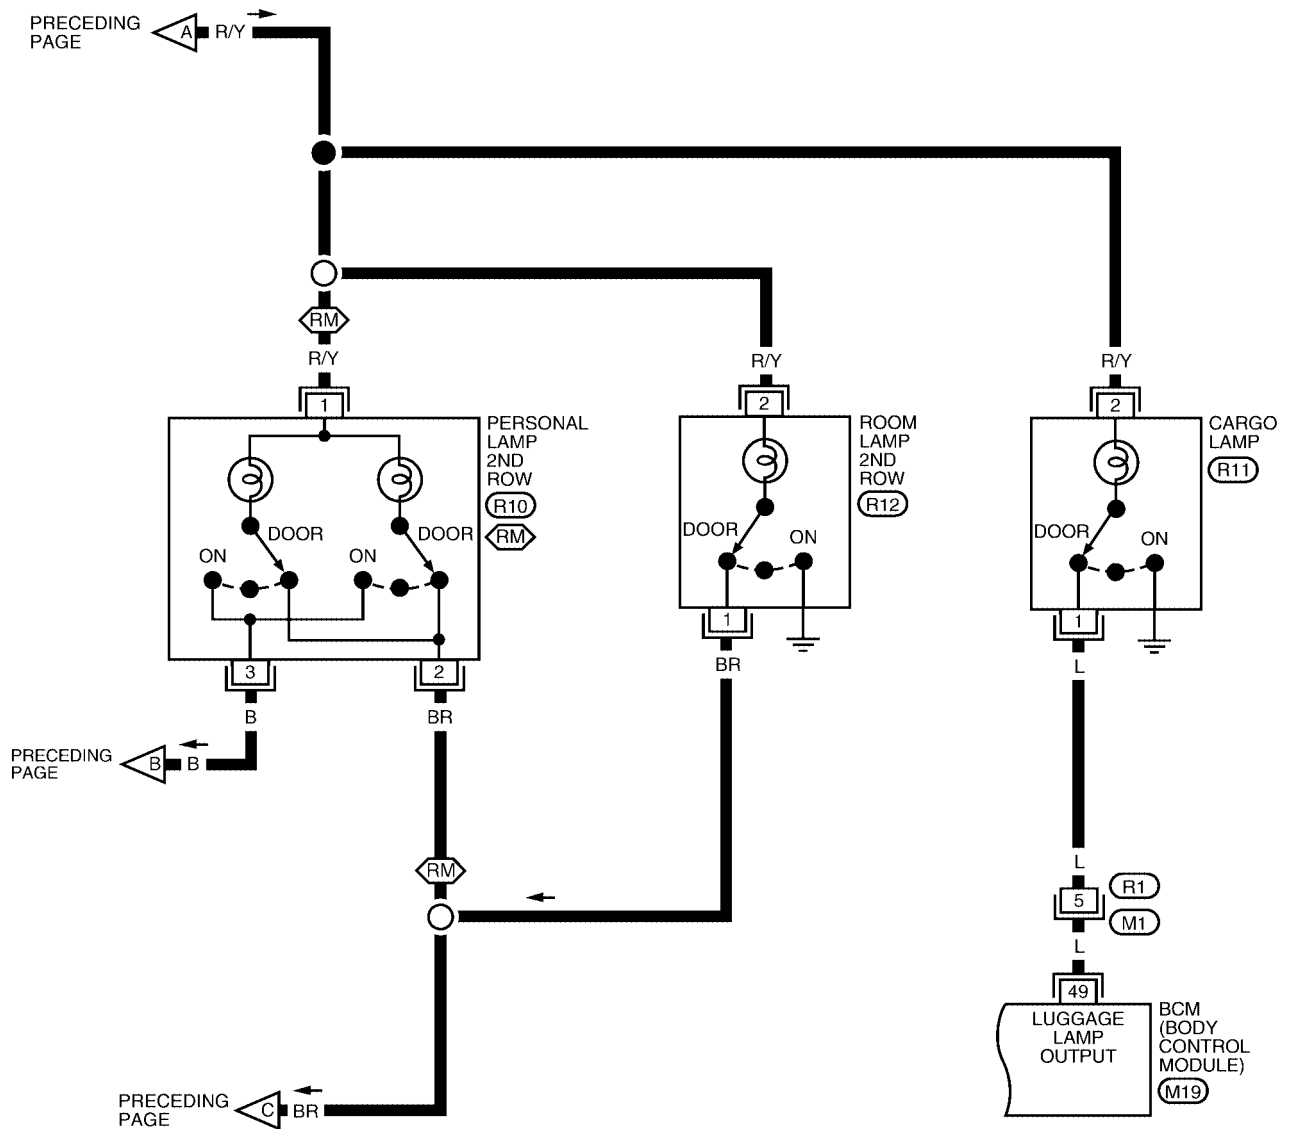

A
B
C
D
E
F
G
H
I
J
LT
L
M



WKWA3094E

INTERIOR ROOM LAMP

Terminals and Reference Values for BCM

EKS00FXC

Refer to [BCS-12, "Terminals and Reference Values for BCM"](#) .

How to Proceed With Trouble Diagnosis

EKS00FXD

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-116, "System Description"](#) .
3. Carry out the Preliminary Check. Refer to [LT-126, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Does the interior room lamp operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

Preliminary Check

EKS00FXE

INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT

Refer to [BCS-16, "BCM Power Supply and Ground Circuit Check"](#) .

CONSULT-II Function (BCM)

EKS00FXF

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

CONSULT-II OPERATION

CAUTION:


If **CONSULT-II** is used with no connection of **CONSULT-II CONVERTER**, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.

1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

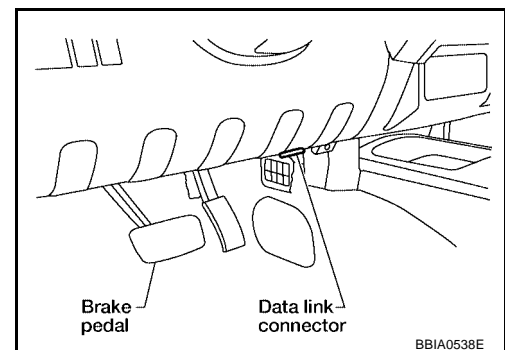


INTERIOR ROOM LAMP


2. Touch "START (NISSAN BASED VHCL)".

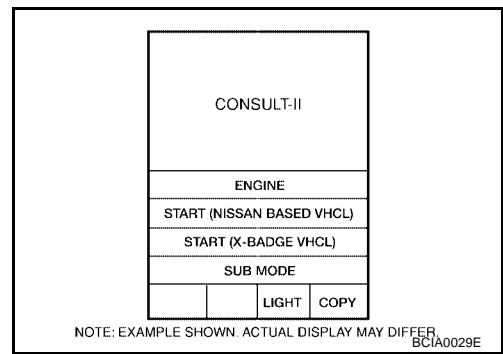

3. Touch "BCM" on "SELECT SYSTEM" screen.
If "BCM" is not indicated, go to [GI-40, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

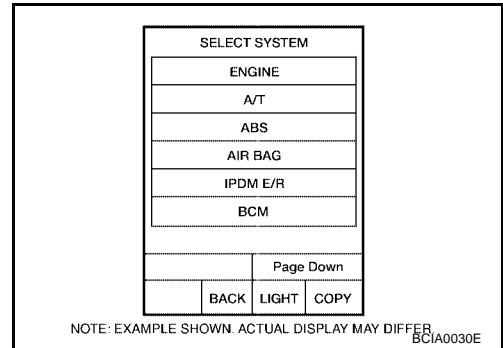

4. Touch "INT LAMP" on "SELECT TEST ITEM" screen.

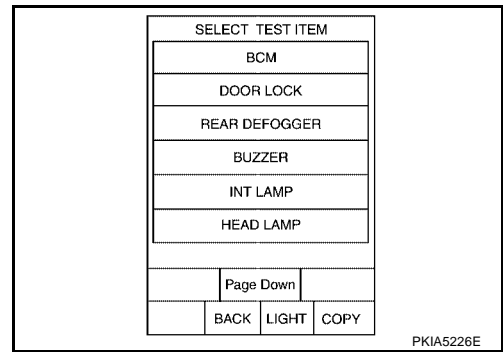

WORK SUPPORT

Operation Procedure

1. Touch "INT LAMP" on "SELECT TEST ITEM" screen.
2. Touch "WORK SUPPORT" on "SELECT DIAG MODE" screen.
3. Touch "SET I/L D-UNLCK INTCON" on "SELECT WORK ITEM" screen.
4. Touch "START".
5. Touch "CHANGE SETT".
6. The setting will be changed and "CUSTOMIZING COMPLETED" will be displayed.
7. Touch "END".

Display Item List

Item	Description	CONSULT-II
SET I/L D-UNLCK INTCON	The 30 seconds operating function of the interior room lamps and the ignition keyhole illumination can be selected when front door LH is released (unlocked).	ON/OFF
ROOM LAMP ON TIME SET	The time in order to escalate illumination can be adjusted when the interior room lamps and the ignition keyhole illumination is turned on.	MODE 1 - 7
ROOM LAMP OFF TIME SET	The time in order to diminish illumination can be adjusted when the interior room lamps and the ignition keyhole illumination is turned off.	MODE 1 - 7

Reference between "MODE" and "TIME" for "TURN ON/OFF".

INTERIOR ROOM LAMP

MODE	1	2	3	4	5	6	7
Time (sec.)	0.5	1	2	3	4	5	0

DATA MONITOR

Operation Procedure

1. Touch "INT LAMP" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on "SELECT MONITOR ITEM" screen.

ALL SIGNALS	Monitors all the signals.
SELECTION FROM MENU	Selects and monitors the individual signal.

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

Display Item List

Monitor item		Contents
IGN ON SW	"ON/OFF"	Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
KEY ON SW	"ON/OFF"	Displays "Key inserted (ON)/key removed (OFF)" status judged from the key switch signal.
DOOR SW-DR	"ON/OFF"	Displays status of the front door LH as judged from the front door switch LH signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-AS	"ON/OFF"	Displays "Door open (ON)/Door closed (OFF)" status, determined from front door switch RH signal.
DOOR SW-RR	"ON/OFF"	Displays "Door open (ON)/Door closed (OFF)" status, determined from rear door switch RH signal.
DOOR SW-RL	"ON/OFF"	Displays "Door open (ON)/Door closed (OFF)" status, determined from rear door switch LH signal.
BACK DOOR SW	"ON/OFF"	Displays "Door open (ON)/Door closed (OFF)" status, determined from back door switch signal.
KEY CYL LK-SW	"ON/OFF"	Displays "Door locked (ON)" status, determined from key cylinder lock switch in front door LH.
KEY CYL UN-SW	"ON/OFF"	Displays "Door unlocked (OFF)" status, determined from key cylinder lock switch in front door LH.
CDL LOCK SW	"ON/OFF"	Displays "Door locked (ON)/Door unlocked (OFF)" status, determined from locking detection switch in front door LH.
CDL UNLOCK SW	"ON/OFF"	Displays "Door unlocked (OFF)" status, determined from locking detection switch in front door RH.
KEYLESS LOCK	"ON/OFF"	Displays "Locked (ON)/Other (OFF)" status, determined from lock signal.
KEYLESS UNLOCK	"ON/OFF"	Displays "Unlocked (ON)/Other (OFF)" status, determined from unlock signal.

ACTIVE TEST

Operation Procedure

1. Touch "INT LAMP" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" or "OFF" deactivates the operation.

INTERIOR ROOM LAMP

Display Item List

Test item	Description
INT LAMP	Interior room lamp can be operated by any ON-OFF operations.
IGN ILLUM	Ignition keyhole illumination can be operated by ON-OFF operation.

Room/Map Lamp Control Does Not Operate

EKS00FXG

1. CHECK EACH SWITCH

Select "BCM" on CONSULT-II. With "INT LAMP" data monitor, make sure switches listed in display item list turn ON-OFF linked with switch operation. Refer to [LT-128, "Display Item List"](#) for switches and their functions.

OK or NG

- OK >> GO TO 2.
 NG >> Inspect malfunctioning switch system.

DATA MONITOR	
MONITOR	
IGN ON SW	ON
KEY ON SW	ON
DOOR SW-DR	ON
DOOR SW-AS	ON
DOOR SW-RR	OFF
DOOR SW-RL	OFF
BACK DOOR SW	OFF
KEY CYL LK-SW	OFF
KEY CYL UN-SW	OFF

SKIA5930E

2. ACTIVE TEST

- Select "BCM" on CONSULT-II. Select "INT LAMP" active test.
- When switch is in DOOR position, use active test to make sure interior room lamp operates.

Room lamps should turn on.

OK or NG

- OK >> Replace BCM. Refer to [BCS-27, "Removal and Installation"](#).
 NG >> GO TO 3.

ACTIVE TEST	
INT LAMP	ON
	OFF

LKIA0092E


3. CHECK INTERIOR ROOM LAMP INPUT

- Turn ignition switch OFF.
- Check voltage between front room/map lamp assembly harness connector R9 terminal 1 and ground.

1 - Ground : Battery voltage should exist.

OK or NG

- OK >> GO TO 4.
 NG >> GO TO 5.

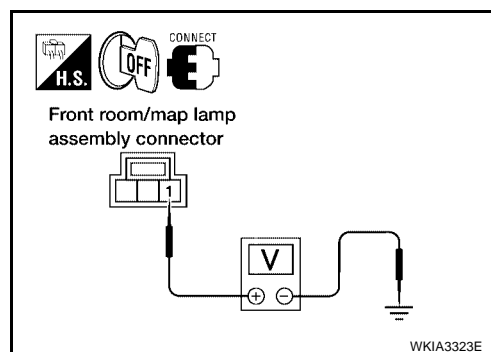

INTERIOR ROOM LAMP


4. CHECK INTERIOR ROOM LAMP CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between BCM harness connector M20 terminal 63 and front room/map lamp assembly harness connector R9 terminal 2.

63 - 2 : Continuity should exist.

OK or NG

- OK >> Replace BCM if interior lamp does not work after setting the connector again. Refer to [BCS-27, "Removal and Installation"](#).
- NG >> Repair harness or connector.

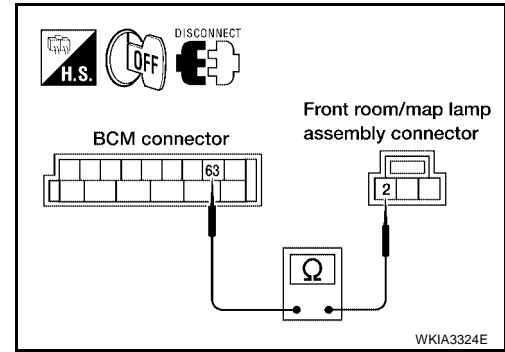


5. CHECK INTERIOR ROOM LAMP CIRCUIT

1. Disconnect BCM connector and front room/map lamp assembly connector.
2. Check continuity between BCM harness connector M20 terminal 56 and front room/map lamp assembly harness connector R9 terminal 1.

56 - 1 : Continuity should exist.

OK or NG

- OK >> Replace BCM if interior lamp does not work after setting the connector again. Refer to [BCS-27, "Removal and Installation"](#).
- NG >> Repair harness or connector between BCM and room/map lamp.

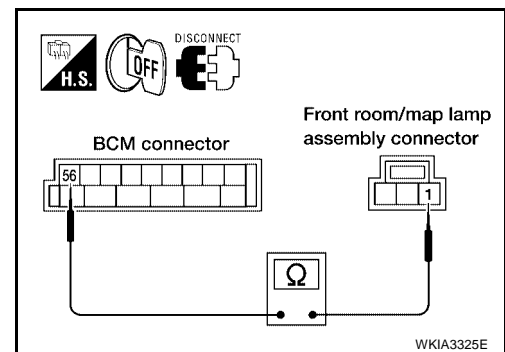

INTERIOR ROOM LAMP

Personal Lamp Control Does Not Operate (Room/Map Lamps Operate)

EKS00FXH

1. CHECK EACH DOOR SWITCH

Select "BCM" on CONSULT-II. With "INT LAMP" data monitor, make sure switches listed in display item list turn ON-OFF linked with switch operation. Refer to [LT-117, "SWITCH OPERATION"](#) for switches and their function.

OK or NG

- OK >> GO TO 2.
- NG >> Inspect malfunctioning door switch.

DATA MONITOR	
MONITOR	
IGN ON SW	ON
KEY ON SW	ON
DOOR SW-DR	ON
DOOR SW-AS	ON
DOOR SW-RR	OFF
DOOR SW-RL	OFF
BACK DOOR SW	OFF
KEY CYL LK-SW	OFF
KEY CYL UN-SW	OFF

SKIA5930E


2. CHECK PERSONAL LAMP OUTPUT

1. Turn ignition switch OFF.
2. Confirm lamp switch is in the DOOR position.
3. Disconnect personal lamp 2nd row connector.
4. Open any door.
5. Check voltage between personal lamp 2nd row harness connector R10 terminal 1 and ground.

1 - Ground : Battery voltage should exist.

OK or NG

- OK >> GO TO 3.
- NG >> Repair harness or connector.

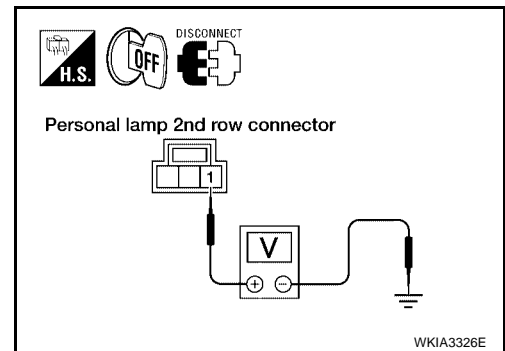


3. CHECK PERSONAL LAMP CONTROL CIRCUIT

1. Disconnect front room/map lamp assembly connector.
2. Check continuity between front room/map lamp assembly harness connector R9 terminal 3 and personal lamp 2nd row harness connector R10 terminal 3.

3 - 3 : Continuity should exist.

OK or NG

- OK >> Replace personal lamp 2nd row.
- NG >> Repair harness or connector.

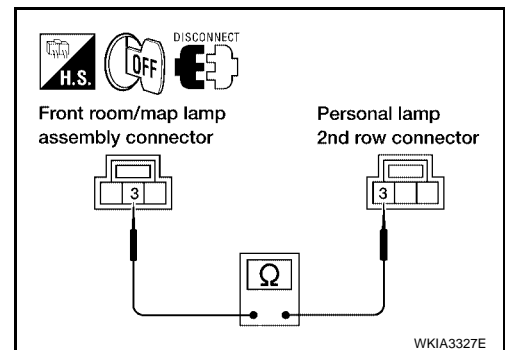

INTERIOR ROOM LAMP


3. CHECK IGNITION KEYHOLE ILLUMINATION POWER SUPPLY INPUT

1. Check voltage between ignition keyhole illumination harness connector M150 terminal 1 and ground.

Terminals		(-)	Voltage (Approx.)
(+)			
Ignition keyhole illumination connector	Terminal		
M150	1	Ground	Battery voltage

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 6.

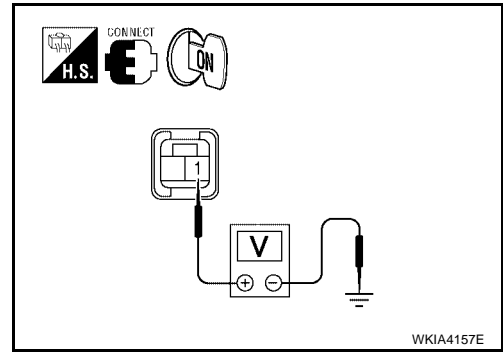


4. CHECK IGNITION KEYHOLE ILLUMINATION BULB

1. Turn ignition switch OFF.
2. Disconnect ignition keyhole illumination connector.
3. Check continuity between ignition keyhole illumination terminals 1 and 2.

Terminals		Continuity
Ignition keyhole illumination terminal		
1	2	Yes

OK or NG

- OK >> GO TO 5.
- NG >> Replace ignition keyhole illumination bulb.

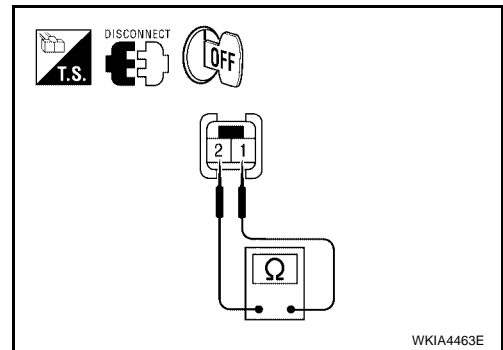


5. CHECK IGNITION KEYHOLE ILLUMINATION CONTROL CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between BCM harness connector M18 (A) terminal 1 and ignition keyhole illumination harness connector M150 (B) terminal 2.

A		B		Continuity
BCM connector	Terminal	Ignition keyhole illumination connector	Terminal	
M18	1	M150	2	Yes

OK or NG

- OK >> Replace BCM if ignition keyhole illumination does not work after setting the connector again. Refer to [BCS-27, "Removal and Installation"](#).
- NG >> Repair harness or connector.

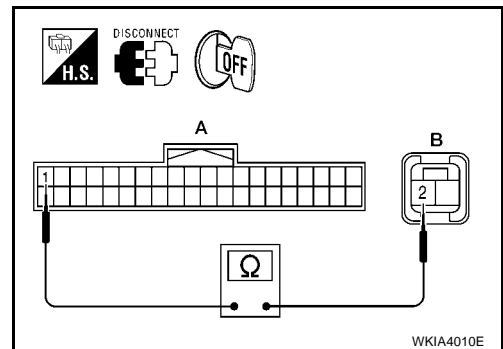


INTERIOR ROOM LAMP

6. CHECK IGNITION KEYHOLE ILLUMINATION POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and ignition keyhole illumination connector.
3. Check continuity between BCM harness connector M20 (A) terminal 56 and ignition keyhole illumination harness connector M150 (B) terminal 1.

A		B		Continuity
BCM connector	Terminal	Ignition keyhole illumination connector	Terminal	
M20	56	M150	1	Yes

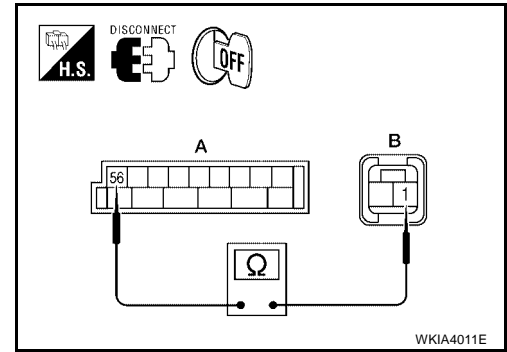

OK or NG

- OK >> Replace BCM if ignition keyhole illumination does not work after setting the connector again.
Refer to [BCS-27, "Removal and Installation"](#).
- NG >> Repair harness or connector.


ILLUMINATION

PFP:27545

ILLUMINATION

Component Parts and Harness Connector Location

EKS00FXK

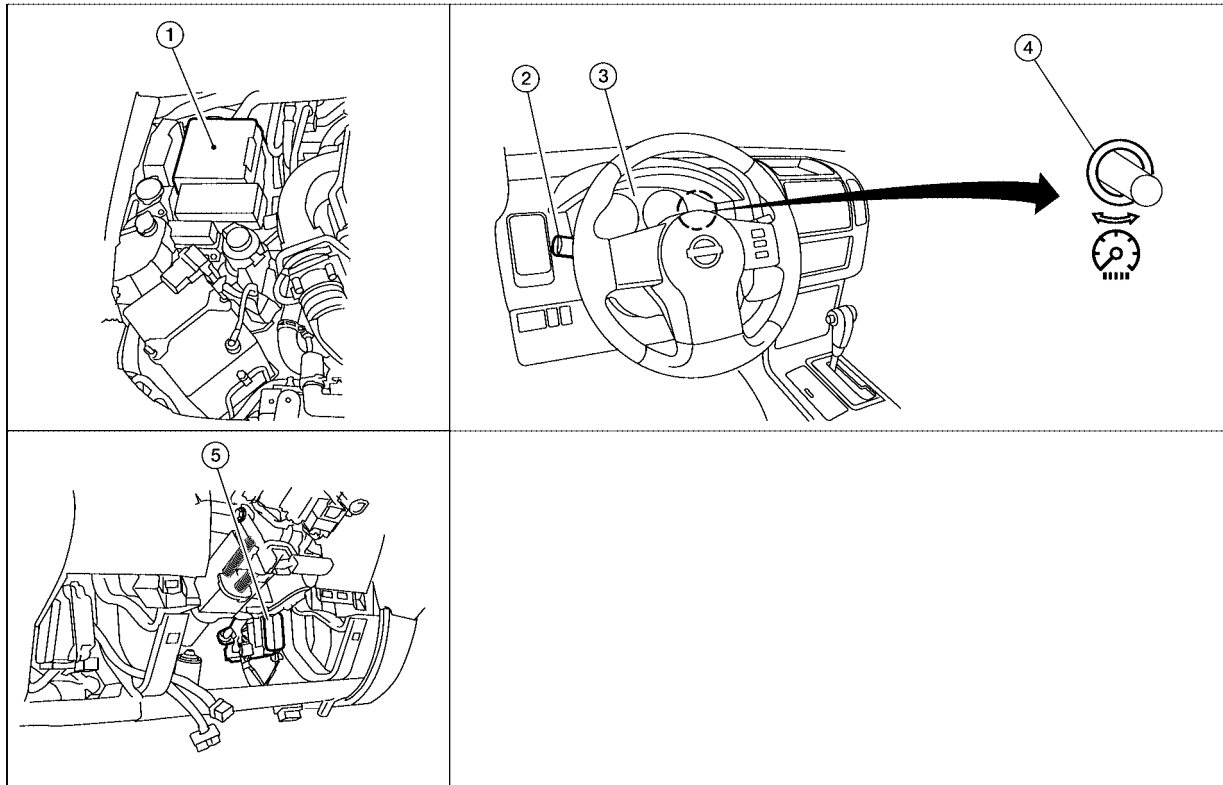

WKIA4973E

- | | | |
|--|--|-----------------------------|
| 1. IPDM E/R
E118, E119, E120, E121, E122,
E123, E124 | 2. Combination switch (lighting switch)
M28 | 3. Combination meter
M24 |
| 4. Illumination control switch
(built into combination meter) | 5. BCM
M18, M19, M20
(view with instrument lower panel LH removed) | |

System Description

EKS00FXL

Control of the illumination lamps operation is dependent upon the position of the lighting switch (combination switch). When the lighting switch is placed in the 1ST or 2ND position (or if the auto light system is activated) the BCM (body control module) receives input signal requesting the illumination lamps to illuminate. This input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the tail lamp relay coil. This relay, when energized, directs power to the illumination lamps, which then illuminate. Power is supplied at all times

- to ignition relay, located in the IPDM E/R, and
- to tail lamp relay, located in the IPDM E/R, and
- through 50A fusible link (letter **g**, located in the fuse and fusible link box)
- to BCM terminal 70, and
- through 20A fuse (No. 53, located in the IPDM E/R)
- to CPU of the IPDM E/R, and
- through 10A fuse [No.19, located in fuse block (J/B)]
- to combination meter terminal 3.

With the ignition switch in the ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse [No. 1, located in the fuse block (J/B)]

A
B
C
D
E
F
G
H
I
J
LT

ILLUMINATION

- to BCM terminal 38.

Ground is supplied

- to BCM terminal 67 and
- to combination meter terminals 13 and 23
- through grounds M57, M61 and M79, and
- to IPDM E/R terminals 38 and 59
- through grounds E9, E15 and E24.

ILLUMINATION OPERATION BY LIGHTING SWITCH

With the lighting switch in the 1ST or 2ND position (or if the auto light system is activated), the BCM receives input signal requesting the illumination lamps to illuminate. This input signal is communicated to the IPDM E/R across the CAN communication lines. The CPU of the IPDM E/R controls the tail lamp relay coil, which, when energized, directs power

- through 10A fuse (No. 37, located in the IPDM E/R)
- through IPDM E/R terminal 57
- to AV switch terminal 3 (with NAVI)
- to hazard switch terminal 3
- to audio unit terminal 8
- to glove box lamp terminal 1
- to display control unit terminal 14 (with NAVI)
- to 4WD shift switch terminal 7 (with 4-wheel drive)
- to front air control terminal 8
- to DVD player terminal 12 (with DVD entertainment system)
- to NAVI control unit terminal 61 (with NAVI)
- to rear air control terminal 1 (with auto A/C)
- to pedal adjusting switch terminal 5 (with adjustable pedals)
- to door mirror remote control switch terminal 16
- to electric brake (pre-wiring) terminal 4 (with trailer tow 7 pin)
- to A/T device terminal 3
- to front heated seat switch LH and RH terminal 5 (with heated seats)
- to VDC OFF switch terminal 3 and
- to HDC switch terminal 5 (with hill descent control and hill start assist).

Illumination is controlled

- through combination meter terminal 22
- to AV switch terminal 4 (with NAVI)
- to hazard switch terminal 4
- to audio unit terminal 7
- to 4WD switch terminal 8 (with 4-wheel drive)
- to front air control terminal 9
- to DVD player terminal 10 (with DVD entertainment system)
- to pedal adjusting switch terminal 6 (with adjustable pedals)
- to door mirror remote control switch terminal 15
- to A/T device terminal 5
- to front heated seat switch LH and RH terminal 6 (with heated seats)
- to VDC OFF switch terminal 4 and
- to HDC switch terminal 6 (with hill descent control and hill start assist).

Ground is supplied

- to glove box lamp terminal 2
- to display control unit terminal 3 (with NAVI)
- to electric brake (pre-wiring) terminal 1 (with trailer tow 7 pin) and

ILLUMINATION

- to rear air control terminal 3 (with auto A/C)
- through grounds M57, M61 and M79, and
- to NAVI control unit terminal 1 (with NAVI)
- through grounds B117 and B132.

With power and ground supplied, illumination lamps illuminate.

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 1ST or 2ND position (or if auto light system is activated), and the ignition switch is turned from ON or ACC to OFF, the battery saver control function is activated. Under this condition, the illumination lamps remain illuminated for 5 minutes, then the illumination lamps are turned off.

When the lighting switch is turned from OFF to 1ST or 2ND position (or if auto light system is activated) after illumination lamps are turned off by the battery saver control, the illumination lamps illuminate again.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

CAN Communication System Description

EKS00FXM

Refer to [LAN-25, "CAN COMMUNICATION"](#).

A

B

C

D

E

F

G

H

I

J

LT


L

M


ILLUMINATION

Schematic

EKS00FXN

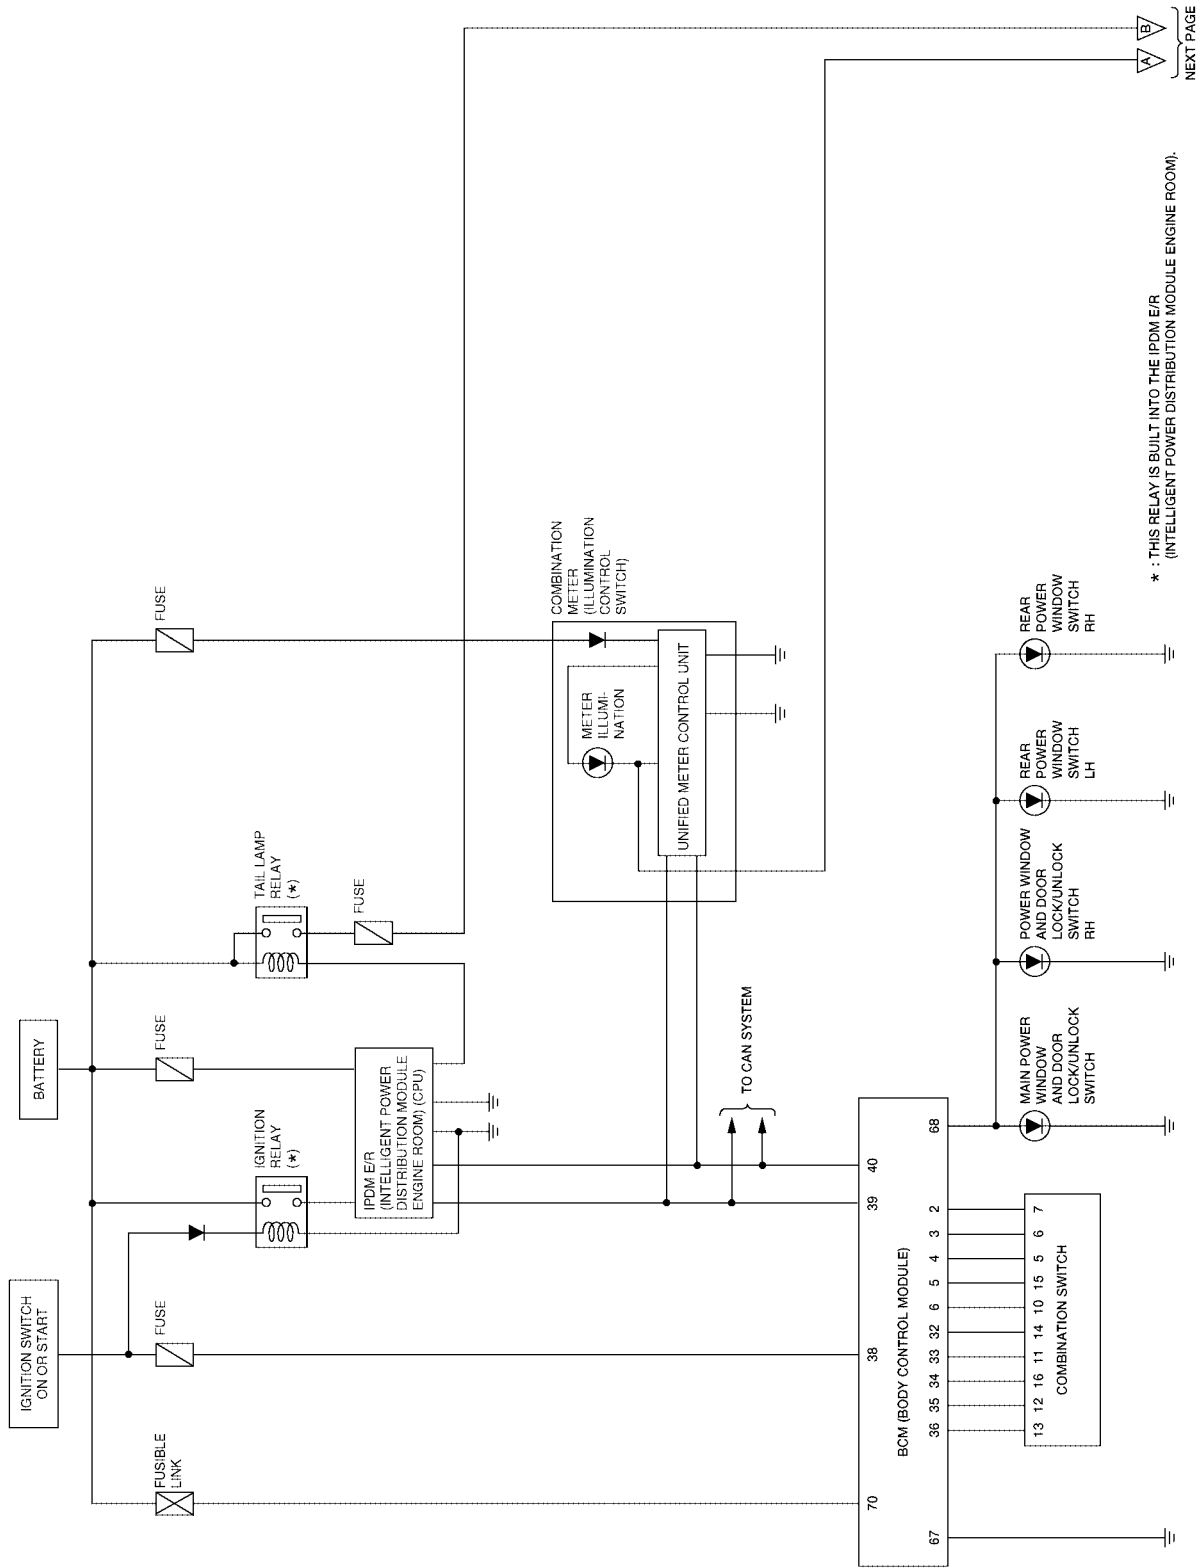


ILLUMINATION

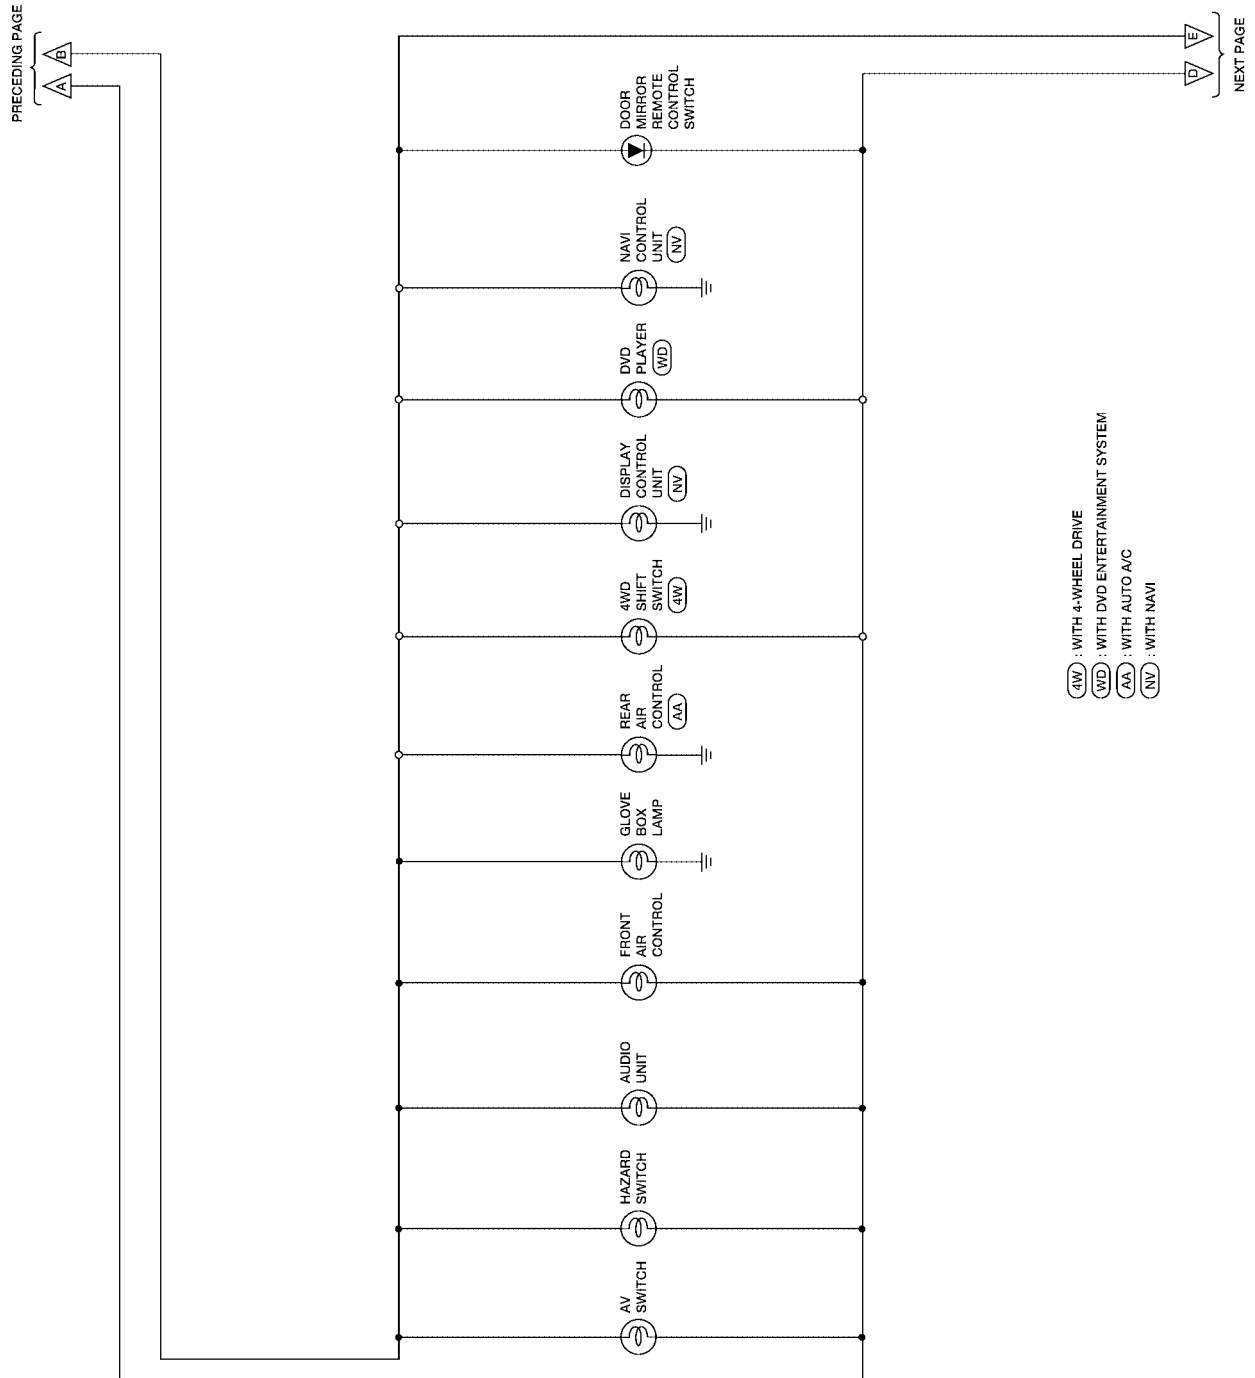

A
B
C
D
E
F
G
H
I
J
LT
L
M

ILLUMINATION

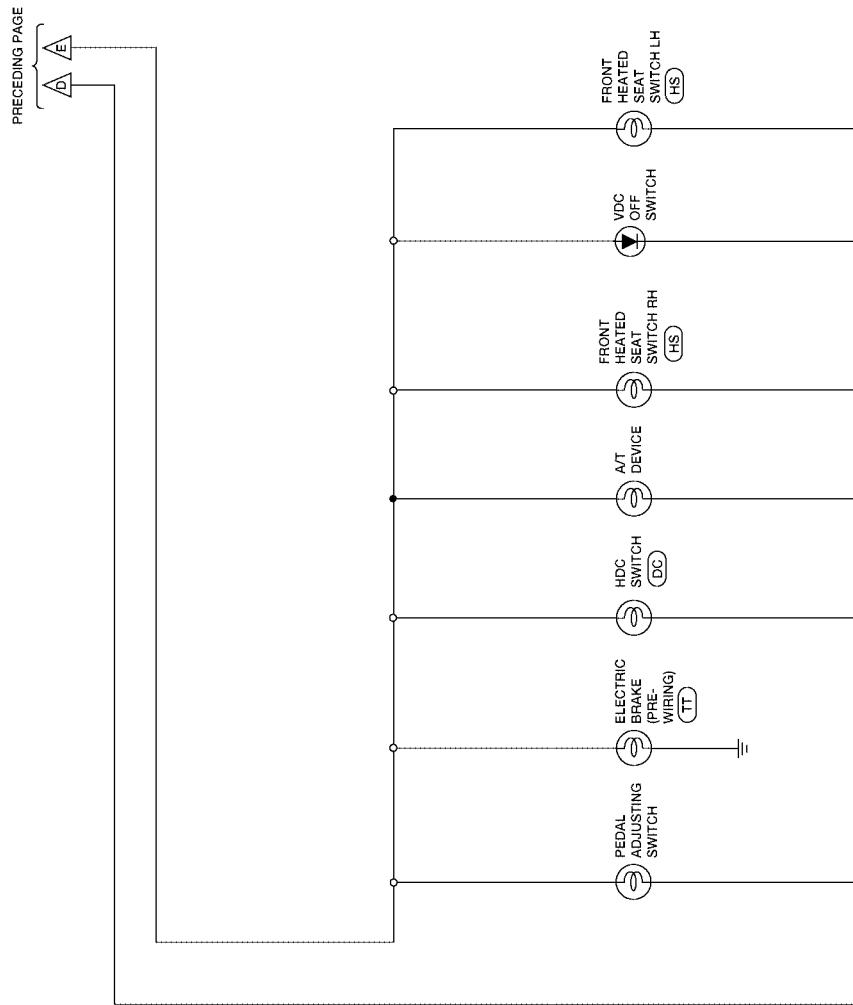

HS : WITH HEATED SEATS
DC : WITH HILL DESCENT CONTROL AND HILL START ASSIST
TT : TRAILER TOW 7 PIN

WKWA4241E




ILLUMINATION

Wiring Diagram — ILL —

EKS00FX0

LT-ILL-01

▬ : DATA LINE

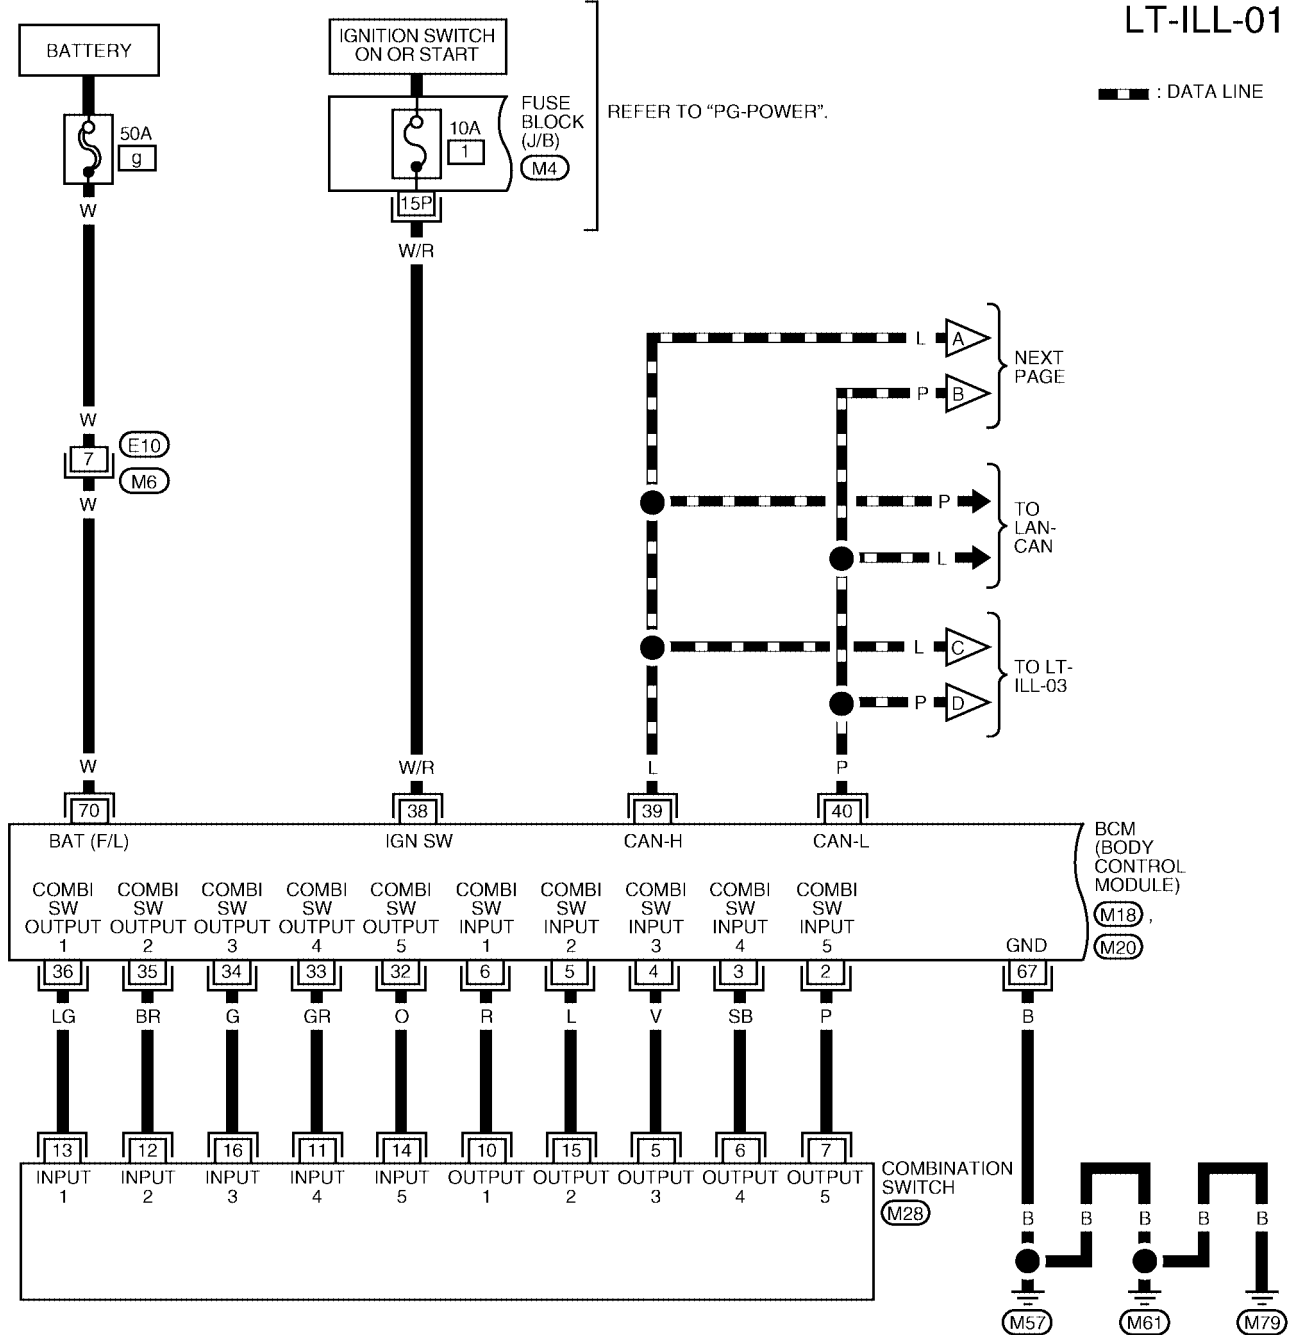


WKWA4242E

ILLUMINATION

LT-ILL-03

: WITH NAVI
 : DATA LINE

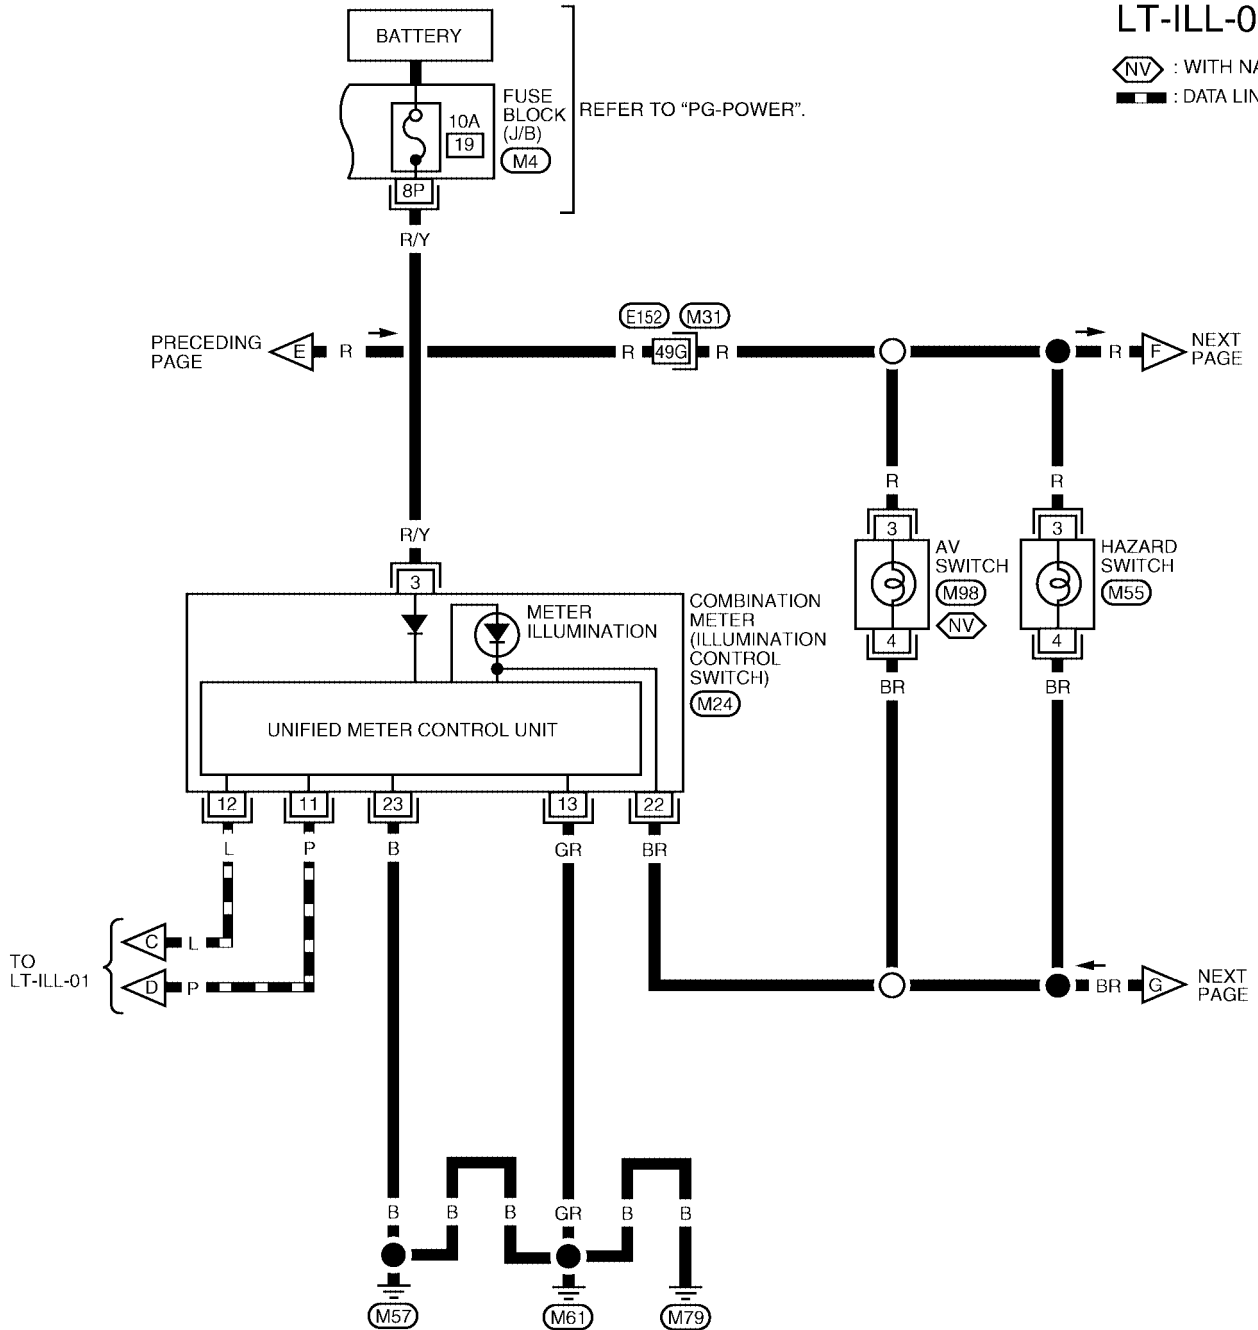

1P	2P	3P	4P	5P	6P	7P	M4		
8P	9P	10P	11P	12P	13P	14P	15P	16P	W

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	M24
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	W


M55	16	14	12	10	8	6	4	2	M98				
4	2	1	3	W	15	13	11	9	7	5	3	1	W

REFER TO THE FOLLOWING.
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA4243E

ILLUMINATION


LT-ILL-04

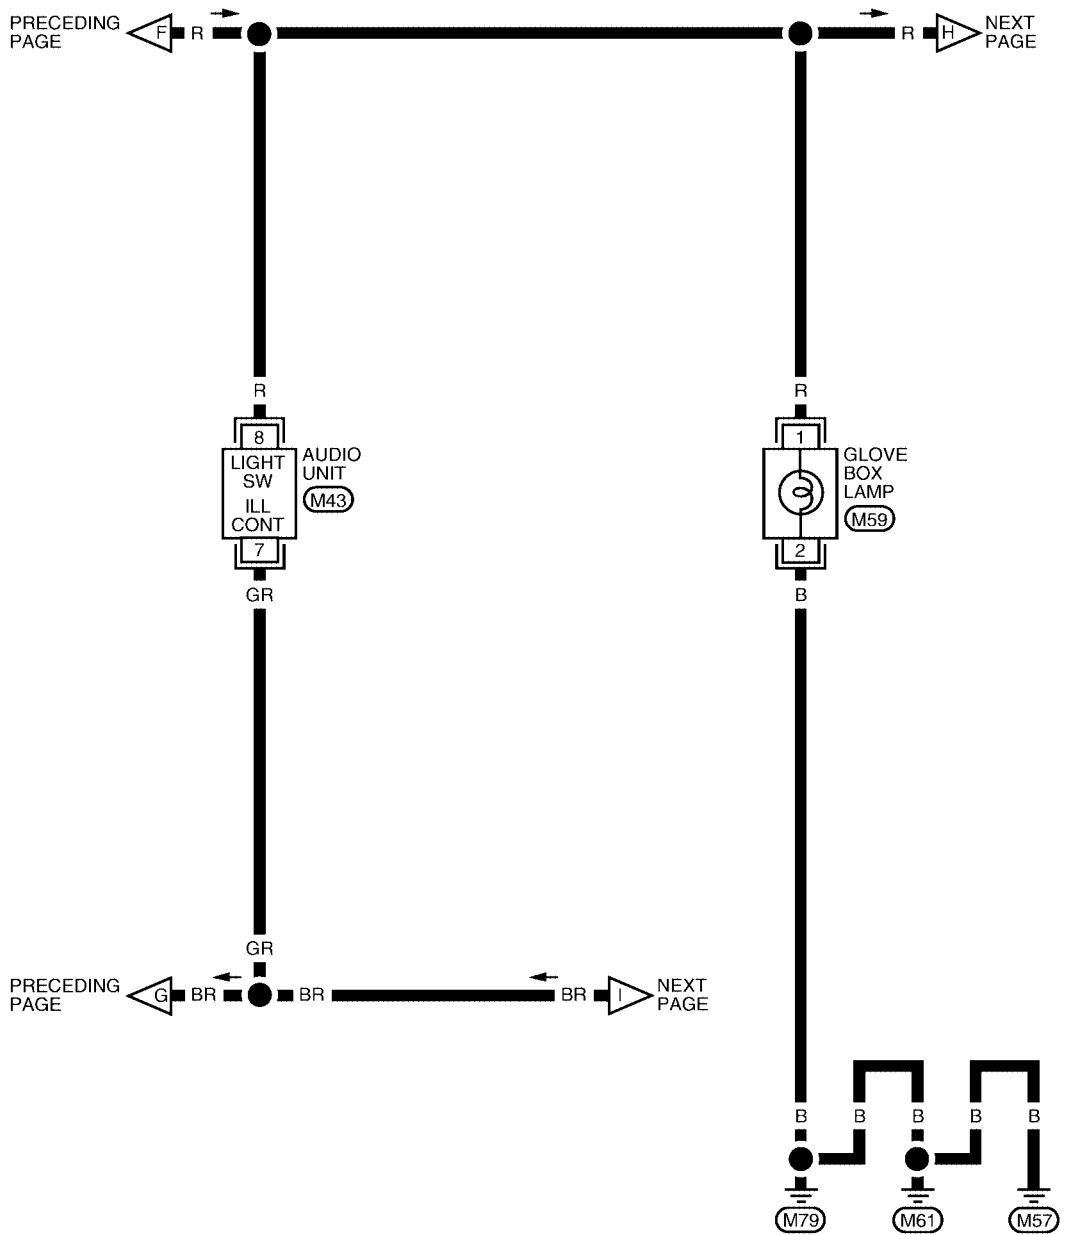



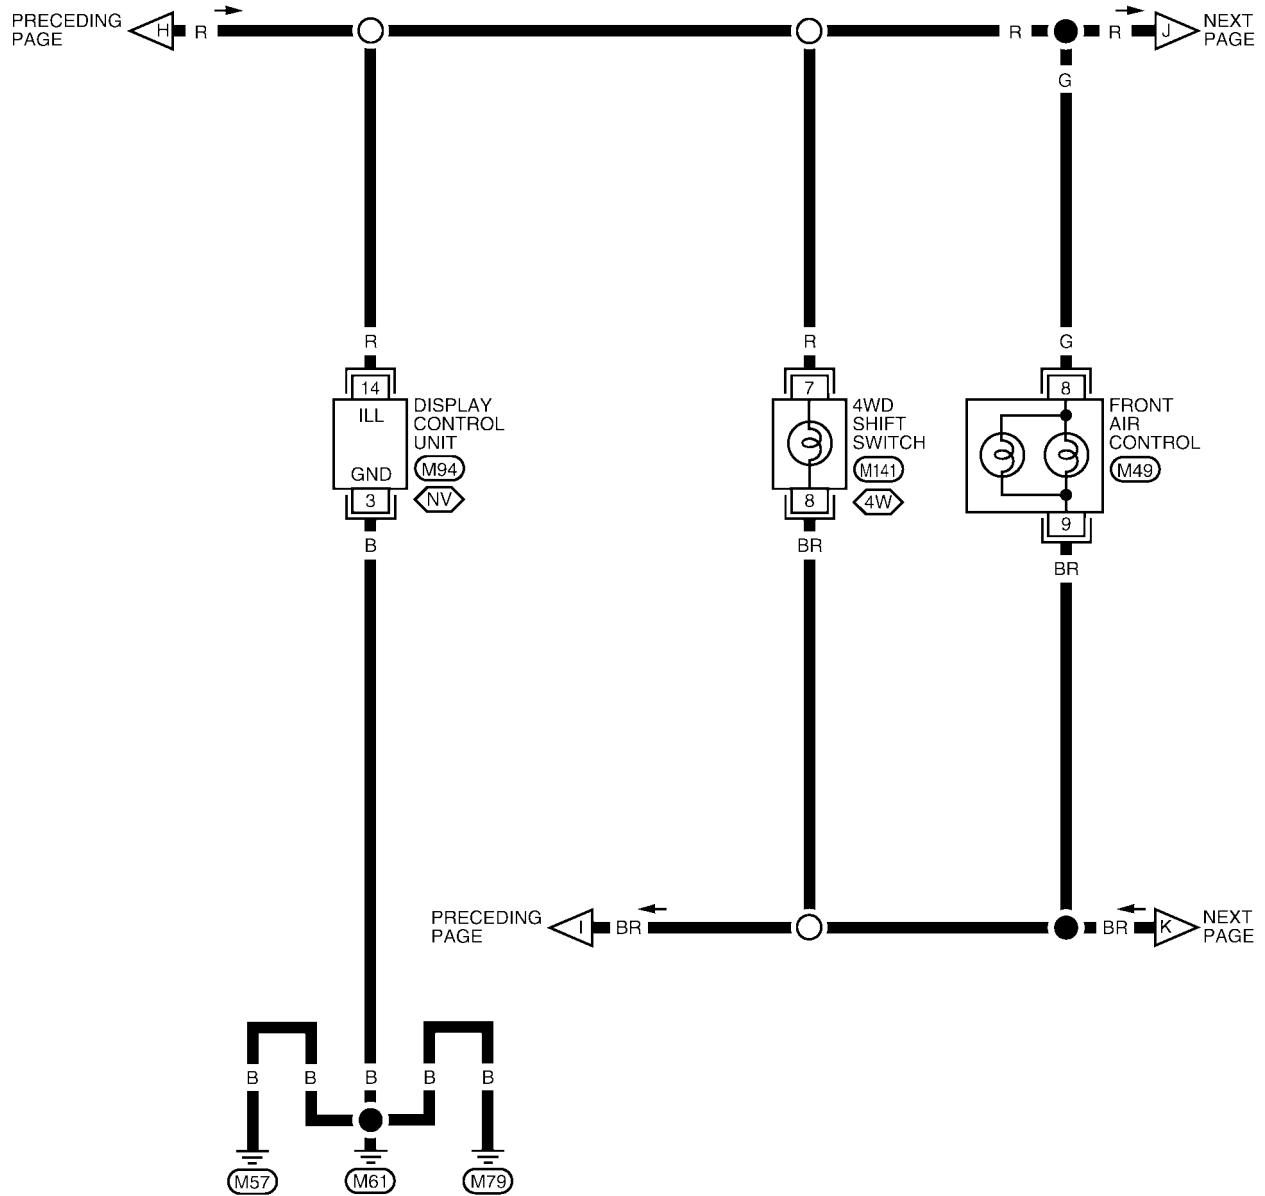
WKWA2079E

ILLUMINATION

LT-ILL-05

 : WITH 4-WHEEL DRIVE

 : WITH NAVI





WKWA2080E

ILLUMINATION


LT-ILL-06

- ⬡NV : WITH NAVI
- ⬡WD : WITH DVD ENTERTAINMENT SYSTEM
- ⬡AA : WITH AUTO A/C

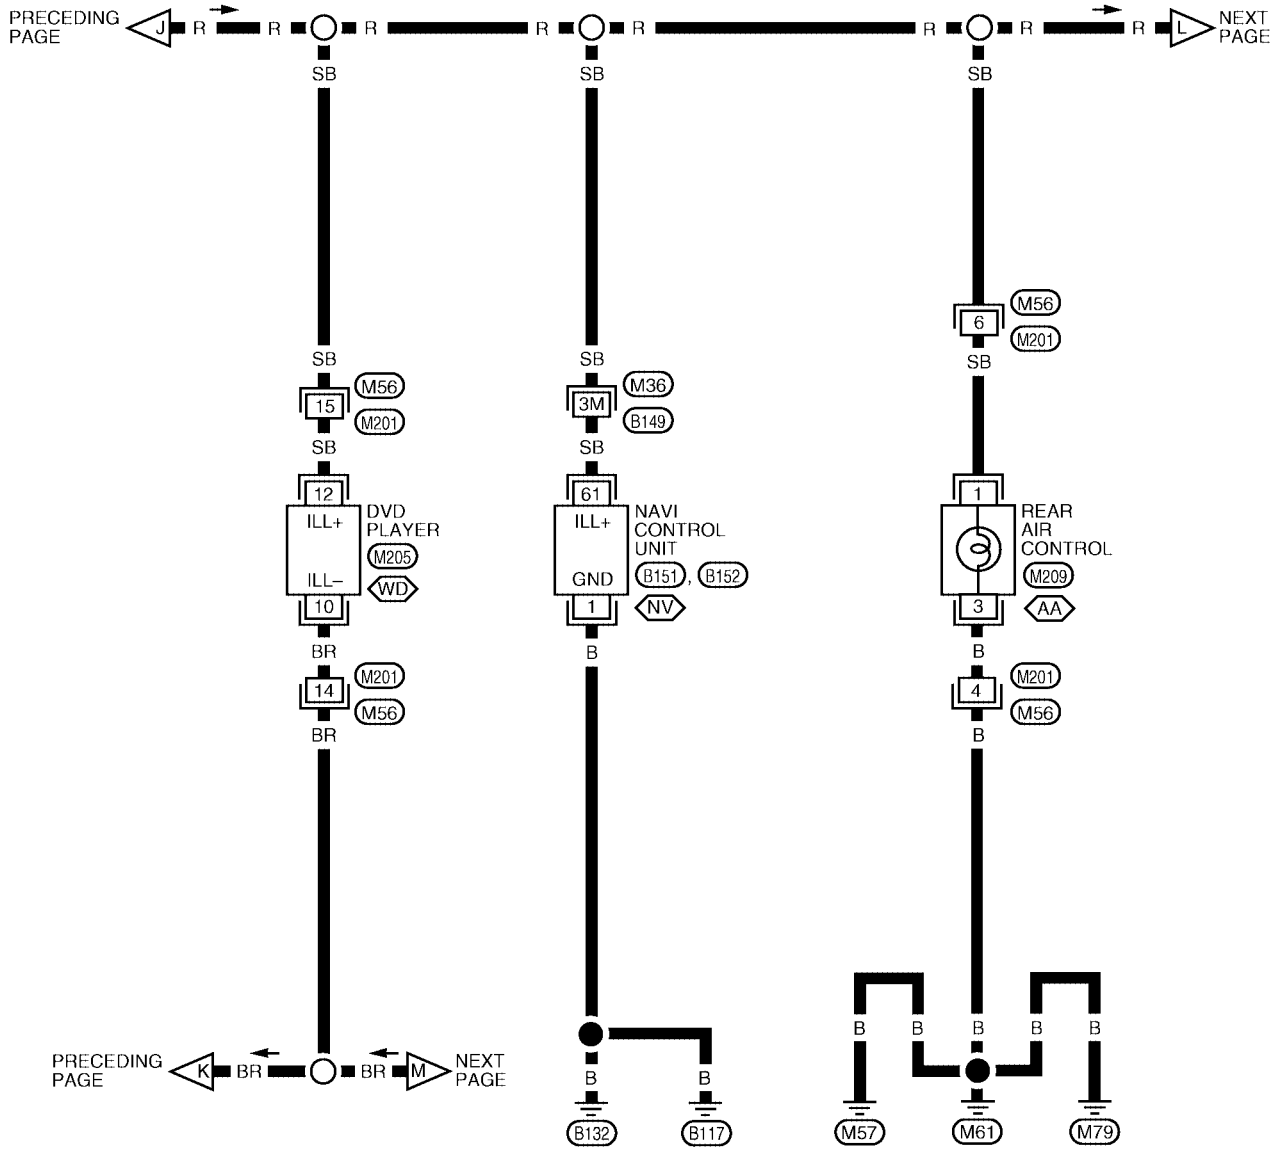

REFER TO THE FOLLOWING.

⬡M36 - SUPER MULTIPLE JUNCTION (SMJ)


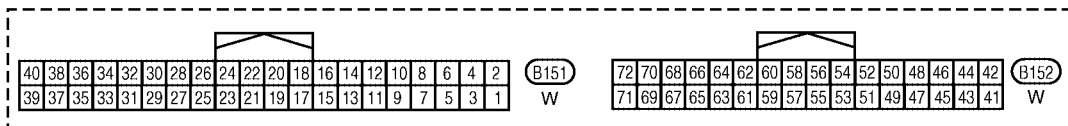


WKWA4244E

ILLUMINATION

LT-ILL-07



⬡ : TRAILER TOW 7 PIN


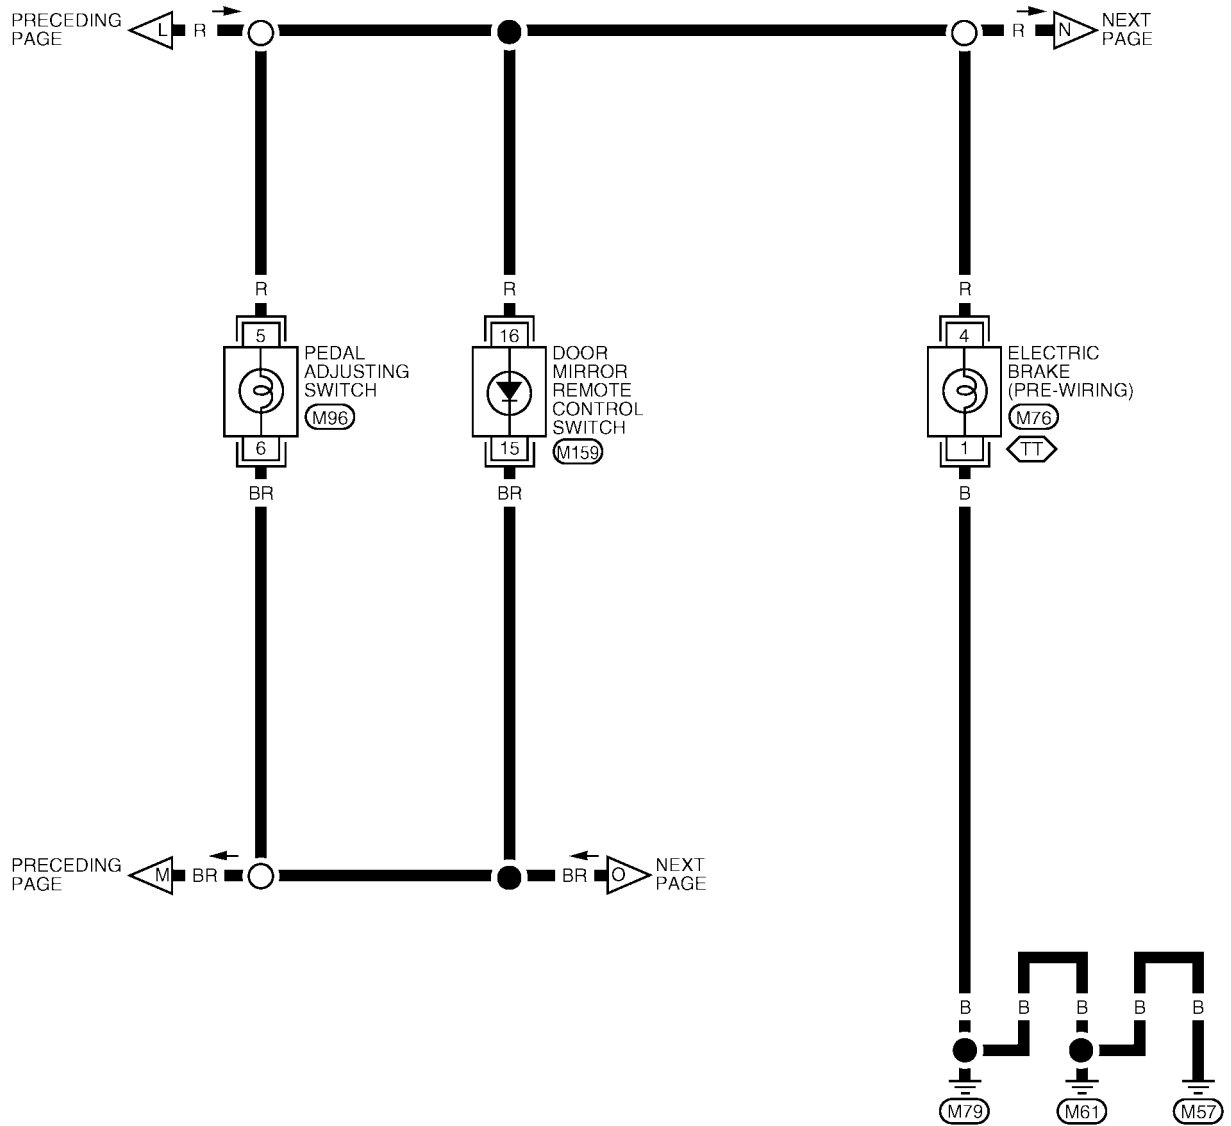


WKWA4389E

ILLUMINATION

LT-ILL-08

-  : WITH HEATED SEATS
-  : WITH HILL DESCENT CONTROL AND HILL START ASSIST


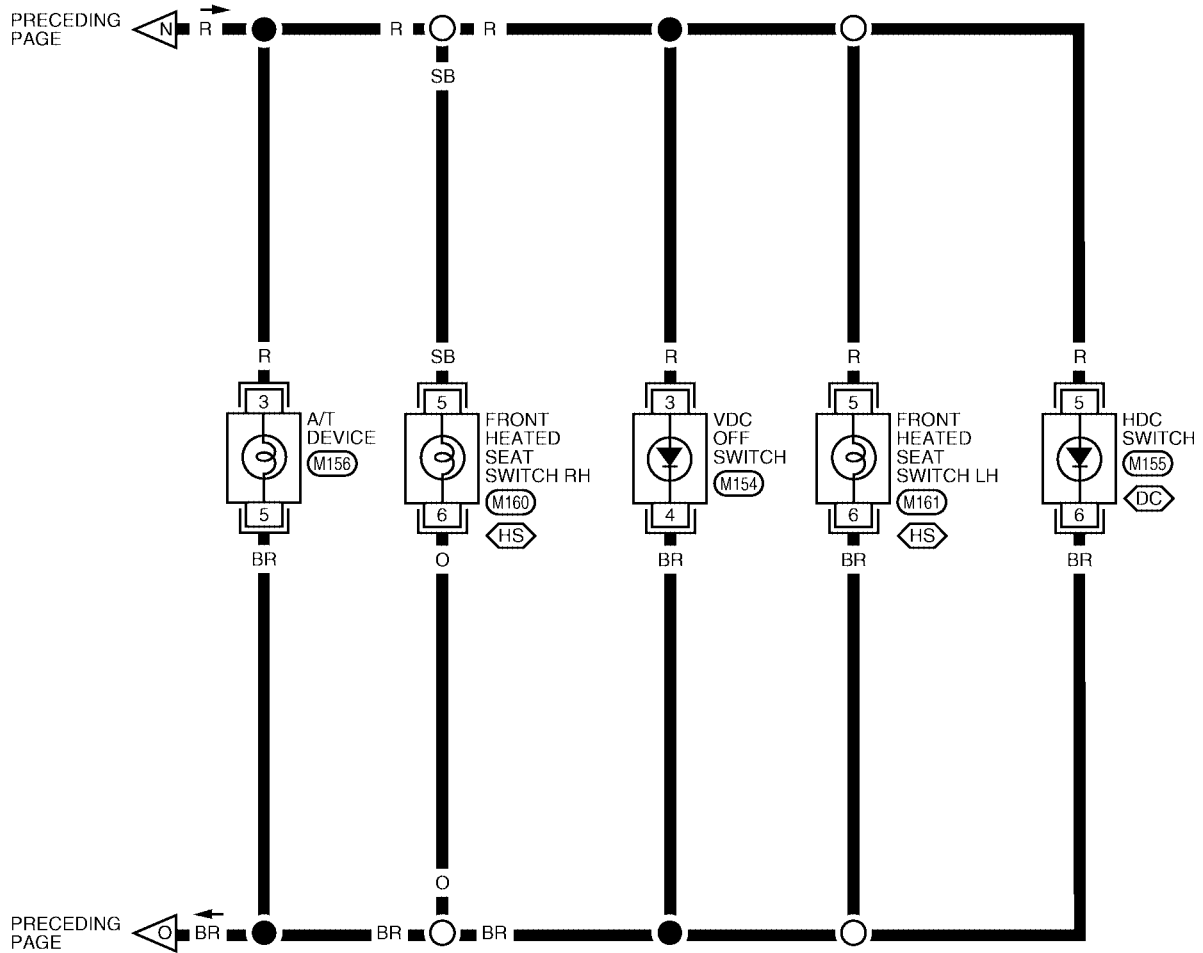


WKWA4245E

ILLUMINATION

LT-ILL-09

A
B
C
D
E
F
G
H
I
J
LT
L
M

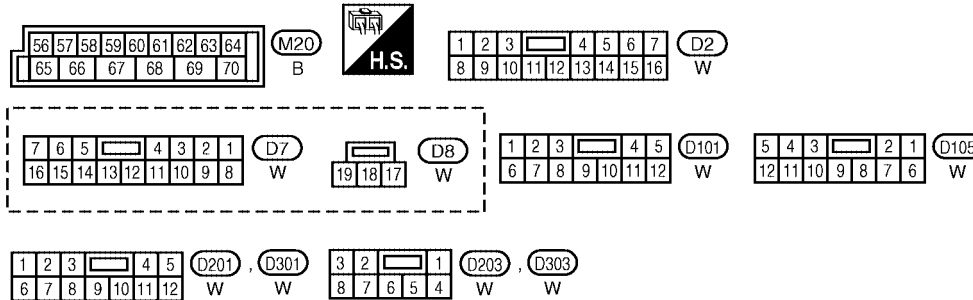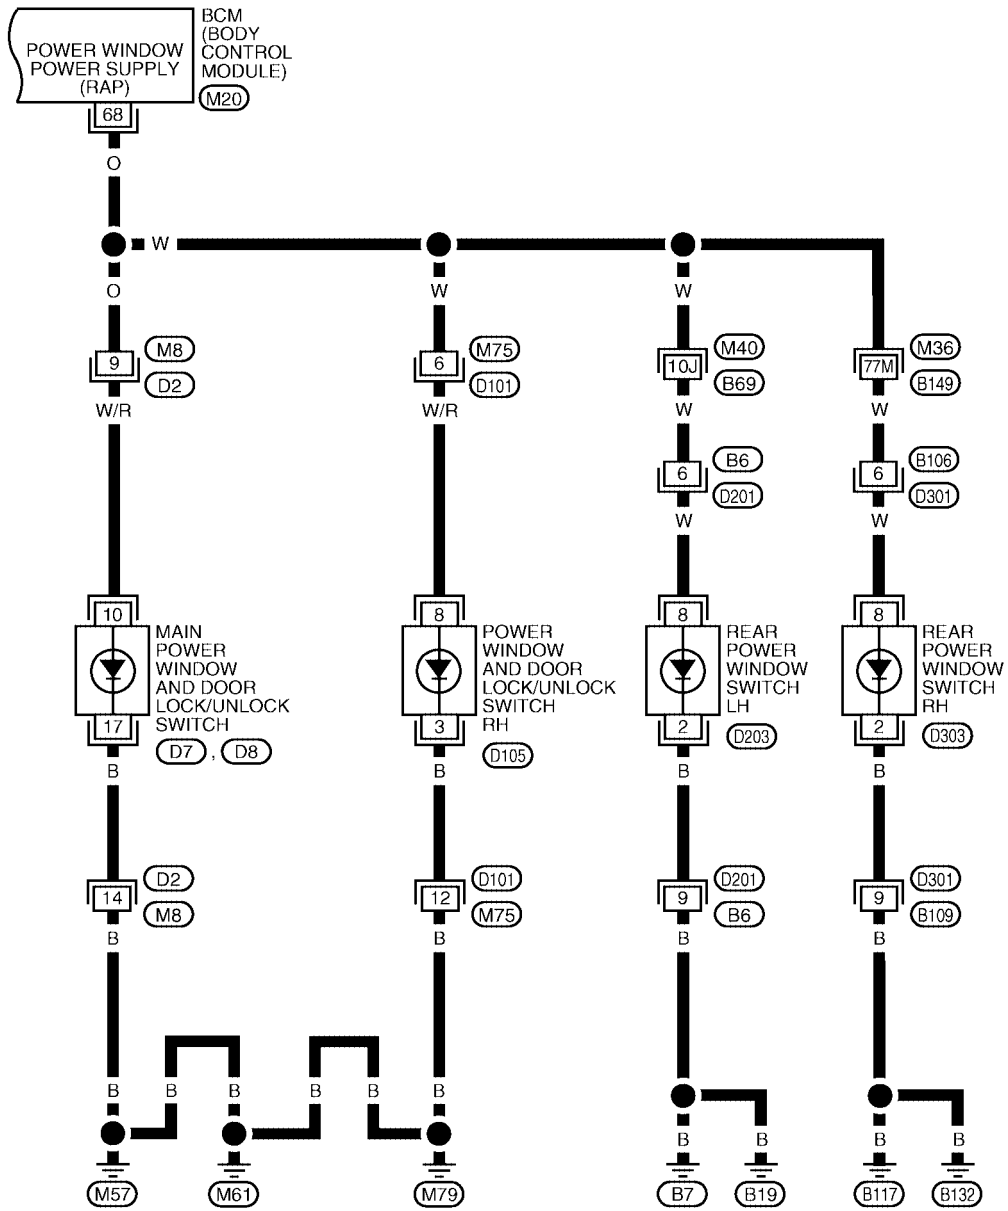

REFER TO THE FOLLOWING.
 (M36), (M40) - SUPER
 MULTIPLE JUNCTION (SMJ)

WKWA4246E


ILLUMINATION

EKS00FXP

Removal and Installation

ILLUMINATION CONTROL SWITCH

The illumination control switch is a function of the combination meter, and not serviced separately. For replacement, refer to [IP-14, "COMBINATION METER"](#)

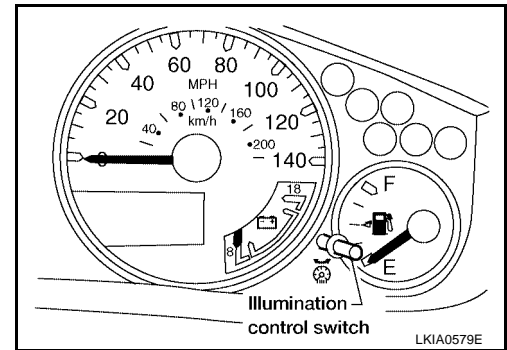

BULB SPECIFICATIONS

BULB SPECIFICATIONS

PF2:26297

Headlamp

EKS00FXQ

Item	Wattage (W)*
Low/High	65/55 (HB5)

*: Always check with the Parts Department for the latest parts information.

Exterior Lamp

EKS00FXR

Item	Wattage (W)*	
Front combination lamp	Turn signal lamp/parking lamp	28/8
	Side marker	3.8
Rear combination lamp	Stop/Tail lamp	27/8
	Turn signal lamp	27
	Back-up lamp	18
Front fog lamp		55
License plate lamp		5
High-mounted stop lamp		*

*: Always check with the Parts Department for the latest parts information.

Interior Lamp/Illumination

EKS00FXS

Item	Wattage (W)*
Glove box lamp	3.4
Room/Map lamp	8
A/T device lamp	3
Cargo lamp	8
Vanity lamp	*
Personal lamp	8

*: Always check with the Parts Department for the latest parts information.

A

B

C

D

E

F

G

H

I

J

LT

L

M

BULB SPECIFICATIONS
