

LT
SECTION
LIGHTING SYSTEM

A
B
C
D
E
F
G
H
I
J
LT
L
M

CONTENTS

<p>PRECAUTIONS 4</p> <p> Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" 4</p> <p> General precautions for service operations 4</p> <p> Wiring Diagrams and Trouble Diagnosis 4</p> <p>HEADLAMP (FOR USA) 5</p> <p> Component Parts and Harness Connector Location... 5</p> <p> System Description 5</p> <p> OUTLINE 5</p> <p> BATTERY SAVER CONTROL 6</p> <p> AUTO LIGHT OPERATION 7</p> <p> VEHICLE SECURITY SYSTEM (PANIC ALARM)... 7</p> <p> CAN Communication System Description 7</p> <p> Schematic 8</p> <p> Wiring Diagram — H/LAMP — 9</p> <p> Terminals and Reference Values for BCM 13</p> <p> Terminals and Reference Values for IPDM E/R 14</p> <p> How to Proceed With Trouble Diagnosis 14</p> <p> Preliminary Check 15</p> <p> CHECK POWER SUPPLY AND GROUND CIRCUIT 15</p> <p> CONSULT-II Function (BCM) 17</p> <p> CONSULT-II OPERATION 17</p> <p> WORK SUPPORT 18</p> <p> DATA MONITOR 18</p> <p> ACTIVE TEST 19</p> <p> SELF-DIAGNOSTIC RESULTS 19</p> <p> CONSULT-II Function (IPDM E/R) 20</p> <p> CONSULT-II OPERATION 20</p> <p> DATA MONITOR 21</p> <p> ACTIVE TEST 21</p> <p> Headlamp HI Does Not Illuminate (Both Sides) 22</p> <p> Headlamp HI Does Not Illuminate (One Side) 24</p> <p> High Beam Indicator Lamp Does Not Illuminate ... 25</p> <p> Headlamp LO Does Not Illuminate (Both Sides) ... 25</p> <p> Headlamp LO Does Not Illuminate (One Side) 27</p> <p> Headlamps Do Not Turn OFF 28</p> <p> Aiming Adjustment 29</p> <p> LOW BEAM AND HIGH BEAM 29</p>	<p> Bulb Replacement 30</p> <p> HEADLAMP (OUTER SIDE), FOR LOW BEAM.. 30</p> <p> HEADLAMP (INNER SIDE), FOR HIGH BEAM.. 30</p> <p> FRONT TURN SIGNAL/PARKING LAMP 30</p> <p> FRONT SIDE MARKER LAMP 30</p> <p> Removal and Installation 31</p> <p> REMOVAL 31</p> <p> INSTALLATION 31</p> <p> Disassembly and Assembly 31</p> <p> DISASSEMBLY 31</p> <p>HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM - 32</p> <p> Component Parts and Harness Connector Location.. 32</p> <p> System Description 33</p> <p> OUTLINE 33</p> <p> DAYTIME LIGHT OPERATION 33</p> <p> COMBINATION SWITCH READING FUNCTION.. 33</p> <p> AUTO LIGHT OPERATION 33</p> <p> CAN Communication System Description 34</p> <p> Schematic 35</p> <p> Wiring Diagram — DTRL — 36</p> <p> Terminals and Reference Values for BCM 40</p> <p> How to Proceed With Trouble Diagnosis 41</p> <p> Preliminary Check 41</p> <p> CHECK BCM CONFIGURATION 41</p> <p> INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT 41</p> <p> INSPECTION PARKING BRAKE SWITCH CIRCUIT 42</p> <p> CONSULT-II Functions 43</p> <p> Daytime Light Control Does Not Operate Properly (Normal Headlamps Operate Properly) 43</p> <p> Aiming Adjustment 45</p> <p> Bulb Replacement 45</p> <p> Removal and Installation 45</p> <p> Disassembly and Assembly 45</p> <p>AUTO LIGHT SYSTEM 46</p> <p> Component Parts and Harness Connector Location.. 46</p> <p> System Description 47</p> <p> OUTLINE 47</p>
--	---

COMBINATION SWITCH READING FUNCTION..	47	TION	76
EXTERIOR LAMP BATTERY SAVER CONTROL..	47	COMBINATION SWITCH READING FUNCTION..	77
DELAY TIMER FUNCTION	47	CAN Communication System Description	77
CAN Communication System Description	47	Wiring Diagram — TURN —	78
Major Components and Functions	47	Terminals and Reference Values for BCM	80
Schematic	48	How to Proceed With Trouble Diagnosis	81
Wiring Diagram — AUTO/L —	49	Preliminary Check	82
Terminals and Reference Values for BCM	52	CHECK POWER SUPPLY AND GROUND CIR-	
Terminals and Reference Values for IPDM E/R	53	CUIT	82
How to Proceed With Trouble Diagnosis	54	CONSULT-II Function (BCM)	83
Preliminary Check	54	CONSULT-II OPERATION	83
CHECK BCM CONFIGURATION	54	DATA MONITOR	84
SETTING CHANGE FUNCTIONS	54	ACTIVE TEST	84
CHECK POWER SUPPLY AND GROUND CIR-		Turn Signal Lamp Does Not Operate	85
CUIT	54	Rear Turn Signal Lamp Does Not Operate	86
CONSULT-II Function (BCM)	56	Hazard Warning Lamp Does Not Operate But Turn	
CONSULT-II OPERATION	56	Signal Lamps Operate	87
WORK SUPPORT	57	Turn Signal Indicator Lamp Does Not Operate	88
DATA MONITOR	57	Bulb Replacement (Front Turn Signal Lamp)	89
ACTIVE TEST	58	Bulb Replacement (Rear Turn Signal Lamp)	89
SELF-DIAGNOSTIC RESULTS	58	Removal and Installation of Front Turn Signal Lamp..	89
CONSULT-II Function (IPDM E/R)	59	Removal and Installation of Rear Turn Signal Lamp..	89
CONSULT-II OPERATION	59	LIGHTING AND TURN SIGNAL SWITCH	90
DATA MONITOR	60	Removal and Installation	90
ACTIVE TEST	60	REMOVAL	90
Trouble Diagnosis Chart by Symptom	61	INSTALLATION	90
Lighting Switch Inspection	61	HAZARD SWITCH	91
Optical Sensor System Inspection	62	Removal and Installation	91
Removal and Installation of Optical Sensor	63	REMOVAL	91
REMOVAL	63	INSTALLATION	91
INSTALLATION	63	COMBINATION SWITCH	92
FRONT FOG LAMP	64	Wiring Diagram — COMBSW —	92
Component Parts and Harness Connector Location..	64	Combination Switch Reading Function	93
System Description	64	CONSULT-II Function (BCM)	93
OUTLINE	64	CONSULT-II OPERATION	93
COMBINATION SWITCH READING FUNCTION..	65	DATA MONITOR	94
EXTERIOR LAMP BATTERY SAVER CONTROL..	65	Combination Switch Inspection	95
CAN Communication System Description	65	Removal and Installation	97
Wiring Diagram — F/FOG —	66	Switch Circuit Inspection	97
Terminals and Reference Values for BCM	68	STOP LAMP	98
Terminals and Reference Values for IPDM E/R	69	System Description	98
How to Proceed With Trouble Diagnosis	69	Wiring Diagram — STOP/L —	99
Preliminary Check	70	High-Mounted Stop Lamp	101
CHECK BCM CONFIGURATION	70	BULB REPLACEMENT	101
CHECK POWER SUPPLY AND GROUND CIR-		REMOVAL AND INSTALLATION	101
CUIT	70	Stop Lamp	101
CONSULT-II Functions	71	BULB REPLACEMENT	101
Front Fog Lamps Do Not Illuminate (Both Sides) ...	71	REMOVAL AND INSTALLATION	101
Front Fog Lamp Does Not Illuminate (One Side) ...	72	BACK-UP LAMP	102
Aiming Adjustment	73	Wiring Diagram — BACK/L —	102
Bulb Replacement	74	Bulb Replacement	103
Removal and Installation	74	Removal and Installation	103
TURN SIGNAL AND HAZARD WARNING LAMPS..	75	PARKING, LICENSE PLATE AND TAIL LAMPS ...	104
Component Parts and Harness Connector Location..	75	Component Parts and Harness Connector Location	104
System Description	75	System Description	104
OUTLINE	75	OPERATION BY LIGHTING SWITCH	105
TURN SIGNAL OPERATION	75	COMBINATION SWITCH READING FUNCTION	105
HAZARD LAMP OPERATION	76	EXTERIOR LAMP BATTERY SAVER CONTROL	105
REMOTE KEYLESS ENTRY SYSTEM OPERA-		CAN Communication System Description	105

Schematic	106	ROOM LAMP TIMER OPERATION	129	
Wiring Diagram — TAIL/L —	107	INTERIOR LAMP BATTERY SAVER CONTROL	129	A
Terminals and Reference Values for BCM	110	Schematic	131	
Terminals and Reference Values for IPDM E/R ...	111	Wiring Diagram — INT/L —	134	B
How to Proceed With Trouble Diagnosis	111	Terminals and Reference Values for BCM	142	
Preliminary Check	112	How to Proceed With Trouble Diagnosis	143	B
CHECK POWER SUPPLY AND GROUND CIR-		Preliminary Check	143	
CUIT	112	INSPECTION FOR POWER SUPPLY AND		C
CONSULT-II Functions	113	GROUND CIRCUIT	143	
Parking, License Plate and/or Tail Lamps Do Not		CONSULT-II Function (BCM)	144	C
Illuminate	113	CONSULT-II OPERATION	144	
Parking, License Plate and Tail Lamps Do Not Turn		WORK SUPPORT	145	D
OFF (After Approx. 10 Minutes)	116	DATA MONITOR	145	
Front Parking Lamp	117	ACTIVE TEST	146	D
BULB REPLACEMENT	117	Front Room/Map Lamp Assembly Control Does Not		E
Tail Lamp	117	Operate	146	
BULB REPLACEMENT	117	Personal Lamp 2nd Row Control Does Not Operate		E
REAR COMBINATION LAMP	118	(Room/Map Lamps Operate)	148	F
Bulb Replacement	118	All Step/Foot/Puddle Lamps Do Not Operate	149	
Removal and Installation	118	All Interior Room Lamps Do Not Operate	150	F
.....	118	ILLUMINATION	151	G
TRAILER TOW	119	Component Parts and Harness Connector Location	151	
Component Parts and Harness Connector Location	119	System Description	151	G
System Description	119	ILLUMINATION OPERATION BY LIGHTING		H
TRAILER TAIL LAMP OPERATION	120	SWITCH	152	
TRAILER TURN SIGNAL AND HAZARD LAMP		EXTERIOR LAMP BATTERY SAVER CONTROL	153	H
OPERATION	120	CAN Communication System Description	153	
TRAILER STOP LAMP OPERATION	120	Schematic	154	I
TRAILER POWER SUPPLY OPERATION	120	Wiring Diagram — ILL —	157	
Schematic	122	Removal and Installation	166	I
Wiring Diagram — T/TOW —	123	ILLUMINATION CONTROL SWITCH	166	J
INTERIOR ROOM LAMP	126	BULB SPECIFICATIONS	167	J
Component Parts and Harness Connector Location	126	Headlamp	167	
System Description	127	Exterior Lamp	167	
POWER SUPPLY AND GROUND	127	Interior Lamp/Illumination	167	LT
SWITCH OPERATION	128			

PRECAUTIONS

PRECAUTIONS

PF0:00011

Precautions for Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER”

EKS00F9U

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER”, used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

General precautions for service operations

EKS0077J

- Never work with wet hands.
- Turn the lighting switch OFF before disconnecting and connecting the connector.
- When checking the headlamp on/off operation, check it on vehicle and with the power connected to the vehicle-side connector.
- Do not touch the headlamp bulb glass surface with bare hands or allow oil or grease to get on it. Do not touch the headlamp bulb just after the headlamp is turned off, because it is very hot.
- When the bulb has burned out, wrap it in a thick vinyl bag and discard. Do not break the bulb.
- Leaving the bulb removed from the headlamp housing for a long period of time can deteriorate the performance of the lens and reflector (dirt, clouding). Always prepare a new bulb and have it on hand when replacing the bulb.
- Do not use organic solvent (paint thinner or gasoline) to clean lamps and to remove old sealant.

Wiring Diagrams and Trouble Diagnosis

EKS00733

When you read wiring diagrams, refer to the following:

- Refer to [GI-14, "How to Read Wiring Diagrams"](#) in GI section.
- Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) for power distribution in PG section.

When you perform trouble diagnosis, refer to the following:

- Refer to [GI-11, "HOW TO FOLLOW TEST GROUPS IN TROUBLE DIAGNOSES"](#) in GI section.
- Refer to [GI-27, "How to Perform Efficient Diagnosis for an Electrical Incident"](#) in GI section.


HEADLAMP (FOR USA)

PFP:26010

EKS00734

HEADLAMP (FOR USA)

Component Parts and Harness Connector Location

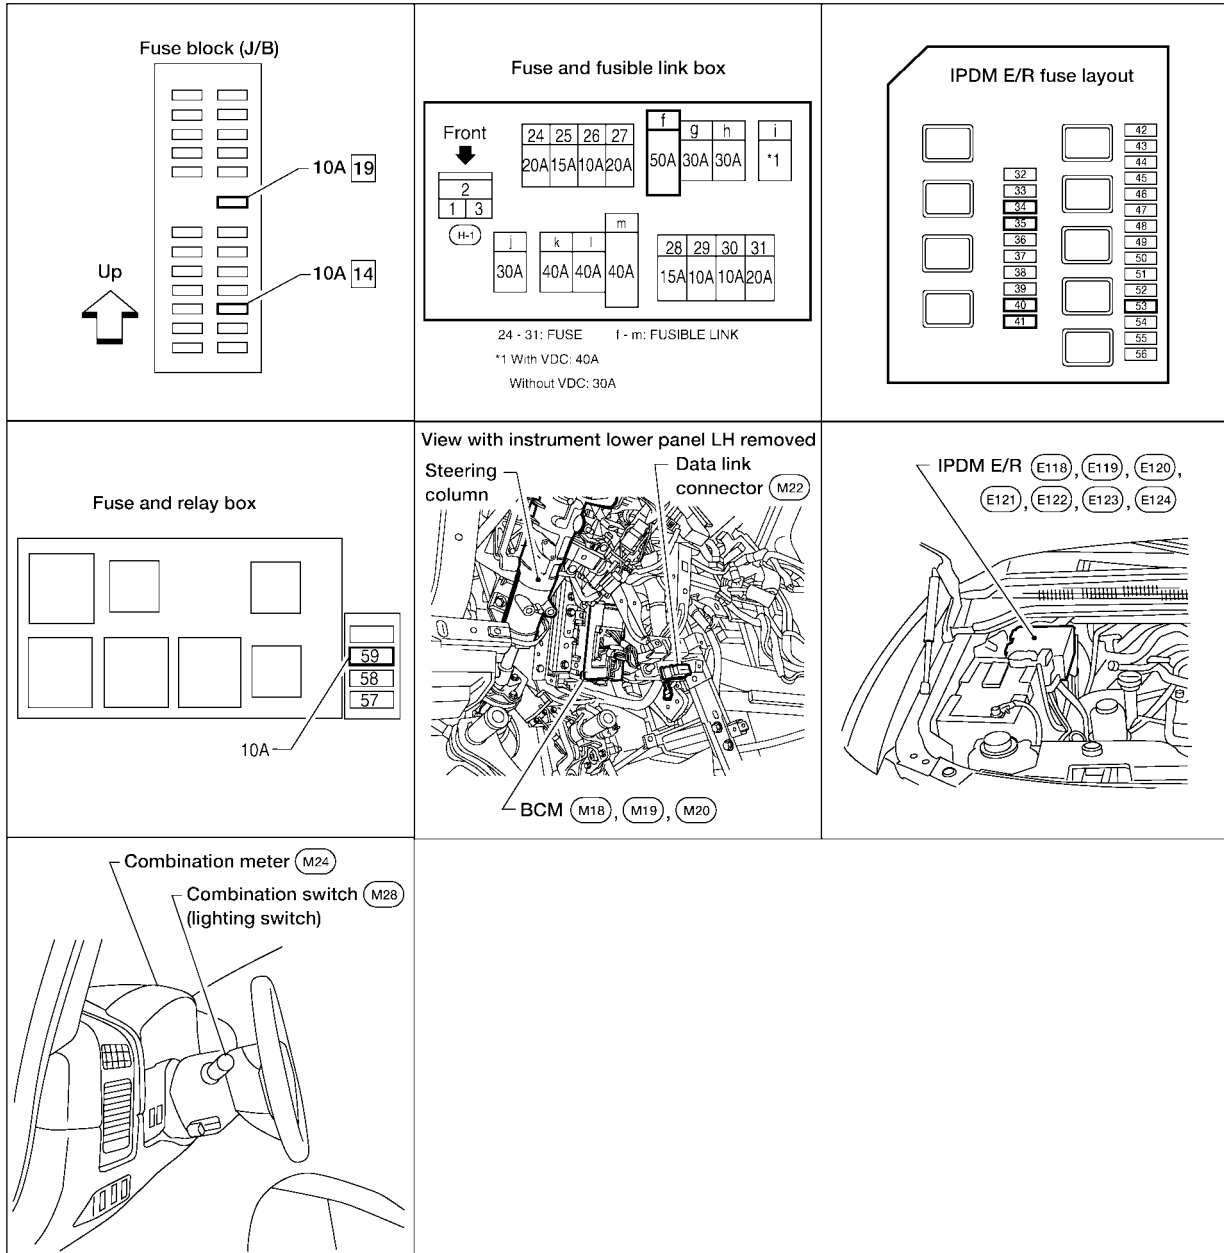

WKIA3579E

EKS00735

System Description

Control of the headlamp system operation is dependent upon the position of the combination switch (lighting switch). When the lighting switch is placed in the 2ND position, the BCM (body control module) receives input requesting the headlamps (and tail lamps) illuminate. This input is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the headlamp high and headlamp low relay coils. When energized, these relays direct power to the respective headlamps, which then illuminate.

OUTLINE

Power is supplied at all times

- to ignition relay, located in the IPDM E/R, and

A
B
C
D
E
F
G
H
I
J
LT
L
M

HEADLAMP (FOR USA)

- to headlamp high relay, located in the IPDM E/R, and
- to headlamp low relay, located in the IPDM E/R, and
- through 20A fuse (No. 53, located in the IPDM E/R)
- to CPU of the IPDM E/R, and
- through 50A fusible link (letter f , located in the fuse and fusible link box)
- to BCM terminal 70.

With the ignition switch in the ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse (No. 59, located in the fuse and relay box)
- to BCM terminal 38.

Ground is supplied

- to BCM terminal 67
- through grounds M57, M61 and M79, and
- to IPDM E/R terminals 38 and 59
- through grounds E9, E15 and E24.

Low Beam Operation

With the lighting switch in 2ND position, the BCM receives input requesting the headlamps to illuminate. This input is communicated to the IPDM E/R across the CAN communication lines. The CPU of the IPDM E/R controls the headlamp low relay coil. When energized, this relay directs power

- through 15A fuse (No. 41, located in the IPDM E/R)
- through IPDM E/R terminal 54
- to front combination lamp RH terminal 1, and
- through 15A fuse (No. 40, located in the IPDM E/R)
- through IPDM E/R terminal 52
- to front combination lamp LH terminal 1.

Ground is supplied

- to front combination lamp LH and RH terminal 4
- through grounds E9, E15 and E24.

With power and ground supplied, low beam headlamps illuminate.

High Beam Operation/Flash-to-Pass Operation

With the lighting switch in 2ND position and placed in HIGH or PASS position, the BCM receives input requesting the headlamp high beams to illuminate. This input is communicated to the IPDM E/R across the CAN communication lines. The CPU of the combination meter controls the ON/OFF status of the HIGH BEAM indicator. The CPU of the IPDM E/R controls the headlamp high relay coil. When energized, this relay directs power

- through 10A fuse (No. 34, located in the IPDM E/R)
- through IPDM E/R terminal 56
- to front combination lamp RH terminal 2, and
- through 10A fuse (No. 35, located in the IPDM E/R)
- through IPDM E/R terminal 55
- to front combination lamp LH terminal 2.

Ground is supplied

- to front combination lamp LH and RH terminal 3
- through grounds E9, E15 and E24.

With power and ground supplied, the high beam headlamps illuminate.

BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 2ND position (ON), and the ignition switch is turned from ON or ACC to OFF, the battery saver control feature is activated.

Under this condition, the headlamps remain illuminated for 5 minutes, unless the combination switch (lighting switch) position is changed. If the combination switch (lighting switch) position is changed, then the headlamps are turned off.

HEADLAMP (FOR USA)

AUTO LIGHT OPERATION

Refer to [LT-47, "System Description"](#) for auto light operation.

A

VEHICLE SECURITY SYSTEM (PANIC ALARM)

The vehicle security system (panic alarm) will flash the high beams if the system is triggered. Refer to [BL-56, "Panic Alarm Operation"](#).

B

CAN Communication System Description

EKS00736

Refer to [LAN-8, "CAN COMMUNICATION"](#).

C

D

E

F

G

H

I

J

LT


L

M

HEADLAMP (FOR USA)

Schematic

EKS00737

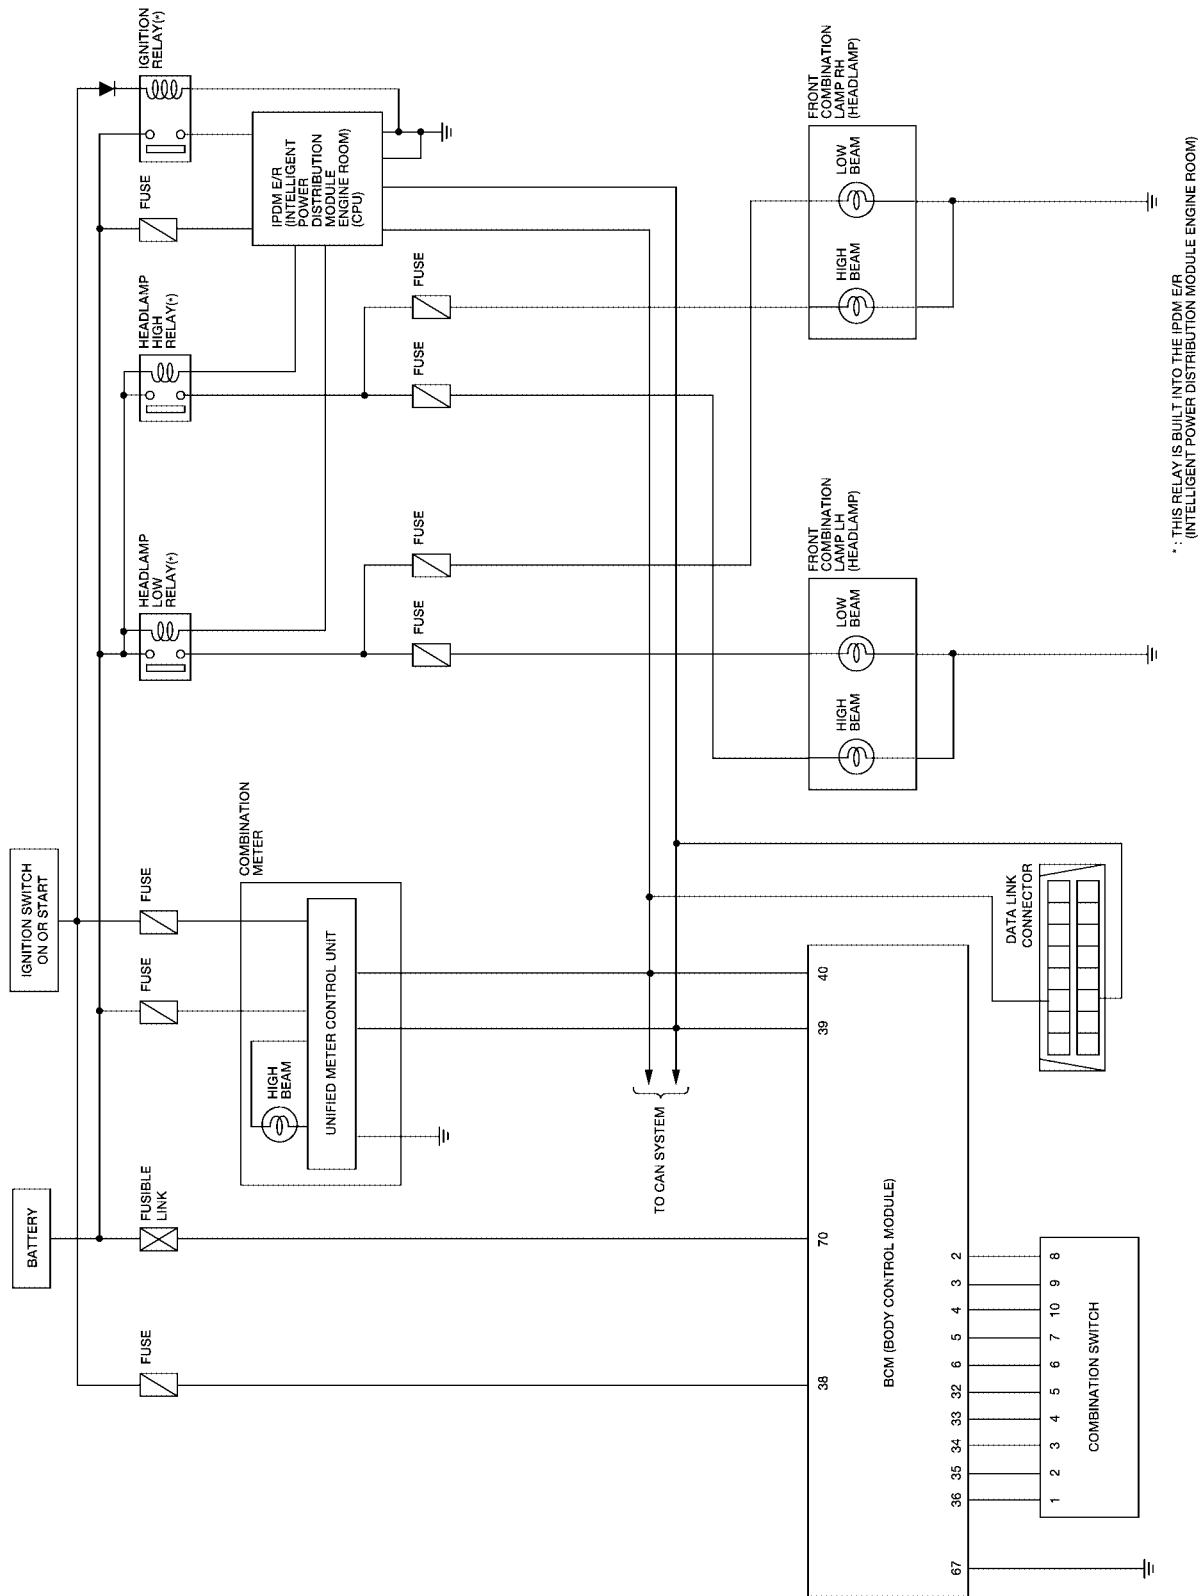

WKWA0721E



HEADLAMP (FOR USA)

Wiring Diagram — H/LAMP —

EKS00738

LT-H/LAMP-01

— : DATA LINE

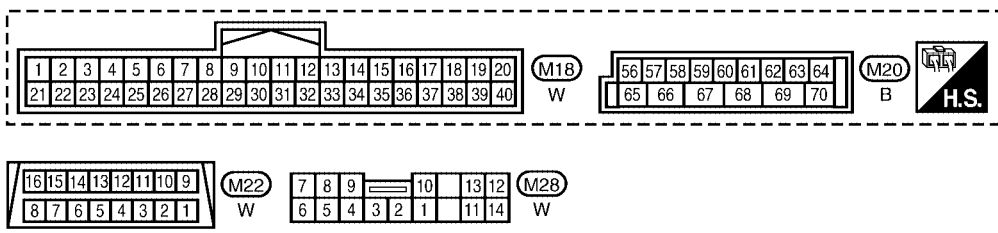
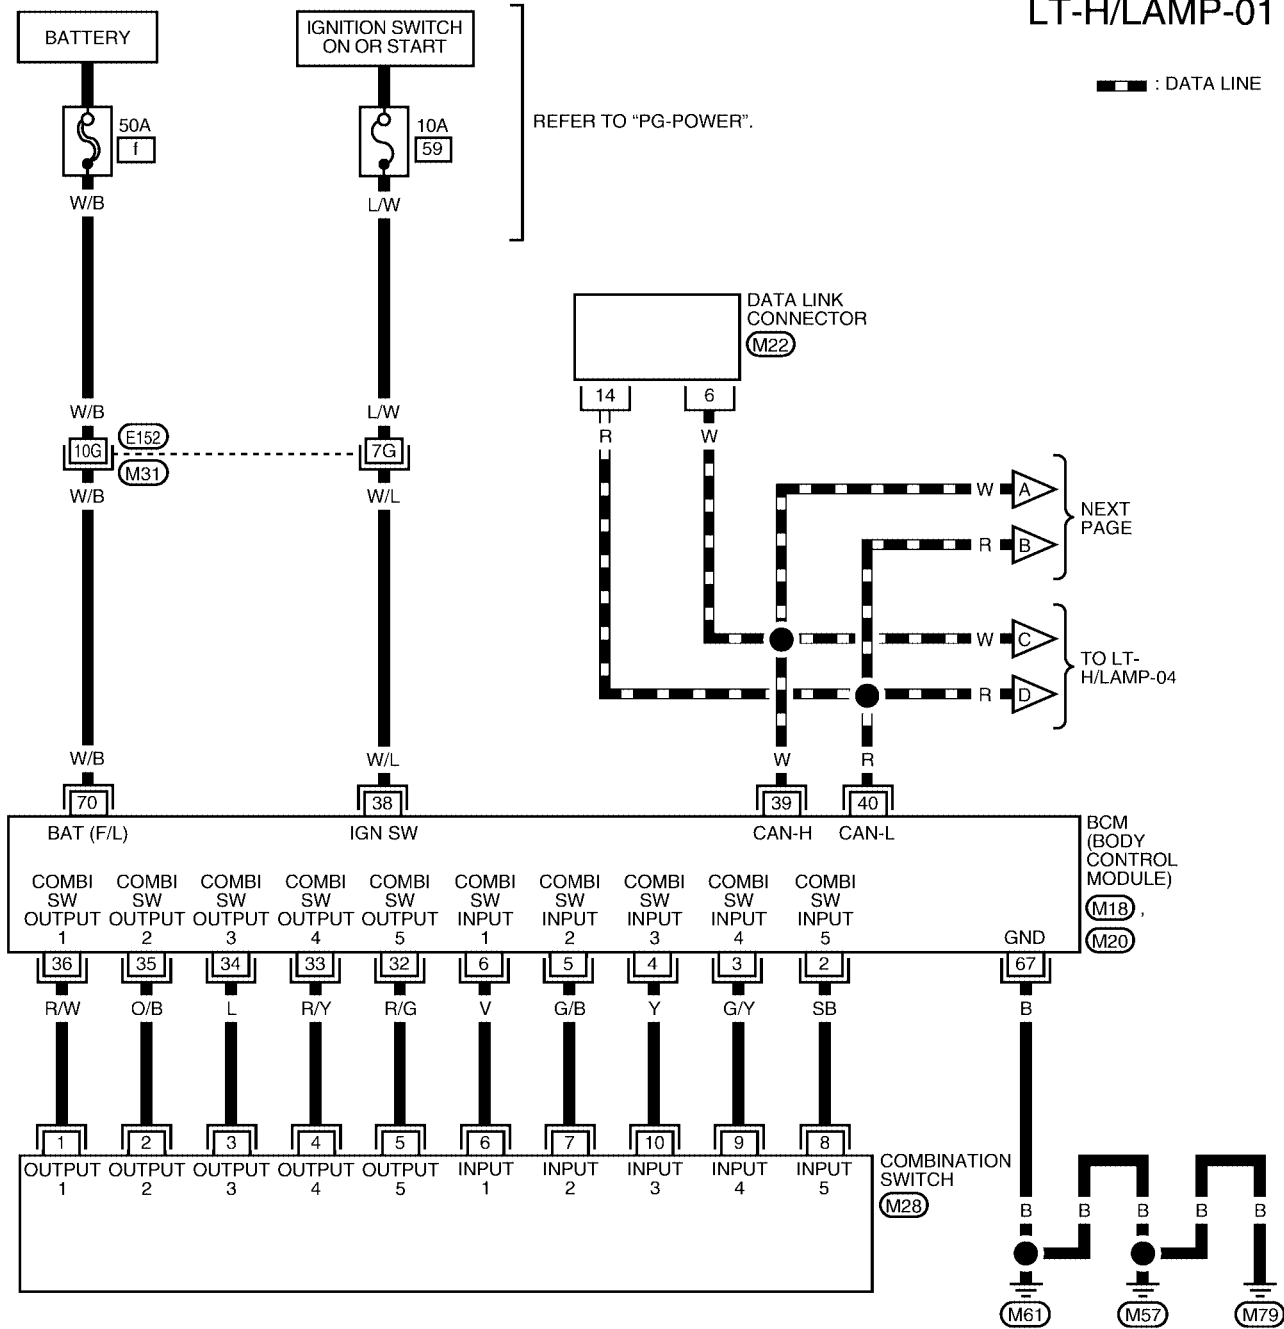


REFER TO THE FOLLOWING.
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA1154E

HEADLAMP (FOR USA)

LT-H/LAMP-02


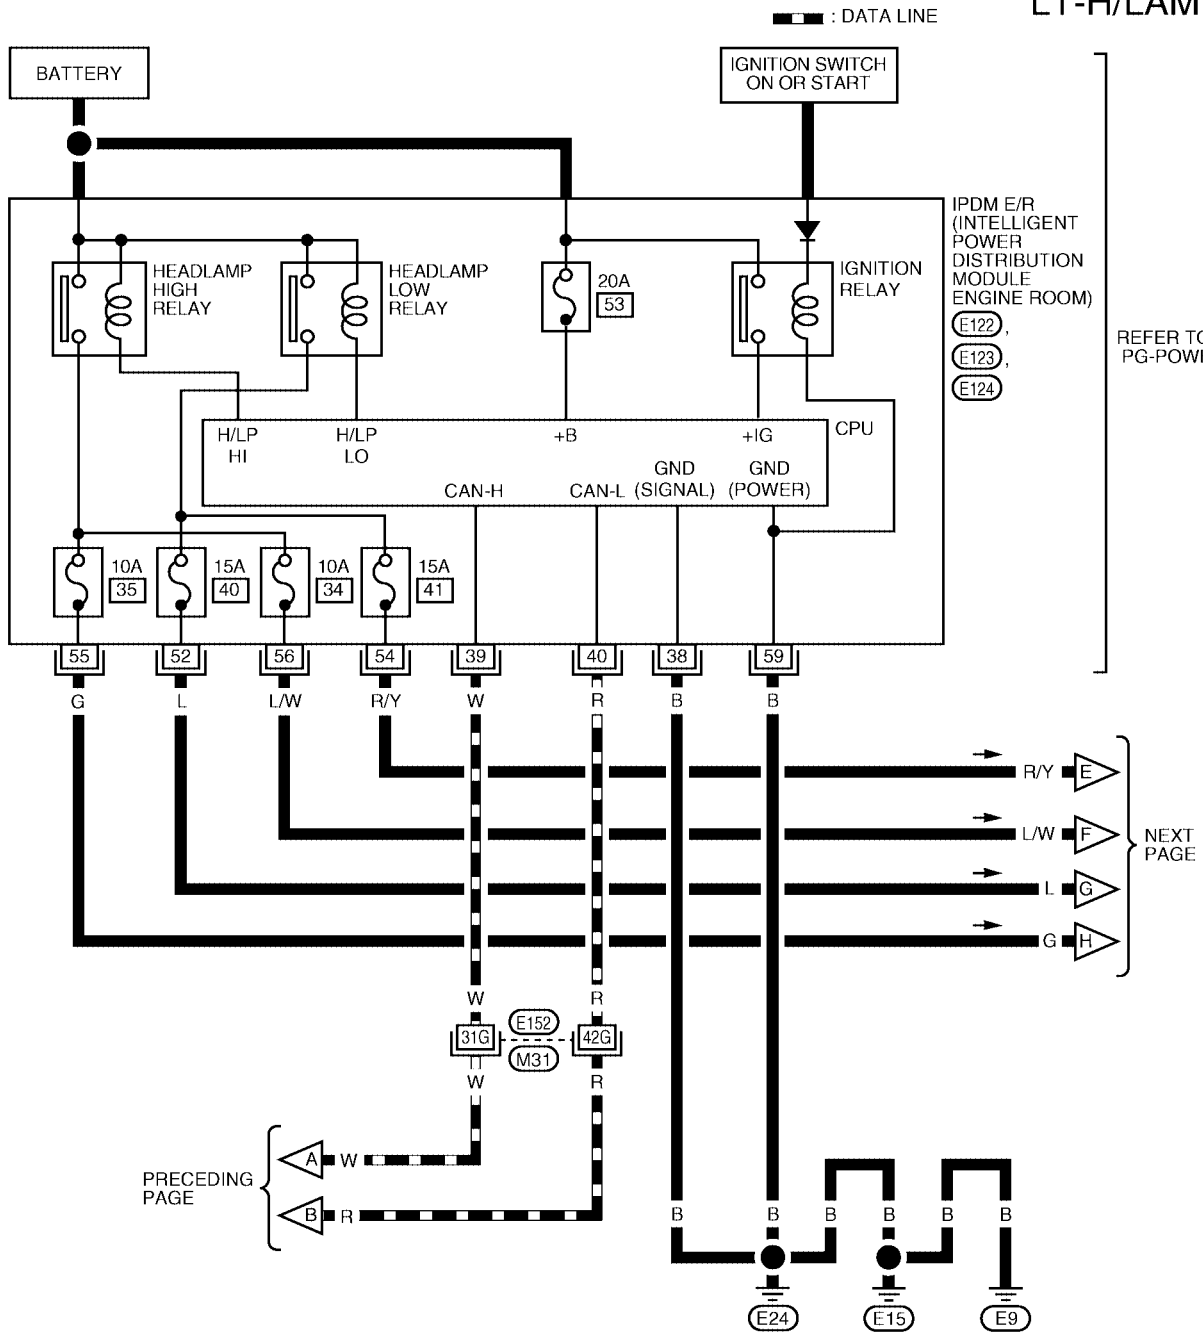


REFER TO THE FOLLOWING.
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA1193E

HEADLAMP (FOR USA)

LT-H/LAMP-03

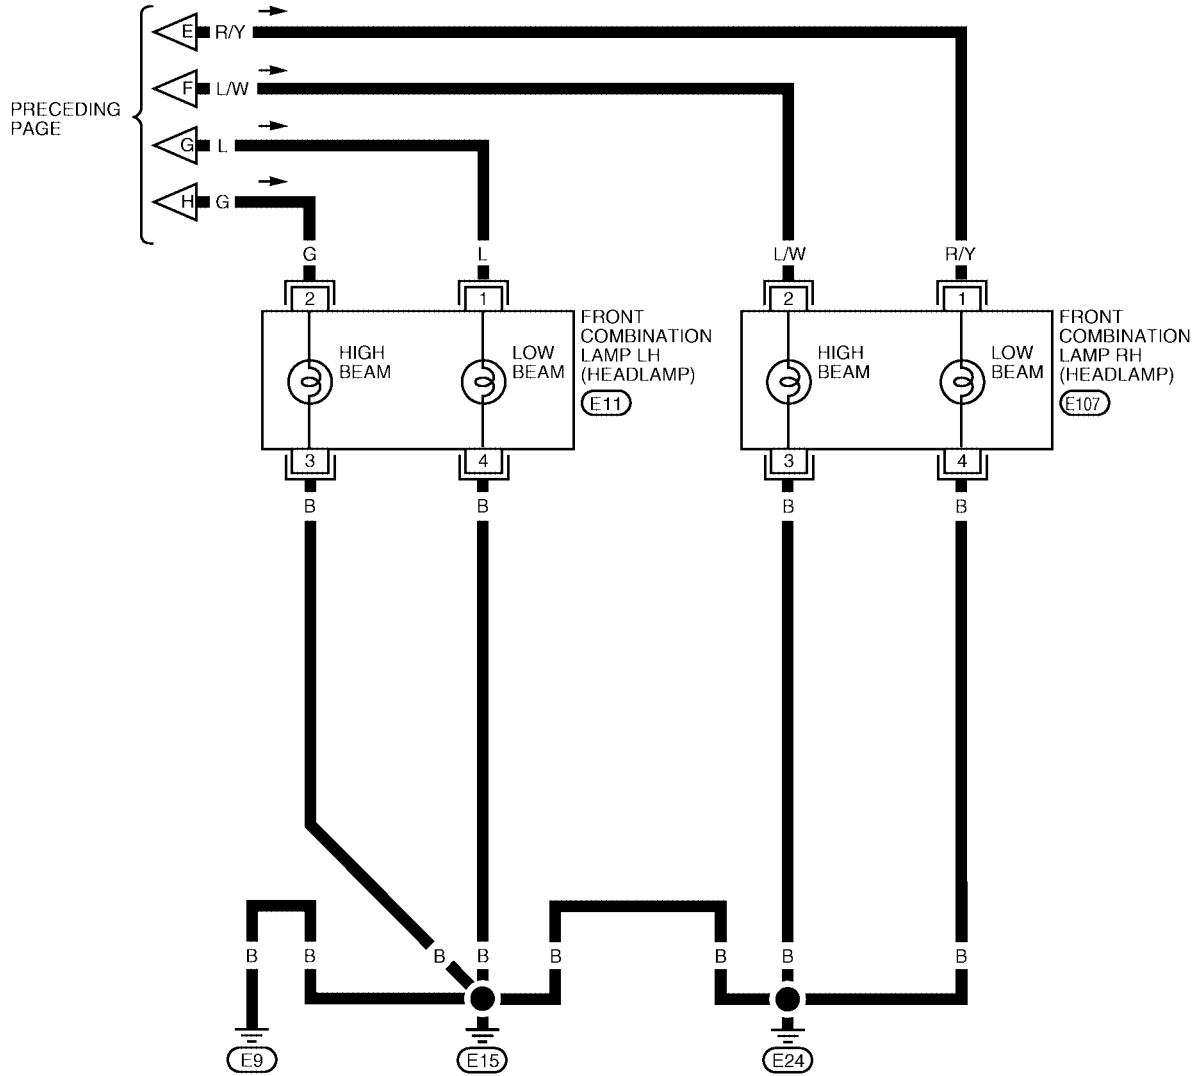




A
B
C
D
E
F
G
H
I
J
LT
L
M

WKWA1475E

HEADLAMP (FOR USA)

LT-H/LAMP-04

— : DATA LINE




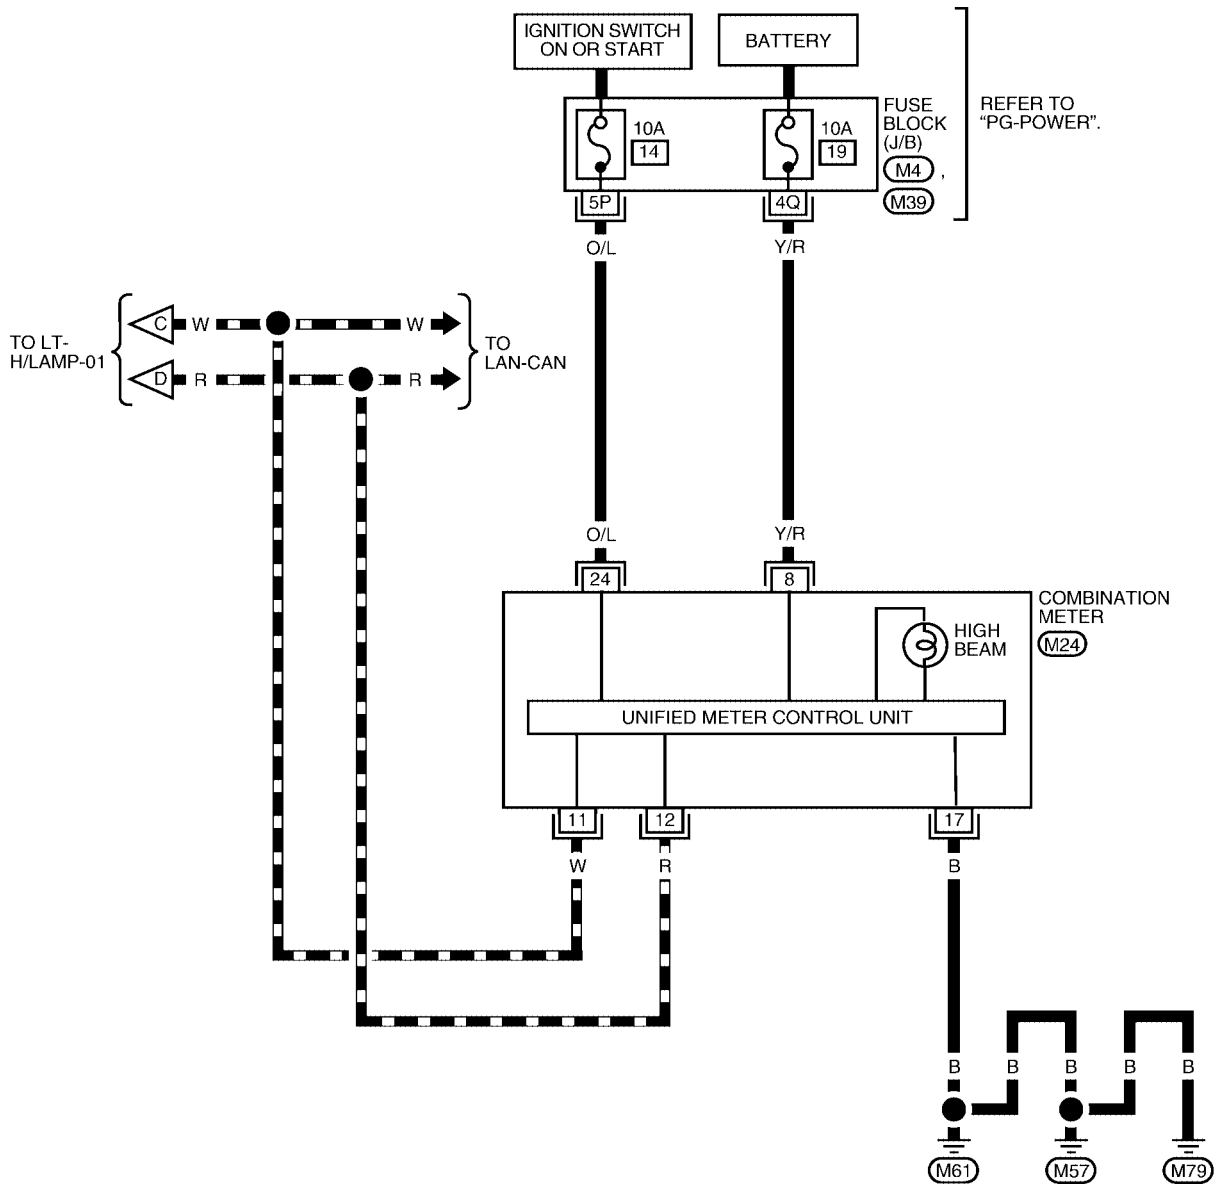

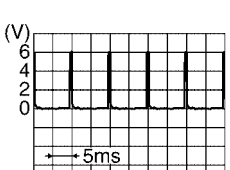
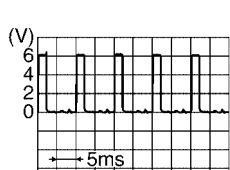


WKWA0725E


HEADLAMP (FOR USA)

Terminals and Reference Values for BCM


EKS00739

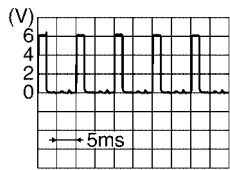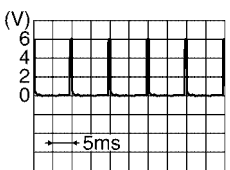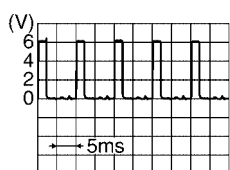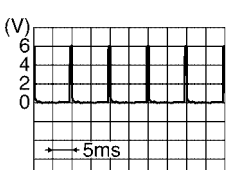Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
2	SB	Combination switch input 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>
3	G/Y	Combination switch input 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>
4	Y	Combination switch input 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>
5	G/B	Combination switch input 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>
6	V	Combination switch input 1			
32	R/G	Combination switch output 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>
33	R/Y	Combination switch output 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>
34	L	Combination switch output 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>

A
B
C
D
E
F
G
H
I
J
LT
L
M



HEADLAMP (FOR USA)

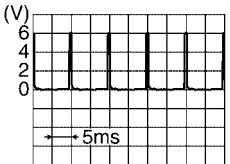Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
35	O/B	Combination switch output 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	
36	R/W	Combination switch output 1			
38	W/L	Ignition switch (ON)	ON	—	Battery voltage
39	W	CAN-H	—	—	—
40	R	CAN-L	—	—	—
67	B	Ground	ON	—	0V
70	W/B	Battery power supply (fusible link)	OFF	—	Battery voltage

Terminals and Reference Values for IPDM E/R

EKS0073A

Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
38	B	Ground	ON	—	0V
39	W	CAN-H	—	—	—
40	R	CAN-L	—	—	—
52	L	Headlamp low (LH)	ON	Lighting switch 2ND position OFF	0V
				ON	Battery voltage
54	R/Y	Headlamp low (RH)	ON	Lighting switch 2ND position OFF	0V
				ON	Battery voltage
55	G	Headlamp high (LH)	ON	Lighting switch HIGH or PASS position OFF	0V
				ON	Battery voltage
56	L/W	Headlamp high (RH)	ON	Lighting switch HIGH or PASS position OFF	0V
				ON	Battery voltage
59	B	Ground	ON	—	0V

How to Proceed With Trouble Diagnosis

EKS0073B

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-5, "System Description"](#).
3. Perform the Preliminary Check. Refer to [LT-15, "Preliminary Check"](#).
4. Check symptom and repair or replace the cause of malfunction.
5. Does the headlamp operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

HEADLAMP (FOR USA)

EKS0073C

Preliminary Check CHECK POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES OR FUSIBLE LINK

Check for blown fuses or fusible link.

Unit	Power source	Fuse No.
BCM	Battery	f
	Ignition switch ON or START position	59
IPDM E/R	Battery	34
		35
		40
		41
		53

Refer to [LT-9, "Wiring Diagram — H/LAMP —"](#).

OK or NG

OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of blown fuse before installing new fuse. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#).

2. CHECK POWER SUPPLY CIRCUIT


1. Disconnect BCM connectors.
2. Check voltage between BCM harness connector and ground.

Terminals		(-)	Ignition switch position		
(+)			OFF	ACC	ON
Connector	Terminal (Wire color)	Ground	0V	0V	Battery voltage
M18	38 (W/L)		Battery voltage	Battery voltage	Battery voltage
M20	70 (W/B)				

OK or NG

OK >> GO TO 3.

NG >> Check harness for open between BCM and fuse.

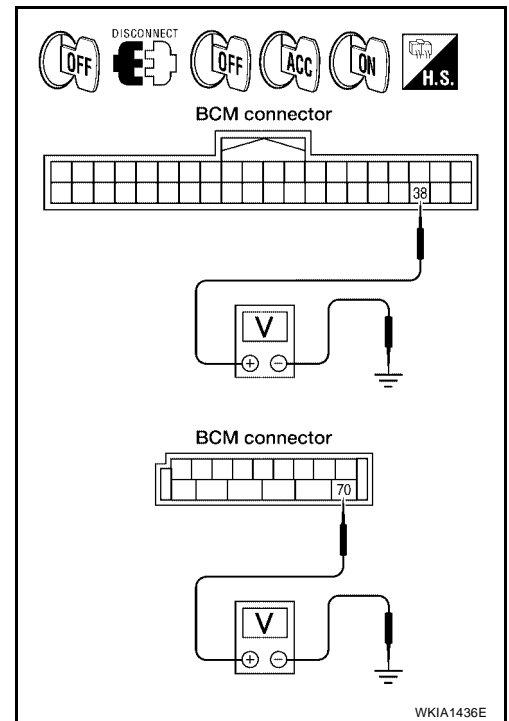

HEADLAMP (FOR USA)


3. CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

Terminals			Continuity
Connector	Terminal (Wire color)		
M20	67 (B)	Ground	Yes

OK or NG

- OK >> Inspection End.
- NG >> Check ground circuit harness.

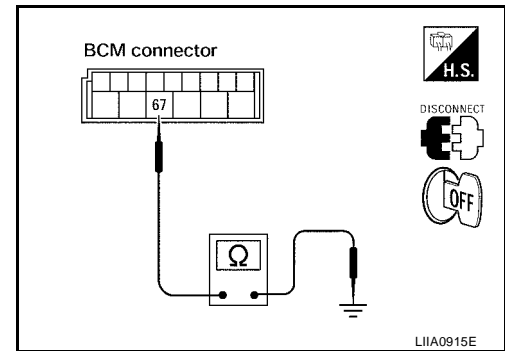

HEADLAMP (FOR USA)

CONSULT-II Function (BCM)

EKS0073D

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

CONSULT-II OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

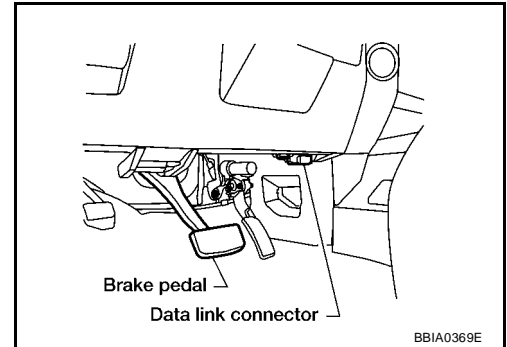

2. Touch "START (NISSAN BASED VHCL)".

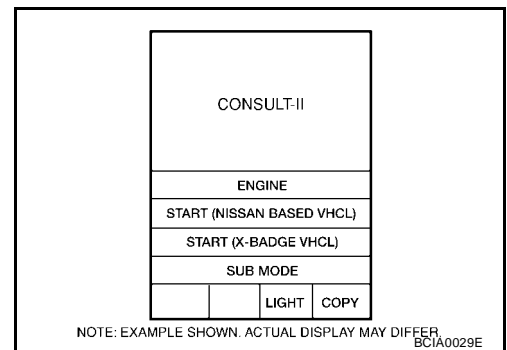


3. Touch "BCM" on "SELECT SYSTEM" screen. If "BCM" is not indicated, go to [GI-38, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

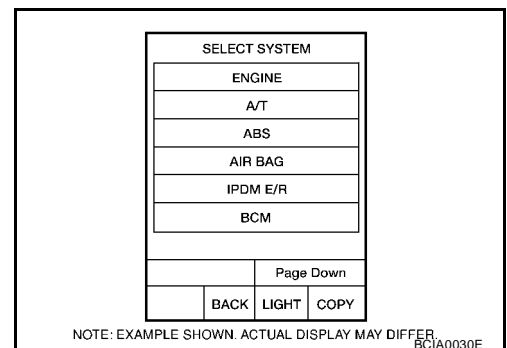

HEADLAMP (FOR USA)

4. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.

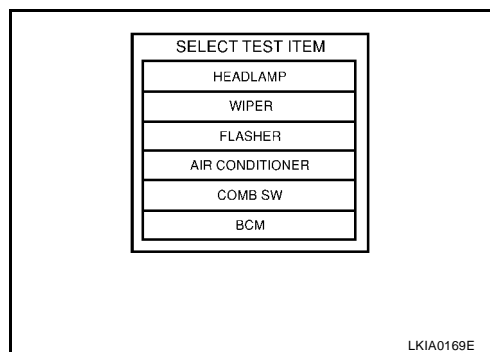

WORK SUPPORT

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "WORK SUPPORT" on "SELECT DIAG MODE" screen.
3. Touch item on "SELECT WORK ITEM" screen.
4. Touch "START".
5. Touch "CHANGE SETT".
6. The setting will be changed and "CUSTOMIZING COMPLETED" will be displayed.
7. Touch "END".

Display Item List

Item	Description	CONSULT-II	Factory setting
BATTERY SAVER SET	Exterior lamp battery saver control mode can be changed in this mode. Selects exterior lamp battery saver control mode between ON/OFF.	ON	×
		OFF	—

DATA MONITOR

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on the "SELECT MONITOR ITEM" screen.

All signals	Monitors all the signals.
Selection from menu	Selects and monitors individual signal.

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch individual items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

Display Item List

Monitor item	Contents
IGN ON SW "ON/OFF"	Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
ACC ON SW "ON/OFF"	Displays "ACC (ON)/OFF, Ignition OFF (OFF)" status judged from ignition switch signal.
HI BEAM SW "ON/OFF"	Displays status (high beam switch: ON/Others: OFF) of high beam switch judged from lighting switch signal.
HEAD LAMP SW 1 "ON/OFF"	Displays status (headlamp switch 1: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
HEAD LAMP SW 2 "ON/OFF"	Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.

HEADLAMP (FOR USA)

Monitor item	Contents
LIGHT SW 1ST "ON/OFF"	Displays status (lighting switch 1st position: ON/Others: OFF) of lighting switch judged from lighting switch signal.
AUTO LIGHT SW "ON/OFF"	Displays status of the lighting switch as judged from the lighting switch signal. (AUTO position: ON/Other than AUTO position: OFF)
PASSING SW "ON/OFF"	Displays status (flash-to-pass switch: ON/Others: OFF) of flash-to-pass switch judged from lighting switch signal.
FR FOG SW "ON/OFF"	Displays status (front fog lamp switch: ON/Others: OFF) of front fog lamp switch judged from lighting switch signal.
DOOR SW-DR "ON/OFF"	Displays status of the driver door as judged from the driver door switch signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-AS "ON/OFF"	Displays status of the passenger door as judged from the passenger door switch signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-RR "ON/OFF"	Displays status of the rear door as judged from the rear door switch (RH) signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-RL "ON/OFF"	Displays status of the rear door as judged from the rear door switch (LH) signal. (Door is open: ON/Door is closed: OFF)
BACK DOOR SW "ON/OFF"	Not used.
TURN SIGNAL R "ON/OFF"	Displays status (Turn right: ON/Others: OFF) as judged from lighting switch signal.
TURN SIGNAL L "ON/OFF"	Displays status (Turn left: ON/Others: OFF) as judged from lighting switch signal.
CARGO LAMP SW "ON/OFF"	Displays status of cargo lamp switch.
OPTICAL SENSOR [0 - 5V]	Displays "ambient light (close to 5V when dark/close to 0V when light)" judged from optical sensor signal.

ACTIVE TEST

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" deactivates the operation.

Display Item List

Test item	Description
TAIL LAMP	Allows tail lamp relay to operate by switching ON-OFF.
HEAD LAMP	Allows headlamp relay (HI, LO) to operate by switching ON-OFF.
FR FOG LAMP	Allows fog lamp relay to operate by switching ON-OFF.
CARGO LAMP	Allows cargo lamp to operate by switching ON-OFF.
CORNERING LAMP	Not used.

SELF-DIAGNOSTIC RESULTS

Operation Procedure

1. Touch "BCM" on "SELECT TEST ITEM" screen.
2. Touch "SELF-DIAG RESULTS" on "SELECT DIAG MODE" screen.
3. Self-diagnostic results are displayed.

Display Item List

Monitored item	CONSULT-II display	Description
CAN communication	CAN communication [U1000]	Malfunction is detected in CAN communication.
CAN communication system	CAN communication system 1 to 6 [U1000]	Malfunction is detected in CAN system.

HEADLAMP (FOR USA)

CONSULT-II Function (IPDM E/R)

EKS0073E

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


IPDM E/R diagnostic mode	Description
SELF-DIAG RESULTS	Displays IPDM E/R self-diagnosis results.
DATA MONITOR	Displays IPDM E/R input/output data in real time.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.

CONSULT-II OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn the ignition switch ON.

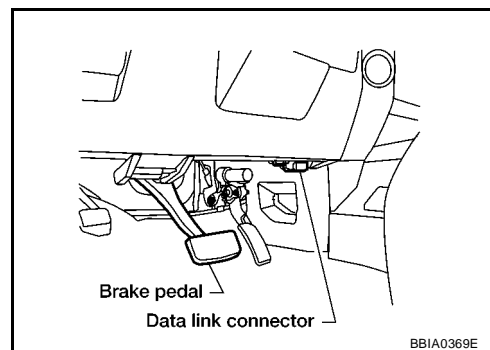

2. Touch "START (NISSAN BASED VHCL)".

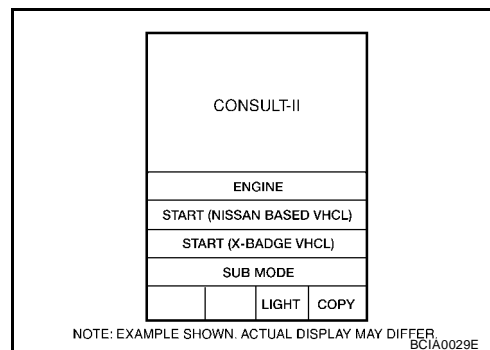


3. Touch "IPDM E/R" on "SELECT SYSTEM" screen. If "IPDM E/R" is not displayed, refer to [GI-38, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

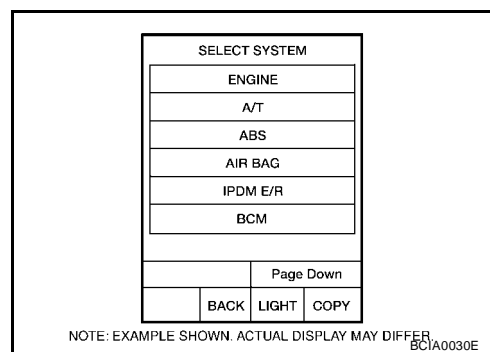

HEADLAMP (FOR USA)

- Select the desired part to be diagnosed on the "SELECT DIAG MODE" screen.

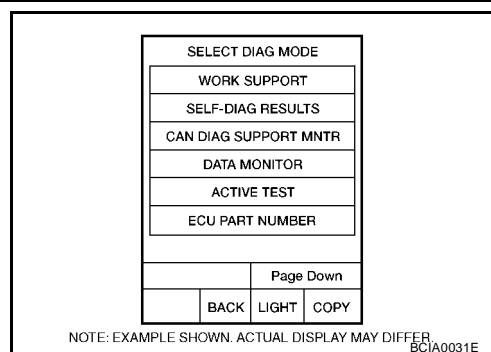

DATA MONITOR

Operation Procedure

- Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
- Touch "ALL SIGNALS", "MAIN SIGNALS" or "SELECTION FROM MENU" on the "SELECT MONITOR ITEM" screen.

ALL SIGNALS	All items will be monitored.
MAIN SIGNALS	Monitor the predetermined item.
SELECTION FROM MENU	Select any item for monitoring.

- Touch "START".
- Touch the required monitoring item on "SELECTION FROM MENU". In "ALL SIGNALS", all items are monitored. In "MAIN SIGNALS", predetermined items are monitored.
- Touch "RECORD" while monitoring to record the status of the item being monitored. To stop recording, touch "STOP".

All Items, Main Items, Select Item Menu

Item name	CONSULT-II screen display	Display or unit	Monitor item selection			Description
			ALL SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
Parking, license plate and tail lamps request	TAIL&CLR REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp low beam request	HL LO REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp high beam request	HL HI REQ	ON/OFF	×	×	×	Signal status input from BCM
Daytime lights request	DTRL REQ	ON/OFF	×	–	×	Signal status input from BCM
Front fog lamps request	FR FOG REQ	ON/OFF	×	×	×	Signal status input from BCM

NOTE:

Perform monitoring of IPDM E/R data with the ignition switch ON. When the ignition switch is at ACC, the display may not be correct.

ACTIVE TEST

Operation Procedure

- Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
- Touch "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
- Touch item to be tested, and check operation.
- Touch "START".
- Touch "STOP" while testing to stop the operation.

HEADLAMP (FOR USA)

Test item	CONSULT-II screen display	Description
Tail lamp relay output	TAIL LAMP	Allows tail lamp relay to operate by switching operation ON-OFF at your option.
Headlamp relay (HI, LO) output	LAMPS	Allows headlamp relay (HI, LO) to operate by switching operation (OFF, HI, LO) at your option (Head lamp high beam repeats ON-OFF every 1 second).
Front fog lamp relay (FOG) output		Allows fog lamp relay (FOG) to operate by switching operation ON-OFF at your option.

Headlamp HI Does Not Illuminate (Both Sides)

EKS0073F

1. CHECK COMBINATION SWITCH INPUT SIGNAL

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "HI BEAM SW" turns ON-OFF linked with operation of lighting switch.

When lighting switch is in HIGH position : HI BEAM SW ON

OK or NG

OK >> GO TO 2.

NG >> Check lighting switch. Refer to [LT-95, "Combination Switch Inspection"](#).

DATA MONITOR	
MONITOR	
HI BEAM SW	ON

SKIA4193E

2. HEADLAMP ACTIVE TEST

1. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Select "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
3. Touch "HI" on "ACTIVE TEST" screen.
4. Make sure headlamp high beam operates.

Headlamp high beam should operate.

OK or NG

OK >> GO TO 3.

NG >> GO TO 4.

ACTIVE TEST			
EXTERNAL LAMPS	OFF		
TAIL			
LO	HI		
FOG			
MODE	BACK	LIGHT	COPY

WKIA1438E

3. CHECK IPDM E/R

1. Select "IPDM E/R" on CONSULT-II and select "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Make sure "HL LO REQ" and "HL HI REQ" turns ON when lighting switch is in HIGH position.

**When lighting switch is in HIGH position : HL LO REQ ON
: HL HI REQ ON**

OK or NG

OK >> Replace IPDM E/R. Refer to [PG-28, "Removal and Installation of IPDM E/R"](#).

NG >> Replace BCM. Refer to [BCS-25, "Removal and Installation of BCM"](#).


DATA MONITOR			
MONITOR			
HL LO REQ	ON		
HL HI REQ	ON		
Page Down			
RECORD			
MODE	BACK	LIGHT	COPY

SKIA5775E

HEADLAMP (FOR USA)

4. CHECK HEADLAMP INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH and LH connectors.
3. Turn ignition switch ON.
4. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
5. Select "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
6. Touch "HI" on "ACTIVE TEST" screen.
7. When headlamp high beam is operating, check voltage between front combination lamp RH and LH harness connector and ground.

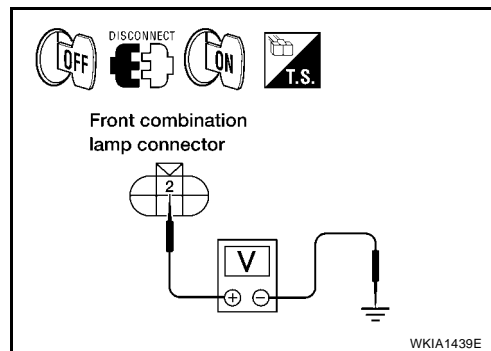

Terminals			Voltage
(+)		(-)	
Connector	Terminal (Wire color)		
RH	E107	2 (L/W)	Ground
LH	E11	2 (G)	
			Battery voltage

OK or NG

- OK >> GO TO 6.
 NG >> GO TO 5.


5. CHECK HEADLAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector E123 terminal 56 (L/W) and front combination lamp RH harness connector E107 terminal 2 (L/W).

56 (L/W) - 2 (L/W) : Continuity should exist.

4. Check continuity between IPDM E/R harness connector E123 terminal 55 (G) and front combination lamp LH harness connector E11 terminal 2 (G).

55 (G) - 2 (G) : Continuity should exist.

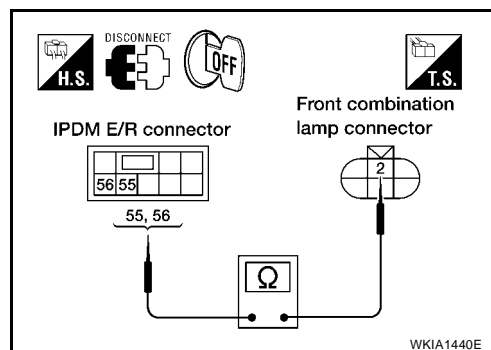

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-28, "Removal and Installation of IPDM E/R"](#) .
 NG >> Repair harness or connector.

6. CHECK HEADLAMP GROUND

1. Check continuity between front combination lamp RH harness connector E107 terminal 3 (B) and ground.


3 (B) - Ground : Continuity should exist.

2. Check continuity between front combination lamp LH harness connector E11 terminal 3 (B) and ground.

3 (B) - Ground : Continuity should exist.

OK or NG

- OK >> Check front combination connector for damage or poor connection. Repair as necessary.
 NG >> Repair harness or connector.

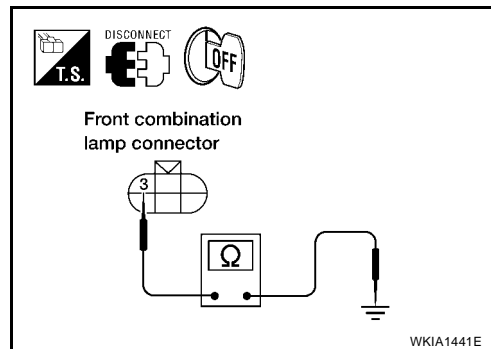

HEADLAMP (FOR USA)

EKS0073G

Headlamp HI Does Not Illuminate (One Side)

1. BULB INSPECTION

Inspect inoperative headlamp bulb.

OK or NG

OK >> GO TO 2.

NG >> Replace headlamp bulb. Refer to [LT-30, "HEADLAMP \(INNER SIDE\), FOR HIGH BEAM"](#).

2. CHECK POWER TO HEADLAMP


1. Disconnect inoperative headlamp connector.
2. Turn the high beam headlamps ON.
3. Check voltage between inoperative headlamp terminal and ground.

Terminals			Voltage (Approx.)
(+)		(-)	
Connector	Terminal (Wire color)		
RH	E107	2 (L/W)	Ground
LH	E11	2 (G)	
			Battery voltage

OK or NG

OK >> GO TO 3.

NG >> GO TO 4.

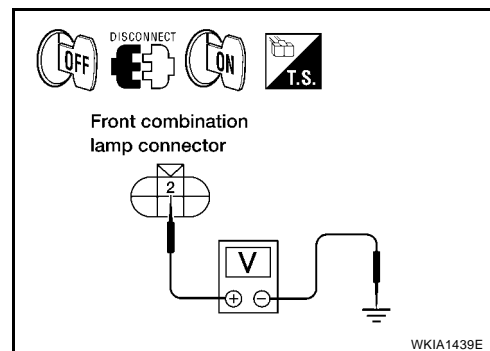

3. CHECK HEADLAMP GROUND


1. Turn the high beam headlamps OFF.
2. Check continuity between inoperative headlamp connector and ground.

Terminals			Continuity
Connector	Terminal (Wire color)		
RH	E107	3 (B)	Ground
LH	E11		
			Yes

OK or NG

OK >> Check headlamp connector for damage or poor connection. Repair as necessary.

NG >> Repair open circuit in harness between inoperative headlamp and ground.

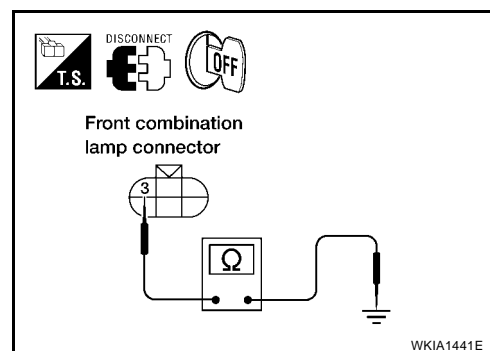

HEADLAMP (FOR USA)

4. INSPECTION BETWEEN IPDM E/R AND HEADLAMPS


1. Disconnect IPDM E/R connector and inoperative headlamp connector.
2. Check continuity between harness connector terminals of IPDM E/R and harness connector terminals of inoperative headlamp.

IPDM E/R		Headlamp		Continuity
Connector	Terminal (wire color)	Connector	Terminal (wire color)	
E123	56 (L/W)	RH	E107	Yes
	55 (G)	LH	E11	

OK or NG

OK >> Replace IPDM E/R. Refer to [PG-28, "Removal and Installation of IPDM E/R"](#) .

NG >> Check for short circuits and open circuits in harness between IPDM E/R and headlamps. Repair as necessary.

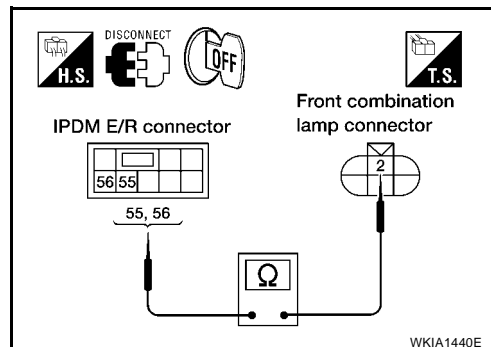

High Beam Indicator Lamp Does Not Illuminate

EKS0073H

1. BULB INSPECTION

Inspect CAN communication system. Refer to [LAN-8, "CAN COMMUNICATION"](#) .

OK or NG

OK >> Replace combination meter. Refer to [IP-13, "COMBINATION METER"](#) .

NG >> Repair as necessary.

Headlamp LO Does Not Illuminate (Both Sides)

EKS0073I

1. CHECK COMBINATION SWITCH INPUT SIGNAL


Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "HEAD LAMP SW 1" and "HEAD LAMP SW 2" turns ON-OFF linked with operation of lighting switch.

When lighting switch is in 2ND position :
HEAD LAMP SW 1 ON
HEAD LAMP SW 2 ON

OK or NG

OK >> GO TO 2.

NG >> Check lighting switch. Refer to [LT-95, "Combination Switch Inspection"](#) .

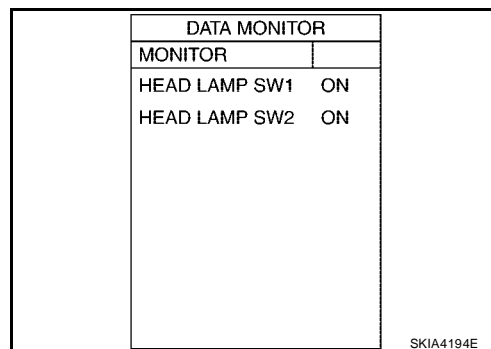

SKIA4194E

2. HEADLAMP ACTIVE TEST


1. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Select "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
3. Touch "LO" on "ACTIVE TEST" screen.
4. Make sure headlamp low beam operates.

Headlamp low beam should operate.

OK or NG

OK >> GO TO 3.

NG >> GO TO 4.

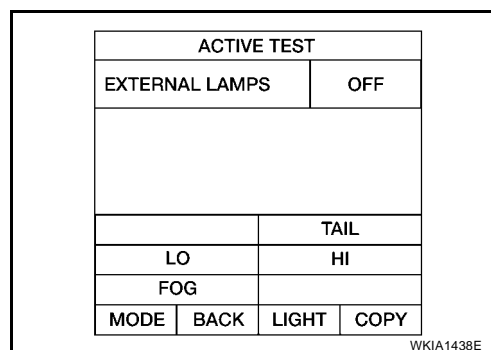

WKIA1438E

HEADLAMP (FOR USA)


3. CHECK IPDM E/R

1. Select "IPDM E/R" on CONSULT-II, and select "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Make sure "HL LO REQ" turns ON when lighting switch is in 2ND position.

When lighting switch is in 2ND position : HL LO REQ ON

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-28, "Removal and Installation of IPDM E/R"](#).
- NG >> Replace BCM. Refer to [BCS-25, "Removal and Installation of BCM"](#).

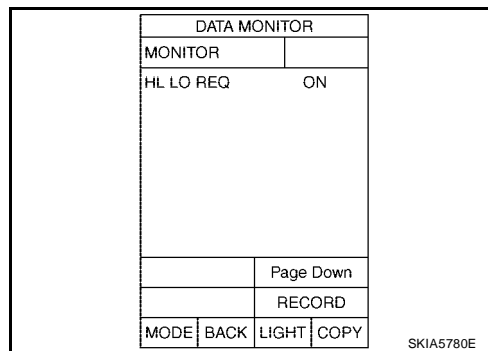


4. CHECK HEADLAMP INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH and LH connectors.
3. Turn ignition switch ON.
4. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
5. Select "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
6. Touch "LO" on "ACTIVE TEST" screen.
7. When headlamp low beam is operating, check voltage between front combination lamp RH and LH harness connector and ground.

Terminals			Voltage
(+)		(-)	
Connector	Terminal (Wire color)		
RH	E107	1 (R/Y)	Ground Battery voltage
LH	E11	1 (L)	

OK or NG

- OK >> GO TO 6.
- NG >> GO TO 5.

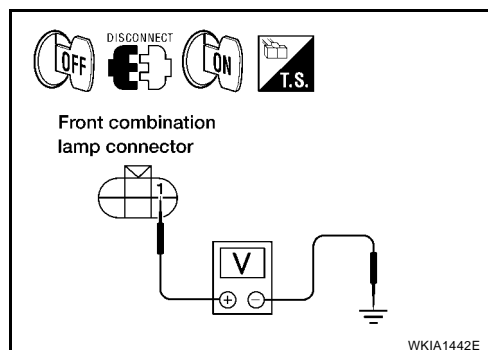

5. CHECK HEADLAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector E123 terminal 54 (R/Y) and front combination lamp RH harness connector E107 terminal 1 (R/Y).


54 (R/Y) - 1 (R/Y) : Continuity should exist.

4. Check continuity between IPDM E/R harness connector E123 terminal 52 (L) and front combination lamp LH harness connector E11 terminal 1 (L).

52 (L) - 1 (L) : Continuity should exist.

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-28, "Removal and Installation of IPDM E/R"](#).
- NG >> Repair harness or connector.

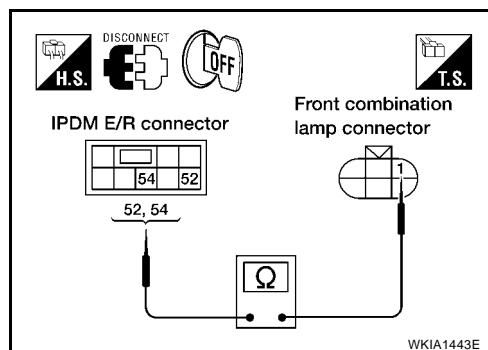

HEADLAMP (FOR USA)

6. CHECK HEADLAMP GROUND

1. Turn ignition switch OFF.
2. Check continuity between front combination lamp RH harness connector E107 terminal 4 (B) and ground.

4 (B) - Ground : Continuity should exist.


3. Check continuity between front combination lamp LH harness connector E11 terminal 4 (B) and ground.

4 (B) - Ground : Continuity should exist.

OK or NG

OK >> Check front combination lamp connector for damage or poor connection. Repair as necessary.

NG >> Repair harness or connector.

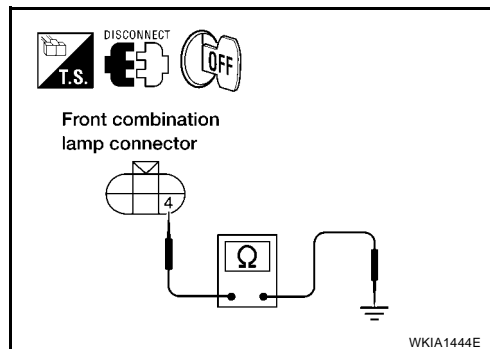

Headlamp LO Does Not Illuminate (One Side)

EKS0073J

1. BULB INSPECTION

Inspect inoperative headlamp bulb.

OK or NG

OK >> GO TO 2.

NG >> Replace headlamp bulb. Refer to [LT-30, "HEADLAMP \(OUTER SIDE\), FOR LOW BEAM"](#) .

2. CHECK POWER TO HEADLAMP


1. Disconnect inoperative headlamp connector.
2. Turn the low beam headlamps ON.
3. Check voltage between inoperative headlamp connector terminal and ground.

Terminals			Voltage (Approx.)
(+)		(-)	
Connector	Terminal		
RH	E107	1 (R/Y)	Battery voltage
LH	E11	1 (L)	

OK or NG

OK >> GO TO 3.

NG >> GO TO 4.

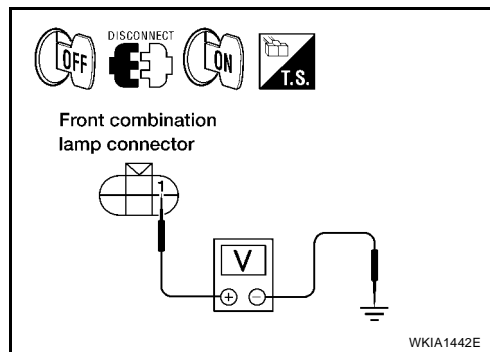

3. CHECK HEADLAMP GROUND


1. Turn the low beam headlamps OFF.
2. Check continuity between inoperative headlamp connector terminal and ground.

Terminals			Continuity
Connector	Terminal (Wire color)		
RH	E107	4 (B)	Yes
LH	E11		

OK or NG

OK >> Check headlamp and IPDM E/R connector. Repair as necessary.

NG >> Repair open circuit in harness between inoperative headlamp and ground.

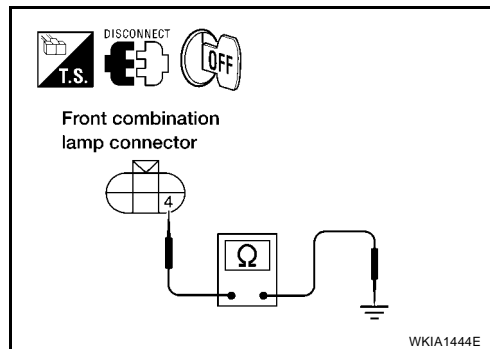

HEADLAMP (FOR USA)

4. INSPECTION BETWEEN IPDM E/R AND HEADLAMPS


1. Disconnect IPDM E/R connector.
2. Check continuity between harness connector terminals of IPDM E/R and harness connector terminals of inoperative headlamp.

Terminals					Continuity
IPDM E/R		Front combination lamp			
Connector	Terminal (Wire color)	Connector	Terminal (Wire color)		
E123	54 (R/Y)	RH	E107	1 (R/Y)	Yes
	52 (L)	LH	E11	1 (L)	

OK or NG

OK >> Replace IPDM E/R. Refer to [PG-28, "Removal and Installation of IPDM E/R"](#) .

NG >> Check for short circuits and open circuits in harness between IPDM E/R and headlamps. Repair as necessary.

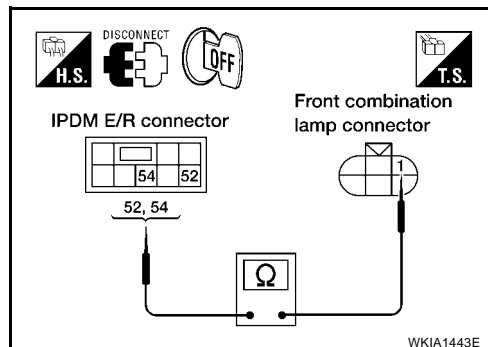

Headlamps Do Not Turn OFF

EKS0073K

1. CHECK COMBINATION SWITCH INPUT SIGNAL

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "HEAD LAMP SW 1" and "HEAD LAMP SW 2" turns ON-OFF linked with operation of lighting switch.

When lighting switch is in OFF position :
HEAD LAMP SW 1 OFF
HEAD LAMP SW 2 OFF

OK or NG

OK >> Replace IPDM E/R. Refer to [PG-28, "Removal and Installation of IPDM E/R"](#) .

NG >> GO TO 2.

DATA MONITOR	
MONITOR	
HEAD LAMP SW 1	OFF
HEAD LAMP SW 2	OFF

SKIA5200E

2. CHECK LIGHTING SWITCH

Check lighting switch. Refer to [LT-95, "Combination Switch Inspection"](#) .

OK or NG

OK >> GO TO 3.

NG >> Replace lighting switch. Refer to [LT-97, "Removal and Installation"](#) .

3. CHECKING CAN COMMUNICATIONS BETWEEN BCM AND IPDM E/R

Select "BCM" on CONSULT-II and perform self-diagnosis for BCM.

Display of self-diagnosis results

NO DTC>>Replace IPDM E/R. Refer to [PG-28, "Removal and Installation of IPDM E/R"](#) .

CAN COMM CIRCUIT>> Refer to [BCS-13, "CAN Communication Inspection Using CONSULT-II \(Self-Diagnosis\)"](#) .


SELF-DIAG RESULTS			
DTC RESULTS		TIME	
CAN COMM CIRCUIT [U1000]		PAST	
ERASE		PRINT	
MODE	BACK	LIGHT	COPY

SKIA1039E

HEADLAMP (FOR USA)

Aiming Adjustment

EKS0073L

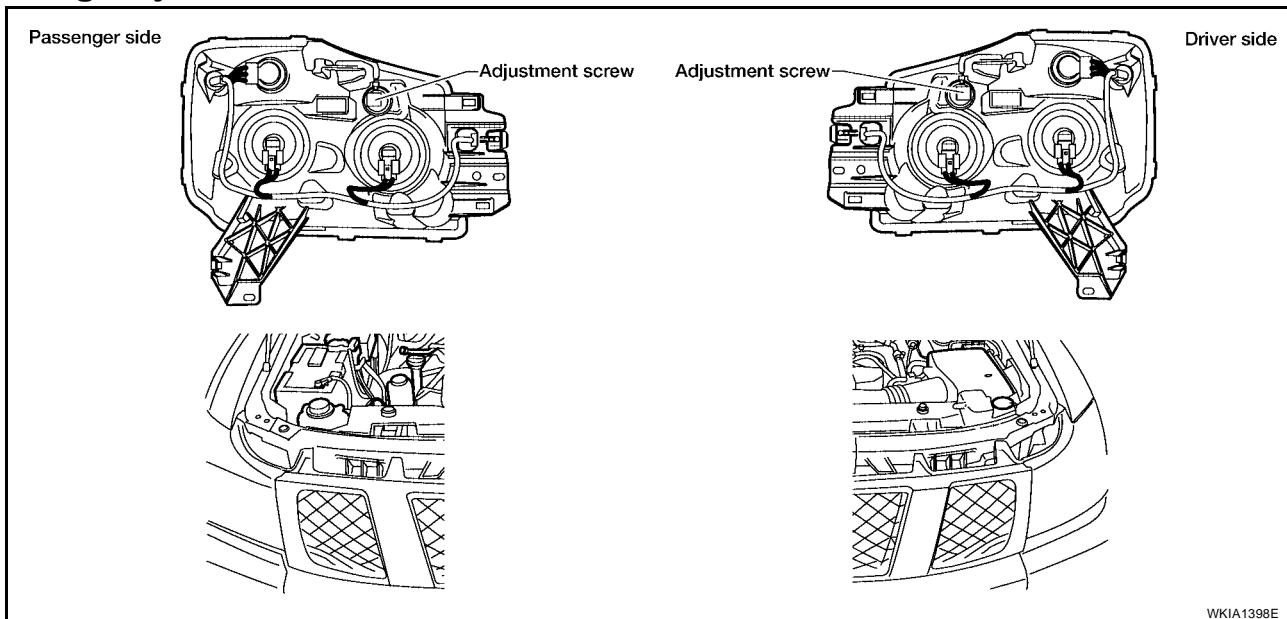

For details, refer to the regulations in your state.

Before performing aiming adjustment, check the following.

1. Ensure all tires are inflated to correct pressure.
2. Place vehicle and screen on level surface.
3. Ensure there is no load in vehicle other than the driver (or equivalent weight placed in driver's position). Coolant and engine oil filled to correct level, and fuel tank full.
4. Confirm spare tire, jack and tools are properly stowed.

LOW BEAM AND HIGH BEAM


NOTE:

Aim each headlamp individually and ensure other headlamp beam pattern is blocked from screen.

1. Turn headlamp low beam on.
2. Use adjusting screw to perform aiming adjustment.

A
B
C
D
E
F
G
H
I
J
LT
L
M

HEADLAMP (FOR USA)

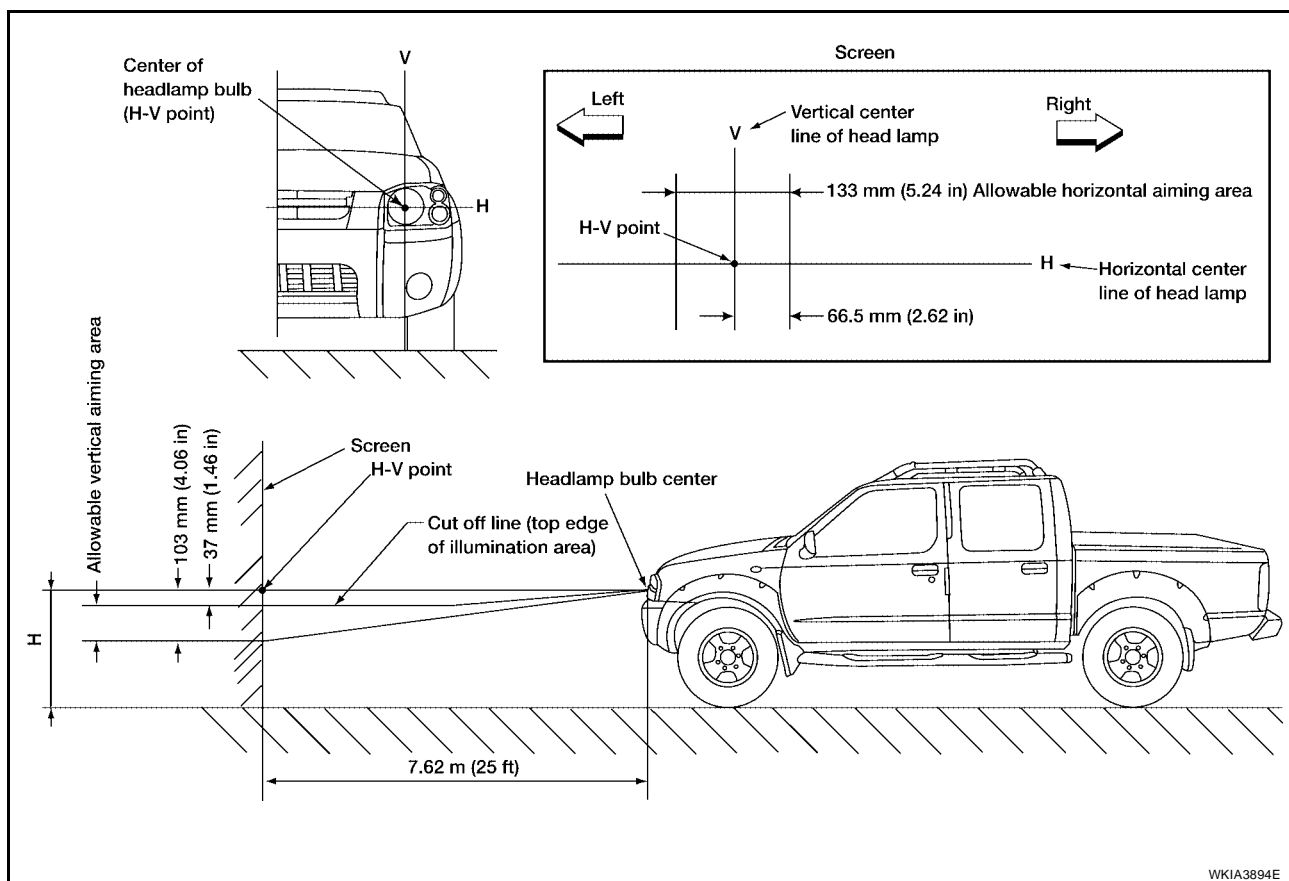

If the vehicle front body has been repaired and/or the headlamp assembly has been replaced, check aiming. Use the aiming chart shown in the figure.

- **Basic illuminating area for adjustment should be within the range shown on the aiming chart. Adjust headlamps accordingly.**

Bulb Replacement HEADLAMP (OUTER SIDE), FOR LOW BEAM

EKS0073M

NOTE:

Reach through wheel opening for access.

1. Turn headlamp switch OFF.
2. Disconnect the electrical connector.
3. Turn the bulb counterclockwise to remove it.
4. Installation is in the reverse order of removal.

HEADLAMP (INNER SIDE), FOR HIGH BEAM

1. Turn headlamp switch OFF.
2. Disconnect the electrical connector.
3. Turn the bulb counterclockwise to remove it.
4. Installation is in the reverse order of removal.

FRONT TURN SIGNAL/PARKING LAMP

NOTE:

Reach through wheel opening for access.

1. Turn the bulb socket counterclockwise to unlock it.
2. Pull the bulb to remove it from the socket.
3. Installation is in the reverse order of removal.

FRONT SIDE MARKER LAMP

NOTE:

Reach through wheel opening for access.

HEADLAMP (FOR USA)

1. Turn the bulb socket counterclockwise to unlock it.
2. Pull the bulb to remove it from the socket.
3. Installation is in the reverse order of removal.

CAUTION:


After installing the bulb, be sure to install the bulb socket securely to ensure watertightness.

Removal and Installation

EKS0073N

REMOVAL

1. Remove the grille. Refer to [EI-20, "Removal and Installation"](#).
2. Remove the front bumper filler panel.
3. Disconnect the connector.
4. Remove the 4 headlamp mounting bolts.

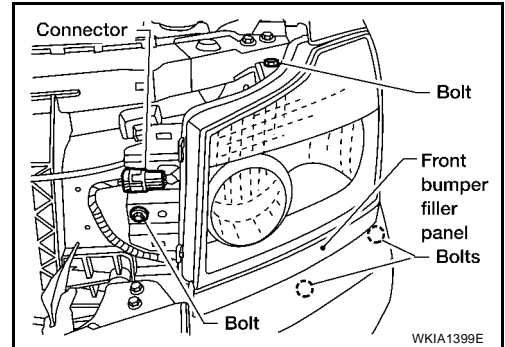

INSTALLATION


Installation is in the reverse order of removal.

: **6.0 N-m (0.61 kg-m, 53 in-lb)**

Disassembly and Assembly

DISASSEMBLY

EKS0073O

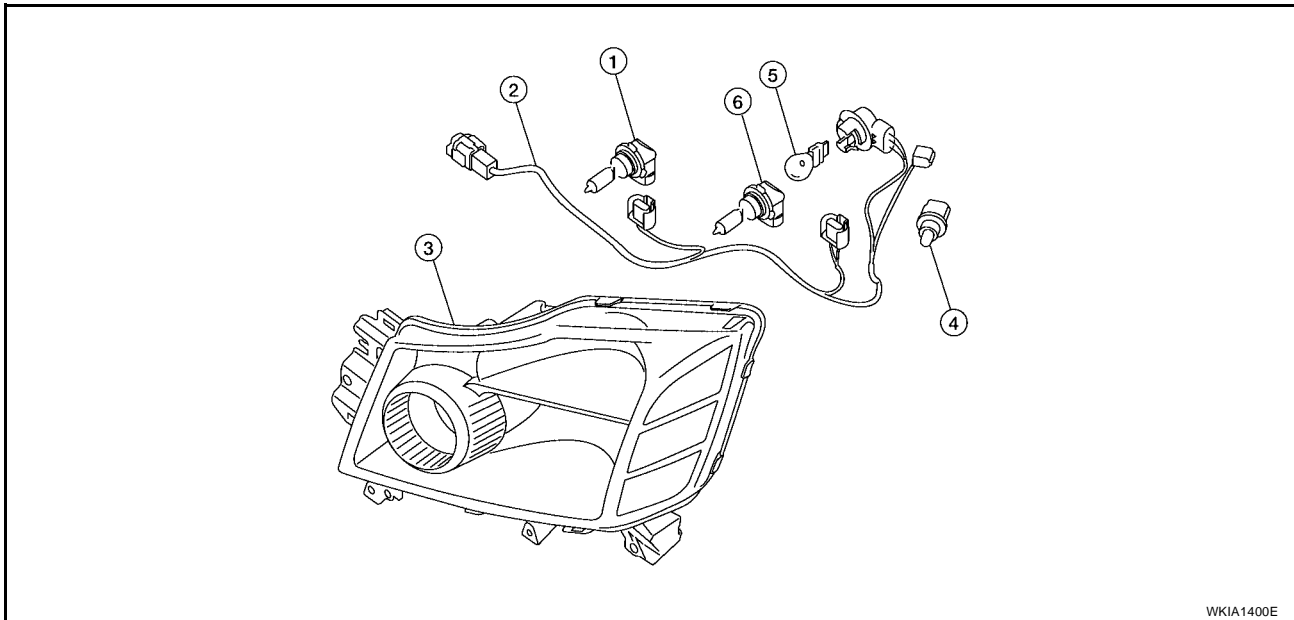

- | | | |
|------------------------------|----------------------------------|-----------------------------|
| 1. Headlamp bulb (High beam) | 2. Wiring harness assembly | 3. Headlamp assembly |
| 4. Side marker lamp bulb | 5. Parking/turn signal lamp bulb | 6. Headlamp bulb (Low beam) |

A
B
C
D
E
F
G
H
I
J
LT
L
M


HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

PF2:26010

Component Parts and Harness Connector Location

EKS0073P

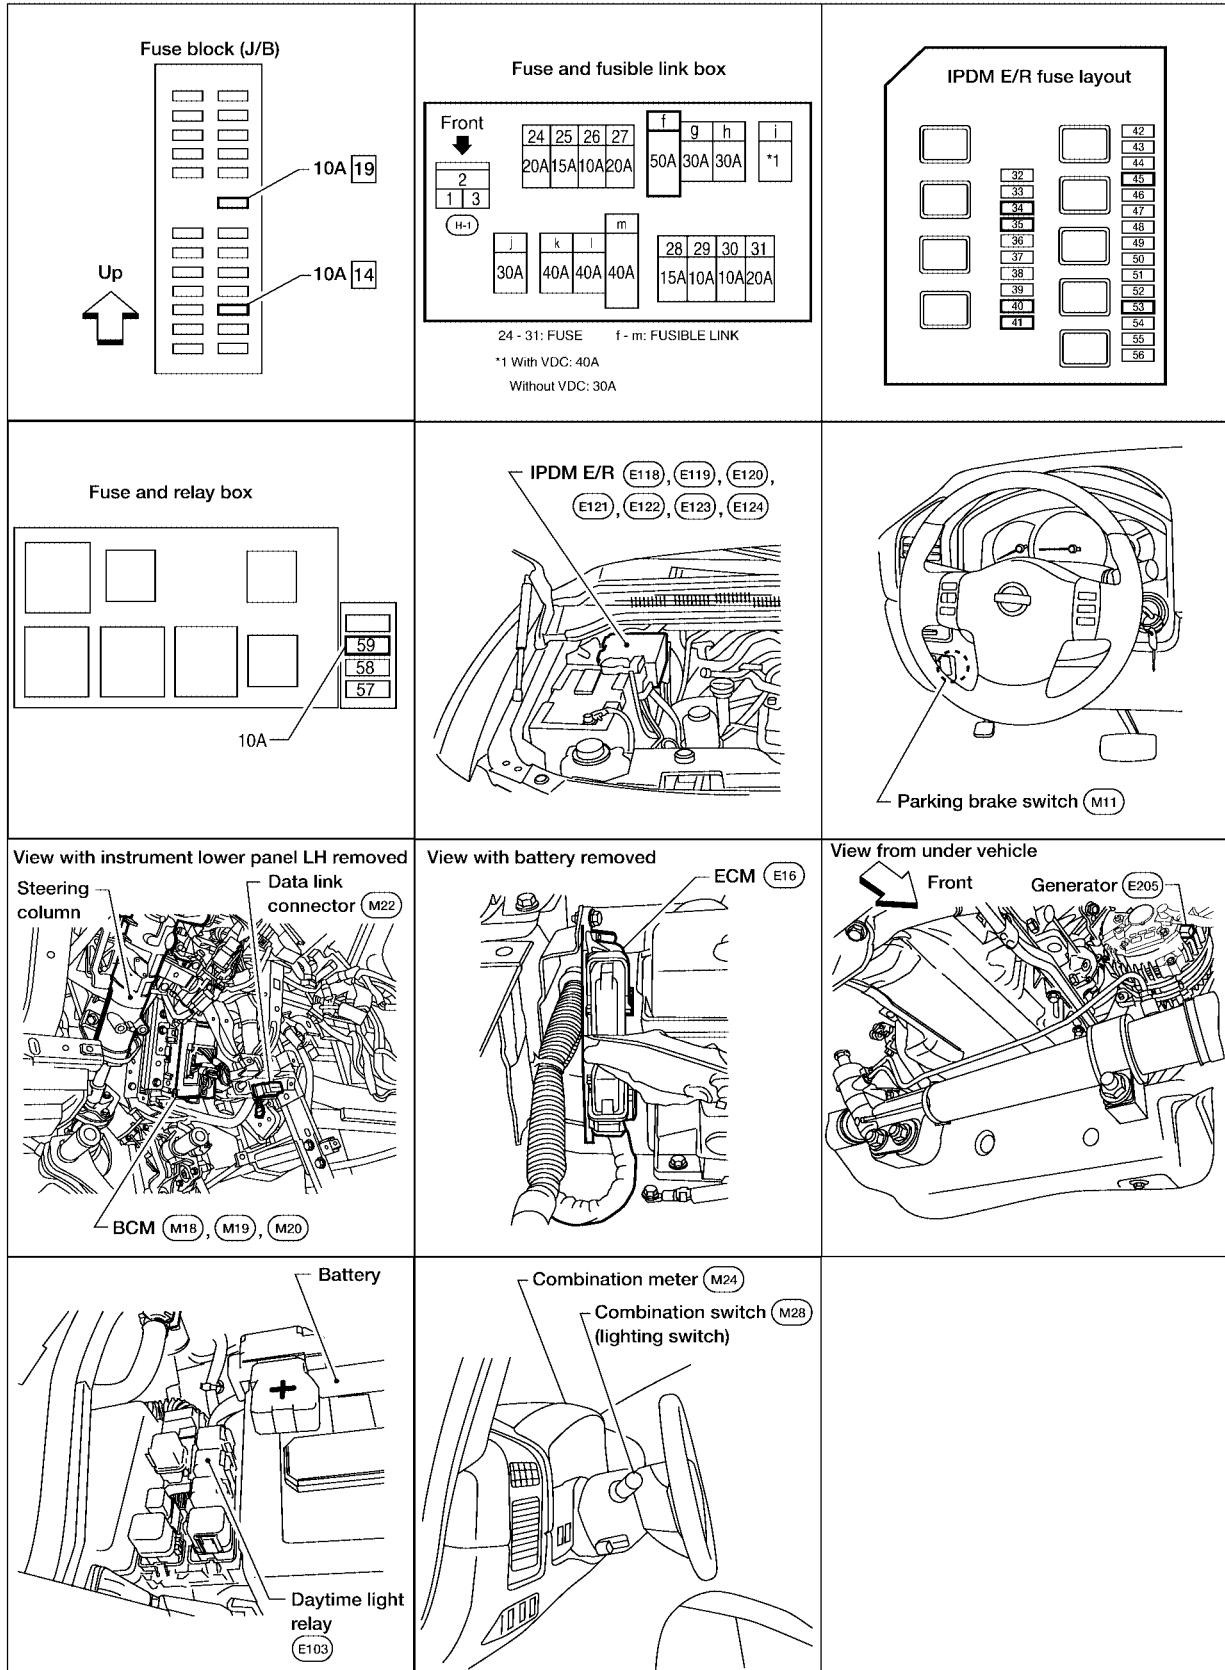

WKIA3580E

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

EKS00730

System Description

Daytime light system turns on daytime light lamps while driving. Daytime light lamps are not turned on if engine is activated with parking brake on. Take off parking brake to turn on daytime light lamps. The lamps turn off when lighting switch is in the 2ND position or AUTO position (Headlamp is "ON") and when lighting switch is in the PASSING position. (Daytime light lamps are not turned off only by parking brake itself.)

A parking brake signal and engine run or stop signal are sent to BCM (body control module) by CAN communication line.

OUTLINE

Power is supplied at all times

- to ignition relay, located in the IPDM E/R (intelligent power distribution module engine room), and
- through 10A fuse [No. 19, located in the fuse block (J/B)]
- to combination meter terminal 8, and
- through 50A fusible link (letter f , located in the fuse and fusible link box)
- to BCM terminal 70, and
- through 20A fuse (No. 53, located in the IPDM E/R)
- to CPU (central processing unit) of the IPDM E/R, and
- through 10A fuse (No. 45, located in the IPDM E/R)
- to daytime light relay terminals 2 and 5.

When the ignition switch is in ON or START position, power is supplied

- through 10A fuse [No. 14, located in the fuse block (J/B)]
- to combination meter terminal 24, and
- through 10A fuse (No. 59, located in the fuse and relay box)
- to BCM terminal 38.

Ground is supplied

- to BCM terminal 67 and
- to combination meter terminal 17
- through grounds M57, M61 and M79.

DAYTIME LIGHT OPERATION

With the engine running, the lighting switch in the OFF or 1ST position and parking brake released, the IPDM E/R receives input requesting the daytime lights illuminate. This input is communicated across the CAN communication lines. The CPU of the IPDM E/R controls the daytime light relay coil. When energized, this relay directs power

- through daytime light relay terminal 3
- through front combination lamp LH terminal 3
- through front combination lamp LH terminal 2
- through IPDM E/R terminal 55
- through 10A fuse (No. 35, located in the IPDM E/R)
- through 10A fuse (No. 34, located in the IPDM E/R)
- through IPDM E/R terminal 56
- to front combination lamp RH terminal 2.

Ground is supplied

- to front combination lamp RH terminal 3
- through grounds E9, E15 and E24.

With power and ground supplied, the daytime lights illuminate. The high beam headlamps are now wired in series and illuminate at a reduced intensity.

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#) .

AUTO LIGHT OPERATION

For auto light operation, refer to [LT-47, "System Description"](#) in AUTO LIGHT SYSTEM.

A

B

C

D

E

F

G

H

I

J

LT

L

M

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

CAN Communication System Description


EKS0073R

Refer to [LAN-8, "CAN COMMUNICATION"](#) .

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

Schematic

EKS0073S

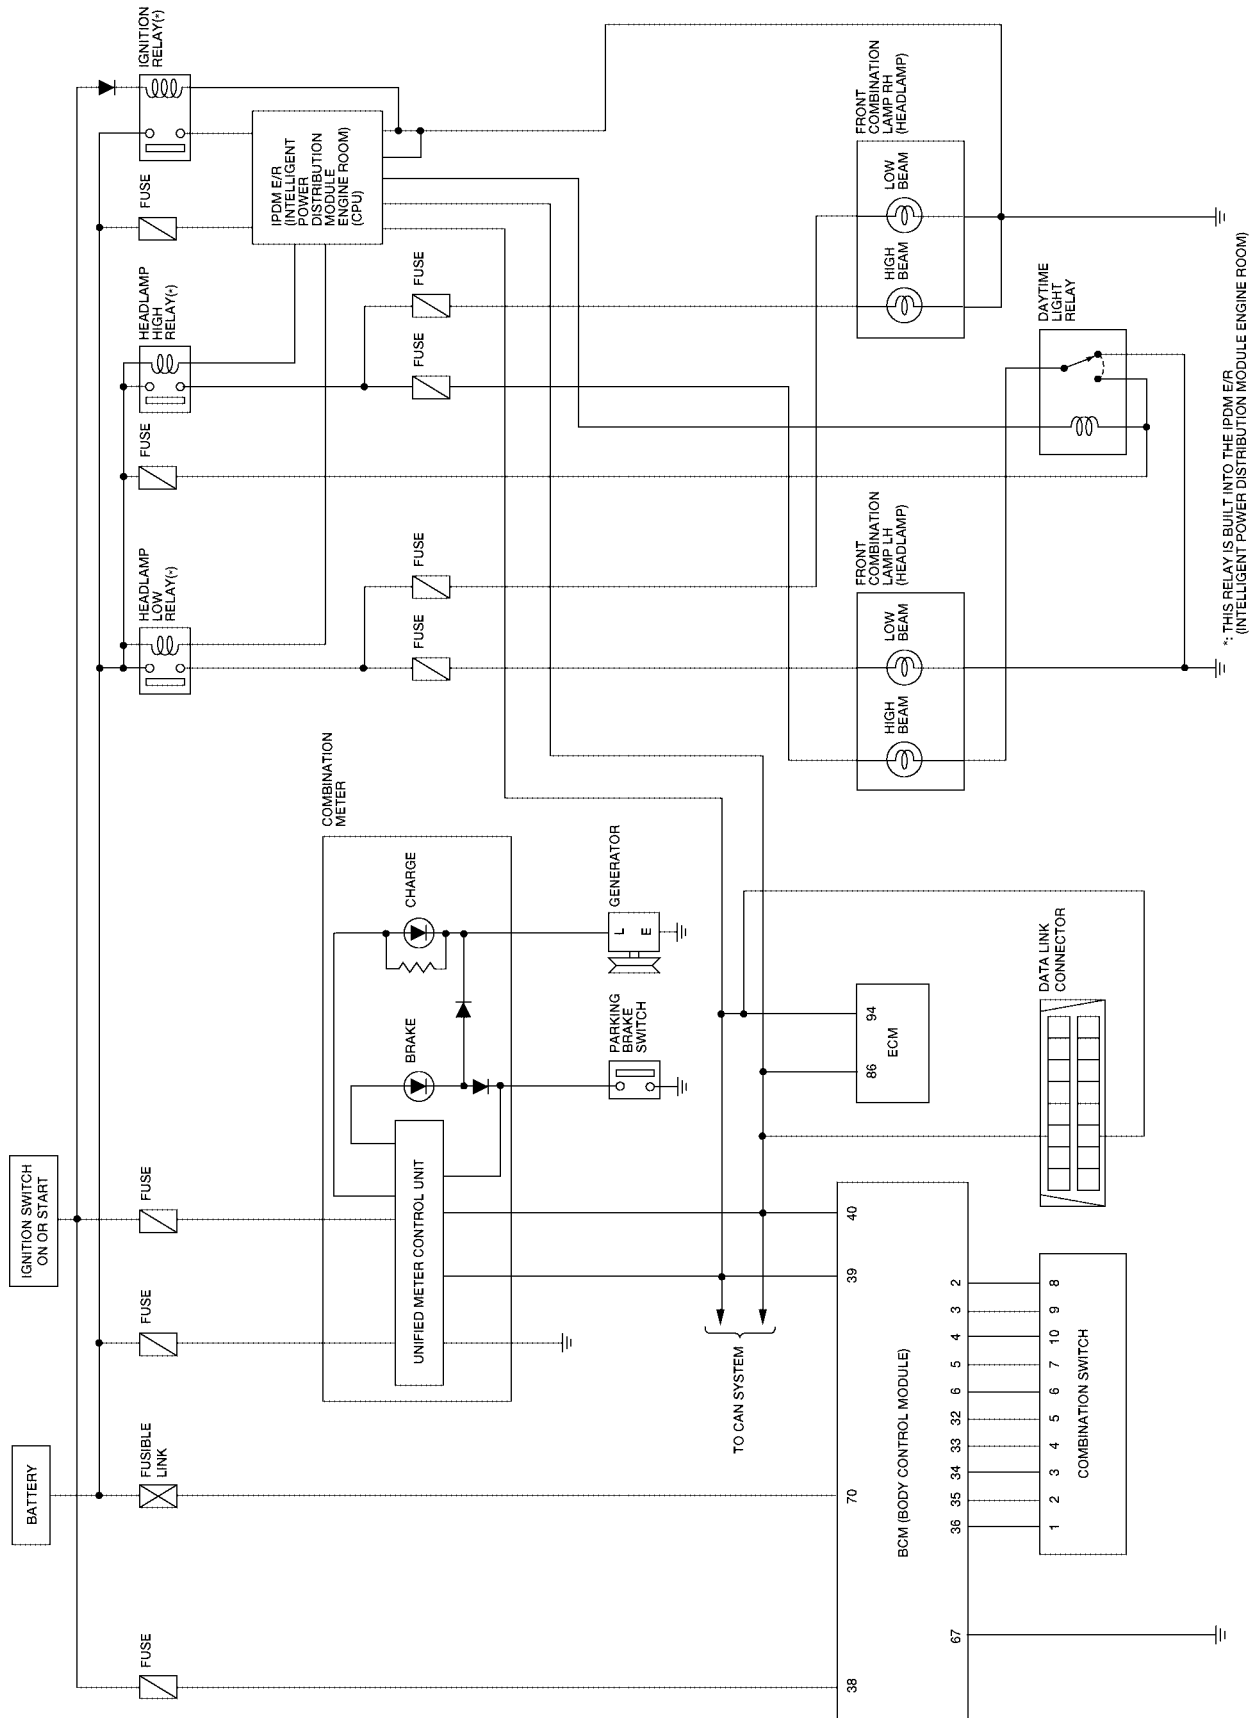

A
B
C
D
E
F
G
H
I
J
K
L
M

LT

WKWA1486E




HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

EKS0073T

Wiring Diagram — DTRL —

LT-DTRL-01

▬ : DATA LINE


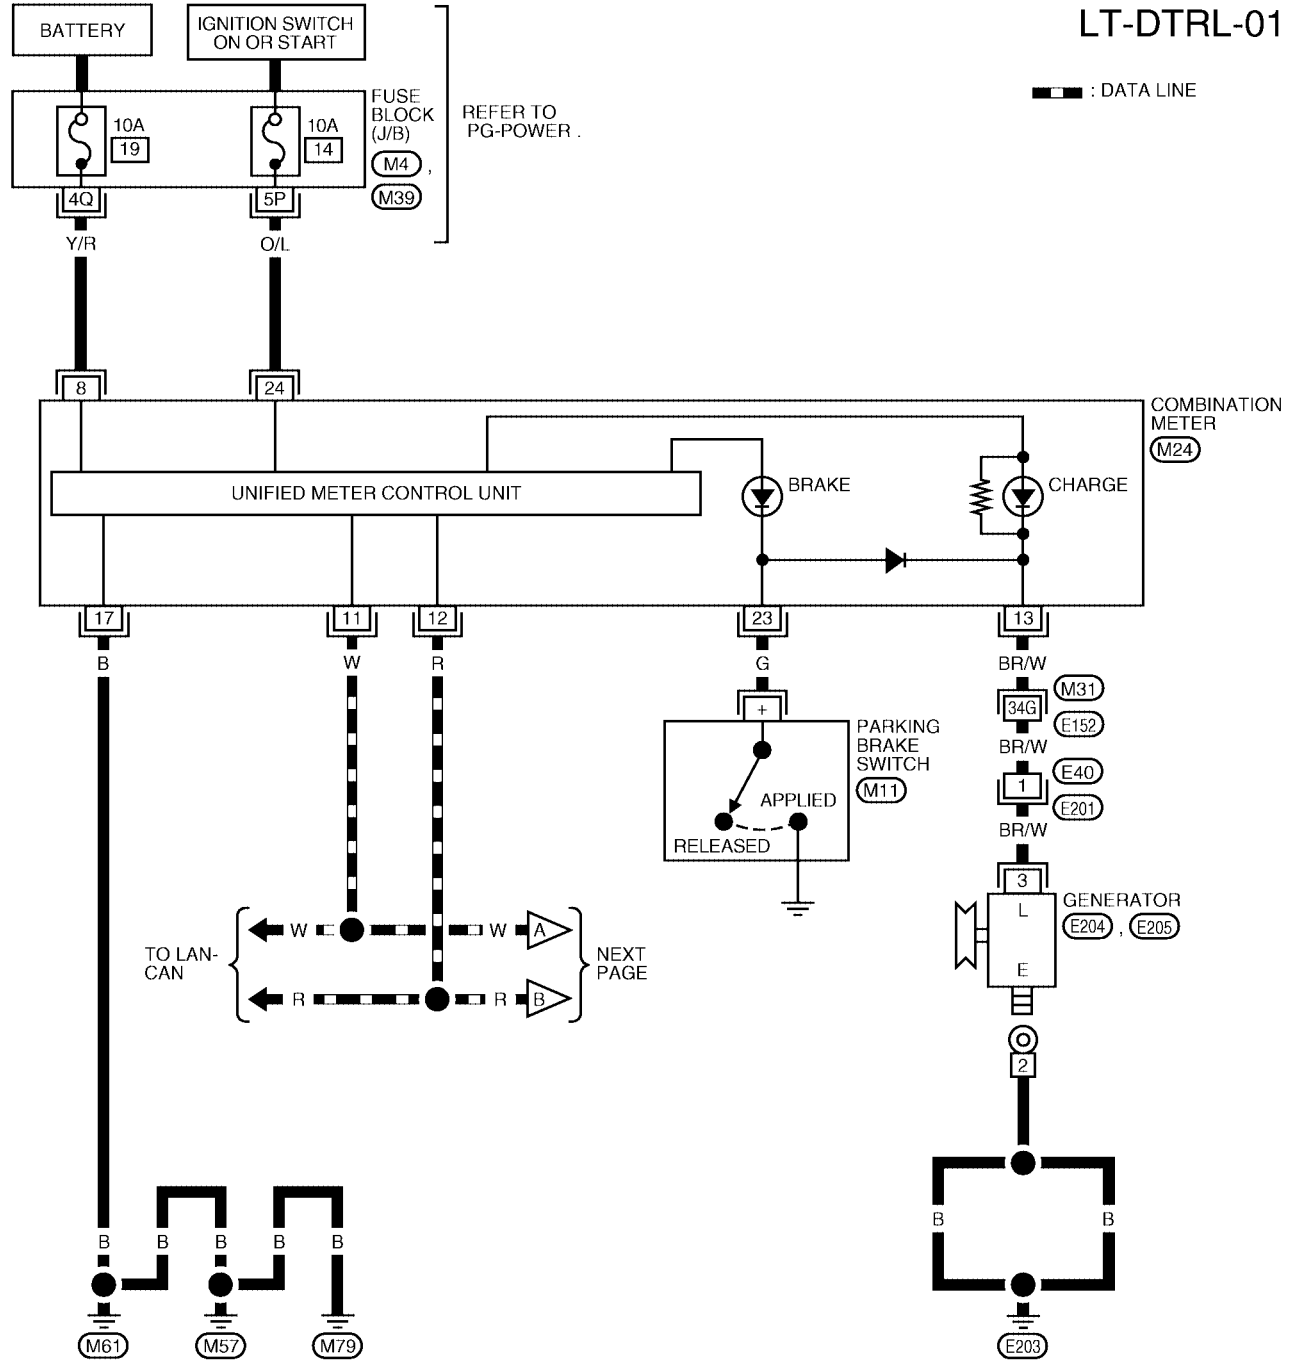


REFER TO THE FOLLOWING.
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA1400E

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

LT-DTRL-02

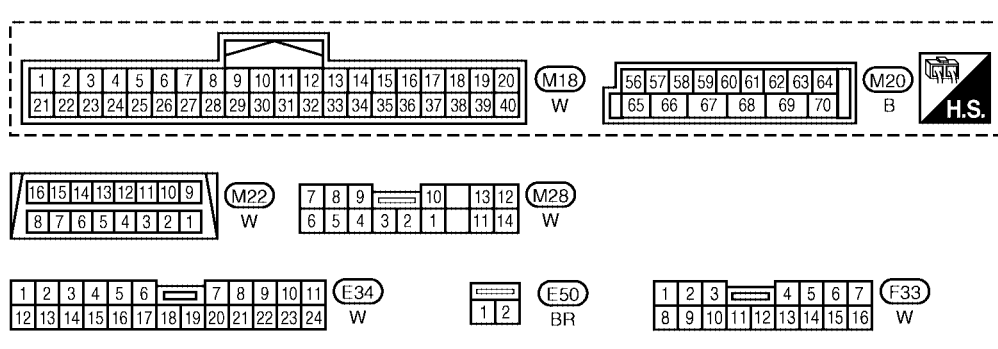
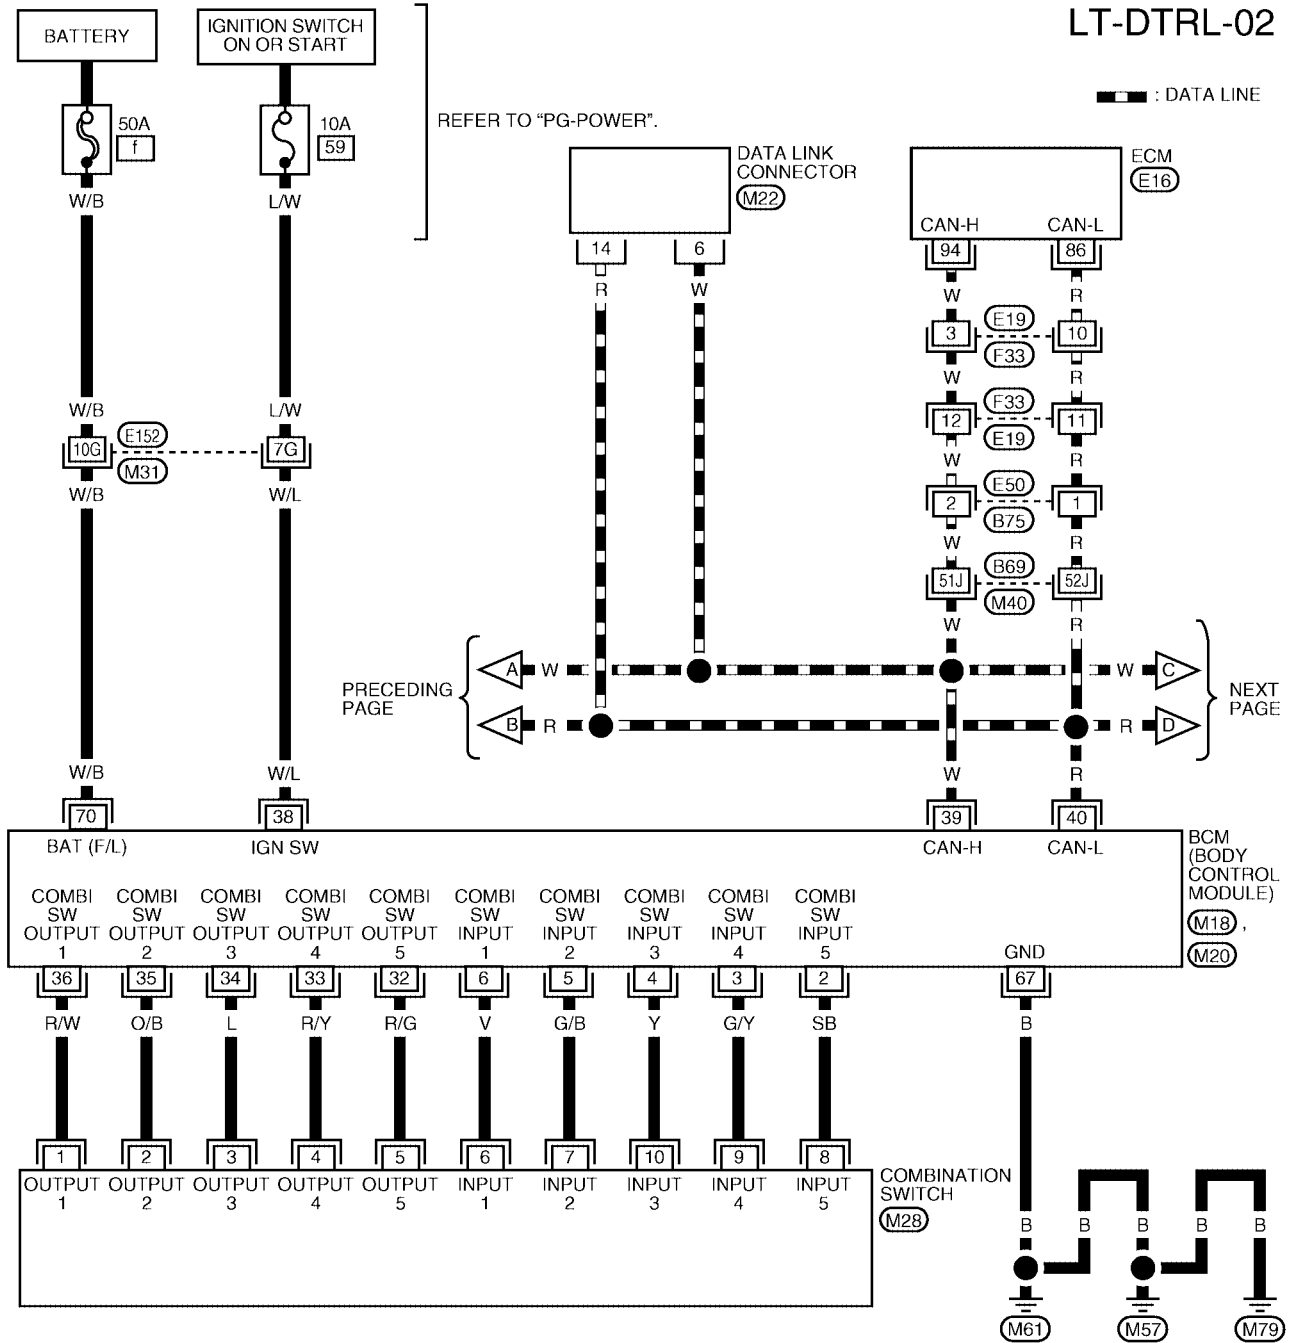


REFER TO THE FOLLOWING.
 (E16) - ELECTRICAL UNITS
 (M31), (M40) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA1155E

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

LT-DTRL-03

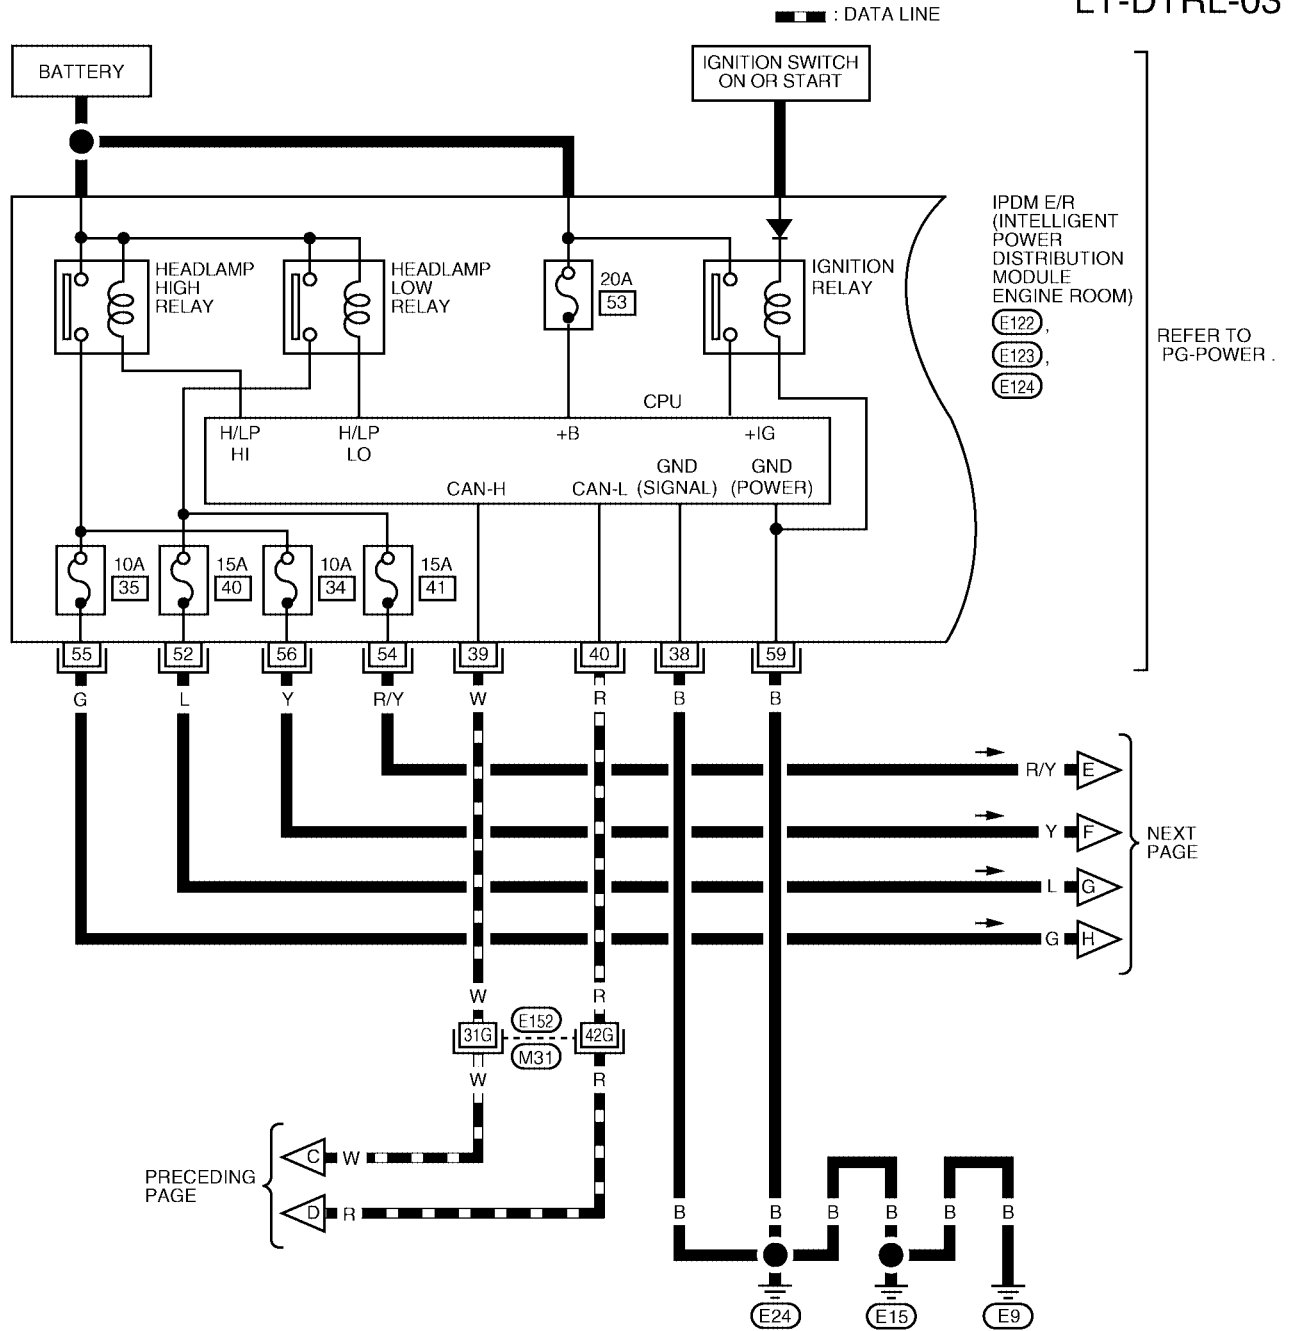




REFER TO THE FOLLOWING.
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA1402E

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

LT-DTRL-04

A
B
C
D
E
F
G
H
I
J
LT
L
M



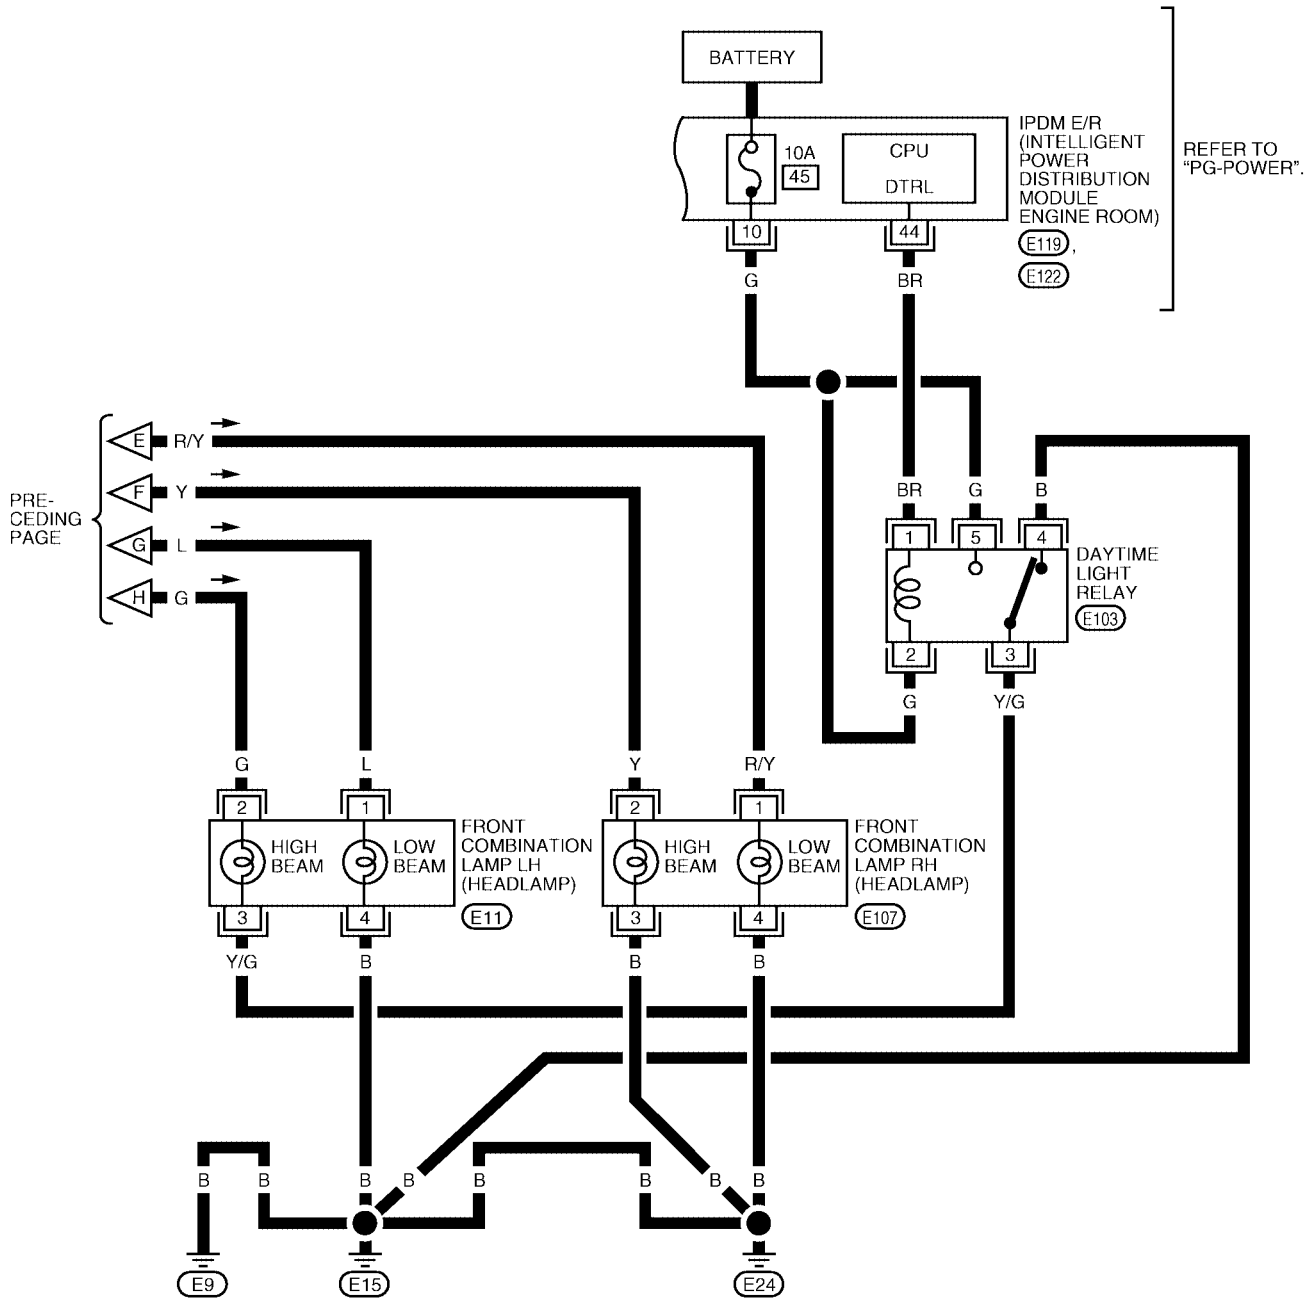

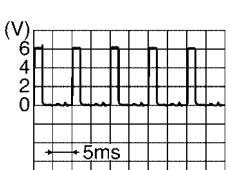




WKWA1476E

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

Terminals and Reference Values for BCM

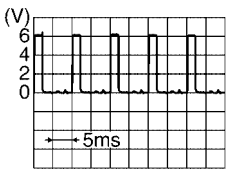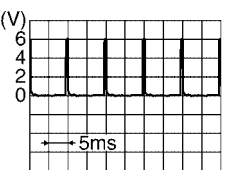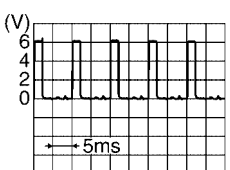EKS0073U

Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
2	SB	Combination switch input 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>
3	G/Y	Combination switch input 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>
4	Y	Combination switch input 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>
5	G/B	Combination switch input 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>
6	V	Combination switch input 1			
32	R/G	Combination switch output 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>
33	R/Y	Combination switch output 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>
34	L	Combination switch output 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
35	O/B	Combination switch output 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	
36	R/W	Combination switch output 1			
38	W/L	Ignition switch (ON)	ON	—	Battery voltage
39	W	CAN-H	—	—	—
40	R	CAN-L	—	—	—
67	B	Ground	ON	—	0V
70	W/B	Battery power supply (fusible link)	OFF	—	Battery voltage

How to Proceed With Trouble Diagnosis

EKS0073V

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-33, "System Description"](#).
3. Perform the Preliminary Check. Refer to [LT-41, "Preliminary Check"](#).
4. Check symptom and repair or replace the cause of malfunction.
5. Does the headlamp operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

Preliminary Check

EKS0073W

CHECK BCM CONFIGURATION

1. CHECK BCM CONFIGURATION

Confirm BCM configuration for "DTRL" is set to "WITH". Refer to [BCS-13, "READ CONFIGURATION PROCEDURE"](#).

OK or NG

OK >> Continue preliminary check. Refer to [LT-41, "INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT"](#).

NG >> Change BCM configuration for "DTRL" to "WITH". Refer to [BCS-16, "WRITE CONFIGURATION PROCEDURE"](#).

INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES AND FUSIBLE LINK

Check for blown fuses or fusible link.

Unit	Power source	Fuse No.
BCM	Battery	f
	Ignition switch ON or START position	59
Daytime light relay	Battery	45

Refer to [LT-36, "Wiring Diagram — DTRL —"](#).

OK or NG

OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of blown fuse before installing new fuse. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#).

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

2. CHECK POWER SUPPLY CIRCUIT


1. Disconnect BCM connectors.
2. Check voltage between BCM harness connector and ground.

Terminals		Ignition switch position		
(+)		(-)	OFF	ON
Connector	Terminal (Wire color)		0V	Battery voltage
M18	38 (W/L)	Ground	Battery voltage	Battery voltage
M20	70 (W/B)		Battery voltage	Battery voltage

OK or NG

OK >> GO TO 3.

NG >> Check harness for open or short between BCM and fuse.

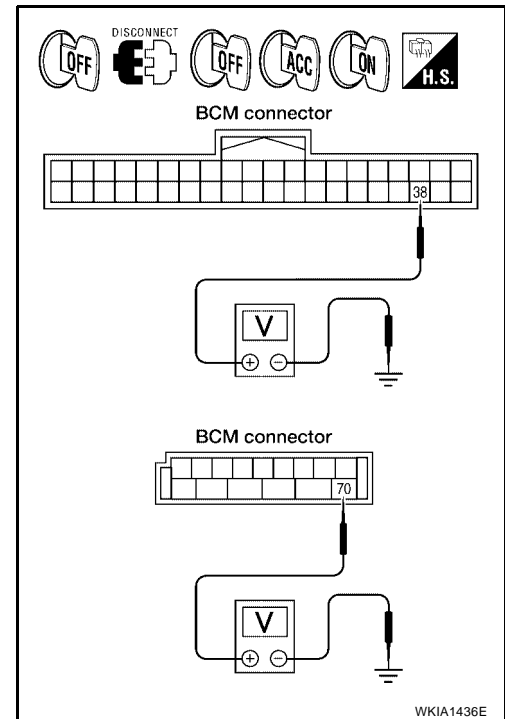

WKIA1436E

3. CHECK GROUND CIRCUIT


Check continuity between BCM harness connector and ground.

Terminals			Continuity
Connector	Terminal (Wire color)		
M20	67 (B)	Ground	Yes

OK or NG

OK >> Inspection End.

NG >> Check ground circuit harness.

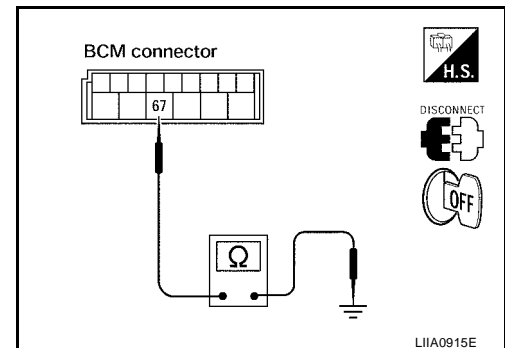

LIA0915E

INSPECTION PARKING BRAKE SWITCH CIRCUIT

1. CHECK BRAKE INDICATOR

1. Turn ignition switch ON.
2. Apply parking brake.
3. Release parking brake.

Brake indicator in combination meter should illuminate when parking brake is applied and turn OFF when released.

OK or NG

OK >> Inspection End.

NG >> GO TO 2.

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -


2. CHECK PARKING BRAKE SWITCH SIGNAL

1. Disconnect parking brake switch connector.
2. Turn ignition switch ON.
3. Check voltage between parking brake switch harness connector M11 terminal + (G) and ground.

+ (G) - Ground : Battery voltage should exist.

OK or NG

- OK >> Replace parking brake switch.
NG >> GO TO 3.

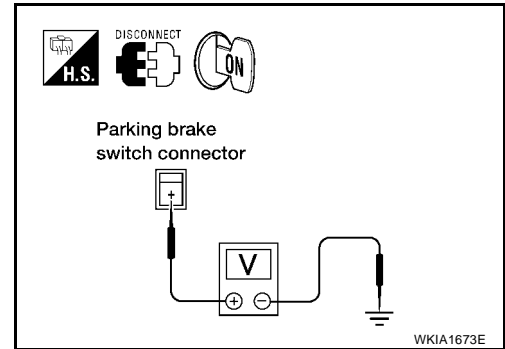


3. CHECK PARKING BRAKE SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector.
3. Check continuity between combination meter harness connector M24 terminal 23 (G) and parking brake switch harness connector M11 terminal + (G).

+ (G) - 23 (G) : Continuity should exist.

OK or NG

- OK >> Replace combination meter. Refer to [IP-13, "COMBINATION METER"](#).
- NG >> Repair harness or connector.

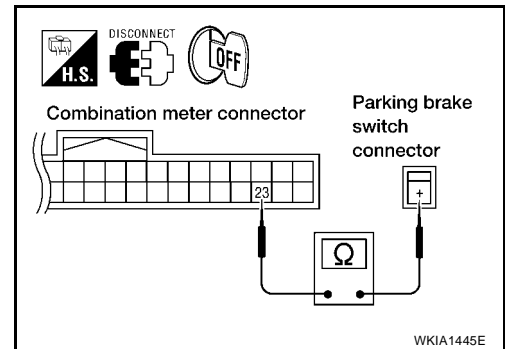

CONSULT-II Functions

Refer to [LT-17, "CONSULT-II Function \(BCM\)"](#) in HEADLAMP (FOR USA).

Refer to [LT-20, "CONSULT-II Function \(IPDM E/R\)"](#) in HEADLAMP (FOR USA).

Daytime Light Control Does Not Operate Properly (Normal Headlamps Operate Properly)


1. CHECK DAYTIME LIGHT RELAY POWER SUPPLY CIRCUIT

1. Remove daytime light relay.
2. Check voltage between daytime light relay harness connector E103 terminals 2 (G), 5 (G) and ground.

2 (G), 5 (G) - Ground : Battery voltage should exist.

OK or NG

- OK >> GO TO 2.
NG >> Repair harness or connector.

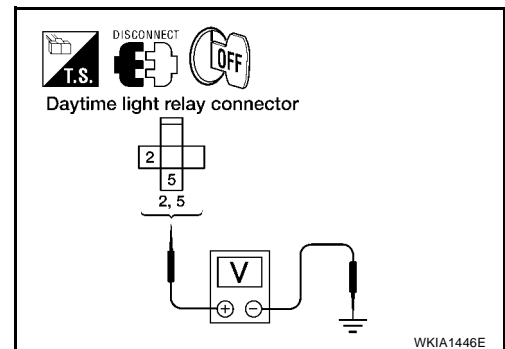

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -


2. CHECK DAYTIME LIGHT RELAY

1. Apply battery voltage to daytime light relay terminal 2 and ground daytime light relay terminal 1.
2. Check continuity between terminals 3 and 5.

3 - 5 : Continuity should exist.

OK or NG

- OK >> GO TO 3.
 NG >> Replace daytime light relay.

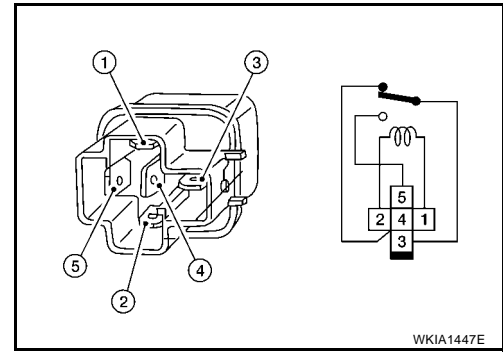


3. CHECK DAYTIME LIGHT RELAY CIRCUIT

1. Disconnect front combination lamp LH connector.
2. Check continuity between daytime light relay connector E103 terminal 3 (Y/G) and front combination lamp LH harness connector E11 terminal 3 (Y/G).

3 (Y/G) - 3 (Y/G) : Continuity should exist.

OK or NG

- OK >> GO TO 4.
 NG >> Repair harness or connector.

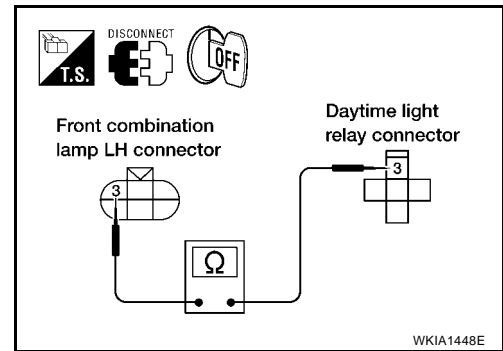


4. CHECK INPUT SIGNAL

1. Connect daytime light relay and front combination lamp LH connector.
2. Start engine and release parking brake. Headlamp switch OFF.
3. Select "IPDM E/R" on CONSULT-II. With data monitor, make sure "DTRL REQ" turns ON-OFF linked with operation of parking brake switch.

Parking brake ON : DTRL REQ ON
Parking brake OFF : DTRL REQ OFF

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-28, "Removal and Installation of IPDM E/R"](#) .
 NG >> GO TO 5.

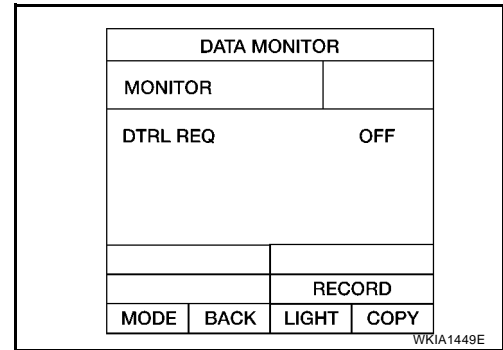


5. CHECKING CAN COMMUNICATIONS

Select "BCM" on CONSULT-II and perform self-diagnosis for BCM.

Displayed self-diagnosis results

NO DTC>>Replace BCM. Refer to [BCS-25, "Removal and Installation of BCM"](#) .

CAN COMM CIRCUIT>> Check BCM CAN communication system. Refer to [BCS-13, "CAN Communication Inspection Using CONSULT-II \(Self-Diagnosis\)"](#) .

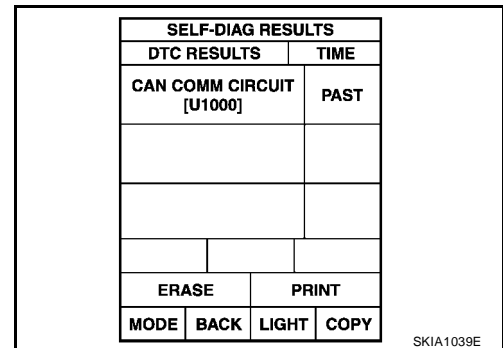

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

Aiming Adjustment

EKS0073Z

Refer to [LT-29, "Aiming Adjustment"](#) .

A

Bulb Replacement

EKS00740

Refer to [LT-31, "Disassembly and Assembly"](#) .

B

Removal and Installation

EKS00741

Refer to [LT-31, "Removal and Installation"](#) .

C

Disassembly and Assembly

EKS00742

Refer to [LT-31, "Disassembly and Assembly"](#) .

D

E

F

G

H

I

J

LT

L

M


AUTO LIGHT SYSTEM

AUTO LIGHT SYSTEM

PF:28491

Component Parts and Harness Connector Location

EKS00743

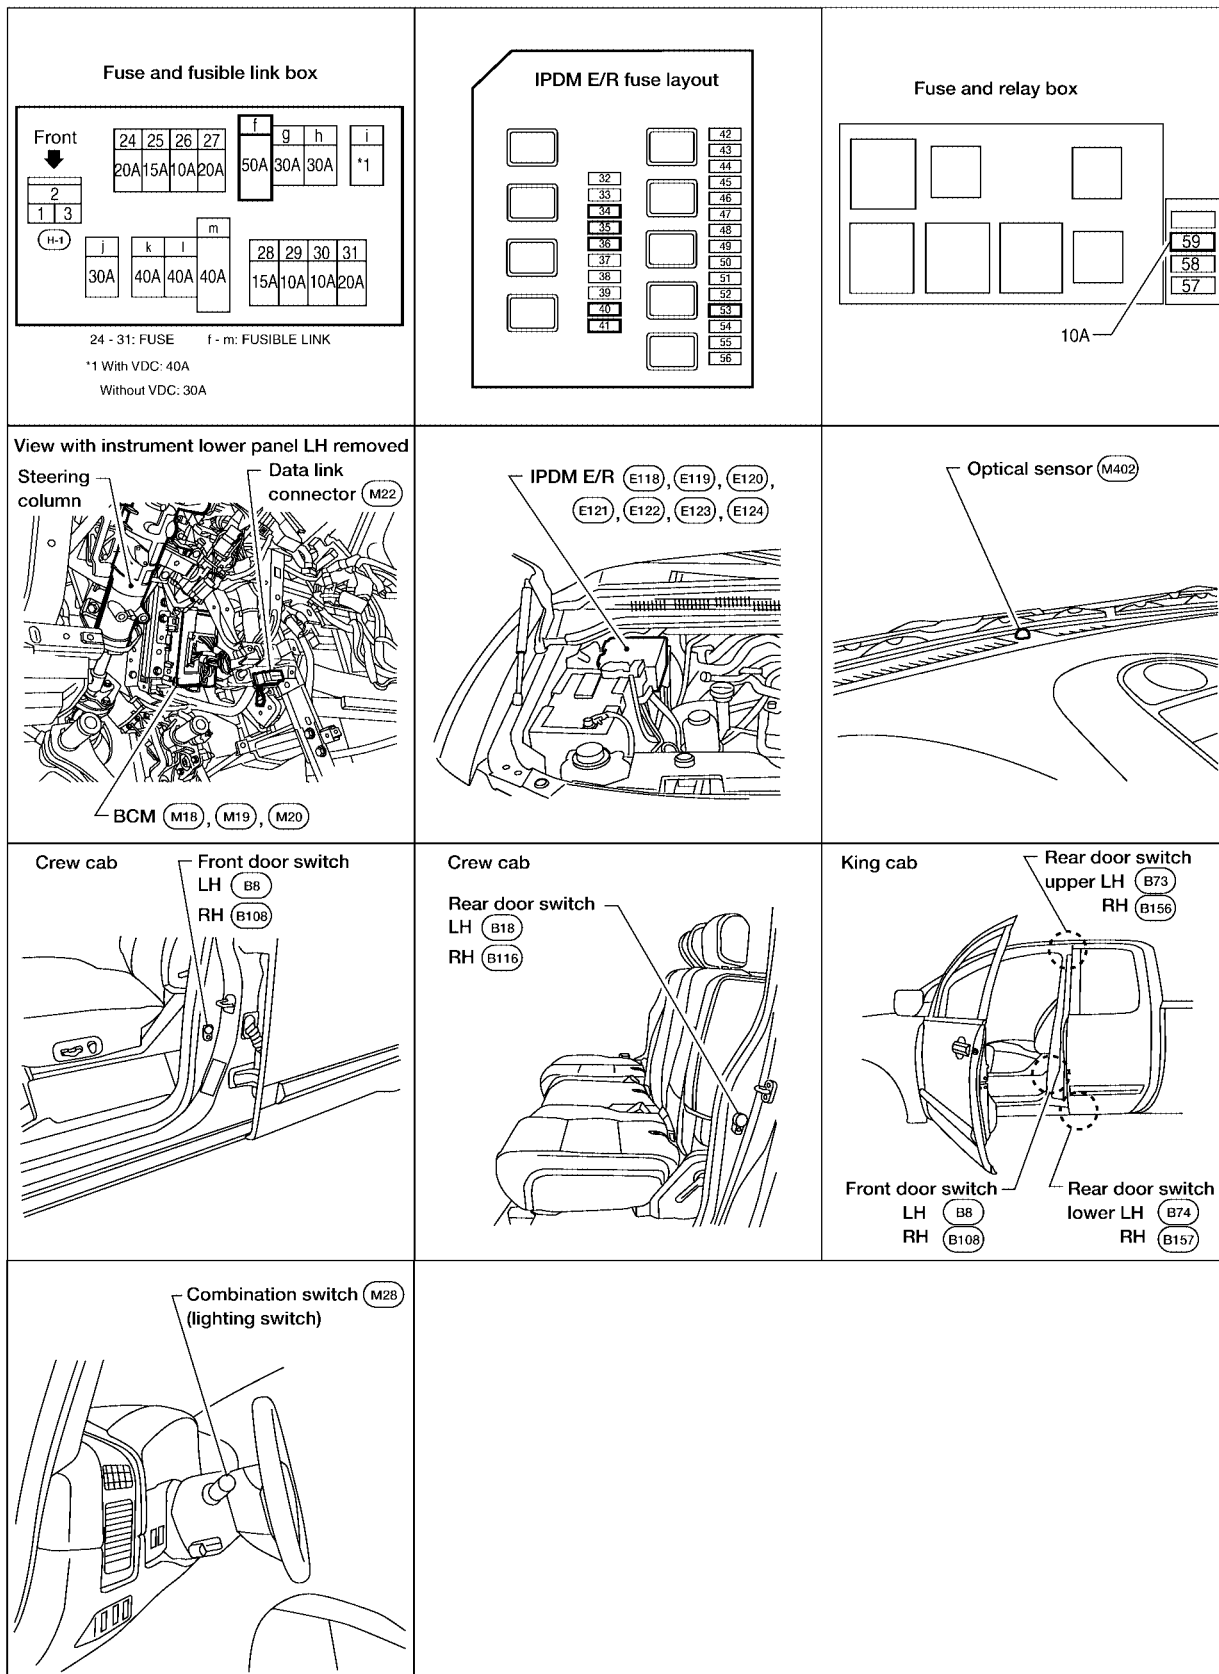

WKIA3581E

AUTO LIGHT SYSTEM

EKS00744

System Description

Automatically turns on/off the parking lamps and the headlamps in accordance with ambient light. Timing for when the lamps turn on/off can be selected using four modes.

OUTLINE

The auto light control system uses an optical sensor that detects outside brightness.

When the lighting switch is in "AUTO" position, it automatically turns on/off the parking lamps and the headlamps in accordance with the ambient light. Sensitivity can be adjusted in four steps. For the details of the setting, refer to [LT-54, "SETTING CHANGE FUNCTIONS"](#).

Optical sensor ground is supplied

- to optical sensor terminal 3
- through BCM (body control module) terminal 18.

When ignition switch is turned to "ON" position and when outside brightness is darker than prescribed level, input is supplied

- to BCM terminal 58
- through optical sensor terminal 4.

The headlamps will then illuminate. For a description of headlamp operation, refer to [LT-5, "System Description"](#).

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#).

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the AUTO position, and the ignition switch is turned from ON or ACC to OFF, and one of the front doors is opened, the battery saver control feature is activated.

Under this condition, the headlamps remain illuminated for 5 minutes, then the headlamps are turned off.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

DELAY TIMER FUNCTION

When the ignition switch is ON and auto light switch is ON, the BCM turns on/off the headlamps. In delay timer function, ignition is OFF, auto light sensor power source is OFF and the headlamps are not turned on/off by the BCM. On condition that:

- when the state of ignition switch ON or ACC is ON and output judgment by auto light function is headlamp ON changes to ignition switch and ACC are OFF and any door switch is ON, output judgment by BCM should be headlamp ON for 5 minutes by timer. After time out, output judgment by BCM should be headlamp OFF.
- when the state of any door switch is turned to ON from OFF while 45 second or 5 minute timer is counting, timer stops, and restarts counting for 5 minutes, then BCM judges output as headlamp ON. After time out, BCM judges output as headlamp OFF.
- when the state of front door switch (driver side), front door switch (passenger side), rear door switch LH, rear door switch RH or back door latch (door ajar switch) is ON turns to all door switches are OFF while 45 second or 5 minute timer is counting, timer stops, and restarts counting for 45 seconds, then BCM judges output as headlamp ON. After timer out, BCM judges output as headlamp OFF.
- when the state is ignition switch ON or ACC is ON or auto light switch OFF while timer is counting, timer stops counting and BCM turns on/off lamps according to headlamp function, front fog lamp function, auto light function and headlamp battery save function.

Delay timer control mode can be changed by the function setting of CONSULT-II.

CAN Communication System Description

EKS00745

Refer to [LAN-8, "CAN COMMUNICATION"](#).

Major Components and Functions


EKS00746

Components	Functions
BCM	● Turns on/off circuits of tail light and headlamp according to signals from light sensor, lighting switch (AUTO), front door switch LH, front door switch RH, rear door switch, and ignition switch (ON, OFF).
Optical sensor	● Converts ambient light (lux) to voltage, and sends it to BCM. (Detects lightness of 50 to 1,300 lux)

AUTO LIGHT SYSTEM

Schematic

EKS00747


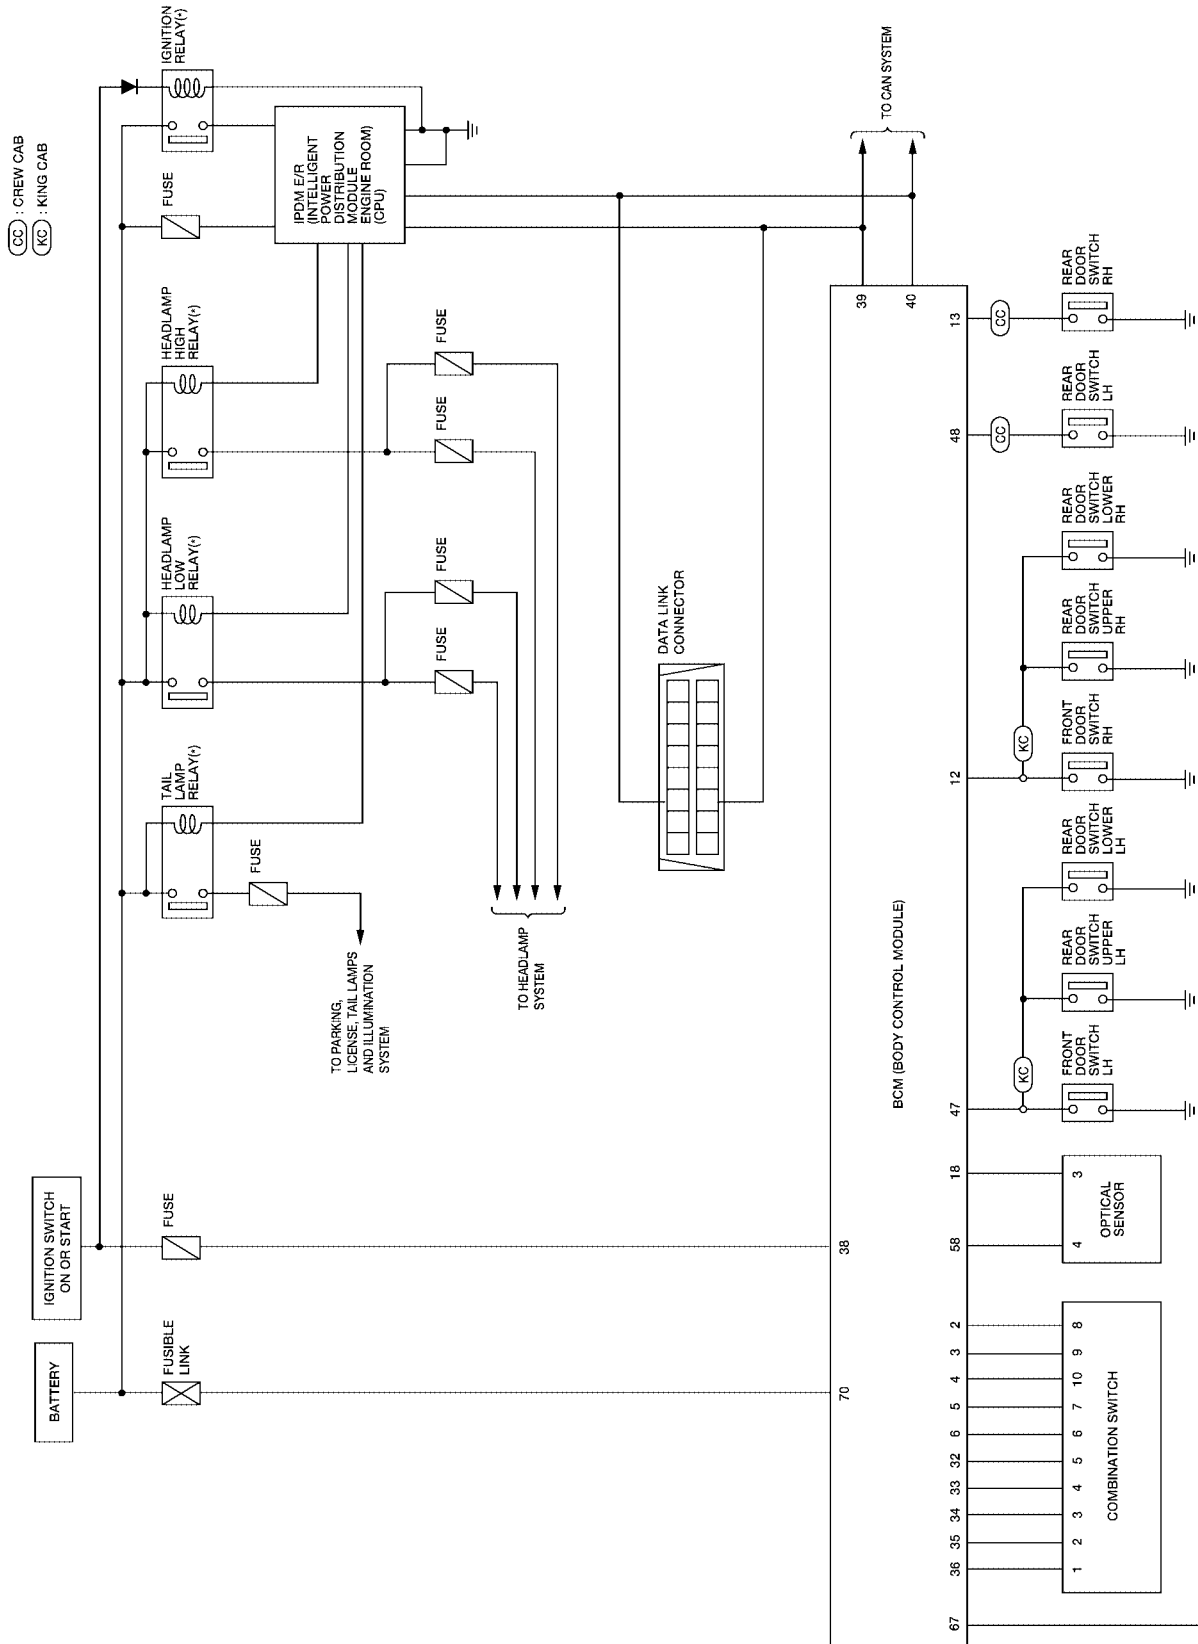


WKWA1062E

AUTO LIGHT SYSTEM

Wiring Diagram — AUTO/L —

EKS00748

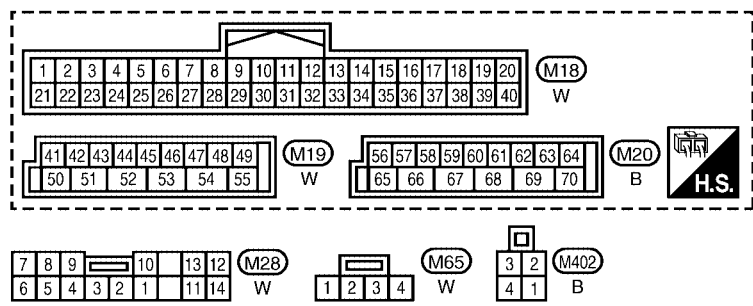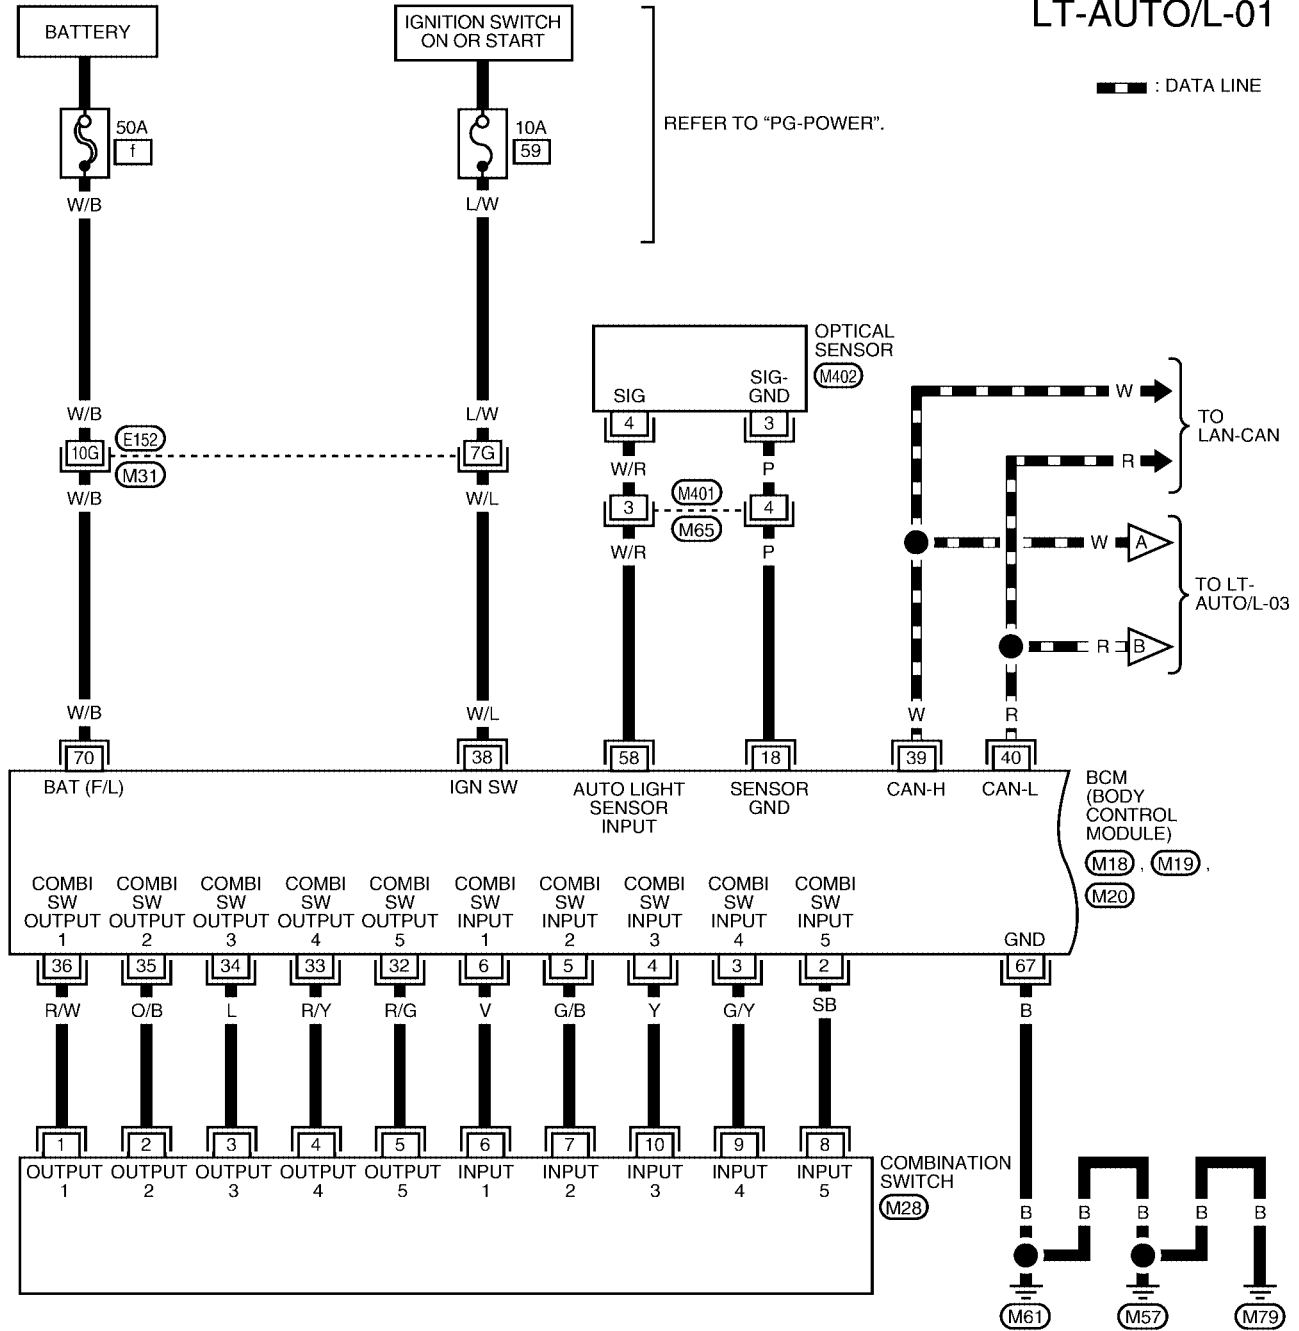



REFER TO THE FOLLOWING.
(M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA1156E

AUTO LIGHT SYSTEM

LT-AUTO/L-02

CC : CREW CAB
KC : KING CAB

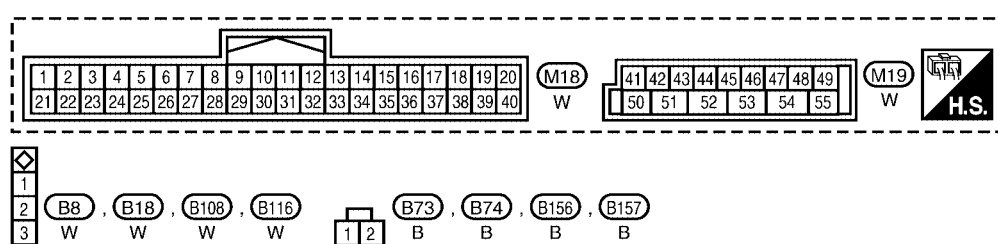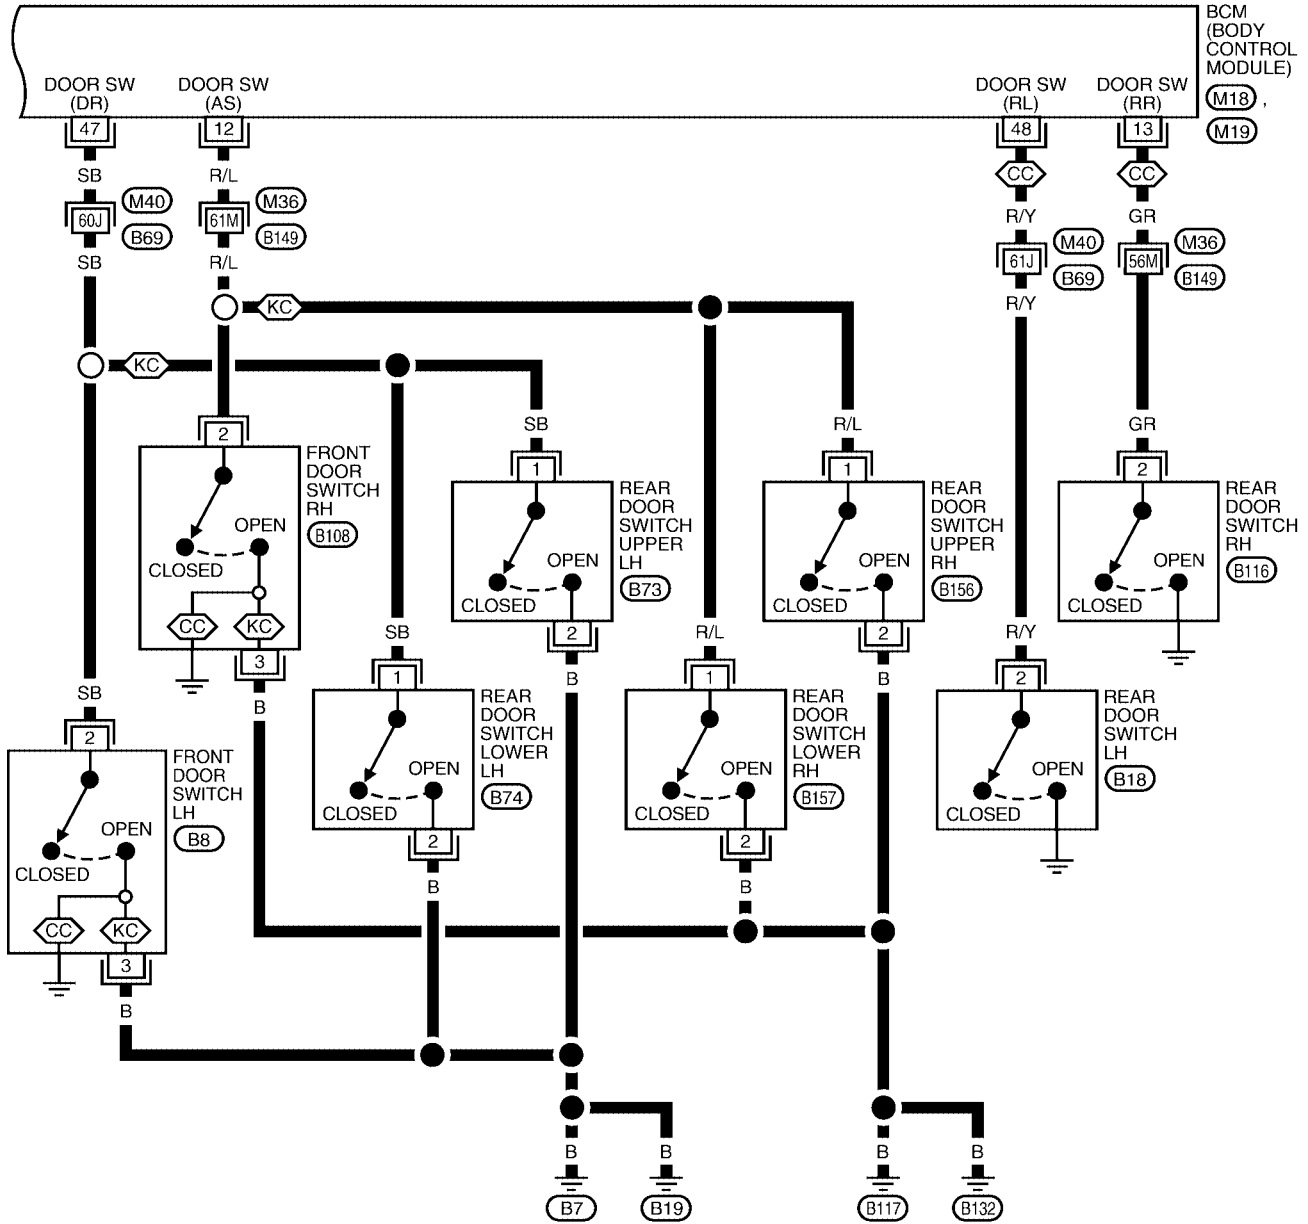


REFER TO THE FOLLOWING.
M36 , M40 - SUPER
 MULTIPLE JUNCTION (SMJ)



LKWA0282E

AUTO LIGHT SYSTEM

LT-AUTO/L-03

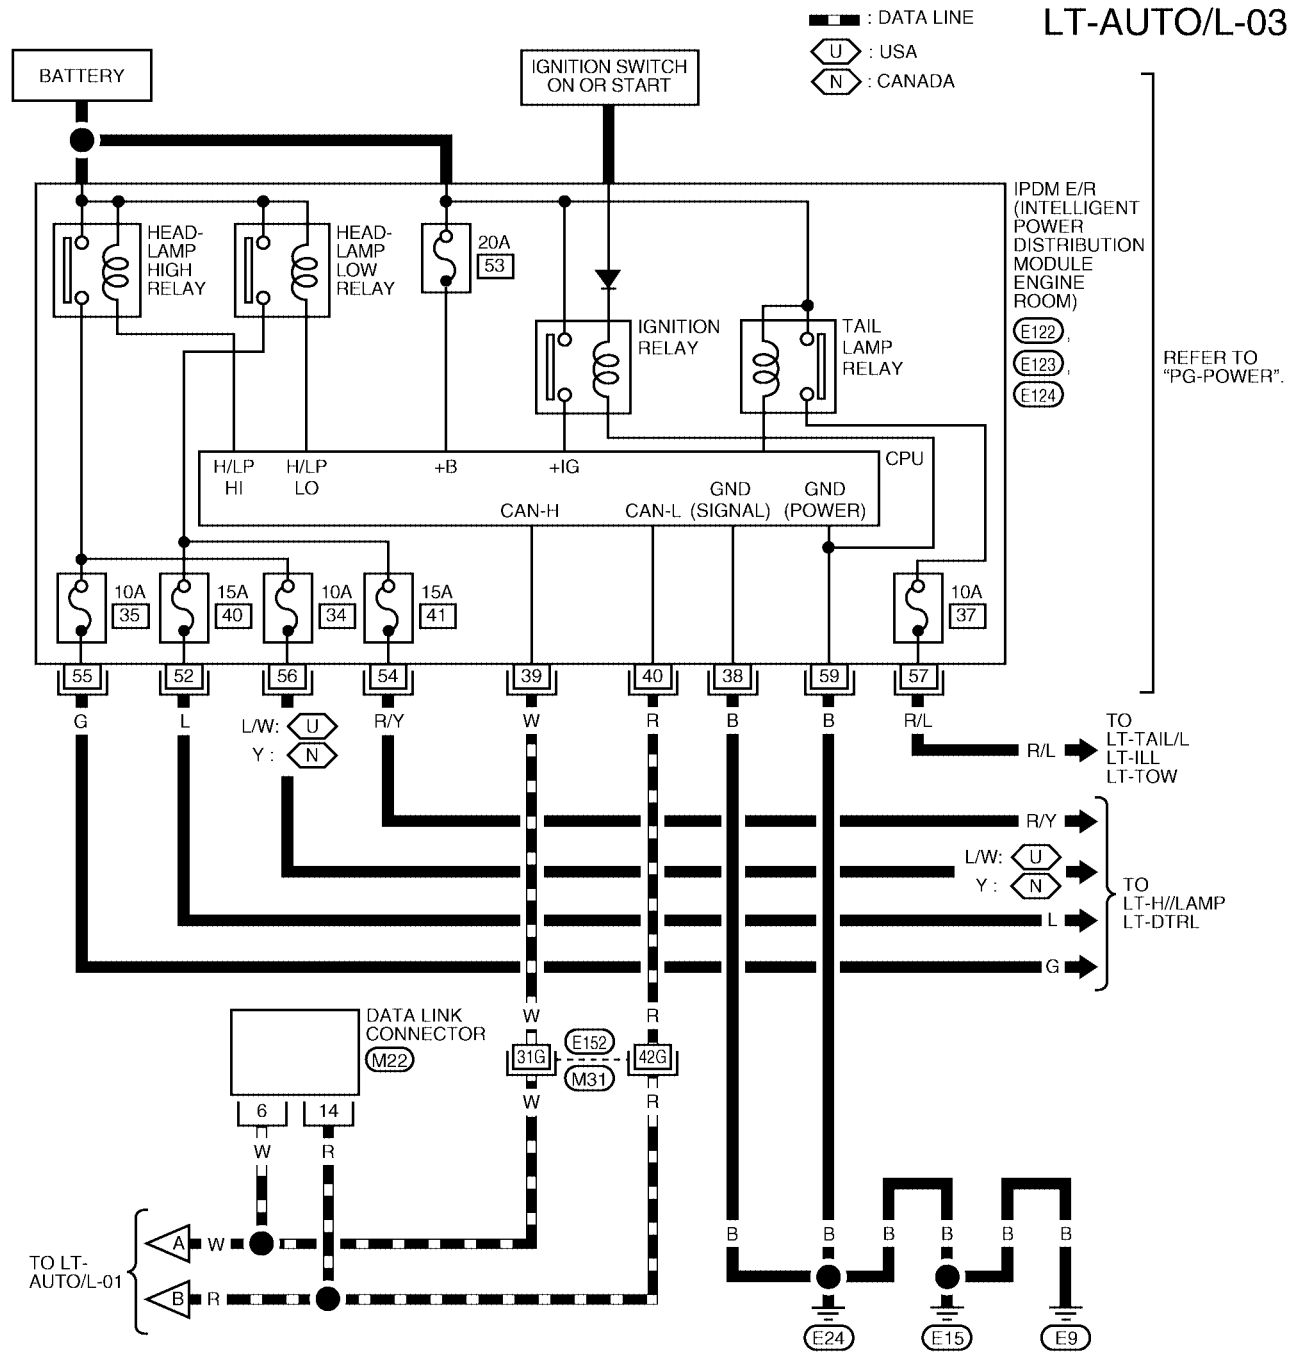

A
B
C
D
E
F
G
H
I
J
LT
L
M









REFER TO THE FOLLOWING.
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA1508E


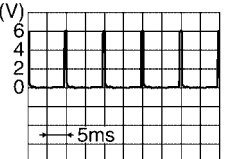
AUTO LIGHT SYSTEM

Terminals and Reference Values for BCM

EKS00749

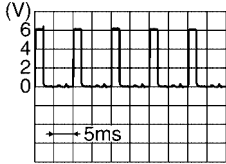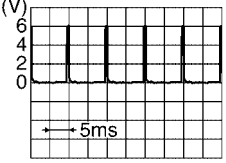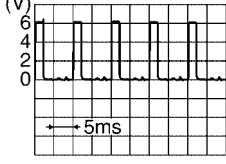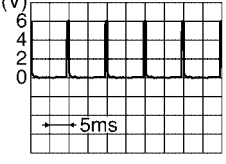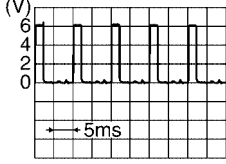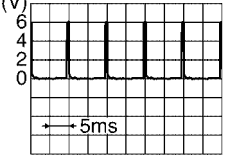Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)				
			Ignition switch	Operation or condition					
2	SB	Combination switch input 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>				
3	G/Y	Combination switch input 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>				
4	Y	Combination switch input 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>				
5	G/B	Combination switch input 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>				
6	V	Combination switch input 1							
12 (crew cab)	R/L	Front door switch RH signal	OFF	Front door switch RH	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td>ON (open)</td> <td>0V</td> </tr> <tr> <td>OFF (closed)</td> <td>Battery voltage</td> </tr> </table>	ON (open)	0V	OFF (closed)	Battery voltage
ON (open)	0V								
OFF (closed)	Battery voltage								
12 (king cab)	R/L	Door switch RH signal	OFF	Door switch RH	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td>ON (open)</td> <td>0V</td> </tr> <tr> <td>OFF (closed)</td> <td>Battery voltage</td> </tr> </table>	ON (open)	0V	OFF (closed)	Battery voltage
ON (open)	0V								
OFF (closed)	Battery voltage								
13 (crew cab)	GR	Rear door switch RH signal	OFF	Rear door switch RH	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td>ON (open)</td> <td>0V</td> </tr> <tr> <td>OFF (closed)</td> <td>Battery voltage</td> </tr> </table>	ON (open)	0V	OFF (closed)	Battery voltage
ON (open)	0V								
OFF (closed)	Battery voltage								
18	P	Sensor ground	ON	—	0V				
32	R/G	Combination switch output 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>				
33	R/Y	Combination switch output 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>				

AUTO LIGHT SYSTEM

Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)	
			Ignition switch	Operation or condition		
34	L	Combination switch output 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E	
35	O/B	Combination switch output 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E	
36	R/W	Combination switch output 1				
38	W/L	Ignition switch (ON)	ON	—	Battery voltage	
39	W	CAN-H	—	—	—	
40	R	CAN-L	—	—	—	
47 (crew cab)	SB	Front door switch LH signal	OFF	Front door switch LH	ON (open)	0V
					OFF (closed)	Battery voltage
47 (king cab)	SB	Door switch LH signal	OFF	Door switch LH	ON (open)	0V
					OFF (closed)	Battery voltage
48 (crew cab)	R/Y	Rear door switch LH signal	OFF	Rear door switch LH	ON (open)	0V
					OFF (closed)	Battery voltage
58	W/R	Optical sensor signal	ON	When optical sensor is illuminated	Less than 3.5V ^{Note}	
				When optical sensor is not illuminated	Greater than 3.5V	
67	B	Ground	ON	—	0V	
70	W/B	Battery power supply	OFF	—	Battery voltage	

NOTE:

Optical sensor must be completely subjected to work lamp light. If the optical sensor is insufficiently illuminated, the measured value may not satisfy standard.

Terminals and Reference Values for IPDM E/R

EKS0074A

Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)	
			Ignition switch	Operation or condition		
38	B	Ground	ON	—	0V	
39	W	CAN-H	—	—	—	
40	R	CAN-L	—	—	—	
52	L	Headlamp low (LH)	ON	Lighting switch 2ND position	OFF	0V
					ON	Battery voltage
54	R/Y	Headlamp low (RH)	ON	Lighting switch 2ND position	OFF	0V
					ON	Battery voltage
55	G	Headlamp high (LH)	ON	Lighting switch HIGH or PASS position	OFF	0V
					ON	Battery voltage

AUTO LIGHT SYSTEM

Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
56	L/W (USA) Y (Canada)	Headlamp high (RH)	ON	Lighting switch HIGH or PASS position	OFF 0V
					ON Battery voltage
57	R/L	Parking, license, and tail lamp	ON	Lighting switch 1ST position	OFF 0V
					ON Battery voltage
59	B	Ground	ON	—	0V

How to Proceed With Trouble Diagnosis

EKS0074B

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-47, "System Description"](#).
3. Carry out the Preliminary Check. Refer to [LT-54, "Preliminary Check"](#).
4. Check symptom and repair or replace the cause of malfunction. Refer to [LT-61, "Trouble Diagnosis Chart by Symptom"](#).
5. Does the auto light system operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

Preliminary Check

EKS0074C

CHECK BCM CONFIGURATION

1. CHECK BCM CONFIGURATION

Confirm BCM configuration for "AUTO LIGHT" is set to "WITH". Refer to [BCS-13, "READ CONFIGURATION PROCEDURE"](#).

OK or NG

- OK >> Continue preliminary check. Refer to [LT-54, "CHECK POWER SUPPLY AND GROUND CIRCUIT"](#).
- NG >> Change BCM configuration for "AUTO LIGHT" to "WITH". Refer to [BCS-16, "WRITE CONFIGURATION PROCEDURE"](#).

SETTING CHANGE FUNCTIONS

- Sensitivity of auto light system can be adjusted using CONSULT-II. Refer to [LT-57, "WORK SUPPORT"](#).

CHECK POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES OR FUSIBLE LINK

Check for blown fuses or fusible link.

Unit	Power source	Fuse No.
BCM	Battery	f
	Ignition switch ON or START position	59
IPDM E/R	Battery	34
		35
		40
		41
		53

Refer to [LT-49, "Wiring Diagram — AUTO/L —"](#).

OK or NG

- OK >> GO TO 2.
- NG >> If fuse is blown, be sure to eliminate cause of blown fuse before installing new fuse. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#).

AUTO LIGHT SYSTEM


2. CHECK POWER SUPPLY CIRCUIT

1. Disconnect BCM connectors.
2. Check voltage between BCM harness connector and ground.

Terminals		(-)	Ignition switch position		
(+)			OFF	ACC	ON
Connector	Terminal (Wire color)				
M18	38 (W/L)	Ground	0V	0V	Battery voltage
M20	70 (W/B)		Battery voltage	Battery voltage	Battery voltage

OK or NG

- OK >> GO TO 3.
 NG >> Check harness for open between BCM and fuse.

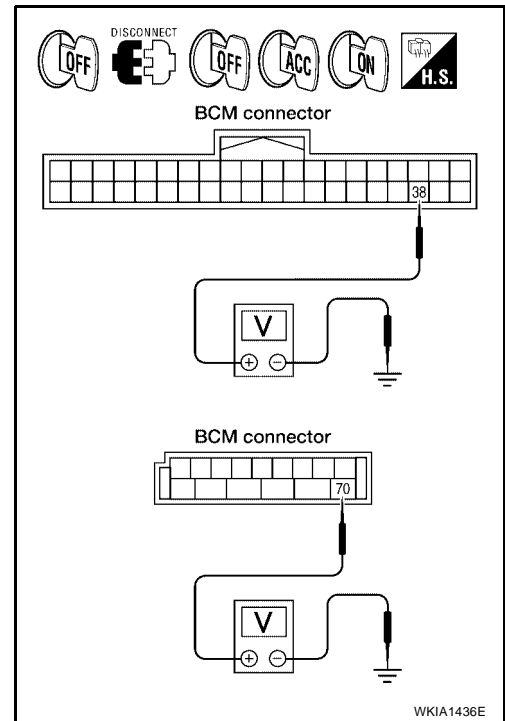


3. CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

Terminals		Continuity
Connector	Terminal (Wire color)	
M20	67 (B)	Ground Yes

OK or NG

- OK >> Inspection End.
 NG >> Check ground circuit harness.

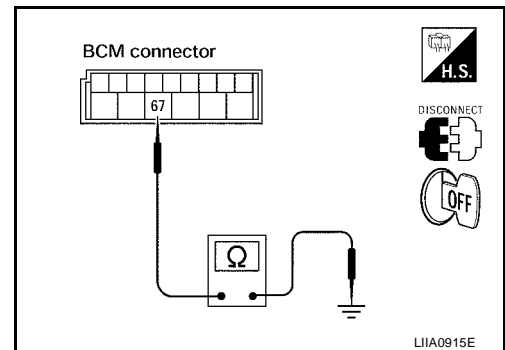

A
B
C
D
E
F
G
H
I
J
LT
L
M

AUTO LIGHT SYSTEM

EKS0074D

CONSULT-II Function (BCM)

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

CONSULT-II OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

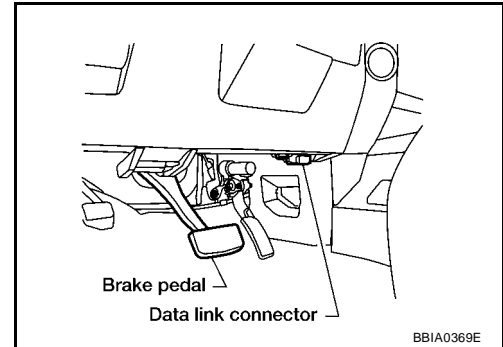

2. Touch "START (NISSAN BASED VHCL)".

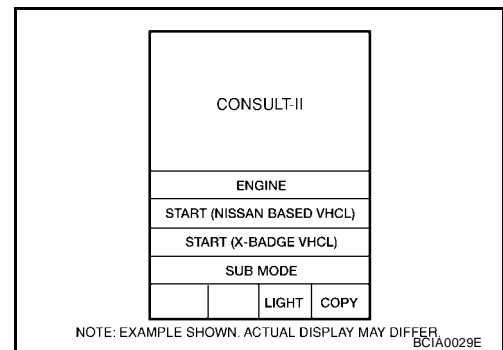


3. Touch "BCM" on "SELECT SYSTEM" screen.
If "BCM" is not indicated, go to [GI-38, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

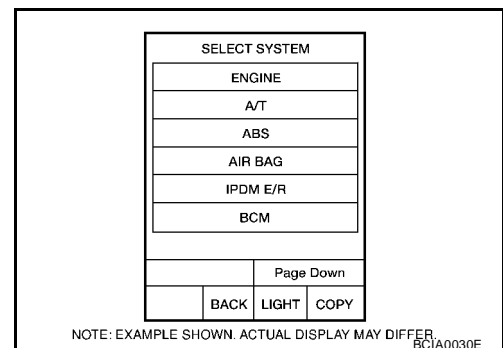

AUTO LIGHT SYSTEM

4. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.

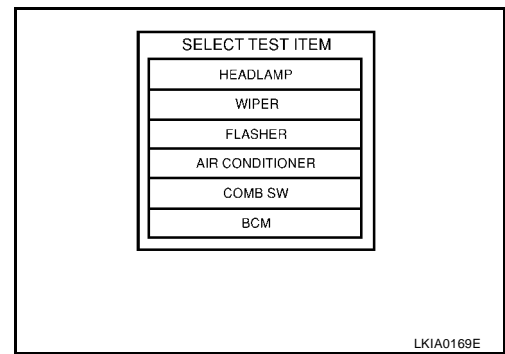

WORK SUPPORT

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "WORK SUPPORT" on "SELECT DIAG MODE" screen.
3. Touch "CUSTOM A/LIGHT SETTING" or "ILL DELAY SET" on "SELECT WORK ITEM" screen.
4. Touch "START".
5. Touch "MODE 1-4" of setting to be changed (CUSTOM A/LIGHT SETTING). Touch "MODE 1-8" of setting to be changed (ILL DELAY SET).
6. Touch "CHANGE SETT".
7. The setting will be changed and "CUSTOMIZING COMPLETED" will be displayed.
8. Touch "END".

Work Support Setting Item

- Sensitivity of auto light can be selected and set from four modes.

Work item	Description
CUSTOM A/LIGHT SETTING	Auto light sensitivity can be changed in this mode. Sensitivity can be adjusted in four modes. ● MODE 1 (Normal-default)/ MODE 2 (Desensitized)/MODE 3 (Sensitive)/MODE4 (Insensitive)
ILL DELAY SET	Auto light delay off timer period can be changed in this mode. Selects auto light delay off timer period among eight modes. ● MODE 1 (45 sec.)/MODE 2 (OFF)/MODE 3 (30 sec.)/MODE 4 (60 sec.)/MODE 5 (90 sec.)/MODE 6 (120 sec.)/MODE 7 (150 sec.)/MODE 8 (180 sec.)

DATA MONITOR

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on the "SELECT MONITOR ITEM" screen.

All signals	Monitors all the signals.
Selection from menu	Selects and monitors individual signal.

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch individual items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

Display Item List

Monitor item	Contents
IGN ON SW "ON/OFF"	Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
ACC ON SW "ON/OFF"	Displays "ACC (ON)/OFF, Ignition OFF (OFF)" status judged from ignition switch signal.
HI BEAM SW "ON/OFF"	Displays status (high beam switch: ON/Others: OFF) of high beam switch judged from lighting switch signal.

AUTO LIGHT SYSTEM

Monitor item	Contents
HEAD LAMP SW 1 "ON/OFF"	Displays status (headlamp switch 1: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
HEAD LAMP SW 2 "ON/OFF"	Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
LIGHT SW 1ST "ON/OFF"	Displays status (lighting switch 1st position: ON/Others: OFF) of lighting switch judged from lighting switch signal.
AUTO LIGHT SW "ON/OFF"	Displays status of the lighting switch as judged from the lighting switch signal. (AUTO position: ON/Other than AUTO position: OFF)
PASSING SW "ON/OFF"	Displays status (flash-to-pass switch: ON/Others: OFF) of flash-to-pass switch judged from lighting switch signal.
FR FOG SW "ON/OFF"	Displays status (front fog lamp switch: ON/Others: OFF) of front fog lamp switch judged from lighting switch signal.
DOOR SW-DR "ON/OFF"	Displays status of the driver door as judged from the driver door switch signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-AS "ON/OFF"	Displays status of the passenger door as judged from the passenger door switch signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-RR "ON/OFF"	Displays status of the rear door as judged from the rear door switch (RH) signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-RL "ON/OFF"	Displays status of the rear door as judged from the rear door switch (LH) signal. (Door is open: ON/Door is closed: OFF)
BACK DOOR SW "ON/OFF"	Displays status of the back door as judged from the back door switch signal. (Door is open: ON/Door is closed: OFF)
TURN SIGNAL R "ON/OFF"	Displays status (Turn right: ON/Others: OFF) as judged from lighting switch signal.
TURN SIGNAL L "ON/OFF"	Displays status (Turn left: ON/Others: OFF) as judged from lighting switch signal.
CARGO LAMP SW "ON/OFF"	Displays status of cargo lamp.
OPTICAL SENSOR [0 - 5V]	Displays "ambient light (close to 5V when dark/close to 0V when light)" judged from optical sensor signal.

ACTIVE TEST

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" deactivates the operation.

Display Item List

Test item	Description
TAIL LAMP	Allows tail lamp relay to operate by switching ON-OFF.
HEAD LAMP	Allows headlamp relay (HI, LO) to operate by switching ON-OFF.
FR FOG LAMP	Allows fog lamp relay to operate by switching ON-OFF.
CARGO LAMP	Allows cargo lamp to operate by switching ON-OFF.

SELF-DIAGNOSTIC RESULTS

Operation Procedure

1. Touch "BCM" on "SELECT TEST ITEM" screen.
2. Touch "SELF-DIAG RESULTS" on "SELECT DIAG MODE" screen.
3. Self-diagnostic results are displayed.

Display Item List

Monitored item	CONSULT-II display	Description
CAN communication	CAN communication [U1000]	Malfunction is detected in CAN communication.
CAN communication system	CAN communication system 1 to 6 [U1000]	Malfunction is detected in CAN system.

AUTO LIGHT SYSTEM

CONSULT-II Function (IPDM E/R)

EKS0074E

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


IPDM E/R diagnostic mode	Description
SELF-DIAG RESULTS	Displays IPDM E/R self-diagnosis results.
DATA MONITOR	Displays IPDM E/R input/output data in real time.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.

CONSULT-II OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn the ignition switch ON.

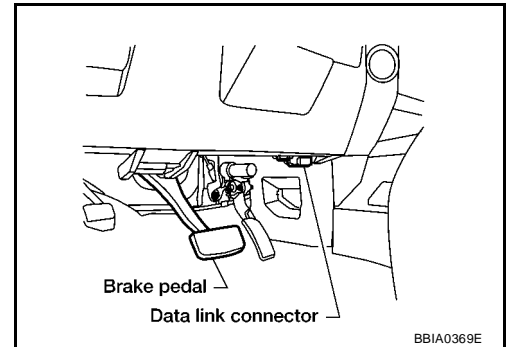

2. Touch "START (NISSAN BASED VHCL)".

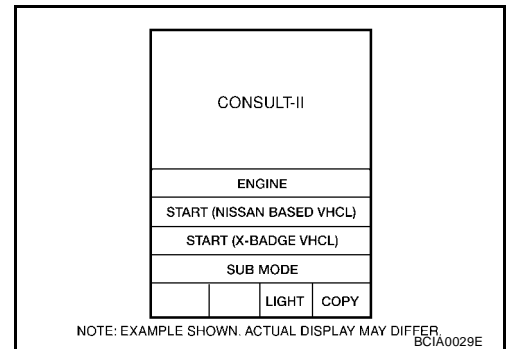


3. Touch "IPDM E/R" on "SELECT SYSTEM" screen.
If "IPDM E/R" is not displayed, refer to [GI-38, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

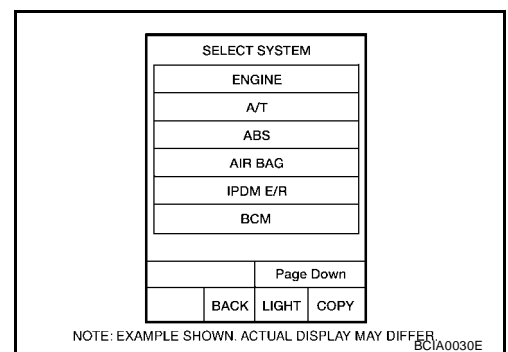

AUTO LIGHT SYSTEM

- Select the desired part to be diagnosed on the “SELECT DIAG MODE” screen.

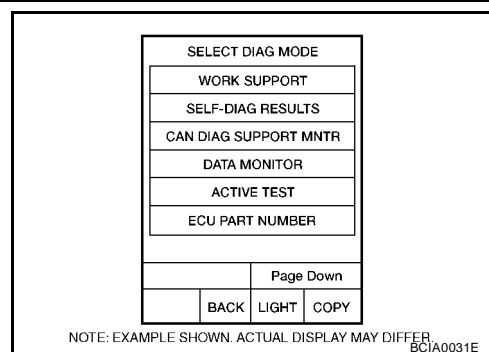

DATA MONITOR

Operation Procedure

- Touch “DATA MONITOR” on “SELECT DIAG MODE” screen.
- Touch “ALL SIGNALS”, “MAIN SIGNALS” or “SELECTION FROM MENU” on the “SELECT MONITOR ITEM” screen.

ALL SIGNALS	All items will be monitored.
MAIN SIGNALS	Monitor the predetermined item.
SELECTION FROM MENU	Select any item for monitoring.

- Touch “START”.
- Touch the required monitoring item on “SELECTION FROM MENU”. In “ALL SIGNALS”, all items are monitored. In “MAIN SIGNALS”, predetermined items are monitored.
- Touch “RECORD” while monitoring to record the status of the item being monitored. To stop recording, touch “STOP”.

All Items, Main Items, Select Item Menu

Item name	CONSULT-II screen display	Display or unit	Monitor item selection			Description
			ALL SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
Parking, license plate and tail lamps request	TAIL&CLR REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp low beam request	HL LO REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp high beam request	HL HI REQ	ON/OFF	×	×	×	Signal status input from BCM
Front fog lamps request	FR FOG REQ	ON/OFF	×	×	×	Signal status input from BCM

NOTE:

Perform monitoring of IPDM E/R data with the ignition switch ON. When the ignition switch is at ACC, the display may not be correct.

ACTIVE TEST

Operation Procedure

- Touch “ACTIVE TEST” on “SELECT DIAG MODE” screen.
- Touch item to be tested, and check operation.
- Touch “START”.
- Touch “STOP” while testing to stop the operation.

Test item	CONSULT-II screen display	Description
Tail lamp relay output	TAIL LAMP	Allows tail lamp relay to operate by switching operation ON-OFF at your option.

AUTO LIGHT SYSTEM

Test item	CONSULT-II screen display	Description
Headlamp relay (HI, LO) output	LAMPS	Allows headlamp relay (HI, LO) to operate by switching operation (OFF, HI, LO) at your option (Headlamp high beam repeats ON-OFF every 1 second).
Front fog lamp relay output		Allows fog lamp relay to operate by switching operation ON-OFF at your option.

Trouble Diagnosis Chart by Symptom

EKS0074F

Trouble phenomenon	Malfunction system and reference
<ul style="list-style-type: none"> ● Parking lamps and headlamps will not illuminate when outside of the vehicle becomes dark. (Lighting switch 1st position and 2nd position operate normally.) ● Parking lamps and headlamp will not go out when outside of the vehicle becomes light. (Lighting switch 1st position and 2nd position operate normally.) ● Headlamps go out when outside of the vehicle becomes light, but parking lamps stay on. 	<ul style="list-style-type: none"> ● Refer to LT-57, "WORK SUPPORT" . ● Refer to LT-61, "Lighting Switch Inspection" . ● Refer to LT-62, "Optical Sensor System Inspection" . <p>If above systems are normal, replace BCM. Refer to BCS-25, "Removal and Installation of BCM" .</p>
Parking lamps illuminate when outside of the vehicle becomes dark, but headlamps stay off. (Lighting switch 1st position and 2nd position operate normally.)	<ul style="list-style-type: none"> ● Refer to LT-57, "WORK SUPPORT" . ● Refer to LT-62, "Optical Sensor System Inspection" . <p>If above systems are normal, replace BCM. Refer to BCS-25, "Removal and Installation of BCM" .</p>
Auto light adjustment system will not operate. (Lighting switch AUTO, 1st position and 2nd position operate normally.)	<ul style="list-style-type: none"> ● Refer to LT-62, "Optical Sensor System Inspection" . <p>If above system is normal, replace BCM. Refer to BCS-25, "Removal and Installation of BCM" .</p>
Auto light adjustment system will not operate.	<ul style="list-style-type: none"> ● CAN communication line to BCM inspection. Refer to BCS-13, "CAN Communication Inspection Using CONSULT-II (Self-Diagnosis)" .
Shut off delay feature will not operate.	<ul style="list-style-type: none"> ● CAN communication line inspection between BCM and combination meter. Refer to BCS-13, "CAN Communication Inspection Using CONSULT-II (Self-Diagnosis)" . ● Refer to BL-35, "Door Switch Check (King Cab)" . <p>If above system is normal, replace BCM. Refer to BCS-25, "Removal and Installation of BCM" .</p>

Lighting Switch Inspection

EKS0074G

1. CHECK LIGHTING SWITCH INPUT SIGNAL

Ⓜ With CONSULT-II

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "AUTO LIGHT SW" turns ON-OFF linked with operation of lighting switch.

When lighting switch is in AUTO position : AUTO LIGHT SW ON

ⓧ Without CONSULT-II

Refer to [LT-95, "Combination Switch Inspection"](#) .

OK or NG

OK >> Inspection End.

NG >> Check lighting switch. Refer to [LT-95, "Combination Switch Inspection"](#) .

DATA MONITOR	
MONITOR	
AUTO LIGHT SW	ON

SKIA4196E

AUTO LIGHT SYSTEM

EKS0074H

Optical Sensor System Inspection

1. CHECK OPTICAL SENSOR INPUT SIGNAL

④ With CONSULT-II

Select "BCM" on CONSULT-II. With "OPTICAL SENSOR" data monitor, check difference in the voltage when the optical sensor is illuminated and not illuminated.

Illuminated

OPTICAL SENSOR : 3.0V or less

Not illuminated

OPTICAL SENSOR : 3.1V or more

NOTE:

Optical sensor must be completely subjected to work lamp light. If the optical sensor is insufficiently illuminated, the measured value may not satisfy the standard.


⊗ Without CONSULT-II

GO TO 2.

OK or NG

OK >> Inspection End.

NG >> GO TO 2.

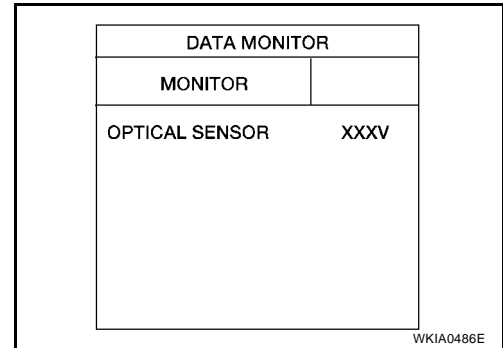


2. CHECK OPTICAL SENSOR SIGNAL GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and optical sensor connector.
3. Check continuity (open circuit) between BCM harness connector M18 terminal 18 (P) and optical sensor harness connector M402 terminal 3 (P).

18 (P) - 3 (P) : Continuity should exist.

4. Check continuity (short circuit) between BCM harness connector M18 terminal 18 (P) and ground.

18 (P) - Ground : Continuity should not exist.

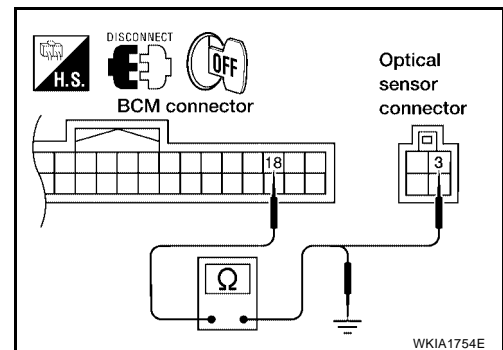

OK or NG

OK >> GO TO 3.

NG >> Repair harness or connector.


3. CHECK OPTICAL SENSOR SIGNAL CIRCUIT

1. Check continuity (open circuit) between BCM harness connector M20 terminal 58 (W/R) and optical sensor harness connector M402 terminal 4 (W/R).

58 (W/R) - 4 (W/R) : Continuity should exist.

2. Check continuity (short circuit) between BCM harness connector M20 terminal 58 (W/R) and ground.

58 (W/R) - Ground : Continuity should not exist.

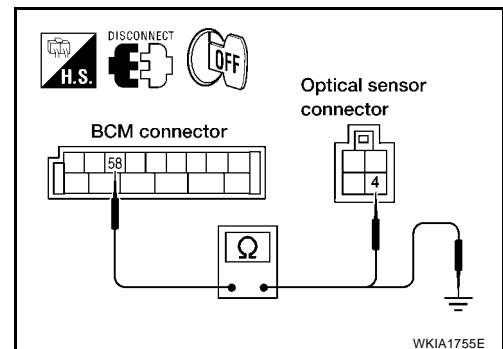

OK or NG

OK >> Replace optical sensor. Refer to [LT-63, "Removal and Installation of Optical Sensor"](#) . Recheck sensor output with CONSULT-II. If NG, replace BCM. Refer to [BCS-25, "Removal and Installation of BCM"](#) .

NG >> Repair harness or connector.


AUTO LIGHT SYSTEM

Removal and Installation of Optical Sensor

EKS0074I

REMOVAL

1. Remove defrost grille. Refer to [IP-10, "INSTRUMENT PANEL ASSEMBLY"](#).
2. Disconnect the connector.
3. Turn the optical sensor counterclockwise to remove it from defroster grille.

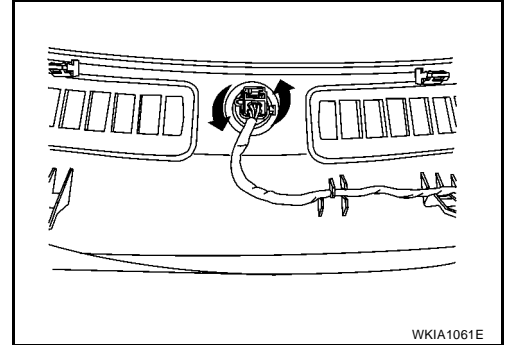

INSTALLATION

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
LT
L
M


FRONT FOG LAMP

FRONT FOG LAMP

PFP:26150

Component Parts and Harness Connector Location

EKS0074J

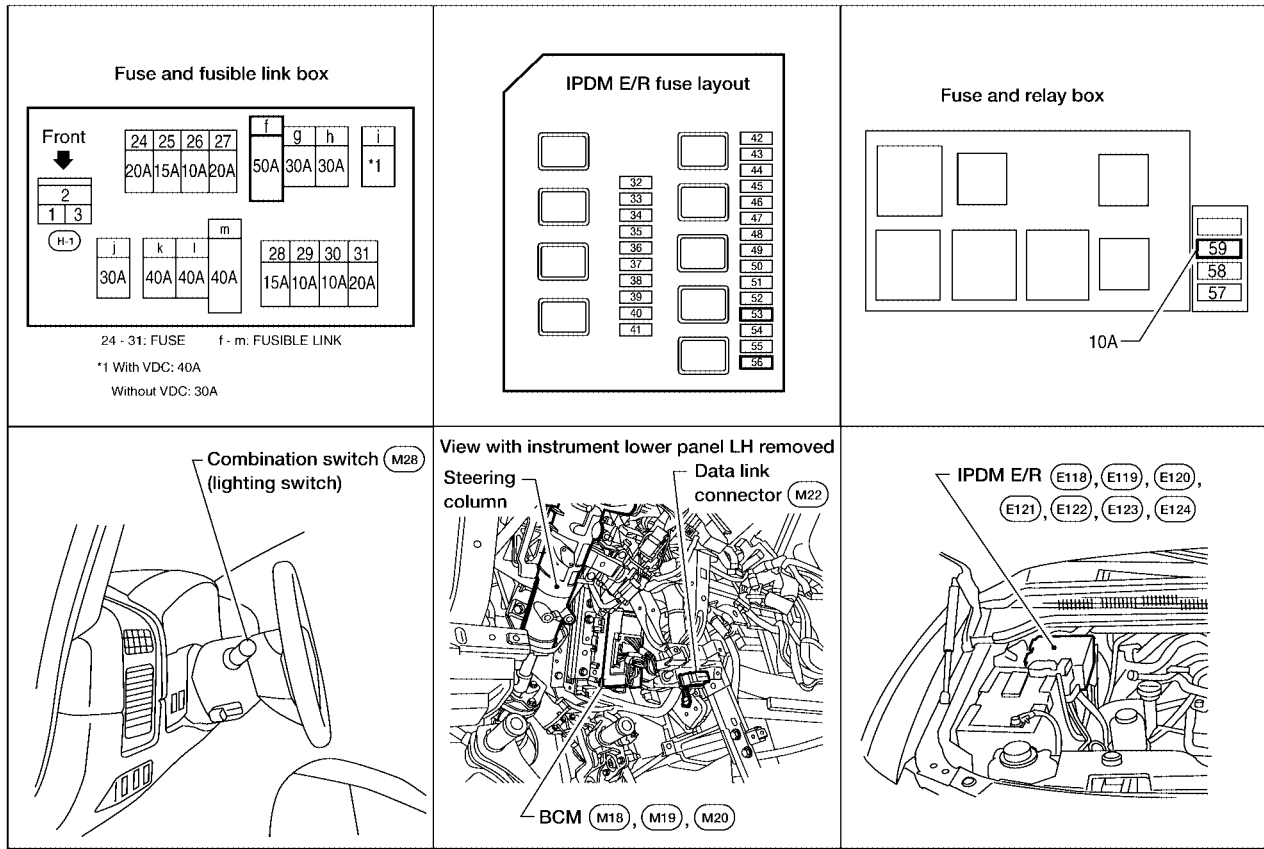

WKIA3582E

System Description

EKS0074K

Control of the fog lamps is dependent upon the position of the combination switch (lighting switch). The lighting switch must be in the 2ND position or AUTO position (LOW beam is ON) for front fog lamp operation. When the lighting switch is placed in the fog lamp position, the BCM (body control module) receives input signal requesting the fog lamps to illuminate. When the headlamps are illuminated, this input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the front fog lamp relay coil. When activated, this relay directs power to the front fog lamps.

OUTLINE

Power is supplied at all times

- to front fog lamp relay, located in the IPDM E/R, and
- through 20A fuse (No. 53, located in the IPDM E/R)
- to CPU of the IPDM E/R, and
- through 50A fusible link (letter f , located in the fuse and fusible link box)
- to BCM terminal 70.

When the ignition switch is in ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse (No. 59, located in the fuse and relay box)
- to BCM terminal 38.

Ground is supplied

- to BCM terminal 67
- through grounds M57, M61 and M79, and
- to IPDM E/R terminals 38 and 59
- through grounds E9, E15 and E24.

FRONT FOG LAMP

FOG LAMP OPERATION

The fog lamp switch is built into the combination switch. The lighting switch must be in the 2ND position or AUTO position (LOW beam is ON) and the fog lamp switch must be ON for fog lamp operation.

With the fog lamp switch in the ON position, the CPU of the IPDM E/R grounds the coil side of the fog lamp relay. The fog lamp relay then directs power

- through 20A fuse (No. 56, located in the IPDM E/R)
- through IPDM E/R terminal 50
- to front fog lamp LH terminal +, and
- through IPDM E/R terminal 51
- to front fog lamp RH terminal +.

Ground is supplied

- to front fog lamp LH and RH terminal –
- through grounds E9, E15 and E24.

With power and ground supplied, the front fog lamps illuminate.

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#) .

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 2ND position (ON), the fog lamp switch is ON, and the ignition switch is turned from ON or ACC to OFF, the battery saver control feature is activated.

Under this condition, the fog lamps (and headlamps) remain illuminated for 5 minutes, then the fog lamps (and headlamps) are turned off.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

CAN Communication System Description

EKS0074L

Refer to [LAN-8, "CAN COMMUNICATION"](#) .

A

B

C

D

E

F

G

H

I

J

LT

L



M

FRONT FOG LAMP

EKS0074M

Wiring Diagram — F/FOG —


LT-F/FOG-01

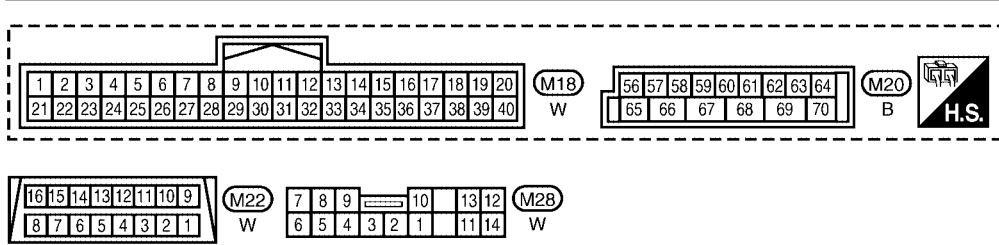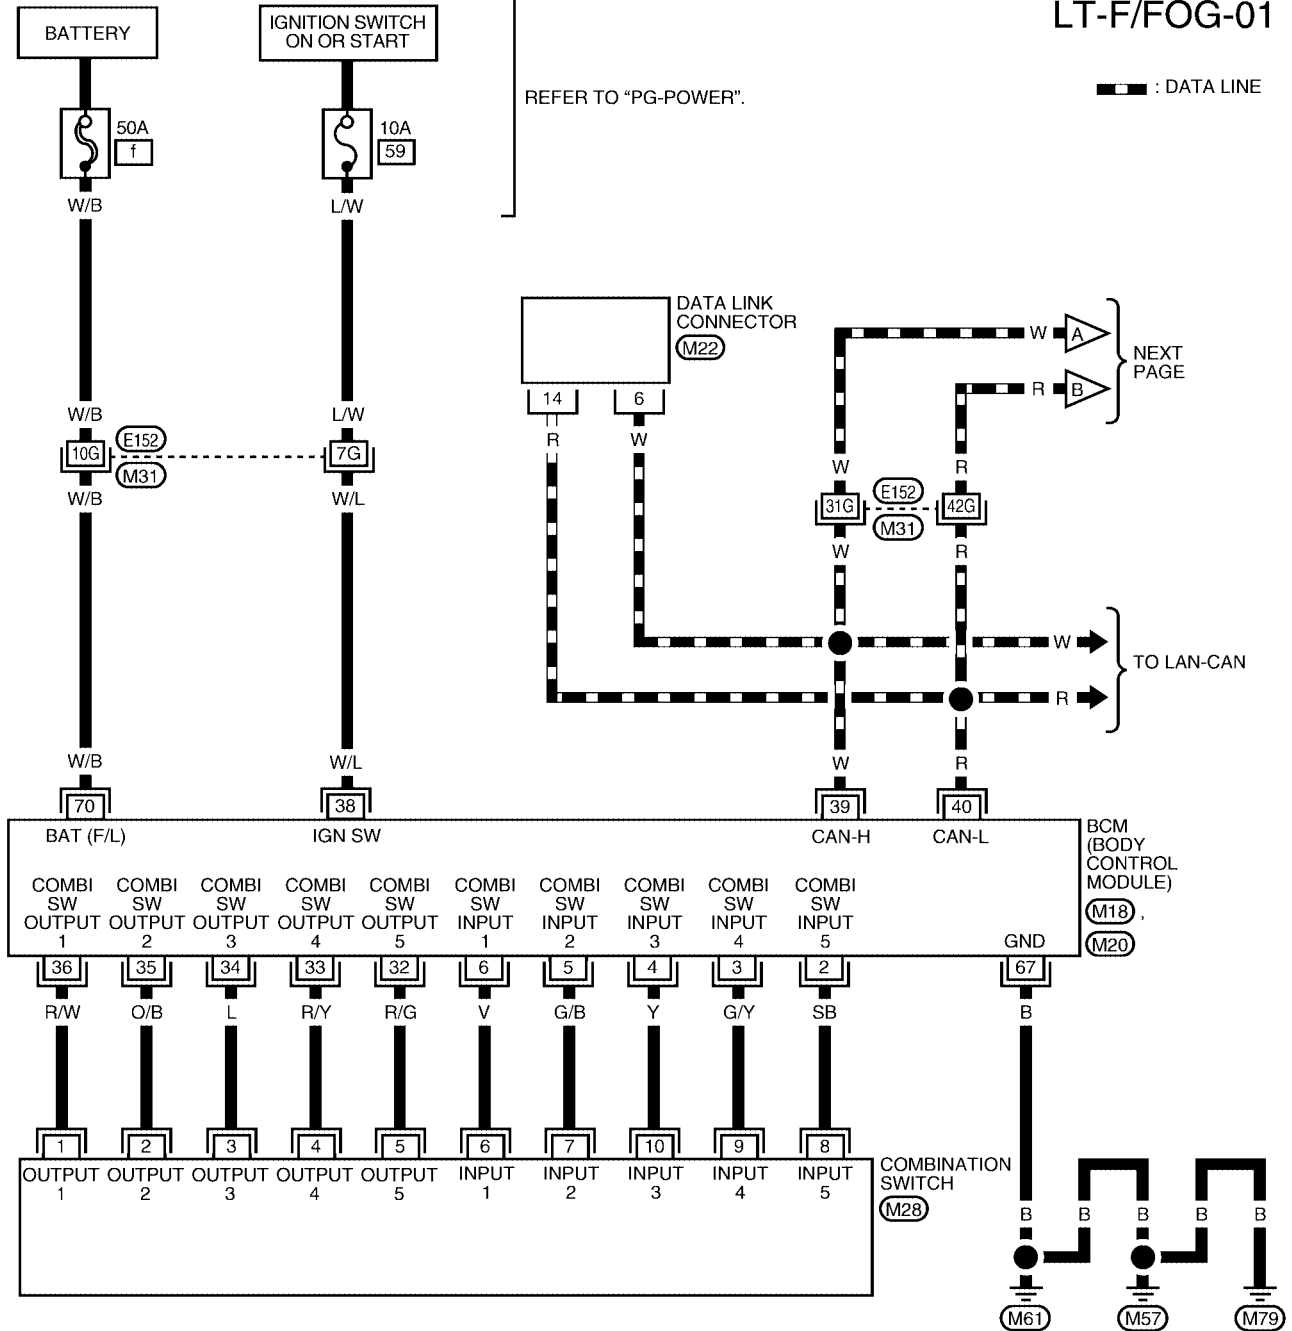


WKWA1157E

FRONT FOG LAMP

LT-F/FOG-02

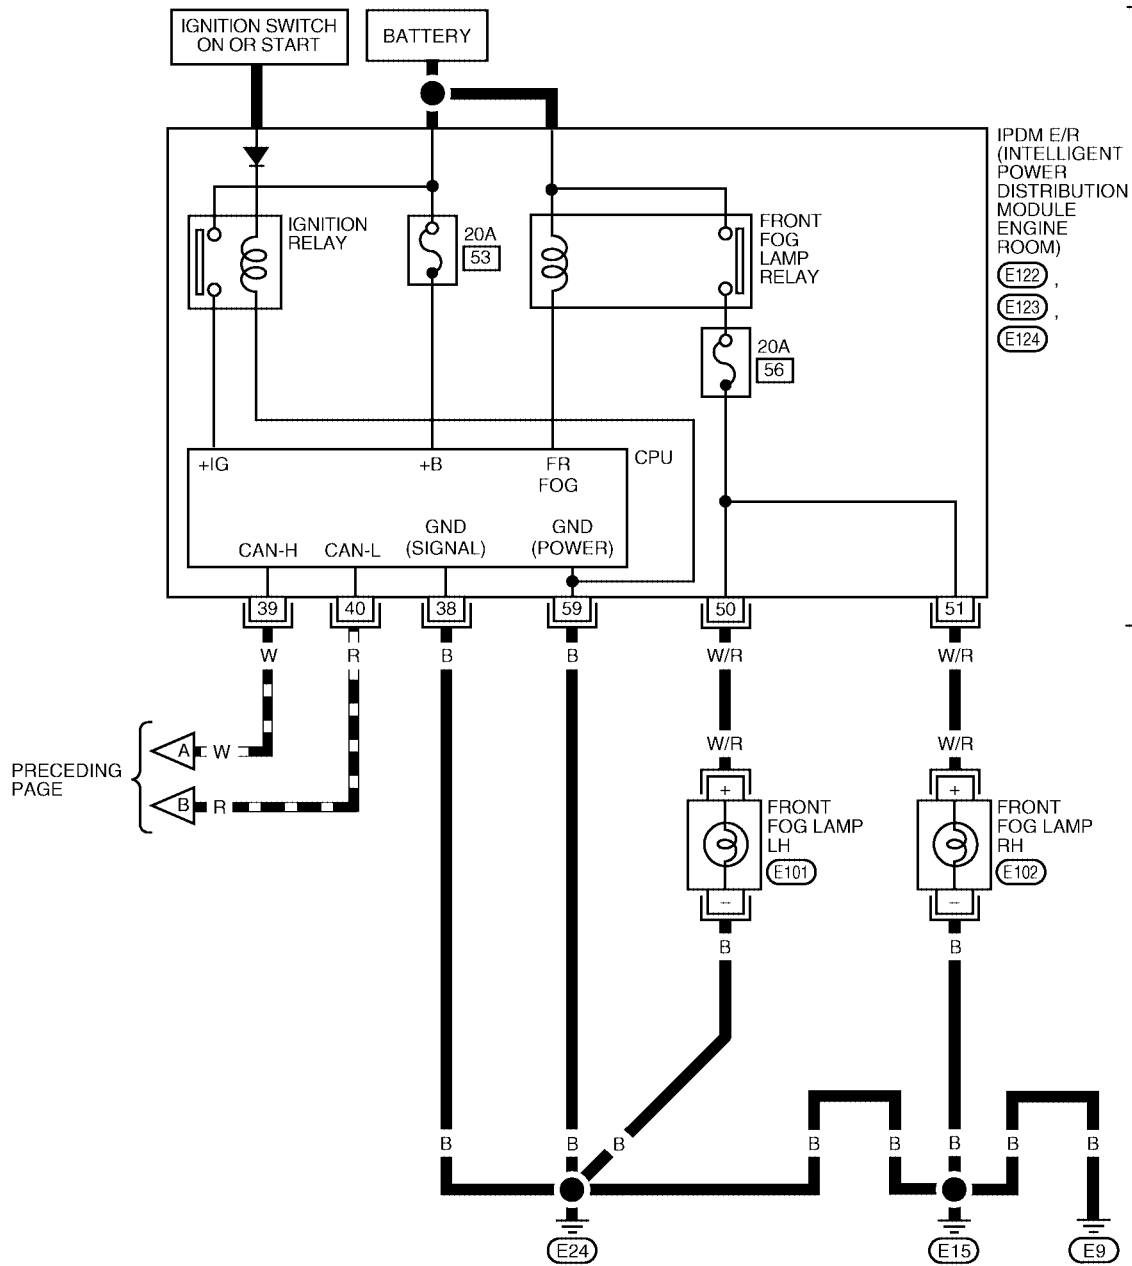

PRECEDING PAGE






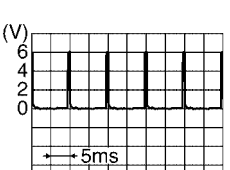



WKWA1479E

FRONT FOG LAMP

Terminals and Reference Values for BCM

EKS0074N

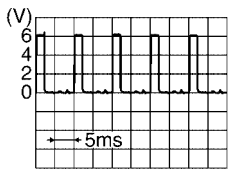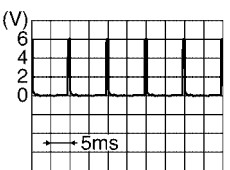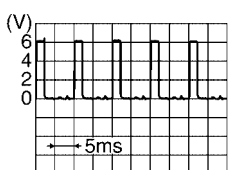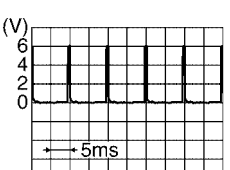Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
2	SB	Combination switch input 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>
3	G/Y	Combination switch input 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>
4	Y	Combination switch input 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>
5	G/B	Combination switch input 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>
6	V	Combination switch input 1			
32	R/G	Combination switch output 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>
33	R/Y	Combination switch output 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>
34	L	Combination switch output 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>

FRONT FOG LAMP

Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
35	O/B	Combination switch output 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	
36	R/W	Combination switch output 1			
38	W/L	Ignition switch (ON)	ON	—	Battery voltage
39	W	CAN-H	—	—	—
40	R	CAN-L	—	—	—
67	B	Ground	ON	—	0V
70	W/B	Battery power supply (fusible link)	OFF	—	Battery voltage

Terminals and Reference Values for IPDM E/R

EKS00740

Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)	
			Ignition switch	Operation or condition		
38	B	Ground	ON	—	0V	
39	W	CAN-H	—	—	—	
40	R	CAN-L	—	—	—	
50	W/R	Front fog lamp (LH)	ON	Lighting switch must be in the 2ND position or AUTO position (LOW beam is ON) and the front fog lamp switch must be ON	OFF	0V
					ON	Battery voltage
51	W/R	Front fog lamp (RH)	ON	Lighting switch must be in the 2ND position or AUTO position (LOW beam is ON) and the front fog lamp switch must be ON	OFF	0V
						ON
59	B	Ground	ON	—	0V	

How to Proceed With Trouble Diagnosis

EKS0074P

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-64, "System Description"](#) .
3. Perform the Preliminary Check. Refer to [LT-70, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Does the front fog lamp operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

FRONT FOG LAMP

EKS0074Q

Preliminary Check CHECK BCM CONFIGURATION

1. CHECK BCM CONFIGURATION

Confirm BCM configuration for "FR FOG LAMP" is set to "WITH". Refer to [BCS-13, "READ CONFIGURATION PROCEDURE"](#).

OK or NG

- OK >> Continue preliminary check. Refer to [LT-70, "CHECK POWER SUPPLY AND GROUND CIRCUIT"](#).
- NG >> Change BCM configuration for "FR FOG LAMP" to "WITH". Refer to [BCS-16, "WRITE CONFIGURATION PROCEDURE"](#).

CHECK POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES OR FUSIBLE LINK

Check for blown fuses or fusible link.

Unit	Power source	Fuse No.
BCM	Battery	f
	Ignition switch ON or START position	59
IPDM E/R	Battery	53
	Battery (Fog lamps ON)	56

Refer to [LT-66, "Wiring Diagram — F/FOG —"](#).

OK or NG

- OK >> GO TO 2.
- NG >> If fuse is blown, be sure to eliminate cause of blown fuse before installing new fuse. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#).


2. CHECK POWER SUPPLY CIRCUIT

1. Disconnect BCM connectors.
2. Check voltage between BCM harness connector and ground.

Terminals		(-)	Ignition switch position		
(+)			OFF	ACC	ON
Connector	Terminal (Wire color)	Ground	0V	0V	Battery voltage
M18	38 (W/L)		Battery voltage	Battery voltage	Battery voltage
M20	70 (W/B)				

OK or NG

- OK >> GO TO 3.
- NG >> Check harness for open between BCM and fuse.

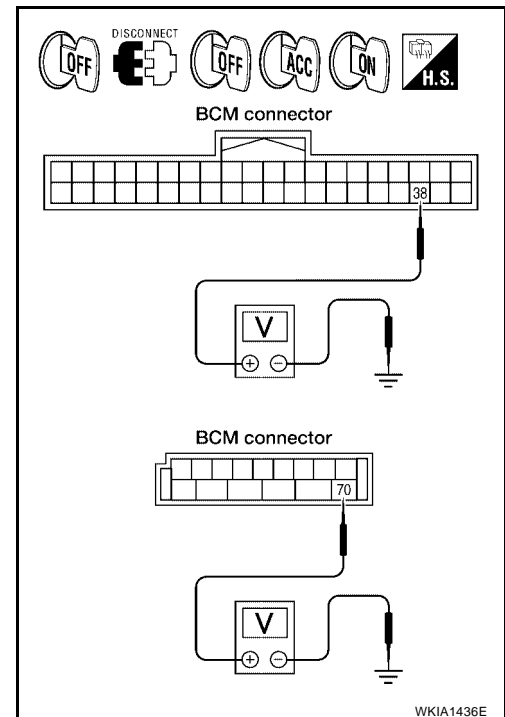

FRONT FOG LAMP


3. CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

Connector	Terminals		Continuity
	Terminal (Wire color)		
M20	67 (B)	Ground	Yes

OK or NG

- OK >> Inspection End.
- NG >> Check ground circuit harness.

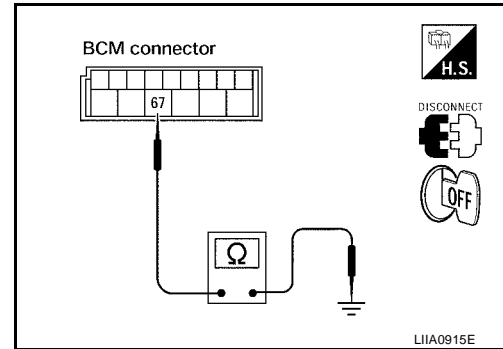

EKS0074R

CONSULT-II Functions

Refer to [LT-17, "CONSULT-II Function \(BCM\)"](#) in HEADLAMP (FOR USA).

Refer to [LT-20, "CONSULT-II Function \(IPDM E/R\)"](#) in HEADLAMP (FOR USA).

Front Fog Lamps Do Not Illuminate (Both Sides)

EKS0074S


1. CHECK COMBINATION SWITCH INPUT SIGNAL

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "FR FOG SW" turns ON-OFF linked with operation of lighting switch.

When lighting switch is in FOG position : FR FOG SW ON

OK or NG

- OK >> GO TO 2.
- NG >> Check lighting switch. Refer to [LT-95, "Combination Switch Inspection"](#).

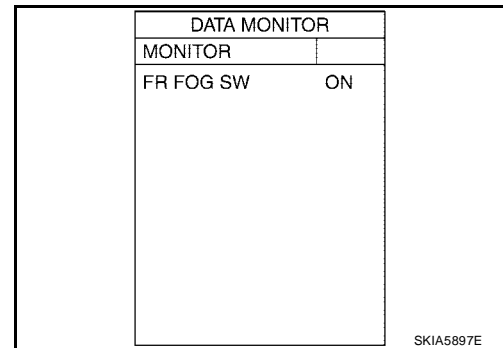


2. FOG LAMP ACTIVE TEST

- Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
- Select "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
- Touch "FOG" on "ACTIVE TEST" screen.
- Make sure fog lamps operate.

Fog lamps should operate.

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 4.

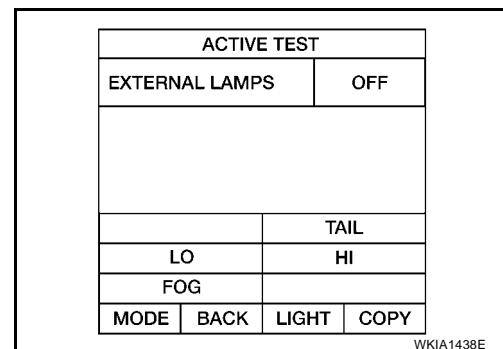

FRONT FOG LAMP


3. CHECK IPDM E/R

1. Select "IPDM E/R" on CONSULT-II, and select "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Make sure "FR FOG REQ" turns ON when lighting switch is in FOG position.

When lighting switch is in FOG position : FR FOG REQ ON

OK or NG


- OK >> Replace IPDM E/R. Refer to [PG-28, "Removal and Installation of IPDM E/R"](#).
- NG >> Replace BCM. Refer to [BCS-25, "Removal and Installation of BCM"](#).

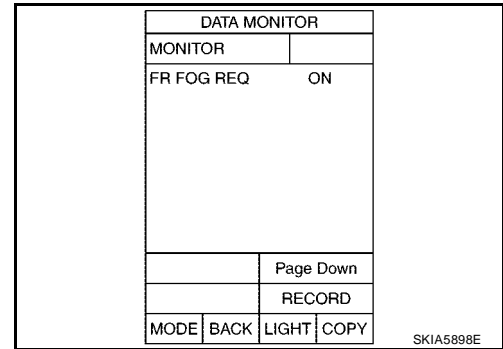

4. IPDM E/R INSPECTION

Start auto active test. Refer to [PG-22, "Auto Active Test"](#). When front fog lamp relay is operating, check voltage between left/right front fog lamp connector terminals and body ground.

Terminals				Voltage (Approx.)
Front fog lamp (+)		(-)		
Connector	Terminal (wire color)			
LH	E101	+ (W/R)	Ground	Battery voltage
RH	E102			

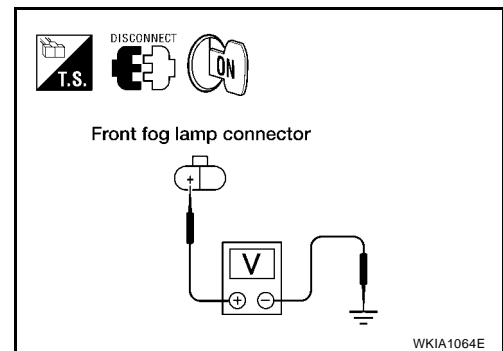

OK or NG

- OK >> Check front fog lamp bulbs and replace as necessary.
- NG >> Replace IPDM E/R. Refer to [PG-28, "Removal and Installation of IPDM E/R"](#).

Front Fog Lamp Does Not Illuminate (One Side)

EKS0074T

1. BULB INSPECTION

Inspect bulbs of lamps which do not illuminate.


OK or NG

- OK >> GO TO 2.
- NG >> Replace lamp bulb. Refer to [LT-74, "Bulb Replacement"](#).

2. INSPECTION BETWEEN IPDM E/R AND FRONT FOG LAMPS

1. Disconnect IPDM E/R connector and inoperative front fog lamp connector.
2. Check continuity between harness connector terminals of IPDM E/R and harness connector terminal of front fog lamps.

Terminals				Continuity
IPDM E/R		Front fog lamp		
Connector	Terminal (wire color)	Connector	Terminal (wire color)	
E123	50 (W/R)	LH	E101	Yes
	51 (W/R)	RH	E102	

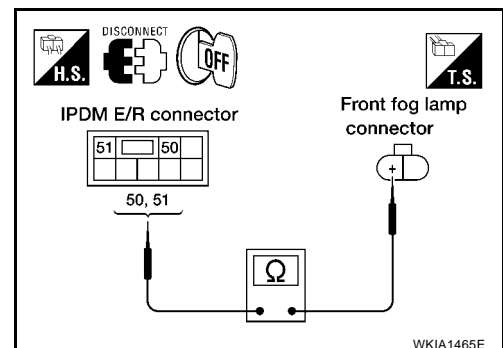

OK or NG

- OK >> Check ground circuit. If OK, replace IPDM E/R. Refer to [PG-28, "Removal and Installation of IPDM E/R"](#). If NG, repair harness or connector.
- NG >> Check for short circuits and open circuits in harness between IPDM E/R and front fog lamps.

FRONT FOG LAMP

EKS0074U

Aiming Adjustment


The fog lamp is a semi-sealed beam type which uses a replaceable halogen bulb. Before performing aiming adjustment, make sure of the following.

- Keep all tires inflated to correct pressure.
- Place vehicle on level ground.
- See that vehicle is unloaded (except for full levels of coolant, engine oil and fuel, and spare tire, jack, and tools). Have the driver or equivalent weight placed in driver seat.


Adjust aiming in the vertical direction by turning the adjustment screw.

NOTE:


Access adjustment screw from underneath front bumper. Use a T-3 (3 mm) Torx® bit or a 3 mm allen wrench to adjust. Turn screw clockwise to raise pattern and counterclockwise to lower pattern.

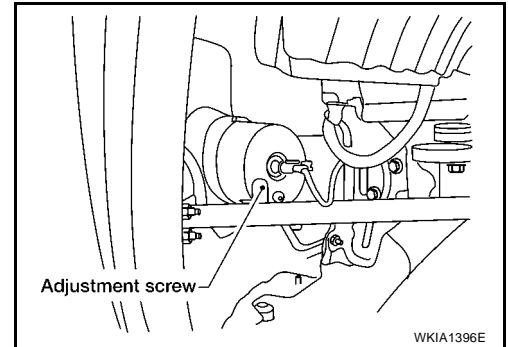

1. Set the distance between the screen and the center of the fog lamp lens as shown.
2. Turn front fog lamps ON.

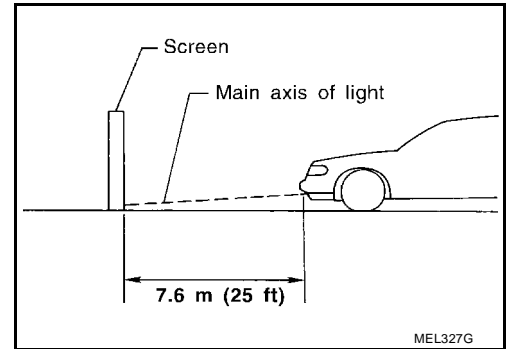

3. Adjust front fog lamps using adjusting screw so that the top edge of the high intensity zone is 100 mm (4 in) below the height of the fog lamp centers as shown.
- When performing adjustment, if necessary, cover the headlamps and opposite fog lamp.

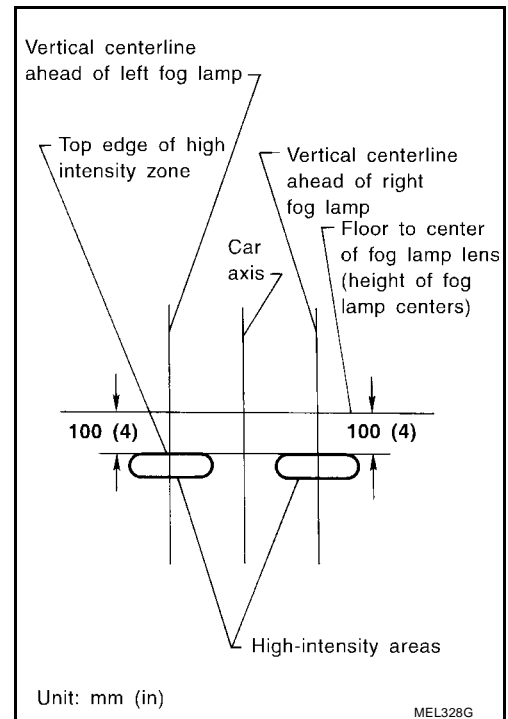

A
B
C
D
E
F
G
H
I
J
LT
L
M

FRONT FOG LAMP


Bulb Replacement

EKS0074V

1. Disconnect electrical connector.
2. Turn the bulb counterclockwise to remove it.

CAUTION:

- Do not touch the glass of bulb directly by hand. Keep grease and other oily substances away from it. Do not touch bulb by hand while it is lit or right after being turned off. Burning may result.
- Do not leave bulb out of fog lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of fog lamp. When replacing bulb, be sure to replace it with new one.

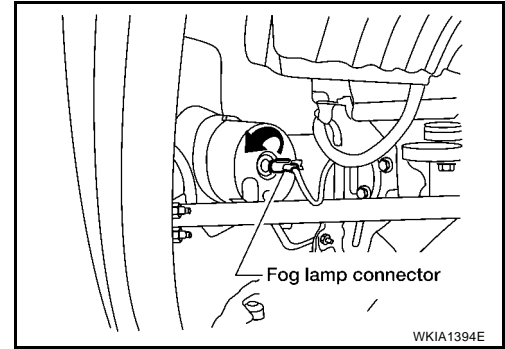


Removal and Installation

EKS0074W

The fog lamp is a semi-sealed beam type which uses a replaceable halogen bulb.

CAUTION:

- Do not leave fog lamp assembly without bulb for a long period of time. Dust, moisture, smoke, etc. entering the fog lamp body may affect the performance. Remove the bulb from the headlamp assembly just before replacement bulb is installed.
 - Grasp only the plastic base when handling the bulb. Never touch the glass envelope. Touching the glass could significantly affect the bulb life and/or fog lamp performance.
1. Position the fender protector aside.
 2. Disconnect electrical connector.
 3. Remove nut and pull fog lamp out of front fascia.
- Installation is in the reverse order of removal.

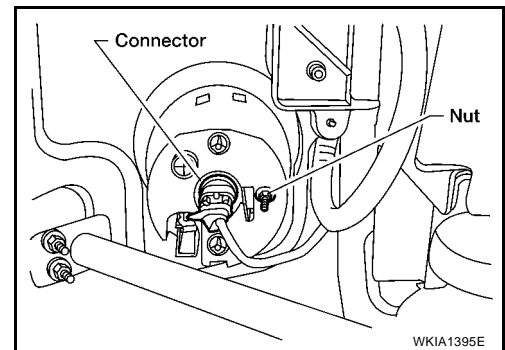


TURN SIGNAL AND HAZARD WARNING LAMPS

PFP:26120

EKS0074X

TURN SIGNAL AND HAZARD WARNING LAMPS

Component Parts and Harness Connector Location

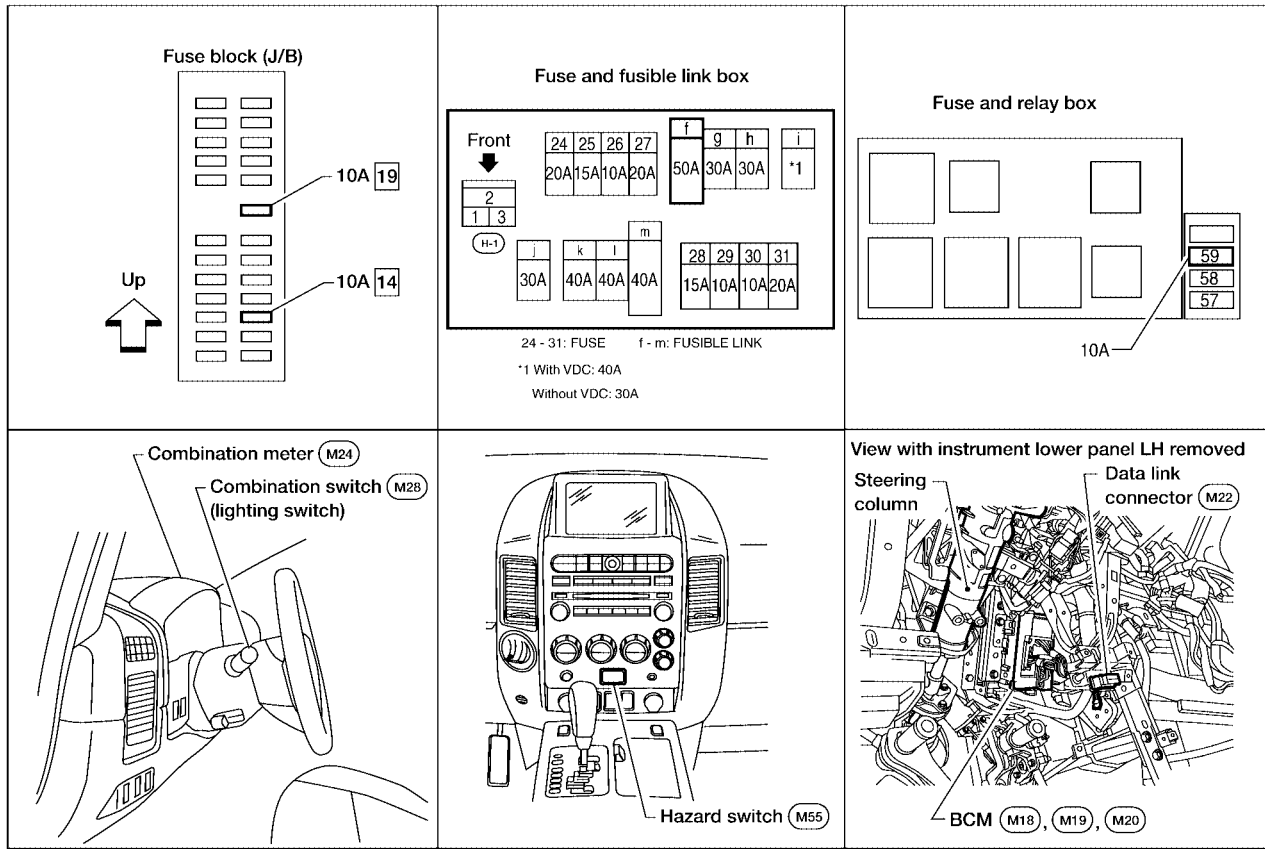

WKIA3583E

EKS0074Y

System Description OUTLINE

Power is supplied at all times

- through 50A fusible link (letter f , located in the fuse and fusible link box)
- to BCM (body control module) terminal 70, and
- through 10A fuse [No. 19, located in the fuse block (J/B)]
- to combination meter terminal 8.

TURN SIGNAL OPERATION

When the ignition switch is in the ON or START position, power is supplied

- through 10A fuse (No. 59, located in the fuse and relay box)
- to BCM terminal 38, and
- through 10A fuse [No. 14, located in the fuse block (J/B)]
- to combination meter terminal 24.

Ground is supplied

- to BCM terminal 67 and
- to combination meter terminal 17
- through grounds M57, M61 and M79.

LH Turn

When the turn signal switch is moved to the left position, BCM outputs turn signal from BCM terminal 60, interpreting it as turn signal is ON.

The BCM supplies power

- through BCM terminal 60
- to front combination lamp LH terminal 5

A
B
C
D
E
F
G
H
I
J
L
M

LT

TURN SIGNAL AND HAZARD WARNING LAMPS

- through front combination lamp LH terminal 4
- to grounds E9, E15 and E24, and
- to rear combination lamp LH terminal 8
- through rear combination lamp LH terminal 1
- to grounds E9, E15 and E24.

BCM sends signal to combination meter through CAN communication lines, and turns on turn signal indicator lamp within combination meter.

RH Turn

When the turn signal switch is moved to the right position, BCM outputs turn signal from BCM terminal 61, interpreting it as turn signal is ON.

The BCM supplies power

- through BCM terminal 61
- to front combination lamp RH terminal 5
- through front combination lamp RH terminal 4
- to grounds E9, E15 and E24, and
- to rear combination lamp RH terminal 8
- through rear combination lamp terminal 1
- to grounds E9, E15 and E24.

BCM sends signal to combination meter through CAN communication lines, and turns on turn signal indicator lamp within combination meter.

HAZARD LAMP OPERATION

Power is supplied at all times

- through 50A fusible link (letter f , located in the fuse and fusible link box)
- to BCM terminal 70, and
- through 10A fuse [No. 19, located in the fuse block (J/B)]
- to combination meter terminal 8.

Ground is supplied

- to BCM terminal 67 and
- to combination meter terminal 17
- through grounds M57, M61 and M79.

When the hazard switch is depressed, ground is supplied

- to BCM terminal 29
- through hazard switch terminal 4
- through hazard switch terminal 6
- through grounds M57, M61 and M79.

When the hazard switch is depressed, BCM outputs turn signal from BCM terminals 60 and 61, interpreting it as turn signal is ON.

The BCM supplies power

- through BCM terminals 60 and 61
- to front combination lamp LH and RH terminal 5
- through front combination lamp LH and RH terminal 4
- to grounds E9, E15 and E24, and
- to rear combination lamp LH and RH terminal 8
- through rear combination lamp LH and RH terminal 1
- to grounds E9, E15 and E24.

BCM sends signal to combination meter through CAN communication lines, and turns on turn signal indicator lamps within combination meter.

REMOTE KEYLESS ENTRY SYSTEM OPERATION

Power is supplied at all times

TURN SIGNAL AND HAZARD WARNING LAMPS

- through 50A fusible link (letter f , located in the fuse and fusible link box)
- to BCM terminal 70, and
- through 10A fuse [No. 19, located in the fuse block (J/B)]
- to combination meter terminal 8.

Ground is supplied

- to BCM terminal 67 and
- to combination meter terminal 17
- through grounds M57, M61 and M79.

When the remote keyless entry system is triggered by input from the keyfob, BCM output turn signal from BCM terminals 60 and 61, interpreting it as turn signal is ON.

The BCM supplies power

- through BCM terminals 60 and 61
- to front combination lamp LH and RH terminal 5
- through front combination lamp LH and RH terminal 4
- to grounds E9, E15 and E24, and
- to rear combination lamp LH and RH terminal 8
- through rear combination lamp LH and RH terminal 1
- to grounds E9, E15 and E24.

BCM sends signal to combination meter through CAN communication lines, and turns on turn signal indicator lamps within combination meter.

With power and input supplied, the BCM controls the flashing of the hazard warning lamps when keyfob is used to activate the remote keyless entry system.

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#) .

CAN Communication System Description

Refer to [LAN-8, "CAN COMMUNICATION"](#) .

A

B

C

D

E

F

G

H

I

EKS0074Z

J

LT

L

M


TURN SIGNAL AND HAZARD WARNING LAMPS

EKS00750

Wiring Diagram — TURN —

LT-TURN-01


▬ : DATA LINE

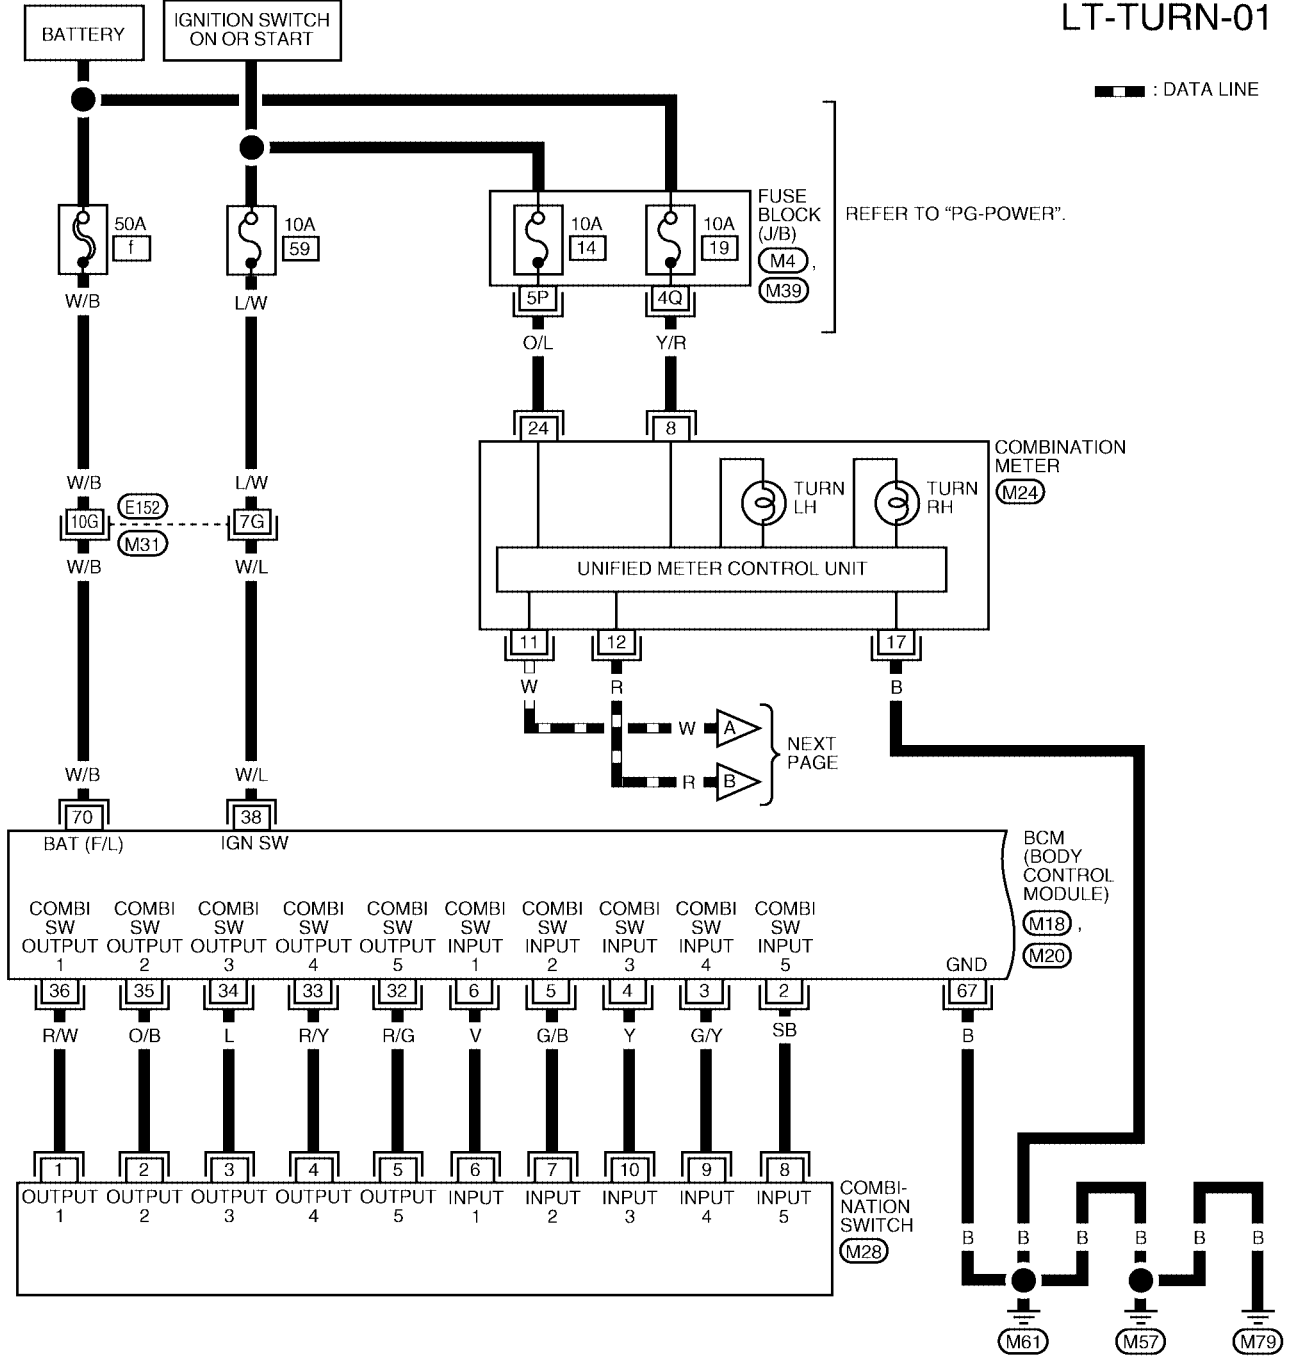

REFER TO "PG-POWER".

NEXT PAGE



REFER TO THE FOLLOWING.
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

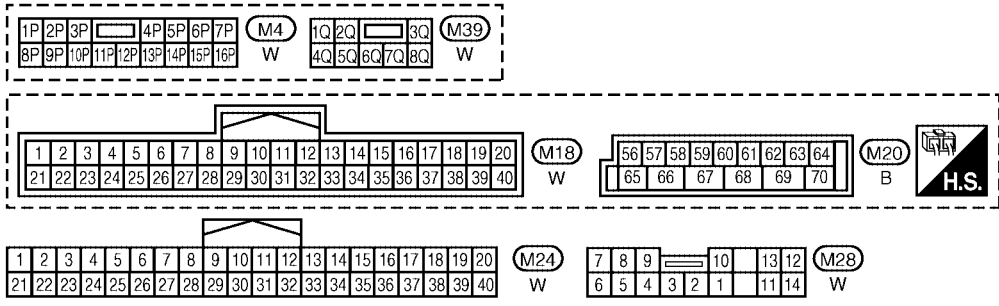

WKWA1488E

TURN SIGNAL AND HAZARD WARNING LAMPS

LT-TURN-02

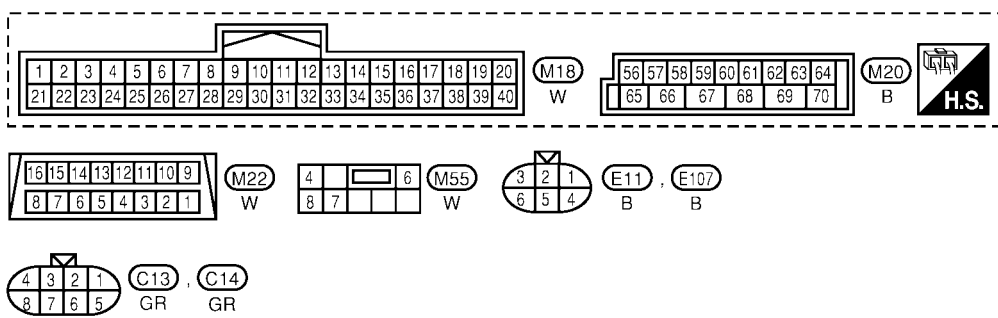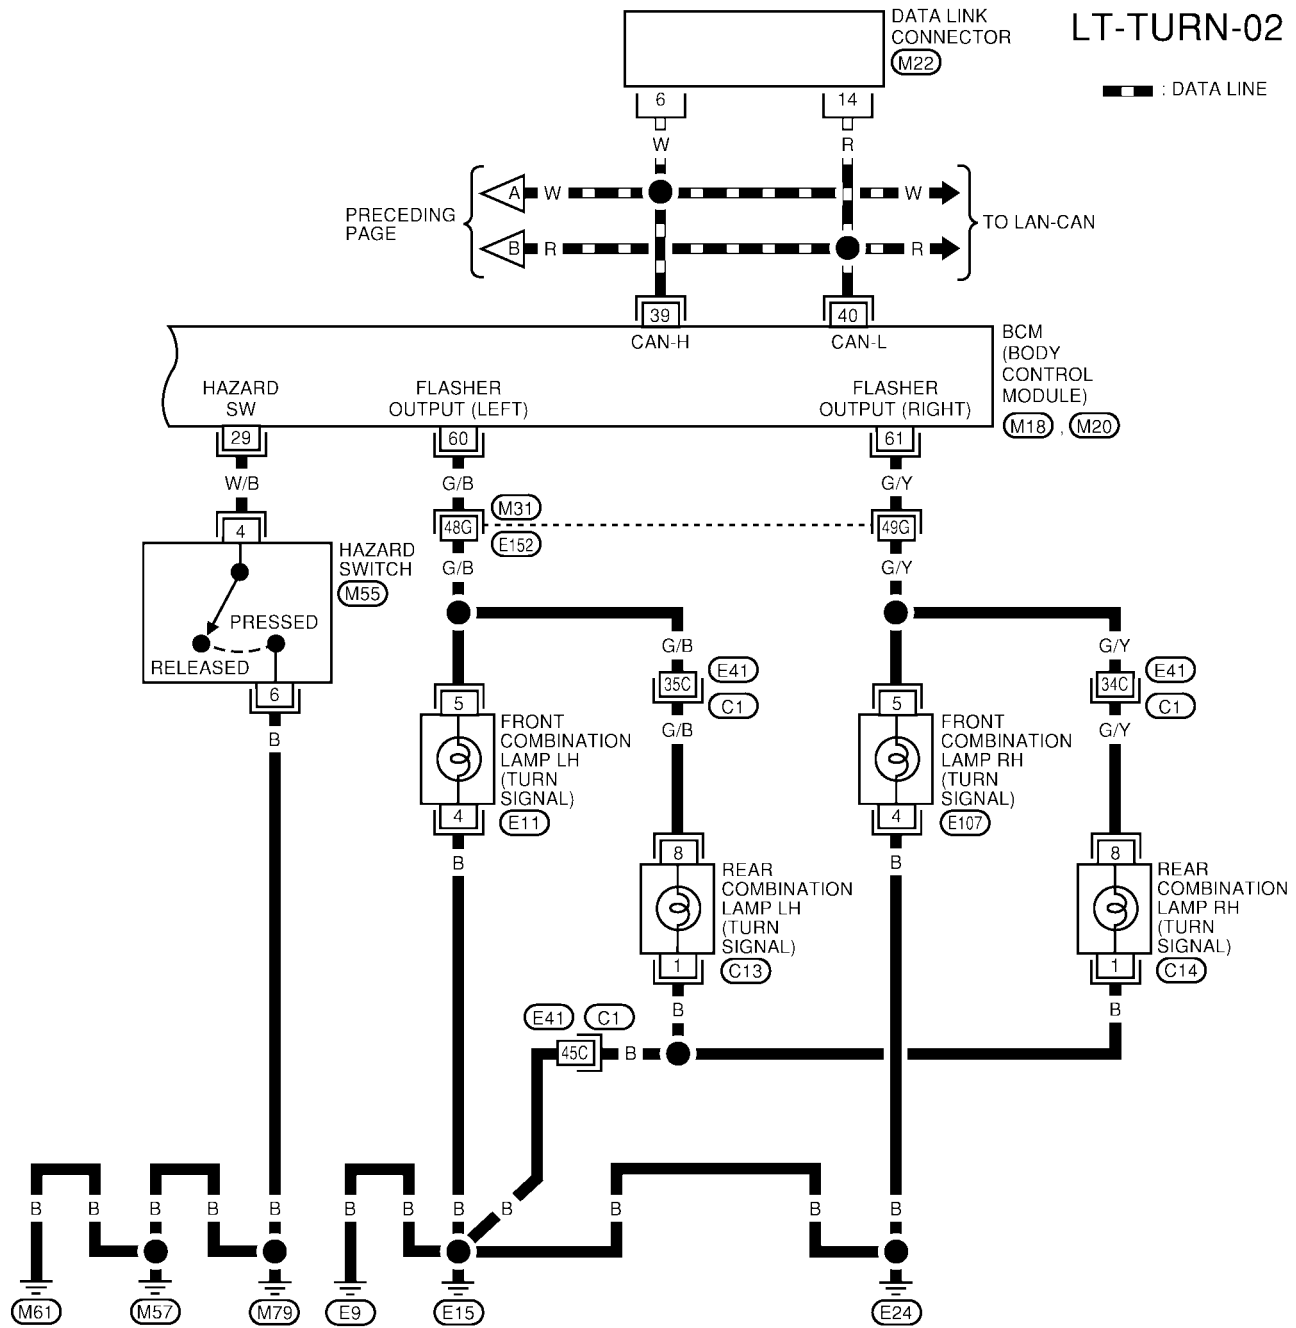






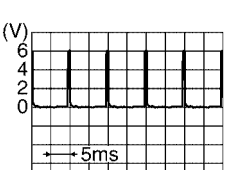
REFER TO THE FOLLOWING.
 (M31), (C1) - SUPER
 MULTIPLE JUNCTION (SMJ)

WKWA1509E





TURN SIGNAL AND HAZARD WARNING LAMPS

EKS00751

Terminals and Reference Values for BCM

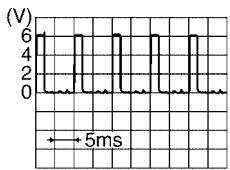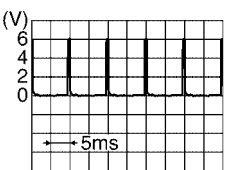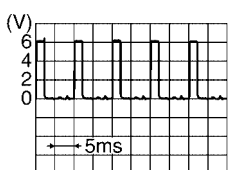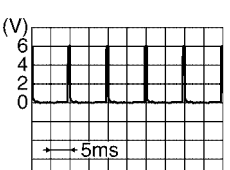Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)				
			Ignition switch	Operation or condition					
2	SB	Combination switch input 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>				
3	G/Y	Combination switch input 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>				
4	Y	Combination switch input 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>				
5	G/B	Combination switch input 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>				
6	V	Combination switch input 1							
29	W/B	Hazard switch signal	OFF	Hazard switch	<table border="0" style="width: 100%;"> <tr> <td style="width: 50%; text-align: center;">ON</td> <td style="text-align: center;">0V</td> </tr> <tr> <td style="width: 50%; text-align: center;">OFF</td> <td style="text-align: center;">5V</td> </tr> </table>	ON	0V	OFF	5V
ON	0V								
OFF	5V								
32	R/G	Combination switch output 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>				
33	R/Y	Combination switch output 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>				

TURN SIGNAL AND HAZARD WARNING LAMPS

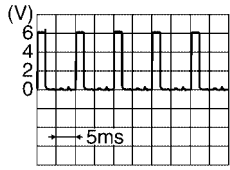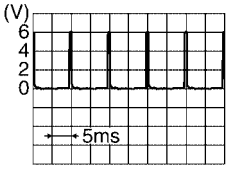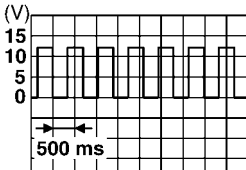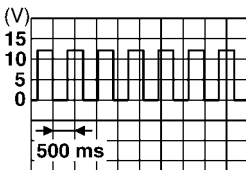Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)	
			Ignition switch	Operation or condition		
34	L	Combination switch output 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E	
35	O/B	Combination switch output 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E	
36	R/W	Combination switch output 1				
38	W/L	Ignition switch (ON)	ON	—	Battery voltage	
39	W	CAN-H	—	—	—	
40	R	CAN-L	—	—	—	
60	G/B	Turn signal (left)	ON	Combina- tion switch	Turn left ON	 SKIA3009J
61	G/Y	Turn signal (right)	ON	Combina- tion switch	Turn right ON	 SKIA3009J
67	B	Ground	ON	—	0V	
70	W/B	Battery power supply	OFF	—	Battery voltage	

How to Proceed With Trouble Diagnosis

EKS00752

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-75, "System Description"](#) .
3. Perform preliminary check. Refer to [LT-82, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Do turn signal and hazard warning lamps operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

TURN SIGNAL AND HAZARD WARNING LAMPS

EKS00753

Preliminary Check CHECK POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES OR FUSIBLE LINK

Check for blown fuses or fusible link.

Unit	Power source	Fuse No.
BCM	Battery	f
	Ignition switch ON or START position	59

Refer to [LT-78, "Wiring Diagram — TURN —"](#) .

OK or NG

OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of blown fuse before installing new fuse. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) .

2. CHECK POWER SUPPLY CIRCUIT


1. Disconnect BCM connectors.
2. Check voltage between BCM harness connector and ground.

Terminals		(-)	Ignition switch position		
(+)			OFF	ACC	ON
Connector	Terminal (Wire color)	Ground	0V	0V	Battery voltage
M18	38 (W/L)		Battery voltage	Battery voltage	Battery voltage
M20	70 (W/B)				

OK or NG

OK >> GO TO 3.

NG >> Check harness for open between BCM and fuse.

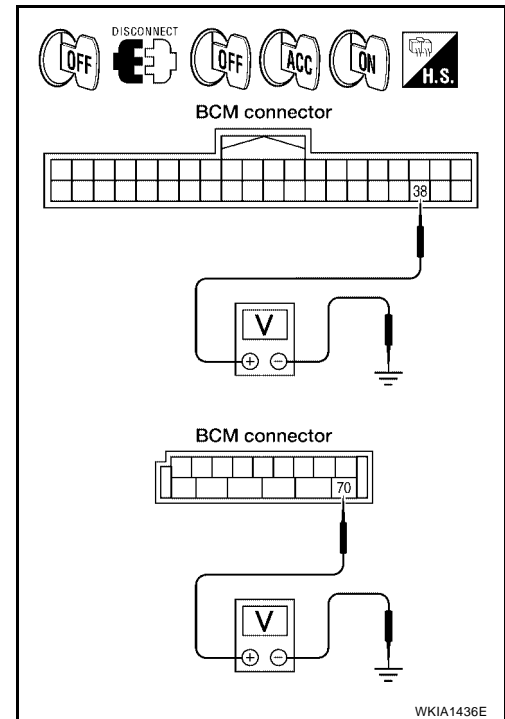

WKIA1436E

3. CHECK GROUND CIRCUIT


Check continuity between BCM harness connector and ground.

Terminals		Continuity
Connector	Terminal (Wire color)	
M20	67 (B)	Ground Yes

OK or NG

OK >> Inspection End.

NG >> Check ground circuit harness.

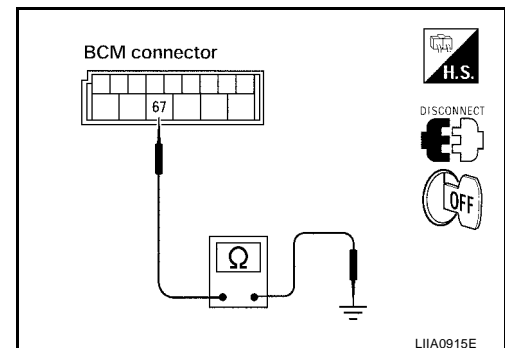

LIA0915E

TURN SIGNAL AND HAZARD WARNING LAMPS

CONSULT-II Function (BCM)

EKS00754

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

CONSULT-II OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

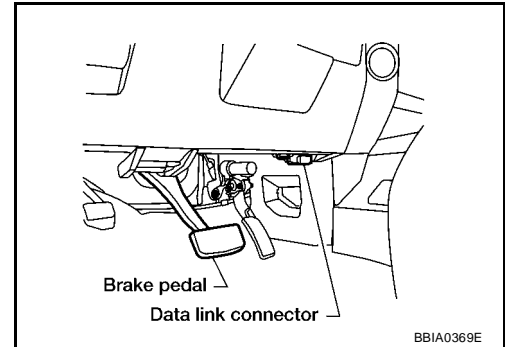

2. Touch "START (NISSAN BASED VHCL)".

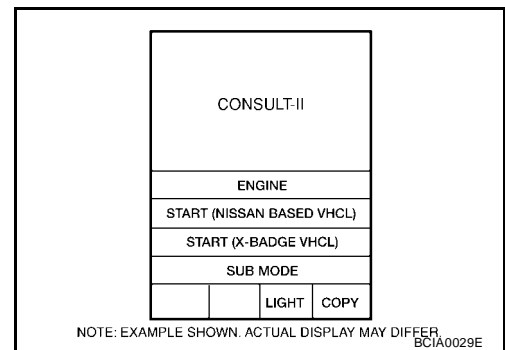


3. Touch "BCM" on "SELECT SYSTEM" screen. If "BCM" is not indicated, go to [GI-38, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

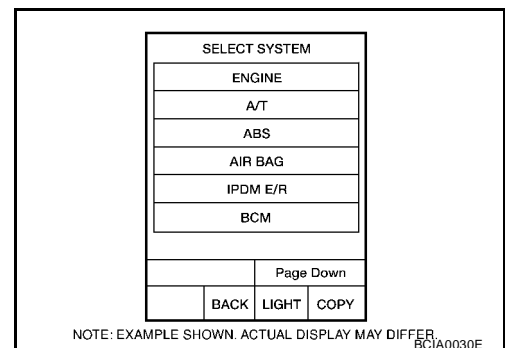

TURN SIGNAL AND HAZARD WARNING LAMPS

4. Touch "FLASHER" on "SELECT TEST ITEM" screen.

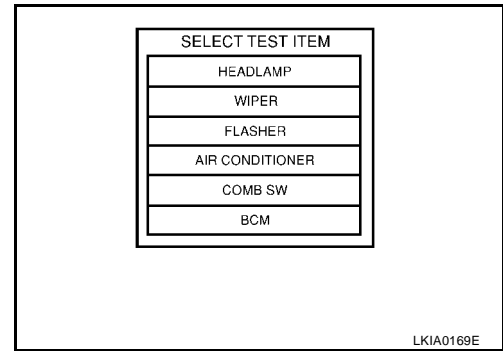

DATA MONITOR

Operation Procedure

1. Touch "FLASHER" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on the "SELECT MONITOR ITEM" screen.

All signals	Monitors all the signals.
Selection from menu	Selects and monitors the individual signal.

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

Display Item List

Monitor item	Contents
IGN ON SW "ON/OFF"	Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
HAZARD SW "ON/OFF"	Displays "Hazard ON (ON)/Hazard OFF (OFF)" status, determined from hazard switch signal.
TURN SIGNAL R "ON/OFF"	Displays "Turn right (ON)/Other (OFF)" status, determined from lighting switch signal.
TURN SIGNAL L "ON/OFF"	Displays "Turn left (ON)/Other (OFF)" status, determined from lighting switch signal.
BRAKE SW "ON/OFF"	Displays status of stop lamp switch.

ACTIVE TEST

Operation Procedure

1. Touch "FLASHER" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" or "OFF" deactivates the operation.

Display Item List

Test item	Description
FLASHER (RH)	Turn signal lamp (right) can be operated by any ON-OFF operations.
FLASHER (LH)	Turn signal lamp (left) can be operated by any ON-OFF operations.

TURN SIGNAL AND HAZARD WARNING LAMPS

EKS00755

Turn Signal Lamp Does Not Operate

1. CHECK COMBINATION SWITCH INPUT SIGNAL

Ⓜ With CONSULT-II

Select "BCM" on CONSULT-II. With "FLASHER" data monitor, make sure "TURN SIGNAL R" and "TURN SIGNAL L" turns ON-OFF linked with operation of lighting switch.

**When lighting switch is in : TURN SIGNAL R ON
TURN RH position**

**When lighting switch is in : TURN SIGNAL L ON
TURN LH position**

ⓧ Without CONSULT-II

Refer to [LT-95, "Combination Switch Inspection"](#).

OK or NG

OK >> GO TO 2.

NG >> Check lighting switch. Refer to [LT-95, "Combination Switch Inspection"](#).

DATA MONITOR	
MONITOR	
TURN SIGNAL R	ON
TURN SIGNAL L	ON

SKIA4499E

2. ACTIVE TEST

Ⓜ With CONSULT-II

1. Select "FLASHER" during active test. Refer to [LT-84, "ACTIVE TEST"](#).

2. Make sure "FLASHER RH" and "FLASHER LH" operate.

ⓧ Without CONSULT-II

GO TO 3.

OK or NG

OK >> Replace BCM. Refer to [BCS-25, "Removal and Installation of BCM"](#).

NG >> GO TO 3.

ACTIVE TEST	
FLASHER	OFF
RH	LH
MODE	BACK LIGHT COPY

SKIA6190E

3. CHECK TURN SIGNAL LAMPS CIRCUIT

1. Turn ignition switch OFF.

2. Disconnect BCM connector and front combination lamp LH and RH connectors.

3. Check continuity between BCM harness connector M20 terminal 60 (G/B) and front combination lamp LH harness connector E11 terminal 5 (G/B).

60 (G/B) - 5 (G/B) : Continuity should exist.


4. Check continuity between BCM harness connector M20 terminal 61 (G/Y) and front combination lamp RH harness connector E107 terminal 5 (G/Y).

61 (G/Y) - 5 (G/Y) : Continuity should exist.

OK or NG

OK >> GO TO 4.

NG >> Repair harness or connector.

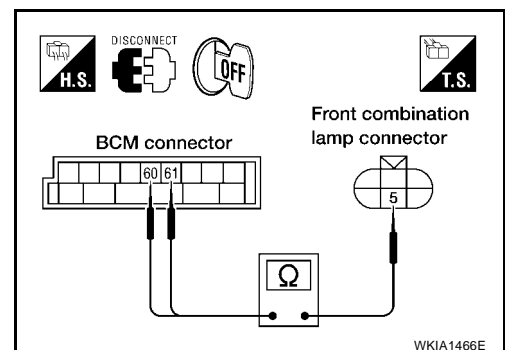

TURN SIGNAL AND HAZARD WARNING LAMPS

4. CHECK GROUND

1. Check continuity between front combination lamp LH harness connector E11 terminal 4 (B) and ground.

4 (B) - Ground : Continuity should exist.


2. Check continuity between front combination lamp RH harness connector E107 terminal 4 (B) and ground.

4 (B) - Ground : Continuity should exist.

OK or NG

OK >> GO TO 5.

NG >> Repair harness or connector.

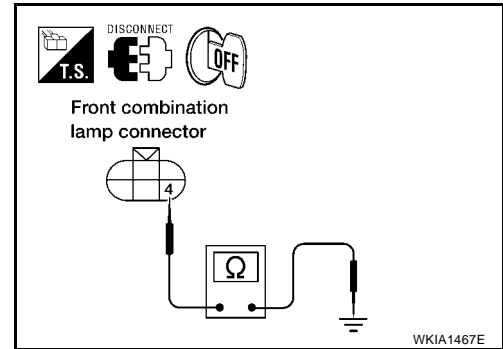

5. CHECK BULB

Check bulb standard of each turn signal lamp is correct.

OK or NG

OK >> Replace BCM if turn signal lamps do not work after setting the connector again. Refer to [BCS-25, "Removal and Installation of BCM"](#).

NG >> Replace turn signal lamp bulb. Refer to [LT-30, "FRONT TURN SIGNAL/PARKING LAMP"](#).

Rear Turn Signal Lamp Does Not Operate

EKS00756

1. CHECK TAIL LAMPS AND STOP LAMPS

Check bulb standard of each turn signal lamp is correct.

OK or NG

OK >> GO TO 2.

NG >> Replace turn signal lamp bulb. Refer to [LT-118, "Bulb Replacement"](#).

2. CHECK TURN SIGNAL LAMPS CIRCUIT

1. Disconnect BCM connector and rear combination lamp connector.

2. Check continuity between BCM harness connector M20 terminal 61 (G/Y) and rear combination lamp RH harness connector C14 terminal 8 (G/Y).

61 (G/Y) - 8 (G/Y) : Continuity should exist.


3. Check continuity between BCM harness connector M20 terminal 60 (G/B) and rear combination lamp LH harness connector C13 terminal 8 (G/B).

60 (G/B) - 8 (G/B) : Continuity should exist.

OK or NG

OK >> GO TO 3.

NG >> Repair harness or connector.

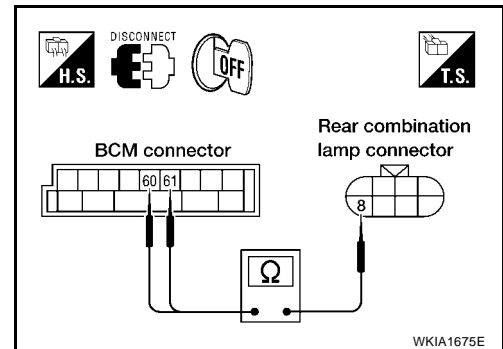

TURN SIGNAL AND HAZARD WARNING LAMPS


3. CHECK GROUND CIRCUIT

Check continuity between rear combination lamp harness connector C13 LH and C14 RH terminal 1 (B) and ground.

1 (B) - Ground : Continuity should exist.

OK or NG

- OK >> Check rear combination lamp connector for proper connection. Repair as necessary.
- NG >> Repair harness or connector.

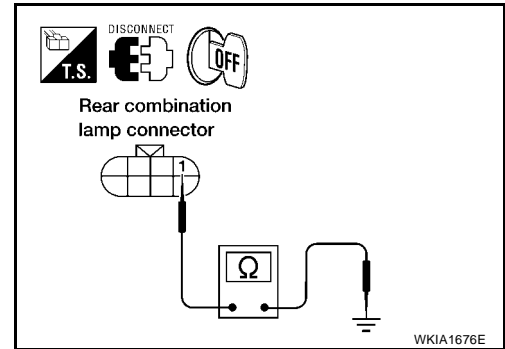

Hazard Warning Lamp Does Not Operate But Turn Signal Lamps Operate

EKS00757

1. CHECK BULB

Make sure bulb standard of each turn signal lamp is correct.

OK or NG


- OK >> GO TO 2.
- NG >> Replace turn signal lamp bulb. Refer to [LT-30, "FRONT TURN SIGNAL/PARKING LAMP"](#) for front turn signal bulb. Refer to [LT-118, "Bulb Replacement"](#) for rear turn signal bulb.

2. CHECK HAZARD SWITCH INPUT SIGNAL

With CONSULT-II

Select "BCM" on CONSULT-II. With "FLASHER" data monitor, make sure "HAZARD SW" turns ON-OFF linked with operation of hazard switch.

When hazard switch is in ON position : HAZARD SW ON

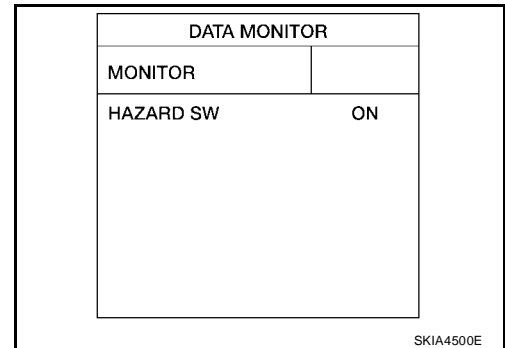

SKIA4500E


Without CONSULT-II

Check voltage between BCM harness connector M18 terminal 29 (W/B) and ground.

Terminals		(-)	Condition	Voltage (Approx.)
(+)	Terminal (Wire color)			
Connector	Terminal (Wire color)			
M18	29 (W/B)	Ground	Hazard switch is ON	0V
			Hazard switch is OFF	5V

OK or NG

- OK >> Replace BCM. Refer to [BCS-25, "Removal and Installation of BCM"](#).
- NG >> GO TO 3.

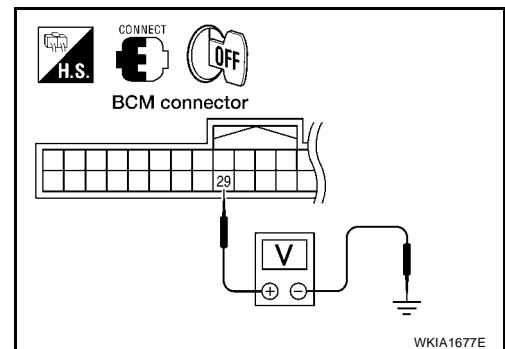

WKIA1677E

TURN SIGNAL AND HAZARD WARNING LAMPS


3. CHECK HAZARD SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and hazard switch connector.
3. Check continuity between BCM harness connector M18 terminal 29 (W/B) and hazard switch harness connector M55 terminal 4 (W/B).

29 (W/B) - 4 (W/B) : Continuity should exist.

OK or NG

- OK >> GO TO 4.
 NG >> Repair harness or connector.

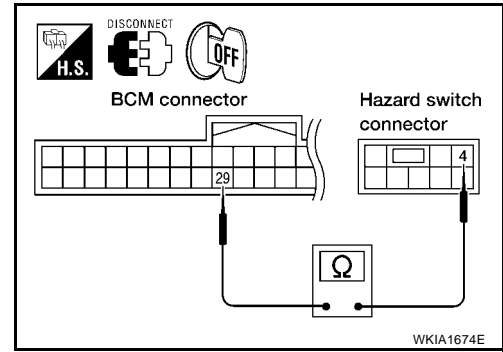


4. CHECK GROUND

Check continuity between hazard switch harness connector M55 terminal 6 (B) and ground.

6 (B) - Ground : Continuity should exist.

OK or NG

- OK >> GO TO 5.
 NG >> Repair harness or connector.

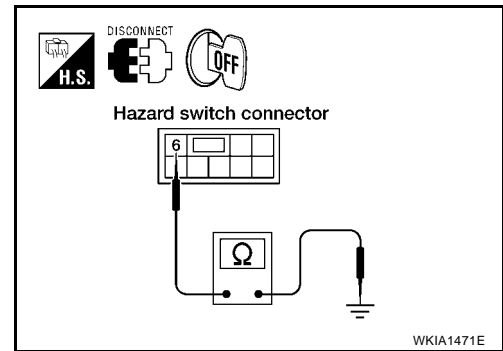


5. CHECK HAZARD SWITCH

1. Disconnect hazard switch connector.
2. Check continuity of hazard switch.

Terminal		Condition	Continuity
Hazard switch			
4	6	Hazard switch is ON	Yes
		Hazard switch is OFF	No

OK or NG

- OK >> Replace BCM if turn signal lamps does not work after setting the connector again. Refer to [BCS-25, "Removal and Installation of BCM"](#) .
 NG >> Replace hazard switch. Refer to [LT-91, "Removal and Installation"](#) .

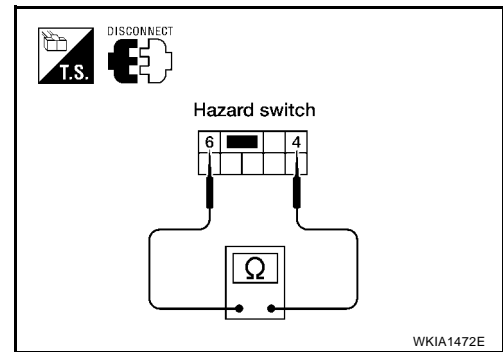

Turn Signal Indicator Lamp Does Not Operate

EKS00758

1. CHECK CAN COMMUNICATION SYSTEM

Check CAN communication. Refer to [LAN-8, "CAN COMMUNICATION"](#) .

OK or NG

- OK >> Replace combination meter. Refer to [DI-25, "Removal and Installation of Combination Meter"](#) .
 NG >> Repair as necessary.

TURN SIGNAL AND HAZARD WARNING LAMPS

Bulb Replacement (Front Turn Signal Lamp)

EKS00759

Refer to [LT-30, "FRONT TURN SIGNAL/PARKING LAMP"](#) .

A

Bulb Replacement (Rear Turn Signal Lamp)

EKS0075A

Refer to [LT-118, "Bulb Replacement"](#) in REAR COMBINATION LAMP.

B

Removal and Installation of Front Turn Signal Lamp

EKS0075B

Refer to [LT-31, "Removal and Installation"](#) .

C

Removal and Installation of Rear Turn Signal Lamp

EKS0075C

Refer to [LT-118, "Removal and Installation"](#) in REAR COMBINATION LAMP.

D

E

F

G

H

I

J

LT

L

M

LIGHTING AND TURN SIGNAL SWITCH

LIGHTING AND TURN SIGNAL SWITCH


PF2:25540

Removal and Installation

EKS0075D

REMOVAL

1. Remove steering column cover.
2. While pressing tabs, pull lighting and turn signal switch toward driver door and disconnect from the base.

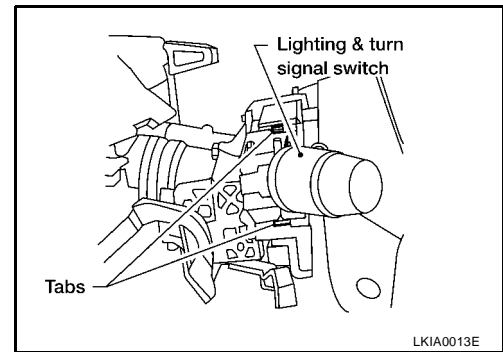

LKIA0013E

INSTALLATION

Installation is in the reverse order of removal.

HAZARD SWITCH

HAZARD SWITCH


PF2:25290

Removal and Installation

EKS0075E

REMOVAL

1. Remove cluster lid C. Refer to [IP-12, "CLUSTER LID C"](#).
2. While pressing the tab, push out the hazard switch.

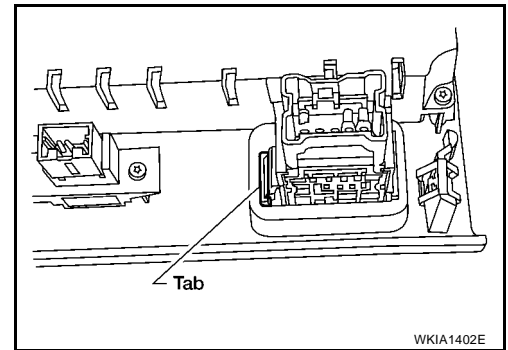

INSTALLATION

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
LT
L
M

COMBINATION SWITCH

PFP:25567



EKS0075F

COMBINATION SWITCH

Wiring Diagram — COMBSW —

LT-COMBSW-01

— : DATA LINE

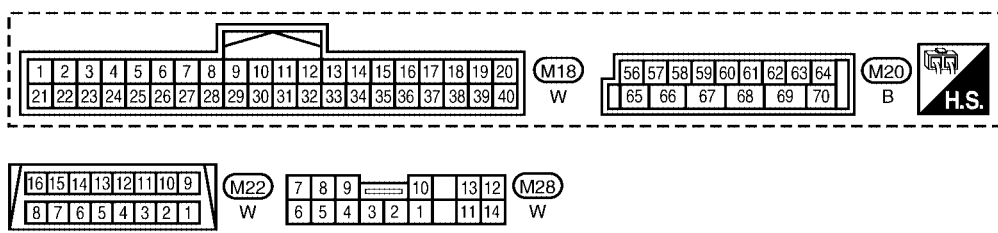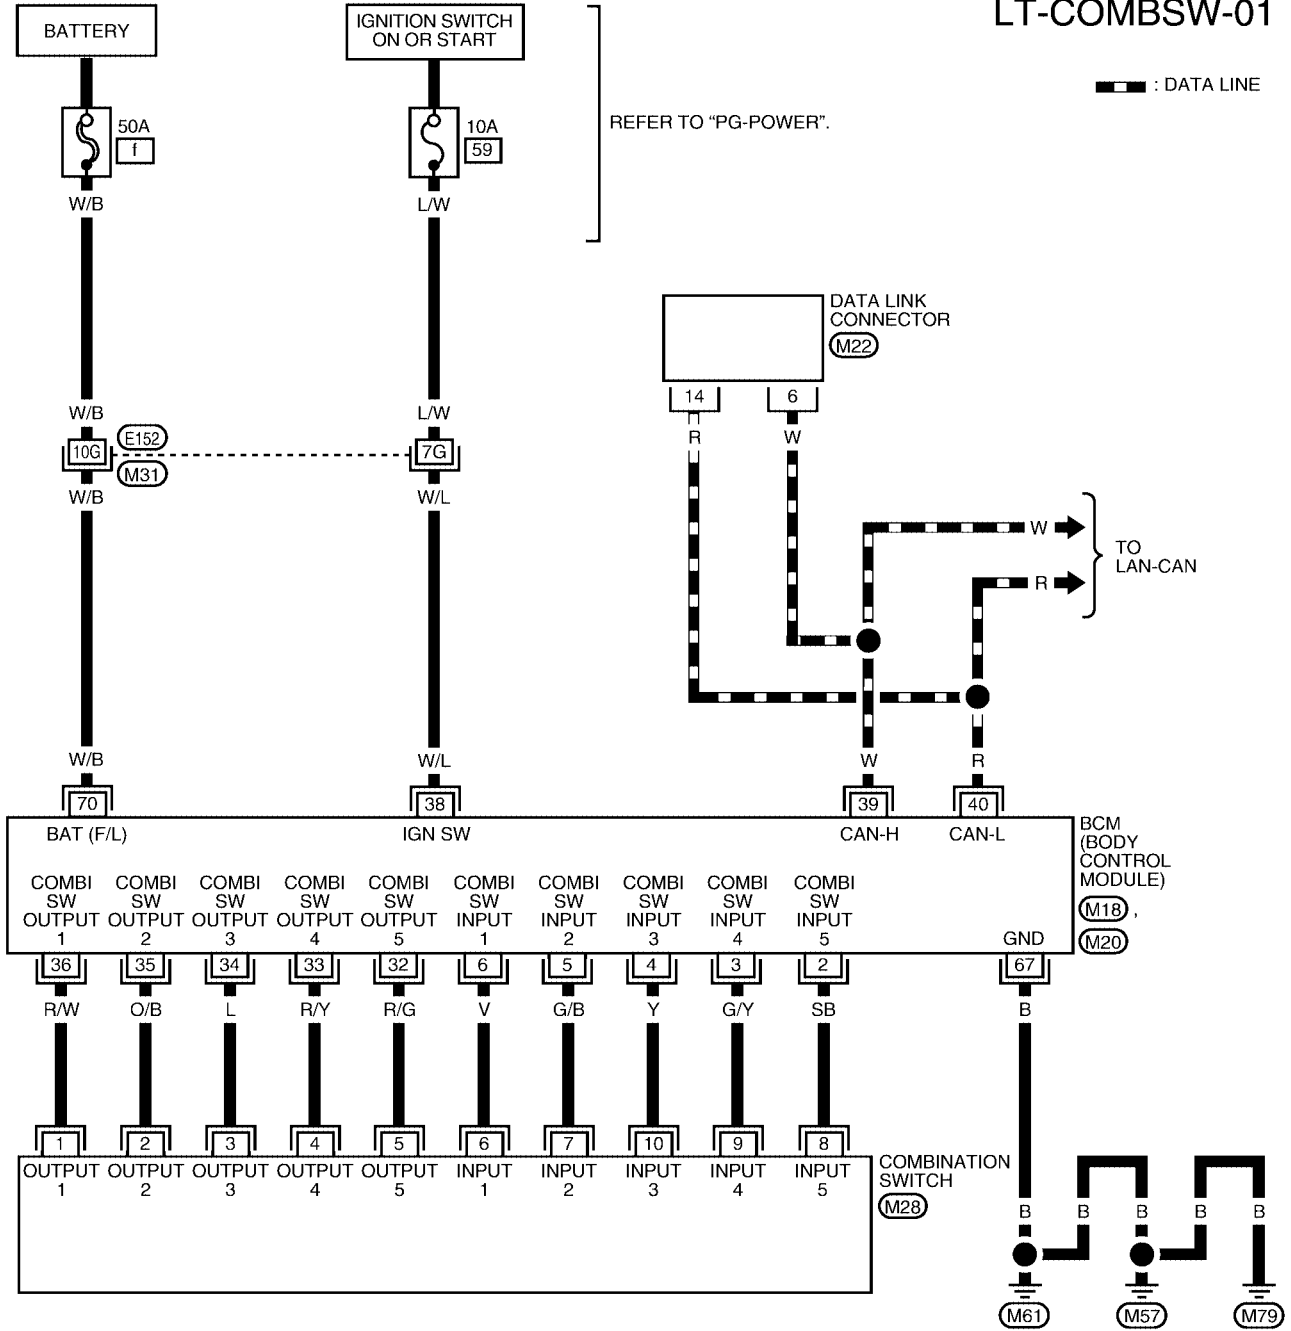

REFER TO THE FOLLOWING.

(M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA1158E

COMBINATION SWITCH

Combination Switch Reading Function

EKS0075G

For details, refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#).

CONSULT-II Function (BCM)

EKS0075H

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

CONSULT-II OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

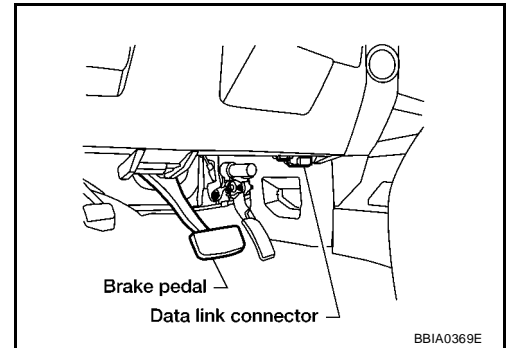

2. Touch "START (NISSAN BASED VHCL)".

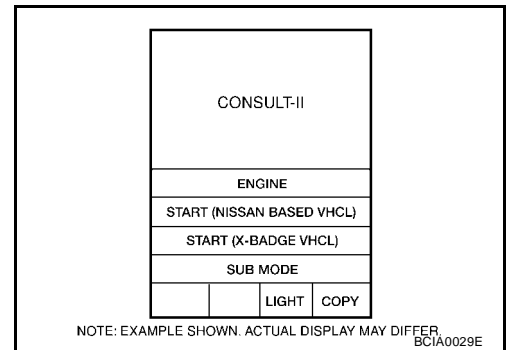


3. Touch "BCM" on "SELECT SYSTEM" screen. If "BCM" is not indicated, go to [GI-38, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

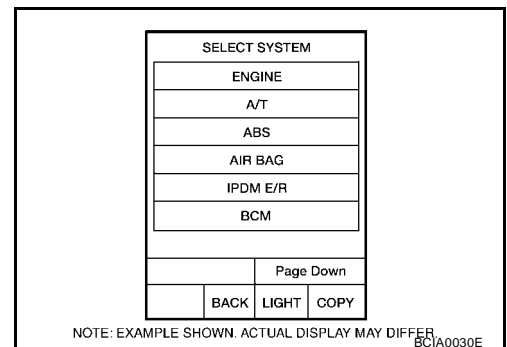

COMBINATION SWITCH

4. Touch "COMB SW".

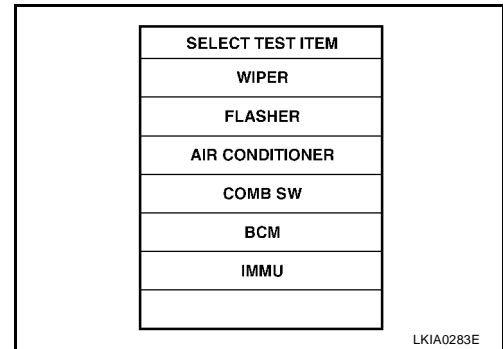

DATA MONITOR

Operation Procedure

1. Touch "COMB SW" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on "SELECT MONITOR ITEM" screen.

ALL SIGNALS	Monitors all the signals.
SELECTION FROM MENU	Selects and monitors individual signal.

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch items to be monitored. When "ALL SIGNALS" is selected, all the signals will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

Display Item List

Monitor item name "OPERATION OR UNIT"	Contents
TURN SIGNAL R "ON/OFF"	Displays "Turn Right (ON)/Other (OFF)" status, determined from lighting switch signal.
TURN SIGNAL L "ON/OFF"	Displays "Turn Left (ON)/Other (OFF)" status, determined from lighting switch signal.
HI BEAM SW "ON/OFF"	Displays status (high beam switch: ON/Others: OFF) of high beam switch judged from lighting switch signal.
HEAD LAMP SW 1 "ON/OFF"	Displays "Headlamp switch 1 (ON)/Other (OFF)" status, determined from lighting switch signal.
HEAD LAMP SW 2 "ON/OFF"	Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
LIGHT SW 1ST "ON/OFF"	Displays status (lighting switch 1st position: ON/Others: OFF) of lighting switch judged from lighting switch signal.
PASSING SW "ON/OFF"	Displays status (flash-to-pass switch: ON/Others: OFF) of flash-to-pass switch judged from lighting switch signal.
AUTO LIGHT SW "ON/OFF"	Displays "Auto light switch (ON)/Other (OFF)" status, determined from lighting switch signal.
FR FOG SW "ON/OFF"	Displays "Front fog lamp switch (ON)/Other (OFF)" status, determined from lighting switch signal.
FR WIPER HI "ON/OFF"	Displays "Front Wiper HI (ON)/Other (OFF)" status, determined from wiper switch signal.
FR WIPER LOW "ON/OFF"	Displays "Front Wiper LOW (ON)/Other (OFF)" status, determined from wiper switch signal.
FR WIPER INT "ON/OFF"	Displays "Front Wiper INT (ON)/Other (OFF)" status, determined from wiper switch signal.
FR WASHER SW "ON/OFF"	Displays "Front Washer Switch (ON)/Other (OFF)" status, determined from wiper switch signal.
INT VOLUME [1 - 7]	Displays intermittent operation knob setting (1 - 7), determined from wiper switch signal.

COMBINATION SWITCH

EKS0075I

Combination Switch Inspection

1. SYSTEM CHECK

Referring to table below, check to which system the malfunctioning switch belongs.

System 1	System 2	System 3	System 4	System 5
—	FR WASHER	FR WIPER LO	TURN LH	TURN RH
FR WIPER HI	—	FR WIPER INT	PASSING	HEAD LAMP1
INT VOLUME 1	—	—	HEAD LAMP2	HI BEAM
—	INT VOLUME 3	AUTO LIGHT	—	TAIL LAMP
INT VOLUME 2	—	—	FR FOG	—

>> GO TO 2.

2. SYSTEM CHECK

 With CONSULT-II

CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.

1. Connect CONSULT-II, and select "COMB SW" on "SELECT TEST ITEM" screen.
2. Select "DATA MONITOR".
3. Select "START", and confirm that other switches in malfunctioning system operate normally.

Example: When auto light switch is malfunctioning, confirm that "FRONT WIPER LOW" and "FRONT WIPER INT" in System 3, to which the auto light switch belongs, turn ON-OFF normally.

DATA MONITOR	
MONITOR	
TURN SIGNAL R	OFF
TURN SIGNAL L	OFF
HIBEAM SW	OFF
HEAD LAMP SW1	OFF
HEAD LAMP SW2	OFF
LIGHT SW 1ST	OFF
PASSING SW	OFF
AUTO LIGHT SW	OFF
FR FOG SW	OFF
	Page Down
	RECORD
MODE	BACK
LIGHT	COPY

SKIA7075E

 Without CONSULT-II

Operate combination switch, and confirm that other switches in malfunctioning system operate normally.

Example: When auto light switch is malfunctioning, confirm that "FRONT WIPER LOW" and "FRONT WIPER INT" in System 3, to which the auto light switch belongs, operate normally.

Check results

Other switches in malfunctioning system operate normally.>>Replace lighting switch or wiper switch.


Other switches in malfunctioning system do not operate normally.>>GO TO 3.

COMBINATION SWITCH

3. HARNESS INSPECTION

1. Disconnect BCM and combination switch connectors.
2. Check for continuity between BCM harness connector of the suspect system and the corresponding combination switch connector terminals.

Suspect system	Terminals				Continuity	
	BCM		Combination switch			
	Connector	Terminal (Wire color)	Connector	Terminal (Wire color)		
1	M18	Input 1	6 (V)	M28	6 (V)	Yes
		Output 1	36 (R/W)		1 (R/W)	
2		Input 2	5 (G/B)		7 (G/B)	
		Output 2	35 (O/B)		2 (O/B)	
3		Input 3	4 (Y)		10 (Y)	
		Output 3	34 (L)		3 (L)	
4		Input 4	3 (G/Y)		9 (G/Y)	
		Output 4	33 (R/Y)		4 (R/Y)	
5		Input 5	2 (SB)		8 (SB)	
		Output 5	32 (R/G)		5 (R/G)	

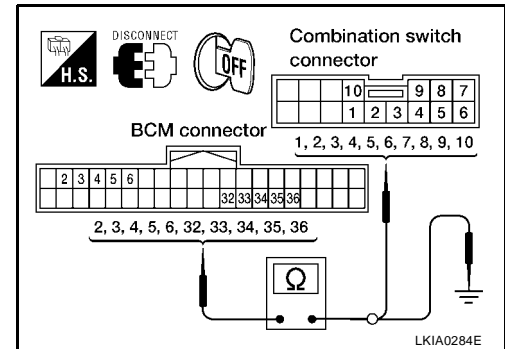

3. Check for continuity between each terminal of BCM harness connector in suspect malfunctioning system and ground.

Suspect system	Terminals				Continuity
	BCM				
	Connector	Terminal (Wire color)			
1	M18	Input 1	6 (V)	Ground	No
		Output 1	36 (R/W)		
2		Input 2	5 (G/B)		
		Output 2	35 (O/B)		
3		Input 3	4 (Y)		
		Output 3	34 (L)		
4		Input 4	3 (G/Y)		
		Output 4	33 (R/Y)		
5		Input 5	2 (SB)		
		Output 5	32 (R/G)		

OK or NG

OK >> GO TO 4.

NG >> Check harness between BCM and combination switch for open or short circuit.

COMBINATION SWITCH


4. BCM OUTPUT TERMINAL INSPECTION

1. Turn lighting switch and wiper switch to OFF.
2. Set wiper dial to position 4.
3. Connect BCM and combination switch connectors, and check BCM output terminal voltage waveform of suspect malfunctioning system.

Suspect system	Terminals	
	Combination switch (+)	
	Connector	Terminal (Wire color)
1	M28	Output 1 1 (R/W)
2		Output 2 2 (O/B)
3		Output 3 3 (L)
4		Output 4 4 (R/Y)
5		Output 5 5 (R/G)

OK or NG

- OK >> Open circuit in combination switch, GO TO 5.
 NG >> Replace BCM. Refer to [BCS-25, "Removal and Installation of BCM"](#) .

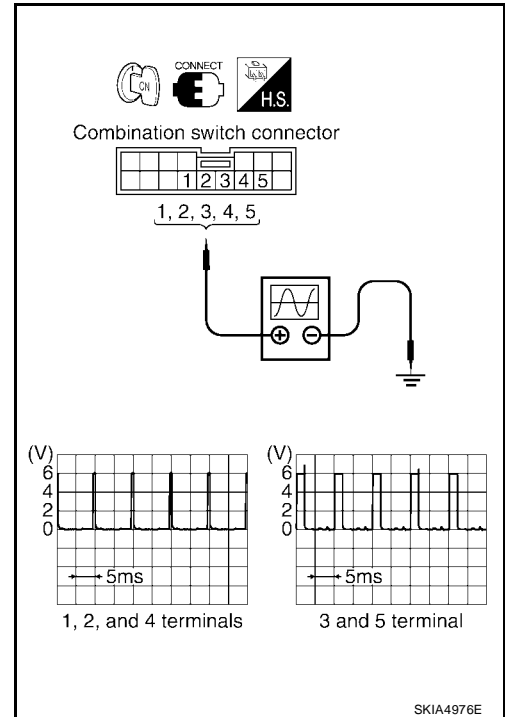

5. COMBINATION SWITCH INSPECTION

Referring to table below, perform combination switch inspection.

Procedure									
1	2		3	4		5	6		7
Replace lighting switch.	Confirm check results.	OK	INSPECTION END	Confirm check results.	OK	INSPECTION END	Confirm check results.	OK	INSPECTION END
		NG	Replace wiper switch.		NG	Replace switch base.		NG	Confirm symptom again.

>> Inspection End.

Removal and Installation

For details, refer to [LT-90, "Removal and Installation"](#) .

Switch Circuit Inspection

For details, refer to [LT-95, "Combination Switch Inspection"](#) .

STOP LAMP

STOP LAMP

PF2:26550

System Description

EKS0075L

Power is supplied at all times

- through 10A fuse [No. 20, located in fuse block (J/B)]
- to stop lamp switch terminal 1 and
- to stop lamp relay terminal 1 (with VDC).

When the brake pedal is pressed, the stop lamp switch is closed and power is supplied

- through stop lamp switch terminal 2
- to stop lamp relay terminal 3 (with VDC), and
- through stop lamp relay terminal 4 (with VDC)
- to rear combination lamp LH and RH terminal 7, and
- to high-mounted stop lamp terminal 1.

Ground is supplied

- to rear combination lamp LH and RH terminal 5
- through grounds E9, E15 and E24, and
- to high-mounted stop lamp terminal 2
- through grounds B117 and B132.


With power and ground supplied, the stop lamps illuminate.

STOP LAMP

Wiring Diagram — STOP/L —

EKS0075M

LT-STOP/L-01

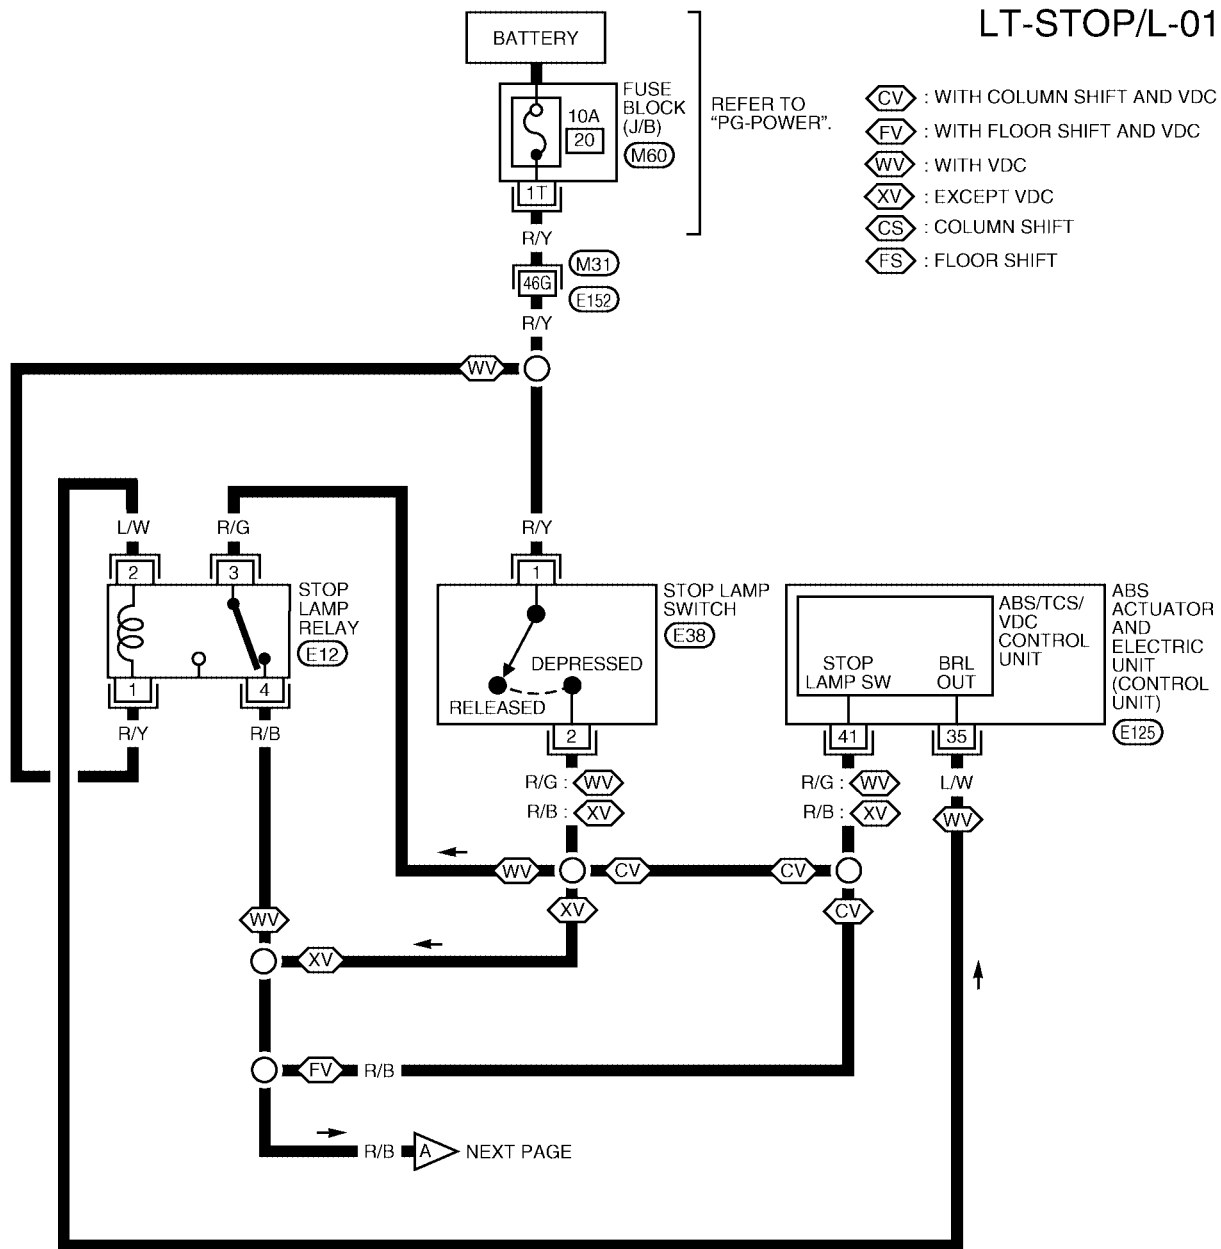


- CV : WITH COLUMN SHIFT AND VDC
- FV : WITH FLOOR SHIFT AND VDC
- WV : WITH VDC
- XV : EXCEPT VDC
- CS : COLUMN SHIFT
- FS : FLOOR SHIFT

REFER TO "PG-POWER".

A
B
C
D
E
F
G
H
I
J
K
L
M

LT







REFER TO THE FOLLOWING.
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)
 (E125) - ELECTRICAL UNITS

WKWA1534E

STOP LAMP

LT-STOP/L-02

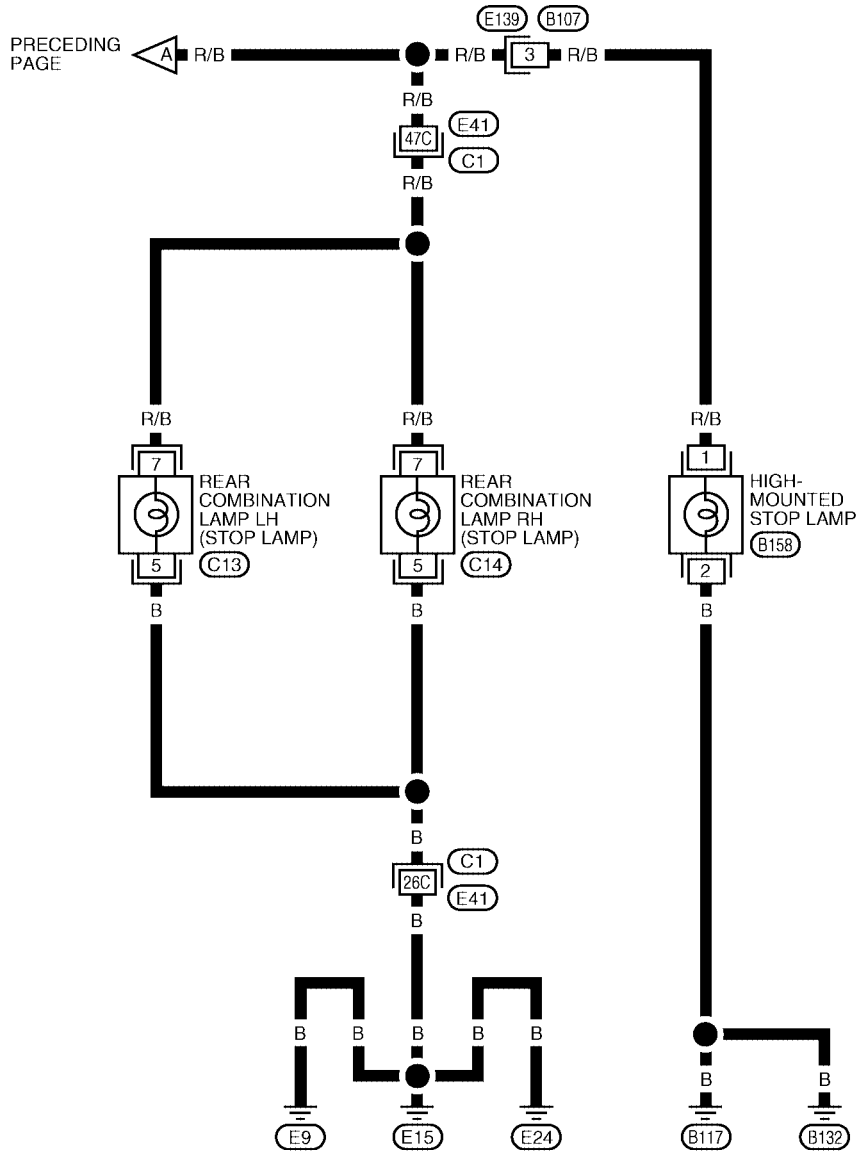

REFER TO THE FOLLOWING.
 (C1) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA1510E

STOP LAMP

High-Mounted Stop Lamp

EKS0075N


BULB REPLACEMENT

1. Remove the high-mounted stop lamp. Refer to [LT-101, "REMOVAL AND INSTALLATION"](#) .
2. Turn bulb socket counter clockwise to remove it from lamp housing.
3. Pull bulb from socket.

REMOVAL AND INSTALLATION

1. Remove access caps.
2. Disconnect the connector.
3. Remove 2 nuts and remove high-mounted stop lamp.
4. Installation is in the reverse order of removal.

High-mounted stop lamp nuts: 3.38 N·m (0.34 kg·m, 30 in·lb)

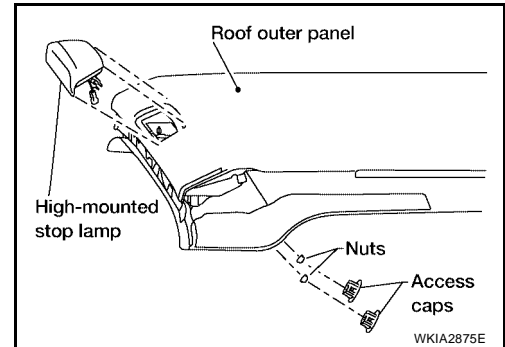

Stop Lamp

BULB REPLACEMENT

Refer to [LT-118, "Bulb Replacement"](#) in REAR COMBINATION LAMP.

REMOVAL AND INSTALLATION

Refer to [LT-118, "Removal and Installation"](#) in REAR COMBINATION LAMP.

EKS0075O

A

B

C

D

E

F

G

H

I

J

LT

L

M

BACK-UP LAMP

PF#:26550




EKS0075P

BACK-UP LAMP

Wiring Diagram — BACK/L —

LT-BACK/L-01

: WITH NAVI

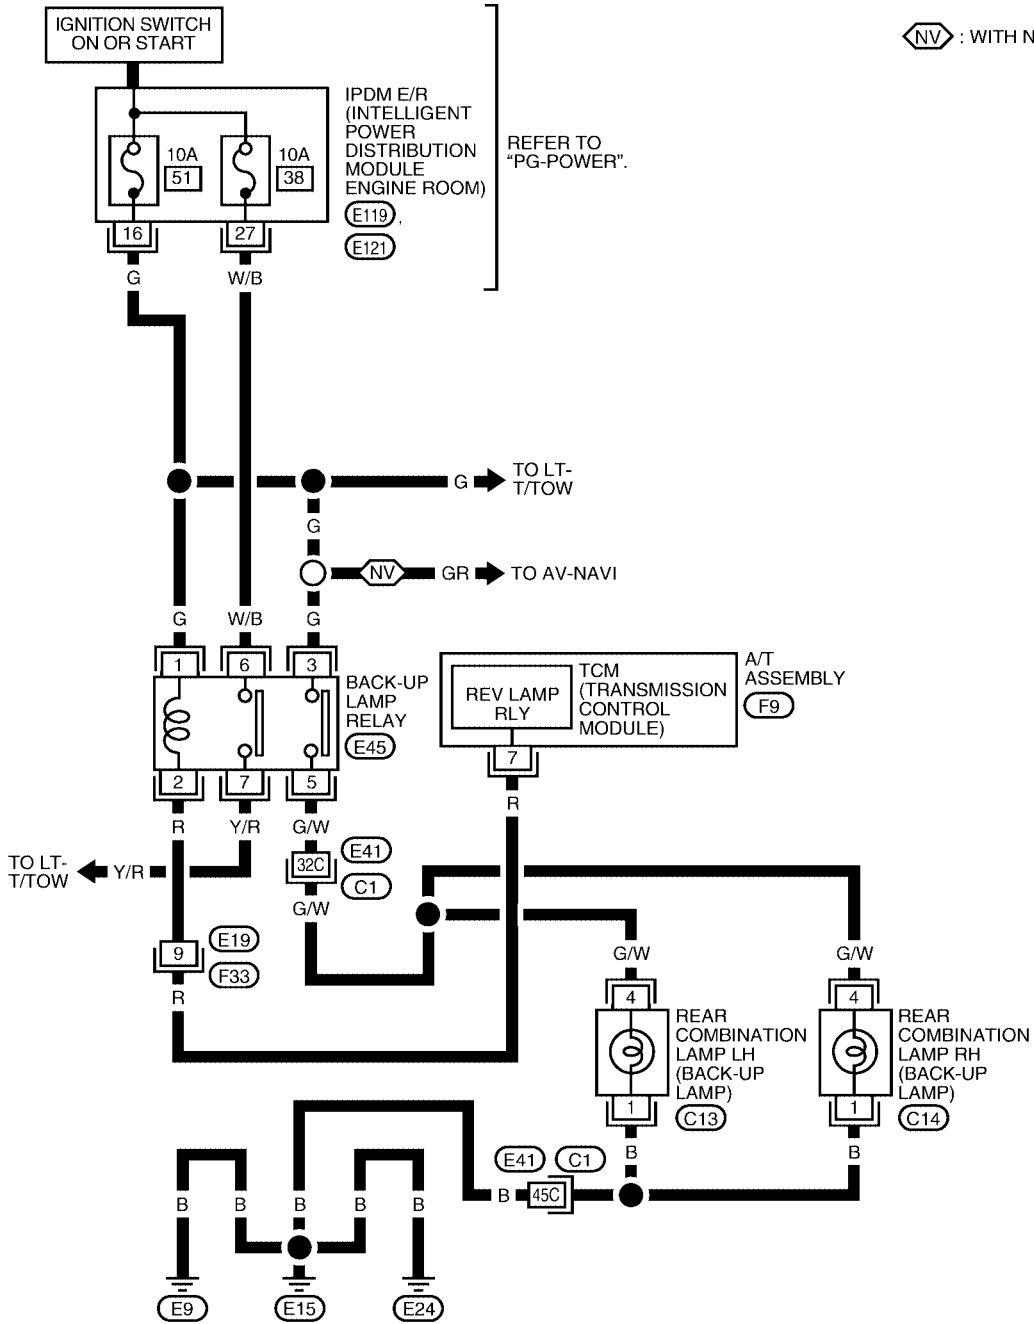

REFER TO THE FOLLOWING.

- SUPER MULTIPLE JUNCTION (SMJ)

WKWA1068E

BACK-UP LAMP

Bulb Replacement

EKS0075Q

Refer to [LT-118, "Bulb Replacement"](#) in REAR COMBINATION LAMP.

A

Removal and Installation

EKS0075R

Refer to [LT-118, "Removal and Installation"](#) in REAR COMBINATION LAMP.

B

C

D

E

F

G

H

I

J

LT

L


M

PARKING, LICENSE PLATE AND TAIL LAMPS

PFP:26550

Component Parts and Harness Connector Location

EKS0075S

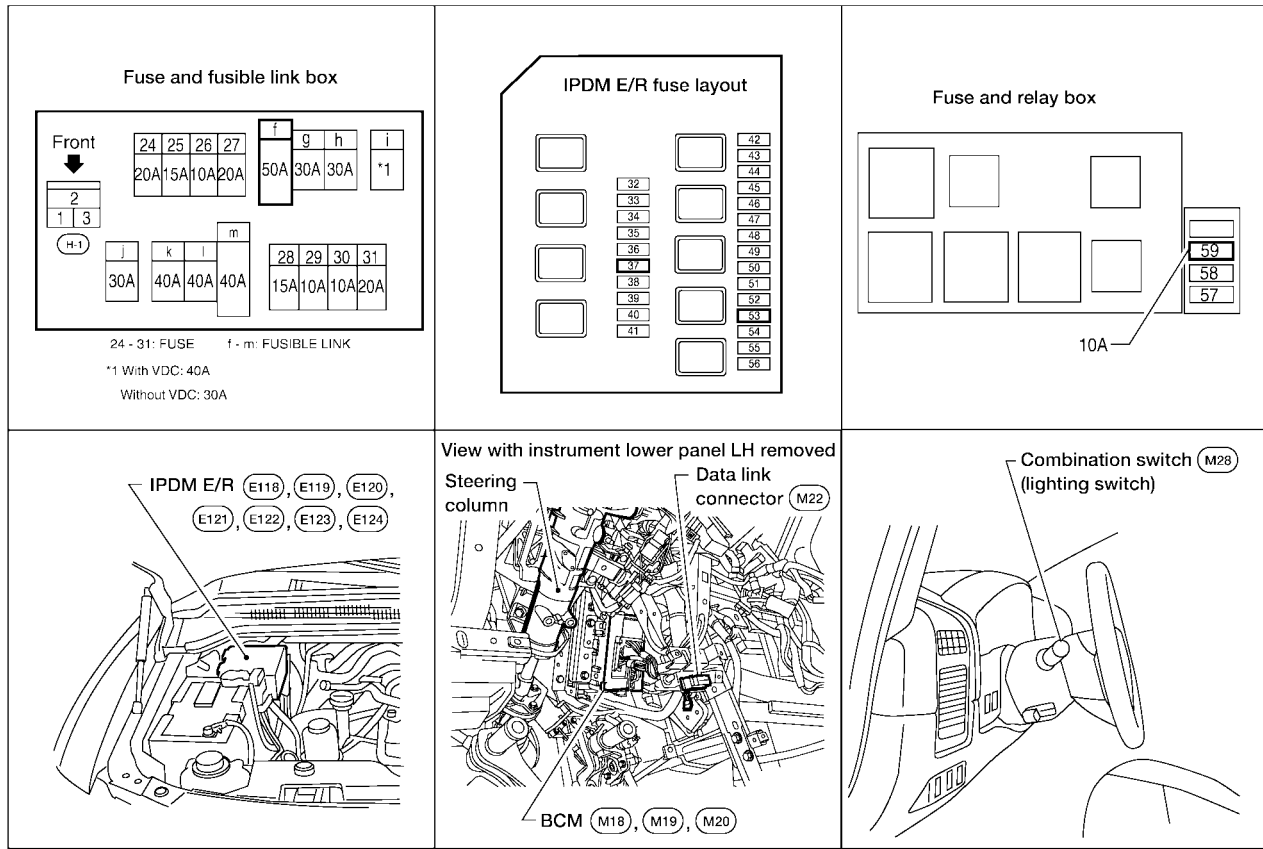

WKIA3584E

System Description

EKS0075T

Control of the parking, license plate, and tail lamp operation is dependent upon the position of the lighting switch (combination switch). When the lighting switch is placed in the 1ST position, the BCM (body control module) receives input signal requesting the parking, license plate, side marker and tail lamps to illuminate. This input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the tail lamp relay coil. This relay, when energized, directs power to the parking, license plate and tail lamps, which then illuminate.

Power is supplied at all times

- to tail lamp relay, located in the IPDM E/R, and
- through 20A fuse (No. 53, located in the IPDM E/R)
- to CPU of the IPDM E/R, and
- to ignition relay, located in the IPDM E/R, and
- through 50A fusible link (letter f, located in the fuse and fusible link box)
- to BCM terminal 70.

With the ignition switch in the ON or START position, power is supplied

- through 10A fuse (No. 59, located in the fuse and relay box)
- to BCM terminal 38, and
- to ignition relay, located in the IPDM E/R.

Ground is supplied

- to BCM terminal 67
- through grounds M57, M61 and M79, and
- to IPDM E/R terminals 38 and 59
- through grounds E9, E15 and E24.

PARKING, LICENSE PLATE AND TAIL LAMPS

OPERATION BY LIGHTING SWITCH

With the lighting switch in the 1ST or 2ND position (or if the auto light system is activated), the BCM receives input signal requesting the parking, license plate, side marker and tail lamps to illuminate. This input signal is communicated to the IPDM E/R across the CAN communication lines. The CPU in the IPDM E/R controls the tail lamp relay coil, which when energized, directs power

- through 10A fuse (No. 37, located in the IPDM E/R)
- through IPDM E/R terminal 57
- to front combination lamp LH and RH terminal 6
- to license plate lamps terminal + and
- to rear combination lamp LH and RH terminal 6.

Ground is supplied

- to front combination lamp LH and RH terminal 4
- to rear combination lamp LH and RH terminal 1 and
- to license plate lamps terminal –
- through grounds E9, E15 and E24.

With power and ground supplied, the parking, license plate and tail lamps illuminate.

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#) .

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 1ST (or 2ND) position, and the ignition switch is turned from ON or ACC to OFF, the battery saver control feature is activated.

Under this condition, the parking, license and tail lamps remain illuminated for 5 minutes, then the parking, license plate and tail lamps are turned off.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

CAN Communication System Description

EKS0075U

Refer to [LAN-8, "CAN COMMUNICATION"](#) .

A

B

C

D

E

F

G

H

I

J

LT


L

M

PARKING, LICENSE PLATE AND TAIL LAMPS

Schematic

EKS0075V

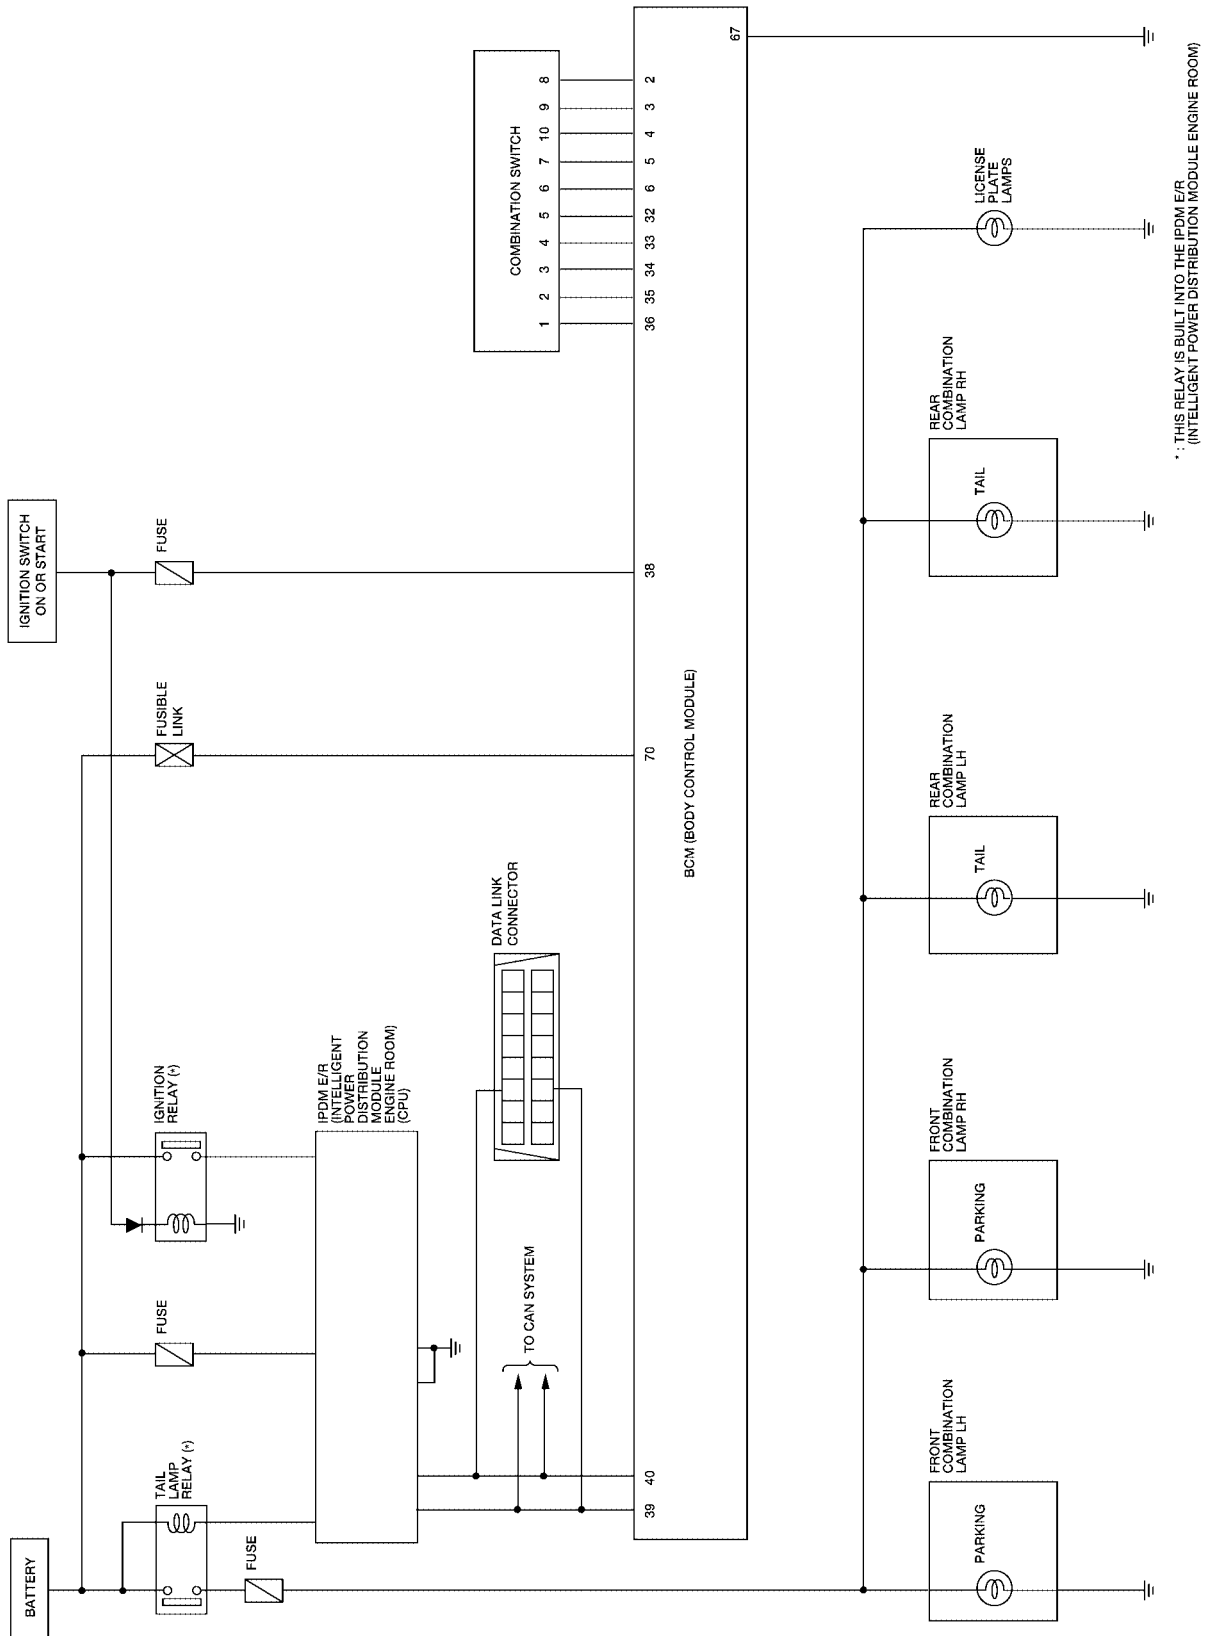



WKWA1069E

PARKING, LICENSE PLATE AND TAIL LAMPS

Wiring Diagram — TAIL/L —

EKS0075W



LT-TAIL/L-01

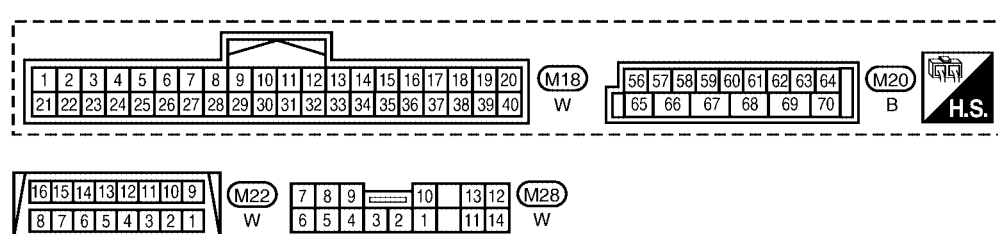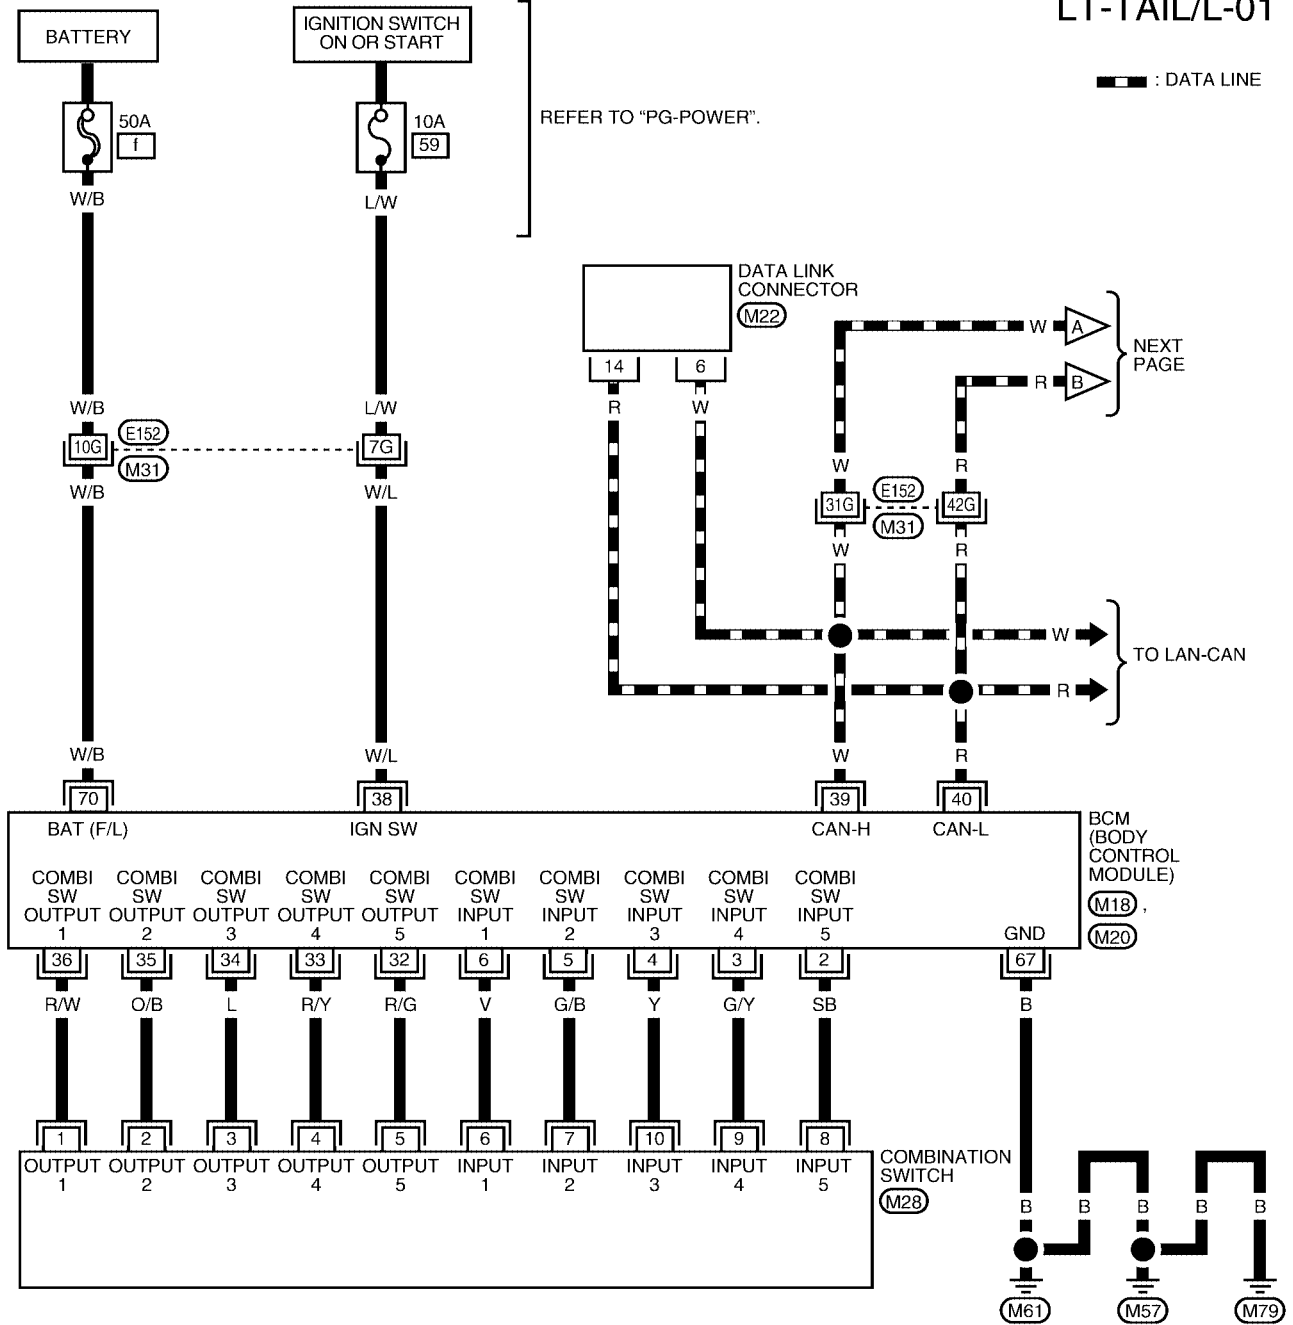

WKWA1159E

PARKING, LICENSE PLATE AND TAIL LAMPS



LT-TAIL/L-02

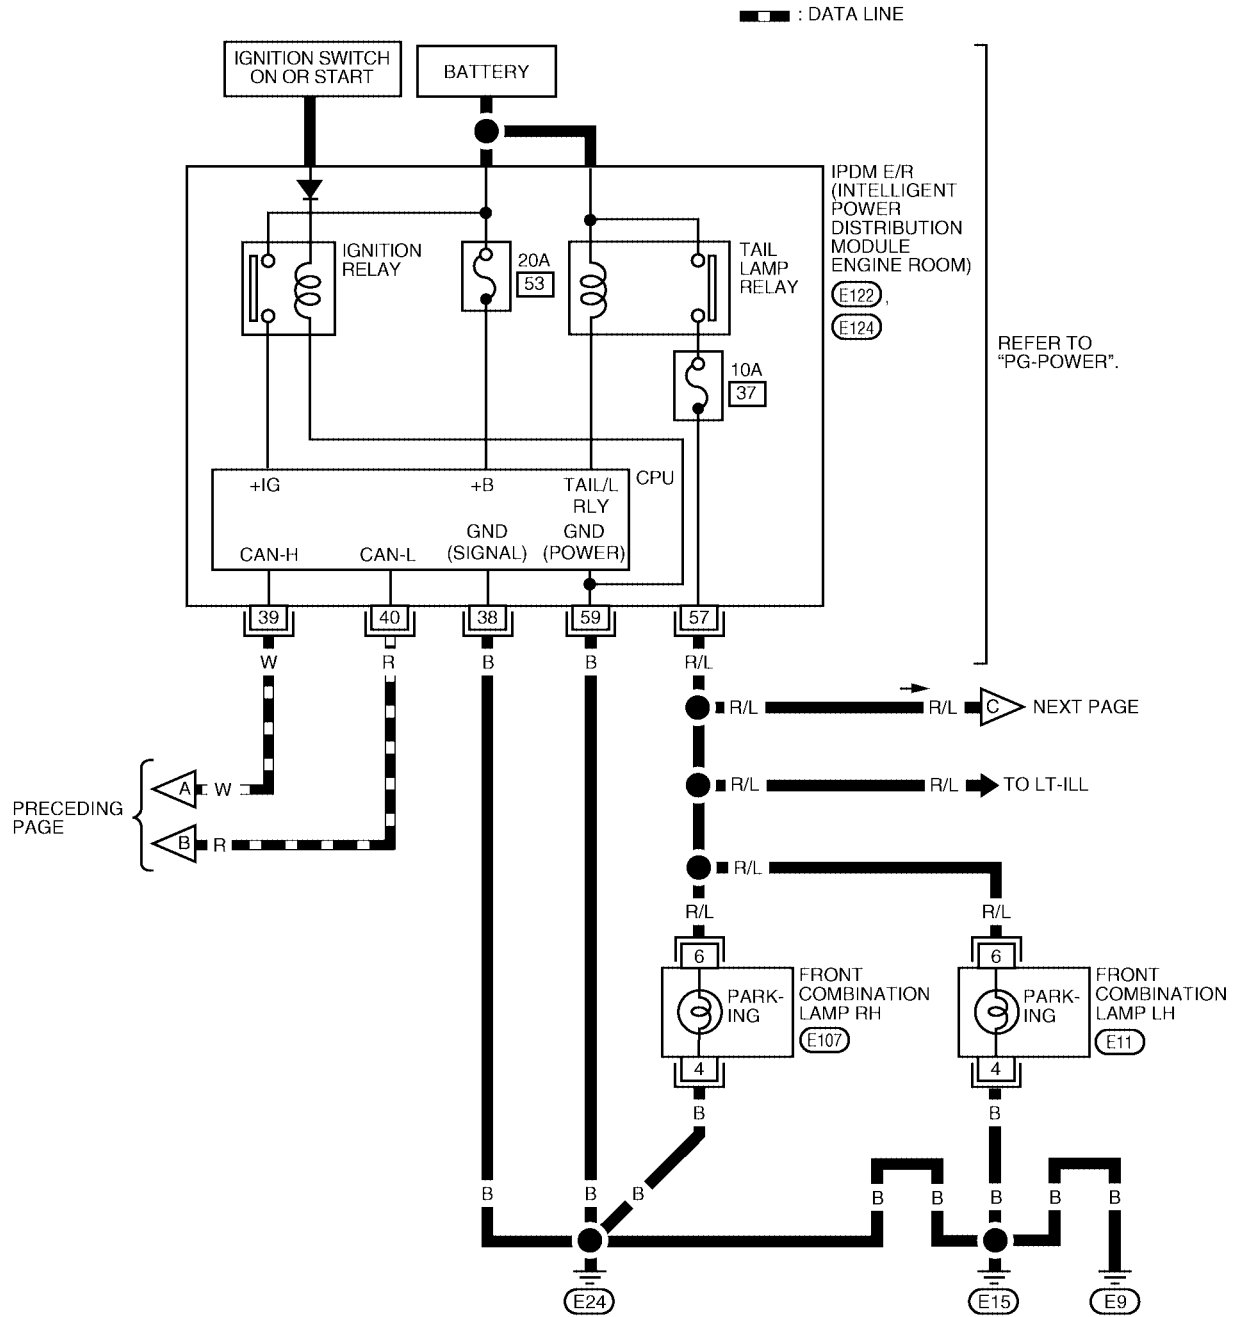

WKWA1480E

PARKING, LICENSE PLATE AND TAIL LAMPS

LT-TAIL/L-03

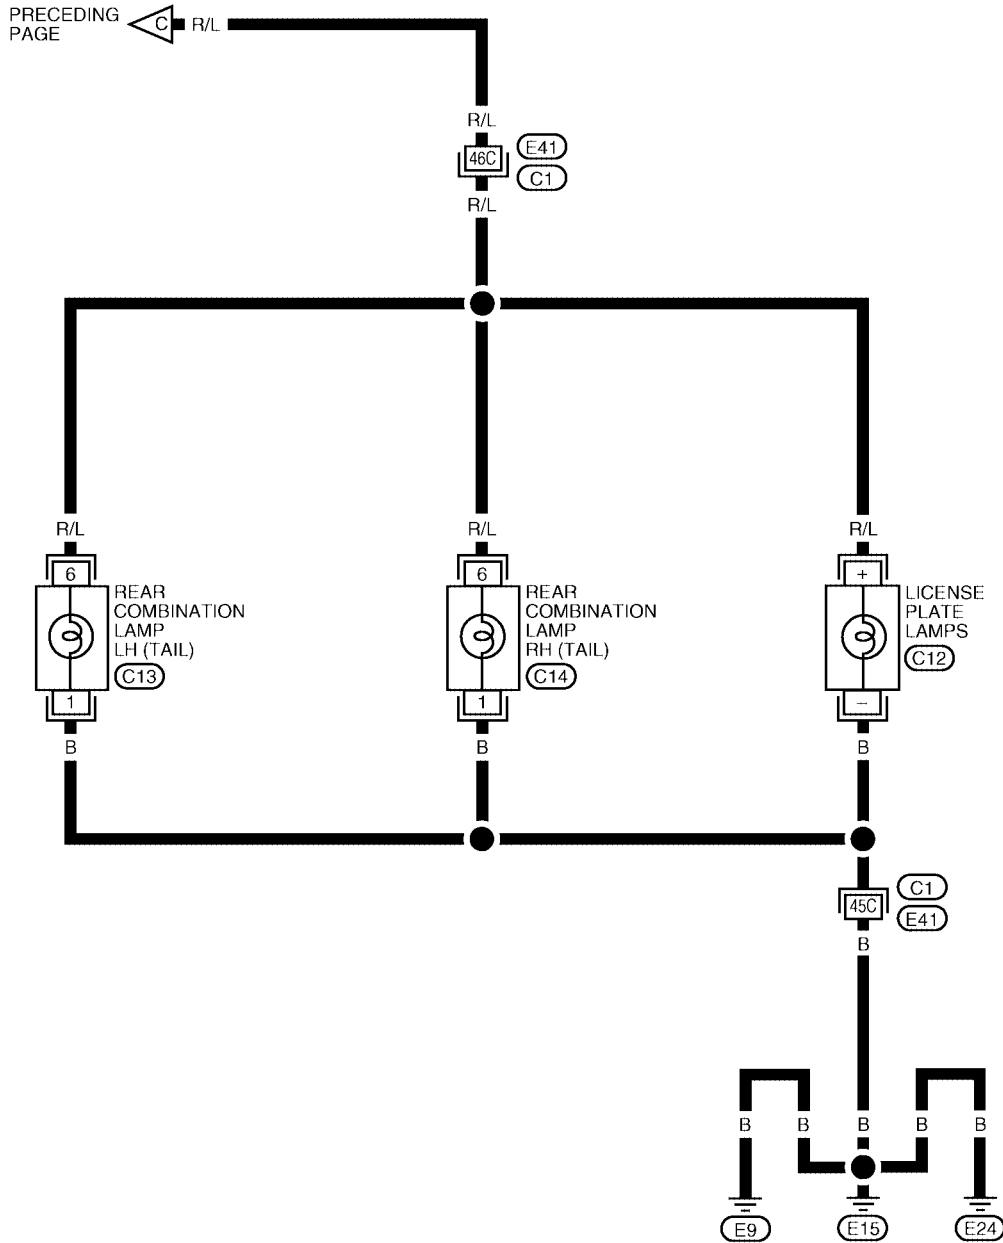






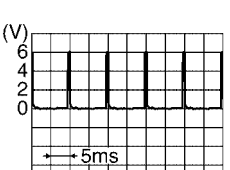

REFER TO THE FOLLOWING.
 (C1) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA1562E


PARKING, LICENSE PLATE AND TAIL LAMPS

Terminals and Reference Values for BCM

EKS0075X

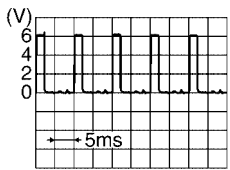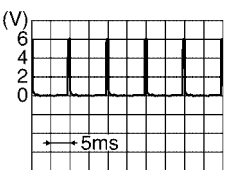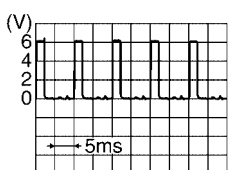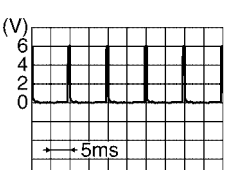Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
2	SB	Combination switch input 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>
3	G/Y	Combination switch input 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>
4	Y	Combination switch input 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>
5	G/B	Combination switch input 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>
6	V	Combination switch input 1			
32	R/G	Combination switch output 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>
33	R/Y	Combination switch output 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>
34	L	Combination switch output 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>

PARKING, LICENSE PLATE AND TAIL LAMPS

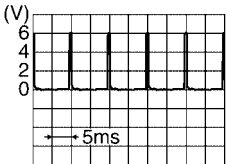Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
35	O/B	Combination switch output 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	
36	R/W	Combination switch output 1			
38	W/L	Ignition switch (ON)	ON	—	Battery voltage
39	W	CAN-H	—	—	—
40	R	CAN-L	—	—	—
67	B	Ground	ON	—	0V
70	W/B	Battery power supply (fusible link)	OFF	—	Battery voltage

Terminals and Reference Values for IPDM E/R

EKS0075Y

Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)	
			Ignition switch	Operation or condition		
38	B	Ground	ON	—	0V	
39	W	CAN-H	—	—	—	
40	R	CAN-L	—	—	—	
57	R/L	Parking, license, and tail lamp	ON	Lighting switch 1ST position	OFF	0V
					ON	Battery voltage
59	B	Ground	ON	—	0V	

How to Proceed With Trouble Diagnosis

EKS0075Z

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-104, "System Description"](#) .
3. Carry out the Preliminary Check. Refer to [LT-112, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Do the parking, license and tail lamps operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

LT

L

M

PARKING, LICENSE PLATE AND TAIL LAMPS

EKS00760

Preliminary Check CHECK POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES OR FUSIBLE LINK

Check for blown fuses or fusible link.

Unit	Power source	Fuse No.
BCM	Battery	f
	Ignition switch ON or START position	59
IPDM E/R	Battery	53
	Battery (Tail lamps ON)	37

Refer to [LT-107, "Wiring Diagram — TAIL/L —"](#) .

OK or NG

OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of blown fuse before installing new fuse. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) .

2. CHECK POWER SUPPLY CIRCUIT


1. Disconnect BCM connectors.
2. Check voltage between BCM harness connector and ground.

Terminals		Ignition switch position			
Connector	(+)	(-)	OFF	ACC	ON
	Terminal (Wire color)		0V	0V	Battery voltage
M18	38 (W/L)	Ground	0V	0V	Battery voltage
M20	70 (W/B)		Battery voltage	Battery voltage	Battery voltage

OK or NG

OK >> GO TO 3.

NG >> Check harness for open between BCM and fuse.

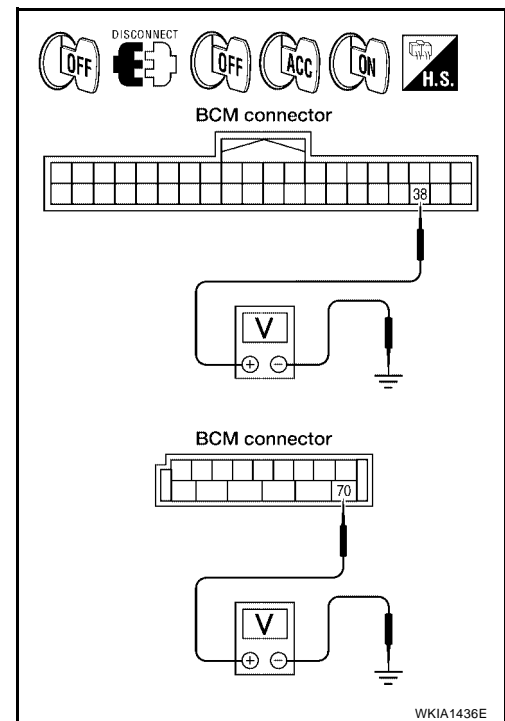

3. CHECK GROUND CIRCUIT


Check continuity between BCM harness connector and ground.

Terminals			Continuity
Connector	Terminal (Wire color)	Ground	
M20	67 (B)	Ground	Yes

OK or NG

OK >> Inspection End.

NG >> Check ground circuit harness.

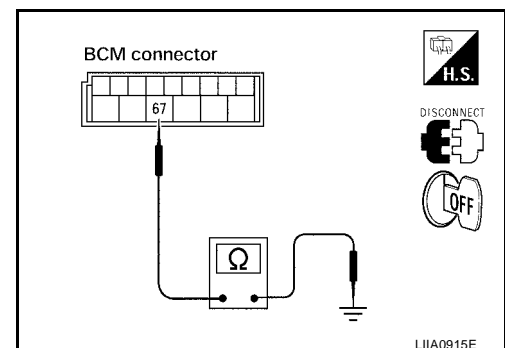

PARKING, LICENSE PLATE AND TAIL LAMPS

CONSULT-II Functions


EKS00761

Refer to [LT-17, "CONSULT-II Function \(BCM\)"](#) in HEADLAMP (FOR USA).
 Refer to [LT-20, "CONSULT-II Function \(IPDM E/R\)"](#) in HEADLAMP (FOR USA).

Parking, License Plate and/or Tail Lamps Do Not Illuminate

EKS00762

1. CHECK COMBINATION SWITCH INPUT SIGNAL

 With CONSULT-II
 Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "LIGHT SW 1ST" turns ON-OFF linked with operation of lighting switch.

**When lighting switch is in : LIGHT SW 1ST ON
 1ST position**

 Without CONSULT-II
 Refer to [LT-95, "Combination Switch Inspection"](#).


OK or NG

- OK >> GO TO 2.
- NG >> Check lighting switch. Refer to [LT-95, "Combination Switch Inspection"](#).


DATA MONITOR	
MONITOR	
LIGHT SW 1ST	ON

SKIA5956E

2. ACTIVE TEST

-  With CONSULT-II
- Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
 - Select "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
 - Touch "TAIL" on "ACTIVE TEST" screen.
 - Make sure parking, license plate and tail lamps operate.

Parking, license plate and tail lamps should operate

-  Without CONSULT-II
- Start auto active test. Refer to [PG-22, "Auto Active Test"](#).
 - Make sure parking, license plate and tail lamps operate.

Parking, license plate and tail lamps should operate

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 4.

ACTIVE TEST			
EXTERNAL LAMPS		OFF	
		TAIL	
LO		HI	
FOG			
MODE	BACK	LIGHT	COPY

WKIA1438E

3. CHECK IPDM E/R

- Select "IPDM E/R" on CONSULT-II, and select "DATA MONITOR" on "SELECT DIAG MODE" screen.
- Make sure "TAIL&CLR REQ" turns ON when lighting switch is in 1ST position.

**When lighting switch is in : TAIL&CLR REQ ON
 1ST position**

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-28, "Removal and Installation of IPDM E/R"](#).
- NG >> Replace BCM. Refer to [BCS-25, "Removal and Installation of BCM"](#).

DATA MONITOR			
MONITOR			
TAIL&CLR REQ		ON	
		RECORD	
MODE	BACK	LIGHT	COPY

SKIA5958E

PARKING, LICENSE PLATE AND TAIL LAMPS

4. CHECK INPUT SIGNAL


Ⓜ With CONSULT-II

1. Turn ignition switch OFF.
2. Disconnect front combination lamp, license plate lamp and rear combination lamp connectors.
3. Turn ignition switch ON.
4. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
5. Select "TAIL LAMP" on "SELECT TEST ITEM" screen.
6. Touch "ON" on "ACTIVE TEST" screen.
7. When tail lamp is operating, check voltage between front combination lamp, license plate lamp, rear combination lamp harness connector and ground.


ⓧ Without CONSULT-II

1. Turn ignition switch OFF.
2. Start auto active test. Refer to [PG-22, "Auto Active Test"](#).
3. When tail lamp is operating, check voltage between front combination lamp, license plate lamp, rear combination lamp harness connector and ground.


Terminals			(-)	Voltage
Front combination lamp (+)				
Connector		Terminal (Wire color)	Ground	Battery voltage
RH	E107	6 (R/L)		
LH	E11			

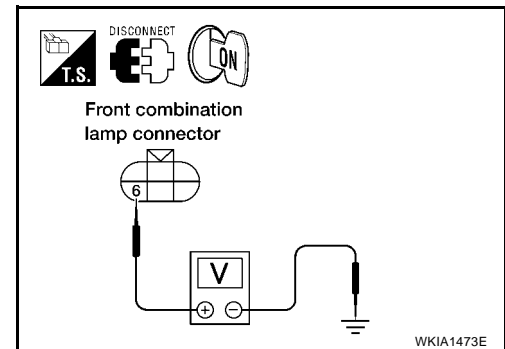

Terminals			(-)	Voltage
License plate lamps (+)				
Connector		Terminal (Wire color)	Ground	Battery voltage
C12		+ (R/L)		

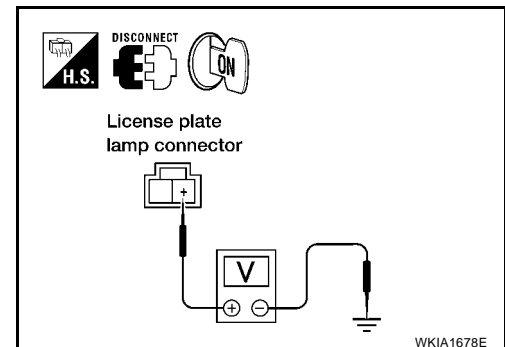

Terminals			(-)	Voltage
Rear combination lamp (+)				
Connector		Terminal (Wire color)	Ground	Battery voltage
RH	C14	6 (R/L)		
LH	C13			

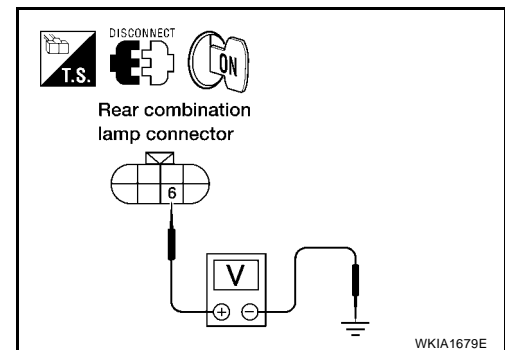

OK or NG


- OK >> GO TO 6.
 NG >> GO TO 5.

PARKING, LICENSE PLATE AND TAIL LAMPS

5. CHECK PARKING, LICENSE PLATE AND TAIL LAMP CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and front combination lamp harness connector.

Terminals					Continuity
IPDM E/R		Front combination lamp			
Connector	Terminal (Wire color)	Connector	Terminal (Wire color)		
E124	57 (R/L)	RH	E107	6 (R/L)	Yes
		LH	E11		

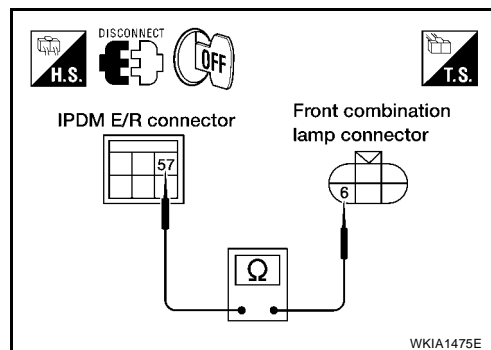


4. Check continuity between IPDM E/R harness connector and license plate lamps harness connector.

Terminals					Continuity
IPDM E/R		License plate lamps			
Connector	Terminal (Wire color)	Connector	Terminal (Wire color)		
E124	57 (R/L)	C12	+ (R/L)		Yes

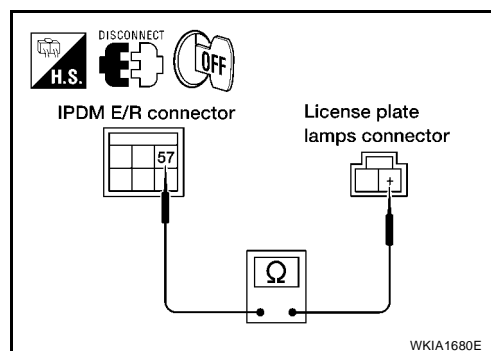

5. Check continuity between IPDM E/R harness connector and rear combination lamp harness connector.

Terminals					Continuity
IPDM E/R		Rear combination lamp			
Connector	Terminal (Wire color)	Connector	Terminal (Wire color)		
E124	57 (R/L)	RH	C14	6 (R/L)	Yes
		LH	C13		

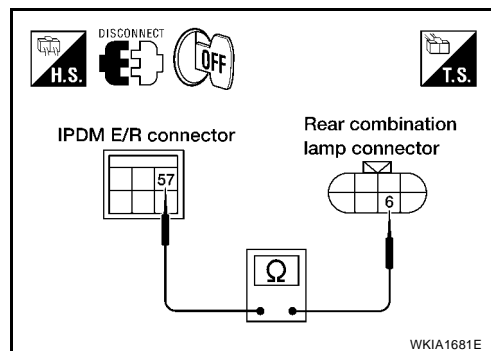

OK or NG


- OK >> Replace IPDM E/R. Refer to [PG-28, "Removal and Installation of IPDM E/R"](#).
- NG >> Repair harness or connector.

PARKING, LICENSE PLATE AND TAIL LAMPS

6. CHECK GROUND


1. Check continuity between front combination lamp harness connector and ground.

Terminals				Continuity
Front combination lamp		Terminal (Wire color)	Ground	
Connector				
RH	E107	4 (B)	Ground	Yes
LH	E11			

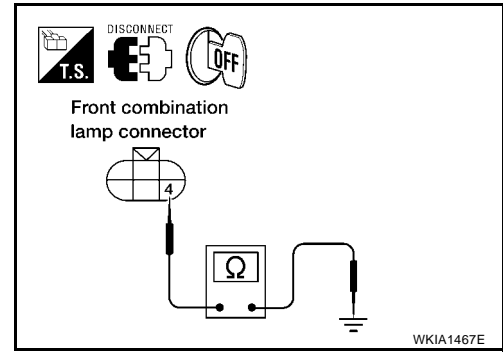


2. Check continuity between license plate lamps harness connector and ground.

Terminals				Continuity
License plate lamps		Terminal (Wire color)	Ground	
Connector				
C12		- (B)	Ground	Yes

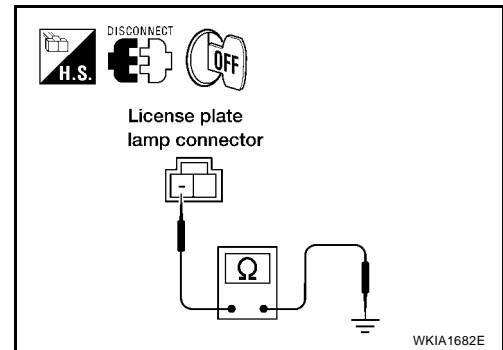

3. Check continuity between rear combination lamp harness connector and ground.

Terminals				Continuity
Rear combination lamp		Terminal (Wire color)	Ground	
Connector				
RH	C14	1 (B)	Ground	Yes
LH	C13			

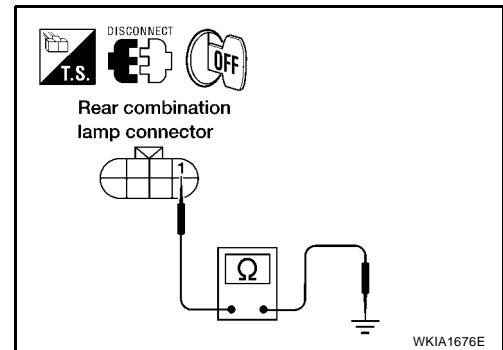

OK or NG

- OK >> Check bulbs.
- NG >> Repair harness or connector.

Parking, License Plate and Tail Lamps Do Not Turn OFF (After Approx. 10 Minutes)

EKS00763

1. CHECK IPDM E/R

1. Turn ignition switch ON. Turn the combination switch (lighting switch) to the OFF position. Turn ignition switch OFF.
2. Verify that the parking, license plate, and tail lamps turn on and off after approximately 10 minutes.

OK or NG

- OK >> Ignition relay malfunction. Refer to [PG-17, "Function of Detecting Ignition Relay Malfunction"](#).
- NG >> Inspection End.

PARKING, LICENSE PLATE AND TAIL LAMPS

Front Parking Lamp BULB REPLACEMENT

EKS00764

For bulb replacement, refer to [LT-30, "FRONT TURN SIGNAL/PARKING LAMP"](#) .

Tail Lamp BULB REPLACEMENT

EKS00765

For bulb replacement, refer to [LT-118, "Bulb Replacement"](#) .

A

B

C

D

E

F

G

H

I

J

LT

L

M

REAR COMBINATION LAMP


REAR COMBINATION LAMP

PF2:26554

Bulb Replacement

EKS00766

1. Remove rear combination lamp mounting bolts.
2. Pull rear combination lamp to remove from the vehicle.
3. Turn bulb socket counterclockwise and unlock it.
4. Remove bulb.
5. Installation is in the reverse order of removal.

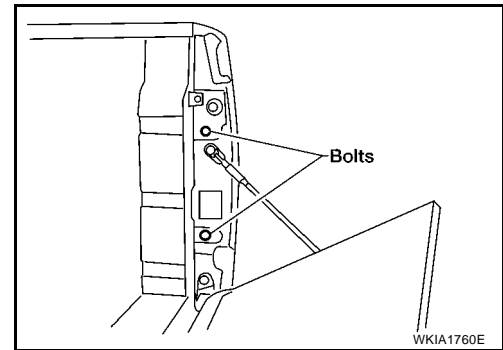


Removal and Installation

EKS00767

1. Remove rear combination lamp mounting bolts.
2. Pull rear combination lamp to remove from the vehicle.
3. Disconnect rear combination lamp connector.

Rear combination lamp mounting bolts : 14.2 N-m (1.4 kg-m, 126 in-lb)

4. Installation is in the reverse order of removal.

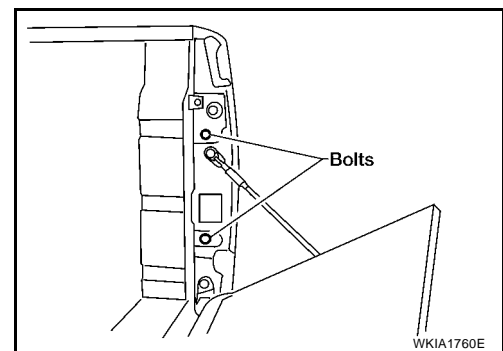


TRAILER TOW

PF9:93020

EKS00768

TRAILER TOW

Component Parts and Harness Connector Location

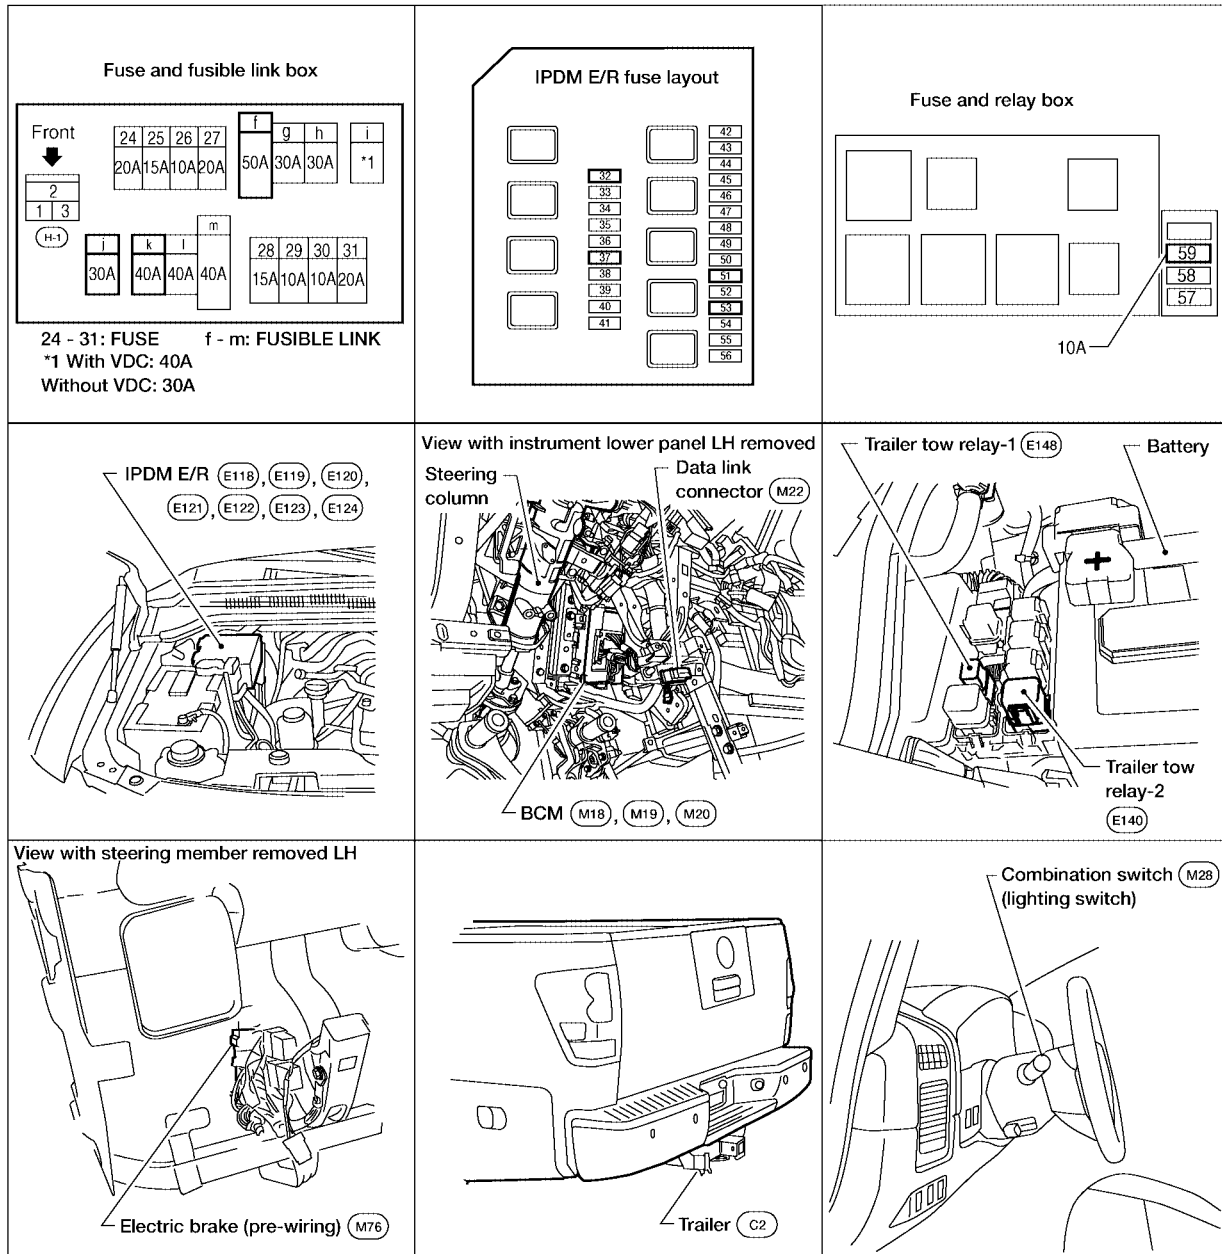

WKIA3585E

EKS00769

System Description

Power is supplied at all times

- to ignition relay, located in the IPDM E/R (intelligent power distribution module engine room), and
- through 50A fusible link (letter f, located in the fuse and fusible link box)
- to BCM (body control module) terminal 70, and
- through 10A fuse (No. 32, located in the IPDM E/R)
- through IPDM E/R terminal 61
- to trailer tow relay 1 terminal 3, and
- through 20A fuse (No. 53, located in the IPDM E/R)
- to CPU (central processing unit) of the IPDM E/R, and

TRAILER TOW

- to tail lamp relay, located in the IPDM E/R, and
- through 30A fusible link (letter **j** , located in the fuse and fusible link box)
- to trailer tow relay 2 terminals 3 and 6, and
- through 40A fusible link (letter **k** , located in the fuse and fusible link box)
- to electric brake (pre-wiring) terminal 5.

With the ignition switch in the ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse (No. 59, located in the fuse and relay box)
- to BCM terminal 38, and
- through 10A fuse (No. 51, located in the IPDM E/R)
- to trailer tow relay 2 terminal 1.

Ground is supplied

- to BCM terminal 67 and
- to electric brake (pre-wiring) terminal 1
- through grounds M57, M61 and M79, and
- to IPDM E/R terminals 38 and 59
- to trailer tow relay 1 terminal 2
- to trailer tow relay 2 terminal 2, and
- to trailer connector terminal 2
- through grounds E9, E15 and E24.

TRAILER TAIL LAMP OPERATION

The trailer tail lamps are controlled by the trailer tow relay 1.

With the lighting switch in the parking and tail lamp ON (1ST) position, AUTO position (and the auto light system is activated) or headlamp ON (2ND) position, power is supplied

- through the tail lamp relay
- through 10A fuse (No. 36, located in the IPDM E/R)
- through IPDM E/R terminal 49
- to trailer tow relay 1 terminal 1.

When energized, trailer tow relay 1 supplies tail lamp power to trailer connector terminal 6.

TRAILER TURN SIGNAL AND HAZARD LAMP OPERATION

The trailer turn signal and hazard lamps are controlled by the BCM. If either turn signal or the hazard lamps are turned on, the BCM supplies voltage to the trailer lamps to make them flash.

Left turn signal and hazard lamp output is supplied

- through BCM terminal 52
- to trailer connector terminal 1.

Right turn signal and hazard lamp output is supplied

- through BCM terminal 51
- to trailer connector terminal 4.

TRAILER STOP LAMP OPERATION

The trailer stop lamps are controlled by the electric brake. The electric brake receives stop lamp switch signal when the brake pedal is pressed.

When the brake pedal is pressed, power is supplied

- through electric brake (pre-wiring) terminal 3
- to trailer connector terminal 3.

TRAILER POWER SUPPLY OPERATION

The trailer power supply is controlled by the trailer tow relay 2.

When the ignition switch is in the ON or START position, power is supplied

- through 10A fuse (No. 51, located in the IPDM E/R)
- through IPDM E/R terminal 16

TRAILER TOW

- to trailer tow relay 2 terminal 1.
- When energized, the trailer tow relay 2 supplies power
- through trailer tow relay 2 terminals 5 and 7
 - to trailer connector terminal 5.

A

B

C

D

E

F

G

H

I

J

LT


L

M

TRAILER TOW

Schematic

EKS0076A

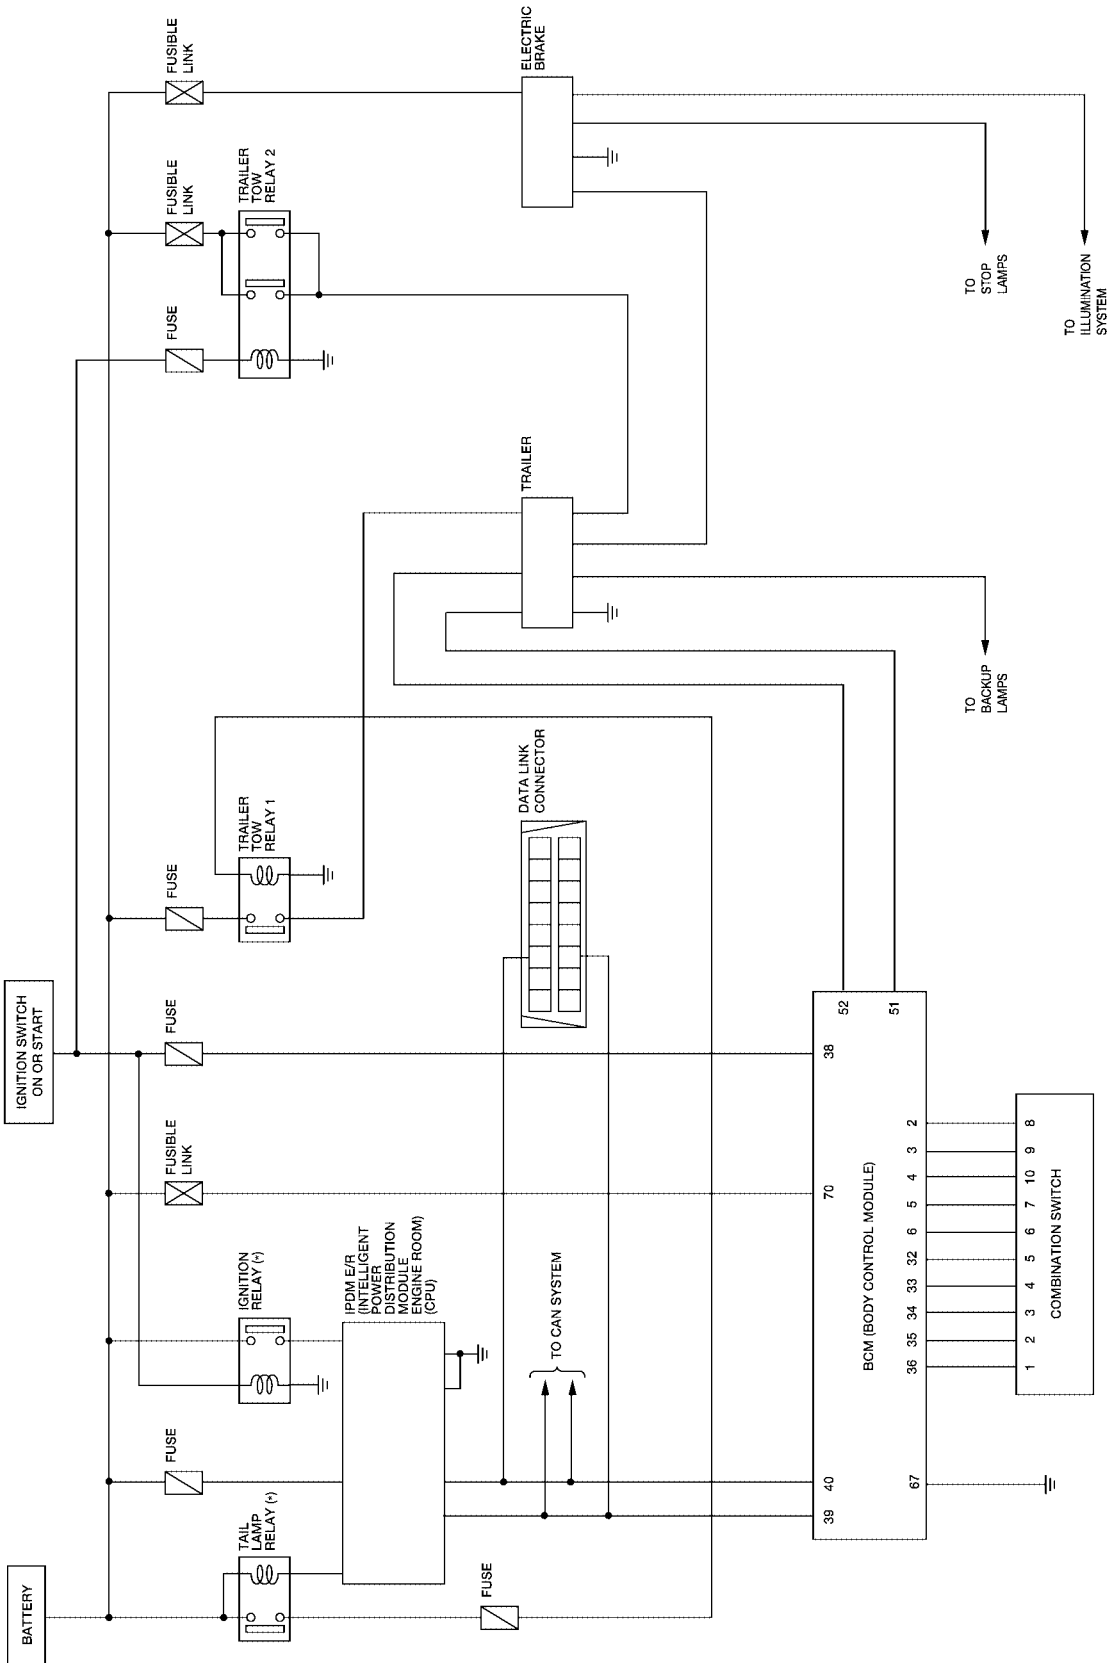

*: THIS RELAY IS BUILT INTO THE IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

WKWA1074E


TRAILER TOW

Wiring Diagram — T/TOW —

EKS0076B

LT-T/TOW-01

— : DATA LINE

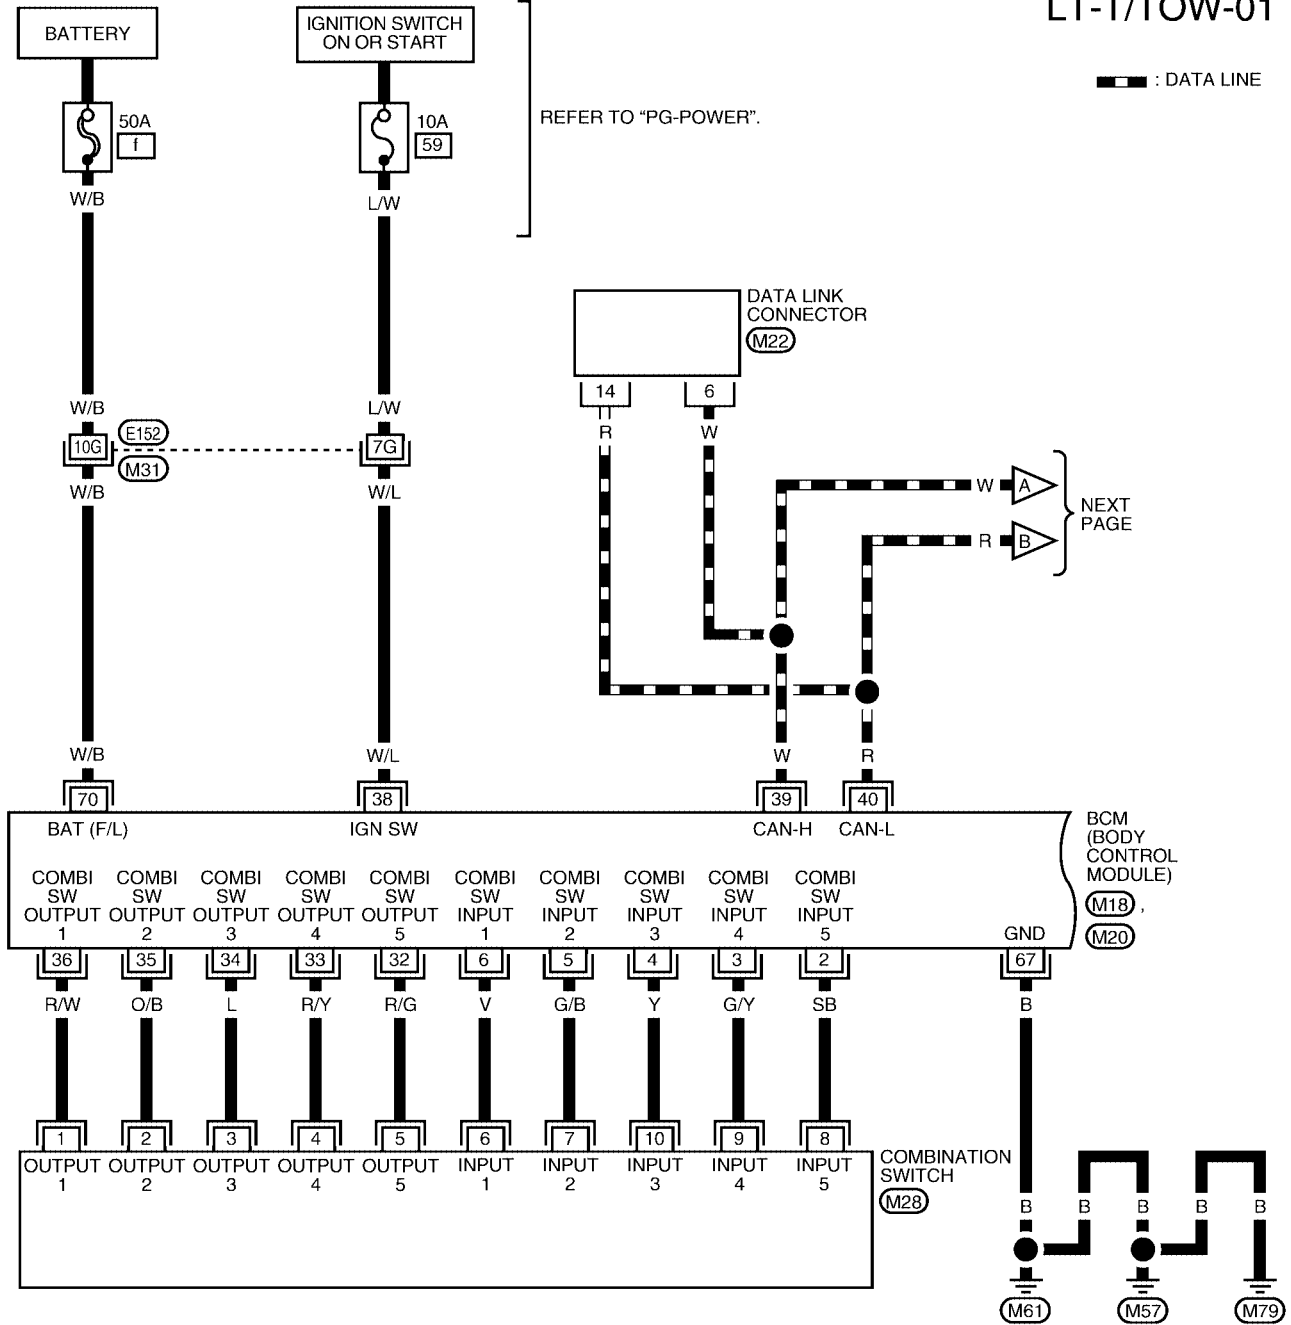


REFER TO "PG-POWER".

NEXT PAGE

BCM (BODY CONTROL MODULE)
M18
M20

COMBINATION SWITCH
M28

M61 M57 M79

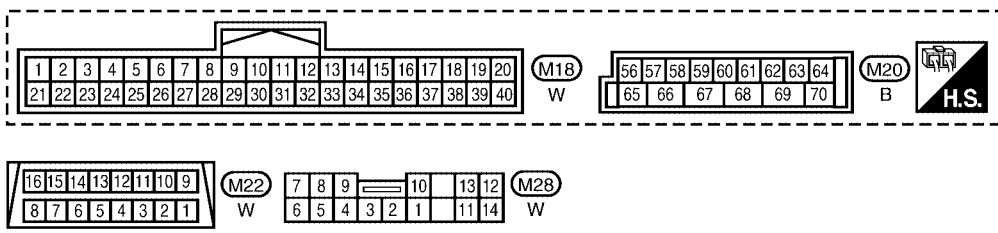





REFER TO THE FOLLOWING.
M31 - SUPER MULTIPLE JUNCTION (SMJ)

WKWA1160E

TRAILER TOW

LT-T/TOW-02

— : DATA LINE

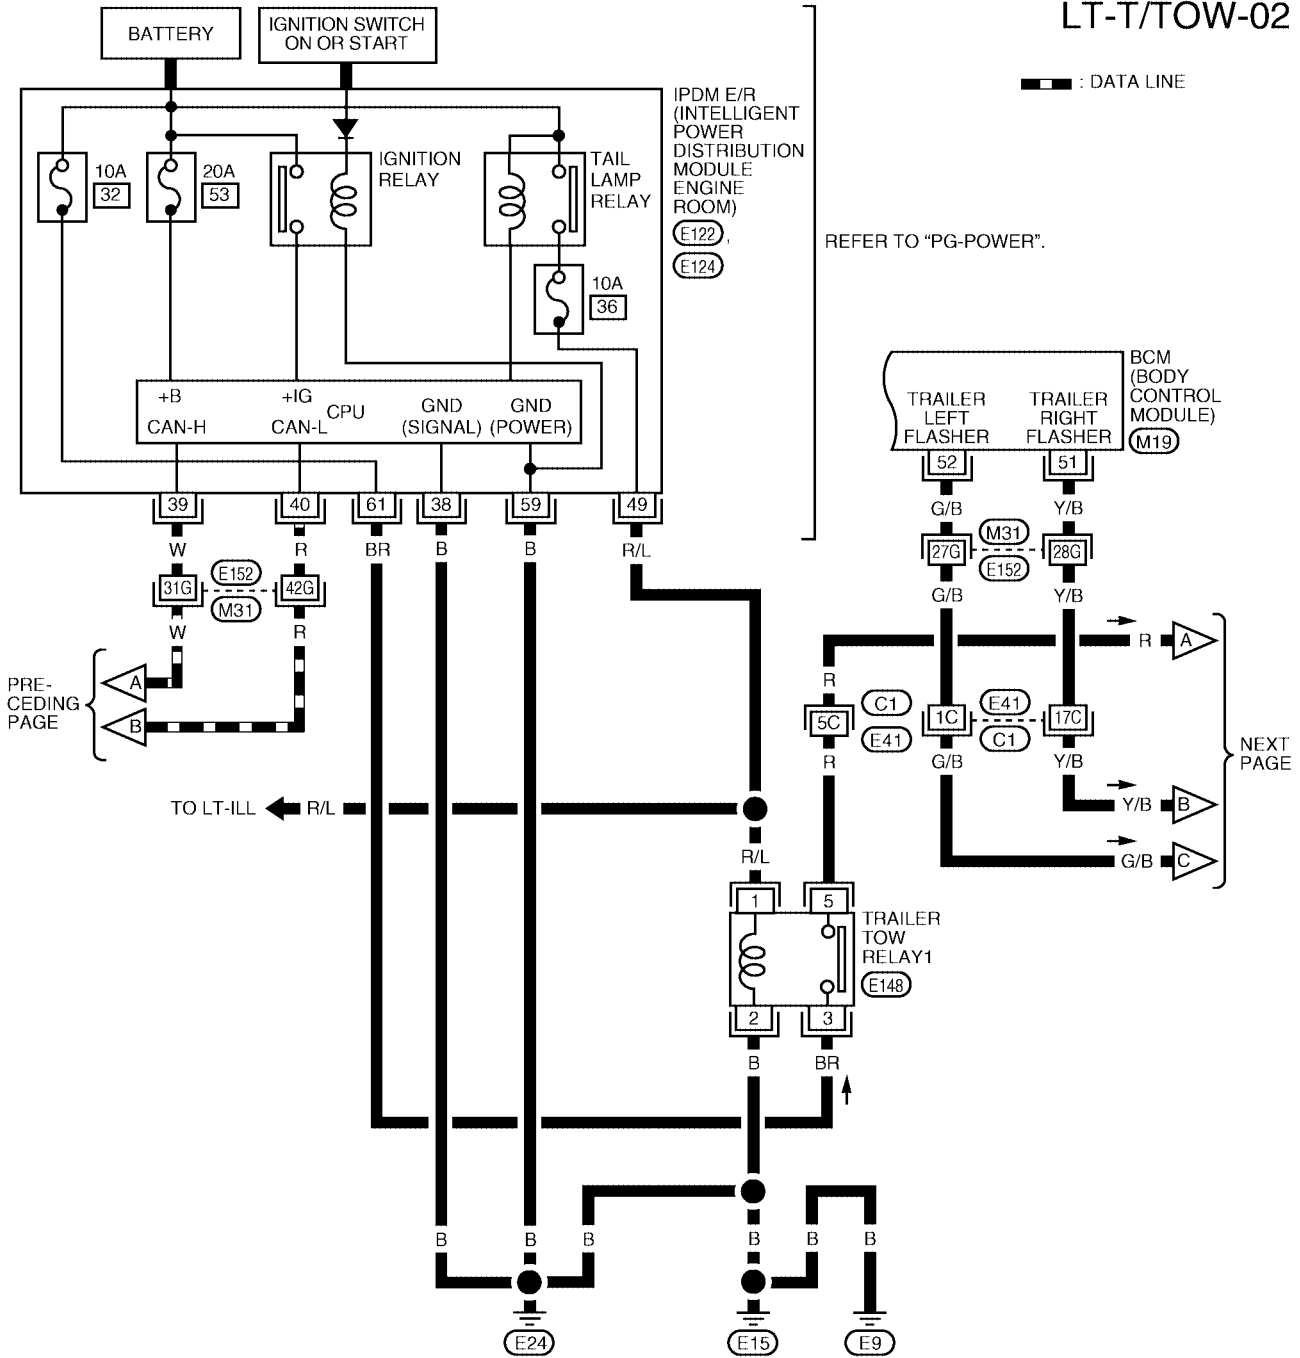


REFER TO THE FOLLOWING.
 (M31), (C1) - SUPER MULTIPLE JUNCTION (SMJ)


WKWA1210E

TRAILER TOW

LT-T/TOW-03

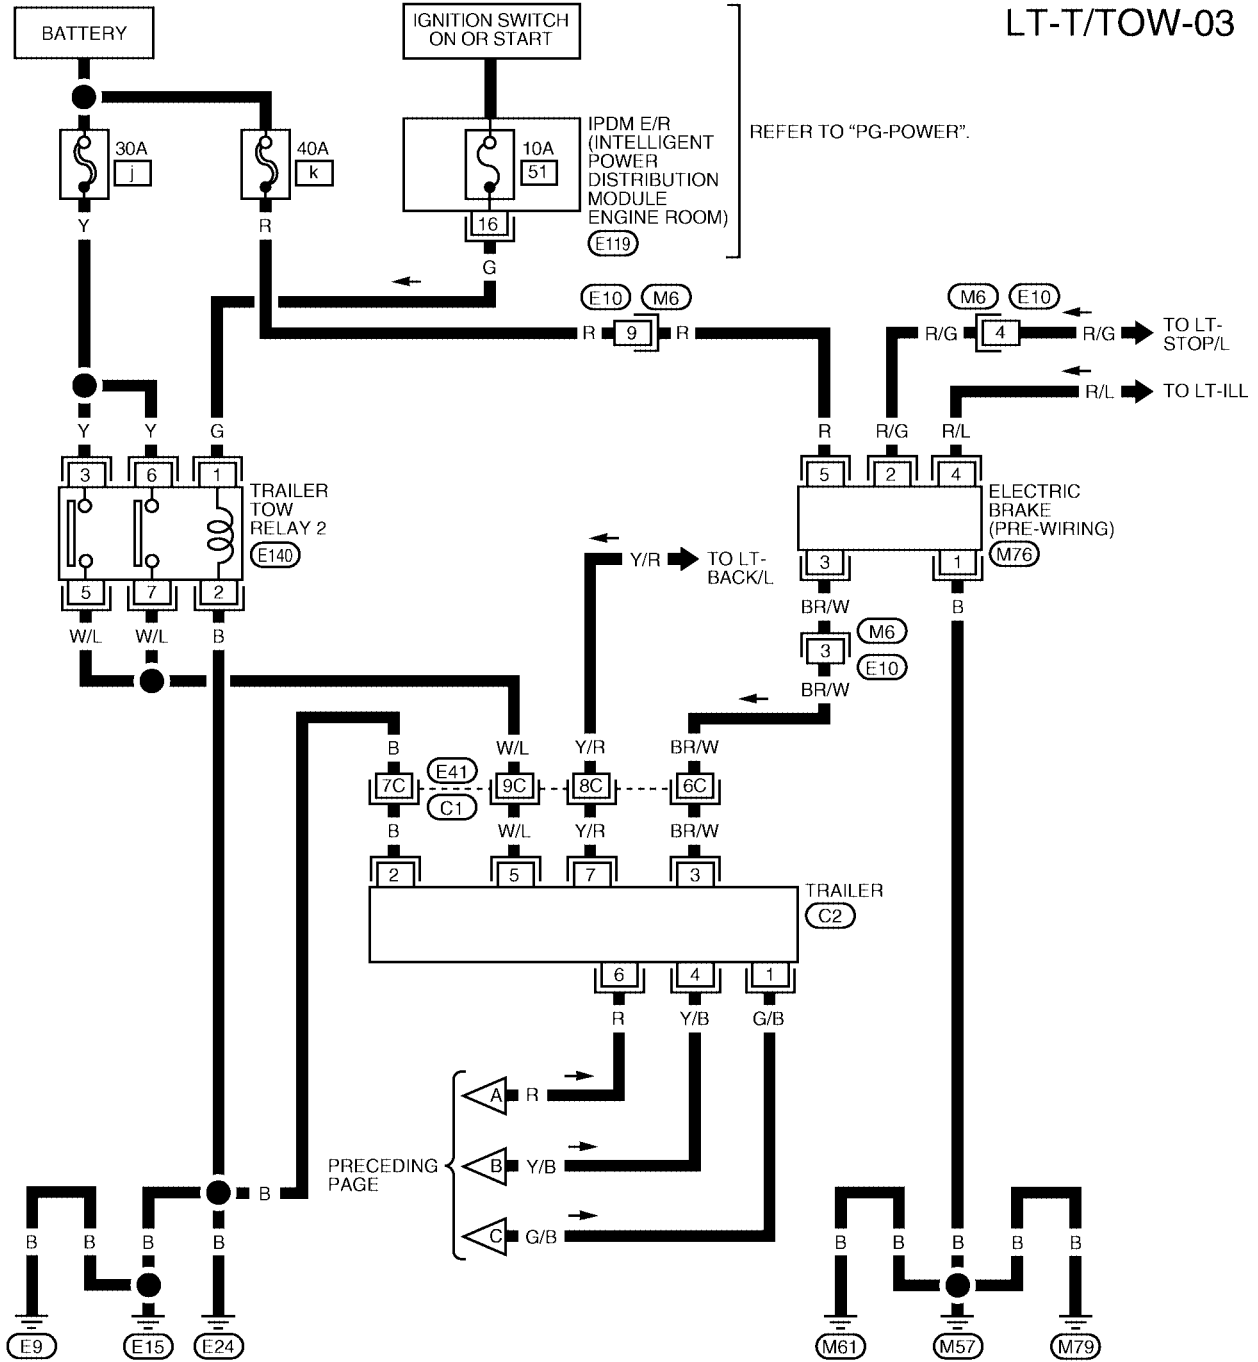

A
B
C
D
E
F
G
H
I
J
LT
L
M

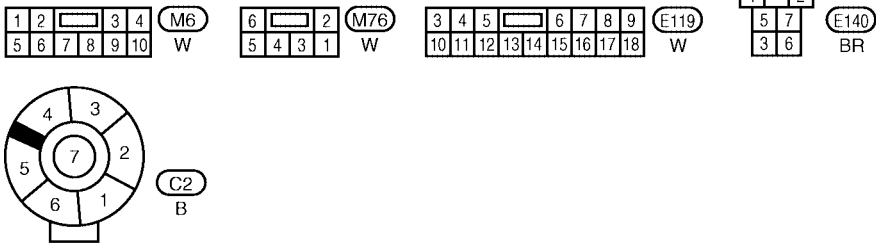

REFER TO THE FOLLOWING.
(C1) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA1405E


INTERIOR ROOM LAMP

PF:26410

INTERIOR ROOM LAMP

Component Parts and Harness Connector Location

EKS0076C

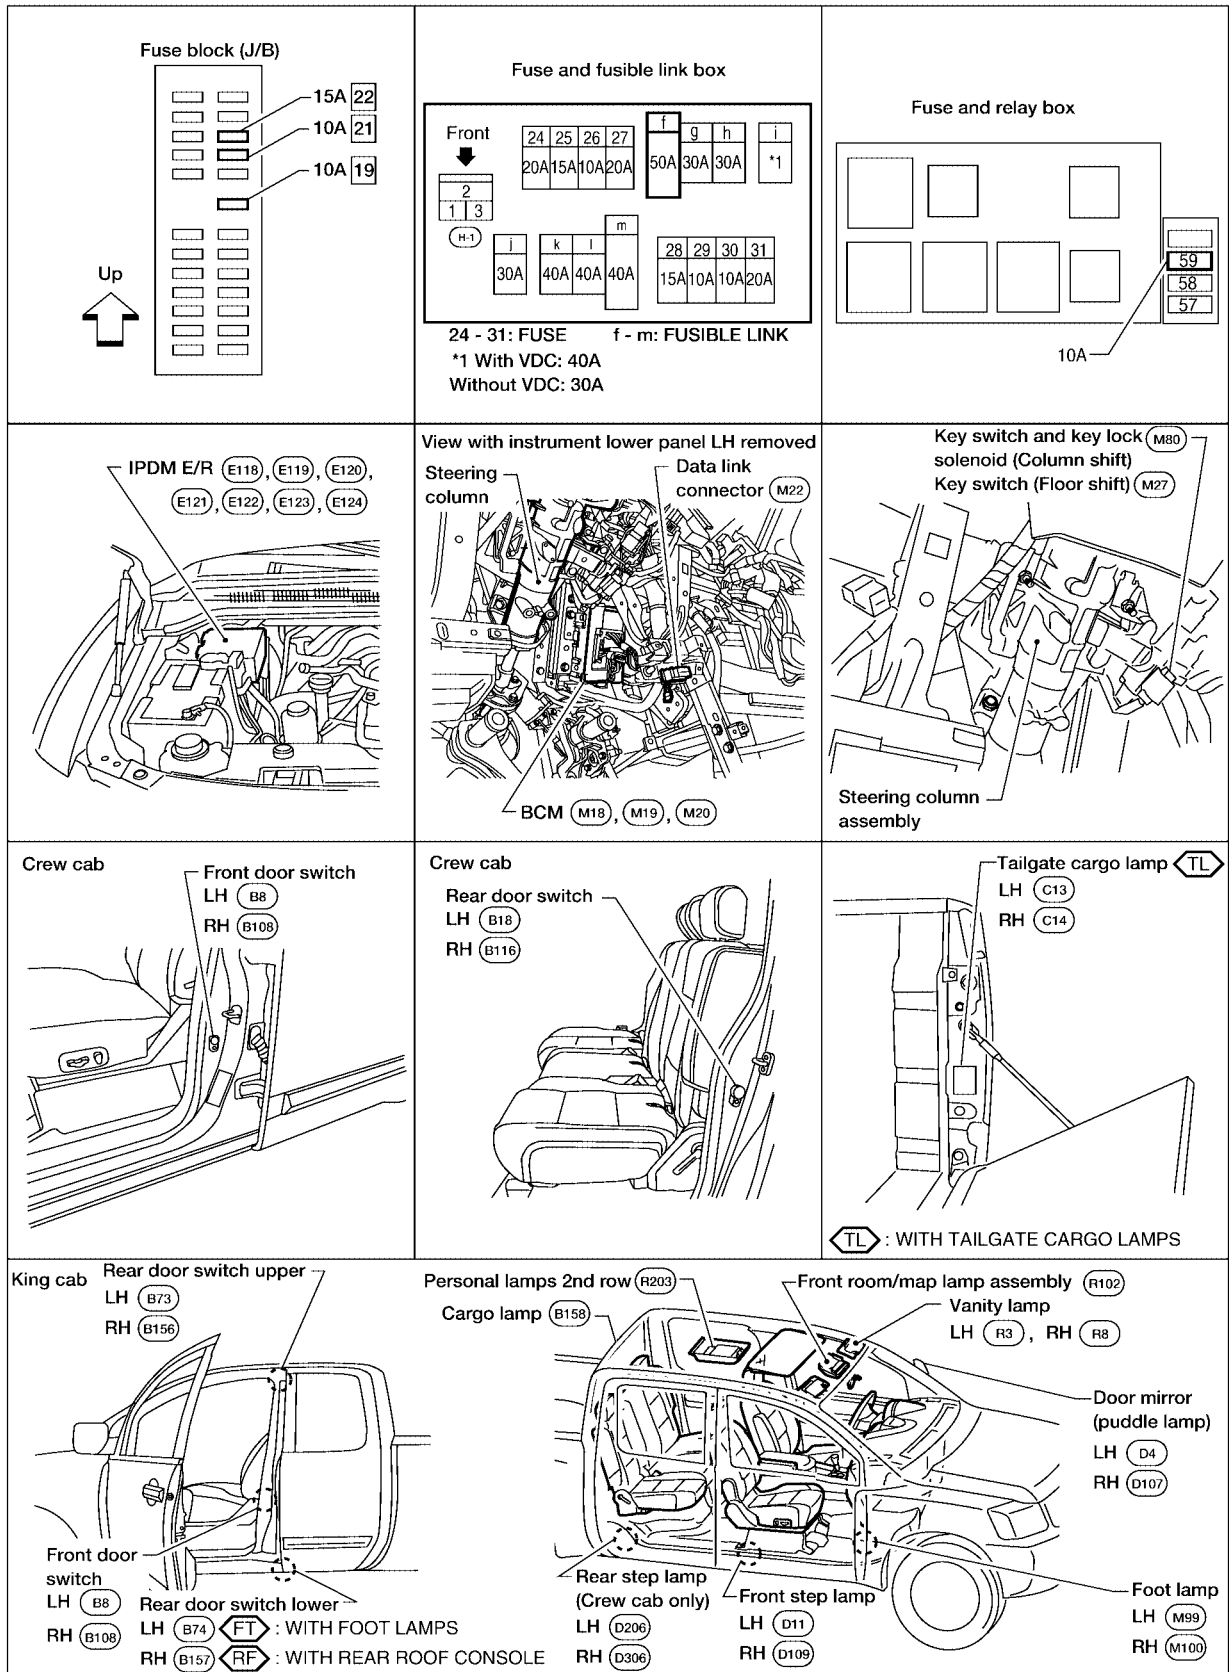

WKIA3870E

INTERIOR ROOM LAMP

EKS0076D

System Description

When room lamp and personal lamp switch is in DOOR position, room lamp and personal lamp ON/OFF is controlled by timer according to signals from switches including key switch (with column shift) or key switch and key lock solenoid (with floor shift), front door switch LH, unlock signal from keyfob, door lock and unlock switch, key cylinder lock and unlock switch, ignition switch.

When room lamp and personal lamp turns ON, there is a gradual brightening over 1 second. When room lamp and personal lamp turns OFF, there is a gradual dimming over 1 second.

The room lamp and personal lamp timer is controlled by the BCM (body control module).

Room lamp and personal lamp timer control settings can be changed with CONSULT-II.

Step and foot lamp turns ON when driver door, passenger or rear doors are opened (door switch ON). Lamp turns OFF when driver, passenger and rear doors are closed (all door switches OFF).

POWER SUPPLY AND GROUND

Power is supplied at all times

- through 10A fuse [No. 19, located in the fuse block (J/B)]
- to key switch (with column shift) or key switch and key lock solenoid (with floor shift) terminal 3, and
- through 15A fuse [No. 22, located in the fuse block (J/B)]
- to BCM terminal 57, and
- through 50A fusible link (letter f , located in the fuse and fusible link box)
- to BCM terminal 70, and
- through 10A fuse [No. 21, located in the fuse block (J/B)]
- to cargo lamp relay terminals 2 and 5.

When the key is inserted in key switch (with column shift) or key switch and key lock solenoid (with floor shift), power is supplied

- through the key switch (with column shift) or key switch and key lock solenoid (with floor shift) terminal 4
- to BCM terminal 37.

With the ignition switch in the ON or START position, power is supplied

- through 10A fuse (No. 59, located in the fuse and relay box)
- to BCM terminal 38.

Ground is supplied

- to BCM terminal 67
- through grounds M57, M61 and M79.

When the front door LH is opened, ground is supplied

- to BCM terminal 47
- through case ground of front door switch LH (crew cab) or
- through grounds B7 and B19 (king cab).

When the front door RH is opened, ground is supplied

- to BCM terminal 12
- through case ground of front door switch RH (crew cab) or
- through grounds B117 and B132 (king cab).

When the rear door LH (crew cab) is opened, ground is supplied

- to BCM terminal 48
- through case ground of rear door switch LH.

When the rear door LH (king cab) is opened, ground is supplied

- to BCM terminal 47
- through rear door switch upper LH and rear door switch lower LH terminal 2
- through rear door switch upper LH and rear door switch lower LH terminal 1
- through grounds B7 and B19.

When the rear door RH (crew cab) is opened, ground is supplied

- to BCM terminal 13
- through case ground of rear door switch RH.

A
B
C
D
E
F
G
H
I
J
LT
L
M

INTERIOR ROOM LAMP

When the rear door RH (king cab) is opened, ground is supplied

- to BCM terminal 12
- through rear door switch upper RH and rear door switch lower RH terminal 2
- through rear door switch upper RH and rear door switch lower RH terminal 1
- through grounds B117 and B132.

When the front door LH or RH is unlocked by the door lock and unlock switch, BCM receives serial data

- to BCM terminal 22
- through main power window and door lock/unlock switch terminal 14 (crew cab) or 12 (king cab) and power window and door lock/unlock switch RH terminal 16
- through main power window and door lock/unlock switch terminal 17 (crew cab) or 15 (king cab)
- through grounds M57, M61 and M79.

When the front door LH is unlocked by the key, the BCM receives serial data

- to BCM terminal 22
- through main power window and door lock/unlock switch terminal 14 (crew cab) or 12 (king cab)
- through main power window and door lock/unlock switch terminal 6 (crew cab) or 7 (king cab)
- through front door lock assembly LH (key cylinder switch) terminal 6
- to front door lock assembly LH (key cylinder switch) terminal 5
- through grounds M57, M61 and M79.

When a signal, or combination of signals is received by the BCM, ground is supplied

- to door mirror LH and RH terminal 13 (with puddle lamps)
- to front room/map lamp assembly terminal 1 (with front roof console) and
- to personal lamps 2nd row terminal 1 (with rear roof console)
- through front room/map lamp assembly terminal 2 (with front roof console)
- through BCM terminal 63.

With power and ground supplied, the lamps illuminate.

When the BCM receives cargo lamp switch input, ground is supplied to cargo lamp relay terminal 1, which energizes the cargo lamp relay. When this relay is energized, power is supplied

- through cargo lamp relay terminal 3
- to high-mount stop lamp (cargo lamp) terminal 3, and
- to rear combination lamp LH and RH (tailgate cargo lamp) terminal 3 (with tailgate cargo lamps).

Ground is supplied

- to high-mount stop lamp (cargo lamp) terminal 2
- through grounds B117 and B132, and
- to rear combination lamp LH and RH (tailgate cargo lamp) terminal 1 (with tailgate cargo lamps)
- through grounds E9, E15 and E24.

With power and ground supplied, the lamps illuminate.

SWITCH OPERATION

When any door switch is ON (door is opened), ground is supplied

- to front and rear (crew cab) step lamps LH and RH and foot lamp LH and RH (with foot lamps) terminal –
- through BCM terminal 62.

And power is supplied

- through BCM terminal 56
- to front and rear (crew cab) step lamps LH and RH terminal +
- to door mirror LH and RH terminal 12 (with puddle lamps)
- to front room/map lamp assembly terminal 6 (with front roof console)
- to vanity lamp LH and RH terminal 1 (with vanity lamps)
- to personal lamp 2nd row terminal 3 (with rear roof console)
- to room lamp terminal 2
- to foot lamp LH and RH terminal + (with foot lamps).

INTERIOR ROOM LAMP

When front room/map lamp assembly switch (with front roof console) is ON, ground is supplied

- to front room/map lamp assembly terminal 5 (with front roof console)
- through grounds M57, M61 and M79.

When vanity lamp (LH and RH) (with vanity lamps) is ON, ground is supplied

- to vanity lamp (LH and RH) terminal 2 (with vanity lamps)
- through grounds M57, M61 and M79.

When cargo lamp switch is ON, ground is supplied

- to BCM terminal 31
- through cargo lamp switch terminal 1
- through cargo lamp switch terminal 3
- through grounds M57, M61 and M79.

ROOM LAMP TIMER OPERATION

When lamp switch is in DOOR position, and when all conditions below are met, BCM performs timer control (maximum 30 seconds) for interior room lamp and map lamp ON/OFF.

Power is supplied

- through 10A fuse [No. 19, located in the fuse block (J/B)]
- to key switch (with column shift) or key switch and key lock solenoid (with floor shift) terminal 3.

Key is removed from key switch (with column shift) or key switch and key lock solenoid (with floor shift) (key switch OFF), power will not be supplied to BCM terminal 37.

Serial data is supplied

- to BCM terminal 22
- through main power window and door lock/unlock switch terminal 14 (crew cab) or 12 (king cab).

At the time that front door LH is opened, BCM detects that front door LH is unlocked. It determines that interior room lamp and map lamp timer operation conditions are met, and turns the interior room lamps ON for 30 seconds.

Key is in key switch (with column shift) or key switch and key lock solenoid (with floor shift) (key switch ON), power is supplied

- through key switch (with column shift) or key switch and key lock solenoid (with floor shift) terminal 4
- to BCM terminal 37.

When key is removed from key switch (with column shift) or key switch and key lock solenoid (with floor shift) (key switch OFF), power supply to BCM terminal 37 is terminated. BCM detects that key has been removed, determines that interior room lamp and map lamp timer conditions are met, and turns the interior room lamps ON for 30 seconds.

When front door LH opens → closes, and the key is not inserted in the key switch (with column shift) or key switch and key lock solenoid (with floor shift) (key switch OFF), BCM terminal 47 changes between 0V (door open) → 12V (door closed). The BCM determines that conditions for interior room lamp operation are met and turns the interior room lamp ON for 30 seconds.

Timer control is canceled under the following conditions.

- Front door LH is locked [when locked by keyfob, main power window and door lock/unlock switch or front door lock assembly LH (key cylinder switch)]
- Front door LH is opened (front door switch LH turns ON)
- Ignition switch ON.

INTERIOR LAMP BATTERY SAVER CONTROL

If interior lamp is left "ON", it will not be turned off even when door is closed.

BCM turns off interior lamp automatically to save battery 30 minutes after ignition switch is turned off.

BCM controls interior lamps listed below:

- Room lamp
- Vanity lamp
- Front room/map lamp assembly
- Cargo lamp
- Personal lamp 2nd row
- Step lamps

A
B
C
D
E
F
G
H
I
J
LT
L
M

INTERIOR ROOM LAMP

- Puddle lamps
- Foot lamps

After lamps turn OFF by the battery saver system, the lamps illuminate again when


- signal received from keyfob, or main power window and door lock/unlock switch or front door lock assembly LH (key cylinder switch) is locked or unlocked
- door is opened or closed
- key is removed from key switch (with column shift) or key switch and key lock solenoid (with floor shift) or inserted in key switch (with column shift) or key switch and key lock solenoid (with floor shift).

Interior lamp battery saver control period can be changed by the function setting of CONSULT-II.

INTERIOR ROOM LAMP

Schematic

EKS0076E

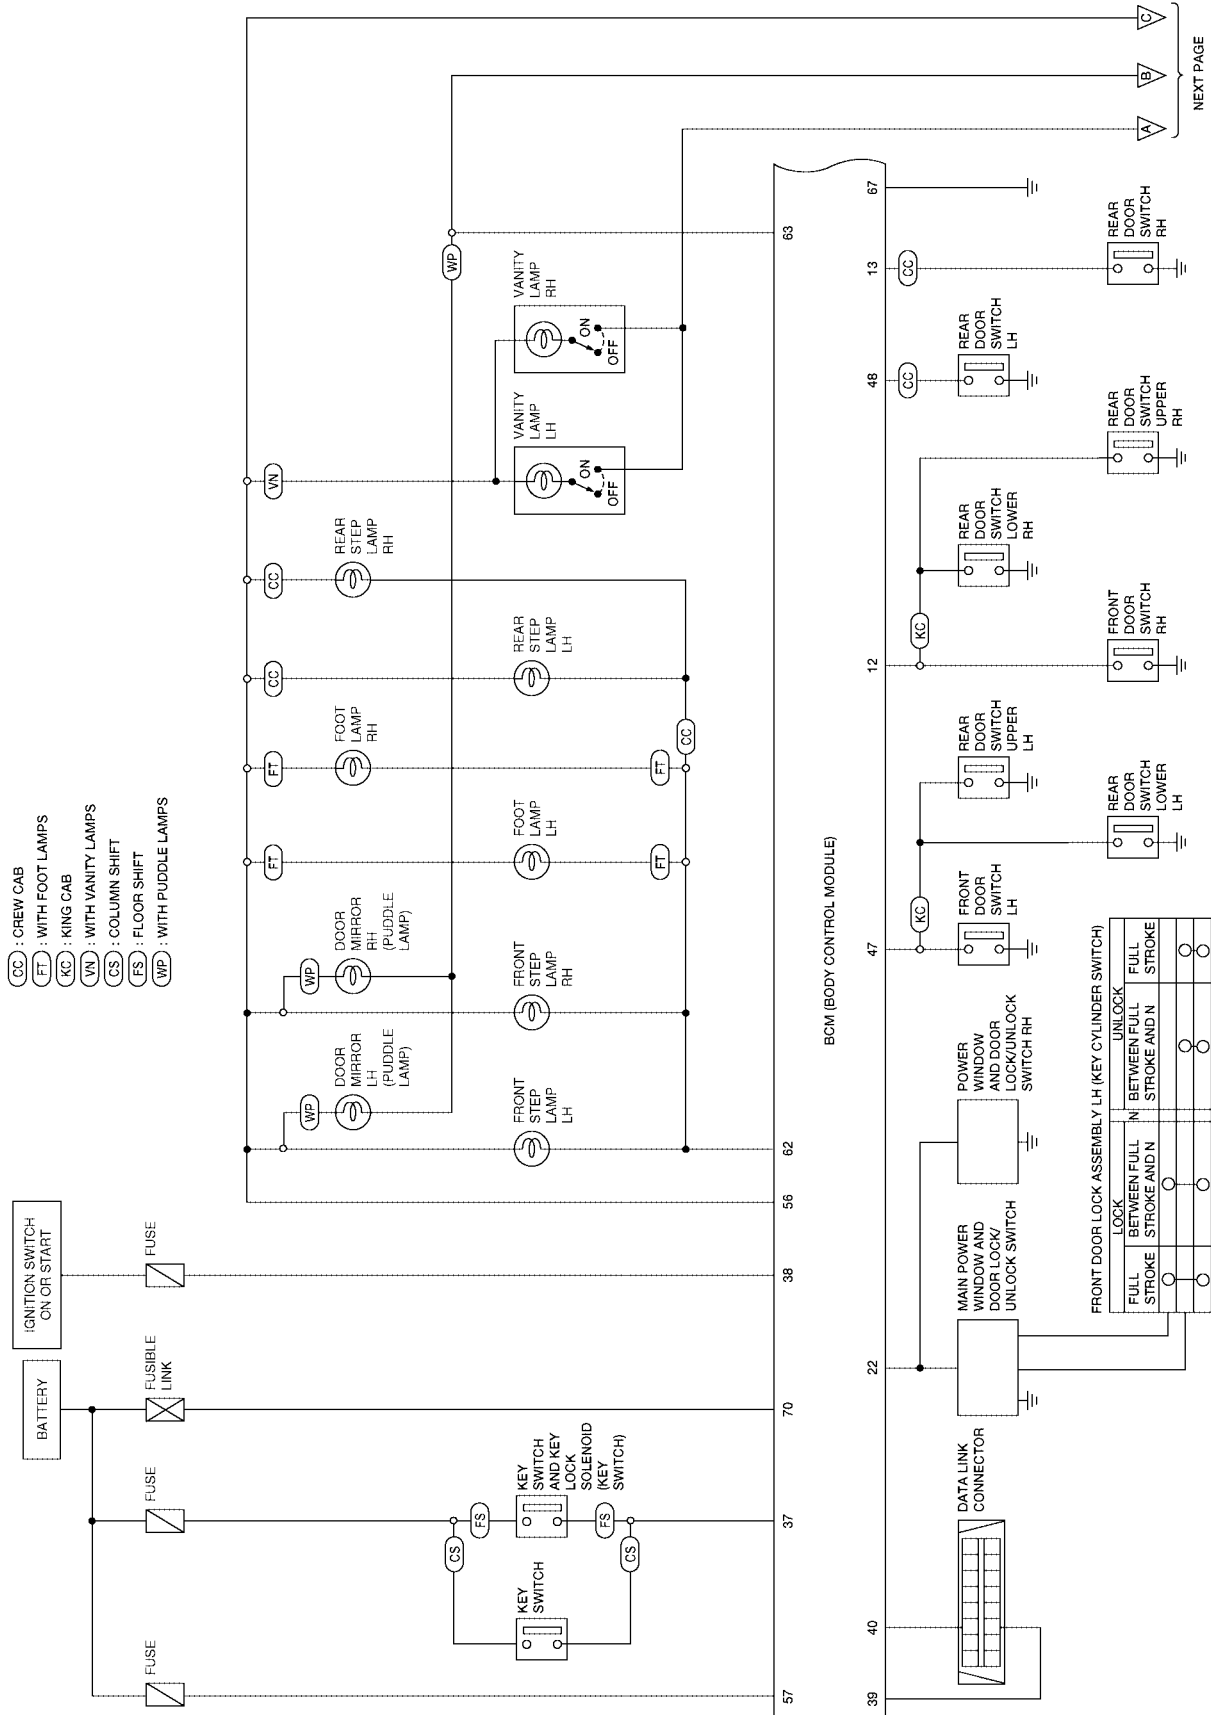


WKWA1511E

A
B
C
D
E
F
G
H
I
J
K
L
M


LT

INTERIOR ROOM LAMP

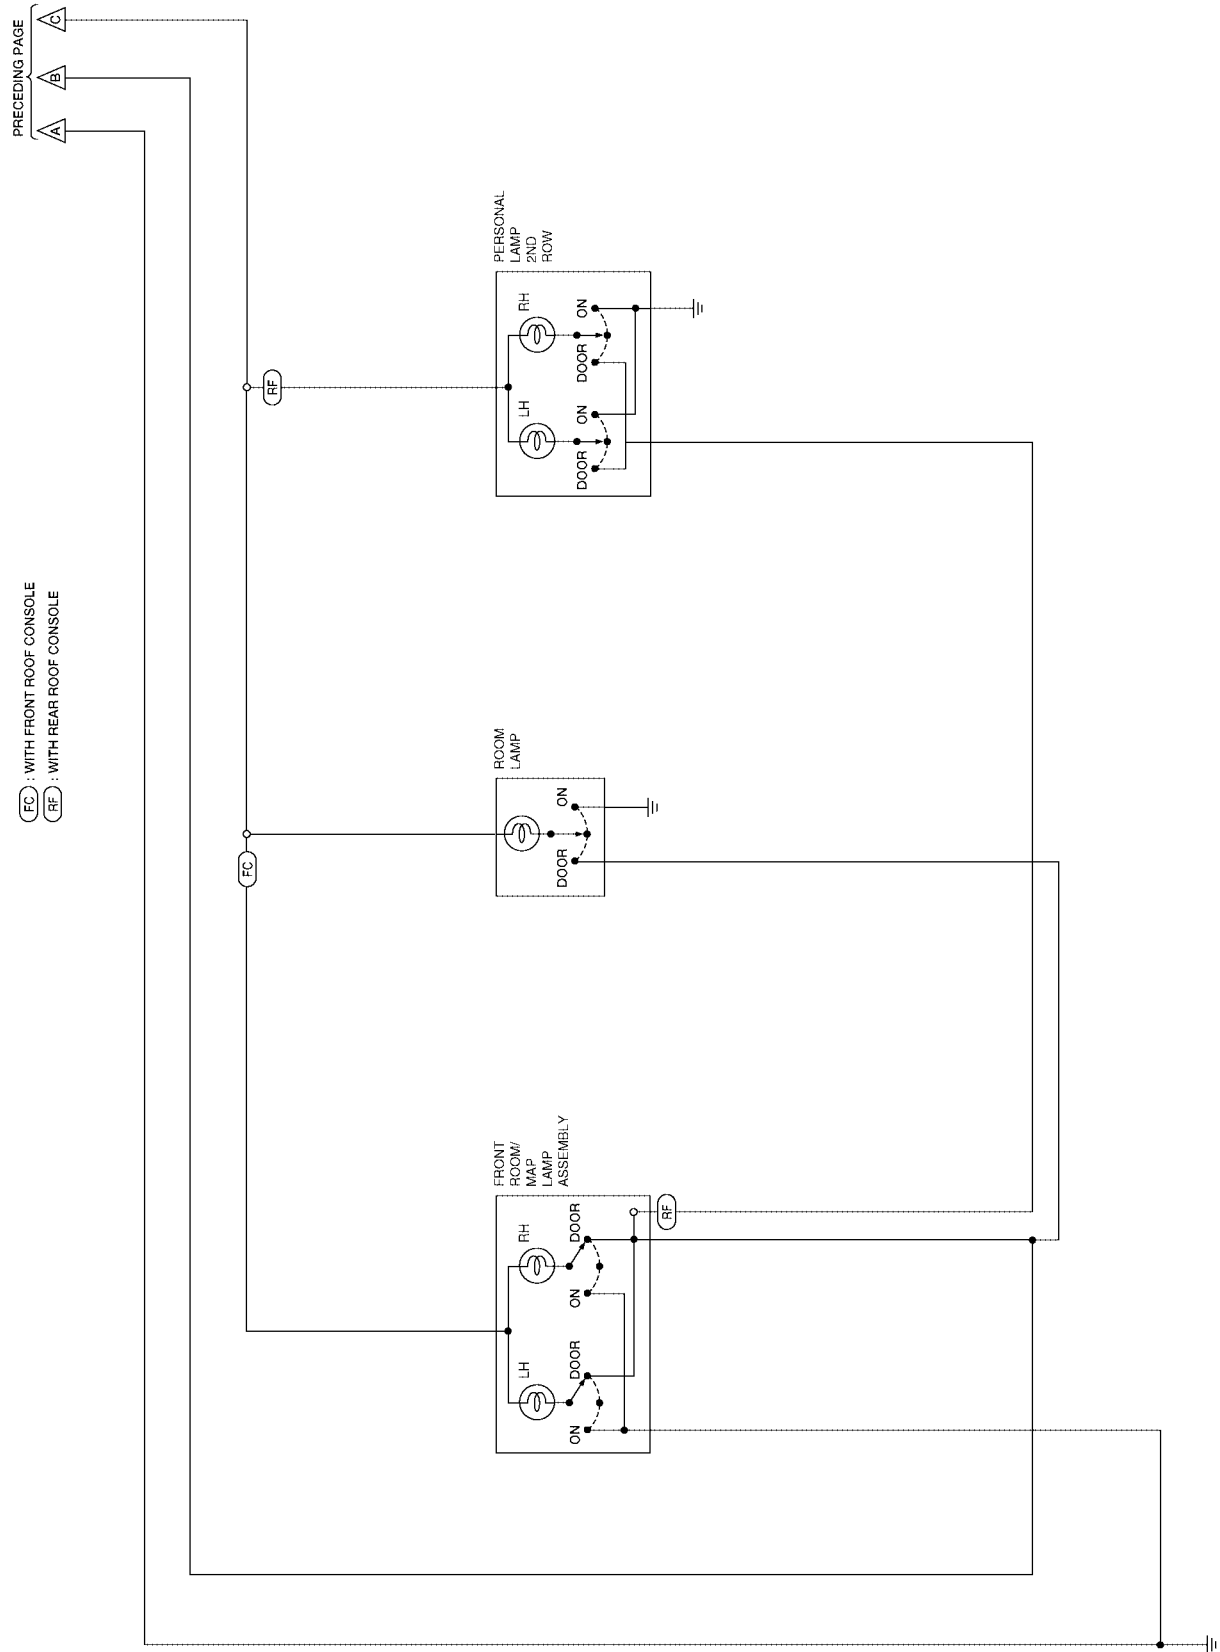

WKWA1563E

INTERIOR ROOM LAMP

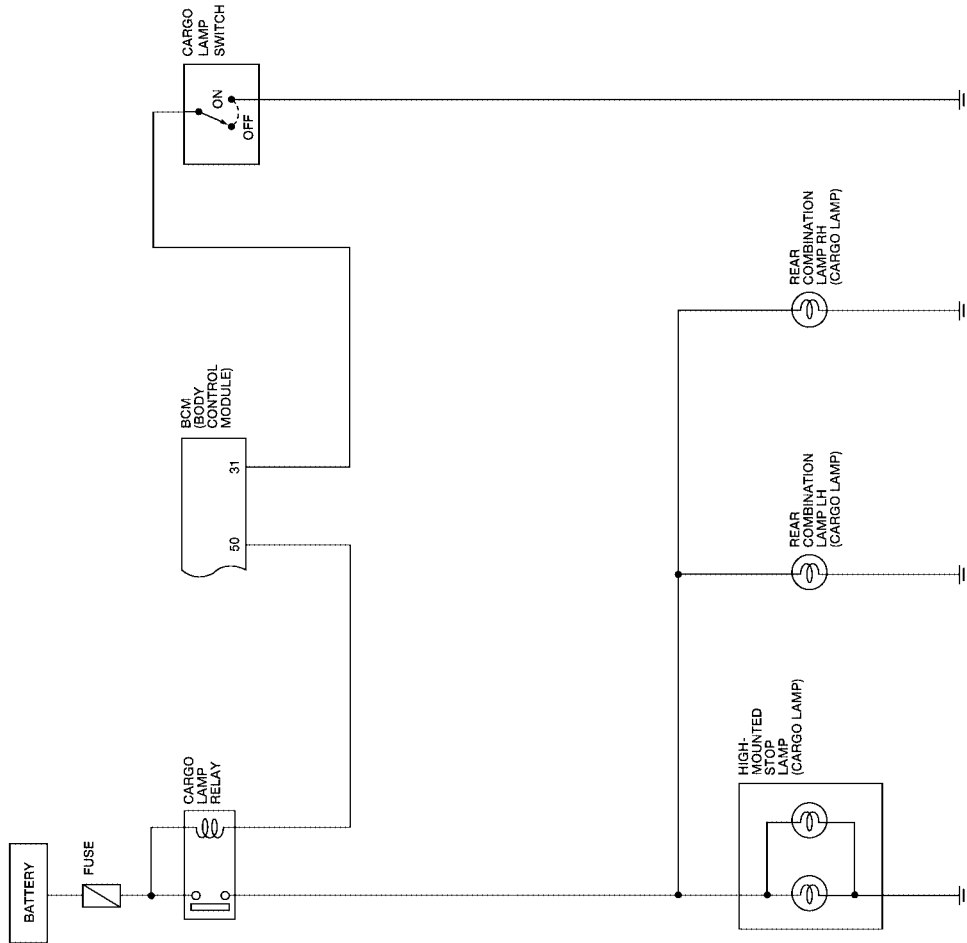

A
B
C
D
E
F
G
H
I
J
LT
L
M



LKWA0285E

INTERIOR ROOM LAMP

Wiring Diagram — INT/L —

EKS0076F

LT-INT/L-01

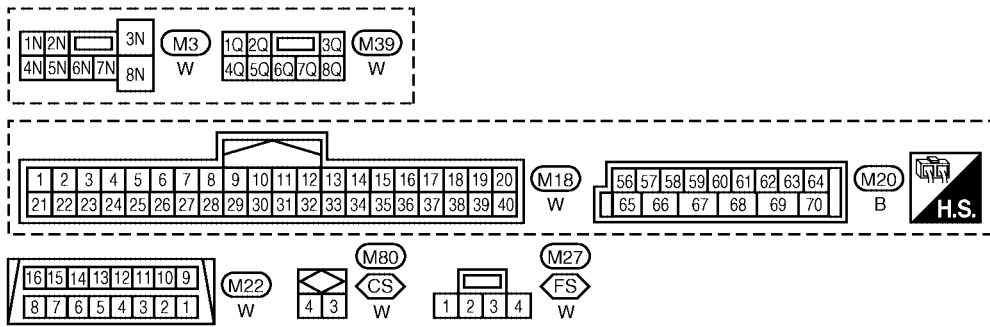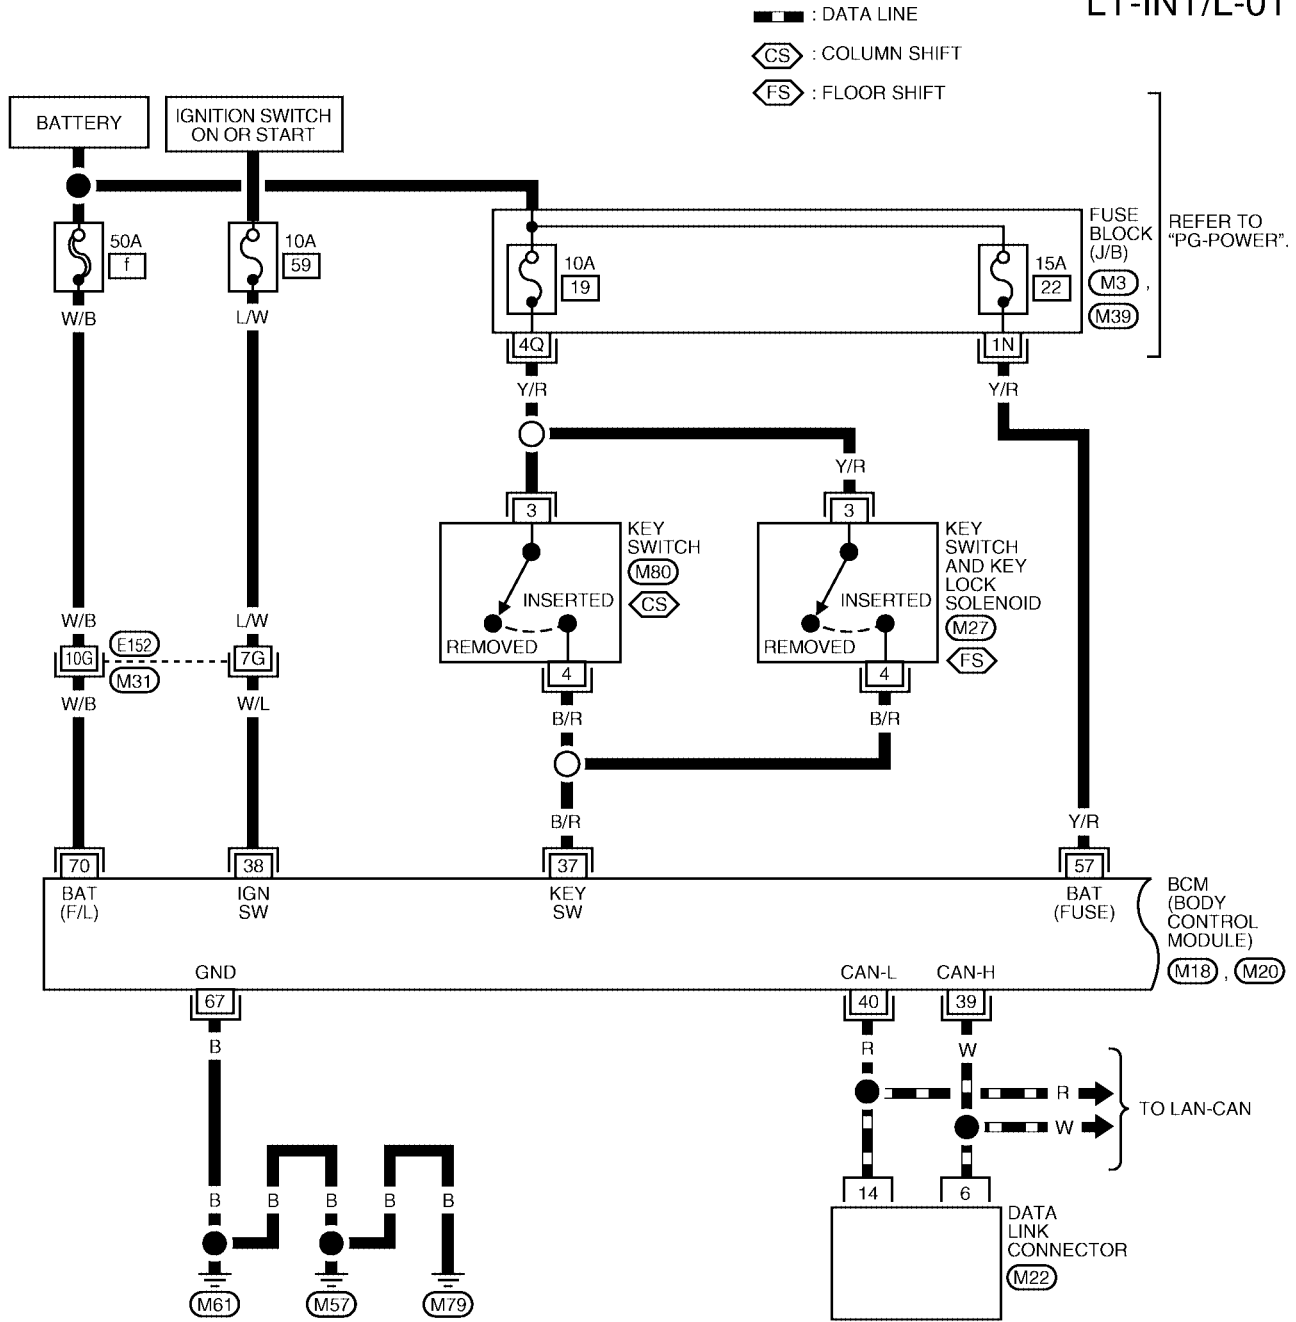



REFER TO THE FOLLOWING.
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA1512E

INTERIOR ROOM LAMP

LT-INT/L-02

◻ CC : CREW CAB
 ◻ KC : KING CAB

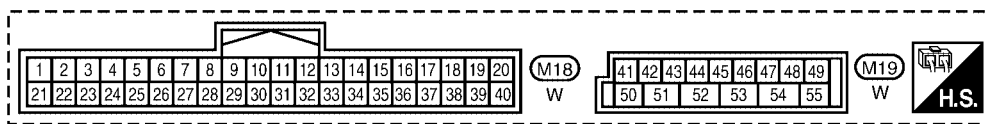
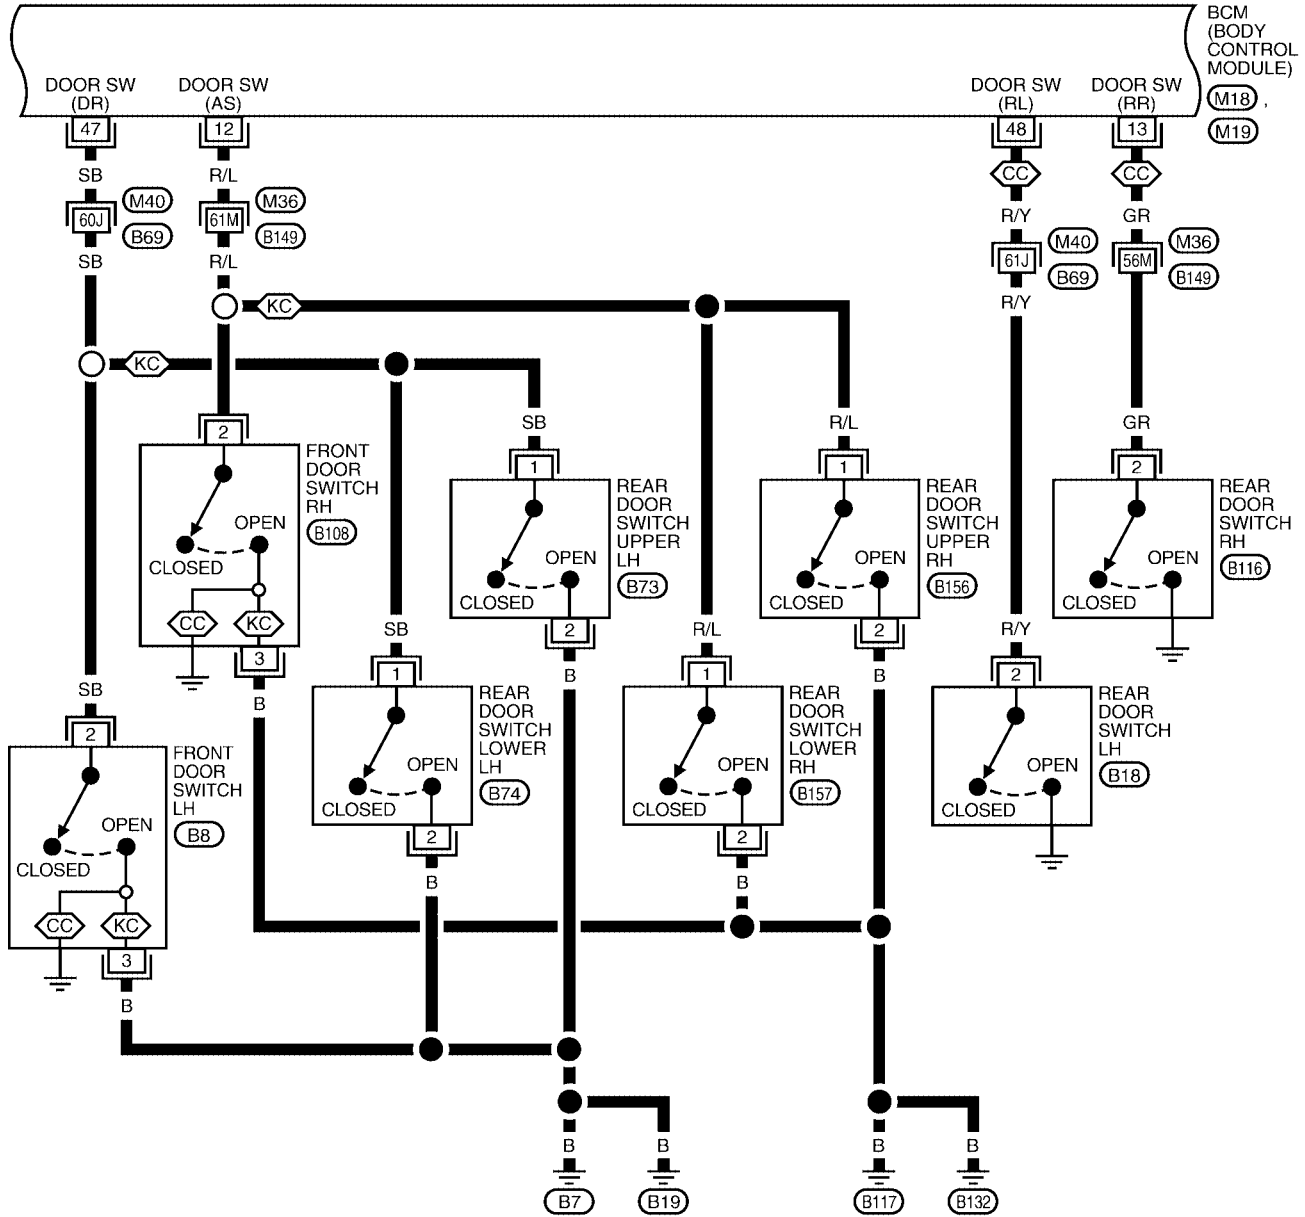


REFER TO THE FOLLOWING.
 (M36), (M40) - SUPER
 MULTIPLE JUNCTION (SMJ)

LKWA0286E

INTERIOR ROOM LAMP

LT-INT/L-03




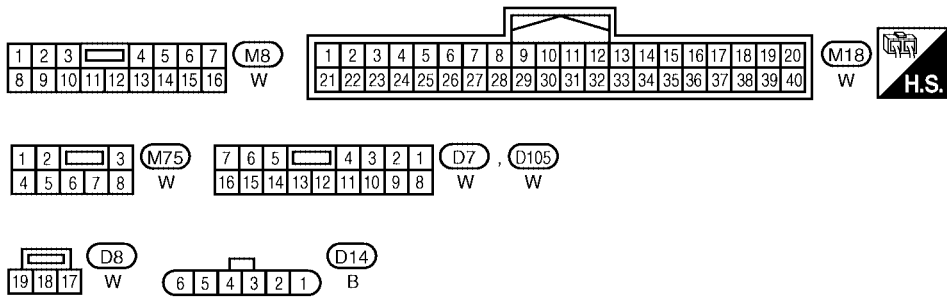
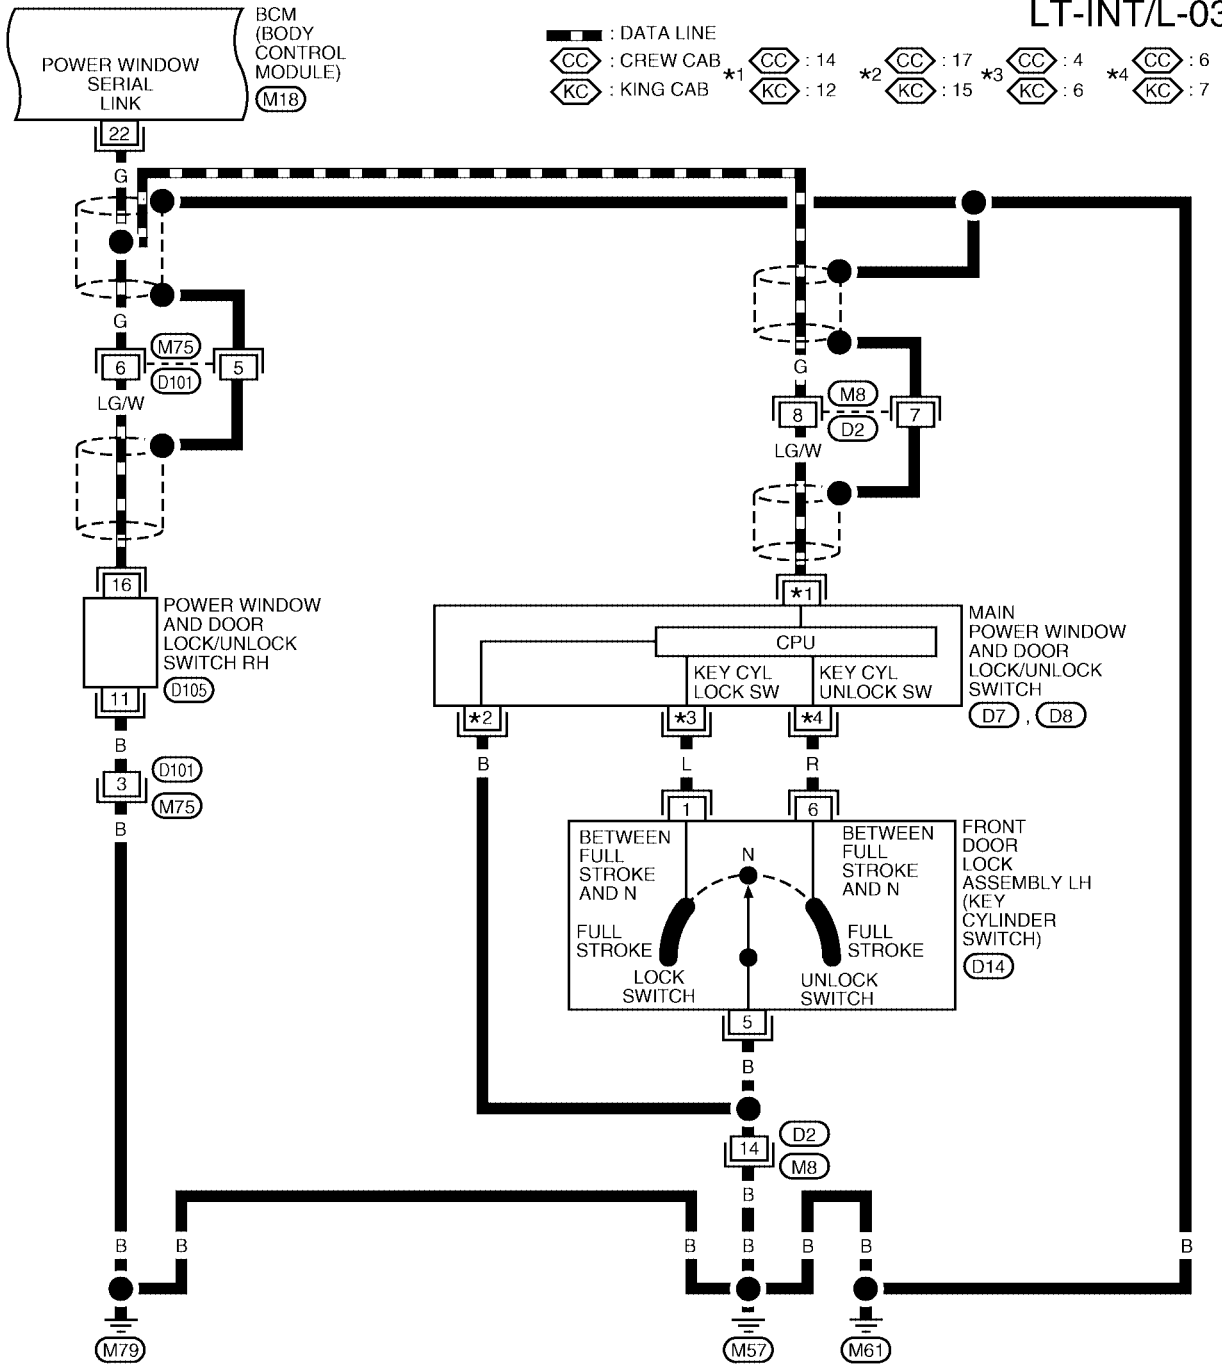


WKWA1505E

INTERIOR ROOM LAMP

LT-INT/L-04

WP : WITH PUDDLE LAMPS


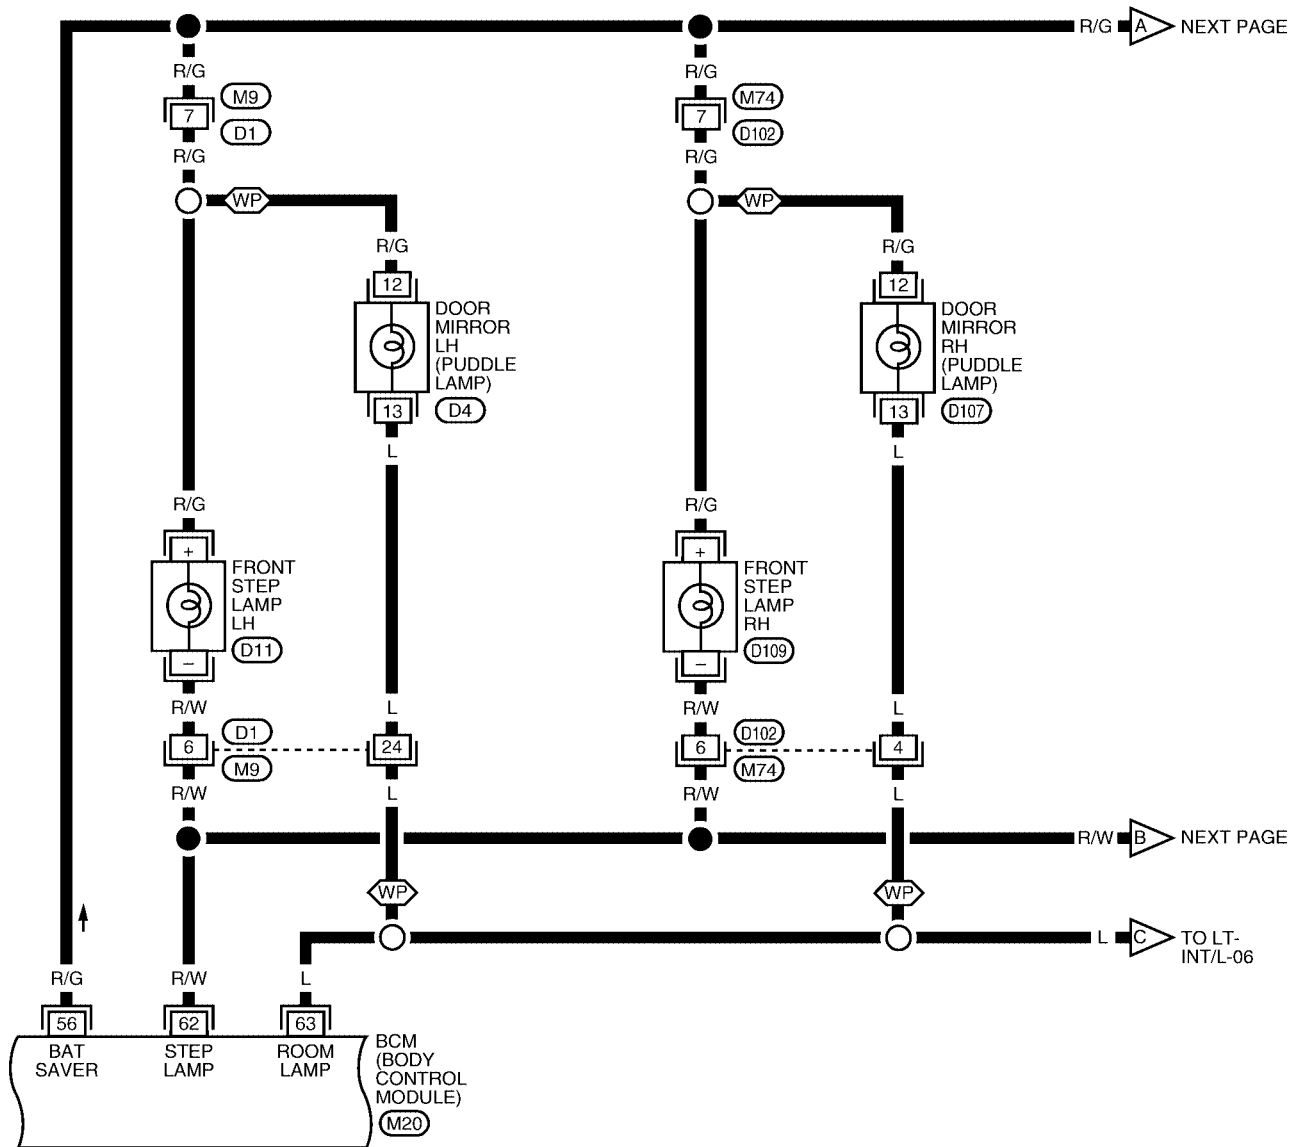


WKWA0754E

INTERIOR ROOM LAMP

LT-INT/L-05

CC : CREW CAB
 FT : WITH FOOT LAMPS

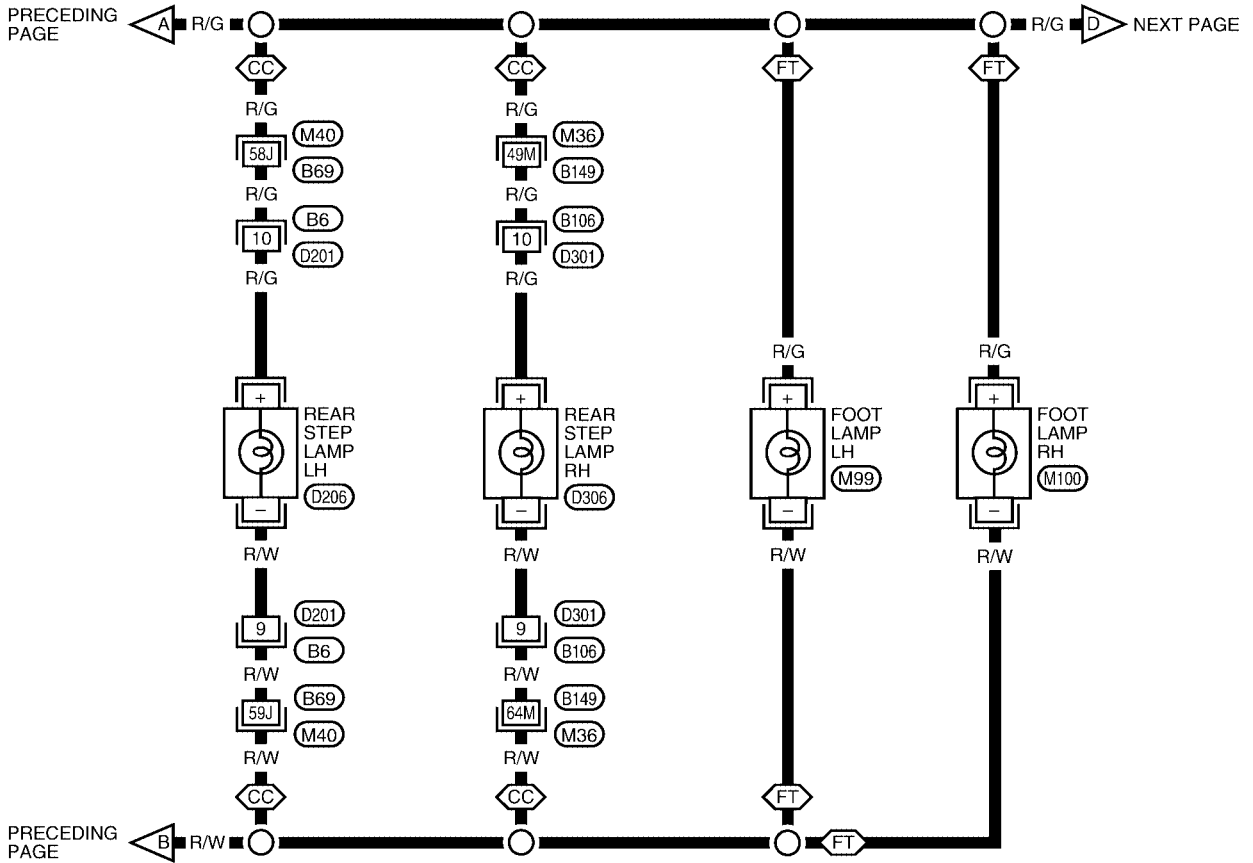





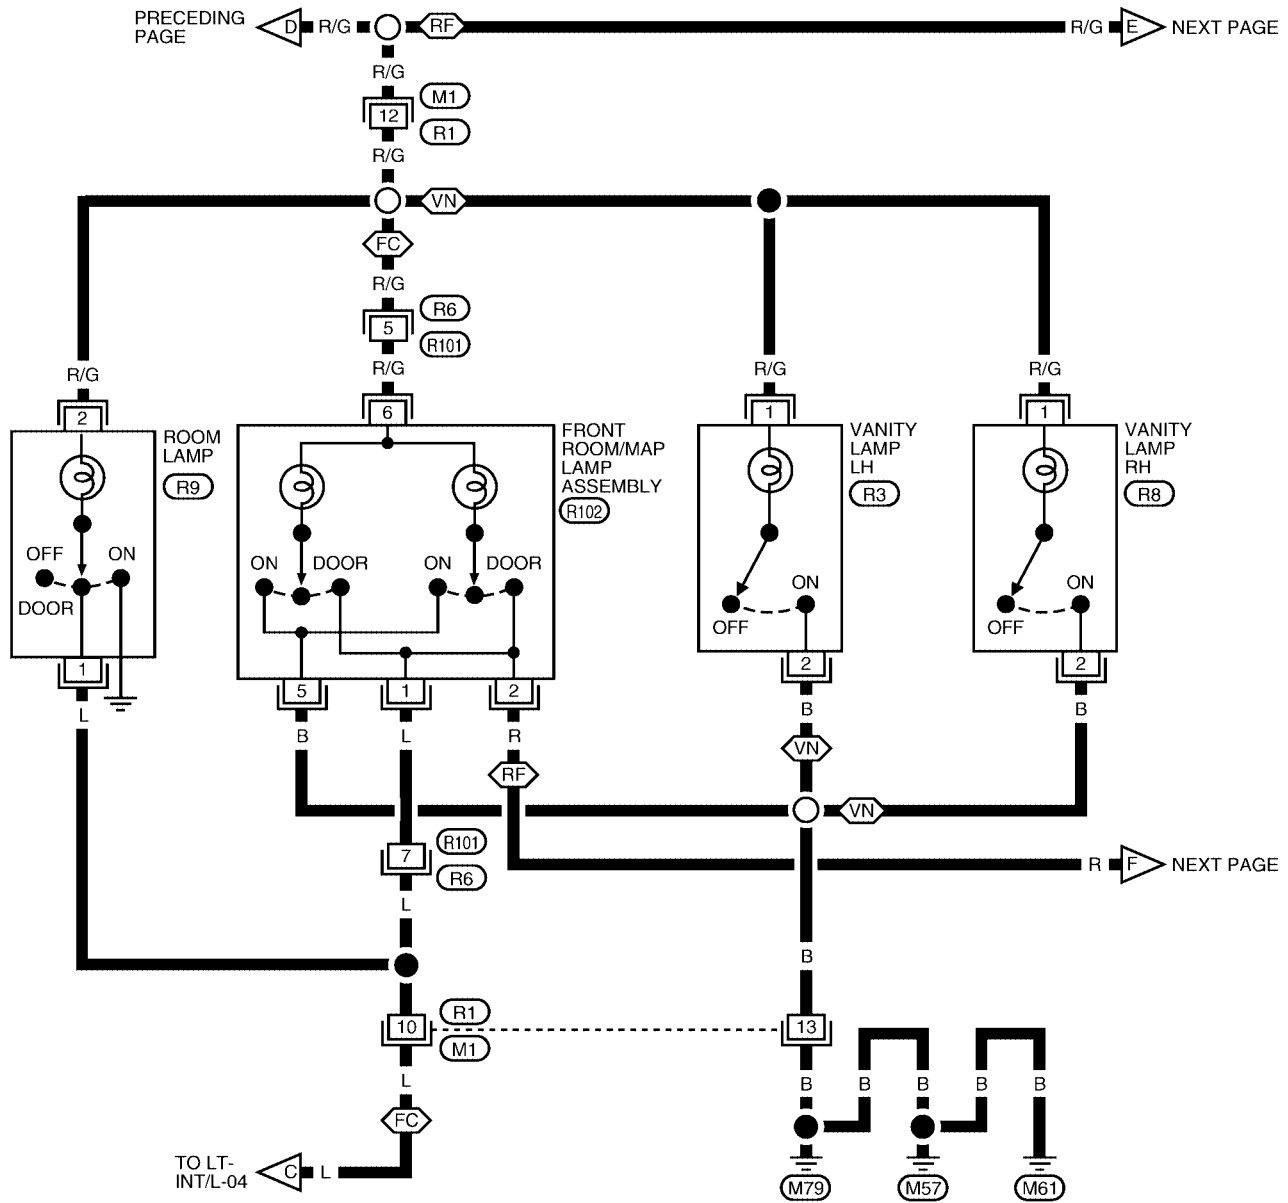
REFER TO THE FOLLOWING.
 M36, M40 - SUPER
 MULTIPLE JUNCTION (SMJ)

WKWA1083E

INTERIOR ROOM LAMP

LT-INT/L-06






-  : WITH FRONT ROOF CONSOLE
-  : WITH REAR ROOF CONSOLE
-  : WITH VANITY LAMPS



WKWA1084E

INTERIOR ROOM LAMP

LT-INT/L-07




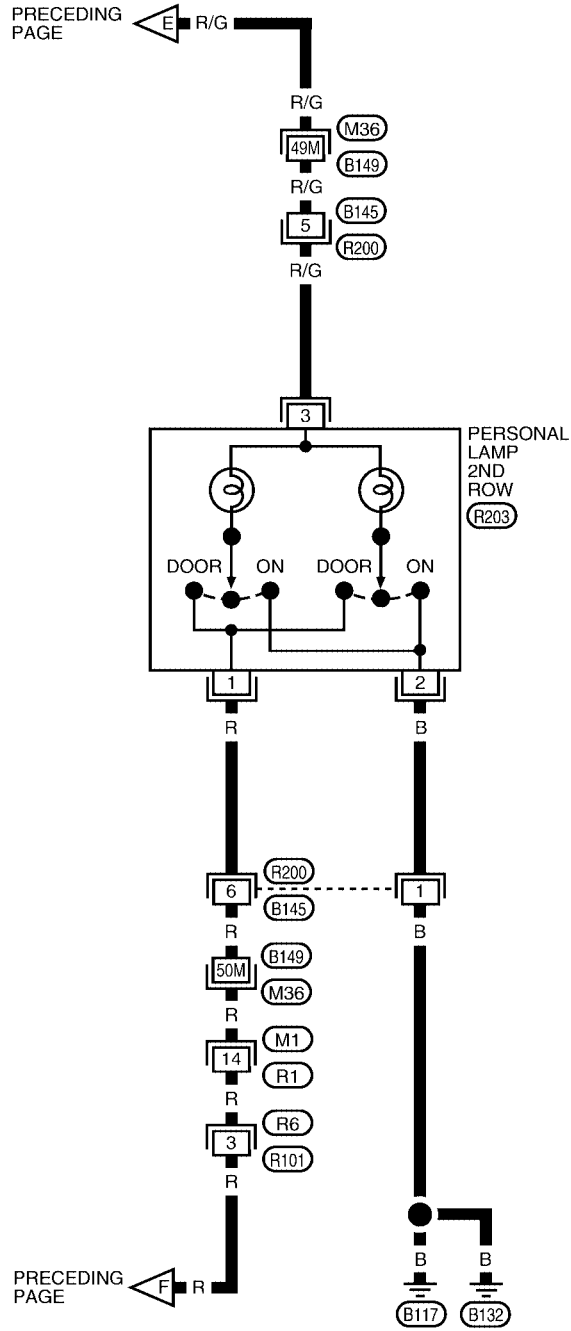


REFER TO THE FOLLOWING.
M36 - SUPER MULTIPLE JUNCTION (SMJ)

LKWA0287E

INTERIOR ROOM LAMP

LT-INT/L-08

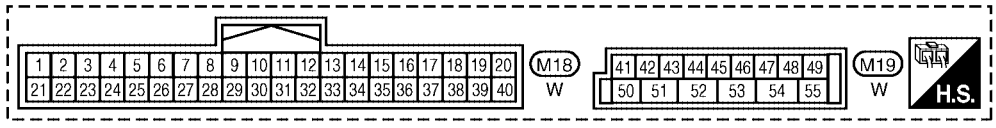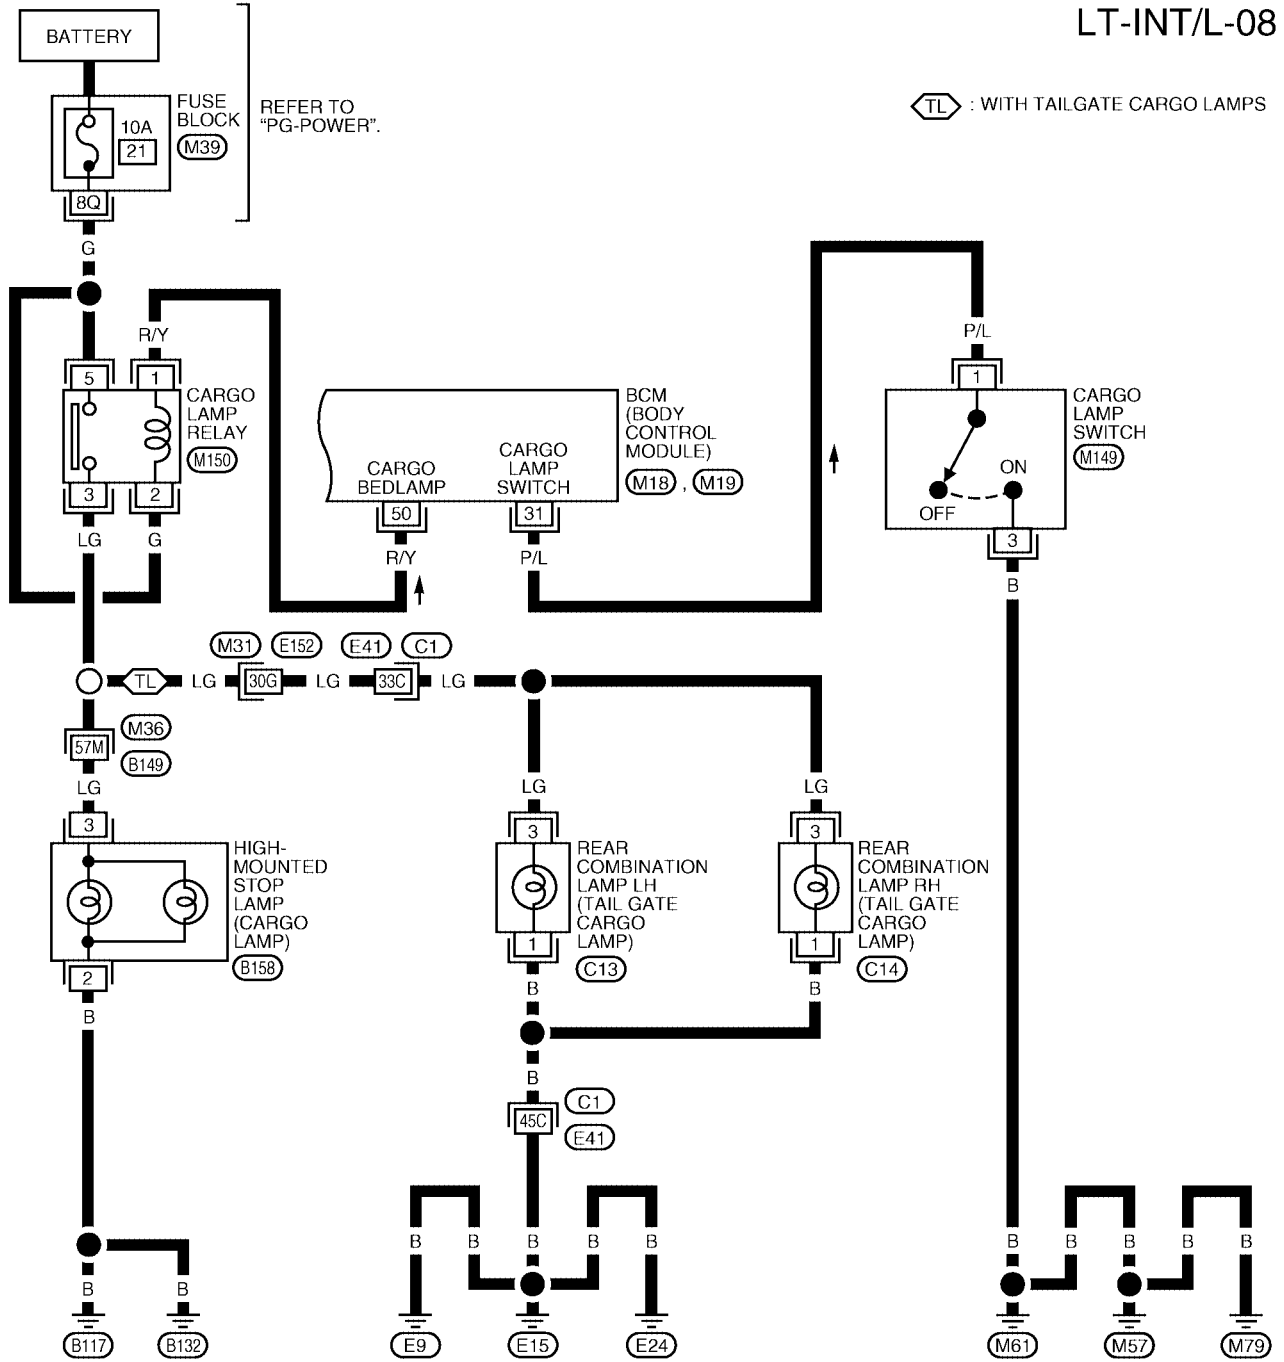

REFER TO THE FOLLOWING.
 (M31), (M36), (C1) - SUPER
 MULTIPLE JUNCTION (SMJ)

WKWA1564E

INTERIOR ROOM LAMP

Terminals and Reference Values for BCM

EKS0076G

Terminal No.	Wire color	Signal name	Measuring condition			Reference value (Approx.)
			Ignition switch	Operation or condition		
12 (crew cab)	R/L	Front door switch RH signal	OFF	Front door switch RH	ON (open)	0V
					OFF (closed)	Battery voltage
12 (king cab)	R/L	Door switch RH signal	OFF	Door switch RH	ON (open)	0V
					OFF (closed)	Battery voltage
13 (crew cab)	GR	Rear door switch RH signal	OFF	Rear door switch RH	ON (open)	0V
					OFF (closed)	Battery voltage
22	G	Power window switch serial link	—	—		
31	P/L	Cargo lamp switch signal	OFF	Cargo lamp switch ON.		0V
				Cargo lamp switch OFF.		Battery voltage
37	B/R	Key-in detection switch signal	OFF	Vehicle key is removed.		0V
				Vehicle key is inserted.		Battery voltage
38	W/L	Ignition power supply	ON	—		Battery voltage
39	W	CAN-H	—	—		—
40	R	CAN-L	—	—		—
47 (crew cab)	SB	Front door switch LH signal	OFF	Front door switch LH	ON (open)	0V
					OFF (closed)	Battery voltage
47 (king cab)	SB	Door switch LH signal	OFF	Door switch LH	ON (open)	0V
					OFF (closed)	Battery voltage
48 (crew cab)	R/Y	Rear door switch LH signal	OFF	Rear door switch LH	ON (open)	0V
					OFF (closed)	Battery voltage
50	R/Y	Cargo bed lamp control	OFF	Cargo lamp switch ON		0V
				Cargo lamp switch OFF		Battery voltage
56	R/G	Battery saver output signal	OFF	30 minutes after ignition switch is turned to OFF		0V
			ON	—		Battery voltage
57	Y/R	Battery power supply	OFF	—		Battery voltage
62	R/W	Step lamp signal	OFF	Any door is open (ON)		0V
				All doors are closed (OFF)		Battery voltage
63	L	Interior room/map lamp signal	OFF	Each interior lamp switch in DOOR position	Any door switch ON (open)	0V
					Any door switch OFF (closed)	Battery voltage
67	B	Ground	ON	—		0V
70	W/B	Battery power supply	OFF	—		Battery voltage

INTERIOR ROOM LAMP

EKS0076H

How to Proceed With Trouble Diagnosis

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-127, "System Description"](#) .
3. Carry out the Preliminary Check. Refer to [LT-143, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Does the interior room lamp operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

Preliminary Check

EKS0076I

INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES OR FUSIBLE LINK

Check for blown BCM fuses or fusible link.

Unit	Power source	Fuse or fusible link No.
BCM	Battery	f
		22
	Ignition switch ON or START position	59

Refer to [LT-134, "Wiring Diagram — INT/L —"](#) .

OK or NG

OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of blown fuse before installing new fuse. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) .

2. CHECK POWER SUPPLY CIRCUIT


1. Disconnect BCM connectors.
2. Check voltage between BCM connector and ground.

Terminals		Ignition switch position	Ignition switch position	
(+)	(-)		OFF	ON
Connector	Terminal (Wire color)	Ground	OFF	ON
	M20		57 (Y/R)	Battery voltage
	70 (W/B)		Battery voltage	Battery voltage
M18	38 (W/L)		0V	Battery voltage

OK or NG

OK >> GO TO 3.

NG >> Check harness for open between BCM and fuse.

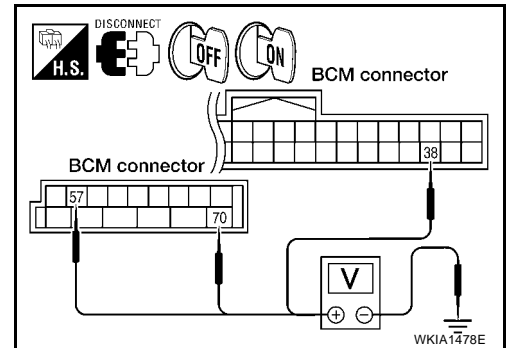

OK or NG

OK >> GO TO 3.

NG >> Check harness for open between BCM and fuse.

3. CHECK GROUND CIRCUIT


Check continuity between BCM and ground.

Terminals		Continuity
Connector	Terminal (Wire color)	
M20	67 (B)	Ground
		Yes

OK or NG

OK >> Inspection End.

NG >> Check harness ground circuit.

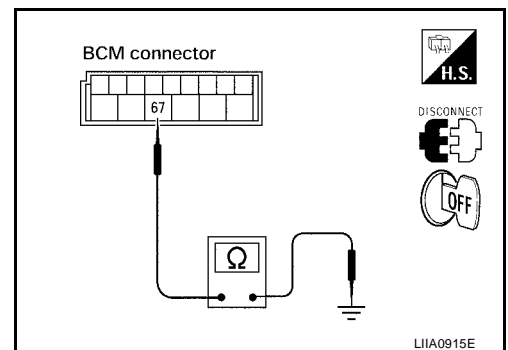

INTERIOR ROOM LAMP

EKS0076J

CONSULT-II Function (BCM)

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

CONSULT-II OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

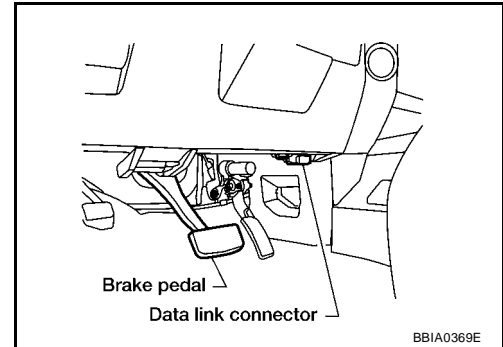

2. Touch "START (NISSAN BASED VHCL)".

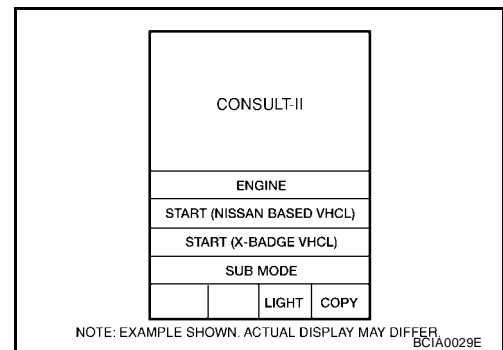


3. Touch "BCM" on "SELECT SYSTEM" screen. If "BCM" is not indicated, go to [GI-38, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

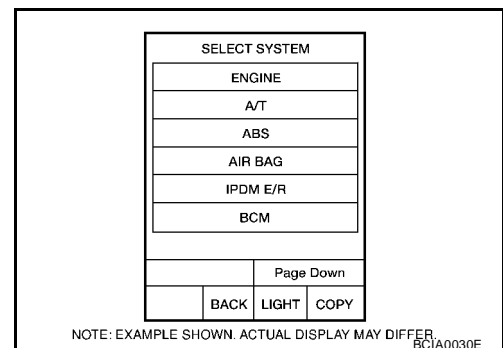

INTERIOR ROOM LAMP

4. Touch "INT LAMP" on "SELECT SYSTEM" screen.

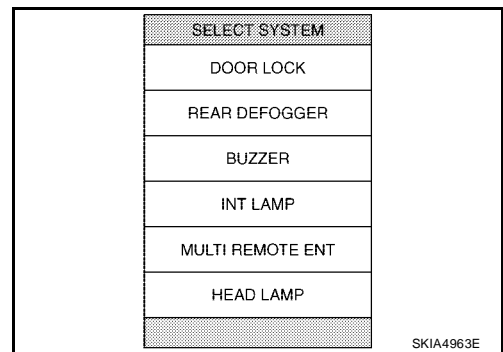

A
B
C
D

WORK SUPPORT

Operation Procedure

1. Touch "INT LAMP" on "SELECT SYSTEM" screen.
2. Touch "WORK SUPPORT" on "SELECT DIAG MODE" screen.
3. Touch "SET I/L D-UNLCK INTCON" on "SELECT WORK ITEM" screen.
4. Touch "START".
5. Touch "CHANGE SETT".
6. The setting will be changed and "CUSTOMIZING COMPLETED" will be displayed.
7. Touch "END".

E
F
G

Display Item List

Item	Description	CONSULT-II
SET I/L D-UNLCK INTCON	The 30 seconds operating function of the interior room lamps can be selected when driver door is released (unlocked).	ON/OFF
ROOM LAMP ON TIME SET	The time in order to escalate illumination can be adjusted when the interior room lamps are turned on.	MODE 1 - 7
ROOM LAMP OFF TIME SET	The time in order to diminish illumination can be adjusted when the interior room lamps are turned off.	MODE 1 - 7

H
I
J

Reference between "MODE" and "TIME" for "TURN ON/OFF".

MODE	1	2	3	4	5	6	7
Time (sec.)	0.5	1	2	3	4	5	0

LT

DATA MONITOR

Operation Procedure

1. Touch "INT LAMP" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on "SELECT MONITOR ITEM" screen.

L
M

All signals	Monitors all the signals.
Selection from menu	Selects and monitors the individual signal.

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

Display Item List

Monitor item	Contents
IGN ON SW "ON/OFF"	Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
KEY ON SW "ON/OFF"	Displays "Key inserted (ON)/key removed (OFF)" status judged from the key switch signal.

INTERIOR ROOM LAMP

Monitor item	Contents
DOOR SW-DR "ON/OFF"	Displays status of the driver door as judged from the driver door switch signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-AS "ON/OFF"	Displays "Door open (ON)/Door closed (OFF)" status, determined from passenger door switch signal.
DOOR SW-RR "ON/OFF"	Displays "Door open (ON)/Door closed (OFF)" status, determined from rear door switch RH signal.
DOOR SW-RL "ON/OFF"	Displays "Door open (ON)/Door closed (OFF)" status, determined from rear door switch LH signal.
BACK DOOR SW "ON/OFF"	Displays "Door open (ON)/Door closed (OFF)" status, determined from back door switch signal.
KEY CYL LK-SW "ON/OFF"	Displays "Door locked (ON) status, determined from key cylinder lock switch in driver door.
KEY CYL UN-SW "ON/OFF"	Displays "Door unlocked (OFF) status, determined from key cylinder lock switch in driver door.
CDL LOCK SW "ON/OFF"	Displays "Door locked (ON)/Door unlocked (OFF) status, determined from locking detection switch in driver door.
CDL UNLOCK SW "ON/OFF"	Displays "Door unlocked (OFF)" status, determined from locking detection switch in passenger door.
KEYLESS LOCK "ON/OFF"	Displays "Locked (ON)/Other (OFF)" status, determined from lock signal.
KEYLESS UNLOCK "ON/OFF"	Displays "Unlocked (ON)/Other (OFF)" status, determined from unlock signal.

ACTIVE TEST

Operation Procedure

1. Touch "INT LAMP" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" or "OFF" deactivates the operation.

Display Item List

Test item	Description
INT LAMP	Interior room lamp can be operated by any ON-OFF operations.
IGN ILLUM ^{NOTE}	Ignition keyhole illumination can be operated by ON-OFF operation.

NOTE: This item is displayed but this model is not equipped.

Front Room/Map Lamp Assembly Control Does Not Operate

EKS0076K

1. CHECK EACH SWITCH

Select "BCM" on CONSULT-II. With "INT LAMP" data monitor, make sure switches listed in display item list turn ON-OFF linked with switch operation. Refer to [LT-145, "Display Item List"](#) for switches and their functions.

OK or NG

- OK >> GO TO 2.
 NG >> Inspect malfunctioning switch system.

DATA MONITOR	
MONITOR	
IGN ON SW	ON
KEY ON SW	ON
DOOR SW-DR	ON
DOOR SW-AS	ON
DOOR SW-RR	OFF
DOOR SW-RL	OFF
BACK DOOR SW	OFF
KEY CYL LK-SW	OFF
KEY CYL UN-SW	OFF

SKIA5930E

INTERIOR ROOM LAMP


2. ACTIVE TEST

1. Select "BCM" on CONSULT-II. Select "INT LAMP" active test.
2. When switch is in "DOOR" position, use active test to make sure interior room lamp operates.

Room lamps should turn on.

OK or NG

- OK >> Replace BCM. Refer to [BCS-25, "Removal and Installation of BCM"](#) .
- NG >> GO TO 3.

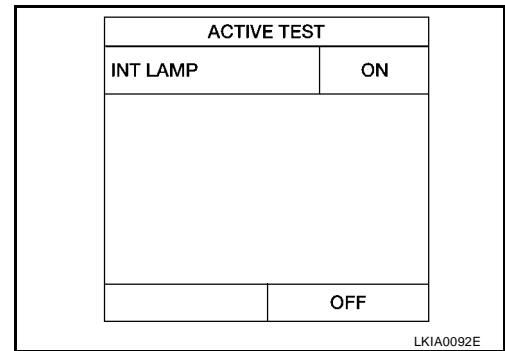


3. CHECK FRONT ROOM/MAP LAMP ASSEMBLY INPUT

1. Turn ignition switch OFF.
2. Check voltage between front room/map lamp assembly harness connector R102 terminal 6 (R/G) and ground.

Battery voltage should exist.

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 5.

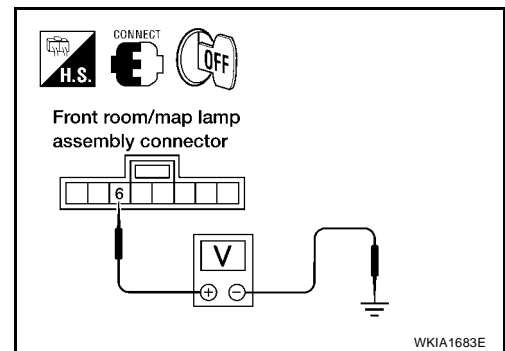


4. CHECK FRONT ROOM/MAP LAMP ASSEMBLY CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between BCM harness connector M20 terminal 63 (L) and front room/map lamp assembly harness connector R102 terminal 1 (L).

Continuity should exist.

OK or NG

- OK >> Replace front room/map lamp assembly.
- NG >> Repair harness or connector.

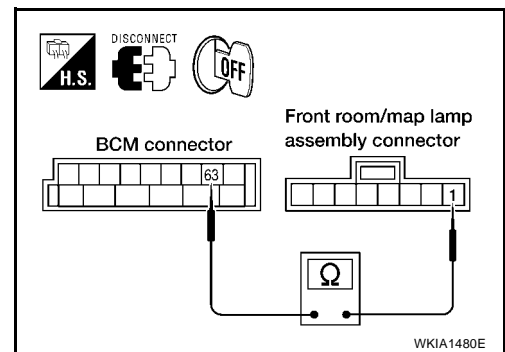


5. CHECK FRONT ROOM/MAP LAMP ASSEMBLY CIRCUIT

1. Disconnect BCM connector and interior room lamp connector.
2. Check continuity between BCM harness connector M20 terminal 56 (R/G) and front room/map lamp assembly harness connector R102 terminal 6 (R/G).

Continuity should exist.

OK or NG

- OK >> Replace BCM if interior lamp does not work after setting the connector again. Refer to [BCS-25, "Removal and Installation of BCM"](#) .
- NG >> Repair harness or connector between BCM and room/map lamp.

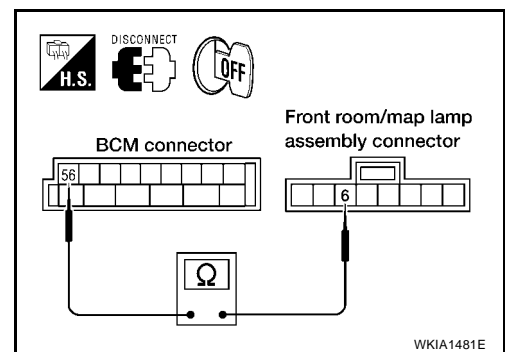

INTERIOR ROOM LAMP

Personal Lamp 2nd Row Control Does Not Operate (Room/Map Lamps Operate)

EKS0076L

1. CHECK EACH DOOR SWITCH

Select "BCM" on CONSULT-II. With "INT LAMP" data monitor, make sure switches listed in display item list turn ON-OFF linked with switch operation. Refer to [LT-128, "SWITCH OPERATION"](#) for switches and their functions.

OK or NG

- OK >> GO TO 2.
- NG >> Inspect malfunctioning door switch.

DATA MONITOR	
MONITOR	
IGN ON SW	ON
KEY ON SW	ON
DOOR SW-DR	ON
DOOR SW-AS	ON
DOOR SW-RR	OFF
DOOR SW-RL	OFF
BACK DOOR SW	OFF
KEY CYL LK-SW	OFF
KEY CYL UN-SW	OFF

SKIA5930E


2. CHECK PERSONAL LAMP 2ND ROW OUTPUT

1. Turn ignition switch OFF.
2. Confirm lamp switch is in the "DOOR" position.
3. Disconnect personal lamp 2nd row connector.
4. Open any door.
5. Check voltage between personal lamp 2nd row harness connector terminal 3 (R/G) and ground.

Battery voltage should exist.

OK or NG

- OK >> GO TO 3.
- NG >> Repair harness or connector.

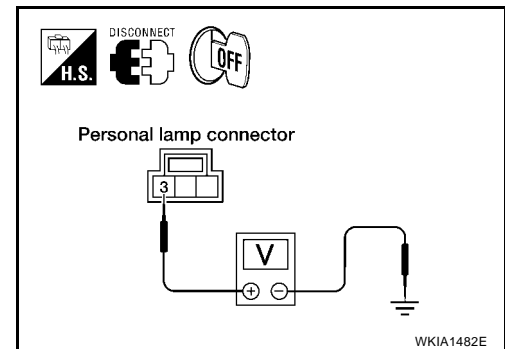


3. CHECK PERSONAL LAMP 2ND ROW CONTROL CIRCUIT

1. Disconnect front room/map lamp assembly connector.
2. Check continuity between front room/map lamp assembly harness connector R102 terminal 2 (R) and personal lamp 2nd row harness connector terminal 1 (R).

Continuity should exist.

OK or NG

- OK >> Replace personal lamp 2nd row.
- NG >> Repair harness or connector.

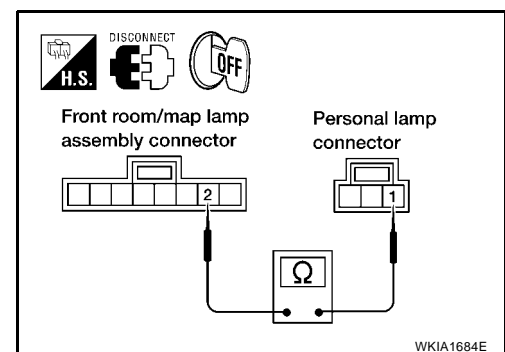

INTERIOR ROOM LAMP

EKS0076M

All Step/Foot/Puddle Lamps Do Not Operate

1. CHECK EACH DOOR SWITCH

Select "BCM" on CONSULT-II. With "INT LAMP" data monitor, make sure switches listed in display item list turn ON-OFF linked with switch operation. Refer to [LT-145, "Display Item List"](#) for switches and their functions.

OK or NG

- OK >> GO TO 2.
- NG >> Inspect malfunctioning switch system.

DATA MONITOR	
MONITOR	
IGN ON SW	ON
KEY ON SW	ON
DOOR SW-DR	ON
DOOR SW-AS	ON
DOOR SW-RR	OFF
DOOR SW-RL	OFF
BACK DOOR SW	OFF
KEY CYL LK-SW	OFF
KEY CYL UN-SW	OFF

SKIA5930E


2. CHECK STEP LAMP POWER SUPPLY

1. Turn ignition switch OFF.
2. Check voltage between front step lamp LH harness connector D11 terminal + (R/G) and ground.

Battery voltage should exist.

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 4.

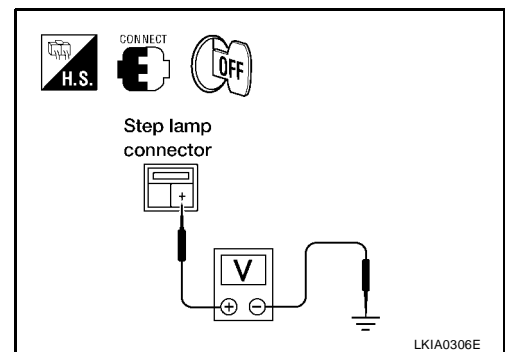


3. CHECK STEP LAMP CONTROL CIRCUIT

1. Disconnect BCM connector and front step lamp LH connector.
2. Check continuity between BCM harness connector M20 terminal 62 (R/W) and front step lamp LH harness connector D11 terminal - (R/W).

Continuity should exist.

OK or NG

- OK >> Replace BCM if step lamp does not work after setting the connector again. Refer to [BCS-25, "Removal and Installation of BCM"](#).
- NG >> Repair harness or connector.

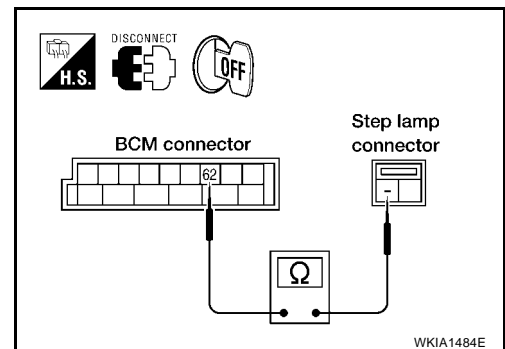


4. CHECK STEP LAMP CIRCUIT

1. Disconnect BCM connector and front step lamp LH connector.
2. Check continuity between BCM harness connector M20 terminal 56 (R/G) and front step lamp LH harness connector D11 terminal + (R/G).

Continuity should exist.

OK or NG

- OK >> Replace BCM if step lamp does not work after setting the connector again. Refer to [BCS-25, "Removal and Installation of BCM"](#).
- NG >> Repair harness or connector.

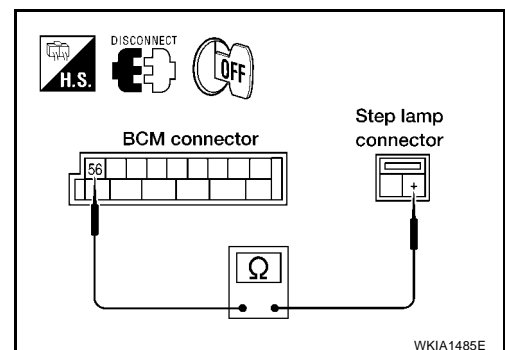

INTERIOR ROOM LAMP

All Interior Room Lamps Do Not Operate

EKS0076N


1. CHECK POWER SUPPLY CIRCUIT

1. All interior room lamp switches are OFF.
2. Turn ignition switch ON.
3. Check voltage between BCM harness connector M20 terminal 56 (R/G) and ground.

Battery voltage should exist.

OK or NG

- OK >> Repair harness or connector. To prevent making a short circuit, be sure to disconnect battery negative cable after repairing harness, and then reconnect.
- NG >> Replace BCM. Refer to [BCS-25, "Removal and Installation of BCM"](#).

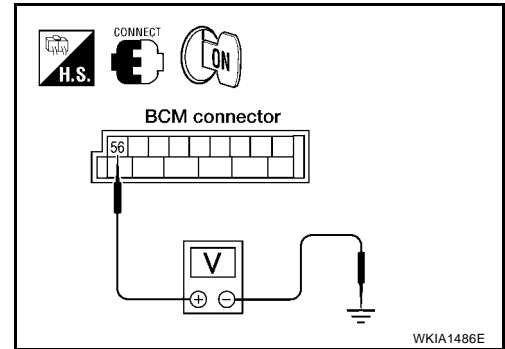


ILLUMINATION

PFP:27545

ILLUMINATION

Component Parts and Harness Connector Location

EKS00760

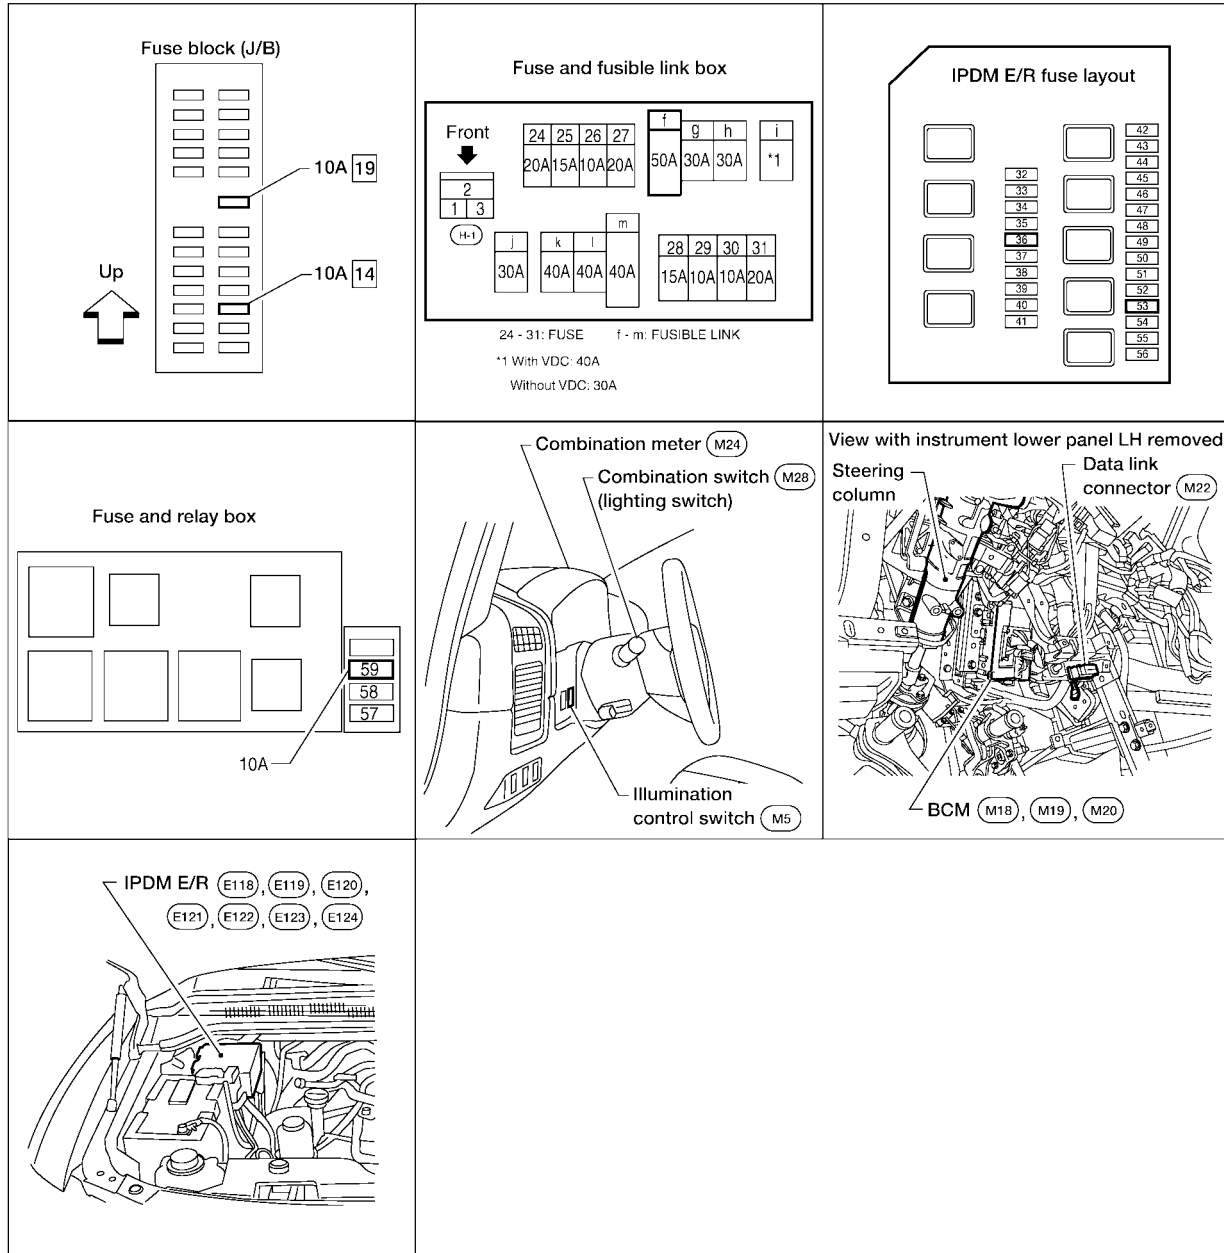

WKIA3587E

System Description

EKS0076P

Control of the illumination lamps operation is dependent upon the position of the lighting switch (combination switch). When the lighting switch is placed in the 1ST or 2ND position (or if the auto light system is activated) the BCM (body control module) receives input signal requesting the illumination lamps to illuminate. This input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the tail lamp relay coil. This relay, when energized, directs power to the illumination lamps, which then illuminate. Power is supplied at all times

- to tail lamp relay, located in the IPDM E/R, and
- through 50A fusible link (letter f , located in the fuse and fusible link box)
- to BCM terminal 70, and

A
B
C
D
E
F
G
H
I
J
LT
L
M

ILLUMINATION

- through 20A fuse (No. 53, located in the IPDM E/R)
- to CPU of the IPDM E/R, and
- through 10A fuse [No.19, located in fuse block (J/B)]
- to combination meter terminal 8, and
- to ignition relay, located in the IPDM E/R.

With the ignition switch in the ON or START position, power is supplied

- through 10A fuse (No. 59, located in the fuse and relay box)
- to BCM terminal 38, and
- to ignition relay, located in the IPDM E/R, and
- through 10A fuse [No. 14, located in the fuse block (J/B)]
- to combination meter terminal 24.

Ground is supplied

- to BCM terminal 67 and
- to combination meter terminal 17
- through grounds M57, M61, and M79, and
- to IPDM E/R terminals 38 and 59
- through grounds E9, E15 and E24.

ILLUMINATION OPERATION BY LIGHTING SWITCH

With the lighting switch in the 1ST or 2ND position (or if the auto light system is activated), the BCM receives input signal requesting the illumination lamps to illuminate. This input signal is communicated to the IPDM E/R across the CAN communication lines. The CPU of the IPDM E/R controls the tail lamp relay coil, which, when energized, directs power

- through 10A fuse (No. 36, located in the IPDM E/R)
- through IPDM E/R terminal 49
- to illumination control switch terminal 1
- to VDC OFF switch terminal 3 (with VDC)
- to front room/map lamp assembly (console box illumination) terminal 7
- to AV switch terminal 3
- to hazard switch terminal 7
- to audio unit terminal 8
- to differential lock mode switch terminal 4 (with electronic locking rear differential)
- to rear sonar system OFF switch terminal 3 (with rear sonar system)
- to glove box lamp terminal + (with glove box lamp)
- to display control unit terminal 14 (with NAVI)
- to 4WD shift switch terminal 7 (with 4-wheel drive)
- to A/C control unit terminal 23
- to cargo lamp switch terminal 4
- to DVD player terminal 12 (with DVD entertainment system)
- to NAVI control unit terminal 25 (with NAVI)
- to pedal adjusting switch terminal 5
- to electric brake (pre-wiring) terminal 4
- to A/T device terminal 11 (with floor shift)
- to heated seat switch LH and RH terminal 5 (with heated seats)
- to tow mode switch terminal 3.

Illumination is controlled

- through illumination control switch terminal 2
- to VDC OFF switch terminal 4 (with VDC)
- to front room/map lamp assembly (console box illumination) terminal 8
- to AV switch terminal 4

ILLUMINATION

- to hazard switch terminal 8
- to audio unit terminal 7
- to differential lock mode switch terminal 5 (with electronic locking rear differential)
- to rear sonar system OFF switch terminal 4 (with rear sonar system)
- to 4WD switch terminal 8 (with 4-wheel drive)
- to A/C control unit terminal 24
- to cargo lamp switch terminal 2
- to DVD player terminal 10 (with DVD entertainment system)
- to pedal adjusting switch terminal 6
- to A/T device terminal 12 (with floor shift)
- to heated seat switch LH and RH terminal 6 (with heated seats)
- to tow mode switch terminal 4
- to combination meter terminal 18.

Ground is supplied

- to illumination control switch terminal 3
- to glove box lamp terminal – (with glove box lamp)
- to display control unit terminal 3 (with NAVI) and
- to electric brake (pre-wiring) terminal 1
- through grounds M57, M61 and M79, and
- to NAVI control unit terminal 30 (with NAVI)
- through grounds B117 and B132.

With power and ground supplied, illumination lamps illuminate.

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 1ST or 2ND position (or if auto light system is activated), and the ignition switch is turned from ON or ACC to OFF, the battery saver control function is activated. Under this condition, the illumination lamps remain illuminated for 5 minutes, then the illumination lamps are turned off.

When the lighting switch is turned from OFF to 1ST or 2ND position (or if auto light system is activated) after illumination lamps are turned off by the battery saver control, the illumination lamps illuminate again.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

CAN Communication System Description


Refer to [LAN-8, "CAN COMMUNICATION"](#) .

EKS0076Q

ILLUMINATION

Schematic


EKS0076R

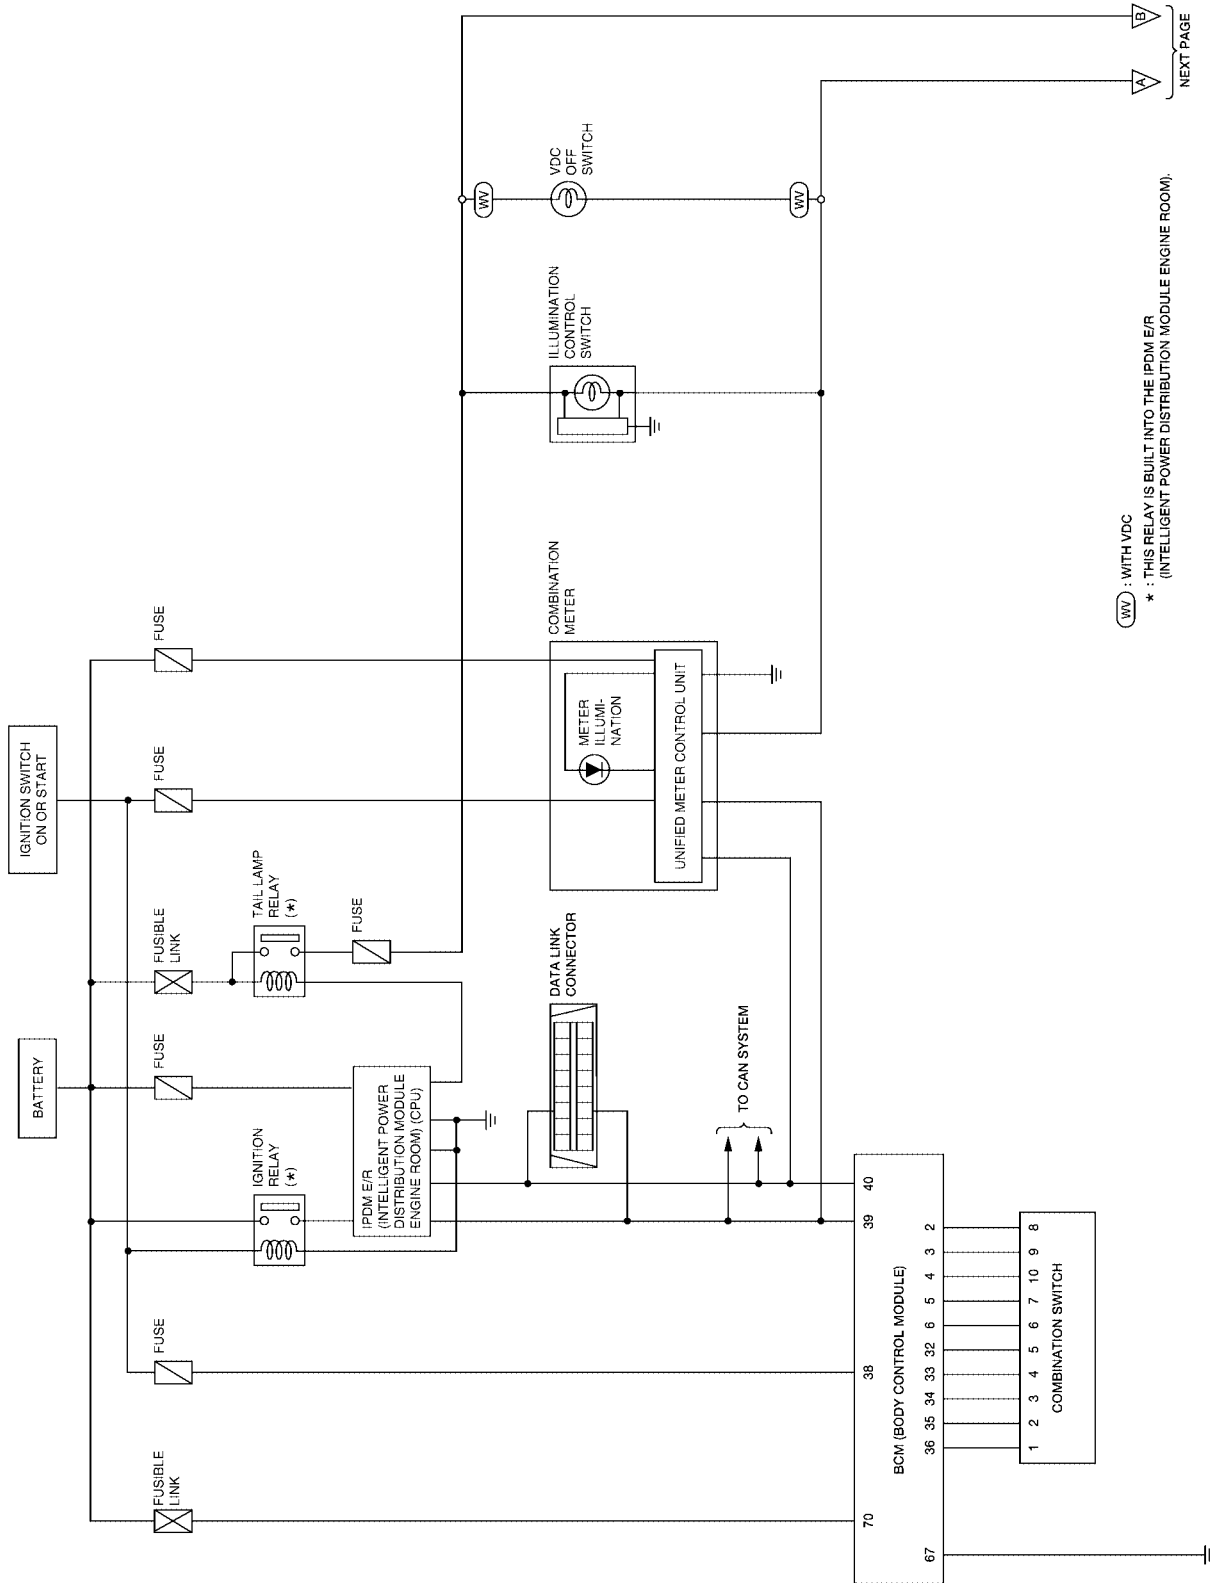

(WV) : WITH VDC
 * : THIS RELAY IS BUILT INTO THE IPDM E/R
 (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM).


WKWA1085E

ILLUMINATION

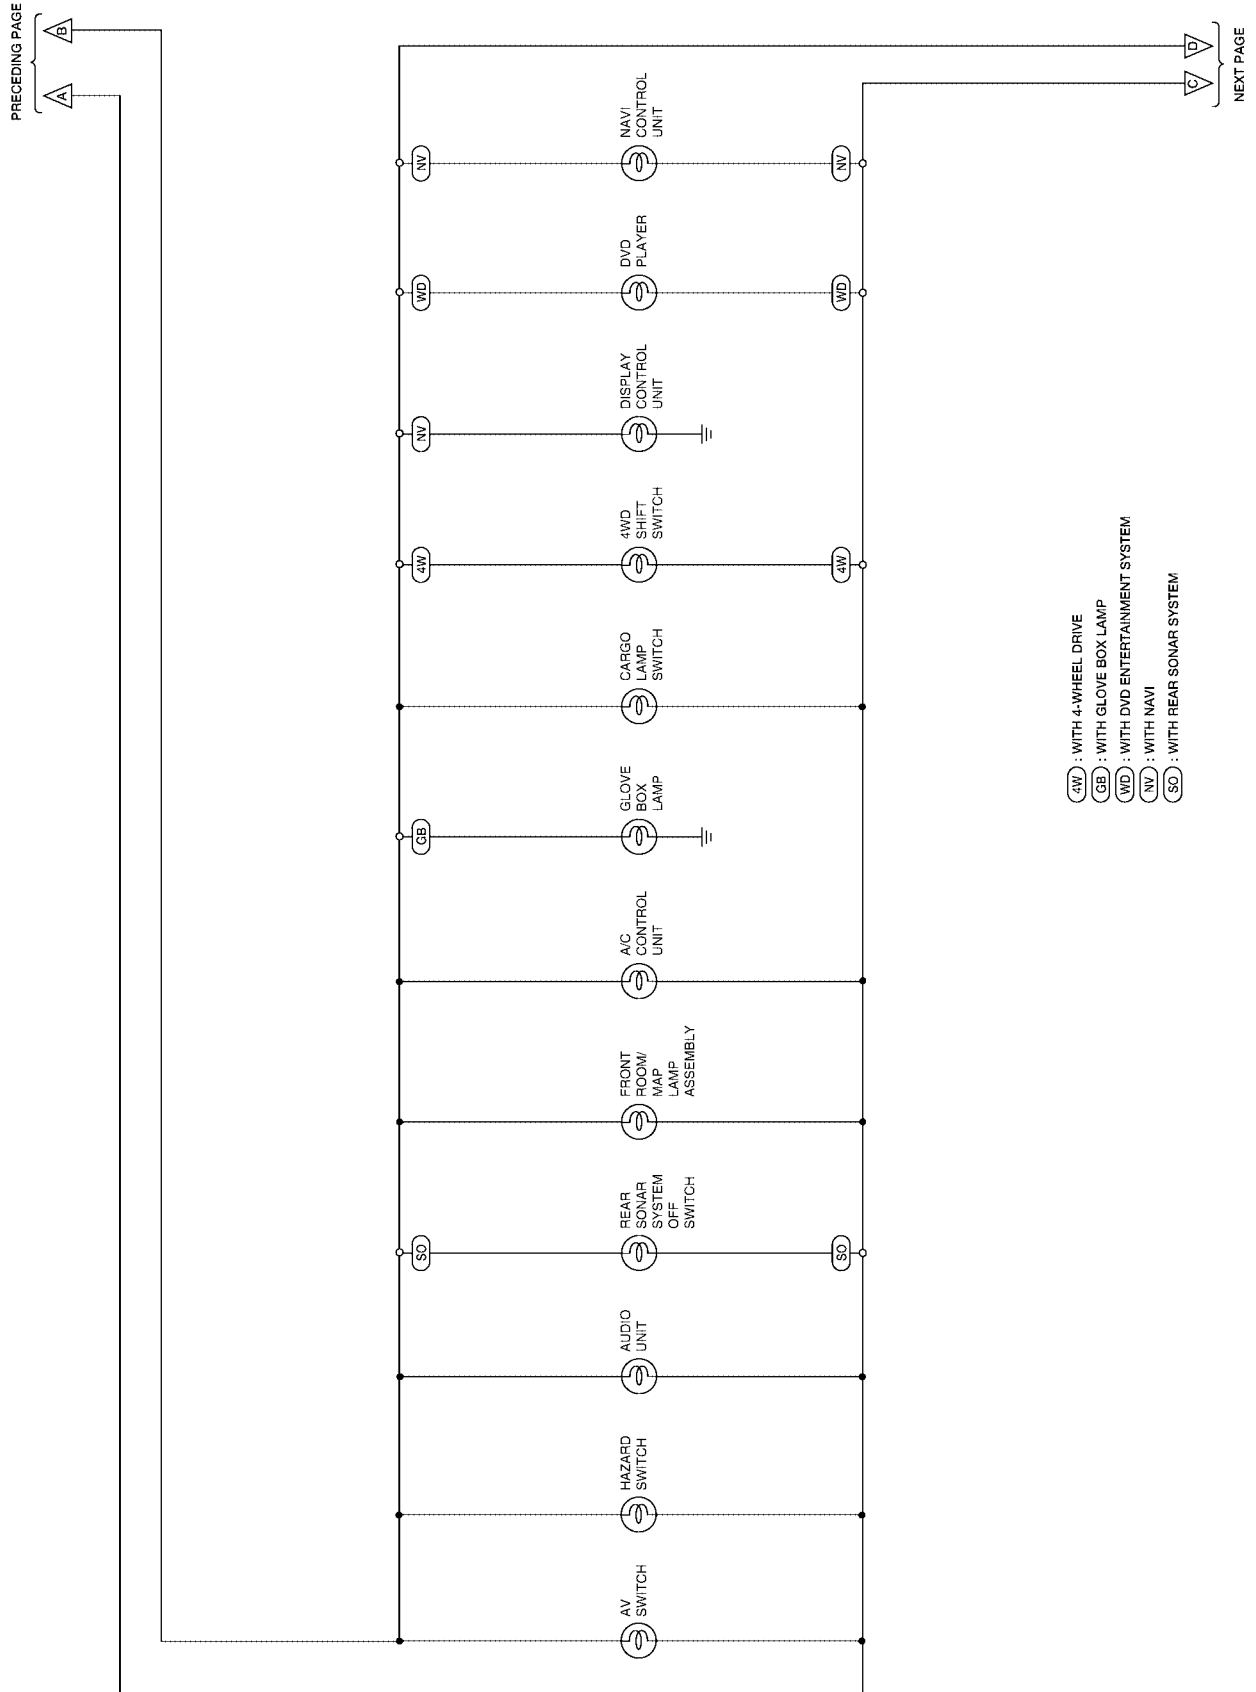

A
B
C
D
E
F
G
H
I
J
LT
L
M

ILLUMINATION

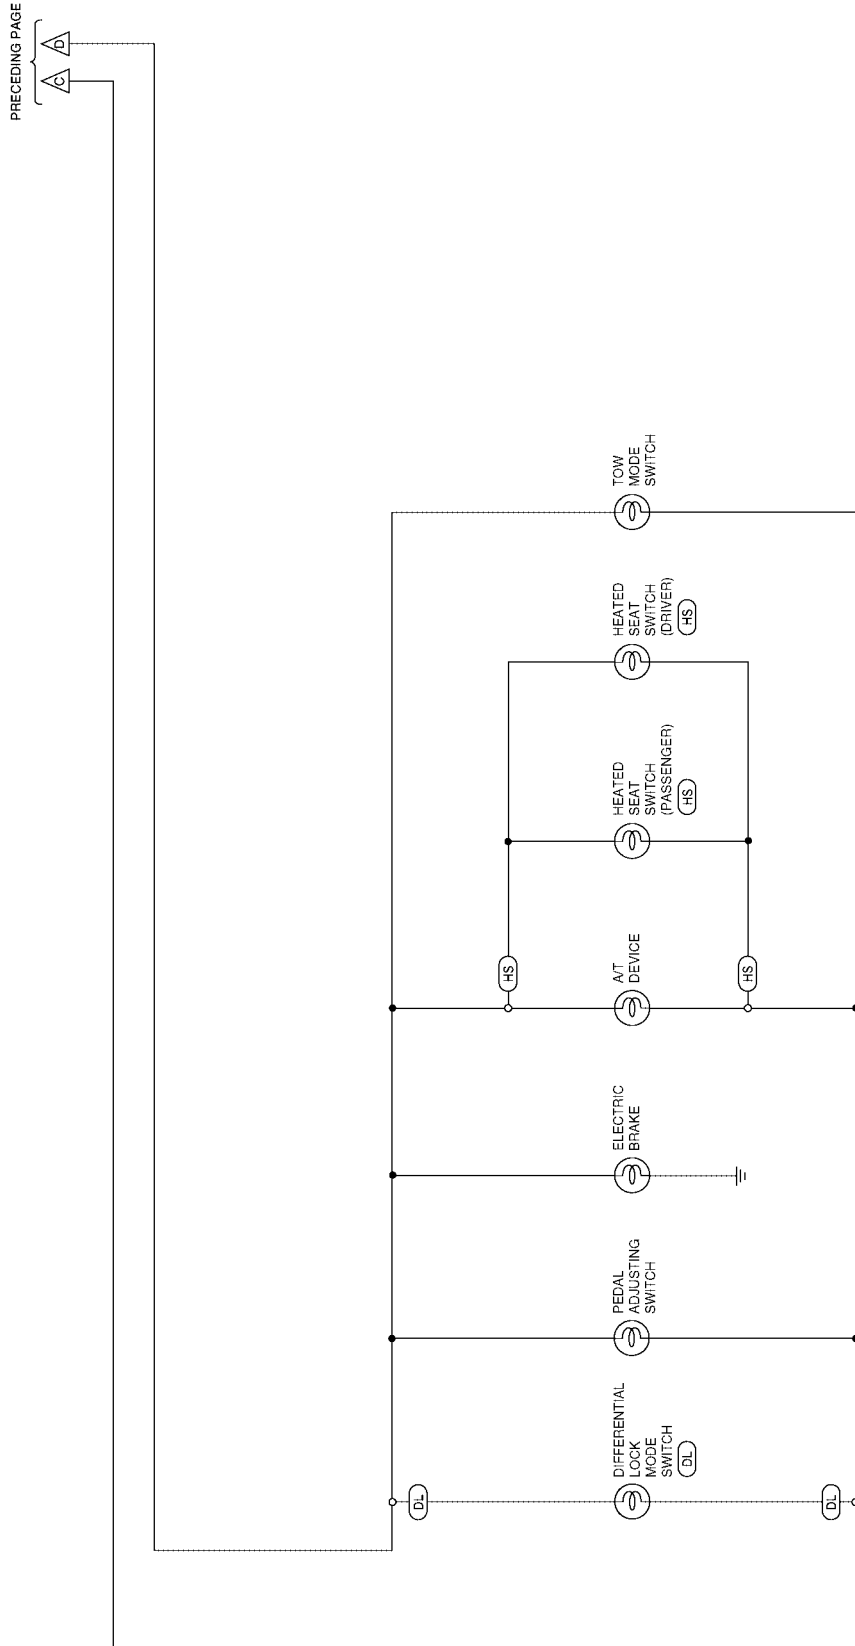

(HS) : WITH HEATED SEATS
 (DL) : WITH ELECTRONIC LOCKING REAR DIFFERENTIAL



ILLUMINATION

Wiring Diagram — ILL —

EKS0076S

LT-ILL-01

— — — : DATA LINE

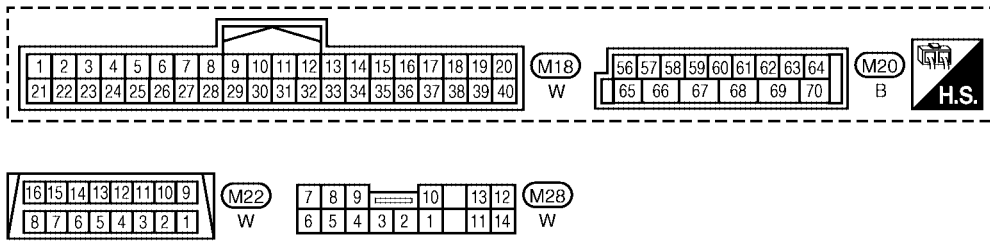
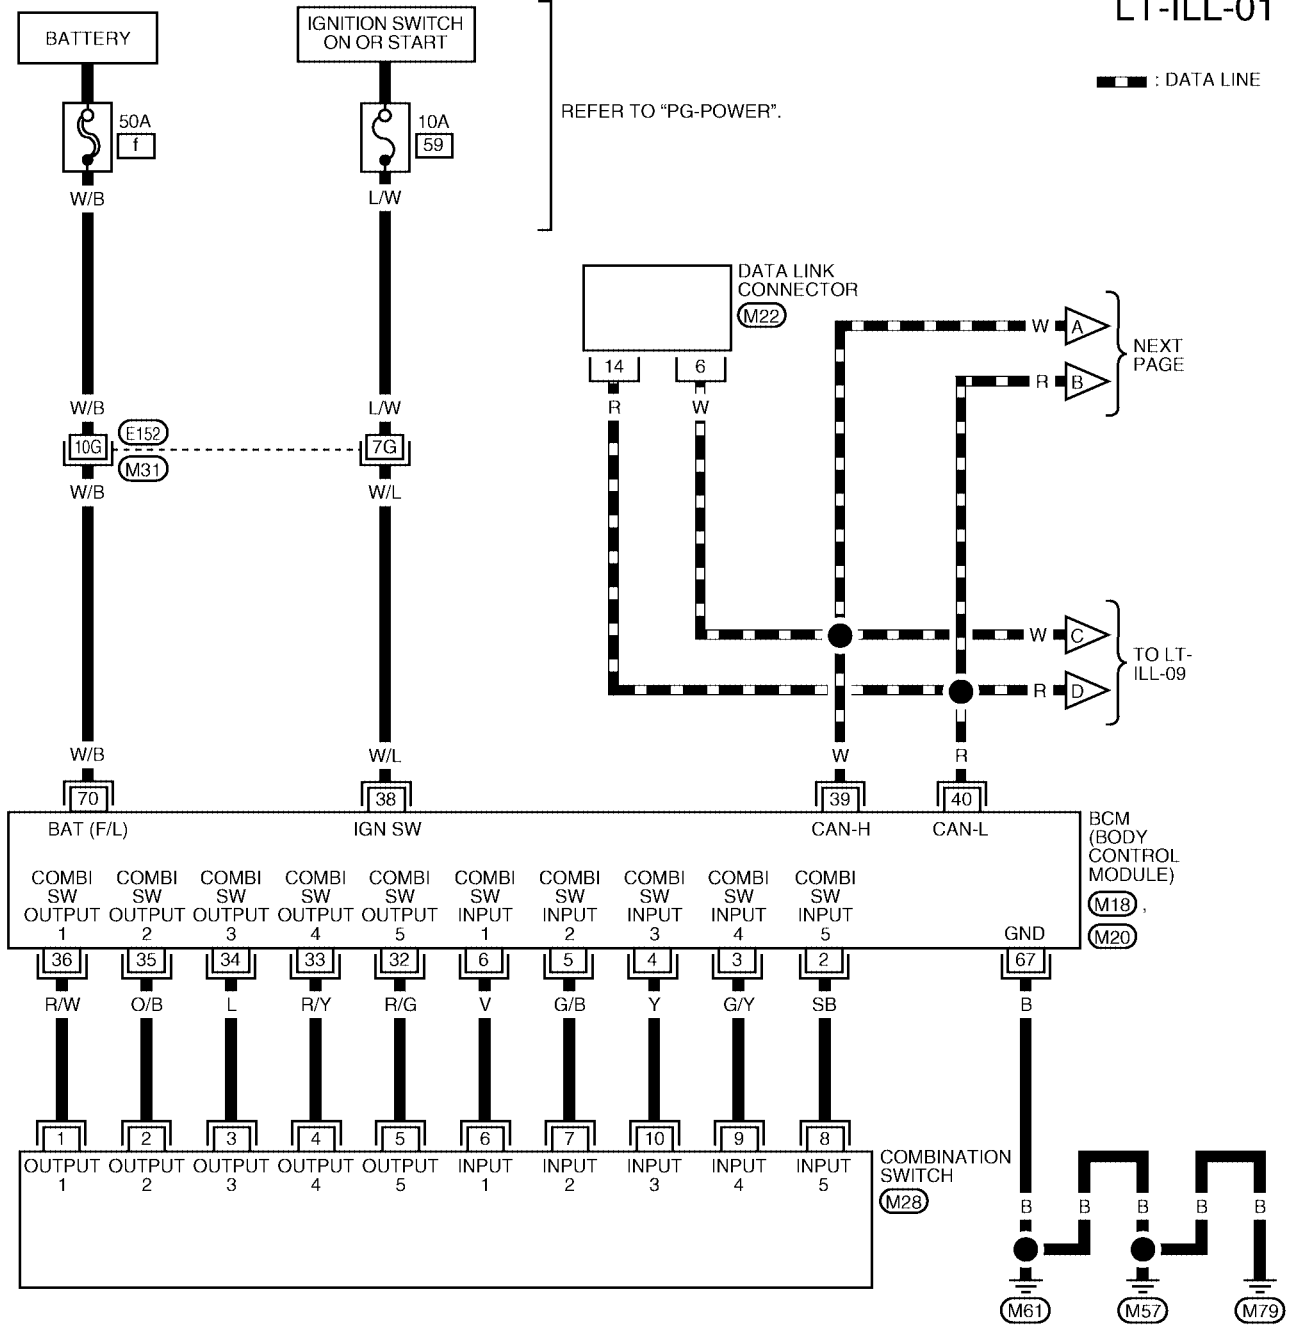


REFER TO THE FOLLOWING.
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA1164E

ILLUMINATION

LT-ILL-02




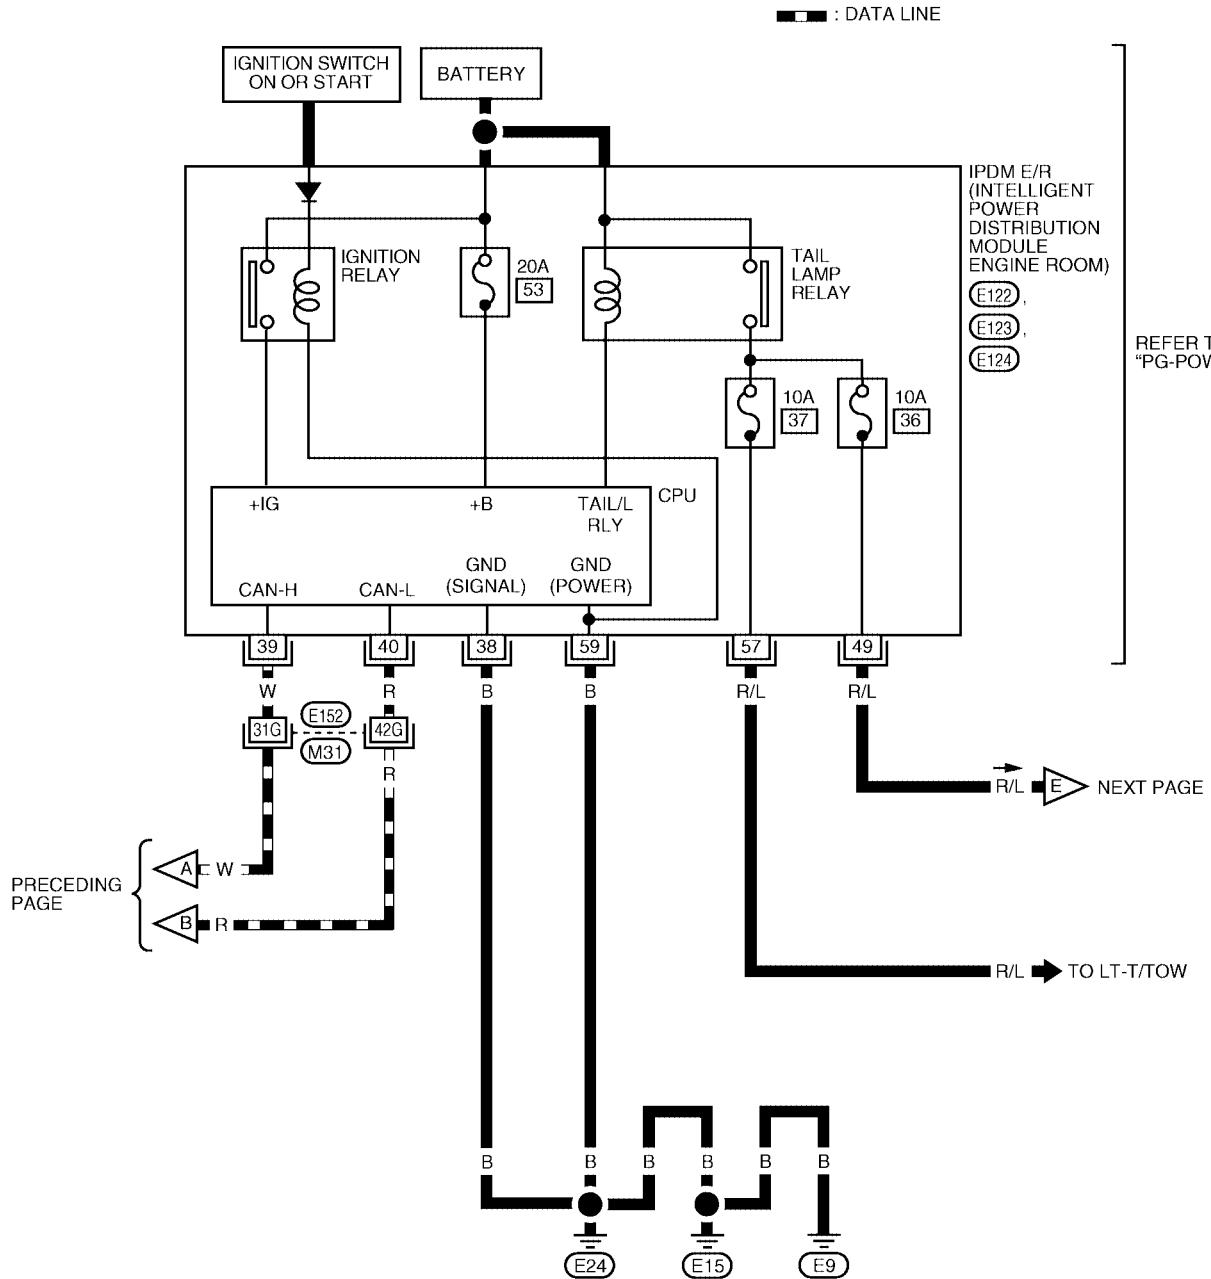


REFER TO THE FOLLOWING.
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA1514E

ILLUMINATION

LT-ILL-03


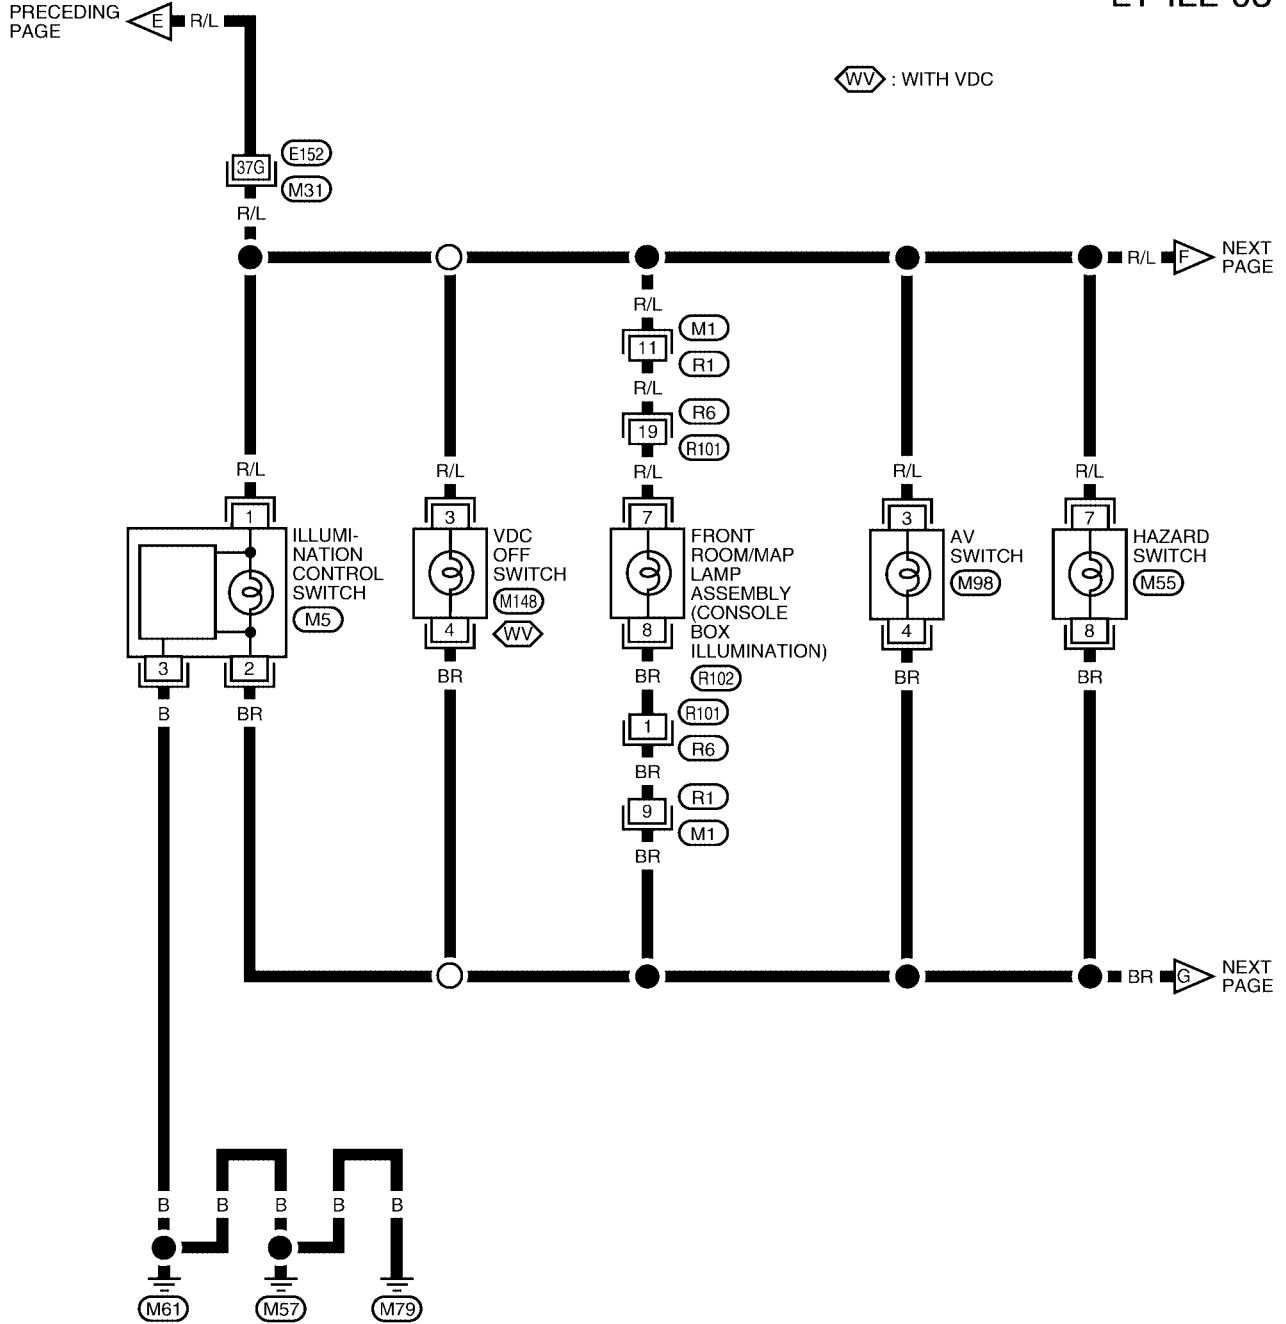


REFER TO THE FOLLOWING.
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA1089E

ILLUMINATION

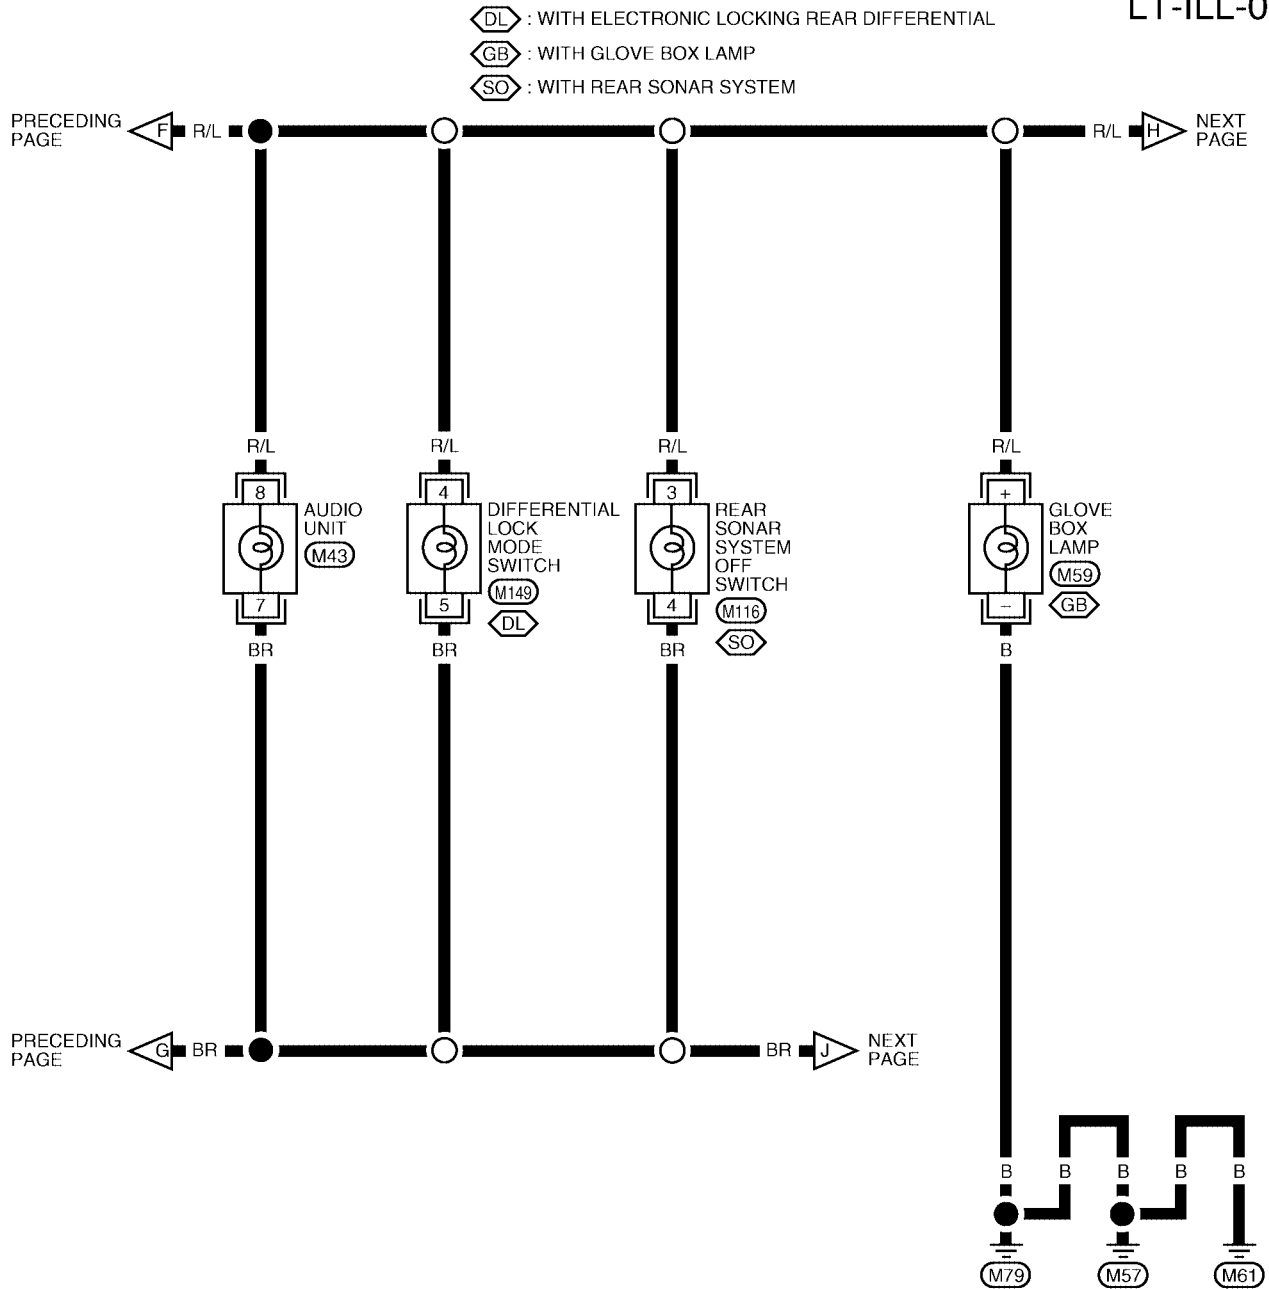

LT-ILL-04





WKWA1506E

ILLUMINATION

LT-ILL-05


 : WITH NAVI
 : WITH 4-WHEEL DRIVE

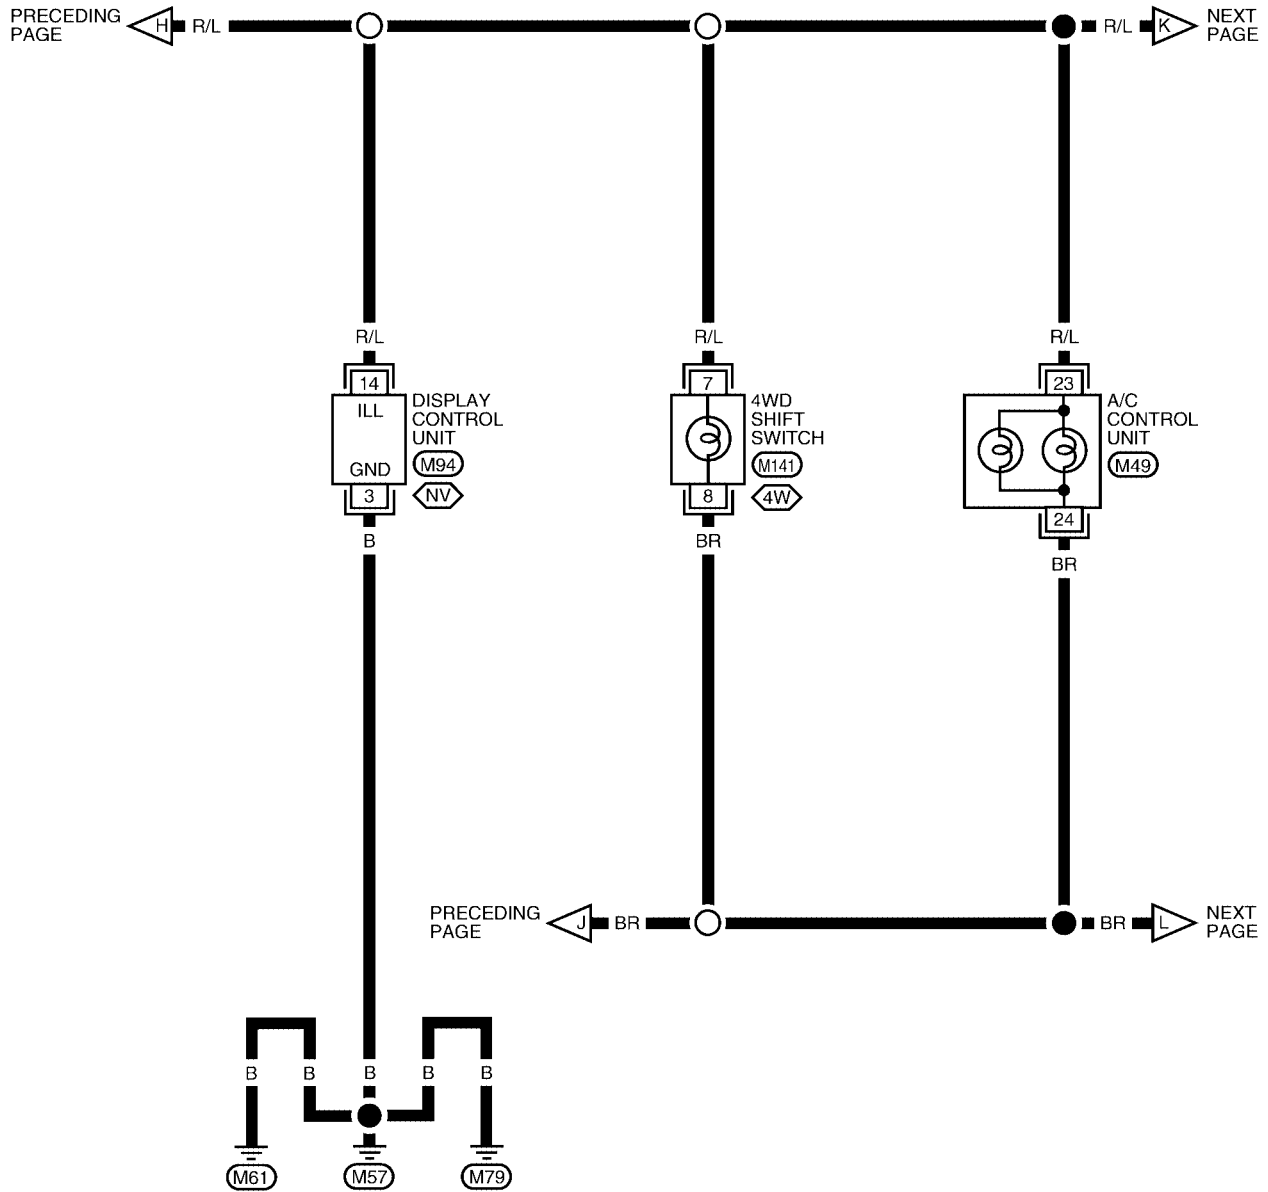



WKWA1091E


ILLUMINATION

LT-ILL-06

 : WITH NAVI

 : WITH DVD ENTERTAINMENT SYSTEM

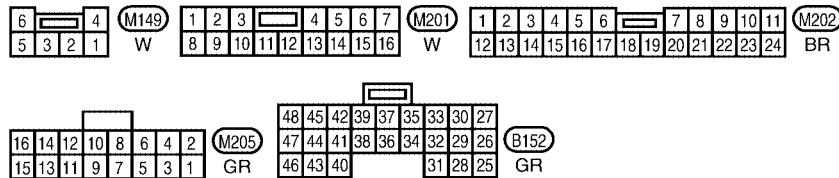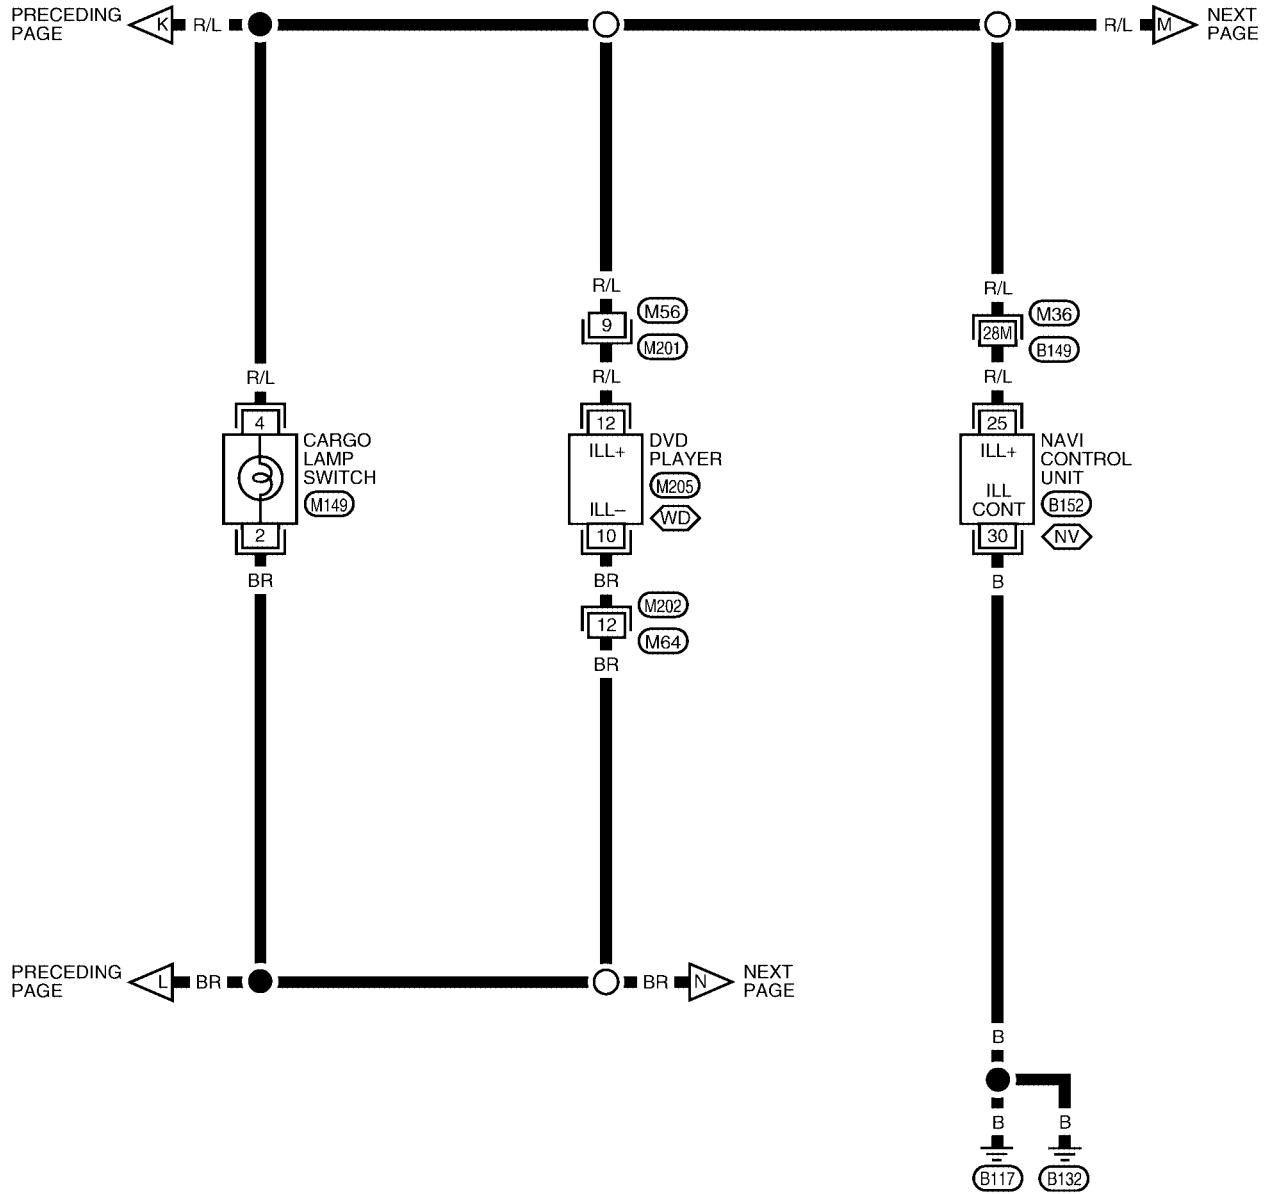



REFER TO THE FOLLOWING.
 - SUPER MULTIPLE JUNCTION (SMJ)

WKWA1092E

ILLUMINATION

LT-ILL-07

A
B
C
D
E
F
G
H
I
J
LT
L
M


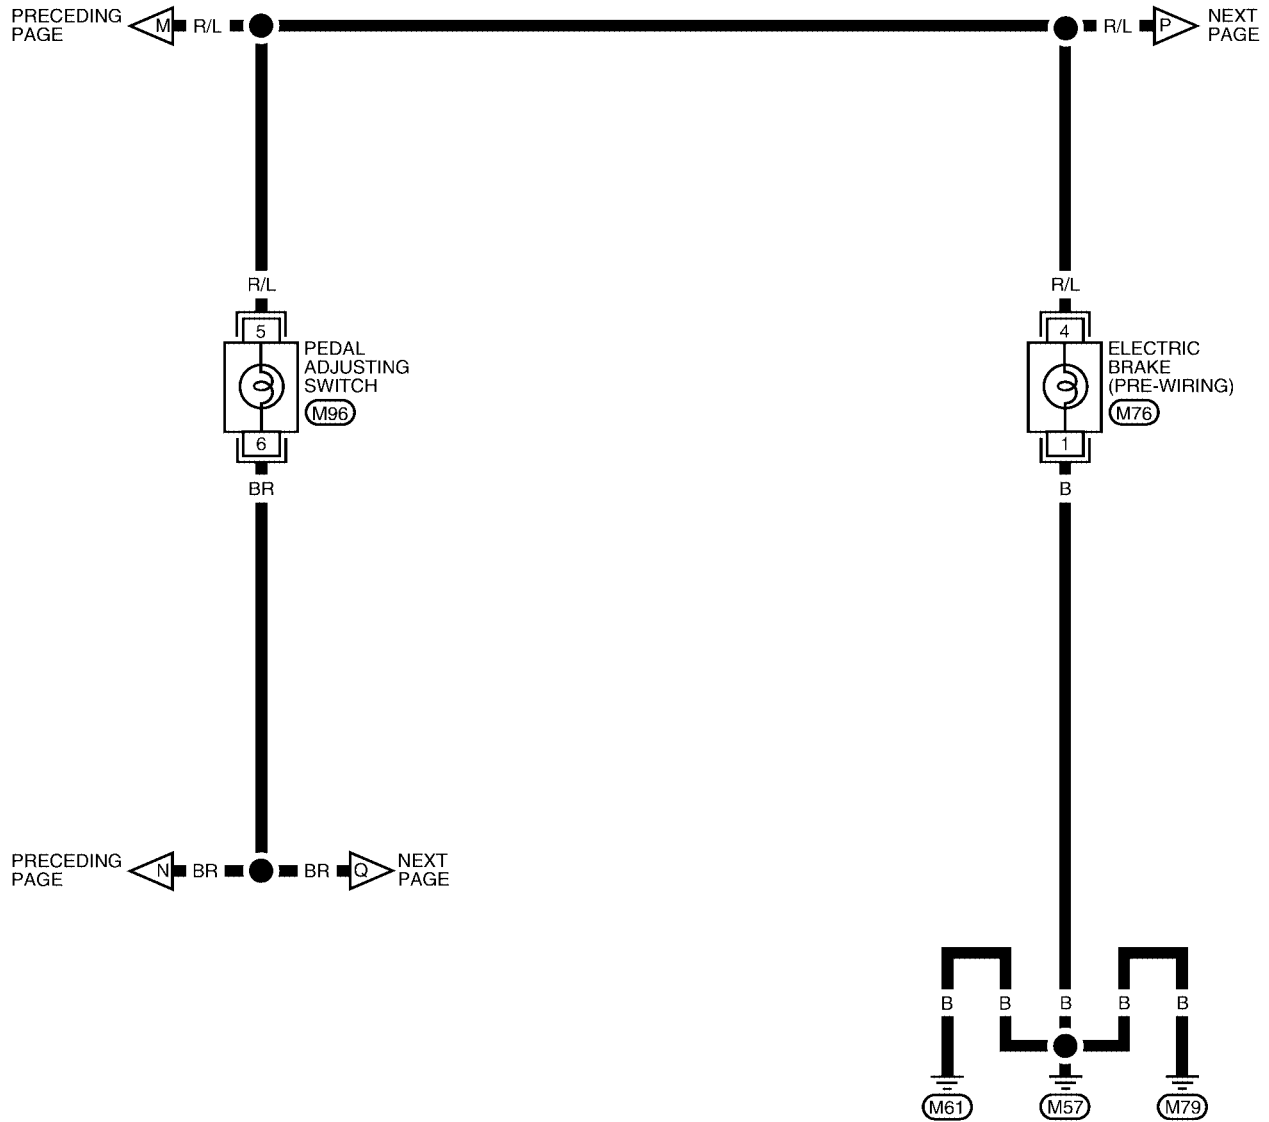


WKWA1093E

ILLUMINATION

LT-ILL-08


HS : WITH HEATED SEATS
 FS : FLOOR SHIFT

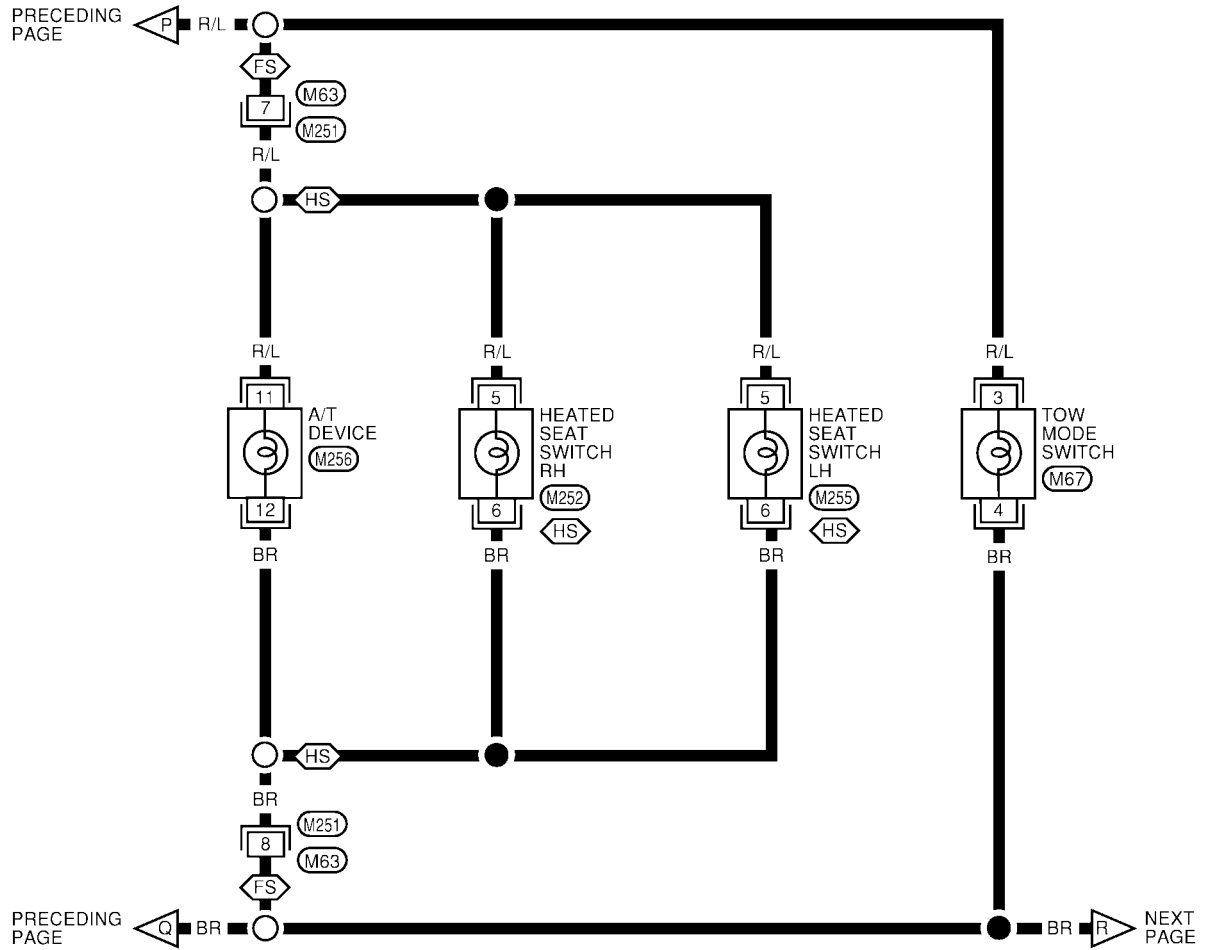


WKWA1565E

ILLUMINATION

LT-ILL-09

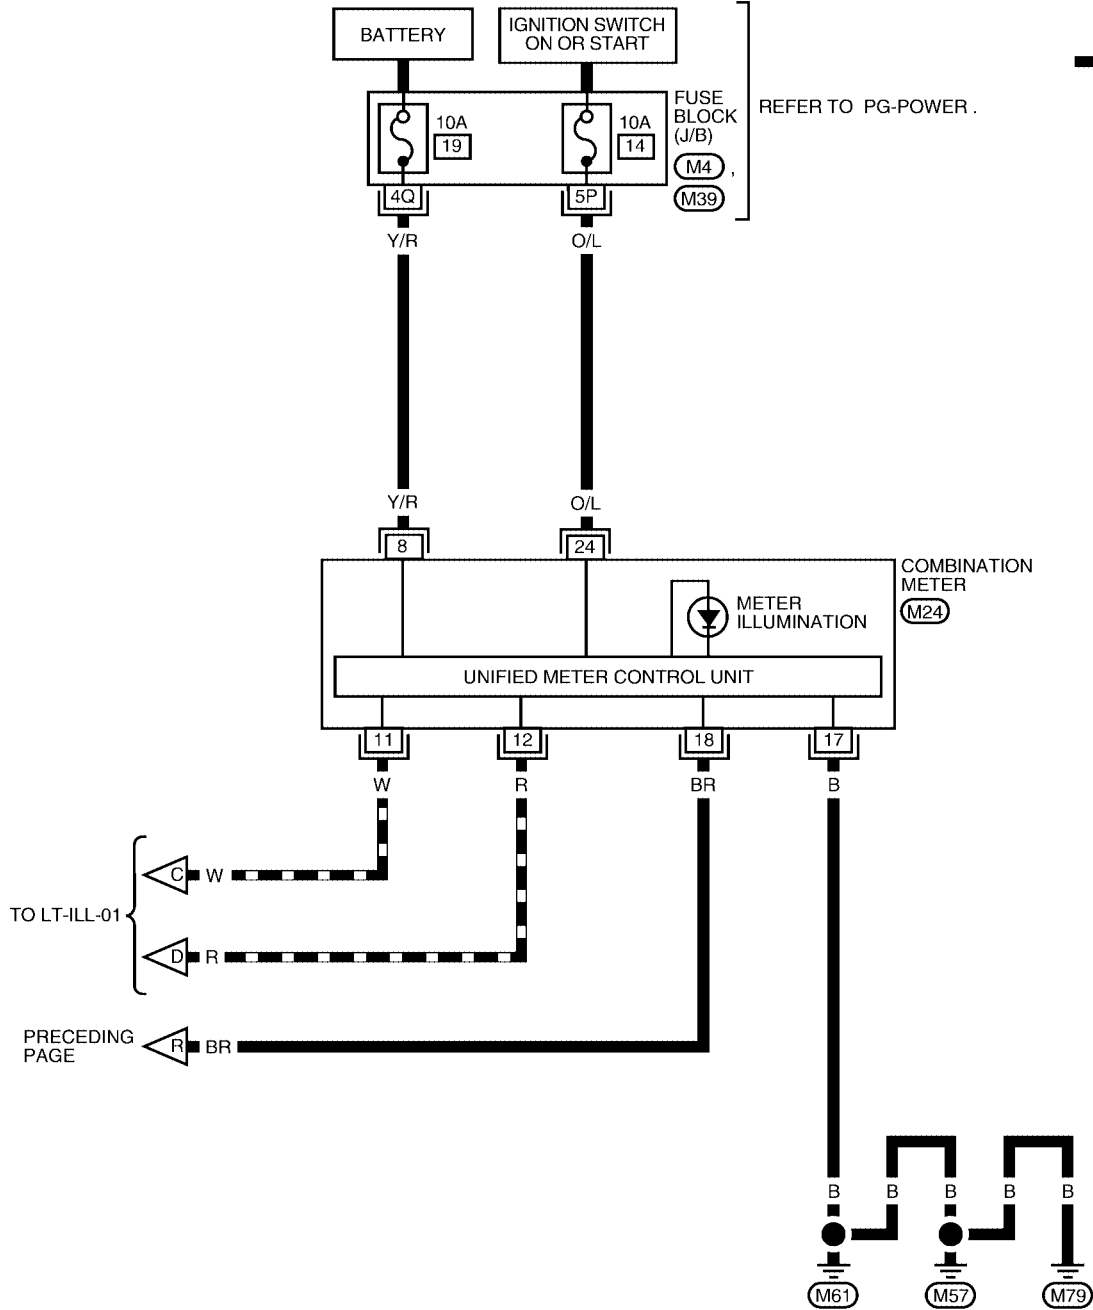

A
B
C
D
E
F
G
H
I
J
LT
L
M



WKWA1095E

ILLUMINATION


EKS0076T

Removal and Installation

ILLUMINATION CONTROL SWITCH

1. Remove cluster lid A. Refer to [IP-13, "COMBINATION METER"](#) .
2. Carefully pry tabs and remove illumination control switch from cluster lid A.

Installation is in the reverse order of removal.

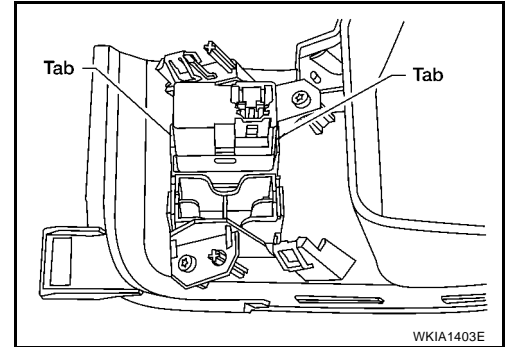

BULB SPECIFICATIONS

BULB SPECIFICATIONS

PF2:26297

Headlamp

EKS0076U

Item	Wattage (W)*
Low	51 (HB4)
High	60 (HB3)

*: Always check with the Parts Department for the latest parts information.

Exterior Lamp

EKS0076V

Item	Wattage (W)*	
Front combination lamp	Turn signal lamp/parking lamp	27/8
	Side marker	3.8
Rear combination lamp	Stop/Tail lamp	27/7
	Turn signal lamp	27
	Back-up lamp	18
	Cargo lamp (tail gate)	16
Fog lamp	37.5	
License plate lamp	5	
High-mounted stop lamp	*	
Cargo lamp (in high-mounted stop lamp)	16	

*: Always check with the Parts Department for the latest parts information.

Interior Lamp/Illumination

EKS0076W

Item	Wattage (W)*
Glove box lamp	3.4
Room/Map lamp	8
A/T device lamp	3
Foot lamp	3.4
Step lamp	3.8
Vanity lamp	1.32
Personal lamp	5
Puddle lamp	8

*: Always check with the Parts Department for the latest parts information.

A
B
C
D
E
F
G
H
I
J
LT
L
M

BULB SPECIFICATIONS
