

DEF

SECTION DEFROGGER

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

CONTENTS

BASIC INSPECTION	3	Description	12
DIAGNOSIS AND REPAIR WORKFLOW	3	Component Function Check	12
Repair Work Flow	3	Diagnosis Procedure	12
Component Inspection	14		
FUNCTION DIAGNOSIS	5		
REAR WINDOW DEFOGGER SYSTEM	5	DOOR MIRROR DEFOGGER LH	15
System Diagram	5	Description	15
System Description	5	Component Function Check	15
Component Parts Location	6	Diagnosis Procedure	15
Component Description	6	Component Inspection (With Automatic Drive Po- sitioner)	17
Component Inspection (Without Automatic Drive Positioner)	17	Component Inspection (Without Automatic Drive Positioner)	17
DIAGNOSIS SYSTEM (BCM)	7	DOOR MIRROR DEFOGGER RH	19
COMMON ITEM	7	Description	19
COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM)	7	Component Function Check	19
Diagnosis Procedure	19	Diagnosis Procedure	19
Component Inspection (With Automatic Drive Po- sitioner)	21	Component Inspection (With Automatic Drive Po- sitioner)	21
Component Inspection (Without Automatic Drive Positioner)	21	Component Inspection (Without Automatic Drive Positioner)	21
REAR WINDOW DEFOGGER	7		
REAR WINDOW DEFOGGER : CONSULT-III Function (BCM - REAR DEFOGGER)	7		
COMPONENT DIAGNOSIS	9		
REAR WINDOW DEFOGGER SWITCH	9	ECU DIAGNOSIS	23
Description	9	BCM (BODY CONTROL MODULE)	23
Component Function Check (2 Control Dial Sys- tem or Auto A/C)	9	Reference Value	23
Component Function Check (3 Control Dial Sys- tem Without Auto A/C)	9	Terminal Layout	25
Diagnosis Procedure (2 Control Dial System or Auto A/C)	9	Physical Values	25
Diagnosis Procedure (3 Control Dial System With- out Auto A/C)	9	Wiring Diagram	31
REAR WINDOW DEFOGGER RELAY	11	SYMPTOM DIAGNOSIS	39
Description	11	REAR WINDOW DEFOGGER SYSTEM SYMPTOMS	39
Component Function Check	11	Symptom Table	39
Diagnosis Procedure	11	REAR WINDOW DEFOGGER AND DOOR MIRROR DEFOGGER DO NOT OPERATE.	40
REAR WINDOW DEFOGGER SYSTEM	12	Diagnosis Procedure	40

REAR WINDOW DEFOGGER DOES NOT OPERATE BUT BOTH OF DOOR MIRROR DEFROGGER OPERATE.	41	REAR WINDOW DEFOGGER SWITCH DOES NOT LIGHT, BUT REAR WINDOW DEFROGGER OPERATES	45
Diagnosis Procedure	41	Diagnosis Procedure	45
BOTH DOORS MIRROR DEFROGGER DON'T OPERATE BUT REAR WINDOW DEFROGGER OPERATES	42	PRECAUTION	46
Diagnosis Procedure	42	PRECAUTIONS	46
DRIVER SIDE DOOR MIRROR DEFROGGER DOES NOT OPERATE.	43	Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	46
Diagnosis Procedure	43	Handling for Adhesive and Primer	46
PASSENGER SIDE DOOR MIRROR DEFROGGER DOES NOT OPERATE.	44	ON-VEHICLE REPAIR	47
Diagnosis Procedure	44	REAR WINDOW DEFROGGER	47
		Filament Check	47
		Filament Repair	47

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Repair Work Flow

INFOID:000000003789974

WORK FLOW

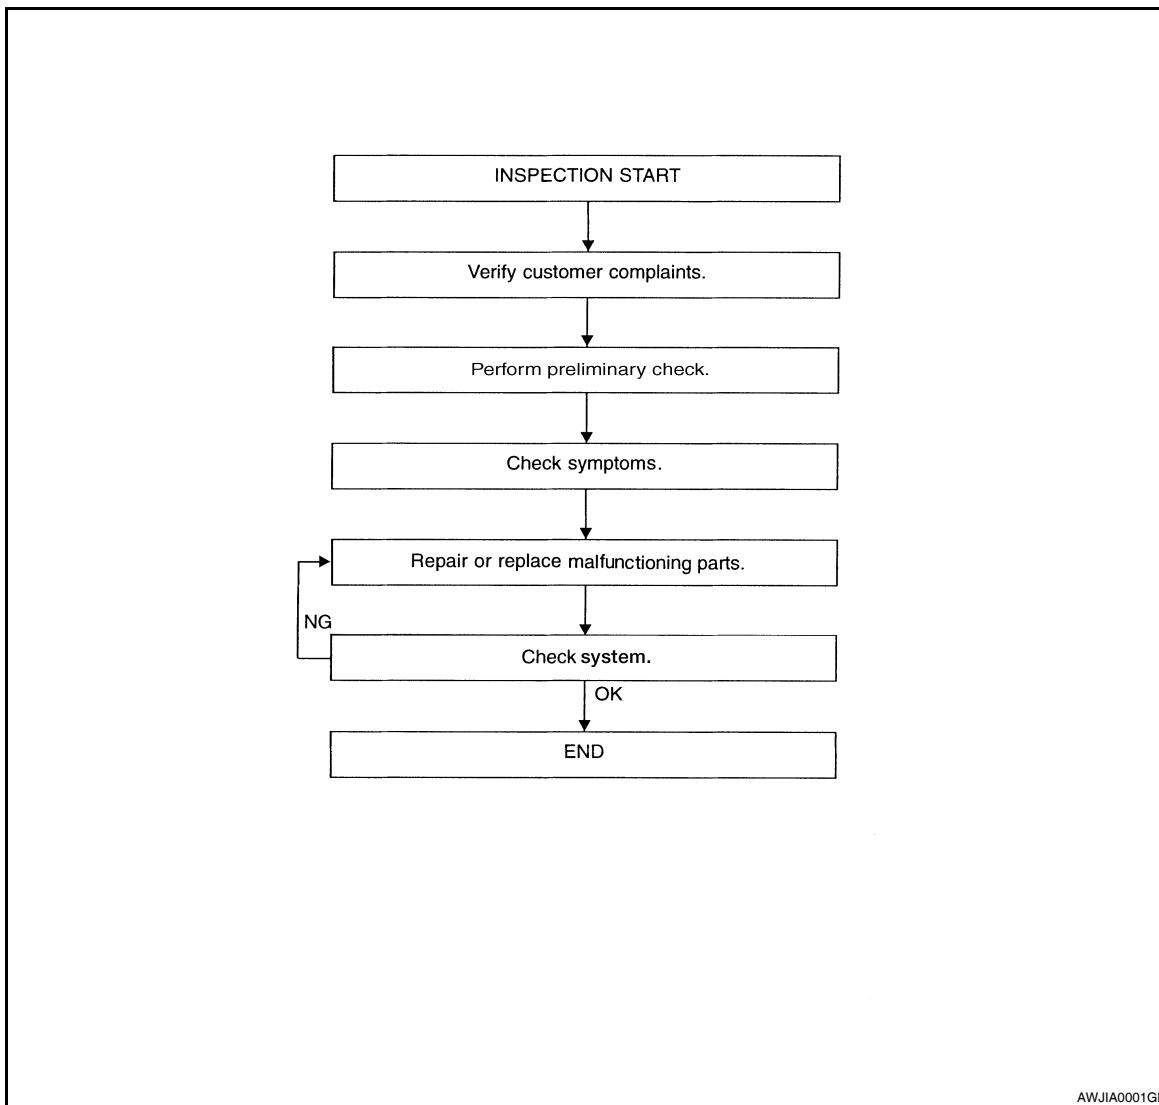

A
B
C
D
E
F
G
H
I
J
K
DEF

DETAILED FLOW

1. CUSTOMER INFORMATION

Talk to the customer to obtain detailed information about the symptom.

>> GO TO 2

2. SYSTEM DESCRIPTION

Perform preliminary check. Refer to [DEF-5, "System Description"](#).

>> GO TO 3

3. SYMPTOM

Check for symptoms. Refer to [DEF-39, "Symptom Table"](#).

M
N
O
P

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

>> GO TO 4

4. MALFUNCTIONING PARTS

Repair or replace the applicable parts.

>> GO TO 5

5. SYSTEM CHECK

Operate rear window defogger switch to ensure that rear window defogger and heated mirrors operate.

Does the system operate normally?

YES >> Inspection End

NO >> Refer to [GI-38, "Intermittent Incident"](#).

REAR WINDOW DEFOGGER SYSTEM


< FUNCTION DIAGNOSIS >

FUNCTION DIAGNOSIS

REAR WINDOW DEFOGGER SYSTEM

System Diagram

INFOID:000000003789975

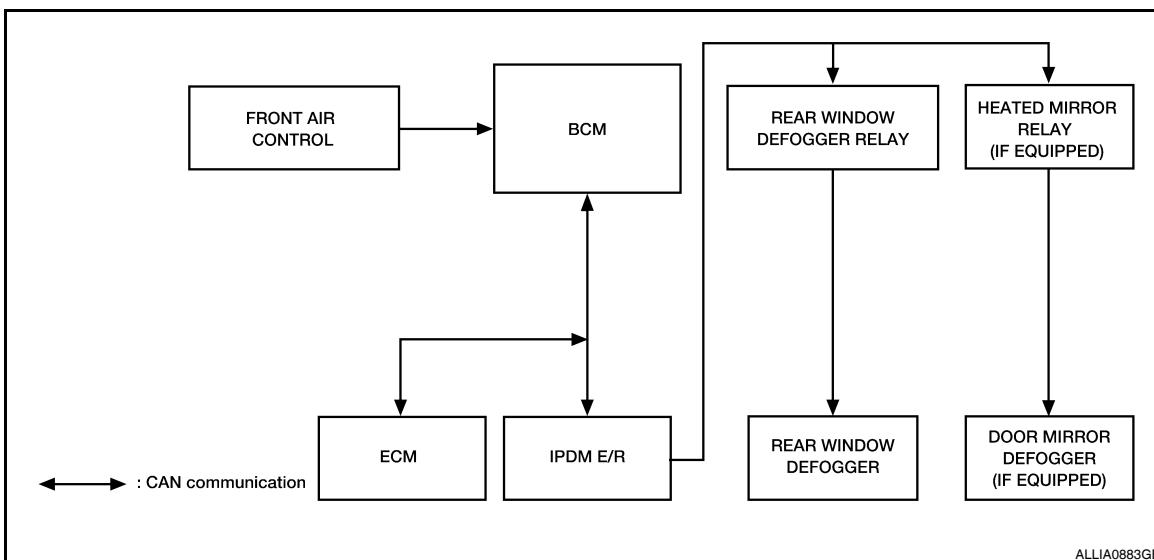

System Description

INFOID:000000003789976

Operation Description

- Turn rear window defogger switch ON when the ignition switch is turned ON. Then front air control (rear window defogger switch) transmits rear window defogger switch signal to BCM.
- BCM transmits rear window defogger control signal to IPDM E/R and display unit via CAN communication when rear window defogger operates.
- IPDM E/R turns rear window defogger relay and heated mirror relay ON when rear window defogger switch signal is received.
- Rear window defogger and door mirror defogger are supplied with power and operate when rear window defogger relay and heated mirror relay turn ON.
- Rear window defogger ON is displayed when signal is received.

Timer function

- BCM turns rear window defogger relay and heated mirror relay ON for approximately 15 minutes when rear window defogger switch is turned ON while ignition switch is ON. It makes rear window defogger and door mirror defogger operate.
- Timer is canceled after pressing rear window defogger switch again during timer operation. Then BCM turns rear window defogger relay and heated mirror relay OFF. The same reaction also occurs during timer operation, if the ignition switch is turned OFF.

DEF

INPUT/OUTPUT SIGNAL CHART

Switch	Input signal to BCM	BCM function	Actuator
Rear window defogger switch	Defogger switch signal	Rear window defogger and door mirror defogger control (if equipped)	Rear window defogger Door mirror defogger (if equipped)
Ignition switch	Ignition signal		

M

N

O


P

REAR WINDOW DEFOGGER SYSTEM

< FUNCTION DIAGNOSIS >

Component Parts Location

INFOID:0000000003789977

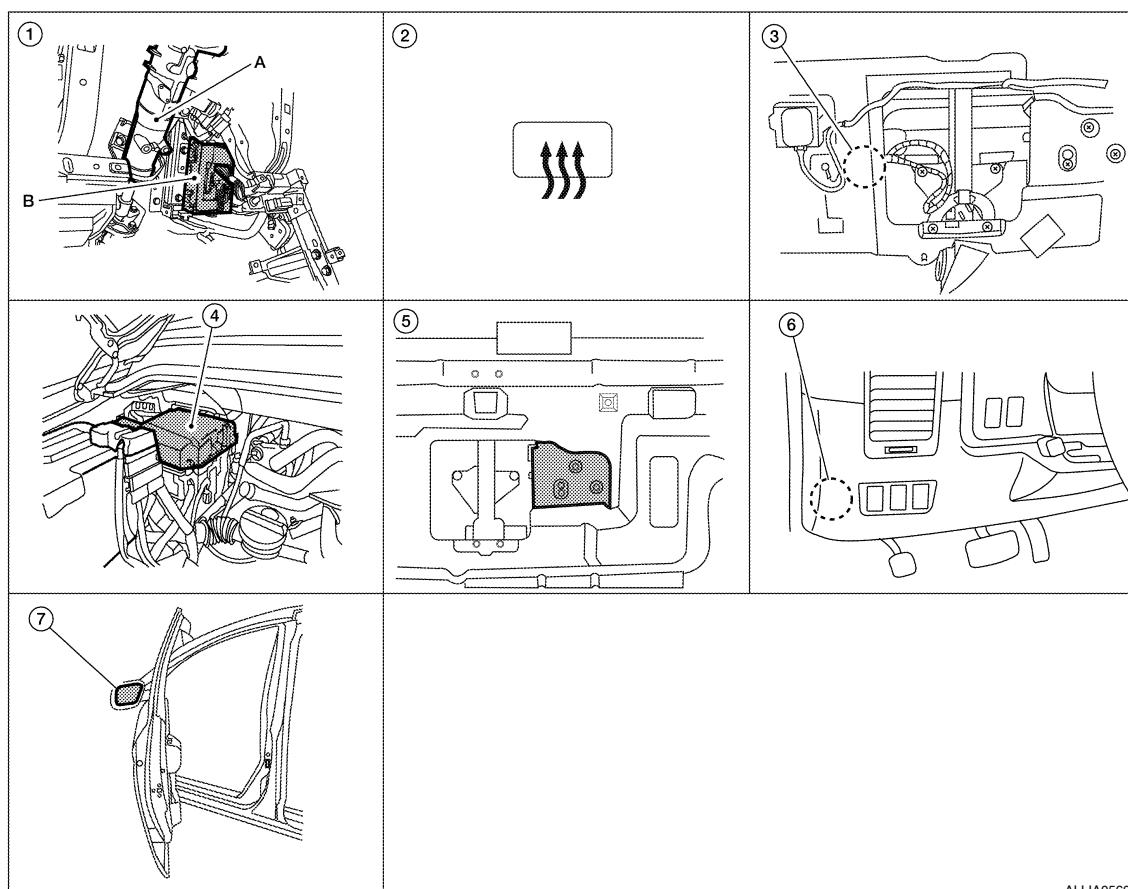

ALLIA0560ZZ

1. A. Steering column
B. BCM M18, M20 (view with instrument panel removed)
2. Front air control
M49, M50 (with auto A/C)
M176, M177 (with manual 3 control dial system)
M180, M181 (with manual 2 control dial system)
3. Rear window defogger connectors
B78, B81
4. IPDM E/R E120, E122, E124
5. Rear power drop glass motor (def cut-off switch) M80
6. Rear window defogger cut-off relay
M187
7. Door mirror (door mirror defogger) (if equipped)
LH D4 (with automatic drive positioner)
LH D6 (without automatic drive positioner)
RH D107 (with automatic drive positioner)
RH D106 (without automatic drive positioner)

Component Description

INFOID:0000000003789978

BCM	<ul style="list-style-type: none"> Operates the rear window defogger with the operation of rear window defogger switch. Performs the timer control of rear window defogger.
Rear window defogger relay	<ul style="list-style-type: none"> Operates the rear window defogger and the heated mirror relay (if equipped) with the control signal from BCM.
Front air control (rear window defogger switch)	<ul style="list-style-type: none"> The rear window defogger switch is turned ON. Turns the indicator lamp ON when detecting the operation of rear window defogger.
Rear window defogger	<ul style="list-style-type: none"> Heats the heating wire with the power supply from the rear window defogger relay to prevent the rear window from fogging up.
Door mirror defogger (if equipped)	<ul style="list-style-type: none"> Heats the heating wire with the power supply from the heated mirror relay to prevent the door mirror from fogging up.

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM)

INFOID:000000004218939

APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
WORK SUPPORT	Changes the setting for each system function.
SELF-DIAG RESULTS	Displays the diagnosis results judged by BCM. Refer to BCS-49, "DTC Index" .
CAN DIAG SUPPORT MNTR	Monitors the reception status of CAN communication viewed from BCM.
DATA MONITOR	The BCM input/output signals are displayed.
ACTIVE TEST	The signals used to activate each device are forcibly supplied from BCM.
ECU IDENTIFICATION	The BCM part number is displayed.
CONFIGURATION	<ul style="list-style-type: none">• Enables to read and save the vehicle specification.• Enables to write the vehicle specification when replacing BCM.

SYSTEM APPLICATION

BCM can perform the following functions for each system.

NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

System	Sub system selection item	Diagnosis mode		
		WORK SUPPORT	DATA MONITOR	ACTIVE TEST
BCM	BCM	x		
Door lock	DOOR LOCK	x	x	x
Rear window defogger	REAR DEFOGGER		x	
Warning chime	BUZZER		x	x
Interior room lamp timer	INT LAMP	x	x	x
Remote keyless entry system	MULTI REMOTE ENT	x	x	
Exterior lamp	HEAD LAMP	x	x	x
Wiper and washer	WIPER	x	x	x
Turn signal and hazard warning lamps	FLASHER		x	x
Air conditioner	AIR CONDITIONER		x	
Combination switch	COMB SW		x	
Immobilizer	IMMU		x	x
Interior room lamp battery saver	BATTERY SAVER	x	x	x
RAP (retained accessory power)	RETAINED PWR	x	x	x
Signal buffer system	SIGNAL BUFFER		x	x
TPMS (tire pressure monitoring system)	AIR PRESSURE MONITOR	x	x	x
Vehicle security system	PANIC ALARM			x

REAR WINDOW DEFOGGER

REAR WINDOW DEFOGGER : CONSULT-III Function (BCM - REAR DEFOGGER)

INFOID:000000004218940

DATA MONITOR

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

Monitor Item [Unit]	Description
IGN ON SW [ON/OFF]	Indicates condition of ignition switch in ON position
IGN ACC SW [ON/OFF]	Indicates condition of ignition switch in ACC position
REAR DEF SW [ON/OFF]	Displays "Press (ON)/other (OFF)" status determined with the rear window defogger switch

REAR WINDOW DEFOGGER SWITCH

< COMPONENT DIAGNOSIS >

COMPONENT DIAGNOSIS

REAR WINDOW DEFOGGER SWITCH

Description

INFOID:000000003789981

- The rear window defogger is operated by turning the rear window defogger switch ON.
- Turns the indicator lamp in the rear window defogger switch ON when operating the rear window defogger.

Component Function Check (2 Control Dial System or Auto A/C)

INFOID:000000003789982

1. CHECK REAR WINDOW DEFOGGER SWITCH FUNCTION

Check that the indicator lamp of rear window defogger illuminates with rear window defogger switch ON.

Is the inspection result normal?

YES >> Rear window defogger switch function is OK.

NO >> Refer to [DEF-9, "Diagnosis Procedure \(2 Control Dial System or Auto A/C\)".](#)

Component Function Check (3 Control Dial System Without Auto A/C)

INFOID:000000003789983

1. CHECK REAR WINDOW DEFOGGER SWITCH FUNCTION

Check that the indicator lamp of rear window defogger illuminates with rear window defogger switch ON.

Is the inspection result normal?

YES >> Rear window defogger switch function is OK.

NO >> Refer to [DEF-9, "Diagnosis Procedure \(3 Control Dial System Without Auto A/C\)".](#)

Diagnosis Procedure (2 Control Dial System or Auto A/C)

INFOID:000000003789984

1. CHECK FRONT AIR CONTROL (REAR WINDOW DEFOGGER SWITCH) CIRCUIT

Does rear window defogger switch operate normally?

Is the inspection result normal?

YES >> Inspection End.

NO >> GO TO 2

2. CHECK HARNESS CONTINUITY

- Turn ignition switch OFF.
- Disconnect BCM and front air control.
- Check continuity between BCM connector (A) and front air control connector (B).

BCM connector	Terminal	Front air control connector	Terminal	Continuity
M18 (A)	9	M49 or M180 (B)	16	Yes


- Check continuity between BCM connector (A) and ground.

BCM connector	Terminal	Ground	Continuity
M18 (A)	9		No

Is the inspection result normal?

YES >> Replace front air control. Refer to [VTL-8, "Removal and Installation".](#)

NO >> Repair or replace harness.

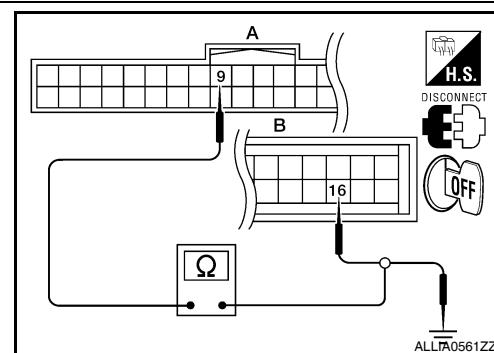

Diagnosis Procedure (3 Control Dial System Without Auto A/C)

INFOID:000000003789985

1. CHECK FRONT AIR CONTROL (REAR WINDOW DEFOGGER SWITCH) CIRCUIT

Does rear window defogger switch operate normally?

Is the inspection result normal?

REAR WINDOW DEFOGGER SWITCH

< COMPONENT DIAGNOSIS >

YES >> Inspection End.

NO >> GO TO 2

2. CHECK HARNESS CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect BCM and front air control.
3. Check continuity between BCM connector (A) and front air control connector (B).

BCM connector	Terminal	Front air control connector	Terminal	Continuity
M18 (A)	9	M176 (B)	11	Yes


4. Check continuity between BCM connector (A) and ground.

BCM connector	Terminal	Ground	Continuity
M18 (A)	9		No

Is the inspection result normal?

YES >> Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).

NO >> Repair or replace harness.

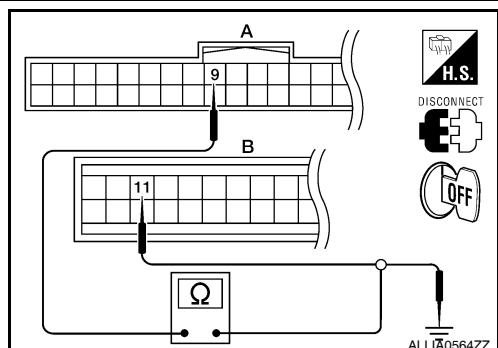

REAR WINDOW DEFOGGER RELAY

< COMPONENT DIAGNOSIS >

REAR WINDOW DEFOGGER RELAY

Description

INFOID:0000000003789986

Power is supplied to the rear window defogger with BCM control.

Component Function Check

INFOID:0000000003789987

1. CHECK REAR WINDOW DEFOGGER RELAY POWER SUPPLY CIRCUIT

Check that an operation noise of rear window defogger relay (located in IPDM E/R) can be heard when turning the rear window defogger switch ON.

Is the inspection result normal?

YES >> Rear window defogger relay power supply circuit is OK.

NO >> Refer to [DEF-11, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000003789988

1. CHECK FUSES

Check if any of the following fuses in the IPDM E/R are blown.

COMPONENT PARTS	AMPERE	FUSE NO.
IPDM E/R	15A	46
IPDM E/R	15A	47

Is the inspection result normal?

YES >> GO TO 2

NO >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse.

2. CHECK REAR WINDOW DEFOGGER RELAY POWER SUPPLY CIRCUIT

1. Turn ignition switch ON.
2. Check voltage between IPDM E/R connector and ground.

Terminals		Condition of rear window defogger switch	Voltage (V) (Approx.)
(+)	(-)		
IPDM E/R connector	Terminal E124	ON	Battery voltage
		OFF	0

Is the inspection result normal?

YES >> GO TO 3

NO >> Replace IPDM E/R. Refer to [PCS-30, "Removal and Installation of IPDM E/R"](#).

3. CHECK INTERMITTENT INCIDENT

Check intermittent incident.


Refer to [GI-38, "Intermittent Incident"](#).

Is the inspection result normal?

YES >> Check the following.

- Battery power supply circuit
- IPDM E/R

NO >> Repair or replace the malfunctioning parts.

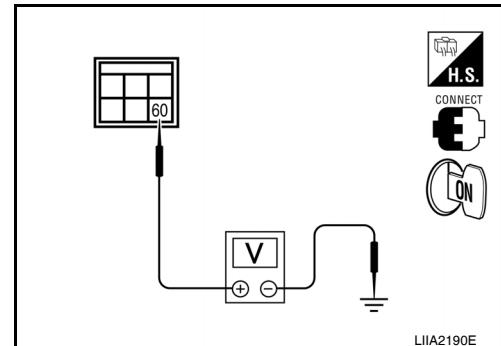

REAR WINDOW DEFOGGER SYSTEM

< COMPONENT DIAGNOSIS >

REAR WINDOW DEFOGGER SYSTEM

Description

INFOID:0000000003789999

Heats the heating wire with the power supply from the rear window defogger relay to prevent the rear window from fogging up.

Component Function Check

INFOID:0000000003789990

1. CHECK REAR WINDOW DEFOGGER

Check that the heating wire of rear window defogger is heated when turning the rear window defogger switch ON.

Is the inspection result normal?

- YES >> Rear window defogger is OK.
NO >> Refer to [DEF-12, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000003789991

1. CHECK FUSES

Check if any of the following fuses in IPDM E/R are blown.

COMPONENT PARTS	AMPERE	FUSE NO.
IPDM E/R	15A	46
	15A	47


Is the inspection result normal?

- YES >> GO TO 2
NO >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse.

2. CHECK REAR WINDOW DEFOGGER RELAY POWER SUPPLY CIRCUIT

- Turn ignition switch ON.
- Check voltage between IPDM E/R connector and ground.

Terminals		Condition of rear window defogger switch	Voltage (V) (Approx.)	Battery voltage
(+)	(-)			
IPDM E/R connector	Terminal	ON	0	
E124	60	Ground	Battery voltage	

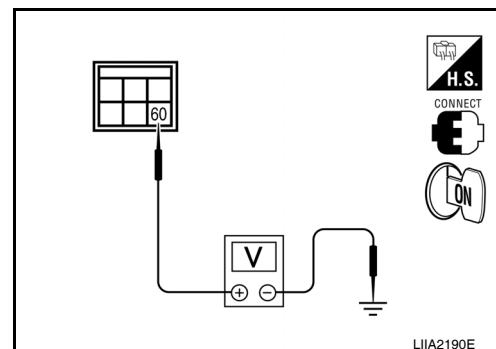


Is the inspection result normal?

- YES >> GO TO 3
NO >> Replace IPDM E/R. Refer to [PCS-30, "Removal and Installation of IPDM E/R"](#).

3. CHECK REAR WINDOW DEFOGGER POWER CIRCUIT HARNESS CONTINUITY

- Turn ignition switch OFF.
- Disconnect IPDM E/R and rear window defogger cut-off relay.
- Check continuity between IPDM E/R connector E124 (B) terminal 60 and rear window defogger cut-off relay connector M187 (A) terminals 2 and 3.

IPDM E/R connector	Terminal	Rear window defogger cut-off relay connector	Terminal	Continuity
B: E124	60	A: M187	2	Yes
			3	

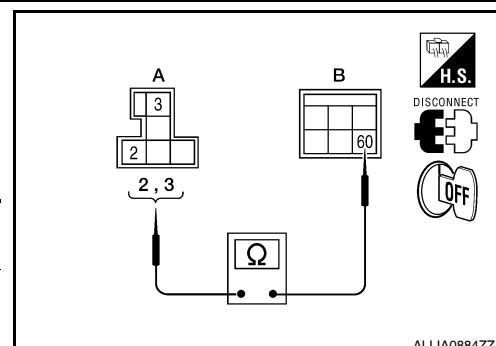

REAR WINDOW DEFOGGER SYSTEM

< COMPONENT DIAGNOSIS >

Is the inspection result normal?

YES >> GO TO 4

NO >> Repair or replace harness.

4. INSPECTION OF REAR POWER WINDOW DEFOGGER CUT-OFF RELAY


1. Disconnect rear window defogger cut-off relay.
2. Check continuity between rear window defogger cut-off relay terminals 3 and 5.

Condition	Continuity
12V direct current supply between terminals 1 and 2	Yes
No current supply	No

Is the inspection result normal?

YES >> GO TO 5

NO >> Replace rear window defogger cut-out relay.

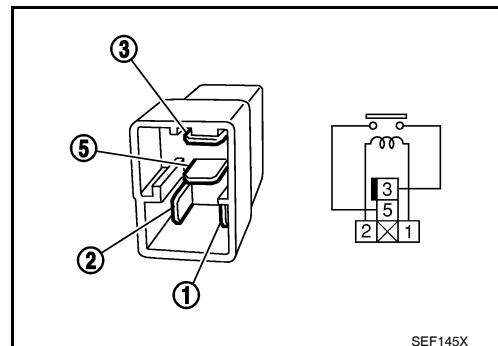

SEF145X

5. CHECK REAR WINDOW DEFOGGER CUT-OFF RELAY GROUND CIRCUIT

1. Place rear power drop glass in the closed (UP) position.
2. Check continuity between rear window defogger cut-off relay connector M187 terminal 1 and ground.


1 - Ground

: Continuity should exist.

Is the inspection result normal?

YES >> GO TO 7

NO >> GO TO 6

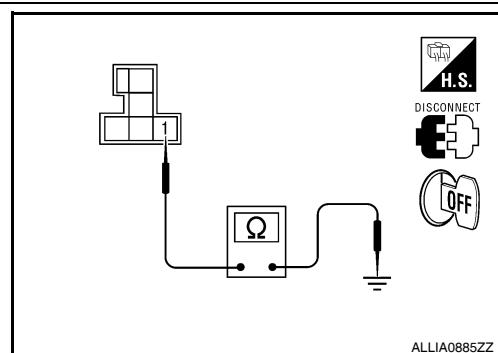

ALLIA0885ZZ

6. CHECK REAR POWER DROP GLASS MOTOR (DEF CUT-OFF SWITCH)


1. Disconnect rear power drop glass motor (def cut-off switch).
2. Check continuity between rear power drop glass motor (def cut-off switch) terminals 2 and 3.

Terminal	Rear power drop glass position	Continuity
2	Closed (UP)	Yes
	Open (DOWN) more than 18 mm	No

Is the inspection result normal?

YES >> Repair or replace harness.


NO >> Replace rear power drop glass motor (def cut-off switch).

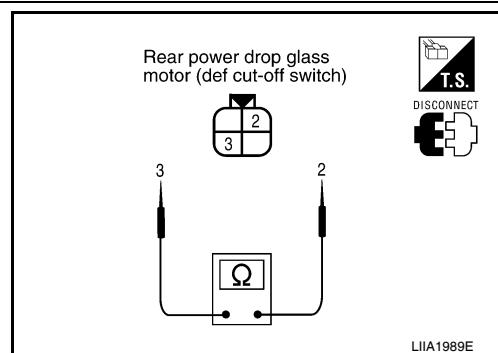

LIA1989E

7. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch ON.
2. Check voltage between rear window defogger connector and ground.

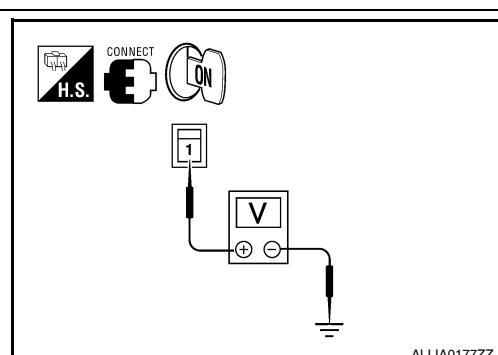

ALLIA0177ZZ

REAR WINDOW DEFOGGER SYSTEM

< COMPONENT DIAGNOSIS >

Terminals		Condition of rear window defogger switch	Voltage (V) (Approx.)
(+)	(-)		
Rear window defogger connector	Terminal	Ground	ON Battery voltage
B78	1		OFF 0

Is the inspection result normal?

YES >> GO TO 8

NO >> Repair or replace harness.

8. CHECK GROUND CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect rear window defogger.
3. Check continuity between rear window defogger connector and ground.

Rear window defogger connector	Terminal	Ground	Continuity
B81	2		Yes

Is the inspection result normal?

YES >> GO TO 9

NO >> Repair or replace harness.

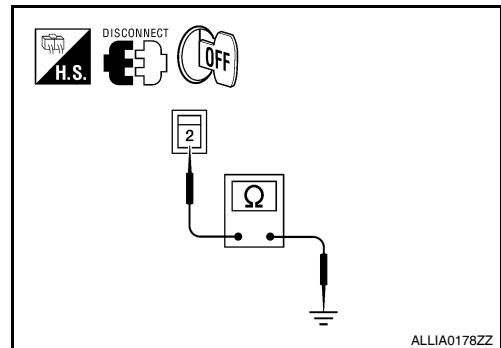

ALLIA0178ZZ

9. CHECK FILAMENT

Check filament.

Refer to [DEF-14, "Component Inspection"](#).

Is the inspection result normal?

YES >> Refer to [GI-38, "Intermittent Incident"](#).

NO >> Repair filament. Refer to [DEF-47, "Filament Repair"](#).

Component Inspection

INFOID:0000000003789992

1. CHECK FILAMENT

Check the filament for damage or open circuits.

Refer to [DEF-47, "Filament Check"](#).

Is the inspection result normal?

YES >> Inspection End.

NO >> Repair filament. Refer to [DEF-47, "Filament Repair"](#).

DOOR MIRROR DEFOGGER LH

< COMPONENT DIAGNOSIS >

DOOR MIRROR DEFOGGER LH

Description

INFOID:0000000003789993

Heats the heating wire with the power supply from the rear window defogger relay to prevent the door mirror from fogging up.

Component Function Check

INFOID:0000000003789994

1. CHECK DOOR MIRROR DEFOGGER LH

Check that heating wire of door mirror defogger LH is heated when turning the rear window defogger switch ON.

Is the inspection result normal?

YES >> Door mirror defogger is OK.

NO >> Refer to [DEF-15, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000003789995

1. CHECK POWER SUPPLY

Check if the following fuse in the IPDM E/R is blown.

COMPONENT PARTS	AMPERE	FUSE NO.
IPDM E/R	15A	43

Is the inspection result normal?

YES >> GO TO 2

NO >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse.

2. CHECK DOOR MIRROR DEFOGGER POWER SUPPLY CIRCUIT

Check voltage between IPDM E/R connector and ground.

Connector	Terminal		Condition	Voltage (V) (Approx.)
	(+)	(-)		
E120	23	Ground	Rear window defogger switch ON	Battery voltage
			Rear window defogger switch OFF	0

Is the inspection result normal?

YES >> GO TO 3 (with automatic drive positioner)

YES >> GO TO 6 (without automatic drive positioner)



NO >> Replace IPDM E/R. Refer to [PCS-30, "Removal and Installation of IPDM E/R"](#).

3. CHECK DOOR MIRROR DEFOGGER POWER SUPPLY CIRCUIT 2

- Turn ignition switch OFF.
- Disconnect door mirror LH.
- Turn ignition switch ON.
- Check voltage between door mirror LH connector and ground.

Connector	Terminal		Condition	Voltage (V) (Approx.)
	(+)	(-)		
D4	10	Ground	Rear window defogger switch ON	Battery voltage
			Rear window defogger switch OFF	0

Is the inspection result normal?

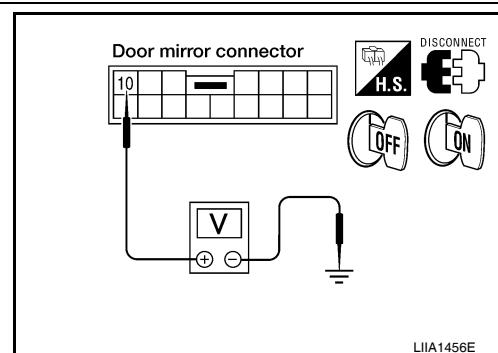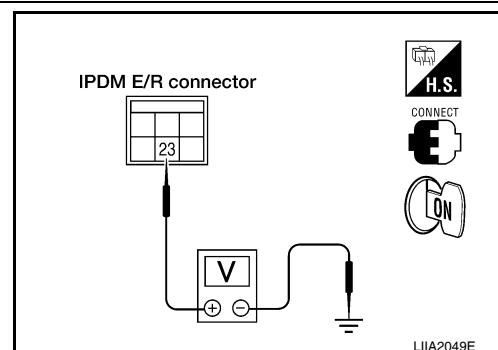

DOOR MIRROR DEFOGGER LH

< COMPONENT DIAGNOSIS >

YES >> GO TO 4

NO >> Repair or replace harness.

4. CHECK DOOR MIRROR DEFOGGER CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R and door mirror LH.
3. Check continuity between IPDM E/R connector E120 terminal 23 and door mirror LH connector D4 terminal 10.


23 - 10

: Continuity should exist.

Is the inspection result normal?

YES >> GO TO 5

NO >> Repair or replace harness.

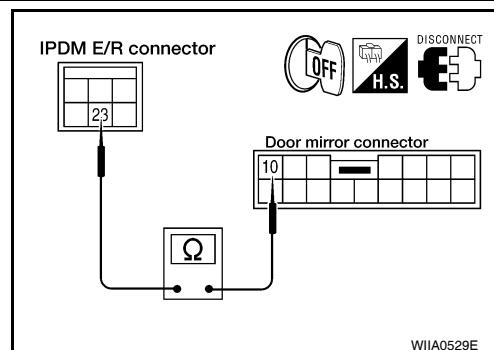

5. CHECK DOOR MIRROR DEFOGGER GROUND CIRCUIT

Check continuity between door mirror LH connector D4 terminal 11 and ground.


11 - Ground

: Continuity should exist.

Is the inspection result normal?

YES >> GO TO 9


NO >> Repair or replace harness.

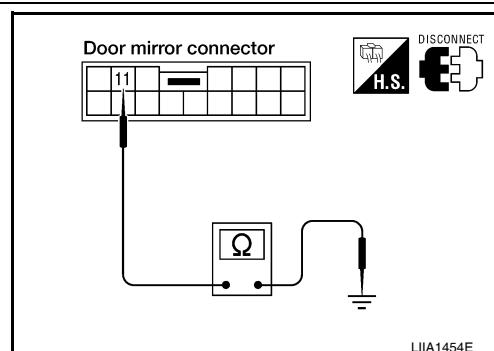

6. CHECK DOOR MIRROR DEFOGGER POWER SUPPLY CIRCUIT 2

1. Turn ignition switch OFF.
2. Disconnect door mirror LH.
3. Turn ignition switch ON.
4. Check voltage between door mirror LH connector and ground.

Connector	Terminal		Condition	Voltage (V) (Approx.)
	(+)	(-)		
D6	4	Ground	Rear window defogger switch ON	Battery voltage
			Rear window defogger switch OFF	0

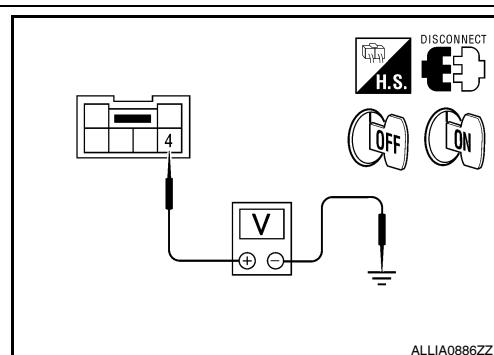

Is the inspection result normal?

YES >> GO TO 7

NO >> Repair or replace harness.

7. CHECK DOOR MIRROR DEFOGGER CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R and door mirror LH.
3. Check continuity between IPDM E/R connector E120 terminal 23 and door mirror LH connector D6 terminal 4.


23 - 4

: Continuity should exist.

Is the inspection result normal?

YES >> GO TO 8

NO >> Repair or replace harness.

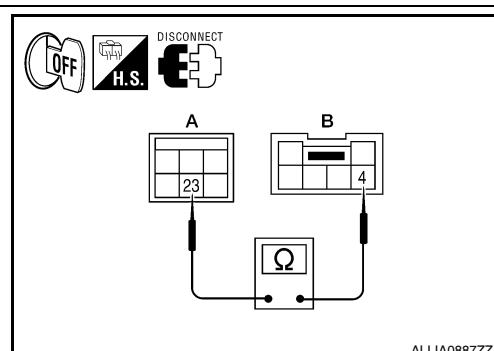

DOOR MIRROR DEFOGGER LH

< COMPONENT DIAGNOSIS >

8. CHECK DOOR MIRROR DEFOGGER GROUND CIRCUIT

Check continuity between door mirror LH connector D6 terminal 6 and ground.


6 - Ground

: Continuity should exist.

Is the inspection result normal?

YES >> GO TO 9

NO >> Repair or replace harness.

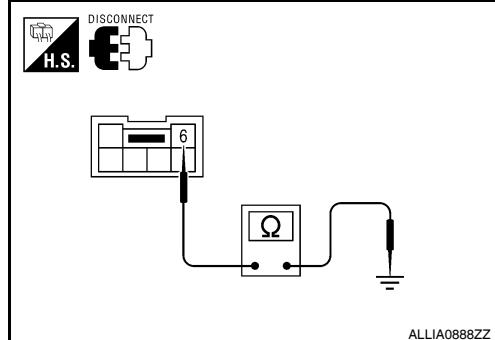

9. CHECK DOOR MIRROR DEFOGGER LH

Check door mirror defogger LH.

Refer to [DEF-17, "Component Inspection \(With Automatic Drive Positioner\)"](#).

Refer to [DEF-17, "Component Inspection \(Without Automatic Drive Positioner\)"](#).

Is the inspection result normal?

YES >> GO TO 10

NO >> Replace door mirror. Refer to [MIR-14, "Door Mirror Assembly"](#).

10. CHECK INTERMITTENT INCIDENT

Check intermittent incident.

Refer to [GI-38, "Intermittent Incident"](#).

Is the inspection result normal?

YES >> Check the following.

- Battery power supply circuit
- IPDM E/R

NO >> Repair or replace the malfunctioning parts.

Component Inspection (With Automatic Drive Positioner)

INFOID:0000000003789996

1. CHECK DOOR MIRROR DEFOGGER

Check continuity between door mirror LH terminals 10 and 11.


10 - 11

: Continuity should exist.

Is the inspection result normal?

YES >> Check the condition of the harness and the connector.

NO >> Replace malfunctioning door mirror LH. Refer to [MIR-14, "Door Mirror Assembly"](#).

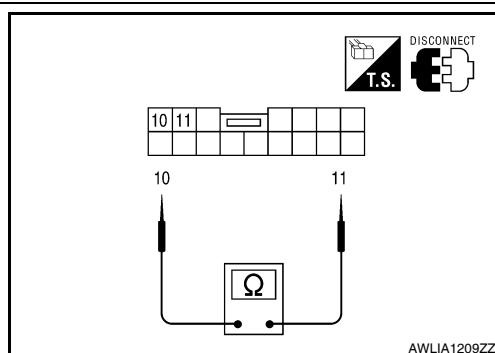

Component Inspection (Without Automatic Drive Positioner)

INFOID:0000000004218943

1. CHECK DOOR MIRROR DEFOGGER

DOOR MIRROR DEFROGGER LH

< COMPONENT DIAGNOSIS >


Check continuity between door mirror LH terminals 4 and 6.

4 - 6

: Continuity should exist.

Is the inspection result normal?

- YES >> Check the condition of the harness and the connector.
NO >> Replace malfunctioning door mirror LH. Refer to [MIR-14, "Door Mirror Assembly".](#)

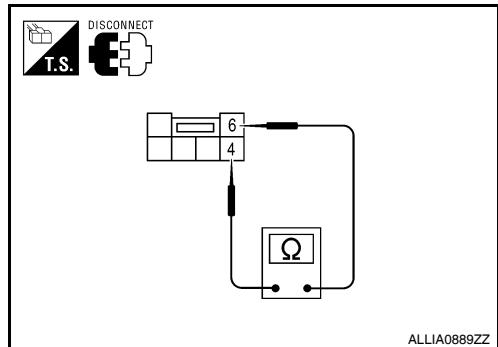

ALLIA0889ZZ

DOOR MIRROR DEFOGGER RH

< COMPONENT DIAGNOSIS >

DOOR MIRROR DEFOGGER RH

Description

INFOID:0000000003789997

Heats the heating wire with the power supply from the rear window defogger relay to prevent the door mirror from fogging up.

Component Function Check

INFOID:0000000003789998

1. CHECK DOOR MIRROR DEFOGGER RH

Check that the heating wire of door mirror defogger RH is heated when turning the rear window defogger switch ON.

Is the inspection result normal?

YES >> Door mirror defogger RH is OK.

NO >> Refer to [DEF-19, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000003789999

1. CHECK POWER SUPPLY

Check if the following fuse in the IPDM E/R is blown.

COMPONENT PARTS	AMPERE	FUSE NO.
IPDM E/R	15A	43

Is the inspection result normal?

YES >> GO TO 2

NO >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse.

2. CHECK DOOR MIRROR DEFOGGER POWER SUPPLY CIRCUIT

Check voltage between IPDM E/R connector and ground.

Connector	Terminal		Condition	Voltage (V) (Approx.)
	(+)	(-)		
E120	23	Ground	Rear window defogger switch ON	Battery voltage
			Rear window defogger switch OFF	0

Is the inspection result normal?

YES >> GO TO 3 (with automatic drive positioner)

YES >> GO TO 6 (without automatic drive positioner)


NO >> Replace IPDM E/R. Refer to [PCS-30, "Removal and Installation of IPDM E/R"](#).

3. CHECK DOOR MIRROR DEFOGGER POWER SUPPLY CIRCUIT 2


- Turn ignition switch OFF.
- Disconnect door mirror RH.
- Turn ignition switch ON.
- Check voltage between door mirror RH connector and ground.

Connector	Terminal		Condition	Voltage (V) (Approx.)
	(+)	(-)		
D107	10	Ground	Rear window defogger switch ON	Battery voltage
			Rear window defogger switch OFF	0

Is the inspection result normal?

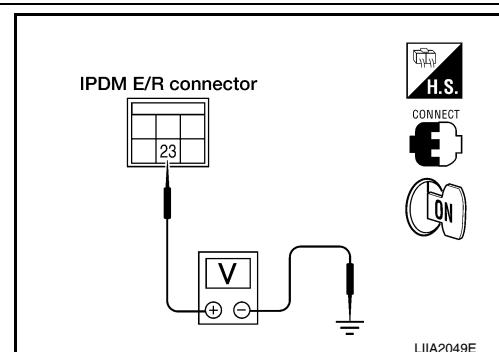

LIA2049E

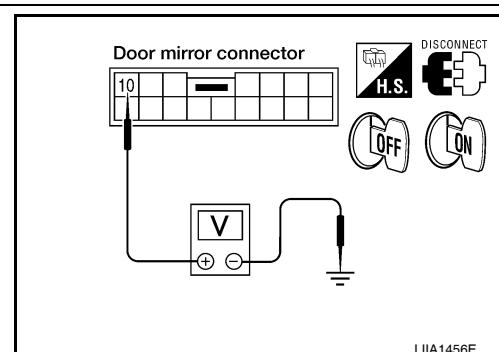

LIA1456E

DOOR MIRROR DEFOGGER RH

< COMPONENT DIAGNOSIS >

YES >> GO TO 4

NO >> Repair or replace harness.

4. CHECK DOOR MIRROR DEFOGGER CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R and door mirror RH.
3. Check continuity between IPDM E/R connector E120 terminal 23 and door mirror RH connector D107 terminal 10.


23 - 10

: Continuity should exist.

Is the inspection result normal?

YES >> GO TO 5

NO >> Repair or replace harness.

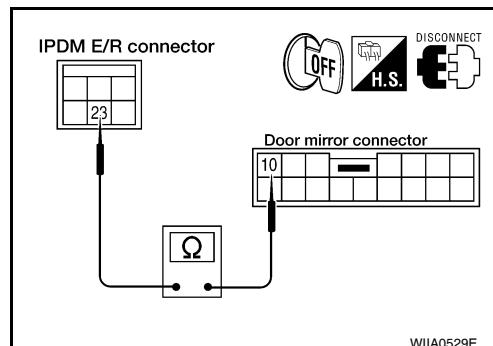

5. CHECK DOOR MIRROR DEFOGGER GROUND CIRCUIT

Check continuity between door mirror RH connector D107 terminal 11 and ground.


11 - Ground

: Continuity should exist.

Is the inspection result normal?

YES >> GO TO 6


NO >> Repair or replace harness.

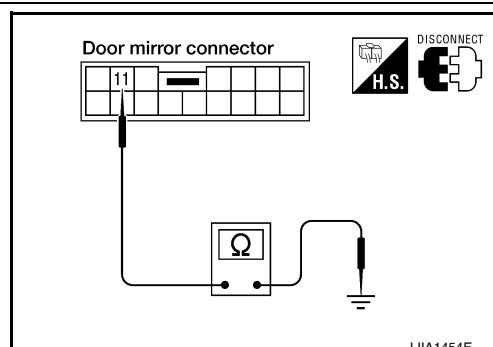

6. CHECK DOOR MIRROR DEFOGGER POWER SUPPLY CIRCUIT 2

1. Turn ignition switch OFF.
2. Disconnect door mirror RH.
3. Turn ignition switch ON.
4. Check voltage between door mirror RH connector and ground.

Connector	Terminal		Condition	Voltage (V) (Approx.)
	(+)	(-)		
D106	4	Ground	Rear window defogger switch ON	Battery voltage
			Rear window defogger switch OFF	0

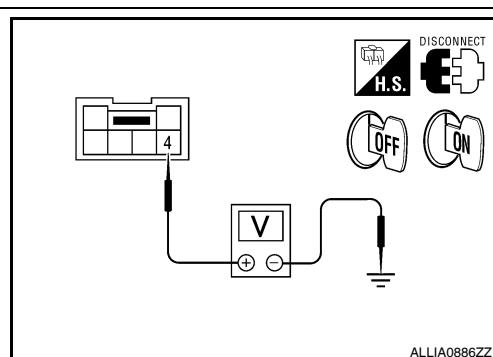

Is the inspection result normal?

YES >> GO TO 7

NO >> Repair or replace harness.

7. CHECK DOOR MIRROR DEFOGGER CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R and door mirror RH.
3. Check continuity between IPDM E/R connector E120 terminal 23 and door mirror RH connector D106 terminal 4.


23 - 4

: Continuity should exist.

Is the inspection result normal?

YES >> GO TO 8

NO >> Repair or replace harness.

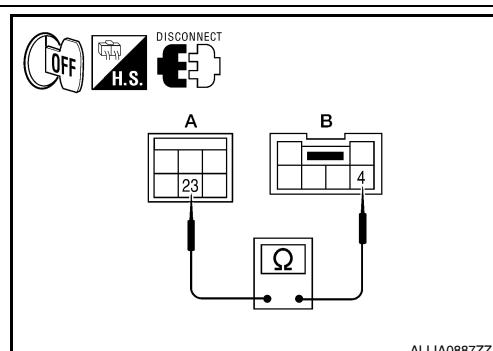

DOOR MIRROR DEFOGGER RH

< COMPONENT DIAGNOSIS >

8. CHECK DOOR MIRROR DEFOGGER GROUND CIRCUIT

Check continuity between door mirror RH connector D106 terminal 6 and ground.


6 - Ground

: Continuity should exist.

Is the inspection result normal?

YES >> GO TO 9

NO >> Repair or replace harness.

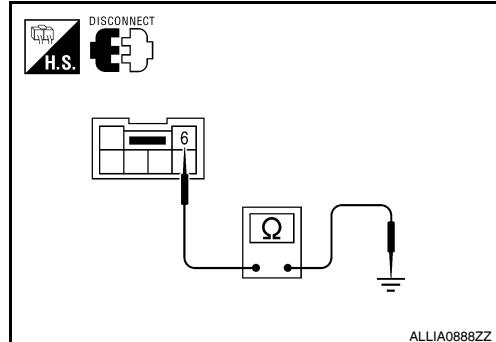

9. CHECK DOOR MIRROR DEFOGGER RH

Check door mirror defogger RH.

Refer to [DEF-21, "Component Inspection \(With Automatic Drive Positioner\)"](#).

Refer to [DEF-21, "Component Inspection \(Without Automatic Drive Positioner\)"](#).

Is the inspection result normal?

YES >> GO TO 10

NO >> Replace door mirror. Refer to [MIR-14, "Door Mirror Assembly"](#).

10. CHECK INTERMITTENT INCIDENT

Check intermittent incident.

Refer to [GI-38, "Intermittent Incident"](#).

Is the inspection result normal?

YES >> Check the following.

- Battery power supply circuit
- IPDM E/R

NO >> Repair or replace the malfunctioning parts.

Component Inspection (With Automatic Drive Positioner)

INFOID:0000000003790000

1. CHECK DOOR MIRROR DEFOGGER

Check continuity between door mirror RH terminals 10 and 11.


10 - 11

: Continuity should exist.

Is the inspection result normal?

YES >> Check the condition of the harness and the connector.

NO >> Replace malfunctioning door mirror RH. Refer to [MIR-14, "Door Mirror Assembly"](#).

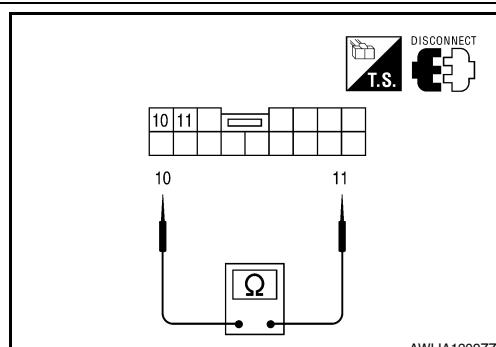

Component Inspection (Without Automatic Drive Positioner)

INFOID:0000000004218944

1. CHECK DOOR MIRROR DEFOGGER

DOOR MIRROR DEFOGGER RH

< COMPONENT DIAGNOSIS >

Check continuity between door mirror RH terminals 4 and 6.


4 - 6

: Continuity should exist.

Is the inspection result normal?

YES >> Check the condition of the harness and the connector.

NO >> Replace malfunctioning door mirror RH. Refer to [MIR-14, "Door Mirror Assembly".](#)

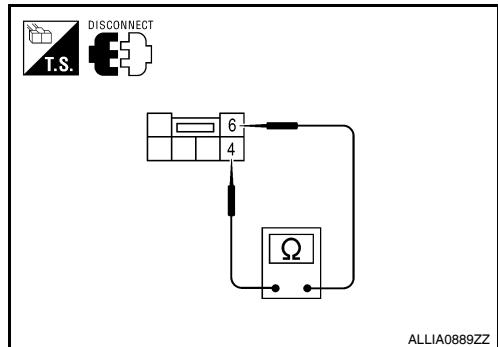

ALLIA0889ZZ

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

ECU DIAGNOSIS

BCM (BODY CONTROL MODULE)

Reference Value

INFOID:000000004219691

A

B

C

D

E

F

G

H

I

J

K

DEF

M

N

O

P

VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition	Value/Status
AIR COND SW	A/C switch OFF	OFF
	A/C switch ON	ON
AUT LIGHT SYS	Outside of the room is dark	OFF
	Outside of the room is bright	ON
AUTO LIGHT SW	Lighting switch OFF	OFF
	Lighting switch AUTO	ON
CDL LOCK SW	Door lock/unlock switch does not operate	OFF
	Press door lock/unlock switch to the LOCK side	ON
CDL UNLOCK SW	Door lock/unlock switch does not operate	OFF
	Press door lock/unlock switch to the UNLOCK side	ON
DOOR SW-AS	Front door RH closed	OFF
	Front door RH opened	ON
DOOR SW-DR	Front door LH closed	OFF
	Front door LH opened	ON
DOOR SW-RL	Rear door LH closed	OFF
	Rear door LH opened	ON
DOOR SW-RR	Rear door RH closed	OFF
	Rear door RH opened	ON
ENGINE RUN	Engine stopped	OFF
	Engine running	ON
FR FOG SW	Front fog lamp switch OFF	OFF
	Front fog lamp switch ON	ON
FR WASHER SW	Front washer switch OFF	OFF
	Front washer switch ON	ON
FR WIPER LOW	Front wiper switch OFF	OFF
	Front wiper switch LO	ON
FR WIPER HI	Front wiper switch OFF	OFF
	Front wiper switch HI	ON
FR WIPER INT	Front wiper switch OFF	OFF
	Front wiper switch INT	ON
FR WIPER STOP	Any position other than front wiper stop position	OFF
	Front wiper stop position	ON
HAZARD SW	When hazard switch is not pressed	OFF
	When hazard switch is pressed	ON
LIGHT SW 1ST	Lighting switch OFF	OFF
	Lighting switch 1st	ON
HEADLAMP SW1	Headlamp switch OFF	OFF
	Headlamp switch 1st	ON

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Monitor Item	Condition	Value/Status
HEADLAMP SW2	Headlamp switch OFF	OFF
	Headlamp switch 1st	ON
HI BEAM SW	High beam switch OFF	OFF
	High beam switch HI	ON
H/L WASH SW	NOTE: The item is indicated, but not monitored	OFF
IGN ON SW	Ignition switch OFF or ACC	OFF
	Ignition switch ON	ON
IGN SW CAN	Ignition switch OFF or ACC	OFF
	Ignition switch ON	ON
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 7	1 - 7
KEY ON SW	Key is removed from key cylinder	OFF
	Key is inserted to key cylinder	ON
KEYLESS LOCK	LOCK button of key fob is not pressed	OFF
	LOCK button of key fob is pressed	ON
KEYLESS UNLOCK	UNLOCK button of key fob is not pressed	OFF
	UNLOCK button of key fob is pressed	ON
OIL PRESS SW	• Ignition switch OFF or ACC • Engine running	OFF
	Ignition switch ON	ON
PASSING SW	Other than lighting switch PASS	OFF
	Lighting switch PASS	ON
REAR DEF SW	Rear window defogger switch OFF	OFF
	Rear window defogger switch ON	ON
RKE LOCK AND UN-LOCK	NOTE: The item is indicated, but not monitored	OFF
		ON
TAIL LAMP SW	Lighting switch OFF	OFF
	Lighting switch 1ST	ON
TURN SIGNAL L	Turn signal switch OFF	OFF
	Turn signal switch LH	ON
TURN SIGNAL R	Turn signal switch OFF	OFF
	Turn signal switch RH	ON
VEHICLE SPEED	While driving	Equivalent to speedometer reading


BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Terminal Layout

INFOID:000000004219692

A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P

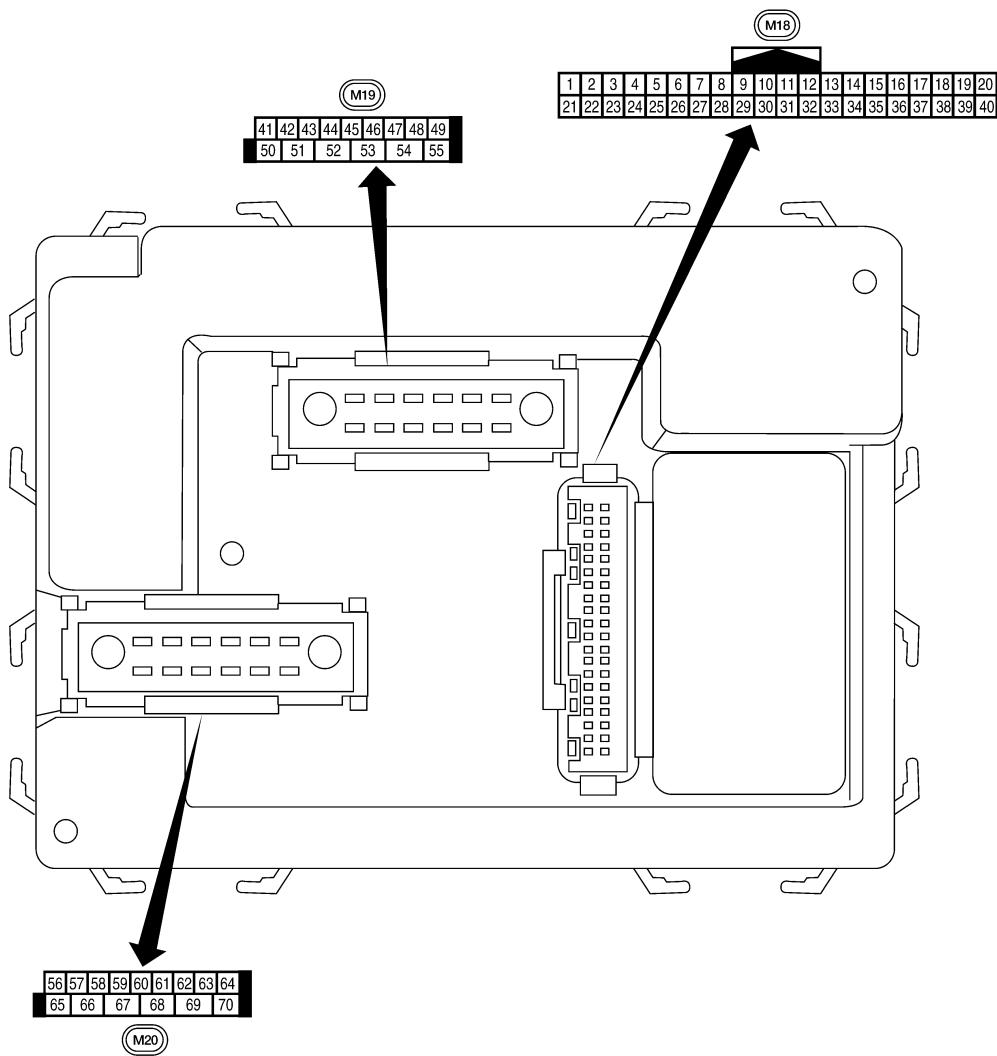

Physical Values





LIIA2443E

INFOID:000000004219693

DEF-25




BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

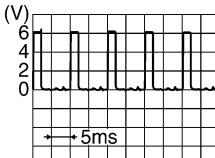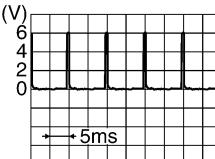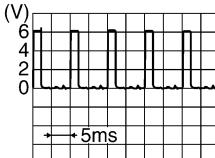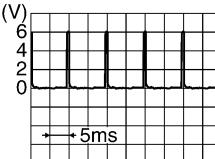Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)		
				Ignition switch	Operation or condition			
1	BR/W	Ignition keyhole illumination	Output	OFF	Door is locked (SW OFF)		Battery voltage	
					Door is unlocked (SW OFF)		0V	
2	SB	Combination switch input 5	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E		
3	G/Y	Combination switch input 4	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E		
4	Y	Combination switch input 3	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E		
5	G/B	Combination switch input 2	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E		
6	V	Combination switch input 1						
9	Y/B	Rear window defogger switch (Crew Cab)	Input	ON	Rear window defogger switch ON	0V		
					Rear window defogger switch OFF	5V		
11	O	Ignition switch (ACC or ON)	Input	ACC or ON	Ignition switch ACC or ON	Battery voltage		
12	R/L	Front door switch RH (All)	Input	OFF	ON (open)	0V		
		Rear door switch lower RH (King Cab)			OFF (closed)	Battery voltage		
		Rear door switch upper RH (King Cab)			—	5V		
13	GR	Rear door switch RH (Crew Cab)	Input	OFF	ON (open)	0V		
					OFF (closed)	Battery voltage		
15	L/W	Tire pressure warning check connector	Input	OFF	—	5V		

BCM (BODY CONTROL MODULE)




< ECU DIAGNOSIS >

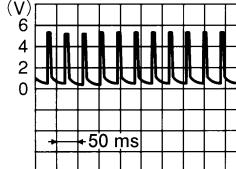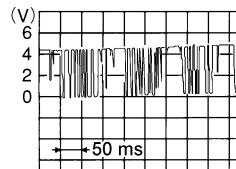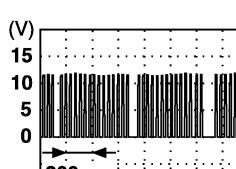Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
18	P	Remote keyless entry receiver and optical sensor (ground)	Output	OFF	—	0V
19	V/W	Remote keyless entry receiver (power supply)	Output	OFF	Ignition switch OFF	 LIIA1893E
20	G/W	Remote keyless entry receiver (signal)	Input	OFF	Stand-by (keyfob buttons released)	 LIIA1894E
					When remote keyless entry receiver receives signal from keyfob (keyfob buttons pressed)	 LIIA1895E
21	G	NATS antenna amp.	Input	OFF → ON	Ignition switch (OFF → ON)	Just after turning ignition switch ON: Pointer of tester should move for approx. 1 second, then return to battery voltage.
22	G	BUS	—	—	Ignition switch ON or power window timer operates	 PIIA2344E
23	G/O	Security indicator lamp	Output	OFF	Goes OFF → illuminates (Every 2.4 seconds)	Battery voltage → 0V
25	BR	NATS antenna amp.	Input	OFF → ON	Ignition switch (OFF → ON)	Just after turning ignition switch ON: Pointer of tester should move for approx. 1 second, then return to battery voltage.
27	W/R	Compressor ON signal	Input	ON	A/C switch OFF	5V
					A/C switch ON	0V
28	L/R	Front blower monitor	Input	ON	Front blower motor OFF	Battery voltage
					Front blower motor ON	0V
29	W/B	Hazard switch	Input	OFF	ON	0V
					OFF	5V
31	P/L	Cargo lamp switch	Input	OFF	Cargo lamp switch ON	0
					Cargo lamp switch OFF	Battery voltage

A
 B
 C
 D
 E
 F
 G
 H
 I
 J
 K
 DEF
 M
 N
 O
 P





BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

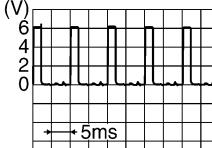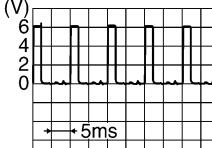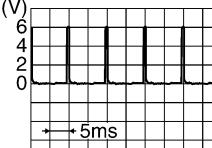Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
32	R/G	Combination switch output 5	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E
33	R/Y	Combination switch output 4	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E
34	L	Combination switch output 3	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E
35	O/B	Combination switch output 2	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E
36	R/W	Combination switch output 1				
37	B/R	Key switch and key lock solenoid	Input	OFF	Key inserted	Battery voltage
					Key inserted	0V
38	W/L	Ignition switch (ON)	Input	ON	—	Battery voltage
39	L	CAN-H	—	—	—	—
40	P	CAN-L	—	—	—	—
47	SB	Front door switch LH (All)	Input	OFF	ON (open)	0V
		Rear door switch lower LH (King Cab)				Battery voltage
		Rear door switch upper LH (King Cab)			OFF (closed)	
48	R/Y	Rear door switch LH (Crew Cab)	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
50	R/Y	Cargo bed lamp control	Output	OFF	Cargo lamp switch (ON)	0V
					Cargo lamp switch (OFF)	Battery voltage

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

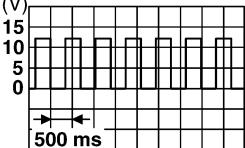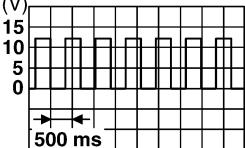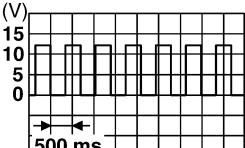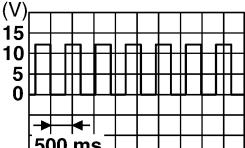Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)		
				Ignition switch	Operation or condition			
51	G/Y	Trailer turn signal (right)	Output	ON	Turn right ON	 SKIA3009J		
52	G/B	Trailer turn signal (left)	Output	ON	Turn left ON	 SKIA3009J		
56	R/G	Battery saver output	Output	OFF	30 minutes after ignition switch is turned OFF	0V		
				ON	—	Battery voltage		
57	Y/R	Battery power supply	Input	OFF	—	Battery voltage		
58	W/R	Optical sensor	Input	ON	When optical sensor is illuminated	3.1V or more		
					When optical sensor is not illuminated	0.6V or less		
59	G	Front door lock assembly LH actuator (unlock)	Output	OFF	OFF (neutral)	0V		
					ON (unlock)	Battery voltage		
60	G/B	Turn signal (left)	Output	ON	Turn left ON	 SKIA3009J		
61	G/Y	Turn signal (right)	Output	ON	Turn right ON	 SKIA3009J		
62	R/W	Step lamp LH and RH	Output	OFF	ON (any door open)	0V		
					OFF (all doors closed)	Battery voltage		
63	L	Interior room/map lamp	Output	OFF	Any door switch	<table border="1" style="display: inline-table;"> <tr> <td>ON (open)</td> </tr> <tr> <td>OFF (closed)</td> </tr> </table>	ON (open)	OFF (closed)
ON (open)								
OFF (closed)								
65	V	All door lock actuators (lock)	Output	OFF	OFF (neutral)	0V		
					ON (lock)	Battery voltage		
66	G/Y	Front door lock actuator RH and rear door lock actuators LH/RH (unlock)	Output	OFF	OFF (neutral)	0V		
					ON (unlock)	Battery voltage		

A

B

C

D

E

F

G

H

I

J

K

DEF

M

N

O

P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
67	B	Ground	Input	ON	—	0V
68	W/L	Power window power supply (RAP)	Output	—	Ignition switch ON	Battery voltage
					Within 45 seconds after ignition switch OFF	Battery voltage
					More than 45 seconds after ignition switch OFF	0V
					When front door LH or RH is open or power window timer operates	0V
69	W/R	Power window power supply	Output	—	—	Battery voltage
70	W/B	Battery power supply	Input	OFF	—	Battery voltage


BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Wiring Diagram

INFOID:000000003790004

REAR WINDOW DEFOGGER

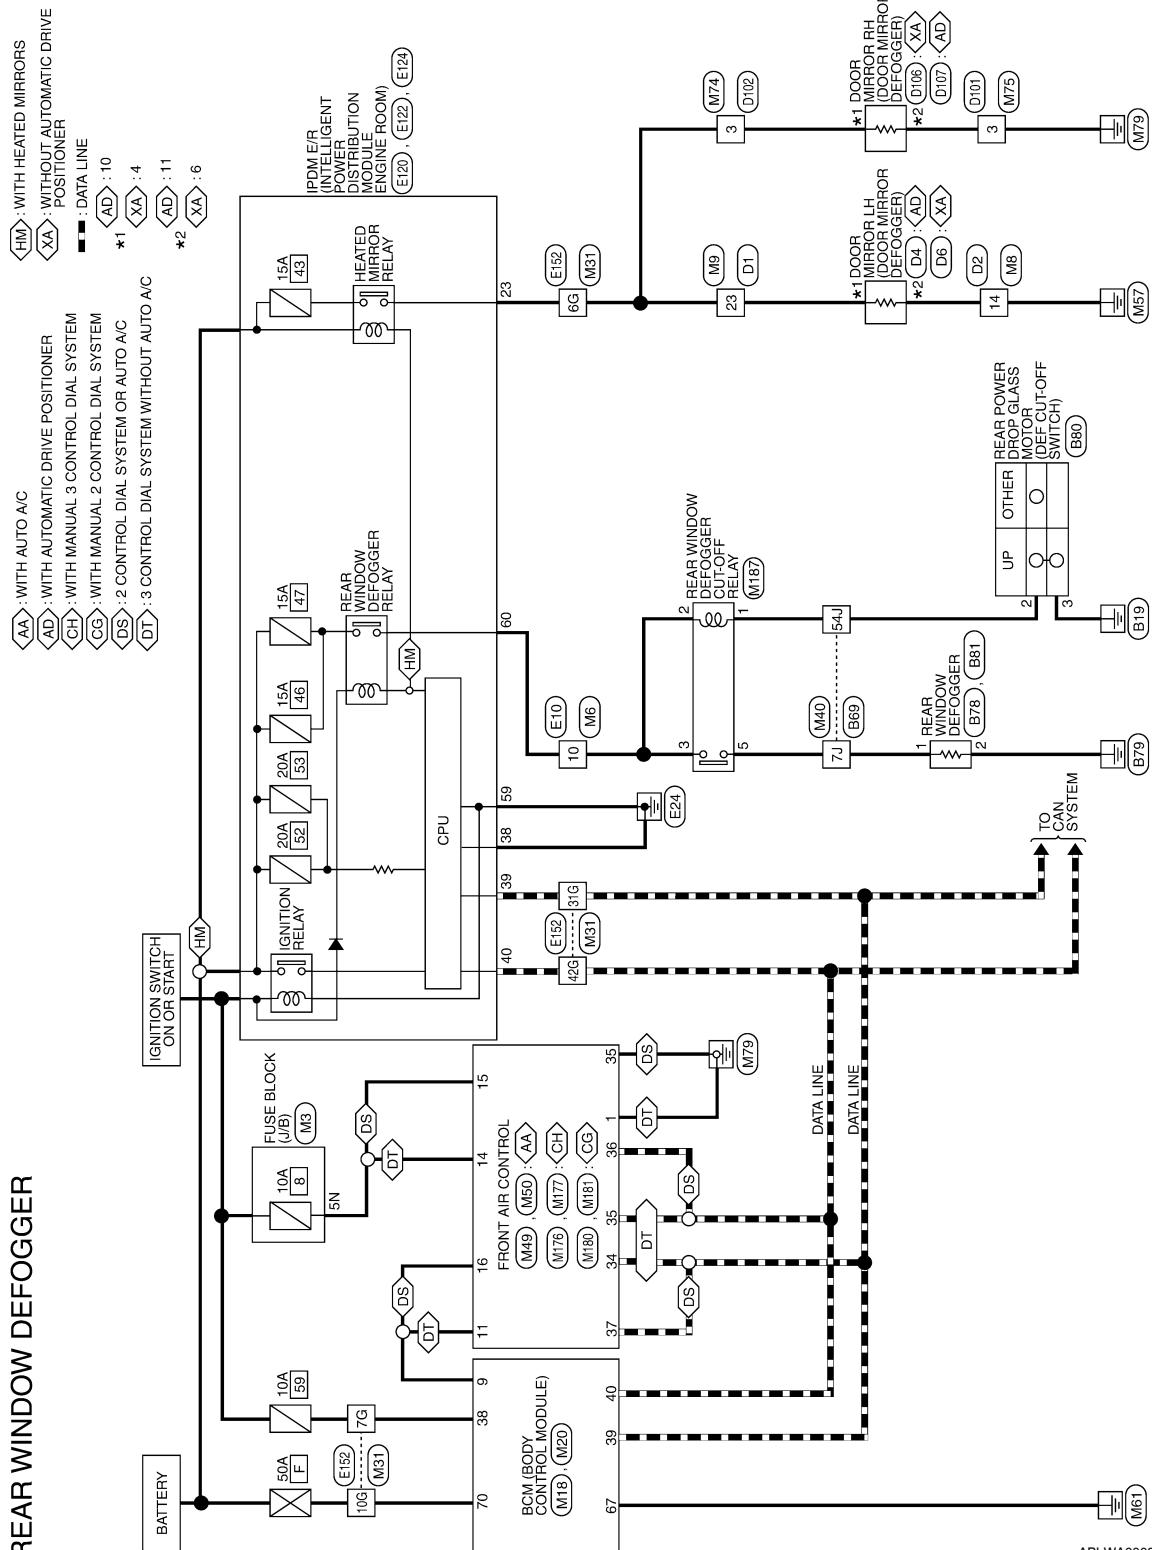


BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

REAR WINDOW DEFOGGER CONNECTORS

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

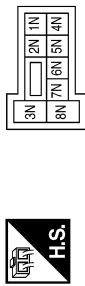


Terminal No.	Color of Wire	Signal Name
5N	Y/G	—



Terminal No.	Color of Wire	Signal Name
5N	Y/G	—

Terminal No.	Color of Wire	Signal Name
10	B/W	—

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Color	WHITE

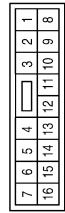

Terminal No.	Color of Wire	Signal Name
14	B	—

Terminal No.	Color of Wire	Signal Name
14	B	—

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



Connector No.	M9
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
9	Y/B	REAR DEFOGGER SW

Connector No.	M20
Connector Name	BATT (F/L)
Connector Color	—

Terminal No.	Color of Wire	Signal Name
67	B	GND (POWER)
70	W/B	BATT (F/L)


ABLIA0015GB

BCM (BODY CONTROL MODULE)


< ECU DIAGNOSIS >

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
W
X
Y
Z
DEF

Terminal No.	Color of Wire	Signal Name
6G	GR/W	—
7G	W/L	—
10G	W/B	—
31G	L	—
42G	P	—

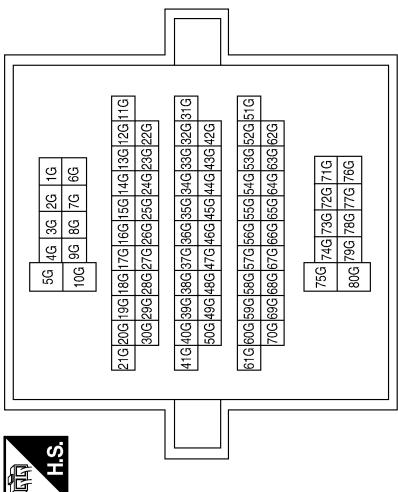


Connector No.	Connector Name	Wire To Wire	Connector No.	Connector Name	Wire To Wire
	WHITE	—		WHITE	—

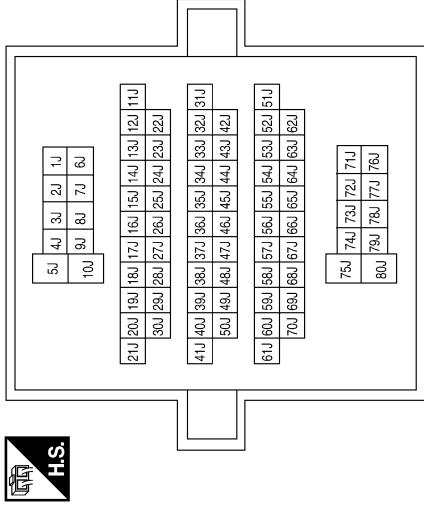


Terminal No.	Color of Wire	Signal Name
7J	W/L	—
54J	W/R	—

Connector No.	Connector Name	Wire To Wire	Connector No.	Connector Name	Wire To Wire
	M74	—		M74	—
	BROWN	—		BROWN	—

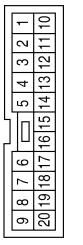

Connector No.	Connector Name	Wire To Wire	Connector No.	Connector Name	Wire To Wire
	FRONT AIR CONTROL (WITH AUTOMATIC TEMPERATURE CONTROL)	—		FRONT AIR CONTROL (WITH AUTOMATIC TEMPERATURE CONTROL)	—
	BLUE	—		BLUE	—

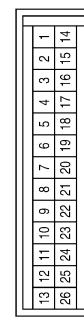

Terminal No.	Color of Wire	Signal Name
3	GR/W	—


Terminal No.	Color of Wire	Signal Name
15	Y/G	IGN
16	Y/B	REAR DEF REQ

AALIA0046GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Connector No.	M177
Connector Name	FRONT AIR CONTROL (WITH MANUAL 3 CONTROL DIAL SYSTEM)
Connector Color	BLUE

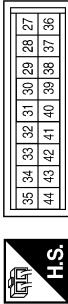

H.S.


Terminal No.	Color of Wire	Signal Name
1	B	GND
11	Y/B	HB REQUEST
14	Y/G	IGN

Terminal No.	Color of Wire	Signal Name
34	L	CAN-H
35	P	CAN-L



H.S.


Connector No.	M176
Connector Name	FRONT AIR CONTROL (WITH MANUAL 3 CONTROL DIAL SYSTEM)
Connector Color	BLACK

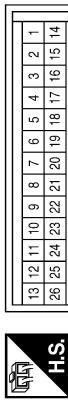

H.S.


Terminal No.	Color of Wire	Signal Name
3	B	-
11	Y/B	HB REQUEST
14	Y/G	IGN

Terminal No.	Color of Wire	Signal Name
34	L	CAN-H
35	P	CAN-L

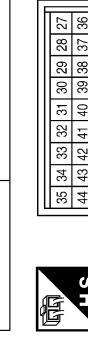

H.S.


Connector No.	M175
Connector Name	WIRE TO WIRE
Connector Color	WHITE

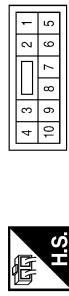

H.S.

Terminal No.	Color of Wire	Signal Name
3	B	-

Terminal No.	Color of Wire	Signal Name
35	B	GND
36	P	CAN-L

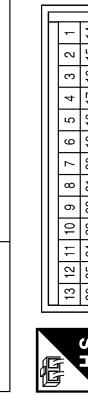

H.S.

Terminal No.	Color of Wire	Signal Name
1	W/R	-
2	B/W	-
3	B/W	-
5	W/L	-

Terminal No.	Color of Wire	Signal Name
15	Y/G	IGN
16	Y/B	REAR DEF REQ
37	L	CAN-H

ABIA0226GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
W
X
Y
Z
DEF

Connector No.	E120	Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)	Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE	Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
23	GR/N	HEATED MIRROR

Signal Name

GND (SIGNAL)

Terminal No.	Color of Wire	Signal Name
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L

Connector No.	E10	Connector No.	E120
Connector Name	WIRE TO WIRE	Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE	Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
10	B/W	-

Signal Name

-

Connector No.	E152	Connector No.	E124
Connector Name	WIRE TO WIRE	Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE	Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
59	B	GND (POWER)
60	B/W	RR DEF

Signal Name

-

Terminal No.	Color of Wire	Signal Name
6G	GR/W	-
7G	L/W	-
10G	W/B	-
31G	L	-
42G	P	-

11G	2G	13G	14G	15G	16G	17G	18G	19G	20G	21G
2G	2G	24G	25G	26G	27G	28G	29G	30G		
31G	32G	33G	34G	35G	36G	37G	38G	39G	40G	41G
42G	43G	44G	45G	46G	47G	48G	49G	50G		
6G	63G	64G	65G	66G	67G	68G	69G	70G		

71G	72G	73G	74G	75G
76G	77G	78G	79G	80G

ABLIA0016GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Terminal No.	Color of Wire	Signal Name
7J	W/L	-
54J	W/R	-



Terminal No.	Color of Wire	Signal Name
1	W/L	-



Connector No.	Connector Name	Connector Color
B78	REAR WINDOW DEFOGGER	BLACK



1J	12J	13J	14J	15J	16J	17J	18J	19J	20J	21J	22J	23J	24J	25J	26J	27J	28J	29J	30J
3J	13J	14J	15J	16J	17J	18J	19J	20J	21J	22J	23J	24J	25J	26J	27J	28J	29J	30J	31J


4J	13J	14J	15J	16J	17J	18J	19J	20J	21J	22J	23J	24J	25J	26J	27J	28J	29J	30J	
42J	43J	44J	45J	46J	47J	48J	49J	50J	51J	52J	53J	54J	55J	56J	57J	58J	59J	60J	61J

6J	13J	14J	15J	16J	17J	18J	19J	20J	21J	22J	23J	24J	25J	26J	27J	28J	29J	30J
62J	63J	64J	65J	66J	67J	68J	69J	70J	71J	72J	73J	74J	75J	76J	77J	78J	79J	80J

Terminal No.	Color of Wire	Signal Name
2	W/R	-
3	B	-




Terminal No.	Color of Wire	Signal Name
1	W/L	-

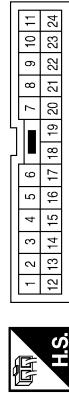

Connector No.	Connector Name	Connector Color
B81	REAR WINDOW DEFOGGER	BLACK




Terminal No.	Color of Wire	Signal Name
23	GR/W	-

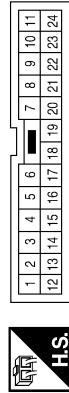

Connector No.	Connector Name	Connector Color
B80	REAR POWER DROP GLASS MOTOR (DEF CUT-OFF SWITCH)	GRAY



Terminal No.	Color of Wire	Signal Name
2	B	-
3	B	-

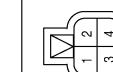

BCM (BODY CONTROL MODULE)


< ECU DIAGNOSIS >

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
W
X
Y
Z
DEF

Connector No.	D6
Connector Name	DOOR MIRROR LH (WITHOUT AUTOMATIC DRIVE POSITIONER)
Connector Color	WHITE



Connector No.	D4
Connector Name	DOOR MIRROR LH (WITH AUTOMATIC DRIVE POSITIONER)
Connector Color	WHITE

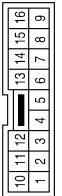


Terminal No.	Color of Wire	Signal Name
10	GR/W	-
11	B	-

Terminal No.	Color of Wire	Signal Name
4	GR/W	-
6	B	-




Connector No.	D2
Connector Name	WIRE TO WIRE
Connector Color	WHITE

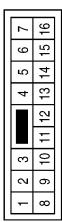


Terminal No.	Color of Wire	Signal Name
14	B	-

Terminal No.	Color of Wire	Signal Name
10	GR/W	-
11	B	-

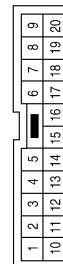

Connector No.	D101
Connector Name	WIRE TO WIRE
Connector Color	WHITE

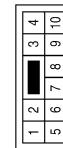

Terminal No.	Color of Wire	Signal Name
4	GR/W	-
6	B	-




Terminal No.	Color of Wire	Signal Name
3	GR/W	-

AALIA0047GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Connector No.	D107
Connector Name	DOOR MIRROR RH (WITH AUTOMATIC DRIVE POSITIONER)
Connector Color	WHITE

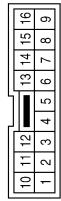

Terminal No.	Color of Wire	Signal Name
10	GR/W	—
11	B	—

AALIA0048GB

REAR WINDOW DEFOGGER SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

REAR WINDOW DEFOGGER SYSTEM SYMPTOMS

Symptom Table

INFOID:000000003790005

Symptom	Diagnoses / Service procedure	Refer to page
Rear window defogger and door mirror defoggers do not operate. (with heated mirrors)	1. BCM power supply and ground circuit check 2. IPDM E/R auto active test check 3. Rear window defogger switch circuit check 4. Rear window defogger circuit check 5. Replace IPDM E/R	BCS-30 PCS-13 DEF-40 DEF-40 PCS-30
Rear window defogger does not operate. (without heated mirrors)	1. BCM power supply and ground circuit check 2. IPDM E/R auto active test check 3. Rear window defogger switch circuit check 4. Rear window defogger circuit check 5. Filament check 6. Replace IPDM E/R	BCS-30 PCS-13 DEF-9 DEF-12 DEF-47 PCS-30
Rear window defogger does not operate but both of door mirror defoggers operate. (with heated mirrors)	1. Rear window defogger circuit check 2. Filament check 3. Replace IPDM E/R	DEF-41 DEF-47 PCS-30
Both door mirror defoggers do not operate but rear window defogger operates. (with heated mirrors)	1. Door mirror defogger power supply circuit check 2. Replace IPDM E/R	DEF-42 PCS-30
Door mirror LH defogger does not operate. (with heated mirrors)	1. Door mirror LH defogger circuit check	DEF-43
Door mirror RH defogger does not operate. (with heated mirrors)	1. Door mirror RH defogger circuit check	DEF-44
Rear window defogger switch does not light, and rear window defogger is not shown on the display, but rear window defogger operates.	1. Replace front air control	VTL-8

DEF

REAR WINDOW DEFOGGER AND DOOR MIRROR DEFOGGER DO NOT OPERATE.

< SYMPTOM DIAGNOSIS >

REAR WINDOW DEFOGGER AND DOOR MIRROR DEFOGGER DO NOT OPERATE.

Diagnosis Procedure

INFOID:000000003790006

1. CHECK REAR WINDOW DEFOGGER SWITCH

Check rear window defogger switch.

Refer to [DEF-12, "Component Function Check".](#)

Is the inspection result normal?

YES >> GO TO 2

NO >> Repair or replace the malfunctioning parts.

2. CHECK REAR WINDOW DEFOGGER RELAY

Check rear window defogger relay.

Refer to [DEF-11, "Component Function Check".](#)

Is the inspection result normal?

YES >> Refer to [GI-38, "Intermittent Incident".](#)

NO >> Repair or replace the malfunctioning parts.

REAR WINDOW DEFOGGER DOES NOT OPERATE BUT BOTH OF DOOR MIRROR DEFOGGER OPERATE.

< SYMPTOM DIAGNOSIS >

REAR WINDOW DEFOGGER DOES NOT OPERATE BUT BOTH OF DOOR MIRROR DEFOGGER OPERATE.

Diagnosis Procedure

INFOID:000000003790007

1. CHECK REAR WINDOW DEFOGGER POWER SUPPLY AND GROUND CIRCUIT

Check rear window defogger power supply and ground circuit.

Refer to [DEF-12, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> Refer to [GI-38, "Intermittent Incident"](#).

NO >> Repair or replace the malfunctioning parts.

A

B

C

D

E

F

G

H

I

J

K

DEF

M

N

O

P

BOTH DOORS MIRROR DEFOGGER DON'T OPERATE BUT REAR WINDOW DEFOGGER OPERATES

< SYMPTOM DIAGNOSIS >

BOTH DOORS MIRROR DEFOGGER DON'T OPERATE BUT REAR WINDOW DEFOGGER OPERATES

Diagnosis Procedure

INFOID:000000003790008

1. CHECK INTERMITTENT INCIDENT

Check intermittent incident.

Refer to [GI-38, "Intermittent Incident"](#).

Is the inspection result normal?

YES >> Check the following.

- Battery power supply circuit
- IPDM E/R

NO >> Repair or replace the malfunctioning parts.

DRIVER SIDE DOOR MIRROR DEFOGGER DOES NOT OPERATE.

< SYMPTOM DIAGNOSIS >

DRIVER SIDE DOOR MIRROR DEFOGGER DOES NOT OPERATE.

Diagnosis Procedure

INFOID:0000000003790009

1. CHECK DOOR MIRROR DEFOGGER LH

Check door mirror defogger LH.

Refer to [DEF-15, "Diagnosis Procedure".](#)

Is the inspection result normal?

YES >> Refer to [GI-38, "Intermittent Incident".](#)

NO >> Repair or replace the malfunctioning parts.

A

B

C

D

E

F

G

H

I

J

K

DEF

M

N

O

P

PASSENGER SIDE DOOR MIRROR DEFOGGER DOES NOT OPERATE.

< SYMPTOM DIAGNOSIS >

PASSENGER SIDE DOOR MIRROR DEFOGGER DOES NOT OPERATE.

Diagnosis Procedure

INFOID:000000003790010

1. CHECK DOOR MIRROR DEFOGGER RH

Check door mirror defogger RH.

Refer to [DEF-19, "Diagnosis Procedure".](#)

Is the inspection result normal?

YES >> Refer to [GI-38, "Intermittent Incident".](#)

NO >> Repair or replace the malfunctioning parts.

REAR WINDOW DEFOGGER SWITCH DOES NOT LIGHT, BUT REAR WINDOW DEFOGGER OPERATES

< SYMPTOM DIAGNOSIS >

REAR WINDOW DEFOGGER SWITCH DOES NOT LIGHT, BUT REAR WINDOW DEFOGGER OPERATES

Diagnosis Procedure

INFOID:000000003790011

1. CHECK FRONT AIR CONTROL (REAR WINDOW DEFOGGER SWITCH)

Check that the front air control (rear window defogger switch) is operating normally.

Is the inspection result normal?

YES >> Refer to [GI-38, "Intermittent Incident"](#).

NO >> Refer to [DEF-9, "Diagnosis Procedure \(2 Control Dial System or Auto A/C\)"](#) or [DEF-9, "Diagnosis Procedure \(3 Control Dial System Without Auto A/C\)"](#).

A

B

C

D

E

F

G

H

I

J

K

DEF

M

N

O

P

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000003790012

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

Handling for Adhesive and Primer

INFOID:0000000003790013

- Do not use an adhesive which is past its usable date. Shelf life of this product is limited to six months after the date of manufacture. Carefully adhere to the expiration or manufacture date printed on the box.
- Keep primers and adhesive in a cool, dry place. Ideally, they should be stored in a refrigerator.
- Open the seal of the primer and adhesive just before application. Discard the remainder.
- Before application, be sure to shake the primer container to stir the contents. If any floating material is found, do not use it.
- If any primer or adhesive contacts the skin, wipe it off with gasoline or equivalent and wash the skin with soap.
- When using primer and adhesive, always observe the precautions in the instruction manual.

REAR WINDOW DEFOGGER

< ON-VEHICLE REPAIR >


ON-VEHICLE REPAIR

REAR WINDOW DEFOGGER


Filament Check

INFOID:000000003790014


- When measuring voltage, wrap tin foil around the top of the negative probe. Then press the foil against the wire with your finger.

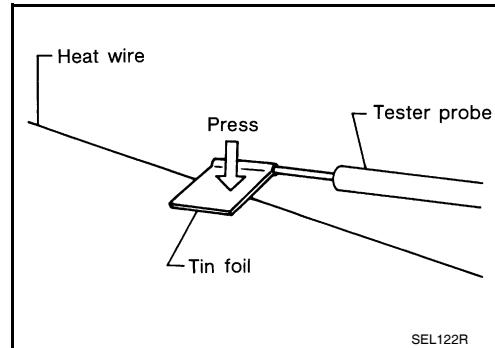

- Attach probe circuit tester (in Volt range) to middle portion of each filament.

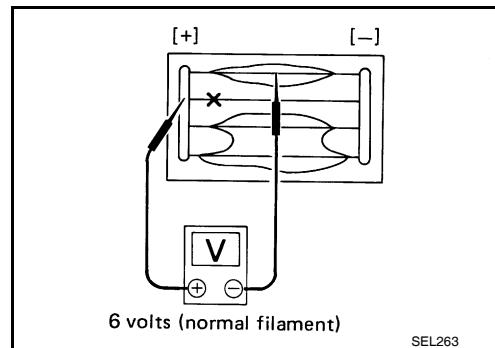

- If a filament is burned out, circuit tester registers 0 or battery voltage.
- To locate burned out point, move probe to left and right along filament. Test needle will swing abruptly when probe passes the point.

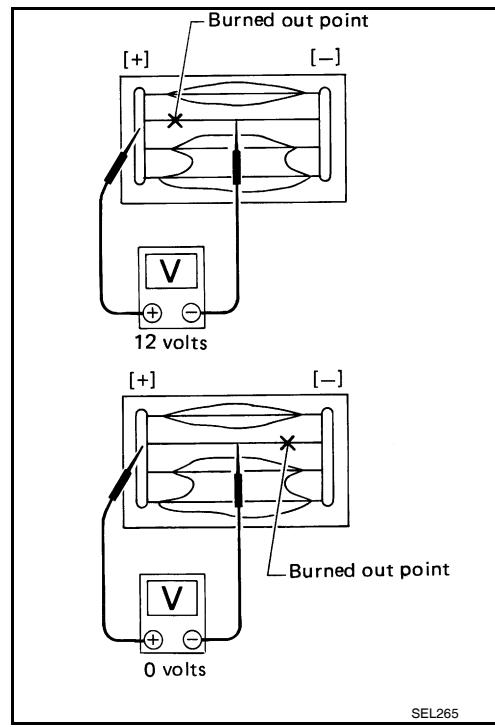

Filament Repair

INFOID:000000003790015

REPAIR EQUIPMENT

- Conductive silver composition (DuPont No. 4817 or equivalent)
- Ruler 30 cm (11.8 in) long


REAR WINDOW DEFOGGER

< ON-VEHICLE REPAIR >

- Drawing pen
- Heat gun
- Alcohol
- Cloth

REPAIRING PROCEDURE


1. Wipe broken heat wire and its surrounding area clean with a cloth damped in alcohol.
2. **NOTE:**
Shake silver composition container before use.
Apply a small amount of conductive silver composition to tip of drawing pen.
3. Place ruler on glass along broken line. Deposit conductive silver composition on break with drawing pen. Slightly overlap existing heat wire on both sides [preferably 5 mm (0.20 in)] of the break.

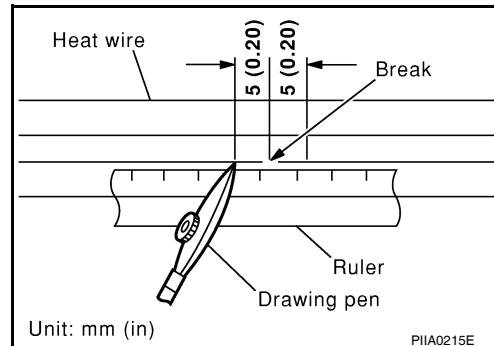

4. After repair has been completed, check repaired wire for continuity. This check should be conducted 10 minutes after silver composition is deposited.

CAUTION:

Do not touch repaired area while test is being conducted.

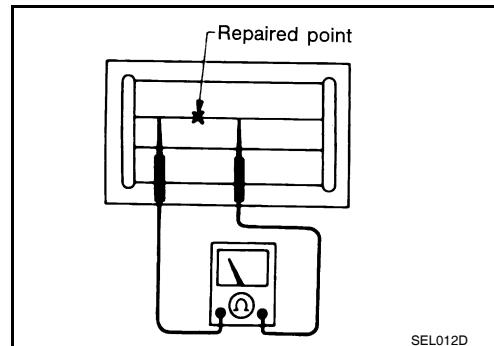

5. Apply a constant stream of hot air directly to the repaired area for approximately 20 minutes with a heat gun. A minimum distance of 3 cm (1.2 in) should be kept between repaired area and hot air outlet.

If a heat gun is not available, let the repaired area dry for 24 hours.

