

STR

SECTION STARTING SYSTEM

CONTENTS

PRECAUTION	2	COMPONENT DIAGNOSIS	9
PRECAUTIONS	2	B TERMINAL CIRCUIT	9
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER"	2	Description	9
Precaution for Power Generation Variable Voltage Control System	2	Diagnosis Procedure	9
PREPARATION	3	S CONNECTOR CIRCUIT	10
PREPARATION	3	Description	10
Special Service Tool	3	Diagnosis Procedure	10
Commercial Service Tool	3	STARTING SYSTEM	11
BASIC INSPECTION	4	Wiring Diagram	11
DIAGNOSIS AND REPAIR WORKFLOW	4	SYMPTOM DIAGNOSIS	16
Work Flow	4	STARTING SYSTEM	16
FUNCTION DIAGNOSIS	7	Symptom Table	16
STARTING SYSTEM	7	ON-VEHICLE REPAIR	17
System Diagram	7	STARTER MOTOR	17
System Description	7	Removal and Installation	17
Component Parts Location	7	SERVICE DATA AND SPECIFICATIONS (SDS)	18
Component Description	8	STARTER MOTOR	18
		Starter	18

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000003789343

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

Precaution for Power Generation Variable Voltage Control System

INFOID:0000000003789344

CAUTION:

For this model, the battery current sensor that is installed to the negative battery cable measures the charging/discharging current of the battery and performs various engine controls. If an electrical component is connected directly to the negative battery terminal, the current flowing through that component will not be measured by the battery current sensor. This condition may cause a malfunction of the engine control system and battery discharge may occur. Do not connect an electrical component or ground wire directly to the battery terminal.

PREPARATION

< PREPARATION >

PREPARATION


PREPARATION

Special Service Tool

INFOID:000000003789345


STR

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

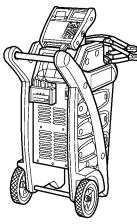Tool number (Kent Moore No.) Tool name	Description
— (—) Model GR-8 Multitasking Battery Diagnostic Station	 AWIIA1239ZZ Tests Batteries, starting and charging system. For operating instructions, refer to diagnostic station instruction manual.

Commercial Service Tool

INFOID:000000003789346

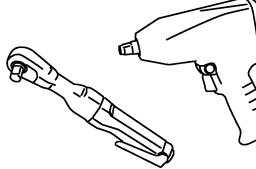Tool name	Description
Power tool	 PBIC0190E Loosening bolts and nuts

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:0000000003789347

OVERALL SEQUENCE

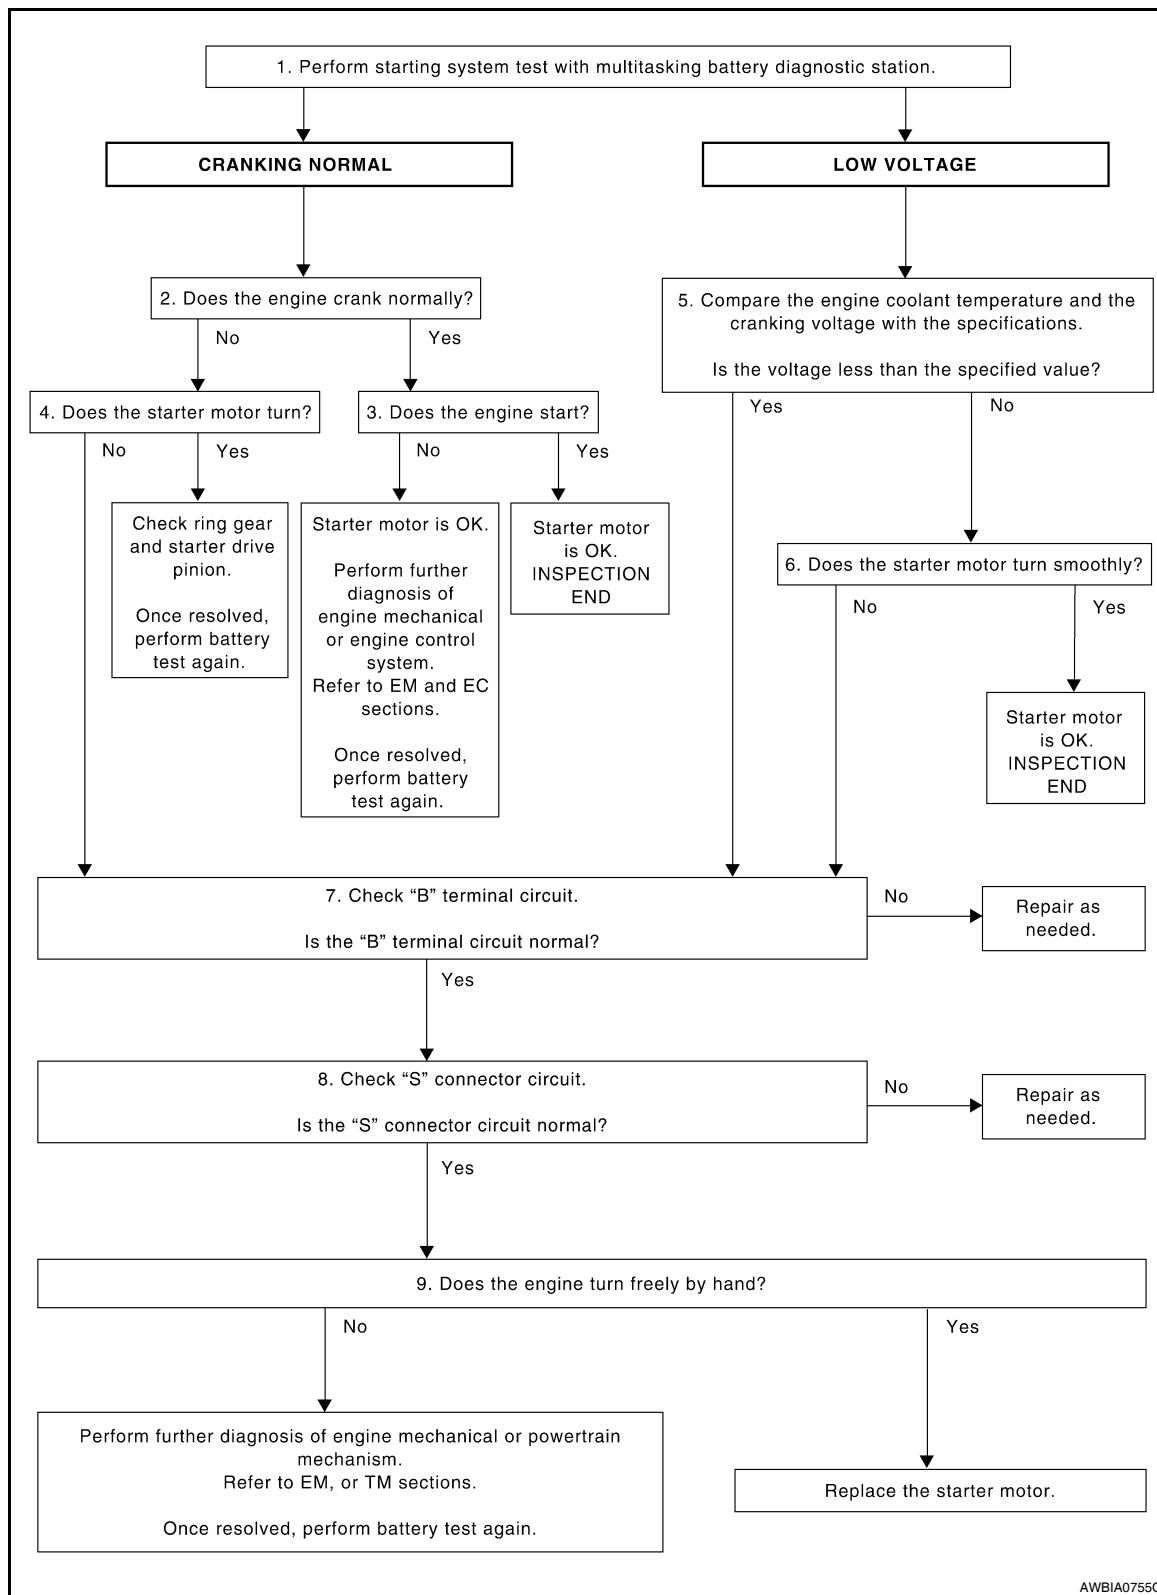

DETAILED FLOW

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

NOTE:

To ensure a complete and thorough diagnosis, the battery, starter motor and generator test segments must be done as a set from start to finish.

1. DIAGNOSIS WITH MULTITASKING BATTERY DIAGNOSTIC STATION

Perform the starting system test with multitasking battery diagnostic station. For details and operating instructions, refer to diagnostic station instruction manual.

STR

Test result

C

D

E

F

G

H

I

J

K

L

M

N

O

P

CRANKING NORMAL>>GO TO 2

LOW VOLTAGE>>GO TO 5

CHARGE BATTERY>>Perform the slow battery charging procedure. (Initial rate of charge is 10A for 12 hours.) Perform battery test again. Refer to diagnostic station instruction manual.

REPLACE BATTERY>>Before replacing battery, clean the battery cable clamps and battery posts. Perform battery test again. Refer to diagnostic station instruction manual. If second test result is "REPLACE BATTERY", then do so. Perform battery test again to confirm repair.

2. CRANKING CHECK

Check that the starter motor operates properly.

Does the engine crank normally?

YES >> GO TO 3

NO >> GO TO 4

3. ENGINE START CHECK

Check that the engine starts.

Does the engine start?

YES >> Starter motor is OK. Inspection end.

NO >> Perform further diagnosis of engine mechanical or engine control system. Refer to EM and EC sections. Once resolved, perform battery test again.

4. STARTER MOTOR ACTIVATION

Check that the starter motor operates.

Does the starter motor turn?

YES >> Check ring gear and starter motor drive pinion. Once resolved, perform battery test again.

NO >> GO TO 7

5. COMPARISON BETWEEN ENGINE COOLANT AND CRANKING VOLTAGE

Compare the engine coolant temperature and verify the cranking voltage is within specification.

Minimum Specification of Cranking Voltage Referencing Coolant Temperature

Engine coolant temperature [°C (°F)]	Voltage [V]
-30 to -20 (-22 to -4)	8.6
-19 to -10 (-2 to 14)	9.1
-9 to 0 (16 to 32)	9.5
More than 1 (More than 34)	9.9

Is the voltage less than the specified value?

YES >> GO TO 7

NO >> GO TO 6

6. STARTER OPERATION

Check the starter operation.

P

Does the starter motor turn smoothly?

O

P

YES >> Starter motor is OK. Inspection end.

NO >> GO TO 7

7. "B" TERMINAL CIRCUIT INSPECTION

Check "B" terminal circuit. Refer to [STR-9, "Diagnosis Procedure"](#).

Is "B" terminal circuit normal?

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

YES >> GO TO 8

NO >> Repair as needed.

8. "S" CONNECTOR CIRCUIT INSPECTION

Check "S" connector circuit. Refer to [STR-10, "Diagnosis Procedure"](#).

Is "S" connector circuit normal?

YES >> GO TO 9

NO >> Repair as needed.

9. ENGINE ROTATION STATUS

Check that the engine can be rotated by hand.

Does the engine turn freely by hand?

YES >> Replace starter motor.

NO >> Perform further diagnosis of engine mechanical or powertrain mechanism. Refer to EM or TM sections. Once resolved, perform battery test again. Refer to diagnostic station instruction manual.

STARTING SYSTEM

< FUNCTION DIAGNOSIS >


FUNCTION DIAGNOSIS

STARTING SYSTEM

System Diagram

INFOID:000000003789348

STR

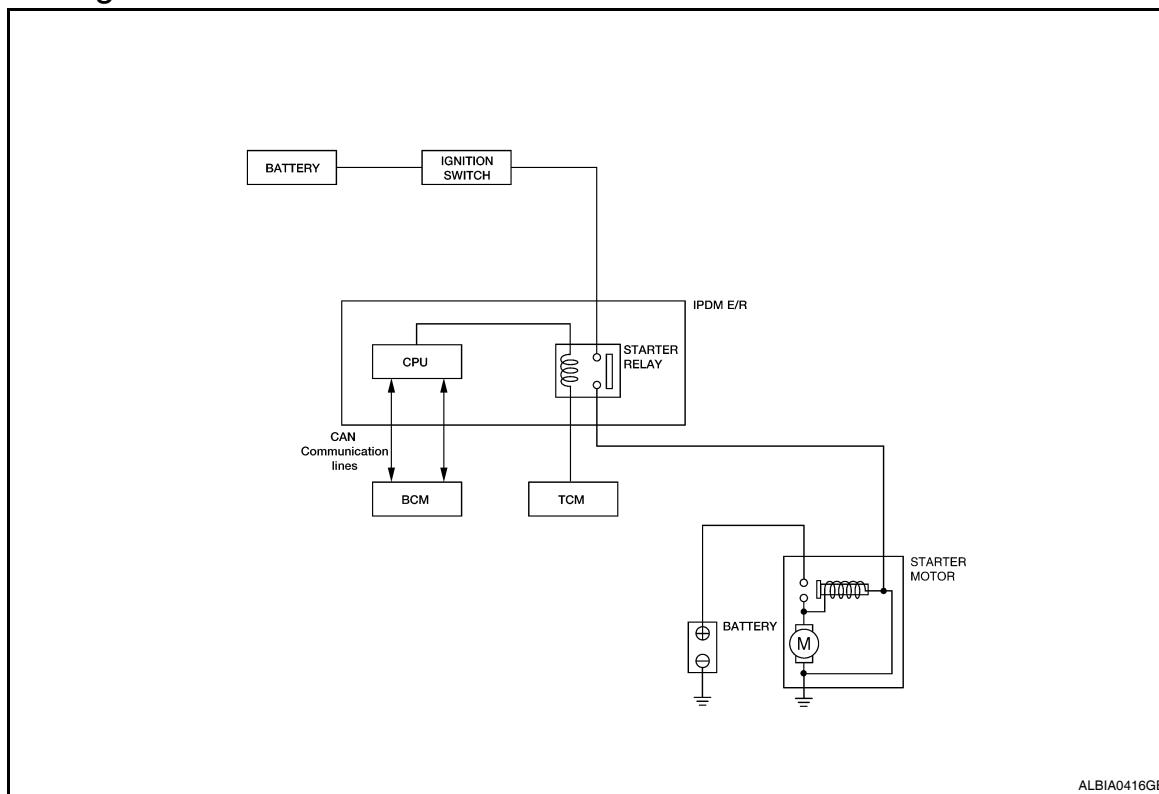

ALBIA0416GB


System Description

INFOID:000000003789349

The starter motor plunger closes and provides a closed circuit between the battery and the starter motor. The starter motor is grounded to the cylinder block. With power and ground supplied, the starter motor operates.

Component Parts Location

INFOID:000000003789350

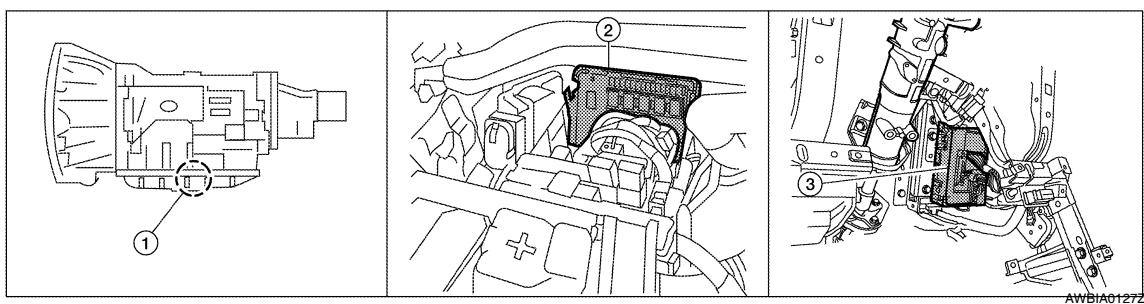

AWBIA0127ZZ

1. A/T assembly
F9 (floor shift)
F17 (column shift)
2. IPDM E/R E119, E120, E122, E124
3. BCM M18 (view with instrument panel lower LH panel removed)

STARTING SYSTEM

< FUNCTION DIAGNOSIS >

Component Description

INFOID:000000003789351

Component part	Description
TCM	TCM supplies power to the starter relay inside the IPDM E/R when the selector lever is shifted to the P or N position.
BCM	BCM sends a starter request signal to the CPU of the IPDM E/R over the CAN communication lines.
IPDM E/R	CPU inside IPDM E/R operates the starter relay at the request of the BCM over the CAN communication lines.
Starter motor	The starter motor plunger closes and the motor is supplied with battery power, which in turn cranks the engine, when the "S" terminal is supplied with electric power.

B TERMINAL CIRCUIT

< COMPONENT DIAGNOSIS >

COMPONENT DIAGNOSIS

B TERMINAL CIRCUIT

Description

INFOID:000000003789352

STR

Terminal "2" (B) is constantly supplied with battery power.

Diagnosis Procedure

INFOID:000000003789353

C

CAUTION:

Perform diagnosis under the condition that the engine cannot start by the following procedure.

1. Remove fuel pump fuse.
2. Crank or start the engine (where possible) until the fuel pressure is depleted.


1.CHECK TERMINAL 2 POWER SUPPLY VOLTAGE

1. Turn ignition switch OFF.
2. Make sure that starter motor connector F27 terminal 2 connection is clean and tight.
3. Check voltage between starter motor connector F27 terminal 2 and ground.

(+)		(-)	Voltage
Connector	Terminal		
F27	2	Ground	Battery voltage

Is there battery voltage present?

- YES >> GO TO 2
 NO >> Check harness between battery and starter motor for open circuit.

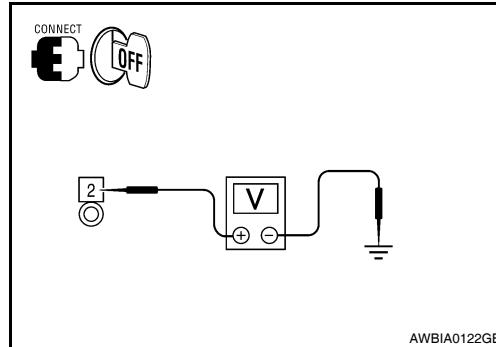


2.CHECK BATTERY CABLE (VOLTAGE DROP TEST)

1. Shift the transmission into park or neutral.
2. Check voltage between battery positive terminal and starter motor connector F27 terminal 2 while cranking the engine.

(+)		(-)	Condition	Voltage
Connector	Terminal			
F27	2	Battery (+) terminal	While cranking the engine	Less than 0.2V

Is the voltage drop less than 0.2V?

- YES >> GO TO 3
 NO >> Check harness between the battery and the starter motor for high resistance.

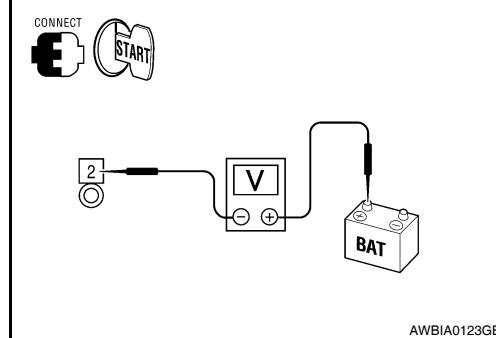


3.CHECK GROUND CIRCUIT STATUS (VOLTAGE DROP TEST)

Check voltage between starter motor case and battery negative terminal while cranking the engine.

(+)	(-)	Condition	Voltage
Starter motor case	Battery (-) terminal	While cranking the engine	Less than 0.2V

Is the voltage drop less than 0.2V?

- YES >> Terminal 2 circuit is OK. Further inspection necessary.
 Refer to [STR-4, "Work Flow"](#).
 NO >> Check the starter motor case to engine mounting for high resistance.

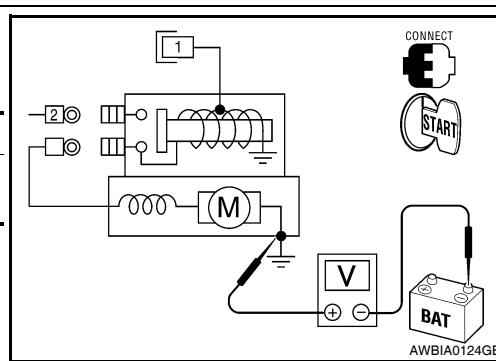

S CONNECTOR CIRCUIT

< COMPONENT DIAGNOSIS >

S CONNECTOR CIRCUIT

Description

INFOID:0000000003789354

Terminal "1" (S) is the power supply for the starter motor magnetic switch. Terminal 1 is supplied with power when the ignition switch is turned to the START position while the selector lever is in the P or N position.

Diagnosis Procedure

INFOID:0000000003789355

CAUTION:

Perform diagnosis under the condition that engine cannot start by the following procedure.


1. Remove fuel pump fuse.
2. Crank or start the engine (where possible) until the fuel pressure is released.

1.CHECK STARTER MOTOR MAGNETIC SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect starter motor connector F28.
3. Shift transmission into park or neutral.
4. Check voltage between starter motor harness connector F28 terminal 1 and ground with the ignition in START.

(+) Connector		(-) Terminal	Condition	Voltage
F28	1	Ground	Ignition in START	Battery voltage

Is battery voltage present?

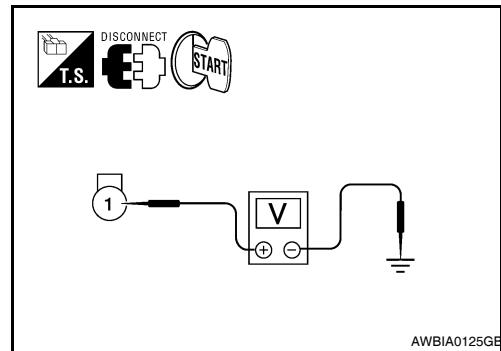

AWBIA0125GE

YES >> Magnetic switch circuit is OK. Further inspection necessary. Refer to [STR-4, "Work Flow"](#).

NO >> GO TO 2

2.CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Check the IPDM E/R harness connector E120 and starter motor harness connector F28 for damage, bent pins and loose connections.

Is the inspection result normal?


YES >> GO TO 3

NO >> Repair the terminal and connector.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect IPDM E/R connector E120 and starter motor connector F28.
2. Check continuity between starter motor harness connector F28 (A) terminal 1 and IPDM E/R harness connector E120 (B) terminal 19.

A		B		Continuity
Connector	Terminal	Connector	Terminal	
F28	1	E120	19	Yes

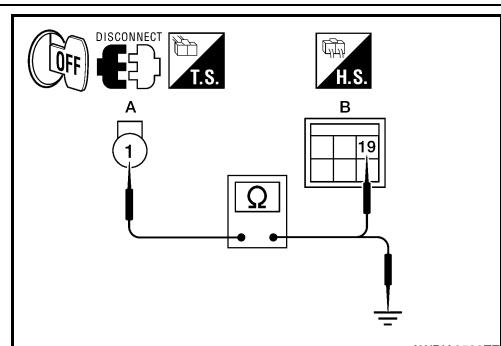

AWBIA0530Z

3. Check continuity between starter motor harness connector F28 (A) terminal 1 and ground.

A		—	Continuity
Connector	Terminal		
F28	1	Ground	No

Are the continuity test results as specified?

YES >> Further inspection necessary. Refer to [STR-4, "Work Flow"](#).

NO >> Repair the harness.

STARTING SYSTEM

< COMPONENT DIAGNOSIS >

STARTING SYSTEM

Wiring Diagram

INFOID:0000000003789356

A

STR

C

D

M

G

I

-

K


M

Z

P

(FS) : FLOOR SHIFT
(CS) : COLUMN SHIFT
■ : DATA LINE

STARTING SYSTEM

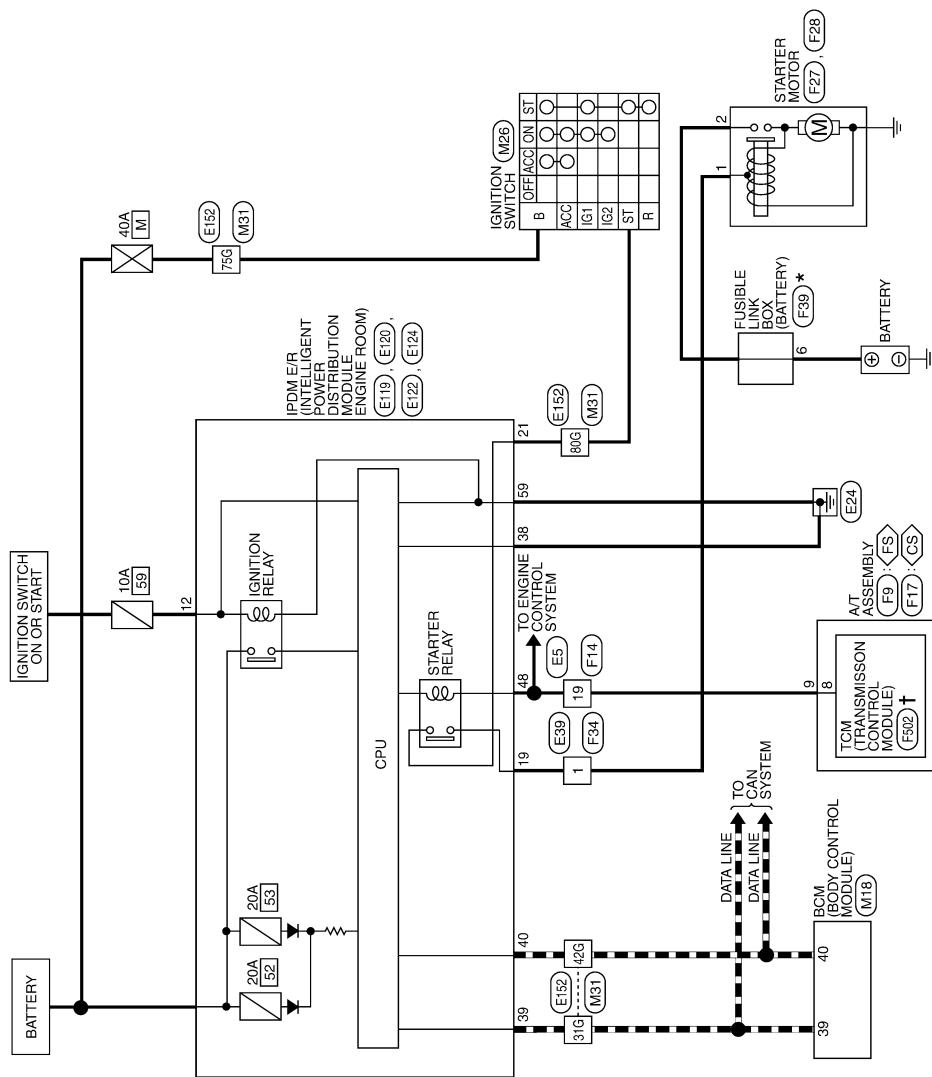


ABBWA0005GE

STARTING SYSTEM

< COMPONENT DIAGNOSIS >


STARTING SYSTEM CONNECTORS

Connector No.	M18	Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE		



Terminal No.	Color of Wire	Signal Name
39	L	CAN-H
40	P	CAN-L

Connector No.	M26
Connector Name	IGNITION SWITCH
Connector Color	WHITE



Connector No.	E5
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
31G	L	-
42G	P	-
75G	G	-
80G	BR	-

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE




21G	20G	19G	18G	17G	16G	15G	14G	13G	12G	11G
30G	29G	28G	27G	26G	25G	24G	23G	22G		
41G	40G	39G	38G	37G	36G	35G	34G	33G	32G	31G
50G	49G	48G	47G	46G	55G	54G	53G	52G		
61G	60G	59G	58G	57G	56G	55G	54G	53G	52G	51G
70G	69G	68G	67G	66G	65G	64G	63G	62G		
75G	74G	73G	72G	71G						
80G	79G	78G	77G	76G						

STARTING SYSTEM

< COMPONENT DIAGNOSIS >

Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE




Connector No.	E120
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

Terminal No.	Color of Wire	Signal Name
19	W/R	IGN SW(G)

Terminal No.	Color of Wire	Signal Name
12	L/W	IGN SW(ST)

Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
59	B	GND (POWER)

Terminal No.	Color of Wire	Signal Name
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L
48	B/R	INHIBIT SW

A

STR

C

D

M

F

G

I

K

L

M


Z

O

P

STARTING SYSTEM

< COMPONENT DIAGNOSIS >

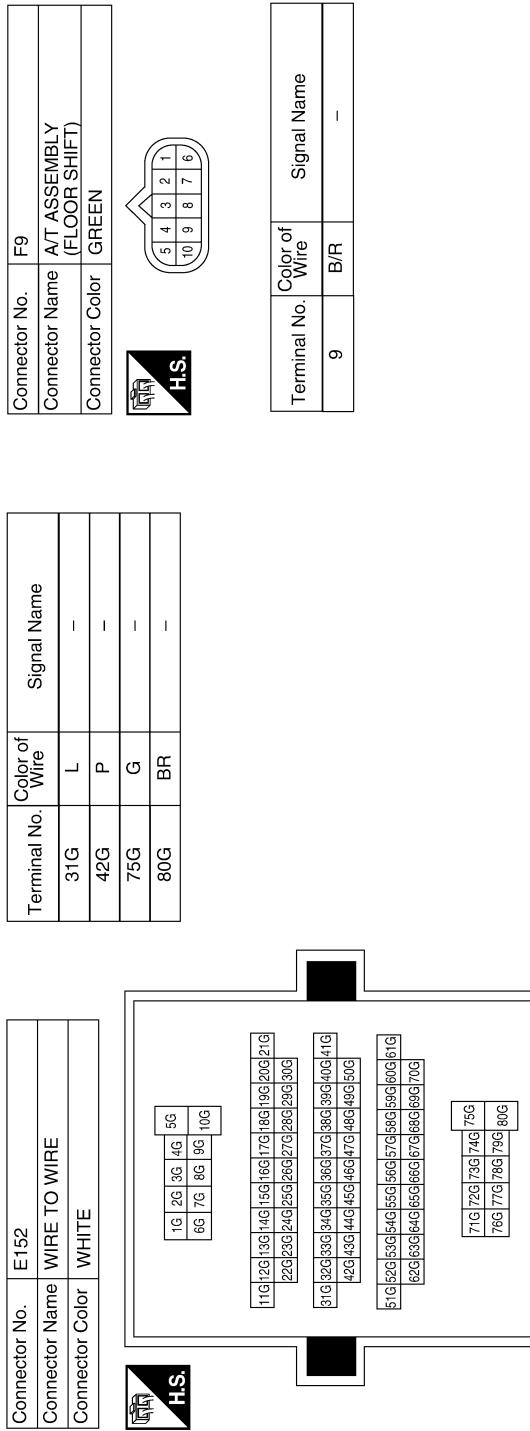

AABIA0054GB

STARTING SYSTEM

< COMPONENT DIAGNOSIS >

A

STR

C

D

E

F

G

H

J

K

L


M

N

O

P

Connector No.	F34
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Connector No.	F502
Connector Name	TCM (TRANSMISSION CONTROL MODULE)
Connector Color	GRAY



Connector No.	F28
Connector Name	STARTER MOTOR
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	W/R	-



Connector No.	F34
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	W/R	-



AABIA0055GB

STARTING SYSTEM

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

STARTING SYSTEM

Symptom Table

INFOID:000000003789357

Symptom	Reference
No normal cranking	Refer to STR-4, "Work Flow".
Starter motor does not rotate	

< ON-VEHICLE REPAIR >

ON-VEHICLE REPAIR

STARTER MOTOR


Removal and Installation

INFOID:000000003789358

STR

REMOVAL

1. Remove the intake manifold. Refer to [EM-26, "Removal and Installation"](#).
2. Remove the starter harness terminal nut connectors.
3. Remove the two starter bolts, using power tools.
4. Remove the starter.

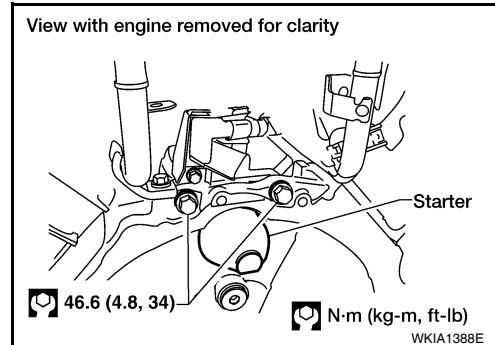

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

Tighten terminal nut carefully.

Terminal nut : 10.8 N·m (1.1 kg·m, 8 ft-lb)

STARTER MOTOR

< SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

STARTER MOTOR

Starter

INFOID:000000003789359

Application	All models
Manufacturer	Mitsubishi
Model number	M002T85571ZCKD
Type	Reduction gear type
System voltage	12V
No-load	Terminal voltage
	Current
	Revolution
Minimum diameter of commutator	31.4 mm (1.236 in)
Minimum length of brush	11.0 mm (0.433 in)
Brush spring tension	26.7-36.1 N (2.72 - 3.68 kg, 5.93 - 8.02 lb)
Clearance between pinion front edge and pinion stopper	0.5 - 2.0 mm (0.020 - 0.079 in)