

SECTION **FAX**  
FRONT AXLE

A  
B  
C

FAX

CONTENTS

E

<b>PRECAUTIONS</b> .....	<b>2</b>	<b>INSTALLATION</b> .....	<b>8</b>	<b>F</b>
Precautions .....	2	Disassembly and Assembly .....	8	
<b>PREPARATION</b> .....	<b>3</b>	DISASSEMBLY .....	8	
Special Service Tools .....	3	ASSEMBLY .....	9	<b>G</b>
Commercial Service Tools .....	3	<b>FRONT DRIVE SHAFT</b> .....	<b>11</b>	
<b>NOISE, VIBRATION, AND HARSHNESS (NVH)</b>		Removal and Installation .....	11	
<b>TROUBLESHOOTING</b> .....	<b>4</b>	REMOVAL .....	11	<b>H</b>
NVH Troubleshooting Chart .....	4	INSPECTION AFTER REMOVAL .....	13	
<b>WHEEL HUB AND KNUCKLE</b> .....	<b>5</b>	INSTALLATION .....	13	
On-Vehicle Service .....	5	Disassembly and Assembly .....	15	
FRONT AXLE AND SUSPENSION .....	5	DISASSEMBLY .....	16	<b>I</b>
FRONT WHEEL BEARING .....	5	INSPECTION AFTER DISASSEMBLY .....	17	
Removal and Installation .....	6	ASSEMBLY .....	18	
REMOVAL .....	7	<b>SERVICE DATA AND SPECIFICATIONS (SDS)</b> .....	<b>21</b>	<b>J</b>
INSPECTION AFTER REMOVAL .....	8	Drive Shaft .....	21	
		Wheel Bearing (Front) .....	21	

K  
L  
M

# PRECAUTIONS


## PRECAUTIONS

PFP:00001

### Precautions

EDS000V0

- When installing rubber parts, final tightening must be carried out under unladen condition\* with tires on ground.  
\*: Fuel, radiator coolant and engine oil full. Spare tire, jack, hand tools and mats in designated positions.
- After installing removed suspension parts, check wheel alignment and adjust if necessary.
- Use flare nut wrench when removing or installing brake tubes.
- Always torque brake lines when installing.

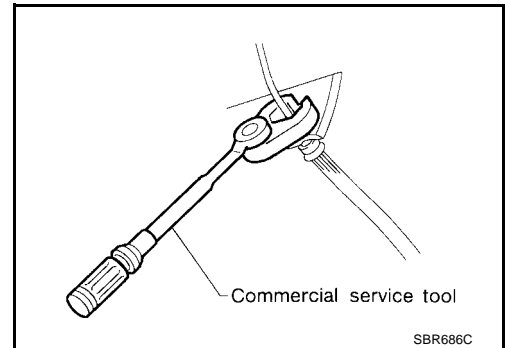

# PREPARATION



## PREPARATION

PFP:00002

### Special Service Tools

EDS000V1



The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

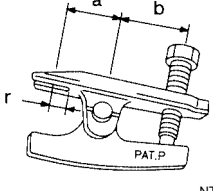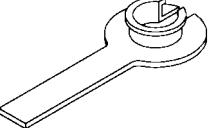Tool number (Kent-Moore No.) Tool name	Description
HT72520000 (J25730-B) Ball joint remover	 Removing tie-rod outer end and lower ball joint <b>a: 33 mm (1.30 in)</b> <b>b: 50 mm (1.97 in)</b> <b>r: R11.5 mm (0.453 in)</b>
KV38106700 (J34296) KV38106800 (J34297) Differential side oil seal protector	 Installing drive shaft LH: KV38106700 (J34296) RH: KV38106800 (J34297)

A  
B  
C  
FAX  
E  
F  
G  
H  
I  
J  
K  
L  
M

### Commercial Service Tools

EDS000V2

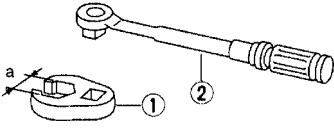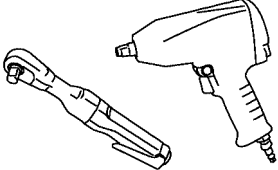Tool name	Description
1. Flare nut crowfoot 2. Torque wrench	 Removing and installing each brake piping <b>a: 10 mm (0.39 in)</b>
Power tool	 Loosening bolts and nuts

# NOISE, VIBRATION, AND HARSHNESS (NVH) TROUBLESHOOTING

## NOISE, VIBRATION, AND HARSHNESS (NVH) TROUBLESHOOTING

PF0:00003

### NVH Troubleshooting Chart

EDS000V3

Use the chart below to help you find the cause of the symptom. If necessary, repair or replace these parts.

Symptom		Possible cause and SUSPECTED PARTS										Reference page						
		Excessive joint angle	Joint sliding resistance	Imbalance	Improper installation, looseness	Parts interference	Wheel bearing damage	DRIVE SHAFT	AXLE	SUSPENSION	TIRES	ROAD WHEEL	BRAKES	STEERING				
Symptom	DRIVE SHAFT	Noise, Vibration	x	x						x	x	x	x	x		—	<a href="#">FAX-15</a>	
		Shake	x		x					x	x	x	x	x				
	AXLE	Noise				x	x		x		x	x	x	x	x			
		Shake				x	x		x		x	x	x	x	x			
		Vibration				x	x		x		x	x						
		Shimmy				x	x				x	x	x	x	x			
		Shudder				x					x	x	x	x	x			
		Poor quality ride or handling				x	x	x				x	x	x				

x: Applicable

# WHEEL HUB AND KNUCKLE

PF:40202

EDS000V4


## WHEEL HUB AND KNUCKLE

### On-Vehicle Service FRONT AXLE AND SUSPENSION

Check front axle and front suspension parts for excessive play, cracks, wear or other damage.

- Shake each front wheel to check for excessive play.
- Make sure that cotter pin is inserted.
- Retighten all axle and suspension nuts and bolts to the specified torque.

**Tightening torque** : Refer to [FSU-5, "Components"](#)

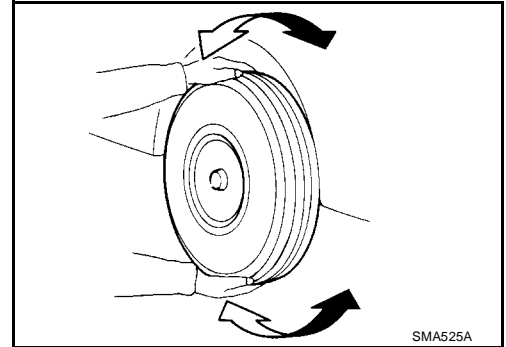


### FRONT WHEEL BEARING

- Check that wheel bearings operate smoothly.
- Check axial end play.

**Axial end play** : 0.07 mm (0.0030 in) or less

If out of specification or wheel bearing does not turn smoothly, replace wheel bearing assembly.

Refer to [FAX-6, "Removal and Installation"](#) .

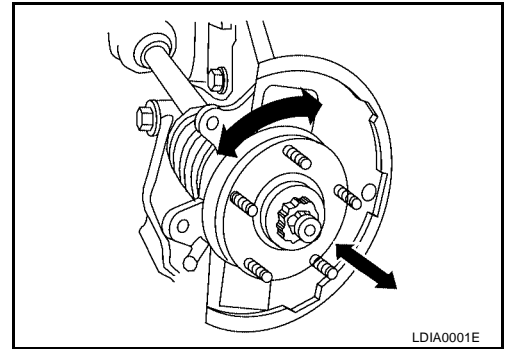


A  
B  
C  
FAX  
E  
F  
G  
H  
I  
J  
K  
L  
M

# WHEEL HUB AND KNUCKLE

EDS000V5

## Removal and Installation

SEC. 400

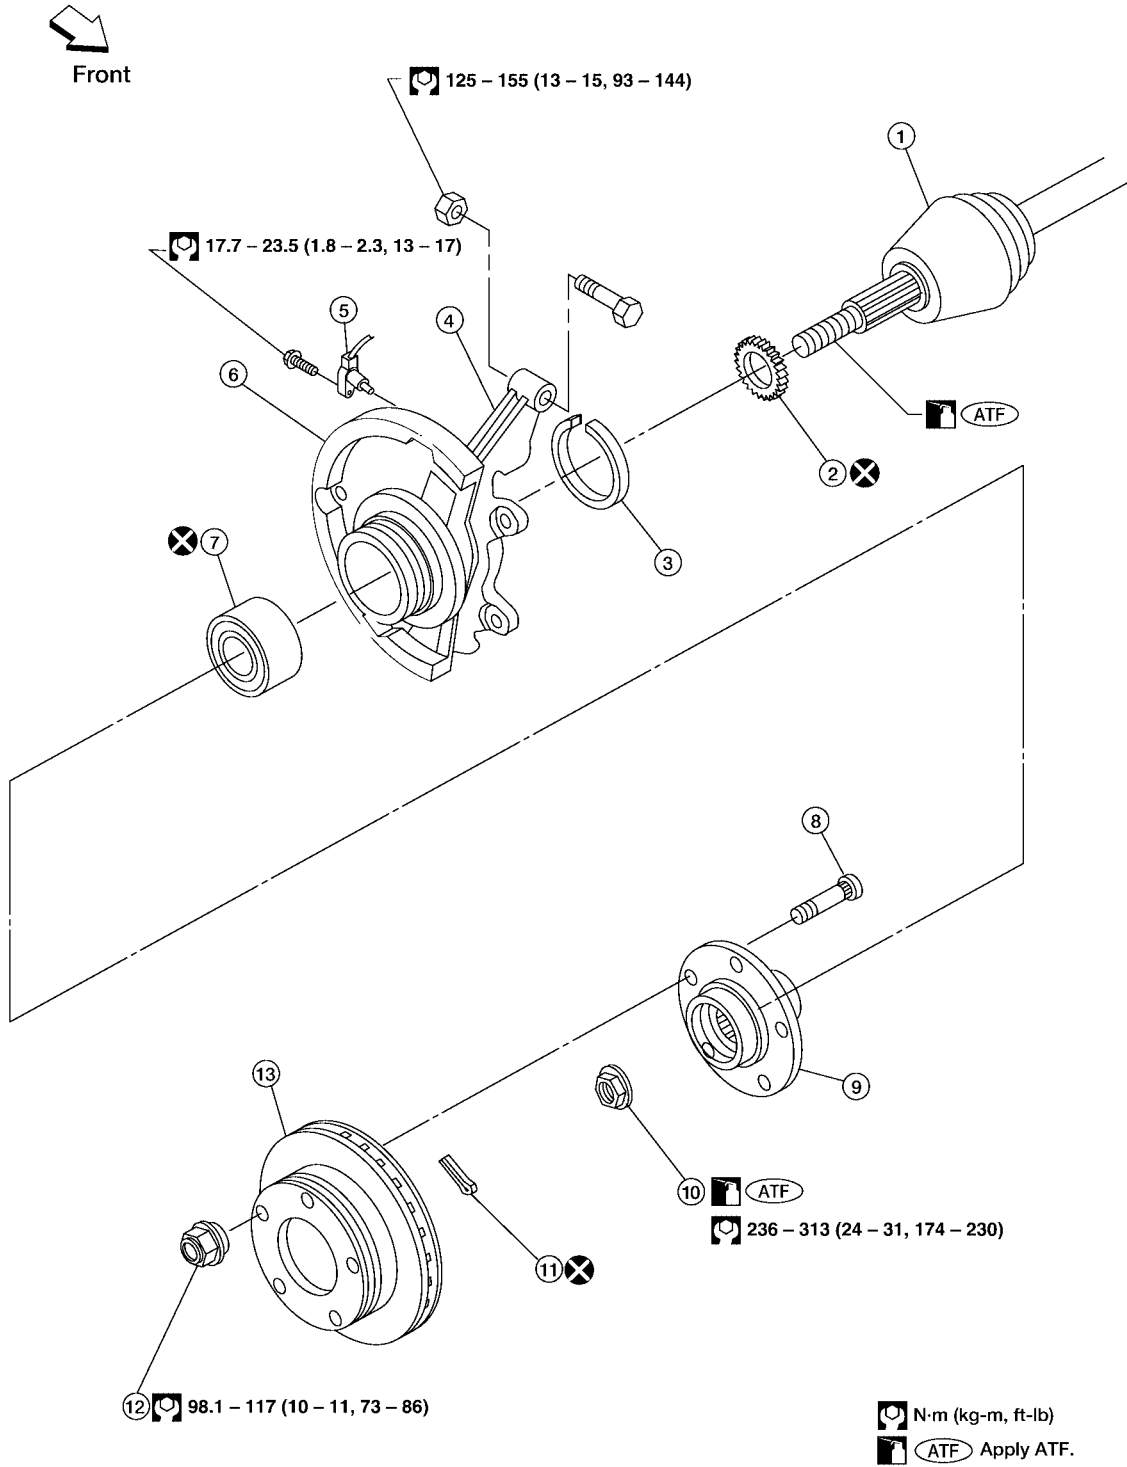

LDIA0002E

- |                            |                 |                 |
|----------------------------|-----------------|-----------------|
| 1. Drive shaft             | 2. Sensor rotor | 3. Snap ring    |
| 4. Knuckle                 | 5. Wheel sensor | 6. Baffle plate |
| 7. Wheel bearing assembly  | 8. Hub bolt     | 9. Wheel hub    |
| 10. Wheel bearing lock nut | 11. Cotter pin  | 12. Wheel nut   |
| 13. Disc rotor             |                 |                 |

# WHEEL HUB AND KNUCKLE

## REMOVAL


1. Remove wheel and tire. Refer to [WT-4, "Removal"](#) .
2. Remove the underbody splash shield.
3. Remove the front ABS sensor. Refer to [BRC-41, "Removal and Installation"](#) .

### CAUTION:

Before removing the front axle assembly, remove the wheel sensor from the assembly. Then move it away from the front axle assembly area.

Failure to do so may result in damage to the sensor wires and the wheel sensor becoming inoperative.


4. Remove wheel bearing lock nut using power tool.
5. Remove brake caliper assembly and rotor using power tool.
  - Brake hose need not be disconnected from brake caliper. In this case, suspend caliper assembly with wire so as not to stretch brake hose. Be careful not to depress brake pedal, or piston will pop out.
  - Make sure brake hose is not twisted.

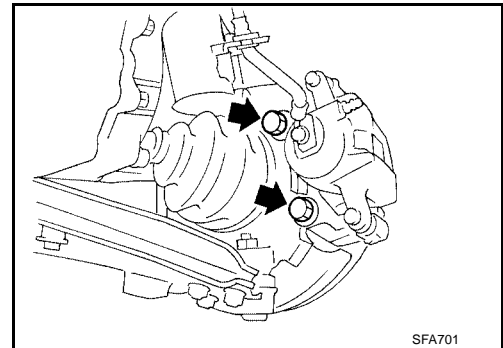

6. Separate tie rod from knuckle using Tool.

### CAUTION:


Install stud nut on stud bolt to prevent damage to stud bolt.

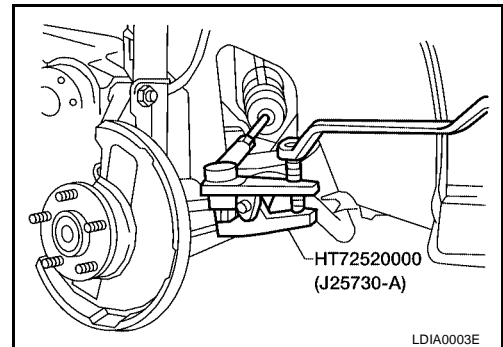


7. Separate drive shaft from knuckle by lightly tapping the end with a suitable hammer and wood block. If it is hard to separate, use a suitable puller.

### CAUTION:

Cover boots with shop towel so as not to damage them when removing drive shaft.

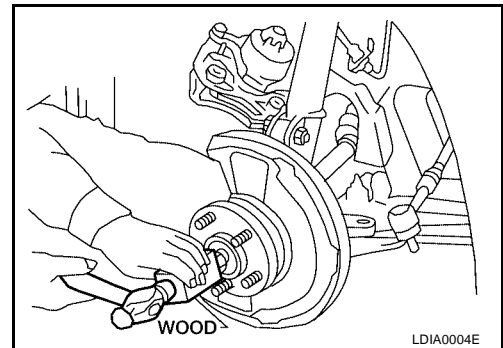


8. Remove lower strut mounting bolts.

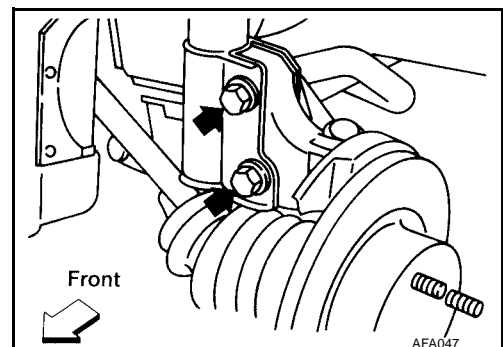

A  
B  
C  
FAX  
E  
F  
G  
H  
I  
J  
K  
L  
M

# WHEEL HUB AND KNUCKLE

9. Loosen lower ball joint tightening nut.
10. Separate knuckle from lower ball joint stud with Tool.
11. Remove knuckle from transverse link.

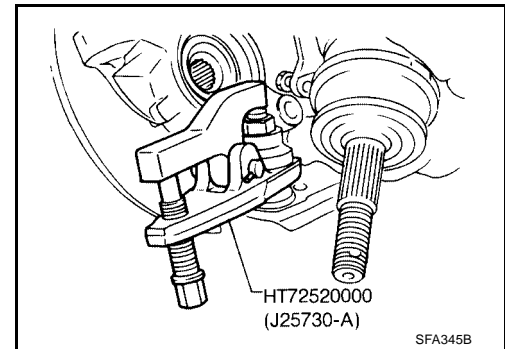

## INSPECTION AFTER REMOVAL

### Wheel Hub

- Check wheel hub for cracks by a magnetic exploration or dying test, and replace if cracked.

### Knuckle

- Check for deformity, cracks (by magnetic exploration or dying test) and damage on steering knuckle, replace if necessary.

### Snap Ring

- Check for wear and damage on snap ring, replace if necessary.

## INSTALLATION

To install, reverse the removal procedure. For tightening torques, refer to [FSU-5, "Components"](#) (front suspension), [PS-17, "Removal and Installation"](#) (steering).


## Disassembly and Assembly

EDS000V6


### DISASSEMBLY

#### CAUTION:

- When removing wheel hub or wheel bearing from knuckle, replace wheel bearing assembly (outer race, inner races and grease seals) with a new one.
  - When replacing wheel bearing, replace complete wheel bearing assembly (inner races and outer race).
1. Press out wheel hub from knuckle with a suitable tool.

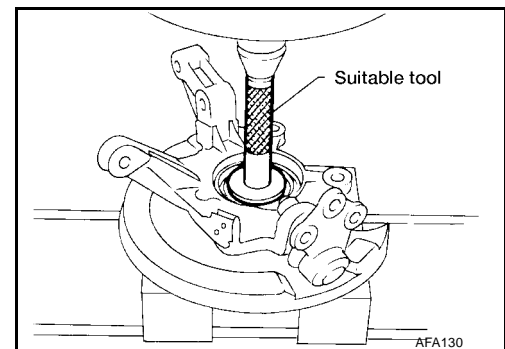


2. Remove snap rings.

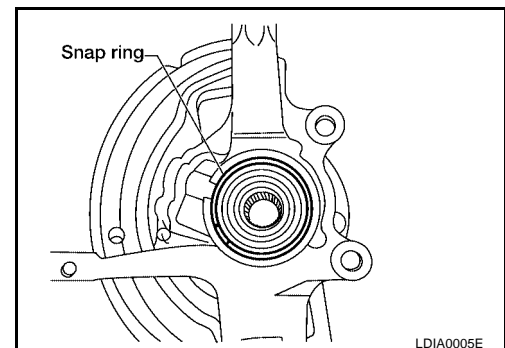



# WHEEL HUB AND KNUCKLE

3. Press out wheel bearing from knuckle.

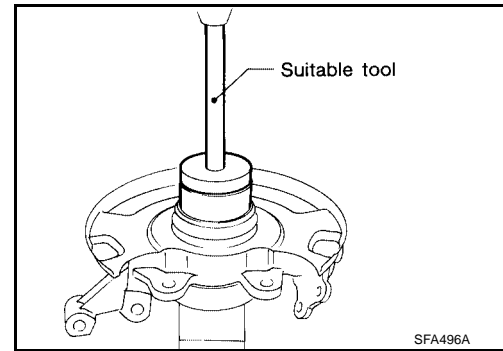

## ASSEMBLY

1. Install inner snap ring into groove of knuckle.
2. Press new wheel bearing assembly into knuckle until it contacts snap ring.

**Maximum load "P" : 50 kN (5.1 ton, 5.6 US ton, 5.02 Imp ton)**



### CAUTION:

- Do not press inner race of wheel bearing assembly.
- Do not apply oil or grease to mating surfaces of wheel bearing outer race and knuckle.

3. Install outer snap ring into groove of knuckle.

4. Press wheel hub into knuckle.


**Maximum load "P" : 50 kN (5.1 ton, 5.6 US ton, 5.02 Imp ton)**

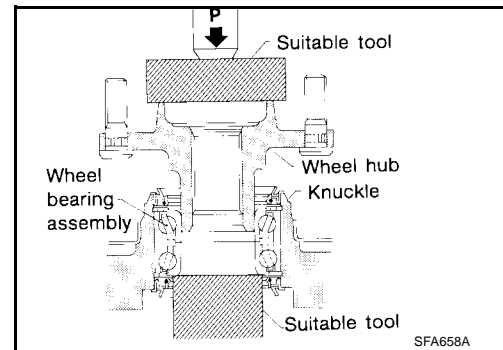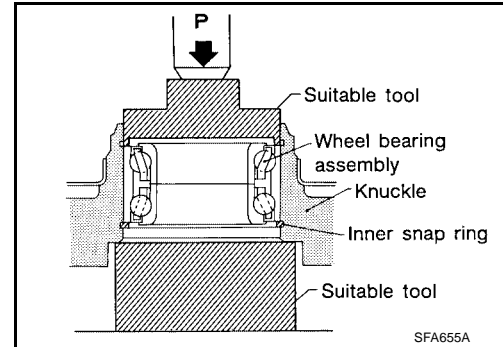

5. Check bearing operation.

- a. Add load "P" with press.

**Load "P" : 35-50 kN (3.6 - 5.1 ton, 3.9 - 5.6 US ton, 3.51 - 5.02 Imp ton)**

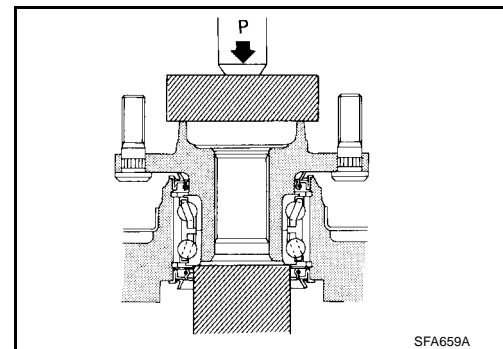


A  
B  
C  
FAX

E  
F  
G  
H  
I  
J  
K  
L  
M

## WHEEL HUB AND KNUCKLE

- b. Spin knuckle several turns in both directions.
- c. Make sure that wheel bearings operate smoothly.

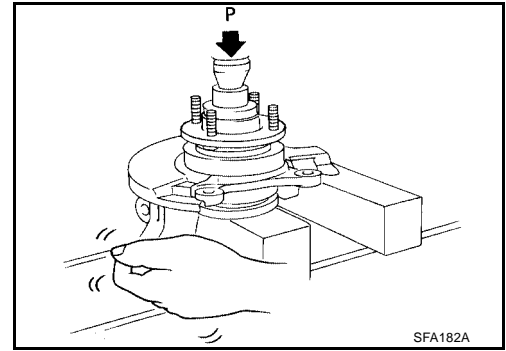

# FRONT DRIVE SHAFT

## FRONT DRIVE SHAFT Removal and Installation

PFP:39100

EDS000V7

A

B

C

FAX

E

F

G

H


I

J

K

L

M

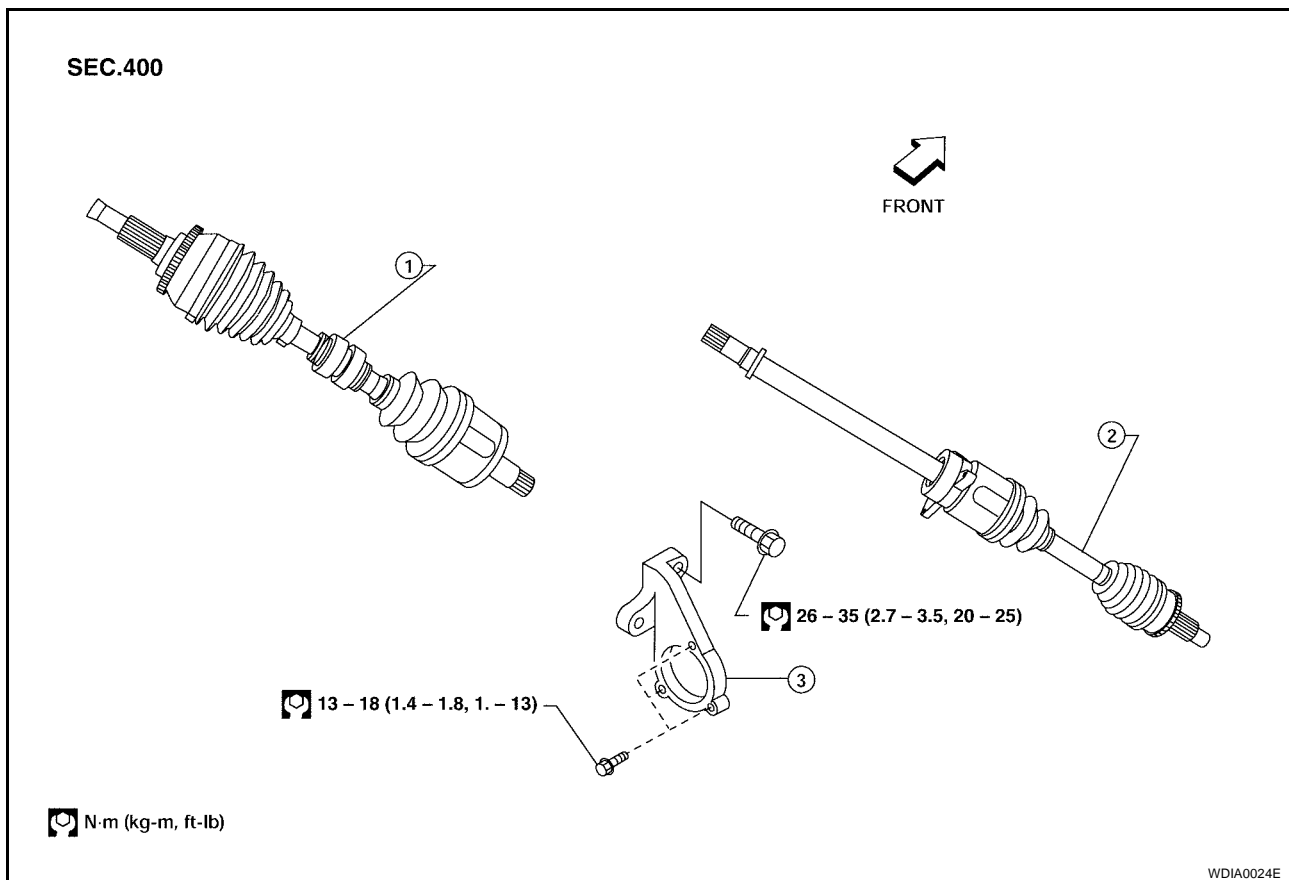

1. LH drive shaft

2. RH drive shaft

3. Center support bracket

### CAUTION:

- Circular clips should be properly meshed with the differential side gear (transaxle side). Check that the circular clips are properly seated after installation and that the drive shaft will not come out. Always use a new circular clip for installation.
- Use a suitable cloth or protector over the boots to prevent damage to the boots during removal and installation.

### REMOVAL

1. Remove the wheel and tire. Refer to [WT-4, "Removal"](#).
2. Remove the cotter pin, and the wheel bearing lock nut using power tool.

#### CAUTION:

- Do not twist or stretch the brake hose when removing components.
- Discard the cotter pin and use a new cotter pin for installation.

#### NOTE:

The brake caliper does not need to be disconnected.

3. Remove the underbody splash shield.
4. Remove the lower ball joint cotter pin and nut using power tool.

#### CAUTION:


Discard the cotter pin and use a new cotter pin for installation.

## FRONT DRIVE SHAFT

5. Disconnect the lower ball joint from the steering knuckle using Tool as shown.

**CAUTION:**

Discard the cotter pin and use a new cotter pin for installation.

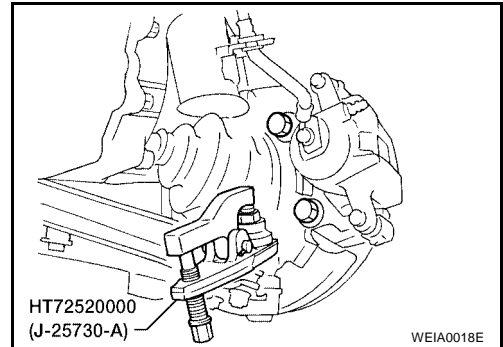


6. Disconnect the connecting rod from the front strut. Refer to [FSU-11, "Removal and Installation"](#).


7. Separate drive shafts from the knuckles by lightly tapping the end with a hammer and a wood block. If it is hard to separate, use a suitable puller.

**CAUTION:**

Cover boots with shop towel so as not to damage them when removing drive shaft.

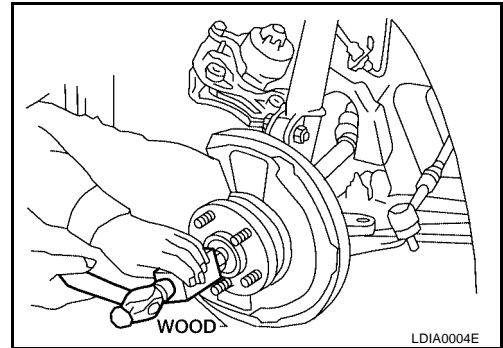

8. Remove the center support bearing bolts using power tool, and pry the right side drive shaft out of the transaxle.

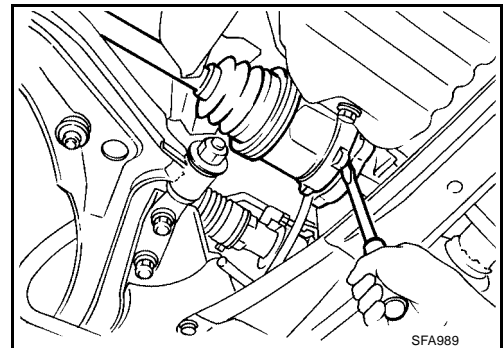


9. Disconnect the left side drive shaft from the transaxle.

**CAUTION:**


Be careful not to damage pinion mate shaft and side gear.

# FRONT DRIVE SHAFT

- For A/T models
  - Insert screwdriver into transaxle opening for right drive shaft and strike with a hammer.

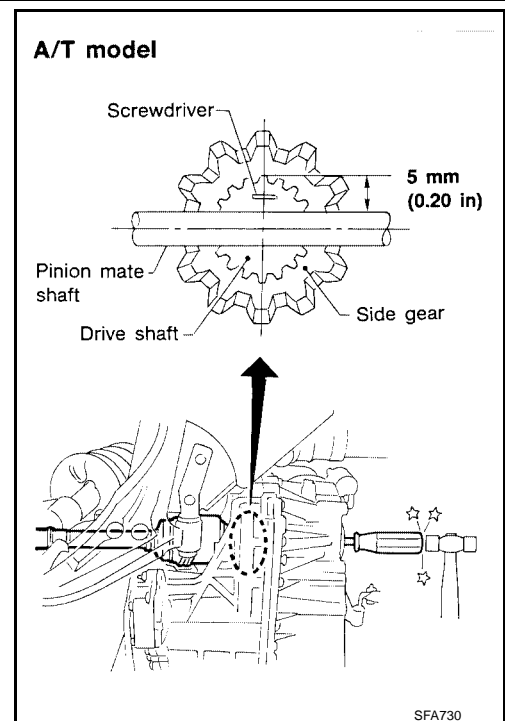

- For M/T models
  - Pry off the drive shaft from the transaxle as shown.

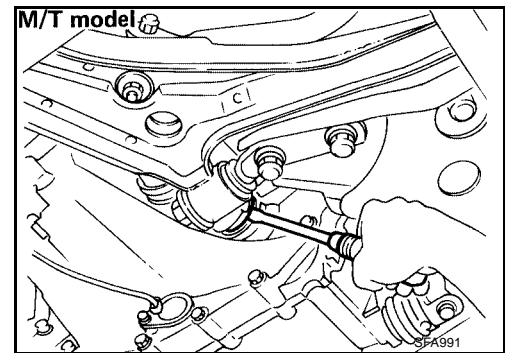


10. Remove the circular clip from the transaxle side of the drive shaft and discard.

**CAUTION:**  
Always use a new circular clip for installation.

## INSPECTION AFTER REMOVAL

- Check for halting movement or a noticeable rattle by moving a joint part vertically, horizontally and to axial direction.
- Check for crack damage and grease leak of boot.

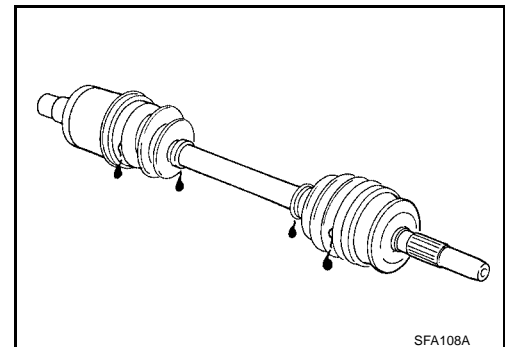


## INSTALLATION

### Transaxle Side


1. Drive a new oil seal into transaxle case. Refer to [MT-13, "SIDE OIL SEAL"](#).

## FRONT DRIVE SHAFT

- Set Tool along the inner circumference of oil seal.

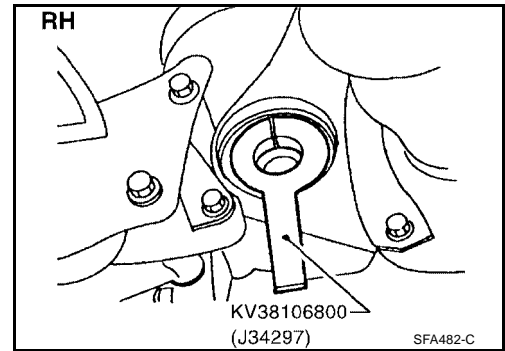

- Install a new circular clip on the drive shaft.  
**CAUTION:**  
**Always use a new circular clip for installation.**
- Insert drive shaft into transaxle. Be sure to properly align the serrations and then withdraw Tool.
- Push drive shaft, then press-fit the circular clip on the drive shaft into circular clip groove of side gear.
- After its insertion, try to pull the flange out of the slide joint by hand. If it pulls out, the circular clip is not properly meshed with the side gear.
- Install the remaining components in the reverse order of removal.

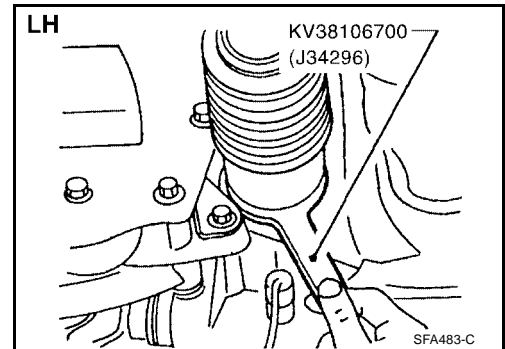

### Wheel Side



- Install the drive shaft into the knuckle.
- Install the wheel bearing lock nut and tighten to specification. Refer to [FAX-6, "Removal and Installation"](#).
- Install a new cotter pin to secure the wheel bearing lock nut.  
**CAUTION:**  
**Always use a new cotter pin for installation.**
- Install the remaining components in the reverse order of removal.

# FRONT DRIVE SHAFT

EDS000V8

## Disassembly and Assembly

SEC. 400

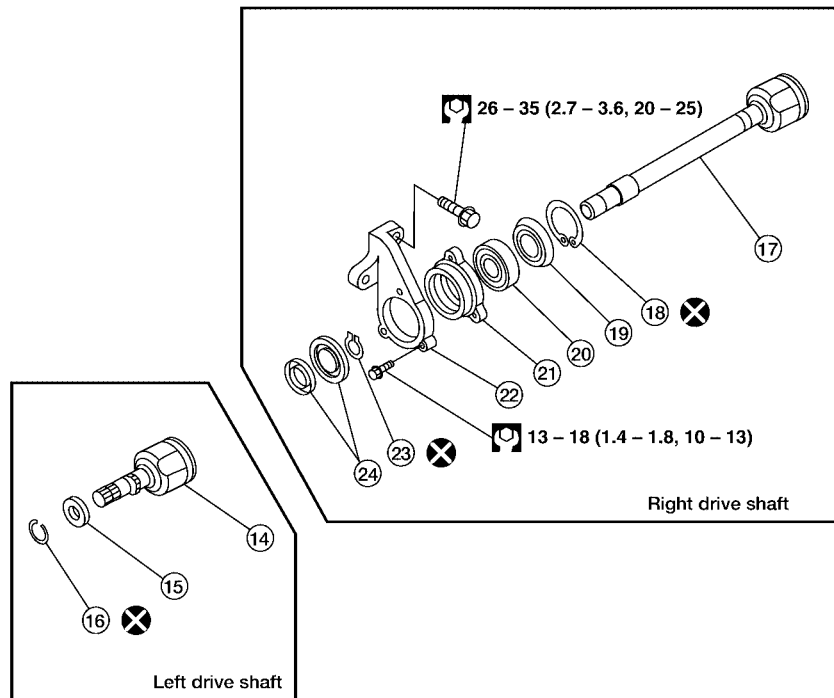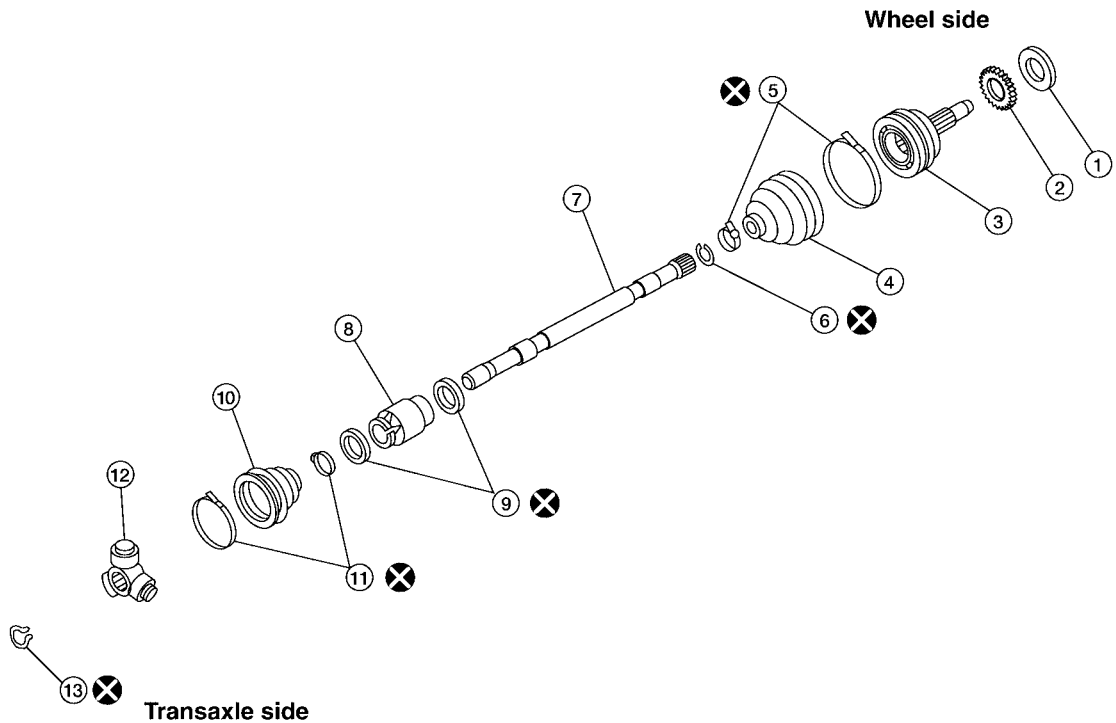

: N·m (kg·m, ft·lb)

: Always replace after every disassembly

- |                   |  |                        |
|-------------------|--|------------------------|
| 1. Dust shield    | 2. Sensor rotor                              | 3. Joint assembly      |
| 4. Boot           | 5. Boot band                                 | 6. Circular clip       |
| 7. Drive shaft    | 8. Dynamic damper                            | 9. Dynamic damper band |
| 10. Boot          | 11. Boot band                                | 12. Spider assembly    |
| 13. Snap ring     | 14. Slide joint housing                      | 15. Dust shield        |
| 16. Circular clip | 17. Slide joint housing with extension shaft | 18. Snap ring          |

WDIA0025E


# FRONT DRIVE SHAFT

- |                            |                            |                                     |
|----------------------------|----------------------------|-------------------------------------|
| 19. Dust shield            | 20. Center support bearing | 21. Center support bearing retainer |
| 22. Center support bracket | 23. Snap ring              | 24. Dust shield                     |

## DISASSEMBLY

### Transaxle Side


1. Remove boot bands.
2. Put matching marks on slide joint housing and drive shaft, before separating the slide joint assembly.
3. Put matching marks on the spider assembly and drive shaft.

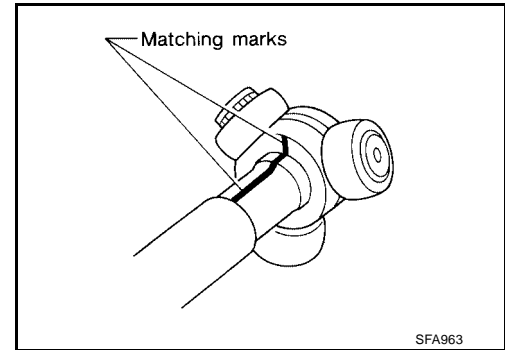

4. Remove the snap ring, then remove the spider assembly.
5. Remove the boot.

### **CAUTION:**

**Cover the drive shaft serrations with tape so as not to damage the boot.**

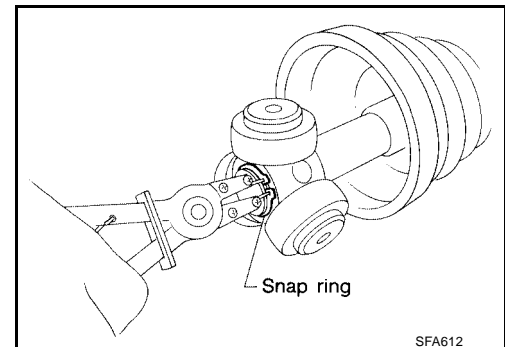

### Wheel Side

### **CAUTION:**


**The joint on the wheel side cannot be disassembled.**

1. Before separating joint assembly from the drive shaft, put matching marks on drive shaft and joint assembly.
2. Separate joint assembly from the drive shaft with a suitable tool.

### **CAUTION:**

**Do not damage the threads on the drive shaft when separating the joint.**

3. Remove boot bands.
4. Remove the boot.

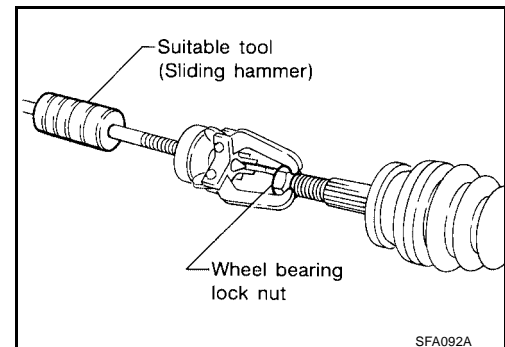





# FRONT DRIVE SHAFT

## Support Bearing


1. Remove dust shield.

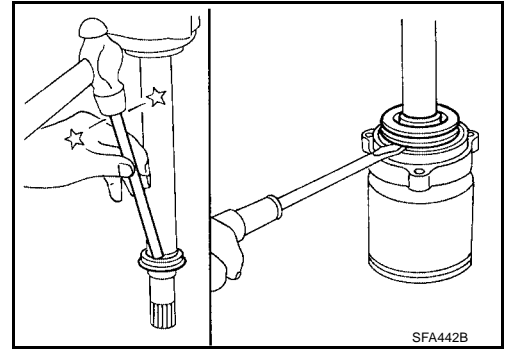


2. Remove snap ring.

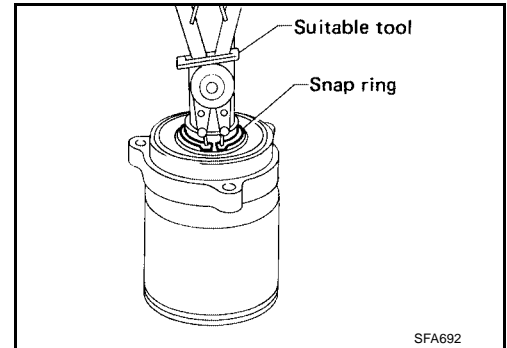

3. Press support bearing assembly off drive shaft.

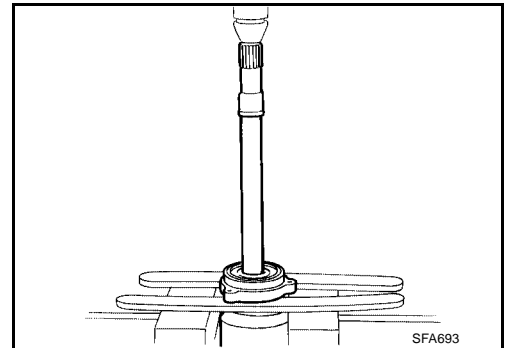

4. Separate support bearing from retainer.

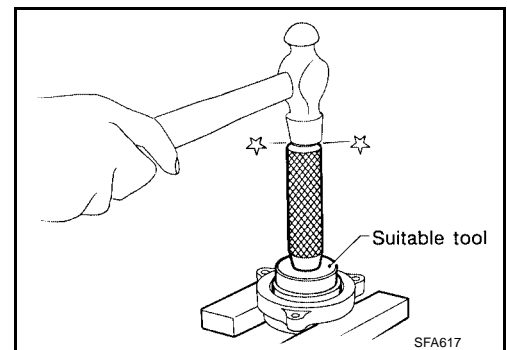

## INSPECTION AFTER DISASSEMBLY

Thoroughly clean all parts in cleaning solvent, and dry with compressed air. Check parts for evidence of deformation or other damage. Replace as necessary.

### Shaft

Replace drive shaft if it is twisted or cracked.

### Joint Assembly (Transaxle Side)

- Check serration for deformation. Replace if necessary.
- Check slide joint housing and spider assembly for any damage. Replace if necessary.

# FRONT DRIVE SHAFT

## **CAUTION:**

The slide joint housing and spider assembly must be replaced as a set, even if only one component is damaged then both must be replaced.

## **Joint Assembly (Wheel Side)**

Replace joint assembly if it is deformed or damaged.

## **Housing (Slide Joint)**

- Check for damage or abnormal wear on ball rolling surface.
- Check for wear on shaft bolts.
- Check for deformity on boot install part.

## **Support Bearing**

Make sure wheel bearing rolls freely and is free from noise, cracks, pitting or wear.

## **ASSEMBLY**

### **CAUTION:**


- After drive shaft has been assembled, ensure that it moves smoothly over its entire range without binding.
- Use Genuine NISSAN Grease or equivalent after every overhaul.

## **Transaxle Side**

1. Install boot and new small boot band on drive shaft.

### **CAUTION:**

Cover drive shaft serration with tape so as not to damage boot during installation.

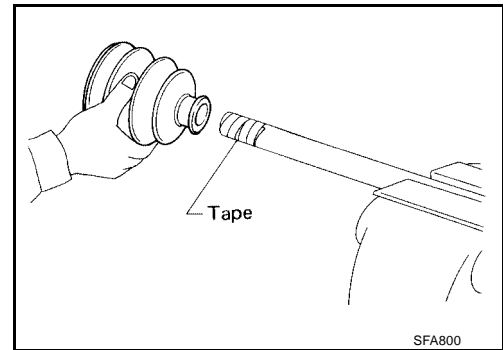


2. Install the spider assembly securely, making sure the marks which were made during disassembly are properly aligned.
3. Install a new snap ring.
4. Pack the drive shaft joint with the specified amount of grease.

### **Drive shaft joint grease capacity**

**M/T : 245 - 255 g (8.64 - 8.99 oz)**

**A/T : 134 - 144 g (4.73 - 5.08 oz)**


5. Install the slide joint housing.

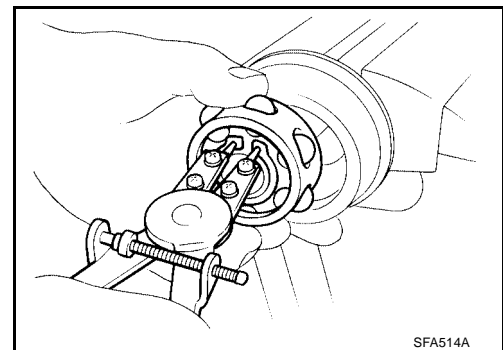

6. Make sure that the boot is properly installed on the drive shaft groove.


- Set the boot so that it does not swell and deform when its length is "L2".

**Length "L2" : 164.7 - 172.7 mm (6.48 - 6.80 in)**

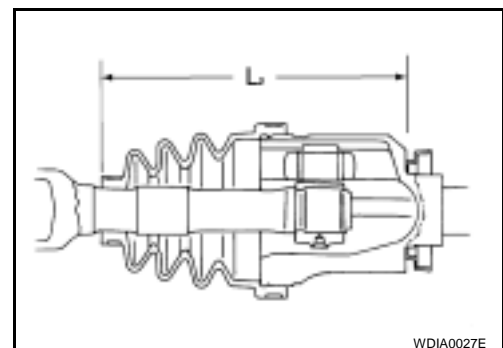

# FRONT DRIVE SHAFT

- Lock the new larger and smaller boot bands securely with a suitable tool.

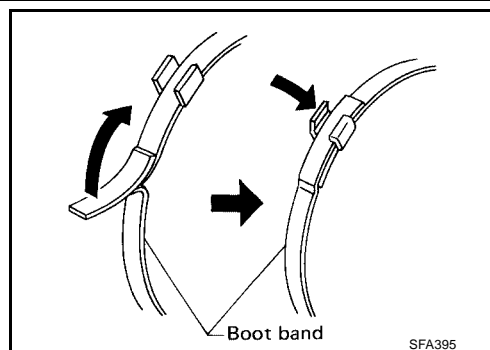

## Wheel Side

- Press on the ABS sensor rotor to the joint sub-assembly using a suitable drift.


**CAUTION:**

**Always use new ABS sensor rotor.**

- Install boot and new small boot band on drive shaft.

**CAUTION:**

**Cover drive shaft serration with tape so as not to damage boot during installation.**

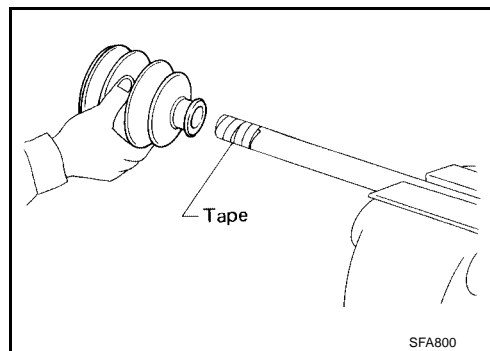


- Set joint assembly onto drive shaft by lightly tapping it as shown.

**NOTE:**

Install joint assembly securely, ensuring marks which were made during disassembly are properly aligned.

- Pack drive shaft joint with the specified amount of grease.


**Joint grease capacity : 100 - 110 g (3.53 - 3.88 oz)**

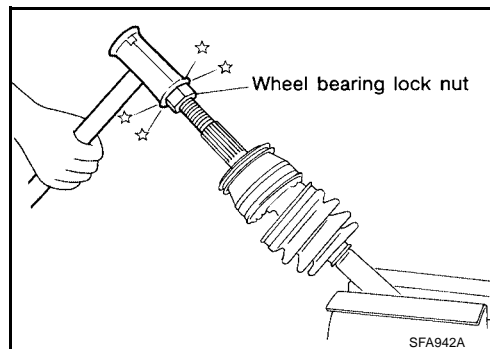

- Make sure that boot is properly installed on the drive shaft groove.

- Set the boot so that it does not swell and deform when the length is "L1".


**Length "L1" : 163 mm (6.42 in)**

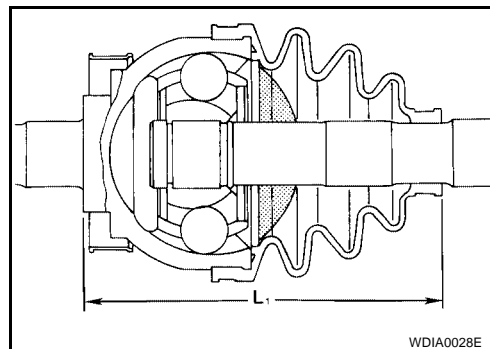

A  
B  
C  
FAX  
E  
F  
G  
H  
I  
J  
K  
L  
M

# FRONT DRIVE SHAFT

6. Lock the new larger and smaller boot bands securely with a suitable tool.

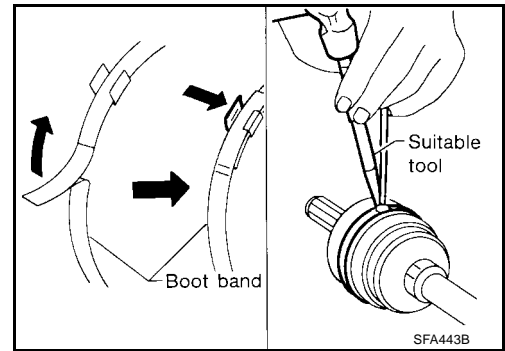


## Dynamic Damper

1. Use new damper bands when installing.
2. Install dynamic damper from stationary-joint side while holding it securely.


**Length "A" : 205 - 215 mm (8.07 - 8.46 in)**

**Length "B" : 50 mm (1.97 in)**

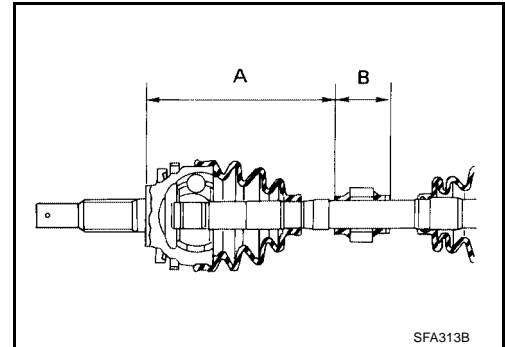


## Support Bearing

1. Press bearing into retainer.

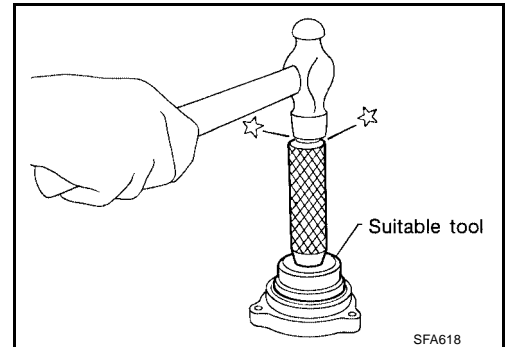

2. Press drive shaft into bearing.

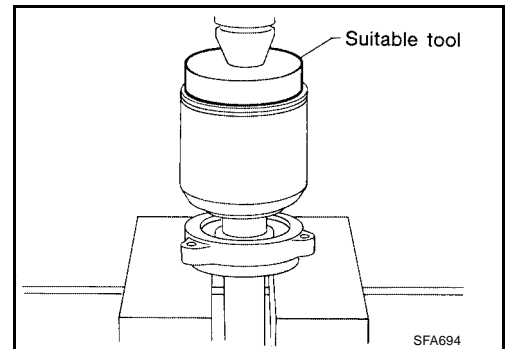

# SERVICE DATA AND SPECIFICATIONS (SDS)


## SERVICE DATA AND SPECIFICATIONS (SDS)

PF0:00030

### Drive Shaft


EDS000V9

Transaxle side

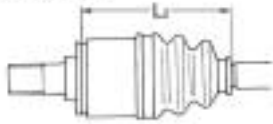

WDIA0029E

Wheel side

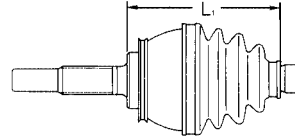

WDIA0030E

A  
B  
C  
FAX  
E  
F  
G  
H  
I  
J  
K  
L  
M

Grease capacity	Specification		NISSAN Genuine Grease or equivalent
	Transaxle side	A/T	134 - 144 g (4.73 - 5.08 oz)
		M/T	245 - 255 g (8.64 - 8.99 oz)
	Wheel side		100 - 110 g (3.53 - 3.88 oz)
Boot length	Transaxle side "L2 "		164.7 - 172.7 mm (6.48 - 6.80 in)
	Wheel side "L1 "		163 mm (6.42 in)

### Wheel Bearing (Front)

EDS000VA

Wheel bearing axial end play limit	0.07 mm (0.003 in) or less
Wheel bearing lock nut tightening torque	236 - 313 N·m (24 - 31 kg·m, 174 - 230 ft·lb)

# SERVICE DATA AND SPECIFICATIONS (SDS)

---