

A
B
AT
D
E
F
G
H
I
J
K
L
M

SECTION **AT**

AUTOMATIC TRANSMISSION

CONTENTS

INDEX FOR DTC	5	Accurate Repair	42
Alphabetical Index	5	A/T Electrical Parts Location	47
DTC No. Index	6	Circuit Diagram	48
PRECAUTIONS	7	Wiring Diagram — AT —	49
Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	7	Inspections Before Trouble Diagnosis	56
Precautions for Battery Service	7	Check Before Engine is Started	60
Precautions for On Board Diagnostic (OBD) System of A/T and Engine	7	Check at Idle	60
Precautions	8	Cruise Test - Part 1	62
Service Notice or Precautions	9	Cruise Test - Part 2	64
Wiring Diagrams and Trouble Diagnosis	9	Cruise Test - Part 3	65
PREPARATION	10	Vehicle Speed When Shifting Gears	66
Special Service Tools	10	Vehicle Speed When Performing and Releasing Complete Lock-up	66
Commercial Service Tools	11	Vehicle Speed When Performing and Releasing Slip Lock-up	66
A/T FLUID	12	Symptom Chart	67
Changing A/T Fluid	12	TCM Input/Output Signal Reference Values	91
Checking ATF	12	CONSULT-II	92
A/T CONTROL SYSTEM	14	Diagnostic Procedure Without CONSULT-II	103
Cross-Sectional View	14	DTC U1000 CAN COMMUNICATION LINE	105
Shift Mechanism	15	Description	105
TCM Function	26	On Board Diagnosis Logic	105
CAN Communication	27	Possible Cause	105
Input/Output Signal of TCM	29	DTC Confirmation Procedure	105
Line Pressure Control	30	Diagnostic Procedure	106
Shift Control	31	DTC P0615 START SIGNAL CIRCUIT	107
Lock-Up Control	32	Description	107
Engine Brake Control	33	On Board Diagnosis Logic	107
Control Valve	34	Possible Cause	107
ON BOARD DIAGNOSTIC (OBD) SYSTEM	36	DTC Confirmation Procedure	107
Introduction	36	Diagnostic Procedure	108
OBD-II Function for A/T System	36	DTC P0705 PARK/NEUTRAL POSITION SWITCH	110
One or Two Trip Detection Logic of OBD-II	36	Description	110
OBD-II Diagnostic Trouble Code (DTC)	36	CONSULT-II Reference Value	110
Malfunction Indicator Lamp (MIL)	39	On Board Diagnosis Logic	110
TROUBLE DIAGNOSIS	40	Possible Cause	110
DTC Inspection Priority Chart	40	DTC Confirmation Procedure	110
Fail-Safe	40	Diagnostic Procedure	111
How To Perform Trouble Diagnosis For Quick and		DTC P0720 VEHICLE SPEED SENSOR A/T (REVOLUTION SENSOR)	112

Description	112	On Board Diagnosis Logic	127
CONSULT-II Reference Value	112	Possible Cause	127
On Board Diagnosis Logic	112	DTC Confirmation Procedure	127
Possible Cause	112	Diagnostic Procedure	127
DTC Confirmation Procedure	112	DTC P1705 THROTTLE POSITION SENSOR	128
Diagnostic Procedure	113	Description	128
DTC P0725 ENGINE SPEED SIGNAL	114	On Board Diagnosis Logic	128
Description	114	Possible Cause	128
CONSULT-II Reference Value	114	DTC Confirmation Procedure	128
On Board Diagnosis Logic	114	Diagnostic Procedure	128
Possible Cause	114	DTC P1710 A/T FLUID TEMPERATURE SENSOR	
DTC Confirmation Procedure	114	CIRCUIT	130
Diagnostic Procedure	114	Description	130
DTC P0740 TORQUE CONVERTER CLUTCH		CONSULT-II Reference Value	130
SOLENOID VALVE	116	On Board Diagnosis Logic	130
Description	116	Possible Cause	130
CONSULT-II Reference Value	116	DTC Confirmation Procedure	130
On Board Diagnosis Logic	116	Diagnostic Procedure	131
Possible Cause	116	DTC P1716 TURBINE REVOLUTION SENSOR ...	132
DTC Confirmation Procedure	116	Description	132
Diagnostic Procedure	117	CONSULT-II Reference Value	132
DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP).	118	On Board Diagnosis Logic	132
Description	118	Possible Cause	132
CONSULT-II Reference Value	118	DTC Confirmation Procedure	132
On Board Diagnosis Logic	118	Diagnostic Procedure	133
Possible Cause	118	DTC P1721 VEHICLE SPEED SENSOR MTR	134
DTC Confirmation Procedure	118	Description	134
Diagnostic Procedure	119	CONSULT-II Reference Value	134
DTC P0745 LINE PRESSURE SOLENOID VALVE	120	On Board Diagnosis Logic	134
Description	120	Possible Cause	134
CONSULT-II Reference Value	120	DTC Confirmation Procedure	134
On Board Diagnosis Logic	120	Diagnostic Procedure	134
Possible Cause	120	DTC P1730 A/T INTERLOCK	136
DTC Confirmation Procedure	120	Description	136
Diagnostic Procedure	121	On Board Diagnosis Logic	136
DTC P1701 TRANSMISSION CONTROL MODULE		Possible Cause	136
(POWER SUPPLY)	122	DTC Confirmation Procedure	136
Description	122	Judgement of A/T Interlock	137
On Board Diagnosis Logic	122	Diagnostic Procedure	137
Possible Cause	122	DTC P1731 A/T 1ST ENGINE BRAKING	139
DTC Confirmation Procedure	122	Description	139
Diagnostic Procedure	123	CONSULT-II Reference Value	139
DTC P1702 TRANSMISSION CONTROL MODULE		On Board Diagnosis Logic	139
(RAM)	125	Possible Cause	139
Description	125	DTC Confirmation Procedure	139
On Board Diagnosis Logic	125	Diagnostic Procedure	140
Possible Cause	125	DTC P1752 INPUT CLUTCH SOLENOID VALVE .	141
DTC Confirmation Procedure	125	Description	141
Diagnostic Procedure	125	CONSULT-II Reference Value	141
DTC P1703 TRANSMISSION CONTROL MODULE		On Board Diagnosis Logic	141
(ROM)	126	Possible Cause	141
Description	126	DTC Confirmation Procedure	141
On Board Diagnosis Logic	126	Diagnostic Procedure	142
Possible Cause	126	DTC P1754 INPUT CLUTCH SOLENOID VALVE	
DTC Confirmation Procedure	126	FUNCTION	143
Diagnostic Procedure	126	Description	143
DTC P1704 TRANSMISSION CONTROL MODULE		CONSULT-II Reference Value	143
(EEPROM)	127	On Board Diagnosis Logic	143
Description	127	Possible Cause	143

DTC Confirmation Procedure	143	CONSULT-II Reference Value	159
Diagnostic Procedure	144	On Board Diagnosis Logic	159
DTC P1757 FRONT BRAKE SOLENOID VALVE . 145		Possible Cause	159
Description	145	DTC Confirmation Procedure	159
CONSULT-II Reference Value	145	Diagnostic Procedure	160
On Board Diagnosis Logic	145	DTC P1815 MANUAL MODE SWITCH 161	
Possible Cause	145	Description	161
DTC Confirmation Procedure	145	CONSULT-II Reference Value in Data Monitor Mode	
Diagnostic Procedure	146		161
DTC P1759 FRONT BRAKE SOLENOID VALVE		On Board Diagnosis Logic	161
FUNCTION 147		Possible Cause	161
Description	147	DTC Confirmation Procedure	161
CONSULT-II Reference Value	147	Diagnostic Procedure	161
On Board Diagnosis Logic	147	Component Inspection	163
Possible Cause	147	Position Indicator Lamp	163
DTC Confirmation Procedure	147	DTC P1841 ATF PRESSURE SWITCH 1 164	
Diagnostic Procedure	148	Description	164
DTC P1762 DIRECT CLUTCH SOLENOID VALVE 149		CONSULT-II Reference Value	164
Description	149	On Board Diagnosis Logic	164
CONSULT-II Reference Value	149	Possible Cause	164
On Board Diagnosis Logic	149	DTC Confirmation Procedure	164
Possible Cause	149	Diagnostic Procedure	165
DTC Confirmation Procedure	149	DTC P1843 ATF PRESSURE SWITCH 3 166	
Diagnostic Procedure	150	Description	166
DTC P1764 DIRECT CLUTCH SOLENOID VALVE		CONSULT-II Reference Value	166
FUNCTION 151		On Board Diagnosis Logic	166
Description	151	Possible Cause	166
CONSULT-II Reference Value	151	DTC Confirmation Procedure	166
On Board Diagnosis Logic	151	Diagnostic Procedure	167
Possible Cause	151	DTC P1845 ATF PRESSURE SWITCH 5 168	
DTC Confirmation Procedure	151	Description	168
Diagnostic Procedure	152	CONSULT-II Reference Value	168
DTC P1767 HIGH AND LOW REVERSE CLUTCH		On Board Diagnosis Logic	168
SOLENOID VALVE 153		Possible Cause	168
Description	153	DTC Confirmation Procedure	168
CONSULT-II Reference Value	153	Diagnostic Procedure	169
On Board Diagnosis Logic	153	DTC P1846 ATF PRESSURE SWITCH 6 170	
Possible Cause	153	Description	170
DTC Confirmation Procedure	153	CONSULT-II Reference Value	170
Diagnostic Procedure	154	On Board Diagnosis Logic	170
DTC P1769 HIGH AND LOW REVERSE CLUTCH		Possible Cause	170
SOLENOID VALVE FUNCTION 155		DTC Confirmation Procedure	170
Description	155	Diagnostic Procedure	171
CONSULT-II Reference Value	155	CLOSED THROTTLE POSITION AND WIDE OPEN	
On Board Diagnosis Logic	155	THROTTLE POSITION CIRCUIT 172	
Possible Cause	155	Diagnostic Procedure	172
DTC Confirmation Procedure	155	BRAKE SIGNAL CIRCUIT 173	
Diagnostic Procedure	156	Diagnostic Procedure	173
DTC P1772 LOW COAST BRAKE SOLENOID		TROUBLE DIAGNOSIS FOR SYMPTOMS 174	
VALVE 157		A/T Check Indicator Lamp Does Not Come On ...	174
Description	157	Engine Cannot Be Started In "P" or "N" Position .	174
CONSULT-II Reference Value	157	In "P" Position, Vehicle Moves When Pushed	175
On Board Diagnosis Logic	157	In "N" Position, Vehicle Moves	176
Possible Cause	157	Large Shock ("N" to "D" Position)	177
DTC Confirmation Procedure	157	Vehicle Does Not Creep Backward In "R" Position	180
Diagnostic Procedure	158	Vehicle Does Not Creep Forward In "D" Position .	183
DTC P1774 LOW COAST BRAKE SOLENOID		Vehicle Cannot Be Started From D1	185
VALVE FUNCTION 159		A/T Does Not Shift: D1 → D2	188
Description	159	A/T Does Not Shift: D2 → D3	190

A
B
AT
D
E
F
G
H
I
J
K
L
M

A/T Does Not Shift: D3 → D4	193	OVERHAUL	253
A/T Does Not Shift: D4 → D5	195	Components	253
A/T Does Not Perform Lock-up	198	Oil Channel	261
A/T Does Not Hold Lock-up Condition	200	Locations of Adjusting Shims, Needle Bearings, Thrust Washers and Snap Rings	262
Lock-up Is Not Released	201	DISASSEMBLY	263
Engine Speed Does Not Return To Idle	202	Disassembly	263
Cannot Be Changed to Manual Mode	203	REPAIR FOR COMPONENT PARTS	278
A/T Does Not Shift: 5th gear → 4th gear	204	Oil Pump	278
A/T Does Not Shift: 4th gear → 3rd gear	206	Front Sun Gear, 3rd One-Way Clutch	281
A/T Does Not Shift: 3rd gear → 2nd gear	208	Front Carrier, Input Clutch, Rear Internal Gear	283
A/T Does Not Shift: 2nd gear → 1st gear	210	Mid Sun Gear, Rear Sun Gear, High and Low Reverse Clutch Hub	288
Vehicle Does Not Decelerate By Engine Brake ...	212	High and Low Reverse Clutch	293
SHIFT CONTROL SYSTEM	214	Direct Clutch	295
Control Device Removal and Installation	214	ASSEMBLY	297
Adjustment of A/T Position	215	Assembly (1)	297
Checking of A/T Position	215	Adjustment	307
A/T SHIFT LOCK SYSTEM	217	Assembly (2)	310
Description	217	SERVICE DATA AND SPECIFICATIONS (SDS) ...	317
Shift Lock System Electrical Parts Location	217	General Specifications	317
Wiring Diagram — AT — SHIFT	218	Vehicle Speed When Shifting Gears	317
Diagnostic Procedure	219	Vehicle Speed When Performing and Releasing Complete Lock-up	317
KEY INTERLOCK CABLE	221	Vehicle Speed When Performing and Releasing Slip Lock-up	317
Components	221	Stall Speed	317
Removal	222	Line Pressure	318
Installation	223	A/T Fluid Temperature Sensor	318
ON-VEHICLE SERVICE	224	Turbine Revolution Sensor	318
Control Valve with TCM and A/T Fluid Temperature Sensor 2	224	Vehicle Speed Sensor A/T (Revolution Sensor) ..	318
Parking Components	236	Reverse Brake	318
Rear Oil Seal	243	Total End Play	318
Revolution Sensor	244		
AIR BREATHER HOSE	249		
Removal and Installation	249		
TRANSMISSION ASSEMBLY	250		
Removal and Installation	250		

INDEX FOR DTC

INDEX FOR DTC

PPF:00024

Alphabetical Index

ACS000GR

NOTE:

If DTC U1000 is displayed with other DTC, first perform the trouble diagnosis for DTC U1000. Refer to [AT-105](#).

Items (CONSULT-II screen terms)	DTC		Reference page
	OBD-II	Except OBD-II	
	CONSULT-II GST*1	CONSULT-II only "A/T"	
A/T 1ST E/BRAKING	—	P1731	AT-139
ATF PRES SW 1/CIRC	—	P1841	AT-164
ATF PRES SW 3/CIRC	—	P1843	AT-166
ATF PRES SW 5/CIRC	—	P1845	AT-168
ATF PRES SW 6/CIRC	—	P1846	AT-170
A/T INTERLOCK	P1730	P1730	AT-136
A/T TCC S/V FNCTN	P0744	P0744	AT-118
ATF TEMP SEN/CIRC	P0710	P1710	AT-130
CAN COMM CIRCUIT	U1000	U1000	AT-105
D/C SOLENOID/CIRC	P1762	P1762	AT-149
D/C SOLENOID FNCTN	P1764	P1764	AT-151
ENGINE SPEED SIG	P0725	P0725	AT-114
FR/B SOLENOID/CIRC	P1757	P1757	AT-145
FR/B SOLENOID FNCT	P1759	P1759	AT-147
HLR/C SOL/CIRC	P1767	P1767	AT-153
HLR/C SOL FNCTN	P1769	P1769	AT-155
I/C SOLENOID/CIRC	P1752	P1752	AT-141
I/C SOLENOID FNCTN	P1754	P1754	AT-143
L/PRESS SOL/CIRC	P0745	P0745	AT-120
LC/B SOLENOID/CIRC	P1772	P1772	AT-157
LC/B SOLENOID FNCT	P1774	P1774	AT-159
MANU MODE SW/CIR	—	P1815	AT-161
PNP SW/CIRC	P0705	P0705	AT-110
STARTER RELAY/CIRC	—	P0615	AT-107
TCC SOLENOID/CIRC	P0740	P0740	AT-116
TCM-EEPROM	—	P1704	AT-127
TCM-POWER SUPPLY	—	P1701	AT-122
TCM-RAM	—	P1702	AT-125
TCM-ROM	—	P1703	AT-126
TP SEN/CIRC A/T	P1705	P1705	AT-128
TURBINE REV S/CIRC	P1716	P1716	AT-132
VEH SPD SE/CIR-MTR	—	P1721	AT-134
VEH SPD SEN/CIR AT	P0720	P0720	AT-112

*1: These numbers are prescribed by SAE J2012.

INDEX FOR DTC

ACS000GS

DTC No. Index

NOTE:

If DTC U1000 is displayed with other DTC, first perform the trouble diagnosis for DTC U1000. Refer to [AT-105](#).

DTC		Items (CONSULT-II screen terms)	Reference page
OBD-II	Except OBD-II		
CONSULT-II GST*1	CONSULT-II only "A/T"		
—	P0615	STARTER RELAY/CIRC	AT-107
P0705	P0705	PNP SW/CIRC	AT-110
P0710	P1710	ATF TEMP SEN/CIRC	AT-130
P0720	P0720	VEH SPD SEN/CIR AT	AT-112
P0725	P0725	ENGINE SPEED SIG	AT-114
P0740	P0740	TCC SOLENOID/CIRC	AT-116
P0744	P0744	A/T TCC S/V FNCTN	AT-118
P0745	P0745	L/PRESS SOL/CIRC	AT-120
—	P1701	TCM-POWER SUPPLY	AT-122
—	P1702	TCM-RAM	AT-125
—	P1703	TCM-ROM	AT-126
—	P1704	TCM-EEPROM	AT-127
P1705	P1705	TP SEN/CIRC A/T	AT-128
P1716	P1716	TURBINE REV S/CIRC	AT-132
—	P1721	VEH SPD SE/CIR-MTR	AT-134
P1730	P1730	A/T INTERLOCK	AT-136
—	P1731	A/T 1ST E/BRAKING	AT-139
P1752	P1752	I/C SOLENOID/CIRC	AT-141
P1754	P1754	I/C SOLENOID FNCTN	AT-143
P1757	P1757	FR/B SOLENOID/CIRC	AT-145
P1759	P1759	FR/B SOLENOID FNCT	AT-147
P1762	P1762	D/C SOLENOID/CIRC	AT-149
P1764	P1764	D/C SOLENOID FNCTN	AT-151
P1767	P1767	HLR/C SOL/CIRC	AT-153
P1769	P1769	HLR/C SOL FNCTN	AT-155
P1772	P1772	LC/B SOLENOID/CIRC	AT-157
P1774	P1774	LC/B SOLENOID FNCT	AT-159
—	P1815	MANU MODE SW/CIRC	AT-161
—	P1841	ATF PRES SW 1/CIRC	AT-164
—	P1843	ATF PRES SW 3/CIRC	AT-166
—	P1845	ATF PRES SW 5/CIRC	AT-168
—	P1846	ATF PRES SW 6/CIRC	AT-170
U1000	U1000	CAN COMM CIRCUIT	AT-105

*1: These numbers are prescribed by SAE J2012.

PRECAUTIONS

PRECAUTIONS

PF0:00001

Precautions for Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER”

ACS001KO

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER”, used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

Precautions for Battery Service

ACS001NN

Before disconnecting the battery, lower both the driver and passenger windows. This will prevent any interference between the window edge and the vehicle when the door is opened/closed. During normal operation, the window slightly raises and lowers automatically to prevent any window to vehicle interference. The automatic window function will not work with the battery disconnected.

Precautions for On Board Diagnostic (OBD) System of A/T and Engine

ACS000GU

The ECM has an on board diagnostic system. It will light up the malfunction indicator lamp (MIL) to warn the driver of a malfunction causing emission deterioration.

CAUTION:


- Be sure to turn the ignition switch “OFF” and disconnect the negative battery cable before any repair or inspection work. The open/short circuit of related switches, sensors, solenoid valves, etc. Will cause the MIL to light up.
- Be sure to connect and lock the connectors securely after work. A loose (unlocked) connector will cause the MIL to light up due to an open circuit. (Be sure the connector is free from water, grease, dirt, bent terminals, etc.)
- Be sure to route and secure the harnesses properly after work. Interference of the harness with a bracket, etc. May cause the MIL to light up due to a short circuit.
- Be sure to connect rubber tubes properly after work. A misconnected or disconnected rubber tube may cause the MIL to light up due to a malfunction of the EGR system or fuel injection system, etc.
- Be sure to erase the unnecessary malfunction information (repairs completed) from the TCM and ECM before returning the vehicle to the customer.

PRECAUTIONS


Precautions

ACS000GW

- Before connecting or disconnecting the A/T assembly harness connector, turn ignition switch “OFF” and disconnect negative battery cable. Because battery voltage is applied to TCM even if ignition switch is turned “OFF”.

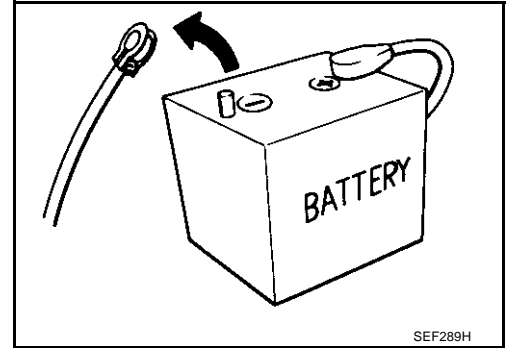

- After performing each TROUBLE DIAGNOSIS, perform “DTC (Diagnostic Trouble Code) CONFIRMATION PROCEDURE”.
If the repair is completed the DTC should not be displayed in the “DTC CONFIRMATION PROCEDURE”.

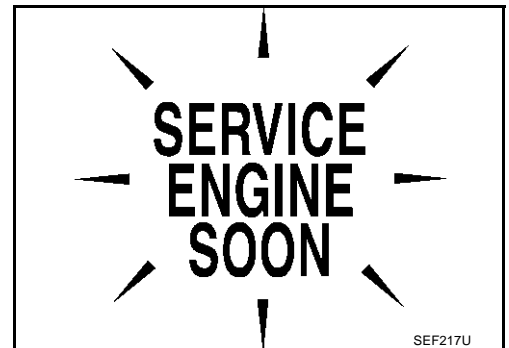

- Always use the specified brand of A/T fluid. Refer to [MA-11, "Fluids and Lubricants"](#) .
- Use paper rags not cloth rags during work.
- After replacing the A/T fluid, dispose of the waste oil using the methods prescribed by law, ordinance, etc.
- Before proceeding with disassembly, thoroughly clean the outside of the transmission. It is important to prevent the internal parts from becoming contaminated by dirt or other foreign matter.
- Disassembly should be done in a clean work area.
- Use lint-free cloth or towels for wiping parts clean. Common shop rags can leave fibers that could interfere with the operation of the transmission.
- Place disassembled parts in order for easier and proper assembly.
- All parts should be carefully cleaned with a general purpose, non-flammable solvent before inspection or reassembly.
- Gaskets, seals and O-rings should be replaced any time the transmission is disassembled.
- It is very important to perform functional tests whenever they are indicated.
- The valve body contains precision parts and requires extreme care when parts are removed and serviced. Place disassembled valve body parts in order for easier and proper assembly. Care will also prevent springs and small parts from becoming scattered or lost.
- Properly installed valves, sleeves, plugs, etc. will slide along bores in valve body under their own weight.
- Before assembly, apply a coat of recommended ATF to all parts. Apply petroleum jelly to protect O-rings and seals, or hold bearings and washers in place during assembly. Do not use grease.
- Extreme care should be taken to avoid damage to O-rings, seals and gaskets when assembling.
- After overhaul, refill the transmission with new ATF.
- When the A/T drain plug is removed, only some of the fluid is drained. Old A/T fluid will remain in torque converter and ATF cooling system.
Always follow the procedures under “Changing A/T Fluid” in the AT section when changing A/T fluid. Refer to [AT-12, "Changing A/T Fluid"](#) , [AT-12, "Checking ATF"](#) .

PRECAUTIONS

Service Notice or Precautions OBD-II SELF-DIAGNOSIS

ACS000GX

- A/T self-diagnosis is performed by the TCM in combination with the ECM. The results can be read through the blinking pattern of the A/T CHECK indicator or the malfunction indicator lamp (MIL). Refer to the table on [AT-94, "Self-diagnostic result test mode"](#) for the indicator used to display each self-diagnostic result.
- The self-diagnostic results indicated by the MIL are automatically stored in both the ECM and TCM memories.

Always perform the procedure on [AT-37, "HOW TO ERASE DTC"](#) to complete the repair and avoid unnecessary blinking of the MIL.

For details of OBD-II, refer to [EC-55, "ON BOARD DIAGNOSTIC \(OBD\) SYSTEM"](#) .

- **Certain systems and components, especially those related to OBD, may use the new style slide-locking type harness connector. For description and how to disconnect, refer to [PG-68, "HARNESS CONNECTOR"](#) .**

Wiring Diagrams and Trouble Diagnosis

ACS000GY

When you read wiring diagrams, refer to the following:

- [GI-15, "How to Read Wiring Diagrams"](#).
- [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) for power distribution circuit.

When you perform trouble diagnosis, refer to the following:

- [GI-11, "How to Follow Trouble Diagnoses"](#).
- [GI-27, "How to Perform Efficient Diagnosis for an Electrical Incident"](#).

A
B
AT
D
E
F
G
H
I
J
K
L
M

PREPARATION






PREPARATION

PFP:00002

Special Service Tools

ACS000GZ



The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

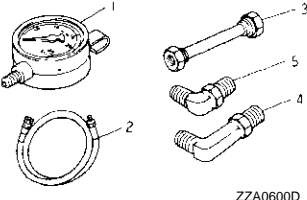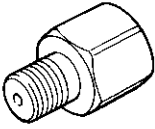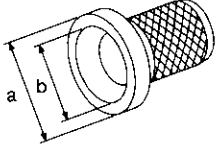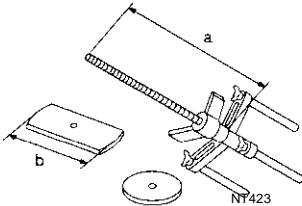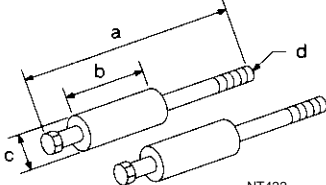Tool number (Kent-Moore No.) Tool name	Description
ST2505S001 (J-34301-C) Oil pressure gauge set 1 ST25051001 (—) Oil pressure gauge 2 ST25052000 (—) Hose 3 ST25053000 (—) Joint pipe 4 ST25054000 (—) Adapter 5 ST25055000 (—) Adapter	Measuring line pressure <div style="text-align: center;">  <p>ZZA0600D</p> </div>
KV31103600 (J-45674) Joint pipe adapter (With ST25054000)	Measuring line pressure <div style="text-align: center;">  <p>ZZA1227D</p> </div>
ST33400001 (J-26082) Drift a: 60 mm (2.36 in) dia. b: 47 mm (1.85 in) dia.	<ul style="list-style-type: none"> ● Installing rear oil seal ● Installing oil pump housing oil seal <div style="text-align: center;">  <p>NT086</p> </div>
KV31102400 (J-34285 and J-34285-87) Clutch spring compressor a: 320 mm (12.60 in) b: 174 mm (6.85 in)	Installing reverse brake return spring retainer <div style="text-align: center;">  <p>NT423</p> </div>
ST25850000 (J-25721-A) Sliding hammer a: 179 mm (7.05 in) b: 70 mm (2.76 in) c: 40 mm (1.57 in) d: M12X1.75P	Remove oil pump assembly <div style="text-align: center;">  <p>NT422</p> </div>

PREPARATION

Commercial Service Tools

ACS000H0

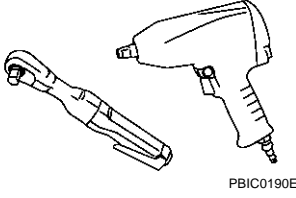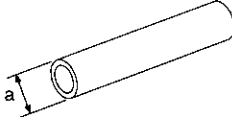Tool name	Description	A
Power tool  PBIC0190E	Loosening bolts and nuts	B
Drift a: 22mm (0.87 in) dia.  NT083	Installing manual shaft oil seals	AT
		D
		E
		F
		G
		H
		I
		J
		K
		L
		M

A/T FLUID

PFP:KLE40

Changing A/T Fluid

ACS003S7

1. Warm up ATF.
2. Stop engine.
3. Remove the tightening bolt for A/T fluid level gauge.
4. Drain ATF from drain plug and refill with new ATF. Always refill same volume with drained fluid.
 - To replace the ATF, pour in new fluid at the charging pipe with the engine idling and at the same time drain the old fluid from the radiator cooler hose return side.
 - When the color of the fluid coming out is about the same as the color of the new fluid, the replacement is complete. The amount of new transmission fluid to use should be 30 to 50% increase of the stipulated amount.

A/T fluid: Nissan Matic J ATF

Fluid capacity: 10.3 ℓ (10-7/8 US qt, 9-1/8 Imp qt)

CAUTION:

- Use only Genuine Nissan Matic J ATF. Do not mix with other fluid.
- Using automatic transmission fluid other than Genuine Nissan Matic J ATF will cause deterioration in driveability and automatic transmission durability, and may damage the automatic transmission, which is not covered by the NISSAN new vehicle limited warranty.
- When filling ATF, take care not to scatter heat generating parts such as exhaust.
- Do not reuse drain plug gasket.

Drain plug:

 : 34 N·m (3.5 kg-m, 25 ft-lb)

5. Run engine at idle speed for 5 minutes.
6. Check fluid level and condition. Refer to [AT-12, "Checking ATF"](#) . If fluid is still dirty, repeat step 2. through 5.
7. Install the removed A/T fluid level gauge in the A/T fluid charging pipe.

Level gauge bolt:

 : 5.1 N·m (0.52 kg-m, 45 in-lb)

Checking ATF

ACS003S8

1. Warm up engine.
2. Check for fluid leakage.
3. Remove the tightening bolt for A/T fluid level gauge.
4. Before driving, fluid level can be checked at fluid temperatures of 30 to 50°C (86 to 122°F) using "COLD" range on A/T fluid level gauge as follows.
 - a. Park vehicle on level surface and set parking brake.
 - b. Start engine and move selector lever through each gear position. Leave selector lever in "P" position.
 - c. Check fluid level with engine idling.
 - d. Remove A/T fluid level gauge and wipe clean with lint-free paper.

CAUTION:

When wiping away the fluid level gauge, always use lint-free paper, not a cloth one.

- e. Re-insert A/T fluid level gauge into charging pipe as far as it will go.

CAUTION:

To check fluid level, insert the A/T fluid level gauge until the cap contacts the end of the A/T fluid charging pipe, with the gauge reversed from the normal attachment conditions.

- f. Remove A/T fluid level gauge and note reading. If reading is at low side of range, add fluid to the A/T fluid charging pipe.

CAUTION:


Do not overfill.

A/T FLUID

5. Drive vehicle for approximately 5 minutes in urban areas.
6. Make the fluid temperature approximately 65°C (149°F).

NOTE:

Fluid level will be greatly affected by temperature as shown in figure. Therefore, be certain to perform operation while checking data with CONSULT-II.

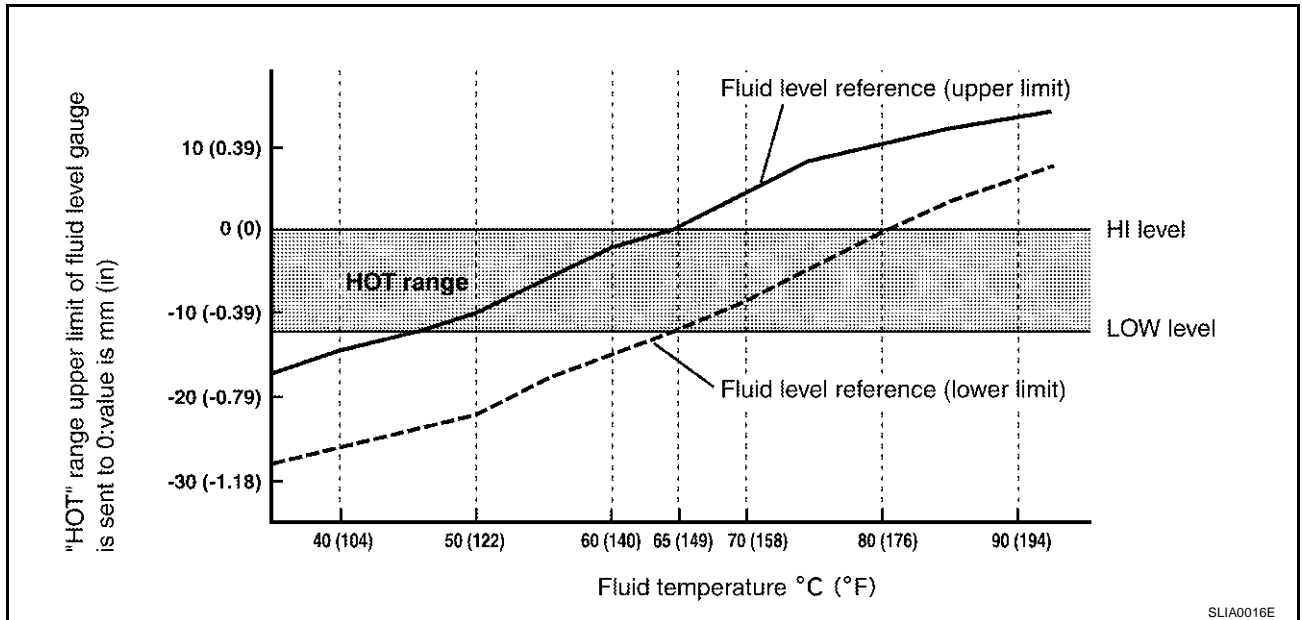


- a. Connect CONSULT-II to data link connector.
- b. Select "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
- c. Read out the value of "ATF TEMP 1".
7. Re-check fluid level at fluid temperatures of approximately 65°C (149°F) using "HOT" range on A/T fluid level gauge.

CAUTION:

- When wiping away the fluid level gauge, always use lint-free paper, not a cloth one.
- To check fluid level, insert the A/T fluid level gauge until the cap contacts the end of the A/T fluid charging pipe, with the gauge reversed from the normal attachment conditions as shown.

8. Check fluid condition.

- If fluid is very dark or smells burned, refer to check operation of A/T. Flush cooling system after repair of A/T.
- If ATF contains frictional material (clutches, bands, etc.), replace radiator and flush cooler line using cleaning solvent and compressed air after repair of A/T. Refer to [CO-11, "RADIATOR"](#).

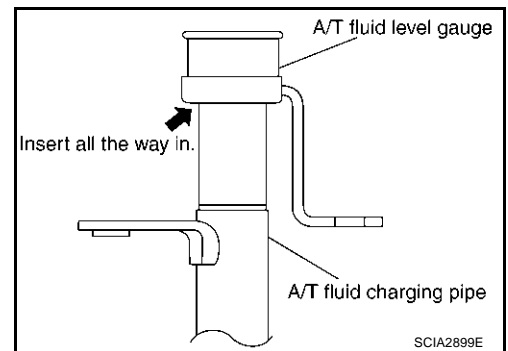

9. Install the removed A/T fluid level gauge in the A/T fluid charging pipe.

Level gauge bolt:

 : 5.1 N·m (0.52 kg·m, 45 in·lb)


A/T CONTROL SYSTEM

A/T CONTROL SYSTEM

PFP:31036

Cross-Sectional View

ACS000H3

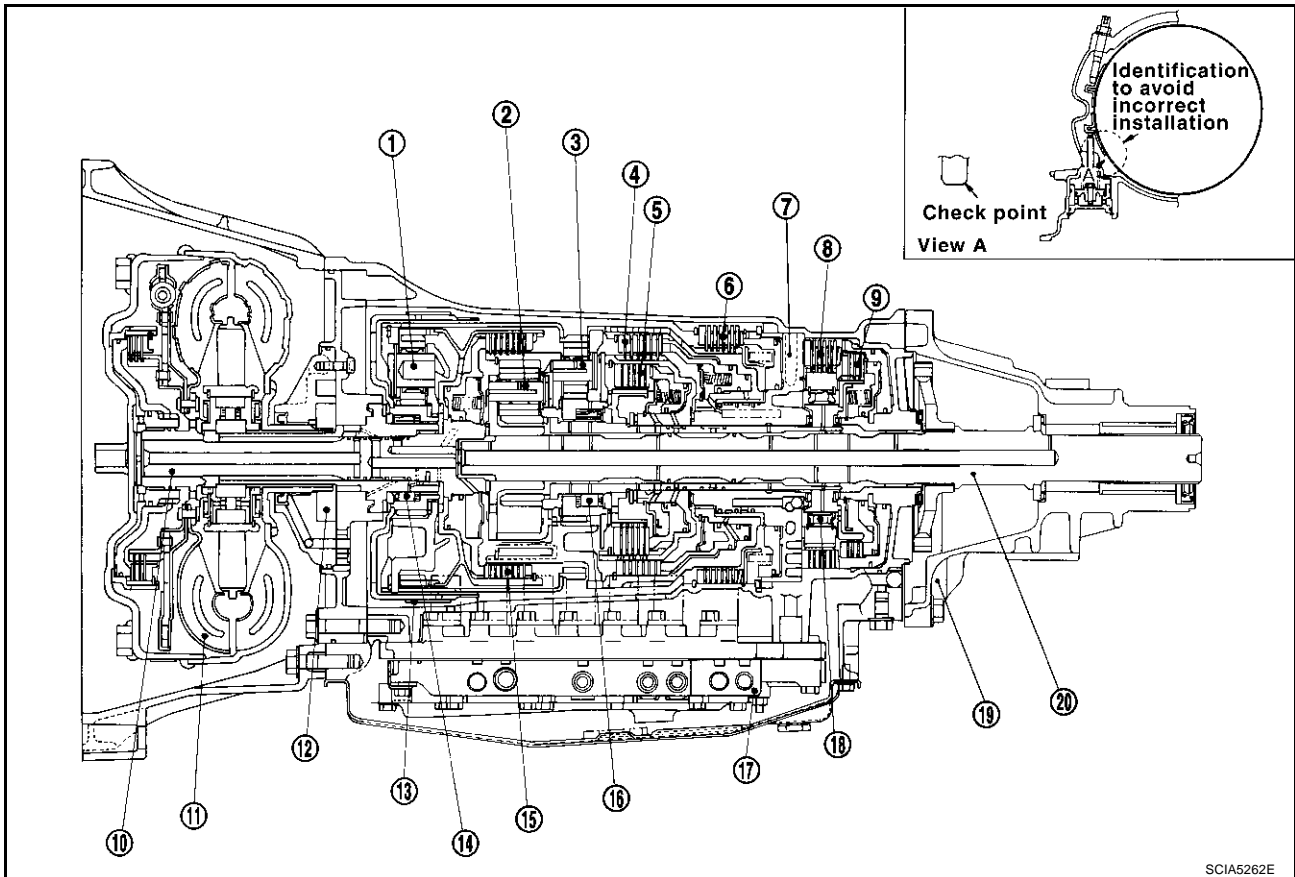

SCIA5262E

- | | | |
|-------------------------|--------------------------------|----------------------------|
| 1. Front planetary gear | 2. Mid planetary gear | 3. Rear planetary gear |
| 4. Direct clutch | 5. High and low reverse clutch | 6. Reverse brake |
| 7. Drum support | 8. Forward brake | 9. Low coast brake |
| 10. Input shaft | 11. Torque converter | 12. Oil pump |
| 13. Front brake | 14. 3rd one-way clutch | 15. Input clutch |
| 16. 1st one-way clutch | 17. Control valve with TCM | 18. Forward one-way clutch |
| 19. Rear extension | 20. Output shaft | |


A/T CONTROL SYSTEM

ACS000H4

Shift Mechanism

The automatic transmission uses compact dual planetary gear systems to improve power-transmission efficiency, simplify construction and reduce weight. It also employs an optimum shift control and super wide gear ratios. They improve starting performance and acceleration during medium and high-speed operation.

CONSTRUCTION

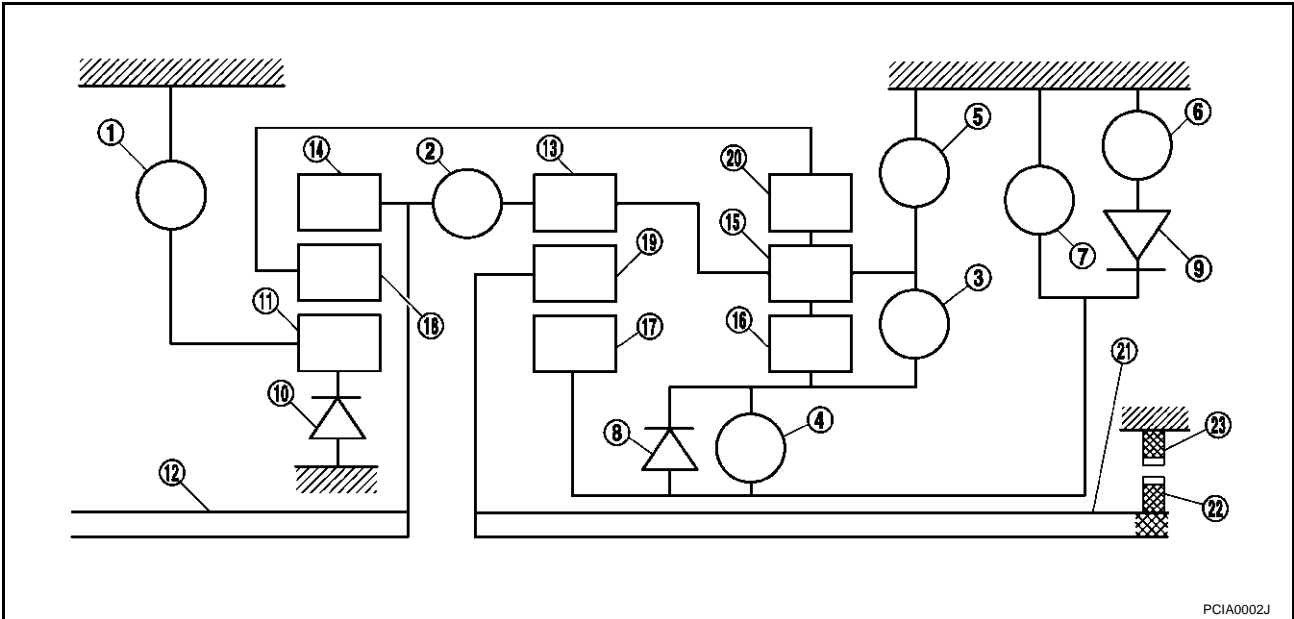

- | | | |
|--------------------------------|-------------------------|---------------------------|
| 1. Front brake | 2. Input clutch | 3. Direct clutch |
| 4. High and low reverse clutch | 5. Reverse brake | 6. Forward brake |
| 7. Low coast brake | 8. 1st one-way clutch | 9. Forward one-way clutch |
| 10. 3rd one-way clutch | 11. Front sun gear | 12. Input shaft |
| 13. Mid internal gear | 14. Front internal gear | 15. Rear carrier |
| 16. Rear sun gear | 17. Mid sun gear | 18. Front carrier |
| 19. Mid carrier | 20. Rear internal gear | 21. Output shaft |
| 22. Parking gear | 23. Parking pawl | |

FUNCTION OF CLUTCH AND BRAKE


Name of the Part	Abbreviation	Function
Front brake (1)	Fr/B	Fastens the front sun gear (11).
Input clutch (2)	I/C	Connects the input shaft (12), the front internal gear (14) and the mid internal gear (13).
Direct clutch (3)	D/C	Connects the rear carrier (15) and the rear sun gear (16).
High and low reverse clutch (4)	H&LR/C	Connects the mid sun gear (17) and the rear sun gear (16).
Reverse brake (5)	R/B	Fastens the rear carrier (15).
Forward brake (6)	F/B	Fastens the mid sun gear (17).
Low coast brake (7)	LC/B	Fastens the mid sun gear (17).
1st one-way clutch (8)	1st/O.C	Allows the rear sun gear (16) to turn freely forward relative to the mid sun gear (17) but fastens it for reverse rotation.
Forward one-way clutch (9)	F/O.C	Allows the mid sun gear (17) to turn freely in the forward direction but fastens it for reverse rotation.
3rd one-way clutch (10)	3rd/O.C	Allows the front sun gear (11) to turn freely in the forward direction but fastens it for reverse rotation.

A/T CONTROL SYSTEM

CLUTCH AND BAND CHART

Shift position	I/C	H&LR/ C	D/C	R/B	Fr/B	LC/B	Fwd/B	1st OWC	Fwd OWC	3rd OWC	Remarks
P		△			△						PARK POSITION
R		○		○	○			⊙		⊙	REVERSE POSITION
N		△			△						NEUTRAL POSITION
D	1 st	△ *			△	△ **	○	⊙	⊙	⊙	Automatic shift 1→2→3→4→5
	2 nd		○		△		○		⊙	⊙	
	3 rd		○	○			△	◇		⊙	
	4 th	○	○	○			△	◇			
	5 th	○	○			○	△	◇		◇	
M5	5 th	○	○		○		△	◇		◇	Locks (held stationary) in 5th gear
M4	4 th	○	○	○			△	◇			Locks (held stationary) in 4th gear
M3	3 rd		○	○	○		△	◇		⊙	Locks (held stationary) in 3th gear
M2	2 nd			○	○	○	○		⊙	⊙	Locks (held stationary) in 2th gear
M1	1 st		○		○	○	○	⊙	⊙	⊙	Locks (held stationary) in 1th gear

- — Operates
- ⊙ — Operates during "progressive" acceleration.
- ◇ — Operates and affects power transmission while coasting.
- △ — Line pressure is applied but does not affect power transmission.
- △ * — Operates under conditions shown in illustration ①.
- △ ** — Operates under conditions shown in illustration ②. Delay control is applied during D (4,3,2,1) → N shift.

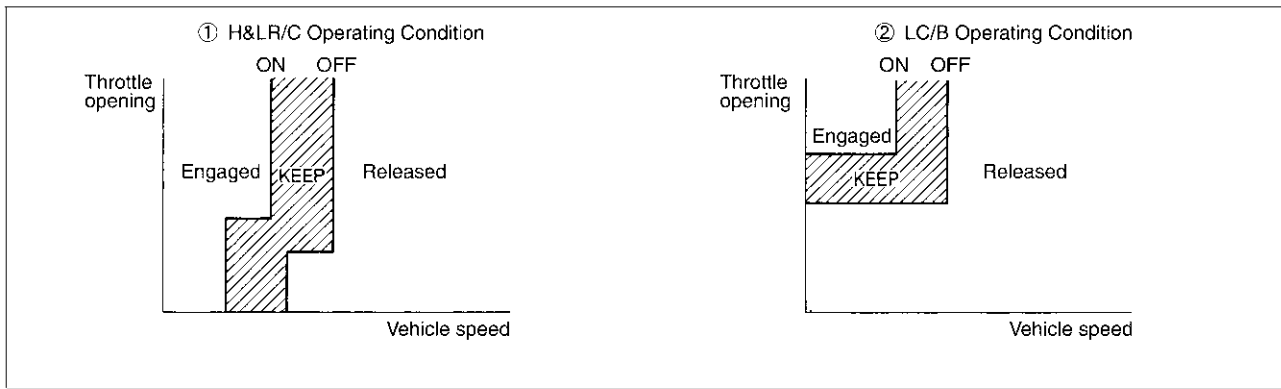

SCIA1674E

A/T CONTROL SYSTEM


POWER TRANSMISSION

“N” position

Since both the forward brake and the reverse brake are released, torque from the input shaft drive is not transmitted to the output shaft.

“P” position

- The same as for the “N” position, both the forward brake and the reverse brake are released, so torque from the input shaft drive is not transmitted to the output shaft.
- The parking pawl linked with the select lever meshes with the parking gear and fastens the output shaft mechanically.

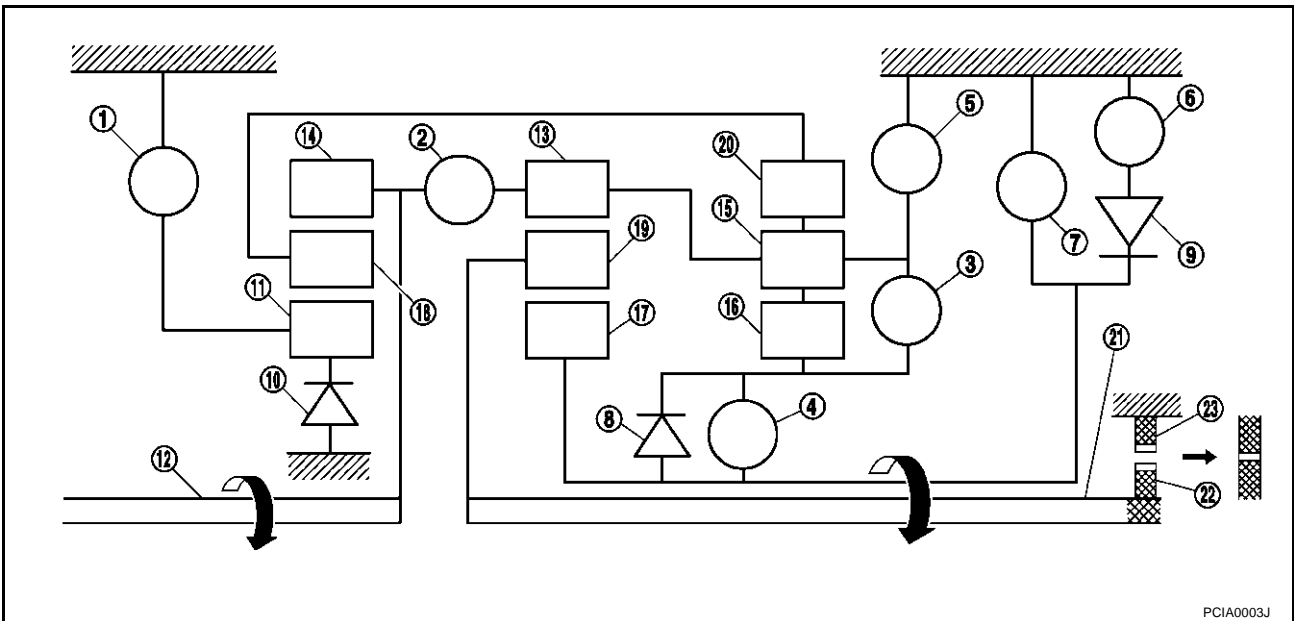


- | | | |
|--------------------------------|-------------------------|---------------------------|
| 1. Front brake | 2. Input clutch | 3. Direct clutch |
| 4. High and low reverse clutch | 5. Reverse brake | 6. Forward brake |
| 7. Low coast brake | 8. 1st one-way clutch | 9. Forward one-way clutch |
| 10. 3rd one-way clutch | 11. Front sun gear | 12. Input shaft |
| 13. Mid internal gear | 14. Front internal gear | 15. Rear carrier |
| 16. Rear sun gear | 17. Mid sun gear | 18. Front carrier |
| 19. Mid carrier | 20. Rear internal gear | 21. Output shaft |
| 22. Parking gear | 23. Parking pawl | |

A/T CONTROL SYSTEM

“D1 ” position

- The forward brake and the forward one-way clutch regulate reverse rotation of the mid sun gear.
- The 1st one-way clutch regulates reverse rotation of the rear sun gear.
- The 3rd one-way clutch regulates reverse rotation of the front sun gear.
- During deceleration, the mid sun gear turns forward, so the forward one-way clutch idles and the engine brake is not activated.

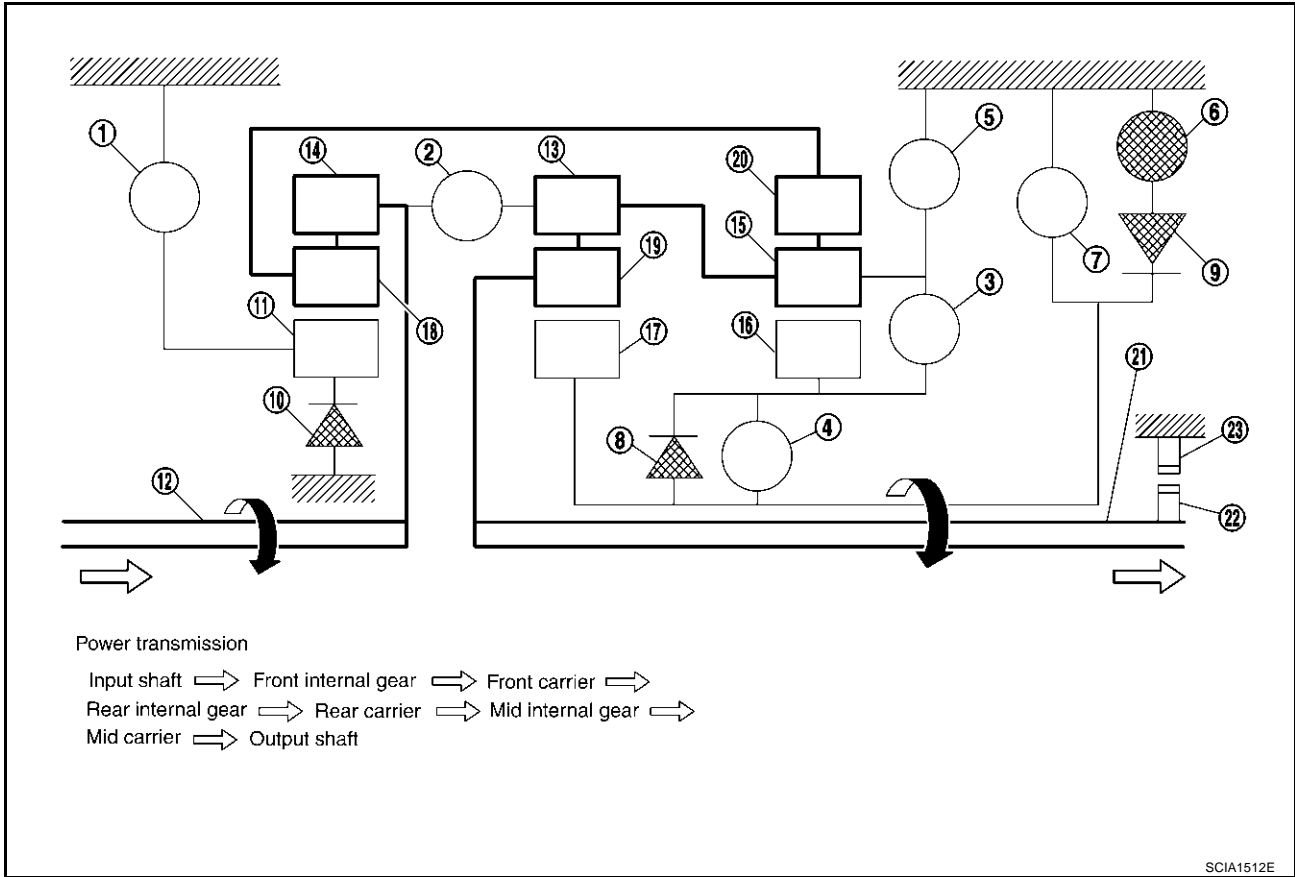


- | | | |
|--------------------------------|-------------------------|---------------------------|
| 1. Front brake | 2. Input clutch | 3. Direct clutch |
| 4. High and low reverse clutch | 5. Reverse brake | 6. Forward brake |
| 7. Low coast brake | 8. 1st one-way clutch | 9. Forward one-way clutch |
| 10. 3rd one-way clutch | 11. Front sun gear | 12. Input shaft |
| 13. Mid internal gear | 14. Front internal gear | 15. Rear carrier |
| 16. Rear sun gear | 17. Mid sun gear | 18. Front carrier |
| 19. Mid carrier | 20. Rear internal gear | 21. Output shaft |
| 22. Parking gear | 23. Parking pawl | |

A/T CONTROL SYSTEM

“M1” position

- The front brake fastens the front sun gear.
- The forward brake and the forward one-way clutch regulate reverse rotation of the mid sun gear.
- High and low reverse clutch connects the rear sun gear and the mid sun gear.
- The low coast brake fastens the mid sun gear.
- During deceleration, the low coast brake regulates forward rotation of the mid sun gear and the engine brake functions.

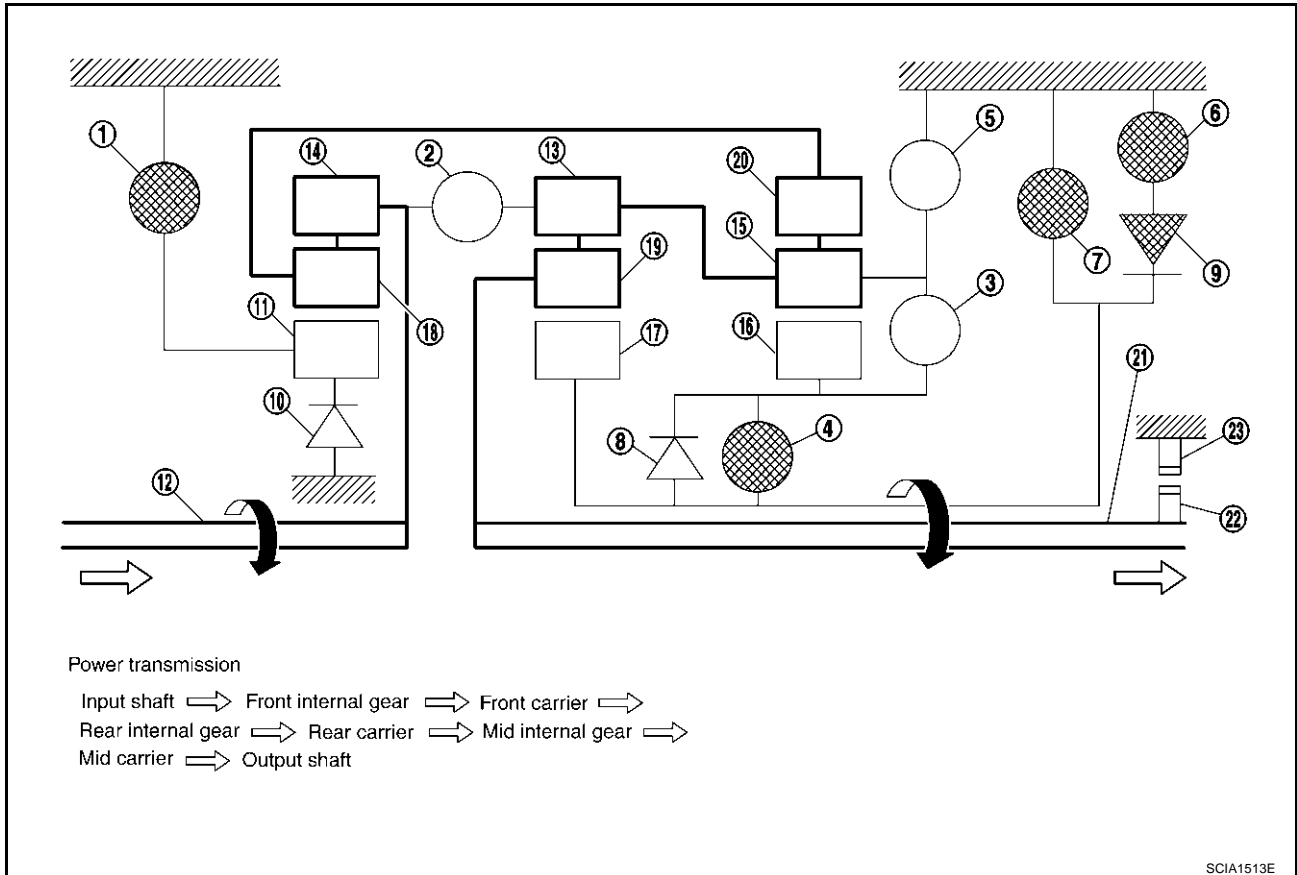


- | | | |
|--------------------------------|-------------------------|---------------------------|
| 1. Front brake | 2. Input clutch | 3. Direct clutch |
| 4. High and low reverse clutch | 5. Reverse brake | 6. Forward brake |
| 7. Low coast brake | 8. 1st one-way clutch | 9. Forward one-way clutch |
| 10. 3rd one-way clutch | 11. Front sun gear | 12. Input shaft |
| 13. Mid internal gear | 14. Front internal gear | 15. Rear carrier |
| 16. Rear sun gear | 17. Mid sun gear | 18. Front carrier |
| 19. Mid carrier | 20. Rear internal gear | 21. Output shaft |
| 22. Parking gear | 23. Parking pawl | |

A/T CONTROL SYSTEM

“D2 ” position

- The forward brake and the forward one-way clutch regulate reverse rotation of the mid sun gear.
- The 3rd one-way clutch regulates reverse rotation of the front sun gear.
- The direct clutch is coupled, and the rear carrier and rear sun gear are connected.
- During deceleration, the mid sun gear turns forward, so the forward one-way clutch idles and engine brake is not activated.

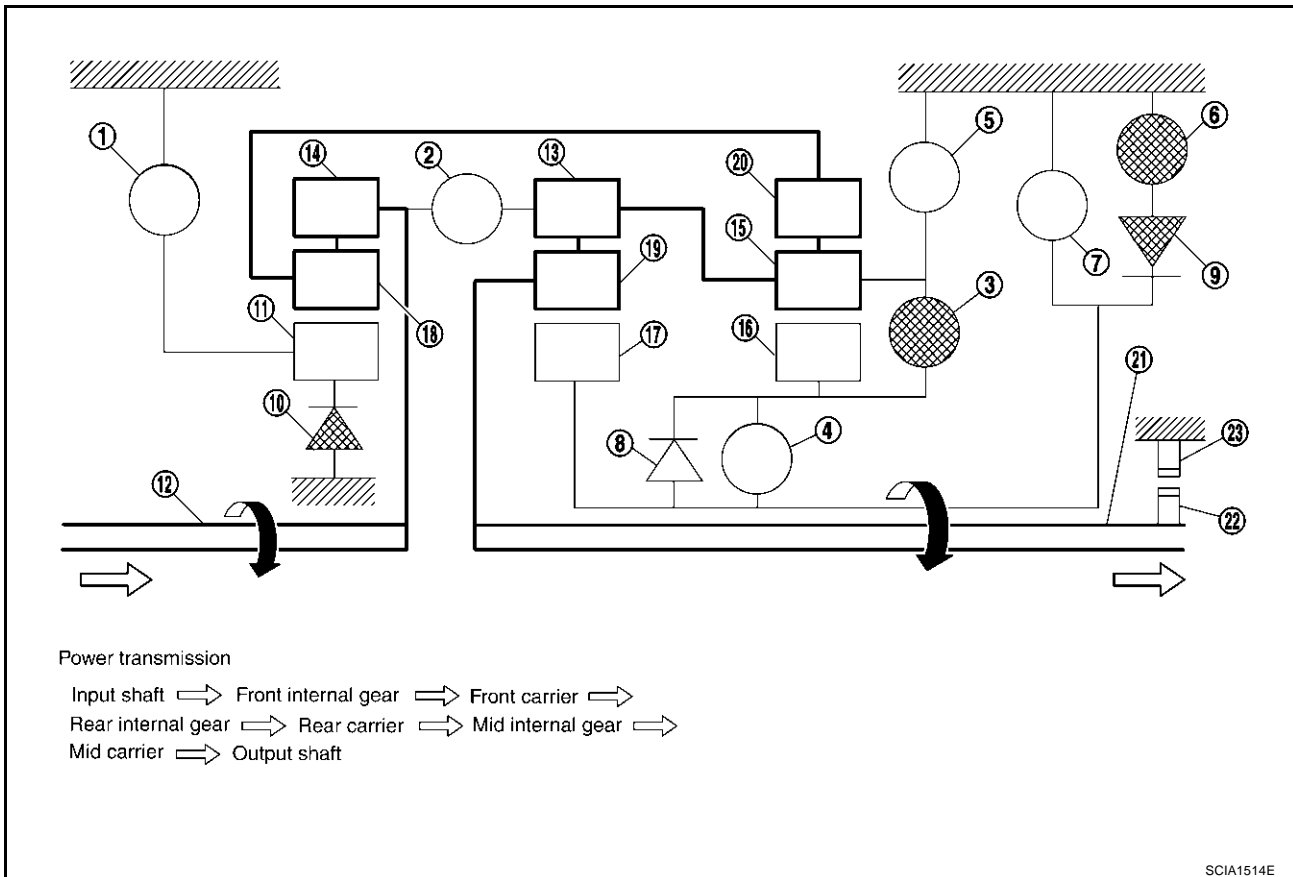


- | | | |
|--------------------------------|-------------------------|---------------------------|
| 1. Front brake | 2. Input clutch | 3. Direct clutch |
| 4. High and low reverse clutch | 5. Reverse brake | 6. Forward brake |
| 7. Low coast brake | 8. 1st one-way clutch | 9. Forward one-way clutch |
| 10. 3rd one-way clutch | 11. Front sun gear | 12. Input shaft |
| 13. Mid internal gear | 14. Front internal gear | 15. Rear carrier |
| 16. Rear sun gear | 17. Mid sun gear | 18. Front carrier |
| 19. Mid carrier | 20. Rear internal gear | 21. Output shaft |
| 22. Parking gear | 23. Parking pawl | |

A/T CONTROL SYSTEM

“M2” position

- The front brake fastens the front sun gear.
- The forward brake and the forward one-way clutch regulate reverse rotation of the mid sun gear.
- The direct clutch is coupled, and the rear carrier and rear sun gear are connected.
- The low coast brake fastens the mid sun gear.
- During deceleration, the low coast brake regulates forward rotation of the mid sun gear and the engine brake functions.

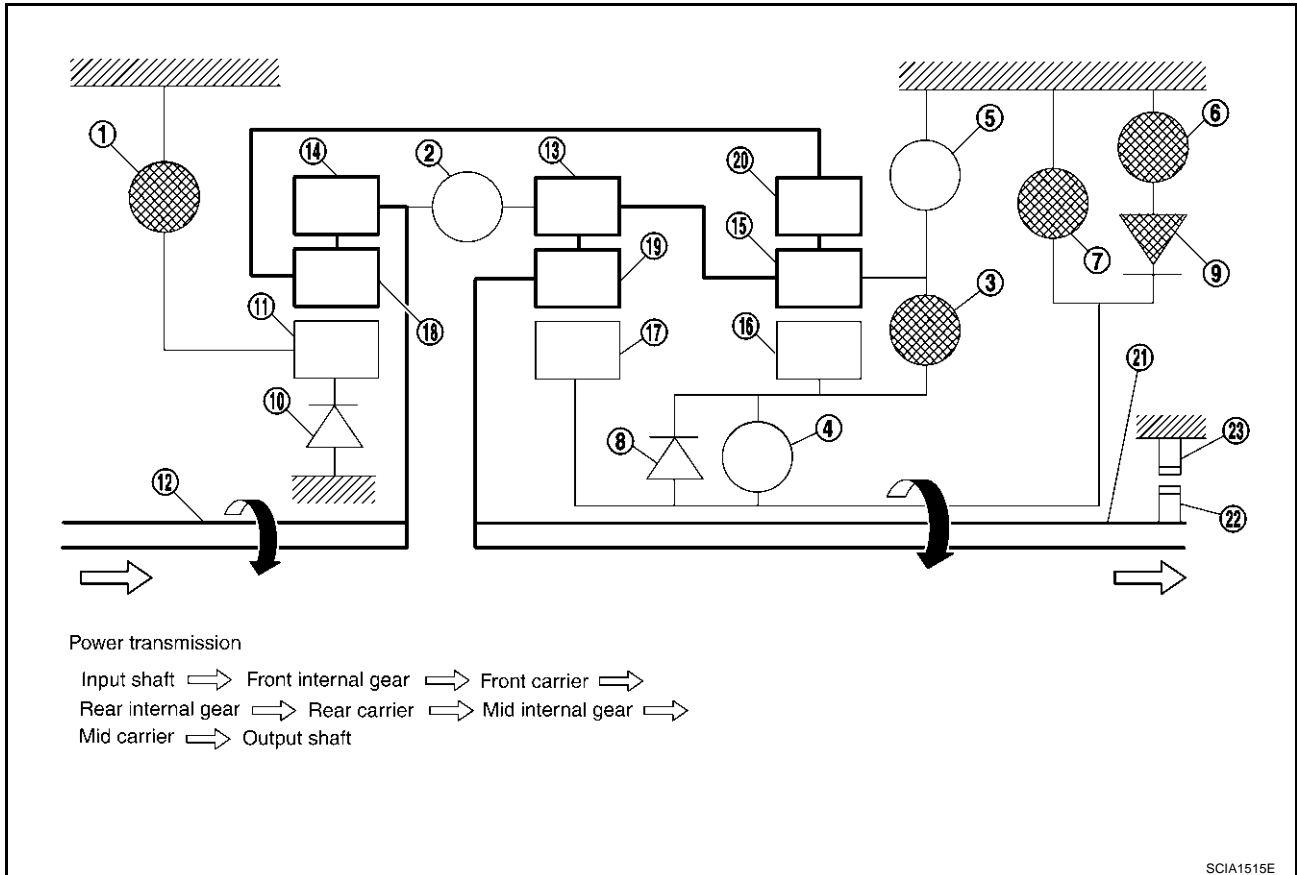


- | | | |
|--------------------------------|-------------------------|---------------------------|
| 1. Front brake | 2. Input clutch | 3. Direct clutch |
| 4. High and low reverse clutch | 5. Reverse brake | 6. Forward brake |
| 7. Low coast brake | 8. 1st one-way clutch | 9. Forward one-way clutch |
| 10. 3rd one-way clutch | 11. Front sun gear | 12. Input shaft |
| 13. Mid internal gear | 14. Front internal gear | 15. Rear carrier |
| 16. Rear sun gear | 17. Mid sun gear | 18. Front carrier |
| 19. Mid carrier | 20. Rear internal gear | 21. Output shaft |
| 22. Parking gear | 23. Parking pawl | |

A
B
AT
D
E
F
G
H
I
J
K
L
M

A/T CONTROL SYSTEM

“D3” and “M3” position

- The front brake fastens the front sun gear.
- The direct clutch is coupled, and the rear carrier and rear sun gear are connected.
- The high and low reverse clutch is coupled, and the mid sun gear and rear sun gear are connected.

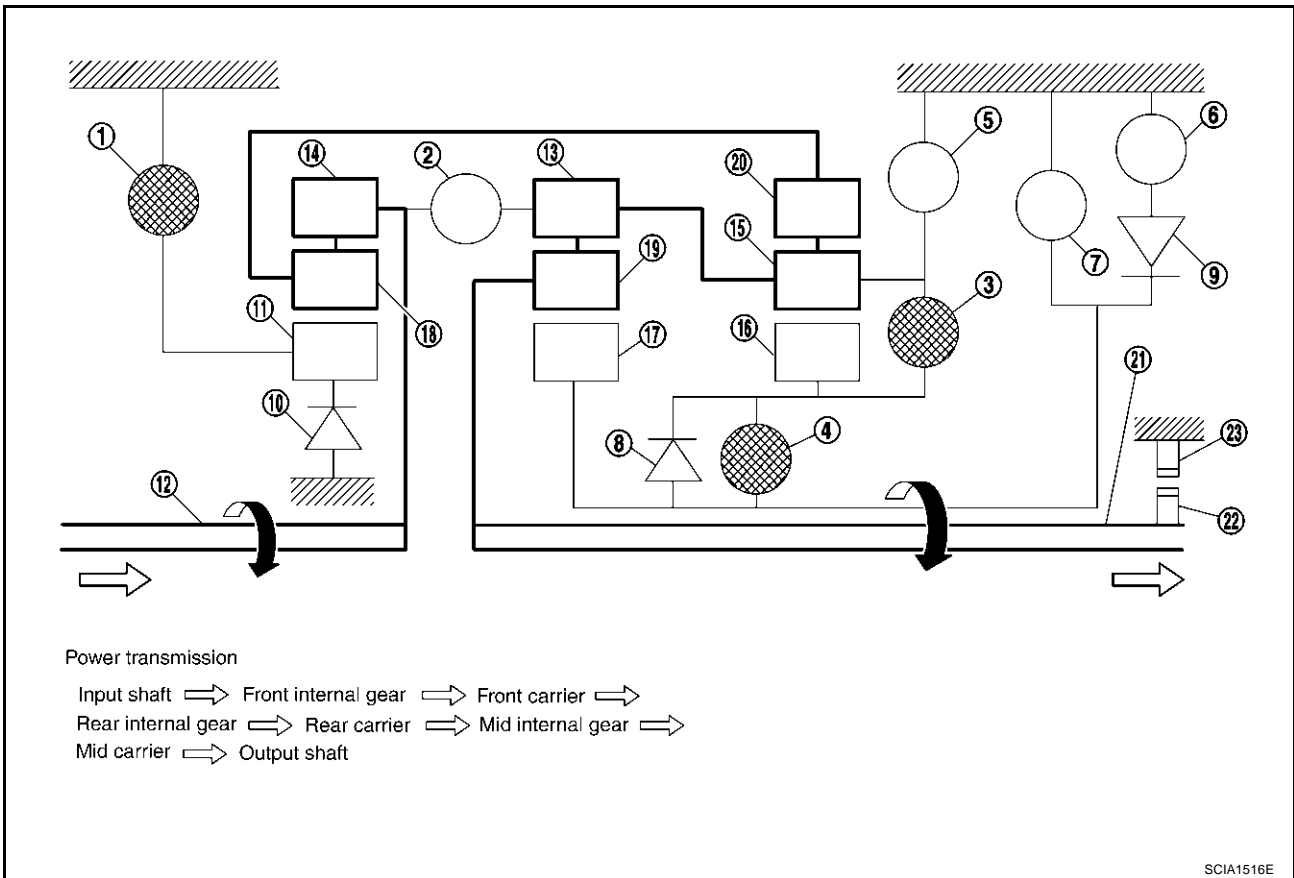


- | | | |
|--------------------------------|-------------------------|---------------------------|
| 1. Front brake | 2. Input clutch | 3. Direct clutch |
| 4. High and low reverse clutch | 5. Reverse brake | 6. Forward brake |
| 7. Low coast brake | 8. 1st one-way clutch | 9. Forward one-way clutch |
| 10. 3rd one-way clutch | 11. Front sun gear | 12. Input shaft |
| 13. Mid internal gear | 14. Front internal gear | 15. Rear carrier |
| 16. Rear sun gear | 17. Mid sun gear | 18. Front carrier |
| 19. Mid carrier | 20. Rear internal gear | 21. Output shaft |
| 22. Parking gear | 23. Parking pawl | |

A/T CONTROL SYSTEM

“D4 ” and “M4” position

- The direct clutch is coupled, and the rear carrier and rear sun gear are connected.
- The high and low reverse clutch is coupled, and the mid sun gear and rear sun gear are connected.
- The input clutch is coupled, and the front internal gear and mid internal gear are connected.
- The drive power is conveyed to the front internal gear, mid internal gear, and rear carrier and the three planetary gears rotate forward as one unit.

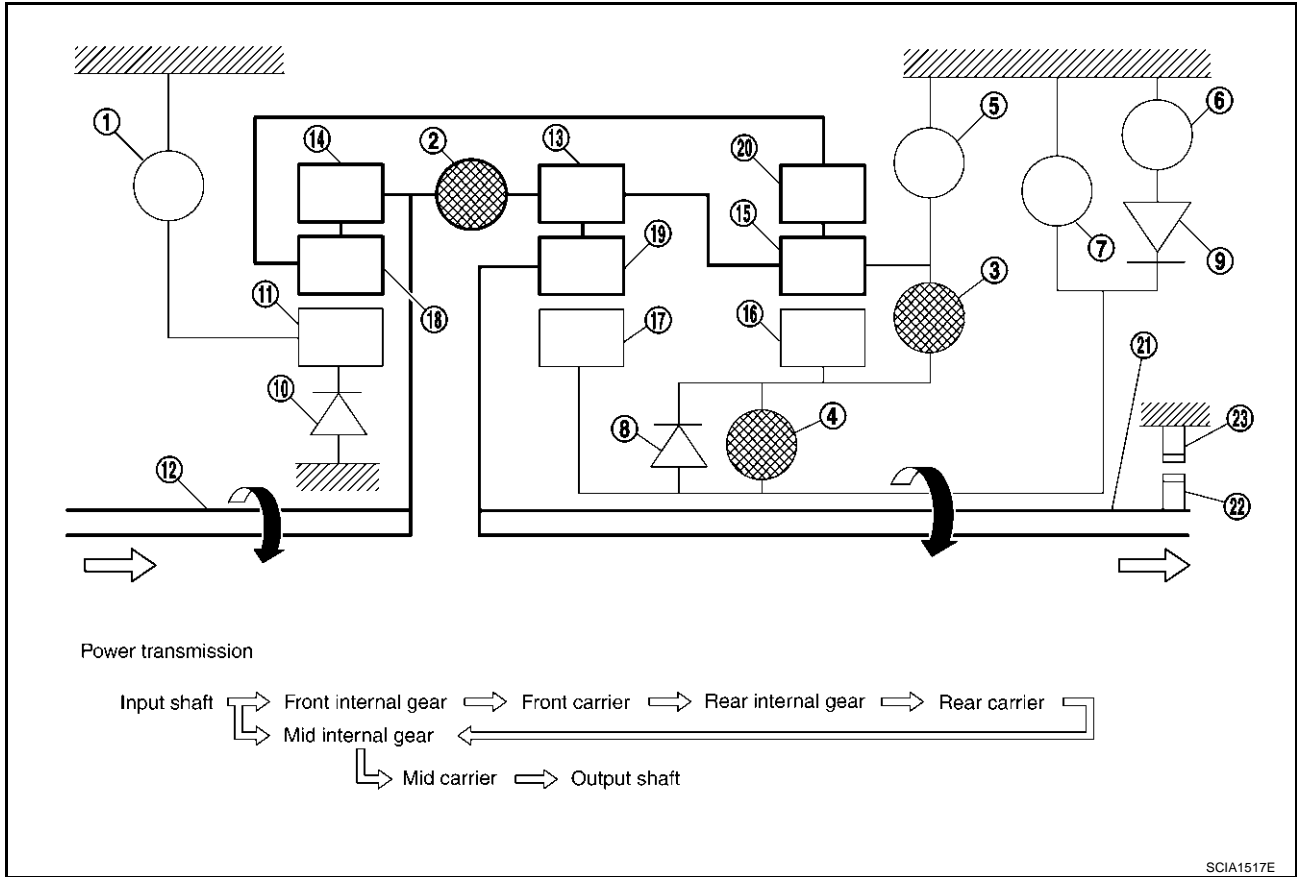


- | | | |
|--------------------------------|-------------------------|---------------------------|
| 1. Front brake | 2. Input clutch | 3. Direct clutch |
| 4. High and low reverse clutch | 5. Reverse brake | 6. Forward brake |
| 7. Low coast brake | 8. 1st one-way clutch | 9. Forward one-way clutch |
| 10. 3rd one-way clutch | 11. Front sun gear | 12. Input shaft |
| 13. Mid internal gear | 14. Front internal gear | 15. Rear carrier |
| 16. Rear sun gear | 17. Mid sun gear | 18. Front carrier |
| 19. Mid carrier | 20. Rear internal gear | 21. Output shaft |
| 22. Parking gear | 23. Parking pawl | |

A/T CONTROL SYSTEM

“D5 ” and “M5” position

- The front brake fastens the front sun gear.
- The input clutch is coupled, and the front internal gear and mid internal gear are connected.
- The high and low reverse clutch is coupled, and the mid sun gear and rear sun gear are connected.

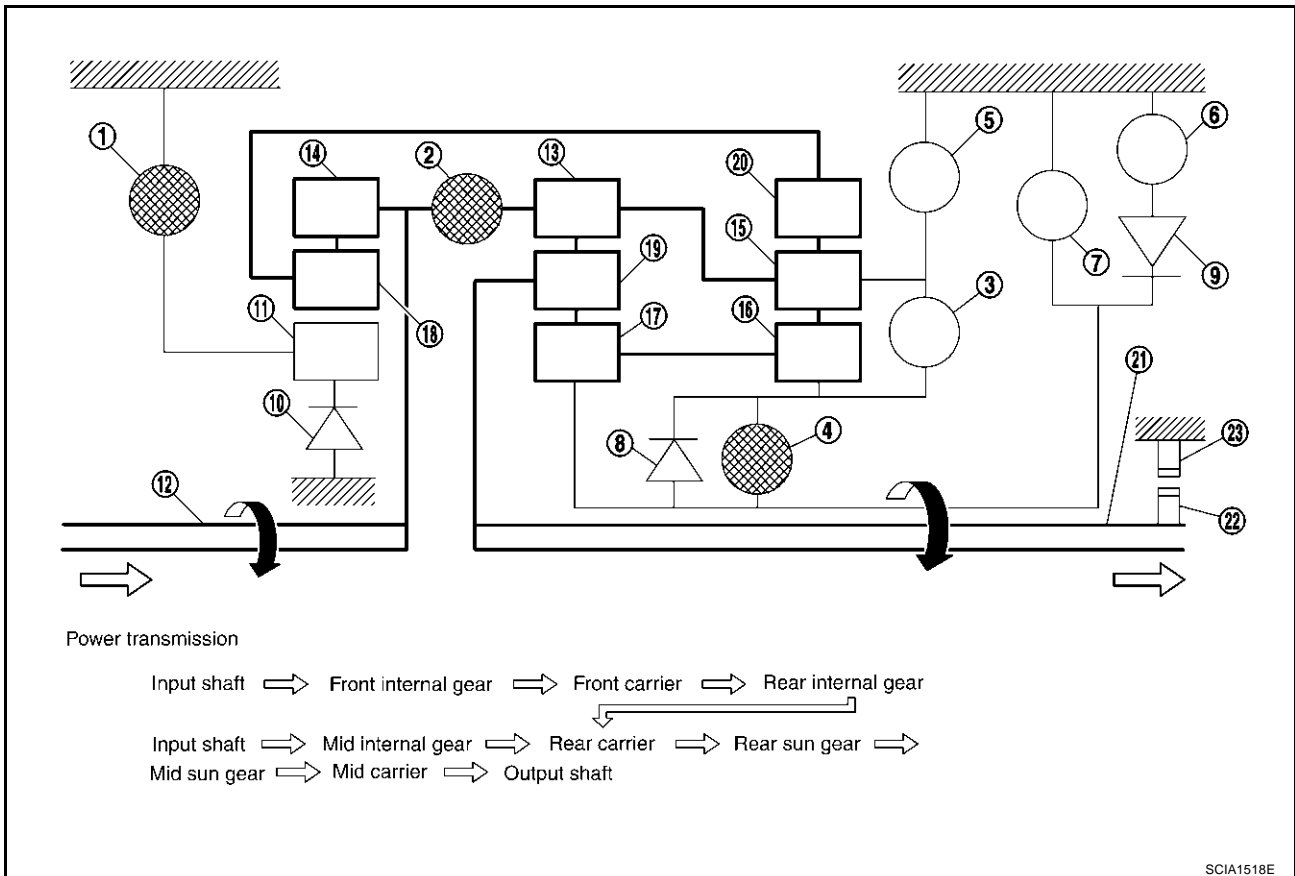


- | | | |
|--------------------------------|-------------------------|---------------------------|
| 1. Front brake | 2. Input clutch | 3. Direct clutch |
| 4. High and low reverse clutch | 5. Reverse brake | 6. Forward brake |
| 7. Low coast brake | 8. 1st one-way clutch | 9. Forward one-way clutch |
| 10. 3rd one-way clutch | 11. Front sun gear | 12. Input shaft |
| 13. Mid internal gear | 14. Front internal gear | 15. Rear carrier |
| 16. Rear sun gear | 17. Mid sun gear | 18. Front carrier |
| 19. Mid carrier | 20. Rear internal gear | 21. Output shaft |
| 22. Parking gear | 23. Parking pawl | |

A/T CONTROL SYSTEM

“R” position

- The front brake fastens the front sun gear.
- The high and low reverse clutch is coupled, and the mid sun gear and rear sun gear are connected.
- The reverse brake fastens the rear carrier.

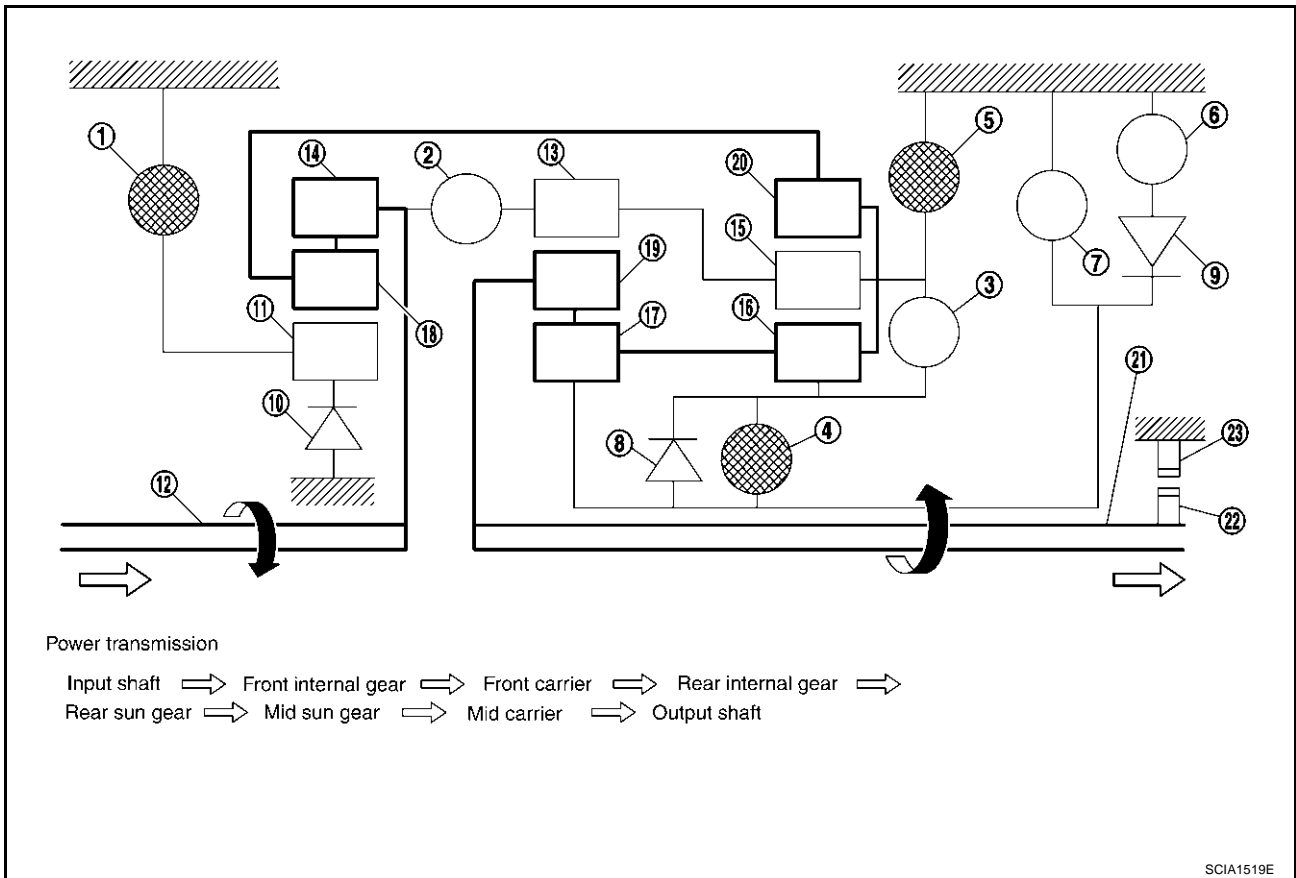

- | | | |
|--------------------------------|-------------------------|---------------------------|
| 1. Front brake | 2. Input clutch | 3. Direct clutch |
| 4. High and low reverse clutch | 5. Reverse brake | 6. Forward brake |
| 7. Low coast brake | 8. 1st one-way clutch | 9. Forward one-way clutch |
| 10. 3rd one-way clutch | 11. Front sun gear | 12. Input shaft |
| 13. Mid internal gear | 14. Front internal gear | 15. Rear carrier |
| 16. Rear sun gear | 17. Mid sun gear | 18. Front carrier |
| 19. Mid carrier | 20. Rear internal gear | 21. Output shaft |
| 22. Parking gear | 23. Parking pawl | |

A
B
AT
D
E
F
G
H
I
J
K
L
M

A/T CONTROL SYSTEM

ACS000H5

TCM Function

The function of the TCM is to:


- Receive input signals sent from various switches and sensors.
- Determine required line pressure, shifting point, lock-up operation, and engine brake operation.
- Send required output signals to the respective solenoids.

CONTROL SYSTEM OUTLINE

The automatic transmission senses vehicle operating conditions through various sensors or signals. It always controls the optimum shift position and reduces shifting and lock-up shocks.

SENSORS (or SIGNALS)		TCM		ACTUATORS
PNP switch Throttle position sensor Accelerator pedal position sensor Closed throttle position signal Wide open throttle position signal Engine speed signal A/T fluid temperature sensor Revolution sensor Vehicle speed sensor Manual mode switch signal Stop lamp switch signal Turbine revolution sensor	⇒	Shift control Line pressure control Lock-up control Engine brake control Timing control Fail-safe control Self-diagnosis CONSULT-II communication line Duet-EA control CAN system	⇒	Input clutch solenoid valve Direct clutch solenoid valve Front brake solenoid valve High & low reverse clutch solenoid valve Low coast brake solenoid valve Torque converter clutch solenoid valve Line pressure solenoid valve A/T CHECK indicator lamp

CONTROL SYSTEM DIAGRAM

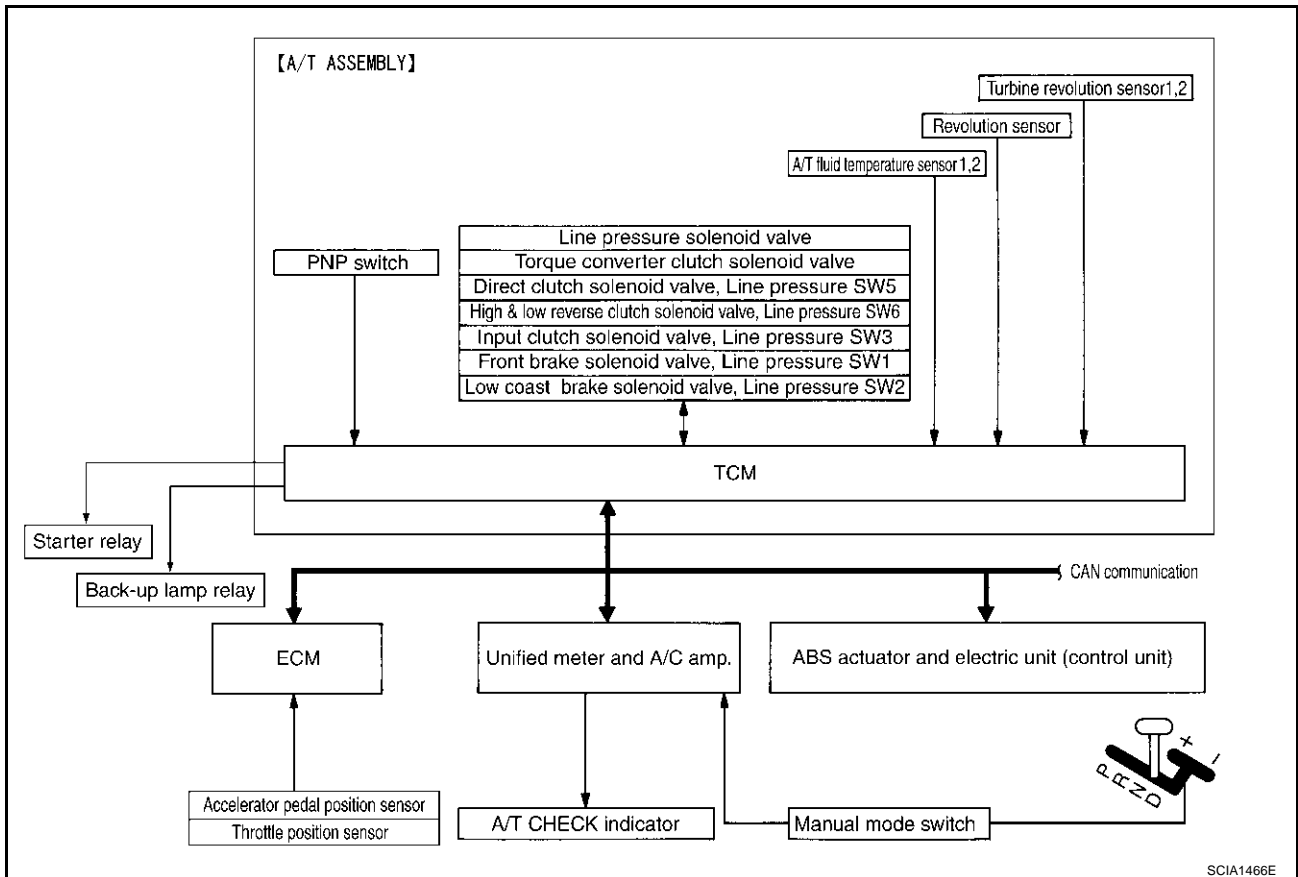

SCIA1466E

A/T CONTROL SYSTEM


ACS000H6

CAN Communication SYSTEM DESCRIPTION

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN COMMUNICATION UNIT

System diagram

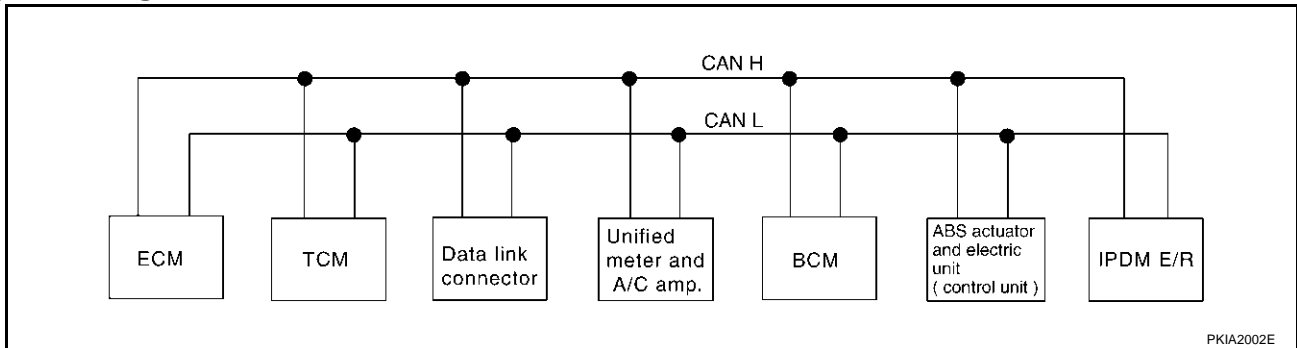

Input/output signal chart

T: Transmit R: Receive

Signals	ECM	TCM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
Engine speed signal	T	R	R		R	
Engine torque signal	T	R			R	
Engine coolant temperature signal	T	R	R			
Accelerator pedal position signal	T	R			R	
Closed throttle position signal	T	R				
Wide open throttle position signal	T	R				
Battery voltage signal	T	R				
Stop lamp switch signal		R	T			
Fuel consumption monitor signal	T		R			
A/T self-diagnosis signal	R	T				
A/T CHECK indicator lamp signal		T	R			
A/T position indicator signal		T	R		R	
Manual mode gear position signal		T	R			
ABS operation signal		R			T	
A/T shift schedule change demand signal		R			T	
A/C switch signal	R			T		
A/C compressor request signal	T					R
A/C compressor feedback signal	T		R			
Blower fan motor switch signal	R			T		
Cooling fan speed request signal	T					R
Position lights request signal			R	T		R
Low beam request signal				T		R
Low beam status signal	R					T

A/T CONTROL SYSTEM

Signals	ECM	TCM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
High beam request signal			R	T		R
High beam status signal	R					T
Vehicle speed signal			R		T	
	R	R	T	R		
Sleep request 1 signal			R	T		
Sleep request 2 signal				T		R
Wake up request 1 signal			R	T		
Door switch signal			R	T		R
Turn indicator signal			R	T		
Seat belt buckle switch signal			T	R		
Buzzer output signal			R	T		
Fuel level sensor signal	R		T			
Malfunction indicator lamp signal	T		R			
ASCD SET lamp signal	T		R			
ASCD operation signal	T	R				
ASCD CRUISE lamp signal	T		R			
ASCD OD cancel request signal	T	R				
Output shaft revolution signal	R	T				
Turbine revolution signal	R	T				
Front wiper request signal				T		R
Front wiper stop position signal				R		T
Rear window defogger switch signal				T		R
Rear window defogger control signal	R					T
Manual mode signal		R	T			
Not manual mode signal		R	T			
Manual mode shift up signal		R	T			
Manual mode shift down signal		R	T			
Manual mode indicator signal		T	R			
Hood switch signal				R		T
Theft warning horn request signal				T		R
Horn chirp signal				T		R
ABS warning lamp signal			R		T	
TCS OFF indicator lamp signal			R		T	
SLIP indicator lamp signal			R		T	
Brake warning lamp signal			R		T	

A/T CONTROL SYSTEM

Input/Output Signal of TCM

ACS000H7

Control item		Line pressure control	Vehicle speed control	Shift control	Lock-up control	Engine brake control	Fail-safe function (*3)	Self-diagnostics function	
Input	Accelerator pedal position signal (*5)	X	X	X	X	X	X	X	
	Vehicle speed sensor A/T (revolution sensor)	X	X	X	X		X	X	
	Vehicle speed sensor MTR(*1) (*5)	X	X	X	X			X	
	Closed throttle position signal(*5)	(*2) X	(*2) X		X	(*2) X		(*4) X	
	Wide open throttle position signal(*5)	(*2) X	(*2) X			(*2) X		(*4) X	
	Turbine revolution sensor 1	X	X		X		X	X	
	Turbine revolution sensor 2 (for 4th speed only)	X	X		X		X	X	
	Engine speed signals(*5)				X			X	
	PNP switch	X	X	X	X	X	X	(*4) X	
	Stop lamp switch signal(*5)		X			X		(*4) X	
	A/T fluid temperature sensors 1, 2	X	X	X	X	X	X	X	
	ASCD	Operation signal(*5)		X	X	X	X		
		Overdrive cancel signal(*5)		X		X	X		
	TCM power supply voltage signal		X	X	X	X	X		X
Output	Direct clutch solenoid (oil pressure switch 5)		X	X			X	X	
	Input clutch solenoid (oil pressure switch 3)		X	X			X	X	
	High & low reverse clutch solenoid (oil pressure switch 6)		X	X			X	X	
	Front brake solenoid (oil pressure switch 1)		X	X			X	X	
	Low coast brake solenoid (oil pressure switch 2)		X	X		X	X	X	
	Line pressure solenoid	X	X	X	X	X	X	X	
	TCC solenoid				X		X	X	
	Self-diagnostics table(*5)								X
	Starter relay							X	X

*1: Spare for vehicle speed sensor-A/T (revolution sensor)

*2: Spare for accelerator pedal position signal

*3: If these input and output signals are different, the TCM triggers the fail-safe function.

*4: Used as a condition for starting self-diagnostics; if self-diagnostics are not started, it is judged that there is some kind of error.


*5: CAN communications

A/T CONTROL SYSTEM

ACS000HB

Line Pressure Control

- When an input torque signal equivalent to the engine drive force is sent from the ECM to the TCM, the TCM controls the line pressure solenoid.
- This line pressure solenoid controls the pressure regulator valve as the signal pressure and adjusts the pressure of the operating oil discharged from the oil pump to the line pressure most appropriate to the driving state.

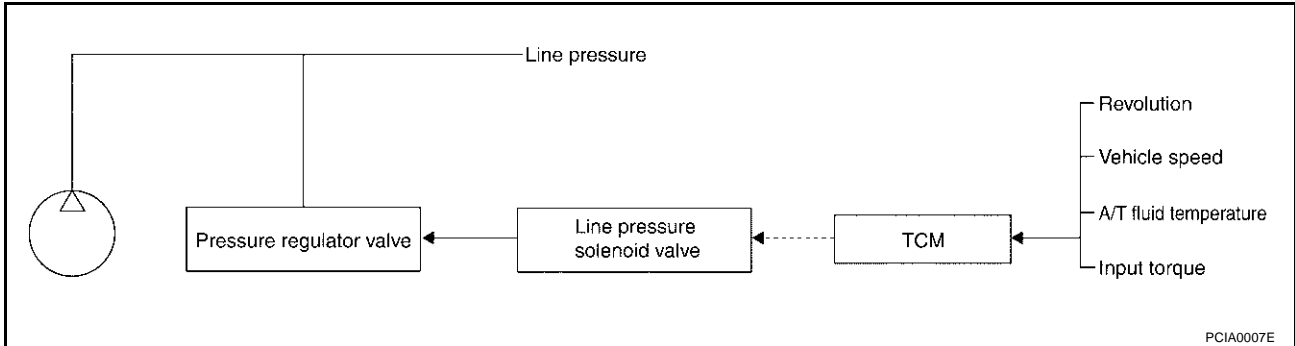


LINE PRESSURE CONTROL IS BASED ON THE TCM LINE PRESSURE CHARACTERISTIC PATTERN

- The TCM has stored in memory a number of patterns for the optimum line pressure characteristic for the driving state.
- In order to obtain the most appropriate line pressure characteristic to meet the current driving state, the TCM controls the line pressure solenoid current valve and thus controls the line pressure.


Normal control

Each clutch is adjusted to the necessary pressure to match the engine drive force.

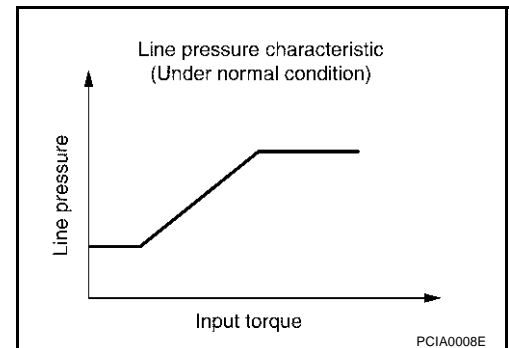

Back-up control (Engine brake)


When the select operation is executed during driving and the transmission is shifted down, the line pressure is set according to the vehicle speed.

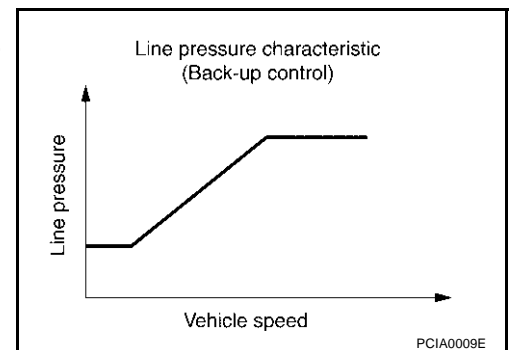

A/T CONTROL SYSTEM


During shift change

The necessary and adequate line pressure for shift change is set. For this reason, line pressure pattern setting corresponds to input torque and gearshift selection. Also, line pressure characteristic is set according to engine speed, during engine brake operation.

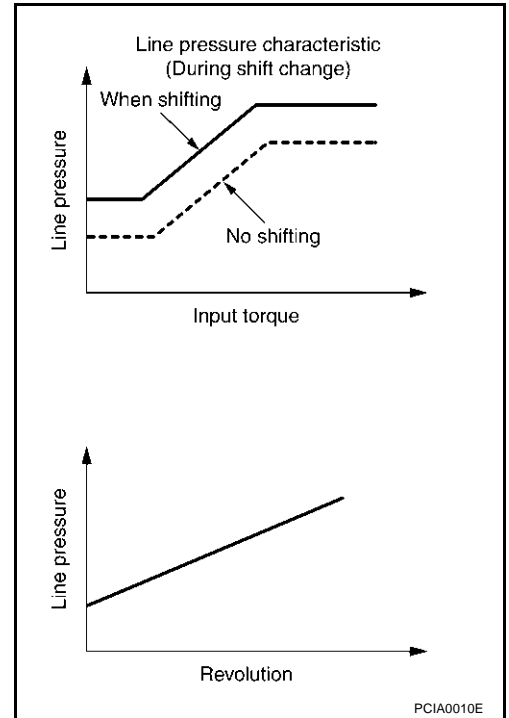


At low fluid temperature

When the A/T fluid temperature drops below the prescribed temperature, in order to speed up the action of each friction element, the line pressure is set higher than the normal line pressure characteristic.

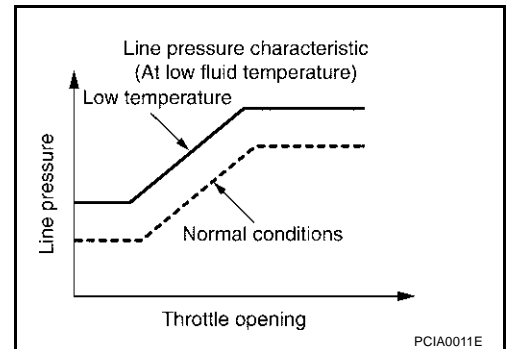

Shift Control

The clutch pressure control solenoid is controlled by the signals from the switches and sensors. Thus, the clutch pressure is adjusted to be appropriate to the engine load state and vehicle driving state. It becomes possible to finely control the clutch hydraulic pressure with high precision and a smoother shift change characteristic is attained.

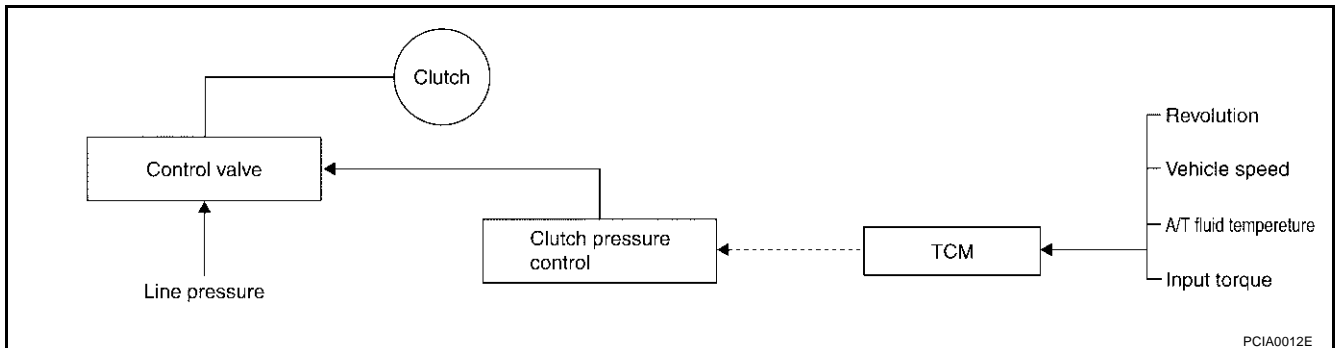


SHIFT CHANGE

The clutch is controlled with the optimum timing and oil pressure by the engine speed, engine torque information, etc.

A/T CONTROL SYSTEM

Shift change system diagram

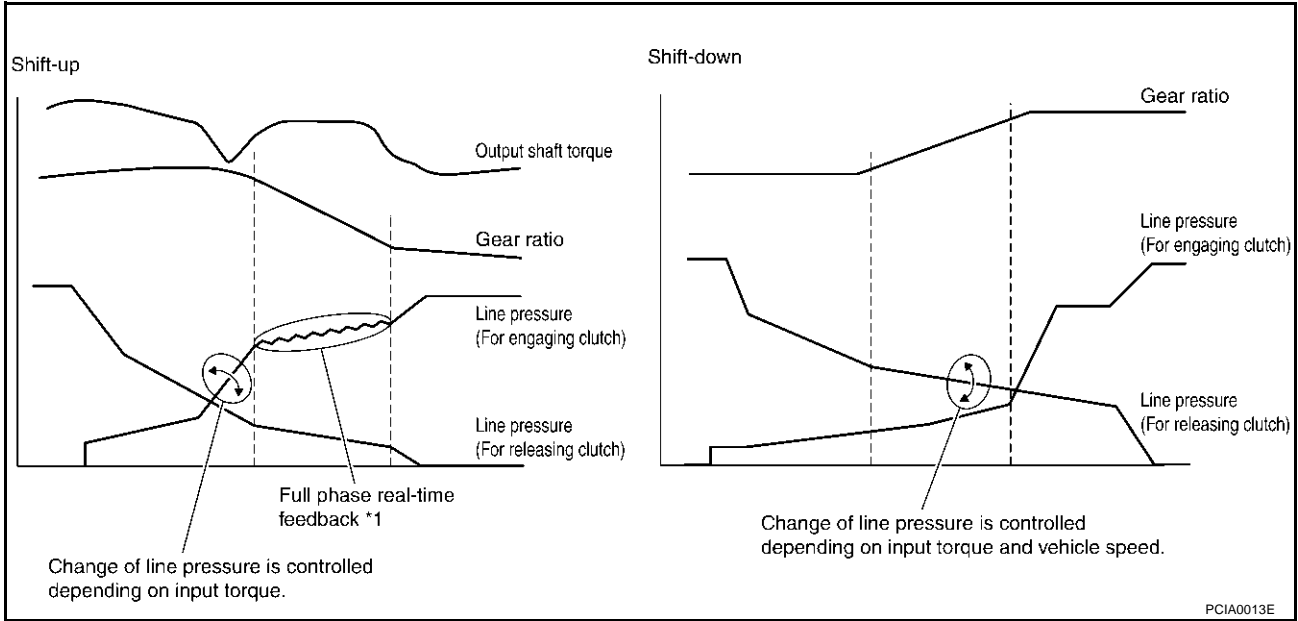

*1: Full phase real-time feedback control monitors movement of gear ratio at gear change, and controls oil pressure at real-time to achieve the best gear ratio.

Lock-Up Control

ACS000HA

The torque converter clutch piston in the torque converter is engaged to eliminate torque converter slip to increase power transmission efficiency.


The torque converter clutch control valve operation is controlled by the torque converter clutch solenoid valve, which is controlled by a signal from TCM, and the torque converter clutch control valve engages or releases the torque converter clutch piston.

Lock-up Operation Condition Table

Select lever	D position		M5 position	M4 position	M3 position	M2 position
Gear position	5	4	5	4	3	2
Lock-up	×	—	×	×	×	×
Slip lock-up	×	×	—	—	—	—

TORQUE CONVERTER CLUTCH CONTROL VALVE CONTROL

Lock-up control system diagram

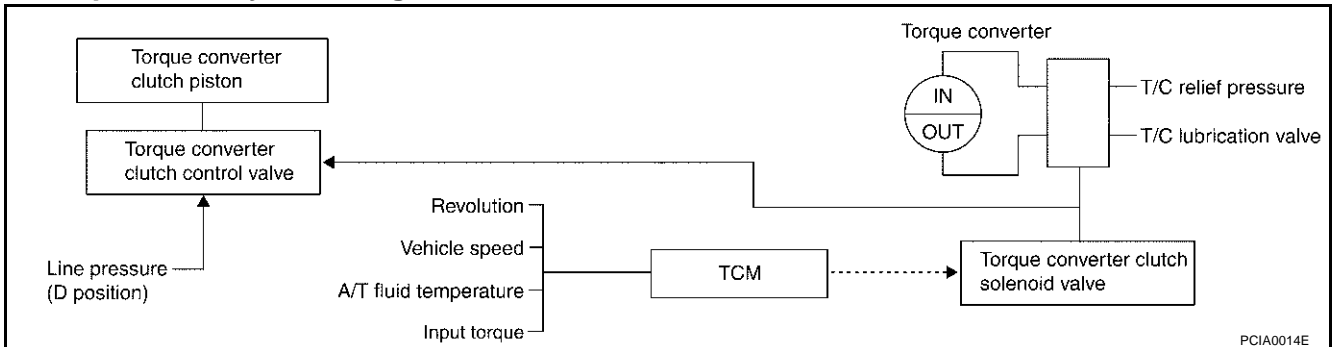

Lock-up released

- In the lock-up released state, the torque converter clutch control valve is set into the unlocked state by the torque converter clutch solenoid and the lock-up apply pressure is drained. In this way, the torque converter clutch piston is not coupled.

A/T CONTROL SYSTEM

Lock-up applied

- In the lock-up applied state, the torque converter clutch control valve is set into the locked state by the torque converter clutch solenoid and lock-up apply pressure is generated. In this way, the torque converter clutch piston is pressed and coupled.

SMOOTH LOCK-UP CONTROL

When shifting from the lock-up released state to the lock-up applied state, the current output to the torque converter clutch solenoid is controlled with the TCM. In this way, when shifting to the lock-up applied state, the torque converter clutch is temporarily set to the half-clutched state to reduce the shock.

Half-clutched state

- The current output from the TCM to the torque converter clutch solenoid is varied to gradually increase the torque converter clutch solenoid pressure. In this way, the lock-up apply pressure gradually rises and while the torque converter clutch piston is put into half-clutched status, the torque converter clutch piston operating pressure is increased and the coupling is completed smoothly.


Slip lock-up control

- In the slip region, the torque converter clutch solenoid current is controlled with the TCM to put it into the half-clutched state. This absorbs the engine torque fluctuation and lock-up operates from low speed. This raises the fuel efficiency for 4th and 5th gears at both low speed and when the accelerator has a low degree of opening.

Engine Brake Control

ACS000HB

- The forward one-way clutch transmits the drive force from the engine to the rear wheels. But the reverse drive from the rear wheels is not transmitted to the engine because the one-way clutch is idling. Therefore, the low coast brake solenoid is operated to prevent the forward one-way clutch from idling and the engine brake is operated in the same manner as conventionally.

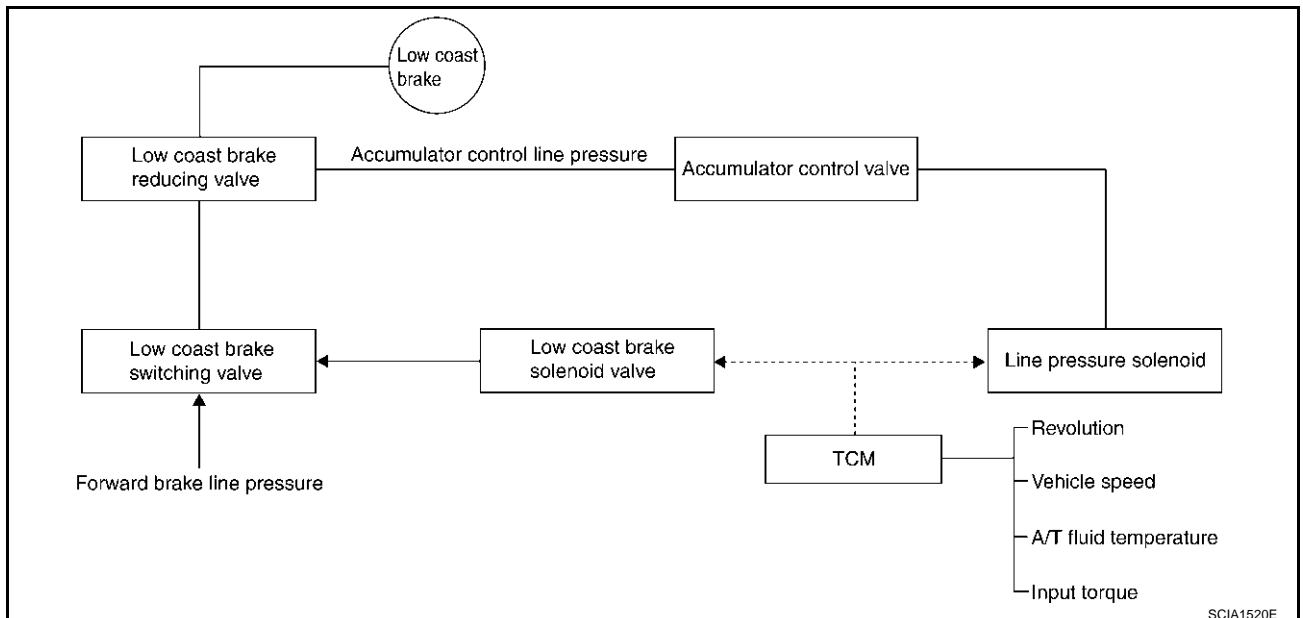

- The operation of the low coast brake solenoid switches the low coast brake switching valve and controls the coupling and releasing of the low coast brake. The low coast brake reducing valve controls the low coast brake coupling force.

A/T CONTROL SYSTEM

Control Valve FUNCTION OF CONTROL VALVE

ACS000HC

Name	Function
Torque converter regulator valve	In order to prevent the pressure supplied to the torque converter from being excessive, the line pressure is adjusted to the optimum pressure (torque converter operating pressure).
Pressure regulator valve Pressure regulator plug Pressure regulator sleeve	Adjusts the oil discharged from the oil pump to the optimum pressure (line pressure) for the driving state.
Front brake control valve	When the front brake is coupled, adjusts the line pressure to the optimum pressure (front brake pressure) and supplies it to the front brake. (In 1st, 2nd, 3rd, and 5th gears, adjusts the clutch pressure.)
Accumulator control valve	Adjusts the pressure (accumulator control pressure) acting on the accumulator piston and low coast reducing valve to the pressure appropriate to the driving state.
Pilot valve A	Adjusts the line pressure and produces the constant pressure (pilot pressure) required for line pressure control, shift change control, and lock-up control.
Pilot valve B	Adjusts the line pressure and produces the constant pressure (pilot pressure) required for shift change control.
Low coast brake switching valve	During engine braking, supplies the line pressure to the low coast brake reducing valve.
Low coast brake reducing valve	When the low coast brake is coupled, adjusts the line pressure to the optimum pressure (low coast brake pressure) and supplies it to the low coast brake.
N-R accumulator	Produces the stabilizing pressure for when N-R is selected.
Direct clutch piston switching valve	Operates in 4th gear and switches the direct clutch coupling capacity.
High and low reverse clutch control valve	When the high and low reverse clutch is coupled, adjusts the line pressure to the optimum pressure (high and low reverse clutch pressure) and supplies it to the high and low reverse clutch. (In 1st, 3rd, 4th and 5th gears, adjusts the clutch pressure.)
Input clutch control valve	When the input clutch is coupled, adjusts the line pressure to the optimum pressure (input clutch pressure) and supplies it to the input clutch. (In 4th and 5th gears, adjusts the clutch pressure.)
Direct clutch control valve	When the direct clutch is coupled, adjusts the line pressure to the optimum pressure (direct clutch pressure) and supplies it to the direct clutch. (In 2nd, 3rd, and 4th gears, adjusts the clutch pressure.)
TCC control valve TCC control plug TCC control sleeve	Switches the lock-up to operating or released. Also, by executing the lock-up operation transiently, lock-up smoothly.
Torque converter lubrication valve	Operates during lock-up to switch the torque converter, cooling, and lubrication system oil path.
Cool bypass valve	Allows excess oil to bypass cooler circuit without being fed into it.
Line pressure relief valve	Discharges excess oil from line pressure circuit.
N-D accumulator	Produces the stabilizing pressure for when N-D is selected.
Manual valve	Sends line pressure to each circuit according to the select position. The circuits to which the line pressure is not sent drain.

A/T CONTROL SYSTEM

FUNCTION OF PRESSURE SWITCH

Name	Function
Pressure switch 1 (FR/B)	Detects any malfunction in the front brake hydraulic pressure. When it detects any malfunction, it puts the system into fail-safe mode.
Pressure switch 2 (LC/B)	Detects any malfunction in the low coast brake hydraulic pressure. When it detects any malfunction, it puts the system into fail-safe mode.
Pressure switch 3 (I/C)	Detects any malfunction in the input clutch hydraulic pressure. When it detects any malfunction, it puts the system into fail-safe mode.
Pressure switch 5 (D/C)	Detects any malfunction in the direct clutch hydraulic pressure. When it detects any malfunction, it puts the system into fail-safe mode.
Pressure switch 6 (H&LR/C)	Detects any malfunction in the high & low reverse clutch hydraulic pressure. When it detects any malfunction, it puts the system into fail-safe mode.

A
B
AT
D
E
F
G
H
I
J
K
L
M

ON BOARD DIAGNOSTIC (OBD) SYSTEM

PFP:00028

Introduction

ACS000HD

The A/T system has two self-diagnostic systems.

The first is the emission-related on board diagnostic system (OBD-II) performed by the TCM in combination with the ECM. The malfunction is indicated by the MIL (malfunction indicator lamp) and is stored as a DTC in the ECM memory but not the TCM memory.

The second is the TCM original self-diagnosis indicated by the A/T CHECK indicator lamp. The malfunction is stored in the TCM memory. The detected items are overlapped with OBD-II self-diagnostic items. For detail, refer to [AT-94, "Self-diagnostic result test mode"](#).

OBD-II Function for A/T System

ACS000HE

The ECM provides emission-related on board diagnostic (OBD-II) functions for the A/T system. One function is to receive a signal from the TCM used with OBD-related parts of the A/T system. The signal is sent to the ECM when a malfunction occurs in the corresponding OBD-related part. The other function is to indicate a diagnostic result by means of the MIL (malfunction indicator lamp) on the instrument panel. Sensors, switches and solenoid valves are used as sensing elements.

The MIL automatically illuminates in One or Two Trip Detection Logic when a malfunction is sensed in relation to A/T system parts.

One or Two Trip Detection Logic of OBD-II ONE TRIP DETECTION LOGIC

ACS000HF

If a malfunction is sensed during the first test drive, the MIL will illuminate and the malfunction will be stored in the ECM memory as a DTC. The TCM is not provided with such a memory function.

TWO TRIP DETECTION LOGIC

When a malfunction is sensed during the first test drive, it is stored in the ECM memory as a 1st trip DTC (diagnostic trouble code) or 1st trip freeze frame data. At this point, the MIL will not illuminate. — First Trip

If the same malfunction as that experienced during the first test drive is sensed during the second test drive, the MIL will illuminate. — Second Trip

The "trip" in the "One or Two Trip Detection Logic" means a driving mode in which self-diagnosis is performed during vehicle operation.

OBD-II Diagnostic Trouble Code (DTC) HOW TO READ DTC AND 1ST TRIP DTC

ACS000HG


DTC and 1st trip DTC can be read by the following methods.

( with **CONSULT-II** or ( **GST**) CONSULT-II or GST (Generic Scan Tool) Examples: P0705, P0720 etc. These DTC are prescribed by SAE J2012.

(CONSULT-II also displays the malfunctioning component or system.)

- **1st trip DTC No. is the same as DTC No.**
- **Output of the diagnostic trouble code indicates that the indicated circuit has a malfunction. However, in case of the Mode II and GST, they do not indicate whether the malfunction is still occurring or occurred in the past and returned to normal. CONSULT-II can identify them as shown below, therefore, CONSULT-II (if available) is recommended.**

A sample of CONSULT-II display for DTC and 1st trip DTC is shown on the next page. DTC or 1st trip DTC of a malfunction is displayed in SELF-DIAGNOSTIC RESULTS mode for "ENGINE" with CONSULT-II. Time data indicates how many times the vehicle was driven after the last detection of a DTC.

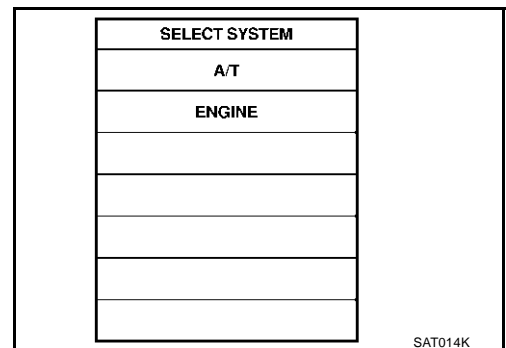

ON BOARD DIAGNOSTIC (OBD) SYSTEM

If the DTC is being detected currently, the time data will be "0".

SELF-DIAG RESULTS	
DTC RESULTS	TIME
PNP SW/CIRC [P0705]	0

SAT015K

If a 1st trip DTC is stored in the ECM, the time data will be "1t".

SELF-DIAG RESULTS	
DTC RESULTS	TIME
PNP SW/CIRC [P0705]	1 t

SAT016K

Freeze frame data and 1st trip freeze frame data

The ECM has a memory function, which stores the driving condition such as fuel system status, calculated load value, engine coolant temperature, short term fuel trim, long term fuel trim, engine speed and vehicle speed at the moment the ECM detects a malfunction.

Data which are stored in the ECM memory, along with the 1st trip DTC, are called 1st trip freeze frame data, and the data, stored together with the DTC data, are called freeze frame data and displayed on CONSULT-II or GST. The 1st trip freeze frame data can only be displayed on the CONSULT-II screen, not on the GST. For detail, refer to [EC-112, "CONSULT-II Function"](#).

Only one set of freeze frame data (either 1st trip freeze frame data or freeze frame data) can be stored in the ECM. 1st trip freeze frame data is stored in the ECM memory along with the 1st trip DTC. There is no priority for 1st trip freeze frame data and it is updated each time a different 1st trip DTC is detected. However, once freeze frame data (2nd trip detection/MIL on) is stored in the ECM memory, 1st trip freeze frame data is no longer stored. Remember, only one set of freeze frame data can be stored in the ECM. The ECM has the following priorities to update the data.

Priority	Items
1	Freeze frame data Misfire — DTC: P0300 - P0306 Fuel Injection System Function — DTC: P0171, P0172, P0174, P0175
2	Except the above items (Includes A/T related items)
3	1st trip freeze frame data

Both 1st trip freeze frame data and freeze frame data (along with the DTC) are cleared when the ECM memory is erased.

HOW TO ERASE DTC

The diagnostic trouble code can be erased by CONSULT-II, GST or ECM DIAGNOSTIC TEST MODE as described following.

- If the battery cable is disconnected, the diagnostic trouble code will be lost within 24 hours.
- When you erase the DTC, using CONSULT-II or GST is easier and quicker than switching the mode selector on the ECM.

The following emission-related diagnostic information is cleared from the ECM memory when erasing DTC related to OBD-II. For details, refer to [EC-56, "Emission-related Diagnostic Information"](#).

- Diagnostic trouble codes (DTC)
- 1st trip diagnostic trouble codes (1st trip DTC)
- Freeze frame data

ON BOARD DIAGNOSTIC (OBD) SYSTEM

- 1st trip freeze frame data
- System readiness test (SRT) codes
- Test values

HOW TO ERASE DTC (WITH CONSULT-II)

- If a DTC is displayed for both ECM and TCM, it is necessary to be erased for both ECM and TCM.
1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 10 seconds and then turn it "ON" (engine stopped) again.
 2. Turn CONSULT-II "ON" and touch "A/T".
 3. Touch "SELF-DIAG RESULTS".
 4. Touch "ERASE". (The DTC in the TCM will be erased.) Then touch "BACK" twice.
 5. Touch "ENGINE".
 6. Touch "SELF-DIAG RESULTS".
 7. Touch "ERASE". (The DTC in the ECM will be erased.)

How to erase DTC (With CONSULT-II)

1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 10 seconds and then turn it "ON" (engine stopped) again.

SELECT SYSTEM
A/T
ENGINE


2. Turn CONSULT-II "ON", and touch "A/T".

SELECT DIAG MODE
SELF-DIAG RESULTS
DATA MONITOR
CAN DIAG SUPPORT MNTR
FUNCTION TEST
DTC WORK SUPPORT
ECU PART NUMBER

3. Touch "SELF-DIAG RESULTS".

SELF-DIAG RESULTS
DTC RESULTS
TCC SOLENOID/CIRC [P0740]

4. Touch "ERASE". (The DTC in the TCM will be erased.)



SELECT SYSTEM
A/T
ENGINE

5. Touch "ENGINE".

SELECT DIAG MODE
WORK SUPPORT
SELF-DIAG RESULTS
DATA MONITOR
DATA MONITOR(SPEC)
CAN DIAG SUPPORT MNTR
ACTIVE TEST

6. Touch "SELF-DIAG RESULTS".

SELF-DIAG RESULTS	
DTC RESULTS	TIME
TCC SOLENOID/CIRC [P0740]	0

7. Touch "ERASE". (The DTC in the TCM will be erased.)

SCIA5671E

ON BOARD DIAGNOSTIC (OBD) SYSTEM

HOW TO ERASE DTC (WITH GST)

1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 10 seconds and then turn it "ON" (engine stopped) again.
2. Perform "TCM SELF-DIAGNOSTIC PROCEDURE (No Tools)". Refer to [AT-103, "TCM SELF-DIAGNOSTIC PROCEDURE \(NO TOOLS\)"](#). (The engine warm-up step can be skipped when performing the diagnosis only to erase the DTC.)
3. Select Mode 4 with Generic Scan Tool (GST). For details, refer to [EC-124, "Generic Scan Tool \(GST\) Function"](#).

HOW TO ERASE DTC (NO TOOLS)

The A/T CHECK indicator lamp is located on the instrument panel.


1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 10 seconds and then turn it "ON" (engine stopped) again.
2. Perform "TCM SELF-DIAGNOSTIC PROCEDURE (No Tools)". Refer to [AT-103, "TCM SELF-DIAGNOSTIC PROCEDURE \(NO TOOLS\)"](#). (The engine warm-up step can be skipped when performing the diagnosis only to erase the DTC.)
3. Perform "OBD-II SELF-DIAGNOSTIC PROCEDURE (No tools)". Refer to [EC-69, "How to Erase DTC"](#).

Malfunction Indicator Lamp (MIL) DESCRIPTION

ACS000HH

The MIL is located on the instrument panel.

1. The MIL will light up when the ignition switch is turned "ON" without the engine running. This is a bulb check.
 - If the MIL does not light up, refer to [DI-69, "WARNING LAMPS"](#), or see [EC-631, "MIL AND DATA LINK CONNECTOR"](#).
2. When the engine is started, the MIL should go off. If the MIL remains on, the on board diagnostic system has detected an engine system malfunction.

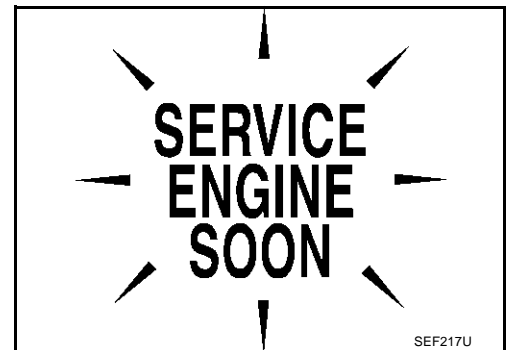

TROUBLE DIAGNOSIS

TROUBLE DIAGNOSIS

PFP:00004

DTC Inspection Priority Chart

ACS000HI

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

NOTE:

If DTC U1000 is displayed with other DTCs, first perform the trouble diagnosis for DTC U1000. Refer to [AT-105](#).

Priority	Detected items (DTC)
1	U1000 CAN communication line
2	Except above

Fail-Safe

ACS000HJ

The TCM has an electrical fail-safe mode. This mode makes it possible to operate even if there is an error in a main electronic control input/output signal circuit.

In fail-safe mode, even if the selector lever is "D" or "M" mode, the transmission is fixed in 2nd or 4th (depending on the breakdown position), so the customer should feel "slipping" or "poor acceleration". When fail-safe mode is triggered, when the ignition switch is switched "ON", the A/T CHECK indicator lamp flashes for about 8 seconds. (Refer to [AT-103, "TCM SELF-DIAGNOSTIC PROCEDURE \(NO TOOLS\)"](#)).

Even when the electronic circuits are normal, under special conditions (for example, when slamming on the brake with the wheels spinning drastically and stopping the tire rotation), the transmission can go into fail-safe mode. If this happens, switch "OFF" the ignition switch for 10 seconds, then switch it "ON" again to return to the normal shift pattern. Also, the A/T CHECK indicator lamp flashes for about 8 seconds once, then is cleared. Therefore, the customer's vehicle has returned to normal, so handle according to the "diagnostics flow" (Refer to [AT-43](#)).

FAIL-SAFE FUNCTION

If any malfunction occurs in a sensor or solenoid, this function controls the A/T to mark driving possible.

Vehicle speed sensor A/T (revolution sensor)

- Signals are input from two systems - from vehicle speed sensor A/T (revolution sensor) installed on the transmission and from combination meter so normal driving is possible even if there is a malfunction in one of the systems. And if vehicle speed sensor A/T (revolution sensor) has unusual cases, 5th gear and manual mode are prohibited.

Accelerator pedal position sensor

- If there is a malfunction in one of the systems, the accelerator opening angle is controlled by ECM according to a pre-determined accelerator angle to make driving possible. And if there are malfunctions in tow systems, the engine speed is fixed by ECM to a pre-determined engine speed to make driving possible.

Throttle position sensor

- If there is a malfunction in one of the systems, the accelerator opening angle is controlled by ECM according to a pre-determined accelerator angle to make driving possible. And if there are malfunctions in tow systems, the accelerator opening angle is controlled by the idle signal sent from the ECM which is based on input indicating either idle condition or off-idle condition (pre-determined accelerator opening) in order to make driving possible.

PNP switch

- In the unlikely event that a malfunction signal enters the TCM, the position indicator is switched "OFF", the starter relay is switched "OFF" (starter starting is disabled), the back-up lamp relay switched "OFF" (back-up lamp is OFF) and the position is fixed to the "D" range to make driving possible.

Starter relay

- The starter relay is switched "OFF". (Starter starting is disabled.)

TROUBLE DIAGNOSIS

A/T Interlock

- If there is an A/T interlock judgment malfunction, the transmission is fixed in 2nd gear to make driving possible.

NOTE:

When the vehicle is driven fixed in 2nd gear a turbine revolution sensor malfunction is displayed, but this is not a turbine revolution sensor malfunction.

- When the coupling pattern below is detected, the fail-safe action corresponding to the pattern is executed.

A/T INTERLOCK COUPLING PATTERN TABLE

●: NG X: OK

Gear position		ATF pressure switch output					Fail-safe function	Clutch pressure output pattern after fail-safe function					
		SW3 (I/C)	SW6 (HLR/C)	SW5 (D/C)	SW1 (FR/B)	SW2 (LC/B)		I/C	HLR/C	D/C	FR/B	LC/B	L/U
A/T interlock coupling pattern	3rd	–	X	X	–	●	Held in 2nd gear	OFF	OFF	ON	OFF	OFF	OFF
	4th	–	X	X	–	●	Held in 2nd gear	OFF	OFF	ON	OFF	OFF	OFF
	5th	X	X	–	X	●	Held in 2nd gear	OFF	OFF	ON	OFF	OFF	OFF

A/T 1st engine braking

- When there is an A/T first gear engine brake judgment malfunction, the low coast brake solenoid is switched “OFF” to avoid the engine brake operation.

Line pressure solenoid

- The solenoid is switched “OFF” and the line pressure is set to the maximum hydraulic pressure to make driving possible.

Torque converter clutch solenoid

- The solenoid is switched “OFF” to release the lock-up.

Low coast brake solenoid

- When a (electrical or functional) malfunction occurs, in order to make driving possible, if the solenoid is “ON”, the transmission is held in 2nd gear; if the solenoid is “OFF”, the transmission is held in 4th gear. (engine brake is not applied in 1st and 2nd gear.)

Input clutch solenoid

- If a (electrical or functional) malfunction occurs with the solenoid either “ON” or “OFF”, the transmission is held in 4th gear to make driving possible.

Direct clutch solenoid

- If a (electrical or functional) malfunction occurs with the solenoid either “ON” or “OFF”, the transmission is held in 4th gear to make driving possible.

Front brake solenoid

- If a (electrical or functional) malfunction occurs with the solenoid “ON”, in order to make driving possible, the A/T is held in 5th gear; if the solenoid is OFF, 4th gear.

High and low reverse clutch solenoid

- If a (electrical or functional) malfunction occurs with the solenoid either “ON” or “OFF”, the transmission is held in 4th gear to make driving possible.

Turbine revolution sensor 1 or 2

- The control is the same as if there were no turbine revolution sensors, 5th gear and manual mode are prohibited.

TROUBLE DIAGNOSIS


How To Perform Trouble Diagnosis For Quick and Accurate Repair INTRODUCTION

ACS000HK

The TCM receives a signal from the vehicle speed sensor, accelerator pedal position sensor (throttle position sensor) or PNP switch and provides shift control or lock-up control via A/T solenoid valves.


The TCM also communicates with the ECM by means of a signal sent from sensing elements used with the OBD-related parts of the A/T system for malfunction-diagnostic purposes. The TCM is capable of diagnosing malfunctioning parts while the ECM can store malfunctions in its memory.

Input and output signals must always be correct and stable in the operation of the A/T system. The A/T system must be in good operating condition and be free of valve seizure, solenoid valve malfunction, etc.

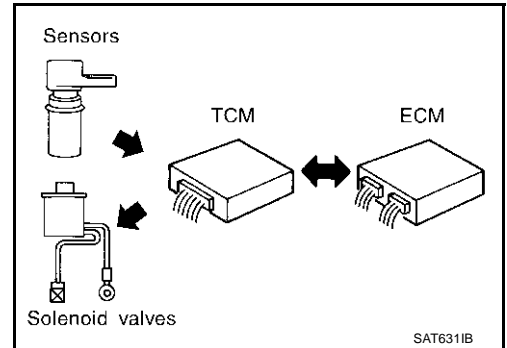

It is much more difficult to diagnose a error that occurs intermittently rather than continuously. Most intermittent errors are caused by poor electric connections or improper wiring. In this case, careful checking of suspected circuits may help prevent the replacement of good parts.


A visual check only may not find the cause of the errors. A road test with CONSULT-II (or GST) or a circuit tester connected should be performed. Follow the [AT-43, "WORK FLOW"](#) .

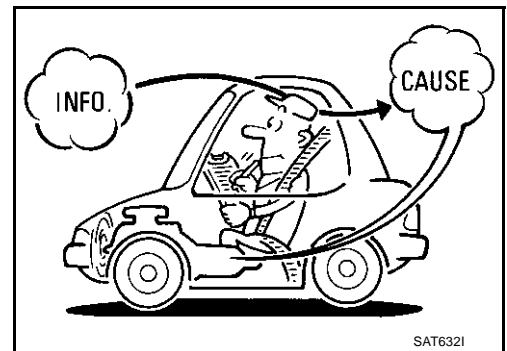

Before undertaking actual checks, take a few minutes to talk with a customer who approaches with a driveability complaint. The customer can supply good information about such errors, especially intermittent ones. Find out what symptoms are present and under what conditions they occur. A "Diagnostic Worksheet" as shown on the example (Refer to [AT-44](#)) should be used.

Start your diagnosis by looking for "conventional" errors first. This will help troubleshoot driveability errors on an electronically controlled engine vehicle.

Also check related Service bulletins.

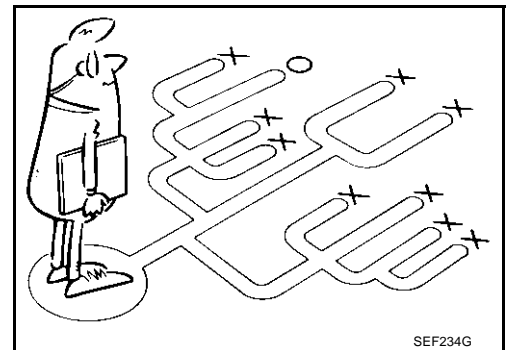


TROUBLE DIAGNOSIS

WORK FLOW

A good understanding of the malfunction conditions can make troubleshooting faster and more accurate. In general, each customer feels differently about a malfunction. It is important to fully understand the symptoms or conditions for a customer complaint.

Make good use of the two sheets provided, "Information From Customer" (Refer to [AT-44](#)) and "Diagnostic Worksheet" (Refer to [AT-44](#)), to perform the best troubleshooting possible.

Work flow chart

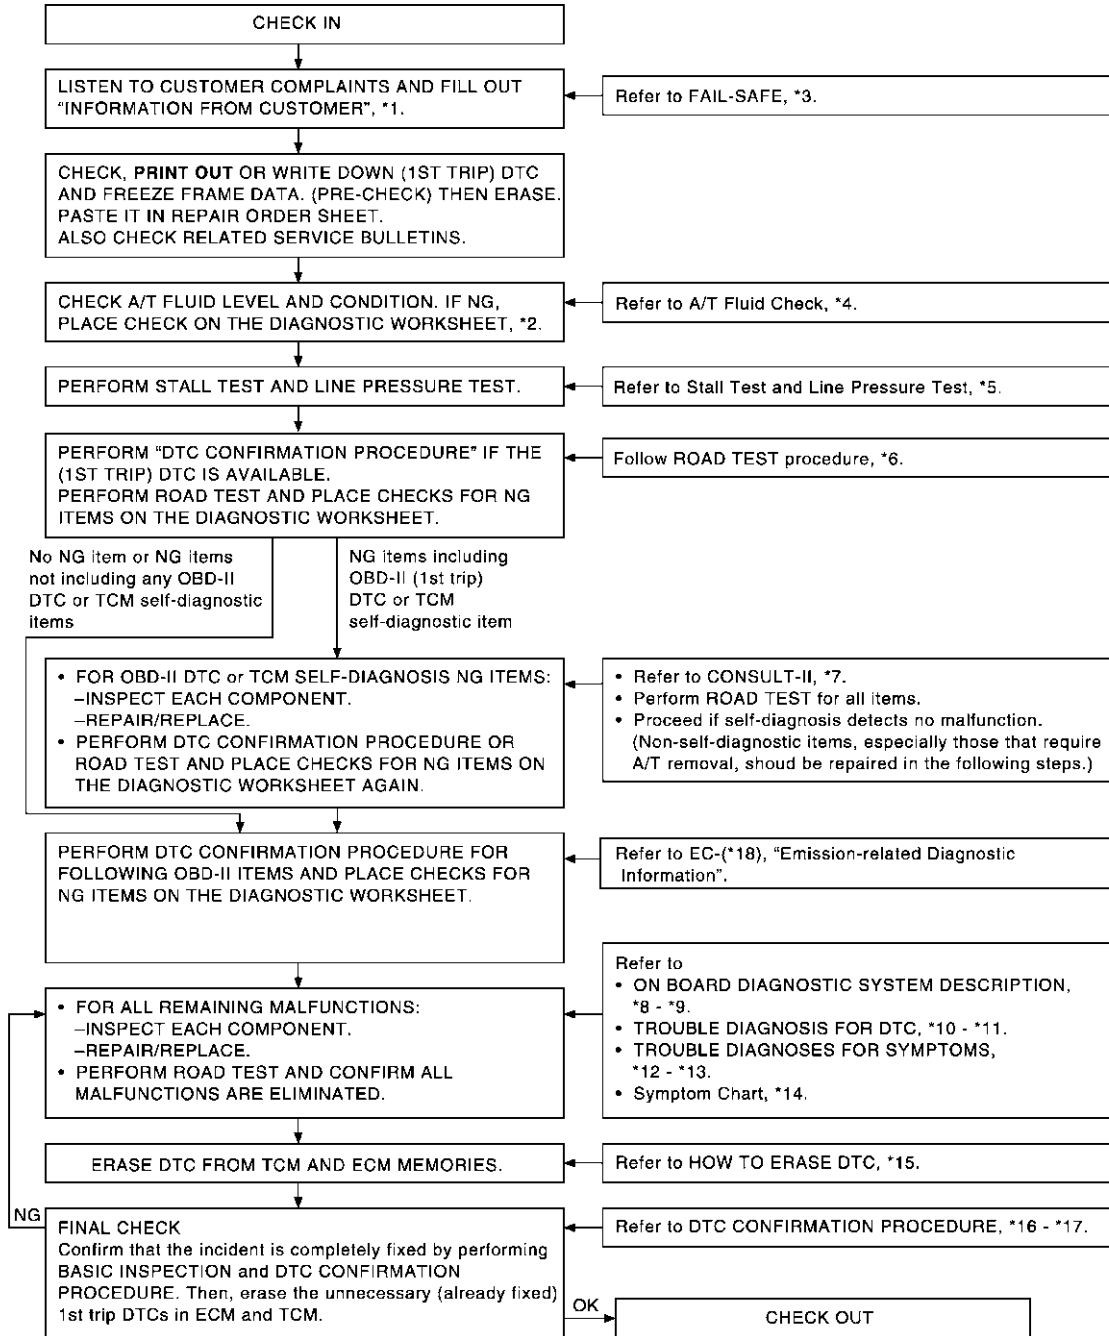

*1. [AT-44](#)

*4. [AT-56](#)

*7. [AT-92](#)

*10. [AT-105](#)

*13. [AT-212](#)

*16. [AT-105](#)

*2. [AT-44](#)

*5. [AT-56](#), [AT-57](#)

*8. [AT-36](#)

*11. [AT-110](#), [AT-161](#), [AT-173](#), [AT-128](#)

*14. [AT-67](#)

*17. [AT-170](#)

*3. [AT-40](#)

*6. [AT-60](#)

*9. [AT-103](#)

*12. [AT-174](#)

*15. [AT-37](#)

*18. [EC-56](#)

SCIA0501E

TROUBLE DIAGNOSIS

		<input type="checkbox"/> Execute all road tests and enter checks in required inspection items.	AT-60	A
4	4-1.	Check before engine is started <input type="checkbox"/> The A/T CHECK Indicator Lamp does come on. AT-174 . <input type="checkbox"/> Execute self-diagnostics Enter checks for detected items.	AT-60	B
		<input type="checkbox"/> Vehicle speed sensor-A/T. AT-112 . <input type="checkbox"/> Vehicle speed sensor-MTR. AT-134 . <input type="checkbox"/> Direct clutch solenoid valve. AT-149 . <input type="checkbox"/> TCC solenoid valve. AT-116 . <input type="checkbox"/> Line pressure solenoid valve. AT-120 . <input type="checkbox"/> Input clutch solenoid valve. AT-141 . <input type="checkbox"/> Front brake solenoid valve. AT-145 . <input type="checkbox"/> Low coast brake solenoid valve. AT-157 . <input type="checkbox"/> high and low reverse clutch solenoid valve. AT-153 . <input type="checkbox"/> PNP switch. AT-110 . <input type="checkbox"/> A/T fluid temperature sensors 1, 2. AT-130 . <input type="checkbox"/> Turbine revolution sensors 1, 2. AT-132 . <input type="checkbox"/> A/T interlock. AT-136 . <input type="checkbox"/> A/T 1st engine braking. AT-139 . <input type="checkbox"/> Start signal. AT-107 . <input type="checkbox"/> Accelerator pedal position signal. AT-128 . <input type="checkbox"/> Engine speed signal. AT-114 . <input type="checkbox"/> CAN communication. AT-105 . <input type="checkbox"/> TCM power supply. AT-122 . <input type="checkbox"/> Battery <input type="checkbox"/> Other		AT
	4-2.	Idle inspection <input type="checkbox"/> Engine Cannot Be Started in "P" and "N" Position. AT-174 . <input type="checkbox"/> In " P" Position, Vehicle Moves When Pushed. AT-175 . <input type="checkbox"/> In "N" Position Vehicle Moves. AT-176 . <input type="checkbox"/> Large Shock ("N" to "D" Position). AT-177 . <input type="checkbox"/> Vehicle Does Not Creep Backward In "R" Position. AT-180 . <input type="checkbox"/> Vehicle Does Not Creep Forward In "D" Position. AT-183 .	AT-60	E
	4-3.	Driving tests Part 1 <input type="checkbox"/> Vehicle Cannot Be Started From D1. AT-185 . <input type="checkbox"/> A/T Does Not Shift: D1 → D2. AT-188 . <input type="checkbox"/> A/T Does Not Shift: D2 → D3. AT-190 . <input type="checkbox"/> A/T Does Not Shift: D3 → D4. AT-193 . <input type="checkbox"/> A/T Does Not Shift: D4 → D5. AT-195 . <input type="checkbox"/> A/T Does Not Perform Lock-up. AT-198 . <input type="checkbox"/> A/T Does Not Hold Lock-up Condition. AT-200 . <input type="checkbox"/> Lock-up Is Not Released. AT-201 . <input type="checkbox"/> Engine Speed Does Not Return To Idle. AT-202 .	AT-62	F
				G
				H
				I
				J
				K
				L
				M

TROUBLE DIAGNOSIS


4	4-3	<p>Part 2</p> <ul style="list-style-type: none"> <input type="checkbox"/> Vehicle Cannot Be Started From D1. AT-185 . <input type="checkbox"/> A/T Does Not Shift: D1 → D2. AT-188 . <input type="checkbox"/> A/T Does Not Shift: D2 → D3. AT-190 . <input type="checkbox"/> A/T Does Not Shift: D3 → D4. AT-193 . 	AT-64
		<p>Part 3</p> <ul style="list-style-type: none"> <input type="checkbox"/> Cannot Be Changed To Manual Mode. AT-203 . <input type="checkbox"/> A/T Does Not Shift:5th gear → 4th gear.AT-204 . <input type="checkbox"/> A/T Does Not Shift:4th gear → 3rd gear. AT-206 . <input type="checkbox"/> A/T Does Not Shift:3rd gear → 2nd gear. AT-208 . <input type="checkbox"/> A/T Does Not Shift:2nd gear → 1st gear. AT-210 . <input type="checkbox"/> Vehicle Does Not Decelerate By Engine Brake. AT-212 . <input type="checkbox"/> Execute self-diagnostics Enter checks for detected items. 	AT-65
		<ul style="list-style-type: none"> <input type="checkbox"/> Vehicle speed sensor-A/T. AT-112 . <input type="checkbox"/> Vehicle speed sensor-MTR. AT-134 . <input type="checkbox"/> Direct clutch solenoid valve.AT-149 . <input type="checkbox"/> TCC solenoid valve. AT-116 . <input type="checkbox"/> Line pressure solenoid valve.AT-120 . <input type="checkbox"/> Input clutch solenoid valve. AT-141 . <input type="checkbox"/> Front brake solenoid valve. AT-145 . <input type="checkbox"/> Low coast brake solenoid valve. AT-157 . <input type="checkbox"/> high and low reverse clutch solenoid valve. AT-153 <input type="checkbox"/> PNP switch. AT-110 . <input type="checkbox"/> A/T fluid temperature sensors 1, 2. AT-130 . <input type="checkbox"/> Turbine revolution sensors 1, 2. AT-132 . <input type="checkbox"/> A/T interlock. AT-136 . <input type="checkbox"/> A/T 1st engine braking. AT-139 . <input type="checkbox"/> Start signal.AT-107 . <input type="checkbox"/> Accelerator pedal position signal. AT-128 . <input type="checkbox"/> Engine sped signal. AT-114 . <input type="checkbox"/> CAN communication. AT-105 . <input type="checkbox"/> TCM power supply. AT-122 . <input type="checkbox"/> Battery <input type="checkbox"/> Other 	
5		<input type="checkbox"/> Inspect each system for items found to be NG in the self-diagnostics and repair or replace the malfunction parts.	
6		<input type="checkbox"/> Execute all road tests and enter the checks again for the required items.	AT-60
7		<input type="checkbox"/> For any remaining NG items, execute the “diagnostics procedure” and repair or replace the malfunction parts. See the chart for diagnostics by symptoms. (This chart also contains other symptoms and inspection procedures.)	AT-67
8		<input type="checkbox"/> Erase the results of the self-diagnostics from the TCM.	AT-92 , AT-103

TROUBLE DIAGNOSIS

A/T Electrical Parts Location

ACS000HL

A
B
AT
D
E
F
G
H
I
J
K
L
M

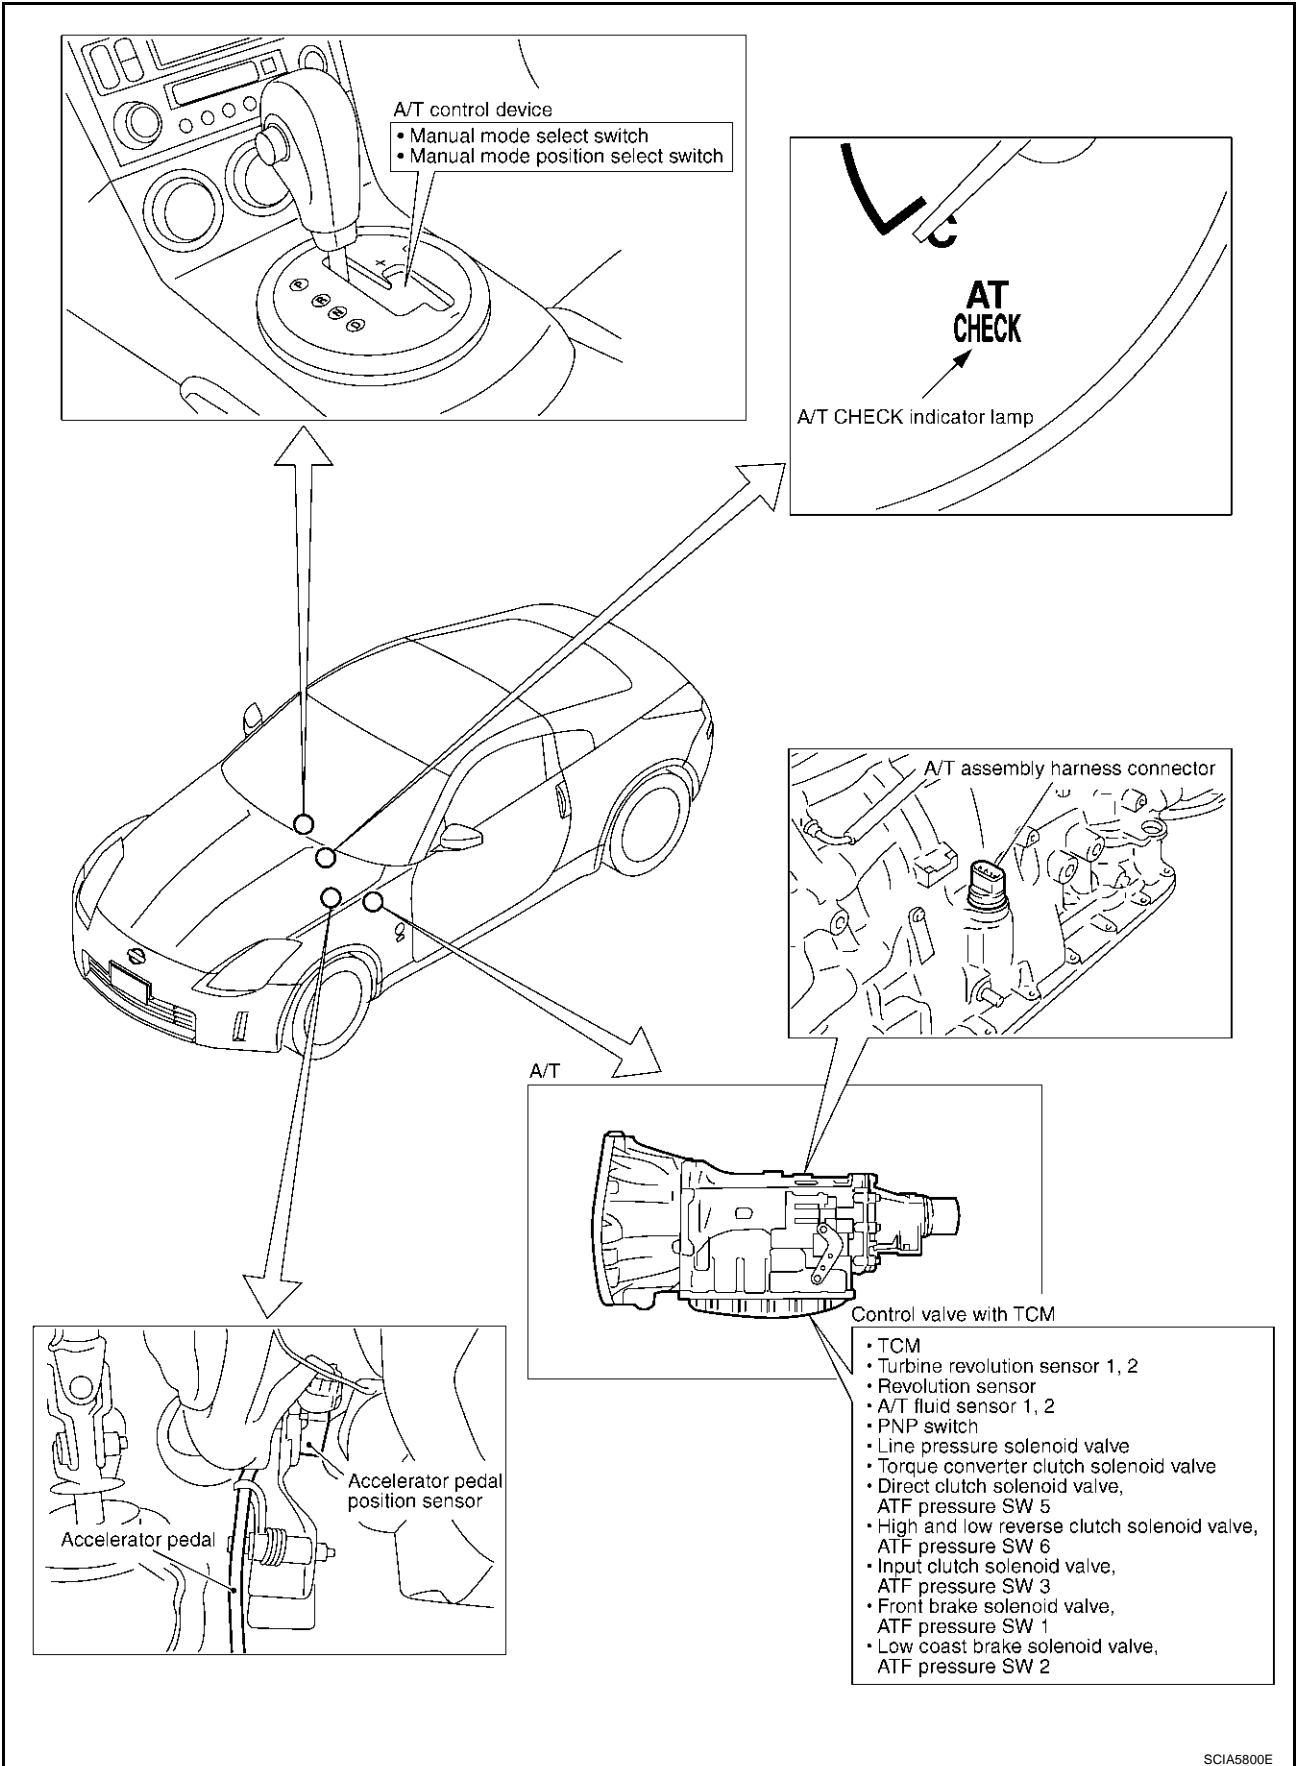


SCIA5800E

TROUBLE DIAGNOSIS

Circuit Diagram

ACS000HM

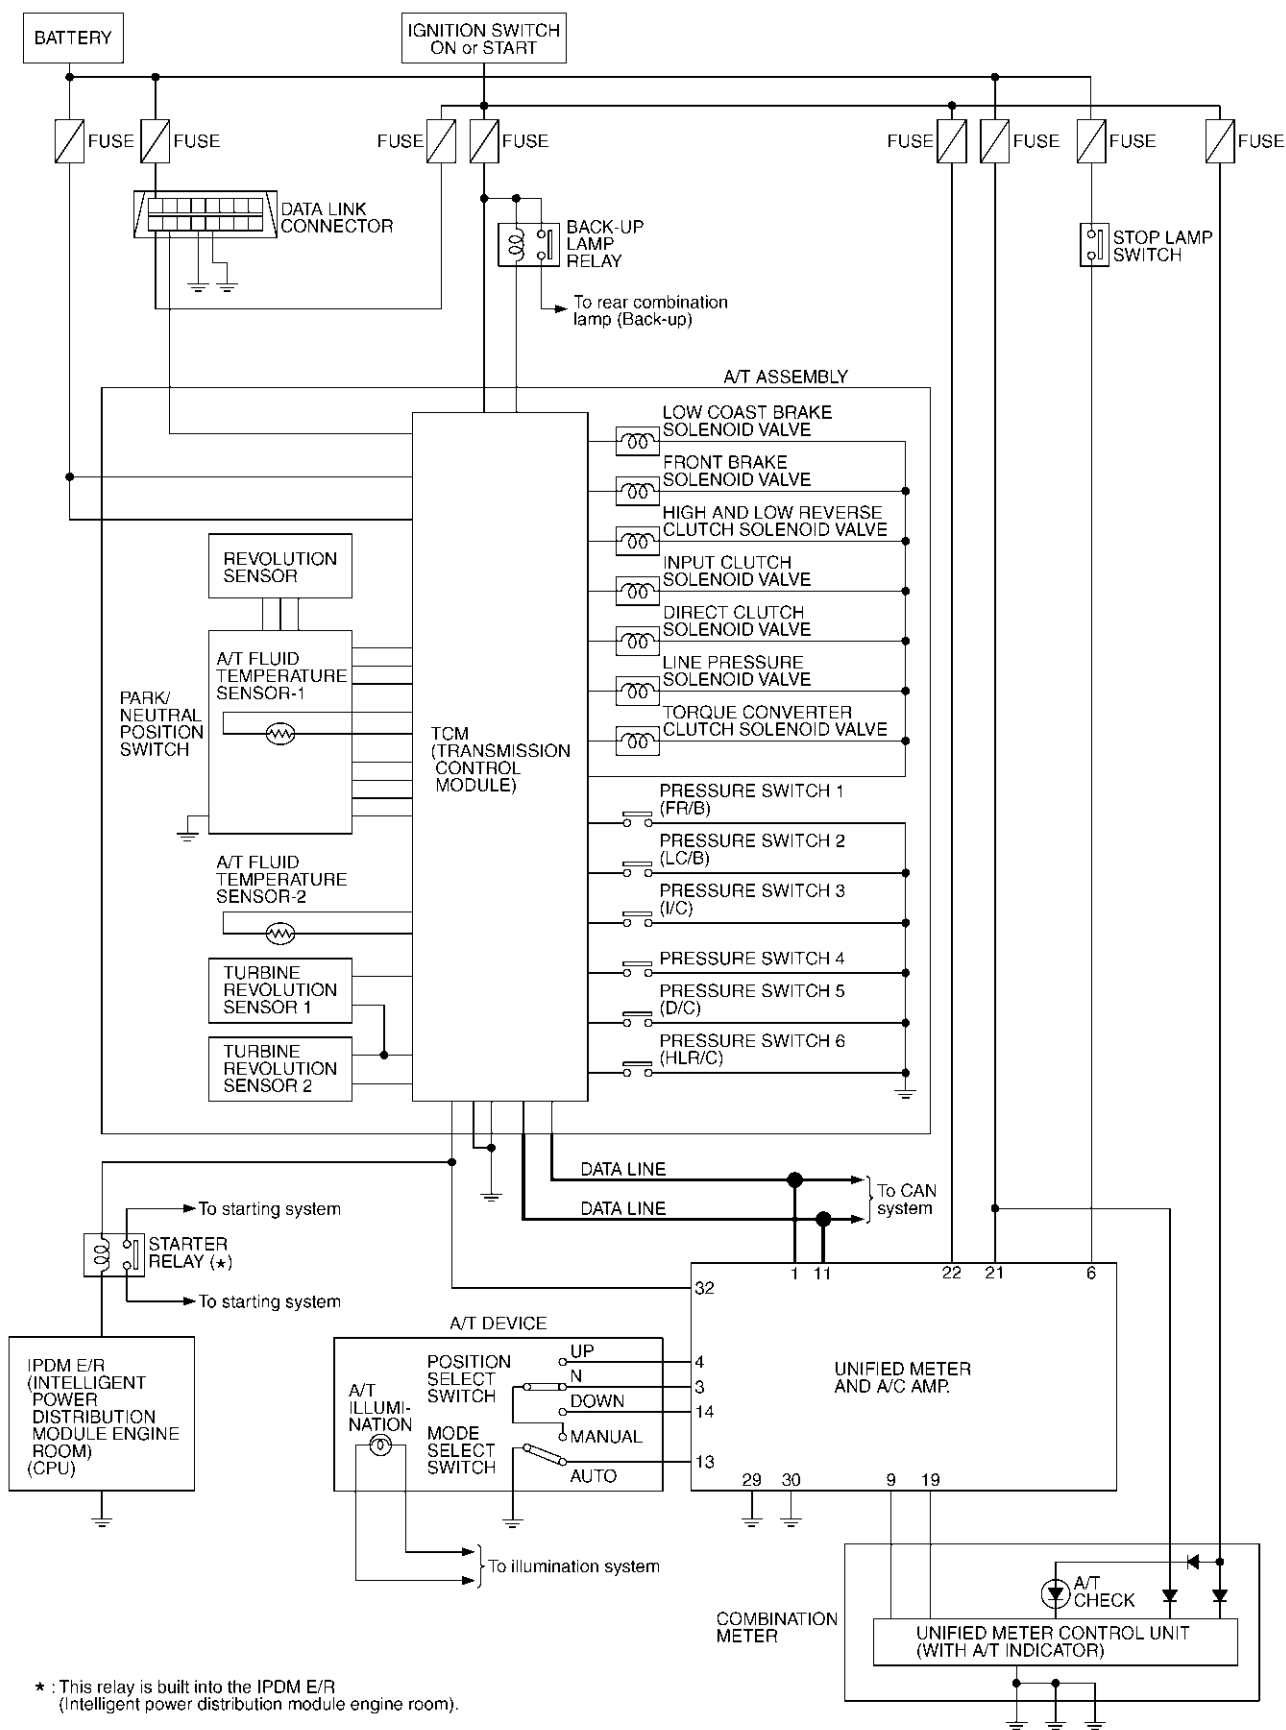

TCWT0089E







TROUBLE DIAGNOSIS

Wiring Diagram — AT —

ACS001LH

AT-A/T-01

A
B
AT
D
E
F
G
H
I
J
K
L
M

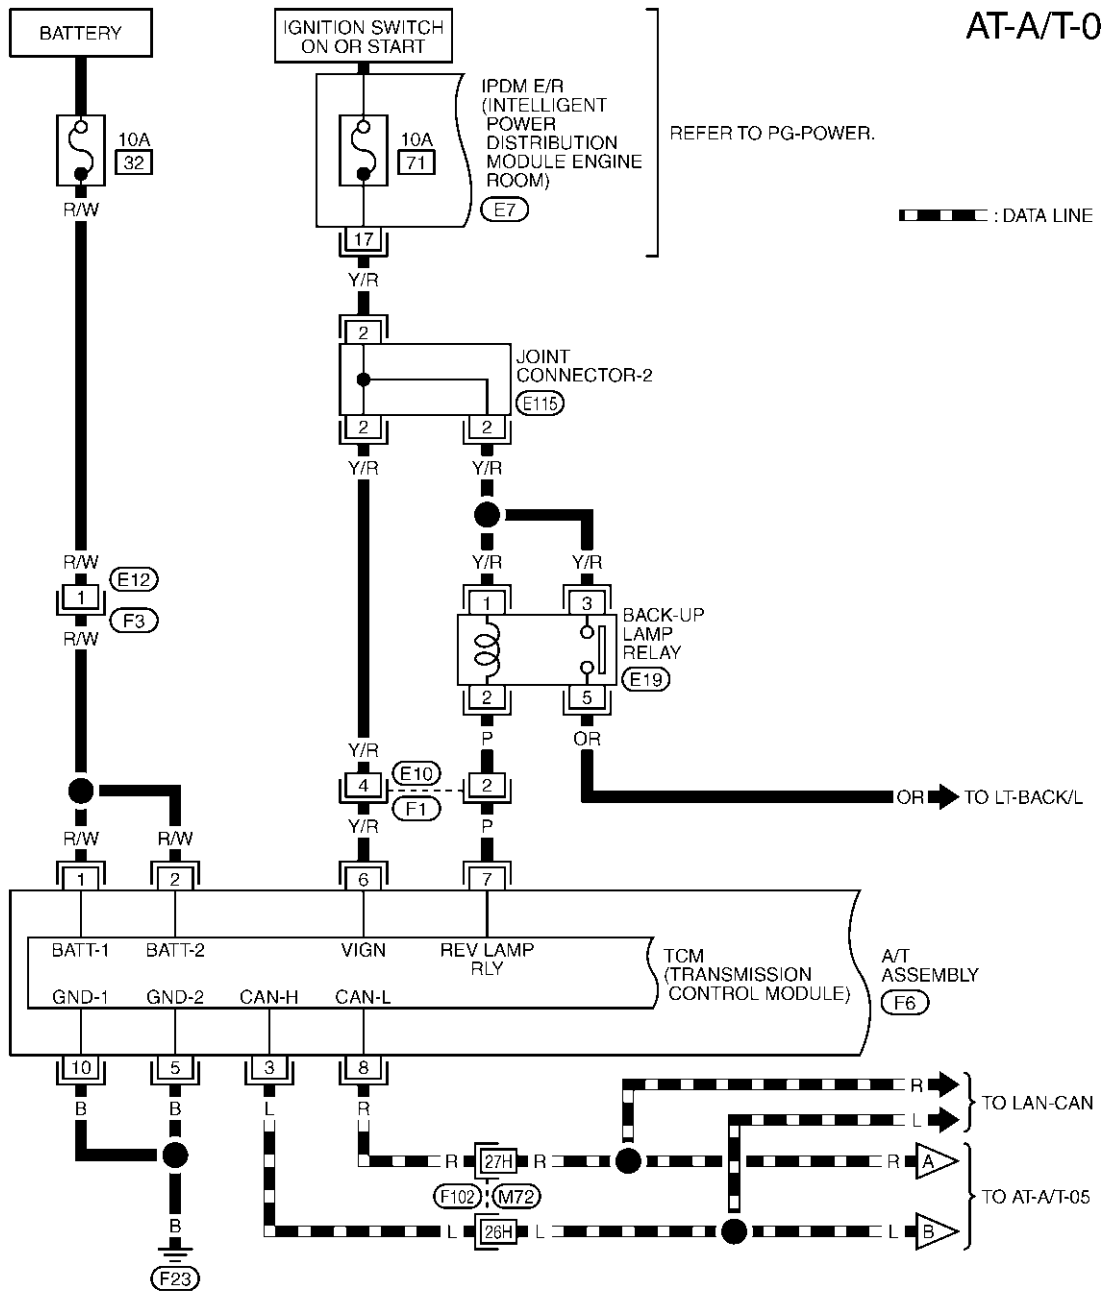








REFER TO THE FOLLOWING.

(F102) -SUPER MULTIPLE JUNCTION (SMJ)

TCWT0090E

TROUBLE DIAGNOSIS

AT-A/T-02

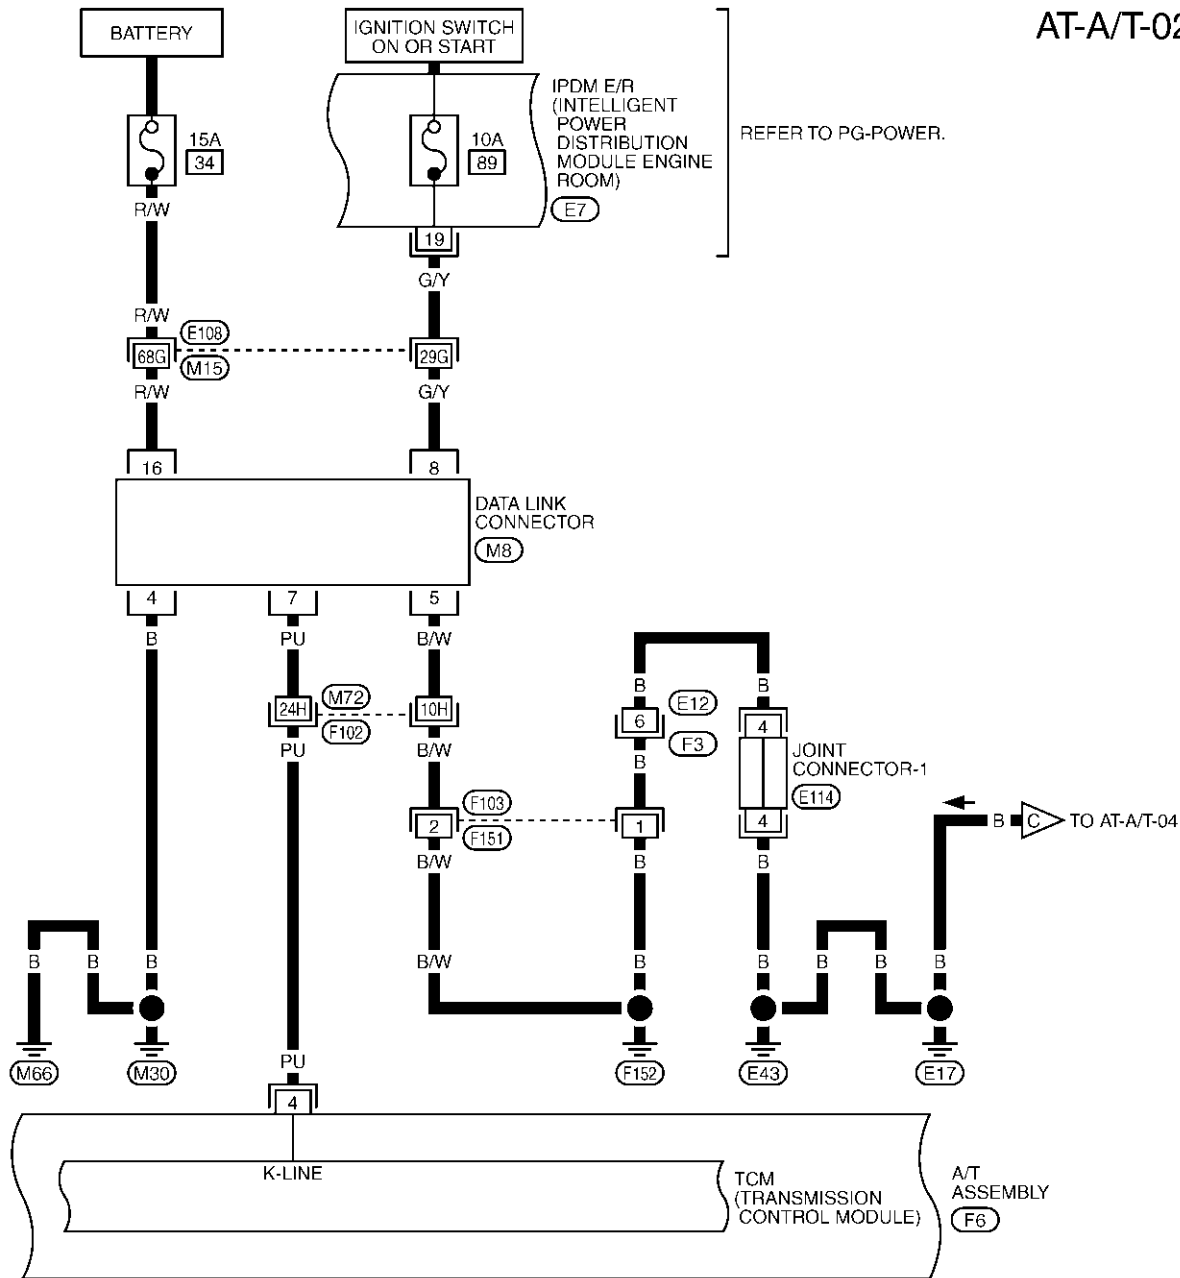


REFER TO THE FOLLOWING.
 (E108), (F102) -SUPER MULTIPLE JUNCTION (SMJ)

TCWT0096E

TROUBLE DIAGNOSIS

AT-A/T-03



A/T ASSEMBLY

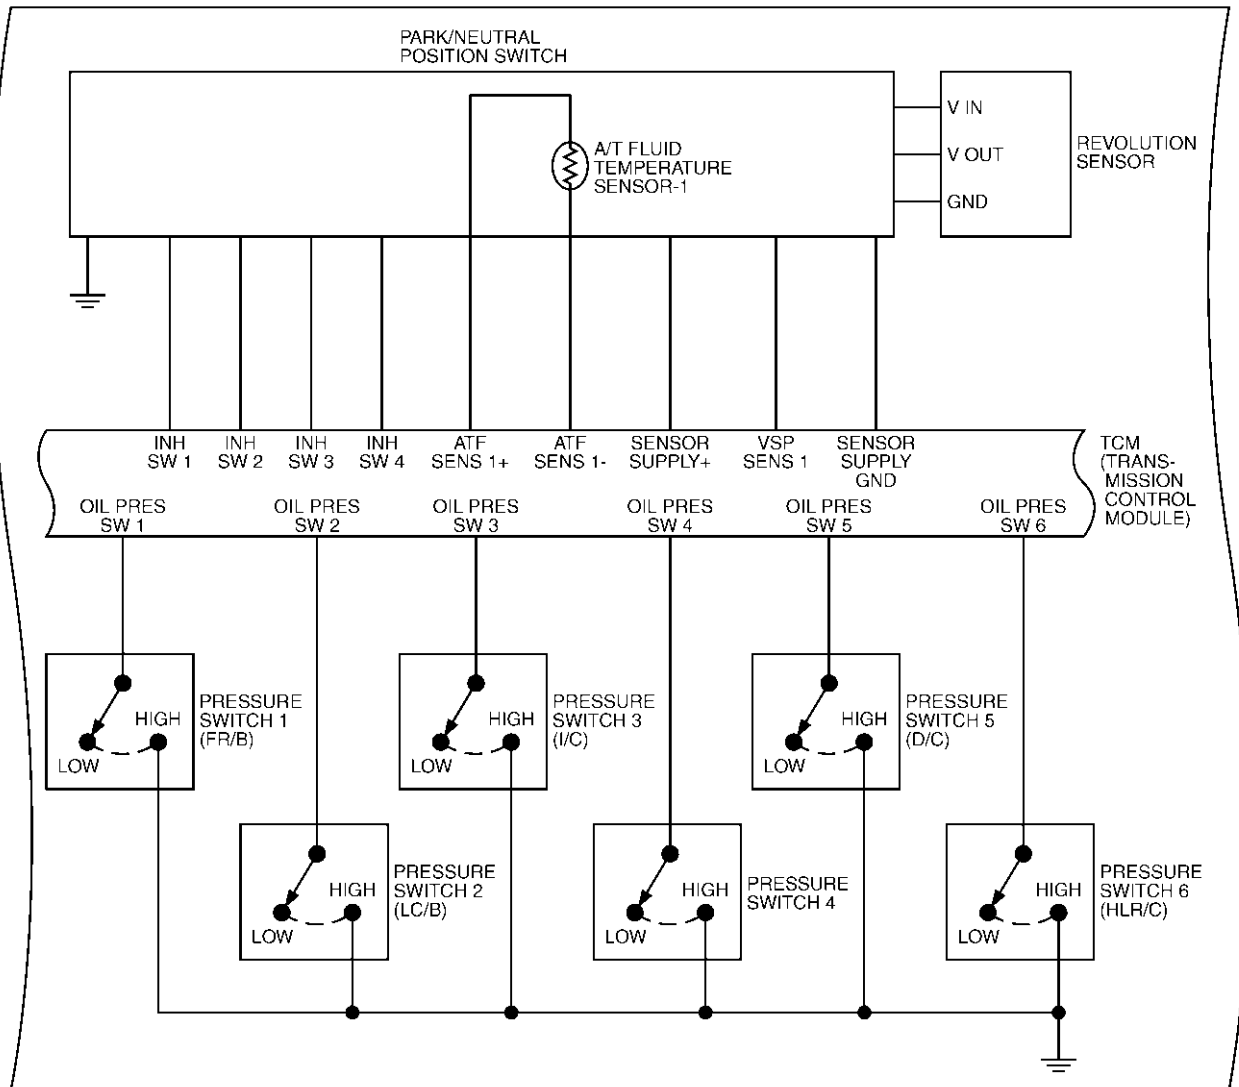

TCWT0091E

TROUBLE DIAGNOSIS

AT-A/T-04

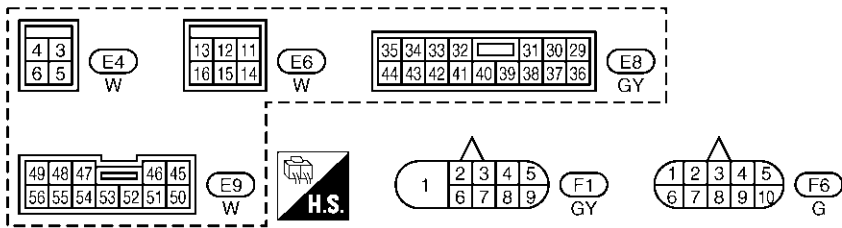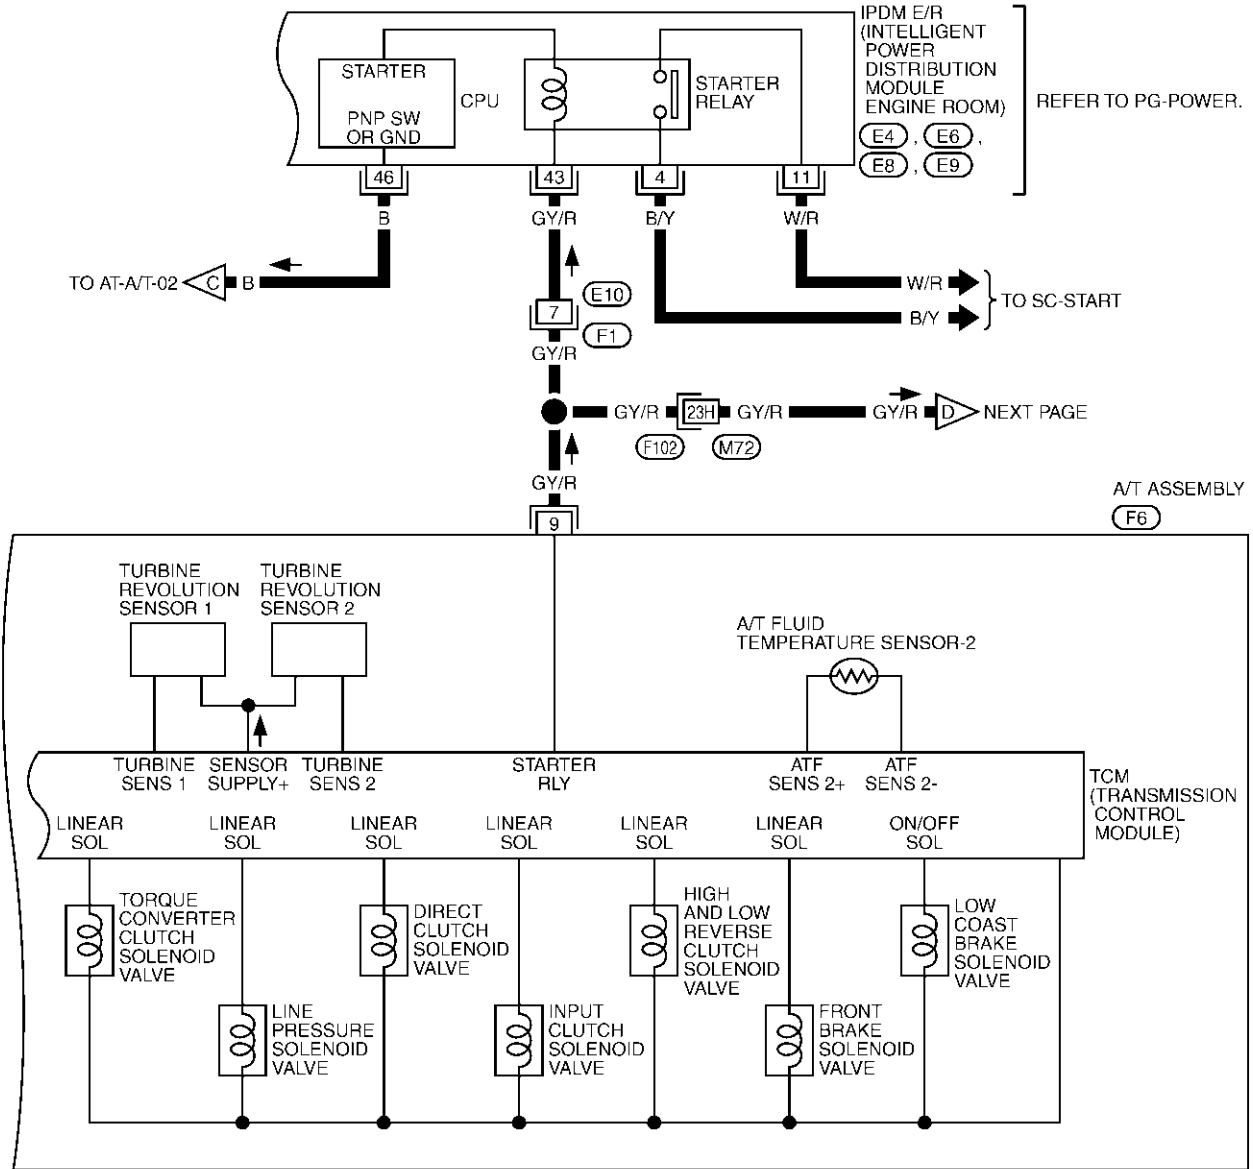

REFER TO THE FOLLOWING.






F102 - SUPER MULTIPLE JUNCTION (SMJ)

TCWT0092E

TROUBLE DIAGNOSIS

AT-A/T-05

— : DATA LINE

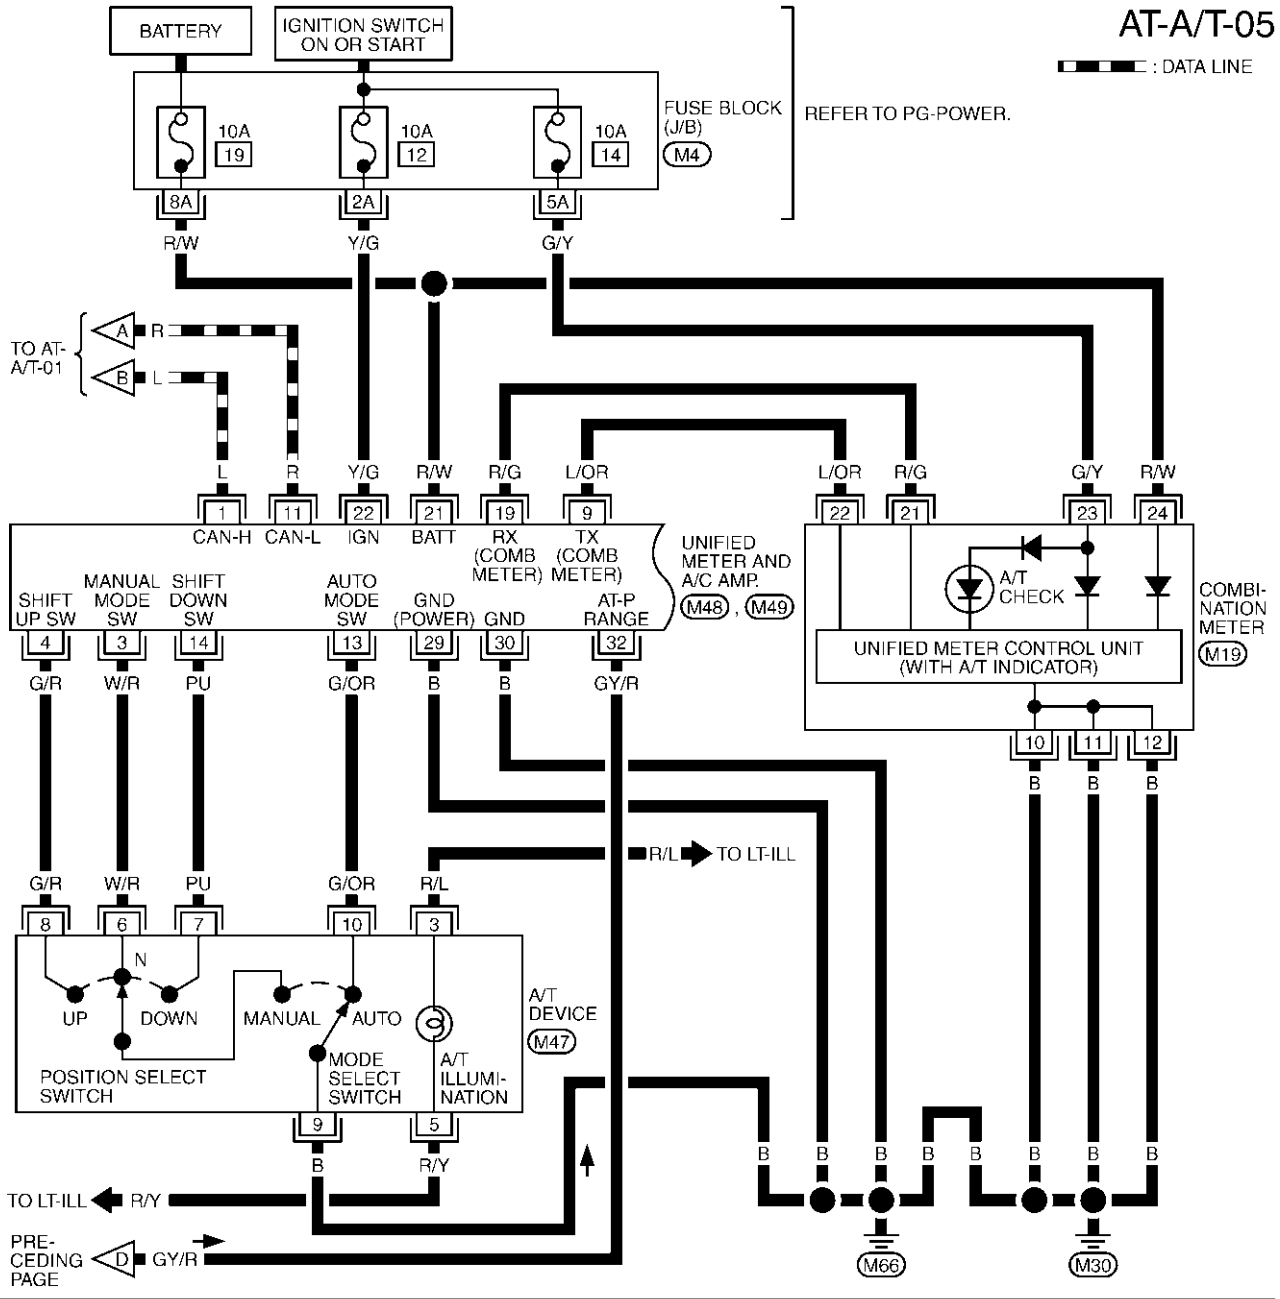



REFER TO THE FOLLOWING.

M4 - FUSE BLOCK-JUNCTION BOX (J/B)


TCWT0093E

TROUBLE DIAGNOSIS


AT-A/T-06

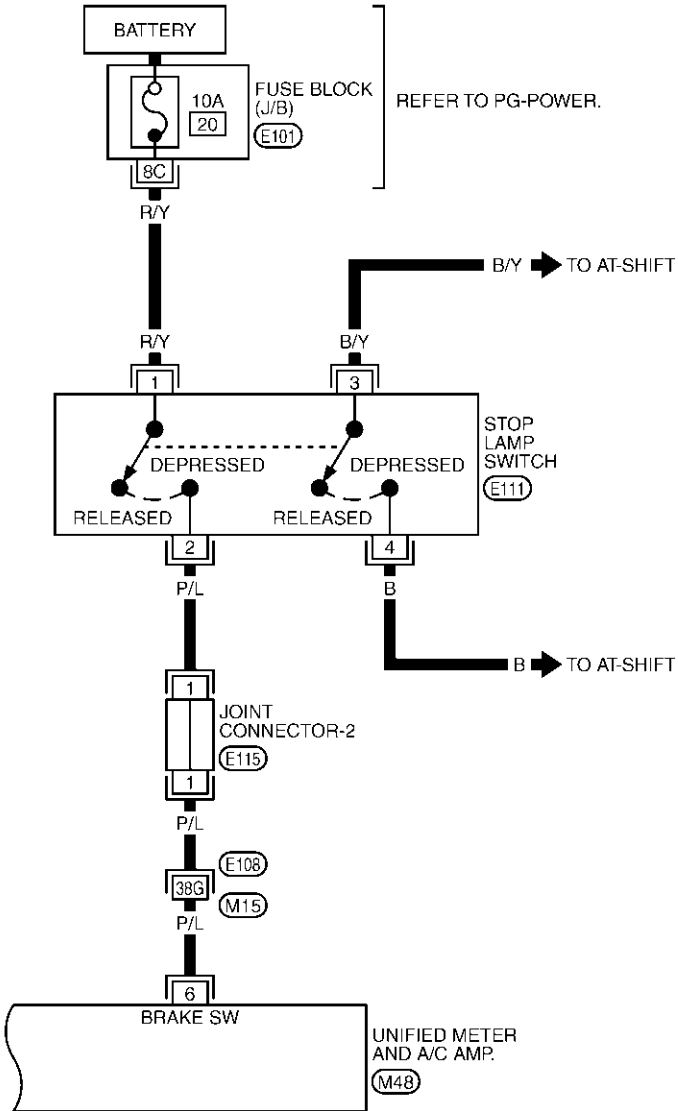

(M48)
GY



(E111)
W



(E115)
G

REFER TO THE FOLLOWING.







(E108) -SUPER MULTIPLE JUNCTION (SMJ)

(E101) -FUSE BLOCK-JUNCTION BOX (J/B)

TCM terminals and data are reference value. Measured between each terminal and ground.

TCWT0094E

TROUBLE DIAGNOSIS

Terminal No.	Wire color	Item	Condition		Data (Approx.)
1	R/W	Power supply (Memory back-up)		-	Battery voltage
2	R/W	Power supply (Memory back-up)		-	Battery voltage
3	L	CAN-H		-	-
4	PU	K-line (CONSULT-II signal)	The terminal is connected to the data link connector for CONSULT-II.		-
5	B	Ground		-	-
6	Y/R	Power supply		-	Battery voltage
				-	0V
7	P	Back-up lamp relay		Selector lever in "R" position.	0V
				Selector lever in other positions.	Battery voltage
8	R	CAN-L		-	-
9	GY/R	Starter relay		Selector lever in "N", "P" positions.	Battery voltage
				Selector lever in other positions.	0V
10	B	Ground		-	-

A
B
AT
D
E
F
G
H
I
J
K
L
M

TROUBLE DIAGNOSIS

ACS000HN

Inspections Before Trouble Diagnosis

A/T FLUID CHECK


Fluid leakage and fluid level check

- Inspect for fluid leakage and check the fluid level. Refer to [AT-12, "Checking ATF"](#).

Fluid condition check

Inspect the fluid condition.


Fluid condition	Conceivable Cause	Required Operation
Varnished (viscous varnish state)	Clutch, brake scorched	Replace the A/T fluid and check the A/T main unit and the vehicle for malfunctions (wire harnesses, cooler pipes, etc.)
Milky white or cloudy	Water in the fluid	Replace the A/T fluid and check for places where water is getting in.
Large amount of metal powder mixed in	Unusual wear of sliding parts within A/T	Replace the A/T fluid and check for improper operation of the A/T.

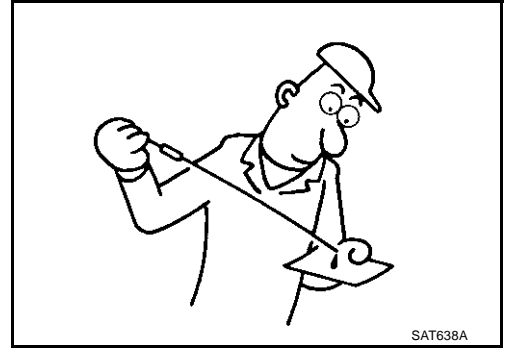


STALL TEST

Stall test procedure

1. Inspect the amount of engine oil. Replenish the engine oil if necessary.
2. Drive for about 10 minutes to warm up the vehicle so that the A/T fluid temperature is 50 to 80°C (122 to 176°F). Inspect the amount of A/T fluid. Replenish if necessary.

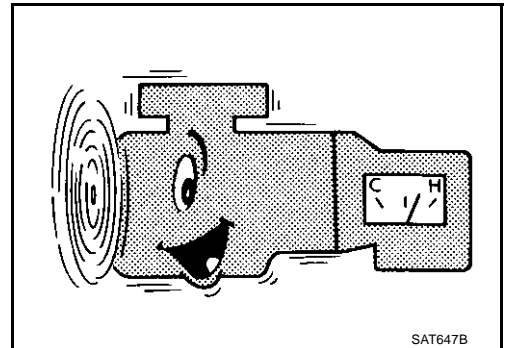

3. Securely engage the parking brake so that the tires do not turn.

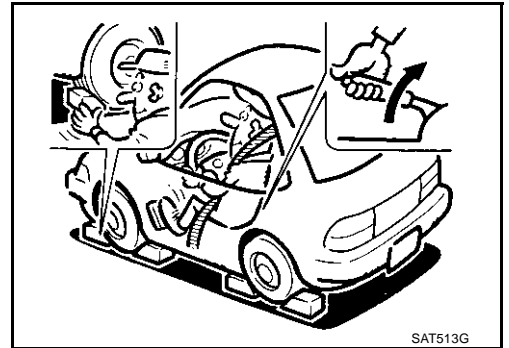


4. Engine start, apply foot brake, and place selector lever in "D" position.
5. While holding down the foot brake, gradually press down the accelerator pedal.
6. Quickly read off the stall speed, then quickly remove your foot from the accelerator pedal.

CAUTION:

Do not hold down the accelerator pedal for more than 5 seconds during this test.

7. Move the selector lever to the "N" position.
8. Cool down the A/T fluid.

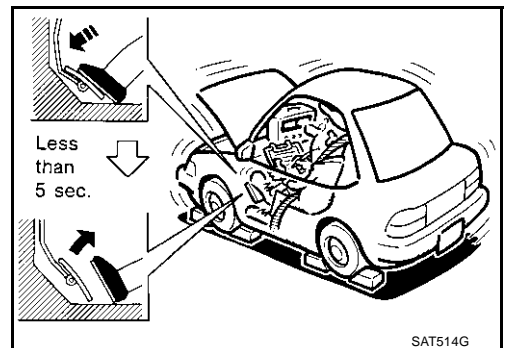

TROUBLE DIAGNOSIS

CAUTION:

Run the engine at idle for at least one minute.

Stall speed: 2,650 - 2,950 rpm

Judgement stall test

	Selector lever position		Expected problem location
	D, M	R	
Stall rotation	H	O	<ul style="list-style-type: none"> ● Forward brake ● Forward one-way clutch ● 1st one-way clutch ● 3rd one-way clutch
	O	H	<ul style="list-style-type: none"> ● Reverse clutch
	L	L	<ul style="list-style-type: none"> ● Engine and torque converter one-way clutch
	H	H	<ul style="list-style-type: none"> ● Line pressure low
	O	O	<ul style="list-style-type: none"> ● One-way clutch in torque converter stuck or check with another item tests

O: Stall speed within standard value position

H: Stall speed higher than standard value


L: Stall speed lower than standard value

Stall test standard value position

Does not shift up D, M position 1 → 2	Slipping in 2nd, 3rd, 4th gears	Direct clutch slippage
Does not shift up D, M position 2 → 3	Slipping in 3rd, 4th, 5th gears	high and low reverse clutch slippage
Does not shift up D, M position 3 → 4	Slipping in 4th, 5th gears	Input clutch slippage
Does not shift up D, M position 4 → 5	Slipping in 5th gear	Front brake slippage

LINE PRESSURE TEST

Line pressure test port

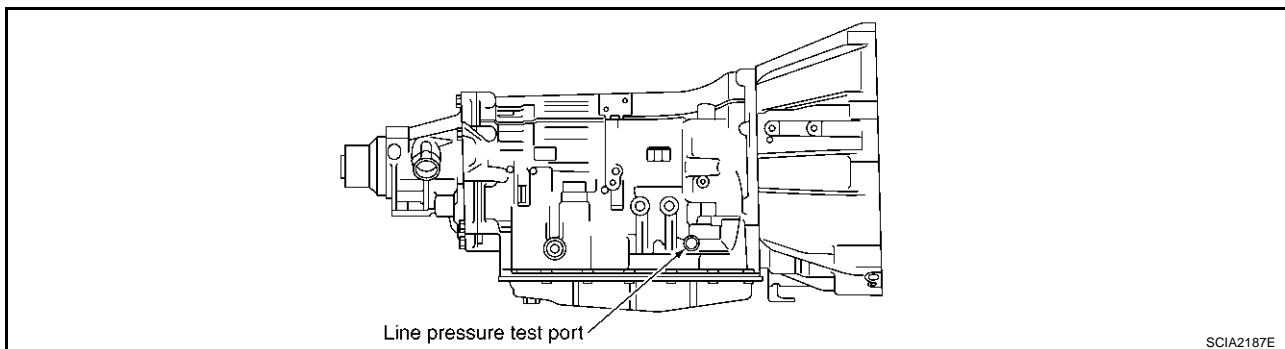

Line pressure test procedure

1. Inspect the amount of engine oil and replenish if necessary.
2. Drive the car for about 10 minutes to warm it up so that the A/T fluid reaches in range of 50 to 80°C (122 to 176°F), then inspect the amount of A/T fluid and replenish if necessary.

NOTE:


The automatic fluid temperature rises in range of 50 to 80°C (122 to 176°F) during 10 minutes of driving.

TROUBLE DIAGNOSIS


3. After warming up remove the oil pressure detection plug and install the oil pressure gauge.

CAUTION:

When using the oil pressure gauge, be sure to use the O-ring attached to the oil pressure detection plug.

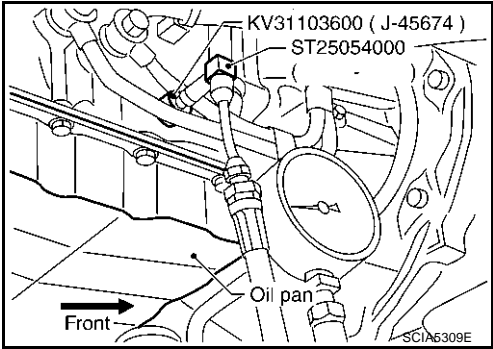

4. Securely engage the parking brake so that the tires do not turn.

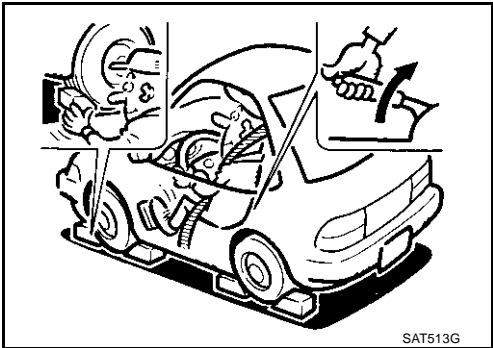


5. Start the engine, then measure the line pressure at both idle and the stall speed.

CAUTION:

- Keep the brake pedal pressed all the way down during measurement.
- When measuring the line pressure at the stall speed, refer to [AT-56, "STALL TEST"](#) .

6. After the measurements are complete, install the oil pressure detection plug and tighten to the regulation torque below.

 : 7.3 N·m (0.74 kg·m, 65 in·lb)

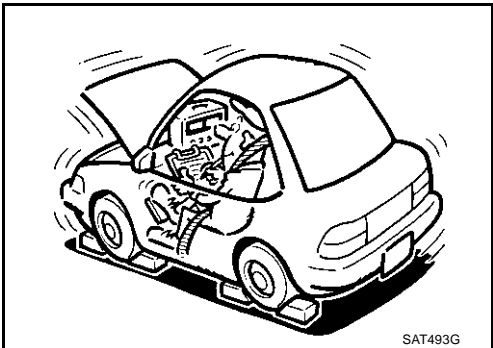

CAUTION:

Do not reuse the O-ring.

Line pressure

Engine speed	Line pressure [kPa (kg/cm ² , psi)]	
	R position	D, M positions
At idle speed	392 - 441 (4.0 - 4.5, 57 - 64)	373 - 422 (3.8 - 4.3, 54 - 61)
At stall speed	1,700 - 1,890 (17.3 - 19.3, 247 - 274)	1,310 - 1,500 (13.3 - 15.3, 190 - 218)

TROUBLE DIAGNOSIS

Judgement of line pressure test

Judgement		Possible cause
Idle speed	Low for all positions (P, R, N, D, M)	Possible causes include malfunctions in the pressure supply system and low oil pump output. For example <ul style="list-style-type: none"> ● Oil pump wear ● Pressure regulator valve or plug sticking or spring fatigue ● Oil strainer ⇒ oil pump ⇒ pressure regulator valve passage oil leak ● Engine idle speed too low
	Only low for a specific position	Possible causes include an oil pressure leak in a passage or device related to the position after the pressure is distributed by the manual valve.
	High	Possible causes include a sensor malfunction or malfunction in the line pressure adjustment function. For example <ul style="list-style-type: none"> ● Accelerator pedal position signal malfunction ● ATF temperature sensor malfunction ● Line pressure solenoid malfunction (sticking in "OFF" state, filter clog, cut line) ● Pressure regulator valve or plug sticking
Stall speed	Oil pressure does not rise higher than the oil pressure for idle.	Possible causes include a sensor malfunction or malfunction in the pressure adjustment function. For example <ul style="list-style-type: none"> ● Accelerator pedal position signal malfunction ● TCM breakdown ● Line pressure solenoid malfunction (shorting, sticking in "ON" state) ● Pressure regulator valve or plug sticking ● Pilot valve sticking or pilot filter clogged
	The pressure rises, but does not enter the standard position.	Possible causes include malfunctions in the pressure supply system and malfunction in the pressure adjustment function. For example <ul style="list-style-type: none"> ● Accelerator pedal position signal malfunction ● Line pressure solenoid malfunction (sticking, filter clog) ● Pressure regulator valve or plug sticking ● Pilot valve sticking or pilot filter clogged
	Only low for a specific position	Possible causes include an oil pressure leak in a passage or device related to the position after the pressure is distributed by the manual valve.

A
B
AT
D
E
F
G
H
I
J
K
L
M

TROUBLE DIAGNOSIS

ROAD TEST

Description

- The road test inspects overall performance of the A/T and analyzes possible malfunction causes.
- The road test is carried out in the following three stages.
 1. Check before engine is started. Refer to [AT-60](#) .
 2. Check at idle. Refer to [AT-60](#) .
 3. Cruise test
 - Inspect all the items from Part 1 to Part 3. Refer to [AT-62](#) , [AT-64](#) , [AT-65](#) .
- Before beginning the road test, check the test procedure and inspection items.
- Test all inspection items until the symptom is uncovered. Diagnose NG items when all road tests are complete.

Check Before Engine is Started

ACS000HO

1. CHECK A/T CHECK INDICATOR LAMP

1. Park vehicle on level surface.
2. Move selector lever to “P” position.
3. Turn ignition switch to “OFF” position and wait at least 10 seconds.
4. Turn ignition switch to “ON” position. (Do not start engine.)

Does A/T CHECK indicator lamp light up for about 2 seconds?

YES >> GO TO 2.

NO >> Stop the road test and go to [AT-174, "A/T Check Indicator Lamp Does Not Come On"](#) .

2. CHECK A/T CHECK INDICATOR LAMP

Does A/T CHECK indicator lamp flash for about 8 seconds?

YES >> For TCM fail-safe mode, carry out self-diagnostics and record all NG items on the diagnostics worksheet. Refer to [AT-93](#) , [AT-103](#) .

NO >> 1. Turn ignition switch to “OFF” position.

2. Carry out the self-diagnostics and record all NG items on the diagnostics worksheet. Refer to [AT-93](#) , [AT-103](#) .

3. Go to [AT-60, "Check at Idle"](#) .

Check at Idle

ACS000HP

1. CHECK STARTING THE ENGINE

1. Park vehicle on level surface.
2. Move selector lever to “P” position.
3. Turn ignition switch to “OFF” position.
4. Turn ignition switch to “START” position.

Does the engine start?

YES >> GO TO 2.

NO >> Stop the road test and go to [AT-174, "Engine Cannot Be Started In “P” or “N” Position"](#) .

2. CHECK STARTING THE ENGINE

1. Turn ignition switch to “ACC” position.
2. Move selector lever in “D” or “R” position.
3. Turn ignition switch to “START” position.

Does the engine start in either position?

YES >> Stop the road test and go to [AT-174, "Engine Cannot Be Started In “P” or “N” Position"](#) .

NO >> GO TO 3.

TROUBLE DIAGNOSIS

3. CHECK "P" POSITION FUNCTIONS

1. Move selector lever to "P" position.
2. Turn ignition switch to "OFF" position.
3. Disengage the parking brake.
4. Push the vehicle forward or backward.
5. Engage the parking brake.

When you push the vehicle with disengaging the parking brake, does it move?

- YES >> Enter a check mark at "Vehicle moves when pushed in "P" position" on the diagnostics worksheet, then continue the road test.
- NO >> GO TO 4.

4. CHECK "N" POSITION FUNCTIONS

1. Start the engine.
2. Move selector lever to "N" position.
3. Disengage the parking brake.

Does vehicle move forward or backward?

- YES >> Enter a check mark at "Vehicle moves in "N" position" on the diagnostics worksheet, then continue the road test.
- NO >> GO TO 5.

5. CHECK SHIFT SHOCK

1. Engage the brake.
2. Move selector lever to "D" position.

When the transmission is shifted from "N" to "D", is there an excessive shock?

- YES >> Enter a check mark at "Large shock when shifted from N to D" on the diagnostics worksheet, then continue the road test.
- NO >> GO TO 6.

6. CHECK "R" POSITION FUNCTIONS

1. Engage the brake.
2. Move selector lever to "R" position.
3. Disengage the brake for 4 to 5 seconds.

Does the vehicle creep backward?

- YES >> GO TO 7.
- NO >> Enter a check mark at "Vehicle does not creep backward in R position" on the diagnostics worksheet, then continue the road test.

7. CHECK "D" POSITION FUNCTIONS

Inspect whether the vehicle moves forward when the transmission is put into the "D" position.

Does the vehicle move forward in the "D" positions?

- YES >> Go to [AT-62. "Cruise Test - Part 1"](#) , [AT-64. "Cruise Test - Part 2"](#) , and [AT-65. "Cruise Test - Part 3"](#) .
- NO >> Enter a check mark at "Vehicle does not move forward in D positions" on the diagnostics worksheet, then continue the road test.

Cruise Test - Part 1

1. CHECK STARTING OUT FROM D1

1. Drive the vehicle for about 10 minutes to warm up the engine oil and A/T fluid.
Appropriate temperature for the A/T fluid: 50 - 80°C (122 - 176°F)
2. Park the vehicle on a level surface.
3. Move selector lever to "P" position.
4. Start the engine.
5. Move selector lever to "D" position.
6. Press the accelerator pedal about half way down to accelerate the vehicle.

With CONSULT-II

Read off the gear positions.

Starts from D1?

YES >> GO TO 2.

NO >> Enter a check mark at "Vehicle cannot be started from D1" on the diagnostics worksheet, then continue the road test.

2. CHECK SHIFT UP D1 → D2

Press down the accelerator pedal about half way and inspect if the vehicle shifts up (D1 → D2) at the appropriate speed.

- Refer to [AT-66](#) .

With CONSULT-II

Read the gear position, throttle degree of opening, and vehicle speed.

Does the A/T shift up D1 → D2 at the correct speed?

YES >> GO TO 3.

NO >> Enter a check mark at "A/T does not shift D1 → D2" on the diagnostics worksheet, then continue the road test.

3. CHECK SHIFT UP D2 → D3

Press down the accelerator pedal about half way and inspect if the vehicle shifts up (D2 → D3) at the appropriate speed.

- Refer to [AT-66](#) .

With CONSULT-II

Read the gear position, throttle degree of opening, and vehicle speed.

Does the A/T shift up D2 → D3 at the correct speed?

YES >> GO TO 4.

NO >> Enter a check mark at "A/T does not shift D2 → D3" on the diagnostics worksheet, then continue the road test.

4. CHECK SHIFT UP D3 → D4

Press down the accelerator pedal about half way and inspect if the vehicle shifts up (D3 → D4) at the appropriate speed.

- Refer to [AT-66](#) .

With CONSULT-II

Read the gear position, throttle degree of opening, and vehicle speed.

Does the A/T shift up D3 → D4 at the correct speed?

YES >> GO TO 5.

NO >> Enter a check mark at "A/T does not shift D3 → D4" on the diagnostics worksheet, then continue the road test.

TROUBLE DIAGNOSIS

5. CHECK SHIFT UP D4 → D5

Press down the accelerator pedal about half way and inspect if the vehicle shifts up (D4 → D5) at the appropriate speed.

- Refer to [AT-66](#).

With CONSULT-II

Read the gear position, throttle degree of opening, and vehicle speed.

Does the A/T shift up D4 → D5 at the correct speed?

YES >> GO TO 6.

NO >> Enter a check mark at “A/T does not shift D4 → D5” on the diagnostics worksheet, then continue the road test.

6. CHECK LOCK-UP

When releasing accelerator pedal from D5, check lock-up from D5 to L/U.

- Refer to [AT-66](#).

With CONSULT-II

Select “TCC SOL 0.00A” with the “MAIN SIGNAL” mode for A/T.

Does it lock-up?

YES >> GO TO 7.

NO >> Enter a check mark at “A/T does not perform lock-up” on the diagnostics worksheet, then continue the road test.

7. CHECK LOCK-UP HOLD

Does it maintain lock-up status?

YES >> GO TO 8.

NO >> Enter a check mark at “A/T hold does not lock-up condition” on the diagnostics worksheet, then continue the road test.

8. CHECK LOCK-UP RELEASE

Check lock-up cancellation by depressing brake pedal lightly to decelerate.

With CONSULT-II

Select “TCC SOL 0.00A” with the “MAIN SIGNAL” mode for A/T.

Does lock-up cancel?

YES >> GO TO 9.

NO >> Enter a check mark at “Lock-up is not released” on the diagnostics worksheet, then continue the road test.

9. CHECK SHIFT DOWN D5 → D4

Decelerate by pressing lightly on the brake pedal.

With CONSULT-II

Read the gear position and engine speed.

When the A/T shift down D5 → D4, does the engine speed drop smoothly back to idle?

YES >> 1. Stop the vehicle.

2. Go to Cruise test - Part 2 (Refer to [AT-64](#)).

NO >> Enter a check mark at “A/T does not shift down” on the diagnostics worksheet, then continue the road test. Go to Cruise test - Part 2 (Refer to [AT-64](#)).

Cruise Test - Part 2

1. CHECK STARTING FROM D1

1. Move selector lever the "D" position.
2. Accelerate at half throttle.

📖 **With CONSULT-II**

Read the gear position.

Does it start from D1?

YES >> GO TO 2.

NO >> Enter a check mark at "Vehicle cannot be started from D1" on the diagnostics worksheet, then continue the road test.

2. CHECK SHIFT UP D1 → D2

Press the accelerator pedal down all the way and inspect whether or not the transmission shifts up (D1 → D2) at the correct speed.

- Refer to [AT-66](#) .

📖 **With CONSULT-II**

Read the gear position, throttle position and vehicle speed.

Does the A/T shift up D1 → D2 at the correct speed?

YES >> GO TO 3.

NO >> Enter a check mark at "Vehicle does not shift D1 → D2" on the diagnostics worksheet, then continue the road test.

3. CHECK SHIFT UP D2 → D3

Press the accelerator pedal down all the way and inspect whether or not the transmission shifts up (D2 → D3) at the correct speed.

- Refer to [AT-66](#) .

📖 **With CONSULT-II**

Read the gear position, throttle position and vehicle speed.

Does the A/T shift up D2 → D3 at the correct speed?

YES >> GO TO 4.

NO >> Enter a check mark at "Vehicle does not shift D2 → D3" on the diagnostics worksheet, then continue the road test.

4. CHECK SHIFT UP D3 → D4 AND ENGINE BRAKE

When the transmission changes speed D3 → D4, return the accelerator pedal.

Does the A/T shift up D3 → D4 and apply the engine brake?

YES >> 1. Stop the vehicle.

2. See [AT-65](#) .

NO >> Enter a check mark at "Vehicle does not shift D3 → D4" on the diagnostics worksheet, then continue the road test.

TROUBLE DIAGNOSIS

Cruise Test - Part 3

ACS000HS

1. MANUAL MODE FUNCTION

Move to manual mode from D position.

Does it switch to manual mode?

YES >> GO TO 2.

NO >> Continue road test and add checkmark to "Cannot be changed to manual mode" on diagnostics worksheet.

2. CHECK SHIFT DOWN

During manual mode driving, is downshift from M5 → M4 → M3 → M2 → M1 performed?

 **With CONSULT-II**

Read the gear position.

Is downshifting correctly performed?

YES >> GO TO 2.

NO >> Enter a check mark at "Vehicle does not shift" at the corresponding position (5th → 4th, 4th → 3rd, 3rd → 2nd, 2nd → 1st) on the diagnostics worksheet, then continue the road test.

3. CHECK ENGINE BRAKE

Does engine braking effectively reduce speed in M1 position?

YES >> 1. Stop the vehicle.

2. Carry out the self-diagnostics. Refer to [AT-93, "SELF-DIAGNOSTIC PROCEDURE \(WITH CONSULT-II\)"](#), [AT-103, "Diagnostic Procedure Without CONSULT-II"](#).

NO >> Enter a check mark at "Vehicle does not decelerate by engine brake" on the diagnostics worksheet, then continue trouble diagnosis.

TROUBLE DIAGNOSIS

Vehicle Speed When Shifting Gears

ACS000HT

Throttle position	Vehicle speed km/h (MPH)							
	D1 →D2	D2 →D3	D3 →D4	D4 →D5	D5 →D4	D4 →D3	D3 →D2	D2 →D1
Full throttle	58 - 62 (36 - 39)	90 - 98 (56 - 61)	140 - 150 (87 - 93)	201 - 211 (125 - 131)	197 - 207 (122 - 129)	122 - 132 (76 - 82)	74 - 82 (46 - 51)	34 - 38 (23 - 25)
Half throttle	46 - 50 (29 - 31)	71 - 79 (44 - 49)	107 - 117 (66 - 73)	135 - 145 (84 - 90)	88 - 98 (55 - 61)	63 - 73 (39 - 45)	29 - 37 (18 - 23)	11 - 15 (7 - 9)

- At half throttle, the accelerator opening is 4/8 of the full opening.

Vehicle Speed When Performing and Releasing Complete Lock-up

ACS000HU

Throttle position	Vehicle speed km/h (MPH)	
	Lock-up "ON"	Lock-up "OFF"
Closed throttle	56 - 64 (35 - 40)	53 - 61 (33 - 38)
Half throttle	168 - 176 (104 - 109)	131 - 139 (81 - 86)

- At closed throttle, the accelerator opening is less than 1/8 condition.
- At half throttle, the accelerator opening is 4/8 of the full opening.

Vehicle Speed When Performing and Releasing Slip Lock-up

ACS000HV

Throttle position	Gear position	Vehicle speed km/h (MPH)	
		Slip lock-up "ON"	Slip lock-up "OFF"
Closed throttle	4th	37 - 45 (23 - 28)	34 - 42 (21 - 26)
	5th	44 - 52 (27 - 32)	41 - 49 (25 - 30)

- At closed throttle, the accelerator opening is less than 1/8 condition.

TROUBLE DIAGNOSIS

Symptom Chart

ACS008QM

- The diagnostics item numbers show the sequence for inspection. Inspect in order from item 1.
- Overhaul and inspect inside the A/T only if A/T fluid condition is NG. Refer to [AT-56, "Fluid condition check"](#).

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
1		Large shock. ("N" → "D" position) Refer to AT-177, "Large Shock ("N" to "D" Position)" .	ON vehicle	1. Engine idle speed	EC-39
				2. Engine speed signal	AT-114
				3. Accelerator pedal position sensor	AT-128
				4. Control linkage adjustment	AT-215
				5. ATF temperature sensor	AT-130
				6. ATF pressure switch 1 and front brake solenoid valve	AT-164, AT-145
				7. CAN communication line	AT-105
				8. Fluid level and state	AT-56
				9. Line pressure test	AT-57
				10. Control valve with TCM	AT-224
			OFF vehicle	11. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-14, "Cross-Sectional View" .)	AT-263
2	Shift Shock	Shock is too large when changing D1 → D2 or M1 → M2.	ON vehicle	1. Accelerator pedal position sensor	AT-128
				2. Control linkage adjustment	AT-215
				3. ATF pressure switch 5 and direct clutch solenoid valve	AT-168, AT-149
				4. CAN communication line	AT-105
				5. Engine speed signal	AT-114
				6. Turbine revolution sensor	AT-132
				7. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-134
				8. Fluid level and state	AT-56
				9. Control valve with TCM	AT-224
			OFF vehicle	10. Direct clutch	AT-295
3		Shock is too large when changing D2 → D3 or M2 → M3.	ON vehicle	1. Accelerator pedal position sensor	AT-128
				2. Control linkage adjustment	AT-215
				3. ATF pressure switch 6 and high and low reverse clutch solenoid valve	AT-170, AT-153
				4. CAN communication line	AT-105
				5. Engine speed signal	AT-114
				6. Turbine revolution sensor	AT-132
				7. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-134
				8. Fluid level and state	AT-56
				9. Control valve with TCM	AT-224
			OFF vehicle	10. High and low reverse clutch	AT-293

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
4		Shock is too large when changing D3 → D4 or M3 → M4 .	ON vehicle	1. Accelerator pedal position sensor	AT-128
				2. Control linkage adjustment	AT-215
				3. ATF pressure switch 3 and input clutch solenoid valve	AT-166, AT-141
				4. CAN communication line	AT-105
				5. Engine speed signal	AT-114
				6. Turbine revolution sensor	AT-132
				7. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-134
				8. Fluid level and state	AT-56
				9. Control valve with TCM	AT-224
			OFF vehicle	10. Input clutch	AT-283
5	Shift Shock	Shock is too large when changing D4 → D5 or M4 → M5 .	ON vehicle	1. Accelerator pedal position sensor	AT-128
				2. Control linkage adjustment	AT-215
				3. ATF pressure switch 1 and front brake solenoid valve	AT-164, AT-145
				4. CAN communication line	AT-105
				5. Engine speed signal	AT-114
				6. Turbine revolution sensor	AT-132
				7. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-134
				8. Fluid level and state	AT-56
				9. Control valve with TCM	AT-224
			OFF vehicle	10. Front brake (brake band)	AT-253
				11. Input clutch	AT-283
6		Shock is too large for downshift when accelerator pedal is pressed.	ON vehicle	1. Accelerator pedal position sensor	AT-128
				2. Control linkage adjustment	AT-215
				3. CAN communication line	AT-105
				4. Engine speed signal	AT-114
				5. Turbine revolution sensor	AT-132
				6. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-134
				7. Fluid level and state	AT-56
				8. Control valve with TCM	AT-224
			OFF vehicle	9. Front brake (brake band)	AT-253
				10. Input clutch	AT-283
				11. High and low reverse clutch	AT-293
				12. Direct clutch	AT-295

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
7		Shock is too large for upshift when accelerator pedal is released.	ON vehicle	1. Accelerator pedal position sensor	AT-128
				2. Control linkage adjustment	AT-215
				3. Engine speed signal	AT-114
				4. CAN communication line	AT-105
				5. Turbine revolution sensor	AT-132
				6. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-134
				7. Fluid level and state	AT-56
				8. Control valve with TCM	AT-224
			OFF vehicle	9. Front brake (brake band)	AT-253
				10. Input clutch	AT-283
				11. High and low reverse clutch	AT-293
				12. Direct clutch	AT-295
8	Shift Shock	Shock is too large for lock-up.	ON vehicle	1. Accelerator pedal position sensor	AT-128
				2. Control linkage adjustment	AT-215
				3. Engine speed signal	AT-114
				4. CAN communication line	AT-105
				5. Turbine revolution sensor	AT-132
				6. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-134
				7. Torque converter clutch solenoid valve	AT-116
				8. Fluid level and state	AT-56
				9. Control valve with TCM	AT-224
			OFF vehicle	10. Torque converter	AT-263
9		Shock is too large during engine brake.	ON vehicle	1. Accelerator pedal position sensor	AT-128
				2. Control linkage adjustment	AT-215
				3. CAN communication line	AT-105
				4. Fluid level and state	AT-56
				5. Control valve with TCM	AT-224
			OFF vehicle	6. Front brake (brake band)	AT-253
				7. Input clutch	AT-283
				8. High and low reverse clutch	AT-293
				9. Direct clutch	AT-295

A
B
AT
D
E
F
G
H
I
J
K
L
M

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
10		Gear does not change from D1 → D2 or from M1 → M2 . Refer to AT-188, "A/T Does Not Shift: D1 → D2" .	ON vehicle	1. Fluid level and state	AT-56
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-134
				3. ATF pressure switch 5 and direct clutch solenoid valve	AT-168, AT-149
				4. Line pressure test	AT-57
				5. CAN communication line	AT-105
			OFF vehicle	6. Control valve with TCM	AT-224
			OFF vehicle	7. Direct clutch	AT-295
11		Gear does not change from D2 → D3 or from M2 → M3 . Refer to AT-190, "A/T Does Not Shift: D2 → D3" .	ON vehicle	1. Fluid level and state	AT-56
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-134
				3. ATF pressure switch 6 and high and low reverse clutch solenoid valve	AT-170, AT-153
				4. Line pressure test	AT-57
				5. CAN communication line	AT-105
			OFF vehicle	6. Control valve with TCM	AT-224
			OFF vehicle	7. High and low reverse clutch	AT-293
12	No Up Shift	Gear does not change from D3 → D4 or from M3 → M4 . Refer to AT-193, "A/T Does Not Shift: D3 → D4" .	ON vehicle	1. Fluid level and state	AT-56
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-134
				3. ATF pressure switch 3 and input clutch solenoid valve	AT-166, AT-141
				4. ATF pressure switch 1 and front brake solenoid valve	AT-164, AT-145
				5. Line pressure test	AT-57
				6. CAN communication line	AT-105
			7. Control valve with TCM	AT-224	
OFF vehicle	8. Input clutch	AT-283			
13		Gear does not change from D4 → D5 or from M4 → M5 . Refer to AT-195, "A/T Does Not Shift: D4 → D5" .	ON vehicle	1. Fluid level and state	AT-56
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-134
				3. ATF pressure switch 1 and front brake solenoid valve	AT-164, AT-145
				4. ATF pressure switch 5 and direct clutch solenoid valve	AT-168, AT-149
				5. Turbine revolution sensor	AT-132
				6. Line pressure test	AT-57
				7. CAN communication line	AT-105
				8. Control valve with TCM	AT-224
			OFF vehicle	9. Front brake (brake band)	AT-263
				10. Input clutch	AT-283

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
14		In "D" or "M" range, does not downshift to 4th gear. Refer to AT-204, "A/T Does Not Shift: 5th gear → 4th gear" .	ON vehicle	1. Fluid level and state	AT-56
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-134
				3. ATF pressure switch 1 and front brake solenoid valve	AT-164, AT-145
				4. ATF pressure switch 5 and direct clutch solenoid valve	AT-168, AT-149
				5. CAN communication line	AT-105
				6. Line pressure test	AT-57
				7. Control valve with TCM	AT-224
			OFF vehicle	8. Front brake (brake band)	AT-263
				9. Input clutch	AT-283
15	No Down Shift	In "D" or "M" range, does not downshift to 3rd gear. Refer to AT-206, "A/T Does Not Shift: 4th gear → 3rd gear" .	ON vehicle	1. Fluid level and state	AT-56
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-134
				3. ATF pressure switch 3 and input clutch solenoid valve	AT-166, AT-141
				4. ATF pressure switch 1 and front brake solenoid valve	AT-164, AT-145
				5. CAN communication line	AT-105
				6. Line pressure test	AT-57
				7. Control valve with TCM	AT-224
			OFF vehicle	8. Input clutch	AT-283
			16		In "D" or "M" range, does not downshift to 2nd gear. Refer to AT-208, "A/T Does Not Shift: 3rd gear → 2nd gear" .
2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-134				
3. ATF pressure switch 6 and high and low reverse clutch solenoid valve	AT-170, AT-153				
4. CAN communication line	AT-105				
5. Line pressure test	AT-57				
6. Control valve with TCM	AT-224				
OFF vehicle	7. High and low reverse clutch	AT-293			
17		In "D" or "M" range, does not downshift to 1st gear. Refer to AT-210, "A/T Does Not Shift: 2nd gear → 1st gear" .	ON vehicle	1. Fluid level and state	AT-56
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-134
				3. ATF pressure switch 5 and direct clutch solenoid valve	AT-168, AT-149
				4. CAN communication line	AT-105
				5. Line pressure test	AT-57
				6. Control valve with TCM	AT-224
			OFF vehicle	7. Direct clutch	AT-295

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page				
18		When "D" or "M" position, remains in 1st gear.	ON vehicle	1. Fluid level and state	AT-56				
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112 , AT-134				
				3. Direct clutch solenoid valve	AT-149				
				4. Line pressure test	AT-57				
				5. CAN communication line	AT-105				
				6. Control valve with TCM	AT-224				
			OFF vehicle	7. 3rd one-way clutch	AT-281				
				8. 1st one-way clutch	AT-288				
				9. Gear system	AT-253				
				10. Reverse brake	AT-263				
				11. Forward one-way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-14 , " Cross-Sectional View " .)	AT-263				
				12. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-14 , " Cross-Sectional View " .)	AT-263				
19	Slips/Will Not engage	When "D" or "M" position, remains in 2nd gear.	ON vehicle	1. Fluid level and state	AT-56				
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112 , AT-134				
				3. Low coast brake solenoid valve	AT-157				
				4. Line pressure test	AT-57				
				5. CAN communication line	AT-105				
				6. Control valve with TCM	AT-224				
			OFF vehicle	7. 3rd one-way clutch	AT-281				
				8. Gear system	AT-253				
				9. Direct clutch	AT-295				
				10. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-14 , " Cross-Sectional View " .)	AT-263				
				20		When "D" or "M" position, remains in 3rd gear.	ON vehicle	1. Fluid level and state	AT-56
								2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112 , AT-134
3. Line pressure test	AT-57								
4. CAN communication line	AT-105								
5. Control valve with TCM	AT-224								
OFF vehicle	6. 3rd one-way clutch	AT-281							
	7. Gear system	AT-253							
	8. High and low reverse clutch	AT-293							
	9. Forward one-way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-14 , " Cross-Sectional View " .)	AT-263							
	10. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-14 , " Cross-Sectional View " .)	AT-263							

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
21	Slips/Will Not engage	When "D" or "M" position, remains in 4th gear.	ON vehicle	1. Fluid level and state	AT-56
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-134
				3. ATF pressure switch 3 and input clutch solenoid valve	AT-166, AT-141
				4. ATF pressure switch 5 and direct clutch solenoid valve	AT-168, AT-149
				5. ATF pressure switch 6 and high and low reverse clutch solenoid valve	AT-170, AT-153
				6. Low coast brake solenoid valve	AT-157
				7. Front brake solenoid valve	AT-145
				8. Line pressure test	AT-57
				9. CAN communication line	AT-105
				10. Control valve with TCM	AT-224
			OFF vehicle	11. Input clutch	AT-283
				12. Gear system	AT-253
				13. High and low reverse clutch	AT-293
				14. Direct clutch	AT-295
22		When "D" or "M" position, remains in 5th gear.	ON vehicle	1. Fluid level and state	AT-56
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-134
				3. ATF pressure switch 1 and front brake solenoid valve	AT-164, AT-145
				4. Line pressure test	AT-57
				5. CAN communication line	AT-105
				6. Control valve with TCM	AT-224
			OFF vehicle	7. Front brake (brake band)	AT-263
				8. Input clutch	AT-283
				9. Gear system	AT-253
				10. High and low reverse clutch	AT-293

A
B
AT
D
E
F
G
H
I
J
K
L
M

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
23		Vehicle cannot be started from D1 . Refer to AT-185 , " Vehicle Cannot Be Started From D1 " .	ON vehicle	1. Fluid level and state	AT-56
				2. Accelerator pedal position sensor	AT-128
				3. Line pressure test	AT-57
				4. CAN communication line	AT-105
				5. Control valve with TCM	AT-224
			OFF vehicle	6. Torque converter	AT-263
				7. Oil pump assembly	AT-278
				8. 3rd one-way clutch	AT-281
				9. 1st one-way clutch	AT-288
				10. Gear system	AT-253
				11. Reverse brake	AT-263
				12. Forward one-way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-14 , " Cross-Sectional View " .)	AT-263
				13. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-14 , " Cross-Sectional View " .)	AT-263
24	Slips/Will Not Engage	Does not lock-up. Refer to AT-198 , " A/T Does Not Perform Lock-up " .	ON vehicle	1. Fluid level and state	AT-56
				2. Line pressure test	AT-57
				3. Engine speed signal	AT-114
				4. Turbine revolution sensor	AT-132
				5. Torque converter clutch solenoid valve	AT-116
				6. CAN communication line	AT-105
				7. Control valve with TCM	AT-224
			OFF vehicle	8. Torque converter	AT-263
				9. Oil pump assembly	AT-278
25		Does not hold lock-up condition. Refer to AT-200 , " A/T Does Not Hold Lock-up Condition " .	ON vehicle	1. Fluid level and state	AT-56
				2. Line pressure test	AT-57
				3. Engine speed signal	AT-114
				4. Turbine revolution sensor	AT-132
				5. Torque converter clutch solenoid valve	AT-116
				6. CAN communication line	AT-105
				7. Control valve with TCM	AT-224
			OFF vehicle	8. Torque converter	AT-263
				9. Oil pump assembly	AT-278

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
26		Lock-up is not released. Refer to AT-201 , "Lock-up Is Not Released" .	ON vehicle	1. Fluid level and state	AT-56
				2. Line pressure test	AT-57
				3. Engine speed signal	AT-114
				4. Turbine revolution sensor	AT-132
				5. Torque converter clutch solenoid valve	AT-116
				6. CAN communication line	AT-105
				7. Control valve with TCM	AT-224
			OFF vehicle	8. Torque converter	AT-263
				9. Oil pump assembly	AT-278
27	Slips/Will Not engage	No shock at all or the clutch slips when vehicle changes speed D1 → D2 or M1 → M2 .	ON vehicle	1. Fluid level and state	AT-56
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112 , AT-134
				3. ATF pressure switch 5 and direct clutch solenoid valve	AT-168 , AT-149
				4. CAN communication line	AT-105
				5. Line pressure test	AT-57
				6. Control valve with TCM	AT-224
			OFF vehicle	7. Torque converter	AT-263
				8. Oil pump assembly	AT-278
				9. 3rd one-way clutch	AT-281
				10. Gear system	AT-253
				11. Direct clutch	AT-295
				12. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-14 , "Cross-Sectional View" .)	AT-263

A
B
AT
D
E
F
G
H
I
J
K
L
M

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
28	Slips/Will Not engage	No shock at all or the clutch slips when vehicle changes speed D2 → D3 or M2 → M3 .	ON vehicle	1. Fluid level and state	AT-56
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-134
				3. ATF pressure switch 6 and high and low reverse clutch solenoid valve	AT-170, AT-153
				4. CAN communication line	AT-105
				5. Line pressure test	AT-57
				6. Control valve with TCM	AT-224
			OFF vehicle	7. Torque converter	AT-263
				8. Oil pump assembly	AT-278
				9. 3rd one-way clutch	AT-281
				10. Gear system	AT-253
				11. High and low reverse clutch	AT-293
				12. Forward one- way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-14, "Cross-Sectional View" .)	AT-263
				13. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-14, "Cross-Sectional View" .)	AT-263
29	Slips/Will Not engage	No shock at all or the clutch slips when vehicle changes speed D3 → D4 or M3 → M4 .	ON vehicle	1. Fluid level and state	AT-56
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-134
				3. ATF pressure switch 3 and input clutch solenoid valve	AT-166, AT-141
				4. ATF pressure switch 1 and front brake solenoid valve	AT-164, AT-145
				5. CAN communication line	AT-105
				6. Line pressure test	AT-57
				7. Control valve with TCM	AT-224
			OFF vehicle	8. Torque converter	AT-263
				9. Oil pump assembly	AT-278
				10. Input clutch	AT-283
				11. Gear system	AT-253
				12. High and low reverse clutch	AT-293
				13. Direct clutch	AT-295

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
30	Slips/Will Not engage	No shock at all or the clutch slips when vehicle changes speed D4 → D5 or M4 → M5 .	ON vehicle	1. Fluid level and state	AT-56
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-134
				3. ATF pressure switch 1 and front brake solenoid valve	AT-164, AT-145
				4. ATF pressure switch 5 and direct clutch solenoid valve	AT-168, AT-149
				5. CAN communication line	AT-105
				6. Line pressure test	AT-57
				7. Control valve with TCM	AT-224
			OFF vehicle	8. Torque converter	AT-263
				9. Oil pump assembly	AT-278
				10. Front brake (brake band)	AT-263
				11. Input clutch	AT-283
				12. Gear system	AT-253
				13. High and low reverse clutch	AT-293
31	Slips/Will Not engage	When you press the accelerator pedal and shift speed D5 → D4 or M5 → M4 the engine idles or the transmission slips.	ON vehicle	1. Fluid level and state	AT-56
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-134
				3. ATF pressure switch 1 and front brake solenoid valve	AT-164, AT-145
				4. ATF pressure switch 5 and direct clutch solenoid valve	AT-168, AT-149
				5. CAN communication line	AT-105
				6. Line pressure test	AT-57
				7. Control valve with TCM	AT-224
			OFF vehicle	8. Torque converter	AT-263
				9. Oil pump assembly	AT-278
				10. Input clutch	AT-283
				11. Gear system	AT-253
				12. High and low reverse clutch	AT-293
				13. Direct clutch	AT-295

A
B
AT
D
E
F
G
H
I
J
K
L
M

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
32	Slips/Will Not engage	When you press the accelerator pedal and shift speed D4 → D3 or M4 → M3 the engine idles or the transmission slips.	ON vehicle	1. Fluid level and state	AT-56
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-134
				3. ATF pressure switch 3 and input clutch solenoid valve	AT-166, AT-141
				4. ATF pressure switch 1 and front brake solenoid valve	AT-164, AT-145
				5. CAN communication line	AT-105
				6. Line pressure test	AT-57
				7. Control valve with TCM	AT-224
			OFF vehicle	8. Torque converter	AT-263
				9. Oil pump assembly	AT-278
				10. 3rd one-way clutch	AT-281
				11. Gear system	AT-253
				12. High and low reverse clutch	AT-293
				13. Forward one- way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-14, "Cross-Sectional View" .)	AT-263
				14. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-14, "Cross-Sectional View" .)	AT-263
33		When you press the accelerator pedal and shift speed D3 → D2 or M3 → M2 the engine idles or the transmission slips.	ON vehicle	1. Fluid level and state	AT-56
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-134
				3. ATF pressure switch 6 and high and low reverse clutch solenoid valve	AT-170, AT-153
				4. ATF pressure switch 5 and direct clutch solenoid valve	AT-168, AT-149
				5. CAN communication line	AT-105
				6. Line pressure test	AT-57
				7. Control valve with TCM	AT-224
			OFF vehicle	8. Torque converter	AT-263
				9. Oil pump assembly	AT-278
				10. 3rd one-way clutch	AT-281
				11. Gear system	AT-253
				12. Direct clutch	AT-295
				13. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-14, "Cross-Sectional View" .)	AT-263

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
34	Slips/Will Not Engage	When you press the accelerator pedal and shift speed D2 → D1 or M2 → M1 the engine idles or the transmission slips.	ON vehicle	1. Fluid level and state	AT-56
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112 , AT-134
				3. ATF pressure switch 5 and direct clutch solenoid valve	AT-168 , AT-149
				4. CAN communication line	AT-105
				5. Line pressure test	AT-57
				6. Control valve with TCM	AT-224
			OFF vehicle	7. Torque converter	AT-263
				8. Oil pump assembly	AT-278
				9. 3rd one-way clutch	AT-281
				10. 1st one-way clutch	AT-288
				11. Gear system	AT-253
				12. Reverse brake	AT-263
				13. Forward one- way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-14 , " Cross-Sectional View " .)	AT-263
				14. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-14 , " Cross-Sectional View " .)	AT-263
35	With selector lever in "D" position, acceleration is extremely poor.		ON vehicle	1. Fluid level and state	AT-56
				2. Line pressure test	AT-57
				3. Accelerator pedal position sensor	AT-128
				4. CAN communication line	AT-105
				5. PNP switch	AT-110
				6. Control linkage adjustment	AT-215
				7. Control valve with TCM	AT-224
			OFF vehicle	8. Torque converter	AT-263
				9. Oil pump assembly	AT-278
				10. 1st one-way clutch	AT-288
				11. Gear system	AT-253
				12. Reverse brake	AT-263
				13. Forward one- way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-14 , " Cross-Sectional View " .)	AT-263
				14. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-14 , " Cross-Sectional View " .)	AT-263

A
B
AT
D
E
F
G
H
I
J
K
L
M

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
36		With selector lever in "R" position, acceleration is extremely poor.	ON vehicle	1. Fluid level and state	AT-56
				2. Line pressure test	AT-57
				3. Accelerator pedal position sensor	AT-128
				4. ATF pressure switch 6 and high and low reverse clutch solenoid valve	AT-170 , AT-153
				5. CAN communication line	AT-105
				6. PNP switch	AT-110
				7. Control linkage adjustment	AT-215
				8. Control valve with TCM	AT-224
			OFF vehicle	9. Gear system	AT-253
				10. Output shaft	AT-263
				11. Reverse brake	AT-263
37	Slips/Will Not Engage	While starting off by accelerating in 1st, engine races or slip-page occurs.	ON vehicle	1. Fluid level and state	AT-56
				2. Line pressure test	AT-57
				3. Accelerator pedal position sensor	AT-128
				4. CAN communication line	AT-105
				5. Control valve with TCM	AT-224
			OFF vehicle	6. Torque converter	AT-263
				7. Oil pump assembly	AT-278
				8. 3rd one-way clutch	AT-281
				9. 1st one-way clutch	AT-288
				10. Gear system	AT-253
				11. Reverse brake	AT-263
				12. Forward one- way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-14 , " Cross-Sectional View " .)	AT-263
				13. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-14 , " Cross-Sectional View " .)	AT-263

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
38		While accelerating in 2nd, engine races or slippage occurs.	ON vehicle	1. Fluid level and state	AT-56
				2. Line pressure test	AT-57
				3. Accelerator pedal position sensor	AT-128
				4. CAN communication line	AT-105
				5. ATF pressure switch 5 and direct clutch solenoid valve	AT-168, AT-149
				6. Control valve with TCM	AT-224
			OFF vehicle	7. Torque converter	AT-263
				8. Oil pump assembly	AT-278
				9. 3rd one-way clutch	AT-281
				10. Gear system	AT-253
				11. Direct clutch	AT-295
				12. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-14, "Cross-Sectional View" .)	AT-263
39	Slips/Will Not Engage	While accelerating in 3rd, engine races or slippage occurs.	ON vehicle	1. Fluid level and state	AT-56
				2. Line pressure test	AT-57
				3. Accelerator pedal position sensor	AT-128
				4. CAN communication line	AT-105
				5. ATF pressure switch 6 and high and low reverse clutch solenoid valve	AT-170, AT-153
				6. Control valve with TCM	AT-224
			OFF vehicle	7. Torque converter	AT-263
				8. Oil pump assembly	AT-278
				9. 3rd one-way clutch	AT-281
				10. Gear system	AT-253
				11. High and low reverse clutch	AT-293
				12. Forward one- way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-14, "Cross-Sectional View" .)	AT-263
				13. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-14, "Cross-Sectional View" .)	AT-263

A
B
AT
D
E
F
G
H
I
J
K
L
M

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
40		While accelerating in 4th, engine races or slippage occurs.	ON vehicle	1. Fluid level and state	AT-56
				2. Line pressure test	AT-57
				3. Accelerator pedal position sensor	AT-128
				4. CAN communication line	AT-105
				5. ATF pressure switch 3 and input clutch solenoid valve	AT-166, AT-141
				6. Control valve with TCM	AT-224
			OFF vehicle	7. Torque converter	AT-263
				8. Oil pump assembly	AT-278
				9. Input clutch	AT-283
				10. Gear system	AT-253
				11. High and low reverse clutch	AT-293
				12. Direct clutch	AT-295
41	Slips/Will Not Engage	While accelerating in 5th, engine races or slippage occurs.	ON vehicle	1. Fluid level and state	AT-56
				2. Line pressure test	AT-57
				3. Accelerator pedal position sensor	AT-128
				4. CAN communication line	AT-105
				5. ATF pressure switch 1 and front brake solenoid valve	AT-164, AT-145
				6. Control valve with TCM	AT-224
			OFF vehicle	7. Torque converter	AT-263
				8. Oil pump assembly	AT-278
				9. Front brake (brake band)	AT-263
				10. Input clutch	AT-283
				11. Gear system	AT-253
				12. High and low reverse clutch	AT-293
42		Slips at lock-up.	ON vehicle	1. Fluid level and state	AT-56
				2. Line pressure test	AT-57
				3. Engine speed signal	AT-114
				4. Turbine revolution sensor	AT-132
				5. Torque converter clutch solenoid valve	AT-116
				6. CAN communication line	AT-105
				7. Control valve with TCM	AT-224
			OFF vehicle	8. Torque converter	AT-263
				9. Oil pump assembly	AT-278

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
43	Slips/Will Not Engage	No creep at all. Refer to AT-180 , " Vehicle Does Not Creep Backward In "R" Position ", AT-183 , " Vehicle Does Not Creep Forward In "D" Position "	ON vehicle	1. Fluid level and state	AT-56
				2. Line pressure test	AT-57
				3. Accelerator pedal position sensor	AT-128
				4. ATF pressure switch 5 and direct clutch solenoid valve	AT-168 , AT-149
				5. PNP switch	AT-110
				6. CAN communication line	AT-105
				7. Control linkage adjustment	AT-215
				8. Control valve with TCM	AT-224
			OFF vehicle	9. Torque converter	AT-263
				10. Oil pump assembly	AT-278
				11. 1st one-way clutch	AT-288
				12. Gear system	AT-253
				13. Reverse brake	AT-263
				14. Direct clutch	AT-295
				15. Forward one- way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-14 , " Cross-Sectional View " .)	AT-263
				16. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-14 , " Cross-Sectional View " .)	AT-263
44	Vehicle cannot run in all positions.		ON vehicle	1. Fluid level and state	AT-56
				2. Line pressure test	AT-57
				3. PNP switch	AT-110
				4. Control linkage adjustment	AT-215
				5. Control valve with TCM	AT-224
			OFF vehicle	6. Oil pump assembly	AT-278
				7. Gear system	AT-253
				8. Output shaft	AT-263

A
B
AT
D
E
F
G
H
I
J
K
L
M

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
45	Slips/Will Not Engage	With selector lever in "D" position, driving is not possible.	ON vehicle	1. Fluid level and state	AT-56
				2. Line pressure test	AT-57
				3. PNP switch	AT-110
				4. Control linkage adjustment	AT-215
				5. Control valve with TCM	AT-224
			OFF vehicle	6. Torque converter	AT-263
				7. Oil pump assembly	AT-278
				8. 1st one-way clutch	AT-288
				9. Gear system	AT-253
				10. Reverse brake	AT-263
				11. Forward one- way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-14. "Cross-Sectional View" .)	AT-263
				12. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-14. "Cross-Sectional View" .)	AT-263
46		With selector lever in "R" position, driving is not possible.	ON vehicle	1. Fluid level and state	AT-56
				2. Line pressure test	AT-57
				3. PNP switch	AT-110
				4. Control linkage adjustment	AT-215
				5. Control valve with TCM	AT-224
			OFF vehicle	6. Gear system	AT-253
				7. Output shaft	AT-263
				8. Reverse brake	AT-263
47	Does Not Change	Does not change M5 → M4.	ON vehicle	1. PNP switch	AT-110
				2. Fluid level and state	AT-56
				3. Control linkage adjustment	AT-215
				4. Manual mode switch	AT-161
				5. ATF pressure switch 1	AT-164
				6. CAN communication line	AT-105
				7. Control valve with TCM	AT-224
			OFF vehicle	8. Front brake (brake band)	AT-263

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page	
48	Does Not Change	Does not change M4 → M3.	ON vehicle	1. PNP switch	AT-110	
				2. Fluid level and state	AT-56	
				3. Control linkage adjustment	AT-215	
				4. Manual mode switch	AT-161	
				5. ATF pressure switch 1 and ATF pressure switch 3	AT-164, AT-166	
				6. CAN communication line	AT-105	
				7. Control valve with TCM	AT-224	
OFF vehicle		8. Front brake (brake band)	AT-263			
		9. Input clutch	AT-283			
49			Does not change M3 → M2.	ON vehicle	1. PNP switch	AT-110
					2. Fluid level and state	AT-56
					3. Control linkage adjustment	AT-215
					4. Manual mode switch	AT-161
					5. ATF pressure switch 6	AT-170
	6. CAN communication line				AT-105	
	7. Control valve with TCM				AT-224	
	OFF vehicle			8. Front brake (brake band)	AT-263	
				9. Input clutch	AT-283	
				10. High and low reverse clutch	AT-293	
50		Does not change M2 → M1.	ON vehicle	1. PNP switch	AT-110	
				2. Fluid level and state	AT-56	
				3. Control linkage adjustment	AT-215	
				4. Manual mode switch	AT-161	
				5. ATF pressure switch 5	AT-168	
				6. CAN communication line	AT-105	
				7. Control valve with TCM	AT-224	
			OFF vehicle	8. Input clutch	AT-283	
				9. High and low reverse clutch	AT-293	
				10. Direct clutch	AT-295	
51		Can not be changed to manual mode. Refer to AT-203 . " Cannot Be Changed to Manual Mode ".	ON vehicle	1. Manual mode switch	AT-161	
				2. Turbine revolution sensor	AT-132	
				3. CAN communication line	AT-105	
52	Others	Shift point is high in "D" position.	ON vehicle	1. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-134	
				2. Accelerator pedal position sensor	AT-128	
				3. CAN communication line	AT-105	
				4. ATF temperature sensor	AT-130	
				5. Control valve with TCM	AT-224	

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
53		Shift point is low in "D" position.	ON vehicle	1. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112 , AT-134
				2. Accelerator pedal position sensor	AT-128
				3. CAN communication line	AT-105
				4. Control valve with TCM	AT-224
54		Judder occurs during lock-up.	ON vehicle	1. Fluid level and state	AT-56
				2. Engine speed signal	AT-114
				3. Turbine revolution sensor	AT-132
				4. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112 , AT-134
			OFF vehicle	5. Accelerator pedal position sensor	AT-128
				6. CAN communication line	AT-105
				7. Torque converter clutch solenoid valve	AT-116
				8. Control valve with TCM	AT-224
			9. Torque converter	AT-263	
55	Others	Strange noise in "R" position.	ON vehicle	1. Fluid level and state	AT-56
				2. Engine speed signal	AT-114
				3. CAN communication line	AT-105
				4. Control valve with TCM	AT-224
			OFF vehicle	5. Torque converter	AT-263
				6. Oil pump assembly	AT-278
				7. Gear system	AT-253
				8. High and low reverse clutch	AT-293
				9. Reverse brake	AT-263
56		Strange noise in "N" position.	ON vehicle	1. Fluid level and state	AT-56
				2. Engine speed signal	AT-114
				3. CAN communication line	AT-105
				4. Control valve with TCM	AT-224
			OFF vehicle	5. Torque converter	AT-263
				6. Oil pump assembly	AT-278
				7. Gear system	AT-253
57		Strange noise in "D" position.	ON vehicle	1. Fluid level and state	AT-56
				2. Engine speed signal	AT-114
				3. CAN communication line	AT-105
				4. Control valve with TCM	AT-224
			OFF vehicle	5. Torque converter	AT-263
				6. Oil pump assembly	AT-278
				7. Gear system	AT-253
				8. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-14 , " Cross-Sectional View ".)	AT-263

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
58		Vehicle dose not decelerate by engine brake. Refer to AT-212 . "Vehicle Does Not Decelerate By Engine Brake" .	ON vehicle	1. PNP switch	AT-110
				2. Fluid level and state	AT-56
				3. Control linkage adjustment	AT-215
				4. Manual mode switch	AT-161
				5. ATF pressure switch 5	AT-168
				6. CAN communication line	AT-105
				7. Control valve with TCM	AT-224
			OFF vehicle	8. Input clutch	AT-283
				9. High and low reverse clutch	AT-293
				10. Direct clutch	AT-295
59		Engine brake does not work M5 → M4.	ON vehicle	1. PNP switch	AT-110
				2. Fluid level and state	AT-56
				3. Control linkage adjustment	AT-215
				4. Manual mode switch	AT-161
				5. ATF pressure switch 1	AT-164
				6. CAN communication line	AT-105
				7. Control valve with TCM	AT-224
OFF vehicle	8. Front brake (brake band)	AT-263			
60	Others	Engine brake does not work M4 → M3.	ON vehicle	1. PNP switch	AT-110
				2. Fluid level and state	AT-56
				3. Control linkage adjustment	AT-215
				4. Manual mode switch	AT-161
				5. ATF pressure switch 1 and ATF pressure switch 3	AT-164 , AT-166
				6. CAN communication line	AT-105
				7. Control valve with TCM	AT-224
			OFF vehicle	8. Front brake (brake band)	AT-263
				9. Input clutch	AT-283
				10. High and low reverse clutch	AT-293
61		Engine brake does not work M3 → M2.	ON vehicle	1. PNP switch	AT-110
				2. Fluid level and state	AT-56
				3. Control linkage adjustment	AT-215
				4. Manual mode switch	AT-161
				5. ATF pressure switch 6	AT-170
				6. CAN communication line	AT-105
				7. Control valve with TCM	AT-224
			OFF vehicle	8. Front brake (brake band)	AT-263
				9. Input clutch	AT-283
				10. High and low reverse clutch	AT-293

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
62		Engine brake does not work M2 → M1.	ON vehicle	1. PNP switch	AT-110
				2. Fluid level and state	AT-56
				3. Control linkage adjustment	AT-215
				4. Manual mode switch	AT-161
				5. ATF pressure switch 5	AT-168
				6. CAN communication line	AT-105
				7. Control valve with TCM	AT-224
			OFF vehicle	8. Input clutch	AT-283
				9. High and low reverse clutch	AT-293
				10. Direct clutch	AT-295
63	Others	Maximum speed low.	ON vehicle	1. Fluid level and state	AT-56
				2. Line pressure test	AT-57
				3. Accelerator pedal position sensor	AT-128
				4. CAN communication line	AT-105
				5. Direct clutch solenoid valve	AT-149
				6. Control valve with TCM	AT-224
			OFF vehicle	7. Torque converter	AT-263
				8. Oil pump assembly	AT-278
				9. Input clutch	AT-283
				10. Gear system	AT-253
				11. High and low reverse clutch	AT-293
				12. Direct clutch	AT-295
				13. Forward one- way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-14, "Cross-Sectional View" .)	AT-263
				14 Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-14, "Cross-Sectional View" .)	AT-263
64		Extremely large creep.	ON vehicle	1. Engine idle speed	EC-39
				2. CAN communication line	AT-105
				3. ATF pressure switch 5	AT-168
			OFF vehicle	4. Torque converter	AT-263
65		With selector lever in "P" position, vehicle does not enter parking condition or, with selector lever in another position, parking condition is not cancelled. Refer to AT-175, "In "P" Position, Vehicle Moves When Pushed"	ON vehicle	1. PNP switch	AT-110
				2. Control linkage adjustment	AT-215
				3. Parking pawl components	AT-253

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page	
66	Others	Vehicle runs with transmission in "P" position.	ON vehicle	1. PNP switch	AT-110	
				2. Fluid level and state	AT-56	
				3. Control linkage adjustment	AT-215	
				4. Control valve with TCM	AT-224	
				5. Parking pawl components	AT-253	
6. Gear system		AT-253				
67		Vehicle runs with transmission in "N" position. Refer to AT-176. "In "N" Position, Vehicle Moves" .	ON vehicle	1. PNP switch	AT-110	
				2. Fluid level and state	AT-56	
				3. Control linkage adjustment	AT-215	
				4. Control valve with TCM	AT-224	
	OFF vehicle		5. Input clutch	AT-283		
			6. Gear system	AT-253		
			7. Direct clutch	AT-295		
			8. Reverse brake	AT-263		
			9. Forward one- way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-14. "Cross-Sectional View" .)	AT-263		
			10. Low coast brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-14. "Cross-Sectional View" .)	AT-263		
68	Engine does not start in "N" or "P" position. Refer to AT-174. "Engine Cannot Be Started In "P" or "N" Position" .	ON vehicle	1. Ignition switch and starter	PG-4, SC-10		
			2. Control linkage adjustment	AT-215		
			3. PNP switch	AT-110		
69		Engine starts in positions other than "N" or "P".	ON vehicle	1. Ignition switch and starter	PG-4, SC-10	
				2. Control linkage adjustment	AT-215	
				3. PNP switch	AT-110	
70			Engine stall.	ON vehicle	1. Fluid level and state	AT-56
					2. Engine speed signal	AT-114
					3. Turbine revolution sensor	AT-132
	4. Torque converter clutch solenoid valve	AT-116				
	5. CAN communication line	AT-105				
	6. Control valve with TCM	AT-224				
	OFF vehicle	7. Torque converter		AT-263		

A
B
AT
D
E
F
G
H
I
J
K
L
M


TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
71		Engine stalls when select lever shifted "N" → "D", "R".	ON vehicle	1. Fluid level and state	AT-56
				2. Engine speed signal	AT-114
				3. Turbine revolution sensor	AT-132
				4. Torque converter clutch solenoid valve	AT-116
				5. CAN communication line	AT-105
				6. Control valve with TCM	AT-224
			OFF vehicle	7. Torque converter	AT-263
72	Others	Engine speed does not return to idle. Refer to AT-202 , " Engine Speed Does Not Return To Idle ".	ON vehicle	1. Fluid level and state	AT-56
				2. ATF pressure switch 5 and direct clutch solenoid valve	AT-168 , AT-149
				3. ATF pressure switch 1 and front brake solenoid valve	AT-164 , AT-145
				4. Accelerator pedal position sensor	AT-128
				5. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112 , AT-134
				6. CAN communication line	AT-105
				7. Control valve with TCM	AT-224
			OFF vehicle	8. Front brake (brake band)	AT-263
			9. Direct clutch	AT-295	

TROUBLE DIAGNOSIS

TCM Input/Output Signal Reference Values A/T ASSEMBLY TERMINAL CONNECTOR LAYOUT

ACS000HX

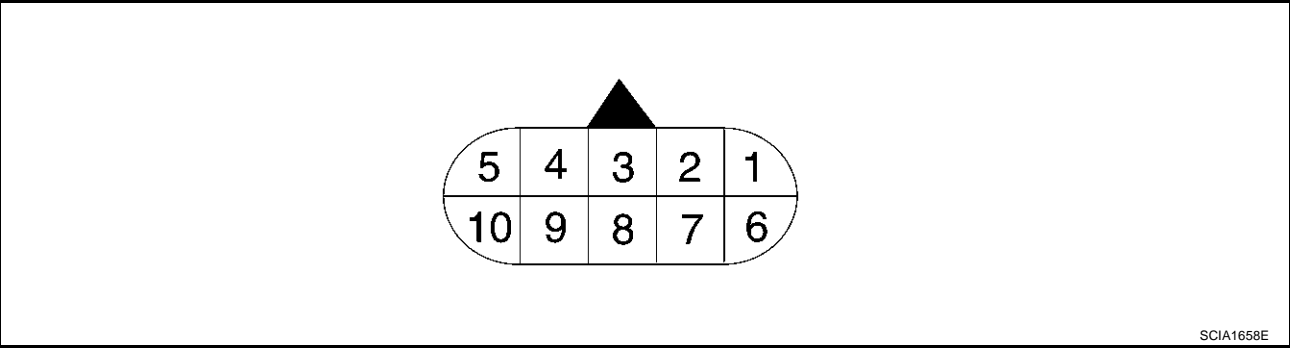

TCM INSPECTION TABLE

Data are reference value and are measured between each terminal and ground.

Terminal No.	Wire color	Item	Condition		Data (Approx.)
1	R/W	Power supply (Memory back-up)		-	Battery voltage
2	R/W	Power supply (Memory back-up)		-	Battery voltage
3	L	CAN-H		-	-
4	PU	K-line (CONSULT-II signal)	The terminal is connected to the data link connector for CONSULT-II.		-
5	B	Ground		-	-
6	Y/R	Power supply		-	Battery voltage
				-	0V
7	P	Back-up lamp relay		Selector lever in "R" position.	0V
				Selector lever in other positions.	Battery voltage
8	R	CAN-L		-	-
9	GY/R	Starter relay		Selector lever in "N", "P" positions.	Battery voltage
				Selector lever in other positions.	0V
10	B	Ground		-	-

TROUBLE DIAGNOSIS

CONSULT-II

ACS000HY

After performing "SELF-DIAGNOSTIC PROCEDURE (WITH CONSULT-II)" (Refer to [AT-93](#)), place check marks for results on the [AT-44, "DIAGNOSTIC WORKSHEET"](#) . Reference pages are provided following the items.

NOTICE:

1. The CONSULT-II electrically displays shift timing and lock-up timing (that is, operation timing of each solenoid).
Check for time difference between actual shift timing and the CONSULT-II display. If the difference is noticeable, mechanical parts (except solenoids, sensors, etc.) may be malfunctioning. Check mechanical parts using applicable diagnostic procedures.
2. Shift schedule (which implies gear position) displayed on CONSULT-II and that indicated in Service Manual may differ slightly. This occurs because of the following reasons:
 - Actual shift schedule has more or less tolerance or allowance,
 - Shift schedule indicated in Service Manual refers to the point where shifts start, and
 - Gear position displayed on CONSULT-II indicates the point where shifts are completed.
3. Display of solenoid valves on CONSULT-II changes at the start of shifting, while gear position is displayed upon completion of shifting (which is computed by TCM).
4. Additional CONSULT-II information can be found in the Operation Manual supplied with the CONSULT-II unit.

FUNCTION

Diagnostic test mode	Function	Reference page
Self-diagnostic results	Self-diagnostic results can be read and erased quickly.	AT-94
Data monitor	Input/Output data in the ECM can be read.	AT-97
CAN diagnostic support monitor	The results of transmit/receive diagnosis of CAN communication can be read.	—
Function test	Conducted by CONSULT-II instead of a technician to determine whether each system is "OK" or "NG".	—
DTC work support	Select the operating condition to confirm Diagnosis Trouble Codes.	AT-100
ECM part number	ECM part number can be read.	—

CONSULT-II REFERENCE VALUE

Item name	Condition	Display value (Approx.)
ATF TEMP SE 1	0°C (32° F) - 20°C (68°F) - 80°C (176°F)	2.2 - 1.8 - 0.6 V
ATF TEMP SE 2		2.2 - 1.7 - 0.45 V
TCC SOLENOID	When perform slip lock-up	0.2 - 0.4 A
	When perform lock-up	0.4 - 0.6 A

TROUBLE DIAGNOSIS

Ⓟ SELF-DIAGNOSTIC PROCEDURE (WITH CONSULT-II)


CONSULT-II setting procedure

CAUTION:


If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carry out CAN communication.

- For details, refer to the separate "CONSULT-II Operations Manual".


- Turn ignition switch "OFF".
- Connect CONSULT-II and CONSULT-II CONVERTER to data link connector, which is located in instrument lower panel on driver side.

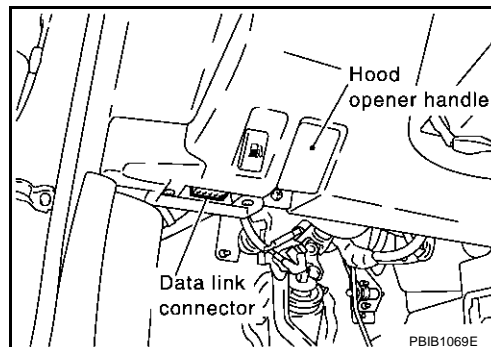


- Turn ignition switch "ON". (Do not start engine.)
- Touch "START (NISSAN BASED VHCL)".

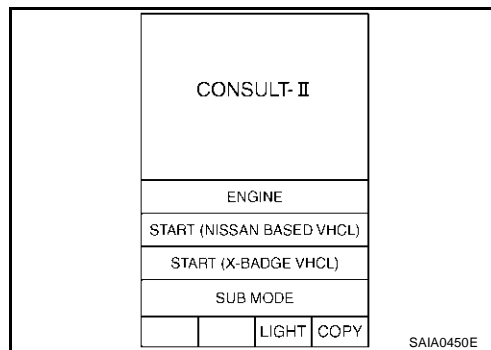

- Touch "ENGINE" for OBD-II detected items or touch "A/T" for TCM self-diagnosis. If "A/T" or "ENGINE" is not indicated, go to [GI-39, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

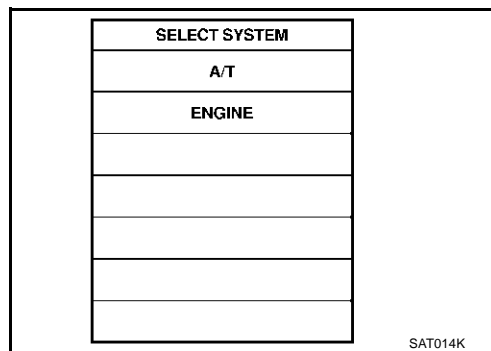

- Touch "SELF-DIAG RESULTS". Display shows malfunction experienced since the last erasing operation. CONSULT-II performs REAL-TIME SELF-DIAGNOSIS. Also, any malfunction detected while in this mode will be displayed at real time.

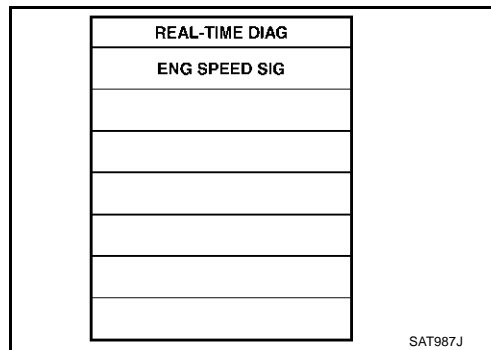

TROUBLE DIAGNOSIS

Self-diagnostic result test mode

X: Applicable, —: Not applicable

Items (CONSULT-II screen terms)	Malfunction is detected when...	TCM self-diagnosis		OBD-II (DTC)
		A/T CHECK indicator lamp	"A/T" with CONSULT-II	MIL indicator lamp*1, "ENGINE" with CONSULT-II or GST
CAN COMM CIRCUIT	<ul style="list-style-type: none"> When a malfunction is detected in CAN communications 	X	U1000	U1000
STARTER RELAY/CIRC	<ul style="list-style-type: none"> If this signal is ON other than in P or N position, this is judged to be a malfunction. (And if it is OFF in P or N position, this too is judged to be a malfunction.) 	X	P0615	—
PNP SW/CIRC	<ul style="list-style-type: none"> PNP switch 1-4 signals input with impossible pattern P position is detected from N position without any other position being detected in between. 	X	P0705	P0705
VEH SPD SEN/CIR AT (Revolution sensor)	<ul style="list-style-type: none"> Signal from vehicle speed sensor A/T (Revolution sensor) not input due to cut line or the like Unexpected signal input during running After ignition switch is turned ON, unexpected signal input from vehicle speed sensor MTR before the vehicle starts moving 	X	P0720	P0720
ENGINE SPEED SIG	<ul style="list-style-type: none"> TCM does not receive the CAN communication signal from the ECM. 	X	P0725	P0725
TCC SOLENOID/CIRC	<ul style="list-style-type: none"> Normal voltage not applied to solenoid due to cut line, short, or the like 	X	P0740	P0740
A/T TCC S/V FNCTN	<ul style="list-style-type: none"> A/T cannot perform lock-up even if electrical circuit is good. TCM detects as irregular by comparing difference value with slip rotation. 	X	P0744	P0744*2
L/PRESS SOL/CIRC	<ul style="list-style-type: none"> Normal voltage not applied to solenoid due to cut line, short, or the like TCM detects as irregular by comparing target value with monitor value. 	X	P0745	P0745
TCM-POWER SUPPLY	<ul style="list-style-type: none"> When the power supply to the TCM is cut "OFF", for example because the battery is removed, and the self-diagnostics memory function stops This is not a malfunction message (Whenever shutting "OFF" a power supply to the TCM, this message appears on the screen.) 	—	P1701	—
TCM-RAM	<ul style="list-style-type: none"> TCM memory (RAM) is malfunctioning. 	—	P1702	—
TCM-ROM	<ul style="list-style-type: none"> TCM memory (ROM) is malfunctioning. 	—	P1703	—
TCM-EEPROM	<ul style="list-style-type: none"> TCM memory (EEP ROM) is malfunctioning. 	—	P1704	—
TP SEN/CIRC A/T	<ul style="list-style-type: none"> TCM does not receive the proper accelerator pedal position signals (input by CAN communication) from ECM. 	X	P1705	P1705
ATF TEMP SEN/CIRC	<ul style="list-style-type: none"> During running, the ATF temperature sensor signal voltage is excessively high or low 	X	P1710	P0710
TURBINE REV S/CIRC	<ul style="list-style-type: none"> TCM does not receive the proper voltage signal from the sensor. TCM detects an irregularity only at position of 4th gear for turbine revolution sensor 2. 	X	P1716	P1716
VEH SPD SE/CIR-MTR	<ul style="list-style-type: none"> Signal (CAN communication) from vehicle speed sensor MTR not input due to cut line or the like Unexpected signal input during running 	—	P1721	—

TROUBLE DIAGNOSIS

Items (CONSULT-II screen terms)	Malfunction is detected when...	TCM self-diagnosis		OBD-II (DTC)	
		A/T CHECK indicator lamp	"A/T" with CONSULT-II	MIL indicator lamp*1, "ENGINE" with CONSULT-II or GST	
A/T INTERLOCK	<ul style="list-style-type: none"> Except during shift change, the gear position and pressure switch states are monitored and comparative judgement made. 	X	P1730	P1730	AT
A/T 1ST E/BRAKING	<ul style="list-style-type: none"> Each pressure switch and solenoid current is monitored and if a pattern is detected having engine braking 1st gear other than in the M1 position, a malfunction is detected. 	X	P1731	—	D
I/C SOLENOID/CIRC	<ul style="list-style-type: none"> Normal voltage not applied to solenoid due to functional malfunction, cut line, short, or the like TCM detects as irregular by comparing target value with monitor value. 	X	P1752	P1752	E
I/C SOLENOID FNCTN	<ul style="list-style-type: none"> TCM detects that actual gear ratio is irregular, and relation between gear position and condition of pressure switch 3 is irregular during depressing accelerator pedal. (Other than during shift change) TCM detects that relation between gear position and condition of pressure switch 3 is irregular during releasing accelerator pedal. (Other than during shift change) 	X	P1754	P1754*2	F G
FR/B SOLENOID/CIRC	<ul style="list-style-type: none"> Normal voltage not applied to solenoid due to functional malfunction, cut line, short, or the like TCM detects as irregular by comparing target value with monitor value. 	X	P1757	P1757	H
FR/B SOLENOID FNCT	<ul style="list-style-type: none"> TCM detects that actual gear ratio is irregular, and relation between gear position and condition of pressure switch 1 is irregular during depressing accelerator pedal. (Other than during shift change) TCM detects that relation between gear position and condition of pressure switch 1 is irregular during releasing accelerator pedal. (Other than during shift change) 	X	P1759	P1759*2	I J
D/C SOLENOID/CIRC	<ul style="list-style-type: none"> Normal voltage not applied to solenoid due to cut line, short, or the like TCM detects as irregular by comparing target value with monitor value. 	X	P1762	P1762	K L
D/C SOLENOID FNCTN	<ul style="list-style-type: none"> TCM detects that actual gear ratio is irregular, and relation between gear position and condition of pressure switch 5 is irregular during depressing accelerator pedal. (Other than during shift change) TCM detects that relation between gear position and condition of pressure switch 5 is irregular during releasing accelerator pedal. (Other than during shift change) 	X	P1764	P1764*2	M
HLR/C SOL/CIRC	<ul style="list-style-type: none"> Normal voltage not applied to solenoid due to functional malfunction, cut line, short, or the like TCM detects as irregular by comparing target value with monitor value. 	X	P1767	P1767	
HLR/C SOL FNCTN	<ul style="list-style-type: none"> TCM detects that actual gear ratio is irregular, and relation between gear position and condition of pressure switch 6 is irregular during depressing accelerator pedal. (Other than during shift change) TCM detects that relation between gear position and condition of pressure switch 6 is irregular during releasing accelerator pedal. (Other than during shift change) 	X	P1769	P1769*2	

TROUBLE DIAGNOSIS

Items (CONSULT-II screen terms)	Malfunction is detected when...	TCM self-diagnosis		OBD-II (DTC)
		A/T CHECK indicator lamp	"A/T" with CONSULT-II	MIL indicator lamp*1, "ENGINE" with CONSULT-II or GST
LC/B SOLENOID/ CIRC	<ul style="list-style-type: none"> Normal voltage not applied to solenoid due to functional malfunction, cut line, short, or the like 	X	P1772	P1772
LC/B SOLENOID FNCT	<ul style="list-style-type: none"> TCM detects an improper voltage drop when it tries to operate the solenoid valve. Condition of pressure switch 2 is different from monitor value, and relation between gear position and actual gear ratio is irregular. 	X	P1774	P1774*2
MANU MODE SW/ CIRC	<ul style="list-style-type: none"> When an impossible pattern of switch signals is detected, a malfunction is detected. 	—	P1815	—
ATF PRES SW 1/ CIRC	<ul style="list-style-type: none"> TCM detects that actual gear ratio is normal, and relation between gear position and condition of pressure switch 1 is irregular during depressing accelerator pedal. (Other than during shift change) 	—	P1841	—
ATF PRES SW 3/ CIRC	<ul style="list-style-type: none"> TCM detects that actual gear ratio is normal, and relation between gear position and condition of pressure switch 3 is irregular during depressing accelerator pedal. (Other than during shift change) 	—	P1843	—
ATF PRES SW 5/ CIRC	<ul style="list-style-type: none"> TCM detects that actual gear ratio is normal, and relation between gear position and condition of pressure switch 5 is irregular during depressing accelerator pedal. (Other than during shift change) 	—	P1845	—
ATF PRES SW 6/ CIRC	<ul style="list-style-type: none"> TCM detects that actual gear ratio is normal, and relation between gear position and condition of pressure switch 6 is irregular during depressing accelerator pedal. (Other than during shift change) 	—	P1846	—
NO DTC IS DETECTED FURTHER TESTING MAY BE REQUIRED	<ul style="list-style-type: none"> No NG item has been detected. 	—	X	X

*1: Refer to [AT-39, "Malfunction Indicator Lamp \(MIL\)"](#).

*2: These malfunctions cannot be displayed MIL if another malfunction is assigned to MIL.

TROUBLE DIAGNOSIS

Data monitor mode (A/T)

X: Standard, —: Not applicable

Monitored item (Unit)	Monitor Item Selection			Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
VHCL/S SE-A/T (km/h)	X	X	X	Revolution sensor
VHCL/S SE-MTR (km/h)	X	—	X	
ACCELE POSI (0.0/8)	X	—	X	Accelerator pedal position signal
THROTTLE POSI (0.0/8)	X	X	X	Degree of opening for accelerator recognized by the TCM For fail-safe operation, the specific value used for control is displayed.
BATTERY BOLT (V)	X	—	X	
ENGINE SPEED (rpm)	X	X	X	
TURBINE REV (rpm)	X	X	X	
ATF TEMP 1 (°C)	—	X	X	
ATF TEMP 2 (°C)	—	X	X	
OUTPUT REV (rpm)	X	X	X	
ATF TEMP SE 1 (V)	X	—	X	
ATF TEMP SE 2 (V)	X	—	X	
ATF PRES SW 1 (ON-OFF display)	X	X	X	(for FR/B solenoid)
ATF PRES SW 2 (ON-OFF display)	X	X	X	(for LC/B solenoid)
ATF PRES SW 3 (ON-OFF display)	X	X	X	(for I/C solenoid)
ATF PRES SW 5 (ON-OFF display)	X	X	X	(for D/C solenoid)
ATF PRES SW 6 (ON-OFF display)	X	X	X	(for HLR/C solenoid)
PNP SW 1 (ON-OFF display)	X	—	X	
PNP SW 2 (ON-OFF display)	X	—	X	
PNP SW 3 (ON-OFF display)	X	—	X	
PNP SW 4 (ON-OFF display)	X	—	X	
1 POSITION SW (ON-OFF display)	X	—	X	
ASCD-CRUISE (ON-OFF display)	X	—	X	
ASCD-OD CUT (ON-OFF display)	X	—	X	
OD OFF SW (ON-OFF display)	X	—	X	Not mounted but displayed.
MANU MODE SW (ON-OFF display)	X	—	X	
NON M-MODE SW (ON-OFF display)	X	—	X	
UP SW LEVER (ON-OFF display)	X	—	X	
DOWN SW LEVER (ON-OFF display)	X	—	X	
POWER SHIFT SW (ON-OFF display)	X	—	X	Not mounted but displayed.
CLSD THL POS (ON-OFF display)	X	—	X	Signal input with CAN communications
W/O THL POS (ON-OFF display)	X	—	X	Signal input with CAN communications
TCC SOLENOID (A)	—	X	X	
LINE PRES SOL (A)	—	X	X	
I/C SOLENOID (A)	—	X	X	
FR/B SOLENOID (A)	—	X	X	
D/C SOLENOID (A)	—	X	X	
HLR/C SOL (A)	—	X	X	

TROUBLE DIAGNOSIS

Monitored item (Unit)	Monitor Item Selection			Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
HOLD SW (ON-OFF display)	X	—	X	Not mounted but displayed.
BRAKE SW (ON-OFF display)	X	—	X	Stop lamp switch
GEAR	—	X	X	Gear position recognized by the TCM updated after gear-shifting
GEAR RATIO	—	X	X	
SLCTLVR POSI	—	X	X	Selector lever position is recognized by the TCM. For fail safe operation, the specific value used for control is displayed.
VEHICLE SPEED (km/h)	—	X	X	Vehicle speed recognized by the TCM.
TC SLIP SPEED (rpm)	—	X	X	Difference between engine speed and torque converter input shaft speed
Voltage (V)	—	—	X	Displays the value measured by the voltage probe.
F SUN GO REV (rpm)	—	—	X	
F CARR GR REV (rpm)	—	—	X	
SFT UP ST SW	—	—	X	Not mounted but displayed.
SFT DOWN ST SW	—	—	X	
ABS SIGNAL	—	—	X	
ACC OD CUT	—	—	X	Not mounted but displayed.
ACC SIGNAL	—	—	X	
TCS GR/P KEEP	—	—	X	
TCS SIGNAL 2	—	—	X	
TCS SIGNAL 1	—	—	X	
ON OFF SOL (ON-OFF display)	—	—	X	LC/B solenoid
TCC SOL MON	—	—	X	
L/P SOL MON	—	—	X	
I/C SL MON	—	—	X	
FR/B SOL MON	—	—	X	
D/C SOL MON	—	—	X	
HLR/C SOL MON	—	—	X	
ON OFF SOL MON	—	—	X	LC/B solenoid
P POSI IND	—	—	X	
R POSI IND	—	—	X	
N POSI IND	—	—	X	
D POSI IND	—	—	X	
4TH POSI IND	—	—	X	
3RD POSI IND	—	—	X	
2ND POSI IND	—	—	X	
1ST POSI IND	—	—	X	
M MODE IND	—	—	X	
POWER M LAMP	—	—	X	
F-SAFE IND/L	—	—	X	

TROUBLE DIAGNOSIS

Monitored item (Unit)	Monitor Item Selection			Remarks	
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM MENU		
ATF WARN LAMP	—	—	X		A
BACK-UP LAMP	—	—	X		B
STARTER RELAY	—	—	X		AT
PNP SW3 MON	—	—	X		
TRGT GR RATIO	—	—	X		D
ENGINE TORQUE	—	—	X		
ENG TORQUE D	—	—	X		
INPUT TRQ S	—	—	X		E
INPUT TRQ L/P	—	—	X		
TRGT PRES TCC	—	—	X		F
TRGT PRES L/P	—	—	X		
TRGT PRES I/C	—	—	X		
TRGT PRES FR/B	—	—	X		G
TRGT PRES D/C	—	—	X		
TRG PRE HLR/C	—	—	X		H
SHIFT PATTERN	—	—	X		
C/V CLB ID1	—	—	X		
C/V CLB ID2	—	—	X		I
C/V CLB ID3	—	—	X		
UNIT CLB ID1	—	—	X		
UNIT CLB ID2	—	—	X		J
UNIT CLB ID3	—	—	X		
DRV CST JUDGE	—	—	X		K
START RLY MON	—	—	X		
NEXT GR POSI	—	—	X		
SHIFT MODE	—	—	X		L
MANU GR POSI	—	—	X		
Frequency (Hz)	—	—	X	The value measured by the pulse probe is displayed.	M
DUTY·HI (high) (%)	—	—	X		
DUTY·LOW (low) (%)	—	—	X		
PLS WIDTH·HI (ms)	—	—	X		
PLS WIDTH·LOW (ms)	—	—	X		

TROUBLE DIAGNOSIS

DTC WORK SUPPORT MODE WITH CONSULT-II


CONSULT-II setting procedure

CAUTION:


If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carry out CAN communication.

- For details, refer to the separate "CONSULT-II Operation Manual".


1. Turn ignition switch "OFF".
2. Connect CONSULT-II and CONSULT-II CONVERTER to data link connector, which is located in instrument lower panel on driver side.

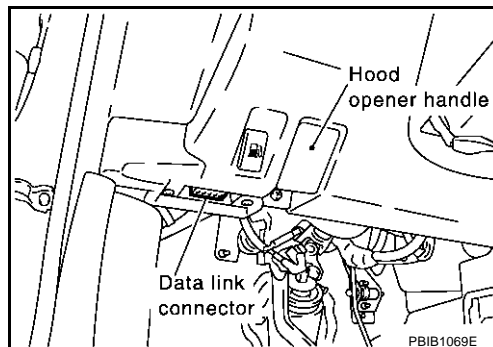


3. Turn ignition switch "ON".(Do not start engine.)
4. Touch "START (NISSAN BASED VHCL)".

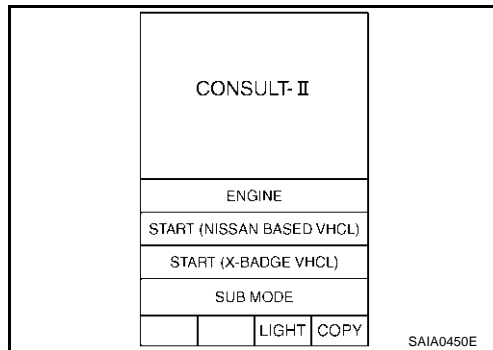

5. Touch "A/T".
If "A/T" is not indicated, go to [GI-39, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

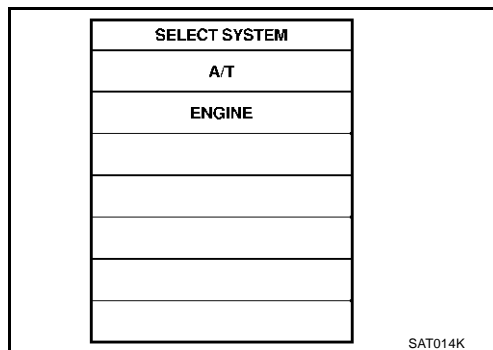


6. Touch "DTC WORK SUPPORT".

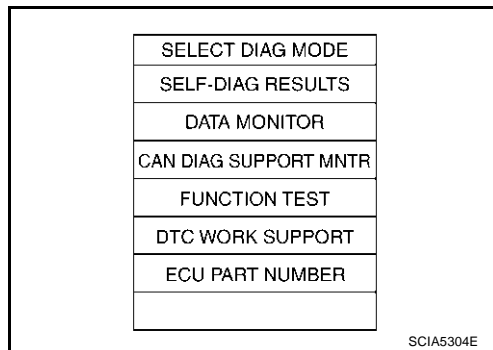


TROUBLE DIAGNOSIS

7. Touch select item menu.

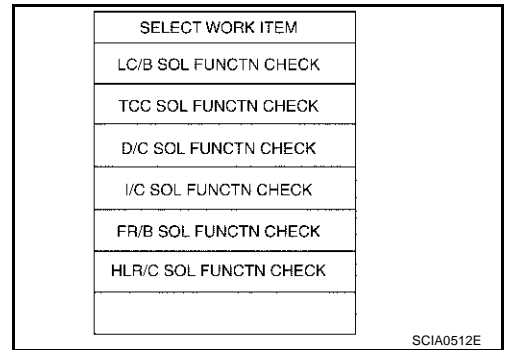


A
B
AT

8. Touch "START".

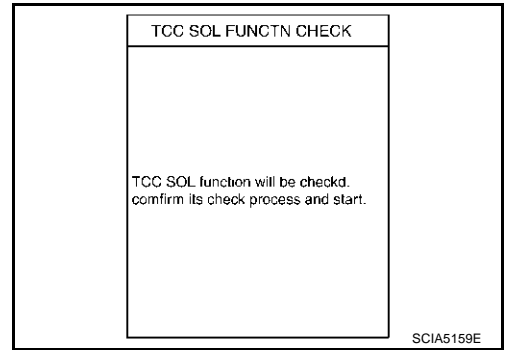


D
E
F
G

9. Perform driving test according to "DTC CONFIRMATION PROCEDURE" in "TROUBLE DIAGNOSIS FOR DTC".

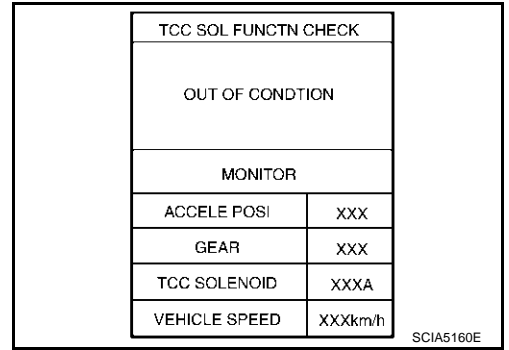


H
I
J
K

- When testing conditions are satisfied, CONSULT-II screen changes from "OUT OF CONDITION" to "TESTING".

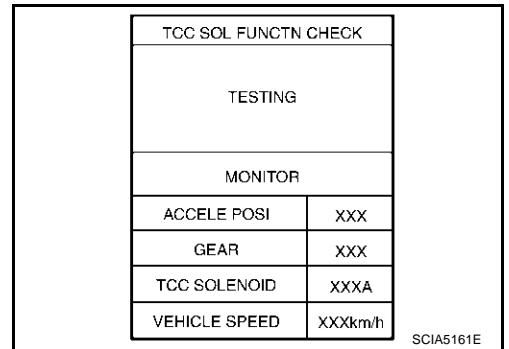



L
M

10. Stop vehicle. If "NG" appears on the screen, malfunction may exist. Go to "DIAGNOSTIC PROCEDURE".
11. Perform test drive to check gear shift feeling in accordance with instructions displayed.
12. Touch "YES" or "NO".
13. CONSULT-II procedure is ended.

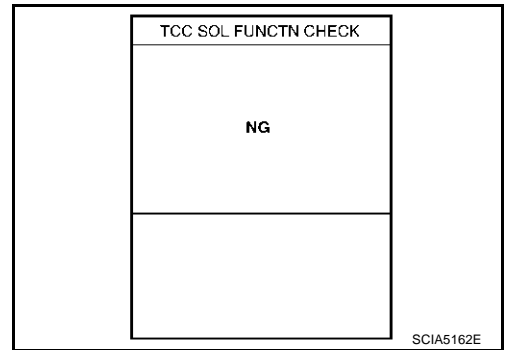

TROUBLE DIAGNOSIS

If “NG” appears on the screen, a malfunction may exist. Go to “DIAGNOSTIC PROCEDURE”.

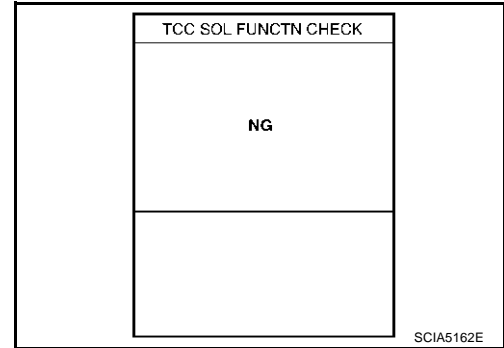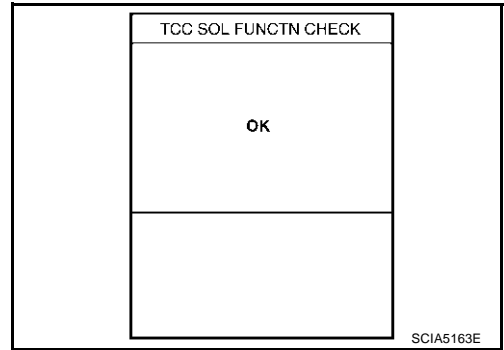

DTC WORK SUPPORT MODE

DTC work support item	Description	Check item
I/C SOL FUNCTN CHECK*	—	—
FR/B SOL FUNCTN CHECK*	—	—
D/C SOL FUNCTN CHECK*	—	—
HLR/C SOL FUNCTN CHECK*	—	—
LC/B SOL FUNCTN CHECK*	—	—
TCC SOL FUNCTN CHECK	Following items for “TCC solenoid function (lock-up)” can be confirmed. <ul style="list-style-type: none"> ● Self-diagnosis status (whether the diagnosis is being performed or not) ● Self-diagnosis result (OK or NG) 	<ul style="list-style-type: none"> ● TCC solenoid valve ● Hydraulic control circuit

*: Do not use, but displayed.

Diagnostic Procedure Without CONSULT-II OBD-II SELF-DIAGNOSTIC PROCEDURE (WITH GST)



A

Refer to [EC-124, "Generic Scan Tool \(GST\) Function"](#) .

OBD-II SELF-DIAGNOSTIC PROCEDURE (NO TOOLS)



B

Refer to [EC-71, "Malfunction Indicator Lamp \(MIL\)"](#) .

TCM SELF-DIAGNOSTIC PROCEDURE (NO TOOLS)



AT

Description

In the unlikely event of a malfunction in the electrical system, when the ignition switch is switched "ON", the A/T CHECK indicator lamp lights up for 2 seconds, then flashes for 8 seconds. If there is no malfunction, when the ignition switch is turned "ON", the indicator lamp lights up for 2 seconds. As a method for locating the suspect circuit, when the self-diagnostics start signal is input, the memory for the malfunction location is output and the A/T CHECK indicator lamp flashes to display the corresponding DTC.

D

E

Diagnostic procedure

1. CHECK A/T CHECK INDICATOR LAMP

1. Start the engine with selector lever in "P" position. Warm engine to normal operating temperature.
2. Turn ignition switch "ON" and "OFF" at least twice, then leave it in the "OFF" position.
3. Wait 10 seconds.
4. Turn ignition switch to "ON" position. (Do not start engine.)
5. Does A/T CHECK indicator lamp come on for about 2 seconds?

F

G

YES or NO

- YES >> GO TO 2.
NO >> GO TO [AT-174, "A/T Check Indicator Lamp Does Not Come On"](#) .

H

I

2. JUDGEMENT PROCEDURE STEP 1

1. Turn ignition switch "OFF".
2. Push shift lock release button.
3. Move selector lever from "P" to "D" position.
4. Release accelerator pedal. (Set the closed throttle position signal "ON".)
5. Depress brake pedal. (Stop lamp switch signal "ON".)
6. Turn ignition switch "ON".
7. Wait 3 seconds.
8. Move the selector lever to the Manual shift gate side. (Manual mode switch "ON".)
9. Release brake pedal. (Stop lamp switch signal "OFF".)
10. Move the selector lever to "D" position. (Manual mode switch "OFF".)
11. Depress brake pedal. (Stop lamp switch signal "ON".)
12. Release brake pedal. (Stop lamp switch signal "OFF".)
13. Depress accelerator pedal fully and release it.

J

K

L

M

>> GO TO 3.

3. CHECK SELF-DIAGNOSIS CODE

Check A/T CHECK indicator lamp.

Refer to [AT-104, "Judgement self-diagnosis code"](#) .

If the system does not go into self-diagnostics. Refer to [AT-110, "DTC P0705 PARK/NEUTRAL POSITION SWITCH"](#) , [AT-128, "DTC P1705 THROTTLE POSITION SENSOR"](#) , [AT-161, "DTC P1815 MANUAL MODE SWITCH"](#) , [AT-173, "BRAKE SIGNAL CIRCUIT"](#) .


>> DIAGNOSIS END

TROUBLE DIAGNOSIS


Judgement self-diagnosis code

If there is a malfunction, the lamp lights up for the time corresponding to the suspect circuit.


1	Revolution sensor 1
2	Direct clutch solenoid valve
3	Torque converter clutch solenoid valve
4	Line pressure solenoid valve
5	Input clutch solenoid valve
6	Front brake solenoid valve
7	Low coast brake solenoid valve
8	High & low reverse clutch solenoid valve
9	PNP switch
10	A/T fluid temperature sensor
11	Turbine revolution sensor
12	A/T interlock
13	A/T 1st engine braking
14	Start signal
15	Accelerator pedal position sensor
16	Engine speed signal
17	CAN

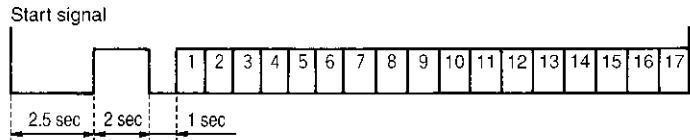

17-judgement flickers (OK)



(NG)



※ Solenoid valve is checked for open and short circuit, and malfunctions.

SCIA0497E

Erase self-diagnosis

- In order to make it easier to find the cause of hard-to-duplicate malfunctions, malfunction information is stored into the control unit as necessary during use by the user. This memory is not erased no matter how many times the ignition switch is turned ON and OFF.
- However, this information is erased by turning ignition switch "OFF" after executing self-diagnostics or by erasing the memory using the CONSULT-II.

DTC U1000 CAN COMMUNICATION LINE

DTC U1000 CAN COMMUNICATION LINE

PFP:23710

Description

ACS003MG

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent malfunction detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

On Board Diagnosis Logic

ACS003MH

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "CAN COMM CIRCUIT" with CONSULT-II or U1000 without CONSULT-II is detected when TCM cannot communicate to other control units.

Possible Cause

ACS003MI

Harness or connectors
(CAN communication line is open or shorted.)

DTC Confirmation Procedure

ACS003MJ


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

④ WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "ENGINE" with CONSULT-II.
3. Start engine and wait for at least 6 seconds.
4. If DTC is detected, go to [AT-106, "Diagnostic Procedure"](#).

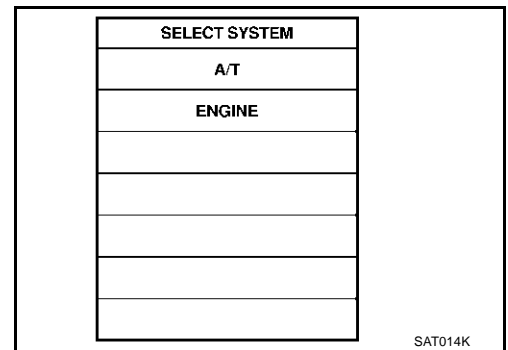

④ WITH GST

Follow the procedure "WITH CONSULT-II".

DTC U1000 CAN COMMUNICATION LINE

Diagnostic Procedure

ACS003MK

1. CHECK CAN COMMUNICATION CIRCUIT

Ⓜ With CONSULT-II

1. Turn ignition switch "ON" and start engine.
2. Select "SELF-DIAG RESULTS" mode for "A/T" with CONSULT-II.

Is any malfunction of the "CAN COMM CIRCUIT" indicated?

- YES >> Print out CONSULT-II screen, GO TO LAN section.
Refer to [LAN-4, "Precautions When Using CONSULT-II"](#)
- NO >> **INSPECTION END**

SELF-DIAG RESULTS			
DTC RESULTS			
CAN COMM CIRCUIT [U1000]			
ERASE		PRINT	
MODE	BACK	LIGHT	COPY

PCIA0061E

DTC P0615 START SIGNAL CIRCUIT

DTC P0615 START SIGNAL CIRCUIT

PFP:25230

Description

ACS00016

Prohibits cranking other at "P" or "N" position.

On Board Diagnosis Logic

ACS00017

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "STARTER RELAY/CIRC" with CONSULT-II or 14th judgement flicker without CONSULT-II is detected when detects as irregular when switched "ON" other than at "P" or "N" position. (Or when switched "OFF" at "P" or "N" position).

Possible Cause

ACS00018

- Harness or connectors
(The starter relay and TCM circuit is open or shorted.)
- Starter relay circuit

DTC Confirmation Procedure

ACS00019


NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

Ⓟ WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start engine.
4. Vehicle start for at least 2 consecutive seconds.
5. If DTC is detected, go to [AT-108. "Diagnostic Procedure"](#).

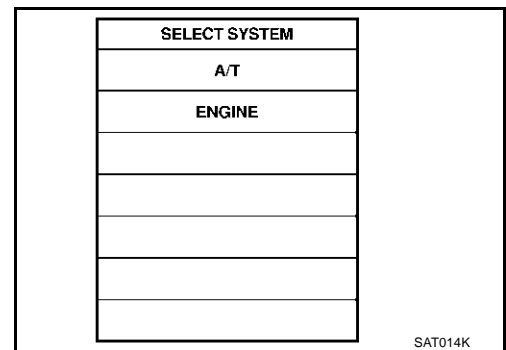

DTC P0615 START SIGNAL CIRCUIT


ACS0001B

Diagnostic Procedure

1. CHECK STARTER RELAY

Ⓜ With CONSULT-II

- Turn ignition switch "ON". (Do not start engine.)
- Select "SELECTION FROM MENU" in "DATA MONITOR" mode for "A/T" with CONSULT-II and check monitor "STARTER RELAY" ON/OFF.

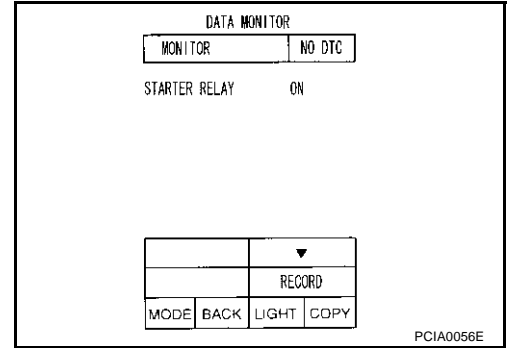


⊗ Without CONSULT-II

- Turn ignition switch "ON". (Do not start engine.)
- Check the voltage between the IPDM E/R connector and ground.

Item	Connector No.	Terminal No. (Wiring color)	Shift position	Voltage (Approx.)
Starter relay	E8	43 (GY/R)	Ground	Battery voltage
				0V

OK or NG

- OK >> GO TO 3.
NG >> GO TO 2.

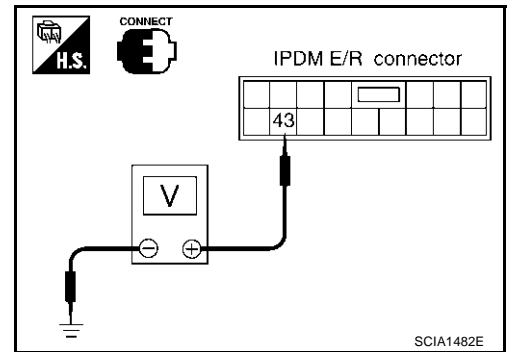

2. DETECT MALFUNCTIONING ITEM

Check the following items:

- Starter relay, Refer to [SC-10, "STARTING SYSTEM"](#).
- Disconnections or short-circuits in the harness between TCM and the IPDM E/R.
- Disconnections or short-circuits in the harness between TCM and the unified meter and A/C amp.

OK or NG

- OK >> GO TO 3.
NG >> Repair or replace damaged parts.

3. CHECK TCM

Perform TCM input/output signal inspection. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#).

OK or NG

- OK >> GO TO 5.
NG >> GO TO 4.

4. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transmission assembly. Refer to [AT-250, "Removal and Installation"](#).
NG >> Repair or replace damaged parts.

DTC P0615 START SIGNAL CIRCUIT

5. CHECK DTC

Perform DTC Confirmation Procedure.

- Refer to [AT-107, "DTC Confirmation Procedure"](#).

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 3.

A
B
AT
D
E
F
G
H
I
J
K
L
M

DTC P0705 PARK/NEUTRAL POSITION SWITCH

DTC P0705 PARK/NEUTRAL POSITION SWITCH

PFP:32006

Description

ACS003ML

- The park/neutral position (PNP) switch includes a transmission position switch.
- The transmission range switch detects the selector lever position and sends a signal to the TCM.

CONSULT-II Reference Value

ACS003MM

Item name	Condition	Display value
SLCTLVR POSI	Selector lever in "N", "P" position.	N/P
	Selector lever in "R" position.	R
	Selector lever in "D" position.	D

On Board Diagnosis Logic

ACS003MN

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "PNP SW/CIRC" with CONSULT-II or P0705 without CONSULT-II is detected under the following conditions.
 - When TCM does not receive the correct voltage signal from the PNP switch 1, 2, 3, 4 based on the gear position.
 - When no other position but "P" position is detected from "N" positions.

Possible Cause

ACS003MO

- Harness or connectors
[The park/neutral position (PNP) switch 1, 2, 3, 4 and TCM circuit is open or shorted.]
- Park/neutral position (PNP) switch 1, 2, 3, 4

DTC Confirmation Procedure

ACS003MP

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

④ WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "ENGINE" with CONSULT-II.
3. Start engine.
4. Drive vehicle and maintain the following conditions for at least 2 consecutive seconds.
THRTL POS SEN: More than 1.2V
5. If DTC is detected, go to [AT-111, "Diagnostic Procedure"](#).

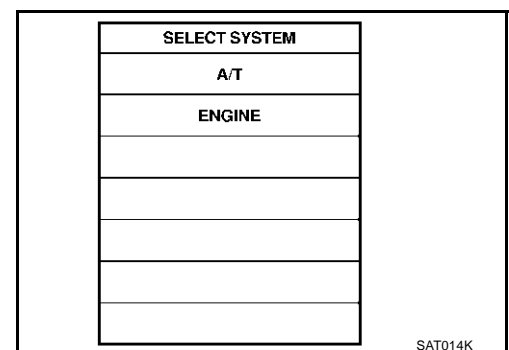

④ WITH GST

Follow the procedure "With CONSULT-II".

DTC P0705 PARK/NEUTRAL POSITION SWITCH

ACS003M0

Diagnostic Procedure

1. CHECK PNP SW CIRCUIT (WITH CONSULT-II)

With CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Read out "N·P", "R" and "D" position switches moving selector lever to each position.

OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.

DATA MONITOR			
MONITOR		NO DTC	
ATF PRES SW 2	OFF		
ATF PRES SW 3	OFF		
ATF PRES SW 5	OFF		
ATF PRES SW 6	OFF		
SLCT LVR POSI	N·P		

△		▽	
RECORD			
MODE	BACK	LIGHT	COPY

PCIA0034E

2. CHECK TCM

Perform TCM input/output signal inspection. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#) .

OK or NG

- OK >> GO TO 4.
NG >> GO TO 3.

3. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transmission assembly. Refer to [AT-250, "Removal and Installation"](#) .
NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform DTC Confirmation Procedure.

- Refer to [AT-110, "DTC Confirmation Procedure"](#) .

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 2.

DTC P0720 VEHICLE SPEED SENSOR A/T (REVOLUTION SENSOR)

DTC P0720 VEHICLE SPEED SENSOR A/T (REVOLUTION SENSOR)

PFP:32702

Description

ACS003MR

The revolution sensor detects the revolution of the idler gear parking pawl lock gear and emits a pulse signal. The pulse signal is sent to the TCM which converts it into vehicle speed.

CONSULT-II Reference Value

ACS003MS

Item name	Condition	Display value (km/h)
VHCL/S SE-A/T	During driving	Approximately matches the speedometer reading.

On Board Diagnosis Logic

ACS003MT

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "VEH SPD SEN/CIR AT" with CONSULT-II or P0720 without CONSULT-II is detected under the following conditions.
 - When TCM does not receive the proper voltage signal from the sensor.
 - After ignition switch is turned "ON", irregular signal input from vehicle speed sensor MTR before the vehicle starts moving.

Possible Cause

ACS003MU

- Harness or connectors
(The sensor circuit is open or shorted.)
- Revolution sensor
- Vehicle speed sensor MTR

DTC Confirmation Procedure

ACS003MV

CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.

NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

④ WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Drive vehicle and check for an increase of "VHCL/S SE-A/T" value in response to "VHCL/S SE-MTR" value.
If the check result is NG, go to [AT-113, "Diagnostic Procedure"](#).
If the check result is OK, go to following step.
4. Select "DATA MONITOR" mode for "ENGINE" with CONSULT-II.
5. Start engine and maintain the following conditions for at least 5 consecutive seconds.

VHCL SPEED SE: 30 km/h (19 MPH) or more

THRTL POS SEN: More than 1.0/8

Selector lever: "D" position

Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.

If the check result is NG, go to [AT-113, "Diagnostic Procedure"](#).

If the check result is OK, go to following step.

6. Maintain the following conditions for at least 5 consecutive seconds.


ENGINE SPEED: 3,500 rpm or more

THRTL POS SEN: More than 1.0/8

Selector lever: "D" position

Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.

If the check result is NG, go to [AT-113, "Diagnostic Procedure"](#).

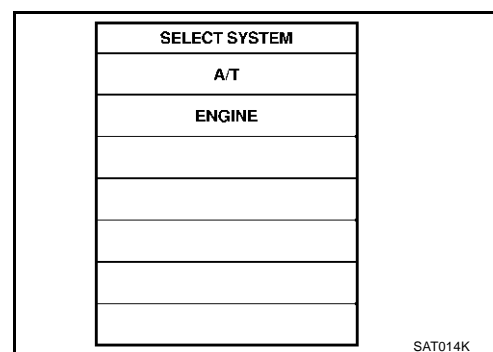

DTC P0720 VEHICLE SPEED SENSOR A/T (REVOLUTION SENSOR)

WITH GST

Follow the procedure "With CONSULT-II".

Diagnostic Procedure

ACS003MW

1. CHECK INPUT SIGNALS

With CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start the engine.
4. Read out the value of "VHCL/S SE·A/T" while driving.
Check the value changes according to driving speed.

OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.

DATA MONITOR	
MONITOR	NO DTC
VHCL/S SE·A/T	0km/h
VHCL/S SE·MTR	0km/h
ACCELE POSI	0.0/8
THROTTLE POS	0.0/8
CLSD THL POS	ON
W/O THL POS	OFF
▽	
RECORD	
MODE	BACK
LIGHT	COPY

SCIA2148E

2. CHECK TCM

Perform TCM input/output signal inspection. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#) .

OK or NG

- OK >> GO TO 4.
NG >> GO TO 3.

3. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transmission assembly. Refer to [AT-250, "Removal and Installation"](#) .
NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform DTC Confirmation Procedure.

- Refer to [AT-112, "DTC Confirmation Procedure"](#) .

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 2.

DTC P0725 ENGINE SPEED SIGNAL

DTC P0725 ENGINE SPEED SIGNAL

PFP:24825

Description

ACS003MX

The engine speed signal is sent from the ECM to the TCM.

CONSULT-II Reference Value

ACS003MY

Item name	Condition	Display value (rpm)
ENGINE SPEED	Engine running	Closely matches the tachometer reading.

On Board Diagnosis Logic

ACS003MZ

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "ENGINE SPEED SIG" with CONSULT-II or P0725* without CONSULT-II is detected when TCM does not receive the ignition signal from ECM during engine cranking or running.
*: For VQ35DE engine.

Possible Cause

ACS003N0

Harness or connectors
(The ECM to the TCM circuit is open or shorted.)

DTC Confirmation Procedure

ACS003N1

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch "ON" and select "DATA MONITOR" mode for "A/T" with CONSULT-II.
2. Start engine and maintain the following conditions for at least 10 consecutive seconds.
VHCL SPEED SE: 10 km/h (6 MPH) or more
ACCELE POSI: More than 1/8
Selector lever: "D" position
3. If DTC is detected, go to [AT-114, "Diagnostic Procedure"](#).

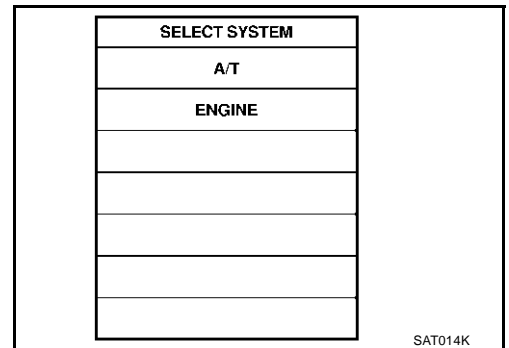

WITH GST

Follow the procedure "With CONSULT-II".

Diagnostic Procedure

ACS003N2

1. CHECK CAN COMMUNICATION LINE

Perform the self-diagnosis. Is a malfunction in the CAN communication indicated in the results?

Yes or No

- Yes >> Check CAN communication line. Refer to [AT-105, "DTC U1000 CAN COMMUNICATION LINE"](#).
- No >> GO TO 2.

DTC P0725 ENGINE SPEED SIGNAL

2. CHECK DTC WITH TCM

With CONSULT-II

1. Start engine.
2. Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. While monitoring engine speed, check for engine speed change corresponding to wide-open throttle position signal.

DATA MONITOR	
MONITOR	NO. DTC
W/O THL POS	OFF
BRAKE SW	OFF
ENGINE SPEED	0 rpm
TURBINE REV	0 rpm
OUTPUT REV	0 rpm

▼			
RECORD			
MODE	BACK	LIGHT	COPY

PCIA0041E

With GST

Follow the procedure "With CONSULT-II".

OK or NG

- OK >> GO TO 3.
- NG >> Check the ignition signal circuit.
 - Refer to [EC-581, "IGNITION SIGNAL"](#).

3. CHECK TCM

Perform TCM input/output signal inspection. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#).

OK or NG

- OK >> GO TO 5.
- NG >> GO TO 4.

4. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transmission assembly. Refer to [AT-250, "Removal and Installation"](#).
- NG >> Repair or replace damaged parts.

5. CHECK DTC

Perform DTC Confirmation Procedure.

- Refer to [AT-114, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 3.

DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE

DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE

PFP:31940

Description

ACS003N3

- The torque converter clutch solenoid valve is activated, with the gear in D4 , D5 by the TCM in response to signals sent from the vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Torque converter clutch piston operation will then be controlled.
- Lock-up operation, however, is prohibited when A/T fluid temperature is too low.
- When the accelerator pedal is depressed (less than 1/8) in lock-up condition, the engine speed should not change abruptly. If there is a big jump in engine speed, there is no lock-up.

CONSULT-II Reference Value

ACS003N4

Item name	Condition	Display value (Approx.) (A)
TCC SOLENOID	When performing slip lock-up	0.2 - 0.4
	When performing lock-up	0.4 - 0.6

On Board Diagnosis Logic

ACS003N5

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "TCC SOLENOID/CIRC" with CONSULT-II or P0740 without CONSULT-II is detected under the following conditions.
 - When TCM detects an improper voltage drop when it tries to operate the solenoid valve.
 - When TCM detects as irregular by comparing target value with monitor value.

Possible Cause

ACS003N6

- Torque converter clutch solenoid valve
- Harness or connectors
(The solenoid circuit is open or shorted.)

DTC Confirmation Procedure

ACS003N7

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

④ WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "ENGINE" with CONSULT-II.
3. Start engine and maintain the following conditions for at least 5 consecutive seconds.

VHCL SPEED SE: 80 km/h (50 MPH) or more

ACCELE POS: 0.5/8 - 1.0/8


SELECTOR LEVER: "D" position

Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.

4. If DTC is detected go to [AT-117, "Diagnostic Procedure"](#).

④ WITH GST

Follow the procedure "With CONSULT-II".

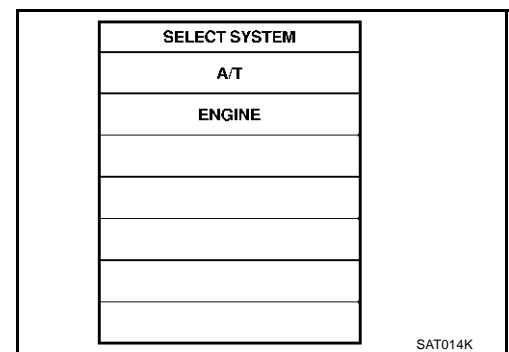

DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE

Diagnostic Procedure

ACS003NB

1. CHECK TCM

Perform TCM input/output signal inspection. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 2.

2. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transmission assembly. Refer to [AT-250, "Removal and Installation"](#) .
- NG >> Repair or replace damaged parts.

3. CHECK DTC

Perform DTC Confirmation Procedure.

- Refer to [AT-116, "DTC Confirmation Procedure"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 1.

A
B
AT
D
E
F
G
H
I
J
K
L
M

DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)

DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)

PF3:31940

Description

ACS003N9

This malfunction is detected when the A/T does not shift into 5th gear position or the torque converter clutch does not lock-up as instructed by the TCM. This is not only caused by electrical malfunction (circuits open or shorted) but also by mechanical malfunction such as control valve sticking, improper solenoid valve operation, etc.

CONSULT-II Reference Value

ACS003NA

Item name	Condition	Display value (Approx.) (A)
TCC SOLENOID	When performing slip lock-up	0.2 - 0.4
	When performing lock-up	0.4 - 0.6

On Board Diagnosis Logic

ACS003NB

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "A/T TCC S/V FNCTN" with CONSULT-II or P0744 without CONSULT-II is detected under the following conditions.
 - When A/T cannot perform lock-up even if electrical circuit is good.
 - When TCM detects as irregular by comparing difference value with slip rotation.

Possible Cause

ACS003NC

- Harness or connectors
(The solenoid circuit is open or shorted.)
- Torque converter clutch solenoid valve
- Hydraulic control circuit

DTC Confirmation Procedure

ACS003ND

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Start engine and Select "TCC S/V FNCTN CHECK" of "DTC WORK SUPPORT" mode for "A/T" with CONSULT-II and touch "START".
2. Accelerate vehicle to more than 80 km/h (50 MPH) and maintain the following condition continuously until "TESTING" has turned to "COMPLETE". (It will take approximately 30 seconds after "TESTING" shows.)


ACCELE POSI: More than 1.0/8 (at all times during step 4)

TCC SOLENOID: 0.4 - 0.6 A

Selector lever: "D" position

[Reference speed: Constant speed of more than 80 km/h (50 MPH)]

- Make sure "GEAR" shows "5".
 - For shift schedule, refer to [AT-66. "Vehicle Speed When Performing and Releasing Complete Lock-up"](#).
 - If "TESTING" does not appear on CONSULT-II for a long time, select "SELF-DIAG RESULTS". In case a 1st trip DTC other than P0744 is shown, refer to applicable "TROUBLE DIAGNOSIS FOR DTC".
3. Make sure that "OK" is displayed. (If "NG" is displayed, refer to "DIAGNOSTIC PROCEDURE".)
Refer to [AT-119. "Diagnostic Procedure"](#).
Refer to shift schedule, [AT-66. "Vehicle Speed When Performing and Releasing Complete Lock-up"](#).

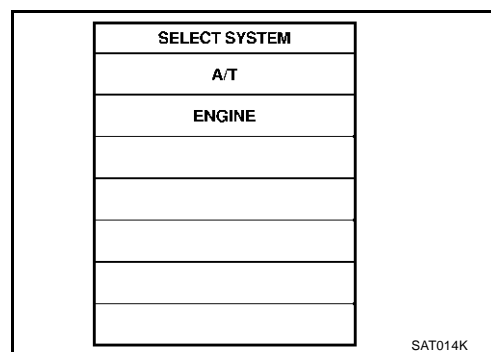

DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)

WITH GST

Follow the procedure "With CONSULT-II".

Diagnostic Procedure

ACS003NE

1. CHECK TCM

Perform TCM input/output signal inspection. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 2.

2. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transmission assembly. Refer to [AT-250, "Removal and Installation"](#) .
- NG >> Repair or replace damaged parts.

3. CHECK DTC

Perform DTC Confirmation Procedure.

- Refer to [AT-118, "DTC Confirmation Procedure"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 1.

A
B
AT
D
E
F
G
H
I
J
K
L
M

DTC P0745 LINE PRESSURE SOLENOID VALVE

DTC P0745 LINE PRESSURE SOLENOID VALVE

PFP:31940

Description

ACS003NF

The line pressure solenoid valve regulates the oil pump discharge pressure to suit the driving condition in response to a signal sent from the TCM.

The line pressure duty cycle value is not consistent when the closed throttle position signal is “ON”. To confirm the line pressure duty cycle at low pressure, the accelerator (throttle) should be open until the closed throttle position signal is “OFF”.

CONSULT-II Reference Value

ACS003NG

Item name	Condition	Display value (Approx.) (A)
LINE PRES SOL	During driving	0.2 - 0.6

On Board Diagnosis Logic

ACS003NH

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code “L/PRESS SOL/CIRC” with CONSULT-II or P0745 without CONSULT-II is detected under the following conditions.
 - When TCM detects an improper voltage drop when it tries to operate the solenoid valve.
 - When TCM detects as irregular by comparing target value with monitor value.

Possible Cause

ACS003NI

- Harness or connectors
(The solenoid circuit is open or shorted.)
- Line pressure solenoid valve

DTC Confirmation Procedure

ACS003NJ


NOTE:

If “DTC Confirmation Procedure” has been previously performed, always turn ignition switch “OFF” and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

④ WITH CONSULT-II

1. Turn ignition switch “ON” and select “DATA MONITOR” mode for “ENGINE” with CONSULT-II.
2. Engine start and wait at least 5 second.
3. If DTC is detected, go to [“AT-121, "Diagnostic Procedure" .](#)

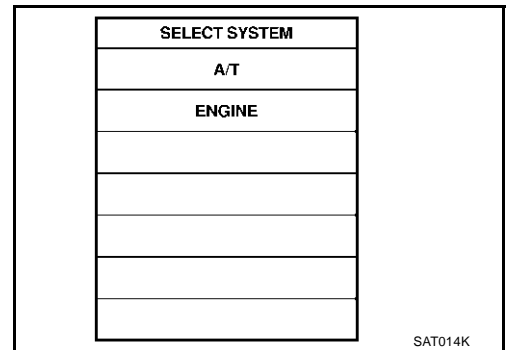

④ WITH GST

Follow the procedure “With CONSULT-II”.

DTC P0745 LINE PRESSURE SOLENOID VALVE

Diagnostic Procedure

ACS003NK

1. CHECK TCM

Perform TCM input/output signal inspection. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 2.

2. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transmission assembly. Refer to [AT-250, "Removal and Installation"](#) .
- NG >> Repair or replace damaged parts.

3. CHECK DTC

Perform DTC Confirmation Procedure.

- Refer to [AT-120, "DTC Confirmation Procedure"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 1.

A

B

AT

D

E

F

G

H

I

J

K

L

M

DTC P1701 TRANSMISSION CONTROL MODULE (POWER SUPPLY)

DTC P1701 TRANSMISSION CONTROL MODULE (POWER SUPPLY)

PFP:31036

Description

ACS003NL

When the power supply to the TCM is cut "OFF", for example because the battery is removed, and the self-diagnostics memory function stops, malfunction is detected.

On Board Diagnosis Logic

ACS003NM

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "TCM-POWER SUPPLY" with CONSULT-II is detected when TCM does not receive the voltage signal from the battery power supply.
- This is not a malfunction message. (Whenever shutting "OFF" a power supply to the TCM, this message appears on the screen.)

Possible Cause

ACS003NN

Harness or connectors
(Battery or ignition switch and TCM circuit is open or shorted.)

DTC Confirmation Procedure

ACS003NO


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

Ⓟ WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Wait for at least 2 consecutive seconds.
4. If DTC is detected, go to [AT-123. "Diagnostic Procedure"](#) .

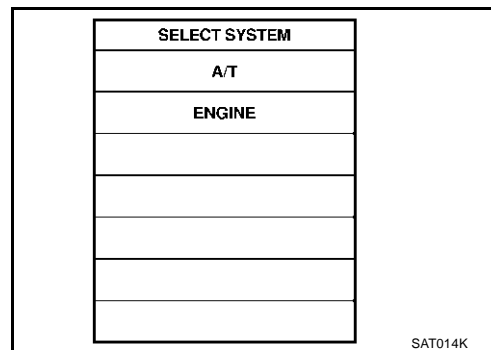

DTC P1701 TRANSMISSION CONTROL MODULE (POWER SUPPLY)


ACS003NP

Diagnostic Procedure

1. CHECK TCM POWER SOURCE STEP 1

1. Turn ignition switch "OFF".
2. Disconnect A/T assembly harness connector.
3. Check voltage between A/T assembly harness connector and ground. Refer to [AT-49, "Wiring Diagram — AT —"](#) .

Item	Connector No.	Terminal No. (Wire color)	Voltage
TCM	F6	1 (R/W) - Ground	Battery voltage
		2 (R/W) - Ground	
		6 (Y/R) - Ground	0V

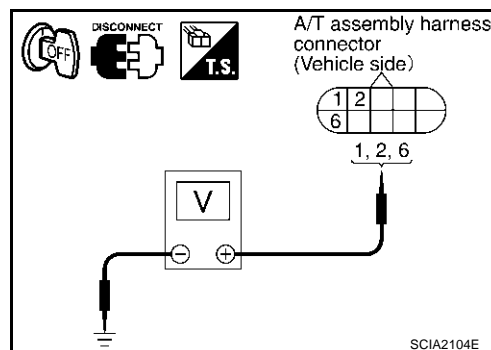


OK or NG

- OK >> GO TO 2.
 NG >> GO TO 3.

2. CHECK TCM POWER SOURCE STEP 2

1. Disconnect A/T assembly harness connector.
2. Turn ignition switch "ON". (Do not start engine.)
3. Check voltage between A/T assembly harness connector and ground. Refer to [AT-49, "Wiring Diagram — AT —"](#) .

Item	Connector No.	Terminal No. (Wire color)	Voltage
TCM	F6	1 (R/W) - Ground	Battery voltage
		2 (R/W) - Ground	
		6 (Y/R) - Ground	

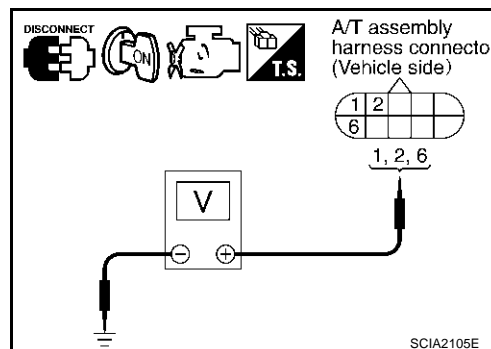

OK or NG

- OK >> GO TO 4.
 NG >> GO TO 3.

3. DETECT MALFUNCTIONING ITEM

Check the following items:

- Harness for short or open between battery and A/T assembly harness connector terminals 1, 2
- Harness for short or open between ignition switch and A/T assembly harness connector terminal 6
- 10A fuse (No. 32, located in the fuse and fusible link block) and 10A fuse (No. 71, located in the IPDM E/R)
- Ignition switch, Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#)

OK or NG

- OK >> GO TO 4.
 NG >> Repair or replace damaged parts.

DTC P1701 TRANSMISSION CONTROL MODULE (POWER SUPPLY)

4. CHECK TCM GROUND CIRCUIT

1. Turn ignition switch "OFF".
2. Disconnect A/T assembly harness connector.
3. Check continuity between A/T assembly harness connector terminal 5 (B), 10 (B) and ground. Refer to [AT-49, "Wiring Diagram — AT —"](#).


Continuity should exist.

If OK, check harness for short to ground and short to power.

OK or NG

OK >> GO TO 5.

NG >> Repair open circuit or short to ground or short to power in harness or connectors.

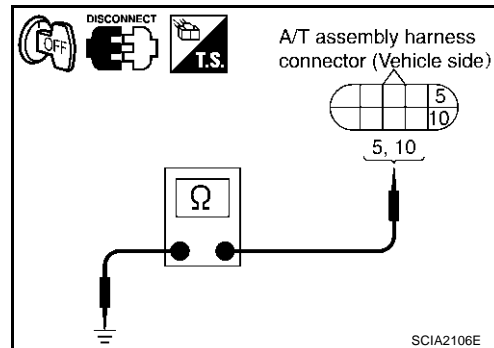

5. CHECK DTC

Perform DTC Confirmation Procedure.

- Refer to [AT-122, "DTC Confirmation Procedure"](#).

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 6.

6. DETECT MALFUNCTIONING ITEM

The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> Replace the transmission assembly. Refer to [AT-250, "Removal and Installation"](#).

NG >> Repair or replace damaged parts.

DTC P1702 TRANSMISSION CONTROL MODULE (RAM)

DTC P1702 TRANSMISSION CONTROL MODULE (RAM)

PPF:31036

Description

ACS003NQ

The TCM consists of a microcomputer and connectors for signal input and output and for power supply. The TCM controls the A/T.

On Board Diagnosis Logic

ACS003NR

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "TCM-RAM" with CONSULT-II is detected when TCM memory RAM is malfunctioning.

Possible Cause

ACS003NS

TCM.

DTC Confirmation Procedure

ACS003NT


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start engine.
4. Run engine for at least 2 consecutive seconds at idle speed.
5. If DTC is detected, go to [AT-125, "Diagnostic Procedure"](#).

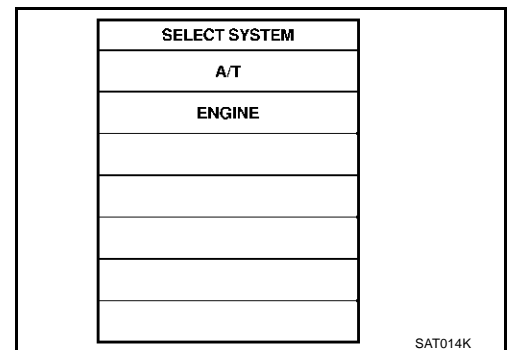

Diagnostic Procedure

ACS003NU


1. CHECK DTC

With CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "SELF DIAG RESULTS" mode for "A/T" with CONSULT-II.
3. Touch "ERASE".
4. Turn ignition switch "OFF" and wait at least 10 seconds.
5. Perform DTC confirmation procedure, [AT-125, "DTC Confirmation Procedure"](#).

Is the "TCM-RAM" displayed again?

- Yes >> Replace the transmission assembly. Refer to [AT-250, "Removal and Installation"](#).
- No >> **INSPECTION END**

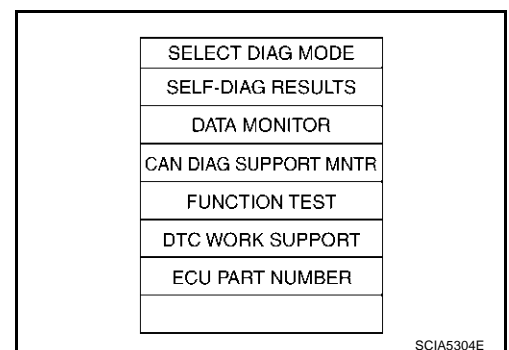

DTC P1703 TRANSMISSION CONTROL MODULE (ROM)

DTC P1703 TRANSMISSION CONTROL MODULE (ROM)

PF3:31036

Description

ACS003NV

The TCM consists of a microcomputer and connectors for signal input and output and for power supply. The TCM controls the A/T.

On Board Diagnosis Logic

ACS003NW

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "TCM-ROM" with CONSULT-II is detected when TCM memory ROM is malfunctioning.

Possible Cause

ACS003NX

TCM.

DTC Confirmation Procedure

ACS003NY


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

Ⓜ WITH CONSULT-II

1. Turn ignition switch to "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for A/T with CONSULT-II.
3. Start engine.
4. Run engine for at least 2 consecutive seconds at idle speed.
5. If DTC is detected, go to [AT-126, "Diagnostic Procedure"](#).

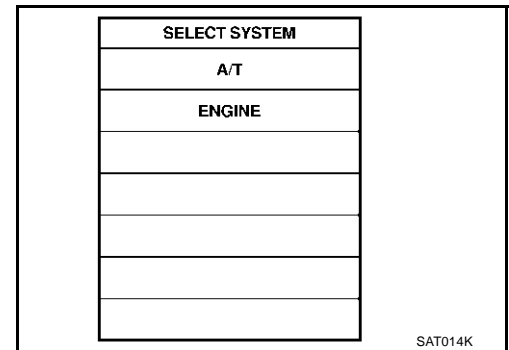

Diagnostic Procedure

ACS003NZ


1. CHECK DTC

Ⓜ With CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "SELF DIAG RESULTS" mode for "A/T" with CONSULT-II.
3. Touch "ERASE".
4. Turn ignition switch "OFF" and wait at least 10 seconds.
5. Perform DTC confirmation procedure, [AT-126, "DTC Confirmation Procedure"](#).

Is the "TCM-ROM" displayed again?

- Yes >> Replace the transmission assembly. Refer to [AT-250, "Removal and Installation"](#).
- No >> **INSPECTION END**

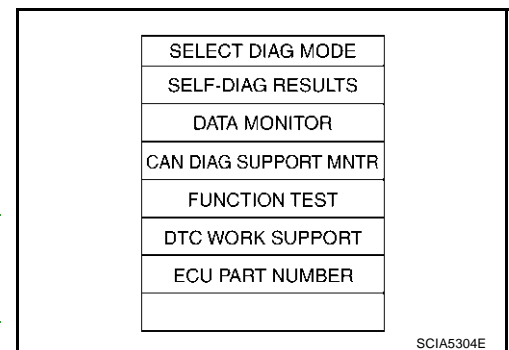

DTC P1704 TRANSMISSION CONTROL MODULE (EEPROM)

DTC P1704 TRANSMISSION CONTROL MODULE (EEPROM)

PFP:31036

Description

ACS00300

The TCM consists of a microcomputer and connectors for signal input and output and for power supply. The TCM controls the A/T.

On Board Diagnosis Logic

ACS00301

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "TCM-EEPROM" with CONSULT-II is detected when TCM memory EEPROM is malfunctioning.

Possible Cause

ACS00302

TCM.

DTC Confirmation Procedure

ACS00303


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start engine.
4. Run engine for at least 2 consecutive seconds at idle speed.
5. If DTC is detected, go to [AT-127, "Diagnostic Procedure"](#).

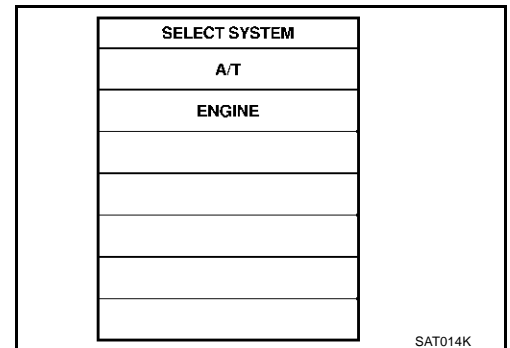


Diagnostic Procedure

ACS00304

1. CHECK DTC

With CONSULT-II

1. Turn ignition switch "ON" and select "SELF DIAGNOSIS" mode for "A/T" with CONSULT-II.
2. Move selector lever to "R" position.
3. Depress accelerator pedal (Full throttle position).
4. Touch "ERASE".
5. Turn ignition switch "OFF" and wait at least 10 seconds.
6. Turn ignition switch "ON" with selector lever "P" position.
7. Perform "DTC Confirmation Procedure". Refer to [AT-127, "DTC Confirmation Procedure"](#).

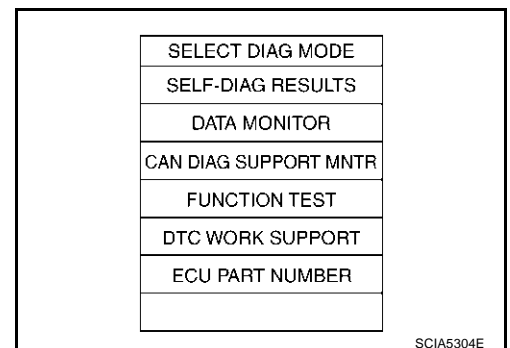

Is the "TCM-EEPROM" displayed again?

- Yes >> Replace the transmission assembly. Refer to [AT-250, "Removal and Installation"](#).
- No >> **INSPECTION END**

DTC P1705 THROTTLE POSITION SENSOR

DTC P1705 THROTTLE POSITION SENSOR

PFP:22620

Description

ACS00305

Electric throttle control actuator consists of throttle control motor, accelerator pedal position sensor, throttle position sensor, etc. The actuator sends a signal to the ECM, and ECM sends signals to TCM with CAN communication.

On Board Diagnosis Logic

ACS00306

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "TP SEN/CIRC A/T" with CONSULT-II or P1705 without CONSULT-II is detected when TCM does not receive the proper accelerator pedal position signals (input by CAN communication) from ECM.

Possible Cause

ACS00307

Harness or connectors
(The sensor circuit is open or shorted.)

DTC Confirmation Procedure

ACS00308


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

④ WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start engine and let it idle for 1 second.
4. If DTC is detected, go to ["AT-128, "Diagnostic Procedure"](#) .

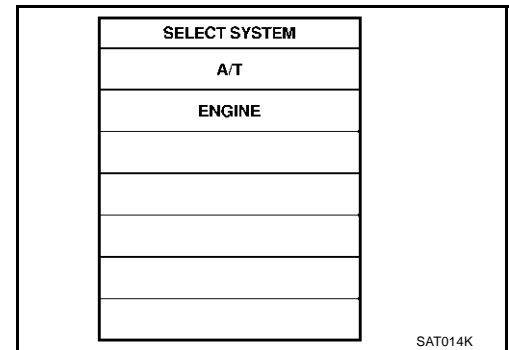

⑤ WITH GST

Follow the procedure "With CONSULT-II".

Diagnostic Procedure

ACS00309

1. CHECK CAN COMMUNICATION LINE

Perform the self-diagnosis. Is a malfunction in the CAN communication indicated in the results.

Yes or No

- Yes >> Check CAN communication line. Refer to ["AT-105, "DTC U1000 CAN COMMUNICATION LINE"](#) .
No >> GO TO 2.

DTC P1705 THROTTLE POSITION SENSOR

2. CHECK DTC WITH ECM

With CONSULT-II


1. Turn ignition switch "ON". (Do not start engine.)
2. Select "SELF-DIAG RESULTS" mode for "ENGINE" with CONSULT-II. Refer to [EC-112, "CONSULT-II Function"](#) .

With GST

Follow the procedure "With CONSULT-II".

OK or NG

- OK >> GO TO 3.
NG >> Check the DTC detected item. Refer to [EC-112, "CONSULT-II Function"](#) .
- If CAN communication line is detected, go to [AT-105, "DTC U1000 CAN COMMUNICATION LINE"](#) .

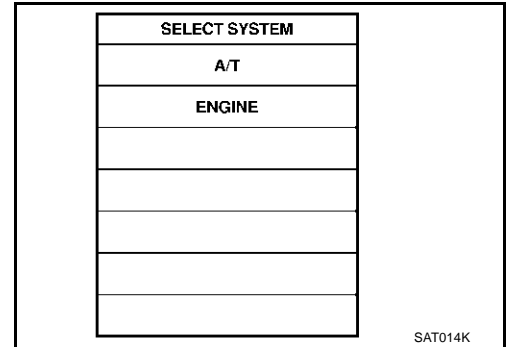

3. CHECK DTC WITH TCM

With CONSULT-II


1. Turn ignition switch "ON". (Do not start engine.)
2. Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Depress accelerator pedal and read out the value of "ACCLE POS" and "THROTTLE POSI".
Check engine speed changes according to throttle position.
4. Select "SELF-DIAG RESULTS" mode for "ENGINE" with CONSULT-II. Refer to [EC-116, "SELF-DIAG RESULTS MODE"](#) .

With GST

Follow the procedure "With CONSULT-II".

OK or NG

- OK >> GO TO 4.
NG >> Repair or replace damaged parts.

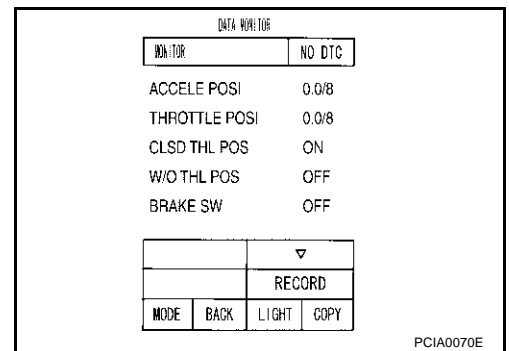

4. CHECK DTC

Perform DTC Confirmation Procedure.

- Refer to [AT-128, "DTC Confirmation Procedure"](#) .

OK or NG

- OK >> **INSPECTION END**
NG >> Replace the transmission assembly. Refer to [AT-250, "Removal and Installation"](#) .

DTC P1710 A/T FLUID TEMPERATURE SENSOR CIRCUIT

DTC P1710 A/T FLUID TEMPERATURE SENSOR CIRCUIT

PFP:31940

Description

ACS0030A

The A/T fluid temperature sensor detects the A/T fluid temperature and sends a signal to the TCM.

CONSULT-II Reference Value

ACS0030B

Item name	Condition °C (°F)	Display value (Approx.) V
ATF TEMP SE 1	0 (32) - 20 (68) - 80 (176)	2.2 - 1.8 - 0.6 V
ATF TEMP SE 2		2.2 - 1.7 - 0.45 V

On Board Diagnosis Logic

ACS0030C

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "ATF TEMP SEN/CIRC" with CONSULT-II or P1710 (A/T), P0710 (ENGINE) without CONSULT-II is detected when TCM receives an excessively low or high voltage from the sensor.

Possible Cause

ACS0030D

- Harness or connectors
(The sensor circuit is open or shorted.)
- A/T fluid temperature sensors 1, 2

DTC Confirmation Procedure

ACS0030E

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "ENGINE" with CONSULT-II.
3. Start engine and maintain the following conditions for at least 10 minutes (Total). (It is not necessary to maintain continuously.)
VHCL SPEED SE: 10 km/h (6 MPH) or more
THRTL POS SEN: More than 1.0/8
Selector lever: "D" position
4. If DTC is detected, go to [AT-131, "Diagnostic Procedure"](#).

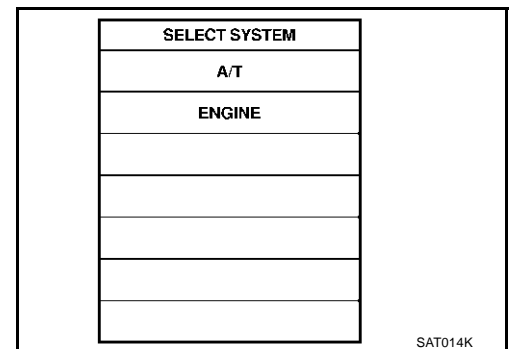

WITH GST

Follow the procedure "With CONSULT-II".

DTC P1710 A/T FLUID TEMPERATURE SENSOR CIRCUIT

Diagnostic Procedure

ACS0030F

1. CHECK FLUID TEMPERATURES SENSOR (WITH CONSULT-II)

With CONSULT-II

1. Start engine.
2. Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Read out the value of "ATF TEMP SE 1" or "ATF TEMP SE 2".

Item name	Condition °C (°F)	Display value (Approx.) V
ATF TEMP SE 1	0 (32) - 20 (68) - 80 (176)	2.2 - 1.8 - 0.6 V
ATF TEMP SE 2		2.2 - 1.7 - 0.45 V

OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.

DATA MONITOR	
MONITOR	NO DTC
OUTPUT REV	0 rpm
ATF TEMP SE 1	1.84 v
ATF TEMP SE 2	1.72 v
BATTERY BOLT	11.5 v
ATF PRES SW 1	OFF

Δ	▽		
RECORD			
MODE	BACK	LIGHT	COPY

PCIA0039E

2. CHECK TCM

Perform TCM input/output signal inspection. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#).

OK or NG

- OK >> GO TO 4.
NG >> GO TO 3.

3. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transmission assembly. Refer to [AT-250, "Removal and Installation"](#).
NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform DTC Confirmation Procedure.

- Refer to [AT-130, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 2.

DTC P1716 TURBINE REVOLUTION SENSOR

DTC P1716 TURBINE REVOLUTION SENSOR

PFP:31935

Description

ACS0030G

The turbine revolution sensor detects input shaft rpm (revolutions per minute). It is located on the input side of the automatic transmission. Monitors revolution of sensor 1 and sensor 2 for non-standard conditions.

CONSULT-II Reference Value

ACS0030H

Item name	Condition	Display value (rpm)
TURBINE REV	During driving (lock-up ON)	Approximately matches the engine speed.

On Board Diagnosis Logic

ACS0030I

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "TURBINE REV S/CIRC" with CONSULT-II or P1716 without CONSULT-II is detected under the following conditions.
 - When TCM does not receive the proper voltage signal from the sensor.
 - When TCM detects an irregularity only at position of 4th gear for turbine revolution sensor 2.

Possible Cause

ACS0030J

- Harness or connectors
(The sensor circuit is open or shorted.)
- Turbine revolution sensor 1, 2

DTC Confirmation Procedure

ACS0030K

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

④ WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start engine and maintain the following conditions for at least 5 consecutive seconds.

VHCL SPEED SE: 40 km/h (25 MPH) or more

ENGINE SPEED: 1,500 rpm or more

ACCELE POS: 0.5/8 or more

Selector lever: "D" position

Gear position (Turbine revolution sensor 1): 4th or 5th position


Gear position (Turbine revolution sensor 2): All position

Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.

4. If DTC is detected, go to [AT-133, "Diagnostic Procedure"](#).

④ WITH GST

Follow the procedure "With CONSULT-II".

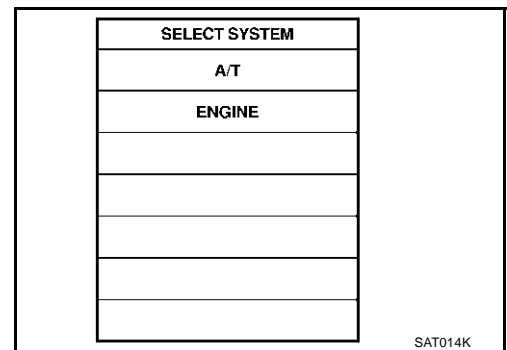

DTC P1716 TURBINE REVOLUTION SENSOR

ACS003OL

Diagnostic Procedure

1. CHECK INPUT SIGNALS

With CONSULT-II

1. Start engine.
2. Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Vehicle start and read out the value of "TURBINE REV".

OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.

DATA MONITOR	
MONITOR	NO DTC
W/O THL POS	OFF
BRAKE SW	OFF
ENGINE SPEED	0 rpm
TURBINE REV	0 rpm
OUTPUT REV	0 rpm

▼			
RECORD			
MODE	BACK	LIGHT	COPY

PCIA0041E

2. CHECK TCM

Perform TCM input/output signal inspection. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#) .

OK or NG

- OK >> GO TO 4.
NG >> GO TO 3.

3. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transmission assembly. Refer to [AT-250, "Removal and Installation"](#) .
NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform DTC Confirmation Procedure.

- Refer to [AT-132, "DTC Confirmation Procedure"](#) .

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 2.

DTC P1721 VEHICLE SPEED SENSOR MTR

DTC P1721 VEHICLE SPEED SENSOR MTR

PFP:24814

Description

ACS0030M

The vehicle speed sensor-MTR signal is transmitted from combination meter to TCM by CAN communication line. The signal functions as an auxiliary device to the revolution sensor when it is malfunctioning. The TCM will then use the vehicle speed sensor-MTR signal.

CONSULT-II Reference Value

ACS0030N

Item name	Condition	Display value (Approx.) (km/h)
VHCL/S SE-MTR	During driving	Approximately matches the speedometer reading.

On Board Diagnosis Logic

ACS0030O

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "VHE SPD SE-MTR" with CONSULT-II is detected when TCM does not receive the proper vehicle speed sensor MTR signal (input by CAN communication) from combination meter.

Possible Cause

ACS0030P

Harness or connectors
(The sensor circuit is open or shorted.)

DTC Confirmation Procedure

ACS0030Q

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start engine and maintain the following conditions for at least 5 consecutive seconds.
ACCELE POS: 1/8 or less
VHCL SPEED SE: 30 km/h (17 MPH) or more
4. If DTC is detected, go to [AT-134, "Diagnostic Procedure"](#).

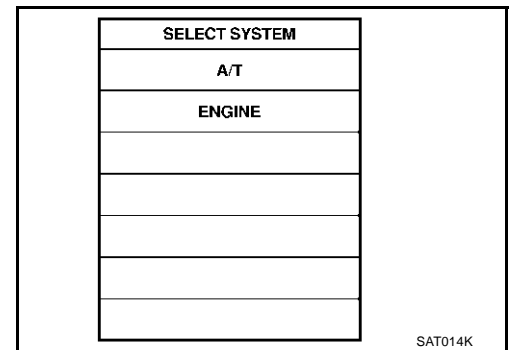

Diagnostic Procedure

ACS0030R

1. CHECK CAN COMMUNICATION LINE

Perform the self-diagnosis. Is a malfunction in the CAN communication indicated in the results?

Yes or No

- Yes >> Check CAN communication line. Refer to [AT-105, "DTC U1000 CAN COMMUNICATION LINE"](#).
No >> GO TO 2.

DTC P1721 VEHICLE SPEED SENSOR MTR

2. CHECK INPUT SIGNALS

With CONSULT-II

1. Start engine.
2. Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Drive vehicle and read out the value of "VHCL/S SE-MTR".

DATA MONITOR	
MONITOR	NO DTC
VHCL/S SE-A/T	0km/h
VHCL/S SE-MTR	0km/h
ACCELE POSI	0.0/8
THROTTLE POS	0.0/8
CLSD THL POS	ON
W/O THL POS	OFF
	▽
	RECORD
MODE	BACK
	LIGHT
	COPY

SCIA2148E

Without CONSULT-II

1. Start engine.
2. Drive vehicle.
3. Perform self-diagnosis. Refer to [DI-13, "CONSULT-II Function"](#).

OK or NG

- OK >> GO TO 3.
NG >> Repair or replace damaged parts.

3. CHECK TCM

Perform TCM input/output signal inspection. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#).

OK or NG

- OK >> GO TO 5.
NG >> GO TO 4.

4. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transmission assembly. Refer to [AT-250, "Removal and Installation"](#).
NG >> Repair or replace damaged parts.

5. CHECK DTC

Perform DTC Confirmation Procedure.

- Refer to [AT-134, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 3.

DTC P1730 A/T INTERLOCK

DTC P1730 A/T INTERLOCK

PFP:00000

Description

ACS0030S

- Fail-safe function to detect interlock conditions.

On Board Diagnosis Logic

ACS0030T

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "A/T INTERLOCK" with CONSULT-II or P1730 without CONSULT-II is detected when TCM does not receive the proper voltage signal from the sensor and switch.
- TCM monitors and compares gear position and conditions of each ATF pressure switch when gear is steady.

Possible Cause

ACS0030U

- Harness or connectors
(The solenoid and switch circuit is open or shorted.)
- Low coast brake solenoid valve
- ATF pressure switch 2

DTC Confirmation Procedure

ACS0030V


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start engine.
4. Drive vehicle and maintain the following conditions for at least 2 consecutive seconds.
Selector lever: "D" position
5. If DTC is detected, go to [AT-137, "Diagnostic Procedure"](#).

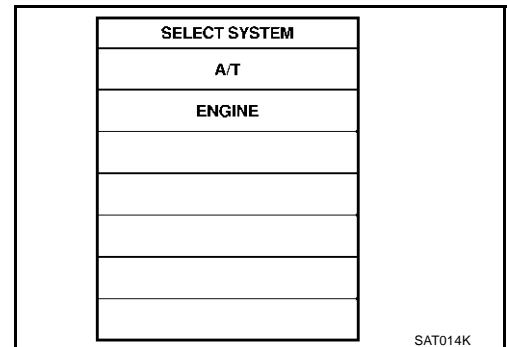

SAT014K

WITH GST

Follow the procedure "With CONSULT-II".

DTC P1730 A/T INTERLOCK

ACS0030W

Judgement of A/T Interlock

When A/T Interlock is judged to be malfunctioning, the vehicle should be fixed in 2nd gear, and should be set in a condition in which it can travel.

When one of the following fastening patterns is detected, the fail-safe function in correspondence with the individual pattern should be performed.

A/T INTERLOCK COUPLING PATTERN TABLE

●: NG, X: OK

Gear position		ATF pressure switch output					Fail-safe function	Clutch pressure output pattern after fail-safe function					
		SW3 (I/C)	SW6 (HLR/C)	SW5 (D/C)	SW1 (FR/B)	SW2 (LC/B)		I/C	HLR/C	D/C	FR/B	LC/B	L/U
A/T interlock coupling pattern	3rd	-	X	X	-	●	Held in 2nd gear	OFF	OFF	ON	OFF	OFF	OFF
	4th	-	X	X	-	●	Held in 2nd gear	OFF	OFF	ON	OFF	OFF	OFF
	5th	X	X	-	X	●	Held in 2nd gear	OFF	OFF	ON	OFF	OFF	OFF


Diagnostic Procedure

ACS0030X

1. SELF-DIAGNOSIS

④ With CONSULT-II

1. Start engine.
2. Select "SELF-DIAG RESULTS" mode for "A/T" with CONSULT-II.
3. Drive vehicle.

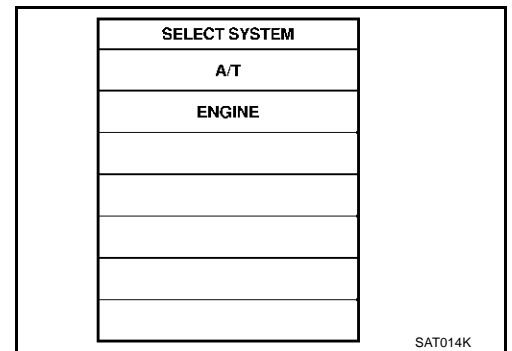

⊗ Without CONSULT-II

1. Drive vehicle.
2. Stop vehicle and turn ignition switch OFF.
3. Turn ignition switch "ON". (Do not start engine.)
4. Perform self-diagnosis. Refer to [AT-103, "TCM SELF-DIAGNOSTIC PROCEDURE \(NO TOOLS\)"](#).

OK or NG

OK >> GO TO 2.

NG >> Check low coast brake solenoid valve circuit and function. Refer to [AT-157, "DTC P1772 LOW COAST BRAKE SOLENOID VALVE"](#), [AT-159, "DTC P1774 LOW COAST BRAKE SOLENOID VALVE FUNCTION"](#).

2. CHECK TCM

Perform TCM input/output signal inspection. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#).

OK or NG

OK >> GO TO 4.

NG >> GO TO 3.

DTC P1730 A/T INTERLOCK

3. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transmission assembly. Refer to [AT-250, "Removal and Installation"](#) .
NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform DTC Confirmation Procedure.

- Refer to [AT-136, "DTC Confirmation Procedure"](#) .

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 2.

DTC P1731 A/T 1ST ENGINE BRAKING

DTC P1731 A/T 1ST ENGINE BRAKING

PFP:00000

Description

ACS0030Y

Fail-safe function to prevent sudden decrease in speed by engine brake other than at M1 position.

CONSULT-II Reference Value

ACS0030Z

Item name	Condition	Display value
ON OFF SOL	Low coast brake solenoid valve operates.	ON
	Other conditions	OFF
ATF PRES SW 2	Low coast brake solenoid valve operates.	ON
	Other conditions	OFF

On Board Diagnosis Logic

ACS003P0

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "A/T 1ST E/BRAKING" with CONSULT-II or 13th judgement flicker without CONSULT-II is detected under the following conditions.
 - When TCM does not receive the proper voltage signal from the sensor.
 - When TCM monitors each ATF pressure switch and solenoid monitor value, and detects as irregular when engine brake of 1st gear acts other than at M1 position.

Possible Cause

ACS003P1

- Harness or connectors
(The sensor circuit is open or shorted.)
- Low coast brake solenoid valve
- ATF pressure switch 2

DTC Confirmation Procedure

ACS003P2


NOTE:

If "DTC Confirmation Procedure" has been previously preformed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start engine.
4. Drive vehicle and maintain the following conditions for at least 2 consecutive seconds.
ENGINE SPEED: 1,200 rpm
Selector lever: "M" position
Gear position: 1st gear
5. If DTC is detected, go to [AT-140, "Diagnostic Procedure"](#).

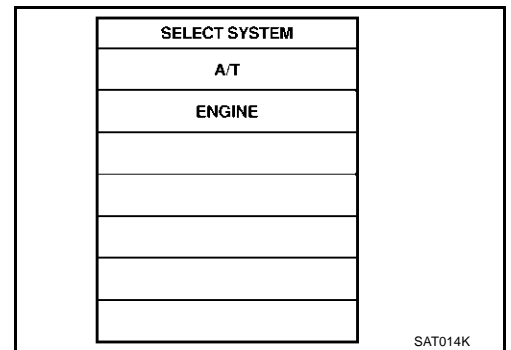

DTC P1731 A/T 1ST ENGINE BRAKING

ACS003P3

Diagnostic Procedure

1. INPUT SIGNALS (WITH CONSULT-II)

Ⓜ With CONSULT-II

1. Start the engine.
2. Select "ECU INPUT SIGNALS" or "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Drive vehicle in the "M" position (1st gear), and confirm the ON/OFF actuation of the "ATF PRES SW 2".

OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.

DATA MONITOR			
MONITOR		NO. DTC	
ATF PRES SW 1		OFF	
ATF PRES SW 2		OFF	
ATF PRES SW 3		OFF	
ATF PRES SW 5		OFF	
ATF PRES SW 6		OFF	

▲		▼	
RECORD			
MODE	BACK	LIGHT	COPY

PCIA0067E

2. CHECK TCM

Perform TCM input/output signal inspection. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#).

OK or NG

- OK >> GO TO 4.
NG >> GO TO 3.

3. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transmission assembly. Refer to [AT-250, "Removal and Installation"](#).
NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform DTC Confirmation Procedure.

- Refer to [AT-139, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 2.

DTC P1752 INPUT CLUTCH SOLENOID VALVE

DTC P1752 INPUT CLUTCH SOLENOID VALVE

PF3:31940

Description

ACS003P4

Input clutch solenoid valve is controlled by the TCM in response to signals sent from the PNP switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.

CONSULT-II Reference Value

ACS003P5

Item name	Condition	Display value (Approx.)
I/C SOLENOID	Input clutch solenoid valve operates.	0.6 - 0.8 A
	Other conditions	0 - 0.05 A

On Board Diagnosis Logic

ACS003P6

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "I/C SOLENOID/CIRC" with CONSULT-II or P1752 without CONSULT-II is detected under the following conditions.
 - When TCM detects an improper voltage drop when it tries to operate the solenoid valve.
 - When TCM detects as irregular by comparing target value with monitor value.

Possible Cause

ACS003P7

- Harness or connectors
(The solenoid circuit is open or shorted.)
- Input clutch solenoid valve

DTC Confirmation Procedure

ACS003P8

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start engine.
4. Drive vehicle and maintain the following conditions for at least 5 consecutive seconds.

ACCELE POS: 1.5/8 - 2.0/8

Selector lever: "D" position


Gear position: 3rd ⇒ 4th Gear (I/C ON/OFF)

Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.

5. If DTC is detected go to "[AT-142, "Diagnostic Procedure"](#)".

WITH GST

Follow the procedure "With CONSULT-II".

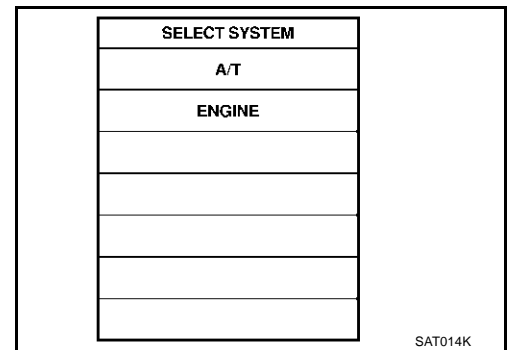

DTC P1752 INPUT CLUTCH SOLENOID VALVE

ACS003P9

Diagnostic Procedure

1. CHECK TCM

Perform TCM input/output signal inspection. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 2.

2. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transmission assembly. Refer to [AT-250, "Removal and Installation"](#) .
- NG >> Repair or replace damaged parts.

3. CHECK DTC

Perform DTC Confirmation Procedure.

- Refer to [AT-141, "DTC Confirmation Procedure"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 1.

DTC P1754 INPUT CLUTCH SOLENOID VALVE FUNCTION

DTC P1754 INPUT CLUTCH SOLENOID VALVE FUNCTION

PFP:31940

Description

ACS003PA

- Input clutch solenoid valve is controlled by the TCM in response to signals sent from the PNP switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.
- This is not only caused by electrical malfunction (circuits open or shorted) but also by mechanical malfunction such as control valve sticking, improper solenoid valve operation.

CONSULT-II Reference Value

ACS003PB

Item name	Condition	Display value (Approx.)
I/C SOLENOID	Input clutch solenoid valve operates.	0.6 - 0.8 A
	Other conditions	0 - 0.05 A
ATF PRES SW 3	Input clutch solenoid valve operates.	OFF
	Other conditions	ON

On Board Diagnosis Logic

ACS003PC

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "I/C SOLENOID FNCTN" with CONSULT-II or P1754 without CONSULT-II is detected under the following conditions.
 - When TCM detects that actual gear ratio is irregular, and relation between gear position and condition of pressure switch 3 is irregular during depressing accelerator pedal. (Other than during shift change)
 - When TCM detects that relation between gear position and condition of ATF pressure switch 3 is irregular during releasing accelerator pedal. (Other than during shift change)

Possible Cause

ACS003PD

- Harness or connectors
(The solenoid and switch circuits are open or shorted.)
- Input clutch solenoid valve
- ATF pressure switch 3

DTC Confirmation Procedure

ACS003PE

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Start engine.
2. Accelerate vehicle to maintain the following conditions.
ACCELE POSI: 1.5/8 - 2.0/8
Selector lever: "D" position
Gear position: 3rd ⇒ 4th Gear (I/C ON/OFF)
Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.
3. Perform step "2" again.
4. Turn ignition switch "OFF", then perform step "1" to "3" again.
5. Check "SELF-DIAG RESULTS" mode for "A/T" with CONSULT-II. If DTC (P1754) is detected, refer to [AT-144, "Diagnostic Procedure"](#).
If DTC (P1752) is detected, go to [AT-142, "Diagnostic Procedure"](#).
If DTC (P1843) is detected, go to [AT-167, "Diagnostic Procedure"](#).

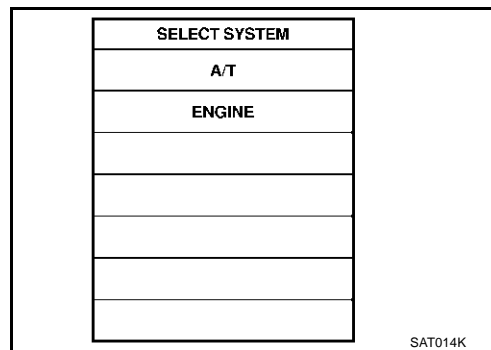

DTC P1754 INPUT CLUTCH SOLENOID VALVE FUNCTION

WITH GST

Follow the procedure "With CONSULT-II".

Diagnostic Procedure

ACS003PF

1. INPUT SIGNALS

With CONSULT-II

1. Start engine.
2. Select "ECU INPUT SIGNALS" or "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Drive vehicle in the "D" position (3rd ⇒ 4th gear), and confirm the ON/OFF actuation of the "ATF PRES SW 3".

DATA MONITOR	
MONITOR	NO DTC
ATF PRES SW 1	OFF
ATF PRES SW 2	OFF
ATF PRES SW 3	OFF
ATF PRES SW 5	OFF
ATF PRES SW 6	OFF

△	▽		
RECORD			
MODE	BACK	LIGHT	COPY

PCIA0067E

With GST

Follow the procedure "With CONSULT-II".

OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.

2. CHECK TCM

Perform TCM input/output signal inspection. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#) .

OK or NG

- OK >> GO TO 4.
NG >> GO TO 3.

3. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transmission assembly. Refer to [AT-250, "Removal and Installation"](#) .
NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform DTC Confirmation Procedure.

- Refer to [AT-143, "DTC Confirmation Procedure"](#) .

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 2.

DTC P1757 FRONT BRAKE SOLENOID VALVE

DTC P1757 FRONT BRAKE SOLENOID VALVE

PDF:31940

Description

ACS003PG

Front brake solenoid valve is controlled by the TCM in response to signals sent from the PNP switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.

CONSULT-II Reference Value

ACS003PH

Item name	Condition	Display value (Approx.)
FR/B SOLENOID	Front brake solenoid valve operates.	0.6 - 0.8 A
	Other conditions	0 - 0.05 A

On Board Diagnosis Logic

ACS003PI

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "FR/B SOLENOID/CIRC" with CONSULT-II or P1757 without CONSULT-II is detected under the following conditions.
 - When TCM detects an improper voltage drop when it tries to operate the solenoid valve.
 - When TCM detects as irregular by comparing target value with monitor value.

Possible Cause

ACS003PJ

- Harness or connectors
(The solenoid circuit is open or shorted.)
- Front brake solenoid valve

DTC Confirmation Procedure

ACS003PK

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start engine.
4. Drive vehicle and maintain the following conditions for at least 5 consecutive seconds.

ACCELE POS: 1.5/8 - 2.0/8

Selector lever: "D" position


Gear position: 3rd ⇒ 4th Gear (FR/B ON/OFF)

Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.

5. If DTC is detected go to [AT-146, "Diagnostic Procedure"](#).

WITH GST

Follow the procedure "With CONSULT-II".

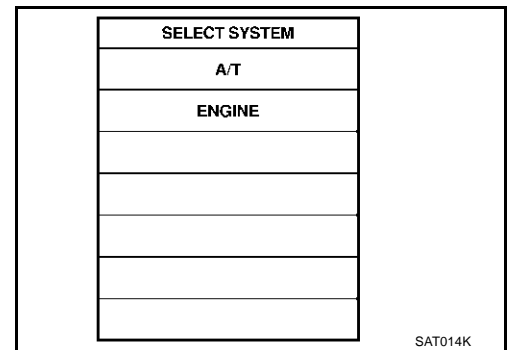

DTC P1757 FRONT BRAKE SOLENOID VALVE

ACS003PL

Diagnostic Procedure

1. CHECK TCM

Perform TCM input/output signal inspection. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 2.

2. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transmission assembly. Refer to [AT-250, "Removal and Installation"](#) .
- NG >> Repair or replace damaged parts.

3. CHECK DTC

Perform DTC Confirmation Procedure.

- Refer to [AT-145, "DTC Confirmation Procedure"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 1.

DTC P1759 FRONT BRAKE SOLENOID VALVE FUNCTION

DTC P1759 FRONT BRAKE SOLENOID VALVE FUNCTION

PFP:31940

Description

ACS003PM

- Front brake solenoid valve is controlled by the TCM in response to signals sent from the PNP switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.
- This is not only caused by electrical malfunction (circuits open or shorted) but also by mechanical malfunction such as control valve sticking, improper solenoid valve operation.

CONSULT-II Reference Value

ACS003PN

Item name	Condition	Display value (Approx.)
FR/B SOLENOID	Front brake solenoid valve operates.	0.6 - 0.8 A
	Other conditions	0 - 0.05 A
ATF PRES SW 1	Front brake solenoid valve operates.	ON
	Other conditions	OFF

On Board Diagnosis Logic

ACS003PO

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "FR/B SOLENOID FNCT" with CONSULT-II or P1759 without CONSULT-II is detected under the following conditions.
 - When TCM detects that actual gear ratio is irregular, and relation between gear position and condition of ATF pressure switch 1 is irregular during depressing accelerator pedal. (Other than during shift change)
 - When TCM detects that relation between gear position and condition of ATF pressure switch 1 is irregular during releasing accelerator pedal. (Other than during shift change)

Possible Cause

ACS003PP

- Harness or connectors
(The solenoid and switch circuits are open or shorted.)
- Front brake solenoid valve
- ATF pressure switch 1

DTC Confirmation Procedure

ACS003PQ

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Start engine.
2. Accelerate vehicle to maintain the following conditions.
ACCELE POS: 1.5/8 - 2.0/8
Selector lever: "D" position
Gear position: 3rd ⇒ 4th Gear (FR/B ON/OFF)
Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.
3. Perform step "2" again.
4. Turn ignition switch "OFF", then perform step "1" to "3" again.
5. Check "SELF-DIAG RESULTS" mode for "A/T" with CONSULT-II. If DTC (P1759) is detected, refer to [AT-148, "Diagnostic Procedure"](#).
If DTC (P1757) is detected, go to [AT-146, "Diagnostic Procedure"](#).
If DTC (P1841) is detected, go to [AT-165, "Diagnostic Procedure"](#).

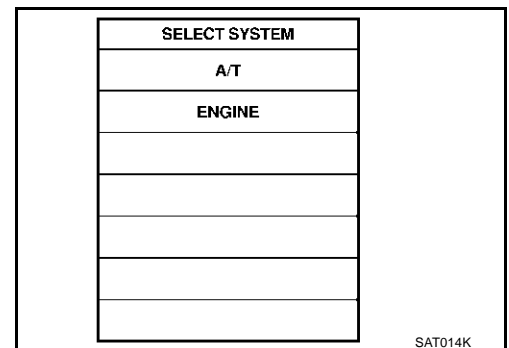

DTC P1759 FRONT BRAKE SOLENOID VALVE FUNCTION

WITH GST

Follow the procedure "With CONSULT-II".

Diagnostic Procedure

ACS003PR

1. INPUT SIGNALS

With CONSULT-II

1. Start engine.
2. Select "ECU INPUT SIGNALS" or "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Drive vehicle in the "D" position (3rd ⇒ 4th gear), and confirm the ON/OFF actuation of the "ATF PRES SW 1".

DATA MONITOR	
MONITOR	NO DTC
ATF PRES SW 1	OFF
ATF PRES SW 2	OFF
ATF PRES SW 3	OFF
ATF PRES SW 5	OFF
ATF PRES SW 6	OFF

△	▽		
RECORD			
MODE	BACK	LIGHT	COPY

PCIA0067E

With GST

Follow the procedure "With CONSULT-II".

OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.

2. CHECK TCM

Perform TCM input/output signal inspection. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#) .

OK or NG

- OK >> GO TO 4.
NG >> GO TO 3.

3. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transmission assembly. Refer to [AT-250, "Removal and Installation"](#) .
NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform DTC Confirmation Procedure.

- Refer to [AT-148, "Diagnostic Procedure"](#) .

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 2.

DTC P1762 DIRECT CLUTCH SOLENOID VALVE

DTC P1762 DIRECT CLUTCH SOLENOID VALVE

PFP:31940

Description

ACS003PS

Direct clutch solenoid valve is controlled by the TCM in response to signals sent from the PNP switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.

CONSULT-II Reference Value

ACS003PT

Item name	Condition	Display value (Approx.)
D/C SOLENOID	Direct clutch solenoid valve operates.	0.6 - 0.8 A
	Other conditions	0 - 0.05 A

On Board Diagnosis Logic

ACS003PU

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "D/C SOLENOID/CIRC" with CONSULT-II or P1762 without CONSULT-II is detected under the following conditions.
 - When TCM detects an improper voltage drop when it tries to operate the solenoid valve.
 - When TCM detects as irregular by comparing target value with monitor value.

Possible Cause

ACS003PV

- Harness or connectors
(The solenoid circuit is open or shorted.)
- Direct clutch solenoid valve

DTC Confirmation Procedure

ACS003PW


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start engine.
4. Drive vehicle and maintain the following conditions for at least 5 consecutive seconds.
ACCELE POS: 1.5/8 - 2.0/8
Selector lever: "D" position
Gear position: 1st ⇒ 2nd Gear (D/C ON/OFF)
Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.
5. If DTC is detected, go to [AT-150. "Diagnostic Procedure"](#).

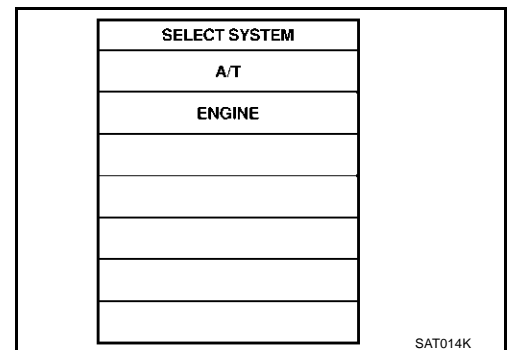

WITH GST

Follow the procedure "With CONSULT-II".

DTC P1762 DIRECT CLUTCH SOLENOID VALVE

ACS003PX

Diagnostic Procedure

1. CHECK TCM

Perform TCM input/output signal inspection. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 2.

2. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transmission assembly. Refer to [AT-250, "Removal and Installation"](#) .
- NG >> Repair or replace damaged parts.

3. CHECK DTC

Perform DTC Confirmation Procedure.

- Refer to [AT-149, "DTC Confirmation Procedure"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 1.

DTC P1764 DIRECT CLUTCH SOLENOID VALVE FUNCTION

DTC P1764 DIRECT CLUTCH SOLENOID VALVE FUNCTION

PFP:31940

Description

ACS003PY

- Direct clutch solenoid valve is controlled by the TCM in response to signals sent from the PNP switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.
- This is not only caused by electrical malfunction (circuits open or shorted) but also by mechanical malfunction such as control valve sticking, improper solenoid valve operation.

CONSULT-II Reference Value

ACS003PZ

Item name	Condition	Display value (Approx.)
D/C SOLENOID	Direct clutch solenoid valve operates.	0.6 - 0.8 A
	Other conditions	0 - 0.05 A
ATF PRES SW 5	Direct clutch solenoid valve operates.	OFF
	Other conditions	ON

On Board Diagnosis Logic

ACS003Q0

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "D/C SOLENOID FNCTN" with CONSULT-II or P1764 without CONSULT-II is detected under the following conditions.
 - When TCM detects that actual gear ratio is irregular, and relation between gear position and condition of ATF pressure switch 5 is irregular during depressing accelerator pedal. (Other than during shift change)
 - When TCM detects that relation between gear position and condition of ATF pressure switch 5 is irregular during releasing accelerator pedal. (Other than during shift change)

Possible Cause

ACS003Q1

- Harness or connectors
(The solenoid and switch circuits are open or shorted.)
- Direct clutch solenoid valve
- ATF pressure switch 5

DTC Confirmation Procedure

ACS003Q2


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Start engine.
2. Accelerate vehicle to maintain the following conditions.
ACCELE POS: 1.5/8 - 2.0/8
Selector lever: "D" position
Gear position: 1st ⇒ 2nd Gear (D/C ON/OFF)
Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.
3. Perform step "2" again.
4. Turn ignition switch "OFF", then perform step "1" to "3" again.
5. Check "SELF-DIAG RESULTS" mode for "A/T" with CONSULT-II. If DTC (P1764) is detected, refer to [AT-152, "Diagnostic Procedure"](#).
If DTC (P1762) is detected, go to [AT-150, "Diagnostic Procedure"](#).
If DTC (P1845) is detected, go to [AT-169, "Diagnostic Procedure"](#).

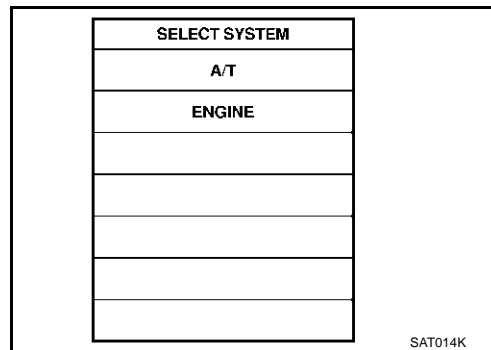

WITH GST

Follow the procedure "With CONSULT-II".

DTC P1764 DIRECT CLUTCH SOLENOID VALVE FUNCTION

ACS003Q3

Diagnostic Procedure

1. INPUT SIGNALS

Ⓐ With CONSULT-II

1. Start engine.
2. Select "ECU INPUT SIGNALS" or "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Drive vehicle in the "D" position (1st ⇒ 2nd gear), and confirm the ON/OFF actuation of the "ATF PRES SW 5".

Ⓑ With GST

Follow the procedure "With CONSULT-II".

OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.

DATA MONITOR	
MONITOR	NO. DTC
ATF PRES SW 1	OFF
ATF PRES SW 2	OFF
ATF PRES SW 3	OFF
ATF PRES SW 5	OFF
ATF PRES SW 6	OFF

Δ	▽		
RECORD			
MODE	BACK	LIGHT	COPY

PCIA0067E

2. CHECK TCM

Perform TCM input/output signal inspection. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#).

OK or NG

- OK >> GO TO 4.
NG >> GO TO 3.

3. DETCT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transmission assembly. Refer to [AT-250, "Removal and Installation"](#).
NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform DTC Confirmation Procedure.

- Refer to [AT-151, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 2.

DTC P1767 HIGH AND LOW REVERSE CLUTCH SOLENOID VALVE

DTC P1767 HIGH AND LOW REVERSE CLUTCH SOLENOID VALVE

PPF:31940

Description

ACS003Q4

High and low reverse clutch solenoid valve is controlled by the TCM in response to signals sent from the PNP switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.

CONSULT-II Reference Value

ACS003Q5

Item name	Condition	Display value (Approx.)
HLR/C SOL	High and low reverse clutch solenoid valve operates.	0.6 - 0.8 A
	Other conditions	0 - 0.05 A

On Board Diagnosis Logic

ACS003Q6

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "HLR/C SOL/CIRC" with CONSULT-II or P1767 without CONSULT-II is detected under the following conditions.
 - When TCM detects an improper voltage drop when it tries to operate the solenoid valve.
 - When TCM detects as irregular by comparing target value with monitor value.

Possible Cause

ACS003Q7

- Harness or connectors
(The solenoid circuit is open or shorted.)
- High and low reverse clutch solenoid valve

DTC Confirmation Procedure

ACS003Q8

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start engine.
4. Drive vehicle and maintain the following conditions for at least 5 consecutive seconds.

ACCELE POS: 1.5/8 - 2.0/8

Selector lever: "D" position


Gear position: 2nd ⇒ 3rd Gear (HLR/C ON/OFF)

Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.

5. If DTC is detected, go to [AT-154, "Diagnostic Procedure"](#).

WITH GST

Follow the procedure "With CONSULT-II".

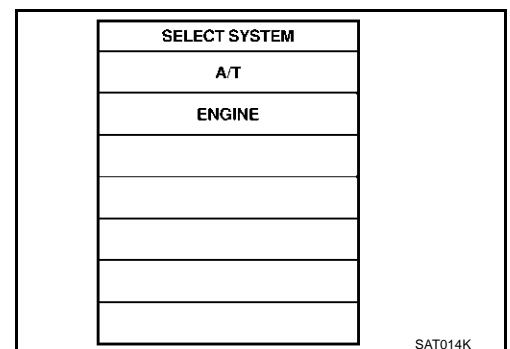

DTC P1767 HIGH AND LOW REVERSE CLUTCH SOLENOID VALVE

Diagnostic Procedure

ACS003Q9

1. CHECK TCM

Perform TCM input/output signal inspection. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 2.

2. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transmission assembly. Refer to [AT-250, "Removal and Installation"](#) .
- NG >> Repair or replace damaged parts.

3. CHECK DTC

Perform DTC Confirmation Procedure.

- Refer to [AT-153, "DTC Confirmation Procedure"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 1.

DTC P1769 HIGH AND LOW REVERSE CLUTCH SOLENOID VALVE FUNCTION

DTC P1769 HIGH AND LOW REVERSE CLUTCH SOLENOID VALVE FUNCTION

PFP:31940

Description

ACS003QA

- High and low reverse clutch solenoid valve is controlled by the TCM in response to signals sent from the PNP switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.
- This is not only caused by electrical malfunction (circuits open or shorted) but also by mechanical malfunction such as control valve sticking, improper solenoid valve operation.

CONSULT-II Reference Value

ACS003QB

Item name	Condition	Display value (Approx.)
HLR/C SOL	High and low reverse clutch solenoid valve operates.	0.6 - 0.8 A
	Other conditions	0 - 0.05 A
ATF PRES SW 6	High and low reverse clutch solenoid valve operates.	OFF
	Other conditions	ON

On Board Diagnosis Logic

ACS003QC

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "HLR/C SOL FNCTN" with CONSULT-II or P1769 without CONSULT-II is detected under the following conditions.
 - When TCM detects that actual gear ratio is irregular, and relation between gear position and condition of ATF pressure switch 6 is irregular during depressing accelerator pedal. (Other than during shift change)
 - When TCM detects that relation between gear position and condition of ATF pressure switch 6 is irregular during releasing accelerator pedal. (Other than during shift change)

Possible Cause

ACS003QD

- Harness or connectors
(The solenoid and switch circuits are open or shorted.)
- High and low reverse clutch solenoid valve
- ATF pressure switch 6

DTC Confirmation Procedure

ACS003QE

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Start engine.
2. Accelerate vehicle to maintain the following conditions.
ACCELE POS: 1.5/8 - 2.0/8
Selector lever: "D" position
Gear position: 2nd ⇒ 3rd Gear (HLR/C ON/OFF)
Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.
3. Perform step "2" again.
4. Turn ignition switch "OFF", then perform step "1" to "3" again.
5. Check "SELF-DIAG RESULTS" mode for "A/T" with CONSULT-II. If DTC (P1769) is detected, refer to [AT-156, "Diagnostic Procedure"](#). If DTC (P1767) is detected, go to [AT-154, "Diagnostic Procedure"](#).

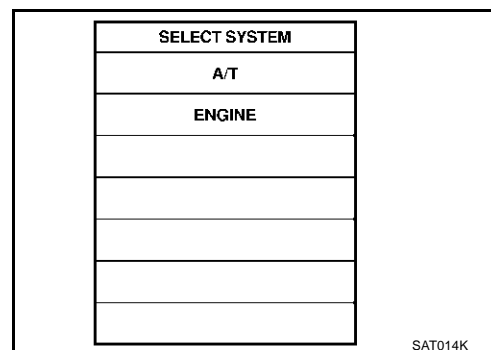

SAT014K

DTC P1769 HIGH AND LOW REVERSE CLUTCH SOLENOID VALVE FUNCTION

If DTC (P1846) is detected, go to [AT-171, "Diagnostic Procedure"](#) .

WITH GST

Follow the procedure "With CONSULT-II".

Diagnostic Procedure

ACS003QF

1. INPUT SIGNALS

With CONSULT-II

1. Start the engine.
2. Select "ECU INPUT SIGNALS" or "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Drive vehicle in the "D" position (2nd ⇒ 3rd gear), and confirm the ON/OFF actuation of the "ATF PRES SW 6".

DATA MONITOR	
MONITOR	NO DTC
ATF PRES SW 1	OFF
ATF PRES SW 2	OFF
ATF PRES SW 3	OFF
ATF PRES SW 5	OFF
ATF PRES SW 6	OFF

▲	▼		
RECORD			
MODE	BACK	LIGHT	COPY

PCIA0067E

With GST

Follow the procedure "With CONSULT-II".

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 2.

2. CHECK TCM

Perform TCM input/output signal inspection. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 3.

3. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transmission assembly. Refer to [AT-250, "Removal and Installation"](#) .
- NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform DTC Confirmation Procedure.

- Refer to [AT-155, "DTC Confirmation Procedure"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 2.

DTC P1772 LOW COAST BRAKE SOLENOID VALVE

DTC P1772 LOW COAST BRAKE SOLENOID VALVE

PFP:31940

Description

ACS003QG

Low coast brake solenoid valve is turned "ON" or "OFF" by the TCM in response to signals sent from the PNP switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.

CONSULT-II Reference Value

ACS003QH

Item name	Condition	Display value
ON OFF SOL	Low coast brake solenoid valve operates.	ON
	Other conditions	OFF

On Board Diagnosis Logic

ACS003QI

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "LC/B SOLENOID/CIRC" with CONSULT-II or P1772 without CONSULT-II is detected when TCM detects an improper voltage drop when it tries to operate the solenoid valve.

Possible Cause

ACS003QJ

- Harness or connectors
(The solenoid circuit is open or shorted.)
- Low coast brake solenoid valve

DTC Confirmation Procedure

ACS003QK


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "ENGINE" with CONSULT-II.
3. Start engine.
4. Drive vehicle and maintain the following conditions for at least 5 consecutive seconds.
Selector lever: "M" position
Gear position: "M1-1st" or "M2-2nd" gear (LC/B ON/OFF)
5. If DTC is detected, go to [AT-158, "Diagnostic Procedure"](#).

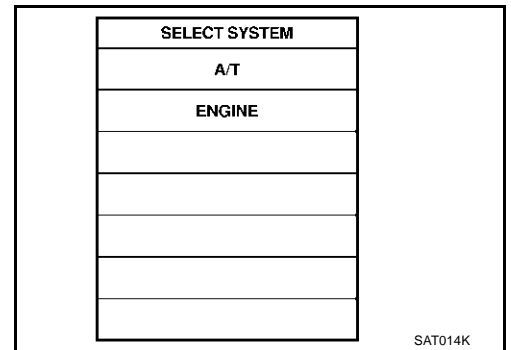

WITH GST

Follow the procedure "With CONSULT-II".

DTC P1772 LOW COAST BRAKE SOLENOID VALVE

Diagnostic Procedure

ACS003QL

1. CHECK TCM

Perform TCM input/output signal inspection. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 2.

2. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transmission assembly. Refer to [AT-250, "Removal and Installation"](#) .
- NG >> Repair or replace damaged parts.

3. CHECK DTC

Perform DTC Confirmation Procedure.

- Refer to [AT-157, "DTC Confirmation Procedure"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 1.

DTC P1774 LOW COAST BRAKE SOLENOID VALVE FUNCTION

DTC P1774 LOW COAST BRAKE SOLENOID VALVE FUNCTION

PFP:31940

Description

ACS003QM

- Low coast brake solenoid valve is turned “ON” or “OFF” by the TCM in response to signals sent from the PNP switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.
- This is not only caused by electrical malfunction (circuits open or shorted) but also by mechanical malfunction such as control valve sticking, improper solenoid valve operation.

CONSULT-II Reference Value

ACS003QN

Item name	Condition	Display value
ON OFF SOL	Low coast brake solenoid valve operates.	ON
	Other conditions	OFF
ATF PRES SW 2	Low coast brake solenoid valve operates.	ON
	Other conditions	OFF

On Board Diagnosis Logic

ACS003QQ

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code “LC/B SOLENOID FNCT” with CONSULT-II or P1774 without CONSULT-II is detected under the following conditions.
 - When TCM detects that actual gear ratio is irregular, and relation between gear position and condition of ATF pressure switch 2 is irregular during depressing accelerator pedal. (Other than during shift change)
 - When TCM detects that relation between gear position and condition of ATF pressure switch 2 is irregular during releasing accelerator pedal. (Other than during shift change)

Possible Cause

ACS003QP

- Harness or connectors
(The solenoid and switch circuits are open or shorted.)
- Low coast brake solenoid valve
- ATF pressure switch 2

DTC Confirmation Procedure

ACS003QQ

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If “DTC Confirmation Procedure” has been previously performed, always turn ignition switch “OFF” and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Start engine.
2. Accelerate vehicle to maintain the following conditions.
Selector lever: “M” position
Gear position: “M1-1st” or “M2-2nd” gear (LC/B ON/OFF)
3. Perform step “2” again.
4. Turn ignition switch “OFF”, then perform step “1” to “3” again.
5. Check “SELF-DIAG RESULTS” mode for “A/T” with CONSULT-II. If DTC (P1774) is detected, refer to [AT-160, "Diagnostic Procedure"](#).
If DTC (P1772) is detected, go to [AT-158, "Diagnostic Procedure"](#).

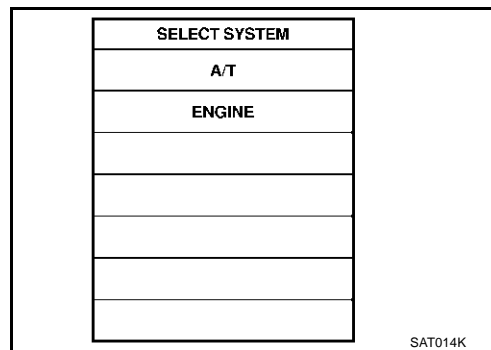

WITH GST

Follow the procedure “With CONSULT-II”.

DTC P1774 LOW COAST BRAKE SOLENOID VALVE FUNCTION

ACS003QR

Diagnostic Procedure

1. INPUT SIGNALS

With CONSULT-II

1. Start the engine.
2. Select "ECU INPUT SIGNALS" or "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Drive vehicle in the manual mode ("M1-1st" or "M2-2nd" gear), and confirm the ON/OFF actuation of the "ATF PRES SW 2".

With GST

Follow the procedure "With CONSULT-II".

OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.

DATA MONITOR	
MONITOR	NO. DTC
ATF PRES SW 1	OFF
ATF PRES SW 2	OFF
ATF PRES SW 3	OFF
ATF PRES SW 5	OFF
ATF PRES SW 6	OFF

▲		▼	
		RECORD	
MODE	BACK	LIGHT	COPY

PCIA0067E

2. CHECK TCM

Perform TCM input/output signal inspection. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#).

OK or NG

- OK >> GO TO 4.
NG >> GO TO 3.

3. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transmission assembly. Refer to [AT-250, "Removal and Installation"](#).
NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform DTC Confirmation Procedure.

- Refer to [AT-159, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 2.

DTC P1815 MANUAL MODE SWITCH

DTC P1815 MANUAL MODE SWITCH

PPF:34901

Description

ACS003QS

When an impossible pattern of switch signals is detected, this is judged to be an irregularity.

CONSULT-II Reference Value in Data Monitor Mode

ACS003QT

Monitor Item	Condition	Reference Value
MANU MODE SW [ON - OFF]	Manual shift gate position (neutral)	ON
	Other than the above	OFF
NON M-MODE SW [ON - OFF]	Manual shift gate position	OFF
	Other than the above	ON
UP SW LEVER [ON - OFF]	Select lever: + side	ON
	Other than the above	OFF
DOWN SW LEVER [ON - OFF]	Select lever: - side	ON
	Other than the above	OFF

On Board Diagnosis Logic

ACS003QU

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "MANU MODE SW/CIR" with CONSULT-II is detected when TCM monitors Manual mode, Non manual mode, Up or Down switch signal, and detects as irregular when impossible input pattern occurs 1 second or more.

Possible Cause

ACS003QV

- Harness or connectors (These switches circuit is open or shorted.)
- Mode select switch (Into control device)
- Position select switch (Into control device)

DTC Confirmation Procedure

ACS003QW


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start engine.
4. Move selector lever to "M" position.
5. Drive vehicle for at least 2 consecutive seconds.
6. If DTC is detected, go to [AT-161, "Diagnostic Procedure"](#).

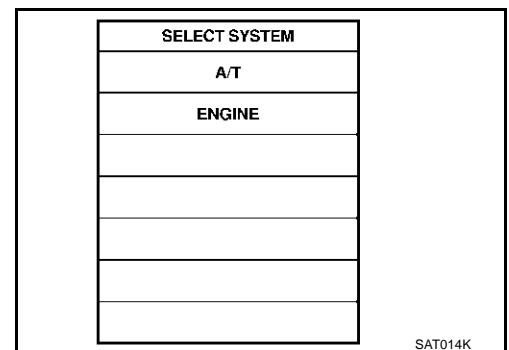

SAT014K

Diagnostic Procedure

ACS003QX

1. CHECK CAN COMMUNICATION LINE

Perform the self-diagnosis. Is a malfunction in the CAN communication indicated in the results?

Yes or No

- Yes >> Check CAN communication line. Refer to [AT-105, "DTC U1000 CAN COMMUNICATION LINE"](#).
 No >> GO TO 2.

DTC P1815 MANUAL MODE SWITCH

2. CHECK MANUAL MODE SWITCH CIRCUIT

With CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "UNIFIED METER AND A/C AMP INPUT SIGNALS" in "DATA MONITOR" mode for "METER A/C AMP" with CONSULT-II.
3. Read out ON/OFF switching action of the "AT-M GEAR".

DATA MONITOR	
MONITOR	
AT-M IND	OFF
AT-M GEAR	OFF
P RANGE IND	ON
R RANGE IND	OFF
N RANGE IND	OFF
D RANGE IND	OFF

PKIA2062E

Without CONSULT-II

Drive vehicle in the manual mode, and confirm that the actual gear position and the meter's indication of the position mutually coincide when the selector lever is shifted to the "+" (up) or "-" (down)" side (1st ⇔ 5th gear).

OK or NG

- OK >> GO TO 6.
- NG >> GO TO 3.

3. DETECT MALFUNCTIONING ITEM

Check the following items.

- Manual mode switch. Refer to [AT-163, "Component Inspection"](#) .
- Pin terminals for damage or loose connection with harness connector.
- Open circuit or short to ground or short to power in harness or connector for A/T device (manual mode switch).

OK or NG

- OK >> GO TO 4.
- NG >> Repair or replace damaged parts.

4. CHECK TCM

Perform TCM input/output signal inspection. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#) .

OK or NG

- OK >> GO TO 6.
- NG >> GO TO 5.

5. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transmission assembly. Refer to [AT-250, "Removal and Installation"](#) .
- NG >> Repair or replace damaged parts.

DTC P1815 MANUAL MODE SWITCH

6. CHECK DTC

Perform DTC Confirmation Procedure.

- Refer to [AT-161, "DTC Confirmation Procedure"](#).

OK or NG


OK >> **INSPECTION END**
 NG >> GO TO 4.

Component Inspection MANUAL MODE SWITCH

ACS003QY

Check continuity between terminals.

Item	Position	Connector No.	Terminal No. (Unit side)	Continuity
Manual mode (select) switch	Auto	M67	9 - 10	Yes
	Manual		6 - 9	
UP switch	UP		8 - 9	
DOWN switch	DOWN		7 - 9	

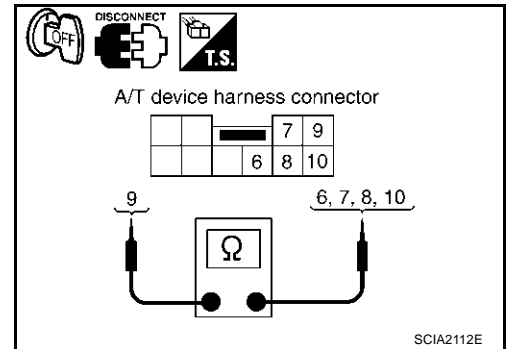

Position Indicator Lamp DIAGNOSTIC PROCEDURE

ACS003QZ


1. CHECK INPUT SIGNALS (WITH CONSULT-II)

With CONSULT-II

- Start engine.
- Select "MAIN SIGNALS" in "DATA MONITOR" mode for A/T with CONSULT-II and read out the value of "GEAR".
- Drive vehicle in the manual mode, and confirm that the actual gear position and the meter's indication of the position mutually coincide when the select lever is shifted to the "+" (up)" or "-" (down)" side (1st ⇔ 5th gear).

OK or NG

OK >> **INSPECTION END**
 NG >> Check the following items.

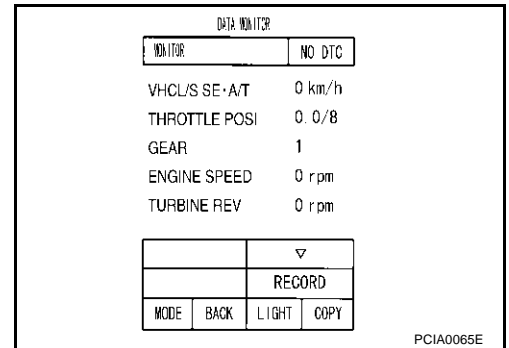

Position indicator lamp symptom chart

Items	Presumed Location of Trouble
The actual gear position does not change, or shifting into the manual mode is not possible (no gear shifting in the manual mode possible). The position indicator lamp is not indicated.	Manual mode switch Refer to AT-161, "DTC P1815 MANUAL MODE SWITCH" . A/T main system (Fail-safe function actuated) <ul style="list-style-type: none"> Refer to AT-93, "SELF-DIAGNOSTIC PROCEDURE (WITH CONSULT-II)".
The actual gear position changes, but the position indicator lamp is not indicated.	Perform the self-diagnosis function. <ul style="list-style-type: none"> Refer to AT-93, "SELF-DIAGNOSTIC PROCEDURE (WITH CONSULT-II)".
The actual gear position and the indication on the position indicator lamp do not coincide.	Perform the self-diagnosis function. <ul style="list-style-type: none"> Refer to AT-93, "SELF-DIAGNOSTIC PROCEDURE (WITH CONSULT-II)".
Only a specific position or positions is/are not indicated on the position indicator lamp.	Check the unified meter and A/C amp. Refer to DI-4, "COMBINATION METERS" .

DTC P1841 ATF PRESSURE SWITCH 1

DTC P1841 ATF PRESSURE SWITCH 1

PFP:25240

Description

ACS003R0

Fail-safe function to detect front brake clutch solenoid valve condition.

CONSULT-II Reference Value

ACS003R1

Item name	Condition	Display value
ATF PRES SW 1	Front brake solenoid valve operates.	ON
	Other conditions	OFF

On Board Diagnosis Logic

ACS003R2

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "ATF PRES SW 1/CIRC" with CONSULT-II is detected when TCM detects that actual gear ratio is normal, and relation between gear position and condition of ATF pressure switch 1 is irregular during depressing accelerator pedal. (Other than during shift change)

Possible Cause

ACS003R3

- ATF pressure switch 1
- Harness or connectors
(The switch circuit is open or shorted.)

DTC Confirmation Procedure

ACS003R4

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.


After the repair, perform the following procedure to confirm the malfunction is eliminated.

Ⓟ WITH CONSULT-II

1. Start engine.
2. Accelerate vehicle to maintain the following conditions.
ACCELE POS: 1.5/8 - 2.0/8
Selector lever: "D" position
Gear position: 3rd ⇒ 4th Gear (FR/B ON/OFF)
Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.
3. Perform step "2" again.
4. Turn ignition switch "OFF", then perform step "1" to "3" again.
5. Check "SELF-DIAG RESULTS" mode for "A/T" with CONSULT-II.

If DTC (P1841) is detected, go to [AT-165, "Diagnostic Procedure"](#) .

If DTC (P1757) is detected, go to [AT-146, "Diagnostic Procedure"](#) .

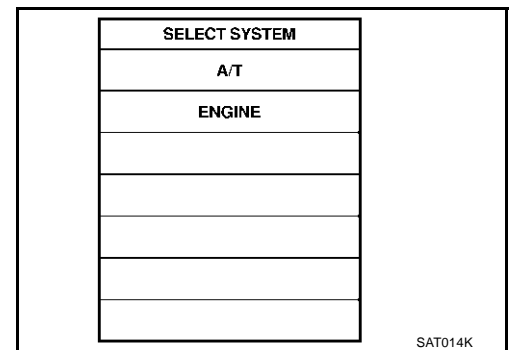

SAT014K

DTC P1841 ATF PRESSURE SWITCH 1

ACS003R5

Diagnostic Procedure

1. INPUT SIGNALS (WITH CONSULT-II)

With CONSULT-II

1. Start engine.
2. Select "ECU INPUT SIGNALS" or "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Drive vehicle in the "D" position (3rd ⇒ 4th gear), and confirm the ON/OFF actuation of the "ATF PRES SW 1".

OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.

DATA MONITOR			
MONITOR		NO DTC	
ATF PRES SW 1		OFF	
ATF PRES SW 2		OFF	
ATF PRES SW 3		OFF	
ATF PRES SW 5		OFF	
ATF PRES SW 6		OFF	

△		▽	
RECORD			
MODE	BACK	LIGHT	COPY

PCIA0067E

2. CHECK TCM

Perform TCM input/output signal inspection. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#) .

OK or NG

- OK >> GO TO 4.
NG >> GO TO 3.

3. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transmission assembly. Refer to [AT-250, "Removal and Installation"](#) .
NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform DTC Confirmation Procedure.

- Refer to [AT-164, "DTC Confirmation Procedure"](#) .

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 2.

DTC P1843 ATF PRESSURE SWITCH 3

DTC P1843 ATF PRESSURE SWITCH 3

PFP:25240

Description

ACS003R6

Fail-safe function to detect input clutch solenoid valve condition.

CONSULT-II Reference Value

ACS003R7

Item name	Condition	Display value
ATF PRES SW 3	Input clutch solenoid valve operates.	OFF
	Other conditions	ON

On Board Diagnosis Logic

ACS003R8

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "ATF PRES SW 3/CIRC" with CONSULT-II is detected when TCM detects that actual gear ratio is normal, and relation between gear position and condition of ATF pressure switch 3 is irregular during depressing accelerator pedal. (Other than during shift change)

Possible Cause

ACS003R9

- ATF pressure switch 3
- Harness or connectors
(The switch circuit is open or shorted.)

DTC Confirmation Procedure

ACS003RA

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.


After the repair, perform the following procedure to confirm the malfunction is eliminated.

Ⓟ WITH CONSULT-II

1. Start engine.
2. Accelerate vehicle to maintain the following conditions.
ACCELE POS: 1.5/8 - 2.0/8
Selector lever: "D" position
Gear position: 3rd ⇒ 4th Gear (I/C ON/OFF)
Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.
3. Perform step "2" again.
4. Turn ignition switch "OFF", then perform step "1" to "3" again.
5. Check "SELF-DIAG RESULTS" mode for "A/T" with CONSULT-II.

If DTC (P1843) is detected, go to [AT-167, "Diagnostic Procedure"](#) .

If DTC (P1752) is detected, go to [AT-142, "Diagnostic Procedure"](#) .

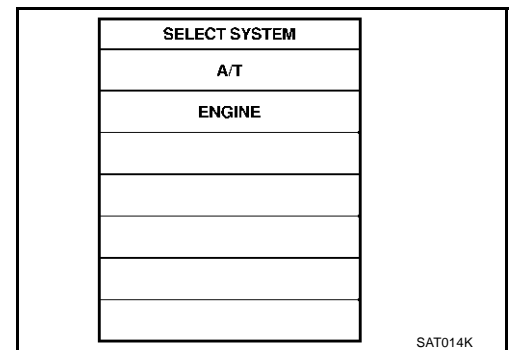

DTC P1843 ATF PRESSURE SWITCH 3

Diagnostic Procedure

ACS003RB

1. INPUT SIGNALS (WITH CONSULT-II)

With CONSULT-II

1. Start engine.
2. Select "ECU INPUT SIGNALS" or "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Drive vehicle in the "D" position (3rd ⇒ 4th gear), and confirm the ON/OFF actuation of the "ATF PRES SW 3".

OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.

DATA MONITOR			
MONITOR		NO DTC	
ATF PRES SW 1		OFF	
ATF PRES SW 2		OFF	
ATF PRES SW 3		OFF	
ATF PRES SW 5		OFF	
ATF PRES SW 6		OFF	

△		▽	
RECORD			
MODE	BACK	LIGHT	COPY

PCIA0067E

2. CHECK TCM

Perform TCM input/output signal inspection. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#).

OK or NG

- OK >> GO TO 4.
NG >> GO TO 3.

3. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transmission assembly. Refer to [AT-250, "Removal and Installation"](#).
NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform DTC Confirmation Procedure.

- Refer to [AT-166, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 2.

DTC P1845 ATF PRESSURE SWITCH 5

DTC P1845 ATF PRESSURE SWITCH 5

PFP:25240

Description

ACS003RC

Fail-safe function to detect direct clutch solenoid valve condition.

CONSULT-II Reference Value

ACS003RD

Item name	Condition	Display value
ATF PRES SW 5	Direct clutch solenoid valve operates.	OFF
	Other conditions	ON

On Board Diagnosis Logic

ACS003RE

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "ATF PRES SW 5/CIRC" with CONSULT-II is detected when TCM detects that actual gear ratio is normal, and relation between gear position and condition of ATF pressure switch 5 is irregular during depressing accelerator pedal. (Other than during shift change)

Possible Cause

ACS003RF

- ATF pressure switch 5
- Harness or connectors
(The switch circuit is open or shorted.)

DTC Confirmation Procedure

ACS003RG

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.


After the repair, perform the following procedure to confirm the malfunction is eliminated.

Ⓟ WITH CONSULT-II

1. Start engine.
2. Accelerate vehicle to maintain the following conditions.
ACCELE POS: 1.5/8 - 2.0/8
Selector lever: "D" position
Gear position: 1st ⇒ 2nd Gear (D/C ON/OFF)
Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.
3. Perform step "2" again.
4. Turn ignition switch "OFF", then perform step "1" to "3" again.
5. Check "SELF-DIAG RESULTS" mode for "A/T" with CONSULT-II.

If DTC (P1845) is detected, go to [AT-169, "Diagnostic Procedure"](#) .

If DTC (P1762) is detected, go to [AT-150, "Diagnostic Procedure"](#) .

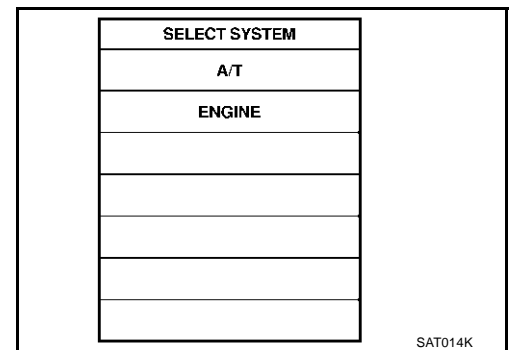

DTC P1845 ATF PRESSURE SWITCH 5

Diagnostic Procedure

ACS003RH

1. INPUT SIGNALS (WITH CONSULT-II)

① With CONSULT-II

1. Start engine.
2. Select "ECU INPUT SIGNALS" or "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Drive vehicle in the "D" position (1st ⇒ 2nd gear), and confirm the ON/OFF actuation of the "ATF PRES SW 5".

OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.

DATA MONITOR			
MONITOR		NO DTC	
ATF PRES SW 1		OFF	
ATF PRES SW 2		OFF	
ATF PRES SW 3		OFF	
ATF PRES SW 5		OFF	
ATF PRES SW 6		OFF	

△		▽	
RECORD			
MODE	BACK	LIGHT	COPY

PCIA0067E

2. CHECK TCM

Perform TCM input/output signal inspection. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#) .

OK or NG

- OK >> GO TO 4.
NG >> GO TO 3.

3. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transmission assembly. Refer to [AT-250, "Removal and Installation"](#) .
NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform DTC Confirmation Procedure.

- Refer to [AT-168, "DTC Confirmation Procedure"](#) .

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 2.

DTC P1846 ATF PRESSURE SWITCH 6

DTC P1846 ATF PRESSURE SWITCH 6

PFP:25240

Description

ACS003RI

Fail-safe function to detect high and low reverse clutch solenoid valve condition.

CONSULT-II Reference Value

ACS003RJ

Item name	Condition	Display value
ATF PRES SW 6	High and low reverse clutch solenoid valve operates.	OFF
	Other conditions	ON

On Board Diagnosis Logic

ACS003RK

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "ATF PRES SW 6/CIRC" with CONSULT-II is detected when TCM detects that actual gear ratio is normal, and relation between gear position and condition of ATF pressure switch 6 is irregular during depressing accelerator pedal. (Other than during shift change)

Possible Cause

ACS003RL

- ATF pressure switch 6
- Harness or connectors
(The switch circuit is open or shorted.)

DTC Confirmation Procedure

ACS003RM

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.


After the repair, perform the following procedure to confirm the malfunction is eliminated.

Ⓟ WITH CONSULT-II

1. Start engine.
2. Accelerate vehicle to maintain the following conditions.
ACCELE POS: 1.5/8 - 2.0/8
Selector lever: "D" position
Gear position: 2nd ⇒ 3rd Gear (HLR/C ON/OFF)
Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.
3. Perform step "2" again.
4. Turn ignition switch "OFF", then perform step "1" to "3" again.
5. Check "SELF-DIAG RESULTS" mode for "A/T" with CONSULT-II.

If DTC (P1846) is detected, go to [AT-171, "Diagnostic Procedure"](#) .

If DTC (P1767) is detected, go to [AT-154, "Diagnostic Procedure"](#) .

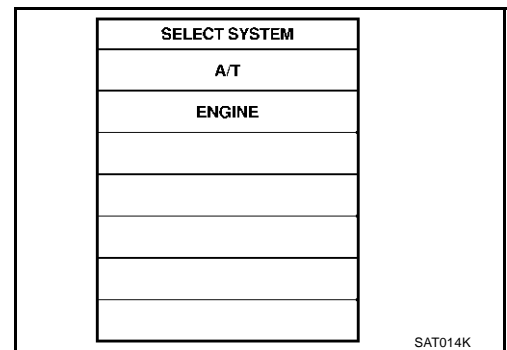

DTC P1846 ATF PRESSURE SWITCH 6

Diagnostic Procedure

ACS003RN

1. INPUT SIGNALS (WITH CONSULT-II)

With CONSULT-II

1. Start the engine.
2. Select "ECU INPUT SIGNALS" or "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Drive vehicle in the "D" position (2nd ⇒ 3rd gear), and confirm the ON/OFF actuation of the "ATF PRES SW 6".

OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.

DATA MONITOR			
MONITOR		NO DTC	
ATF PRES SW 1		OFF	
ATF PRES SW 2		OFF	
ATF PRES SW 3		OFF	
ATF PRES SW 5		OFF	
ATF PRES SW 6		OFF	

△		▽	
RECORD			
MODE	BACK	LIGHT	COPY

PCIA0067E

2. CHECK TCM

Perform TCM input/output signal inspection. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#) .

OK or NG

- OK >> GO TO 4.
NG >> GO TO 3.

3. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transmission assembly. Refer to [AT-250, "Removal and Installation"](#) .
NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform DTC Confirmation Procedure.

- Refer to [AT-170, "DTC Confirmation Procedure"](#) .

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 2.

CLOSED THROTTLE POSITION AND WIDE OPEN THROTTLE POSITION CIRCUIT

CLOSED THROTTLE POSITION AND WIDE OPEN THROTTLE POSITION CIRCUIT

PFP:18002

Diagnostic Procedure

ACS003R0

1. CHECK CAN COMMUNICATION LINE

Perform the self-diagnosis. Is a malfunction in the CAN communication indicated in the results?

YES or NO

- YES >> Check CAN communication line. Refer to [AT-105, "DTC U1000 CAN COMMUNICATION LINE"](#).
NO >> GO TO 2.

2. CHECK THROTTLE POSITION SIGNAL CIRCUIT

With CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Depress accelerator pedal and read out the value of "CLSD THL POS" and "W/O THL POS".

Accelerator Pedal Operation	Monitor Item	
	CLSD THL POS	W/O THL POS
Released	ON	OFF
Fully depressed	OFF	ON

DATA MONITOR	
MONITOR	NO DTC
ACCELE POSI	0.0/8
THROTTLE POSI	0.0/8
CLSD THL POS	ON
W/O THL POS	OFF
BRAKE SW	OFF
▼	
RECORD	
MODE	BACK
LIGHT	COPY

PCIA0070E

OK or NG

OK >> **INSPECTION END**

NG >> Check the following items. If NG, repair or replace damaged parts.

- Perform the self-diagnosis for "ENGINE" with CONSULT-II. Refer to [EC-112, "CONSULT-II Function"](#).
- Open circuit or short to ground or short to power in harness or connectors.
- Pin terminals for damage or loose connection with harness connector.

BRAKE SIGNAL CIRCUIT

BRAKE SIGNAL CIRCUIT

PFP:25320

Diagnostic Procedure

ACS003RP

1. CHECK CAN COMMUNICATION LINE

Perform the self-diagnosis. Is a malfunction in the CAN communication indicated in the results?

YES or NO

- YES >> Check CAN communication line. Refer to [AT-105, "DTC U1000 CAN COMMUNICATION LINE"](#).
NO >> GO TO 2.

2. CHECK STOP LAMP SWITCH CIRCUIT

Ⓟ With CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Read out ON/OFF switching action of the "BRAKE SW".

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 3.

DATA MONITOR	
MONITOR	NO DTC
ACCELE POSI	0.0/8
THROTTLE POSI	0.0/8
CLSD THL POS	ON
W/O THL POS	OFF
BRAKE SW	OFF

▼			
RECORD			
MODE	BACK	LIGHT	COPY

PCIA0070E

3. CHECK STOP LAMP SWITCH

Check continuity between stop lamp switch harness connector E111 terminals 1 (R/Y) and 2 (P/L).


Condition	Continuity
When brake pedal is depressed	Yes
When brake pedal is released	No

Check stop lamp switch after adjusting brake pedal — refer to [BR-6, "BRAKE PEDAL"](#).

OK or NG

- OK >> **INSPECTION END**
NG >> Check the following items. If NG, repair or replace damaged parts.

- Harness for short or open between battery and stop lamp switch.
- Harness for short or open between stop lamp switch and unified meter and A/C amp.

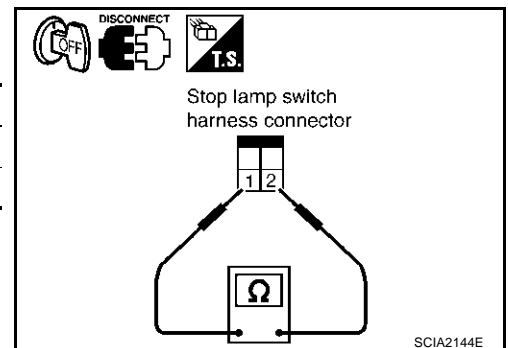

TROUBLE DIAGNOSIS FOR SYMPTOMS

TROUBLE DIAGNOSIS FOR SYMPTOMS

PFP:00007

A/T Check Indicator Lamp Does Not Come On SYMPTOM:

ACS008Q0

A/T CHECK indicator lamp does not come on for about 2 seconds when turning ignition switch to "ON".

DIAGNOSTIC PROCEDURE

1. CHECK CAN COMMUNICATION LINE

Perform self-diagnosis. Refer to [AT-93, "SELF-DIAGNOSTIC PROCEDURE \(WITH CONSULT-II\)"](#) , [AT-103, "TCM SELF-DIAGNOSTIC PROCEDURE \(NO TOOLS\)"](#) .

Is a malfunction in the CAN communication indicated in the results?

- YES >> Check CAN communication line. Refer to [AT-105, "DTC U1000 CAN COMMUNICATION LINE"](#) .
NO >> GO TO 2.

2. CHECK A/T CHECK INDICATOR LAMP CIRCUIT

Check combination meter. Refer to [DI-4, "COMBINATION METERS"](#) .

OK or NG

- OK >> GO TO 3.
NG >> Repair or replace damaged parts.

3. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [AT-122, "DTC P1701 TRANSMISSION CONTROL MODULE \(POWER SUPPLY\)"](#) .

OK or NG

- OK >> **INSPECTION END**
NG >> Repair or replace damaged parts.

Engine Cannot Be Started In "P" or "N" Position SYMPTOM:

ACS008QP

- Engine cannot be started with selector lever in "P" or "N" position.
- Engine can be started with selector lever in "D" or "R" position.

DIAGNOSTIC PROCEDURE

1. CHECK PNP SWITCH CIRCUIT

Perform self-diagnosis. Refer to [AT-93, "SELF-DIAGNOSTIC PROCEDURE \(WITH CONSULT-II\)"](#) , [AT-103, "TCM SELF-DIAGNOSTIC PROCEDURE \(NO TOOLS\)"](#) .

Do the self-diagnosis results indicate PNP switch?

- YES >> Check the malfunctioning system. Refer to [AT-110, "DTC P0705 PARK/NEUTRAL POSITION SWITCH"](#) .
NO >> GO TO 2.

TROUBLE DIAGNOSIS FOR SYMPTOMS

2. CHECK CONTROL LINKAGE


Check control linkage.

- Refer to [AT-215, "Checking of A/T Position"](#).

OK or NG

OK >> GO TO 3.

NG >> Adjust control linkage. Refer to [AT-215, "Adjustment of A/T Position"](#).

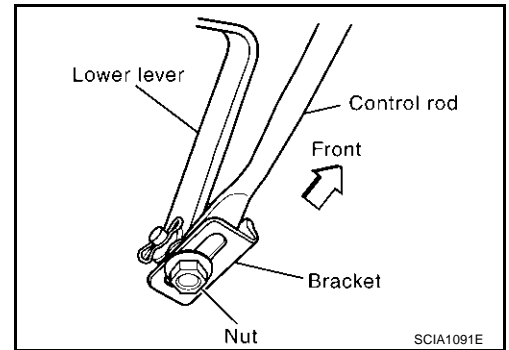

3. CHECK STARTING SYSTEM

Check starting system. Refer to [SC-10, "STARTING SYSTEM"](#).

OK or NG

OK >> **INSPECTION END**

NG >> Repair or replace damaged parts.

In "P" Position, Vehicle Moves When Pushed SYMPTOM:

ACS008QQ

Even though the selector lever is set in the "P" position, the parking mechanism is not actuated, allowing the vehicle to be moved when it is pushed.

DIAGNOSTIC PROCEDURE

1. CHECK PNP SWITCH CIRCUIT

Perform self-diagnosis. Refer to [AT-93, "SELF-DIAGNOSTIC PROCEDURE \(WITH CONSULT-II\)"](#), [AT-103, "TCM SELF-DIAGNOSTIC PROCEDURE \(NO TOOLS\)"](#).

Do the self-diagnosis results indicate PNP switch?

YES >> Check the malfunctioning system. Refer to [AT-110, "DTC P0705 PARK/NEUTRAL POSITION SWITCH"](#).

NO >> GO TO 2.

2. CHECK CONTROL LINKAGE


Check control linkage.

- Refer to [AT-215, "Checking of A/T Position"](#).

OK or NG

OK >> GO TO 3.

NG >> Adjust control linkage. Refer to [AT-215, "Adjustment of A/T Position"](#).

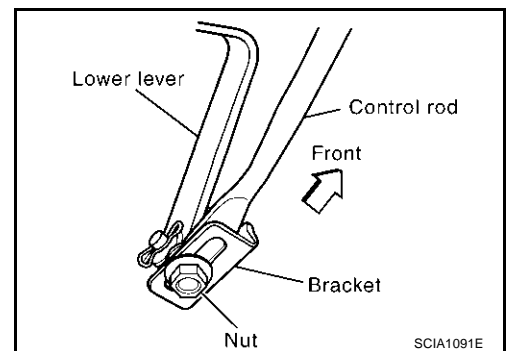

3. CHECK PARKING COMPONENTS

Check parking components. Refer to [AT-236, "Parking Components"](#).

OK or NG

OK >> GO TO 4

NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS


4. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-224, "Control Valve with TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-56, "Fluid condition check"](#) .

OK or NG

OK >> **INSPECTION END**

NG >> Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-67, "Symptom Chart"](#) (Symptom No.65).

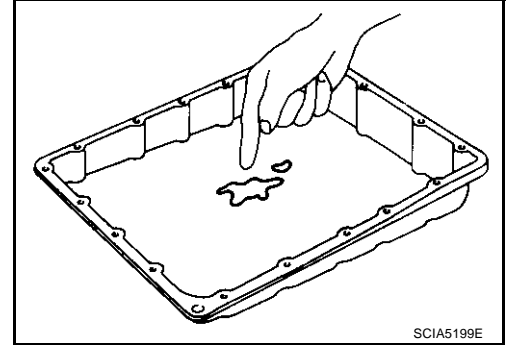

ACS008QR

In "N" Position, Vehicle Moves

SYMPTOM:

Vehicle moves forward or backward when selecting "N" position.

DIAGNOSTIC PROCEDURE

1. CHECK PNP SWITCH CIRCUIT

Perform self-diagnosis. Refer to [AT-93, "SELF-DIAGNOSTIC PROCEDURE \(WITH CONSULT-II\)"](#) , [AT-103, "TCM SELF-DIAGNOSTIC PROCEDURE \(NO TOOLS\)"](#) .

Do the self-diagnostic results indicate PNP switch?

YES >> Check the malfunctioning system. Refer to [AT-110, "DTC P0705 PARK/NEUTRAL POSITION SWITCH"](#) .

NO >> GO TO 2.

2. CHECK CONTROL LINKAGE


Check control linkage.

- Refer to [AT-215, "Checking of A/T Position"](#) .

OK or NG

OK >> GO TO 3.

NG >> Adjust control linkage. Refer to [AT-215, "Adjustment of A/T Position"](#) .

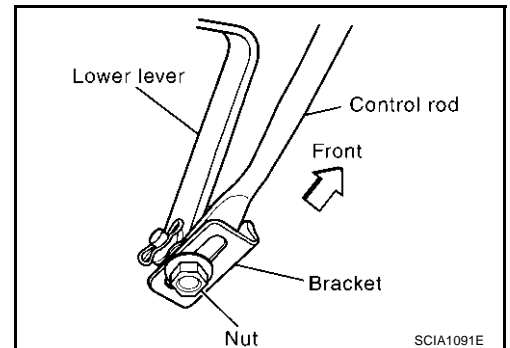


3. CHECK A/T FLUID LEVEL

Check A/T fluid level. Refer to [AT-12, "Checking ATF"](#) .

OK or NG

OK >> GO TO 4.

NG >> Refill ATF.

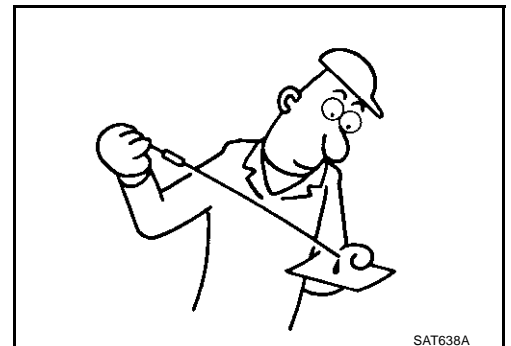


TROUBLE DIAGNOSIS FOR SYMPTOMS

4. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-224, "Control Valve with TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-56, "Fluid condition check"](#) .

OK or NG

- OK >> GO TO 5.
NG >> Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-67, "Symptom Chart"](#) (Symptom No.67).

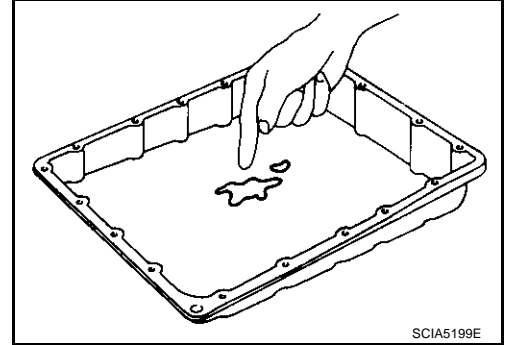

5. CHECK SYMPTOM

Check again. Refer to [AT-60, "Check at Idle"](#) .

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 6.

6. CHECK TCM

1. Check TCM input/output signals. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
NG >> Repair or replace damaged parts.

Large Shock ("N" to "D" Position) SYMPTOM:

ACS008QS

A noticeable shock occurs when the selector lever is shifted from the "N" to "D" position.

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [AT-93, "SELF-DIAGNOSTIC PROCEDURE \(WITH CONSULT-II\)"](#) .

Do the self-diagnostic results indicate A/T fluid temperature sensor, engine speed signal, accelerator pedal position sensor, ATF pressure switch 1, front brake solenoid valve, CAN communication line?

- YES >> Check the malfunctioning system. Refer to [AT-130, "DTC P1710 A/T FLUID TEMPERATURE SENSOR CIRCUIT"](#) , [AT-114, "DTC P0725 ENGINE SPEED SIGNAL"](#) , [AT-128, "DTC P1705 THROTTLE POSITION SENSOR"](#) , [AT-164, "DTC P1841 ATF PRESSURE SWITCH 1"](#) , [AT-145, "DTC P1757 FRONT BRAKE SOLENOID VALVE"](#) , [AT-105, "DTC U1000 CAN COMMUNICATION LINE"](#) .

NO >> GO TO 2.

2. ENGINE IDLE SPEED

Check engine idle speed. Refer to [EC-39, "Idle Speed and Ignition Timing Check"](#) .

OK or NG

- OK >> GO TO 3.
NG >> Repair.

TROUBLE DIAGNOSIS FOR SYMPTOMS

3. CHECK CONTROL LINKAGE


Check control linkage.

- Refer to [AT-215, "Checking of A/T Position"](#) .

OK or NG

OK >> GO TO 4.

NG >> Adjust control linkage. Refer to [AT-215, "Adjustment of A/T Position"](#) .

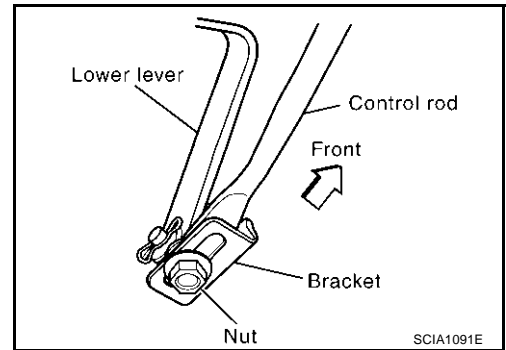


4. CHECK A/T FLUID LEVEL

Check A/T fluid level. Refer to [AT-12, "Checking ATF"](#) .

OK or NG

OK >> GO TO 5.

NG >> Refill ATF.

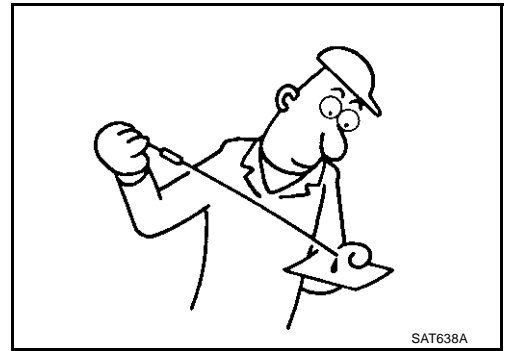

5. CHECK LINE PRESSURE


Check line pressure at idle with selector lever in "D" position. Refer to [AT-57, "LINE PRESSURE TEST"](#) .

OK or NG

OK >> GO TO 8.

NG - 1 >> Line pressure high: GO TO 6.

NG - 2 >> Line pressure low: GO TO 7.

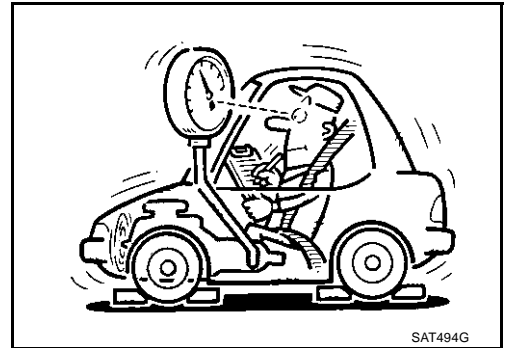

6. DETECT MALFUNCTIONING ITEM

1. Check control valve with TCM. Refer to [AT-224, "Control Valve with TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Disassemble A/T. Refer to [AT-263, "DISASSEMBLY"](#) .
3. Check the following items:
 - Oil pump assembly. Refer to [AT-278, "Oil Pump"](#) .

OK or NG

OK >> GO TO 8.

NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

7. DETECT MALFUNCTIONING ITEM

1. Check control valve with TCM. Refer to [AT-224, "Control Valve with TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Disassemble A/T. Refer to [AT-263, "DISASSEMBLY"](#) .
3. Check the following items:
 - Oil pump assembly. Refer to [AT-278, "Oil Pump"](#) .
 - Power train system. Refer to [AT-263, "DISASSEMBLY"](#) .
 - Transmission case. Refer to [AT-263, "DISASSEMBLY"](#) .

OK or NG


- OK >> GO TO 8.
NG >> Repair or replace damaged parts.

8. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-224, "Control Valve with TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-56, "Fluid condition check"](#) .

OK or NG

- OK >> GO TO 10.
NG >> GO TO 9.

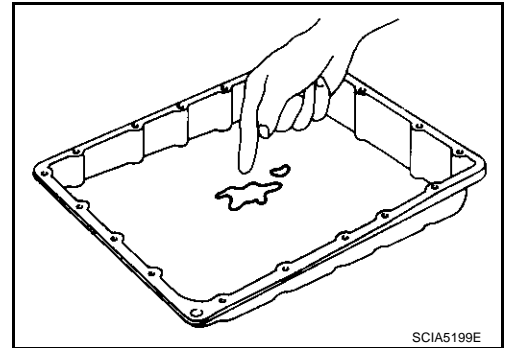

9. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-67, "Symptom Chart"](#) (Symptom No.1).

OK or NG

- OK >> GO TO 10.
NG >> Repair or replace damaged parts.

10. CHECK SYMPTOM

Check again. Refer to [AT-60, "Check at Idle"](#) .

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 11.

11. CHECK TCM

1. Check TCM input/output signals. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

ACS008QT

Vehicle Does Not Creep Backward In "R" Position

SYMPTOM:

The vehicle does not creep in the "R" position. Or an extreme lack of acceleration is observed.

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [AT-93, "SELF-DIAGNOSTIC PROCEDURE \(WITH CONSULT-II\)"](#).

Do the self-diagnostic results indicate accelerator pedal position sensor, ATF pressure switch 6, high and low reverse clutch solenoid valve, CAN communication line, PNP switch?

YES >> Check the malfunctioning system. Refer to [AT-128, "DTC P1705 THROTTLE POSITION SENSOR"](#), [AT-170, "DTC P1846 ATF PRESSURE SWITCH 6"](#), [AT-153, "DTC P1767 HIGH AND LOW REVERSE CLUTCH SOLENOID VALVE"](#), [AT-105, "DTC U1000 CAN COMMUNICATION LINE"](#), [AT-110, "DTC P0705 PARK/NEUTRAL POSITION SWITCH"](#).

NO >> GO TO 2.

2. CHECK CONTROL LINKAGE


Check control linkage.

- Refer to [AT-215, "Checking of A/T Position"](#).

OK or NG

OK >> GO TO 3.

NG >> Adjust control linkage. Refer to [AT-215, "Adjustment of A/T Position"](#).

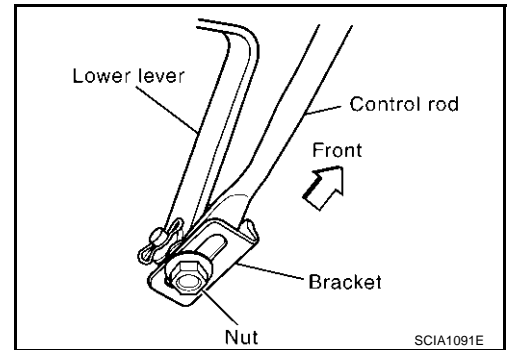


3. CHECK A/T FLUID LEVEL

Check A/T fluid level. Refer to [AT-12, "Checking ATF"](#).

OK or NG

OK >> GO TO 4.

NG >> Refill ATF.

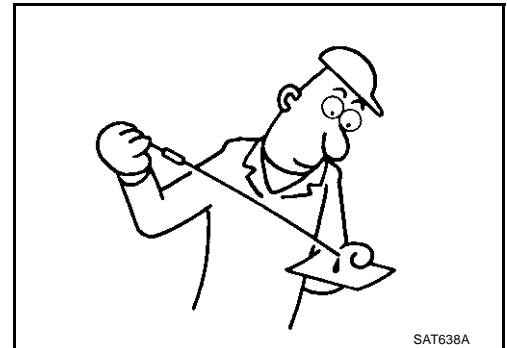

4. CHECK STALL TEST

Check stall revolution with selector lever in "M" and "R" positions.


Refer to [AT-56, "STALL TEST"](#).

OK or NG

OK >> GO TO 6.

OK in "M" position, NG in "R" position >> GO TO 5.

NG in both "M" and "R" positions >> GO TO 8.

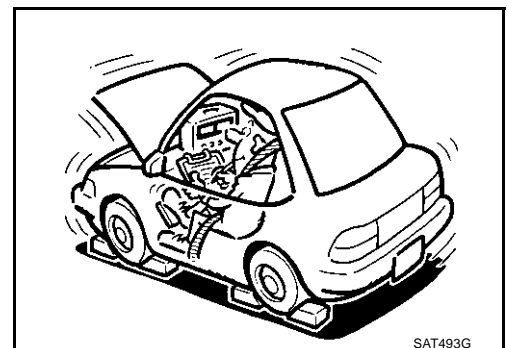

TROUBLE DIAGNOSIS FOR SYMPTOMS

5. DETECT MALFUNCTIONING ITEM

1. Disassemble A/T. Refer to [AT-263, "DISASSEMBLY"](#) .
2. Check the following items:
 - Reverse brake. Refer to [AT-263, "Disassembly"](#) .

OK or NG


- OK >> GO TO 9.
NG >> Repair or replace damaged parts.

6. CHECK LINE PRESSURE

Check line pressure with the engine idling. Refer to [AT-57, "LINE PRESSURE TEST"](#) .

OK or NG

- OK >> GO TO 9.
NG - 1 >> Line pressure high. GO TO 7.
NG - 2 >> Line pressure low. GO TO 8.

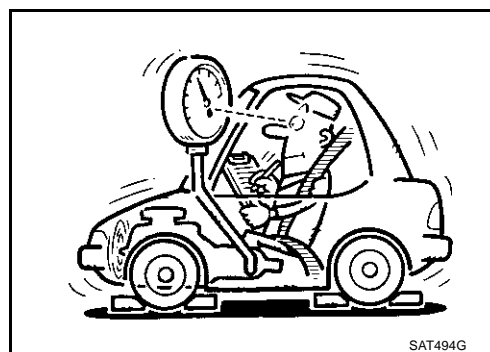

7. DETECT MALFUNCTIONING ITEM

1. Check control valve with TCM. Refer to [AT-224, "Control Valve with TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Disassemble A/T. Refer to [AT-263, "DISASSEMBLY"](#) .
3. Check the following items:
 - Oil pump assembly. Refer to [AT-278, "Oil Pump"](#) .

OK or NG

- OK >> GO TO 9.
NG >> Repair or replace damaged parts.

8. DETECT MALFUNCTIONING ITEM

1. Check control valve with TCM. Refer to [AT-224, "Control Valve with TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Disassemble A/T. Refer to [AT-263, "DISASSEMBLY"](#) .
3. Check the following items:
 - Oil pump assembly. Refer to [AT-278, "Oil Pump"](#) .
 - Power train system. Refer to [AT-263, "DISASSEMBLY"](#) .
 - Transmission case. Refer to [AT-263, "DISASSEMBLY"](#) .

OK or NG

- OK >> GO TO 9.
NG >> Repair or replace damaged parts.


TROUBLE DIAGNOSIS FOR SYMPTOMS

9. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-224, "Control Valve with TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-56, "Fluid condition check"](#) .

OK or NG

- OK >> GO TO 10.
NG >> GO TO 13.

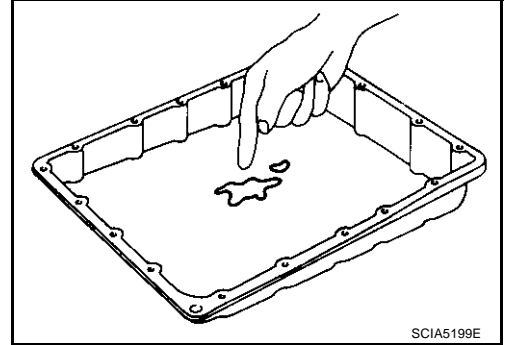

10. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-67, "Symptom Chart"](#) (Symptom No.43).

OK or NG

- OK >> GO TO 11.
NG >> Repair or replace damaged parts.

11. CHECK SYMPTOM

Check again. Refer to [AT-60, "Check at Idle"](#) .

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 12.

12. CHECK TCM

1. Check TCM input/output signals. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
NG >> Repair or replace damaged parts.

13. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-67, "Symptom Chart"](#) (Symptom No.43).

OK or NG

- OK >> GO TO 11.
NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

ACS0080U

Vehicle Does Not Creep Forward In "D" Position

SYMPTOM:

Vehicle does not creep forward when selecting "D" position.

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [AT-93, "SELF-DIAGNOSTIC PROCEDURE \(WITH CONSULT-II\)"](#) , [AT-103, "TCM SELF-DIAGNOSTIC PROCEDURE \(NO TOOLS\)"](#) .

Do the self-diagnostic results indicate accelerator pedal position sensor, CAN communication line, PNP switch?

YES >> Check the malfunctioning system. Refer to [AT-128, "DTC P1705 THROTTLE POSITION SENSOR"](#) , [AT-105, "DTC U1000 CAN COMMUNICATION LINE"](#) , [AT-110, "DTC P0705 PARK/NEUTRAL POSITION SWITCH"](#) .

NO >> GO TO 2.

2. CHECK CONTROL LINKAGE


Check control linkage.

- Refer to [AT-215, "Checking of A/T Position"](#) .

OK or NG

OK >> GO TO 3.

NG >> Adjust control linkage. Refer to [AT-215, "Adjustment of A/T Position"](#) .

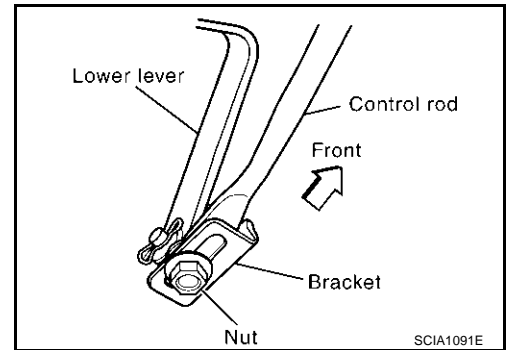

3. CHECK A/T FLUID LEVEL

Check A/T fluid level. Refer to [AT-12, "Checking ATF"](#) .

OK or NG

OK >> GO TO 4.

NG >> Refill ATF.




4. CHECK STALL TEST

Check stall revolution with selector lever in "D" position. Refer to [AT-56, "STALL TEST"](#) .

OK or NG

OK >> GO TO 5.

NG >> GO TO 7.

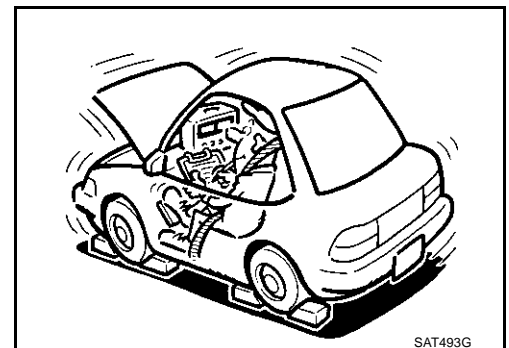


TROUBLE DIAGNOSIS FOR SYMPTOMS

5. CHECK LINE PRESSURE

Check line pressure at idle with selector lever in "D" position. Refer to [AT-57, "LINE PRESSURE TEST"](#) .

OK or NG

- OK >> GO TO 8.
- NG - 1 >> Line pressure high. GO TO 6.
- NG - 2 >> Line pressure low. GO TO 7.

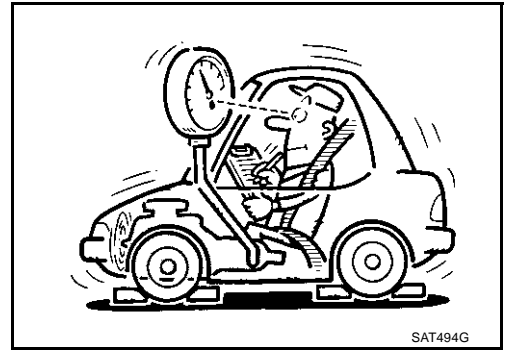

6. DETECT MALFUNCTIONING ITEM

1. Check control valve with TCM. Refer to [AT-224, "Control Valve with TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Disassemble A/T. Refer to [AT-263, "DISASSEMBLY"](#) .
3. Check the following items:
 - Oil pump assembly. Refer to [AT-278, "Oil Pump"](#) .

OK or NG

- OK >> GO TO 8.
- NG >> Repair or replace damaged parts.

7. DETECT MALFUNCTIONING ITEM

1. Check control valve with TCM. Refer to [AT-224, "Control Valve with TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Disassemble A/T. Refer to [AT-263, "DISASSEMBLY"](#) .
3. Check the following items:
 - Oil pump assembly. Refer to [AT-278, "Oil Pump"](#) .
 - Power train system. Refer to [AT-263, "DISASSEMBLY"](#) .
 - Transmission case. Refer to [AT-263, "DISASSEMBLY"](#) .

OK or NG


- OK >> GO TO 8.
- NG >> Repair or replace damaged parts.

8. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-224, "Control Valve with TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-56, "Fluid condition check"](#) .

OK or NG

- OK >> GO TO 9.
- NG >> GO TO 12.

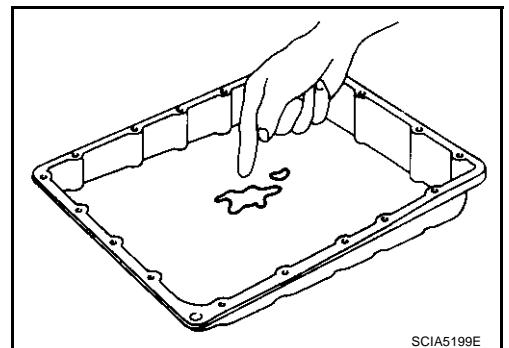

TROUBLE DIAGNOSIS FOR SYMPTOMS

9. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-67, "Symptom Chart"](#) (Symptom No.43).

OK or NG

- OK >> GO TO 10.
NG >> Repair or replace damaged parts.

10. CHECK SYMPTOM

Check again. Refer to [AT-60, "Check at Idle"](#) .

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 11.

11. CHECK TCM

1. Check TCM input/output signals. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
NG >> Repair or replace damaged parts.

12. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-67, "Symptom Chart"](#) (Symptom No.43).

OK or NG

- OK >> GO TO 10.
NG >> Repair or replace damaged parts.

Vehicle Cannot Be Started From D1

ACS008QV

SYMPTOM:

Vehicle cannot be started from D1 on cruise test - Part 1.

DIAGNOSTIC PROCEDURE

1. CONFIRM THE SYMPTOM

Check if vehicle creeps in "R" position.

OK or NG

- OK >> GO TO 2.
NG >> Refer to [AT-180, "Vehicle Does Not Creep Backward In "R" Position"](#) .

2. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [AT-93, "SELF-DIAGNOSTIC PROCEDURE \(WITH CONSULT-II\)"](#) , [AT-103, "TCM SELF-DIAGNOSTIC PROCEDURE \(NO TOOLS\)"](#)

Is any malfunction detected by self-diagnostic results?

- YES >> Check the malfunctioning system. Refer to [AT-93, "SELF-DIAGNOSTIC PROCEDURE \(WITH CONSULT-II\)"](#) , [AT-104, "Judgement self-diagnosis code"](#) .
NO >> GO TO 3.

TROUBLE DIAGNOSIS FOR SYMPTOMS

3. CHECK ACCELERATOR POSITION (APP) SENSOR

Check accelerator pedal position (APP) sensor. Refer to [AT-128, "DTC P1705 THROTTLE POSITION SENSOR"](#)

OK or NG

OK >> GO TO 4.

NG >> Repair or replace accelerator pedal position (APP) sensor.

4. CHECK A/T FLUID LEVEL

Check A/T fluid level. Refer to [AT-12, "Checking ATF"](#) .

OK or NG

OK >> GO TO 5.

NG >> Refill ATF.



5. CHECK LINE PRESSURE


Check line pressure at the engine stall point. Refer to [AT-57, "LINE PRESSURE TEST"](#) .

OK or NG

OK >> GO TO 8.

NG - 1 >> Line pressure high. GO TO 6.

NG - 2 >> Line pressure low. GO TO 7.

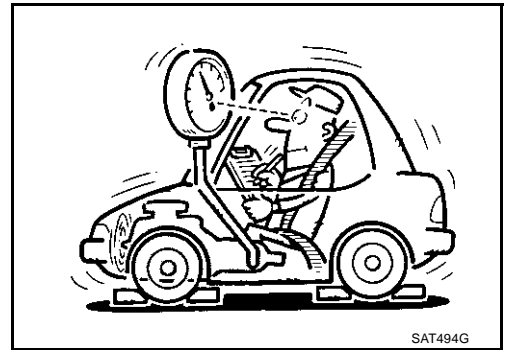

6. DETECT MALFUNCTIONING ITEM

1. Check control valve with TCM. Refer to [AT-224, "Control Valve with TCM and A/T Fluid Temperature Sensor 2"](#) .

2. Disassemble A/T. Refer to [AT-263, "DISASSEMBLY"](#) .

3. Check the following items:

- Oil pump assembly. Refer to [AT-278, "Oil Pump"](#) .

OK or NG

OK >> GO TO 8.

NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

7. DETECT MALFUNCTIONING ITEM

1. Check control valve with TCM. Refer to [AT-224, "Control Valve with TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Disassemble A/T. Refer to [AT-263, "DISASSEMBLY"](#) .
3. Check the following items:
 - Oil pump assembly. Refer to [AT-278, "Oil Pump"](#) .
 - Power train system. Refer to [AT-263, "DISASSEMBLY"](#) .
 - Transmission case. Refer to [AT-263, "DISASSEMBLY"](#) .

OK or NG


- OK >> GO TO 8.
NG >> Repair or replace damaged parts.

8. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-224, "Control Valve with TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-56, "Fluid condition check"](#) .

OK or NG

- OK >> GO TO 9.
NG >> GO TO 12.

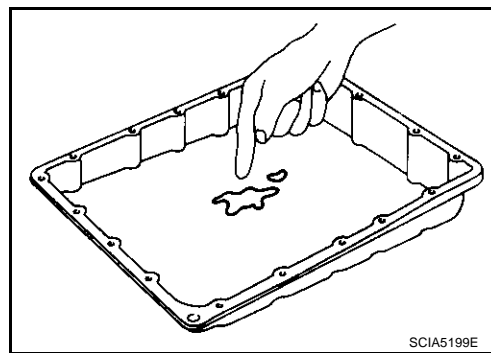

9. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-67, "Symptom Chart"](#) (Symptom No.23).

OK or NG

- OK >> GO TO 10.
NG >> Repair or replace damaged parts.

10. CHECK SYMPTOM

Check again. Refer to [AT-62, "Cruise Test - Part 1"](#) , [AT-64, "Cruise Test - Part 2"](#) .

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 11.

11. CHECK TCM

1. Check TCM input/output signals. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

12. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-67, "Symptom Chart"](#) (Symptom No.23).

OK or NG

- OK >> GO TO 10.
NG >> Repair or replace damaged parts.

A/T Does Not Shift: D1 → D2 SYMPTOM:

ACS008QW

The vehicle does not shift-up from the D1 to D2 gear at the specified speed.

DIAGNOSTIC PROCEDURE

1. CONFIRM THE SYMPTOM

Check if vehicle creeps forward in "D" position and vehicle can be started from D1.

OK or NG

- OK >> GO TO 2.
NG >> Refer to [AT-183, "Vehicle Does Not Creep Forward In "D" Position"](#) , [AT-185, "Vehicle Cannot Be Started From D1"](#) .

2. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [AT-93, "SELF-DIAGNOSTIC PROCEDURE \(WITH CONSULT-II\)"](#) .

Do the self-diagnostic results indicate ATF pressure switch 5, direct clutch solenoid valve, accelerator pedal position sensor, vehicle speed sensor A/T (revolution sensor) and vehicle speed sensor MTR?


- YES >> Check the malfunctioning system. Refer to [AT-168, "DTC P1845 ATF PRESSURE SWITCH 5"](#) , [AT-149, "DTC P1762 DIRECT CLUTCH SOLENOID VALVE"](#) , [AT-128, "DTC P1705 THROTTLE POSITION SENSOR"](#) , [AT-112, "DTC P0720 VEHICLE SPEED SENSOR A/T \(REVOLUTION SENSOR\)"](#) , [AT-134, "DTC P1721 VEHICLE SPEED SENSOR MTR"](#) .
NO >> GO TO 3.

3. CHECK A/T FLUID LEVEL

Check A/T fluid level. Refer to [AT-12, "Checking ATF"](#) .

OK or NG

- OK >> GO TO 4.
NG >> Refill ATF.

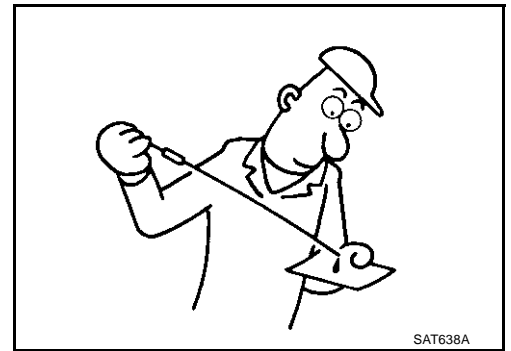

SAT638A


TROUBLE DIAGNOSIS FOR SYMPTOMS

4. CHECK LINE PRESSURE

Check line pressure at the engine stall point. Refer to [AT-57, "LINE PRESSURE TEST"](#) .

OK or NG

- OK >> GO TO 7.
- NG - 1 >> Line pressure high. GO TO 5.
- NG - 2 >> Line pressure low. GO TO 6.

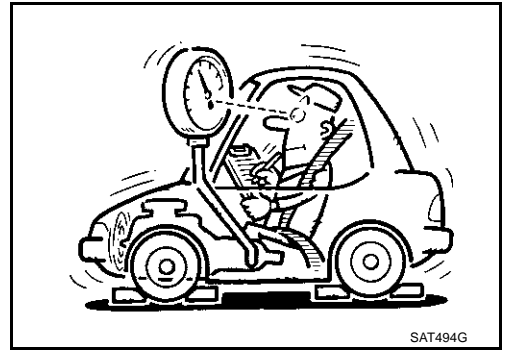

5. DETECT MALFUNCTIONING ITEM

1. Check control valve with TCM. Refer to [AT-224, "Control Valve with TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Disassemble A/T. Refer to [AT-263, "DISASSEMBLY"](#) .
3. Check the following items:
 - Oil pump assembly. Refer to [AT-278, "Oil Pump"](#) .

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.

6. DETECT MALFUNCTIONING ITEM

1. Check control valve with TCM. Refer to [AT-224, "Control Valve with TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Disassemble A/T. Refer to [AT-263, "DISASSEMBLY"](#) .
3. Check the following items:
 - Oil pump assembly. Refer to [AT-278, "Oil Pump"](#) .
 - Power train system. Refer to [AT-263, "DISASSEMBLY"](#) .
 - Transmission case. Refer to [AT-263, "DISASSEMBLY"](#) .

OK or NG


- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.

7. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-224, "Control Valve with TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-56, "Fluid condition check"](#) .

OK or NG

- OK >> GO TO 8.
- NG >> GO TO 11.

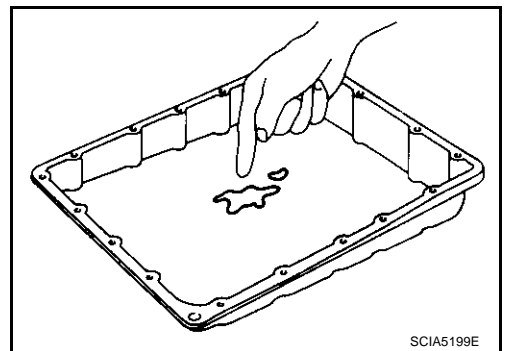

TROUBLE DIAGNOSIS FOR SYMPTOMS

8. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-67, "Symptom Chart"](#) (Symptom No.10).

OK or NG

- OK >> GO TO 9.
NG >> Repair or replace damaged parts.

9. CHECK SYMPTOM

Check again. Refer to [AT-62, "Cruise Test - Part 1"](#) , [AT-64, "Cruise Test - Part 2"](#) .

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 10.

10. CHECK TCM

1. Check TCM input/output signals. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
NG >> Repair or replace damaged parts.

11. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-67, "Symptom Chart"](#) (Symptom No.10).

OK or NG

- OK >> GO TO 9.
NG >> Repair or replace damaged parts.

A/T Does Not Shift: D2 → D3

ACS008QX

SYMPTOM:

The vehicle does not shift-up from D2 to D3 gear at the specified speed.

DIAGNOSTIC PROCEDURE

1. CONFIRM THE SYMPTOM

Check if vehicle creeps forward in "D" position and vehicle can be started from D1.

OK or NG

- OK >> GO TO 2.
NG >> Refer to [AT-183, "Vehicle Does Not Creep Forward In "D" Position"](#) , [AT-185, "Vehicle Cannot Be Started From D1"](#) .

2. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [AT-93, "SELF-DIAGNOSTIC PROCEDURE \(WITH CONSULT-II\)"](#) .

Do the self-diagnostic results indicate ATF pressure switch 6, high and low reverse clutch solenoid valve, accelerator pedal position sensor, vehicle speed sensor A/T (revolution sensor) and vehicle speed sensor MTR?

- YES >> Check the malfunctioning system. Refer to [AT-170, "DTC P1846 ATF PRESSURE SWITCH 6"](#) , [AT-153, "DTC P1767 HIGH AND LOW REVERSE CLUTCH SOLENOID VALVE"](#) , [AT-128, "DTC P1705 THROTTLE POSITION SENSOR"](#) , [AT-112, "DTC P0720 VEHICLE SPEED SENSOR A/T \(REVOLUTION SENSOR\)"](#) , [AT-134, "DTC P1721 VEHICLE SPEED SENSOR MTR"](#) .
- NO >> GO TO 3.


TROUBLE DIAGNOSIS FOR SYMPTOMS

3. CHECK A/T FLUID LEVEL

Check A/T fluid level. Refer to [AT-12, "Checking ATF"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> Refill ATF.

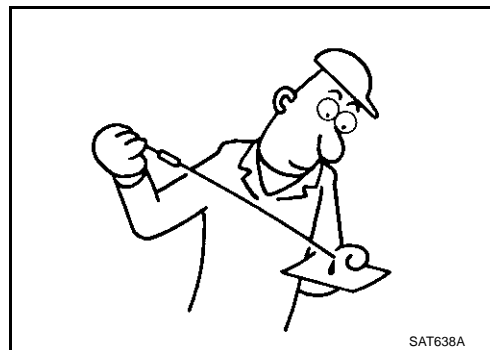


4. CHECK LINE PRESSURE

Check line pressure at the engine stall point. Refer to [AT-57, "LINE PRESSURE TEST"](#) .

OK or NG

- OK >> GO TO 7.
- NG - 1 >> Line pressure high. GO TO 5.
- NG - 2 >> Line pressure low. GO TO 6.

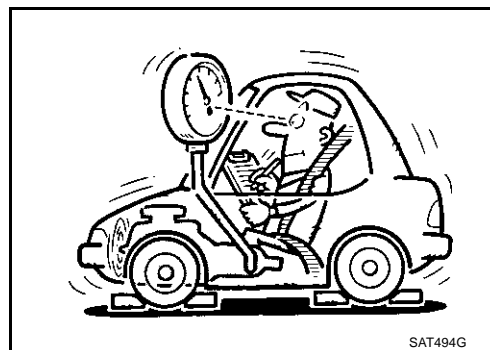

5. DETECT MALFUNCTIONING ITEM

1. Check control valve with TCM. Refer to [AT-224, "Control Valve with TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Disassemble A/T. Refer to [AT-263, "DISASSEMBLY"](#) .
3. Check the following items:
 - Oil pump assembly. Refer to [AT-278, "Oil Pump"](#) .

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.

6. DETECT MALFUNCTIONING ITEM

1. Check control valve with TCM. Refer to [AT-224, "Control Valve with TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Disassemble A/T. Refer to [AT-263, "DISASSEMBLY"](#) .
3. Check the following items:
 - Oil pump assembly. Refer to [AT-278, "Oil Pump"](#) .
 - Power train system. Refer to [AT-263, "DISASSEMBLY"](#) .
 - Transmission case. Refer to [AT-263, "DISASSEMBLY"](#) .

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.


TROUBLE DIAGNOSIS FOR SYMPTOMS

7. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-224, "Control Valve with TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-56, "Fluid condition check"](#) .

OK or NG

- OK >> GO TO 8.
- NG >> GO TO 11.

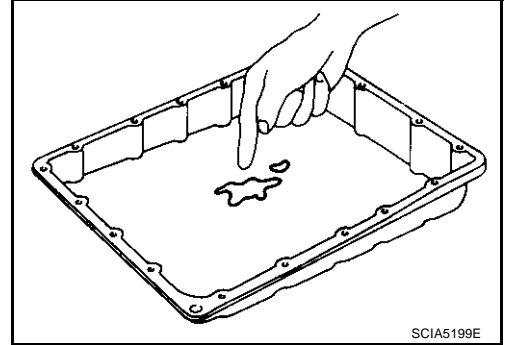

8. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-67, "Symptom Chart"](#) (Symptom No.11).

OK or NG

- OK >> GO TO 9.
- NG >> Repair or replace damaged parts.

9. CHECK SYMPTOM

Check again. Refer to [AT-62, "Cruise Test - Part 1"](#) , [AT-64, "Cruise Test - Part 2"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 10.

10. CHECK TCM

1. Check TCM input/output signals. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

11. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-67, "Symptom Chart"](#) (Symptom No.11).

OK or NG

- OK >> GO TO 9.
- NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

ACS008QY

A/T Does Not Shift: D3 → D4

SYMPTOM:

- The vehicle does not shift-up from the D3 to D4 gear at the specified speed.
- The vehicle does not shift-up from the D3 to D4 gear unless A/T is warmed up.

DIAGNOSTIC PROCEDURE

1. CONFIRM THE SYMPTOM

Check if vehicle creeps forward in "D" position and vehicle can be started from D1.

OK or NG

OK >> GO TO 2.

NG >> Refer to [AT-183, "Vehicle Does Not Creep Forward In "D" Position"](#) , [AT-185, "Vehicle Cannot Be Started From D1"](#) .

2. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [AT-93, "SELF-DIAGNOSTIC PROCEDURE \(WITH CONSULT-II\)"](#) .

Do the self-diagnostic results indicate ATF pressure switch 1, ATF pressure switch 3, front brake solenoid valve, input clutch solenoid valve, accelerator pedal position sensor, vehicle speed sensor A/T (revolution sensor) and vehicle speed sensor MTR?

YES >> Check the malfunctioning system. Refer to [AT-164, "DTC P1841 ATF PRESSURE SWITCH 1"](#) , [AT-166, "DTC P1843 ATF PRESSURE SWITCH 3"](#) , [AT-141, "DTC P1752 INPUT CLUTCH SOLENOID VALVE"](#) , [AT-145, "DTC P1757 FRONT BRAKE SOLENOID VALVE"](#) , [AT-128, "DTC P1705 THROTTLE POSITION SENSOR"](#) , [AT-112, "DTC P0720 VEHICLE SPEED SENSOR A/T \(REVOLUTION SENSOR\)"](#) , [AT-134, "DTC P1721 VEHICLE SPEED SENSOR MTR"](#) .

NO >> GO TO 3.


3. CHECK A/T FLUID LEVEL

Check A/T fluid level. Refer to [AT-12, "Checking ATF"](#) .

OK or NG

OK >> GO TO 4.

NG >> Refill ATF.

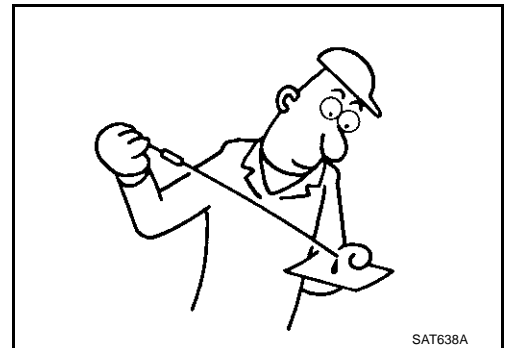

SAT638A

4. CHECK LINE PRESSURE


Check line pressure at the engine stall point. Refer to [AT-57, "LINE PRESSURE TEST"](#) .

OK or NG

OK >> GO TO 7.

NG - 1 >> Line pressure high. GO TO 5.

NG - 2 >> Line pressure low. GO TO 6.

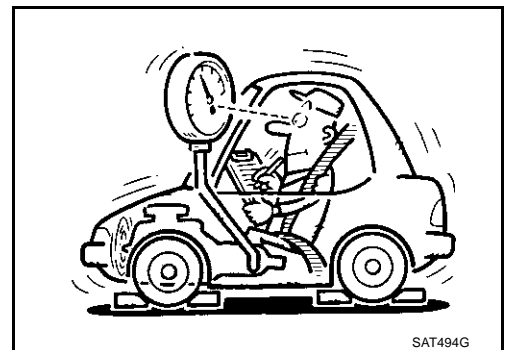

SAT494G

TROUBLE DIAGNOSIS FOR SYMPTOMS

5. DETECT MALFUNCTIONING ITEM

1. Check control valve with TCM. Refer to [AT-224, "Control Valve with TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Disassemble A/T. Refer to [AT-263, "DISASSEMBLY"](#) .
3. Check the following items:
 - Oil pump assembly. Refer to [AT-278, "Oil Pump"](#) .

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.

6. DETECT MALFUNCTIONING ITEM

1. Check control valve with TCM. Refer to [AT-224, "Control Valve with TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Disassemble A/T. Refer to [AT-263, "DISASSEMBLY"](#) .
3. Check the following items:
 - Oil pump assembly. Refer to [AT-278, "Oil Pump"](#) .
 - Power train system. Refer to [AT-263, "DISASSEMBLY"](#) .
 - Transmission case. Refer to [AT-263, "DISASSEMBLY"](#) .

OK or NG


- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.

7. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-224, "Control Valve with TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-56, "Fluid condition check"](#) .

OK or NG

- OK >> GO TO 8.
- NG >> GO TO 11.

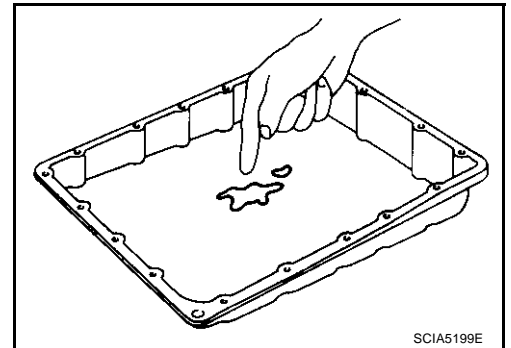

8. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-67, "Symptom Chart"](#) (Symptom No.12).

OK or NG

- OK >> GO TO 9.
- NG >> Repair or replace damaged parts.

9. CHECK SYMPTOM

Check again. Refer to [AT-62, "Cruise Test - Part 1"](#) , [AT-64, "Cruise Test - Part 2"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 10.

TROUBLE DIAGNOSIS FOR SYMPTOMS

10. CHECK TCM

1. Check TCM input/output signals. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
NG >> Repair or replace damaged parts.

11. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-67, "Symptom Chart"](#) (Symptom No.12).

OK or NG

- OK >> GO TO 9.
NG >> Repair or replace damaged parts.

A/T Does Not Shift: D4 → D5 SYMPTOM:

ACS008QZ

- The vehicle does not shift-up from the D4 to D5 gear at the specified speed.
- The vehicle does not shift-up from the D4 to D5 gear unless A/T is warmed up.

DIAGNOSTIC PROCEDURE

1. CONFIRM THE SYMPTOM

Check if vehicle creeps forward in "D" position and vehicle can be started from D1.

OK or NG

- OK >> GO TO 2.
NG >> Refer to [AT-183, "Vehicle Does Not Creep Forward In "D" Position"](#) , [AT-185, "Vehicle Cannot Be Started From D1"](#) .

2. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [AT-93, "SELF-DIAGNOSTIC PROCEDURE \(WITH CONSULT-II\)"](#) .

Do the self-diagnostic results indicate ATF pressure switch 1, ATF pressure switch 5, front brake solenoid valve, direct clutch solenoid valve, accelerator pedal position sensor, turbine revolution sensor, vehicle speed sensor A/T (revolution sensor) and vehicle speed sensor MTR?

- YES >> Check the malfunctioning system. Refer to [AT-164, "DTC P1841 ATF PRESSURE SWITCH 1"](#) , [AT-168, "DTC P1845 ATF PRESSURE SWITCH 5"](#) , [AT-145, "DTC P1757 FRONT BRAKE SOLENOID VALVE"](#) , [AT-149, "DTC P1762 DIRECT CLUTCH SOLENOID VALVE"](#) , [AT-128, "DTC P1705 THROTTLE POSITION SENSOR"](#) , [AT-132, "DTC P1716 TURBINE REVOLUTION SENSOR"](#) , [AT-112, "DTC P0720 VEHICLE SPEED SENSOR A/T \(REVOLUTION SENSOR\)"](#) , [AT-134, "DTC P1721 VEHICLE SPEED SENSOR MTR"](#) .
- NO >> GO TO 3.


TROUBLE DIAGNOSIS FOR SYMPTOMS

3. CHECK A/T FLUID LEVEL

Check A/T fluid level. Refer to [AT-12, "Checking ATF"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> Refill ATF.

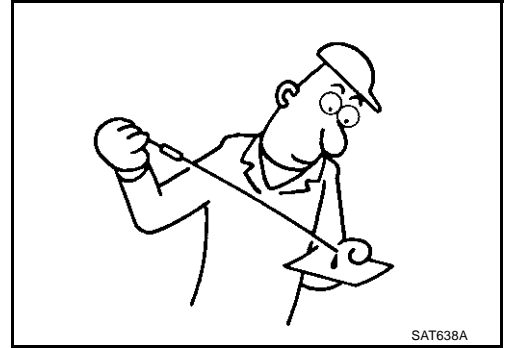


4. CHECK LINE PRESSURE

Check line pressure at the engine stall point. Refer to [AT-57, "LINE PRESSURE TEST"](#) .

OK or NG

- OK >> GO TO 7.
- NG - 1 >> Line pressure high. GO TO 5.
- NG - 2 >> Line pressure low. GO TO 6.

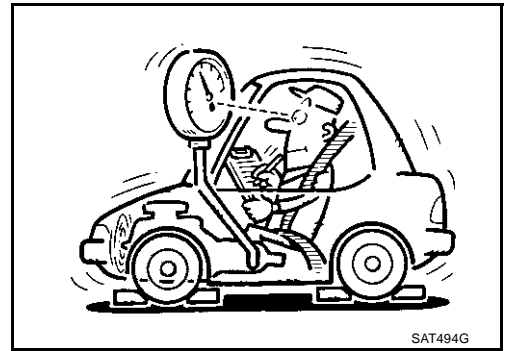

5. DETECT MALFUNCTIONING ITEM

1. Check control valve with TCM. Refer to [AT-224, "Control Valve with TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Disassemble A/T. Refer to [AT-263, "DISASSEMBLY"](#) .
3. Check the following items:
 - Oil pump assembly. Refer to [AT-278, "Oil Pump"](#) .

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.

6. DETECT MALFUNCTIONING ITEM

1. Check control valve with TCM. Refer to [AT-224, "Control Valve with TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Disassemble A/T. Refer to [AT-263, "DISASSEMBLY"](#) .
3. Check the following items:
 - Oil pump assembly. Refer to [AT-278, "Oil Pump"](#) .
 - Power train system. Refer to [AT-263, "DISASSEMBLY"](#) .
 - Transmission case. Refer to [AT-263, "DISASSEMBLY"](#) .

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.


TROUBLE DIAGNOSIS FOR SYMPTOMS

7. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-224, "Control Valve with TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-56, "Fluid condition check"](#) .

OK or NG

- OK >> GO TO 8.
- NG >> GO TO 11.

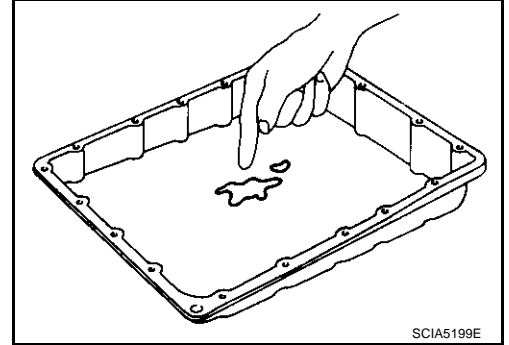

8. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-67, "Symptom Chart"](#) (Symptom No.13).

OK or NG

- OK >> GO TO 9.
- NG >> Repair or replace damaged parts.

9. CHECK SYMPTOM

Check again. Refer to [AT-62, "Cruise Test - Part 1"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 10.

10. CHECK TCM

1. Check TCM input/output signals. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

11. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-67, "Symptom Chart"](#) (Symptom No.13).

OK or NG

- OK >> GO TO 9.
- NG >> Repair or replace damaged parts.

A
B
AT
D
E
F
G
H
I
J
K
L
M

TROUBLE DIAGNOSIS FOR SYMPTOMS

ACS008R0

A/T Does Not Perform Lock-up

SYMPTOM:

A/T does not perform lock-up at the specified speed.

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [AT-93, "SELF-DIAGNOSTIC PROCEDURE \(WITH CONSULT-II\)"](#) , [AT-103, "TCM SELF-DIAGNOSTIC PROCEDURE \(NO TOOLS\)"](#) .

Do the self-diagnostic results indicate torque converter clutch solenoid valve, engine speed signal, turbine revolution sensor, accelerator pedal position sensor, CAN communication?

YES >> Check the malfunctioning system. Refer to [AT-116, "DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE"](#) , [AT-114, "DTC P0725 ENGINE SPEED SIGNAL"](#) , [AT-132, "DTC P1716 TURBINE REVOLUTION SENSOR"](#) , [AT-128, "DTC P1705 THROTTLE POSITION SENSOR"](#) , [AT-105, "DTC U1000 CAN COMMUNICATION LINE"](#) .

NO >> GO TO 2.


2. CHECK A/T FLUID LEVEL

Check A/T fluid level. Refer to [AT-12, "Checking ATF"](#) .

OK or NG

OK >> GO TO 3.

NG >> Refill ATF.

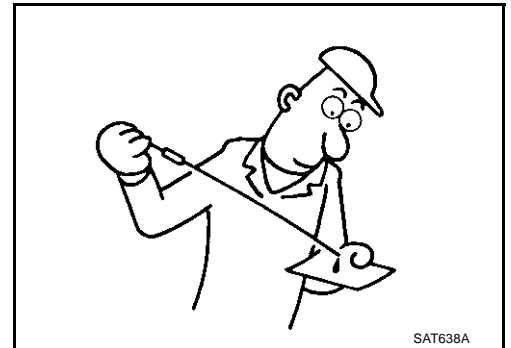

3. CHECK LINE PRESSURE


Check line pressure at the engine stall point. Refer to [AT-57, "LINE PRESSURE TEST"](#) .

OK or NG

OK >> GO TO 6.

NG - 1 >> Line pressure high. GO TO 4.

NG - 2 >> Line pressure low. GO TO 5.

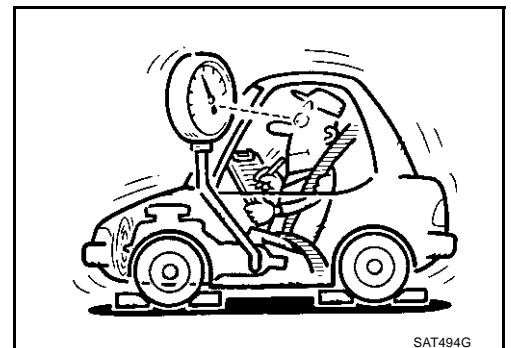

4. DETECT MALFUNCTIONING ITEM

1. Check control valve with TCM. Refer to [AT-224, "Control Valve with TCM and A/T Fluid Temperature Sensor 2"](#) .

2. Disassemble A/T. Refer to [AT-263, "DISASSEMBLY"](#) .

3. Check the following items:

- Oil pump assembly. Refer to [AT-278, "Oil Pump"](#) .

OK or NG

OK >> GO TO 6.

NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

5. DETECT MALFUNCTIONING ITEM

1. Check control valve with TCM. Refer to [AT-224, "Control Valve with TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Disassemble A/T. Refer to [AT-263, "DISASSEMBLY"](#) .
3. Check the following items:
 - Oil pump assembly. Refer to [AT-278, "Oil Pump"](#) .
 - Power train system. Refer to [AT-263, "DISASSEMBLY"](#) .
 - Transmission case. Refer to [AT-263, "DISASSEMBLY"](#) .

OK or NG


- OK >> GO TO 6.
NG >> Repair or replace damaged parts.

6. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-224, "Control Valve with TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-56, "Fluid condition check"](#) .

OK or NG

- OK >> GO TO 7.
NG >> GO TO 10.

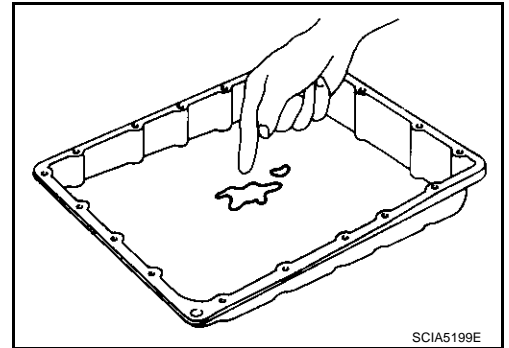

7. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-67, "Symptom Chart"](#) (Symptom No.24).

OK or NG

- OK >> GO TO 8.
NG >> Repair or replace damaged parts.

8. CHECK SYMPTOM

Check again. Refer to [AT-62, "Cruise Test - Part 1"](#) .

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 9.

9. CHECK TCM

1. Check TCM input/output signals. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

10. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-67, "Symptom Chart"](#) (Symptom No.24).

OK or NG

- OK >> GO TO 8.
NG >> Repair or replace damaged parts.

A/T Does Not Hold Lock-up Condition SYMPTOM:

ACS008R1

The lock-up condition cannot be maintained for more than 30 seconds.

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [AT-93, "SELF-DIAGNOSTIC PROCEDURE \(WITH CONSULT-II\)"](#) , [AT-103, "TCM SELF-DIAGNOSTIC PROCEDURE \(NO TOOLS\)"](#) .

Do the self-diagnostic results indicate torque converter clutch solenoid valve, engine speed signal, turbine revolution sensor, CAN communication?


- YES >> Check the malfunctioning system. Refer to [AT-116, "DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE"](#) , [AT-114, "DTC P0725 ENGINE SPEED SIGNAL"](#) , [AT-132, "DTC P1716 TURBINE REVOLUTION SENSOR"](#) , [AT-105, "DTC U1000 CAN COMMUNICATION LINE"](#) .
NO >> GO TO 2.

2. CHECK A/T FLUID LEVEL

Check A/T fluid level. Refer to [AT-12, "Checking ATF"](#) .

OK or NG

- OK >> GO TO 3.
NG >> Refill ATF.

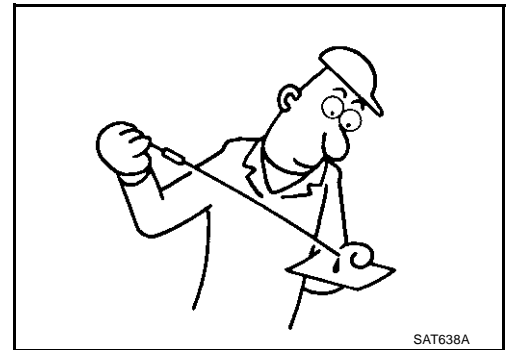


3. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-224, "Control Valve with TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-56, "Fluid condition check"](#) .

OK or NG

- OK >> GO TO 4.
NG >> GO TO 7.

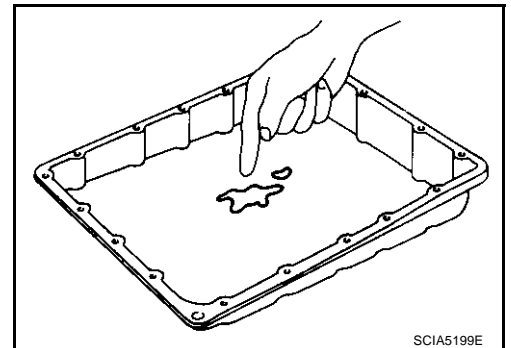

TROUBLE DIAGNOSIS FOR SYMPTOMS

4. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-67, "Symptom Chart"](#) (Symptom No.25).

OK or NG

- OK >> GO TO 5.
NG >> Repair or replace damaged parts.

5. CHECK SYMPTOM

Check again. Refer to [AT-62, "Cruise Test - Part 1"](#) .

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 6.

6. CHECK TCM

1. Check TCM input/output signals. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
NG >> Repair or replace damaged parts.

7. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-67, "Symptom Chart"](#) (Symptom No.25).

OK or NG

- OK >> GO TO 5.
NG >> Repair or replace damaged parts.

Lock-up Is Not Released

ACS008R2

SYMPTOM:

The lock-up condition cannot be cancelled even after releasing the accelerator pedal.

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [AT-93, "SELF-DIAGNOSTIC PROCEDURE \(WITH CONSULT-II\)"](#) , [AT-103, "TCM SELF-DIAGNOSTIC PROCEDURE \(NO TOOLS\)"](#) .

Do the self-diagnostic results indicate torque converter clutch solenoid valve, engine speed signal, turbine revolution sensor, CAN communication?

- YES >> Check the malfunctioning system. Refer to [AT-116, "DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE"](#) , [AT-114, "DTC P0725 ENGINE SPEED SIGNAL"](#) , [AT-132, "DTC P1716 TURBINE REVOLUTION SENSOR"](#) , [AT-105, "DTC U1000 CAN COMMUNICATION LINE"](#) .
- NO >> GO TO 2.

2. CHECK SYMPTOM

Check again. Refer to [AT-62, "Cruise Test - Part 1"](#) .

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 3.

TROUBLE DIAGNOSIS FOR SYMPTOMS

3. CHECK TCM

1. Check TCM input/output signals. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
NG >> Repair or replace damaged parts.

Engine Speed Does Not Return To Idle SYMPTOM:

ACS008R3

When a shift-down is performed, the engine speed does not smoothly return to the idling speed.


DIAGNOSTIC PROCEDURE

1. CHECK A/T FLUID LEVEL

Check A/T fluid level. Refer to [AT-12, "Checking ATF"](#) .

OK or NG

- OK >> GO TO 2.
NG >> Refill ATF.

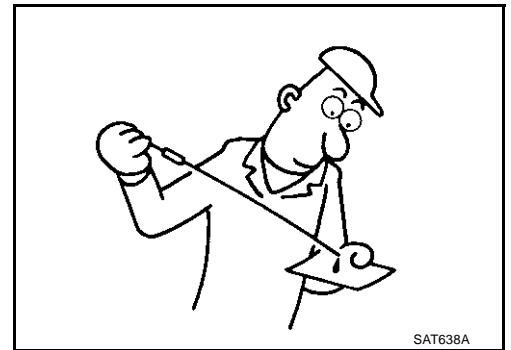

2. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [AT-93, "SELF-DIAGNOSTIC PROCEDURE \(WITH CONSULT-II\)"](#) .

Do the self-diagnostic results indicate front brake solenoid valve, direct clutch solenoid valve, ATF pressure switch 1, ATF pressure switch 5, accelerator pedal position sensor, vehicle speed sensor A/T (revolution sensor) and vehicle speed sensor MTR?

- YES >> Check the malfunctioning system. Refer to [AT-145, "DTC P1757 FRONT BRAKE SOLENOID VALVE"](#) , [AT-149, "DTC P1762 DIRECT CLUTCH SOLENOID VALVE"](#) , [AT-164, "DTC P1841 ATF PRESSURE SWITCH 1"](#) , [AT-168, "DTC P1845 ATF PRESSURE SWITCH 5"](#) , [AT-128, "DTC P1705 THROTTLE POSITION SENSOR"](#) , [AT-112, "DTC P0720 VEHICLE SPEED SENSOR A/T \(REVOLUTION SENSOR\)"](#) , [AT-134, "DTC P1721 VEHICLE SPEED SENSOR MTR"](#) .


NO >> GO TO 3.

3. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-224, "Control Valve with TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-56, "Fluid condition check"](#) .

OK or NG

- OK >> GO TO 4.
NG >> GO TO 7.

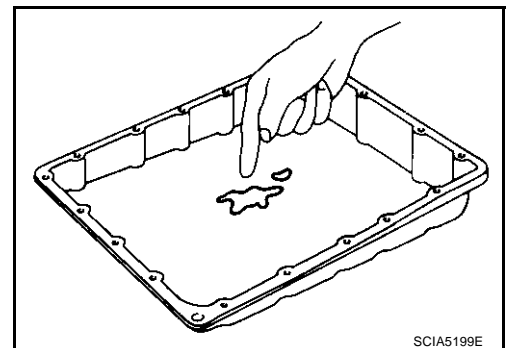

TROUBLE DIAGNOSIS FOR SYMPTOMS

4. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-67, "Symptom Chart"](#) (Symptom No.72).

OK or NG

- OK >> GO TO 5.
- NG >> Repair or replace damaged parts.

5. CHECK SYMPTOM

Check again. Refer to [AT-62, "Cruise Test - Part 1"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 6.

6. CHECK TCM

1. Check TCM input/output signals. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

7. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-67, "Symptom Chart"](#) (Symptom No.72).

OK or NG

- OK >> GO TO 5.
- NG >> Repair or replace damaged parts.

Cannot Be Changed to Manual Mode

SYMPTOM:

Does not change to manual mode when manual shift gate is used.

DIAGNOSTIC PROCEDURE

1. MANUAL MODE SWITCH

Check manual mode switch. Refer to [AT-161, "DTC P1815 MANUAL MODE SWITCH"](#) .

OK or NG

- OK >> GO TO 2.
- NG >> Repair or replace damaged parts.

2. CHECK SELF-DIAGNOSIS RESULTS

Perform self-diagnosis. Refer to [AT-93, "SELF-DIAGNOSTIC PROCEDURE \(WITH CONSULT-II\)"](#) .

Do the self-diagnosis results indicate turbine revolution sensor?

- YES >> Check the malfunctioning system. Refer to [AT-132, "DTC P1716 TURBINE REVOLUTION SENSOR"](#) .
- NO >> **INSPECTION END**

TROUBLE DIAGNOSIS FOR SYMPTOMS

ACS008R5

A/T Does Not Shift: 5th gear → 4th gear

SYMPTOM:

When shifted from M5 to M4 position in manual mode, does not downshift from 5th to 4th gear.

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [AT-93, "SELF-DIAGNOSTIC PROCEDURE \(WITH CONSULT-II\)"](#) .

Do the self-diagnostic results indicate PNP switch, ATF pressure switch 1?

YES >> Check the malfunctioning system. Refer to [AT-110, "DTC P0705 PARK/NEUTRAL POSITION SWITCH"](#) , [AT-164, "DTC P1841 ATF PRESSURE SWITCH 1"](#) .

NO >> GO TO 2.


2. CHECK A/T FLUID LEVEL

Check A/T fluid level. Refer to [AT-12, "Checking ATF"](#) .

OK or NG

OK >> GO TO 3.

NG >> Refill ATF.

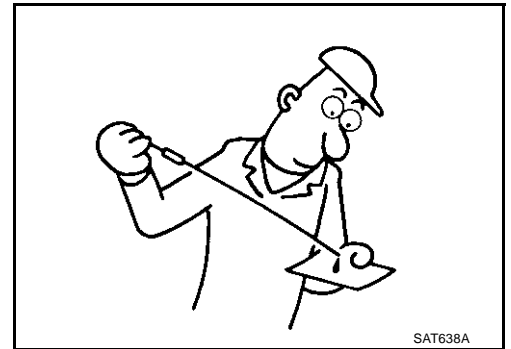

3. CHECK CONTROL LINKAGE


Check control linkage.

- Refer to [AT-215, "Checking of A/T Position"](#) .

OK or NG

OK >> GO TO 4.

NG >> Adjust control linkage. Refer to [AT-215, "Adjustment of A/T Position"](#) .

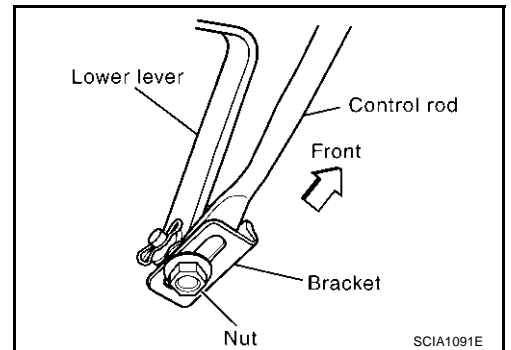

4. MANUAL MODE SWITCH

Check manual mode switch. Refer to [AT-161, "DTC P1815 MANUAL MODE SWITCH"](#) .

OK or NG

OK >> GO TO 5.

NG >> Repair or replace damaged parts.


TROUBLE DIAGNOSIS FOR SYMPTOMS

5. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-224, "Control Valve with TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-56, "Fluid condition check"](#) .

OK or NG

- OK >> GO TO 6.
- NG >> GO TO 9.

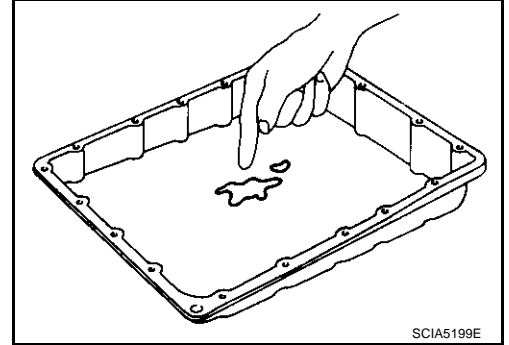

6. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-67, "Symptom Chart"](#) (Symptom No.14).

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.

7. CHECK SYMPTOM

Check again. Refer to [AT-65, "Cruise Test - Part 3"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 8.

8. CHECK TCM

1. Check TCM input/output signals. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

9. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-67, "Symptom Chart"](#) (Symptom No.14).

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

ACS008R6

A/T Does Not Shift: 4th gear → 3rd gear

SYMPTOM:

When shifted from M4 to M3 position in manual mode, does not downshift from 4th to 3rd gear.

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [AT-93, "SELF-DIAGNOSTIC PROCEDURE \(WITH CONSULT-II\)"](#) .

Do the self-diagnostic results indicate PNP switch, ATF pressure switch 1, ATF pressure switch 3?

YES >> Check the malfunctioning system. Refer to [AT-110, "DTC P0705 PARK/NEUTRAL POSITION SWITCH"](#) , [AT-164, "DTC P1841 ATF PRESSURE SWITCH 1"](#) , [AT-166, "DTC P1843 ATF PRES-SURE SWITCH 3"](#) .

NO >> GO TO 2.

2. CHECK A/T FLUID LEVEL

Check A/T fluid level. Refer to [AT-12, "Checking ATF"](#) .

OK or NG

OK >> GO TO 3.

NG >> Refill ATF.



3. CHECK CONTROL LINKAGE


Check control linkage.

- Refer to [AT-215, "Checking of A/T Position"](#) .

OK or NG

OK >> GO TO 4.

NG >> Adjust control linkage. Refer to [AT-215, "Adjustment of A/T Position"](#) .

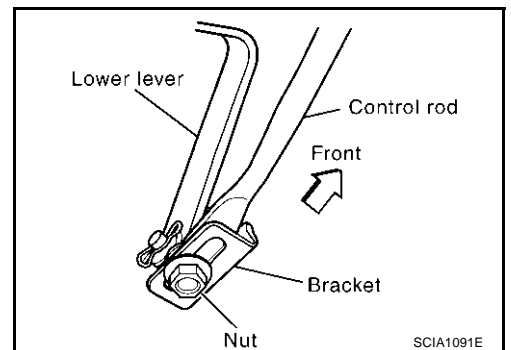

4. MANUAL MODE SWITCH

Check manual mode switch. Refer to [AT-161, "DTC P1815 MANUAL MODE SWITCH"](#) .

OK or NG

OK >> GO TO 5.

NG >> Repair or replace damaged parts.


TROUBLE DIAGNOSIS FOR SYMPTOMS

5. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-224, "Control Valve with TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-56, "Fluid condition check"](#) .

OK or NG

- OK >> GO TO 6.
- NG >> GO TO 9.

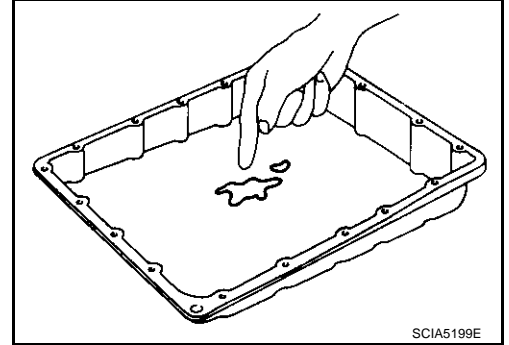

6. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-67, "Symptom Chart"](#) (Symptom No.15).

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.

7. CHECK SYMPTOM

Check again. Refer to [AT-65, "Cruise Test - Part 3"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 8.

8. CHECK TCM

1. Check TCM input/output signals. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

9. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-67, "Symptom Chart"](#) (Symptom No.15).

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

ACS00BR7

A/T Does Not Shift: 3rd gear → 2nd gear

SYMPTOM:

When shifted from M3 to M2 position in manual mode, does not downshift from 3rd to 2nd gear.

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [AT-93, "SELF-DIAGNOSTIC PROCEDURE \(WITH CONSULT-II\)"](#) .

Do the self-diagnostic results indicate PNP switch, ATF pressure switch 6?

YES >> Check the malfunctioning system. Refer to [AT-110, "DTC P0705 PARK/NEUTRAL POSITION SWITCH"](#) , [AT-170, "DTC P1846 ATF PRESSURE SWITCH 6"](#) .

NO >> GO TO 2.


2. CHECK A/T FLUID LEVEL

Check A/T fluid level. Refer to [AT-12, "Checking ATF"](#) .

OK or NG

OK >> GO TO 3.

NG >> Refill ATF.

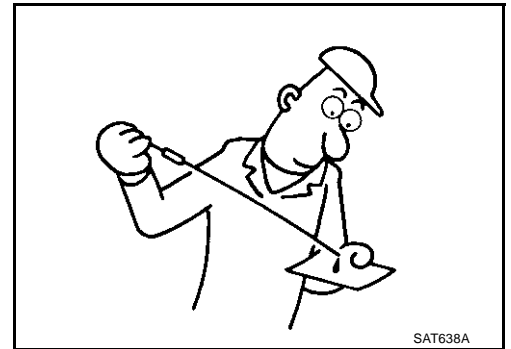

3. CHECK CONTROL LINKAGE


Check control linkage.

- Refer to [AT-215, "Checking of A/T Position"](#) .

OK or NG

OK >> GO TO 4.

NG >> Adjust control linkage. Refer to [AT-215, "Adjustment of A/T Position"](#) .

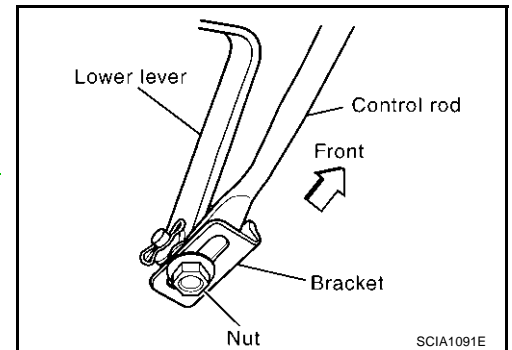

4. MANUAL MODE SWITCH

Check manual mode switch. Refer to [AT-161, "DTC P1815 MANUAL MODE SWITCH"](#) .

OK or NG

OK >> GO TO 5.

NG >> Repair or replace damaged parts.


TROUBLE DIAGNOSIS FOR SYMPTOMS

5. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-224, "Control Valve with TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-56, "Fluid condition check"](#) .

OK or NG

- OK >> GO TO 6.
- NG >> GO TO 9.

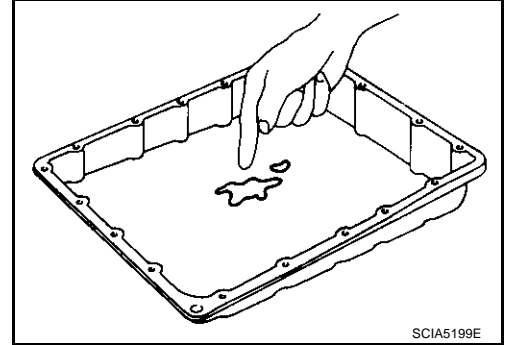

6. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-67, "Symptom Chart"](#) (Symptom No.16).

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.

7. CHECK SYMPTOM

Check again. Refer to [AT-65, "Cruise Test - Part 3"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 8.

8. CHECK TCM

1. Check TCM input/output signals. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

9. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-67, "Symptom Chart"](#) (Symptom No.16).

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

ACS008R8

A/T Does Not Shift: 2nd gear → 1st gear

SYMPTOM:

When shifted from M2 to M1 position in manual mode, does not downshift from 2nd to 1st gear.

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [AT-93, "SELF-DIAGNOSTIC PROCEDURE \(WITH CONSULT-II\)"](#) .

Do the self-diagnostic results indicate PNP switch, ATF pressure switch 5?

YES >> Check the malfunctioning system. Refer to [AT-110, "DTC P0705 PARK/NEUTRAL POSITION SWITCH"](#) , [AT-168, "DTC P1845 ATF PRESSURE SWITCH 5"](#) .

NO >> GO TO 2.


2. CHECK A/T FLUID LEVEL

Check A/T fluid level. Refer to [AT-12, "Checking ATF"](#) .

OK or NG

OK >> GO TO 3.

NG >> Refill ATF.

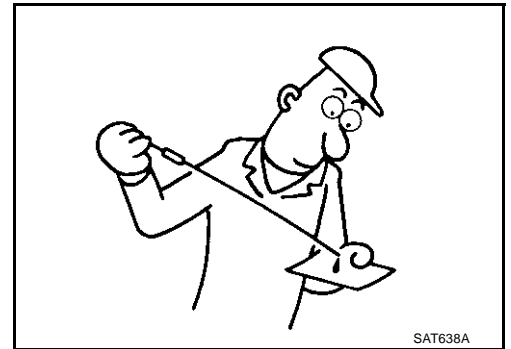

3. CHECK CONTROL LINKAGE


Check control linkage.

- Refer to [AT-215, "Checking of A/T Position"](#) .

OK or NG

OK >> GO TO 4.

NG >> Adjust control linkage. Refer to [AT-215, "Adjustment of A/T Position"](#) .

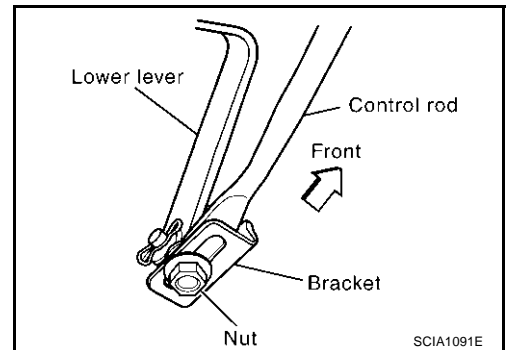

4. MANUAL MODE SWITCH

Check manual mode switch. Refer to [AT-161, "DTC P1815 MANUAL MODE SWITCH"](#) .

OK or NG

OK >> GO TO 5.

NG >> Repair or replace damaged parts.


TROUBLE DIAGNOSIS FOR SYMPTOMS

5. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-224, "Control Valve with TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-56, "Fluid condition check"](#) .

OK or NG

- OK >> GO TO 6.
- NG >> GO TO 9.

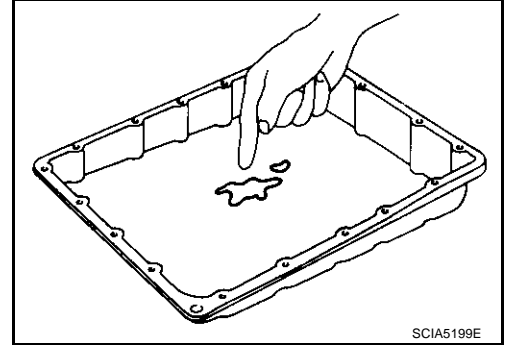

6. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-67, "Symptom Chart"](#) (Symptom No.17).

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.

7. CHECK SYMPTOM

Check again. Refer to [AT-65, "Cruise Test - Part 3"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 8.

8. CHECK TCM

1. Check TCM input/output signals. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

9. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-67, "Symptom Chart"](#) (Symptom No.17).

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

ACS008R9

Vehicle Does Not Decelerate By Engine Brake

SYMPTOM:

No engine brake is applied when the gear is shifted from the 2nd to 1st gear.

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [AT-93, "SELF-DIAGNOSTIC PROCEDURE \(WITH CONSULT-II\)"](#) .

Do the self-diagnostic results indicate PNP switch, ATF pressure switch 5?

YES >> Check the malfunctioning system. Refer to [AT-110, "DTC P0705 PARK/NEUTRAL POSITION SWITCH"](#) , [AT-168, "DTC P1845 ATF PRESSURE SWITCH 5"](#) .

NO >> GO TO 2.


2. CHECK A/T FLUID LEVEL

Check A/T fluid level. Refer to [AT-12, "Checking ATF"](#) .

OK or NG

OK >> GO TO 3.

NG >> Refill ATF.

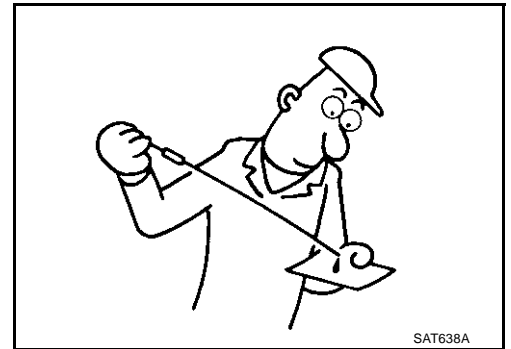

3. CHECK CONTROL LINKAGE


Check control linkage.

- Refer to [AT-215, "Checking of A/T Position"](#) .

OK or NG

OK >> GO TO 4.

NG >> Adjust control linkage. Refer to [AT-215, "Adjustment of A/T Position"](#) .

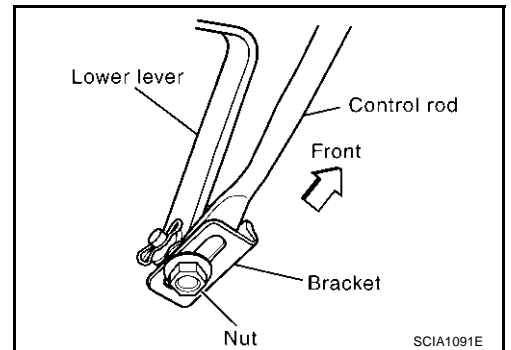

4. MANUAL MODE SWITCH

Check manual mode switch. Refer to [AT-161, "DTC P1815 MANUAL MODE SWITCH"](#) .

OK or NG

OK >> GO TO 5.

NG >> Repair or replace damaged parts.


TROUBLE DIAGNOSIS FOR SYMPTOMS

5. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-224, "Control Valve with TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-56, "Fluid condition check"](#) .

OK or NG

- OK >> GO TO 6.
- NG >> GO TO 9.

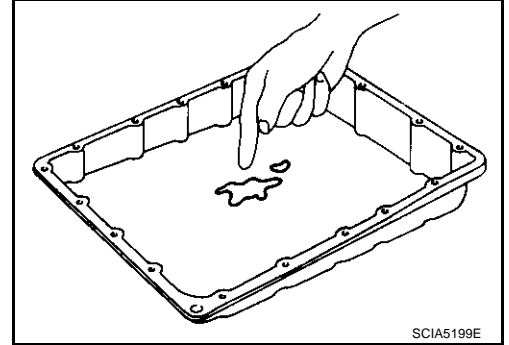

6. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-67, "Symptom Chart"](#) (Symptom No.58).

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.

7. CHECK SYMPTOM

Check again. Refer to [AT-65, "Cruise Test - Part 3"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 8.

8. CHECK TCM

1. Check TCM input/output signals. Refer to [AT-91, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

9. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-67, "Symptom Chart"](#) (Symptom No.58).

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.


SHIFT CONTROL SYSTEM

SHIFT CONTROL SYSTEM

PFP:34901

Control Device Removal and Installation

ACS00006

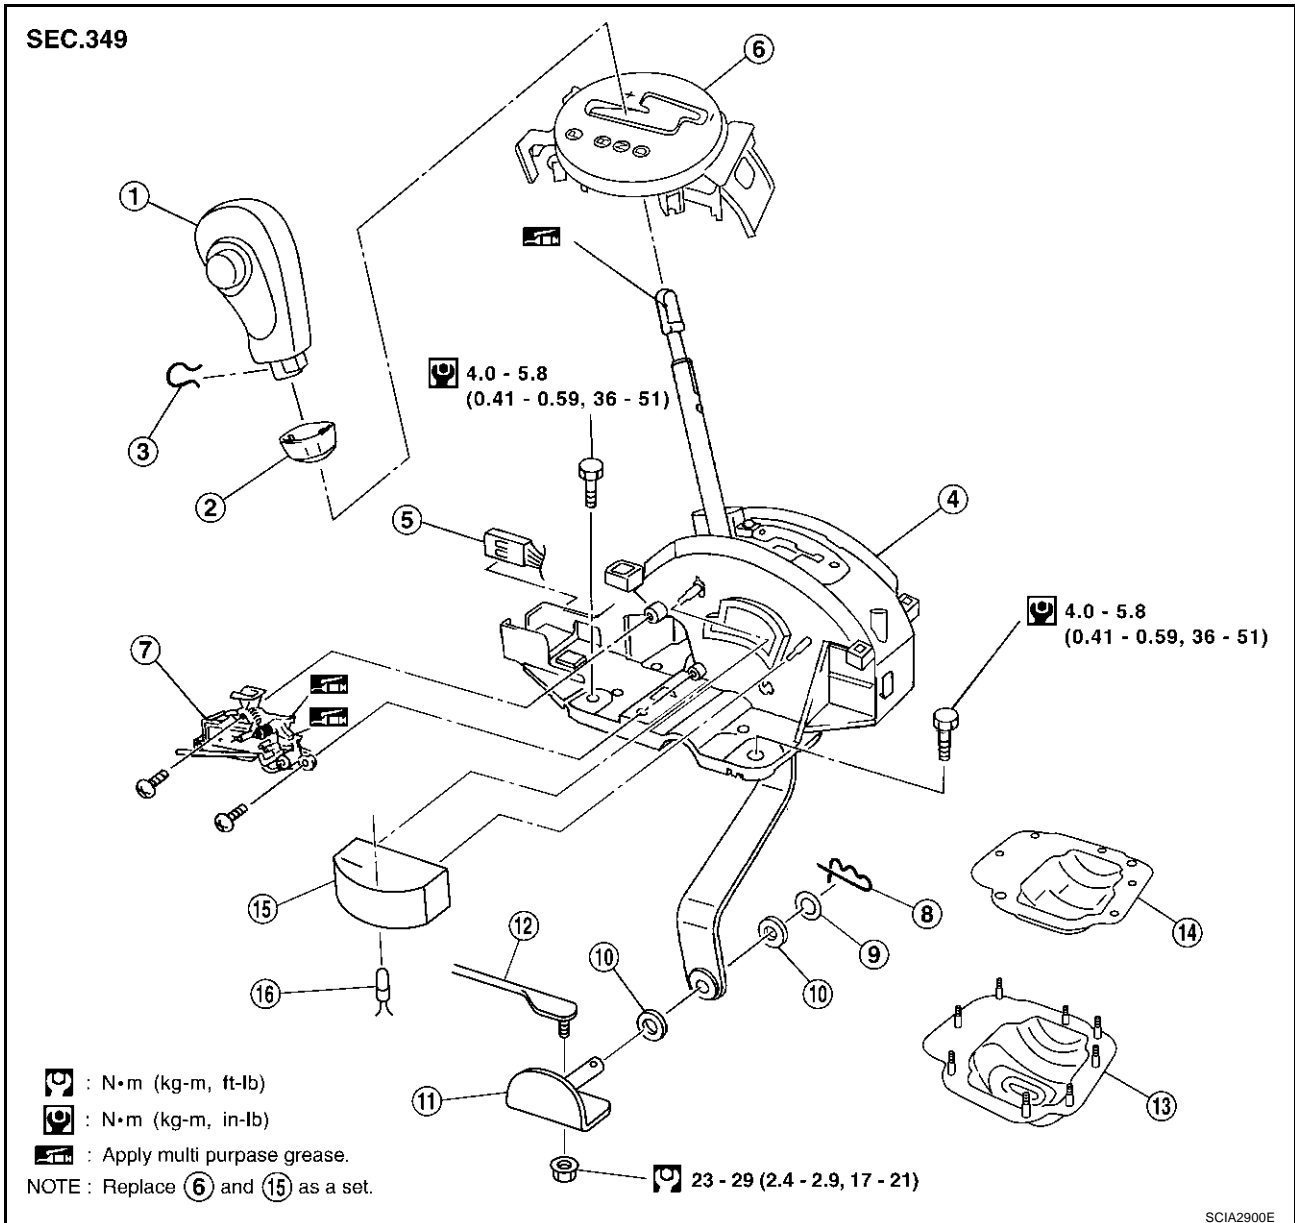

- | | | |
|--|---------------------------------|-----------------------------|
| 1. Selector lever knob | 2. Knob cover | 3. Lock pin |
| 4. Control device assembly | 5. A/T device harness connector | 6. Position indicator plate |
| 7. Shift lock solenoid and park position switch assembly | 8. Snap pin | 9. Conical washer |
| 10. Plain washer | 11. Bracket | 12. Control rod |
| 13. Dust cover | 14. Dust cover plate | 15. Bulb case |
| 16. Position lamp | | |


SHIFT CONTROL SYSTEM

REMOVAL

1. Disconnect lower lever of control device and control rod.
2. Remove knob cover below selector lever downward.
3. Pull lock pin out of selector lever knob.
4. Remove selector lever knob.
5. Remove console finisher (A/T ring) and console finisher.
 - Refer to [IP-10, "INSTRUMENT PANEL ASSEMBLY"](#) .
6. Remove center console.
 - Refer to [IP-10, "INSTRUMENT PANEL ASSEMBLY"](#) .
7. Remove key interlock cable from control device.
 - Refer to [AT-221, "KEY INTERLOCK CABLE"](#) .
8. Disconnect A/T device harness connector.
9. Remove control device assembly.

CAUTION:

Do not impact, or damage propeller shaft tube.

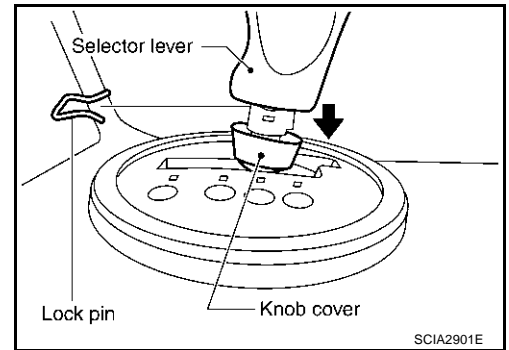


INSTALLATION


Install in reverse order of removal. Be careful of the following:

- After installation is completed, adjust and check A/T position.

Adjustment of A/T Position


1. Loosen nut of control rod.
2. Place PNP switch and selector lever in "P" position.
3. While pressing lower lever toward rear of vehicle (in P-position direction), tighten nut to specified torque.

: **23 - 29 N·m (2.4 - 2.9 kg·m, 17 - 21 ft·lb)**

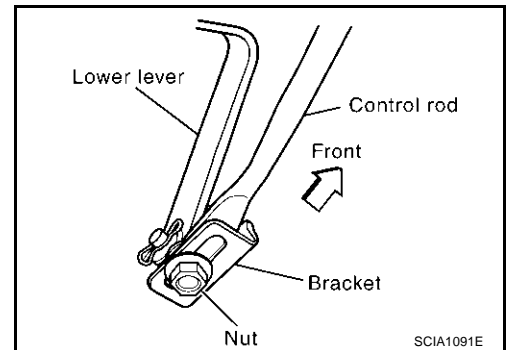

Checking of A/T Position

1. Place selector lever in "P" position, and turn ignition switch ON (engine stop).
2. Check that selector lever can be shifted to other than "P" position when brake pedal is depressed. Also check that selector lever can be shifted from "P" position only when brake pedal is depressed.
3. Move the selector lever and check for excessive effort, sticking, noise or rattle.
4. Confirm the selector lever stops at each position with the feel of engagement when it is moved through all the positions. Check whether or not the actual position the selector lever is in matches the position shown by the shift position indicator and the transmission body.
5. The method of operating the lever to individual positions correctly should be as shown in the figure.
6. When selector button is pressed in "P", "R", or "N" position without applying forward/backward force to selector lever, check button operation for sticking.
7. Confirm the back-up lamps illuminate only when lever is placed in the "R" position. Confirm the back-up lamps does not illuminate when selector lever is pushed against "R" position in the "P" or "N" position.
8. Confirm the engine can only be started with the selector lever in the "P" and "N" positions. (With selector lever in the "P" position, engine can be started even when selector lever is moved forward and backward.)
9. Check that transmission is locked completely in "P" position.

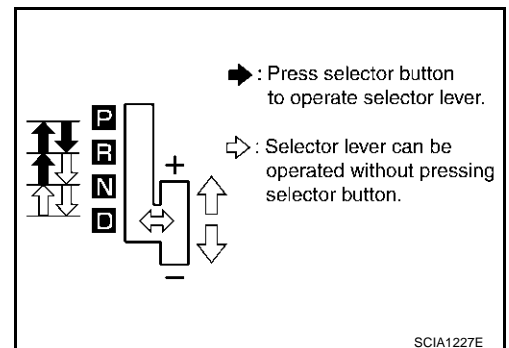

SHIFT CONTROL SYSTEM

10. When selector lever is set to manual shift gate, check that manual mode is displayed on combination meter.
Shift selector lever to “+” and “-” sides, and check that set shift position changes.

A/T SHIFT LOCK SYSTEM

A/T SHIFT LOCK SYSTEM

PFP:34950


Description

ACS00009

- The mechanical key interlock mechanism also operates as a shift lock:
With the ignition switch turned to ON, the selector lever cannot be shifted from "P" (parking) to any other position unless the brake pedal is depressed.
With the key removed, the selector lever cannot be shifted from "P" to any other position.
The key cannot be removed unless the selector lever is placed in "P".
- The shift lock and key interlock mechanisms are controlled by the ON-OFF operation of the shift lock solenoid and by the operation of the rotator and slider located inside the key cylinder.

Shift Lock System Electrical Parts Location

ACS0000A


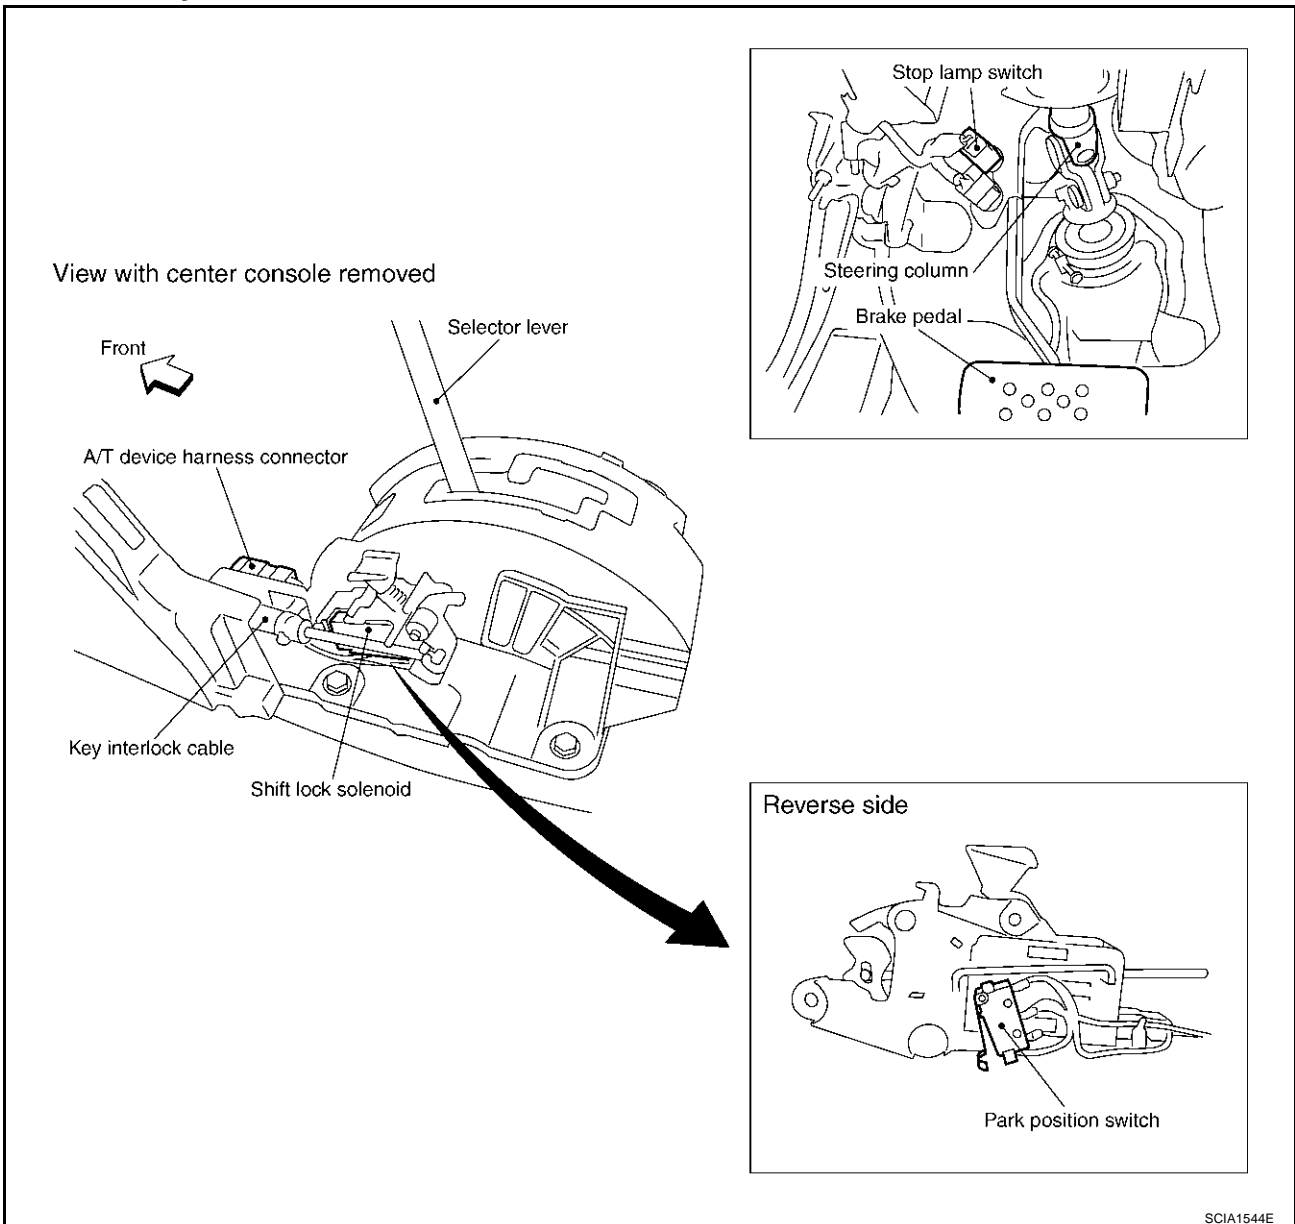


A/T SHIFT LOCK SYSTEM

ACS001LG

Wiring Diagram — AT — SHIFT

AT-SHIFT-01

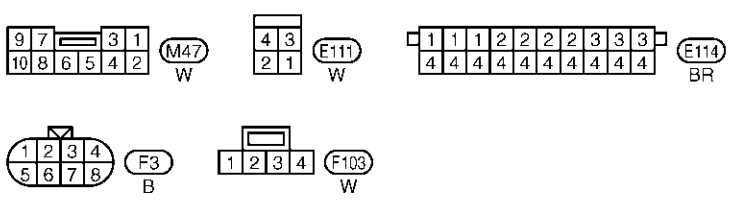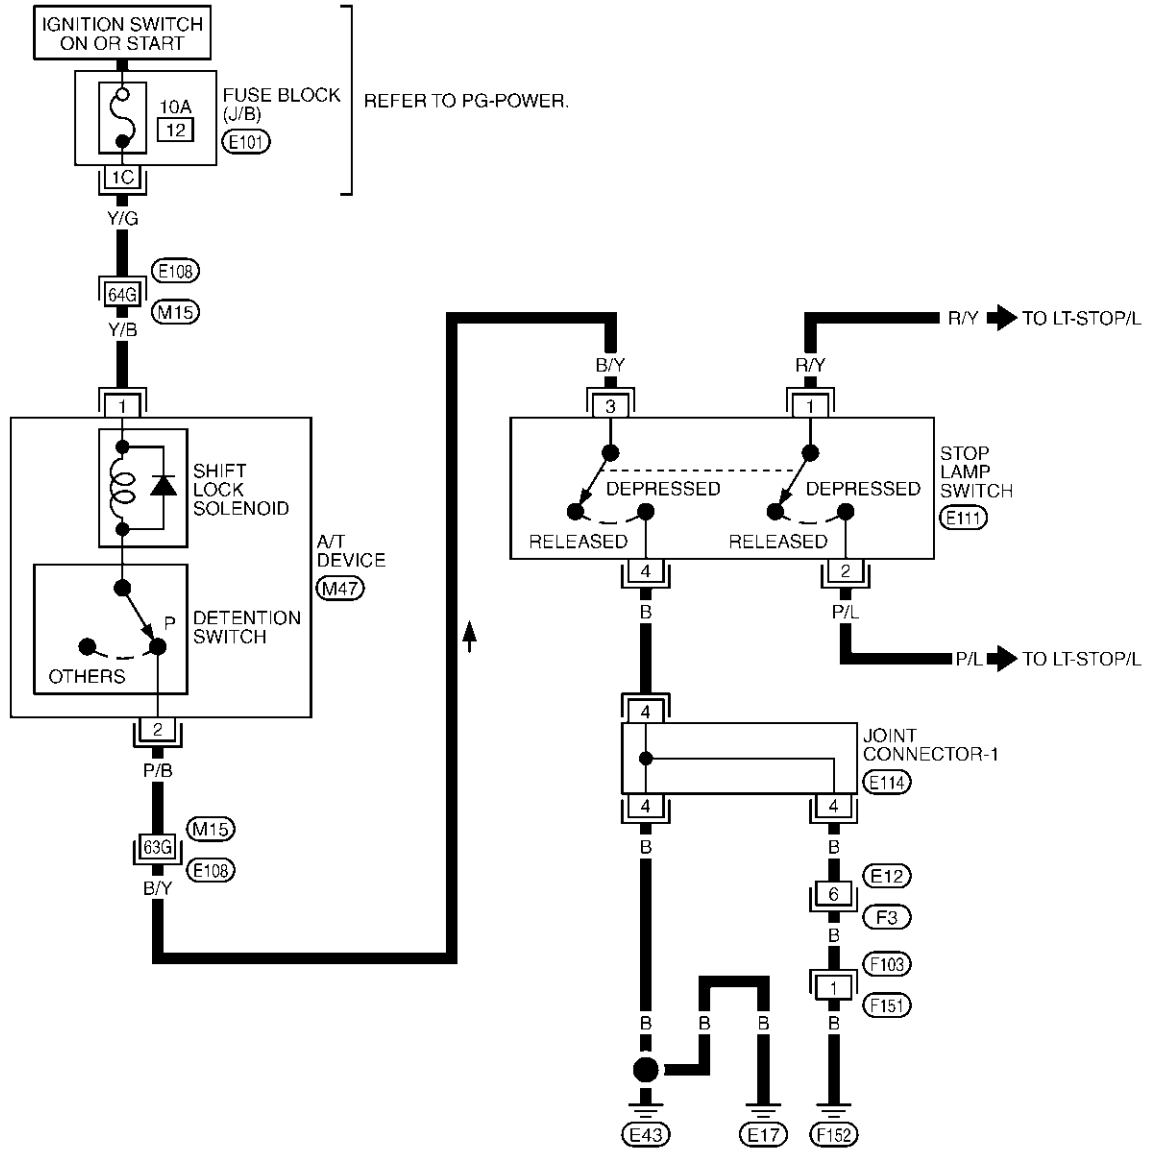

REFER TO THE FOLLOWING.
 (E108) -SUPER MULTIPLE JUNCTION (SMJ)
 (E101) -FUSE BLOCK-JUNCTION BOX (J/B)

TCWT0095E

A/T SHIFT LOCK SYSTEM

ACS003RQ

Diagnostic Procedure

SYMPTOM 1:

- Selector lever cannot be moved from “P” position with key in ON position and brake pedal applied.
- Selector lever can be moved from “P” position with key in ON position and brake pedal released.
- Selector lever can be moved from “P” position when key is removed from key cylinder.

SYMPTOM 2:

- Ignition key cannot be removed when selector lever is set to “P” position.
- Ignition key can be removed when selector lever is set to any position except “P”.

1. CHECK KEY INTERLOCK CABLE

Check the key interlock cable for damage.

OK or NG

- OK >> GO TO 2.
- NG >> Replace key interlock cable. Refer to [AT-221, "KEY INTERLOCK CABLE"](#) .

2. CHECK SELECTOR LEVER POSITION

Check the selector lever position for damage.

OK or NG

- OK >> GO TO 3.
- NG >> Check selector lever. Refer to [AT-215, "Adjustment of A/T Position"](#) .

3. CHECK SHIFT LOCK SOLENOID AND PARK POSITION SWITCH

1. Connect A/T device harness connector.
2. Turn ignition switch “ON”.
3. Selector lever is set in “P” position.
4. Check operation.

Condition	Brake pedal	Operation
When ignition switch is turned to “ON” position and selector lever is set in “P” position.	Depressed	Yes
	Released	No

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 4.


4. CHECK POWER SOURCE

1. Turn ignition switch “ON”. (Do not start engine.)
2. Check voltage between A/T device harness connector M47 terminal 1 (Y/B) and ground.

Voltage: Battery voltage

OK or NG


- OK >> GO TO 5.
- NG >> GO TO 6.

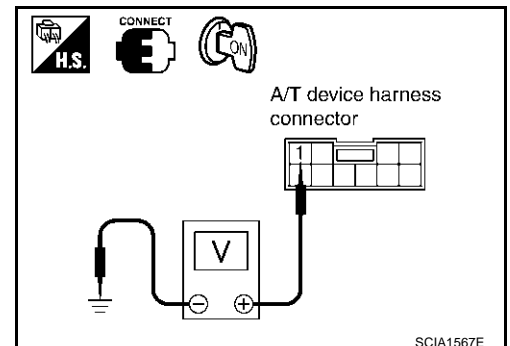

A/T SHIFT LOCK SYSTEM

5. CHECK STOP LAMP SWITCH

Check continuity between stop lamp switch harness connector E111 terminals 3 (B/Y) and 4 (B).

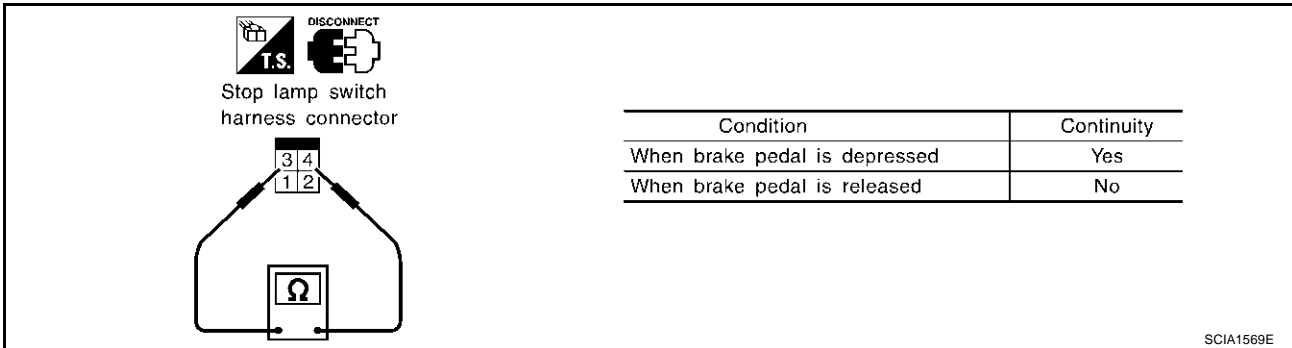

Check stop lamp switch after adjusting brake pedal — refer to [BR-6, "BRAKE PEDAL"](#) .

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.

6. DETECT MALFUNCTIONING ITEM

Check the following items. If any items are damaged, repair or replace damaged parts.

1. Harness for short or open between ignition switch and A/T device harness terminal 1
2. 10A fuse [No.12, located in the fuse block (J/B)]
3. Ignition switch (Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) .)

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

7. CHECK GROUND CIRCUIT

1. Turn ignition switch "OFF".
2. Disconnect stop lamp switch harness connector.
3. Check continuity between stop lamp switch harness connector E111 terminal 4 (B) and ground.


Continuity should exist.

If OK, check harness for short to ground and short to power.

4. Connect stop lamp switch harness connector.

OK or NG

- OK >> GO TO 8.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

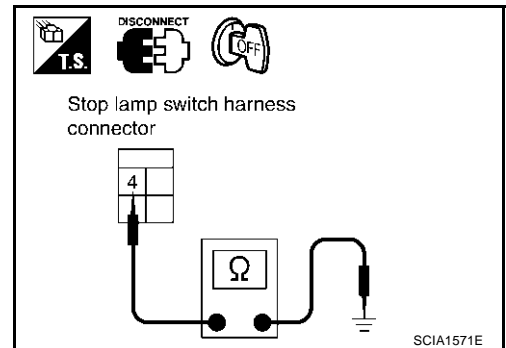

8. DETECT MALFUNCTIONING ITEM

Check the following items. If any items are damaged, repair or replace damaged parts.

- Harness for short or open between A/T device harness connector M47 terminal 2 (P/B) and stop lamp switch harness connector E111 terminal 3 (B/Y).

OK or NG

- OK >> Replace shift lock solenoid or park position switch (detention switch).
- NG >> Repair or replace damaged parts.


KEY INTERLOCK CABLE

KEY INTERLOCK CABLE

PFP:34908

Components

ACS0000D

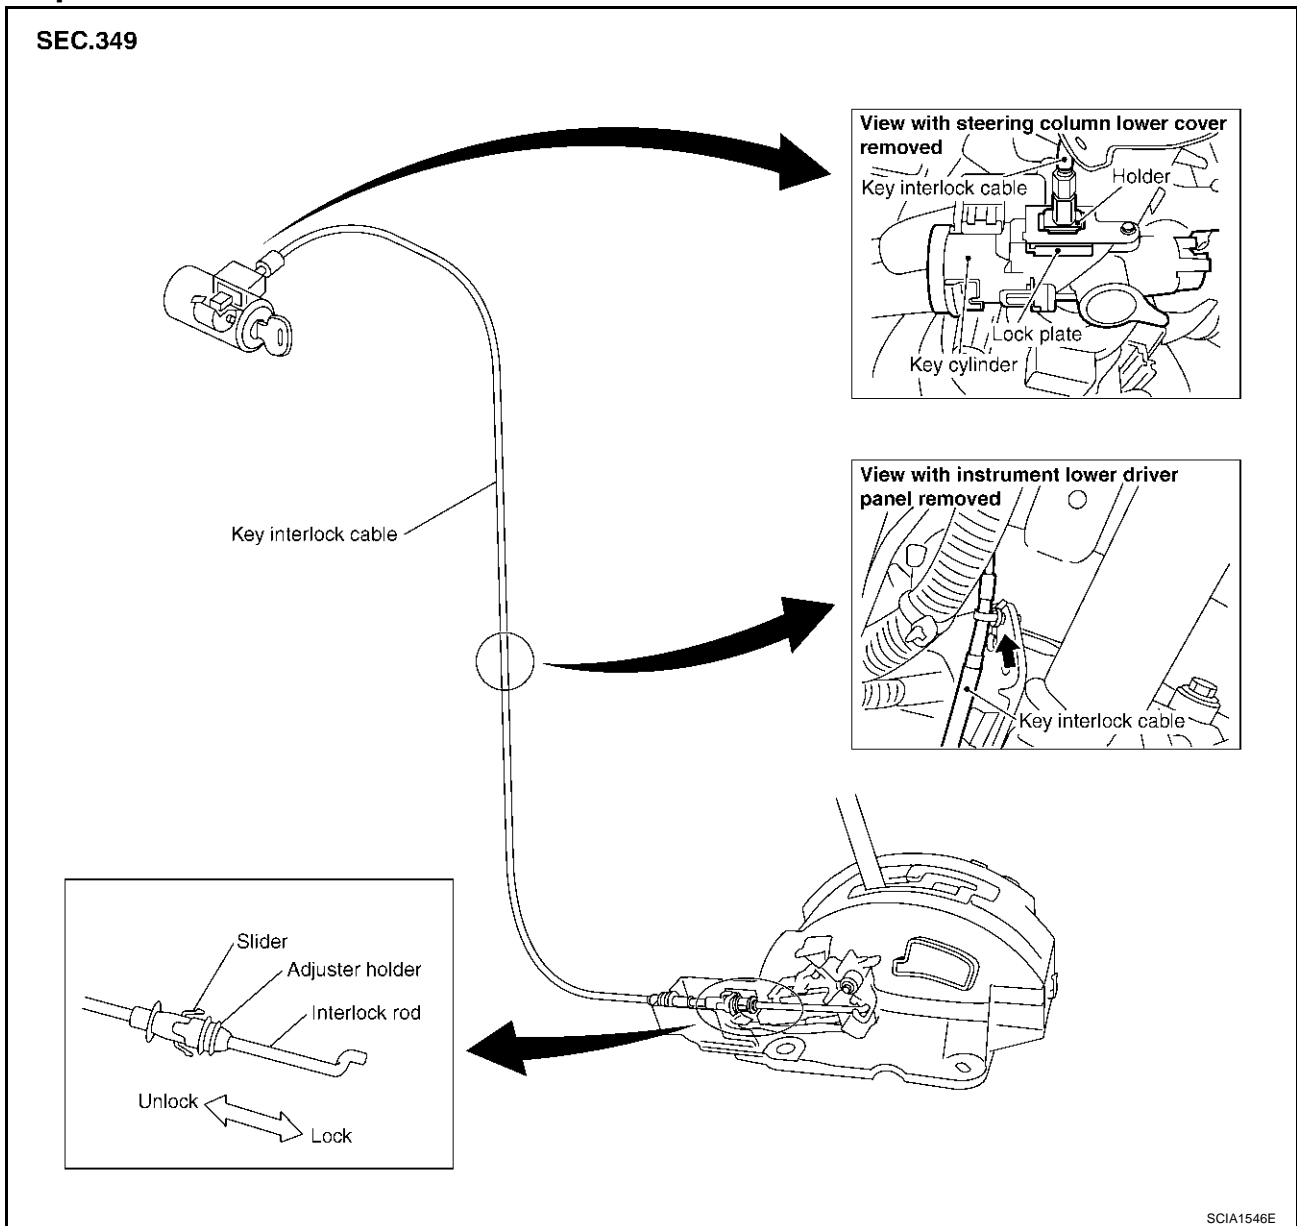

CAUTION:

- Install key interlock cable in such a way that it will not be damaged by sharp bends, twists or interference with adjacent parts.
- After installing key interlock cable to control device, make sure that casing cap and bracket are firmly secured in their positions. If casing cap be removed with an external load of less than 39.2 N (4.0 kg, 8.8 lb), replace key interlock cable with new one.


A
B
AT
D
E
F
G
H
I
J
K
L
M

KEY INTERLOCK CABLE


Removal

ACS0000E

1. Unlock slider by squeezing lock tabs on slider from adjuster holder.
2. Remove casing cap from bracket of control device and remove interlock rod from cable.

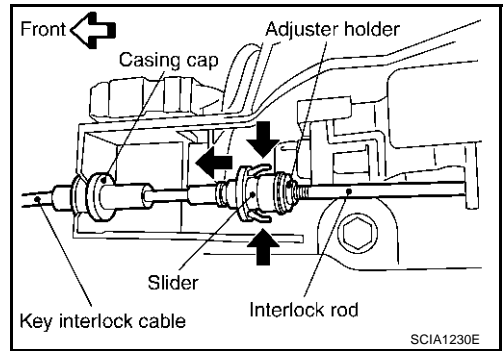

3. Remove lock plate from key cylinder.
4. Remove holder from key cylinder and remove key interlock cable.

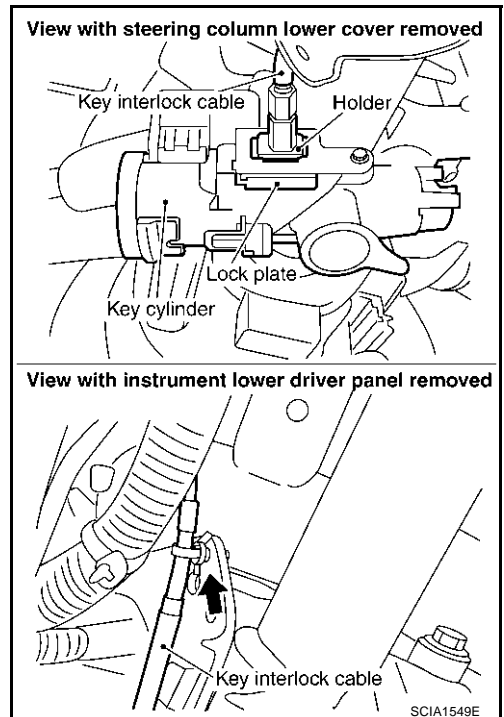

KEY INTERLOCK CABLE

ACS000OF


Installation

1. Set holder of key interlock cable to key cylinder and install lock plate.

CAUTION:

Do not reuse the lock plate


2. Clamp cable and fix to control cable with band.
3. Turn ignition key to lock position.
4. Set selector lever to P position.

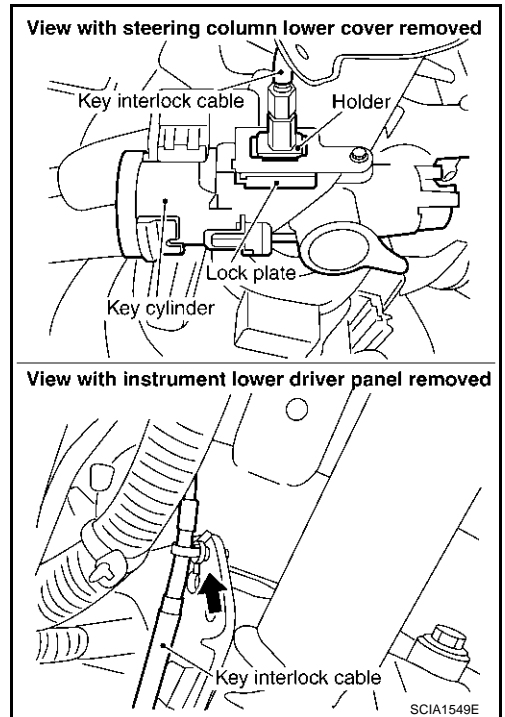

5. Insert interlock rod into adjuster holder.
6. Install casing cap to bracket.
7. Move slider in order to fix adjuster holder to interlock rod.

CAUTION:

Do not touch any parts except slider. Do not add any force to slider except force toward slider.

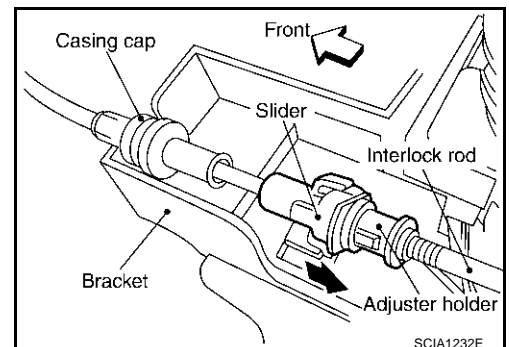


A
B
AT
D
E
F
G
H
I
J
K
L
M

ON-VEHICLE SERVICE

PFP:00000

Control Valve with TCM and A/T Fluid Temperature Sensor 2 COMPONENTS

ACS008RA

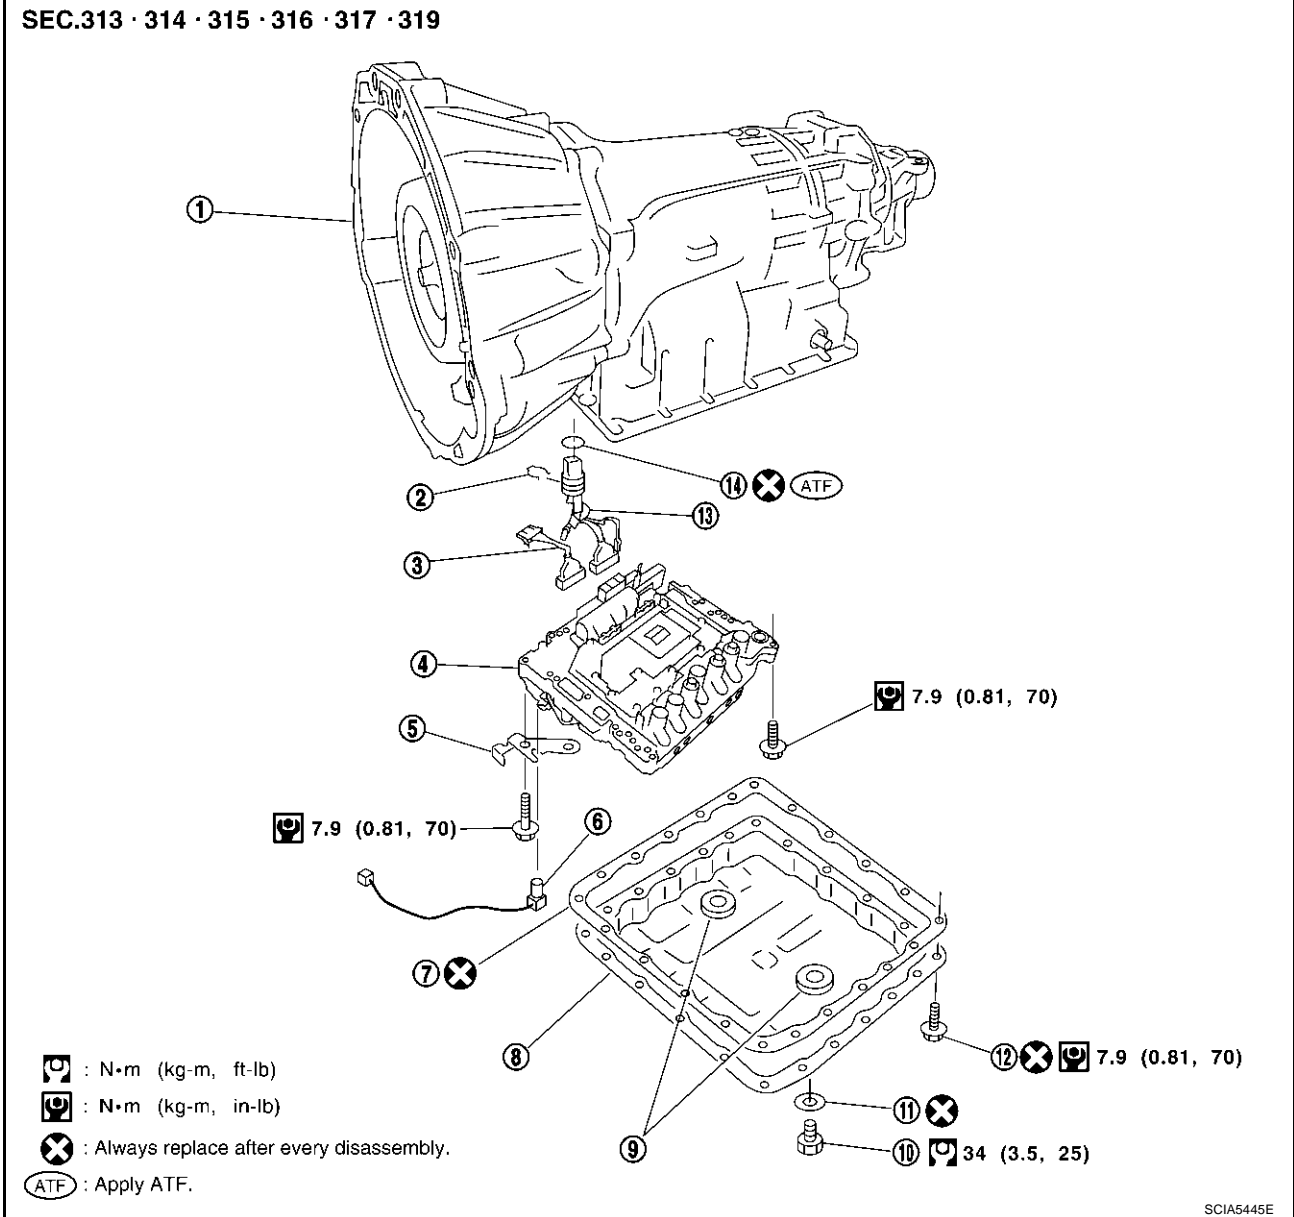

SCIA5445E

- | | | |
|----------------------------|-----------------------|-----------------------------------|
| 1. Transmission | 2. Snap ring | 3. Sub-harness |
| 4. Control valve with TCM | 5. Bracket | 6. A/T fluid temperature sensor 2 |
| 7. Oil pan gasket | 8. Oil pan | 9. Magnet |
| 10. Drain plug | 11. Drain plug gasket | 12. Oil pan mounting bolt |
| 13. Terminal cord assembly | 14. O-ring | |


CONTROL VALVE WITH TCM ASSEMBLY REMOVAL AND INSTALLATION

Removal

1. Disconnect negative battery terminal.
2. Disconnect heated oxygen sensor 2 harness connector.
3. Drain ATF through drain plug.
4. Disconnect A/T assembly harness connector.


ON-VEHICLE SERVICE

5. Remove snap ring from A/T assembly harness connector.

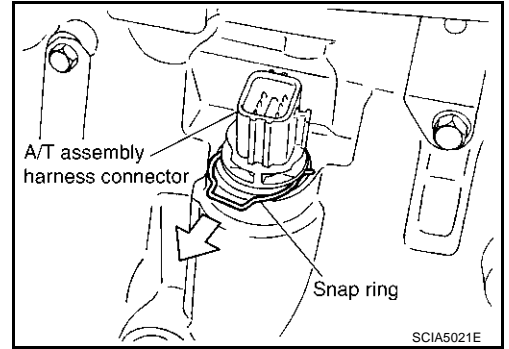


6. Push A/T assembly harness connector.

CAUTION:
Be careful not to damage connector.

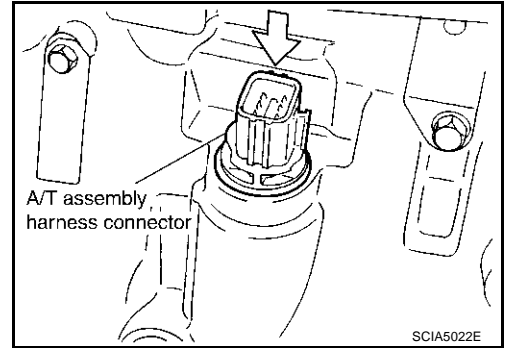


7. Remove oil pan and oil pan gasket.

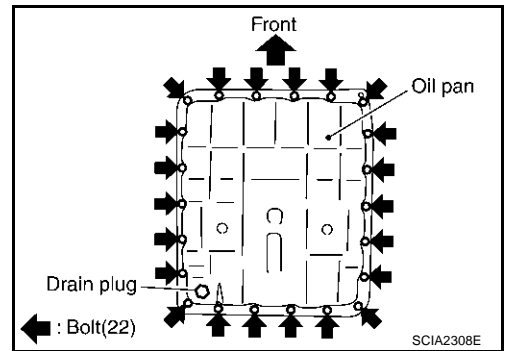


8. Check foreign materials in oil pan to help determine causes of malfunction. If the fluid is very dark, smells burned, or contains foreign particles, the frictional material (clutches, band) may need replacement. A tacky film that will not wipe clean indicates varnish build up. Varnish can cause valves, servo, and clutches to stick and can inhibit pump pressure.

● If frictional material is detected, replace radiator after repair of A/T. Refer to [CO-11. "RADIATOR"](#).

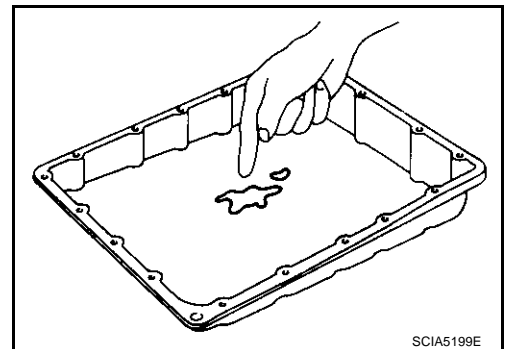

9. Remove magnets from oil pan.

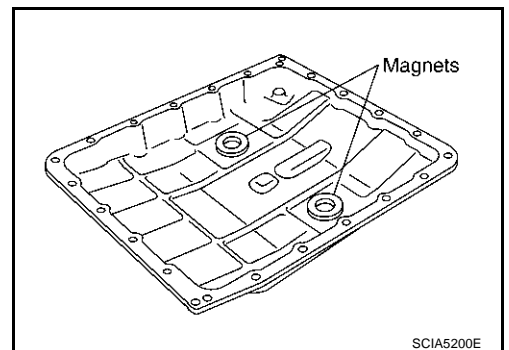


A
B
AT
D
E
F
G
H
I
J
K
L
M


ON-VEHICLE SERVICE

10. Disconnect A/T fluid temperature sensor 2 connector.

CAUTION:
Be careful not to damage connector.

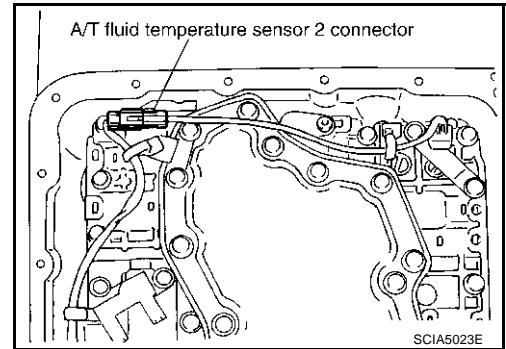


11. Straighten terminal clips to free terminal cord assembly and A/T fluid temperature sensor 2 harness.

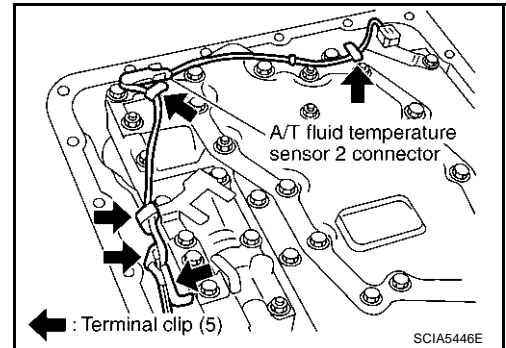


12. Disconnect revolution sensor connector.

CAUTION:
Be careful not to damage connector.

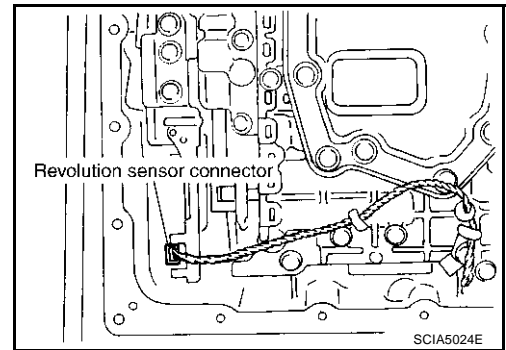


13. Straighten terminal clips to free revolution sensor harness.

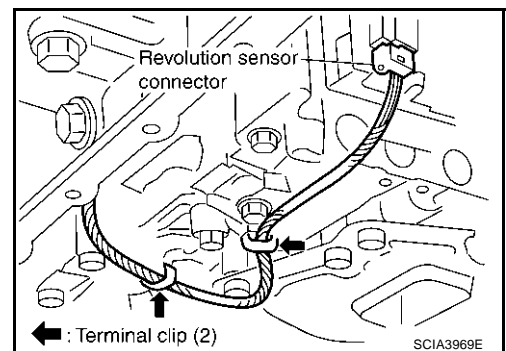

14. Remove bolts A, B and C from control valve with TCM.

Bolt symbol	Length mm (in)	Number of bolts
A	42 (1.65)	5
B	55 (2.17)	6
C	40 (1.57)	1

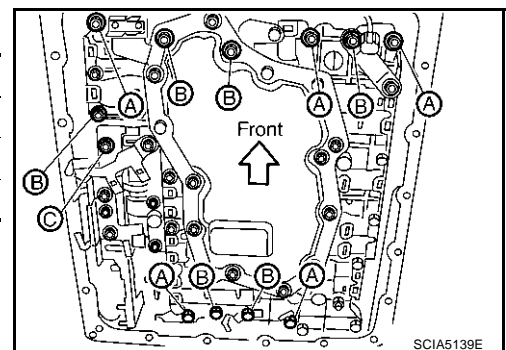


ON-VEHICLE SERVICE


15. Remove control valve with TCM from transmission case.

CAUTION:


When removing, be careful with the manual valve notch and manual plate height. Remove it vertically.

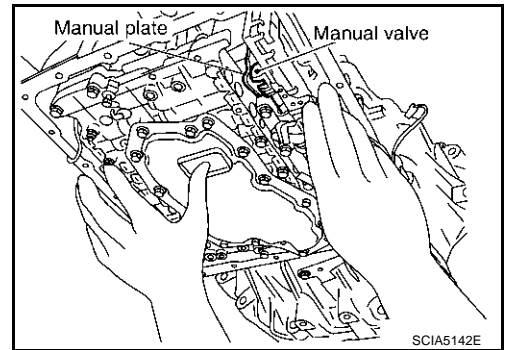


16. Remove A/T fluid temperature sensor 2 with bracket from control valve with TCM.

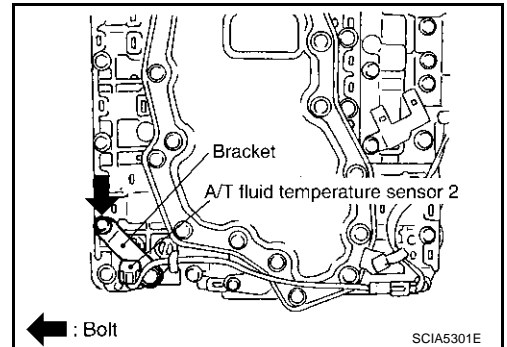

17. Remove bracket from A/T fluid temperature sensor 2.

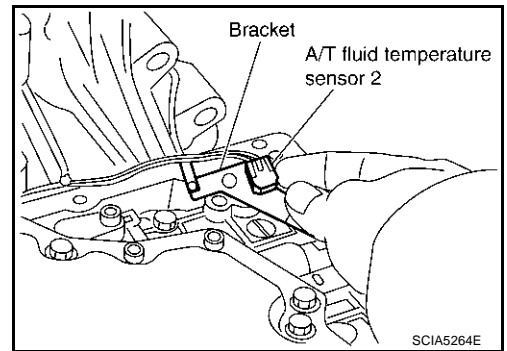


18. Remove O-ring from A/T assembly harness connector.

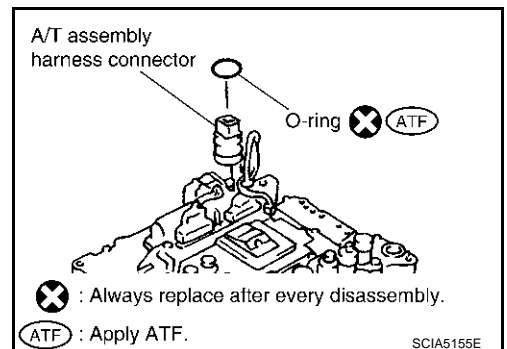

19. Disconnect TCM connectors.

CAUTION:


Be careful not to damage connectors.

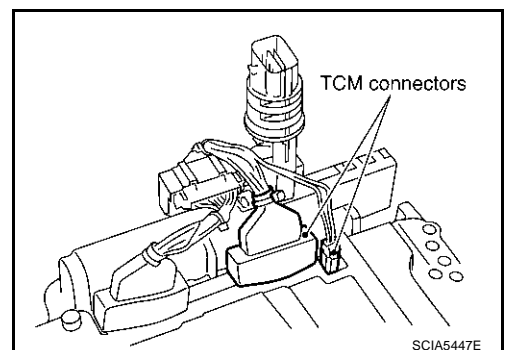

A
B
AT
D
E
F
G
H
I
J
K
L
M

ON-VEHICLE SERVICE


20. Remove A/T assembly harness connector from control valve with TCM using a flat-bladed screwdriver.

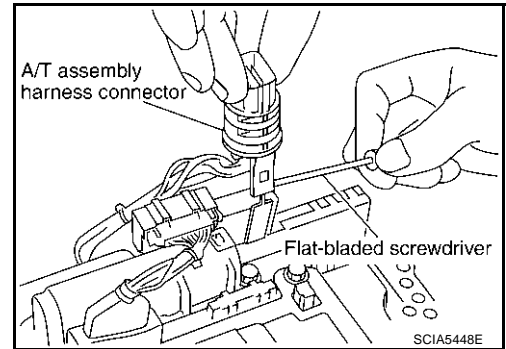

21. Disconnect TCM connector and park/neutral position switch connector.

CAUTION:

Be careful not to damage connectors.

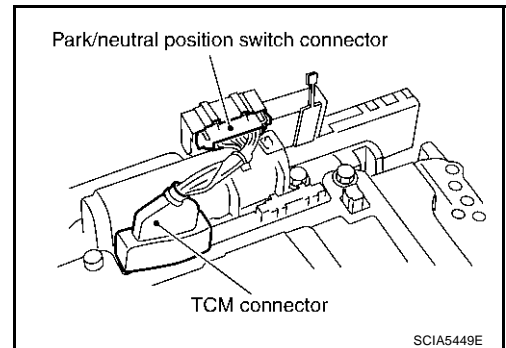


Installation


CAUTION:

After completing installation, check A/T fluid leakage and fluid level. Refer to [AT-12, "Changing A/T Fluid"](#) , [AT-12, "Checking ATF"](#) .

1. Connect TCM connector and park/neutral position switch connector.

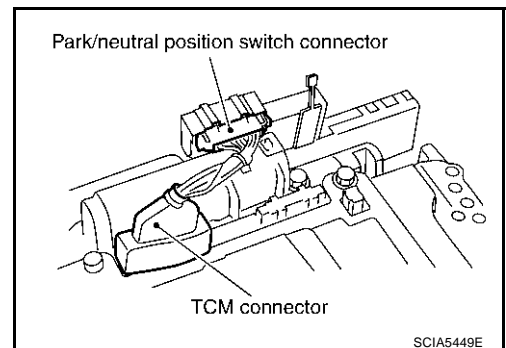


2. Install A/T assembly harness connector from control valve with TCM.

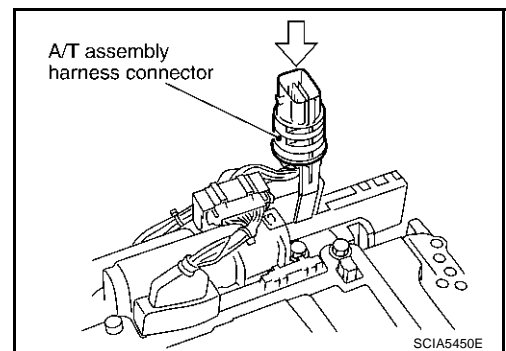

ON-VEHICLE SERVICE


3. Connect TCM connectors.

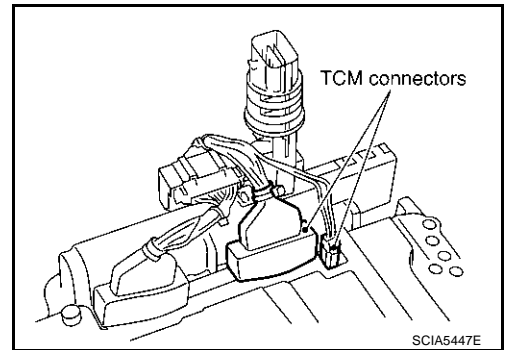


4. Install O-ring in A/T assembly harness connector.

CAUTION:

- Do not reuse O-ring.
- Apply ATF to O-ring.

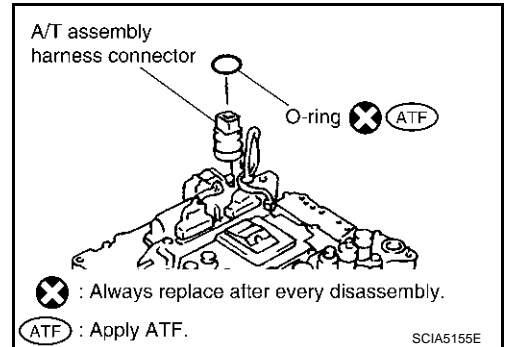

5. Install A/T fluid temperature sensor 2 to bracket.

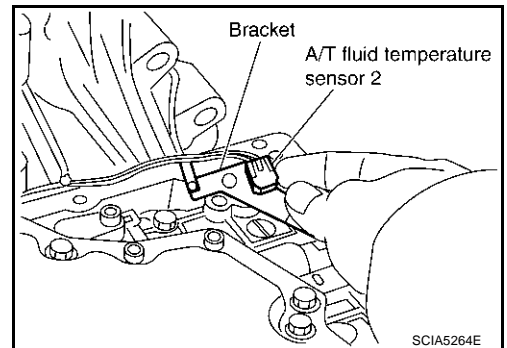


6. Install A/T fluid temperature sensor 2 (with bracket) in control valve with TCM.

CAUTION:

Adjust bolt hole of bracket to bolt hole of control valve with TCM.


 : 7.9 N·m (0.81 kg-m, 70 in-lb)

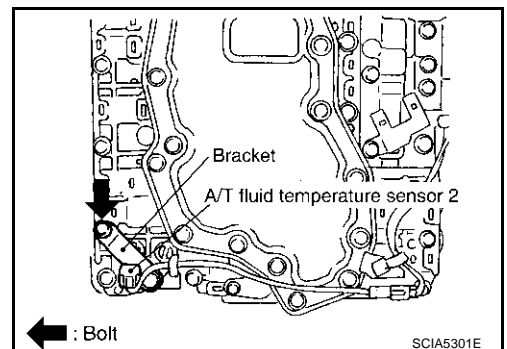

7. Install control valve with TCM in transmission case.

CAUTION:


- Make sure that turbine revolution sensor securely installs turbine revolution sensor hole.
- Hang down revolution sensor harness toward outside so as not to disturb installation of control valve with TCM.
- Adjust A/T assembly harness connector of control valve with TCM to terminal hole of transmission case.

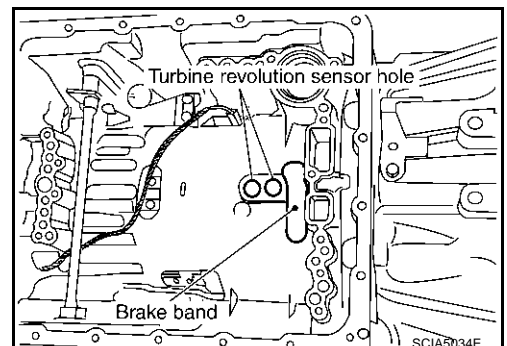

A
B
AT
D
E
F
G
H
I
J
K
L
M


ON-VEHICLE SERVICE

- Assemble it so that manual valve cutout is engaged with manual plate projection.

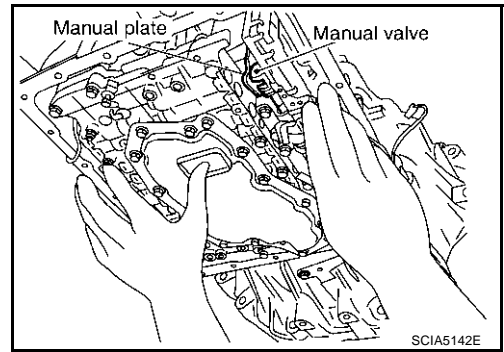


8. Install bolts A, B and C in control valve with TCM.

Bolt symbol	Length mm (in)	Number of bolts
A	42 (1.65)	5
B	55 (2.17)	6
C	40 (1.57)	1

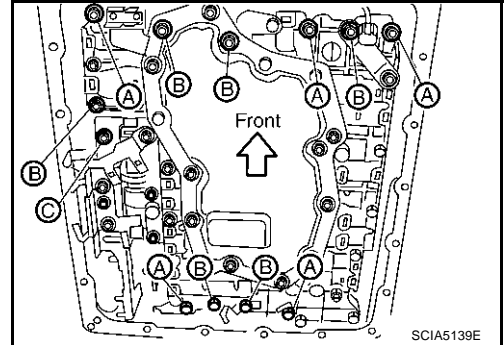


9. Tighten bolt 1, 2 and 3 temporarily to prevent dislocation. After that tighten them in order (1 → 2 → 3), and then tighten other bolts.


 : 7.9 N-m (0.81 kg-m, 70 in-lb)

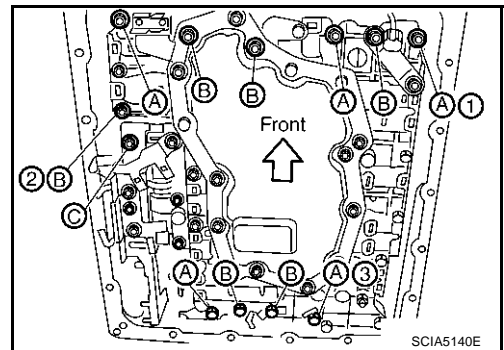

10. Connect A/T fluid temperature sensor 2 connector.

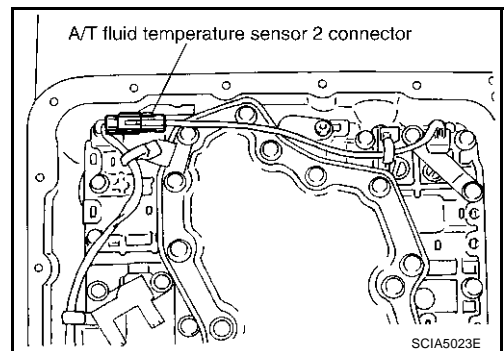


11. Securely fasten terminal cord assembly and A/T fluid temperature sensor 2 harness with terminal clips.

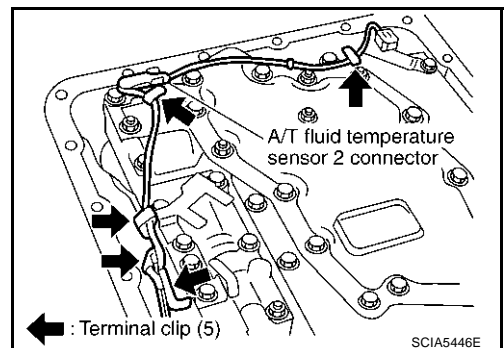


ON-VEHICLE SERVICE


12. Connect revolution sensor connector.

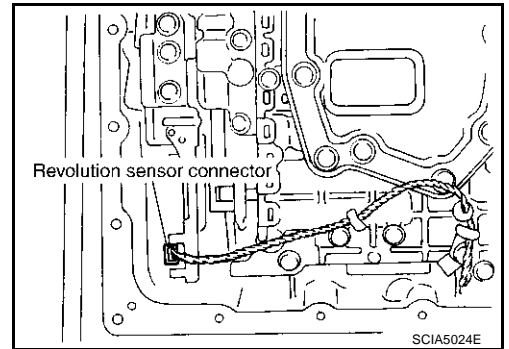

13. Securely fasten revolution sensor harness with terminal clips.

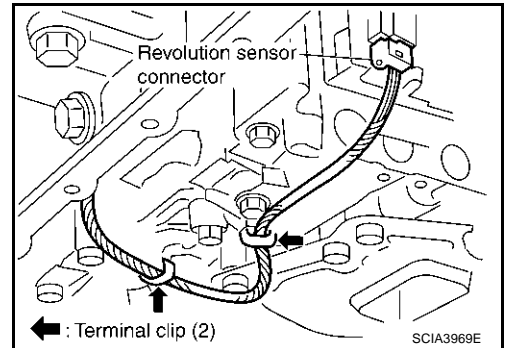

14. Install magnets in oil pan.

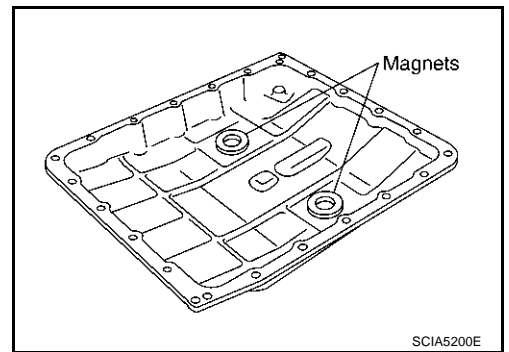

15. Install oil pan to transmission case.

a. Install oil pan gasket to oil pan.


CAUTION:

- Do not reuse oil pan gasket.
- Install it in the direction to align hole positions.
- Complete remove all moisture, oil and old gasket, etc. from oil pan gasket mounting surface.

b. Install oil pan (with oil pan gasket) to transmission case.

CAUTION:

- Install it so that drain plug comes to the position as shown in the figure.
- Be careful not to pinch harnesses.
- Complete remove all moisture, oil and old gasket, etc. from oil pan mounting surface.

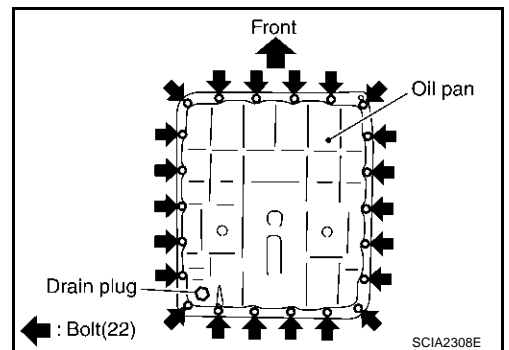

A
B
AT
D
E
F
G
H
I
J
K
L
M

ON-VEHICLE SERVICE

- c. Tighten oil pan mounting bolts to the specified torque in numerical order shown in the figure after temporarily tightening them.

CAUTION:

Do not reuse oil pan mounting bolts.

 : 7.9 N·m (0.81 kg·m, 70 in·lb)

16. Install drain plug to oil pan.

CAUTION:

Do not reuse drain plug gasket.




 : 34 N·m (3.5 kg·m, 25 ft·lb)

17. Pull up A/T assembly harness connector.

CAUTION:

Be careful not to damage connector.


18. Install snap ring to A/T assembly harness connector.
 19. Connect A/T assembly harness connector.
 20. Connect heated oxygen sensor 2 harness connector.
 21. Pour ATF into transmission assembly. Refer to [AT-12, "Changing A/T Fluid"](#) .
 22. Connect negative battery terminal.

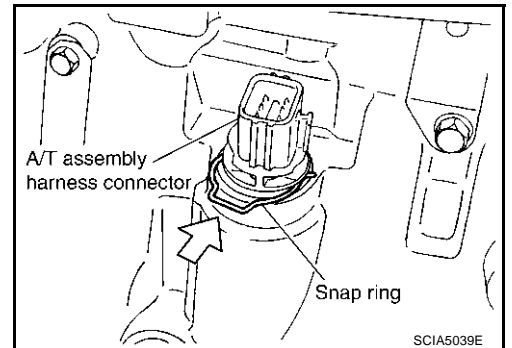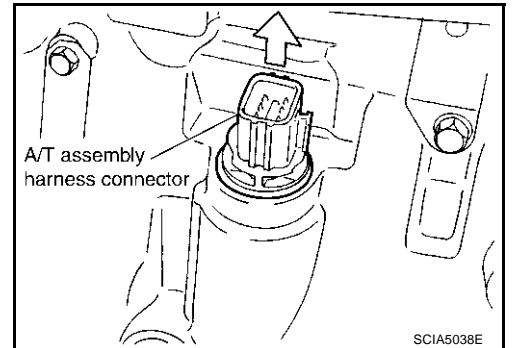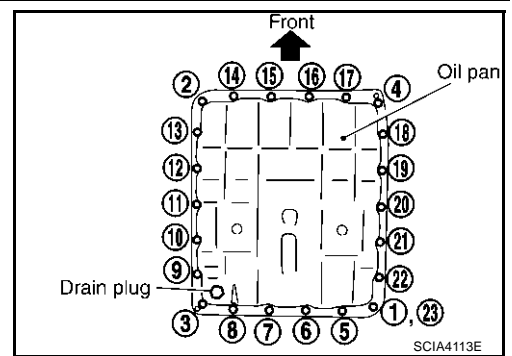

A/T FLUID TEMPERATURE SENSOR 2 REMOVAL AND INSTALLATION

Removal


1. Disconnect negative battery terminal.
2. Disconnect heated oxygen sensor 2 harness connector.
3. Drain ATF through drain plug.
4. Remove oil pan and oil pan gasket.

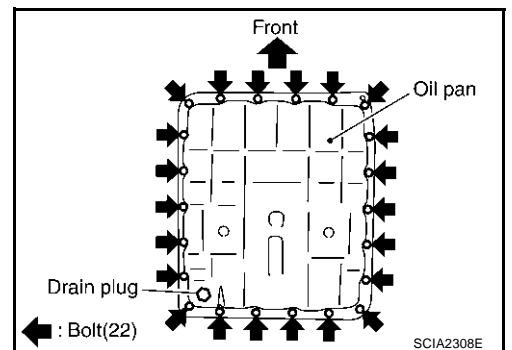

ON-VEHICLE SERVICE


5. Check foreign materials in oil pan to help determine causes of malfunction. If the fluid is very dark, smells burned, or contains foreign particles, the frictional material (clutches, band) may need replacement. A tacky film that will not wipe clean indicates varnish build up. Varnish can cause valves, servo, and clutches to stick and can inhibit pump pressure.

- If frictional material is detected, replace radiator after repair of A/T. Refer to [CO-11. "RADIATOR"](#).

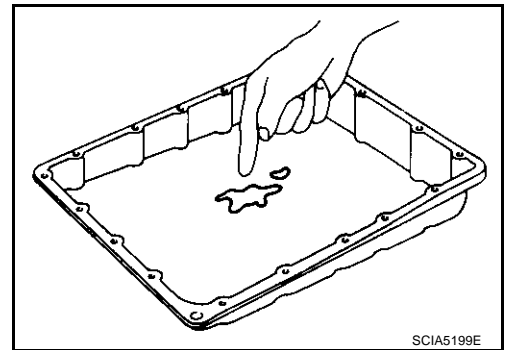


6. Disconnect A/T fluid temperature sensor 2 connector.


- CAUTION:**
Be careful not to damage connector.

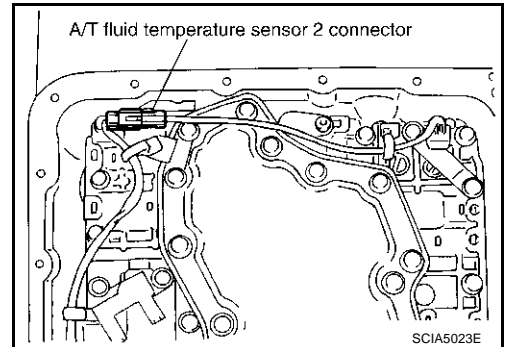


7. Straighten terminal clip to free A/T fluid temperature sensor 2 harness.

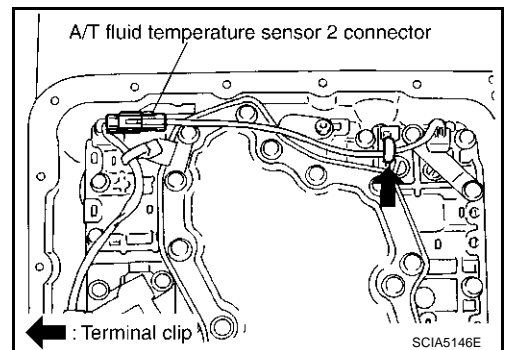

8. Remove A/T fluid temperature sensor 2 with bracket from control valve with TCM.

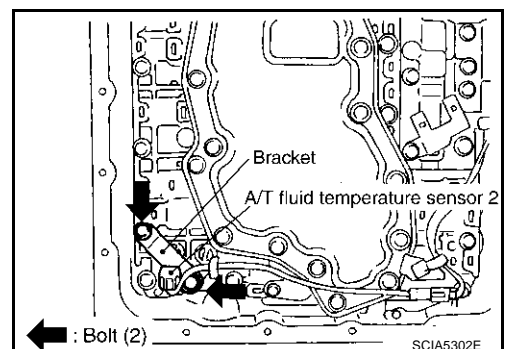

9. Remove bracket from A/T fluid temperature sensor 2.

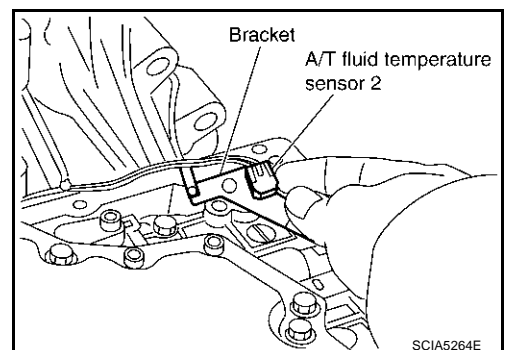

A
B
AT
D
E
F
G
H
I
J
K
L
M


ON-VEHICLE SERVICE

Installation

CAUTION:


After completing installation, check A/T fluid leakage and fluid level. Refer to [AT-12, "Changing A/T Fluid"](#) , [AT-12, "Checking ATF"](#) .

1. Install A/T fluid temperature sensor 2 to bracket.

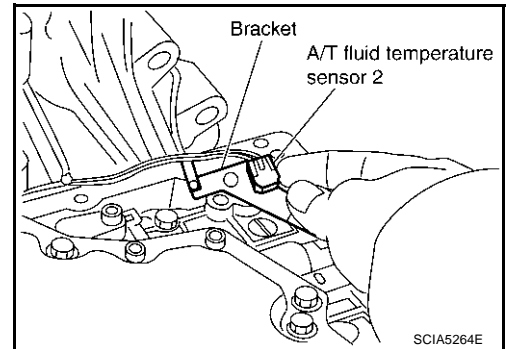


2. Install A/T fluid temperature sensor 2 (with bracket) in control valve with TCM.


 : 7.9 N-m (0.81 kg-m, 70 in-lb)

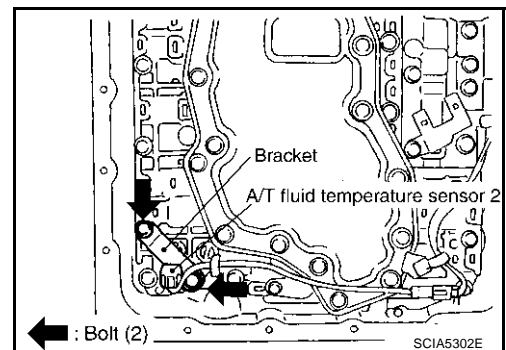

3. Connect A/T fluid temperature sensor 2 connector.

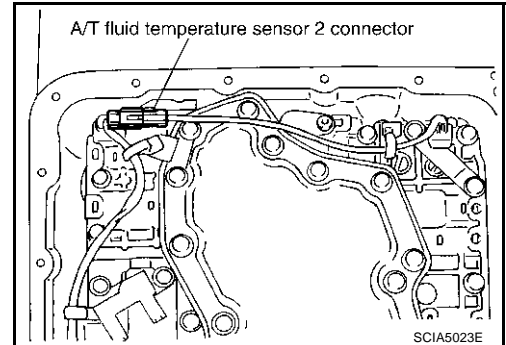

4. Securely fasten A/T fluid temperature sensor 2 harness with terminal clip.

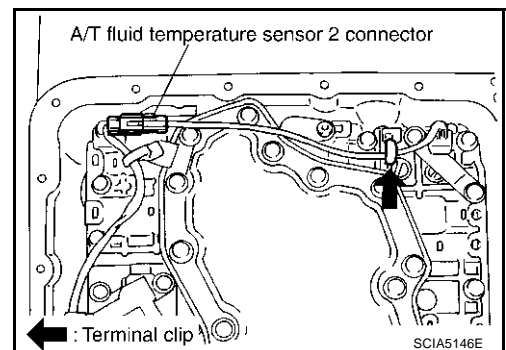

5. Install oil pan to transmission case.

- a. Install oil pan gasket to oil pan.

CAUTION:


- Do not reuse oil pan gasket.
- Install it in the direction to align hole positions.
- Complete remove all moisture, oil and old gasket, etc. from oil pan gasket mounting surface.

ON-VEHICLE SERVICE

- b. Install oil pan (with oil pan gasket) to transmission case.

CAUTION:

- Install it so that drain plug comes to the position as shown in the figure.
- Be careful not to pinch harnesses.
- Complete remove all moisture, oil and old gasket, etc. from oil pan mounting surface.

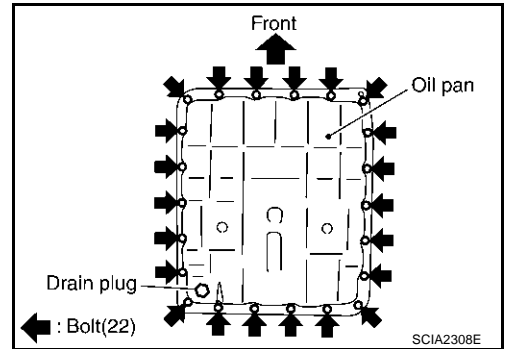

- c. Tighten oil pan mounting bolts to the specified torque in numerical order shown in the figure after temporarily tightening them.

CAUTION:

Do not reuse oil pan mounting bolts.


 : 7.9 N·m (0.81 kg-m, 70 in-lb)

6. Install drain plug to oil pan.

CAUTION:

Do not reuse drain plug gasket.


 : 34 N·m (3.5 kg-m, 25 ft-lb)

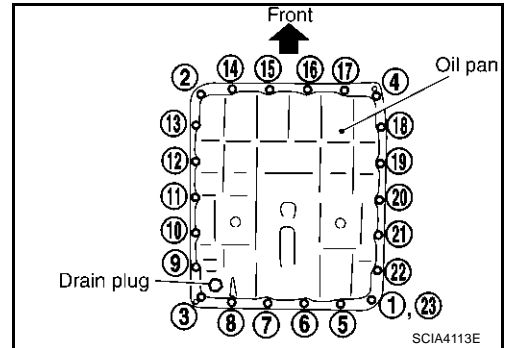

7. Connect heated oxygen sensor 2 harness connector.
8. Pour ATF into transmission assembly. Refer to [AT-12, "Changing A/T Fluid"](#) .
9. Connect negative battery terminal.

A
B
AT
D
E
F
G
H
I
J
K
L
M

Parking Components COMPONENTS

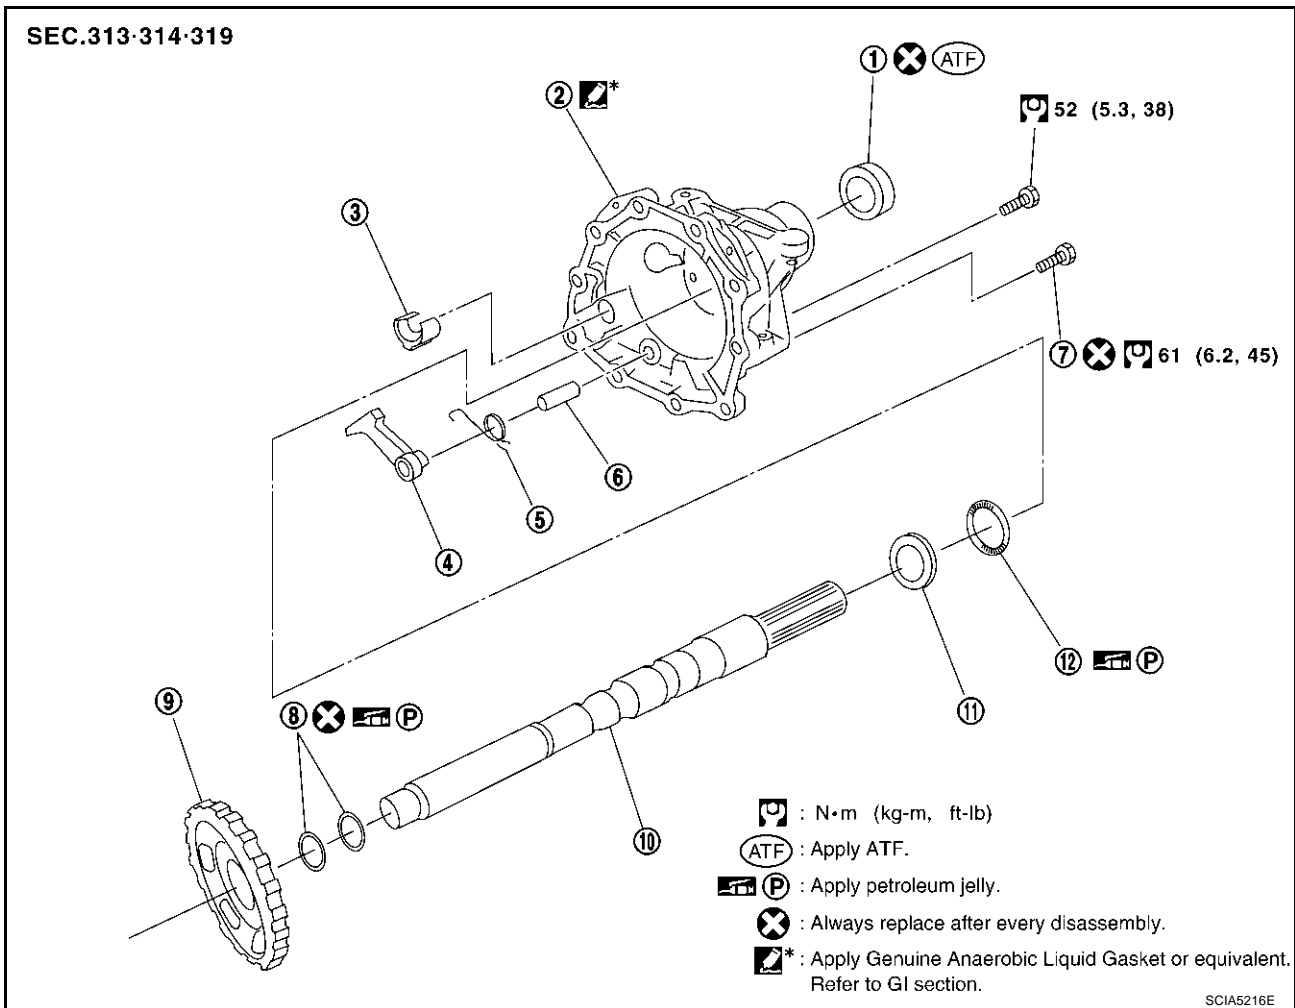

- | | | |
|----------------------|-------------------|-----------------------------|
| 1. Rear oil seal | 2. Rear extension | 3. Parking actuator support |
| 4. Parking pawl | 5. Return spring | 6. Pawl shaft |
| 7. Self-sealing bolt | 8. Seal ring | 9. Parking gear |
| 10. Output shaft | 11. Bearing race | 12. Needle bearing |

REMOVAL

1. Drain ATF through drain plug.
2. Remove exhaust front tube and center muffler with power tool. Refer to [EX-3, "Removal and Installation"](#) .
3. Remove rear propeller shaft. Refer to [PR-7, "Removal and Installation"](#) .

CAUTION:

Do not impact or damage propeller shaft tube.

4. Support transmission assembly with a transmission jack.


CAUTION:

When setting transmission jack, be careful not to allow it to collide against the drain plug.


5. Remove engine rear member with power tool. Refer to [AT-250, "Removal and Installation"](#) .

ON-VEHICLE SERVICE


6. Remove tightening bolts for rear extension assembly and transmission case.

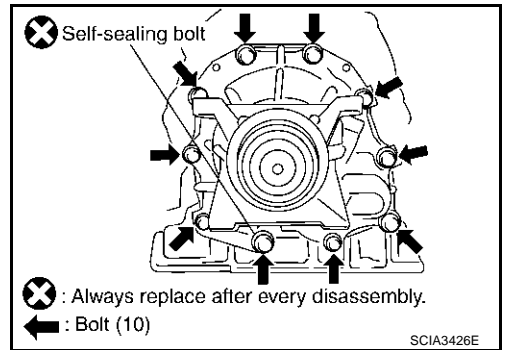


7. Tap rear extension assembly with soft hammer.

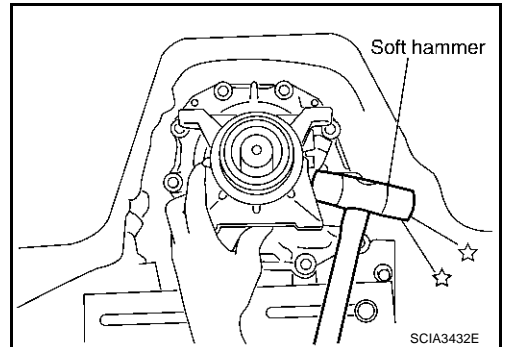


8. Remove rear extension assembly from transmission case. (With needle bearing.)

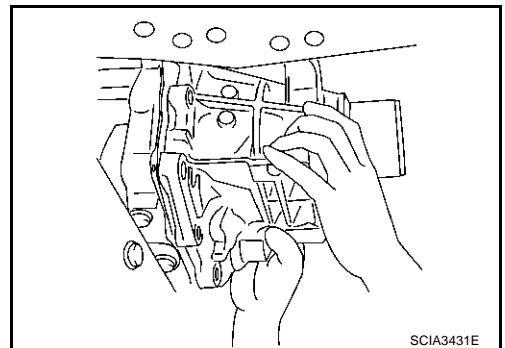

9. Remove bearing race from output shaft.

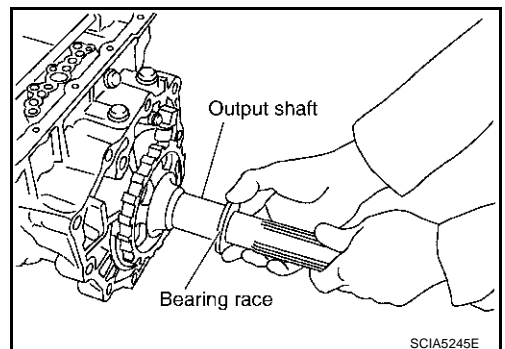


10. Remove output shaft from transmission case by rotating left/right.

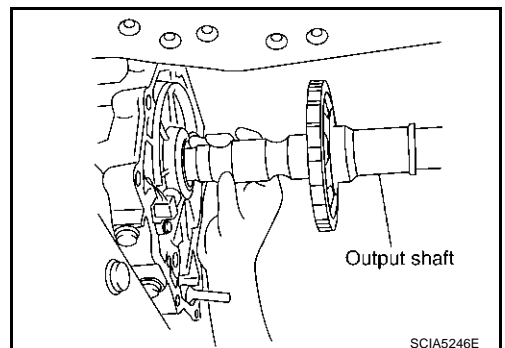


A
B
AT
D
E
F
G
H
I
J
K
L
M

ON-VEHICLE SERVICE

11. Remove parking gear from output shaft.

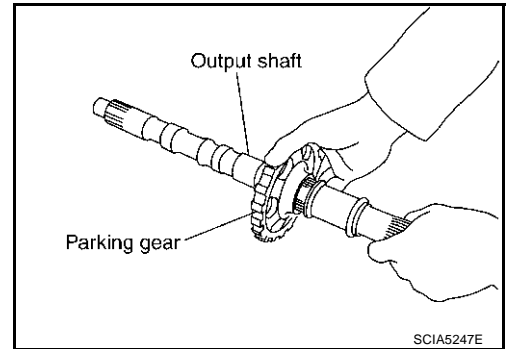


12. Remove seal rings from output shaft.

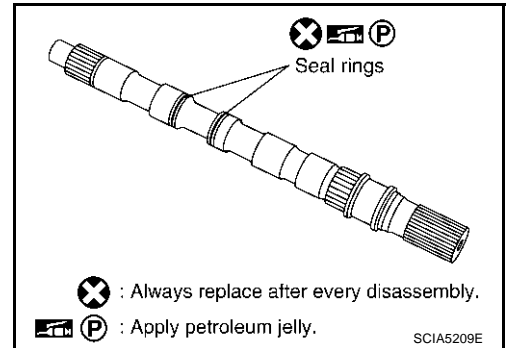


13. Remove needle bearing from rear extension.

14. Remove parking actuator support from rear extension.

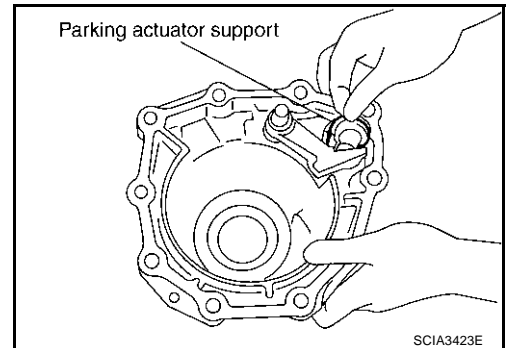


15. Remove parking pawl (with return spring) and pawl shaft from rear extension.

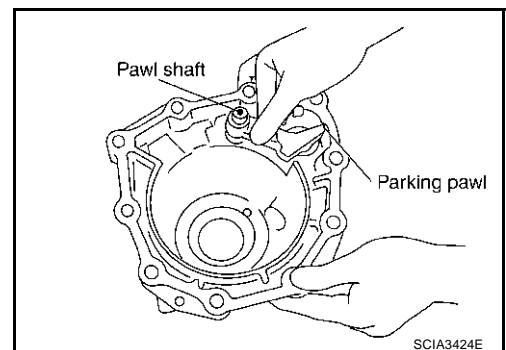


ON-VEHICLE SERVICE

16. Remove return spring from parking pawl.

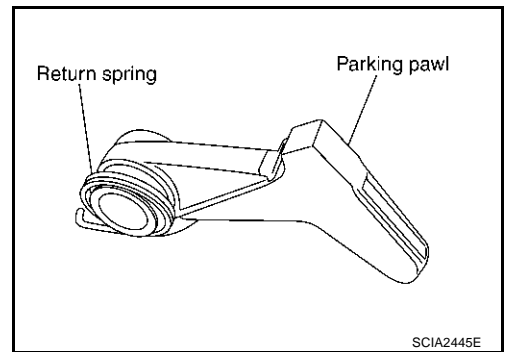



17. Remove rear oil seal from rear extension.

CAUTION:
Be careful not to scratch rear extension.

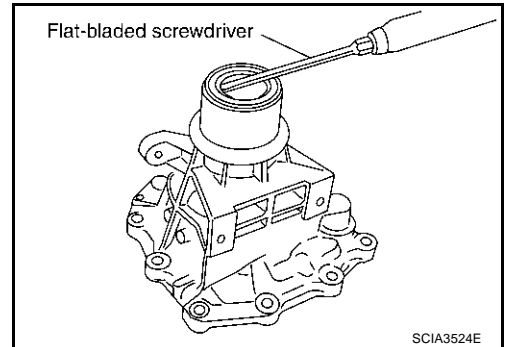

INSPECTION

- If the contact surface on parking actuator support, parking pawl, etc. has excessive wear, abrasion, bend, or any other damage, replace the components.

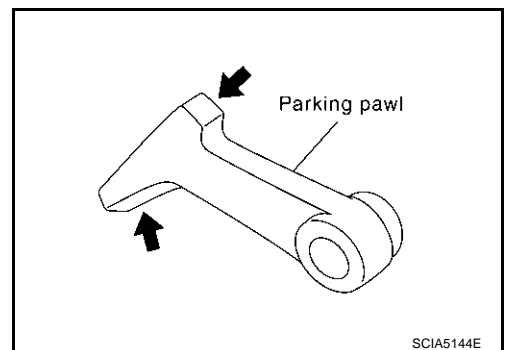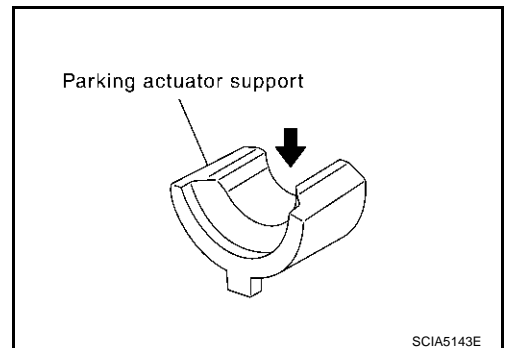

A
B
AT
D
E
F
G
H
I
J
K
L
M

ON-VEHICLE SERVICE

INSTALLATION


CAUTION:

After completing installation, check A/T fluid leakage and fluid level. Refer to [AT-12, "Changing A/T Fluid"](#) , [AT-12, "Checking ATF"](#) .


1. As shown in the right figure illustration, use a drift to drive rear oil seal into the rear extension until it is flush.

CAUTION:


- Apply ATF to rear oil seal.
- Do not reuse rear oil seal.

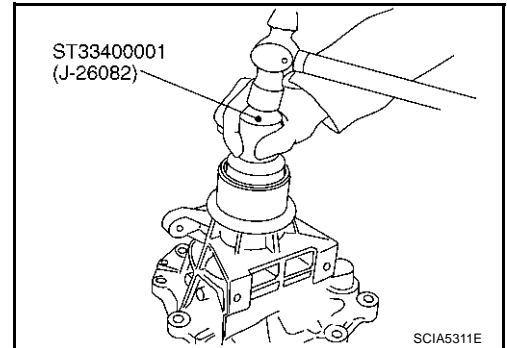

2. Install return spring to parking pawl.

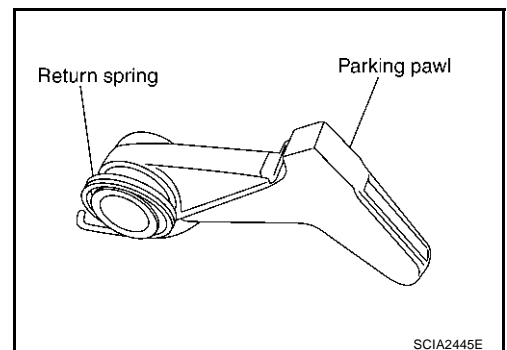


3. Install parking pawl (with return spring) and pawl shaft to rear extension.

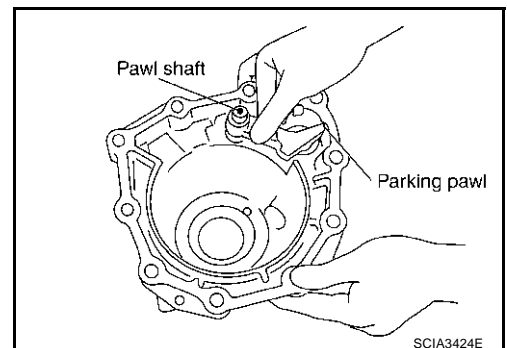

4. Install parking actuator support to rear extension.
5. Install needle bearing to rear extension.

CAUTION:

- Apply petroleum jelly to needle bearing.

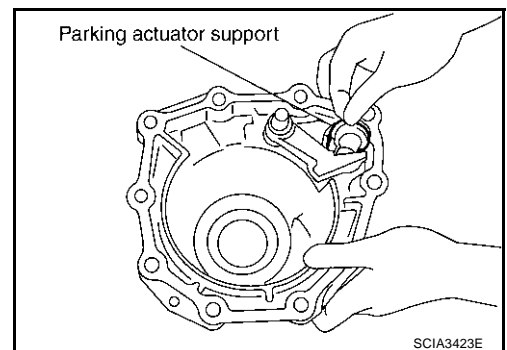


ON-VEHICLE SERVICE


6. Install seal rings in output shaft.

CAUTION:


- Do not reuse seal rings.
- Apply petroleum jelly to seal rings.

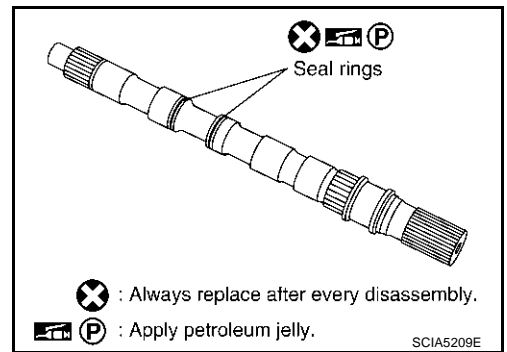


7. Install parking gear to output shaft.

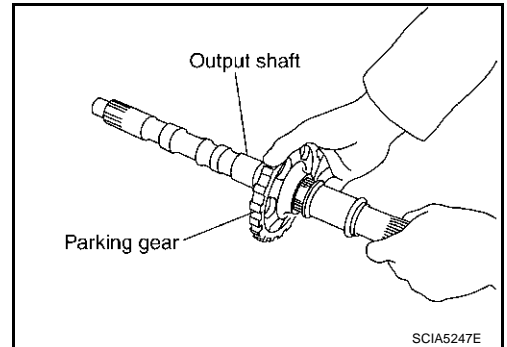

8. Install output shaft to transmission case.

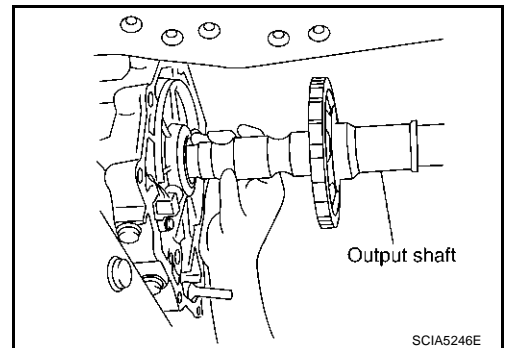


9. Install bearing race to output shaft.

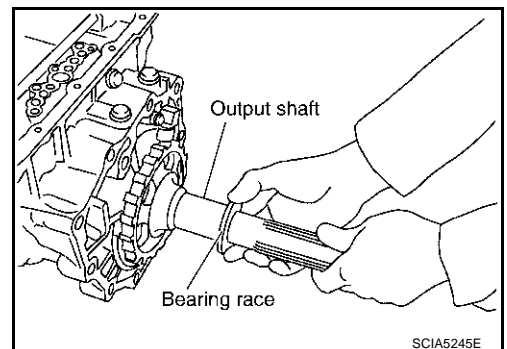

10. Apply recommended sealant (Genuine Anaerobic Liquid Gasket or equivalent. Refer to [GI-47, "Recommended Chemical Products and Sealants"](#) .) to rear extension assembly as shown in illustration.

CAUTION:


Complete remove all moisture, oil and old sealant, etc. from the transmission case and rear extension assembly mounting surfaces.

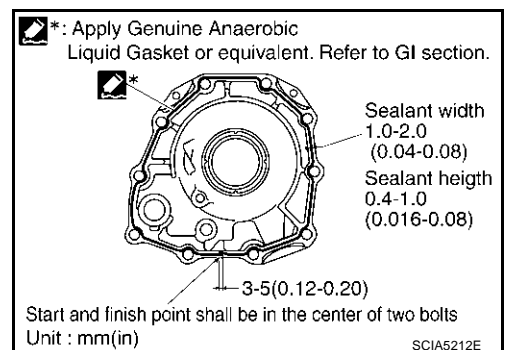

A
B
AT
D
E
F
G
H
I
J
K
L
M

ON-VEHICLE SERVICE

11. Install rear extension assembly to transmission case. (With needle bearing.)

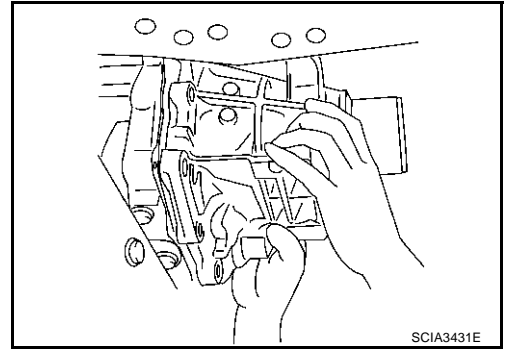

12. Tighten rear extension assembly mounting bolts to specified torque.

CAUTION:


Do not reuse self-sealing bolt.

Rear extension assembly mounting bolt:

 : 52 N·m (5.3 Kg-m, 38 ft-lb)

Self-sealing bolt:

 : 61 N·m (6.2 Kg-m, 45 ft-lb)

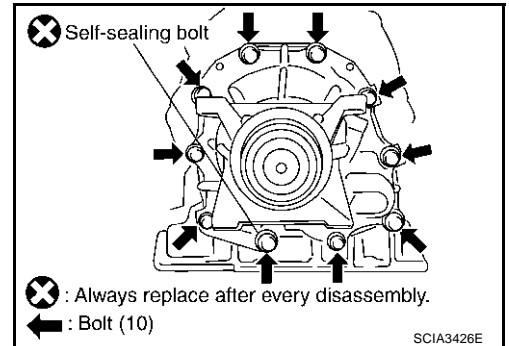

13. Install engine rear member. Refer to [AT-250, "Removal and Installation"](#) .

14. Install rear propeller shaft. Refer to [PR-7, "Removal and Installation"](#) .

CAUTION:

Do not impact or damage propeller shaft tube.

15. Install exhaust front tube and center muffler. Refer to [EX-3, "Removal and Installation"](#) .

16. Install drain plug in oil pan.

CAUTION:

Do not reuse drain plug gasket.

 : 34 N·m (3.5 kg-m, 25 ft-lb)

17. Pour ATF into transmission assembly. Refer to [AT-12, "Changing A/T Fluid"](#) .

ON-VEHICLE SERVICE

ACS008RC

Rear Oil Seal REMOVAL

1. Remove exhaust front tube and center muffler with power tool. Refer to [EX-3, "Removal and Installation"](#) .
2. Remove rear propeller shaft. Refer to [PR-7, "Removal and Installation"](#) .


CAUTION:

Do not impact or damage propeller shaft tube.

3. Remove rear oil seal using a flat-bladed screwdriver.

CAUTION:

Be careful not to scratch rear extension assembly.

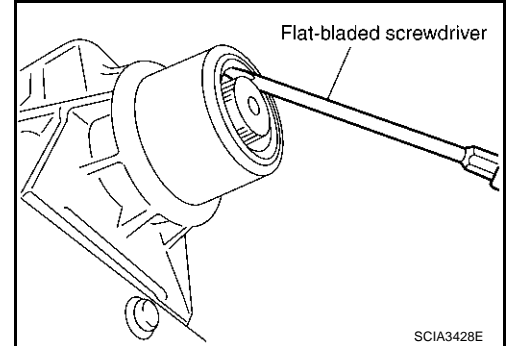

INSTALLATION

CAUTION:

After completing installation, check fluid leakage and fluid level. Refer to [AT-12, "Changing A/T Fluid"](#) , [AT-12, "Checking ATF"](#) .

1. As shown in the right figure illustration, use the drift to drive rear oil seal into rear extension assembly until it is flush.

CAUTION:


- Apply ATF to rear oil seal.
- Do not reuse rear oil seal.

2. Install rear propeller shaft. Refer to [PR-7, "Removal and Installation"](#) .

CAUTION:

Do not impact or damage propeller shaft tube.

3. Install exhaust front tube and center muffler. Refer to [EX-3, "Removal and Installation"](#) .

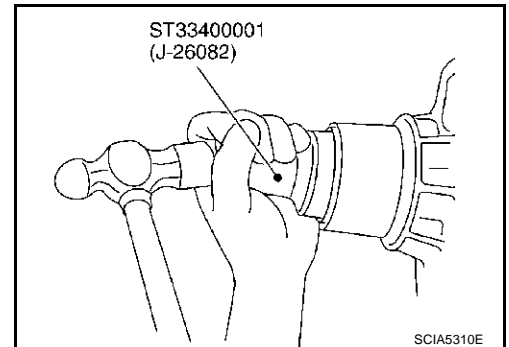


A
B
AT
D
E
F
G
H
I
J
K
L
M

ON-VEHICLE SERVICE

ACS008RD

Revolution Sensor COMPONENTS

SEC. 313-314-319

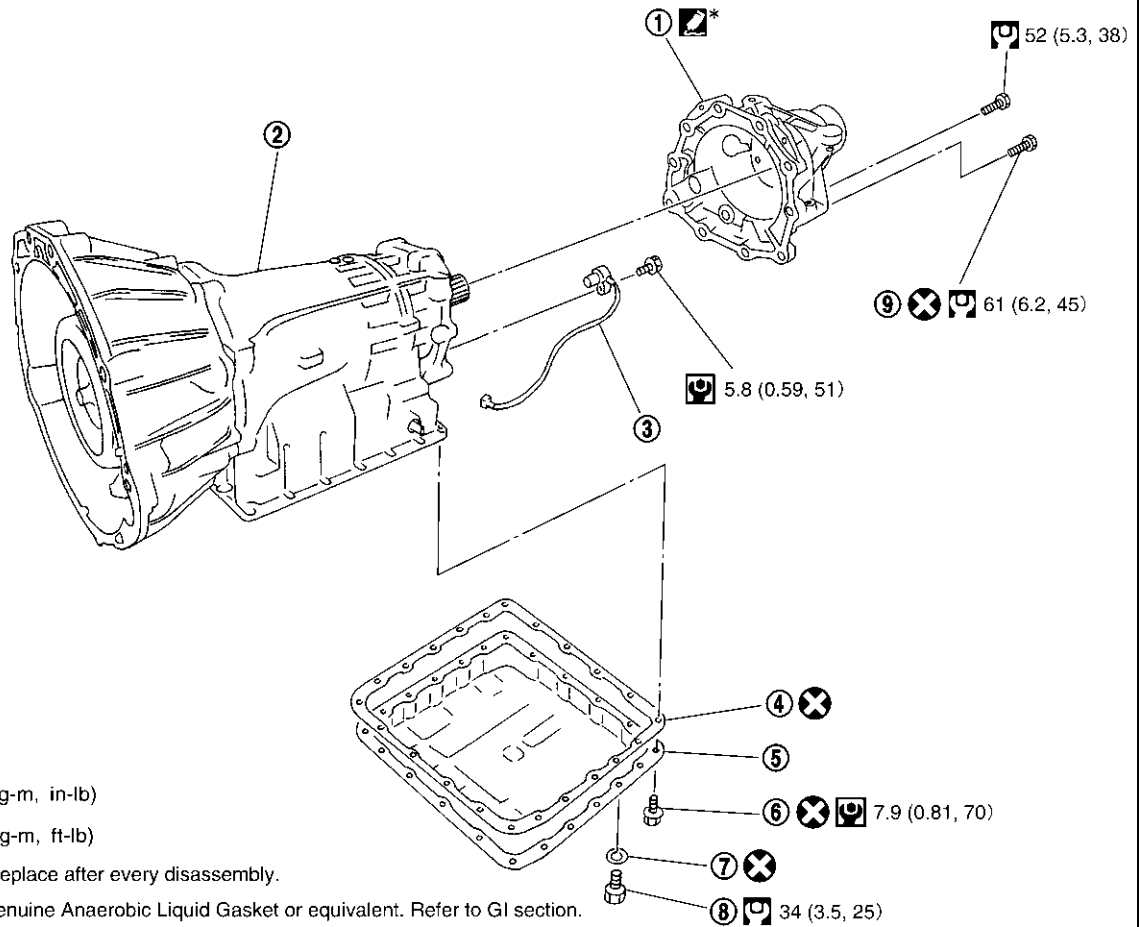

SCIA5145E

- | | | |
|----------------------|-----------------|--------------------------|
| 1. Rear extension | 2. Transmission | 3. Revolution sensor |
| 4. Oil pan gasket | 5. Oil pan | 6. Oil pan mounting bolt |
| 7. Drain plug gasket | 8. Drain plug | 9. Self-sealing bolt |


REMOVAL

1. Disconnect negative battery terminal.
2. Drain ATF through drain plug.
3. Remove exhaust front tube and center muffler with power tool. Refer to [EX-3, "Removal and Installation"](#).
4. Remove rear propeller shaft. Refer to [PR-7, "Removal and Installation"](#).

CAUTION:

Do not impact or damage propeller shaft tube.

5. Remove oil pan and oil pan gasket.

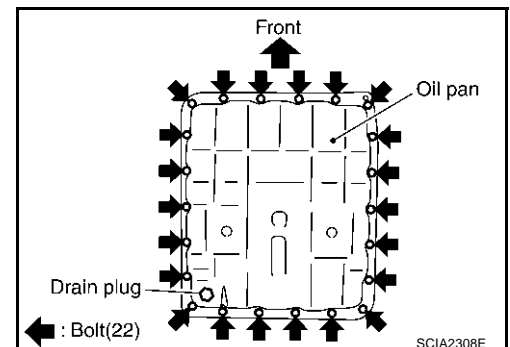


SCIA2308E

ON-VEHICLE SERVICE

6. Check foreign materials in oil pan to help determine causes of malfunction. If the fluid is very dark, smells burned, or contains foreign particles, the frictional material (clutches, band) may need replacement. A tacky film that will not wipe clean indicates varnish build up. Varnish can cause valves, servo, and clutches to stick and can inhibit pump pressure.

- If frictional material is detected, replace radiator after repair of A/T. Refer to [CO-11, "RADIATOR"](#).

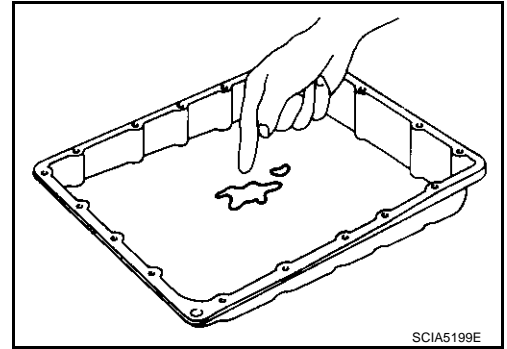


7. Support transmission assembly with a transmission jack.


CAUTION:

When setting transmission jack, place wooden blocks to prevent from damaging control valve with TCM and transmission case.


8. Remove engine rear member with power tool. Refer to [AT-250, "Removal and Installation"](#).
9. Remove tightening bolts for rear extension assembly and transmission case.

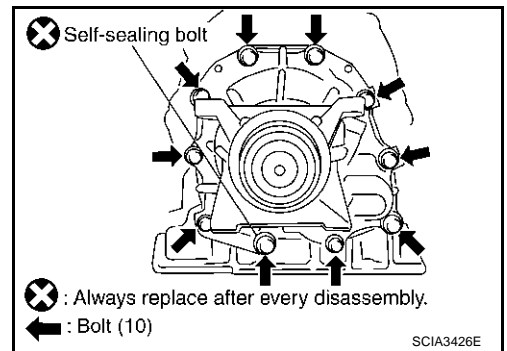

10. Tap rear extension assembly with soft hammer.

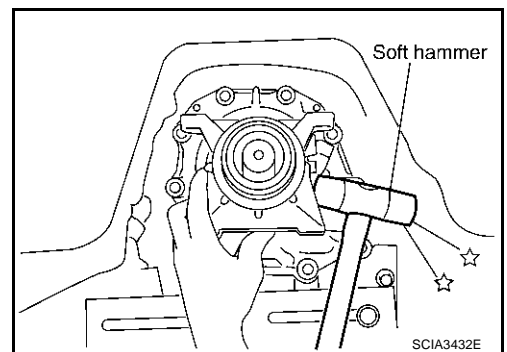

11. Remove rear extension assembly from transmission case. (With needle bearing.)

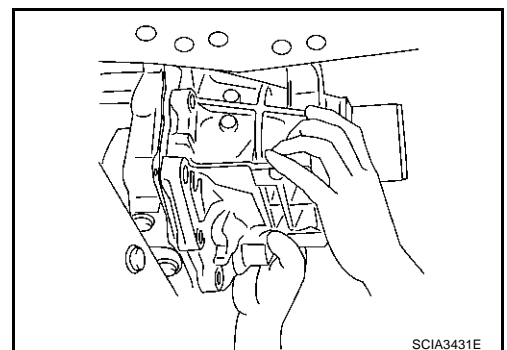

A
B
AT
D
E
F
G
H
I
J
K
L
M


ON-VEHICLE SERVICE

12. Disconnect revolution sensor connector.

CAUTION:

Be careful not to damage connector.


13. Straighten terminal clips to free revolution sensor harness.

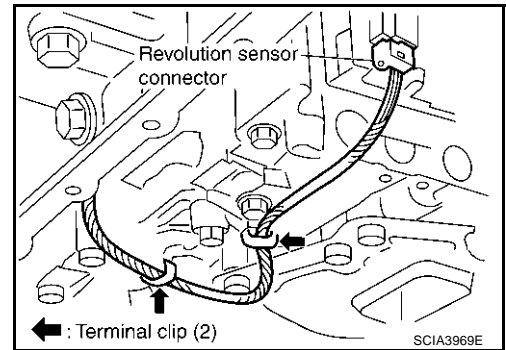

14. Remove revolution sensor from transmission case.

CAUTION:

- Do not subject it to impact by dropping or hitting it.
- Do not disassemble.
- Do not allow metal filings, etc., to get on the sensor's front edge magnetic area.
- Do not place in an area affected by magnetism.

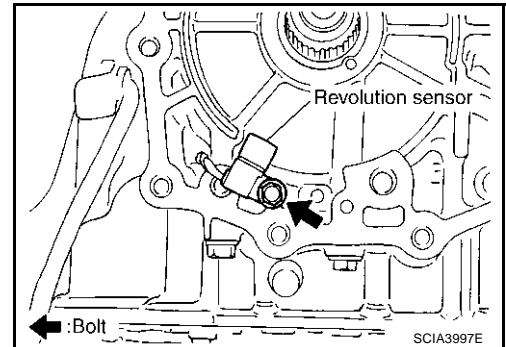

INSTALLATION

CAUTION:


After completing installation, check A/T fluid leakage and fluid level. Refer to [AT-12. "Changing A/T Fluid"](#) , [AT-12. "Checking ATF"](#) .

1. Install revolution sensor in transmission case.


CAUTION:

- Do not subject it to impact by dropping or hitting it.
- Do not disassemble.
- Do not allow metal filings, etc., to get on the sensor's front edge magnetic area.
- Do not place in an area affected by magnetism.

 : 5.8 N-m (0.59 kg-m, 51 in-lb)

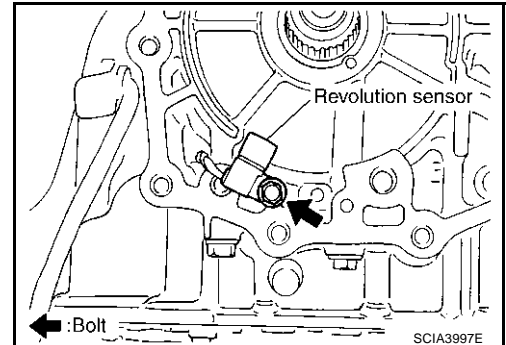

2. Connect revolution sensor connector.
3. Securely fasten revolution sensor harness with clips.

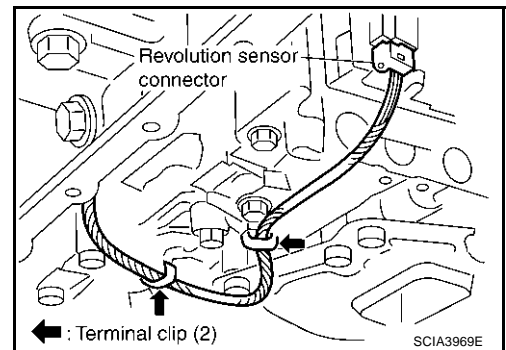


ON-VEHICLE SERVICE


4. Apply recommended sealant (Genuine Anaerobic Liquid Gasket or equivalent. Refer to [GI-47, "Recommended Chemical Products and Sealants"](#) .) to rear extension assembly as shown in illustration.

CAUTION:

Complete remove all moisture, oil and old sealant, etc. from transmission case and rear extension assembly mounting surfaces.

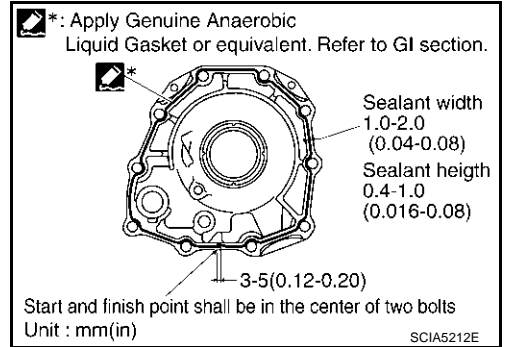

5. Install rear extension assembly to transmission case. (With needle bearing.)

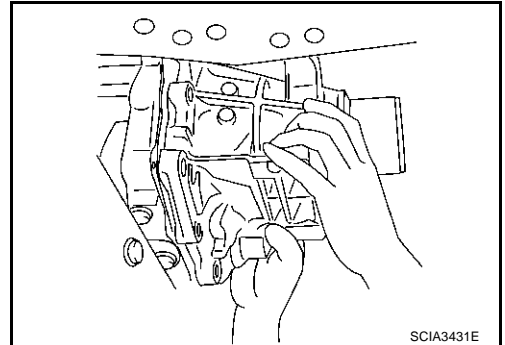

6. Tighten rear extension assembly mounting bolts to specified torque.

CAUTION:


Do not reuse self-sealing bolt.

Rear extension assembly mounting bolt:

: 52 N·m (5.3 Kg·m, 38 ft·lb)

Self-sealing bolt:

: 61 N·m (6.2 Kg·m, 45 ft·lb)

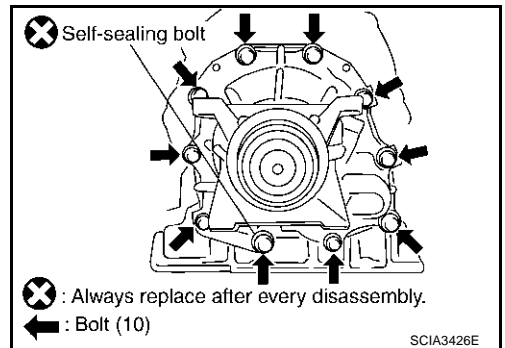

7. Install engine rear member. Refer to [AT-250, "Removal and Installation"](#) .

8. Install oil pan to transmission case.

- a. Install oil pan gasket to oil pan.


CAUTION:

- Do not reuse oil pan gasket.
- Install it in the direction to align hole positions.
- Complete remove all moisture, oil and old gasket, etc. from oil pan gasket mounting surface.

- b. Install oil pan (with oil pan gasket) to transmission case.

CAUTION:

- Install it so that drain plug comes to the position as shown in the figure.
- Be careful not to pinch harnesses.
- Complete remove all moisture, oil and old gasket, etc. from oil pan mounting surface.

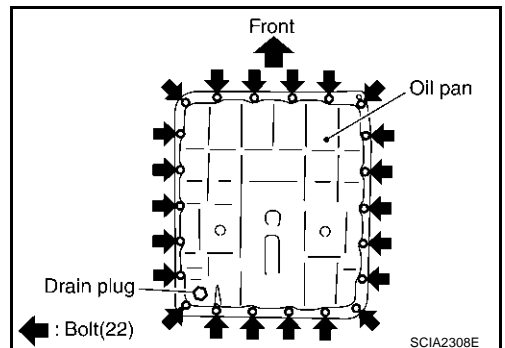

A
B
AT
D
E
F
G
H
I
J
K
L
M

ON-VEHICLE SERVICE

- c. Tighten oil pan mounting bolts to the specified torque in numerical order shown in the figure after temporarily tightening them.

CAUTION:

Do not reuse oil pan mounting bolts.


 : 7.9 N·m (0.81 kg-m, 70 in-lb)

9. Install drain plug to oil pan.

CAUTION:

Do not reuse drain plug gasket.

 : 34 N·m (3.5 kg-m, 25 ft-lb)

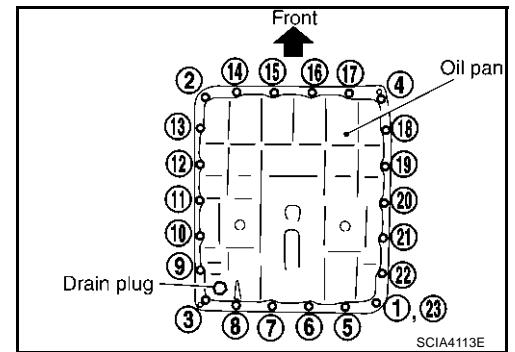

10. Install rear propeller shaft. Refer to [PR-7, "Removal and Installation"](#) .

CAUTION:

Do not impact or damage propeller shaft tube.

11. Install exhaust front tube and center muffler. Refer to [EX-3, "Removal and Installation"](#) .
12. Pour ATF into transmission assembly. Refer to [AT-12, "Changing A/T Fluid"](#) .
13. Connect negative battery terminal.

AIR BREATHER HOSE


AIR BREATHER HOSE

PFP:31098

Removal and Installation

ACS0000G

Refer to the figure below for air breather hose removal and installation procedure.

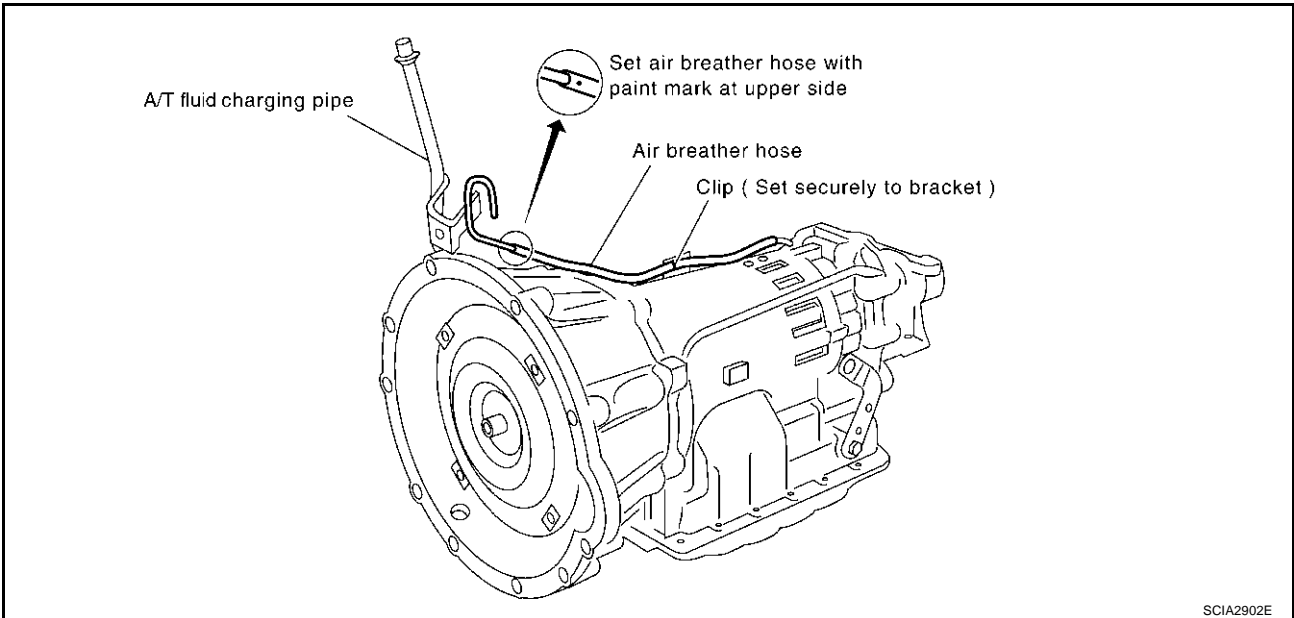

CAUTION:

- When installing an air breather hose, be careful not to be crushed or blocked by folding or bending the hose.
- When inserting a hose to the transmission tube, be sure to insert it fully until its end reaches the tube bend R portion.

A
B
AT
D
E
F
G
H
I
J
K
L
M


TRANSMISSION ASSEMBLY

PF3:31020

TRANSMISSION ASSEMBLY

Removal and Installation

ACS0000H

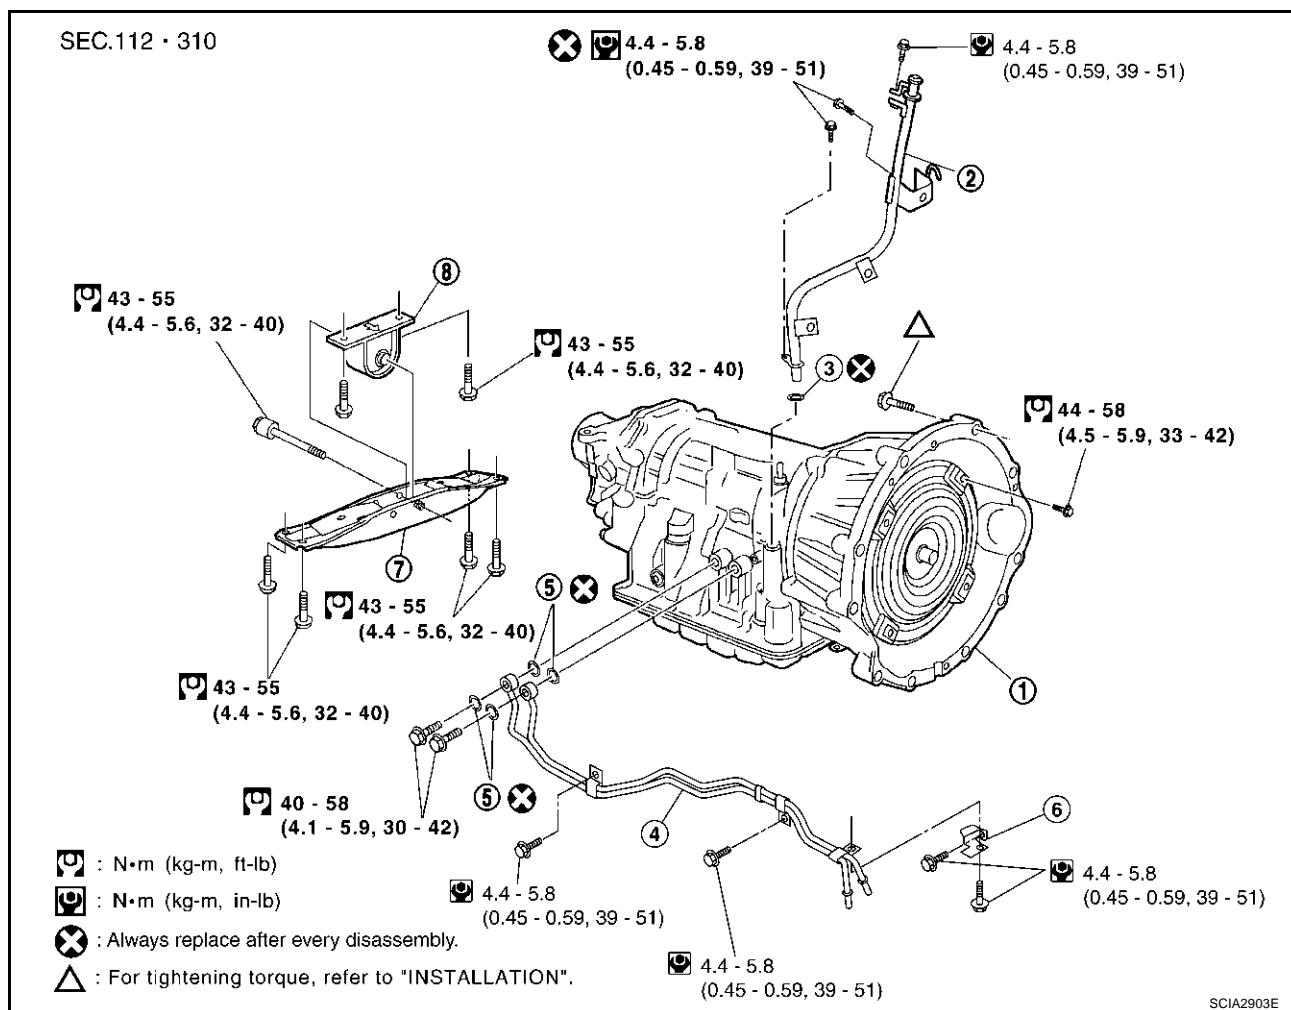

- | | | |
|--------------------------|----------------------------|------------|
| 1. Transmission assembly | 2. A/T fluid charging pipe | 3. O-ring |
| 4. Fluid cooler tube | 5. Copper washer | 6. Bracket |
| 7. Engine rear member | 8. Insulator | |

REMOVAL

CAUTION:

When removing the A/T assembly from engine, first remove the crankshaft position sensor (POS) from the A/T assembly.

Be careful not to damage sensor edge.

1. Disconnect the negative battery terminal.
2. Remove tower bar with power tool. Refer to [FSU-20, "Removal and Installation"](#).
3. Remove engine under cover with power tool.
4. Remove front cross bar with power tool. Refer to [FSU-19, "Removal and Installation"](#).
5. Remove exhaust tube with power tool. Refer to [EX-3, "Removal and Installation"](#).
6. Remove propeller shaft. Refer to [PR-7, "Removal and Installation"](#).


CAUTION:

Do not impact, or damage propeller shaft tube.

7. Remove A/T control rod. Refer to [AT-214, "SHIFT CONTROL SYSTEM"](#).
8. Disconnect A/T unit assembly connector.

TRANSMISSION ASSEMBLY

9. Remove crankshaft position sensor (POS) from A/T assembly. Refer to [EM-26, "Removal and Installation"](#) .
10. Remove fluid cooler tube and A/T fluid charging pipe.
11. Plug up openings such as the fluid charging pipe hole, etc.
12. Remove air breather hose. Refer to [AT-249, "Removal and Installation"](#) .
13. Remove starter motor with power tool. Refer to [SC-19, "Removal and Installation"](#) .
14. Remove dust cover from converter housing part.
15. Turn crankshaft, and remove the four tightening bolts for drive plate and torque converter.

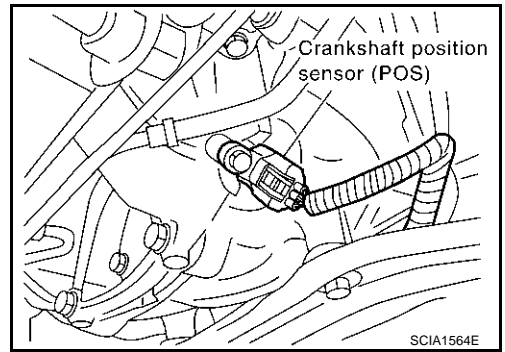

CAUTION:

When turning crankshaft, turn it clockwise as viewed from the front of the engine.


16. Support A/T assembly with a transmission jack.

CAUTION:

When setting the transmission jack, be careful not to allow it to collide against the drain plug.

17. Remove engine rear member with power tool.
18. Remove bolts fixing A/T assembly to engine with power tool.
19. Remove A/T assembly from vehicle with a transmission jack.

- **Secure torque converter to prevent it from dropping.**
- **Secure A/T assembly to a transmission jack.**

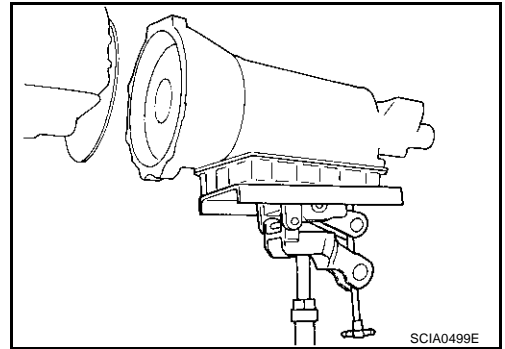


INSPECTION

Installation and inspection of torque converter

- After inserting a torque converter to a transmission, be sure to check distance A to ensure it is within the reference value limit.

Distance A: 25.0 mm (0.98 in) or more

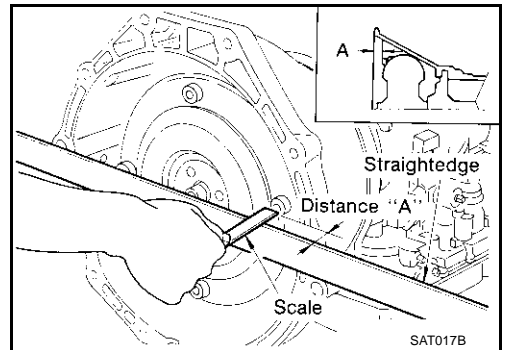


INSTALLATION

Install the removed parts in the reverse order of the removal, while paying attention to the following work.

- When installing transmission to the engine, attach the fixing bolts in accordance with the following standard.

Bolt No.	1	2	3	4
Number of bolts	1	5	2	2
Bolt length "ℓ"mm (in)	55 (2.17)	65 (2.56)	56 (2.20)	35 (1.38)
Tightening torque N-m (kg-m, ft-lb)	70 - 80 (7.2 - 8.1, 52 - 59)		49.0 - 61.8 (5.0 - 6.3, 37 - 45)	41.2 - 52.0 (4.2 - 5.3, 31 - 38)

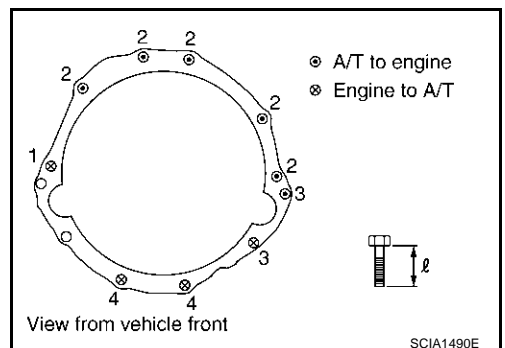


TRANSMISSION ASSEMBLY

- Align the positions of tightening bolts for drive plate with those of the torque converter, and temporarily tighten the bolts. Then, tighten the bolts with the specified torque.

 : 44 - 58 N·m (4.5 - 5.9 kg-m, 33 - 42 ft-lb)

CAUTION:

- When turning crankshaft, turn it clockwise as viewed from the front of the engine.
- When tightening the tightening bolts for the torque converter after fixing the crankshaft pulley bolts, be sure to confirm the tightening torque of the crankshaft pulley mounting bolts.
- After converter is installed to drive plate, rotate crankshaft several turns and check to be sure that transmission rotates freely without binding.
- Install crankshaft position sensor (POS). Refer to [EM-26. "Removal and Installation"](#).
- After completing installation, check fluid leakage, fluid level, and the positions of A/T. Refer to [AT-12. "Checking ATF"](#), [AT-215. "Adjustment of A/T Position"](#), [AT-215. "Checking of A/T Position"](#).

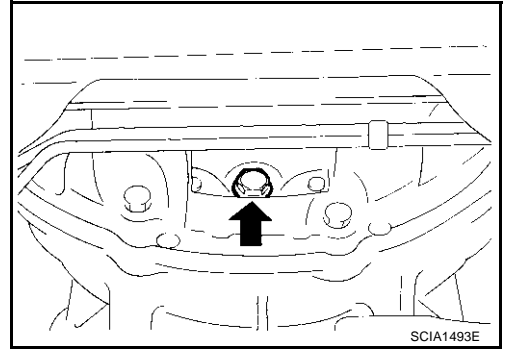

OVERHAUL


OVERHAUL Components

PPF:00000

ACS008RE

A
B
AT
D
E
F
G
H
I
J
K
L
M

90X72, 91X05 models

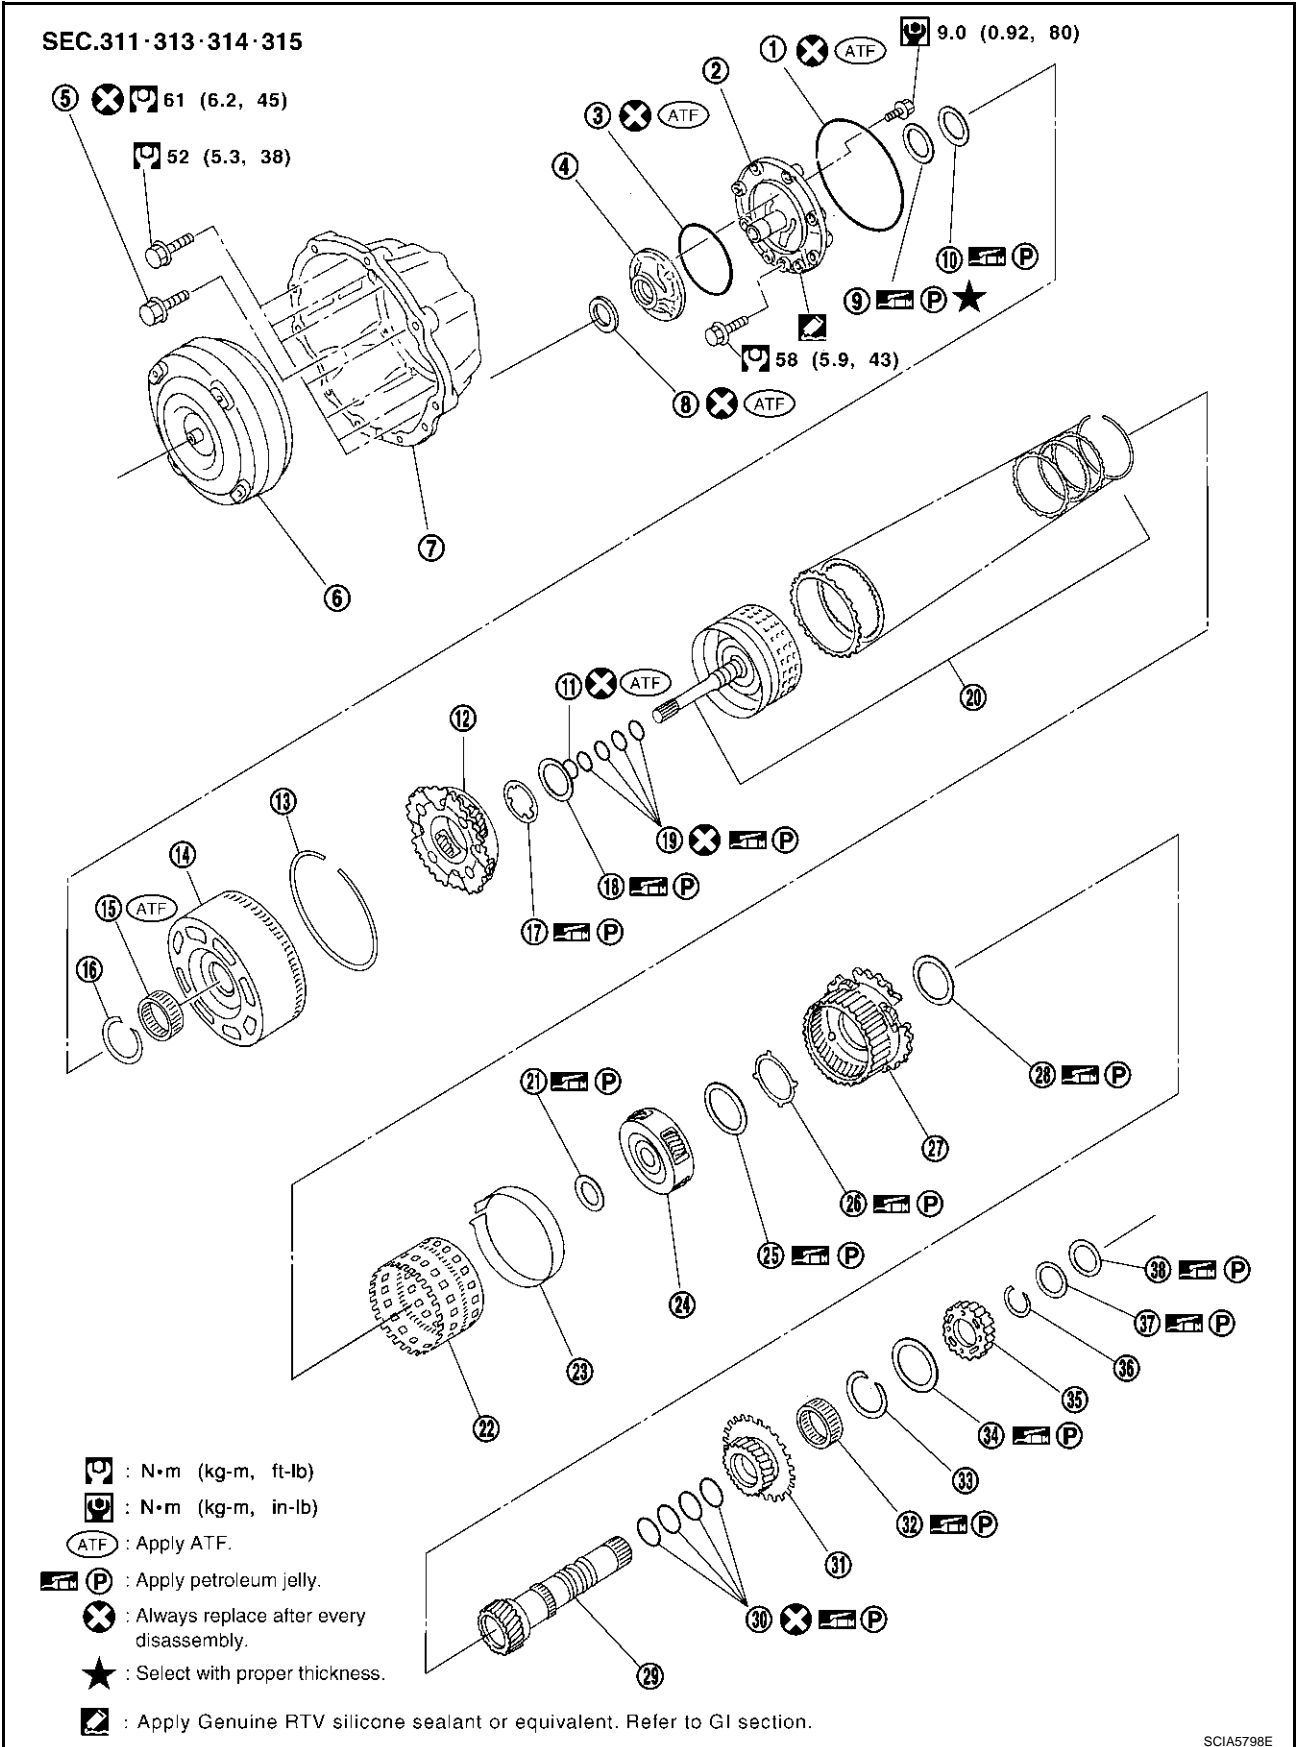


OVERHAUL

- | | | |
|------------------------|-------------------------------------|----------------------------|
| 1. O-ring | 2. Oil pump cover | 3. O-ring |
| 4. Oil pump housing | 5. Self-sealing bolt | 6. Torque converter |
| 7. Converter housing | 8. Oil pump housing oil seal | 9. Bearing race |
| 10. Needle bearing | 11. O-ring | 12. Front carrier assembly |
| 13. Snap ring | 14. Front sun gear | 15. 3rd one-way clutch |
| 16. Snap ring | 17. Bearing race | 18. Needle bearing |
| 19. Seal ring | 20. Input clutch assembly | 21. Needle bearing |
| 22. Rear internal gear | 23. Brake band | 24. Mid carrier assembly |
| 25. Needle bearing | 26. Bearing race | 27. Rear carrier assembly |
| 28. Needle bearing | 29. Mid sun gear | 30. Seal ring |
| 31. Rear sun gear | 32. 1st one-way clutch | 33. Snap ring |
| 34. Needle bearing | 35. High and low reverse clutch hub | 36. Snap ring |
| 37. Bearing race | 38. Needle bearing | |

OVERHAUL

91X22 models

SEC.311-313-314-315

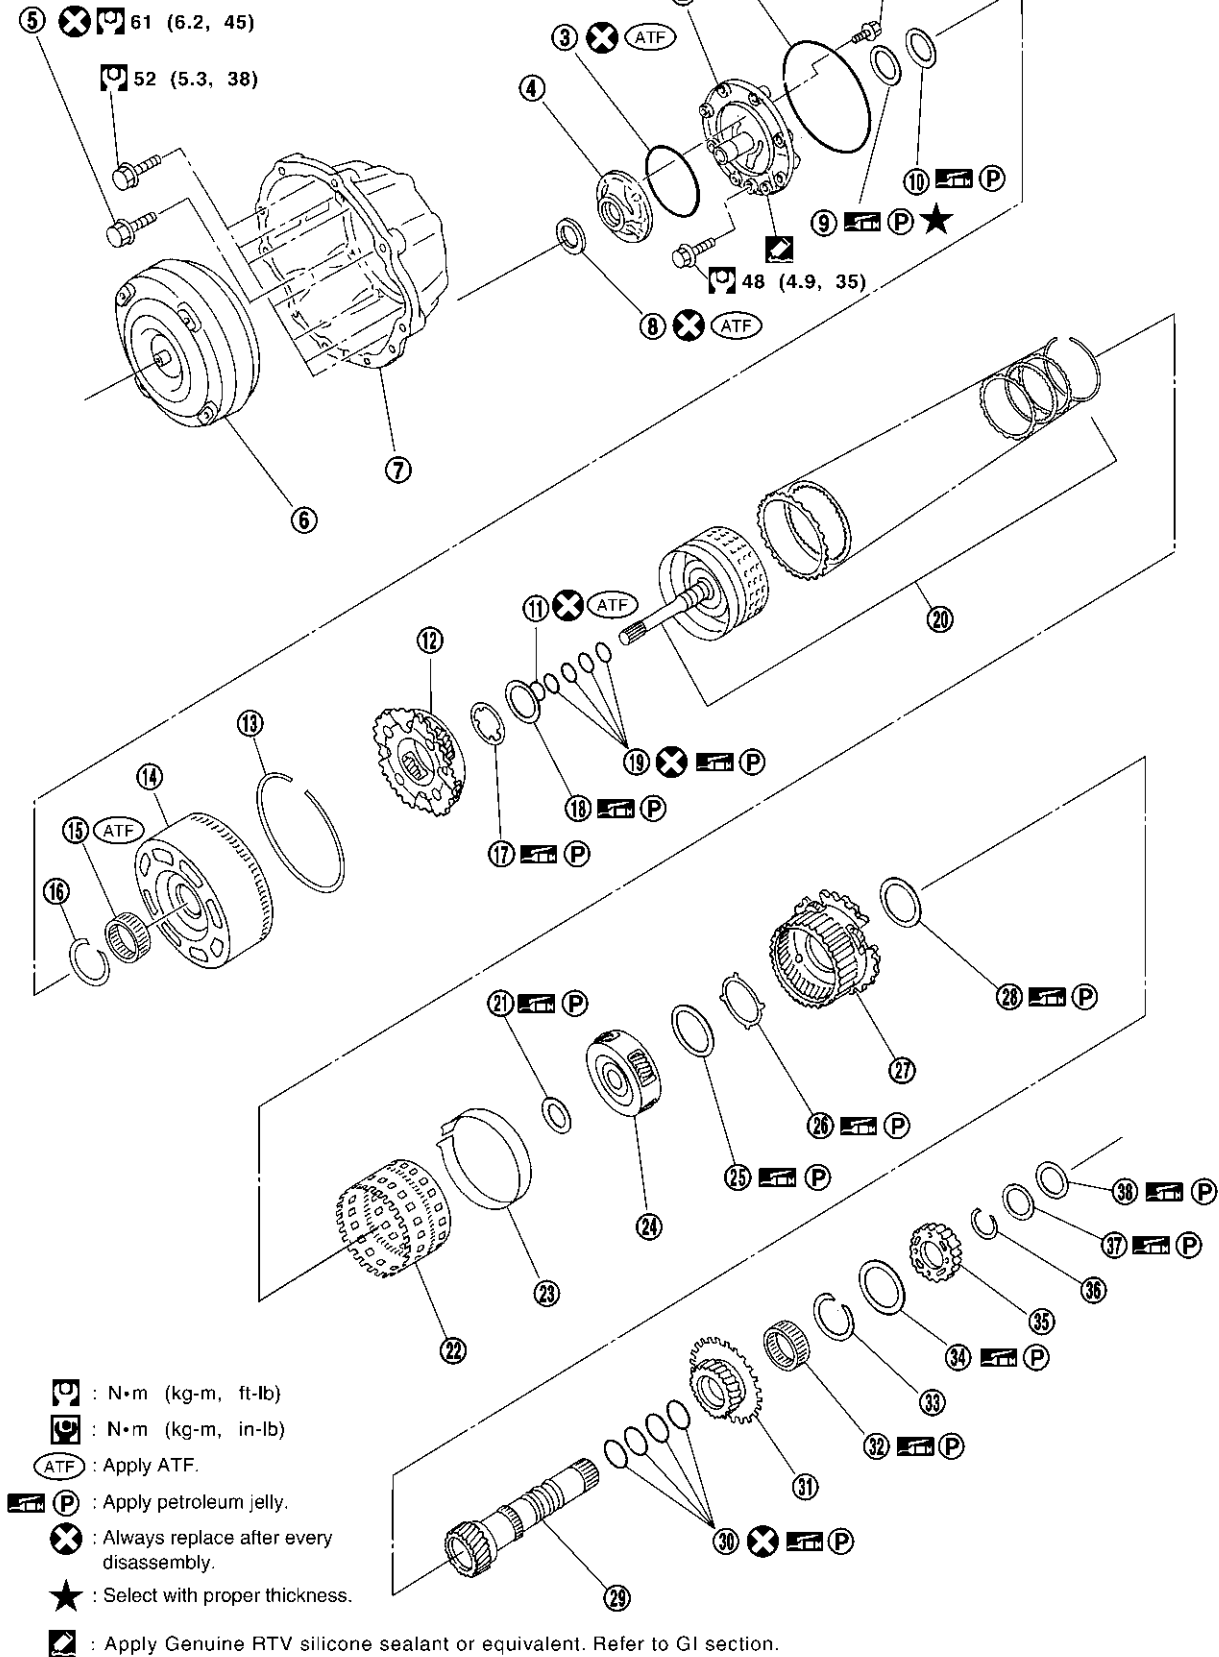

- | | | |
|---------------------|----------------------|---------------------|
| 1. O-ring | 2. Oil pump cover | 3. O-ring |
| 4. Oil pump housing | 5. Self-sealing bolt | 6. Torque converter |


A
B
AT
D
E
F
G
H
I
J
K
L
M

OVERHAUL

- | | | |
|------------------------|-------------------------------------|----------------------------|
| 7. Converter housing | 8. Oil pump housing oil seal | 9. Bearing race |
| 10. Needle bearing | 11. O-ring | 12. Front carrier assembly |
| 13. Snap ring | 14. Front sun gear | 15. 3rd one-way clutch |
| 16. Snap ring | 17. Bearing race | 18. Needle bearing |
| 19. Seal ring | 20. Input clutch assembly | 21. Needle bearing |
| 22. Rear internal gear | 23. Brake band | 24. Mid carrier assembly |
| 25. Needle bearing | 26. Bearing race | 27. Rear carrier assembly |
| 28. Needle bearing | 29. Mid sun gear | 30. Seal ring |
| 31. Rear sun gear | 32. 1st one-way clutch | 33. Snap ring |
| 34. Needle bearing | 35. High and low reverse clutch hub | 36. Snap ring |
| 37. Bearing race | 38. Needle bearing | |

OVERHAUL

SEC.313 · 314 · 315 · 316 · 317 · 319

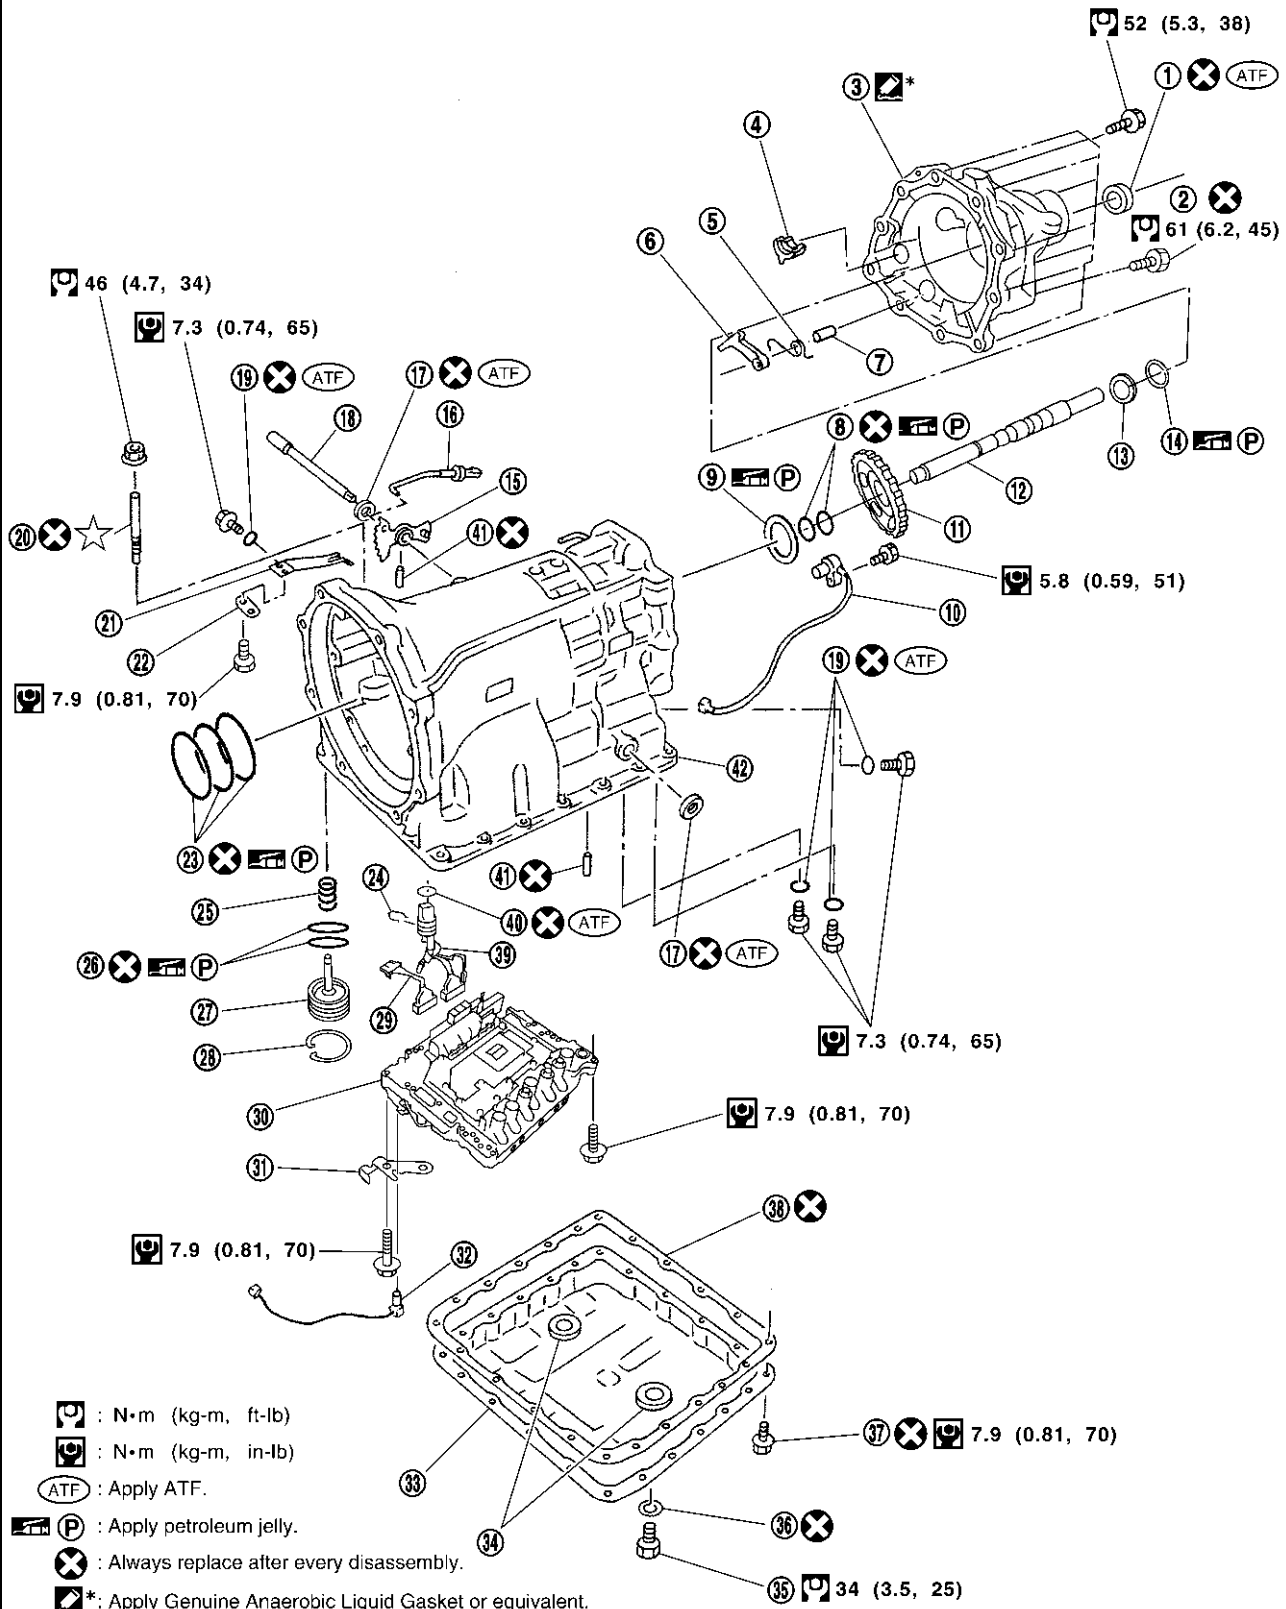

- | | | |
|-----------------------------|----------------------|-------------------|
| 1. Rear oil seal | 2. Self-sealing bolt | 3. Rear extension |
| 4. Parking actuator support | 5. Return spring | 6. Parking pawl |
| 7. Pawl shaft | 8. Seal ring | 9. Needle bearing |

A
B
AT
D
E
F
G
H
I
J
K
L
M


SCIA5444E

OVERHAUL

- | | | |
|---------------------------|------------------------------------|----------------------------|
| 10. Revolution sensor | 11. Parking gear | 12. Output shaft |
| 13. Bearing race | 14. Needle bearing | 15. Manual plate |
| 16. Parking rod | 17. Manual shaft oil seal | 18. Manual shaft |
| 19. O-ring | 20. Band servo anchor end pin | 21. Detent spring |
| 22. Spacer | 23. Seal ring | 24. Snap ring |
| 25. Return spring | 26. O-ring | 27. Servo assembly |
| 28. Snap ring | 29. Sub-harness | 30. Control valve with TCM |
| 31. Bracket | 32. A/T fluid temperature sensor 2 | 33. Oil pan |
| 34. Magnet | 35. Drain plug | 36. Drain plug gasket |
| 37. Oil pan mounting bolt | 38. Oil pan gasket | 39. Terminal cord assembly |
| 40. O-ring | 41. Retaining pin | 42. Transmission case |

OVERHAUL

SEC.313 · 314 · 315 · 316 · 317 · 319

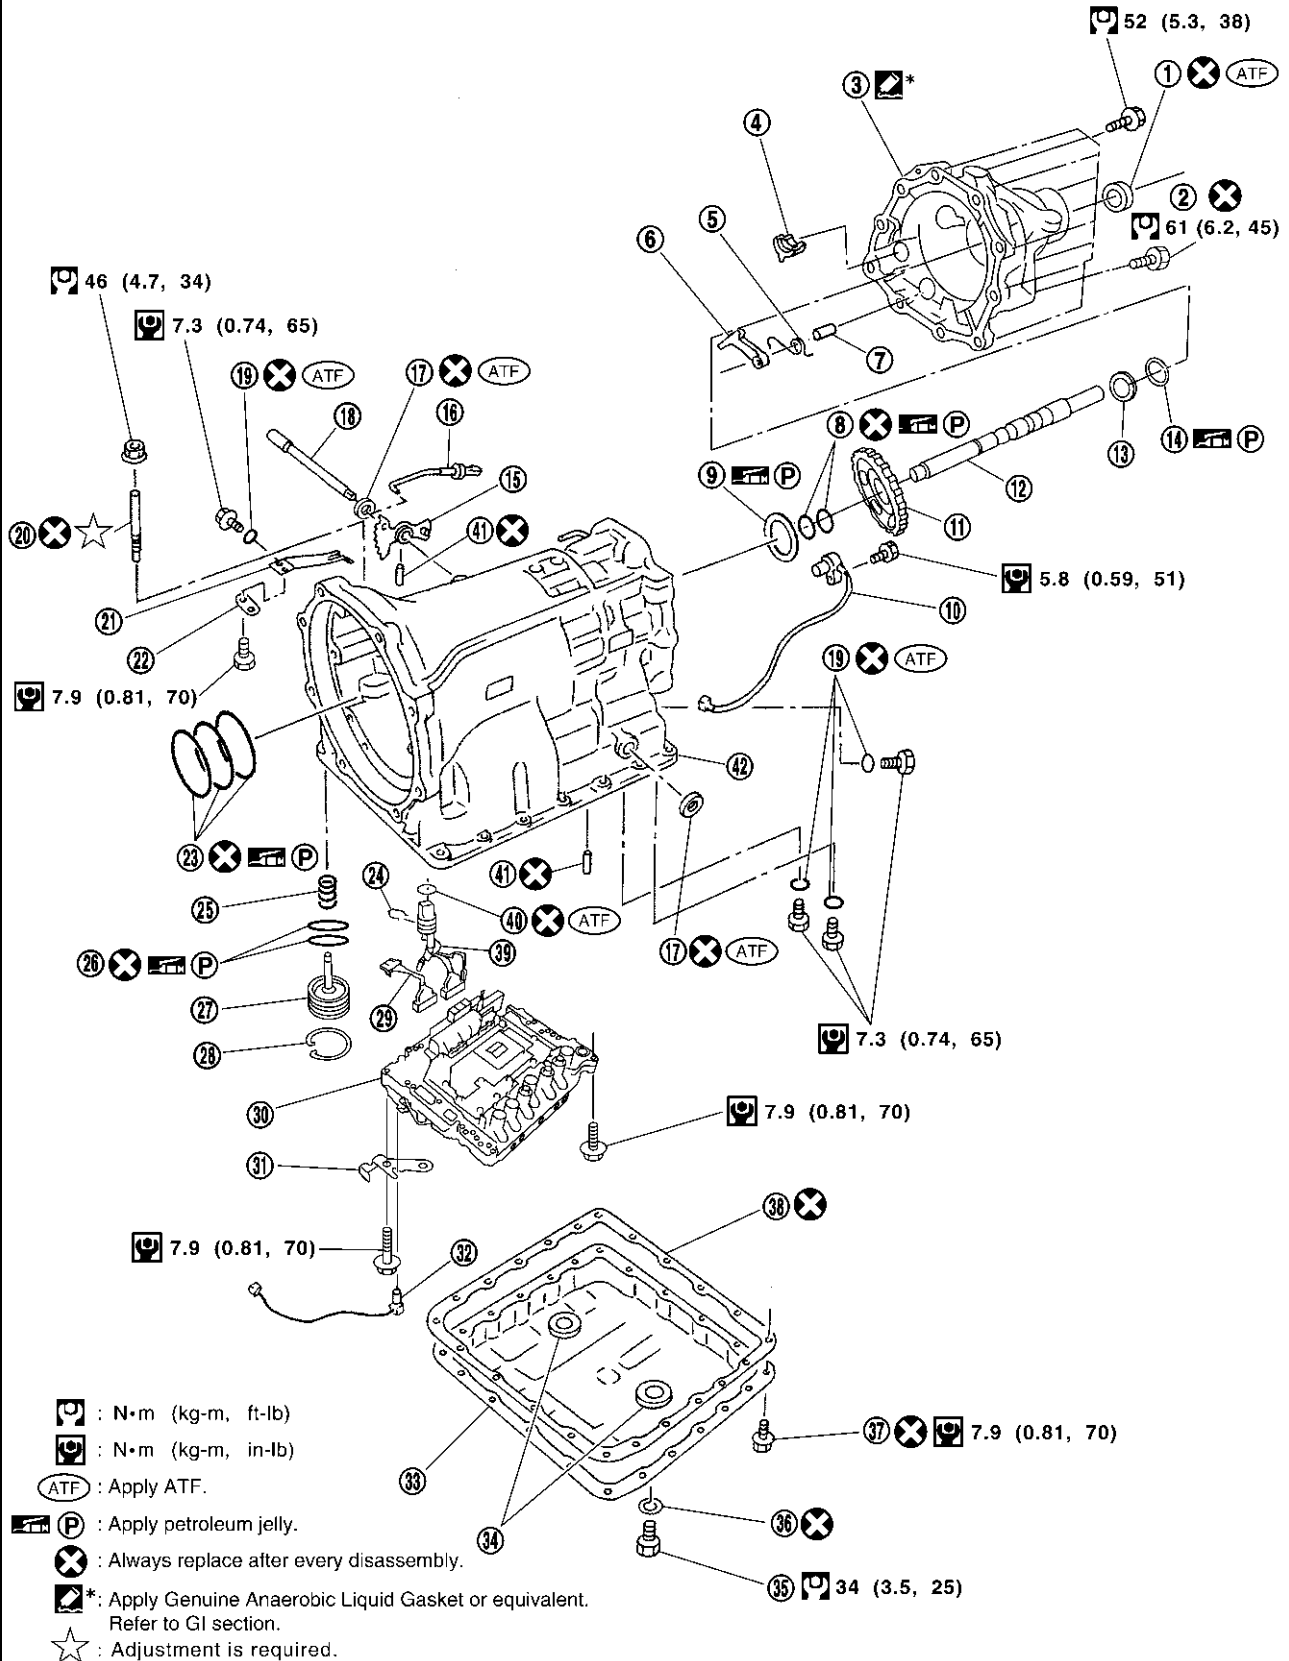

A
B
AT
D
E
F
G
H
I
J
K
L
M

- 1. Rear oil seal
- 4. Parking actuator support
- 7. Pawl shaft

- 2. Self-sealing bolt
- 5. Return spring
- 8. Seal ring

- 3. Rear extension
- 6. Parking pawl
- 9. Needle bearing


OVERHAUL

- | | | |
|---------------------------|------------------------------------|----------------------------|
| 10. Revolution sensor | 11. Parking gear | 12. Output shaft |
| 13. Bearing race | 14. Needle bearing | 15. Manual plate |
| 16. Parking rod | 17. Manual shaft oil seal | 18. Manual shaft |
| 19. O-ring | 20. Band servo anchor end pin | 21. Detent spring |
| 22. Spacer | 23. Seal ring | 24. Snap ring |
| 25. Return spring | 26. O-ring | 27. Servo assembly |
| 28. Snap ring | 29. Sub-harness | 30. Control valve with TCM |
| 31. Bracket | 32. A/T fluid temperature sensor 2 | 33. Oil pan |
| 34. Magnet | 35. Drain plug | 36. Drain plug gasket |
| 37. Oil pan mounting bolt | 38. Oil pan gasket | 39. Terminal cord assembly |
| 40. O-ring | 41. Retaining pin | 42. Transmission case |

OVERHAUL

Oil Channel

ACS008RF

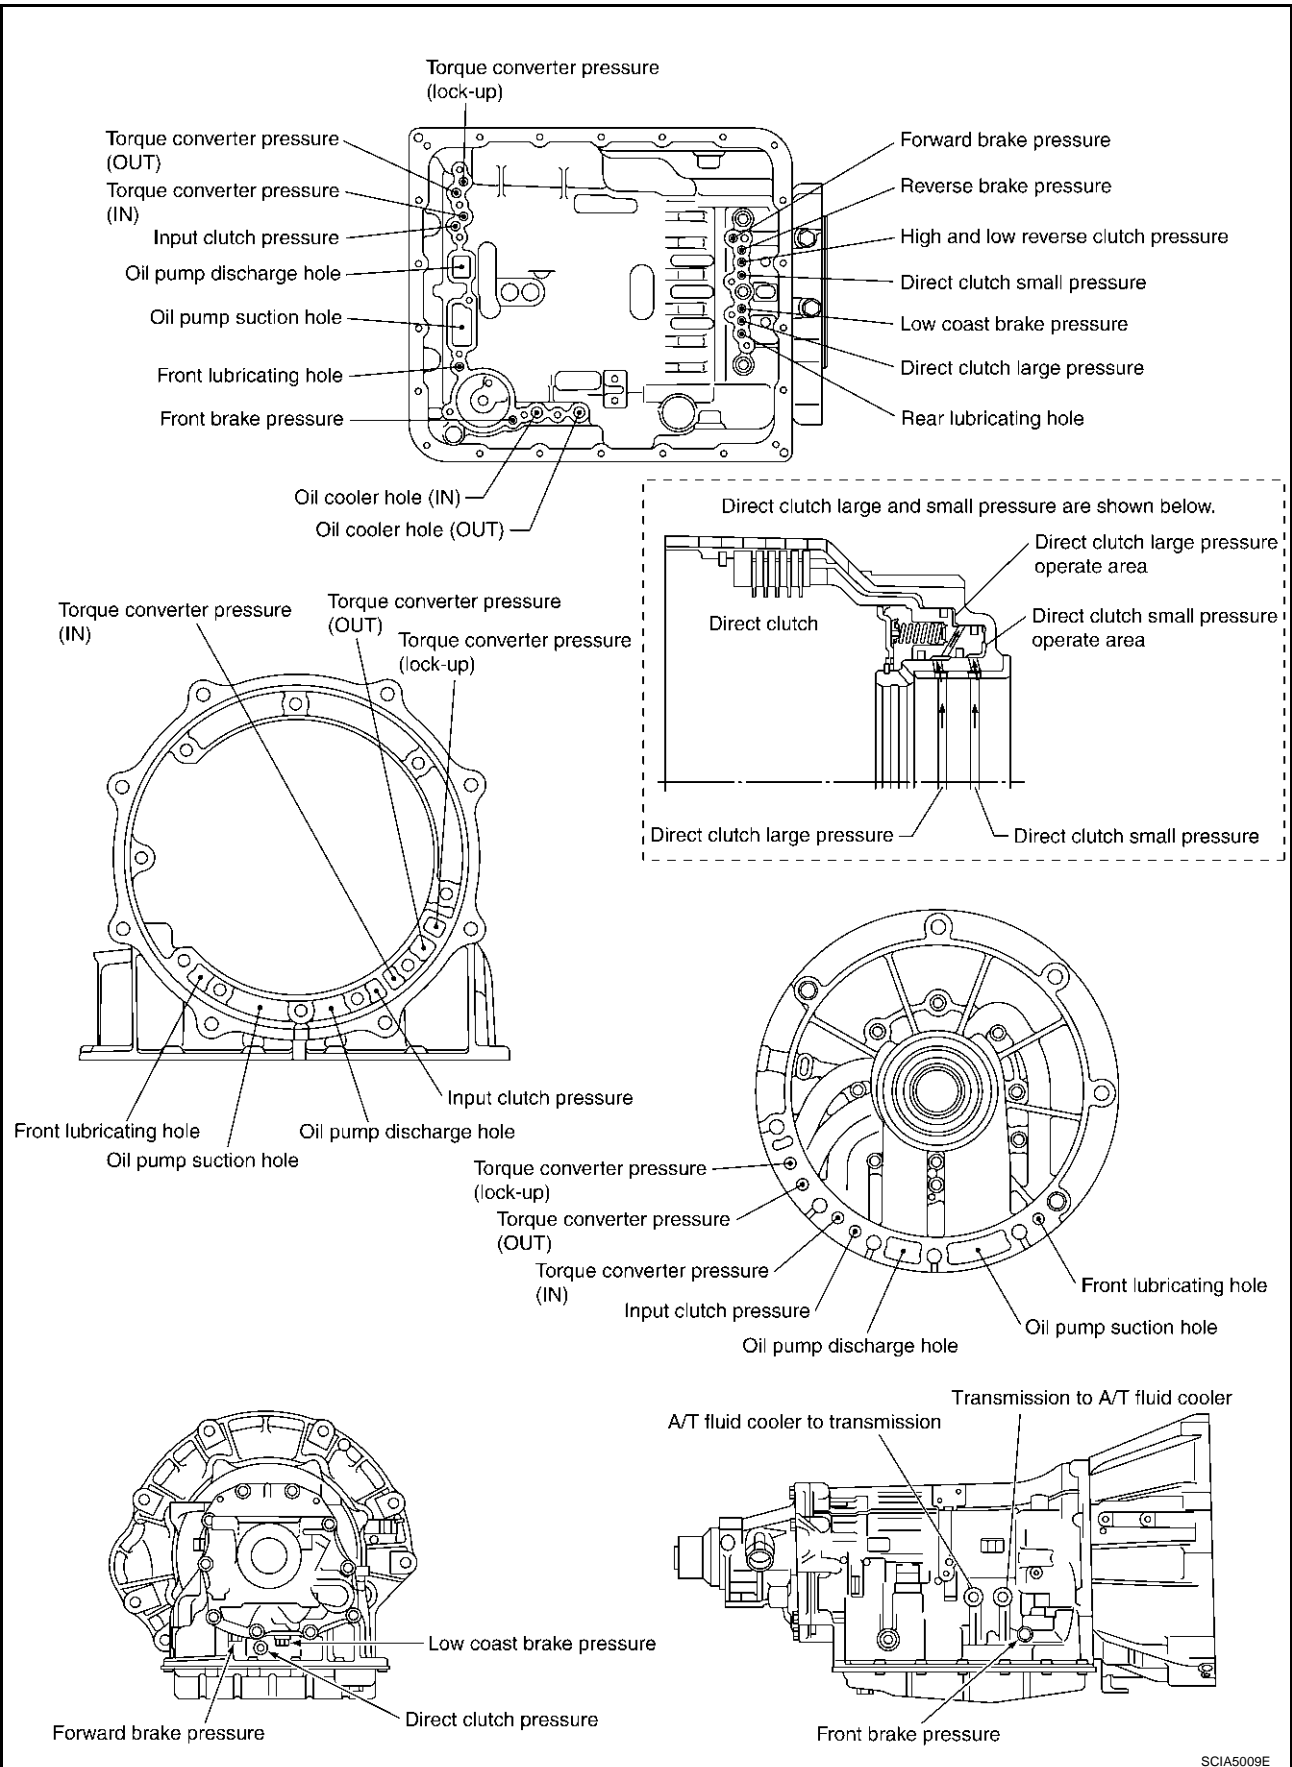


A
B
AT
D
E
F
G
H
I
J
K
L
M

SCIA5009E

OVERHAUL

Locations of Adjusting Shims, Needle Bearings, Thrust Washers and Snap Rings

ACS008RG

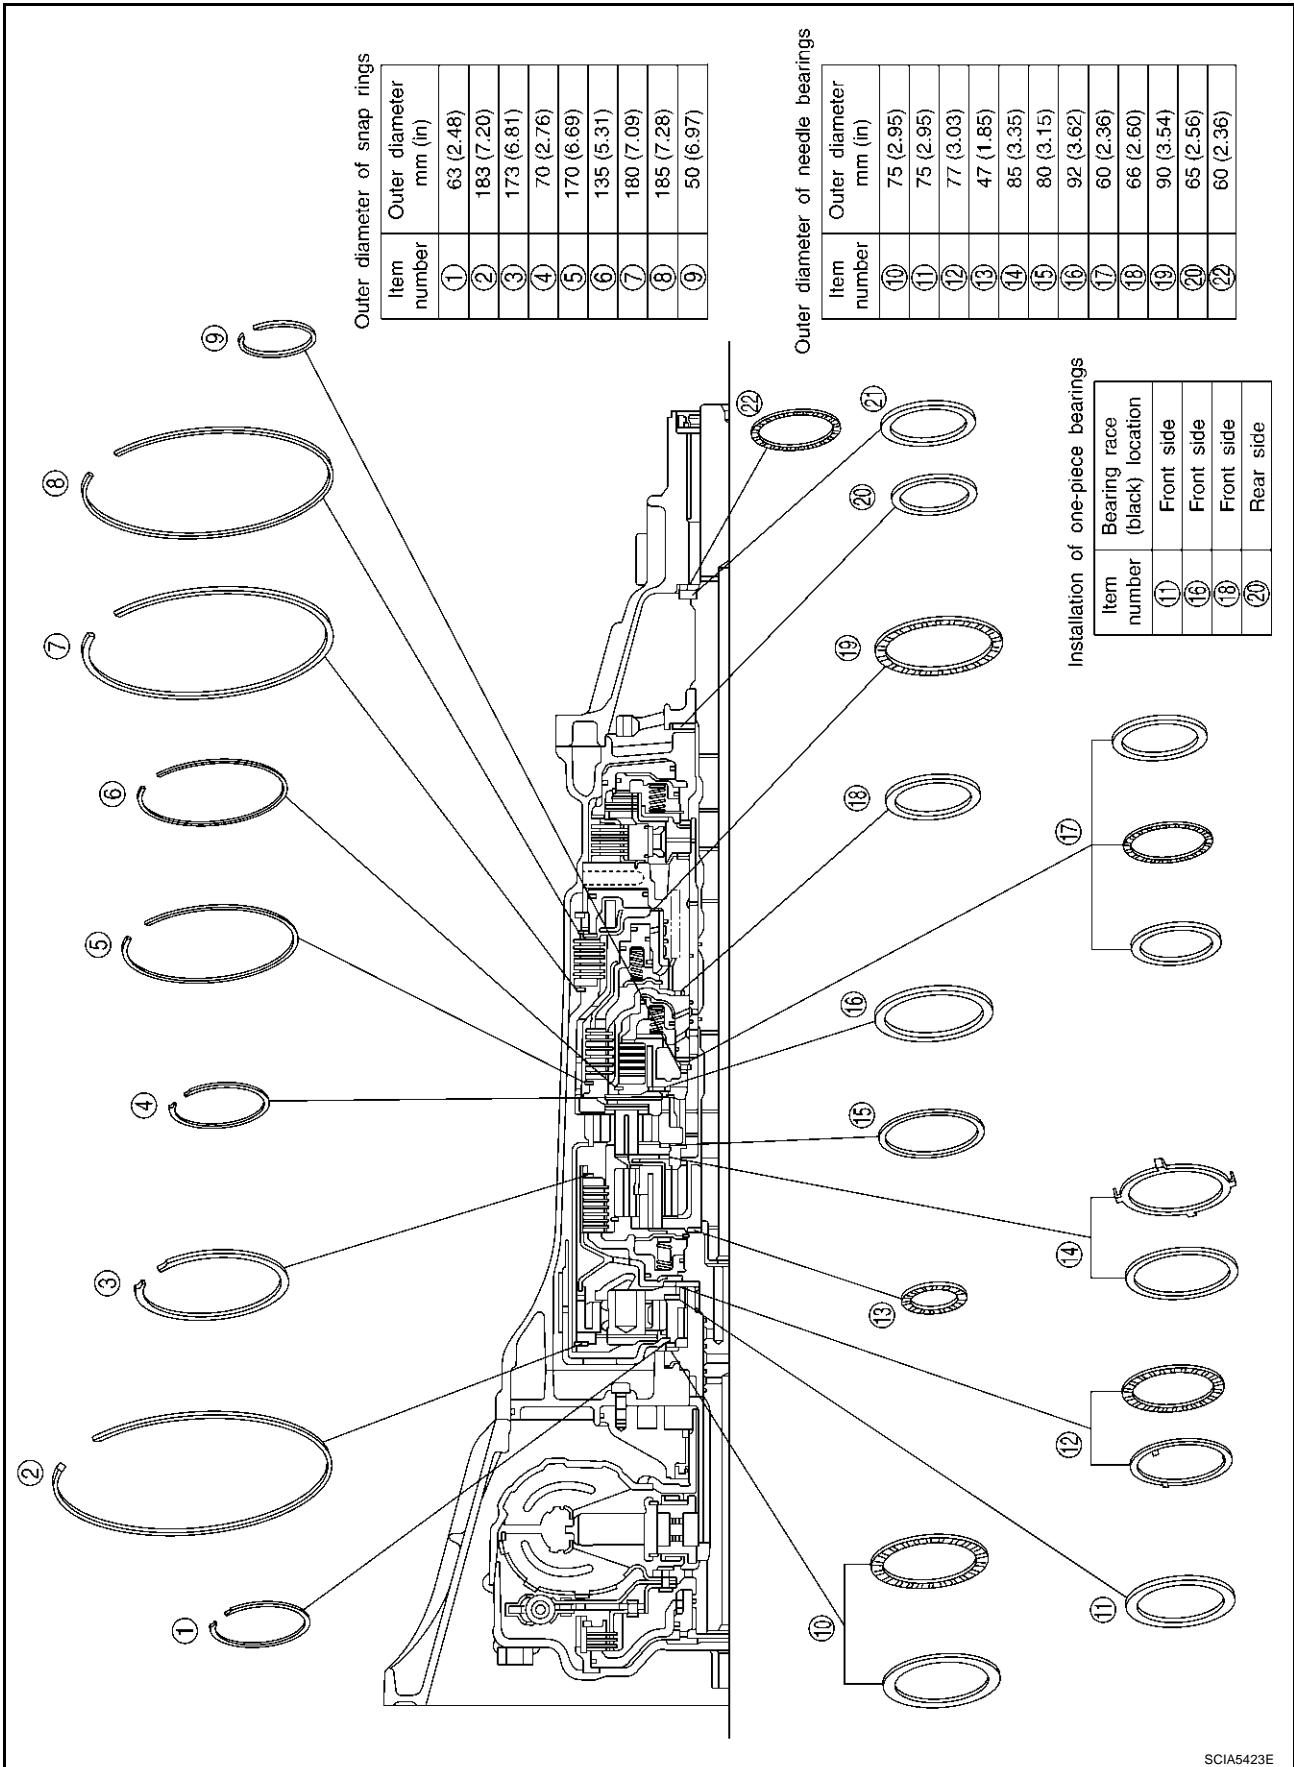

SCIA5423E

DISASSEMBLY

PFP:31020


Disassembly

ACS008RH


CAUTION:

Do not disassemble parts behind Drum Support. Refer to [AT-14, "Cross-Sectional View"](#) .

1. Drain ATF through drain plug.
2. Remove torque converter by holding it firmly and turing while pulling straight out.

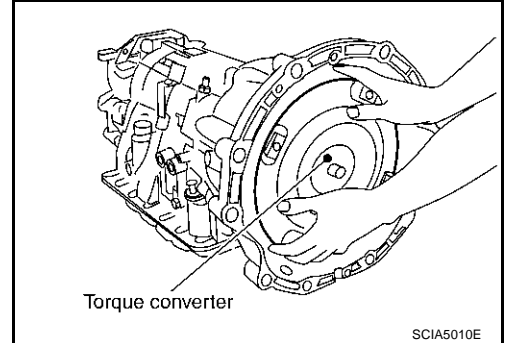


3. Check torque converter one-way clutch using check tool as shown at figure.
 - a. Insert check tool into the groove of bearing support built into one-way clutch outer race.
 - b. When fixing bearing support with check tool, rotate one-way clutch spline using screwdriver.
 - c. Check that inner race rotates clockwise only. If not, replace torque converter assembly.

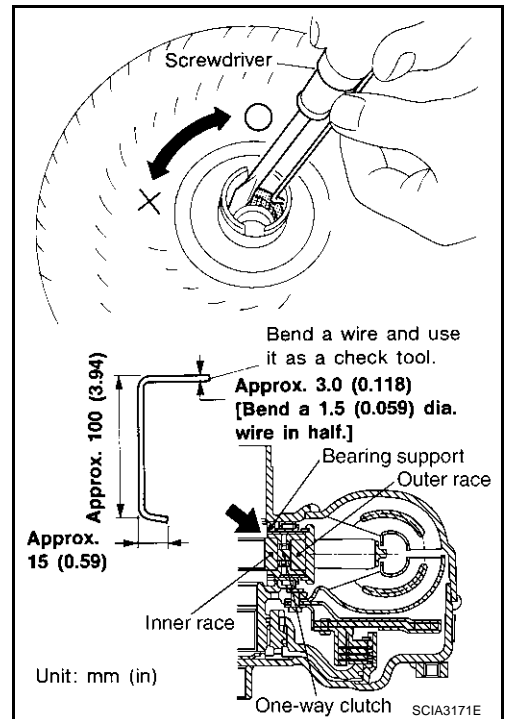

4. Remove converter housing from transmission case.

CAUTION:


Be careful not to scratch converter housing.

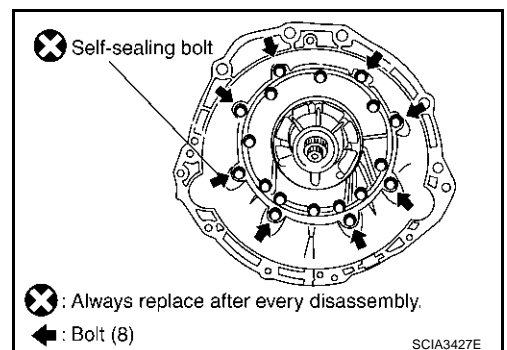


A
B
AT
D
E
F
G
H
I
J
K
L
M

DISASSEMBLY

5. Remove O-ring from input clutch assembly.

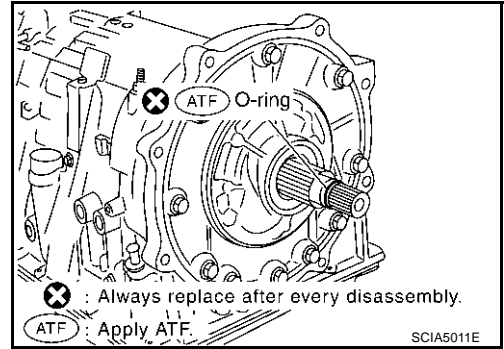


6. Remove tightening bolts for oil pump assembly and transmission case.

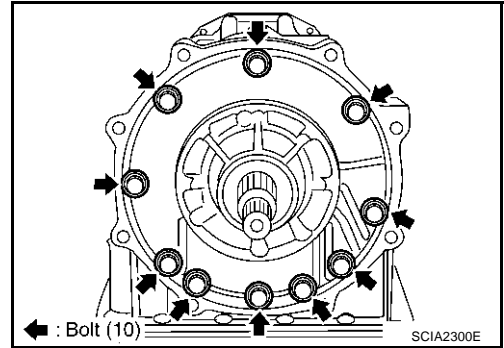


7. Attach the sliding hammers to oil pump assembly and extract it evenly from transmission case.

CAUTION:

- Fully tighten sliding hammer screw.
- Make sure that bearing race is installed to the oil pump assembly edge surface.

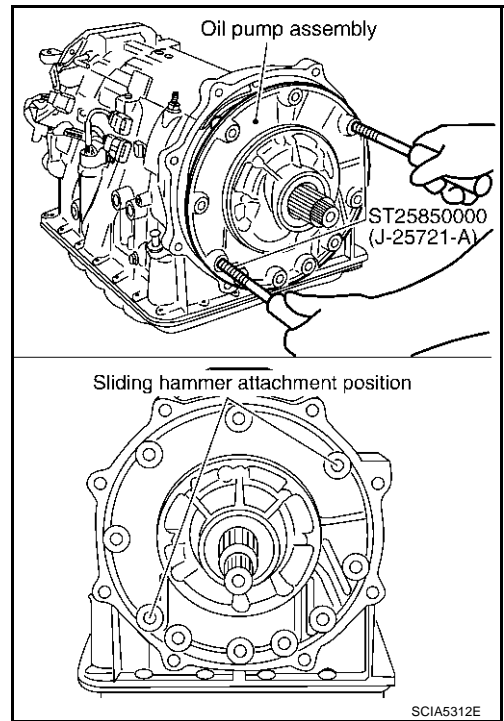

8. Remove O-ring from oil pump assembly.
9. Remove bearing race from oil pump assembly.
10. Remove needle bearing from front sun gear.

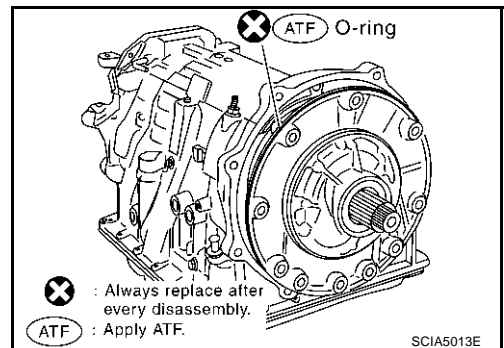


DISASSEMBLY


11. Remove front sun gear assembly from front carrier assembly.

NOTE:

Remove front sun gear by rotating left/right.

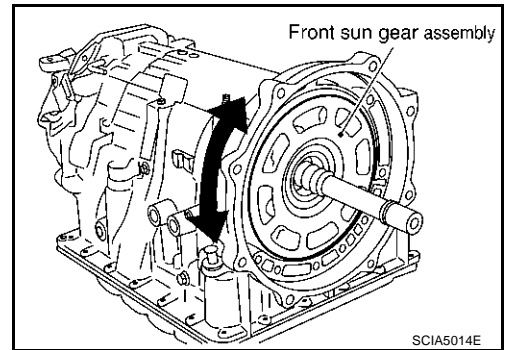


12. Remove seal rings from input clutch assembly.

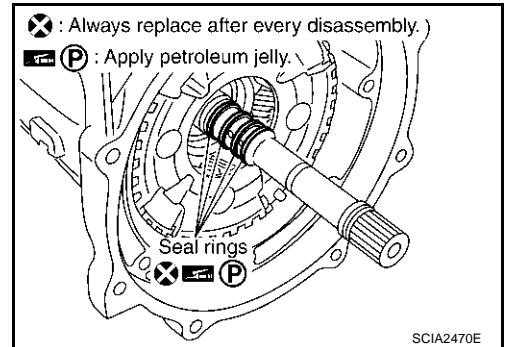


13. Remove front carrier assembly from rear carrier assembly. (With input clutch assembly and rear internal gear.)

CAUTION:


Be careful to remove it with needle bearing.

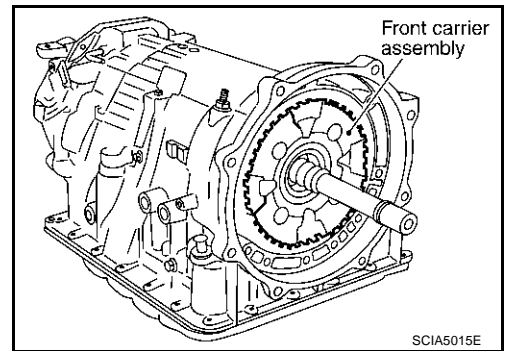

14. Loosen lock nut and remove band servo anchor end pin from transmission case.

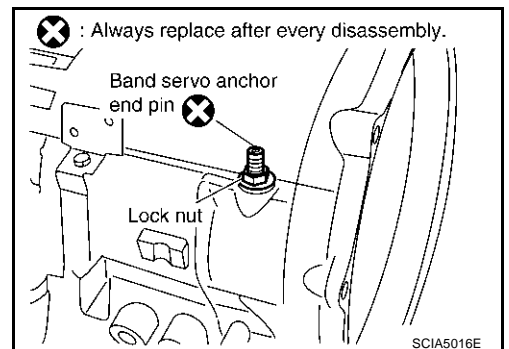


15. Remove brake band from transmission case.

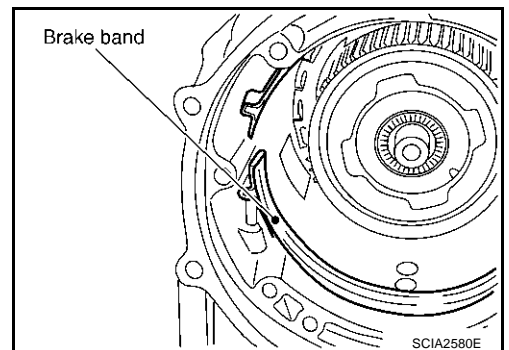


A
B
AT
D
E
F
G
H
I
J
K
L
M

DISASSEMBLY


- To prevent brake linings from cracking or peeling, do not stretch the flexible band unnecessarily. When removing the brake band, always secure it with a clip as shown in the figure at right. Leave the clip in position after removing the brake band.
- Check brake band facing for damage, cracks, wear or burns.

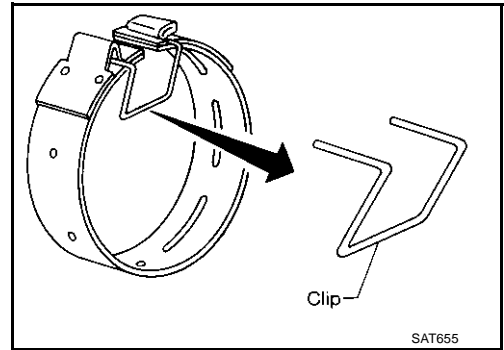


16. Remove mid carrier assembly and rear carrier assembly as a unit.

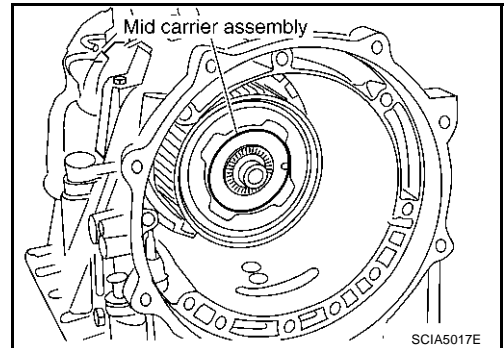

17. Remove mid carrier assembly from rear carrier assembly.
18. Remove needle bearing (front side) from mid carrier assembly.

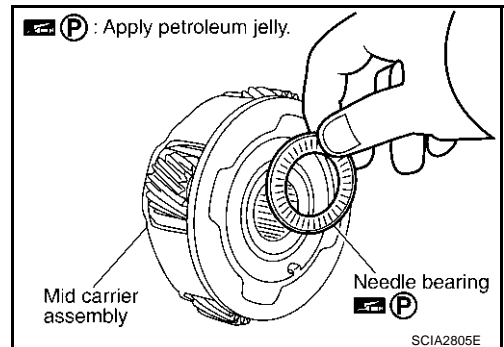


19. Remove needle bearing (rear side) from mid carrier assembly.

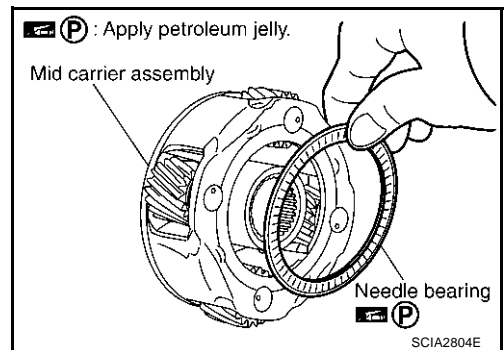


DISASSEMBLY

20. Remove bearing race from rear carrier assembly.

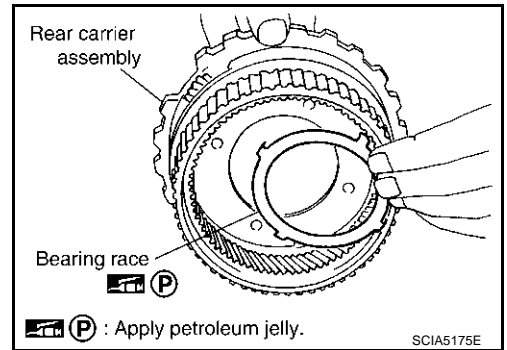


21. Remove needle bearing from rear carrier assembly.

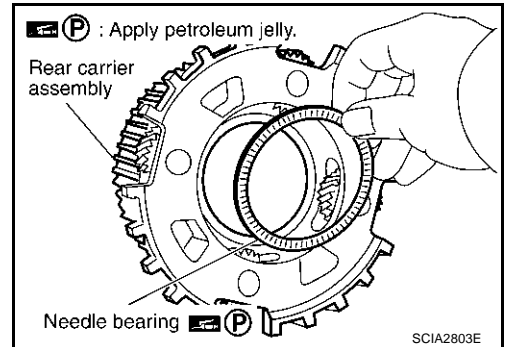

22. Remove mid sun gear assembly, rear sun gear assembly and high and low reverse clutch hub as a unit.

CAUTION:


Be careful to remove them with bearing race and needle bearing.

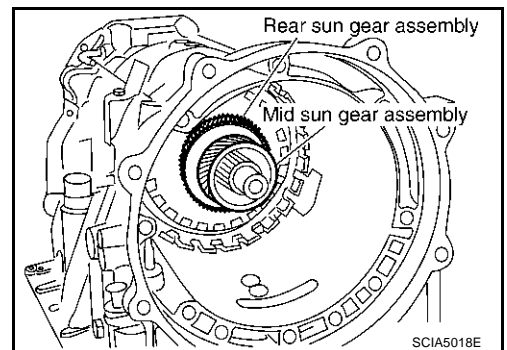


23. Remove high and low reverse clutch assembly from direct clutch assembly.

CAUTION:

Make sure that needle bearing is installed to the high and low reverse clutch assembly edge surface.

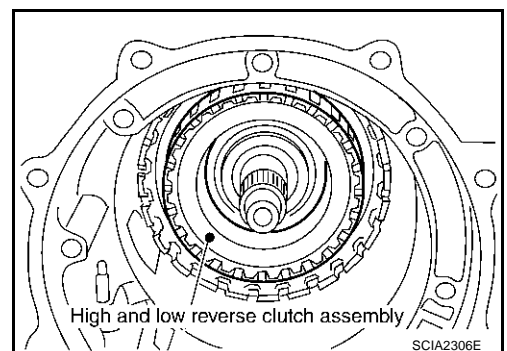


24. Remove direct clutch assembly from reverse brake.

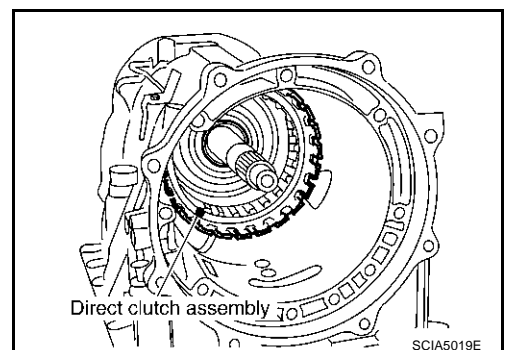


A
B
AT
D
E
F
G
H
I
J
K
L
M

DISASSEMBLY

25. Remove needle bearing from drum support.

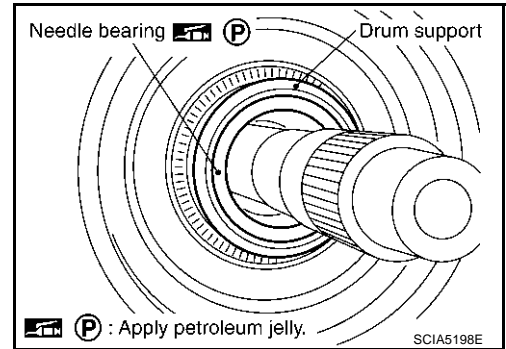


26. Remove snap ring from A/T assembly harness connector.

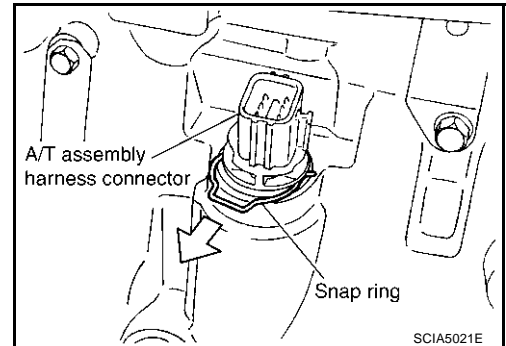


27. Push A/T assembly harness connector.

CAUTION:
Be careful not to damage connector.

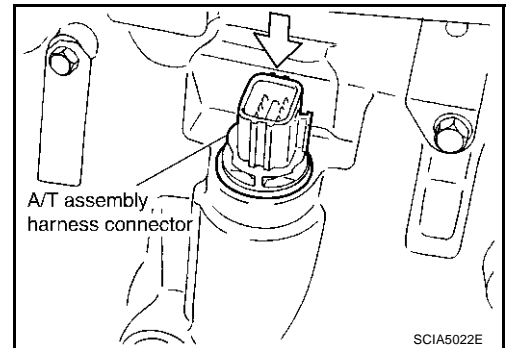


28. Remove oil pan and oil pan gasket.

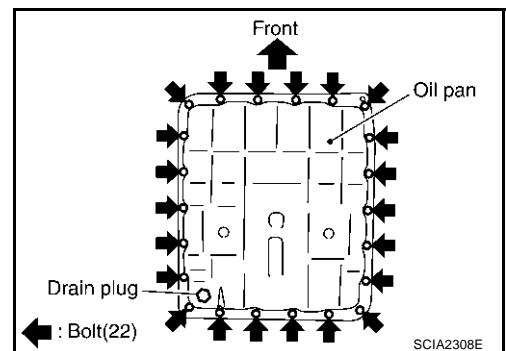


29. Check foreign materials in oil pan to help determine causes of malfunction. If the fluid is very dark, smells burned, or contains foreign particles, the frictional material (clutches, band) may need replacement. A tacky film that will not wipe clean indicates varnish build up. Varnish can cause valves, servo, and clutches to stick and can inhibit pump pressure.

- If frictional material is detected, replace radiator after repair of A/T. Refer to [CO-11. "RADIATOR"](#) .

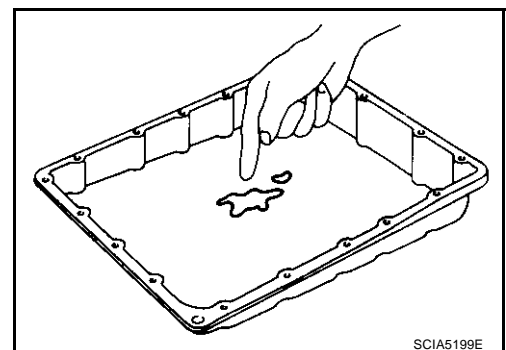


DISASSEMBLY

30. Remove magnets from oil pan.

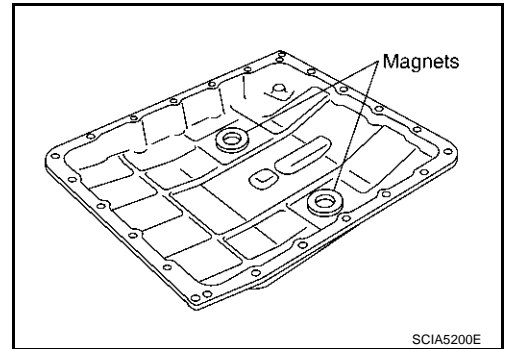


31. Disconnect A/T fluid temperature sensor 2 connector.

CAUTION:
Be careful not to damage connector.

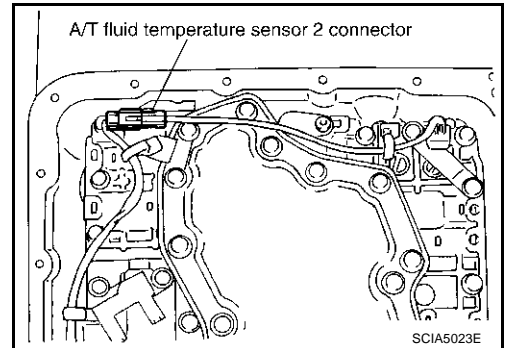


32. Straighten terminal clips to free terminal cord assembly and A/T fluid temperature sensor 2 harness.

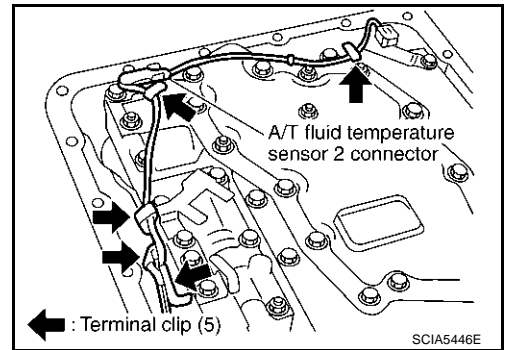


33. Disconnect revolution sensor connector.

CAUTION:
Be careful not to damage connector.

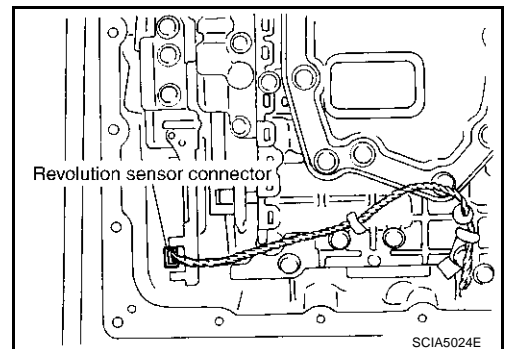

34. Straighten terminal clips to free revolution sensor harness.

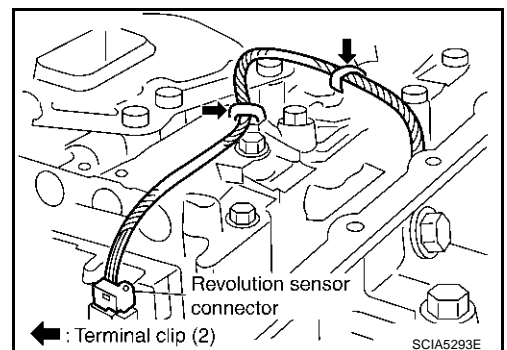


A
B
AT
D
E
F
G
H
I
J
K
L
M

DISASSEMBLY

35. Remove bolts A, B and C from control valve with TCM.


Bolt symbol	Length mm (in)	Number of bolts
A	42 (1.65)	5
B	55 (2.17)	6
C	40 (1.57)	1

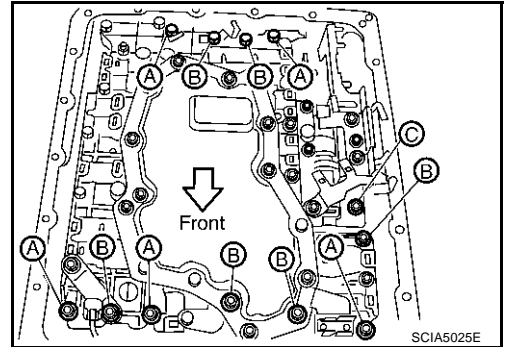


36. Remove control valve with TCM from transmission case.

CAUTION:


When removing, be careful with the manual valve notch and manual plate height. Remove it vertically.

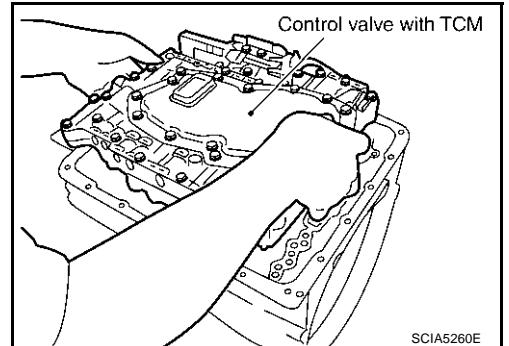


37. Remove A/T fluid temperature sensor 2 with bracket from control valve with TCM.

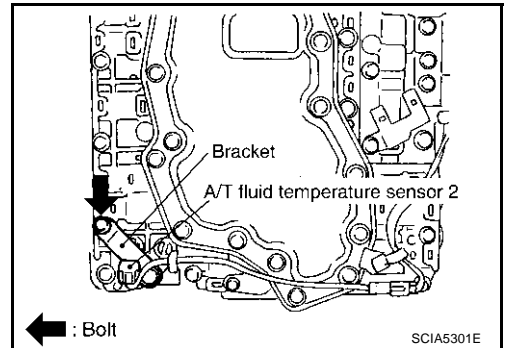

38. Remove bracket from A/T fluid temperature sensor 2.

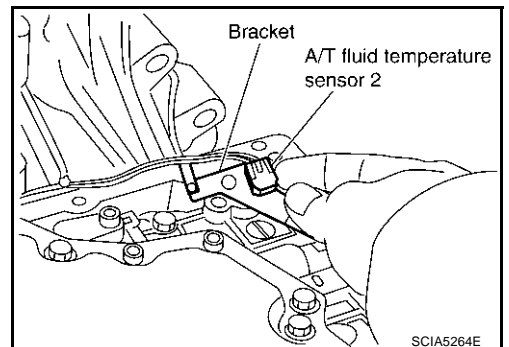


39. Remove O-ring from A/T assembly harness connector.

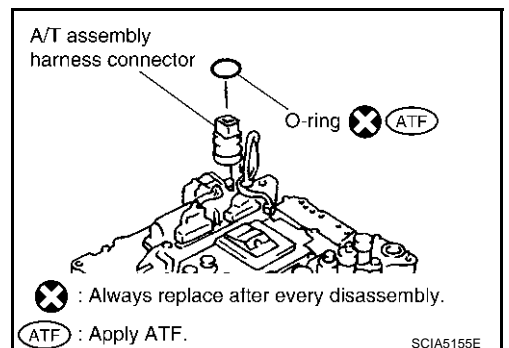


DISASSEMBLY

40. Disconnect TCM connectors.

CAUTION:
Be careful not to damage connectors.

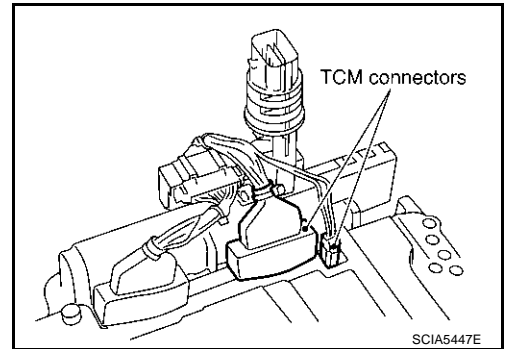


41. Remove A/T assembly harness connector from control valve with TCM using a flat-bladed screwdriver.

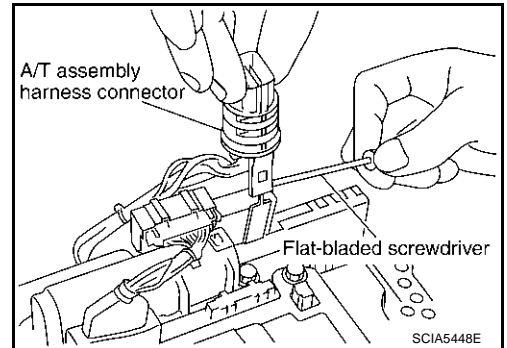


42. Disconnect TCM connector and park/neutral position switch connector.


CAUTION:
Be careful not to damage connectors.

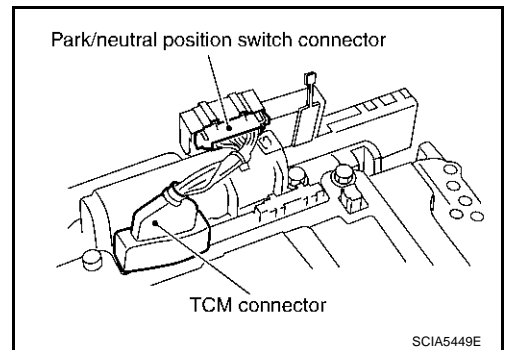

43. Remove tightening bolts for rear extension assembly and transmission case.

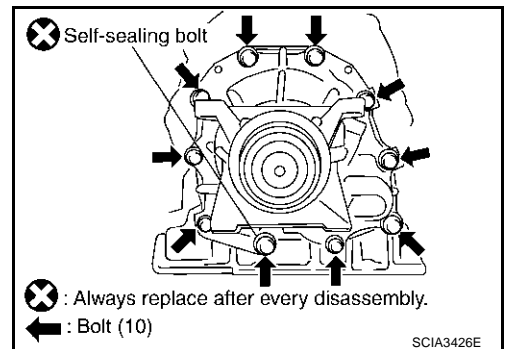


44. Tap rear extension assembly with soft hammer.

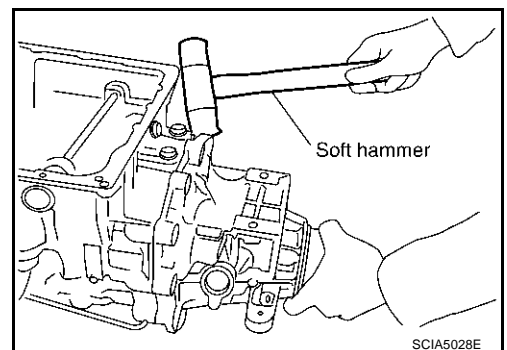


A
B
AT
D
E
F
G
H
I
J
K
L
M

DISASSEMBLY


45. Remove rear extension assembly from transmission case. (With needle bearing)

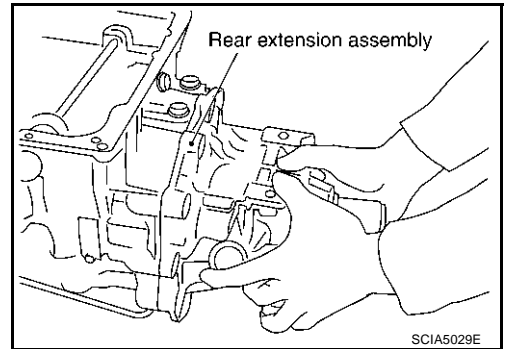


46. Remove bearing race from output shaft.

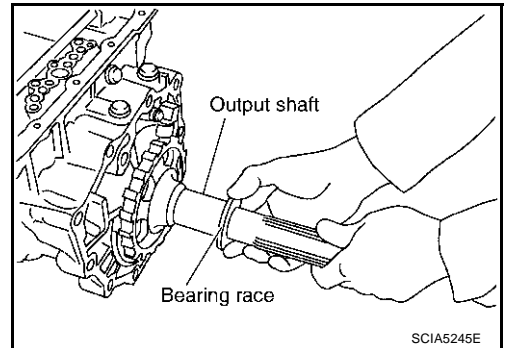


47. Remove output shaft from transmission case by rotating left/right.

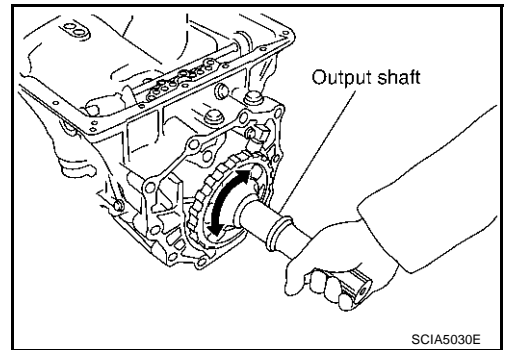

48. Remove parking gear from output shaft.

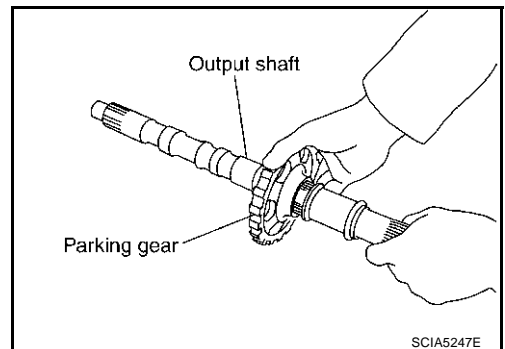


49. Remove seal rings from output shaft.

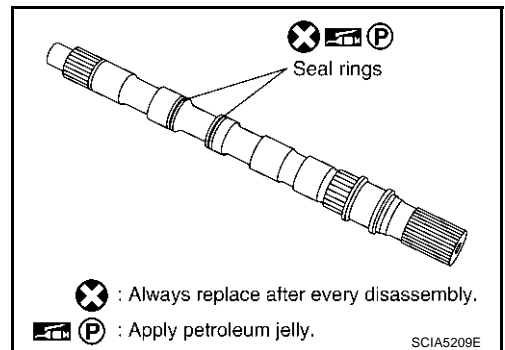

DISASSEMBLY


50. Remove needle bearing from transmission case.

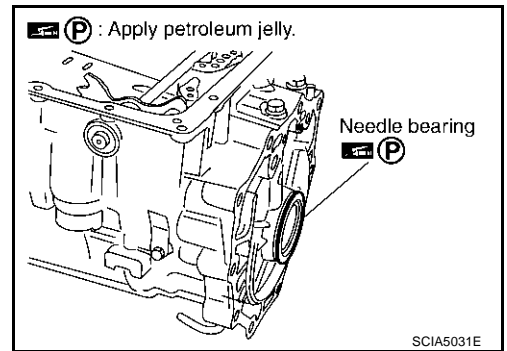

51. Remove revolution sensor from transmission case.

CAUTION:


- Do not subject it to impact by dropping or hitting it.
- Do not disassemble.
- Do not allow metal filings, etc., to get on the sensor's front edge magnetic area.
- Do not place in an area affected by magnetism.

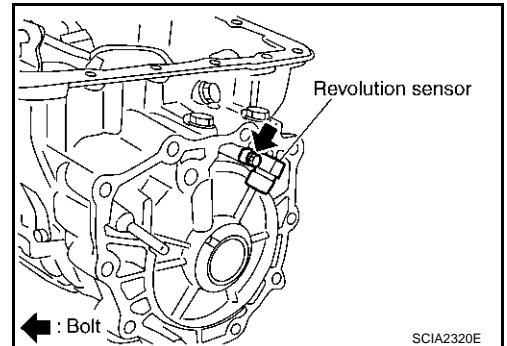

52. Remove reverse brake snap ring (fixing plate) using 2 flat-bladed screwdrivers.

NOTE:


Press out snap ring from the transmission case oil pan side gap using a flat-bladed screwdriver, and remove it using another screwdriver.

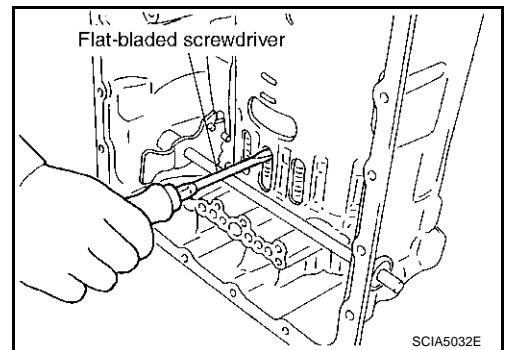


53. Remove reverse brake retaining plate, drive plates, driven plates and dish plate from transmission case.

CAUTION:

Be careful to remove it with N-spring.

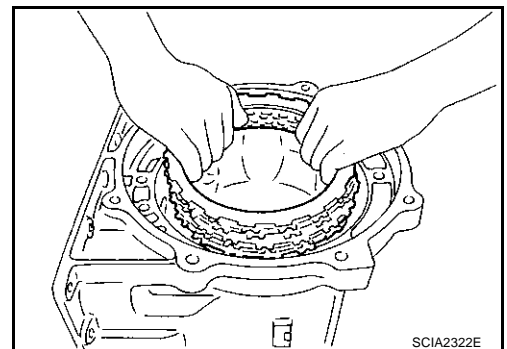


54. Remove snap ring (fixing spring retainer) using a flat-bladed screwdriver.

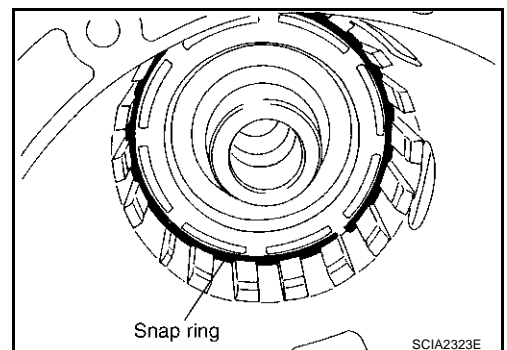


A
B
AT
D
E
F
G
H
I
J
K
L
M

DISASSEMBLY


55. Remove spring retainer and return spring from transmission case.

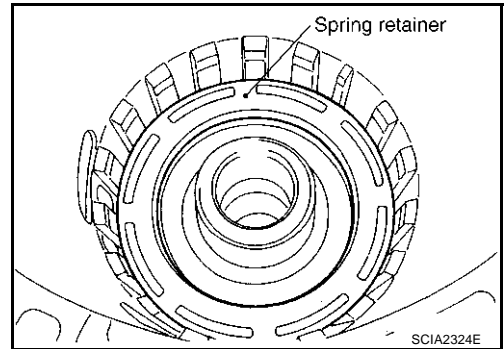

56. Remove seal rings from drum support.

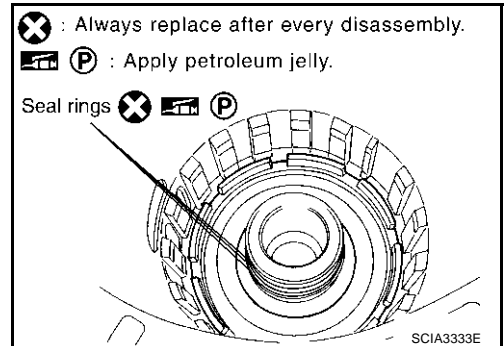


57. Remove needle bearing from drum support edge surface.

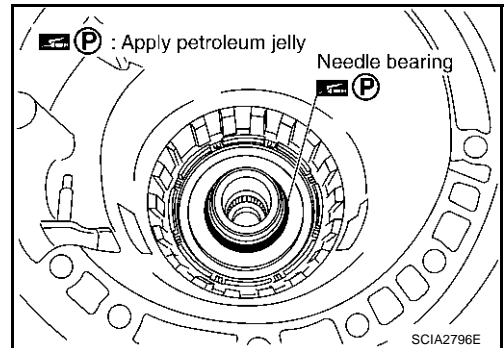

58. Remove reverse brake piston from transmission case with compressed air. Refer to [AT-261, "Oil Channel"](#) .


CAUTION:

Care should be taken not to abruptly blow air. It makes pistons incline, as the result, it becomes hard to disassemble the pistons.

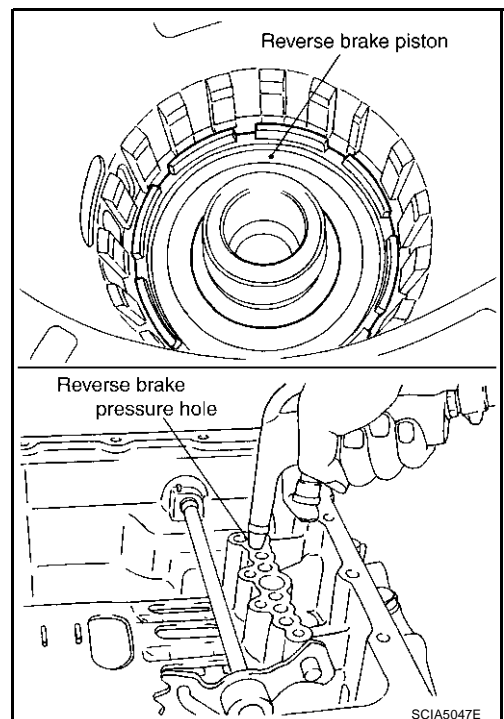


DISASSEMBLY


59. Remove lip seal and D-ring from reverse brake piston.

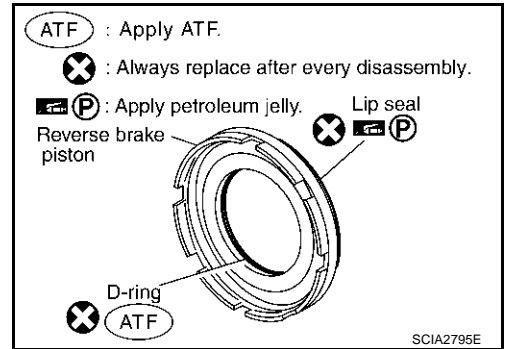


60. Use a pin punch (4mm dia. commercial service tool) to knock out retaining pin.

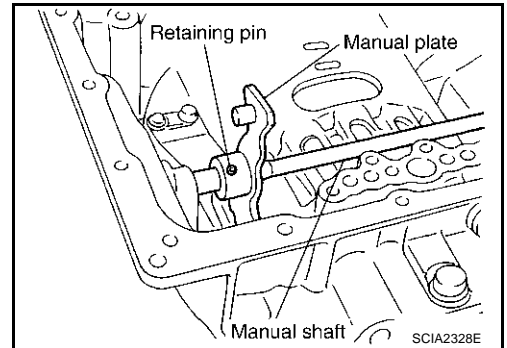


61. Remove manual shaft retaining pin with nippers.
 62. Remove manual plate (with parking rod) from manual shaft.

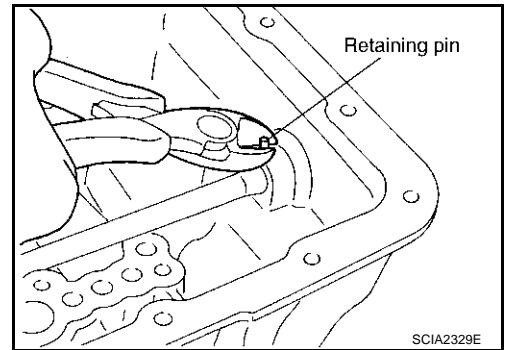

63. Remove parking rod from manual plate.
 64. Remove manual shaft from transmission case.

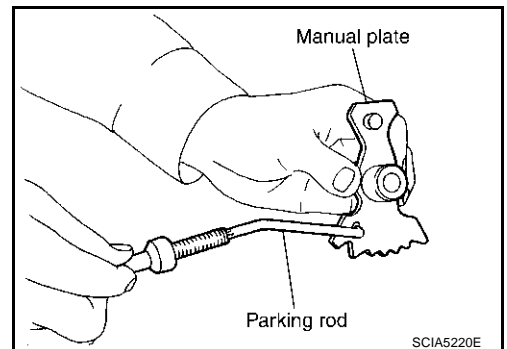


65. Remove manual shaft oil seals using a flat-bladed screwdriver.
CAUTION:
 Be careful not to scratch transmission case.

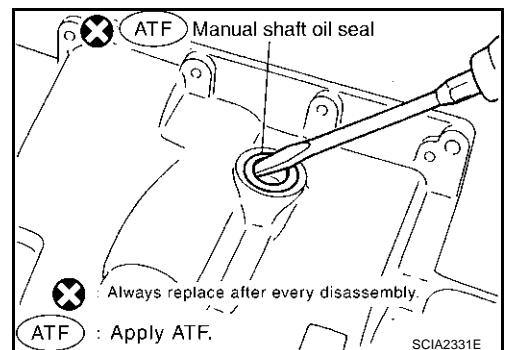


A
 B
 AT
 D
 E
 F
 G
 H
 I
 J
 K
 L
 M

DISASSEMBLY

66. Remove detent spring and spacer from transmission case.

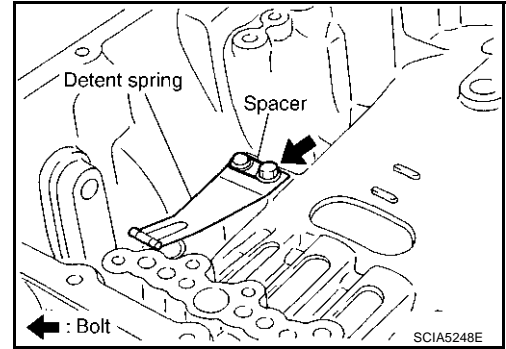


67. Using snap ring pliers, remove snap ring from transmission case.

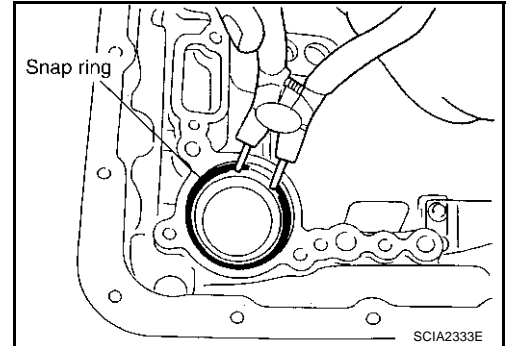


68. Remove servo assembly (with return spring) from transmission case.

69. Remove return spring from servo assembly.


70. Remove O-rings from servo assembly.

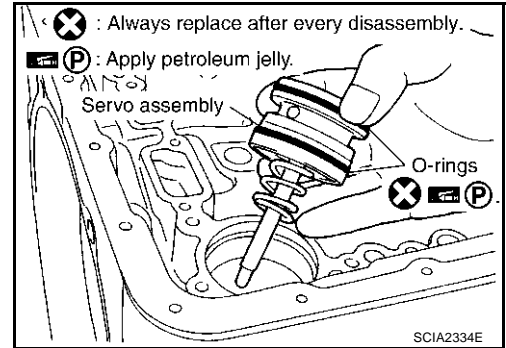

71. Remove parking actuator support from rear extension.

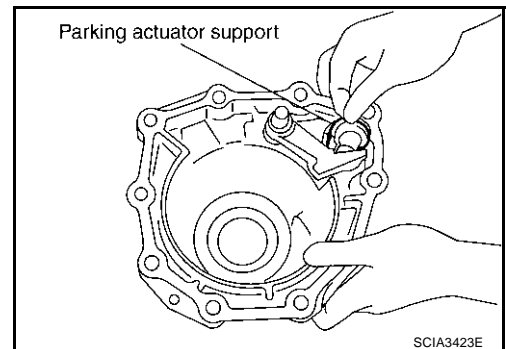


72. Remove parking pawl (with return spring) and pawl shaft from rear extension.

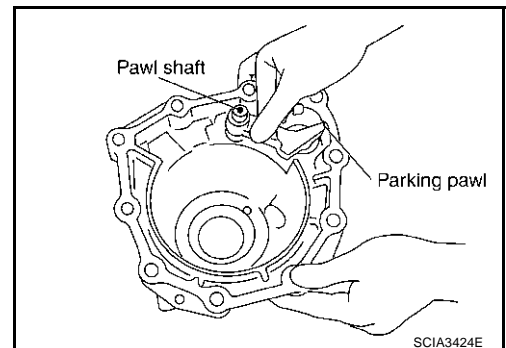

DISASSEMBLY

73. Remove return spring from parking pawl.

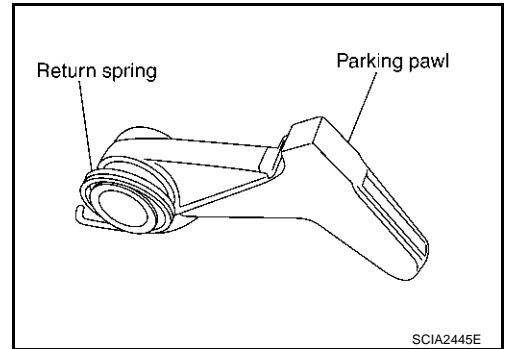


74. Remove needle bearing from rear extension.

75. Remove rear oil seal from rear extension.

CAUTION:

Be careful not to scratch rear extension.

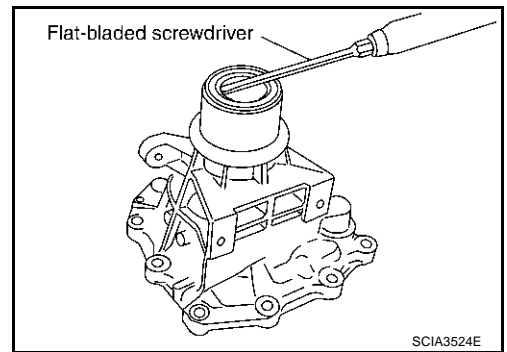

A
B
AT
D
E
F
G
H
I
J
K
L
M


REPAIR FOR COMPONENT PARTS

PFP:00000

ACS008RI


REPAIR FOR COMPONENT PARTS

Oil Pump COMPONENTS

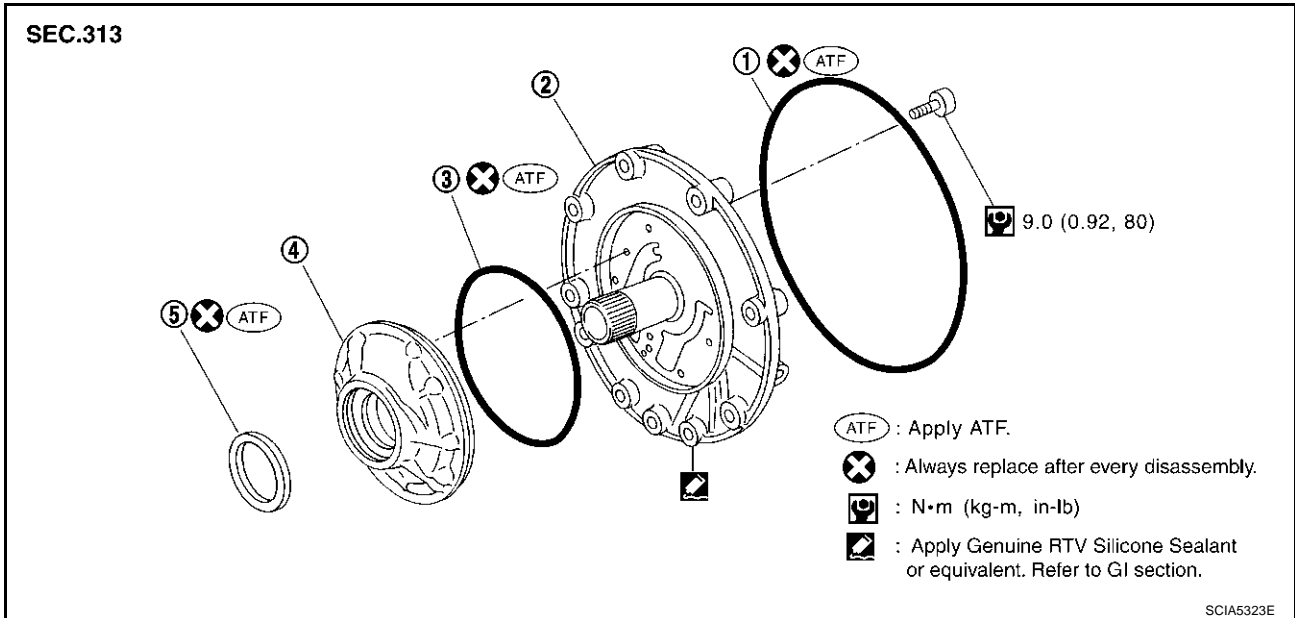

DISASSEMBLY


1. Remove oil pump housing from oil pump cover.

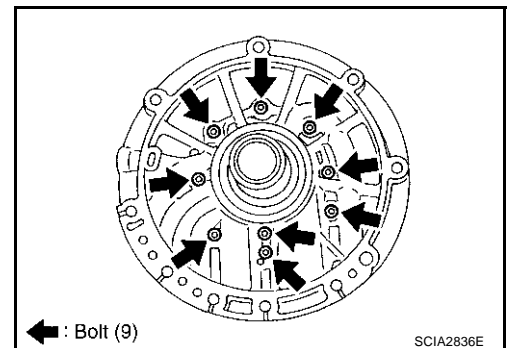

2. Remove oil pump housing oil seal using a flat-bladed screwdriver.


CAUTION:

Be careful not to scratch oil pump housing.

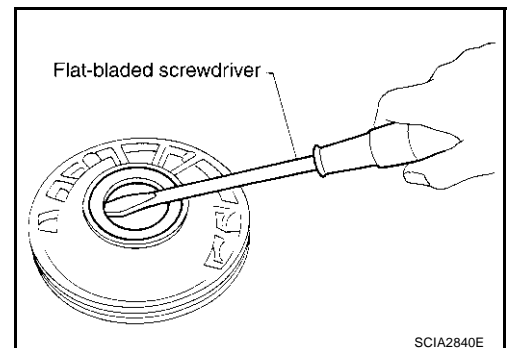


REPAIR FOR COMPONENT PARTS

3. Remove O-ring from oil pump housing.

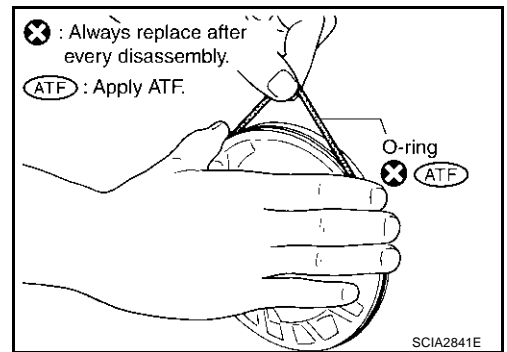

4. Remove O-ring from oil pump cover.

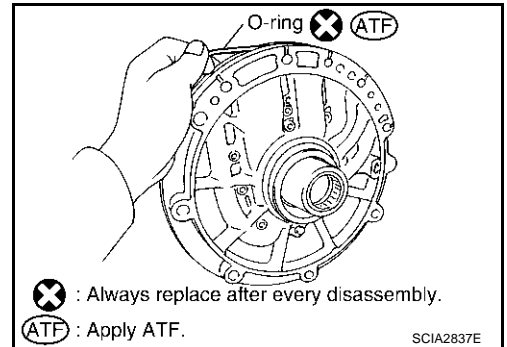


ASSEMBLY

1. Install O-ring to oil pump cover.

CAUTION:


- Do not reuse O-ring.
- Apply ATF to O-ring.

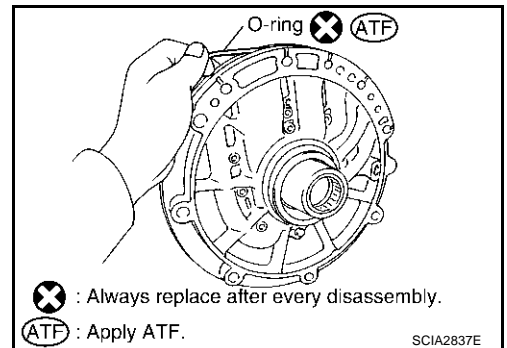

2. Install O-ring to oil pump housing.

CAUTION:

- Do not reuse O-ring.
- Apply ATF to O-ring.

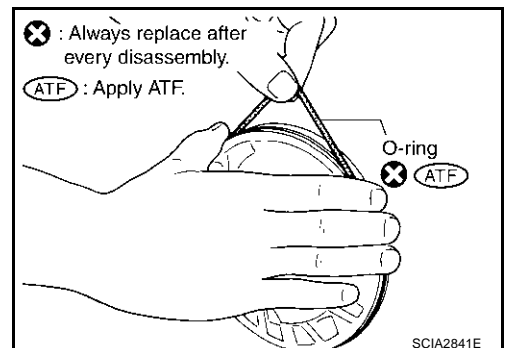


A
B
AT
D
E
F
G
H
I
J
K
L
M

REPAIR FOR COMPONENT PARTS

3. Using a drift, install oil pump housing oil seal to the oil pump housing until it is flush.


CAUTION:

- Do not reuse oil seal.
- Apply ATF to oil seal.

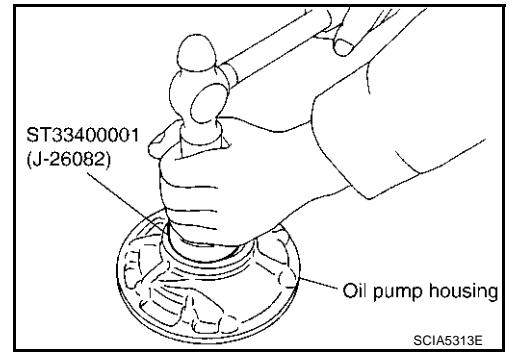

4. Install oil pump housing to oil pump cover.


 : 9.0 N-m (0.92 kg-m, 80 in-lb.)

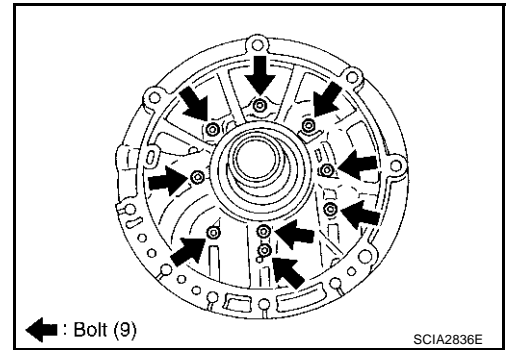

REPAIR FOR COMPONENT PARTS

ACS008RJ

Front Sun Gear, 3rd One-Way Clutch COMPONENTS

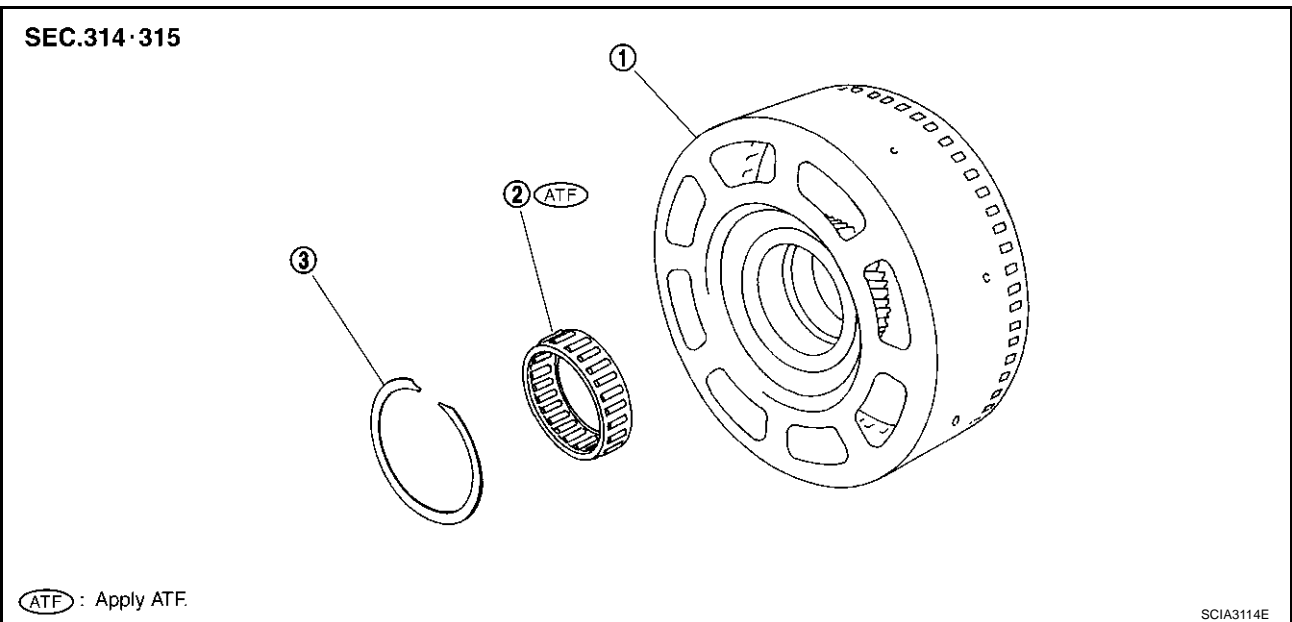


1. Front sun gear

2. 3rd one-way clutch


3. Snap ring

DISASSEMBLY

1. Using a flat-bladed screwdriver, remove snap ring from front sun gear.

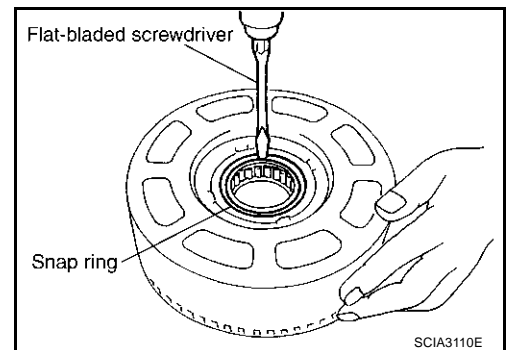

2. Remove 3rd one-way clutch from front sun gear.

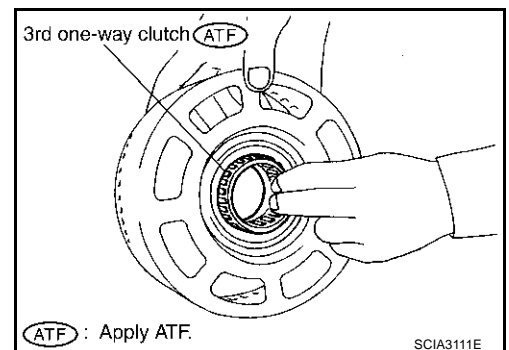

INSPECTION

3rd One-Way Clutch

- Check frictional surface for wear or damage.

CAUTION:

If necessary, replace the 3rd one-way clutch.

Front Sun Gear Snap Ring

- Check for deformation, fatigue or damage.

A
B
AT
D
E
F
G
H
I
J
K
L
M

REPAIR FOR COMPONENT PARTS

CAUTION:

If necessary, replace the snap ring.

Front Sun Gear

- Check for deformation, fatigue or damage.

CAUTION:


If necessary, replace the front sun gear.

ASSEMBLY


1. Install 3rd one-way clutch in front sun gear.

CAUTION:

Apply ATF to 3rd one-way clutch.

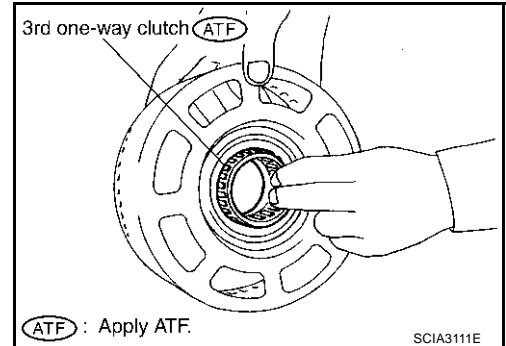


2. Using a flat-bladed screwdriver, install snap ring in front sun gear.

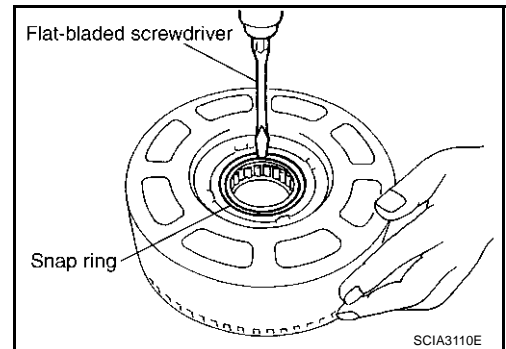

3. Check operation of 3rd one-way clutch.
 - a. Hold oil pump assembly and turn front sun gear.
 - b. Check 3rd one-way clutch for correct locking and unlocking directions.

CAUTION:

If not as shown in illustration, check installation direction of 3rd one-way clutch.


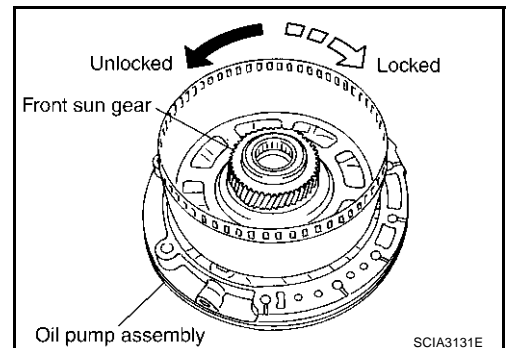


REPAIR FOR COMPONENT PARTS

ACS008RK

Front Carrier, Input Clutch, Rear Internal Gear COMPONENTS

SEC.314 .315

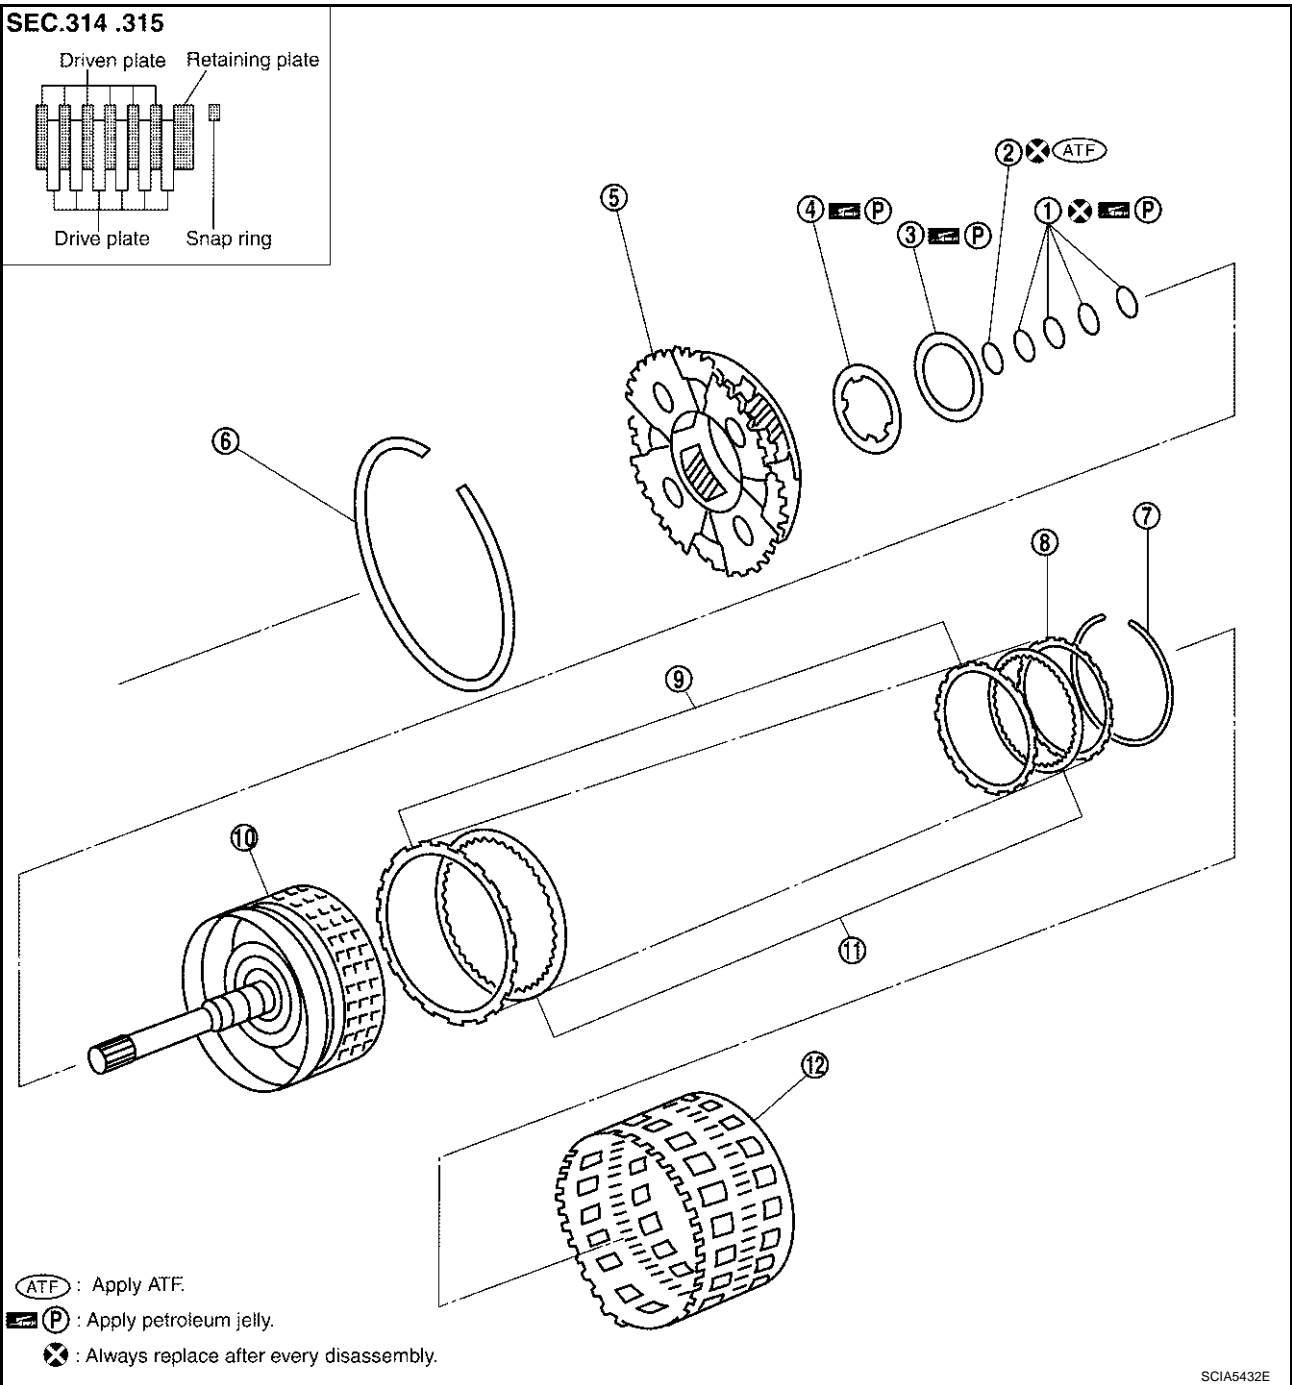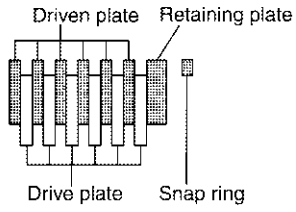

- : Apply ATF.
- : Apply petroleum jelly.
- : Always replace after every disassembly.

SCIA5432E


- | | | |
|-----------------------|---------------------------|------------------------|
| 1. Seal ring | 2. O-ring | 3. Needle bearing |
| 4. Bearing race | 5. Front carrier assembly | 6. Snap ring |
| 7. Snap ring | 8. Retaining plate | 9. Driven plate |
| 10. Input clutch drum | 11. Drive plate | 12. Rear internal gear |

A
B
AT
D
E
F
G
H
I
J
K
L
M


REPAIR FOR COMPONENT PARTS

DISASSEMBLY

1. Compress snap ring using 2 flat-bladed screwdrivers.
2. Remove front carrier assembly and input clutch assembly from rear internal gear.
3. Remove front carrier assembly from input clutch assembly.

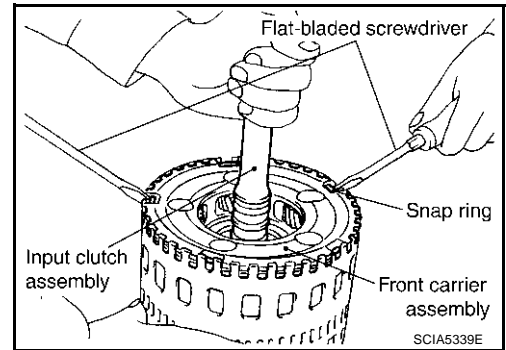


- a. Remove bearing race from front carrier assembly.

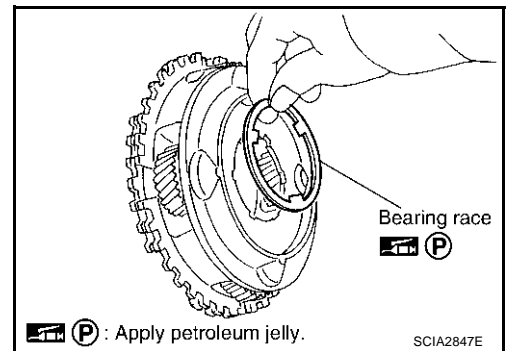

- b. Remove snap ring from front carrier assembly.


CAUTION:

Do not expand snap ring excessively.

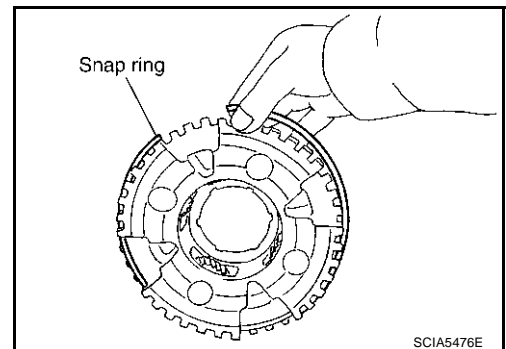

4. Disassemble input clutch assembly.

- a. Remove O-ring and seal rings from input clutch assembly.

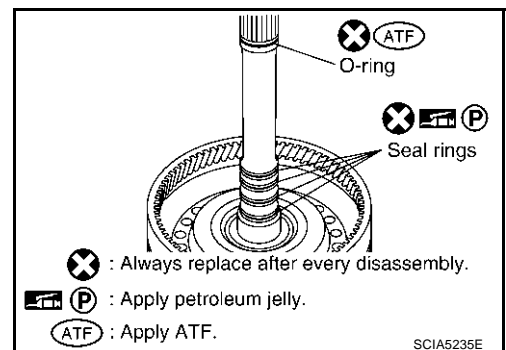


⊗ : Always replace after every disassembly.

Ⓟ : Apply petroleum jelly.


Ⓜ : Apply ATF.

REPAIR FOR COMPONENT PARTS

- b. Remove needle bearing from input clutch assembly.

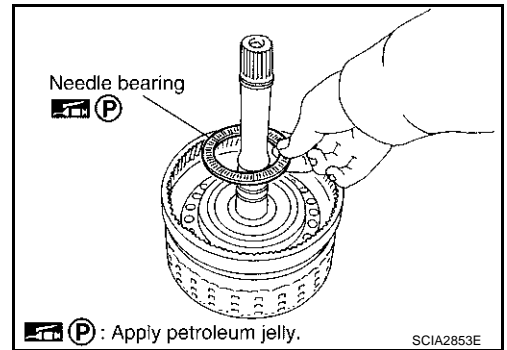

- c. Using a flat-bladed screwdriver, remove snap ring from input clutch drum.
- d. Remove drive plates, driven plates and retaining plate from input clutch drum.

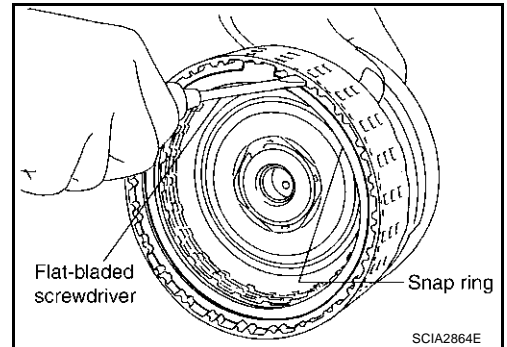

INSPECTION

Front Carrier Snap Ring

- Check for deformation, fatigue or damage.

CAUTION:

If necessary, replace the snap ring.

Input Clutch Snap Ring

- Check for deformation, fatigue or damage.

CAUTION:

If necessary, replace the input clutch assembly.

Input Clutch Drum

- Check for deformation, fatigue or damage or burns.

CAUTION:

If necessary, replace the input clutch assembly.

Input Clutch Drive Plates

- Check facing for burns, cracks or damage.

CAUTION:

If necessary, replace the input clutch assembly.

Input Clutch Retaining Plate and Driven Plates

- Check facing for burns, cracks or damage.

CAUTION:

If necessary, replace the input clutch assembly.

Front Carrier

- Check for deformation, fatigue or damage.

CAUTION:

If necessary, replace the front carrier assembly.

Rear Internal Gear

- Check for deformation, fatigue or damage.

CAUTION:

If necessary, replace the rear internal gear assembly.

REPAIR FOR COMPONENT PARTS


ASSEMBLY

1. Install input clutch.
 - a. Install drive plates, driven plates and retaining plate in input clutch drum.

CAUTION:

Take care with order of plates.


- b. Using a flat-bladed screwdriver, install snap ring in input clutch drum.

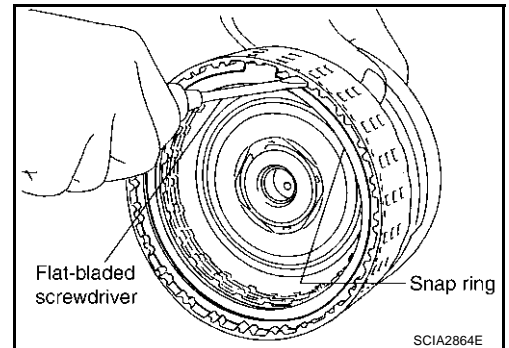

- c. Install needle bearing in input clutch assembly.

CAUTION:


Apply petroleum jelly to needle bearing.

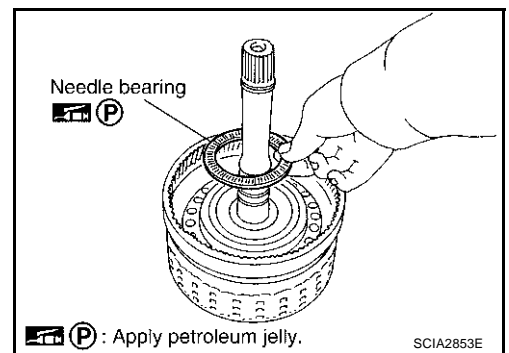

- d. Install O-ring and seal rings in input clutch assembly.

CAUTION:

- Do not reuse O-ring and seal rings.
- Apply ATF to O-ring.
- Apply petroleum jelly to seal rings.

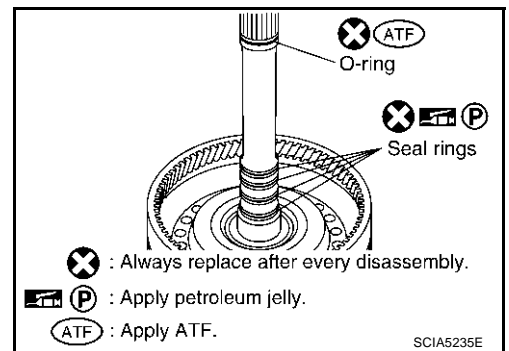


2. Install front carrier assembly.

- a. Install snap ring to front carrier assembly.


CAUTION:

Do not expand snap ring excessively.

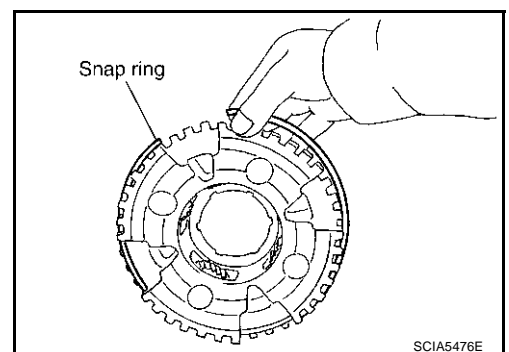


REPAIR FOR COMPONENT PARTS

- b. Install bearing race in front carrier assembly.
CAUTION:
Apply petroleum jelly to bearing race.
- c. Install front carrier assembly to input clutch assembly.

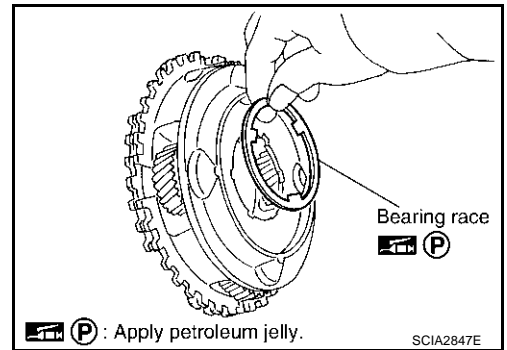

3. Compress snap ring using 2 flat-bladed screwdrivers.
4. Install front carrier assembly and input clutch assembly to rear internal gear.

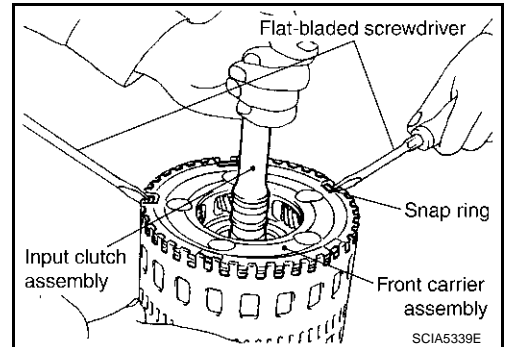

A

B

AT

D

E

F

G

H

I

J

K


L

M

REPAIR FOR COMPONENT PARTS

Mid Sun Gear, Rear Sun Gear, High and Low Reverse Clutch Hub COMPONENTS


ACS008RL

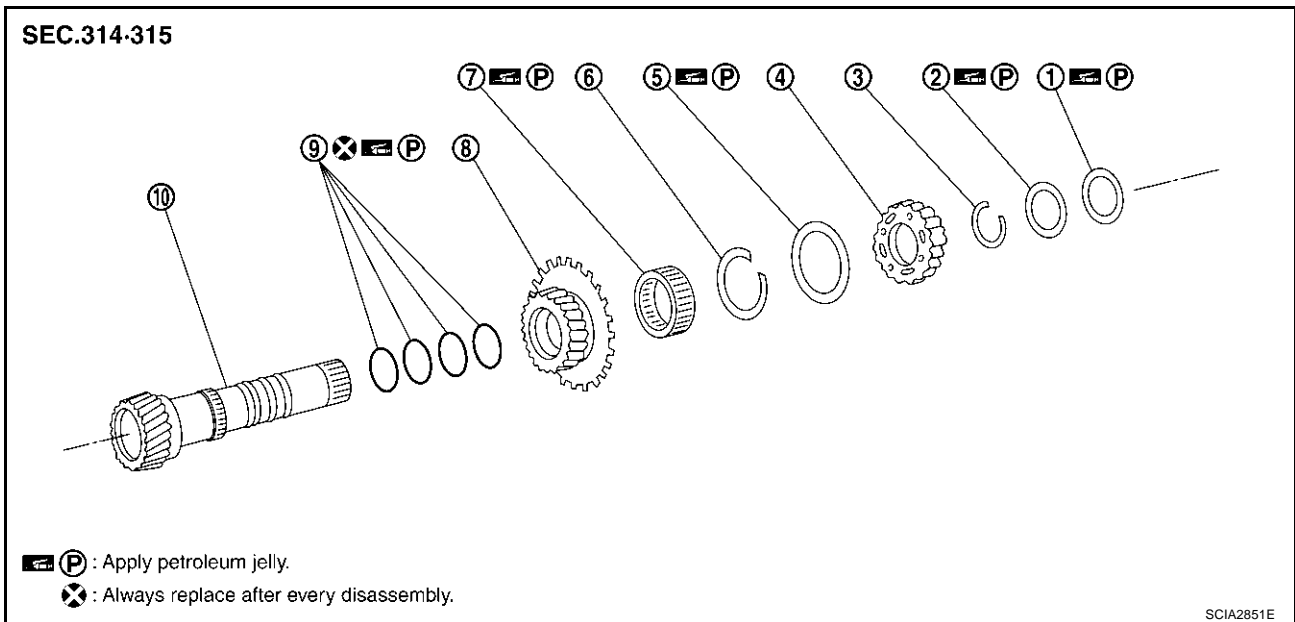

- | | | |
|------------------------------------|-------------------|--------------|
| 1. Needle bearing | 2. Bearing race | 3. Snap ring |
| 4. High and low reverse clutch hub | 5. Needle bearing | 6. Snap ring |
| 7. 1st one-way clutch | 8. Rear sun gear | 9. Seal ring |
| 10. Mid sun gear | | |

DISASSEMBLY


1. Remove needle bearing and bearing race from high and low reverse clutch hub.

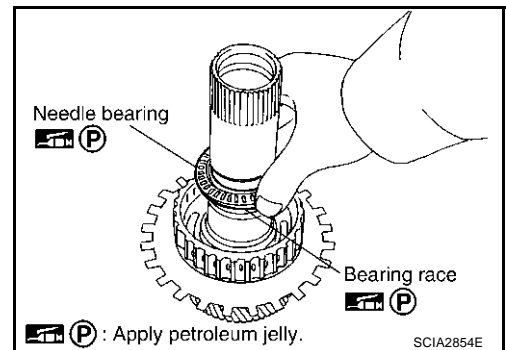

2. Using snap ring pliers, remove snap ring from mid sun gear assembly.


CAUTION:

Do not expand snap ring excessively.

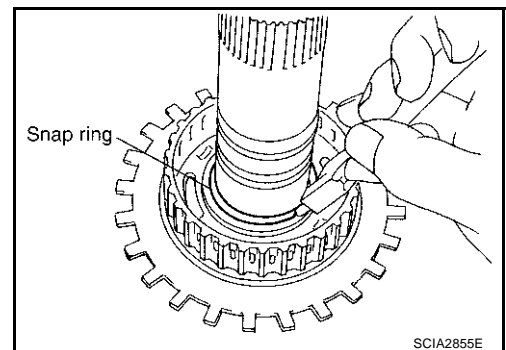


REPAIR FOR COMPONENT PARTS

3. Remove high and low reverse clutch hub from mid sun gear assembly.

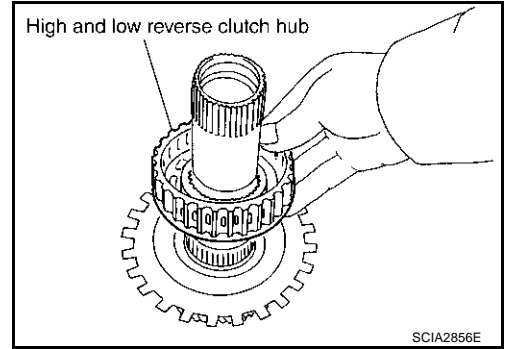


A
B
AT

- a. Remove needle bearing from high and low reverse clutch hub.

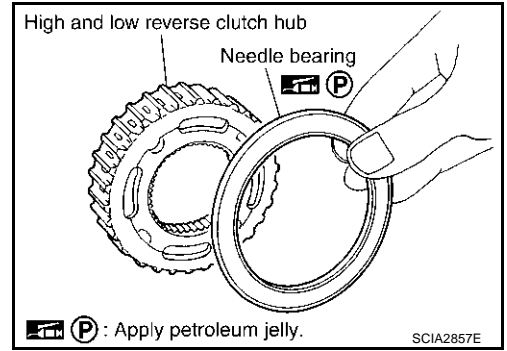


D
E
F
G

4. Remove rear sun gear assembly from mid sun gear assembly.

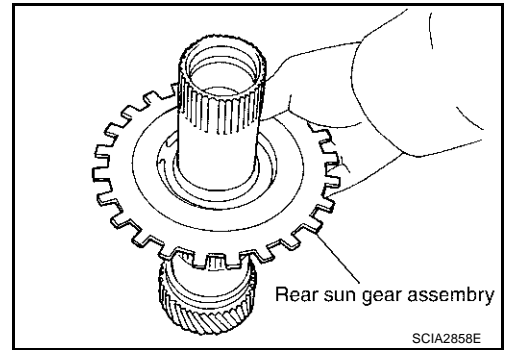

H
I
J
K


- a. Using a flat-bladed screwdriver, remove snap ring from rear sun gear.

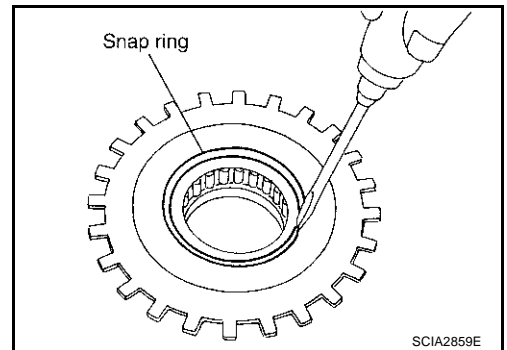


L
M

REPAIR FOR COMPONENT PARTS

- b. Remove 1st one-way clutch from rear sun gear.

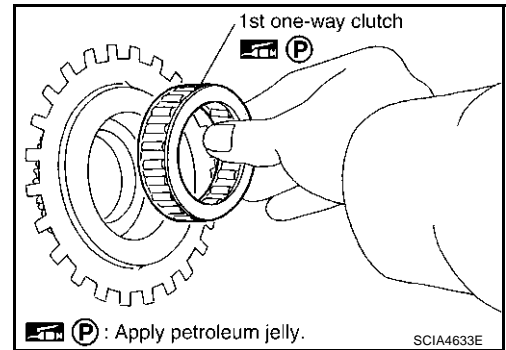

5. Remove seal rings from mid sun gear.

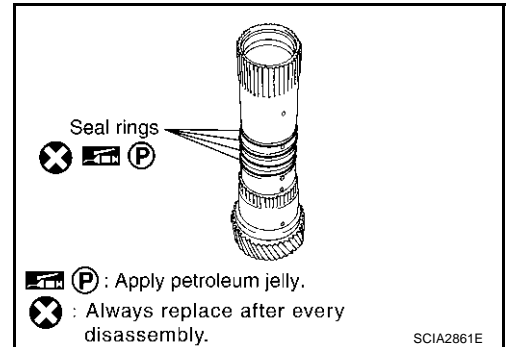

INSPECTION

High and Low Reverse Clutch Hub Snap Ring, Rear Sun Gear Snap Ring

- Check for deformation, fatigue or damage.

CAUTION:

If necessary, replace the snap ring.

1st One-Way Clutch

- Check frictional surface for wear or damage.

CAUTION:

If necessary, replace the 1st one-way clutch.

Mid Sun Gear

- Check for deformation, fatigue or damage.

CAUTION:

If necessary, replace the mid sun gear.

Rear Sun Gear

- Check for deformation, fatigue or damage.

CAUTION:

If necessary, replace the rear sun gear.

High and Low Reverse Clutch Hub

- Check for deformation, fatigue or damage.

CAUTION:

If necessary, replace the high and low reverse clutch hub.


REPAIR FOR COMPONENT PARTS

ASSEMBLY

1. Install seal rings to mid sun gear.

CAUTION:


- Do not reuse seal rings.
- Apply petroleum jelly to seal rings.

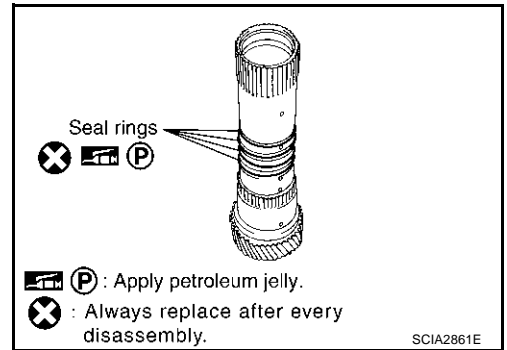


2. Install 1st one-way clutch to rear sun gear.

CAUTION:


- Apply petroleum jelly to 1st one-way clutch.

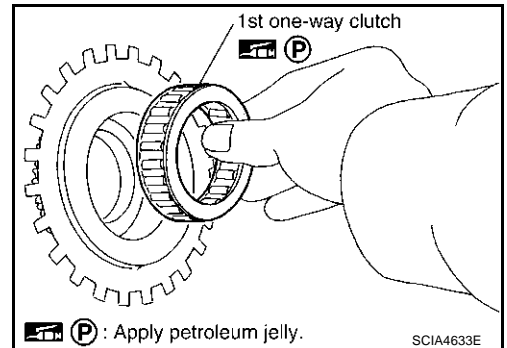

3. Using a flat-bladed screwdriver, install snap ring to rear sun gear.

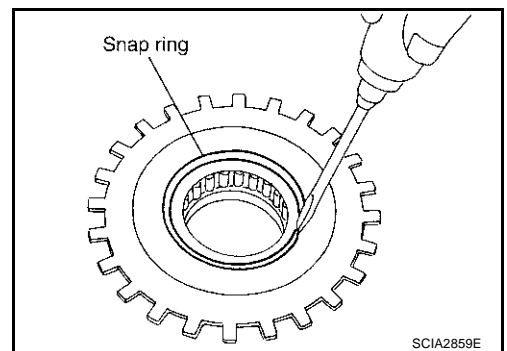

4. Install rear sun gear assembly to mid sun gear assembly.

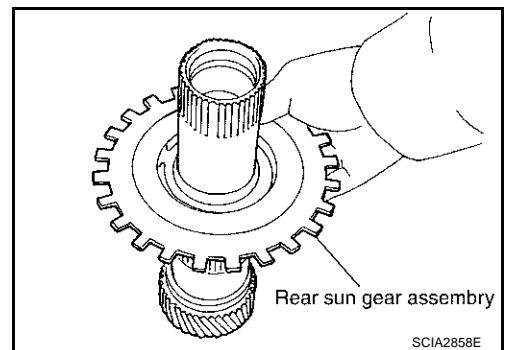


A
B
AT
D
E
F
G
H
I
J
K
L
M

REPAIR FOR COMPONENT PARTS


5. Install needle bearing to high and low reverse clutch hub.

CAUTION:

Apply petroleum jelly to needle bearing.

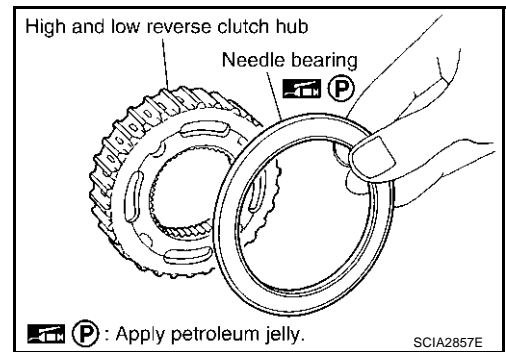


6. Install high and low reverse clutch hub to mid sun gear assembly.

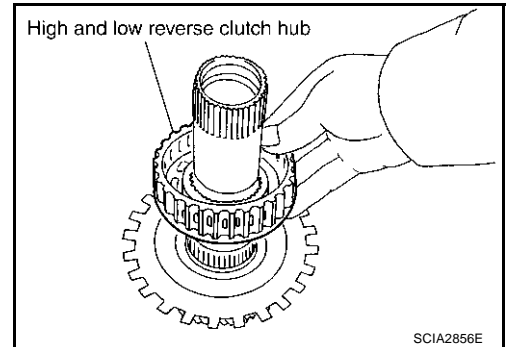

7. Using snap ring pliers, install snap ring to mid sun gear assembly.

CAUTION:

Do not expand snap ring excessively.

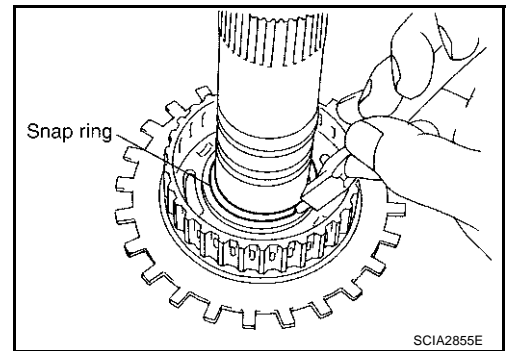


8. Check operation of 1st one-way clutch.

- a. Hold mid sun gear and turn rear sun gear.

- b. Check 1st one-way clutch for correct locking and unlocking directions.

CAUTION:


If not as shown in illustration, check installation direction of 1st one-way clutch.

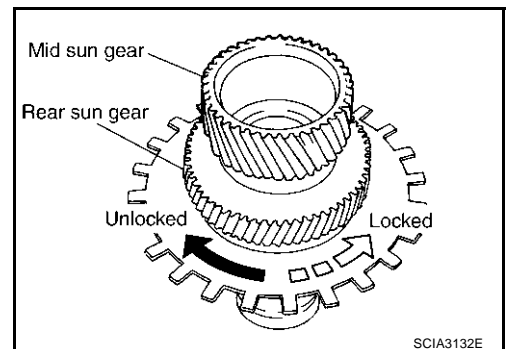

9. Install needle bearing and bearing race to high and low reverse clutch hub.

CAUTION:


Apply petroleum jelly to needle bearing and bearing race.

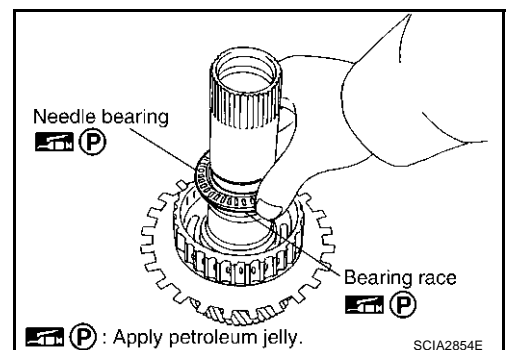

REPAIR FOR COMPONENT PARTS

ACS008RM


High and Low Reverse Clutch COMPONENTS

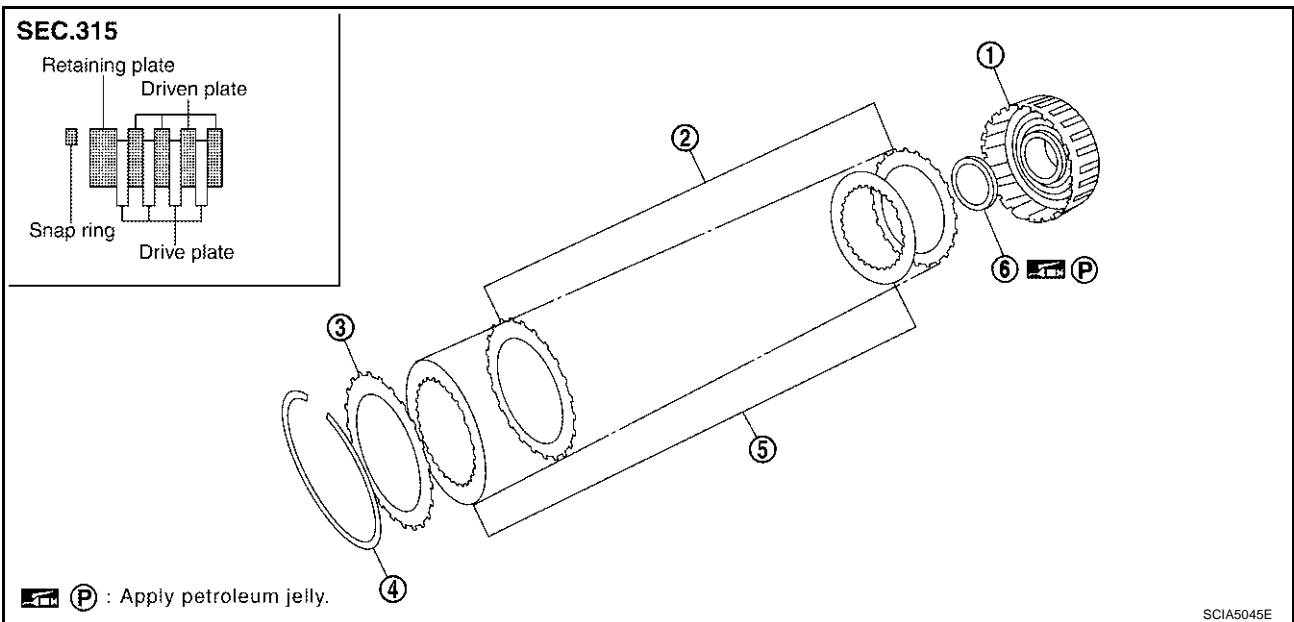


1. High and low reverse clutch drum
2. Driven plate
3. Retaining plate
4. Snap ring
5. Drive plate
6. Bearing race

DISASSEMBLY

1. Remove bearing race from high and low reverse clutch drum.

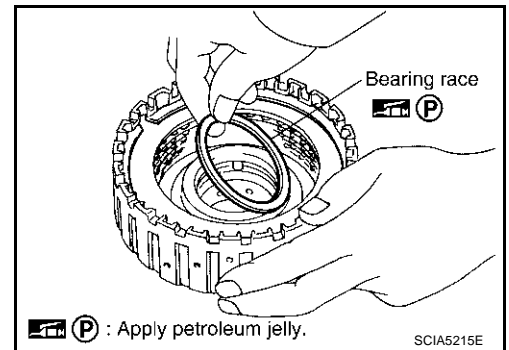

2. Using a flat-bladed screwdriver, remove snap ring from high and low reverse clutch drum.
3. Remove drive plates, driven plates and retaining plate from high and low reverse clutch drum.

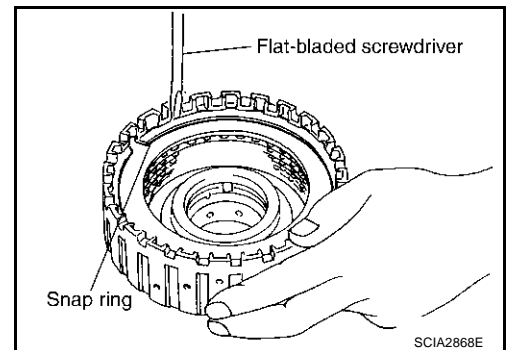

INSPECTION

- Check the following, and replace high and low reverse clutch assembly if necessary.

High and Low Reverse Clutch Snap Ring

- Check for deformation, fatigue or damage.

High and Low Reverse Clutch Drive Plates

- Check facing for burns, cracks or damage.

A
B
AT
D
E
F
G
H
I
J
K
L
M

REPAIR FOR COMPONENT PARTS

High and Low Reverse Clutch Retaining Plate and Driven Plates

- Check facing for burns, cracks or damage.


ASSEMBLY

1. Install drive plates, driven plates and retaining plate in high and low reverse clutch drum.

CAUTION:

Take care with order of plates.


2. Using a flat-bladed screwdriver, install snap ring in high and low reverse clutch drum.

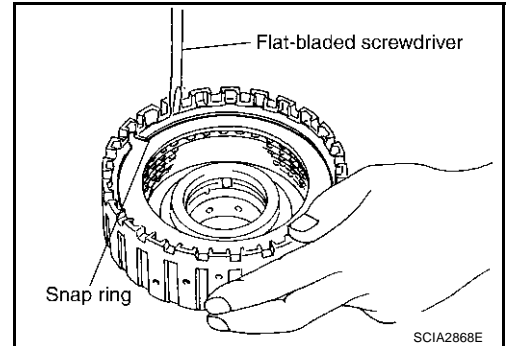

3. Install bearing race to high and low reverse clutch drum.

CAUTION:

Apply petroleum jelly to bearing race.

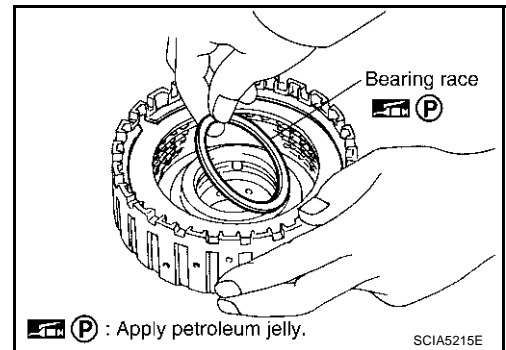

REPAIR FOR COMPONENT PARTS

Direct Clutch COMPONENTS

ACS008RN

A

B

AT

D

E

F

G

H


I

J

K


L

M

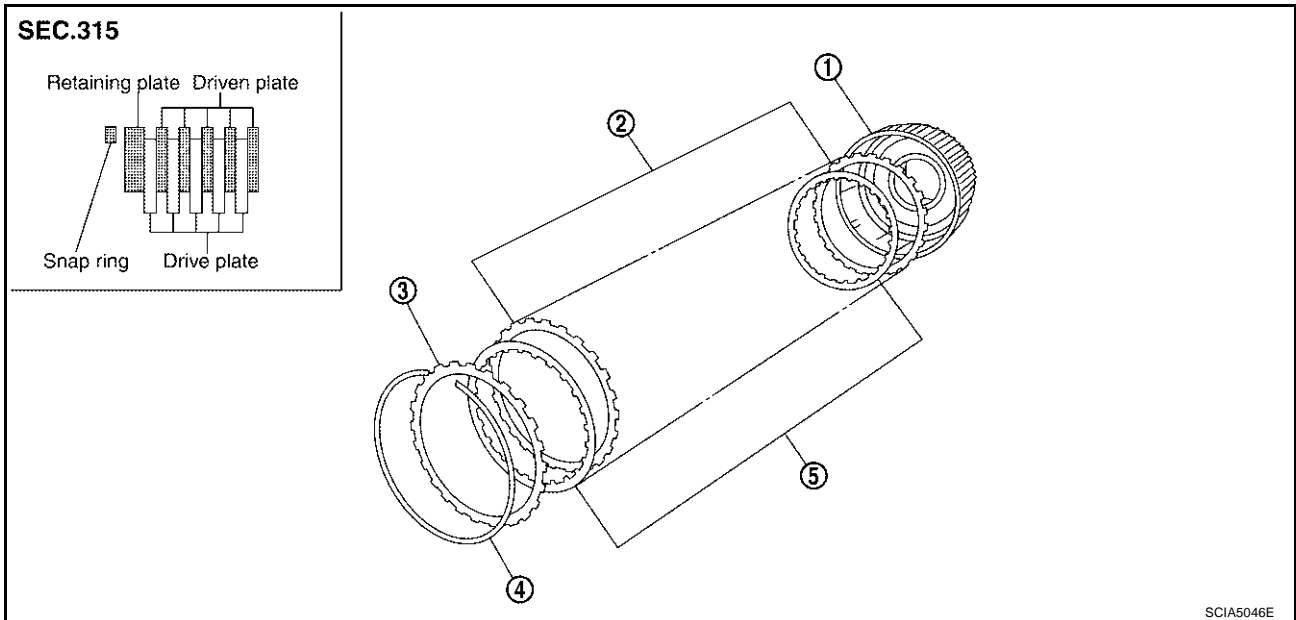

DISASSEMBLY

1. Using a flat-bladed screwdriver, remove snap ring from direct clutch drum.
2. Remove drive plates, driven plates and retaining plate from direct clutch drum.

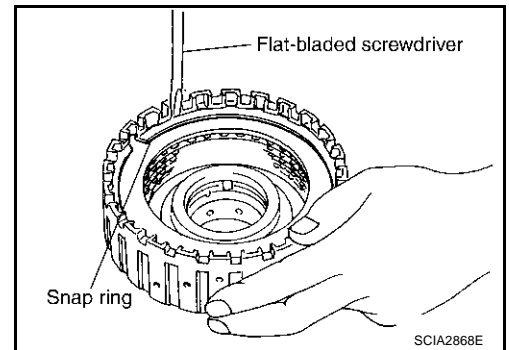

INSPECTION

- Check the following, and replace direct clutch assembly if necessary.

Direct Clutch Snap Ring

- Check for deformation, fatigue or damage.

Direct Clutch Drive Plates

- Check facing for burns, cracks or damage.

Direct Clutch Retaining Plate and Driven Plates

- Check facing for burns, cracks or damage.

REPAIR FOR COMPONENT PARTS


ASSEMBLY

1. Install drive plates, driven plates and retaining plate in direct clutch drum.

CAUTION:

Take care with order of plates.

2. Using a flat-bladed screwdriver, install snap ring in direct clutch drum.

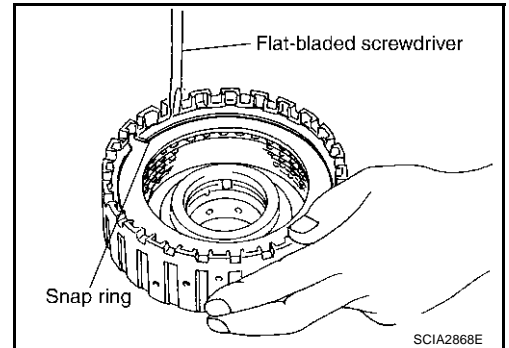

ASSEMBLY

ASSEMBLY

PPF:00000


Assembly (1)

ACS008RO

1. As shown in the right figure illustration, use a drift [commercial service tool $\phi 22$ mm (0.87 in)] to drive manual shaft oil seals into the transmission case until it is flush.


CAUTION:

- Apply ATF to manual shaft oil seals.
- Do not reuse manual shaft oil seals.

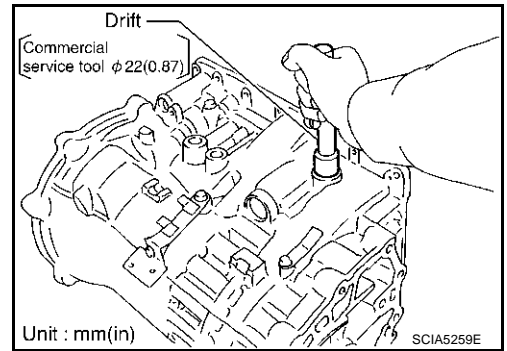

2. Install detent spring and spacer in transmission case.


 : 7.9 N·m (0.81 kg·m, 70 in·lb)

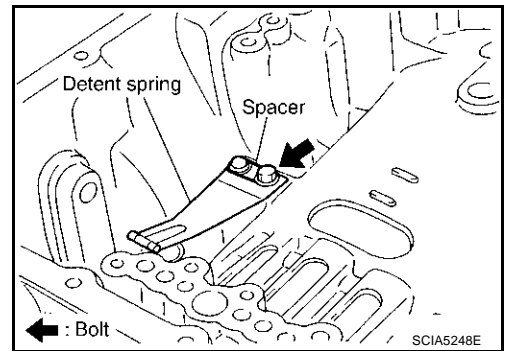

3. Assemble manual shaft, manual plate, and parking rod after installing manual shaft to transmission case.
4. Install retaining pin into the manual plate and manual shaft.
 - a. Fit pinhole of the manual plate to pinhole of the manual shaft with a pin punch.
 - b. Use a hammer to tap the retaining pin into the manual plate.

CAUTION:


- Drive retaining pin to 2 & plusmn;0.5 mm over the manual plate.
- Do not reuse retaining pin.

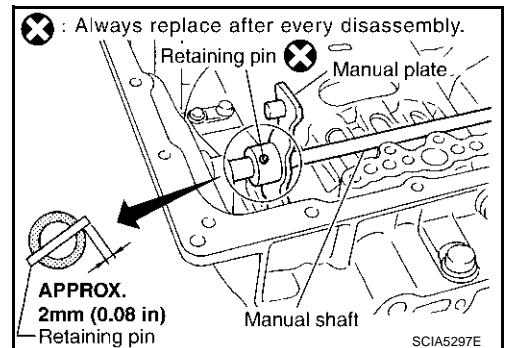

5. Install retaining pin into the transmission case and manual shaft.
 - a. Fit pinhole of the transmission case to pinhole of the manual shaft with a pin punch.
 - b. Use a hammer to tap the retaining pin into the transmission case.

CAUTION:

- Drive retaining pin to 5 & plusmn;1 mm over the transmission case.
- Do not reuse retaining pin.

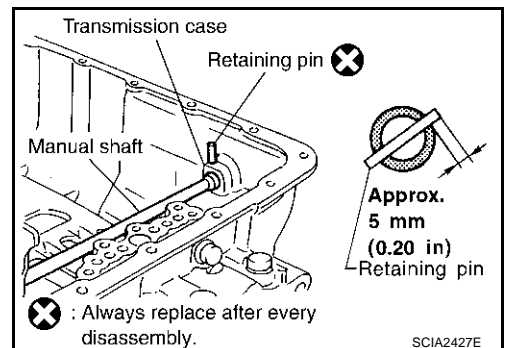

A
B
AT
D
E
F
G
H
I
J
K
L
M

ASSEMBLY


6. Install O-rings to servo assembly.

CAUTION:


Do not reuse O-rings.

Apply petroleum jelly to O-rings.

7. Install return spring to servo assembly.
8. Install servo assembly in transmission case.

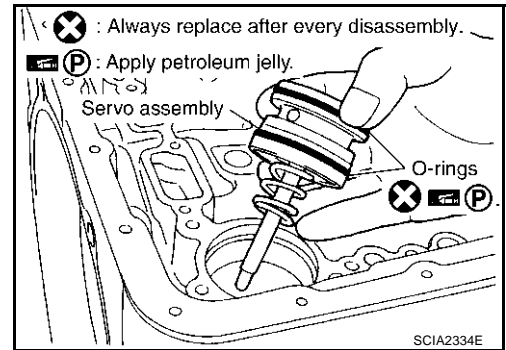


9. Using snap ring pliers, install snap ring to transmission case.

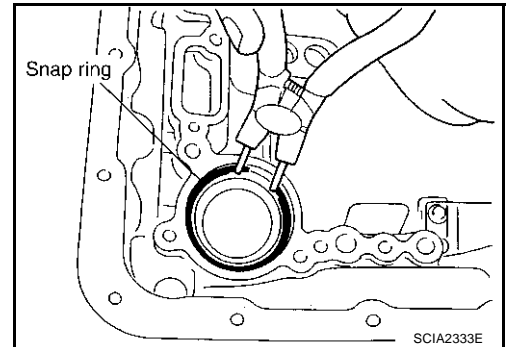


10. Install lip seal and D-ring in reverse brake piston.

CAUTION:

- Do not reuse lip seal and D-ring.
- Apply petroleum jelly to lip seal.
- Apply ATF to D-ring.

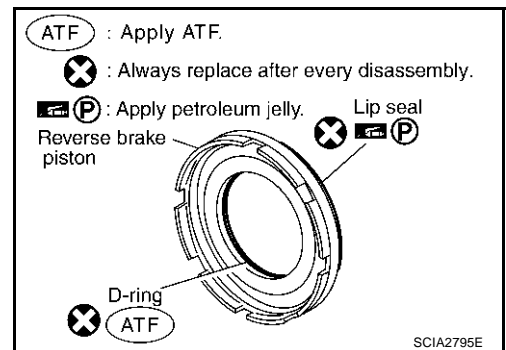


11. Install reverse brake piston in transmission case.

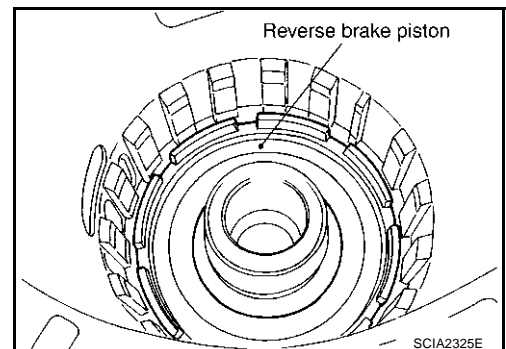

12. Install needle bearing to drum support edge surface.

CAUTION:

Apply petroleum jelly to needle bearing.

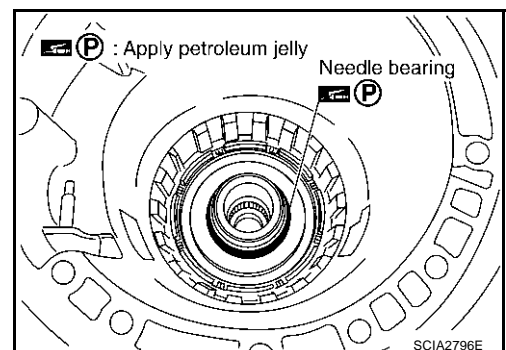


ASSEMBLY

13. Install seal rings to drum support.

CAUTION:


- Do not reuse seal rings.
- Apply petroleum jelly to seal rings.

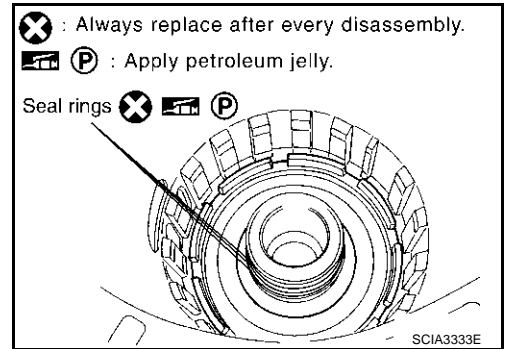

14. After installing the return spring and spring retainer in transmission case, use a clutch spring compressor to install snap ring in transmission case.

CAUTION:


Securely assemble them using a flat-bladed screwdriver so that snap ring tension is slightly weak.

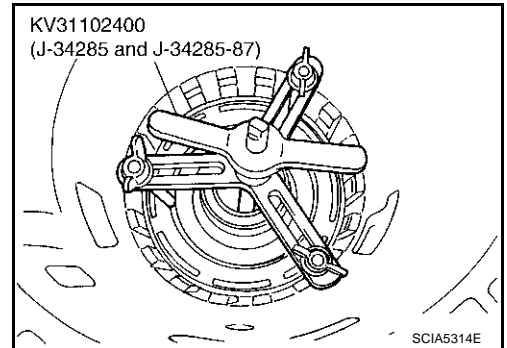

15. Install reverse brake retaining plate, drive plates, driven plates and dish plate in transmission case.

CAUTION:


Take care with order of plates.

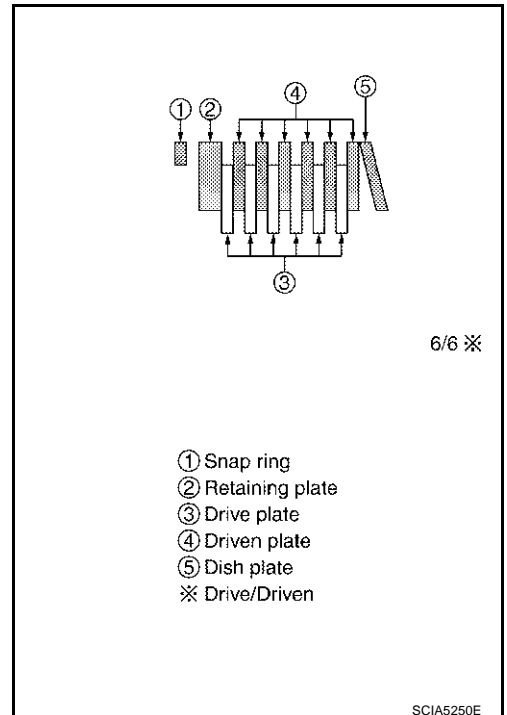


A
 B
 AT
 D
 E
 F
 G
 H
 I
 J
 K
 L
 M

ASSEMBLY

16. Assemble N-spring.

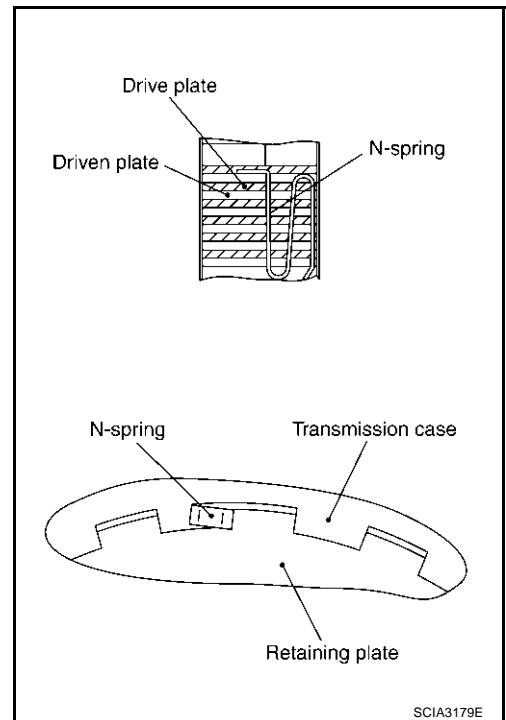

17. Install snap ring in transmission case.

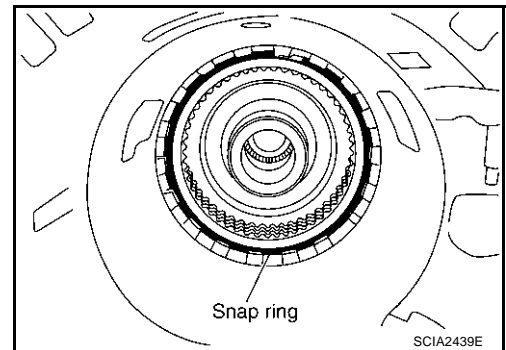


18. Measure clearance between retaining plate and snap ring. If not within specified clearance, select proper retaining plate.

Specified clearance "A":

Standard: 0.7 - 1.1mm (0.028 - 0.043 in)

Retaining plate:


Refer to [AT-318, "Reverse Brake"](#) .

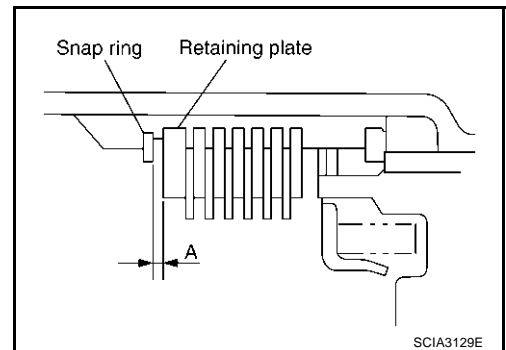

19. Install needle bearing to transmission case.

CAUTION:

- Apply petroleum jelly to needle bearing.

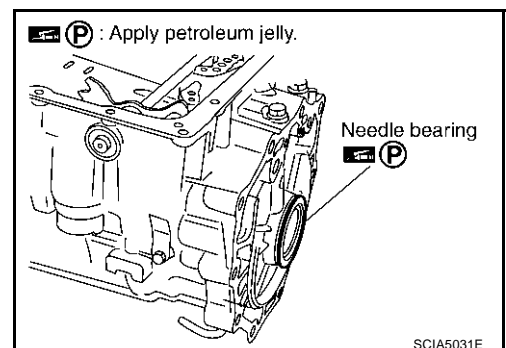


ASSEMBLY

20. Install revolution sensor to transmission case.

CAUTION:

- Do not subject it to impact by dropping or hitting it.
- Do not disassemble.
- Do not allow metal filings, etc., to get on the sensor's front edge magnetic area.
- Do not place in an area affected by magnetism.


 : 5.8 N·m (0.59 kg·m, 51 in·lb)

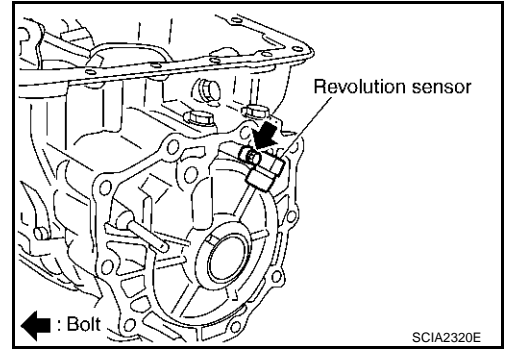


21. As shown in the right figure illustration, use a drift to drive rear oil seal into the rear extension until it is flush.

CAUTION:


- Apply ATF to rear oil seal.
- Do not reuse rear oil seal.

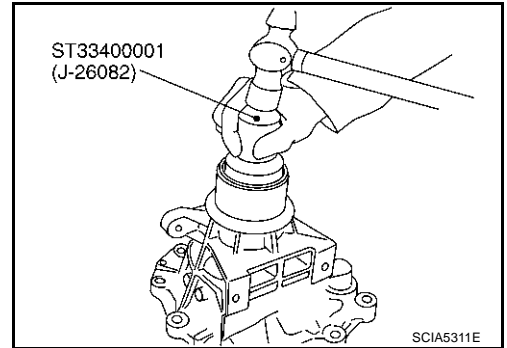

22. Install return spring to parking pawl.

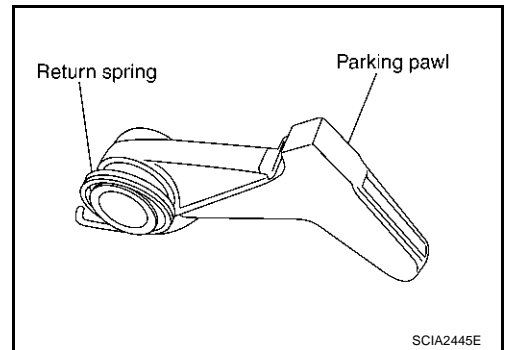

23. Install parking pawl (with return spring) and pawl shaft to rear extension.

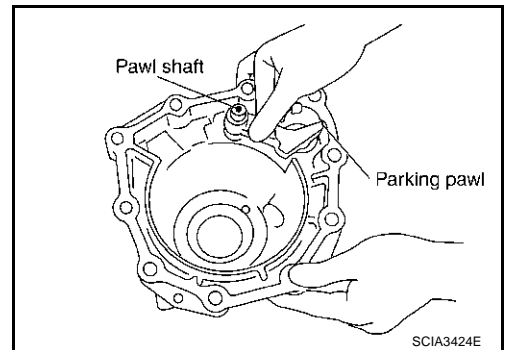


24. Install parking actuator support to rear extension.

25. Install needle bearing to rear extension.

CAUTION:

Apply petroleum jelly to needle bearing.

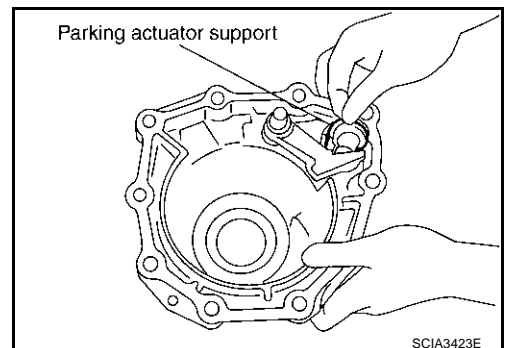


A
B
AT
D
E
F
G
H
I
J
K
L
M

ASSEMBLY


26. Install seal rings to output shaft.

CAUTION:

- Do not reuse seal rings.
- Apply petroleum jelly to seal rings.

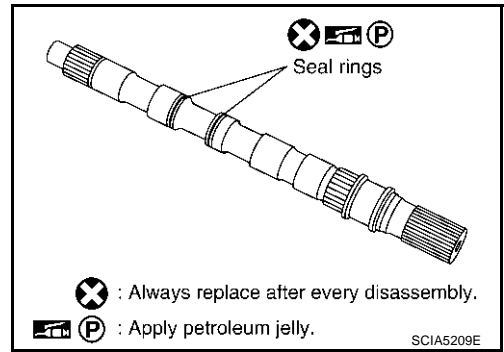


27. Install parking gear to output shaft.

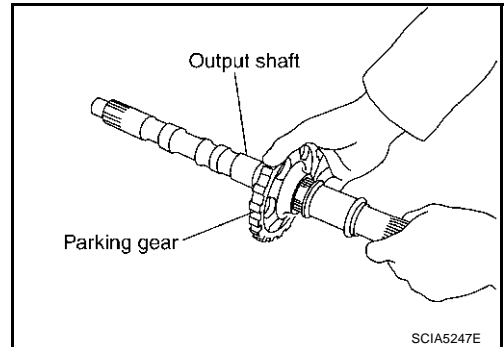


28. Install output shaft in transmission case.

CAUTION:

Be careful not to mistake front for rear because both sides looks similar. (Thinner end is front side.)

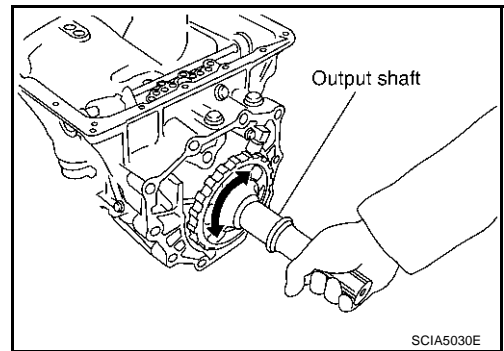


29. Install bearing race to output shaft.

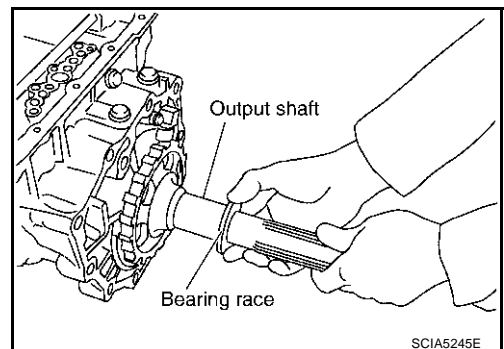

30. Apply recommended sealant (Genuine Anaerobic Liquid Gasket or equivalent. Refer to [GI-47, "Recommended Chemical Products and Sealants"](#) .) to rear extension assembly as shown in illustration.


CAUTION:

Completely remove all moisture, oil and old sealant, etc. from the transmission case and rear extension assembly mounting surfaces.

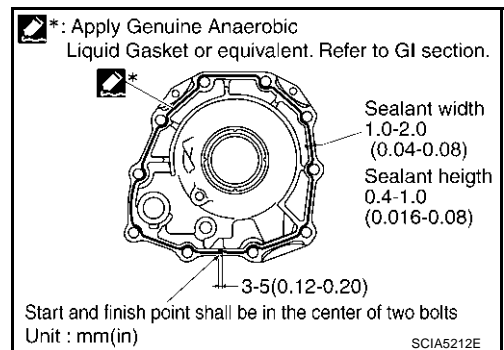

ASSEMBLY

31. Install rear extension assembly to transmission case.

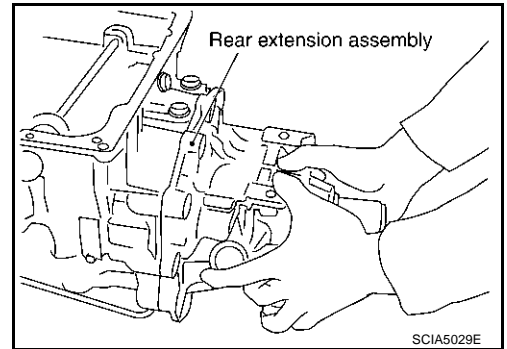

32. Tighten rear extension assembly mounting bolts to specified torque.

CAUTION:


Do not reuse self-sealing bolt.

Rear extension assembly mounting bolt:

 : 52 N-m (5.3 kg-m, 38 ft-lb)

Self-sealing bolt:


 : 61 N-m (6.2 kg-m, 45 ft-lb)

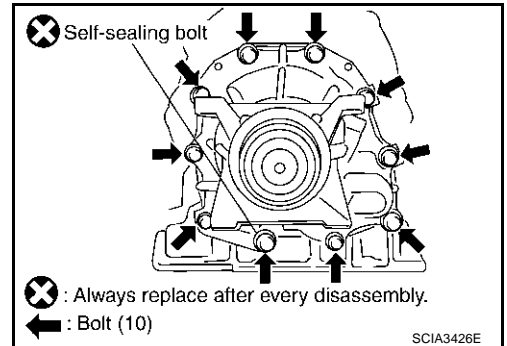

33. Install needle bearing in drum support.

CAUTION:


Apply petroleum jelly to needle bearing.

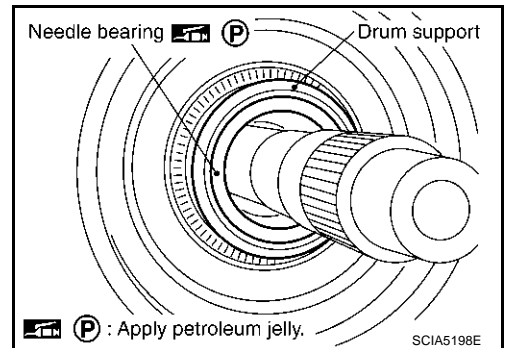


34. Install direct clutch assembly in reverse brake.

CAUTION:

Make sure that drum support edge surface and direct clutch inner boss edge surface come to almost same place.

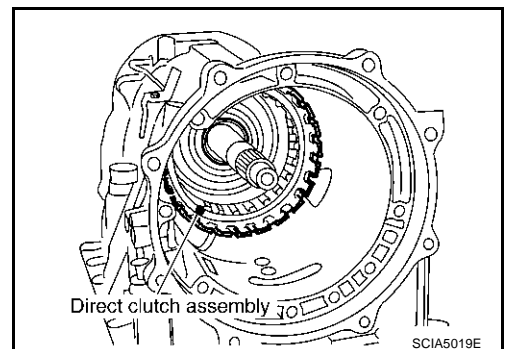


35. Install high and low reverse clutch assembly in direct clutch.

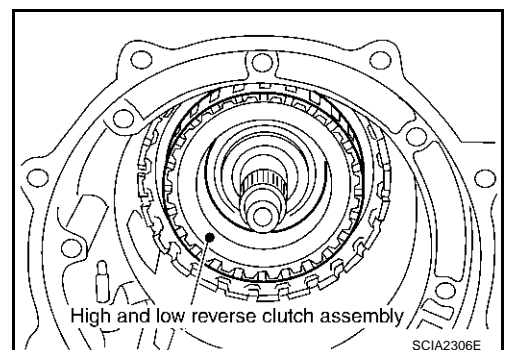


A
B
AT
D
E
F
G
H
I
J
K
L
M

ASSEMBLY

36. Using a flat-bladed screwdriver, adjust the drive plate.

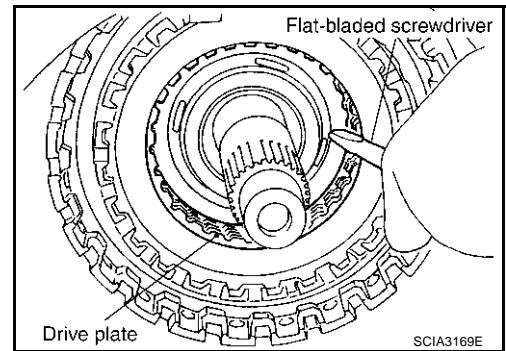


37. Install high and low reverse clutch hub, mid sun gear assembly and rear sun gear assembly as a unit.

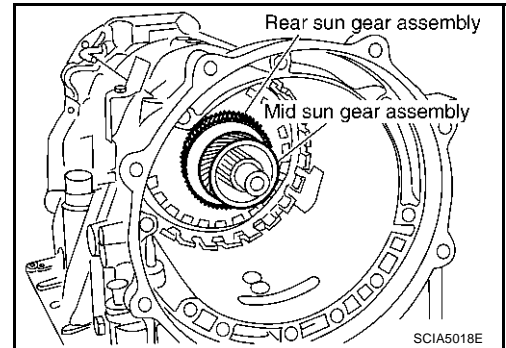

CAUTION:


Check that portion "A" of high and low reverse clutch drum protrudes approximately 2 mm (0.08 in) beyond portion "B" of rear sun gear.

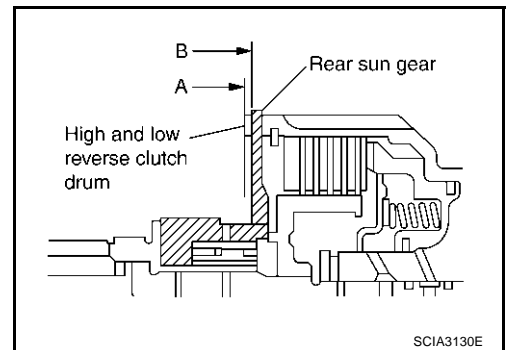

38. Install needle bearing in rear carrier assembly.

CAUTION:


Apply petroleum jelly to needle bearing.

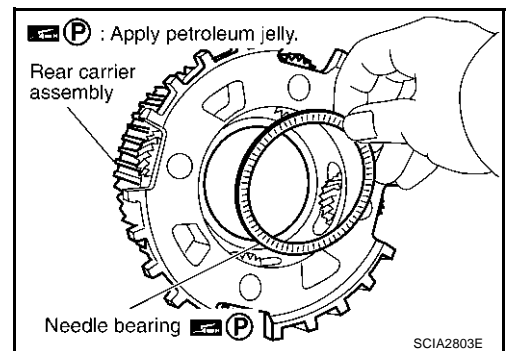


ASSEMBLY

39. Install bearing race in rear carrier assembly.

CAUTION:
Apply petroleum jelly to bearing race.

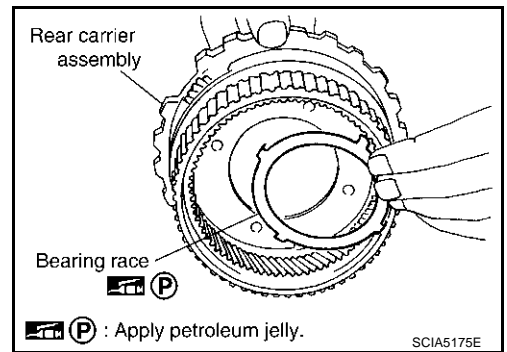


40. Install rear carrier assembly in direct clutch drum.

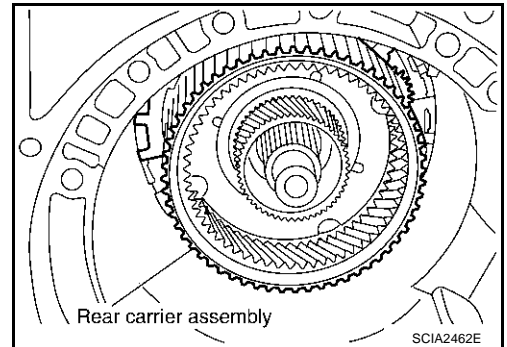


41. Install needle bearing (rear side) to mid carrier assembly.

CAUTION:
Apply petroleum jelly to needle bearing.

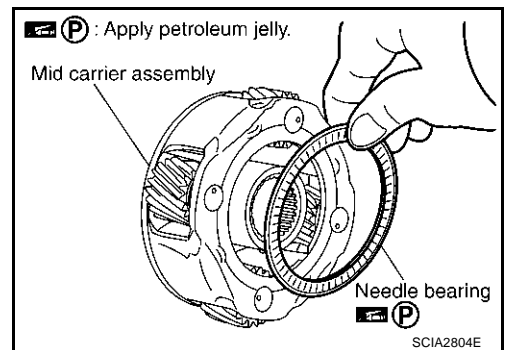


42. Install needle bearing (front side) to mid carrier assembly.

CAUTION:
Apply petroleum jelly to needle bearing.

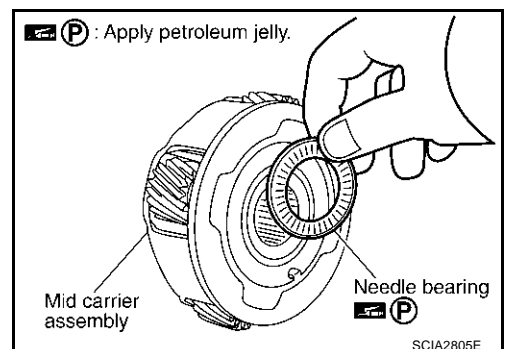


43. Install mid carrier assembly in rear carrier assembly.

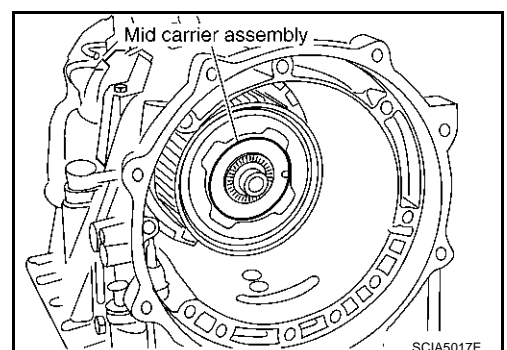

A
B
AT
D
E
F
G
H
I
J
K
L
M

ASSEMBLY


44. Install front carrier assembly, input clutch assembly and rear internal gear as a unit.

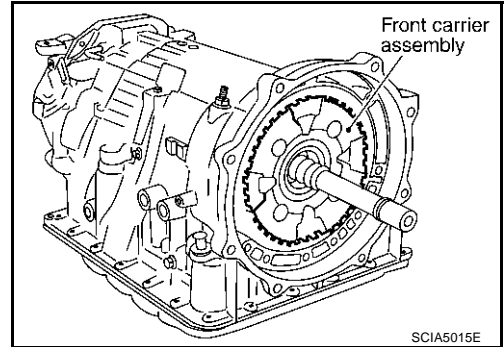

45. Install seal rings in input clutch assembly.

CAUTION:


- Do not reuse seal rings.
- Apply petroleum jelly to seal rings.

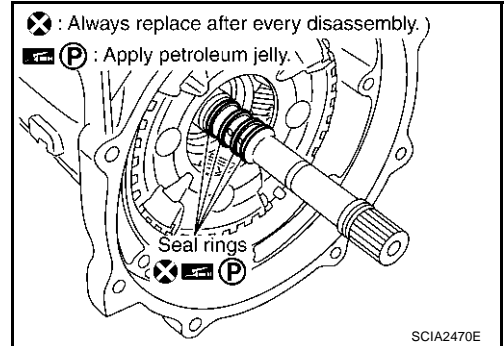

46. Install band servo anchor end pin and lock nut in transmission case.

CAUTION:


- Do not reuse band servo anchor end pin.

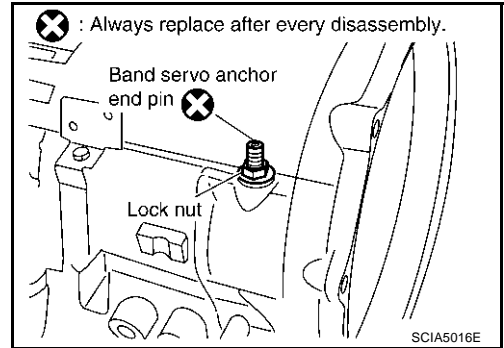

47. Install brake band in transmission case.

CAUTION:


- Assemble it so that identification to avoid incorrect installation faces servo side.

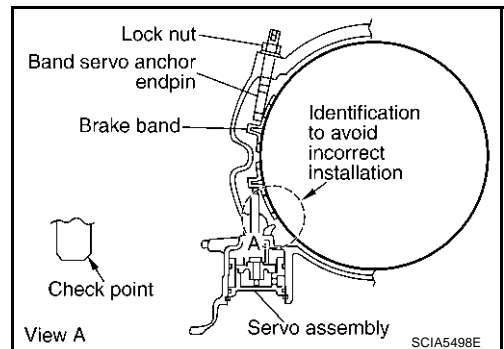

48. Install front sun gear to front carrier assembly.

CAUTION:


- Apply ATF to front sun gear bearing and 3rd one-way clutch end bearing.

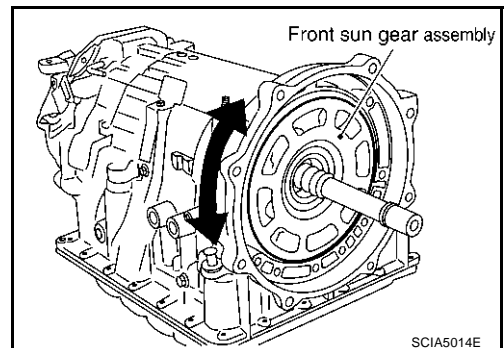


ASSEMBLY

49. Install needle bearing to front sun gear.

CAUTION:
Apply petroleum jelly to needle bearing.

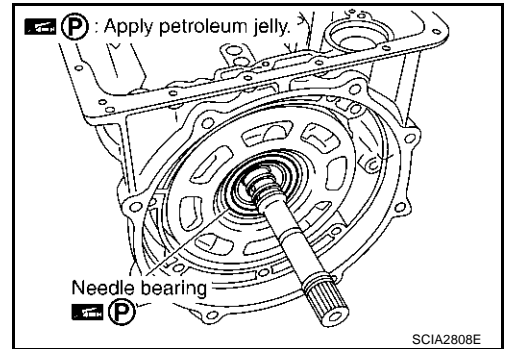

50. Adjust brake band tilting using clips so that brake band contacts front sun gear drum evenly.

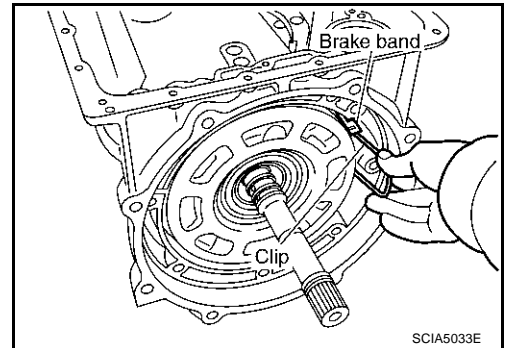


51. Adjust brake band.

- Loosen lock nut.
- Tighten band servo anchor end pin to specified torque.

 : 5.0 N·m (0.51 kg-m, 44 in-lb)


- Back of band servo anchor end pin three turns.
- Holding band servo anchor end pin, tighten lock nut to specified torque.

 : 46 N·m (4.7 kg-m, 34 ft-lb)

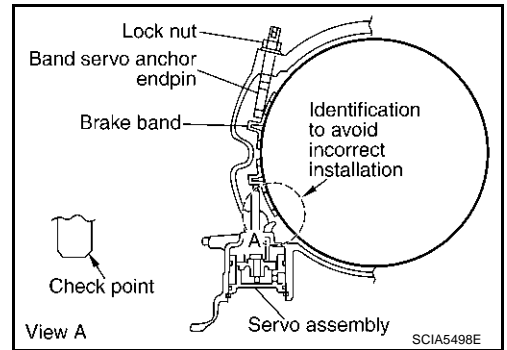

Adjustment TOTAL END PLAY


- Measure clearance between front sun gear and bearing race for oil pump cover.
- Select proper thickness of bearing race so that end play is within specifications.

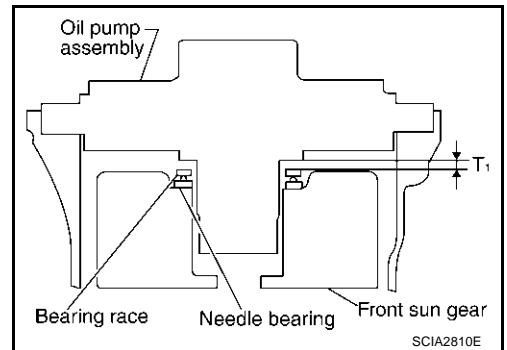


A
B
AT
D
E
F
G
H
I
J
K
L
M

ASSEMBLY

1. Measure dimensions "K" and "L" and then calculate dimension "J".

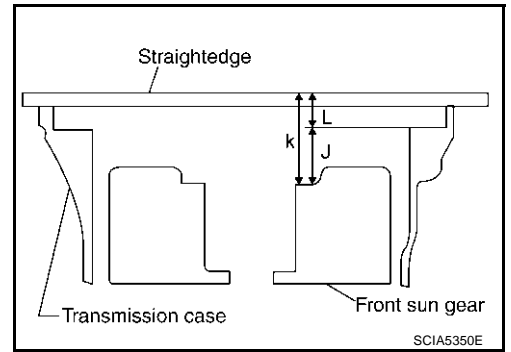


- a. Measure dimension "K".

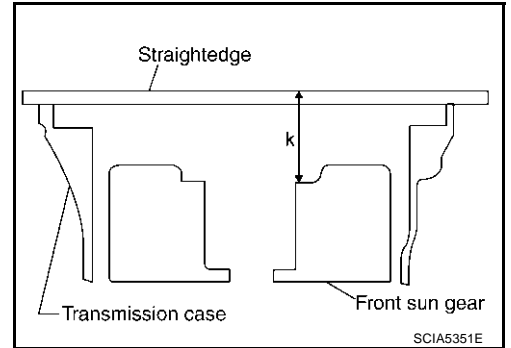


- b. Measure dimension "L".
- c. Calculate dimension "J".

"J": Distance between oil pump fitting surface of transmission case and needle bearing mating surface of front sun gear.


$$J = K - L$$

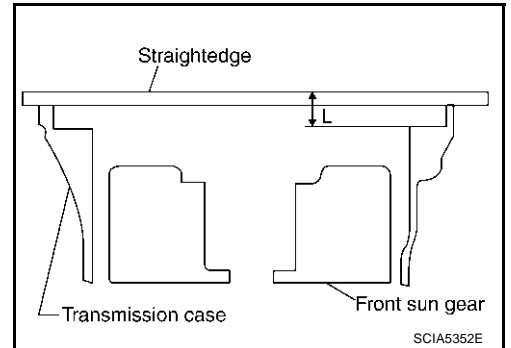

2. Measure dimensions "M1" and "M2" and then calculate dimension "M".

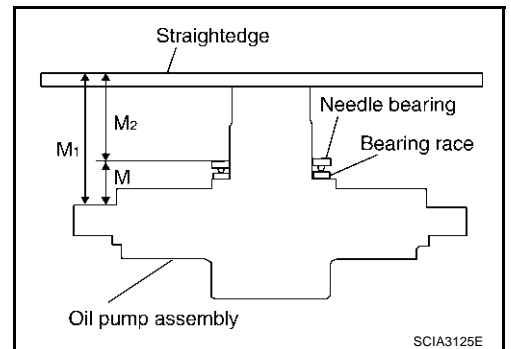


- a. Place bearing race and needle bearing on oil pump assembly.

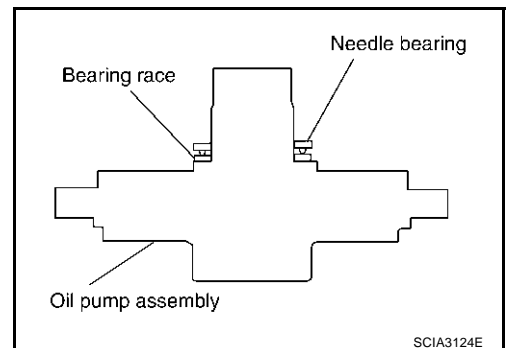


ASSEMBLY

b. Measure dimension "M1".

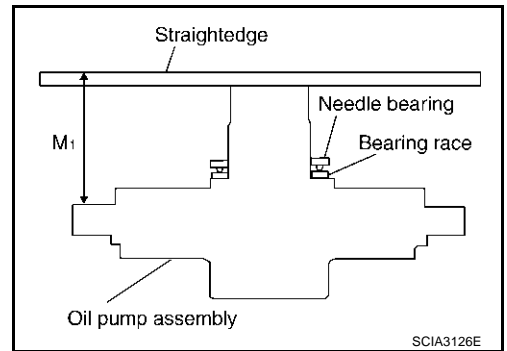

A
B
AT

c. Measure dimension "M2".

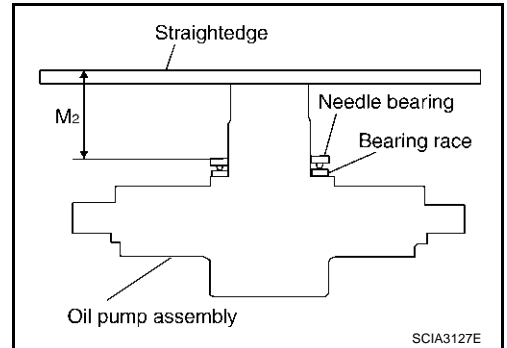


D
E
F
G

d. Calculate dimension "M".

"M": Distance between transmission case fitting surface of oil pump and needle bearing on oil pump.

$$M = M1 - M2$$

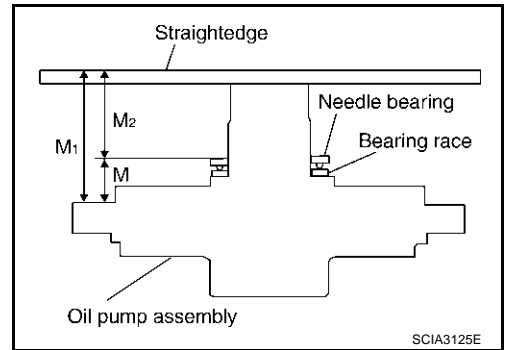

H
I
J
K

3. Adjust total end play "T1".


$$T1 = J - M$$

Total end play "T1":

0.25 - 0.55 mm (0.0098 - 0.0217 in)

- Select proper thickness of bearing race so that total end play is within specifications.

Bearing races: Refer to [AT-318, "BEARING RACE FOR ADJUSTING TOTAL END PLAY"](#).

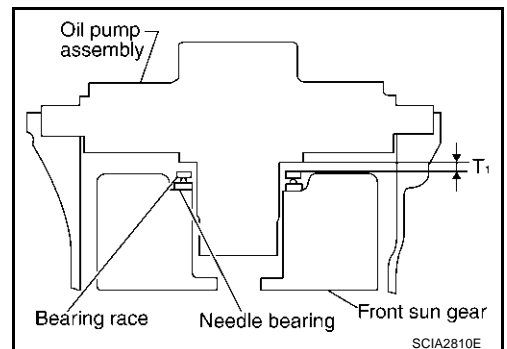

L
M

ASSEMBLY

ACS008RQ

Assembly (2)

1. Install O-ring to oil pump assembly.

CAUTION:

- Do not reuse O-ring.
- Apply ATF to O-ring.

2. Install bearing race to oil pump assembly.

CAUTION:

Apply petroleum jelly to bearing race.

3. Install oil pump assembly in transmission case.

CAUTION:

Apply ATF to oil pump bearing.

4. Apply recommended sealant (Genuine RTV Silicone Sealant or equivalent. Refer to [GI-47. "Recommended Chemical Products and Sealants"](#) .) to oil pump assembly as shown in illustration.

CAUTION:

Completely remove all moisture, oil and old sealant, etc. From the oil pump mounting bolts and oil pump mounting bolt mounting surfaces.

5. Tighten oil pump mounting bolts to specified torque.

CAUTION:





Apply ATF to oil pump bushing.

90X72, 91X05 models

 : 58 N·m (5.9 kg-m, 43 ft-lb)

91X22 models

 : 48 N·m (4.9 kg-m, 35 ft-lb)

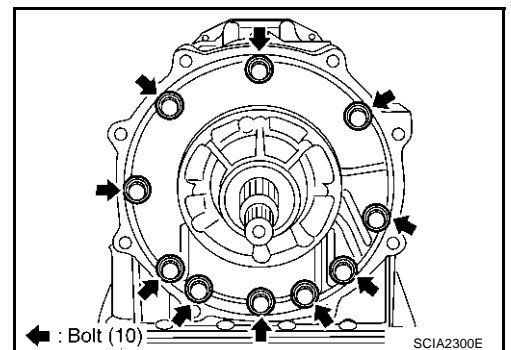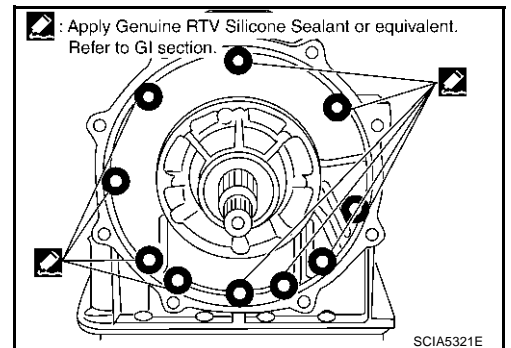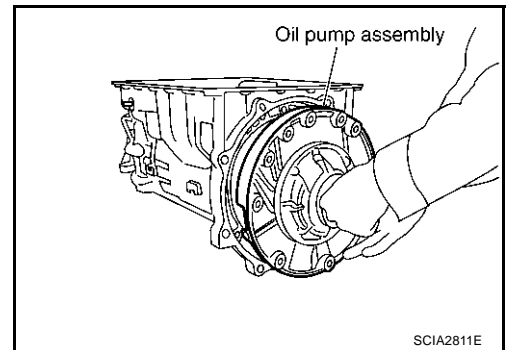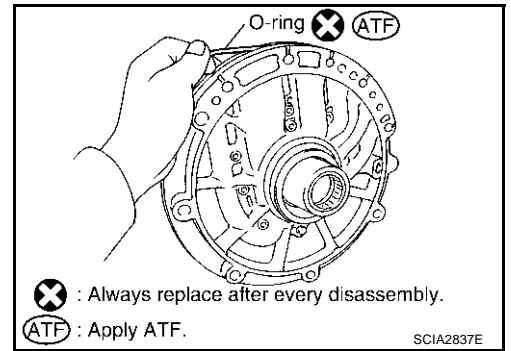


ASSEMBLY

6. Install O-ring to input clutch assembly.

CAUTION:

- Do not reuse O-ring.
- Apply ATF to O-ring.

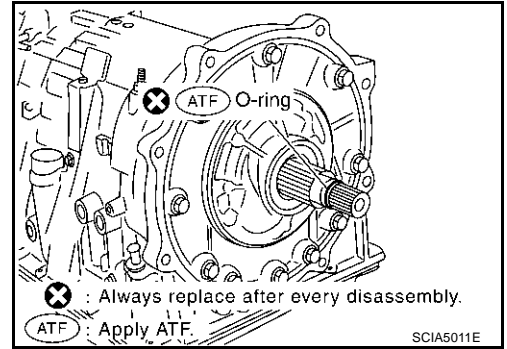

7. Install converter housing to transmission case.

CAUTION:


Do not reuse self-sealing bolt.

Converter housing mounting bolt:


🔧 : 52 N·m (5.3 kg·m, 38 ft·lb)

Self-sealing bolt:

🔧 : 61 N·m (6.2 kg·m, 45 ft·lb)

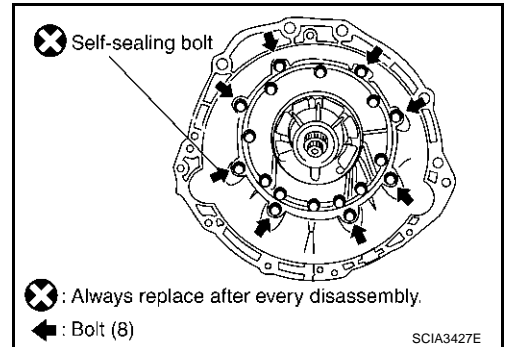


8. Make sure that brake band does not close turbine revolution sensor hole.

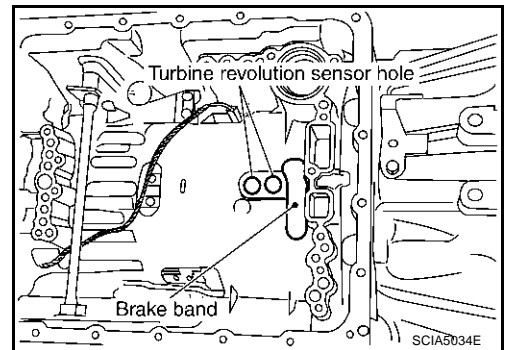

9. Install control valve with TCM.


- a. Connect TCM connector and park/neutral position switch connector.

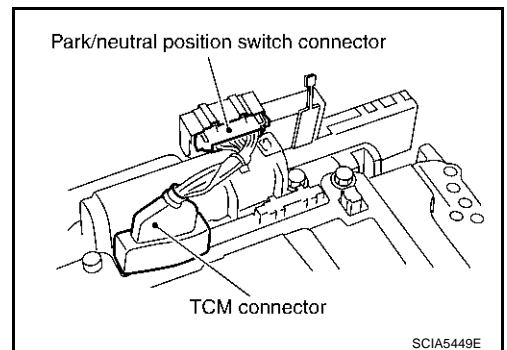


A
B
AT
D
E
F
G
H
I
J
K
L
M

ASSEMBLY

- b. Install A/T assembly harness connector from control valve with TCM.

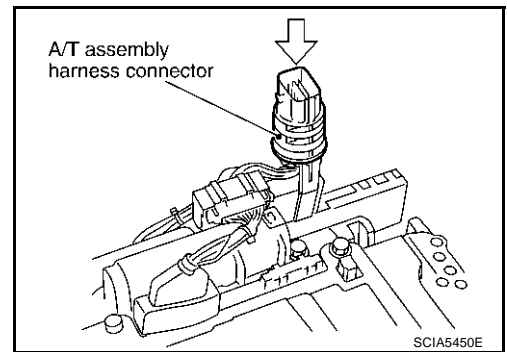


- c. Connect TCM connectors.

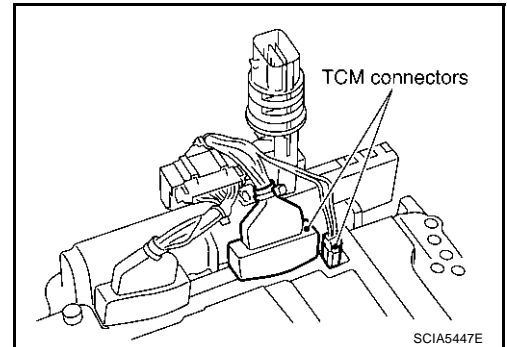


- d. Install O-ring to A/T assembly harness connector.

CAUTION:

- Do not reuse O-ring.
- Apply ATF to O-ring.

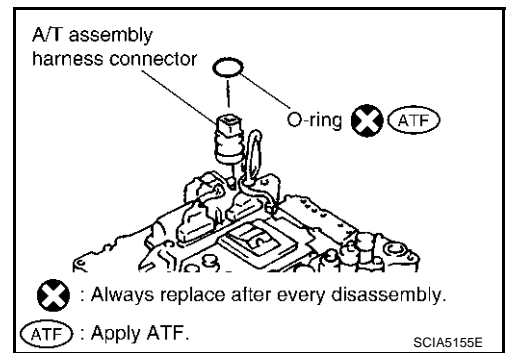

- e. Install A/T fluid temperature sensor 2 to bracket.

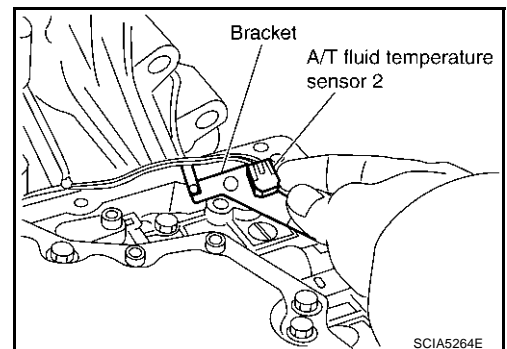


- f. Install A/T fluid temperature sensor 2 (with bracket) in control valve with TCM.

CAUTION:

Adjust bolt hole of bracket to bolt hole of control valve.

 : 7.9 N·m (0.81 kg-m, 70 in-lb)

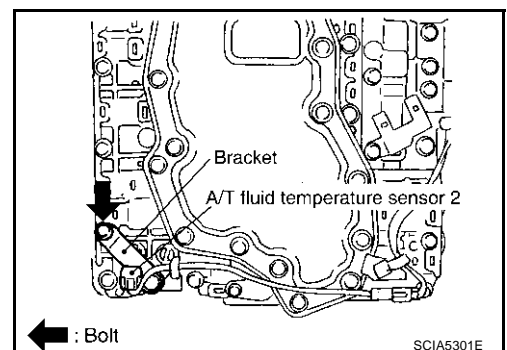


ASSEMBLY


g. Install control valve with TCM in transmission case.

CAUTION:

- Make sure that turbine revolution sensor securely installs turbine revolution sensor hole.
- Hang down revolution sensor harness toward outside so as not to disturb installation of control valve with TCM.
- Adjust A/T assembly harness connector of control valve with TCM to terminal hole of transmission case.

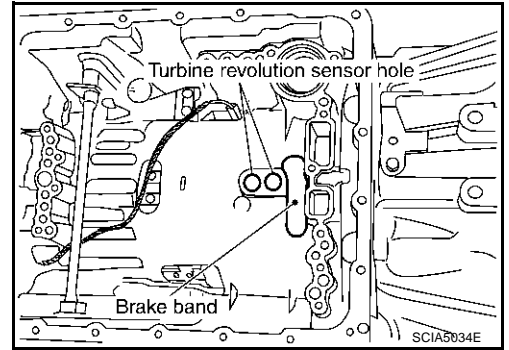


- Assemble it so that manual valve cutout is engaged with manual plate projection.

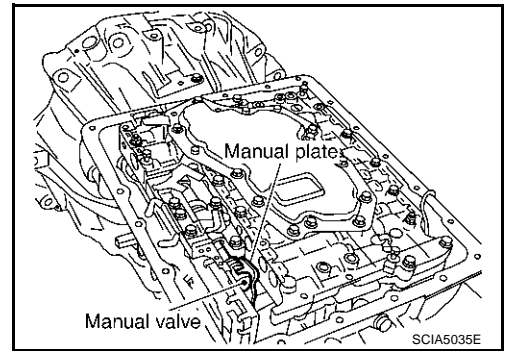


h. Install bolts A, B and C to control valve with TCM.

Bolt symbol	Length mm (in)	Number of bolts
A	42 (1.65)	5
B	55 (2.17)	6
C	40 (1.57)	1

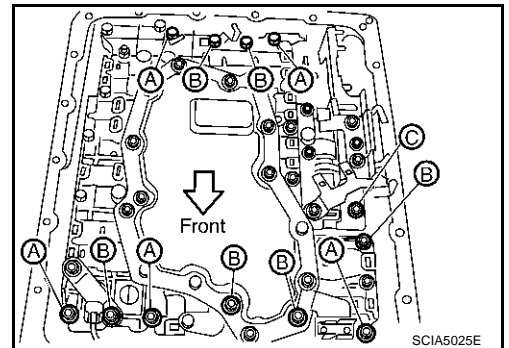

i. Tighten bolt 1, 2 and 3 temporarily to prevent dislocation. After that tighten them in order (1 → 2 → 3), and then tighten other bolts.


 : 7.9 N·m (0.81 kg·m, 70 in·lb)

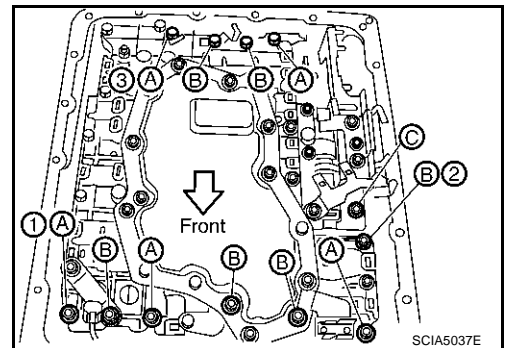


A
B
AT
D
E
F
G
H
I
J
K
L
M

ASSEMBLY


10. Connect A/T fluid temperature sensor 2 connector.

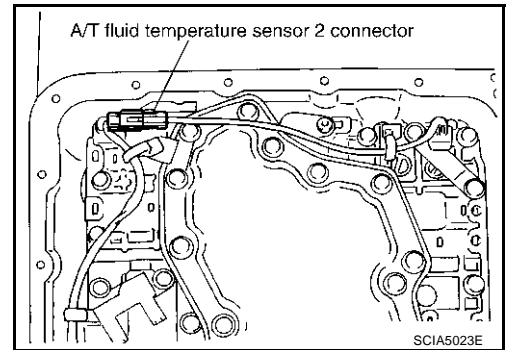


11. Securely fasten terminal cord assembly and A/T fluid temperature sensor 2 harness with terminal clips.

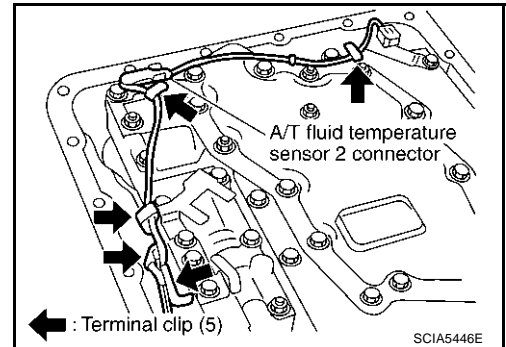

12. Connect revolution sensor connector.

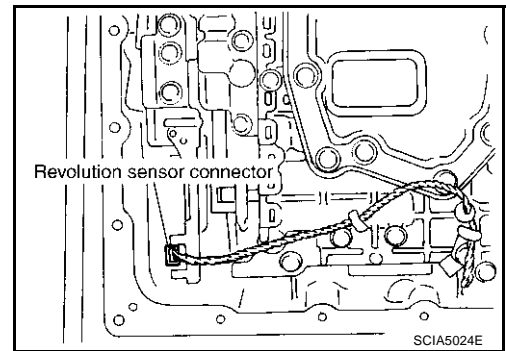


13. Securely fasten revolution sensor harness with terminal clips.

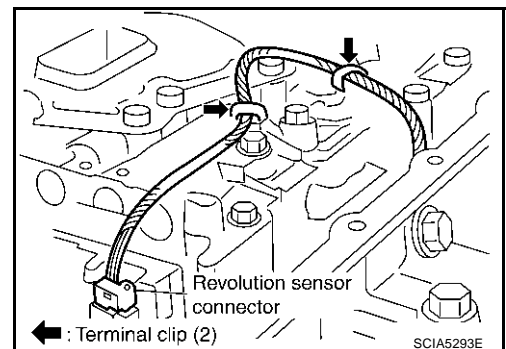


14. Pull down A/T assembly harness connector.

CAUTION:
Be careful not to damage connector.

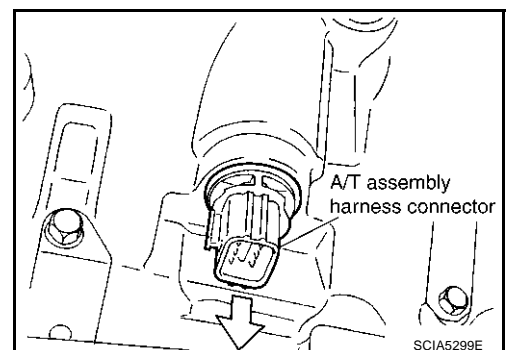


ASSEMBLY

15. Install snap ring to A/T assembly harness connector.

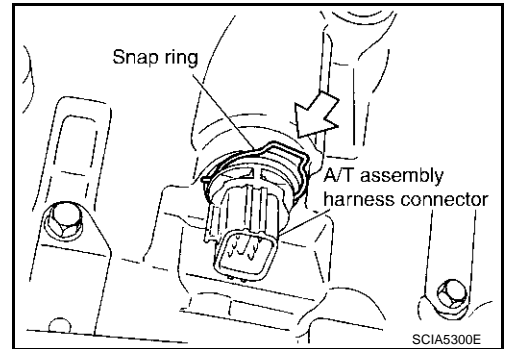

16. Install magnets in oil pan.

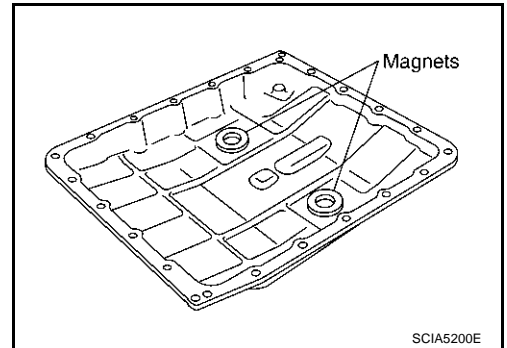

17. Install oil pan to transmission case.

a. Install oil pan gasket to oil pan.


CAUTION:

- Do not reuse oil pan gasket.
- Install it in the direction to align hole positions.
- Complete remove all moisture, oil and old gasket, etc. from oil pan gasket mounting surface.

b. Install oil pan (with oil pan gasket) to transmission case.

CAUTION:

- Install it so that drain plug comes to the position as shown in the figure.
- Be careful not to pinch harnesses.
- Complete remove all moisture, oil and old gasket, etc. from oil pan mounting surface.

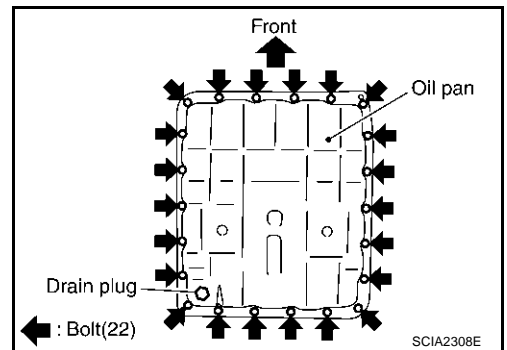

c. Tighten oil pan mounting bolts to the specified torque in numerical order shown in the figure after temporarily tightening them.

CAUTION:

Do not reuse oil pan mounting bolts.


 : 7.9 N·m (0.81 kg-m, 70 in-lb)

18. Install drain plug to oil pan.

CAUTION:

Do not reuse drain plug gasket.

 : 34 N·m (3.5 kg-m, 25 ft-lb)

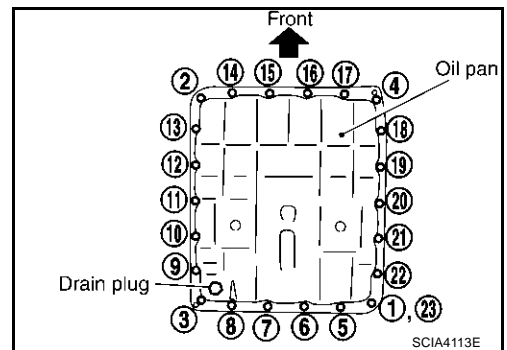


A
B
AT
D
E
F
G
H
I
J
K
L
M

ASSEMBLY

19. Install torque converter.

a. Pour ATF into torque converter.


- Approximately 2 liter (2-1/8 US qt, 1-3/4 Imp qt) of fluid is required for a new torque converter.
- When reusing old torque converter, add the same amount of fluid as was drained.

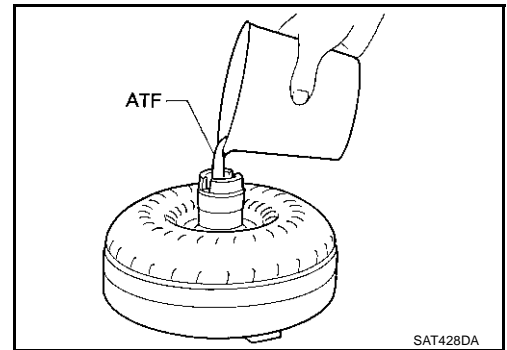

b. Install torque converter while aligning notches of torque converter with notches of oil pump.


CAUTION:

Install torque converter while rotating it.

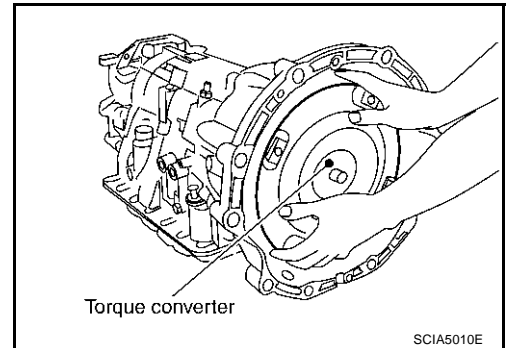

c. Measure distance "A" to check that torque converter is in proper position.

Distance "A": 25.0 mm (0.98 in) or more

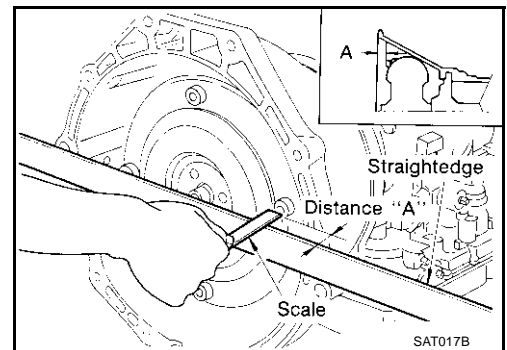

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

PPF:00030

General Specifications

ACS0000I

Applied model	VQ35DE engine		
Automatic transmission model	RE5R05A		
Transmission model code number	90X72	91X05	91X22
Stall torque ratio	2.0: 1		
Transmission gear ratio	1st	3.540	
	2nd	2.264	
	3rd	1.417	
	4th	1.000	
	5th	0.834	
	Reverse	2.370	
Recommended fluid	Nissan Matic J ATF*1		
Fluid capacity	10.3 liter (10-7/8 US qt, 9-1/8 Imp qt)		

CAUTION:

- Use only Genuine Nissan Matic J ATF. Do not mix with other fluid.
- Using automatic transmission fluid other than Genuine Nissan Matic J ATF will deteriorate in driveability and automatic transmission durability, and may damage the automatic transmission, which is not covered by the NISSAN new vehicle limited warranty.

*1: Refer to [MA-11, "Fluids and Lubricants"](#).

Vehicle Speed When Shifting Gears

ACS0000J

Throttle position	Vehicle Speed km/h (MPH)							
	D1 →D2	D2 →D3	D3 →D4	D4 →D5	D5 →D4	D4 →D3	D3 →D2	D2 →D1
Full throttle	58 - 62 (36 - 39)	90 - 98 (56 - 61)	140 - 150 (87 - 93)	201 - 211 (125 - 131)	197 - 207 (122 - 129)	122 - 132 (76 - 82)	74 - 82 (46 - 51)	34 - 38 (23 - 25)
Half throttle	46 - 50 (29 - 31)	71 - 79 (44 - 49)	107 - 117 (66 - 73)	135 - 145 (84 - 90)	88 - 98 (55 - 61)	63 - 73 (39 - 45)	29 - 37 (18 - 23)	11 - 15 (7 - 9)

- At half throttle, the accelerator opening is 4/8 of the full opening.

Vehicle Speed When Performing and Releasing Complete Lock-up

ACS0000K

Throttle position	Vehicle speed km/h (MPH)	
	Lock-up "ON"	Lock-up "OFF"
Closed throttle	56 - 64 (35 - 40)	53 - 61 (33 - 38)
Half throttle	168 - 176 (104 - 109)	131 - 139 (81 - 86)

- At closed throttle, the accelerator opening is less than 1/8 condition.
- At half throttle, the accelerator opening is 4/8 of the full opening.

Vehicle Speed When Performing and Releasing Slip Lock-up

ACS0000L

Throttle position	Gear position	Vehicle speed km/h (MPH)	
		Slip lock-up "ON"	Slip lock-up "OFF"
Closed throttle	4th	37 - 45 (23 - 28)	34 - 42 (21 - 26)
	5th	44 - 52 (27 - 32)	41 - 49 (25 - 30)

- At closed throttle, the accelerator opening is less than 1/8 condition.

Stall Speed

ACS0000M

Stall speed	2,650 - 2,950 rpm
-------------	-------------------

SERVICE DATA AND SPECIFICATIONS (SDS)

Line Pressure

ACS000ON

Engine speed	Line pressure [kPa (kg/cm ² , psi)]	
	R position	D, M positions
At idle speed	392 - 441 (4.0 - 4.5, 57 - 64)	373 - 422 (3.8 - 4.3, 54 - 61)
At stall speed	1,700 - 1,890 (17.3 - 19.3, 247 - 274)	1,310 - 1,500 (13.3 - 15.3, 190 - 218)

A/T Fluid Temperature Sensor

ACS008RR

Name	Condition	CONSULT-II "DATA MONITOR" (Approx.) (V)	Resistance (Approx.) (kΩ)
A/T fluid temperature sensor 1	0°C (32°F)	2.2	15
	20°C (68°F)	1.8	6.5
	80°C (176°F)	0.6	0.9
A/T fluid temperature sensor 2	0°C (32°F)	2.2	10
	20°C (68°F)	1.7	4
	80°C (176°F)	0.45	0.5

Turbine Revolution Sensor

ACS008RS

Name	Condition	Data (Approx.)
Turbine revolution sensor 1	When running at 50 km/h (31 MPH) in 4th speed with the closed throttle position switch "OFF".	1.3 (kHz)
Turbine revolution sensor 2	When moving at 20 km/h (12 MPH) in 1st speed with the closed throttle position switch "OFF".	

Vehicle Speed Sensor A/T (Revolution Sensor)

ACS008RT

Name	Condition	Data (Approx.)
Revolution sensor	When moving at 20 km/h (12 MPH).	185 (Hz)

Reverse Brake

ACS008RU

	Thickness mm (in)	Part number*
Thickness of retaining plates	4.2 (0.165)	31667 90X14
	4.4 (0.173)	31667 90X15
	4.6 (0.181)	31667 90X16
	4.8 (0.189)	31667 90X17
	5.0 (0.197)	31667 90X18
	5.2 (0.205)	31667 90X19

*: Always check with the Parts Department for the latest parts information.

Total End Play

ACS008RV

Total end play mm (in)	0.25 - 0.55 (0.0098 - 0.0217)
------------------------	-------------------------------

BEARING RACE FOR ADJUSTING TOTAL END PLAY

Thickness mm (in)	Part number*
1.2 (0.047)	31435 90X02
1.4 (0.055)	31435 90X03
1.6 (0.063)	31435 90X04
1.8 (0.071)	31435 90X05
2.0 (0.079)	31435 90X06

*: Always check with the Parts Department for the latest parts information.