

# SECTION **ATC**

## AUTOMATIC AIR CONDITIONER

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

### CONTENTS

<p><b>PRECAUTIONS ..... 4</b></p> <p>    Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" ..... 4</p> <p>    Precautions for Working with HFC-134a (R-134a).... 4</p> <p>    Contaminated Refrigerant ..... 4</p> <p>    General Refrigerant Precautions ..... 5</p> <p>    Precautions for Leak Detection Dye ..... 5</p> <p>    A/C Identification Label ..... 5</p> <p>    Precautions for Refrigerant Connection ..... 6</p> <p>    <b>FEATURES OF NEW TYPE REFRIGERANT CONNECTION ..... 6</b></p> <p>    <b>O-RING AND REFRIGERANT CONNECTION..... 7</b></p> <p>    Precautions for Servicing Compressor ..... 9</p> <p>    Precautions for Service Equipment ..... 9</p> <p>    <b>RECOVERY/RECYCLING EQUIPMENT ..... 9</b></p> <p>    <b>ELECTRONIC LEAK DETECTOR ..... 9</b></p> <p>    <b>VACUUM PUMP ..... 10</b></p> <p>    <b>MANIFOLD GAUGE SET ..... 10</b></p> <p>    <b>SERVICE HOSES ..... 10</b></p> <p>    <b>SERVICE COUPLERS ..... 11</b></p> <p>    <b>REFRIGERANT WEIGHT SCALE ..... 11</b></p> <p>    <b>CALIBRATING ACR4 WEIGHT SCALE ..... 11</b></p> <p>    <b>CHARGING CYLINDER ..... 11</b></p> <p>    Wiring Diagrams and Trouble Diagnosis ..... 11</p> <p><b>PREPARATION ..... 12</b></p> <p>    Special Service Tools ..... 12</p> <p>    HFC-134a (R-134a) Service Tools and Equipment.. 12</p> <p>    Commercial Service Tools ..... 15</p> <p><b>REFRIGERATION SYSTEM ..... 16</b></p> <p>    Refrigerant Cycle ..... 16</p> <p>        REFRIGERANT FLOW ..... 16</p> <p>    Refrigerant System Protection ..... 16</p> <p>        REFRIGERANT PRESSURE SENSOR ..... 16</p> <p>        PRESSURE RELIEF VALVE ..... 16</p> <p>    Component Layout ..... 17</p> <p><b>LUBRICANT ..... 18</b></p> <p>    Maintenance of Lubricant Quantity in Compressor.. 18</p> <p>        LUBRICANT ..... 18</p> <p>        CHECKING AND ADJUSTING ..... 18</p>	<p><b>AIR CONDITIONER CONTROL ..... 21</b></p> <p>    Overview Air Conditioner LAN Control System ..... 21</p> <p>    System Construction ..... 21</p> <p>        OPERATION ..... 21</p> <p>        TRANSMISSION DATA AND TRANSMISSION ORDER ..... 22</p> <p>        AIR MIX DOOR CONTROL (AUTOMATIC TEMPERATURE CONTROL) ..... 22</p> <p>        FAN SPEED CONTROL ..... 23</p> <p>        INTAKE DOOR CONTROL ..... 23</p> <p>        OUTLET DOOR CONTROL ..... 23</p> <p>        MAGNET CLUTCH CONTROL ..... 23</p> <p>        SELF-DIAGNOSTIC SYSTEM ..... 23</p> <p>    Overview of Control system ..... 23</p> <p>    Control Operation ..... 24</p> <p>        DISPLAY SCREEN ..... 24</p> <p>        AUTO SWITCH ..... 24</p> <p>        ECON (ECONOMY) SWITCH ..... 24</p> <p>        TEMPERATURE DIAL (POTENTIO TEMPERATURE CONTROL) ..... 24</p> <p>        OFF SWITCH ..... 24</p> <p>        FAN SWITCH ..... 24</p> <p>        RECIRCULATION (REC) SWITCH ..... 24</p> <p>        DEFROSTER (DEF) SWITCH ..... 24</p> <p>        MODE SWITCH ..... 24</p> <p>        REAR WINDOW DEFOGGER SWITCH ..... 24</p> <p>    Discharge Air Flow ..... 25</p> <p>    System Description ..... 26</p> <p>        SWITCHES AND THEIR CONTROL FUNCTION.. 26</p> <p>    CAN Communication System Description ..... 26</p> <p>        FOR TCS MODELS ..... 27</p> <p>        FOR A/T MODELS ..... 28</p> <p>        FOR M/T MODELS ..... 29</p> <p><b>TROUBLE DIAGNOSIS ..... 31</b></p> <p>    How to Perform Trouble Diagnoses for Quick and Accurate Repair ..... 31</p> <p>        WORK FLOW ..... 31</p> <p>        SYMPTOM TABLE ..... 31</p> <p>    Component Parts and Harness Connector Location.. 32</p> <p>        ENGINE COMPARTMENT ..... 32</p>
---	---

ATC

PASSENGER COMPARTMENT .....	33	INSPECTION FLOW .....	88
Circuit Diagram .....	34	Self-diagnosis .....	89
Wiring Diagram — A/C,A — .....	35	INSPECTION FLOW .....	89
Auto Amp. Terminals and Reference Value .....	39	Memory Function .....	90
INSPECTION OF AUTO AMP. ....	39	INSPECTION FLOW .....	90
A/C AUTO AMP. HARNESS CONNECTOR TER-		ECON (ECONOMY) Mode .....	91
MINAL LAYOUT .....	39	INSPECTION FLOW .....	91
AUTO AMP. INSPECTION TABLE .....	39	Ambient Sensor Circuit .....	91
Self-diagnosis .....	41	COMPONENT DESCRIPTION .....	91
DESCRIPTION .....	41	AMBIENT TEMPERATURE INPUT PROCESS...	91
FUNCTION CONFIRMATION PROCEDURE ....	42	DIAGNOSTIC PROCEDURE .....	92
AUXILIARY MECHANISM: TEMPERATURE		COMPONENT INSPECTION .....	93
SETTING TRIMMER .....	48	In-vehicle Sensor Circuit .....	93
Operational Check .....	49	COMPONENT DESCRIPTION .....	93
CONDITIONS: .....	49	DIAGNOSTIC PROCEDURE .....	94
PROCEDURE: .....	49	COMPONENT INSPECTION .....	96
Power Supply and Ground Circuit for Auto Amp. ...	52	Sunload Sensor Circuit .....	96
COMPONENT DESCRIPTION .....	52	COMPONENT DESCRIPTION .....	96
DIAGNOSTIC PROCEDURE .....	53	SUNLOAD INPUT PROCESS .....	96
LAN System Circuit .....	55	DIAGNOSTIC PROCEDURE .....	97
DIAGNOSTIC PROCEDURE .....	55	COMPONENT INSPECTION .....	98
Mode Door Motor Circuit .....	58	Intake Sensor Circuit .....	99
INSPECTION FLOW .....	58	COMPONENT DESCRIPTION .....	99
SYSTEM DESCRIPTION .....	59	DIAGNOSTIC PROCEDURE .....	100
COMPONENT DESCRIPTION .....	60	<b>AUTO AMP .....</b>	<b>102</b>
DIAGNOSTIC PROCEDURE .....	60	Removal and Installation .....	102
MODE DOOR .....	60	<b>AMBIENT SENSOR .....</b>	<b>103</b>
Air Mix Door Motor Circuit .....	61	Removal and Installation .....	103
INSPECTION FLOW .....	61	<b>IN-VEHICLE SENSOR .....</b>	<b>104</b>
SYSTEM DESCRIPTION .....	62	Removal and Installation .....	104
COMPONENT DESCRIPTION .....	63	<b>SUNLOAD SENSOR .....</b>	<b>105</b>
DIAGNOSTIC PROCEDURE .....	63	Removal and Installation .....	105
AIR MIX DOOR .....	63	<b>INTAKE SENSOR .....</b>	<b>106</b>
Intake Door Motor Circuit .....	64	Removal and Installation .....	106
INSPECTION FLOW .....	64	<b>THERMO CONTROL AMPLIFIER .....</b>	<b>107</b>
SYSTEM DESCRIPTION .....	65	Removal and Installation .....	107
COMPONENT DESCRIPTION .....	66	<b>BLOWER UNIT .....</b>	<b>108</b>
DIAGNOSTIC PROCEDURE .....	66	Removal and Installation .....	108
INTAKE DOOR .....	66	REMOVAL .....	108
Blower Motor Circuit .....	67	<b>BLOWER MOTOR .....</b>	<b>109</b>
INSPECTION FLOW .....	67	Removal and Installation .....	109
SYSTEM DESCRIPTION .....	68	<b>INTAKE DOOR MOTOR .....</b>	<b>110</b>
COMPONENT DESCRIPTION .....	69	Removal and Installation .....	110
DIAGNOSTIC PROCEDURE .....	69	<b>IN-CABIN MICROFILTER .....</b>	<b>111</b>
COMPONENT INSPECTION .....	73	Removal and Installation .....	111
Magnet Clutch Circuit .....	74	FUNCTION .....	111
INSPECTION FLOW .....	74	REPLACEMENT TIMING .....	111
SYSTEM DESCRIPTION .....	75	REPLACEMENT PROCEDURES .....	111
DIAGNOSTIC PROCEDURE .....	75	<b>HEATER &amp; COOLING UNIT ASSEMBLY .....</b>	<b>112</b>
COMPONENT INSPECTION .....	79	Removal and Installation .....	112
Insufficient Cooling .....	80	REMOVAL .....	112
INSPECTION FLOW .....	80	INSTALLATION .....	112
PERFORMANCE TEST DIAGNOSES .....	81	<b>HEATER CORE .....</b>	<b>113</b>
PERFORMANCE CHART .....	82	Removal and Installation .....	113
TROUBLE DIAGNOSES FOR ABNORMAL		<b>MODE DOOR MOTOR .....</b>	<b>114</b>
PRESSURE .....	83	Removal and Installation .....	114
Insufficient Heating .....	87	<b>AIR MIX DOOR MOTOR .....</b>	<b>115</b>
INSPECTION FLOW .....	87	Removal and Installation .....	115
Noise .....	88		

<b>FAN CONTROL AMPLIFIER</b> .....	<b>116</b>	Removal and Installation for High-pressure Pipe .	126	
Removal and Installation .....	116	REMOVAL .....	126	A
<b>DUCTS AND GRILLES</b> .....	<b>117</b>	INSTALLATION .....	126	
Removal and Installation .....	117	Removal and Installation for Refrigerant Pressure		
Ventilator Duct, Defroster Nozzle and Defroster		Sensor .....	126	B
Ducts .....	117	Removal and Installation for Condenser .....	126	
Center Ventilator Grille .....	117	REMOVAL .....	126	
Side Ventilator Grille LH .....	117	INSTALLATION .....	127	C
Side Ventilator Grille RH .....	118	Removal and Installation for Liquid Tank .....	127	
Floor duct .....	118	Removal and Installation for Evaporator .....	128	
<b>REFRIGERANT LINES</b> .....	<b>119</b>	REMOVAL .....	128	
HFC-134a (R-134a) Service Procedure .....	119	INSTALLATION .....	129	D
SETTING OF SERVICE TOOLS AND EQUIP-		Removal and Installation for Expansion Valve .....	129	
MENT .....	119	REMOVAL .....	129	
Components .....	121	INSTALLATION .....	129	E
Removal and Installation for Compressor .....	122	Checking for Refrigerant Leaks .....	129	
REMOVAL .....	122	Checking System for Leaks Using the Fluorescent		
INSTALLATION .....	122	Leak Detector .....	130	F
Removal and Installation for Compressor Clutch .	123	Dye Injection .....	130	
REMOVAL .....	123	Electronic Refrigerant Leak Detector .....	130	
INSPECTION .....	124	PRECAUTIONS FOR HANDLING LEAK		
INSTALLATION .....	124	DETECTOR .....	130	G
BREAK-IN OPERATION .....	125	CHECKING PROCEDURE .....	131	
Removal and Installation for Low-pressure Flexible		<b>SERVICE DATA AND SPECIFICATIONS (SDS) ...</b>	<b>133</b>	
Hose .....	125	Service Data and Specifications (SDS) .....	133	H
REMOVAL .....	125	COMPRESSOR .....	133	
INSTALLATION .....	125	LUBRICANT .....	133	
Removal and Installation for High-pressure Flexible		REFRIGERANT .....	133	I
Hose .....	126	ENGINE IDLING SPEED .....	133	
REMOVAL .....	126	BELT TENSION .....	133	
INSTALLATION .....	126			

ATC

K  
L  
M

# PRECAUTIONS

## PRECAUTIONS

PFP:00001

### Precautions for Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER”

EJS000WP

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER”, used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

### Precautions for Working with HFC-134a (R-134a)

EJS000WQ

#### **WARNING:**

- CFC-12 (R-12) refrigerant and HFC-134a (R-134a) refrigerant are not compatible. If the refrigerants are mixed and compressor failure is likely to occur. Refer [ATC-4, "Contaminated Refrigerant"](#) . To determine the purity of HFC-134a (R-134a) in the vehicle and recovery tank, use Refrigerant Recovery/Recycling Recharging equipment (ACR4) (J-39500-NI) and Refrigerant Identifier.
- Use only specified lubricant for the HFC-134a (R-134a) A/C system and HFC-134a (R-134a) components. If lubricant other than that specified is used, compressor failure is likely to occur.
- The specified HFC-134a (R-134a) lubricant rapidly absorbs moisture from the atmosphere. The following handling precautions must be observed:
  - When removing refrigerant components from a vehicle, immediately cap (seal) the component to minimize the entry of moisture from the atmosphere.
  - When installing refrigerant components to a vehicle, do not remove the caps (unseal) until just before connecting the components. Connect all refrigerant loop components as quickly as possible to minimize the entry of moisture into system.
  - Only use the specified lubricant from a sealed container. Immediately reseal containers of lubricant. Without proper sealing, lubricant will become moisture saturated and should not be used.
  - Avoid breathing A/C refrigerant and lubricant vapor or mist. Exposure may irritate eyes, nose and throat. Remove R-134a from the A/C system using certified service equipment meeting requirements of SAE J2210 (R-134a recycling equipment), or J2209 (R-134a recovery equipment). If accidental system discharge occurs, ventilate work area before resuming service. Additional health and safety information may be obtained from refrigerant and lubricant manufacturers.
  - Do not allow lubricant (Nissan A/C System Oil Type DH-PS) to come in contact with styrofoam parts. Damage may result.

### Contaminated Refrigerant

EJS000WR

If a refrigerant other than pure R-134a is identified in a vehicle, your options are:

- Explain to the customer that environmental regulations prohibit the release of contaminated refrigerant into the atmosphere.
- Explain that recovery of the contaminated refrigerant could damage your service equipment and refrigerant supply.
- Suggest the customer return the vehicle to the location of previous service where the contamination may have occurred.
- If you choose to perform the repair, recover the refrigerant using only **dedicated equipment and containers. Do not recover contaminated refrigerant into your existing service equipment.** If your facility does not have dedicated recovery equipment, you may contact a local refrigerant product retailer for available service. This refrigerant must be disposed of in accordance with all federal and local regulations. In addition, replacement of all refrigerant system components on the vehicle is recommended.

# PRECAUTIONS

- If the vehicle is within the warranty period, the air conditioner warranty is void. Please contact Nissan Customer Affairs for further assistance.

## General Refrigerant Precautions

EJS000WS

### WARNING:

- Do not release refrigerant into the air. Use approved recovery/recycling equipment to capture the refrigerant every time an air conditioning system is discharged.
- Always wear eye and hand protection (goggles and gloves) when working with any refrigerant or air conditioning system.
- Do not store or heat refrigerant containers above 52°C (125°F).
- Do not heat a refrigerant container with an open flame; if container warming is required, place the bottom of the container in a warm pail of water.
- Do not intentionally drop, puncture, or incinerate refrigerant containers.
- Keep refrigerant away from open flames: poisonous gas will be produced if refrigerant burns.
- Refrigerant will displace oxygen, therefore be certain to work in well ventilated areas to prevent suffocation.
- Do not pressure test or leak test HFC-134a (R-134a) service equipment and/or vehicle air conditioning systems with compressed air during repair. Some mixtures of air and R-134a have been shown to be combustible at elevated pressures. These mixtures, if ignited, may cause injury or property damage. Additional health and safety information may be obtained from refrigerant manufacturers.

## Precautions for Leak Detection Dye

EJS000WT

- The A/C system contains a fluorescent leak detection dye used for locating refrigerant leaks. An ultraviolet (UV) lamp is required to illuminate the dye when inspecting for leaks.
- Always wear fluorescence enhancing UV safety glasses to protect your eyes and enhance the visibility of the fluorescent dye.
- A compressor shaft seal should not be repaired because of dye seepage. The compressor shaft seal should only be repaired after confirming the leak with an electronic refrigerant leak detector (J-41995).
- Always remove any dye from the leak area after repairs are complete to avoid a misdiagnosis during a future service.
- Do not allow dye to come into contact with painted body panels or interior components. If dye is spilled, clean immediately with the approved dye cleaner. Fluorescent dye left on a surface for an extended period of time **cannot be removed**.
- Do not spray the fluorescent dye cleaning agent on hot surfaces (engine exhaust manifold, etc.).
- Do not use more than one refrigerant dye bottle (1/4 ounce / 7.4 cc) per A/C system.
- Leak detection dyes for R-134a and R-12 A/C systems are different. Do not use R-134a leak detection dye in R-12 A/C systems or R-12 leak detection dye in R-134a A/C systems or A/C system damage may result.
- The fluorescent properties of the dye will remain for over three (3) years unless a compressor failure occurs.

## A/C Identification Label

EJS000WU

Vehicles with factory installed fluorescent dye have this identification label on the underside of hood.

### NOTE:

Vehicles with factory installed fluorescent dye have a green label.

AIR CONDITIONER NISSAN		
	REFRIGERANT	COMPRESSOR LUBRICANT
TYPE (PART NO.)	HFC134a (R134a)	Nissan Luminous Oil Type DH-PS [KLH00-PAGS0]
AMOUNT	0.50 ± .025 kg (1.10 ± 0.055lbs)	150ml (5.03 oz)
<b>CAUTION PRECAUTION</b>		
<ul style="list-style-type: none"> <li>• REFRIGERANT UNDER HIGH PRESSURE</li> <li>• SYSTEM TO BE SERVICED BY QUALIFIED PERSONNEL</li> <li>• IMPROPER SERVICE METHODS MAY CAUSE PERSONAL INJURY.</li> <li>• CONSULT SERVICE MANUAL.</li> <li>• THIS AIR CONDITIONER SYSTEM COMPLIES WITH SAE J-639.</li> </ul>		
Nissan Motor Corporation in USA, Carson, CA		

WJIA0012E

# PRECAUTIONS

EJS000WV


## Precautions for Refrigerant Connection

A new type refrigerant connection has been introduced to all refrigerant lines except the following locations.

- Expansion valve to cooling unit
- Evaporator pipes to evaporator (inside cooling unit)
- Refrigerant pressure sensor



## FEATURES OF NEW TYPE REFRIGERANT CONNECTION

- The O-ring has been relocated. It has also been provided with a groove for proper installation. This eliminates the chance of the O-ring being caught in, or damaged by, the mating part. The sealing direction of the O-ring is now set vertically in relation to the contacting surface of the mating part to improve sealing characteristics.
- The reaction force of the O-ring will not occur in the direction that causes the joint to pull out, thereby facilitating piping connections.

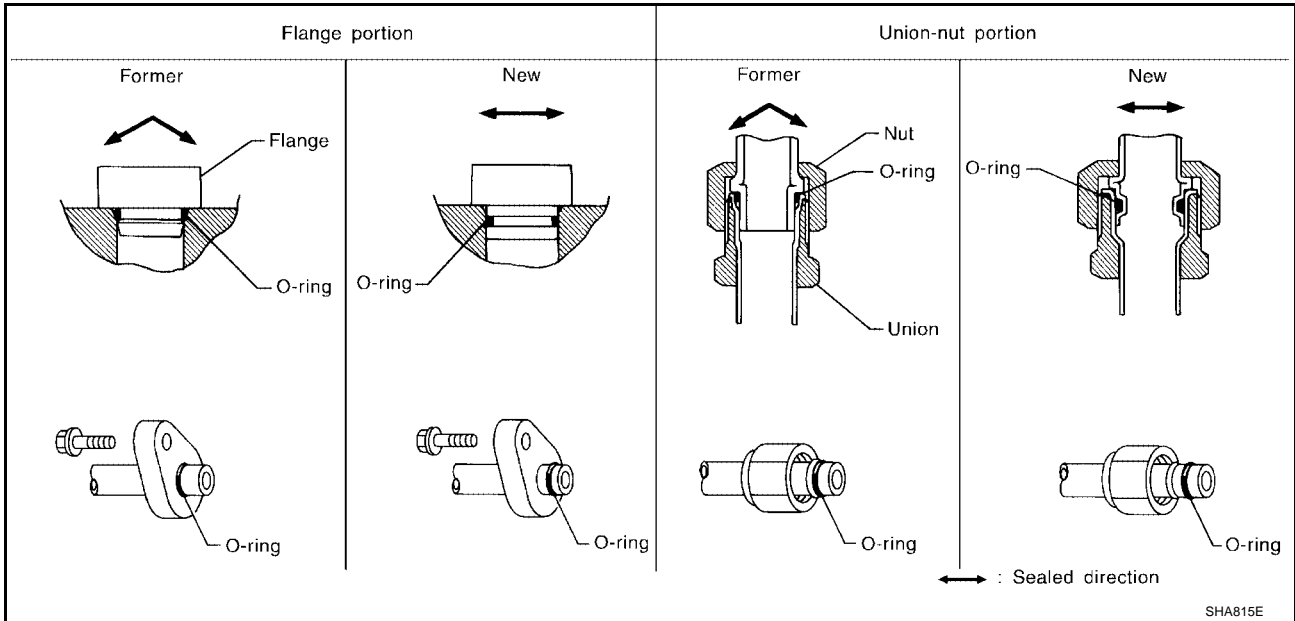

# PRECAUTIONS

## O-RING AND REFRIGERANT CONNECTION

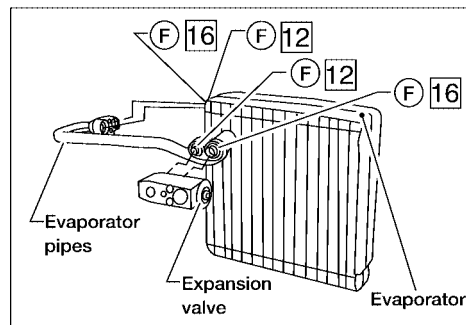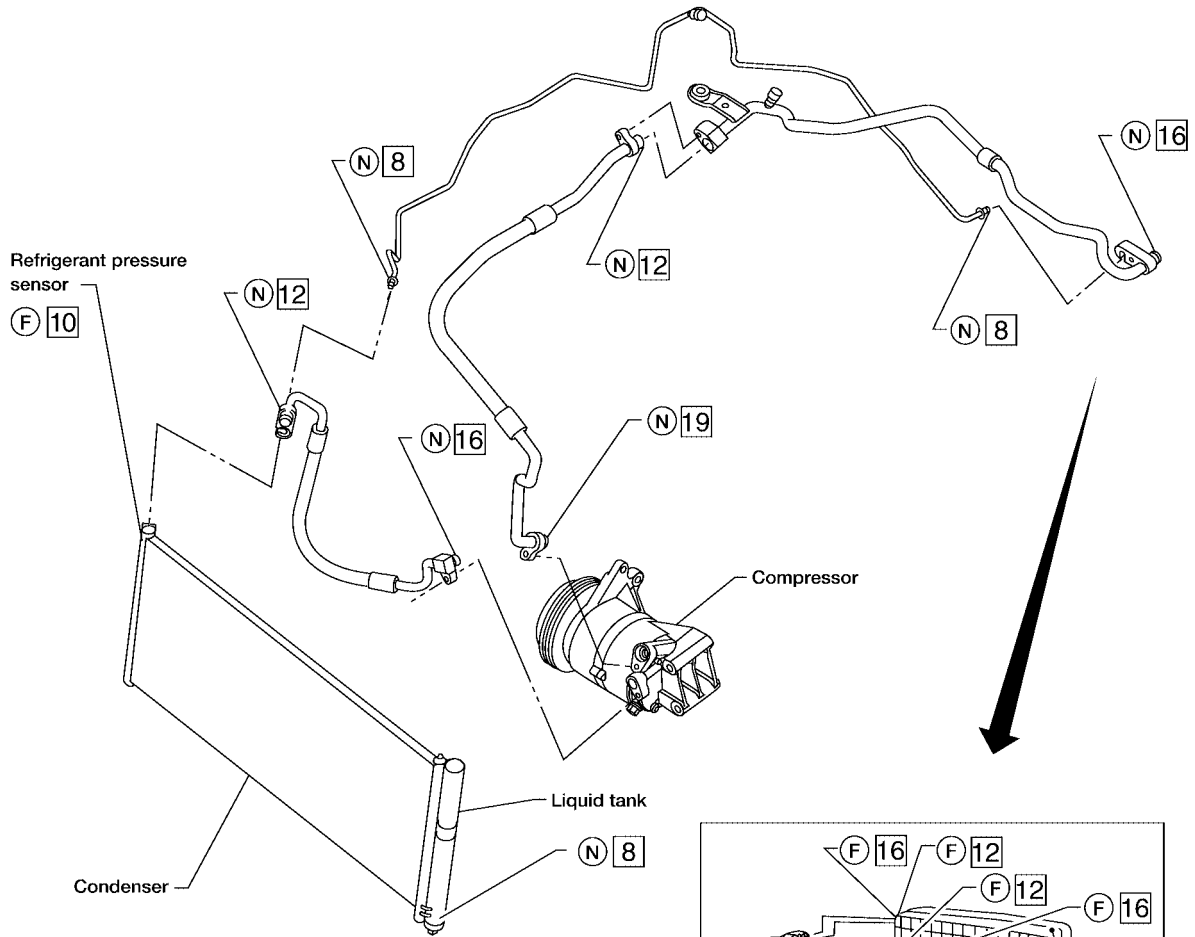

(F) : Former type refrigerant connection

(N) : New type refrigerant connection

□ : O-ring size

WJIA0135E


### CAUTION:

The new and former refrigerant connections use different O-ring configurations. Do not confuse O-rings since they are not interchangeable. If a wrong O-ring is installed, refrigerant will leak at, or around, the connection.

A  
B  
C  
D  
E  
F  
G  
H  
I  
ATC  
K  
L  
M

# PRECAUTIONS

## O-Ring Part Numbers and Specifications

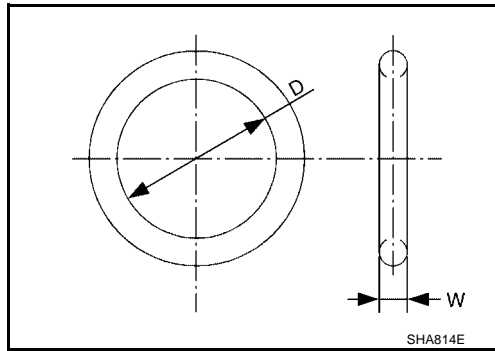

Conne- ction type	O-ring size	Part number*	D mm (in)	W mm (in)
New	8	92471 N8210	6.8 (0.268)	1.85 (0.0728)
Former	10	J2476 89956	9.25 (0.3642)	1.78 (0.0701)
New	12	92472 N8210	10.9 (0.429)	2.43 (0.0957)
Former		92475 71L00	11.0 (0.433)	2.4 (0.094)
New	16	92473 N8210	13.6 (0.535)	2.43 (0.0957)
Former		92475 72L00	14.3 (0.563)	2.3 (0.091)
New	19	92474 N8210	16.5 (0.650)	2.43 (0.0957)
Former		92477 N8200	17.12 (0.6740)	1.78 (0.0701)
New	24	92195 AH300	21.8 (0.858)	2.4 (0.094)

\*: Always check with the Parts Department for the latest parts information.

### WARNING:

Make sure all refrigerant is discharged into the recycling equipment and the pressure in the system is less than atmospheric pressure. Then gradually loosen the discharge side hose fitting and remove it.

### CAUTION:


When replacing or cleaning refrigerant cycle components, observe the following.

- When the compressor is removed, store it in the same position as it is when mounted on the car. Failure to do so will cause lubricant to enter the low pressure chamber.
- When connecting tubes, always use a torque wrench and a back-up wrench.
- After disconnecting tubes, immediately plug all openings to prevent entry of dirt and moisture.
- When installing an air conditioner in the vehicle, connect the pipes as the final stage of the operation. Do not remove the seal caps of pipes and other components until just before required for connection.
- Allow components stored in cool areas to warm to working area temperature before removing seal caps. This prevents condensation from forming inside A/C components.
- Thoroughly remove moisture from the refrigeration system before charging the refrigerant.
- Always replace used O-rings.
- When connecting tube, apply lubricant to circle of the O-rings shown in illustration. Be careful not to apply lubricant to threaded portion.  
Lubricant name: Nissan A/C System Oil Type DH-PS  
Part number: KLH00-PAGS0
- O-ring must be closely attached to dented portion of tube.
- When replacing the O-ring, be careful not to damage O-ring and tube.
- Connect tube until you hear it click, then tighten the nut or bolt by hand until snug. Make sure that the O-ring is installed to tube correctly.



# PRECAUTIONS

- After connecting line, conduct leak test and make sure that there is no leakage from connections. When the gas leaking point is found, disconnect that line and replace the O-ring. Then tighten connections of seal seat to the specified torque.

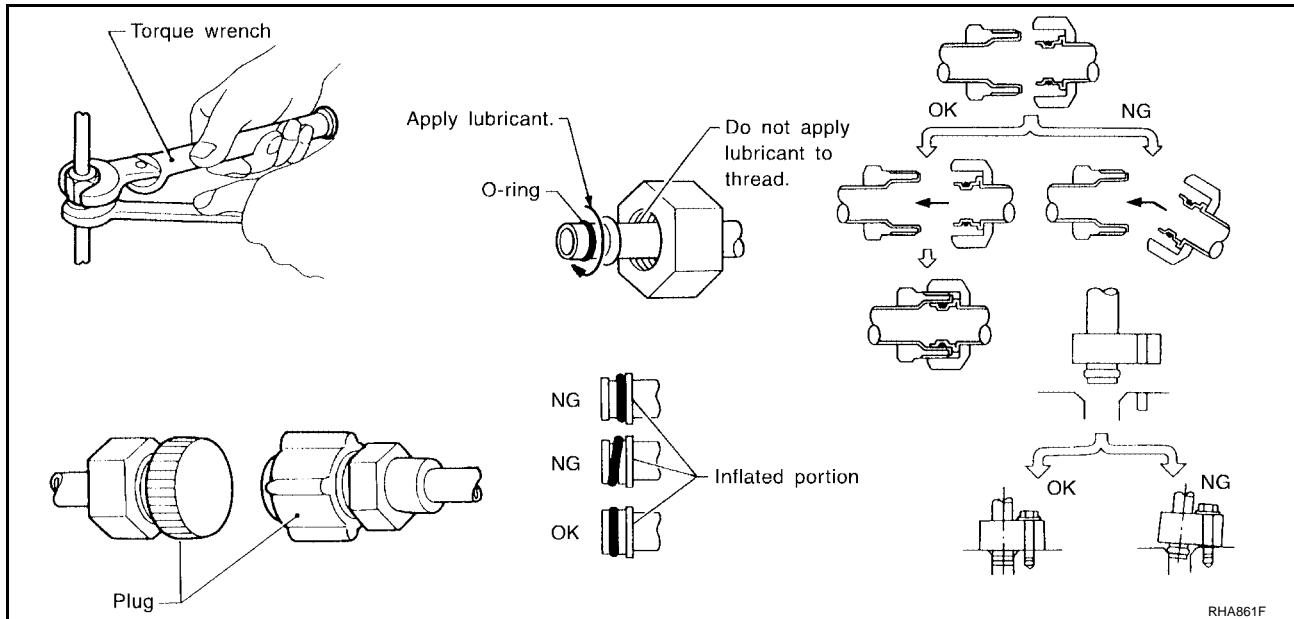

## Precautions for Servicing Compressor

EJS000WW

- Plug all openings to prevent moisture and foreign matter from entering.
- When the compressor is removed, store it in the same position as it is when mounted on the car.
- When replacing or repairing compressor, follow "Maintenance of Lubricant Quantity in Compressor" exactly. Refer to [ATC-18, "Maintenance of Lubricant Quantity in Compressor"](#).
- Keep friction surfaces between clutch and pulley clean. If the surface is contaminated, with lubricant, wipe it off by using a clean waste cloth moistened with thinner.
- After compressor service operation, turn the compressor shaft by hand more than 5 turns in both directions. This will equally distribute lubricant inside the compressor. After the compressor is installed, let the engine idle and operate the compressor for 1 hour.
- After replacing the compressor magnet clutch, apply voltage to the new one and check for normal operation. [Gap between clutch disc and pulley is 0.3 - 0.6 mm (0.012 - 0.024 in)]

## Precautions for Service Equipment RECOVERY/RECYCLING EQUIPMENT

EJS000WX

Follow the manufacturer's instructions for machine operation and machine maintenance. Never introduce any refrigerant other than that specified into the machine.

## ELECTRONIC LEAK DETECTOR

Follow the manufacturer's instructions for tester operation and tester maintenance.

# PRECAUTIONS


## VACUUM PUMP

The lubricant contained inside the vacuum pump is not compatible with the specified lubricant for HFC-134a (R-134a) A/C systems. The vent side of the vacuum pump is exposed to atmospheric pressure so the vacuum pump lubricant may migrate out of the pump into the service hose. This is possible when the pump is switched off after evacuation (vacuuming) and hose is connected to it.

To prevent this migration, use a manual valve situated near the hose-to-pump connection, as follows.


- Usually vacuum pumps have a manual isolator valve as part of the pump. Close this valve to isolate the service hose from the pump.
- For pumps without an isolator, use a hose equipped with a manual shut-off valve near the pump end. Close the valve to isolate the hose from the pump.
- If the hose has an automatic shut off valve, disconnect the hose from the pump: as long as the hose is connected, the valve is open and lubricating oil may migrate.

Some one-way valves open when vacuum is applied and close under a no vacuum condition. Such valves may restrict the pump's ability to pull a deep vacuum and are not recommended.

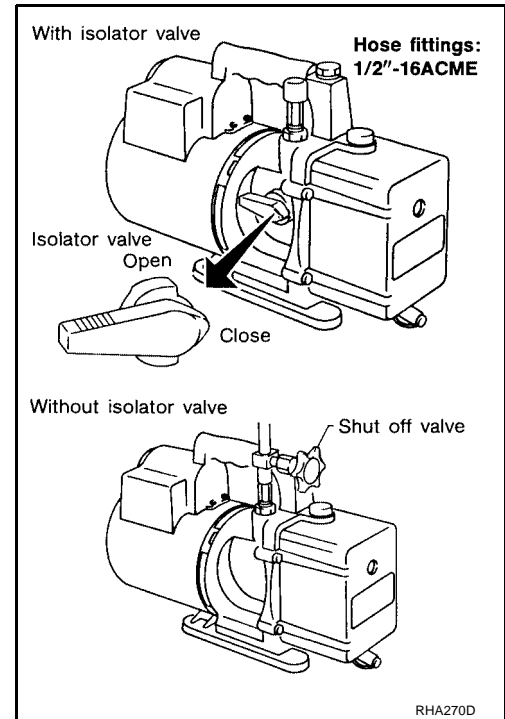


## MANIFOLD GAUGE SET

Be certain that the gauge face indicates R-134a or 134a. Make sure the gauge set has 1/2"-16 ACME threaded connections for service hoses. Confirm the set has been used only with refrigerant HFC-134a (R-134a) along with specified lubricant.

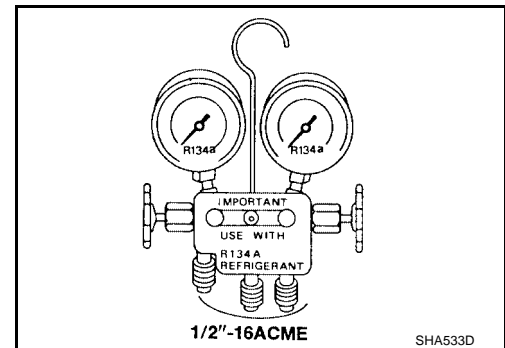

## SERVICE HOSES

Be certain that the service hoses display the markings described (colored hose with black stripe). All hoses must include positive shut-off devices (either manual or automatic) near the end of the hoses opposite the manifold gauge.

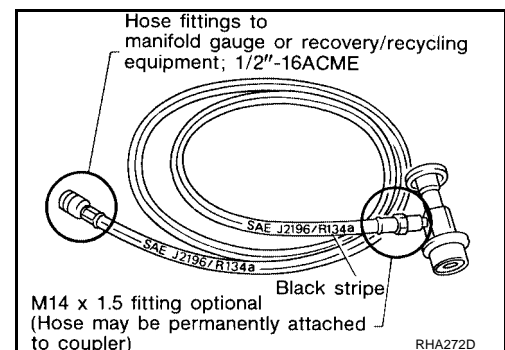


# PRECAUTIONS

## SERVICE COUPLERS


Never attempt to connect HFC-134a (R-134a) service couplers to a CFC-12 (R-12) A/C system. The HFC-134a (R-134a) couplers will not properly connect to the CFC-12 (R-12) system. However, if an improper connection is attempted, discharging and contamination may occur.

Shut-off valve rotation	A/C service valve
Clockwise	Open
Counterclockwise	Close

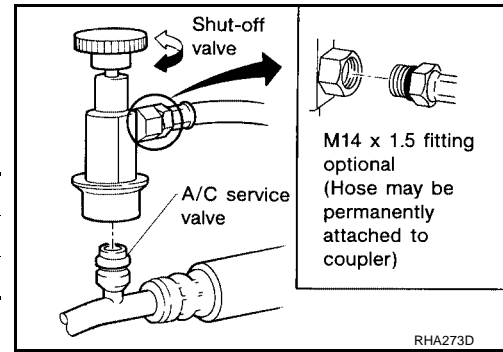

## REFRIGERANT WEIGHT SCALE

Verify that no refrigerant other than HFC-134a (R-134a) and specified lubricants have been used with the scale. If the scale controls refrigerant flow electronically, the hose fitting must be 1/2"-16 ACME.

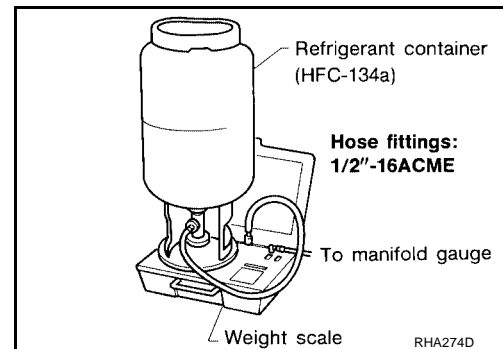

## CALIBRATING ACR4 WEIGHT SCALE

Calibrate the scale every three months.

To calibrate the weight scale on the ACR4 (J-39500-NI):

1. Press **Shift/Reset** and **Enter** at the same time.
2. Press **8787** . "A1" will be displayed.
3. Remove all weight from the scale.
4. Press **0** , then press **Enter** . "0.00" will be displayed and change to "A2" .
5. Place a known weight (dumbbell or similar weight), between 4.5 and 36.3 kg (10 and 80 lb) on the center of the weight scale.
6. Enter the known weight using four digits. (Example 10 lbs = 10.00, 10.5 lbs = 10.50)
7. Press **Enter** — the display returns to the vacuum mode.
8. Press **Shift/Reset** and **Enter** at the same time.
9. Press **6** — the known weight on the scale is displayed.
10. Remove the known weight from the scale. "0.00" will be displayed.
11. Press **Shift/Reset** to return the ACR4 to the program mode.

## CHARGING CYLINDER

Using a charging cylinder is not recommended. Refrigerant may be vented into air from cylinder's top valve when filling the cylinder with refrigerant. Also, the accuracy of the cylinder is generally less than that of an electronic scale or of quality recycle/recharge equipment.

## Wiring Diagrams and Trouble Diagnosis

EJS000WY

When you read wiring diagrams, refer to the following:

- [GI-12, "How to Read Wiring Diagrams"](#)
- [PG-5, "Wiring Diagram — POWER —"](#)

When you perform trouble diagnosis, refer to the following:

- [GI-9, "How to Follow Trouble Diagnoses"](#)
- [GI-25, "How to Perform Efficient Diagnosis for an Electrical Incident"](#)

# PREPARATION



PFP:00002

## PREPARATION

### Special Service Tools

*EJS000WZ*

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

Tool number (Kent-Moore No.) Tool name		Description
KV99234330 (J-38873) Pulley installer	  LHA171	Installing pulley
KV99233130 (J-29884) Pulley puller	  LHA172	Removing pulley

### HFC-134a (R-134a) Service Tools and Equipment



*EJS000X0*

Never mix HFC-134a refrigerant and/or its specified lubricant with CFC-12 (R-12) refrigerant and/or its lubricant.






Separate and non-interchangeable service equipment must be used for handling each type of refrigerant/lubricant.

Refrigerant container fittings, service hose fittings and service equipment fittings (equipment which handles refrigerant and/or lubricant) are different between CFC-12 (R-12) and HFC-134a (R-134a). This is to avoid mixed use of the refrigerants/lubricant.



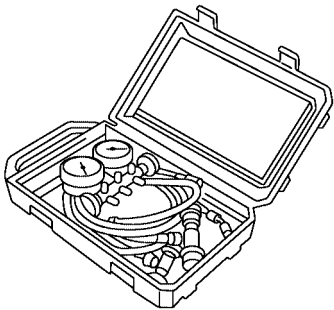
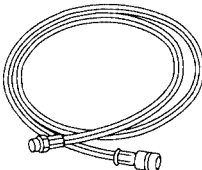
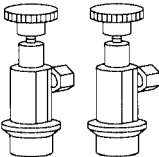
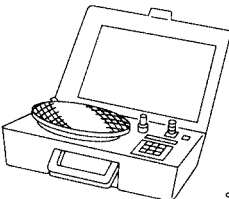
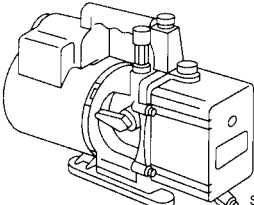
Adapters that convert one size fitting to another must never be used: refrigerant/lubricant contamination will occur and compressor failure will result.

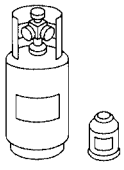Tool number (Kent-Moore No.) Tool name		Description
HFC-134a (R-134a) refrigerant	  S-NT196	Container color: Light blue Container marking: HFC-134a (R-134a) Fitting size: Thread size ● large container 1/2" -16 ACME
KLH00-PAGS0 (-) Nissan A/C System Oil Type DH-PS	  S-NT197	Type: Poly alkylene glycol oil (PAG), type DH-PS Application: HFC-134a (R-134a) vane rotary compressors (Nissan only) Lubricity: 40 mℓ (1.4 US fl oz, 1.4 Imp fl oz)

# PREPARATION

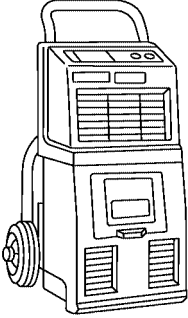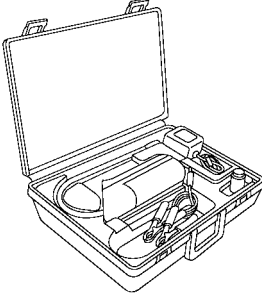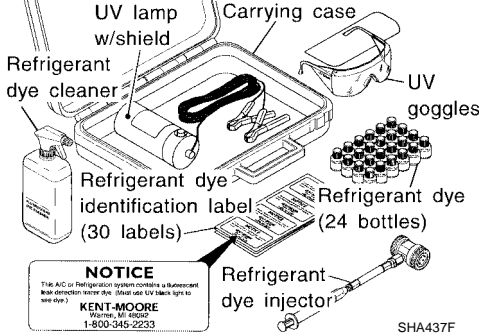Tool number (Kent-Moore No.) Tool name	Description	
<p>(J-39500-NI) Recovery/Recycling Recharging equipment (ACR4)</p>  <p style="text-align: right; margin-right: 50px;">RJIA0195E</p>	<p>Function:Refrigerant Recovery and Recycling and Recharging</p>	<p>A B C D</p>
<p>(J-41995) Electronic refrigerant leak detector</p>  <p style="text-align: right; margin-right: 50px;">AHA281A</p>	<p>Power supply: ● DC 12V (Cigarette lighter)</p>	<p>E F G H</p>
<p>(J-43926) Refrigerant dye leak detection kit Kit includes: (J-42220) UV lamp and UV safety glasses (J-41459) Refrigerant dye injector (J-41447) qty. 24 HFC-134a (R-134a) refrigerant dye (J-43872) Refrigerant dye cleaner</p>  <p style="text-align: right; margin-right: 50px;">SHA437F</p>	<p>Power supply: DC 12V (Battery terminal)</p>	<p>I <b>ATC</b> K</p>
<p>(J-42220) Fluorescent dye leak detector</p>  <p style="text-align: right; margin-right: 50px;">SHA438F</p>	<p>Power supply: DC 12V (Battery terminal) For checking refrigerant leak when fluorescent dye is installed in A/C system. Includes: UV lamp and UV safety glasses</p>	<p>L M</p>
<p>(J-41447) HFC-134a (R-134a) Fluorescent leak detection dye (Box of 24, 1/4 ounce bottles)</p>  <p style="text-align: right; margin-right: 50px;">SHA439F</p>	<p>Application: For HFC-134a (R-134a) PAG oil Container: 1/4 ounce (7.4cc) bottle (Includes self-adhesive dye identification labels for affixing to vehicle after charging system with dye.)</p>	




# PREPARATION

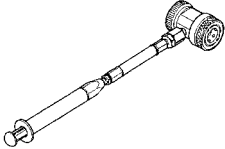Tool number (Kent-Moore No.) Tool name	Description
<p>(J-41459) HFC-134a (R-134a) Dye injector Use with J-41447, 1/4 ounce bottle</p>  <p style="text-align: right;">SHA440F</p>	<p>For injecting 1/4 ounce of fluorescent leak detection dye into A/C system.</p>
<p>(J-43872) Dye cleaner</p>  <p style="text-align: right;">SHA441F</p>	<p>For cleanig dye spills.</p>
<p>(J-39183-C) Manifold gauge set (with hoses and couplers)</p>  <p style="text-align: right;">RJIA0196E</p>	<p><b>Identification:</b></p> <ul style="list-style-type: none"> <li>● The gauge face indicates R-134a. Fitting size: Thread size</li> <li>● 1/2<sup>2</sup> -16 ACME</li> </ul>
<p><b>Service hoses</b></p> <ul style="list-style-type: none"> <li>● High side hose (J-39500-72B)</li> <li>● Low side hose (J-39500-72R)</li> <li>● Utility hose (J-39500-72Y)</li> </ul>  <p style="text-align: right;">S-NT201</p>	<p><b>Hose color:</b></p> <ul style="list-style-type: none"> <li>● Low side hose: Blue with black stripe</li> <li>● High side hose: Red with black stripe</li> <li>● Utility hose: Yellow with black stripe or green with black stripe</li> </ul> <p>Hose fitting to gauge:</p> <ul style="list-style-type: none"> <li>● 1/2<sup>2</sup> -16 ACME</li> </ul>
<p><b>Service couplers</b></p> <ul style="list-style-type: none"> <li>● High side coupler (J-39500-20A)</li> <li>● Low side coupler (J-39500-24A)</li> </ul>  <p style="text-align: right;">S-NT202</p>	<p><b>Hose fitting to service hose:</b></p> <ul style="list-style-type: none"> <li>● M14 x 1.5 fitting is optional or permanently attached.</li> </ul>
<p>(J-39699) Refrigerant weight scale</p>  <p style="text-align: right;">S-NT200</p>	<p>For measuring of refrigerant Fitting size: Thread size</p> <ul style="list-style-type: none"> <li>● 1/2<sup>2</sup> -16 ACME</li> </ul>
<p>(J-39649) Vacuum pump (Including the isolator valve)</p>  <p style="text-align: right;">S-NT203</p>	<p><b>Capacity:</b></p> <ul style="list-style-type: none"> <li>● Air displacement: 4 CFM</li> <li>● Micron rating: 20 microns</li> <li>● Oil capacity: 482 g (17 oz) Fitting size: Thread size</li> <li>● 1/2<sup>2</sup> -16 ACME</li> </ul>

# PREPARATION

## Commercial Service Tools

EJS000X1

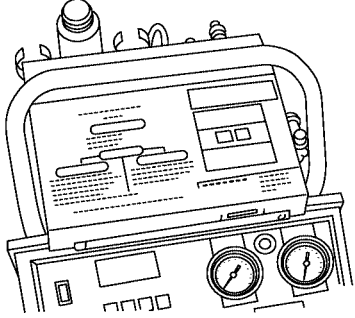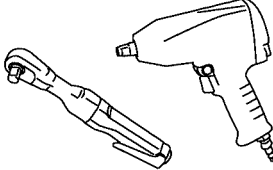Tool name	Description
<p>(J-41810-NI) Refrigerant identifier equipment- (R-134a)</p>  <p style="text-align: right; font-size: small;">RJIA0197E</p>	<p>For checks refrigerant purity and for system contamination</p>
<p>Power tool</p>  <p style="text-align: right; font-size: small;">PBIC0190E</p>	<p>Loosening bolts and nuts</p>
<p>(J-44614) Clutch disc holding tool</p>  <p style="text-align: right; font-size: small;">WHA230</p>	<p>Clutch disc holding tool</p>

A  
B  
C  
D  
E  
F  
G  
H  
I  
K  
L  
M

**ATC**

# REFRIGERATION SYSTEM

PF:KA990

## REFRIGERATION SYSTEM

### Refrigerant Cycle REFRIGERANT FLOW

EJS000X2

The refrigerant flows in the standard pattern, that is, through the compressor, the condenser with liquid tank, through the evaporator, and back to the compressor. The refrigerant evaporation through the evaporator coil is controlled by an externally equalized expansion valve, located inside the evaporator case.


### Refrigerant System Protection REFRIGERANT PRESSURE SENSOR

EJS000X3

The refrigerant system is protected against excessively high or low pressures by the refrigerant pressure sensor, located on the condenser. If the system pressure rises above or falls below the specifications, the refrigerant pressure sensor detects the pressure inside the refrigerant line and sends the voltage signal to the ECM. ECM makes the A/C relay go OFF and stops the compressor when pressure on the high pressure side detected by refrigerant pressure sensor is over about 2,746 kPa (28 kg/cm<sup>2</sup>, 398 psi), or below about 120 kPa (1.22 kg/cm<sup>2</sup>, 17.4 psi).

### PRESSURE RELIEF VALVE

The refrigerant system is also protected by a pressure relief valve, located in the rear head of the compressor. When the pressure of refrigerant in the system increases to an abnormal level [more than 3,727 kPa (38 kg/cm<sup>2</sup>, 540 psi)], the release port on the pressure relief valve automatically opens and releases refrigerant into the atmosphere.

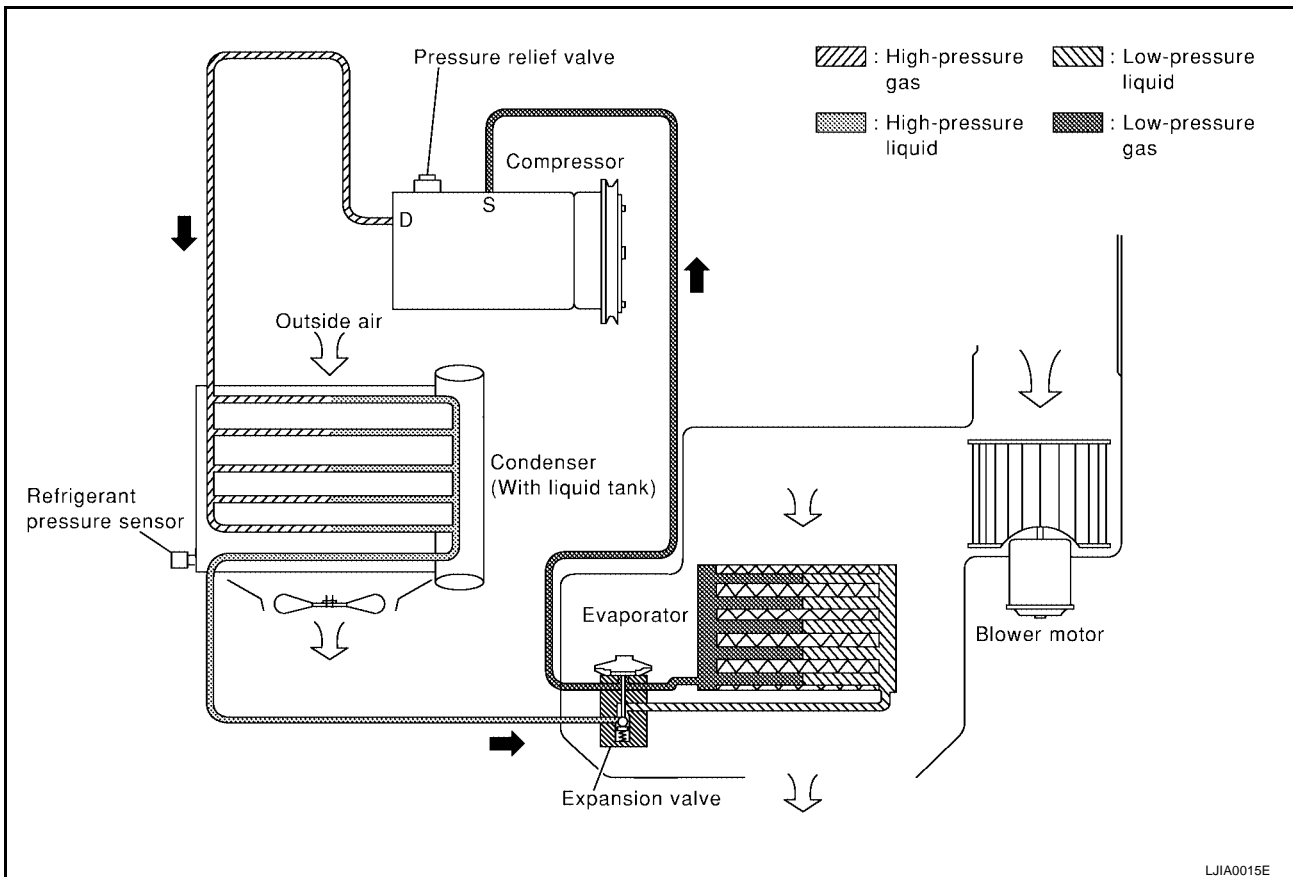




# REFRIGERATION SYSTEM

## Component Layout

EJS000X4

SEC. 270 • 271 • 272 • 273

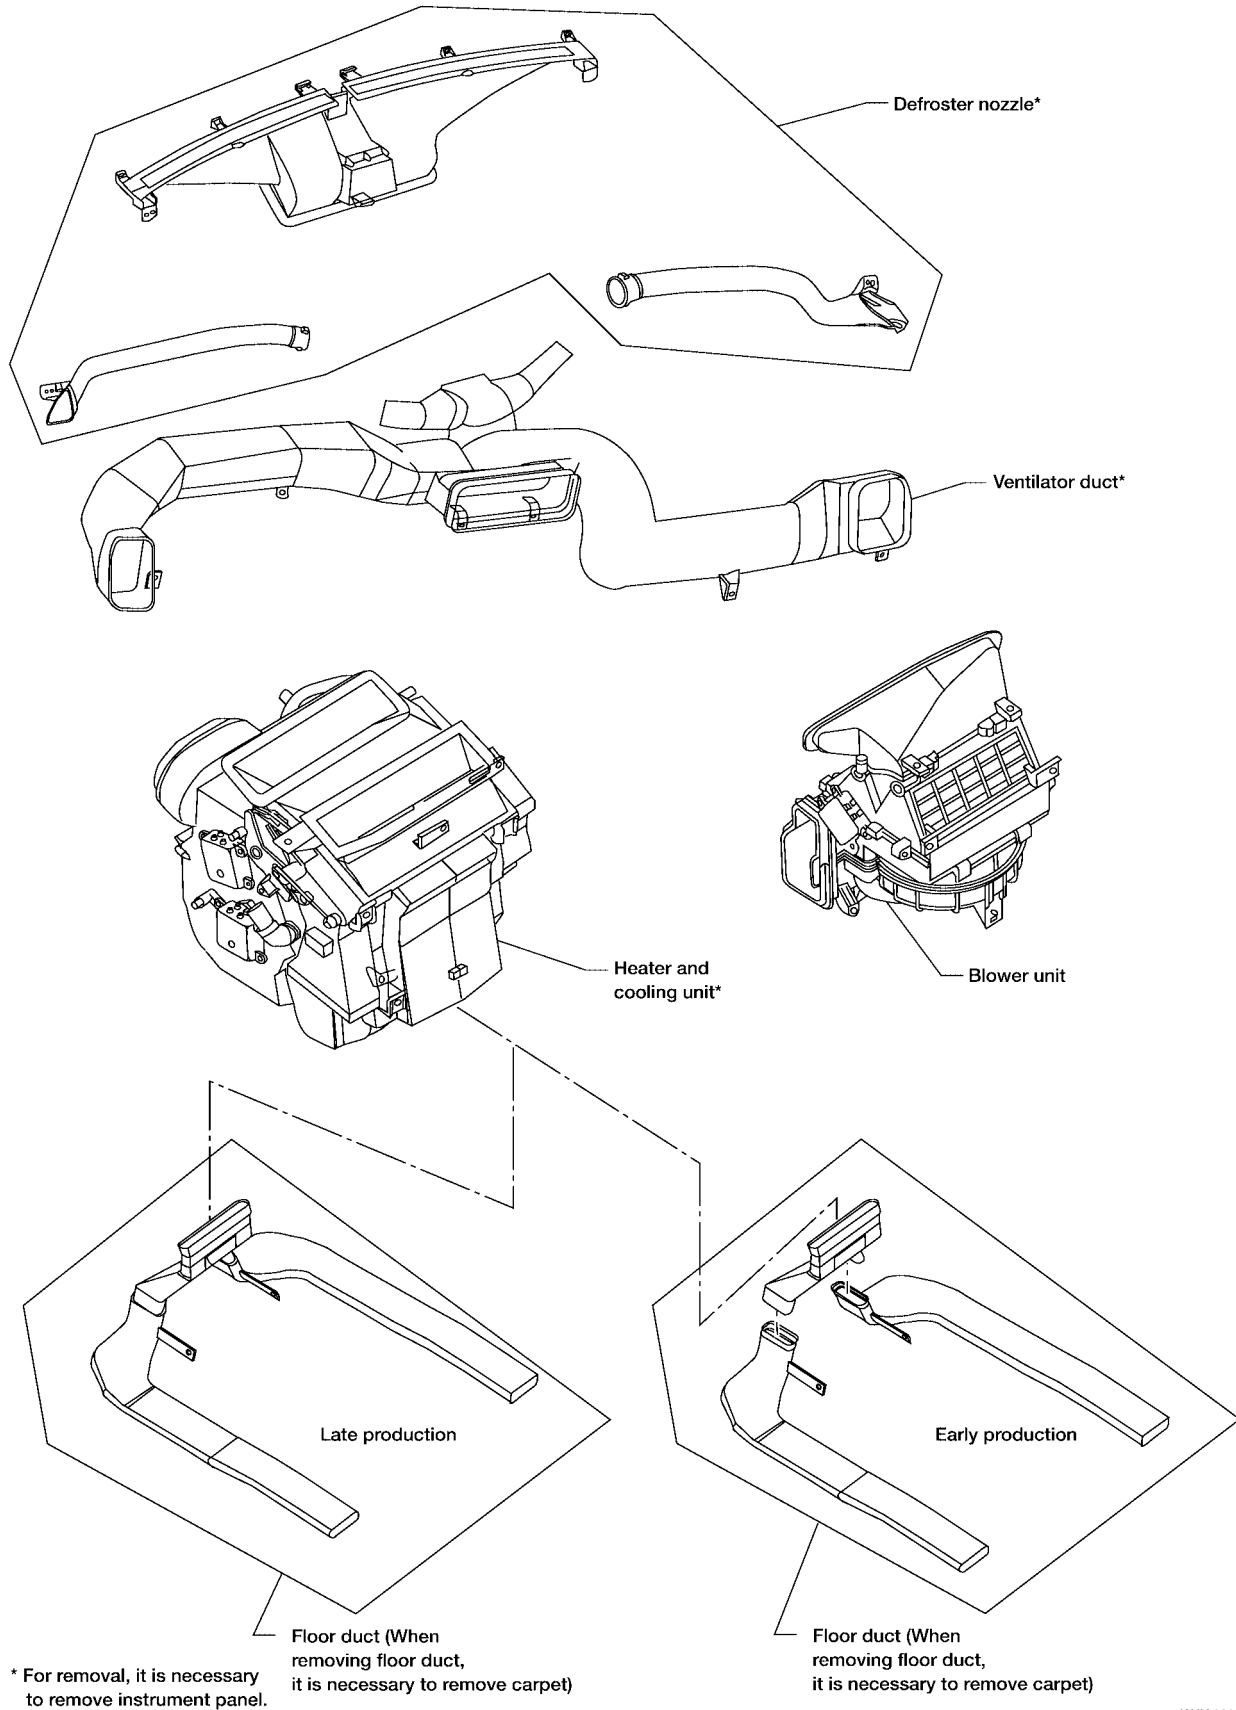

A  
B  
C  
D  
E  
F  
G  
H  
I  
ATC  
K  
L  
M

\* For removal, it is necessary to remove instrument panel.

Floor duct (When removing floor duct, it is necessary to remove carpet)

WJIA0287E

# LUBRICANT

PPF:KLG00

## LUBRICANT

### Maintenance of Lubricant Quantity in Compressor

EJS000X5

The lubricant in the compressor circulates through the system with the refrigerant. Add lubricant to compressor when replacing any component or after a large refrigerant leakage has occurred. It is important to maintain the specified amount.

If lubricant quantity is not maintained properly, the following malfunctions may result:

- Lack of lubricant: May lead to a seized compressor
- Excessive lubricant: Inadequate cooling (thermal exchange interference)

## LUBRICANT

**Name: Nissan A/C System Oil Type DH-PS**

**Part number: KLH00-PAGS0**

### CHECKING AND ADJUSTING

Adjust the lubricant quantity according to the test group shown below.

## 1. LUBRICANT RETURN OPERATION

---

Can lubricant return operation be performed?

- A/C system works properly.
- There is no evidence of a large amount of lubricant leakage.

Yes or No

- Yes >> GO TO 2.  
No >> GO TO 3.

## 2. PERFORM LUBRICANT RETURN OPERATION, PROCEEDING AS FOLLOWS

---

1. Start engine, and set the following conditions:
  - **Test condition**
  - Engine speed: Idling to 1,200 rpm**
  - A/C switch: ON**
  - Blower speed: Max. position**
  - Temp. control: Optional [Set so that intake air temperature is 25 to 30°C (77 to 86°F).]**
  - Intake position: Recirculation (REC)**
2. Perform lubricant return operation for about 10 minutes.
3. Stop engine.

### **CAUTION:**

**If excessive lubricant leakage is noted, do not perform the lubricant return operation.**

>> GO TO 3.

## 3. CHECK COMPRESSOR

---

Should the compressor be replaced?

Yes or No

- Yes >> GO TO [ATC-19, "Lubricant Adjustment Procedure for Compressor Replacement"](#) .  
No >> GO TO 4.

## 4. CHECK ANY PART

---

Is there any part to be replaced? (Evaporator, condenser, liquid tank or in case there is evidence of a large amount of lubricant leakage.)

Yes or No

- Yes >> GO TO [ATC-19, "Lubricant Adjusting Procedure for Components Replacement Except Compressor"](#) .  
No >> Carry out the A/C performance test.

# LUBRICANT

## Lubricant Adjusting Procedure for Components Replacement Except Compressor

After replacing any of the following major components, add the correct amount of lubricant to the system.

### Amount of lubricant to be added

Part replaced	Lubricant to be added to system	Remarks
	Amount of lubricant mℓ (US fl oz, Imp fl oz)	
Evaporator	75 (2.5, 2.6)	—
Condenser	75 (2.5, 2.6)	—
Liquid tank	5 (0.2, 0.2)	Add if compressor is not replaced.
In case of refrigerant leak	30 (1.0, 1.1)	Large leak
	—	Small leak *1

- \*1: If refrigerant leak is small, no addition of lubricant is needed.


## Lubricant Adjustment Procedure for Compressor Replacement

1. Before connecting ACR4 to vehicle, check ACR4 gauges. No refrigerant pressure should be displayed. If OK, recover refrigerant from equipment lines.
2. Confirm refrigerant purity in supply tank using ACR4 and refrigerant identifier. If NG, refer to [ATC-4, "Contaminated Refrigerant"](#).
3. Connect ACR4 to vehicle. Confirm refrigerant purity in vehicle A/C system using ACR4 and refrigerant identifier. If NG, refer to [ATC-4, "Contaminated Refrigerant"](#).
4. Discharge refrigerant into the refrigerant recovery/recycling equipment. Measure lubricant discharged into the recovery/recycling equipment.
5. Drain the lubricant from the "old" (removed) compressor into a graduated container and recover the amount of lubricant drained.
6. Drain the lubricant from the "new" compressor into a separate, clean container.
7. Measure an amount of new lubricant installed equal to amount drained from "old" compressor. Add this lubricant to "new" compressor through the suction port opening.
8. Measure an amount of new lubricant equal to the amount recovered during discharging. Add this lubricant to "new" compressor through the suction port opening.
9. If the liquid tank also needs to be replaced, add an additional 5 mℓ (0.2 US fl oz, 0.2 Imp fl oz) of lubricant at this time.

**Do not add this 5 mℓ (0.2 US fl oz, 0.2 Imp fl oz) of lubricant if only replacing the compressor.**

# LUBRICANT

## Lubricant adjusting procedure for compressor replacement

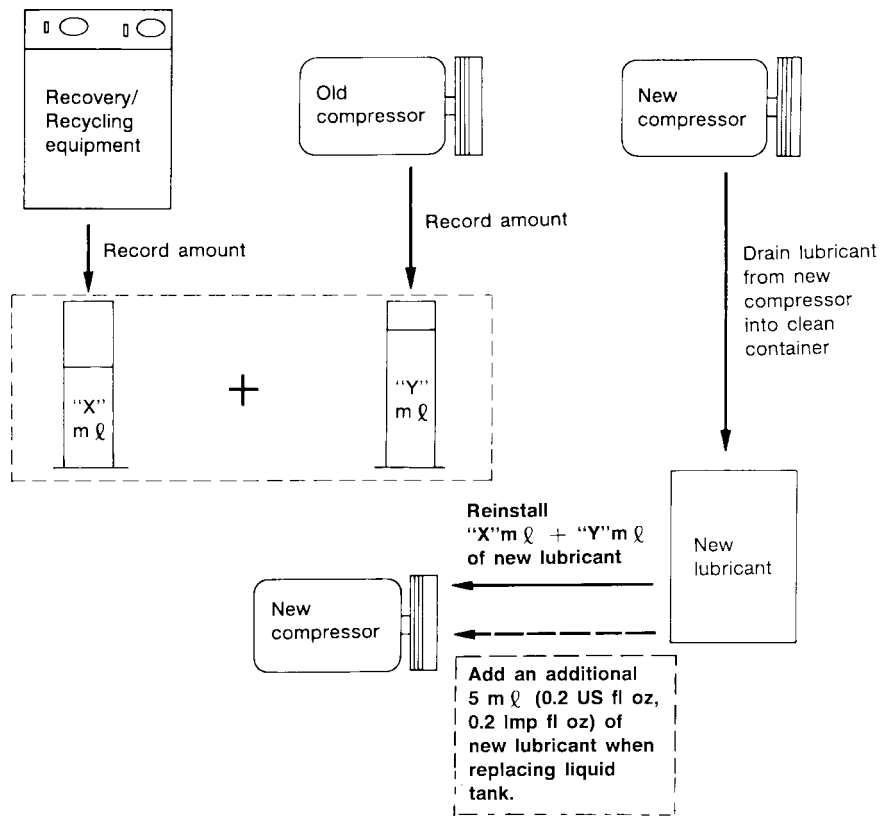

RHA065DD

# AIR CONDITIONER CONTROL


## AIR CONDITIONER CONTROL

PFP:27500

### Overview Air Conditioner LAN Control System

EJS000X6

The LAN system consists of auto amp., air mix door motor and mode door motor. A configuration of these components is shown in the diagram below.

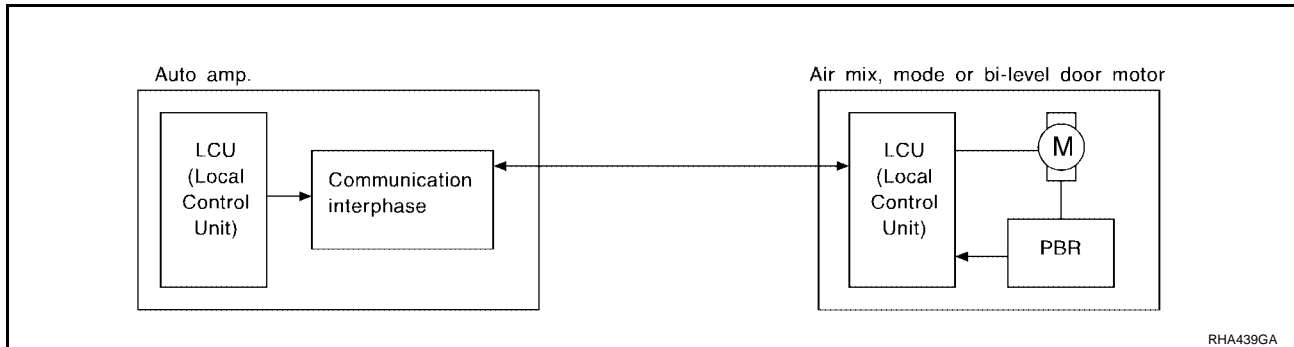

### System Construction


EJS000X7

A small network is constructed between the auto amplifier, air mix door motor and mode door motor. The auto amplifier and motors are connected by data transmission lines and motor power supply lines. The LAN network is built through the ground circuits of the two motors.

Addresses, motor opening angle signals, motor stop signals and error checking messages are all transmitted through the data transmission lines connecting the auto amplifier and two motors.

The following functions are contained in LCUs built into the air mix door motor and the mode door motor.

- Address
- Motor opening angle signals
- Data transmission
- Motor stop and drive decision
- Opening angle sensor (PBR function)
- Comparison
- Decision (Auto amplifier indicated value and motor opening angle comparison)

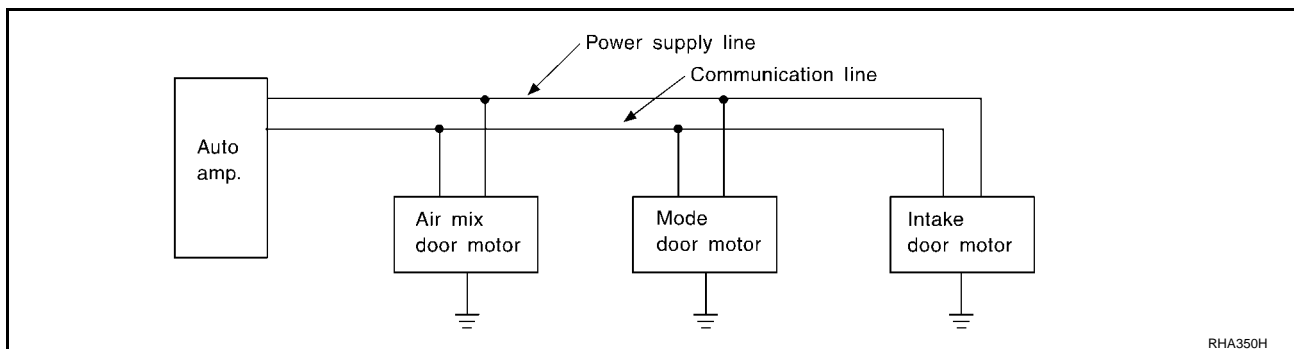


### OPERATION

The auto amplifier receives data from each of the sensors. The amplifier sends air mix door, mode door and intake door opening angle data to the air mix door motor LCU, mode door motor LCU and intake door motor LCU.

The air mix door motor, mode door motor and intake door motor read their respective signals according to the address signal. Opening angle indication signals received from the auto amplifier and each of the motor position sensors are compared by the LCUs in each motor with the existing decision and opening angles. Subse-

# AIR CONDITIONER CONTROL

quently, HOT/COLD, DEFROST/VENT or FRESH/RECIRCULATION operation is selected. The new selection data is returned to the auto amplifier.

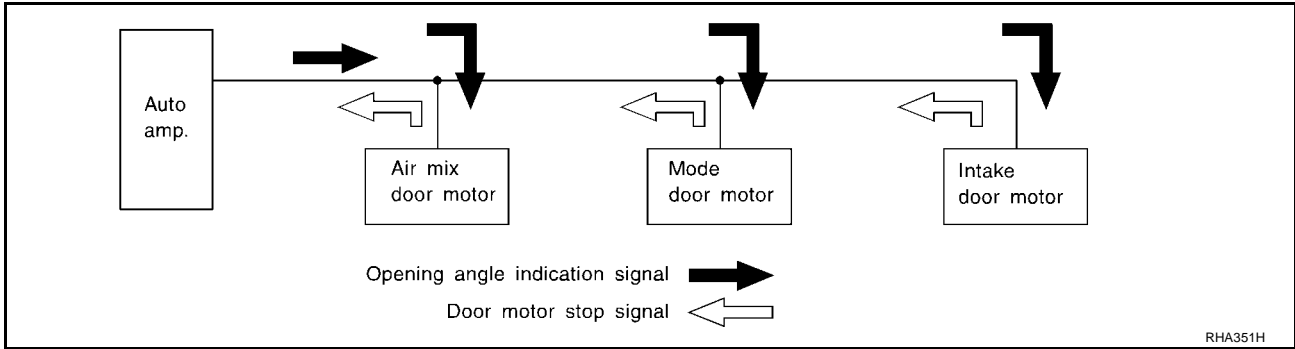

## TRANSMISSION DATA AND TRANSMISSION ORDER

Amplifier data is transmitted consecutively to each of the door motors following the form shown in figure below. Start: Initial compulsory signal sent to each of the door motors.

Address: Data sent from the auto amplifier is selected according to data-based decisions made by the air mix door motor, mode door motor and intake door motor.

If the addresses are identical, the opening angle data and error check signals are received by the door motor LCUs. The LCUs then make the appropriate error decision. If the opening angle data is normal, door control begins.


If an error exists, the received data is rejected and corrected data received. Finally, door control is based upon the corrected opening angle data.

Opening angle: Data that shows the indicated door opening angle of each door motor.

Error check: Procedure by which sent and received data is checked for errors. Error data is then compiled. The error check prevents corrupted data from being used by the air mix door motor, mode door motor and intake door motor. Error data can be related to the following problems.

- Abnormal electrical frequency
- Poor electrical connections
- Signal leakage from transmission lines
- Signal level fluctuation

Stop signal: At the end of each transmission, a stop operation, in-operation, or internal problem message is delivered to the auto amplifier. This completes one data transmission and control cycle.

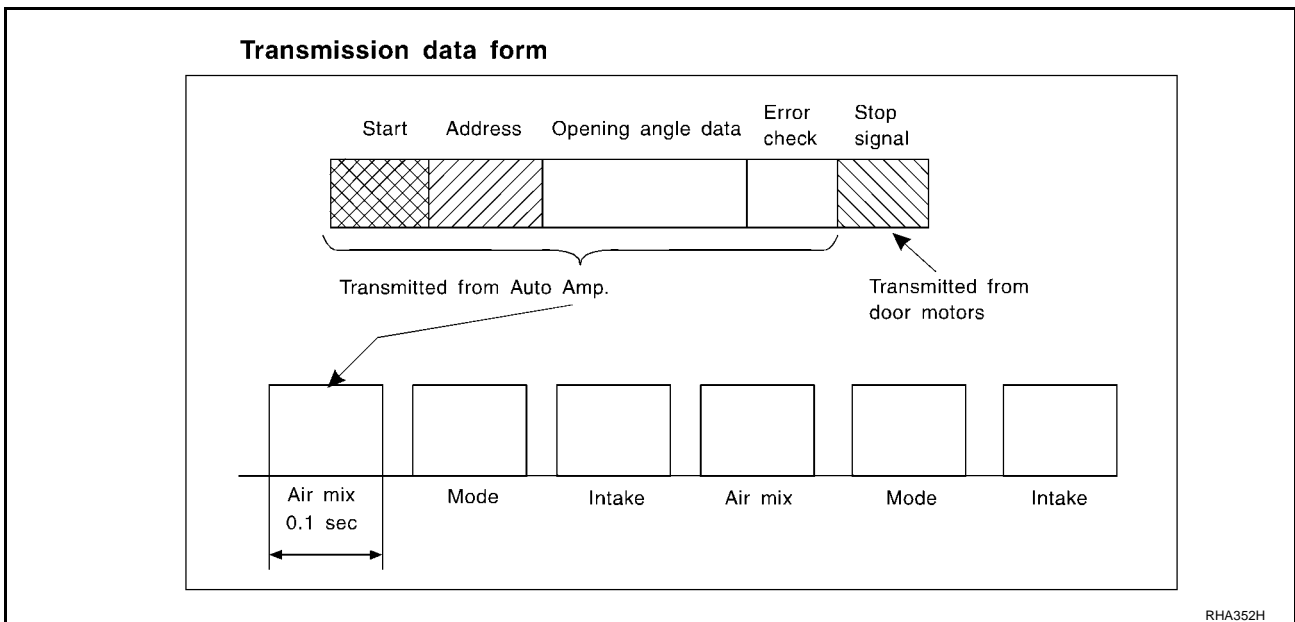

## AIR MIX DOOR CONTROL (AUTOMATIC TEMPERATURE CONTROL)

The air mix door is automatically controlled so that in-vehicle temperature is maintained at a predetermined value by: The temperature setting, ambient temperature, in-vehicle temperature and amount of sunload.

# AIR CONDITIONER CONTROL

## FAN SPEED CONTROL

Blower speed is automatically controlled based on temperature setting, ambient temperature, in-vehicle temperature, intake temperature, amount of sunload and air mix door position.

With FAN switch set to AUTO, the blower motor starts to gradually increase air flow volume.

When engine coolant temperature is low, the blower motor operation is delayed to prevent cool air from flowing.

## INTAKE DOOR CONTROL

The intake doors are automatically controlled by the: temperature setting, ambient temperature, in-vehicle temperature, intake temperature, amount of sunload and ON-OFF operation of the compressor.

## OUTLET DOOR CONTROL

The outlet door is automatically controlled by the: temperature setting, ambient temperature, in-vehicle temperature, intake temperature and amount of sunload.

## MAGNET CLUTCH CONTROL

The ECM controls compressor operation using input signals from the throttle position sensor and auto amplifier.


## SELF-DIAGNOSTIC SYSTEM

The self-diagnostic system is built into the auto amplifier (LCU) to quickly locate the cause of problems.

## Overview of Control system

EJS000X8


The control system consists of input sensors, switches, the automatic amplifier (microcomputer) and outputs. The relationship of these components is shown in the diagram below:

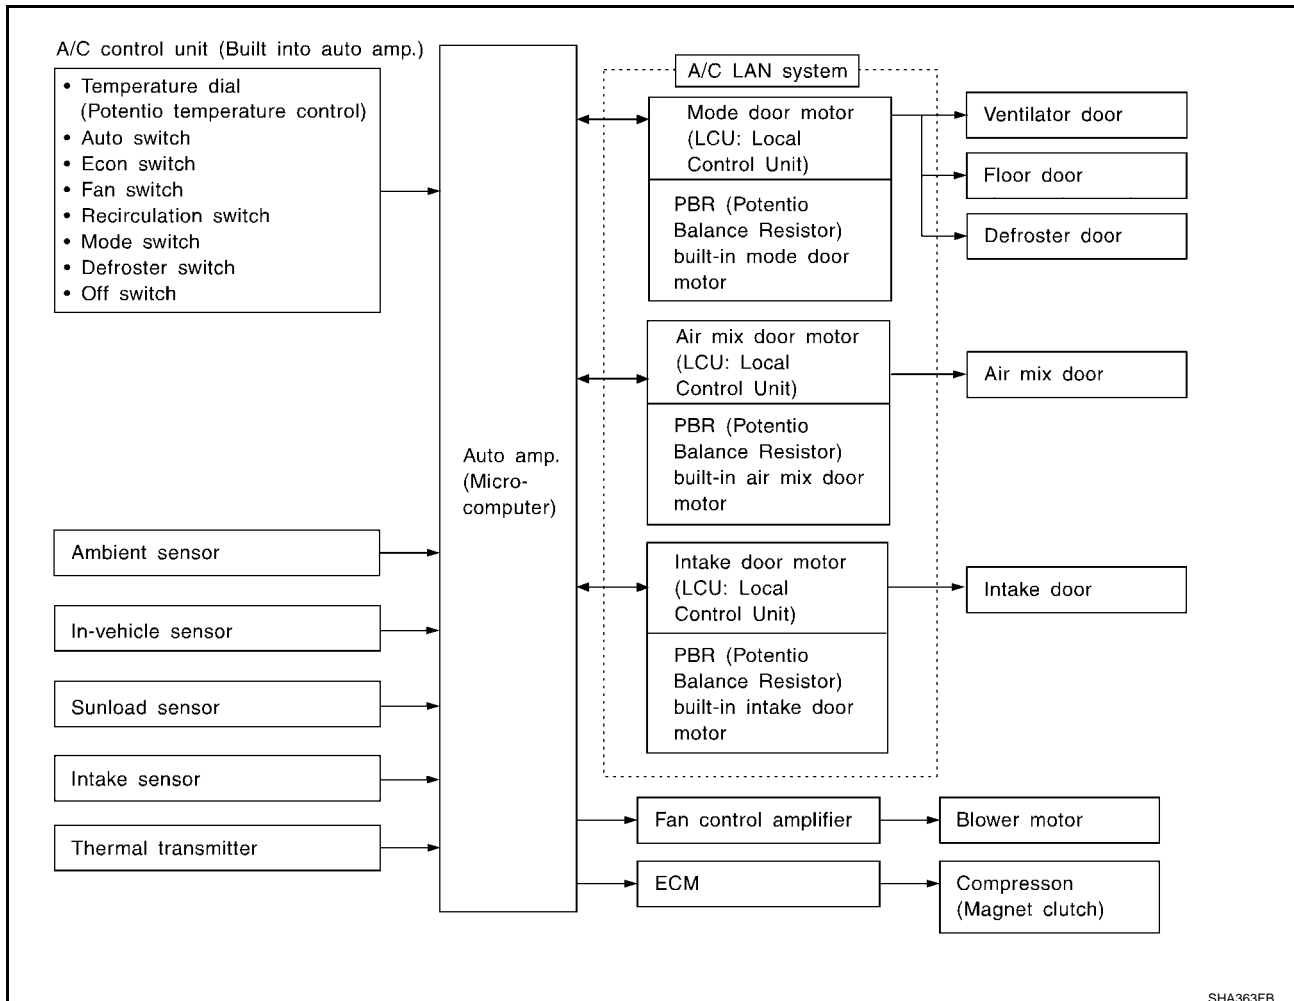

# AIR CONDITIONER CONTROL

## Control Operation

EJS000X9

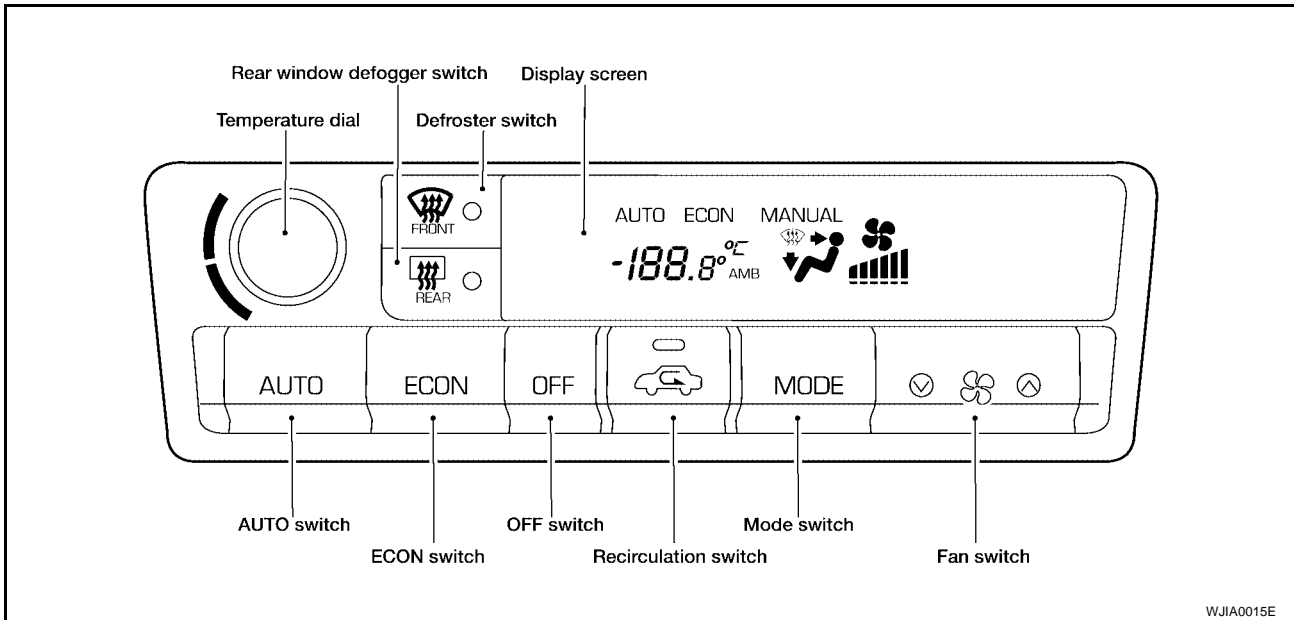

WJIA0015E

### DISPLAY SCREEN

Displays the operational status of the system.

### AUTO SWITCH

The compressor, intake doors, air mix door, outlet doors and blower speed are automatically controlled so that the in-vehicle temperature will reach, and be maintained at the set temperature selected by the operator.

### ECON (ECONOMY) SWITCH

By pressing the ECON switch, the display screen should indicate ECON and the compressor always turns OFF. With the compressor OFF, the system will not remove heat (cool) or de-humidify. The system will maintain the in-vehicle temperature at the set temperature when the set temperature is above the ambient (outside) temperature. The system will set the intake doors to the outside air position.

### TEMPERATURE DIAL (POTENTIO TEMPERATURE CONTROL)

Increases or decreases the set temperature.

### OFF SWITCH

The compressor and blower are OFF, the intake doors are set to the outside air position, and the air outlet doors are set to the foot (80% foot and 20% defrost) position.

### FAN SWITCH

Manually controls the blower speed. Five speeds are available for manual control (as shown on the display screen).

### RECIRCULATION (REC) SWITCH

OFF position: Outside air is drawn into the passenger compartment.

ON position: Interior air is recirculated inside the vehicle.

### DEFROSTER (DEF) SWITCH

Positions the air outlet doors to the defrost position. Also positions the intake doors to the outside air position.

### MODE SWITCH

Controls the air discharge outlets.

### REAR WINDOW DEFOGGER SWITCH







This switch turns the rear window defogger ON and OFF.



# AIR CONDITIONER CONTROL

EJS000XA

## Discharge Air Flow

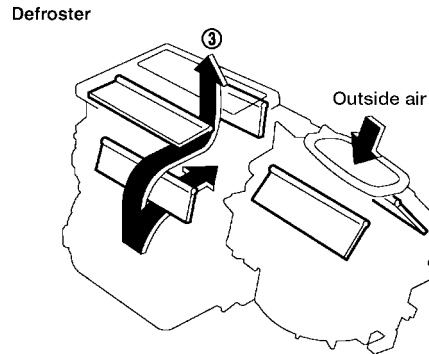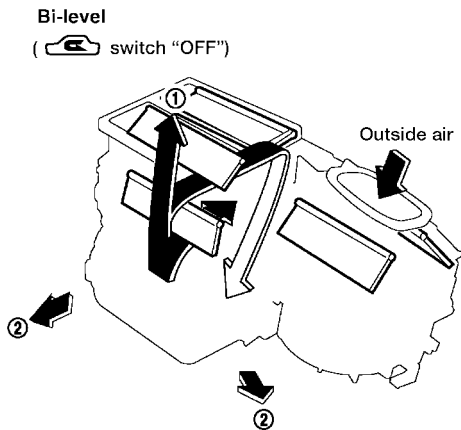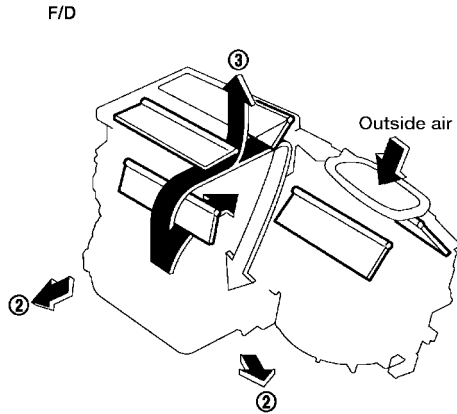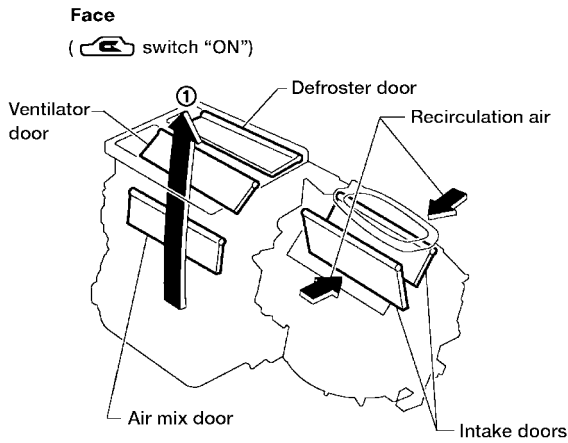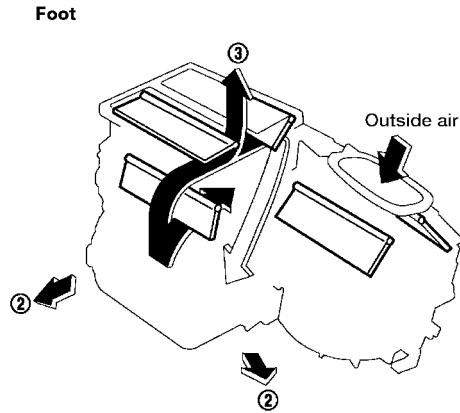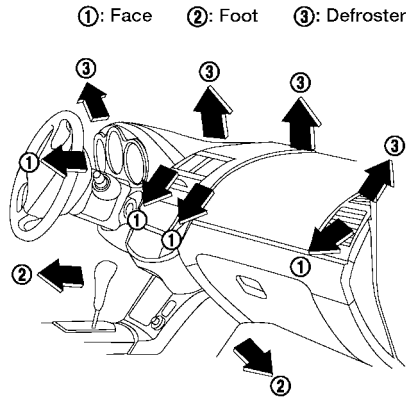

- ①: To face
- ②: To foot
- ③: To defroster

For air flow %, refer to "Operational Check", "TROUBLE DIAGNOSES".


WJIA0016E

A  
B  
C  
D  
E  
F  
G  
H  
I  
ATC  
K  
L  
M





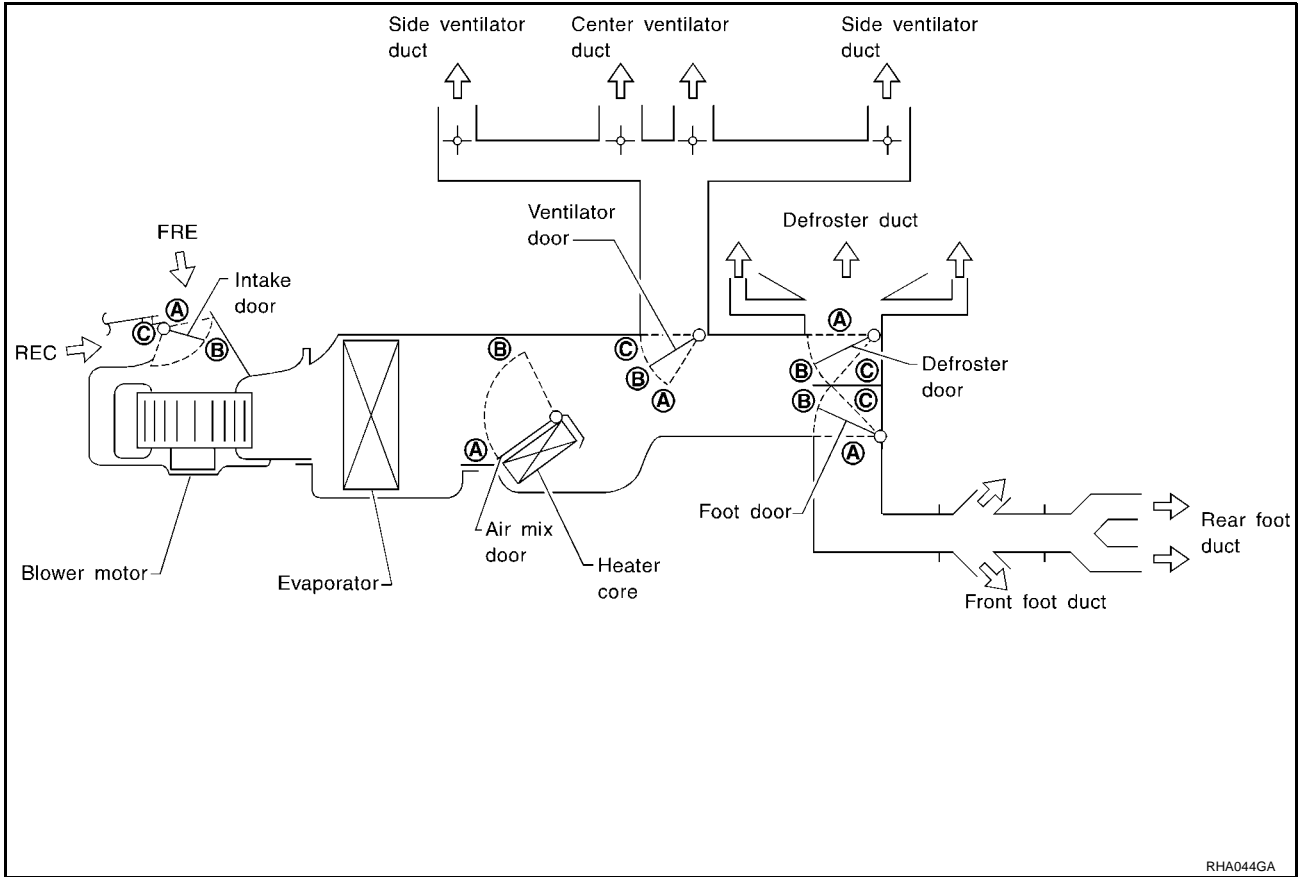




# AIR CONDITIONER CONTROL

EJS000XB

## System Description SWITCHES AND THEIR CONTROL FUNCTION



RHA044GA

Position or switch	MODE SW				Front DEF SW		AUTO SW	ECON SW	REC SW		Temperature DIAL		
	VENT	B/L	FOOT	D/F	ON	OFF			ON	OFF			
Door							AUTO	ECON			18.0°C (60°F)	—	32.0°C (90°F)
Ventilator door	A	B	C	C	C	—	AUTO	ECON	—	—	—		
Foot door	A	B	C	C	A	—			—	—	—	—	
Defroster door	A	A	B	C	C	—	AUTO	AUTO	—	—	—		
Air mix door	—				—	—	—	—	—	—	A	AUTO	B
Intake door	—				C	—	—	—	A	AUTO*1	—		

\*1: Automatically controlled when REC switch is OFF.

WJIA0096E

## CAN Communication System Description


EJS000XC

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

# AIR CONDITIONER CONTROL

## FOR TCS MODELS

### System diagram

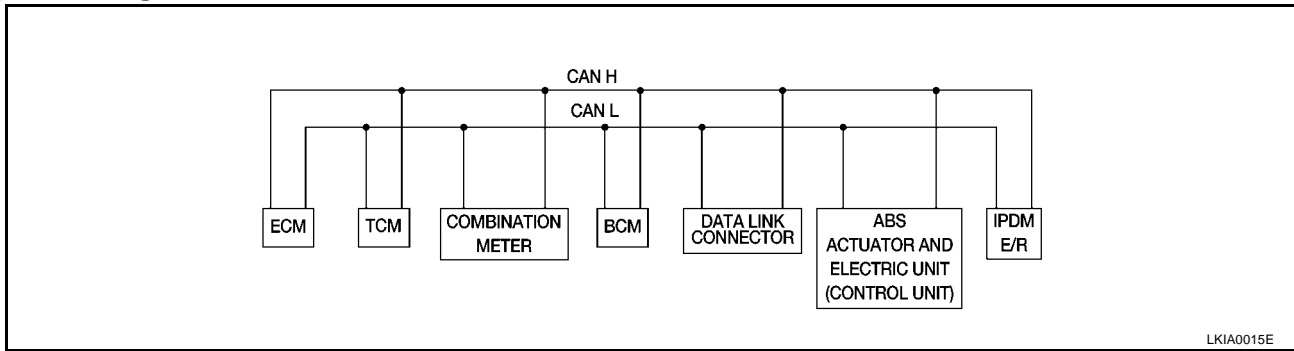

### Input/output signal chart

T: Transmit R: Receive


Signals	ECM	TCM	COMBINATION METER	BCM	ABS/TCS control unit	IPDM E/R
Engine speed signal	T		R		R	
Engine coolant temperature signal	T		R			
Accelerator pedal position signal	T					
Fuel consumption monitor signal	T		R			
A/T warning lamp signal		T	R			
A/T position indicator signal	R	T	R	R <sup>(R range only)</sup>	R	
ABS operation signal	R				T	
TCS operation signal	R	R			T	
Air conditioner switch signal	R			T		
Air conditioner compressor signal	R					T
A/C compressor request signal	T					R
Cooling fan motor operation signal	R					T
Cooling fan speed request signal	T					R
Position lights request			R	T		R
Position lights status				R		T
Low beam request				T		R
Low beam status	R			R		T
High beam request			R	T		R
High beam status	R			R		T
Front fog lights request				T		R
Front fog light status				R		T
OD cancel switch signal		R	T			R
Brake switch signal		R	T			
Vehicle speed signal	R		T			
	R		T	R		
Oil pressure switch			R			T
Sleep request1			R	T		
Sleep request2				T		R
N range switch signal		R	T			
P range switch signal		R	T			
Seat belt buckle switch signal			T	R		

# AIR CONDITIONER CONTROL

Signals	ECM	TCM	COMBINATION METER	BCM	ABS/TCS control unit	IPDM E/R
Door switch signal			R	T		R
Tail lamp request			R	T		R
Turn indicator signal			R	T		
Buzzer output signal			R	T		
Trunk switch signal			R	T		
ASCD main switch signal	T		R			
ASCD cruise signal	T		R			
Wiper operation				R		T
Wiper stop position signal				R		T
Rear window defogger switch signal				T		R
Rear window defogger control signal	R			R		T

## FOR A/T MODELS

### System diagram

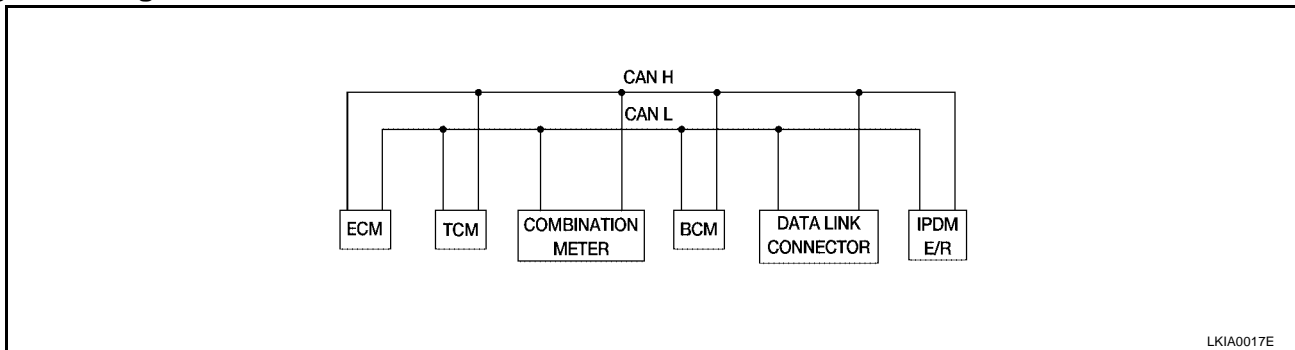

### Input/output signal chart

T: Transmit R: Receive


Signals	ECM	TCM	COMBINATION METER	BCM	IPDM E/R
Engine speed signal	T		R		
Engine coolant temperature signal	T		R		
Accelerator pedal position signal	T				R
Fuel consumption monitor signal	T		R		
A/T warning lamp signal		T	R		
A/T position indicator signal	R	T	R	R <sup>(R range only)</sup>	
Air conditioner switch signal	R			T	
Air conditioner compressor signal	R				T
A/C compressor request signal	T				R
Blower fan switch signal	R <sup>(QR25DE)</sup>			T	
Cooling fan motor operation signal	R			T	
Cooling fan speed request signal	T				R
Position lights request			R	T	R
Position lights status				R	T
Low beam request				T	R
Low beam status	R			R	T
High beam request			R	T	R

# AIR CONDITIONER CONTROL

Signals	ECM	TCM	COMBINATION METER	BCM	IPDM E/R
High beam status	R			R	T
Front fog lights request				T	R
Front fog light status				R	T
OD cancel switch signal		R	T		R
Brake switch signal		R	T		
Vehicle speed signal	R		T		
	R		T	R	
Oil pressure switch			R		T
Sleep request1			R	T	
Sleep request2				T	R
N range switch signal		R	T		
P range switch signal		R	T		
Seat belt buckle switch signal			T	R	
Door switch signal			R	T	R
Tail lamp request			R	T	R
Turn indicator signal			R	T	
Buzzer output signal			R	T	
Trunk switch signal			R	T	
ASCD main switch signal	T		R		
ASCD cruise signal	T		R		
Wiper operation				R	T
Wiper stop position signal				R	T
Rear window defogger switch signal				T	R
Rear window defogger control signal	R			R	T

## FOR M/T MODELS

### System diagram

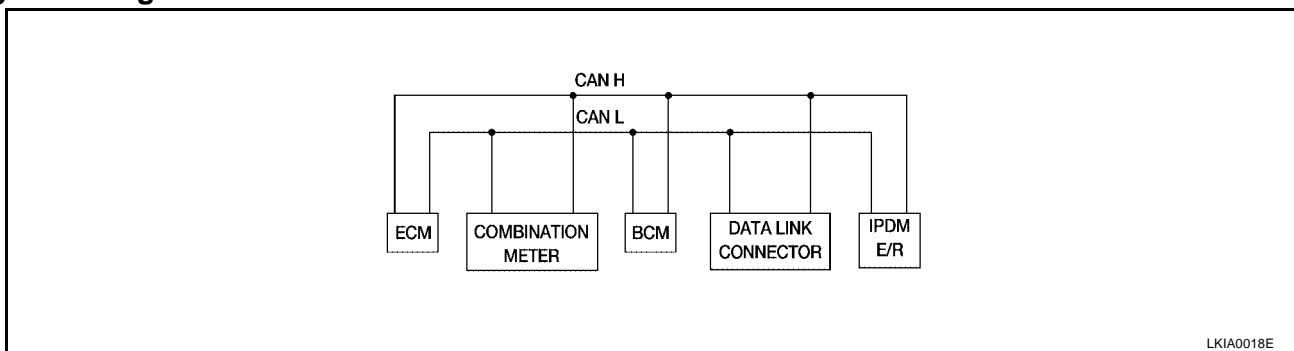

### Input/output signal chart

T: Transmit R: Receive

Signals	ECM	COMBINATION METER	BCM	IPDM E/R
Engine speed signal	T			
Engine coolant temperature signal	T			
Fuel consumption monitor signal	T			
Air conditioner switch signal	R		T	
Air conditioner compressor signal	R			T
A/C compressor request signal	T			R

## AIR CONDITIONER CONTROL

Signals	ECM	COMBINATION METER	BCM	IPDM E/R
Blower fan switch signal	R <sup>(QR25DE)</sup>		T	
Cooling fan motor operation signal	R			T
Cooling fan speed request signal	T			R
Position lights request		R	T	R
Position lights status			R	T
Low beam request			T	R
Low beam status	R		R	T
High beam request		R	T	R
High beam status	R		R	T
Front fog lights request			T	R
Front fog light status			R	T
Vehicle speed signal	R	T		
Oil pressure switch		R		T
Sleep request1		R	T	
Sleep request2			T	R
Seat belt buckle switch signal		T	R	
Door switch signal		R	T	R
Tail lamp request		R	T	R
Turn indicator signal		R	T	
Buzzer output signal		R	T	
Trunk switch signal		R	T	
ASCD main switch signal	T	R		
ASCD cruise signal	T	R		
Wiper operation			R	T
Wiper stop position signal			R	T
Rear window defogger switch signal			T	R
Rear window defogger control signal	R		R	T


# TROUBLE DIAGNOSIS

PFP:00004

## TROUBLE DIAGNOSIS

### How to Perform Trouble Diagnoses for Quick and Accurate Repair WORK FLOW

EJS000XD

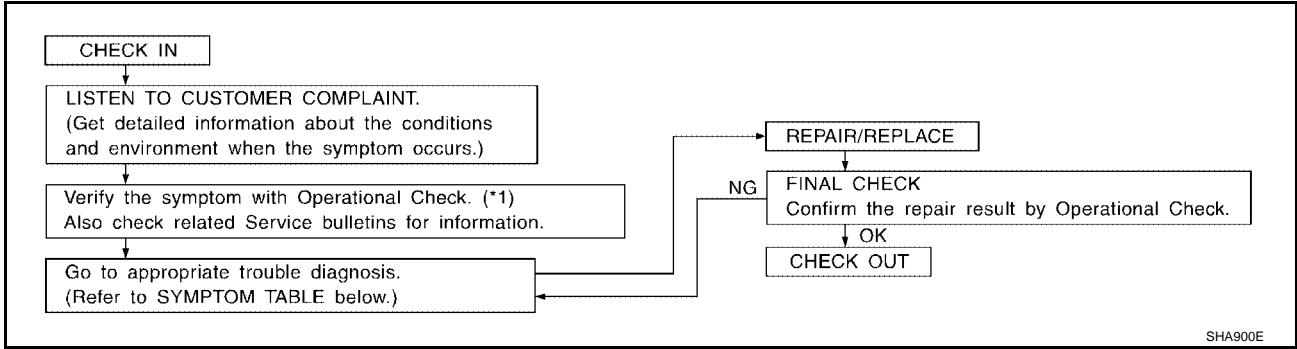

SHA900E

\*1: [ATC-49](#)

### SYMPTOM TABLE

Symptom	Reference Page
● A/C system does not come on.	● Go to Trouble Diagnosis Procedure for A/C system. <a href="#">ATC-52</a>
● Air outlet does not change.	● Go to Trouble Diagnosis Procedure for Mode Door Motor. (LAN) <a href="#">ATC-58</a>
● Mode door motor does not operate normally.	
● Discharge air temperature does not change.	● Go to Trouble Diagnosis Procedure for Air Mix Door Motor. (LAN) <a href="#">ATC-61</a>
● Air mix door motor does not operate normally.	
● Intake door does not change.	● Go to Trouble Diagnosis Procedure for Intake Door Motor. (LAN) <a href="#">ATC-64</a>
● Intake door motor does not operate normally.	
● Blower motor operation is malfunctioning.	● Go to Trouble Diagnosis Procedure for Blower Motor. <a href="#">ATC-67</a>
● Magnet clutch does not engage.	● Go to Trouble Diagnosis Procedure for Magnet Clutch. <a href="#">ATC-74</a>
● Insufficient cooling.	● Go to Trouble Diagnosis Procedure for Insufficient Cooling. <a href="#">ATC-80</a>
● Insufficient heating.	● Go to Trouble Diagnosis Procedure for Insufficient Heating. <a href="#">ATC-87</a>
● Noise.	● Go to Trouble Diagnosis Procedure for Noise. <a href="#">ATC-88</a>
● Self-diagnosis can not be performed.	● Go to Trouble Diagnosis Procedure for Self-diagnosis. <a href="#">ATC-89</a>
● Memory function does not operate.	● Go to Trouble Diagnosis Procedure for Memory Function. <a href="#">ATC-90</a>
● ECON mode does not operate.	● Go to Trouble Diagnosis Procedure for ECON (ECONOMY) — mode. <a href="#">ATC-91</a>




A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

ATC

# TROUBLE DIAGNOSIS

## Component Parts and Harness Connector Location ENGINE COMPARTMENT

EJS000XE


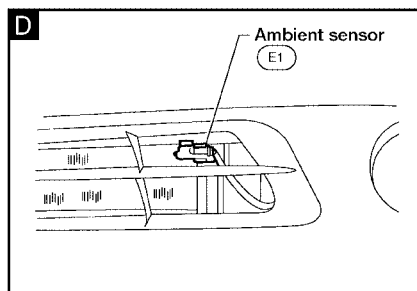
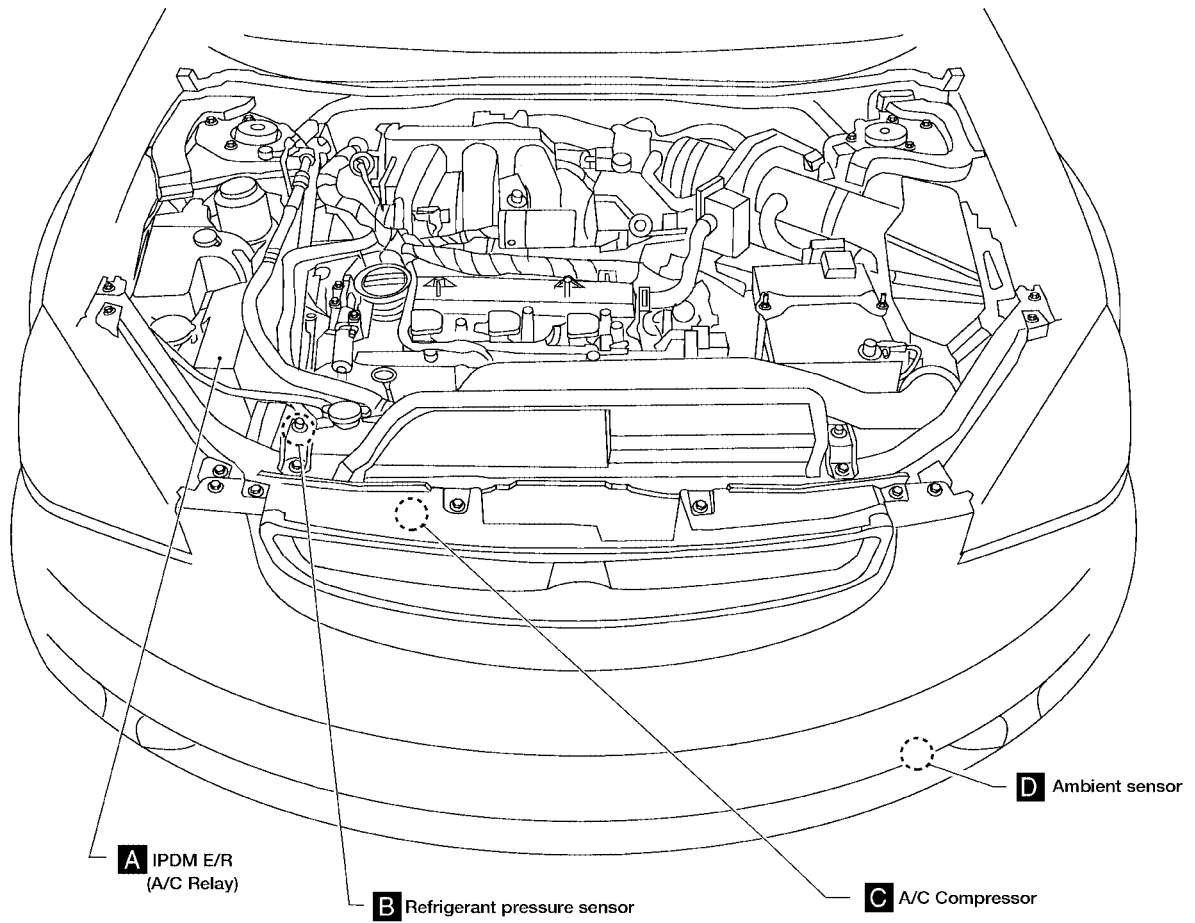
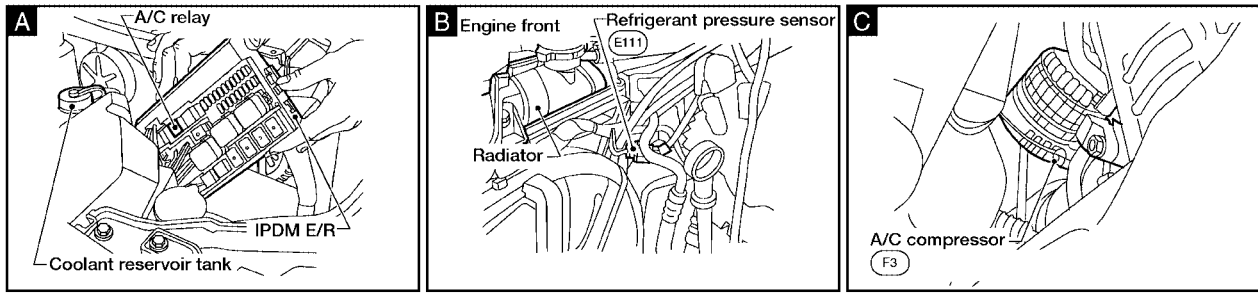


WJIA0017E



# TROUBLE DIAGNOSIS

## PASSENGER COMPARTMENT

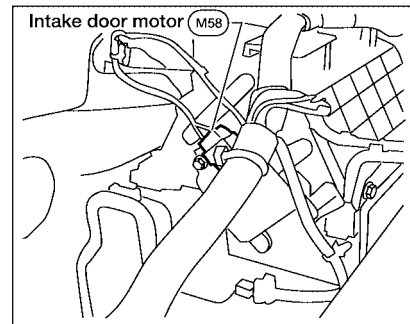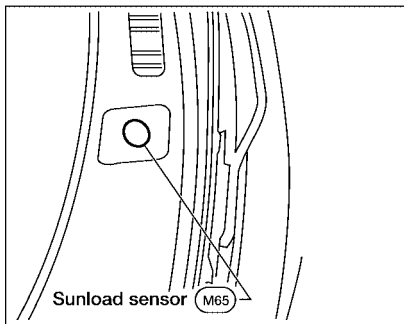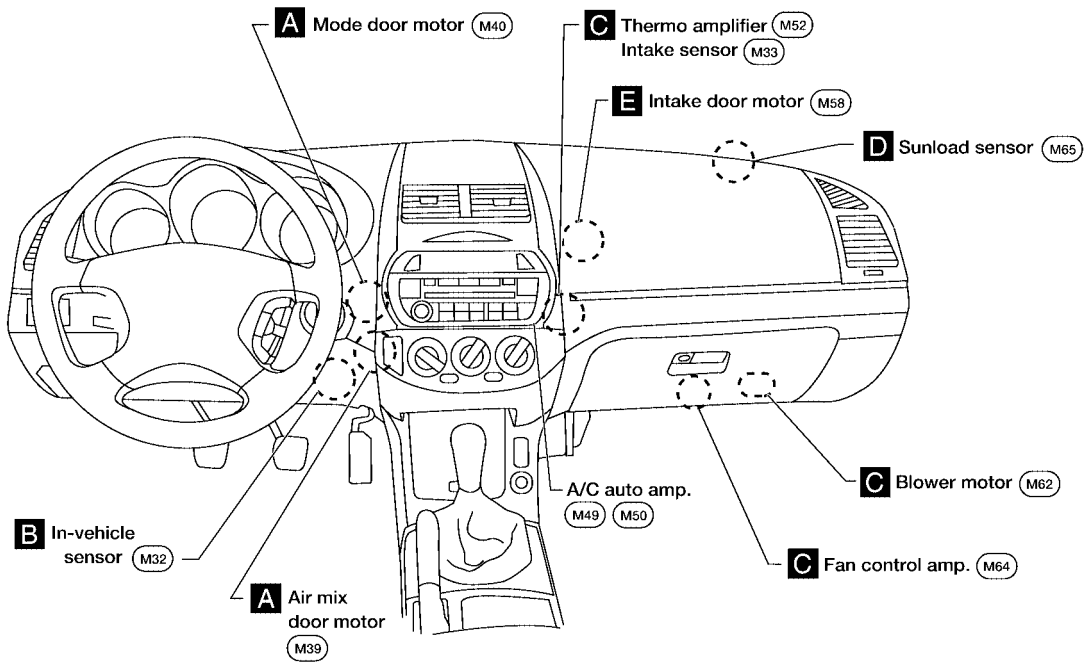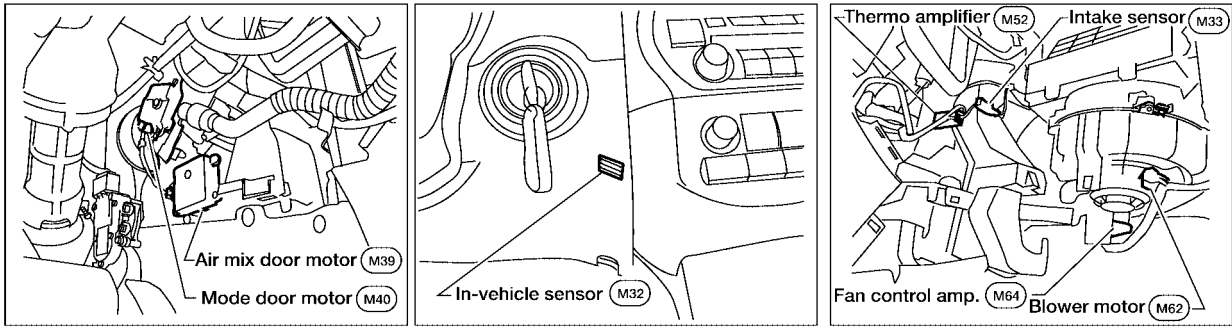

A  
B  
C  
D  
E  
F  
G  
H  
I  
ATC  
K  
L  
M


WJIA0018E

# TROUBLE DIAGNOSIS

## Circuit Diagram

EJS000XF

(N) : FOR CANADA

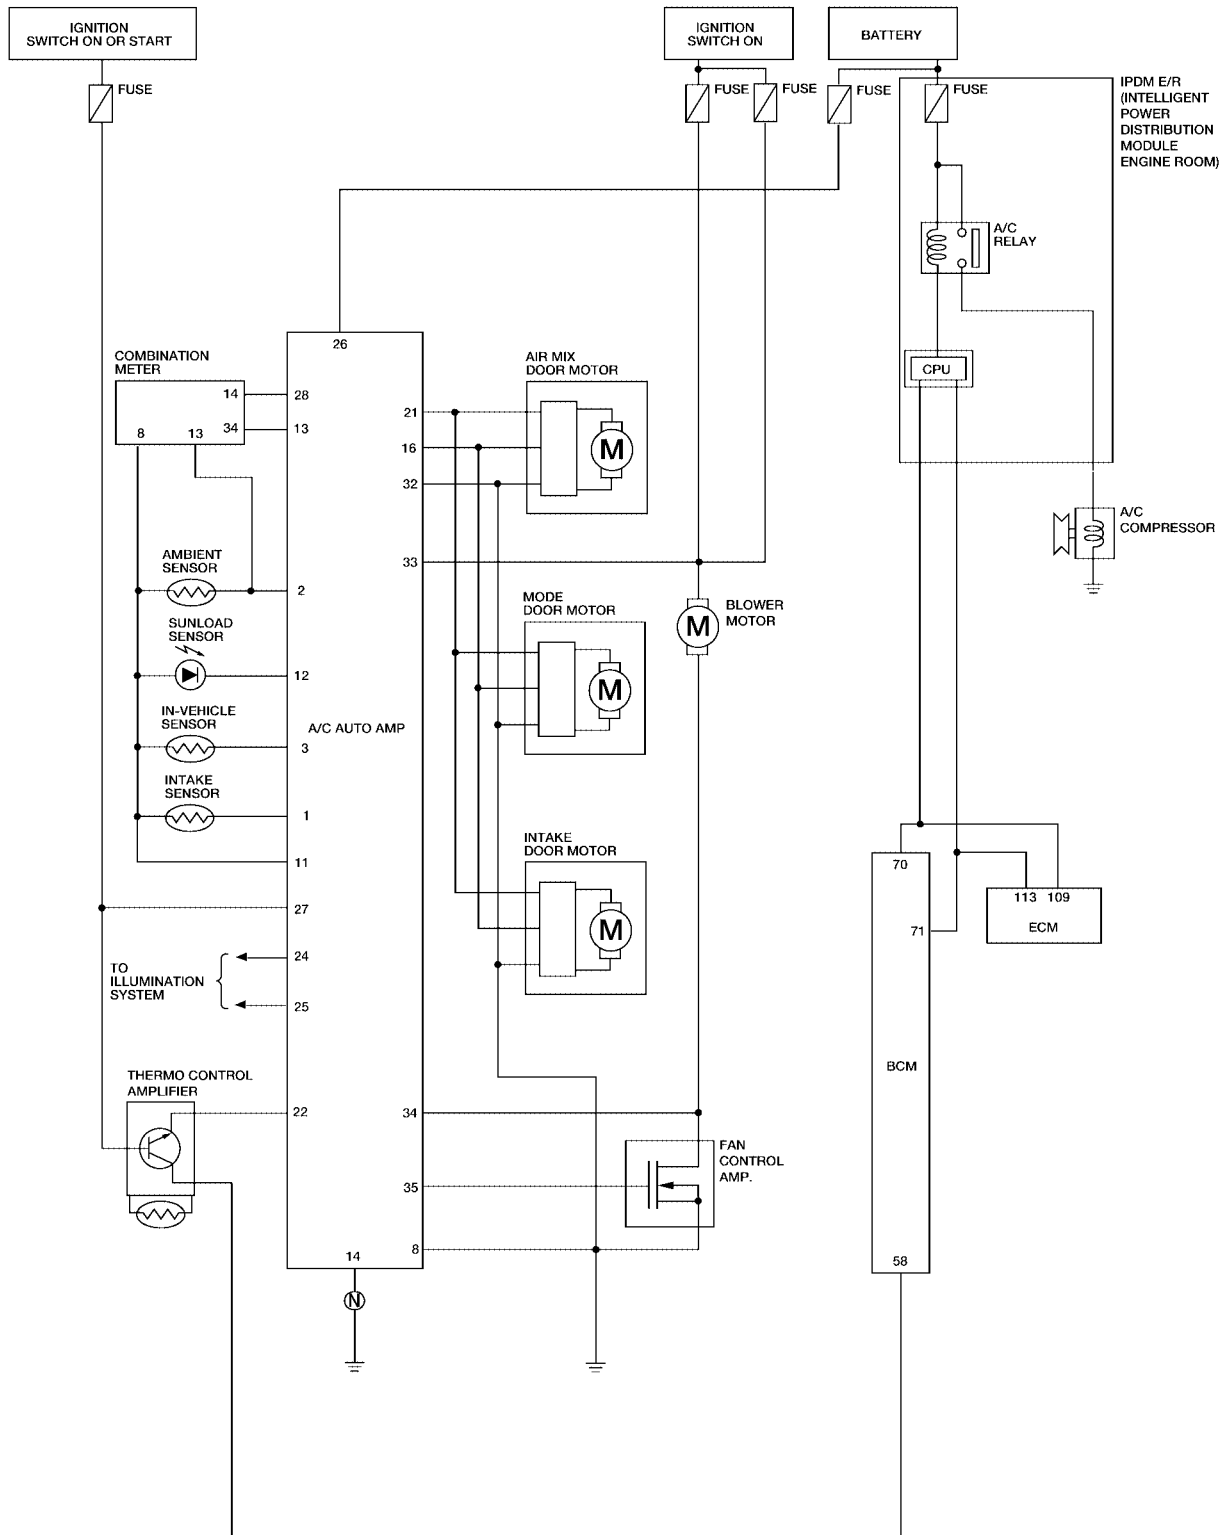


WJWA0006E

# TROUBLE DIAGNOSIS

## Wiring Diagram — A/C,A —

EJS000XG

### ATC-A/C,A-01

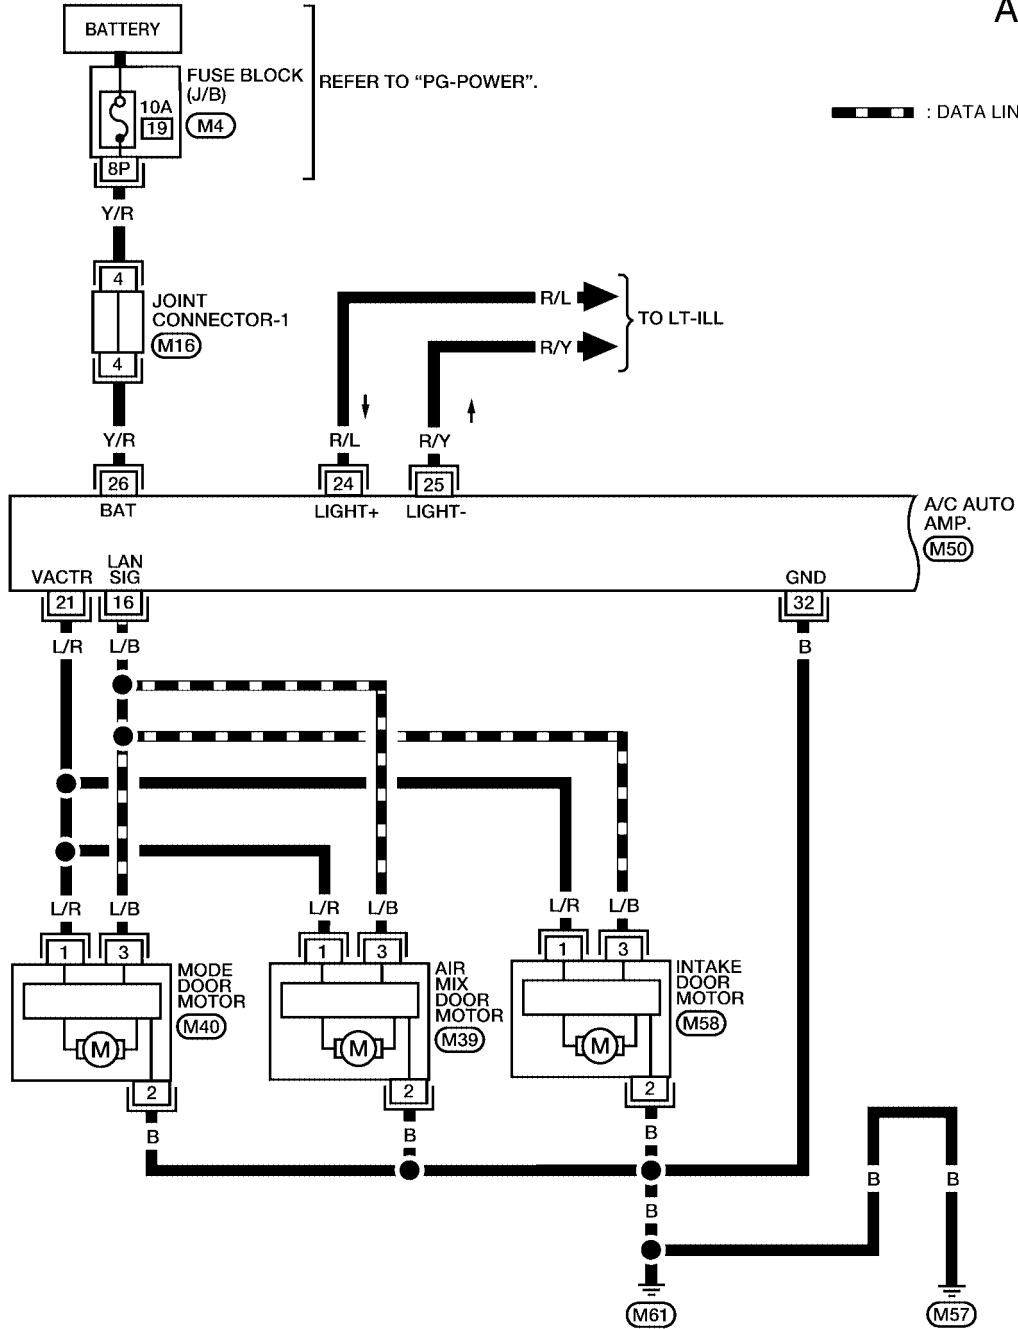

◇	1	(M39)	(M40)	(M58)	28	27	26	25	24	23	22	21	(M50)
□	2	W	W	B	36	35	34	33	32	31	30	29	GY
□	3												


REFER TO THE FOLLOWING.

- (M4) - FUSE BLOCK
- JUNCTION BOX (J/B)
- (M16) - JOINT CONNECTOR (J/C)




A  
B  
C  
D  
E  
F  
G  
H  
I  
ATC  
K  
L  
M

# TROUBLE DIAGNOSIS

## ATC-A/C,A-02

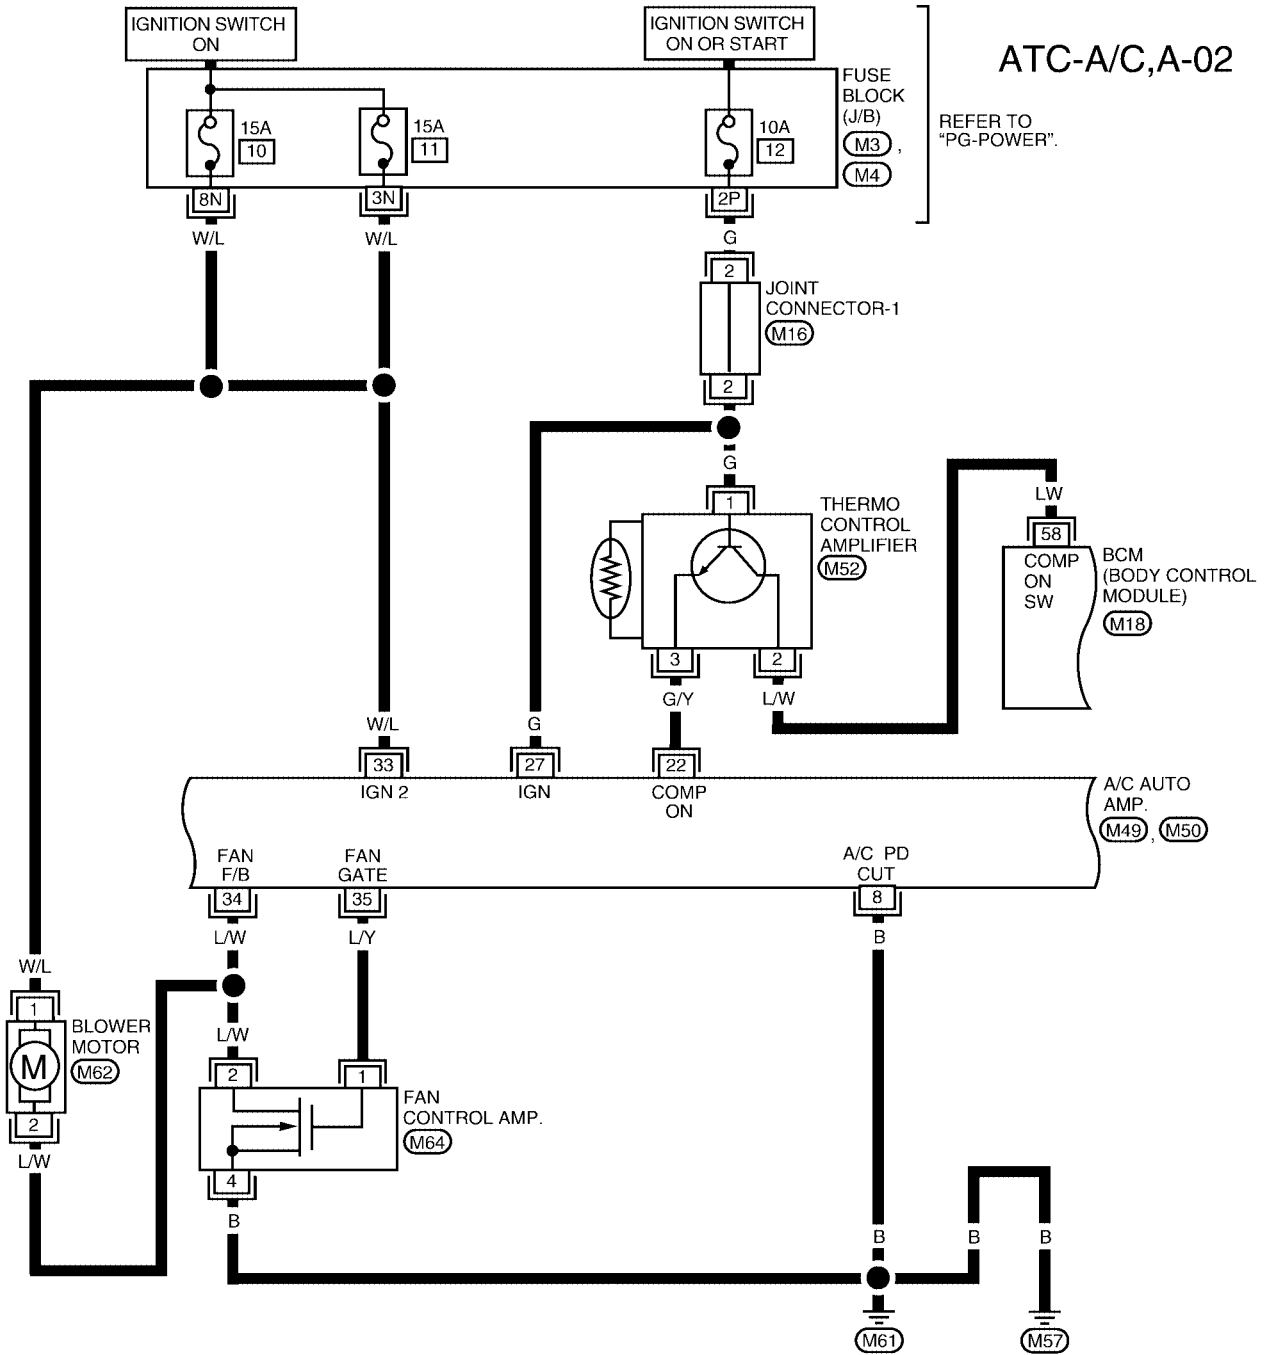

REFER TO THE FOLLOWING.  
 (M3), (M4) - FUSE BLOCK  
 - JUNCTION BOX (J/B)  
 (M16) - JOINT CONNECTOR (J/C)





WJWA0008E

# TROUBLE DIAGNOSIS

ATC-A/C,A-03


(N) : FOR CANADA

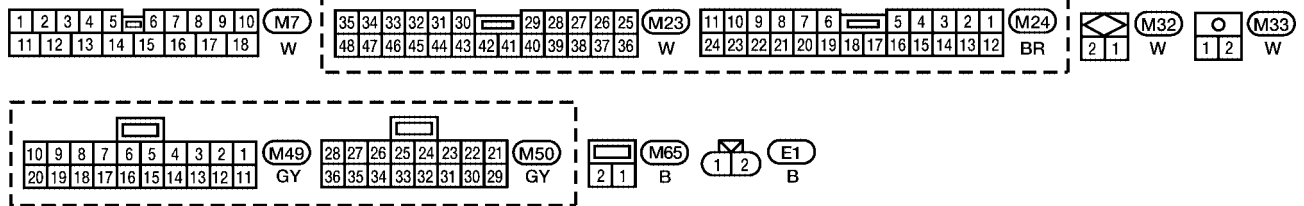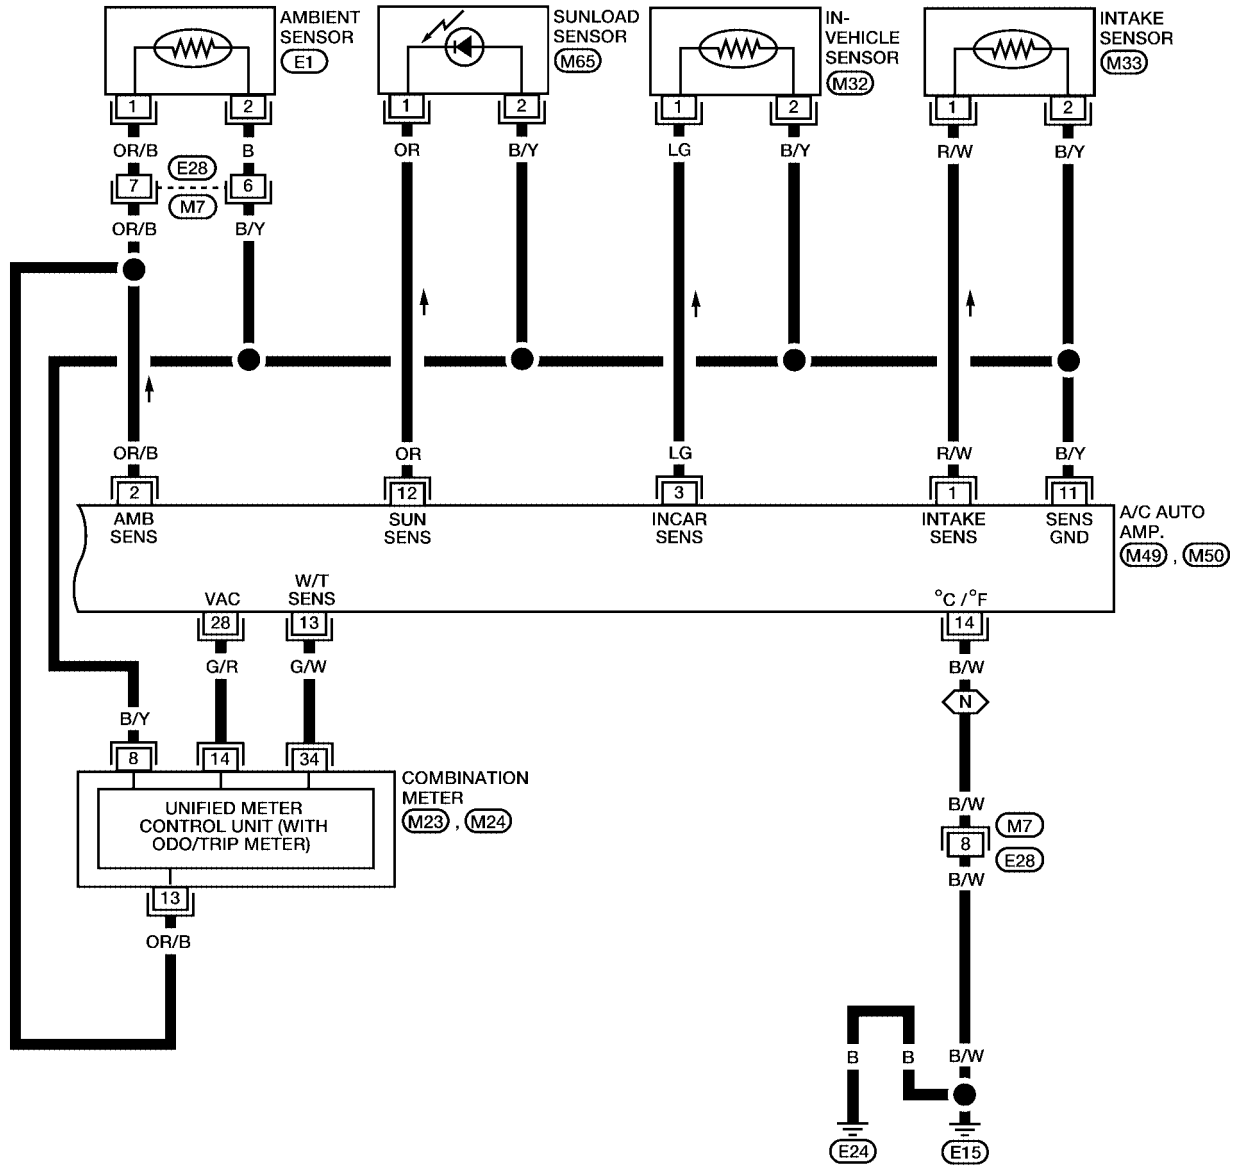

WJWA0009E


# TROUBLE DIAGNOSIS

## ATC-A/C,A-04

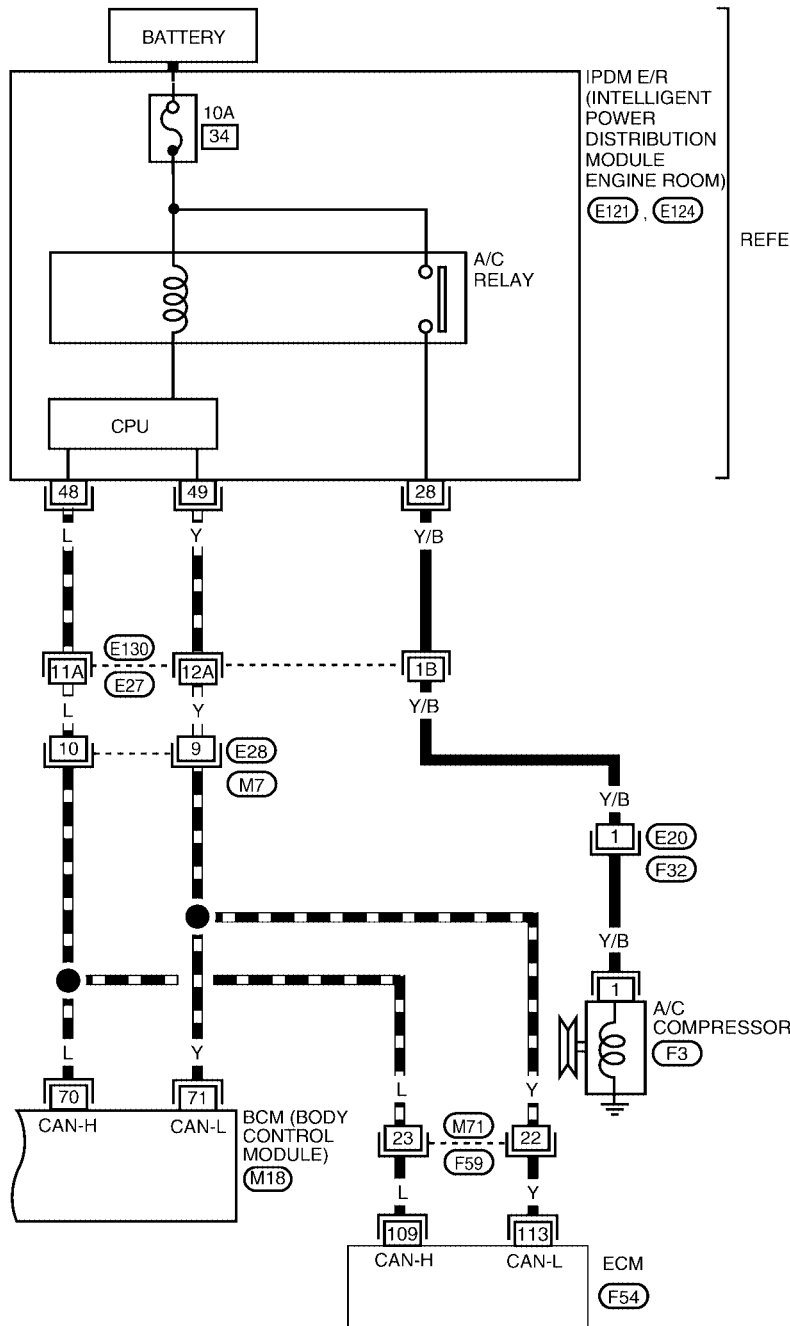

— — — — — : DATA LINE

REFER TO "PG-POWER".

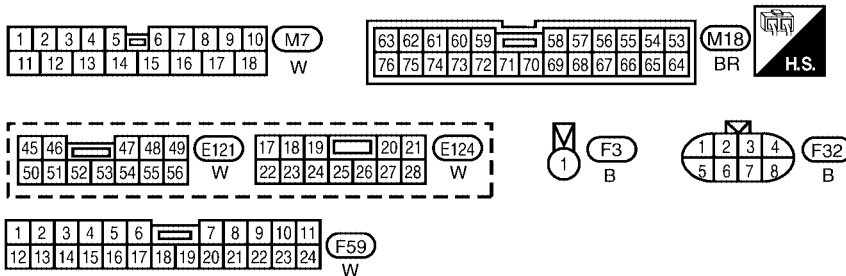

REFER TO THE FOLLOWING.

(E130) - SUPER MULTIPLE JUNCTION (SMJ)

(F54) - ELECTRICAL UNITS


WJWA0010E

# TROUBLE DIAGNOSIS


EJS000XH

## Auto Amp. Terminals and Reference Value INSPECTION OF AUTO AMP.

- Measure voltage between each terminal and body ground by following "AUTO AMP. INSPECTION TABLE".

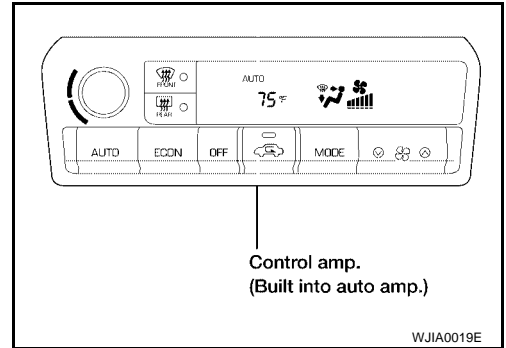

## A/C AUTO AMP. HARNESS CONNECTOR TERMINAL LAYOUT

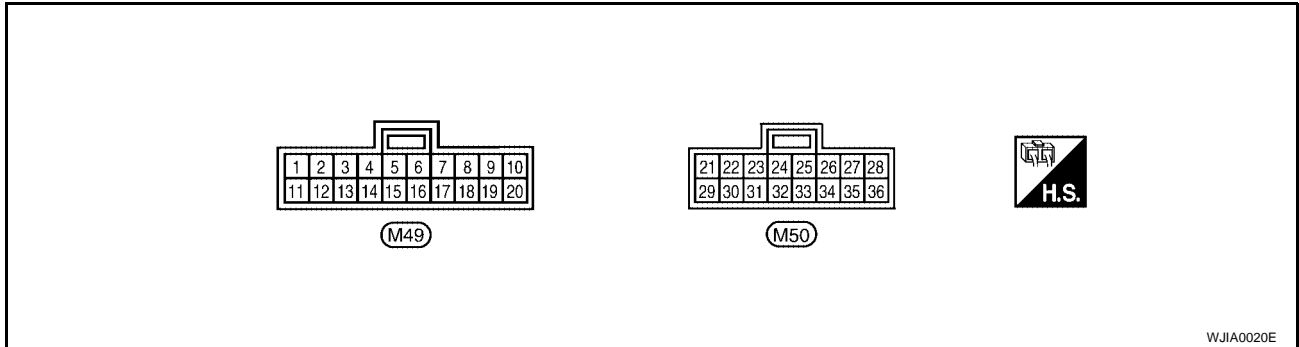

## AUTO AMP. INSPECTION TABLE

TERMI- NAL NO.	ITEM	CONDITION		Voltage (V) (Approx.)	
1	Intake sensor	—		—	
2	Ambient sensor	—		—	
3	In-vehicle sensor	—		—	
8	A/C PD Cut	—		—	
11	Sensor ground		—	0	
12	Sunload sensor	—		—	
13	Water temperature sensor	—		—	
14	Ground (for Canada)	—		0	
16	A/C LAN signal		—	—	
21	Power supply for mode door motor, intake door motor and air mix door motor		—	12	
22	Compressor ON signal		Compressor	ON	0
				OFF	4.6
24	Illumination (+)	—		—	
25	Illumination (-)	—		—	
26	Power supply for BAT		—	Battery voltage	

## TROUBLE DIAGNOSIS

TERMI- NAL NO.	ITEM	CONDITION		Voltage (V) (Approx.)
27	Power supply for IGN	—		12
28	Power supply for A/C ON signal	ON		4.6
		OFF		0
32	Ground	—		0
33	Power source for A/C	Ignition voltage feed back		12
34	Blower motor feed back	Fan speed: Low		7 - 10
35	Fan control AMP. control signal	Fan speed	Low, Middle low or Middle high	2.5 - 3.0
			High	9 - 10






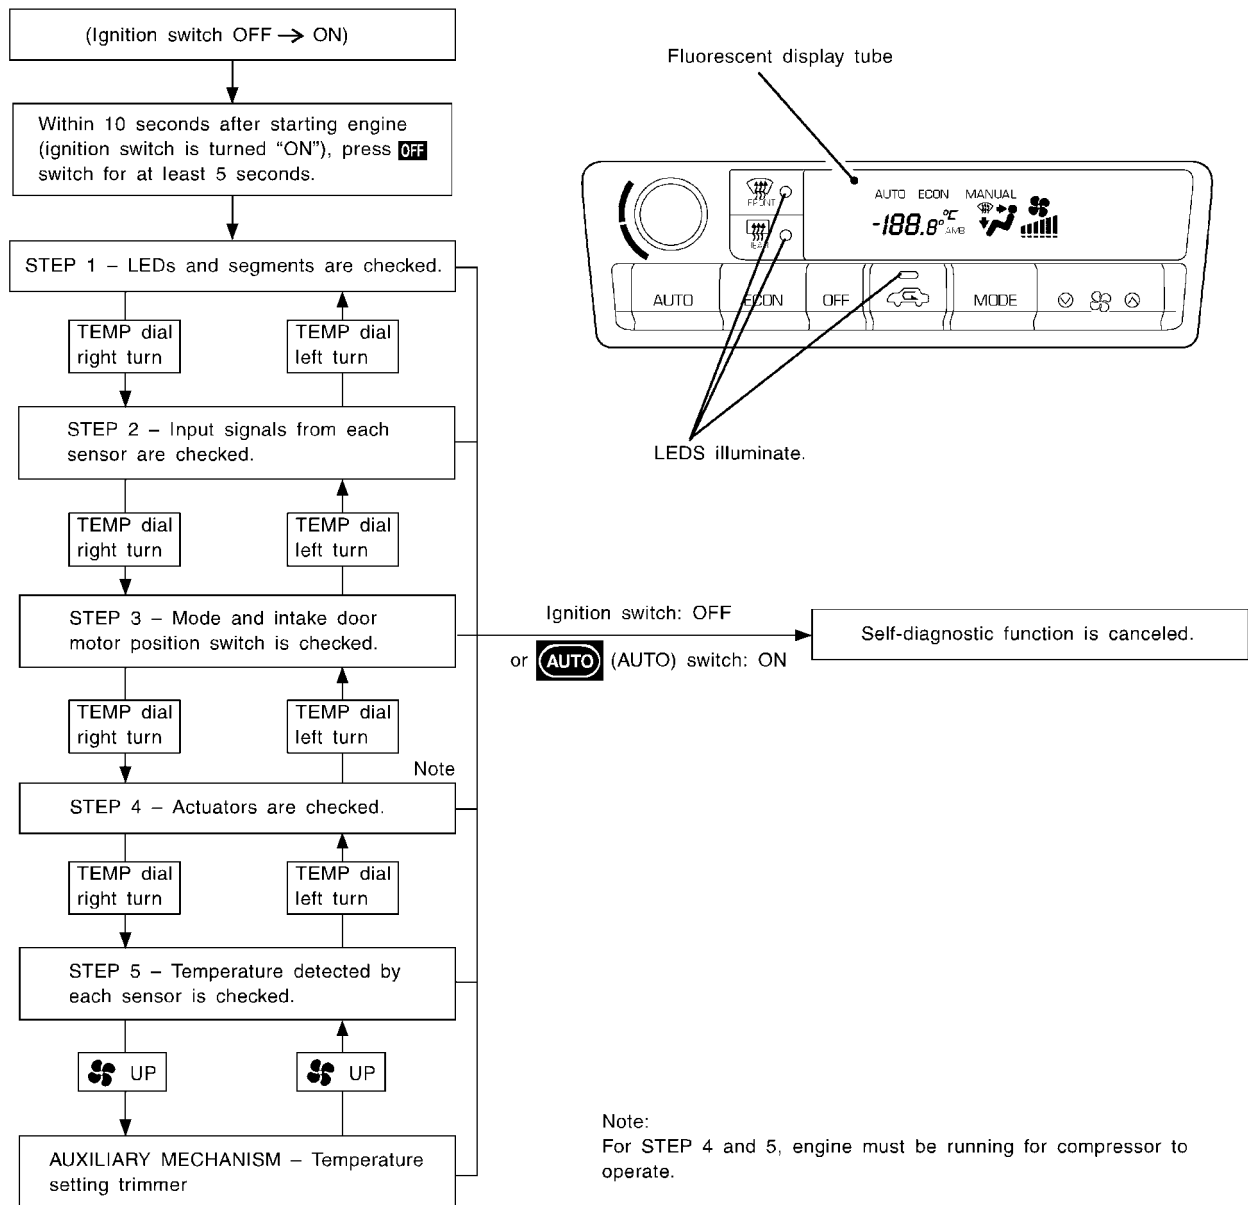
# TROUBLE DIAGNOSIS

EJS000X1

## Self-diagnosis DESCRIPTION

The self-diagnostic system diagnoses sensors, door motors, blower motor, etc. by system line. Refer to applicable sections (items) for details. Shifting from normal control to the self-diagnostic system is accomplished by starting the engine (turning the ignition switch from "OFF" to "ON") and pressing "OFF" switch for at least 5 seconds. The "OFF" switch must be pressed within 10 seconds after starting the engine (ignition switch is turned "ON"). This system will be canceled by either pressing "AUTO" (AUTO) switch or turning the ignition switch "OFF". Shifting from one step to another is accomplished by means of turning TEMP dial right or left, as required.

Additionally shifting from STEP 5 to AUXILIARY MECHANISM is accomplished by means of pushing  (fan) UP switch.



Perform all of the following tests to narrow the problem to a specific assembly, actuator, or function. Link to the Diagnostic Procedure which corresponds to malfunctions noted in these tests. If the A/C display screen has no display, check all power supply circuits to the A/C Auto Amp.

# TROUBLE DIAGNOSIS

## FUNCTION CONFIRMATION PROCEDURE

### 1. ENTER SELF-DIAGNOSTIC MODE

Perform steps 1 - 3.

1. Turn the ignition switch OFF.
2. Start the engine.
3. Immediately after starting the engine press and hold the OFF switch (for the auto A/C system) for at least 5 seconds.

The A/C Auto Amp. should now be in Self-Diagnosis mode. Self-Diagnosis steps 1 - 5 can now be performed. Self-Diagnosis step 1 will be displayed first. Shifting from one step to another is accomplished by turning the TEMP dial.

>> GO TO 2.


### 2. STEP 1 - DISPLAY CHECK

Verify all segments illuminate.

If all segments do not illuminate the fluorescent display tube is malfunctioning or the system has not entered self-diagnosis which would indicate a malfunctioning OFF switch.

Do all segments illuminate?

#### Display malfunction

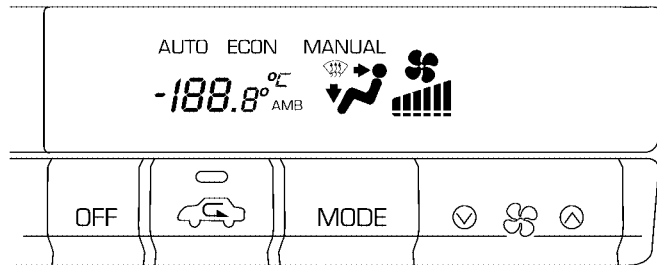

WJIA0022E

#### Yes or No

Yes >> GO TO 3.

- No >> ● Malfunctioning **OFF** switch, LED or fluorescent display tube.
- Replace A/C auto amp.

### 3. CHECK TO ADVANCE SELF-DIAGNOSIS STEP 2

1. Turn the TEMP dial clockwise.
2. Advance to self-diagnosis STEP 2.

If the system does not shift between step 1 and 2, a malfunctioning TEMP dial is indicated.

#### Yes or No

Yes >> GO TO 4.

- No >> ● Malfunctioning TEMP dial.
- Replace A/C auto amp.

# TROUBLE DIAGNOSIS

## 4. CHECK TO RETURN SELF-DIAGNOSIS STEP 1

1. Turn the TEMP dial counterclockwise.
2. Return to self-diagnosis STEP 1.

If the system does not shift between step 1 and 2, a malfunctioning TEMP dial is indicated.

### Yes or No

- Yes >> GO TO 5.  
No >> ● Malfunctioning TEMP dial.  
● Replace A/C auto amp.


## 5. STEP 2 - SENSOR CIRCUITS ARE CHECKED FOR OPEN OR SHORT CIRCUIT

Turn the TEMP dial clockwise, advance to STEP 2: Wait (about 25 seconds) for two digit Code to appear. This is the Electronic Sensor Input Check which includes circuits.

Does code No. 20 appear on the display?

### Yes or No

- Yes >> GO TO 6.  
No >> GO TO 13.

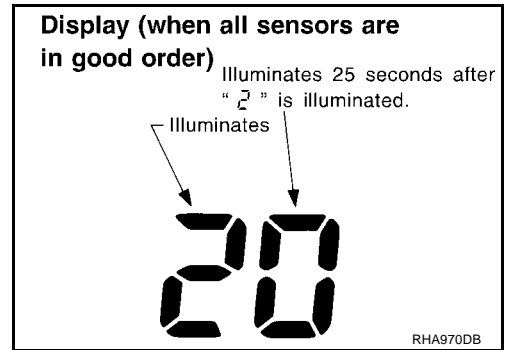


## 6. STEP 3 - MODE DOOR AND INTAKE DOOR POSITIONS ARE CHECKED

Turn the TEMP dial clockwise, advance to STEP 3. Wait (about 50 seconds) for two digit Code to appear. This is the Mode Door and Intake Door Position Switch input checks including circuits.

Does code No. 30 appear on the display?

### Yes or No

- Yes >> GO TO 7.  
No >> GO TO 14.

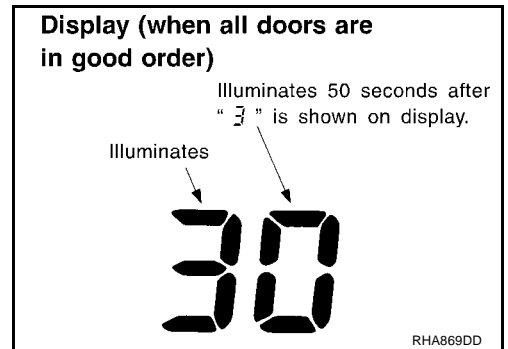


## 7. STEP 4 - OPERATION OF EACH ACTUATOR IS CHECKED

Turn the TEMP dial clockwise, advance to STEP 4.  
Engine running.

This is Heater and A/C system check. Code 41 will be displayed. Use the DEF switch to advance the code number from 41 to 46. After 46, the display will return to code 41 and can be advanced to 46 again.

>> GO TO 8.

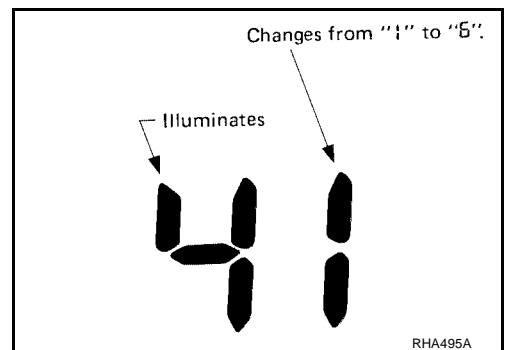

# TROUBLE DIAGNOSIS

## 8. CHECK ACTUATORS

Confirm operation of system components according to the following charts.

**Checks must be made visually, by listening to any noise, or by touching air outlets with your hand, etc. for improper operation.**

Actuator	Code No.	41	42	43	44	45	46
Mode door		VENT	B/L	B/L	FOOT	D/F	DEF
Intake door		REC	REC	20% FRE	FRE	FRE	FRE
Air mix door		Full cold	Full cold	Full hot	Full hot	Full hot	Full hot
Blower motor		4-5 V	9-11 V	7-9 V	7-9 V	7-9 V	10-12 V
Compressor		ON	ON	OFF	OFF	ON	ON

**Operating condition of each actuator cannot be checked by indicators.**

Discharge air flow

Mode control knob	Air outlet/distribution		
	Face	Foot	Defroster
	100 %	—	—
	60 %	40 %	—
	—	80 %	20 %
	—	60 %	40 %
	—	—	100 %

OK or NG

OK >> GO TO 9.

- NG >>
- Air outlet does not change.  
Go to [ATC-58, "Mode Door Motor Circuit"](#) .
  - Intake door does not change.  
Go to [ATC-64, "Intake Door Motor Circuit"](#) .
  - Blower motor operation is malfunctioning.  
Go to [ATC-67, "Blower Motor Circuit"](#) .
  - Magnet clutch does not engage.  
Go to [ATC-74, "Magnet Clutch Circuit"](#) .
  - Discharge air temperature does not change.  
Go to [ATC-61, "Air Mix Door Motor Circuit"](#) .


## 9. STEP 5 - TEMPERATURE OF EACH SENSOR IS CHECKED

Turn the TEMP dial clockwise, advance to STEP 5. This is Intake sensor, In Vehicle sensor and Ambient Sensor function check. Code 51 will be displayed.

**NOTE:**


Each sensor reading should be approximately the actual temperature.

>> GO TO 10.

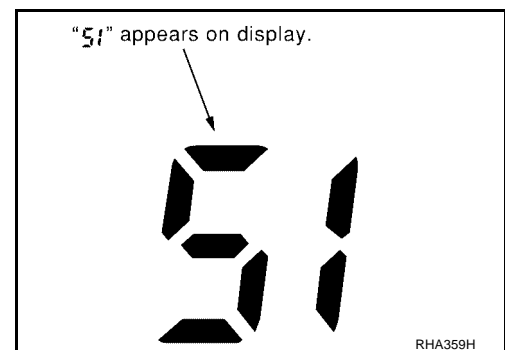

# TROUBLE DIAGNOSIS


## 10. CHECK AMBIENT SENSOR

Press  (DEF) once, temperature detected by the Ambient Sensor is displayed.


OK or NG

OK >> GO TO 11.

NG >> Go to [ATC-91, "Ambient Sensor Circuit"](#).

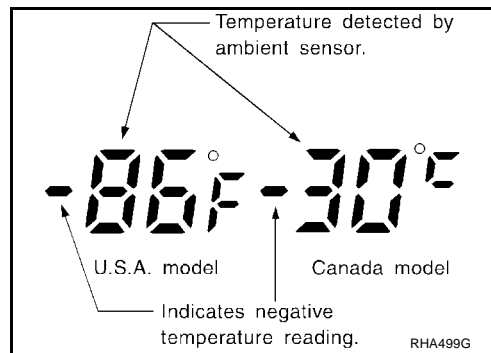


## 11. CHECK IN-VEHICLE SENSOR

Press  (DEF) second time, temperature detected by the In Vehicle Sensor is displayed.


OK or NG

OK >> GO TO 12.


NG >> Go to [ATC-93, "In-vehicle Sensor Circuit"](#).

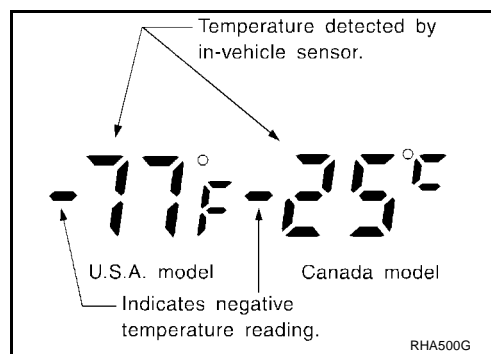


## 12. CHECK INTAKE SENSOR

Press  (DEF) third time, temperature detected by the Intake Sensor is displayed.


OK or NG

OK >> 1. Press  (DEF) switch the fourth time. Display returns to original presentation 51.

2. Turn ignition switch OFF or "  " (AUTO) switch ON.

3. END

NG >> Go to [ATC-99, "Intake Sensor Circuit"](#).

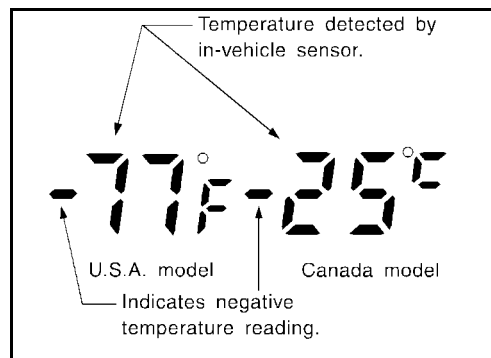

A  
B  
C  
D  
E  
F  
G  
H  
I  
ATC  
K  
L  
M

# TROUBLE DIAGNOSIS

## 13. CHECK MALFUNCTIONING SENSOR

### NOTE:

- A blinking mark (-) preceding the Code No. indicates a short circuit.
- No blinking mark (-) preceding the Code No. indicates an open circuit.
- If 2 or more items are malfunctioning the corresponding codes will alternately blink twice.
- A circuit will be detected as open or shorted and its code No. will be displayed when input signals correspond with conditions in the following chart.



Code No.	Sensor	Open circuit	Short circuit	Reference page
21	Ambient sensor	Less than - 41.9°C (-43°F)	Greater than 100°C (212°F)	<a href="#">ATC-91</a>
-21				
22	In-vehicle sensor	Less than - 41.9°C (-43°F)	Greater than 100°C (212°F)	<a href="#">ATC-93</a>
-22				
24	Intake sensor	Less than - 41.9°C (-43°F)	Greater than 100°C (212°F)	<a href="#">ATC-99</a>
-24				
25	Sunload sensor*2	Less than 0.228mA	Greater than 0.98 mA	<a href="#">ATC-96</a>
-25				
26	PBR*1	Greater than 95%	Less than 5%	<a href="#">ATC-61</a>
-26				

\*1: "95%" and "5%" refer to percentage with respect to stroke of air mix door. (Full cold: 0%, Full hot: 100%)

\*2: **Conduct self-diagnosis STEP 2 under sunshine.**

When conducting indoors, direct light (more than 60W) at sunload sensor.

### Display (when sensor malfunctions)

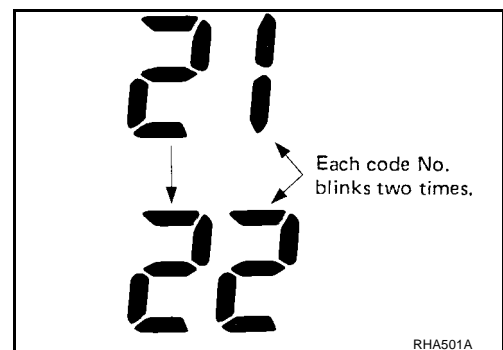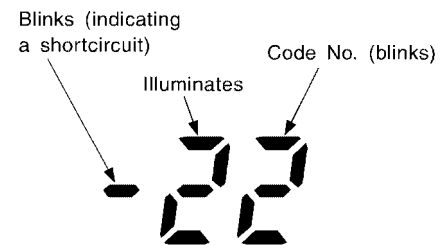

RHA501A

>> INSPECTION END



# TROUBLE DIAGNOSIS

## 14. CHECK MALFUNCTIONING DOOR MOTOR POSITION SWITCH

- 30- Mode door and intake door position switches are in working order. Continue to next step.
- 31- Mode door circuit / switch in vent position switch is malfunctioning.
- 32- Mode door circuit / switch in B/L position switch is malfunctioning.
- 34- Mode door circuit / switch in Foot position switch is malfunctioning.
- 35- Mode door circuit / switch in Foot Def. position switch is malfunctioning.
- 36- Mode door circuit / switch in Def. position switch is malfunctioning.
- 37- Intake door mode circuit / switch in Fresh Air position is malfunctioning.
- 38- Intake door mode circuit / switch in 20% Fresh Air position is malfunctioning.
- 39- Intake door mode circuit / switch in Recirculation Air position is malfunctioning.

### NOTE:

- If 2 or more items are malfunctioning the corresponding codes will alternately blink twice.
- If the Mode Door Motor harness is disconnected repeated display pattern of 31 → 32 → 34 → 35 → 36 will occur.
- If Intake Door Motor harness is disconnected repeated display pattern of 37 → 38 → 39 will occur.
- If any Mode Door Motor Position Switch is malfunctioning the Mode Door Motor will also malfunction.

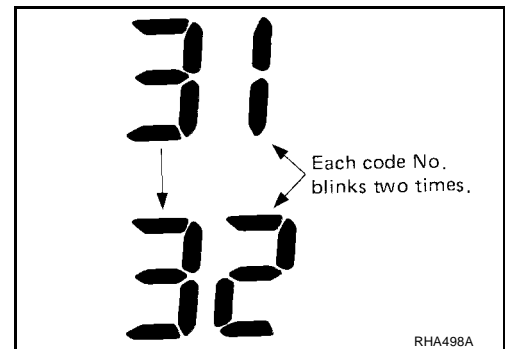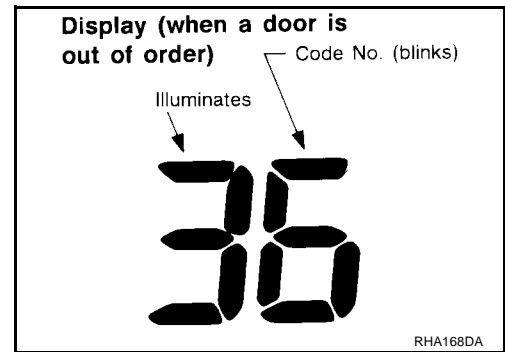

>> INSPECTION END


A  
B  
C  
D  
E  
F  
G  
H  
I  
ATC  
K  
L  
M

# TROUBLE DIAGNOSIS


## AUXILIARY MECHANISM: TEMPERATURE SETTING TRIMMER

### Unconfirmed Incidents

The customer may feel that the cabin temperature is not being controlled or regulated to the temperature indicated by the auto A/C display screen. To satisfy individual driver preference the Temperature Setting Trimmer may be used to compensate in a range of  $\pm 3^{\circ}\text{C}$  ( $\pm 6^{\circ}\text{F}$ ).

1. Enter Self Diagnosis mode and select STEP 5.
2. Press the Fan Up  switch: This will set the A/C system in auxiliary mode and the display will show 61.
3. Turn the temperature dial clockwise or counterclockwise: The temperature will change at a rate of  $0.5^{\circ}\text{C}$  ( $1^{\circ}\text{F}$ ).

If power is lost to the A/C Auto Amp., trimmer setting is canceled and setting becomes that of initial condition,  $0^{\circ}$ .

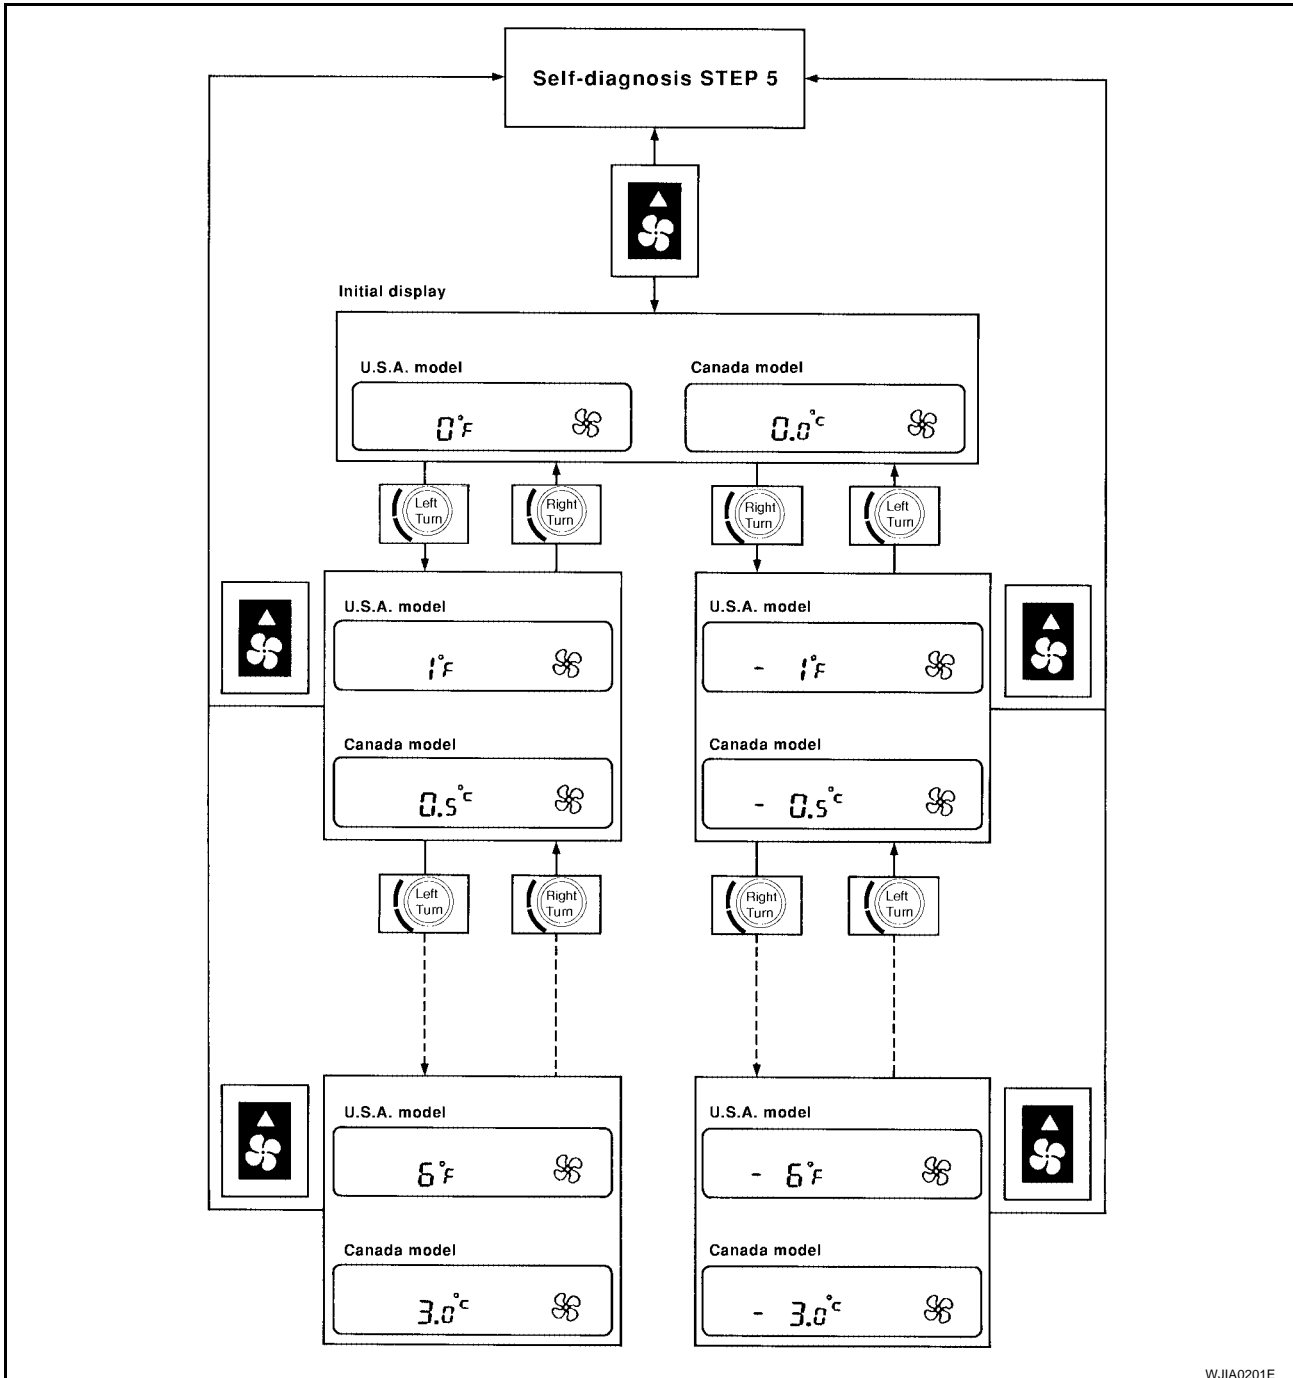

When battery cable is disconnected, trimmer operation is canceled. Temperature set becomes that of initial condition, i.e.  $0^{\circ}\text{C}$  ( $0^{\circ}\text{F}$ ).



# TROUBLE DIAGNOSIS

EJS000XJ

## Operational Check

The purpose of the operational check is to confirm that the system operates properly.

### CONDITIONS:

- Engine running and at normal operating temperature.

### PROCEDURE:

#### 1. Check Memory Function

1. Set the temperature 90°F or 32°C.
2. Press OFF switch.
3. Turn the ignition off.
4. Turn the ignition on.
5. Press the AUTO switch.
6. Confirm that the set temperature remains at previous temperature.
7. Press OFF switch.

If NG, go to [ATC-90, "Memory Function"](#).

If OK, continue with next check.

#### 2. Check Blower




1. Press fan switch (up side) one time.  
Blower should operate on low speed.  
The fan symbol should have one bar lit.
2. Press fan switch (up side) one more time, and continue checking blower speed and fan symbol until all speeds are checked.
3. Leave blower on MAX speed.

If NG, go to [ATC-67, "Blower Motor Circuit"](#).

If OK, continue with next check.

#### 3. Check Discharge Air

1. Press mode switch four times and DEF button.
2. Each position indicator should change shape.

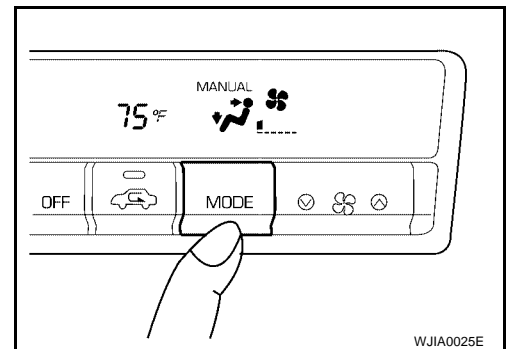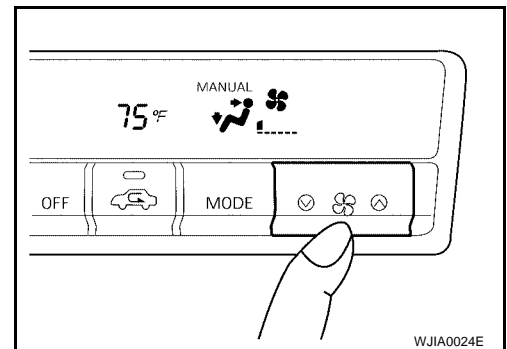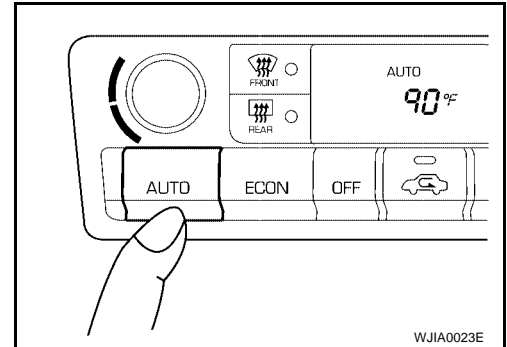


A  
B  
C  
D  
E  
F  
G  
H  
I  
K  
L  
M

ATC

# TROUBLE DIAGNOSIS






- Confirm that discharge air comes out according to the air distribution table.  
Refer to [ATC-25, "Discharge Air Flow"](#).

**NOTE:**

Confirm that the compressor clutch is engaged (visual inspection) and intake door position is at FRESH when the DEF  is selected.


Intake door position is checked in the next step.  
If NG, go to [ATC-58, "Mode Door Motor Circuit"](#).  
If OK, continue with next check.

**Discharge air flow**


Mode control knob	Air outlet/distribution		
	Face	Foot	Defroster
	100%	–	–
	60%	40%	–
	–	80%	20%
	–	60%	40%
	–	–	100%

RHA654F

## 4. Check Recirculation

- Press REC  switch.  
Recirculation indicator should illuminate.
- Listen for intake door position change (you should hear blower sound change slightly).


If NG, go to [ATC-64, "Intake Door Motor Circuit"](#).  
If OK, continue with next check.

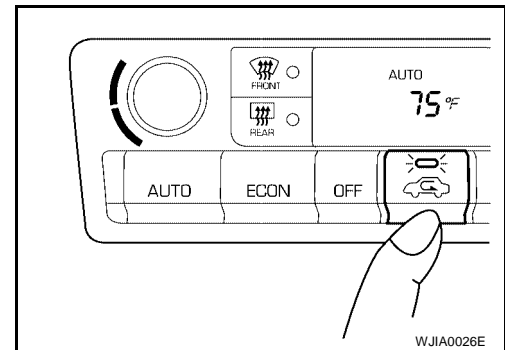

## 5. Check Temperature Decrease

- Turn the temperature dial counterclockwise until 18°C (60°F) is displayed.
- Check for cold air at discharge air outlets.

If NG, go to [ATC-80, "Insufficient Cooling"](#).  
If OK, continue with next check.

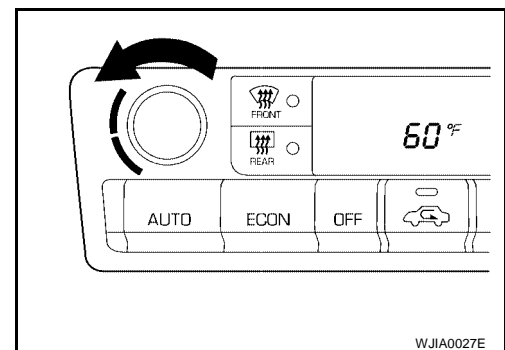


# TROUBLE DIAGNOSIS

## 6. Check Temperature Increase

1. Turn the temperature dial clockwise until 32°C (90°F) is displayed.
2. Check for hot air at discharge air outlets.

If NG, go to [ATC-87, "Insufficient Heating"](#).

If OK, continue with next check.

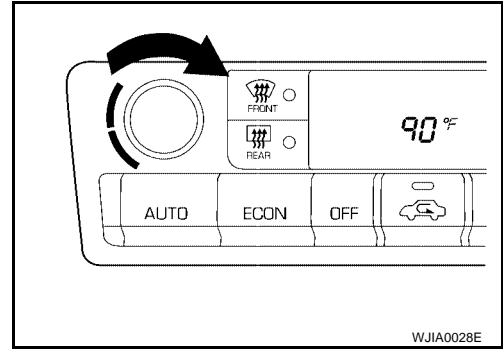


## 7. Check ECON (Economy) Mode

1. Set the temperature 25°C (75°F).
2. Press ECON switch.
3. Display should indicate ECON (no AUTO).  
Confirm that the compressor clutch is not engaged (visual inspection).  
(Discharge air and blower speed will depend on ambient, in-vehicle and set temperatures.)

If NG, go to [ATC-91, "ECON \(ECONOMY\) Mode"](#).

If OK, continue with next check.

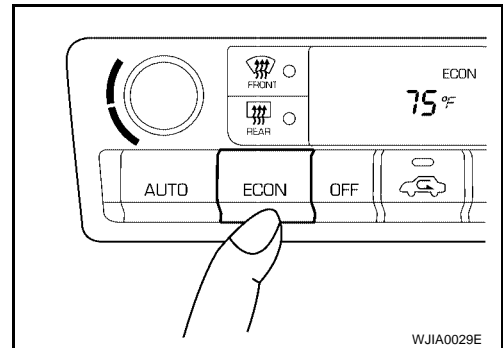


## 8. Check AUTO Mode

1. Press AUTO switch.
2. Display should indicate AUTO (no ECON).  
Confirm that the compressor clutch engages (audio or visual inspection).  
(Discharge air and blower speed will depend on ambient, in-vehicle and set temperatures.)

If NG, go to [ATC-53, "DIAGNOSTIC PROCEDURE"](#), then if necessary, [ATC-74, "Magnet Clutch Circuit"](#).

If all operational check are OK (symptom can not be duplicated), go to [GI-25, "How to Perform Efficient Diagnosis for an Electrical Incident"](#) and perform tests as outlined to simulate driving conditions environment. If symptom appears, refer to [ATC-31, "SYMPTOM TABLE"](#) and perform applicable trouble diagnosis procedures.

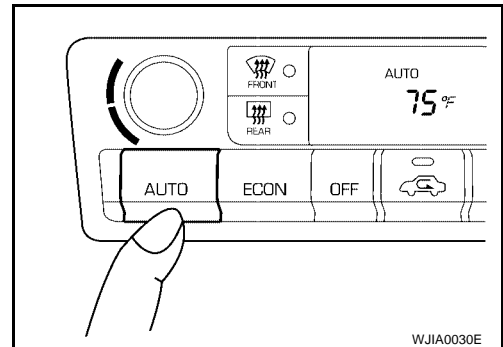

A  
B  
C  
D  
E  
F  
G  
H  
I  
ATC  
K  
L  
M

# TROUBLE DIAGNOSIS


EJS000XK

## Power Supply and Ground Circuit for Auto Amp.

SYMPTOM:

- A/C system does not come on.

### INSPECTION FLOW

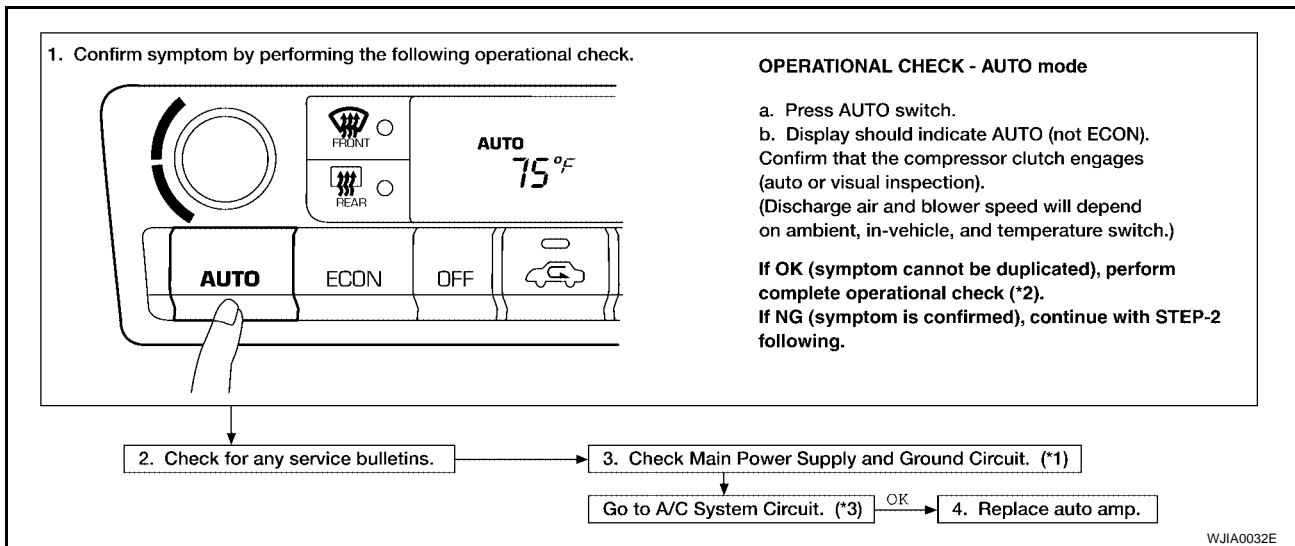

\*1: [ATC-52](#)

\*2: [ATC-49](#)

\*3: [ATC-52](#)


### COMPONENT DESCRIPTION

#### AUTOMATIC AMPLIFIER (AUTO AMP.)

The auto amplifier has a built-in microcomputer which processes information sent from various sensors needed for air conditioner operation. The air mix door motor, mode door motor, intake door motor, blower motor and compressor are then controlled.


The auto amplifier is unitized with control mechanisms. Signals from various switches and Potentio Temperature Control (PTC) are directly entered into auto amplifier.

Self-diagnostic functions are also built into auto amplifier to provide quick check of malfunctions in the auto air conditioner system.

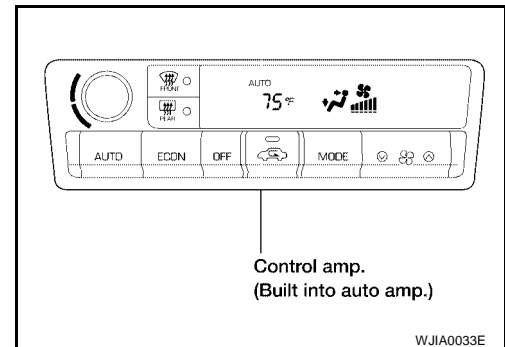

#### POTENTIO TEMPERATURE CONTROL (PTC)

The PTC is built into the A/C auto amp. It can be set at an interval of 0.5°C (1.0°F) in the 18°C (60°F) to 32°C (90°F) temperature range by pushing the temperature button. The set temperature is digitally displayed.

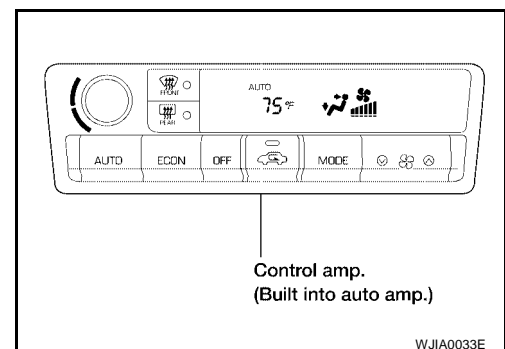


# TROUBLE DIAGNOSIS

## DIAGNOSTIC PROCEDURE

SYMPTOM:

- A/C system does not come on.

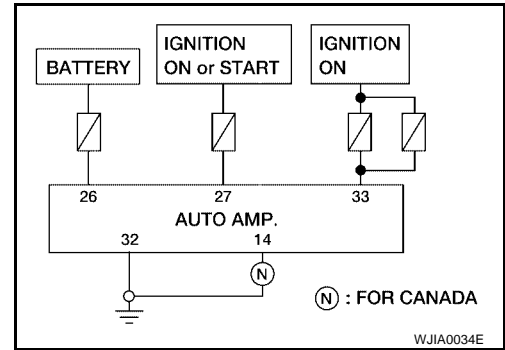

### 1. CHECK POWER SUPPLY CIRCUIT FOR AUTO AMP.


Terminals		Voltage (V) (Approx.)
(+)	(-)	
Connectors	Wire colors	Body ground 12V
M60-26	Y/R	
M60-27	G	
M60-33	W/L	

OK or NG

OK >> GO TO 2.

NG >> Check auto amp. ground circuit.

- Check 10A fuse [Nos. 12 and 19, located in the fuse block (J/B)] and 15A fuses [Nos. 10 and 11, located in the fuse block (J/B)].
- If fuses are OK, check for open circuit in wiring harness. Repair or replace as necessary.
- If fuses are NG, replace fuse and check wiring harness for short circuit. Repair or replace as necessary.

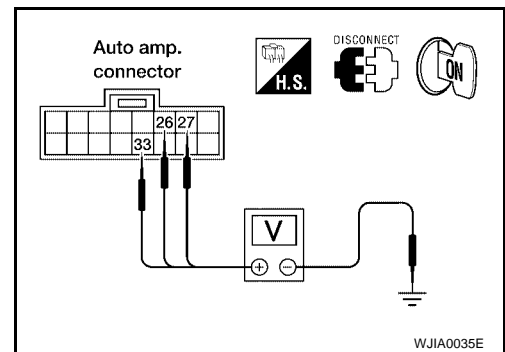

A  
B  
C  
D  
E  
F  
G  
H  
I  
K  
L  
M

ATC


# TROUBLE DIAGNOSIS

## 2. CHECK BODY GROUND CIRCUIT FOR AUTO AMP.

Terminals		Voltage (V) (Approx.)
(+)	(-)	
Connectors	Wire colors	Body ground 12V
M50-32	B	
M49-14 (Canada)	B/W	

**Yes or No**

- Yes    >> ● Replace auto amp.  
    ● INSPECTION END
- No     >> Repair or replace harness.

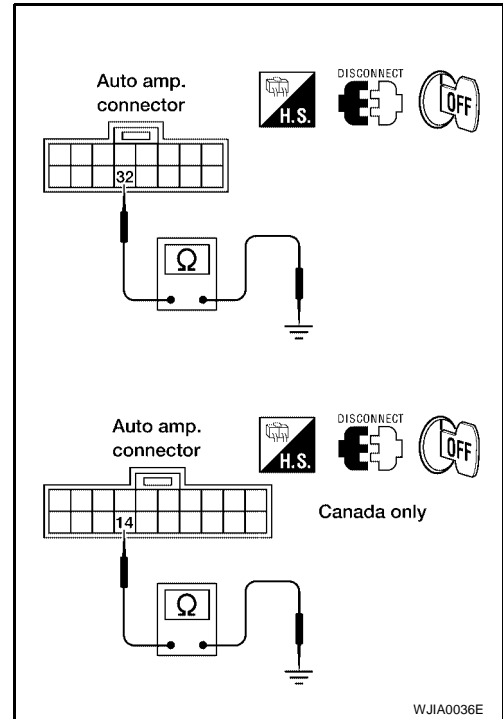


# TROUBLE DIAGNOSIS

EJS000XL

## LAN System Circuit

SYMPTOM: Mode door motor, intake door motor and/or air mix door motor does not operate normally.

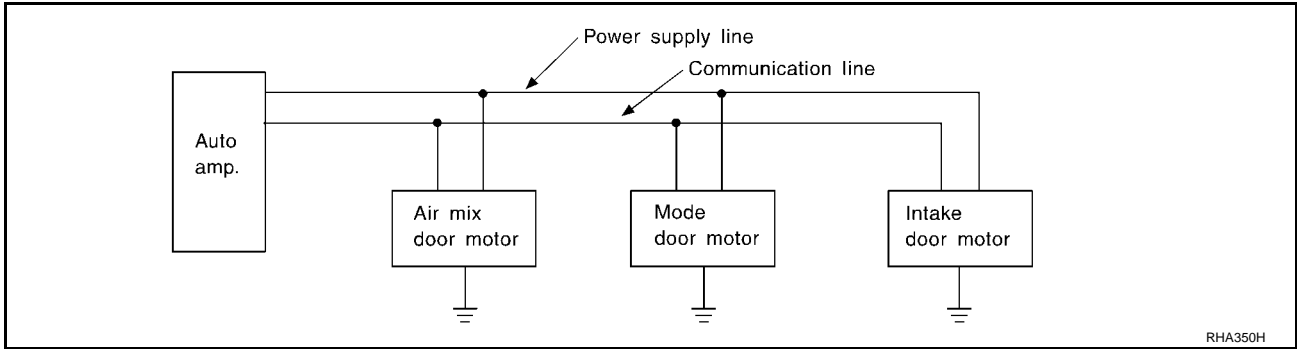

RHA350H


### DIAGNOSTIC PROCEDURE

#### 1. CHECK POWER SUPPLY FOR AUTO AMP. (LCU) SIDE

Terminals		Voltage (V) (Approx.)
(+)		
Connector	Terminal (wire color)	(-)
M50-21	L/R	Body ground

OK or NG

- OK >> GO TO 2.
- NG >> Replace auto amp.(LCU).

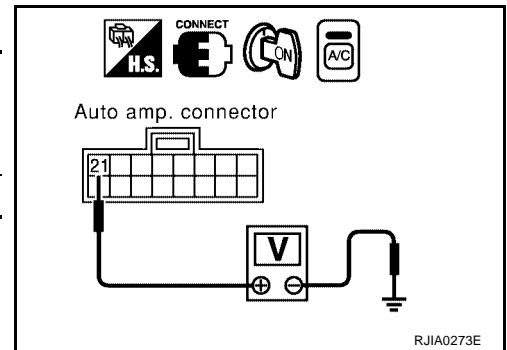


RJIA0273E

#### 2. CHECK SIGNAL FOR AUTO AMP. (LCU) SIDE

Terminals		Voltage (V) (Approx.)
(+)		
Connector	Terminal (wire color)	(-)
M49-16	L/B	Body ground

OK or NG

- OK >> GO TO 3.
- NG >> Replace auto amp.(LCU).

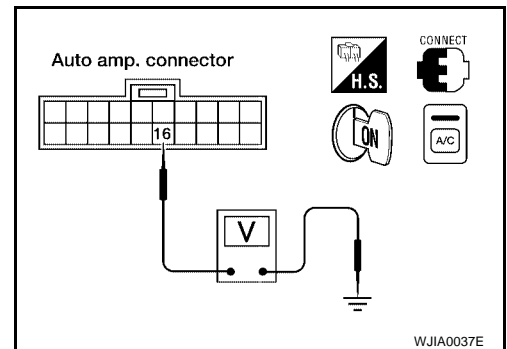


WJIA0037E

#### 3. CHECK POWER SUPPLY FOR MOTOR SIDE

Door motors	Terminals		Voltage (V) (Approx.)
	(+)		
	Connector	wire colors	
Mode	M40-1	L/R	Body ground
Air mix	M39-1	L/R	
Intake	M58-1	L/R	

OK or NG

- OK >> GO TO 4.
- NG >> Replace harness or connector.

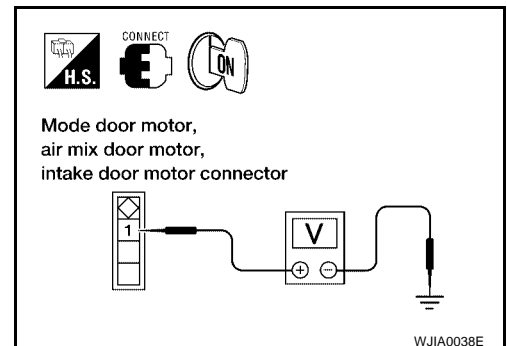

WJIA0038E


# TROUBLE DIAGNOSIS

## 4. CHECK SIGNAL FOR MOTOR SIDE

Door motors	Terminals		(-)	Voltage (V) (Approx.)
	(+)			
	Connectors	wire colors		
Mode	M40-3	L/B	Body ground	5.5V
Air mix	M39-3	L/B		
Intake	M58-3	L/B		

**OK or NG**

- OK >> GO TO 5.
- NG >> Replace harness or connector.

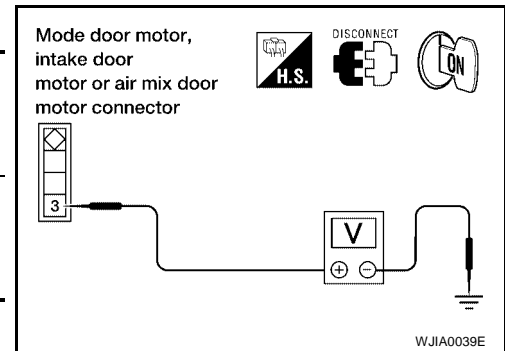


## 5. CHECK MOTOR GROUND CIRCUIT

Door motors	Terminals		(-)	Continuity
	(+)			
	Connector	wire colors		
Mode	M40-2	B	Body ground	Yes
Air mix	M39-2	B		
Intake	M58-2	B		

**OK or NG**

- OK >> GO TO 6.
- NG >> Replace harness or connector.

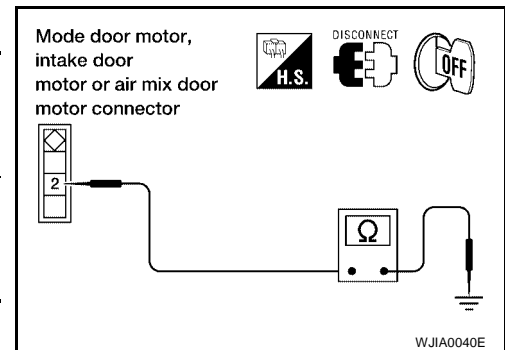

## 6. CHECK MOTOR OPERATION

Disconnect and reconnect the motor connectors and confirm the motor operation.

**OK or NG**

- OK >> (Return to operate normally.)
  - Poor contacting the motor connector
- NG >> (Does not operate normally.)
  - GO TO 7.

## 7. CHECK MODE DOOR MOTOR AND AIR MIX DOOR MOTOR OPERATION

1. Disconnect the intake door motor connector.
2. Reconnect the mode door motor connector and air mix door motor connector, confirm the mode door motor and air mix door motor operation.

**OK or NG**

- OK >> (Mode door motor and air mix door motor operate normally.)
  - Replace the intake door motor.
- NG >> (Mode door motor and air mix door motor do not operate normally.)
  - GO TO 8.



# TROUBLE DIAGNOSIS

---

## 8. CHECK AIR MIX DOOR MOTOR AND INTAKE DOOR MOTOR OPERATION

---

1. Disconnect mode door motor connector.
2. Reconnect the intake door motor connector, confirm the air mix door motor and intake door motor operation.

### OK or NG

- OK >> (Air mix door motor and intake door motor operate normally.)
- Replace mode door motor.
- NG >> (Air mix door motor and intake door motor do not operate normally.)
- GO TO 9.

---

## 9. CHECK INTAKE DOOR MOTOR AND MODE DOOR MOTOR OPERATION

---

1. Disconnect air mix door motor connector.
2. Reconnect mode door motor connector, confirm the intake door motor and mode door motor operation.

### OK or NG

- OK >> (Intake door motor and mode door motor operate normally.)
- Replace air mix door motor.
- NG >> (Intake door motor and mode door motor do not operate normally.)
- Replace auto amp.

A

B

C

D

E

F

G

H

I

ATC

K

L

M

# TROUBLE DIAGNOSIS


EJS000XM

## Mode Door Motor Circuit

### SYMPTOM:

- Air outlet does not change.
- Mode door motor does not operate normally.

### INSPECTION FLOW

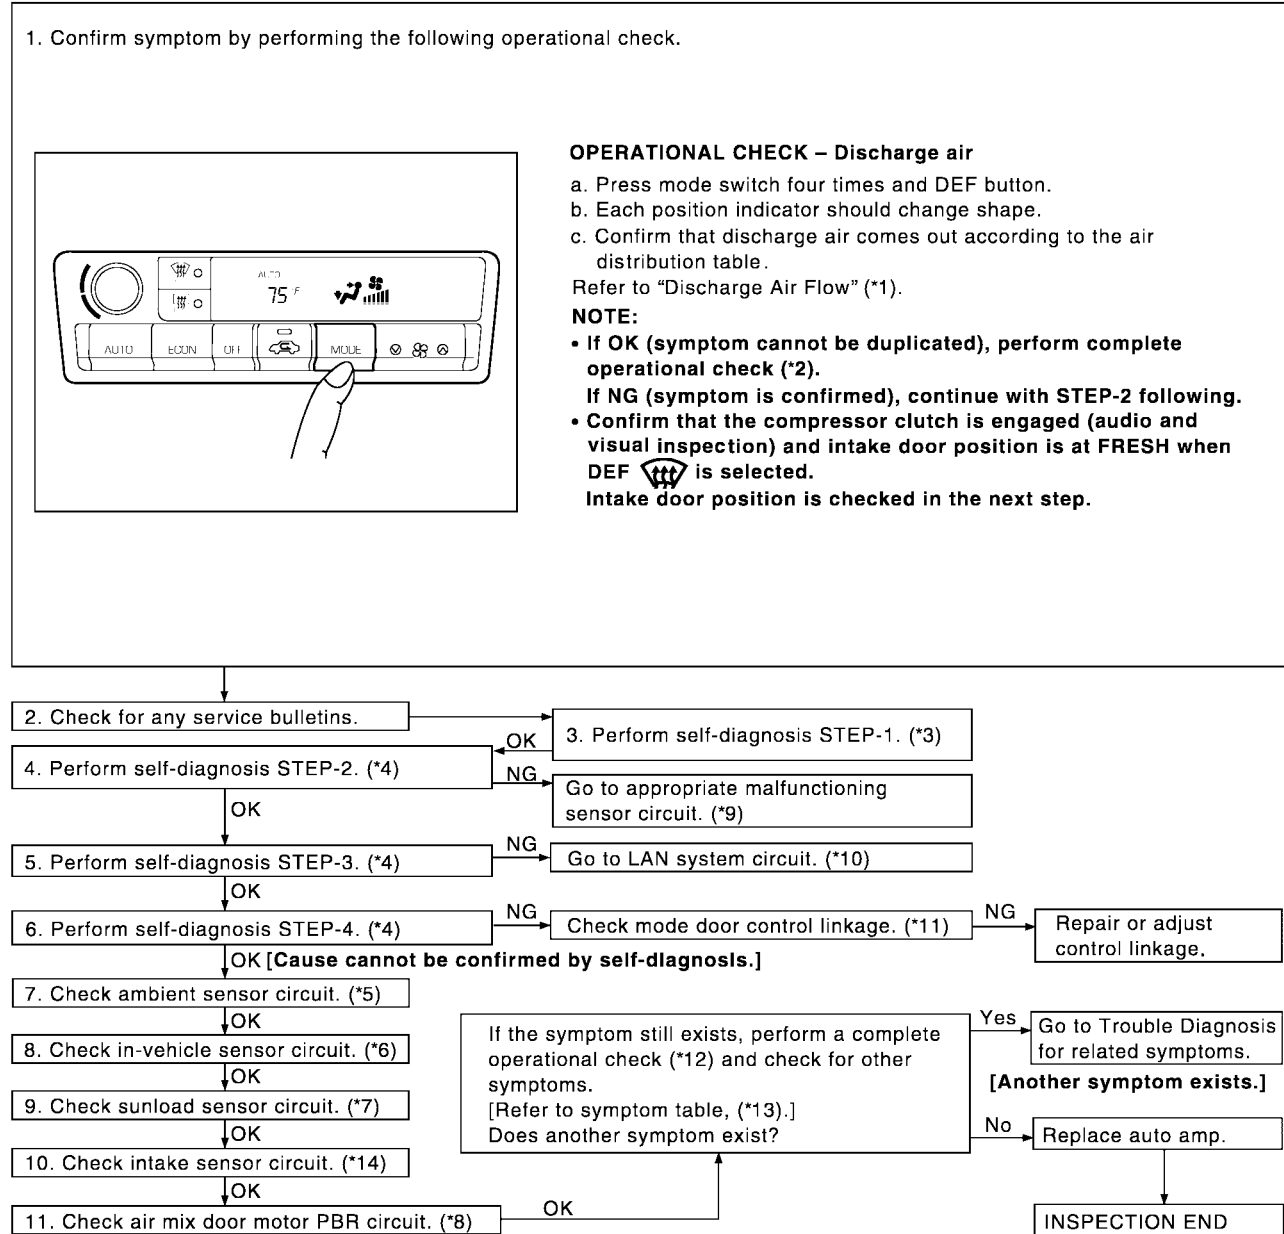

\*1 Discharge air flow [ATC-25](#)

\*2 Operational check [ATC-49](#)

\*3 Self-diagnosis [ATC-41](#) , see No.1

\*4 Self-diagnosis [ATC-41](#) , see No. 5

\*7 Sunload sensor circuit [ATC-96](#)

\*8 Air mix door motor circuit [ATC-61](#)

\*9 Self-diagnosis [ATC-89](#) , see No.14

\*1 LAN system circuit [ATC-55](#)

0

\*1 Symptom table [ATC-31](#)

3

\*1 Intake sensor circuit [ATC-99](#)

4

WJIA0041E

# TROUBLE DIAGNOSIS

- |  |  |
|--|--|
| <p>*5 Ambient sensor circuit <a href="#">ATC-91</a></p> <p>*6 In-vehicle sensor circuit <a href="#">ATC-93</a></p> | <p>*1 Mode door Diagnostic Procedure<br/>1 <a href="#">ATC-60</a></p> <p>*1 Operational check <a href="#">ATC-49</a><br/>2</p> |
|--|--|

## SYSTEM DESCRIPTION

### Component Parts


Mode door control system components are:

- Auto amp.
- Mode door motor (LCU)
- In-vehicle sensor
- Ambient sensor
- Sunload sensor
- Intake sensor


### System Operation

The auto amplifier receives data from each of the sensors. The amplifier sends air mix door, mode door and intake door opening angle data to the air mix door motor LCU, mode door motor LCU and intake door motor LCU.

The air mix door motor, mode door motor and intake door motor read their respective signals according to the address signal. Opening angle indication signals received from the auto amplifier and each of the motor position sensors are compared by the LCUs in each motor with the existing decision and opening angles. Subsequently, HOT/COLD or DEFROST/VENT or FRESH/RECIRCULATION operation is selected. The new selection data is returned to the auto amplifier.

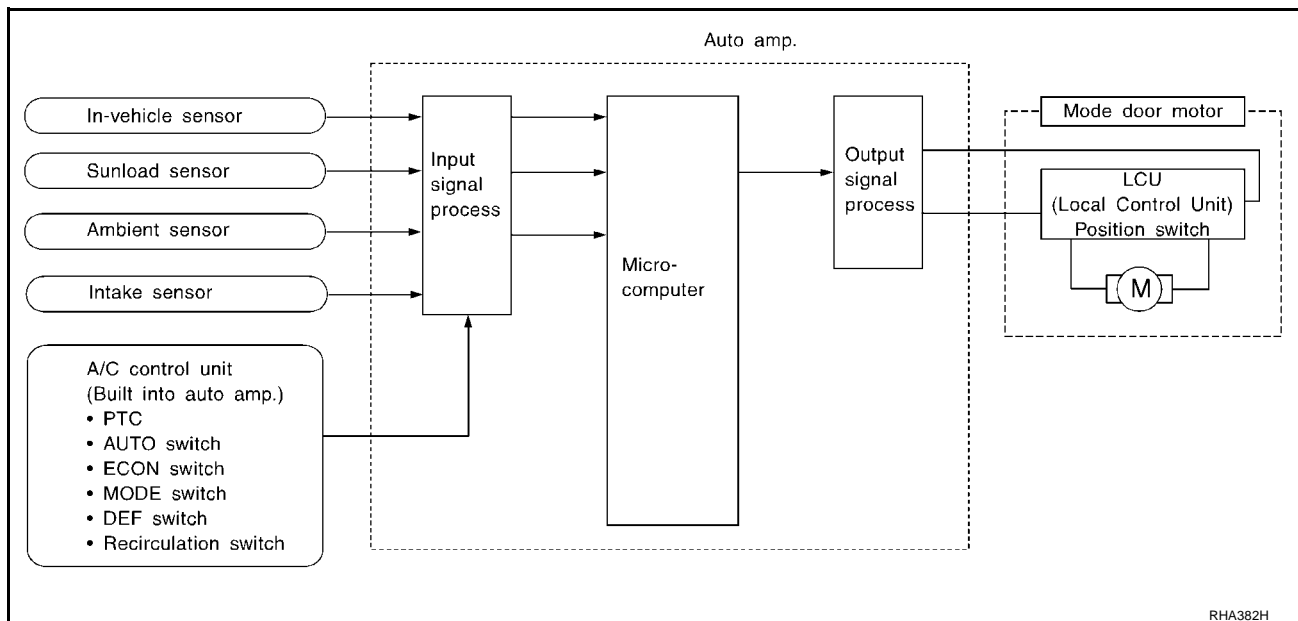

### Mode Door Control Specification

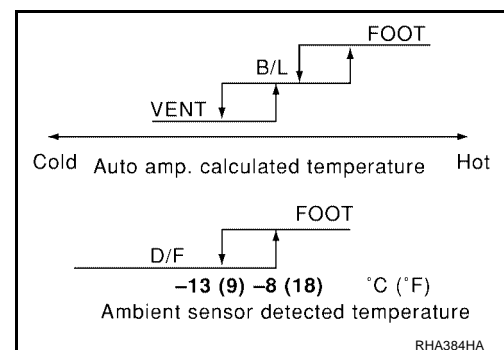


# TROUBLE DIAGNOSIS

## COMPONENT DESCRIPTION

### Mode Door Motor

The mode door motor is attached to the heater and cooling unit. It rotates so that air is discharged from the outlet set by the auto amplifier. Motor rotation is conveyed to a link which activates the mode door.

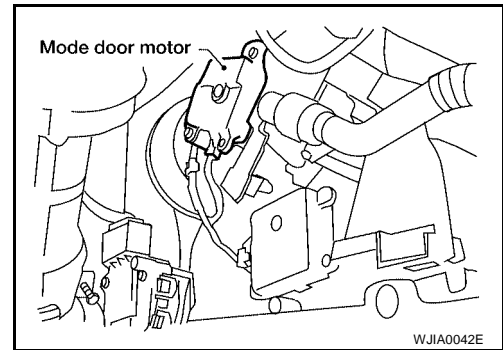


## DIAGNOSTIC PROCEDURE

SYMPTOM: Mode door motor and/or air mix door motor does not operate normally.

Perform diagnostic procedure for LAN system circuit. Refer to [ATC-55, "LAN System Circuit"](#).

### MODE DOOR

1. Install mode door motor on heater unit and connect it to main harness.
2. Set up code No. in Self-diagnosis STEP 4. Refer to [ATC-41, "Self-diagnosis"](#).
3. Move side link by hand and hold mode door in DEF mode.
4. Attach mode door motor rod to side link rod holder.
5. Make sure mode door operates properly when changing from code No. **41** to **46** by pushing DEF switch.

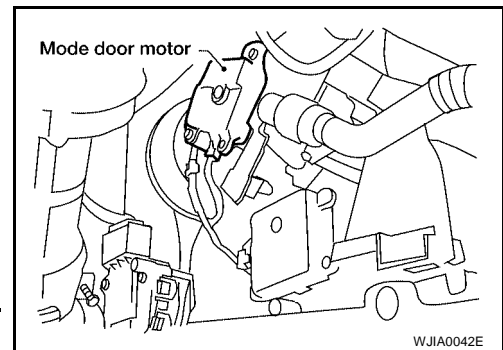

<b>41</b>	<b>42</b>	<b>43</b>	<b>44</b>	<b>45</b>	<b>46</b>
VENT	B/L	B/L	FOOT	D/F	DEF

# TROUBLE DIAGNOSIS

EJS000XN


## Air Mix Door Motor Circuit

### SYMPTOM:

- Discharge air temperature does not change.
- Air mix door motor does not operate.

### INSPECTION FLOW


1. Confirm symptom by performing the following operational check.

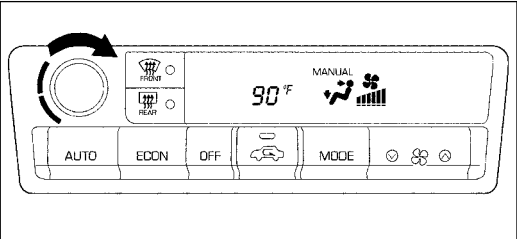

**OPERATIONAL CHECK**

**Temperature increase**


- Turn the temperature dial clockwise until 32°C (90°F) is displayed.
- Check for hot air at discharge air outlets.

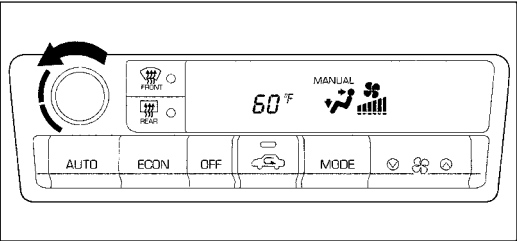

**Temperature decrease**

- Turn the temperature dial counterclockwise until 18°C (60°F) is displayed.
- Check for cold air at discharge air outlets.

**If OK (symptom cannot be duplicated), perform complete operational check (\*10).  
If NG (symptom is confirmed), continue with STEP-2 following.**

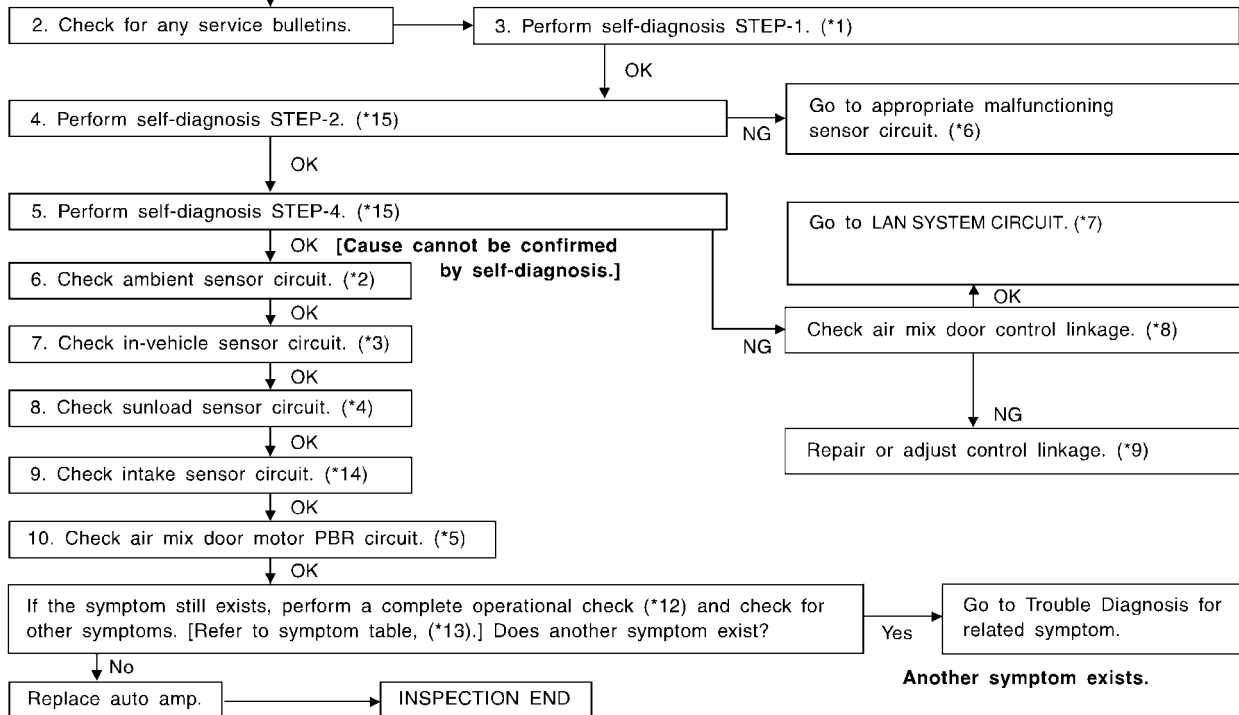

\*1 Self-diagnosis [ATC-41](#) , see No.1

\*2 Ambient sensor circuit [ATC-91](#)

\*3 In-vehicle sensor circuit [ATC-93](#)

\*6 Self-diagnosis [ATC-89](#) , see No. 14

\*7 LAN system circuit [ATC-55](#)

\*8 Air mix door Diagnostic Procedure [ATC-63](#)

\*1 Operational check [ATC-49](#)  
2

\*1 Symptom table [ATC-31](#)  
3

\*1 Intake sensor circuit [ATC-99](#)  
4

WJIA0043E

# TROUBLE DIAGNOSIS

*4 Sunload sensor circuit <a href="#">ATC-96</a>	*9 Air mix door Component description <a href="#">ATC-63</a>	*1 Self-diagnosis <a href="#">ATC-89</a> , see No.7 5
*5 Air mix door motor circuit <a href="#">ATC-61</a>	*1 Operational check <a href="#">ATC-49</a> 0	

## SYSTEM DESCRIPTION

### Component Parts


Air mix door control system components are:

- Auto amp.
- Air mix door motor (LCU)
- In-vehicle sensor
- Ambient sensor
- Sunload sensor
- Intake sensor


### System Operation

The auto amplifier receives data from each of the sensors. The amplifier sends air mix door, mode door and intake door motor opening angle data to the air mix door motor LCU, mode door motor LCU and intake door motor LCU.

The air mix door motor, mode door motor and intake door motor read their respective signals according to the address signal. Opening angle indication signals received from the auto amplifier and each of the motor position sensors are compared by the LCUs in each motor with the existing decision and opening angles. Subsequently, HOT/COLD or DEFROST/VENT or FRESH/RECIRCULATION operation is selected. The new selection data is returned to the auto amplifier.

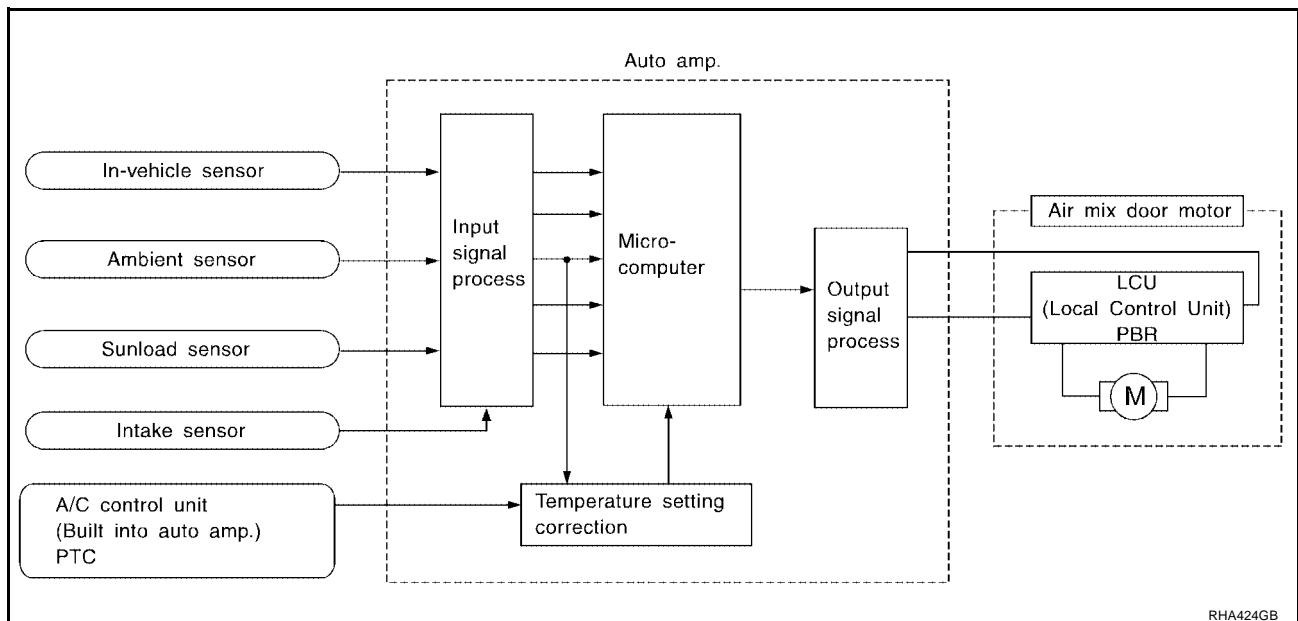

### Air Mix Door Control Specification

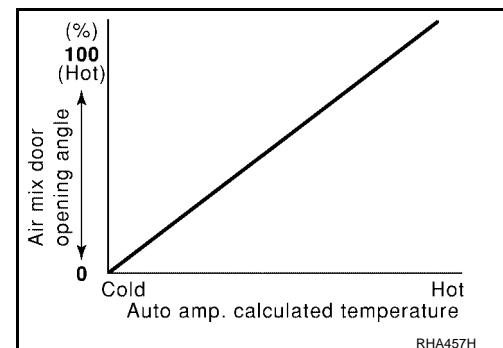


# TROUBLE DIAGNOSIS

## COMPONENT DESCRIPTION

### Air Mix Door Motor

The air mix door motor is attached to the heater and cooling unit. It rotates so that the air mix door is opened or closed to a position set by the auto amplifier. Motor rotation is then conveyed through a shaft and the air mix door position is then fed back to the auto amplifier by PBR built-in air mix door motor.

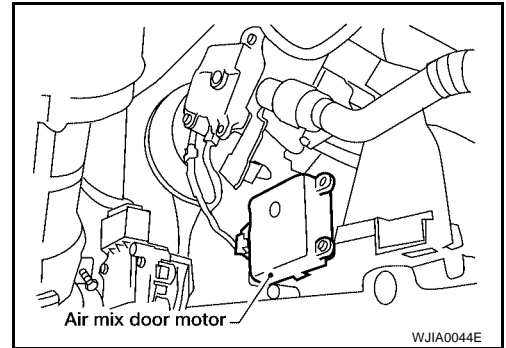


## DIAGNOSTIC PROCEDURE

SYMPTOM: Discharge air temperature does not change.  
 Perform diagnostic procedure for LAN system circuit. Refer to [ATC-55, "LAN System Circuit"](#).

### AIR MIX DOOR

1. Install air mix door motor on heater unit and connect it to main harness.
2. Set up code No. 41 in Self-diagnosis STEP 4. Refer to [ATC-89, "Self-diagnosis"](#).
3. Move air mix door lever by hand and hold it in full cold position.
4. Attach air mix door lever to side link.
5. Make sure air mix door operates properly when changing from code No. 41 to 46 by pushing DEF switch.

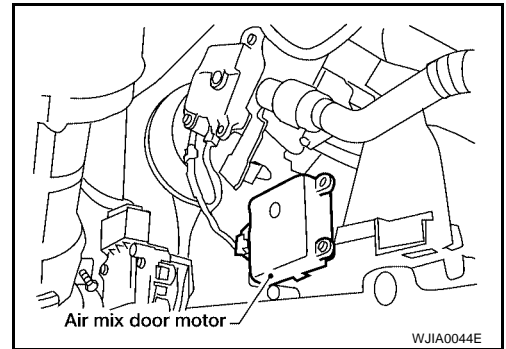

41	42	43	44	45	46
Full cold		Full hot			

A  
B  
C  
D  
E  
F  
G  
H  
I  
K  
L  
M

ATC

# TROUBLE DIAGNOSIS


EJS000XO

## Intake Door Motor Circuit

### SYMPTOM:

- Intake door does not change.
- Intake door motor does not operate normally.

### INSPECTION FLOW

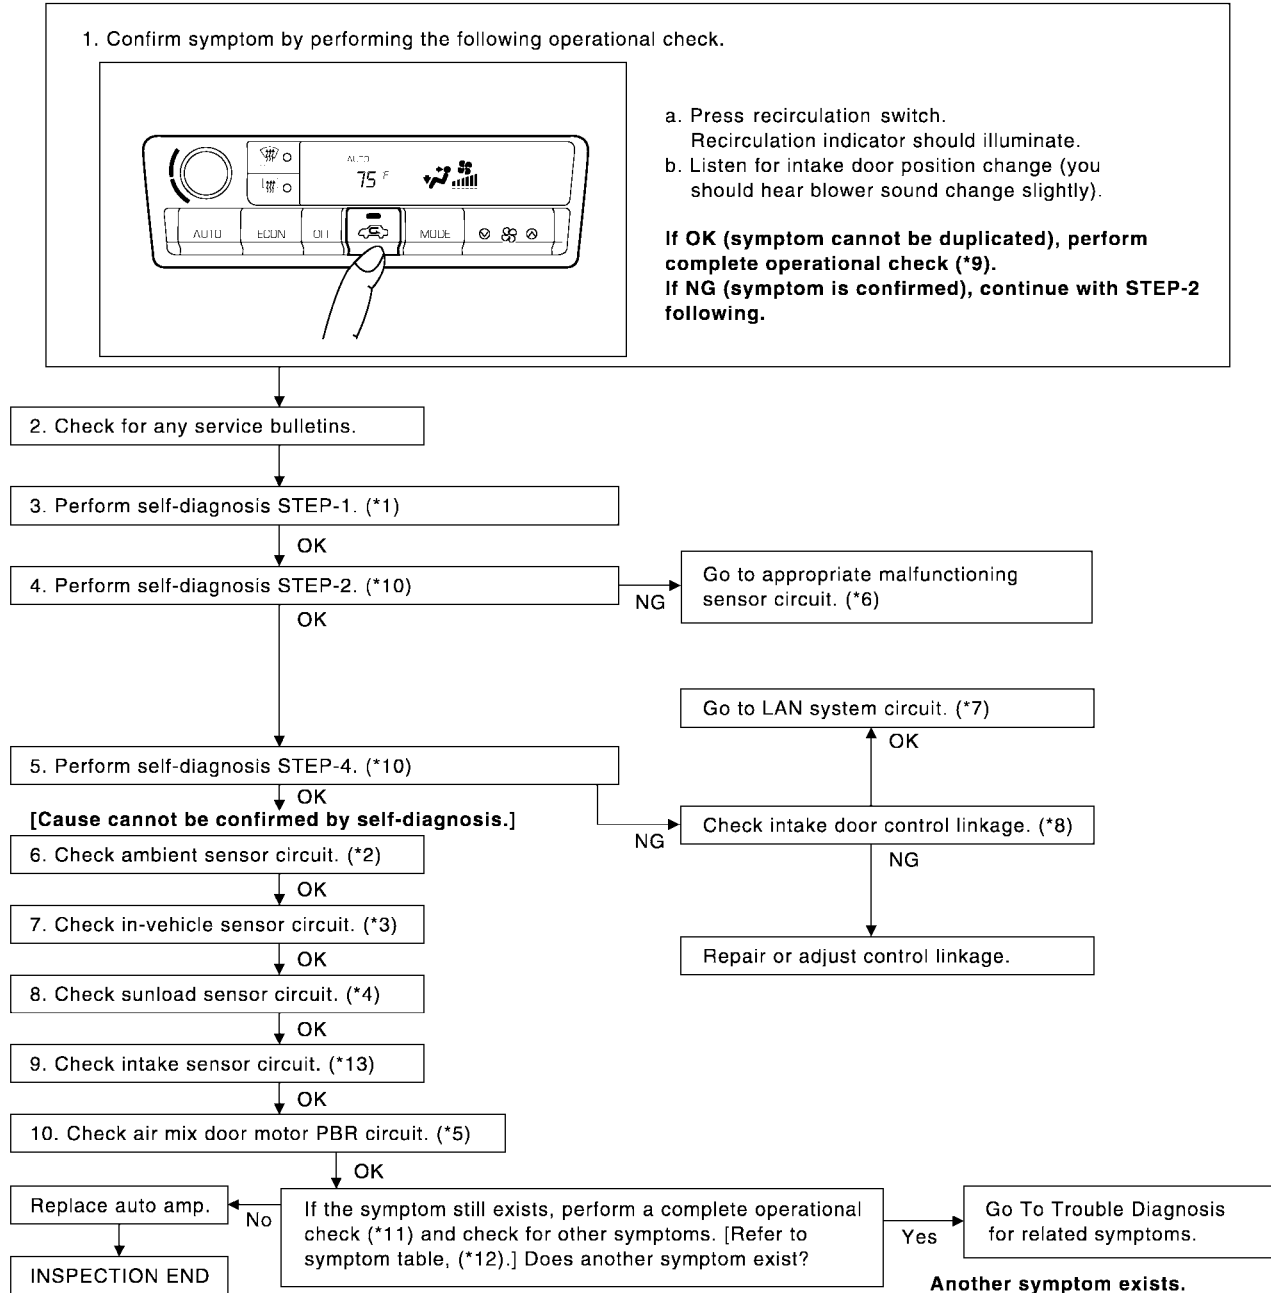

\*1 Self-diagnosis [ATC-89](#) , see No.1

\*2 Ambient sensor [ATC-91](#)

\*3 In-vehicle sensor [ATC-93](#)

\*6 Self-diagnosis [ATC-89](#) , see No.14.

\*7 LAN system circuit -[ATC-55](#)

\*8 Intake door motor Diagnostic Procedure [ATC-66](#)

\*1 Operational check [ATC-49](#)  
1

\*1 Symptom table [ATC-31](#)  
2

\*1 Intake sensor circuit [ATC-99](#)  
3

WJIA0046E



# TROUBLE DIAGNOSIS

- \*4 Sunload sensor [ATC-96](#)
- \*5 Air mix door motor circuit [ATC-61](#)
- \*9 Operational check [ATC-49](#)
- \*1 Self-diagnosis [ATC-41](#) , see No.5  
0 or 7

## SYSTEM DESCRIPTION


### Component Parts

Intake door control system components are:


- Auto amp.
- Intake door motor
- A/C LAN system (PBR built-in mode motor and air mix door motor)
- In-vehicle sensor
- Ambient sensor
- Sunload sensor
- Intake sensor

### System Operation

The intake door control determines intake door position based on the ambient temperature, the intake air temperature and the in-vehicle temperature. When the ECON, DEFROST, or OFF switches are pushed, the auto amplifier sets the intake door at the Fresh position.

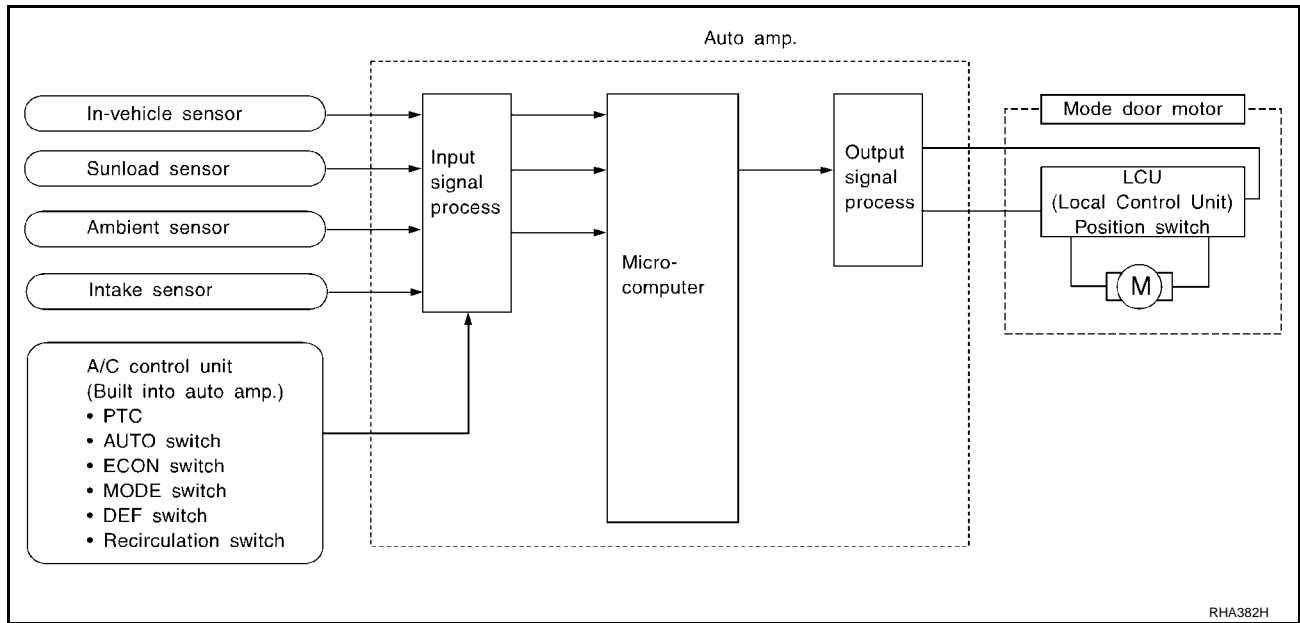

### Intake Door Control Specification

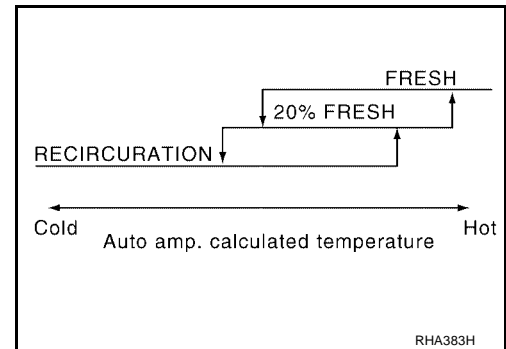


# TROUBLE DIAGNOSIS

## COMPONENT DESCRIPTION

### Intake door motor

The intake door motor is attached to the intake unit. It rotates so that air is drawn from inlets set by the auto amplifier. Motor rotation is conveyed to a lever which activates the intake door.

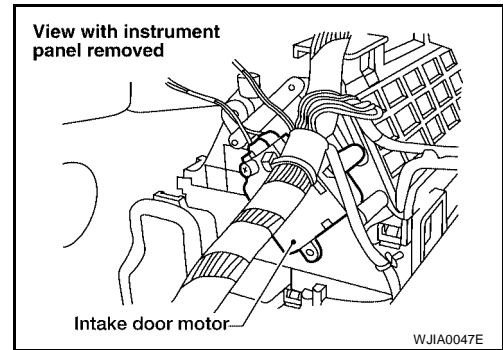


## DIAGNOSTIC PROCEDURE

SYMPTOM: Intake door motor does not operate normally.

Perform diagnostic procedure for LAN system circuit. Refer to [ATC-55, "LAN System Circuit"](#).

### INTAKE DOOR

1. Install intake door motor on intake unit and connect it to main harness.
2. Set up code No. <sup>41</sup> in Self-diagnosis STEP 4. Refer to [ATC-89, "Self-diagnosis"](#).
3. Make sure intake door operates properly when changing from code No. <sup>41</sup> to <sup>46</sup> by pushing DEF switch.

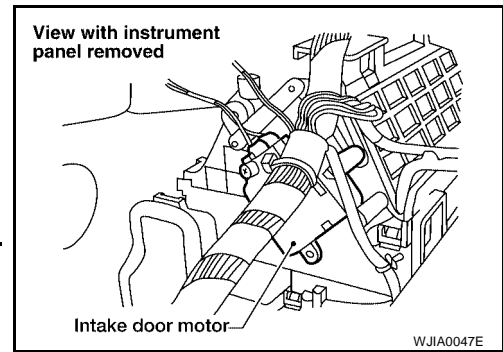

41	42	43	44	45	46
REC		20% FRE		FRE	

# TROUBLE DIAGNOSIS


EJS000XP

## Blower Motor Circuit

SYMPTOM:

- Blower motor operation is malfunctioning.

### INSPECTION FLOW

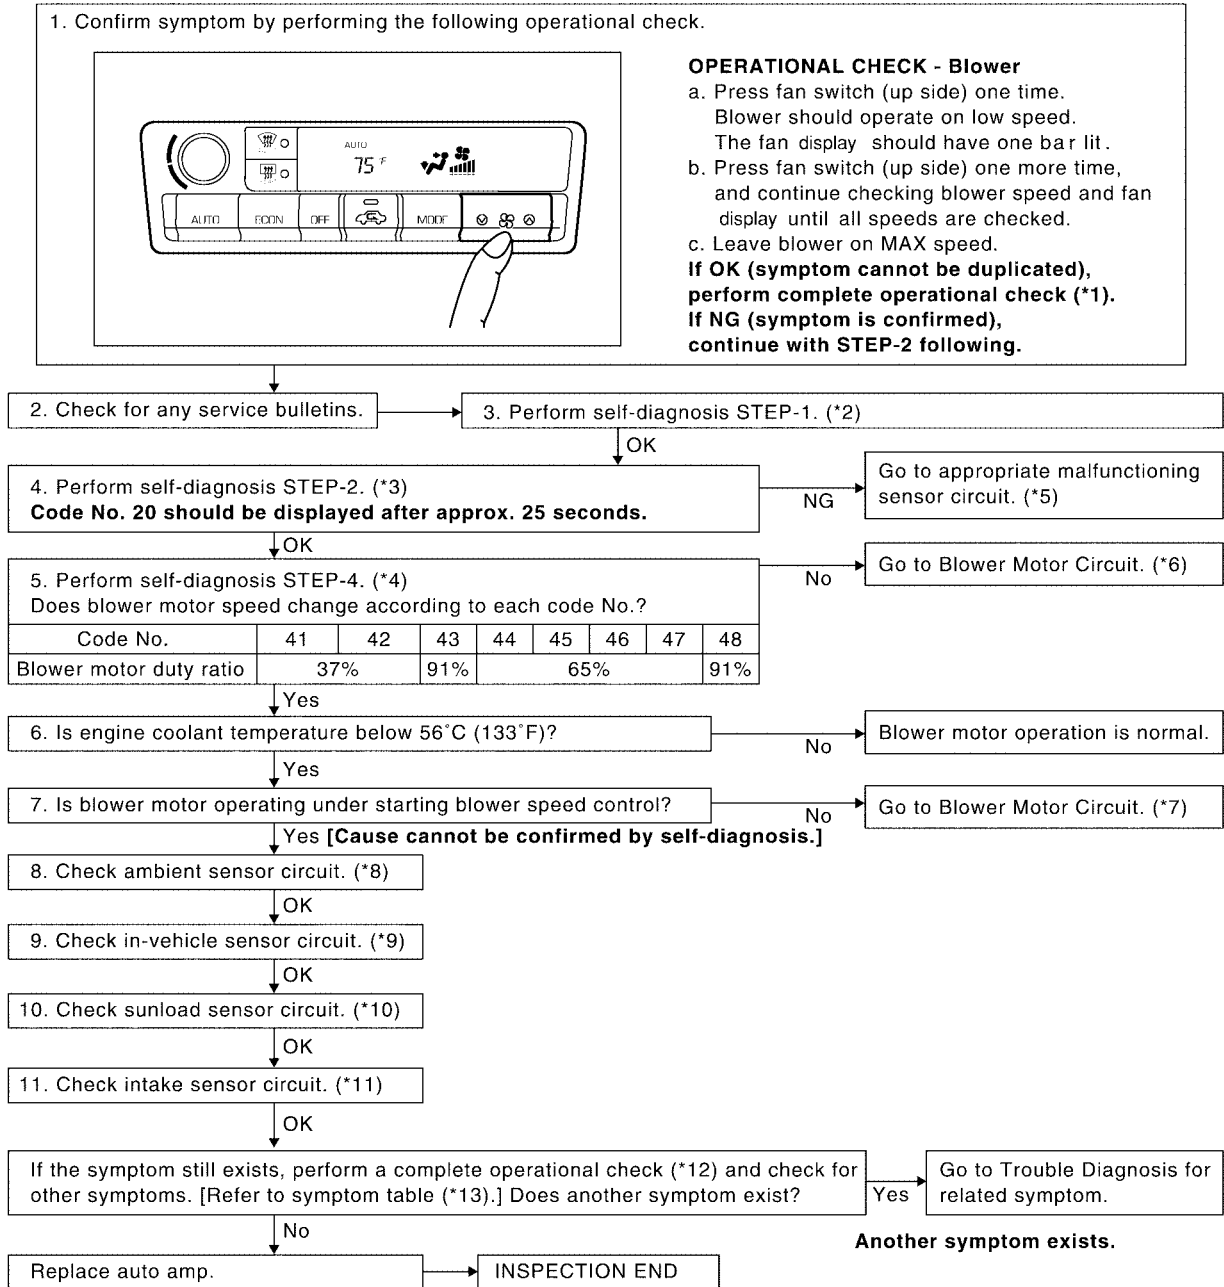

\*1 Operational Check [ATC-49](#)

\*2 Self-diagnosis [ATC-89](#) , see No.1

\*3 Self-diagnosis [-ATC-89](#) , see No.5

\*4 Self-diagnosis [ATC-89](#) , see No.7

\*5 Self-diagnosis [ATC-89](#) , see No.14

\*6 Blower motor circuit [ATC-67](#)

\*7 Blower motor circuit [ATC-67](#)

\*8 Ambient sensor circuit [ATC-91](#)

\*9 In-vehicle sensor circuit [ATC-93](#)

\*1 Sunload sensor circuit [ATC-96](#)

\*1 Intake sensor circuit [ATC-99](#)

1

\*1 Thermal transmitter (PG Power-\*\*\*)

2

\*1 Operational Check [ATC-49](#)

3

\*1 Symptom table [ATC-31](#)

4

WJIA0048E

# TROUBLE DIAGNOSIS


## SYSTEM DESCRIPTION

### Component Parts

Fan speed control system components are:

- Auto amp.
- A/C LAN system (PBR built-in mode door motor, air mix door motor and intake door motor)
- In-vehicle sensor
- Ambient sensor
- Sunload sensor
- Intake sensor

### System Operation

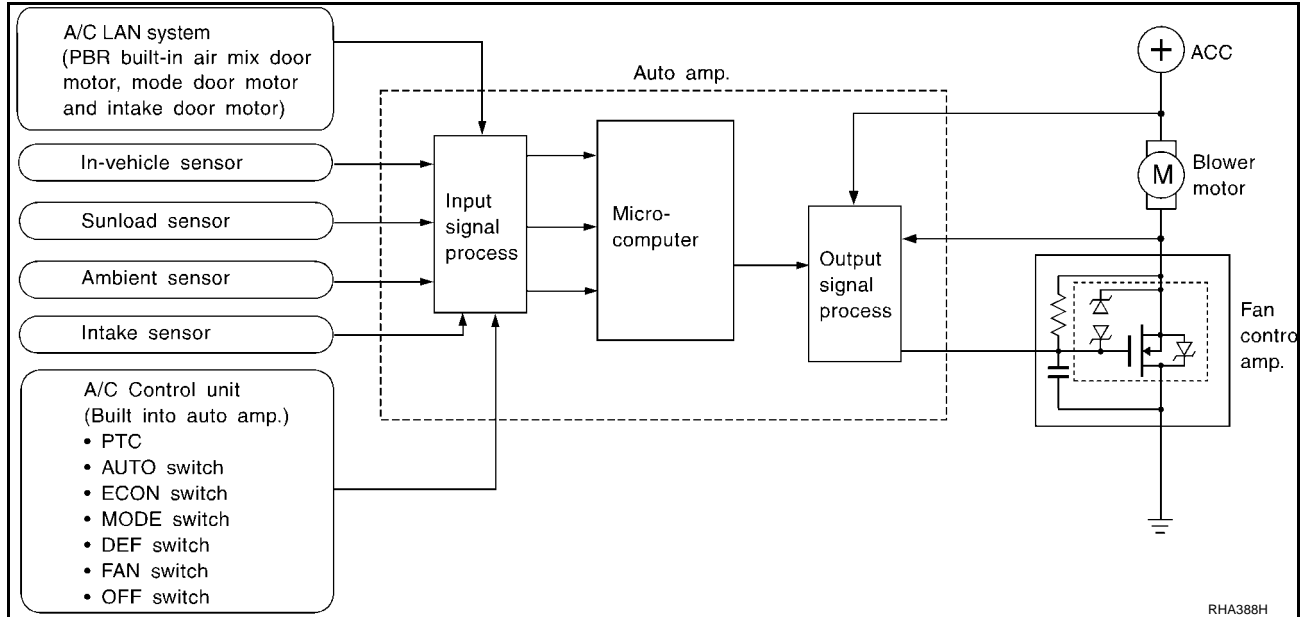

### Automatic Mode

In the automatic mode, the blower motor speed is calculated by the automatic amplifier based on inputs from the PBR, in-vehicle sensor, sunload sensor, intake sensor and ambient sensor.

When the air flow is increased, the duty ratio of the blower fan motor's drive signal is changed at 8% sec. to prevent a sudden increase in air flow.

In addition to manual air flow control and the normal automatic air flow control, starting air flow control, low water temperature starting control and high passenger compartment temperature starting control are available.

### Starting Fan Speed Control

Start Up From COLD SOAK Condition (Automatic mode)

In a cold start up condition where the engine coolant temperature is below 56°C (133°F), the blower will not operate for a short period of time (up to 150 seconds). The exact start delay time varies depending on the ambient and engine coolant temperature.

In the most extreme case (very low ambient) the blower starting delay will be 150 seconds as described above. After this delay, the blower will operate at low speed until the engine coolant temperature rises above 56°C (133°F), at which time the blower speed will increase to the objective speed.

Start Up From Normal or HOT SOAK Condition (Automatic mode)

The blower will begin operation momentarily after the A/C button is pushed. The blower speed will gradually rise to the objective speed over a time period of 3 seconds or less (actual time depends on the objective blower speed).

### Blower Speed Compensation


Sunload

When the in-vehicle temperature and the set temperature are very close, the blower will be operating at low speed. The low speed will vary depending on the sunload. During conditions of high sunload, the blower low

# TROUBLE DIAGNOSIS

speed is "normal" low speed (approx. 6V). During low or no sunload conditions, the low speed will drop to "low" low speed (approx. 5V).


## Fan Speed Control Specification

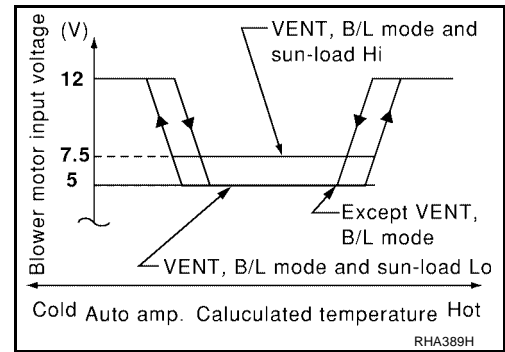

## COMPONENT DESCRIPTION


### Fan Control Amplifier

The fan control amplifier is located on the cooling unit. The fan control amp. receives a gate voltage from the auto amp. to smoothly maintain the blower fan motor voltage in the 5 to the 12V range (approx.).

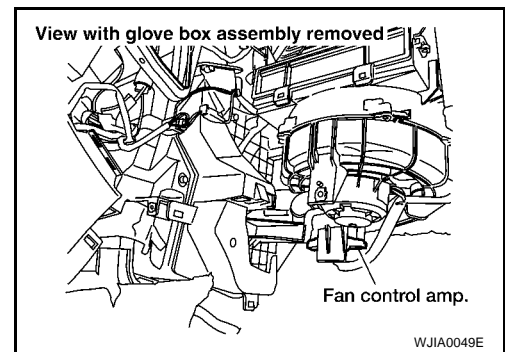

## DIAGNOSTIC PROCEDURE

SYMPTOM: Blower motor operation is malfunctioning under Starting Fan Speed Control.

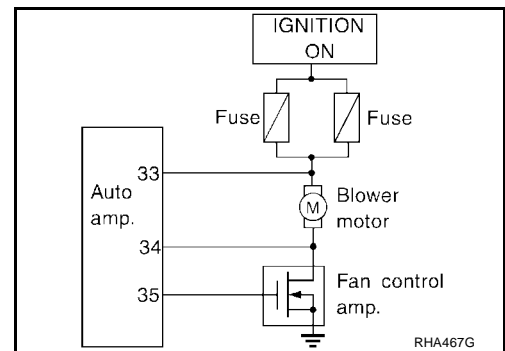


## 1. CHECK POWER SUPPLY FOR FAN CONTROL AMP.

Terminals			Voltage (V) (Approx.)
(+)		(-)	
Connector	Wire color		
M64-2	L/W	Body ground	12V

### Yes or No

- Yes >> GO TO 2.
- No >> GO TO 8.

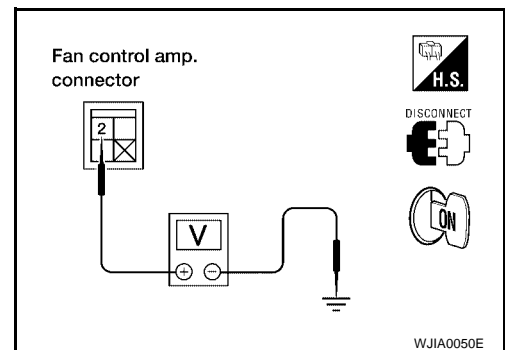


# TROUBLE DIAGNOSIS

## 2. CHECK BODY GROUND CIRCUIT FOR FAN CONTROL AMP.

Terminals		Body ground	Continuity
Connector	Wire color		
M64-1	B		Yes

**Yes or No**

- Yes >> Reconnect fan control amp. harness connector and GO TO 3.
- No >> Repair harness or connector.

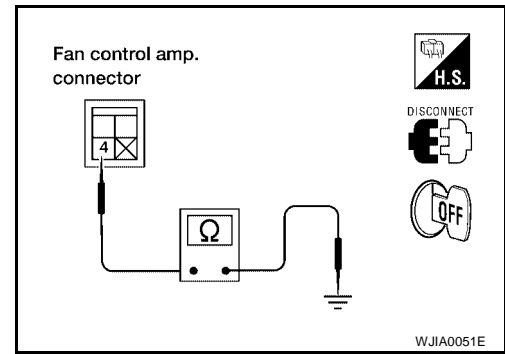


## 3. CHECK VOLTAGE FOR FAN CONTROL AMP.

Set up Self-diagnosis STEP 4.

Code No.	Terminal No.			Voltage (V) (Approx.)
	(+)		(-)	
	Connector	Wire color		
41-46	M64-2	L/Y	Body ground	12V

**OK or NG**

- OK >> GO TO 4.
- NG >> 1. If the voltage is less than 2.5V, replace fan control amp.
- 2. If the voltage is more than 3.0V, GO TO 4.
- 3. Go to "FUNCTION CONFIRMATION PROCEDURE", [ATC-41, "Self-diagnosis"](#) and perform self-diagnosis STEP 4.  
Confirm that blower motor operation is normal.

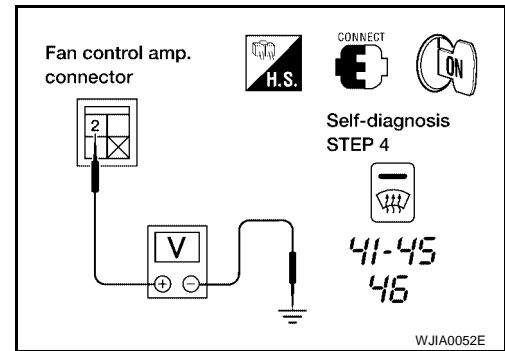

## 4. CHECK FAN CONTROL AMP.

Refer to [ATC-69, "Fan Control Amplifier"](#)

**OK or NG**

- OK >> GO TO 5.
- NG >> 1. Replace fan control amp.
- 2. Go to "FUNCTION CONFIRMATION PROCEDURE", ["ATC-41, "Self-diagnosis"](#) and perform self-diagnosis STEP 4.  
Confirm that blower motor operation is normal.

# TROUBLE DIAGNOSIS

## 5. CHECK FAN CONTROL AMP. CIRCUIT BETWEEN FAN CONTROL AMP. AND AUTO AMP. (LCU)

1. Disconnect auto amp. (LCU) and fan control amp. harness connector.

Terminals				Continuity
Connector	Wire color	Connector	Wire color	Yes
M64-1	L/Y	M50-35	L/Y	


**Continuity should exist.**

If OK, check harness for short.

**OK or NG**

OK >> GO TO 6.

NG >> Repair harness or connector.

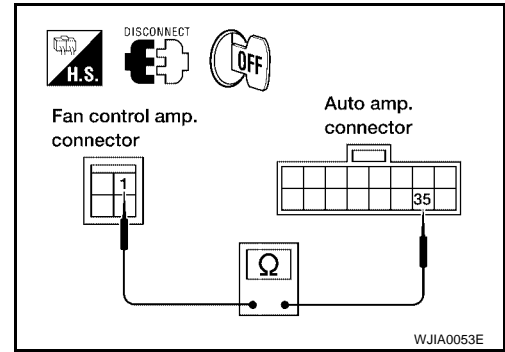

## 6. CHECK FAN FEEDBACK CIRCUIT

Reconnect auto amp. (LCU) harness connector.


Terminal		Voltage (V) (Approx.)
(+)	(-)	
Connector	Wire color	Body ground
M50-34	L/W	
		12V

**Yes or No**

Yes >> GO TO 7.

No >> ● Check power supply circuit and 15A fuses [Nos. 10 and 11, located in the fuse block (J/B)].

- Refer to [PG-5, "Wiring Diagram — POWER —"](#).
  - If OK, check for open circuit in wiring harness. Repair or replace as necessary.
  - If NG, replace fuse and check wiring harness for short circuit. Repair or replace as necessary.

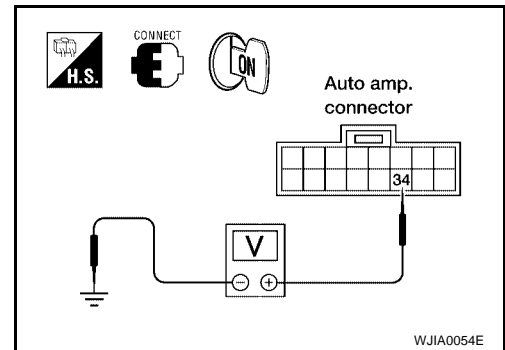

## 7. CHECK POWER SUPPLY FOR AUTO AMP.

Terminal		Voltage (V) (Approx.)
(+)	(-)	
Connector	Wire color	Body ground
M50-26	Y/R	
		12V


**Yes or No**

Yes >> 1. Replace auto amp.

2. Go to "FUNCTION CONFIRMATION PROCEDURE", "Self-diagnosis", [ATC-41](#) and perform self-diagnosis STEP-4.

Confirm that blower motor operation is normal.

No >> GO TO 10.

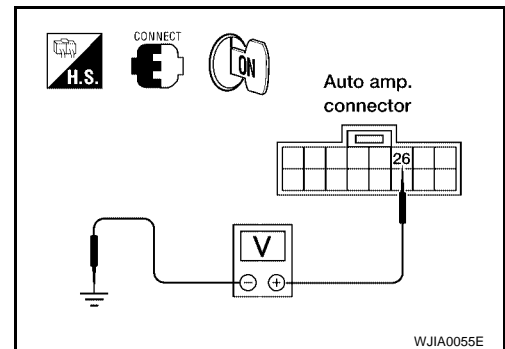

# TROUBLE DIAGNOSIS

## 8. CHECK POWER SUPPLY FOR BLOWER MOTOR

Disconnect blower motor harness connector.


Terminal		Voltage (V) (Approx.)
(+)	(-)	
Connector	Wire color	12V
M62-1	W/L	
		Body ground

Yes or No

Yes >> GO TO 9.

No >> Check power supply circuit and 15A fuses [Nos. 10 and 11, located in the fuse block (J/B)].

- Check blower motor relay.
- If OK, check for open circuit in wiring harness.  
Repair or replace as necessary.
- If NG, replace fuse and check wiring harness for short circuit.  
Repair or replace as necessary.

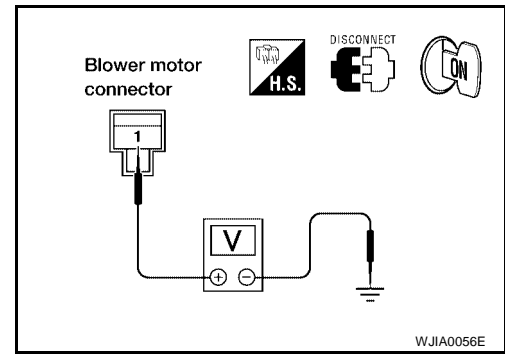

## 9. CHECK CIRCUIT CONTINUITY BETWEEN BLOWER MOTOR AND FAN CONTROL AMP.

Disconnect blower motor connector and auto amp. (LCU) connector.

Terminals				Continuity
Connector	Wire color	Connector	Wire color	
M62-2	L/W	M64-2	L/W	Yes


OK or NG

OK >> Check blower motor. Refer to [ATC-73, "Blower Motor"](#).

1. If NG, replace blower motor.
2. Go to "FUNCTION CONFIRMATION PROCEDURE", "Self-diagnosis", [ATC-41](#) and perform self-diagnosis STEP-4.

Confirm that blower motor operation is normal.

NG >> Repair harness or connector.

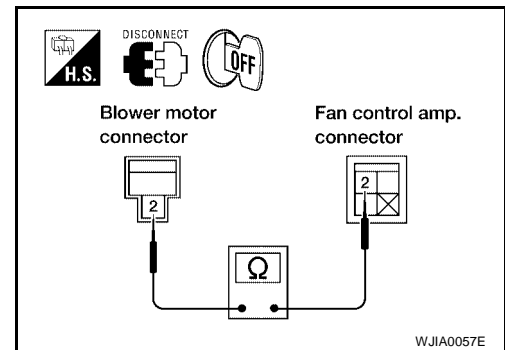

## 10. CHECK BLOWER MOTOR CIRCUIT BETWEEN BLOWER MOTOR AND AUTO AMP. (LCU)

Terminals				Continuity
Connector	Wire color	Connector	Wire color	
M62-2	L/W	M50-34	L/W	Yes


**Continuity should exist.**

If OK, check harness for short.

OK or NG

OK >> INSPECTION END

NG >> Repair harness or connector.

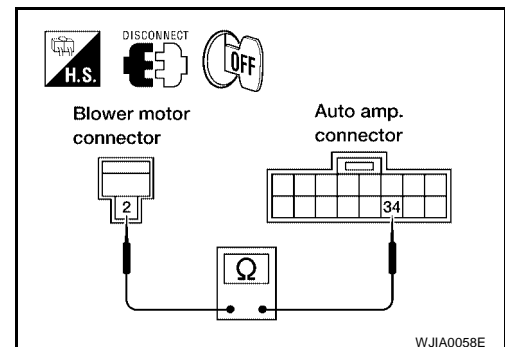




# TROUBLE DIAGNOSIS

## COMPONENT INSPECTION

### Blower Motor

Confirm smooth rotation of the blower motor.


- Ensure that there are no foreign particles inside the intake unit.

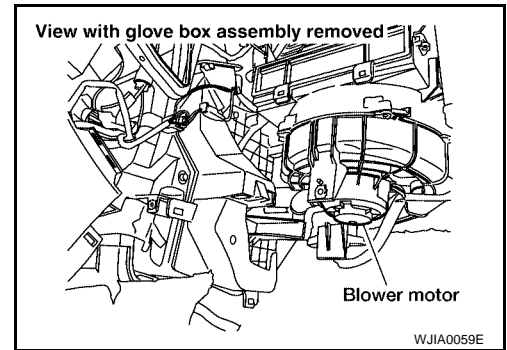

### Fan Control Amp.

Check continuity between terminals.

Terminal Nos.	Continuity
2 - 4	Yes

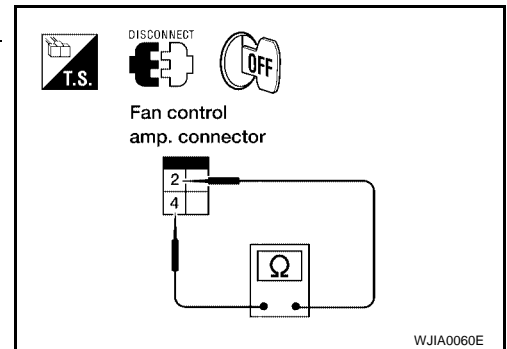

A  
B  
C  
D  
E  
F  
G  
H  
I  
K  
L  
M

ATC


# TROUBLE DIAGNOSIS

EJS000XQ

## Magnet Clutch Circuit

SYMPTOM: Magnet clutch does not engage.

### INSPECTION FLOW

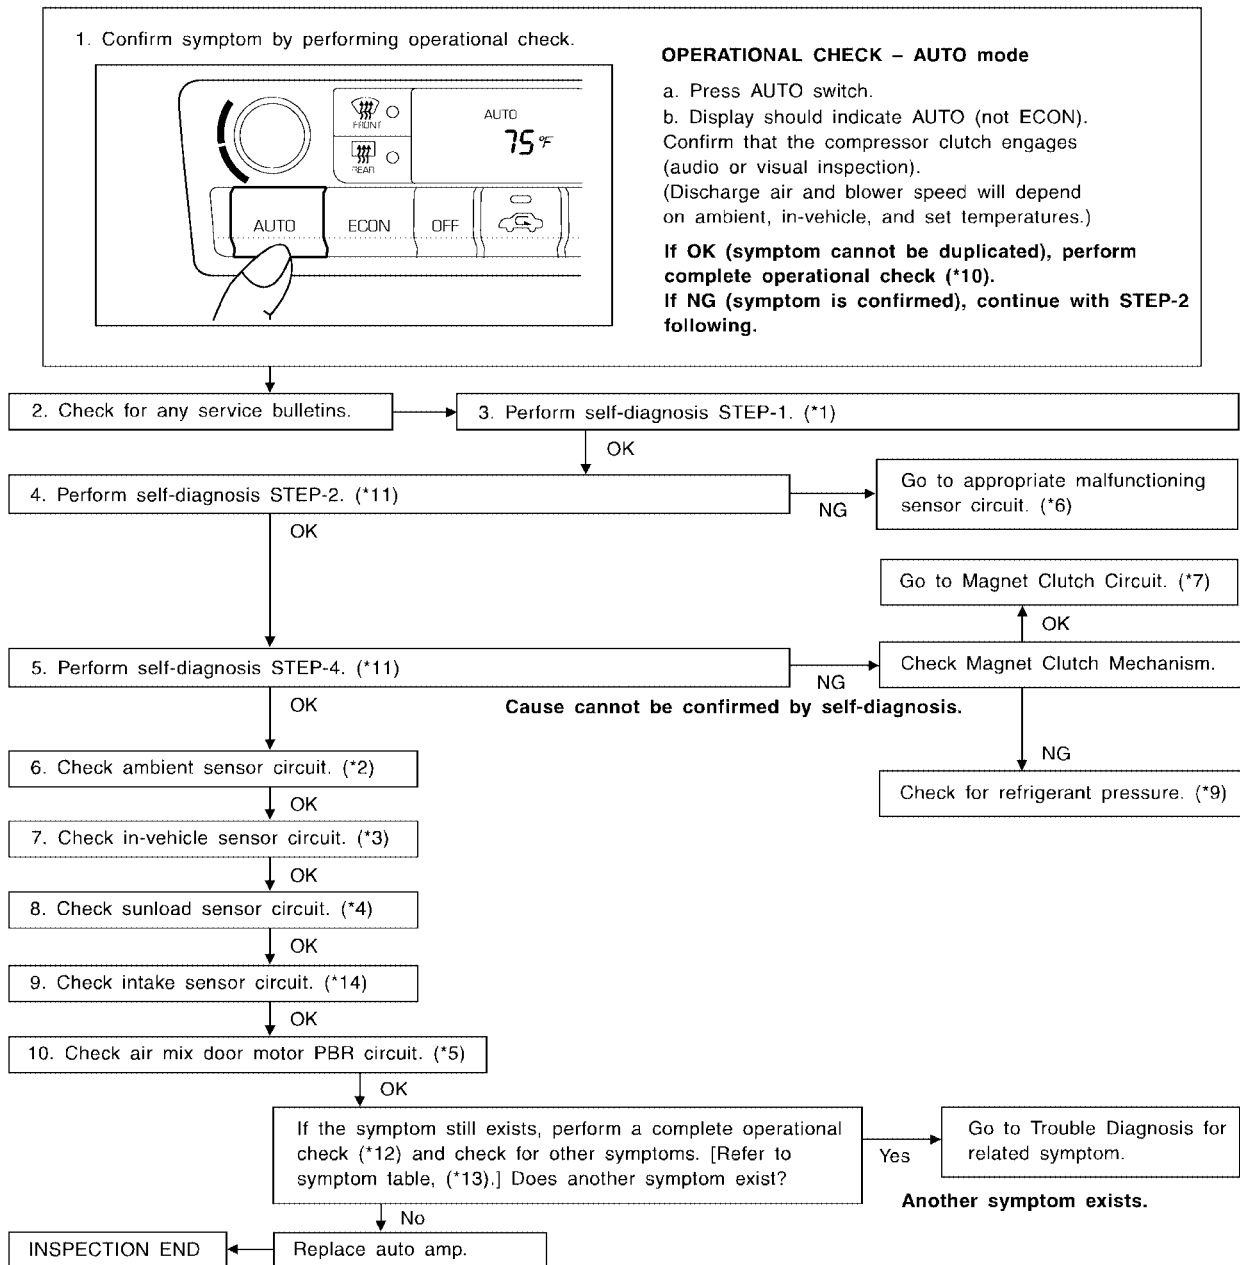

\*1 Self-diagnosis [ATC-41](#) , see No.1.

\*2 Ambient sensor circuit [ATC-91](#)

\*3 In-vehicle sensor circuit [ATC-93](#)

\*4 Sunload sensor circuit [ATC-96](#)

\*5 Air mix door motor circuit [ATC-61](#)

\*6 Self-diagnosis [ATC-89](#) , see No. 14.

\*7 Magnet clutch circuit [ATC-74](#)

\*8 Trouble diagnoses for abnormal pressure [ATC-83](#)

\*9 Operational check [ATC-49](#)

\*1 Self-diagnosis [ATC-41](#) , see No.7.

0

\*1 Operational check [ATC-49](#)

1

\*1 Symptom table [ATC-31](#)

2

\*1 Intake sensor circuit [ATC-99](#)

3

WJIA0061E

# TROUBLE DIAGNOSIS


## SYSTEM DESCRIPTION

Auto amplifier controls compressor operation by ambient temperature and signal from ECM.

### Low Temperature Protection Control


Auto amp. will turn the compressor ON or OFF as determined by a signal detected by ambient sensor.

When ambient temperatures are greater than  $-2^{\circ}\text{C}$  ( $28^{\circ}\text{F}$ ), the compressor turns ON. The compressor turns OFF when ambient temperatures are less than  $-5^{\circ}\text{C}$  ( $23^{\circ}\text{F}$ ).

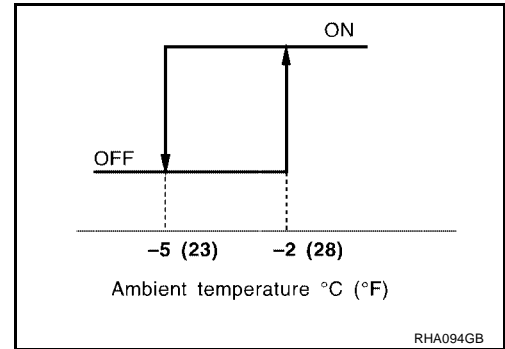

## DIAGNOSTIC PROCEDURE

SYMPTOM: Magnet clutch does not engage when A/C switch is ON.

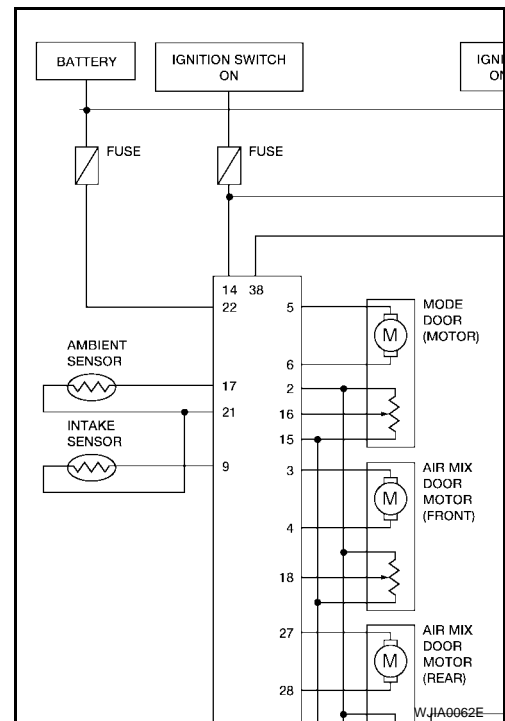

### 1. CHECK CIRCUIT CONTINUITY BETWEEN A/C RELAY IN IPDM E/R AND COMPRESSOR


Terminals				Continuity
Connector	Wire color	Connector	Wire color	
F3-1	Y/B	E124-28	Y/B	Yes

If OK, check harness for short.

OK or NG

OK >> GO TO 2.

NG >> Repair harness or connector.

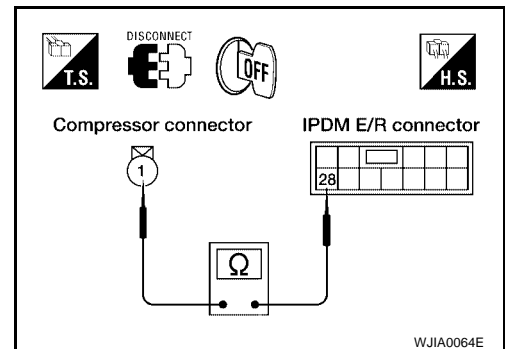

# TROUBLE DIAGNOSIS

## 2. CHECK POWER SUPPLY FOR COMPRESSOR

Disconnect compressor harness connector.

Terminal		Voltage (V) (Approx.)
(+)	(-)	
Connector	Wire color	Body ground 12V
F3-1	Y/B	


**OK or NG**

OK >> Check magnet clutch coil.

1. If NG, replace magnet clutch. Refer to [ATC-123](#).  
["Removal and Installation for Compressor Clutch"](#) .

2. If OK, check compressor mounting points for looseness or corrosion and repair as necessary.

NG >> GO TO 3.

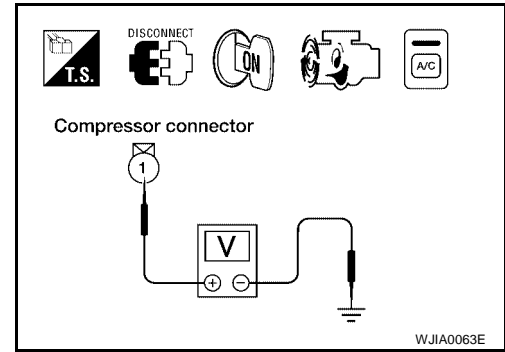

## 3. CHECK A/C RELAY IN IPDM E/R


Terminal		Voltage (V) (Approx.)
(+)	(-)	
Connector	Wire color	Body ground 12V
E124-28	Y/B	

**OK or NG**

OK >> GO TO 4.

NG >> ● Disconnect BCM harness connector M18.

● GO TO 8.

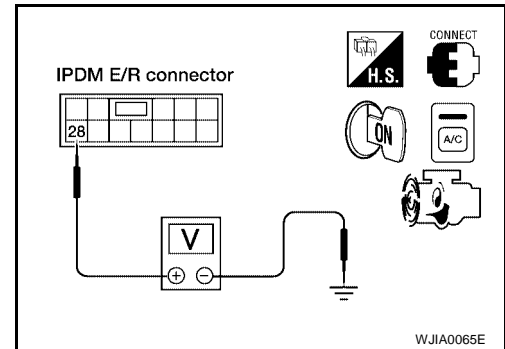


## 4. CHECK VOLTAGE FOR BCM

Terminal		Voltage (V) (Approx.)
(+)	(-)	
Connector	Wire color	Body ground 12V
M18-58	L/W	

**OK or NG**

OK >> GO TO 5.

NG >> Check BCM.

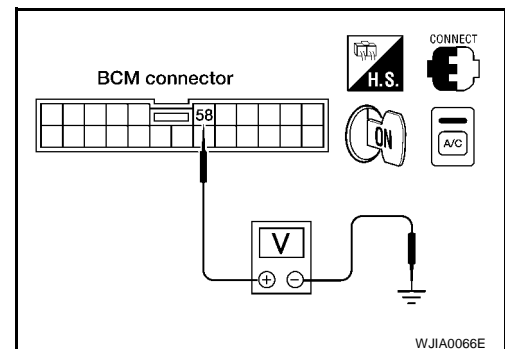


# TROUBLE DIAGNOSIS

## 5. CHECK REFRIGERANT PRESSURE SENSOR INPUT SIGNAL

Terminal		Voltage (V) (Approx.)
(+)	(-)	
Connector	Wire color	Body ground 12V
F54-81	W	

### OK or NG

- OK >> GO TO 6.  
 NG >> 1. Repair harness or connector.  
 2. Go to [ATC-42, "FUNCTION CONFIRMATION PROCEDURE"](#) and perform self-diagnosis STEP-4. Confirm that magnet clutch operation is normal.

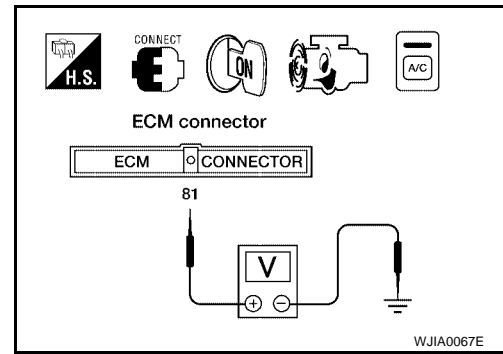

## 6. CHECK REFRIGERANT PRESSURE SENSOR

Refer to [ATC-79, "Refrigerant Pressure Sensor"](#).

### OK or NG


- OK >> GO TO 7.  
 NG >> Replace refrigerant pressure sensor.

## 7. CHECK VOLTAGE FOR THERMO CONTROL AMP.

Terminal		Voltage (V) (Approx.)
(+)	(-)	
Connector	Wire color	Body ground 12V
M52-1	G	

### OK or NG

- OK >> GO TO 8.  
 NG >> ● Check power supply circuit and 15A fuse [No.12 located at fuse block (J/B)]. Refer to [PG-5, "Wiring Diagram — POWER —"](#).
- If OK, check for open circuit in wiring harness. Repair or replace as necessary.
  - If NG, replace fuse and check wiring harness for short circuit. Repair or replace as necessary.

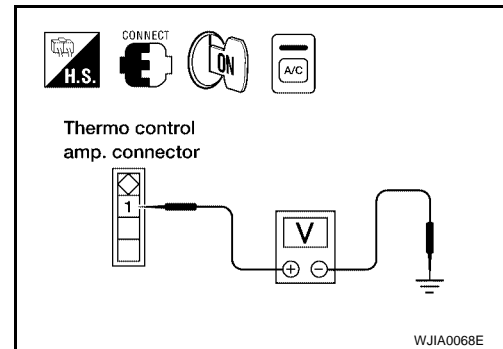


## 8. CHECK POWER SUPPLY FOR THERMO CONTROL AMP.

Terminal		Voltage (V) (Approx.)
(+)	(-)	
Connector	Wire color	Body ground 12V
M52-2	L/W	

### OK or NG

- OK >> GO TO 9.  
 NG >> Repair or replace thermo control amp.

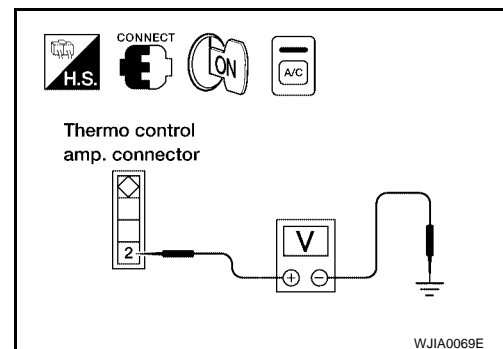


# TROUBLE DIAGNOSIS

## 9. CHECK THERMO CONTROL AMP. OPERATION

Terminals		Continuity
(+)	(-)	
Connector	Wire color	Yes
M52-3	G/Y	
		Body ground

OK or NG

- OK >> GO TO 10.
- NG >> Replace thermo control amp.

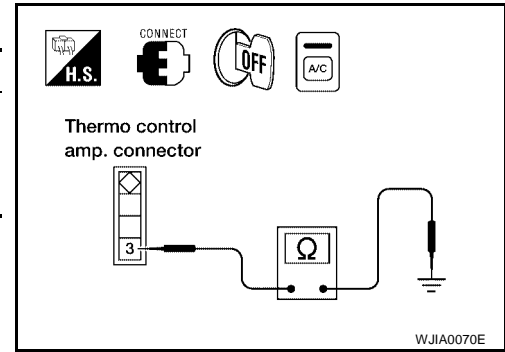

## 10. CHECK THERMO CONTROL AMP.

Refer to [ATC-79, "Thermo Control Amp."](#)

OK or NG

- OK >> GO TO 11.
- NG >> Repair harness or connector.


## 11. CHECK CIRCUIT CONTINUITY BETWEEN THERMO CONTROL AMP. AND AUTO AMP.

Disconnect auto amp. connector.

Terminals				Continuity
Connector	Wire color	Connector	Wire color	
M52-3	G/Y	M50-22	G/Y	Yes

OK or NG

- OK >> GO TO 12.
- NG >> Repair harness or connector.

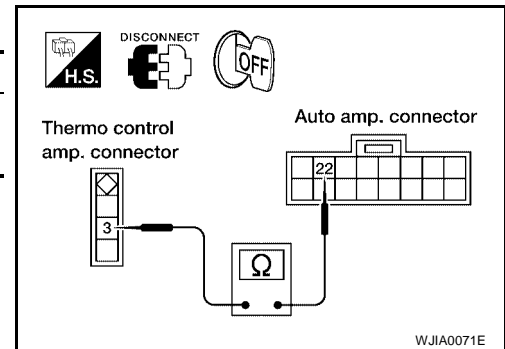


## 12. CHECK COMPRESSOR ON SIGNAL

When compressor is ON or OFF, check voltage between auto amp. and ground.

Terminal		Voltage (V) (Approx.)
(+)	(-)	
Connector	Wire color	Compressor ON: 0V Compressor OFF: 5V
M50-22	G/Y	
		Body ground

OK or NG

- OK >> GO TO 13.
- NG >>
  - When compressor is ON and voltage is not approx. 0V, replace auto amp.
  - When compressor is OFF and voltage is not approx. 5V, BCM is malfunctioning.

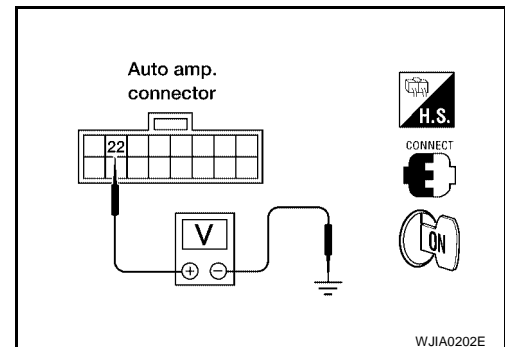

## 13. CHECK CAN COMMUNICATION CIRCUITS

Check CAN communication circuits between BCM to ECM and between ECM to IPDM E/R. Refer to [LAN-3, "CAN COMMUNICATION"](#).

OK or NG

- OK >> ECM malfunctioning.
- NG >> Repair or replace component based on the result of diagnosis.



# TROUBLE DIAGNOSIS

## COMPONENT INSPECTION

### Refrigerant Pressure Sensor

The refrigerant pressure sensor is attached to the condenser.


- Refer to [EC-1266, "REFRIGERANT PRESSURE SENSOR"](#).

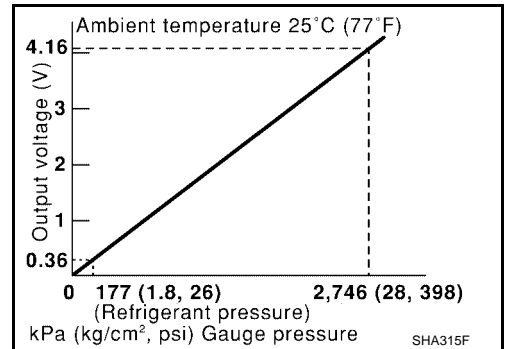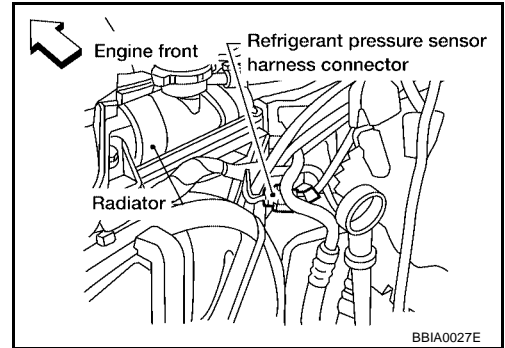

### Thermo Control Amp.

- Run engine and operate A/C system.
- Connect the voltmeter from harness side.
- Check the thermo control amp. operation as shown in the table.

Evaporator outlet air temperature °C (°F)	Thermo amp. operation	Voltage (V) (Approx.)
Decreasing to 2.5 - 3.5 (37 - 38)	Turn OFF	12V
Increasing to 4.0 - 5.0 (39 - 41)	Turn ON	0V

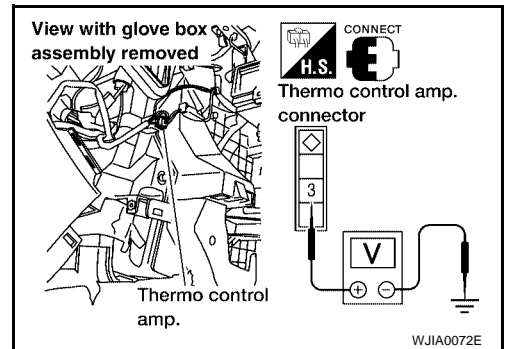

A  
B  
C  
D  
E  
F  
G  
H  
I  
K  
L  
M

ATC

# TROUBLE DIAGNOSIS


EJS000XR

## Insufficient Cooling

SYMPTOM: Insufficient cooling

### INSPECTION FLOW


1. Confirm symptom by performing the following operational check.

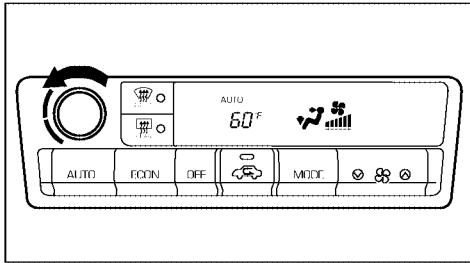

#### OPERATIONAL CHECK – Temperature decrease

- Turn the temperature dial counterclockwise until 18°C (60°F) is displayed.
- Check for cold air at discharge air outlets.

If OK (symptom cannot be duplicated), perform complete operational check (\*10).  
If NG (symptom is confirmed), continue with STEP-2 following.

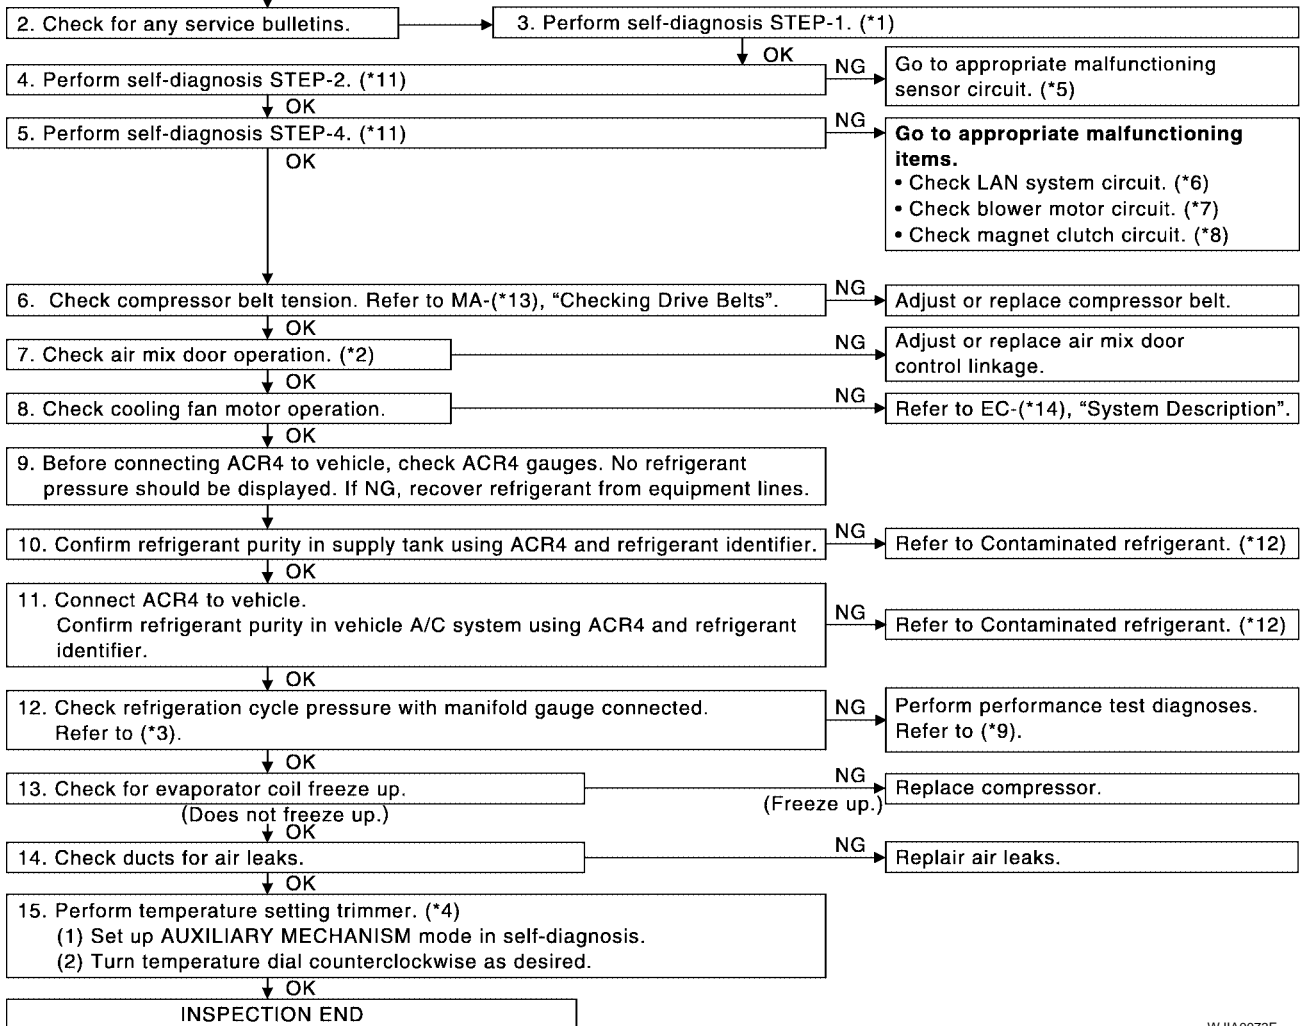

WJIA0073E

\*1 Self-diagnosis [ATC-41](#), see No.1.

\*6 LAN system circuit [ATC-55](#)

\*1 Operational check [ATC-49](#)  
0

\*2 Air mix door motor circuit [ATC-61](#)

\*7 Blower motor circuit [ATC-67](#)

\*1 Self-diagnosis [ATC-41](#), see No.5 or  
1 7.

\*3 Test reading [ATC-83](#)

\*8 Magnet clutch circuit [ATC-74](#)

\*1 Contaminated refrigerant [ATC-4](#)  
2

\*4 Self-diagnosis STEP6, Auxiliary mechanism [ATC-41](#)

\*9 Performance test diagnoses [ATC-82](#)

\*1 Checking drive belts  
3


\*5 Self-diagnosis [ATC-41](#), see No. 14.

\*1 Cooling fan motor operation  
4



# TROUBLE DIAGNOSIS

## PERFORMANCE TEST DIAGNOSES

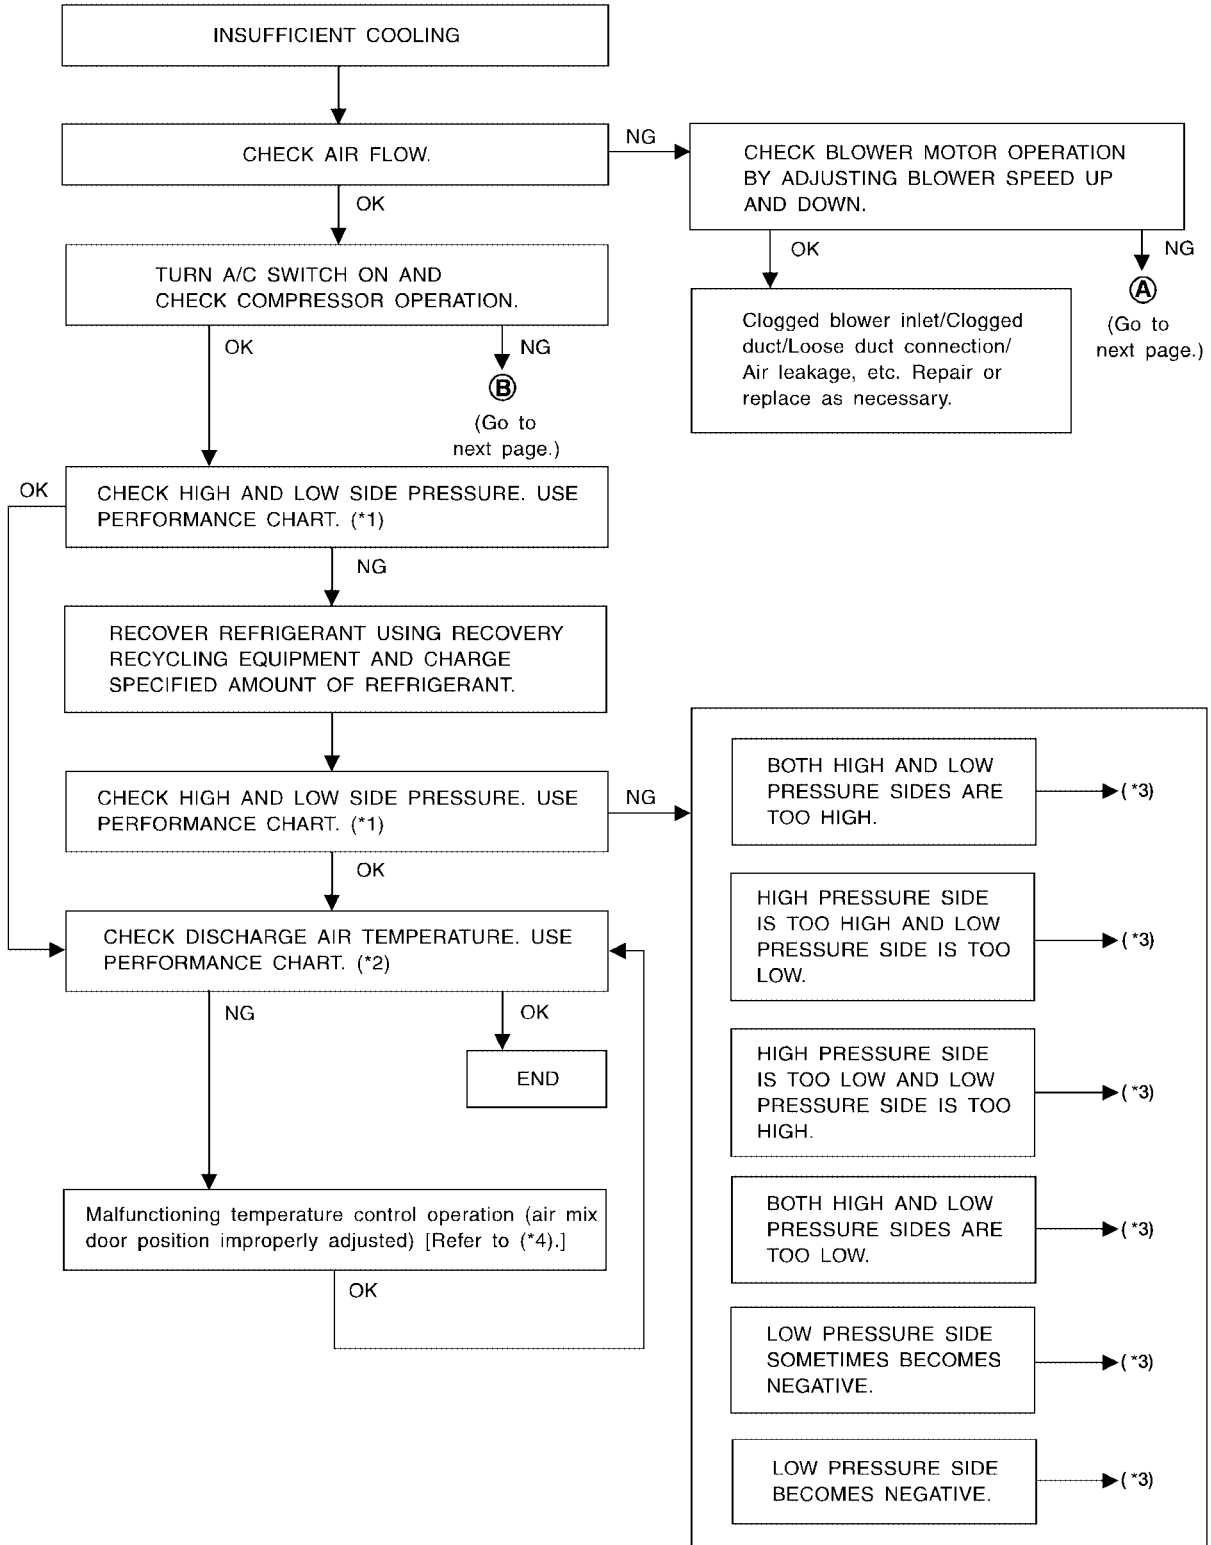

\*1 Performance chart [ATC-82](#)


\*3 Trouble diagnoses for abnormal pressure [ATC-83](#)

\*4 Air mix door motor circuit [ATC-61](#)

\*2 Performance chart [ATC-82](#)

WJIA0198E

# TROUBLE DIAGNOSIS

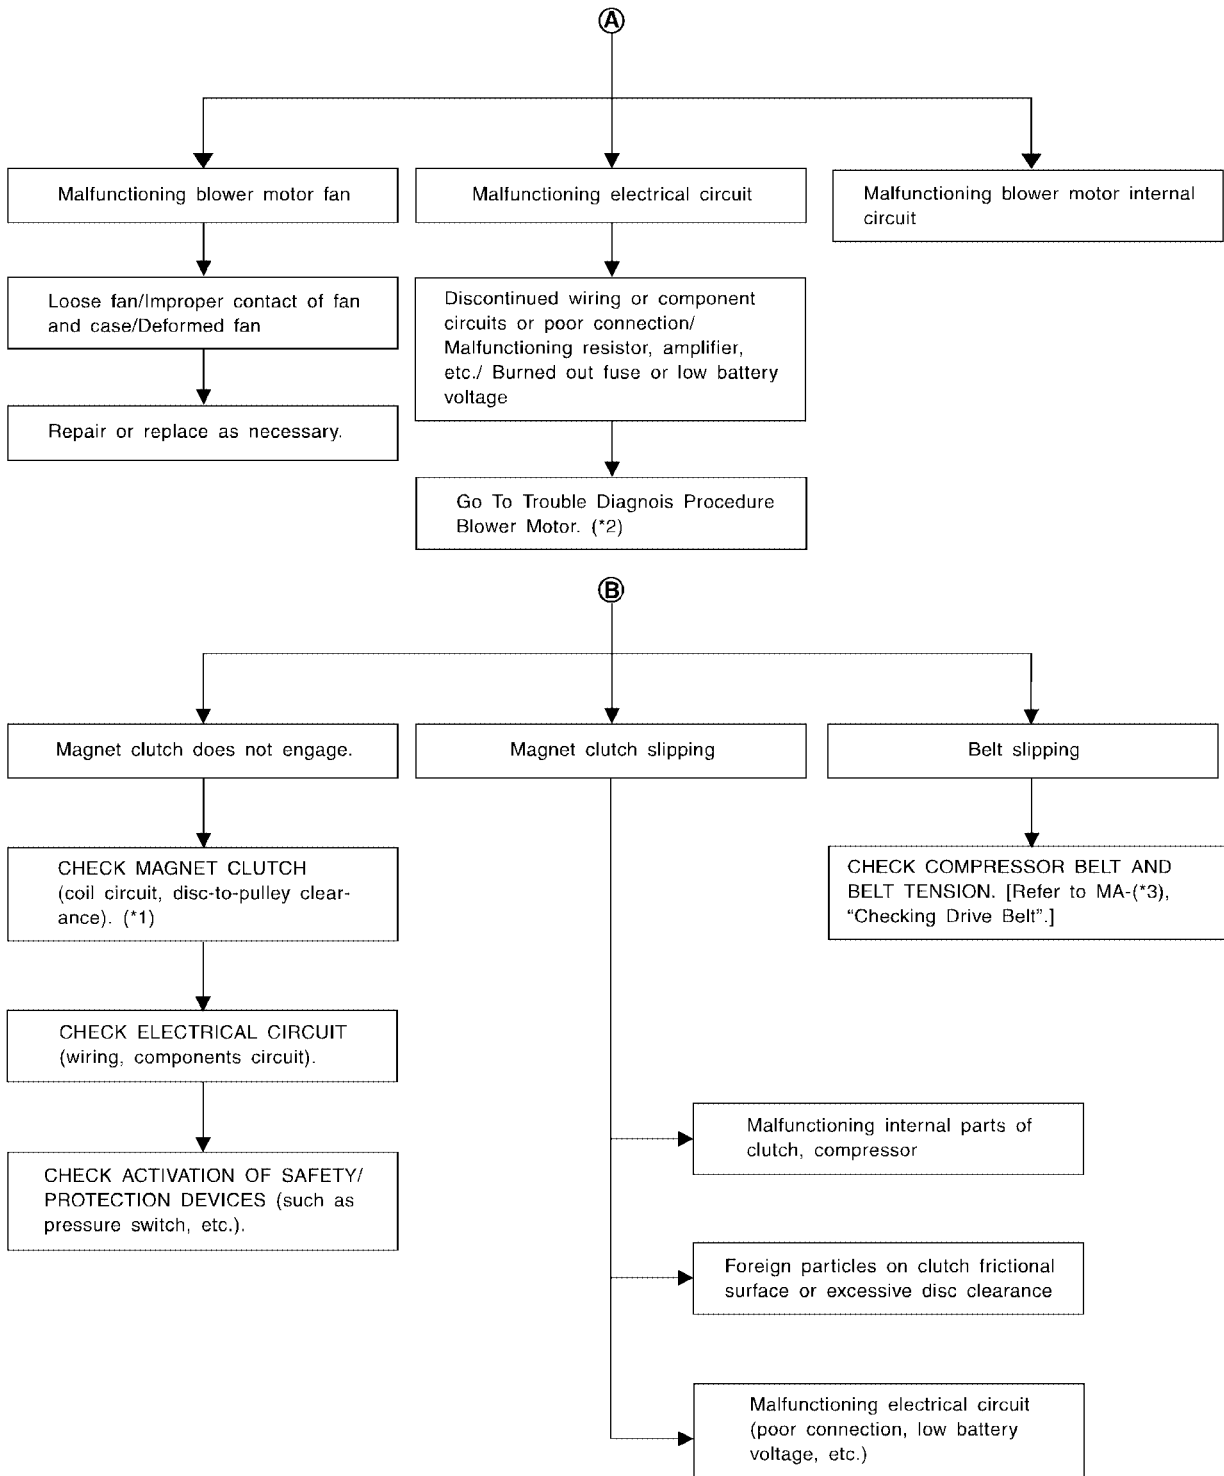

\*1 Magnet clutch installation [ATC-123](#)

\*2 Trouble diagnoses for blower motor circuit [ATC-67](#)

\*3 Belt tension




SHA329F

## PERFORMANCE CHART

### Test Condition

Testing must be performed as follows:

# TROUBLE DIAGNOSIS

Vehicle location	Indoors or in the shade (in a well-ventilated place)
Doors	Closed
Door windows	Open
Hood	Open
TEMP.	Max. COLD
Mode switch	 (Ventilation) set
Intake switch	 (Recirculation) set
 (blower) speed	Max. speed set
Engine speed	Idle speed

Operate the air conditioning system for 10 minutes before taking measurements.

## Test Reading

### Recirculating-to-discharge Air Temperature Table

Inside air (Recirculating air) at blower assembly inlet		Discharge air temperature at center ventilator °C (°F)
Relative humidity %	Air temperature °C (°F)	
50 - 60	25 (77)	10.0 - 12.3 (50 - 54)
	30 (86)	13.2 - 15.3 (56 - 60)
	35 (95)	17.2 - 21.0 (63 - 70)
60 - 70	25 (77)	12.3 - 14.9 (54 - 59)
	30 (86)	15.3 - 19.3 (60 - 67)
	35 (95)	21.0 - 24.4 (70 - 76)

### Ambient Air Temperature-to-operating Pressure Table


Ambient air		High-pressure (Discharge side) kPa (kg/cm <sup>2</sup> , psi)	Low-pressure (Suction side) kPa (kg/cm <sup>2</sup> , psi)
Relative humidity %	Air temperature °C (°F)		
50 - 70	30 (86)	1,220 - 1,500 (12.44 - 15.30, 176.9 - 217.5)	240 - 295 (2.45 - 3.01, 34.8 - 42.8)
	35 (95)	1,360 - 1,690 (13.87 - 17.24, 197.2 - 245.1)	275 - 335 (2.81 - 3.42, 39.9 - 48.6)
	40 (104)	1,500 - 1,830 (12.44 - 18.67, 176.9 - 265.4)	310 - 375 (3.16 - 3.83, 45.0 - 54.4)

## TROUBLE DIAGNOSES FOR ABNORMAL PRESSURE


Whenever system's high and/or low side pressure is abnormal, diagnose using a manifold gauge. The marker above the gauge scale in the following tables indicates the standard (normal) pressure range. Since the standard (normal) pressure, differs from vehicle to vehicle, refer to Ambient Air Temperature-to-operating Pressure Table above.

# TROUBLE DIAGNOSIS


## Both High and Low-pressure Sides are Too High

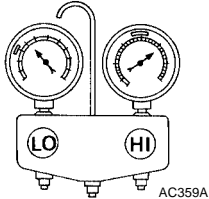Gauge indication	Refrigerant cycle	Probable cause	Corrective action
<p>Both high and low-pressure sides are too high.</p> 	Pressure is reduced soon after water is splashed on condenser.	Excessive refrigerant charge in refrigeration cycle	Reduce refrigerant until specified pressure is obtained.
	Air suction by cooling fan is insufficient.	Insufficient condenser cooling performance ↓ 1. Condenser fins are clogged. 2. Improper fan rotation of cooling fan	<ul style="list-style-type: none"> <li>Clean condenser.</li> <li>Check and repair cooling fan as necessary.</li> </ul>
	<ul style="list-style-type: none"> <li>Low-pressure pipe is not cold.</li> <li>When compressor is stopped high-pressure value quickly drops by approximately 196 kPa (2 kg/cm<sup>2</sup>, 28 psi). It then decreases gradually thereafter.</li> </ul>	Poor heat exchange in condenser (After compressor operation stops, high pressure decreases too slowly.) ↓ Air in refrigeration cycle	Evacuate repeatedly and recharge system.
	Engine tends to overheat.	Engine cooling systems malfunction.	Check and repair each engine cooling system.
	<ul style="list-style-type: none"> <li>An area of the low-pressure pipe is colder than areas near the evaporator outlet.</li> <li>Plates are sometimes covered with frost.</li> </ul>	<ul style="list-style-type: none"> <li>Excessive liquid refrigerant on low-pressure side</li> <li>Excessive refrigerant discharge flow</li> <li>Expansion valve is open a little compared with the specification.</li> </ul> ↓ 1. Improper thermal valve installation 2. Improper expansion valve adjustment	Replace expansion valve.

## High-pressure Side is Too High and Low-pressure Side is Too Low

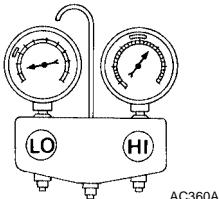
Gauge indication	Refrigerant cycle	Probable cause	Corrective action
<p>High-pressure side is too high and low-pressure side is too low.</p> 	Upper side of condenser and high-pressure side are hot, however, liquid tank is not so hot.	High-pressure tube or parts located between compressor and condenser are clogged or crushed.	<ul style="list-style-type: none"> <li>Check and repair or replace malfunctioning parts.</li> <li>Check lubricant for contamination.</li> </ul>

## High-pressure Side is Too Low and Low-pressure Side is Too High

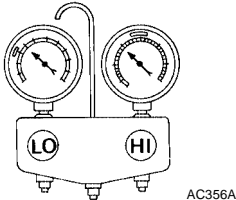
Gauge indication	Refrigerant cycle	Probable cause	Corrective action
<p>High-pressure side is too low and low-pressure side is too high.</p> 	High and low-pressure sides become equal soon after compressor operation stops.	Compressor pressure operation is improper. ↓ Damaged inside compressor packings	Replace compressor.
	No temperature difference between high and low-pressure sides	Compressor pressure operation is improper. ↓ Damaged inside compressor packings.	Replace compressor.

# TROUBLE DIAGNOSIS

## Both High- and Low-pressure Sides are Too Low

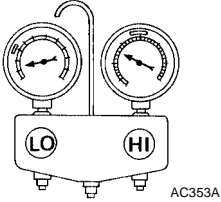
Gauge indication	Refrigerant cycle	Probable cause	Corrective action
<p>Both high- and low-pressure sides are too low.</p>  <p style="text-align: right; font-size: small;">AC353A</p>	<ul style="list-style-type: none"> <li>There is a big temperature difference between receiver drier outlet and inlet. Outlet temperature is extremely low.</li> <li>Liquid tank inlet and expansion valve are frosted.</li> </ul>	Liquid tank inside is slightly clogged.	<ul style="list-style-type: none"> <li>Replace desiccant assy.</li> <li>Check lubricant for contamination.</li> </ul>
	<ul style="list-style-type: none"> <li>Temperature of expansion valve inlet is extremely low as compared with areas near liquid tank.</li> <li>Expansion valve inlet may be frosted.</li> <li>Temperature difference occurs somewhere in high-pressure side</li> </ul>	High-pressure pipe located between receiver drier and expansion valve is clogged.	<ul style="list-style-type: none"> <li>Check and repair malfunctioning parts.</li> <li>Check lubricant for contamination.</li> </ul>
	Expansion valve and liquid tank are warm or only cool when touched.	Low refrigerant charge ↓ Leaking fittings or components	Check refrigerant for leaks. Refer to Checking Refrigerant Leaks, <a href="#">ATC-129, "Checking for Refrigerant Leaks"</a> and <a href="#">ATC-130, "Electronic Refrigerant Leak Detector"</a> .
	There is a big temperature difference between expansion valve inlet and outlet while the valve itself is frosted.	Expansion valve closes a little compared with the specification. ↓ 1. Improper expansion valve adjustment 2. Malfunctioning thermal valve 3. Outlet and inlet may be clogged.	<ul style="list-style-type: none"> <li>Remove foreign particles by using compressed air.</li> <li>Check lubricant for contamination.</li> </ul>
	An area of the low-pressure pipe is colder than areas near the evaporator outlet.	Low-pressure pipe is clogged or crushed.	<ul style="list-style-type: none"> <li>Check and repair malfunctioning parts.</li> <li>Check lubricant for contamination.</li> </ul>
	Air flow volume is not enough or is too low.	Evaporator is frozen.	<ul style="list-style-type: none"> <li>Check thermo control amp. operation.</li> <li>Replace compressor.</li> </ul>

## Low-pressure Side Sometimes Becomes Negative

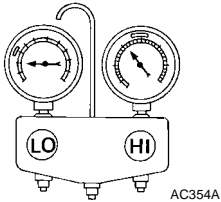Gauge indication	Refrigerant cycle	Probable cause	Corrective action
<p>Low-pressure side sometimes becomes negative.</p>  <p style="text-align: right; font-size: small;">AC354A</p>	<ul style="list-style-type: none"> <li>Air conditioning system does not function and does not cyclically cool the compartment air.</li> <li>The system constantly functions for a certain period of time after compressor is stopped and restarted.</li> </ul>	Refrigerant does not discharge cyclically. ↓ Moisture is frozen at expansion valve outlet and inlet. ↓ Water is mixed with refrigerant.	<ul style="list-style-type: none"> <li>Drain water from refrigerant or replace refrigerant.</li> <li>Replace desiccant assy.</li> </ul>

## Low-pressure Side Becomes Negative

# TROUBLE DIAGNOSIS

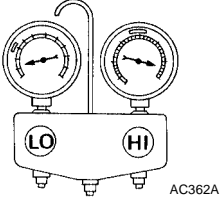Gauge indication	Refrigerant cycle	Probable cause	Corrective action
<p>Low-pressure side becomes negative.</p>  <p style="text-align: right; font-size: small;">AC362A</p>	<p>Liquid tank or front/rear side of expansion valve's pipe is frosted or dewed.</p>	<p>High-pressure side is closed and refrigerant does not flow. ↓ Expansion valve or liquid tank is frosted.</p>	<p>Leave the system at rest until no frost is present. Start it again to check whether or not the problem is caused by water or foreign particles.</p> <ul style="list-style-type: none"> <li>● If water is the cause, initially cooling is okay. Then the water freezes causing a blockage. Drain water from refrigerant or replace refrigerant.</li> <li>● If due to foreign particles, remove expansion valve and remove the particles with dry and compressed air (not shop air).</li> <li>● If either of the above methods cannot correct the problem, replace expansion valve.</li> <li>● Replace desiccant assy.</li> <li>● Check lubricant for contamination.</li> </ul>


# TROUBLE DIAGNOSIS

EJS000XS

## Insufficient Heating

SYMPTOM: Insufficient heating

### INSPECTION FLOW

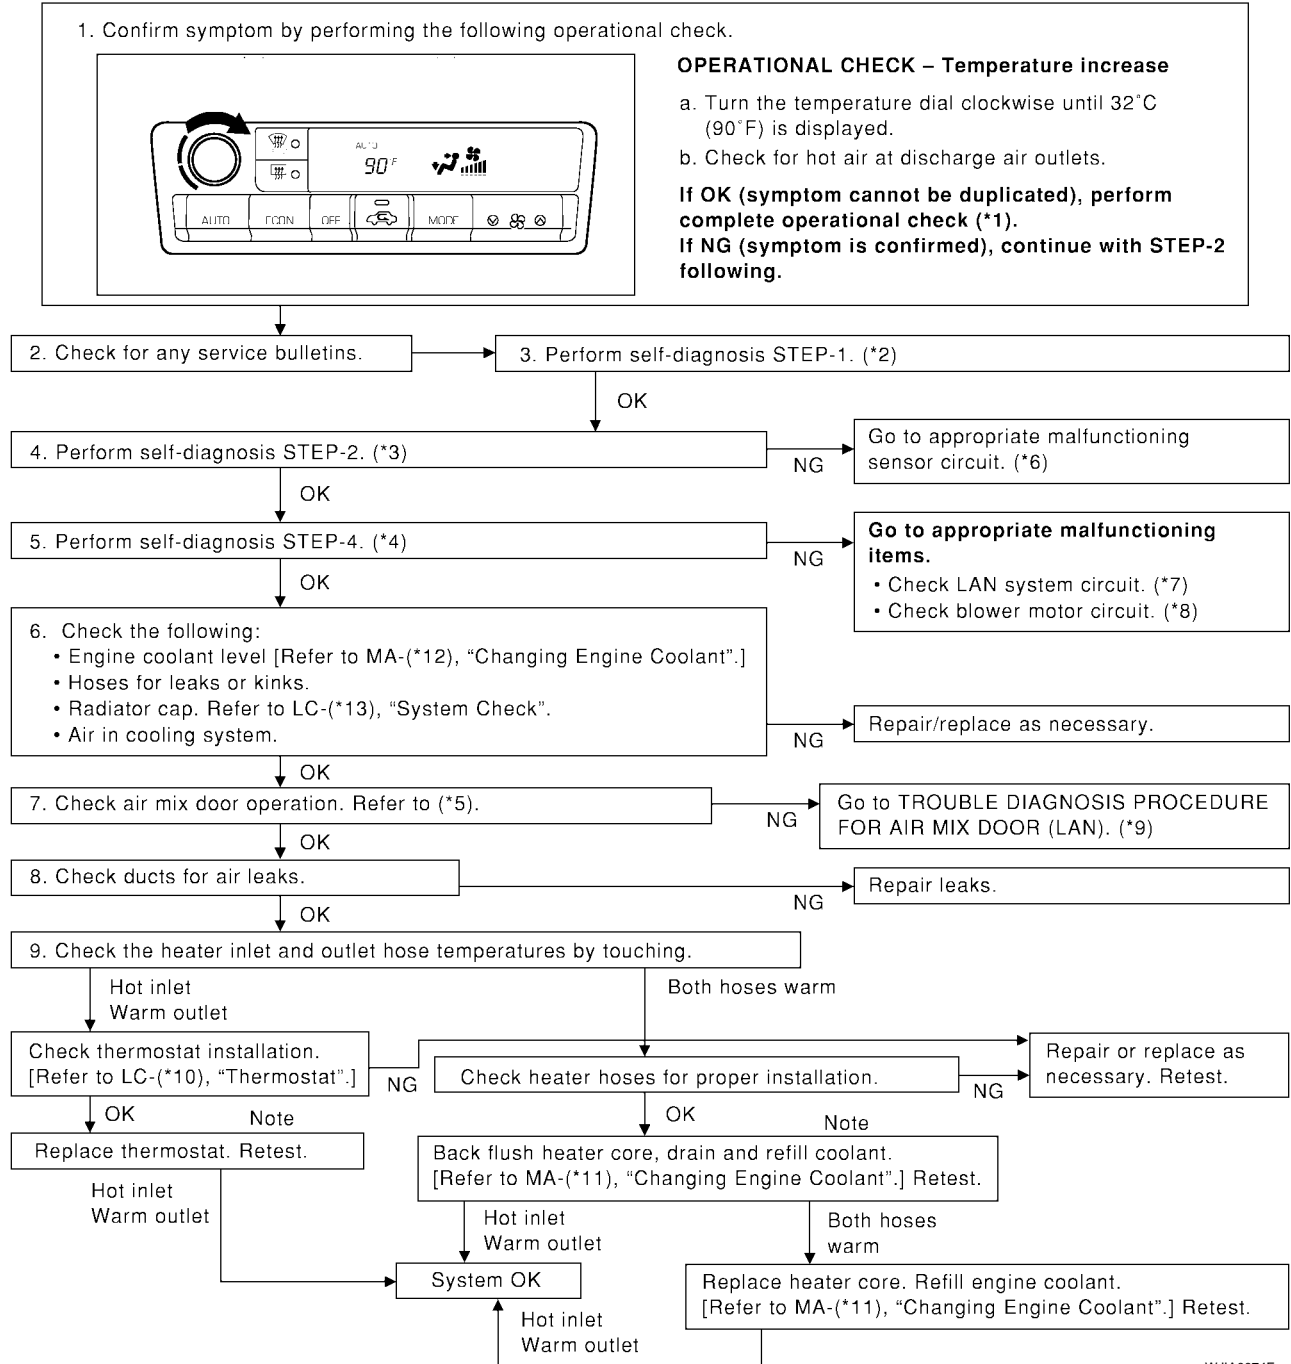

WJIA0074E

\*1 Operational check [ATC-49](#)

\*2 Self-diagnosis [ATC-41](#) , see No.1.

\*3 Self-diagnosis [ATC-41](#) , see No.5.

\*4 Self-diagnosis [ATC-41](#) , see No.7.

\*5 Air mix door motor circuit [ATC-61](#)

\*6 Self-diagnosis [ATC-41](#) , see No.14.

\*7 LAN system circuit [ATC-55](#)

\*8 Blower motor circuit [ATC-67](#)

\*9 Air mix door motor circuit [ATC-61](#)

\*1 Thermostat (LC)

0

\*1 Changing engine coolant (MA)

1

\*1 Changing engine coolant (MA)

2

\*1 Radiator cap-system check (LC)

3


# TROUBLE DIAGNOSIS

EJS000XT

## Noise

SYMPTOM: Noise

### INSPECTION FLOW

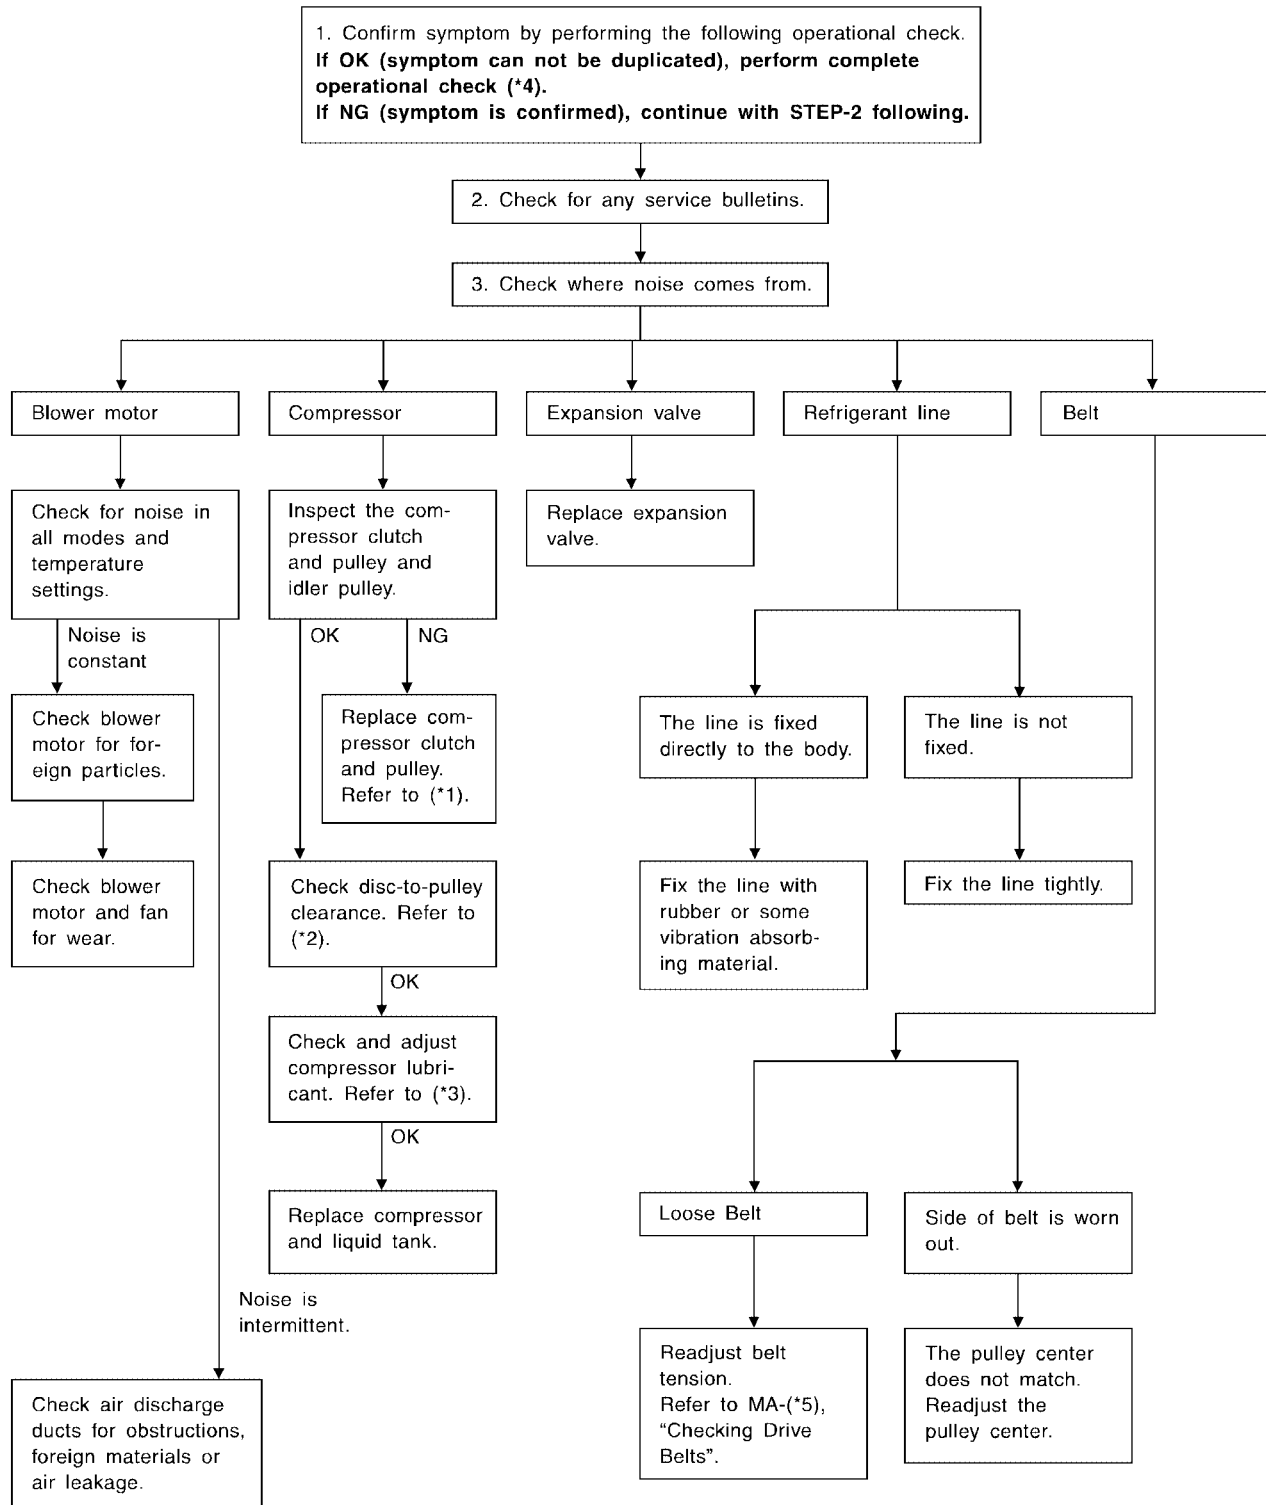

SHA331F

\*1 Removal and installation for magnet clutch [ATC-123](#)

\*3 Compressor lubricant [\(ATC-18\)](#)

\*5 Checking drive belts [\(MA-21\)](#)

\*2 Magnet clutch installation [ATC-123](#)

\*4 Operational check [\(ATC-49\)](#)



# TROUBLE DIAGNOSIS


EJS000XU

## Self-diagnosis

SYMPTOM: Self-diagnosis cannot be performed.

### INSPECTION FLOW


1. Confirm symptom by performing operational check.

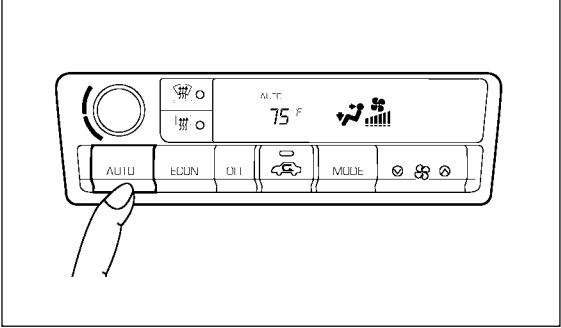

**OPERATIONAL CHECK – AUTO mode**

- a. Press AUTO switch.
- b. Display should indicate AUTO (not ECON). Confirm that the compressor clutch engages (audio or visual inspection). (Discharge air and blower speed will depend on ambient, in-vehicle and set temperatures.)

**If OK (symptom cannot be duplicated), perform complete operational check (\*9).  
If NG (symptom is confirmed), continue with STEP-2 following.**

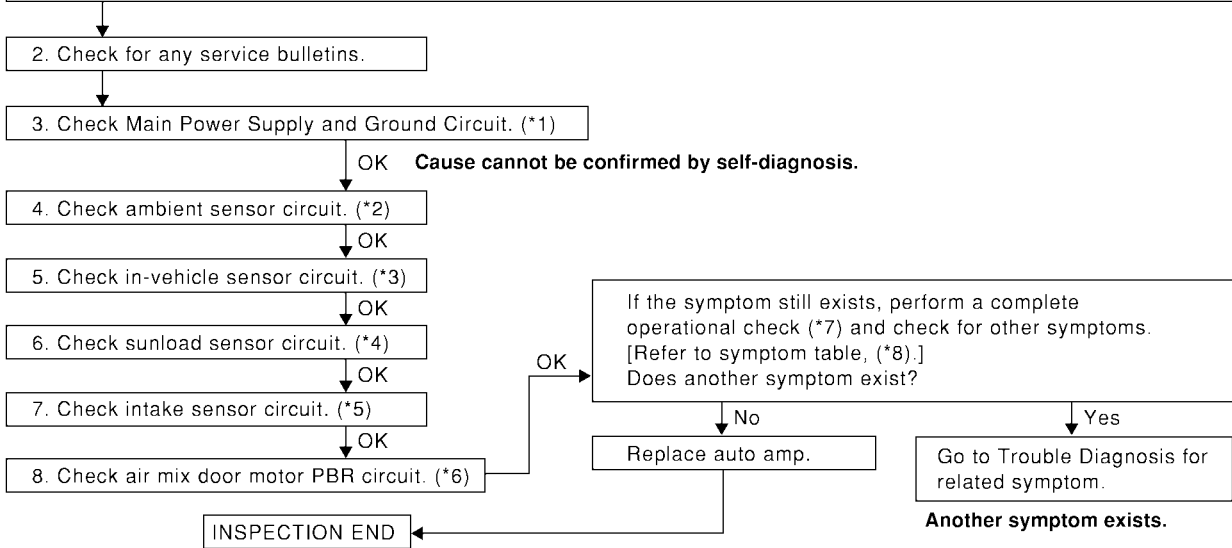

\*1 Main power supply and ground circuit [ATC-52](#)

\*2 Ambient sensor circuit [ATC-91](#)

\*3 In-vehicle sensor circuit [ATC-93](#)

\*4 Sunload sensor circuit [ATC-96](#)

\*5 Intake sensor circuit [ATC-99](#)

\*6 Air mix door motor circuit [ATC-61](#)

\*7 Operational check [ATC-49](#)

\*8 Symptom table [ATC-31](#)

\*9 Operational check [ATC-49](#)

WJIA0075E

A  
B  
C  
D  
E  
F  
G  
H  
I  
K  
L  
M

ATC

# TROUBLE DIAGNOSIS


EJS000XV

## Memory Function

SYMPTOM: Memory function does not operate.

### INSPECTION FLOW

1. Confirm symptom by performing the following operational check.

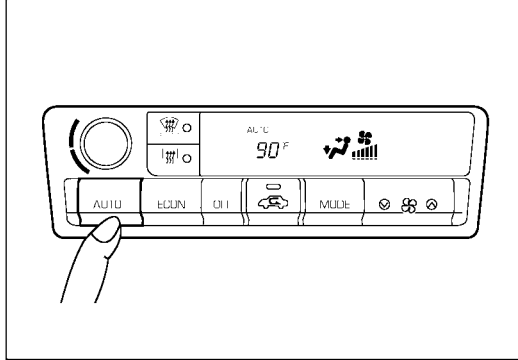

#### OPERATIONAL CHECK – Memory function

- Set the temperature 90°F or 32°C.
- Press OFF switch.
- Turn the ignition off.
- Turn the ignition on.
- Press the AUTO switch.
- Confirm that the set temperature remains at previous temperature.
- Press OFF switch.

If OK (symptom cannot be duplicated), perform complete operational check (\*2).

If NG (symptom is confirmed), continue with STEP-2 following.

2. Check for any service bulletins.

3. Check Main Power Supply and Ground Circuit. (\*1)

OK

Go to A/C system circuit. (\*4)

OK

4. Replace auto amp.

#### 5. FINAL CHECK

Go to self-diagnosis step-by-step procedure (\*3) and perform self-diagnosis STEP-2.  
Confirm that code No. 20 is displayed.

\*1 Main power supply and ground circuit. Refer to [PG-5, "Wiring Diagram — POWER —"](#).

\*3 Self-diagnosis [ATC-41](#)

\*4 A/C system circuit [ATC-53](#)

\*2 Operational check [ATC-49](#)

WJIA0076E

# TROUBLE DIAGNOSIS


EJS000XW

## ECON (ECONOMY) Mode

SYMPTOM: ECON mode does not operate.

### INSPECTION FLOW

1. Confirm symptom by performing the following operational check.

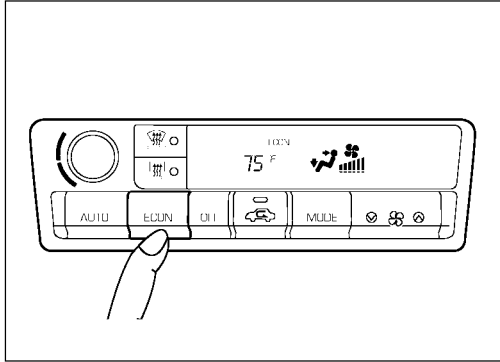

#### OPERATIONAL CHECK – ECON (ECONOMY) mode

- Set the temperature 75°F or 25°C.
- Press ECON switch.
- Display should indicate ECON (not AUTO).  
Confirm that the compressor clutch is not engaged (visual inspection).  
(Discharge air and blower speed will depend on ambient, in-vehicle, and set temperatures.)

**If OK (symptom cannot be duplicated), perform complete operational check (\*2).**  
**If NG (symptom is confirmed), continue with STEP-2 following.**

2. Check for any service bulletins.

3. Check Main Power Supply and Ground Circuit. (\*1)

OK

Go to A/C system circuit. (\*4)

OK

4. Replace auto amp.

5. FINAL CHECK

Go to self-diagnosis step-by-step procedure (\*3) and perform self-diagnosis STEP-2.  
Confirm that code No. 20 is displayed.

\*1 Main power supply and ground circuit. Refer to P-G power

\*2 Operational check [ATC-49](#)

\*3 Self-diagnosis [ATC-41](#)

\*4 A/C system circuit [ATC-52](#)


WJIA0077E

## Ambient Sensor Circuit COMPONENT DESCRIPTION

EJS000XX

### Ambient Sensor

The ambient sensor is attached to the front bumper reinforcement. It detects ambient temperature and converts it into a resistance value which is then input into the auto amplifier.

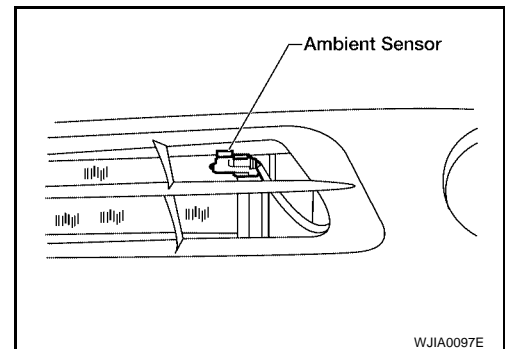

WJIA0097E

### AMBIENT TEMPERATURE INPUT PROCESS


The automatic amplifier includes a processing circuit for the ambient sensor input. However, when the temperature detected by the ambient sensor increases quickly, the processing circuit retards the auto amp. function. It only allows the auto amp. to recognize an ambient temperature increase of 0.33°C (0.6°F) per 100 seconds.

# TROUBLE DIAGNOSIS

As an example, consider stopping for a cup of coffee after high speed driving. Although the actual ambient temperature has not changed, the temperature detected by the ambient sensor will increase. This is because the heat from the engine compartment can radiate to the front grille area, location of the ambient sensor.

## DIAGNOSTIC PROCEDURE

SYMPTOM: Ambient sensor circuit is open or shorted. (21 or -21 is indicated on auto amp. as a result of conducting Self-diagnosis STEP 2.)

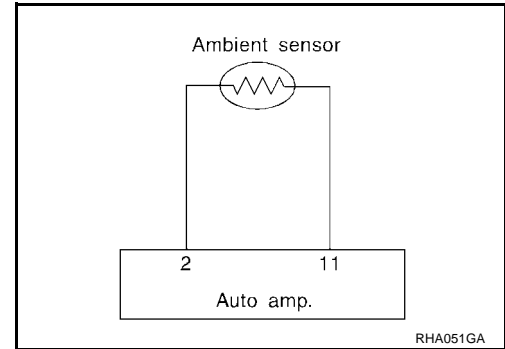


### 1. CHECK VOLTAGE BETWEEN AMBIENT SENSOR HARNESS CONNECTOR AND BODY GROUND

Disconnect ambient sensor harness connector.

Terminal (+)		Terminal (-)	Voltage (V) (Approx.)
Connector	Wire color	Body ground	
E1-1	OR/B		

OK or NG

- OK >> GO TO 2.
- NG >> GO TO 4.

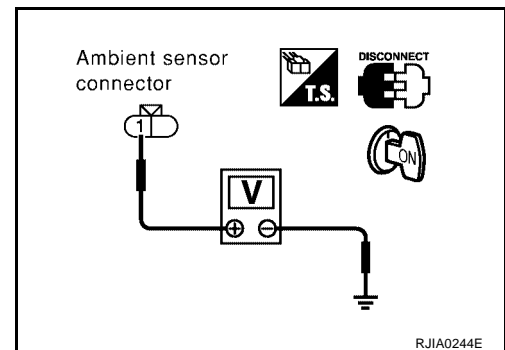

### 2. CHECK AMBIENT SENSOR GROUND CIRCUIT BETWEEN AMBIENT SENSOR AND AUTO AMP. (LCU)


Disconnect auto amp. (LCU) harness connector.

Terminals				Continuity
Connector	Wire color	Connector	Wire color	
M49-11	B/Y	E1-2	B	Yes

If OK, check harness for short.

OK or NG

- OK >> GO TO 3.
- NG >> Repair harness or connector.

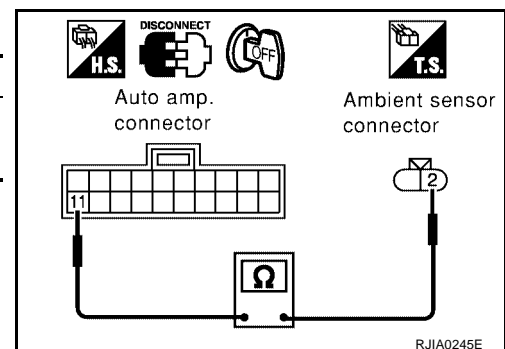

### 3. CHECK AMBIENT SENSOR

Refer to [ATC-93, "Ambient Sensor"](#).

OK or NG

- OK >> 1. Replace auto amp. (LCU).  
2. Go to [ATC-41, "Self-diagnosis"](#) and perform self-diagnosis STEP-2. Confirm that code No. 20 is displayed.
- NG >> Replace ambient sensor.

# TROUBLE DIAGNOSIS

## 4. CHECK AMBIENT SENSOR CIRCUIT BETWEEN AMBIENT SENSOR AND AUTO AMP. (LCU)

Disconnect auto amp. (LCU) harness connector.


Terminals				Continuity
Connector	Wire color	Connector	Wire color	
M49-2	OR/B	E1-1	OR/B	Yes

If OK, check harness for short.

OK or NG

- OK >> 1. Replace auto amp. (LCU).  
 2. Go to self-diagnosis step-by-step procedure (Refer to [ATC-41](#) ) and perform self-diagnosis STEP-2. Confirm that code No. 20 is displayed.

NG >> Repair harness or connector.

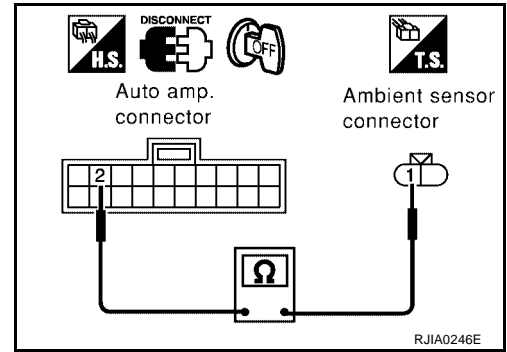


### COMPONENT INSPECTION

#### Ambient Sensor

After disconnecting ambient sensor harness connector, measure resistance between terminals 2 and 1 at sensor harness side, using the table below.

Temperature °C (°F)	Resistance kΩ
-15 (5)	12.73
-10 (14)	9.92
-5 (23)	7.80
0 (32)	6.19
5 (41)	4.95
10 (50)	3.99
15 (59)	3.24
20 (68)	2.65
25 (77)	2.19
30 (86)	1.81
35 (95)	1.51
40 (104)	1.27
45 (113)	1.07


If NG, replace ambient sensor.

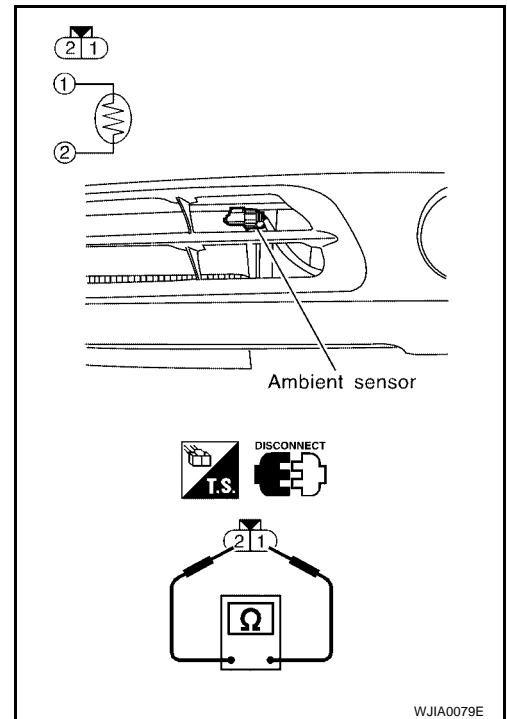

#### In-vehicle Sensor Circuit COMPONENT DESCRIPTION

##### In-vehicle sensor



The in-vehicle sensor is located on instrument lower panel. It converts variations in temperature of compartment air drawn from the aspirator into a resistance value. It is then input into the auto amplifier.

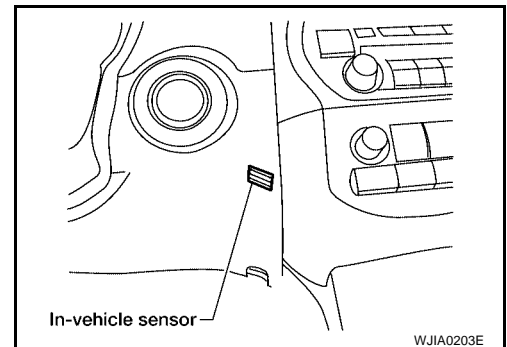

# TROUBLE DIAGNOSIS


## Aspirator

The aspirator is located on driver's side of heater and cooling unit. It produces vacuum pressure due to air discharged from the heater and cooling unit, continuously taking compartment air in the aspirator.

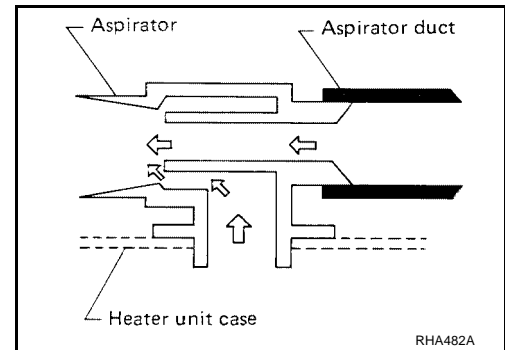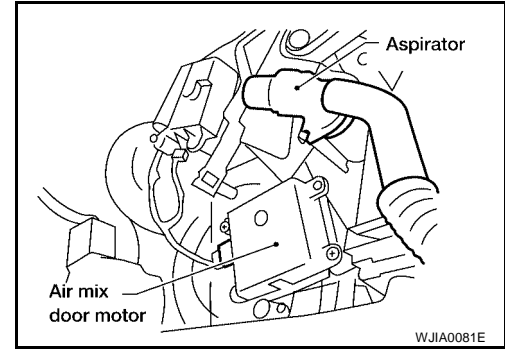

## DIAGNOSTIC PROCEDURE

SYMPTOM: In-vehicle sensor circuit is open or shorted. (22 or -22 is indicated on auto amp. as a result of conducting Self-diagnosis STEP 2.)

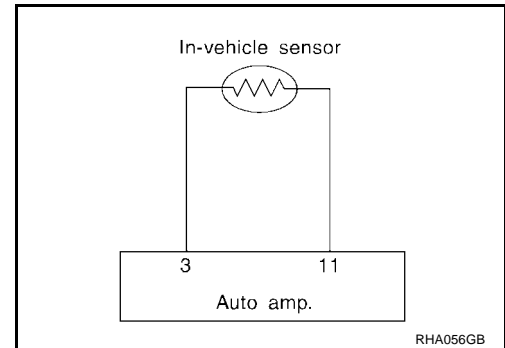


### 1. CHECK IN-VEHICLE SENSOR CIRCUIT BETWEEN IN-VEHICLE SENSOR AND BODY GROUND

Disconnect in-vehicle sensor harness connector.

Terminals		Voltage (V) (Approx.)
(+)	(-)	
Connector	Wire color	5V
M32-1	B/Y	
		Body ground

OK or NG

- OK >> GO TO 2.
- NG >> GO TO 4.

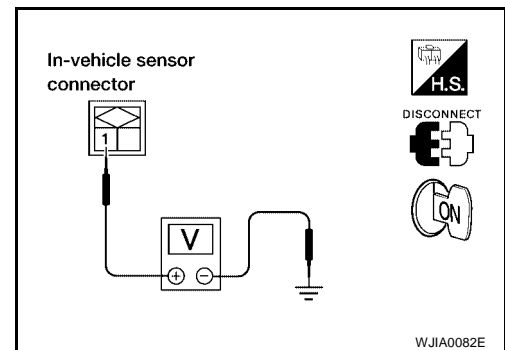

# TROUBLE DIAGNOSIS

## 2. CHECK IN-VEHICLE SENSOR GROUND CIRCUIT BETWEEN IN-VEHICLE SENSOR AND AUTO AMP. (LCU)


Disconnect auto amp. (LCU) harness connector.

Terminals				Continuity
Connector	Wire color	Connector	Wire color	
M49-11	B/Y	M32-2	B/Y	Yes

If OK, check harness for short.

OK or NG

- OK >> GO TO 3.
- NG >> Repair harness or connector.

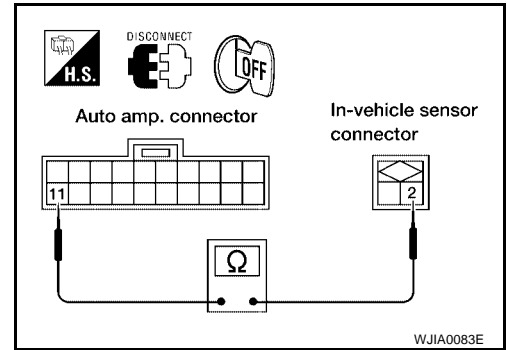

## 3. CHECK IN-VEHICLE SENSOR

Refer to [ATC-96, "In-vehicle Sensor"](#) .

OK or NG

- OK >> 1. Replace auto amp.
- 2. Go to self-diagnosis step-by-step procedure (Refer to [ATC-41](#) ) and perform self-diagnosis STEP-2. Confirm that code No. 20 is displayed.
- NG >> 1. Replace in-vehicle sensor.
- 2. Go to self-diagnosis step-by-step procedure (Refer to [ATC-41](#) ) and perform self-diagnosis STEP-2. Confirm that code No. 20 is displayed.

## 4. CHECK IN-VEHICLE SENSOR CIRCUIT BETWEEN AMBIENT SENSOR AND AUTO AMP. (LCU)


Disconnect auto amp. (LCU) harness connector.

Terminals				Continuity
Connector	Wire color	Connector	Wire color	
M49-3	LG	M39-1	LG	Yes

If OK, check harness for short.

OK or NG

- OK >> 1. Replace auto amp. (LCU).
- 2. Go to self-diagnosis step-by-step procedure ([ATC-41](#) ) and perform self-diagnosis STEP-2. Confirm that code No. 20 is displayed.
- NG >> Repair harness or connector.

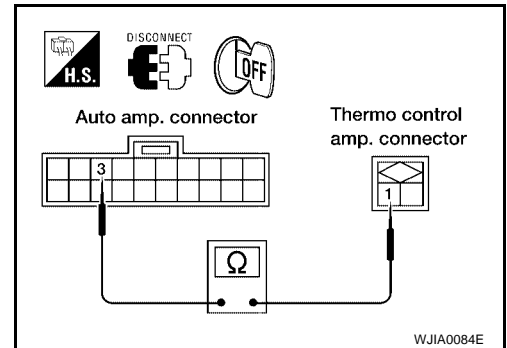

# TROUBLE DIAGNOSIS

## COMPONENT INSPECTION

### In-vehicle Sensor


After disconnecting in-vehicle sensor harness connector, measure resistance between terminals 1 and 2 at sensor harness side, using the table below.

Temperature °C (°F)	Resistance kΩ
-15 (5)	12.73
-10 (14)	9.92
-5 (23)	7.80
0 (32)	6.19
5 (41)	4.95
10 (50)	3.99
15 (59)	3.24
20 (68)	2.65
25 (77)	2.19
30 (86)	1.81
35 (95)	1.51
40 (104)	1.27
45 (113)	1.07


If NG, replace in-vehicle sensor.

### Sunload Sensor Circuit COMPONENT DESCRIPTION

The sunload sensor is located on the right defroster grille. It detects sunload entering through windshield by means of a photo diode. The sensor converts the sunload into a current value which is then input into the auto amplifier.

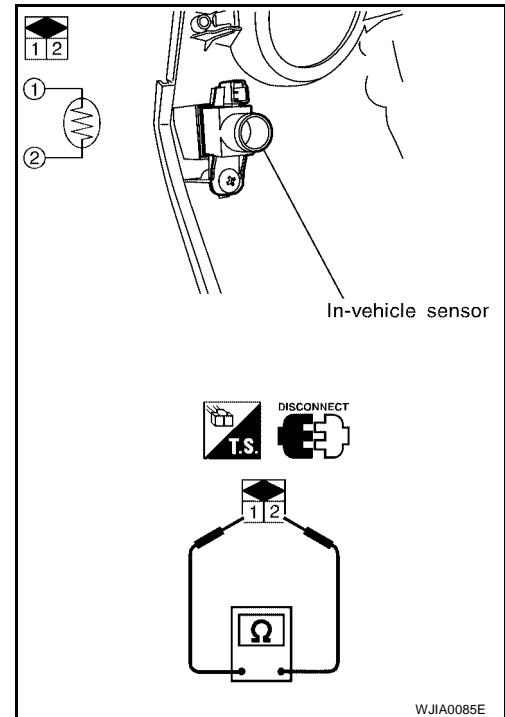

EJS000XZ

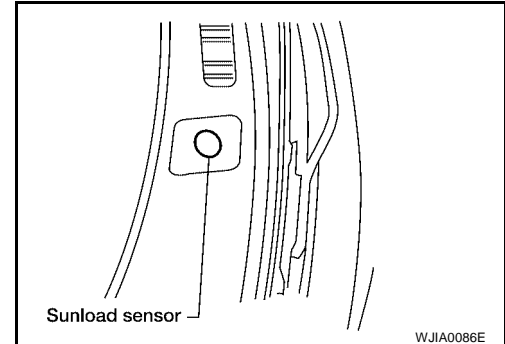

### SUNLOAD INPUT PROCESS

The auto amp. also includes a processing circuit which average the variations in detected sunload over a period of time. This prevents drastic swings in the ATC system operation due to small or quick variations in detected sunload.


For example, consider driving along a road bordered by an occasional group of large trees. The sunload detected by the sunload sensor will vary whenever the trees obstruct the sunlight. The processing circuit averages the detected sunload over a period of time, so that the (insignificant) effect of the trees momentarily obstructing the sunlight does not cause any change in the ATC system operation. On the other hand, shortly after entering a long tunnel, the system will recognize the change in sunload, and the system will react accordingly.



# TROUBLE DIAGNOSIS

## DIAGNOSTIC PROCEDURE

SYMPTOM: Sunload sensor circuit is open or shorted. (25 or -25) is indicated on auto amp. as a result of conducting Self-diagnosis STEP 2.)

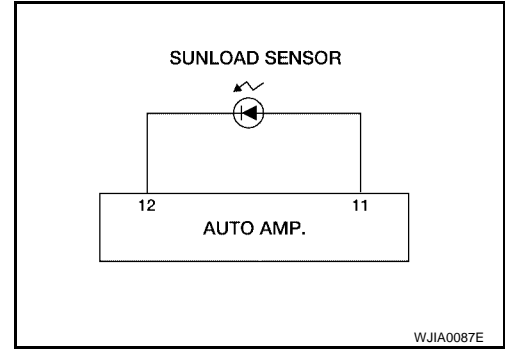

### 1. CHECK SUNLOAD SENSOR CIRCUIT BETWEEN SUNLOAD SENSOR AND BODY GROUND


Disconnect sunload sensor harness connector.

Terminals		Voltage (V) (Approx.)
(+)	(-)	
Connector	Wire color	Body ground
M65-1	OR	
		5V

OK or NG

OK >> GO TO 2.

NG >> GO TO 4.

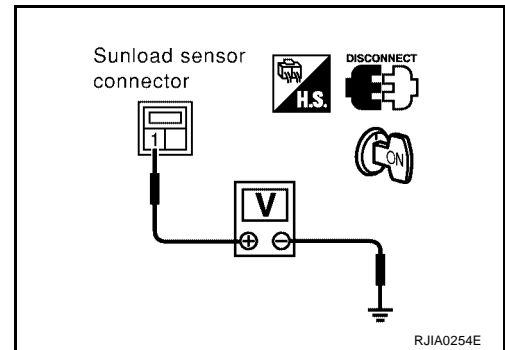

### 2. CHECK SUNLOAD SENSOR GROUND CIRCUIT BETWEEN SUNLOAD SENSOR AND AUTO AMP. (LCU)

Disconnect auto amp. (LCU) harness connector.


Terminals				Continuity
Connector	Wire color	Connector	Wire color	
M49-12	OR	M65-1	OR	Yes

If OK, check harness for short.

OK or NG

OK >> GO TO 3.

NG >> Repair harness or connector.

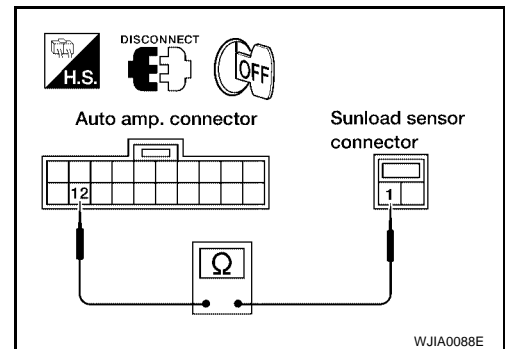

### 3. CHECK SUNLOAD SENSOR

Refer to [ATC-98, "Sunload Sensor"](#) .

OK or NG

OK >> 1. Replace auto amp. (LCU).

2. Go to self-diagnosis step-by-step procedure (Refer to [ATC-89](#) ) and perform self-diagnosis STEP-2. Confirm that code No. 20 is displayed.

NG >> 1. Replace sunload sensor.

2. Go to self-diagnosis step-by-step procedure (Refer to [ATC-41](#) ) and perform self-diagnosis STEP-2. Confirm that code No. 20 is displayed.

# TROUBLE DIAGNOSIS

## 4. CHECK SUNLOAD SENSOR CIRCUIT BETWEEN SUNLOAD SENSOR AND AUTO AMP. (LCU)

Disconnect auto amp. (LCU) harness connector.

Terminals				Continuity
Connector	Wire color	Connector	Wire color	
M49-11	B/Y	M65-2	B/Y	Yes

If OK, check harness for short.

OK or NG



- OK >> 1. Replace auto amp.  
 2. Go to self-diagnosis step-by-step procedure (Refer to [ATC-41](#) ) and perform self-diagnosis STEP-2. Confirm that code No. 20 is displayed.

NG >> Repair harness or connector.

### COMPONENT INSPECTION


#### Sunload Sensor

Measure voltage between auto amp. terminal 12 and body ground.  
 If NG, replace auto amp.

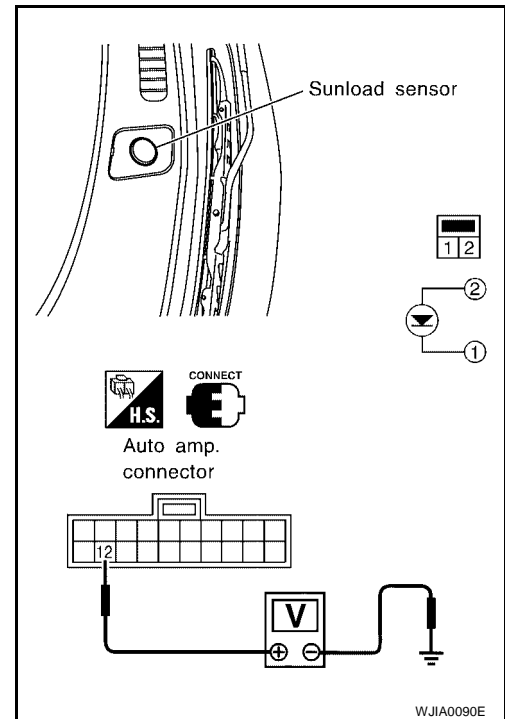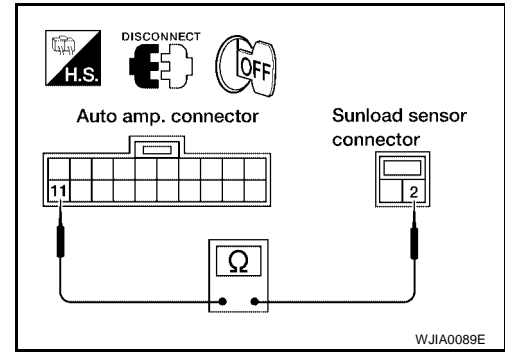

# TROUBLE DIAGNOSIS

- When checking sunload sensor, select a place where sun shines directly on it.

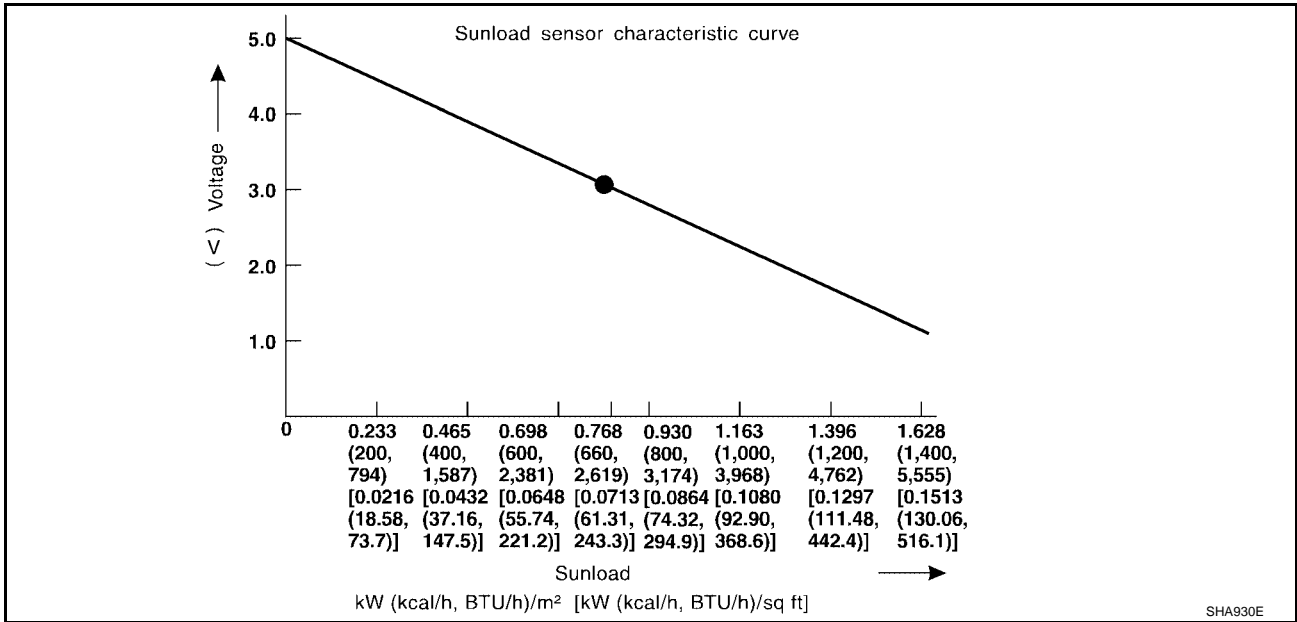

## Intake Sensor Circuit COMPONENT DESCRIPTION


EJS000Y0

### Intake Sensor

The intake sensor is located on the heater and cooling unit. It converts temperature of air after it passes through the evaporator into a resistance value which is then input to the auto amp.

After disconnecting intake sensor harness connector, measure resistance between terminals 1 and 2 at sensor harness side, using the table below.

Temperature °C (°F)	Resistance kΩ
-15 (5)	12.34
-10 (14)	9.62
-5 (23)	7.56
0 (32)	6.00
5 (41)	4.80
10 (50)	3.87
15 (59)	3.15
20 (68)	2.57
25 (77)	2.12
30 (86)	1.76
35 (95)	1.47
40 (104)	1.23
45 (113)	1.04

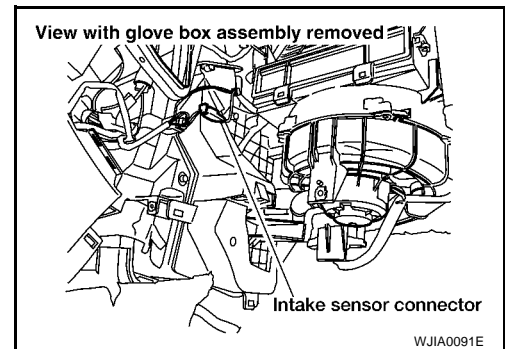

If NG, replace intake sensor.


A  
B  
C  
D  
E  
F  
G  
H  
I  
K  
L  
M

ATC

# TROUBLE DIAGNOSIS

## DIAGNOSTIC PROCEDURE

SYMPTOM: Intake sensor circuit is open or shorted. (24 or -24 is indicated on auto amp. as a result of conducting Self-diagnosis STEP 2.)

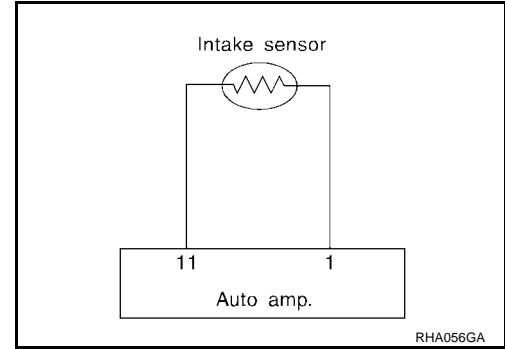

### 1. CHECK INTAKE SENSOR CIRCUIT BETWEEN INTAKE SENSOR AND BODY GROUND


Disconnect intake sensor harness connector.

Terminals		Voltage (V) (Approx.)
(+)	(-)	
Connector	Wire color	Body ground 5V
M33-2	B/Y	

OK or NG

OK >> GO TO 2.

NG >> GO TO 4.

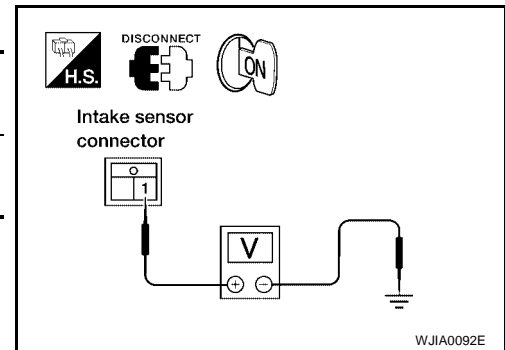

### 2. CHECK INTAKE SENSOR GROUND CIRCUIT BETWEEN INTAKE SENSOR AND AUTO AMP. (LCU)

Disconnect auto amp. (LCU) harness connector.


Terminals				Continuity
Connector	Wire color	Connector	Wire color	Yes
M49-11	B/Y	M33-2	B/Y	

If OK, check harness for short.

OK or NG

OK >> GO TO 3.

NG >> Repair harness or connector.

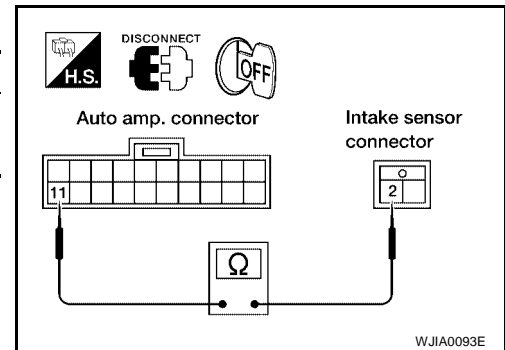

### 3. CHECK INTAKE SENSOR

Refer to [ATC-99, "Intake Sensor"](#) .

OK or NG

OK >> 1. Replace auto amp.

2. Go to self-diagnosis step-by-step procedure (Refer to [ATC-41](#) ) and perform self-diagnosis STEP-2. Confirm that code No. 20 is displayed.

NG >> 1. Replace intake sensor.

2. Go to self-diagnosis step-by-step procedure (Refer to [ATC-41](#) ) and perform self-diagnosis STEP-2. Confirm that code No. 20 is displayed.

# TROUBLE DIAGNOSIS

## 4. CHECK INTAKE SENSOR CIRCUIT BETWEEN AMBIENT SENSOR AND AUTO AMP. (LCU)


Disconnect auto amp. (LCU) harness connector.

Terminals				Continuity
Connector	Wire color	Connector	Wire color	Yes
M33-1	R/W	M49-1	R/W	

If OK, check harness for short.

OK or NG

- OK >> 1. Replace auto amp.  
2. Go to self-diagnosis step-by-step procedure (Refer to [ATC-41](#) ) and perform self-diagnosis STEP-2. Confirm that code No. 20 is displayed.
- NG >> Repair harness or connector.

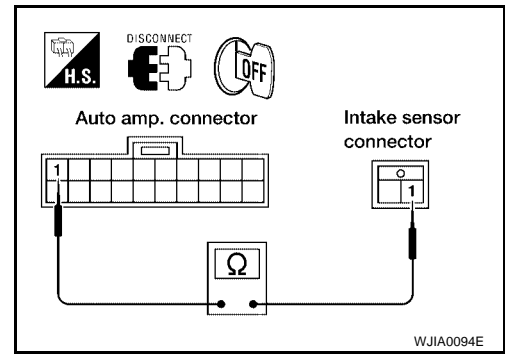

A  
B  
C  
D  
E  
F  
G  
H  
I  
K  
L  
M

ATC

# AUTO AMP


## AUTO AMP

PF2:27760

### Removal and Installation

EJS000Y1

1. Remove cluster lid D. Refer to [IP-13, "Cluster Lid D"](#) .
2. Remove the audio unit. Refer to [AV-22, "AUDIO UNIT"](#) .
3. Remove the a/c auto amp. screws and then remove it from the instrument panel.
4. Disconnect the connectors and then remove it.

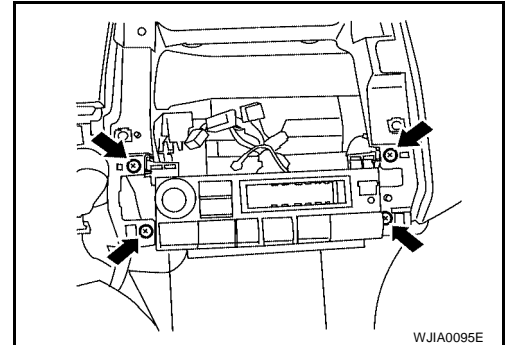

# AMBIENT SENSOR


## AMBIENT SENSOR

PFP:27722

### Removal and Installation

EJS000Y2

1. Disconnect ambient sensor connector.
2. Release the ambient sensor clip and then remove it.

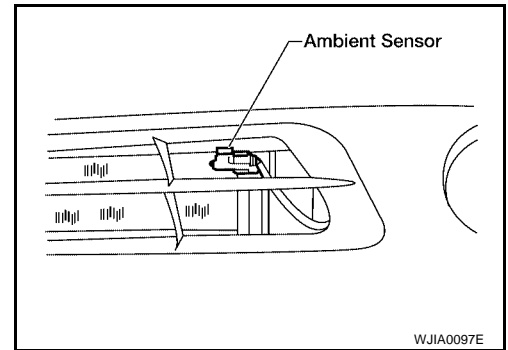

A

B

C

D

E

F

G

H

I

ATC

K

L

M

# IN-VEHICLE SENSOR


## IN-VEHICLE SENSOR

PFP:27720

### Removal and Installation

EJS000Y3

1. Remove lower driver instrument panel assembly. Refer to [IP-13, "Driver Lower Instrument Panel"](#).
2. Remove the in-vehicle sensor screw and then remove it.

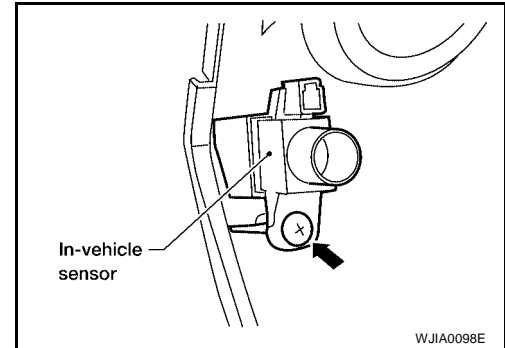



# SUNLOAD SENSOR


## SUNLOAD SENSOR

PF2:27721

### Removal and Installation

EJS000Y4

1. Remove the sunload sensor garnish.
2. Disconnect the connector.
3. Release the sunload sensor tabs and then remove it from the garnish.

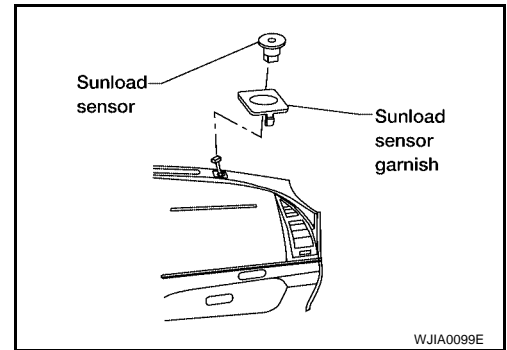

A

B

C

D

E

F

G

H

I

ATC

K

L

M

# INTAKE SENSOR

## INTAKE SENSOR

PF2:27723


### Removal and Installation

EJS000Y5

1. Remove the evaporator. Refer to [ATC-128, "Removal and Installation for Evaporator"](#) .
2. Remove the intake sensor clip and then the sensor.

**CAUTION:**

**Be careful not to damage the core surface.**

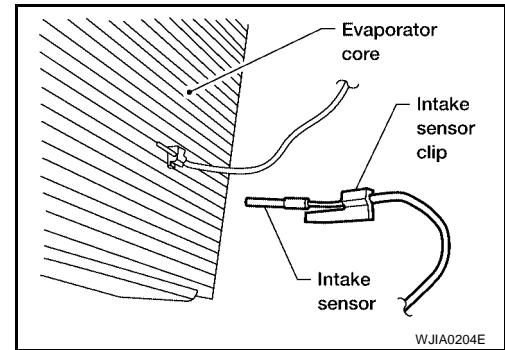

# THERMO CONTROL AMPLIFIER

## THERMO CONTROL AMPLIFIER

PFP:27675


### Removal and Installation

EJS000Y6

1. Remove evaporator. Refer to [ATC-128, "Removal and Installation for Evaporator"](#).
2. Remove thermo control amplifier.

**CAUTION:**

Be careful not to damage the core surface.

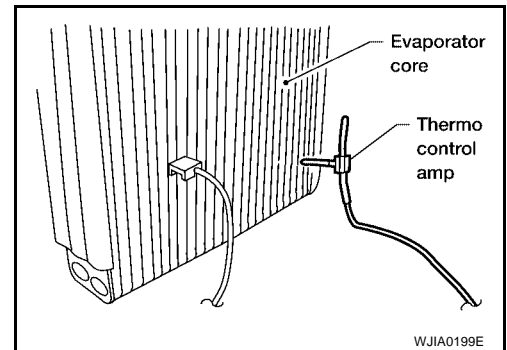

A

B

C

D

E

F

G

H

I

ATC

K

L

M

# BLOWER UNIT


## BLOWER UNIT

PF2:27200

### Removal and Installation REMOVAL

EJS000Y7

1. Remove the glove box assembly. Refer to [JP-15, "Glove Box"](#)
2. Remove the ECM.
3. Disconnect the blower motor, intake door motor and fan control amp. connector.
4. Remove the 2 bolts and 1 screw from the blower unit, then remove it.

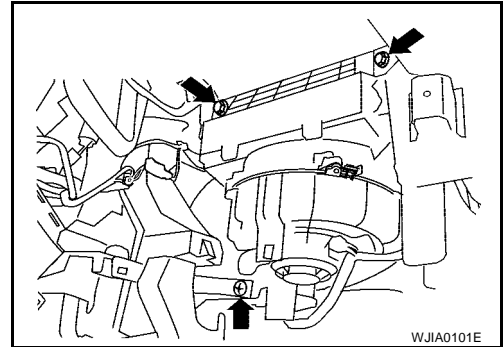

# BLOWER MOTOR


## BLOWER MOTOR

PFP:27226

### Removal and Installation

EJS000Y8

1. Remove the blower unit. Refer to [ATC-108, "Removal and Installation"](#) .
2. Release the 8 tabs attaching blower motor to blower unit case and then remove it.

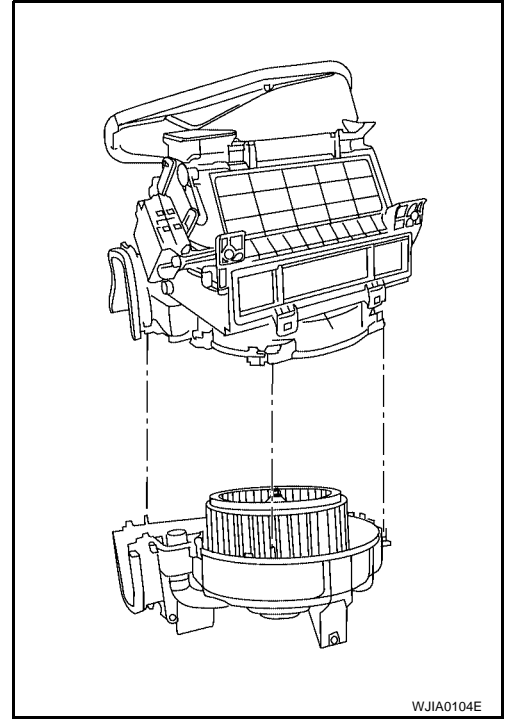

A  
B  
C  
D  
E  
F  
G  
H  
I

ATC

K  
L  
M

# INTAKE DOOR MOTOR


## INTAKE DOOR MOTOR

PFP:27730

### Removal and Installation

EJS000Y9

1. Remove the blower unit. Refer to [ATC-108, "BLOWER UNIT"](#) .
2. Remove the screws and then the intake door motor from the blower unit.

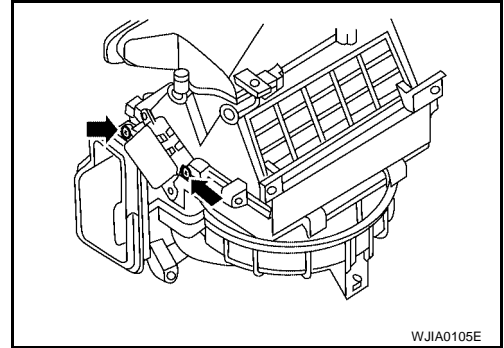

# IN-CABIN MICROFILTER


## IN-CABIN MICROFILTER

PF2:27277

### Removal and Installation FUNCTION


EJS001LJ

Air inside passenger compartment is kept clean at either recirculation or fresh mode by installing in-cabin microfilter into blower unit.

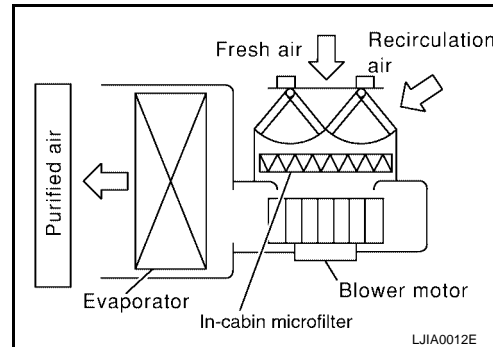


### REPLACEMENT TIMING

Replace in-cabin microfilter.  
Refer to [MA-7, "SCHEDULE 1"](#) and [MA-10, "SCHEDULE 2"](#).  
Caution label is affixed inside the glove box.

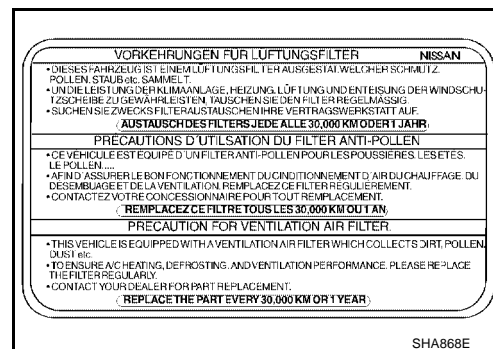

### REPLACEMENT PROCEDURES

1. Remove glove box assembly. Refer to [IP-15, "Glove Box"](#).
2. Remove in-cabin microfilter cover.
3. Remove the in-cabin microfilter from blower unit.
4. Replace with new in-cabin microfilter and reinstall cover on blower unit.
5. Reinstall glove box assembly.

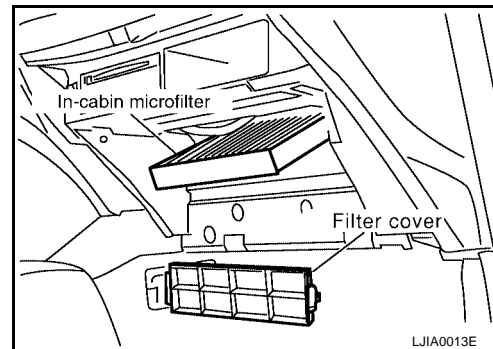

# HEATER & COOLING UNIT ASSEMBLY

## HEATER & COOLING UNIT ASSEMBLY


PF2:27110

### Removal and Installation

EJS000YA

#### REMOVAL

1. Discharge refrigerant from A/C system. Refer to [ATC-119, "HFC-134a \(R-134a\) Service Procedure"](#)
2. Drain coolant from cooling system. Refer to [MA-22, "Changing Engine Coolant"](#) .
3. Disconnect heater hoses from heater core pipes.
4. Disconnect refrigerant lines from evaporator.
5. Remove the instrument panel. Refer to [IP-10, "INSTRUMENT PANEL ASSEMBLY"](#) .
6. Remove the blower unit. Refer to [ATC-108, "BLOWER UNIT"](#) .
7. Disconnect mode door motor and air mix door motor connectors.
8. Remove the heater and cooling unit.

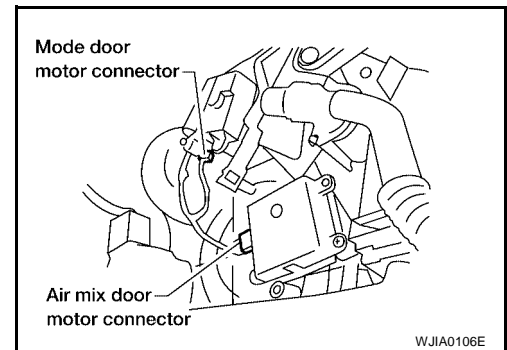

#### INSTALLATION

Install in the reverse order of removal.

#### NOTE:

When filling radiator with coolant, refer to [CO-33, "Refilling Engine Coolant"](#) . Recharge the A/C system. Refer to [ATC-119, "HFC-134a \(R-134a\) Service Procedure"](#) .



# HEATER CORE


## HEATER CORE

PF27140


### Removal and Installation

EJS000YB


1. Remove heater and cooling unit. Refer to [ATC-112, "HEATER & COOLING UNIT ASSEMBLY"](#).
2. Remove heater core pipe support screws and then remove it.

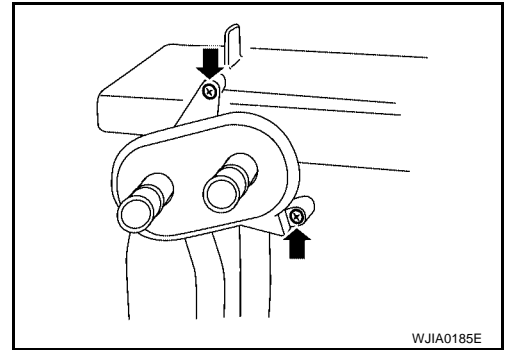

3. Remove heater core cover screws and then remove it.

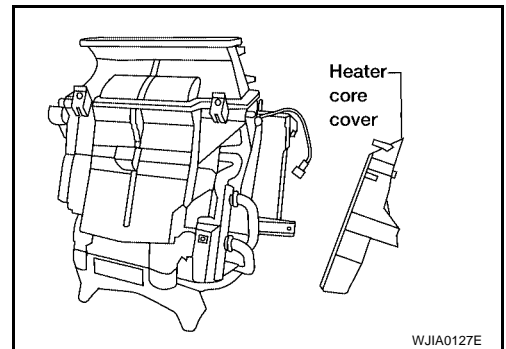

4. Remove heater core.

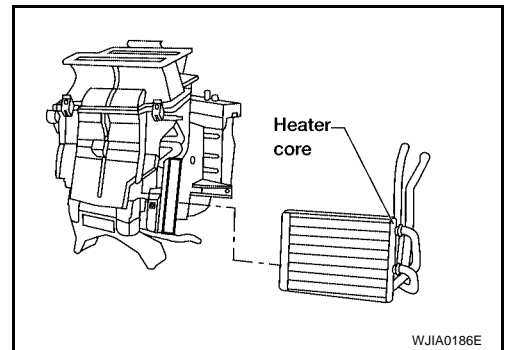

A  
B  
C  
D  
E  
F  
G  
H  
I  
ATC  
K  
L  
M

# MODE DOOR MOTOR


## MODE DOOR MOTOR

PF2:27731

### Removal and Installation

EJS000YC

1. Remove the driver lower instrument panel assembly. Refer to [IP-13, "Driver Lower Instrument Panel"](#).
2. Disconnect the mode door motor connector.
3. Remove the mode door motor screws and then remove it.

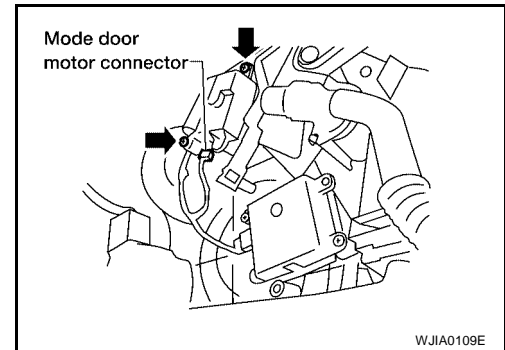

# AIR MIX DOOR MOTOR


## AIR MIX DOOR MOTOR

PFP:27732

### Removal and Installation

EJS000YD

1. Remove the driver lower instrument panel assembly. Refer to [IP-13, "Driver Lower Instrument Panel"](#).
2. Disconnect the air mix door motor connector.
3. Remove the air mix door motor screws and then remove it.

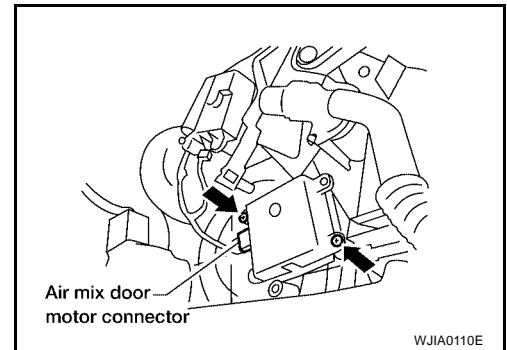

A

B

C

D

E

F

G

H

I

ATC

K

L

M

# FAN CONTROL AMPLIFIER


## FAN CONTROL AMPLIFIER

PF2:27761

### Removal and Installation

EJS000YE

1. Disconnect fan control amp. connector
2. Remove screws from the fan control amp. and then remove it.

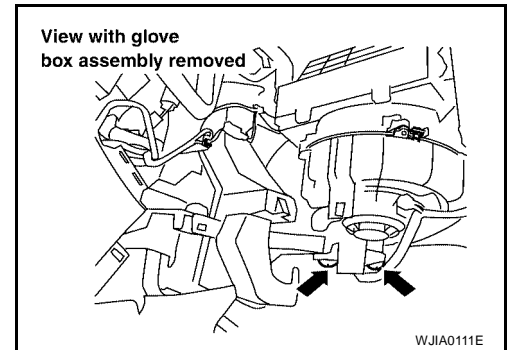

# DUCTS AND GRILLES

## DUCTS AND GRILLES


PFP:27860

### Removal and Installation

EJS000YF

### Ventilator Duct, Defroster Nozzle and Defroster Ducts

EJS000YG

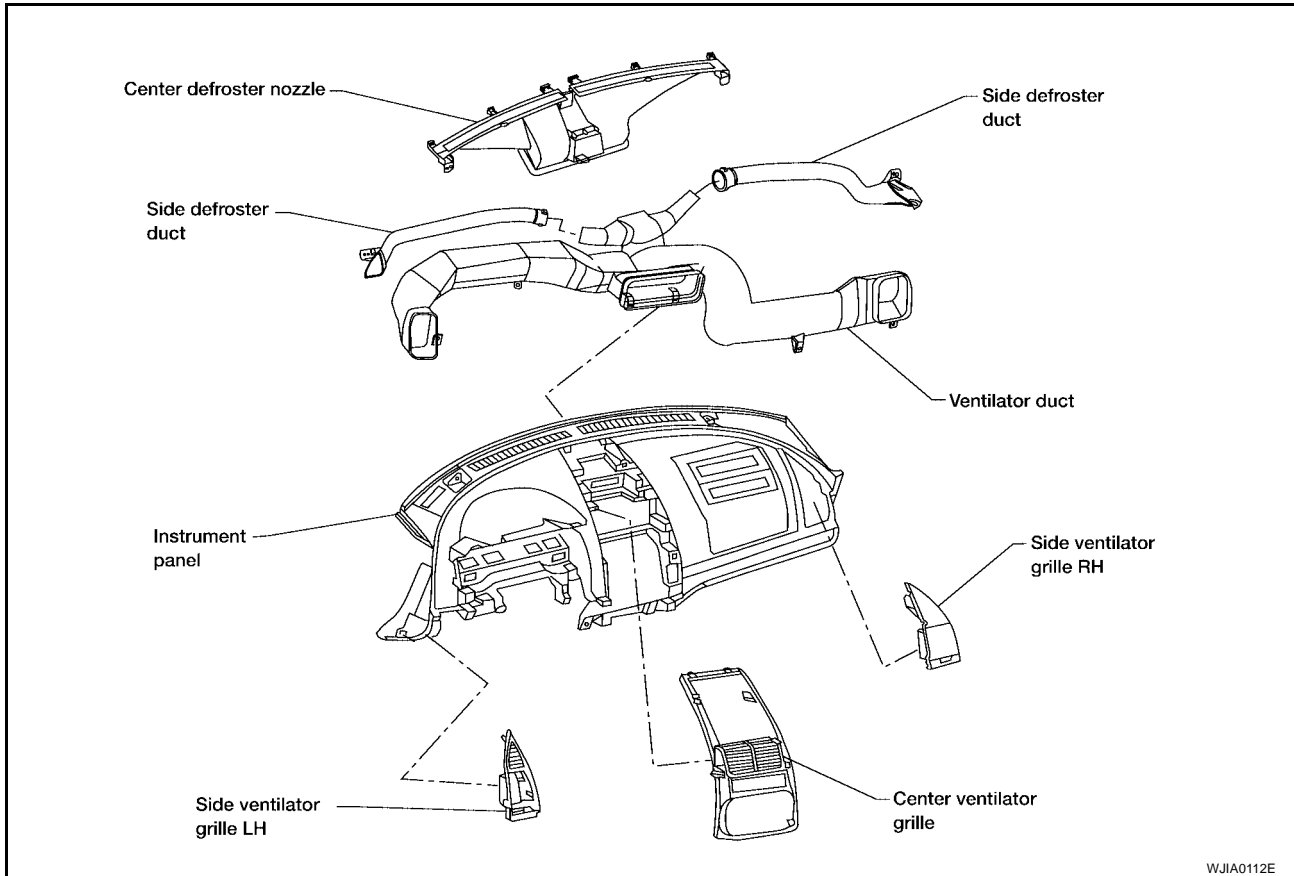


A  
B  
C  
D  
E  
F  
G  
H  
I

ATC

### Center Ventilator Grille

EJS000YH

1. Remove cluster lid D. Refer to [IP-13, "Cluster Lid D"](#).
2. Release the tabs to remove center ventilator grille.

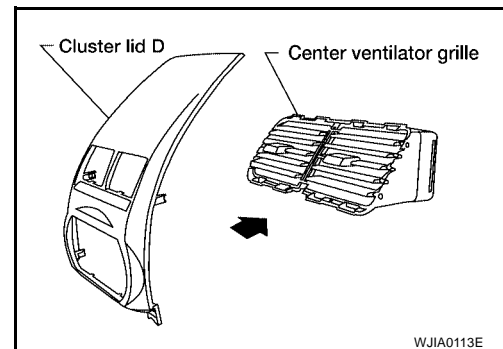


K  
L  
M

### Side Ventilator Grille LH

EJS000YI

1. Remove cluster lid A. Refer to [IP-13, "Cluster Lid A"](#).
2. Remove side ventilator grille LH.

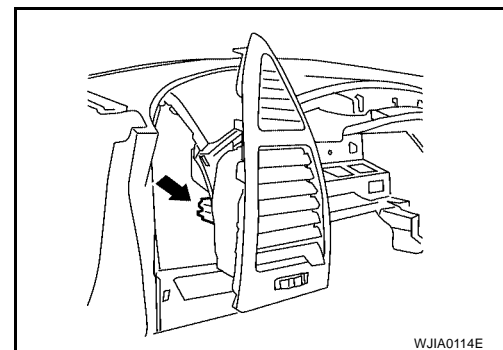


# DUCTS AND GRILLES

## Side Ventilator Grille RH

EJS000YJ


1. Remove glove box assembly. Refer to [IP-15, "Glove Box"](#).
2. Remove side ventilator grille RH screw and then remove it.

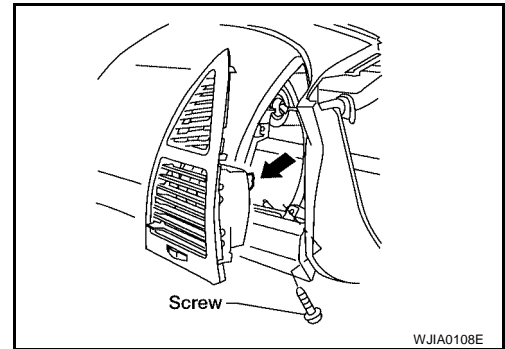

## Floor duct

EJS000YK

1. Remove the carpet. Refer to [EI-32, "FLOOR TRIM"](#).
2. Release foam tape and slide floor duct rearward to release from clips.

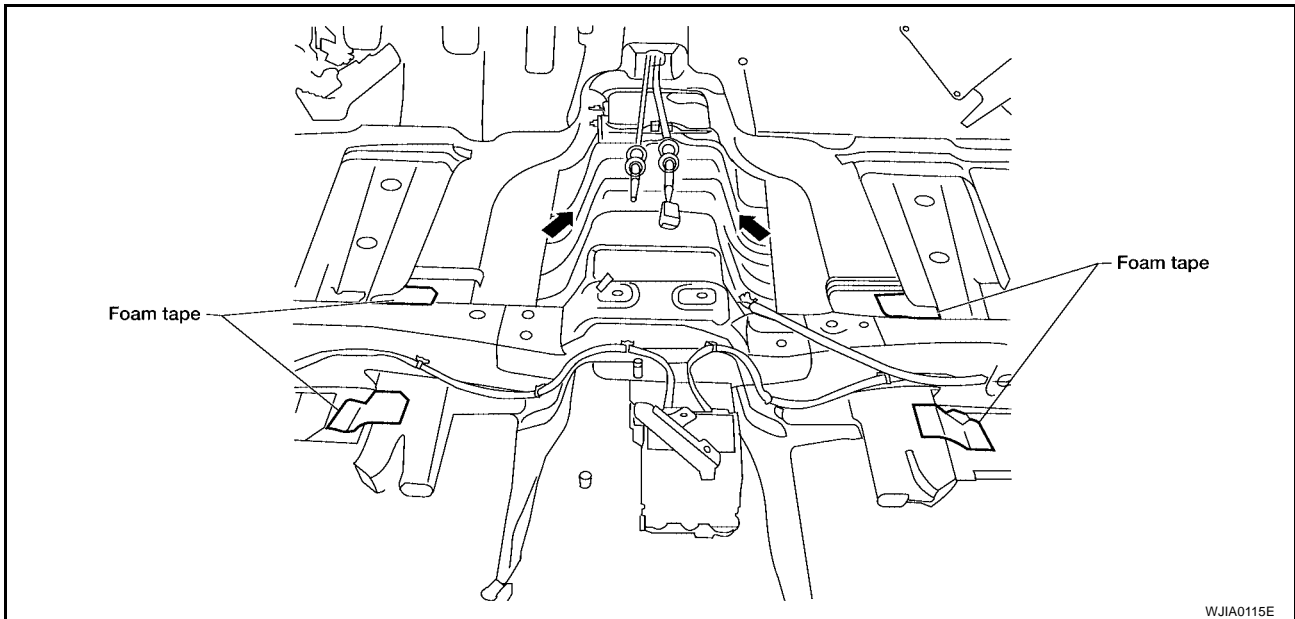

# REFRIGERANT LINES

## REFRIGERANT LINES

PFP:92600


### HFC-134a (R-134a) Service Procedure SETTING OF SERVICE TOOLS AND EQUIPMENT

EJS000YL


#### Discharging Refrigerant

**WARNING:**

Avoid breathing A/C refrigerant and lubricant vapor or mist. Exposure may irritate eyes, nose and throat. Remove HFC-134a (R-134a) from A/C system using certified service equipment meeting requirements of SAE J2210 (R-134a recycling equipment) or J2201 (R-134a recovery equipment). If accidental system discharge occurs, ventilate work area before resuming service. Additional health and safety information may be obtained from refrigerant and lubricant manufacturers.

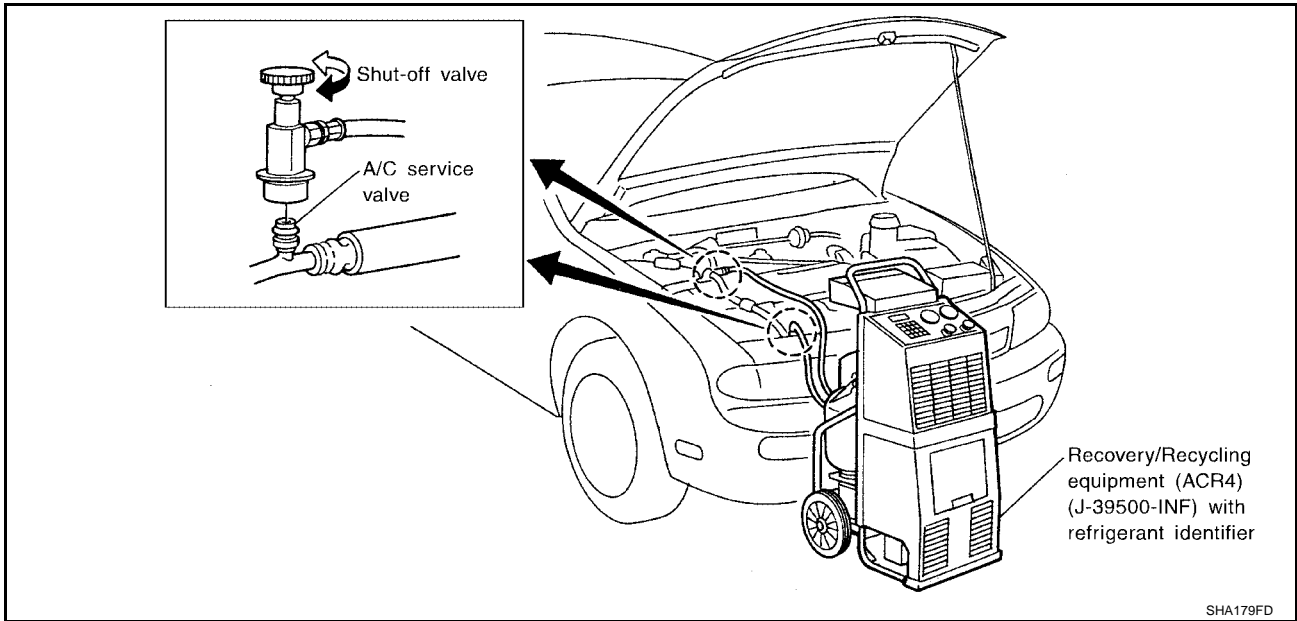

#### Evacuating System and Charging Refrigerant

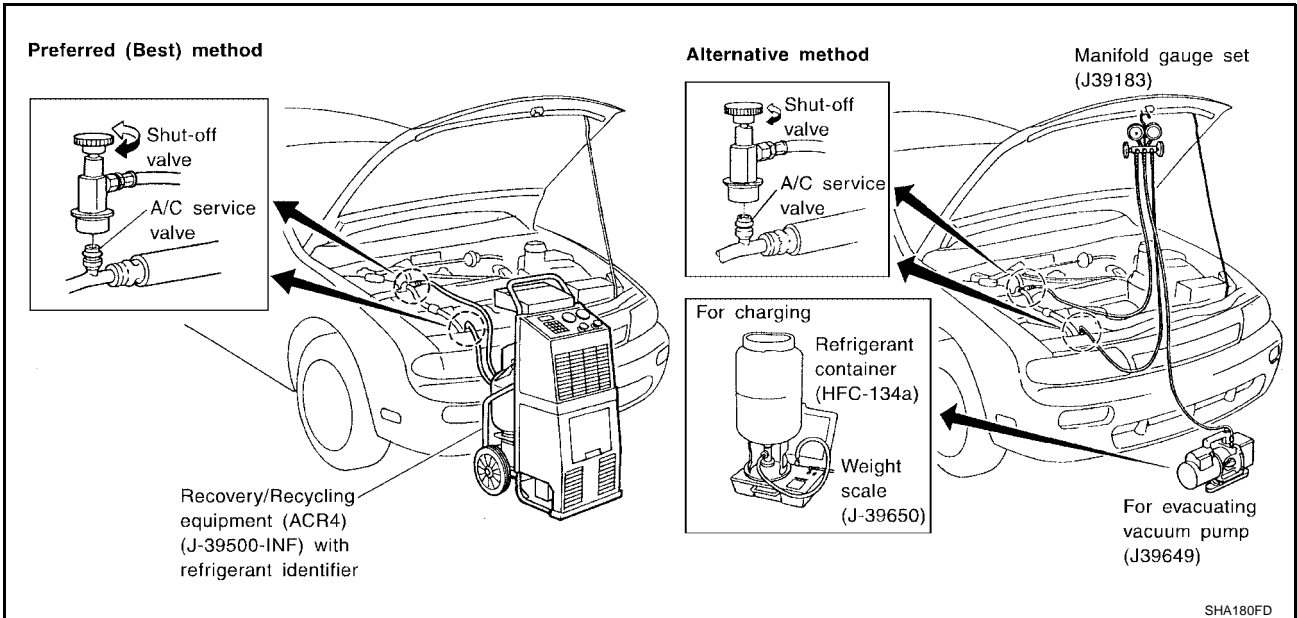


A  
B  
C  
D  
E  
F  
G  
H  
I

ATC

K  
L  
M

# REFRIGERANT LINES

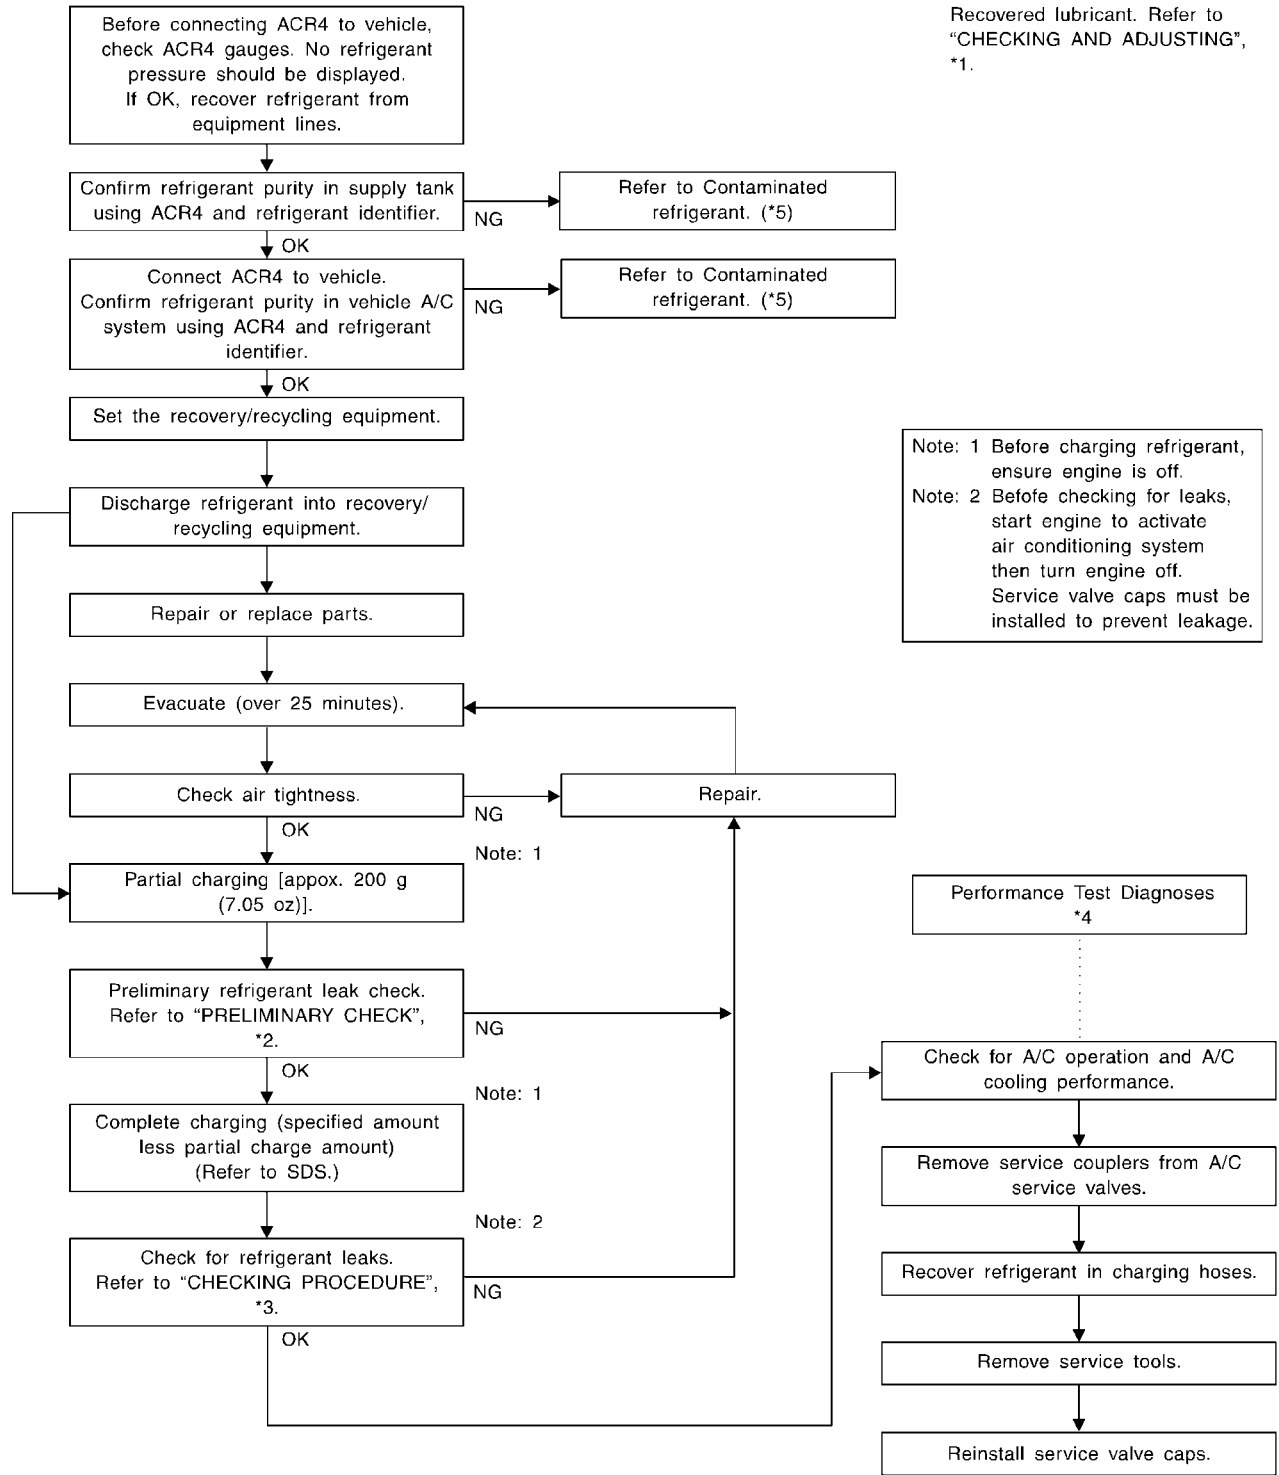

\*1 [ATC-18, "CHECKING AND ADJUSTING"](#)

\*2 [ATC-129, "Checking for Refrigerant Leaks"](#)

\*3 [ATC-129, "Checking for Refrigerant Leaks"](#)

\*4 [ATC-81, "Performance Test Diagnoses"](#)

\*5 [ATC-4, "Contaminated Refrigerant"](#)

SHA251F




# REFRIGERANT LINES

EJS000YM

## Components

Refer to [ATC-6, "Precautions for Refrigerant Connection"](#).

SEC. 214 • 271 • 274 • 276

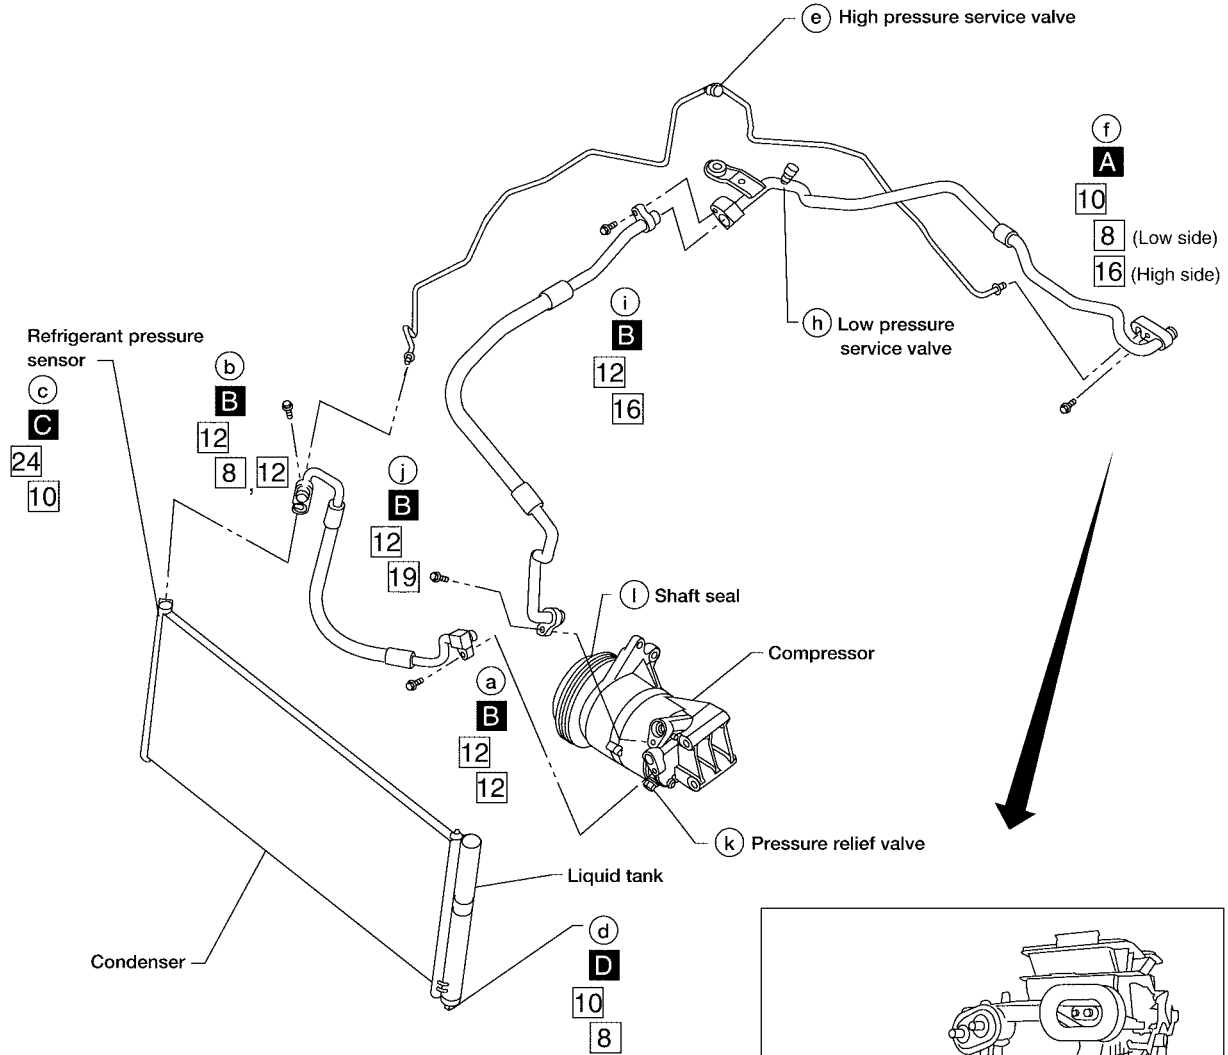

A  
B  
C  
D  
E  
F  
G  
H  
I  
K  
L  
M


ATC

WJIA0116E

# REFRIGERANT LINES

## Removal and Installation for Compressor

EJS000YN

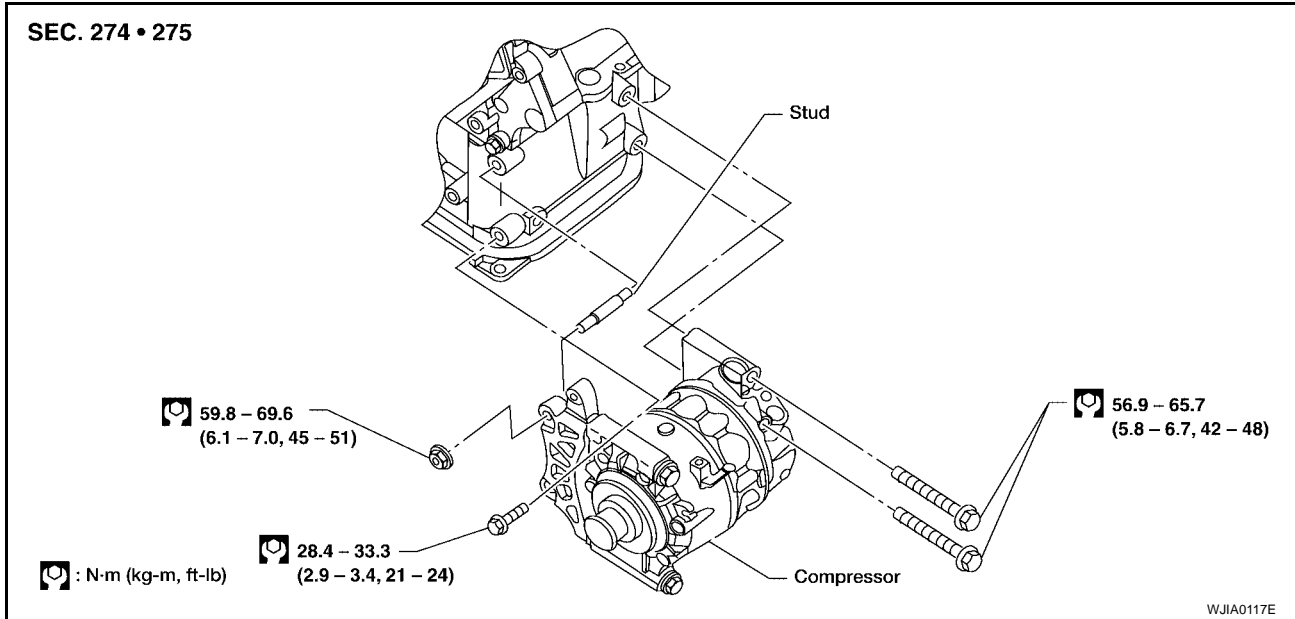

### REMOVAL

1. Discharge the refrigerant. Refer to [ATC-119, "HFC-134a \(R-134a\) Service Procedure"](#).
2. Remove the drive belt.  
Refer to [MA-21, "ENGINE MAINTENANCE \(VQ35DE ENGINE\)"](#).
3. Remove the coolant pipe bracket bolt.
4. Remove compressor mounting stud.
5. Disconnect the compressor connector.
6. Remove the high-pressure flexible hose and low-pressure flexible hose.

#### **CAUTION:**

**Cap or wrap the joint of the pipe with suitable material such as vinyl tape to avoid the entry of air.**

7. Remove the mounting bolts and nut from compressor using power tools.

### INSTALLATION

#### **CAUTION:**

- Replace the O-ring of the low-pressure flexible hose and high-pressure flexible hose with a new one, then apply compressor oil to it when installing it.
- When charging refrigerant, check for leaks.

#### **Bolts mounting the compressor (rear side)**

**Tightening torque : 56.9 - 65.7 N-m (5.8 - 6.8 kg-m, 42 - 48 ft-lb)**

#### **Bolt mounting the compressor (front side)**

**Tightening torque : 28.4 - 33.3 N-m (2.9 - 3.4 kg-m, 21 - 24 ft-lb)**

#### **Nut mounting the compressor (front side)**

**Tightening torque : 59.8 - 69.6 N-m (6.1 - 7.0 kg-m, 45 - 51 ft-lb)**

#### **Bolt mounting the high- and low-pressure flexible hoses**


**Tightening torque : 7.8 - 19.6 N-m (0.8 - 1.9 kg-m, 69 - 173 in-lb)**

# REFRIGERANT LINES


## Removal and Installation for Compressor Clutch REMOVAL

EJS000YO



- When removing center bolt, hold clutch disc with clutch disc tool.
- Remove the clutch disc.  
Clutch disc holding tool:  
(J-44614) Commercial service tool

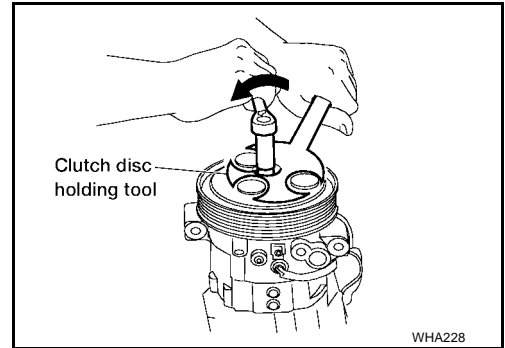

- Remove the snap ring using external snap ring pliers.

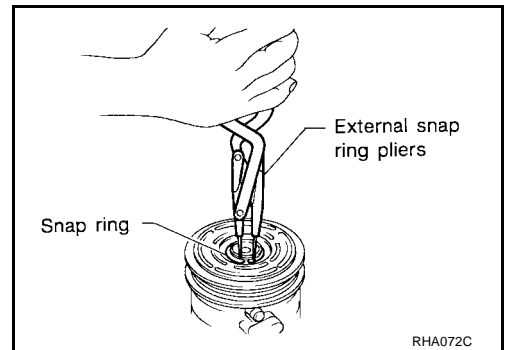

- Pulley removal:

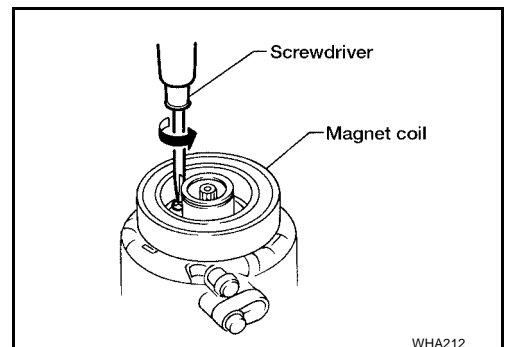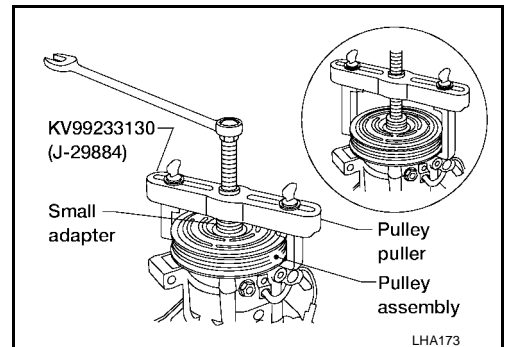

Use a pulley puller with small adapter. Position the small adapter on the end of the drive shaft and the center of the puller on the small adapter. Remove the pulley assembly with the puller.

**To prevent deformation of the pulley groove, the puller claws should be hooked under (not into) the pulley groove.**

- Remove the snap ring using external snap ring pliers.
- Remove the magnet coil harness clip using a screwdriver, remove the three magnet coil fixing screws and remove the magnet coil.


A  
B  
C  
D  
E  
F  
G  
H  
I  
K  
L  
M

ATC

# REFRIGERANT LINES

## INSPECTION

### Clutch Disc

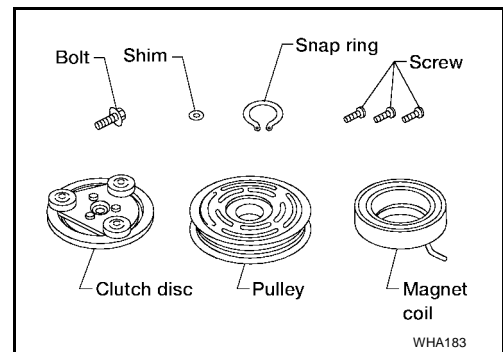

If the contact surface shows signs of damage due to excessive heat, replace clutch disc and pulley.

### Pulley


Check the appearance of the pulley assembly. If contact surface of pulley shows signs of excessive grooving, replace clutch disc and pulley. The contact surfaces of the pulley assembly should be cleaned with a suitable solvent before reinstallation.

### Coil


Check magnet coil for loose connection or cracked insulation.

## INSTALLATION


- Install the magnet coil.  
**Be sure to align the magnet coil pin with the hole in the compressor front head.**
- Install the magnet coil harness clip using a screwdriver.

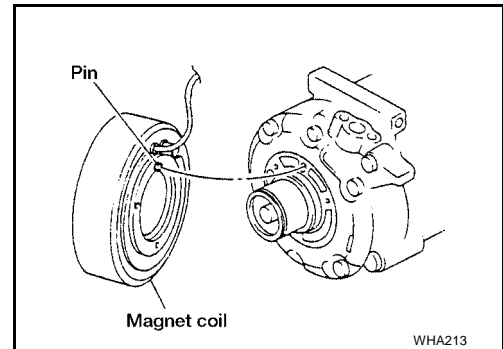

- Install the pulley assembly using the installer and a wrench, and then install the snap ring using snap ring pliers.

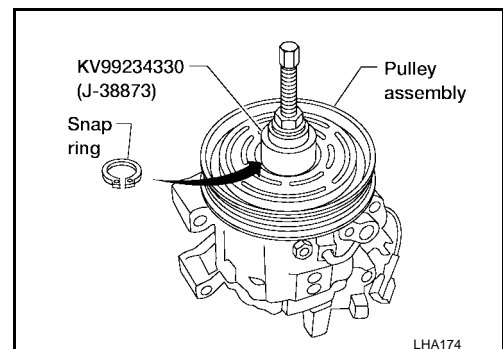


- Install the clutch disc on the drive shaft, together with the original shim(s). Press the clutch disc down by hand.

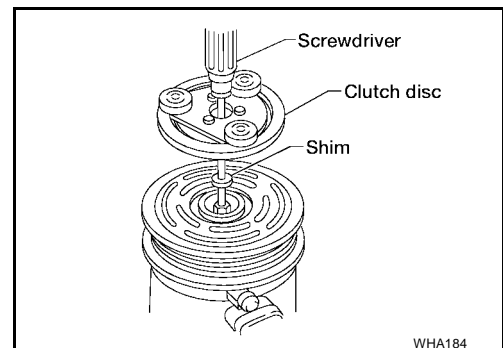

# REFRIGERANT LINES


- Using the clutch disc tool to prevent clutch disc rotation, tighten the bolt to 12 N·m (1.2 kg-m, 9 ft-lb).
- After tightening the bolt, check that the pulley rotates smoothly.

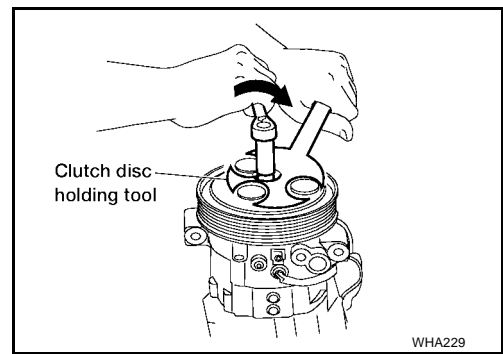

- Check clearance all the way around the clutch disc.

**Clutch disc-to-pulley clearance : 0.3 - 0.6 mm (0.012 - 0.024 in)**

If the specified clearance is not obtained, replace adjusting spacer and readjust.

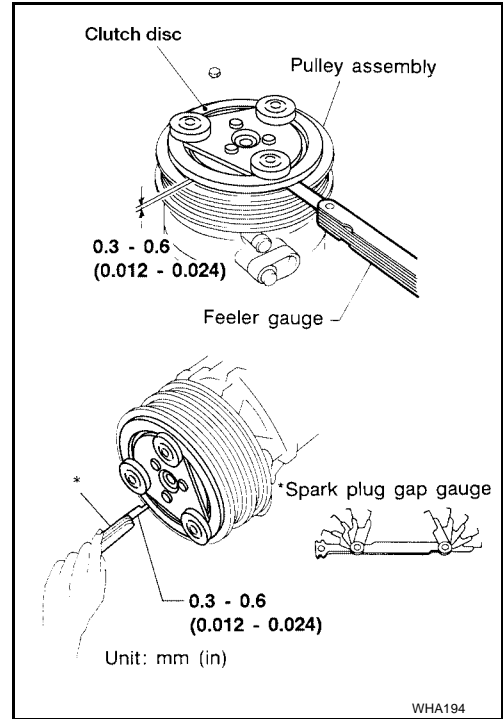

## BREAK-IN OPERATION

When replacing compressor clutch assembly, always conduct the break-in operation. This is done by engaging and disengaging the clutch about 30 times. Break-in operation raises the level of transmitted torque.

## Removal and Installation for Low-pressure Flexible Hose

EJS000YP

### REMOVAL

1. Discharge the refrigerant. Refer to [ATC-119, "HFC-134a \(R-134a\) Service Procedure"](#).

#### CAUTION:

Cap or wrap the joint of the pipe with suitable material such as vinyl tape to avoid the entry of air.

2. Remove the low-pressure flexible hose. Refer to [ATC-121, "Components"](#).

### INSTALLATION

#### CAUTION:

- Replace the O-ring of the low-pressure flexible hose with a new one, then apply compressor oil to it when installing it.
- When charging refrigerant, check for leaks.

**Bolt mounting the low-pressure flexible hose (evaporator side)**

**Tightening torque : 2.9 - 5.9 N·m (0.29 - 0.60 kg-m, 26 - 52 in-lb)**

**Bolt mounting the low-pressure flexible hose (compressor side)**

**Tightening torque : 7.8 - 19.6 N·m (0.8 - 1.9 kg-m, 69 - 173 in-lb)**

# REFRIGERANT LINES

**Bolt connecting the low-pressure flexible hose in-line connection**

**Tightening torque** : 7.8 - 19.6 N·m (0.8 - 1.9 kg·m, 69 - 173 in·lb)

## Removal and Installation for High-pressure Flexible Hose

EJS000YQ

### REMOVAL

1. Discharge the refrigerant. Refer to [ATC-119, "HFC-134a \(R-134a\) Service Procedure"](#).
2. Remove the high-pressure flexible hose. Refer to [ATC-121, "Components"](#).

### CAUTION:

Cap or wrap the joint of the pipe with suitable material such as vinyl tape to avoid the entry of air.

### INSTALLATION

### CAUTION:

- Replace the O-ring of the high-pressure flexible hose with a new one, then apply compressor oil to it when installing it.
- When charging refrigerant, check for leaks.

**Bolts mounting the high-pressure flexible hose**

**Tightening torque** : 7.8 - 19.6 N·m (0.8 - 1.9 kg·m, 69 - 173 in·lb)

## Removal and Installation for High-pressure Pipe

EJS000YR

### REMOVAL

1. Discharge the refrigerant. Refer to [ATC-119, "HFC-134a \(R-134a\) Service Procedure"](#).
2. Remove the high-pressure pipe. Refer to [ATC-121, "Components"](#).

### CAUTION:

Cap or wrap the joint of the pipe with suitable material such as vinyl tape to avoid the entry of air.

### INSTALLATION

### CAUTION:

- Replace the O-ring of the high-pressure pipe with a new one, then apply compressor oil to it when installing it.
- When charging refrigerant, check for leaks.

**Bolt mounting the high-pressure pipe (evaporator side)**

**Tightening torque** : 2.9 - 5.9 N·m (0.29 - 0.60 kg·m, 26 - 52 in·lb)

**Bolt mounting the high-pressure pipe (condenser side)**

**Tightening torque** : 7.8 - 19.6 N·m (0.8 - 1.9 kg·m, 69 - 173 in·lb)

## Removal and Installation for Refrigerant Pressure Sensor


EJS000YS

1. Discharge the refrigerant. Refer to [ATC-119, "HFC-134a \(R-134a\) Service Procedure"](#).
2. Disconnect the refrigerant pressure sensor connector and remove the refrigerant pressure sensor from condenser.

### CAUTION:

- Please be careful not to damage the condenser fins.
- Apply compressor oil to the O-ring of the refrigerant pressure sensor when installing it.

**Tightening torque** : 9.8 - 11.7 N·m (1.0 - 1.2 kg·m,  
7.3 - 8.6 ft·lb)

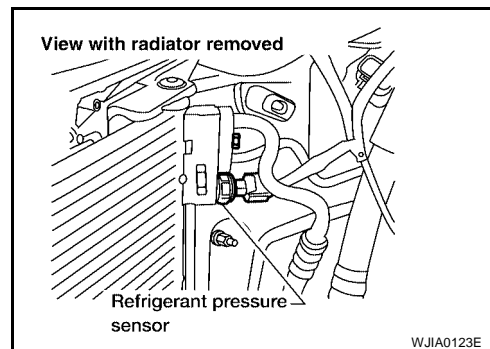

## Removal and Installation for Condenser

EJS000YT

### REMOVAL

1. Discharge the refrigerant. Refer to [ATC-119, "HFC-134a \(R-134a\) Service Procedure"](#).
2. Remove the radiator. Refer to [CO-34, "RADIATOR"](#).

### CAUTION:

Be careful not to damage the core surface of the condenser and the radiator.


# REFRIGERANT LINES

3. Disconnect the high-pressure flexible hose and the high-pressure pipe from the condenser.


**CAUTION:**

Cap or wrap the joint of the pipe with suitable material such as vinyl tape to avoid the entry of air.

4. Disconnect the refrigerant pressure sensor connector.
5. Remove the front fascia. Refer to [EI-13, "FRONT BUMPER"](#).

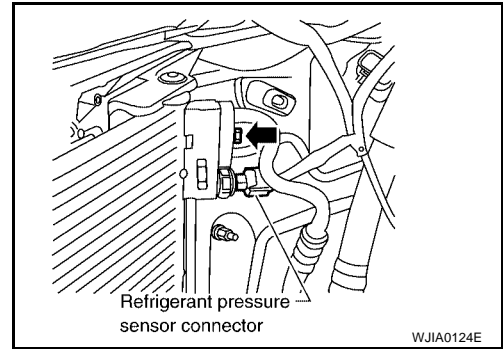

6. Remove the mounting nuts from condenser mounting brackets.

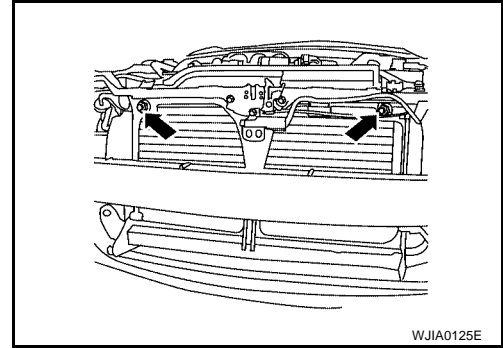

## INSTALLATION

**CAUTION:**

- Replace the O-rings of the high-pressure pipe and the high-pressure flexible hose with new ones, then apply compressor oil to them after installing them.
- When charging refrigerant, check for leaks.

High-pressure flexible hose and pipe mounting bolt


Tightening torque : 7.8 - 19.6 N·m (0.8 - 1.9 kg·m, 69 - 173 in·lb)

Condenser mounting nuts

Tightening torque : 5.0 - 6.79 N·m (0.51 - 0.69 kg·m, 45 - 60 in·lb)

## Removal and Installation for Liquid Tank

EJS000YU

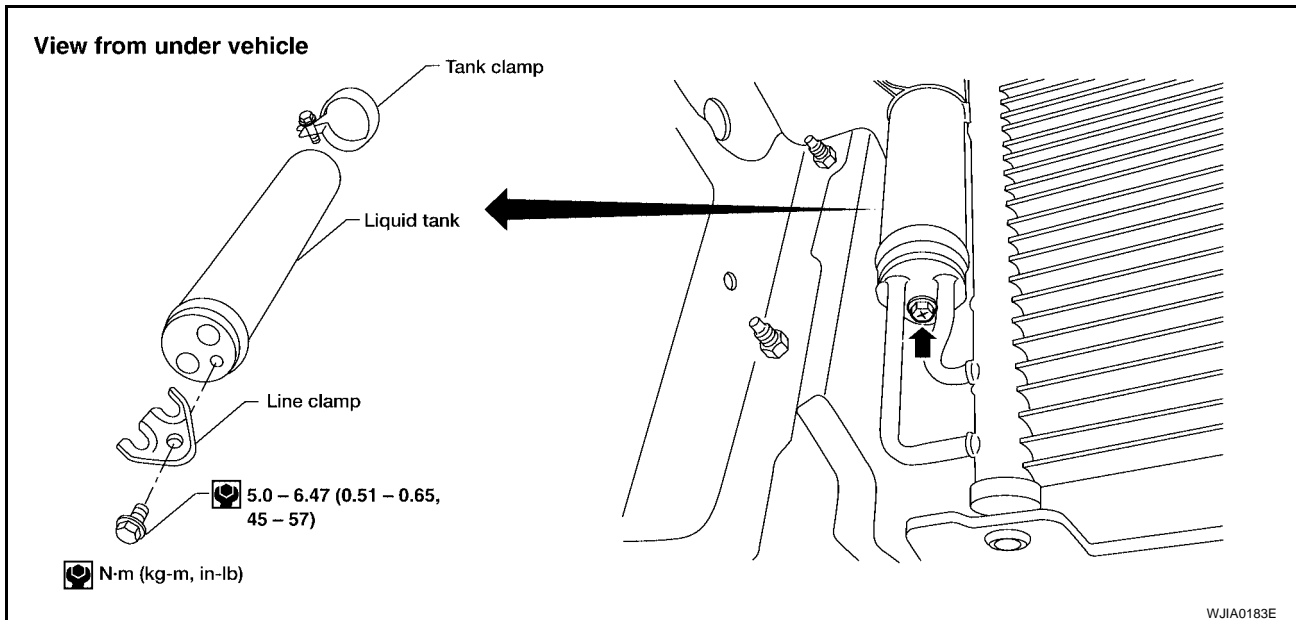

1. Discharge the refrigerant. Refer to [ATC-119, "HFC-134a \(R-134a\) Service Procedure"](#).
2. Remove the battery.

# REFRIGERANT LINES

3. Remove the hood switch (if equipped).
4. Remove the engine undercover using power tools.
5. Remove the bolt and line clamp.
6. Loosen the tank clamp and remove the liquid tank.

## Removal and Installation for Evaporator REMOVAL

EJS00315

1. Evacuate and recover the A/C system refrigerant. Refer to [ATC-119, "HFC-134a \(R-134a\) Service Procedure"](#).
2. Disconnect the battery negative terminal.
3. Disconnect the air cleaner to electronic throttle control actuator tube. Refer to [EM-16, "AIR CLEANER AND AIR DUCT"](#) (QR25DE), [EM-112, "AIR CLEANER AND AIR DUCT"](#) (VQ35DE).

### NOTE:


The tube is located between the air cleaner assembly and the intake manifold and is removed to access the expansion valve.

4. Disconnect the A/C pipe from the expansion valve.


### CAUTION:

**Cap or wrap the joint of the pipe with suitable material such as vinyl tape to avoid the entry of air.**


5. Remove the cooler grommet.
6. Remove the expansion valve.
7. Remove the center console side finisher RH. Refer to [IP-16, "Center Console"](#).
8. Remove the glove box assembly. Refer to [IP-15, "Glove Box"](#).
9. Remove the ECM.
  - Disconnect the ECM connector.
  - Remove the wire harness from the ECM mounting bracket.
  - Remove the two ECM mounting bracket nuts and disconnect the ground wire.
10. Remove the blower unit. Refer to [ATC-108, "BLOWER UNIT"](#).

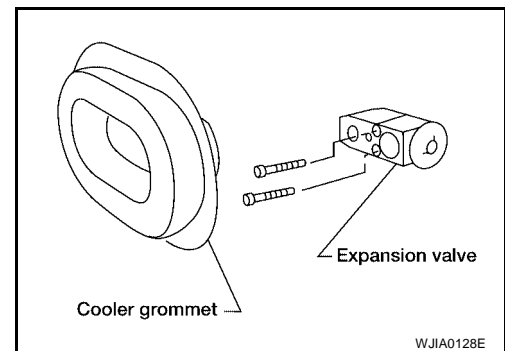

11. Remove the heater core cover.

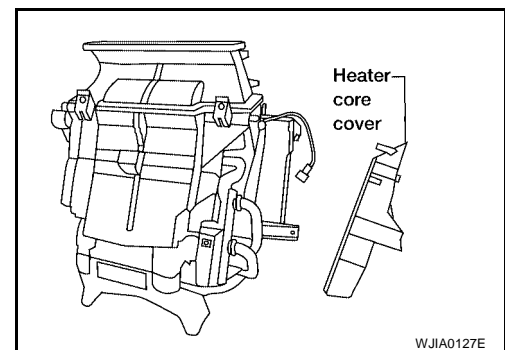

12. Remove the evaporator cover.

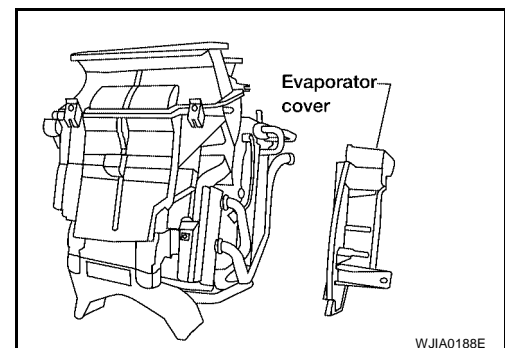




# REFRIGERANT LINES

13. Remove the evaporator.

- Remove the thermo control amplifier.
- Remove the intake sensor.

**CAUTION:**

- **Mark the mounting position of the intake sensor and thermo control amplifier.**

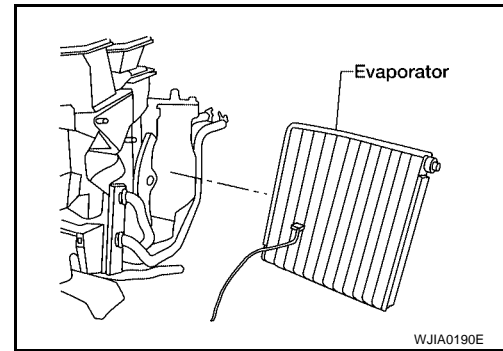

## INSTALLATION

Installation is in the reverse order of removal.

**Expansion valve mounting bolts : 2.9 - 5.0 N·m (0.29 - 0.51 kg·m, 26 - 44 in-lb)**

**CAUTION:**

- **Replace the O-rings with new ones, then apply compressor oil to them when installing them.**

## Removal and Installation for Expansion Valve REMOVAL

EJS00316

1. Evacuate and recover the A/C system refrigerant. Refer to [ATC-119, "HFC-134a \(R-134a\) Service Procedure"](#).
2. Disconnect the air cleaner to electronic throttle control actuator tube. Refer to [EM-16, "AIR CLEANER AND AIR DUCT"](#) (QR25DE), [EM-112, "AIR CLEANER AND AIR DUCT"](#) (VQ35DE).

**NOTE:**


The tube is located between the air cleaner assembly and the intake manifold and is removed to access the expansion valve.

3. Disconnect the A/C pipe from the expansion valve.

**CAUTION:**

**Cap or wrap the joint of the pipe with suitable material such as vinyl tape to avoid the entry of air.**

4. Remove the cooler grommet.
5. Remove the expansion valve.

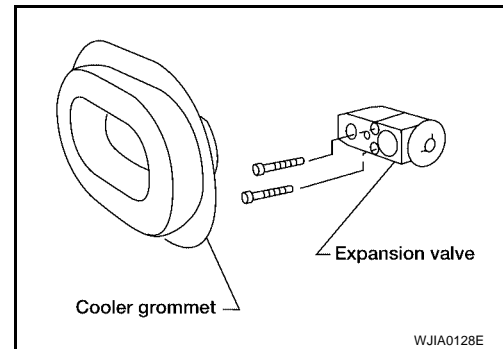

## INSTALLATION

Installation is in the reverse order of removal.

**Expansion valve mounting bolts : 2.9 - 5.0 N·m (0.29 - 0.51 kg·m, 26 - 44 in-lb)**

**CAUTION:**

- **Replace the O-rings with new ones, then apply compressor oil to them when installing them.**

## Checking for Refrigerant Leaks

EJS000YX

Perform a visual inspection of all refrigeration parts, fittings, hoses and components for signs of A/C lubricant leakage, damage and corrosion. A/C lubricant leakage may indicate an area of refrigerant leakage. Allow extra inspection time in these areas when using either an electronic refrigerant leak detector or fluorescent dye leak detector.

If dye is observed, confirm the leak with an electronic refrigerant leak detector. It is possible a prior leak was repaired and not properly cleaned.

When searching for leaks, do not stop when one leak is found but continue to check for additional leaks at all system components and connections.

# REFRIGERANT LINES

When searching for refrigerant leaks using an electronic leak detector, move the probe along the suspected leak area at 25 - 50 mm (1 - 2 in) per second and no further than 6 mm (1/4 in) from the component.

## CAUTION:

**Moving the electronic leak detector probe slower and closer to the suspected leak area will improve the chances of finding a leak.**

## Checking System for Leaks Using the Fluorescent Leak Detector

EJS000YY

1. Check A/C system for leaks using the UV lamp and safety glasses (J-42220) in a low sunlight area (area without windows preferable). Illuminate all components, fittings and lines. The dye will appear as a bright green/yellow area at the point of leakage. Fluorescent dye observed at the evaporator drain opening indicates an evaporator core assembly (tubes, core or TXV) leak.
2. If the suspected area is difficult to see, use an adjustable mirror or wipe the area with a clean shop rag or cloth, with the UV lamp for dye residue.
3. After the leak is repaired, remove any residual dye using dye cleaner (J-43872) to prevent future misdiagnosis.
4. Perform a system performance check and verify the leak repair with an approved electronic refrigerant leak detector.

## NOTE:

Other gases in the work area or substances on the A/C components, for example, anti-freeze, windshield washer fluid, solvents and lubricants, may falsely trigger the leak detector. Make sure the surfaces to be checked are clean.

Clean with a dry cloth or blow off with shop air.

Do not allow the sensor tip of the detector to contact with any substance. This can also cause false readings and may damage the detector.

## Dye Injection

EJS000YZ

(This procedure is only necessary when recharging the system or when the compressor has seized and was replaced.)

1. Check A/C system static (at rest) pressure. Pressure must be at least 345 kPa (50 psi).
2. Pour one bottle (1/4 ounce / 7.4 cc) of the A/C refrigerant dye into the injector tool (J-41459).
3. Connect the injector tool to the A/C LOW PRESSURE side service fitting.
4. Start engine and switch A/C ON.
5. When the A/C operating (compressor running), inject one bottle (1/4 ounce / 7.4 cc) of fluorescent dye through the low-pressure service valve using dye injector tool J-41459 (refer to the manufacturer's operating instructions).
6. With the engine still running, disconnect the injector tool from the service fitting.

## CAUTION:

**Be careful the A/C system or replacing a component, pour the dye directly into the open system connection and proceed with the service procedures.**


7. Operate the A/C system for a minimum of 20 minutes to mix the dye with the system oil. Depending on the leak size, operating conditions and location of the leak, it may take from minutes to days for the dye to penetrate a leak and become visible.

## Electronic Refrigerant Leak Detector PRECAUTIONS FOR HANDLING LEAK DETECTOR

EJS000Z0


When performing a refrigerant leak check, use a J-41995 A/C leak detector or equivalent. Ensure that the instrument is calibrated and set properly per the operating instructions.

The leak detector is a delicate device. In order to use the leak detector properly, read the operating instructions and perform any specified maintenance.

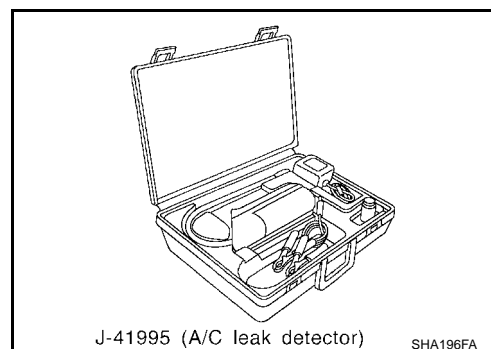


# REFRIGERANT LINES


1. Position probe approximately 5 mm (3/16 in) away from point to be checked.

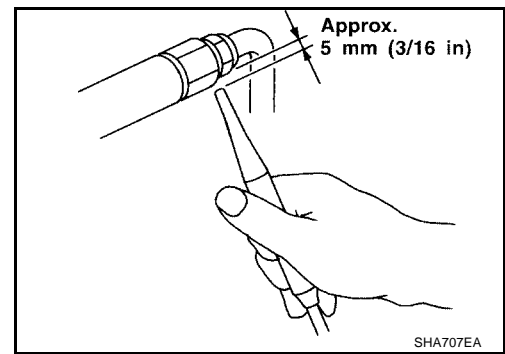

2. When testing, circle each fitting completely with probe.

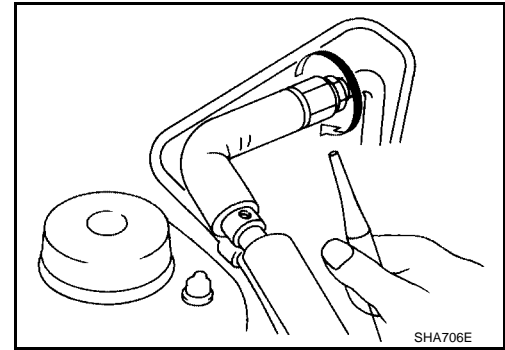

3. Move probe along component approximately 25 to 50 mm (1 to 2 in)/sec.

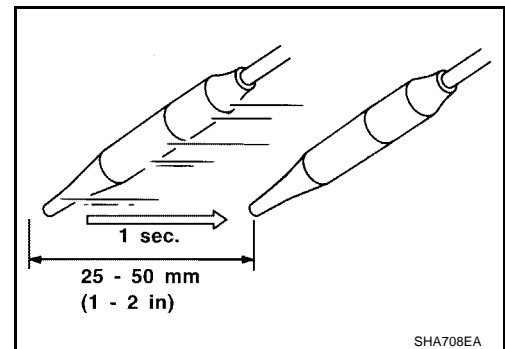

## CHECKING PROCEDURE

To prevent inaccurate or false readings, make sure there is no refrigerant vapor, shop chemicals, or cigarette smoke in the vicinity of the vehicle. Perform the leak test in calm area (low air/wind movement) so that the leaking refrigerant is not dispersed.

1. Turn engine OFF.
2. Connect a suitable A/C manifold gauge set to the A/C service ports.
3. Check if the A/C refrigerant pressure is at least 345 kPa (3.52 kg/cm<sup>2</sup>, 50 psi) above 16°C (61°F). If less than specification, recover/evacuate and recharge the system with the specified amount of refrigerant.

### NOTE:

At temperatures below 16°C (61°F), leaks may not be detected since the system may not reach 345 kPa (3.54 kg/cm<sup>2</sup>, 50 psi).

4. Conduct the leak test from the high side (compressor discharge a to evaporator inlet f) to the low side (evaporator drain hose g to shaft seal l). Refer to [ATC-121](#). Perform a leak check for the following areas carefully. Clean the component to be checked and move the leak detected probe completely around the connection/component.

Compressor

Check the fitting of high- and low-pressure hoses, relief valve and shaft seal.

Liquid tank

Check the refrigerant pressure sensor.

Service valves

Check all around the service valves. Ensure service valve caps are secured on the service valves (to prevent leaks).

## REFRIGERANT LINES

### NOTE:

After removing A/C manifold gauge set from service valves, wipe any residue from valves to prevent any false readings by leak detector.


### Cooling unit (Evaporator)

With engine OFF, turn blower fan on "High" for at least 15 seconds to dissipate any refrigerant trace in the cooling unit. Wait a minimum of 10 minutes accumulation time (refer to the manufacturer's recommended procedure for actual wait time) before inserting the leak detector probe into the drain hose.

Keep the probe inserted for at least 10 seconds. Use caution not to contaminate the probe tip with water or dirt that may be in the drain hose.

5. If a leak detector detects a leak, verify at least once by blowing compressed air into area of suspected leak, then repeat check as outlined above.
6. Do not stop when one leak is found. Continue to check for additional leaks at all system components. If no leaks are found, perform steps 7 - 10.
7. Start engine.
8. Set the heater A/C control as follows;
  - a. A/C switch: ON
  - b. Face mode
  - c. Intake position: Recirculation
  - d. Max cold temperature
  - e. Fan speed: High
9. Run engine at 1,500 rpm for at least 2 minutes.
10. Turn engine off and perform leak check again following steps 4 through 6 above.

Refrigerant leaks should be checked immediately after stopping the engine. Begin with the leak detector at the compressor. The pressure on the high pressure side will gradually drop after refrigerant circulation stops and pressure on the low pressure side will gradually rise, as shown in the graph. Some leaks are more easily detected when pressure is high.

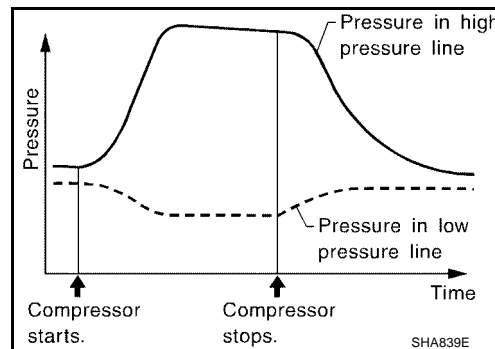

11. Before connecting ACR4 to vehicle, check ACR4 gauges. No refrigerant pressure should be displayed. If pressure is displayed, recover refrigerant from equipment lines and then check refrigerant purity.
12. Confirm refrigerant purity in supply tank using ACR4 and refrigerant identifier.
13. Confirm refrigerant purity in vehicle A/C system using ACR4 and refrigerant identifier.
14. Discharge A/C system using approved refrigerant recovery equipment. Repair the leaking fitting or component as necessary.
15. Evacuate and recharge A/C system and perform the leak test to confirm no refrigerant leaks.
16. Conduct A/C performance test to ensure system works properly.

# SERVICE DATA AND SPECIFICATIONS (SDS)

## SERVICE DATA AND SPECIFICATIONS (SDS)

PFP:00030

### Service Data and Specifications (SDS) COMPRESSOR

EJS000Z1

Model	CALSONIC KANSEI make
Type	DKS-17D
Displacement cm <sup>3</sup> (cu in)/rev	175.5 (10.7)/rev
Cylinder bore × stroke mm (in)	30.5 (1.201) × 21.4 (0.84)
Direction of rotation	Clockwise (viewed from drive end)
Drive belt	Poly V

### LUBRICANT

Model	CALSONIC KANSEI make DKS-17D	
Name	Nissan A/C System Oil Type DH-PS	
Part number	KLH00-PAGS0	
Capacity m <sup>l</sup> (US fl oz, Imp fl oz)	Total in system	150 (5.03, 5.3)
	Compressor (Service part) charging amount	150 (5.03, 5.3)

### REFRIGERANT

Type	HFC-134a (R-134a)
Capacity kg (lb)	0.475 - 0.525 (1.045 - 1.155)

### ENGINE IDLING SPEED

Refer to [EC-656, "Idle Speed and Ignition Timing Check"](#) .

### BELT TENSION

Refer to [MA-21, "ENGINE MAINTENANCE \(VQ35DE ENGINE\)"](#) .

A

B

C

D

E

F

G

H

I

ATC

K

L

M

## SERVICE DATA AND SPECIFICATIONS (SDS)

---