

SECTION **LAN**
LAN SYSTEM

A
B
C

CONTENTS

D
E

CAN

| | | | |
|---|-----------|--|-----------|
| PRECAUTIONS | 3 | CAN Communication Circuit Check | 43 |
| Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" | 3 | IPDM E/R Ignition Relay Circuit Check | 44 |
| Precautions When Using CONSULT-II | 3 | Component Inspection | 44 |
| CHECK POINTS FOR USING CONSULT-II | 3 | ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION | 44 |
| Precautions For Trouble Diagnosis | 3 | CAN SYSTEM (TYPE 2) | 45 |
| CAN SYSTEM | 3 | System Description | 45 |
| Precautions For Harness Repair | 4 | Component Parts and Harness Connector Location | 45 |
| CAN SYSTEM | 4 | Schematic | 46 |
| CAN COMMUNICATION | 5 | Wiring Diagram - CAN - | 47 |
| System Description | 5 | Work Flow | 50 |
| CAN Communication Unit | 5 | CHECK SHEET | 51 |
| TYPE 1/ TYPE 2 | 6 | CHECK SHEET RESULTS (EXAMPLE) | 53 |
| TYPE 3 | 8 | Circuit Check Between TCM and Driver Seat Control Unit | 67 |
| TYPE 4/ TYPE 5 | 11 | Circuit Check Between Driver Seat Control Unit and Data Link Connector | 68 |
| TYPE 6 | 13 | Circuit Check Between Data Link Connector and IPDM E/R | 69 |
| CAN SYSTEM (TYPE 1) | 16 | ECM Circuit Check | 70 |
| System Description | 16 | TCM Circuit Check | 70 |
| Component Parts and Harness Connector Location | 16 | Driver Seat Control Unit Circuit Check | 71 |
| Schematic | 17 | Combination Meter Circuit Check | 71 |
| Wiring Diagram - CAN - | 18 | BCM Circuit Check | 72 |
| Work Flow | 21 | Data Link Connector Circuit Check | 72 |
| CHECK SHEET | 22 | Steering Angle Sensor Circuit Check | 73 |
| CHECK SHEET RESULTS (EXAMPLE) | 24 | Front Air Control Circuit Check | 73 |
| Circuit Check Between TCM and Data Link Connector | 36 | ABS Actuator and Electric Unit (Control Unit) Circuit Check | 74 |
| Circuit Check Between Data Link Connector and IPDM E/R | 37 | IPDM E/R Circuit Check | 74 |
| ECM Circuit Check | 38 | CAN Communication Circuit Check | 75 |
| TCM Circuit Check | 39 | IPDM E/R Ignition Relay Circuit Check | 75 |
| Combination Meter Circuit Check | 39 | Component Inspection | 76 |
| BCM Circuit Check | 40 | ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION | 76 |
| Data Link Connector Circuit Check | 40 | CAN SYSTEM (TYPE 3) | 77 |
| Steering Angle Sensor Circuit Check | 41 | System Description | 77 |
| Front Air Control Circuit Check | 41 | Component Parts and Harness Connector Location | 77 |
| ABS Actuator and Electric Unit (Control Unit) Circuit Check | 42 | Schematic | 78 |
| IPDM E/R Circuit Check | 42 | Wiring Diagram - CAN - | 79 |

F
G
H
I
J
LAN

L
M

| | | | |
|--|------------|--|------------|
| Work Flow | 82 | Work Flow | 148 |
| CHECK SHEET | 84 | CHECK SHEET | 150 |
| CHECK SHEET RESULTS (EXAMPLE) | 86 | CHECK SHEET RESULTS (EXAMPLE) | 152 |
| Circuit Check Between TCM and Driver Seat Control Unit | 101 | Circuit Check Between TCM and Driver Seat Control Unit | 167 |
| Circuit Check Between Driver Seat Control Unit and Data Link Connector | 102 | Circuit Check Between Driver Seat Control Unit and Data Link Connector | 168 |
| Circuit Check Between Data Link Connector and IPDM E/R | 103 | Circuit Check Between Data Link Connector and IPDM E/R | 169 |
| ECM Circuit Check | 104 | ECM Circuit Check | 170 |
| TCM Circuit Check | 104 | TCM Circuit Check | 170 |
| Driver Seat Control Unit Circuit Check | 105 | Driver Seat Control Unit Circuit Check | 171 |
| Combination Meter Circuit Check | 105 | Combination Meter Circuit Check | 171 |
| Display Control Unit Circuit Check | 106 | BCM Circuit Check | 172 |
| BCM Circuit Check | 106 | Data Link Connector Circuit Check | 172 |
| Data Link Connector Circuit Check | 107 | Steering Angle Sensor Circuit Check | 173 |
| Steering Angle Sensor Circuit Check | 107 | Front Air Control Circuit Check | 173 |
| Front Air Control Circuit Check | 108 | Transfer Control Unit Circuit Check | 174 |
| ABS Actuator and Electric Unit (Control Unit) Circuit Check | 108 | ABS Actuator and Electric Unit (Control Unit) Circuit Check | 174 |
| IPDM E/R Circuit Check | 109 | IPDM E/R Circuit Check | 175 |
| CAN Communication Circuit Check | 109 | CAN Communication Circuit Check | 175 |
| IPDM E/R Ignition Relay Circuit Check | 110 | IPDM E/R Ignition Relay Circuit Check | 176 |
| Component Inspection | 110 | Component Inspection | 176 |
| ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION | 110 | ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION | 176 |
| CAN SYSTEM (TYPE 4) | 111 | CAN SYSTEM (TYPE 6) | 177 |
| System Description | 111 | System Description | 177 |
| Component Parts and Harness Connector Location | 111 | Component Parts and Harness Connector Location | 177 |
| Schematic | 112 | Schematic | 178 |
| Wiring Diagram - CAN - | 113 | Wiring Diagram - CAN - | 179 |
| Work Flow | 116 | Work Flow | 182 |
| CHECK SHEET | 118 | CHECK SHEET | 184 |
| CHECK SHEET RESULTS (EXAMPLE) | 120 | CHECK SHEET RESULTS (EXAMPLE) | 186 |
| Circuit Check Between TCM and Data Link Connector | 133 | Circuit Check Between TCM and Driver Seat Control Unit | 202 |
| Circuit Check Between Data Link Connector and IPDM E/R | 134 | Circuit Check Between Driver Seat Control Unit and Data Link Connector | 203 |
| ECM Circuit Check | 135 | Circuit Check Between Data Link Connector and IPDM E/R | 204 |
| TCM Circuit Check | 136 | ECM Circuit Check | 205 |
| Combination Meter Circuit Check | 136 | TCM Circuit Check | 205 |
| BCM Circuit Check | 137 | Driver Seat Control Unit Circuit Check | 206 |
| Data Link Connector Circuit Check | 137 | Combination Meter Circuit Check | 206 |
| Steering Angle Sensor Circuit Check | 138 | Display Control Unit Circuit Check | 207 |
| Front Air Control Circuit Check | 138 | BCM Circuit Check | 207 |
| Transfer Control Unit Circuit Check | 139 | Data Link Connector Circuit Check | 208 |
| ABS Actuator and Electric Unit (Control Unit) Circuit Check | 139 | Steering Angle Sensor Circuit Check | 208 |
| IPDM E/R Circuit Check | 140 | Front Air Control Circuit Check | 209 |
| CAN Communication Circuit Check | 141 | Transfer Control Unit Circuit Check | 209 |
| IPDM E/R Ignition Relay Circuit Check | 141 | ABS Actuator and Electric Unit (Control Unit) Circuit Check | 210 |
| Component Inspection | 142 | IPDM E/R Circuit Check | 210 |
| ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION | 142 | CAN Communication Circuit Check | 211 |
| CAN SYSTEM (TYPE 5) | 143 | IPDM E/R Ignition Relay Circuit Check | 211 |
| System Description | 143 | Component Inspection | 212 |
| Component Parts and Harness Connector Location | 143 | ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION | 212 |
| Schematic | 144 | | |
| Wiring Diagram - CAN - | 145 | | |

PRECAUTIONS

PF0:00001

Precautions for Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER”

UKS0017I

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER”, used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

Precautions When Using CONSULT-II

UKS0017J

When connecting CONSULT-II to data link connector, connect them through CONSULT-II CONVERTER.

CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carry out CAN communication.

CHECK POINTS FOR USING CONSULT-II

1. Has CONSULT-II been used without connecting CONSULT-II CONVERTER on this vehicle?
 - If YES, GO TO 2.
 - If NO, GO TO 5.
2. Is there any indication other than indications relating to CAN communication system in the self-diagnosis results?
 - If YES, GO TO 3.
 - If NO, GO TO 4.
3. Based on self-diagnosis results unrelated to CAN communication, carry out the inspection.
4. Malfunctions may be detected in self-diagnosis depending on control units carrying out CAN communication. Therefore, erase the self-diagnosis results.
5. Diagnose CAN communication system. Refer to [LAN-5, "CAN Communication Unit"](#) .

Precautions For Trouble Diagnosis CAN SYSTEM

UKS0017K


- Do not apply voltage of 7.0 V or higher to the measurement terminals.
- Use the tester with its open terminal voltage being 7.0 V or less.
- Be sure to turn ignition switch off and disconnect negative battery terminal before checking the circuit.

A
B
C
D
E
F
G
H
I
J
L
M


LAN

Precautions For Harness Repair CAN SYSTEM

- Solder the repaired parts, and wrap with tape. [Frays of twisted line must be within 110 mm (4.33 in).]

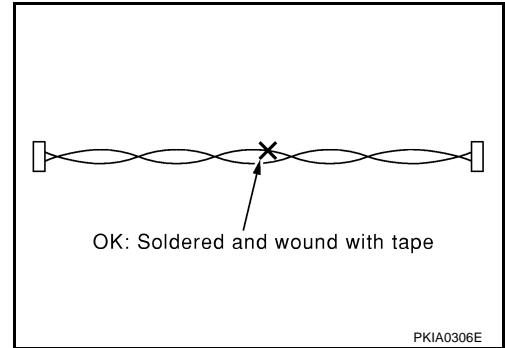

- Do not perform bypass wire connections for the repair parts. (The spliced wire will become separated and the characteristics of twisted line will be lost.)

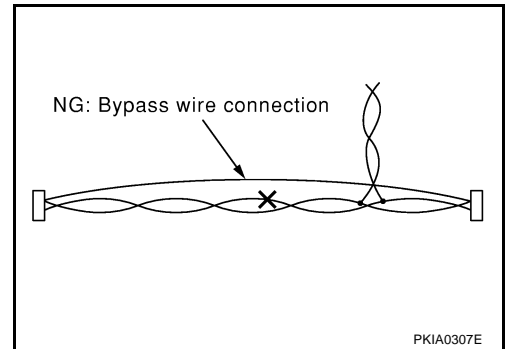

CAN COMMUNICATION

System Description

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Unit

Go to CAN system, when selecting your CAN system type from the following table.


| | | | | | | |
|------------------------------|------------------------|------------------------|------------------------|-------------------------|-------------------------|-------------------------|
| Body type | Wagon | | | | | |
| Axle | 2WD | | | 4WD | | |
| Engine | VK56DE | | | | | |
| Transmission | A/T | | | | | |
| Brake control | VDC | | | | | |
| Automatic drive positioner | | × | × | | × | × |
| Navigation system | | | × | | | × |
| Automatic air conditioner | | | × | | | × |
| CAN system type | 1 | 2 | 3 | 4 | 5 | 6 |
| CAN system trouble diagnosis | LAN-16 | LAN-45 | LAN-77 | LAN-111 | LAN-143 | LAN-177 |

×: Applicable


NOTE:

Confirming the presence of the following items helps to identify CAN system type.

- Models with automatic drive positioner

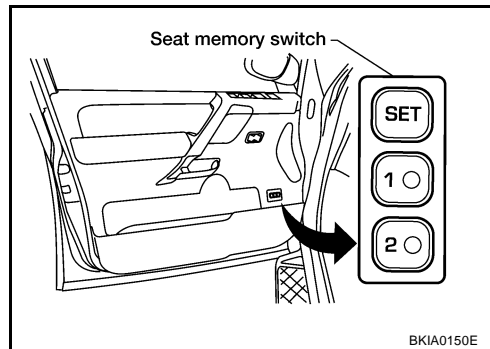


- Models with 4WD

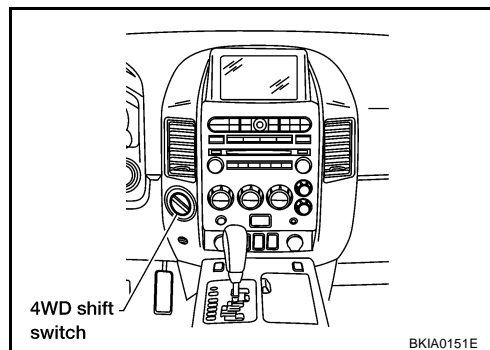

CAN COMMUNICATION


[CAN]

- Models with navigation system

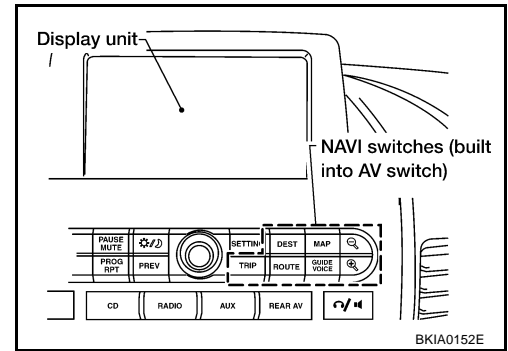


TYPE 1/ TYPE 2 System diagram

- Type 1

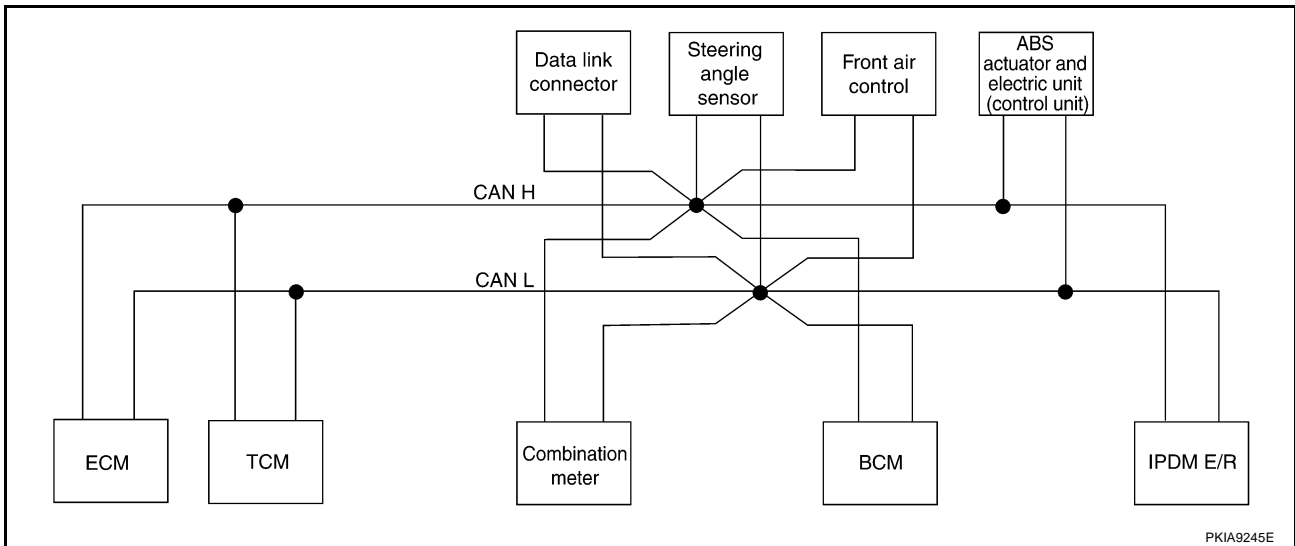

- Type 2

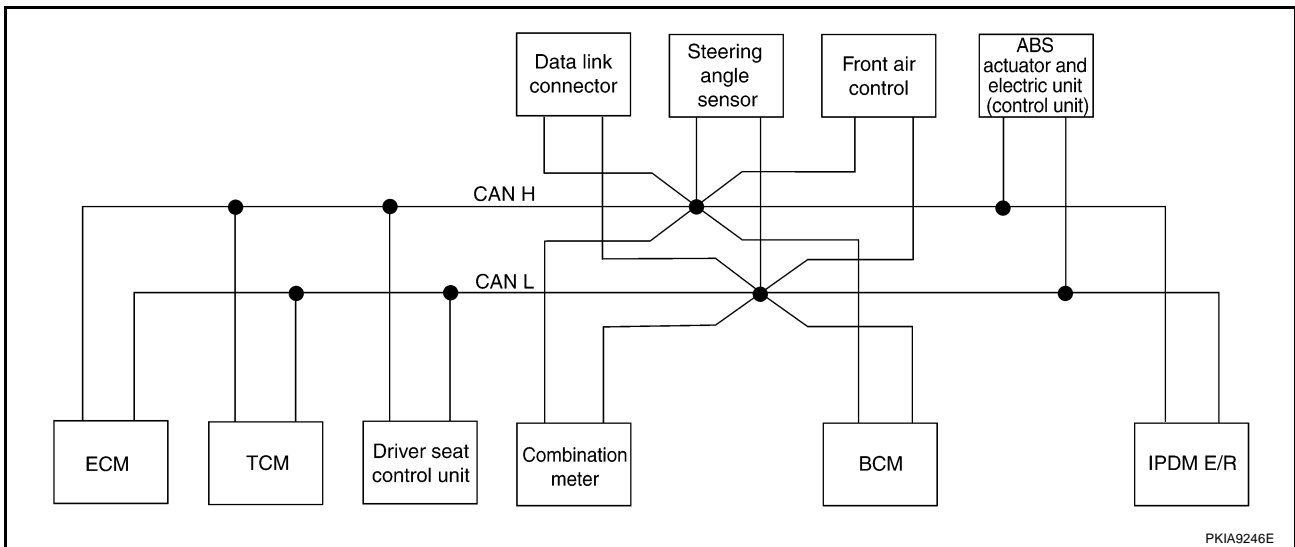

CAN COMMUNICATION

[CAN]

Input/output signal chart

T: Transmit R: Receive

| Signals | ECM | TCM | Driver seat control unit | Combination meter | BCM | Steering angle sensor | Frontair control | ABS actuator and electric unit (control unit) | IPDM E/R |
|---------------------------------------|-----|-----|--------------------------|-------------------|-----|-----------------------|------------------|---|----------|
| Engine speed signal | T | R | | R | | | R | R | |
| Engine status signal | T | | | | R | | R | | |
| Engine coolant temperature signal | T | | | R | | | R | | |
| A/T self-diagnosis signal | R | T | | | | | | | |
| Accelerator pedal position signal | T | R | | | | | | R | |
| Closed throttle position signal | T | R | | | | | | | |
| Wide open throttle position signal | T | R | | | | | | | |
| Battery voltage signal | T | R | | | | | | | |
| Key switch signal | | | R | | T | | | | |
| Ignition switch signal | | | R | | T | | | | |
| P range signal | | T | R | R | | | | | |
| Stop lamp switch signal | | R | | T | | | | | |
| Turbine revolution signal | R | T | | | | | | | |
| Output shaft revolution signal | R | T | | | | | | | |
| A/C switch signal | R | | | | T | | R | | |
| A/C compressor request signal | T | | | | | | | | R |
| Blower fan motor switch signal | R | | | | T | | R | | |
| Cooling fan speed request signal | T | | | | | | R | | R |
| Position light request signal | | | | R | T | | | | R |
| Low beam request signal | | | | | T | | | | R |
| Low beam status signal | R | | | | | | | | T |
| High beam request signal | | | | R | T | | | | R |
| High beam status signal | R | | | | | | | | T |
| Front fog light request signal | | | | | T | | | | R |
| Day time running light request signal | | | | R | T | | | | |
| Vehicle speed signal | R | R | R | T | R | | R | T | |
| Sleep wake up signal | | | R | R | T | | | | R |
| Door switch signal | | | R | R | T | | | | R |
| Turn indicator signal | | | | R | T | | | | |
| Key fob ID signal | | | R | | T | | | | |
| Key fob door unlock signal | | | R | | T | | | | |
| Buzzer output signal | | | | R | T | | | | |
| Fuel level sensor signal | R | | | T | | | | | |
| ASCD SET lamp signal | T | | | R | | | | | |
| ASCD CRUISE lamp signal | T | | | R | | | | | |
| Malfunction indicator lamp signal | T | | | R | | | | | |
| ASCD operation signal | T | R | | | | | | | |
| ASCD OD cancel request | T | R | | | | | | | |

A
B
C
D
E
F
G
H
I
J
K
L
M

LAN

CAN COMMUNICATION


[CAN]

| Signals | ECM | TCM | Driver seat control unit | Combination meter | BCM | Steering angle sensor | Front air control | ABS actuator and electric unit (control unit) | IPDM E/R |
|-------------------------------------|-----|-----|--------------------------|-------------------|-----|-----------------------|-------------------|---|----------|
| Front wiper request signal | | | | | T | | | | R |
| Front wiper stop position signal | | | | | R | | | | T |
| Rear window defogger switch signal | | | | | T | | R | | R |
| Rear window defogger control signal | R | | | | | | | | T |
| Theft warning horn request signal | | | | | T | | | | R |
| Horn chirp signal | | | | | T | | | | R |
| Steering angle sensor signal | | | | | | T | | R | |
| ABS warning lamp signal | | | | R | | | | T | |
| VDC OFF indicator lamp signal | | | | R | | | | T | |
| SLIP indicator lamp signal | | | | R | | | | T | |
| Brake warning lamp signal | | | | R | | | | T | |
| A/T CHECK indicator lamp signal | | T | | R | | | | | |
| System setting signal | | | T | | R | | | | |
| | | | R | | T | | | | |
| A/T position indicator lamp signal | | T | | R | | | | | |
| 1st position switch signal | | R | | T | | | | | |
| 4th position switch signal | | R | | T | | | | | |
| Tow mode switch signal | | R | | T | | | | | |
| A/T fluid temperature sensor signal | | T | | R | | | | | |

TYPE 3

System diagram

- Type 3

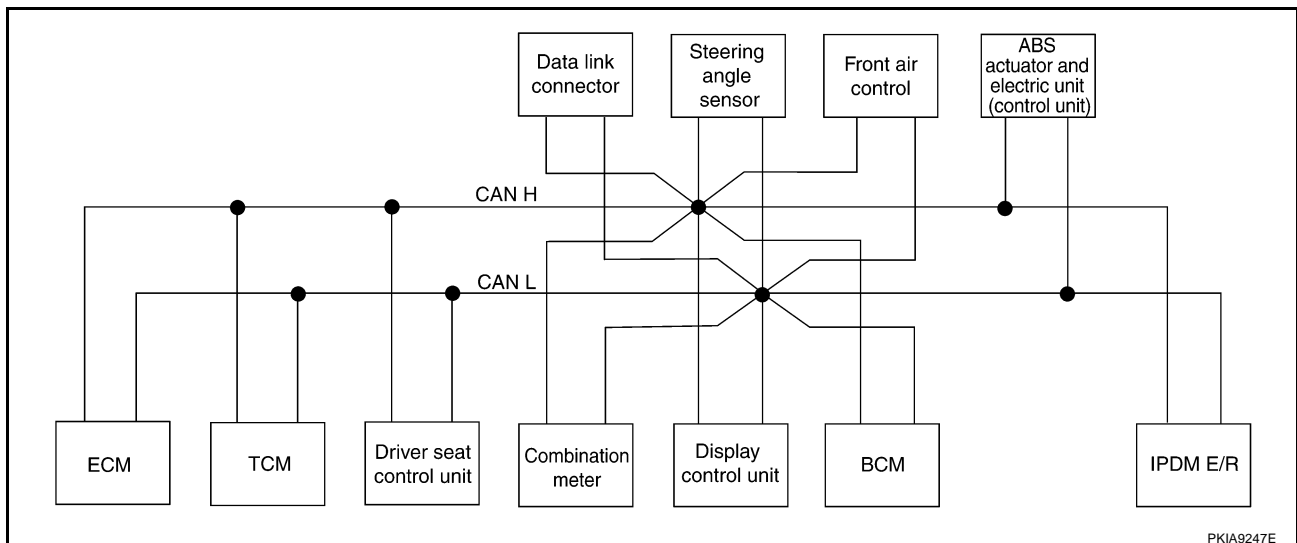

CAN COMMUNICATION

[CAN]

Input/output signal chart

T: Transmit R: Receive

| Signals | ECM | TCM | Driver seat control unit | Combination meter | Display control unit | BCM | Steering angle sensor | Front air control | ABS actuator and electric unit (control unit) | IPDM E/R |
|---------------------------------------|-----|-----|--------------------------|-------------------|----------------------|-----|-----------------------|-------------------|---|----------|
| Engine speed signal | T | R | | R | R | | | R | R | |
| Engine status signal | T | | | | | R | | R | | |
| Engine coolant temperature signal | T | | | R | | | | R | | |
| A/T self-diagnosis signal | R | T | | | | | | | | |
| Accelerator pedal position signal | T | R | | | | | | | R | |
| Closed throttle position signal | T | R | | | | | | | | |
| Wide open throttle position signal | T | R | | | | | | | | |
| Battery voltage signal | T | R | | | | | | | | |
| Key switch signal | | | R | | | T | | | | |
| Ignition switch signal | | | R | | | T | | | | |
| P range signal | | T | R | R | | | | | | |
| Stop lamp switch signal | | R | | T | | | | | | |
| Fuel consumption monitor signal | T | | | R | | | | | | |
| | | | | T | R | | | | | |
| Turbine revolution signal | R | T | | | | | | | | |
| Output shaft revolution signal | R | T | | | | | | | | |
| A/C switch signal | R | | | | | T | | | | |
| A/C compressor request signal | T | | | | | | | | | R |
| Blower fan motor switch signal | R | | | | | T | | R | | |
| A/C switch/indicator signal | | | | | T | | | R | | |
| | | | | | R | | | T | | |
| Cooling fan speed request signal | T | | | | | | | R | | R |
| Position light request signal | | | | R | | T | | | | R |
| Low beam request signal | | | | | | T | | | | R |
| Low beam status signal | R | | | | | | | | | T |
| High beam request signal | | | | R | | T | | | | R |
| High beam status signal | R | | | | | | | | | T |
| Front fog light request signal | | | | | | T | | | | R |
| Day time running light request signal | | | | R | | T | | | | |
| Vehicle speed signal | | | | R | | | | R | T | |
| | R | R | R | T | R | R | | R | | |
| Sleep wake up signal | | | R | R | | T | | | | R |
| Door switch signal | | | R | R | R | T | | | | R |
| Turn indicator signal | | | | R | | T | | | | |
| Key fob ID signal | | | R | | | T | | | | |
| Key fob door unlock signal | | | R | | | T | | | | |
| Buzzer output signal | | | | R | | T | | | | |
| Fuel level sensor signal | R | | | T | | | | | | |

A
B
C
D
E
F
G
H
I
J
LAN
L
M

CAN COMMUNICATION


[CAN]

| Signals | ECM | TCM | Driver seat control unit | Combination meter | Display control unit | BCM | Steering angle sensor | Front air control | ABS actuator and electric unit (control unit) | IPDM E/R |
|-------------------------------------|-----|-----|--------------------------|-------------------|----------------------|-----|-----------------------|-------------------|---|----------|
| Fuel level low warning signal | | | | T | R | | | | | |
| ASCD SET lamp signal | T | | | R | | | | | | |
| ASCD CRUISE lamp signal | T | | | R | | | | | | |
| Malfunction indicator lamp signal | T | | | R | | | | | | |
| Front wiper request signal | | | | | | T | | | | R |
| Front wiper stop position signal | | | | | | R | | | | T |
| Rear window defogger switch signal | | | | | | T | | R | | R |
| Rear window defogger control signal | R | | | | R | | | | | T |
| Theft warning horn request signal | | | | | | T | | | | R |
| Horn chirp signal | | | | | | T | | | | R |
| Steering angle sensor signal | | | | | | | T | | R | |
| ABS warning lamp signal | | | | R | | | | | T | |
| VDC OFF indicator lamp signal | | | | R | | | | | T | |
| SLIP indicator lamp signal | | | | R | | | | | T | |
| Brake warning lamp signal | | | | R | | | | | T | |
| System setting signal | | | R | | T | R | | | | |
| | | | T | | R | T | | | | |
| Distance to empty signal | | | | T | R | | | | | |
| ASCD operation signal | T | R | | | | | | | | |
| ASCD OD cancel request | T | R | | | | | | | | |
| A/T CHECK indicator lamp signal | | T | | R | | | | | | |
| A/T position indicator lamp signal | | T | | R | | | | | | |
| Tire pressure signal | | | | | R | T | | | | |
| Tire pressure data signal | | | | | R | T | | | | |
| 1st position switch signal | | R | | T | | | | | | |
| 4th position switch signal | | R | | T | | | | | | |
| Tow mode switch signal | | R | | T | | | | | | |
| A/T fluid temperature sensor signal | | T | | R | | | | | | |


TYPE 4/ TYPE 5

System diagram

- Type 4

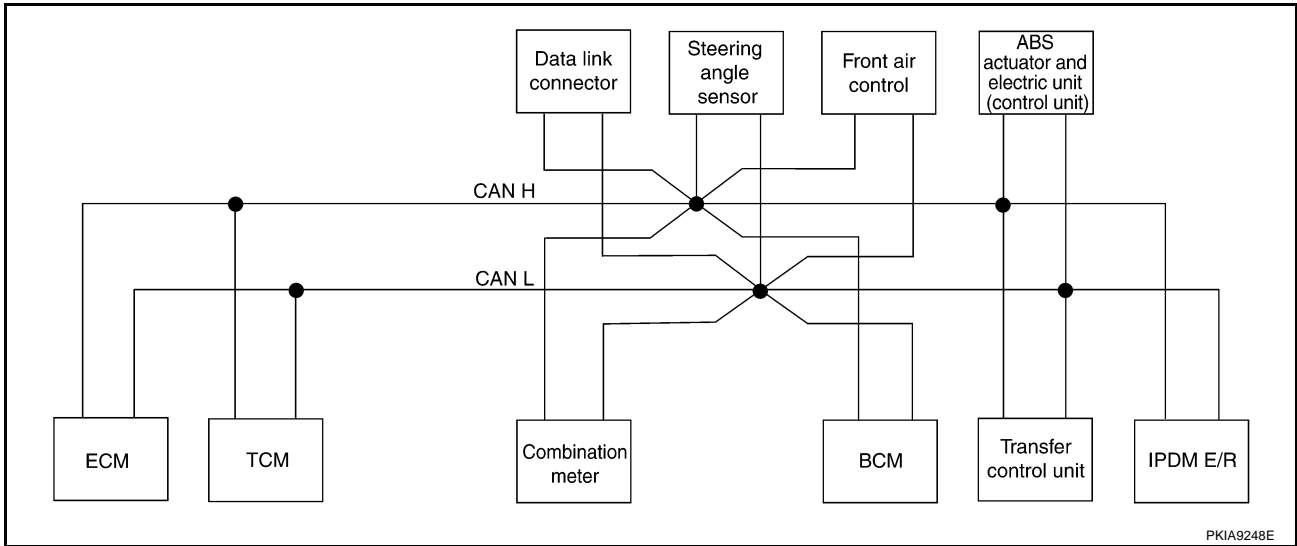

- Type 5

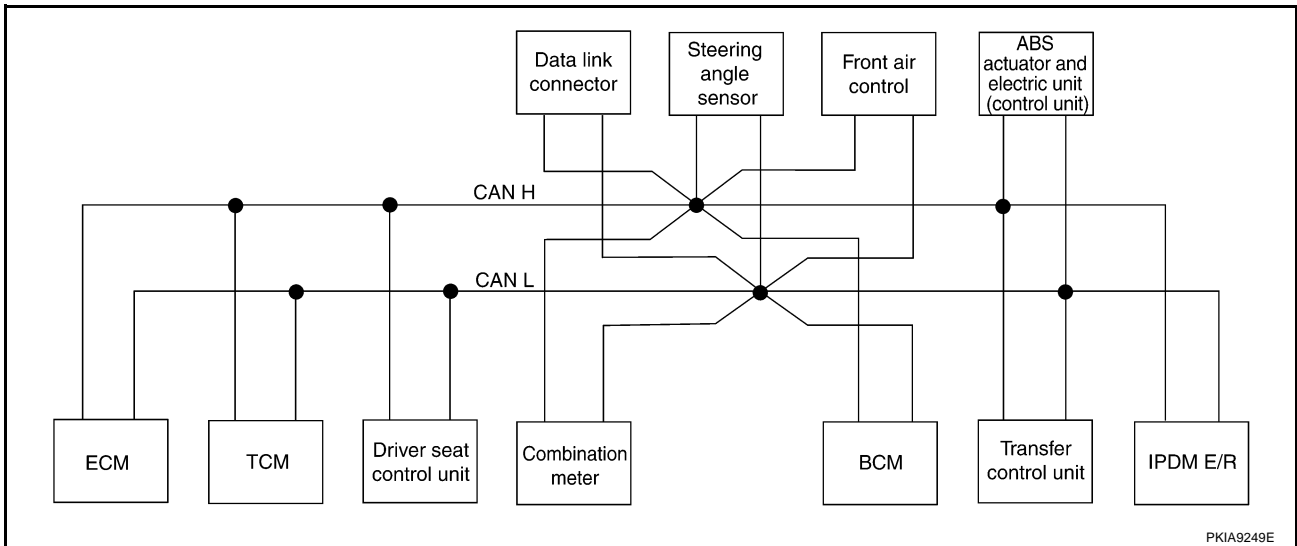

Input/output signal chart

T: Transmit R: Receive

| Signals | ECM | TCM | Driver seat control unit | Combination meter | BCM | Steering angle sensor | Front air control | Transfer control unit | ABS actuator and electric unit (control unit) | IPDM E/R |
|---------------------------------|-----|-----|--------------------------|-------------------|-----|-----------------------|-------------------|-----------------------|---|----------|
| A/T self-diagnosis signal | R | T | | | | | | | | |
| Stop lamp switch signal | | R | | T | | | | | | |
| Battery voltage signal | T | R | | | | | | | | |
| Key switch signal | | | R | | T | | | | | |
| Ignition switch signal | | | R | | T | | | | | |
| P range signal | | T | R | R | | | | | | |
| Closed throttle position signal | T | R | | | | | | | | |

A
B
C
D
E
F
G
H
I
J
LAN
L
M

CAN COMMUNICATION

[CAN]

| Signals | ECM | TCM | Driver seat control unit | Combination meter | BCM | Steering angle sensor | Front air control | Transfer control unit | ABS actuator and electric unit (control unit) | IPDM E/R |
|---------------------------------------|-----|-----|--------------------------|-------------------|-----|-----------------------|-------------------|-----------------------|---|----------|
| Wide open throttle position signal | T | R | | | | | | | | |
| Engine speed signal | T | R | | R | | | R | R | R | |
| Engine status signal | T | | | | R | | R | | | |
| Engine coolant temperature signal | T | | | R | | | R | | | |
| Accelerator pedal position signal | T | R | | | | | | R | R | |
| Turbine revolution signal | R | T | | | | | | | | |
| Output shaft revolution signal | R | T | | | | | | R | | |
| A/C switch signal | R | | | | T | | R | | | |
| A/C compressor request signal | T | | | | | | | | | R |
| Blower fan motor switch signal | R | | | | T | | R | | | |
| Cooling fan speed request signal | T | | | | | | R | | | R |
| Position light request signal | | | | R | T | | | | | R |
| Low beam request signal | | | | | T | | | | | R |
| Low beam status signal | R | | | | | | | | | T |
| High beam request signal | | | | R | T | | | | | R |
| High beam status signal | R | | | | | | | | | T |
| Front fog light request signal | | | | | T | | | | | R |
| Day time running light request signal | | | | R | T | | | | | |
| Vehicle speed signal | | | | R | | | R | R | T | |
| | R | R | R | T | R | | R | | | |
| Sleep wake up signal | | | R | R | T | | | | | R |
| Door switch signal | | | R | R | T | | | | | R |
| Turn indicator signal | | | | R | T | | | | | |
| Key fob ID signal | | | R | | T | | | | | |
| Key fob door unlock signal | | | R | | T | | | | | |
| Buzzer output signal | | | | R | T | | | | | |
| Fuel level sensor signal | R | | | T | | | | | | |
| ASCD SET lamp signal | T | | | R | | | | | | |
| ASCD CRUISE lamp signal | T | | | R | | | | | | |
| Malfunction indicator lamp signal | T | | | R | | | | | | |
| Front wiper request signal | | | | | T | | | | | R |
| Front wiper stop position signal | | | | | R | | | | | T |
| Rear window defogger switch signal | | | | | T | | R | | | R |
| Rear window defogger control signal | R | | | | | | | | | T |
| Theft warning horn request signal | | | | | T | | | | | R |
| Horn chirp signal | | | | | T | | | | | R |
| Steering angle sensor signal | | | | | | T | | | R | |
| ABS warning lamp signal | | | | R | | | | | T | |
| VDC OFF indicator lamp signal | | | | R | | | | | T | |
| SLIP indicator lamp signal | | | | R | | | | | T | |

CAN COMMUNICATION


[CAN]

| Signals | ECM | TCM | Driver seat control unit | Combination meter | BCM | Steering angle sensor | Front air control | Transfer control unit | ABS actuator and electric unit (control unit) | IPDM E/R |
|-------------------------------------|-----|-----|--------------------------|-------------------|-----|-----------------------|-------------------|-----------------------|---|----------|
| Brake warning lamp signal | | | | R | | | | | T | |
| System setting signal | | | R | | R | | | | | |
| | | | T | | T | | | | | |
| ASCD operation signal | T | R | | | | | | | | |
| ASCD OD cancel request | T | R | | | | | | | | |
| A/T CHECK indicator lamp signal | | T | | R | | | | | | |
| A/T position indicator lamp signal | | T | | R | | | | R | | |
| 1st position switch signal | | R | | T | | | | | | |
| 4th position switch signal | | R | | T | | | | | | |
| Tow mode switch signal | | R | | T | | | | | | |
| A/T fluid temperature sensor signal | | T | | R | | | | | | |

TYPE 6

System diagram

- Type 6

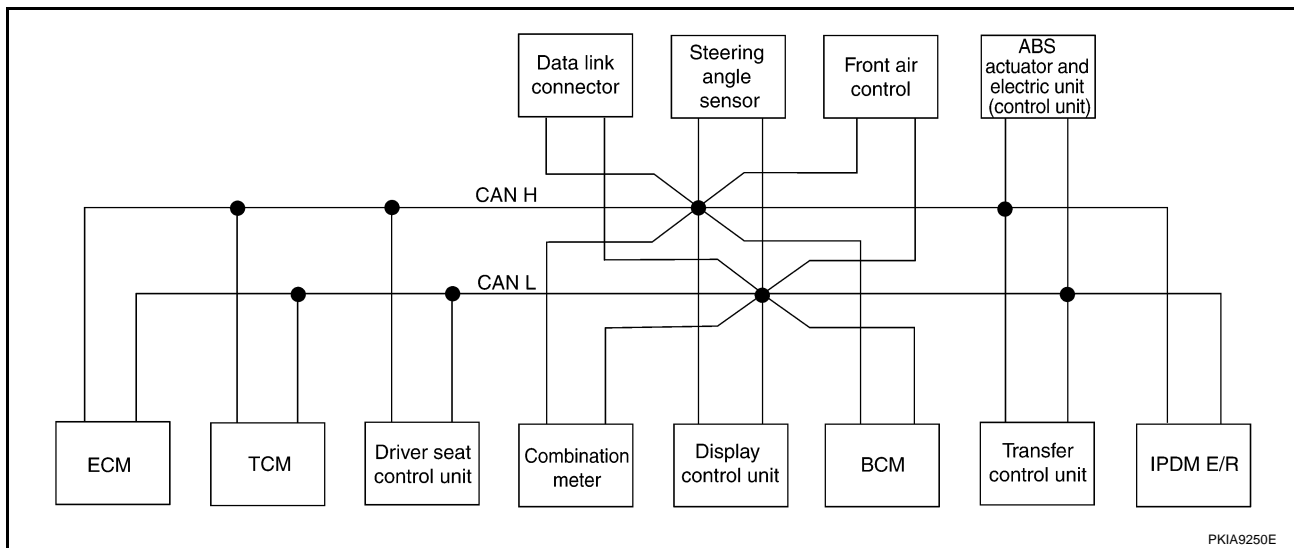

Input/output signal chart

T: Transmit R: Receive

| Signals | ECM | TCM | Driver seat control unit | Combination meter | Display control unit | BCM | Steering angle sensor | Front air control | Transfer control unit | ABS actuator and electric unit (control unit) | IPDM E/R |
|---------------------------|-----|-----|--------------------------|-------------------|----------------------|-----|-----------------------|-------------------|-----------------------|---|----------|
| A/T self-diagnosis signal | R | T | | | | | | | | | |
| Stop lamp switch signal | | R | | T | | | | | | | |
| Battery voltage signal | T | R | | | | | | | | | |

CAN COMMUNICATION

[CAN]

| Signals | ECM | TCM | Driver seat control unit | Combination meter | Display control unit | BCM | Steering angle sensor | Front air control | Transfer control unit | ABS actuator and electric unit (control unit) | IPDM E/R |
|---------------------------------------|-----|-----|--------------------------|-------------------|----------------------|-----|-----------------------|-------------------|-----------------------|---|----------|
| Key switch signal | | | R | | | T | | | | | |
| Ignition switch signal | | | R | | | T | | | | | |
| P range signal | | T | R | R | | | | | | | |
| Closed throttle position signal | T | R | | | | | | | | | |
| Wide open throttle position signal | T | R | | | | | | | | | |
| Engine speed signal | T | R | | R | R | | | R | R | R | |
| Engine status signal | T | | | | | R | | | | | |
| Engine coolant temperature signal | T | | | R | | | | R | | | |
| Accelerator pedal position signal | T | R | | | | | | | R | R | |
| Fuel consumption monitor signal | T | | | R | | | | | | | |
| | | | | T | R | | | | | | |
| Turbine revolution signal | R | T | | | | | | | | | |
| Output shaft revolution signal | R | T | | | | | | | R | | |
| A/C switch signal | R | | | | | T | | | | | |
| A/C compressor request signal | T | | | | | | | R | | | R |
| Blower fan motor switch signal | R | | | | | T | | R | | | |
| A/C switch/indicator signal | | | | | T | | | R | | | |
| | | | | | R | | | T | | | |
| Cooling fan speed request signal | T | | | | | | | R | | | R |
| Position light request signal | | | | R | | T | | | | | R |
| Low beam request signal | | | | | | T | | | | | R |
| Low beam status signal | R | | | | | | | | | | T |
| High beam request signal | | | | R | | T | | | | | R |
| High beam status signal | R | | | | | | | | | | T |
| Front fog light request signal | | | | | | T | | | | | R |
| Day time running light request signal | | | | R | | T | | | | | |
| Vehicle speed signal | | | | R | | | | R | R | T | |
| | R | R | R | T | R | R | | R | | | |
| Sleep wake up signal | | | R | R | | T | | | | | R |
| Door switch signal | | | R | R | R | T | | | | | R |
| Key fob ID signal | | | R | | | T | | | | | |
| Key fob door unlock signal | | | R | | | T | | | | | |
| Buzzer output signal | | | | R | | T | | | | | |
| Fuel level sensor signal | R | | | T | | | | | | | |
| ASCD SET lamp signal | T | | | R | | | | | | | |
| ASCD CRUISE lamp signal | T | | | R | | | | | | | |
| Malfunction indicator lamp signal | T | | | R | | | | | | | |
| Fuel level low warning signal | | | | T | R | | | | | | |

CAN COMMUNICATION

[CAN]

| Signals | ECM | TCM | Driver seat control unit | Combina-tion meter | Dis-play control unit | BCM | Steer-ing angle sensor | Front air control | Trans-fer control unit | ABS actua-tor and elec-tric unit (control unit) | IPDM E/R |
|-------------------------------------|-----|-----|--------------------------|--------------------|-----------------------|-----|------------------------|-------------------|------------------------|---|----------|
| Front wiper request signal | | | | | | T | | | | | R |
| Front wiper stop position signal | | | | | | R | | | | | T |
| Rear window defogger switch signal | | | | | | T | | R | | | R |
| Rear window defogger control signal | R | | | | R | | | | | | T |
| Theft warning horn request signal | | | | | | T | | | | | R |
| Horn chirp signal | | | | | | T | | | | | R |
| Steering angle sensor signal | | | | | | | T | | | R | |
| ABS warning lamp signal | | | | R | | | | | | T | |
| VDC OFF indicator lamp signal | | | | R | | | | | | T | |
| SLIP indicator lamp signal | | | | R | | | | | | T | |
| Brake warning lamp signal | | | | R | | | | | | T | |
| System setting signal | | | R | | T | R | | | | | |
| | | | T | | R | T | | | | | |
| Distance to empty signal | | | | T | R | | | | | | |
| ASCD operation signal | T | R | | | | | | | | | |
| ASCD OD cancel request | T | R | | | | | | | | | |
| A/T CHECK indicator lamp signal | | T | | R | | | | | | | |
| A/T position indicator lamp signal | | T | | R | | | | | R | | |
| Tire pressure signal | | | | | R | T | | | | | |
| Tire pressure data signal | | | | | R | T | | | | | |
| 1st position switch signal | | R | | T | | | | | | | |
| 4th position switch signal | | R | | T | | | | | | | |
| Tow mode switch signal | | R | | T | | | | | | | |
| A/T fluid temperature sensor signal | | T | | R | | | | | | | |

A
B
C
D
E
F
G
H
I
J
LAN
L
M

CAN SYSTEM (TYPE 1)


System Description

UKS000NW

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

Component Parts and Harness Connector Location

UKS000NX

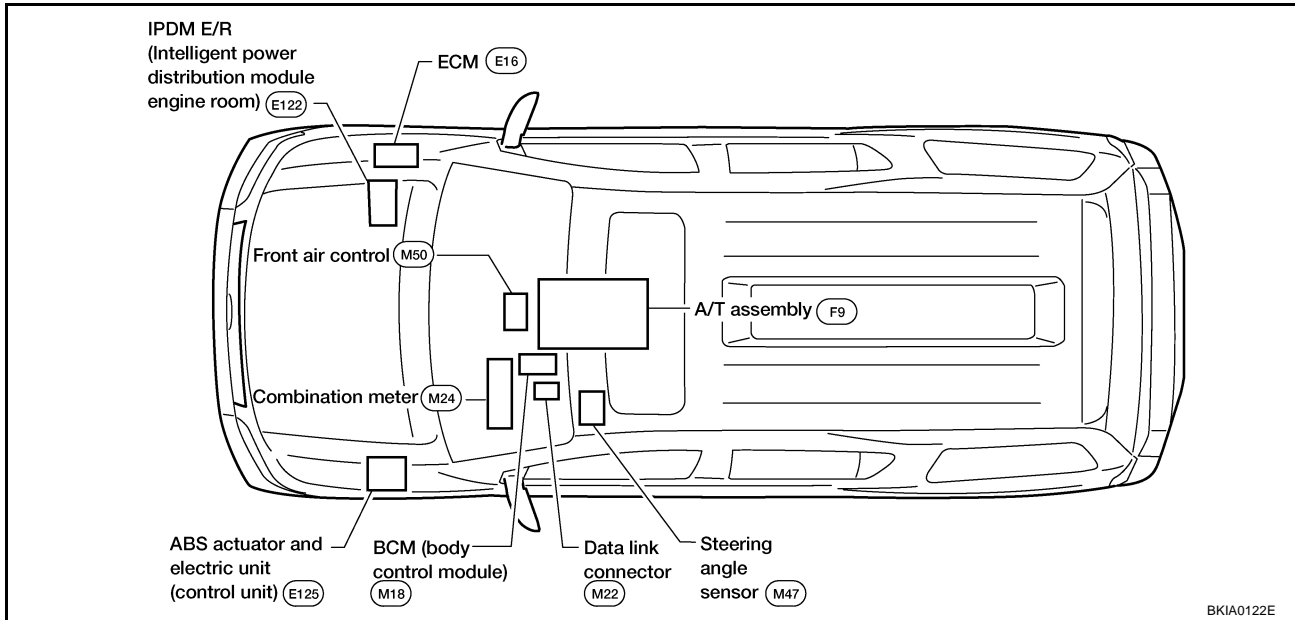


CAN SYSTEM (TYPE 1)

[CAN]

Schematic

UKS000YS

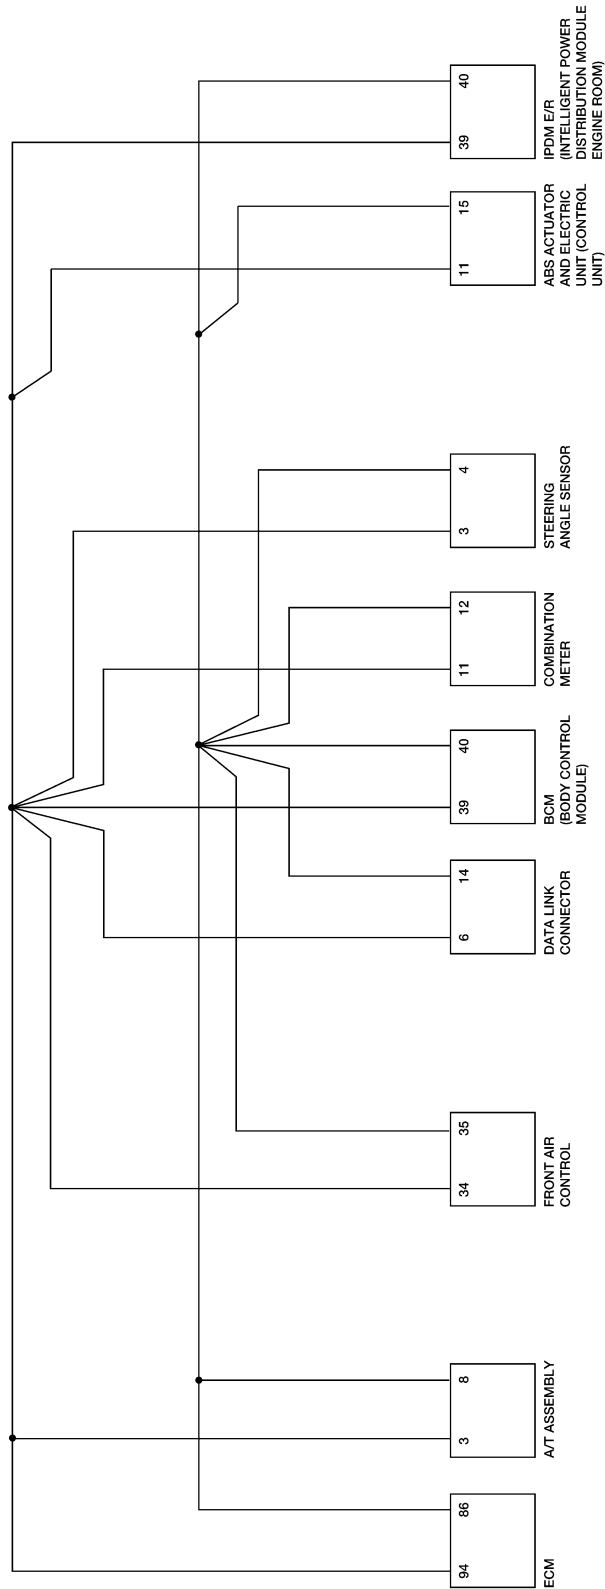

A
B
C
D
E
F
G
H
I
J
LAN
L
M

BKWA0184E

CAN SYSTEM (TYPE 1)



[CAN]

UKS000NY

Wiring Diagram - CAN -

LAN-CAN-01

▬ : DATA LINE

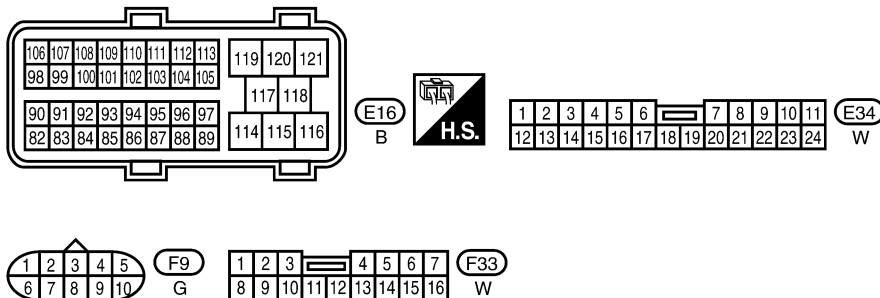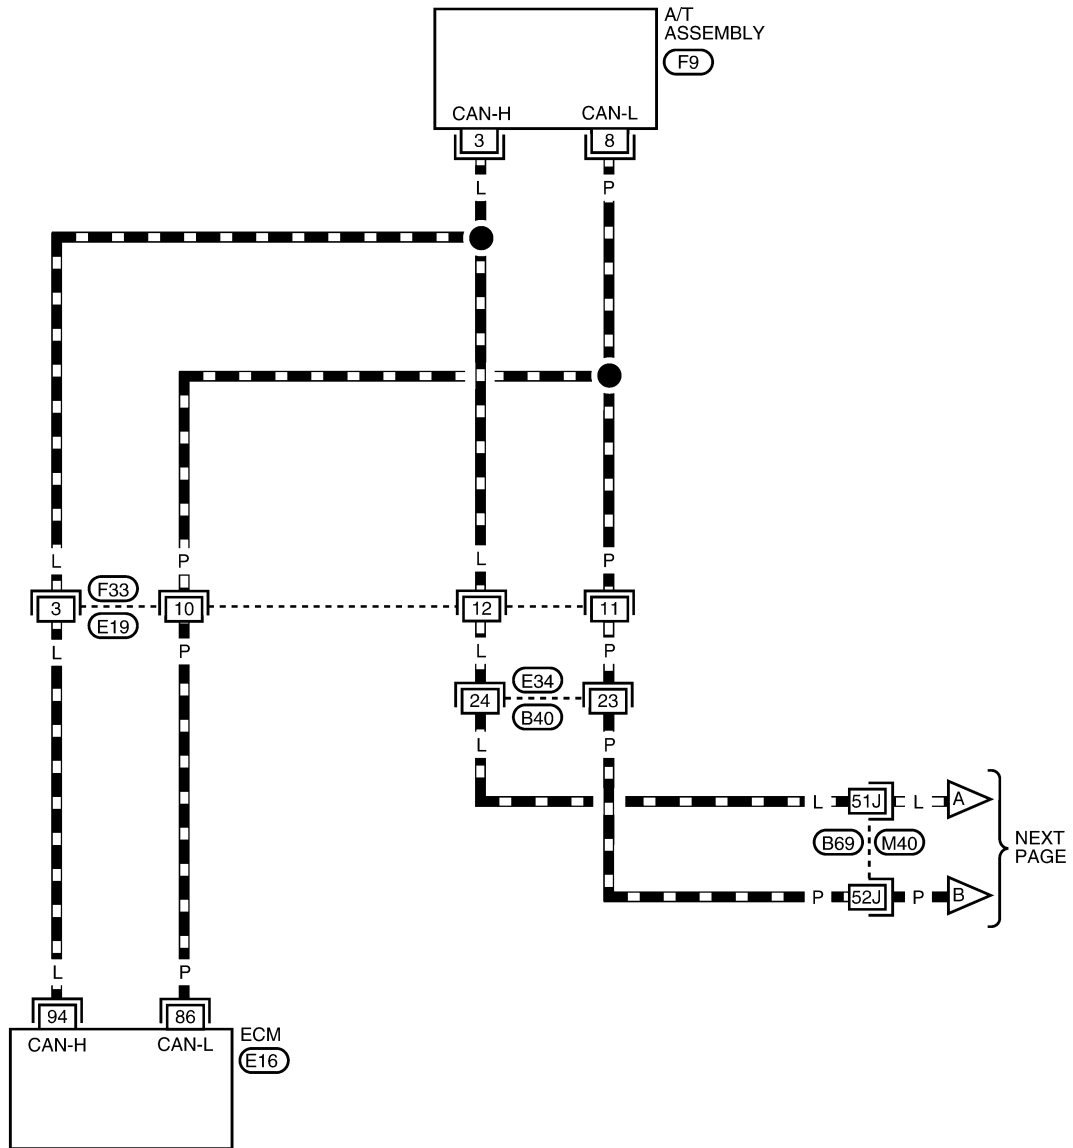

REFER TO THE FOLLOWING.






(M40) - SUPER MULTIPLE JUNCTION (SMJ)

BKWA0407E

CAN SYSTEM (TYPE 1)

[CAN]




LAN-CAN-02

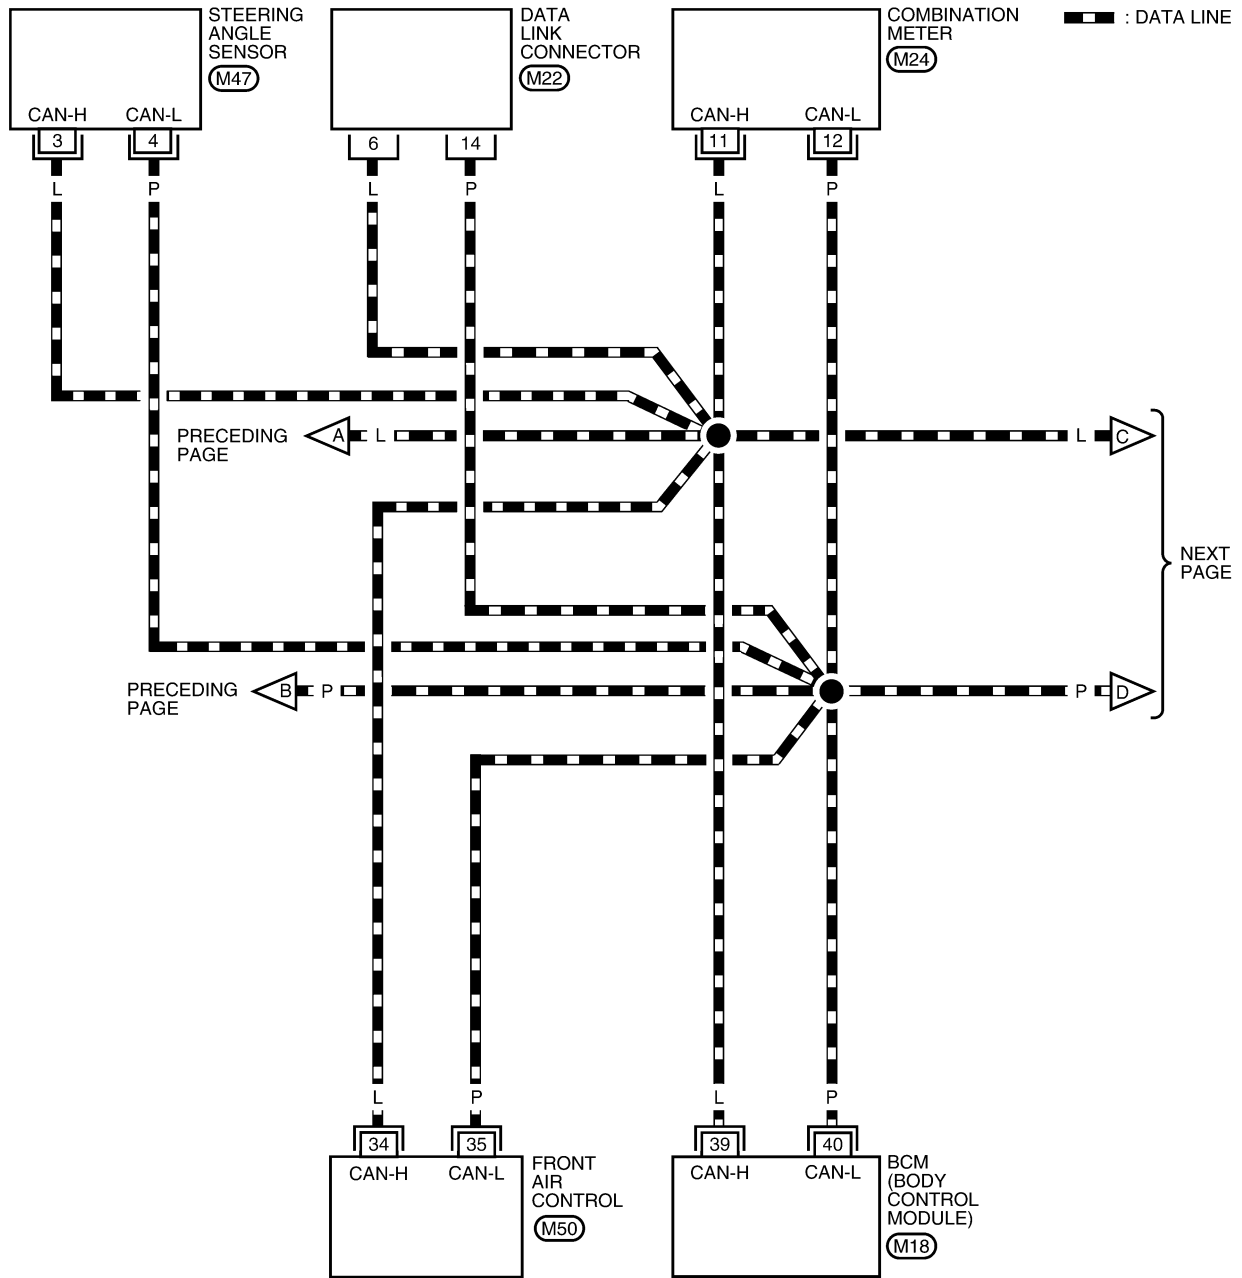

BKWA0408E

LAN-CAN-03

▬ : DATA LINE

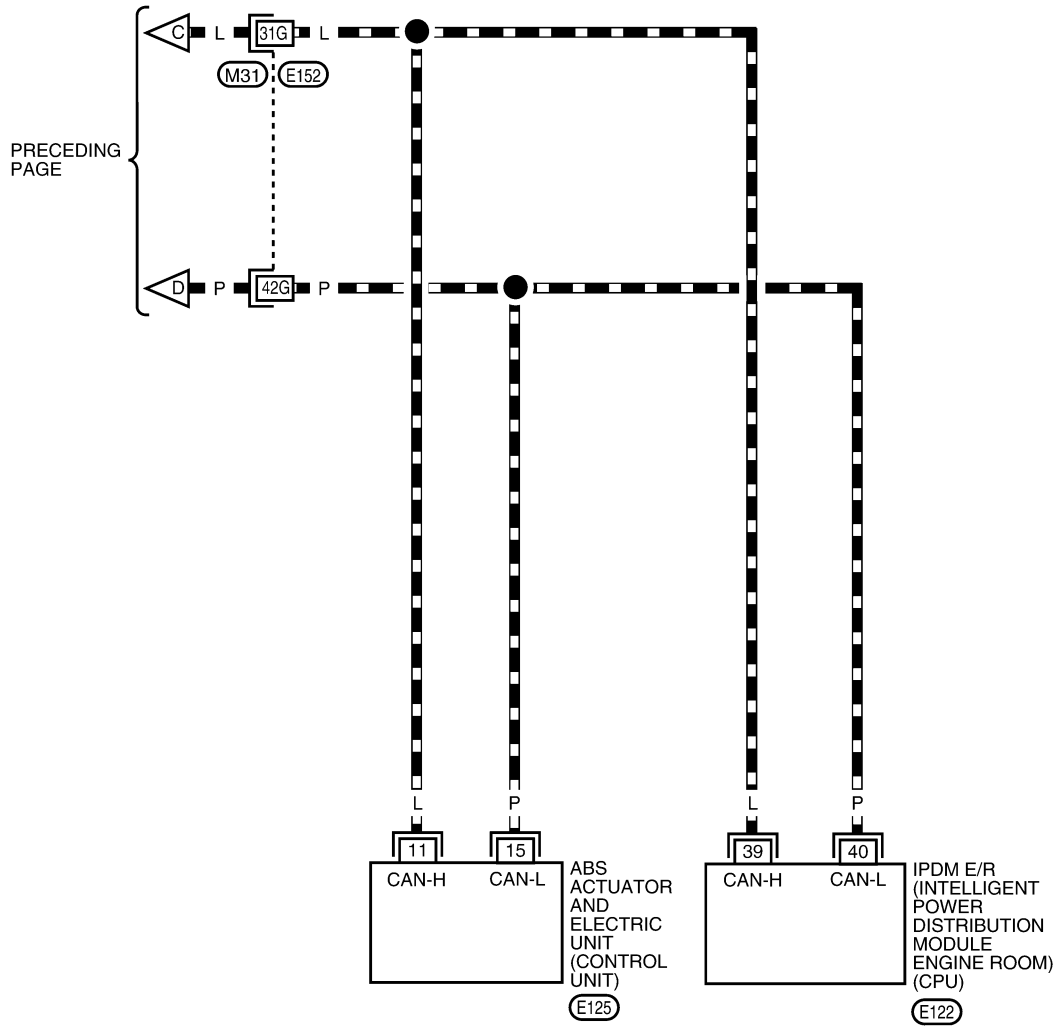

REFER TO THE FOLLOWING.
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

BKWA0409E

Work Flow

- When there are no indications of "BCM", "HVAC" or "IPDM E/R" on "SELECT SYSTEM" display of CONSULT-II, print the "SELECT SYSTEM".

(Example)

| | | |
|----------------------------|---|-----------------|
| NISSAN CONSULT-II | ➔ | SELECT SYSTEM |
| ENGINE | | ENGINE |
| START (NISSAN BASED VHCL) | | A/T |
| START (RENAULT BASED VHCL) | | ABS |
| SUB MODE | | AIR BAG |
| LIGHT COPY | | BCM |
| | | METER A/C AMP |
| | | BACK LIGHT COPY |

PKIA2093E

- Print all the data of "SELF-DIAG RESULTS" for "ENGINE", "A/T", "BCM", "HVAC", "ABS" and "IPDM E/R" displayed on CONSULT-II.

(Example)

| | | |
|-----------------------|---|----------------------------|
| SELECT DIAG MODE | ➔ | SELF-DIAG RESULTS |
| WORK SUPPORT | | DTC RESULTS TIME |
| SELF-DIAG RESULTS | | CAN COMM CIRCUIT [U1000] 0 |
| DATA MONITOR | | |
| DATA MONITOR (SPEC) | | |
| CAN DIAG SUPPORT MNTR | | F.F.DATA |
| ACTIVE TEST | | ERASE PRINT |
| Scroll Down | | MODE BACK LIGHT COPY |
| BACK LIGHT COPY | | |

PKIA8260E

- Print all the data of "CAN DIAG SUPPORT MNTR" for "ENGINE", "A/T", "BCM", "HVAC", "ABS" and "IPDM E/R" displayed on CONSULT-II.

(Example)

| | | |
|-----------------------|---|-----------------------|
| SELECT DIAG MODE | ➔ | CAN DIAG SUPPORT MNTR |
| WORK SUPPORT | | ENGINE |
| SELF-DIAG RESULTS | | PRSRNT |
| DATA MONITOR | | INITIAL DIAG OK |
| DATA MONITOR (SPEC) | | TRANSMIT DIAG OK |
| CAN DIAG SUPPORT MNTR | | TCM OK |
| ACTIVE TEST | | VDC/TCS/ABS OK |
| Scroll Down | | METER/M&A OK |
| BACK LIGHT COPY | | ICC UNKWN |
| | | BCM/SEC OK |
| | | IPDM E/R OK |
| | | AWD/4WD/e4WD UNKWN |
| | | PRINT Scroll Down |
| | | MODE BACK LIGHT COPY |

PKIA8343E

- Attach the printed sheet of "SELECT SYSTEM", "SELF-DIAG RESULTS" and "CAN DIAG SUPPORT MNTR" onto the check sheet. Refer to [LAN-22, "CHECK SHEET"](#).

- Based on the indications of "SELECT SYSTEM" and the results of "CAN DIAG SUPPORT MNTR", puts a check mark onto the items with "No indication", "NG", or "UNKWN" in the check sheet table. Refer to [LAN-22, "CHECK SHEET"](#).

NOTE:

- If "NG" is displayed on "INITIAL DIAG (Initial diagnosis)" as "CAN DIAG SUPPORT MNTR" for the diagnosed control unit, replace the control unit.
- The "CAN DIAG SUPPORT MNTR" items, which are not in check sheet table, are not related to diagnostic procedure on service manual.
So it is not necessary to check the status of the "CAN DIAG SUPPORT MNTR" items not in check sheet table.

- According to the check sheet results (example), start inspection. Refer to [LAN-24, "CHECK SHEET RESULTS \(EXAMPLE\)"](#).

CAN SYSTEM (TYPE 1)

[CAN]

CHECK SHEET

NOTE:

If "NG" is displayed on "INITIAL DIAG (Initial diagnosis)" for the diagnosed control unit, replace the control unit.

Check sheet table

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|------------|---------|-------|--------------|----------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | |
| | | | | ECM | TCM | METER /M&A | BCM/SEC | STRG | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | UNKWN | UNKWN |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | — |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — |

Symptoms :

Attach copy of
SELECT SYSTEM

Attach copy of
SELECT SYSTEM

CAN SYSTEM (TYPE 1)

[CAN]

A
B
C
D
E
F
G
H
I
J
LAN
L
M

Attach copy of
ENGINE
SELF-DIAG RESULTS

Attach copy of
A/T
SELF-DIAG RESULTS

Attach copy of
BCM
SELF-DIAG RESULTS

Attach copy of
HVAC
SELF-DIAG RESULTS

Attach copy of
ABS
SELF-DIAG RESULTS

Attach copy of
IPDM E/R
SELF-DIAG RESULTS

Attach copy of
ENGINE
CAN DIAG SUPPORT
MNTR

Attach copy of
A/T
CAN DIAG SUPPORT
MNTR

Attach copy of
BCM
CAN DIAG SUPPORT
MNTR

Attach copy of
HVAC
CAN DIAG SUPPORT
MNTR

Attach copy of
ABS
CAN DIAG SUPPORT
MNTR

Attach copy of
IPDM E/R
CAN DIAG SUPPORT
MNTR

PKIB6628E

CAN SYSTEM (TYPE 1)

[CAN]

CHECK SHEET RESULTS (EXAMPLE)

NOTE:


If "NG" is displayed on "INITIAL DIAG (Initial diagnosis)" for the diagnosed control unit, replace the control unit.

Case 1

Check harness between TCM and data link connector. Refer to [LAN-36, "Circuit Check Between TCM and Data Link Connector"](#).

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|---------|------------|---------|-------|--------------|----------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | |
| | | | | ECM | TCM | METER /M&A | BCM/SEC | STRG | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN ✓ | UNKWN ✓ | — | UNKWN ✓ | UNKWN ✓ |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN ✓ | — | — | UNKWN ✓ | — |
| BCM | No indication | NG | UNKWN | UNKWN ✓ | — | UNKWN | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN ✓ | — | — | UNKWN | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN ✓ | UNKWN ✓ | — | — | UNKWN | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN ✓ | — | — | UNKWN | — | — | — |

PKIB6643E

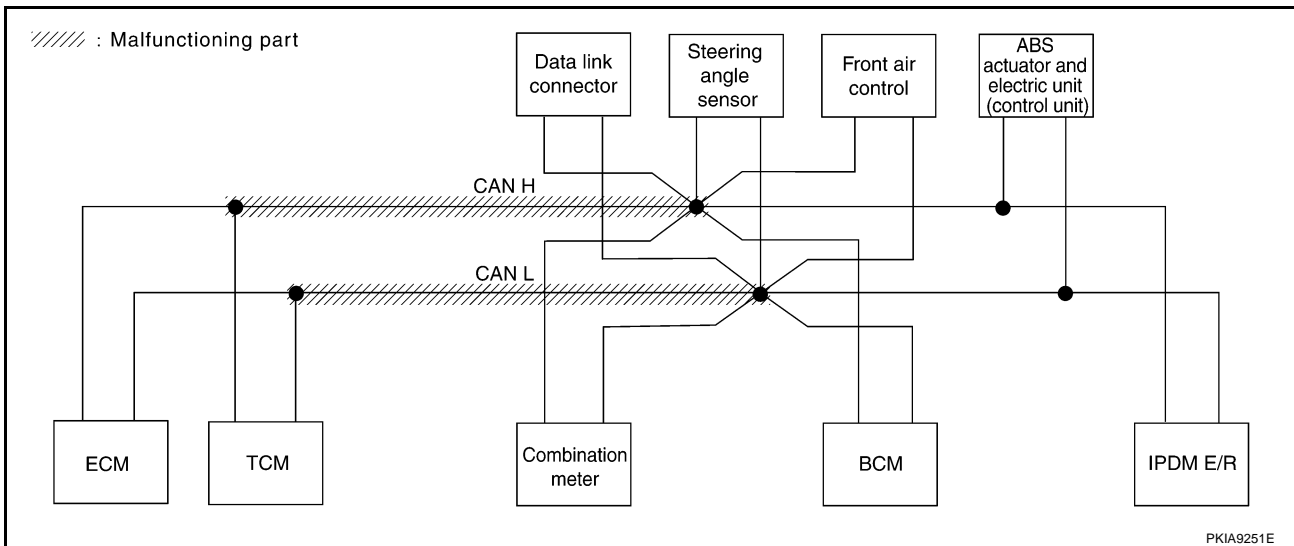

PKIA9251E

CAN SYSTEM (TYPE 1)

[CAN]


Case 2

Check harness between data link connector and IPDM E/R. Refer to [LAN-37, "Circuit Check Between Data Link Connector and IPDM E/R"](#).

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|------------|---------|-------|--------------|----------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | |
| | | | | ECM | TCM | METER /M&A | BCM/SEC | STRG | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | UNKWN | UNKWN |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | — |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — |

PKIB6644E

////// : Malfunctioning part

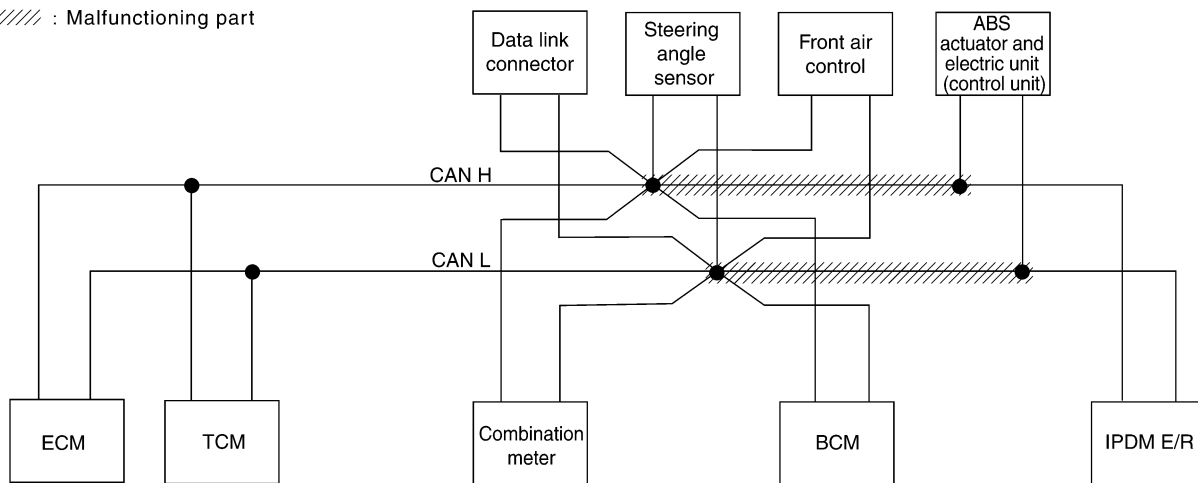

PKIA9252E

CAN SYSTEM (TYPE 1)


[CAN]

Case 3

Check ECM circuit. Refer to [LAN-38, "ECM Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | |
| | | | | ECM | TCM | METER /M&A | BCM/SEC | STRG | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKW ^N | — | UNKW ^N | UNKW ^N | UNKW ^N | — | UNKW ^N | UNKW ^N |
| A/T | — | NG | UNKW ^N | UNKW ^N | — | UNKW ^N | — | — | UNKW ^N | — |
| BCM | No indication | NG | UNKW ^N | UNKW ^N | — | UNKW ^N | — | — | — | UNKW ^N |
| HVAC | No indication | — | UNKW ^N | UNKW ^N | — | — | UNKW ^N | — | UNKW ^N | — |
| ABS | — | NG | UNKW ^N | UNKW ^N | UNKW ^N | — | — | UNKW ^N | — | — |
| IPDM E/R | No indication | — | UNKW ^N | UNKW ^N | — | — | UNKW ^N | — | — | — |

PKIB6645E

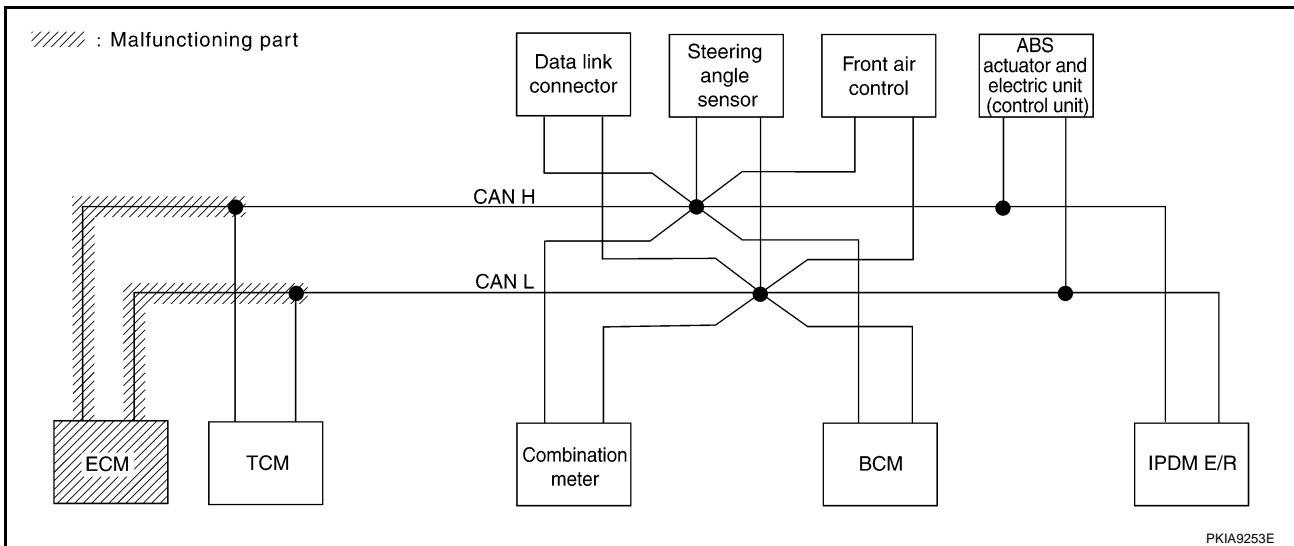

PKIA9253E

CAN SYSTEM (TYPE 1)


[CAN]

Case 4

Check TCM circuit. Refer to [LAN-39, "TCM Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|------------|---------|-------|--------------|----------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | |
| | | | | ECM | TCM | METER /M&A | BCM/SEC | STRG | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | UNKWN | UNKWN |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | — |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — |

PKIB664E

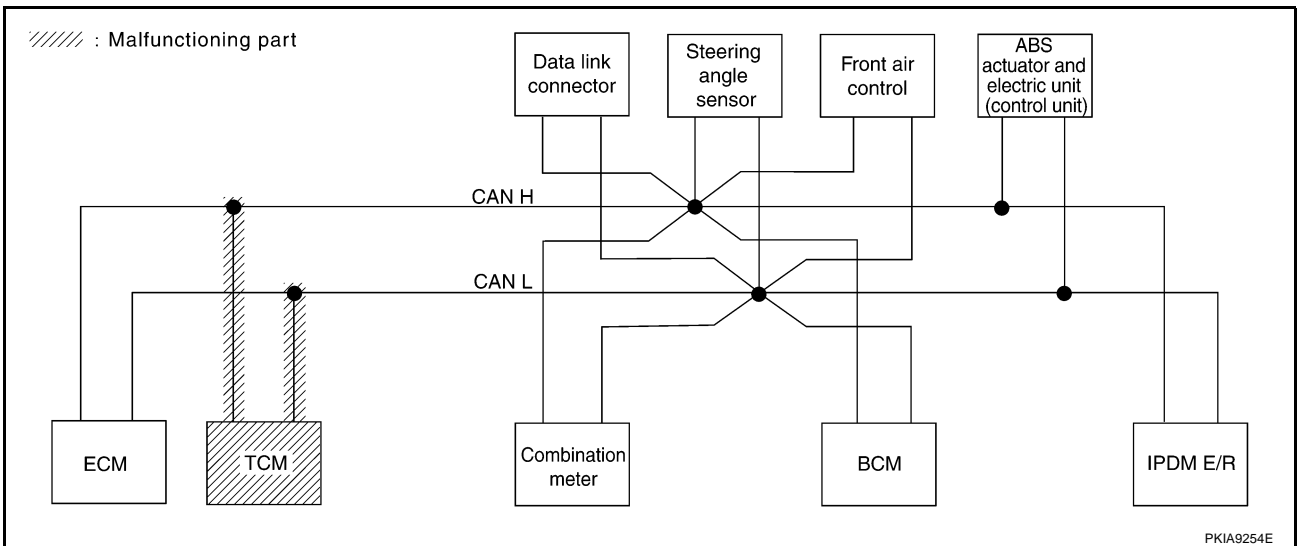

PKIA9254E

CAN SYSTEM (TYPE 1)


[CAN]

Case 5

Check combination meter circuit. Refer to [LAN-39, "Combination Meter Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|------------|---------|-------|--------------|----------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | |
| | | | | ECM | TCM | METER /M&A | BCM/SEC | STRG | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN ✓ | UNKWN | — | UNKWN | UNKWN |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN ✓ | — | — | UNKWN | — |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN ✓ | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — |

PKIB6647E

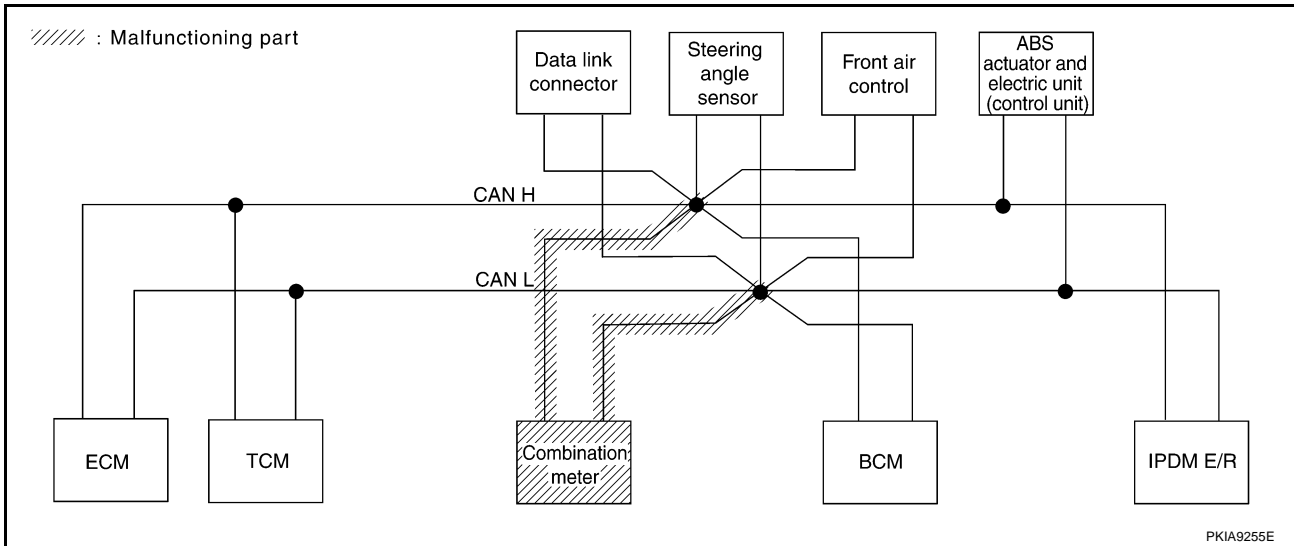

PKIA9255E

CAN SYSTEM (TYPE 1)


[CAN]

Case 6

Check BCM circuit. Refer to [LAN-40, "BCM Circuit Check"](#).

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | |
|----------------------|-----------------|-----------------------|--------------------|-------------------|-------|------------|---------|-------|--------------|----------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | |
| | | | | ECM | TCM | METER /M&A | BCM/SEC | STRG | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | UNKWN | UNKWN |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | — |
| BCM | No indication ✓ | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — |

PKIB6648E

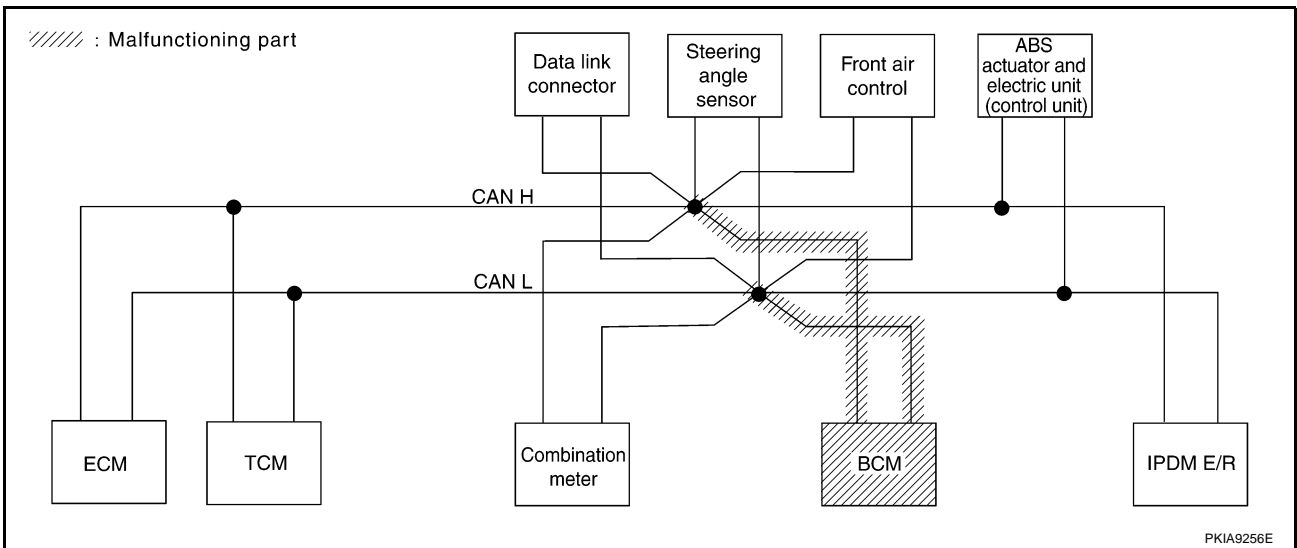

CAN SYSTEM (TYPE 1)


[CAN]

Case 7

Check data link connector circuit. Refer to [LAN-40, "Data Link Connector Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | |
|----------------------|-----------------|-----------------------|--------------------|-------------------|-------|------------|---------|-------|--------------|----------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | |
| | | | | ECM | TCM | METER /M&A | BCM/SEC | STRG | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | UNKWN | UNKWN |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | — |
| BCM | No indication ✓ | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | UNKWN |
| HVAC | No indication ✓ | — | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | — |
| IPDM E/R | No indication ✓ | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — |

PKIB6649E

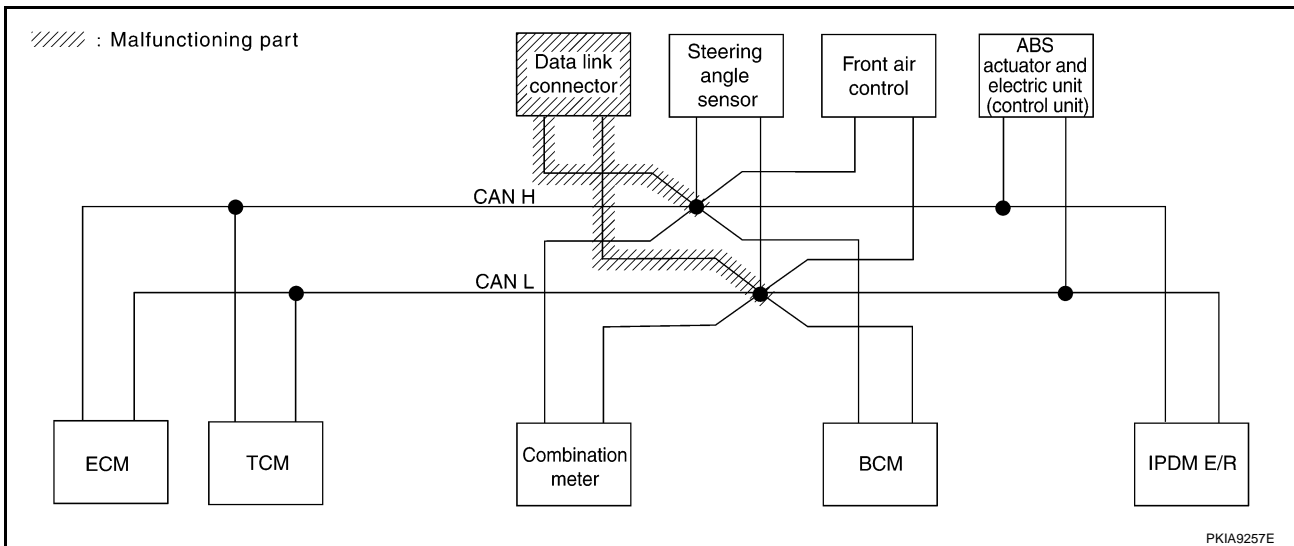

PKIA9257E

CAN SYSTEM (TYPE 1)


[CAN]

Case 8

Check steering angle sensor circuit. Refer to [LAN-41, "Steering Angle Sensor Circuit Check"](#).

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|------------|---------|-------|--------------|----------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | |
| | | | | ECM | TCM | METER /M&A | BCM/SEC | STRG | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | UNKWN | UNKWN |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | — |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — |

PKIB6651E

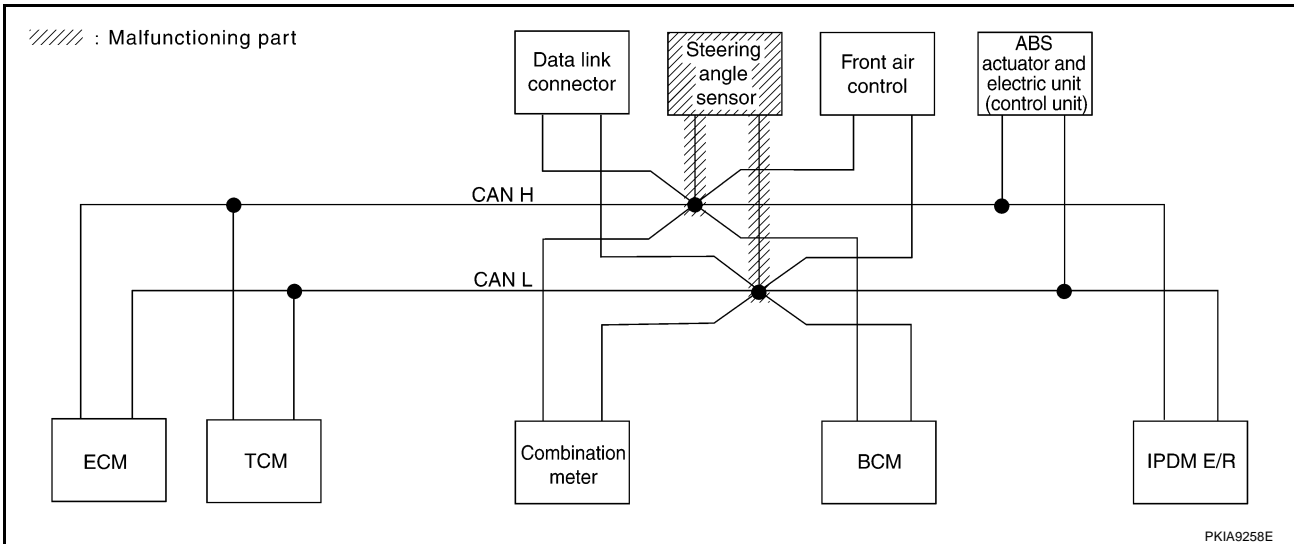

PKIA9258E

CAN SYSTEM (TYPE 1)


[CAN]

Case 9

Check front air control circuit. Refer to [LAN-41, "Front Air Control Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | |
|----------------------|-----------------|-----------------------|--------------------|-------------------|-------|------------|---------|-------|--------------|----------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | |
| | | | | ECM | TCM | METER /M&A | BCM/SEC | STRG | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | UNKWN | UNKWN |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | — |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | UNKWN |
| HVAC | No indication ✓ | — | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — |

PKIB6650E

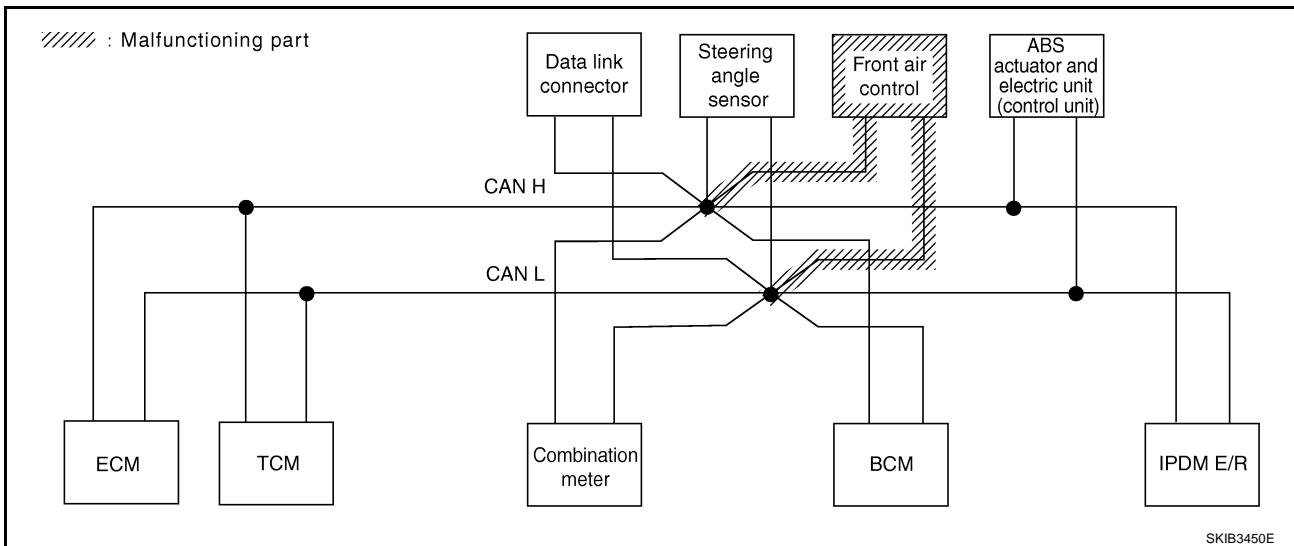

SKIB3450E

CAN SYSTEM (TYPE 1)


[CAN]

Case 10

Check ABS actuator and electric unit (control unit) circuit. Refer to [LAN-42, "ABS Actuator and Electric Unit \(Control Unit\) Circuit Check"](#).

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|------------|---------|-------|--------------|----------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | |
| | | | | ECM | TCM | METER /M&A | BCM/SEC | STRG | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | UNKWN | UNKWN |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | — |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — |

PKIB6652E

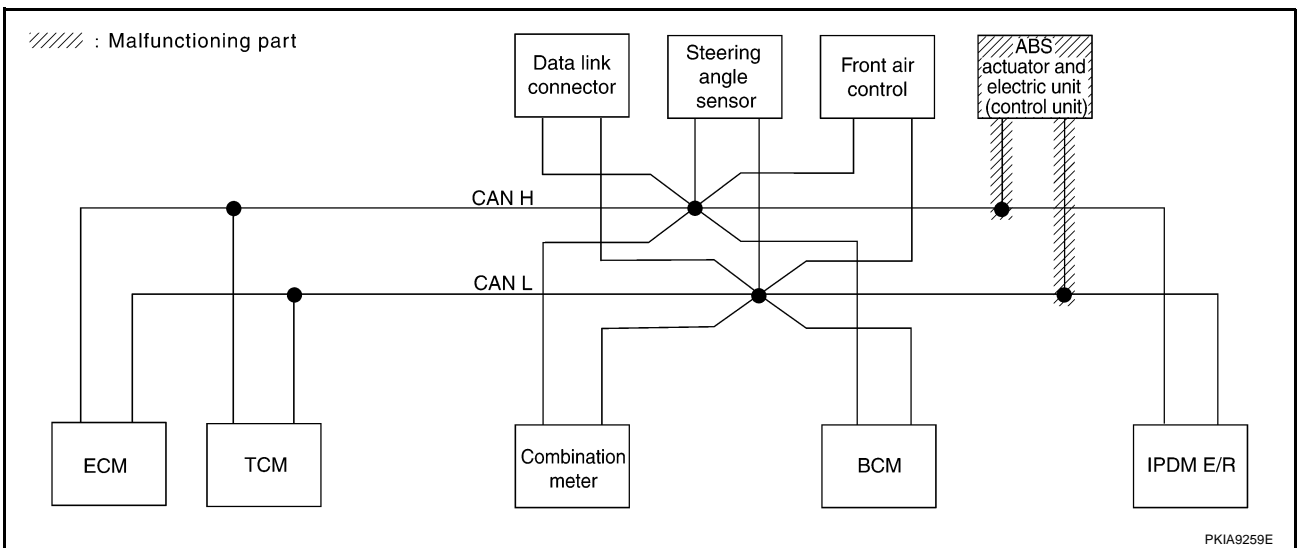

CAN SYSTEM (TYPE 1)


[CAN]

Case 11

Check IPDM E/R circuit. Refer to [LAN-42, "IPDM E/R Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | |
|----------------------|-----------------|-----------------------|--------------------|-------------------|-------|------------|---------|-------|--------------|----------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | |
| | | | | ECM | TCM | METER /M&A | BCM/SEC | STRG | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | UNKWN | UNKWN ✓ |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | — |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | UNKWN ✓ |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | — |
| IPDM E/R | No indication ✓ | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — |

PKIB6653E

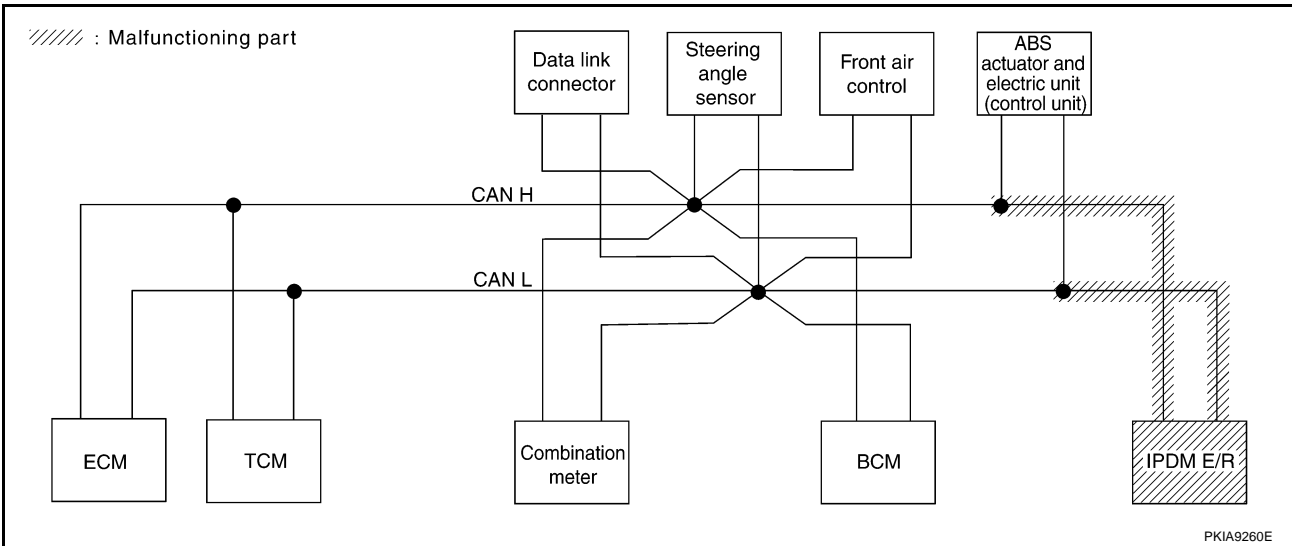

PKIA9260E

CAN SYSTEM (TYPE 1)

[CAN]

Case 12

Check CAN communication circuit. Refer to [LAN-43, "CAN Communication Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | |
|----------------------|-----------------|-----------------------|--------------------|-------------------|---------|------------|---------|---------|--------------|----------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | |
| | | | | ECM | TCM | METER /M&A | BCM/SEC | STRG | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN ✓ | — | UNKWN ✓ | UNKWN ✓ | UNKWN ✓ | — | UNKWN ✓ | UNKWN ✓ |
| A/T | — | NG | UNKWN | UNKWN ✓ | — | UNKWN ✓ | — | — | UNKWN ✓ | — |
| BCM | No indication ✓ | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | UNKWN |
| HVAC | No indication ✓ | — | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — |
| ABS | — | NG ✓ | UNKWN ✓ | UNKWN ✓ | UNKWN ✓ | — | — | UNKWN ✓ | — | — |
| IPDM E/R | No indication ✓ | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — |

PKIB6654E

Case 13

Check IPDM E/R ignition relay circuit continuously sticks "OFF". Refer to [LAN-44, "IPDM E/R Ignition Relay Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|---------|------------|---------|-------|--------------|----------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | |
| | | | | ECM | TCM | METER /M&A | BCM/SEC | STRG | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN ✓ | UNKWN | UNKWN | — | UNKWN ✓ | UNKWN |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | — |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN ✓ | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — |

PKIB6655E

A
B
C
D
E
F
G
H
I
J
L
M

LAN

Case 14

Check IPDM E/R ignition relay circuit continuously sticks "ON". Refer to [LAN-44, "IPDM E/R Ignition Relay Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|------------|---------|---------|--------------|----------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | |
| | | | | ECM | TCM | METER /M&A | BCM/SEC | STRG | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | UNKWN | UNKWN |
| A/T | — | NG | UNKWN | UNKWN ✓ | — | UNKWN ✓ | — | — | UNKWN | — |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN ✓ | UNKWN | — | — | UNKWN ✓ | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — |

PKIB6656E

Circuit Check Between TCM and Data Link Connector

UKS0017N

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector F33
 - Harness connector E19
 - Harness connector E34
 - Harness connector B40
 - Harness connector B69
 - Harness connector M40

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect A/T assembly connector and harness connector F33.
2. Check continuity between A/T assembly harness connector F9 terminals 3 (L), 8 (P) and harness connector F33 terminals 12 (L), 11 (P).

3 (L) - 12 (L) : Continuity should exist.
8 (P) - 11 (P) : Continuity should exist.

OK or NG

- OK >> GO TO 3.
 NG >> Repair harness.

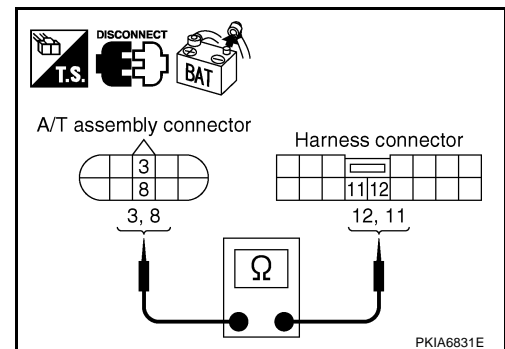


3. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect harness connector E34.
2. Check continuity between harness connector E19 terminals 12 (L), 11 (P) and harness connector E34 terminals 24 (L), 23 (P).

12 (L) - 24 (L) : Continuity should exist.
11 (P) - 23 (P) : Continuity should exist.

OK or NG

- OK >> GO TO 4.
 NG >> Repair harness.

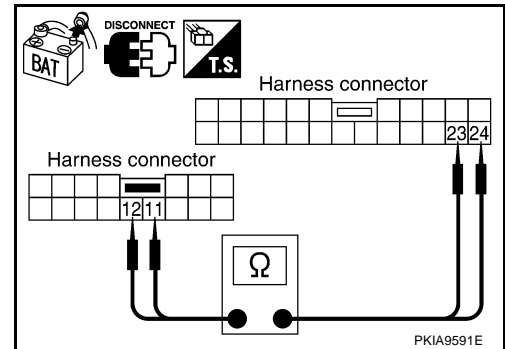


4. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect harness connector B69.
2. Check continuity between harness connector B40 terminals 24 (L), 23 (P) and harness connector B69 terminals 51J (L), 52J (P).

24 (L) - 51J (L) : Continuity should exist.
23 (P) - 52J (P) : Continuity should exist.

OK or NG

- OK >> GO TO 5.
 NG >> Repair harness.

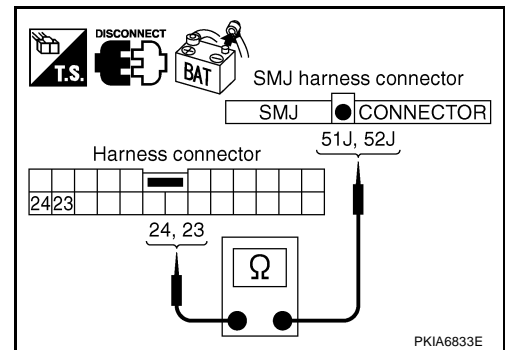


5. CHECK HARNESS FOR OPEN CIRCUIT

Check continuity between harness connector M40 terminals 51J (L), 52J (P) and data link connector M22 terminals 6 (L), 14 (P).

51J (L) - 6 (L) : Continuity should exist.
52J (P) - 14 (P) : Continuity should exist.

OK or NG

- OK >> Connect all the connectors and diagnose again. Refer to [LAN-21, "Work Flow"](#).
 NG >> Repair harness.

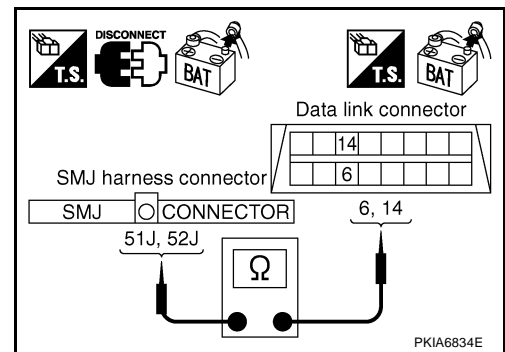

Circuit Check Between Data Link Connector and IPDM E/R

UKS00170

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M31
 - Harness connector E152

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect harness connector M31.
2. Check continuity between data link connector M22 terminals 6 (L), 14 (P) and harness connector M31 terminals 31G (L), 42G (P).


6 (L) - 31G (L) : Continuity should exist.

14 (P) - 42G (P) : Continuity should exist.

OK or NG

OK >> GO TO 3.

NG >> Repair harness.

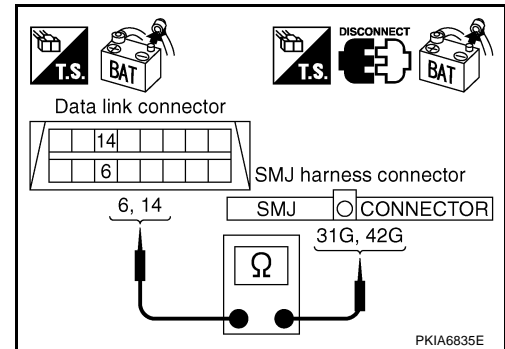

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check continuity between harness connector E152 terminals 31G (L), 42G (P) and IPDM E/R harness connector E122 terminals 39 (L), 40 (P).


31G (L) - 39 (L) : Continuity should exist.

42G (P) - 40 (P) : Continuity should exist.

OK or NG

OK >> Connect all the connectors and diagnose again. Refer to [LAN-21, "Work Flow"](#).

NG >> Repair harness.

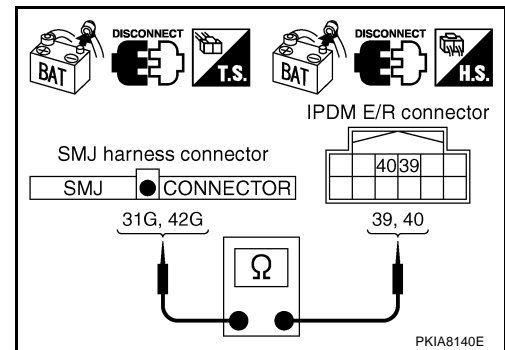

ECM Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (control module side and harness side).
 - ECM connector
 - Harness connector E19
 - Harness connector F33

OK or NG

OK >> GO TO 2.

NG >> Repair terminal or connector.

UKS0017P


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect ECM connector.
2. Check resistance between ECM harness connector E16 terminals 94 (L) and 86 (P).

94 (L) - 86 (P) : Approx. 108 - 132 Ω

OK or NG

- OK >> Replace ECM.
 NG >> Repair harness between ECM and A/T assembly.

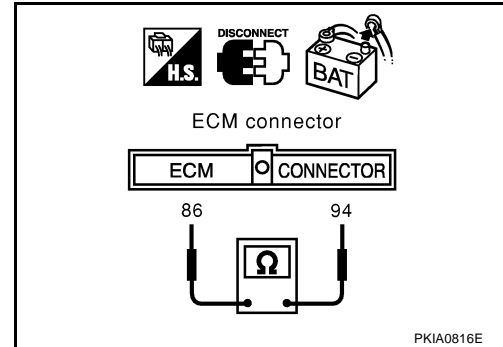

UKS0017Q

TCM Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of A/T assembly for damage, bend and loose connection (control module side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect A/T assembly connector.
2. Check resistance between A/T assembly harness connector F9 terminals 3 (L) and 8 (P).

3 (L) - 8 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace A/T assembly.
 NG >> Repair harness between A/T assembly and harness connector F33.

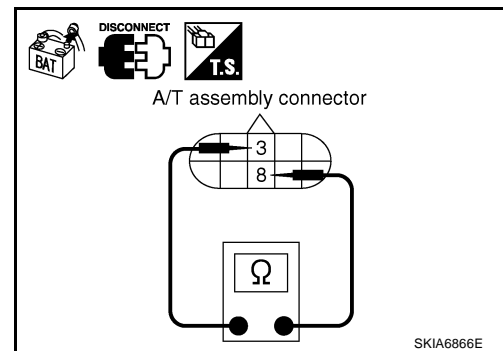

UKS0017S

Combination Meter Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of combination meter for damage, bend and loose connection (meter side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect combination meter connector.
2. Check resistance between combination meter harness connector M24 terminals 11 (L) and 12 (P).

11 (L) - 12 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace combination meter.
 NG >> Repair harness between combination meter and data link connector.

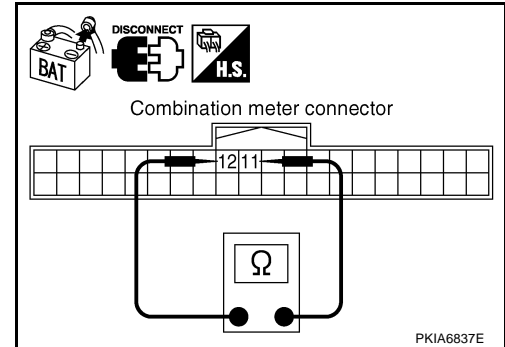

UKS0017T

BCM Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of BCM for damage, bend and loose connection (control module side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect BCM connector.
2. Check resistance between BCM harness connector M18 terminals 39 (L) and 40 (P).

39 (L) - 40 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace BCM. Refer to [BCS-20, "Removal and Installation of BCM"](#) .
 NG >> Repair harness between BCM and data link connector.

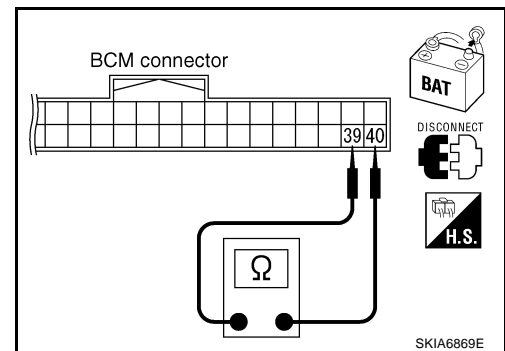

UKS0017R

Data Link Connector Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check the terminals and connector of data link connector for damage, bend and loose connection (connector side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

Check resistance between data link connector M22 terminals 6 (L) and 14 (P).

6 (L) - 14 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Diagnose again. Refer to [LAN-21, "Work Flow"](#) .
 NG >> Repair harness between data link connector and combination meter.

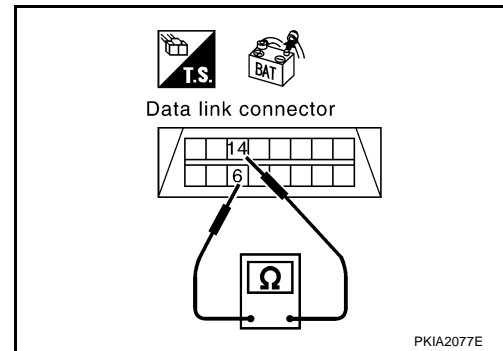

Steering Angle Sensor Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of steering angle sensor for damage, bend and loose connection (sensor side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect steering angle sensor connector.
2. Check resistance between steering angle sensor harness connector M47 terminals 3 (L) and 4 (P).

3 (L) - 4 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace steering angle sensor.
 NG >> Repair harness between steering angle sensor and data link connector.

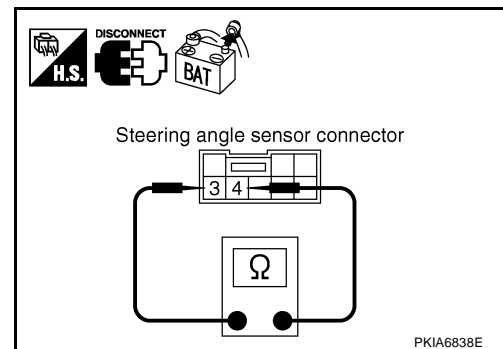

Front Air Control Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of front air control for damage, bend and loose connection (unit side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect front air control connector.
2. Check resistance between front air control harness connector M50 terminals 34 (L) and 35 (P).

34 (L) - 35 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace front air control.
 NG >> Repair harness between front air control and data link connector.

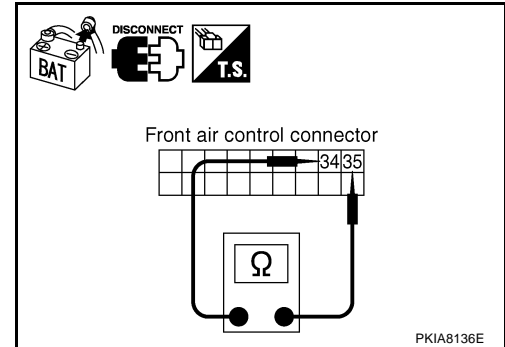

ABS Actuator and Electric Unit (Control Unit) Circuit Check

UKS0017V

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of ABS actuator and electric unit (control unit) for damage, bend and loose connection (control unit side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect ABS actuator and electric unit (control unit) connector.
2. Check resistance between ABS actuator and electric unit (control unit) harness connector E125 terminals 11 (L) and 15 (P).

11 (L) - 15 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace ABS actuator and electric unit (control unit).
 NG >> Repair harness between ABS actuator and electric unit (control unit) and harness connector E152.

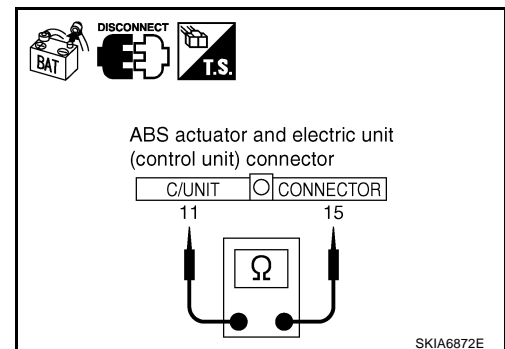

IPDM E/R Circuit Check

UKS0017W

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of IPDM E/R for damage, bend and loose connection (control module side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check resistance between IPDM E/R harness connector E122 terminals 39 (L) and 40 (P).

39 (L) - 40 (P) : Approx. 108 - 132 Ω

OK or NG

- OK >> Replace IPDM E/R.
 NG >> Repair harness between IPDM E/R and harness connector E152.

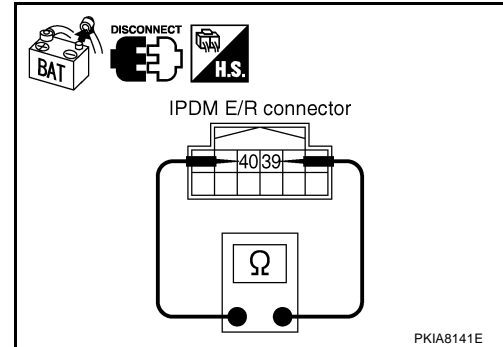

UKS0017X

CAN Communication Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Disconnect the following module and control unit connectors and check terminals for deformation, disconnection, looseness or damage.
 - ECM
 - A/T assembly
 - Combination meter
 - BCM
 - Steering angle sensor
 - Front air control
 - ABS actuator and electric unit (control unit)
 - IPDM E/R

OK or NG

- OK >> GO TO 2.
 NG >> Repair or replace as necessary.


2. CHECK HARNESS FOR SHORT CIRCUIT

With all module and control unit connectors disconnected, check continuity between data link connector M22 terminals 6 (L) and 14 (P).

6 (L) - 14 (P) : Continuity should not exist.

OK or NG

- OK >> GO TO 3.
 NG >> Repair harness.

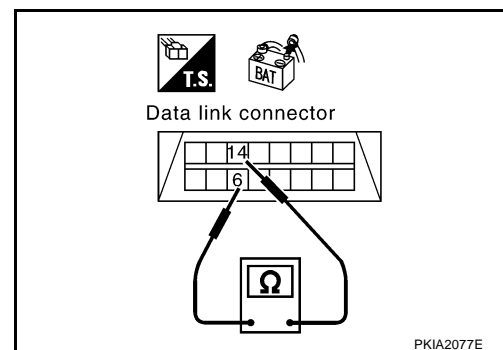

PKIA2077E

3. CHECK HARNESS FOR SHORT CIRCUIT

Check continuity between data link connector M22 terminals 6 (L), 14 (P) and ground.


6 (L) - Ground : Continuity should not exist.

14 (P) - Ground : Continuity should not exist.

OK or NG

OK >> Check ECM and IPDM E/R. Refer to [LAN-44, "ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION"](#) .

NG >> Repair harness.

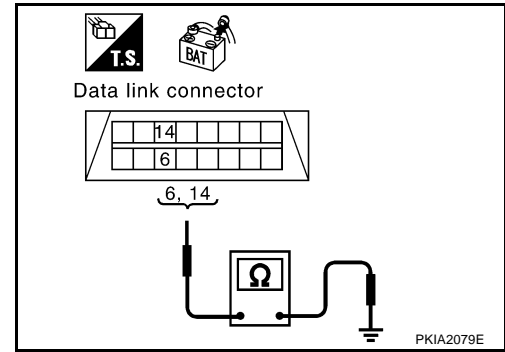

UKS0017Y

IPDM E/R Ignition Relay Circuit Check

Check the following. If no malfunction is found, replace the IPDM E/R.

- IPDM E/R power supply circuit. Refer to [PG-26, "IPDM E/R Power/Ground Circuit Inspection"](#) .
- Ignition power supply circuit. Refer to [PG-13, "IGNITION POWER SUPPLY — IGNITION SW. IN ON AND/OR START"](#) .


Component Inspection

ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION

- Remove ECM and IPDM E/R from vehicle.
- Check resistance between ECM terminals 94 and 86.
- Check resistance between IPDM E/R terminals 39 and 40.

UKS0017Z

| Unit | Terminal | Resistance value (Ω) (Approx.) |
|----------|----------|-----------------------------------|
| ECM | 94 - 86 | 108 - 132 |
| IPDM E/R | 39 - 40 | |

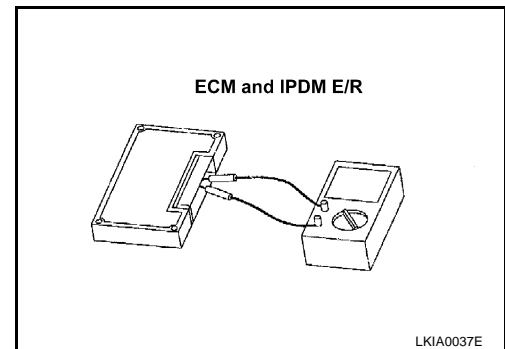

CAN SYSTEM (TYPE 2)

PFP:23710


System Description

UKS0000F

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

Component Parts and Harness Connector Location

UKS0000G

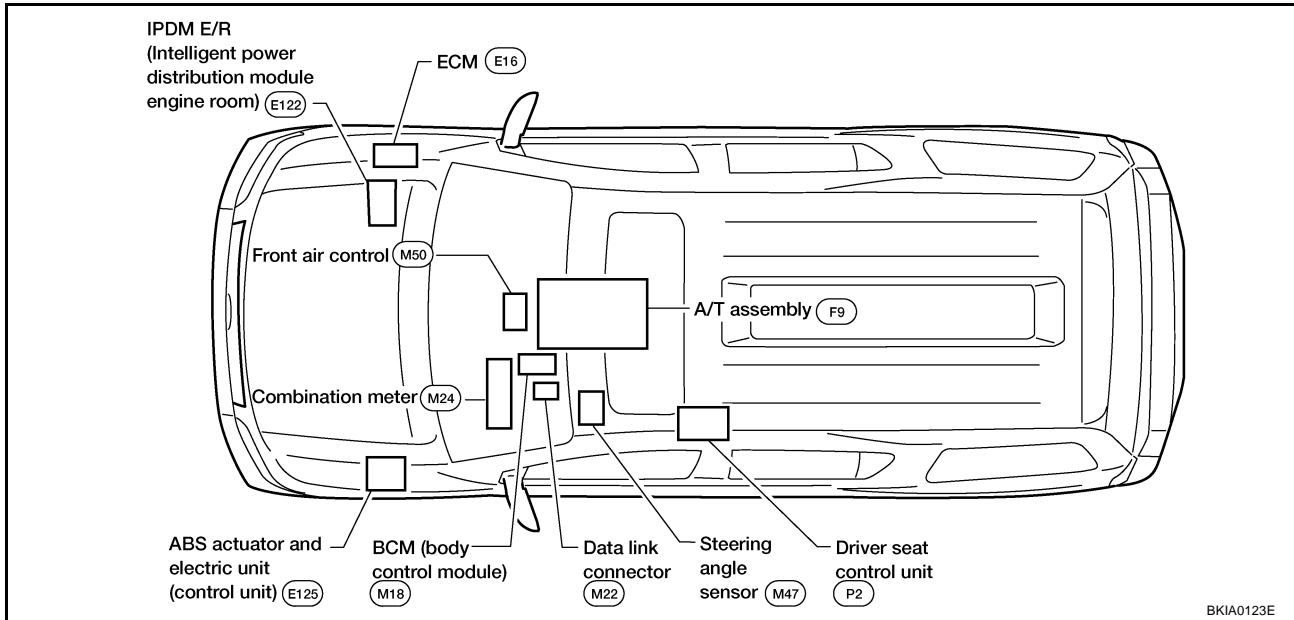

A
B
C
D
E
F
G
H
I
J
L
M


LAN

CAN SYSTEM (TYPE 2)

[CAN]

Schematic

UKS000YT

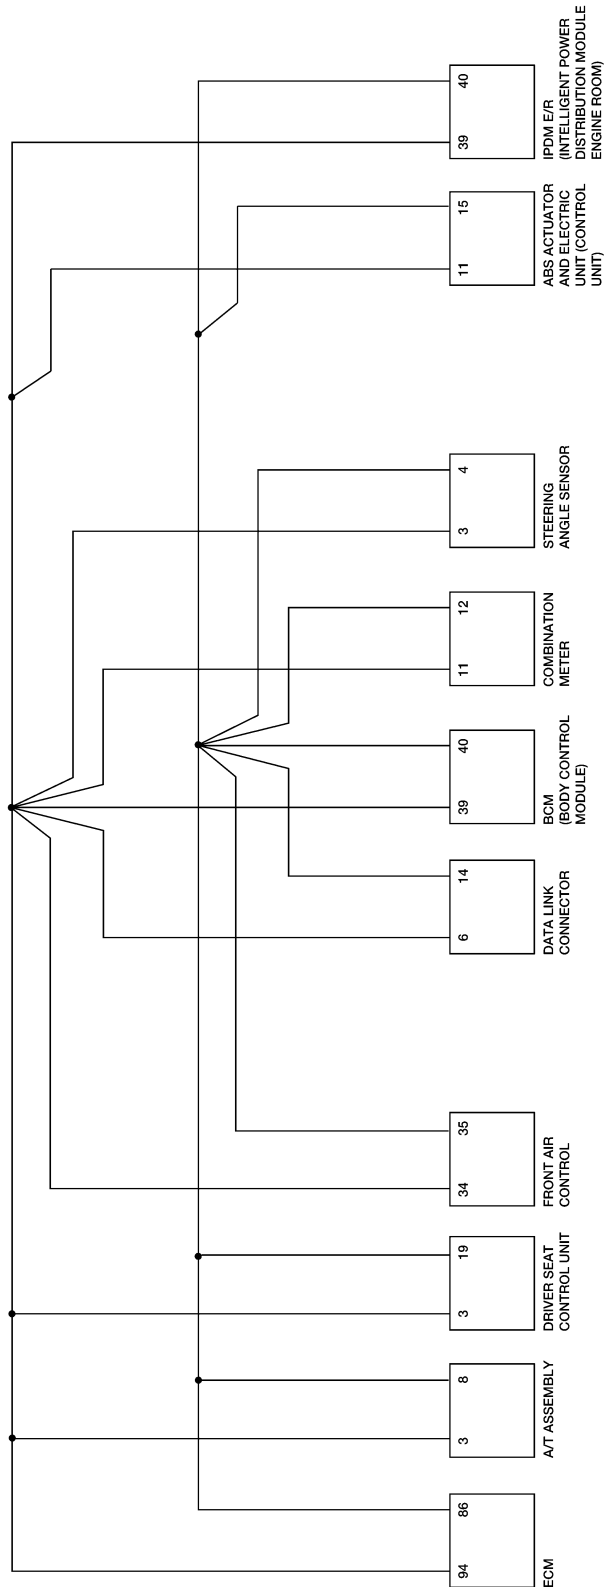

BKWA0186E

CAN SYSTEM (TYPE 2)




[CAN]

Wiring Diagram - CAN -




UKS0000H

LAN-CAN-04

— : DATA LINE

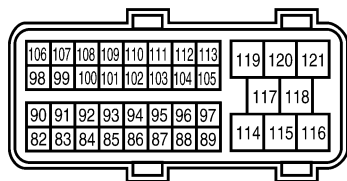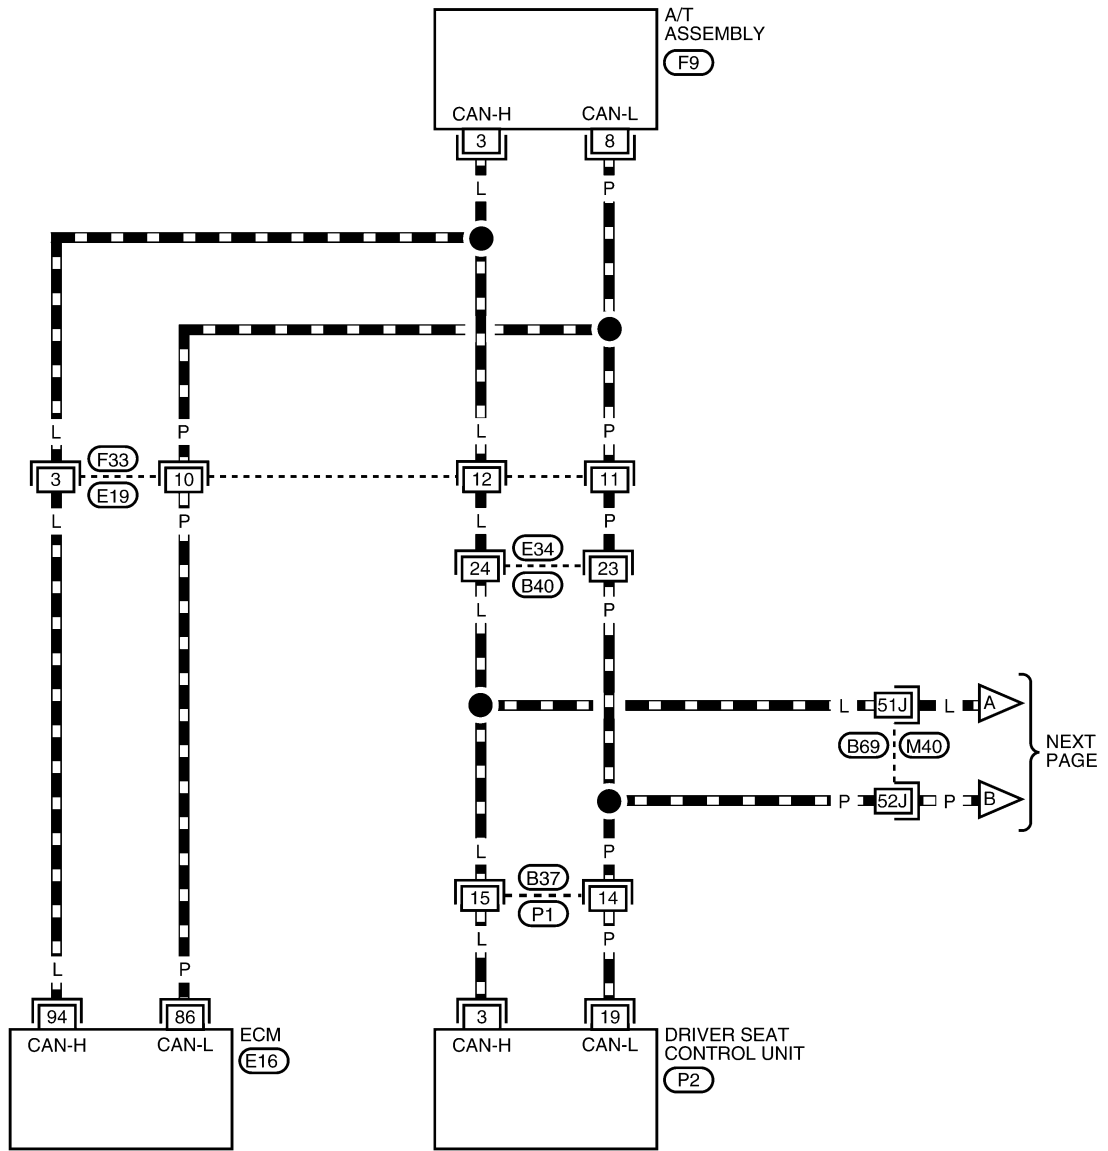

REFER TO THE FOLLOWING.
 (M40) - SUPER MULTIPLE JUNCTION (SMJ)









*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

BKWA0683E

CAN SYSTEM (TYPE 2)

[CAN]


LAN-CAN-05

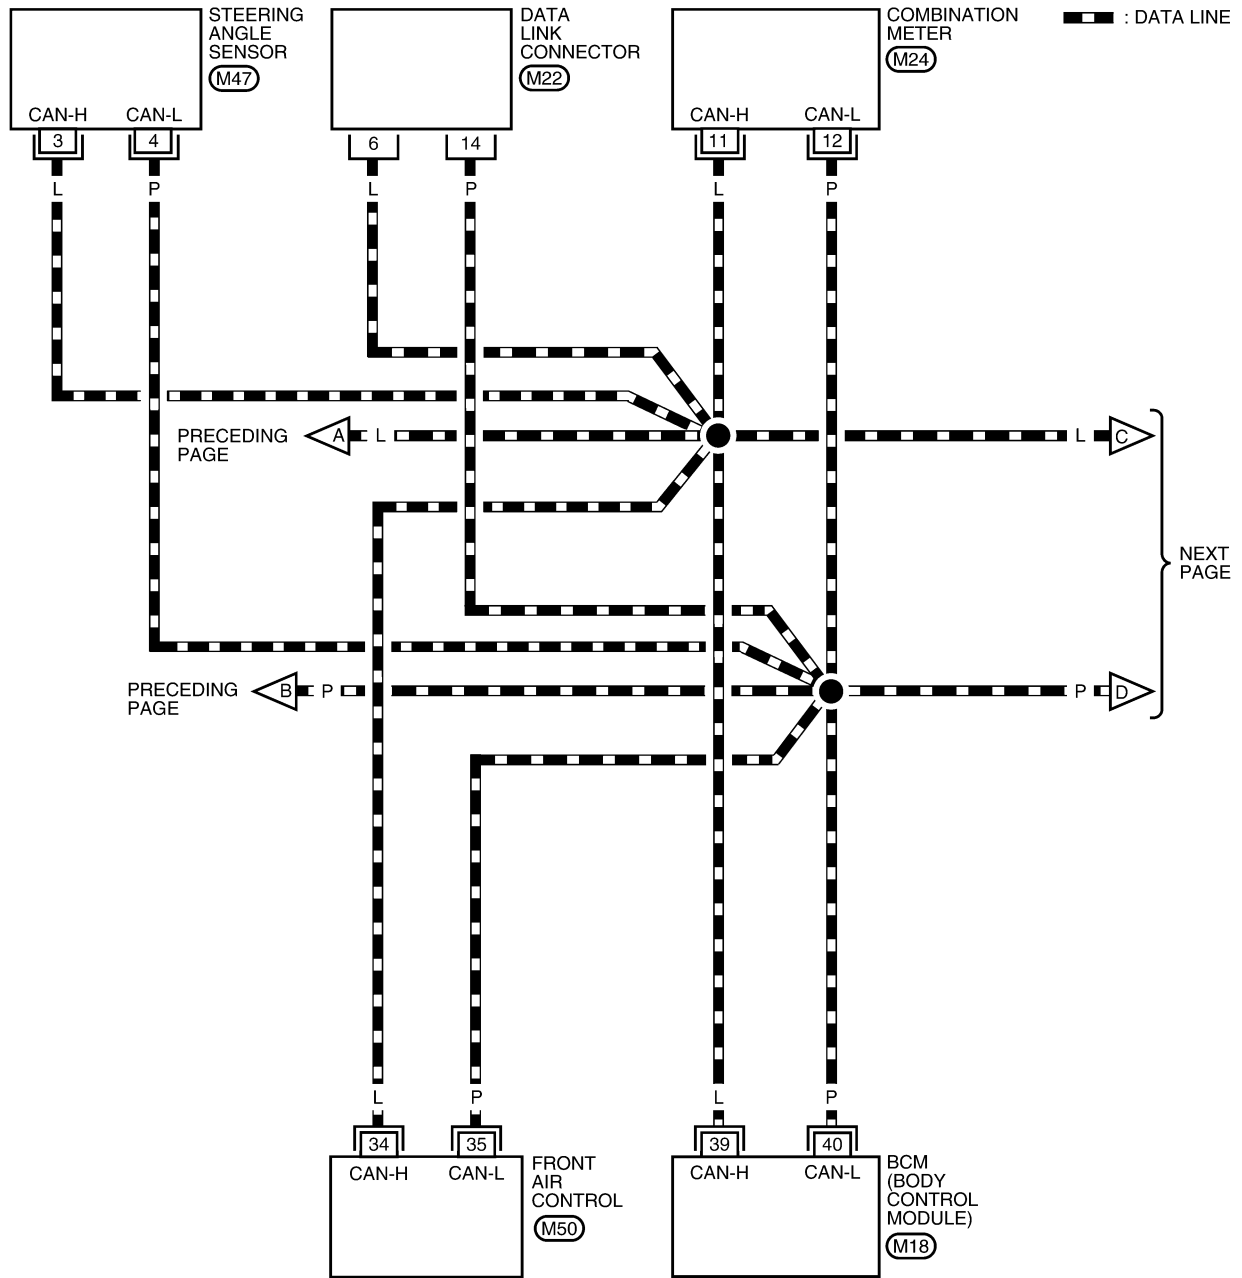



BKWA0411E

LAN-CAN-06

▬ : DATA LINE

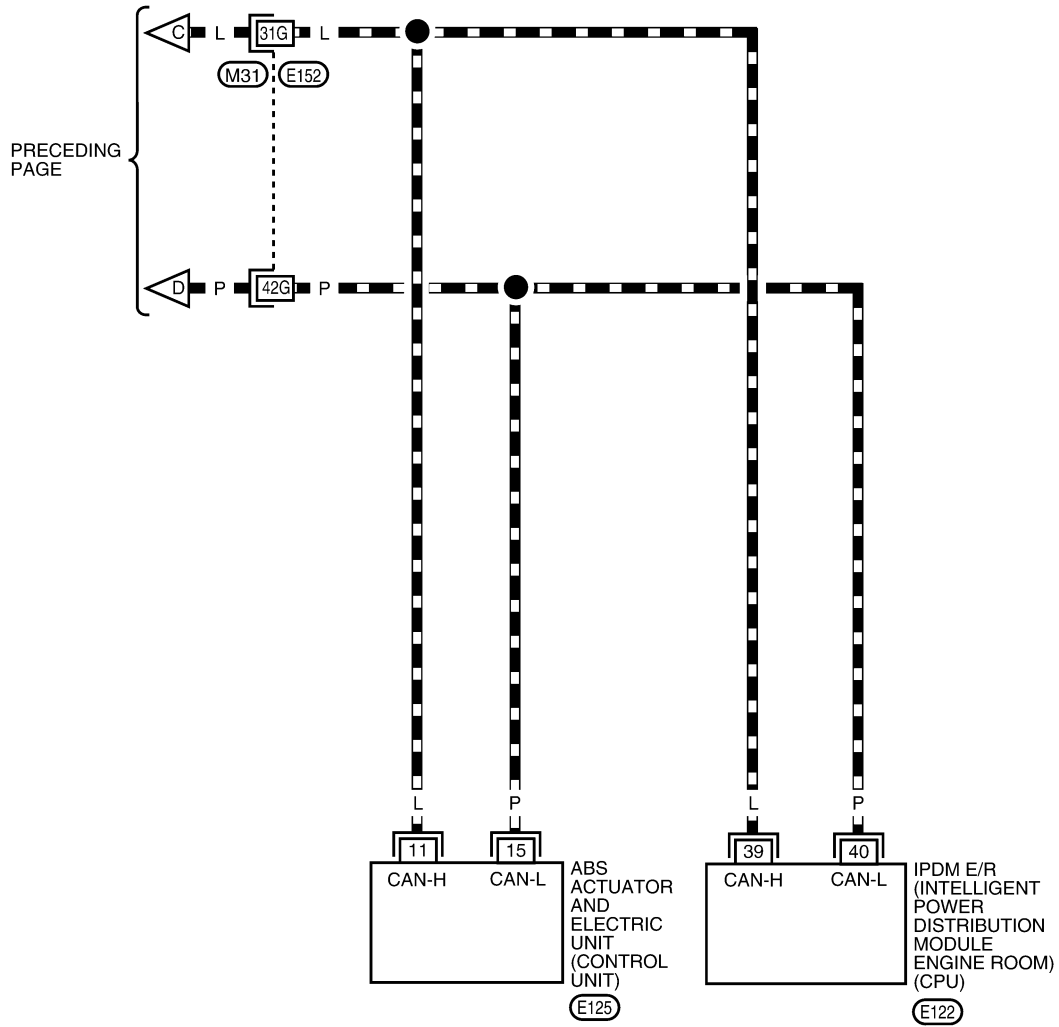

A
B
C
D
E
F
G
H
I
J
LAN
L
M




REFER TO THE FOLLOWING.
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)


BKWA0412E

Work Flow


- When there are no indications of "AUTO DRIVE POS.", "BCM", "HVAC" or "IPDM E/R" on "SELECT SYSTEM" display of CONSULT-II, print the "SELECT SYSTEM".

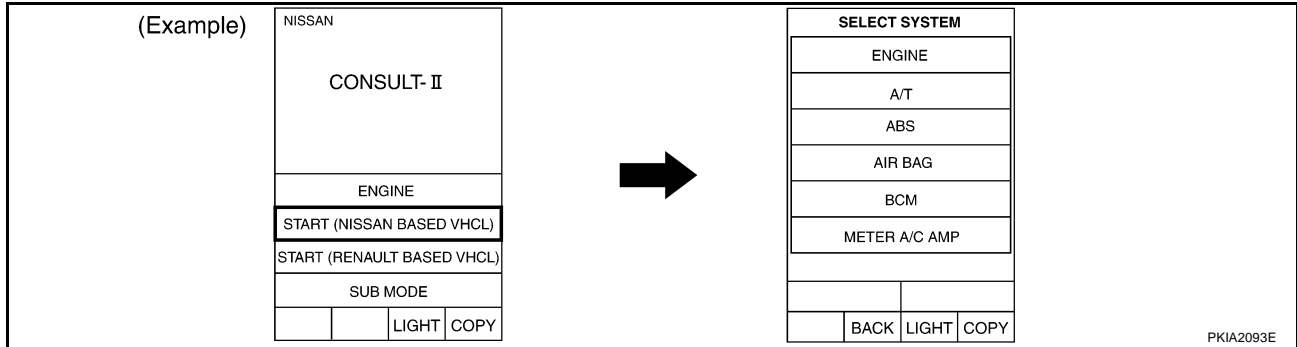

- Print all the data of "SELF-DIAG RESULTS" for "ENGINE", "A/T", "AUTO DRIVE POS.", "BCM", "HVAC", "ABS" and "IPDM E/R" displayed on CONSULT-II.

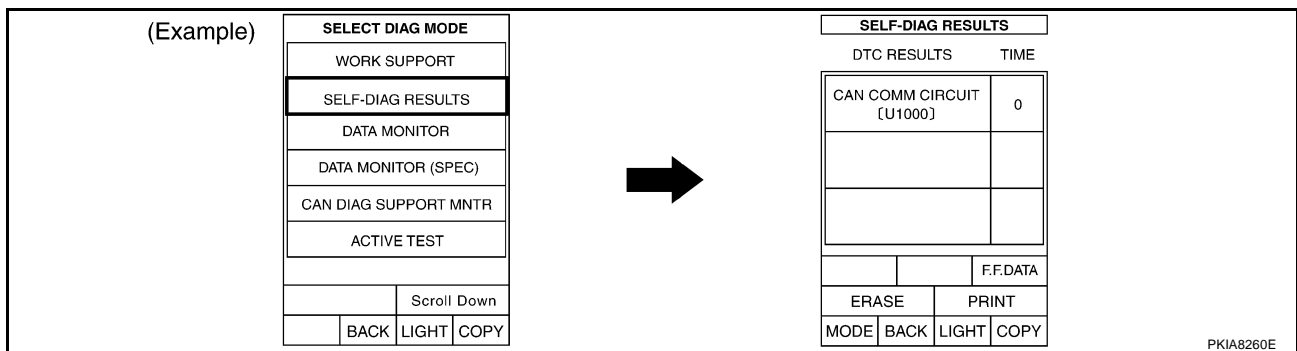

- Print all the data of "CAN DIAG SUPPORT MNTR" for "ENGINE", "A/T", "AUTO DRIVE POS.", "BCM", "HVAC", "ABS" and "IPDM E/R" displayed on CONSULT-II.

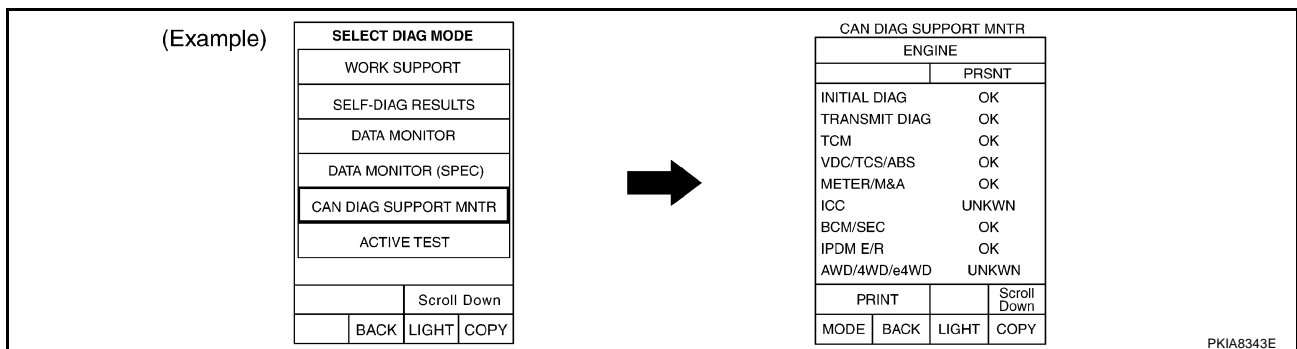

- Attach the printed sheet of "SELECT SYSTEM", "SELF-DIAG RESULTS" and "CAN DIAG SUPPORT MNTR" onto the check sheet. Refer to [LAN-51, "CHECK SHEET"](#).
- Based on the indications of "SELECT SYSTEM" and the results of "CAN DIAG SUPPORT MNTR", puts a check mark onto the items with "No indication", "NG", or "UNKWN" in the check sheet table. Refer to [LAN-51, "CHECK SHEET"](#).

NOTE:

- If "NG" is displayed on "INITIAL DIAG (Initial diagnosis)" as "CAN DIAG SUPPORT MNTR" for the diagnosed control unit, replace the control unit.
- The "CAN DIAG SUPPORT MNTR" items, which are not in check sheet table, are not related to diagnostic procedure on service manual.
So it is not necessary to check the status of the "CAN DIAG SUPPORT MNTR" items not in check sheet table.

- According to the check sheet results (example), start inspection. Refer to [LAN-53, "CHECK SHEET RESULTS \(EXAMPLE\)"](#).

CAN SYSTEM (TYPE 2)

[CAN]

CHECK SHEET

NOTE:

If "NG" is displayed on "INITIAL DIAG (Initial diagnosis)" for the diagnosed control unit, replace the control unit.

Check sheet table

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|------------|---------|-------|--------------|----------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | |
| | | | | ECM | TCM | METER /M&A | BCM/SEC | STRG | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | UNKWN | UNKWN |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | — |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | — | — |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — |

Symptoms :

Attach copy of
SELECT SYSTEM

Attach copy of
SELECT SYSTEM

A
B
C
D
E
F
G
H
I
J
L
M

LAN

CAN SYSTEM (TYPE 2)

[CAN]

Attach copy of
ENGINE
SELF-DIAG RESULTS

Attach copy of
A/T
SELF-DIAG RESULTS

Attach copy of
AUTO DRIVE POS.
SELF-DIAG RESULTS

Attach copy of
BCM
SELF-DIAG RESULTS

Attach copy of
HVAC
SELF-DIAG RESULTS

Attach copy of
ABS
SELF-DIAG RESULTS

Attach copy of
IPDM E/R
SELF-DIAG RESULTS

Attach copy of
ENGINE
CAN DIAG SUPPORT
MNTR

Attach copy of
A/T
CAN DIAG SUPPORT
MNTR

Attach copy of
AUTO DRIVE POS.
CAN DIAG SUPPORT
MNTR

Attach copy of
BCM
CAN DIAG SUPPORT
MNTR

Attach copy of
HVAC
CAN DIAG SUPPORT
MNTR

Attach copy of
ABS
CAN DIAG SUPPORT
MNTR

Attach copy of
IPDM E/R
CAN DIAG SUPPORT
MNTR

PKIB6658E

CHECK SHEET RESULTS (EXAMPLE)

NOTE:


If "NG" is displayed on "INITIAL DIAG (Initial diagnosis)" for the diagnosed control unit, replace the control unit.

Case 1

Check harness between TCM and driver seat control unit. Refer to [LAN-67, "Circuit Check Between TCM and Driver Seat Control Unit"](#).

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|------------|---------|-------|--------------|----------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | |
| | | | | ECM | TCM | METER /M&A | BCM/SEC | STRG | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | UNKWN | UNKWN |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | — |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | — | — |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — |

SKIB3431E

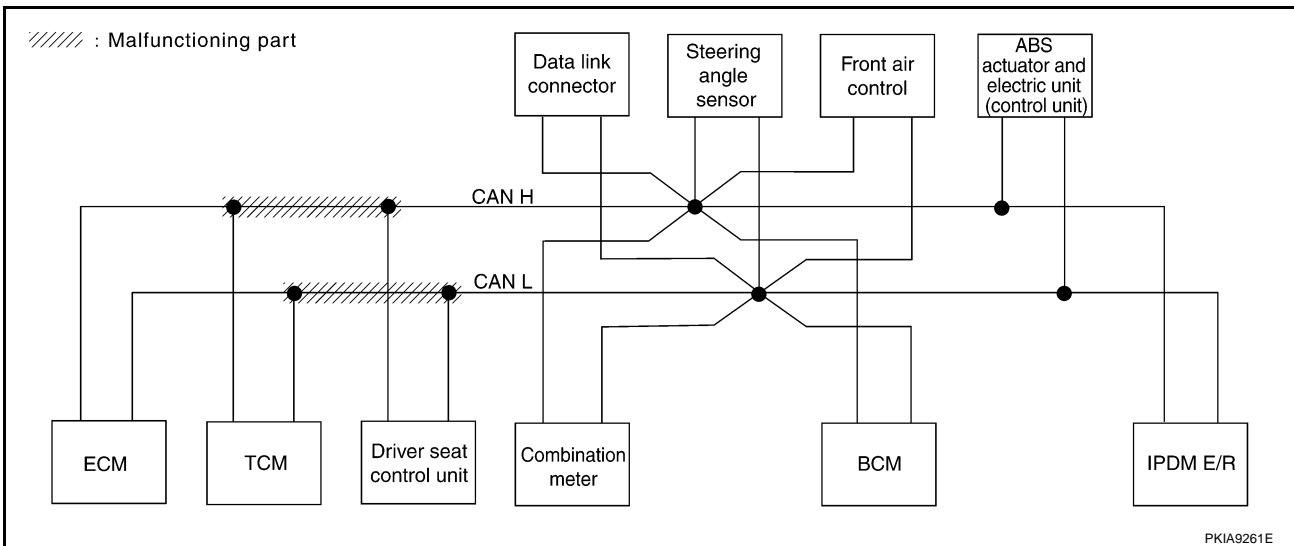

CAN SYSTEM (TYPE 2)


[CAN]

Case 2

Check harness between driver seat control unit and data link connector. Refer to [LAN-68, "Circuit Check Between Driver Seat Control Unit and Data Link Connector"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | |
|----------------------|-----------------|-----------------------|--------------------|-------------------|---------|------------|---------|-------|--------------|----------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | |
| | | | | ECM | TCM | METER /M&A | BCM/SEC | STRG | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN ✓ | UNKWN ✓ | — | UNKWN ✓ | UNKWN ✓ |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN ✓ | — | — | UNKWN ✓ | — |
| AUTO DRIVE POS. | No indication ✓ | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | — | — |
| BCM | No indication | NG | UNKWN | UNKWN ✓ | — | UNKWN | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN ✓ | — | — | UNKWN | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN ✓ | UNKWN ✓ | — | — | UNKWN | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN ✓ | — | — | UNKWN | — | — | — |

SKIB3432E

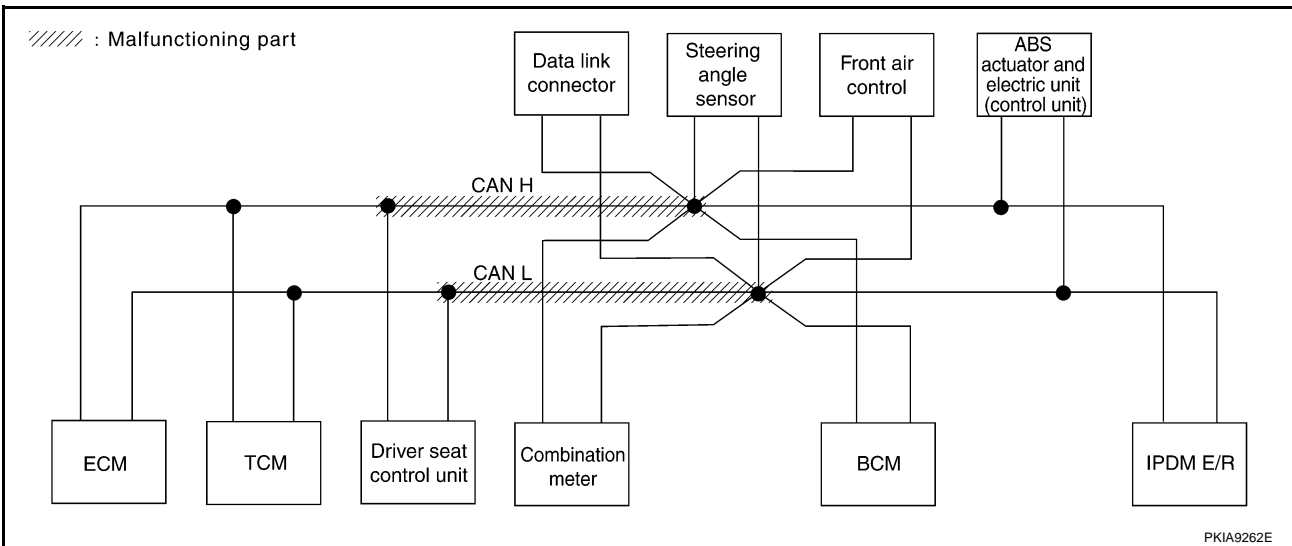

PKIA9262E

CAN SYSTEM (TYPE 2)


[CAN]

Case 3

Check harness between data link connector and IPDM E/R. Refer to [LAN-69, "Circuit Check Between Data Link Connector and IPDM E/R"](#).

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|------------|---------|-------|--------------|----------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | IPDM E/R |
| | | | | ECM | TCM | METER /M&A | BCM/SEC | STRG | VDC/TCS /ABS | |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | UNKWN | UNKWN |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | — |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | — | — |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — |

SKIB3433E

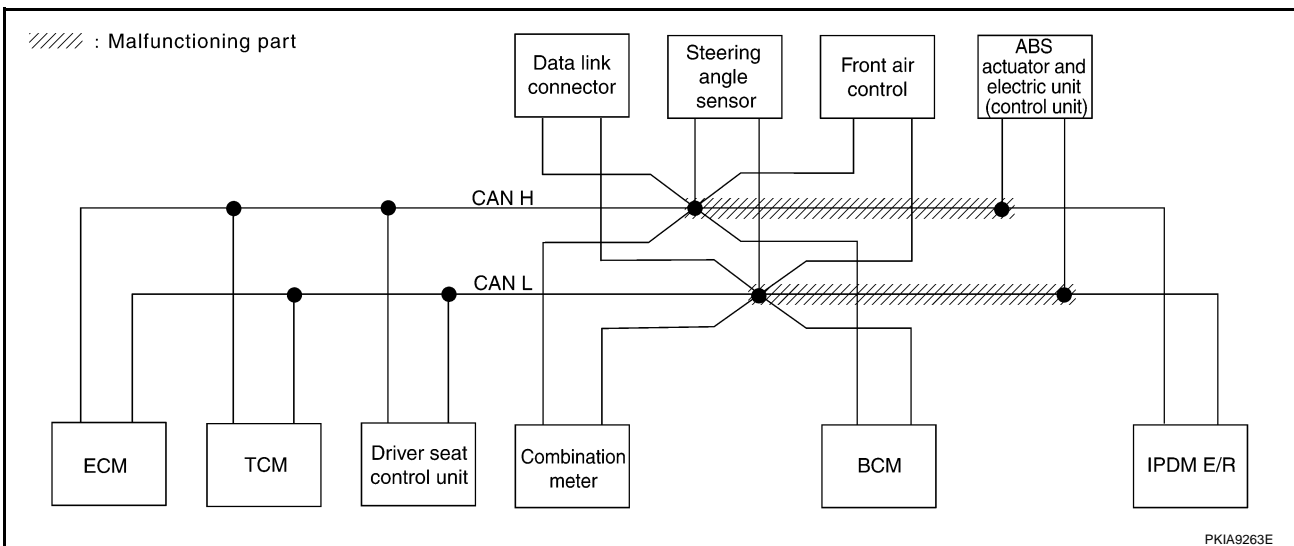

CAN SYSTEM (TYPE 2)


[CAN]

Case 4

Check ECM circuit. Refer to [LAN-70, "ECM Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|---------|------------|---------|-------|--------------|----------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | |
| | | | | ECM | TCM | METER /M&A | BCM/SEC | STRG | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN ✓ | — | UNKWN ✓ | UNKWN ✓ | UNKWN ✓ | — | UNKWN ✓ | UNKWN ✓ |
| A/T | — | NG | UNKWN | UNKWN ✓ | — | UNKWN | — | — | UNKWN | — |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | — | — |
| BCM | No indication | NG | UNKWN | UNKWN ✓ | — | UNKWN | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN ✓ | — | — | UNKWN | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN ✓ | UNKWN | — | — | UNKWN | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN ✓ | — | — | UNKWN | — | — | — |

SKIB3434E

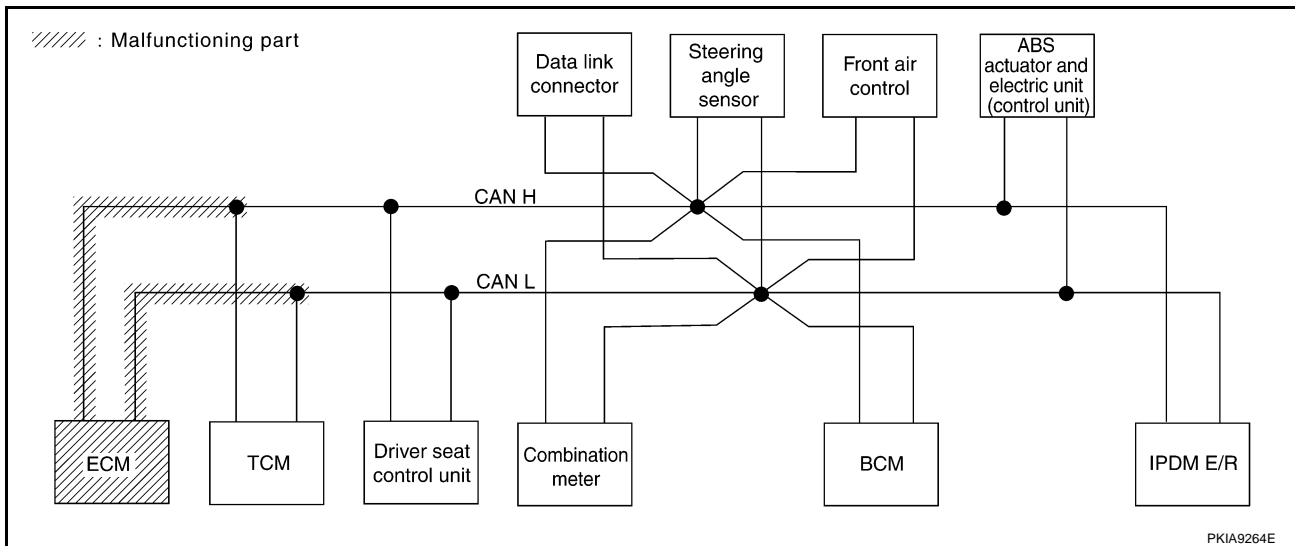

PKIA9264E

CAN SYSTEM (TYPE 2)


[CAN]

Case 5

Check TCM circuit. Refer to [LAN-70, "TCM Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|------------|---------|-------|--------------|----------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | |
| | | | | ECM | TCM | METER /M&A | BCM/SEC | STRG | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | UNKWN | UNKWN |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | — |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | — | — |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — |

SKIB3435E

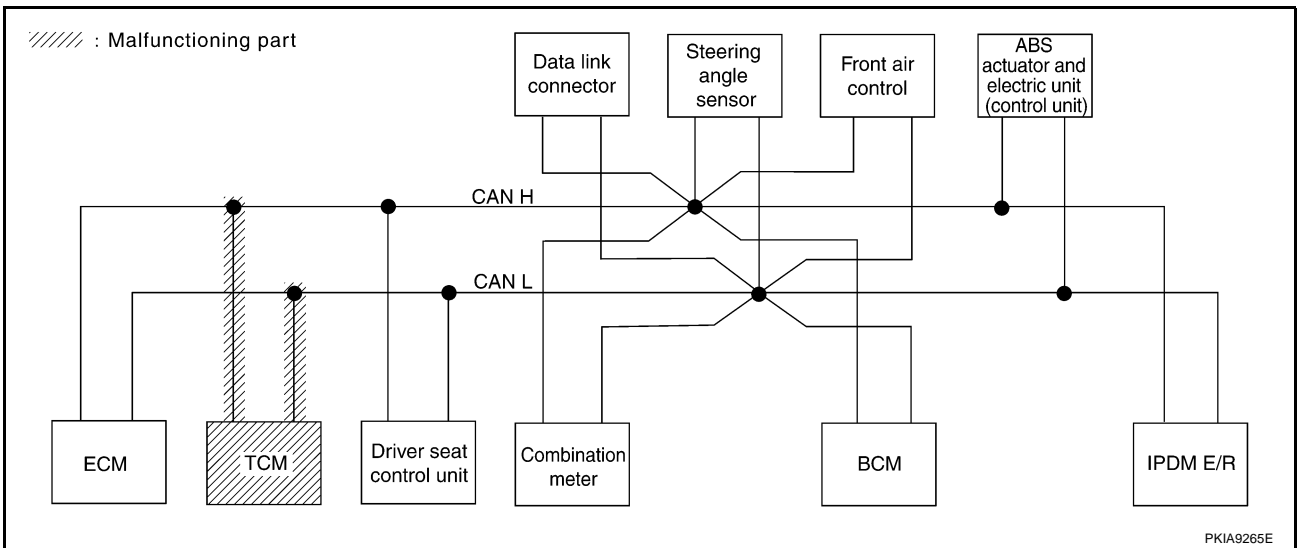

CAN SYSTEM (TYPE 2)


[CAN]

Case 6

Check driver seat control unit circuit. Refer to [LAN-71, "Driver Seat Control Unit Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | |
|----------------------|-----------------|-----------------------|--------------------|-------------------|-------|------------|---------|-------|--------------|----------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | |
| | | | | ECM | TCM | METER /M&A | BCM/SEC | STRG | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | UNKWN | UNKWN |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | — |
| AUTO DRIVE POS. | No indication ✓ | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | — | — |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — |

SKIB3436E

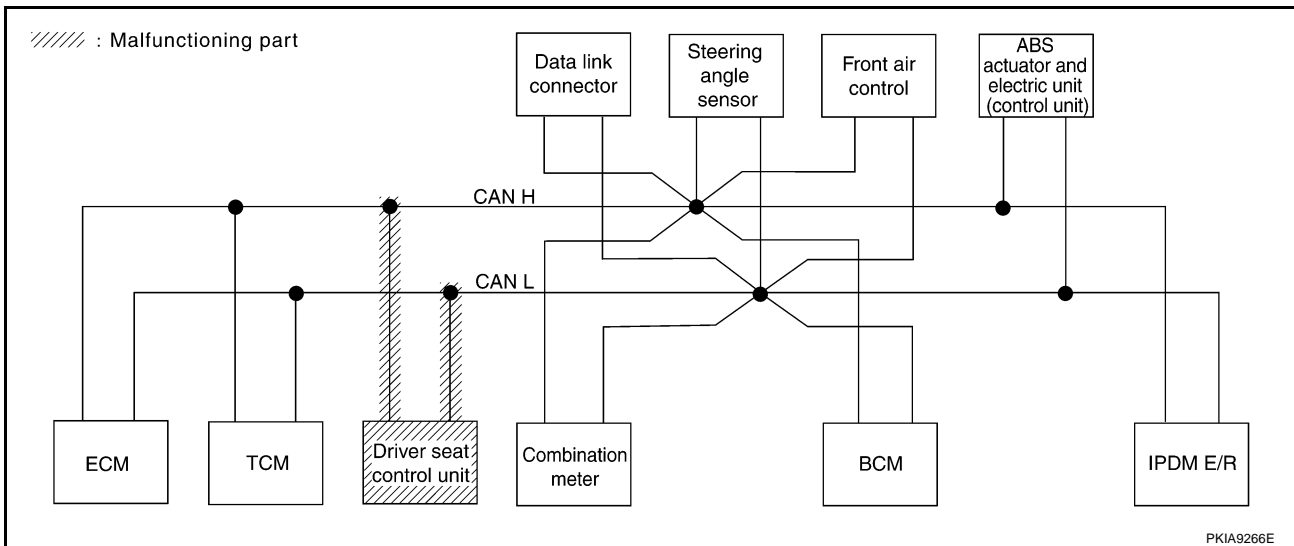

PKIA9266E

CAN SYSTEM (TYPE 2)


[CAN]

Case 7

Check combination meter circuit. Refer to [LAN-71, "Combination Meter Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|------------|---------|-------|--------------|----------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | |
| | | | | ECM | TCM | METER /M&A | BCM/SEC | STRG | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN ✓ | UNKWN | — | UNKWN | UNKWN |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN ✓ | — | — | UNKWN | — |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN ✓ | UNKWN | — | — | — |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN ✓ | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — |

SKIB3437E

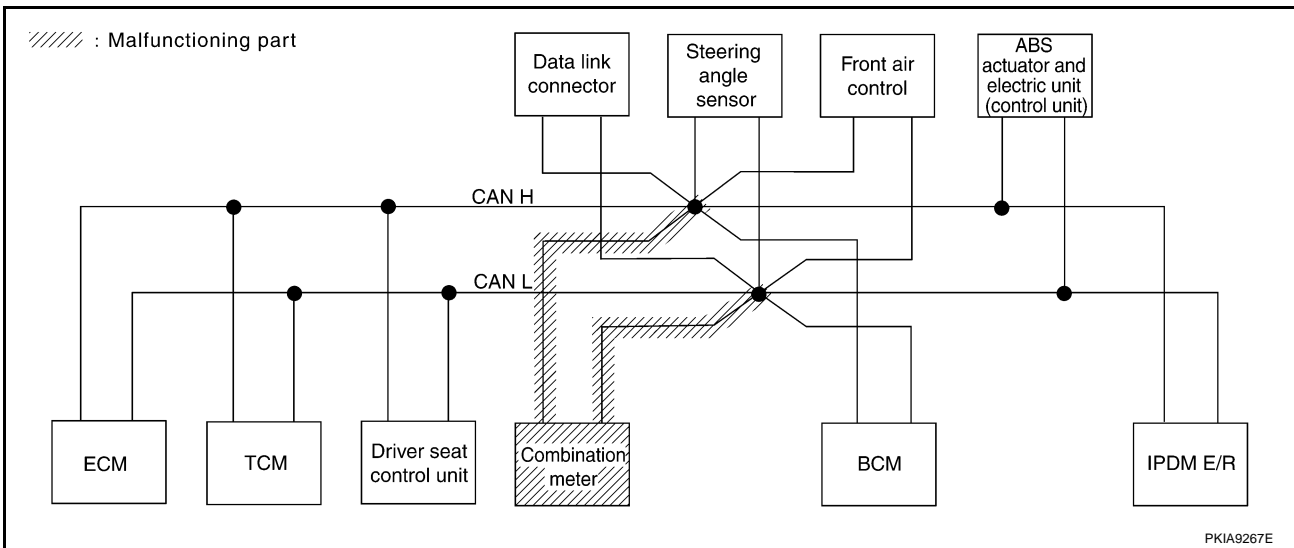

A
B
C
D
E
F
G
H
I
J
LAN
L
M

CAN SYSTEM (TYPE 2)


[CAN]

Case 8

Check BCM circuit. Refer to [LAN-72, "BCM Circuit Check"](#).

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | |
|----------------------|-----------------|-----------------------|--------------------|-------------------|-------|------------|---------|-------|--------------|----------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | |
| | | | | ECM | TCM | METER /M&A | BCM/SEC | STRG | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN ✓ | — | UNKWN | UNKWN |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | — |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN | UNKWN ✓ | — | — | — |
| BCM | No indication ✓ | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN ✓ | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | UNKWN ✓ | — | — | — |

SKIB3438E

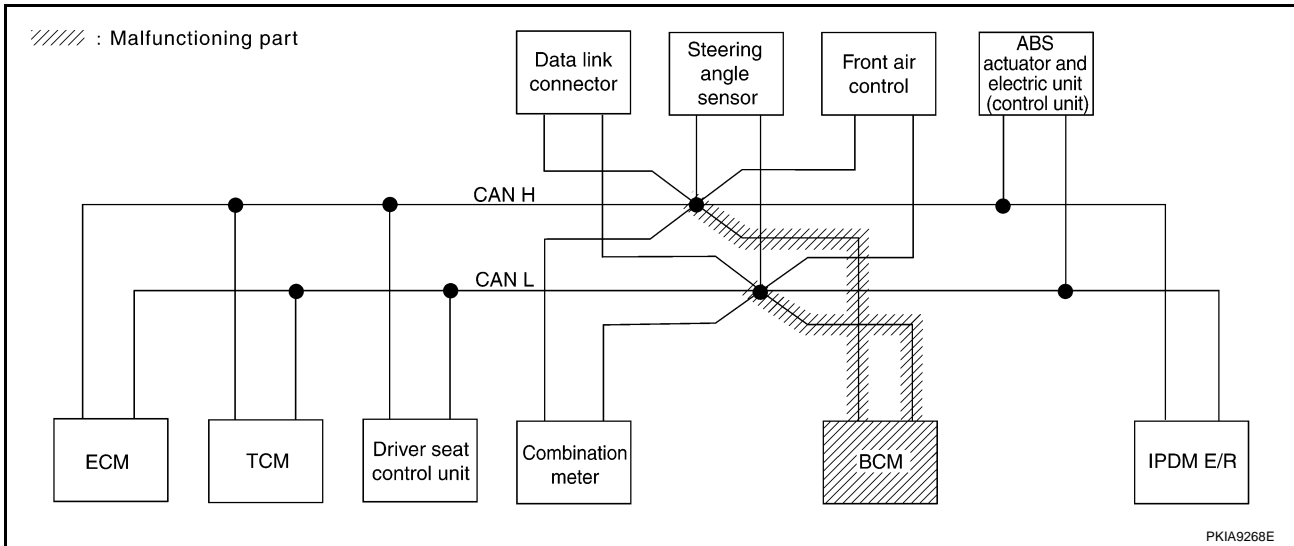

PKIA9268E

CAN SYSTEM (TYPE 2)


[CAN]

Case 9

Check data link connector circuit. Refer to [LAN-72, "Data Link Connector Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | |
|----------------------|-----------------|-----------------------|--------------------|-------------------|-------|------------|---------|-------|--------------|----------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | |
| | | | | ECM | TCM | METER /M&A | BCM/SEC | STRG | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | UNKWN | UNKWN |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | — |
| AUTO DRIVE POS. | No indication ✓ | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | — | — |
| BCM | No indication ✓ | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | UNKWN |
| HVAC | No indication ✓ | — | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | — |
| IPDM E/R | No indication ✓ | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — |

SKIB3439E

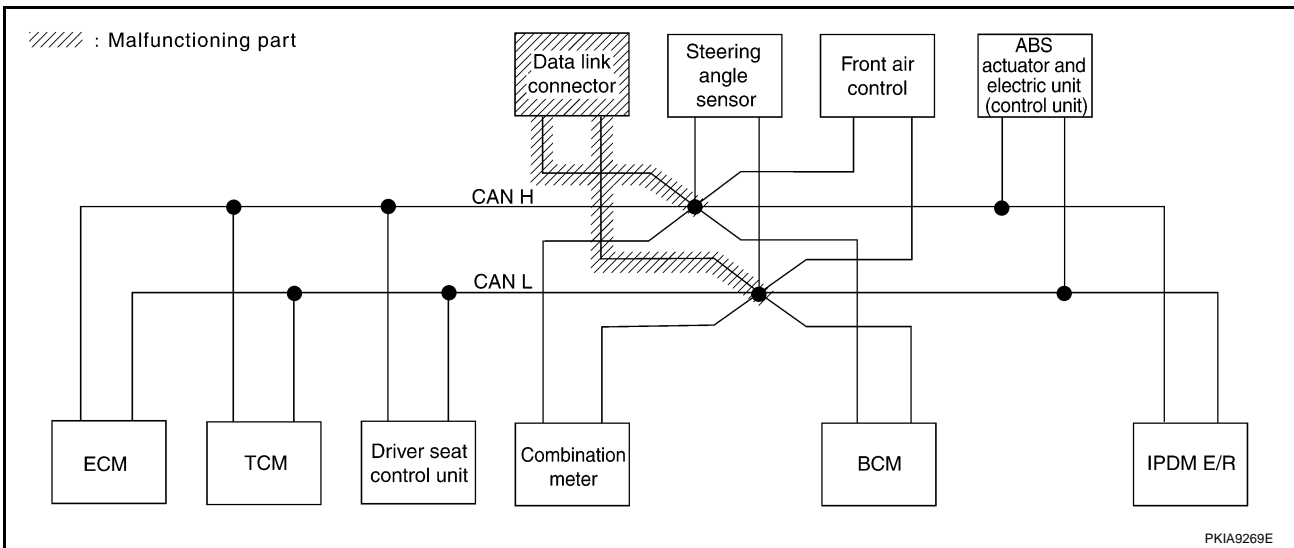

CAN SYSTEM (TYPE 2)


[CAN]

Case 10

Check steering angle sensor circuit. Refer to [LAN-73, "Steering Angle Sensor Circuit Check"](#).

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|------------|---------|-------|--------------|----------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | |
| | | | | ECM | TCM | METER /M&A | BCM/SEC | STRG | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | UNKWN | UNKWN |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | — |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | — | — |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — |

SKIB3440E

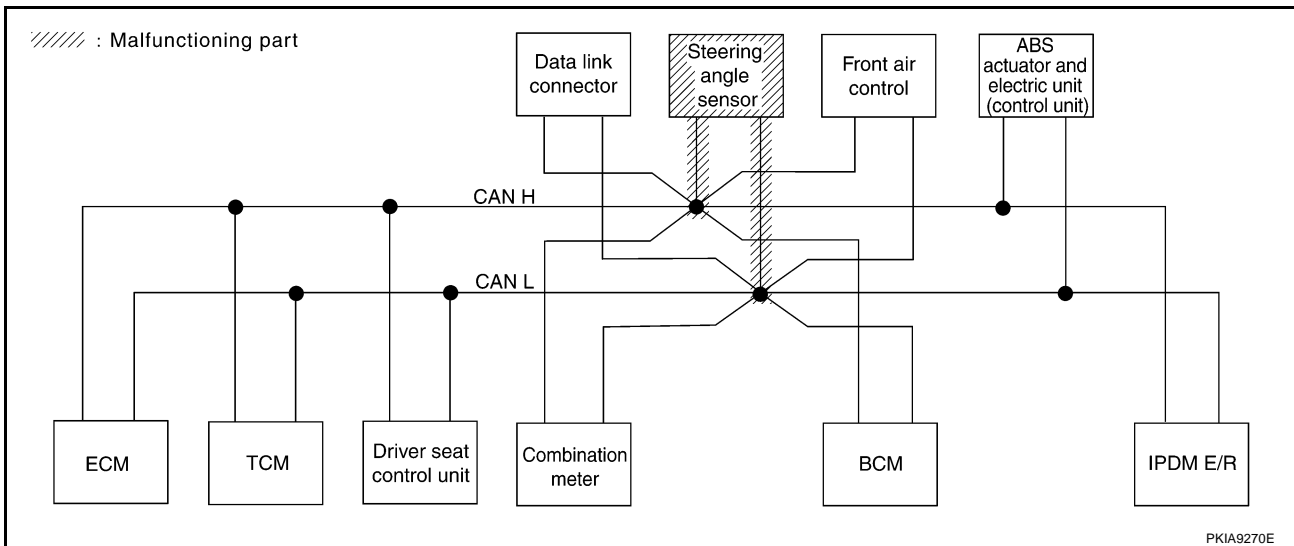

CAN SYSTEM (TYPE 2)


[CAN]

Case 11

Check front air control circuit. Refer to [LAN-73, "Front Air Control Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | |
|----------------------|-----------------|-----------------------|--------------------|-------------------|-------|------------|---------|-------|--------------|----------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | |
| | | | | ECM | TCM | METER /M&A | BCM/SEC | STRG | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | UNKWN | UNKWN |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | — |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | — | — |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | UNKWN |
| HVAC | No indication ✓ | — | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — |

SKIB3441E

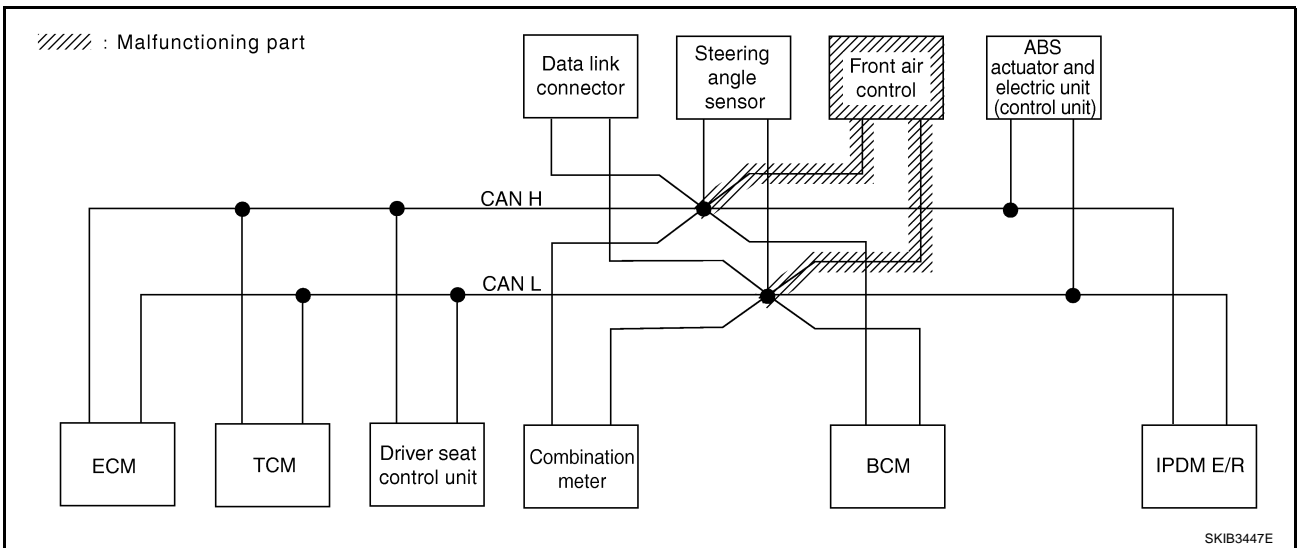

CAN SYSTEM (TYPE 2)


[CAN]

Case 12

Check ABS actuator and electric unit (control unit) circuit. Refer to [LAN-74, "ABS Actuator and Electric Unit \(Control Unit\) Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|---------|------------|---------|---------|--------------|----------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | |
| | | | | ECM | TCM | METER /M&A | BCM/SEC | STRG | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | UNKWN ✓ | UNKWN |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN ✓ | — |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | — | — |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN ✓ | — |
| ABS | — | NG ✓ | UNKWN ✓ | UNKWN ✓ | UNKWN ✓ | — | — | UNKWN ✓ | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — |

SKIB3442E

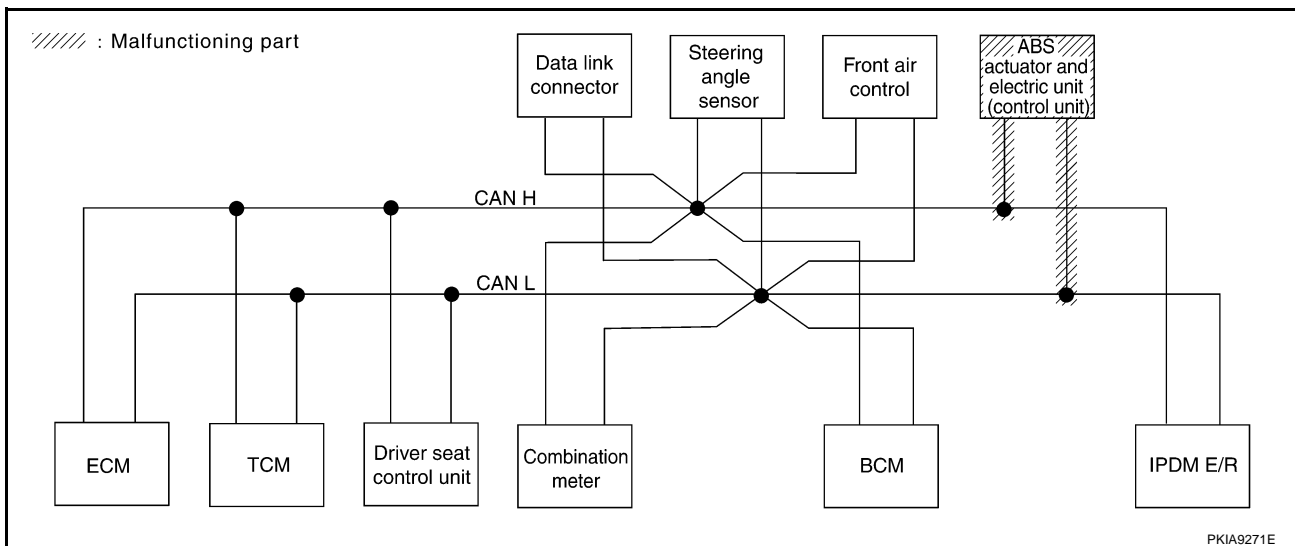

PKIA9271E

CAN SYSTEM (TYPE 2)


[CAN]

Case 13

Check IPDM E/R circuit. Refer to [LAN-74, "IPDM E/R Circuit Check"](#).

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | |
|----------------------|-----------------|-----------------------|--------------------|-------------------|-------|------------|---------|-------|--------------|----------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | |
| | | | | ECM | TCM | METER /M&A | BCM/SEC | STRG | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | UNKWN | UNKWN ✓ |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | — |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | — | — |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | UNKWN ✓ |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | — |
| IPDM E/R | No indication ✓ | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — |

SKIB3443E

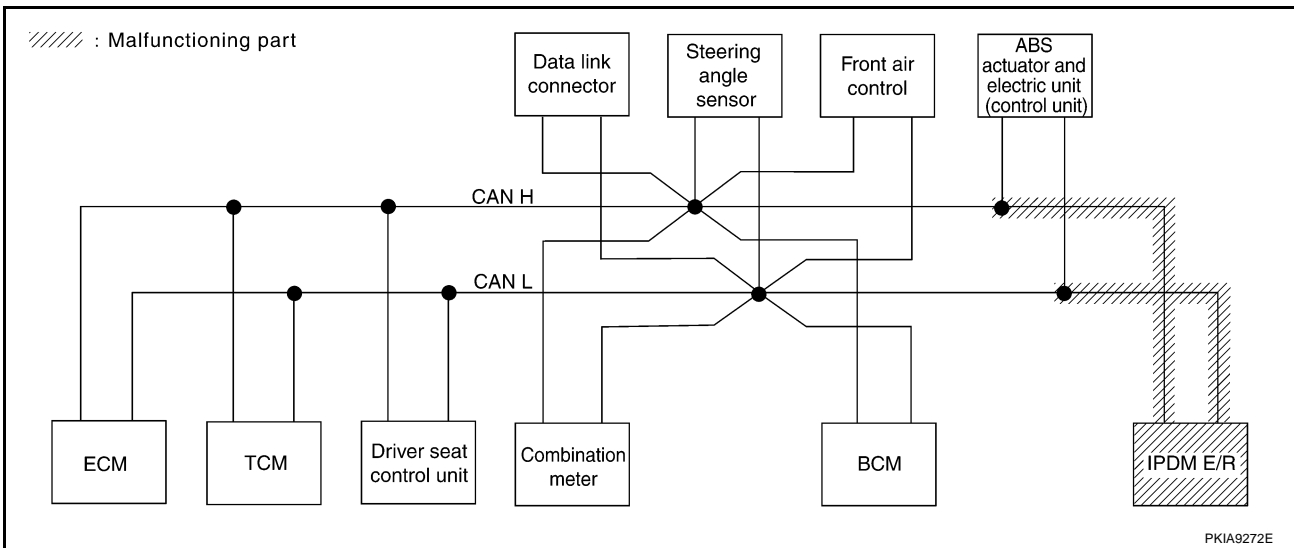

A
B
C
D
E
F
G
H
I
J
K
L
M

LAN

CAN SYSTEM (TYPE 2)

[CAN]

Case 14

Check CAN communication circuit. Refer to [LAN-75, "CAN Communication Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | |
| | | | | ECM | TCM | METER /M&A | BCM/SEC | STRG | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKW N | — | UNKW N | UNKW N | UNKW N | — | UNKW N | UNKW N |
| A/T | — | NG | UNKW N | UNKW N | — | UNKW N | — | — | UNKW N | — |
| AUTO DRIVE POS. | No indication | NG | UNKW N | — | UNKW N | UNKW N | UNKW N | — | — | — |
| BCM | No indication | NG | UNKW N | UNKW N | — | UNKW N | — | — | — | UNKW N |
| HVAC | No indication | — | UNKW N | UNKW N | — | — | UNKW N | — | UNKW N | — |
| ABS | — | NG | UNKW N | UNKW N | UNKW N | — | — | UNKW N | — | — |
| IPDM E/R | No indication | — | UNKW N | UNKW N | — | — | UNKW N | — | — | — |

SKIB3444E

Case 15

Check IPDM E/R ignition relay circuit continuously sticks "OFF". Refer to [LAN-75, "IPDM E/R Ignition Relay Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | |
| | | | | ECM | TCM | METER /M&A | BCM/SEC | STRG | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKW N | — | UNKW N | UNKW N | UNKW N | — | UNKW N | UNKW N |
| A/T | — | NG | UNKW N | UNKW N | — | UNKW N | — | — | UNKW N | — |
| AUTO DRIVE POS. | No indication | NG | UNKW N | — | UNKW N | UNKW N | UNKW N | — | — | — |
| BCM | No indication | NG | UNKW N | UNKW N | — | UNKW N | — | — | — | UNKW N |
| HVAC | No indication | — | UNKW N | UNKW N | — | — | UNKW N | — | UNKW N | — |
| ABS | — | NG | UNKW N | UNKW N | UNKW N | — | — | UNKW N | — | — |
| IPDM E/R | No indication | — | UNKW N | UNKW N | — | — | UNKW N | — | — | — |

SKIB3445E

Case 16

Check IPDM E/R ignition relay circuit continuously sticks "ON". Refer to [LAN-75, "IPDM E/R Ignition Relay Circuit Check"](#).

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|------|------------|---------|------|--------------|----------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | IPDM E/R |
| | | | | ECM | TCM | METER /M&A | BCM/SEC | STRG | VDC/TCS /ABS | |
| ENGINE | — | NG | UNKW | — | UNKW | UNKW | UNKW | — | UNKW | UNKW |
| A/T | — | NG | UNKW | ✓ | — | ✓ | — | — | UNKW | — |
| AUTO DRIVE POS. | No indication | NG | UNKW | — | UNKW | UNKW | UNKW | — | — | — |
| BCM | No indication | NG | UNKW | UNKW | — | UNKW | — | — | — | UNKW |
| HVAC | No indication | — | UNKW | UNKW | — | — | UNKW | — | UNKW | — |
| ABS | — | NG | UNKW | ✓ | UNKW | — | — | ✓ | — | — |
| IPDM E/R | No indication | — | UNKW | UNKW | — | — | UNKW | — | — | — |

SKIB3446E

Circuit Check Between TCM and Driver Seat Control Unit

UKS0018E

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector F33
 - Harness connector E19
 - Harness connector E34
 - Harness connector B40

OK or NG

OK >> GO TO 2.

NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect A/T assembly connector and harness connector F33.
2. Check continuity between A/T assembly harness connector F9 terminals 3 (L), 8 (P) and harness connector F33 terminals 12 (L), 11 (P).


3 (L) - 12 (L) : Continuity should exist.

8 (P) - 11 (P) : Continuity should exist.

OK or NG

OK >> GO TO 3.

NG >> Repair harness.

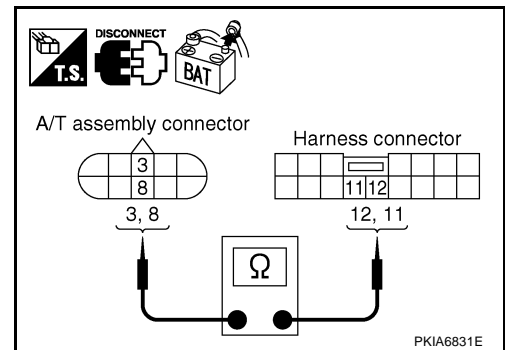


3. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect harness connector E34.
2. Check continuity between harness connector E19 terminals 12 (L), 11 (P) and harness connector E34 terminals 24 (L), 23 (P).

12 (L) - 24 (L) : Continuity should exist.
11 (P) - 23 (P) : Continuity should exist.

OK or NG

- OK >> GO TO 4.
 NG >> Repair harness.

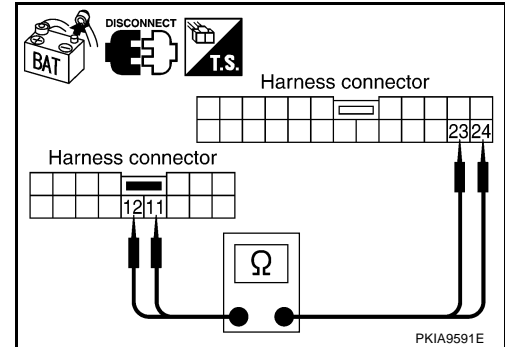


4. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect driver seat control unit connector.
2. Check continuity between harness connector B40 terminals 24 (L), 23 (P) and driver seat control unit harness connector P2 terminals 3 (L), 19 (P).

24 (L) - 3 (L) : Continuity should exist.
23 (P) - 19 (P) : Continuity should exist.

OK or NG

- OK >> Connect all the connectors and diagnose again. Refer to [LAN-50, "Work Flow"](#).
 NG >> Repair harness.

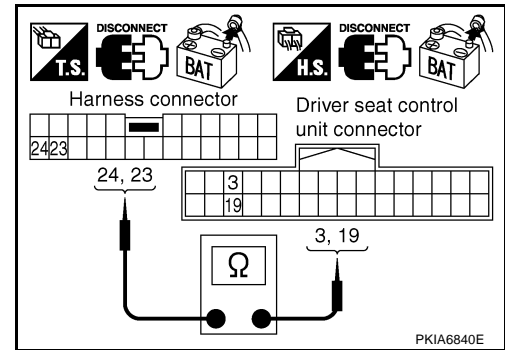

Circuit Check Between Driver Seat Control Unit and Data Link Connector

UKS00181

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B69
 - Harness connector M40

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect driver seat control unit connector and harness connector B69.
2. Check continuity between driver seat control unit harness connector P2 terminals 3 (L), 19 (P) and harness connector B69 terminals 51J (L), 52J (P).

3 (L) - 51J (L) : Continuity should exist.
19 (P) - 52J (P) : Continuity should exist.

OK or NG

- OK >> GO TO 3.
 NG >> Repair harness.

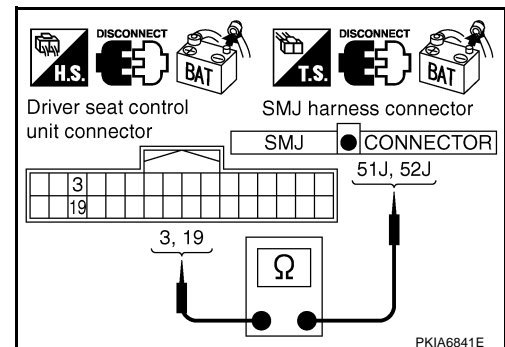

3. CHECK HARNESS FOR OPEN CIRCUIT


Check continuity between harness connector M40 terminals 51J (L), 52J (P) and data link connector M22 terminals 6 (L), 14 (P).

51J (L) - 6 (L) : Continuity should exist.

52J (P) - 14 (P) : Continuity should exist.

OK or NG

- OK >> Connect all the connectors and diagnose again. Refer to [LAN-50, "Work Flow"](#).
- NG >> Repair harness.

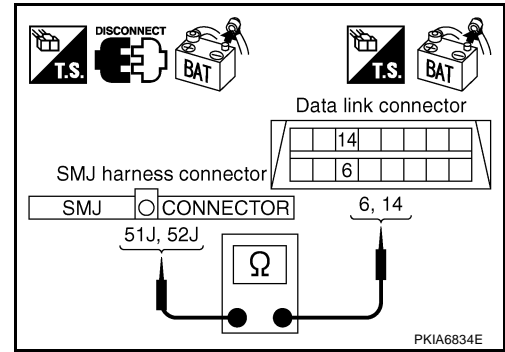

Circuit Check Between Data Link Connector and IPDM E/R

UKS00182

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M31
 - Harness connector E152

OK or NG

- OK >> GO TO 2.
- NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT


1. Disconnect harness connector M31.
2. Check continuity between data link connector M22 terminals 6 (L), 14 (P) and harness connector M31 terminals 31G (L), 42G (P).

6 (L) - 31G (L) : Continuity should exist.

14 (P) - 42G (P) : Continuity should exist.

OK or NG

- OK >> GO TO 3.
- NG >> Repair harness.

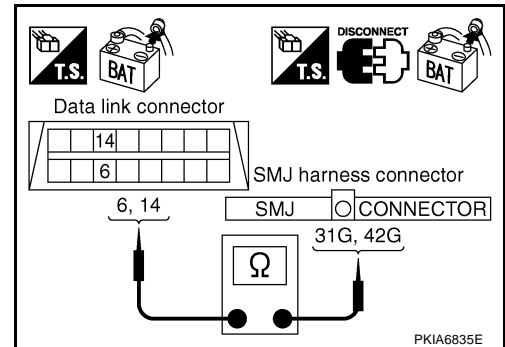

3. CHECK HARNESS FOR OPEN CIRCUIT


1. Disconnect IPDM E/R connector.
2. Check continuity between harness connector E152 terminals 31G (L), 42G (P) and IPDM E/R harness connector E122 terminals 39 (L), 40 (P).

31G (L) - 39 (L) : Continuity should exist.

42G (P) - 40 (P) : Continuity should exist.

OK or NG

- OK >> Connect all the connectors and diagnose again. Refer to [LAN-50, "Work Flow"](#).
- NG >> Repair harness.

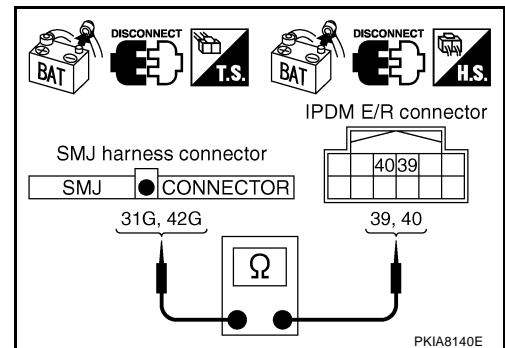

A
B
C
D
E
F
G
H
I
J
LAN
L
M

ECM Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (control module side and harness side).
 - ECM connector
 - Harness connector E19
 - Harness connector F33

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect ECM connector.
2. Check resistance between ECM harness connector E16 terminals 94 (L) and 86 (P).

94 (L) - 86 (P) : Approx. 108 - 132 Ω

OK or NG

- OK >> Replace ECM.
 NG >> Repair harness between ECM and A/T assembly.

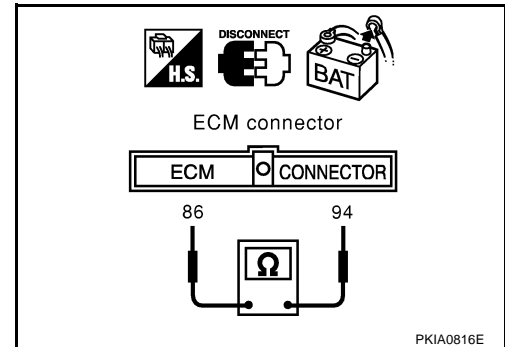**TCM Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of A/T assembly for damage, bend and loose connection (control module side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect A/T assembly connector.
2. Check resistance between A/T assembly harness connector F9 terminals 3 (L) and 8 (P).

3 (L) - 8 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace A/T assembly.
 NG >> Repair harness between A/T assembly and harness connector F33.

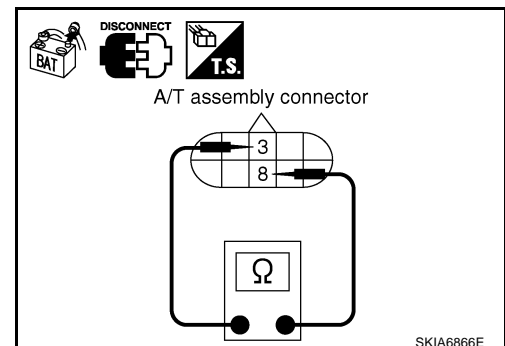

Driver Seat Control Unit Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of driver seat control unit for damage, bend and loose connection (control unit side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect driver seat control unit connector.
2. Check resistance between driver seat control unit harness connector P2 terminals 3 (L) and 19 (P).

3 (L) - 19 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace driver seat control unit.
 NG >> Repair harness between driver seat control unit and harness connector B40.

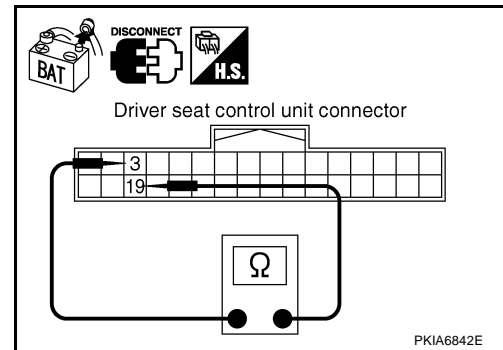**Combination Meter Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of combination meter for damage, bend and loose connection (meter side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect combination meter connector.
2. Check resistance between combination meter harness connector M24 terminals 11 (L) and 12 (P).

11 (L) - 12 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace combination meter.
 NG >> Repair harness between combination meter and data link connector.

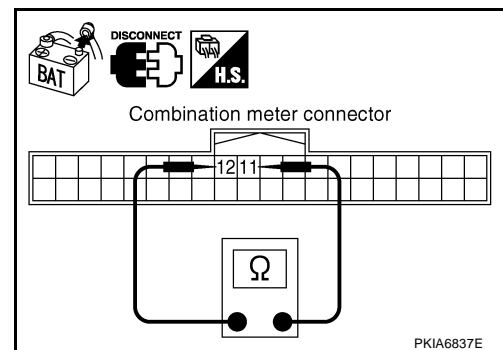

BCM Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of BCM for damage, bend and loose connection (control module side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect BCM connector.
2. Check resistance between BCM harness connector M18 terminals 39 (L) and 40 (P).

39 (L) - 40 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace BCM. Refer to [BCS-20, "Removal and Installation of BCM"](#) .
 NG >> Repair harness between BCM and data link connector.

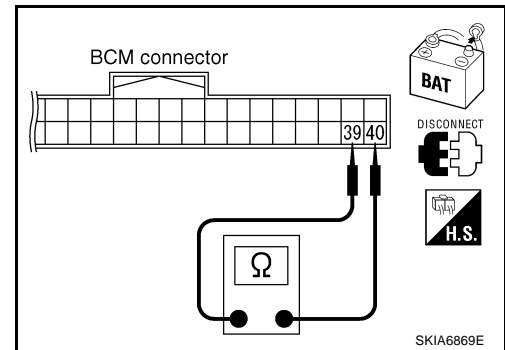**Data Link Connector Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check the terminals and connector of data link connector for damage, bend and loose connection (connector side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

Check resistance between data link connector M22 terminals 6 (L) and 14 (P).

6 (L) - 14 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Diagnose again. Refer to [LAN-50, "Work Flow"](#) .
 NG >> Repair harness between data link connector and combination meter.

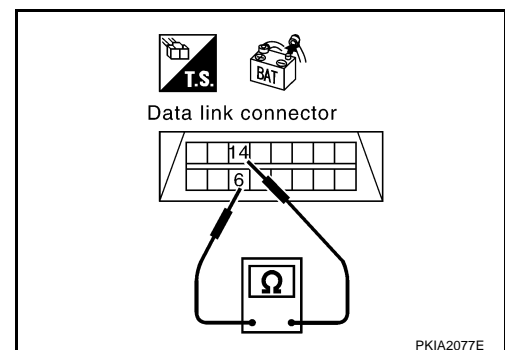

Steering Angle Sensor Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of steering angle sensor for damage, bend and loose connection (sensor side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect steering angle sensor connector.
2. Check resistance between steering angle sensor harness connector M47 terminals 3 (L) and 4 (P).

3 (L) - 4 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace steering angle sensor.
 NG >> Repair harness between steering angle sensor and data link connector.

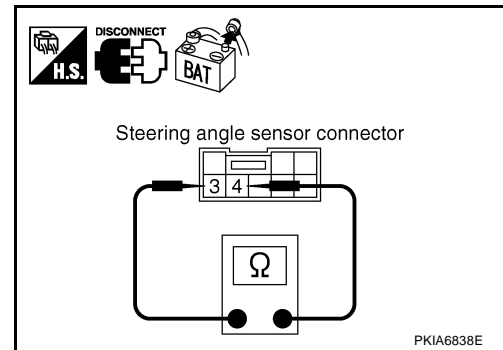**Front Air Control Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of front air control for damage, bend and loose connection (unit side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect front air control connector.
2. Check resistance between front air control harness connector M50 terminals 34 (L) and 35 (P).

34 (L) - 35 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace front air control.
 NG >> Repair harness between front air control and data link connector.

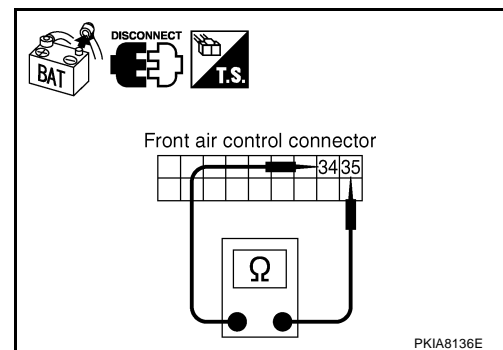

ABS Actuator and Electric Unit (Control Unit) Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of ABS actuator and electric unit (control unit) for damage, bend and loose connection (control unit side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect ABS actuator and electric unit (control unit) connector.
2. Check resistance between ABS actuator and electric unit (control unit) harness connector E125 terminals 11 (L) and 15 (P).

11 (L) - 15 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace ABS actuator and electric unit (control unit).
 NG >> Repair harness between ABS actuator and electric unit (control unit) and harness connector E152.

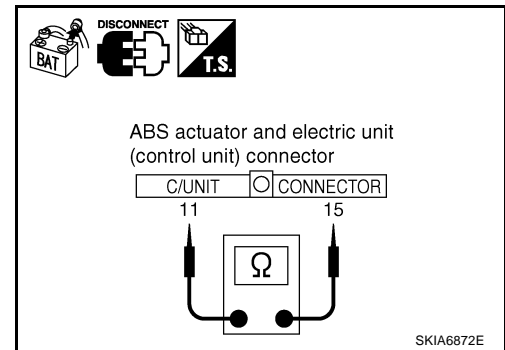**IPDM E/R Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of IPDM E/R for damage, bend and loose connection (control module side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check resistance between IPDM E/R harness connector E122 terminals 39 (L) and 40 (P).

39 (L) - 40 (P) : Approx. 108 - 132 Ω

OK or NG

- OK >> Replace IPDM E/R.
 NG >> Repair harness between IPDM E/R and harness connector E152.

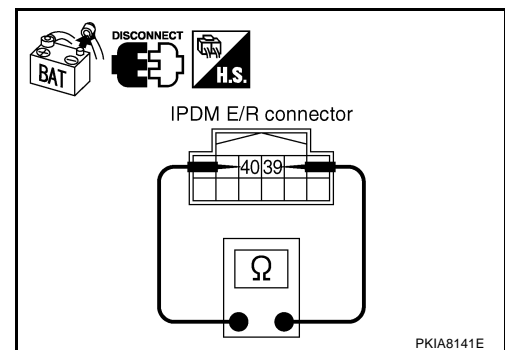

CAN Communication Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Disconnect the following module and control unit connectors and check terminals for deformation, disconnection, looseness or damage.
 - ECM
 - A/T assembly
 - Driver seat control unit
 - Combination meter
 - BCM
 - Steering angle sensor
 - Front air control
 - ABS actuator and electric unit (control unit)
 - IPDM E/R

OK or NG

OK >> GO TO 2.

NG >> Repair or replace as necessary.

2. CHECK HARNESS FOR SHORT CIRCUIT


With all module and control unit connectors disconnected, check continuity between data link connector M22 terminals 6 (L) and 14 (P).

6 (L) - 14 (P) : Continuity should not exist.

OK or NG

OK >> GO TO 3.

NG >> Repair harness.

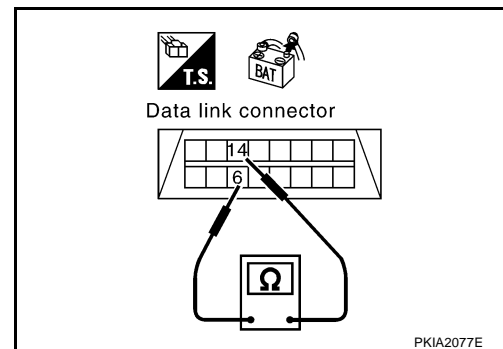**3. CHECK HARNESS FOR SHORT CIRCUIT**

Check continuity between data link connector M22 terminals 6 (L), 14 (P) and ground.


6 (L) - Ground : Continuity should not exist.

14 (P) - Ground : Continuity should not exist.

OK or NG

OK >> Check ECM and IPDM E/R. Refer to [LAN-76. "ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION"](#).

NG >> Repair harness.

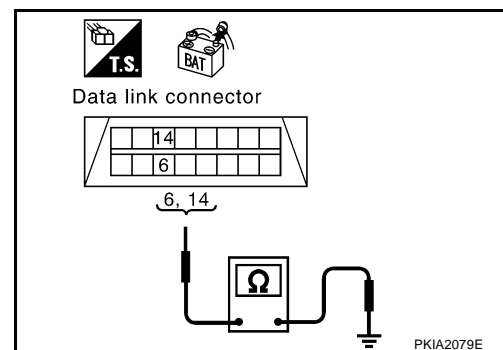**IPDM E/R Ignition Relay Circuit Check**


Check the following. If no malfunction is found, replace the IPDM E/R.

- IPDM E/R power supply circuit. Refer to [PG-26. "IPDM E/R Power/Ground Circuit Inspection"](#).
- Ignition power supply circuit. Refer to [PG-13. "IGNITION POWER SUPPLY — IGNITION SW. IN ON AND/OR START"](#).

Component Inspection**ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION**

- Remove ECM and IPDM E/R from vehicle.
- Check resistance between ECM terminals 94 and 86.
- Check resistance between IPDM E/R terminals 39 and 40.

| Unit | Terminal | Resistance value (Ω) (Approx.) |
|----------|----------|--|
| ECM | 94 - 86 | 108 - 132 |
| IPDM E/R | 39 - 40 | |

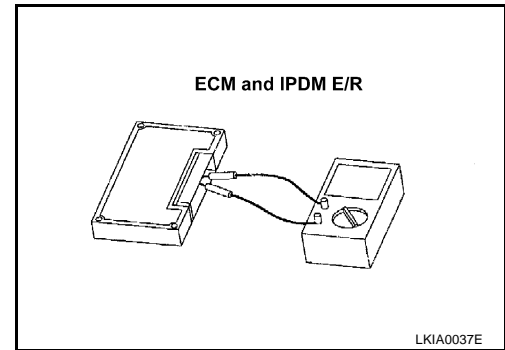

CAN SYSTEM (TYPE 3)

PFP:23710


System Description

UKS000P0

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

Component Parts and Harness Connector Location

UKS000P1

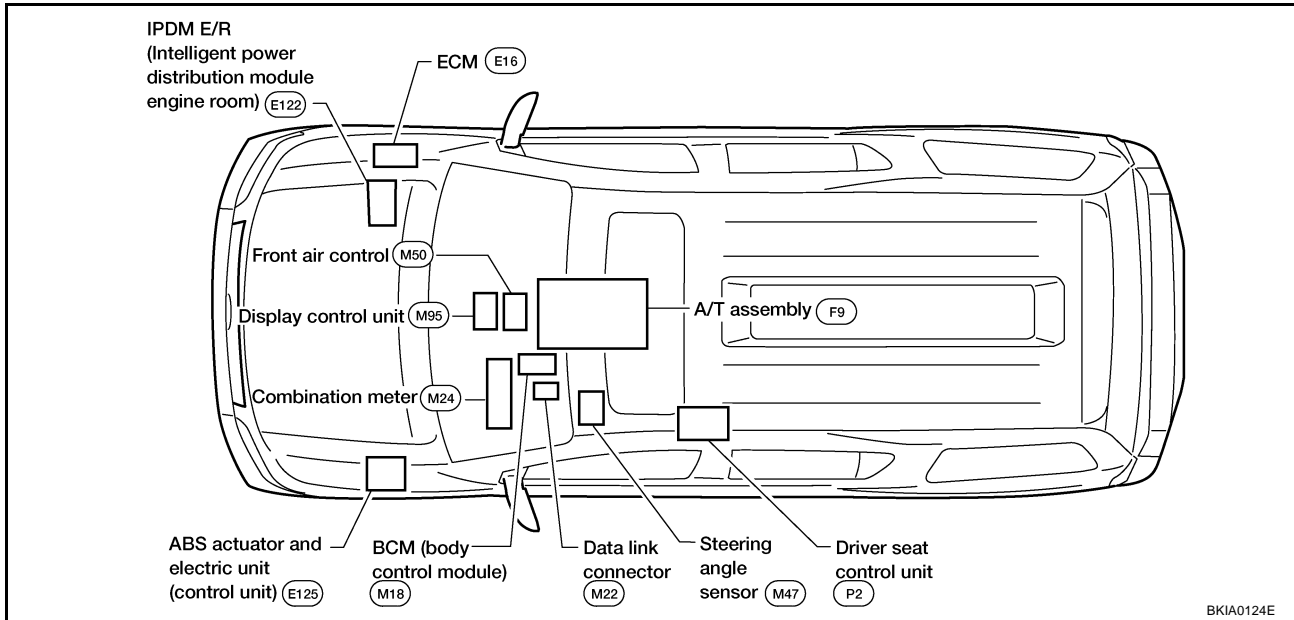

A
B
C
D
E
F
G
H
I
J
L
M


LAN

CAN SYSTEM (TYPE 3)

[CAN]

Schematic

UKS000P2

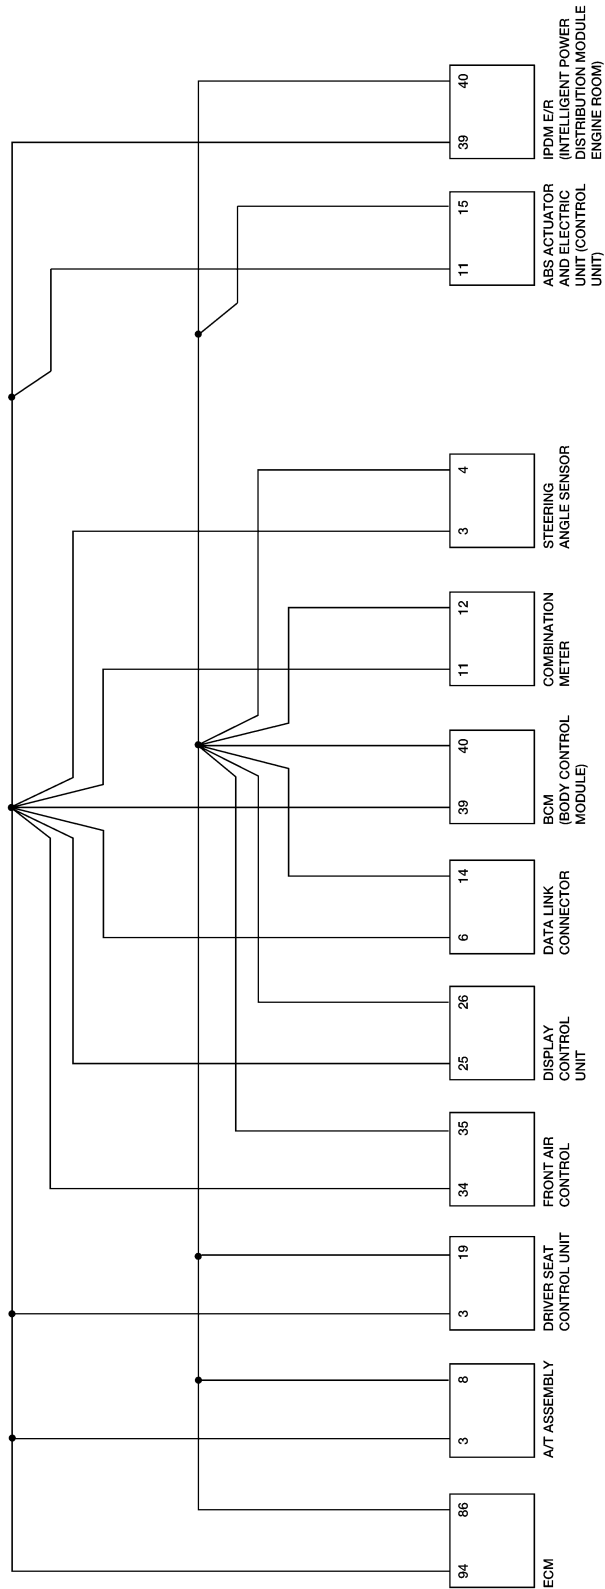

BKWA0007E

CAN SYSTEM (TYPE 3)


[CAN]

Wiring Diagram - CAN -


UKS000P3

LAN-CAN-07

— : DATA LINE

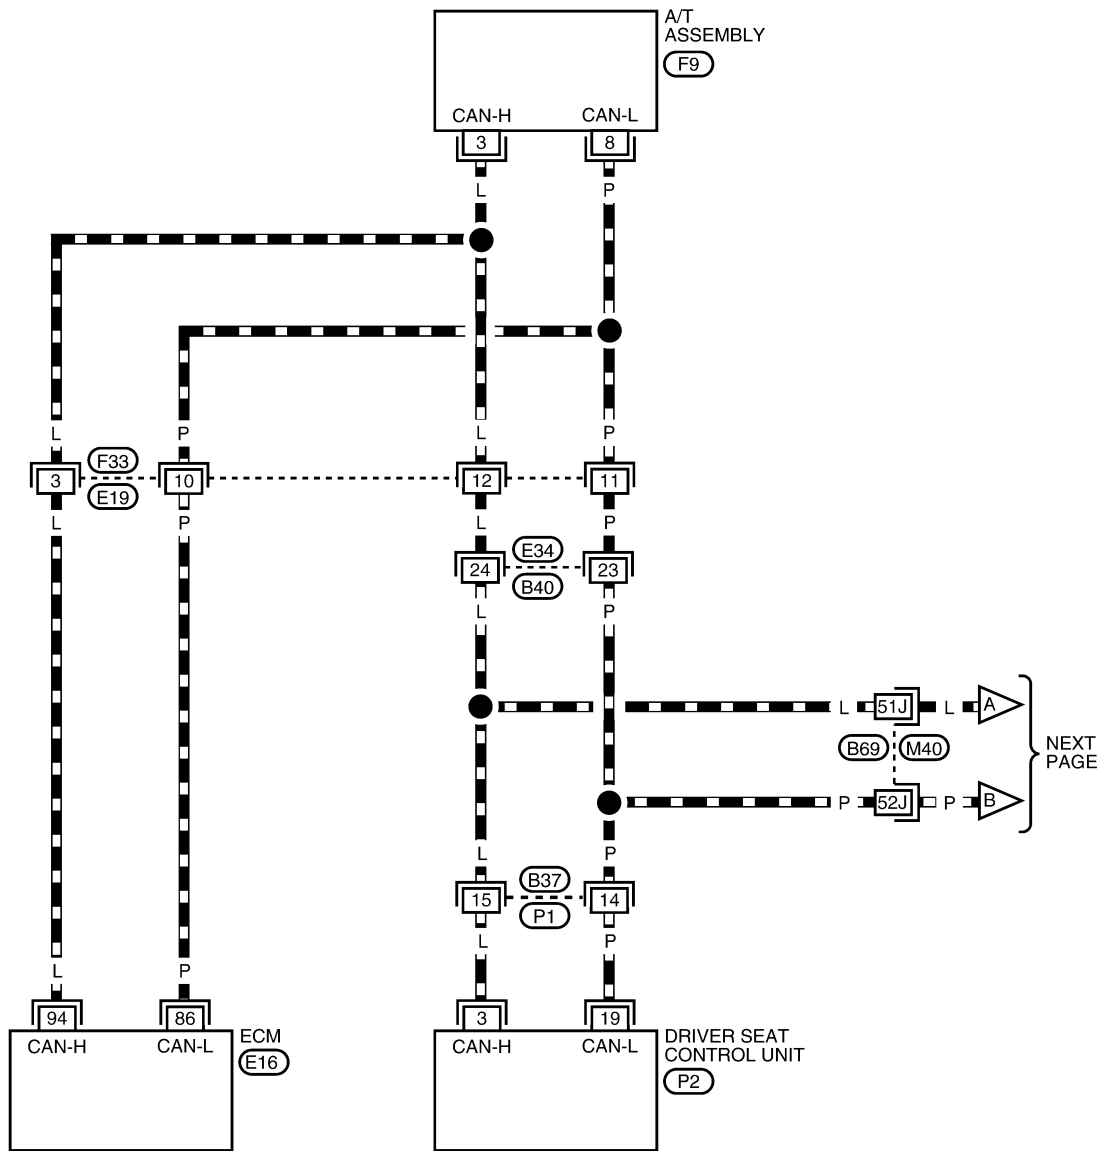

A
B
C
D
E
F
G
H
I
J
LAN
L
M

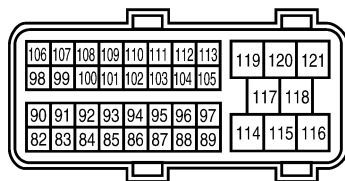

E16
B




E34
W


REFER TO THE FOLLOWING.
M40 - SUPER MULTIPLE
JUNCTION (SMJ)




F9
G



F33
W



B37
W



P2*
W

*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.



BKWA0684E

CAN SYSTEM (TYPE 3)

[CAN]

LAN-CAN-08

— — — — : DATA LINE

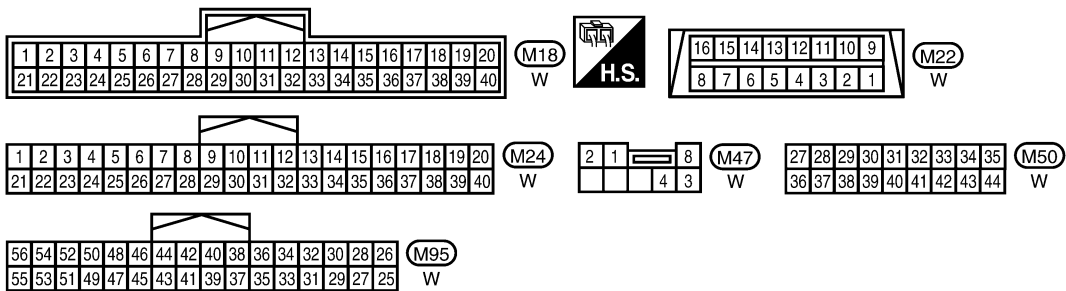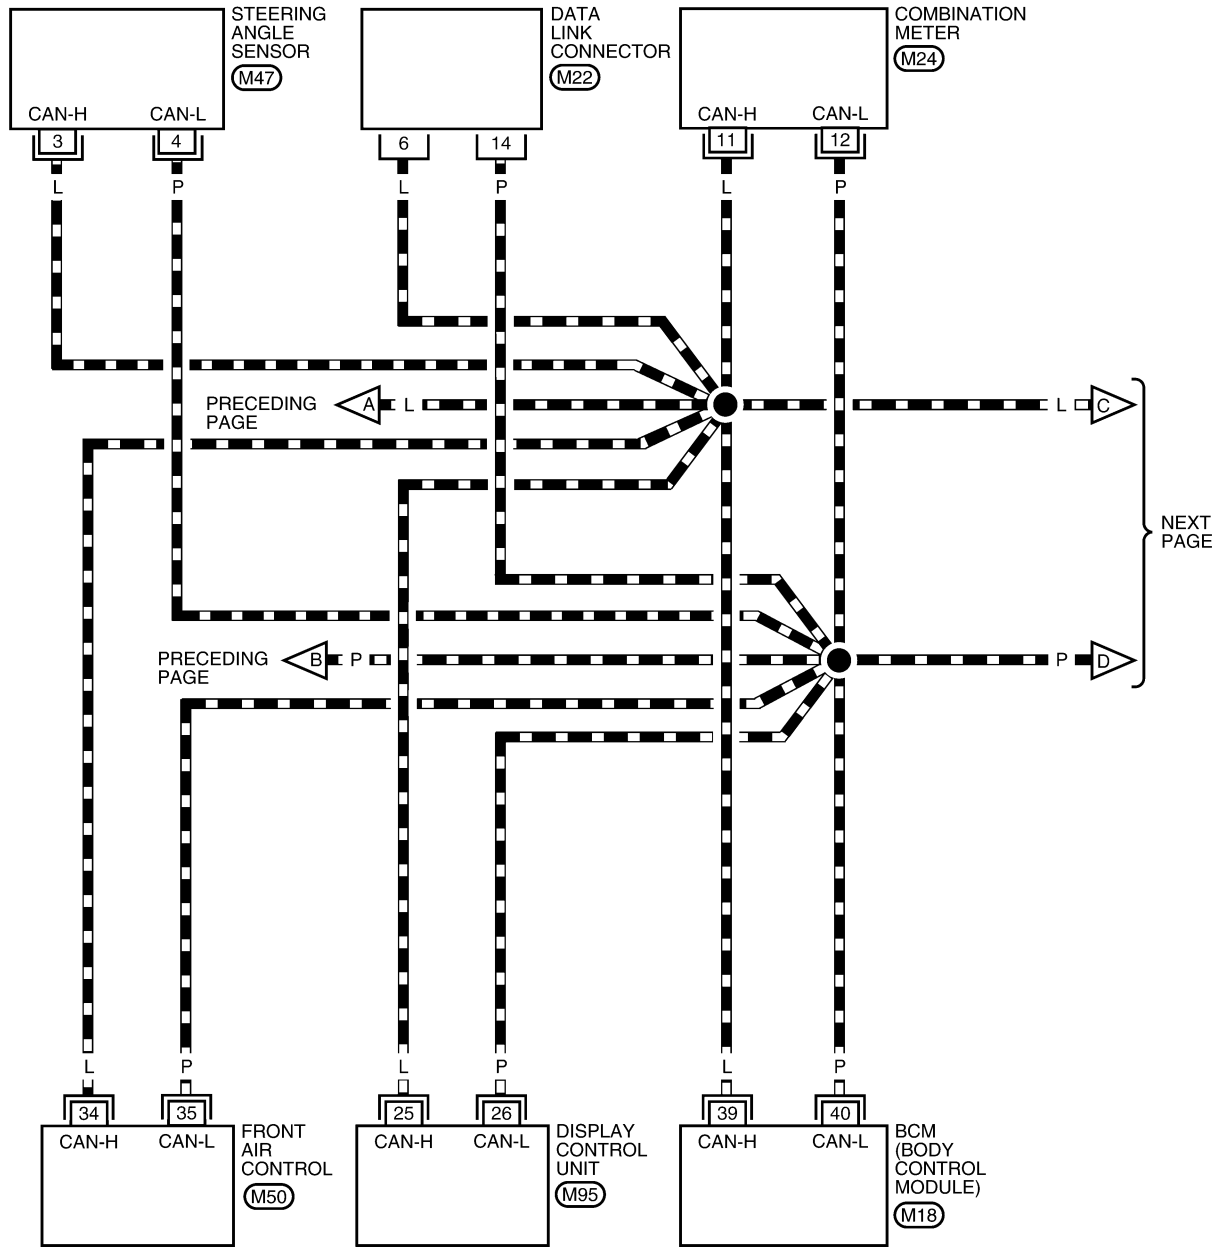


BKWA0414E

CAN SYSTEM (TYPE 3)

[CAN]



LAN-CAN-09

▬ : DATA LINE

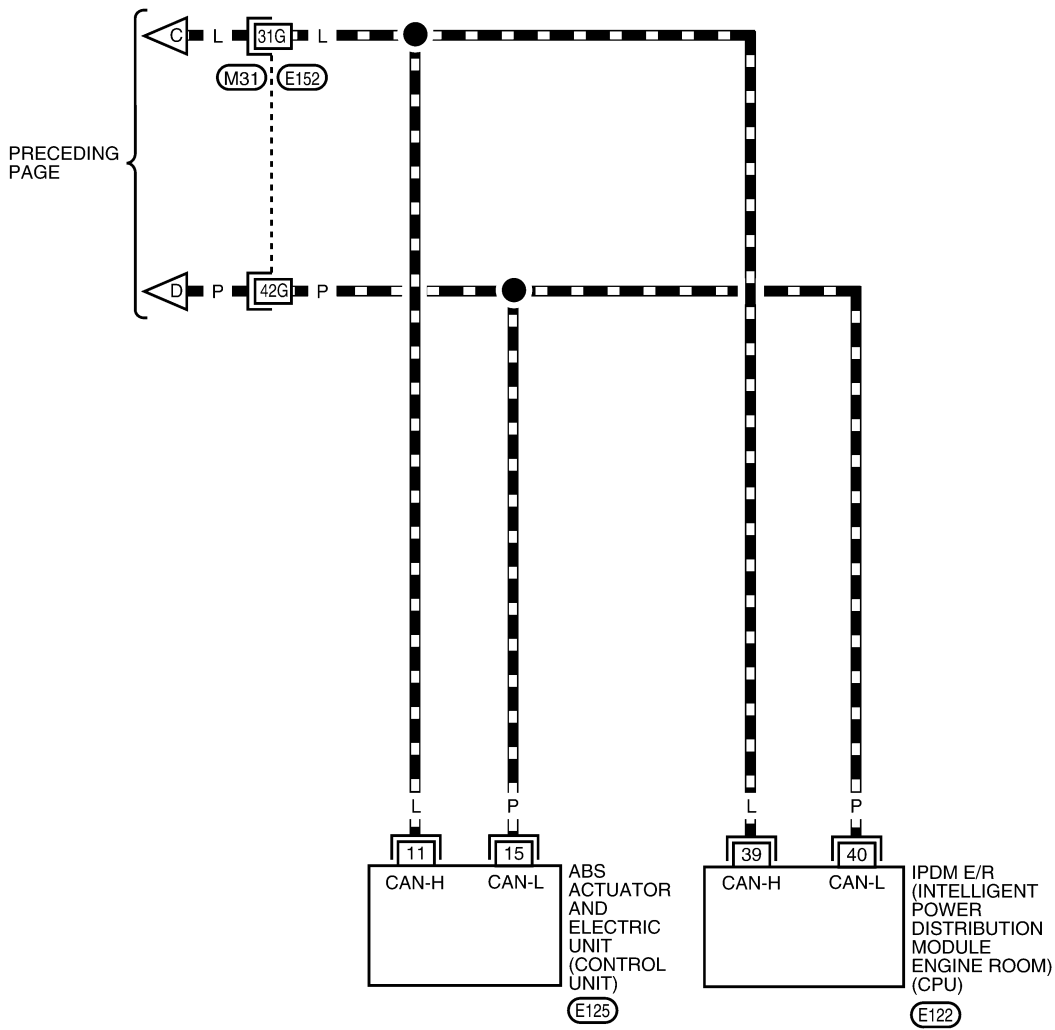

PRECEDING PAGE

A
B
C
D
E
F
G
H
I
J
LAN
L
M




REFER TO THE FOLLOWING.
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)


BKWA0415E

Work Flow


- When there are no indications of "AUTO DRIVE POS.", "BCM", "HVAC" or "IPDM E/R" on "SELECT SYSTEM" display of CONSULT-II, print the "SELECT SYSTEM".

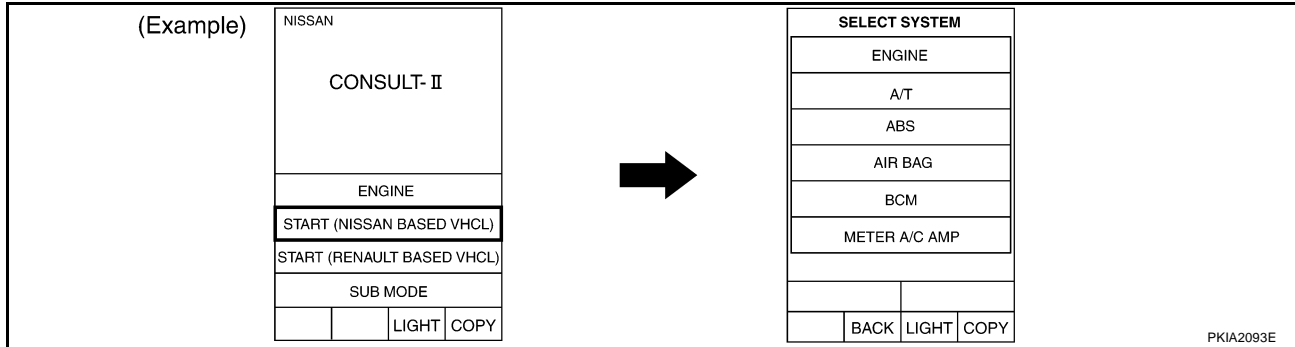

- Print all the data of "SELF-DIAG RESULTS" for "ENGINE", "A/T", "AUTO DRIVE POS.", "BCM", "HVAC", "ABS" and "IPDM E/R" displayed on CONSULT-II.

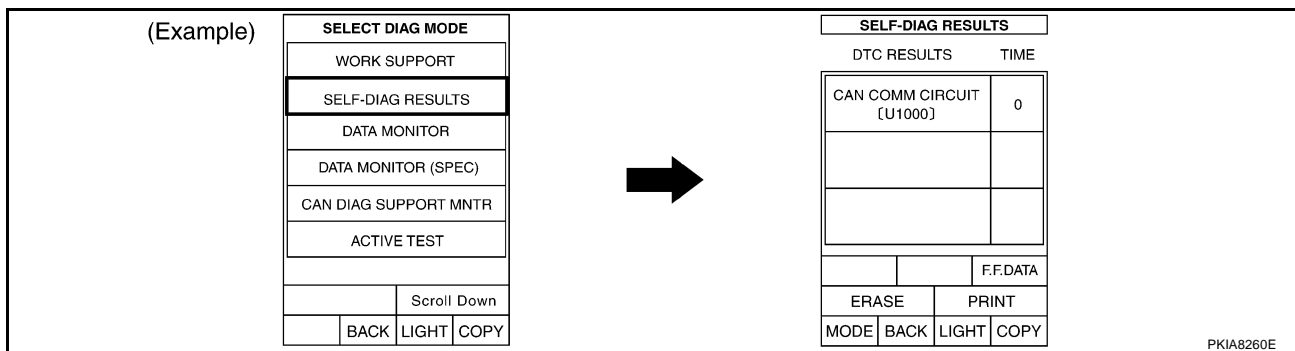

- Print all the data of "CAN DIAG SUPPORT MNTR" for "ENGINE", "A/T", "AUTO DRIVE POS.", "BCM", "HVAC", "ABS" and "IPDM E/R" displayed on CONSULT-II.

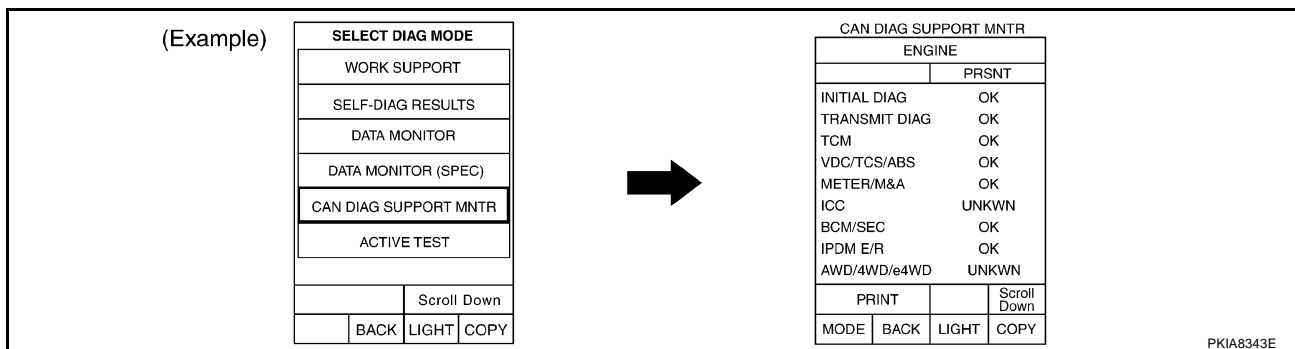

- Attach the printed sheet of "SELECT SYSTEM", "SELF-DIAG RESULTS" and "CAN DIAG SUPPORT MNTR" onto the check sheet. Refer to [LAN-84, "CHECK SHEET"](#).
- Based on the indications of "SELECT SYSTEM" and the results of "CAN DIAG SUPPORT MNTR", puts a check mark onto the items with "No indication", "NG", or "UNKWN" in the check sheet table. Refer to [LAN-84, "CHECK SHEET"](#).

NOTE:

- If "NG" is displayed on "INITIAL DIAG (Initial diagnosis)" as "CAN DIAG SUPPORT MNTR" for the diagnosed control unit, replace the control unit.
- The "CAN DIAG SUPPORT MNTR" items, which are not in check sheet table, are not related to diagnostic procedure on service manual.
So it is not necessary to check the status of the "CAN DIAG SUPPORT MNTR" items not in check sheet table.

- Check CAN communication line of the navigation system. Refer to [AV-147, "CAN Communication Line Check"](#).
- Attach the CAN DIAG SUPPORT MONITOR check sheet onto the check sheet. Refer to [LAN-84, "CHECK SHEET"](#).

CAN SYSTEM (TYPE 3)

[CAN]

8. Mark the "NG" or "UNKWN" item of the check sheet table with "v" from the result of CAN DIAG SUPPORT MONITOR check sheet. Refer to [LAN-84, "CHECK SHEET"](#) .

NOTE:

If "NG" is displayed on "CAN COMM" as "CAN DIAG SUPPORT MONITOR" for the diagnosed control unit, replace the control unit. Refer to [AV-147, "CAN Communication Line Check"](#) .

9. According to the check sheet results (example), start inspection. Refer to [LAN-86, "CHECK SHEET RESULTS \(EXAMPLE\)"](#) .

A

B

C

D

E

F

G

H

I

J

LAN

L

M

CAN SYSTEM (TYPE 3)

[CAN]

CHECK SHEET

NOTE:

If "NG" is displayed on "INITIAL DIAG (Initial diagnosis)" or "CAN COMM" for the diagnosed control unit, replace the control unit.

Check sheet table

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|------------|---------|------------|-------|-------------------|--------------|------------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER /M&A | DISPLAY | BCM/SEC | STRG | Front air control | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | UNKWN |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | UNKWN | — |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | — | — |
| Display control unit | — | CAN COMM | CAN CIRC 1 | CAN CIRC 3 | — | CAN CIRC 5 | — | CAN CIRC 2 | — | CAN CIRC 4 | — | CAN CIRC 7 |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | — | UNKWN | — | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | — | UNKWN | — | — | — | — |

Symptoms :

Attach copy of
SELECT SYSTEM

Attach copy of
SELECT SYSTEM

Attach copy of
display control unit
CAN DIAG SUPPORT MONITOR check sheet

CAN SYSTEM (TYPE 3)

[CAN]

A
B
C
D
E
F
G
H
I
J
LAN
L
M

Attach copy of
ENGINE
SELF-DIAG RESULTS

Attach copy of
A/T
SELF-DIAG RESULTS

Attach copy of
AUTO DRIVE POS.
SELF-DIAG RESULTS

Attach copy of
BCM
SELF-DIAG RESULTS

Attach copy of
HVAC
SELF-DIAG RESULTS

Attach copy of
ABS
SELF-DIAG RESULTS

Attach copy of
IPDM E/R
SELF-DIAG RESULTS

Attach copy of
ENGINE
CAN DIAG SUPPORT
MNTR

Attach copy of
A/T
CAN DIAG SUPPORT
MNTR

Attach copy of
AUTO DRIVE POS.
CAN DIAG SUPPORT
MNTR

Attach copy of
BCM
CAN DIAG SUPPORT
MNTR

Attach copy of
HVAC
CAN DIAG SUPPORT
MNTR

Attach copy of
ABS
CAN DIAG SUPPORT
MNTR

Attach copy of
IPDM E/R
CAN DIAG SUPPORT
MNTR

PKIB6658E

CAN SYSTEM (TYPE 3)

[CAN]

CHECK SHEET RESULTS (EXAMPLE)

NOTE:


If "NG" is displayed on "INITIAL DIAG (Initial diagnosis)" or "CAN COMM" for the diagnosed control unit, replace the control unit.

Case 1

Check harness between TCM and driver seat control unit. Refer to [LAN-101, "Circuit Check Between TCM and Driver Seat Control Unit"](#).

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|------------|---------|------------|-------|-------------------|--------------|------------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER /M&A | DISPLAY | BCM/SEC | STRG | Front air control | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | UNKWN |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | UNKWN | — |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | — | — |
| Display control unit | — | CAN COMM | CAN CIRC 1 | CAN CIRC 3 | — | CAN CIRC 5 | — | CAN CIRC 2 | — | CAN CIRC 4 | — | CAN CIRC 7 |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | — | UNKWN | — | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | — | UNKWN | — | — | — | — |

PKIB6659E

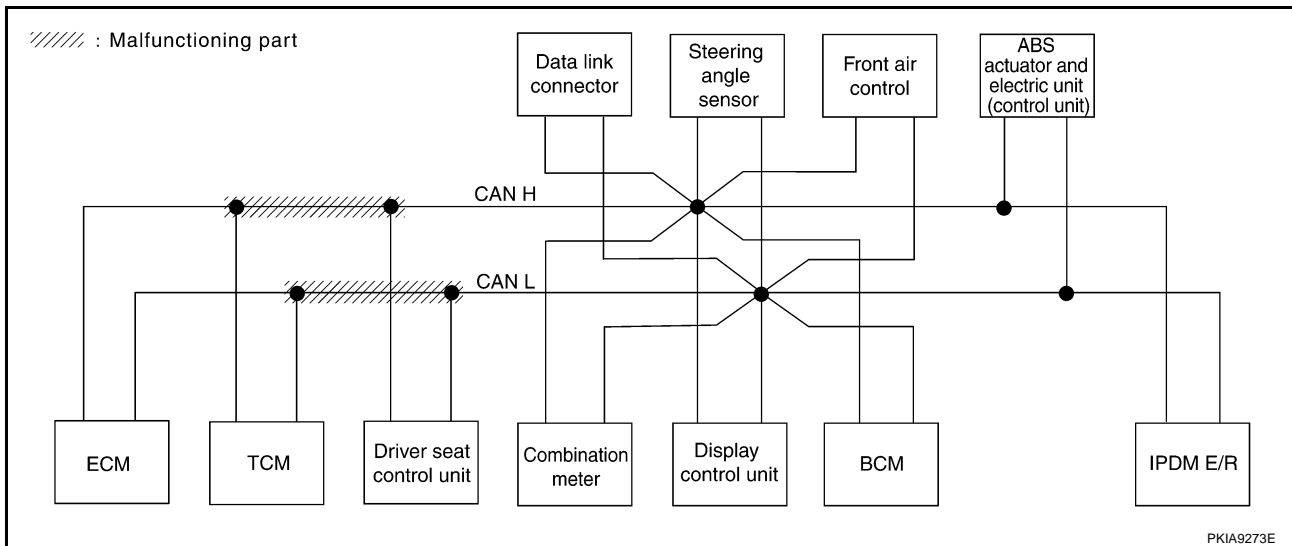

CAN SYSTEM (TYPE 3)


[CAN]

Case 2

Check harness between driver seat control unit and data link connector. Refer to [LAN-102, "Circuit Check Between Driver Seat Control Unit and Data Link Connector"](#).

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|--------------------|-----------------------|--------------------|-------------------|-------|------------|---------|------------|-------|-------------------|--------------|------------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER /M&A | DISPLAY | BCM/SEC | STRG | Front air control | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | ✓ | — | ✓ | — | — | ✓ | ✓ |
| A/T | — | NG | UNKWN | UNKWN | — | ✓ | — | — | — | — | ✓ | — |
| AUTO DRIVE POS. | ✓ No indication | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | — | — |
| Display control unit | — | CAN COMM | CAN CIRC 1 | ✓ CAN CIRC 3 | — | CAN CIRC 5 | — | CAN CIRC 2 | — | CAN CIRC 4 | — | CAN CIRC 7 |
| BCM | No indication | NG | UNKWN | ✓ | — | UNKWN | — | — | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | ✓ | — | — | UNKWN | UNKWN | — | — | UNKWN | — |
| ABS | — | NG | UNKWN | ✓ | ✓ | — | — | — | UNKWN | — | — | — |
| IPDM E/R | No indication | — | UNKWN | ✓ | — | — | — | UNKWN | — | — | — | — |

PKIB660E

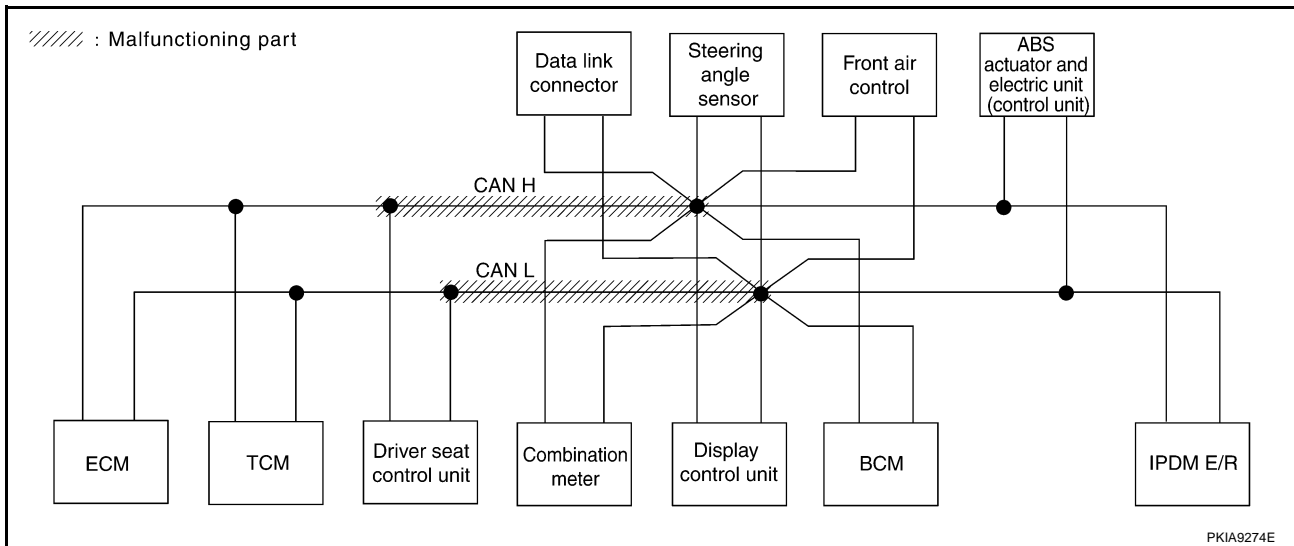

CAN SYSTEM (TYPE 3)


[CAN]

Case 3

Check harness between data link connector and IPDM E/R. Refer to [LAN-103, "Circuit Check Between Data Link Connector and IPDM E/R"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|------------|---------|------------|-------|-------------------|--------------|------------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER /M&A | DISPLAY | BCM/SEC | STRG | Front air control | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | UNKWN |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | UNKWN | — |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | — | — |
| Display control unit | — | CAN COMM | CAN CIRC 1 | CAN CIRC 3 | — | CAN CIRC 5 | — | CAN CIRC 2 | — | CAN CIRC 4 | — | CAN CIRC 7 |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | — | UNKWN | — | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | — | UNKWN | — | — | — | — |

PKIB6661E

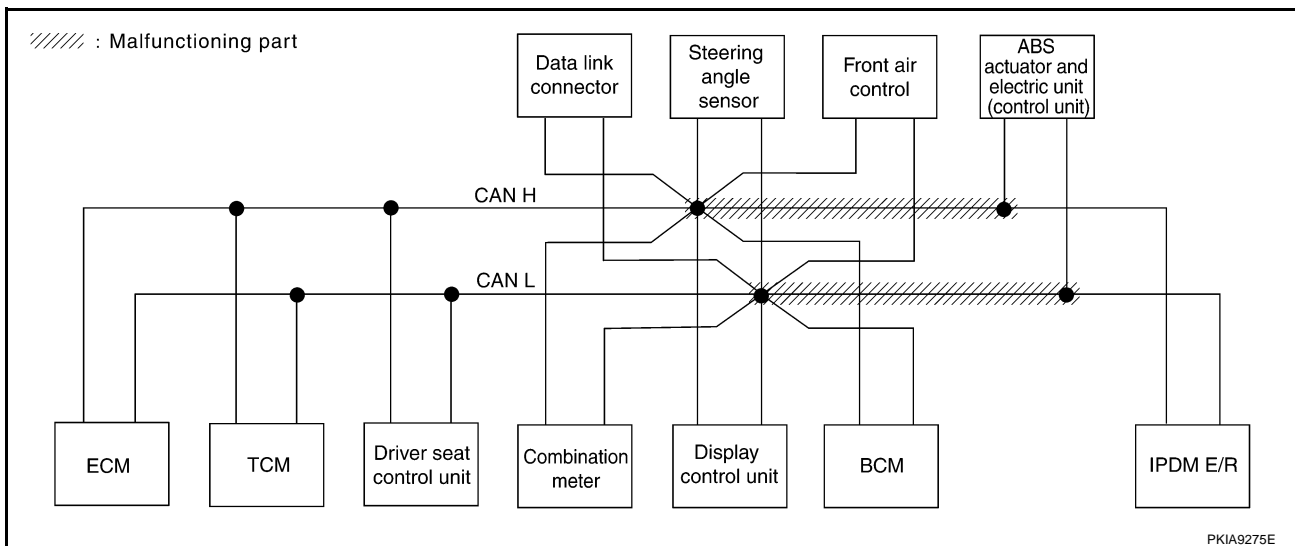

CAN SYSTEM (TYPE 3)


[CAN]

Case 4

Check ECM circuit. Refer to [LAN-104, "ECM Circuit Check"](#).

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|---------|------------|---------|------------|-------|-------------------|--------------|------------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER /M&A | DISPLAY | BCM/SEC | STRG | Front air control | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN ✓ | — | UNKWN ✓ | UNKWN ✓ | — | UNKWN ✓ | — | — | UNKWN ✓ | UNKWN ✓ |
| A/T | — | NG | UNKWN | UNKWN ✓ | — | UNKWN | — | — | — | — | UNKWN | — |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | — | — |
| Display control unit | — | CAN COMM | CAN CIRC 1 | CAN CIRC 3 ✓ | — | CAN CIRC 5 | — | CAN CIRC 2 | — | CAN CIRC 4 | — | CAN CIRC 7 |
| BCM | No indication | NG | UNKWN | UNKWN ✓ | — | UNKWN | — | — | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN ✓ | — | — | UNKWN | UNKWN | — | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN ✓ | UNKWN | — | — | — | UNKWN | — | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN ✓ | — | — | — | UNKWN | — | — | — | — |

PKIB6662E

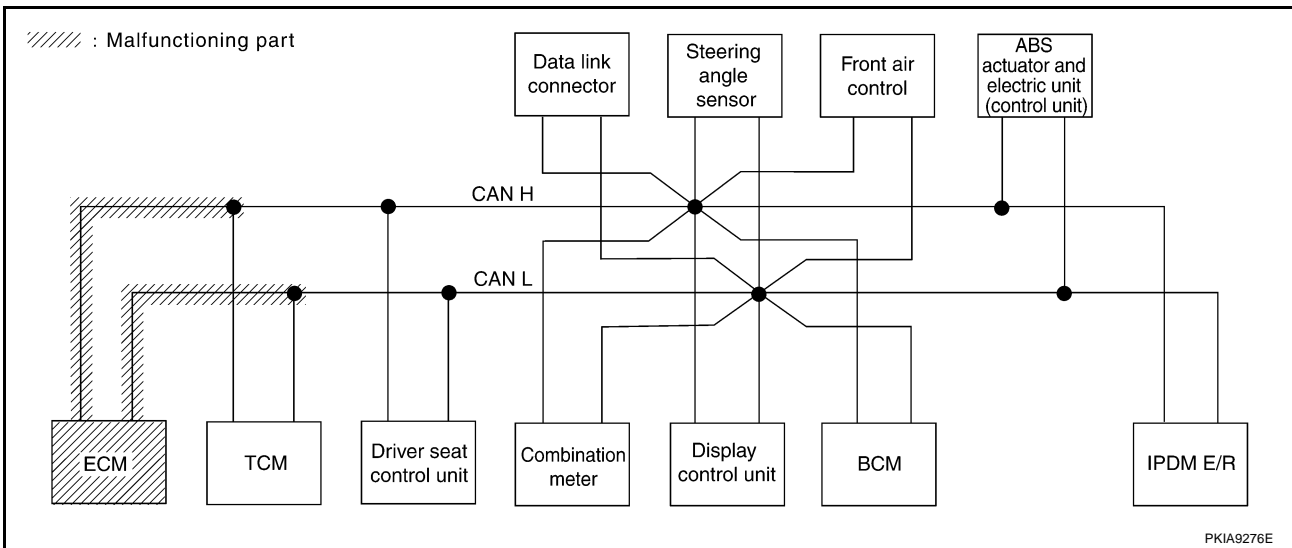

CAN SYSTEM (TYPE 3)


[CAN]

Case 5

Check TCM circuit. Refer to [LAN-104, "TCM Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|---------------------------------|---------------------------------|---------------------------------|---------|------------|-------|-------------------|---------------------------------|------------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER /M&A | DISPLAY | BCM/SEC | STRG | Front air control | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UN KN W N | UNKWN | — | UNKWN | — | — | UNKWN | UNKWN |
| A/T | — | NG | UNKWN | UN KN W N | — | UN KN W N | — | — | — | — | UN KN W N | — |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UN KN W N | UNKWN | — | UNKWN | — | — | — | — |
| Display control unit | — | CAN COMM | CAN CIRC 1 | CAN CIRC 3 | — | CAN CIRC 5 | — | CAN CIRC 2 | — | CAN CIRC 4 | — | CAN CIRC 7 |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN | UN KN W N | — | — | — | UNKWN | — | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | — | UNKWN | — | — | — | — |

PKIB6663E

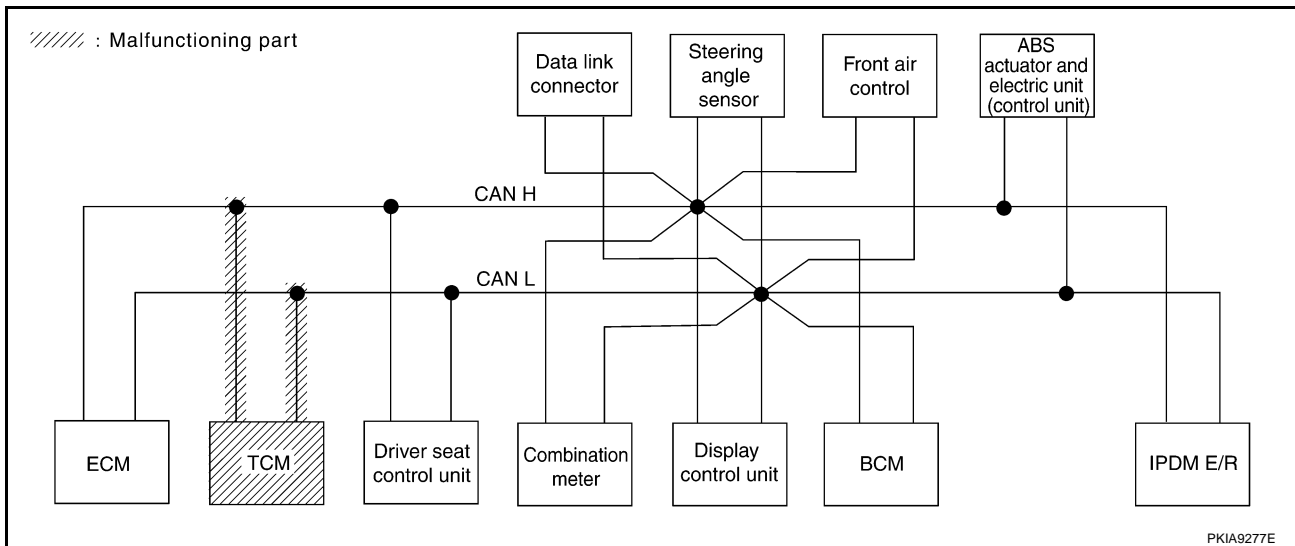

CAN SYSTEM (TYPE 3)


[CAN]

Case 6

Check driver seat control unit circuit. Refer to [LAN-105, "Driver Seat Control Unit Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|------------|---------|------------|-------|-------------------|--------------|------------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER /M&A | DISPLAY | BCM/SEC | STRG | Front air control | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | UNKWN |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | UNKWN | — |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | — | — |
| Display control unit | — | CAN COMM | CAN CIRC 1 | CAN CIRC 3 | — | CAN CIRC 5 | — | CAN CIRC 2 | — | CAN CIRC 4 | — | CAN CIRC 7 |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | UNKWN | — |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | — | UNKWN | — | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | — | UNKWN | — | — | — | — |

PKIB6664E

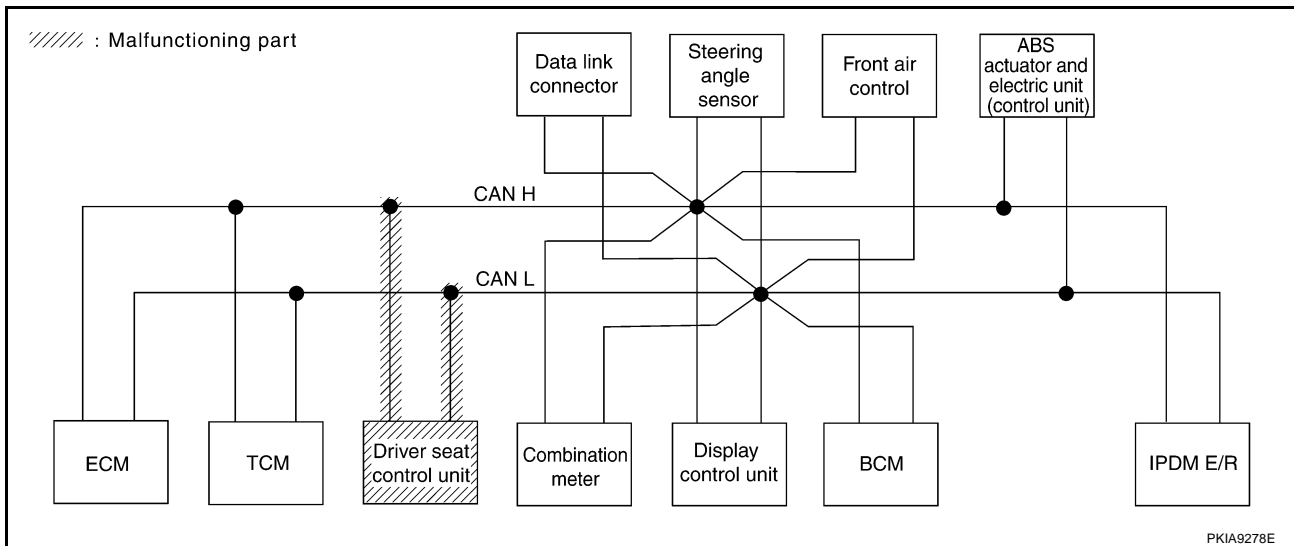

CAN SYSTEM (TYPE 3)


[CAN]

Case 7

Check combination meter circuit. Refer to [LAN-105, "Combination Meter Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|------------|---------|------------|-------|-------------------|--------------|------------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER /M&A | DISPLAY | BCM/SEC | STRG | Front air control | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | ✓ | — | UNKWN | — | — | UNKWN | UNKWN |
| A/T | — | NG | UNKWN | UNKWN | — | ✓ | — | — | — | — | UNKWN | — |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | ✓ | — | UNKWN | — | — | — | — |
| Display control unit | — | CAN COMM | CAN CIRC 1 | CAN CIRC 3 | — | ✓ | — | CAN CIRC 2 | — | CAN CIRC 4 | — | CAN CIRC 7 |
| BCM | No indication | NG | UNKWN | UNKWN | — | ✓ | — | — | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | — | UNKWN | — | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | — | UNKWN | — | — | — | — |

PKIB6665E

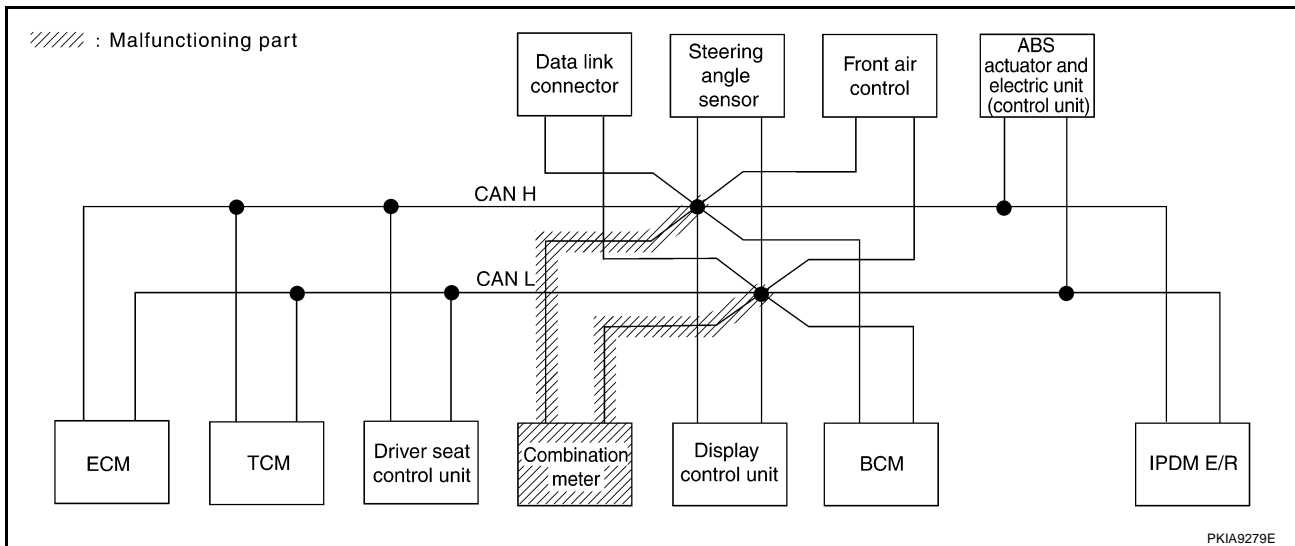

CAN SYSTEM (TYPE 3)


[CAN]

Case 8

Check display control unit circuit. Refer to [LAN-106, "Display Control Unit Circuit Check"](#).

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|--------------|---------|--------------|-------|-------------------|--------------|--------------|----------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | | IPDM E/R |
| | | | | ECM | TCM | METER /M&A | DISPLAY | BCM/SEC | STRG | Front air control | VDC/TCS /ABS | | |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | UNKWN | |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | UNKWN | — | |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | — | — | |
| Display control unit | — | CAN COMM | CAN CIRC 1 ✓ | CAN CIRC 3 ✓ | — | CAN CIRC 5 ✓ | — | CAN CIRC 2 ✓ | — | CAN CIRC 4 ✓ | — | CAN CIRC 7 ✓ | |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | — | UNKWN | |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN ✓ | UNKWN | — | — | UNKWN | — | |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | — | UNKWN | — | — | — | |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | — | UNKWN | — | — | — | — | |

PKIB666E

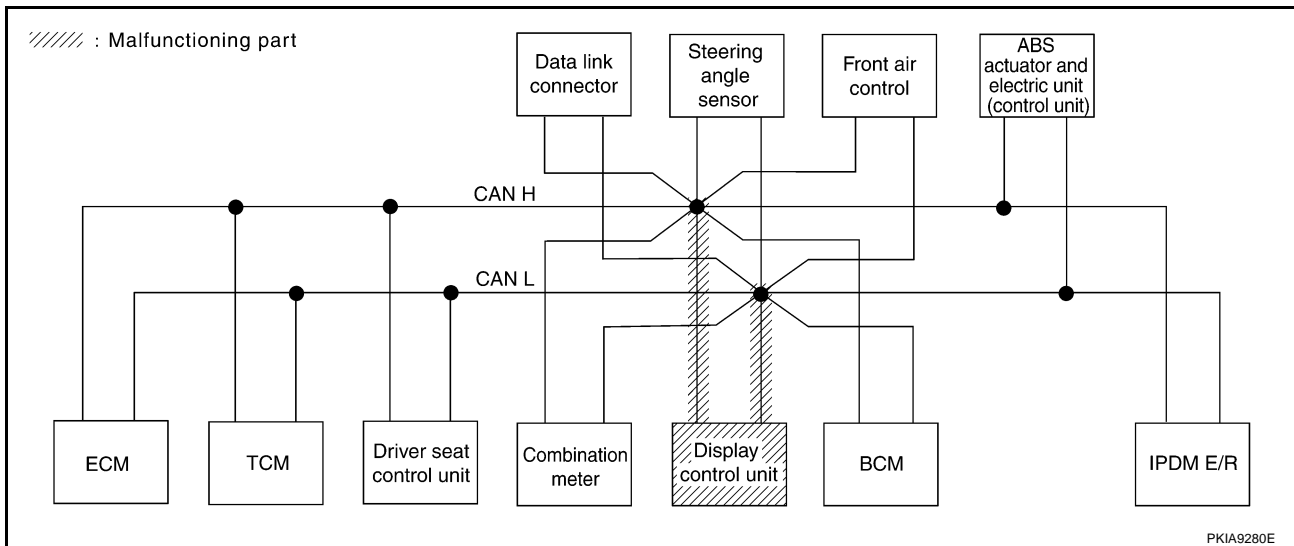

CAN SYSTEM (TYPE 3)


[CAN]

Case 9

Check BCM circuit. Refer to [LAN-106, "BCM Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|-----------------|-----------------------|--------------------|-------------------|-------|------------|---------|--------------|-------|-------------------|--------------|------------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER /M&A | DISPLAY | BCM/SEC | STRG | Front air control | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN ✓ | — | — | UNKWN | UNKWN |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | UNKWN | — |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN ✓ | — | — | — | — |
| Display control unit | — | CAN COMM | CAN CIRC 1 | CAN CIRC 3 | — | CAN CIRC 5 | — | CAN CIRC 2 ✓ | — | CAN CIRC 4 | — | CAN CIRC 7 |
| BCM | No indication ✓ | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | UNKWN ✓ | — | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | — | UNKWN | — | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | — | UNKWN ✓ | — | — | — | — |

PKIB6667E

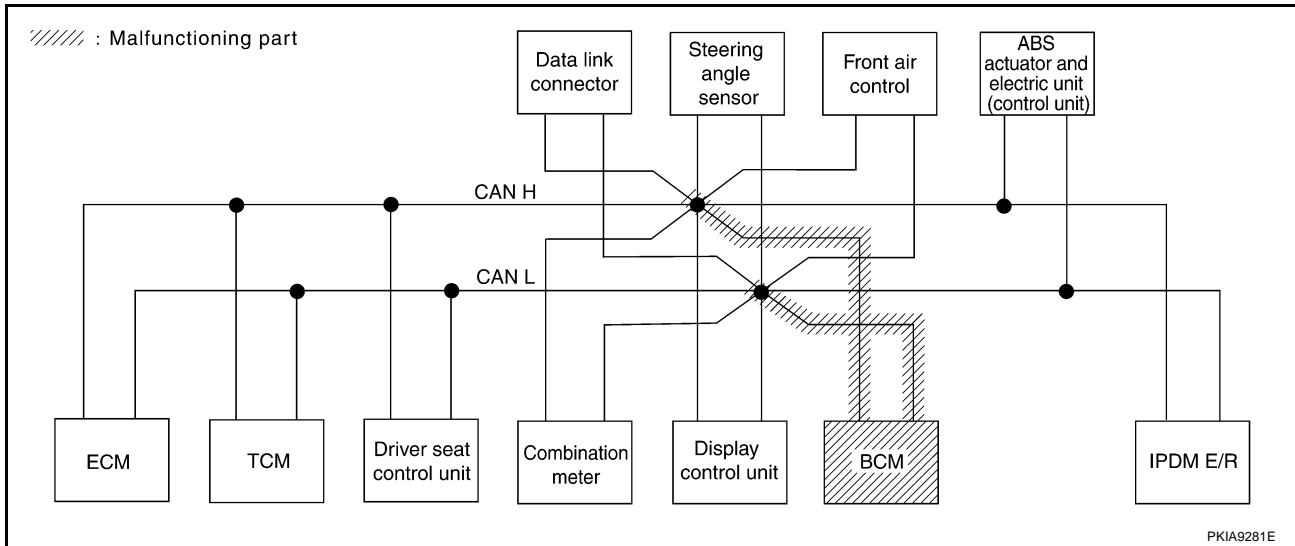

CAN SYSTEM (TYPE 3)


[CAN]

Case 10

Check data link connector circuit. Refer to [LAN-107, "Data Link Connector Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|-----------------|-----------------------|--------------------|-------------------|-------|------------|---------|------------|-------|-------------------|--------------|------------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER /M&A | DISPLAY | BCM/SEC | STRG | Front air control | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | UNKWN |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | UNKWN | — |
| AUTO DRIVE POS. | No indication ✓ | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | — | — |
| Display control unit | — | CAN COMM | CAN CIRC 1 | CAN CIRC 3 | — | CAN CIRC 5 | — | CAN CIRC 2 | — | CAN CIRC 4 | — | CAN CIRC 7 |
| BCM | No indication ✓ | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | — | UNKWN |
| HVAC | No indication ✓ | — | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | — | UNKWN | — | — | — |
| IPDM E/R | No indication ✓ | — | UNKWN | UNKWN | — | — | — | UNKWN | — | — | — | — |

PKIB668E

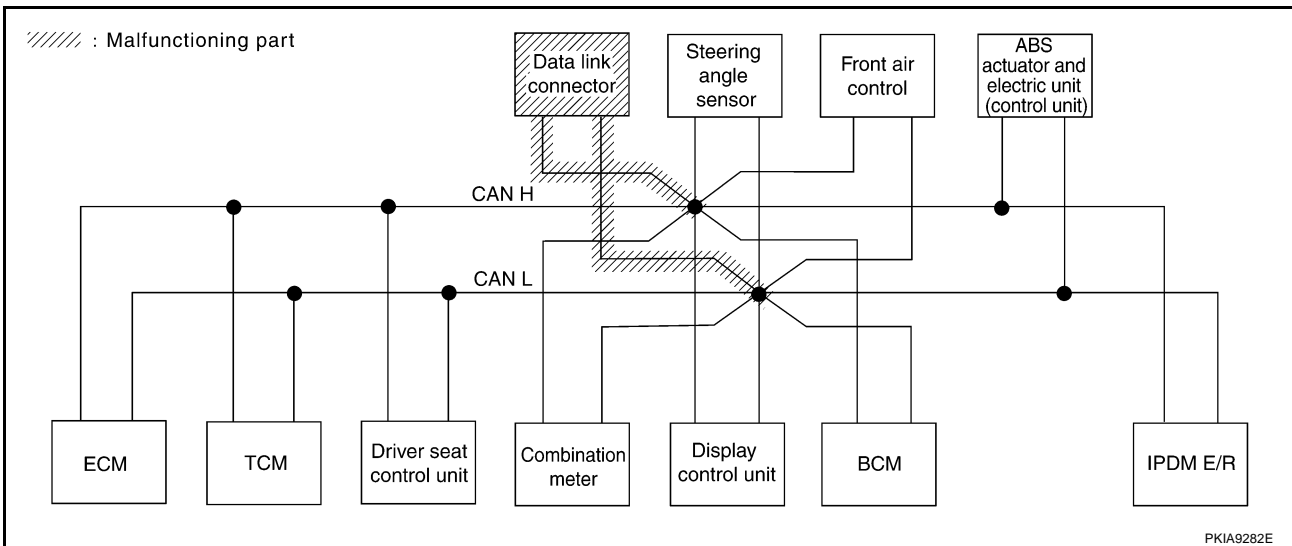

CAN SYSTEM (TYPE 3)


[CAN]

Case 11

Check steering angle sensor circuit. Refer to [LAN-107, "Steering Angle Sensor Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|------------|---------|------------|-------|-------------------|--------------|------------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER /M&A | DISPLAY | BCM/SEC | STRG | Front air control | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | UNKWN |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | UNKWN | — |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | — | — |
| Display control unit | — | CAN COMM | CAN CIRC 1 | CAN CIRC 3 | — | CAN CIRC 5 | — | CAN CIRC 2 | — | CAN CIRC 4 | — | CAN CIRC 7 |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | — | UNKWN | — | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | — | UNKWN | — | — | — | — |

PKIB6669E

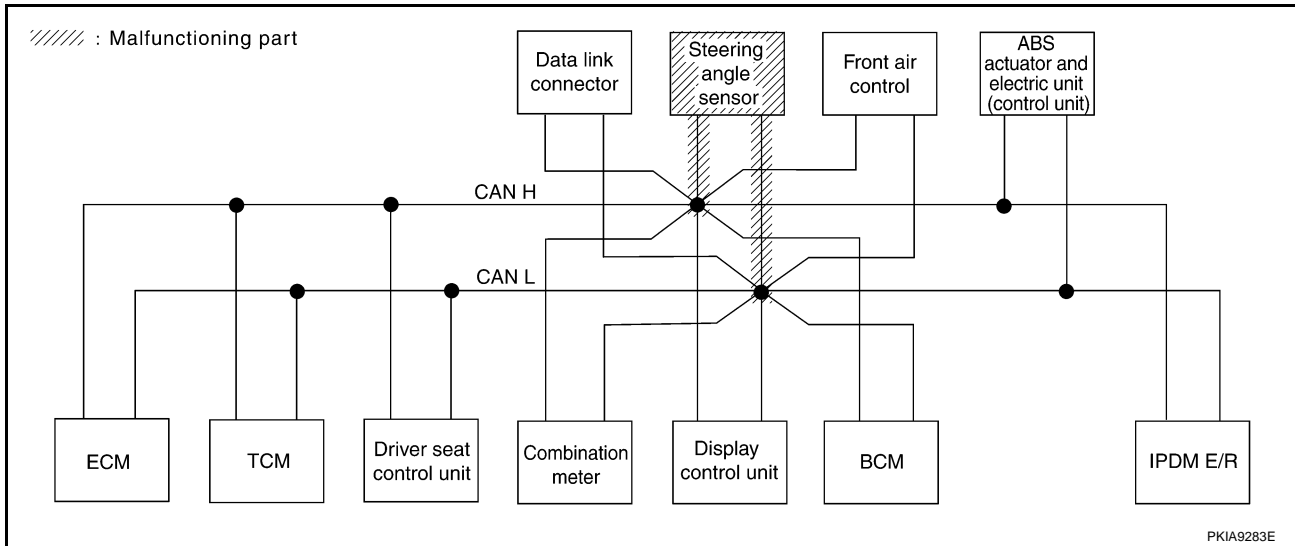

CAN SYSTEM (TYPE 3)


[CAN]

Case 12

Check front air control circuit. Refer to [LAN-108, "Front Air Control Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|------------|---------|------------|-------|-------------------|--------------|------------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER /M&A | DISPLAY | BCM/SEC | STRG | Front air control | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | UNKWN |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | UNKWN | — |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | — | — |
| Display control unit | — | CAN COMM | CAN CIRC 1 | CAN CIRC 3 | — | CAN CIRC 5 | — | CAN CIRC 2 | — | CAN CIRC 4 | — | CAN CIRC 7 |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | — | UNKWN | — | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | — | UNKWN | — | — | — | — |

PKIB6670E

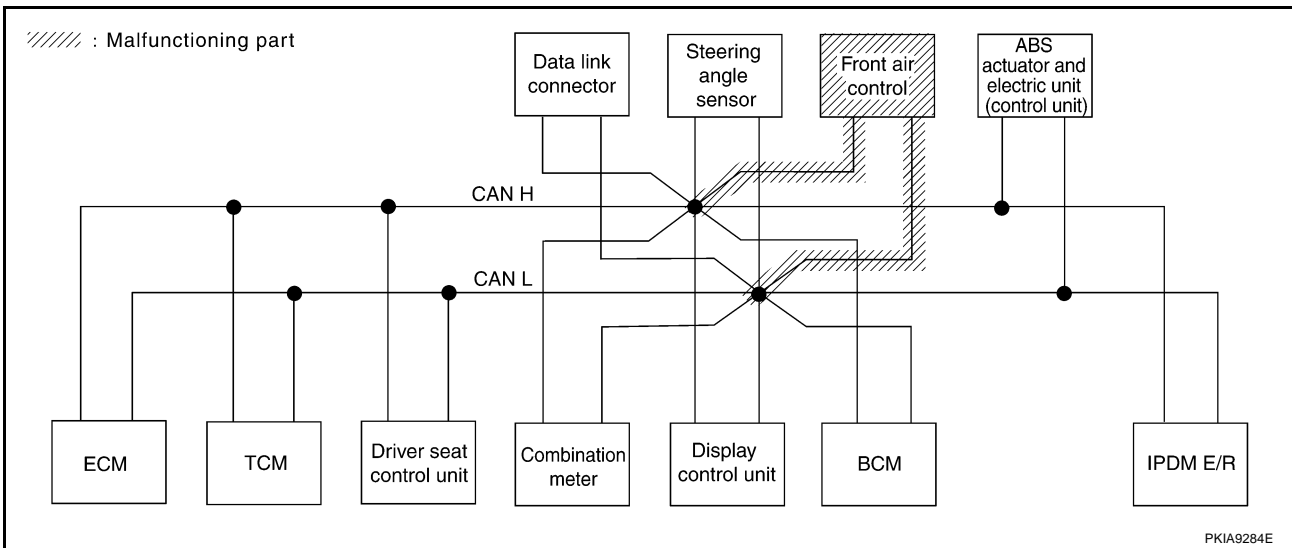

CAN SYSTEM (TYPE 3)


[CAN]

Case 13

Check ABS actuator and electric unit (control unit) circuit. Refer to [LAN-108, "ABS Actuator and Electric Unit \(Control Unit\) Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|------------|---------|------------|-------|-------------------|--------------|------------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER /M&A | DISPLAY | BCM/SEC | STRG | Front air control | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | UNKWN |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | UNKWN | — |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | — | — |
| Display control unit | — | CAN COMM | CAN CIRC 1 | CAN CIRC 3 | — | CAN CIRC 5 | — | CAN CIRC 2 | — | CAN CIRC 4 | — | CAN CIRC 7 |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | — | UNKWN | — | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | — | UNKWN | — | — | — | — |

PKIB6671E

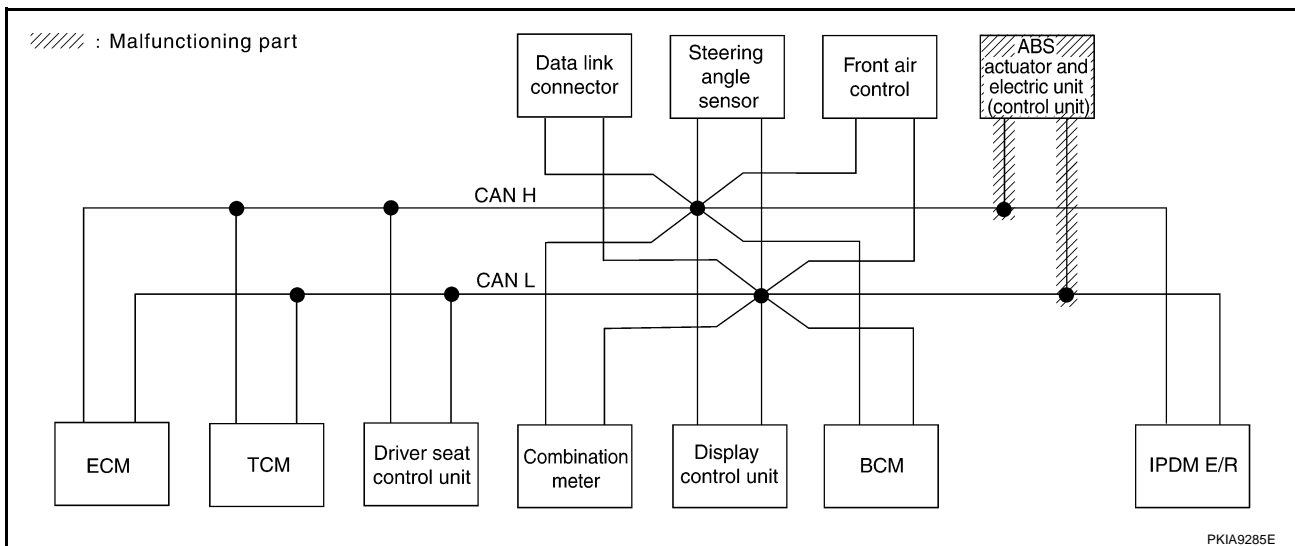

CAN SYSTEM (TYPE 3)


[CAN]

Case 14

Check IPDM E/R circuit. Refer to [LAN-109, "IPDM E/R Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | | |
|----------------------|-----------------|-----------------------|--------------------|-------------------|-------|------------|---------|------------|-------|-------------------|--------------|--------------|----------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | | IPDM E/R |
| | | | | ECM | TCM | METER /M&A | DISPLAY | BCM/SEC | STRG | Front air control | VDC/TCS /ABS | | |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | UNKWN ✓ | |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | UNKWN | — | |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | — | — | |
| Display control unit | — | CAN COMM | CAN CIRC 1 | CAN CIRC 3 | — | CAN CIRC 5 | — | CAN CIRC 2 | — | CAN CIRC 4 | — | CAN CIRC 7 ✓ | |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | — | UNKWN ✓ | |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — | UNKWN | — | |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | — | UNKWN | — | — | — | |
| IPDM E/R | No indication ✓ | — | UNKWN | UNKWN | — | — | — | UNKWN | — | — | — | — | |

PKIB6672E

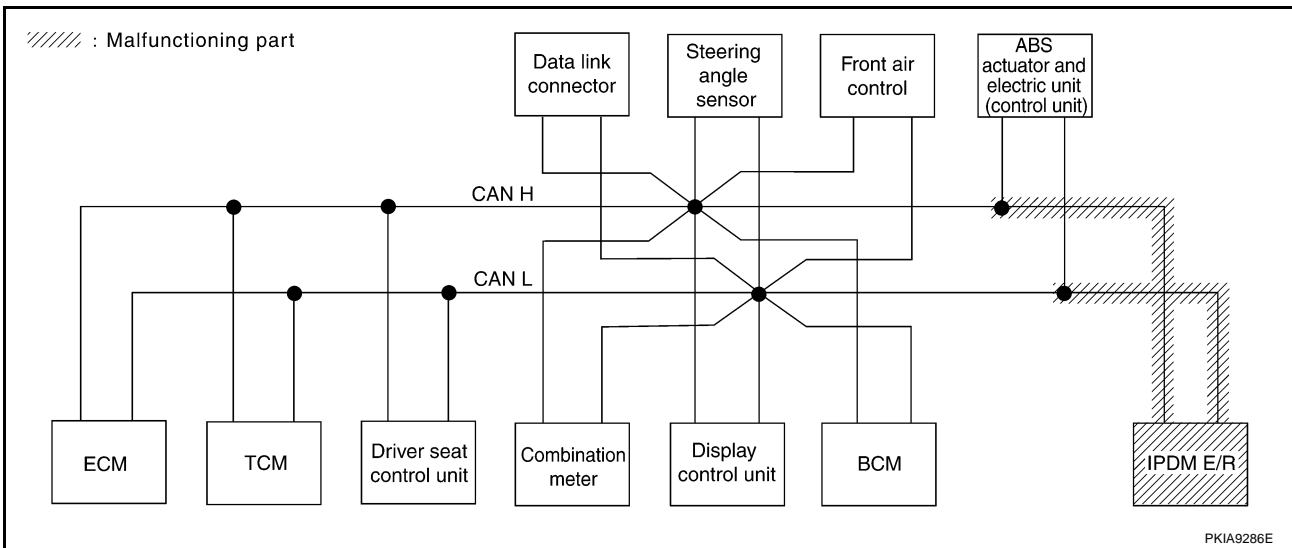

CAN SYSTEM (TYPE 3)

[CAN]

Case 15

Check CAN communication circuit. Refer to [LAN-109, "CAN Communication Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | | |
|----------------------|---------------|-----------------------|---------------------|---------------------|---------------------|---------------------|---------------------|---------------------|---------------------|-------------------|---------------------|---------------------|----------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | | IPDM E/R |
| | | | | ECM | TCM | METER /M&A | DISPLAY | BCM/SEC | STRG | Front air control | VDC/TCS /ABS | | |
| ENGINE | — | NG | UNKW N ✓ | — | UNKW N ✓ | UNKW N ✓ | — | UNKW N ✓ | — | — | UNKW N ✓ | UNKW N ✓ | |
| A/T | — | NG | UNKW N ✓ | UNKW N ✓ | — | UNKW N ✓ | — | — | — | — | UNKW N ✓ | — | |
| AUTO DRIVE POS. | No indication | NG | UNKW N ✓ | — | UNKW N ✓ | UNKW N ✓ | — | UNKW N ✓ | — | — | — | — | |
| Display control unit | — | CAN COMM | CAN CIRC 1 ✓ | CAN CIRC 3 ✓ | — | CAN CIRC 5 ✓ | — | CAN CIRC 2 ✓ | — | CAN CIRC 4 ✓ | — | CAN CIRC 7 ✓ | |
| BCM | No indication | NG | UNKW N ✓ | UNKW N ✓ | — | UNKW N ✓ | — | — | — | — | — | UNKW N ✓ | |
| HVAC | No indication | — | UNKW N ✓ | UNKW N ✓ | — | — | UNKW N ✓ | UNKW N ✓ | — | — | UNKW N ✓ | — | |
| ABS | — | NG | UNKW N ✓ | UNKW N ✓ | UNKW N ✓ | — | — | — | UNKW N ✓ | — | — | — | |
| IPDM E/R | No indication | — | UNKW N ✓ | UNKW N ✓ | — | — | — | UNKW N ✓ | — | — | — | — | |

PKIB6673E

Case 16

Check IPDM E/R ignition relay circuit continuously sticks "OFF". Refer to [LAN-110, "IPDM E/R Ignition Relay Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | | |
|----------------------|---------------|-----------------------|---------------------|---------------------|---------------------|---------------------|---------------------|---------------------|---------------------|-------------------|---------------------|---------------------|----------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | | IPDM E/R |
| | | | | ECM | TCM | METER /M&A | DISPLAY | BCM/SEC | STRG | Front air control | VDC/TCS /ABS | | |
| ENGINE | — | NG | UNKW N ✓ | — | UNKW N ✓ | UNKW N ✓ | — | UNKW N ✓ | — | — | UNKW N ✓ | UNKW N ✓ | |
| A/T | — | NG | UNKW N ✓ | UNKW N ✓ | — | UNKW N ✓ | — | — | — | — | UNKW N ✓ | — | |
| AUTO DRIVE POS. | No indication | NG | UNKW N ✓ | — | UNKW N ✓ | UNKW N ✓ | — | UNKW N ✓ | — | — | — | — | |
| Display control unit | — | CAN COMM | CAN CIRC 1 ✓ | CAN CIRC 3 ✓ | — | CAN CIRC 5 ✓ | — | CAN CIRC 2 ✓ | — | CAN CIRC 4 ✓ | — | CAN CIRC 7 ✓ | |
| BCM | No indication | NG | UNKW N ✓ | UNKW N ✓ | — | UNKW N ✓ | — | — | — | — | — | UNKW N ✓ | |
| HVAC | No indication | — | UNKW N ✓ | UNKW N ✓ | — | — | UNKW N ✓ | UNKW N ✓ | — | — | UNKW N ✓ | — | |
| ABS | — | NG | UNKW N ✓ | UNKW N ✓ | UNKW N ✓ | — | — | — | UNKW N ✓ | — | — | — | |
| IPDM E/R | No indication | — | UNKW N ✓ | UNKW N ✓ | — | — | — | UNKW N ✓ | — | — | — | — | |

PKIB6674E

Case 17

Check IPDM E/R ignition relay circuit continuously sticks "ON". Refer to [LAN-110, "IPDM E/R Ignition Relay Circuit Check"](#).

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|------|------------|---------|------------|------|-------------------|--------------|------------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER /M&A | DISPLAY | BCM/SEC | STRG | Front air control | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKW | — | UNKW | UNKW | — | UNKW | — | — | UNKW | UNKW |
| A/T | — | NG | UNKW | UNKW | — | UNKW | — | — | — | — | UNKW | — |
| AUTO DRIVE POS. | No indication | NG | UNKW | — | UNKW | UNKW | — | UNKW | — | — | — | — |
| Display control unit | — | CAN COMM | CAN CIRC 1 | CAN CIRC 3 | — | CAN CIRC 5 | — | CAN CIRC 2 | — | CAN CIRC 4 | — | CAN CIRC 7 |
| BCM | No indication | NG | UNKW | UNKW | — | UNKW | — | — | — | — | — | UNKW |
| HVAC | No indication | — | UNKW | UNKW | — | — | UNKW | UNKW | — | — | UNKW | — |
| ABS | — | NG | UNKW | UNKW | UNKW | — | — | — | UNKW | — | — | — |
| IPDM E/R | No indication | — | UNKW | UNKW | — | — | — | UNKW | — | — | — | — |

PKIB6675E

Circuit Check Between TCM and Driver Seat Control Unit

UKS0018I

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector F33
 - Harness connector E19
 - Harness connector E34
 - Harness connector B40

OK or NG

OK >> GO TO 2.

NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect A/T assembly connector and harness connector F33.
2. Check continuity between A/T assembly harness connector F9 terminals 3 (L), 8 (P) and harness connector F33 terminals 12 (L), 11 (P).


3 (L) - 12 (L) : Continuity should exist.

8 (P) - 11 (P) : Continuity should exist.

OK or NG

OK >> GO TO 3.

NG >> Repair harness.

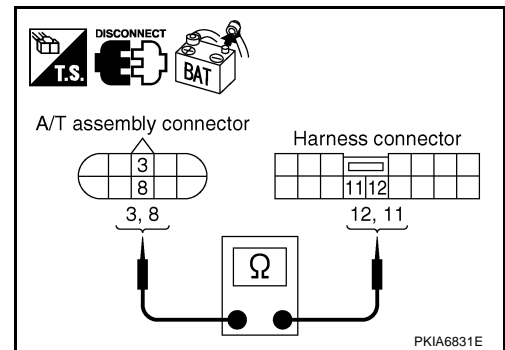


3. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect harness connector E34.
2. Check continuity between harness connector E19 terminals 12 (L), 11 (P) and harness connector E34 terminals 24 (L), 23 (P).

12 (L) - 24 (L) : Continuity should exist.
11 (P) - 23 (P) : Continuity should exist.

OK or NG

- OK >> GO TO 4.
 NG >> Repair harness.

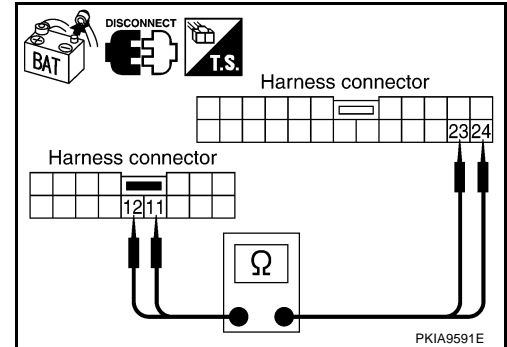


4. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect driver seat control unit connector.
2. Check continuity between harness connector B40 terminals 24 (L), 23 (P) and driver seat control unit harness connector P2 terminals 3 (L), 19 (P).

24 (L) - 3 (L) : Continuity should exist.
23 (P) - 19 (P) : Continuity should exist.

OK or NG

- OK >> Connect all the connectors and diagnose again. Refer to [LAN-82, "Work Flow"](#).
 NG >> Repair harness.

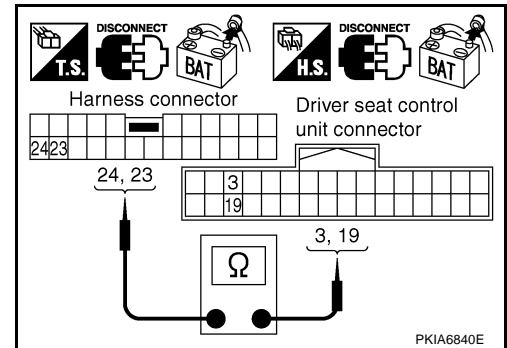

Circuit Check Between Driver Seat Control Unit and Data Link Connector

UKS0018J

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B69
 - Harness connector M40

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect driver seat control unit connector and harness connector B69.
2. Check continuity between driver seat control unit harness connector P2 terminals 3 (L), 19 (P) and harness connector B69 terminals 51J (L), 52J (P).

3 (L) - 51J (L) : Continuity should exist.
19 (P) - 52J (P) : Continuity should exist.

OK or NG

- OK >> GO TO 3.
 NG >> Repair harness.

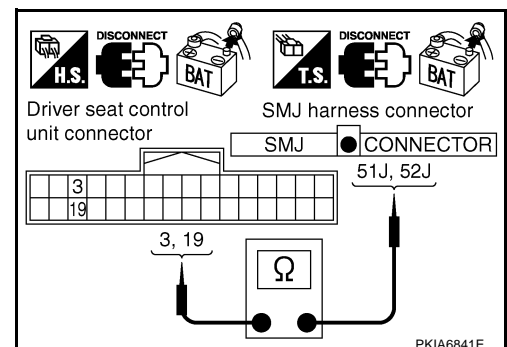

3. CHECK HARNESS FOR OPEN CIRCUIT


Check continuity between harness connector M40 terminals 51J (L), 52J (P) and data link connector M22 terminals 6 (L), 14 (P).

51J (L) - 6 (L) : Continuity should exist.

52J (P) - 14 (P) : Continuity should exist.

OK or NG

- OK >> Connect all the connectors and diagnose again. Refer to [LAN-82, "Work Flow"](#).
- NG >> Repair harness.

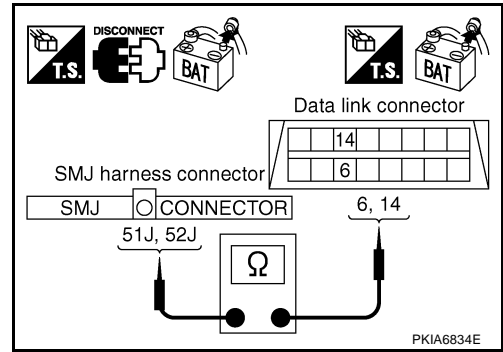

Circuit Check Between Data Link Connector and IPDM E/R

UKS0018K

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M31
 - Harness connector E152

OK or NG

- OK >> GO TO 2.
- NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT


1. Disconnect harness connector M31.
2. Check continuity between data link connector M22 terminals 6 (L), 14 (P) and harness connector M31 terminals 31G (L), 42G (P).

6 (L) - 31G (L) : Continuity should exist.

14 (P) - 42G (P) : Continuity should exist.

OK or NG

- OK >> GO TO 3.
- NG >> Repair harness.

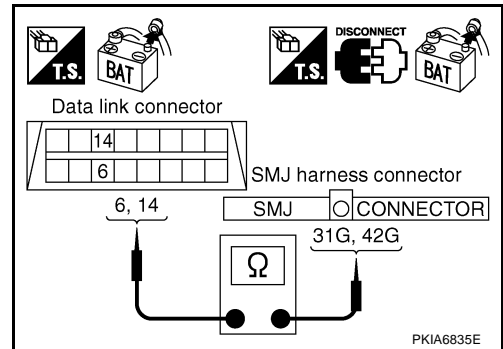

3. CHECK HARNESS FOR OPEN CIRCUIT


1. Disconnect IPDM E/R connector.
2. Check continuity between harness connector E152 terminals 31G (L), 42G (P) and IPDM E/R harness connector E122 terminals 39 (L), 40 (P).

31G (L) - 39 (L) : Continuity should exist.

42G (P) - 40 (P) : Continuity should exist.

OK or NG

- OK >> Connect all the connectors and diagnose again. Refer to [LAN-82, "Work Flow"](#).
- NG >> Repair harness.

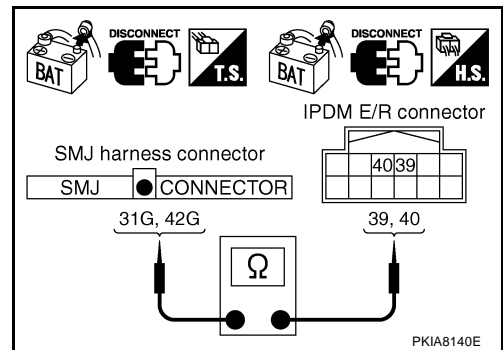

ECM Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (control module side and harness side).
 - ECM connector
 - Harness connector E19
 - Harness connector F33

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect ECM connector.
2. Check resistance between ECM harness connector E16 terminals 94 (L) and 86 (P).

94 (L) - 86 (P) : Approx. 108 - 132 Ω

OK or NG

- OK >> Replace ECM.
 NG >> Repair harness between ECM and A/T assembly.

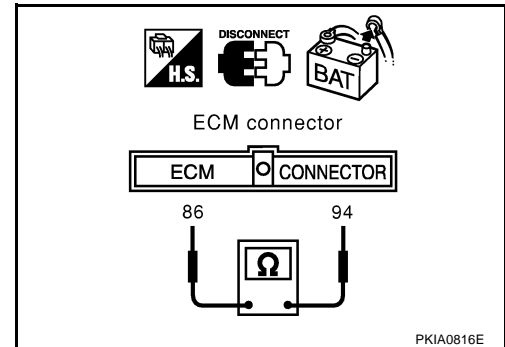**TCM Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of A/T assembly for damage, bend and loose connection (control module side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect A/T assembly connector.
2. Check resistance between A/T assembly harness connector F9 terminals 3 (L) and 8 (P).

3 (L) - 8 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace A/T assembly.
 NG >> Repair harness between A/T assembly and harness connector F33.

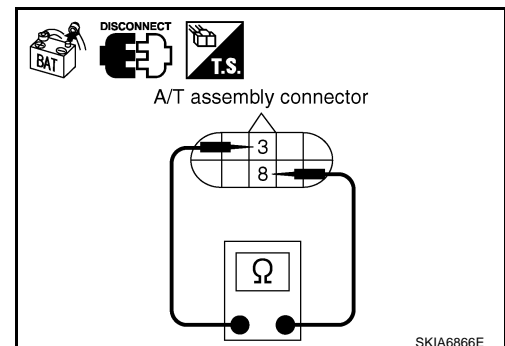

Driver Seat Control Unit Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of driver seat control unit for damage, bend and loose connection (control unit side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect driver seat control unit connector.
2. Check resistance between driver seat control unit harness connector P2 terminals 3 (L) and 19 (P).

3 (L) - 19 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace driver seat control unit.
 NG >> Repair harness between driver seat control unit and harness connector B40.

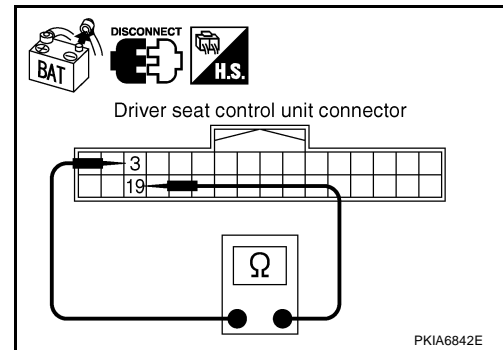**Combination Meter Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of combination meter for damage, bend and loose connection (meter side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect combination meter connector.
2. Check resistance between combination meter harness connector M24 terminals 11 (L) and 12 (P).

11 (L) - 12 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace combination meter.
 NG >> Repair harness between combination meter and data link connector.

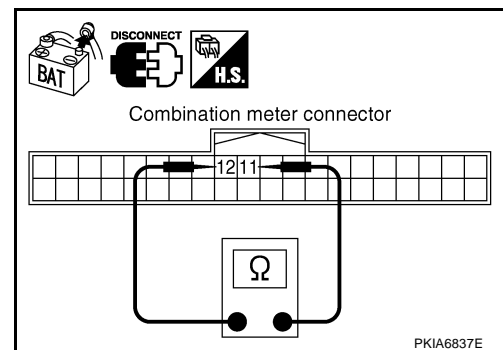

Display Control Unit Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of display control unit for damage, bend and loose connection (control unit side and harness side).

OK or NG

- OK >> GO TO 2.
NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect display control unit connector.
2. Check resistance between display control unit harness connector M95 terminals 25 (L) and 26 (P).

25 (L) - 26 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace display control unit.
NG >> Repair harness between display control unit and data link connector.

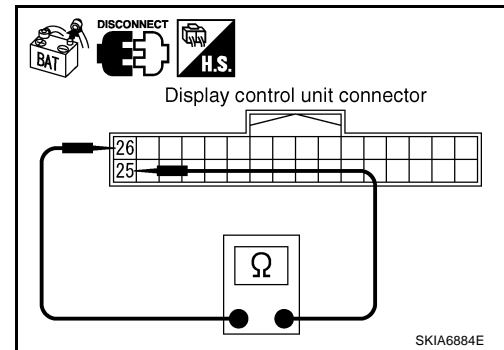

BCM Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of BCM for damage, bend and loose connection (control module side and harness side).

OK or NG

- OK >> GO TO 2.
NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect BCM connector.
2. Check resistance between BCM harness connector M18 terminals 39 (L) and 40 (P).

39 (L) - 40 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace BCM. Refer to [BCS-20, "Removal and Installation of BCM"](#) .
NG >> Repair harness between BCM and data link connector.

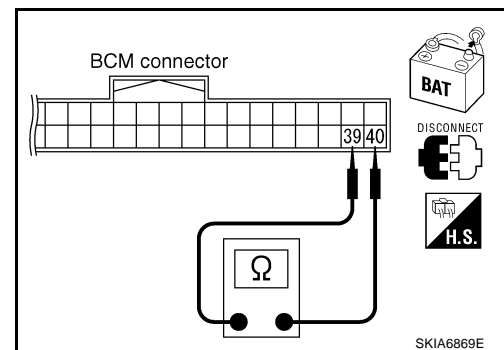

Data Link Connector Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check the terminals and connector of data link connector for damage, bend and loose connection (connector side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

Check resistance between data link connector M22 terminals 6 (L) and 14 (P).

6 (L) - 14 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Diagnose again. Refer to [LAN-82, "Work Flow"](#) .
 NG >> Repair harness between data link connector and combination meter.

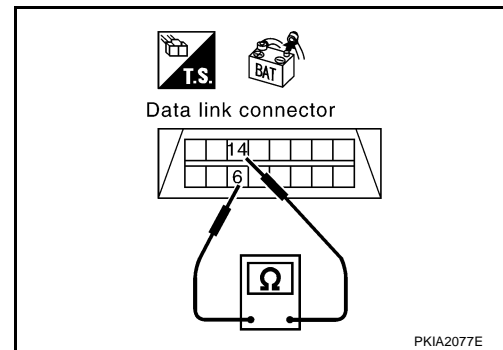**Steering Angle Sensor Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of steering angle sensor for damage, bend and loose connection (sensor side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect steering angle sensor connector.
2. Check resistance between steering angle sensor harness connector M47 terminals 3 (L) and 4 (P).

3 (L) - 4 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace steering angle sensor.
 NG >> Repair harness between steering angle sensor and data link connector.

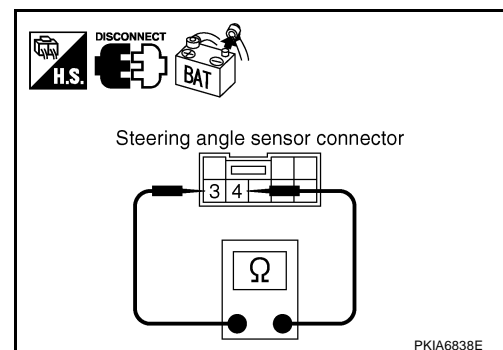

Front Air Control Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of front air control for damage, bend and loose connection (unit side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect front air control connector.
2. Check resistance between front air control harness connector M50 terminals 34 (L) and 35 (P).

34 (L) - 35 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace front air control.
 NG >> Repair harness between front air control and data link connector.

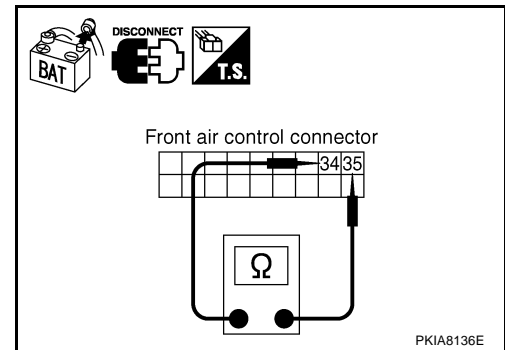**ABS Actuator and Electric Unit (Control Unit) Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of ABS actuator and electric unit (control unit) for damage, bend and loose connection (control unit side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect ABS actuator and electric unit (control unit) connector.
2. Check resistance between ABS actuator and electric unit (control unit) harness connector E125 terminals 11 (L) and 15 (P).

11 (L) - 15 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace ABS actuator and electric unit (control unit).
 NG >> Repair harness between ABS actuator and electric unit (control unit) and harness connector E152.

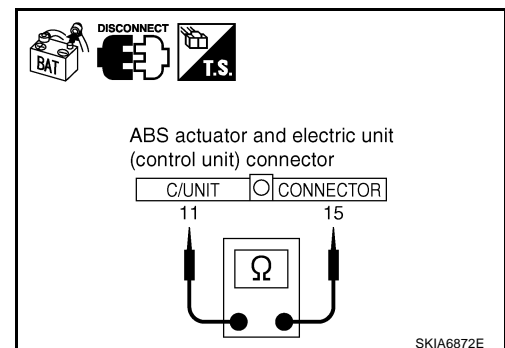

IPDM E/R Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of IPDM E/R for damage, bend and loose connection (control module side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check resistance between IPDM E/R harness connector E122 terminals 39 (L) and 40 (P).

39 (L) - 40 (P) : Approx. 108 - 132 Ω

OK or NG

- OK >> Replace IPDM E/R.
 NG >> Repair harness between IPDM E/R and harness connector E152.

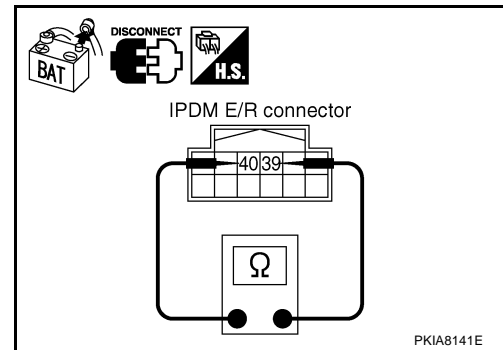**CAN Communication Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Disconnect the following module and control unit connectors and check terminals for deformation, disconnection, looseness or damage.
 - ECM
 - A/T assembly
 - Driver seat control unit
 - Combination meter
 - Display control unit
 - BCM
 - Steering angle sensor
 - Front air control
 - ABS actuator and electric unit (control unit)
 - IPDM E/R

OK or NG

- OK >> GO TO 2.
 NG >> Repair or replace as necessary.

2. CHECK HARNESS FOR SHORT CIRCUIT


With all module and control unit connectors disconnected, check continuity between data link connector M22 terminals 6 (L) and 14 (P).

6 (L) - 14 (P) : Continuity should not exist.

OK or NG

OK >> GO TO 3.

NG >> Repair harness.

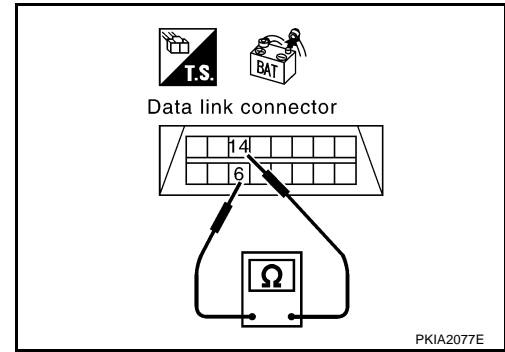

3. CHECK HARNESS FOR SHORT CIRCUIT

Check continuity between data link connector M22 terminals 6 (L), 14 (P) and ground.


6 (L) - Ground : Continuity should not exist.

14 (P) - Ground : Continuity should not exist.

OK or NG

OK >> Check ECM and IPDM E/R. Refer to [LAN-110, "ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION"](#).

NG >> Repair harness.

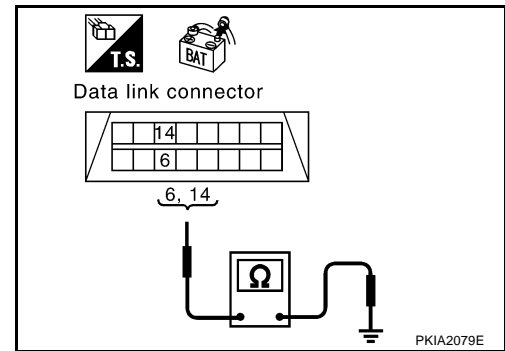

UKS0018X

IPDM E/R Ignition Relay Circuit Check

Check the following. If no malfunction is found, replace the IPDM E/R.


- IPDM E/R power supply circuit. Refer to [PG-26, "IPDM E/R Power/Ground Circuit Inspection"](#).
- Ignition power supply circuit. Refer to [PG-13, "IGNITION POWER SUPPLY — IGNITION SW. IN ON AND/OR START"](#).

Component Inspection ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION

UKS0018Y

- Remove ECM and IPDM E/R from vehicle.
- Check resistance between ECM terminals 94 and 86.
- Check resistance between IPDM E/R terminals 39 and 40.

| Unit | Terminal | Resistance value (Ω) (Approx.) |
|----------|----------|-----------------------------------|
| ECM | 94 - 86 | 108 - 132 |
| IPDM E/R | 39 - 40 | |

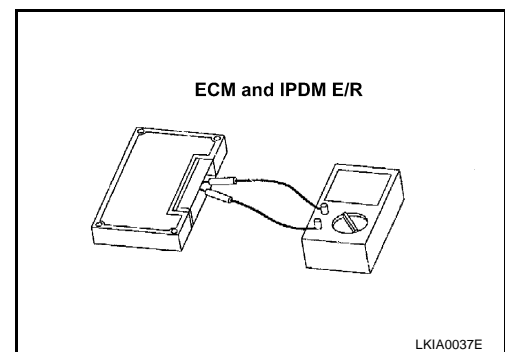

CAN SYSTEM (TYPE 4)

PFP:23710


System Description

UKS000PQ

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

Component Parts and Harness Connector Location

UKS000PR

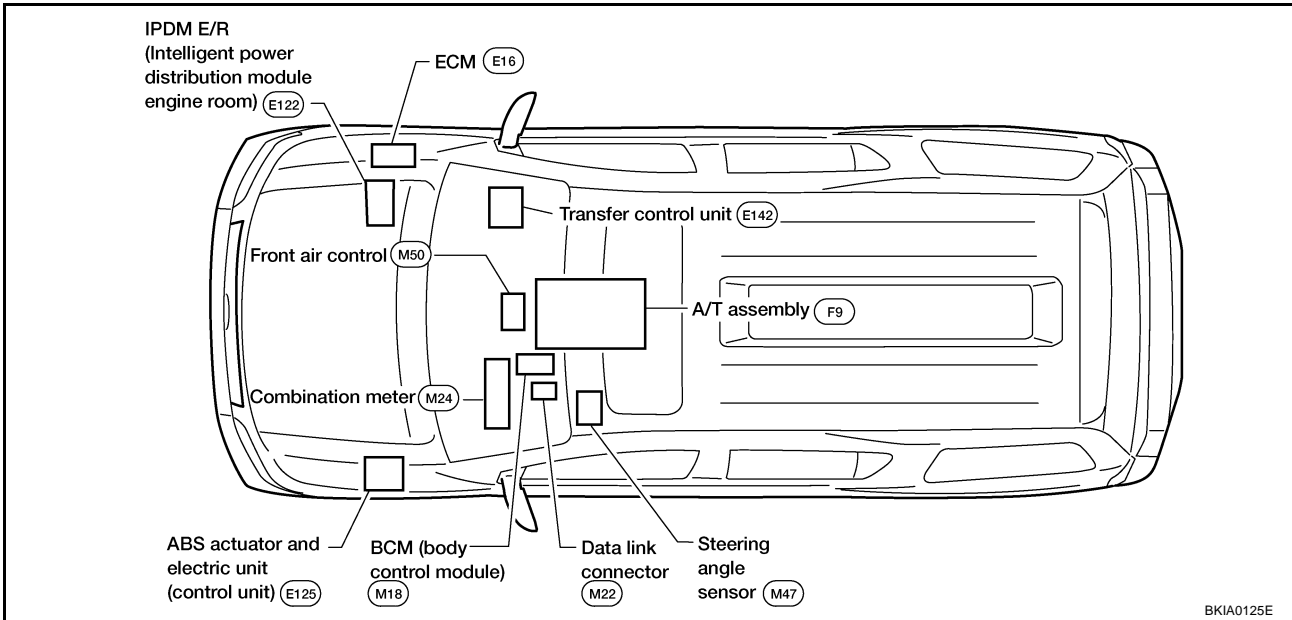

BKIA0125E

A
B
C
D
E
F
G
H
I
J
L
M


LAN

CAN SYSTEM (TYPE 4)

[CAN]

Schematic

UKS000PS

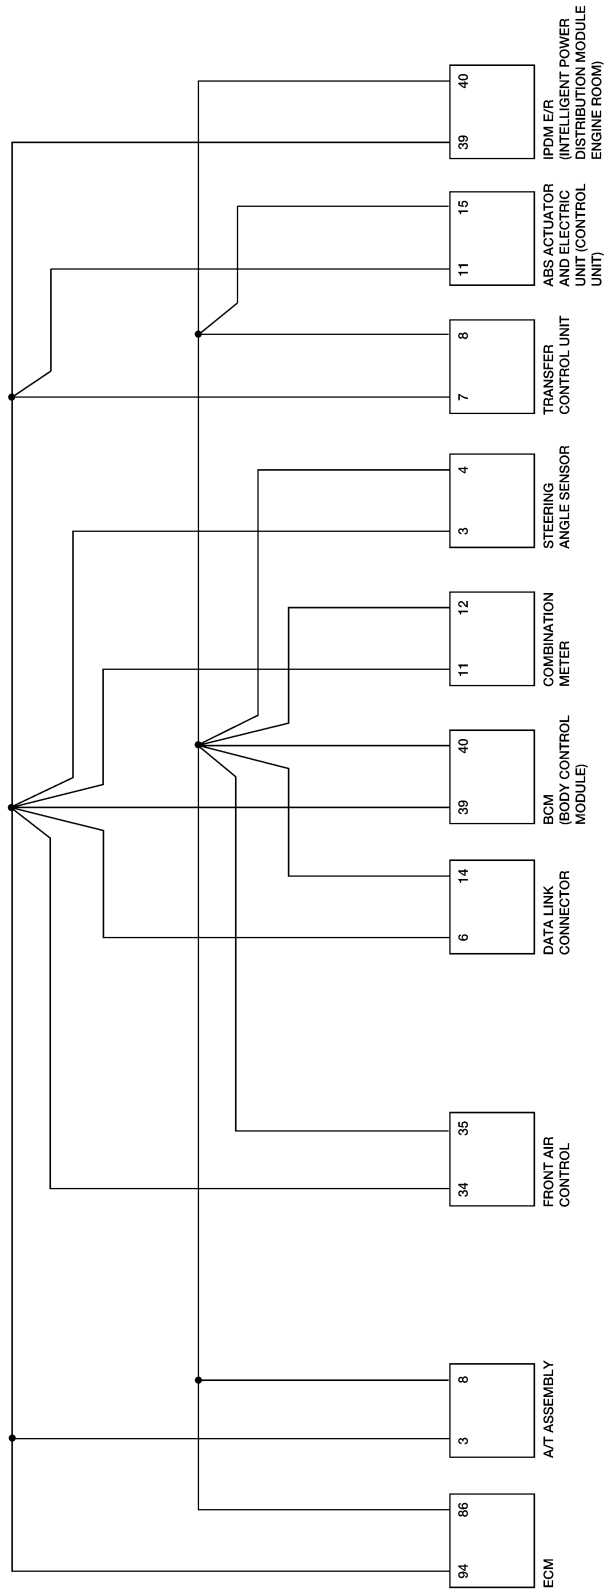

BKWA0188E

CAN SYSTEM (TYPE 4)



[CAN]

Wiring Diagram - CAN -

UKS000PT

LAN-CAN-10

— : DATA LINE

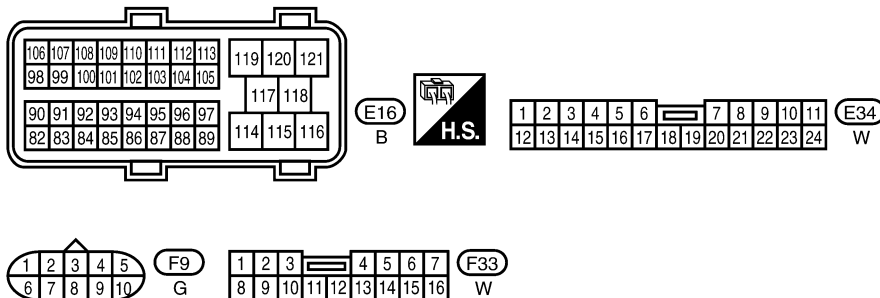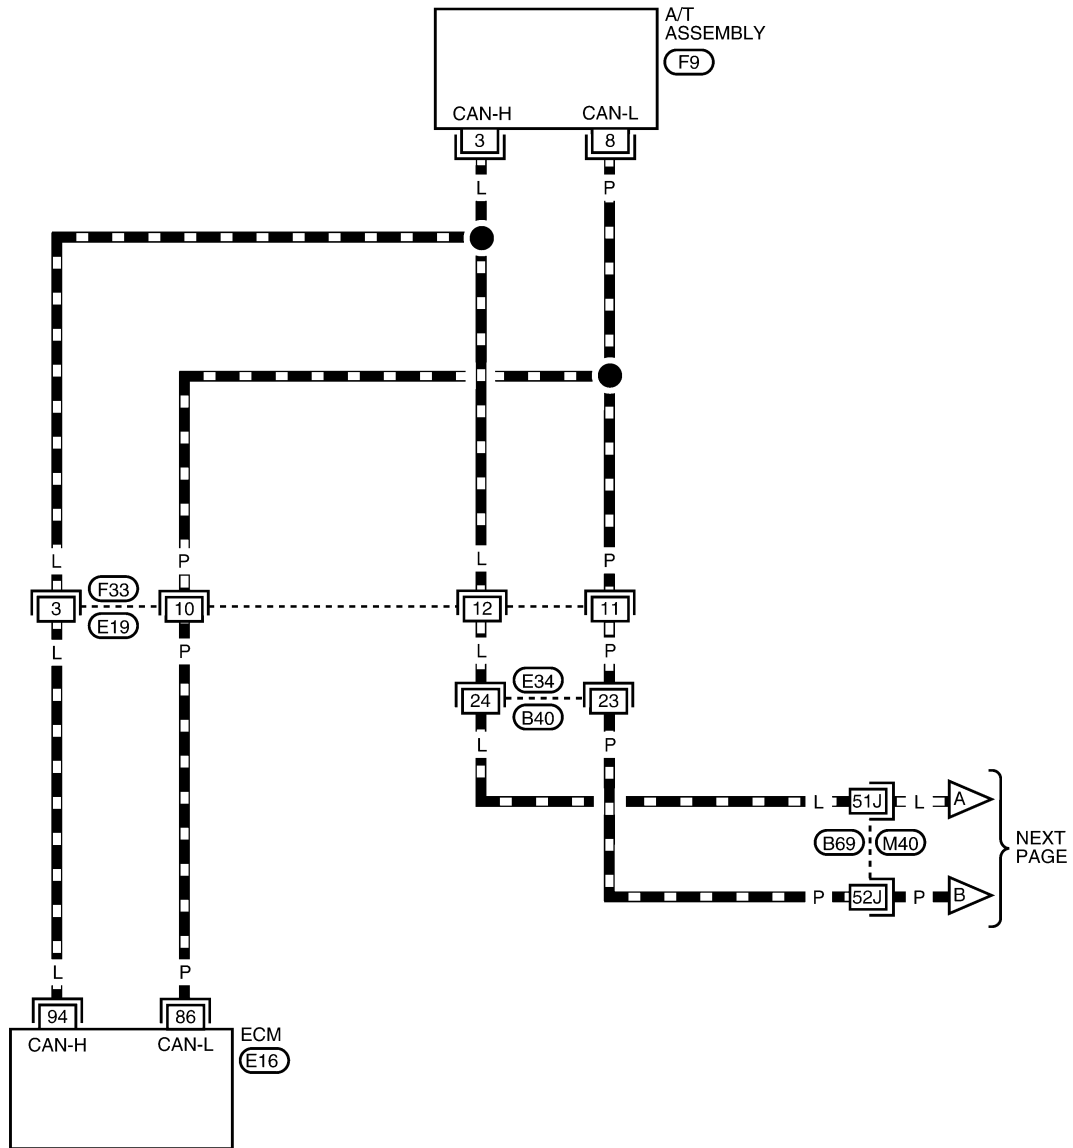

REFER TO THE FOLLOWING.







(M40) - SUPER MULTIPLE JUNCTION (SMJ)

BKWA0416E

CAN SYSTEM (TYPE 4)

[CAN]

LAN-CAN-11

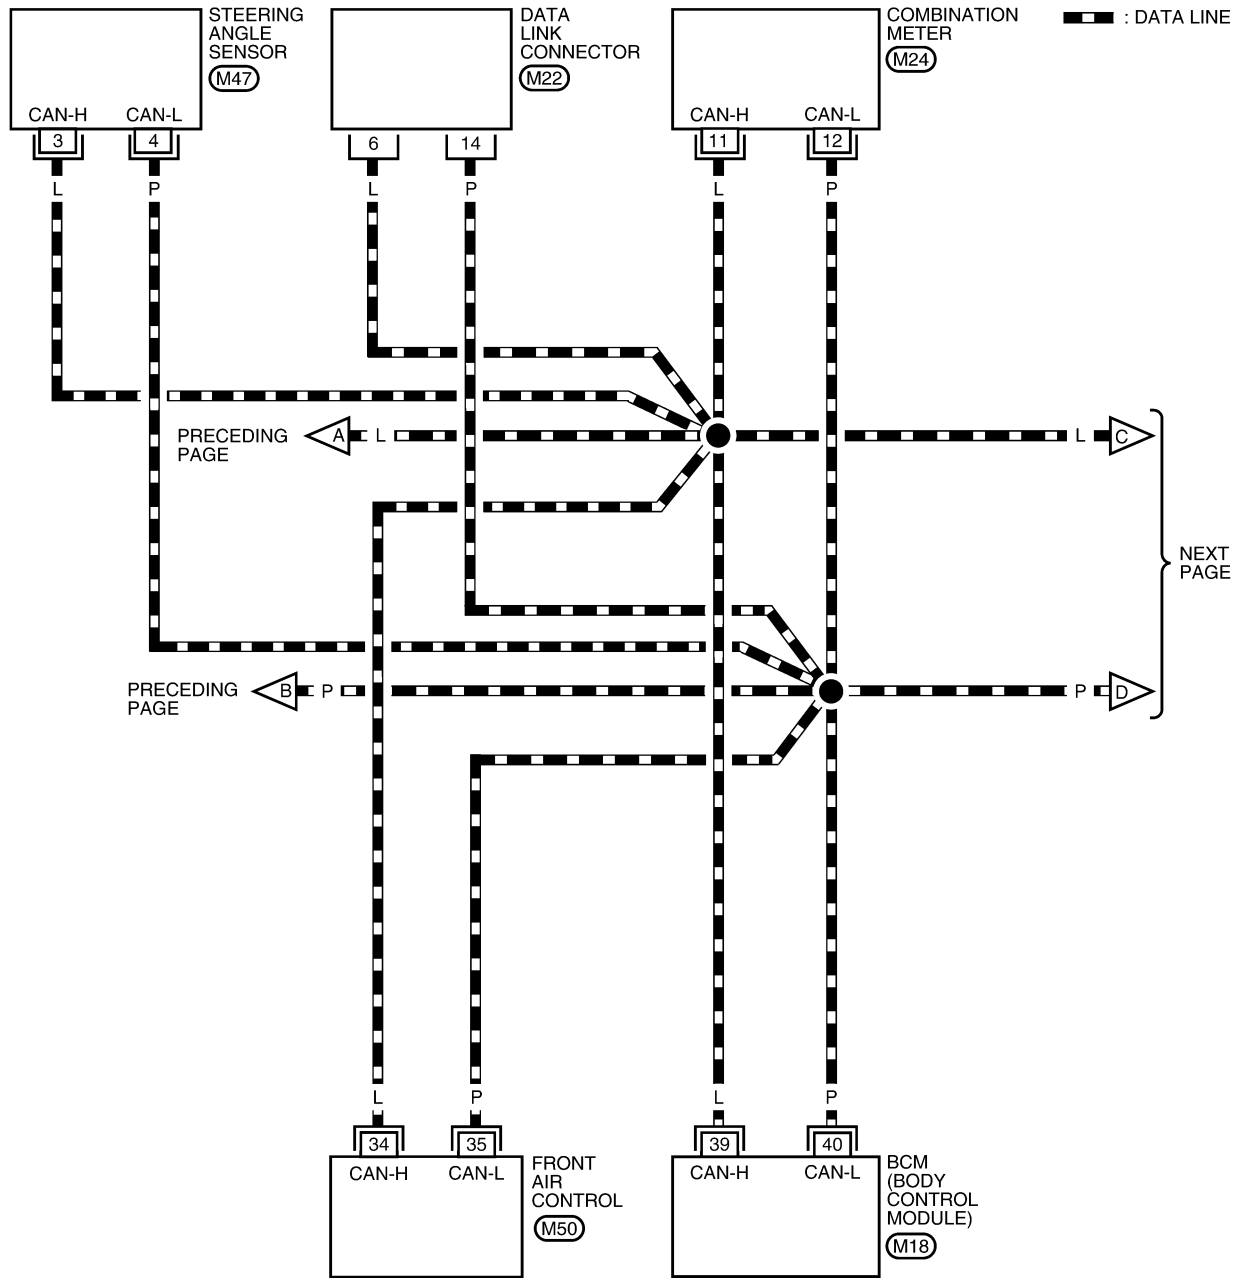


BKWA0417E

CAN SYSTEM (TYPE 4)


[CAN]

LAN-CAN-12

▬ : DATA LINE

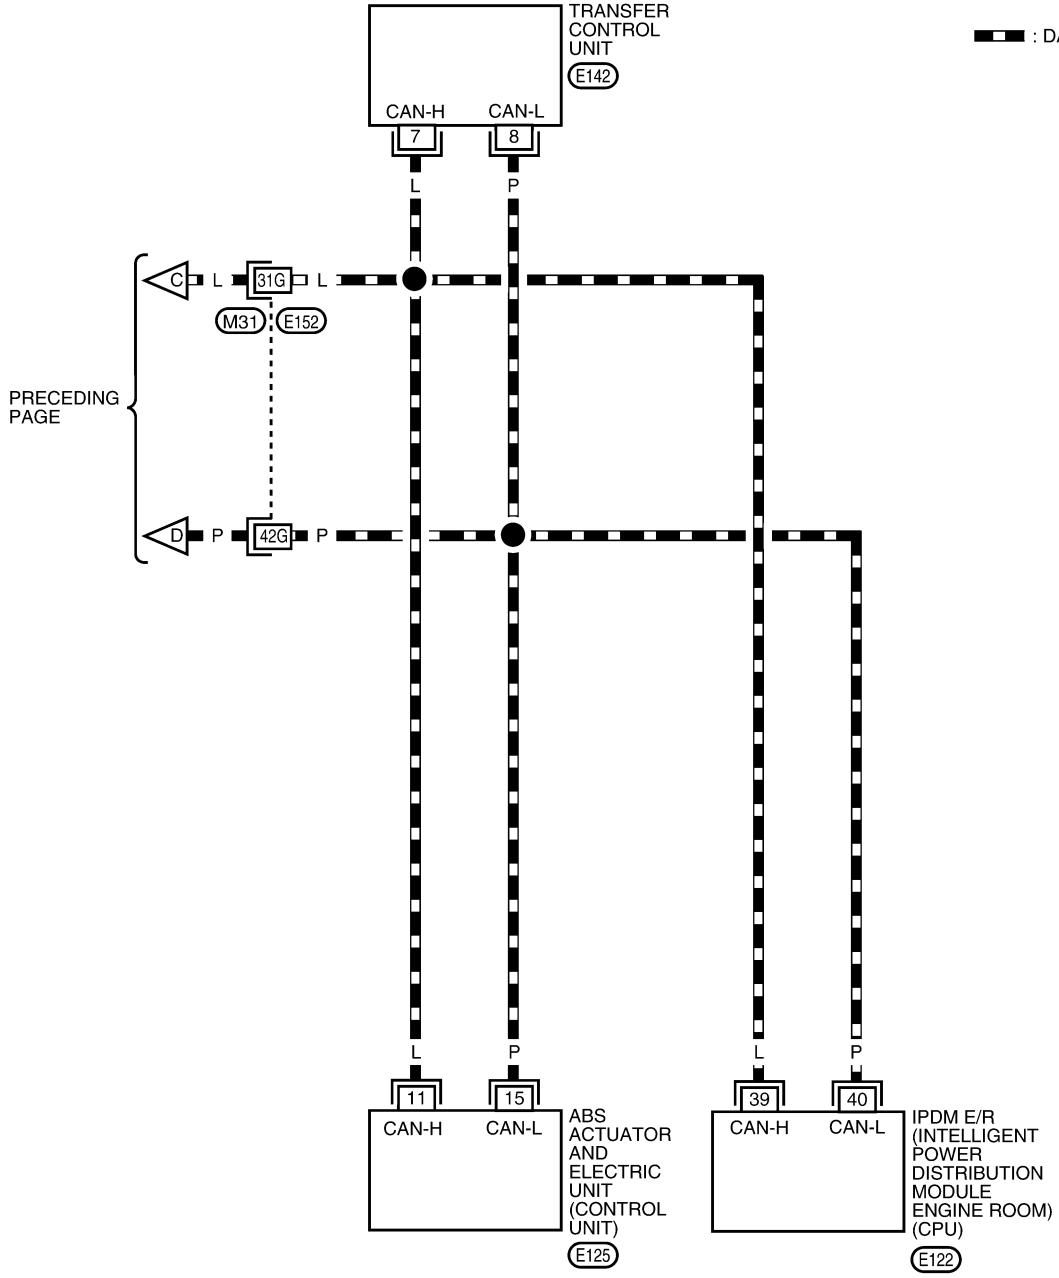

A
B
C
D
E
F
G
H
I
J
LAN
L
M

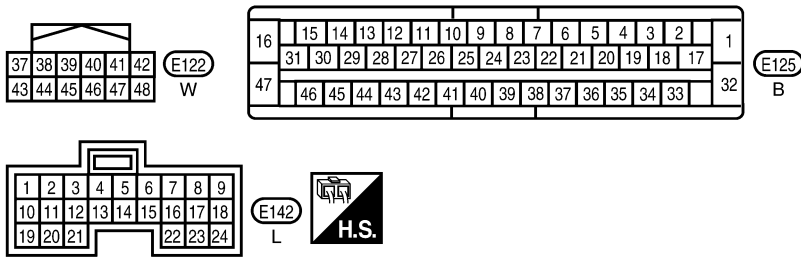

REFER TO THE FOLLOWING.
(M31) - SUPER MULTIPLE JUNCTION (SMJ)

BKWA0418E


CAN SYSTEM (TYPE 4)

[CAN]


UKS0018Z

Work Flow


- When there are no indications of "BCM", "HVAC", "ALL MODE AWD/4WD" or "IPDM E/R" on "SELECT SYSTEM" display of CONSULT-II, print the "SELECT SYSTEM".

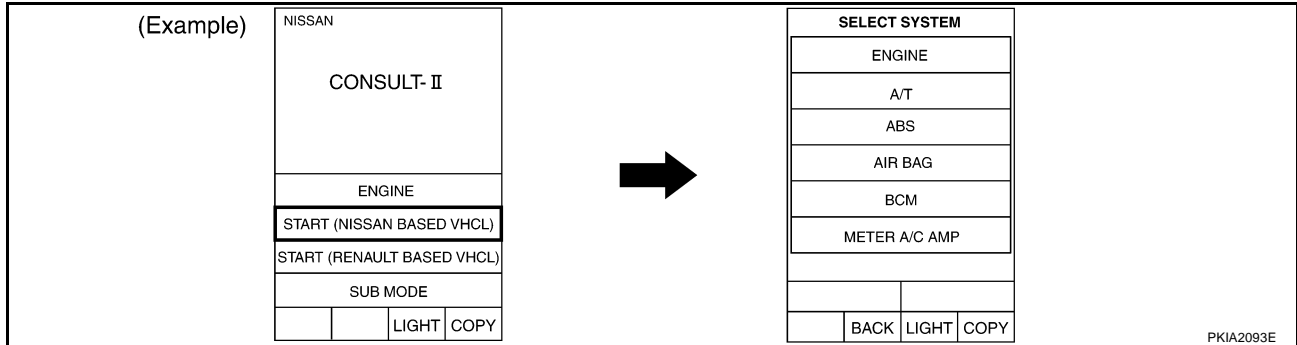

- Print all the data of "SELF-DIAG RESULTS" for "ENGINE", "A/T", "BCM", "HVAC", "ALL MODE AWD/4WD", "ABS" and "IPDM E/R" displayed on CONSULT-II.

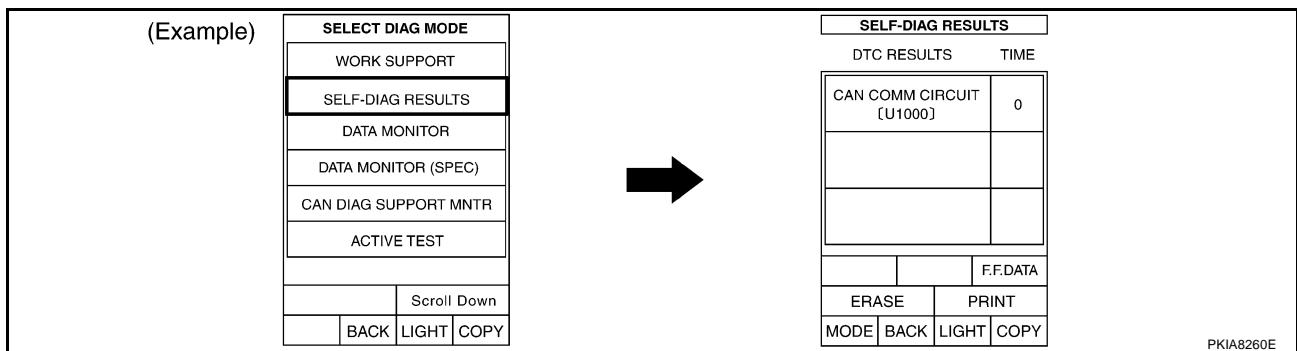


- Print all the data of "CAN DIAG SUPPORT MNTR" for "ENGINE", "A/T", "BCM", "HVAC", "ALL MODE AWD/4WD", "ABS" and "IPDM E/R" displayed on CONSULT-II.

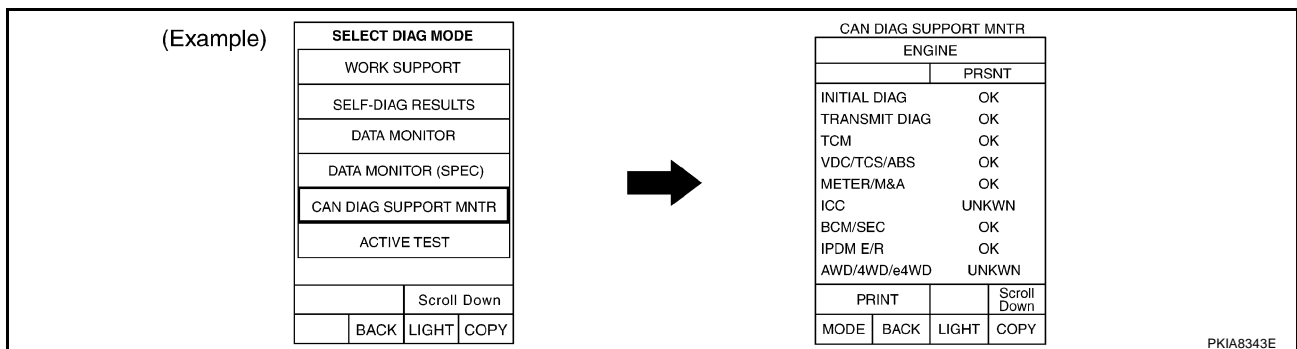

- Attach the printed sheet of "SELECT SYSTEM", "SELF-DIAG RESULTS" and "CAN DIAG SUPPORT MNTR" onto the check sheet. Refer to [LAN-118, "CHECK SHEET"](#) .
- Based on the indications of "SELECT SYSTEM" and the results of "CAN DIAG SUPPORT MNTR", puts a check mark onto the items with "No indication", "NG", or "UNKWN" in the check sheet table. Refer to [LAN-118, "CHECK SHEET"](#) .

CAUTION:

"ALL MODE AWD/4WD" puts a check mark on the check sheet when "Present" is "UNKWN" and "Past" is "0".

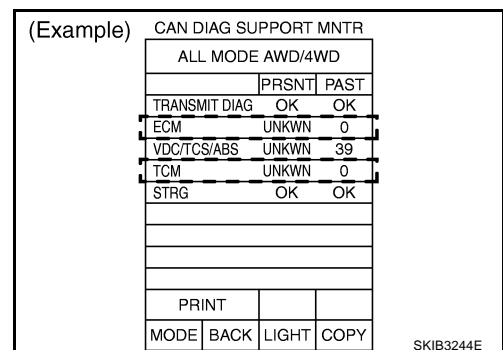

NOTE:

- If “NG” is displayed on “INITIAL DIAG (Initial diagnosis)” as “CAN DIAG SUPPORT MNTR” for the diagnosed control unit, replace the control unit.
 - The “CAN DIAG SUPPORT MNTR” items, which are not in check sheet table, are not related to diagnostic procedure on service manual.
So it is not necessary to check the status of the “CAN DIAG SUPPORT MNTR” items not in check sheet table.
6. According to the check sheet results (example), start inspection. Refer to [LAN-120, "CHECK SHEET RESULTS \(EXAMPLE\)"](#) .

A
B
C
D
E
F
G
H
I
J
L
M

LAN

CAN SYSTEM (TYPE 4)

[CAN]

CHECK SHEET

NOTE:

If "NG" is displayed on "INITIAL DIAG (Initial diagnosis)" for the diagnosed control unit, replace the control unit.

Check sheet table

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|-----------|---------|-------|--------------|-------------|----------|--|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER/M&A | BCM/SEC | STRG | AWD/4WD/e4WD | VDC/TCS/ABS | IPDM E/R | |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | UNKWN | UNKWN | UNKWN | |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | UNKWN | — | |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | UNKWN | |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | UNKWN | — | |
| ALL MODE AWD/4WD | No indication | — | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — | |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — | |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — | — | |

Symptoms :

Attach copy of
SELECT SYSTEM

Attach copy of
SELECT SYSTEM

CAN SYSTEM (TYPE 4)

[CAN]

A
B
C
D
E
F
G
H
I
J
L
M

Attach copy of
ENGINE
SELF-DIAG RESULTS

Attach copy of
A/T
SELF-DIAG RESULTS

Attach copy of
BCM
SELF-DIAG RESULTS

Attach copy of
HVAC
SELF-DIAG RESULTS

Attach copy of
ALL MODE AWD/4WD
SELF-DIAG RESULTS

Attach copy of
ABS
SELF-DIAG RESULTS

Attach copy of
IPDM E/R
SELF-DIAG RESULTS

Attach copy of
ENGINE
CAN DIAG SUPPORT
MNTR

Attach copy of
A/T
CAN DIAG SUPPORT
MNTR

Attach copy of
BCM
CAN DIAG SUPPORT
MNTR

Attach copy of
HVAC
CAN DIAG SUPPORT
MNTR

Attach copy of
ALL MODE AWD/4WD
CAN DIAG SUPPORT
MNTR

Attach copy of
ABS
CAN DIAG SUPPORT
MNTR

Attach copy of
IPDM E/R
CAN DIAG SUPPORT
MNTR

LAN

PKIB6772E

CHECK SHEET RESULTS (EXAMPLE)

NOTE:


If "NG" is displayed on "INITIAL DIAG (Initial diagnosis)" for the diagnosed control unit, replace the control unit.

Case 1

Check harness between TCM and data link connector. Refer to [LAN-133, "Circuit Check Between TCM and Data Link Connector"](#).

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|---------|-----------|---------|-------|--------------|-------------|----------|--|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER/M&A | BCM/SEC | STRG | AWD/4WD/e4WD | VDC/TCS/ABS | IPDM E/R | |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN ✓ | UNKWN ✓ | — | UNKWN ✓ | UNKWN ✓ | UNKWN ✓ | |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN ✓ | — | — | UNKWN ✓ | UNKWN ✓ | — | |
| BCM | No indication | NG | UNKWN | UNKWN ✓ | — | UNKWN | — | — | — | — | UNKWN | |
| HVAC | No indication | — | UNKWN | UNKWN ✓ | — | — | UNKWN | — | — | UNKWN | — | |
| ALL MODE AWD/4WD | No indication | — | UNKWN | UNKWN ✓ | UNKWN ✓ | — | — | UNKWN | — | UNKWN | — | |
| ABS | — | NG | UNKWN | UNKWN ✓ | UNKWN ✓ | — | — | UNKWN | UNKWN | — | — | |
| IPDM E/R | No indication | — | UNKWN | UNKWN ✓ | — | — | UNKWN | — | — | — | — | |

SKIB3333E

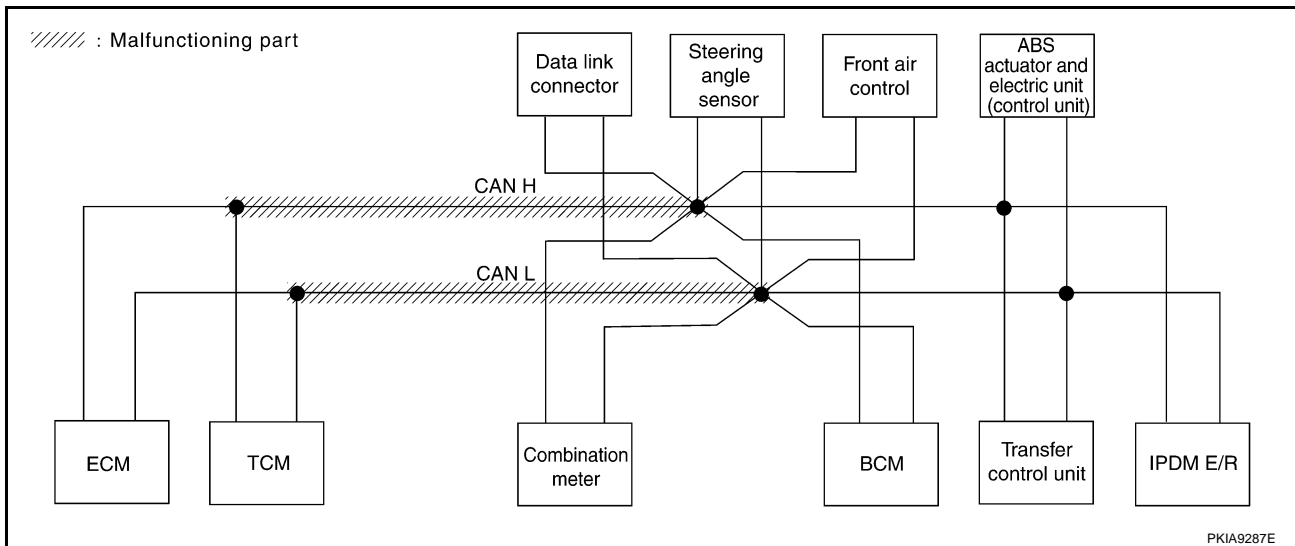

CAN SYSTEM (TYPE 4)


[CAN]

Case 2

Check harness between data link connector and IPDM E/R. Refer to [LAN-134, "Circuit Check Between Data Link Connector and IPDM E/R"](#).

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|-----------|---------|-------|---------------|--------------|----------|--|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER/M&A | BCM/SEC | STRG | AWD/4WD /e4WD | VDC/TCS /ABS | IPDM E/R | |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | UNKWN | UNKWN | UNKWN | |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | UNKWN | — | |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | UNKWN | |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | UNKWN | — | |
| ALL MODE AWD/4WD | No indication | — | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — | |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — | |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — | — | |

SKIB3334E

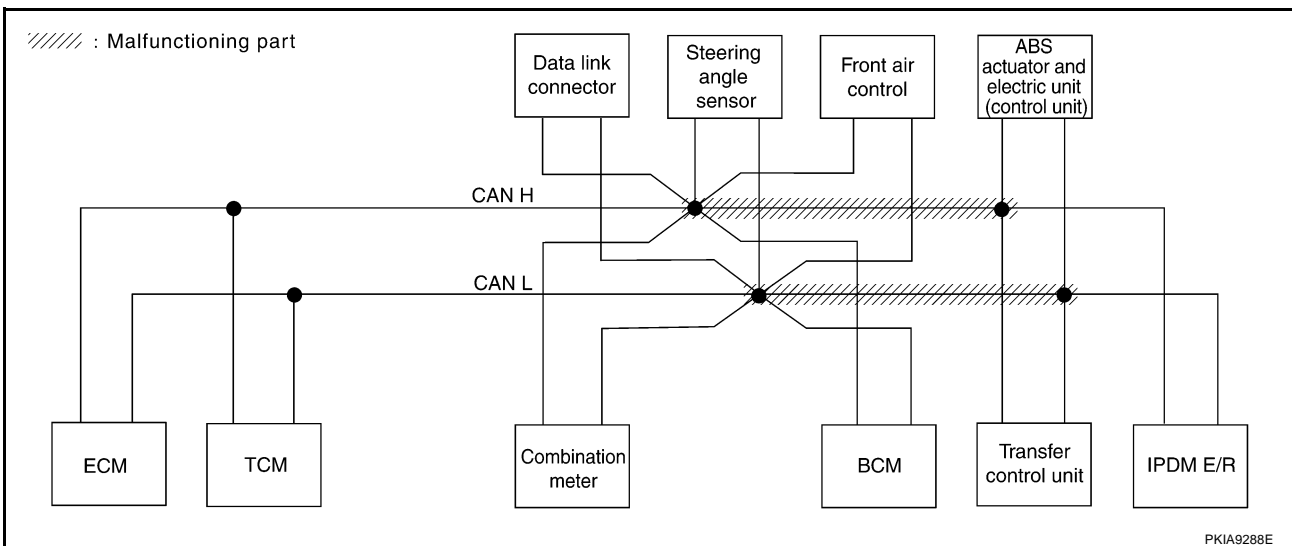

CAN SYSTEM (TYPE 4)


[CAN]

Case 3

Check ECM circuit. Refer to [LAN-135, "ECM Circuit Check"](#).

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|---------------|-----------------------|---------------------|---------------------|---------------------|---------------------|---------------------|---------------------|---------------------|---------------------|---------------------|--|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER/M&A | BCM/SEC | STRG | AWD/4WD/e4WD | VDC/TCS/ABS | IPDM E/R | |
| ENGINE | — | NG | UNKW [✓] N | — | UNKW [✓] N | UNKW [✓] N | UNKW [✓] N | — | UNKW [✓] N | UNKW [✓] N | UNKW [✓] N | |
| A/T | — | NG | UNKW [✓] N | UNKW [✓] N | — | UNKW [✓] N | — | — | UNKW [✓] N | UNKW [✓] N | — | |
| BCM | No indication | NG | UNKW [✓] N | UNKW [✓] N | — | UNKW [✓] N | — | — | — | — | UNKW [✓] N | |
| HVAC | No indication | — | UNKW [✓] N | UNKW [✓] N | — | — | UNKW [✓] N | — | — | UNKW [✓] N | — | |
| ALL MODE AWD/4WD | No indication | — | UNKW [✓] N | UNKW [✓] N | UNKW [✓] N | — | — | UNKW [✓] N | — | UNKW [✓] N | — | |
| ABS | — | NG | UNKW [✓] N | UNKW [✓] N | UNKW [✓] N | — | — | UNKW [✓] N | UNKW [✓] N | — | — | |
| IPDM E/R | No indication | — | UNKW [✓] N | UNKW [✓] N | — | — | UNKW [✓] N | — | — | — | — | |

SKIB3335E

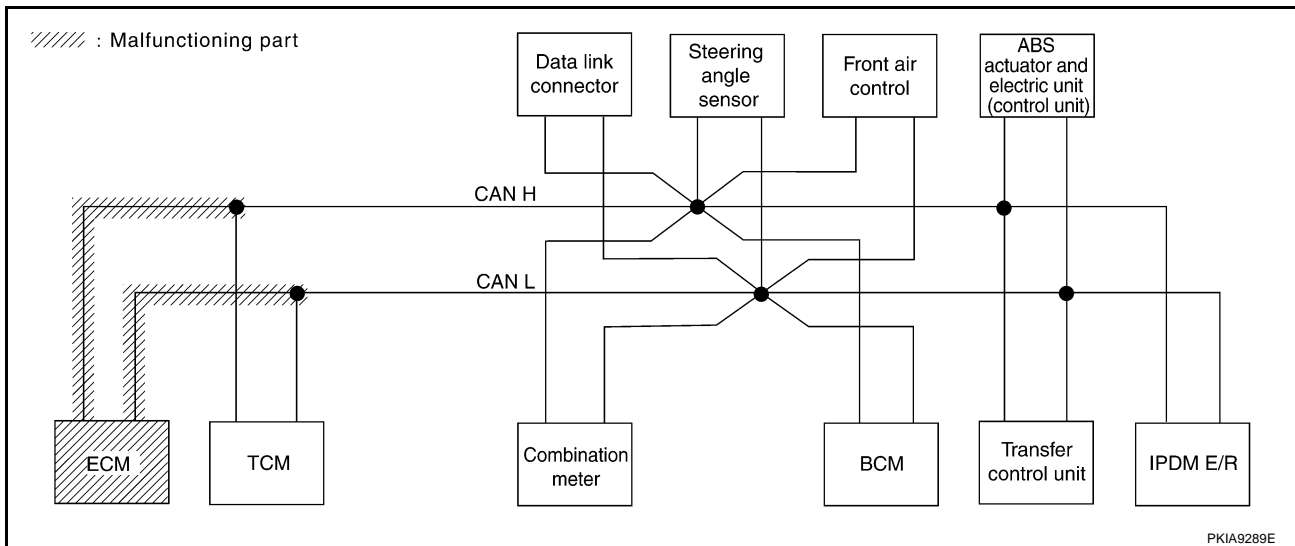

CAN SYSTEM (TYPE 4)


[CAN]

Case 4

Check TCM circuit. Refer to [LAN-136, "TCM Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|------|-----------|---------|------|---------------|--------------|----------|--|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER/M&A | BCM/SEC | STRG | AWD/4WD /e4WD | VDC/TCS /ABS | IPDM E/R | |
| ENGINE | — | NG | UNKW | — | UNKW | UNKW | UNKW | — | UNKW | UNKW | UNKW | |
| A/T | — | NG | UNKW | UNKW | — | UNKW | — | — | UNKW | UNKW | — | |
| BCM | No indication | NG | UNKW | UNKW | — | UNKW | — | — | — | — | UNKW | |
| HVAC | No indication | — | UNKW | UNKW | — | — | UNKW | — | — | UNKW | — | |
| ALL MODE AWD/4WD | No indication | — | UNKW | UNKW | UNKW | — | — | UNKW | — | UNKW | — | |
| ABS | — | NG | UNKW | UNKW | UNKW | — | — | UNKW | UNKW | — | — | |
| IPDM E/R | No indication | — | UNKW | UNKW | — | — | UNKW | — | — | — | — | |

SKIB3336E

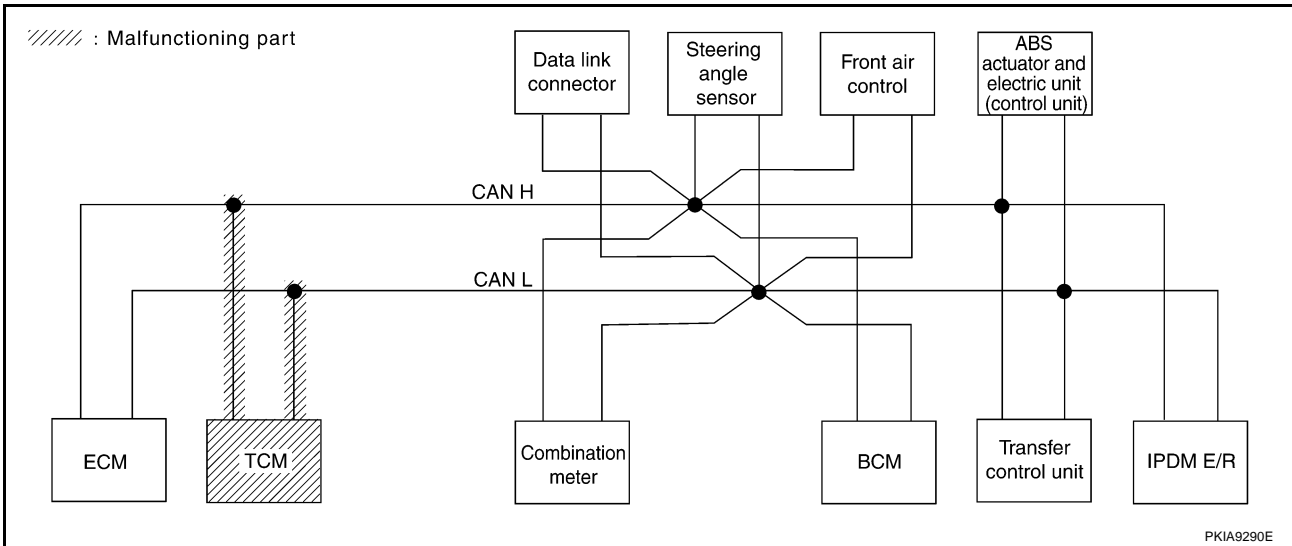

CAN SYSTEM (TYPE 4)


[CAN]

Case 5

Check combination meter circuit. Refer to [LAN-136, "Combination Meter Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|-----------|---------|-------|---------------|--------------|----------|--|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER/M&A | BCM/SEC | STRG | AWD/4WD /e4WD | VDC/TCS /ABS | IPDM E/R | |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN ✓ | UNKWN | — | UNKWN | UNKWN | UNKWN | |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN ✓ | — | — | UNKWN | UNKWN | — | |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN ✓ | — | — | — | — | UNKWN | |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | UNKWN | — | |
| ALL MODE AWD/4WD | No indication | — | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — | |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — | |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — | — | |

SKIB3337E

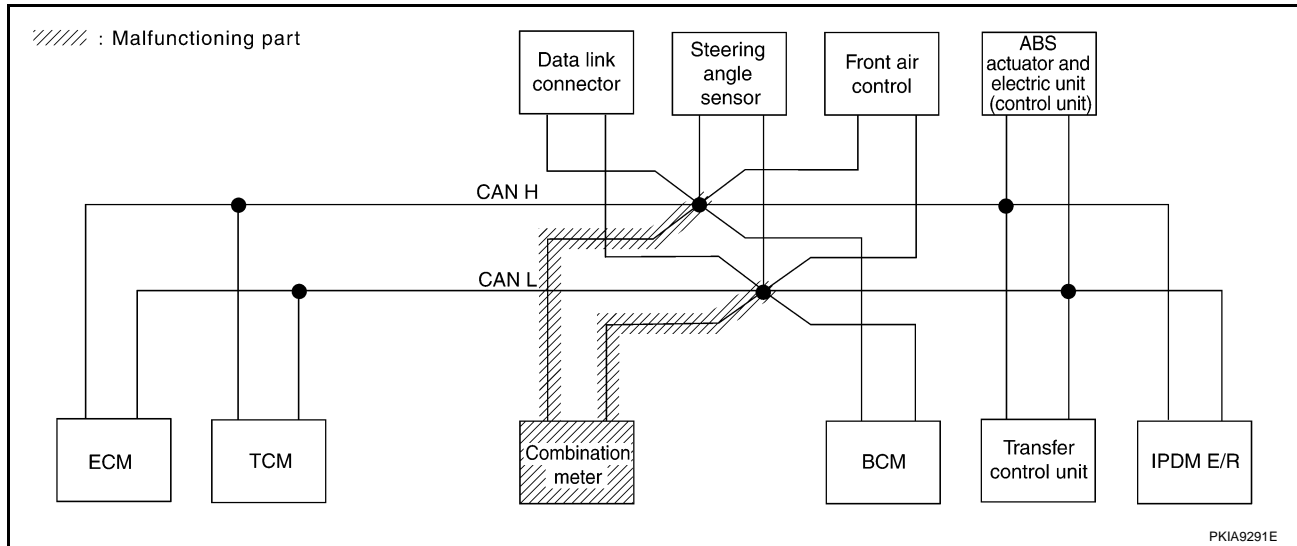

CAN SYSTEM (TYPE 4)


[CAN]

Case 6

Check BCM circuit. Refer to [LAN-137, "BCM Circuit Check"](#).

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|-----------------|-----------------------|--------------------|-------------------|-------|-----------|---------|-------|---------------|--------------|----------|--|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER/M&A | BCM/SEC | STRG | AWD/4WD /e4WD | VDC/TCS /ABS | IPDM E/R | |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | UNKWN | UNKWN | UNKWN | |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | UNKWN | — | |
| BCM | No indication ✓ | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | UNKWN | |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | UNKWN | — | |
| ALL MODE AWD/4WD | No indication | — | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — | |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — | |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — | — | |

SKIB3338E

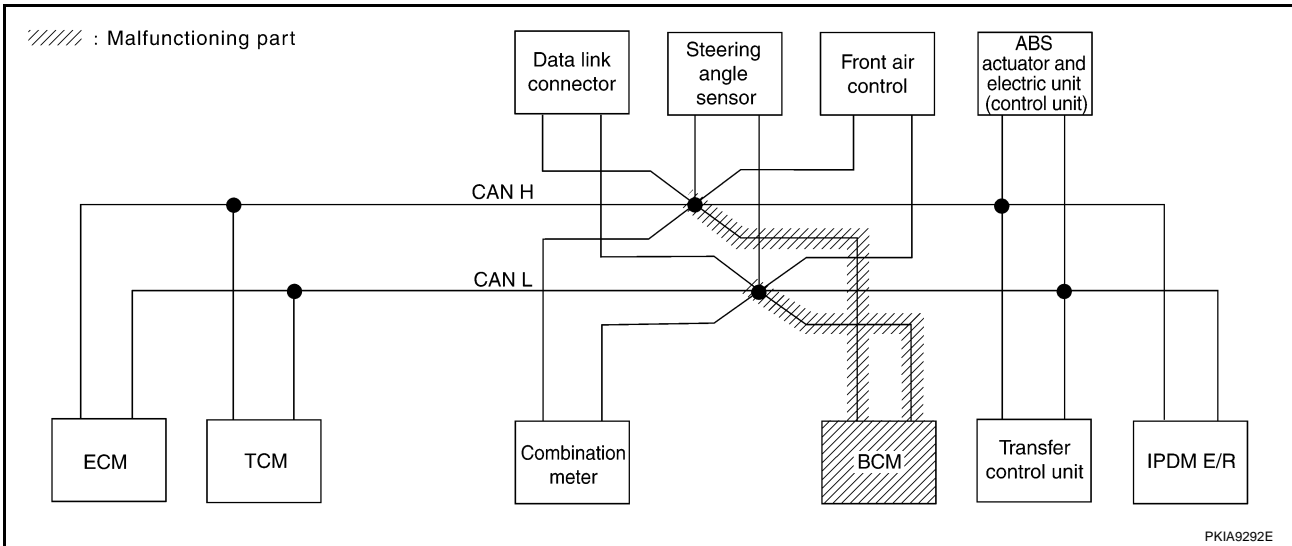

CAN SYSTEM (TYPE 4)


[CAN]

Case 7

Check data link connector circuit. Refer to [LAN-137, "Data Link Connector Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|-----------------|-----------------------|--------------------|-------------------|-------|-----------|---------|-------|--------------|-------------|----------|--|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER/M&A | BCM/SEC | STRG | AWD/4WD/e4WD | VDC/TCS/ABS | IPDM E/R | |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | UNKWN | UNKWN | UNKWN | |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | UNKWN | — | |
| BCM | No indication ✓ | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | UNKWN | |
| HVAC | No indication ✓ | — | UNKWN | UNKWN | — | — | UNKWN | — | — | UNKWN | — | |
| ALL MODE AWD/4WD | No indication ✓ | — | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — | |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — | |
| IPDM E/R | No indication ✓ | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — | — | |

SKIB3339E

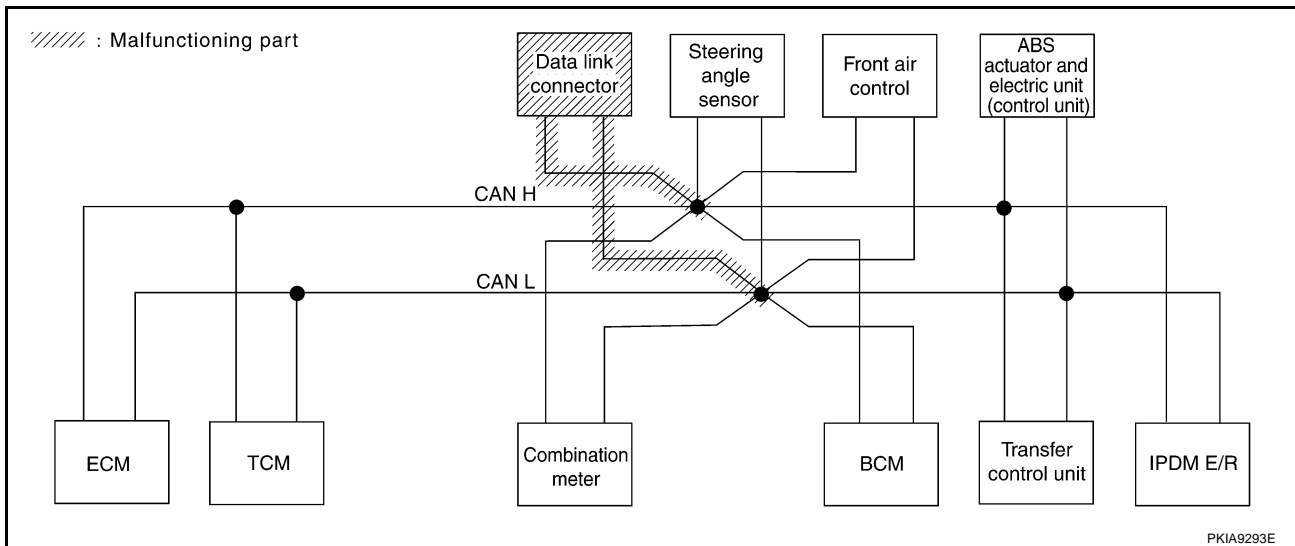

CAN SYSTEM (TYPE 4)


[CAN]

Case 8

Check steering angle sensor circuit. Refer to [LAN-138. "Steering Angle Sensor Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|-----------|---------|-------|---------------|--------------|----------|--|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER/M&A | BCM/SEC | STRG | AWD/4WD /e4WD | VDC/TCS /ABS | IPDM E/R | |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | UNKWN | UNKWN | UNKWN | |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | UNKWN | — | |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | UNKWN | |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | UNKWN | — | |
| ALL MODE AWD/4WD | No indication | — | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — | |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — | |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — | — | |

SKIB3340E

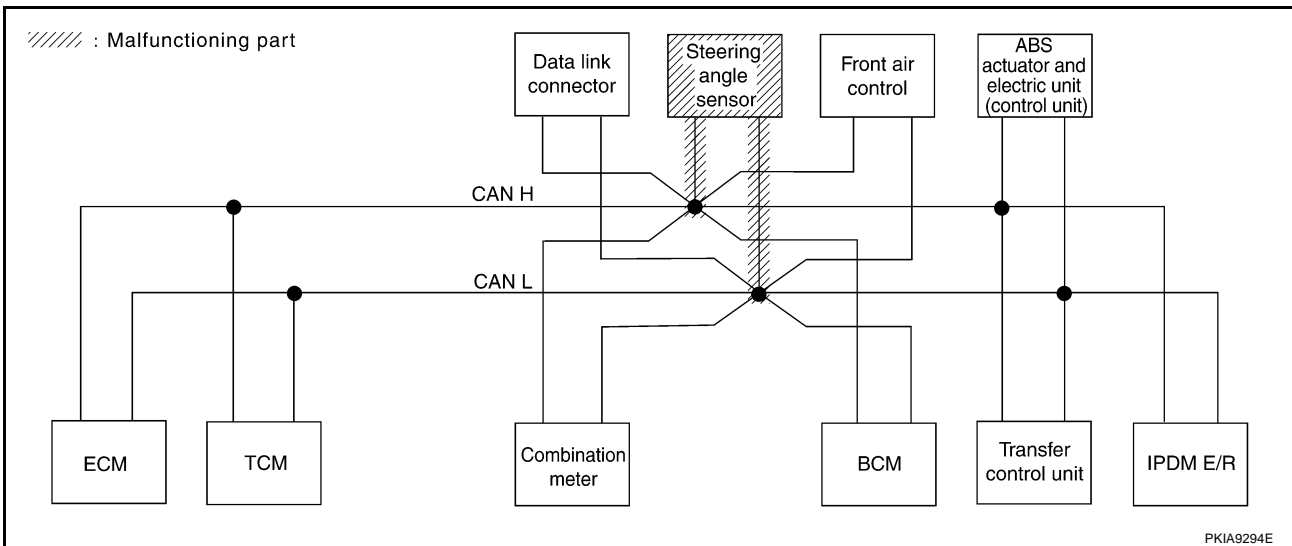

CAN SYSTEM (TYPE 4)


[CAN]

Case 9

Check front air control circuit. Refer to [LAN-138, "Front Air Control Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|-----------------|-----------------------|--------------------|-------------------|-------|-----------|---------|-------|---------------|--------------|----------|--|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER/M&A | BCM/SEC | STRG | AWD/4WD /e4WD | VDC/TCS /ABS | IPDM E/R | |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | UNKWN | UNKWN | UNKWN | |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | UNKWN | — | |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | UNKWN | |
| HVAC | No indication ✓ | — | UNKWN | UNKWN | — | — | UNKWN | — | — | UNKWN | — | |
| ALL MODE AWD/4WD | No indication | — | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — | |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — | |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — | — | |

SKIB3425E

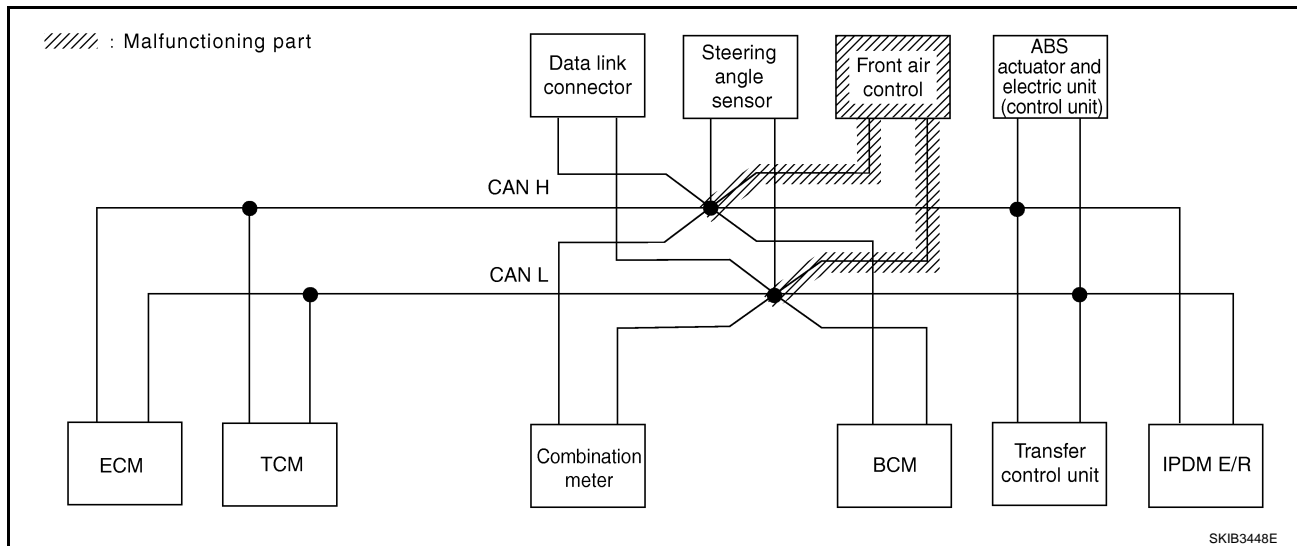

CAN SYSTEM (TYPE 4)


[CAN]

Case 10

Check transfer control unit circuit. Refer to [LAN-139, "Transfer Control Unit Circuit Check"](#).

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|-----------|---------|-------|---------------|--------------|----------|--|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER/M&A | BCM/SEC | STRG | AWD/4WD /e4WD | VDC/TCS /ABS | IPDM E/R | |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | UNKWN | UNKWN | UNKWN | |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | UNKWN | — | |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | UNKWN | |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | UNKWN | — | |
| ALL MODE AWD/4WD | No indication | — | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — | |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — | |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — | — | |

SKIB3341E

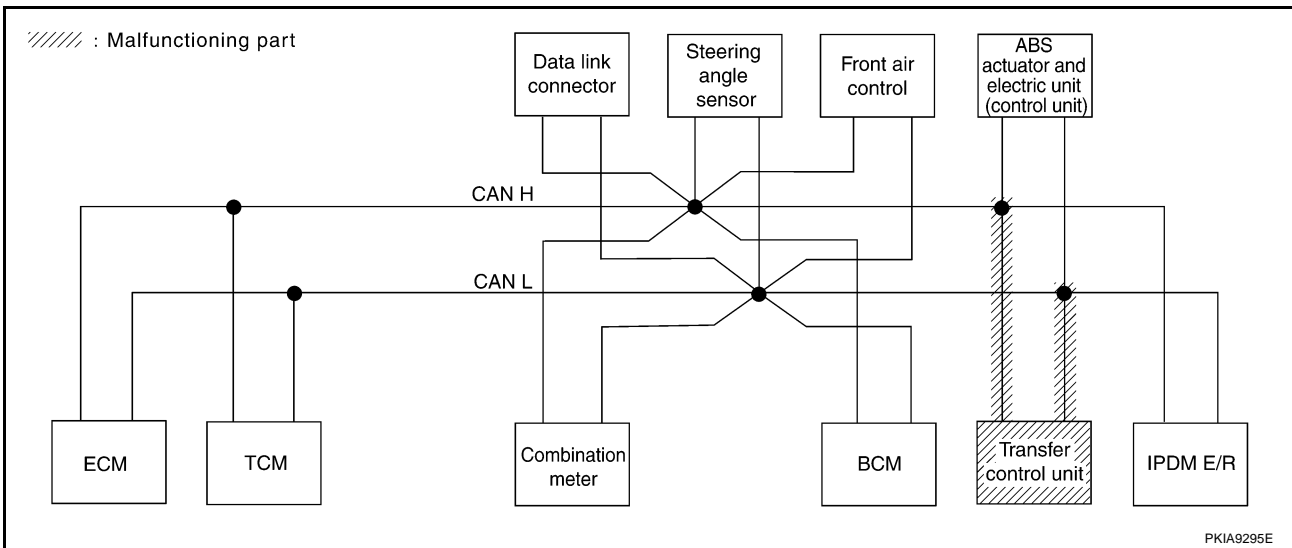

CAN SYSTEM (TYPE 4)


[CAN]

Case 11

Check ABS actuator and electric unit (control unit) circuit. Refer to [LAN-139, "ABS Actuator and Electric Unit \(Control Unit\) Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|-----------|---------|-------|---------------|--------------|----------|--|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER/M&A | BCM/SEC | STRG | AWD/4WD /e4WD | VDC/TCS /ABS | IPDM E/R | |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | UNKWN | UNKWN | UNKWN | |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | UNKWN | — | |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | UNKWN | |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | UNKWN | — | |
| ALL MODE AWD/4WD | No indication | — | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — | |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — | |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — | — | |

SKIB3342E

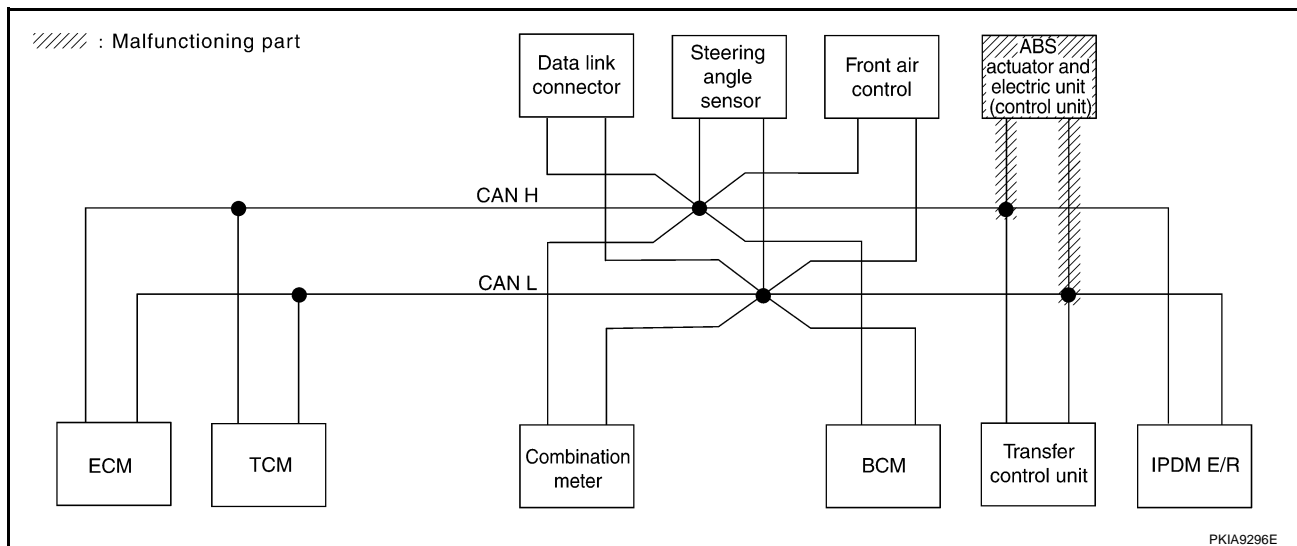

CAN SYSTEM (TYPE 4)


[CAN]

Case 12

Check IPDM E/R circuit. Refer to [LAN-140, "IPDM E/R Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | |
|----------------------|-----------------|-----------------------|--------------------|-------------------|-------|-----------|---------|-------|---------------|--------------|----------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | |
| | | | | ECM | TCM | METER/M&A | BCM/SEC | STRG | AWD/4WD /e4WD | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | UNKWN | UNKWN | UNKWN ✓ |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | UNKWN | — |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | UNKWN ✓ |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | UNKWN | — |
| ALL MODE AWD/4WD | No indication | — | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — |
| IPDM E/R | No indication ✓ | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — | — |

SKIB3343E

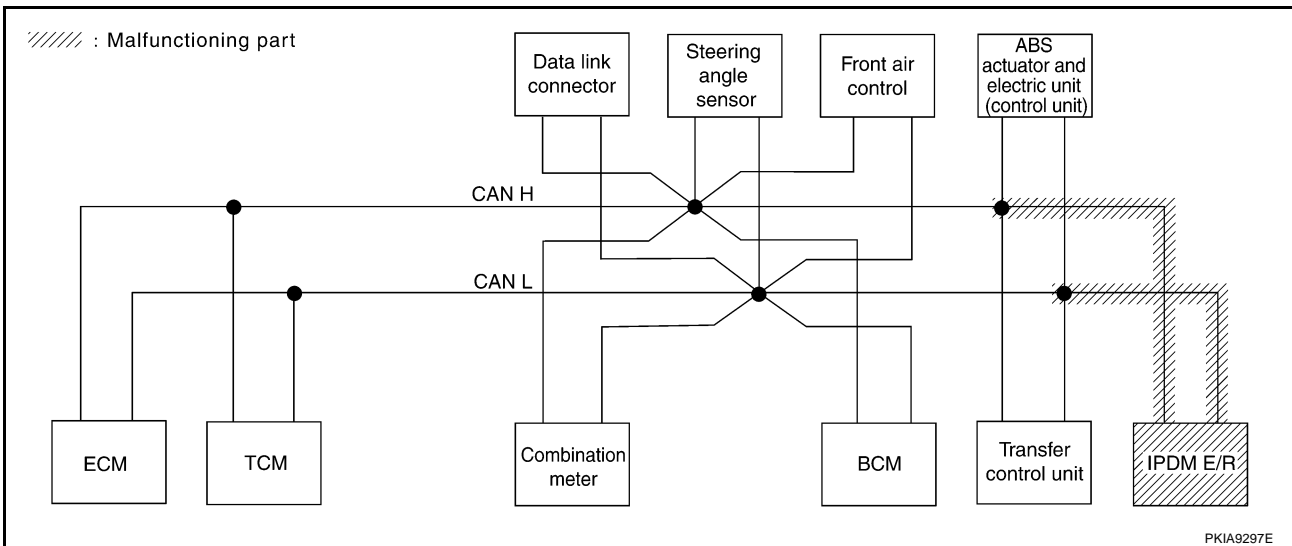

A
B
C
D
E
F
G
H
I
J
L
M

LAN

CAN SYSTEM (TYPE 4)

[CAN]

Case 13

Check CAN communication circuit. Refer to [LAN-141, "CAN Communication Circuit Check"](#).

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | |
| | | | | ECM | TCM | METER/M&A | BCM/SEC | STRG | AWD/4WD/e4WD | VDC/TCS/ABS | IPDM E/R |
| ENGINE | — | NG | UNKW N | — | UNKW N | UNKW N | UNKW N | — | UNKW N | UNKW N | UNKW N |
| A/T | — | NG | UNKW N | UNKW N | — | UNKW N | — | — | UNKW N | UNKW N | — |
| BCM | No indication | NG | UNKW N | UNKW N | — | UNKW N | — | — | — | — | UNKW N |
| HVAC | No indication | — | UNKW N | UNKW N | — | — | UNKW N | — | — | UNKW N | — |
| ALL MODE AWD/4WD | No indication | — | UNKW N | UNKW N | UNKW N | — | — | UNKW N | — | UNKW N | — |
| ABS | — | NG | UNKW N | UNKW N | UNKW N | — | — | UNKW N | UNKW N | — | — |
| IPDM E/R | No indication | — | UNKW N | UNKW N | — | — | UNKW N | — | — | — | — |

SKIB3344E

Case 14

Check IPDM E/R ignition relay circuit continuously sticks "OFF". Refer to [LAN-141, "IPDM E/R Ignition Relay Circuit Check"](#).

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | |
| | | | | ECM | TCM | METER/M&A | BCM/SEC | STRG | AWD/4WD/e4WD | VDC/TCS/ABS | IPDM E/R |
| ENGINE | — | NG | UNKW N | — | UNKW N | UNKW N | UNKW N | — | UNKW N | UNKW N | UNKW N |
| A/T | — | NG | UNKW N | UNKW N | — | UNKW N | — | — | UNKW N | UNKW N | — |
| BCM | No indication | NG | UNKW N | UNKW N | — | UNKW N | — | — | — | — | UNKW N |
| HVAC | No indication | — | UNKW N | UNKW N | — | — | UNKW N | — | — | UNKW N | — |
| ALL MODE AWD/4WD | No indication | — | UNKW N | UNKW N | UNKW N | — | — | UNKW N | — | UNKW N | — |
| ABS | — | NG | UNKW N | UNKW N | UNKW N | — | — | UNKW N | UNKW N | — | — |
| IPDM E/R | No indication | — | UNKW N | UNKW N | — | — | UNKW N | — | — | — | — |

SKIB3345E

Case 15

Check IPDM E/R ignition relay circuit continuously sticks "ON". Refer to [LAN-141, "IPDM E/R Ignition Relay Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|-----------|---------|-------|--------------|-------------|----------|--|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER/M&A | BCM/SEC | STRG | AWD/4WD/e4WD | VDC/TCS/ABS | IPDM E/R | |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | UNKWN | UNKWN | UNKWN | |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | UNKWN | — | |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | UNKWN | |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | UNKWN | — | |
| ALL MODE AWD/4WD | No indication | — | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — | |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — | |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — | — | |

SKIB3346E

Circuit Check Between TCM and Data Link Connector

UKS00190

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector F33
 - Harness connector E19
 - Harness connector E34
 - Harness connector B40
 - Harness connector B69
 - Harness connector M40

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect A/T assembly connector and harness connector F33.
2. Check continuity between A/T assembly harness connector F9 terminals 3 (L), 8 (P) and harness connector F33 terminals 12 (L), 11 (P).

3 (L) - 12 (L) : Continuity should exist.
8 (P) - 11 (P) : Continuity should exist.

OK or NG

- OK >> GO TO 3.
 NG >> Repair harness.

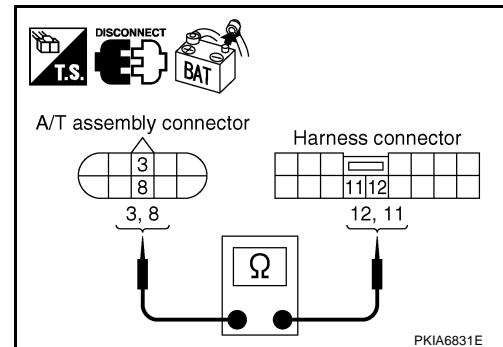


3. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect harness connector E34.
2. Check continuity between harness connector E19 terminals 12 (L), 11 (P) and harness connector E34 terminals 24 (L), 23 (P).

12 (L) - 24 (L) : Continuity should exist.
11 (P) - 23 (P) : Continuity should exist.

OK or NG

- OK >> GO TO 4.
 NG >> Repair harness.

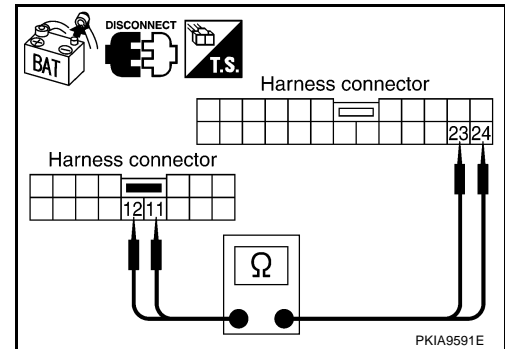


4. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect harness connector B69.
2. Check continuity between harness connector B40 terminals 24 (L), 23 (P) and harness connector B69 terminals 51J (L), 52J (P).

24 (L) - 51J (L) : Continuity should exist.
23 (P) - 52J (P) : Continuity should exist.

OK or NG

- OK >> GO TO 5.
 NG >> Repair harness.

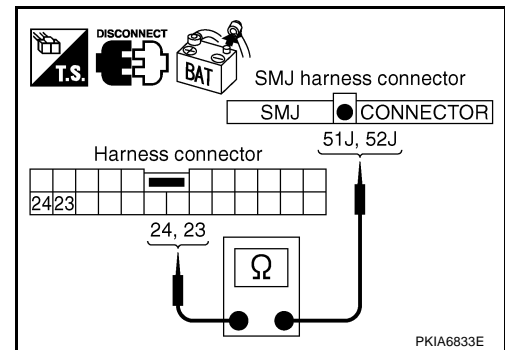


5. CHECK HARNESS FOR OPEN CIRCUIT

Check continuity between harness connector M40 terminals 51J (L), 52J (P) and data link connector M22 terminals 6 (L), 14 (P).

51J (L) - 6 (L) : Continuity should exist.
52J (P) - 14 (P) : Continuity should exist.

OK or NG

- OK >> Connect all the connectors and diagnose again. Refer to [LAN-116, "Work Flow"](#).
 NG >> Repair harness.

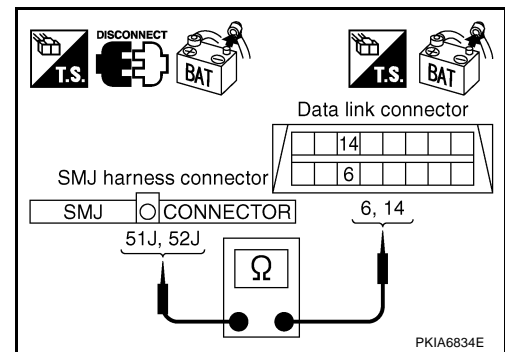

Circuit Check Between Data Link Connector and IPDM E/R

UKS00191

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M31
 - Harness connector E152

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect harness connector M31.
2. Check continuity between data link connector M22 terminals 6 (L), 14 (P) and harness connector M31 terminals 31G (L), 42G (P).


6 (L) - 31G (L) : Continuity should exist.

14 (P) - 42G (P) : Continuity should exist.

OK or NG

OK >> GO TO 3.

NG >> Repair harness.

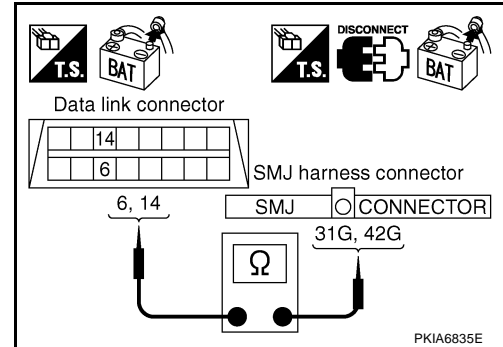

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check continuity between harness connector E152 terminals 31G (L), 42G (P) and IPDM E/R harness connector E122 terminals 39 (L), 40 (P).


31G (L) - 39 (L) : Continuity should exist.

42G (P) - 40 (P) : Continuity should exist.

OK or NG

OK >> Connect all the connectors and diagnose again. Refer to [LAN-116, "Work Flow"](#).

NG >> Repair harness.

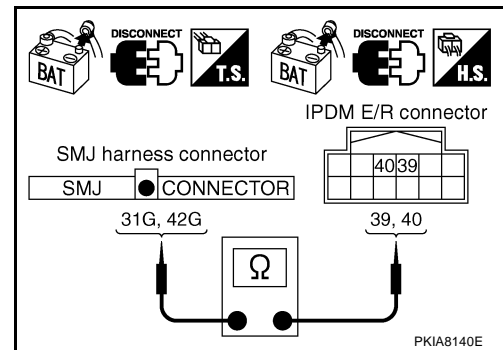

UKS00192

ECM Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (control module side and harness side).
 - ECM connector
 - Harness connector E19
 - Harness connector F33

OK or NG

OK >> GO TO 2.

NG >> Repair terminal or connector.

LAN


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect ECM connector.
2. Check resistance between ECM harness connector E16 terminals 94 (L) and 86 (P).

94 (L) - 86 (P) : Approx. 108 - 132 Ω

OK or NG

- OK >> Replace ECM.
 NG >> Repair harness between ECM and A/T assembly.

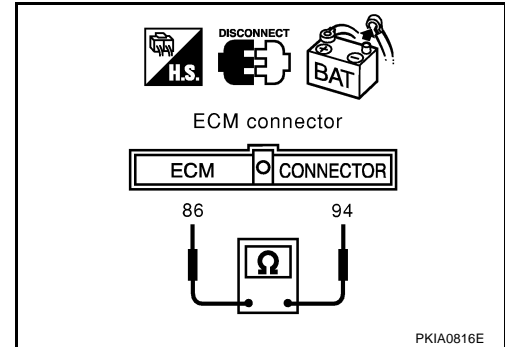

UKS00193

TCM Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of A/T assembly for damage, bend and loose connection (control module side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect A/T assembly connector.
2. Check resistance between A/T assembly harness connector F9 terminals 3 (L) and 8 (P).

3 (L) - 8 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace A/T assembly.
 NG >> Repair harness between A/T assembly and harness connector F33.

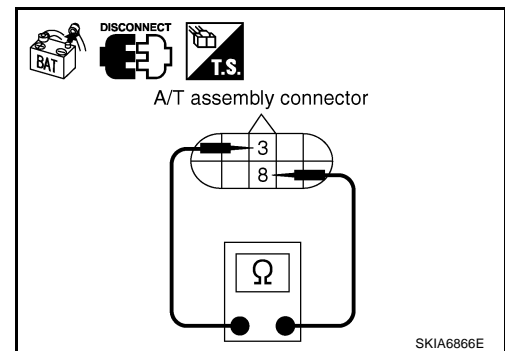

UKS00194

Combination Meter Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of combination meter for damage, bend and loose connection (meter side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect combination meter connector.
2. Check resistance between combination meter harness connector M24 terminals 11 (L) and 12 (P).

11 (L) - 12 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace combination meter.
 NG >> Repair harness between combination meter and data link connector.

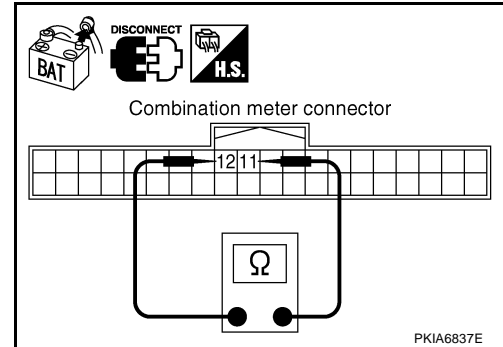

UKS00195

BCM Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of BCM for damage, bend and loose connection (control module side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect BCM connector.
2. Check resistance between BCM harness connector M18 terminals 39 (L) and 40 (P).

39 (L) - 40 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace BCM. Refer to [BCS-20, "Removal and Installation of BCM"](#) .
 NG >> Repair harness between BCM and data link connector.

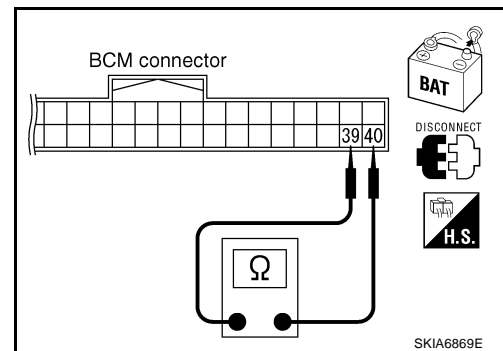

UKS00196

Data Link Connector Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check the terminals and connector of data link connector for damage, bend and loose connection (connector side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

Check resistance between data link connector M22 terminals 6 (L) and 14 (P).

6 (L) - 14 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Diagnose again. Refer to [LAN-116, "Work Flow"](#) .
 NG >> Repair harness between data link connector and combination meter.

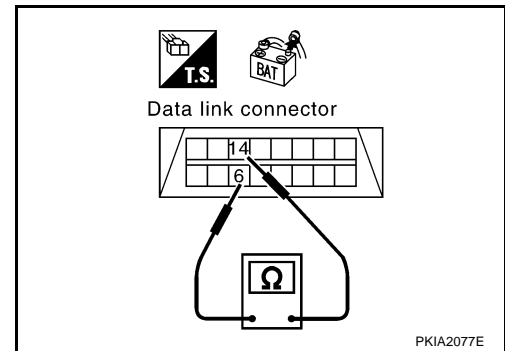

UKS00197

Steering Angle Sensor Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of steering angle sensor for damage, bend and loose connection (sensor side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect steering angle sensor connector.
2. Check resistance between steering angle sensor harness connector M47 terminals 3 (L) and 4 (P).

3 (L) - 4 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace steering angle sensor.
 NG >> Repair harness between steering angle sensor and data link connector.

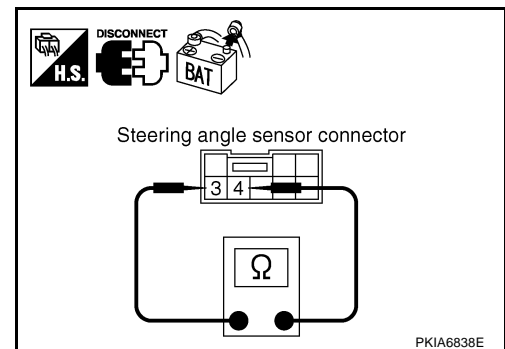

UKS003KX

Front Air Control Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of front air control for damage, bend and loose connection (unit side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect front air control connector.
2. Check resistance between front air control harness connector M50 terminals 34 (L) and 35 (P).

34 (L) - 35 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace front air control.
 NG >> Repair harness between front air control and data link connector.

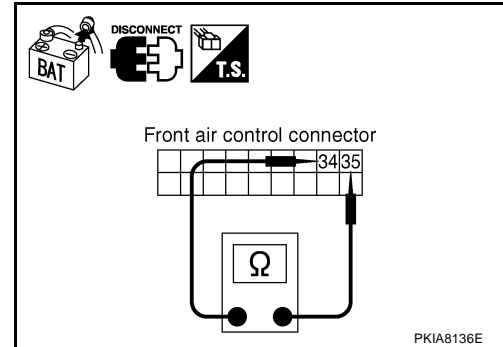

UKS00198

Transfer Control Unit Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of transfer control unit for damage, bend and loose connection (control unit side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect transfer control unit connector.
2. Check resistance between transfer control unit harness connector E142 terminals 7 (L) and 8 (P).

7 (L) - 8 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace transfer control unit.
 NG >> Repair harness between transfer control unit and harness connector E152.

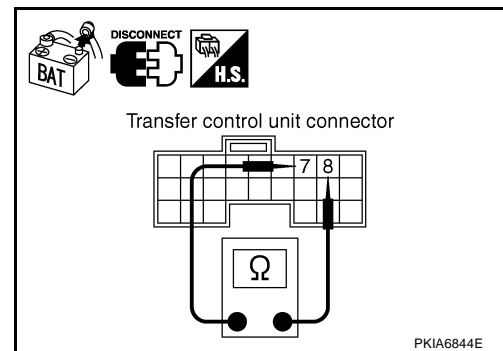

UKS00199

ABS Actuator and Electric Unit (Control Unit) Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of ABS actuator and electric unit (control unit) for damage, bend and loose connection (control unit side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT


1. Disconnect ABS actuator and electric unit (control unit) connector.
2. Check resistance between ABS actuator and electric unit (control unit) harness connector E125 terminals 11 (L) and 15 (P).

11 (L) - 15 (P)

: Approx. 54 - 66 Ω

OK or NG

- OK >> Replace ABS actuator and electric unit (control unit).
 NG >> Repair harness between ABS actuator and electric unit (control unit) and harness connector E152.

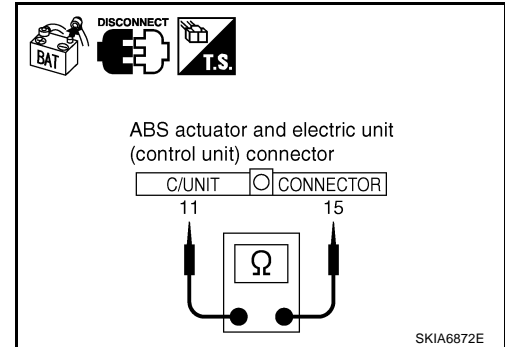

UKS0019A

IPDM E/R Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of IPDM E/R for damage, bend and loose connection (control module side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT


1. Disconnect IPDM E/R connector.
2. Check resistance between IPDM E/R harness connector E122 terminals 39 (L) and 40 (P).

39 (L) - 40 (P)

: Approx. 108 - 132 Ω

OK or NG

- OK >> Replace IPDM E/R.
 NG >> Repair harness between IPDM E/R and harness connector E152.

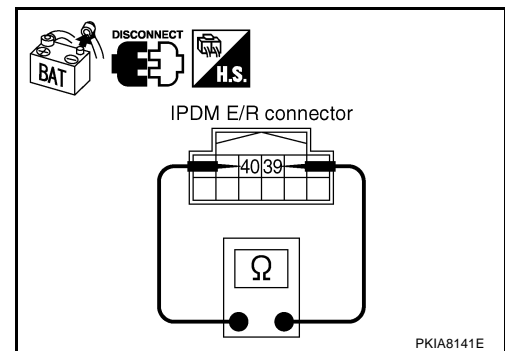

PKIA8141E

CAN Communication Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Disconnect the following module and control unit connectors and check terminals for deformation, disconnection, looseness or damage.
 - ECM
 - A/T assembly
 - Combination meter
 - BCM
 - Steering angle sensor
 - Front air control
 - Transfer control unit
 - ABS actuator and electric unit (control unit)
 - IPDM E/R

OK or NG

- OK >> GO TO 2.
 NG >> Repair or replace as necessary.


2. CHECK HARNESS FOR SHORT CIRCUIT

With all module and control unit connectors disconnected, check continuity between data link connector M22 terminals 6 (L) and 14 (P).

6 (L) - 14 (P) : Continuity should not exist.

OK or NG

- OK >> GO TO 3.
 NG >> Repair harness.

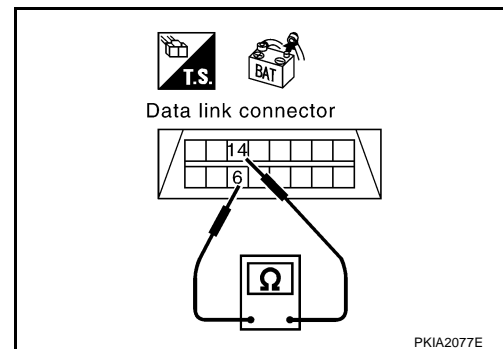
**3. CHECK HARNESS FOR SHORT CIRCUIT**

Check continuity between data link connector M22 terminals 6 (L), 14 (P) and ground.

6 (L) - Ground : Continuity should not exist.
14 (P) - Ground : Continuity should not exist.

OK or NG

- OK >> Check ECM and IPDM E/R. Refer to [LAN-142, "ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION"](#).
 NG >> Repair harness.

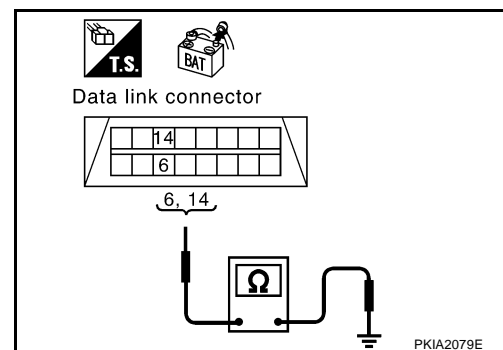**IPDM E/R Ignition Relay Circuit Check**


Check the following. If no malfunction is found, replace the IPDM E/R.

- IPDM E/R power supply circuit. Refer to [PG-26, "IPDM E/R Power/Ground Circuit Inspection"](#).
- Ignition power supply circuit. Refer to [PG-13, "IGNITION POWER SUPPLY — IGNITION SW. IN ON AND/OR START"](#).

Component Inspection**ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION**

- Remove ECM and IPDM E/R from vehicle.
- Check resistance between ECM terminals 94 and 86.
- Check resistance between IPDM E/R terminals 39 and 40.

| Unit | Terminal | Resistance value (Ω) (Approx.) |
|----------|----------|--|
| ECM | 94 - 86 | 108 - 132 |
| IPDM E/R | 39 - 40 | |

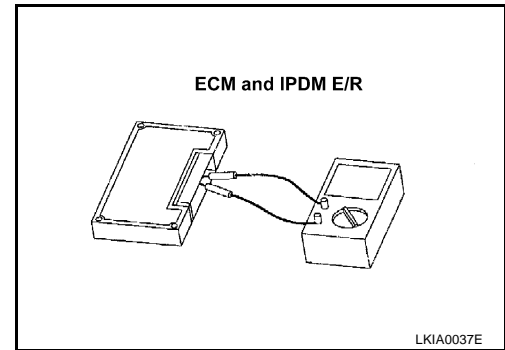

CAN SYSTEM (TYPE 5)

PFP:23710


System Description

UKS000QB

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

Component Parts and Harness Connector Location

UKS000QC

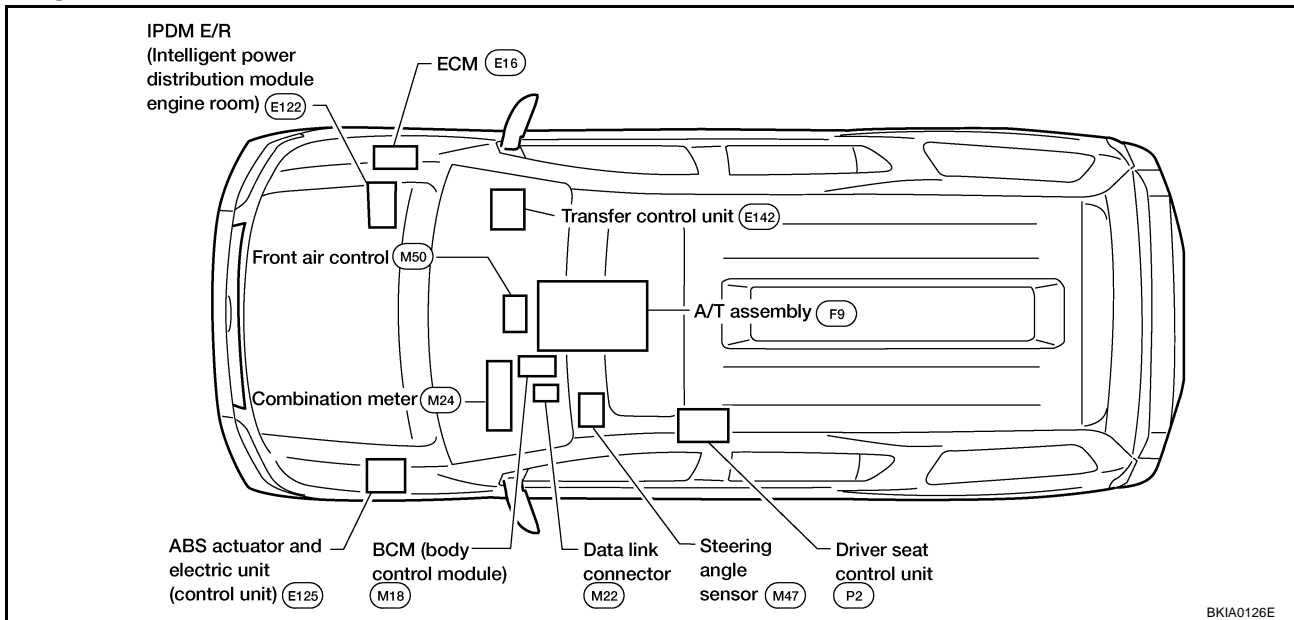

A
B
C
D
E
F
G
H
I
J
L
M


LAN

CAN SYSTEM (TYPE 5)

[CAN]

Schematic

UKS000QD

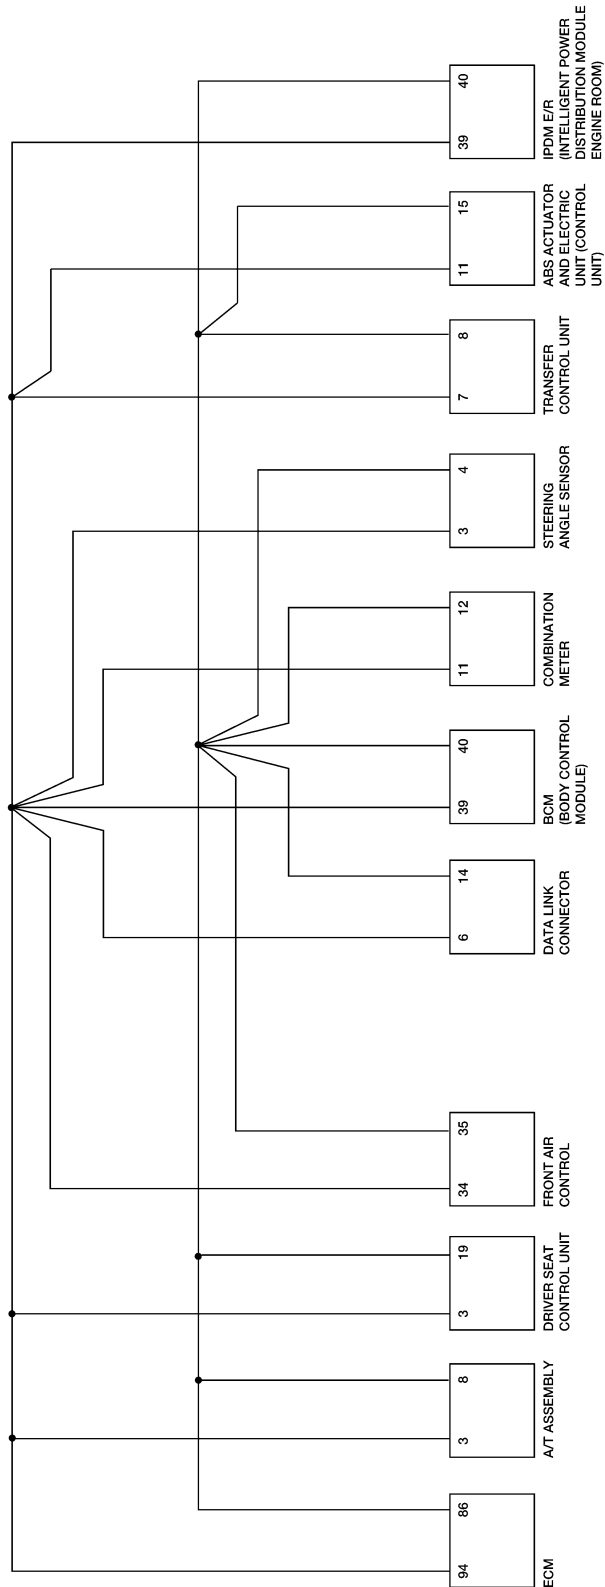

BKWA0190E

CAN SYSTEM (TYPE 5)


[CAN]

Wiring Diagram - CAN -


UKS0000E

LAN-CAN-13

— : DATA LINE

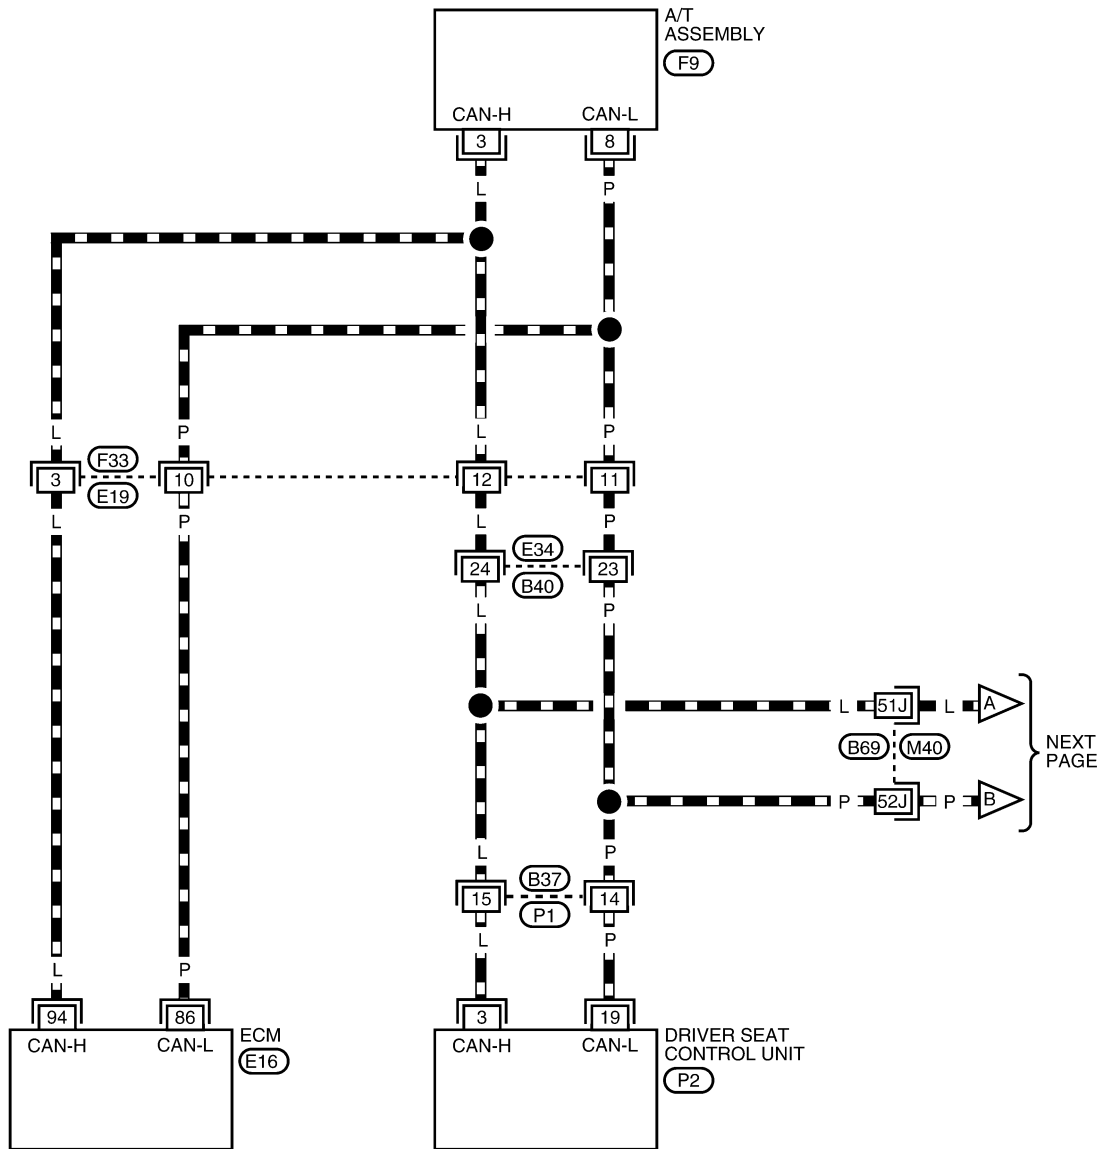

A
B
C
D
E
F
G
H
I
J
LAN
L
M

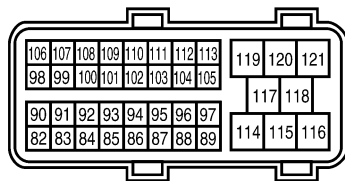

E16
B




E34
W


REFER TO THE FOLLOWING.
M40 - SUPER MULTIPLE JUNCTION (SMJ)




F9
G



F33
W



B37
W



P2
W*







*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

BKWA0685E

CAN SYSTEM (TYPE 5)

[CAN]

LAN-CAN-14

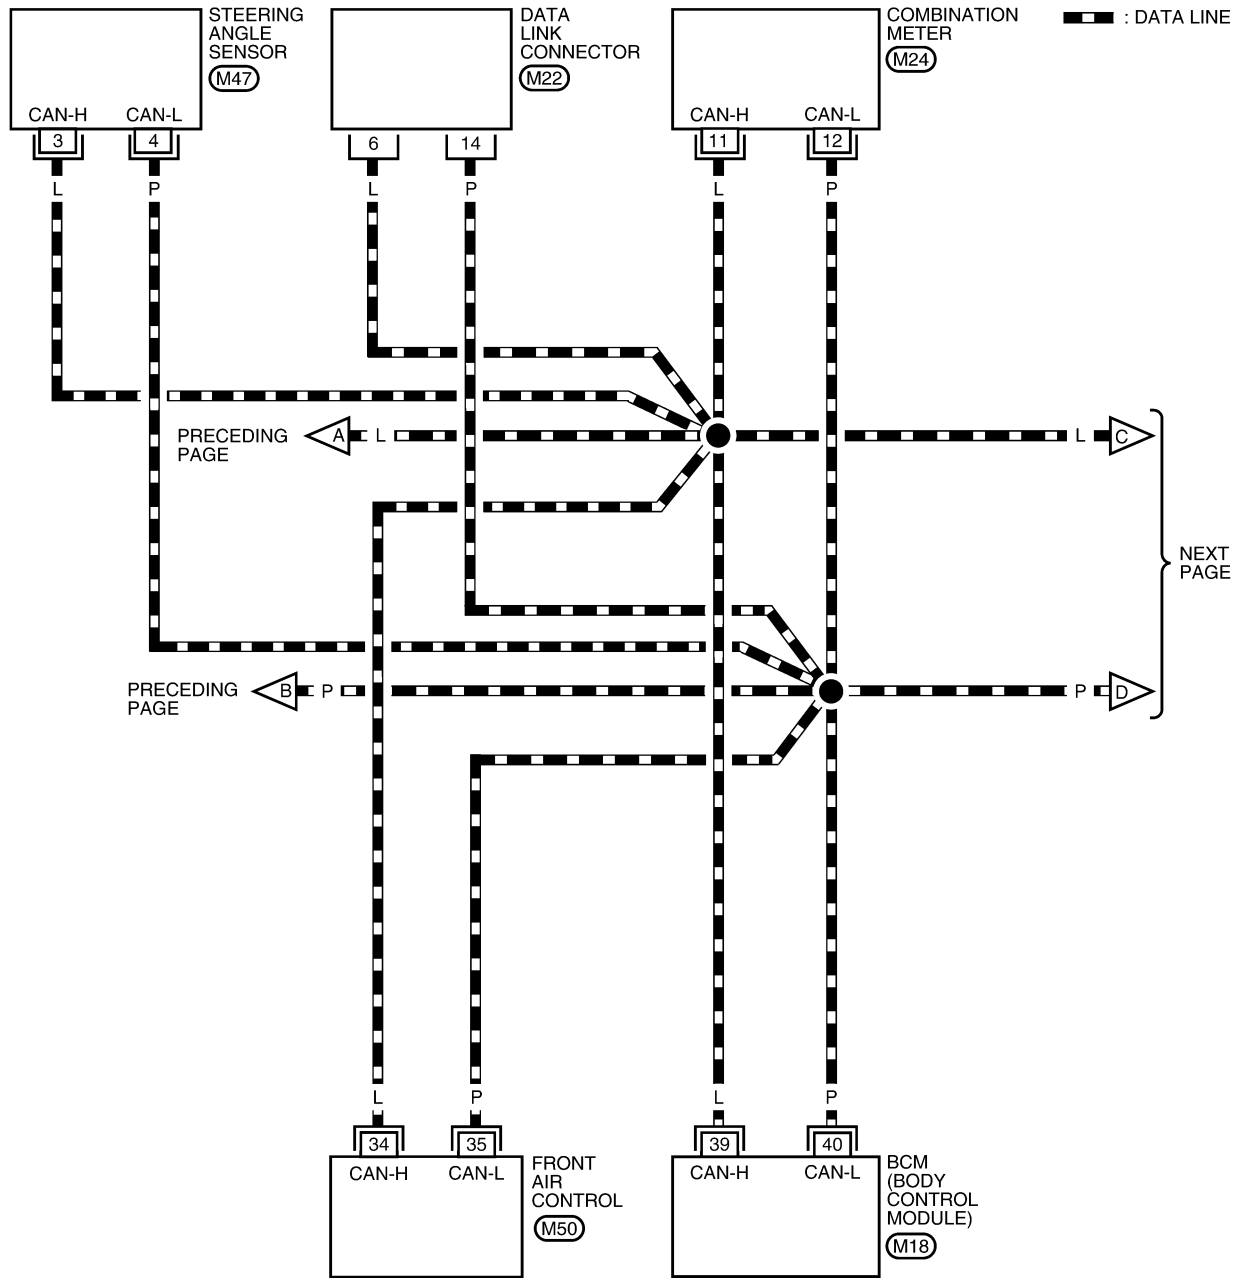


BKWA0420E

CAN SYSTEM (TYPE 5)




[CAN]

LAN-CAN-15

▬ : DATA LINE

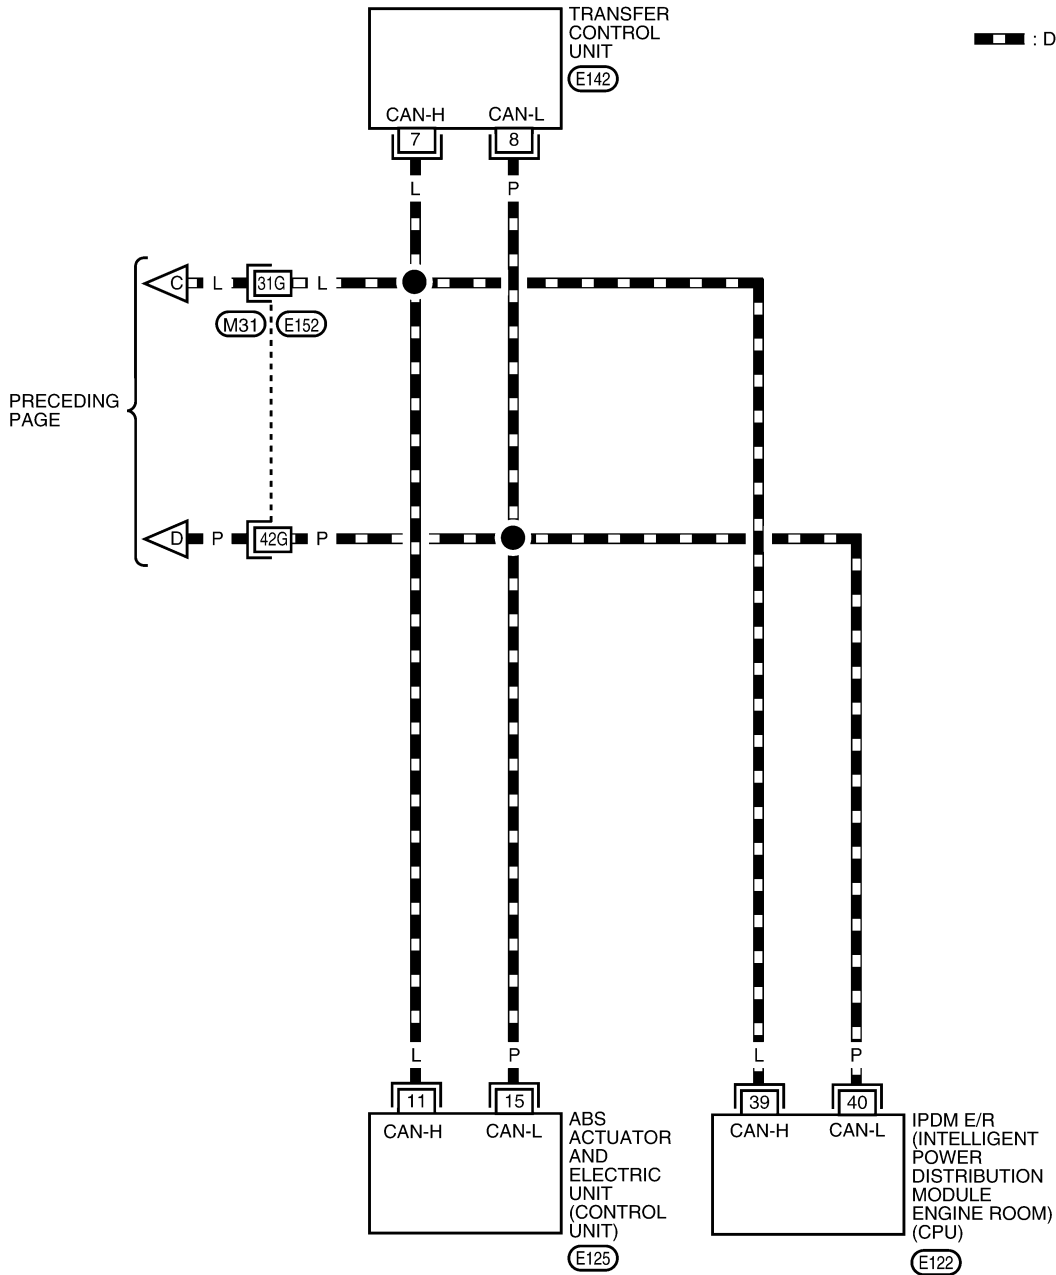

A
B
C
D
E
F
G
H
I
J
LAN
L
M

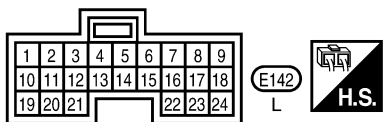

REFER TO THE FOLLOWING.
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

BKWA0421E


CAN SYSTEM (TYPE 5)

[CAN]


UKS0019E

Work Flow


- When there are no indications of "AUTO DRIVE POS.", "BCM", "HVAC", "ALL MODE AWD/4WD" or "IPDM E/R" on "SELECT SYSTEM" display of CONSULT-II, print the "SELECT SYSTEM".

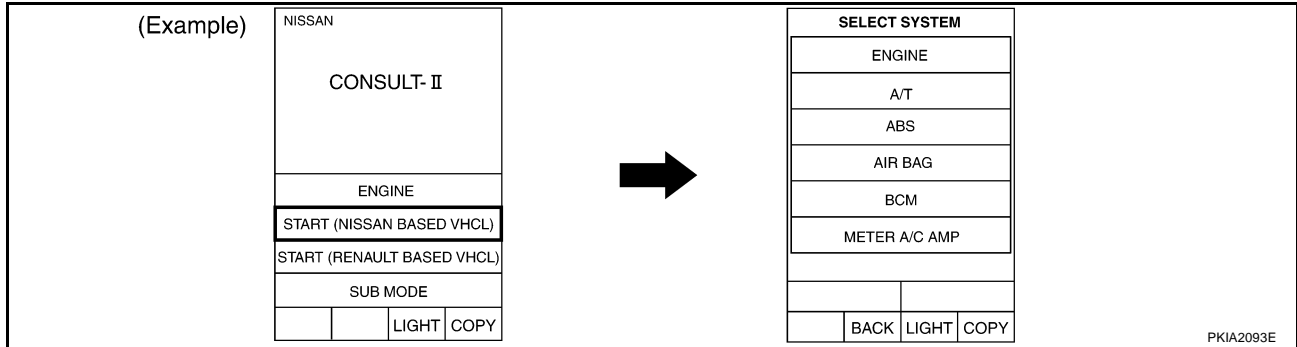

- Print all the data of "SELF-DIAG RESULTS" for "ENGINE", "A/T", "AUTO DRIVE POS.", "BCM", "HVAC", "ALL MODE AWD/4WD", "ABS" and "IPDM E/R" displayed on CONSULT-II.

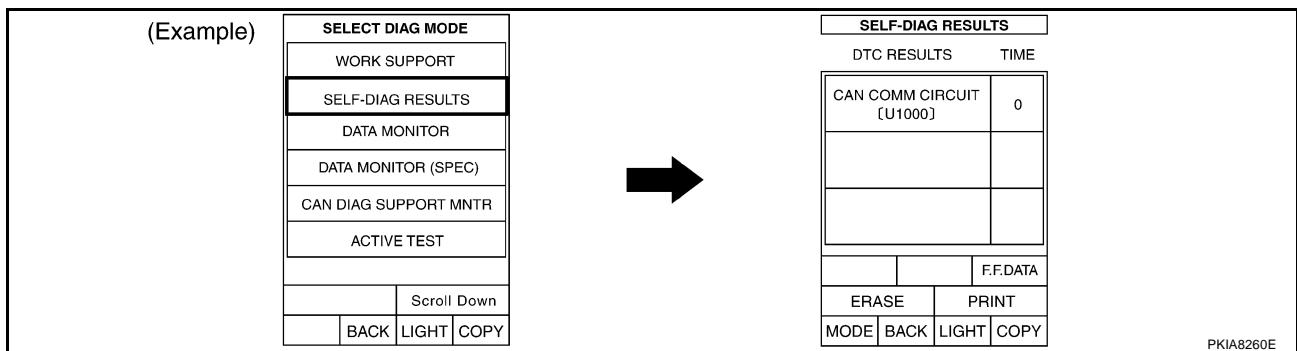


- Print all the data of "CAN DIAG SUPPORT MNTR" for "ENGINE", "A/T", "AUTO DRIVE POS.", "BCM", "HVAC", "ALL MODE AWD/4WD", "ABS" and "IPDM E/R" displayed on CONSULT-II.

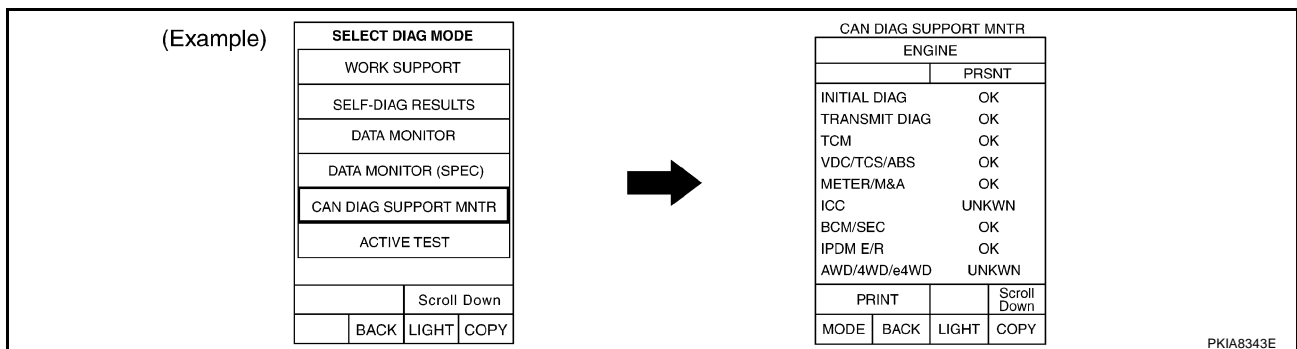

- Attach the printed sheet of "SELECT SYSTEM", "SELF-DIAG RESULTS" and "CAN DIAG SUPPORT MNTR" onto the check sheet. Refer to [LAN-150, "CHECK SHEET"](#) .
- Based on the indications of "SELECT SYSTEM" and the results of "CAN DIAG SUPPORT MNTR", puts a check mark onto the items with "No indication", "NG", or "UNKWN" in the check sheet table. Refer to [LAN-150, "CHECK SHEET"](#) .

CAUTION:

"ALL MODE AWD/4WD" puts a check mark on the check sheet when "Present" is "UNKWN" and "Past" is "0".

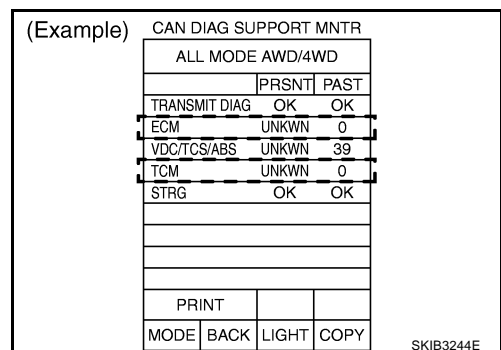

NOTE:

- If “NG” is displayed on “INITIAL DIAG (Initial diagnosis)” as “CAN DIAG SUPPORT MNTR” for the diagnosed control unit, replace the control unit.
 - The “CAN DIAG SUPPORT MNTR” items, which are not in check sheet table, are not related to diagnostic procedure on service manual.
So it is not necessary to check the status of the “CAN DIAG SUPPORT MNTR” items not in check sheet table.
6. According to the check sheet results (example), start inspection. Refer to [LAN-152, "CHECK SHEET RESULTS \(EXAMPLE\)"](#) .

A
B
C
D
E
F
G
H
I
J
L
M

LAN

CAN SYSTEM (TYPE 5)

[CAN]

CHECK SHEET

NOTE:

If "NG" is displayed on "INITIAL DIAG (Initial diagnosis)" for the diagnosed control unit, replace the control unit.

Check sheet table

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|-----------|---------|-------|--------------|-------------|----------|--|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER/M&A | BCM/SEC | STRG | AWD/4WD/e4WD | VDC/TCS/ABS | IPDM E/R | |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | UNKWN | UNKWN | UNKWN | |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | UNKWN | — | |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | — | — | — | |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | UNKWN | |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | UNKWN | — | |
| ALL MODE AWD/4WD | No indication | — | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — | |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — | |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — | — | |

Symptoms :

Attach copy of
SELECT SYSTEM

Attach copy of
SELECT SYSTEM

CAN SYSTEM (TYPE 5)

[CAN]

A
B
C
D
E
F
G
H
I
J
L
M

| | | | |
|--|--|---|--|
| Attach copy of ENGINE SELF-DIAG RESULTS | Attach copy of A/T SELF-DIAG RESULTS | Attach copy of AUTO DRIVE POS. SELF-DIAG RESULTS | Attach copy of BCM SELF-DIAG RESULTS |
| Attach copy of HVAC SELF-DIAG RESULTS | Attach copy of ALL MODE AWD/4WD SELF-DIAG RESULTS | Attach copy of ABS SELF-DIAG RESULTS | Attach copy of IPDM E/R SELF-DIAG RESULTS |
| Attach copy of ENGINE CAN DIAG SUPPORT MNTR | Attach copy of A/T CAN DIAG SUPPORT MNTR | Attach copy of AUTO DRIVE POS. CAN DIAG SUPPORT MNTR | Attach copy of BCM CAN DIAG SUPPORT MNTR |
| Attach copy of HVAC CAN DIAG SUPPORT MNTR | Attach copy of ALL MODE AWD/4WD CAN DIAG SUPPORT MNTR | Attach copy of ABS CAN DIAG SUPPORT MNTR | Attach copy of IPDM E/R CAN DIAG SUPPORT MNTR |

LAN

PKIB6773E

CHECK SHEET RESULTS (EXAMPLE)

NOTE:


If "NG" is displayed on "INITIAL DIAG (Initial diagnosis)" for the diagnosed control unit, replace the control unit.

Case 1

Check harness between TCM and driver seat control unit. Refer to [LAN-167, "Circuit Check Between TCM and Driver Seat Control Unit"](#).

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|---------|-----------|---------|-------|---------------|--------------|----------|--|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER/M&A | BCM/SEC | STRG | AWD/4WD /e4WD | VDC/TCS /ABS | IPDM E/R | |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN ✓ | UNKWN ✓ | — | UNKWN ✓ | UNKWN ✓ | UNKWN ✓ | |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN ✓ | — | — | UNKWN ✓ | UNKWN ✓ | — | |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN ✓ | UNKWN | UNKWN | — | — | — | — | |
| BCM | No indication | NG | UNKWN | UNKWN ✓ | — | UNKWN | — | — | — | — | UNKWN | |
| HVAC | No indication | — | UNKWN | UNKWN ✓ | — | — | UNKWN | — | — | UNKWN | — | |
| ALL MODE AWD/4WD | No indication | — | UNKWN | UNKWN ✓ | UNKWN ✓ | — | — | UNKWN | — | UNKWN | — | |
| ABS | — | NG | UNKWN | UNKWN ✓ | UNKWN ✓ | — | — | UNKWN | UNKWN | — | — | |
| IPDM E/R | No indication | — | UNKWN | UNKWN ✓ | — | — | UNKWN | — | — | — | — | |

SKIB3348E

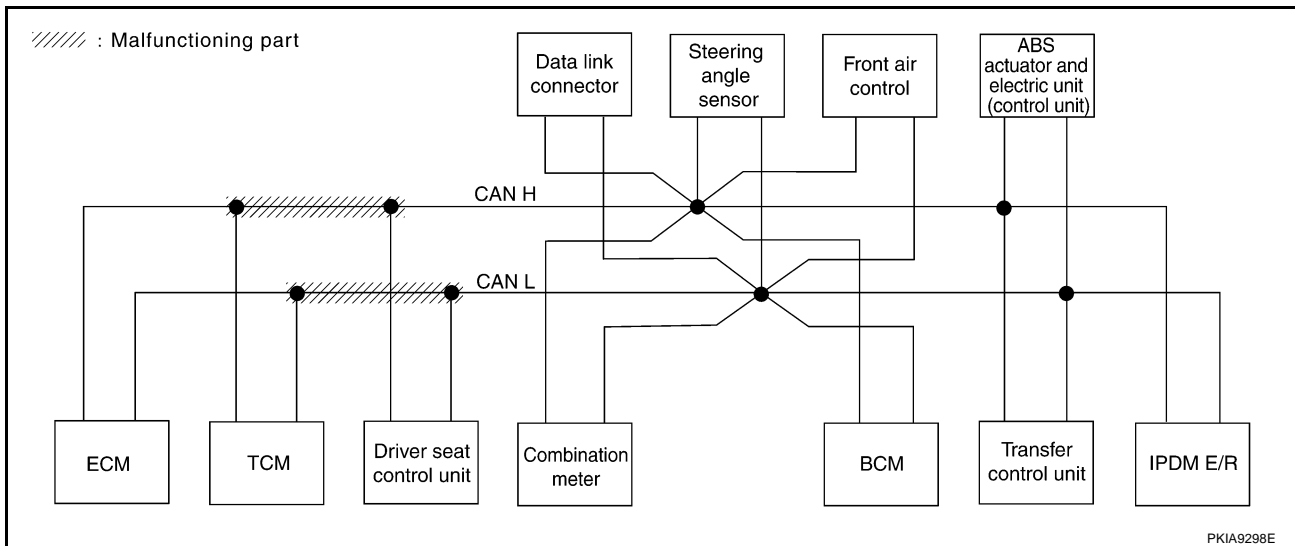

CAN SYSTEM (TYPE 5)


[CAN]

Case 2

Check harness between driver seat control unit and data link connector. Refer to [LAN-168, "Circuit Check Between Driver Seat Control Unit and Data Link Connector"](#).

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|-----------------|-----------------------|--------------------|-------------------|------|-----------|---------|------|--------------|-------------|----------|--|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER/M&A | BCM/SEC | STRG | AWD/4WD/e4WD | VDC/TCS/ABS | IPDM E/R | |
| ENGINE | — | NG | UNKW | — | UNKW | UNKW | UNKW | — | UNKW | UNKW | UNKW | |
| A/T | — | NG | UNKW | UNKW | — | UNKW | — | — | UNKW | UNKW | — | |
| AUTO DRIVE POS. | No indication ✓ | NG | UNKW | — | UNKW | UNKW | UNKW | — | — | — | — | |
| BCM | No indication | NG | UNKW | UNKW | — | UNKW | — | — | — | — | UNKW | |
| HVAC | No indication | — | UNKW | UNKW | — | — | UNKW | — | — | UNKW | — | |
| ALL MODE AWD/4WD | No indication | — | UNKW | UNKW | UNKW | — | — | UNKW | — | UNKW | — | |
| ABS | — | NG | UNKW | UNKW | UNKW | — | — | UNKW | UNKW | — | — | |
| IPDM E/R | No indication | — | UNKW | UNKW | — | — | UNKW | — | — | — | — | |

SKIB3349E

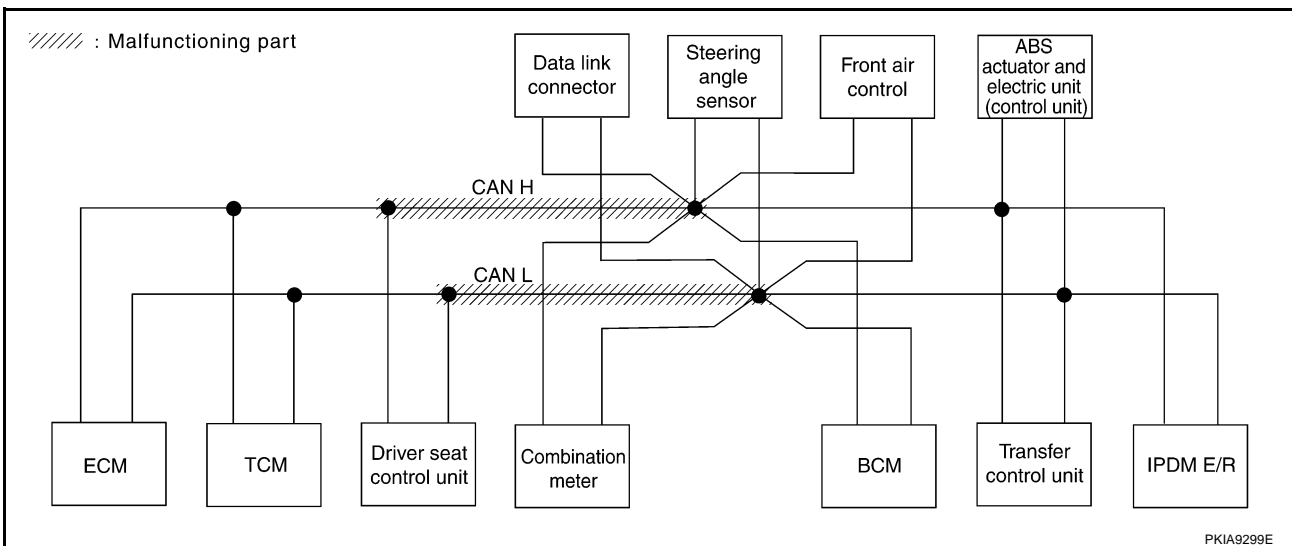

CAN SYSTEM (TYPE 5)


[CAN]

Case 3

Check harness between data link connector and IPDM E/R. Refer to [LAN-169, "Circuit Check Between Data Link Connector and IPDM E/R"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|-----------|---------|-------|--------------|-------------|----------|--|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER/M&A | BCM/SEC | STRG | AWD/4WD/e4WD | VDC/TCS/ABS | IPDM E/R | |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | UNKWN | UNKWN | UNKWN | |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | UNKWN | — | |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | — | — | — | |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | UNKWN | |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | UNKWN | — | |
| ALL MODE AWD/4WD | No indication | — | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — | |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — | |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — | — | |

SKIB3350E

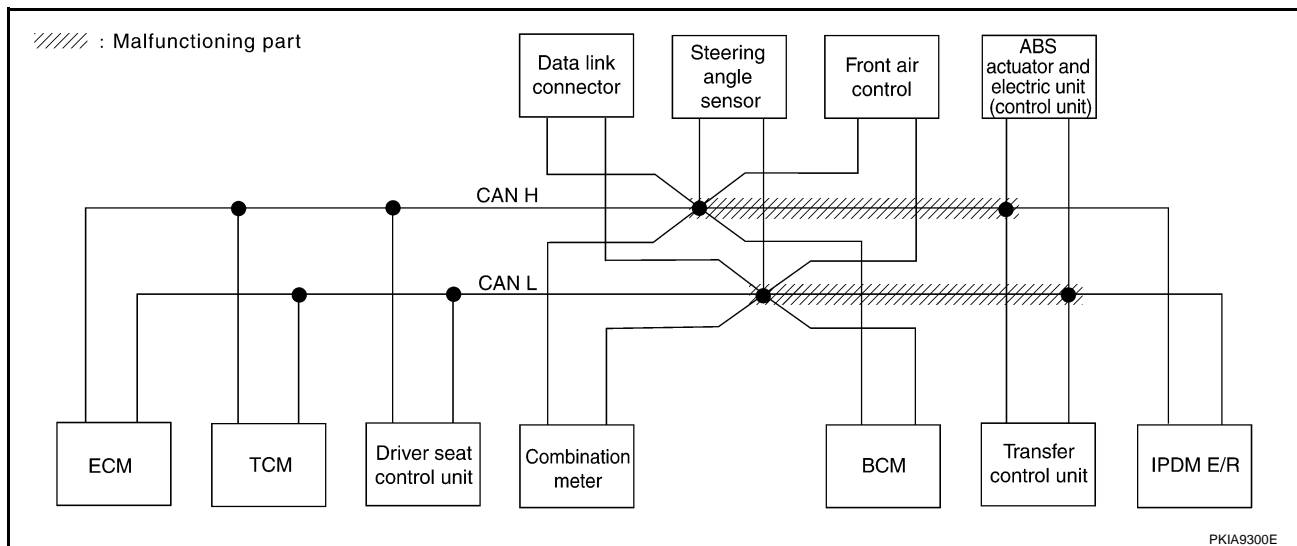

CAN SYSTEM (TYPE 5)


[CAN]

Case 4

Check ECM circuit. Refer to [LAN-170, "ECM Circuit Check"](#).

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|--|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER/M&A | BCM/SEC | STRG | AWD/4WD/e4WD | VDC/TCS/ABS | IPDM E/R | |
| ENGINE | — | NG | UNKW N | — | UNKW N | UNKW N | UNKW N | — | UNKW N | UNKW N | UNKW N | |
| A/T | — | NG | UNKW N | UNKW N | — | UNKW N | — | — | UNKW N | UNKW N | — | |
| AUTO DRIVE POS. | No indication | NG | UNKW N | — | UNKW N | UNKW N | UNKW N | — | — | — | — | |
| BCM | No indication | NG | UNKW N | UNKW N | — | UNKW N | — | — | — | — | UNKW N | |
| HVAC | No indication | — | UNKW N | UNKW N | — | — | UNKW N | — | — | UNKW N | — | |
| ALL MODE AWD/4WD | No indication | — | UNKW N | UNKW N | UNKW N | — | — | UNKW N | — | UNKW N | — | |
| ABS | — | NG | UNKW N | UNKW N | UNKW N | — | — | UNKW N | UNKW N | — | — | |
| IPDM E/R | No indication | — | UNKW N | UNKW N | — | — | UNKW N | — | — | — | — | |

SKIB3351E

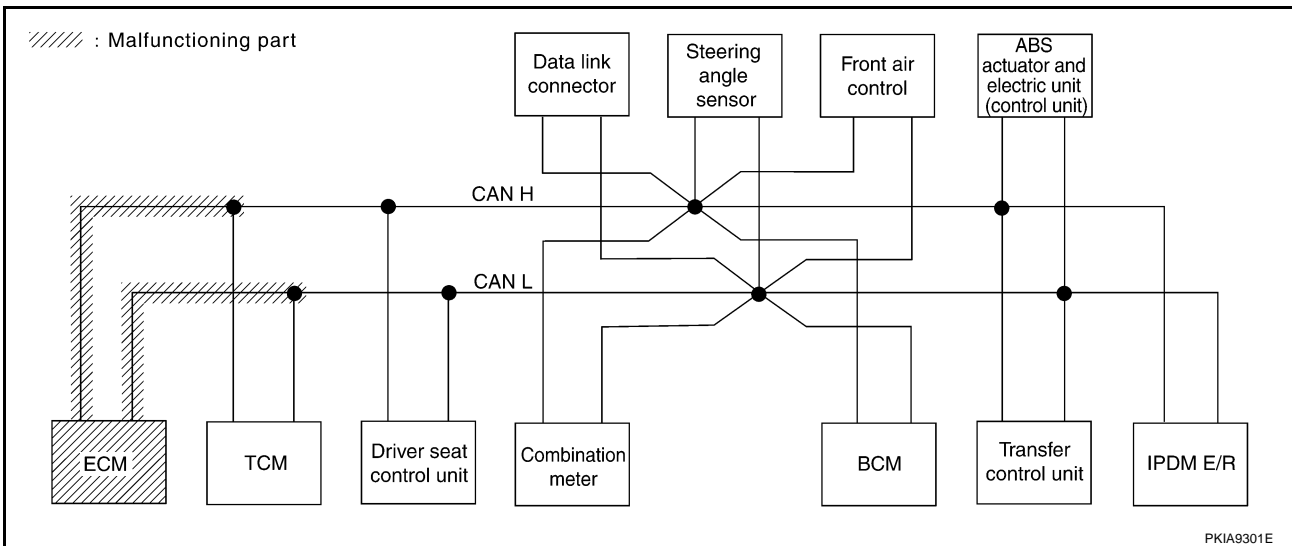

CAN SYSTEM (TYPE 5)


[CAN]

Case 5

Check TCM circuit. Refer to [LAN-170, "TCM Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|---------|-----------|---------|-------|---------------|--------------|----------|--|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER/M&A | BCM/SEC | STRG | AWD/4WD /e4WD | VDC/TCS /ABS | IPDM E/R | |
| ENGINE | — | NG | UNKWN | — | UNKWN ✓ | UNKWN | UNKWN | — | UNKWN | UNKWN | UNKWN | |
| A/T | — | NG | UNKWN | UNKWN ✓ | — | UNKWN ✓ | — | — | UNKWN ✓ | UNKWN ✓ | — | |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN ✓ | UNKWN | UNKWN | — | — | — | — | |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | UNKWN | |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | UNKWN | — | |
| ALL MODE AWD/4WD | No indication | — | UNKWN | UNKWN | UNKWN ✓ | — | — | UNKWN | — | UNKWN | — | |
| ABS | — | NG | UNKWN | UNKWN | UNKWN ✓ | — | — | UNKWN | UNKWN | — | — | |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — | — | |

SKIB3352E

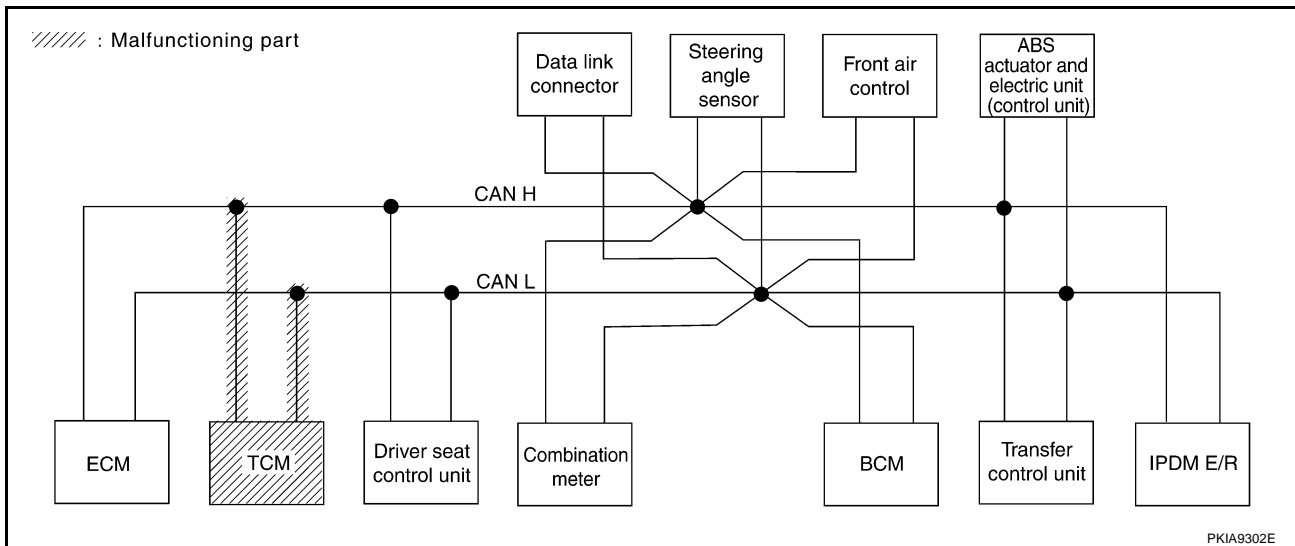

PKIA9302E

CAN SYSTEM (TYPE 5)


[CAN]

Case 6

Check driver seat control unit circuit. Refer to [LAN-171, "Driver Seat Control Unit Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|-----------------|-----------------------|--------------------|-------------------|-------|-----------|---------|-------|--------------|-------------|----------|--|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER/M&A | BCM/SEC | STRG | AWD/4WD/e4WD | VDC/TCS/ABS | IPDM E/R | |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | UNKWN | UNKWN | UNKWN | |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | UNKWN | — | |
| AUTO DRIVE POS. | No indication ✓ | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | — | — | — | |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | UNKWN | |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | UNKWN | — | |
| ALL MODE AWD/4WD | No indication | — | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — | |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — | |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — | — | |

SKIB3353E

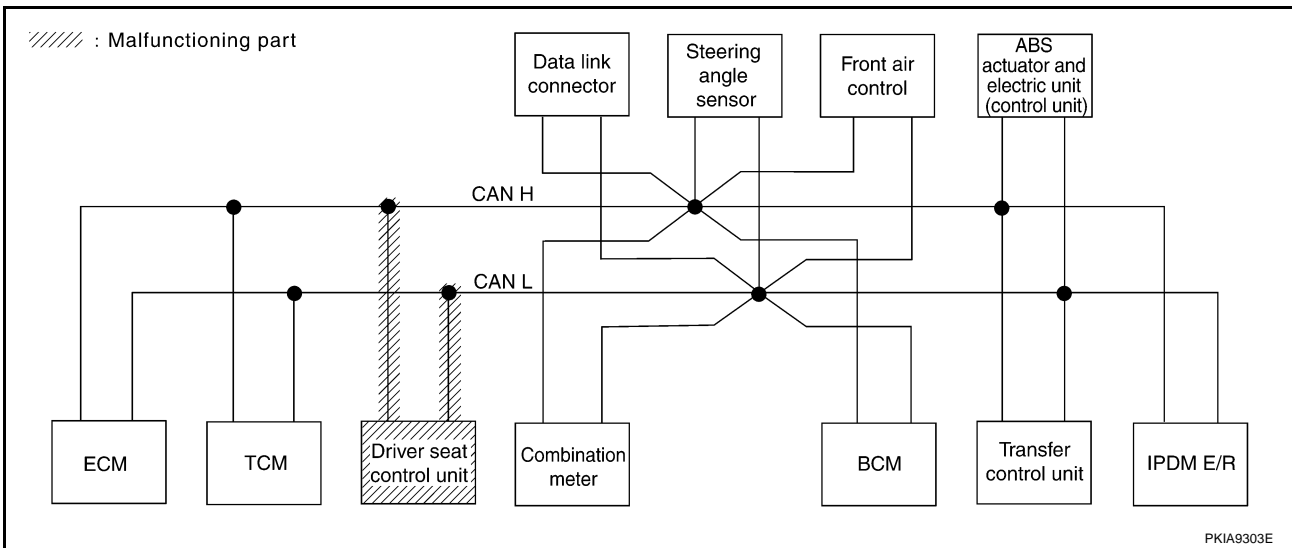

CAN SYSTEM (TYPE 5)


[CAN]

Case 7

Check combination meter circuit. Refer to [LAN-171, "Combination Meter Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|-----------|---------|-------|---------------|--------------|----------|--|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER/M&A | BCM/SEC | STRG | AWD/4WD /e4WD | VDC/TCS /ABS | IPDM E/R | |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN ✓ | UNKWN | — | UNKWN | UNKWN | UNKWN | |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN ✓ | — | — | UNKWN | UNKWN | — | |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN ✓ | UNKWN | — | — | — | — | |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN ✓ | — | — | — | — | UNKWN | |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | UNKWN | — | |
| ALL MODE AWD/4WD | No indication | — | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — | |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — | |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — | — | |

SKIB3354E

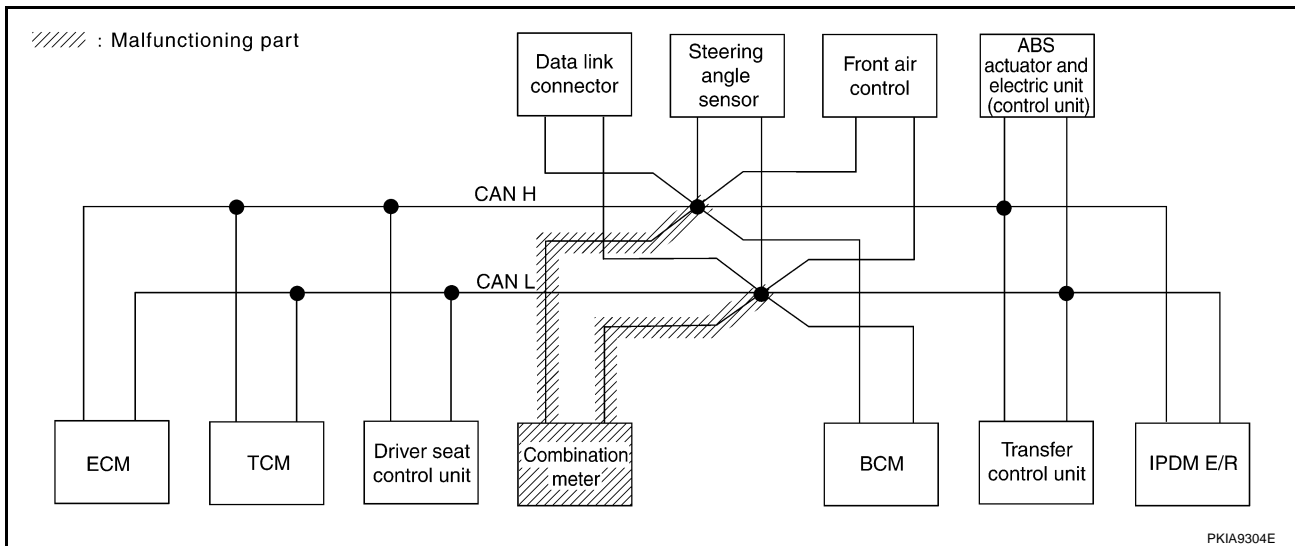

PKIA9304E

CAN SYSTEM (TYPE 5)


[CAN]

Case 8

Check BCM circuit. Refer to [LAN-172, "BCM Circuit Check"](#).

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|-----------------|-----------------------|--------------------|-------------------|-------|-----------|---------|-------|--------------|-------------|----------|--|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER/M&A | BCM/SEC | STRG | AWD/4WD/e4WD | VDC/TCS/ABS | IPDM E/R | |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN ✓ | — | UNKWN | UNKWN | UNKWN | |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | UNKWN | — | |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN | UNKWN ✓ | — | — | — | — | |
| BCM | No indication ✓ | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | UNKWN | |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN ✓ | — | — | UNKWN | — | |
| ALL MODE AWD/4WD | No indication | — | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — | |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — | |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | UNKWN ✓ | — | — | — | — | |

SKIB3355E

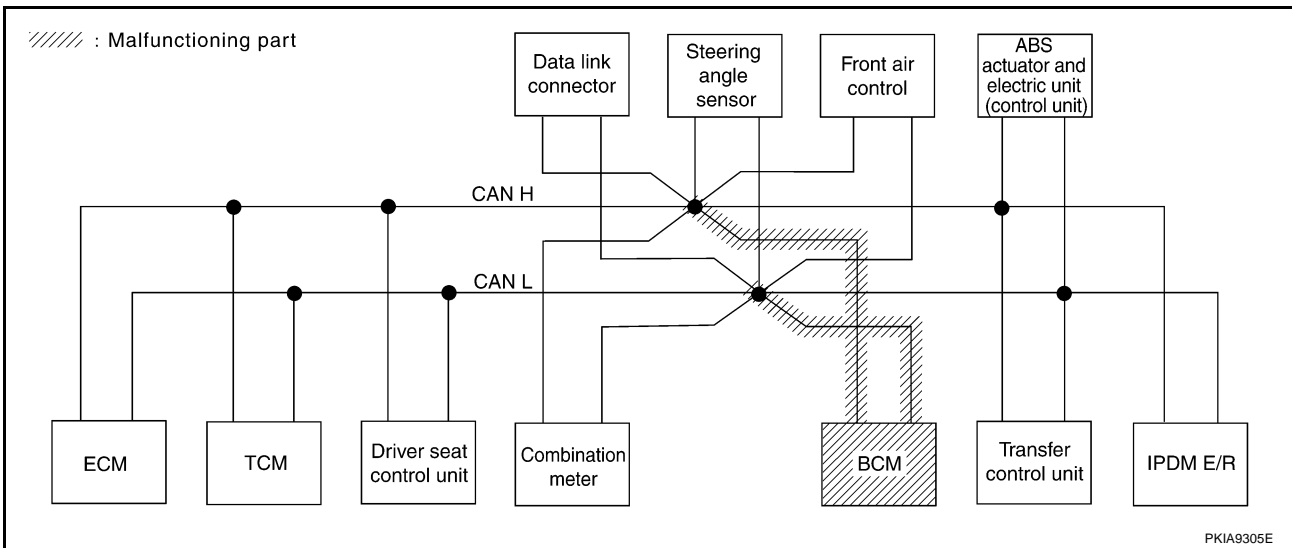

CAN SYSTEM (TYPE 5)


[CAN]

Case 9

Check data link connector circuit. Refer to [LAN-172, "Data Link Connector Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|-----------------|-----------------------|--------------------|-------------------|-------|-----------|---------|-------|--------------|-------------|----------|--|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER/M&A | BCM/SEC | STRG | AWD/4WD/e4WD | VDC/TCS/ABS | IPDM E/R | |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | UNKWN | UNKWN | UNKWN | |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | UNKWN | — | |
| AUTO DRIVE POS. | No indication ✓ | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | — | — | — | |
| BCM | No indication ✓ | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | UNKWN | |
| HVAC | No indication ✓ | — | UNKWN | UNKWN | — | — | UNKWN | — | — | UNKWN | — | |
| ALL MODE AWD/4WD | No indication ✓ | — | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — | |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — | |
| IPDM E/R | No indication ✓ | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — | — | |

SKIB3356E

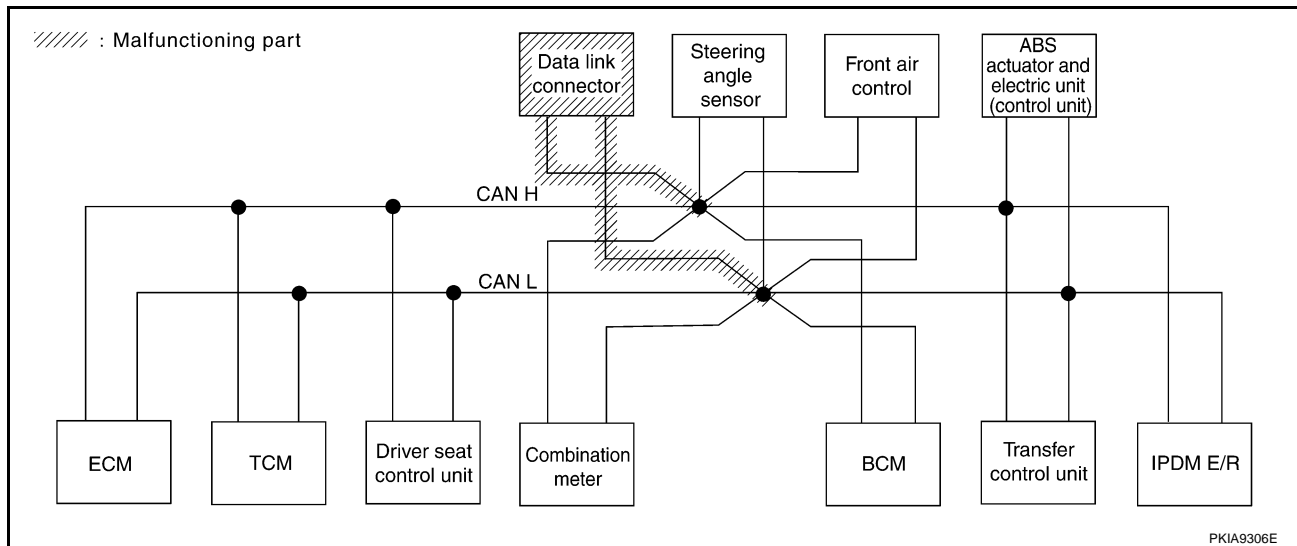

PKIA9306E

CAN SYSTEM (TYPE 5)


[CAN]

Case 10

Check steering angle sensor circuit. Refer to [LAN-173. "Steering Angle Sensor Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|-----------|---------|---------|--------------|-------------|----------|--|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER/M&A | BCM/SEC | STRG | AWD/4WD/e4WD | VDC/TCS/ABS | IPDM E/R | |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | UNKWN | UNKWN | UNKWN | |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | UNKWN | — | |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | — | — | — | |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | UNKWN | |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | UNKWN | — | |
| ALL MODE AWD/4WD | No indication | — | UNKWN | UNKWN | UNKWN | — | — | UNKWN ✓ | — | UNKWN | — | |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN ✓ | UNKWN | — | — | |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — | — | |

SKIB3357E

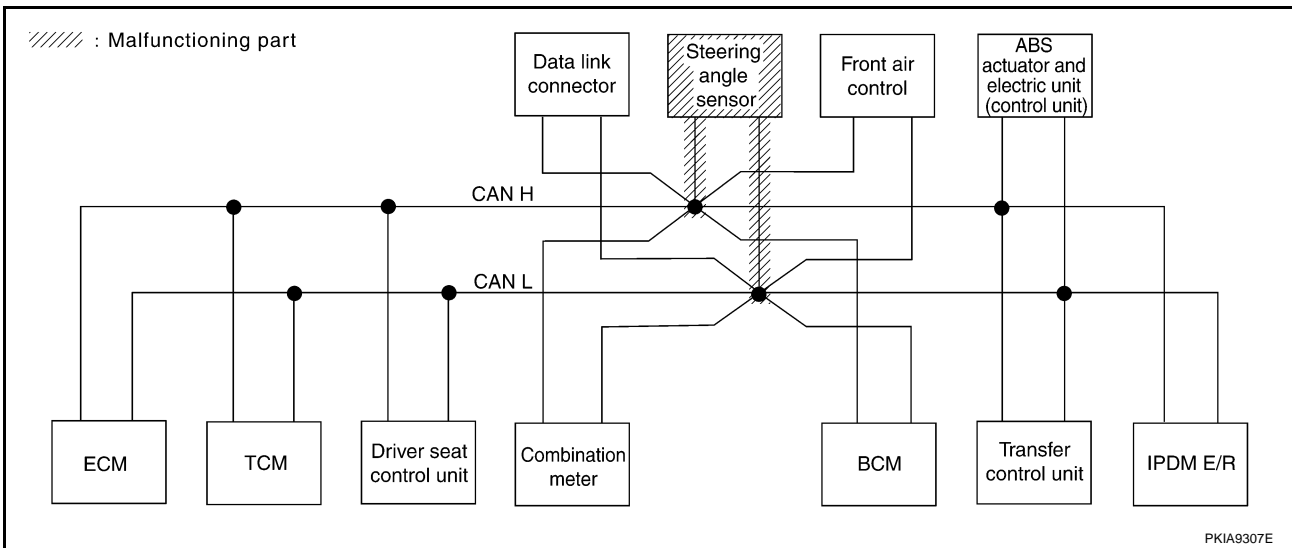

CAN SYSTEM (TYPE 5)


[CAN]

Case 11

Check front air control circuit. Refer to [LAN-173, "Front Air Control Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|-----------|---------|-------|--------------|-------------|----------|--|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER/M&A | BCM/SEC | STRG | AWD/4WD/e4WD | VDC/TCS/ABS | IPDM E/R | |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | UNKWN | UNKWN | UNKWN | |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | UNKWN | — | |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | — | — | — | |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | UNKWN | |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | UNKWN | — | |
| ALL MODE AWD/4WD | No indication | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — | |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — | |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — | — | |

SKIB3426E

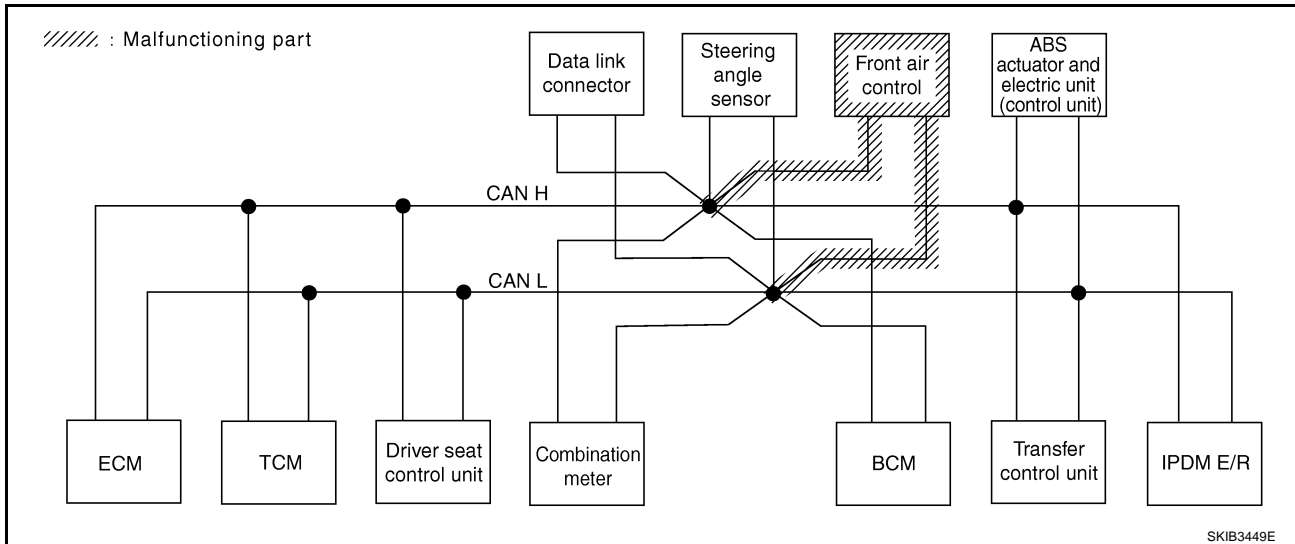

SKIB3449E

CAN SYSTEM (TYPE 5)


[CAN]

Case 12

Check transfer control unit circuit. Refer to [LAN-174, "Transfer Control Unit Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|-----------|---------|-------|--------------|-------------|----------|--|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER/M&A | BCM/SEC | STRG | AWD/4WD/e4WD | VDC/TCS/ABS | IPDM E/R | |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | UNKWN | UNKWN | UNKWN | |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | UNKWN | — | |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | — | — | — | |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | UNKWN | |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | UNKWN | — | |
| ALL MODE AWD/4WD | No indication | — | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — | |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — | |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — | — | |

SKIB3358E

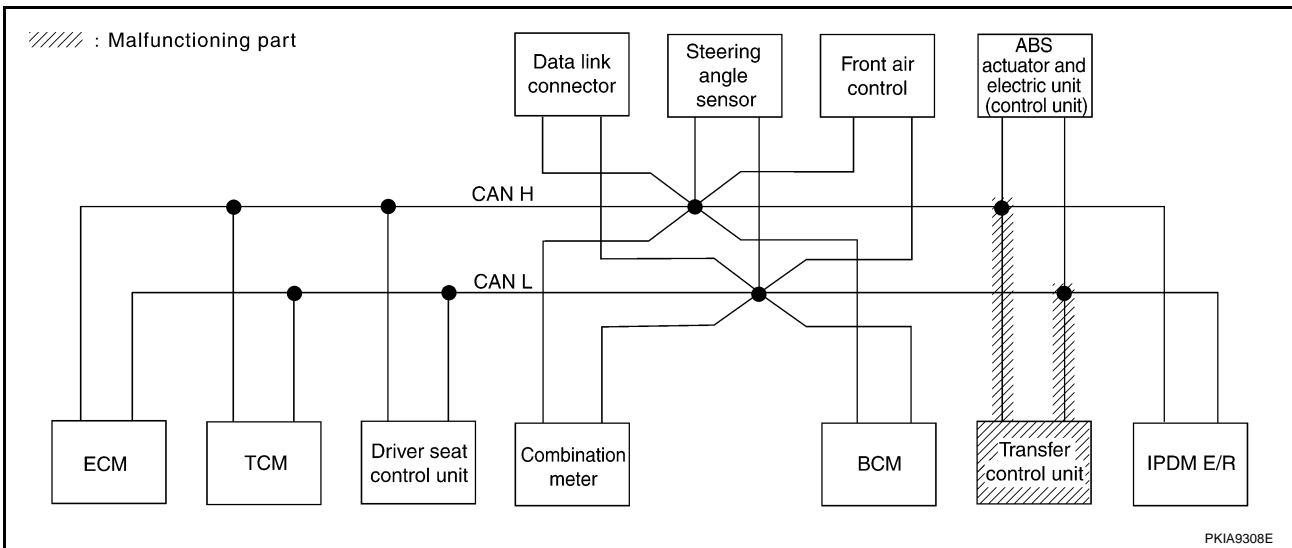

CAN SYSTEM (TYPE 5)


[CAN]

Case 13

Check ABS actuator and electric unit (control unit) circuit. Refer to [LAN-174, "ABS Actuator and Electric Unit \(Control Unit\) Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|-----------|---------|-------|--------------|-------------|----------|--|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER/M&A | BCM/SEC | STRG | AWD/4WD/e4WD | VDC/TCS/ABS | IPDM E/R | |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | UNKWN | UNKWN | UNKWN | |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | UNKWN | — | |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | — | — | — | |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | UNKWN | |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | UNKWN | — | |
| ALL MODE AWD/4WD | No indication | — | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — | |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — | |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — | — | |

SKIB3359E

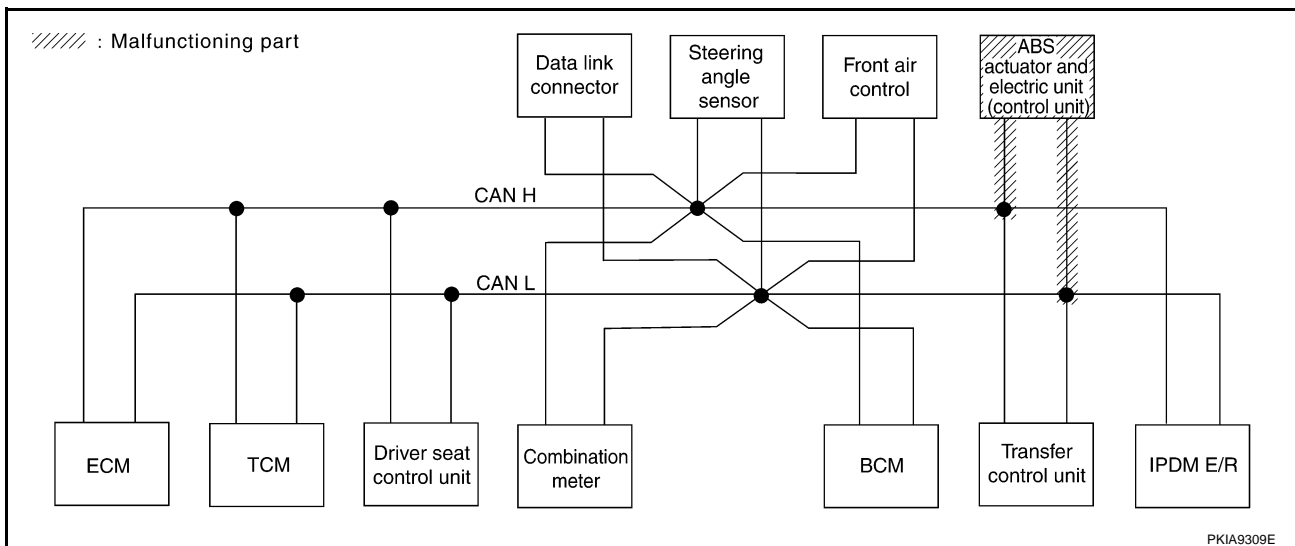

CAN SYSTEM (TYPE 5)


[CAN]

Case 14

Check IPDM E/R circuit. Refer to [LAN-175, "IPDM E/R Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | |
|----------------------|-----------------|-----------------------|--------------------|-------------------|-------|-----------|---------|-------|--------------|-------------|----------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | |
| | | | | ECM | TCM | METER/M&A | BCM/SEC | STRG | AWD/4WD/e4WD | VDC/TCS/ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | UNKWN | UNKWN | UNKWN ✓ |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | UNKWN | — |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | — | — | — |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | UNKWN ✓ |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | UNKWN | — |
| ALL MODE AWD/4WD | No indication | — | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — |
| IPDM E/R | No indication ✓ | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — | — |

SKIB3360E

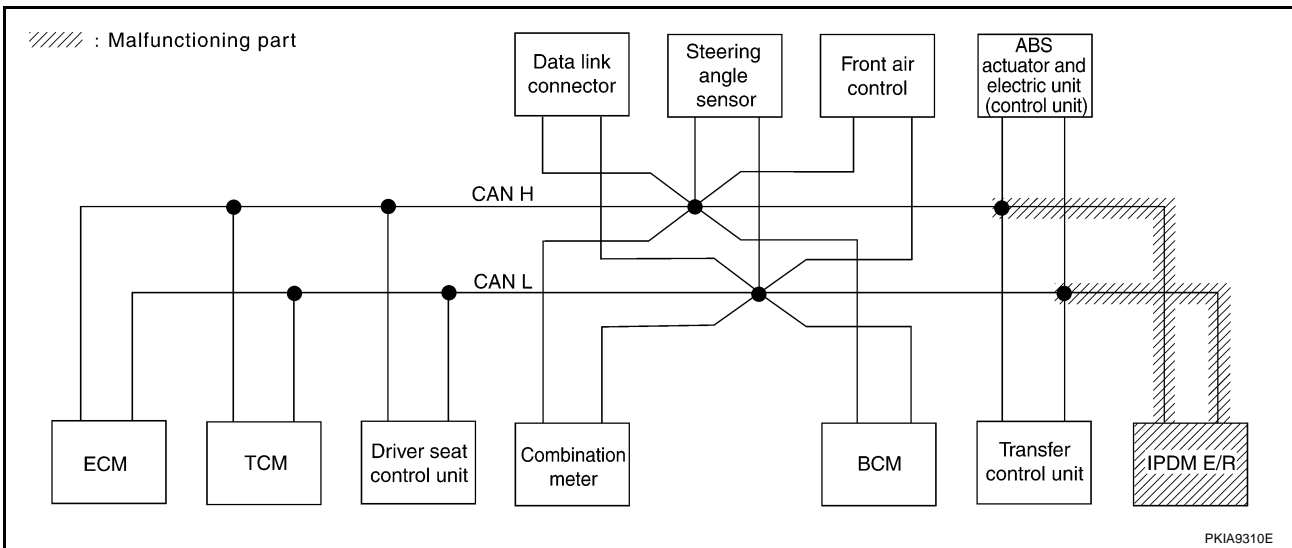

A
B
C
D
E
F
G
H
I
J
LAN
L
M

CAN SYSTEM (TYPE 5)

[CAN]

Case 15

Check CAN communication circuit. Refer to [LAN-175, "CAN Communication Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|--|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER/M&A | BCM/SEC | STRG | AWD/4WD/e4WD | VDC/TCS/ABS | IPDM E/R | |
| ENGINE | — | NG | UNKW N | — | UNKW N | UNKW N | UNKW N | — | UNKW N | UNKW N | UNKW N | |
| A/T | — | NG | UNKW N | UNKW N | — | UNKW N | — | — | UNKW N | UNKW N | — | |
| AUTO DRIVE POS. | No indication | NG | UNKW N | — | UNKW N | UNKW N | UNKW N | — | — | — | — | |
| BCM | No indication | NG | UNKW N | UNKW N | — | UNKW N | — | — | — | — | UNKW N | |
| HVAC | No indication | — | UNKW N | UNKW N | — | — | UNKW N | — | — | UNKW N | — | |
| ALL MODE AWD/4WD | No indication | — | UNKW N | UNKW N | UNKW N | — | — | UNKW N | — | UNKW N | — | |
| ABS | — | NG | UNKW N | UNKW N | UNKW N | — | — | UNKW N | UNKW N | — | — | |
| IPDM E/R | No indication | — | UNKW N | UNKW N | — | — | UNKW N | — | — | — | — | |

SKIB3361E

Case 16

Check IPDM E/R ignition relay circuit continuously sticks "OFF". Refer to [LAN-176, "IPDM E/R Ignition Relay Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|--|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER/M&A | BCM/SEC | STRG | AWD/4WD/e4WD | VDC/TCS/ABS | IPDM E/R | |
| ENGINE | — | NG | UNKW N | — | UNKW N | UNKW N | UNKW N | — | UNKW N | UNKW N | UNKW N | |
| A/T | — | NG | UNKW N | UNKW N | — | UNKW N | — | — | UNKW N | UNKW N | — | |
| AUTO DRIVE POS. | No indication | NG | UNKW N | — | UNKW N | UNKW N | UNKW N | — | — | — | — | |
| BCM | No indication | NG | UNKW N | UNKW N | — | UNKW N | — | — | — | — | UNKW N | |
| HVAC | No indication | — | UNKW N | UNKW N | — | — | UNKW N | — | — | UNKW N | — | |
| ALL MODE AWD/4WD | No indication | — | UNKW N | UNKW N | UNKW N | — | — | UNKW N | — | UNKW N | — | |
| ABS | — | NG | UNKW N | UNKW N | UNKW N | — | — | UNKW N | UNKW N | — | — | |
| IPDM E/R | No indication | — | UNKW N | UNKW N | — | — | UNKW N | — | — | — | — | |

SKIB3362E

Case 17

Check IPDM E/R ignition relay circuit continuously sticks "ON". Refer to [LAN-176, "IPDM E/R Ignition Relay Circuit Check"](#).

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|-----------|---------|---------|--------------|-------------|----------|--|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | |
| | | | | ECM | TCM | METER/M&A | BCM/SEC | STRG | AWD/4WD/e4WD | VDC/TCS/ABS | IPDM E/R | |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | UNKWN | UNKWN | UNKWN | |
| A/T | — | NG | UNKWN | UNKWN ✓ | — | UNKWN ✓ | — | — | UNKWN ✓ | UNKWN | — | |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN | UNKWN | — | — | — | — | |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | UNKWN | |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | UNKWN | — | |
| ALL MODE AWD/4WD | No indication | — | UNKWN | UNKWN | UNKWN | — | — | UNKWN | — | UNKWN | — | |
| ABS | — | NG | UNKWN | UNKWN ✓ | UNKWN | — | — | UNKWN ✓ | UNKWN ✓ | — | — | |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | UNKWN | — | — | — | — | |

SKIB3363E

Circuit Check Between TCM and Driver Seat Control Unit

UKS0019F

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector F33
 - Harness connector E19
 - Harness connector E34
 - Harness connector B40

OK or NG

OK >> GO TO 2.

NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect A/T assembly connector and harness connector F33.
2. Check continuity between A/T assembly harness connector F9 terminals 3 (L), 8 (P) and harness connector F33 terminals 12 (L), 11 (P).


3 (L) - 12 (L) : Continuity should exist.

8 (P) - 11 (P) : Continuity should exist.

OK or NG

OK >> GO TO 3.

NG >> Repair harness.

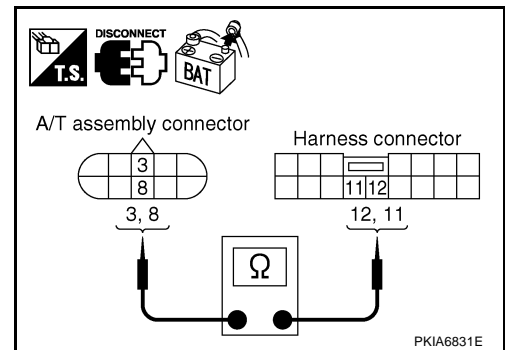


3. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect harness connector E34.
2. Check continuity between harness connector E19 terminals 12 (L), 11 (P) and harness connector E34 terminals 24 (L), 23 (P).

12 (L) - 24 (L) : Continuity should exist.
11 (P) - 23 (P) : Continuity should exist.

OK or NG

- OK >> GO TO 4.
 NG >> Repair harness.

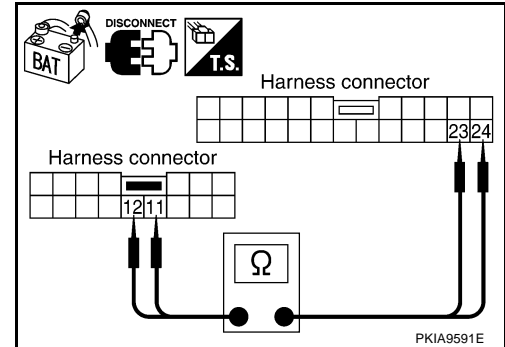


4. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect driver seat control unit connector.
2. Check continuity between harness connector B40 terminals 24 (L), 23 (P) and driver seat control unit harness connector P2 terminals 3 (L), 19 (P).

24 (L) - 3 (L) : Continuity should exist.
23 (P) - 19 (P) : Continuity should exist.

OK or NG

- OK >> Connect all the connectors and diagnose again. Refer to [LAN-148, "Work Flow"](#).
 NG >> Repair harness.

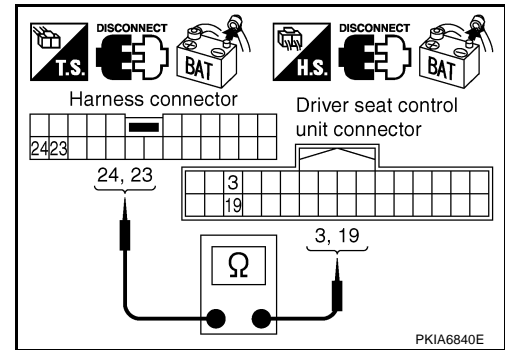

Circuit Check Between Driver Seat Control Unit and Data Link Connector

UKS0019G

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B69
 - Harness connector M40

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect driver seat control unit connector and harness connector B69.
2. Check continuity between driver seat control unit harness connector P2 terminals 3 (L), 19 (P) and harness connector B69 terminals 51J (L), 52J (P).

3 (L) - 51J (L) : Continuity should exist.
19 (P) - 52J (P) : Continuity should exist.

OK or NG

- OK >> GO TO 3.
 NG >> Repair harness.

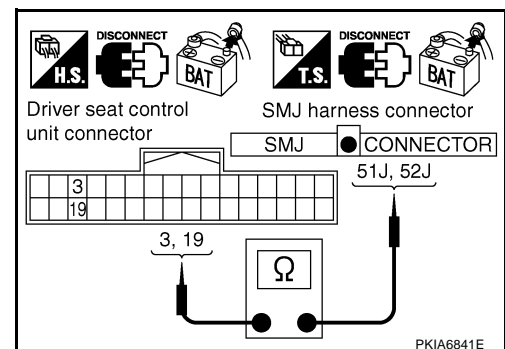

3. CHECK HARNESS FOR OPEN CIRCUIT


Check continuity between harness connector M40 terminals 51J (L), 52J (P) and data link connector M22 terminals 6 (L), 14 (P).

51J (L) - 6 (L) : Continuity should exist.

52J (P) - 14 (P) : Continuity should exist.

OK or NG

- OK >> Connect all the connectors and diagnose again. Refer to [LAN-148, "Work Flow"](#).
- NG >> Repair harness.

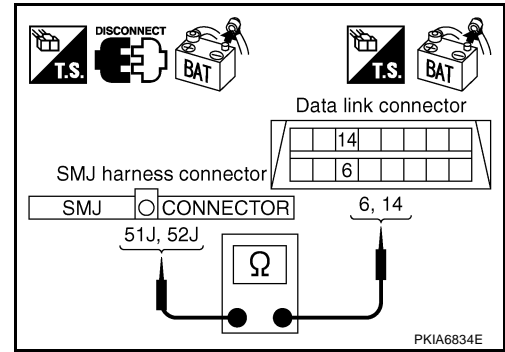

Circuit Check Between Data Link Connector and IPDM E/R

UKS0019H

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M31
 - Harness connector E152

OK or NG

- OK >> GO TO 2.
- NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT


1. Disconnect harness connector M31.
2. Check continuity between data link connector M22 terminals 6 (L), 14 (P) and harness connector M31 terminals 31G (L), 42G (P).

6 (L) - 31G (L) : Continuity should exist.

14 (P) - 42G (P) : Continuity should exist.

OK or NG

- OK >> GO TO 3.
- NG >> Repair harness.

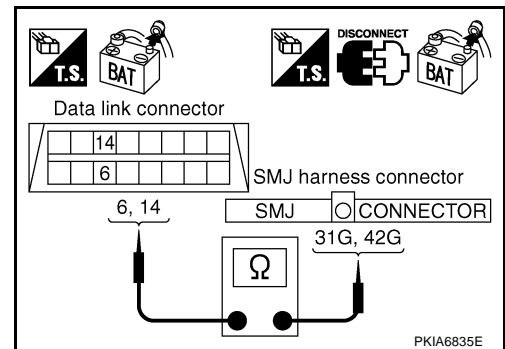

3. CHECK HARNESS FOR OPEN CIRCUIT


1. Disconnect IPDM E/R connector.
2. Check continuity between harness connector E152 terminals 31G (L), 42G (P) and IPDM E/R harness connector E122 terminals 39 (L), 40 (P).

31G (L) - 39 (L) : Continuity should exist.

42G (P) - 40 (P) : Continuity should exist.

OK or NG

- OK >> Connect all the connectors and diagnose again. Refer to [LAN-148, "Work Flow"](#).
- NG >> Repair harness.

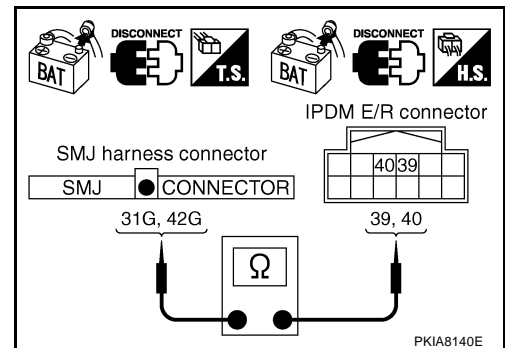

ECM Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (control module side and harness side).
 - ECM connector
 - Harness connector E19
 - Harness connector F33

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect ECM connector.
2. Check resistance between ECM harness connector E16 terminals 94 (L) and 86 (P).

94 (L) - 86 (P) : Approx. 108 - 132 Ω

OK or NG

- OK >> Replace ECM.
 NG >> Repair harness between ECM and A/T assembly.

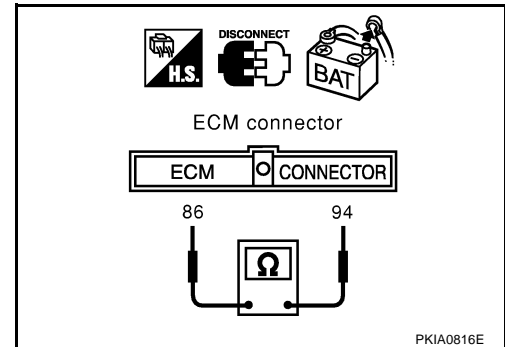**TCM Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of A/T assembly for damage, bend and loose connection (control module side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect A/T assembly connector.
2. Check resistance between A/T assembly harness connector F9 terminals 3 (L) and 8 (P).

3 (L) - 8 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace A/T assembly.
 NG >> Repair harness between A/T assembly and harness connector F33.

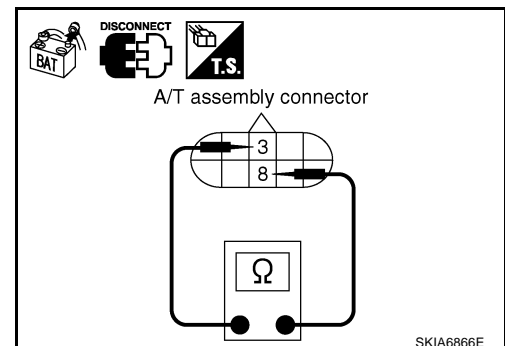

Driver Seat Control Unit Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of driver seat control unit for damage, bend and loose connection (control unit side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect driver seat control unit connector.
2. Check resistance between driver seat control unit harness connector P2 terminals 3 (L) and 19 (P).

3 (L) - 19 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace driver seat control unit.
 NG >> Repair harness between driver seat control unit and harness connector B40.

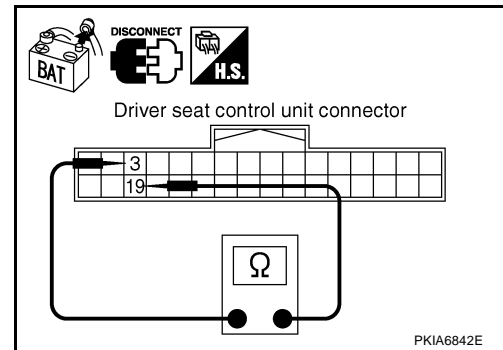**Combination Meter Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of combination meter for damage, bend and loose connection (meter side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect combination meter connector.
2. Check resistance between combination meter harness connector M24 terminals 11 (L) and 12 (P).

11 (L) - 12 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace combination meter.
 NG >> Repair harness between combination meter and data link connector.

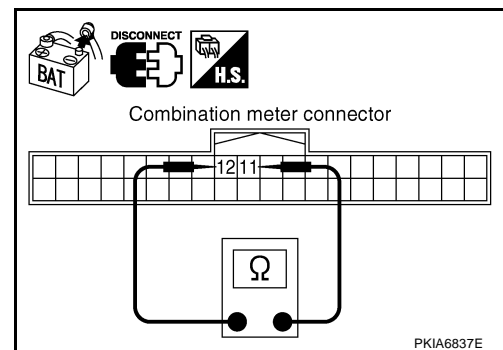

BCM Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of BCM for damage, bend and loose connection (control module side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect BCM connector.
2. Check resistance between BCM harness connector M18 terminals 39 (L) and 40 (P).

39 (L) - 40 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace BCM. Refer to [BCS-20, "Removal and Installation of BCM"](#) .
 NG >> Repair harness between BCM and data link connector.

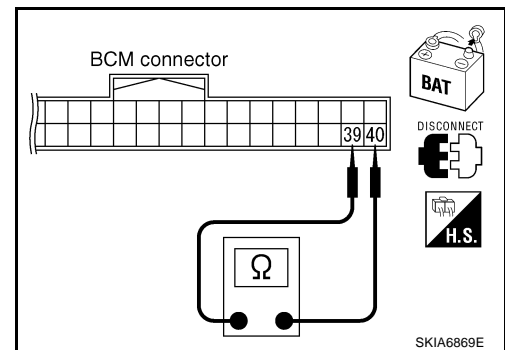**Data Link Connector Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check the terminals and connector of data link connector for damage, bend and loose connection (connector side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

Check resistance between data link connector M22 terminals 6 (L) and 14 (P).

6 (L) - 14 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Diagnose again. Refer to [LAN-148, "Work Flow"](#) .
 NG >> Repair harness between data link connector and combination meter.

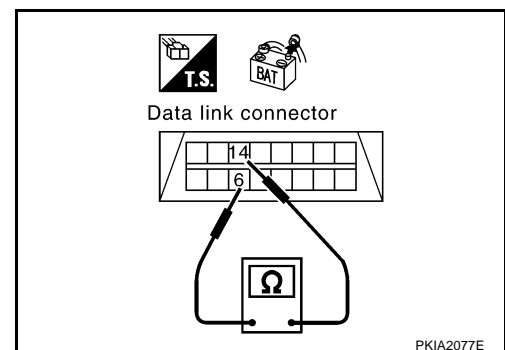

Steering Angle Sensor Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of steering angle sensor for damage, bend and loose connection (sensor side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect steering angle sensor connector.
2. Check resistance between steering angle sensor harness connector M47 terminals 3 (L) and 4 (P).

3 (L) - 4 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace steering angle sensor.
 NG >> Repair harness between steering angle sensor and data link connector.

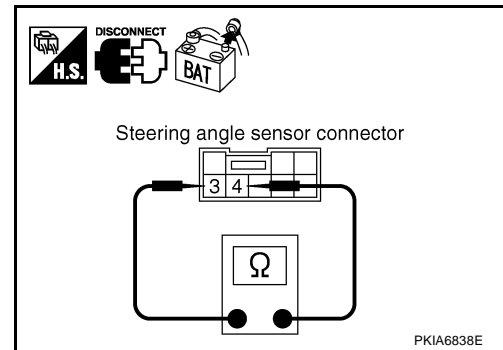**Front Air Control Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of front air control for damage, bend and loose connection (unit side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect front air control connector.
2. Check resistance between front air control harness connector M50 terminals 34 (L) and 35 (P).

34 (L) - 35 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace front air control.
 NG >> Repair harness between front air control and data link connector.

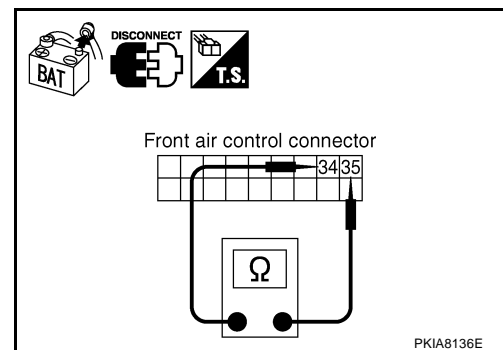

Transfer Control Unit Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of transfer control unit for damage, bend and loose connection (control unit side and harness side).

OK or NG

- OK >> GO TO 2.
- NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect transfer control unit connector.
2. Check resistance between transfer control unit harness connector E142 terminals 7 (L) and 8 (P).

7 (L) - 8 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace transfer control unit.
- NG >> Repair harness between transfer control unit and harness connector E152.

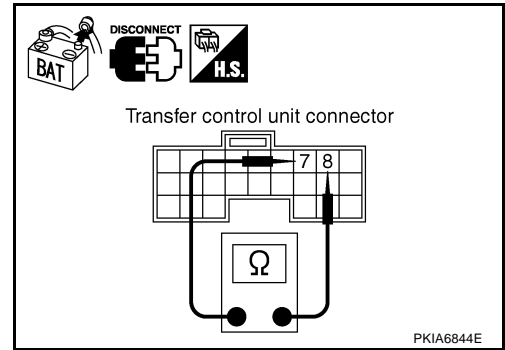

ABS Actuator and Electric Unit (Control Unit) Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of ABS actuator and electric unit (control unit) for damage, bend and loose connection (control unit side and harness side).

OK or NG

- OK >> GO TO 2.
- NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect ABS actuator and electric unit (control unit) connector.
2. Check resistance between ABS actuator and electric unit (control unit) harness connector E125 terminals 11 (L) and 15 (P).

11 (L) - 15 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace ABS actuator and electric unit (control unit).
- NG >> Repair harness between ABS actuator and electric unit (control unit) and harness connector E152.

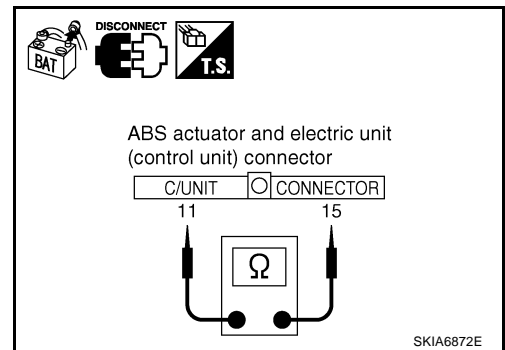

IPDM E/R Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of IPDM E/R for damage, bend and loose connection (control module side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check resistance between IPDM E/R harness connector E122 terminals 39 (L) and 40 (P).

39 (L) - 40 (P) : Approx. 108 - 132 Ω

OK or NG

- OK >> Replace IPDM E/R.
 NG >> Repair harness between IPDM E/R and harness connector E152.

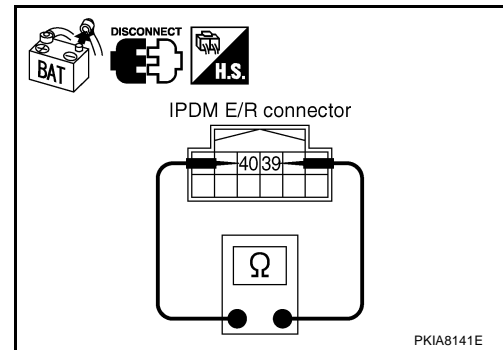**CAN Communication Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Disconnect the following module and control unit connectors and check terminals for deformation, disconnection, looseness or damage.
 - ECM
 - A/T assembly
 - Driver seat control unit
 - Combination meter
 - BCM
 - Steering angle sensor
 - Front air control
 - Transfer control unit
 - ABS actuator and electric unit (control unit)
 - IPDM E/R

OK or NG

- OK >> GO TO 2.
 NG >> Repair or replace as necessary.

2. CHECK HARNESS FOR SHORT CIRCUIT


With all module and control unit connectors disconnected, check continuity between data link connector M22 terminals 6 (L) and 14 (P).

6 (L) - 14 (P) : Continuity should not exist.

OK or NG

OK >> GO TO 3.

NG >> Repair harness.

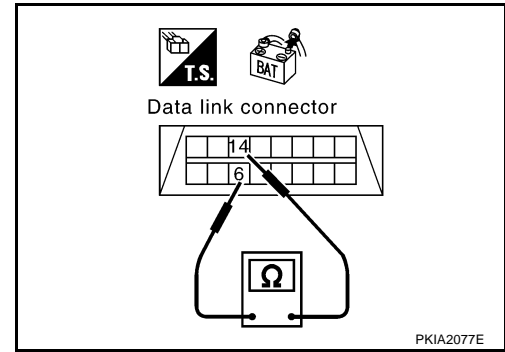

3. CHECK HARNESS FOR SHORT CIRCUIT

Check continuity between data link connector M22 terminals 6 (L), 14 (P) and ground.


6 (L) - Ground : Continuity should not exist.

14 (P) - Ground : Continuity should not exist.

OK or NG

OK >> Check ECM and IPDM E/R. Refer to [LAN-176, "ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION"](#).

NG >> Repair harness.

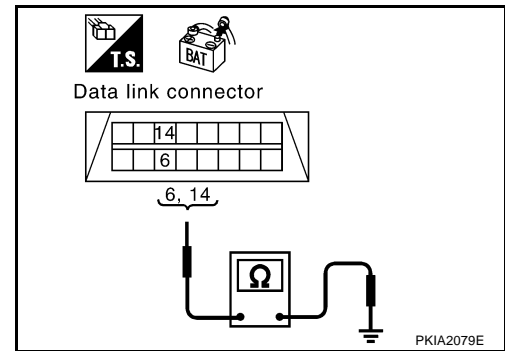

IPDM E/R Ignition Relay Circuit Check

Check the following. If no malfunction is found, replace the IPDM E/R.

- IPDM E/R power supply circuit. Refer to [PG-26, "IPDM E/R Power/Ground Circuit Inspection"](#).
- Ignition power supply circuit. Refer to [PG-13, "IGNITION POWER SUPPLY — IGNITION SW. IN ON AND/OR START"](#).

UKS0019T


Component Inspection

ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION

UKS0019U

- Remove ECM and IPDM E/R from vehicle.
- Check resistance between ECM terminals 94 and 86.
- Check resistance between IPDM E/R terminals 39 and 40.

| Unit | Terminal | Resistance value (Ω) (Approx.) |
|----------|----------|--|
| ECM | 94 - 86 | 108 - 132 |
| IPDM E/R | 39 - 40 | |

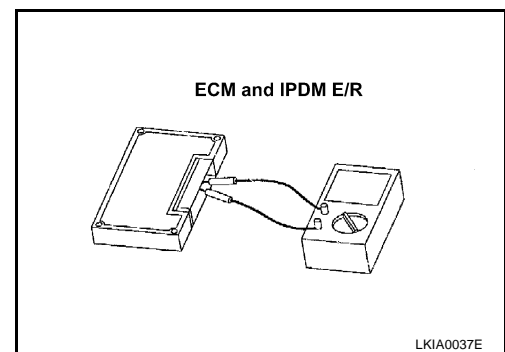

CAN SYSTEM (TYPE 6)

PFP:23710


System Description

UKS000QY

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

Component Parts and Harness Connector Location

UKS000QZ

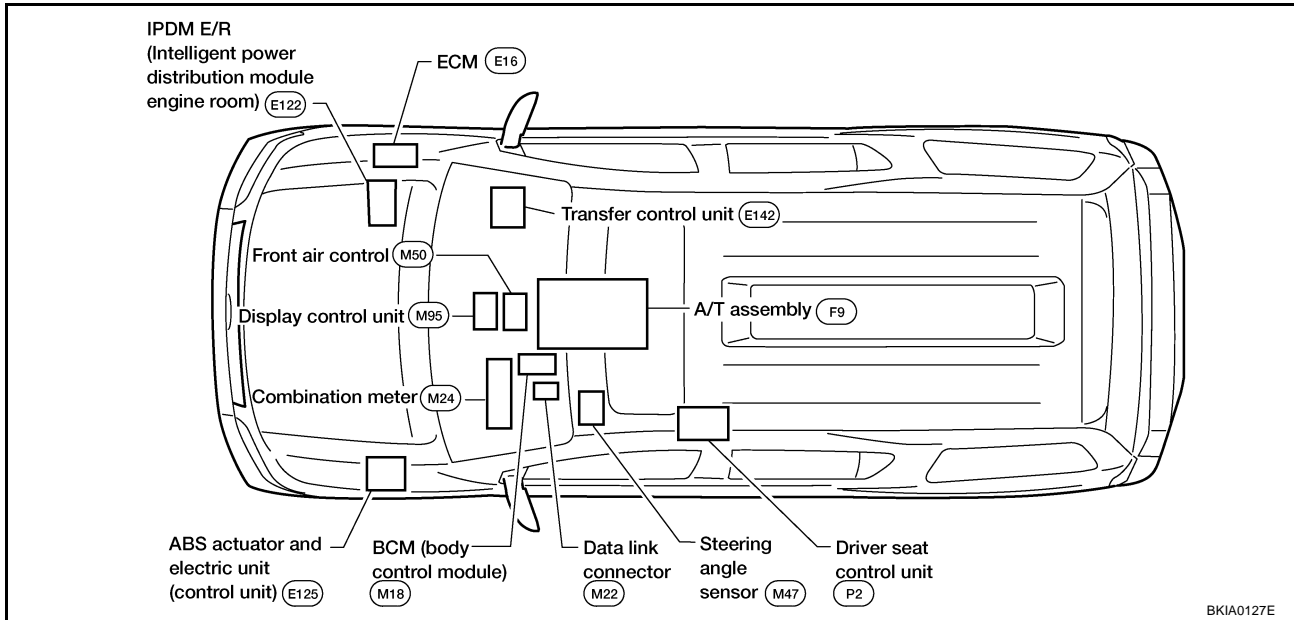

A
B
C
D
E
F
G
H
I
J
L
M


LAN

CAN SYSTEM (TYPE 6)

[CAN]

Schematic

UKS000R0

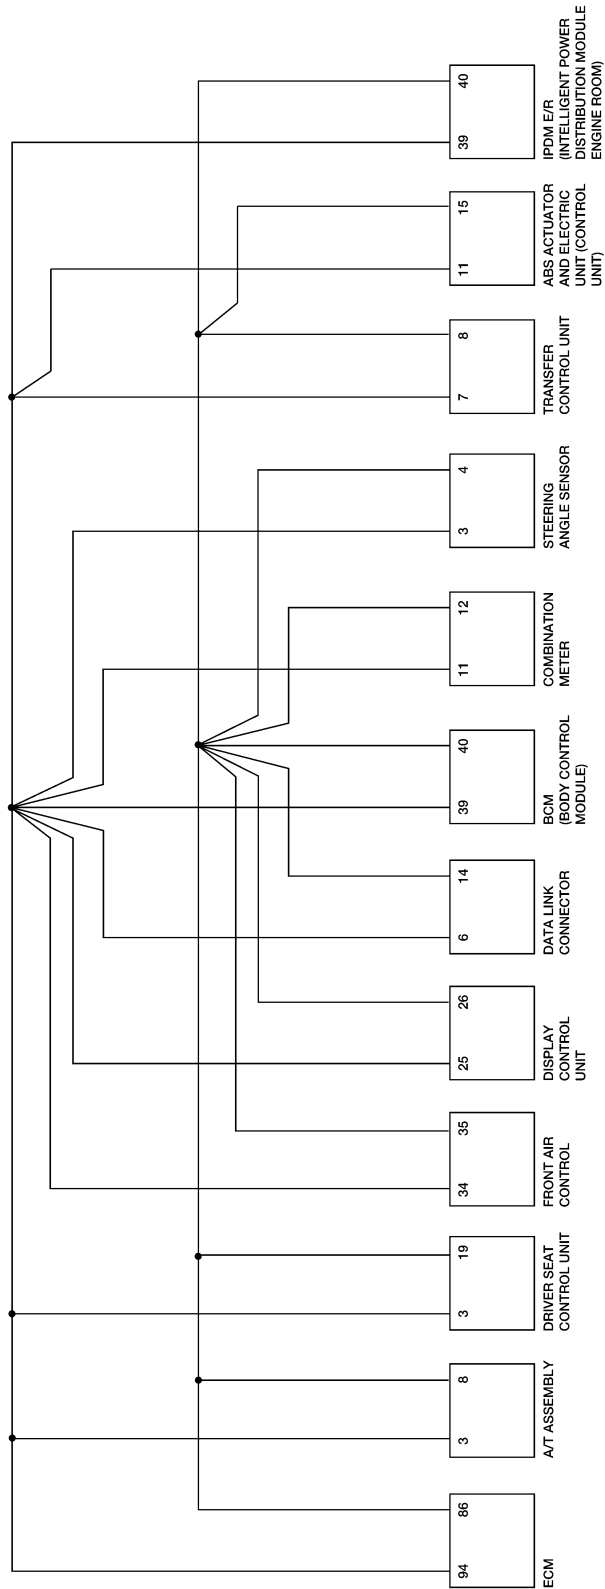

BKWA0001E

CAN SYSTEM (TYPE 6)


[CAN]

Wiring Diagram - CAN -


UKS000R1

LAN-CAN-16


— : DATA LINE

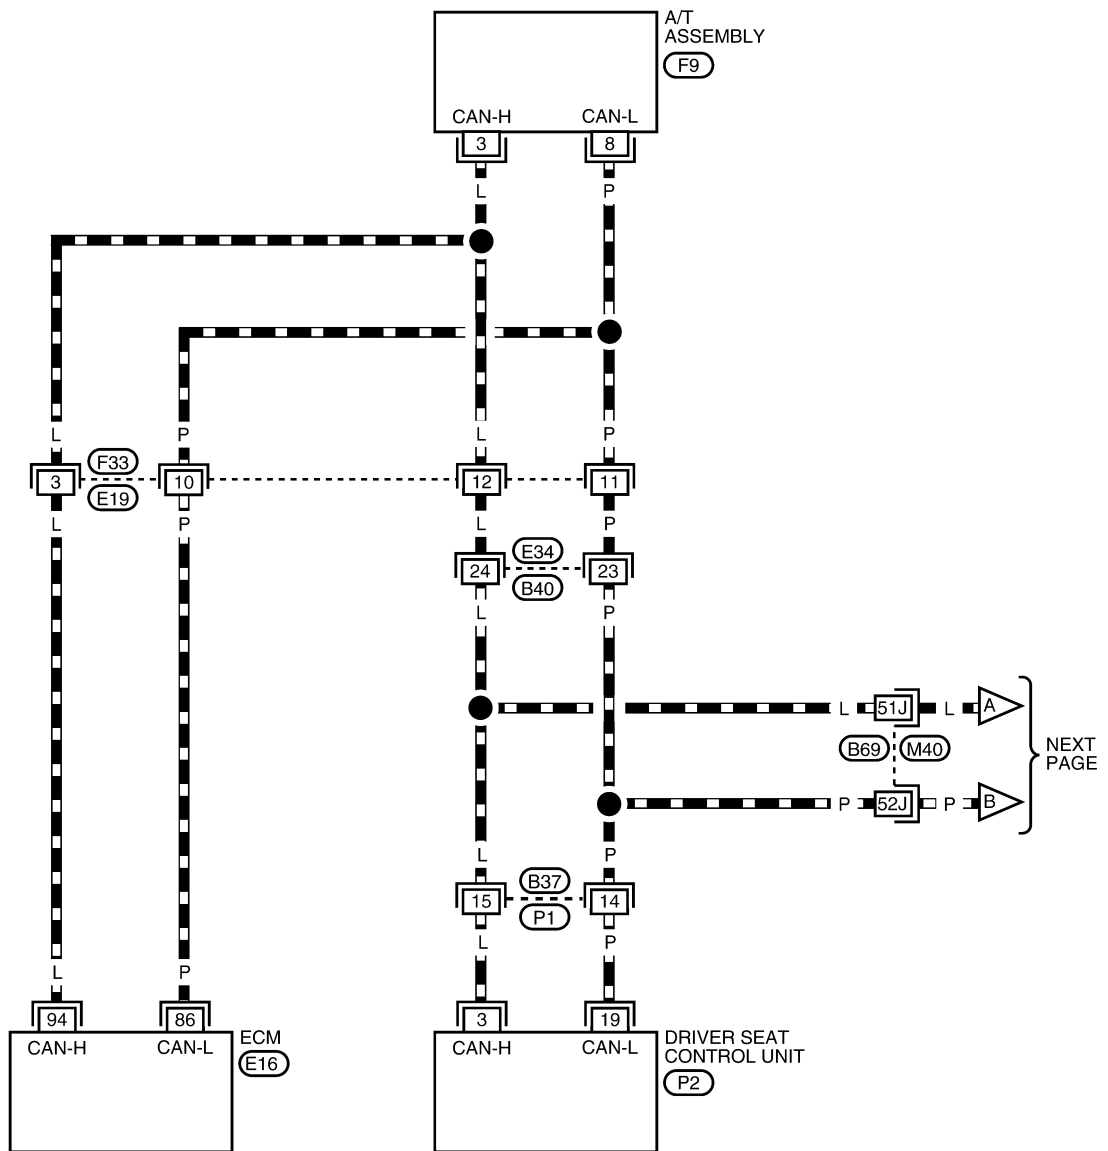





A
B
C
D
E
F
G
H
I
J
LAN
L
M

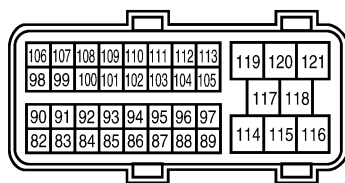

E16
B



REFER TO THE FOLLOWING.
M40 - SUPER MULTIPLE JUNCTION (SMJ)





*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

BKWA0686E

LAN-CAN-17

— : DATA LINE



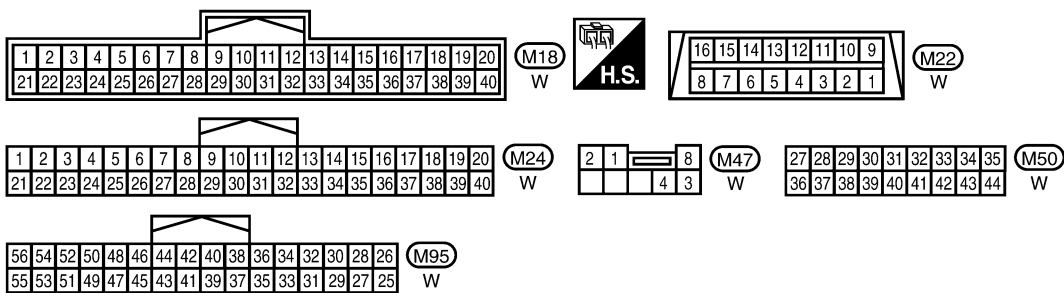
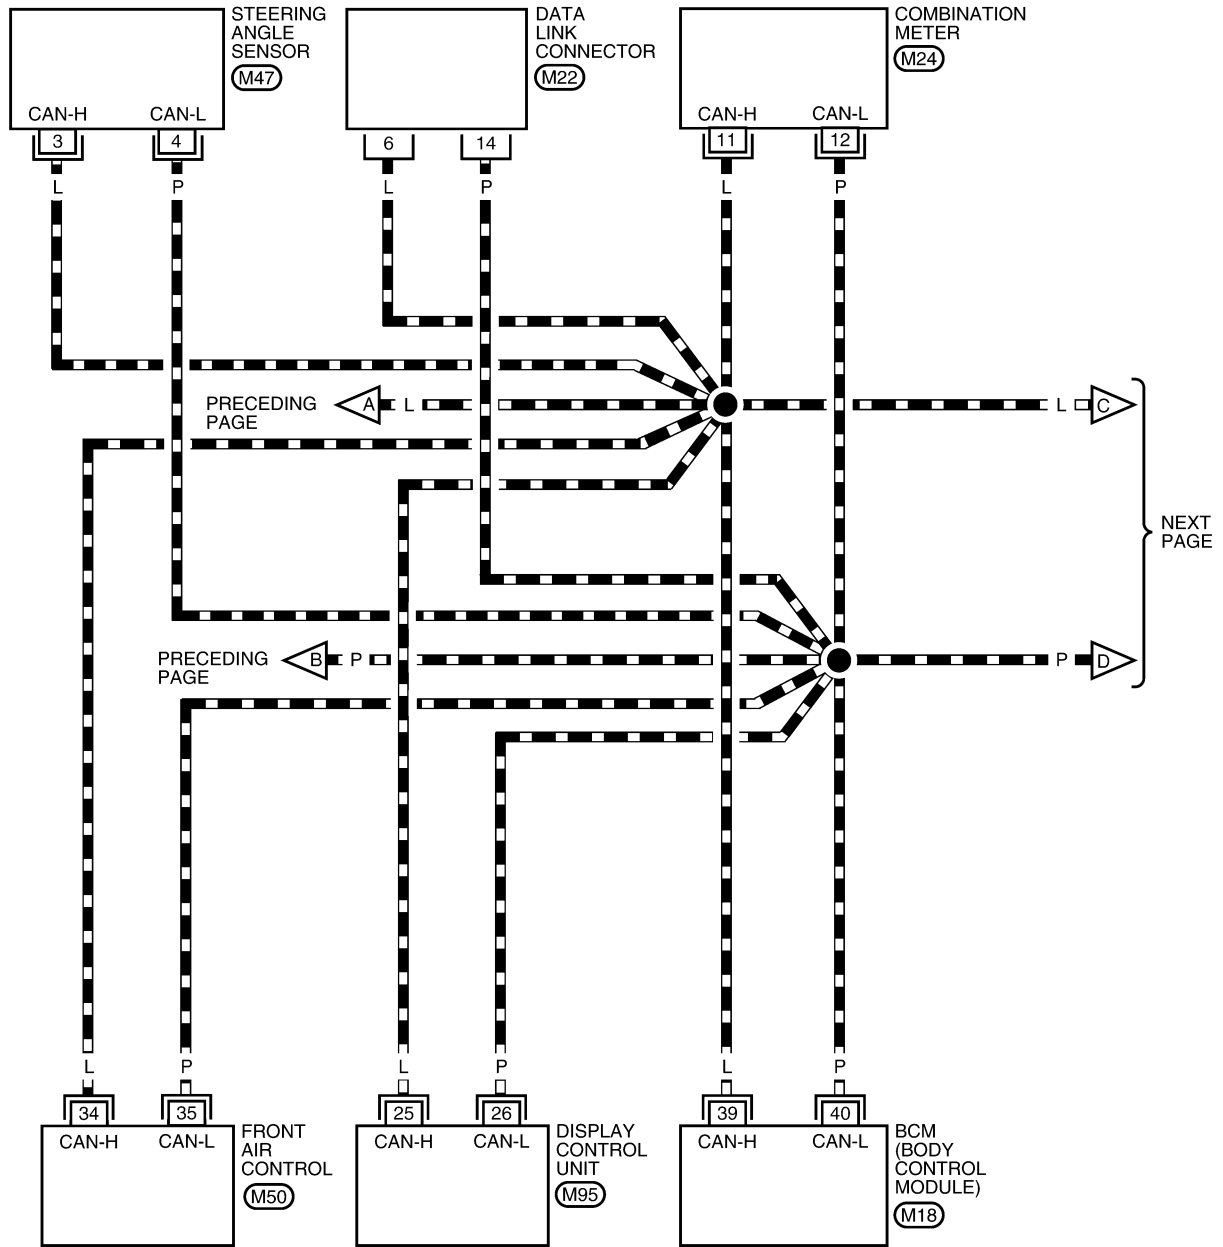


BKWA0423E

CAN SYSTEM (TYPE 6)

[CAN]

LAN-CAN-18

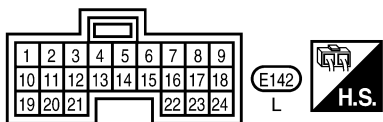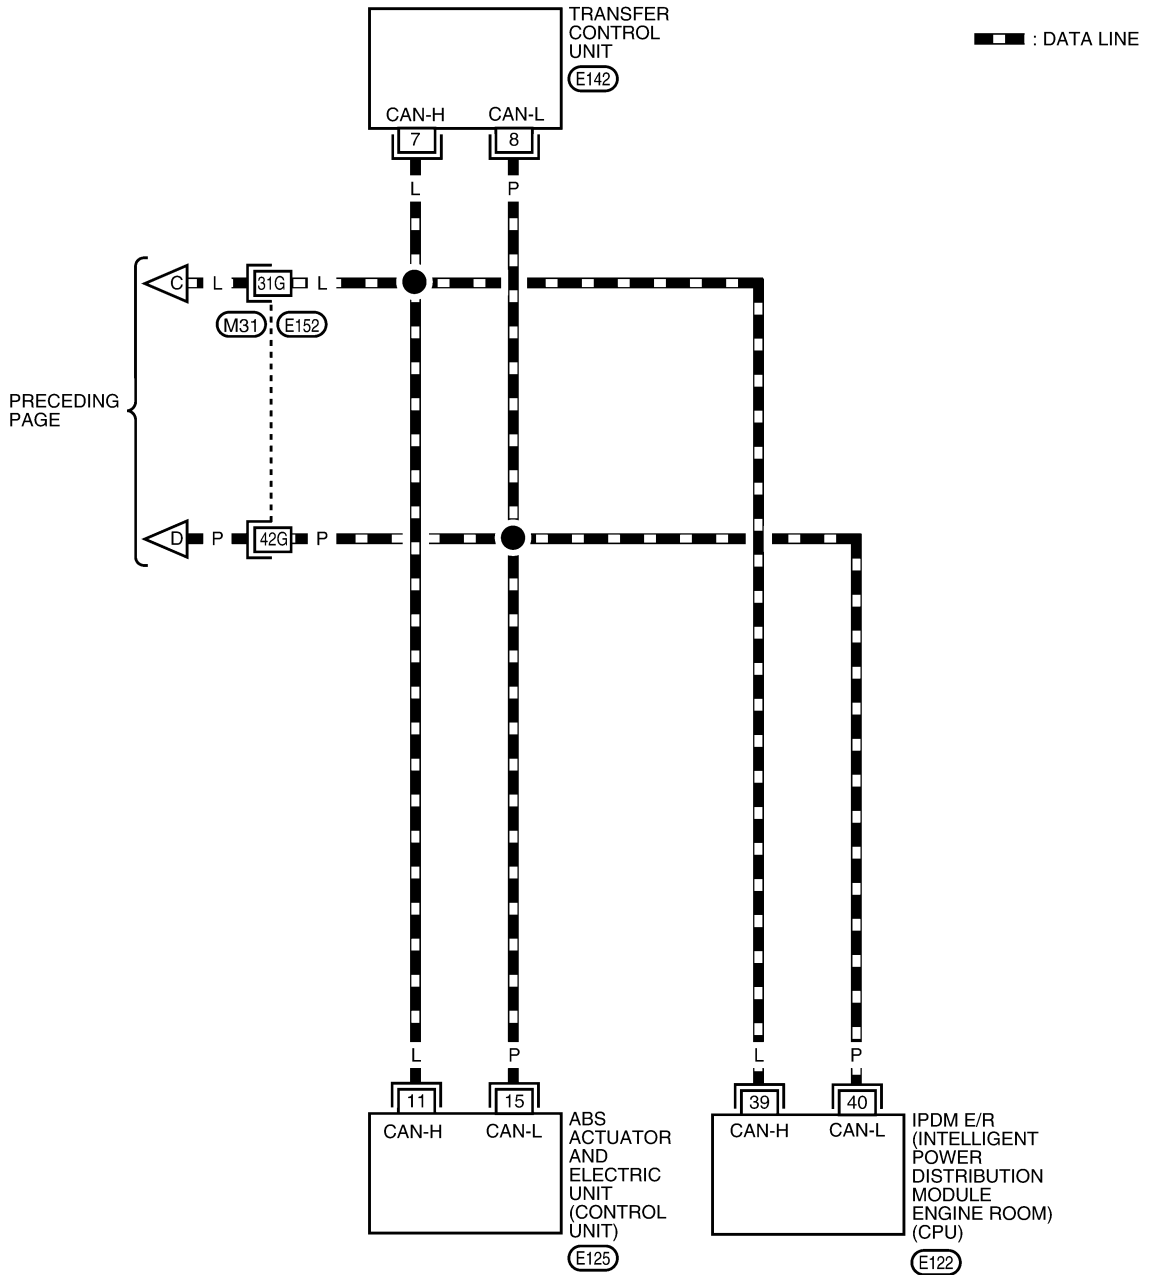


REFER TO THE FOLLOWING.
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)


BKWA0424E

Work Flow


1. When there are no indications of “AUTO DRIVE POS.”, “BCM”, “HVAC”, “ALL MODE AWD/4WD” or “IPDM E/R” on “SELECT SYSTEM” display of CONSULT-II, print the “SELECT SYSTEM”.

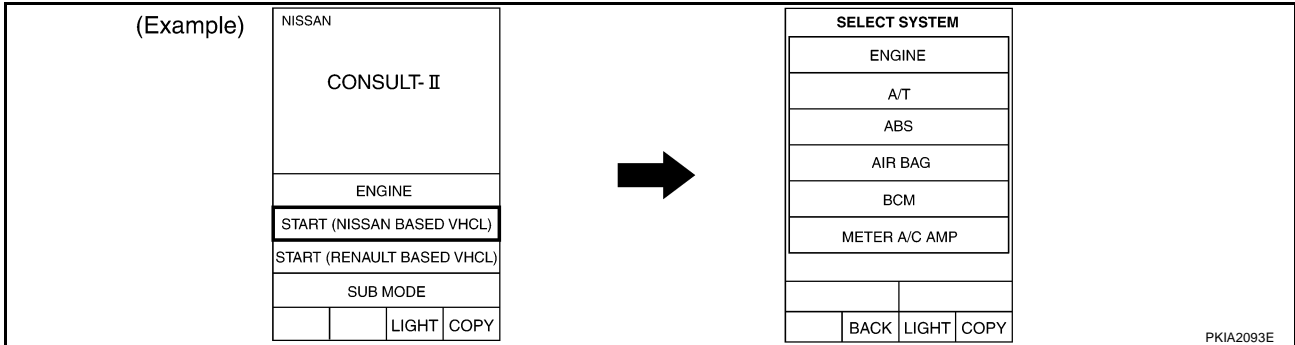

2. Print all the data of “SELF-DIAG RESULTS” for “ENGINE”, “A/T”, “AUTO DRIVE POS.”, “BCM”, “HVAC”, “ALL MODE AWD/4WD”, “ABS” and “IPDM E/R” displayed on CONSULT-II.

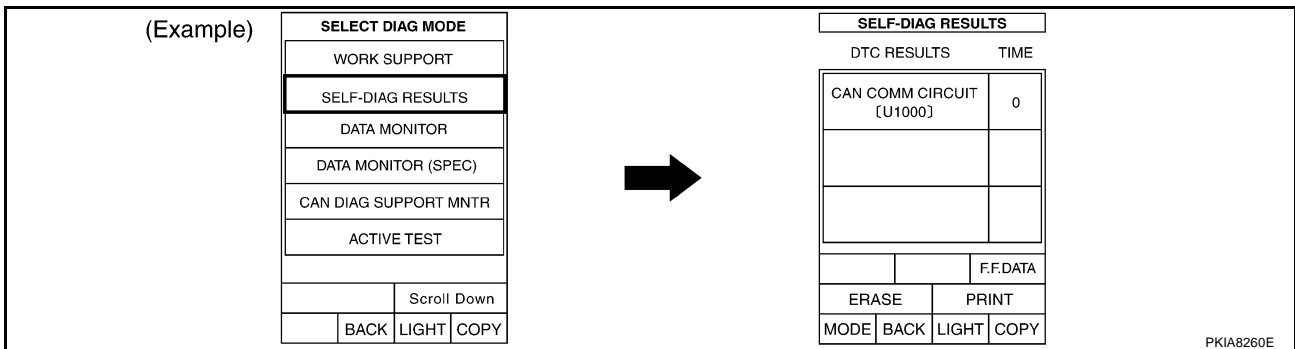


3. Print all the data of “CAN DIAG SUPPORT MNTR” for “ENGINE”, “A/T”, “AUTO DRIVE POS.”, “BCM”, “HVAC”, “ALL MODE AWD/4WD”, “ABS” and “IPDM E/R” displayed on CONSULT-II.

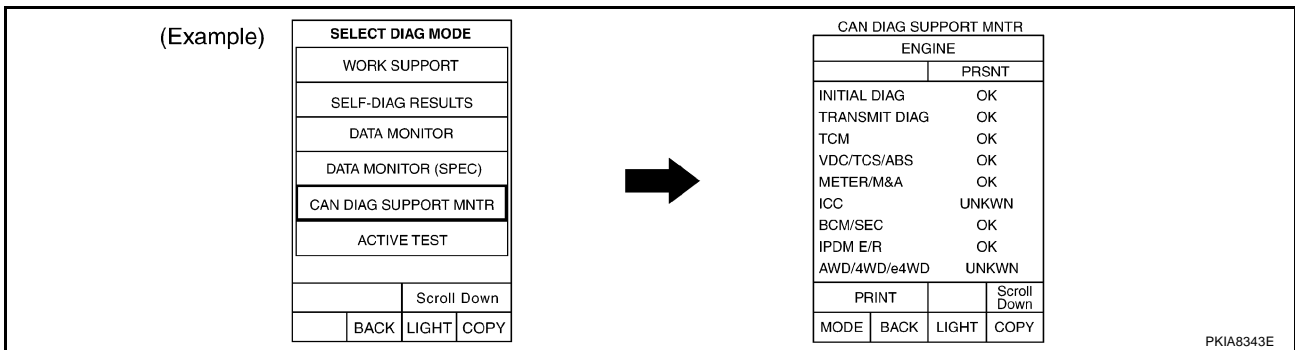

4. Attach the printed sheet of “SELECT SYSTEM”, “SELF-DIAG RESULTS” and “CAN DIAG SUPPORT MNTR” onto the check sheet. Refer to [LAN-184, "CHECK SHEET"](#) .
5. Based on the indications of “SELECT SYSTEM” and the results of “CAN DIAG SUPPORT MNTR”, puts a check mark onto the items with “No indication”, “NG”, or “UNKWN” in the check sheet table. Refer to [LAN-184, "CHECK SHEET"](#) .

CAUTION:

“ALL MODE AWD/4WD” puts a check mark on the check sheet when “Present” is “UNKWN” and “Past” is “0”.

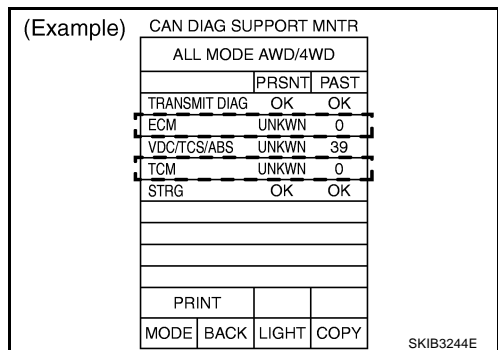

NOTE:

- If “NG” is displayed on “INITIAL DIAG (Initial diagnosis)” as “CAN DIAG SUPPORT MNTR” for the diagnosed control unit, replace the control unit.
- The “CAN DIAG SUPPORT MNTR” items, which are not in check sheet table, are not related to diagnostic procedure on service manual.
So it is not necessary to check the status of the “CAN DIAG SUPPORT MNTR” items not in check sheet table.

6. Check CAN communication line of the navigation system. Refer to [AV-147, "CAN Communication Line Check"](#) .
7. Attach the CAN DIAG SUPPORT MONITOR check sheet onto the check sheet. Refer to [LAN-184, "CHECK SHEET"](#) .
8. Mark the “NG” or “UNKWN” item of the check sheet table with “v” from the result of CAN DIAG SUPPORT MONITOR check sheet. Refer to [LAN-184, "CHECK SHEET"](#) .

NOTE:

If “NG” is displayed on “CAN COMM” as “CAN DIAG SUPPORT MONITOR” for the diagnosed control unit, replace the control unit. Refer to [AV-147, "CAN Communication Line Check"](#) .

9. According to the check sheet results (example), start inspection. Refer to [LAN-186, "CHECK SHEET RESULTS \(EXAMPLE\)"](#) .

A

B

C

D

E

F

G

H

I

J

LAN

L

M

CAN SYSTEM (TYPE 6)

[CAN]

CHECK SHEET

NOTE:

If "NG" is displayed on "INITIAL DIAG (Initial diagnosis)" or "CAN COMM" for the diagnosed control unit, replace the control unit.

| Check sheet table | | CAN DIAG SUPPORT MNTR | | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|------------|---------|------------|-------|-------------------|---------------|--------------|------------|
| SELECT SYSTEM screen | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | | |
| | | | | ECM | TCM | METER /M&A | DISPLAY | BCM /SEC | STRG | Front air control | AWD/4WD /e4WD | VDC/TCS /ABS | IPDM E/R |
| ENGINE | - | NG | UNKWN | - | UNKWN | UNKWN | - | UNKWN | - | - | UNKWN | UNKWN | UNKWN |
| A/T | - | NG | UNKWN | UNKWN | - | UNKWN | - | - | - | - | UNKWN | UNKWN | - |
| AUTO DRIVE POS. | No indication | NG | UNKWN | - | UNKWN | UNKWN | - | UNKWN | - | - | - | - | - |
| Display control unit | - | CAN COMM | CAN CIRC 1 | CAN CIRC 3 | - | CAN CIRC 5 | - | CAN CIRC 2 | - | CAN CIRC 4 | - | - | CAN CIRC 7 |
| BCM | No indication | NG | UNKWN | UNKWN | - | UNKWN | - | - | - | - | - | - | UNKWN |
| HVAC | No indication | - | UNKWN | UNKWN | - | - | UNKWN | UNKWN | - | - | - | UNKWN | - |
| ALL MODE AWD/4WD | No indication | - | UNKWN | UNKWN | UNKWN | - | - | - | UNKWN | - | - | UNKWN | - |
| ABS | - | NG | UNKWN | UNKWN | UNKWN | - | - | - | UNKWN | - | UNKWN | - | - |
| IPDM E/R | No indication | - | UNKWN | UNKWN | - | - | - | UNKWN | - | - | - | - | - |

Symptoms :

Attach copy of
SELECT SYSTEM

Attach copy of
SELECT SYSTEM

Attach copy of
display control unit
CAN DIAG SUPPORT MONITOR check sheet

SKIB3364E

CAN SYSTEM (TYPE 6)

[CAN]

A
B
C
D
E
F
G
H
I
J
L
M

| | | | |
|--|--|---|--|
| Attach copy of ENGINE SELF-DIAG RESULTS | Attach copy of A/T SELF-DIAG RESULTS | Attach copy of AUTO DRIVE POS. SELF-DIAG RESULTS | Attach copy of BCM SELF-DIAG RESULTS |
| Attach copy of HVAC SELF-DIAG RESULTS | Attach copy of ALL MODE AWD/4WD SELF-DIAG RESULTS | Attach copy of ABS SELF-DIAG RESULTS | Attach copy of IPDM E/R SELF-DIAG RESULTS |
| Attach copy of ENGINE CAN DIAG SUPPORT MNTR | Attach copy of A/T CAN DIAG SUPPORT MNTR | Attach copy of AUTO DRIVE POS. CAN DIAG SUPPORT MNTR | Attach copy of BCM CAN DIAG SUPPORT MNTR |
| Attach copy of HVAC CAN DIAG SUPPORT MNTR | Attach copy of ALL MODE AWD/4WD CAN DIAG SUPPORT MNTR | Attach copy of ABS CAN DIAG SUPPORT MNTR | Attach copy of IPDM E/R CAN DIAG SUPPORT MNTR |

LAN

PKIB6773E

CHECK SHEET RESULTS (EXAMPLE)

NOTE:


If "NG" is displayed on "INITIAL DIAG (Initial diagnosis)" or "CAN COMM" for the diagnosed control unit, replace the control unit.

Case 1

Check harness between TCM and driver seat control unit. Refer to [LAN-202, "Circuit Check Between TCM and Driver Seat Control Unit"](#).

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|---------|------------|---------|------------|-------|-------------------|---------------|--------------|------------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | | |
| | | | | ECM | TCM | METER /M&A | DISPLAY | BCM /SEC | STRG | Front air control | AWD/4WD /e4WD | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN ✓ | — | UNKWN ✓ | — | — | UNKWN ✓ | UNKWN ✓ | UNKWN ✓ |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN ✓ | — | — | — | — | UNKWN ✓ | UNKWN ✓ | — |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN ✓ | UNKWN | — | UNKWN | — | — | — | — | — |
| Display control unit | — | CAN COMM | CAN CIRC 1 | CAN CIRC 3 | — | CAN CIRC 5 | — | CAN CIRC 2 | — | CAN CIRC 4 | — | — | CAN CIRC 7 |
| BCM | No indication | NG | UNKWN | UNKWN ✓ | — | UNKWN | — | — | — | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN ✓ | — | — | UNKWN | UNKWN | — | — | — | UNKWN | — |
| ALL MODE AWD/4WD | No indication | — | UNKWN | UNKWN ✓ | UNKWN ✓ | — | — | — | UNKWN | — | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN ✓ | UNKWN ✓ | — | — | — | UNKWN | — | UNKWN | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN ✓ | — | — | — | UNKWN | — | — | — | — | — |

SKIB3365E

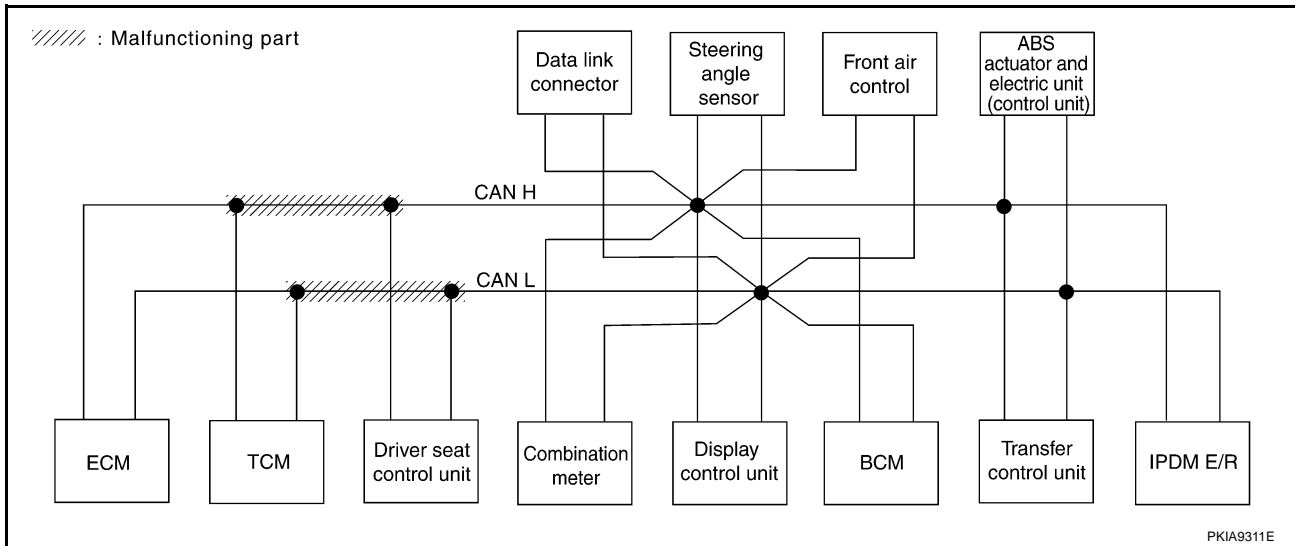


Case 2

Check harness between driver seat control unit and data link connector. Refer to [LAN-203, "Circuit Check Between Driver Seat Control Unit and Data Link Connector"](#).

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | | | |
|----------------------|-----------------|-----------------------|--------------------|-------------------|---------|------------|---------|------------|-------|-------------------|---------------|--------------|----------|------------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | | | |
| | | | | ECM | TCM | METER /M&A | DISPLAY | BCM /SEC | STRG | Front air control | AWD/4WD /e4WD | VDC/TCS /ABS | IPDM E/R | |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN ✓ | — | UNKWN ✓ | — | — | — | UNKWN ✓ | UNKWN ✓ | UNKWN ✓ |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN ✓ | — | — | — | — | — | UNKWN ✓ | UNKWN ✓ | — |
| AUTO DRIVE POS. | No indication ✓ | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | — | — | — | — |
| Display control unit | — | CAN COMM | CAN CIRC 1 | CAN CIRC 3 | — | CAN CIRC 5 | — | CAN CIRC 2 | — | CAN CIRC 4 | — | — | — | CAN CIRC 7 |
| BCM | No indication | NG | UNKWN | UNKWN ✓ | — | UNKWN | — | — | — | — | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN ✓ | — | — | UNKWN | UNKWN | — | — | — | UNKWN | — | — |
| ALL MODE AWD/4WD | No indication | — | UNKWN | UNKWN ✓ | UNKWN ✓ | — | — | — | UNKWN | — | — | UNKWN | — | — |
| ABS | — | NG | UNKWN | UNKWN ✓ | UNKWN ✓ | — | — | — | UNKWN | — | UNKWN | — | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN ✓ | — | — | — | UNKWN | — | — | — | — | — | — |

SKIB3366E

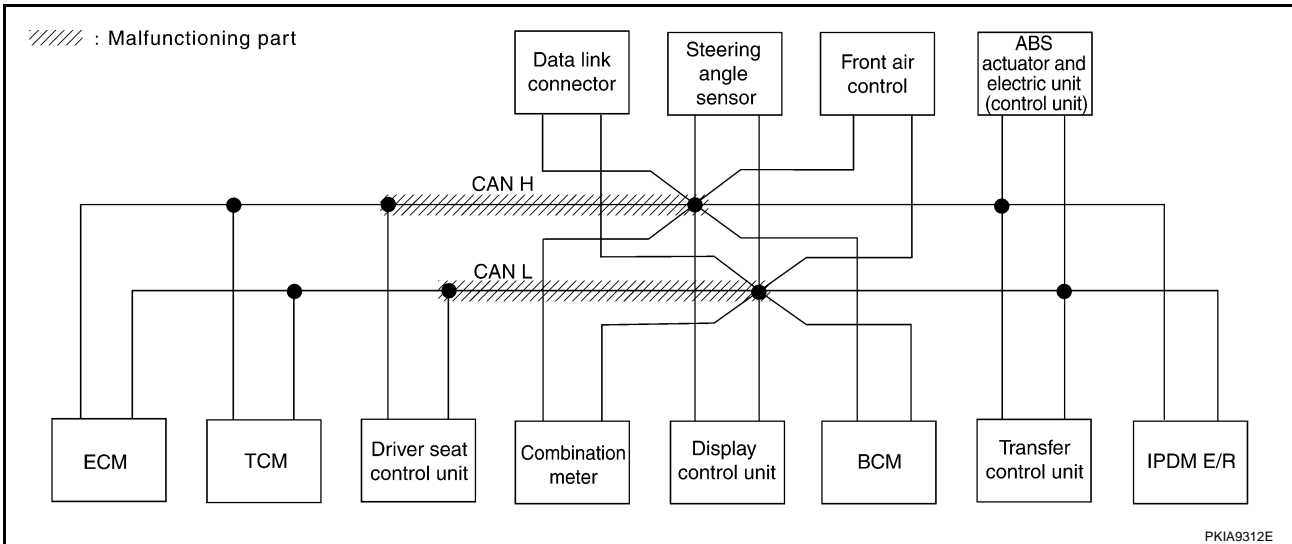

CAN SYSTEM (TYPE 6)


[CAN]

Case 3

Check harness between data link connector and IPDM E/R. Refer to [LAN-204, "Circuit Check Between Data Link Connector and IPDM E/R"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|------------|---------|------------|-------|-------------------|---------------|--------------|----------|------------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | | IPDM E/R | |
| | | | | ECM | TCM | METER /M&A | DISPLAY | BCM /SEC | STRG | Front air control | AWD/4WD /e4WD | VDC/TCS /ABS | | |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | — | UNKWN | UNKWN | UNKWN |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | — | UNKWN | UNKWN | — |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | — | — | — | — |
| Display control unit | — | CAN COMM | CAN CIRC 1 | CAN CIRC 3 | — | CAN CIRC 5 | — | CAN CIRC 2 | — | CAN CIRC 4 | — | — | — | CAN CIRC 7 |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — | — | UNKWN | — | — |
| ALL MODE AWD/4WD | No indication | — | UNKWN | UNKWN | UNKWN | — | — | — | UNKWN | — | — | UNKWN | — | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | — | UNKWN | — | UNKWN | — | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | — | UNKWN | — | — | — | — | — | — |

SKIB3367E

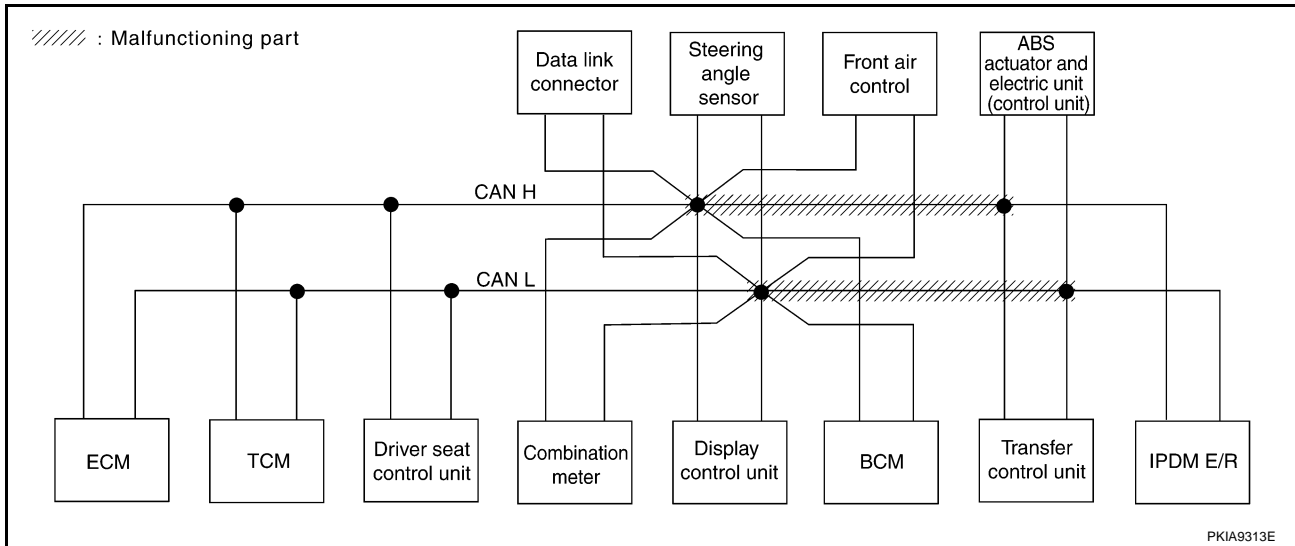

PKIA9313E

CAN SYSTEM (TYPE 6)


[CAN]

Case 4

Check ECM circuit. Refer to [LAN-205, "ECM Circuit Check"](#).

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|---------|------------|---------|------------|-------|-------------------|---------------|--------------|----------|------------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | | | |
| | | | | ECM | TCM | METER /M&A | DISPLAY | BCM /SEC | STRG | Front air control | AWD/4WD /e4WD | VDC/TCS /ABS | IPDM E/R | |
| ENGINE | — | NG | UNKWN ✓ | — | UNKWN ✓ | UNKWN ✓ | — | UNKWN ✓ | — | — | — | UNKWN ✓ | UNKWN ✓ | UNKWN ✓ |
| A/T | — | NG | UNKWN | UNKWN ✓ | — | UNKWN | — | — | — | — | — | UNKWN | UNKWN | — |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | — | — | — | — |
| Display control unit | — | CAN COMM | CAN CIRC 1 | CAN CIRC 3 | — | CAN CIRC 5 | — | CAN CIRC 2 | — | CAN CIRC 4 | — | — | — | CAN CIRC 7 |
| BCM | No indication | NG | UNKWN | UNKWN ✓ | — | UNKWN | — | — | — | — | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN ✓ | — | — | UNKWN | UNKWN | — | — | — | UNKWN | — | — |
| ALL MODE AWD/4WD | No indication | — | UNKWN | UNKWN ✓ | UNKWN | — | — | — | UNKWN | — | — | UNKWN | — | — |
| ABS | — | NG | UNKWN | UNKWN ✓ | UNKWN | — | — | — | UNKWN | — | UNKWN | — | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN ✓ | — | — | — | UNKWN | — | — | — | — | — | — |

SKIB3368E

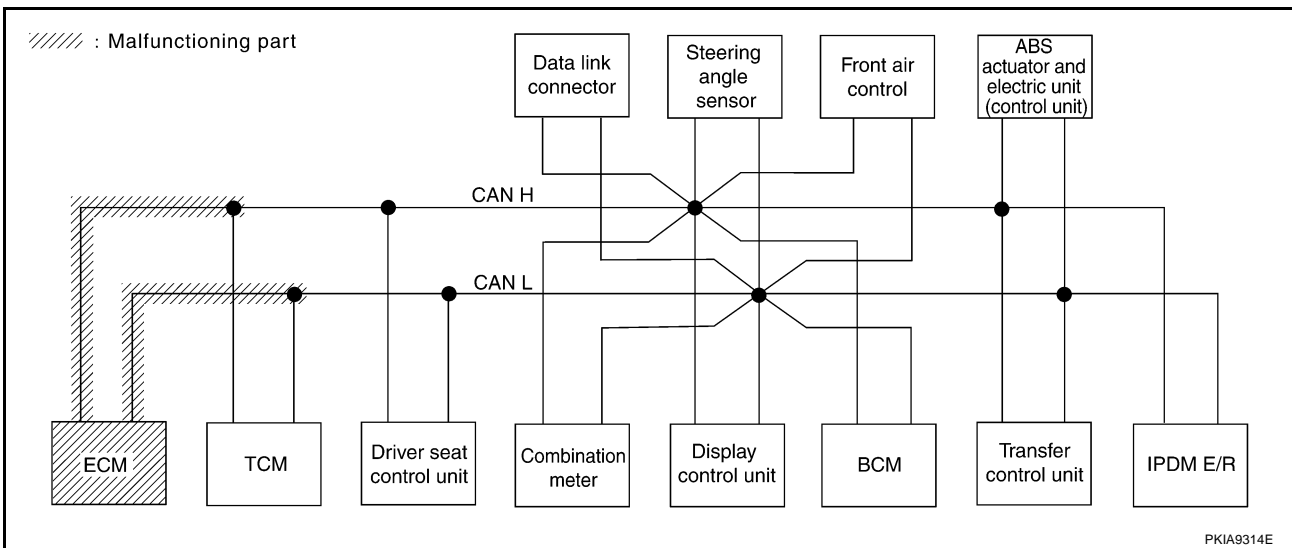

CAN SYSTEM (TYPE 6)


[CAN]

Case 5

Check TCM circuit. Refer to [LAN-205, "TCM Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|------------|---------|------------|-------|-------------------|---------------|--------------|------------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | | |
| | | | | ECM | TCM | METER /M&A | DISPLAY | BCM /SEC | STRG | Front air control | AWD/4WD /e4WD | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | UNKWN | UNKWN |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | UNKWN | UNKWN | — |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | — | — | — |
| Display control unit | — | CAN COMM | CAN CIRC 1 | CAN CIRC 3 | — | CAN CIRC 5 | — | CAN CIRC 2 | — | CAN CIRC 4 | — | — | CAN CIRC 7 |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — | — | UNKWN | — |
| ALL MODE AWD/4WD | No indication | — | UNKWN | UNKWN | UNKWN | — | — | — | UNKWN | — | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | — | UNKWN | — | UNKWN | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | — | UNKWN | — | — | — | — | — |

SKIB3369E

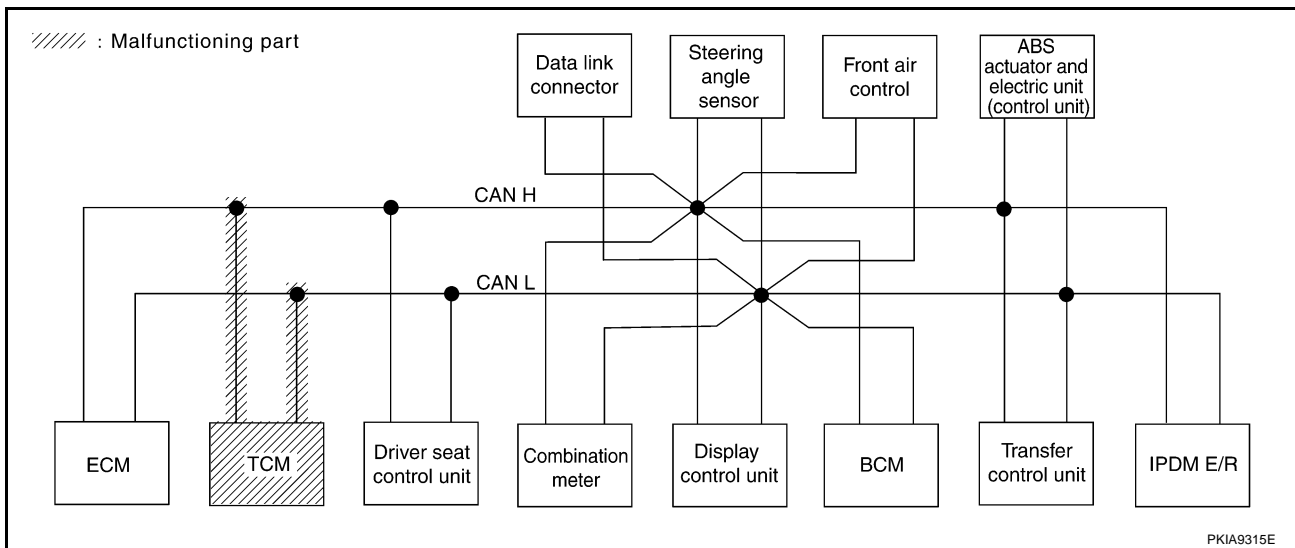


Case 6

Check driver seat control unit circuit. Refer to [LAN-206, "Driver Seat Control Unit Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|------|------------|---------|------------|------|-------------------|---------------|--------------|------------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | | |
| | | | | ECM | TCM | METER /M&A | DISPLAY | BCM /SEC | STRG | Front air control | AWD/4WD /e4WD | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKW | — | UNKW | UNKW | — | UNKW | — | — | UNKW | UNKW | UNKW |
| A/T | — | NG | UNKW | UNKW | — | UNKW | — | — | — | — | UNKW | UNKW | — |
| AUTO DRIVE POS. | No indication | NG | UNKW | — | UNKW | UNKW | — | UNKW | — | — | — | — | — |
| Display control unit | — | CAN COMM | CAN CIRC 1 | CAN CIRC 3 | — | CAN CIRC 5 | — | CAN CIRC 2 | — | CAN CIRC 4 | — | — | CAN CIRC 7 |
| BCM | No indication | NG | UNKW | UNKW | — | UNKW | — | — | — | — | — | — | UNKW |
| HVAC | No indication | — | UNKW | UNKW | — | — | UNKW | UNKW | — | — | — | UNKW | — |
| ALL MODE AWD/4WD | No indication | — | UNKW | UNKW | UNKW | — | — | — | UNKW | — | — | UNKW | — |
| ABS | — | NG | UNKW | UNKW | UNKW | — | — | — | UNKW | — | UNKW | — | — |
| IPDM E/R | No indication | — | UNKW | UNKW | — | — | — | UNKW | — | — | — | — | — |

SKIB3370E

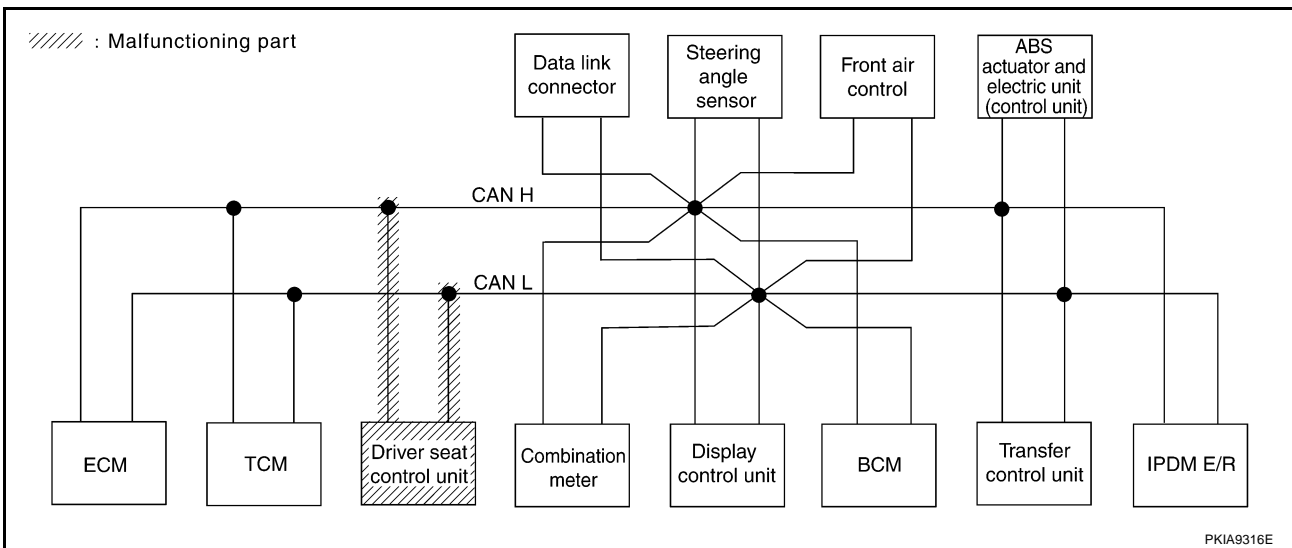

CAN SYSTEM (TYPE 6)


[CAN]

Case 7

Check combination meter circuit. Refer to [LAN-206, "Combination Meter Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|--------------|---------|------------|-------|-------------------|---------------|--------------|----------|------------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | | | |
| | | | | ECM | TCM | METER /M&A | DISPLAY | BCM /SEC | STRG | Front air control | AWD/4WD /e4WD | VDC/TCS /ABS | IPDM E/R | |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN ✓ | — | UNKWN | — | — | — | UNKWN | UNKWN | UNKWN |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN ✓ | — | — | — | — | — | UNKWN | UNKWN | — |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN ✓ | — | UNKWN | — | — | — | — | — | — |
| Display control unit | — | CAN COMM | CAN CIRC 1 | CAN CIRC 3 | — | CAN CIRC 5 ✓ | — | CAN CIRC 2 | — | CAN CIRC 4 | — | — | — | CAN CIRC 7 |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN ✓ | — | — | — | — | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — | — | UNKWN | — | — |
| ALL MODE AWD/4WD | No indication | — | UNKWN | UNKWN | UNKWN | — | — | — | UNKWN | — | — | UNKWN | — | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | — | UNKWN | — | UNKWN | — | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | — | UNKWN | — | — | — | — | — | — |

SKIB3371E

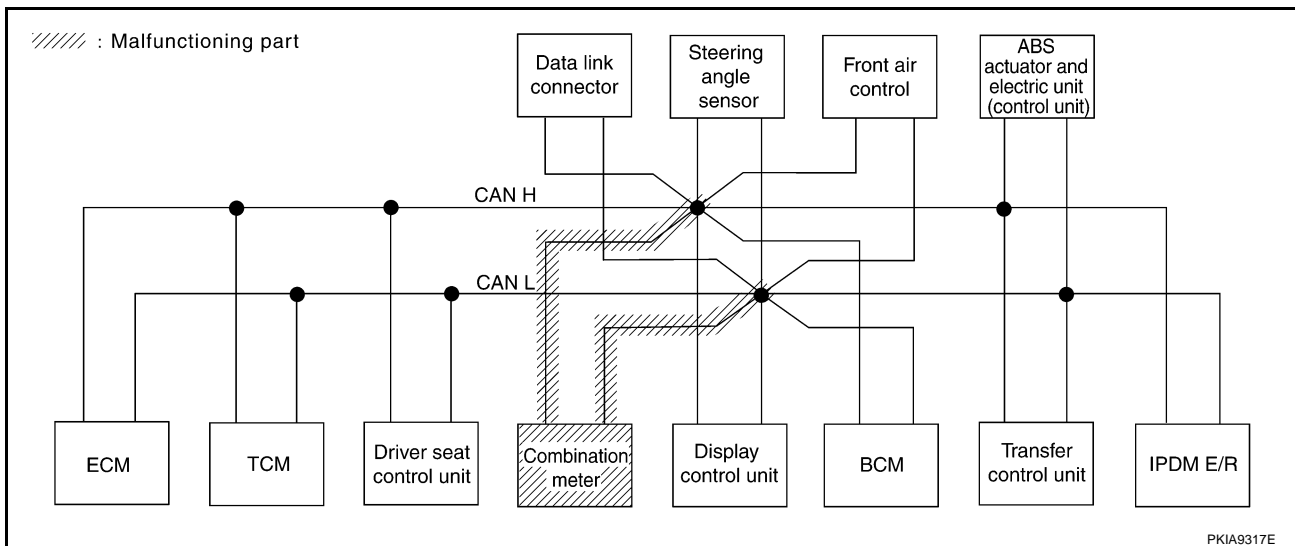


PKIA9317E

Case 8

Check display control unit circuit. Refer to [LAN-207, "Display Control Unit Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | | |
|----------------------|---------------|-----------------------|-----------------------|-----------------------|-------|-----------------------|---------|-----------------------|-------|-----------------------|---------------|--------------|-----------------------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | | |
| | | | | ECM | TCM | METER /M&A | DISPLAY | BCM /SEC | STRG | Front air control | AWD/4WD /e4WD | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | UNKWN | UNKWN |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | UNKWN | UNKWN | — |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | — | — | — |
| Display control unit | — | CAN COMM | CAN CIRC 1 | CAN CIRC 3 | — | CAN CIRC 5 | — | CAN CIRC 2 | — | CAN CIRC 4 | — | — | CAN CIRC 7 |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — | — | UNKWN | — |
| ALL MODE AWD/4WD | No indication | — | UNKWN | UNKWN | UNKWN | — | — | — | UNKWN | — | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | — | UNKWN | — | UNKWN | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | — | UNKWN | — | — | — | — | — |

SKIB3372E

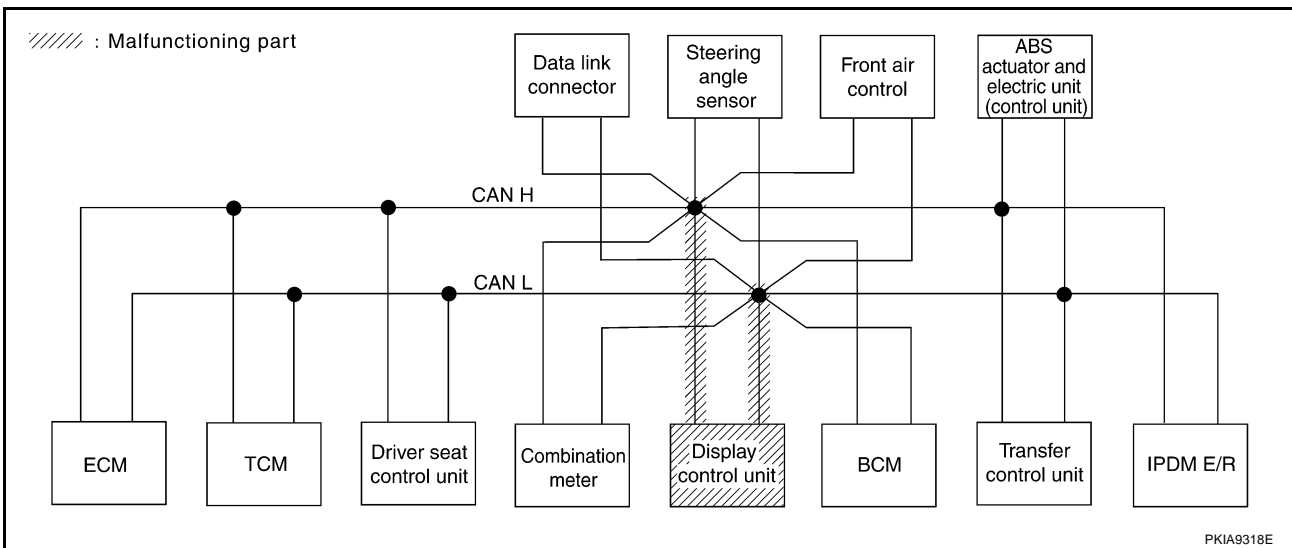

CAN SYSTEM (TYPE 6)


[CAN]

Case 9

Check BCM circuit. Refer to [LAN-207, "BCM Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|------------|---------|------------|-------|-------------------|---------------|--------------|------------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | | |
| | | | | ECM | TCM | METER /M&A | DISPLAY | BCM /SEC | STRG | Front air control | AWD/4WD /e4WD | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | UNKWN | UNKWN |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | UNKWN | UNKWN | — |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | — | — | — |
| Display control unit | — | CAN COMM | CAN CIRC 1 | CAN CIRC 3 | — | CAN CIRC 5 | — | CAN CIRC 2 | — | CAN CIRC 4 | — | — | CAN CIRC 7 |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — | — | UNKWN | — |
| ALL MODE AWD/4WD | No indication | — | UNKWN | UNKWN | UNKWN | — | — | — | UNKWN | — | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | — | UNKWN | — | UNKWN | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | — | UNKWN | — | — | — | — | — |

SKIB3373E

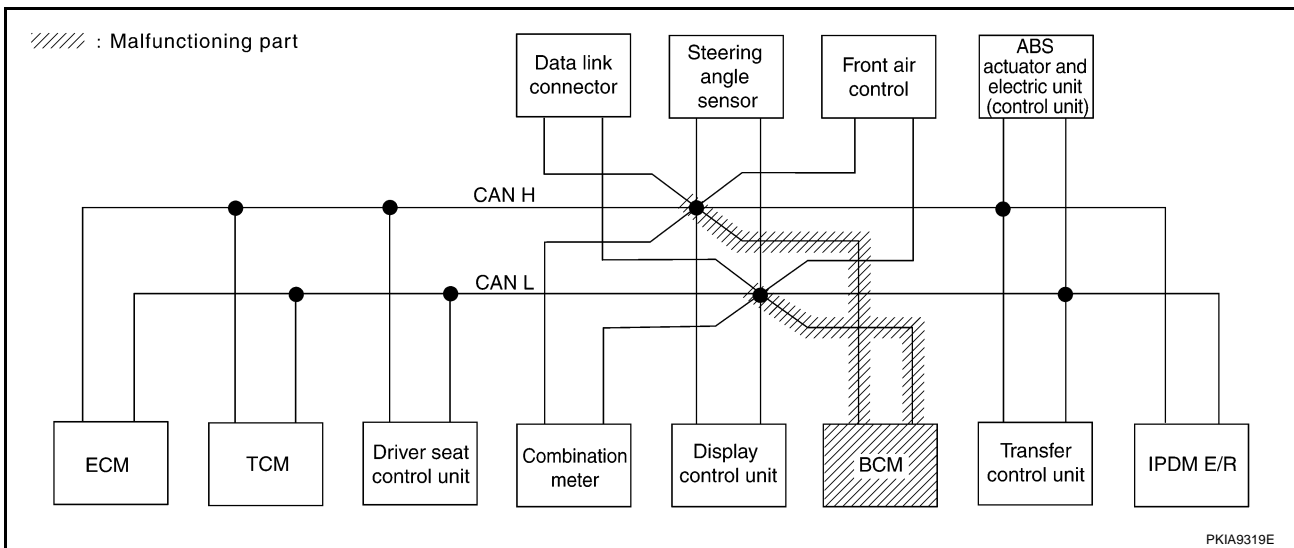

PKIA9319E

CAN SYSTEM (TYPE 6)


[CAN]

Case 10

Check data link connector circuit. Refer to [LAN-208, "Data Link Connector Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|--------|------------|---------|------------|--------|-------------------|---------------|--------------|------------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | | |
| | | | | ECM | TCM | METER /M&A | DISPLAY | BCM /SEC | STRG | Front air control | AWD/4WD /e4WD | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKW N | — | UNKW N | UNKW N | — | UNKW N | — | — | UNKW N | UNKW N | UNKW N |
| A/T | — | NG | UNKW N | UNKW N | — | UNKW N | — | — | — | — | UNKW N | UNKW N | — |
| AUTO DRIVE POS. | No indication | NG | UNKW N | — | UNKW N | UNKW N | — | UNKW N | — | — | — | — | — |
| Display control unit | — | CAN COMM | CAN CIRC 1 | CAN CIRC 3 | — | CAN CIRC 5 | — | CAN CIRC 2 | — | CAN CIRC 4 | — | — | CAN CIRC 7 |
| BCM | No indication | NG | UNKW N | UNKW N | — | UNKW N | — | — | — | — | — | — | UNKW N |
| HVAC | No indication | — | UNKW N | UNKW N | — | — | UNKW N | UNKW N | — | — | — | UNKW N | — |
| ALL MODE AWD/4WD | No indication | — | UNKW N | UNKW N | UNKW N | — | — | — | UNKW N | — | — | UNKW N | — |
| ABS | — | NG | UNKW N | UNKW N | UNKW N | — | — | — | UNKW N | — | UNKW N | — | — |
| IPDM E/R | No indication | — | UNKW N | UNKW N | — | — | — | UNKW N | — | — | — | — | — |

SKIB3374E

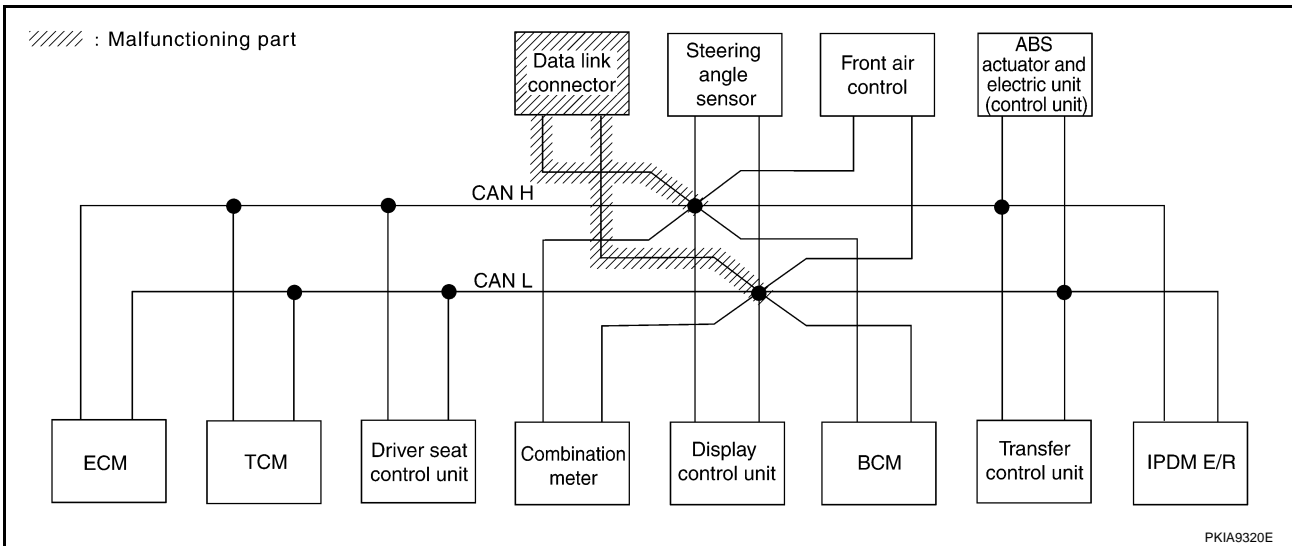

CAN SYSTEM (TYPE 6)


[CAN]

Case 11

Check steering angle sensor circuit. Refer to [LAN-208, "Steering Angle Sensor Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|------------|---------|------------|---------|-------------------|---------------|--------------|----------|------------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | | | |
| | | | | ECM | TCM | METER /M&A | DISPLAY | BCM /SEC | STRG | Front air control | AWD/4WD /e4WD | VDC/TCS /ABS | IPDM E/R | |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | — | UNKWN | UNKWN | UNKWN |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | — | UNKWN | UNKWN | — |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | — | — | — | — |
| Display control unit | — | CAN COMM | CAN CIRC 1 | CAN CIRC 3 | — | CAN CIRC 5 | — | CAN CIRC 2 | — | CAN CIRC 4 | — | — | — | CAN CIRC 7 |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — | — | UNKWN | — | — |
| ALL MODE AWD/4WD | No indication | — | UNKWN | UNKWN | UNKWN | — | — | — | UNKWN ✓ | — | — | UNKWN | — | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | — | UNKWN ✓ | — | UNKWN | — | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | — | UNKWN | — | — | — | — | — | — |

SKIB3375E

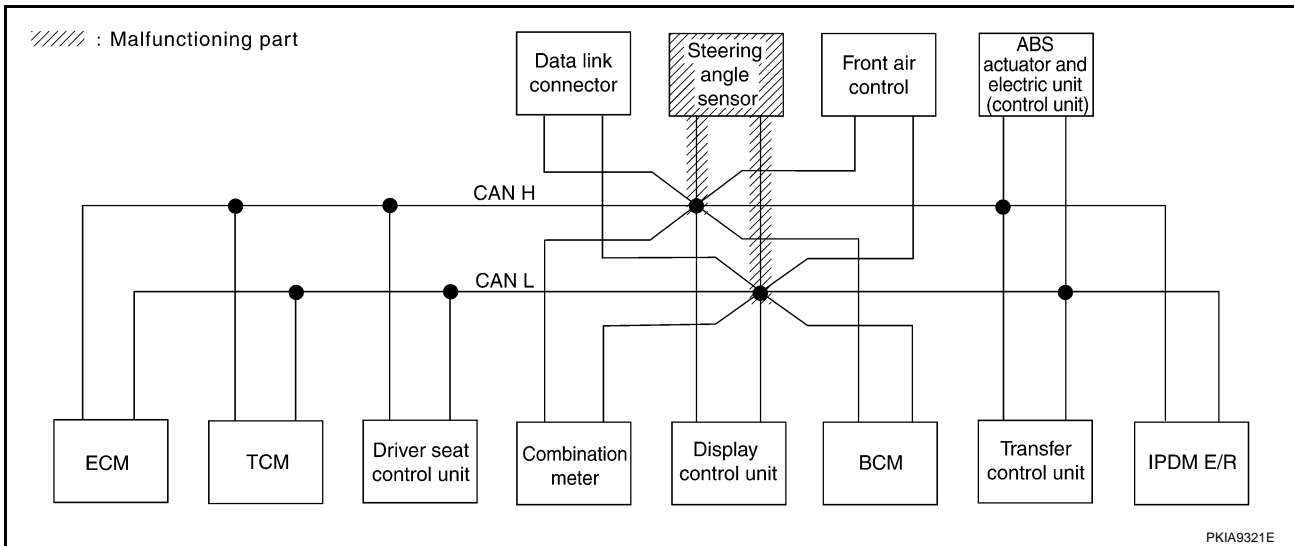

PKIA9321E

CAN SYSTEM (TYPE 6)


[CAN]

Case 12

Check front air control circuit. Refer to [LAN-209, "Front Air Control Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|------|------------|---------|------------|------|-------------------|---------------|--------------|----------|------------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | | | |
| | | | | ECM | TCM | METER /M&A | DISPLAY | BCM /SEC | STRG | Front air control | AWD/4WD /e4WD | VDC/TCS /ABS | IPDM E/R | |
| ENGINE | — | NG | UNKW | — | UNKW | UNKW | — | UNKW | — | — | — | UNKW | UNKW | UNKW |
| A/T | — | NG | UNKW | UNKW | — | UNKW | — | — | — | — | — | UNKW | UNKW | — |
| AUTO DRIVE POS. | No indication | NG | UNKW | — | UNKW | UNKW | — | UNKW | — | — | — | — | — | — |
| Display control unit | — | CAN COMM | CAN CIRC 1 | CAN CIRC 3 | — | CAN CIRC 5 | — | CAN CIRC 2 | — | CAN CIRC 4 | — | — | — | CAN CIRC 7 |
| BCM | No indication | NG | UNKW | UNKW | — | UNKW | — | — | — | — | — | — | — | UNKW |
| HVAC | No indication | — | UNKW | UNKW | — | — | UNKW | UNKW | — | — | — | UNKW | — | — |
| ALL MODE AWD/4WD | No indication | — | UNKW | UNKW | UNKW | — | — | — | UNKW | — | — | UNKW | — | — |
| ABS | — | NG | UNKW | UNKW | UNKW | — | — | — | UNKW | — | UNKW | — | — | — |
| IPDM E/R | No indication | — | UNKW | UNKW | — | — | — | UNKW | — | — | — | — | — | — |

SKIB3429E

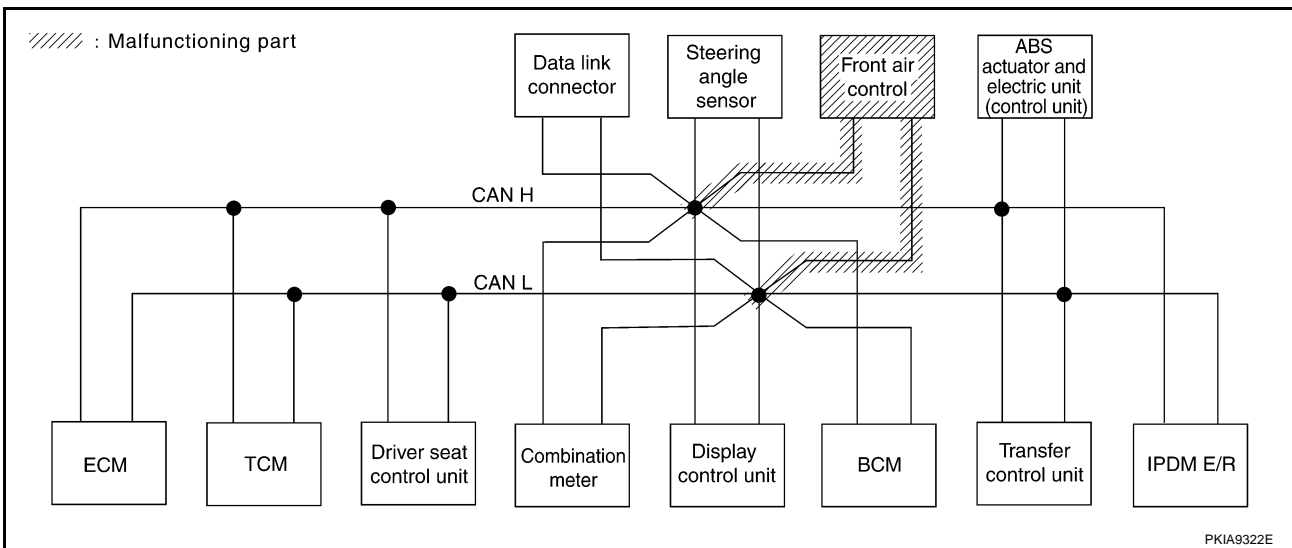

CAN SYSTEM (TYPE 6)


[CAN]

Case 13

Check transfer control unit circuit. Refer to [LAN-209, "Transfer Control Unit Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|------------|---------|------------|-------|-------------------|---------------|--------------|----------|------------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | | | |
| | | | | ECM | TCM | METER /M&A | DISPLAY | BCM /SEC | STRG | Front air control | AWD/4WD /e4WD | VDC/TCS /ABS | IPDM E/R | |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | — | UNKWN | UNKWN | UNKWN |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | — | UNKWN | UNKWN | — |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | — | — | — | — |
| Display control unit | — | CAN COMM | CAN CIRC 1 | CAN CIRC 3 | — | CAN CIRC 5 | — | CAN CIRC 2 | — | CAN CIRC 4 | — | — | — | CAN CIRC 7 |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — | — | UNKWN | — | — |
| ALL MODE AWD/4WD | No indication | — | UNKWN | UNKWN | UNKWN | — | — | — | UNKWN | — | — | UNKWN | — | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | — | UNKWN | — | UNKWN | — | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | — | UNKWN | — | — | — | — | — | — |

SKIB3376E

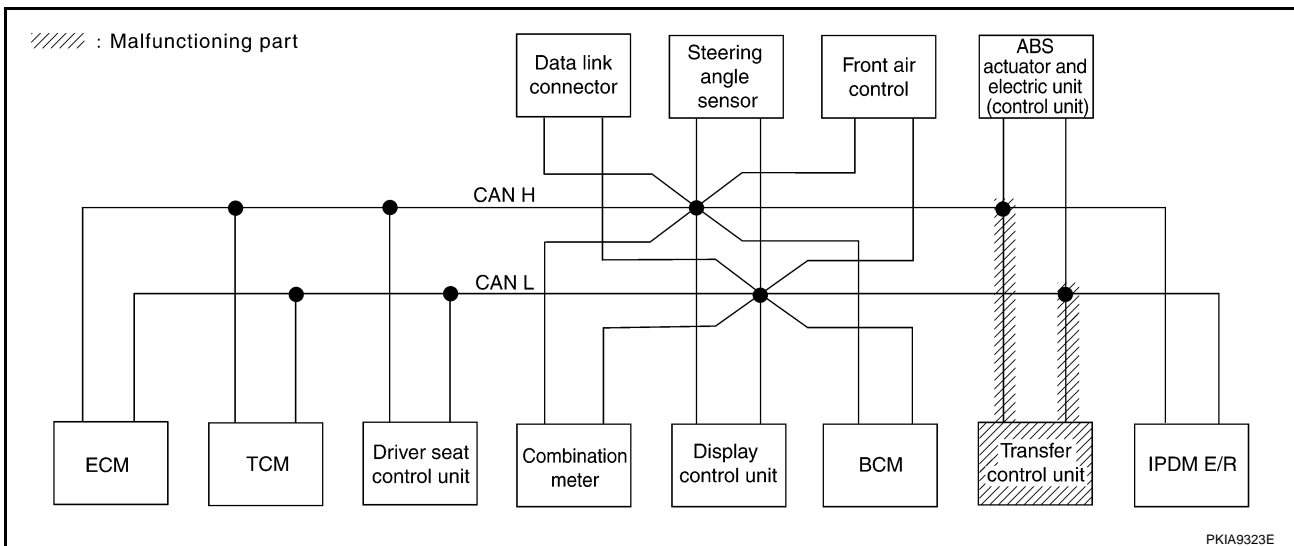


PKIA9323E

Case 14

Check ABS actuator and electric unit (control unit) circuit. Refer to [LAN-210, "ABS Actuator and Electric Unit \(Control Unit\) Circuit Check"](#).

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|------------|---------|------------|-------|-------------------|---------------|--------------|------------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | | |
| | | | | ECM | TCM | METER /M&A | DISPLAY | BCM /SEC | STRG | Front air control | AWD/4WD /e4WD | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | UNKWN | UNKWN |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | UNKWN | UNKWN | — |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | — | — | — |
| Display control unit | — | CAN COMM | CAN CIRC 1 | CAN CIRC 3 | — | CAN CIRC 5 | — | CAN CIRC 2 | — | CAN CIRC 4 | — | — | CAN CIRC 7 |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — | — | UNKWN | — |
| ALL MODE AWD/4WD | No indication | — | UNKWN | UNKWN | UNKWN | — | — | — | UNKWN | — | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | — | UNKWN | — | UNKWN | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | — | UNKWN | — | — | — | — | — |

SKIB3377E

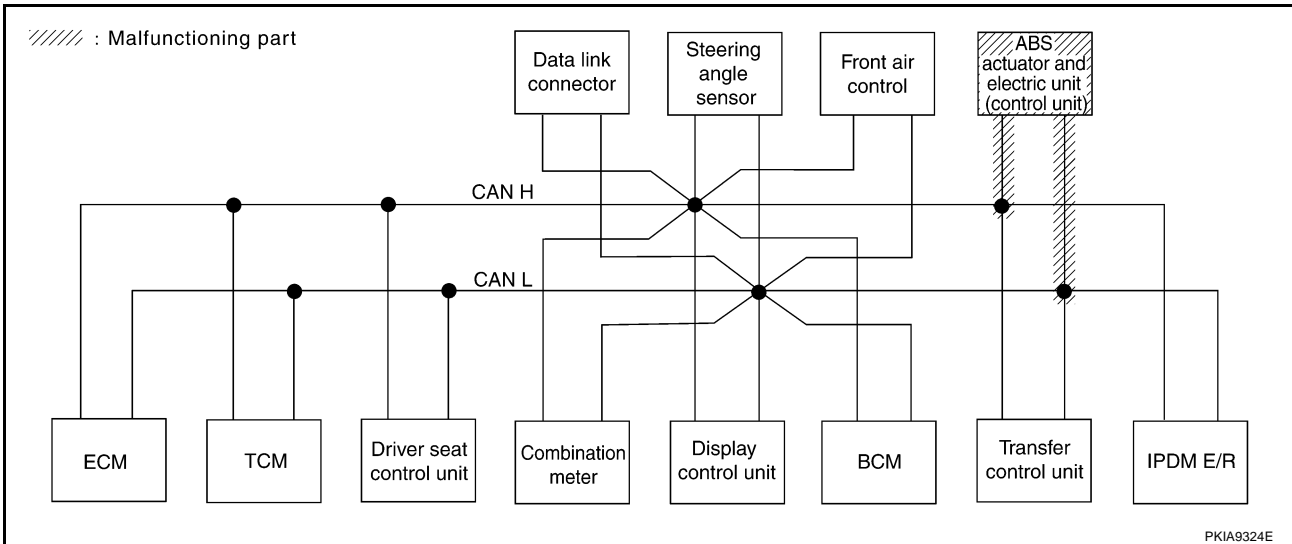

CAN SYSTEM (TYPE 6)


[CAN]

Case 15

Check IPDM E/R circuit. Refer to [LAN-210, "IPDM E/R Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | | |
|----------------------|-----------------|-----------------------|--------------------|-------------------|-------|------------|---------|------------|-------|-------------------|---------------|--------------|--------------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | | |
| | | | | ECM | TCM | METER /M&A | DISPLAY | BCM /SEC | STRG | Front air control | AWD/4WD /e4WD | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | UNKWN | UNKWN | UNKWN ✓ |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | UNKWN | UNKWN | — |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | — | — | — |
| Display control unit | — | CAN COMM | CAN CIRC 1 | CAN CIRC 3 | — | CAN CIRC 5 | — | CAN CIRC 2 | — | CAN CIRC 4 | — | — | CAN CIRC 7 ✓ |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | — | — | UNKWN ✓ |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — | — | UNKWN | — |
| ALL MODE AWD/4WD | No indication | — | UNKWN | UNKWN | UNKWN | — | — | — | UNKWN | — | — | UNKWN | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | — | UNKWN | — | UNKWN | — | — |
| IPDM E/R | No indication ✓ | — | UNKWN | UNKWN | — | — | — | UNKWN | — | — | — | — | — |

SKIB3378E

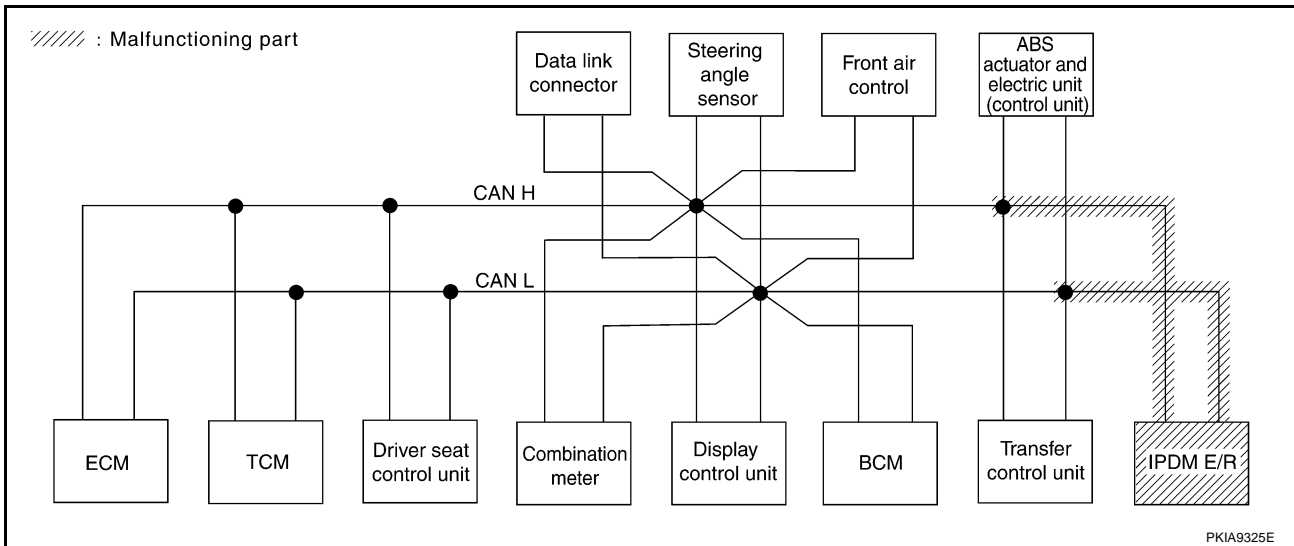

PKIA9325E

CAN SYSTEM (TYPE 6)

[CAN]

Case 16

Check CAN communication circuit. Refer to [LAN-211, "CAN Communication Circuit Check"](#).

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | | |
| | | | | ECM | TCM | METER /M&A | DISPLAY | BCM /SEC | STRG | Front air control | AWD/4WD /e4WD | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKW N | — | UNKW N | UNKW N | — | UNKW N | — | — | UNKW N | UNKW N | UNKW N |
| A/T | — | NG | UNKW N | UNKW N | — | UNKW N | — | — | — | — | UNKW N | UNKW N | — |
| AUTO DRIVE POS. | No indication | NG | UNKW N | — | UNKW N | UNKW N | — | UNKW N | — | — | — | — | — |
| Display control unit | — | CAN COMM | CAN CIRC 1 | CAN CIRC 3 | — | CAN CIRC 5 | — | CAN CIRC 2 | — | CAN CIRC 4 | — | — | CAN CIRC 7 |
| BCM | No indication | NG | UNKW N | UNKW N | — | UNKW N | — | — | — | — | — | — | UNKW N |
| HVAC | No indication | — | UNKW N | UNKW N | — | — | UNKW N | UNKW N | — | — | — | UNKW N | — |
| ALL MODE AWD/4WD | No indication | — | UNKW N | UNKW N | UNKW N | — | — | — | UNKW N | — | — | UNKW N | — |
| ABS | — | NG | UNKW N | UNKW N | UNKW N | — | — | — | UNKW N | — | UNKW N | — | — |
| IPDM E/R | No indication | — | UNKW N | UNKW N | — | — | — | UNKW N | — | — | — | — | — |

SKIB3379E

Case 17

Check IPDM E/R ignition relay circuit continuously sticks "OFF". Refer to [LAN-211, "IPDM E/R Ignition Relay Circuit Check"](#).

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | | |
| | | | | ECM | TCM | METER /M&A | DISPLAY | BCM /SEC | STRG | Front air control | AWD/4WD /e4WD | VDC/TCS /ABS | IPDM E/R |
| ENGINE | — | NG | UNKW N | — | UNKW N | UNKW N | — | UNKW N | — | — | UNKW N | UNKW N | UNKW N |
| A/T | — | NG | UNKW N | UNKW N | — | UNKW N | — | — | — | — | UNKW N | UNKW N | — |
| AUTO DRIVE POS. | No indication | NG | UNKW N | — | UNKW N | UNKW N | — | UNKW N | — | — | — | — | — |
| Display control unit | — | CAN COMM | CAN CIRC 1 | CAN CIRC 3 | — | CAN CIRC 5 | — | CAN CIRC 2 | — | CAN CIRC 4 | — | — | CAN CIRC 7 |
| BCM | No indication | NG | UNKW N | UNKW N | — | UNKW N | — | — | — | — | — | — | UNKW N |
| HVAC | No indication | — | UNKW N | UNKW N | — | — | UNKW N | UNKW N | — | — | — | UNKW N | — |
| ALL MODE AWD/4WD | No indication | — | UNKW N | UNKW N | UNKW N | — | — | — | UNKW N | — | — | UNKW N | — |
| ABS | — | NG | UNKW N | UNKW N | UNKW N | — | — | — | UNKW N | — | UNKW N | — | — |
| IPDM E/R | No indication | — | UNKW N | UNKW N | — | — | — | UNKW N | — | — | — | — | — |

SKIB3380E

Case 18

Check IPDM E/R ignition relay circuit continuously sticks "ON". Refer to [LAN-211, "IPDM E/R Ignition Relay Circuit Check"](#) .

| SELECT SYSTEM screen | | CAN DIAG SUPPORT MNTR | | | | | | | | | | | | |
|----------------------|---------------|-----------------------|--------------------|-------------------|-------|------------|---------|------------|-------|-------------------|---------------|--------------|----------|------------|
| | | Initial diagnosis | Transmit diagnosis | Receive diagnosis | | | | | | | | | | |
| | | | | ECM | TCM | METER /M&A | DISPLAY | BCM /SEC | STRG | Front air control | AWD/4WD /e4WD | VDC/TCS /ABS | IPDM E/R | |
| ENGINE | — | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | — | UNKWN | UNKWN | UNKWN |
| A/T | — | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | — | UNKWN | UNKWN | — |
| AUTO DRIVE POS. | No indication | NG | UNKWN | — | UNKWN | UNKWN | — | UNKWN | — | — | — | — | — | — |
| Display control unit | — | CAN COMM | CAN CIRC 1 | CAN CIRC 3 | — | CAN CIRC 5 | — | CAN CIRC 2 | — | CAN CIRC 4 | — | — | — | CAN CIRC 7 |
| BCM | No indication | NG | UNKWN | UNKWN | — | UNKWN | — | — | — | — | — | — | — | UNKWN |
| HVAC | No indication | — | UNKWN | UNKWN | — | — | UNKWN | UNKWN | — | — | — | UNKWN | — | — |
| ALL MODE AWD/4WD | No indication | — | UNKWN | UNKWN | UNKWN | — | — | — | UNKWN | — | — | UNKWN | — | — |
| ABS | — | NG | UNKWN | UNKWN | UNKWN | — | — | — | UNKWN | — | UNKWN | — | — | — |
| IPDM E/R | No indication | — | UNKWN | UNKWN | — | — | — | UNKWN | — | — | — | — | — | — |

SKIB3381E

Circuit Check Between TCM and Driver Seat Control Unit

UKS0019W

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector F33
 - Harness connector E19
 - Harness connector E34
 - Harness connector B40

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect A/T assembly connector and harness connector F33.
2. Check continuity between A/T assembly harness connector F9 terminals 3 (L), 8 (P) and harness connector F33 terminals 12 (L), 11 (P).

3 (L) - 12 (L) : Continuity should exist.
8 (P) - 11 (P) : Continuity should exist.

OK or NG

- OK >> GO TO 3.
 NG >> Repair harness.

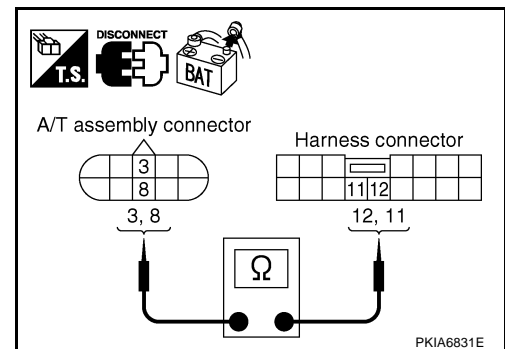


3. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect harness connector E34.
2. Check continuity between harness connector E19 terminals 12 (L), 11 (P) and harness connector E34 terminals 24 (L), 23 (P).

12 (L) - 24 (L) : Continuity should exist.
11 (P) - 23 (P) : Continuity should exist.

OK or NG

- OK >> GO TO 4.
- NG >> Repair harness.

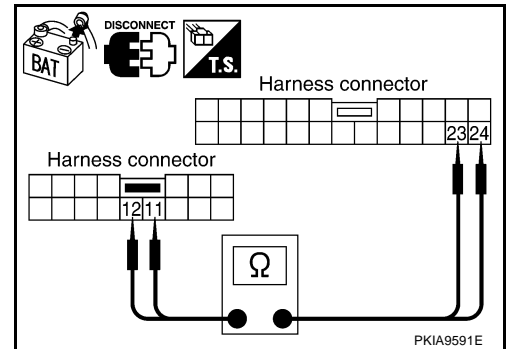


4. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect driver seat control unit connector.
2. Check continuity between harness connector B40 terminals 24 (L), 23 (P) and driver seat control unit harness connector P2 terminals 3 (L), 19 (P).

24 (L) - 3 (L) : Continuity should exist.
23 (P) - 19 (P) : Continuity should exist.

OK or NG

- OK >> Connect all the connectors and diagnose again. Refer to [LAN-182, "Work Flow"](#).
- NG >> Repair harness.

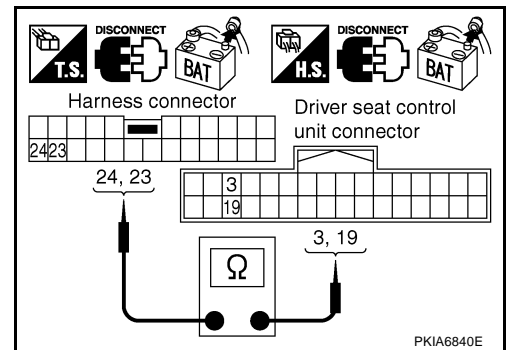

Circuit Check Between Driver Seat Control Unit and Data Link Connector

UKS0019X

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B69
 - Harness connector M40

OK or NG

- OK >> GO TO 2.
- NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect driver seat control unit connector and harness connector B69.
2. Check continuity between driver seat control unit harness connector P2 terminals 3 (L), 19 (P) and harness connector B69 terminals 51J (L), 52J (P).

3 (L) - 51J (L) : Continuity should exist.
19 (P) - 52J (P) : Continuity should exist.

OK or NG

- OK >> GO TO 3.
- NG >> Repair harness.

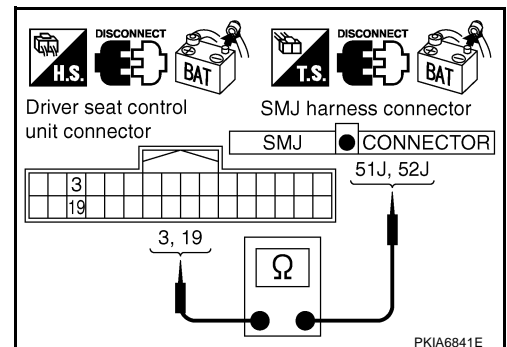

A
B
C
D
E
F
G
H
I
J

LAN

3. CHECK HARNESS FOR OPEN CIRCUIT


Check continuity between harness connector M40 terminals 51J (L), 52J (P) and data link connector M22 terminals 6 (L), 14 (P).

51J (L) - 6 (L) : Continuity should exist.

52J (P) - 14 (P) : Continuity should exist.

OK or NG

- OK >> Connect all the connectors and diagnose again. Refer to [LAN-182, "Work Flow"](#).
- NG >> Repair harness.

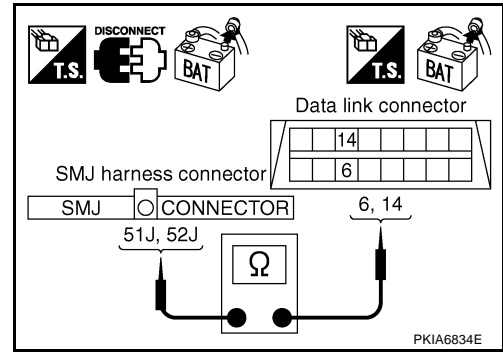

Circuit Check Between Data Link Connector and IPDM E/R

UKS0019Y

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M31
 - Harness connector E152

OK or NG

- OK >> GO TO 2.
- NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT


1. Disconnect harness connector M31.
2. Check continuity between data link connector M22 terminals 6 (L), 14 (P) and harness connector M31 terminals 31G (L), 42G (P).

6 (L) - 31G (L) : Continuity should exist.

14 (P) - 42G (P) : Continuity should exist.

OK or NG

- OK >> GO TO 3.
- NG >> Repair harness.

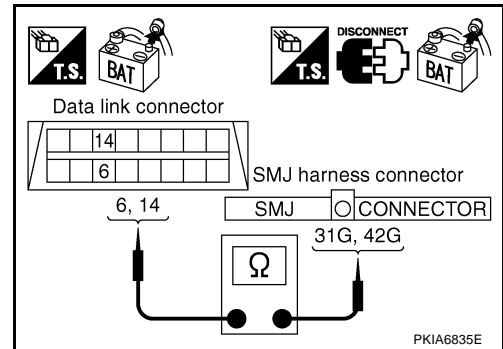

3. CHECK HARNESS FOR OPEN CIRCUIT


1. Disconnect IPDM E/R connector.
2. Check continuity between harness connector E152 terminals 31G (L), 42G (P) and IPDM E/R harness connector E122 terminals 39 (L), 40 (P).

31G (L) - 39 (L) : Continuity should exist.

42G (P) - 40 (P) : Continuity should exist.

OK or NG

- OK >> Connect all the connectors and diagnose again. Refer to [LAN-182, "Work Flow"](#).
- NG >> Repair harness.

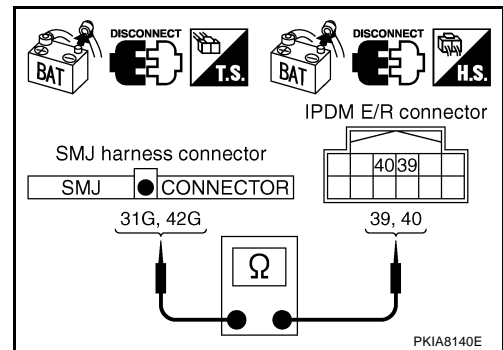

ECM Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (control module side and harness side).
 - ECM connector
 - Harness connector E19
 - Harness connector F33

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect ECM connector.
2. Check resistance between ECM harness connector E16 terminals 94 (L) and 86 (P).

94 (L) - 86 (P) : Approx. 108 - 132 Ω

OK or NG

- OK >> Replace ECM.
 NG >> Repair harness between ECM and A/T assembly.

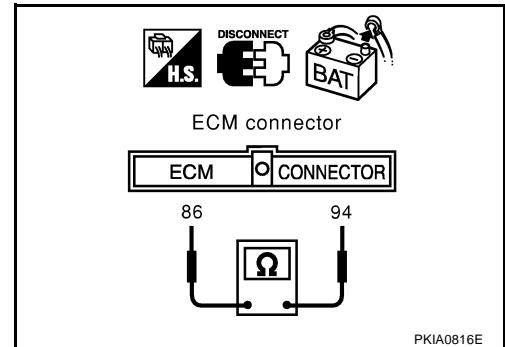**TCM Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of A/T assembly for damage, bend and loose connection (control module side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect A/T assembly connector.
2. Check resistance between A/T assembly harness connector F9 terminals 3 (L) and 8 (P).

3 (L) - 8 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace A/T assembly.
 NG >> Repair harness between A/T assembly and harness connector F33.

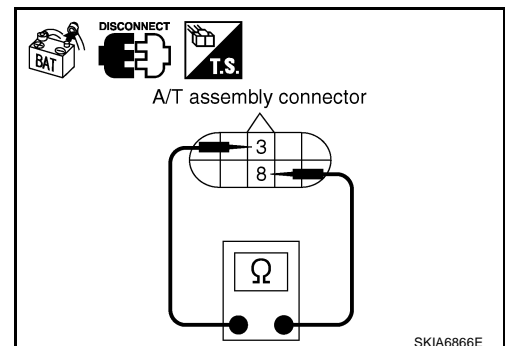

Driver Seat Control Unit Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of driver seat control unit for damage, bend and loose connection (control unit side and harness side).

OK or NG

- OK >> GO TO 2.
NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect driver seat control unit connector.
2. Check resistance between driver seat control unit harness connector P2 terminals 3 (L) and 19 (P).

3 (L) - 19 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace driver seat control unit.
NG >> Repair harness between driver seat control unit and harness connector B40.

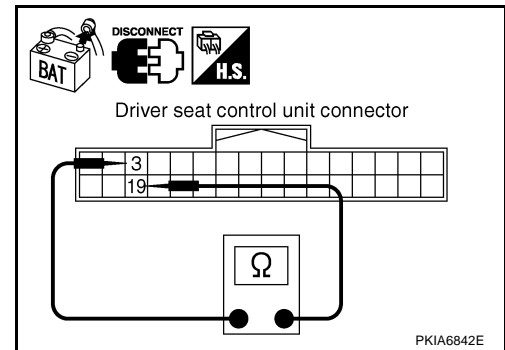

Combination Meter Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of combination meter for damage, bend and loose connection (meter side and harness side).

OK or NG

- OK >> GO TO 2.
NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect combination meter connector.
2. Check resistance between combination meter harness connector M24 terminals 11 (L) and 12 (P).

11 (L) - 12 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace combination meter.
NG >> Repair harness between combination meter and data link connector.

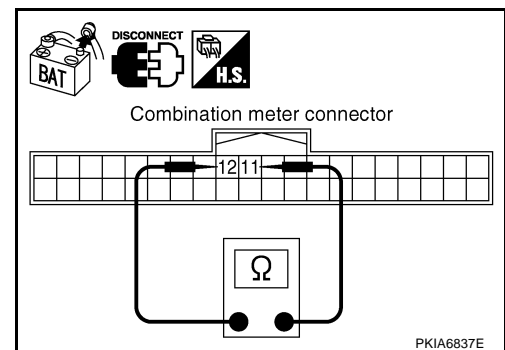

Display Control Unit Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of display control unit for damage, bend and loose connection (control unit side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect display control unit connector.
2. Check resistance between display control unit harness connector M95 terminals 25 (L) and 26 (P).

25 (L) - 26 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace display control unit.
 NG >> Repair harness between display control unit and data link connector.

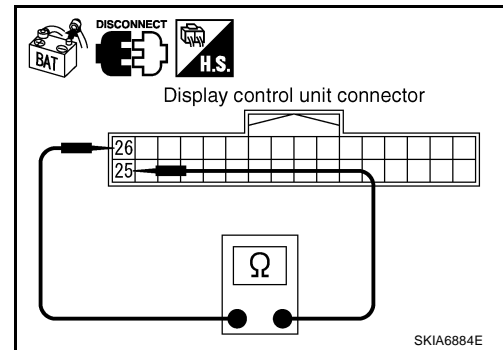**BCM Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of BCM for damage, bend and loose connection (control module side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect BCM connector.
2. Check resistance between BCM harness connector M18 terminals 39 (L) and 40 (P).

39 (L) - 40 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace BCM. Refer to [BCS-20, "Removal and Installation of BCM"](#) .
 NG >> Repair harness between BCM and data link connector.

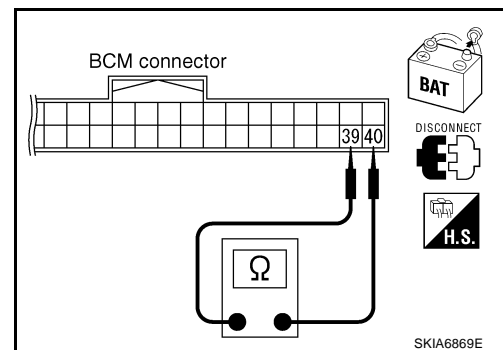

Data Link Connector Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check the terminals and connector of data link connector for damage, bend and loose connection (connector side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

Check resistance between data link connector M22 terminals 6 (L) and 14 (P).

6 (L) - 14 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Diagnose again. Refer to [LAN-182, "Work Flow"](#) .
 NG >> Repair harness between data link connector and combination meter.

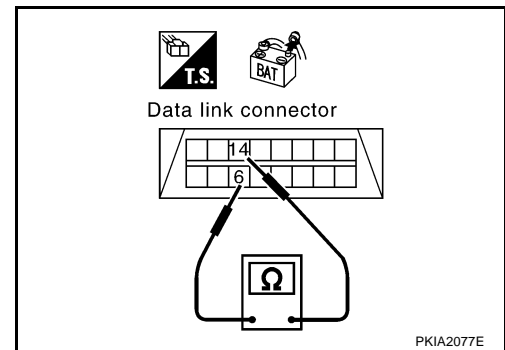

Steering Angle Sensor Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of steering angle sensor for damage, bend and loose connection (sensor side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect steering angle sensor connector.
2. Check resistance between steering angle sensor harness connector M47 terminals 3 (L) and 4 (P).

3 (L) - 4 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace steering angle sensor.
 NG >> Repair harness between steering angle sensor and data link connector.

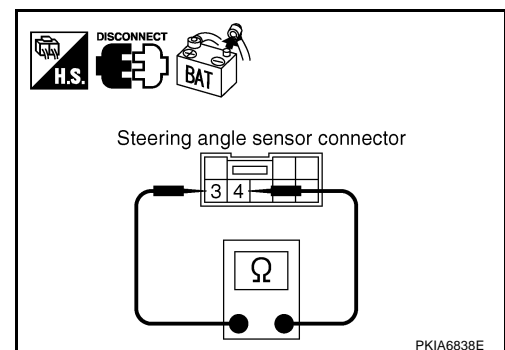

Front Air Control Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of front air control for damage, bend and loose connection (unit side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect front air control connector.
2. Check resistance between front air control harness connector M50 terminals 34 (L) and 35 (P).

34 (L) - 35 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace front air control.
 NG >> Repair harness between front air control and data link connector.

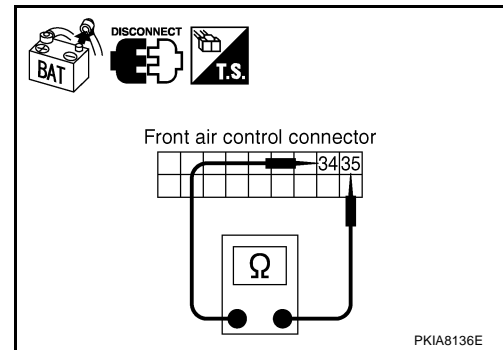**Transfer Control Unit Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of transfer control unit for damage, bend and loose connection (control unit side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect transfer control unit connector.
2. Check resistance between transfer control unit harness connector E142 terminals 7 (L) and 8 (P).

7 (L) - 8 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace transfer control unit.
 NG >> Repair harness between transfer control unit and harness connector E152.

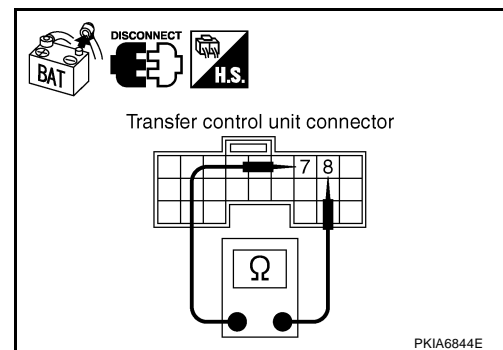

ABS Actuator and Electric Unit (Control Unit) Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of ABS actuator and electric unit (control unit) for damage, bend and loose connection (control unit side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect ABS actuator and electric unit (control unit) connector.
2. Check resistance between ABS actuator and electric unit (control unit) harness connector E125 terminals 11 (L) and 15 (P).

11 (L) - 15 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace ABS actuator and electric unit (control unit).
 NG >> Repair harness between ABS actuator and electric unit (control unit) and harness connector E152.

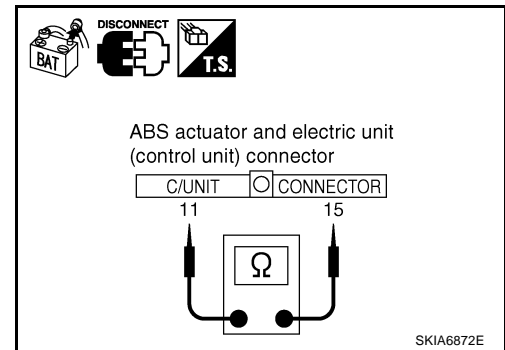**IPDM E/R Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of IPDM E/R for damage, bend and loose connection (control module side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check resistance between IPDM E/R harness connector E122 terminals 39 (L) and 40 (P).

39 (L) - 40 (P) : Approx. 108 - 132 Ω

OK or NG

- OK >> Replace IPDM E/R.
 NG >> Repair harness between IPDM E/R and harness connector E152.

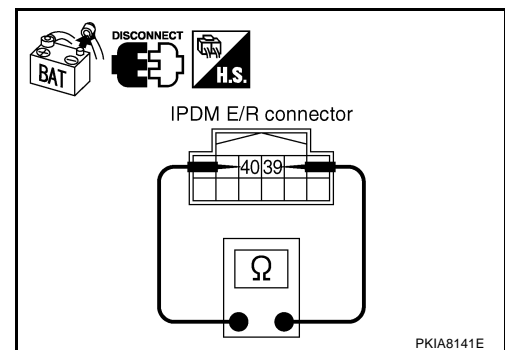

CAN Communication Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Disconnect the following module and control unit connectors and check terminals for deformation, disconnection, looseness or damage.
 - ECM
 - A/T assembly
 - Driver seat control unit
 - Combination meter
 - Display control unit
 - BCM
 - Steering angle sensor
 - Front air control
 - Transfer control unit
 - ABS actuator and electric unit (control unit)
 - IPDM E/R

OK or NG

- OK >> GO TO 2.
 NG >> Repair or replace as necessary.


2. CHECK HARNESS FOR SHORT CIRCUIT

With all module and control unit connectors disconnected, check continuity between data link connector M22 terminals 6 (L) and 14 (P).

6 (L) - 14 (P) : Continuity should not exist.

OK or NG

- OK >> GO TO 3.
 NG >> Repair harness.

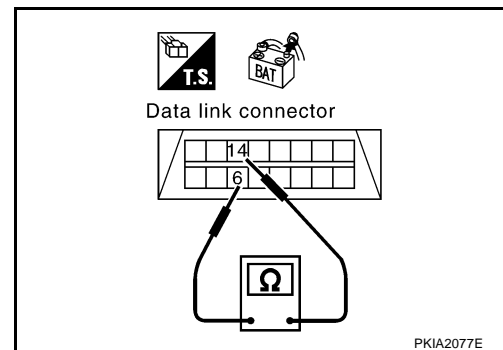**3. CHECK HARNESS FOR SHORT CIRCUIT**


Check continuity between data link connector M22 terminals 6 (L), 14 (P) and ground.

6 (L) - Ground : Continuity should not exist.

14 (P) - Ground : Continuity should not exist.

OK or NG

- OK >> Check ECM and IPDM E/R. Refer to [LAN-212, "ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION"](#).
 NG >> Repair harness.

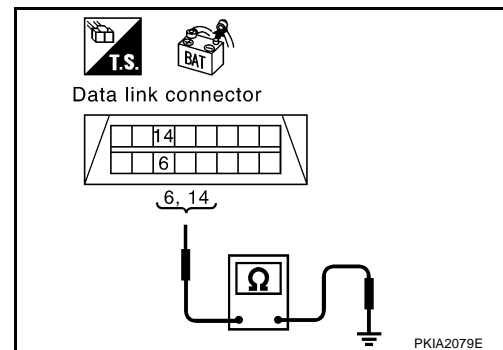**IPDM E/R Ignition Relay Circuit Check**

Check the following. If no malfunction is found, replace the IPDM E/R.

- IPDM E/R power supply circuit. Refer to [PG-26, "IPDM E/R Power/Ground Circuit Inspection"](#).
- Ignition power supply circuit. Refer to [PG-13, "IGNITION POWER SUPPLY — IGNITION SW. IN ON AND/OR START"](#).

Component Inspection**ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION**

- Remove ECM and IPDM E/R from vehicle.
- Check resistance between ECM terminals 94 and 86.
- Check resistance between IPDM E/R terminals 39 and 40.

| Unit | Terminal | Resistance value (Ω) (Approx.) |
|----------|----------|--|
| ECM | 94 - 86 | 108 - 132 |
| IPDM E/R | 39 - 40 | |

