

PCS

SECTION
POWER CONTROL SYSTEM

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

CONTENTS

IPDM E/R	
FUNCTION DIAGNOSIS	3
RELAY CONTROL SYSTEM	3
System Diagram	3
System Description	4
Component Parts Location	5
POWER CONTROL SYSTEM	6
System Diagram	6
System Description	6
SIGNAL BUFFER SYSTEM	7
System Diagram	7
System Description	7
POWER CONSUMPTION CONTROL SYSTEM	8
System Diagram	8
System Description	8
Component Parts Location	9
DIAGNOSIS SYSTEM (IPDM E/R)	10
Diagnosis Description	10
CONSULT - III Function (IPDM E/R)	12
COMPONENT DIAGNOSIS	15
U1000 CAN COMM CIRCUIT	15
Description	15
DTC Logic	15
Diagnosis Procedure	15
POWER SUPPLY AND GROUND CIRCUIT	16
Diagnosis Procedure	16
ECU DIAGNOSIS	17
IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)	17
Reference Value	17
Terminal Layout	19
Physical Values	19
Wiring Diagram	23
Fail Safe	26
DTC Index	28
PRECAUTION	29
PRECAUTIONS	29
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	29
REMOVAL AND INSTALLATION	30
IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)	30
Removal and Installation of IPDM E/R	30
POWER DISTRIBUTION SYSTEM	
BASIC INSPECTION	31
DIAGNOSIS AND REPAIR WORKFLOW	31
Work Flow	31
FUNCTION DIAGNOSIS	34
POWER DISTRIBUTION SYSTEM	34
System Description	34
Component Parts Location	34
Component Description	34
DIAGNOSIS SYSTEM (BCM)	35
COMMON ITEM	35
COMMON ITEM : Diagnosis Description	35
COMMON ITEM : CONSULT-III Function	35
INTELLIGENT KEY	35
INTELLIGENT KEY : CONSULT-III Function (BCM - INTELLIGENT KEY)	35
COMPONENT DIAGNOSIS	36

U1000 CAN COMM CIRCUIT	36	Wiring Diagram	39
Description	36	DTC Inspection Priority Chart	42
DTC Logic	36	DTC Index	42
Diagnosis Procedure	36		
POWER SUPPLY AND GROUND CIRCUIT	37		
BCM	37		
BCM : Diagnosis Procedure	37	Reference Value	43
BCM : Special Repair Requirement	37	Terminal Layout	43
IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)	37	Physical Values	43
IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) : Diagnosis Procedure	37	Wiring Diagram	44
ECU DIAGNOSIS	38	Fail Safe	47
BCM (BODY CONTROL MODULE)	38	DTC Index	47
Reference Value	38		
Terminal Layout	38		
Physical Values	38		
ON-VEHICLE MAINTENANCE	48		
PRE-INSPECTION FOR DIAGNOSTIC	48		
Basic Inspection	48		
ON-VEHICLE REPAIR	49		
BCM (BODY CONTROL MODULE)	49		
Removal and Installation	49		


< FUNCTION DIAGNOSIS >

FUNCTION DIAGNOSIS

RELAY CONTROL SYSTEM

System Diagram

INFOID:000000001546783

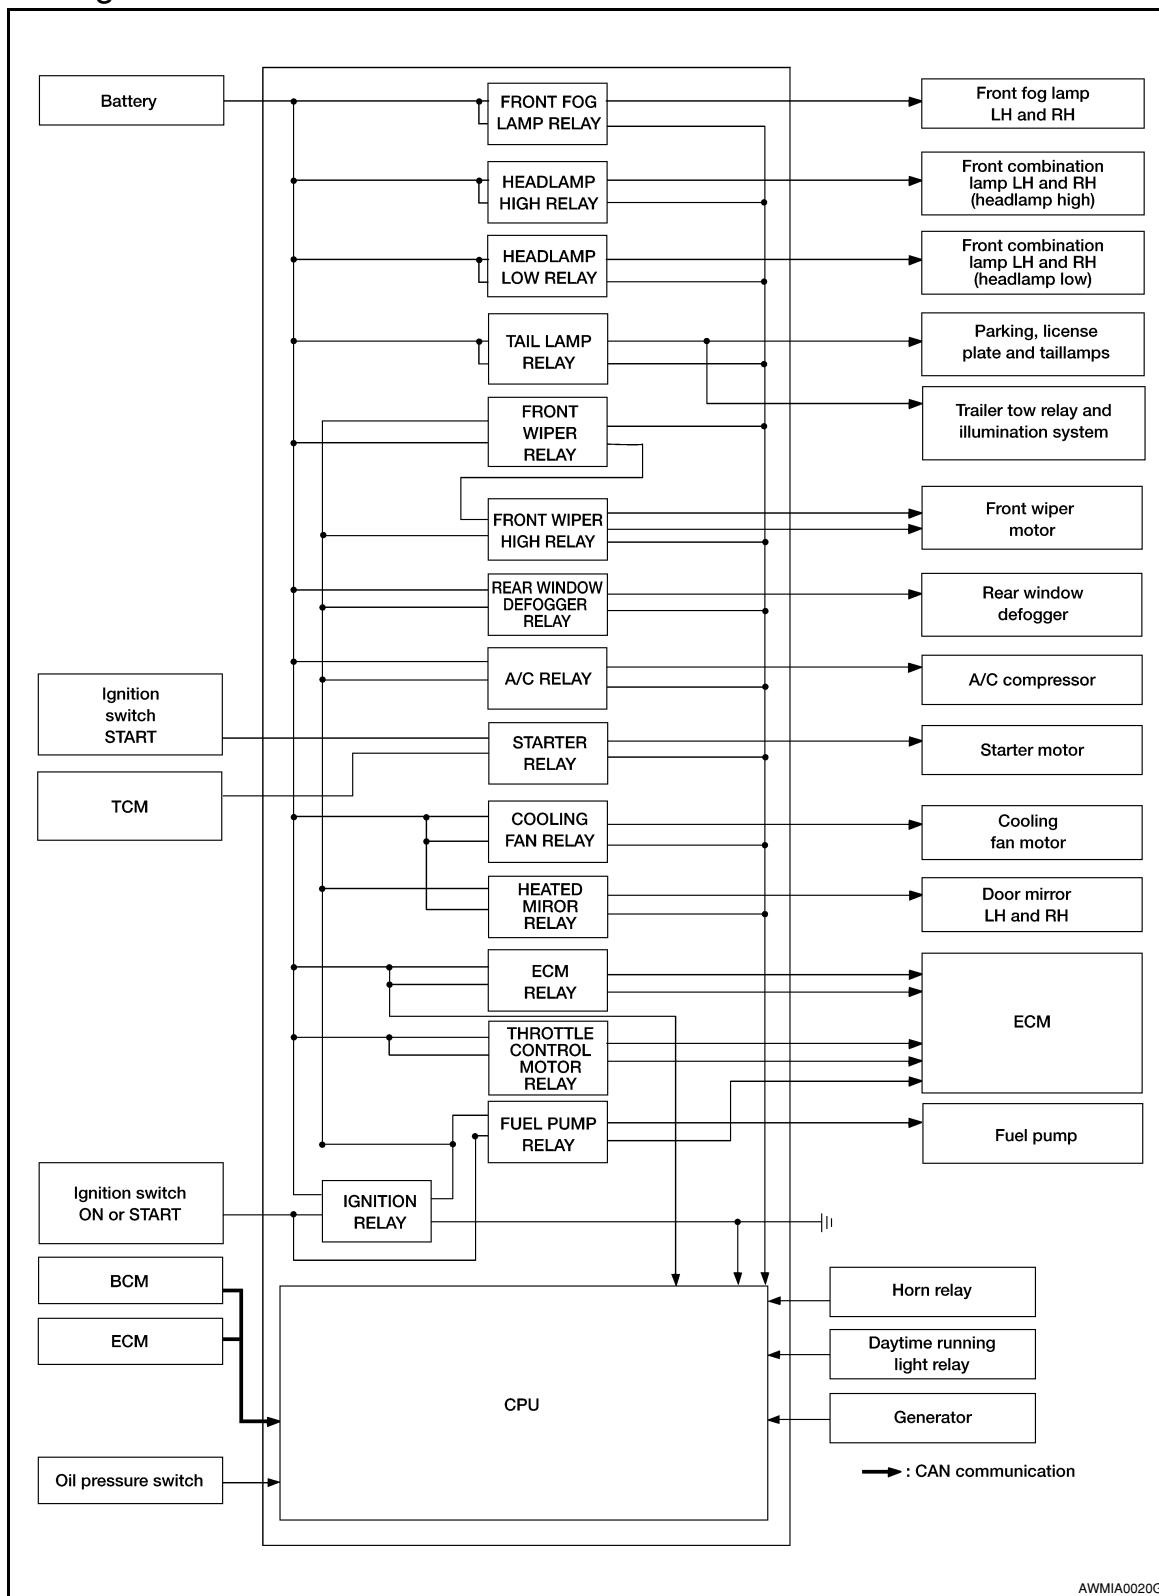

A
B
C
D
E
F
G
H
I
J
K
L
PCS
N
O
P

RELAY CONTROL SYSTEM

[IPDM E/R]

< FUNCTION DIAGNOSIS >

System Description

INFOID:000000001546784

IPDM E/R activates the internal control circuit to perform the relay ON-OFF control according to the input signals from various sensors and the request signals received from control units via CAN communication.

CAUTION:

IPDM E/R integrated relays cannot be removed.

Control relay	Input/output	Transmit unit	Control part	Reference page
Front fog lamp relay	Front fog lamp request signal	BCM (CAN)	Front fog lamps	EXL-30
• Headlamp high relay • Headlamp low relay	• High beam request signal • Low beam request signal	BCM (CAN)	• Headlamp high • Headlamp low	EXL-26 EXL-28
Tail lamp relay	Position light request signal	BCM (CAN)	• Parking lamps • License plate lamps • Tail lamps • Trailer tow relay • Illumination system	EXL-93
• Front wiper relay • Front wiper high relay	Front wiper request signal	BCM (CAN)	Front wiper motor	WW-4
Rear window defogger relay	Rear window defogger request signal	BCM (CAN)	Rear window defogger	DEF-5
A/C relay	A/C request signal	• BCM (CAN) • ECM (CAN)	A/C compressor	HAC-12
Starter relay	Ignition switch START signal	TCM	Starter motor	STR-7
Cooling fan relay	Cooling fan request signal	ECM (CAN)	Cooling fan relay	EC-42
Heated mirror relay	Heated mirror request signal	BCM (CAN)	Door mirrors	DEF-5
ECM relay	ECM relay control signal	ECM (CAN)	ECM relay	EC-34
Throttle control motor relay	Throttle control motor control signal	ECM (CAN)	Throttle control motor relay	EC-34
Fuel pump relay	Fuel pump request signal	ECM (CAN)	Fuel pump	EC-34
Ignition relay	Ignition switch ON signal	Ignition switch	Ignition relay	EC-37


RELAY CONTROL SYSTEM

[IPDM E/R]

< FUNCTION DIAGNOSIS >

Component Parts Location

INFOID:000000001546785

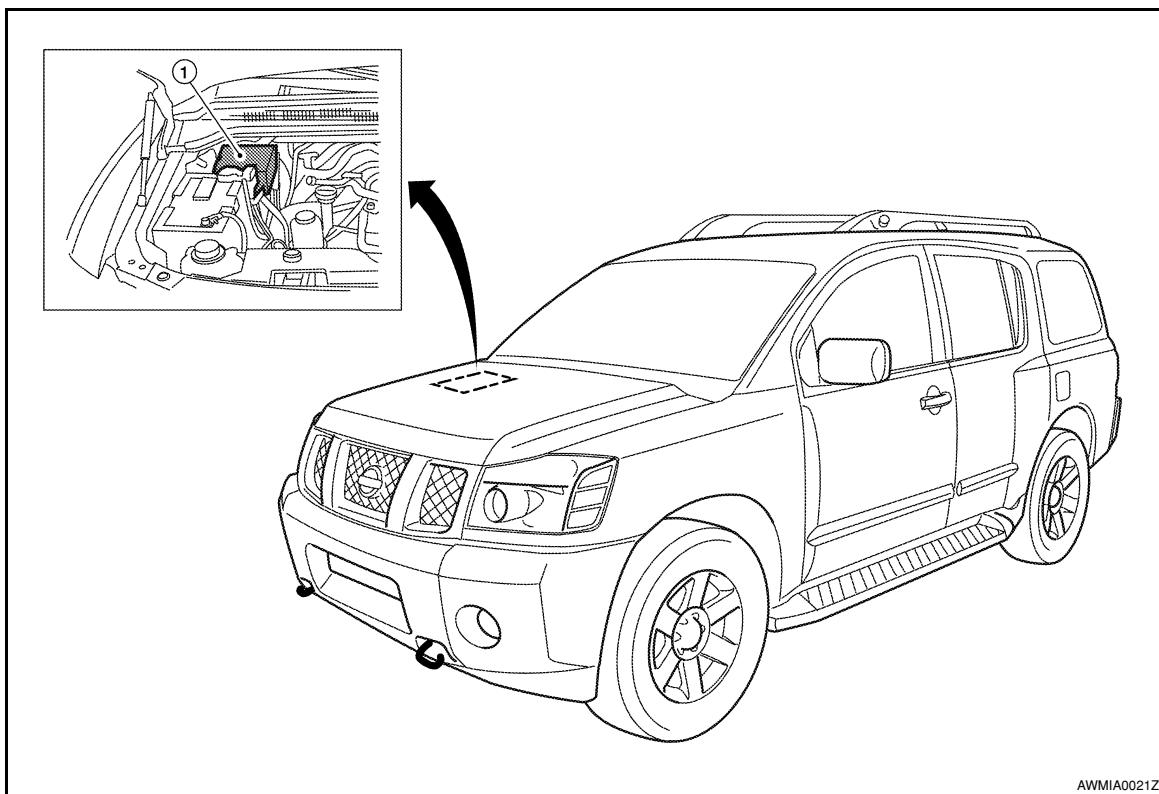

1. IPDM E/R E118, E119, E120, E121,
E122, E123, E124

A
B
C
D
E
F
G
H
I
J
K
L

PCS

N
O
P

POWER CONTROL SYSTEM


< FUNCTION DIAGNOSIS >

[IPDM E/R]

POWER CONTROL SYSTEM

System Diagram

INFOID:000000001546786

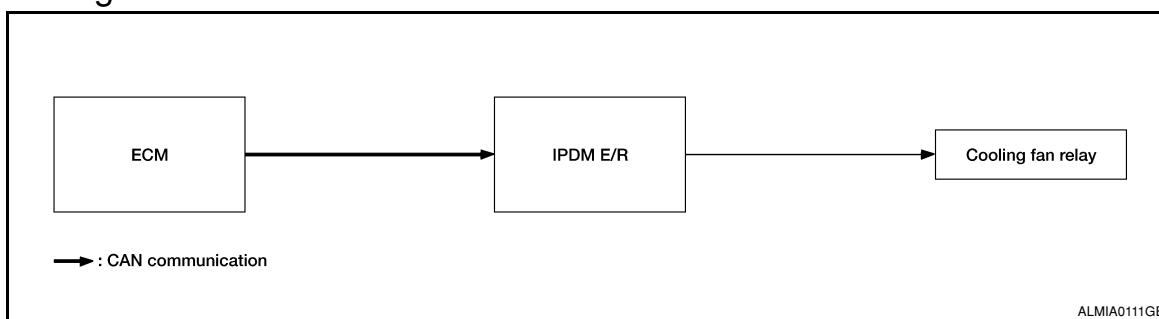

→ : CAN communication

ALMIA0111GB

System Description

INFOID:000000001546787

COOLING FAN CONTROL

IPDM E/R controls the cooling fan according to the status of the cooling fan speed request signal received from ECM via CAN communication. Refer to [LAN-4, "System Description"](#).

SIGNAL BUFFER SYSTEM


< FUNCTION DIAGNOSIS >

[IPDM E/R]

SIGNAL BUFFER SYSTEM

System Diagram

INFOID:0000000001546788

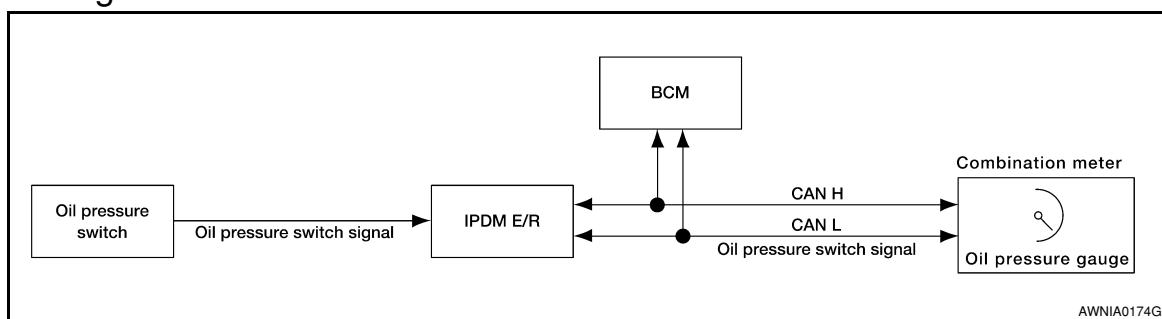

System Description

INFOID:0000000001546789

IPDM E/R reads the status of the oil pressure switch and transmits the oil pressure switch signal to BCM via CAN communication. Refer to [LAN-4, "System Description"](#).

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N

O

P

POWER CONSUMPTION CONTROL SYSTEM


< FUNCTION DIAGNOSIS >

[IPDM E/R]

POWER CONSUMPTION CONTROL SYSTEM

System Diagram

INFOID:0000000001546790

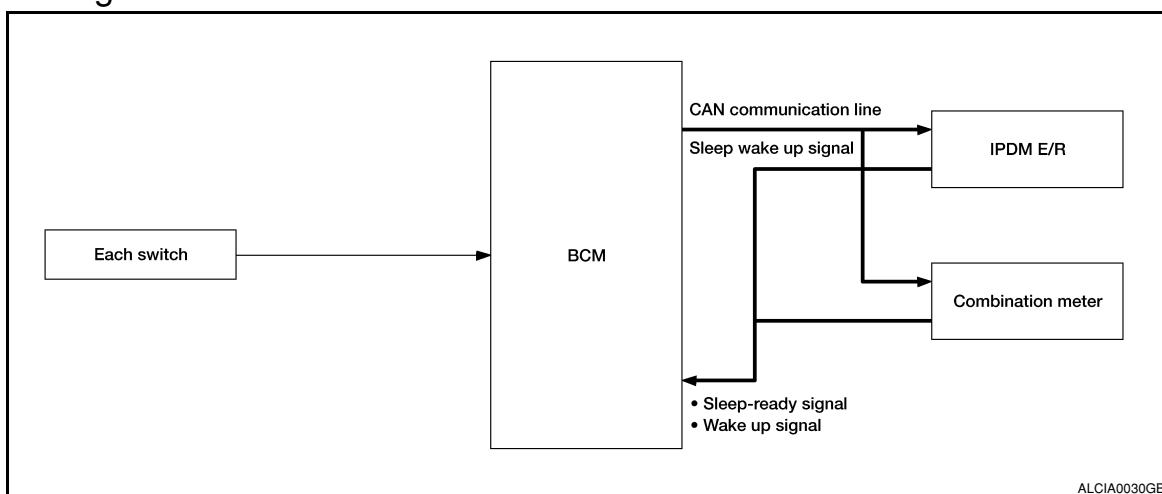

ALCIA0030GB

System Description

INFOID:0000000001546791

OUTLINE

- IPDM E/R incorporates a power consumption control function that reduces the power consumption according to the vehicle status.
- IPDM E/R changes its status (control mode) with the sleep wake up signal received from BCM via CAN communication.

Normal mode (wake-up)

- CAN communication is normally performed with other control units.
- Individual unit control by IPDM E/R is normally performed.

Low power consumption mode (sleep)

- Low power consumption control is active.
- CAN transmission is stopped.

SLEEP MODE ACTIVATION

- IPDM E/R judges that the sleep-ready conditions are fulfilled when the ignition switch is OFF and none of the conditions below are present. Then it transmits a sleep-ready signal (ready) to BCM via CAN communication.
 - Front wiper fail-safe operation
 - Outputting signals to actuators
 - Switches or relays operating
 - Auto active test is starting
 - Emergency OFF
 - Output requests are being received from control units via CAN communication.
- IPDM E/R stops CAN communication and enters the low power consumption mode when it receives a sleep wake up signal (sleep) from BCM and the sleep-ready conditions are fulfilled.

WAKE-UP OPERATION

- IPDM E/R changes from the low power consumption mode to the normal mode when it receives a sleep wake-up signal (wake up) from BCM or any of the following conditions is fulfilled. In addition, it transmits a sleep-ready signal (not-ready) to BCM via CAN communication to report the CAN communication start.
 - Ignition switch ON
 - An output request is received from a control unit via CAN communication.


POWER CONSUMPTION CONTROL SYSTEM

[IPDM E/R]

< FUNCTION DIAGNOSIS >

Component Parts Location

INFOID:000000001546792

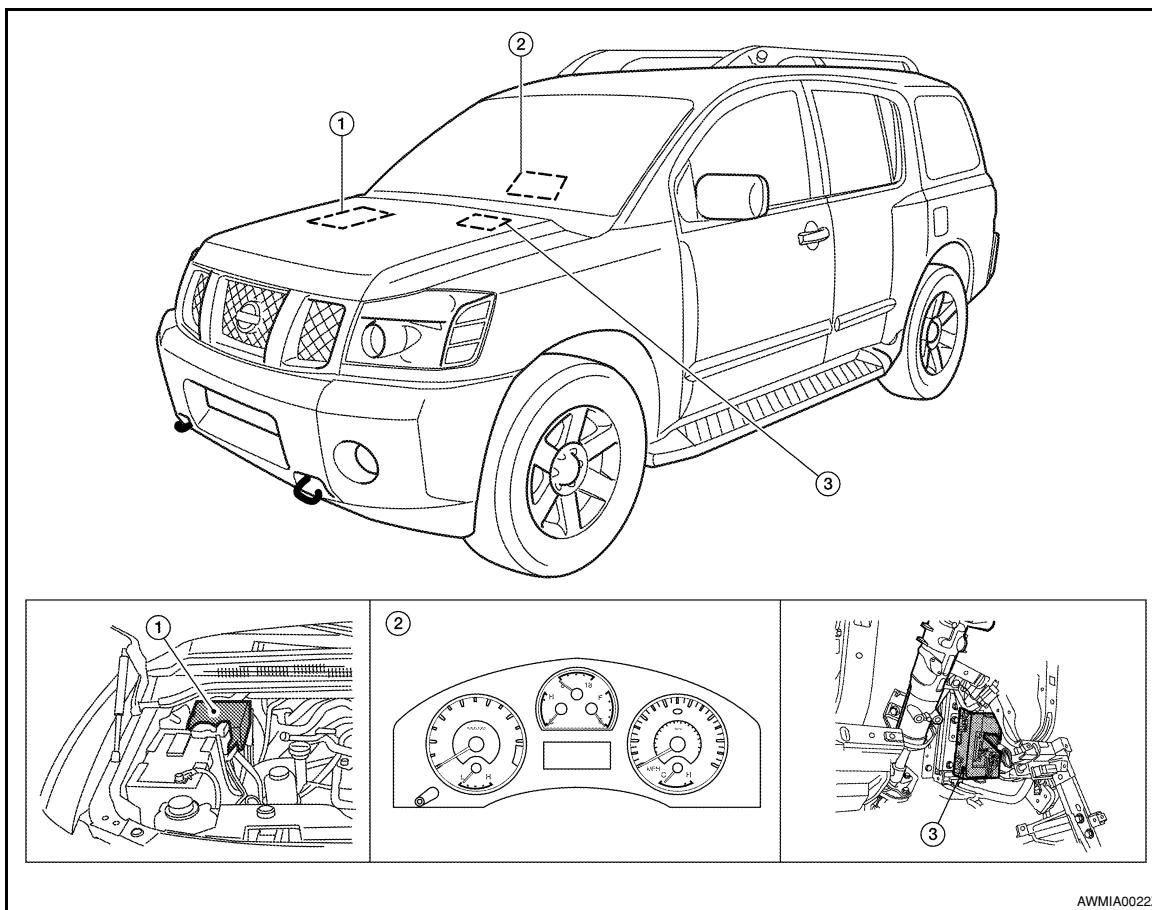

1. IPDM E/R

2. Combination meter

3. BCM (view with instrument panel removed)

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N

O

P

< FUNCTION DIAGNOSIS >

DIAGNOSIS SYSTEM (IPDM E/R)**Diagnosis Description**

INFOID:0000000001546793

AUTO ACTIVE TEST**Description**

In auto active test mode, the IPDM E/R sends a drive signal to the following systems to check their operation.

- Oil pressure low/coolant pressure high warning indicator
- Oil pressure gauge
- Rear window defogger
- Front wipers
- Tail, license and parking lamps
- Front fog lamps
- Headlamps (Hi, Lo)
- A/C compressor (magnetic clutch)
- Cooling fan

Operation Procedure

1. Close the hood and front door RH, and lift the wiper arms from the windshield (to prevent windshield damage due to wiper operation).
- NOTE:**
When auto active test is performed with hood opened, sprinkle water on windshield before hand.
2. Turn ignition switch OFF.
3. Turn the ignition switch ON and, within 20 seconds, press the front door switch LH 10 times. Then turn the ignition switch OFF.
4. Turn the ignition switch ON within 10 seconds. After that the horn sounds once and the auto active test starts.
5. After a series of the following operations is repeated 3 times, auto active test is completed.

NOTE:


When auto active test mode has to be cancelled halfway through test, turn ignition switch OFF.

CAUTION:

- If auto active test mode cannot be actuated, check door switch system. Refer to [DLK-57, "Description"](#) (with Intelligent Key system), [DLK-235, "Description"](#) (without Intelligent Key system).
- Do not start the engine.

Inspection in Auto Active Test Mode

When auto active test mode is actuated, the following 7 steps are repeated 3 times.

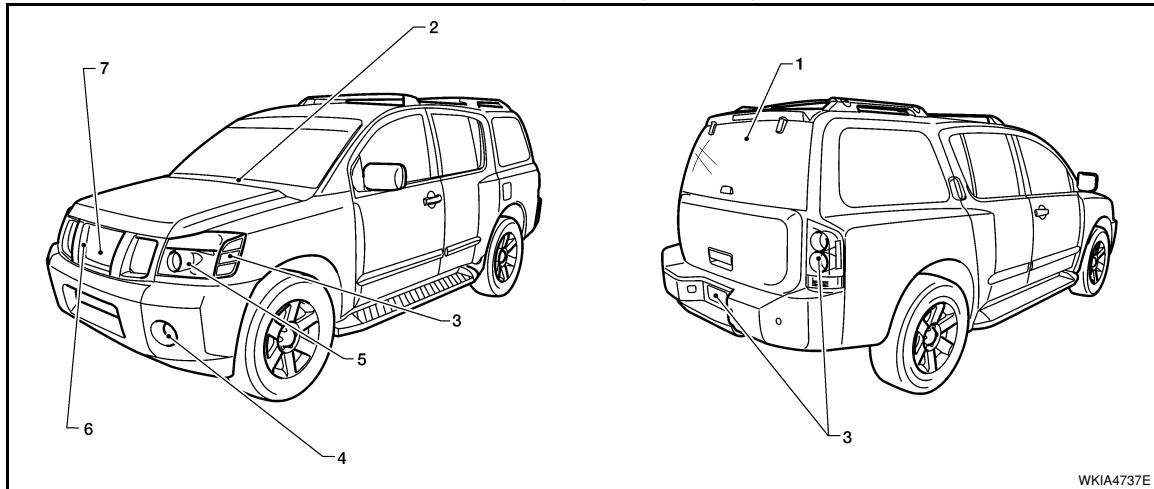

Operation sequence	Inspection Location	Operation
1	Rear window defogger	10 seconds
2	Front wipers	LO for 5 seconds → HI for 5 seconds


DIAGNOSIS SYSTEM (IPDM E/R)

[IPDM E/R]

< FUNCTION DIAGNOSIS >

Operation sequence	Inspection Location	Operation
3	Tail, license and parking lamps	10 seconds
4	Front fog lamps	10 seconds
5	Headlamps	LO for 10 seconds → HI on-off for 5 seconds
6	A/C compressor	ON ⇌ OFF 5 times
7	Cooling fan	10 seconds

Concept of auto active test

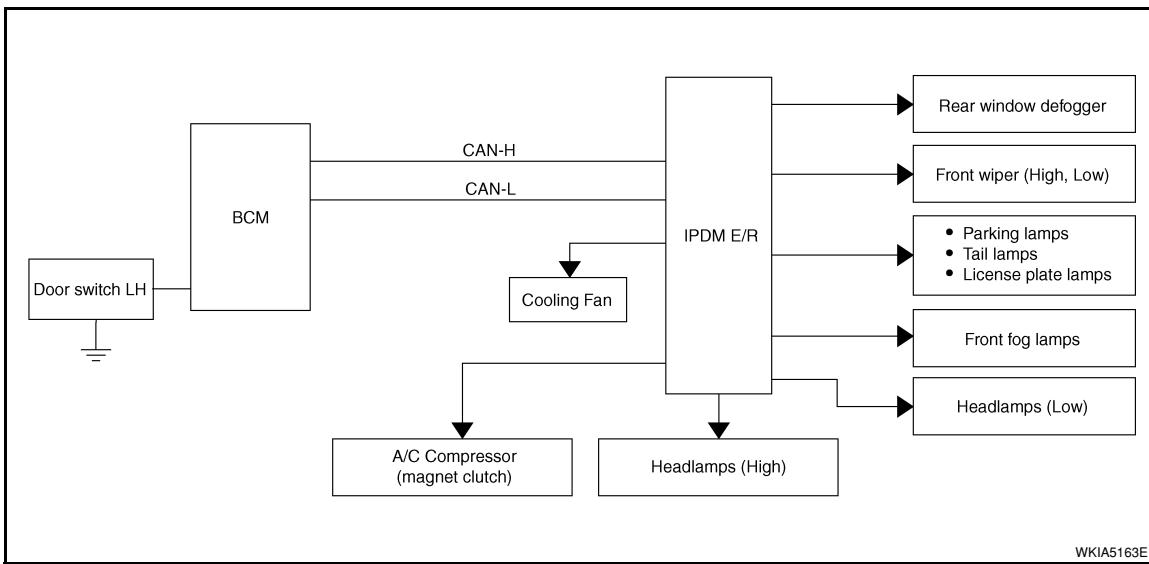

- IPDM E/R starts the auto active test with the door switch signals transmitted by BCM via CAN communication. Therefore, the CAN communication line between IPDM E/R and BCM is considered normal if the auto active test starts successfully.
- The auto active test facilitates troubleshooting if any systems controlled by IPDM E/R cannot be operated.

Diagnosis chart in auto active test mode

Symptom	Inspection contents	Possible cause	
Oil pressure low/coolant temperature high warning indicator does not operate	Perform auto active test. Does the oil pressure low/coolant temperature high warning indicator operate?	YES	<ul style="list-style-type: none"> IPDM E/R signal input circuit ECM signal input circuit CAN communication signal between ECM and combination meter
		NO	<ul style="list-style-type: none"> CAN communication signal between IPDM E/R, BCM and combination meter
Oil pressure gauge does not operate	Perform auto active test. Does the oil pressure gauge operate?	YES	IPDM E/R signal input circuit
		NO	<ul style="list-style-type: none"> CAN communication signal between IPDM E/R, BCM and combination meter
Rear window defogger does not operate	Perform auto active test. Does the rear window defogger operate?	YES	BCM signal input circuit
		NO	<ul style="list-style-type: none"> Harness or connector between A/C and AV switch assembly and AV control unit CAN communication signal between BCM and IPDM E/R

DIAGNOSIS SYSTEM (IPDM E/R)

< FUNCTION DIAGNOSIS >

[IPDM E/R]

Symptom	Inspection contents	Possible cause
Any of the following components do not operate <ul style="list-style-type: none"> • Front wipers • Tail lamps • License plate lamps • Parking lamps • Front fog lamps • Headlamps (Hi, Lo) 	Perform auto active test. Does the applicable system operate?	YES BCM signal input system
		NO <ul style="list-style-type: none"> • Lamp or front wiper motor malfunction • Lamp or front wiper motor ground circuit • Harness or connector between IPDM E/R and applicable system • IPDM E/R (integrated relay malfunction)
A/C compressor does not operate	Perform auto active test. Does the A/C compressor operate?	YES <ul style="list-style-type: none"> • BCM signal input circuit • CAN communication signal between BCM and ECM • CAN communication signal between ECM and IPDM E/R
		NO <ul style="list-style-type: none"> • Magnetic clutch malfunction • Harness or connector between IPDM E/R and magnetic clutch • IPDM E/R (integrated relay malfunction)
Cooling fan does not operate	Perform auto active test. Does the cooling fan operate?	YES <ul style="list-style-type: none"> • ECM signal input circuit • CAN communication signal between ECM and IPDM E/R
		NO <ul style="list-style-type: none"> • Cooling fan motor malfunction • Harness or connector between IPDM E/R and cooling fan • IPDM E/R (integrated relay malfunction)

CONSULT - III Function (IPDM E/R)

INFOID:000000001546794

APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with IPDM E/R.

Diagnosis mode	Description
ECU Identification	Allows confirmation of IPDM E/R part number.
Self Diagnostic Result	Displays the diagnosis results judged by IPDM E/R.
Data Monitor	Displays the real-time input/output data from IPDM E/R input/output data.
Active Test	IPDM E/R can provide a drive signal to electronic components to check their operations.
CAN Diag Support Monitor	The results of transmit/receive diagnosis of CAN communication can be read.

SELF DIAGNOSTIC

Refer to [PCS-28, "DTC Index"](#).

DATA MONITOR

Monitor item

DIAGNOSIS SYSTEM (IPDM E/R)

[IPDM E/R]

< FUNCTION DIAGNOSIS >

Monitor Item [Unit]	MAIN SIG- NAL(S)	Description
MOTOR FAN REQ [1/2/3/4]	×	Displays the status of the cooling fan speed request signal received from ECM via CAN communication.
A/C COMP REQ [OFF/ON]	×	Displays the status of the A/C request signal received from AV control unit via CAN communication.
TAIL&CLR REQ [OFF/ON]	×	Displays the status of the position light request signal received from BCM via CAN communication.
HL LO REQ [OFF/ON]	×	Displays the status of the low beam request signal received from BCM via CAN communication.
HL HI REQ [OFF/ON]	×	Displays the status of the high beam request signal received from BCM via CAN communication.
FR FOG REQ [OFF/ON]	×	Displays the status of the front fog lamp request signal received from BCM via CAN communication.
HL WASHER REQ [OFF/ON]		NOTE: This item is displayed, but cannot be monitored.
FR WIP REQ [STOP/1LOW/LOW/HI]	×	Displays the status of the front wiper request signal received from BCM via CAN communication.
WIP AUTO STOP [STOP P/ACT P]	×	Displays the status of the front wiper auto stop signal judged by IPDM E/R.
WIP PROT [OFF/Block]	×	Displays the status of the front wiper fail-safe operation judged by IPDM E/R.
ST RLY REQ [OFF/ON]		Displays the status of the starter request signal received from ECM via CAN communication.
IGN RLY [OFF/ON]	×	Displays the status of the ignition relay judged by IPDM E/R.
RR DEF REQ [OFF/ON]	×	Displays the status of the rear defogger request signal received from AV control unit via CAN communication.
OIL P SW [OPEN/CLOSE]		Displays the status of the oil pressure switch judged by IPDM E/R.
DTRL REQ [OFF]		NOTE: This item is displayed, but cannot be monitored.
HOOD SW [OPEN/CLOSE]		NOTE: This item is displayed, but cannot be monitored.
THFT HRN REQ [OFF/ON]		Displays the status of the theft warning horn request signal received from BCM via CAN communication.
HORN CHIRP [OFF/ON]		Displays the status of the horn reminder signal received from BCM via CAN communication.

ACTIVE TEST

Test item

Test item	Operation	Description
REAR DEFOGGER	OFF	OFF
	ON	Operates rear window defogger relay.
FRONT WIPER	OFF	OFF
	LO	Operates the front wiper relay.
	HI	Operates the front wiper relay and front wiper high relay.
HEAD LAMP WASHER	ON	—

DIAGNOSIS SYSTEM (IPDM E/R)

[IPDM E/R]

< FUNCTION DIAGNOSIS >

Test item	Operation	Description
MOTOR FAN	1	OFF
	2	OFF
	3	Operates the cooling fan relay.
	4	Operates the cooling fan relay.
EXTERNAL LAMPS	OFF	OFF
	TAIL	Operates the tail lamp relay.
	LO	Operates the headlamp low relay.
	HI	Operates the headlamp low relay and ON/OFF the headlamp high relay at 1 second intervals.
	FOG	Operates the front fog lamp relay
HORN	ON	Operates horn relay for 20 ms.

< COMPONENT DIAGNOSIS >

COMPONENT DIAGNOSIS

U1000 CAN COMM CIRCUIT

Description

INFOID:000000001546795

Refer to [LAN-4, "System Description"](#).

DTC Logic

INFOID:000000001546796

DTC DETECTION LOGIC

DTC	CONSULT-III display description	DTC Detection Condition	Possible cause
U1000	CAN COMM CIRCUIT	When IPDM E/R cannot communicate CAN communication signal continuously for 2 seconds or more	In CAN communication system, any item (or items) of the following listed below is malfunctioning. • Receiving (TCM) • Receiving (ECM) • Receiving (BCM) • Receiving (Combination meter)

DTC CONFIRMATION PROCEDURE

Diagnosis Procedure

INFOID:000000001546797

1. PERFORM SELF DIAGNOSTIC

1. Turn ignition switch ON and wait for 2 seconds or more.
2. Check "SELF-DIAG RESULTS" of IPDM E/R.

Is "CAN COMM CIRCUIT" displayed?

- YES >> Refer to [LAN-5, "CAN Communication Control Circuit"](#).
 NO >> Refer to [GI-39, "Intermittent Incident"](#).

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N

O

P

POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

[IPDM E/R]

POWER SUPPLY AND GROUND CIRCUIT

Diagnosis Procedure

INFOID:0000000001546804

1. CHECK FUSES AND FUSIBLE LINK

Check that the following IPDM E/R fuses or fusible link are not blown.

Terminal No.	Signal name	Fuses and fusible link No.
1	Battery	A, D
2	Battery	C
12	Ignition switch ON or START	59


Is the fuse blown?

- YES >> Replace the blown fuse or fusible link after repairing the affected circuit.
NO >> GO TO 2

2. CHECK BATTERY POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R.
3. Check voltage between IPDM E/R harness connectors and ground.

Terminals		Ignition switch position		
Connector	Terminal	(+)	(-)	
		OFF	ON	START
E118 (A)	1	Ground	Battery voltage	Battery voltage
	2		Battery voltage	Battery voltage
E119 (B)	12		0V	Battery voltage

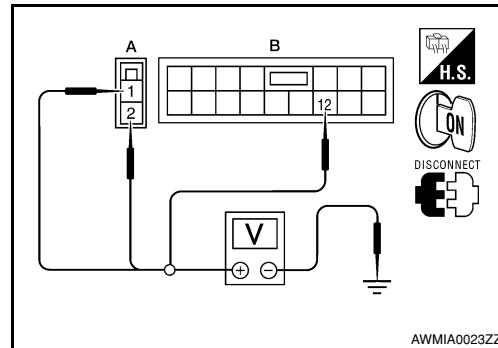

Is the measurement value normal?

- YES >> GO TO 3
NO >> Repair or replace harness.


3. CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between IPDM E/R harness connectors and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E122 (A)	38		
E124 (B)	59		Yes

Does continuity exist?

- YES >> Inspection End.
NO >> Repair or replace harness.

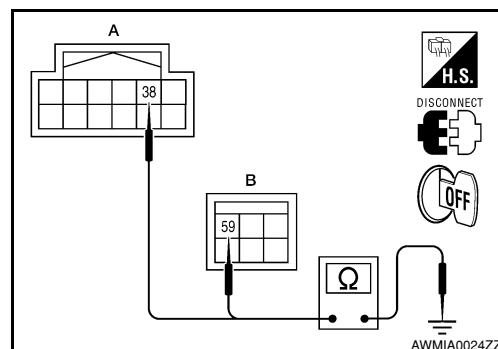

ECU DIAGNOSIS

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Reference Value

INFOID:0000000001546805

VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition	Value/Status
MOTOR FAN REQ	Engine idle speed	Changes depending on engine coolant temperature, air conditioner operation status, vehicle speed, etc. 0 - 100 %
A/C COMP REQ	A/C switch OFF	OFF
	A/C switch ON	ON
TAIL&CLR REQ	Lighting switch OFF	OFF
	Lighting switch 1ST, 2ND, HI or AUTO (Light is illuminated)	ON
HL LO REQ	Lighting switch OFF	OFF
	Lighting switch 2ND HI or AUTO (Light is illuminated)	ON
HL HI REQ	Lighting switch OFF	OFF
	Lighting switch HI	ON
FR FOG REQ	Lighting switch 2ND or AUTO (Light is illuminated)	Front fog lamp switch OFF OFF
		• Front fog lamp switch ON • Daytime light activated (Canada only) ON
H L WASHER REQ	NOTE: This item is displayed, but cannot be monitored.	OFF
FR WIP REQ	Ignition switch ON	Front wiper switch OFF STOP
		Front wiper switch INT 1LOW
		Front wiper switch LO LOW
		Front wiper switch HI HI
WIP AUTO STOP	Ignition switch ON	Front wiper stop position STOP P
		Any position other than front wiper stop position ACT P
WIP PROT	Ignition switch ON	Front wiper operates normally OFF
		Front wiper stops at fail-safe operation BLOCK
ST RLY REQ	Ignition switch OFF or ACC	
	Ignition switch START	
IGN RLY	Ignition switch OFF or ACC	
	Ignition switch ON	
RR DEF REQ	Rear defogger switch OFF	
	Rear defogger switch ON	
OIL P SW	Ignition switch OFF, ACC or engine running	
	Ignition switch ON	
DTRL REQ	NOTE: This item is displayed, but cannot be monitored.	OPEN
HOOD SW	NOTE: This item is displayed, but cannot be monitored.	CLOSE

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
<ECU DIAGNOSIS > [IPDM E/R]

Monitor Item	Condition	Value/Status
	Not operated	OFF
THFT HRN REQ	<ul style="list-style-type: none"> • Panic alarm is activated • Horn is activated with VEHICLE SECURITY (THEFT WARNING) SYSTEM 	ON
	Not operated	OFF
HORN CHIRP	Door locking with keyfob or Intelligent Key (if equipped) (horn chirp mode)	ON

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)


< ECU DIAGNOSIS >

[IPDM E/R]

Terminal Layout

INFOID:000000001546806

TERMINAL LAYOUT

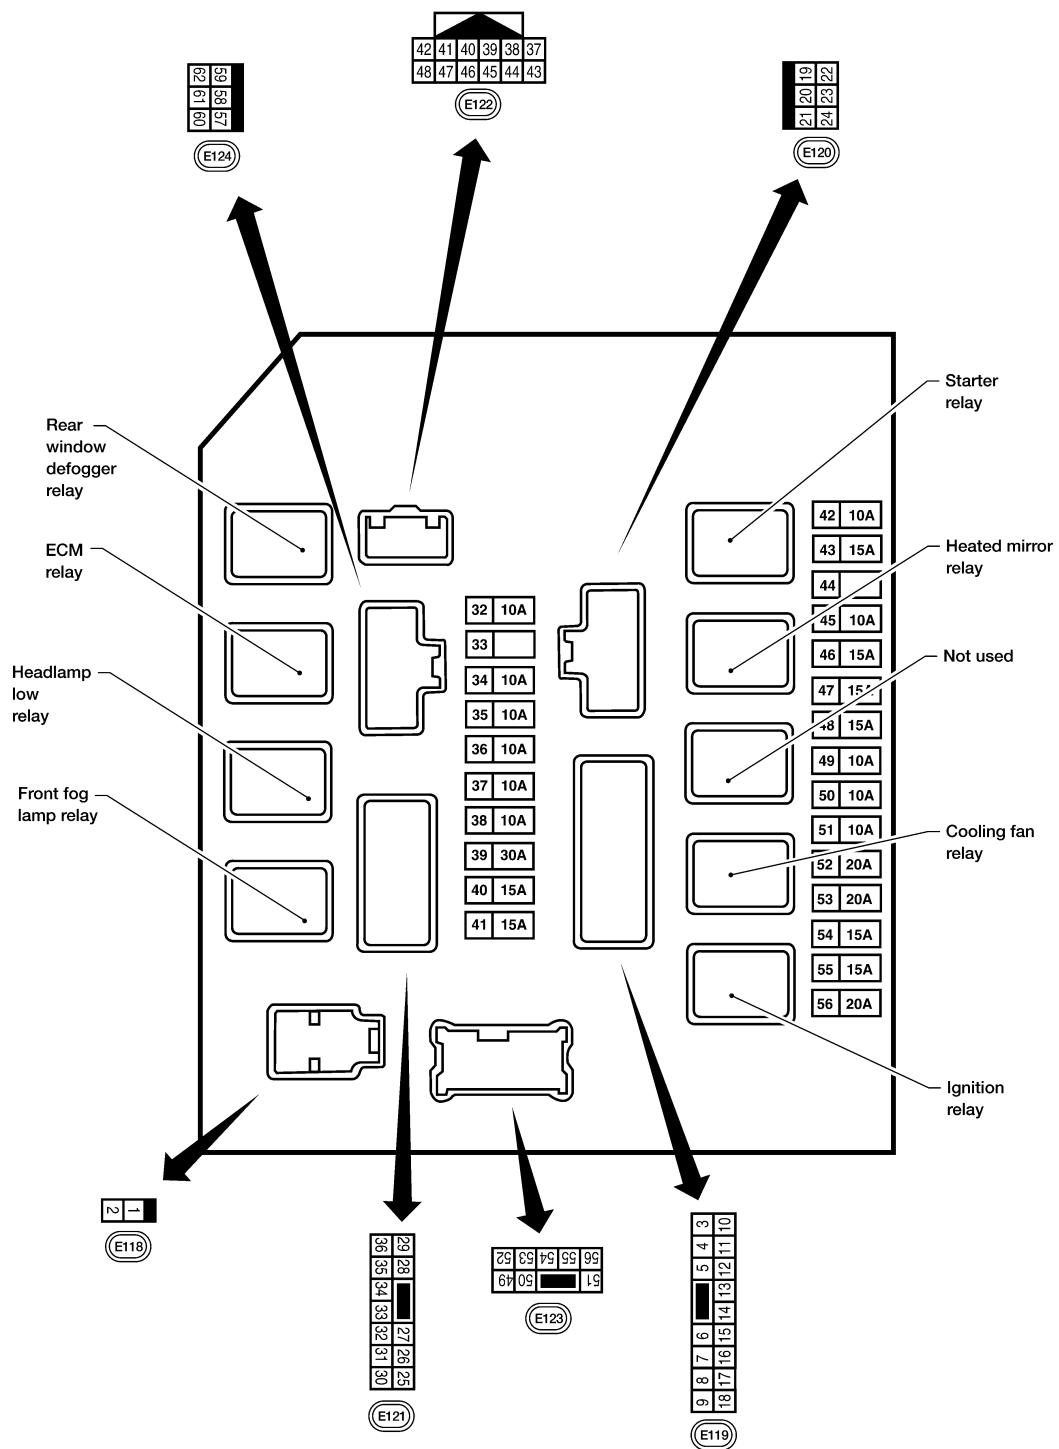

Physical Values

WKIA5852E

INFOID:000000001546807

PHYSICAL VALUES

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

<ECU DIAGNOSIS>




[IPDM E/R]

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value (Approx.)
				Ignition switch	Operation or condition	
1	B/Y	Battery power supply	Input	OFF	—	Battery voltage
2	R	Battery power supply	Input	OFF	—	Battery voltage
3	BR	ECM relay	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
4	W/L	ECM relay	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
6	L	Throttle control motor relay	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
7	W/B	ECM relay control	Input	—	Ignition switch ON or START	0V
					Ignition switch OFF or ACC	Battery voltage
8	R/B	Fuse 54	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
10	G	Fuse 45	Output	ON	Daytime light system active	0V
					Daytime light system inactive	Battery voltage
11	Y/B	A/C compressor	Output	ON or START	A/C switch ON or defrost A/C switch	Battery voltage
					A/C switch OFF or defrost A/C switch	0V
12	L/W	Ignition switch supplied power	Input	—	OFF or ACC	0V
					ON or START	Battery voltage
13	B/Y	Fuel pump relay	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
14	Y/R	Fuse 49	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
15	LG/B	Fuse 50 (VDC)	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
15	GR	Fuse 50 (ABS)	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
16	G	Fuse 51	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
17	W	Fuse 55	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
19	W/R	Starter motor	Output	START	—	Battery voltage
21	BR	Ignition switch supplied power	Input	—	OFF or ACC	0V
					START	Battery voltage
22	G	Battery power supply	Output	OFF	—	Battery voltage
23	GR/W	Door mirror defogger output signal	Output	—	When rear defogger switch is ON	Battery voltage
					When raker defogger switch is OFF	0V

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

[IPDM E/R]

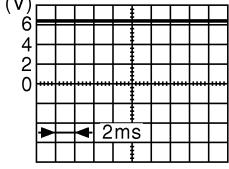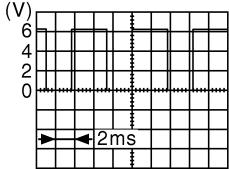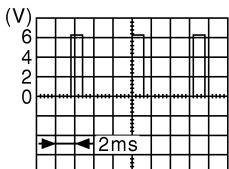Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value (Approx.)
				Ignition switch	Operation or condition	
24	L/B	Cooling fan relay	Output	—	Conditions correct for cooling fan operation	Battery voltage
					Conditions not correct for cooling fan operation	0V
27	W/B	Fuse 38	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
30	W	Fuse 53	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
32	L	Wiper low speed signal	Output	ON or START	Wiper switch OFF	Battery voltage
					LO or INT	0V
35	L/B	Wiper high speed signal	Output	ON or START	Wiper switch OFF, LO, INT	Battery voltage
					HI	0V
37	Y	Power generation command signal	Output	—	Ignition switch ON	 6.3 V
					40% is set on "Active test," "ALTERNATOR DUTY" of "ENGINE"	 3.8 V
					40% is set on "Active test," "ALTERNATOR DUTY" of "ENGINE"	 1.4 V
38	B	Ground	Input	—	—	0V
39	L	CAN-H	—	ON	—	—
40	P	CAN-L	—	ON	—	—
42	GR	Oil pressure switch	Input	—	Engine running	Battery voltage
					Engine stopped	0V
43	L/Y	Wiper auto stop signal	Input	ON or START	Wiper switch OFF, LO, INT	Battery voltage
44	BR	Daytime light relay control	Input	ON	Daytime light system active	0V
					Daytime light system inactive	Battery voltage

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

[IPDM E/R]

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value (Approx.)	
				Ignition switch	Operation or condition		
45	G/W	Horn relay control	Input	ON	When door locks are operated using keyfob or Intelligent Key (if equipped) (OFF → ON)*	Battery voltage → 0V	
46	GR	Fuel pump relay control	Input	—	Ignition switch ON or START	0V	
					Ignition switch OFF or ACC	Battery voltage	
47	O	Throttle control motor relay control	Input	—	Ignition switch ON or START	0V	
					Ignition switch OFF or ACC	Battery voltage	
48	B/R	Starter relay (inhibit switch)	Input	ON or START	Selector lever in "P" or "N"	0V	
					Selector lever any other position	Battery voltage	
49	R/L	Trailer tow relay	Output	ON	Lighting switch must be in the 1st position	0V	
						Battery voltage	
50	W/R	Front fog lamp (LH)	Output	ON or START	Lighting switch must be in the 2nd position (LOW beam is ON) and the front fog lamp switch	0V	
						Battery voltage	
51	W/R	Front fog lamp (RH)	Output	ON or START	Lighting switch must be in the 2nd position (LOW beam is ON) and the front fog lamp switch	0V	
						Battery voltage	
52	L	LH low beam head-lamp	Output	—	Lighting switch in 2nd position		Battery voltage
54	R/Y	RH low beam head-lamp	Output	—	Lighting switch in 2nd position		Battery voltage
55	G	LH high beam head-lamp	Output	—	Lighting switch in 2nd position and placed in HIGH or PASS position		Battery voltage
56	Y	RH high beam head-lamp	Output	—	Lighting switch in 2nd position and placed in HIGH or PASS position		Battery voltage
57	R/L	Parking, license, and tail lamp	Output	ON	Lighting switch 1st position	0V	
						ON	Battery voltage
59	B	Ground	Input	—	—		0V
60	B/W	Rear window defogger relay	Output	ON or START	Rear defogger switch ON	Battery voltage	
					Rear defogger switch OFF	0V	
61	BR	Fuse 32	Output	OFF	—		Battery voltage

*: When horn reminder is ON


IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

[IPDM E/R]

Wiring Diagram

INFOID:0000000001546808

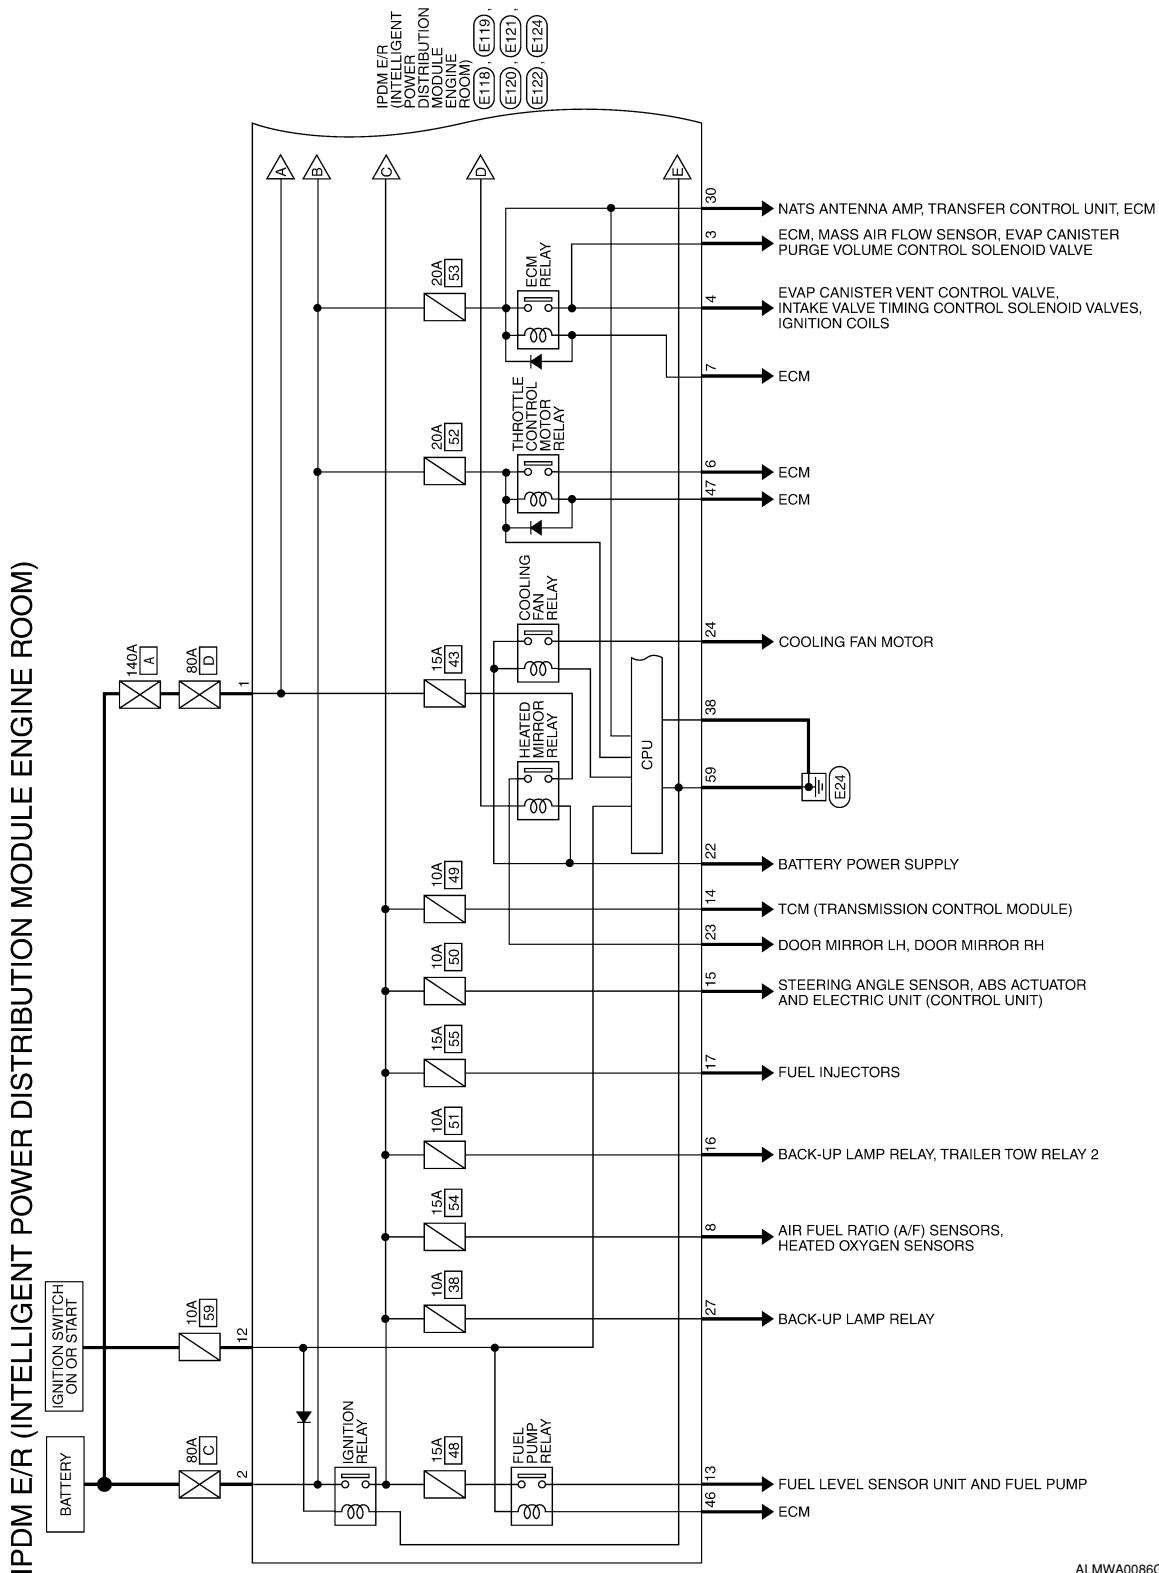


IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

[IPDM E/R]

TT : TRAILER TOW 7PIN
 FL : WITH FRONT FOG LAMP
 N : FOR CANADA
 ■ : DATA LINE

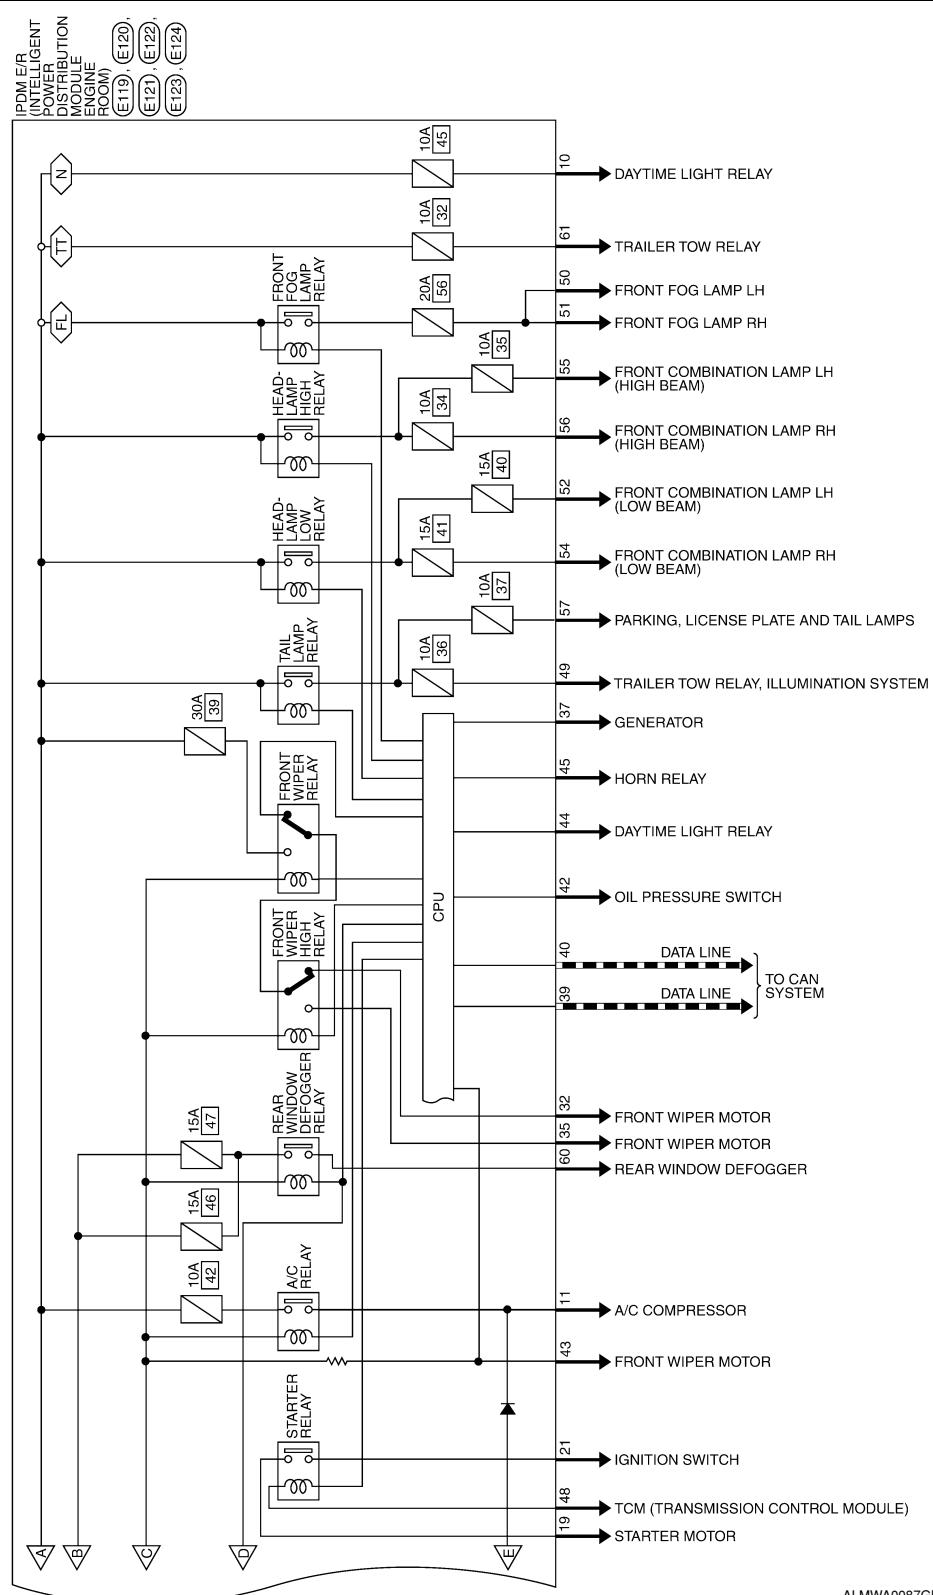

ALMWA0087GE

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)


< ECU DIAGNOSIS >

[IPDM E/R]

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) CONNECTORS

Terminal No.	Color of Wire	Signal Name
3	BR	IGN COIL
4	W/L	ECM
6	L	ETC
7	W/B	ECM RLY CONT
8	R/B	O2 SENSOR
10	G	DTTRL RLY SUPPLY
11	Y/B	AC COMPRESSOR
12	L/W	IGN SW (IG)
13	B/Y	FUEL PUMP
14	Y/R	A/T CU IGN SUPPLY
15	LG/B	ABS IGN SUPPLY
15	GR	ABS IGN SUPPLY
16	G	REVERSE LAMP
17	W	INJECTOT

Connector No.	Connector Name	Connector Color
E119	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)	WHITE

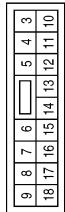


Connector No.	Connector Name	Connector Color
E118	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)	BLACK



Terminal No.	Color of Wire	Signal Name
1	B/Y	FL USM
2	R	FL MAIN

Connector No.	Connector Name	Connector Color
E121	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)	BROWN

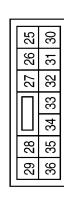

Terminal No.	Color of Wire	Signal Name
27	W/B	TTOW REV LAMP
30	W	ECM BAT
32	L	FR WIPER LO
35	L/B	FR WIPER HI

Connector No.	Connector Name	Connector Color
E120	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)	WHITE




Terminal No.	Color of Wire	Signal Name
19	W/R	STARTER MTR
21	BR	IGN SW(ST)
22	G	F/L MOTOR FAN
23	GR/W	HEATED MIRROR
24	L/B	MOTOR FAN2

ALMIA0251GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
PCS


Connector No.	E123
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN

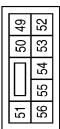


Terminal No.	Color of Wire	Signal Name
37	Y	ALT/C CONT
38	B	SIGNAL GRD
39	L	CAN-H
40	P	CAN-L
42	GR	OIL PRESSURE SW
43	L/Y	AUTO STOP SW
44	BR	DTRL RLY CONT
45	G/W	ANTI THEFT HORN
46	GR	FUEL PUMP RLY CONT
47	O	ETC RLY CONT
48	B/R	INHIBIT SW

Terminal No. Color of Wire Signal Name

Terminal No.	Color of Wire	Signal Name
37	Y	ALT/C CONT
38	B	SIGNAL GRD
39	L	CAN-H
40	P	CAN-L
42	GR	OIL PRESSURE SW
43	L/Y	AUTO STOP SW
44	BR	DTRL RLY CONT
45	G/W	ANTI THEFT HORN
46	GR	FUEL PUMP RLY CONT
47	O	ETC RLY CONT
48	B/R	INHIBIT SW

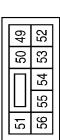

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

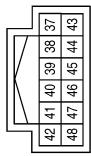

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
57	R/L	TAIL LAMP
59	B	POWER GND
60	B/W	RR DEF
61	BR	TRAIL RLY SUPPLY

ALMIA0252GB

INFOID:0000000001546809

Fail Safe

CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With ECM

Control part	Fail-safe in operation
Cooling fan	<ul style="list-style-type: none"> Turns ON the cooling fan relay when the ignition switch is turned ON Turns OFF the cooling fan relay when the ignition switch is turned OFF

If No CAN Communication Is Available With BCM

Control part	Fail-safe in operation
Headlamp	<ul style="list-style-type: none"> Turns ON the headlamp low relay when the ignition switch is turned ON Turns OFF the headlamp low relay when the ignition switch is turned OFF Headlamp high relay OFF
• Parking lamps • License plate lamps • Tail lamps	<ul style="list-style-type: none"> Turns ON the tail lamp relay when the ignition switch is turned ON Turns OFF the tail lamp relay when the ignition switch is turned OFF
Front wiper	<ul style="list-style-type: none"> The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed. The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the INT mode and the front wiper motor is operating.
Rear window defogger	Rear window defogger relay OFF
A/C compressor	A/C relay OFF
Front fog lamps	Front fog lamp relay OFF

IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit and excitation coil circuit of the ignition relay inside it.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the excitation coil circuit.
- If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

Ignition switch	Ignition relay	Tail lamp relay
ON	ON	—
OFF	OFF	—

NOTE:

The tail lamp turns OFF when the ignition switch is turned ON.

FRONT WIPER CONTROL

IPDM E/R detects front wiper stop position by a front wiper auto stop signal.

When a front wiper auto stop signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 second activation and 20 second stop five times.

Ignition switch	Front wiper switch	Auto stop signal
ON	OFF	Front wiper stop position signal cannot be input 10 seconds.
	ON	The signal does not change for 10 seconds.

NOTE:

This operation status can be confirmed on the IPDM E/R “DATA MONITOR” that displays “Block” for the item “WIP PROT” while the wiper is stopped.

STARTER MOTOR PROTECTION FUNCTION

IPDM E/R turns OFF the starter control relay to protect the starter motor when the starter control relay remains active for 90 seconds.

DTC Index

INFOID:000000001546810

CONSULT-III display	Fail-safe	TIME ^{NOTE}		Refer to
No DTC is detected. further testing may be required.	—	—	—	—
U1000: CAN COMM CIRCUIT	×	CRNT	1 – 39	PCS-15

NOTE:

The details of TIME display are as follows.

- CRNT: The malfunctions that are detected now
- 1 - 39: The number is indicated when it is normal at present and a malfunction was detected in the past. It increases like 0 → 1 → 2 ⋯ 38 → 39 after returning to the normal condition whenever IGN OFF → ON. It is fixed to 39 until the self-diagnosis results are erased if it is over 39. It returns to 0 when a malfunction is detected again in the process.

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000001539315

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N

O

P

REMOVAL AND INSTALLATION


IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Removal and Installation of IPDM E/R


INFOID:0000000001539316

REMOVAL

1. Disconnect negative battery cable.
2. Remove IPDM E/R upper cover.

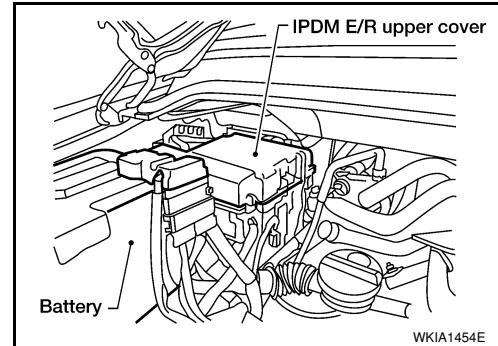

3. Release 2 clips and pull IPDM E/R up from case.
4. Disconnect IPDM E/R connectors and remove the IPDM E/R.

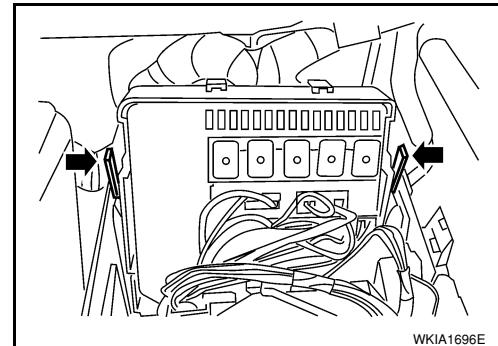

INSTALLATION

Installation is in the reverse order of removal.

DIAGNOSIS AND REPAIR WORKFLOW

[POWER DISTRIBUTION SYSTEM]

< BASIC INSPECTION >


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000001546811

OVERALL SEQUENCE

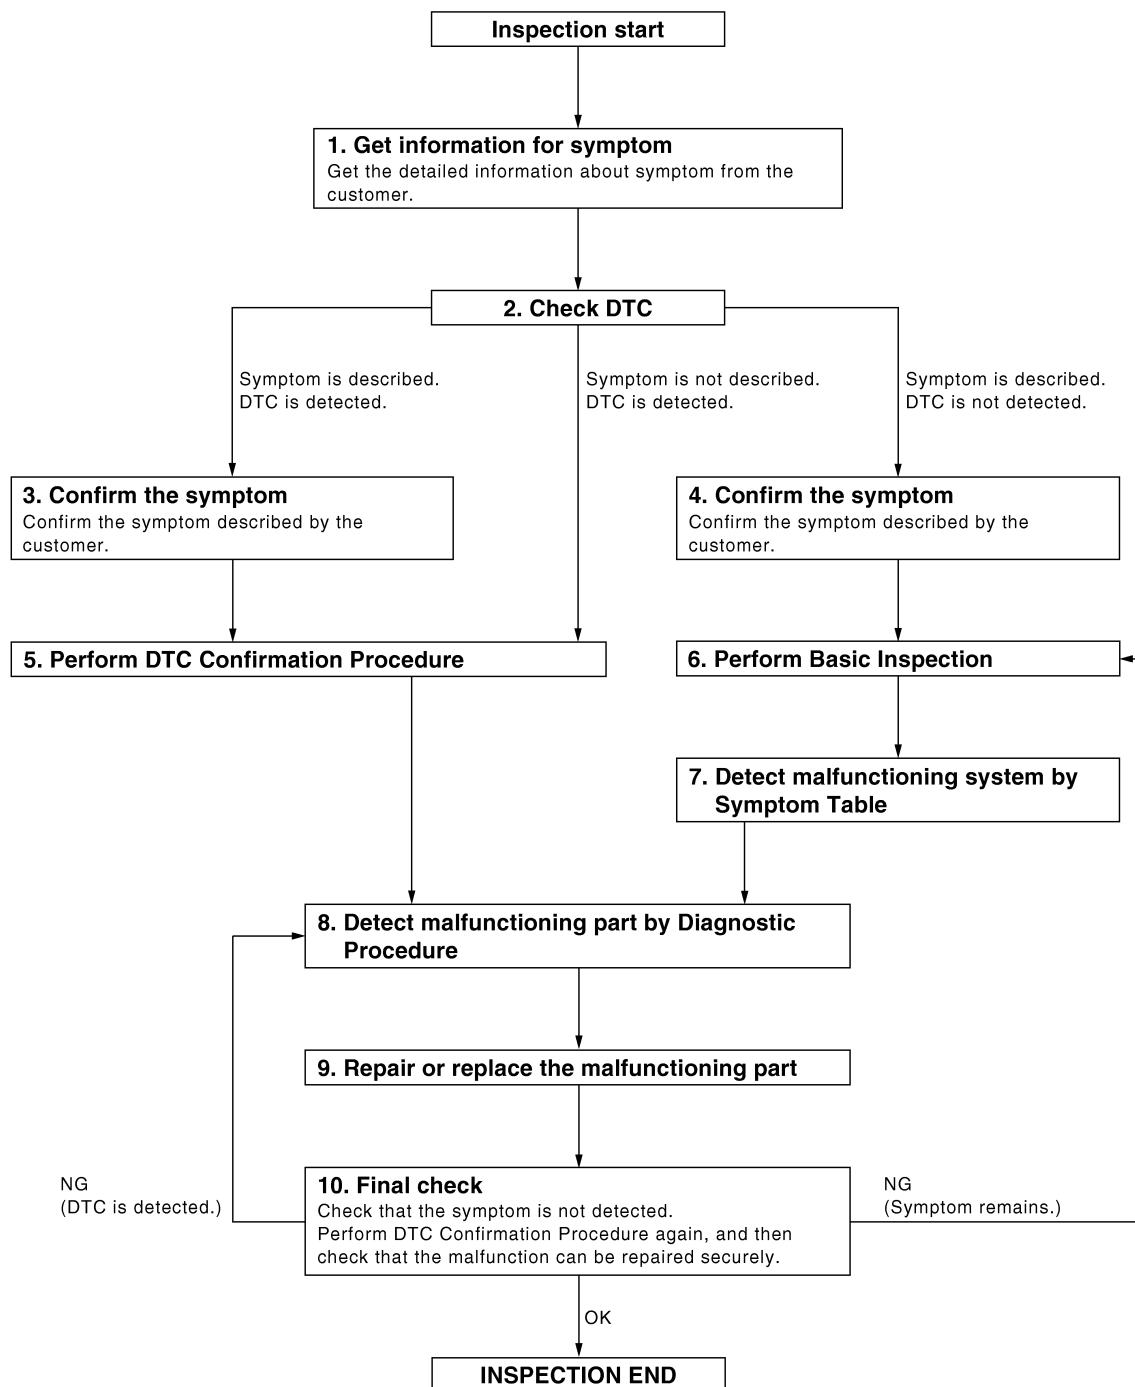

DETAILED FLOW

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[POWER DISTRIBUTION SYSTEM]

1. GET INFORMATION FOR SYMPTOM

Get the detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurred).

>> GO TO 2

2. CHECK DTC

1. Check DTC.
2. Perform the following procedure if DTC is displayed.
 - Record DTC and freeze frame data.
 - Erase DTC.
 - Study the relationship between the cause detected by DTC and the symptom described by the customer.
3. Check related service bulletins for information.

Is any symptom described and any DTC detected?

Symptom is described, DTC is displayed>>GO TO 3

Symptom is described, DTC is not displayed>>GO TO 4

Symptom is not described, DTC is displayed>>GO TO 5

3. CONFIRM THE SYMPTOM

Confirm the symptom described by the customer.

Connect CONSULT-III to the vehicle in "DATA MONITOR" mode and check real time diagnosis results.

Verify relationship between the symptom and the condition when the symptom is detected.

>> GO TO 5

4. CONFIRM THE SYMPTOM

Confirm the symptom described by the customer.

Connect CONSULT-III to the vehicle in "DATA MONITOR" mode and check real time diagnosis results.

Verify relationship between the symptom and the condition when the symptom is detected.

>> GO TO 6

5. PERFORM DTC CONFIRMATION PROCEDURE

Perform DTC Confirmation Procedure for the displayed DTC, and then check that DTC is detected again.

At this time, always connect CONSULT-III to the vehicle, and check diagnostic results in real time.

If two or more DTCs are detected, refer to [PCS-42, "DTC Inspection Priority Chart"](#) and determine trouble diagnosis order.

NOTE:

- Freeze frame data is useful if the DTC is not detected.
- Perform Component Function Check if DTC Confirmation Procedure is not included in Service Manual. This simplified check procedure is an effective alternative though DTC cannot be detected during this check.
If the result of Component Function Check is NG, it is the same as the detection of DTC by DTC Confirmation Procedure.

Is DTC detected?

YES >> GO TO 8

NO >> Refer to [GI-39, "Intermittent Incident"](#).

6. PERFORM BASIC INSPECTION

Perform [PCS-48, "Basic Inspection"](#).

Inspection End>>GO TO 7

7. DETECT MALFUNCTIONING SYSTEM BY SYMPTOM TABLE

Detect malfunctioning system according to [PCS-34, "System Description"](#) based on the confirmed symptom in step 4, and determine the trouble diagnosis order based on possible causes and symptom.

>> GO TO 8

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[POWER DISTRIBUTION SYSTEM]

8. DETECT MALFUNCTIONING PART BY DIAGNOSTIC PROCEDURE

Inspect according to Diagnostic Procedure of the system.

NOTE:

The Diagnostic Procedure described based on open circuit inspection. A short circuit inspection is also required for the circuit check in the Diagnostic Procedure.

Is malfunctioning part detected?

YES >> GO TO 9

NO >> Check voltage of related BCM terminals using CONSULT-III.

9. REPAIR OR REPLACE THE MALFUNCTIONING PART

1. Repair or replace the malfunctioning part.
2. Reconnect parts or connectors disconnected during Diagnostic Procedure again after repair and replacement.
3. Check DTC. If DTC is displayed, erase it.

>> GO TO 10

10. FINAL CHECK

When DTC was detected in step 2, perform DTC Confirmation Procedure or Component Function Check again, and then check that the malfunction have been fully repaired.

When symptom was described from the customer, refer to confirmed symptom in step 3 or 4 and check that the symptom is not detected.

OK or NG

NG (DTC is detected)>>GO TO 8

NG (Symptom remains)>>GO TO 6

OK >> **INSPECTION END**

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N

O

P

POWER DISTRIBUTION SYSTEM

< FUNCTION DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

FUNCTION DIAGNOSIS

POWER DISTRIBUTION SYSTEM

System Description

INFOID:000000001546812

INPUT/OUTPUT SIGNAL CHART


Switch	Input Signal to BCM	BCM system	Actuator
Ignition switch	Ignition switch	Power distribution system	• Ignition relay (IPDM E/R)
A/T device	P range		• ACC relay
PNP switch	N, P range		• Blower relay

SYSTEM DESCRIPTION

- PDS (POWER DISTRIBUTION SYSTEM) is the system that BCM controls with the operation of the ignition switch and performs the power distribution to each power circuit.
- If equipped with Intelligent Key, the ignition switch can be operated when Intelligent Key is in the detection area of the interior antenna.
- The ignition switch operation is input to BCM as a signal. BCM changes the power supply position according to the status and operates the ignition relay (inside IPDM E/R) to supply power to each power circuit.

Component Parts Location

INFOID:000000001546813

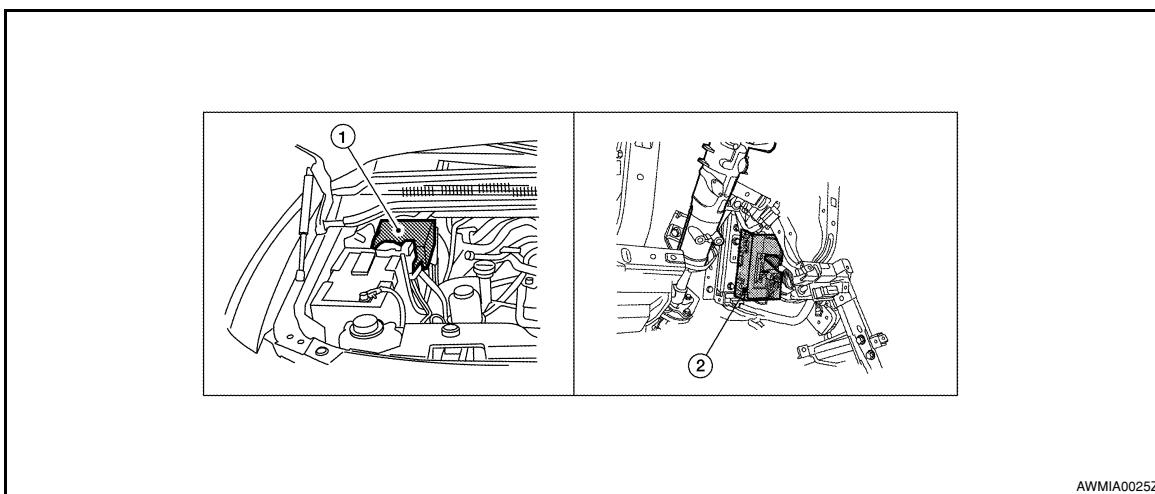

1. IPDM E/R (contains ignition relay)
2. BCM (view with instrument panel removed)

Component Description

INFOID:000000001546814

BCM	Reference
IPDM E/R	PCS-4
Ignition relay (in IPDM E/R)	PCS-4
Park/neutral position switch	TM-44

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : Diagnosis Description

INFOID:000000001546815

BCM CONSULT-III FUNCTION

Refer to [BCS-17, "BCM : CONSULT-III Function \(BCM - BCM\)".](#)

COMMON ITEM : CONSULT-III Function

INFOID:000000001546816

ECU IDENTIFICATION

Displays the BCM part No.

SELF-DIAG RESULT

Refer to [BCS-51, "DTC Index".](#)

INTELLIGENT KEY

INTELLIGENT KEY : CONSULT-III Function (BCM - INTELLIGENT KEY)

INFOID:000000001546817

BCM CONSULT-III FUNCTION

Refer to [BCS-23, "INTELLIGENT KEY : CONSULT-III Function \(BCM - INTELLIGENT KEY\)".](#)

SELF-DIAG RESULT

Refer to [BCS-51, "DTC Index".](#)

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N

O

P

COMPONENT DIAGNOSIS

U1000 CAN COMM CIRCUIT

Description

INFOID:0000000001546818

Refer to [LAN-4, "System Description"](#).

DTC Logic

INFOID:0000000001546819

DTC DETECTION LOGIC

CONSULT-III display description	DTC Detection Condition	Possible cause
CAN COMM CIRCUIT [U1000]	When IPDM E/R cannot communicate CAN communication signal continuously for 2 seconds or more	<p>In CAN communication system, any item (or items) of the following listed below is malfunctioning.</p> <ul style="list-style-type: none"> • Receiving (TCM) • Receiving (ECM) • Receiving (BCM) • Receiving (Combination meter)

Diagnosis Procedure

INFOID:0000000001546820

1. PERFORM SELF DIAGNOSTIC

1. Turn ignition switch ON and wait for 2 seconds or more.
2. Check "SELF-DIAG RESULTS".

Is "CAN COMM CIRCUIT" displayed?

- YES >> Refer to [LAN-5, "CAN Communication Control Circuit"](#).
 NO >> Refer to [GI-39, "Intermittent Incident"](#).

POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

POWER SUPPLY AND GROUND CIRCUIT BCM

BCM : Diagnosis Procedure

INFOID:000000001546850

BCM : Special Repair Requirement

INFOID:000000001546851

1 . REQUIRED WORK WHEN REPLACING BCM

Initialize control unit. Refer to CONSULT-III Operation Manual.

>> Work end.

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) : Diagnosis Procedure

INFOID:000000001546852

Refer to [PCS-16. "Diagnosis Procedure".](#)

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N

O

P

< ECU DIAGNOSIS >

ECU DIAGNOSIS

BCM (BODY CONTROL MODULE)

Reference Value

INFOID:000000001546857

Refer to [BCS-38, "Reference Value".](#)

Terminal Layout

INFOID:000000001546858

Refer to [BCS-41, "Terminal Layout".](#)

Physical Values

INFOID:000000001546859


Refer to [BCS-41, "Physical Values".](#)

BCM (BODY CONTROL MODULE)

[POWER DISTRIBUTION SYSTEM]

< ECU DIAGNOSIS >

Wiring Diagram

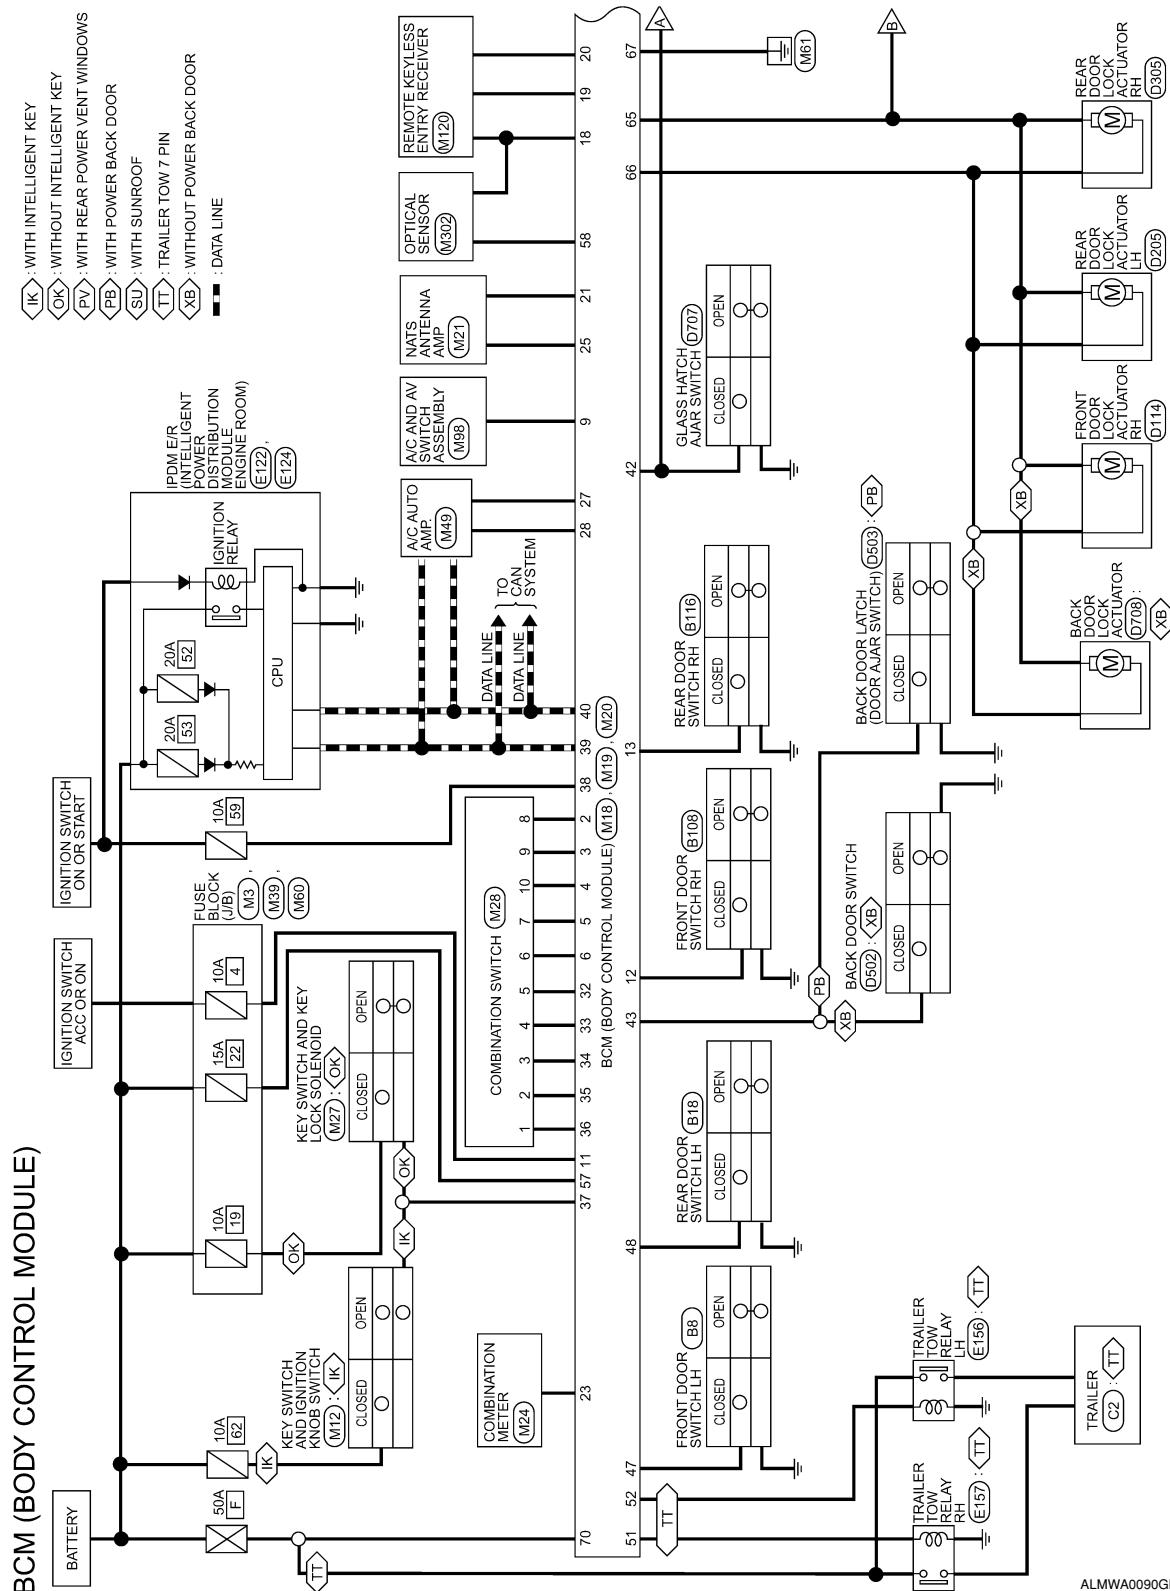


ALMWA0090GE

BCM (BODY CONTROL MODULE)

[POWER DISTRIBUTION SYSTEM]

< ECU DIAGNOSIS >

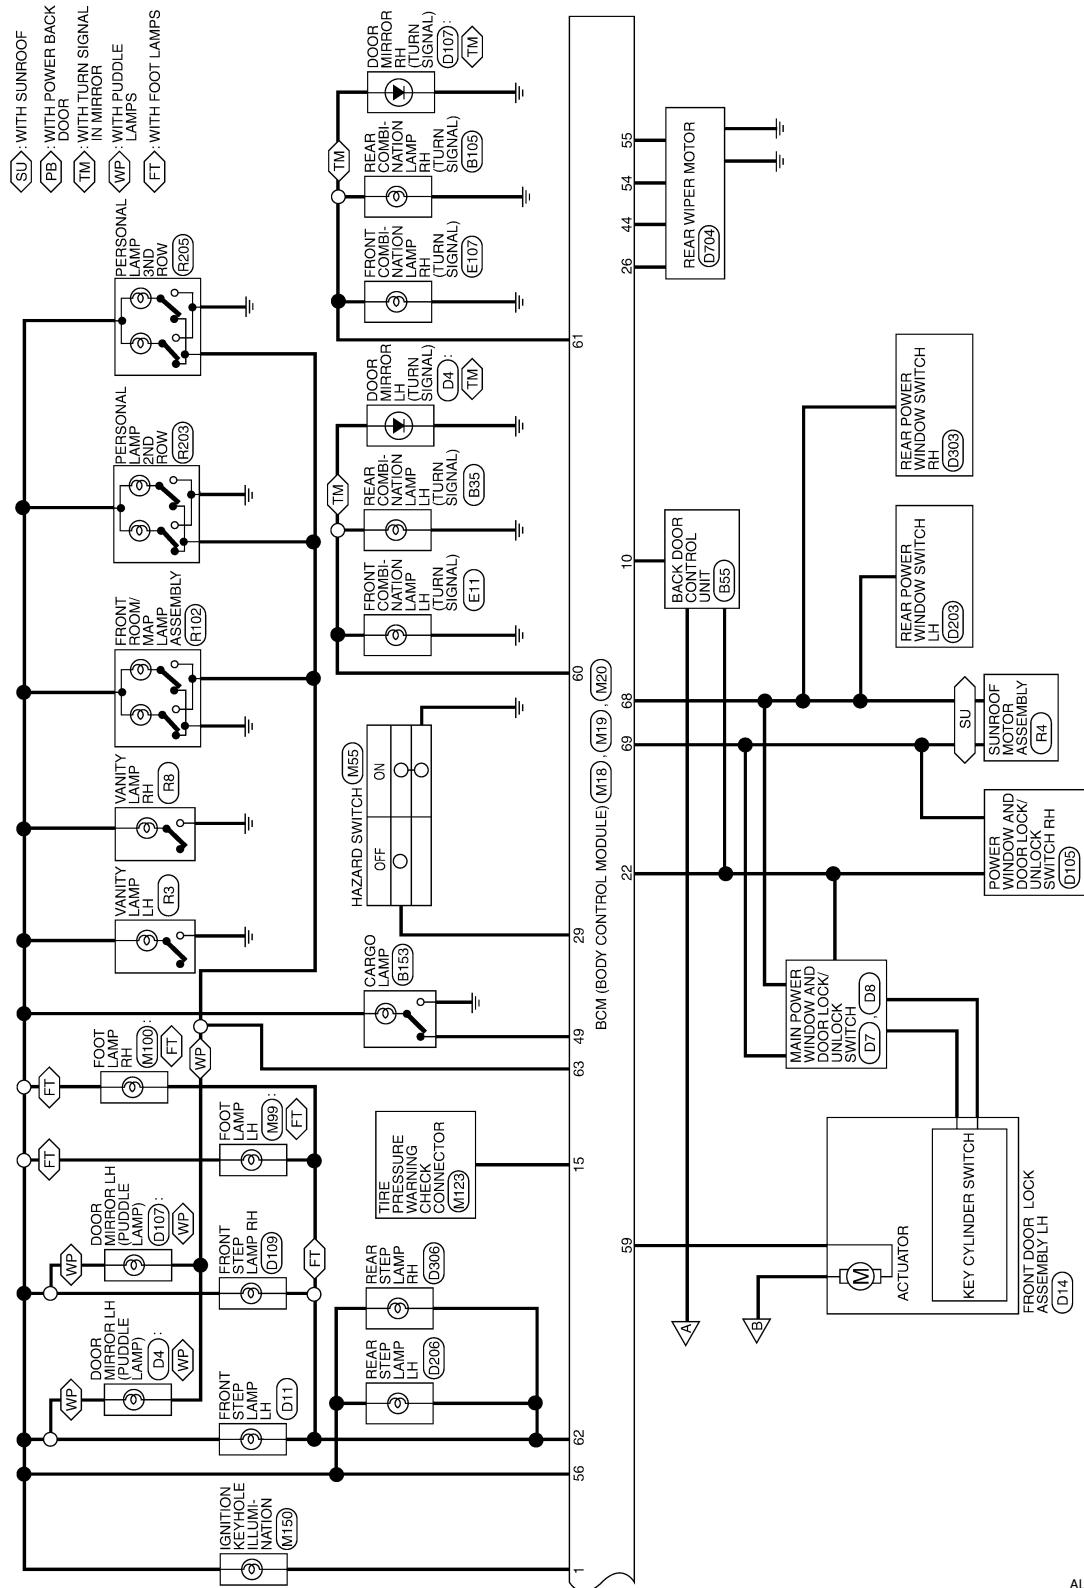


ALMWA0091Ge

BCM (BODY CONTROL MODULE)

[POWER DISTRIBUTION SYSTEM]

< ECU DIAGNOSIS >

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE

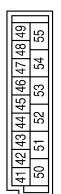

Terminal No.	Color of Wire	Signal Name
41	-	-
42	GR	TRNK/GLASS HATCH SW
43	R/B	BACK DOOR SW/FUEL LID OPEN SW
44	O	AUTO_STOP
45	-	-
46	-	-
47	SB	DOOR SW (DR)
48	R/Y	DOOR SW (RL)
49	R	LUGGAGE_LAMP
50	-	-
51	G/Y	TRAILER_RH_FLASH
52	G/B	TRAILER_LH_FLASH
53	-	-
54	Y	RR_WIPER_OUTP_2 (MTR)
55	SB	RR_WIPER_OUTP_1 (MTR)

Terminal No.	Color of Wire	Signal Name
16	—	—
17	—	—



23	G/O	SECURITY_IND_OUTPUT		
24	-	-		
25	BR	IMMOBILIZER SCI(RX, TX)		
26	-	-		
27	W/R	AC_SW		
28	L/R	BLR_FAN_SW		
29	W/B	HAZARD_SW		
30	-	-		
31	-	-		
32	R/G	OUTPUT_5		
33	R/Y	OUTPUT_4		
34	L	OUTPUT_3		
35	O/B	OUTPUT_2		
36	R/W	OUTPUT_1		
37	B/R	KEY_SW		
38	W/L	IGN_SW		
39	L	CAN_H		
40	D	CAN_L		


ALMIA0281GB

BCM (BODY CONTROL MODULE)

[POWER DISTRIBUTION SYSTEM]

< ECU DIAGNOSIS >

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK

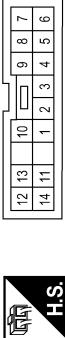

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name	Terminal No.	Color of Wire	Signal Name
56	R/G	BATTERY SAVER OUTPUT	1	R/W	—
57	Y/R	BAT (FUSE)	2	O/B	—
58	W/R	AUTO_L_INPUT	3	L	—
59	G	DOOR UNLOCK OUTPUT (DR)	4	R/L	—
60	G/B	FLASHER OUTPUT (LEFT)	5	R/G	—
61	G/Y	FLASHER OUTPUT (RIGHT)	6	V	—
62	R/W	STEP LAMP OUTPUT	7	G/B	—
63	L	ROOM LAMP OUTPUT	8	SB	—
64	—	—	9	G/Y	—
65	V	DOOR LOCK OUTPUT (ALL)	10	Y	—
66	G/Y	DOOR UNLOCK OUTPUT (OTHER)			
67	B	GND (POWER)			
68	W/L	POWER WINDOW POWER SUPPLY (RAP)			
69	W/R	POWER WINDOW POWER SUPPLY (BAT)			
70	W/B	BATT (FL)			

ALMIA0282GB

INFOID:0000000001546862

DTC Inspection Priority Chart

Refer to [BCS-50, "DTC Inspection Priority Chart"](#).

DTC Index

INFOID:0000000001546863

Refer to [BCS-51, "DTC Index"](#).

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

A

Reference Value

INFOID:000000001546864

B

Refer to [PCS-17, "Reference Value".](#)

Terminal Layout

INFOID:000000001546865

C

Refer to [PCS-19, "Terminal Layout".](#)

Physical Values

INFOID:000000001546866

D

Refer to [PCS-19, "Physical Values".](#)

E

F

G

H

I

J

K

L

PCS

N

O

P

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)


< ECU DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

Wiring Diagram

INFOID:000000001546867

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

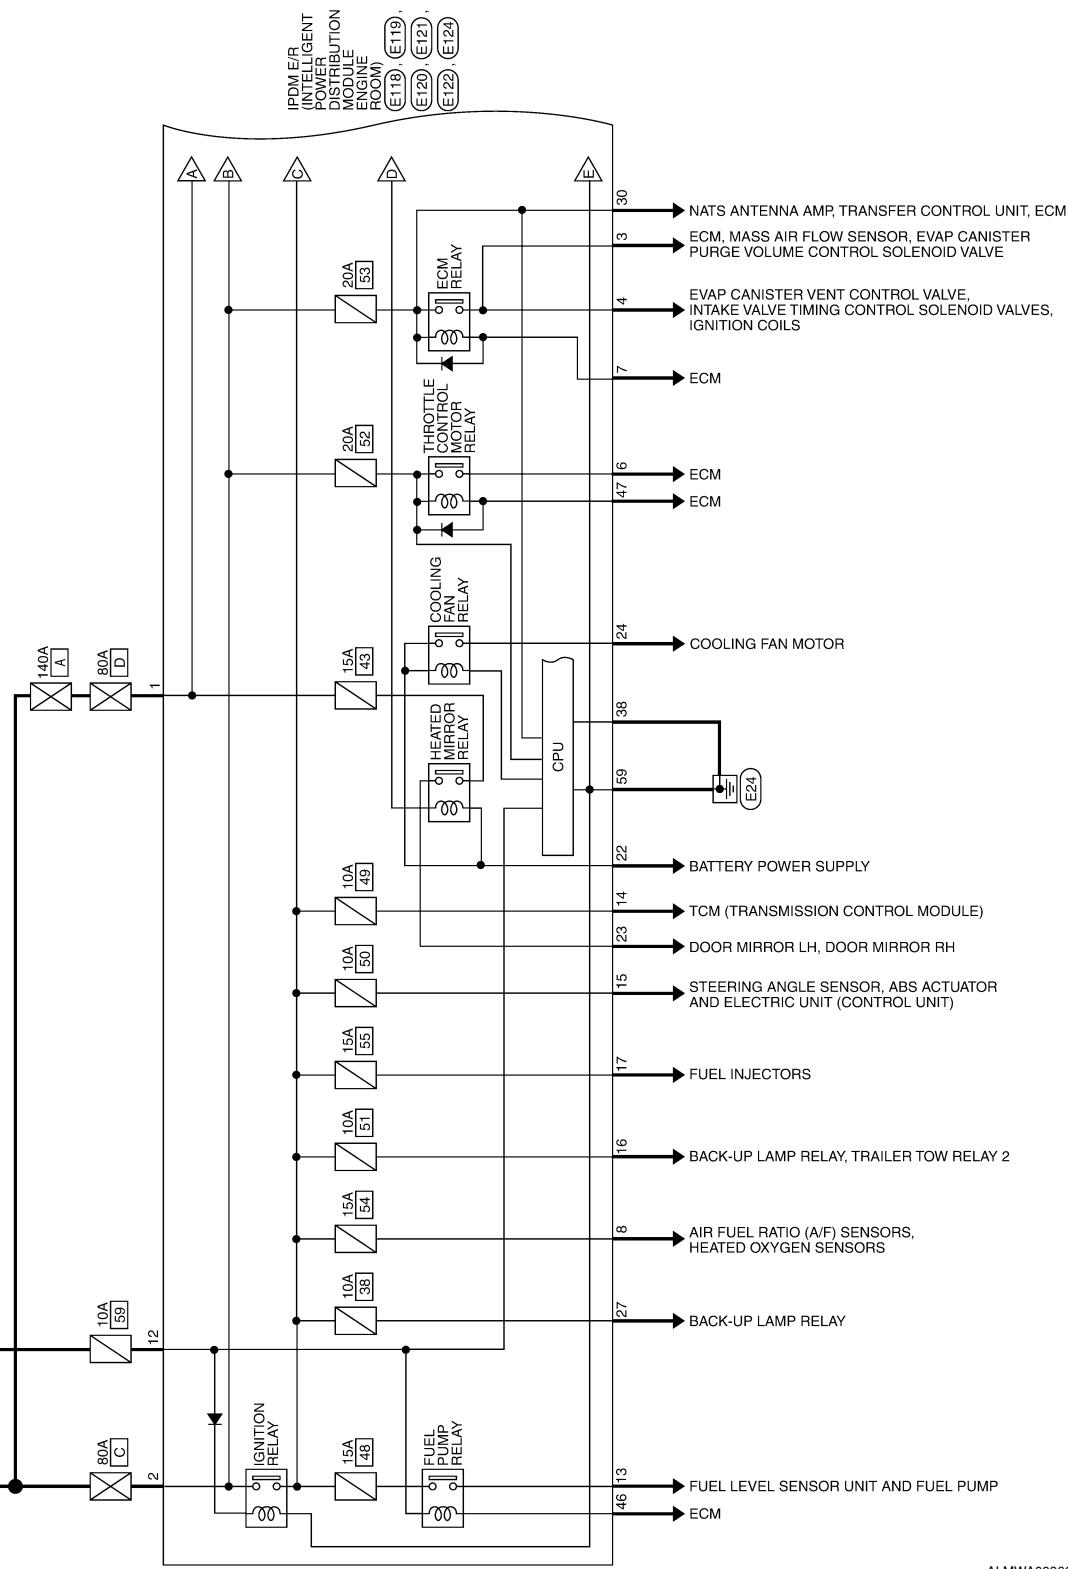


ALMWA0086GE

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

TT : TRAILER TOW 7PIN
 FL : WITH FRONT FOG LAMP
 N : FOR CANADA
 - : DATA LINE

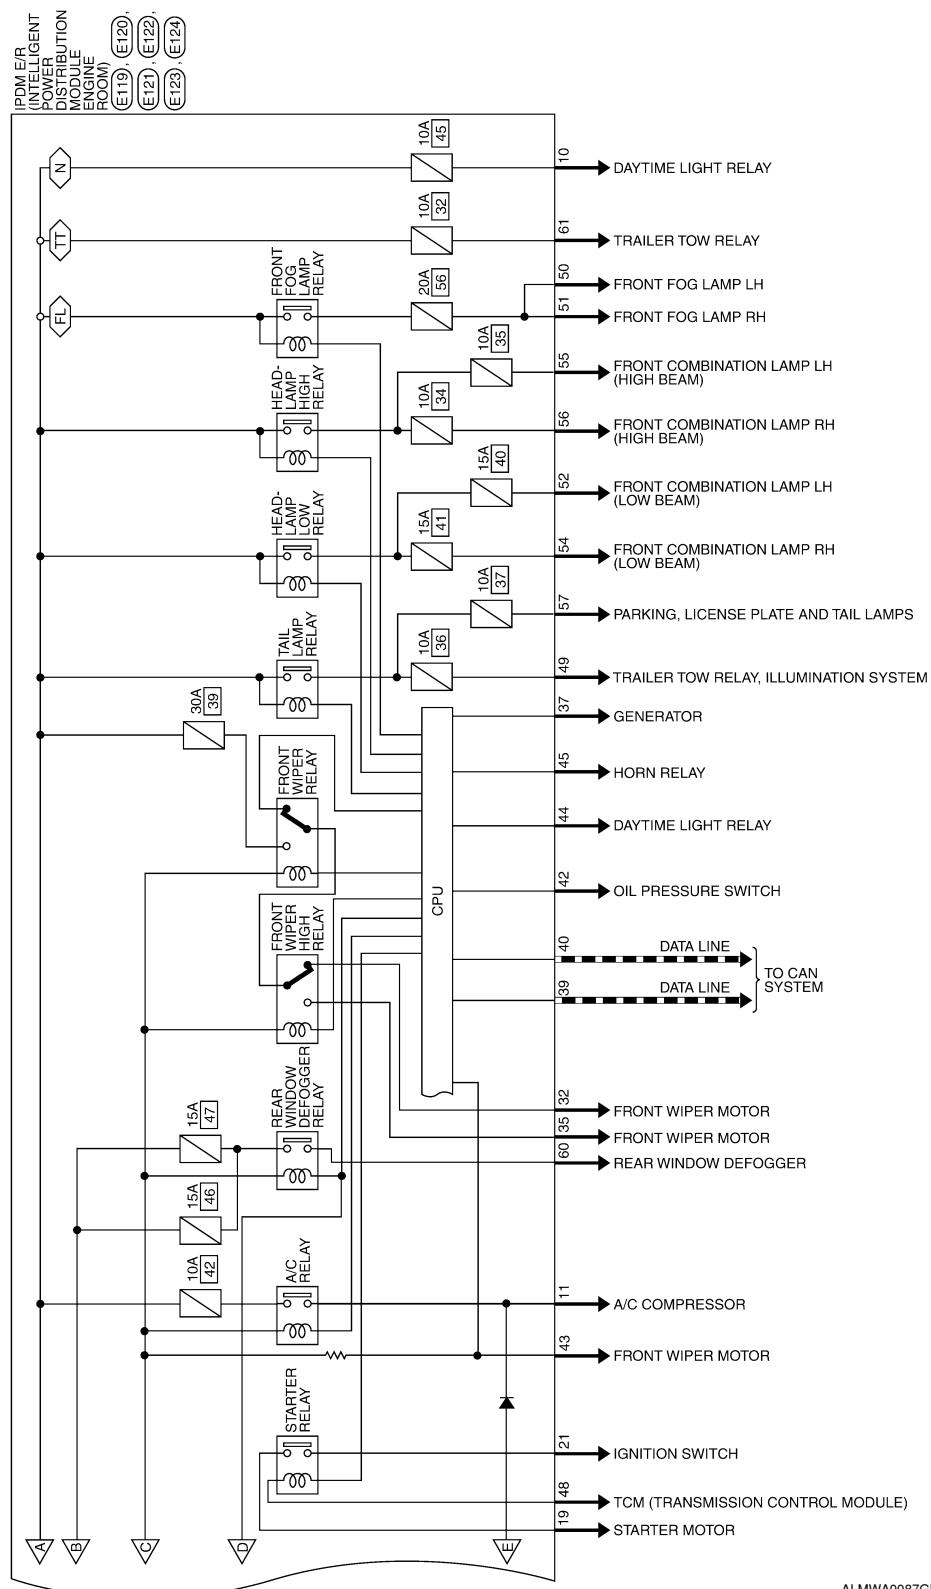


ALMWA0087GE

A
B
C
D
E
F
G
H
I
J
K
L
PCS
N
O
P

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) CONNECTORS


Terminal No.	Color of Wire	Signal Name
3	BR	IGN COIL
4	W/L	EOM
6	L	ETC
7	W/B	ECM RLY CONT
8	R/B	02_SENSOR
10	G	DTTRL RLY SUPPLY
11	Y/B	AC COMPRESSOR
12	L/W	IGN SW (IG)
13	B/Y	FUEL PUMP
14	Y/R	ATT CU IGN SUPPLY
15	LG/B	ABS IGN SUPPLY
15	GR	ABS IGN SUPPLY
16	G	REVERSE LAMP
17	W	INJECTOT

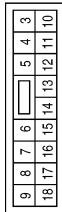

Connector No.	Color of Wire	Signal Name
1	B/Y	FL USM
2	R	FL MAIN



Connector No.	Color of Wire	Signal Name
1	IGN SW(ST)	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
2	ECM BAT	

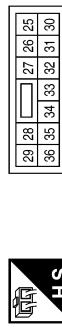


Connector No.	Color of Wire	Signal Name
19	W/R	STARTER MTR
21	BR	IGN SW(ST)
22	G	F/L MOTOR FAN
23	GR/W	HEATED MIRROR
24	L/B	MOTOR FAN 2

Terminal No.	Color of Wire	Signal Name
27	W/B	TTOW REV LAMP
30	W	ECM BAT
32	L	FR WIPER LO
35	L/B	FR WIPER HI

ALMIA0251GB


Connector No.	E123
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN

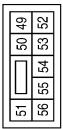

Terminal No.	Color of Wire	Signal Name
37	Y	ALT-C CONT
38	B	SIGNAL GRD
39	L	CAN-H
40	P	CAN-L
42	GR	OIL PRESSURE SW
43	L/Y	AUTO STOP SW
44	BR	DTRL RLY CONT
45	G/W	ANTI THEFT HORN
46	GR	FUEL PUMP RLY CONT
47	O	ETC RLY CONT
48	B/BR	INHIBIT SW

Terminal No.	Color of Wire	Signal Name
49	R/L	ILLUMINATION
50	W/R	FR FOG LAMP LH
51	W/R	FR FOG LAMP RH
52	L	H/LAMP LO RH
54	R/Y	H/LAMP LO RH
55	G	H/LAMP HI LH
56	Y	H/LAMP HI RH

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

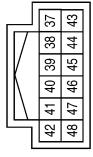

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
57	R/L	TAIL LAMP
59	B	POWER GND
60	B/W	RR DEF
61	BR	TRAIL RLY SUPPLY

ALMIA0252GB

INFOID:0000000001546868

INFOID:0000000001546869

Fail Safe

Refer to [PCS-26, "Fail Safe".](#)

DTC Index

Refer to [PCS-28, "DTC Index".](#)

A

B

C

D

E

F

G

H

K

N

O

P

PCS

ON-VEHICLE MAINTENANCE

PRE-INSPECTION FOR DIAGNOSTIC

Basic Inspection

INFOID:000000001546871

The engine start function, door lock function, power distribution system and NATS-NVIS system are closely related to each other regarding control. Narrow down the functional area in question by performing basic inspection to identify which function is malfunctioning. The vehicle security function can operate only when the door lock and power distribution system are operating normally. Therefore, it is easy to identify any factor unique to the vehicle security system by performing the vehicle security operation check after basic inspection.

1. CHECK DOOR LOCK OPERATION

1. Check the door lock for normal operation with the keyfob or Intelligent Key (if equipped) and door request switch.

Successful door lock operation with the keyfob or Intelligent Key (if equipped) and request SW indicates that the remote keyless entry receiver and inside key antenna (with Intelligent Key) required for engine start are functioning normally.

Identify the malfunctioning point by referring to the DLK section if the door cannot be unlocked.

Can the door be locked with the Intelligent Key and door request switch?

YES >> GO TO 2

NO >> Refer to [DLK-175. "Symptom Table"](#).

2. CHECK ENGINE STARTING

1. Checks that the engine starts.

Does the engine start?

YES >> GO TO 3

NO >> Refer to [SEC-86. "Symptom Table"](#).

3. CHECK STEERING LOCKING (MODELS WITH INTELLIGENT KEY)

1. Does the steering lock when operating door switch after switching the power supply from ON position (or ACC position) to LOCK position?

If door switch is malfunctioning, BCM cannot lock the steering. If BCM does not detect DTC, steering lock unit is normal.

Does steering lock?

YES >> GO TO 4

NO >> Refer to [DLK-57. "Component Function Check"](#).

4. CHECK VEHICLE SECURITY SYSTEM

1. Check the vehicle security system for normal operation.

The vehicle security function can operate only when the door lock and power distribution functions are operating normally.

Therefore, it is easy to identify any factor unique to the vehicle security by performing the vehicle security operation check after this basic inspection.

>> Refer to [SEC-89. "Vehicle Security Operation Check"](#).

ON-VEHICLE REPAIR

BCM (BODY CONTROL MODULE)

Removal and Installation

INFOID:000000001546872

Refer to [BCS-54, "Removal and Installation".](#)

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N

O

P