

A  
B  
C

# SECTION INL

## INTERIOR LIGHTING SYSTEM

### CONTENTS

<p><b>BASIC INSPECTION</b> ..... 3</p> <p><b>DIAGNOSIS AND REPAIR WORKFLOW</b> ..... 3</p> <p style="padding-left: 20px;">Work Flow .....3</p> <p><b>FUNCTION DIAGNOSIS</b> ..... 5</p> <p><b>INTERIOR ROOM LAMP CONTROL SYSTEM</b> ..... 5</p> <p style="padding-left: 20px;">System Diagram .....5</p> <p style="padding-left: 20px;">System Description .....5</p> <p style="padding-left: 20px;">Component Parts Location .....7</p> <p style="padding-left: 20px;">Component Description .....7</p> <p><b>INTERIOR ROOM LAMP BATTERY SAVER SYSTEM</b> ..... 8</p> <p style="padding-left: 20px;">System Diagram .....8</p> <p style="padding-left: 20px;">System Description .....8</p> <p style="padding-left: 20px;">Component Parts Location .....9</p> <p style="padding-left: 20px;">Component Description .....10</p> <p><b>ILLUMINATION CONTROL SYSTEM</b> .....11</p> <p style="padding-left: 20px;">System Diagram .....11</p> <p style="padding-left: 20px;">System Description .....11</p> <p style="padding-left: 20px;">Component Parts Location .....12</p> <p style="padding-left: 20px;">Component Description .....12</p> <p><b>DIAGNOSIS SYSTEM (BCM)</b> .....13</p> <p><b>COMMON ITEM</b> .....13</p> <p style="padding-left: 20px;">COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM) .....13</p> <p><b>INT LAMP</b> .....14</p> <p style="padding-left: 20px;">INT LAMP : CONSULT-III Function (BCM - INT LAMP) .....15</p> <p><b>BATTERY SAVER</b> .....16</p> <p style="padding-left: 20px;">BATTERY SAVER : CONSULT-III Function (BCM - BATTERY SAVER) .....16</p> <p><b>COMPONENT DIAGNOSIS</b> .....18</p>	<p><b>POWER SUPPLY AND GROUND CIRCUIT</b> ....18</p> <p><b>BCM</b> .....18</p> <p style="padding-left: 20px;">BCM : Diagnosis Procedure .....18</p> <p><b>INTERIOR ROOM LAMP POWER SUPPLY CIRCUIT</b> .....19</p> <p style="padding-left: 20px;">Description .....19</p> <p style="padding-left: 20px;">Component Function Check .....19</p> <p style="padding-left: 20px;">Diagnosis Procedure .....19</p> <p><b>INTERIOR ROOM LAMP CONTROL CIRCUIT</b> .....21</p> <p style="padding-left: 20px;">Description .....21</p> <p style="padding-left: 20px;">Component Function Check .....21</p> <p style="padding-left: 20px;">Diagnosis Procedure .....21</p> <p><b>STEP LAMP CIRCUIT</b> .....23</p> <p style="padding-left: 20px;">Description .....23</p> <p style="padding-left: 20px;">Component Function Check .....23</p> <p style="padding-left: 20px;">Diagnosis Procedure .....23</p> <p><b>PUSH-BUTTON IGNITION SWITCH ILLUMINATION CIRCUIT</b> .....25</p> <p style="padding-left: 20px;">Description .....25</p> <p style="padding-left: 20px;">Component Function Check .....25</p> <p style="padding-left: 20px;">Diagnosis Procedure .....25</p> <p><b>INTERIOR ROOM LAMP CONTROL SYSTEM</b> .....27</p> <p style="padding-left: 20px;">Wiring Diagram - INTERIOR ROOM LAMP - .....27</p> <p><b>ILLUMINATION</b> .....36</p> <p style="padding-left: 20px;">Wiring Diagram - ILLUMINATION - .....36</p> <p><b>ECU DIAGNOSIS</b> .....50</p> <p><b>BCM (BODY CONTROL MODULE)</b> .....50</p> <p style="padding-left: 20px;">Reference Value .....50</p> <p style="padding-left: 20px;">Wiring Diagram - BCM - .....74</p> <p style="padding-left: 20px;">Fail-safe .....88</p> <p style="padding-left: 20px;">DTC Inspection Priority Chart .....91</p>
---	---

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL

DTC Index .....	92	<b>ROOF CENTER</b> .....	<b>116</b>
<b>COMBINATION METER</b> .....	<b>95</b>	ROOF CENTER : Replacement .....	116
Reference Value .....	95	<b>VANITY MIRROR LAMP</b> .....	<b>117</b>
Wiring Diagram - METER - .....	100	Exploded View .....	117
Fail-Safe .....	110	Replacement .....	117
DTC Index .....	111	<b>CONSOLE POCKET LAMP</b> .....	<b>118</b>
<b>SYMPTOM DIAGNOSIS</b> .....	<b>112</b>	Exploded View .....	118
<b>INTERIOR LIGHTING SYSTEM SYMPTOMS.</b>	<b>112</b>	Replacement .....	118
Symptom Table .....	112	<b>ASHTRAY ILLUMINATION</b> .....	<b>119</b>
<b>PRECAUTION</b> .....	<b>113</b>	Exploded View .....	119
<b>PRECAUTIONS</b> .....	<b>113</b>	Replacement .....	119
<b>FOR USA AND CANADA</b> .....	<b>113</b>	<b>GLOVE BOX LAMP</b> .....	<b>120</b>
FOR USA AND CANADA : Precaution for Supple-		Exploded View .....	120
mental Restraint System (SRS) "AIR BAG" and		Replacement .....	120
"SEAT BELT PRE-TENSIONER" .....	113	<b>STEP LAMP</b> .....	<b>121</b>
<b>FOR MEXICO</b> .....	<b>113</b>	Exploded View .....	121
FOR MEXICO : Precaution for Supplemental Re-		Removal and Installation .....	121
straint System (SRS) "AIR BAG" and "SEAT BELT		Replacement .....	121
PRE-TENSIONER" .....	113	<b>PERSONAL LAMP</b> .....	<b>122</b>
<b>ON-VEHICLE REPAIR</b> .....	<b>115</b>	Exploded View .....	122
<b>MAP LAMP</b> .....	<b>115</b>	Removal and Installation .....	122
Exploded View .....	115	Replacement .....	123
Removal and Installation .....	115	<b>LUGGAGE ROOM LAMP</b> .....	<b>124</b>
Replacement .....	115	Exploded View .....	124
<b>MOOD LAMP</b> .....	<b>116</b>	Removal and Installation .....	124
<b>MAP LAMP</b> .....	<b>116</b>	Replacement .....	124
MAP LAMP : Replacement .....	116	<b>SERVICE DATA AND SPECIFICATIONS</b>	
<b>FRONT DOOR GRIP</b> .....	<b>116</b>	<b>(SDS)</b> .....	<b>125</b>
FRONT DOOR GRIP : Replacement .....	116	<b>SERVICE DATA AND SPECIFICATIONS</b>	
		<b>(SDS)</b> .....	<b>125</b>
		Bulb Specifications .....	125

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >


## BASIC INSPECTION

### DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000003295090

#### OVERALL SEQUENCE

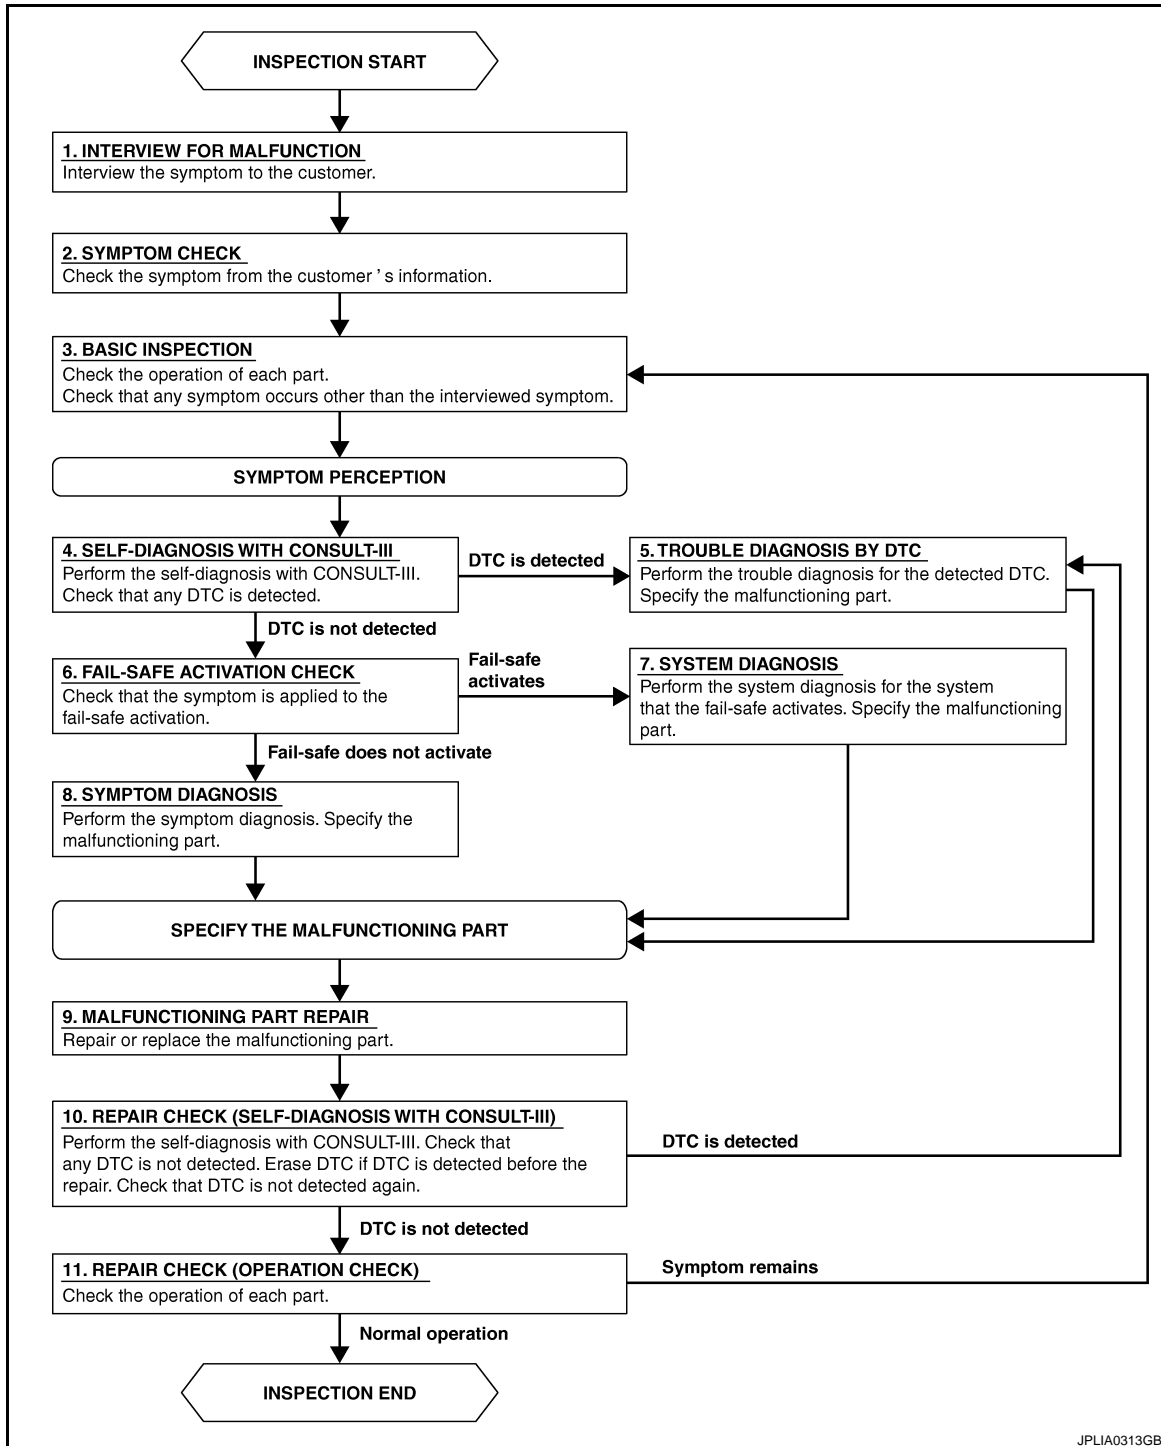

#### DETAILED FLOW

##### 1. INTERVIEW FOR MALFUNCTION

Interview the symptom to the customer.

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

---

>> GO TO 2.

## 2. SYMPTOM CHECK

---

Check the symptom from the customer's information.

>> GO TO 3.

## 3. BASIC INSPECTION

---

Check the operation of each part. Check that any symptom occurs other than the interviewed symptom.

>> GO TO 4.

## 4. SELF-DIAGNOSIS WITH CONSULT-III

---

Perform the self-diagnosis with CONSULT-III. Check that any DTC is detected.

Is any DTC detected?

YES >> GO TO 5.

NO >> GO TO 6.

## 5. TROUBLE DIAGNOSIS BY DTC

---

Perform the trouble diagnosis for the detected DTC. Specify the malfunctioning part.

>> GO TO 9.

## 6. FAIL-SAFE ACTIVATION CHECK

---

Check that the symptom is applied to the fail-safe activation.

Does the fail-safe activate?

YES >> GO TO 7.

NO >> GO TO 8.

## 7. SYSTEM DIAGNOSIS

---

Perform the system diagnosis for the system that the fail-safe activates. Specify the malfunctioning part.

>> GO TO 9.

## 8. SYMPTOM DIAGNOSIS

---

Perform the symptom diagnosis. Specify the malfunctioning part.

>> GO TO 9.

## 9. MALFUNCTION PART REPAIR

---

Repair or replace the malfunctioning part.

>> GO TO 10.

## 10. REPAIR CHECK (SELF-DIAGNOSIS WITH CONSULT-III)

---

Perform the self-diagnosis with CONSULT-III. Check that any DTC is not detected. Erase DTC if DTC is detected before the repair. Check that DTC is not detected again.

Is any DTC detected?

YES >> GO TO 5.

NO >> GO TO 11.

## 11. REPAIR CHECK (OPERATION CHECK)

---

Check the operation of each part.

Does it operate normally?

YES >> INSPECTION END

NO >> GO TO 3.


# INTERIOR ROOM LAMP CONTROL SYSTEM

< FUNCTION DIAGNOSIS >

## FUNCTION DIAGNOSIS

### INTERIOR ROOM LAMP CONTROL SYSTEM

#### System Diagram

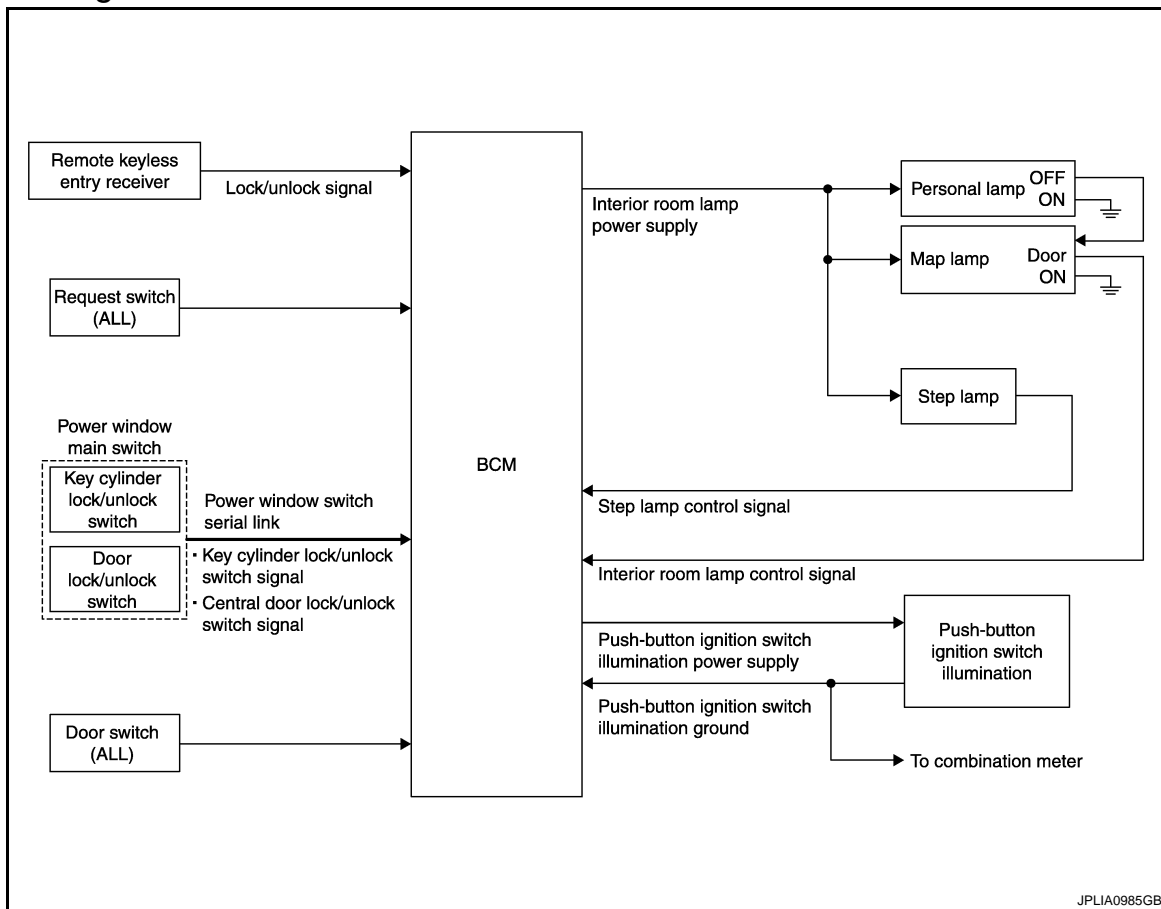

#### System Description

INFOID:000000003295092

##### OUTLINE

- Interior room lamps\* are controlled by interior room lamp timer control function of BCM.  
\*: Map lamp and personal lamp (when map lamp switch is in DOOR position).
- Step lamp is controlled by step lamp control function of BCM.
- Push-button ignition switch illumination is controlled by the push-button ignition switch illumination control function of BCM.

##### INTERIOR ROOM LAMP TIMER CONTROL


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

INL

# INTERIOR ROOM LAMP CONTROL SYSTEM

## < FUNCTION DIAGNOSIS >

### Interior Room Lamp Timer Basic Operation

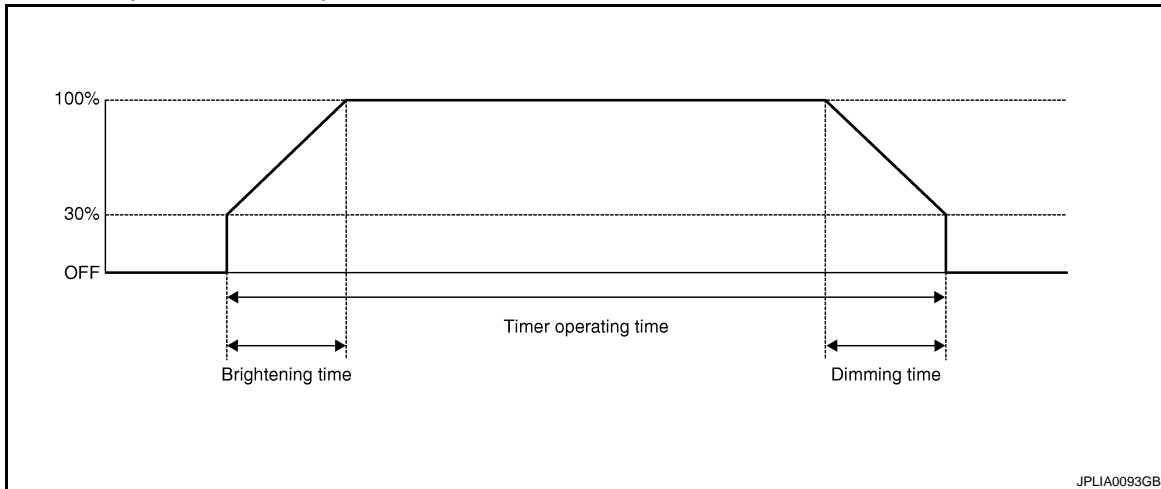

- The interior room lamp turns ON and OFF (gradual brightening and dimming) by the interior room timer.
- BCM judges the vehicle condition with the following items. It activates the interior room timer.
  - Ignition switch status
  - Door switch signal (ALL)
  - Door lock/unlock signal (Remote keyless entry receiver, each request switch, key cylinder lock/unlock switch, door lock/unlock switch)

#### NOTE:

Each function of interior room lamp timer can be set by CONSULT-III. Refer to [INL-15. "INT LAMP : CONSULT-III Function \(BCM - INT LAMP\)"](#).

#### Interior Room Lamp ON Operation

- BCM always turns the interior room lamp ON when any door opens.
- BCM activates the interior room timer in any of the following conditions to turn the interior room lamp ON for a period of time.
  - Any door opens before all doors close.
  - Ignition switch is turned ON → OFF.
  - Any door unlock signal is detected when all doors close with ignition switch OFF.

#### NOTE:

Restart the timer if new condition is input during the timer operating time.

#### Interior Room Lamp OFF Operation

BCM stops the timer in any of the following conditions to turns the interior room lamp OFF.

- The timer operating time is expired.
- Ignition switch position is other than OFF with all doors close.
- Any door lock operation is detected with all doors close.

## STEP LAMP CONTROL

BCM controls the step lamp (ground-side) to turn ON with any door switch ON.

## PUSH-BUTTON IGNITION SWITCH ILLUMINATION CONTROL

### Push-button Ignition Switch Illumination Basic Operation

- BCM provides the power supply and the ground to turn the push-button ignition switch illumination ON.
- BCM cuts the ground supply while the each illumination (tail lamp) ON. BCM switches to the ground control with the meter illumination control function.

### Push-button Ignition Switch Illumination ON Operation

BCM turns the push-button ignition switch illumination ON in the following conditions.

- Ignition switch ON
- Each illumination (tail lamp) ON
- Any of the following conditions with ignition switch OFF
  - Engine start permission is entered.
  - Intelligent Key inserted into the key slot.
  - Driver door is LOCK → UNLOCK.
  - Driver door is open.

### Push-button Ignition Switch Illumination OFF Operation

# INTERIOR ROOM LAMP CONTROL SYSTEM


## < FUNCTION DIAGNOSIS >

BCM turns the push-button ignition switch illumination OFF in any of the following conditions.

- The push-button ignition switch illumination ON conditions do not satisfy.
- All of the following conditions with ignition switch OFF
  - Each illumination (tail lamp) OFF
  - The push-button ignition switch illumination ON conditions do not change (15 seconds after the ignition switch OFF) or the driver door is UNLOCK → LOCK.

## Component Parts Location

INFOID:000000003295093

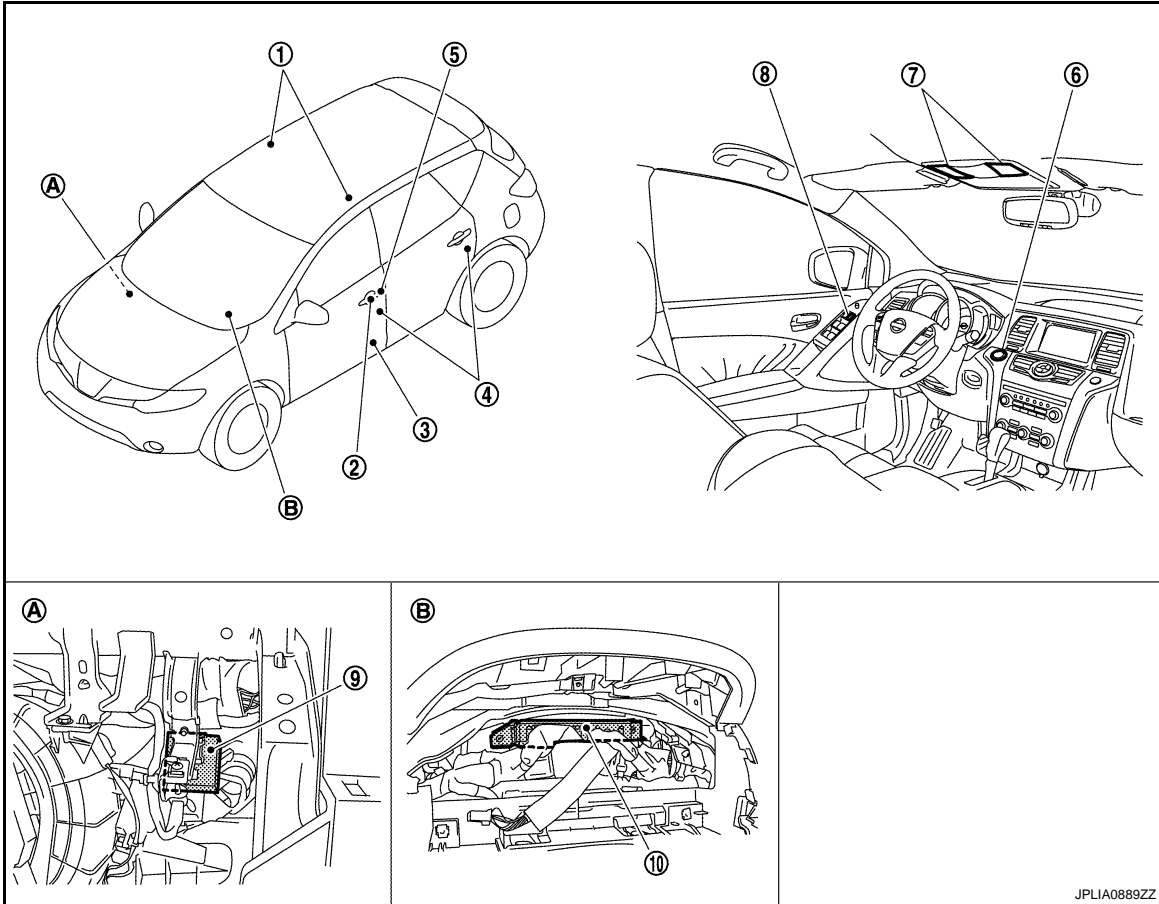

- |                       |                                 |   |
|-----------------------|---------------------------------|---|
| 1. Personal lamp      | 2. Request switch               | 3. Step lamp                                |
| 4. Door switch        | 5. Key cylinder switch          | 6. Push-button ignition switch illumination |
| 7. Map lamp           | 8. Door lock switch             | 9. Remote keyless entry receiver            |
| 10. BCM               |                                 |   |
| A. Over the glove box | B. Behind the combination meter |   |

## Component Description

INFOID:000000003295094

Part	Description
BCM	<ul style="list-style-type: none"> <li>• Activates the interior room lamp timer depending on the vehicle condition to turn the interior room lamp ON/OFF.</li> <li>• Turns the step lamp ON /OFF according to any door switch status.</li> </ul>
Remote keyless entry receiver	<ul style="list-style-type: none"> <li>• Receives the lock/unlock signal from keyfob.</li> <li>• Transmits the lock/unlock signal to BCM.</li> </ul>
<ul style="list-style-type: none"> <li>• Request switch</li> <li>• Key cylinder lock/unlock switch</li> <li>• Door lock/unlock switch</li> </ul>	Inputs the lock/unlock signal to BCM.
Door switch	Inputs the door switch signal to BCM.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

INL


# INTERIOR ROOM LAMP BATTERY SAVER SYSTEM

< FUNCTION DIAGNOSIS >

## INTERIOR ROOM LAMP BATTERY SAVER SYSTEM

### System Diagram

INFOID:000000003295095

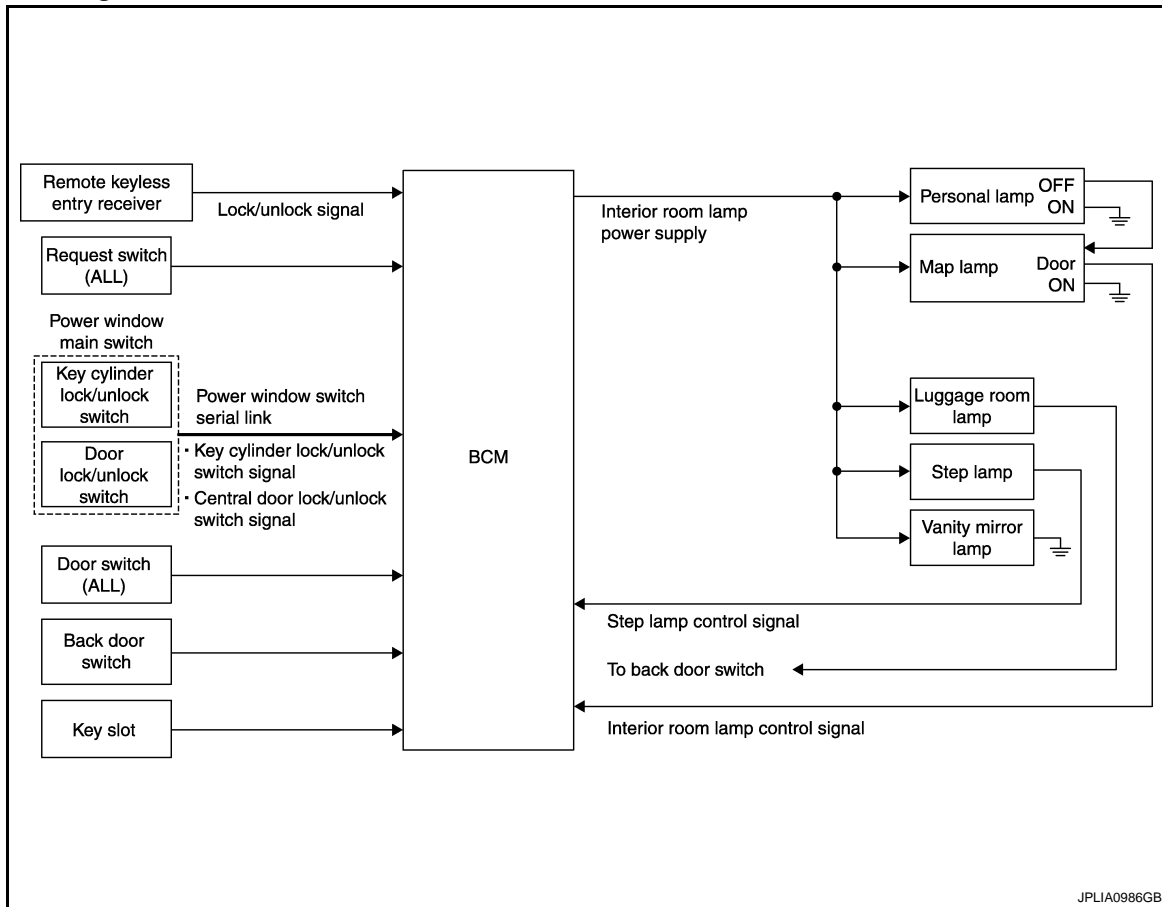

### System Description

INFOID:000000003295096

#### OUTLINE

- Interior room lamp battery saver is controlled by BCM.
- BCM turns applicable lamps OFF depending on the vehicle condition. This function prevents the battery from over-discharging if the driver neglect turning OFF the any lamps.

#### Applicable lamps

- Map lamp
- Personal lamp
- Step lamp
- Luggage room lamp
- Vanity mirror lamp

#### INTERIOR ROOM LAMP BATTERY SAVER FUNCTION

- When the ignition switch is turned OFF, BCM operates the timer for a period of time to cut the interior room lamp power supply.
- BCM restart the timer when any of the following signals changes while operating the timer.
  - Ignition switch status
  - Door switch signal (ALL)
  - Door lock/unlock signal (Remote keyless entry receiver, each request switch, key cylinder lock/unlock switch, door lock/unlock switch)
  - Back door switch signal
  - Key switch signal (Key slot)
- BCM provides the interior room lamp power supply continuously when the ignition switch position is other than OFF.

#### NOTE:




# INTERIOR ROOM LAMP BATTERY SAVER SYSTEM

## < FUNCTION DIAGNOSIS >

Each function of interior room lamp battery saver can be set by CONSULT-III. Refer to [INL-16. "BATTERY SAVER : CONSULT-III Function \(BCM - BATTERY SAVER\)"](#).

## Component Parts Location

INFOID:000000003295097

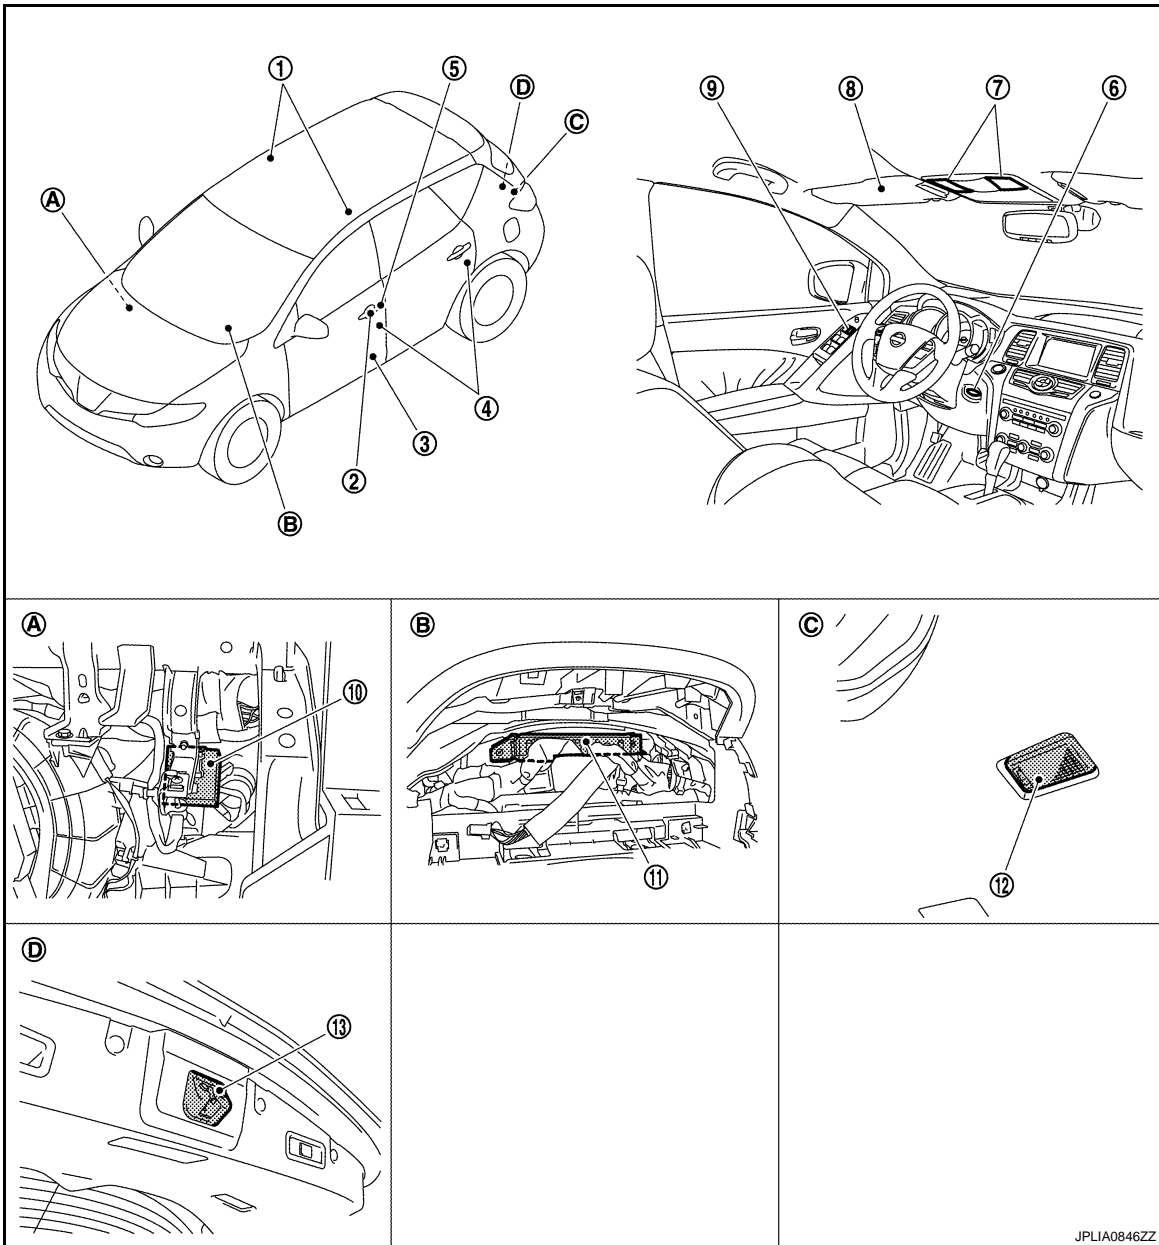

- |                                   |                                 |                       |
|-----------------------------------|---------------------------------|-----------------------|
| 1. Personal lamp                  | 2. Request switch               | 3. Step lamp          |
| 4. Door switch                    | 5. Key cylinder switch          | 6. Key slot           |
| 7. Map lamp                       | 8. Vanity mirror lamp           | 9. Door lock switch   |
| 10. Remote keyless entry receiver | 11. BCM                         | 12. Luggage room lamp |
| 13. Back door switch              |                                 |                       |
| A. Over the glove box             | B. Behind the combination meter | C. Back door          |
| D. Back door lock assembly        |                                 |                       |

JPLIA0846ZZ

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

INL

# INTERIOR ROOM LAMP BATTERY SAVER SYSTEM

< FUNCTION DIAGNOSIS >

## Component Description

INFOID:000000003295098


Part	Description
BCM	Operates the interior room lamp battery saver depending on the vehicle condition to cut the interior room lamp power supply.
Remote keyless entry receiver	<ul style="list-style-type: none"><li>• Receives the lock/unlock signal from keyfob.</li><li>• Transmits the lock/unlock signal to BCM.</li></ul>
<ul style="list-style-type: none"><li>• Request switch</li><li>• Key cylinder lock/unlock switch</li><li>• Door lock/unlock switch</li></ul>	Inputs the lock/unlock signal to BCM.
<ul style="list-style-type: none"><li>• Door switch</li><li>• Back door switch</li></ul>	Inputs a switch signal to BCM.
Key slot	Inputs the Intelligent Key in status to BCM.

# ILLUMINATION CONTROL SYSTEM

< FUNCTION DIAGNOSIS >

## ILLUMINATION CONTROL SYSTEM

### System Diagram

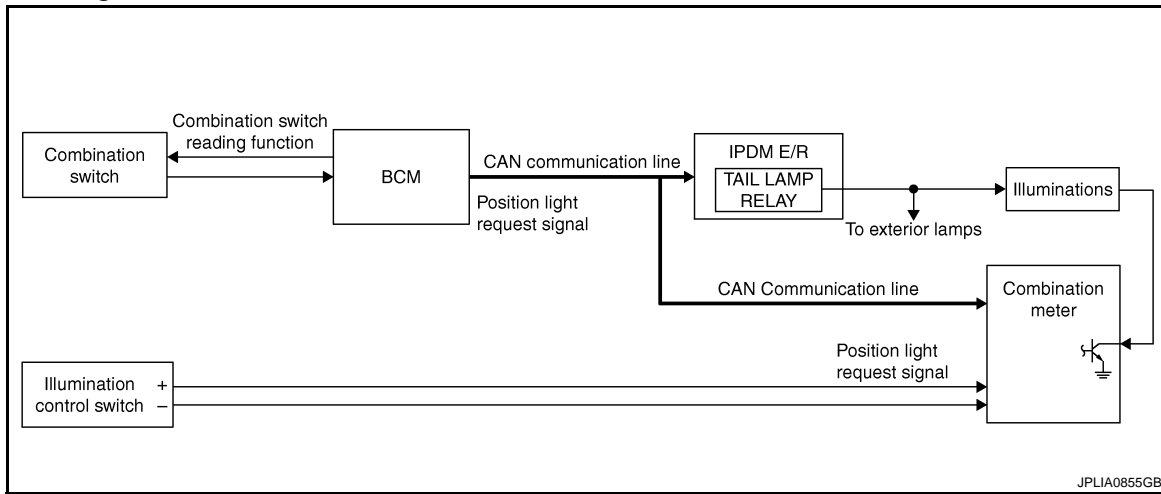

### System Description

INFOID:000000003295100

#### OUTLINE

Each illumination lamp is controlled by each function of BCM, IPDM E/R and combination meter.

Control by BCM

- Combination switch reading function
- Headlamp control function

Control by IPDM E/R

- Relay control function

Control by combination meter

- Meter illumination control function (Refer to [MWI-24, "METER ILLUMINATION CONTROL : System Diagram."](#))

#### ILLUMINATION CONTROL

- BCM detects the combination switch condition by the combination switch reading function.
- BCM transmits position light request signal to IPDM E/R and combination meter according to tail lamp ON condition.

Tail lamp ON condition


- Lighting switch 1ST
- Lighting switch 2ND
- Lighting switch AUTO, and the auto light function ON judgment (With auto light system)
- IPDM E/R turns the integrated tail lamp relay ON according to position light request signal. It provides the power supply to each illumination lamp.
- Combination meter enters in the nighttime mode according to position light request signal. Under the nighttime mode the combination meter controls the illuminance by controlling the each illumination lamp (ground side).

# ILLUMINATION CONTROL SYSTEM

< FUNCTION DIAGNOSIS >

## Component Parts Location

INFOID:000000003295101

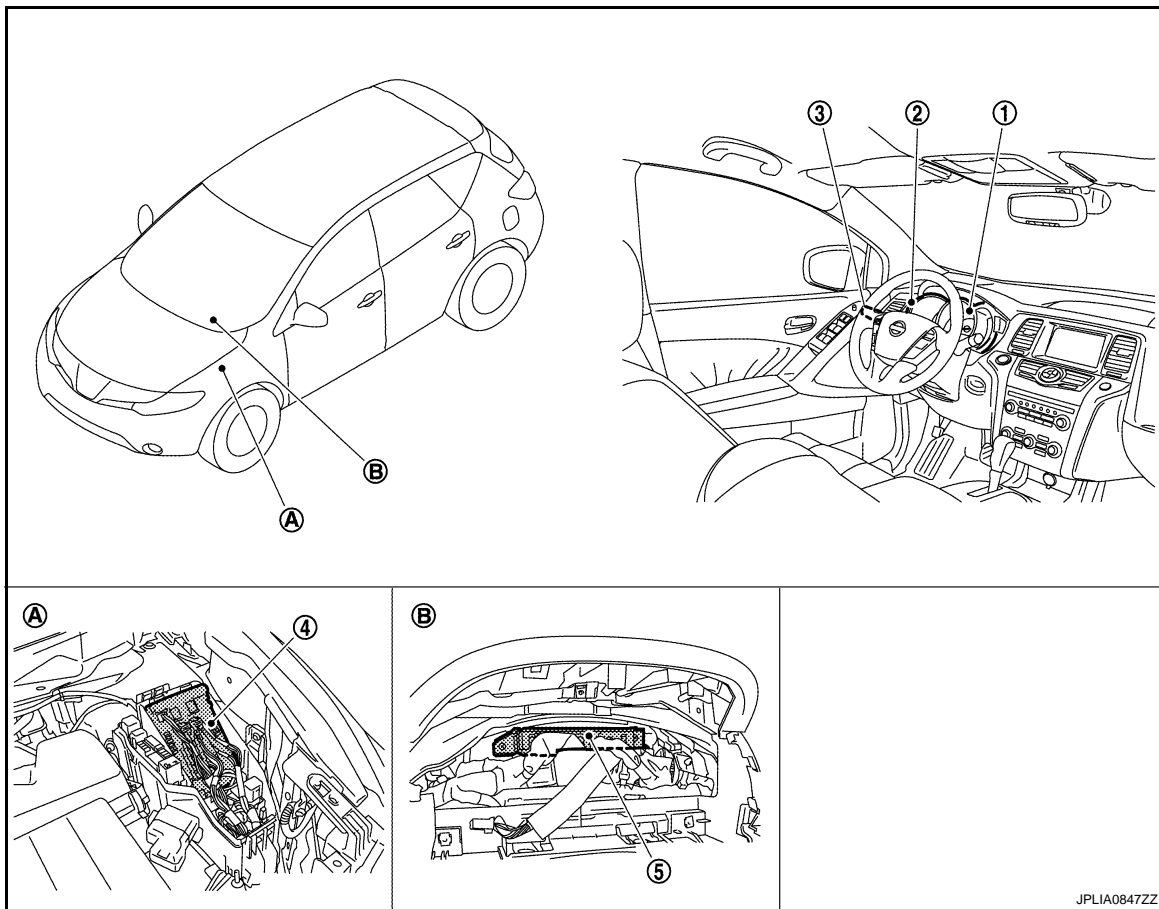

- |                      |                                 |                       |
|----------------------|---------------------------------|-----------------------|
| 1. Combination meter | 2. Illumination control switch  | 3. Combination switch |
| 4. IPDM E/R          | 5. BCM                          |                       |
| A Engine room (LH)   | B. Behind the combination meter |                       |

## Component Description

INFOID:000000003295102

Part	Description
BCM	<ul style="list-style-type: none"> <li>• Detects each switch condition by the combination switch reading function.</li> <li>• Judges the illumination lamp ON/OFF status depending on the vehicle condition. And then it transmits position light request signal to IPDM E/R and combination meter (with CAN communication).</li> </ul>
IPDM E/R	Controls the integrated relay according to the request from BCM (with CAN communication).
Combination meter	<ul style="list-style-type: none"> <li>• Enters in nighttime mode according to the request from BCM (with CAN communication).</li> <li>• Controls the each illumination in the nighttime mode.</li> </ul> Refer to <a href="#">MWI-24, "METER ILLUMINATION CONTROL : System Diagram"</a> .
Combination switch (Lighting & turn signal switch)	Refer to <a href="#">BCS-9, "System Diagram"</a> .

# DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

## DIAGNOSIS SYSTEM (BCM)

### COMMON ITEM

### COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM)

INFOID:000000003729864

### APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
Work Support	Changes the setting for each system function.
Self Diagnostic Result	Displays the diagnosis results judged by BCM.
CAN Diag Support Monitor	Monitors the reception status of CAN communication viewed from BCM. Refer to CONSULT-III operation manual.
Data Monitor	The BCM input/output signals are displayed.
Active Test	The signals used to activate each device are forcibly supplied from BCM.
Ecu Identification	The BCM part number is displayed.
Configuration	<ul style="list-style-type: none"> <li>Read and save the vehicle specification.</li> <li>Write the vehicle specification when replacing BCM.</li> </ul>

### SYSTEM APPLICATION

BCM can perform the following functions for each system.

#### NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

x: Applicable item

System	Sub system selection item	Diagnosis mode		
		Work Support	Data Monitor	Active Test
Door lock	DOOR LOCK	×	×	×
Rear window defogger	REAR DEFOGGER		×	×
Warning chime	BUZZER		×	×
Interior room lamp timer	INT LAMP	×	×	×
Remote keyless entry system	MULTI REMOTE ENT*1	×	×	×
Exterior lamp	HEAD LAMP	×	×	×
Wiper and washer	WIPER	×*2	×	×
Turn signal and hazard warning lamps	FLASHER	×	×	×
—	AIR CONDITONER*3			
<ul style="list-style-type: none"> <li>Intelligent Key system</li> <li>Engine start system</li> </ul>	INTELLIGENT KEY	×	×	×
Combination switch	COMB SW		×	
Body control system	BCM	×		
NVIS - NATS	IMMU		×	×
Interior room lamp battery saver	BATTERY SAVER	×	×	×
Back door opener system	TRUNK		×	×
Vehicle security system	THEFT ALM	×	×	×
RAP system	RETAINED PWR		×	
Signal buffer system	SIGNAL BUFFER		×	×
TPMS	TPMS (AIR PRESSURE MONITOR)	×	×	×

#### NOTE:

- \*1: At models with Intelligent Key system this item is displayed, but is not used.
- \*2: At models with rain sensor this mode is displayed, but is not used.

# DIAGNOSIS SYSTEM (BCM)

## < FUNCTION DIAGNOSIS >

- \*3: This item is displayed, but is not used.

### FREEZE FRAME DATA (FFD)

The BCM records the following vehicle condition at the time a particular DTC is detected, and displays on CONSULT-III.

CONSULT screen item	Indication/Unit	Description	
Vehicle Speed	km/h	Vehicle speed of the moment a particular DTC is detected	
Odo/Trip Meter	km	Total mileage (Odometer value) of the moment a particular DTC is detected	
Vehicle Condition	SLEEP>LOCK	Power position status of the moment a particular DTC is detected	While turning BCM status from low power consumption mode to normal mode (Power supply position is "LOCK")
	SLEEP>OFF		While turning BCM status from low power consumption mode to normal mode (Power supply position is "OFF".)
	LOCK>ACC		While turning power supply position from "LOCK" to "ACC"
	ACC>ON		While turning power supply position from "ACC" to "IGN"
	RUN>ACC		While turning power supply position from "RUN" to "ACC" (Vehicle is stopping and selector lever is except P position.)
	CRANK>RUN		While turning power supply position from "CRANKING" to "RUN" (From cranking up the engine to run it)
	RUN>URGENT		While turning power supply position from "RUN" to "ACC" (Emergency stop operation)
	ACC>OFF		While turning power supply position from "ACC" to "OFF"
	OFF>LOCK		While turning power supply position from "OFF" to "LOCK"
	OFF>ACC		While turning power supply position from "OFF" to "ACC"
	ON>CRANK		While turning power supply position from "IGN" to "CRANKING"
	OFF>SLEEP		While turning BCM status from normal mode (Power supply position is "OFF".) to low power consumption mode
	LOCK>SLEEP		While turning BCM status from normal mode (Power supply position is "LOCK".) to low power consumption mode
	LOCK		Power supply position is "LOCK" (Ignition switch OFF with steering is locked.)
	OFF		Power supply position is "OFF" (Ignition switch OFF with steering is unlocked.)
	ACC		Power supply position is "ACC" (Ignition switch ACC)
	ON		Power supply position is "IGN" (Ignition switch ON with engine stopped)
	ENGINE RUN		Power supply position is "RUN" (Ignition switch ON with engine running)
CRANKING	Power supply position is "CRANKING" (At engine cranking)		
IGN Counter	0 - 39	<p>The number of times that ignition switch is turned ON after DTC is detected</p> <ul style="list-style-type: none"> <li>The number is 0 when a malfunction is detected now.</li> <li>The number increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON.</li> <li>The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.</li> </ul>	

## INT LAMP


# DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

## INT LAMP : CONSULT-III Function (BCM - INT LAMP)

INFOID:000000003295104

### WORK SUPPORT

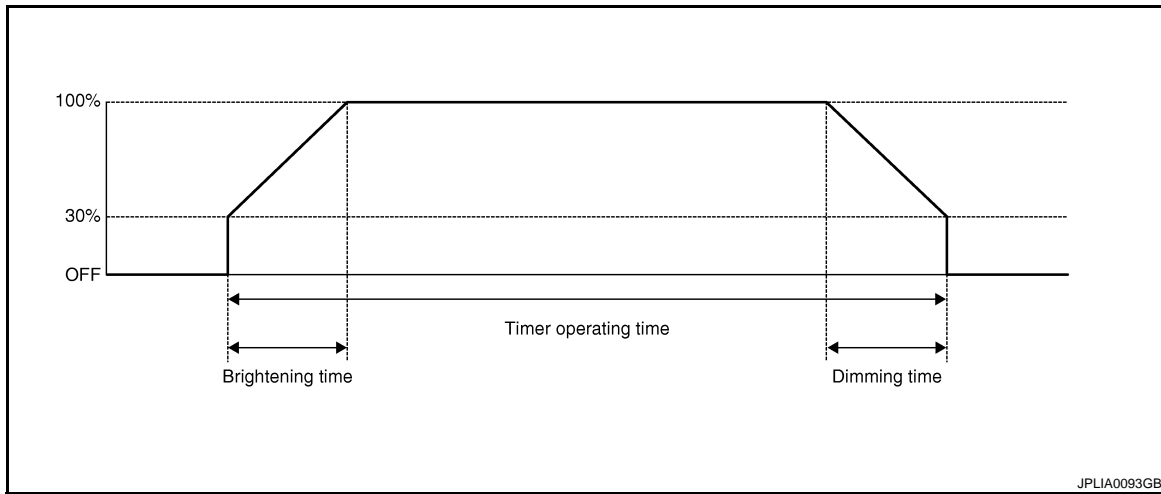

Service item	Setting item	Setting	
SET I/L D-UNLCK INTCON	ON*	With the interior room lamp timer function	
	OFF	Without the interior room lamp timer function	
ROOM LAMP TIMER SET	MODE 2	7.5 sec.	Sets the interior room lamp ON time. (Timer operating time)
	MODE 3*	15 sec.	
	MODE 4	30 sec.	
ROOM LAMP ON TIME SET	MODE 1	0.5 sec.	Sets the interior room lamp gradual brightening time.
	MODE 2*	1 sec.	
	MODE 3	2 sec.	
	MODE 4	3 sec.	
	MODE 5	0 sec.	
ROOM LAMP OFF TIME SET	MODE 1	0.5 sec.	Sets the interior room lamp gradual dimming time.
	MODE 2	1 sec.	
	MODE 3	2 sec.	
	MODE 4*	3 sec.	
	MODE 5	0 sec.	
R LAMP TIMER LOGIC SET	MODE 1*	Interior room lamp timer activates with synchronizing all doors.	
	MODE 2	Interior room lamp timer activates with synchronizing the driver door only.	

\*: Factory setting

### DATA MONITOR

Monitor item [Unit]	Description
REQ SW-DR [On/Off]	The switch status input from request switch (driver side)
REQ SW-AS [On/Off]	The switch status input from front request switch (passenger side)
PUSH SW [On/Off]	The switch status input from push-button ignition switch
KEY SW-SLOT [On/Off]	Key switch status input from key slot

# DIAGNOSIS SYSTEM (BCM)

## < FUNCTION DIAGNOSIS >

Monitor item [Unit]	Description
DOOR SW-DR [On/Off]	The switch status input from front door switch (driver side)
DOOR SW-AS [On/Off]	The switch status input from front door switch (passenger side)
DOOR SW-RR [On/Off]	The switch status input from rear door switch RH
DOOR SW-RL [On/Off]	The switch status input from rear door switch LH
DOOR SW-BK [On/Off]	<b>NOTE:</b> The item is indicated, but not monitored.
CDL LOCK SW [On/Off]	Lock switch status received from door lock/unlock switch by power window switch serial link
CDL UNLOCK SW [On/Off]	Unlock switch status received from door lock/unlock switch by power window switch serial link
KEY CYL LK-SW [On/Off]	Lock switch status received from key cylinder lock/unlock switch by power window switch serial link
KEY CYL UN-SW [On/Off]	Unlock switch status received from key cylinder lock/unlock switch by power window switch serial link
BACK DOOR SW [On/Off]	The switch status input from back door switch
RKE-LOCK [On/Off]	Lock signal status received from remote keyless entry receiver
RKE-UNLOCK [On/Off]	Unlock signal status received from remote keyless entry receiver

## ACTIVE TEST

Test item	Operation	Description
INT LAMP	On	Outputs the interior room lamp control signal to turn map lamp and personal lamp ON (Map lamp switch is in DOOR position).
	Off	Stops the interior room lamp control signal to turn map lamp and personal lamp OFF.
STEP LAMP TEST	On	Outputs the step lamp control signal to turn step lamp ON.
	Off	Stops the step lamp control signal to turn step lamp OFF.
LUGGAGE LAMP TEST	On	<b>NOTE:</b> The item is displayed, but cannot be tested.
	Off	

## BATTERY SAVER

### BATTERY SAVER : CONSULT-III Function (BCM - BATTERY SAVER)

INFOID:000000003295105

## WORK SUPPORT

Service item	Setting item	Setting	
BATTERY SAVER SET	On*	With the exterior lamp battery saver function	
	Off	Without the exterior lamp battery saver function	
ROOM LAMP BAT SAV SET	On*	With the interior room lamp battery saver function	
	Off	Without the interior room lamp battery saver function	
ROOM LAMP TIMER SET	MODE 1*	30 min.	Sets the interior room lamp battery saver timer operating time.
	MODE 2	60 min.	

\*: Factory setting

## DATA MONITOR



# DIAGNOSIS SYSTEM (BCM)

## < FUNCTION DIAGNOSIS >

Monitor item [Unit]	Description
REQ SW-DR [On/Off]	The switch status input from request switch (driver side)
REQ SW-AS [On/Off]	The switch status input from front request switch (passenger side)
REQ SW-RR [On/Off]	<b>NOTE:</b> The item is indicated, but not monitored.
REQ SW-RL [On/Off]	
PUSH SW [On/Off]	The switch status input from push-button ignition switch
KEY SW-SLOT [On/Off]	Key switch status input from key slot
UNLK SEN-DR [On/Off]	Driver door unlock status input from unlock sensor
DOOR SW-DR [On/Off]	The switch status input from front door switch (driver side)
DOOR SW-AS [On/Off]	The switch status input from front door switch (passenger side)
DOOR SW-RR [On/Off]	The switch status input from rear door switch RH
DOOR SW-RL [On/Off]	The switch status input from rear door switch LH
DOOR SW-BK [On/Off]	<b>NOTE:</b> The item is indicated, but not monitored.
CDL LOCK SW [On/Off]	Lock switch status received from door lock/unlock switch by power window switch serial link
CDL UNLOCK SW [On/Off]	Unlock switch status received from door lock/unlock switch by power window switch serial link
KEY CYL LK-SW [On/Off]	Lock switch status received from key cylinder lock/unlock switch by power window switch serial link
KEY CYL UN-SW [On/Off]	Unlock switch status received from key cylinder lock/unlock switch by power window switch serial link
BACK DOOR SW [On/Off]	The switch status input from back door switch
RKE-LOCK [On/Off]	Lock signal status received from remote keyless entry receiver
RKE-UNLOCK [On/Off]	Unlock signal status received from remote keyless entry receiver

## ACTIVE TEST

Test item	Operation	Description
BATTERY SAVER	Off	Cuts the interior room lamp power supply to turn interior room lamp OFF.
	On	Outputs the interior room lamp power supply to turn interior room lamp ON.*

\*: Each lamp switch is in ON position.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P

# POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

## COMPONENT DIAGNOSIS

### POWER SUPPLY AND GROUND CIRCUIT

#### BCM

#### BCM : Diagnosis Procedure

INFOID:000000003737073

#### 1. CHECK FUSE AND FUSIBLE LINK

Check that the following fuse and fusible link are not blown.

Signal name	Fuse and fusible link No.
Battery power supply	L
	10

#### Is the fuse fusing?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.

NO >> GO TO 2.

#### 2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connectors.
3. Check voltage between BCM harness connector and ground.

Terminals		Voltage (Approx.)
(+)	(-)	
BCM		Ground Battery voltage
Connector	Terminal	
M118	1	
M119	11	

#### Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

#### 3. CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M119	13		Existed

#### Does continuity exist?

YES >> INSPECTION END

NO >> Repair harness or connector.

# INTERIOR ROOM LAMP POWER SUPPLY CIRCUIT

< COMPONENT DIAGNOSIS >

## INTERIOR ROOM LAMP POWER SUPPLY CIRCUIT

### Description

INFOID:000000003295108

Provides the interior room lamp power supply. Also cuts the power supply when the interior room lamp battery saver activating.

### Component Function Check

INFOID:000000003295109

#### 1. CHECK INTERIOR ROOM LAMP POWER SUPPLY FUNCTION

##### CONSULT-III ACTIVE TEST

1. Turn the ignition switch ON.
2. Turn each interior room lamp ON.
  - Map lamp
  - Personal lamp
  - Step lamp
  - Vanity mirror lamp
  - Luggage room lamp
3. Select "BATTERY SAVER" of BCM (BATTERY SAVER) active test item.
4. With operating the test items, check that each interior room lamp turns ON/OFF.

**Off** : Interior room lamp OFF

**On** : Interior room lamp ON

Does the interior room lamp turn ON/OFF?

YES >> Interior room lamp power supply circuit is normal.

NO >> Refer to [INL-19, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000003295110

#### 1. CHECK INTERIOR ROOM LAMP POWER SUPPLY OUTPUT

##### CONSULT-III ACTIVE TEST

1. Turn the ignition switch ON.
2. Select "BATTERY SAVER" of BCM (BATTERY SAVER) active test item.
3. With operating the test item, check voltage between BCM harness connector and the ground.

Terminals		Test item	Voltage (Approx.)
(+)	(-)		
BCM		BATTERY SAVER	0 V
Connector	Terminal		
M119	4	Off	0 V
		On	Battery voltage

Is the measurement value normal?

YES >> GO TO 2.

NO >> Replace BCM.

#### 2. CHECK INTERIOR ROOM LAMP POWER SUPPLY OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect the following connectors.
  - Map lamp
  - Personal lamp
  - Vanity mirror lamp (driver side)
  - Vanity mirror lamp (passenger side)
  - Luggage room lamp (RH)
  - Luggage room lamp (LH)
  - Step lamp (driver side)

# INTERIOR ROOM LAMP POWER SUPPLY CIRCUIT

## < COMPONENT DIAGNOSIS >

- Step lamp (passenger side)
- 3. Check continuity between BCM harness connector and each interior room lamp harness connector.

BCM		Each interior room lamp			Continuity
Connector	Terminal	Connector	Terminal		
M119	4	Map lamp	R19	1	Existed
		Personal lamp	R21	1	
		Vanity mirror lamp (driver side)	R24	2	
		Vanity mirror lamp (passenger side)	R10	2	
		Luggage room lamp (RH)	D156	2	
		Luggage room lamp (LH)	D157	2	
		Step lamp (driver side)	D17	1	
		Step lamp (passenger side)	D51	1	

Does continuity exist?

- YES >> GO TO 3.
- NO >> Repair the harnesses or connectors.

### 3. CHECK INTERIOR ROOM LAMP POWER SUPPLY SHORT CIRCUIT

Check continuity between BCM harness connector and the ground.

BCM		Ground	Continuity
Connector	Terminal		
M119	4		Not existed

Does continuity exist?

- YES >> Repair the harnesses or connectors.
- NO >> Check that each interior room lamp has no internal short circuit.

# INTERIOR ROOM LAMP CONTROL CIRCUIT

< COMPONENT DIAGNOSIS >

## INTERIOR ROOM LAMP CONTROL CIRCUIT

### Description

INFOID:000000003295111

Controls each interior room lamp (ground side) by PWM signal.

#### NOTE:

PWM signal control period is approximately 250 Hz (in the gradual brightening/dimming).

### Component Function Check

INFOID:000000003295112

#### CAUTION:

Before performing the diagnosis, check that the following is normal.

- Interior room lamp power supply
- Map lamp bulb
- Personal lamp bulb

### 1.CHECK INTERIOR ROOM LAMP CONTROL FUNCTION

#### CONSULT-III ACTIVE TEST

1. Switch the map lamp switch to DOOR.
2. Turn the ignition switch ON.
3. Select "INT LAMP" of BCM (INT LAMP) active test item.
4. With operating the test items, check that each interior room lamp turns ON/OFF (gradual brightening/dimming).

**On** : Interior room lamp gradual brightening

**Off** : Interior room lamp gradual dimming

Does the interior room lamp turns ON/OFF (gradual brightening/dimming)?

YES >> Interior room lamp control circuit is normal.

NO >> Refer to [INL-21. "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000003295113

### 1.CHECK INTERIOR ROOM LAMP CONTROL OUTPUT

#### CONSULT-III ACTIVE TEST

1. Turn ignition switch OFF.
2. Remove all the bulbs of map lamp and personal lamp.
3. Select "INT LAMP" of BCM (INT LAMP) active test item.
4. With operating the test item, check continuity between BCM harness connector and ground.

BCM		Ground	Test item	Continuity
Connector	Terminal		INT LAMP	
M119	19	Ground	On	Existed
			Off	Not existed

Is the measurement value normal?

YES >> GO TO 2.

Fixed ON>>GO TO 3.

Fixed OFF>>Replace BCM.

### 2.CHECK INTERIOR ROOM LAMP CONTROL OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector, map lamp connector and personal lamp connector.
3. Check continuity between BCM harness connector, map lamp harness connector and personal lamp harness connector.

# INTERIOR ROOM LAMP CONTROL CIRCUIT

## < COMPONENT DIAGNOSIS >

---

BCM		Map lamp/personal lamp			Continuity
Connector	Terminal	Connector		Terminal	
M119	19	Map lamp	R19	2	Existed
		Personal lamp	R21	3	

### Does continuity exist?

YES >> Replace the map lamp or the personal lamp.

NO >> Repair the harnesses or connectors.

## **3.**CHECK INTERIOR ROOM LAMP CONTROL SHORT CIRCUIT

---

1. Turn ignition switch OFF.
2. Disconnect BCM connector, map lamp connector and personal lamp connector.
3. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M119	19		Not existed

### Does continuity exist?

YES >> Repair the harnesses or connectors.

NO >> Replace BCM.

# STEP LAMP CIRCUIT

< COMPONENT DIAGNOSIS >

## STEP LAMP CIRCUIT

### Description

INFOID:000000003295114

Controls the step lamp (ground side) to turn the step lamp ON and OFF.

### Component Function Check

INFOID:000000003295115

#### CAUTION:

Before performing the diagnosis, check that the following is normal.

- Interior room lamp power supply
- Step lamp bulb

### 1.CHECK STEP LAMP OPERATION

#### CONSULT-III ACTIVE TEST

1. Turn the ignition switch ON.
2. Select "STEP LAMP TEST" of BCM (INT LAMP) active test item.
3. With operating the test items, check that step lamp turns ON/OFF.

On : Step lamp ON

Off : Step lamp OFF

#### Does the step lamp turn ON/OFF?

- YES >> Step lamp circuit is normal.  
 NO >> Refer to [INL-23, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000003295116

### 1.CHECK STEP LAMP OUTPUT

#### CONSULT-III ACTIVE TEST

1. Turn the ignition switch OFF.
2. Remove the step lamp bulbs (driver side and passenger side).
3. Turn the ignition switch ON.
4. Select "STEP LAMP TEST" of BCM (INT LAMP) active test item.
5. With operating the test item, check continuity between BCM harness connector and the ground.

BCM		Ground	Test item	Continuity
Connector	Terminal		STEP LAMP TEST	
M119	7		On	Existed
			Off	Not existed

#### Is the measurement value normal?

- YES >> GO TO 2.  
 Fixed ON>>GO TO 3.  
 Fixed OFF>>Replace BCM.

### 2.CHECK STEP LAMP OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect BCM connector, and step lamp connector.
3. Check continuity between BCM harness connector and step lamp harness connector.

BCM		Step lamp			Continuity
Connector	Terminal	Connector	Terminal		
M119	7	Driver side	D17	2	Existed
		Passenger side	D51	2	

## STEP LAMP CIRCUIT

### < COMPONENT DIAGNOSIS >

---

#### Does continuity exist?

- YES >> Replace step lamp.  
NO >> Repair harnesses or connectors.

### 3. CHECK STEP LAMP SHORT CIRCUIT

---

1. Turn the ignition switch OFF.
2. Check continuity between BCM harness connector and the ground.

BCM		Ground	Continuity
Connector	Terminal		
M119	7		Not existed

#### Does continuity exist?

- YES >> Repair the harnesses or connectors.  
NO >> Replace BCM.



# PUSH-BUTTON IGNITION SWITCH ILLUMINATION CIRCUIT

< COMPONENT DIAGNOSIS >

## PUSH-BUTTON IGNITION SWITCH ILLUMINATION CIRCUIT

### Description

INFOID:000000003295120

Provides the power supply and the ground to control the push-button ignition switch illumination.

### Component Function Check

INFOID:000000003295121

### 1.CHECK PUSH-BUTTON IGNITION SWITCH ILLUMINATION OPERATION

#### CONSULT-III ACTIVE TEST

1. Turn the ignition switch ON.
2. Select "ENGINE SW ILLUMI" of BCM (INTELLIGENT KEY) active test item.
3. With operating the test items, check that the push-button ignition switch illumination turns ON/OFF

**On : Push-button ignition switch illumination ON**

**Off : Push-button ignition switch illumination OFF**

Does the push-button ignition switch illumination turn ON/OFF?

YES >> Push-button ignition switch illumination circuit is normal.

NO >> Refer to [INL-25, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000003295122

### 1.CHECK ILLUMINATION CONTROL SWITCHING OPERATION

1. Turn the ignition switch ON.
2. With operating the lighting switch, check that the push-button ignition switch illumination turns ON/OFF

Condition	Push-button ignition switch illumination
<ul style="list-style-type: none"><li>• Ignition switch ON</li><li>• Lighting switch 1ST</li></ul>	ON
<ul style="list-style-type: none"><li>• Ignition switch OFF</li><li>• Lighting switch OFF</li><li>• Driver door LOCK</li></ul>	OFF

Does the push-button ignition switch illumination turn ON/OFF?

YES >> GO TO 2.

NO >> GO TO 3.

### 2.CHECK PUSH-BUTTON IGNITION SWITCH ILLUMINATION GROUND CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect BCM connector and the push-button ignition switch connector.
3. Check continuity between BCM harness connector and the push-button ignition switch harness connector.

BCM		Push-button ignition switch		Continuity
Connector	Terminal	Connector	Terminal	
M119	14	M101	2	Existed

Does the continuity exist?

YES >> Replace BCM.

NO >> Repair the harness or the connector.

### 3.CHECK PUSH-BUTTON IGNITION SWITCH ILLUMINATION POWER SUPPLY OUTPUT

#### CONSULT-III ACTIVE TEST

1. Turn the ignition switch ON.
2. Select "ENGINE SW ILLUMI" of BCM (INTELLIGENT KEY) active test item.
3. With operating the test item, check voltage between BCM harness connector and the ground.

# PUSH-BUTTON IGNITION SWITCH ILLUMINATION CIRCUIT

## < COMPONENT DIAGNOSIS >

Terminals		Test item	Voltage (Approx.)
(+)	(-)		
BCM		ENGINE SW ILLUMI	
Connector	Terminal		
M123	133	ON	5 V
		OFF	0 V

Is the measurement value normal?

- YES >> GO TO 4.  
 NO >> GO TO 5.

### 4. CHECK PUSH-BUTTON IGNITION SWITCH ILLUMINATION POWER SUPPLY OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect BCM connector and the push-button ignition switch connector.
3. Check continuity between BCM harness connector and the push-button ignition switch harness connector.

BCM		Push-button ignition switch		Continuity
Connector	Terminal	Connector	Terminal	
M123	133	M101	3	Existed

Does the continuity exist?

- YES >> Replace push-button ignition switch.  
 NO >> Repair the harness or the connector.

### 5. CHECK PUSH-BUTTON IGNITION SWITCH ILLUMINATION POWER SUPPLY SHORT CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect BCM connector and the push-button ignition switch connector.
3. Check continuity between BCM harness connector and the ground.

BCM		Ground	Continuity
Connector	Terminal		
M123	133		Not existed

Does the continuity exist?

- YES >> Repair the harness or the connector.  
 NO >> Replace BCM.


# INTERIOR ROOM LAMP CONTROL SYSTEM

< COMPONENT DIAGNOSIS >

## INTERIOR ROOM LAMP CONTROL SYSTEM

### Wiring Diagram - INTERIOR ROOM LAMP -

INFOID:000000003295159

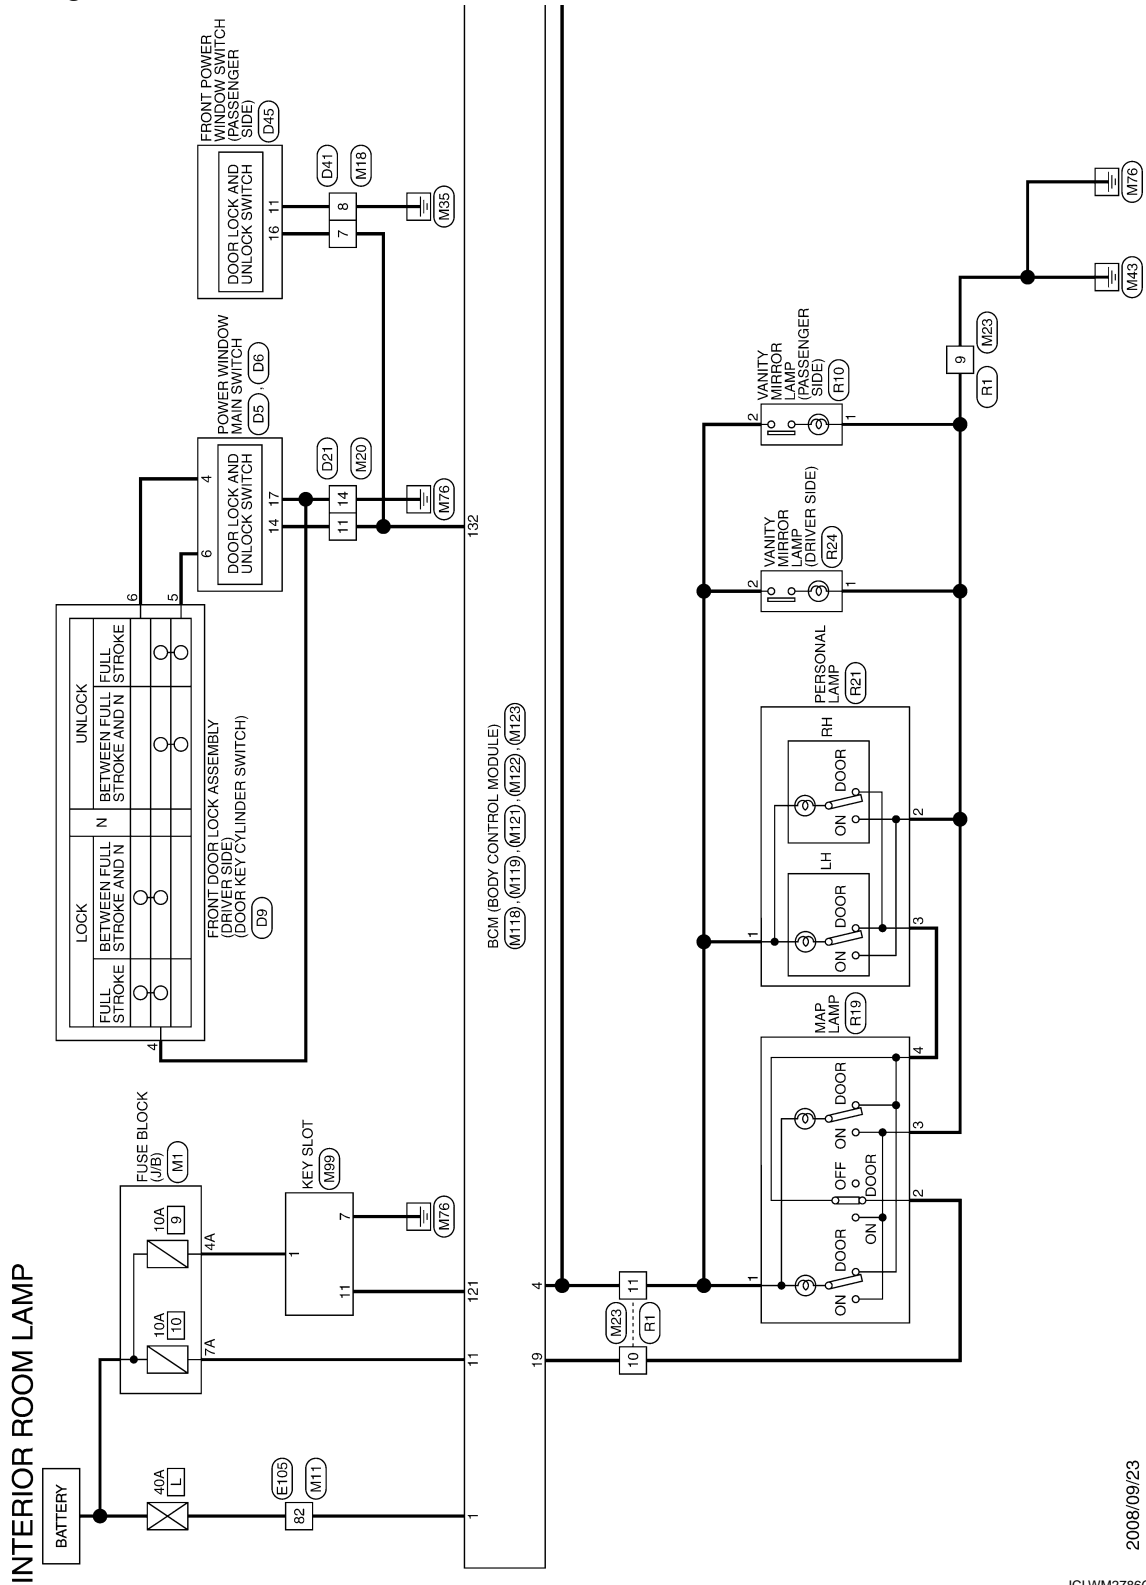

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

**INL**


2008/09/23

JCLWM2786GE

# INTERIOR ROOM LAMP CONTROL SYSTEM

## < COMPONENT DIAGNOSIS >


AB : With automatic back door  
OA : Without automatic back door

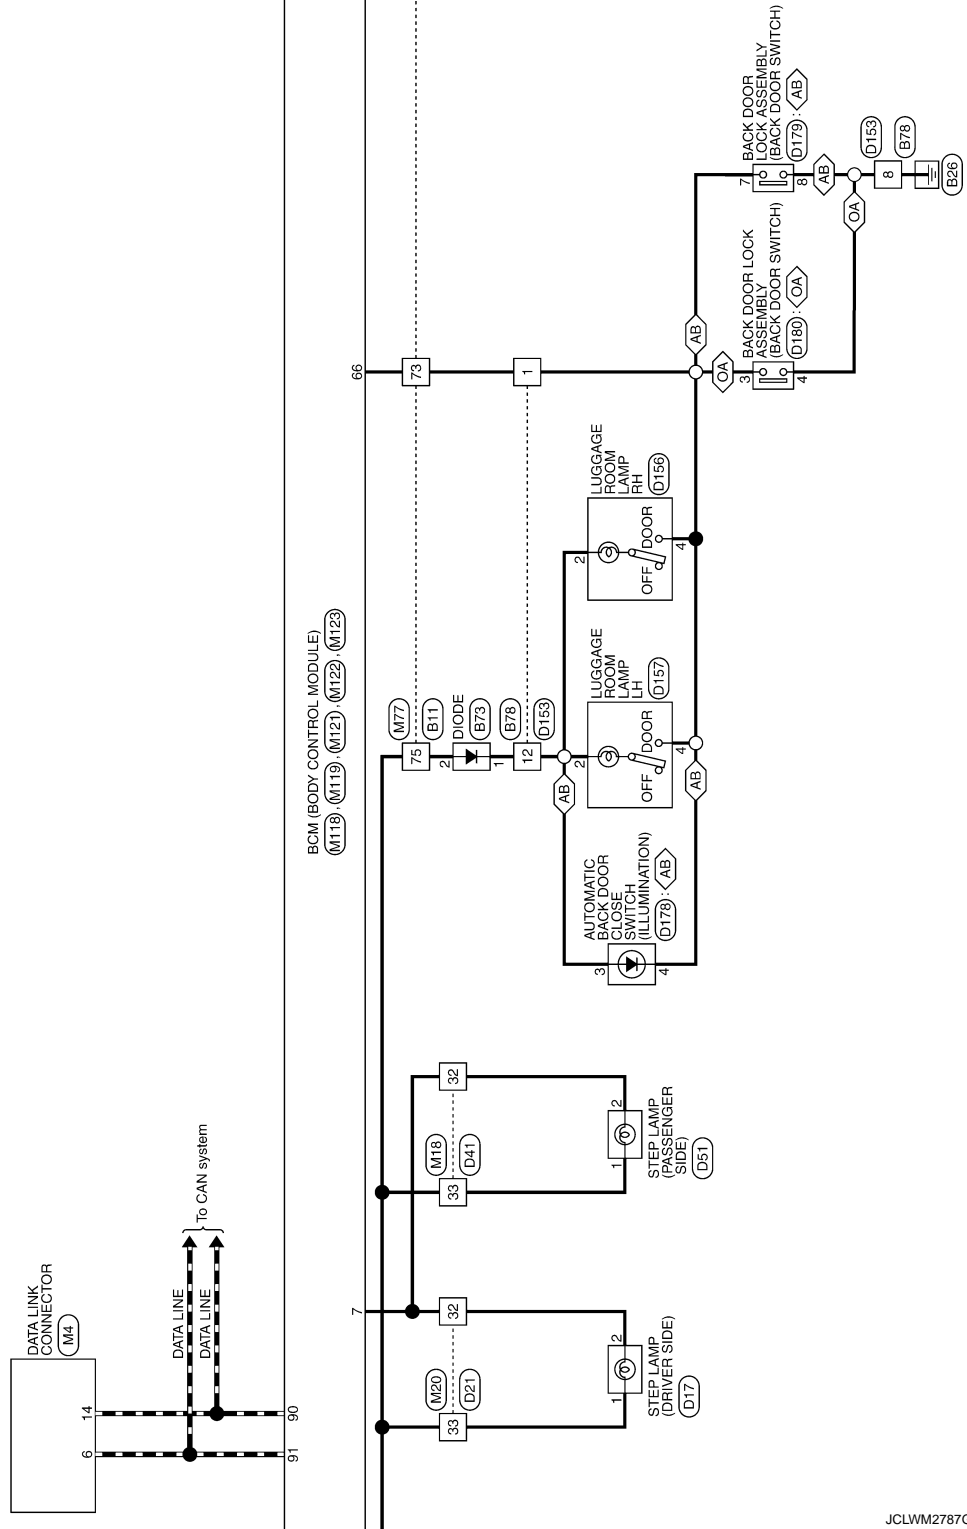

JCLWM2787GE

# INTERIOR ROOM LAMP CONTROL SYSTEM

< COMPONENT DIAGNOSIS >

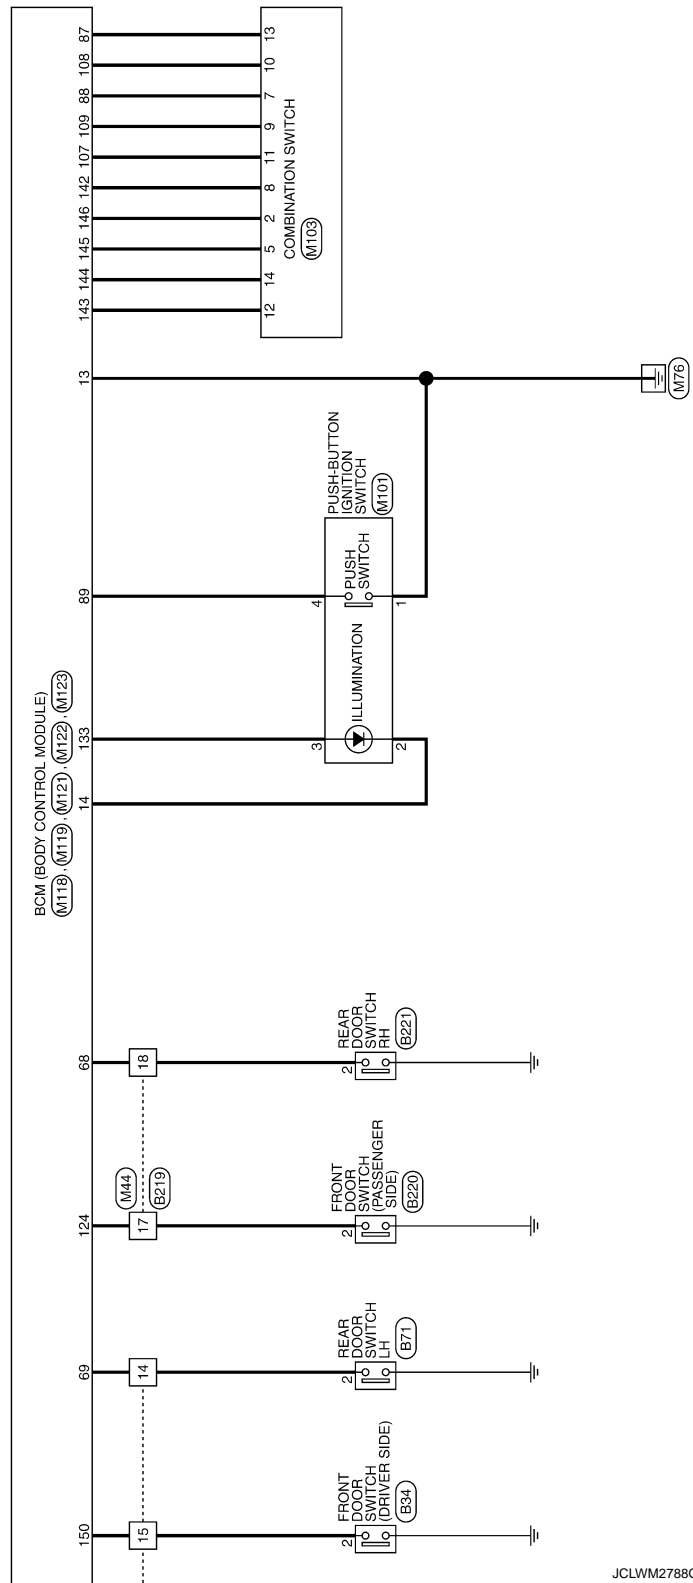


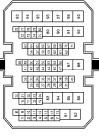



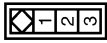

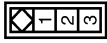

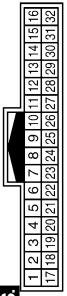

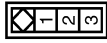

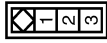


JCLWM2788GE

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P

# INTERIOR ROOM LAMP CONTROL SYSTEM

## < COMPONENT DIAGNOSIS >

### INTERIOR ROOM LAMP










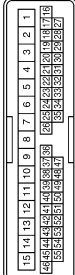

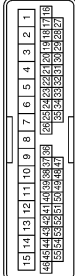

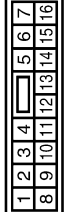


Connector No. B71	WIRE TO WIRE TH80MW-CS19	 	Terminal No. 14	Color of Wire BR	Signal Name [Specification]	Terminal No. 2	Color of Wire BR	Signal Name [Specification]	Terminal No. 1	Color of Wire W	Signal Name [Specification]
Connector No. B73	DIODE 24335 C3902	 	Terminal No. 15	Color of Wire SB	-	Terminal No. 2	Color of Wire L	-	Terminal No. 2	Color of Wire W	Signal Name [Specification]
Connector No. B74	FRONT DOOR SWITCH (DRIVER SIDE) A03FW	 	Terminal No. 17	Color of Wire R	-	Terminal No. 18	Color of Wire W	-	Terminal No. 2	Color of Wire R	Signal Name [Specification]
Connector No. B77	REAR DOOR SWITCH LH A03FW	 	Terminal No. 75	Color of Wire L	-	Terminal No. 12	Color of Wire W	-	Terminal No. 2	Color of Wire W	Signal Name [Specification]
Connector No. B219	WIRE TO WIRE TH32MW-NH	 	Terminal No. 8	Color of Wire B	-	Terminal No. 12	Color of Wire W	-	Terminal No. 2	Color of Wire W	Signal Name [Specification]
Connector No. B220	FRONT DOOR SWITCH (PASSENGER SIDE) A03FW	 	Terminal No. 9	Color of Wire L	-	Terminal No. 13	Color of Wire W	-	Terminal No. 2	Color of Wire W	Signal Name [Specification]
Connector No. B221	REAR DOOR SWITCH RH A03FW	 	Terminal No. 10	Color of Wire L	-	Terminal No. 14	Color of Wire W	-	Terminal No. 2	Color of Wire W	Signal Name [Specification]
Connector No. B78	WIRE TO WIRE NS16MW-CS	 	Terminal No. 11	Color of Wire L	-	Terminal No. 15	Color of Wire W	-	Terminal No. 2	Color of Wire W	Signal Name [Specification]

JCLWM2789GE

# INTERIOR ROOM LAMP CONTROL SYSTEM

## < COMPONENT DIAGNOSIS >

### INTERIOR ROOM LAMP

<table border="1"> <tr><td>Connector No.</td><td>D5</td></tr> <tr><td>Connector Name</td><td>POWER WINDOW MAIN SWITCH</td></tr> <tr><td>Connector Type</td><td>NS16FW-CS</td></tr> </table>   <table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>4</td><td>L</td><td>-</td></tr> <tr><td>6</td><td>R</td><td>-</td></tr> <tr><td>14</td><td>O</td><td>-</td></tr> </table>	Connector No.	D5	Connector Name	POWER WINDOW MAIN SWITCH	Connector Type	NS16FW-CS	Terminal No.	Color of Wire	Signal Name [Specification]	4	L	-	6	R	-	14	O	-	<table border="1"> <tr><td>Connector No.</td><td>D6</td></tr> <tr><td>Connector Name</td><td>POWER WINDOW MAIN SWITCH</td></tr> <tr><td>Connector Type</td><td>NS30FW-CS</td></tr> </table>   <table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>17</td><td>B</td><td>-</td></tr> </table>	Connector No.	D6	Connector Name	POWER WINDOW MAIN SWITCH	Connector Type	NS30FW-CS	Terminal No.	Color of Wire	Signal Name [Specification]	17	B	-	<table border="1"> <tr><td>Connector No.</td><td>D9</td></tr> <tr><td>Connector Name</td><td>FRONT DOOR LOCK ASSEMBLY (DRIVER SIDE)</td></tr> <tr><td>Connector Type</td><td>E08FCY-RS</td></tr> </table>   <table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>4</td><td>B</td><td>-</td></tr> <tr><td>5</td><td>R</td><td>-</td></tr> <tr><td>6</td><td>L</td><td>-</td></tr> </table>	Connector No.	D9	Connector Name	FRONT DOOR LOCK ASSEMBLY (DRIVER SIDE)	Connector Type	E08FCY-RS	Terminal No.	Color of Wire	Signal Name [Specification]	4	B	-	5	R	-	6	L	-	<table border="1"> <tr><td>Connector No.</td><td>D17</td></tr> <tr><td>Connector Name</td><td>STEP LAMP (DRIVER SIDE)</td></tr> <tr><td>Connector Type</td><td>C02FW</td></tr> </table>   <table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>1</td><td>G</td><td>-</td></tr> <tr><td>2</td><td>R</td><td>-</td></tr> </table>	Connector No.	D17	Connector Name	STEP LAMP (DRIVER SIDE)	Connector Type	C02FW	Terminal No.	Color of Wire	Signal Name [Specification]	1	G	-	2	R	-									
Connector No.	D5																																																																										
Connector Name	POWER WINDOW MAIN SWITCH																																																																										
Connector Type	NS16FW-CS																																																																										
Terminal No.	Color of Wire	Signal Name [Specification]																																																																									
4	L	-																																																																									
6	R	-																																																																									
14	O	-																																																																									
Connector No.	D6																																																																										
Connector Name	POWER WINDOW MAIN SWITCH																																																																										
Connector Type	NS30FW-CS																																																																										
Terminal No.	Color of Wire	Signal Name [Specification]																																																																									
17	B	-																																																																									
Connector No.	D9																																																																										
Connector Name	FRONT DOOR LOCK ASSEMBLY (DRIVER SIDE)																																																																										
Connector Type	E08FCY-RS																																																																										
Terminal No.	Color of Wire	Signal Name [Specification]																																																																									
4	B	-																																																																									
5	R	-																																																																									
6	L	-																																																																									
Connector No.	D17																																																																										
Connector Name	STEP LAMP (DRIVER SIDE)																																																																										
Connector Type	C02FW																																																																										
Terminal No.	Color of Wire	Signal Name [Specification]																																																																									
1	G	-																																																																									
2	R	-																																																																									
<table border="1"> <tr><td>Connector No.</td><td>D21</td></tr> <tr><td>Connector Name</td><td>WIRE TO WIRE</td></tr> <tr><td>Connector Type</td><td>TH40FW-CS15</td></tr> </table>   <table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>11</td><td>O</td><td>-</td></tr> <tr><td>14</td><td>B</td><td>-</td></tr> <tr><td>32</td><td>R</td><td>-</td></tr> <tr><td>33</td><td>G</td><td>-</td></tr> </table>	Connector No.	D21	Connector Name	WIRE TO WIRE	Connector Type	TH40FW-CS15	Terminal No.	Color of Wire	Signal Name [Specification]	11	O	-	14	B	-	32	R	-	33	G	-	<table border="1"> <tr><td>Connector No.</td><td>D41</td></tr> <tr><td>Connector Name</td><td>WIRE TO WIRE</td></tr> <tr><td>Connector Type</td><td>TH40FW-CS15</td></tr> </table>   <table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>7</td><td>O</td><td>-</td></tr> <tr><td>8</td><td>B</td><td>-</td></tr> <tr><td>32</td><td>R</td><td>-</td></tr> <tr><td>33</td><td>G</td><td>-</td></tr> </table>	Connector No.	D41	Connector Name	WIRE TO WIRE	Connector Type	TH40FW-CS15	Terminal No.	Color of Wire	Signal Name [Specification]	7	O	-	8	B	-	32	R	-	33	G	-	<table border="1"> <tr><td>Connector No.</td><td>D45</td></tr> <tr><td>Connector Name</td><td>FRONT POWER WINDOW SWITCH (PASSENGER SIDE)</td></tr> <tr><td>Connector Type</td><td>NS16FW-CS</td></tr> </table>   <table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>11</td><td>B</td><td>-</td></tr> <tr><td>16</td><td>O</td><td>-</td></tr> </table>	Connector No.	D45	Connector Name	FRONT POWER WINDOW SWITCH (PASSENGER SIDE)	Connector Type	NS16FW-CS	Terminal No.	Color of Wire	Signal Name [Specification]	11	B	-	16	O	-	<table border="1"> <tr><td>Connector No.</td><td>D51</td></tr> <tr><td>Connector Name</td><td>STEP LAMP (PASSENGER SIDE)</td></tr> <tr><td>Connector Type</td><td>C02FW</td></tr> </table>   <table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>1</td><td>G</td><td>-</td></tr> <tr><td>2</td><td>R</td><td>-</td></tr> </table>	Connector No.	D51	Connector Name	STEP LAMP (PASSENGER SIDE)	Connector Type	C02FW	Terminal No.	Color of Wire	Signal Name [Specification]	1	G	-	2	R	-
Connector No.	D21																																																																										
Connector Name	WIRE TO WIRE																																																																										
Connector Type	TH40FW-CS15																																																																										
Terminal No.	Color of Wire	Signal Name [Specification]																																																																									
11	O	-																																																																									
14	B	-																																																																									
32	R	-																																																																									
33	G	-																																																																									
Connector No.	D41																																																																										
Connector Name	WIRE TO WIRE																																																																										
Connector Type	TH40FW-CS15																																																																										
Terminal No.	Color of Wire	Signal Name [Specification]																																																																									
7	O	-																																																																									
8	B	-																																																																									
32	R	-																																																																									
33	G	-																																																																									
Connector No.	D45																																																																										
Connector Name	FRONT POWER WINDOW SWITCH (PASSENGER SIDE)																																																																										
Connector Type	NS16FW-CS																																																																										
Terminal No.	Color of Wire	Signal Name [Specification]																																																																									
11	B	-																																																																									
16	O	-																																																																									
Connector No.	D51																																																																										
Connector Name	STEP LAMP (PASSENGER SIDE)																																																																										
Connector Type	C02FW																																																																										
Terminal No.	Color of Wire	Signal Name [Specification]																																																																									
1	G	-																																																																									
2	R	-																																																																									

JCLWM2790GE










A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

INL

# INTERIOR ROOM LAMP CONTROL SYSTEM

## < COMPONENT DIAGNOSIS >
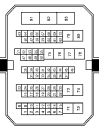
### INTERIOR ROOM LAMP

Connector No. D153	WIRE TO WIRE	NS16FW-CS	7 6 5 4 3 2 1 16 15 14 13 12 11 10 9 8	Terminal No. 1 8 12	Color of Wire LG B W	Signal Name [Specification]
Connector Name						
Connector Type						
						
Connector No. D156	LUGGAGE ROOM LAMP RH	CJ04FW	1 2 3 4	Terminal No. 2 4	Color of Wire W LG	Signal Name [Specification]
Connector Name						
Connector Type						
						
Connector No. D157	LUGGAGE ROOM LAMP LH	CJ04FW	1 2 3 4	Terminal No. 2 4	Color of Wire W LG	Signal Name [Specification]
Connector Name						
Connector Type						
						
Connector No. D178	AUTOMATIC BACK DOOR CLOSE SWITCH	TK08FGY	6 5 4 3 2 1	Terminal No. 3 4	Color of Wire W LG	Signal Name [Specification]
Connector Name						
Connector Type						
						
Connector No. D179	BACK DOOR LOCK ASSEMBLY (WITH AUTOMATIC BACK DOOR)	NS08FW-CS	1 2 3 4 5 6 7 8	Terminal No. 7 8	Color of Wire LG B	Signal Name [Specification]
Connector Name						
Connector Type						
						
Connector No. D180	BACK DOOR LOCK ASSEMBLY (WITHOUT AUTOMATIC BACK DOOR)	NS04FW-CS	4 3 2 1	Terminal No. 3 4	Color of Wire LG B	Signal Name [Specification]
Connector Name						
Connector Type						
						
Connector No. E105	WIRE TO WIRE	TH70MW-CS10-M3		Terminal No. 82	Color of Wire LG	Signal Name [Specification]
Connector Name						
Connector Type						
						
Connector No. M1	FUSE BLOCK (J/B)	NS08FW-M2	3A 2A 1A 8A 7A 6A 5A 4A	Terminal No. 4A 7A	Color of Wire GR LG	Signal Name [Specification]
Connector Name						
Connector Type						
						

JCLWM2791GE




# INTERIOR ROOM LAMP CONTROL SYSTEM

## < COMPONENT DIAGNOSIS >


### INTERIOR ROOM LAMP

Connector No.	M4
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW




Terminal No.	Color of Wire	Signal Name [Specification]
6	L	-
14	P	-

Connector No.	M11
Connector Name	WIRE TO WIRE
Connector Type	TH7DFW-CS10-M3

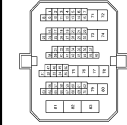


Terminal No.	Color of Wire	Signal Name [Specification]
82	W	-

Connector No.	M18
Connector Name	WIRE TO WIRE
Connector Type	TH40MW-CS15




Terminal No.	Color of Wire	Signal Name [Specification]
7	G	-
8	B	-
32	W	-
33	P	-

Connector No.	M20
Connector Name	WIRE TO WIRE
Connector Type	TH40MW-CS15




Terminal No.	Color of Wire	Signal Name [Specification]
11	G	-
14	B	-
32	W	-
33	P	-

Connector No.	M23
Connector Name	WIRE TO WIRE
Connector Type	TH16MW-NH




Terminal No.	Color of Wire	Signal Name [Specification]
9	B	-
10	Y	-
11	P	-

Connector No.	M44
Connector Name	WIRE TO WIRE
Connector Type	TH32FW-NH




Terminal No.	Color of Wire	Signal Name [Specification]
17	R	-
18	W	-

Connector No.	M77
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS19

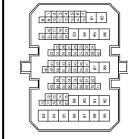

Terminal No.	Color of Wire	Signal Name [Specification]
14	R	-
15	SB	-
73	Y	-
75	P	-

Connector No.	M89
Connector Name	KEY SLOT
Connector Type	TH12FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
1	GR	BAT
7	B	GND
11	Y	KEY SWITCH SIGNAL

JCLWM2792GE

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


INL

# INTERIOR ROOM LAMP CONTROL SYSTEM

## < COMPONENT DIAGNOSIS >


### INTERIOR ROOM LAMP

Connector No.	M101
Connector Name	PUSH-BUTTON IGNITION SWITCH
Connector Type	TK08FB




Terminal No.	Color of Wire	Signal Name [Specification]
1	B	-
2	O	-
3	W	-
4	BR	-

Connector No.	M103
Connector Name	COMBINATION SWITCH
Connector Type	TH16FW-NH




Terminal No.	Color of Wire	Signal Name [Specification]
2	Y	OUTPUT 4
5	V	OUTPUT 3
7	GR	INPUT 3
8	L	OUTPUT 5
9	SB	INPUT 2
10	P	INPUT 4
11	O	INPUT 1
12	W	OUTPUT 1
13	R	INPUT 5
14	P	OUTPUT 2

Connector No.	M121
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FGY-NH



Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH




Terminal No.	Color of Wire	Signal Name [Specification]
66	Y	BACK DOOR SW
68	W	REAR RH DOOR SW
69	R	REAR LH DOOR SW

Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	M03FB-LC



Terminal No.	Color of Wire	Signal Name [Specification]
1	W	BAT (F/L)

Connector No.	M123
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FG-NH




Terminal No.	Color of Wire	Signal Name [Specification]
121	Y	KEY SLOT SW
124	R	PASSENGER DOOR SW
132	G	POWER WINDOW SW COMM
133	W	PUSH-BUTTON IGNITION SW ILL POWER
142	L	COMBI SW OUTPUT 5
143	W	COMBI SW OUTPUT 1
144	P	COMBI SW OUTPUT 2
145	V	COMBI SW OUTPUT 3
146	Y	COMBI SW OUTPUT 4
150	SB	DRIVER DOOR SW

Connector No.	M119
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS16FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
4	P	INTERIOR ROOM LAMP POWER SUPPLY
7	W	STEP LAMP OUTPUT
11	LG	BAT (FUSE)
13	B	GND
14	O	PUSH-BUTTON IGNITION SW ILL GND
19	Y	ROOM LAMP TIMER CONTROL

Connector No.	RT
Connector Name	WIRE TO WIRE
Connector Type	TH16FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
9	B	-
10	Y	-
11	P/W	-

JCLWM2793GE

# INTERIOR ROOM LAMP CONTROL SYSTEM

## < COMPONENT DIAGNOSIS >

### INTERIOR ROOM LAMP

Connector No.	R24
Connector Name	VANITY MIRROR LAMP (DRIVER SIDE)
Connector Type	MCAD2FW

Terminal No.	Color of Wire	Signal Name [Specification]
1	B	
2	P/W	

Terminal No.	Color of Wire	Signal Name [Specification]
1	B	
2	P/W	

Connector No.	R21
Connector Name	PERSONAL LAMP
Connector Type	THGFH-NH

Terminal No.	Color of Wire	Signal Name [Specification]
1	P/W	
2	B	
3	SB	

Terminal No.	Color of Wire	Signal Name [Specification]
1	P/W	
2	Y	
3	B	
4	SB	

Terminal No.	Color of Wire	Signal Name [Specification]
1	B	
2	P/W	

Terminal No.	Color of Wire	Signal Name [Specification]
1	B	
2	P/W	

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P

JCLWM2794GE


# ILLUMINATION

< COMPONENT DIAGNOSIS >

## ILLUMINATION

### Wiring Diagram - ILLUMINATION -

INFOID:000000003295160

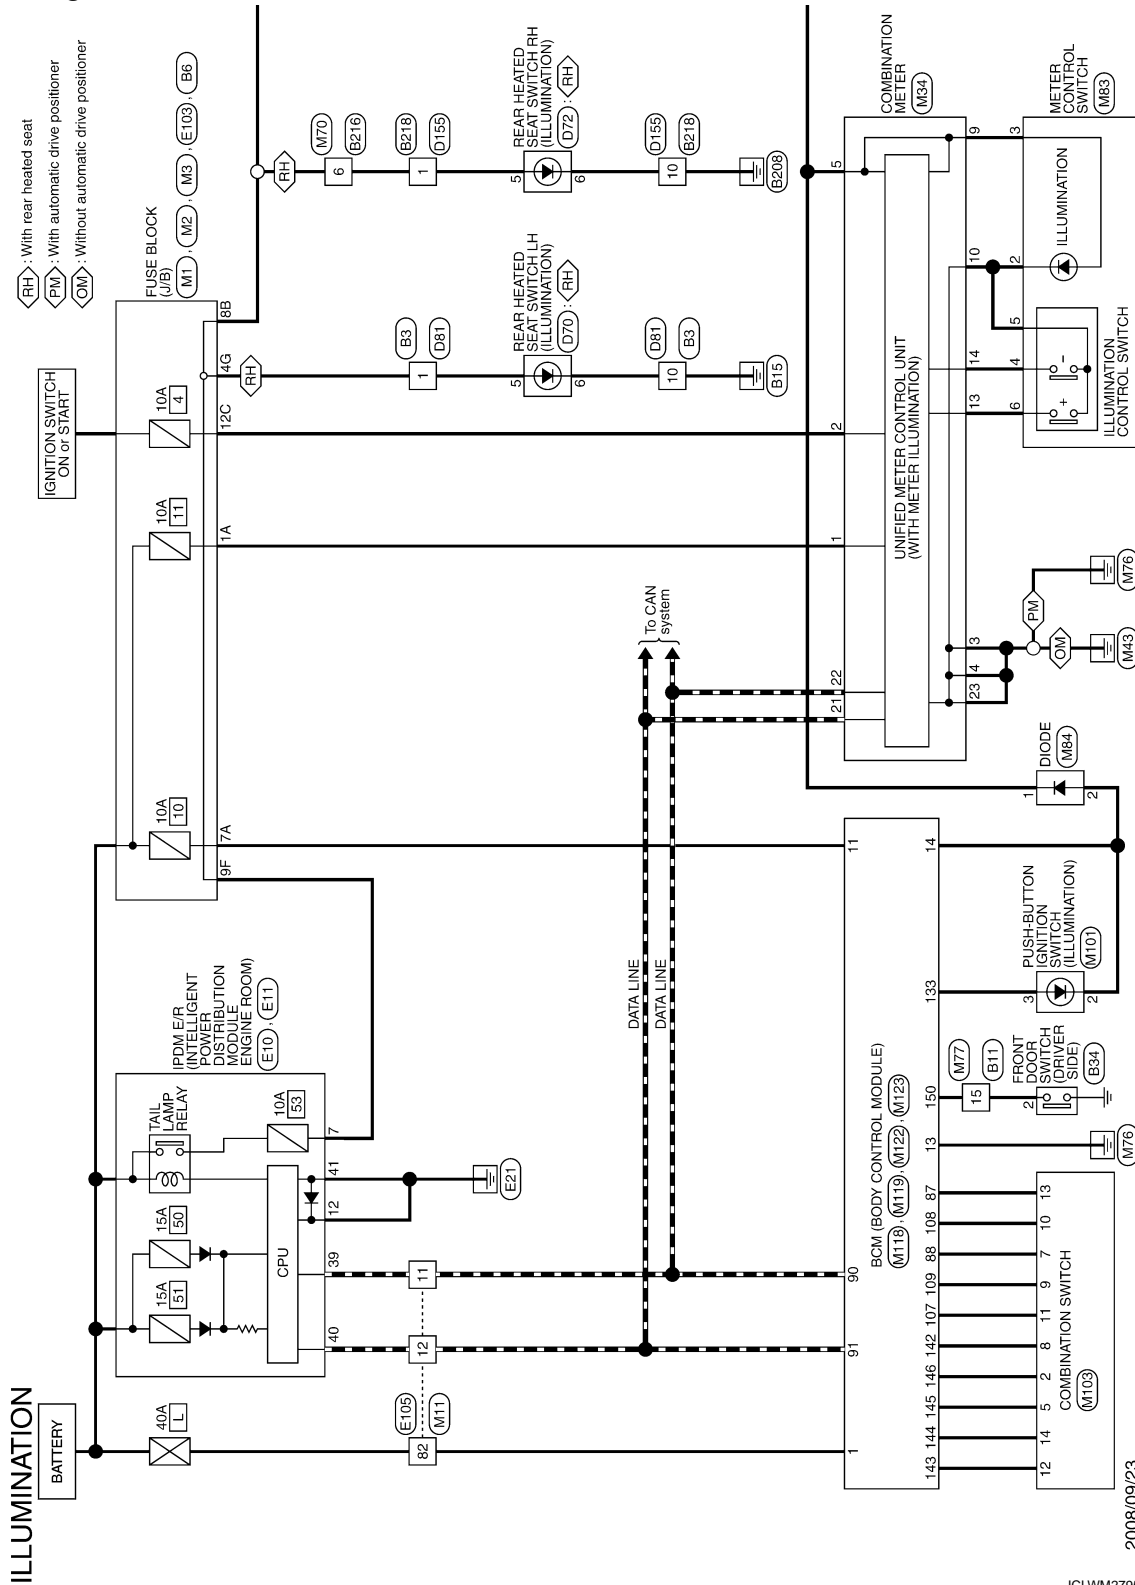


2008/09/23

JCLWM2795GE

# ILLUMINATION

## < COMPONENT DIAGNOSIS >

- <AW> : AWD models
- <HM> : With headlamp manual aiming
- <PM> : With automatic drive positioner
- <OM> : Without automatic drive positioner

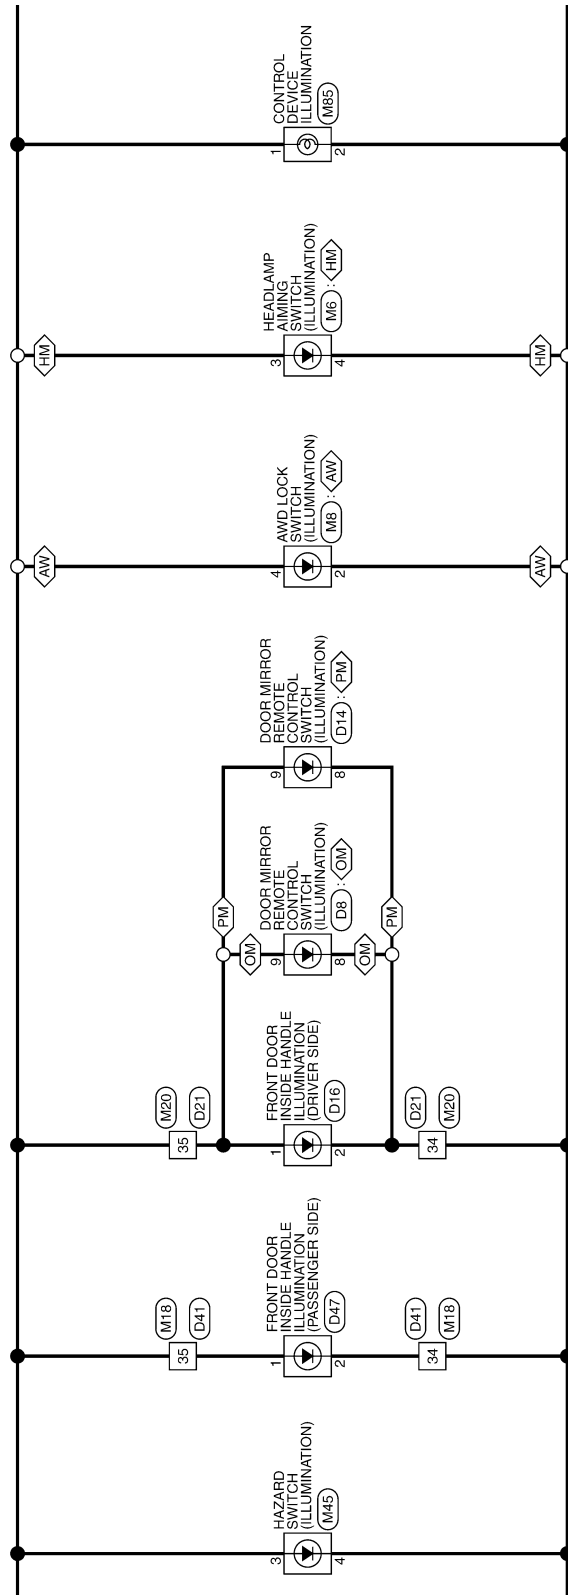


JCLWM2796GE

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P

# ILLUMINATION

## < COMPONENT DIAGNOSIS >


<HS> : With heated seat  
 <AB> : With automatic back door  
 <PR> : With rear seatback power return system

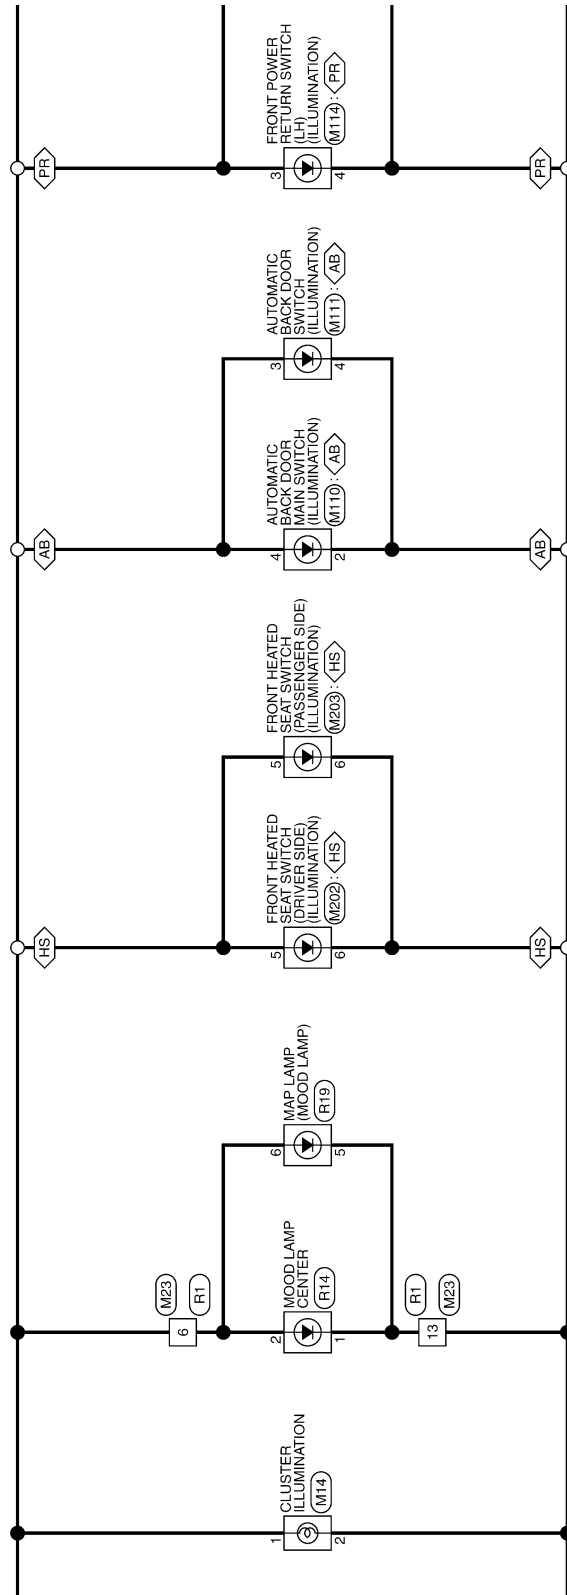

JCLWM2797GE

# ILLUMINATION

## < COMPONENT DIAGNOSIS >

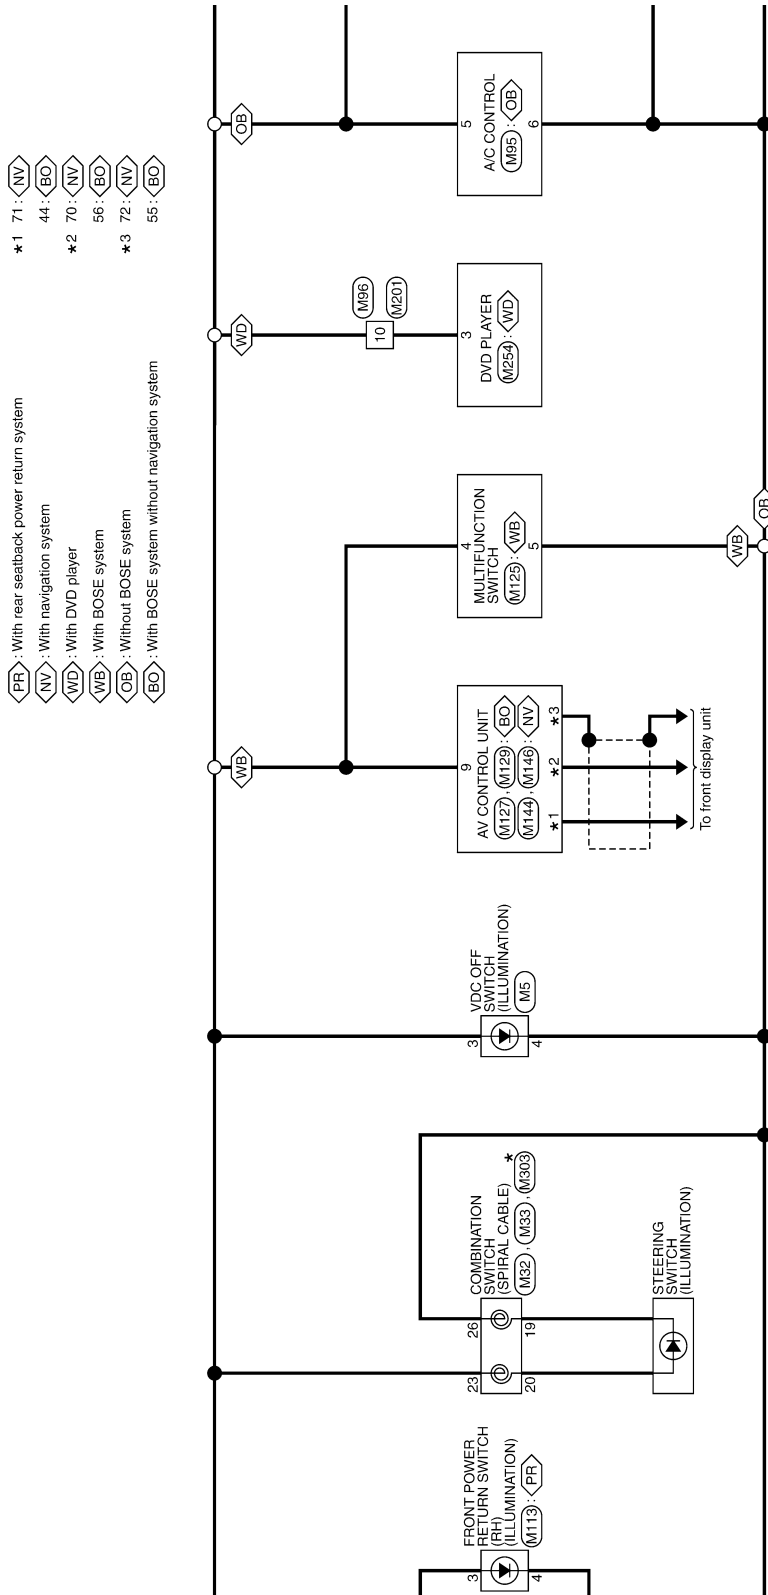


\*: This connector is not shown in "Harness Layout".

JCLWM2798GE

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P

# ILLUMINATION

< COMPONENT DIAGNOSIS >

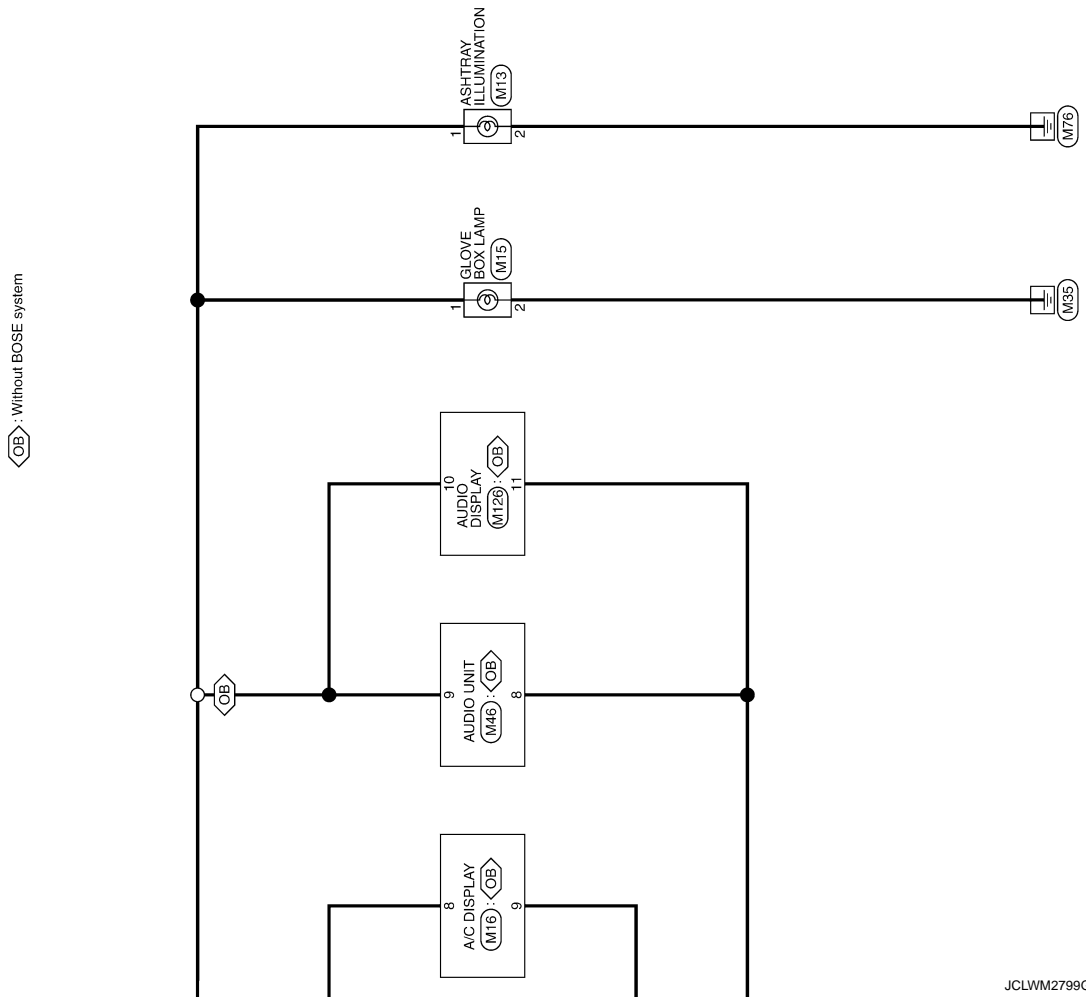



# ILLUMINATION

## < COMPONENT DIAGNOSIS >

### ILLUMINATION

Connector No.	B3	Connector No.	B34
Connector Name	WIRE TO WIRE	Connector Name	FRONT DOOR SWITCH (DRIVER SIDE)
Connector Type	TK10FW-NSB	Connector Type	AG3FW

Terminal No.	1	Terminal No.	2
Color of Wire	L	Color of Wire	SB
Signal Name [Specification]		Signal Name [Specification]	

Terminal No.	10	Terminal No.	15
Color of Wire	B	Color of Wire	SB
Signal Name [Specification]		Signal Name [Specification]	

Connector No.	B6	Connector No.	B8
Connector Name	FUSE BLOCK (J/B)	Connector Name	WIRE TO WIRE
Connector Type	NS12FBR-CS	Connector Type	TH80MW-CS1.9

Terminal No.	4G	Terminal No.	8
Color of Wire	L	Color of Wire	Y
Signal Name [Specification]		Signal Name [Specification]	

Terminal No.	1	Terminal No.	9
Color of Wire	W	Color of Wire	L
Signal Name [Specification]		Signal Name [Specification]	

Connector No.	B216	Connector No.	D14
Connector Name	WIRE TO WIRE	Connector Name	DOOR MIRROR REMOTE CONTROL SWITCH (WITH AUTOMATIC DRIVE POSITIONER)
Connector Type	NS16MBR-CS	Connector Type	TK16FBR

Terminal No.	6	Terminal No.	8
Color of Wire	W	Color of Wire	Y
Signal Name [Specification]		Signal Name [Specification]	

Terminal No.	1	Terminal No.	9
Color of Wire	W	Color of Wire	L
Signal Name [Specification]		Signal Name [Specification]	

JCLWM2800GE

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

INL

# ILLUMINATION

## < COMPONENT DIAGNOSIS >

### ILLUMINATION

Connector No.	D16	Connector No.	D41	Connector No.	D21	Connector No.	D18
Connector Name	FRONT DOOR INSIDE HANDLE ILLUMINATION (DRIVER SIDE)	Connector Name	WIRE TO WIRE	Connector Name	WIRE TO WIRE	Connector Name	FRONT DOOR INSIDE HANDLE ILLUMINATION (DRIVER SIDE)
Connector Type	TK02EGY	Connector Type	TH40FW-CS15	Connector Type	TH40FW-CS15	Connector Type	TK02EGY

Terminal No.	1	2	34	35	34	35	1	2
Color of Wire	L	Y	Y	L	Y	L	L	Y
Signal Name [Specification]	-	-	-	-	-	-	-	-

Terminal No.	1	2	34	35	34	35	1	2
Color of Wire	L	Y	Y	L	Y	L	L	Y
Signal Name [Specification]	-	-	-	-	-	-	-	-

Terminal No.	1	2	34	35	34	35	1	2
Color of Wire	L	Y	Y	L	Y	L	L	Y
Signal Name [Specification]	-	-	-	-	-	-	-	-

Connector No.	D70	Connector No.	D81	Connector No.	D72	Connector No.	D155
Connector Name	REAR HEATED SEAT SWITCH LH	Connector Name	WIRE TO WIRE	Connector Name	REAR HEATED SEAT SWITCH RH	Connector Name	WIRE TO WIRE
Connector Type	NS06FW-CS	Connector Type	TK (DMW)-NS8	Connector Type	NS06FRR-CS	Connector Type	TK (DMW)-NS8

Terminal No.	5	6	11	12	13	14	15	16	17	18
Color of Wire	W	B	Y	L	Y	L	Y	L	Y	B
Signal Name [Specification]	-	-	-	-	-	-	-	-	-	-

Terminal No.	5	6	11	12	13	14	15	16	17	18
Color of Wire	W	B	Y	L	Y	L	Y	L	Y	B
Signal Name [Specification]	-	-	-	-	-	-	-	-	-	-









Terminal No.	5	6	11	12	13	14	15	16	17	18
Color of Wire	W	B	Y	L	Y	L	Y	L	Y	B
Signal Name [Specification]	-	-	-	-	-	-	-	-	-	-

JCLWM2801GE

# ILLUMINATION
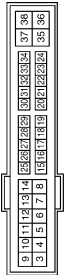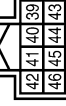
## < COMPONENT DIAGNOSIS >

### ILLUMINATION

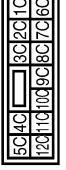Connector No. E10	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)	TH20FW-CS12-M4-TV		Terminal No. 7 12	Color of Wire GR B	Signal Name [Specification]			
Connector No. E11	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)	TH06FW-NH		Terminal No. 39 40 41	Color of Wire P L B	Signal Name [Specification]			
Connector No. E103	FUSE BLOCK (J/B)	NS18FW-CS		Terminal No. 9F	Color of Wire GR	Signal Name [Specification]			
Connector No. E105	WIRE TO WIRE	TH70MM-CS10-M3		Terminal No. 11 12 82	Color of Wire P L LG	Signal Name [Specification]			
Connector No. M1	FUSE BLOCK (J/B)	NS08FW-M2		Terminal No. 1A 7A	Color of Wire Y LG	Signal Name [Specification]			
Connector No. M2	FUSE BLOCK (J/B)	NS10FW-CS		Terminal No. 8B	Color of Wire R	Signal Name [Specification]			
Connector No. M3	FUSE BLOCK (J/B)	NS12FW-CS		Terminal No. 12C	Color of Wire O	Signal Name [Specification]			
Connector No. M5	VDC OFF SWITCH	TK08FGY		Terminal No. 3 4	Color of Wire R SB	Signal Name [Specification]			

JCLWM2802GE


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P

# ILLUMINATION

## < COMPONENT DIAGNOSIS >


### ILLUMINATION

Connector No.	M6
Connector Name	HEADLAMP AIMING SWITCH
Connector Type	A02FW




Terminal No.	Color of Wire	Signal Name [Specification]
3	R	-
4	BR	-

Connector No.	M8
Connector Name	AWD LOCK SWITCH
Connector Type	TH08FW-TV



Terminal No.	Color of Wire	Signal Name [Specification]
2	SB	-
4	R	-

Connector No.	M11
Connector Name	WIRE TO WIRE
Connector Type	TH10FW-CS10-M3




Terminal No.	Color of Wire	Signal Name [Specification]
11	P	-
12	L	-
82	W	-

Connector No.	M13
Connector Name	ASHTRAY ILLUMINATION
Connector Type	A02FW



Terminal No.	Color of Wire	Signal Name [Specification]
1	R	-
2	B	-

Connector No.	M14
Connector Name	CLUSTER ILLUMINATION
Connector Type	A02FW




Terminal No.	Color of Wire	Signal Name [Specification]
1	R	-
2	SB	-

Connector No.	M15
Connector Name	GLOVE BOX LAMP
Connector Type	A02FW




Terminal No.	Color of Wire	Signal Name [Specification]
1	R	-
2	B	-

Connector No.	M16
Connector Name	A/C DISPLAY
Connector Type	TH10FB-NH



Terminal No.	Color of Wire	Signal Name [Specification]
8	R	ILL+
9	BR	ILL-

Connector No.	M18
Connector Name	WIRE TO WIRE
Connector Type	TH40MW-CS15



Terminal No.	Color of Wire	Signal Name [Specification]
34	BR	-
35	R	-

# ILLUMINATION

## < COMPONENT DIAGNOSIS >

### ILLUMINATION

Connector No. M20	Connector Name WIRE TO WIRE	Connector Type TH40MW-CS.5	Terminal No. 34	Color of Wire BR	Signal Name [Specification]	Terminal No. 35	Color of Wire R	Signal Name [Specification]
Connector No. M23	Connector Name WIRE TO WIRE	Connector Type TH18MP-NH	Terminal No. 6	Color of Wire R	Signal Name [Specification]	Terminal No. 13	Color of Wire SB	Signal Name [Specification]
Connector No. M32	Connector Name COMBINATION SWITCH (SPIRAL CABLE)	Connector Type TK6BFY-EX-1V	Terminal No. 23	Color of Wire R	Signal Name [Specification]	Terminal No. 26	Color of Wire SB	Signal Name [Specification]
Connector No. M33	Connector Name COMBINATION SWITCH (SPIRAL CABLE)	Connector Type TK6BFGY-1V	Terminal No. 8	Color of Wire SB	Signal Name [Specification]	Terminal No. 9	Color of Wire R	Signal Name [Specification]
Connector No. M34	Connector Name COMBINATION METER	Connector Type TH40FW-NH	Terminal No. 1	Color of Wire Y	Signal Name [Specification]	Terminal No. 2	Color of Wire O	Signal Name [Specification]
Connector No. M45	Connector Name HAZARD SWITCH	Connector Type TK6HFW	Terminal No. 3	Color of Wire R	Signal Name [Specification]	Terminal No. 4	Color of Wire SB	Signal Name [Specification]
Connector No. M46	Connector Name AUDIO UNIT	Connector Type TH18FW-CS2	Terminal No. 19	Color of Wire SB	Signal Name [Specification]	Terminal No. 20	Color of Wire R	Signal Name [Specification]
Terminal No. 1	Color of Wire Y	Signal Name [Specification]	Terminal No. 2	Color of Wire O	Signal Name [Specification]	Terminal No. 3	Color of Wire B	Signal Name [Specification]
Terminal No. 4	Color of Wire B	Signal Name [Specification]	Terminal No. 5	Color of Wire SB	Signal Name [Specification]	Terminal No. 9	Color of Wire W	Signal Name [Specification]
Terminal No. 10	Color of Wire O	Signal Name [Specification]	Terminal No. 13	Color of Wire V	Signal Name [Specification]	Terminal No. 14	Color of Wire GR	Signal Name [Specification]
Terminal No. 21	Color of Wire L	Signal Name [Specification]	ILLUMINATION CONTROL SWITCH (-) CAN+H					

JCLWM2804GE

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


INL

# ILLUMINATION

## < COMPONENT DIAGNOSIS >


### ILLUMINATION

Connector No.	M70
Connector Name	WIRE TO WIRE
Connector Type	HS16FBF-CS




Terminal No.	Color of Wire	Signal Name [Specification]
6	R	-

Connector No.	M77
Connector Name	WIRE TO WIRE
Connector Type	TH18FW-CS19



Terminal No.	Color of Wire	Signal Name [Specification]
15	SB	-

Connector No.	M83
Connector Name	METER CONTROL SWITCH
Connector Type	TH12FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
2	O	-
3	W	-
4	GR	-
5	O	-
6	V	[With automatic drive positioner]
8	Y	[Without automatic drive positioner]

Connector No.	M84
Connector Name	DIODE
Connector Type	24335 C3902




Terminal No.	Color of Wire	Signal Name [Specification]
1	SB	-
2	O	-

Connector No.	M85
Connector Name	CONTROL DEVICE ILLUMINATION
Connector Type	TK02FBR




Terminal No.	Color of Wire	Signal Name [Specification]
1	R	-
2	SB	-

Connector No.	M85
Connector Name	A/C CONTROL
Connector Type	TH12FW-NH




Terminal No.	Color of Wire	Signal Name [Specification]
5	R	ILL+
6	BR	ILL-

Connector No.	M86
Connector Name	WIRE TO WIRE
Connector Type	TH18FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
10	R	-

Connector No.	M101
Connector Name	PUSH-BUTTON IGNITION SWITCH
Connector Type	TK08FBR




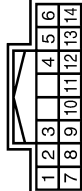

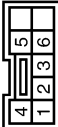












Terminal No.	Color of Wire	Signal Name [Specification]
2	O	-
3	W	-

JCLWM2805GE

# ILLUMINATION

## < COMPONENT DIAGNOSIS >

### ILLUMINATION

Connector No.	M103	Connector No.	M110	Connector No.	M111	Connector No.	M113
Connector Name	COMBINATION SWITCH	Connector Name	AUTOMATIC BACK DOOR MAIN SWITCH	Connector Name	AUTOMATIC BACK DOOR SWITCH	Connector Name	FRONT POWER RETURN SWITCH (RH)
Connector Type	TH18FW-NH	Connector Type	TK03FW	Connector Type	TK08FGY	Connector Type	TK04FW
							
Terminal No.	2	Terminal No.	2	Terminal No.	3	Terminal No.	3
Color of Wire	Y	Color of Wire	BR	Color of Wire	R	Color of Wire	R
Signal Name [Specification]	OUTPUT 4	Signal Name [Specification]	-	Signal Name [Specification]	-	Signal Name [Specification]	-
Terminal No.	5	Terminal No.	4	Terminal No.	4	Terminal No.	4
Color of Wire	V	Color of Wire	R	Color of Wire	SB	Color of Wire	SB
Signal Name [Specification]	OUTPUT 3	Signal Name [Specification]	-	Signal Name [Specification]	-	Signal Name [Specification]	-
Terminal No.	7	Terminal No.	4	Terminal No.	4	Terminal No.	4
Color of Wire	GR	Color of Wire	R	Color of Wire	SB	Color of Wire	R
Signal Name [Specification]	INPUT 3	Signal Name [Specification]	-	Signal Name [Specification]	-	Signal Name [Specification]	-
Terminal No.	8	Terminal No.	4	Terminal No.	4	Terminal No.	4
Color of Wire	L	Color of Wire	R	Color of Wire	SB	Color of Wire	R
Signal Name [Specification]	OUTPUT 5	Signal Name [Specification]	-	Signal Name [Specification]	-	Signal Name [Specification]	-
Terminal No.	9	Terminal No.	4	Terminal No.	4	Terminal No.	4
Color of Wire	SB	Color of Wire	R	Color of Wire	SB	Color of Wire	R
Signal Name [Specification]	INPUT 2	Signal Name [Specification]	-	Signal Name [Specification]	-	Signal Name [Specification]	-
Terminal No.	10	Terminal No.	4	Terminal No.	4	Terminal No.	4
Color of Wire	P	Color of Wire	R	Color of Wire	SB	Color of Wire	R
Signal Name [Specification]	INPUT 4	Signal Name [Specification]	-	Signal Name [Specification]	-	Signal Name [Specification]	-
Terminal No.	11	Terminal No.	4	Terminal No.	4	Terminal No.	4
Color of Wire	O	Color of Wire	R	Color of Wire	SB	Color of Wire	R
Signal Name [Specification]	INPUT 1	Signal Name [Specification]	-	Signal Name [Specification]	-	Signal Name [Specification]	-
Terminal No.	12	Terminal No.	4	Terminal No.	4	Terminal No.	4
Color of Wire	W	Color of Wire	R	Color of Wire	SB	Color of Wire	R
Signal Name [Specification]	OUTPUT 1	Signal Name [Specification]	-	Signal Name [Specification]	-	Signal Name [Specification]	-
Terminal No.	13	Terminal No.	4	Terminal No.	4	Terminal No.	4
Color of Wire	R	Color of Wire	R	Color of Wire	SB	Color of Wire	R
Signal Name [Specification]	INPUT 5	Signal Name [Specification]	-	Signal Name [Specification]	-	Signal Name [Specification]	-
Terminal No.	14	Terminal No.	4	Terminal No.	4	Terminal No.	4
Color of Wire	P	Color of Wire	R	Color of Wire	SB	Color of Wire	R
Signal Name [Specification]	OUTPUT 2	Signal Name [Specification]	-	Signal Name [Specification]	-	Signal Name [Specification]	-
Connector No.	M14	Connector No.	M118	Connector No.	M119	Connector No.	M122
Connector Name	FRONT POWER RETURN SWITCH (LH)	Connector Name	BCM (BODY CONTROL MODULE)	Connector Name	BCM (BODY CONTROL MODULE)	Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TK04FW	Connector Type	M03FB-LC	Connector Type	NS18FW-CS	Connector Type	TH40FB-NH
							
Terminal No.	3	Terminal No.	1	Terminal No.	11	Terminal No.	87
Color of Wire	R	Color of Wire	W	Color of Wire	LG	Color of Wire	R
Signal Name [Specification]	-	Signal Name [Specification]	BAT (F/L)	Signal Name [Specification]	BAT (FUSE)	Signal Name [Specification]	COMBI SW INPUT 5
Terminal No.	4	Terminal No.	4	Terminal No.	13	Terminal No.	88
Color of Wire	SB	Color of Wire	B	Color of Wire	B	Color of Wire	GR
Signal Name [Specification]	-	Signal Name [Specification]	BAT (F/L)	Signal Name [Specification]	GND	Signal Name [Specification]	COMBI SW INPUT 3
Terminal No.	4	Terminal No.	14	Terminal No.	14	Terminal No.	90
Color of Wire	SB	Color of Wire	O	Color of Wire	O	Color of Wire	P
Signal Name [Specification]	-	Signal Name [Specification]	PUSH-BUTTON IGNITION SW ILL GND	Signal Name [Specification]	PUSH-BUTTON IGNITION SW ILL GND	Signal Name [Specification]	CAN-L
Terminal No.	4	Terminal No.	107	Terminal No.	91	Terminal No.	91
Color of Wire	SB	Color of Wire	P	Color of Wire	L	Color of Wire	L
Signal Name [Specification]	-	Signal Name [Specification]	COMBI SW INPUT 1	Signal Name [Specification]	CAN-H	Signal Name [Specification]	CAN-L
Terminal No.	4	Terminal No.	108	Terminal No.	107	Terminal No.	107
Color of Wire	SB	Color of Wire	P	Color of Wire	O	Color of Wire	O
Signal Name [Specification]	-	Signal Name [Specification]	COMBI SW INPUT 4	Signal Name [Specification]	COMBI SW INPUT 1	Signal Name [Specification]	COMBI SW INPUT 1
Terminal No.	4	Terminal No.	109	Terminal No.	109	Terminal No.	109
Color of Wire	SB	Color of Wire	SB	Color of Wire	SB	Color of Wire	SB
Signal Name [Specification]	-	Signal Name [Specification]	COMBI SW INPUT 2	Signal Name [Specification]	COMBI SW INPUT 2	Signal Name [Specification]	COMBI SW INPUT 2


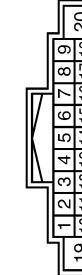
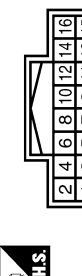

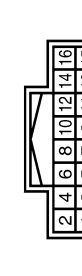



JCLWM2806GE

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P

# ILLUMINATION

## < COMPONENT DIAGNOSIS >

### ILLUMINATION

Connector No. M123	BCM BODY CONTROL MODULE	TH4FG-NH		Terminal No. of Wire	Color	Signal Name [Specification]
133	W	PUSH-BUTTON IGNITION SW ILL POWER		142	L	COMBI SW OUTPUT 5
143	W	COMBI SW OUTPUT 1		144	P	COMBI SW OUTPUT 2
145	V	COMBI SW OUTPUT 3		146	Y	COMBI SW OUTPUT 4
150	SB	DRIVER DOOR SW				
Connector No. M127	AV CONTROL UNIT (WITH BOSE SYSTEM WITHOUT NAVIGATION SYSTEM)	TH18FW-CSZ		Terminal No. of Wire	Color	Signal Name [Specification]
9	R	ILLUMINATION				
Connector No. M125	MULTIFUNCTION SWITCH	TH18FW-NH		Terminal No. of Wire	Color	Signal Name [Specification]
4	R	ILL		5	SB	ILL CONT
Connector No. M126	AUDIO DISPLAY	TH12FW-NH		Terminal No. of Wire	Color	Signal Name [Specification]
10	R	ILL+		11	SB	ILL-
Connector No. M144	AV CONTROL UNIT (WITH NAVIGATION SYSTEM)	TH18FW-CSZ		Terminal No. of Wire	Color	Signal Name [Specification]
9	R	ILLUMINATION				
Connector No. M129	AV CONTROL UNIT (WITH BOSE SYSTEM WITHOUT NAVIGATION SYSTEM)	TH24FW-NH		Terminal No. of Wire	Color	Signal Name [Specification]
44	G	COMM (DISP->CONT)		55	SHIELD	SHIELD
56	R	COMM (GONT->DISP)				
Connector No. M146	AV CONTROL UNIT (WITH NAVIGATION SYSTEM)	TH12FW-NH		Terminal No. of Wire	Color	Signal Name [Specification]
70	R	COMM (CONT->DISP)		71	G	COMM (DISP->CONT)
72	SHIELD	SHIELD				
Connector No. M201	WIRE TO WIRE	TH16MW-NH		Terminal No. of Wire	Color	Signal Name [Specification]
10	R	---				

JCLWM2807GE




# ILLUMINATION

## < COMPONENT DIAGNOSIS >

### ILLUMINATION

Connector No.	M202	Connector No.	M203	Connector No.	M254	Connector No.	M303
Connector Name	FRONT HEATED SEAT SWITCH (DRIVER SIDE)	Connector Name	FRONT HEATED SEAT SWITCH (PASSENGER SIDE)	Connector Name	DVD PLAYER	Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	NS6FW-CS	Connector Type	NS6FER-CS	Connector Type	TH52FW-NH	Connector Type	TK08FGY
Terminal No.	5	Terminal No.	5	Terminal No.	3	Terminal No.	19
Color of Wire	R	Color of Wire	R	Color of Wire	R	Color of Wire	-
Signal Name [Specification]	-	Signal Name [Specification]	-	Signal Name [Specification]	ILLUMINATION	Signal Name [Specification]	-
Terminal No.	6	Terminal No.	6	Terminal No.	6	Terminal No.	20
Color of Wire	SB	Color of Wire	BR	Color of Wire	BR	Color of Wire	-
Signal Name [Specification]	-	Signal Name [Specification]	-	Signal Name [Specification]	-	Signal Name [Specification]	-



### ILLUMINATION

Connector No.	R1	Connector No.	R14	Connector No.	R19
Connector Name	WIRE TO WIRE	Connector Name	MOOD LAMP CENTER	Connector Name	MAP LAMP
Connector Type	TH16FW-NH	Connector Type	TK02FW	Connector Type	TK08FGY
Terminal No.	6	Terminal No.	1	Terminal No.	5
Color of Wire	R/L	Color of Wire	R/Y	Color of Wire	R/Y
Signal Name [Specification]	-	Signal Name [Specification]	-	Signal Name [Specification]	-
Terminal No.	13	Terminal No.	2	Terminal No.	6
Color of Wire	R/L	Color of Wire	R/L	Color of Wire	R/L
Signal Name [Specification]	-	Signal Name [Specification]	-	Signal Name [Specification]	-



JCLWM2808GE

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

INL

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

## ECU DIAGNOSIS

### BCM (BODY CONTROL MODULE)

Reference Value

INFOID:000000003729866

#### VALUES ON THE DIAGNOSIS TOOL

CONSULT-III MONITOR ITEM

Monitor Item	Condition	Value/Status
FR WIPER HI	Other than front wiper switch HI	Off
	Front wiper switch HI	On
FR WIPER LOW	Other than front wiper switch LO	Off
	Front wiper switch LO	On
FR WASHER SW	Front washer switch OFF	Off
	Front washer switch ON	On
FR WIPER INT	Other than front wiper switch INT/AUTO	Off
	Front wiper switch INT/AUTO	On
FR WIPER STOP	Front wiper is not in STOP position	Off
	Front wiper is in STOP position	On
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 7	Wiper intermittent dial position
RR WIPER ON	Other than rear wiper switch ON	Off
	Rear wiper switch ON	On
RR WIPER INT	Other than rear wiper switch INT	Off
	Rear wiper switch INT	On
RR WASHER SW	Rear washer switch OFF	Off
	Rear washer switch ON	On
RR WIPER STOP	Rear wiper is in STOP position	Off
	Rear wiper is not in STOP position	On
TURN SIGNAL R	Other than turn signal switch RH	Off
	Turn signal switch RH	On
TURN SIGNAL L	Other than turn signal switch LH	Off
	Turn signal switch LH	On
TAIL LAMP SW	Other than lighting switch 1ST and 2ND	Off
	Lighting switch 1ST or 2ND	On
HI BEAM SW	Other than lighting switch HI	Off
	Lighting switch HI	On
HEAD LAMP SW 1	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
HEAD LAMP SW 2	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
PASSING SW	Other than lighting switch PASS	Off
	Lighting switch PASS	On
AUTO LIGHT SW	Other than lighting switch AUTO	Off
	Lighting switch AUTO	On
FR FOG SW	Front fog lamp switch OFF	Off
	Front fog lamp switch ON	On

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

Monitor Item	Condition	Value/Status	
RR FOG SW	<b>NOTE:</b> The item is indicated, but not monitored.	Off	A
DOOR SW-DR	Driver door closed	Off	B
	Driver door opened	On	
DOOR SW-AS	Passenger door closed	Off	C
	Passenger door opened	On	
DOOR SW-RR	Rear RH door closed	Off	D
	Rear RH door opened	On	
DOOR SW-RL	Rear LH door closed	Off	E
	Rear LH door opened	On	
DOOR SW-BK	Back door closed	Off	F
	Back door opened	On	
CDL LOCK SW	Other than power door lock switch LOCK	Off	G
	Power door lock switch LOCK	On	
CDL UNLOCK SW	Other than power door lock switch UNLOCK	Off	H
	Power door lock switch UNLOCK	On	
KEY CYL LK-SW	Other than driver door key cylinder LOCK position	Off	I
	Driver door key cylinder LOCK position	On	
KEY CYL UN-SW	Other than driver door key cylinder UNLOCK position	Off	J
	Driver door key cylinder UNLOCK position	On	
KEY CYL SW-TR	<b>NOTE:</b> The item is indicated, but not monitored.	Off	K
HAZARD SW	Hazard switch is OFF	Off	INL
	Hazard switch is ON	On	
REAR DEF SW <b>NOTE:</b> At model with BOSE audio system this item is not monitored.	Rear window defogger switch OFF	Off	M
	Rear window defogger switch ON	On	
TR CANCEL SW	<b>NOTE:</b> The item is indicated, but not monitored.	Off	N
TR/BD OPEN SW	Back door opener switch OFF	Off	O
	While the back door opener switch is turned ON	On	
TRNK/HAT MNTR	<b>NOTE:</b> The item is indicated, but not monitored.	Off	P
RKE-LOCK	LOCK button of the key is not pressed	Off	N
	LOCK button of the key is pressed	On	
RKE-UNLOCK	UNLOCK button of the key is not pressed	Off	O
	UNLOCK button of the key is pressed	On	
RKE-TR/BD	BACK DOOR OPEN button of the key is not pressed	Off	P
	BACK DOOR OPEN button of the key is pressed	On	
RKE-PANIC	PANIC button of the key is not pressed	Off	P
	PANIC button of the key is pressed	On	
RKE-P/W OPEN	UNLOCK button of the key is not pressed	Off	P
	UNLOCK button of the key is pressed and held	On	

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS >

Monitor Item	Condition	Value/Status
RKE-MODE CHG	LOCK/UNLOCK button of the key is not pressed and held simultaneously	Off
	LOCK/UNLOCK button of the key is pressed and held simultaneously	On
OPTICAL SENSOR	Bright outside of the vehicle	Close to 5 V
	Dark outside of the vehicle	Close to 0 V
REQ SW -DR	Driver door request switch is not pressed	Off
	Driver door request switch is pressed	On
REQ SW -AS	Passenger door request switch is not pressed	Off
	Passenger door request switch is pressed	On
REQ SW -RR	<b>NOTE:</b> The item is indicated, but not monitored.	Off
REQ SW -RR	<b>NOTE:</b> The item is indicated, but not monitored.	Off
REQ SW -BD/TR	Back door request switch is not pressed	Off
	Back door request switch is pressed	On
PUSH SW	Push-button ignition switch (push switch) is not pressed	Off
	Push-button ignition switch (push switch) is pressed	On
IGN RLY2 -F/B	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
ACC RLY -F/B	<b>NOTE:</b> The item is indicated, but not monitored.	Off
CLUCH SW	<b>NOTE:</b> The item is indicated, but not monitored.	Off
BRAKE SW 1	The brake pedal is depressed when No. 7 fuse is blown	Off
	The brake pedal is not depressed when No. 7 fuse is blown, or No. 7 fuse is normal	On
BRAKE SW 2	The brake pedal is not depressed	Off
	Stop lamp switch 1 signal circuit is normal	On
DETE/CANCL SW	Selector lever in P position	Off
	Selector lever in any position other than P	On
SFT PN/N SW	Selector lever in any position other than P and N	Off
	Selector lever in P or N position	On
S/L -LOCK	Steering is unlocked	Off
	Steering is locked	On
S/L -UNLOCK	Steering is locked	Off
	Steering is unlocked	On
S/L RELAY-F/B	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
UNLK SEN -DR	Driver door is unlocked	Off
	Driver door is locked	On
PUSH SW -IPDM	Push-button ignition switch (push-switch) is not pressed	Off
	Push-button ignition switch (push-switch) is pressed	On
IGN RLY1 -F/B	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
DETE SW -IPDM	Selector lever in any position other than P	Off
	Selector lever in P position	On

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS >

Monitor Item	Condition	Value/Status	
SFT PN -IPDM	Selector lever in any position other than P and N	Off	A
	Selector lever in P or N position	On	
SFT P -MET	Selector lever in any position other than P	Off	B
	Selector lever in P position	On	
SFT N -MET	Selector lever in any position other than N	Off	C
	Selector lever in N position	On	
ENGINE STATE	Engine stopped	Stop	
	While the engine stalls	Stall	D
	At engine cranking	Crank	
	Engine running	Run	
S/L LOCK-IPDM	Steering is unlocked	Off	E
	Steering is locked	On	
S/L UNLK-IPDM	Steering is locked	Off	F
	Steering is unlocked	On	
S/L RELAY-REQ	Steering lock system is not the LOCK condition and the changing condition from LOCK to UNLOCK.	Off	G
	Steering lock system is the LOCK condition or the changing condition from LOCK to UNLOCK.	On	
VEH SPEED 1	While driving	Equivalent to speedometer reading	H
VEH SPEED 2	While driving	Equivalent to speedometer reading	
DOOR STAT-DR	Driver door is locked	LOCK	
	Wait with selective UNLOCK operation (5 seconds)	READY	I
	Driver door is unlocked	UNLOCK	
DOOR STAT-AS	Passenger door is locked	LOCK	J
	Wait with selective UNLOCK operation (5 seconds)	READY	
	Passenger door is unlocked	UNLOCK	
ID OK FLAG	Steering is locked	Reset	K
	Steering is unlocked	Set	
PRMT ENG STRT	The engine start is prohibited	Reset	INL
	The engine start is permitted	Set	
PRMT RKE STRT	<b>NOTE:</b> The item is indicated, but not monitored.	Reset	M
KEY SW -SLOT	The key is not inserted into key slot	Off	
	The key is inserted into key slot	On	
RKE OPE COUN1	During the operation of the key	Operation frequency of the key	N
RKE OPE COUN2	<b>NOTE:</b> The item is indicated, but not monitored.	—	
CONFIRM ID ALL	The key ID that the key slot receives is not recognized by any key ID registered to BCM.	Yet	O
	The key ID that the key slot receives is recognized by any key ID registered to BCM.	Done	P
CONFIRM ID4	The key ID that the key slot receives is not recognized by the fourth key ID registered to BCM.	Yet	
	The key ID that the key slot receives is recognized by the fourth key ID registered to BCM.	Done	


## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS >

Monitor Item	Condition	Value/Status
CONFIRM ID3	The key ID that the key slot receives is not recognized by the third key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by the third key ID registered to BCM.	Done
CONFIRM ID2	The key ID that the key slot receives is not recognized by the second key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by the second key ID registered to BCM.	Done
CONFIRM ID1	The key ID that the key slot receives is not recognized by the first key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by the first key ID registered to BCM.	Done
TP 4	The ID of fourth key is not registered to BCM	Yet
	The ID of fourth key is registered to BCM	Done
TP 3	The ID of third key is not registered to BCM	Yet
	The ID of third key is registered to BCM	Done
TP 2	The ID of second key is not registered to BCM	Yet
	The ID of second key is registered to BCM	Done
TP 1	The ID of first key is not registered to BCM	Yet
	The ID of first key is registered to BCM	Done
AIR PRESS FL	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of front LH tire
AIR PRESS FR	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of front RH tire
AIR PRESS RR	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of rear RH tire
AIR PRESS RL	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of rear LH tire
ID REGST FL1	ID of front LH tire transmitter is registered	Done
	ID of front LH tire transmitter is not registered	Yet
ID REGST FR1	ID of front RH tire transmitter is registered	Done
	ID of front RH tire transmitter is not registered	Yet
ID REGST RR1	ID of rear RH tire transmitter is registered	Done
	ID of rear RH tire transmitter is not registered	Yet
ID REGST RL1	ID of rear LH tire transmitter is registered	Done
	ID of rear LH tire transmitter is not registered	Yet
WARNING LAMP	Tire pressure indicator OFF	Off
	Tire pressure indicator ON	On
BUZZER	Tire pressure warning alarm is not sounding	Off
	Tire pressure warning alarm is sounding	On

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >  
 TERMINAL LAYOUT

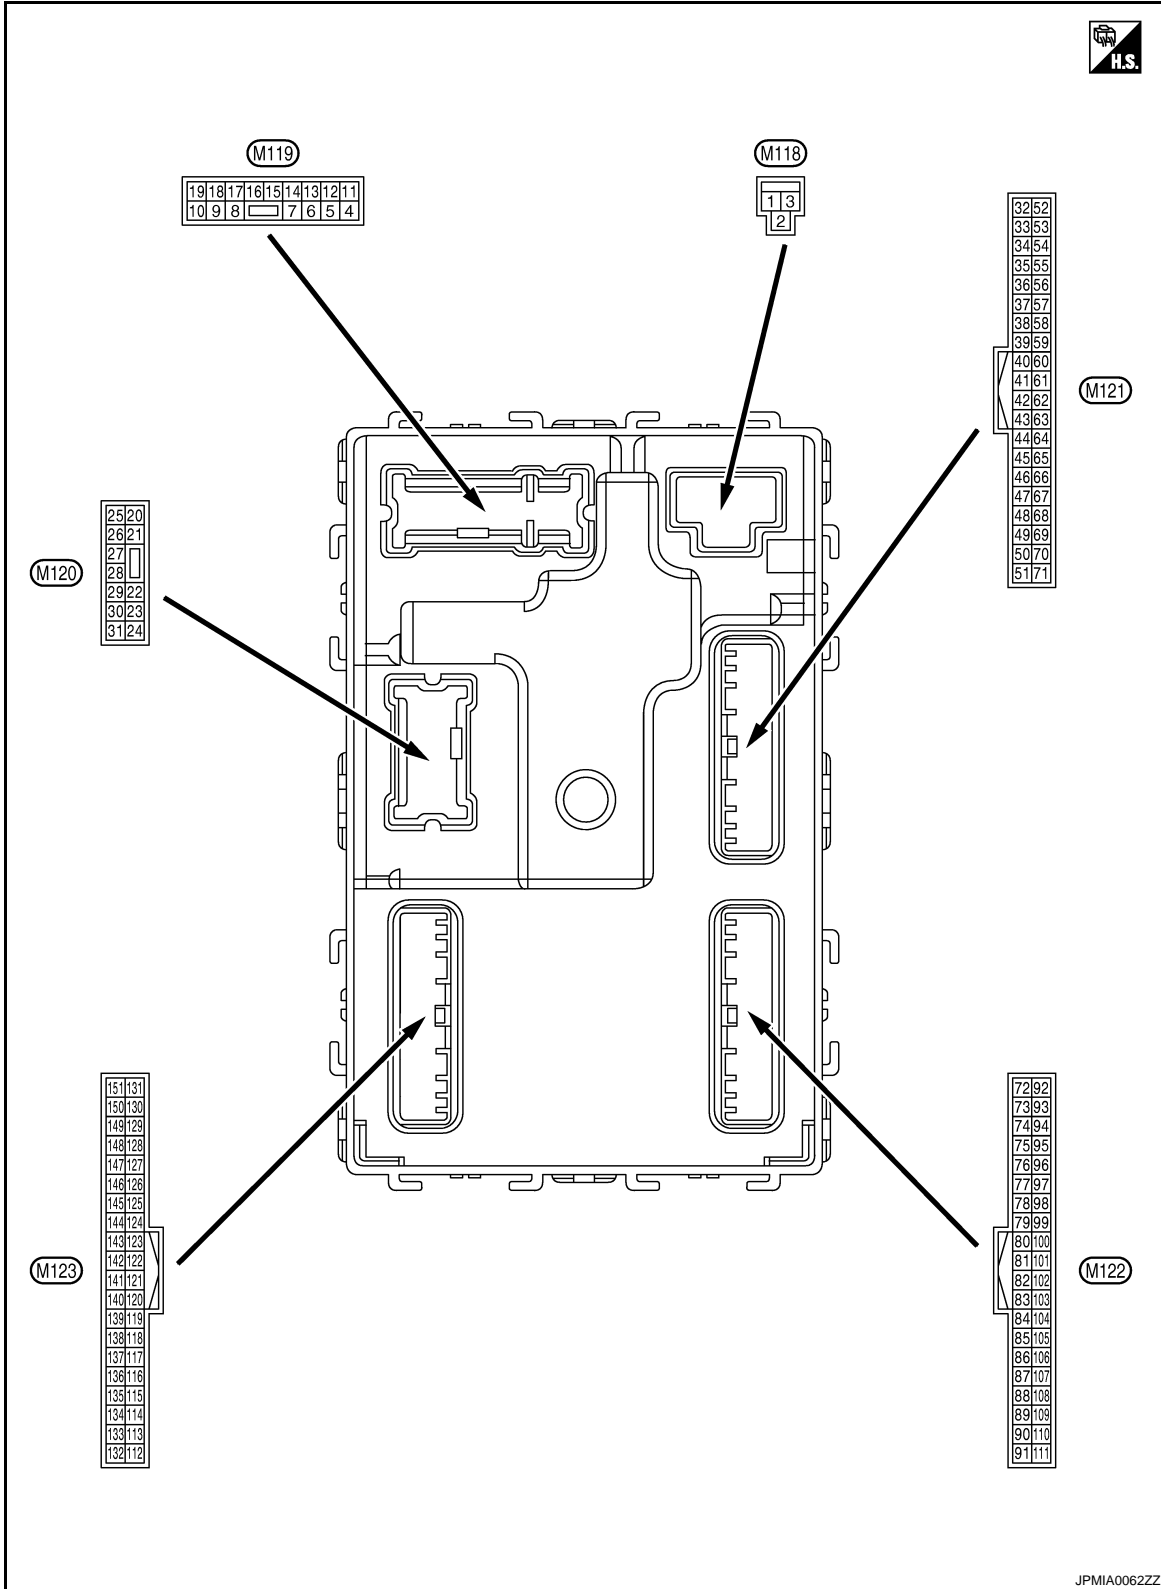


PHYSICAL VALUES

A  
 B  
 C  
 D  
 E  
 F  
 G  
 H  
 I  
 J  
 K  
 L  
 M  
 N  
 O  
 P

**INL**

# BCM (BODY CONTROL MODULE)





## < ECU DIAGNOSIS >

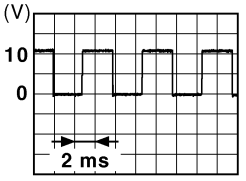Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
1 (W)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
2 (GR)	Ground	P/W power supply (BAT)	Output	Ignition switch OFF		Battery voltage
3 (L)	Ground	P/W power supply (RAP)	Output	Ignition switch ON		Battery voltage
4 (P)	Ground	Interior room lamp power supply	Output	Interior room lamp battery saver is activated. (Cuts the interior room lamp power supply)		0 V
				Interior room lamp battery saver is not activated. (Outputs the interior room lamp power supply)		Battery voltage
5 (G)	Ground	Passenger door UN- LOCK	Output	Passenger door	UNLOCK (Actuator is activated)	Battery voltage
					Other than UNLOCK (Actuator is not activated)	0 V
7 (W)	Ground	Step lamp	Output	Step lamp	ON	0 V
					OFF	Battery voltage
8 (V)	Ground	All doors LOCK	Output	All doors	LOCK (Actuator is activated)	Battery voltage
					Other than LOCK (Actuator is not activated)	0 V
9 (G)	Ground	Driver door UNLOCK	Output	Driver door	UNLOCK (Actuator is activated)	Battery voltage
					Other than UNLOCK (Actuator is not activated)	0 V
10 (P)	Ground	Rear RH door and rear LH door UN- LOCK	Output	Rear RH door and rear LH door	UNLOCK (Actuator is activated)	Battery voltage
					Other than UNLOCK (Actuator is not activated)	0 V
11 (LG)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
13 (B)	Ground	Ground	—	Ignition switch ON		0 V
14 (O)	Ground	Push-button ignition switch illumination ground	Output	Tail lamp	OFF	0 V
					ON	<p><b>NOTE:</b> When the illumination brightening/dimming level is in the neutral position</p>  <p style="text-align: right; font-size: small;">JSNIA0010GB</p>
15 (L)	Ground	ACC indicator lamp	Output	Ignition switch	OFF	Battery voltage
					ACC	0.2 V
					ON	0 V



# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

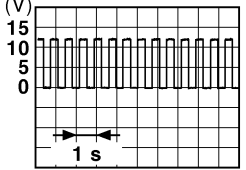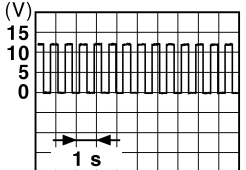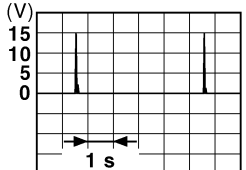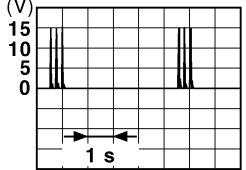Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
17 (G)	Ground	Turn signal RH	Output	Turn signal switch OFF	0 V
				Ignition switch ON Turn signal switch RH	 <p style="text-align: right; font-size: small;">PKID0926E</p>
18 (BR)	Ground	Turn signal LH	Output	Turn signal switch OFF	0 V
				Ignition switch ON Turn signal switch LH	 <p style="text-align: right; font-size: small;">PKID0926E</p>
19 (Y)	Ground	Room lamp timer control	Output	Interior room lamp OFF	Battery voltage
				Interior room lamp ON	0 V
23 (BR)	Ground	Back door open	Output	Back door OPEN (Back door opener actuator is activated)	Battery voltage
				Back door Other than OPEN (Back door opener actuator is not activated)	0 V
26 (G)	Ground	Rear wiper	Output	Rear wiper OFF (Stopped)	0 V
				Rear wiper ON (Operated)	Battery voltage
34*1 (B)	Ground	Luggage room antenna (-)	Output	Ignition switch OFF When Intelligent Key is in the passenger compartment	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				Ignition switch OFF When Intelligent Key is not in the passenger compartment	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

INL





# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
35*1 (W)	Ground	Luggage room antenna (+)	Output	Ignition switch OFF	
				When Intelligent Key is not in the passenger compartment	
38*1 (L)	Ground	Rear bumper antenna (-)	Output	When the back door request switch is operated with ignition switch OFF	
				When Intelligent Key is not in the antenna detection area	
39*1 (BR)	Ground	Rear bumper antenna (+)	Output	When the back door request switch is operated with ignition switch OFF	
				When Intelligent Key is not in the antenna detection area	
47 (L)	Ground	Ignition relay (IPDM E/R) control	Output	Ignition switch	Battery voltage
				OFF or ACC	0 V

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

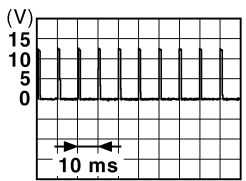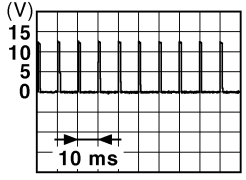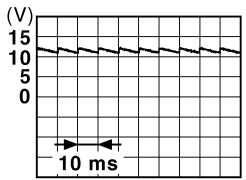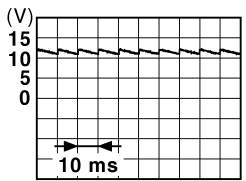Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
52 (R)	Ground	Starter relay control	Output	Ignition switch ON	When selector lever is in P or N position	Battery voltage
					When selector lever is not in P or N position	0.3 V
				Ignition switch OFF	0 V	
61*1 (R)	Ground	Back door request switch	Input	Back door re- quest switch	ON (Pressed)	0 V
					OFF (Not pressed)	 <p style="text-align: right; font-size: small;">JPMIA0016GB</p>
						1.0 V
64*1 (GR)	Ground	Warning buzzer	Output	Warning buzzer	Sounding	0 V
					Not sounding	Battery voltage
65 (O)	Ground	Rear wiper stop posi- tion	Input	Rear wiper	In stop position	 <p style="text-align: right; font-size: small;">JPMIA0016GB</p>
						1.0 V
66 (Y)	Ground	Back door switch	Input	Back door switch	OFF (When back door closes)	 <p style="text-align: right; font-size: small;">JPMIA0011GB</p>
					11.8 V	
						0 V
67 (LG)	Ground	Back door opener switch	Input	Back door opener switch	Pressed	0 V
					Not pressed	 <p style="text-align: right; font-size: small;">JPMIA0011GB</p>
						11.8 V

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

INL

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
68 (W)	Ground	Rear RH door switch	Input	Rear RH door switch	<p style="text-align: right; font-size: small;">JPMIA0011GB</p> <p style="text-align: center;">11.8 V</p>
					ON (When rear RH door opens)
69 (R)	Ground	Rear LH door switch	Input	Rear LH door switch	<p style="text-align: right; font-size: small;">JPMIA0011GB</p> <p style="text-align: center;">11.8 V</p>
					ON (When rear LH door opens)
72*1 (B)	Ground	Room antenna 2 (-) (Center console)	Output	Ignition switch OFF	<p style="text-align: right; font-size: small;">JMKIA0062GB</p>
					When Intelligent Key is not in the passenger compartment

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
73*1 (W)	Ground	Room antenna 2 (+) (Center console)	Output	Ignition switch OFF	<p>JMKIA0062GB</p>
				When Intelligent Key is not in the passenger compart- ment	<p>JMKIA0063GB</p>
74*1 (Y)	Ground	Passenger door an- tenna (-)	Output	When the pas- senger door re- quest switch is operated with ig- nition switch OFF	<p>JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	<p>JMKIA0063GB</p>
75*1 (LG)	Ground	Passenger door an- tenna (+)	Output	When the pas- senger door re- quest switch is operated with ig- nition switch OFF	<p>JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	<p>JMKIA0063GB</p>

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

**INL**





# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
76*1 (V)	Ground	Driver door antenna (-)	Output	When Intelligent Key is in the antenna detection area	<p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When the driver door request switch is operat- ed with ignition switch OFF	<p style="text-align: right; font-size: small;">JMKIA0063GB</p>
77*1 (P)	Ground	Driver door antenna (+)	Output	When Intelligent Key is in the antenna detection area	<p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When the driver door request switch is operat- ed with ignition switch OFF	<p style="text-align: right; font-size: small;">JMKIA0063GB</p>
78*1 (R)	Ground	Room antenna 1 (-) (Instrument panel)	Output	Ignition switch OFF	<p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the passenger compart- ment	<p style="text-align: right; font-size: small;">JMKIA0063GB</p>

# BCM (BODY CONTROL MODULE)



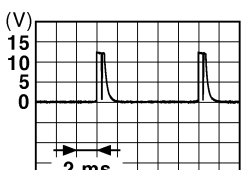
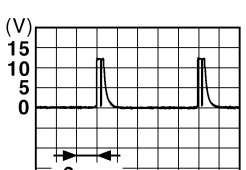
## < ECU DIAGNOSIS >

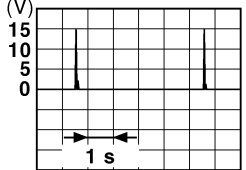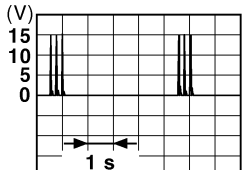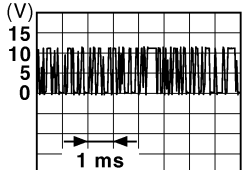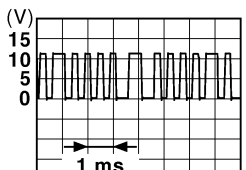Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
79*1 (G)	Ground	Room antenna 1 (+) (Instrument panel)	Output	Ignition switch OFF		
				When Intelligent Key is not in the passenger compart- ment		
80 (SB)	Ground	NATS antenna amp (built in key slot)	Input/ Output	During waiting	Ignition switch is pressed while inserting the key into the key slot.	
81 (O)	Ground	NATS antenna amp (built in key slot)	Input/ Output	During waiting	Ignition switch is pressed while inserting the key into the key slot.	
82 (BR)	Ground	Ignition relay [fuse block (J/B)] control	Output	Ignition switch	OFF or ACC	0 V
					ON	Battery voltage
83 (P)	Ground	Remote keyless entry receiver communica- tion	Input/ Output	During waiting		
				When operating either button on the key		

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P

# BCM (BODY CONTROL MODULE)






## < ECU DIAGNOSIS >

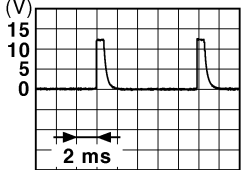Terminal No. (Wire color)		Description		Condition	Value (Approx.)
		Signal name	Input/ Output		
+	-				
87 (R)	Ground	Combination switch INPUT 5	Input	Combination switch	<p>All switches OFF (Wiper intermittent dial 4)</p>  <p style="text-align: right; font-size: small;">JPMIA0041GB</p> <p style="text-align: center;">1.4 V</p>
					<p>Front fog lamp switch ON (Wiper intermittent dial 4)</p>  <p style="text-align: right; font-size: small;">JPMIA0037GB</p> <p style="text-align: center;">1.3 V</p>
					<p>Rear wiper switch ON (Wiper intermittent dial 4)</p>  <p style="text-align: right; font-size: small;">JPMIA0039GB</p> <p style="text-align: center;">1.3 V</p>
					<p>Any of the conditions below with all switches OFF</p> <ul style="list-style-type: none"> <li>• Wiper intermittent dial 1</li> <li>• Wiper intermittent dial 2</li> <li>• Wiper intermittent dial 6</li> <li>• Wiper intermittent dial 7</li> </ul>  <p style="text-align: right; font-size: small;">JPMIA0040GB</p> <p style="text-align: center;">1.3 V</p>



# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

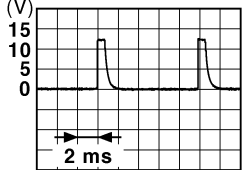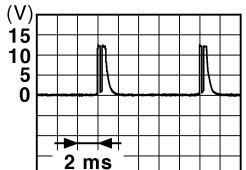
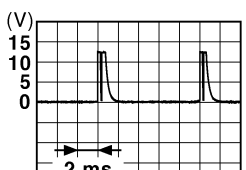
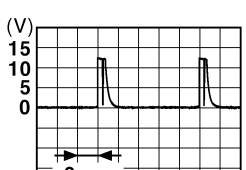
Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
88 (GR)	Ground	Combination switch INPUT 3	Input	Combination switch	All switches OFF (Wiper intermittent dial 4)	 <small>JPMIA0041GB</small> 1.4 V
					Lighting switch HI (Wiper intermittent dial 4)	 <small>JPMIA0036GB</small> 1.3 V
					Lighting switch 2ND (Wiper intermittent dial 4)	 <small>JPMIA0037GB</small> 1.3 V
					Rear washer switch ON (Wiper intermittent dial 4)	 <small>JPMIA0039GB</small> 1.3 V
					Any of the conditions below with all switches OFF	 <small>JPMIA0040GB</small> 1.3 V
89 (BR)	Ground	Push-button ignition switch (push switch)	Input	Push-button igni- tion switch (push switch)	Pressed	0 V
					Not pressed	Battery voltage
90 (P)	Ground	CAN - L	Input/ Output		—	—
91 (L)	Ground	CAN - H	Input/ Output		—	—

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

INL




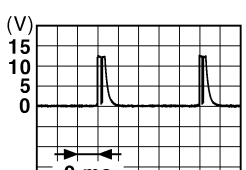

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

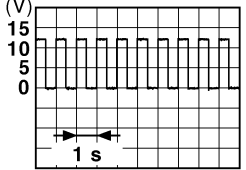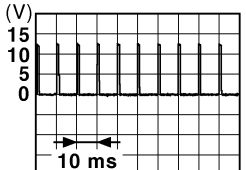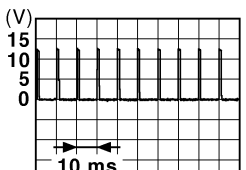Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
92 (R)*1 (L)*2	Ground	Key slot illumination	Output	Key slot illumination	OFF	0 V
					Blinking	 <p style="text-align: right; font-size: small;">JPMIA0015GB</p>
					ON	Battery voltage
93 (L)	Ground	ON indicator lamp	Output	Ignition switch	OFF or ACC	Battery voltage
					ACC	0.2 V
					ON	0 V
95 (L)	Ground	ACC relay control	Output	Ignition switch	OFF	0 V
					ACC or ON	Battery voltage
96 (Y)	Ground	Control device (de- tention switch) power supply	Output	—	Battery voltage	
97 (O)	Ground	Steering lock condi- tion No. 1	Input	Steering lock	LOCK status	0 V
					UNLOCK status	Battery voltage
98 (L)	Ground	Steering lock condi- tion No. 2	Input	Steering lock	LOCK status	Battery voltage
					UNLOCK status	0 V
99 (V)	Ground	Selector lever P posi- tion switch	Input	Selector lever	P position	0 V
					Any position other than P	Battery voltage
100*1 (P)	Ground	Passenger door re- quest switch	Input	Passenger door request switch	ON (Pressed)	0 V
					OFF (Not pressed)	 <p style="text-align: right; font-size: small;">JPMIA0016GB</p>
101*1 (W)	Ground	Driver door request switch	Input	Driver door re- quest switch	ON (Pressed)	0 V
					OFF (Not pressed)	 <p style="text-align: right; font-size: small;">JPMIA0016GB</p>
102 (Y)	Ground	Blower fan motor re- lay control	Output	Ignition switch	OFF or ACC	0 V
					ON	Battery voltage
103 (L)	Ground	Remote keyless entry receiver power sup- ply	Output	Ignition switch OFF	Battery voltage	

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >




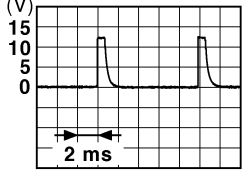
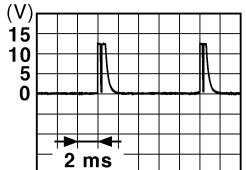
Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
106 (Y)	Ground	Steering lock unit power supply	Output	Ignition switch	OFF or ACC	Battery voltage
				ON	0 V	
107 (O)	Ground	Combination switch INPUT 1	Input	Combination switch (Wiper intermittent dial 4)	All switches OFF	 <p style="text-align: right; font-size: small;">JPMIA0041GB</p>
					Turn signal switch LH	 <p style="text-align: right; font-size: small;">JPMIA0037GB</p>
					Turn signal switch RH	 <p style="text-align: right; font-size: small;">JPMIA0036GB</p>
					Front wiper switch LO	 <p style="text-align: right; font-size: small;">JPMIA0038GB</p>
					Front washer switch ON	 <p style="text-align: right; font-size: small;">JPMIA0039GB</p>

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

INL




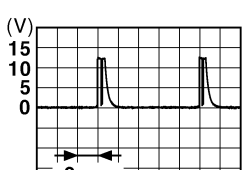

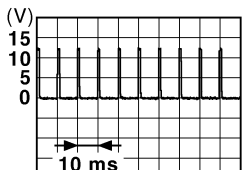
# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

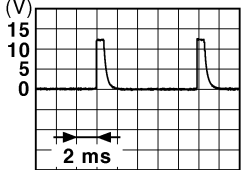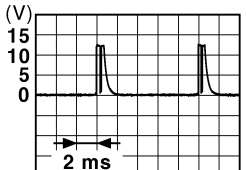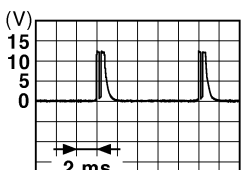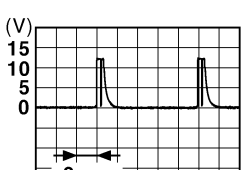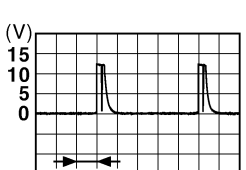Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
108 (P)	Ground	Combination switch INPUT 4	Input	Combination switch	All switches OFF (Wiper intermittent dial 4)	 <p style="text-align: right; font-size: small;">JPMIA0041GB</p> <p style="text-align: center;">1.4 V</p>
					Lighting switch AUTO (Wiper intermittent dial 4)	 <p style="text-align: right; font-size: small;">JPMIA0038GB</p> <p style="text-align: center;">1.3 V</p>
					Lighting switch 1ST (Wiper intermittent dial 4)	 <p style="text-align: right; font-size: small;">JPMIA0036GB</p> <p style="text-align: center;">1.3 V</p>
					Rear wiper switch INT (Wiper intermittent dial 4)	 <p style="text-align: right; font-size: small;">JPMIA0040GB</p> <p style="text-align: center;">1.3 V</p>
					Any of the conditions below with all switches OFF	<ul style="list-style-type: none"> <li>• Wiper intermittent dial 1</li> <li>• Wiper intermittent dial 5</li> <li>• Wiper intermittent dial 6</li> </ul>  <p style="text-align: right; font-size: small;">JPMIA0039GB</p> <p style="text-align: center;">1.3 V</p>

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

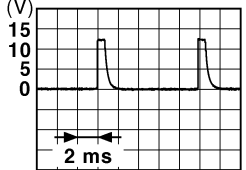
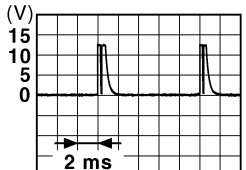

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
109 (SB)	Ground	Combination switch INPUT 2	Input	Combination switch (Wiper intermit- tent dial 4)	All switches OFF	 <p style="text-align: right;">1.4 V</p>
					Lighting switch PASS	 <p style="text-align: right;">1.3 V</p>
					Lighting switch 2ND	 <p style="text-align: right;">1.3 V</p>
					Front wiper switch INT/ AUTO	 <p style="text-align: right;">1.3 V</p>
					Front wiper switch HI	 <p style="text-align: right;">1.3 V</p>
					ON	0 V
110 (G)	Ground	Hazard switch	Input	Hazard switch	 <p style="text-align: right;">1.1 V</p>	
				OFF		

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

INL





# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

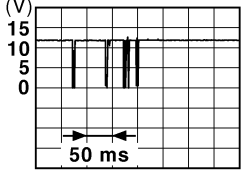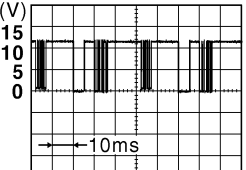Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
111 (LG)	Ground	Steering lock unit communication	Input/ Output	Steering lock	LOCK status	Battery voltage
					LOCK or UNLOCK	 <p style="text-align: right; font-size: small;">JMKIA0066GB</p>
					For 15 seconds after UN- LOCK	Battery voltage
				15 seconds or later after UNLOCK	0 V	
112 (R)	Ground	Rain sensor serial link	Input/ Output	Ignition switch ON	 <p style="text-align: right; font-size: small;">JPMIA0156GB</p>	
					8.7 V	
113*3 (O)	Ground	Optical sensor	Input	Ignition switch ON	When bright outside of the vehicle	Close to 5 V
					When dark outside of the vehicle	Close to 0 V
116 (GR)	Ground	Stop lamp switch 1	Input	—	Battery voltage	
118 (L)	Ground	Stop lamp switch 2	Input	Stop lamp switch	OFF (Brake pedal is not depressed)	0 V
					ON (Brake pedal is de- pressed)	Battery voltage
119*1 (W)	Ground	Front door lock as- sembly driver side (Unlock sensor)	Input	Driver door	LOCK status (unlock sen- sor switch OFF)	 <p style="text-align: right; font-size: small;">JPMIA0012GB</p>
					UNLOCK status (unlock sensor switch ON)	1.1 V
					0 V	
121 (Y)	Ground	Key slot switch	Input	When the key is inserted into key slot	Battery voltage	
				When the key is not inserted into key slot	0 V	
122 (R)	Ground	ACC feedback	Input	Ignition switch	OFF	0 V
					ACC or ON	Battery voltage
123 (G)	Ground	IGN feedback	Input	Ignition switch	OFF or ACC	0 V
					ON	Battery voltage

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

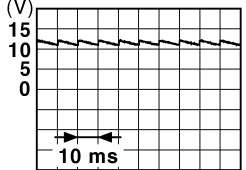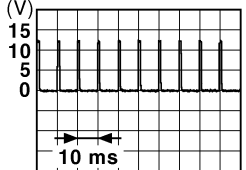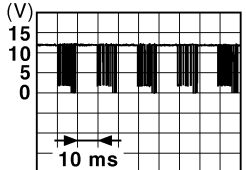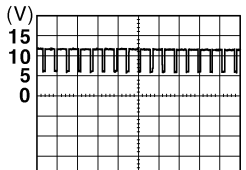

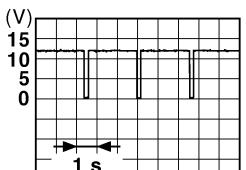
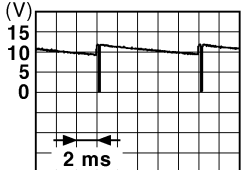
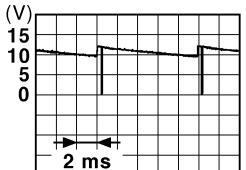
Terminal No. (Wire color)		Description		Condition	Value (Approx.)
		Signal name	Input/ Output		
+	-				
124 (R)	Ground	Passenger door switch	Input	Passenger door switch	 <p style="text-align: right; font-size: small;">JPMIA0011GB</p> <p style="text-align: center;">11.8 V</p>
				OFF (When passenger door closes)	0 V
130*4 (BR)	Ground	Rear window defogger switch	Input	Ignition switch ON	 <p style="text-align: right; font-size: small;">JPMIA0012GB</p> <p style="text-align: center;">1.1 V</p>
				Rear window defogger switch OFF	0 V
132 (G)	Ground	Power window switch communication	Input/ Output	Ignition switch ON	 <p style="text-align: right; font-size: small;">JPMIA0013GB</p> <p style="text-align: center;">10.2 V</p>
				Ignition switch OFF or ACC	Battery voltage
133 (W)	Ground	Push-button ignition switch illumination	Output	Push-button ignition switch illumination	<p style="text-align: center;"><b>NOTE:</b> The pulse width of this wave is varied by the illumination brightening/dimming level.</p>  <p style="text-align: right; font-size: small;">JPMIA0159GB</p>
				ON (When tail lamps ON)	9.5 V
137 (P)	Ground	Receiver and sensor ground	Input	Ignition switch ON	0 V
				OFF	0 V
138 (V)	Ground	Receiver and sensor power supply	Output	Ignition switch	0 V
				ACC or ON	5.0 V

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

INL

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

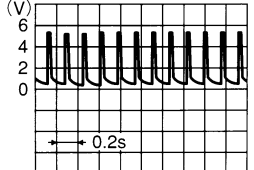Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
139*5 (O)	Ground	Tire pressure receiver communication	Input/ Output	Ignition switch ON	Standby state  OCC3881D
				When receiving the signal from the transmitter  OCC3880D	
140 (GR)	Ground	Selector lever P/N position	Input	Selector lever	P or N position Battery voltage
				Except P and N positions	0 V
141 (O)	Ground	Security indicator	Output	Security indicator	ON 0 V
				Blinking  JPMIA0014GB 11.3 V	
				OFF Battery voltage	
142 (L)	Ground	Combination switch OUTPUT 5	Output	Combination switch (Wiper intermittent dial 4)	All switches OFF 0 V
				Lighting switch 1ST	 JPMIA0031GB 10.7 V
				Lighting switch HI	
				Lighting switch 2ND	
Turn signal switch RH					
143 (W)	Ground	Combination switch OUTPUT 1	Output	Combination switch	All switches OFF (Wiper intermittent dial 4) 0 V
				Front wiper switch HI (Wiper intermittent dial 4)	 JPMIA0032GB 10.7 V
				Rear wiper switch INT (Wiper intermittent dial 4)	
				Any of the conditions below with all switches OFF • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 3 • Wiper intermittent dial 6 • Wiper intermittent dial 7	



# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)		
+	-	Signal name	Input/ Output				
144 (P)	Ground	Combination switch OUTPUT 2	Output	Combination switch	All switches OFF (Wiper intermittent dial 4)	0 V	
					Front washer switch ON (Wiper intermittent dial 4)		
					Rear wiper switch ON (Wiper intermittent dial 4)		
					Rear washer switch ON (Wiper intermittent dial 4)		
					Any of the conditions below with all switches OFF <ul style="list-style-type: none"> <li>• Wiper intermittent dial 1</li> <li>• Wiper intermittent dial 5</li> <li>• Wiper intermittent dial 6</li> </ul>		10.7 V
145 (V)	Ground	Combination switch OUTPUT 3	Output	Combination switch (Wiper intermit- tent dial 4)	All switches OFF	0 V	
					Front wiper switch INT/ AUTO		
					Front wiper switch LO		
					Lighting switch AUTO		10.7 V
146 (Y)	Ground	Combination switch OUTPUT 4	Output	Combination switch (Wiper intermit- tent dial 4)	All switches OFF	0 V	
					Front fog lamp switch ON		
					Lighting switch 2ND		
					Lighting switch PASS		
					Turn signal switch LH		10.7 V
149*5 (W)	Ground	Tire pressure warn- ing check switch	Input	Ignition switch ON		11.8 V	
150 (SB)	Ground	Driver door switch	Input	Driver door switch	OFF (When driver door closes)		11.8 V
					ON (When driver door opens)		

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
		Signal name	Input/ Output			
+	-					
151 (G)	Ground	Rear window defogger relay control	Output	Rear window defogger	Active	0 V
					Not activated	Battery voltage

**NOTE:**

- \*1: With Intelligent Key system
- \*2: Without Intelligent Key system
- \*3: With auto light system
- \*4: Without BOSE audio system
- \*5: With TPMS

### Wiring Diagram - BCM -


INFOID:000000003729867

UP TO VIN: JN8AZ18U\*9W100000, JN8AZ18W\*9W200000 (EXCEPT FOR MEXICO),

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

JN8AZ18U\*9W710000, JN8AZ18W\*9W810000 (FOR MEXICO)

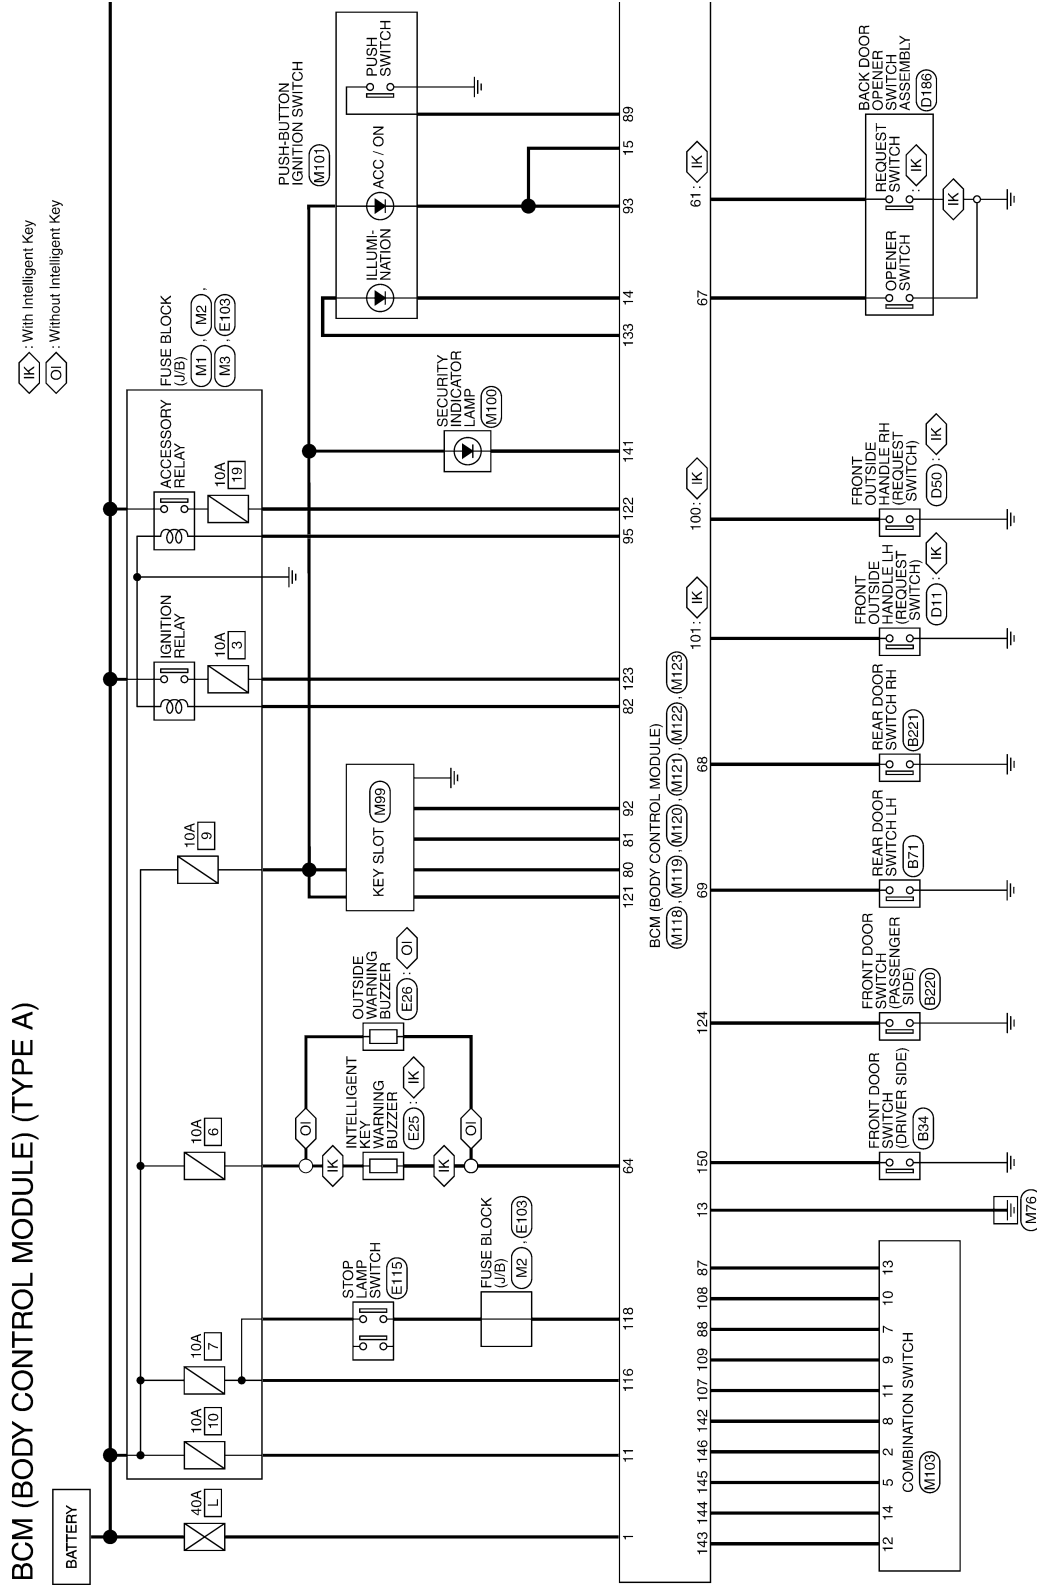


2008/09/23

JCMWM3152GI

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

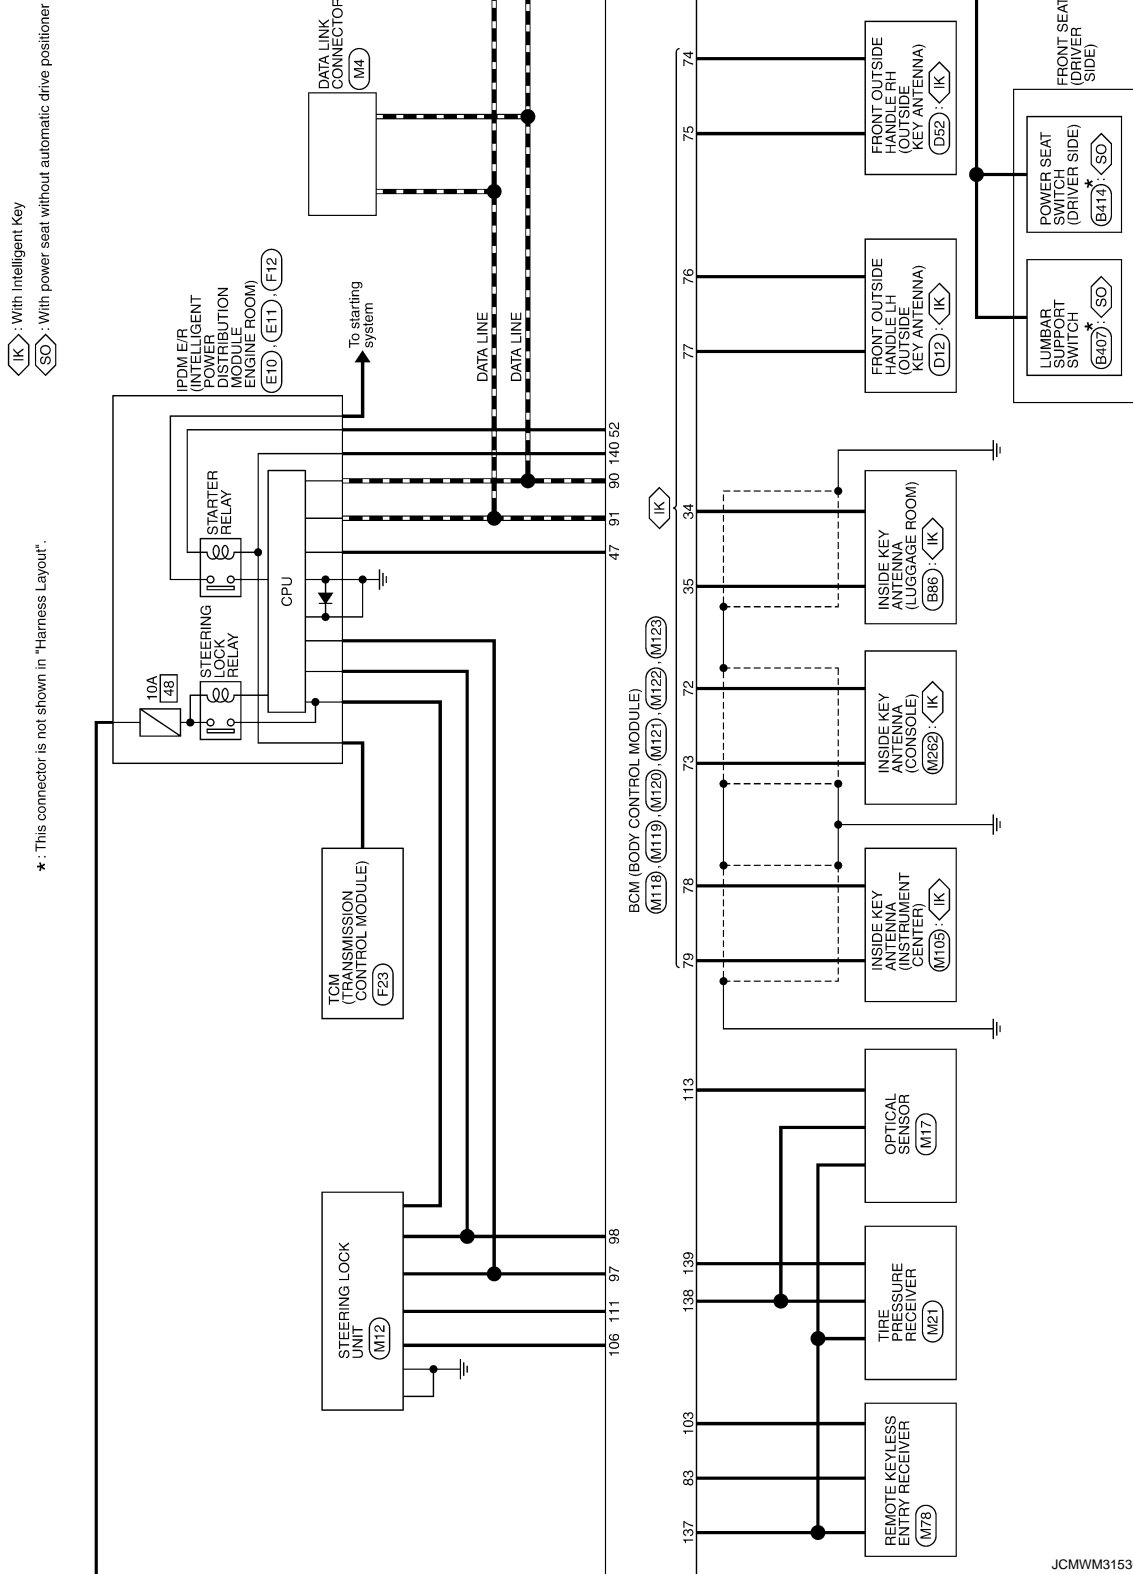


JCMWM3153G

# BCM (BODY CONTROL MODULE)


< ECU DIAGNOSIS >

- ◊IK : With Intelligent Key
- ◊NV : With navigation system
- ◊BO : With BOSE system without navigation system
- ◊PM : With sunroof
- ◊FM : With automatic drive positioner
- ◊SO : With power seat without automatic drive positioner
- ◊AB : With automatic back door

\* : This connector is not shown in "Harness Layout".

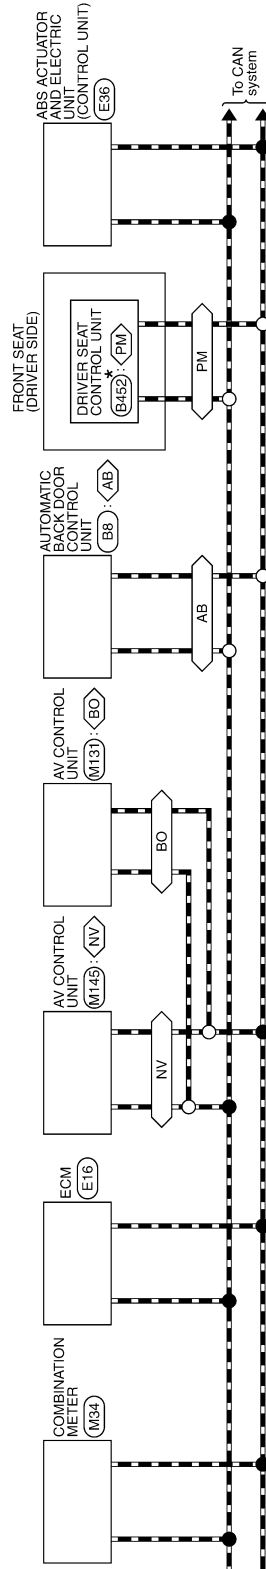

BCM (BODY CONTROL MODULE)

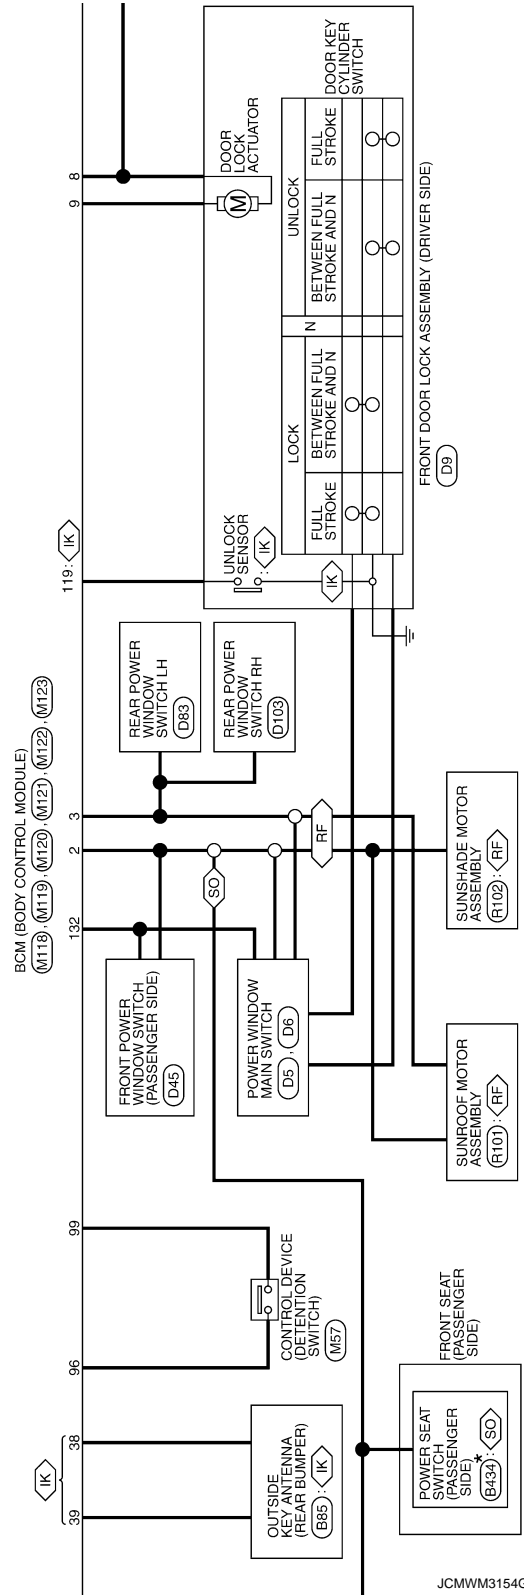


JCMWM3154G1

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P

# BCM (BODY CONTROL MODULE)


< ECU DIAGNOSIS >

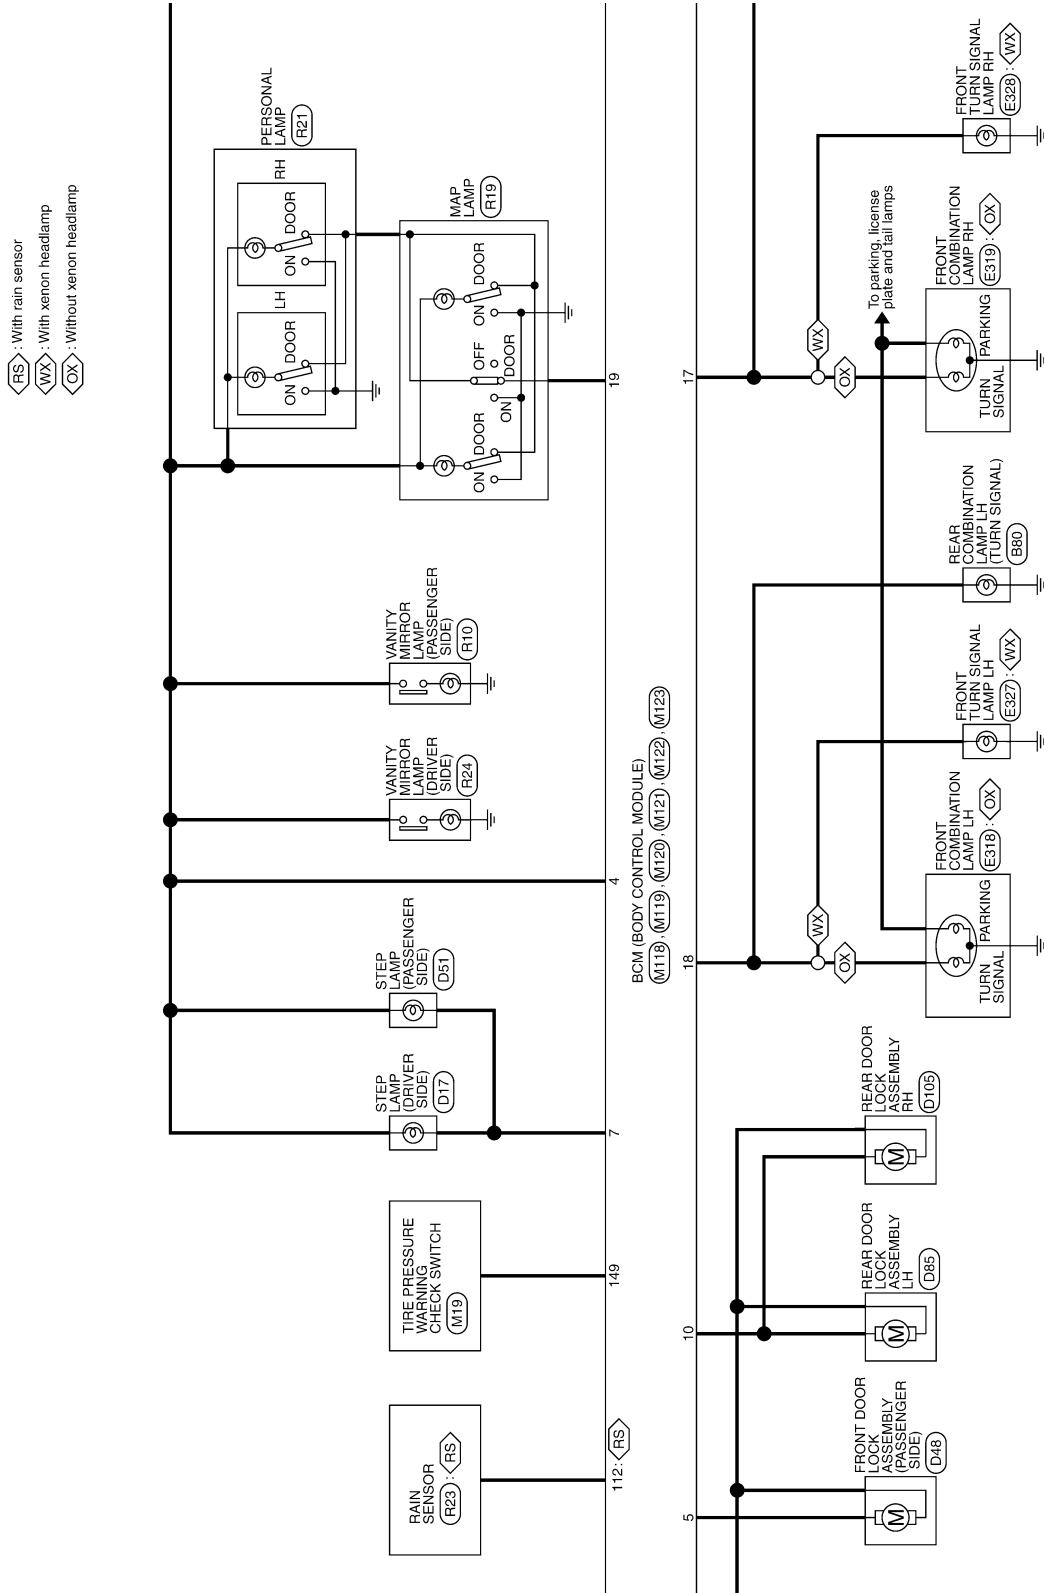

JCMW3155G

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

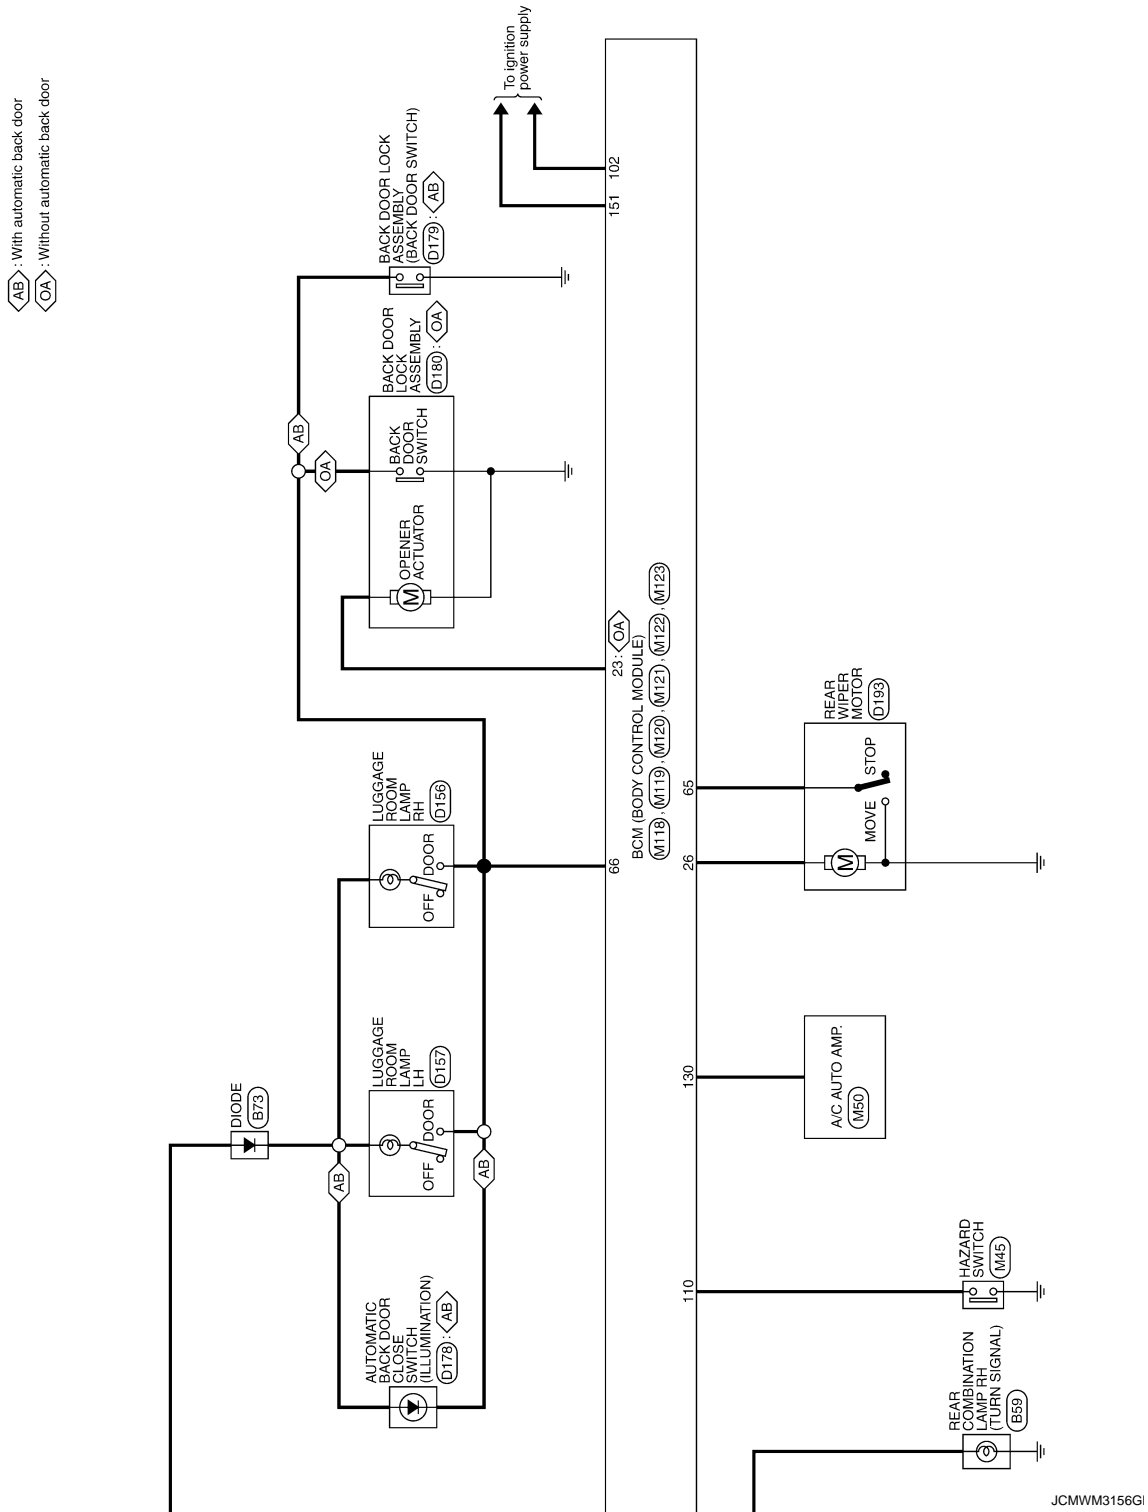

JCMWM3156G1

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


**INL**

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

## BCM (BODY CONTROL MODULE) (TYPE A)

Connector No.	M103
Connector Name	COMBINATION SWITCH
Connector Type	TH16FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
2	Y	OUTPUT 4
5	V	OUTPUT 3
7	GR	INPUT 3
8	L	OUTPUT 5
9	SB	INPUT 2
10	P	INPUT 4
11	O	INPUT 1
12	W	OUTPUT 1
13	R	INPUT 5
14	P	OUTPUT 2



Connector No.	M120
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS12FW-CS




Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	M03FB-LC



Terminal No.	Color of Wire	Signal Name [Specification]
1	W	BAT (F/L)
2	GR	POWER WINDOW POWER SUPPLY (BAT)
3	L	POWER WINDOW POWER SUPPLY (RAP)


Connector No.	M121
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FGY-NH

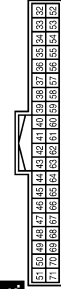

Terminal No.	Color of Wire	Signal Name [Specification]
23	BR	BACK DOOR OPEN OUTPUT
26	G	REAR WIPER OUTPUT

Terminal No.	Color of Wire	Signal Name [Specification]
34	B	LUGGAGE ROOM ANTI-
35	W	LUGGAGE ROOM ANTI+
38	L	REAR BUMPER ANTI-
39	BR	REAR BUMPER ANTI+
47	L	IGN RELAY /PDM E/R CONT
52	R	STARTER RELAY CONT
61	R	BACK DOOR OPENER REQUEST SW
64	GR	REQUEST SW BUZZER
65	O	REAR WIPER STOP POSITION
66	Y	BACK DOOR SW
67	LG	BACK DOOR OPENER SW

Connector No.	M119
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS16FW-CS

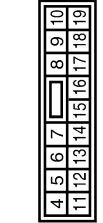

Terminal No.	Color of Wire	Signal Name [Specification]
4	P	INTERIOR ROOM LAMP POWER SUPPLY
5	G	PASSENGER DOOR UNLOCK OUTPUT
7	W	STEP LAMP OUTPUT
8	V	ALL DOOR FUEL LID LOCK OUTPUT
9	G	DRIVER DOOR FUEL LID UNLOCK OUTPUT
10	P	REAR DOOR UNLOCK OUTPUT
11	LG	BAT (G/USE)
13	B	GND
14	O	PUSH-BUTTON IGNITION SW ILL GND
15	L	ACC IND
17	G	TURN SIGNAL RH

Terminal No.	68	Color of Wire	W	Signal Name [Specification]	REAR RH DOOR SW
Terminal No.	69	Color of Wire	R	Signal Name [Specification]	REAR LH DOOR SW

Terminal No.	18	Color of Wire	BR	Signal Name [Specification]	TURN SIGNAL LH
Terminal No.	19	Color of Wire	Y	Signal Name [Specification]	ROOM LAMP TIMER CONTROL

JCMWM3157G




# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

## BCM (BODY CONTROL MODULE) (TYPE A)


Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH



Terminal No.	Color of Wire	Signal Name [Specification]
72	B	ROOM ANT2-
73	W	ROOM ANT2+
74	Y	PASSENGER DOOR ANT-
75	LG	PASSENGER DOOR ANT+
76	V	DRIVER DOOR ANT-
77	P	DRIVER DOOR ANT+
78	R	ROOM ANT1-
79	G	ROOM ANT1+
80	SB	IMMOBI ANTENNA CONTROL
81	O	IMMOBI ANTENNA SIGNAL
82	BR	IGN RELAY (F/B) CONT

83	P	KEYLESS ENTRY RECEIVER SIGNAL
87	R	COMBI SW INPUT 5
88	GR	COMBI SW INPUT 3
89	BR	PUSH SW
90	P	CAN-L
91	L	CAN-H
92	R	KEY SLOT ILL[With Intelligent Key]
93	L	KEY SLOT ILL[Without Intelligent Key]
94	L	ON IND
95	L	ACC RELAY CONT
96	Y	A-T DEVICE POWER SUPPLY
97	O	S/L CONDITION 1
98	L	S/L CONDITION 2
99	V	SHIFT P
100	P	PASSENGER DOOR REQUEST SW
101	W	DRIVER DOOR REQUEST SW
102	Y	BLOWER FAN MOTOR RELAY CONT
103	L	KEYLESS ENTRY RECEIVER POWER SUPPLY
106	Y	S/L POWER SUPPLY
107	O	COMBI SW INPUT 1
108	P	COMBI SW INPUT 4
109	SB	COMBI SW INPUT 2
110	G	HAZARD SW
111	LG	S/L COMM

Connector No.	M123
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FG-NH



Terminal No.	Color of Wire	Signal Name [Specification]
112	R	RAIN SENSOR SERIAL LINK
113	O	OPTICAL SENSOR
116	GR	FUSE CHECK
118	L	STOP LAMP SW
119	W	DR DOOR UNL OCK SENSOR
121	Y	KEY SLOT SW
122	R	ACC F/B
123	G	IGN F/B
124	R	PASSENGER DOOR SW
130	BR	REAR DEFOGGER SW
132	G	POWER WINDOW SW COMM

133	W	PUSH-BUTTON IGNITION SW ILL POWER
137	P	RECEIVER SENSOR GND
138	V	RECEIVER SENSOR POWER SUPPLY
139	O	TIRE PRESS RECEIVER SIGNAL
140	GR	SHIFT N/P
141	O	SECURITY INDICATOR OUTPUT
142	L	COMBI SW OUTPUT 5
143	W	COMBI SW OUTPUT 1
144	P	COMBI SW OUTPUT 2
145	V	COMBI SW OUTPUT 3
146	Y	COMBI SW OUTPUT 4
149	W	TIRE PRESS WARNING CHECK SW
150	SB	DRIVER DOOR SW
151	G	REAR WINDOW DEFOGGER RELAY

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

INL

FROM VIN: JN8AZ18U\*9W100001, JN8AZ18W\*9W200001 (EXCEPT FOR MEXICO),


JCMW3158G1

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >


JN8AZ18U\*9W710001, JN8AZ18W\*9W810001 (FOR MEXICO)

BCM (BODY CONTROL MODULE) (TYPE B)

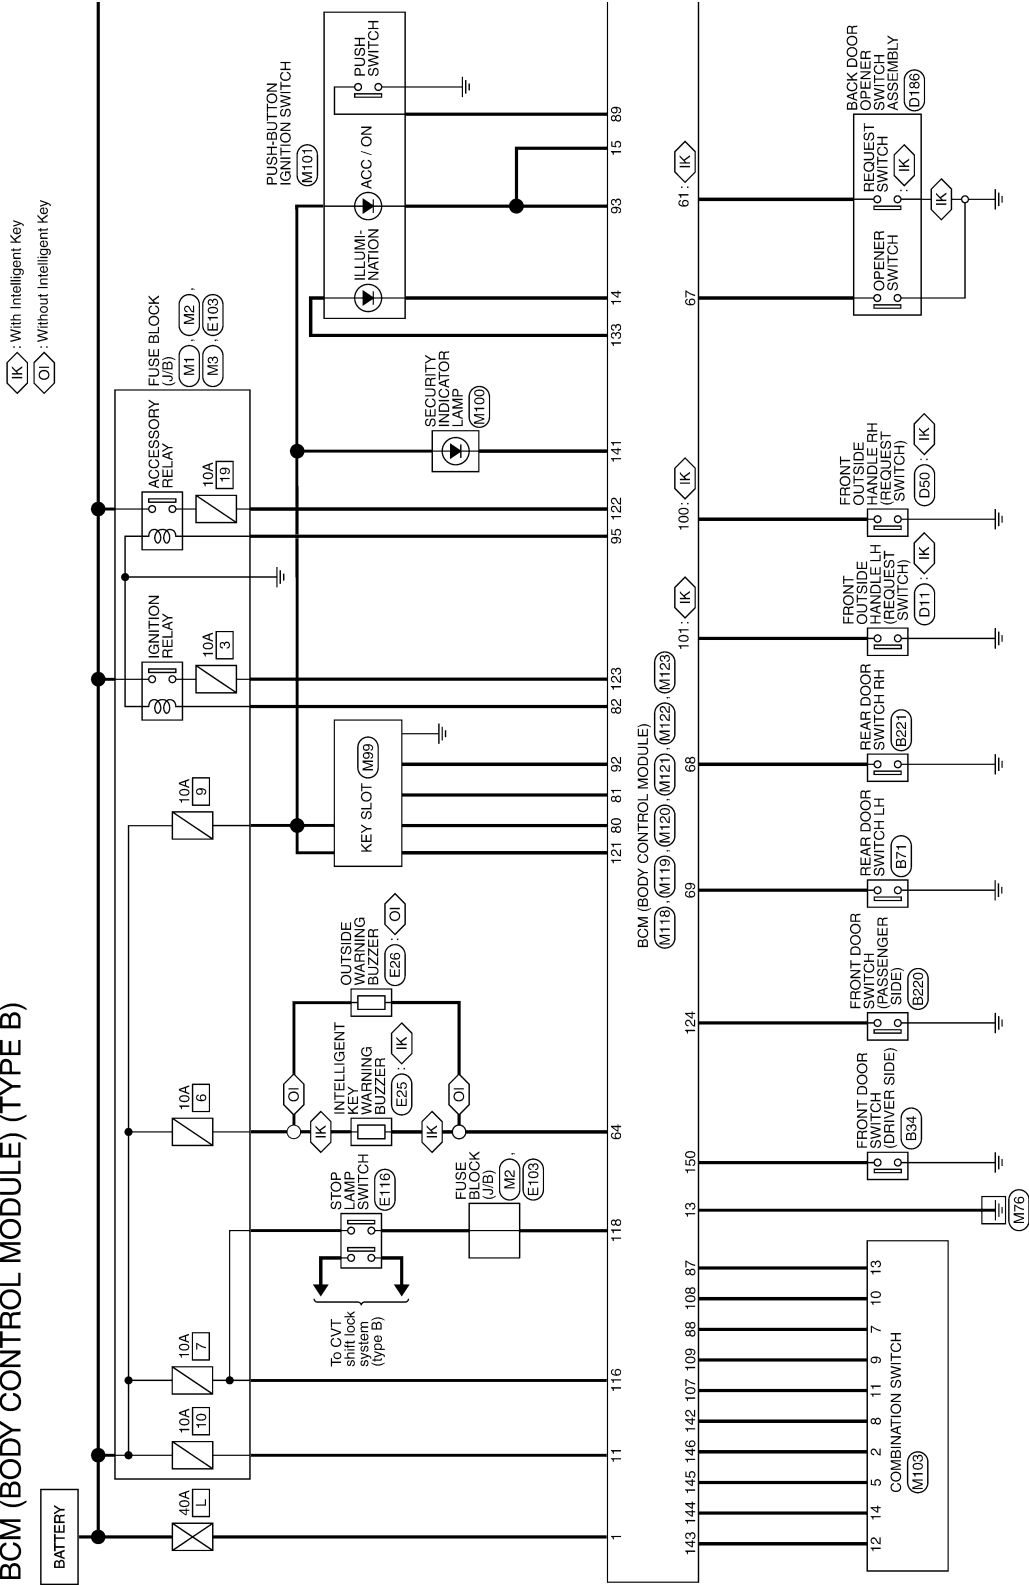

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

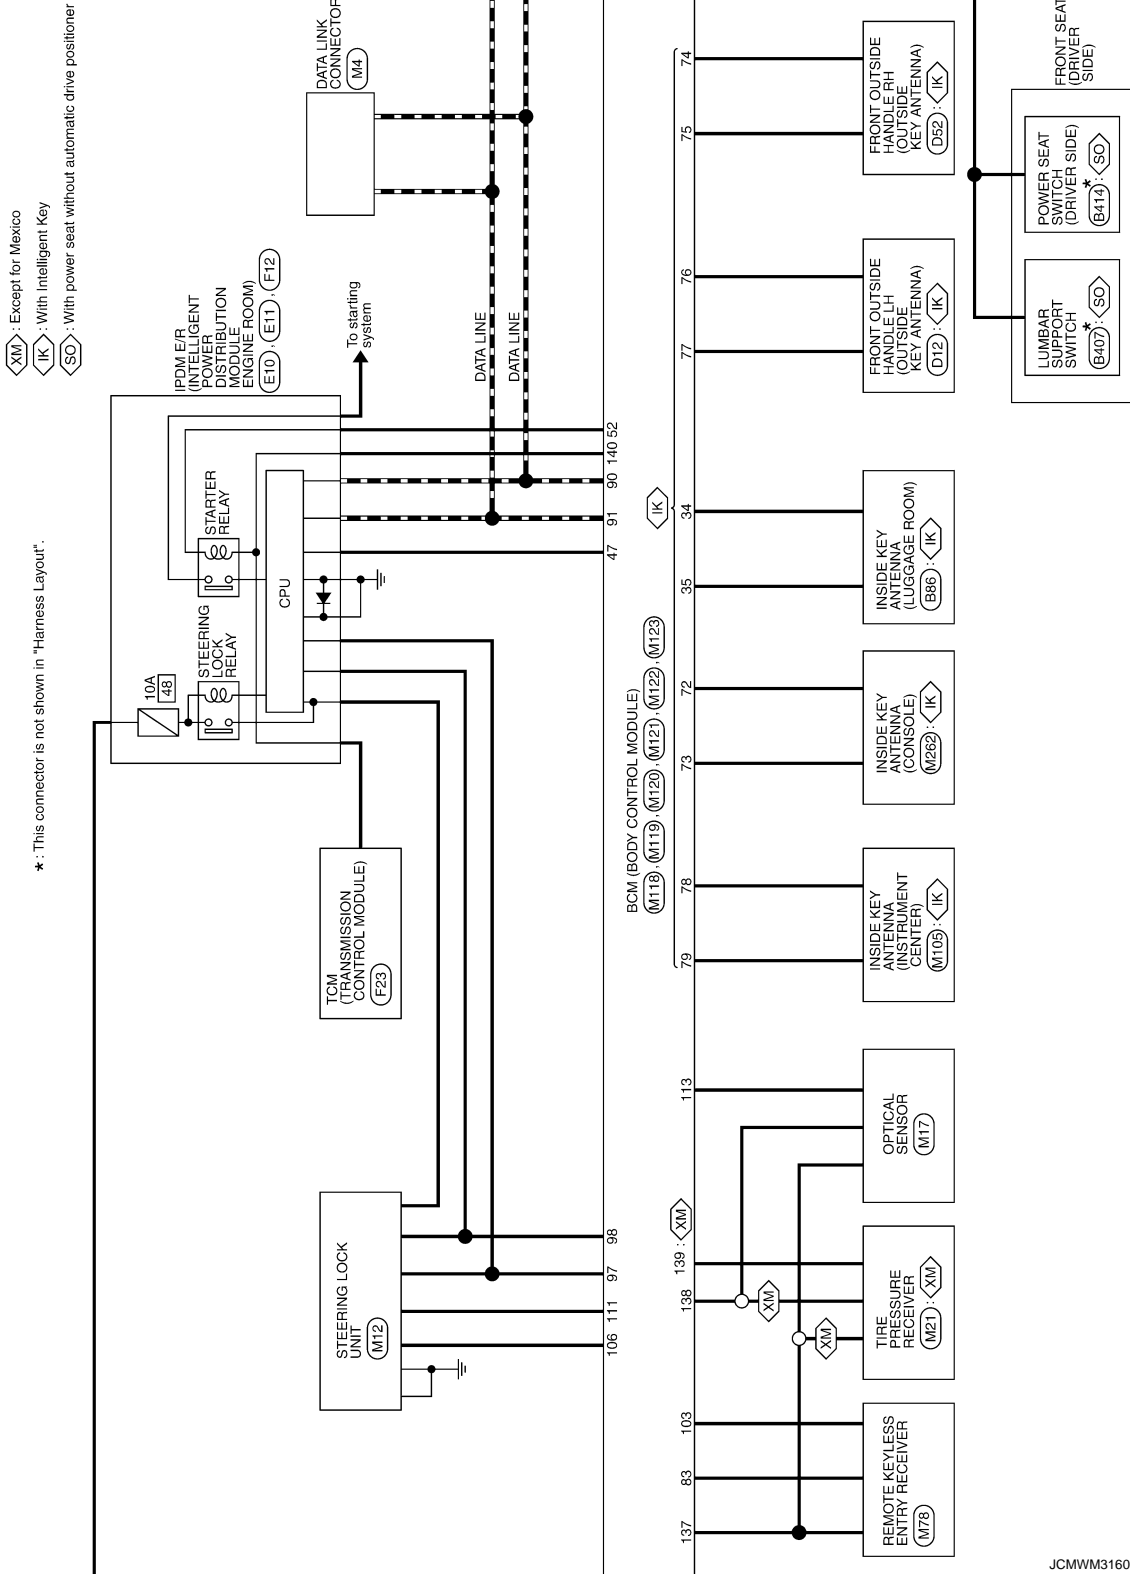

JCMW3160G1



A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

- ◊ IK : With Intelligent Key
- ◊ NV : With navigation system
- ◊ BC : With BOSE system without navigation system
- ◊ FE : With sunroof
- ◊ PM : With automatic drive positioner
- ◊ SO : With power seat without automatic drive positioner
- ◊ AB : With automatic back door


\*: This connector is not shown in "Harness Layout".

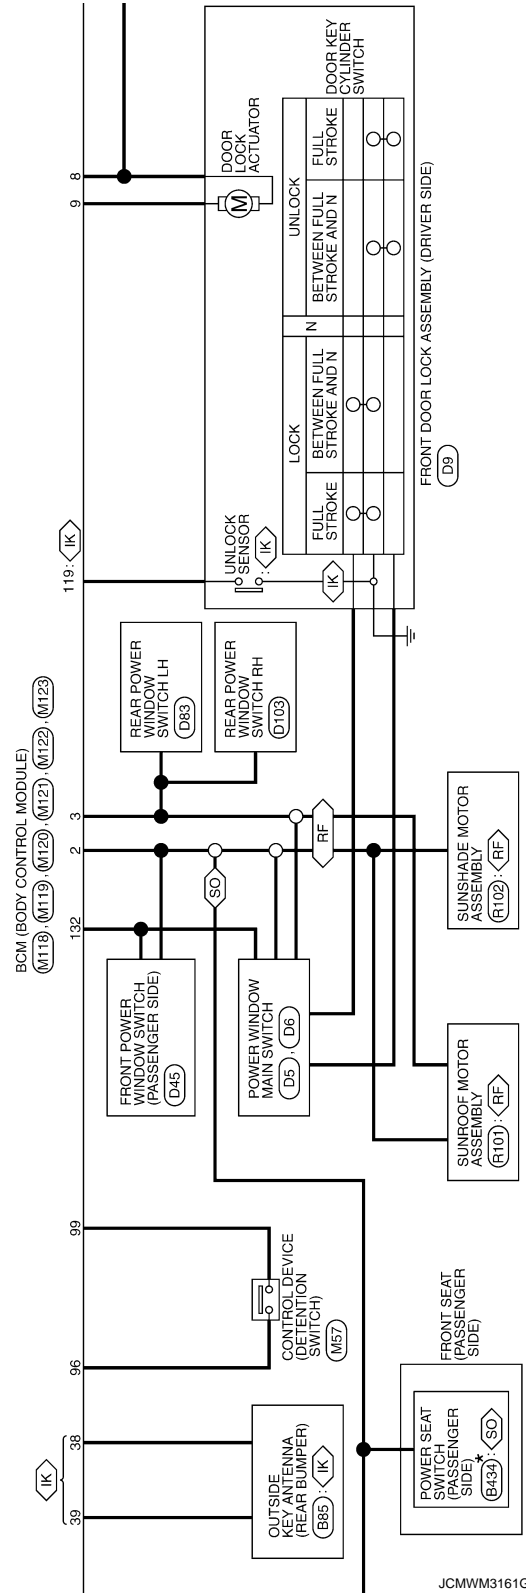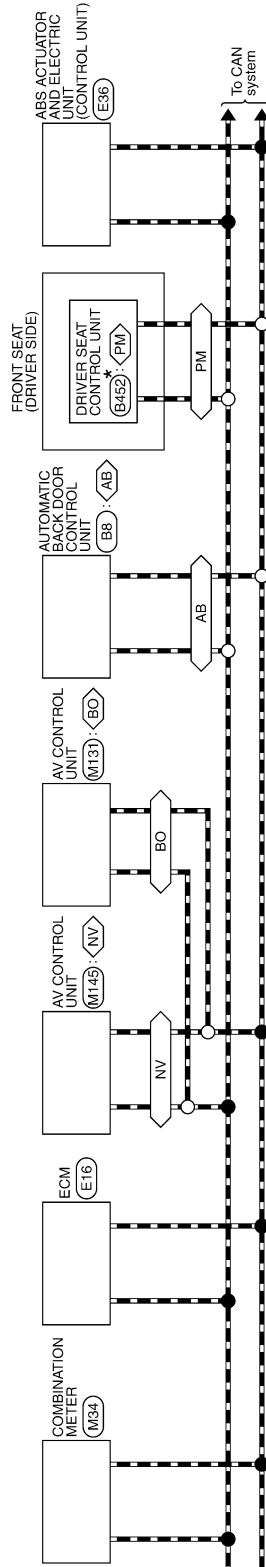

JCMWWM3161G

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

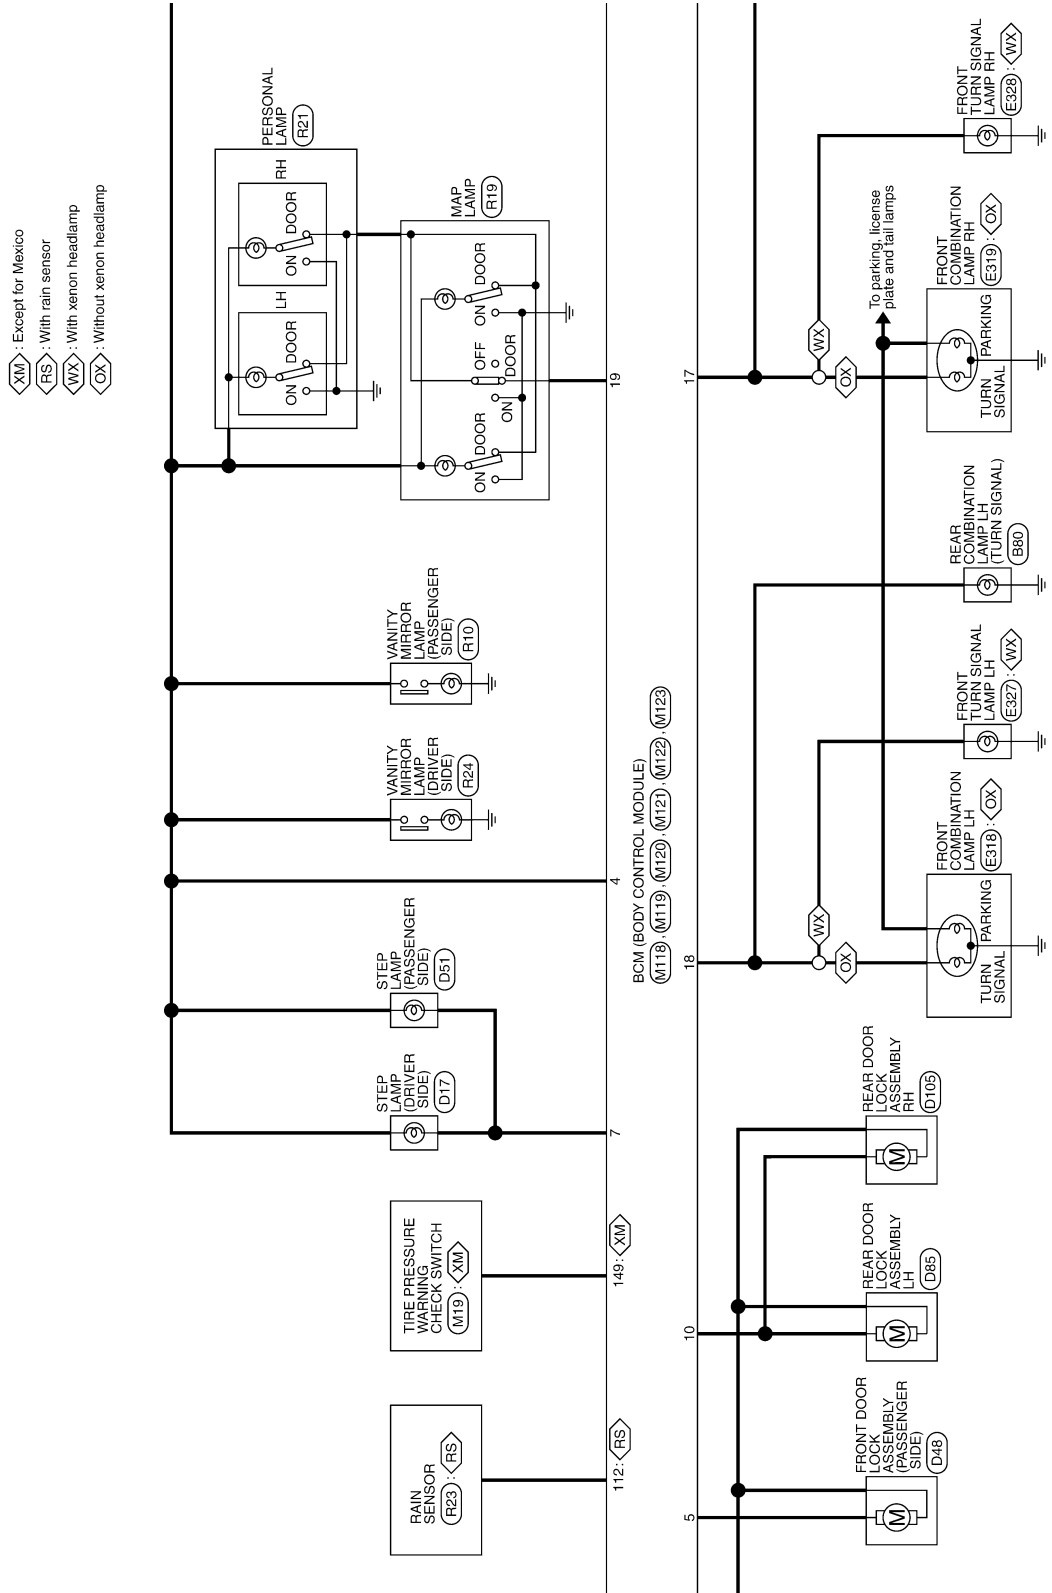


JCMWM3162GI

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

INL

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

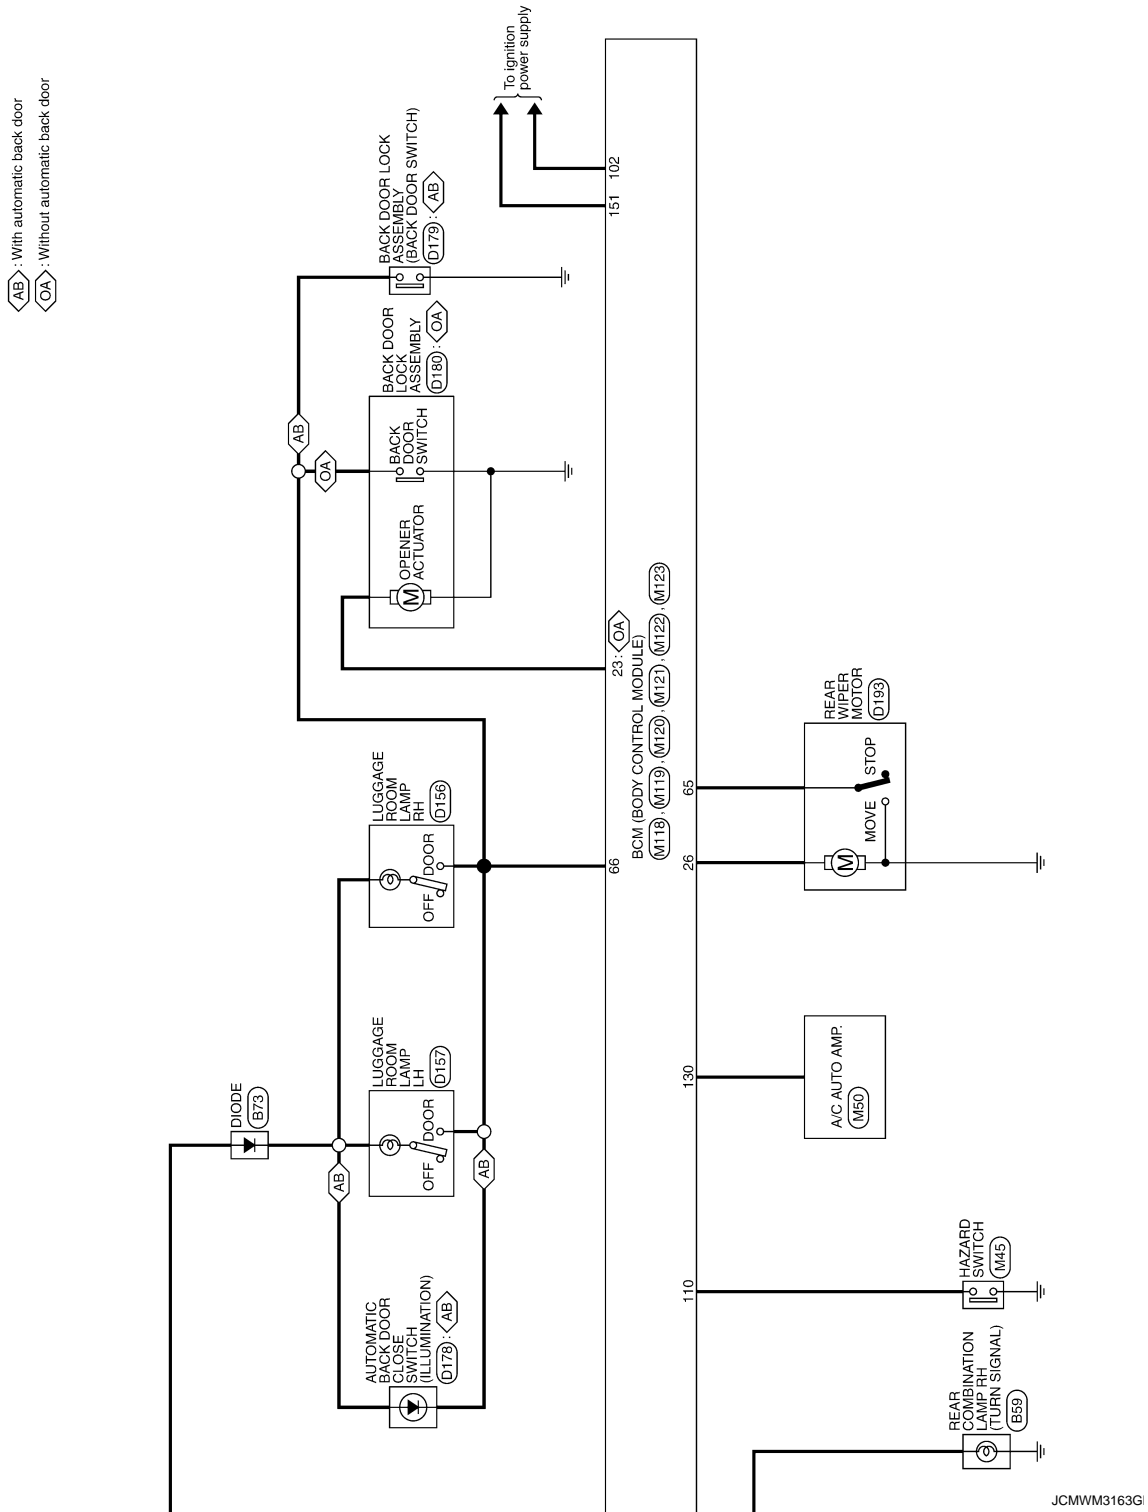


# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

## BCM (BODY CONTROL MODULE) (TYPE B)

Connector No.	M113
Connector Name	COMBINATION SWITCH
Connector Type	TH16FW-NH




Terminal No.	Color of Wire	Signal Name [Specification]
2	Y	OUTPUT 4
3	V	OUTPUT 3
4	GR	INPUT 3
5	L	OUTPUT 5
8	SB	INPUT 2
10	P	INPUT 4
11	O	INPUT 1
12	W	OUTPUT 1
13	R	INPUT 5
14	P	OUTPUT 2

Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	M03FB-LC




Terminal No.	Color of Wire	Signal Name [Specification]
1	W	BAT (F/L)
2	GR	POWER WINDOW POWER SUPPLY (BAT)
3	L	POWER WINDOW POWER SUPPLY (RAP)

Connector No.	M119
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS16FW-CS




Terminal No.	Color of Wire	Signal Name [Specification]
4	P	INTERIOR ROOM LAMP POWER SUPPLY
5	G	PASSENGER DOOR UNLOCK OUTPUT
7	W	STEP LAMP OUTPUT
8	V	ALL DOOR FUEL LID LOCK OUTPUT
9	G	DRIVER DOOR FUEL LID UNLOCK OUTPUT
10	P	REAR DOOR UNLOCK OUTPUT
11	LG	BAT (FUSE)
13	B	GND
14	O	PUSH-BUTTON IGNITION SW ILL GND
15	L	ACC IND
17	G	TURN SIGNAL RH

Connector No.	M120
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS12FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
23	BR	BACK DOOR OPEN OUTPUT
26	G	REAR WIPER OUTPUT

Connector No.	M121
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FGY-NH



Terminal No.	Color of Wire	Signal Name [Specification]
34	B	LUGGAGE ROOM ANTI-
35	W	LUGGAGE ROOM ANTI+
38	L	REAR BUMPER ANTI-
39	BR	REAR BUMPER ANTI+
47	L	IGN RELAY IPDM E/R CONT
52	R	STARTER RELAY CONT
61	R	BACK DOOR OPENER REQUEST SW
64	GR	REQUEST SW BUZZER
65	O	REAR WIPER STOP POSITION
66	Y	BACK DOOR SW
67	LG	BACK DOOR OPENER SW

18	BR	TURN SIGNAL LH
19	Y	ROOM LAMP TIMER CONTROL

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


INL

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

## BCM (BODY CONTROL MODULE) (TYPE B)


Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH



Terminal No.	Color of Wire	Signal Name [Specification]
72	B	ROOM ANT2-
73	W	ROOM ANT2+
74	Y	PASSENGER DOOR ANT-
75	LG	PASSENGER DOOR ANT+
76	V	DRIVER DOOR ANT-
77	P	DRIVER DOOR ANT+
78	R	ROOM ANT1-
79	G	ROOM ANT1+
80	SB	IMMOBI ANTENNA CONTROL
81	O	IMMOBI ANTENNA SIGNAL
82	BR	IGN RELAY (F/B) CONT

83	P	KEYLESS ENTRY RECEIVER SIGNAL
87	R	COMBI SW INPUT 5
88	GR	COMBI SW INPUT 3
89	BR	PUSH SW
90	P	CAN-L
91	L	CAN-H
92	R	KEY SLOT ILL[With Intelligent Key]
93	L	KEY SLOT ILL[Without Intelligent Key]
94	L	ON IND
95	L	ACC RELAY CONT
96	Y	A/T DEVICE POWER SUPPLY
97	O	S/L CONDITION 1
98	L	S/L CONDITION 2
99	V	SHIFT P
100	P	PASSENGER DOOR REQUEST SW
101	W	DRIVER DOOR REQUEST SW
102	Y	BLOWER FAN MOTOR RELAY CONT
103	L	KEYLESS ENTRY RECEIVER POWER SUPPLY
106	Y	S/L POWER SUPPLY
107	O	COMBI SW INPUT 1
108	P	COMBI SW INPUT 4
109	SB	COMBI SW INPUT 2
110	G	HAZARD SW
111	LG	S/L COMM

Connector No.	M123
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FG-NH



Terminal No.	Color of Wire	Signal Name [Specification]
112	R	RAIN SENSOR SERIAL LINK
113	O	OPTICAL SENSOR
116	GR	FUSE CHECK
118	L	STOP LAMP SW
119	W	DR DOOR UNLOCK SENSOR
121	Y	KEY SLOT SW
122	R	ACC F/B
123	G	IGN F/B
124	R	PASSENGER DOOR SW
130	BR	REAR DEFOGGER SW
132	G	POWER WINDOW SW COMM

133	W	PUSH-BUTTON IGNITION SW ILL POWER
137	P	RECEIVER SENSOR GND
138	V	RECEIVER SENSOR POWER SUPPLY
139	O	TIRE PRESS RECEIVER SIGNAL
140	GR	SHIFT N/P
141	O	SECURITY INDICATOR OUTPUT
142	L	COMBI SW OUTPUT 5
143	W	COMBI SW OUTPUT 1
144	P	COMBI SW OUTPUT 2
145	V	COMBI SW OUTPUT 3
146	Y	COMBI SW OUTPUT 4
149	W	TIRE PRESS WARNING CHECK SW
150	SB	DRIVER DOOR SW
151	G	REAR WINDOW DEFOGGER RELAY

## Fail-safe

### FAIL-SAFE CONTROL BY DTC

BCM performs fail-safe control when any DTC are detected.

JCMWM3165G

INFOID:000000003729868



# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

Display contents of CONSULT	Fail-safe	Cancellation	
B2013: ID DISCORD BCM-S/L	Inhibit engine cranking	Erase DTC	A
B2014: CHAIN OF S/L-BCM	Inhibit engine cranking	Erase DTC	
B2190: NATS ANTENNA AMP	Inhibit engine cranking	Erase DTC	B
B2191: DIFFERENCE OF KEY	Inhibit engine cranking	Erase DTC	
B2192: ID DISCORD BCM-ECM	Inhibit engine cranking	Erase DTC	C
B2193: CHAIN OF BCM-ECM	Inhibit engine cranking	Erase DTC	
B2195: ANTI SCANNING	Inhibit engine cranking	Ignition switch ON → OFF	
B2557: VEHICLE SPEED	Inhibit steering lock	When normal vehicle speed signals are received from ABS actuator and electric unit (control unit) for 500 ms	D
B2560: STARTER CONT RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status becomes consistent <ul style="list-style-type: none"> <li>• Starter control relay signal</li> <li>• Starter relay status signal</li> </ul>	E
B2601: SHIFT POSITION	Inhibit steering lock	500 ms after the following signal reception status becomes consistent <ul style="list-style-type: none"> <li>• Selector lever P position switch signal</li> <li>• P range signal (CAN)</li> </ul>	F
B2602: SHIFT POSITION	Inhibit steering lock	5 seconds after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> <li>• Ignition switch is in the ON position</li> <li>• Selector lever P position switch signal: Except P position (battery voltage)</li> <li>• Vehicle speed: 4 km/h (2.5 MPH) or more</li> </ul>	G
B2603: SHIFT POSI STATUS	Inhibit steering lock	500 ms after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> <li>• Ignition switch is in the ON position</li> <li>• Selector lever P position switch signal: Except P position (battery voltage)</li> <li>• Selector lever P/N position signal: Except P and N positions (0 V)</li> </ul>	H
B2604: PNP SW	Inhibit steering lock	500 ms after any of the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> <li>• Status 1 <ul style="list-style-type: none"> <li>- Ignition switch is in the ON position</li> <li>- Selector lever P/N position signal: P and N position (battery voltage)</li> <li>- P range signal or N range signal (CAN): ON</li> </ul> </li> <li>• Status 2 <ul style="list-style-type: none"> <li>- Ignition switch is in the ON position</li> <li>- Selector lever P/N position signal: Except P and N positions (0 V)</li> <li>- P range signal and N range signal (CAN): OFF</li> </ul> </li> </ul>	I
B2605: PNP SW	Inhibit steering lock	500 ms after any of the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> <li>• Ignition switch is in the ON position <ul style="list-style-type: none"> <li>- Power position: IGN</li> <li>- Selector lever P/N position signal: Except P and N positions (0 V)</li> <li>- Interlock/PNP switch signal (CAN): OFF</li> </ul> </li> <li>• Status 2 <ul style="list-style-type: none"> <li>- Ignition switch is in the ON position</li> <li>- Selector lever P/N position signal: P or N position (battery voltage)</li> <li>- PNP switch signal (CAN): ON</li> </ul> </li> </ul>	J
B2606: S/L RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status becomes consistent <ul style="list-style-type: none"> <li>• Steering lock relay signal (Request signal)</li> <li>• Steering lock relay signal (Condition signal)</li> </ul>	K

INL

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

Display contents of CONSULT	Fail-safe	Cancellation
B2607: S/L RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status becomes consistent <ul style="list-style-type: none"> <li>Steering lock relay signal (Request signal)</li> <li>Steering lock relay signal (Condition signal)</li> </ul>
B2608: STARTER RELAY	Inhibit engine cranking	500 ms after the following signal communication status becomes consistent <ul style="list-style-type: none"> <li>Starter motor relay control signal</li> <li>Starter relay status signal (CAN)</li> </ul>
B2609: S/L STATUS	<ul style="list-style-type: none"> <li>Inhibit engine cranking</li> <li>Inhibit steering lock</li> </ul>	When the following steering lock conditions agree <ul style="list-style-type: none"> <li>BCM steering lock control status</li> <li>Steering lock condition No. 1 signal status</li> <li>Steering lock condition No. 2 signal status</li> </ul>
B260A: IGNITION RELAY	Inhibit engine cranking	500 ms after the following conditions are fulfilled <ul style="list-style-type: none"> <li>IGN relay (IPDM E/R) control signal: OFF (Battery voltage)</li> <li>Ignition ON signal (CAN to IPDM E/R): OFF (Request signal)</li> <li>Ignition ON signal (CAN from IPDM E/R): OFF (Condition signal)</li> </ul>
B260F: ENG STATE SIG LOST	Maintains the power supply position attained at the time of DTC detection	When any of the following conditions are fulfilled <ul style="list-style-type: none"> <li>Power position changes to ACC</li> <li>Receives engine status signal (CAN)</li> </ul>
B2612: S/L STATUS	<ul style="list-style-type: none"> <li>Inhibit engine cranking</li> <li>Inhibit steering lock</li> </ul>	When any of the following conditions are fulfilled <ul style="list-style-type: none"> <li>Steering lock unit status signal (CAN) is received normally</li> <li>The BCM steering lock control status matches the steering lock status recognized by the steering lock unit status signal (CAN from IPDM E/R)</li> </ul>
B2617: STARTER RELAY CIRC	Inhibit engine cranking	1 second after the starter motor relay control inside BCM becomes normal
B2618: BCM	Inhibit engine cranking	1 second after the ignition relay (IPDM E/R) control inside BCM becomes normal
B2619: BCM	Inhibit engine cranking	1 second after the steering lock unit power supply output control inside BCM becomes normal
B261E: VEHICLE TYPE	Inhibit engine cranking	BCM initialization
B26E9: S/L STATUS	<ul style="list-style-type: none"> <li>Inhibit engine cranking</li> <li>Inhibit steering lock</li> </ul>	When BCM transmits the LOCK request signal to steering lock unit, and receives LOCK response signal from steering lock unit, the following conditions are fulfilled <ul style="list-style-type: none"> <li>Steering condition No. 1 signal: LOCK (0V)</li> <li>Steering condition No. 2 signal: LOCK (Battery voltage)</li> </ul>

### HIGH FLASHER OPERATION

BCM detects the turn signal lamp circuit status by the current value.

BCM increases the turn signal lamp blinking speed if the bulb or harness open is detected with the turn signal lamp operating.

#### NOTE:

The blinking speed is normal while activating the hazard warning lamp.

### FAIL-SAFE CONTROL BY RAIN SENSOR MALFUNCTION

- BCM judges the rain sensor serial link error by the rain sensor serial link condition and detects the rain sensor malfunction by rain sensor malfunction signal.
- When BCM detects the rain sensor serial link error or the rain sensor malfunction while front wiper AUTO operation, BCM operates a fail-safe control.

#### NOTE:

If rain sensor malfunction is detected when ignition switch is turned OFF ⇒ ON and front wiper switch is INT/AUTO position, BCM operates a fail-safe control.

### REAR WIPER MOTOR PROTECTION

BCM detects the rear wiper stopping position according to the rear wiper stop position signal.

When the rear wiper stop position signal does not change for more than 5 seconds while driving the rear wiper, BCM stops power supply to protect the rear wiper motor.

Condition of cancellation

- More than 1 minute is passed after the rear wiper stop.

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

2. Turn rear wiper switch OFF.
3. Operate the rear wiper switch or rear washer switch.

A

## DTC Inspection Priority Chart

INFOID:000000003729869

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

B

Priority	DTC
1	B2562: LOW VOLTAGE
2	<ul style="list-style-type: none"> <li>• U1000: CAN COMM CIRCUIT</li> <li>• U1010: CONTROL UNIT (CAN)</li> </ul>
3	<ul style="list-style-type: none"> <li>• B2190: NATS ANTENNA AMP</li> <li>• B2191: DIFFERENCE OF KEY</li> <li>• B2192: ID DISCORD BCM-ECM</li> <li>• B2193: CHAIN OF BCM-ECM</li> <li>• B2195: ANTI SCANNING</li> </ul>
4	<ul style="list-style-type: none"> <li>• B2013: ID DISCORD BCM-S/L</li> <li>• B2014: CHAIN OF S/L-BCM</li> <li>• B2553: IGNITION RELAY</li> <li>• B2555: STOP LAMP</li> <li>• B2556: PUSH-BTN IGN SW</li> <li>• B2557: VEHICLE SPEED</li> <li>• B2560: STARTER CONT RELAY</li> <li>• B2601: SHIFT POSITION</li> <li>• B2602: SHIFT POSITION</li> <li>• B2603: SHIFT POSI STATUS</li> <li>• B2604: PNP SW</li> <li>• B2605: PNP SW</li> <li>• B2606: S/L RELAY</li> <li>• B2607: S/L RELAY</li> <li>• B2608: STARTER RELAY</li> <li>• B2609: S/L STATUS</li> <li>• B260A: IGNITION RELAY</li> <li>• B260B: STEERING LOCK UNIT</li> <li>• B260C: STEERING LOCK UNIT</li> <li>• B260D: STEERING LOCK UNIT</li> <li>• B260F: ENG STATE SIG LOST</li> <li>• B2612: S/L STATUS</li> <li>• B2614: ACC RELAY CIRC</li> <li>• B2615: BLOWER RELAY CIRC</li> <li>• B2616: IGN RELAY CIRC</li> <li>• B2617: STARTER RELAY CIRC</li> <li>• B2618: BCM</li> <li>• B2619: BCM</li> <li>• B261A: PUSH-BTN IGN SW</li> <li>• B261E: VEHICLE TYPE</li> <li>• B26E9: S/L STATUS</li> <li>• B26EA: KEY REGISTRATION</li> <li>• C1729: VHCL SPEED SIG ERR</li> <li>• U0415: VEHICLE SPEED SIG</li> </ul>

C

D

E

F

G

H

I

J

K

INL

M

N

O

P

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

Priority	DTC
5	<ul style="list-style-type: none"> <li>• C1704: LOW PRESSURE FL</li> <li>• C1705: LOW PRESSURE FR</li> <li>• C1706: LOW PRESSURE RR</li> <li>• C1707: LOW PRESSURE RL</li> <li>• C1708: [NO DATA] FL</li> <li>• C1709: [NO DATA] FR</li> <li>• C1710: [NO DATA] RR</li> <li>• C1711: [NO DATA] RL</li> <li>• C1712: [CHECKSUM ERR] FL</li> <li>• C1713: [CHECKSUM ERR] FR</li> <li>• C1714: [CHECKSUM ERR] RR</li> <li>• C1715: [CHECKSUM ERR] RL</li> <li>• C1716: [PRESSDATA ERR] FL</li> <li>• C1717: [PRESSDATA ERR] FR</li> <li>• C1718: [PRESSDATA ERR] RR</li> <li>• C1719: [PRESSDATA ERR] RL</li> <li>• C1720: [CODE ERR] FL</li> <li>• C1721: [CODE ERR] FR</li> <li>• C1722: [CODE ERR] RR</li> <li>• C1723: [CODE ERR] RL</li> <li>• C1724: [BATT VOLT LOW] FL</li> <li>• C1725: [BATT VOLT LOW] FR</li> <li>• C1726: [BATT VOLT LOW] RR</li> <li>• C1727: [BATT VOLT LOW] RL</li> <li>• C1734: CONTROL UNIT</li> </ul>
6	<ul style="list-style-type: none"> <li>• B2621: INSIDE ANTENNA</li> <li>• B2622: INSIDE ANTENNA</li> <li>• B2623: INSIDE ANTENNA</li> </ul>

## DTC Index

INFOID:000000003729870

### NOTE:

The details of time display are as follows.

- CRNT: A malfunction is detected now.
- PAST: A malfunction was detected in the past.

IGN counter is displayed on Freeze Frame Data. For details of Freeze Frame Data, refer to [INL-13. "COMMON ITEM : CONSULT-III Function \(BCM - COMMON ITEM\)".](#)

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle Condition	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
No DTC is detected. further testing may be required.	—	—	—	—	—
U1000: CAN COMM CIRCUIT	—	—	—	—	<a href="#">BCS-40</a>
U1010: CONTROL UNIT (CAN)	—	—	—	—	<a href="#">BCS-41</a>
U0415: VEHICLE SPEED SIG	—	—	—	—	<a href="#">BCS-42</a>
B2013: ID DISCORD BCM-S/L	×	×	—	—	<a href="#">SEC-55</a>
B2014: CHAIN OF S/L-BCM	×	×	—	—	<a href="#">SEC-56</a>
B2190: NATS ANTENNA AMP	×	—	—	—	<a href="#">SEC-47</a>
B2191: DIFFERENCE OF KEY	×	—	—	—	<a href="#">SEC-50</a>
B2192: ID DISCORD BCM-ECM	×	—	—	—	<a href="#">SEC-51</a>
B2193: CHAIN OF BCM-ECM	×	—	—	—	<a href="#">SEC-53</a>
B2195: ANTI SCANNING	×	—	—	—	<a href="#">SEC-54</a>
B2553: IGNITION RELAY	—	×	—	—	<a href="#">PCS-49</a>

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle Condition	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page	
B2555: STOP LAMP	—	×	—	—	<a href="#">SEC-59</a>	A
B2556: PUSH-BTN IGN SW	—	×	×	—	<a href="#">SEC-61</a>	B
B2557: VEHICLE SPEED	×	×	×	—	<a href="#">SEC-63</a>	C
B2560: STARTER CONT RELAY	×	×	×	—	<a href="#">SEC-64</a>	
B2562: LOW VOLTAGE	—	×	—	—	<a href="#">BCS-43</a>	D
B2601: SHIFT POSITION	×	×	×	—	<a href="#">SEC-65</a>	
B2602: SHIFT POSITION	×	×	×	—	<a href="#">SEC-68</a>	E
B2603: SHIFT POSI STATUS	×	×	×	—	<a href="#">SEC-70</a>	
B2604: PNP SW	×	×	×	—	<a href="#">SEC-73</a>	F
B2605: PNP SW	×	×	×	—	<a href="#">SEC-75</a>	
B2606: S/L RELAY	×	×	×	—	<a href="#">SEC-77</a>	G
B2607: S/L RELAY	×	×	×	—	<a href="#">SEC-78</a>	
B2608: STARTER RELAY	×	×	×	—	<a href="#">SEC-80</a>	H
B2609: S/L STATUS	×	×	×	—	<a href="#">SEC-82</a>	
B260A: IGNITION RELAY	×	×	×	—	<a href="#">PCS-51</a>	I
B260B: STEERING LOCK UNIT	—	×	×	—	<a href="#">SEC-86</a>	
B260C: STEERING LOCK UNIT	—	×	×	—	<a href="#">SEC-87</a>	J
B260D: STEERING LOCK UNIT	—	×	×	—	<a href="#">SEC-88</a>	
B260F: ENG STATE SIG LOST	×	×	×	—	<a href="#">SEC-89</a>	K
B2612: S/L STATUS	×	×	×	—	<a href="#">SEC-92</a>	
B2614: ACC RELAY CIRC	—	×	×	—	<a href="#">PCS-53</a>	
B2615: BLOWER RELAY CIRC	—	×	×	—	<a href="#">PCS-56</a>	
B2616: IGN RELAY CIRC	—	×	×	—	<a href="#">PCS-59</a>	
B2617: STARTER RELAY CIRC	×	×	×	—	<a href="#">SEC-96</a>	
B2618: BCM	×	×	×	—	<a href="#">PCS-62</a>	<b>INL</b>
B2619: BCM	×	×	×	—	<a href="#">SEC-98</a>	
B261A: PUSH-BTN IGN SW	—	×	×	—	<a href="#">SEC-99</a>	
B261E: VEHICLE TYPE	×	×	× (Turn ON for 15 seconds)	—	<a href="#">SEC-102</a>	M
B2621: INSIDE ANTENNA	—	×	—	—	<a href="#">DLK-95</a>	
B2622: INSIDE ANTENNA	—	×	—	—	<a href="#">DLK-97</a>	N
B2623: INSIDE ANTENNA	—	×	—	—	<a href="#">DLK-99</a>	
B26E9: S/L STATUS	×	×	× (Turn ON for 15 seconds)	—	<a href="#">SEC-90</a>	O
B26EA: KEY REGISTRATION	—	×	× (Turn ON for 15 seconds)	—	<a href="#">SEC-91</a>	
C1704: LOW PRESSURE FL	—	—	—	×	<a href="#">WT-16</a>	P
C1705: LOW PRESSURE FR	—	—	—	×		
C1706: LOW PRESSURE RR	—	—	—	×		
C1707: LOW PRESSURE RL	—	—	—	×		

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS >

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle Condition	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
C1708: [NO DATA] FL	—	—	—	×	<a href="#">WT-18</a>
C1709: [NO DATA] FR	—	—	—	×	
C1710: [NO DATA] RR	—	—	—	×	
C1711: [NO DATA] RL	—	—	—	×	
C1712: [CHECKSUM ERR] FL	—	—	—	×	<a href="#">WT-21</a>
C1713: [CHECKSUM ERR] FR	—	—	—	×	
C1714: [CHECKSUM ERR] RR	—	—	—	×	
C1715: [CHECKSUM ERR] RL	—	—	—	×	
C1716: [PRESSDATA ERR] FL	—	—	—	×	<a href="#">WT-24</a>
C1717: [PRESSDATA ERR] FR	—	—	—	×	
C1718: [PRESSDATA ERR] RR	—	—	—	×	
C1719: [PRESSDATA ERR] RL	—	—	—	×	
C1720: [CODE ERR] FL	—	—	—	×	<a href="#">WT-26</a>
C1721: [CODE ERR] FR	—	—	—	×	
C1722: [CODE ERR] RR	—	—	—	×	
C1723: [CODE ERR] RL	—	—	—	×	
C1724: [BATT VOLT LOW] FL	—	—	—	×	<a href="#">WT-29</a>
C1725: [BATT VOLT LOW] FR	—	—	—	×	
C1726: [BATT VOLT LOW] RR	—	—	—	×	
C1727: [BATT VOLT LOW] RL	—	—	—	×	
C1729: VHCL SPEED SIG ERR	—	—	—	×	<a href="#">WT-32</a>
C1734: CONTROL UNIT	—	—	—	×	<a href="#">WT-33</a>

# COMBINATION METER

< ECU DIAGNOSIS >

## COMBINATION METER

Reference Value

INFOID:000000003728856

VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition		Value/Status
SPEED METER [km/h]	Ignition switch ON	While driving	Equivalent to speedometer reading <b>NOTE:</b> 655.35 is displayed when the malfunction signal is received
SPEED OUTPUT [km/h]	Ignition switch ON	While driving	Equivalent to speedometer reading <b>NOTE:</b> 655.35 is displayed when the malfunction signal is received
ODO OUTPUT [km/h or mph]	Ignition switch ON	—	Equivalent to odometer reading in combination meter
TACHO METER [rpm]	Ignition switch ON	While driving	Equivalent to tachometer reading <b>NOTE:</b> 8191.875 is displayed when the malfunction signal is received
FUEL METER [L]	Ignition switch ON	—	Values according to fuel level
W TEMP METER [°C]	Ignition switch ON	—	Values according to engine coolant temperature <b>NOTE:</b> 215 is displayed when the malfunction signal is input
ABS W/L	Ignition switch ON	ABS warning lamp ON	On
		ABS warning lamp OFF	Off
VDC/TCS IND	Ignition switch ON	VDC OFF indicator lamp ON	On
		VDC OFF indicator lamp OFF	Off
SLIP IND	Ignition switch ON	SLIP Indicator lamp ON	On
		SLIP indicator lamp OFF	Off
BRAKE W/L	Ignition switch ON	Brake warning lamp ON	On
		Brake warning lamp OFF	Off
DOOR W/L	Ignition switch ON	Door warning lamp ON	On
		Door warning lamp OFF	Off
HI-BEAM IND	Ignition switch ON	High-beam indicator lamp ON	On
		High-beam indicator lamp OFF	Off
TURN IND	Ignition switch ON	Turn signal indicator lamp ON	On
		Turn signal indicator lamp OFF	Off
LIGHT IND	Ignition switch ON	Light indicator lamp ON	On
		Light indicator lamp OFF	Off
OIL W/L	Ignition switch ON	Oil pressure warning lamp ON	On
		Oil pressure warning lamp OFF	Off
MIL	Ignition switch ON	Malfunction indicator lamp ON	On
		Malfunction indicator lamp OFF	Off
CRUISE IND	Ignition switch ON	CRUISE indicator lamp ON	On
		CRUISE indicator lamp OFF	Off

## COMBINATION METER



### < ECU DIAGNOSIS >

Monitor Item	Condition		Value/Status
O/D OFF IND	Ignition switch ON	O/D OFF indicator lamp ON	On
		O/D OFF indicator lamp OFF	Off
4WD W/L	Ignition switch ON	AWD warning lamp ON	On
		AWD warning lamp OFF	Off
4WD LOCK IND	Ignition switch ON	AWD LOCK indicator lamp ON	On
		AWD LOCK indicator lamp OFF	Off
FUEL W/L	Ignition switch ON	Low-fuel warning lamp ON	On
		Low-fuel warning lamp OFF	Off
WASHER W/L	Ignition switch ON	Washer warning displayed	On
		Washer warning not displayed	Off
AIR PRES W/L	Ignition switch ON	Low tire pressure lamp ON	On
		Low tire pressure lamp OFF	Off
KEY G/Y W/L	Ignition switch ON	Key warning lamp (green/yellow) ON	On
		Key warning lamp (green/yellow) OFF	Off
LCD	Ignition switch ON	Engine start information display	B&P I
	Ignition switch ACC	Engine start information display	B&P N
	Ignition switch LOCK	Key ID warning display	ID NG
	Ignition switch LOCK	Steering lock information display	ROTAT
	Ignition switch LOCK	P position warning display	SFT P
	Ignition switch LOCK	Intelligent Key insert information display	INSRT
	Ignition switch LOCK	Intelligent Key low battery warning display	BATT
	Ignition switch ON	Take away warning display	NO KY
	Ignition switch LOCK	Key warning display	OUTKY
SHIFT IND	Ignition switch ON	Shift position indicator P display	P
		Shift position indicator R display	R
		Shift position indicator N display	N
		Shift position indicator D display	D
		Shift position indicator L display	L
O/D OFF SW	Ignition switch ON	Overdrive control switch ON	On
		Overdrive control switch OFF	Off
M RANGE SW	Ignition switch ON	<b>NOTE:</b> This item is displayed, but cannot be monitored.	Off
NM RANGE SW	Ignition switch ON	<b>NOTE:</b> This item is displayed, but cannot be monitored.	Off



# COMBINATION METER


## < ECU DIAGNOSIS >

Monitor Item	Condition		Value/Status
AT SFT UP SW	Ignition switch ON	<b>NOTE:</b> This item is displayed, but cannot be monitored.	Off
AT SFT DWN SW	Ignition switch ON	<b>NOTE:</b> This item is displayed, but cannot be monitored.	Off
ST SFT UP SW	Ignition switch ON	<b>NOTE:</b> This item is displayed, but cannot be monitored.	Off
ST SFT DWN SW	Ignition switch ON	<b>NOTE:</b> This item is displayed, but cannot be monitored.	Off
PKB SW	Ignition switch ON	Parking brake switch ON	On
		Parking brake switch OFF	Off
BUCKLE SW	Ignition switch ON	Seat belt (driver side) not fastened	On
		Seat belt (driver side) fastened	Off
BRAKE OIL SW	Ignition switch ON	Brake fluid level switch ON	On
		Brake fluid level switch OFF	Off
DISTANCE [km]	Ignition switch ON	—	Possible driving distance calculated by combination meter
A/C AMP CONN	Ignition switch ON	Other than the following	On
		Receives ambient sensor power signal	Off
ENTER SW	Ignition switch ON	When  is pressed	On
		Other than the above	Off
SELECT SW	Ignition switch ON	When  is pressed	On
		Other than the above	Off
OUTSIDE TEMP [°C] or [°F]	Ignition switch ON	—	Equivalent to ambient temperature <b>NOTE:</b> This may not match the indicated value on the information display.
FUEL LOW SIG	Ignition switch ON	Low fuel warning displayed	On
		Low fuel warning not displayed	Off
BUZZER	Ignition switch ON	Buzzer ON	On
		Buzzer OFF	Off

### NOTE:

Some items are not available according to vehicle specification.





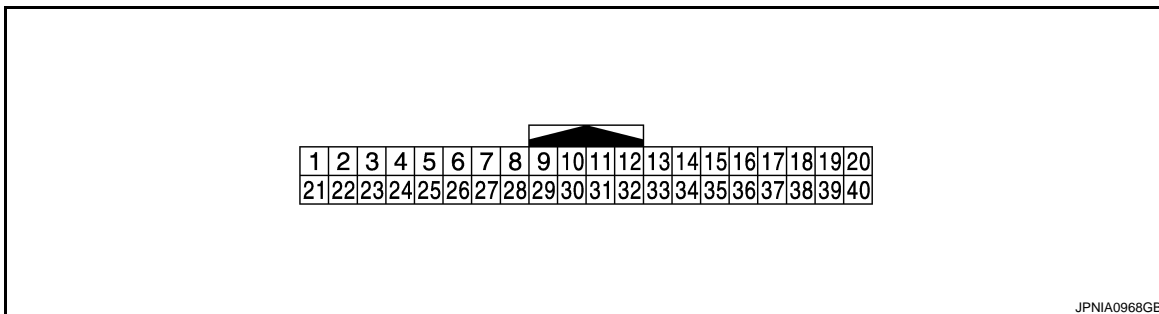

## TERMINAL LAYOUT



## PHYSICAL VALUES
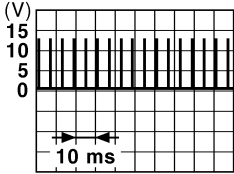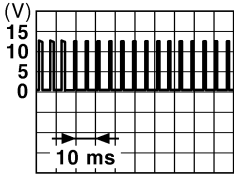
# COMBINATION METER

## < ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
1 (Y)	Ground	Battery power supply	Input	Ignition switch OFF	—	Battery voltage
2 (O)	Ground	IGN signal	Input	Ignition switch ON	—	Battery voltage
3 (B)	Ground	Ground	—	Ignition switch ON	—	0 V
5 (SB)	Ground	Illumination control signal	Output	Ignition switch ON	<ul style="list-style-type: none"> <li>• Lighting switch 1ST</li> <li>• When meter illumination is maximum</li> </ul>	 <p style="text-align: right; font-size: small;">JPNIA0828GB</p>
					<ul style="list-style-type: none"> <li>• Lighting switch 1ST</li> <li>• When meter illumination is minimum</li> </ul>	 <p style="text-align: right; font-size: small;">JPNIA0827GB</p>
8 (SB)	10 (O)	Trip reset signal	Input	Ignition switch ON	When trip reset switch is pressed.	0 V
					Other than the above	5 V
10 (O)	Ground	Meter control switch ground	—	Ignition switch ON	—	0 V
11 (L)	10 (O)	Enter switch signal	Input	Ignition switch ON	When  is pressed.	0 V
					Other than the above	5 V
12 (R)	10 (O)	Select switch signal	Input	Ignition switch ON	When  is pressed.	0 V
					Other than the above	5 V
13 (Y*1 or V*2)	10 (O)	Illumination control switch signal (+)	Input	Ignition switch ON	When  is pressed.	0 V
					Other than the above	5 V
14 (GR)	10 (O)	Illumination control switch signal (-)	Input	Ignition switch ON	When  is pressed.	0 V
					Other than the above	5 V
15 (BR)	Ground	Air bag signal	Input	Ignition switch ON	Air bag warning lamp ON	4 V
					Air bag warning lamp OFF	0 V

# COMBINATION METER

## < ECU DIAGNOSIS >



Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
18 (L)	Ground	Ambient sensor signal	Input	Ignition switch ON	Changes depending to am- bient temperature.	<p style="text-align: right; font-size: small;">JSNIA0014GB</p>
19 (P)	Ground	Ambient sensor power	Input	Ignition switch ON	—	5 V
20 (Y)	Ground	Ambient sensor ground	Input	Ignition switch ON	—	0 V
21 (L)	—	CAN-H	—	—	—	—
22 (P)	—	CAN-L	—	—	—	—
23 (B)	Ground	Ground	—	Ignition switch ON	—	0 V
24 (W)	Ground	Fuel level sensor signal ground	—	Ignition switch ON	—	0 V
25 (BR)	Ground	Alternator signal	Input	Ignition switch ON	Charge warning lamp ON	2 V
					Charge warning lamp OFF	12 V
26 (G)	Ground	Parking brake switch signal	Input	Ignition switch ON	Parking brake ON	0 V
					Parking brake OFF	5 V
27 (V)	Ground	Brake fluid level switch sig- nal	Input	Ignition switch ON	Brake fluid level is normal	12 V
					Brake fluid level is less than LOW level	0 V
29 (R)	Ground	Washer level switch signal	Input	Ignition switch ON	Washer level switch ON	0 V
					Washer level switch OFF	5 V
30 (P)	Ground	Vehicle speed signal output (2-pulse)	Output	Ignition switch ON	Speedometer operated [When vehicle speed is ap- prox. 40 km/h (25 MPH)]	<p><b>NOTE:</b> The maximum voltage varies de- pending on the specification (destination unit).</p> <p style="text-align: right; font-size: small;">JSNIA0015GB</p>

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

INL

# COMBINATION METER

## < ECU DIAGNOSIS >

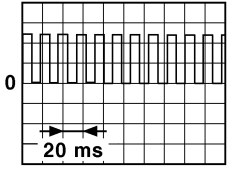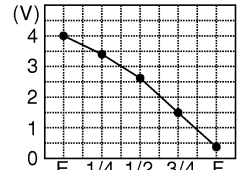Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
31 (V)	Ground	Vehicle speed signal output (8-pulse)	Output	Ignition switch ON  Speedometer operated [When vehicle speed is ap- prox. 40 km/h (25 MPH)]	<b>NOTE:</b> The maximum voltage varies de- pending on the specification (destination unit).   <small>JSNIA0012GB</small>
32 (LG)	Ground	Overdrive control switch signal	Input	Ignition switch ON  Overdrive control switch pressed.	0 V
				Overdrive control switch not pressed.	12 V
34 (G)	Ground	Fuel level sensor signal	Input	Ignition switch ON  —	 <small>JPNIA0740ZZ</small>
35 (SB)	Ground	Seat belt buckle switch sig- nal (driver side)	Input	Ignition switch ON  When driver seat belt is fas- tened.	12 V
				When driver seat belt is un- fastened.	0 V
36 (R)	Ground	Seat belt buckle switch sig- nal (passenger side)	Input	Ignition switch ON  • When getting in the pas- senger seat. • When passenger seat belt is fastened.	12 V
				• When getting in the pas- senger seat. • When passenger seat belt is unfastened.	0 V

\*1: Without automatic drive positioner

\*2: With automatic drive positioner

## Wiring Diagram - METER -

INFOID:000000003728857


### NOTE:

- Type A Up to VIN: JN8AZ18U\*9W100000, JN8AZ18W\*9W200000 (EXCEPT FOR MEXICO), JN8AZ18U\*9W710000, JN8AZ18W\*9W810000 (FOR MEXICO)

# COMBINATION METER

< ECU DIAGNOSIS >

- Type B: From VIN: JN8AZ18U\*9W10001, JN8AZ18W\*9W20001 (EXCEPT FOR MEXICO), JN8AZ18U\*9W710001, JN8AZ18W\*9W810001 (FOR MEXICO)

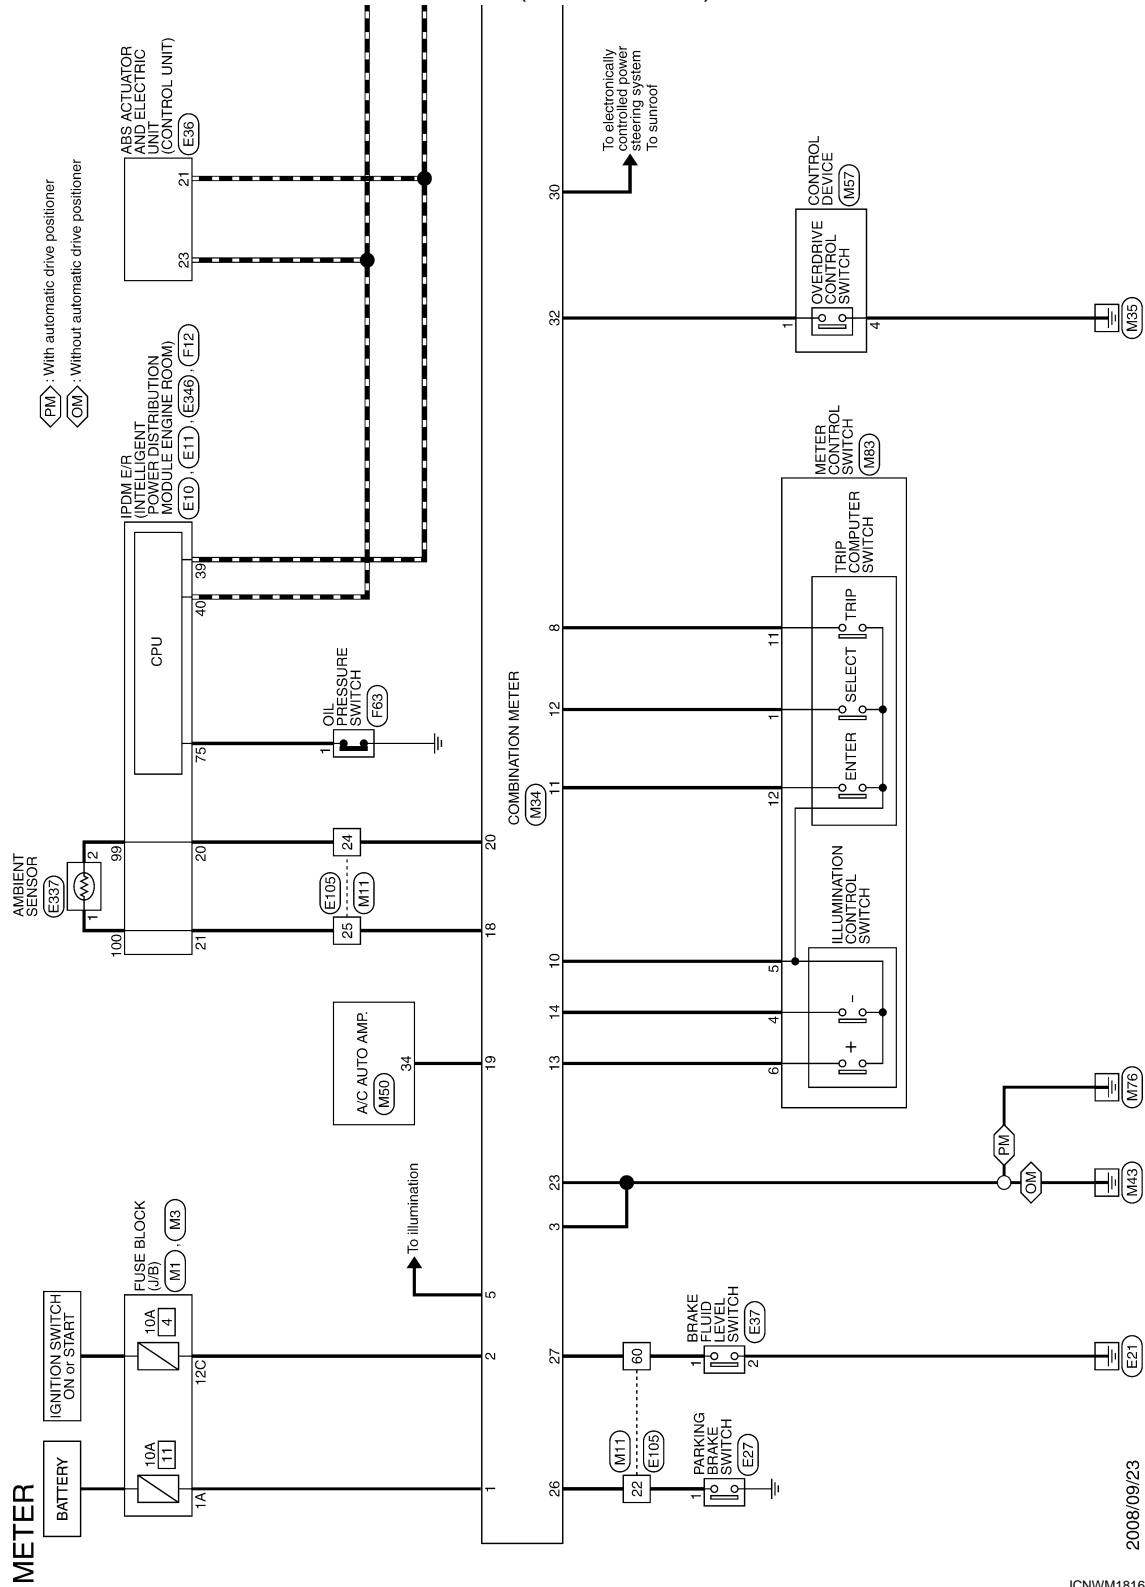


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

INL

# COMBINATION METER

< ECU DIAGNOSIS >

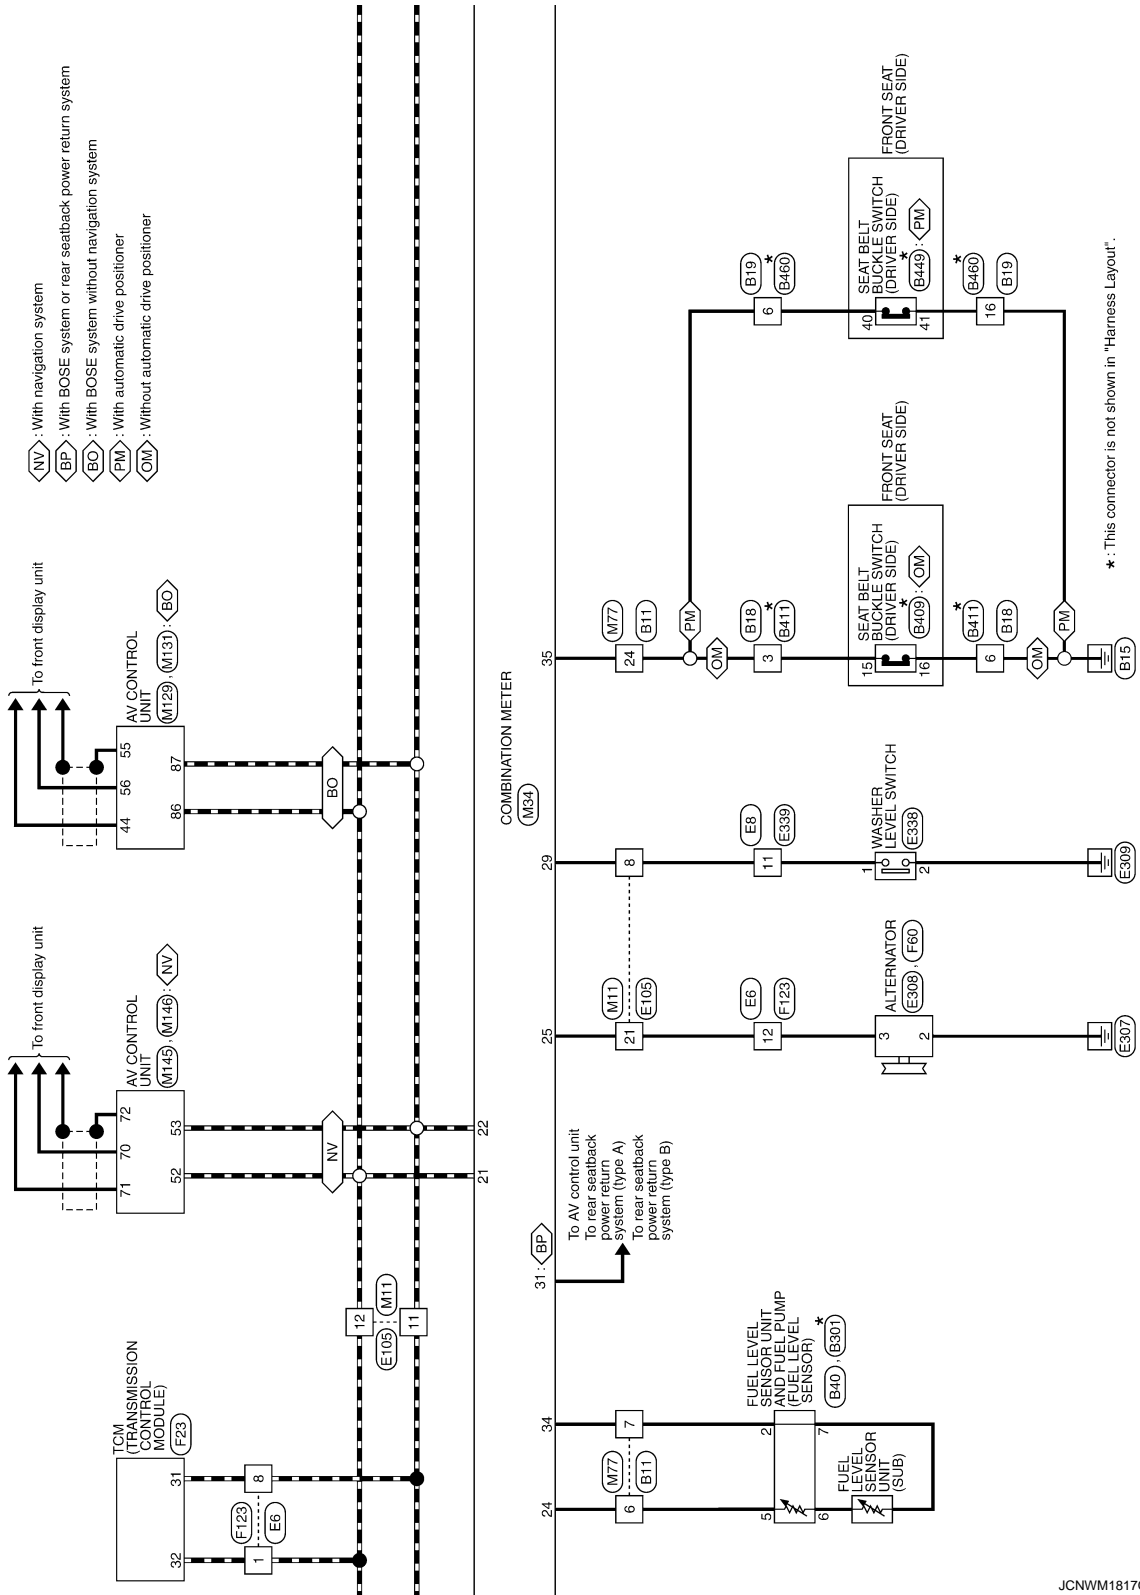


JCNWM1817GI

# COMBINATION METER

< ECU DIAGNOSIS >

◊AW◊ : AWD models  
 ◊AB◊ : With automatic back door  
 ◊OA◊ : Without automatic back door

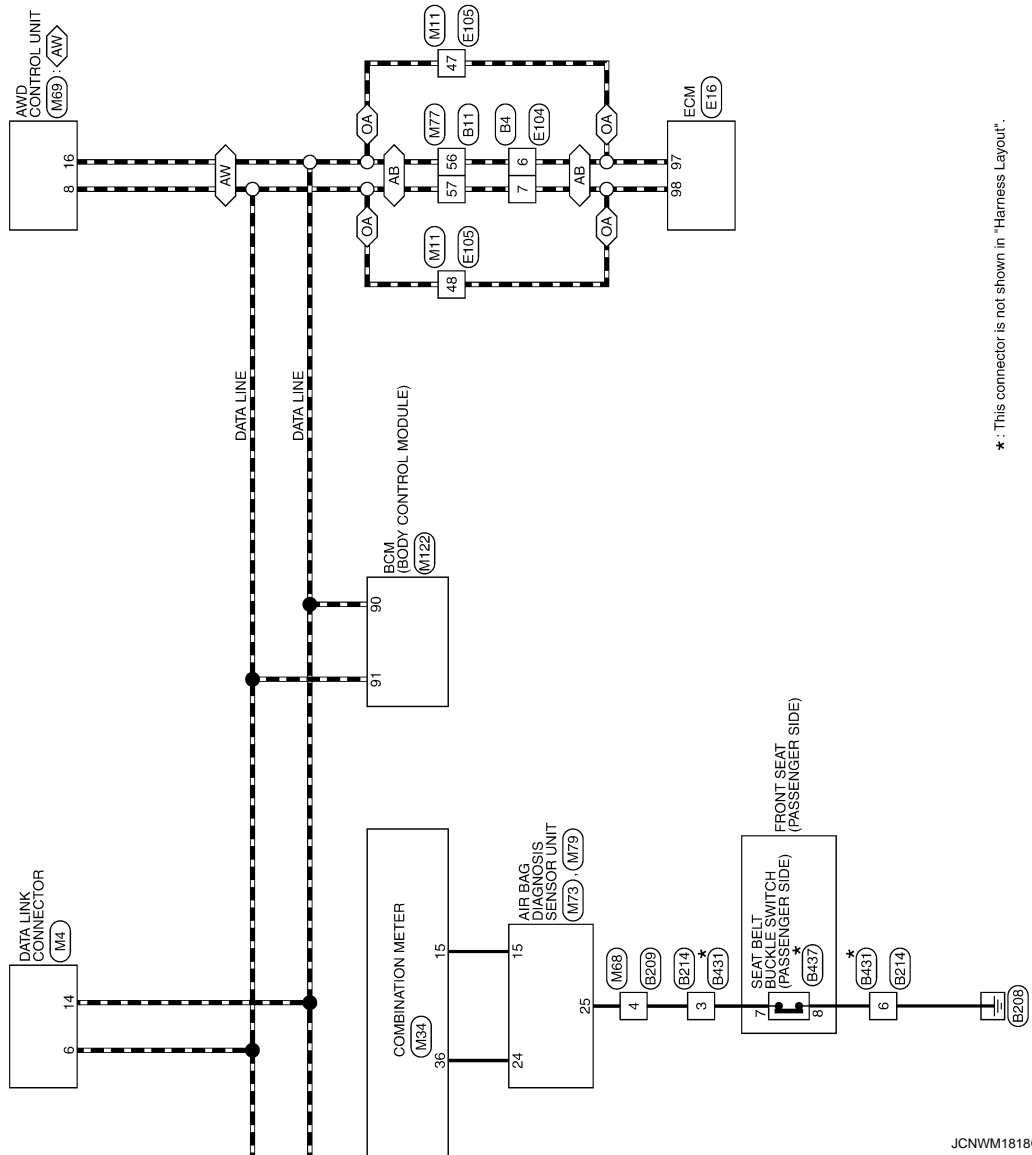

\* : This connector is not shown in "Harness Layout".













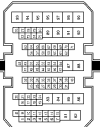


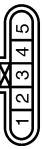

JCNWM1818GI

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P

# COMBINATION METER
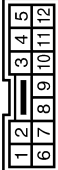
< ECU DIAGNOSIS >

## METER

Connector No. B4	WIRE TO WIRE	NS16MW-CS		Terminal No. 6	Color of Wire P	Signal Name [Specification]	Terminal No. 6	Color of Wire GR	Signal Name [Specification]
Connector Name				7	L	-	16	B/W	-
Connector Type									
									
Connector No. B11	WIRE TO WIRE	TH80MW-CS19		Terminal No. 6	P		Terminal No. 3	GR	
Connector Name				7	V		6	B/W	
Connector Type				24	GR				
				56	P				
				57	L				
									
Connector No. B18	WIRE TO WIRE	NS06FW-CS		Terminal No. 3	GR		Terminal No. 3	GR	
Connector Name				6	B/W		6	B/W	
Connector Type									
									
Connector No. B19	WIRE TO WIRE	NS16FW-CS		Terminal No. 6	GR		Terminal No. 6	GR	
Connector Name				16	B/W		16	B/W	
Connector Type									
									
Connector No. B209	WIRE TO WIRE	TK12MG-Y-BD		Terminal No. 4	BR		Terminal No. 3	BR	
Connector Name							6	B/W	
Connector Type									
									
Connector No. B214	WIRE TO WIRE	NS06FW-CS		Terminal No. 3	BR		Terminal No. 3	BR	
Connector Name				6	B/W		6	B/W	
Connector Type									
									
Connector No. B301	FUEL LEVEL SENSOR UNIT AND FUEL PUMP	-		Terminal No. 2	V		Terminal No. 6	-	
Connector Name				5	P		7	-	
Connector Type									
									
Connector No. B40	FUEL LEVEL SENSOR UNIT AND FUEL PUMP	EO3FGY-RS		Terminal No. 2	V		Terminal No. 6	-	
Connector Name				5	P		7	-	
Connector Type									
									

JCNWM1819GI



# COMBINATION METER

< ECU DIAGNOSIS >

## METER

Connector No.	B409	SEAT BELT BUCKLE SWITCH (DRIVER SIDE)	A03MW-P
Terminal No.	15	W/G	GR
Terminal No.	16	GR	
Color of Wire		Signal Name [Specification]	
3	W/G	-	
6	GR	-	

Connector No.	B411	WIRE TO WIRE	NSGBMW-CS
Terminal No.	3	W/G	GR
Terminal No.	6	GR	
Color of Wire		Signal Name [Specification]	
3	W/G	-	
6	GR	-	

Connector No.	B431	WIRE TO WIRE	NSGBMW-CS
Terminal No.	3	W/G	GR
Terminal No.	6	GR	
Color of Wire		Signal Name [Specification]	
3	W/G	-	
6	GR	-	

Connector No.	B437	SEAT BELT BUCKLE SWITCH (PASSENGER SIDE)	A03MW-P
Terminal No.	7	W/G	GR
Terminal No.	8	GR	
Color of Wire		Signal Name [Specification]	
7	W/G	-	
8	GR	-	

Connector No.	B449	SEAT BELT BUCKLE SWITCH (DRIVER SIDE)	A03MW-P
Terminal No.	40	W/G	GR
Terminal No.	41	GR	
Color of Wire		Signal Name [Specification]	
40	W/G	-	
41	GR	-	

Connector No.	B460	WIRE TO WIRE	NS1BMW-CS
Terminal No.	7	W/G	GR
Terminal No.	16	GR	
Color of Wire		Signal Name [Specification]	
7	W/G	-	
16	GR	-	

Connector No.	E6	WIRE TO WIRE	TK1BMGY-IV
Terminal No.	1	L	
Terminal No.	8	P	
Terminal No.	12	BR	
Color of Wire		Signal Name [Specification]	
1	L	-	
8	P	-	
12	BR	-	

Connector No.	E8	WIRE TO WIRE	NS12MER-CS
Terminal No.	11	G	
Terminal No.			
Color of Wire		Signal Name [Specification]	
11	G	-	
		-	





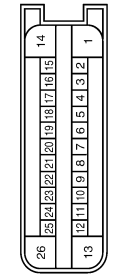

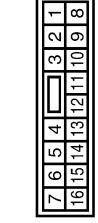
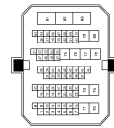
JCNWM1820GI

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P

# COMBINATION METER

< ECU DIAGNOSIS >

## METER

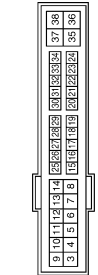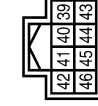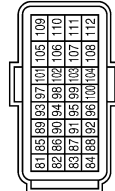
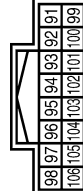







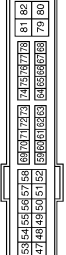

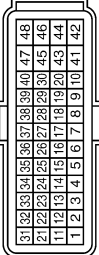


<table border="1"> <tr><td>Connector No.</td><td>E10</td></tr> <tr><td>Connector Name</td><td>IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)</td></tr> <tr><td>Connector Type</td><td>TH20FW-CS12-M4-TV</td></tr> </table>  <table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>20</td><td>L</td><td>-</td></tr> <tr><td>21</td><td>O</td><td>-</td></tr> </table>	Connector No.	E10	Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)	Connector Type	TH20FW-CS12-M4-TV	Terminal No.	Color of Wire	Signal Name [Specification]	20	L	-	21	O	-	<table border="1"> <tr><td>Connector No.</td><td>E11</td></tr> <tr><td>Connector Name</td><td>IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)</td></tr> <tr><td>Connector Type</td><td>TH08FW-NH</td></tr> </table>  <table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>39</td><td>P</td><td>-</td></tr> <tr><td>40</td><td>L</td><td>-</td></tr> </table>	Connector No.	E11	Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)	Connector Type	TH08FW-NH	Terminal No.	Color of Wire	Signal Name [Specification]	39	P	-	40	L	-	<table border="1"> <tr><td>Connector No.</td><td>E16</td></tr> <tr><td>Connector Name</td><td>ECM</td></tr> <tr><td>Connector Type</td><td>RH24FB-R2B-L-LH</td></tr> </table>  <table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>97</td><td>P</td><td>VEHCAN-L</td></tr> <tr><td>98</td><td>L</td><td>VEHCAN-H</td></tr> </table>	Connector No.	E16	Connector Name	ECM	Connector Type	RH24FB-R2B-L-LH	Terminal No.	Color of Wire	Signal Name [Specification]	97	P	VEHCAN-L	98	L	VEHCAN-H	<table border="1"> <tr><td>Connector No.</td><td>E27</td></tr> <tr><td>Connector Name</td><td>PARKING BRAKE SWITCH</td></tr> <tr><td>Connector Type</td><td>P01FB-A</td></tr> </table>  <table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>1</td><td>P</td><td>-</td></tr> </table>	Connector No.	E27	Connector Name	PARKING BRAKE SWITCH	Connector Type	P01FB-A	Terminal No.	Color of Wire	Signal Name [Specification]	1	P	-	<table border="1"> <tr><td>Connector No.</td><td>E36</td></tr> <tr><td>Connector Name</td><td>ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)</td></tr> <tr><td>Connector Type</td><td>AE22FB-AJ24-LH</td></tr> </table>  <table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>21</td><td>P</td><td>CANT L</td></tr> <tr><td>23</td><td>L</td><td>CANT H</td></tr> </table>	Connector No.	E36	Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)	Connector Type	AE22FB-AJ24-LH	Terminal No.	Color of Wire	Signal Name [Specification]	21	P	CANT L	23	L	CANT H	<table border="1"> <tr><td>Connector No.</td><td>E37</td></tr> <tr><td>Connector Name</td><td>BRAKE FLUID LEVEL SWITCH</td></tr> <tr><td>Connector Type</td><td>YV02FGY</td></tr> </table>  <table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>1</td><td>P</td><td>-</td></tr> <tr><td>2</td><td>B</td><td>-</td></tr> </table>	Connector No.	E37	Connector Name	BRAKE FLUID LEVEL SWITCH	Connector Type	YV02FGY	Terminal No.	Color of Wire	Signal Name [Specification]	1	P	-	2	B	-	<table border="1"> <tr><td>Connector No.</td><td>E104</td></tr> <tr><td>Connector Name</td><td>WIRE TO WIRE</td></tr> <tr><td>Connector Type</td><td>NS16FW-CS</td></tr> </table>  <table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>6</td><td>P</td><td>-</td></tr> <tr><td>7</td><td>L</td><td>-</td></tr> </table>	Connector No.	E104	Connector Name	WIRE TO WIRE	Connector Type	NS16FW-CS	Terminal No.	Color of Wire	Signal Name [Specification]	6	P	-	7	L	-	<table border="1"> <tr><td>Connector No.</td><td>E105</td></tr> <tr><td>Connector Name</td><td>WIRE TO WIRE</td></tr> <tr><td>Connector Type</td><td>TH70MW-CS10-M3</td></tr> </table>  <table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>8</td><td>G</td><td>-</td></tr> <tr><td>11</td><td>P</td><td>-</td></tr> <tr><td>12</td><td>L</td><td>-</td></tr> <tr><td>21</td><td>BR</td><td>-</td></tr> <tr><td>22</td><td>P</td><td>-</td></tr> <tr><td>24</td><td>L</td><td>-</td></tr> <tr><td>25</td><td>O</td><td>-</td></tr> <tr><td>47</td><td>P</td><td>-</td></tr> <tr><td>48</td><td>L</td><td>-</td></tr> <tr><td>60</td><td>V</td><td>-</td></tr> </table>	Connector No.	E105	Connector Name	WIRE TO WIRE	Connector Type	TH70MW-CS10-M3	Terminal No.	Color of Wire	Signal Name [Specification]	8	G	-	11	P	-	12	L	-	21	BR	-	22	P	-	24	L	-	25	O	-	47	P	-	48	L	-	60	V	-
Connector No.	E10																																																																																																																																																			
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)																																																																																																																																																			
Connector Type	TH20FW-CS12-M4-TV																																																																																																																																																			
Terminal No.	Color of Wire	Signal Name [Specification]																																																																																																																																																		
20	L	-																																																																																																																																																		
21	O	-																																																																																																																																																		
Connector No.	E11																																																																																																																																																			
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)																																																																																																																																																			
Connector Type	TH08FW-NH																																																																																																																																																			
Terminal No.	Color of Wire	Signal Name [Specification]																																																																																																																																																		
39	P	-																																																																																																																																																		
40	L	-																																																																																																																																																		
Connector No.	E16																																																																																																																																																			
Connector Name	ECM																																																																																																																																																			
Connector Type	RH24FB-R2B-L-LH																																																																																																																																																			
Terminal No.	Color of Wire	Signal Name [Specification]																																																																																																																																																		
97	P	VEHCAN-L																																																																																																																																																		
98	L	VEHCAN-H																																																																																																																																																		
Connector No.	E27																																																																																																																																																			
Connector Name	PARKING BRAKE SWITCH																																																																																																																																																			
Connector Type	P01FB-A																																																																																																																																																			
Terminal No.	Color of Wire	Signal Name [Specification]																																																																																																																																																		
1	P	-																																																																																																																																																		
Connector No.	E36																																																																																																																																																			
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)																																																																																																																																																			
Connector Type	AE22FB-AJ24-LH																																																																																																																																																			
Terminal No.	Color of Wire	Signal Name [Specification]																																																																																																																																																		
21	P	CANT L																																																																																																																																																		
23	L	CANT H																																																																																																																																																		
Connector No.	E37																																																																																																																																																			
Connector Name	BRAKE FLUID LEVEL SWITCH																																																																																																																																																			
Connector Type	YV02FGY																																																																																																																																																			
Terminal No.	Color of Wire	Signal Name [Specification]																																																																																																																																																		
1	P	-																																																																																																																																																		
2	B	-																																																																																																																																																		
Connector No.	E104																																																																																																																																																			
Connector Name	WIRE TO WIRE																																																																																																																																																			
Connector Type	NS16FW-CS																																																																																																																																																			
Terminal No.	Color of Wire	Signal Name [Specification]																																																																																																																																																		
6	P	-																																																																																																																																																		
7	L	-																																																																																																																																																		
Connector No.	E105																																																																																																																																																			
Connector Name	WIRE TO WIRE																																																																																																																																																			
Connector Type	TH70MW-CS10-M3																																																																																																																																																			
Terminal No.	Color of Wire	Signal Name [Specification]																																																																																																																																																		
8	G	-																																																																																																																																																		
11	P	-																																																																																																																																																		
12	L	-																																																																																																																																																		
21	BR	-																																																																																																																																																		
22	P	-																																																																																																																																																		
24	L	-																																																																																																																																																		
25	O	-																																																																																																																																																		
47	P	-																																																																																																																																																		
48	L	-																																																																																																																																																		
60	V	-																																																																																																																																																		

JCNWM1821GI

# COMBINATION METER

< ECU DIAGNOSIS >

## METER

Connector No. E308	Connector Name ALTERNATOR	Connector Type -			Terminal No. 98 96 100	Color of Wire BR BR SB	Signal Name [Specification] - - -
Connector No. E337	Connector Name AMBIENT SENSOR	Connector Type RS02FB			Terminal No. 2 1	Color of Wire BR SB	Signal Name [Specification] - -
Connector No. E338	Connector Name WASHER LEVEL SWITCH	Connector Type Z02FBR			Terminal No. 2 1	Color of Wire B R	Signal Name [Specification] - -
Connector No. E339	Connector Name WIRE TO WIRE	Connector Type NS32FBR-0S			Terminal No. 11	Color of Wire R	Signal Name [Specification] -
Connector No. F12	Connector Name IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)	Connector Type TH20FW-CS12-M4			Terminal No. 75	Color of Wire LG	Signal Name [Specification] -
Connector No. F23	Connector Name TCM (TRANSMISSION CONTROL MODULE)	Connector Type RH40FB-R28-L-RH			Terminal No. 31 32	Color of Wire P L	Signal Name [Specification] CAN-L CAN-H
Connector No. F60	Connector Name ALTERNATOR	Connector Type HS03FB			Terminal No. 3	Color of Wire BR	Signal Name [Specification] -

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

INL

# COMBINATION METER

< ECU DIAGNOSIS >


## METER

Connector No.	F63
Connector Name	OIL PRESSURE SWITCH
Connector Type	E01FGY-RS-AR



Terminal No.	1	Color of Wire	LG	Signal Name [Specification]	-
--------------	---	---------------	----	-----------------------------	---

Connector No.	F123
Connector Name	WIRE TO WIRE
Connector Type	TK18FGY-1V



Terminal No.	1	Color of Wire	L	Signal Name [Specification]	-
8	P	-	-	-	-
12	BR	-	-	-	-

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS32FW-M2




Terminal No.	1A	Color of Wire	Y	Signal Name [Specification]	-
--------------	----	---------------	---	-----------------------------	---

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS12FW-CS



Terminal No.	12C	Color of Wire	O	Signal Name [Specification]	-
--------------	-----	---------------	---	-----------------------------	---

Connector No.	M4
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW



Terminal No.	6	Color of Wire	L	Signal Name [Specification]	-
14	P	-	-	-	-

Connector No.	M11
Connector Name	WIRE TO WIRE
Connector Type	TH170FW-CS10-M3



Terminal No.	8	Color of Wire	R	Signal Name [Specification]	-
11	P	-	-	-	-
12	L	-	-	-	-
21	BR	-	-	-	-
22	G	-	-	-	-
24	Y	-	-	-	-
25	L	-	-	-	-
47	P	-	-	-	-
48	L	-	-	-	-
60	V	-	-	-	-

Connector No.	M34
Connector Name	COMBINATION METER
Connector Type	TH40FW-NH



Terminal No.	1	Color of Wire	Y	Signal Name [Specification]	BAT
2	O	-	-	-	-
3	B	-	-	-	GROUND
5	SB	-	-	-	ILLUMINATION CONTROL
8	SB	-	-	-	TRIP RESET SWITCH
10	O	-	-	-	METER CONTROL SW GND
11	L	-	-	-	ENTER SWITCH
12	R	-	-	-	SELECT SWITCH
13	V	-	-	-	ILLUMINATION CONTROL SWITCH (When automatic drive position)
14	GR	-	-	-	ILLUMINATION CONTROL SWITCH (-)

Terminal No.	15	Color of Wire	BR	Signal Name [Specification]	AIR BAG
18	L	-	-	-	AMBIENT SENSOR
19	P	-	-	-	AMBIENT SENSOR POWER
20	Y	-	-	-	AMBIENT SENSOR GROUND
21	L	-	-	-	CAN-H
22	P	-	-	-	CAN-L
23	B	-	-	-	GROUND
24	W	-	-	-	FUEL LEVEL SENSOR GROUND
25	BR	-	-	-	CHG
26	G	-	-	-	PARKING BRAKE SWITCH
27	V	-	-	-	BRAKE FLUID LEVEL SWITCH
29	R	-	-	-	WASHER LEVEL SWITCH
30	P	-	-	-	VEHICLE SPEED (2-PULSE)
31	V	-	-	-	VEHICLE SPEED (8-PULSE)
32	LG	-	-	-	OD OFF/SPORTS
34	G	-	-	-	FUEL LEVEL SENSOR
35	SB	-	-	-	SEAT BELT BUCKLE SWITCH (DRIVER SIDE)
36	R	-	-	-	SEAT BELT BUCKLE SWITCH (PASSENGER SIDE)

# COMBINATION METER

< ECU DIAGNOSIS >

## METER


Connector No. M5D	A/C AUTO AMP. SAB40FW	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40	Terminal No. 34	P	AMB POWER
Connector No. M57	CONTROL DEVICE TK10FW	1 3 7 9 2 4 5 6 8	Terminal No. 1 4	LG B	
Connector No. M68	WIRE TO WIRE TK2FG-Y	5 4 3 2 1 12 11 10 9 8 7 6	Terminal No. 4	L	
Connector No. M69	AWD CONTROL UNIT TH16FW-NH	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16	Terminal No. 8 16	L P	CAN-H CAN-L
Connector No. M70	WIRE TO WIRE TK10FW	1 3 7 9 2 4 5 6 8	Terminal No. 1 4	LG B	
Connector No. M73	AIR BAG DIAGNOSIS SENSOR UNIT TK28FY-EX-SC	20 21 17 24 49 1 22 11 46 48 47 45 13 3 4 16 5 16 12 19 15 14 51 23 50 18 52 2	Terminal No. 15 24	BR R	A/B W/L SEATBELT W/L
Connector No. M77	WIRE TO WIRE TH80FW-CS19		Terminal No. 6 7 24 56 57	W G SB P L	
Connector No. M79	AIR BAG DIAGNOSIS SENSOR UNIT TK12FY-1V-EX	32 28 26 27 25 31 8 39 7 36 35 40	Terminal No. 25	L	BUCKLE SW RH
Connector No. M83	METER CONTROL SWITCH TH12FW-NH	1 2 3 4 5 6 7 8 9 10 11 12	Terminal No. 1 4 5 6 11 12	R GR O V Y SB L	

JCNWM1824GI

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P

# COMBINATION METER

< ECU DIAGNOSIS >

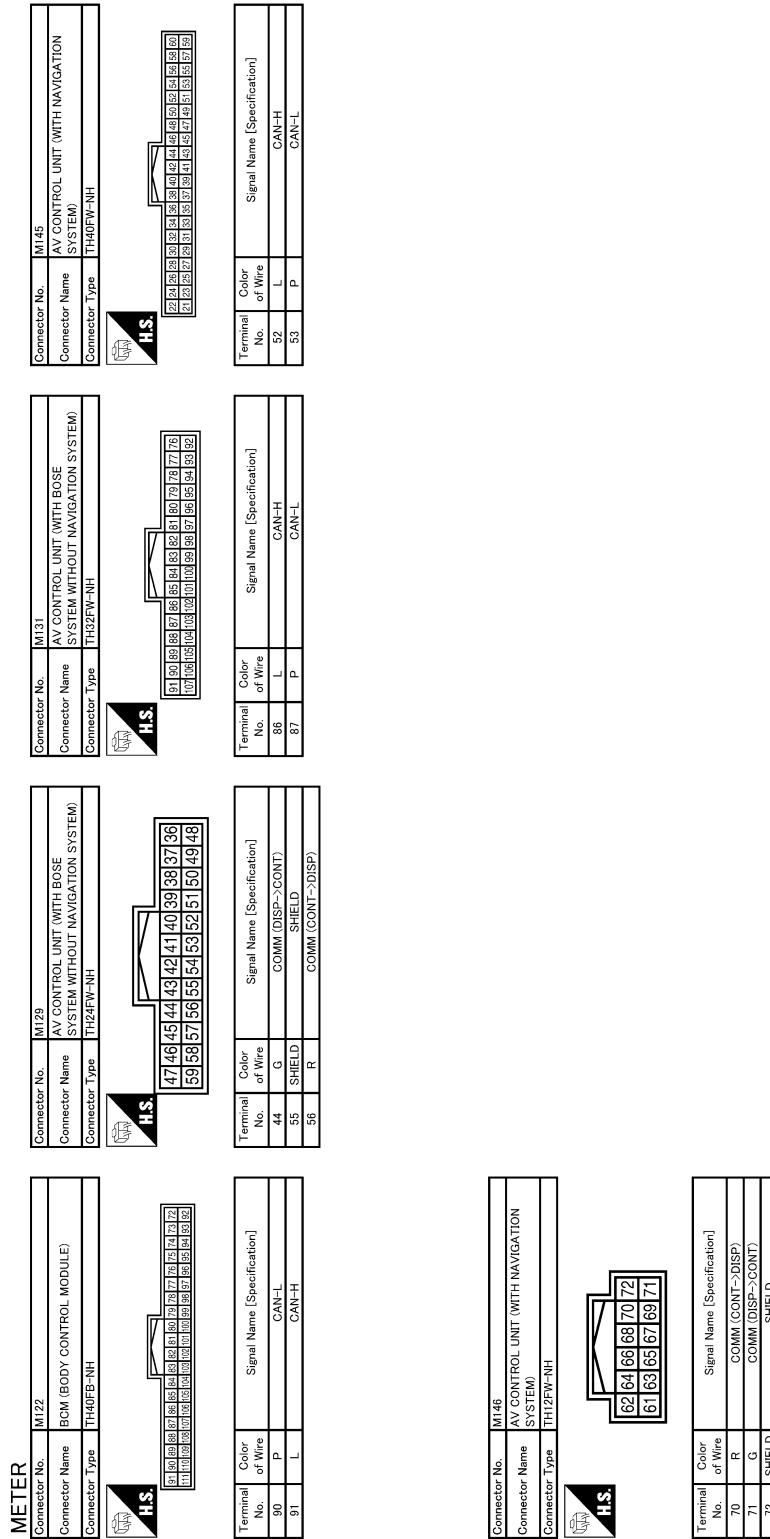

JCNWM1825GI

INFOID:000000003728858

Fail-Safe

FAIL-SAFE

The combination meter activates the fail-safe control if CAN communication with each unit is malfunctioning.

# COMBINATION METER

## < ECU DIAGNOSIS >

Function		Specifications
Speedometer		Reset to zero by suspending communication.
Tachometer		
Engine coolant temperature gauge		
Illumination control		When suspending communication, changes to nighttime mode.
Information display	Door open warning	The display turns off by suspending communication.
	Parking brake release warning	
	Instantaneous fuel warning	<ul style="list-style-type: none"> <li>When reception time of an abnormal signal is 2 seconds or less, the last received datum is used for calculation to indicate the result.</li> <li>When reception time of an abnormal signal is more than two seconds, the last result calculated during normal condition is indicated.</li> </ul>
	Average fuel consumption	
	Average vehicle speed	
	Travel distance	
Buzzer		The buzzer turns off by suspending communication.
Warning lamp/indicator lamp	ABS warning lamp	The lamp turns on by suspending communication.
	VDC OFF indicator lamp	
	SLIP indicator lamp	
	Brake warning lamp	
	AWD warning lamp	
	Low tire pressure warning lamp	The lamp turns ON after flashing for 1 minute.
	High beam indicator lamp	The lamp turns off by suspending communication.
	Turn signal indicator lamp	
	Light indicator lamp	
	Oil pressure warning lamp	
	Malfunction indicator lamp	
	CRUISE indicator lamp	
	O/D OFF indicator lamp	
	AWD LOCK indicator lamp	
Key warning lamp		

## DTC Index

INFOID:000000003728859

Display contents of CONSULT-III	Diagnostic item is detected when ...	Refer to
CAN COMM CIRCUIT [U1000]	When combination meter is not transmitting or receiving CAN communication signal for 2 seconds or more.	<a href="#">MWI-38.</a> <a href="#">"Diagnosis Procedure"</a>
CONTROL UNIT (CAN) [U1010]	When detecting error during the initial diagnosis of the CAN controller of combination meter.	<a href="#">MWI-39.</a> <a href="#">"Diagnosis Procedure"</a>
VEHICLE SPEED [B2205]	The abnormal vehicle speed signal is input from the ABS actuator and electric unit (control unit) for 2 seconds or more.	<a href="#">MWI-40.</a> <a href="#">"Diagnosis Procedure"</a>
ENGINE SPEED [B2267]	If ECM continuously transmits abnormal engine speed signals for 2 seconds or more.	<a href="#">MWI-41.</a> <a href="#">"Diagnosis Procedure"</a>
WATER TEMP [B2268]	If ECM continuously transmits abnormal engine coolant temperature signals for 60 seconds or more.	<a href="#">MWI-42.</a> <a href="#">"Diagnosis Procedure"</a>

# INTERIOR LIGHTING SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

## SYMPTOM DIAGNOSIS

### INTERIOR LIGHTING SYSTEM SYMPTOMS

#### Symptom Table

INFOID:000000003295134

**CAUTION:**

**Perform the self-diagnosis with CONSULT-III before the symptom diagnosis. Perform the trouble diagnosis if any DTC is detected.**

Symptom	Possible cause	Inspection item
All the following lamps are not turned ON. <ul style="list-style-type: none"> <li>• Map lamp</li> <li>• Personal lamp</li> <li>• Luggage room lamp</li> <li>• Step lamp</li> <li>• Vanity mirror lamp</li> </ul>	<ul style="list-style-type: none"> <li>• Harness between BCM and each interior room lamp</li> <li>• BCM</li> </ul>	Interior room lamp power supply circuit Refer to <a href="#">INL-19</a> .
<ul style="list-style-type: none"> <li>• Interior room lamp is not turned ON even though the door is open. (It turns ON when turning the interior room lamp ON.)</li> <li>• Interior room lamp does not turn OFF even though the door is closed.</li> </ul>	<ul style="list-style-type: none"> <li>• Harness between BCM and each door switch</li> <li>• Harness between BCM and each interior room lamp</li> <li>• BCM</li> </ul>	Door switch circuit Refer to <a href="#">DLK-103</a> .  Interior room lamp control circuit Refer to <a href="#">INL-21</a> .
Interior room lamp timer does not activate. (It turns ON/ OFF when the door opens/closes.)	—	Check the interior room lamp setting. Refer to <a href="#">INL-15</a> .
Step lamps (driver side and passenger side) are not turned ON. (Map lamp and personal lamp are turned ON.)  Step lamps (driver side and passenger side) are not turned OFF. (Map lamp and personal lamp are turned OFF.)	<ul style="list-style-type: none"> <li>• Harness between BCM and each step lamp</li> <li>• BCM</li> </ul>	Step lamp circuit Refer to <a href="#">INL-23</a> .
Push-button ignition switch illumination does not illuminate.	<ul style="list-style-type: none"> <li>• Harness between BCM and push-button ignition switch</li> <li>• BCM</li> </ul>	Push-button ignition switch illumination circuit Refer to <a href="#">INL-25</a> .
Interior room lamp battery saver does not activate.	—	Check the interior room lamp battery saver setting. Refer to <a href="#">INL-16</a> .



# PRECAUTIONS

< PRECAUTION >

## PRECAUTION

### PRECAUTIONS FOR USA AND CANADA

#### FOR USA AND CANADA : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000003486634

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIRBAG" and "SEAT BELT" of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIRBAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors while ignition switch is ON or engine is running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration may activate the sensor(s), deploy the airbag(s), possibly cause serious injury. When using air or electric power tools or hammers, always turn OFF ignition switch, disconnect the battery, and wait 3 minutes or more before performing any service.

#### FOR MEXICO

#### FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000003486635

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIRBAG" and "SEAT BELT" of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIRBAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors while ignition switch is ON or engine is running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration may activate the sensor(s), deploy the airbag(s), possibly cause serious injury.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL

## PRECAUTIONS

### < PRECAUTION >

---

When using air or electric power tools or hammers, always turn OFF ignition switch, disconnect the battery, and wait 3 minutes or more before performing any service.

# MAP LAMP


< ON-VEHICLE REPAIR >

## ON-VEHICLE REPAIR

### MAP LAMP

#### Exploded View

INFOID:000000003295136

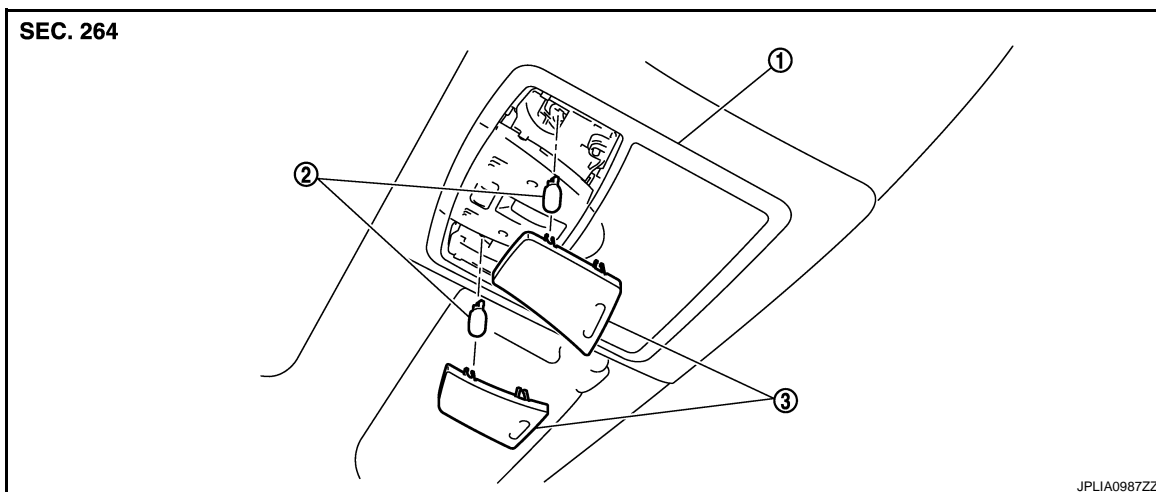

1. Map lamp assembly

2. Bulb

3. Lens

#### Removal and Installation

INFOID:000000003295137

Refer to [INT-25. "NORMAL ROOF : Exploded View"](#) (Normal roof) or [INT-29. "SUNROOF : Exploded View"](#) (With sunroof) for the map lamp assembly installation/removal.

#### Replacement

INFOID:000000003295138

##### **CAUTION:**

- Disconnect the battery negative terminal or remove the fuse.
- Never touch the glass of bulb directly by hand. Keep grease and other oily matters away from it.
- Never touch bulb by hand while it is lit or right after being turned off.
- Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with new one.

#### MAP LAMP BULB

1. Insert any appropriate tool into the gap between the lens. Remove the lens.
2. Remove the bulb.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P

# MOOD LAMP

< ON-VEHICLE REPAIR >

---

## MOOD LAMP

### MAP LAMP

#### MAP LAMP : Replacement

INFOID:000000003455389

### MAP LAMP

Mood lamp (map lamp) is integrated into the map lamp assembly. Refer to [INL-115, "Exploded View"](#).

### FRONT DOOR GRIP

#### FRONT DOOR GRIP : Replacement

INFOID:000000003455390

### FRONT DOOR

Mood lamp (front door grip) is integrated into the front door trim. Refer to [INT-11, "FRONT DOOR FINISHER : Exploded View"](#).

### ROOF CENTER

#### ROOF CENTER : Replacement

INFOID:000000003455391

### ROOF CENTER

Mood lamp (roof center) is integrated into the headlining.

- Refer to [INT-25, "NORMAL ROOF : Exploded View"](#) (Normal roof).
- Refer to [INT-29, "SUNROOF : Exploded View"](#) (With sunroof).


# VANITY MIRROR LAMP

< ON-VEHICLE REPAIR >

## VANITY MIRROR LAMP

Exploded View

INFOID:000000003295139

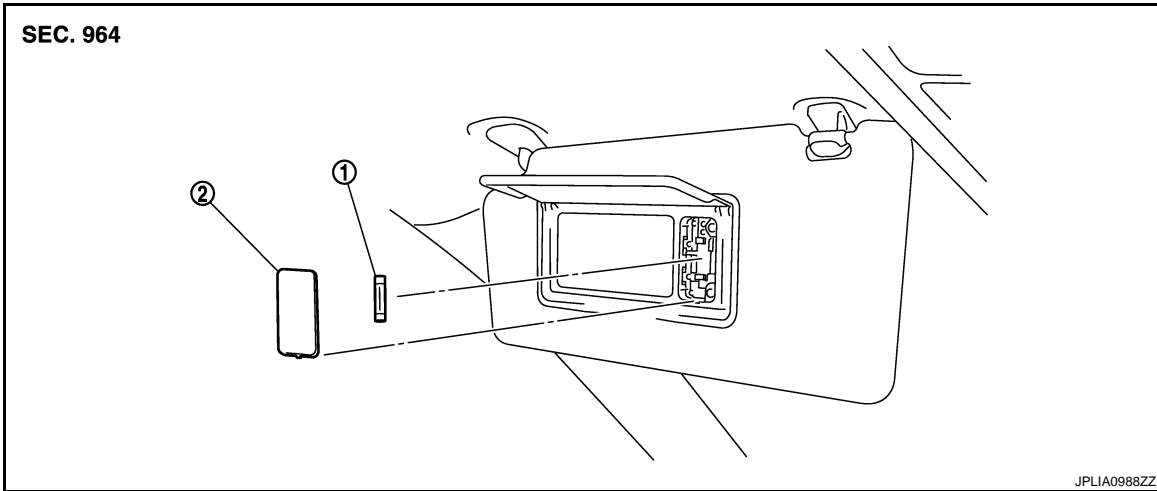

1. Bulb

2. Lens

### Replacement

INFOID:000000003295140

#### **CAUTION:**

- Disconnect the battery negative terminal or remove the fuse.
- Never touch the glass of bulb directly by hand. Keep grease and other oily matters away from it.
- Never touch bulb by hand while it is lit or right after being turned off.
- Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with new one.

#### VANITY MIRROR LAMP BULB

1. Insert any appropriate tool into the gap between the lens. Remove the lens.
2. Remove the bulb.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K

INL

M  
N  
O  
P


# CONSOLE POCKET LAMP

< ON-VEHICLE REPAIR >

## CONSOLE POCKET LAMP

Exploded View

INFOID:000000003455387

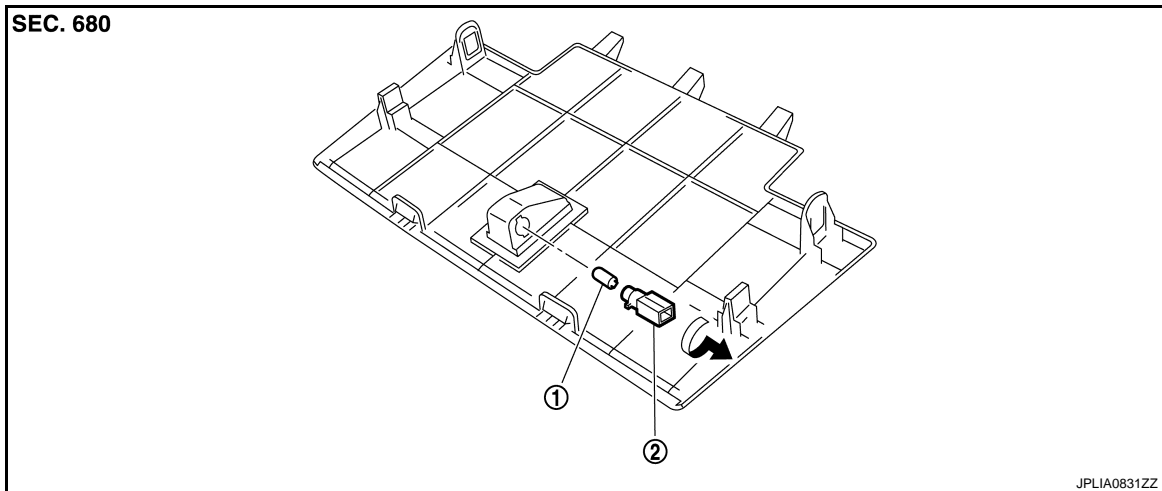

1. Bulb

2. Bulb socket

## Replacement

INFOID:000000003455388

### CAUTION:

- Disconnect the battery negative terminal or remove the fuse.
- Never touch the glass of bulb directly by hand. Keep grease and other oily matters away from it.
- Never touch bulb by hand while it is lit or right after being turned off.
- Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with new one.

### CONSOLE POCKET LAMP BULB

1. Remove the cluster lid C (lower). Refer to [IP-11, "Exploded View"](#).
2. Rotate the bulb socket counterclockwise and unlock it.
3. Remove the bulb.


# ASHTRAY ILLUMINATION

< ON-VEHICLE REPAIR >

## ASHTRAY ILLUMINATION

Exploded View

INFOID:000000003295141

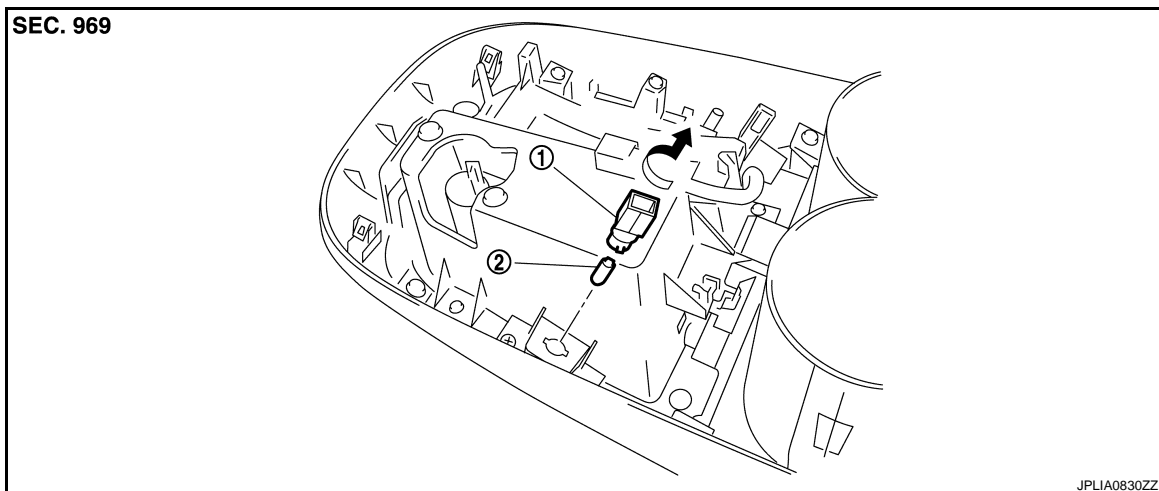

1. Bulb socket

2. Bulb

### Replacement

INFOID:000000003295142

#### **CAUTION:**

- Disconnect the battery negative terminal or remove the fuse.
- Never touch the glass of bulb directly by hand. Keep grease and other oily matters away from it.
- Never touch bulb by hand while it is lit or right after being turned off.
- Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with new one.

#### ASHTRAY ILLUMINATION BULB

1. Remove the console finisher assembly. Refer to [IP-19, "Exploded View"](#).
2. Rotate the bulb socket counterclockwise and unlock it.
3. Remove the bulb.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P


# GLOVE BOX LAMP

< ON-VEHICLE REPAIR >

## GLOVE BOX LAMP

Exploded View

INFOID:000000003295143

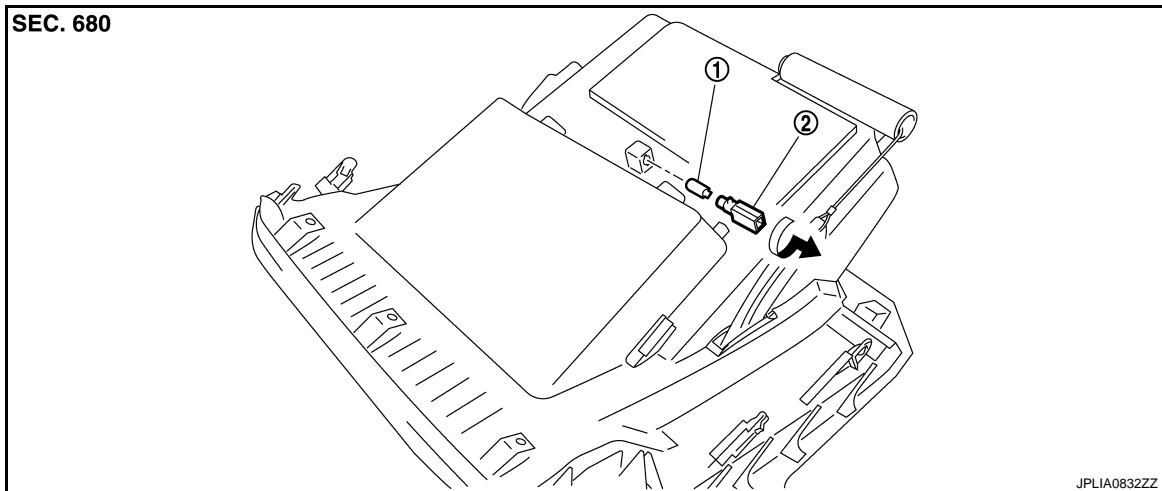

1. Bulb

2. Bulb socket

## Replacement

INFOID:000000003295144

### CAUTION:

- Disconnect the battery negative terminal or remove the fuse.
- Never touch the glass of bulb directly by hand. Keep grease and other oily matters away from it.
- Never touch bulb by hand while it is lit or right after being turned off.
- Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with new one.

### GLOVE BOX LAMP BULB

1. Remove the glove box assembly. Refer to [JP-11, "Exploded View"](#).
2. Rotate the bulb socket counterclockwise and unlock it.
3. Remove the bulb.




# STEP LAMP

< ON-VEHICLE REPAIR >

## STEP LAMP

### Exploded View

INFOID:000000003295145

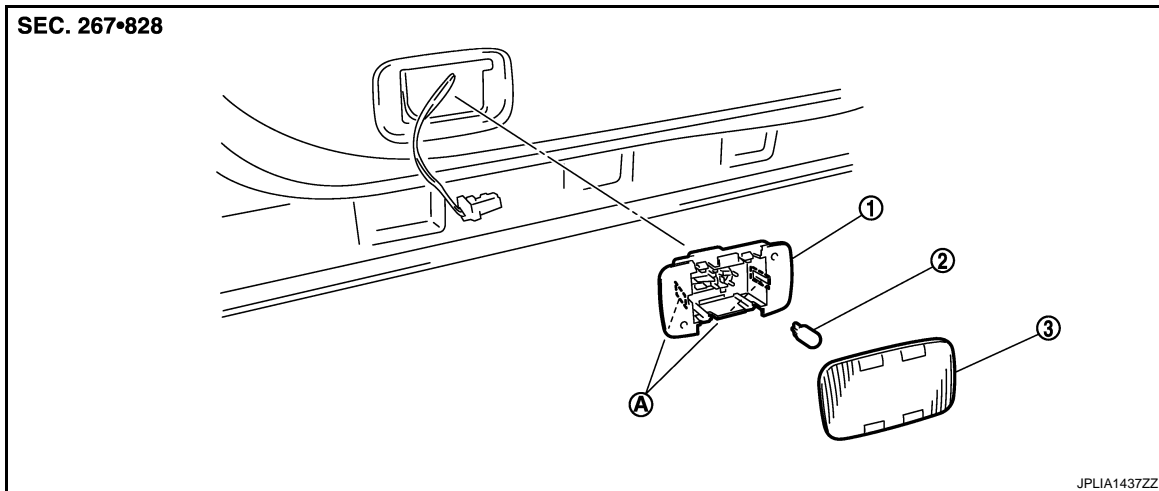

1. Step lamp case
  2. Bulb
  3. Lens
- A Metal clip

### Removal and Installation

INFOID:000000003295146

#### **CAUTION:**

**Disconnect the battery negative terminal or remove the fuse.**

#### REMOVAL

1. Insert any appropriate tool into the gap between the step lamp and the door trim. Remove the step lamp.
2. Disconnect the connector.

#### INSTALLATION

Install in the reverse order of removal.

### Replacement

INFOID:000000003295147

#### **CAUTION:**

- **Disconnect the battery negative terminal or remove the fuse.**
- **Never touch the glass of bulb directly by hand. Keep grease and other oily matters away from it.**
- **Never touch bulb by hand while it is lit or right after being turned off.**
- **Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with new one.**

#### STEP LAMP BULB

1. Insert any appropriate tool into the gap between the lens. Remove the lens.
2. Remove the bulb.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

INL


# PERSONAL LAMP

< ON-VEHICLE REPAIR >

## PERSONAL LAMP

### Exploded View

INFOID:000000003295148

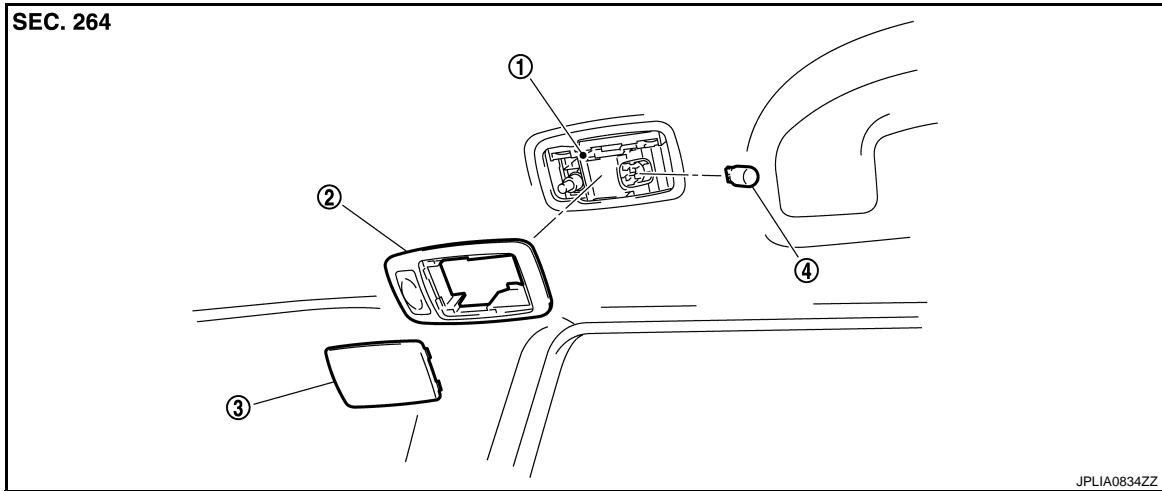

1. Personal lamp case
2. Personal lamp finisher
3. Lens
4. Bulb

#### NOTE:

Replace the personal lamp case as a set (right and left). After removing the headlining assembly, remove the personal lamp case. Refer to [INT-25, "NORMAL ROOF : Exploded View"](#) (Normal roof) or [INT-29, "SUNROOF : Exploded View"](#) (With sunroof).

### Removal and Installation

INFOID:000000003295149

#### CAUTION:


**Disconnect the battery negative terminal or remove the fuse.**

#### REMOVAL

1. Remove the headlining assembly. Refer to [INT-25, "NORMAL ROOF : Exploded View"](#) (Normal roof) or [INT-29, "SUNROOF : Exploded View"](#) (With sunroof).
2. Insert any appropriate tool into the gap between the lens. Remove the lens.
3. Press the both side pawls (A) to the arrow direction (←). Remove the personal lamp finisher.
4. Remove the personal lamp case from the headlining assembly.

#### NOTE:

Replace the personal lamp case as a set (right and left).

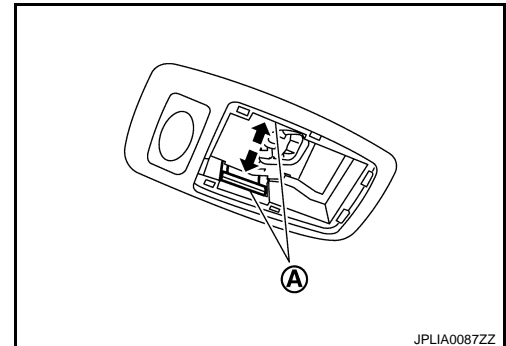

#### INSTALLATION

Install in the reverse order of removal.


#### NOTE:

The following is easier to install the personal lamp finisher.

# PERSONAL LAMP

## < ON-VEHICLE REPAIR >

- Press the personal lamp finisher to the headlining. Pull the personal lamp case pawl to the arrow direction (←) with any appropriate tool.

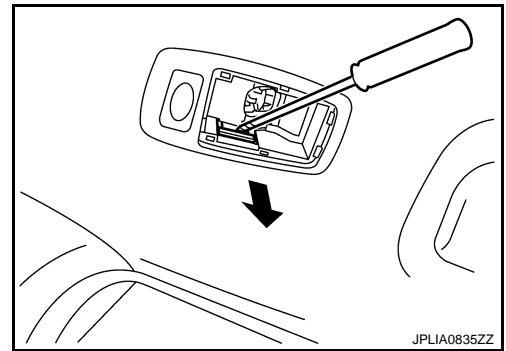

## Replacement

INFOID:000000003295150

### **CAUTION:**

- **Disconnect the battery negative terminal or remove the fuse.**
- **Never touch the glass of bulb directly by hand. Keep grease and other oily matters away from it.**
- **Never touch bulb by hand while it is lit or right after being turned off.**
- **Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with new one.**

### PERSONAL LAMP BULB

1. Insert any appropriate tool into the gap between the lens. Remove the lens.
2. Remove the bulb.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

INL


# LUGGAGE ROOM LAMP

< ON-VEHICLE REPAIR >

## LUGGAGE ROOM LAMP

Exploded View

INFOID:000000003434427

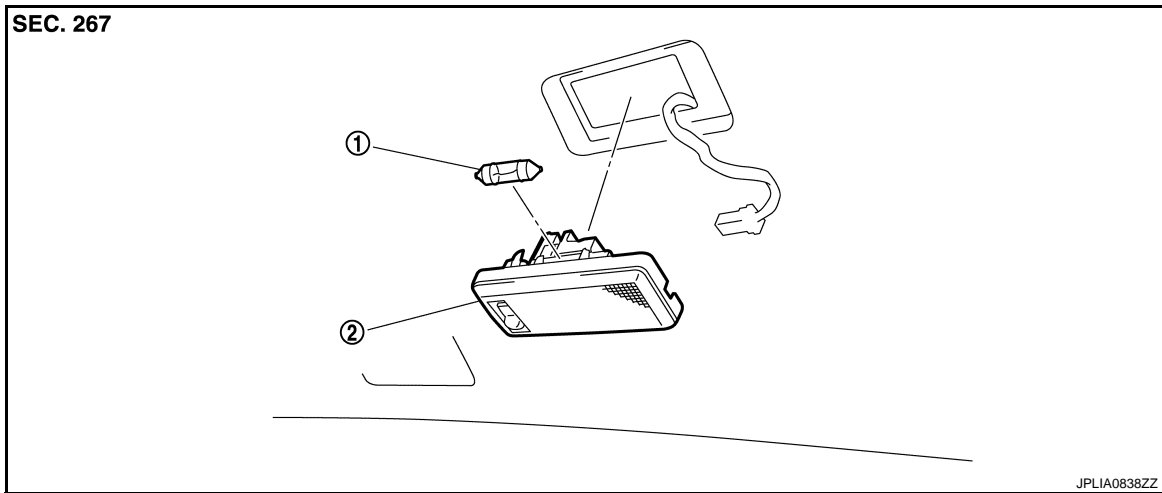

1. Bulb

2. Luggage room lamp assembly

### Removal and Installation

INFOID:000000003434428

#### **CAUTION:**

**Disconnect the battery negative terminal or remove the fuse.**

#### REMOVAL

1. Insert any appropriate tool into the gap between the luggage room lamp assembly and back door finisher inner. Remove the luggage room lamp assembly.
2. Disconnect the connector.

#### INSTALLATION

Install in the reverse order of removal.

### Replacement

INFOID:000000003434429

#### **CAUTION:**

- **Disconnect the battery negative terminal or remove the fuse.**
- **Never touch the glass of bulb directly by hand. Keep grease and other oily matters away from it.**
- **Never touch bulb by hand while it is lit or right after being turned off.**
- **Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with new one.**

#### LUGGAGE ROOM LAMP BULB

1. Remove the luggage room lamp assembly.
2. Remove the bulb.

# SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

## SERVICE DATA AND SPECIFICATIONS (SDS)

### SERVICE DATA AND SPECIFICATIONS (SDS)

#### Bulb Specifications

INFOID:000000003295154

Item	Type	Wattage (W)	
Push-button ignition switch illumination	LED	—	
Map lamp	Wedge	8	
Mood lamp	Map lamp	LED	—
	Front door grip	LED	—
	Roof center	LED	—
Vanity mirror lamp	—	2	
Console pocket lamp	Wedge	1.4	
Ashtray illumination	Wedge	1.4	
Glove box lamp	Wedge	1.4	
Step lamp	Wedge	2.7	
Personal lamp	Wedge	8	
Luggage room lamp	—	8	

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P