

A
B
AT
D
E
F
G
H
I
J
K
L
M

SECTION **AT**

AUTOMATIC TRANSAXLE

CONTENTS

<p>INDEX FOR DTC 5</p> <p> Alphabetical Index 5</p> <p> DTC No. Index 6</p> <p>PRECAUTIONS 7</p> <p> Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" 7</p> <p> Precautions for On Board Diagnostic (OBD) System of A/T and Engine 7</p> <p> Precautions for A/T Assembly or TCM Replacement... 8</p> <p> Precautions 9</p> <p> Service Notice or Precautions 10</p> <p>PREPARATION 11</p> <p> Special Service Tools 11</p> <p> Commercial Service Tools 13</p> <p>A/T FLUID 14</p> <p> Changing A/T Fluid 14</p> <p> Checking A/T Fluid 14</p> <p> A/T Fluid Cooler Cleaning 15</p> <p>A/T CONTROL SYSTEM 18</p> <p> Cross-Sectional View 18</p> <p> Shift Mechanism 19</p> <p> TCM Function 34</p> <p> Input/Output Signal of TCM 35</p> <p> CAN Communication 35</p> <p> Line Pressure Control 36</p> <p> Shift Control 36</p> <p> Lock-Up Control 38</p> <p>ON BOARD DIAGNOSTIC (OBD) SYSTEM 40</p> <p> Introduction 40</p> <p> OBD-II Function for A/T System 40</p> <p> One or Two Trip Detection Logic of OBD-II 40</p> <p> OBD-II Diagnostic Trouble Code (DTC) 40</p> <p> Malfunction Indicator Lamp (MIL) 43</p> <p>TROUBLE DIAGNOSIS 44</p> <p> DTC Inspection Priority Chart 44</p> <p> Fail-Safe 44</p> <p> How To Perform Trouble Diagnosis For Quick and Accurate Repair 46</p> <p> A/T Electrical Parts Location 52</p>	<p> Circuit Diagram 54</p> <p> Inspections Before Trouble Diagnosis 55</p> <p> Check Before Engine is Started 59</p> <p> Check at Idle 59</p> <p> Cruise Test - Part 1 61</p> <p> Cruise Test - Part 2 62</p> <p> Cruise Test - Part 3 63</p> <p> Shift Schedule 65</p> <p> Symptom Chart 65</p> <p> TCM Input/Output Signal Reference Values 72</p> <p> CONSULT-II Function (TRANSMISSION) 75</p> <p> Diagnostic Procedure 81</p> <p>DTC U1000 CAN COMMUNICATION LINE 84</p> <p> Description 84</p> <p> On Board Diagnosis Logic 84</p> <p> Possible Cause 84</p> <p> DTC Confirmation Procedure 84</p> <p> Wiring Diagram — AT — CAN 85</p> <p> Diagnostic Procedure 86</p> <p>DTC P0500 VEHICLE SPEED SENSOR MTR 87</p> <p> Description 87</p> <p> On Board Diagnosis Logic 87</p> <p> Possible Cause 87</p> <p> DTC Confirmation Procedure 87</p> <p> Diagnostic Procedure 88</p> <p>DTC P0613 TCM PROCESSOR 89</p> <p> Description 89</p> <p> On Board Diagnosis Logic 89</p> <p> Possible Cause 89</p> <p> DTC Confirmation Procedure 89</p> <p> Diagnostic Procedure 90</p> <p>DTC P0705 PARK/NEUTRAL POSITION SWITCH.. 91</p> <p> Description 91</p> <p> On Board Diagnosis Logic 91</p> <p> Possible Cause 91</p> <p> DTC Confirmation Procedure 91</p> <p> Wiring Diagram — AT — PNP/SW 92</p> <p> Diagnostic Procedure 93</p> <p> Component Inspection 95</p> <p>DTC P0710 A/T FLUID TEMPERATURE SENSOR</p>
--	--

CIRCUIT	96	Possible Cause	124
Description	96	DTC Confirmation Procedure	124
On Board Diagnosis Logic	96	Wiring Diagram — AT — 3RDSIG	126
Possible Cause	96	Diagnostic Procedure	128
DTC Confirmation Procedure	96	DTC P0734 A/T 4TH GEAR FUNCTION	129
Wiring Diagram — AT — FTS	97	Description	129
Diagnostic Procedure	98	On Board Diagnosis Logic	129
Component Inspection	100	Possible Cause	129
DTC P0711 FLUID TEMPERATURE SENSOR PER-		DTC Confirmation Procedure	129
FORMANCE	101	Wiring Diagram — AT — 4THSIG	131
Description	101	Diagnostic Procedure	132
On Board Diagnosis Logic	101	DTC P0735 A/T 5TH GEAR FUNCTION	133
Possible Cause	101	Description	133
DTC Confirmation Procedure	101	On Board Diagnosis Logic	133
Wiring Diagram — AT — FTSP	102	Possible Cause	133
Diagnostic Procedure	103	DTC Confirmation Procedure	133
Component Inspection	105	Wiring Diagram — AT — 5THSIG	135
DTC P0717 TURBINE REVOLUTION SENSOR CIR-		Diagnostic Procedure	137
CUIT	106	DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)	138
Description	106	Description	138
On Board Diagnosis Logic	106	On Board Diagnosis Logic	138
Possible Cause	106	Possible Cause	138
DTC Confirmation Procedure	106	DTC Confirmation Procedure	138
Wiring Diagram — AT — TRSC	107	Wiring Diagram — AT — TCCSIG	139
Diagnostic Procedure	108	Diagnostic Procedure	140
Component Inspection	109	DTC P0745 PRESSURE CONTROL SOLENOID	
DTC P0722 VEHICLE SPEED SENSOR A/T (REV-		VALVE A (LINE PRESSURE)	141
OLUTION SENSOR) CIRCUIT	110	Description	141
Description	110	On Board Diagnosis Logic	141
On Board Diagnosis Logic	110	Possible Cause	141
Possible Cause	110	DTC Confirmation Procedure	141
DTC Confirmation Procedure	110	Wiring Diagram — AT — PC/A	142
Wiring Diagram — AT — VSSATC	111	Diagnostic Procedure	143
Diagnostic Procedure	112	Component Inspection	145
Component Inspection	113	DTC P0750 SHIFT SOLENOID VALVE A	146
DTC P0726 ENGINE SPEED INPUT CIRCUIT PER-		Description	146
FORMANCE	114	On Board Diagnosis Logic	146
Description	114	Possible Cause	146
On Board Diagnosis Logic	114	DTC Confirmation Procedure	146
Possible Cause	114	Wiring Diagram — AT — SSV/A	147
DTC Confirmation Procedure	114	Diagnostic Procedure	148
Diagnostic Procedure	114	Component Inspection	150
DTC P0731 A/T 1ST GEAR FUNCTION	116	DTC P0755 SHIFT SOLENOID VALVE B	151
Description	116	Description	151
On Board Diagnosis Logic	116	On Board Diagnosis Logic	151
Possible Cause	116	Possible Cause	151
DTC Confirmation Procedure	116	DTC Confirmation Procedure	151
Wiring Diagram — AT — 1STSIG	117	Wiring Diagram — AT — SSV/B	152
Diagnostic Procedure	118	Diagnostic Procedure	153
DTC P0732 A/T 2ND GEAR FUNCTION	119	Component Inspection	155
Description	119	DTC P0760 SHIFT SOLENOID VALVE C	156
On Board Diagnosis Logic	119	Description	156
Possible Cause	119	On Board Diagnosis Logic	156
DTC Confirmation Procedure	119	Possible Cause	156
Wiring Diagram — AT — 2NDSIG	121	DTC Confirmation Procedure	156
Diagnostic Procedure	123	Wiring Diagram — AT — SSV/C	157
DTC P0733 A/T 3RD GEAR FUNCTION	124	Diagnostic Procedure	158
Description	124	Component Inspection	160
On Board Diagnosis Logic	124	DTC P0762 SHIFT SOLENOID VALVE C STUCK ON	161

Description	161	On Board Diagnosis Logic	195	
On Board Diagnosis Logic	161	Possible Cause	195	A
Possible Cause	161	DTC Confirmation Procedure	195	
DTC Confirmation Procedure	161	Wiring Diagram — AT — LVRSW	196	
Wiring Diagram — AT — SSV/CS	162	Diagnostic Procedure	197	B
Diagnostic Procedure	163	Component Inspection	198	
Component Inspection	165	DTC P0882 TCM POWER INPUT SIGNAL	199	
DTC P0765 SHIFT SOLENOID VALVE D	166	Description	199	AT
Description	166	On Board Diagnosis Logic	199	
On Board Diagnosis Logic	166	Possible Cause	199	
Possible Cause	166	DTC Confirmation Procedure	199	
DTC Confirmation Procedure	166	Wiring Diagram — AT — PWR/IN	200	D
Wiring Diagram — AT — SSV/D	167	Diagnostic Procedure	201	
Diagnostic Procedure	168	Component Inspection	202	
Component Inspection	170	DTC P1726 ELECTRIC THROTTLE CONTROL		E
DTC P0770 SHIFT SOLENOID VALVE E	171	SYSTEM	203	
Description	171	Description	203	
On Board Diagnosis Logic	171	TROUBLE DIAGNOSIS FOR SYMPTOMS	204	F
Possible Cause	171	O/D OFF Indicator Lamp Does Not Come On	204	
DTC Confirmation Procedure	171	Engine Cannot Be Started In “P” or “N” Position	206	
Wiring Diagram — AT — SSV/E	172	In “P” Position, Vehicle Moves When Pushed	206	G
Diagnostic Procedure	173	In “N” Position, Vehicle Moves	207	
Component Inspection	175	Large Shock (“N” to “D” Position)	208	
DTC P0775 PRESSURE CONTROL SOLENOID		Vehicle Does Not Creep Backward In “R” Position	209	
VALVE B (SHIFT PRESSURE)	176	Vehicle Does Not Creep Forward In “D” or “L” Position	210	H
Description	176	Vehicle Cannot Be Started From D1	211	
On Board Diagnosis Logic	176	A/T Does Not Shift: D1 → D2	211	I
Possible Cause	176	A/T Does Not Shift: D2 → D3	212	
DTC Confirmation Procedure	176	A/T Does Not Shift: D3 → D4	213	
Wiring Diagram — AT — PC/B	177	A/T Does Not Shift: D4 → D5	214	J
Diagnostic Procedure	178	A/T Does Not Perform Lock-up	215	
Component Inspection	180	A/T Does Not Hold Lock-up Condition	216	
DTC P0780 SHIFT	181	Lock-up Is Not Released	217	K
Description	181	A/T Does Not Shift: 5th gear → 4th gear, When Lever		
On Board Diagnosis Logic	181	Switch “OFF” → “ON”	218	
Possible Cause	181	A/T Does Not Shift: 4th gear → 3rd gear, When		
DTC Confirmation Procedure	181	Selector Lever “D” → “L” Position	219	L
Wiring Diagram — AT — SFTFNC	182	A/T Does Not Shift: 3rd gear → 2nd gear, When		
Diagnostic Procedure	184	Lever Switch “OFF” → “ON”	221	
DTC P0795 PRESSURE CONTROL SOLENOID		A/T Does Not Shift: 2nd gear → 1st gear, When		
VALVE C (TCC AND SHIFT PRESSURE)	185	Release Accelerator Pedal	222	M
Description	185	Vehicle Does Not Decelerate By Engine Brake	223	
On Board Diagnosis Logic	185	TCM Self-diagnosis Does Not Activate	224	
Possible Cause	185	A/T SHIFT LOCK SYSTEM	226	
DTC Confirmation Procedure	185	Description	226	
Wiring Diagram — AT — PC/C	186	Shift Lock System Electrical Parts Location	226	
Diagnostic Procedure	187	Wiring Diagram — AT — SHIFT	227	
Component Inspection	189	Diagnostic Procedure	228	
DTC P0797 PRESSURE CONTROL SOLENOID		SHIFT CONTROL SYSTEM	230	
VALVE C STUCK ON	190	Removal and Installation	230	
Description	190	KEY INTERLOCK CABLE	232	
On Board Diagnosis Logic	190	Components	232	
Possible Cause	190	Removal	232	
DTC Confirmation Procedure	190	Installation	233	
Wiring Diagram — AT — PC/CS	191	ON-VEHICLE SERVICE	234	
Diagnostic Procedure	192	Revolution Sensor Replacement	234	
Component Inspection	194	Turbine Revolution Sensor Replacement	234	
DTC P0825 LEVER SWITCH CIRCUIT	195	Park/Neutral Position (PNP) Switch Adjustment	234	
Description	195			

ATF Cooler	235	Transaxle Case Cover & B5 Brake	274
ATF Cooler Valve	235	Differential Gear Assembly	280
Control Cable Adjustment	236	ASSEMBLY	282
Side cover	237	Assembly (1)	282
Control Valve Assembly	237	Adjustment	290
Transmission wire	237	Assembly (2)	292
REMOVAL AND INSTALLATION	239	SERVICE DATA AND SPECIFICATIONS (SDS) ...	307
Removal	239	General Specifications	307
Inspection After Removal	239	Shift Schedule	307
Installation	239	Stall Speed	308
OVERHAUL	240	Line Pressure	308
Components	240	Time Lag	308
Locations of Needle Bearings, Bearing Races and		Shift Solenoid Valves	308
Thrust Washers	246	Solenoid Valves	309
DISASSEMBLY	247	Clutch, Gear and Brakes	309
Disassembly	247	Final Drive	311
REPAIR FOR COMPONENT PARTS	266	A/T Fluid Temperature Sensor	312
Oil Pump, 2nd Coast Brake & 2nd Brake	266	Turbine Revolution Sensor	312
One-Way Clutch Outer Race Sub Assembly & 2nd		Revolution Sensor	312
Coast Brake Hub & One-Way Clutch No.1	272		

INDEX FOR DTC

INDEX FOR DTC

PFP:00024

Alphabetical Index

ECS00E61

NOTE:

If DTC U1000 is displayed with other DTCs, first perform the trouble diagnosis for DTC U1000. Refer to [AT-84](#).

Items (CONSULT-II screen terms)	DTC		Reference page
	OBD-II	Except OBD-II	
	CONSULT-II GST*1	CONSULT-II only "TRANSMIS- SION"	
A/T 1ST GR FNCTN	P0731	P0731	AT-116
A/T 2ND GR FNCTN	P0732	P0732	AT-119
A/T 3RD GR FNCTN	P0733	P0733	AT-124
A/T 4TH GR FNCTN	P0734	P0734	AT-129
A/T 5TH GR FNCTN	P0735	P0735	AT-133
A/T TCC S/V FNCTN	P0744	P0744	AT-138
ATF TEMP SEN/CIRC	P0710	P0710	AT-96
CAN COMM CIRCUIT	U1000	U1000	AT-84
ELEC TH CONTROL	—	P1726	AT-203
ENG SPD INP PERFOR	—	P0726	AT-114
FLUID TEMP SEN	P0711	P0711	AT-101
GEAR LEVER SWITCH	—	P0825	AT-195
PC SOL A(L/PRESS)	P0745	P0745	AT-141
PC SOL B(SFT/PRS)	P0775	P0775	AT-176
PC SOL C(TCC&SFT)	P0795	P0795	AT-185
PC SOL C STC ON	P0797	P0797	AT-190
PNP SW/CIRC	P0705	P0705	AT-91
SHIFT	P0780	P0780	AT-181
SHIFT SOL A	P0750	P0750	AT-146
SHIFT SOL B	P0755	P0755	AT-151
SHIFT SOL C	P0760	P0760	AT-156
SHIFT SOL D	P0765	P0765	AT-166
SHIFT SOL E	P0770	P0770	AT-171
SFT SOL C STUCK ON	P0762	P0762	AT-161
TCM POWER INPT SIG	P0882	P0882	AT-199
TCM PROCESSOR	—	P0613	AT-89
TURBINE SENSOR	P0717	P0717	AT-106
VEH SPD SE/CIR-MTR	—	P0500	AT-87
VHCL SPEED SEN-A/T	P0722	P0722	AT-110

*1: These numbers are prescribed by SAE J2012.

INDEX FOR DTC

ECS00E62

DTC No. Index

NOTE:

If DTC U1000 is displayed with other DTCs, first perform the trouble diagnosis for DTC U1000. Refer to [AT-84](#).

DTC		Items (CONSULT-II screen terms)	Reference page
OBD-II	Except OBD-II		
CONSULT-II GST*1	CONSULT-II only "TRANSMIS- SION"		
—	P0500	VEH SPD SE/CIR-MTR	AT-87
—	P0613	TCM PROCESSOR	AT-89
P0705	P0705	PNP SW/CIRC	AT-91
P0710	P0710	ATF TEMP SEN/CIRC	AT-96
P0711	P0711	FLUID TEMP SEN	AT-101
P0717	P0717	TURBINE SENSOR	AT-106
P0722	P0722	VHCL SPEED SEN-A/T	AT-110
—	P0726	ENG SPD INP PERFOR	AT-114
P0731	P0731	A/T 1ST GR FNCTN	AT-116
P0732	P0732	A/T 2ND GR FNCTN	AT-119
P0733	P0733	A/T 3RD GR FNCTN	AT-124
P0734	P0734	A/T 4TH GR FNCTN	AT-129
P0735	P0735	A/T 5TH GR FNCTN	AT-133
P0744	P0744	A/T TCC S/V FNCTN	AT-138
P0745	P0745	PC SOL A(L/PRESS)	AT-141
P0750	P0750	SHIFT SOL A	AT-146
P0755	P0755	SHIFT SOL B	AT-151
P0760	P0760	SHIFT SOL C	AT-156
P0762	P0762	SFT SOL C STUCK ON	AT-161
P0765	P0765	SHIFT SOL D	AT-166
P0770	P0770	SHIFT SOL E	AT-171
P0775	P0775	PC SOL B(SFT/PRS)	AT-176
P0780	P0780	SHIFT	AT-181
P0795	P0795	PC SOL C(TCC&SFT)	AT-185
P0797	P0797	PC SOL C STC ON	AT-190
—	P0825	GEAR LEVER SWITCH	AT-195
P0882	P0882	TCM POWER INPT SIG	AT-199
—	P1726	ELEC TH CONTROL	AT-203
U1000	U1000	CAN COMM CIRCUIT	AT-84

*1: These numbers are prescribed by SAE J2012.

PRECAUTIONS

PRECAUTIONS

PFP:00001

Precautions for Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER”

ECS00E63

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER”, used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

Precautions for On Board Diagnostic (OBD) System of A/T and Engine

ECS00E64

The ECM has an on board diagnostic system. It will light up the malfunction indicator lamp (MIL) to warn the driver of a malfunction causing emission deterioration.

CAUTION:

- Be sure to turn the ignition switch “OFF” and disconnect the negative battery cable before any repair or inspection work. The open/short circuit of related switches, sensors, solenoid valves, etc. will cause the MIL to light up.
- Be sure to connect and lock the connectors securely after work. A loose (unlocked) connector will cause the MIL to light up due to an open circuit. (Be sure the connector is free from water, grease, dirt, bent terminals, etc.)
- Be sure to route and secure the harnesses properly after work. Interference of the harness with a bracket, etc. may cause the MIL to light up due to a short circuit.
- Be sure to connect rubber tubes properly after work. A misconnected or disconnected rubber tube may cause the MIL to light up due to a malfunction of the EGR system or fuel injection system, etc.
- Be sure to erase the unnecessary malfunction information (repairs completed) from the TCM and ECM before returning the vehicle to the customer.

PRECAUTIONS

ECS00E65

Precautions for A/T Assembly or TCM Replacement

- When replacing A/T assembly or TCM, refer to the pattern table below and initialize TCM if necessary.

TCM INITIALIZATION PATTERNS

TCM	A/T assembly	Erasing EEPROM in TCM	Remarks
Replaced with new one	Not replaced	Not required	Not required because the EEPROM in TCM is in the default state.
	Replaced with new or old one		
Not replaced	Replaced with new or old one	Required	Required because data cannot be conformed to previous data written in the EEPROM in TCM.
Replaced with old one	Not replaced		
	Replaced with new or old one		

NOTE:

"Old one" is the TCM or A/T assembly that has been used on other vehicles.

METHOD FOR TCM INITIALIZATION

1. Perform "CONSULT-II START PROCEDURE". Refer to [GI-37, "CONSULT-II Start Procedure"](#).
2. Set the vehicle following the items listed below.
 - Ignition switch "ON".
 - Selector lever "P" or "N" position.
 - Engine not running.
 - Vehicle speed is 0km/h (0 MPH).
 - Ignition voltage is more than 10.5V.
 - Malfunction was not detected.
3. Touch "WORK SUPPORT".
4. Touch "INITIALIZATION".
5. Initialize TCM following the direction in display.

PRECAUTIONS


ECS00E66

Precautions


NOTE:

Do not remove or disassemble any RE5F22A model transaxle parts unless specified to do so in AT section.


- Before connecting or disconnecting the TCM harness connector, turn ignition switch "OFF" and disconnect negative battery cable. Because battery voltage is applied to TCM even if ignition switch is turned "OFF".

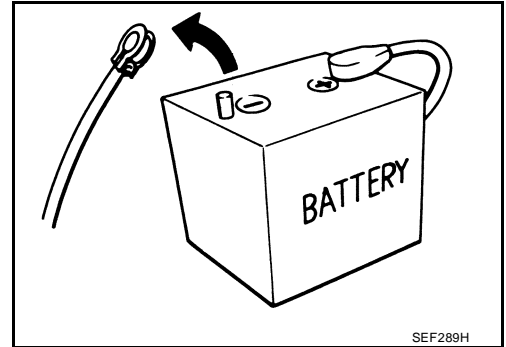


- When connecting or disconnecting pin connectors into or from TCM, take care not to damage pin terminals (bend or break). Make sure that there are not any bends or breaks on TCM pin terminal, when connecting pin connectors.

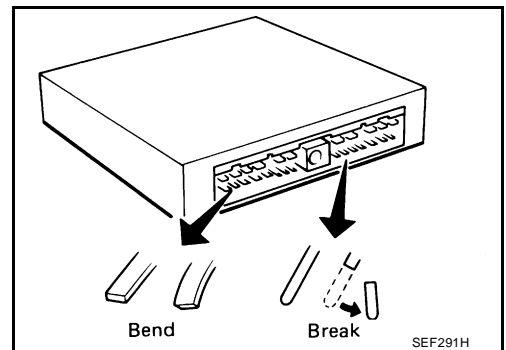

- Before replacing TCM, perform TCM input/output signal inspection and make sure whether TCM functions properly or not. [AT-73, "TCM INSPECTION TABLE"](#).

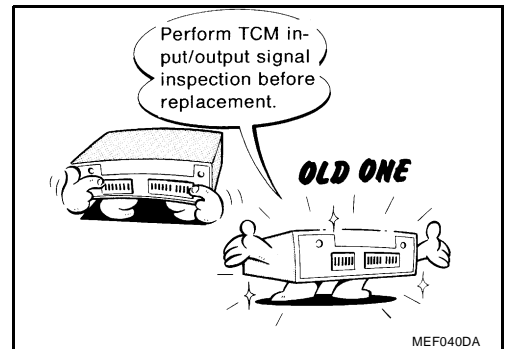

- After performing each TROUBLE DIAGNOSIS, perform "DTC (Diagnostic Trouble Code) CONFIRMATION PROCEDURE". The DTC should not be displayed in the "DTC CONFIRMATION PROCEDURE" if the repair is completed.

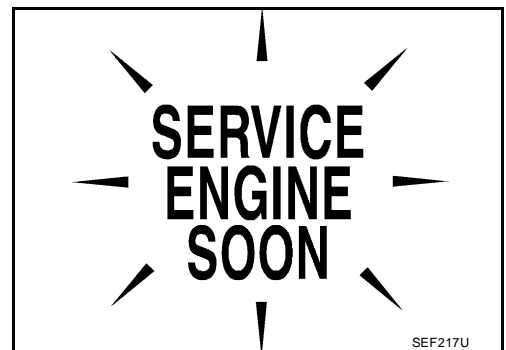

- Always use the specified brand of A/T fluid. Refer to [MA-9, "Fluids and Lubricants"](#).
- Use paper rags not cloth rags during work.
- After replacing the A/T fluid, dispose of the waste oil using the methods prescribed by law, ordinance, etc.

PRECAUTIONS

- Before proceeding with disassembly, thoroughly clean the outside of the transaxle. It is important to prevent the internal parts from becoming contaminated by dirt or other foreign matter.
- Disassembly should be done in a clean work area.
- Use lint-free cloth or towels for wiping parts clean. Common shop rags can leave fibers that could interfere with the operation of the transaxle.
- Place disassembled parts in order for easier and proper assembly.
- All parts should be carefully cleaned with a general purpose, non-flammable solvent before inspection or reassembly.
- Gaskets, seals and O-rings should be replaced any time the transaxle is disassembled.
- It is very important to perform functional tests whenever they are indicated.
- The valve body contains precision parts and requires extreme care when parts are removed and serviced. Place disassembled valve body parts in order for easier and proper assembly. Care will also prevent springs and small parts from becoming scattered or lost.
- Properly installed valves, sleeves, plugs, etc. will slide along bores in valve body under their own weight.
- Before assembly, apply a coat of recommended ATF to all parts. Apply petroleum jelly to protect O-rings and seals, or hold bearings and washers in place during assembly. Do not use grease.
- Extreme care should be taken to avoid damage to O-rings, seals and gaskets when assembling.
- After overhaul, refill the transaxle with new ATF.
- When the A/T drain plug is removed, only some of the fluid is drained. Old A/T fluid will remain in torque converter and ATF cooling system.
Always follow the procedures under "Changing A/T Fluid" in the AT section when changing A/T fluid. Refer to [AT-14, "Changing A/T Fluid"](#) , [AT-14, "Checking A/T Fluid"](#) .

Service Notice or Precautions

ECS00E67

ATF COOLER SERVICE

If A/T fluid contains frictional material (clutches, bands, etc.), or if an A/T is repaired, overhauled, or replaced, inspect and clean the A/T fluid cooler mounted in the radiator or replace the radiator. Flush cooler lines using cleaning solvent and compressed air after repair. For A/T fluid cooler cleaning procedure, refer to [AT-15, "A/T Fluid Cooler Cleaning"](#) . For radiator replacement, refer to [CO-15, "RADIATOR"](#) .

OBD-II SELF-DIAGNOSIS

- A/T self-diagnosis is performed by the TCM in combination with the ECM. The results can be read through the blinking pattern of the O/D OFF indicator or the malfunction indicator lamp (MIL). Refer to the table on [AT-75, "SELF-DIAG RESULT MODE"](#) for the indicator used to display each self-diagnostic result.
- The self-diagnostic results indicated by the MIL are automatically stored in both the ECM and TCM memories.
Always perform the procedure on [AT-41, "HOW TO ERASE DTC"](#) to complete the repair and avoid unnecessary blinking of the MIL.
- For details of OBD-II, refer to [AT-40, "ON BOARD DIAGNOSTIC \(OBD\) SYSTEM"](#) .
- **Certain systems and components, especially those related to OBD, may use the new style slide-locking type harness connector. For description and how to disconnect, refer to [PG-76, "HARNESS CONNECTOR"](#) .**

PREPARATION






PREPARATION

PFP:00002

Special Service Tools

ECS00E69

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

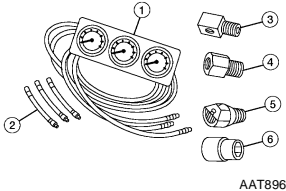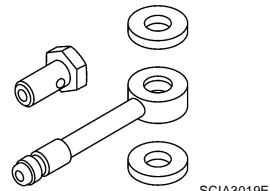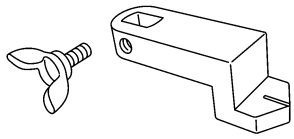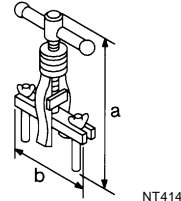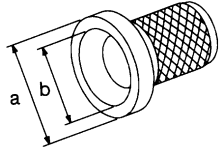Tool number (Kent-Moore No.) Tool name	Description
<p>— (J-34301-C) Oil pressure gauge set 1 — (J-34301-1) Oil pressure gauge 2 — (J-34301-2) Hoses 3 — (J-34298) Adapter 4 — (J-34282-2) Adapter 5 — (790-301-1230-A) 60° Adapter 6 — (J-34301-15) Square socket</p>	<p>Measuring line pressure</p>  <p style="text-align: right;">AAT896</p>
<p>KV311J0010 (J-45542) Adapter</p>	<p>Measuring line pressure</p>  <p style="text-align: right;">SCIA3019E</p>
<p>KV911J0060 (J-45404) Alignment tool</p>	<p>Adjusting park/neutral position (PNP) switch</p>  <p style="text-align: right;">SCIA3018E</p>
<p>ST33290001 (J-34286) Puller</p>	<ul style="list-style-type: none"> ● Removing oil pump assembly ● Removing thrust roller bearing <p>a: 250 mm(9.84 in) b: 160 mm(6.30 in)</p>  <p style="text-align: right;">NT414</p>
<p>ST33400001 (J-26082) Drift</p>	<p>Installing differential side oil seals</p> <p>a: 60 mm(2.36 in) dia. b: 74 mm(1.85 in) dia.</p>  <p style="text-align: right;">NT086</p>

A

B

AT

D

E

F

G

H

I








J

K



L

M

PREPARATION

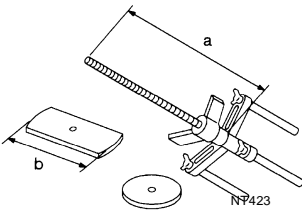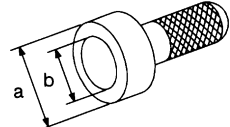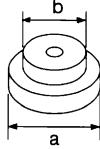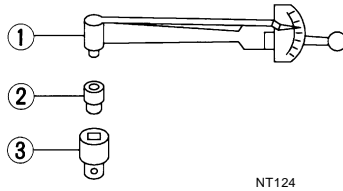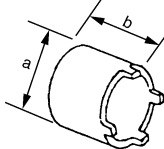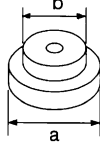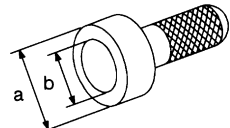Tool number (Kent-Moore No.) Tool name	Description
KV31102400 (J-34285 and J-34285-87) Clutch spring compressor <div style="text-align: center;">  <p style="text-align: right; font-size: small;">NT423</p> </div>	Removing and installing return springs a: 320 mm(12.60 in) b: 174 mm(6.85 in)
ST30720000 (J-25405) Drift <div style="text-align: center;">  <p style="text-align: right; font-size: small;">NT115</p> </div>	<ul style="list-style-type: none"> ● Installing oil seal ● Installing thrust roller bearing a: 77 mm(3.03 in) dia. b: 55.5 mm(2.185 in) dia.
ST30612000 (J-25742-2) Drift <div style="text-align: center;">  <p style="text-align: right; font-size: small;">NT073</p> </div>	Removing outer race and adjust shim a: 62 mm(2.44 in) dia. b: 40 mm(1.57 in) dia.
ST3127S000 (J-25765-A) Preload gauge 1 GG91030000 (J-25765-A) Torque wrench 2 HT62940000 (—) Socket adapter 3 HT62900000 (—) Socket adapter <div style="text-align: center;">  <p style="text-align: right; font-size: small;">NT124</p> </div>	Checking differential side bearing preload
KV40102500 (J-28815) Drift <div style="text-align: center;">  <p style="text-align: right; font-size: small;">SCIA5517E</p> </div>	a: 60 mm(2.362 in) dia. b: 45 mm(1.772 in)
ST33061000 (J-8107-2) Drift <div style="text-align: center;">  <p style="text-align: right; font-size: small;">NT073</p> </div>	<ul style="list-style-type: none"> ● Removing tapered roller bearing ● Installing manual valve oil seal a: 38 mm(1.496 in) dia. b: 28.5 mm(1.122 in) dia.
KV38100500 (—) Drift a:80 mm(3.15 in) dia. b:60 mm(2.362 in) dia. <div style="text-align: center;">  <p style="text-align: right; font-size: small;">NT115</p> </div>	Installing tapered roller bearing




PREPARATION

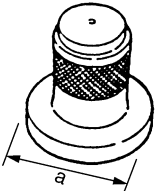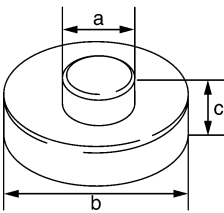Tool number (Kent-Moore No.) Tool name	Description
KV40100621 (J-25273) Drift  <small>SCIA5518E</small>	Installing outer race and adjust shim a: 76 mm(2.992 in) dia.
ST30022000 (—) Drift  <small>SCIA5519E</small>	a: 56 mm(2.205 in) dia. b: 110 mm(4.331 in) dia. c: 15 mm(0.591 in)

A
B
AT
D
E
F
G
H
I
J
K
L
M

Commercial Service Tools

ECS00E6A

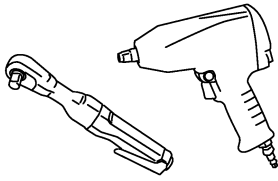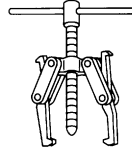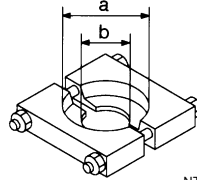Tool name	Description
Power tool  <small>PBIC0190E</small>	Loosening bolts and nuts
Puller  <small>NT077</small>	Removing tapered roller bearing
Puller  <small>NT411</small>	a: 60 mm(2.36 in) dia. b: 35 mm(1.38 in) dia.

A/T FLUID

PFPP:KLE40

Changing A/T Fluid

ECS00E6B

1. Run the engine to warm up the transaxle until the fluid is at full operating temperature "HOT".


Temperature range

COLD : 30° – 40° C (86° – 104° F)

HOT : 70° – 80° C (158° – 176° F)

2. Stop the engine.
3. Remove the engine undercover.
4. Drain the A/T fluid by removing the drain plug. Reinstall the drain plug to the specified tightness using a new drain washer.

Drain plug : 39 N·m (4.0 kg·m, 29 ft·lb)

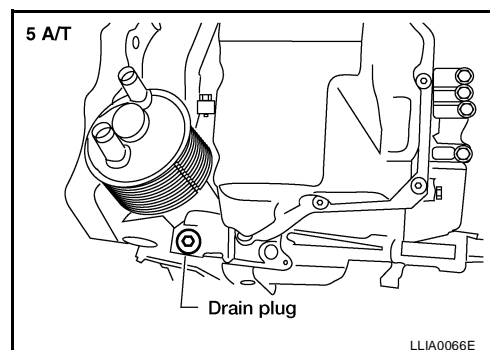

5. Refill the transaxle with new specified A/T fluid through the A/T fluid charging pipe. Always refill the transaxle with the same volume amount that was drained out.

Fluid grade and capacity : Refer to [MA-9, "RECOMMENDED FLUIDS AND LUBRICANTS"](#) .

CAUTION:

Do not overfill the transaxle.

6. Run the engine at idle speed for five minutes.
7. Check fluid level and condition. Refer to [MA-23, "Checking A/T Fluid"](#) . If the fluid is still contaminated, repeat step 2 through 5.

Checking A/T Fluid

ECS00E6C


1. Warm up the engine.
2. Check for any transaxle fluid leaks.
3. Before driving, the fluid level can be checked at fluid temperature using the "COLD" range on the A/T fluid level gauge.

Temperature range

COLD : 30° – 40° C (86° – 104° F)

HOT : 70° – 80° C (158° – 176° F)

- a. Park the vehicle on a level surface and set parking brake.
- b. Start the engine and move the transaxle selector lever through each gear position. Leave the selector lever in the "P" park position.

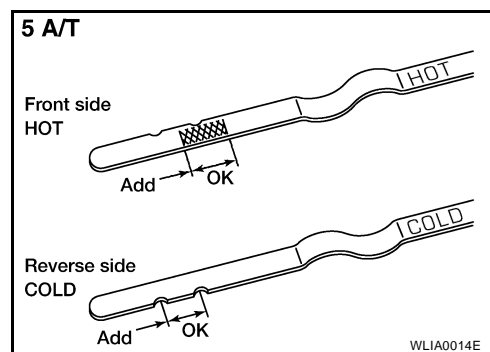


- c. Check the fluid level with the engine idling.

CAUTION:

Firmly secure the A/T fluid level gauge into the A/T fluid charging pipe using the attached stopper, this will provide an accurate reading on the gauge.

- d. Remove the A/T fluid level gauge and wipe it clean with a lint-free paper.
- e. Re-insert the A/T fluid level gauge into the charging pipe as far as it will go.

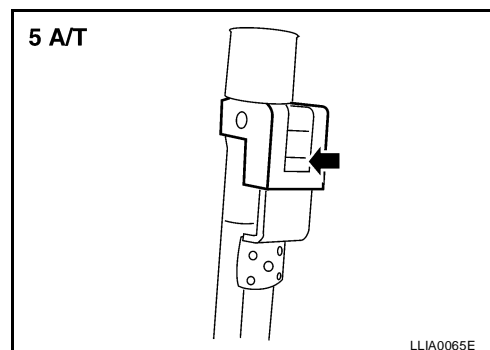

A/T FLUID

- f. Remove the A/T fluid level gauge and note the reading. If the reading is at or below the low side of the range, add the necessary specified A/T fluid through the A/T fluid charging pipe and then re-insert the A/T fluid level gauge.

CAUTION:

- Do not overfill the transaxle.
- Firmly secure the A/T fluid level gauge into the A/T fluid charging pipe using the attached stopper, this will provide an accurate reading on the gauge, and will keep the gauge in position while driving.

4. Drive the vehicle for approximately 5 minutes at moderate speeds.
5. Re-check the fluid level at fluid temperatures using the "HOT" range on the A/T fluid level gauge.

CAUTION:



Firmly secure the A/T fluid level gauge into the A/T fluid charging pipe using the attached stopper, this will provide an accurate reading on the gauge, and will keep the gauge in position while driving.

Temperature range

COLD : 30° – 40° C (86° – 104° F)

HOT : 70° – 80° C (158° – 176° F)

6. Check the fluid for the following conditions:
- If the fluid is very dark or smells burned, refer to the AT section for checking the operation of the transaxle. Flush the AT fluid cooling system after repairing the transaxle.
 - If the fluid contains frictional material (from the clutches or bands), remove the radiator and flush the cooler lines using a cleaning solvent and compressed air after completing repairs to the transaxle. Refer to [CO-15, "RADIATOR"](#).

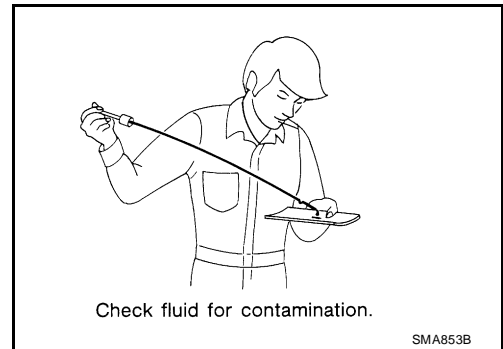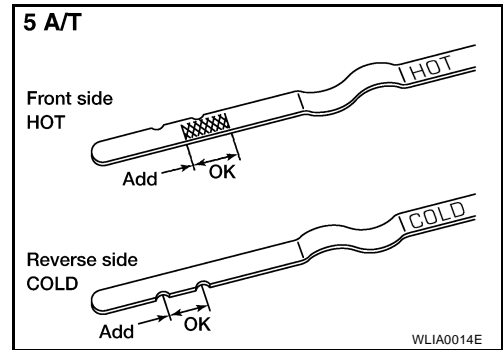

A/T Fluid Cooler Cleaning

ECS00E6D

Whenever an automatic transaxle is repaired, overhauled, or replaced, the A/T fluid cooler mounted in the radiator must be inspected and cleaned.

Metal debris and friction material, if present, can become trapped in the A/T fluid cooler. This debris can contaminate the newly serviced A/T or, in severe cases, can block or restrict the flow of A/T fluid. In either case, malfunction of the newly serviced A/T may result.

Debris, if present, may build up as A/T fluid enters the cooler inlet. It will be necessary to back flush the cooler through the cooler outlet in order to flush out any built up debris.


A/T FLUID COOLER CLEANING PROCEDURE

1. Position an oil pan under the automatic transaxle's inlet and outlet cooler hoses.
2. Identify the inlet and outlet fluid cooler hoses.
3. Disconnect the fluid cooler inlet and outlet rubber hoses from the steel cooler tubes or bypass valve.

NOTE:

Replace the cooler hoses if rubber material from the hose remains on the tube fitting.

4. Allow any A/T fluid that remains in the cooler hoses to drain into the oil pan.

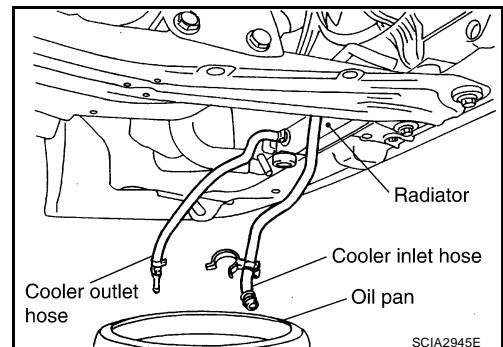



A/T FLUID

5. Insert the extension adapter hose of a can of Transmission Cooler Cleaner (Nissan P/N 999MP-AM006) into the cooler outlet hose.

CAUTION:

- Wear safety glasses and rubber gloves when spraying the Transmission Cooler Cleaner.
- Spray cooler cleaner only with adequate ventilation.
- Avoid contact with eyes and skin.
- Do not breath vapors or spray mist.

6. Hold the hose and can as high as possible and spray Transmission Cooler Cleaner in a continuous stream into the cooler outlet hose until fluid flows out of the cooler inlet hose for 5 seconds.
7. Insert the tip of an air gun into the end of the cooler outlet hose.
8. Wrap a shop rag around the air gun tip and of the cooler outlet hose.

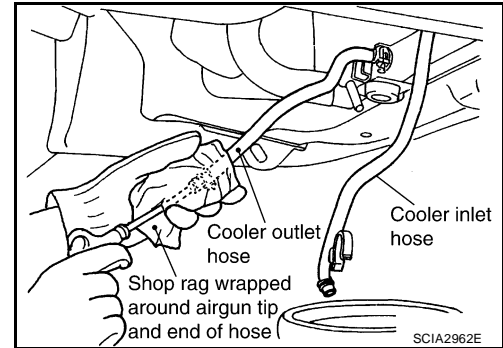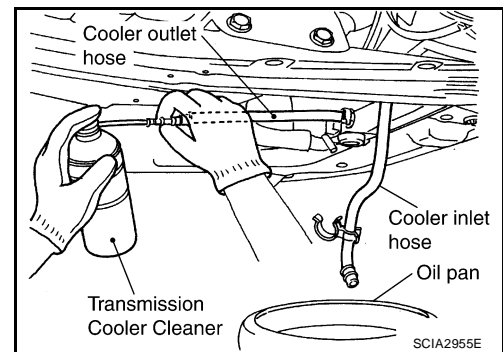

9. Blow compressed air regulated to 5 - 9 kg/cm² (70 - 130 psi) through the cooler outlet hose for 10 seconds to force out any remaining fluid.
10. Repeat steps 5 through 9 three additional times.
11. Position an oil pan under the banjo bolts that connect the fluid cooler steel lines to the transaxle.
12. Remove the banjo bolts.
13. Flush each steel line from the cooler side back toward the transaxle by spraying Transmission Cooler Cleaner in a continuous stream for 5 seconds.
14. Blow compressed air regulated to 5 - 9 kg/cm² (70 - 130 psi) through each steel line from the cooler side back toward the transaxle for 10 seconds to force out any remaining fluid.
15. Ensure all debris is removed from the steel cooler lines.
16. Ensure all debris is removed from the banjo bolts and fittings.
17. Perform [AT-16, "A/T FLUID COOLER DIAGNOSIS PROCEDURE"](#).

A/T FLUID COOLER DIAGNOSIS PROCEDURE

NOTE:


Insufficient cleaning of the cooler inlet hose exterior may lead to inaccurate debris identification.

1. Position an oil pan under the automatic transaxle's inlet and outlet cooler hoses.
2. Clean the exterior and tip of the cooler inlet hose.
3. Insert the extension adapter hose of a can of Transmission Cooler Cleaner (Nissan P/N 999MP-AM006) into the cooler outlet hose.

CAUTION:


- Wear safety glasses and rubber gloves when spraying the Transmission Cooler Cleaner.
- Spray cooler cleaner only with adequate ventilation.
- Avoid contact with eyes and skin.
- Do not breath vapors or spray mist.

4. Hold the hose and can as high as possible and spray Transmission Cooler Cleaner in a continuous stream into the cooler outlet hose until fluid flows out of the cooler inlet hose for 5 seconds.

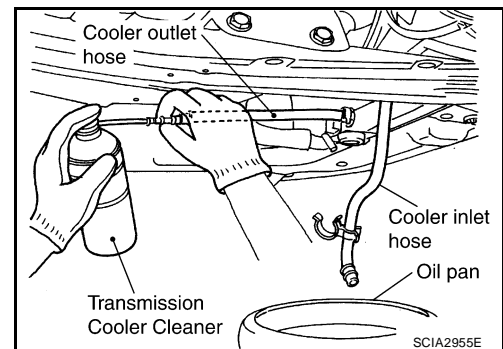


A/T FLUID

5. Tie a common white, basket-type coffee filter to the end of the cooler inlet hose.


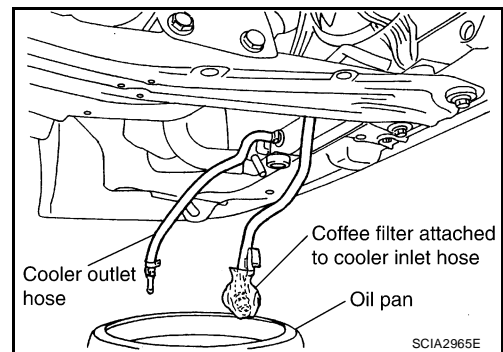


6. Insert the tip of an air gun into the end of the cooler outlet hose.
7. Wrap a shop rag around the air gun tip and end of cooler outlet hose.
8. Blow compressed air regulated to 5 - 9 kg/cm² (70 - 130 psi) through the cooler outlet hose to force any remaining A/T fluid into the coffee filter.
9. Remove the coffee filter from the end of the cooler inlet hose.
10. Perform [AT-17, "A/T FLUID COOLER INSPECTION PROCEDURE"](#).

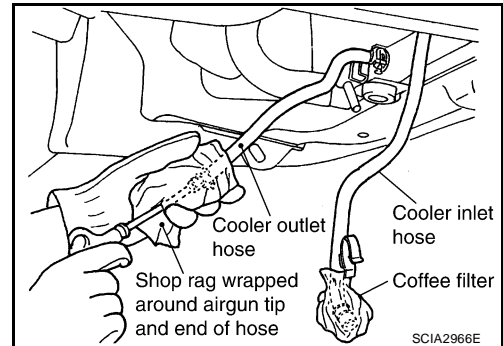

A/T FLUID COOLER INSPECTION PROCEDURE

1. Inspect the coffee filter for debris.
 - a. If small metal debris less than 1mm (0.040 in) in size or metal powder is found in the coffee filter, this is normal. If normal debris is found, the A/T fluid cooler/radiator can be re-used and the procedure is ended.
 - b. If one or more pieces of debris are found that are over 1mm (0.040in) in size and/or peeled clutch facing material is found in the coffee filter, the fluid cooler is not serviceable. The radiator/ fluid cooler must be replaced and the inspection procedure is ended.

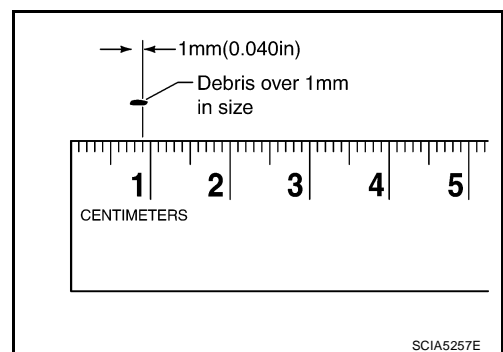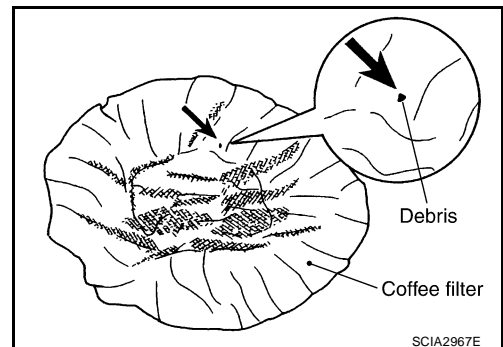

A/T FLUID COOLER FINAL INSPECTION

After performing all procedures, ensure that all remaining oil is cleaned from all components.


A/T CONTROL SYSTEM

A/T CONTROL SYSTEM

PFP:31036

Cross-Sectional View

ECS00E6E

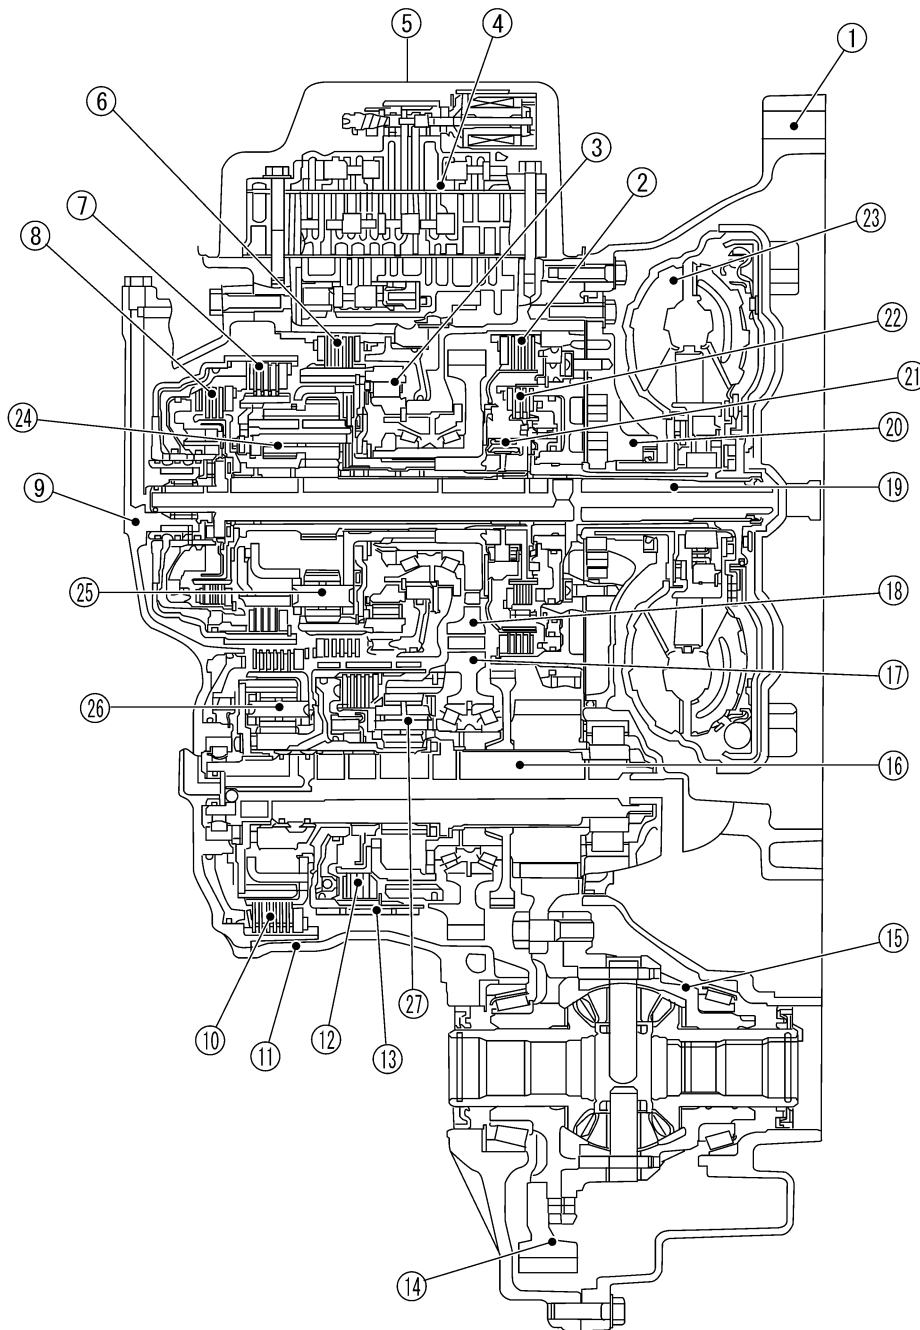


- | | | |
|-------------------------------|-----------------------------|------------------------------|
| 1. Converter housing | 2. 2nd brake | 3. One-way clutch No. 2 |
| 4. Control valve assembly | 5. Side cover | 6. 1st and reverse brake |
| 7. Forward clutch | 8. Direct clutch | 9. Transaxle case cover |
| 10. B5 brake | 11. Transaxle case | 12. U/D clutch |
| 13. U/D brake | 14. Final gear | 15. Differential case |
| 16. Output shaft | 17. Counter driven gear | 18. Counter drive gear |
| 19. Input shaft | 20. Oil pump | 21. One-way clutch No. 1 |
| 22. 2nd coast brake | 23. Torque converter | 24. Main rear planetary gear |
| 25. Main front planetary gear | 26. U/D rear planetary gear | 27. U/D front planetary gear |

SCIA2575E

A/T CONTROL SYSTEM

ECS00E6F

Shift Mechanism CONSTRUCTION

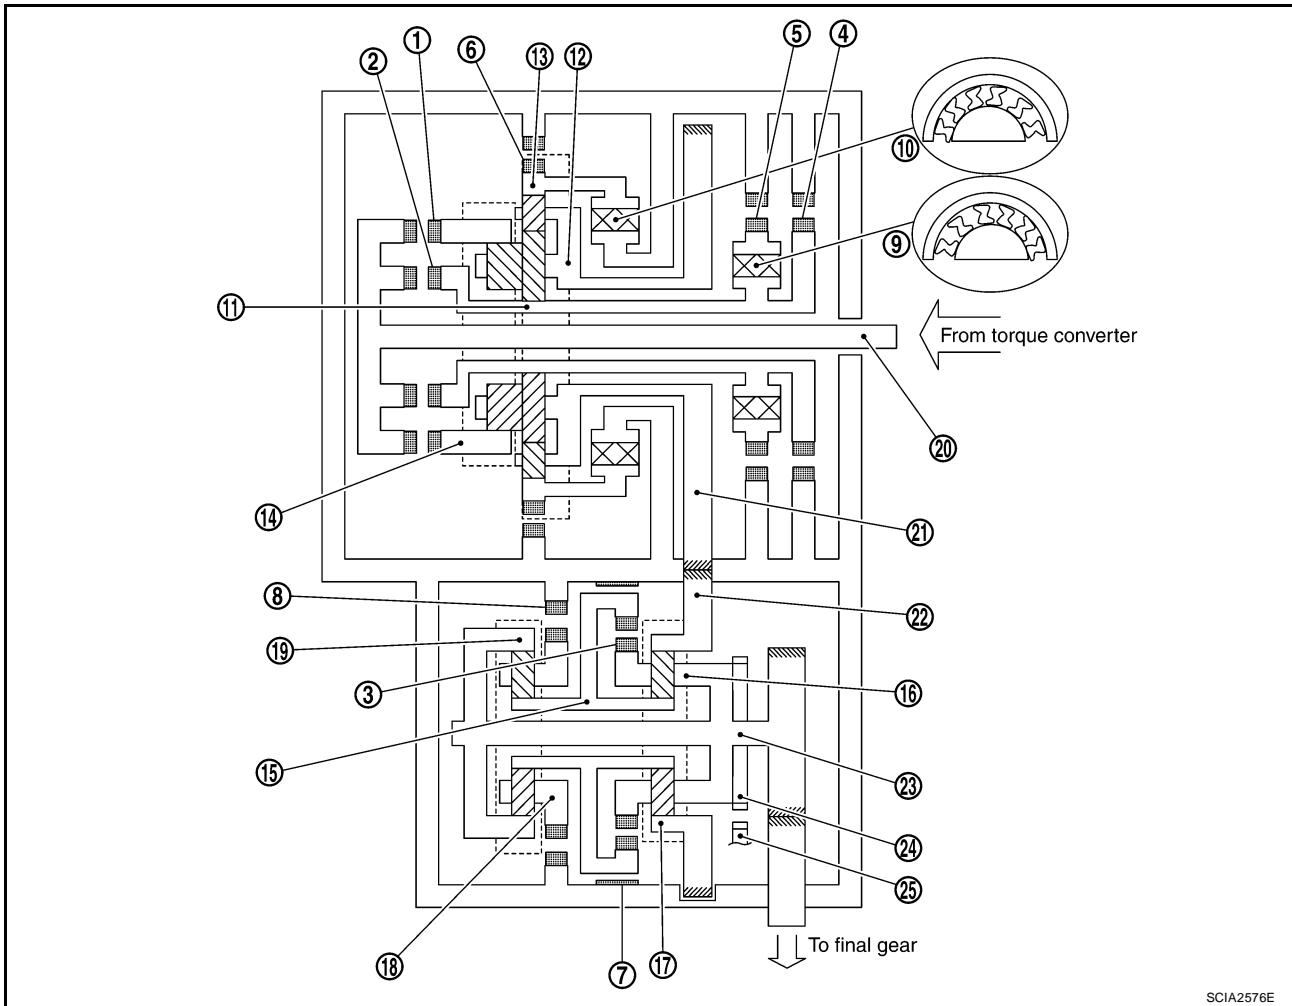

- | | | |
|---------------------------------|-----------------------------|--------------------------------|
| 1. Forward clutch | 2. Direct clutch | 3. U/D clutch |
| 4. 2nd coast brake | 5. 2nd brake | 6. 1st and reverse brake |
| 7. U/D brake | 8. B5 brake | 9. One-way clutch No. 1 |
| 10. One-way clutch No. 2 | 11. Main sun gear | 12. Main planetary carrier |
| 13. Main front internal gear | 14. Main rear internal gear | 15. U/D sun gear |
| 16. U/D front planetary carrier | 17. U/D front internal gear | 18. U/D rear planetary carrier |
| 19. U/D rear internal gear | 20. Input shaft | 21. Counter drive gear |
| 22. Counter driven gear | 23. Output shaft | 24. Parking gear |
| 25. Parking pawl | | |

SCIA2576E

A
B
AT
D
E
F
G
H
I
J
K
L
M

A/T CONTROL SYSTEM

FUNCTION OF CLUTCH AND BRAKE

Clutch and brake components	Abbr.	Function
Forward clutch 1	F/C	Connect input shaft 20 to main rear internal gear 10 .
Direct clutch 2	D/C	Connect input shaft 20 to main sun gear 11 .
U/D clutch 3	U/D.C	Connect U/D sun gear 15 to U/D front planetary carrier 16 .
2nd coast brake 4	2nd C/B	Lock main sun gear 11 .
2nd brake 5	2nd/B	Lock counterclockwise rotation of main sun gear 11 .
1st and reverse brake 6	1st & R/B	Lock main front internal gear 13 .
U/D brake 7	U/D.B	Lock U/D sun gear 15 .
B5 brake 8	B5/B	Lock U/D rear planetary carrier 18 .
One-way clutch No. 1 9	O.C1	Lock counterclockwise rotation of main sun gear 11 , when 2nd brake 5 operations.
One-way clutch No. 2 10	O.C2	Lock counterclockwise rotation of main front internal gear 13 .

CLUTCH AND BAND CHART

Shift position	Clutch			Brake					One-way clutch		Remarks
	F/C 1	D/C 2	U/D.C 3	2nd C/ B 4	2nd/B 5	1st & R/B 6	U/D.B 7	B5/B 8	O.C1 9	O.C2 10	
P								○			PARK POSITION
R		○				○		○			REVERSE POSITION
N								○			NEUTRAL POSITION
D*1	1st	○						○		○	Automatic shift 1 ↔ 2 ↔ 3 ↔ 4 ↔ 5
	1 ↔ 2	○		△	△			○	△	△	
	2nd	○		○	○			○	○		
	2 ↔ 3	○		○	○		△	△	○		
	3rd	○		○	○		○		○		
	3 ↔ 4	○		△	○	○	△		○		
	4th	○		○	○	○			○		
	4 ↔ 5	○	△	○	△	○			△		
L*2	1st	○						○		○	Automatic shift 1 ↔ 2 ↔ 3
	1 ↔ 2	○		△	△			○	△	△	
	2nd	○		○	○			○	○		
	2 ↔ 3	○		○	○		△	△	○		
	3rd	○		○	○		○		○		

○: Operates

△: In transition between applied and released.

*1: A/T will not shift to 5th when lever switch is pushed (indicated A/T indicator "4").

*2: A/T will not shift to 3th when lever switch is pushed (indicated A/T indicator "2").

NOTE:

When shifting D to L position or lever switch pushes (indicated A/T indicator "4" at D position or "2" at L position), down shift permission control is activated. Refer to [AT-37, "Down Shift Permission Control"](#) .

A/T CONTROL SYSTEM


POWER TRANSMISSION

“N” position

Since both the forward clutch and the direct clutch are released, torque from the input shaft drive is not transmitted to the output shaft.

“P” position

- The same as for the “N” position, both the forward clutch and the direct clutch are released, so torque from the input shaft drive is not transmitted to the output shaft.
- The parking pole linked with the selector lever meshes with the parking gear and fastens the output shaft mechanically.

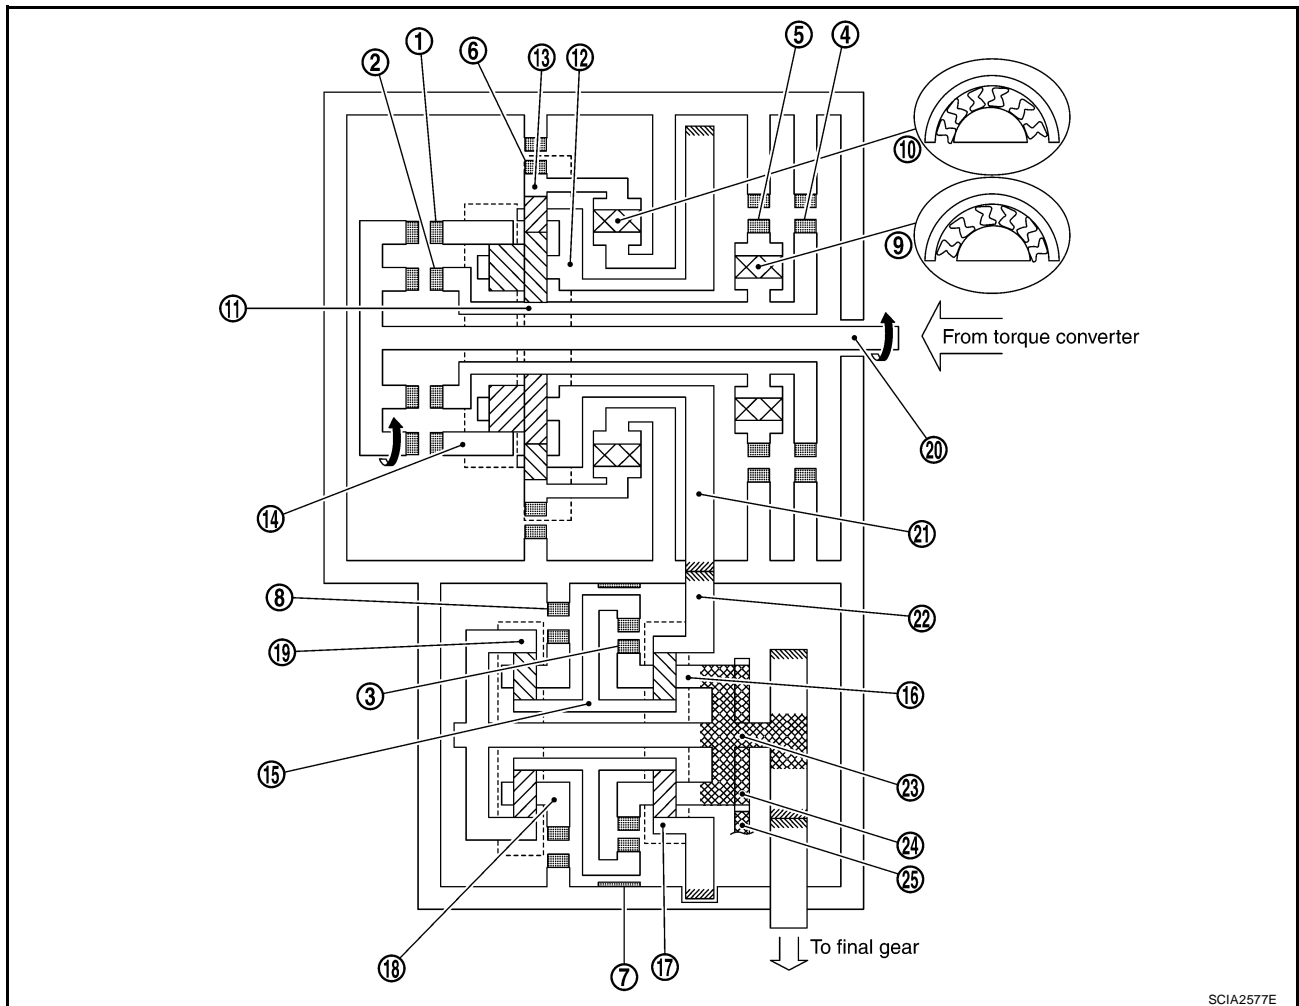

- | | | |
|---------------------------------|-----------------------------|--------------------------------|
| 1. Forward clutch | 2. Direct clutch | 3. U/D clutch |
| 4. 2nd coast brake | 5. 2nd brake | 6. 1st and reverse brake |
| 7. U/D brake | 8. B5 brake | 9. One-way clutch No. 1 |
| 10. One-way clutch No. 2 | 11. Main sun gear | 12. Main planetary carrier |
| 13. Main front internal gear | 14. Main rear internal gear | 15. U/D sun gear |
| 16. U/D front planetary carrier | 17. U/D front internal gear | 18. U/D rear planetary carrier |
| 19. U/D rear internal gear | 20. Input shaft | 21. Counter drive gear |
| 22. Counter driven gear | 23. Output shaft | 24. Parking gear |
| 25. Parking pawl | | |


SCIA2577E

A/T CONTROL SYSTEM

“D”, “L” positions 1st gear

1. Input shaft rotates clockwise.
 2. Forward clutch operates. (Connect input shaft to main rear internal gear.)
 3. Main rear internal gear rotates clockwise.
 4. Main rear planetary pinion gear rotates itself clockwise.
 5. Main front large planetary pinion gear rotates itself clockwise for rear planetary pinion and one.
 6. Main front small planetary pinion gear rotates itself counterclockwise.
 7. Main front internal gear is going to rotates counterclockwise.
 8. One-way clutch No. 2 operates. (Lock counterclockwise rotation of main front internal gear.)
 9. Main planetary carrier revolves clockwise due to reaction force of front small planetary pinion gear.
 10. Counter drive gear rotates clockwise for main planetary carrier and one.
 11. Counter driven gear rotates counterclockwise.
 12. U/D front internal gear rotates counterclockwise for counter driven gear and one.
 13. U/D front planetary pinion gear rotates itself counterclockwise.
 14. U/D sun gear rotates clockwise.
 15. U/D rear planetary pinion gear rotates itself counterclockwise.
 16. B5 brake operate. (Lock rotation of U/D rear planetary carrier.)
 17. U/D rear internal gear rotates counterclockwise.
 18. U/D front planetary carrier and output shaft rotates counterclockwise for U/D rear internal gear and one.
 19. Final gear clockwise.
- During deceleration, main front internal gear clockwise due to rotation itself clockwise of main front small planetary pinion gear, but driving force loses due to free of one-way clutch No. 2. Therefore, engine brake does not operate.

A/T CONTROL SYSTEM

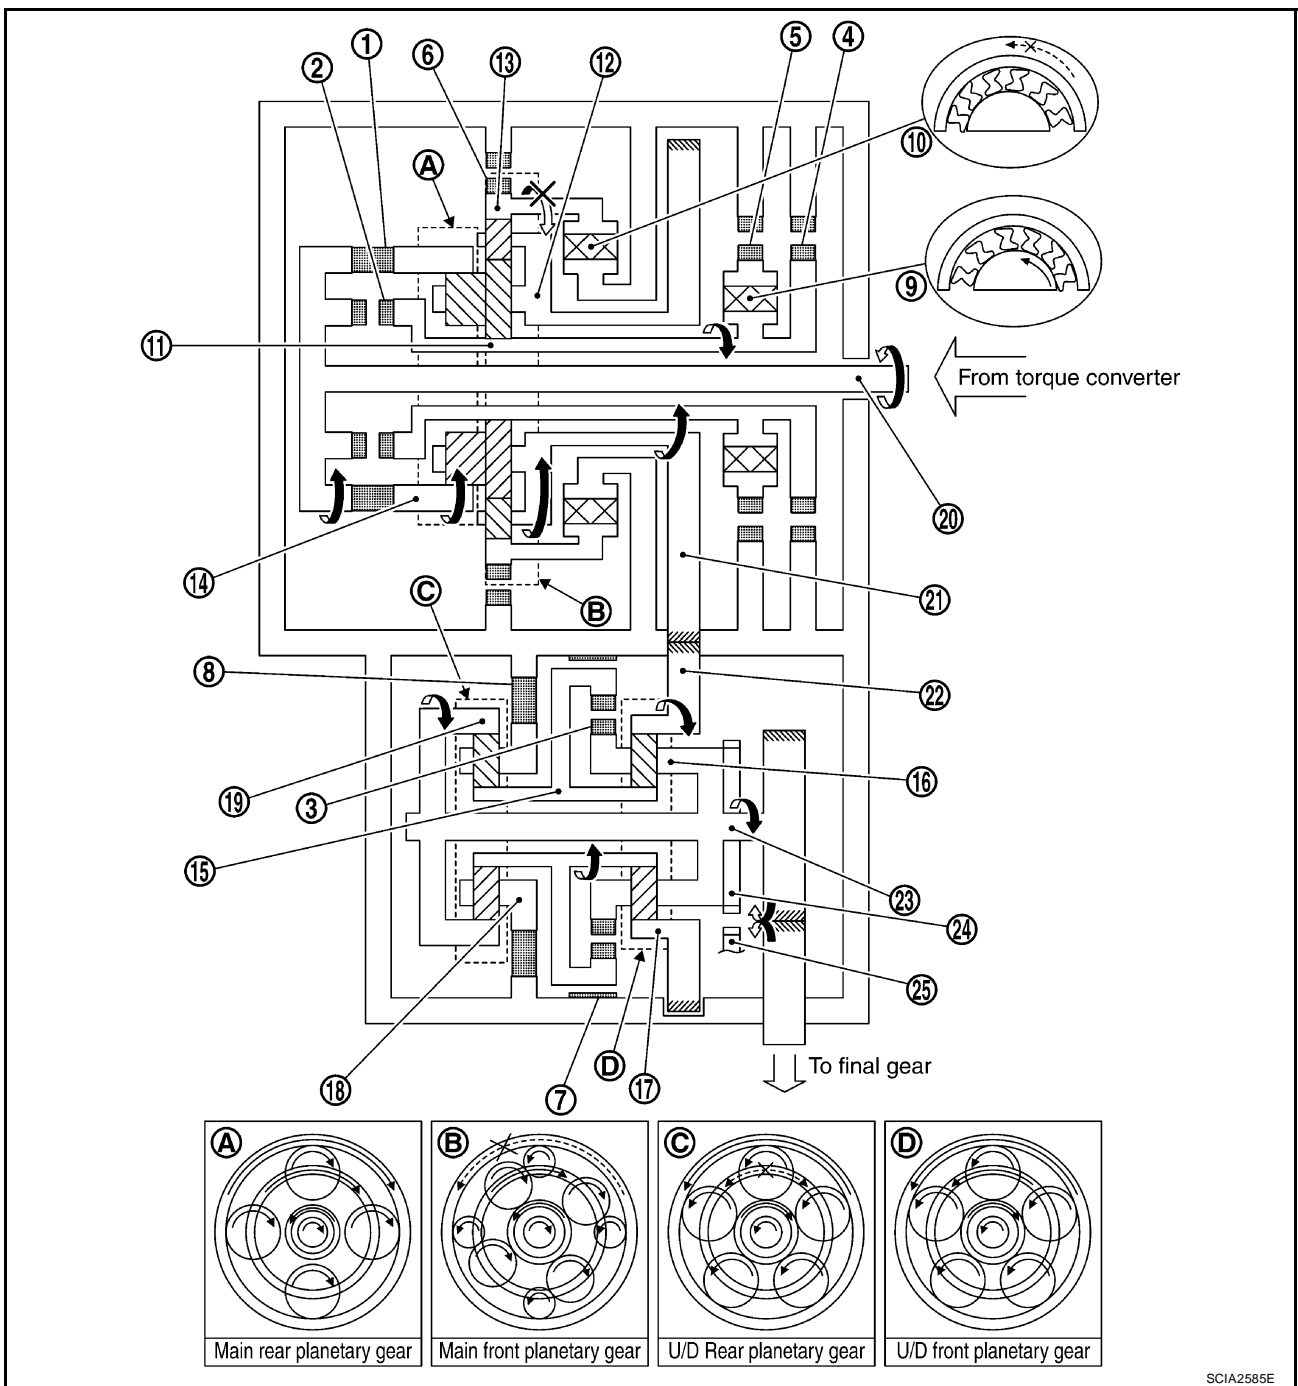

A
B
AT
D
E
F
G
H
I
J
K
L
M

- | | | |
|---------------------------------|-----------------------------|--------------------------------|
| 1. Forward clutch | 2. Direct clutch | 3. U/D clutch |
| 4. 2nd coast brake | 5. 2nd brake | 6. 1st and reverse brake |
| 7. U/D brake | 8. B5 brake | 9. One-way clutch No. 1 |
| 10. One-way clutch No. 2 | 11. Main sun gear | 12. Main planetary carrier |
| 13. Main front internal gear | 14. Main rear internal gear | 15. U/D sun gear |
| 16. U/D front planetary carrier | 17. U/D front internal gear | 18. U/D rear planetary carrier |
| 19. U/D rear internal gear | 20. Input shaft | 21. Counter drive gear |
| 22. Counter driven gear | 23. Output shaft | 24. Parking gear |
| 25. Parking pawl | | |


SCIA2585E

A/T CONTROL SYSTEM

“D”, “L” positions 2nd gear

1. Input shaft rotates clockwise.
 2. Forward clutch operates. (Connect input shaft to main rear internal gear.)
 3. Main rear internal gear rotates clockwise.
 4. Main rear planetary pinion gear rotates itself clockwise.
 5. Main front large planetary pinion gear rotates itself clockwise for rear planetary pinion and one.
 6. 2nd brake and 2nd coast brake operates.
 7. One-way clutch No. 1 operates. (Lock rotation of main sun gear.)
 8. Main planetary carrier revolves clockwise due to reaction force of front large planetary pinion gear.
 9. Counter drive gear rotates clockwise for main planetary carrier and one.
 10. Counter driven gear rotates counterclockwise.
 11. U/D front internal gear rotates counterclockwise for counter driven gear and one.
 12. U/D front planetary pinion gear rotates itself counterclockwise.
 13. U/D sun gear rotates clockwise.
 14. U/D rear planetary pinion gear rotates itself counterclockwise.
 15. B5 brake operate. (Lock rotation of U/D rear planetary carrier.)
 16. U/D rear internal gear rotates counterclockwise.
 17. U/D front planetary carrier and output shaft rotates counterclockwise for U/D rear internal gear and one.
 18. Final gear clockwise.
- During deceleration, driving force is connected to input shaft directly without one-way clutch. Therefore, engine brake operates.

A/T CONTROL SYSTEM

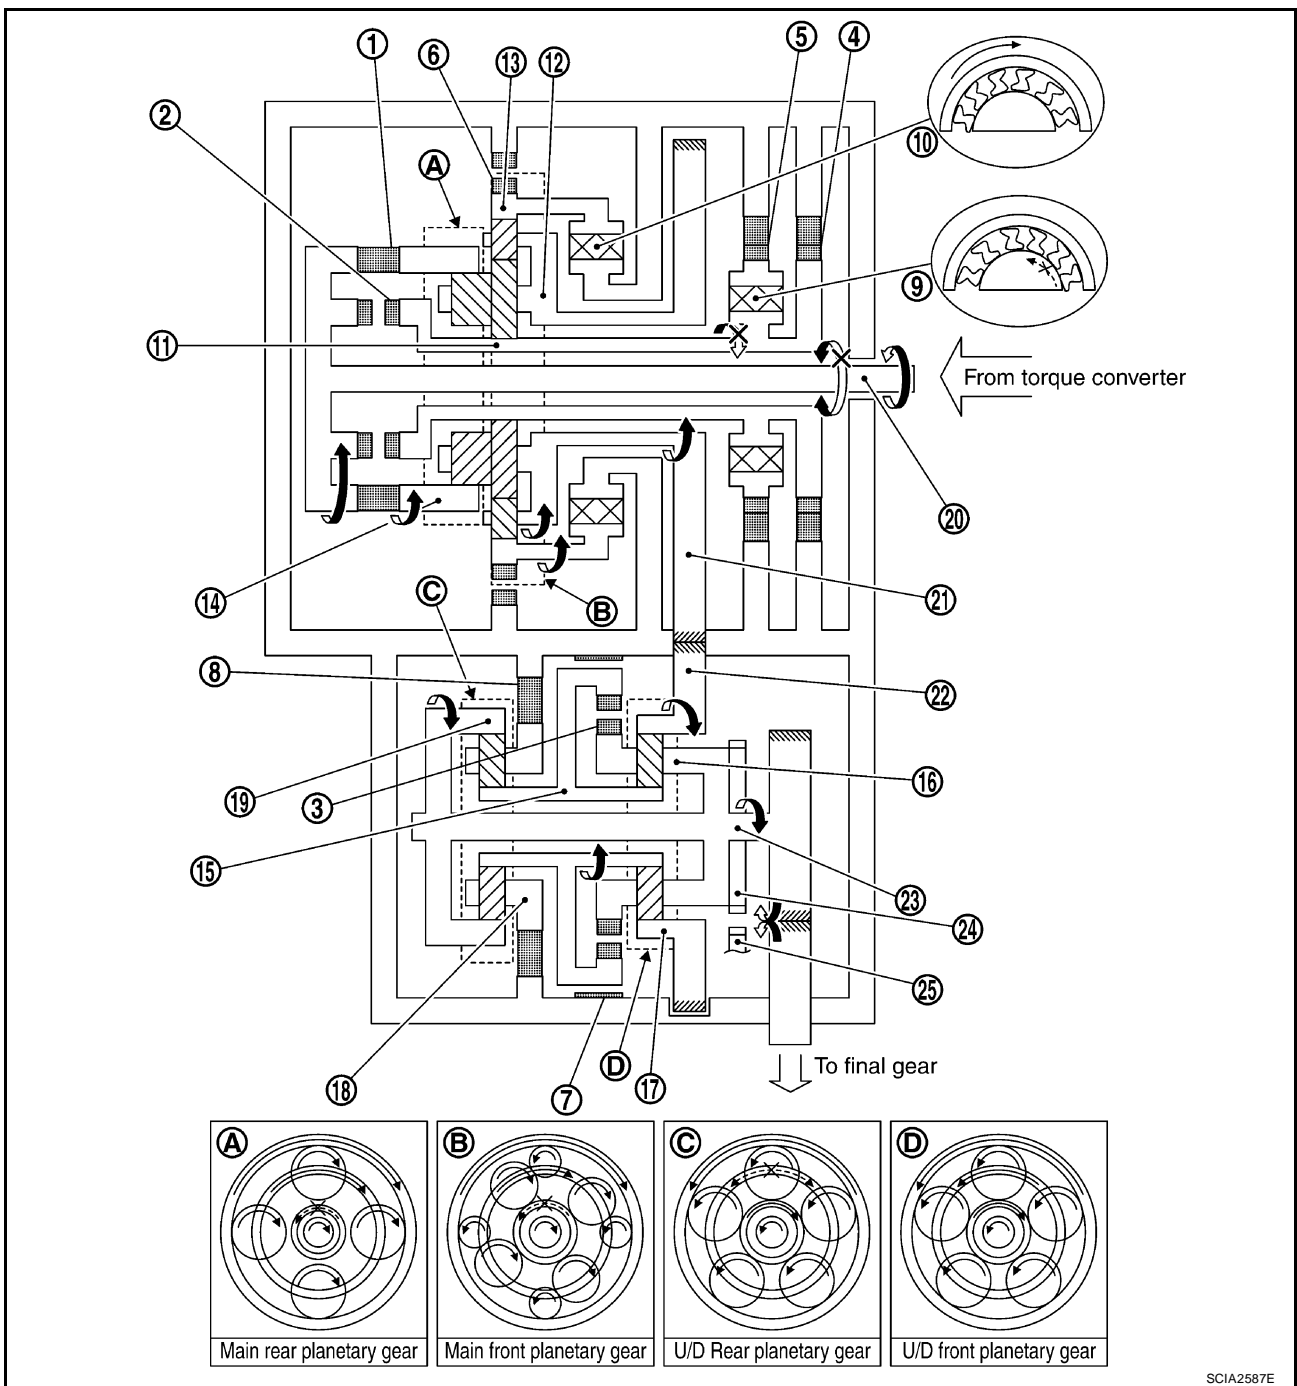

- | | | |
|---------------------------------|-----------------------------|--------------------------------|
| 1. Forward clutch | 2. Direct clutch | 3. U/D clutch |
| 4. 2nd coast brake | 5. 2nd brake | 6. 1st and reverse brake |
| 7. U/D brake | 8. B5 brake | 9. One-way clutch No. 1 |
| 10. One-way clutch No. 2 | 11. Main sun gear | 12. Main planetary carrier |
| 13. Main front internal gear | 14. Main rear internal gear | 15. U/D sun gear |
| 16. U/D front planetary carrier | 17. U/D front internal gear | 18. U/D rear planetary carrier |
| 19. U/D rear internal gear | 20. Input shaft | 21. Counter drive gear |
| 22. Counter driven gear | 23. Output shaft | 24. Parking gear |
| 25. Parking pawl | | |


SCIA2587E

A/T CONTROL SYSTEM

“D”, “L” positions 3rd gear

1. Input shaft rotates clockwise.
 2. Forward clutch operates. (Connect input shaft to main rear internal gear.)
 3. Main rear internal gear rotates clockwise.
 4. Main rear planetary pinion gear rotates itself clockwise.
 5. Main front large planetary pinion gear rotates itself clockwise for rear planetary pinion and one.
 6. 2nd brake and 2nd coast brake operates.
 7. One-way clutch No. 1 operates. (Lock rotation of main sun gear.)
 8. Main planetary carrier revolves clockwise due to reaction force of front large planetary pinion gear.
 9. Counter drive gear rotates clockwise for main planetary carrier and one.
 10. Counter driven gear rotates counterclockwise.
 11. U/D front internal gear rotates counterclockwise for counter driven gear and one.
 12. U/D front planetary pinion gear rotates itself counterclockwise.
 13. U/D brake operate. (Lock rotation of U/D sun gear.)
 14. U/D front planetary carrier revolves counterclockwise due to reaction force of U/D front planetary pinion gear.
 15. U/D rear internal gear and output shaft rotates counterclockwise for U/D front planetary carrier and one.
 16. Final gear clockwise.
- During deceleration, driving force is connected to input shaft directly without one-way clutch. Therefore, engine brake operates.

A/T CONTROL SYSTEM

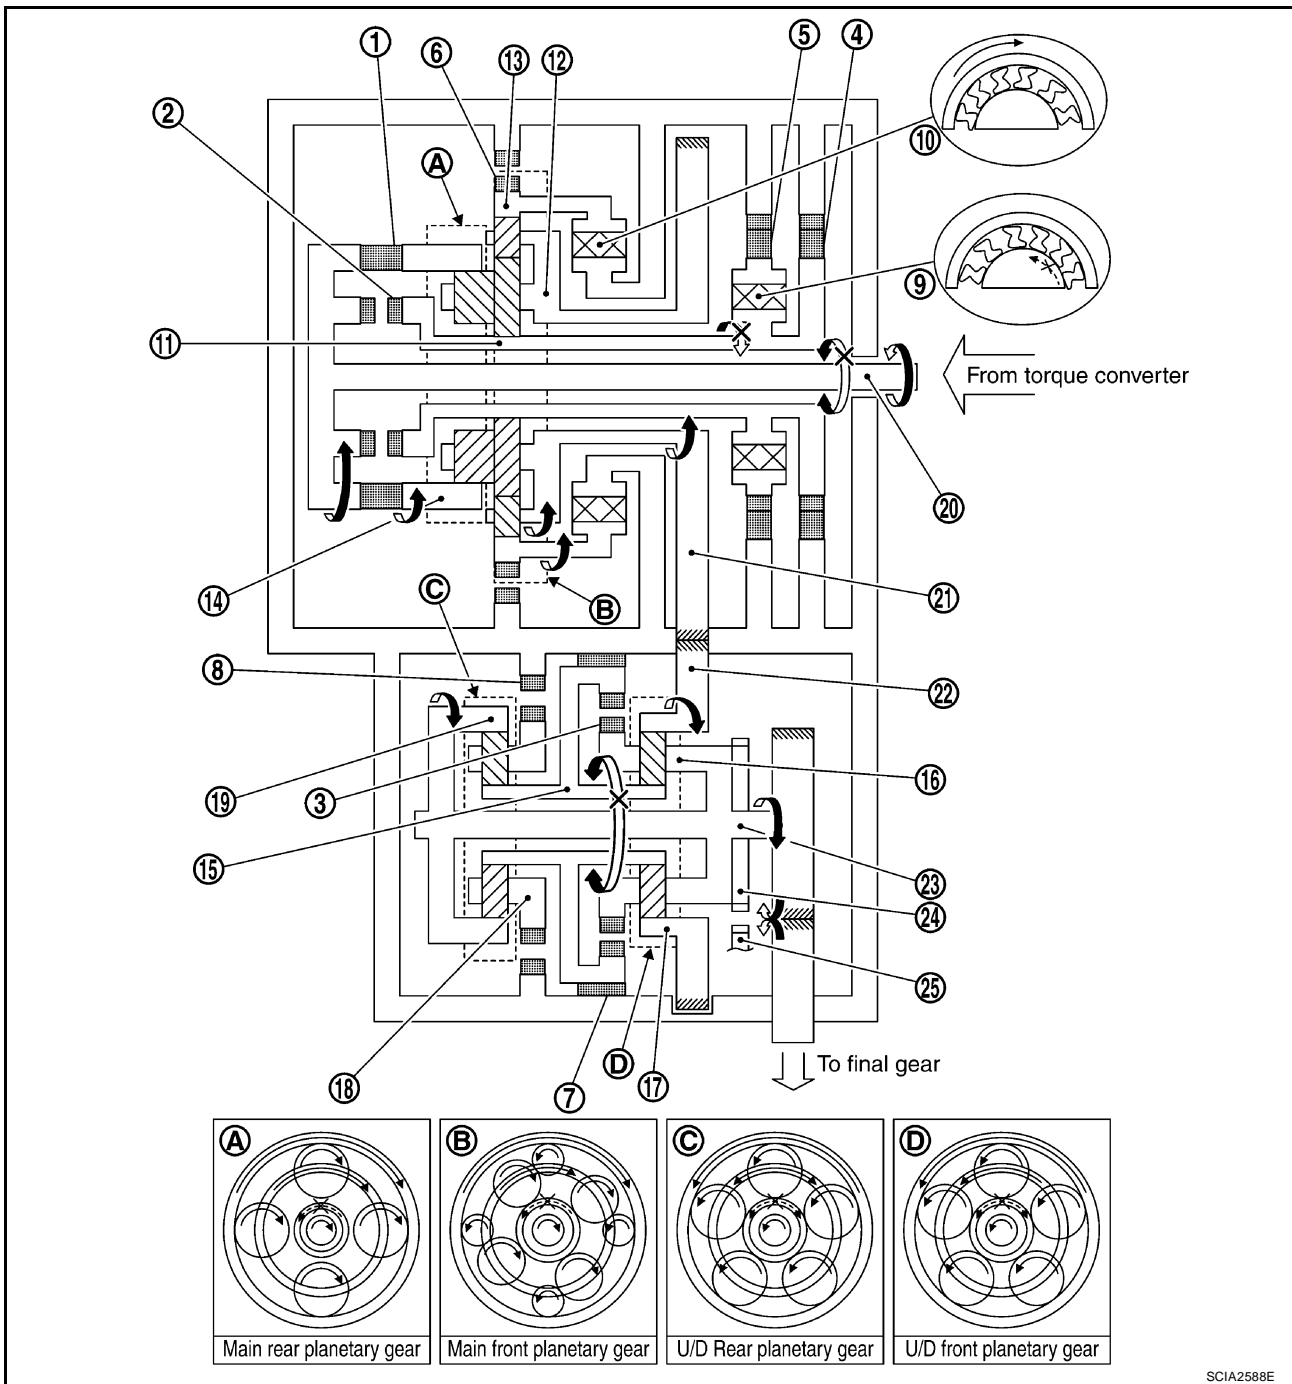

- | | | |
|---------------------------------|-----------------------------|--------------------------------|
| 1. Forward clutch | 2. Direct clutch | 3. U/D clutch |
| 4. 2nd coast brake | 5. 2nd brake | 6. 1st and reverse brake |
| 7. U/D brake | 8. B5 brake | 9. One-way clutch No. 1 |
| 10. One-way clutch No. 2 | 11. Main sun gear | 12. Main planetary carrier |
| 13. Main front internal gear | 14. Main rear internal gear | 15. U/D sun gear |
| 16. U/D front planetary carrier | 17. U/D front internal gear | 18. U/D rear planetary carrier |
| 19. U/D rear internal gear | 20. Input shaft | 21. Counter drive gear |
| 22. Counter driven gear | 23. Output shaft | 24. Parking gear |
| 25. Parking pawl | | |


SCIA2588E

A/T CONTROL SYSTEM

“D” positions 4th gear

1. Input shaft rotates clockwise.
 2. Forward clutch operates. (Connect input shaft to main rear internal gear.)
 3. Main rear internal gear rotates clockwise.
 4. Main rear planetary pinion gear rotates itself clockwise.
 5. Main front large planetary pinion gear rotates itself clockwise for rear planetary pinion and one.
 6. 2nd brake and 2nd coast brake operates.
 7. One-way clutch No. 1 operates. (Lock rotation of main sun gear.)
 8. Main planetary carrier revolves clockwise due to reaction force of front large planetary pinion gear.
 9. Counter drive gear rotates clockwise for main planetary carrier and one.
 10. Counter driven gear rotates counterclockwise.
 11. U/D front internal gear rotates counterclockwise for counter driven gear and one.
 12. U/D clutch operate. (Connect U/D sun gear to U/D front planetary carrier.)
 13. U/D front planetary pinion gear cannot rotate itself, and U/D unit rotates counterclockwise as one.
 14. Output shaft rotates counterclockwise for U/D unit and one.
 15. Final gear clockwise.
- During deceleration, driving force is connected to input shaft directly without one-way clutch. Therefore, engine brake operates.

A/T CONTROL SYSTEM

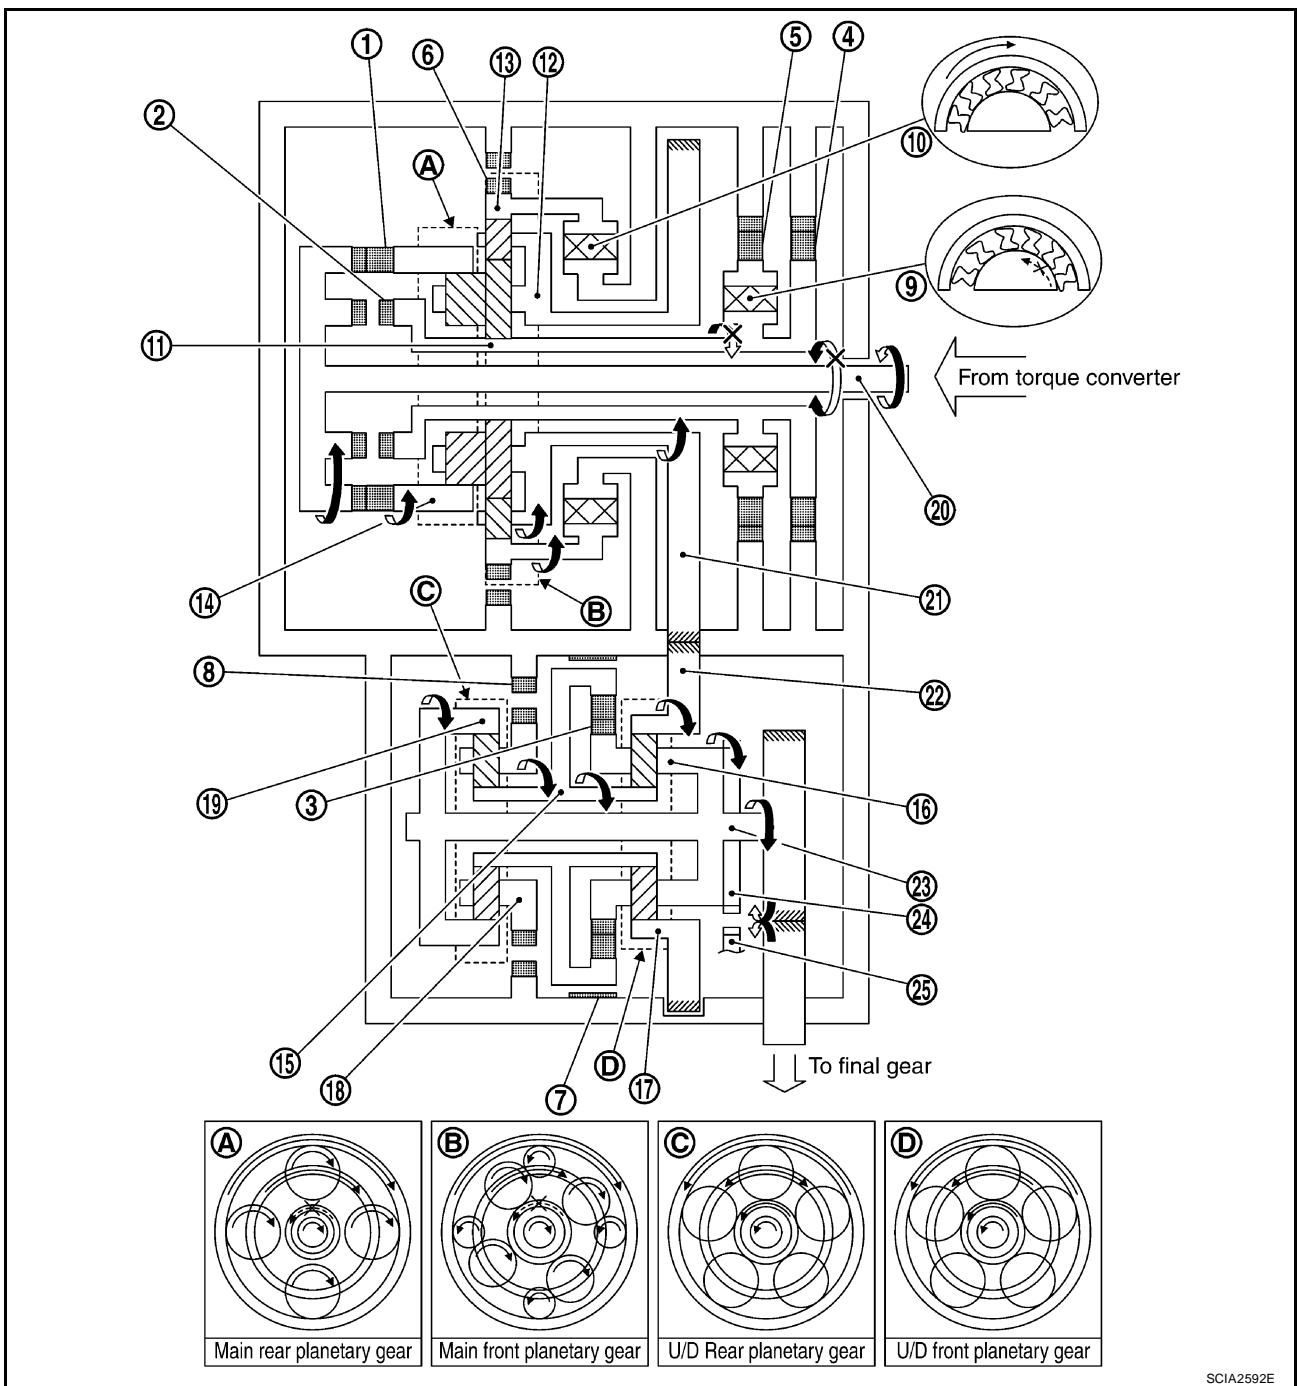

A
B
AT
D
E
F
G
H
I
J
K
L
M

- | | | |
|---------------------------------|-----------------------------|--------------------------------|
| 1. Forward clutch | 2. Direct clutch | 3. U/D clutch |
| 4. 2nd coast brake | 5. 2nd brake | 6. 1st and reverse brake |
| 7. U/D brake | 8. B5 brake | 9. One-way clutch No. 1 |
| 10. One-way clutch No. 2 | 11. Main sun gear | 12. Main planetary carrier |
| 13. Main front internal gear | 14. Main rear internal gear | 15. U/D sun gear |
| 16. U/D front planetary carrier | 17. U/D front internal gear | 18. U/D rear planetary carrier |
| 19. U/D rear internal gear | 20. Input shaft | 21. Counter drive gear |
| 22. Counter driven gear | 23. Output shaft | 24. Parking gear |
| 25. Parking pawl | | |


SCIA2592E

A/T CONTROL SYSTEM

“D” positions 5th gear

1. Input shaft rotates clockwise.
 2. Forward clutch operates. (Connect input shaft to main rear internal gear.)
 3. Direct clutch operates. (Connect input shaft to main sun gear.)
 4. Main rear planetary pinion gear cannot rotate itself, and main rear planetary unit rotates clockwise as one.
 5. Main front large planetary pinion gear cannot rotate itself for main rear planetary pinion gear and one, and main front planetary unit rotates clockwise as one.
 6. Counter drive gear rotates clockwise for main front planetary unit and one.
 7. Counter driven gear rotates counterclockwise.
 8. U/D front internal gear rotates counterclockwise for counter driven gear and one.
 9. U/D clutch operate. (Connect U/D sun gear to U/D front planetary carrier.)
 10. U/D front planetary pinion gear cannot rotate itself, and U/D unit rotates counterclockwise as one.
 11. Output shaft rotates counterclockwise for U/D unit and one.
 12. Final gear clockwise.
- During deceleration, driving force is connected to input shaft directly without one-way clutch. Therefore, engine brake operates.

A/T CONTROL SYSTEM

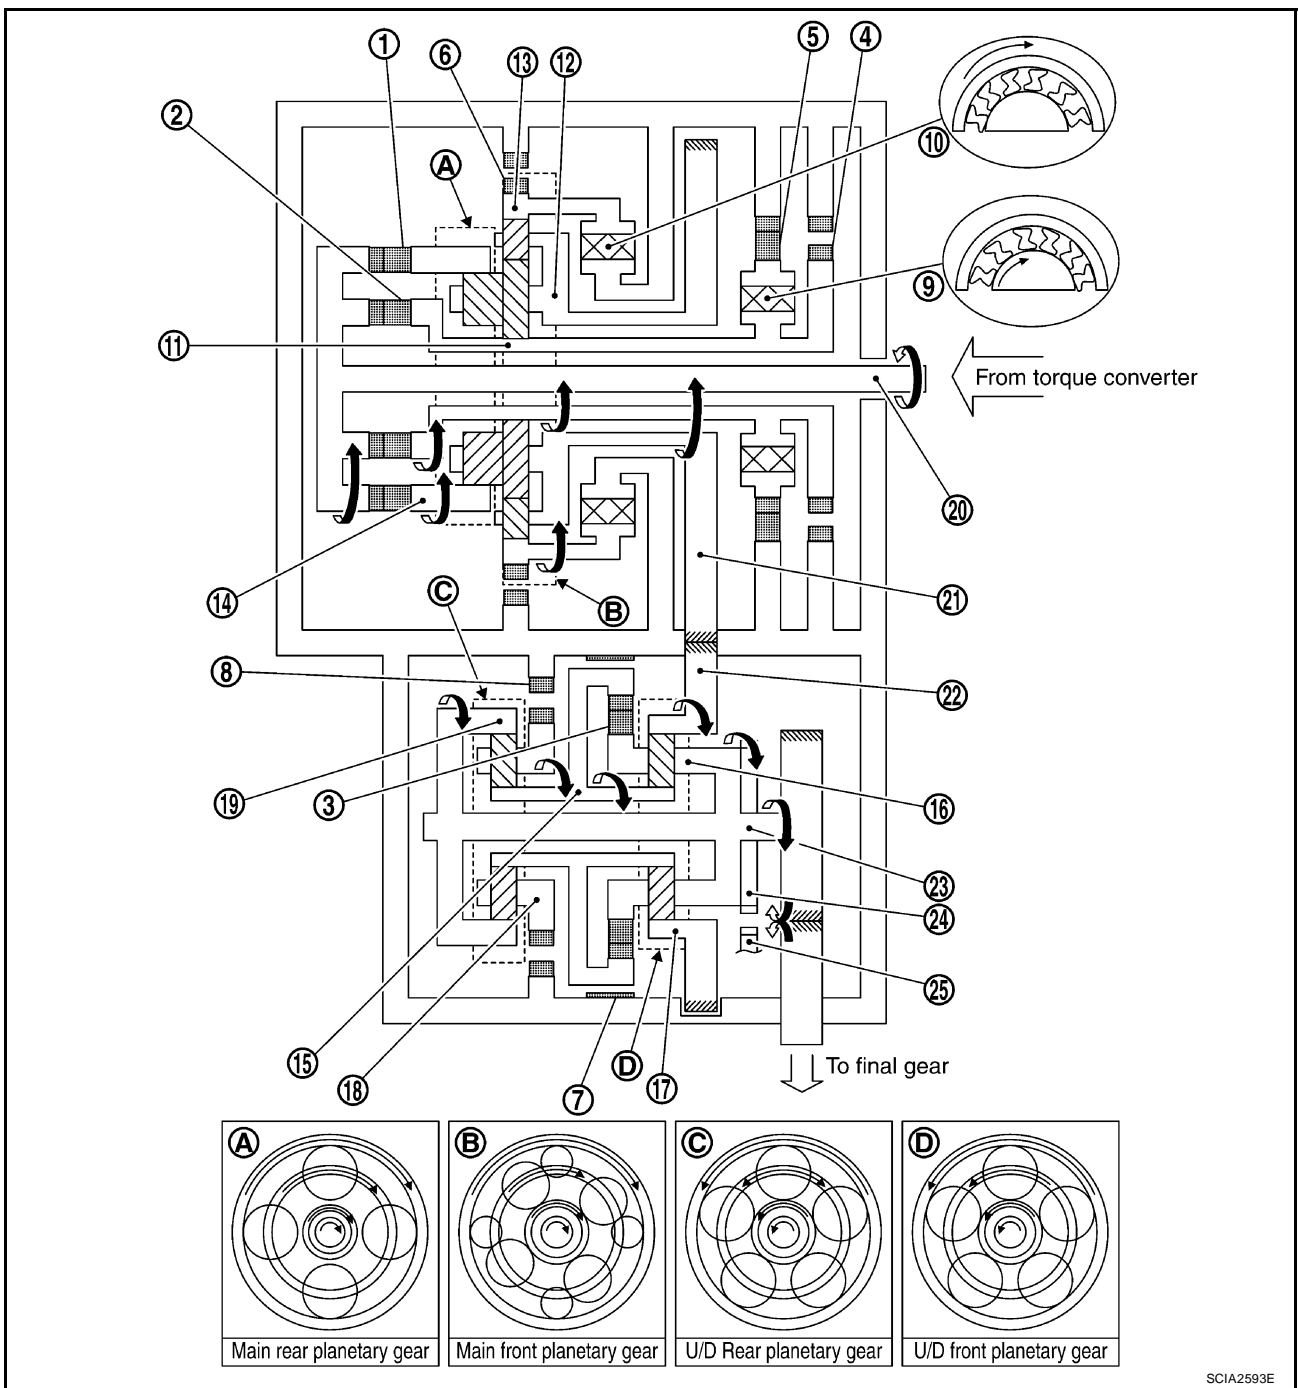

A
B
AT
D
E
F
G
H
I
J
K
L
M

- | | | |
|---------------------------------|-----------------------------|--------------------------------|
| 1. Forward clutch | 2. Direct clutch | 3. U/D clutch |
| 4. 2nd coast brake | 5. 2nd brake | 6. 1st and reverse brake |
| 7. U/D brake | 8. B5 brake | 9. One-way clutch No. 1 |
| 10. One-way clutch No. 2 | 11. Main sun gear | 12. Main planetary carrier |
| 13. Main front internal gear | 14. Main rear internal gear | 15. U/D sun gear |
| 16. U/D front planetary carrier | 17. U/D front internal gear | 18. U/D rear planetary carrier |
| 19. U/D rear internal gear | 20. Input shaft | 21. Counter drive gear |
| 22. Counter driven gear | 23. Output shaft | 24. Parking gear |
| 25. Parking pawl | | |


SCIA2593E

A/T CONTROL SYSTEM

“R” position

1. Input shaft rotates clockwise.
 2. Direct clutch operates. (Connect input shaft to main sun gear.)
 3. Main sun gear rotates clockwise.
 4. Main rear planetary pinion gear rotates itself clockwise.
 5. Main front large planetary pinion gear rotates itself counterclockwise for rear planetary pinion gear and one.
 6. Main front small planetary pinion gear rotates itself clockwise.
 7. 1st and reverse brake operates. (Lock rotation of main front internal gear.)
 8. Main planetary carrier revolves counterclockwise due to reaction force of front small planetary pinion gear.
 9. Counter drive gear rotates counterclockwise for main planetary carrier and one.
 10. Counter driven gear rotates clockwise.
 11. U/D front internal gear rotates clockwise for counter driven gear and one.
 12. U/D front planetary pinion gear rotates itself clockwise.
 13. U/D sun gear rotates counterclockwise.
 14. U/D rear planetary pinion gear rotates itself clockwise.
 15. B5 brake operate. (Lock rotation of U/D rear planetary carrier.)
 16. U/D rear internal gear rotates clockwise.
 17. U/D front planetary carrier and output shaft rotates clockwise for U/D rear internal gear and one.
 18. Final gear counterclockwise.
- During deceleration, driving force is connected to input shaft directly without one-way clutch. Therefore, engine brake operates.

A/T CONTROL SYSTEM

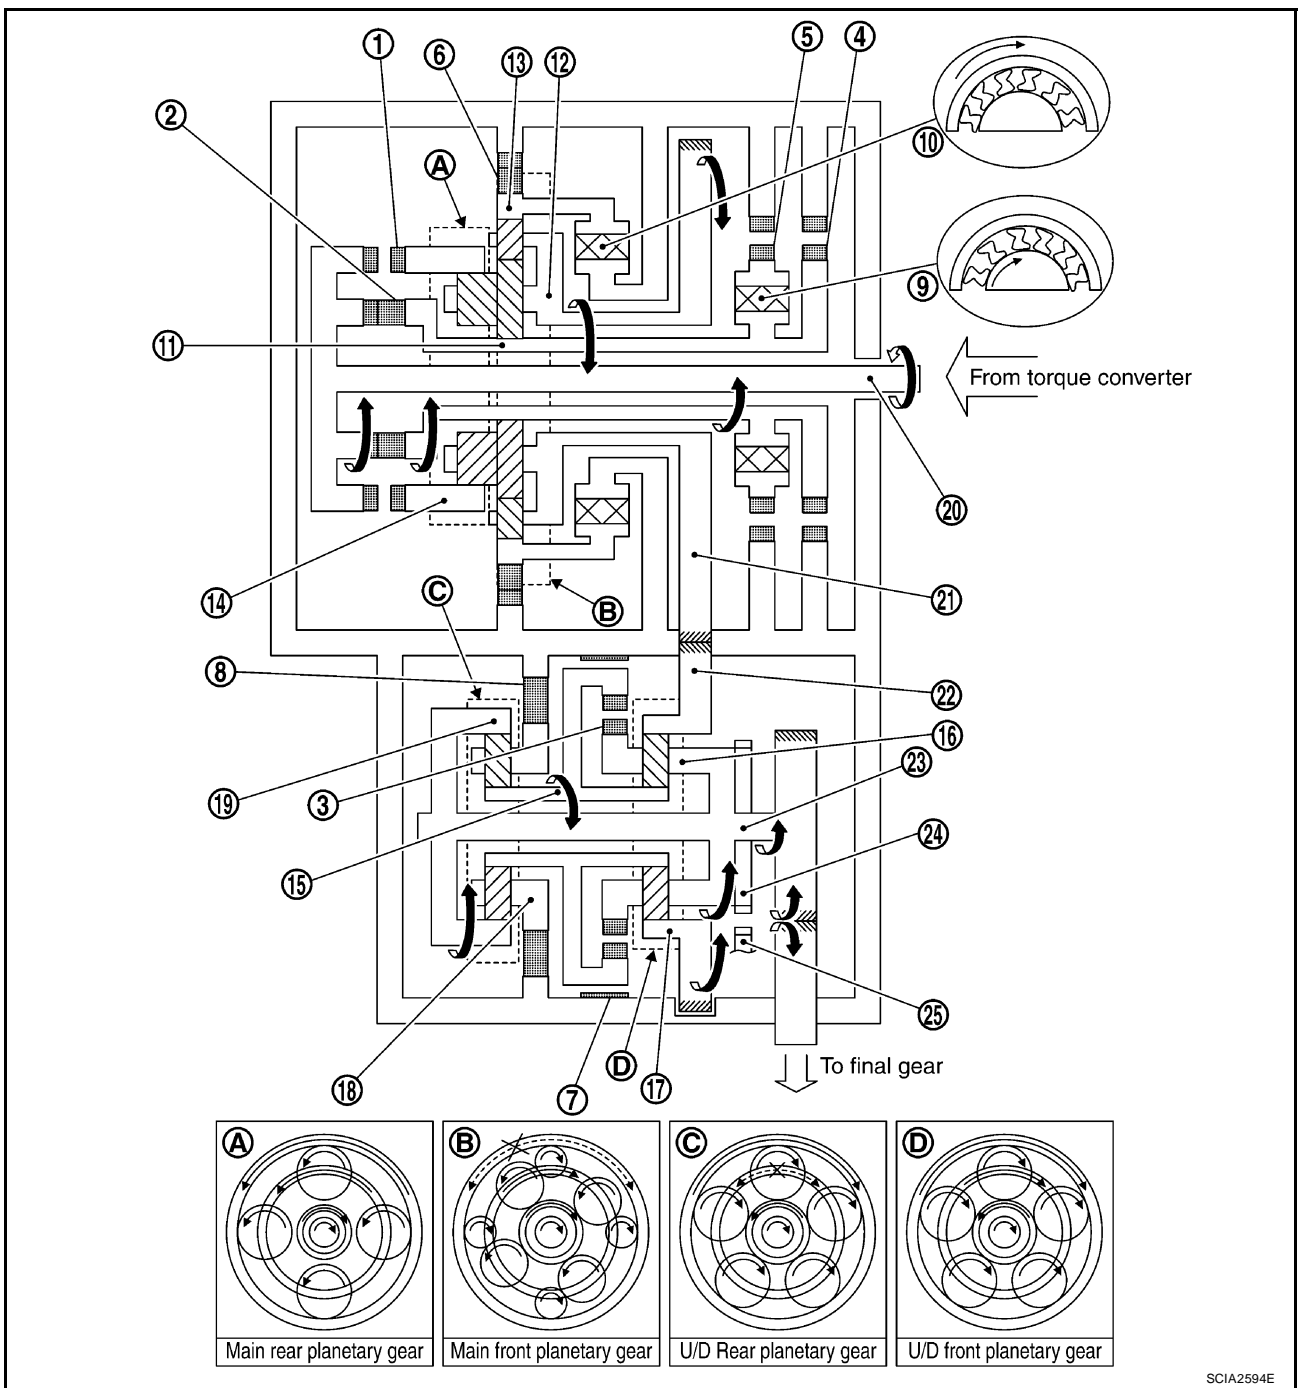

A
B
AT
D
E
F
G
H
I
J
K
L
M

- | | | |
|---------------------------------|-----------------------------|--------------------------------|
| 1. Forward clutch | 2. Direct clutch | 3. U/D clutch |
| 4. 2nd coast brake | 5. 2nd brake | 6. 1st and reverse brake |
| 7. U/D brake | 8. B5 brake | 9. One-way clutch No. 1 |
| 10. One-way clutch No. 2 | 11. Main sun gear | 12. Main planetary carrier |
| 13. Main front internal gear | 14. Main rear internal gear | 15. U/D sun gear |
| 16. U/D front planetary carrier | 17. U/D front internal gear | 18. U/D rear planetary carrier |
| 19. U/D rear internal gear | 20. Input shaft | 21. Counter drive gear |
| 22. Counter driven gear | 23. Output shaft | 24. Parking gear |
| 25. Parking pawl | | |

SCIA2594E

A/T CONTROL SYSTEM

ECS00E6G

TCM Function

The function of the TCM is to:


- Receive input signals sent from various switches and sensors.
- Determine required line pressure, shifting point, lock-up operation, and engine brake operation.
- Send required output signals to the respective solenoids.

CONTROL SYSTEM OUTLINE

The automatic transaxle senses vehicle operating conditions through various sensors or signals. It always controls the optimum shift position and reduces shifting and lock-up shocks.

SENSORS (or SIGNAL)		TCM		ACTUATORS
PNP switch Throttle angle signal Throttle position signal Engine speed signal Engine torque signal A/T fluid temperature sensor Revolution sensor Turbine revolution sensor Vehicle speed signal Lever switch signal Stop lamp switch signal	⇒	Shift control Line pressure control Lock-up control Engine brake control Timing control Fail-safe control Self-diagnosis CONSULT-II communication line CAN communication line On board diagnosis	⇒	Shift solenoid valve A Shift solenoid valve B Shift solenoid valve C Shift solenoid valve D Shift solenoid valve E Pressure control solenoid valve A Pressure control solenoid valve B Pressure control solenoid valve C O/D OFF indicator lamp

CONTROL SYSTEM DIAGRAM

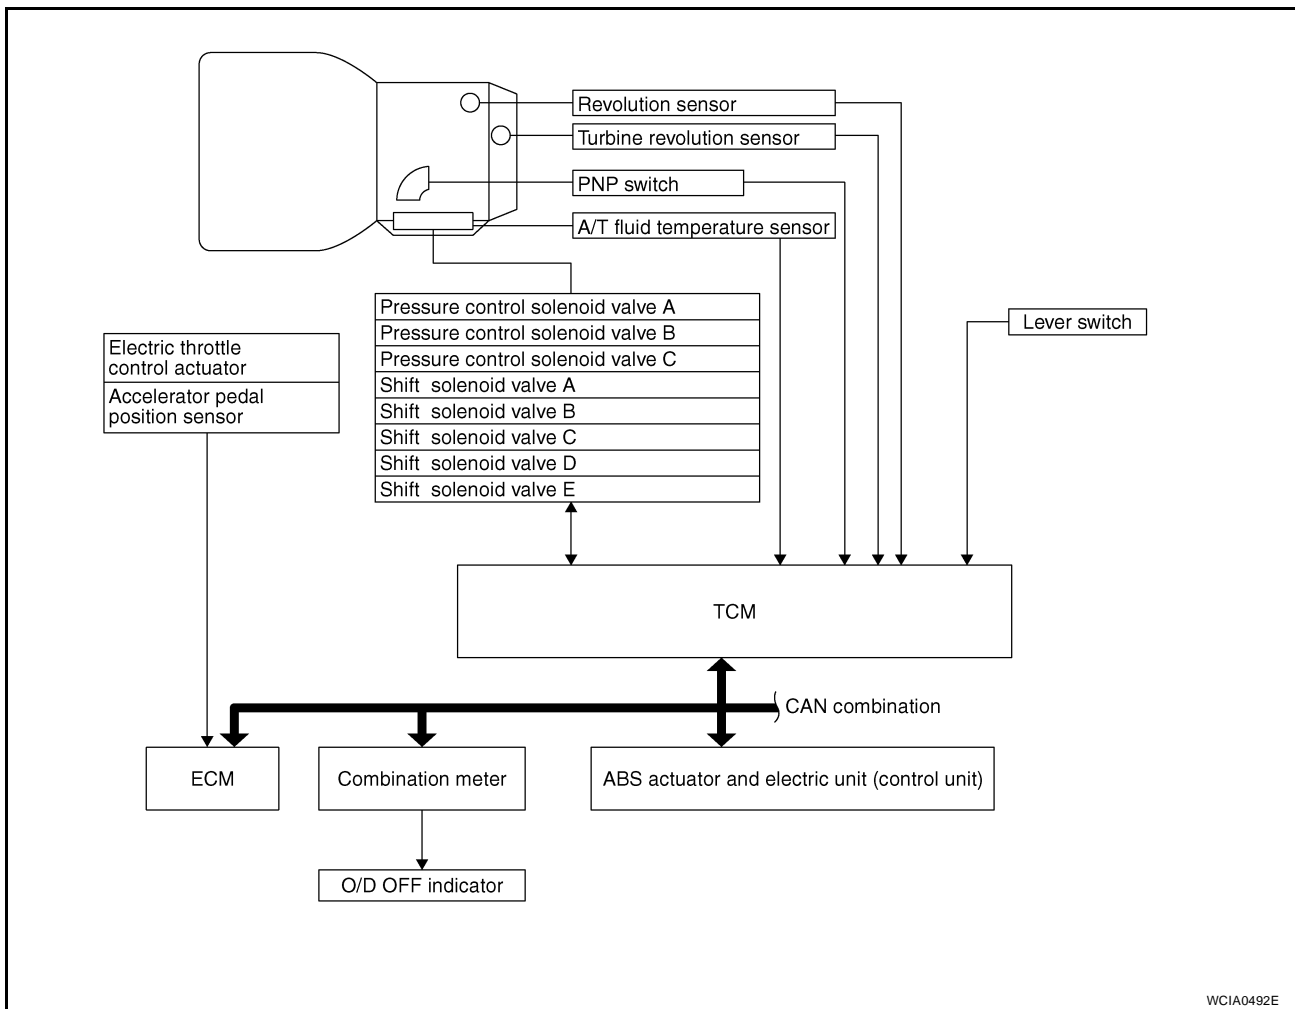

WCIA0492E

A/T CONTROL SYSTEM

Input/Output Signal of TCM

ECS00E6H

Control item		Line pressure control	Vehicle speed control	Shift control	Lock-up control	Engine brake control	Fail-safe function (*3)	Self-diagnostics function	
Input	Throttle angle signal ^(*5)	X	X	X	X	X	X	X	
	Throttle position signal ^(*5)	X ^(*2)	X ^(*2)		X	X ^(*2)		X ^(*4)	
	Revolution sensor	X	X	X	X	X	X	X	
	Turbine revolution sensor	X	X	X		X	X	X	
	Vehicle speed signal MTR ^(*1) ^(*5)	X	X	X	X		X	X	
	Engine speed signals ^(*5)		X	X	X		X	X	
	Engine torque signals ^(*5)	X	X	X	X	X		X	
	PNP switch	X	X	X	X	X	X	X ^(*4)	
	Lever switch		X	X		X	X	X	
	Stop lamp switch signal ^(*5)		X		X	X		X ^(*4)	
	A/T fluid temperature sensor		X	X	X	X	X	X	
	ASCD	Operation signal ^(*5)		X		X	X		
		Overdrive cancel signal ^(*5)		X		X	X		
		TCM power supply voltage signal	X	X	X	X	X	X	X
Output	Shift solenoid valve A/B/C/D/E		X	X			X	X	
	Pressure control solenoid valve A	X	X	X	X	X	X	X	
	Pressure control solenoid valve B		X	X		X	X	X	
	Pressure control solenoid valve C			X	X		X	X	
	Self-diagnostics table ^(*5)							X	

*1: Spare for revolution sensor

*2: Spare for throttle angle signal

*3: If these input and output signals are different, the TCM triggers the fail-safe function.

*4: Used as a condition for starting self-diagnostics; if self-diagnostics are not started, it is judged that there is some kind of error.

*5: CAN communications.

CAN Communication SYSTEM DESCRIPTION

ECS00E6I

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.


For details, refer to [LAN-49. "CAN System Specification Chart"](#) .

A/T CONTROL SYSTEM

Line Pressure Control

ECS00E6J

- The pressure control solenoid A controls linear line pressure by control signal from TCM and line pressure for clutches and brakes to reduce shift shock.
- This pressure control solenoid A controls the pressure regulator valve as the signal pressure and adjusts the pressure of the operating oil discharged from the oil pump to the line pressure most appropriate to the driving state.

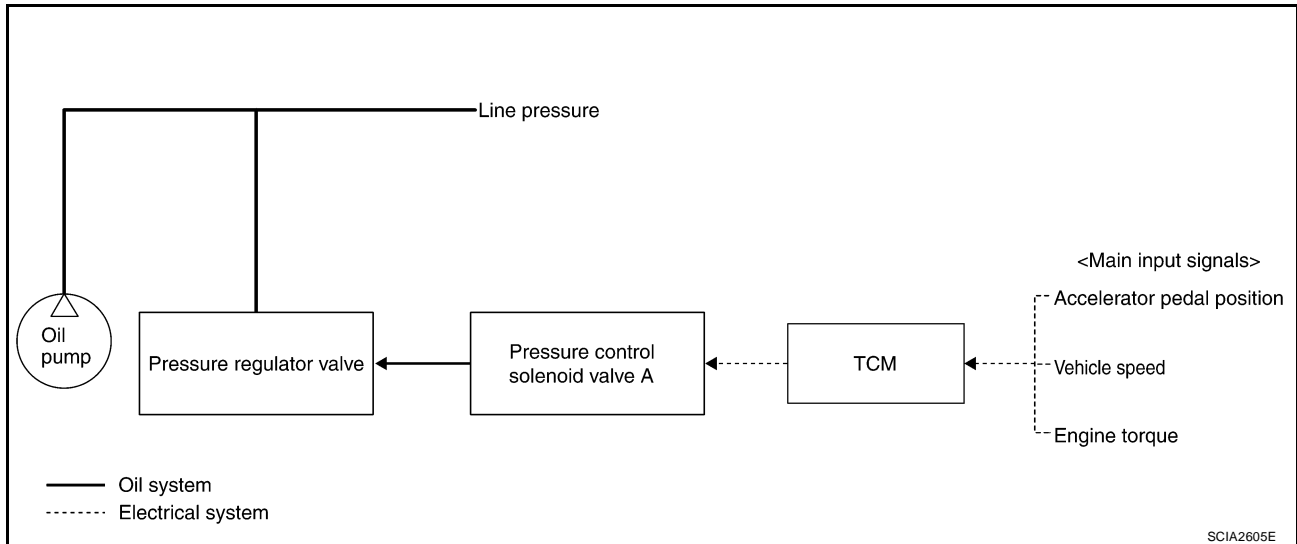


LINE PRESSURE CONTROL IS BASED ON THE TCM LINE PRESSURE CHARACTERISTIC PATTERN

In order to obtain the most appropriate line pressure characteristic to meet the current driving state, the TCM controls the pressure control solenoid A current valve and thus controls the line pressure.

Shift Control

ECS00E6K

The clutch pressure control solenoid is controlled by the signals from the switches and sensors. Thus, the clutch pressure is adjusted to be appropriate to the engine load state and vehicle driving state. It becomes possible to finely control the clutch hydraulic pressure with high precision and a smoother shift change characteristic is attained.

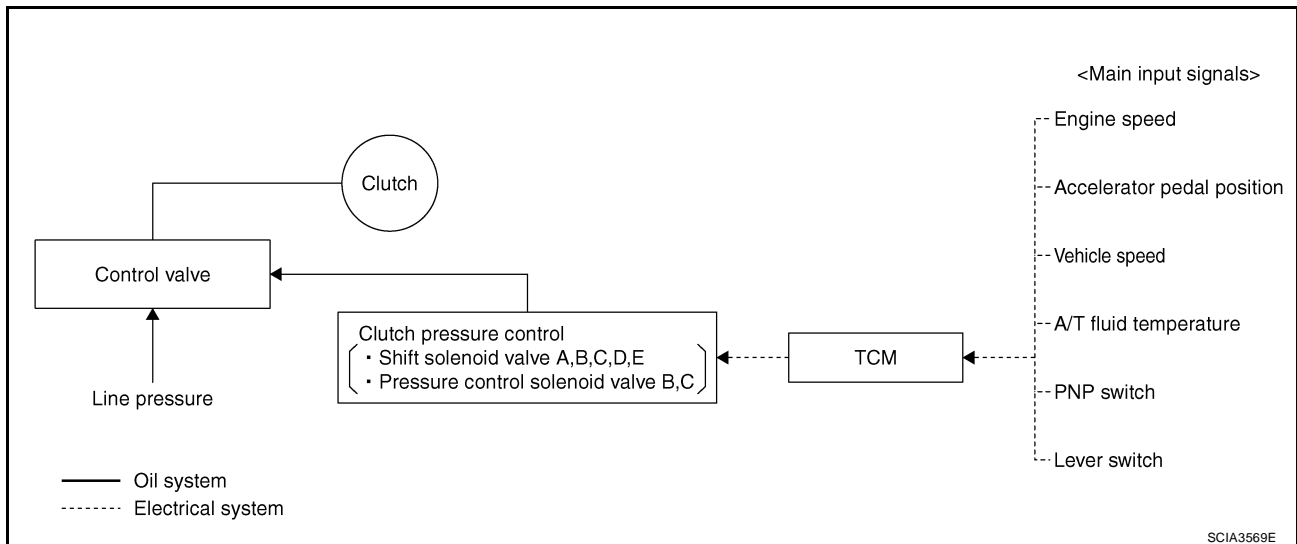

Basically TCM programmed for economy mode, but TCM changes to several shift schedule automatically according to specified condition.

A/T CONTROL SYSTEM

SPECIAL SHIFT MODE

Upslope Mode

When TCM detects upslope from load of engine torque and decrease of acceleration, this mode changes shift points in high-speed side according to the upslope degree and avoids busy shift of A/T.

Downslope Mode

When TCM detects downslope from increase of acceleration with accelerator full close, this mode operates moderate engine brake by changing shift points in high-speed side.

Hot Mode Control

This control lowers ATF temperature by changing shift points when the temperature is extremely high.

Down Shift Permission Control

In order to avoid the over speed of the engine, down shift is done only at under a constant vehicle speed.

UP/DOWN SHIFT LEARNING CONTROL

This control learns the pressure to each clutch or brake in order to reduce shifting shock at each shifting (Up, Down, Coast down).

N-D SHIFT CONTROL

This control improves the N-D shift quality due to controlling line pressure solenoid valve according to forward clutch piston stroke learned in N-D shift learning control and applying best hydraulic pressure to forward clutch at N-D shift (include L).

N-D SHIFT LEARNING CONTROL

This control learns the forward clutch hydraulic pressure due to monitoring a forward clutch engaging time and a rotation change rate.

N-R SHIFT CONTROL

This control improves the N-R shift quality due to controlling shift pressure solenoid valve according to direct clutch piston stroke learned in N-R shift learning control and applying best hydraulic pressure to direct clutch at N-R shift.

N-R SHIFT LEARNING CONTROL

This control learns the direct clutch hydraulic pressure due to monitoring a direct clutch engaging time and a rotation change rate.

TORQUE REDUCTION CONTROL

This control improves the shift quality due to sending torque reduction request signal from TCM to ECM and cutting engine torque increase of shift at N-D shift, N-R shift and 1 ⇔ 2 ⇔ 3 ⇔ 4 ⇔ 5.

If accelerator pedal is depressed rapidly, this control establishes the upper limit value of engine torque and avoids engine flare at 2 ⇔ 3, 3 ⇔ 4 and 4 ⇔ 2 of clutch to clutch shift.

A

B

AT

D

E

F

G

H

I

J

K

L

M

A/T CONTROL SYSTEM

ECS00E6L

Lock-Up Control

The torque converter clutch piston in the torque converter is engaged to eliminate torque converter slip to increase power transmission efficiency.


The torque converter clutch control valve operation is controlled by the pressure control solenoid valve C, which is controlled by a signal from TCM, and the torque converter clutch control valve engages or releases the torque converter clutch piston.

Lock-up Operation Condition Table

Selector lever	D position			L position	
	OFF (D)	ON (4)	OFF (3)	ON (2)	
Lever switch (A/T indicator)					
Gear position	5	4	4	3	2
Lock-up	×	–	×	×	–
Slip lock-up	×	×	×	–	–

TORQUE CONVERTER CLUTCH CONTROL VALVE CONTROL

Lock-up Control System Diagram

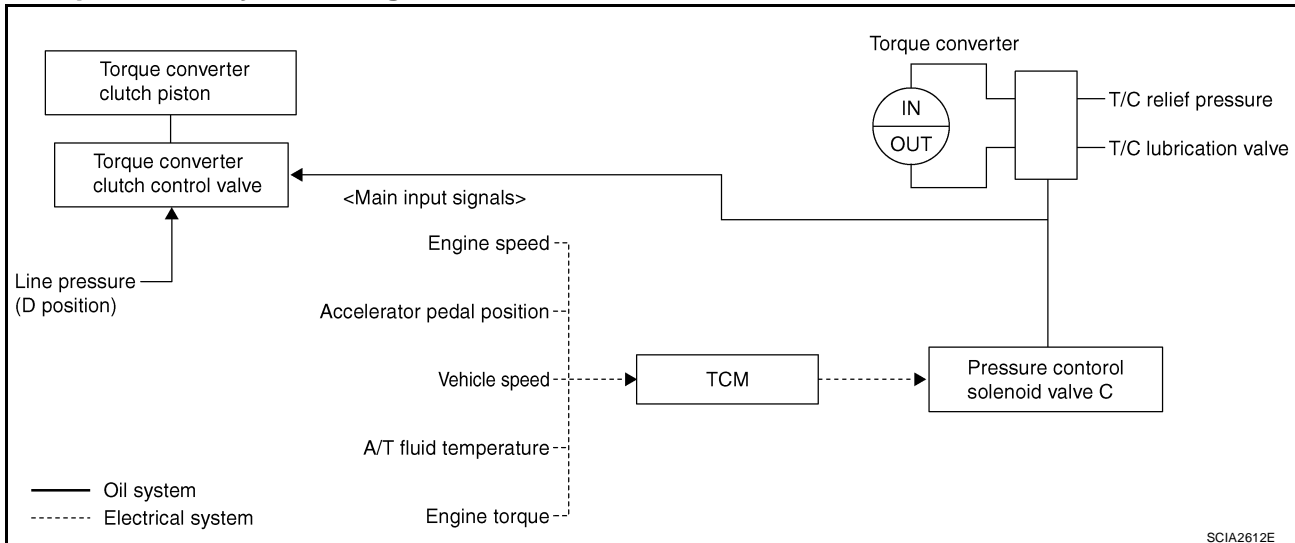

Lock-up Released

- In the lock-up released state, the torque converter clutch control valve is set into the unlocked state by the pressure control solenoid valve C and the lock-up apply pressure is drained. In this way, the torque converter clutch piston is not coupled.

Lock-up Applied

- In the lock-up applied state, the torque converter clutch control valve is set into the locked state by the pressure control solenoid valve C and lock-up apply pressure is generated. In this way, the torque converter clutch piston is pressed and coupled.

A/T CONTROL SYSTEM

SMOOTH LOCK-UP CONTROL

When shifting from the lock-up released state to the lock-up applied state, the current output to the pressure control solenoid valve C is controlled with the TCM. In this way, when shifting to the lock-up applied state, the torque converter clutch is temporarily set to the half-clutched state to reduce the shock.

Half-Clutched State

- The current output from the TCM to the pressure control solenoid valve C is varied to steadily increase the pressure control solenoid valve C pressure. In this way, the lock-up apply pressure gradually rises and while the torque converter clutch piston is put into half-clutched status, the torque converter clutch piston operating pressure is increased and the coupling is completed smoothly.

Slip Lock-up Control

- In the slip region, the pressure control solenoid valve C current is controlled with the TCM to put it into the half-clutched state. This absorbs the engine torque fluctuation and lock-up operates from low speed. This raises the fuel efficiency for 4th and 5th gears at both low speed and when the accelerator has a low degree of opening.

A
B
AT
D
E
F
G
H
I
J
K
L
M

ON BOARD DIAGNOSTIC (OBD) SYSTEM

PFP:00028

Introduction

ECS00E6M

The A/T system has two self-diagnostic systems.

The first is the emission-related on board diagnostic system (OBD-II) performed by the TCM in combination with the ECM. The malfunction is indicated by the MIL (malfunction indicator lamp) and is stored as a DTC in the ECM memory but not the TCM memory.

The second is the TCM original self-diagnosis indicated by the O/D OFF indicator lamp. The malfunction is stored in the TCM memory. The detected items are overlapped with OBD-II self-diagnostic items. For detail, refer to [AT-75, "SELF-DIAG RESULT MODE"](#).

OBD-II Function for A/T System

ECS00E6N

The ECM provides emission-related on board diagnostic (OBD-II) functions for the A/T system. One function is to receive a signal from the TCM used with OBD-related parts of the A/T system. The signal is sent to the ECM when a malfunction occurs in the corresponding OBD-related part. The other function is to indicate a diagnostic result by means of the MIL (malfunction indicator lamp) on the instrument panel. Sensors, switches and solenoid valves are used as sensing elements.

The MIL automatically illuminates in One or Two Trip Detection Logic when a malfunction is sensed in relation to A/T system parts.

One or Two Trip Detection Logic of OBD-II ONE TRIP DETECTION LOGIC

ECS00E6O

If a malfunction is sensed during the first test drive, the MIL will illuminate and the malfunction will be stored in the ECM memory as a DTC. The TCM is not provided with such a memory function.

TWO TRIP DETECTION LOGIC

When a malfunction is sensed during the first test drive, it is stored in the ECM memory as a 1st trip DTC (diagnostic trouble code) or 1st trip freeze frame data. At this point, the MIL will not illuminate. — 1st Trip

If the same malfunction as that experienced during the first test drive is sensed during the second test drive, the MIL will illuminate. — 2nd Trip

The “trip” in the “One or Two Trip Detection Logic” means a driving mode in which self-diagnosis is performed during vehicle operation.

OBD-II Diagnostic Trouble Code (DTC) HOW TO READ DTC AND 1ST TRIP DTC

ECS00E6P


DTC and 1st trip DTC can be read by the following methods.

( with **CONSULT-II** or ( **GST**) CONSULT-II or GST (Generic Scan Tool) Examples: P0705, P0710 etc. These DTC are prescribed by SAE J2012.

(CONSULT-II also displays the malfunctioning component or system.)

- **1st trip DTC No. is the same as DTC No.**
- **Output of the diagnostic trouble code indicates that the indicated circuit has a malfunction. However, in case of the Mode II and GST, they do not indicate whether the malfunction is still occurring or occurred in the past and returned to normal.**
CONSULT-II can identify them as shown below, therefore, CONSULT-II (if available) is recommended.

A sample of CONSULT-II display for DTC and 1st trip DTC is shown on the next page. DTC or 1st trip DTC of a malfunction is displayed in SELF-DIAGNOSTIC RESULTS mode for “ENGINE” with CONSULT-II. Time data indicates how many times the vehicle was driven after the last detection of a DTC.

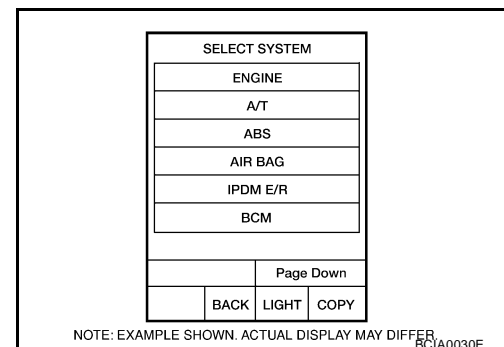

ON BOARD DIAGNOSTIC (OBD) SYSTEM

If the DTC is being detected currently, the time data will be "0".

SELF-DIAG RESULTS	
DTC RESULTS	TIME
PNP SW/CIRC [P0705]	0

SAT015K

If a 1st trip DTC is stored in the ECM, the time data will be "1t".

SELF-DIAG RESULTS	
DTC RESULTS	TIME
PNP SW/CIRC [P0705]	1 t

SAT016K

Freeze Frame Data and 1st Trip Freeze Frame Data

The ECM has a memory function, which stores the driving condition such as fuel system status, calculated load value, engine coolant temperature, short term fuel trim, long term fuel trim, engine speed and vehicle speed at the moment the ECM detects a malfunction.

Data which are stored in the ECM memory, along with the 1st trip DTC, are called 1st trip freeze frame data, and the data, stored together with the DTC data, are called freeze frame data and displayed on CONSULT-II or GST. The 1st trip freeze frame data can only be displayed on the CONSULT-II screen, not on the GST. For detail, refer to [EC-53, "FREEZE FRAME DATA AND 1ST TRIP FREEZE FRAME DATA"](#).

Only one set of freeze frame data (either 1st trip freeze frame data or freeze frame data) can be stored in the ECM. 1st trip freeze frame data is stored in the ECM memory along with the 1st trip DTC. There is no priority for 1st trip freeze frame data and it is updated each time a different 1st trip DTC is detected. However, once freeze frame data (2nd trip detection/MIL on) is stored in the ECM memory, 1st trip freeze frame data is no longer stored. Remember, only one set of freeze frame data can be stored in the ECM. The ECM has the following priorities to update the data.

Priority	Items	
1	Freeze frame data	Misfire — DTC: P0300 - P0306 Fuel Injection System Function — DTC: P0171, P0172, P0174, P0175
2		Except the above items (Includes A/T related items)
3	1st trip freeze frame data	

Both 1st trip freeze frame data and freeze frame data (along with the DTC) are cleared when the ECM memory is erased.

HOW TO ERASE DTC

The diagnostic trouble code can be erased by CONSULT-II, GST or ECM DIAGNOSTIC TEST MODE as described following.

- **If the battery cable is disconnected, the diagnostic trouble code will be lost within 24 hours.**
- **When you erase the DTC, using CONSULT-II or GST is easier and quicker than switching the mode selector on the ECM.**

The following emission-related diagnostic information is cleared from the ECM memory when erasing DTC related to OBD-II. For details, refer to [EC-49, "EMISSION-RELATED DIAGNOSTIC INFORMATION ITEMS"](#).

- **Diagnostic trouble codes (DTC)**
- **1st trip diagnostic trouble codes (1st trip DTC)**
- **Freeze frame data**

ON BOARD DIAGNOSTIC (OBD) SYSTEM

- 1st trip freeze frame data
- System readiness test (SRT) codes
- Test values

How to erase DTC (with CONSULT-II)

- If a DTC is displayed for both ECM and TCM, it is necessary to be erased for both ECM and TCM.
1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 10 seconds and then turn it "ON" (engine stopped) again.
 2. Turn CONSULT-II "ON" and touch "TRANSMISSION".
 3. Touch "SELF-DIAG RESULTS".
 4. Touch "ERASE". (The DTC in the TCM will be erased.) Then touch "BACK" twice.
 5. Touch "ENGINE".
 6. Touch "SELF-DIAG RESULTS".
 7. Touch "ERASE". (The DTC in the ECM will be erased.)

How to erase DTC (With CONSULT-II)

1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 10 seconds and then turn it "ON" (engine stopped) again.

SELECT SYSTEM
ENGINE
TRANSMISSION

SELECT DIAG MODE
WORK SUPPORT
SELF-DIAG RESULTS
DATA MONITOR
CAN DIAG SUPPORT MNTR
ACTIVE TEST
FUNCTION TEST

SELF DIAG RESULTS	
DTC RESULTS	TIME
ATF TEMP SEN/CIRC [P0710]	PAST

2. Turn CONSULT-II "ON", and touch "TRANSMISSION".

3. Touch "SELF DIAG-RESULTS".

4. Touch "ERASE". (The DTC in the ECM will be erased.)

Touch "BACK".

Touch "BACK".

SELECT SYSTEM
ENGINE
TRANSMISSION

SELECT DIAG MODE
WORK SUPPORT
SELF-DIAG RESULTS
DATA MONITOR
DATA MONITOR(SPEC)
CAN DIAG SUPPORT MNTR
ACTIVE TEST

SELF DIAG RESULTS	
DTC RESULTS	TIME
ATF TEMP SEN/CIRC [P0710]	0

5. Touch "ENGINE".

6. Touch "SELF DIAG-RESULTS".

7. Touch "ERASE". (The DTC in the ECM will be erased.)

SCIA5576E

How to erase DTC (with GST)

1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 10 seconds and then turn it "ON" (engine stopped) again.
2. Erase DTC with TCM. Refer to [AT-83, "ERASE SELF-DIAGNOSIS"](#). (The engine warm-up step can be skipped when performing the diagnosis only to erase the DTC.)
3. Select Mode 4 with Generic Scan Tool (GST). For details, refer to [EC-131, "Generic Scan Tool \(GST\) Function"](#).

How to erase DTC (no tools)

The O/D OFF indicator lamp is located on the instrument panel.

ON BOARD DIAGNOSTIC (OBD) SYSTEM

1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 10 seconds and then turn it "ON" (engine stopped) again.
2. Erase DTC with TCM. Refer to [AT-83, "ERASE SELF-DIAGNOSIS"](#) . (The engine warm-up step can be skipped when performing the diagnosis only to erase the DTC.)
3. Erase DTC with ECM. Refer to [EC-63, "How to Erase DTC"](#) .


Malfunction Indicator Lamp (MIL)

ECS00E60

DESCRIPTION

The MIL is located on the instrument panel.

1. The MIL will light up when the ignition switch is turned "ON" without the engine running. This is a bulb check.
 - If the MIL does not light up, refer to [DI-26, "WARNING LAMPS"](#) , or see [EC-719, "MIL AND DATA LINK CONNECTOR"](#) .
2. When the engine is started, the MIL should go off. If the MIL remains on, the on board diagnostic system has detected an engine system malfunction.

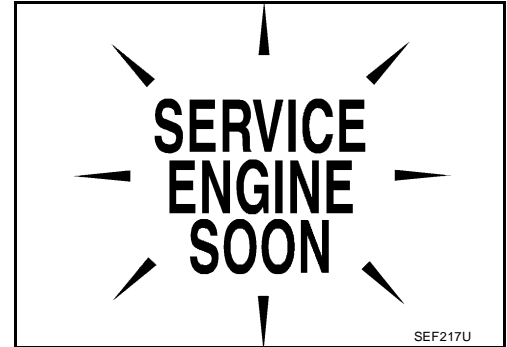

A

B

AT

D

E

F

G

H

I

J

K

L

M

TROUBLE DIAGNOSIS

TROUBLE DIAGNOSIS

PF0:00004

DTC Inspection Priority Chart

ECS00E6R

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

NOTE:

If DTC U1000 is displayed with other DTCs, first perform the trouble diagnosis for DTC U1000. Refer to [AT-84](#).

Priority	Detected items (DTC)
1	U1000 CAN communication line
2	Except above

Fail-Safe

ECS00E6S

The TCM has an electrical fail-safe mode. This mode makes it possible to operate even if there is a malfunction in a main electronic control input/output signal circuit.

In fail-safe mode, a driving condition is selected according to the malfunctioning location, and line pressure is set at the maximum. For this reason, the customer will be subjected to uncomfortable “slipping” or “poor acceleration” of the vehicle.

In that case, handle according to the “diagnostics flow” (Refer to [AT-48](#)).

FAIL-SAFE FUNCTION

If any malfunction occurs in a sensor or solenoid, this function controls the A/T to make driving possible.

NOTE:

Line pressure is set at the maximum in fail-safe mode. Although gear position differs depending on the type of fail-safe modes, CONSULT-II indicates “5th”.

DTC	Malfunction items	Fail-safe*
P0500	Vehicle speed signal	No learning control.
P0613	TCM processor	Fail-safe mode 4
P0705	PNP switch	Fail-safe mode 4
P0710	ATF temperature sensor circuit	Sets ATF temperature data at 111°C (232°F) after 15 minutes. Inhibits lock-up control.
P0711	ATF temperature sensor function	Sets ATF temperature data at 111°C (232°F) after 15 minutes. Inhibits lock-up control.
P0717	Turbine revolution sensor	Fail-safe mode 1
P0722	Revolution sensor	Uses vehicle speed signal from combination meter as a substitute. Inhibits learning control.
P0726	Engine speed signal input circuit performance	Fail-safe mode 1
P0731	1st gear function	No 1st gear, no control for N-D shift.
P0732	2nd gear function	Fail-safe mode 1. Also, ECM restricts engine torque to prevent clutch slipping.
P0733	3rd gear function	Fail-safe mode 1. Also, ECM restricts engine torque to prevent clutch slipping.
P0734	4th gear function	Fail-safe mode 1. Also, ECM restricts engine torque to prevent clutch slipping.
P0735	5th gear function	Fail-safe mode 1. Also, ECM restricts engine torque to prevent clutch slipping.
P0744	Lock-up function	Fail-safe mode 1
P0745	Pressure control solenoid valve A	Fail-safe mode 1. Also, ECM restricts engine torque to prevent clutch slipping.

TROUBLE DIAGNOSIS

DTC	Malfunction items	Fail-safe*	
P0750	Shift solenoid valve A	Any one of fail-safe modes ● Fail-safe mode 1 ● Fail-safe mode 7. Also, ECM restricts input torque to prevent clutch slipping.	A B
P0755	Shift solenoid valve B	Any one of fail-safe modes ● Fail-safe mode 1 ● Fail-safe mode 8	AT
P0760	Shift solenoid valve C	Any one of fail-safe modes ● Fail-safe mode 2 ● Fail-safe mode 5 ● Fail-safe mode 9	D
P0762	Shift solenoid valve C stuck ON	Fail-safe mode 2. Also, ECM restricts engine torque to prevent clutch slipping.	E
P0765	Shift solenoid valve D	Any one of fail-safe modes ● Fail-safe mode 1 ● Fail-safe mode 10. Also, ECM restricts input torque to prevent clutch slipping.	F
P0770	Shift solenoid valve E	Any one of fail-safe modes ● Fail-safe mode 1. Also, ECM restricts engine torque to prevent clutch slipping. ● Fail-safe mode 6. Also, ECM restricts engine torque to prevent clutch slipping.	G H
P0775	Pressure control solenoid valve B	Fail-safe mode 3	I
P0780	Shift function	Fail-safe mode 1. Also, ECM restricts input torque to prevent clutch slipping.	J
P0795	Pressure control solenoid valve C	Fail-safe mode 1	K
P0797	Pressure control solenoid valve C stuck ON	Fail-safe mode 1	L
P0825	Lever switch	No lever switch control.	M
P0882	TCM power input signal	Fail-safe mode 1	
P1726	Electric throttle control	● The accelerator opening angle is controlled by ECM according to a pre-determined accelerator angle to make driving possible. ● No lock-up, no learning control.	
U1000	CAN communication circuit	Any one of fail-safe modes ● Fail-safe mode 1 ● Fail-safe mode 1. Also, ECM restricts engine torque to prevent clutch slipping. ● No learning control. ● No lock-up, no learning control, no special shift mode control.	

*: For fail-safe modes 1 to 10, refer to [AT-45, "Fail-safe mode list"](#).

Fail-safe mode list

Fail-safe mode	Selector lever	Gear position*1	Shift solenoid valve					Pressure control solenoid valve		
			A	B	C	D	E	A	B	C
Fail-safe mode 1	D position	4th	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
	L position	2nd	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF
	R position	Reverse	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF
Fail-safe mode 2 (CONSULT-II displays "8")	D position	3rd	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF
	L position	2nd	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF
	R position	Reverse	OFF	OFF	ON	OFF	ON	OFF	OFF	OFF

TROUBLE DIAGNOSIS

Fail-safe mode	Selector lever	Gear position*1	Shift solenoid valve					Pressure control solenoid valve		
			A	B	C	D	E	A	B	C
Fail-safe mode 3	D position	4th	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
	L position	2nd	OFF	OFF	ON	OFF	ON	OFF	OFF	OFF
	R position	Reverse	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF
Fail-safe mode 4	D position	4th	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
	L position	4th	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
	R position	Reverse	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
Fail-safe mode 5	D position	4th	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
	L position	4th	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
	R position	Reverse	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF
Fail-safe mode 6	D position	4th	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
	L position	2nd	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF
	R position	Reverse	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF
Fail-safe mode 7	D position	4th	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF
	L position	2nd	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF
	R position	Reverse*2	ON	OFF	ON	ON	OFF	OFF	OFF	OFF
Fail-safe mode 8 (CONSULT-II displays "1")	D position	5th	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF
	L position	(2nd)*3	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF
	R position	Reverse	OFF	ON	OFF	OFF	ON	OFF	OFF	OFF
Fail-safe mode 9 (CONSULT-II displays "8")	D position	4th	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF
	L position	4th	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
	R position	Reverse	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF
Fail-safe mode 10 (CONSULT-II displays "6")	D position	4th	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF
	L position	3rd	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF
	R position	Reverse*2	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF

*1: CONSULT-II indicates "5th".

*2: Reverse gear ratio difference (Gear ratio: 3.342)

*3: 3rd gear ratio difference (Gear ratio: 2.301)

How To Perform Trouble Diagnosis For Quick and Accurate Repair


INTRODUCTION

EC500E6T

The TCM receives a signal from the vehicle speed signal, ECM (throttle opening) or PNP switch and provides shift control or lock-up control via A/T solenoid valves.

The TCM also communicates with the ECM by means of a signal sent from sensing elements used with the OBD-related parts of the A/T system for malfunction-diagnostic purposes. The TCM is capable of diagnosing malfunctioning parts while the ECM can store malfunctions in its memory.

Input and output signals must always be correct and stable in the operation of the A/T system. The A/T system must be in good operating condition and be free of valve seizure, solenoid valve malfunction, etc.

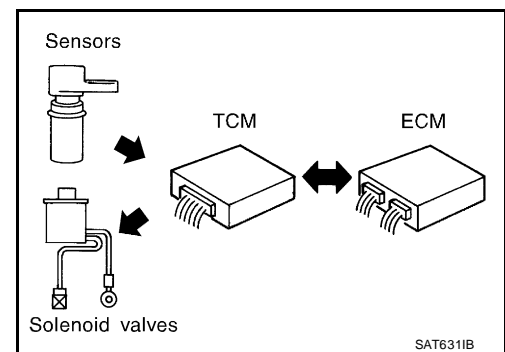


SAT6311B

TROUBLE DIAGNOSIS

It is much more difficult to diagnose an error that occurs intermittently rather than continuously. Most intermittent errors are caused by poor electric connections or improper wiring. In this case, careful checking of suspected circuits may help prevent the replacement of good parts.


A visual check only may not find the cause of the errors. A road test with CONSULT-II (or GST) or a circuit tester connected should be performed. Follow the [AT-48, "WORK FLOW"](#) .

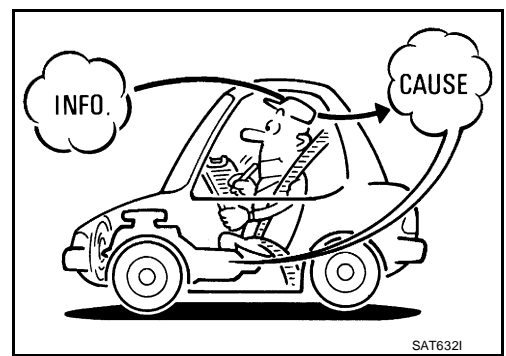

Before undertaking actual checks, take a few minutes to talk with a customer who approaches with a driveability complaint. The customer can supply good information about such errors, especially intermittent ones. Find out what symptoms are present and under what conditions they occur. A "Diagnostic Worksheet" as shown on the example (Refer to [AT-49](#)) should be used.

Start your diagnosis by looking for "conventional" errors first. This will help troubleshoot driveability errors on an electronically controlled engine vehicle.

Also check related Service bulletins.

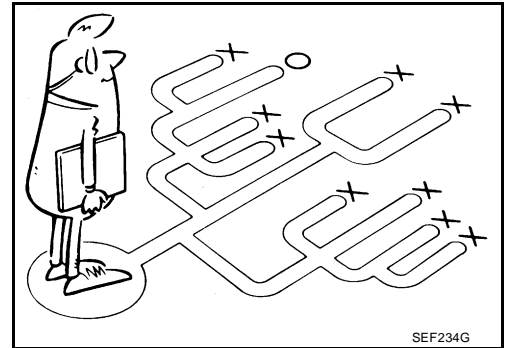

A
B
AT
D
E
F
G
H
I
J
K
L
M


TROUBLE DIAGNOSIS

WORK FLOW

A good understanding of the malfunction conditions can make troubleshooting faster and more accurate. In general, each customer feels differently about a malfunction. It is important to fully understand the symptoms or conditions for a customer complaint.

Make good use of the two sheets provided, "Information From Customer" (Refer to [AT-49](#)) and "Diagnostic Worksheet" (Refer to [AT-49](#)), to perform the best troubleshooting possible.

Work Flow Chart

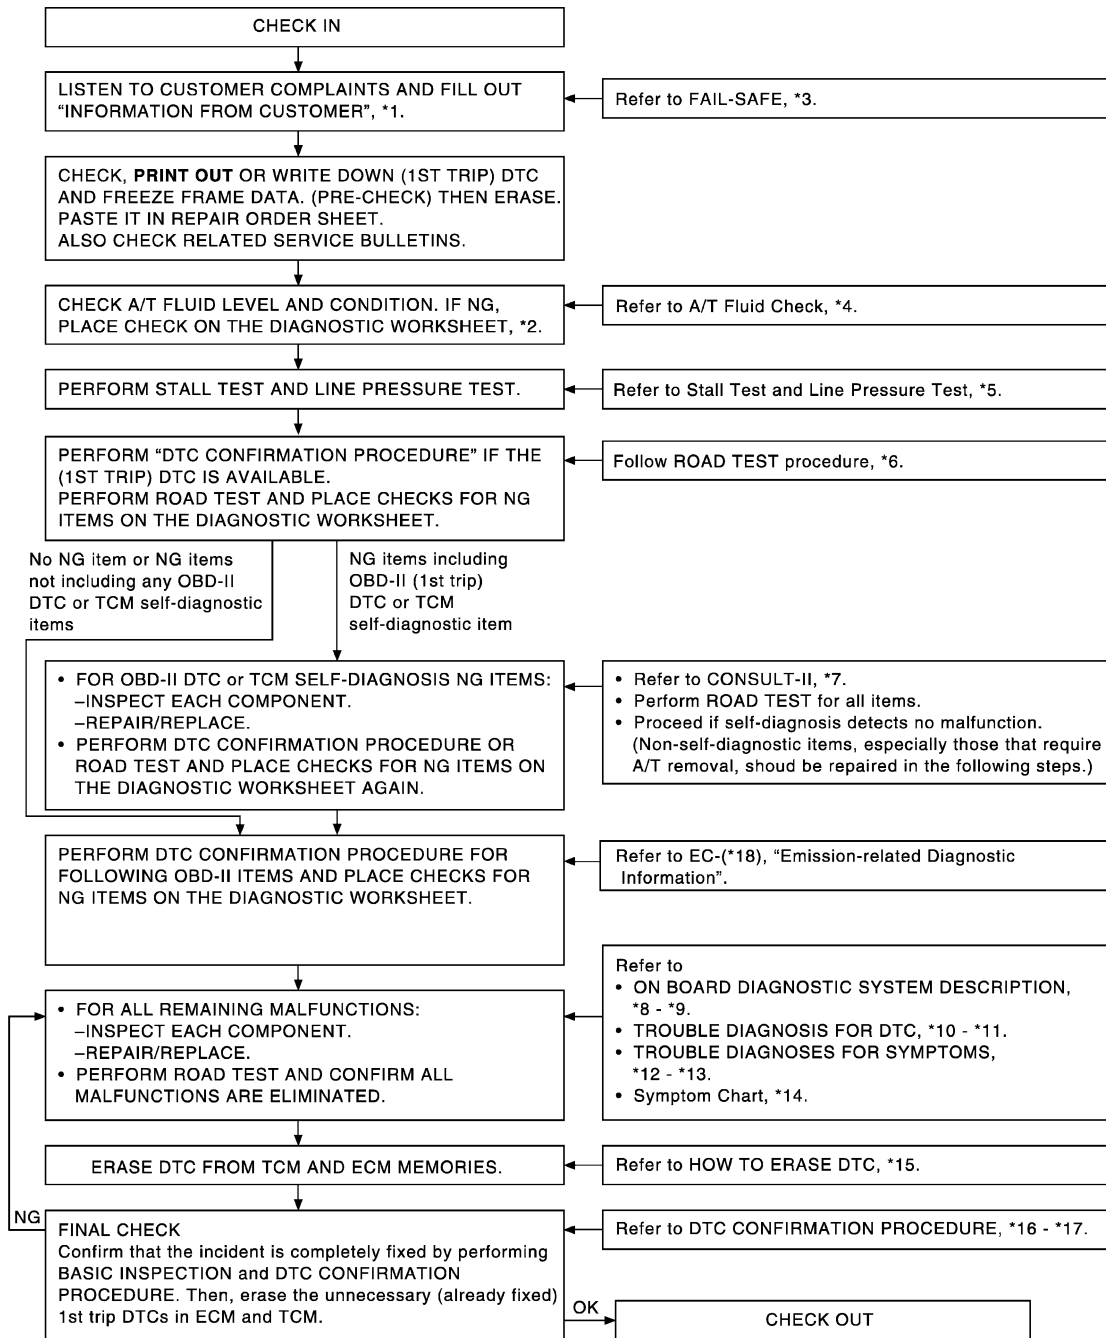

*1. [AT-49](#)

*4. [AT-55](#)

*7. [AT-75](#)

*10. [AT-84](#)

*13. [AT-224](#)

*16. [AT-84](#)

*2. [AT-49](#)

*5. [AT-55](#), [AT-57](#)

*8. [AT-40](#)

*11. [AT-203](#)

*14. [AT-65](#)

*17. [AT-203](#)

*3. [AT-44](#)

*6. [AT-58](#)

*9. [AT-43](#)

*12. [AT-204](#)

*15. [AT-41](#)

*18. [EC-49](#)

SCIA0501E

TROUBLE DIAGNOSIS

	<input type="checkbox"/> Perform all road tests and enter checks in required inspection items.	AT-58
4	Check before engine is started	AT-59
	<input type="checkbox"/> The O/D OFF indicator lamp does not come on. AT-204 . <input type="checkbox"/> Perform self-diagnostics. Enter checks for detected items.	AT-59
	4-1. <ul style="list-style-type: none"> <input type="checkbox"/> Vehicle speed sensor-MTR. AT-87 . <input type="checkbox"/> TCM processor. AT-89 . <input type="checkbox"/> PNP switch. AT-91 . <input type="checkbox"/> A/T fluid temperature sensor circuit. AT-96 . <input type="checkbox"/> A/T fluid temperature sensor performance. AT-101 . <input type="checkbox"/> Turbine revolution sensor circuit. AT-106 . <input type="checkbox"/> Vehicle speed sensor-A/T (revolution sensor) circuit. AT-110 . <input type="checkbox"/> Engine speed input circuit performance. AT-114 . <input type="checkbox"/> 1st gear function. AT-116 . <input type="checkbox"/> 2nd gear function. AT-119 . <input type="checkbox"/> 3rd gear function. AT-124 . <input type="checkbox"/> 4th gear function. AT-129 . <input type="checkbox"/> 5th gear function. AT-133 . <input type="checkbox"/> Lock-up function. AT-138 . <input type="checkbox"/> Shift function. AT-181 . <input type="checkbox"/> Pressure control solenoid valve A. AT-141 . <input type="checkbox"/> Pressure control solenoid valve B. AT-176 . <input type="checkbox"/> Pressure control solenoid valve C. AT-185 . <input type="checkbox"/> Shift solenoid valve A. AT-146 . <input type="checkbox"/> Shift solenoid valve B. AT-151 . <input type="checkbox"/> Shift solenoid valve C. AT-156 . <input type="checkbox"/> Shift solenoid valve D. AT-166 . <input type="checkbox"/> Shift solenoid valve E. AT-171 . <input type="checkbox"/> Pressure control solenoid valve C stuck ON. AT-190 . <input type="checkbox"/> Shift solenoid valve C stuck ON. AT-161 . <input type="checkbox"/> Lever switch circuit. AT-195 . <input type="checkbox"/> TCM power input signal. AT-199 . <input type="checkbox"/> Electric throttle control system. AT-203 . <input type="checkbox"/> CAN communication. AT-84 . <input type="checkbox"/> Battery <input type="checkbox"/> Other 	
4-2.	Idle inspection <ul style="list-style-type: none"> <input type="checkbox"/> Engine cannot be started in "P" and "N" position. AT-206 . <input type="checkbox"/> In " P" position, vehicle moves when pushed. AT-206 . <input type="checkbox"/> In "N" position, vehicle moves. AT-207 . <input type="checkbox"/> Large shock when shifted from "N" to "D" position. AT-208 . <input type="checkbox"/> Vehicle does not creep backward in "R" position. AT-209 . <input type="checkbox"/> Vehicle does not creep forward in "D" or "L" position. AT-210 . 	AT-59
4-3.	Driving tests <ul style="list-style-type: none"> Part 1 <input type="checkbox"/> Vehicle cannot be started from D1. AT-211 . <input type="checkbox"/> A/T does not shift: D1 → D2. AT-211 . <input type="checkbox"/> A/T does not shift: D2 → D3. AT-212 . <input type="checkbox"/> A/T does not shift: D3 → D4. AT-213 . <input type="checkbox"/> A/T does not shift: D4 → D5. AT-214 . <input type="checkbox"/> A/T does not perform lock-up. AT-215 . <input type="checkbox"/> A/T does not hold lock-up condition. AT-216 . <input type="checkbox"/> Lock-up is not released. AT-217 . 	AT-61


TROUBLE DIAGNOSIS

4	4-3	Part 2 <input type="checkbox"/> Vehicle cannot be started from D1. AT-211 . <input type="checkbox"/> A/T does not shift: D1 → D2. AT-211 . <input type="checkbox"/> A/T does not shift: D2 → D3. AT-212 . <input type="checkbox"/> A/T does not shift: D3 → D4. AT-213 .	AT-62	A
		Part 3 <input type="checkbox"/> A/T does not shift: 5th gear → 4th gear, when lever switch “OFF” → “ON”. AT-218 . <input type="checkbox"/> A/T does not shift: 4th gear → 3rd gear, when selector lever “D” → “L”. AT-219 . <input type="checkbox"/> A/T does not shift: 3rd gear → 2nd gear, when lever switch “OFF” → “ON”. AT-221 . <input type="checkbox"/> A/T does not shift: 2nd gear → 1st gear, when release accelerator pedal. AT-222 . <input type="checkbox"/> Vehicle does not decelerate by engine brake. AT-223 . <input type="checkbox"/> Perform self-diagnostics. Enter checks for detected items.	AT-63	B AT
		<input type="checkbox"/> Vehicle speed sensor-MTR. AT-87 . <input type="checkbox"/> TCM processor. AT-89 . <input type="checkbox"/> PNP switch. AT-91 . <input type="checkbox"/> A/T fluid temperature sensor circuit. AT-96 . <input type="checkbox"/> A/T fluid temperature sensor performance. AT-101 . <input type="checkbox"/> Turbine revolution sensor circuit. AT-106 . <input type="checkbox"/> Vehicle speed sensor-A/T (revolution sensor) circuit. AT-110 . <input type="checkbox"/> Engine speed input circuit performance. AT-114 . <input type="checkbox"/> 1st gear function. AT-116 . <input type="checkbox"/> 2nd gear function. AT-119 . <input type="checkbox"/> 3rd gear function. AT-124 . <input type="checkbox"/> 4th gear function. AT-129 . <input type="checkbox"/> 5th gear function. AT-133 . <input type="checkbox"/> Lock-up function. AT-138 . <input type="checkbox"/> Shift function. AT-181 . <input type="checkbox"/> Pressure control solenoid valve A. AT-141 . <input type="checkbox"/> Pressure control solenoid valve B. AT-176 . <input type="checkbox"/> Pressure control solenoid valve C. AT-185 . <input type="checkbox"/> Shift solenoid valve A. AT-146 . <input type="checkbox"/> Shift solenoid valve B. AT-151 . <input type="checkbox"/> Shift solenoid valve C. AT-156 . <input type="checkbox"/> Shift solenoid valve D. AT-166 . <input type="checkbox"/> Shift solenoid valve E. AT-171 . <input type="checkbox"/> Pressure control solenoid valve C stuck ON. AT-190 . <input type="checkbox"/> Shift solenoid valve C stuck ON. AT-161 . <input type="checkbox"/> Lever switch circuit. AT-195 . <input type="checkbox"/> TCM power input signal. AT-199 . <input type="checkbox"/> Electric throttle control system. AT-203 . <input type="checkbox"/> CAN communication. AT-84 . <input type="checkbox"/> Battery <input type="checkbox"/> Other		D E F G H I J K L
<input type="checkbox"/> Inspect each system for items found to be NG in the self-diagnostics and repair or replace the malfunction parts.		M		
6	<input type="checkbox"/> Perform all road tests and enter the checks again for the required items.	AT-58		
7	<input type="checkbox"/> For any remaining NG items, perform the “diagnostics procedure” and repair or replace the malfunction parts. See the chart for diagnostics by symptoms. (This chart also contains other symptoms and inspection procedures.)	AT-65		
8	<input type="checkbox"/> Erase the results of the self-diagnostics from the TCM.	AT-78AT-83		

TROUBLE DIAGNOSIS

A/T Electrical Parts Location

ECS00E6U

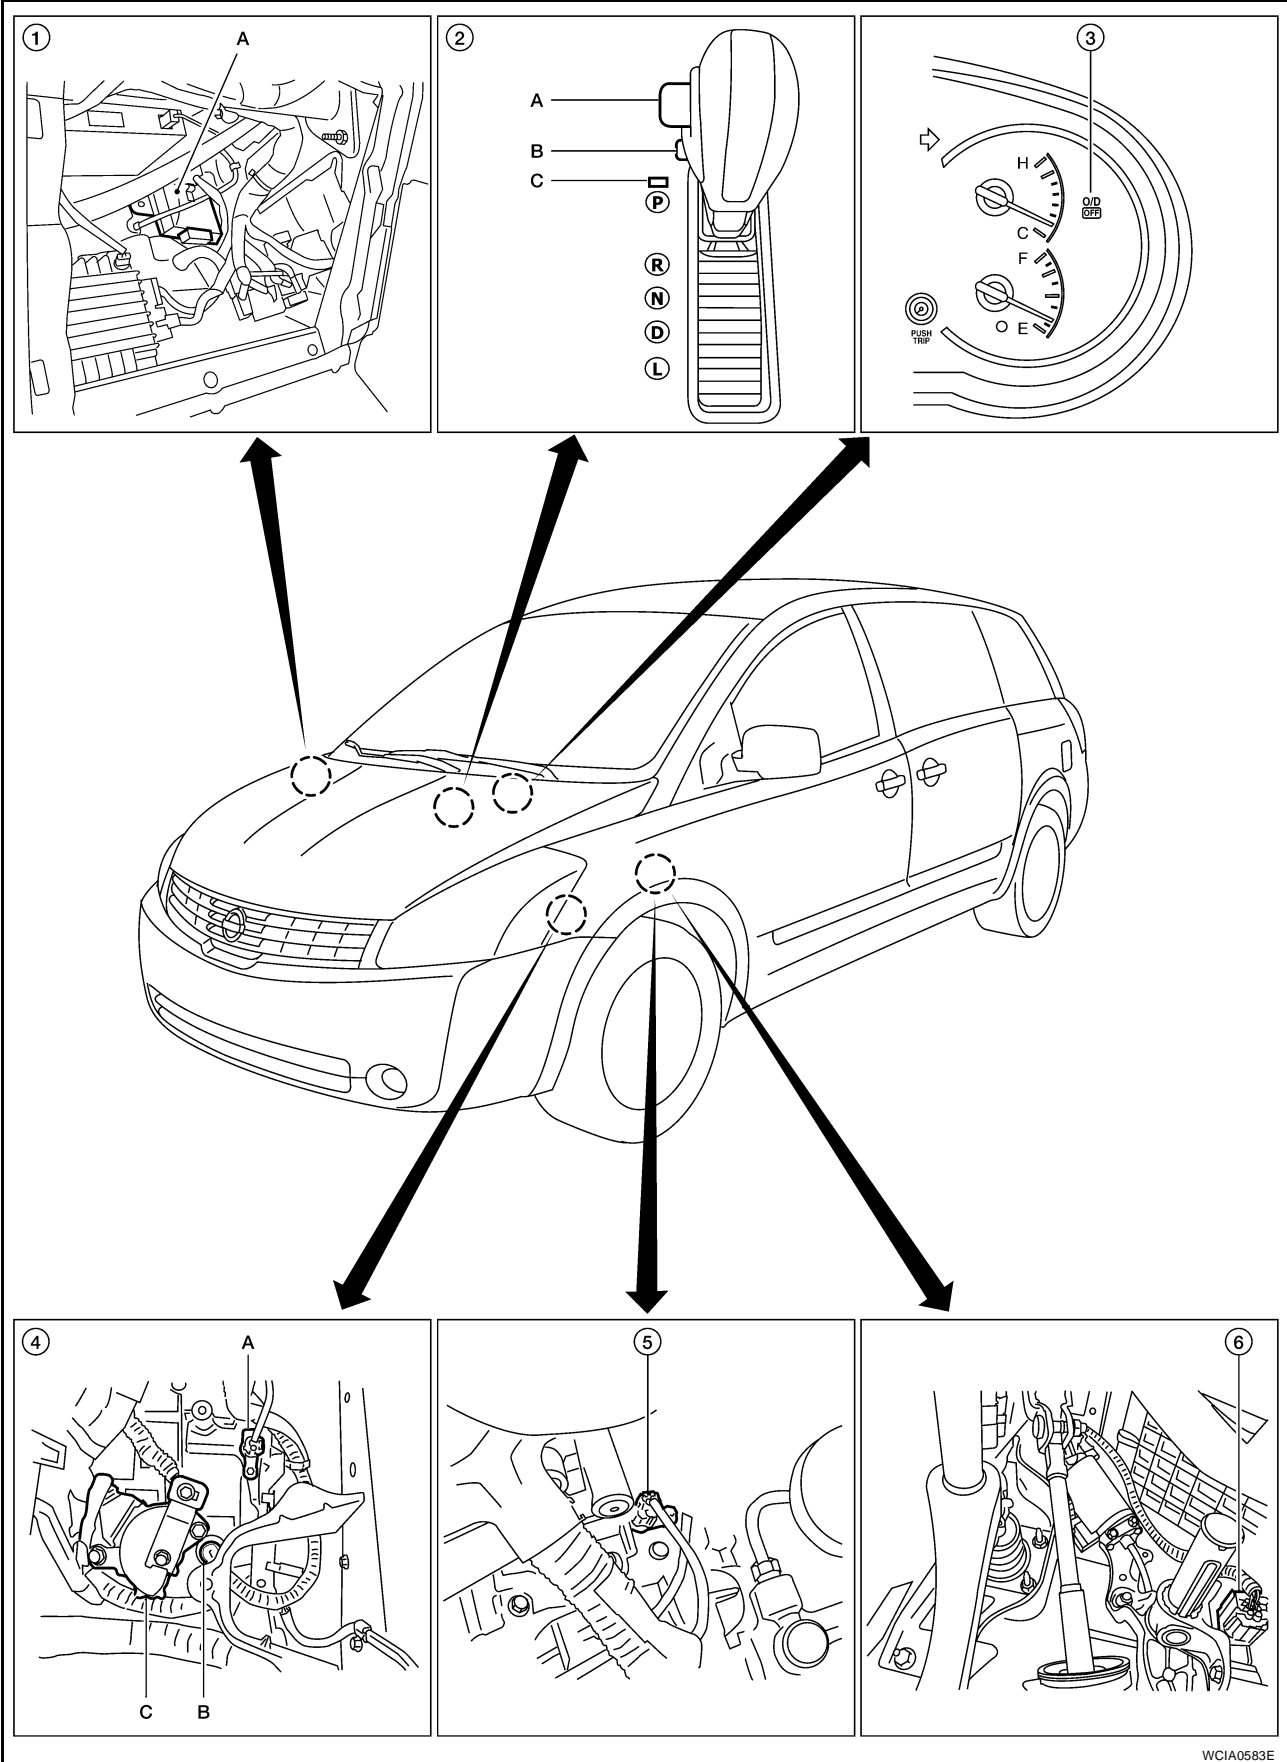

WCIA0583E

TROUBLE DIAGNOSIS

- | | | | |
|---|---|---|---|
| 1. A. TCM (transmission control module
(view with glove box removed) | 2. A. Shift lock button
B. Overdrive control switch
C. Shift position indicator | 3. O/D OFF indicator | A |
| 4. A. Turbine revolution sensor F37
B. Terminal cord assembly F30, F62
C. Park/neutral position (PNP) switch
F29
(view with battery tray removed) | 5. Revolution sensor F38
(view with intake air duct removed) | 6. Accelerator pedal position sensor
harness connector E20 | B |

AT

D

E

F

G

H

I

J

K


L

M

TROUBLE DIAGNOSIS

Circuit Diagram

ECS00E6V

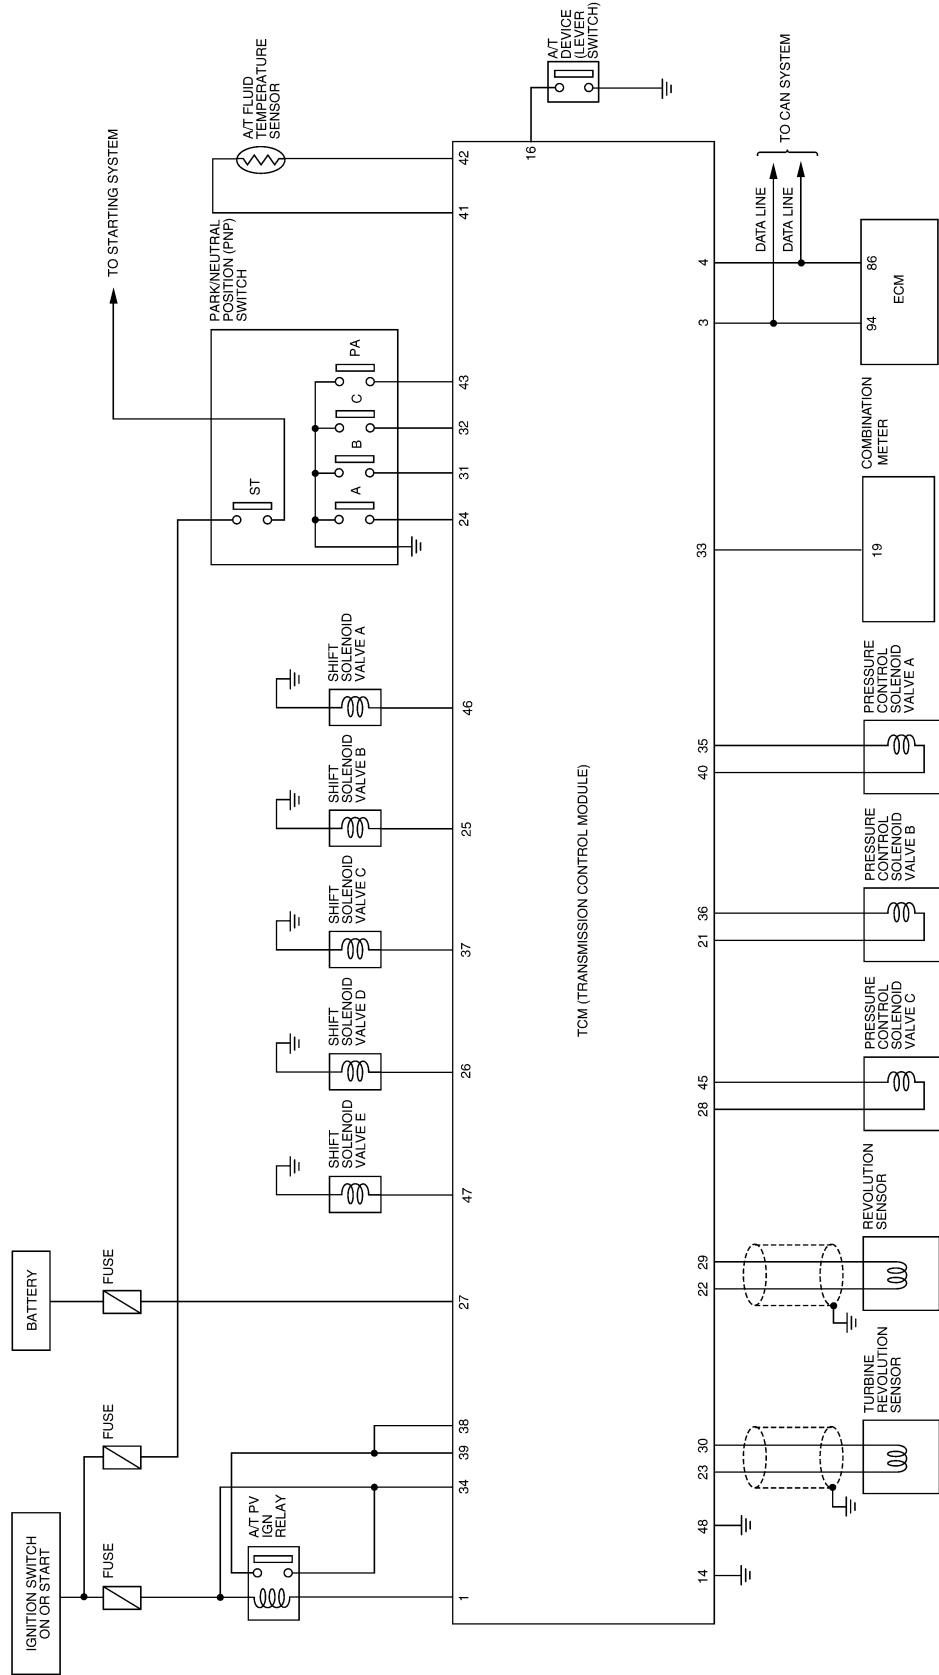

TROUBLE DIAGNOSIS

Inspections Before Trouble Diagnosis

ECS00E6W

A/T FLUID CHECK


Fluid leakage and fluid level check

- Inspect for fluid leakage and check the fluid level. Refer to [MA-23, "Checking A/T Fluid"](#).

Fluid condition check

Inspect the fluid condition.


Fluid status	Conceivable Cause	Required Operation
Varnished (viscous varnish state)	Clutch, brake scorched	Replace the A/T fluid and check the A/T main unit and the vehicle for malfunctions (wire harnesses, cooler pipes, etc.)
Milky white or cloudy	Water in the fluid	Replace the A/T fluid and check for places where water is getting in.
Large amount of metal powder mixed in	Unusual wear of sliding parts within A/T	Replace the A/T fluid and check for improper operation of the A/T.

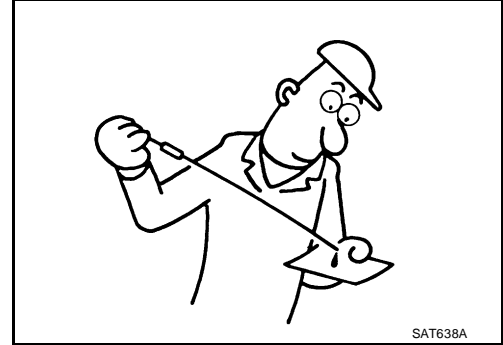


STALL TEST

Stall test procedure

- Inspect the amount of engine oil. Replenish the engine oil if necessary.
- Drive for about 10 minutes to warm up the vehicle so that the A/T fluid temperature is 50 to 80°C (122 to 176°F). Inspect the amount of A/T fluid. Replenish if necessary.
- Switch of A/C and light etc. are off.

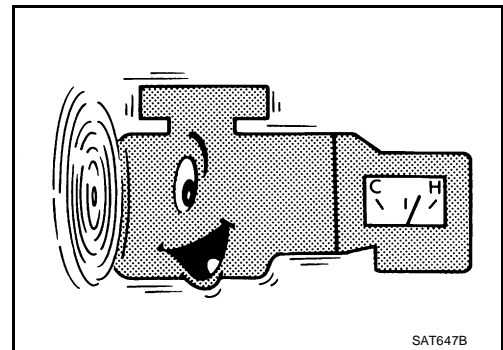

- Securely engage the parking brake so that the tires do not turn.

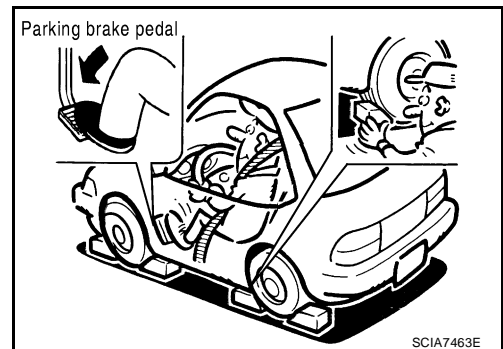


- Engine start, apply foot brake, and place selector lever in "D" position.
- While holding down the foot brake, gradually press down the accelerator pedal.
- Quickly read off the stall speed, then quickly remove your foot from the accelerator pedal.

CAUTION:

Do not hold down the accelerator pedal for more than 5 seconds during this test.

- Move the selector lever to the "N" position.
- Cool down the A/T fluid.

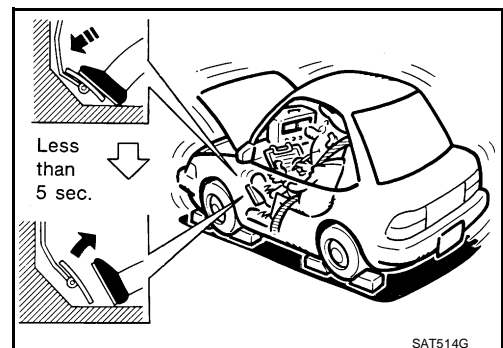

A
B
AT
D
E
F
G
H
I
J
K
L
M

TROUBLE DIAGNOSIS

CAUTION:

Run the engine at idle for at least one minute.

10. Repeat step 5 through 9 with selector lever in “L” and “R” positions.

Stall speed: 2,430 - 2,730 rpm

Judgement stall test

	Selector lever position		Possible cause
	D, L	R	
Stall rotation	H	O	<ul style="list-style-type: none"> ● Line pressure is low (pressure control solenoid valve A malfunction, primary regulator valve malfunction) ● Forward clutch (slipping) ● One-way clutch No. 2
	O	H	<ul style="list-style-type: none"> ● Line pressure is low (pressure control solenoid valve A malfunction, primary regulator valve malfunction) ● Direct clutch (slipping) ● 1st and reverse brake (slipping)
	L	L	<ul style="list-style-type: none"> ● Engine or torque converter one-way clutch
	H	H	<ul style="list-style-type: none"> ● Line pressure is low (pressure control solenoid valve A malfunction, primary regulator valve malfunction) ● B5 brake (slipping) ● Oil pump ● Oil strainer (clogging) ● Oil leak for each range circuit

O: Stall speed within standard value position


H: Stall speed higher than standard value

L: Stall speed lower than standard value

TIME LAG TEST

Time lag test procedure


1. Inspect the amount of engine oil. Replenish the engine oil if necessary.
2. Drive for about 10 minutes to warm up the vehicle so that the A/T fluid temperature is 50 to 80°C (122 to 176°F). Check the amount of A/T fluid. Replenish if necessary.
3. Switch of A/C and light etc. are off.

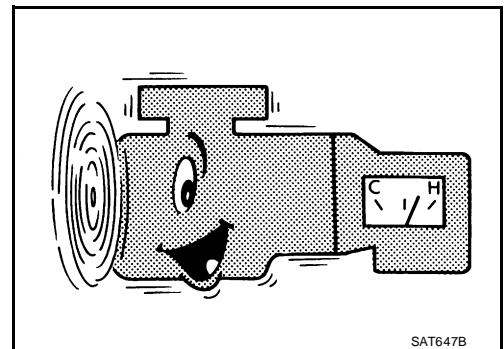

4. Securely engage the parking brake so that the tires do not turn.
5. Engine start, apply foot brake.
6. Measure time lag by using stopwatch from moment when shift lever is shifted in “N” to “D” position and “N” to “R” position until moment slightly shock can be felt.

CAUTION:

- **Make sure to take 3 measurement and take the average value.**
- **Make sure to keep interval for more than one minute between time lag tests.**
(That purpose is to remove clutch/brake pressure was left unfinished.)

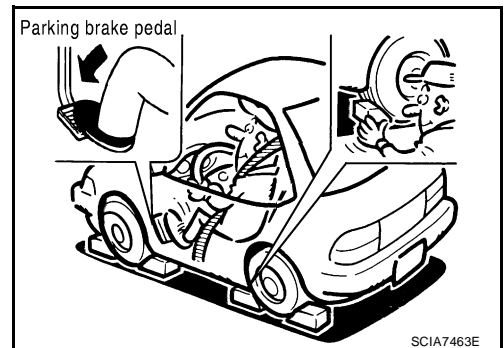

TROUBLE DIAGNOSIS

Time lag:

"N" to "D" position: Less than 0.7 sec.

"N" to "R" position: Less than 1.2 sec.


Judgement time lag test

Result of time lag test	Possible cause
Longer than standards "N" to "D" position	<ul style="list-style-type: none"> ● Line pressure is low (pressure control solenoid valve A malfunction, primary regulator valve malfunction) ● Forward clutch (slipping) ● One-way clutch No. 2 ● Oil leak for "D" range circuit
Longer than standards "N" to "R" position	<ul style="list-style-type: none"> ● Line pressure is low ● Direct clutch (slipping) ● 1st and reverse brake (slipping) ● Oil leak for "R" range circuit ● Oil pump ● Oil strainer (clogging)

LINE PRESSURE TEST

Line pressure test port

Location of line pressure test port is show in the figure.

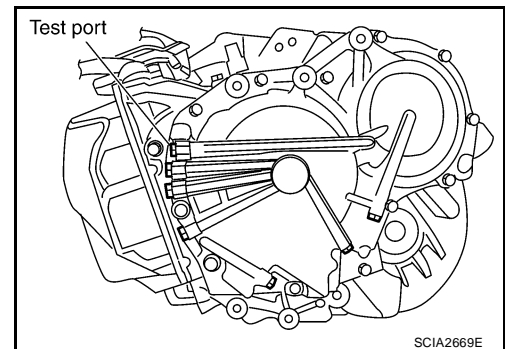

Line pressure test procedure

1. Inspect the amount of engine oil and replenish if necessary.
2. Drive the car for about 10 minutes to warm it up so that the A/T fluid reaches in range of 50 to 80°C (122 to 176°F), then inspect the amount of A/T fluid and replenish if necessary.

NOTE:


The automatic fluid temperature rises in range of 50 to 80°C (122 to 176°F) during 10 minutes of driving.

3. Switch of A/C and light etc. are off.
4. After warming up A/T, remove the oil pressure detection plug and install the oil pressure gauge [SST: (J-34301-C)] and adapter [SST: (J-45542)].

CAUTION:

Make sure to check no oil leak after installing oil pressure gage.

5. Securely engage the parking brake so that the tires do not turn.

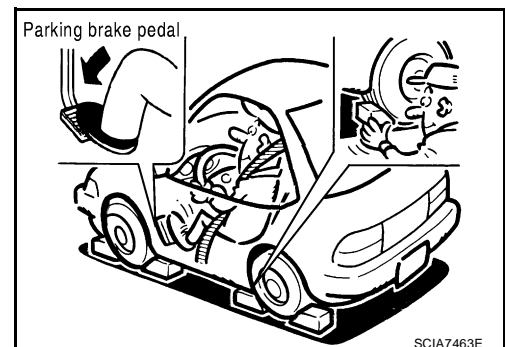

TROUBLE DIAGNOSIS


6. Start the engine, then measure the line pressure at both idle and the stall speed.

CAUTION:

- Keep the brake pedal pressed all the way down during measurement.
- When measuring the line pressure at the stall speed, refer to [AT-55, "STALL TEST"](#) .

7. After the measurements are complete, install the oil pressure detection plug and tighten to the specified torque.

 :7.4 N·m (0.75 kg·m, 65 in·lb)

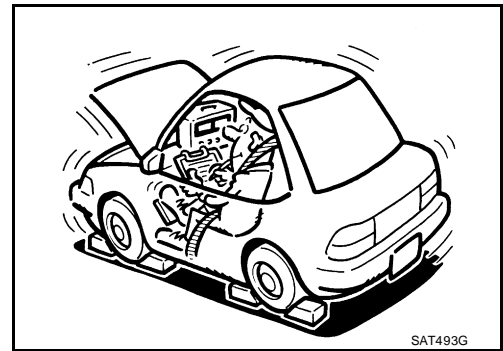

CAUTION:

Do not reuse O-ring.

Line pressure

Engine speed	Line pressure kPa (kg/cm ² , psi)	
	D, L positions	R position
At idle speed	333 - 392 (3.4 - 4.0, 48 - 57)	500 - 608 (5.1 - 6.2, 73 - 88)
At stall speed	1,285 - 1,393 (13.1 - 14.2, 186 - 202)	1,706 - 1,981 (17.4 - 20.2, 247 - 287)


Judgement of line pressure test

Judgement	Possible cause
Higher than standards both "D", "L" and "R" positions	<ul style="list-style-type: none"> ● Pressure control solenoid valve A malfunction ● Primary regulator valve malfunction
Lower than standards both "D", "L" and "R" positions	<ul style="list-style-type: none"> ● Pressure control solenoid valve A malfunction ● Primary regulator valve malfunction ● Oil pump malfunction ● B5 bake malfunction ● Oil leak for each range circuit malfunction
Lower than standards only "D" position	<ul style="list-style-type: none"> ● Oil leak for "D" range circuit malfunction ● Forward clutch malfunction
Lower than standards only "R" position	<ul style="list-style-type: none"> ● Oil leak for "R" range circuit malfunction ● Direct clutch malfunction ● 1st and reverse brake malfunction

ROAD TEST

Description

- The road test inspects overall performance of the A/T and analyzes possible malfunction causes.
 - The road test is perform in the following three stages.
1. Check before engine is started. Refer to [AT-59](#) .
 2. Check at idle. Refer to [AT-59](#) .
 3. Cruise test
 - Inspect all the items from Part 1 to Part 3. Refer to [AT-61](#) , [AT-62](#) , [AT-63](#) .

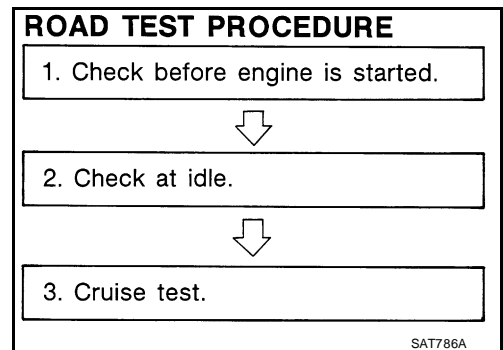

TROUBLE DIAGNOSIS

- Before beginning the road test, check the test procedure and inspection items.
- Test all inspection items until the symptom is uncovered. Diagnose NG items when all road tests are complete.



ECS00E6X

Check Before Engine is Started

1. CHECK O/D OFF INDICATOR LAMP

1. Park vehicle on level surface.
2. Move selector lever to "P" position.
3. Turn ignition switch "OFF" and wait at least 10 seconds.
4. Turn ignition switch "ON". (Do not start engine.)

Does O/D OFF indicator lamp light up for about 2 seconds?

YES >> 1. Turn ignition switch "OFF".

2. Perform the self-diagnostics and record all NG items on the diagnostics worksheet. Refer to [AT-81, "Diagnostic Procedure"](#).

3. Go to [AT-59, "Check at Idle"](#).

No >> Stop the road test and go to [AT-204, "O/D OFF Indicator Lamp Does Not Come On"](#).

Check at Idle

ECS00E6Y

1. CHECK STARTING THE ENGINE

1. Park vehicle on level surface.
2. Move selector lever to "P" position.
3. Turn ignition switch "OFF".
4. Turn ignition switch "START".

Does the engine start?

YES >> GO TO 2.

No >> Stop the road test and go to [AT-206, "Engine Cannot Be Started In "P" or "N" Position"](#).

2. CHECK STARTING THE ENGINE

1. Turn ignition switch "ON". (Do not start engine.)
2. Move selector lever in "D", "L" or "R" position.
3. Turn ignition switch "START".

Does the engine start in either position?

YES >> Stop the road test and go to [AT-206, "Engine Cannot Be Started In "P" or "N" Position"](#).

No >> GO TO 3.

TROUBLE DIAGNOSIS

3. CHECK "P" POSITION FUNCTIONS

1. Move selector lever to "P" position.
2. Turn ignition switch "OFF".
3. Release the parking brake.
4. Push the vehicle forward or backward.
5. Engage the parking brake.

When you push the vehicle with disengaging the parking brake, does it move?

- YES >> Enter a check mark at "In P position, vehicle moves when pushed" on the diagnostics worksheet, then continue the road test.
- No >> GO TO 4.

4. CHECK "N" POSITION FUNCTIONS

1. Start the engine.
2. Move selector lever to "N" position.
3. Release the parking brake.

Does vehicle move forward or backward?

- YES >> Enter a check mark at "In N position, vehicle moves" on the diagnostics worksheet, then continue the road test.
- No >> GO TO 5.

5. CHECK SHIFT SHOCK

1. Engage the brake.
2. Move selector lever to "D" position.

When the transaxle is shifted from "N" to "D", is there an excessive shock?

- YES >> Enter a check mark at "Large shock when shifted from N to D position" on the diagnostics worksheet, then continue the road test.
- No >> GO TO 6.

6. CHECK "R" POSITION FUNCTIONS

1. Engage the brake.
2. Move selector lever to "R" position.
3. Disengage the brake for 4 to 5 seconds.

Does the vehicle creep backward?

- YES >> GO TO 7.
- No >> Enter a check mark at "Vehicle does not creep backward in R position" on the diagnostics worksheet, then continue the road test.

7. CHECK "D" AND "L" POSITIONS FUNCTIONS

Inspect whether the vehicle moves forward when the transaxle is put into the "D" and "L" positions.

Does the vehicle move forward in the "D" and "L" positions?

- YES >> Go to [AT-61, "Cruise Test - Part 1"](#) , [AT-62, "Cruise Test - Part 2"](#) , and [AT-63, "Cruise Test - Part 3"](#) .
- No >> Enter a check mark at "Vehicle does not creep forward in D or L position" on the diagnostics worksheet, then continue the road test.

TROUBLE DIAGNOSIS

EC500E6Z

Cruise Test - Part 1

1. CHECK STARTING OUT FROM D1

1. Drive the vehicle for about 10 minutes to warm up the engine oil and A/T fluid.
Appropriate temperature for the A/T fluid: 50 - 80°C (122 - 176°F)
2. Park the vehicle on a level surface.
3. Move selector lever to "P" position.
4. Start the engine.
5. Move selector lever to "D" position.
6. Press the accelerator pedal about half way down to accelerate the vehicle.

With CONSULT-II

Read off the gear positions.

Starts from D1?

YES >> GO TO 2.

No >> Enter a check mark at "Vehicle cannot be started from D1" on the diagnostics worksheet, then continue the road test.

2. CHECK SHIFT-UP D1 → D2

Press down the accelerator pedal about half way and inspect if the vehicle shifts up (D1 → D2) at the appropriate speed.

- Refer to [AT-65](#).

With CONSULT-II

Read the gear position, throttle degree of opening, and vehicle speed.

Does the A/T shift-up D1 → D2 at the correct speed?

YES >> GO TO 3.

No >> Enter a check mark at "A/T does not shift D1 → D2" on the diagnostics worksheet, then continue the road test.

3. CHECK SHIFT-UP D2 → D3

Press down the accelerator pedal about half way and inspect if the vehicle shifts up (D2 → D3) at the appropriate speed.

- Refer to [AT-65](#).

With CONSULT-II

Read the gear position, throttle degree of opening, and vehicle speed.

Does the A/T shift-up D2 → D3 at the correct speed?

YES >> GO TO 4.

No >> Enter a check mark at "A/T does not shift D2 → D3" on the diagnostics worksheet, then continue the road test.

4. CHECK SHIFT-UP D3 → D4

Press down the accelerator pedal about half way and inspect if the vehicle shifts up (D3 → D4) at the appropriate speed.

- Refer to [AT-65](#).

With CONSULT-II

Read the gear position, throttle degree of opening, and vehicle speed.

Does the A/T shift-up D3 → D4 at the correct speed?

YES >> GO TO 5.

NO >> Enter a check mark at "A/T does not shift D3 → D4" on the diagnostics worksheet, then continue the road test.

TROUBLE DIAGNOSIS

5. CHECK SHIFT-UP D4 → D5

Press down the accelerator pedal about half way and inspect if the vehicle shifts up (D4 → D5) at the appropriate speed.

- Refer to [AT-65](#) .

ⓐ With CONSULT-II

Read the gear position, throttle degree of opening, and vehicle speed.

Does the A/T shift-up D4 → D5 at the correct speed?

YES >> GO TO 6.

NO >> Enter a check mark at “A/T does not shift D4 → D5” on the diagnostics worksheet, then continue the road test.

6. CHECK LOCK-UP

When releasing accelerator pedal from D5, check lock-up from D5 to L/U.

- Refer to [AT-65](#) .

ⓐ With CONSULT-II

Read the lock-up status.

Does it lock-up?

YES >> GO TO 7.

NO >> Enter a check mark at “A/T does not perform lock-up” on the diagnostics worksheet, then continue the road test.

7. CHECK LOCK-UP HOLD

Check lock-up hold.

Does it maintain lock-up status?

YES >> GO TO 8.

NO >> Enter a check mark at “A/T does not hold lock-up condition” on the diagnostics worksheet, then continue the road test.

8. CHECK LOCK-UP RELEASE

Check lock-up cancellation by depressing brake pedal lightly to decelerate.

ⓐ With CONSULT-II

Read the lock-up status.

Does lock-up cancel?

YES >> 1. Stop the vehicle.

2. Go to Cruise test - Part 2 (Refer to [AT-62](#)).

NO >> Enter a check mark at “Lock-up is not released” on the diagnostics worksheet, then continue the road test. Go to Cruise test - Part 2 (Refer to [AT-62](#)).

Cruise Test - Part 2

ECS00E70

1. CHECK STARTING FROM D1

1. Move selector lever the “D” position.

2. Accelerate at half throttle.

ⓐ With CONSULT-II

Read the gear position.

Does it start from D1?

YES >> GO TO 2.

NO >> Enter a check mark at “Vehicle cannot be started from D1” on the diagnostics worksheet, then continue the road test.

TROUBLE DIAGNOSIS

2. CHECK SHIFT-UP D1 → D2

Press the accelerator pedal down all the way and inspect whether or not the transaxle shifts up (D1 → D2) at the correct speed.

- Refer to [AT-65](#).

Ⓜ With CONSULT-II

Read the gear position, accelerator angle and vehicle speed.

Does the A/T shift-up D1 → D2 at the correct speed?

YES >> GO TO 3.

NO >> Enter a check mark at “A/T does not shift D1 → D2” on the diagnostics worksheet, then continue the road test.

3. CHECK SHIFT-UP D2 → D3

Press the accelerator pedal down all the way and inspect whether or not the transaxle shifts up (D2 → D3) at the correct speed.

- Refer to [AT-65](#).

Ⓜ With CONSULT-II

Read the gear position, accelerator angle and vehicle speed.

Does the A/T shift-up D2 → D3 at the correct speed?

YES >> GO TO 4.

NO >> Enter a check mark at “A/T does not shift D2 → D3” on the diagnostics worksheet, then continue the road test.

4. CHECK SHIFT-UP D3 → D4 AND ENGINE BRAKE

When the transaxle changes speed D2 → D3, return the accelerator pedal.

Does the A/T shift-up D3 → D4 and apply the engine brake?

YES >> 1. Stop the vehicle.

2. Go to Cruise test - Part 3 (Refer to [AT-63](#)).

NO >> Enter a check mark at “A/T does not shift D3 → D4” on the diagnostics worksheet, then continue the road test.

Cruise Test - Part 3

ECS00E71

1. CHECK SHIFT DOWN (D5 TO D4)

1. Confirm lever switch is in OFF position. (O/D OFF indicator lamp “OFF”.)
2. Confirm gear selector lever is in D position.
3. Accelerate vehicle using half-throttle to D5.
4. Release accelerator pedal.
5. Push lever switch while driving in D5. (O/D OFF indicator lamp “ON” and A/T indicator “4”.)

Ⓜ With CONSULT-II

Read the gear position, throttle degree of opening, and vehicle speed.

Does A/T shift from D5 to D4?

YES >> GO TO 2.

NO >> Enter a check mark at “Vehicle does not shift: 5th gear → 4th gear, when lever switch OFF → ON” on diagnostics worksheet, then continue the road test.

TROUBLE DIAGNOSIS

2. CHECK SHIFT DOWN (D4 TO L3)

1. Driving in D4.
2. Move selector lever from D to L position while D4.
3. Release accelerator pedal.

🔧 **With CONSULT-II**

Read the gear position, throttle degree of opening, and vehicle speed.

Does A/T shift from D4 to L3?

YES >> GO TO 3.

NO >> Enter a check mark at "Vehicle does not shift: 4th gear → 3rd gear, when selector lever D → L position" on diagnostics worksheet, then continue the road test.

3. CHECK SHIFT DOWN (L3 TO L2)

1. Confirm lever switch is in OFF position. (A/T indicator "3".)
2. Confirm gear selector lever is in L position.
3. Accelerate vehicle using half-throttle to L3.
4. Release accelerator pedal.
5. Push lever switch while driving in L3. (A/T indicator "2".)

🔧 **With CONSULT-II**

Read the gear position, throttle degree of opening, and vehicle speed.

Does A/T shift from L3 to L2?

YES >> GO TO 4.

NO >> Enter a check mark at "Vehicle does not shift: 3rd gear → 2nd gear, when lever switch OFF → ON" on diagnostics worksheet, then continue the road test.

4. CHECK SHIFT DOWN (L2 TO L1)

Release accelerator pedal.

🔧 **With CONSULT-II**

Read the gear position, throttle degree of opening, and vehicle speed.

Does A/T shift from L2 to L1?

YES >> GO TO 5.

NO >> Enter a check mark at "Vehicle does not shift: 2nd gear → 1st gear, when release accelerator pedal" on diagnostics worksheet, then continue the road test.

5. CHECK ENGINE BRAKE

Depress and release accelerator pedal while driving in L1.

🔧 **With CONSULT-II**

Read the gear position.

Does engine braking effectively reduce speed in L1 position?

YES >> 1. Stop the vehicle.

2. Perform the self-diagnostics. Refer to [AT-81, "Diagnostic Procedure"](#).

NO >> Enter a check mark at "Vehicle does not decelerate by engine brake" on the diagnostics worksheet, then continue trouble diagnosis.

TROUBLE DIAGNOSIS

Shift Schedule

ECS00E72

VEHICLE SPEED WHEN SHIFTING GEARS

Accelerator angle	Vehicle speed km/h (MPH) (Approx.)							
	D1 →D2	D2 →D3	D3 →D4	D4 →D5	D5 →D4	D4 →D3	D3 →D2	D2 →D1
100 %	67 (42)	105 (65)	170 (106)	241 (150)	230 (143)	160 (99)	92 (57)	45 (28)
90 %	67 (42)	105 (65)	170 (106)	241 (150)	230 (143)	160 (99)	92 (57)	45 (28)
80 %	65 (40)	100 (62)	152 (94)	227 (141)	178 (111)	142 (88)	86 (53)	45 (28)
70 %	53 (33)	80 (50)	125 (78)	185 (115)	147 (91)	137 (85)	68 (42)	38 (24)
60 %	46 (29)	71 (44)	106 (66)	156 (97)	108 (67)	78 (48)	46 (29)	22 (14)
50 %	43 (27)	67 (42)	97 (60)	145 (90)	98 (61)	68 (42)	40 (25)	18 (11)
40 %	38 (24)	60 (37)	89 (55)	130 (81)	89 (55)	56 (35)	30 (19)	13 (8)
30 %	33 (21)	50 (31)	70 (43)	108 (67)	68 (42)	45 (28)	25 (16)	12 (7)
20 %	23 (14)	35 (22)	49 (30)	77 (48)	49 (30)	32 (20)	22 (14)	8 (5)
10 %	17 (11)	29 (18)	39 (24)	58 (36)	44 (27)	32 (20)	22 (14)	8 (5)

VEHICLE SPEED WHEN PERFORMING AND RELEASING COMPLETE LOCK-UP

Accelerator angle	Vehicle speed km/h (MPH) (Approx.)	
	Lock-up "ON"	Lock-up "OFF"
50 %	190 (118)	137 (85)
15%	101 (63)	72 (45)
0 - 8 %	73 (45)	70 (43)

- Lock-up vehicle speed indicates the speed in D position.
- Perform lock-up inspection after warming up engine.
- Lock-up vehicle speed may vary depending on the driving conditions and circumstances.

VEHICLE SPEED WHEN PERFORMING AND RELEASING SLIP LOCK-UP

Accelerator angle	Gear position	Vehicle speed km/h (MPH) (Approx.)	
		Slip lock-up "ON"	Slip lock-up "OFF"
0 - 10 %	4th	45 (28)	42 (26)
	5th	58 (36)	55 (34)

- Slip lock-up vehicle speed indicates the speed in D position.
- Perform slip lock-up inspection after warming up engine.
- Slip lock-up vehicle speed may vary depending on the driving conditions and circumstances.

Symptom Chart

ECS00E73

Numbers are arranged in order of inspection.
Perform inspections starting with number one and work up.

CAUTION:

Do not remove or disassemble any RE5F22A model transaxle parts unless specified to do so in AT section.

TROUBLE DIAGNOSIS

Symptom	Condition	Diagnostic Item	Reference page
With selector lever in D position, driving is not possible.	ON vehicle	1. Fluid level and state	AT-55
		2. Control cable and PNP switch adjustment	AT-236, AT-234
		3. TCM	AT-72
		4. Pressure control solenoid valve A	AT-141
		5. Control valve assembly	AT-237
	OFF vehicle	6. Torque converter	AT-239
		7. Forward and direct clutch assembly	AT-247
		8. B5 brake	AT-274
		9. One-way clutch No.2	AT-247
With selector lever in R position, driving is not possible.	ON vehicle	1. Fluid level and state	AT-55
		2. Control cable and PNP switch adjustment	AT-236, AT-234
		3. TCM	AT-72
		4. Shift solenoid valve A	AT-146
		5. Shift solenoid valve B	AT-151
		6. Pressure control solenoid valve A	AT-141
		7. Control valve assembly	AT-237
	OFF vehicle	8. Torque converter	AT-247
		9. Forward and direct clutch assembly	AT-247
		10. 1st and reverse brake	AT-247
		11. B5 brake	AT-274
No shock at all or the clutch slips when vehicle changes speed.	ON vehicle	1. Fluid level and state	AT-55
		2. Control cable and PNP switch adjustment	AT-236, AT-234
		3. TCM	AT-72
		4. Shift solenoid valve A	AT-146
		5. Shift solenoid valve B	AT-151
		6. Shift solenoid valve E	AT-171
		7. Pressure control solenoid valve A	AT-141
		8. Pressure control solenoid valve C	AT-185
		9. Control valve assembly	AT-237
	OFF vehicle	10. Accumulator	AT-247
Time lag is large. ("N" → "D" position)	ON vehicle	1. Fluid level and state	AT-55
		2. Actual engine torque signal	AT-114
		3. Turbine revolution sensor	AT-106
		4. TCM	AT-72
		5. Control valve assembly	AT-237
	OFF vehicle	6. Accumulator	AT-247
		7. Forward and direct clutch assembly	AT-247

TROUBLE DIAGNOSIS

Symptom	Condition	Diagnostic Item	Reference page
Time lag is large. ("N" → "R" position)	ON vehicle	1. Fluid level and state	AT-55
		2. Actual engine torque signal	AT-114
		3. Turbine revolution sensor	AT-106
		4. TCM	AT-72
		5. Shift solenoid valve E	AT-171
		6. Control valve assembly	AT-237
	OFF vehicle	7. Forward and direct clutch assembly	AT-247
		8. 1st and reverse brake	AT-247
Engine does not start in "N", "P" position.	ON vehicle	1. Ignition switch and starter	PG-4, SC-10
		2. Control cable adjustment	AT-236
		3. PNP switch	AT-91
Engine starts in positions other than "N" or "P".	ON vehicle	1. Ignition switch and starter	PG-4, SC-10
		2. Control cable adjustment	AT-236
		3. PNP switch	AT-91
Engine stalls when selector lever shifted "N" → "D", "R".	ON vehicle	1. Fluid level and state	AT-55
		2. TCM	AT-72
		3. Shift solenoid valve D	AT-166
		4. Pressure control solenoid valve C	AT-185
		5. Control valve assembly	AT-237
Engine stall when vehicle slow down.	ON vehicle	1. Fluid level and state	AT-55
		2. TCM	AT-72
		3. Shift solenoid valve D	AT-166
		4. Shift solenoid valve E	AT-171
		5. Pressure control solenoid valve C	AT-185
		6. Control valve assembly	AT-237
Acceleration is extremely poor.	ON vehicle	1. Fluid level and state	AT-55
		2. Control cable and PNP switch adjustment	AT-236, AT-234
		3. Engine speed signal	AT-114
		4. Electric throttle control signal	AT-203
Gear does not change from D1 → D2 .	ON vehicle	1. Fluid level and state	AT-55
		2. TCM	AT-72
		3. Electric throttle control signal	AT-203
		4. Shift solenoid valve A	AT-146
		5. Shift solenoid valve B	AT-151
		6. Shift solenoid valve C	AT-156
		7. Shift solenoid valve D	AT-166
		8. Control valve assembly	AT-237
	OFF vehicle	9. 2nd coast brake	AT-266, AT-272
		10. 2nd brake	AT-266
		11. One-way clutch No.1	AT-272
		12. One-way clutch No.2	AT-247

A
B
AT
D
E
F
G
H
I
J
K
L
M

TROUBLE DIAGNOSIS

Symptom	Condition	Diagnostic Item	Reference page
Gear does not change from D2 → D3 .	ON vehicle	1. Fluid level and state	AT-55
		2. TCM	AT-72
		3. Electric throttle control signal	AT-203
		4. Shift solenoid valve B	AT-151
		5. Shift solenoid valve C	AT-156
		6. Shift solenoid valve D	AT-166
		7. Pressure control solenoid valve A	AT-141
		8. Control valve assembly	AT-237
	OFF vehicle	9. U/D brake	AT-247
		10. B5 brake	AT-274
Gear does not change from D3 → D4 .	ON vehicle	1. Fluid level and state	AT-55
		2. TCM	AT-72
		3. Electric throttle control signal	AT-203
		4. Shift solenoid valve B	AT-151
		5. Shift solenoid valve C	AT-156
		6. Shift solenoid valve D	AT-166
		7. Control valve assembly	AT-237
	OFF vehicle	8. U/D clutch	AT-247
		9. U/D brake	AT-247
Gear does not change from D4 → D5 .	ON vehicle	1. Fluid level and state	AT-55
		2. TCM	AT-72
		3. Electric throttle control signal	AT-203
		4. Shift solenoid valve B	AT-151
		5. Shift solenoid valve C	AT-156
		6. Control valve assembly	AT-237
	OFF vehicle	7. Forward and direct clutch assembly	AT-247
		8. 2nd coast brake	AT-266, AT-272
		9. One-way clutch No.1	AT-272
In D range, does not downshift to 1st gear.	ON vehicle	1. Fluid level and state	AT-55
		2. TCM	AT-72
		3. Electric throttle control signal	AT-203
		4. Shift solenoid valve A	AT-146
		5. Shift solenoid valve B	AT-151
		6. Shift solenoid valve C	AT-156
		7. Shift solenoid valve D	AT-166
		8. Control valve assembly	AT-237
	OFF vehicle	9. 2nd coast brake	AT-266, AT-272
		10. 2nd brake	AT-266
		11. One-way clutch No.1	AT-272
		12. One-way clutch No.2	AT-247

TROUBLE DIAGNOSIS

Symptom	Condition	Diagnostic Item	Reference page
In D range, does not downshift to 2nd gear.	ON vehicle	1. Fluid level and state	AT-55
		2. TCM	AT-72
		3. Electric throttle control signal	AT-203
		4. Shift solenoid valve B	AT-151
		5. Shift solenoid valve C	AT-156
		6. Shift solenoid valve D	AT-166
		7. Pressure control solenoid valve A	AT-141
		8. Control valve assembly	AT-237
	OFF vehicle	9. U/D brake	AT-247
		10. B5 brake	AT-274
In D range, does not downshift to 3rd gear.	ON vehicle	1. Fluid level and state	AT-55
		2. TCM	AT-72
		3. Electric throttle control signal	AT-203
		4. Shift solenoid valve B	AT-151
		5. Shift solenoid valve C	AT-156
		6. Shift solenoid valve D	AT-166
		7. Control valve assembly	AT-237
	OFF vehicle	8. U/D clutch	AT-247
		9. U/D brake	AT-247
In D range, does not downshift to 4th gear.	ON vehicle	1. Fluid level and state	AT-55
		2. TCM	AT-72
		3. Electric throttle control signal	AT-203
		4. Shift solenoid valve B	AT-151
		5. Shift solenoid valve C	AT-156
		6. Control valve assembly	AT-237
	OFF vehicle	7. Forward and direct clutch assembly	AT-247
		8. 2nd coast brake	AT-266, AT-272
		9. One-way clutch No.1	AT-272
Does not lock-up or lock-up is not released.	ON vehicle	1. Fluid level and state	AT-55
		2. Stop lamp switch signal	AT-224
		3. ATF temperature sensor	AT-96
		4. TCM	AT-72
		5. Shift solenoid valve C	AT-156
		6. Shift solenoid valve D	AT-166
		7. Pressure control solenoid valve C	AT-185
		8. Control valve assembly	AT-237
	OFF vehicle	9. Torque converter	AT-239

A
B
AT
D
E
F
G
H
I
J
K
L
M

TROUBLE DIAGNOSIS

Symptom	Condition	Diagnostic Item	Reference page
Engine brake does not work.	ON vehicle	1. Fluid level and state	AT-55
		2. TCM	AT-72
		3. Shift solenoid valve E	AT-171
		4. Electric throttle control signal	AT-203
		5. Control valve assembly	AT-237
	OFF vehicle	6. 2nd coast brake	AT-266, AT-272
		7. U/D brake	AT-247
		8. B5 brake	AT-274
Shift point is high or low.	ON vehicle	1. Pressure control solenoid valve A	AT-141
		2. Engine speed signal	AT-114
		3. Electric throttle control signal	AT-203
		4. Revolution sensor	AT-110
		5. TCM	AT-72
		6. Control valve assembly	AT-237
Large shock. ("N" → "D" position)	ON vehicle	1. Fluid level and state	AT-55
		2. Actual engine torque signal	AT-114
		3. Turbine revolution sensor	AT-106
		4. ATF temperature sensor	AT-96
		5. Shift solenoid valve A	AT-146
		6. Shift solenoid valve B	AT-151
		7. Pressure control solenoid valve A	AT-141
		8. TCM	AT-72
		9. Control valve assembly	AT-237
	OFF vehicle	10. Accumulator	AT-247
		11. Forward and direct clutch assembly	AT-247
Large shock. ("N" → "R" position)	ON vehicle	1. Fluid level and state	AT-55
		2. Actual engine torque signal	AT-114
		3. Turbine revolution sensor	AT-106
		4. ATF temperature sensor	AT-96
		5. Shift solenoid valve E	AT-171
		6. Pressure control solenoid valve B	AT-176
		7. TCM	AT-72
		8. Control valve assembly	AT-237
	OFF vehicle	9. Forward and direct clutch assembly	AT-247
		10. 1st and reverse brake	AT-247

TROUBLE DIAGNOSIS


Symptom	Condition	Diagnostic Item	Reference page	
Shock is too large when shift up.	ON vehicle	1. Fluid level and state	AT-55	A
		2. Actual engine torque signal	AT-114	B
		3. Turbine revolution sensor	AT-106	
		4. ATF temperature sensor	AT-96	
		5. TCM power input signal	AT-199	AT
		6. Shift solenoid valve A	AT-146	
		7. Shift solenoid valve B	AT-151	
		8. Shift solenoid valve C	AT-156	D
		9. Shift solenoid valve D	AT-166	
		10. Shift solenoid valve E	AT-171	E
		11. Pressure control solenoid valve A	AT-141	
		12. Pressure control solenoid valve B	AT-176	
		13. Pressure control solenoid valve C	AT-185	F
		14. TCM	AT-72	
		15. Control valve assembly	AT-237	G
Shock is too large for coast down.	ON vehicle	1. Fluid level and state	AT-55	H
		2. Actual engine torque signal	AT-114	
		3. Turbine revolution sensor	AT-106	
		4. ATF temperature sensor	AT-96	
		5. TCM power input signal	AT-199	I
		6. Shift solenoid valve A	AT-146	
		7. Shift solenoid valve B	AT-151	
		8. Shift solenoid valve C	AT-156	J
		9. Shift solenoid valve D	AT-166	
		10. Shift solenoid valve E	AT-171	K
		11. Pressure control solenoid valve A	AT-141	
		12. Pressure control solenoid valve B	AT-176	
		13. Pressure control solenoid valve C	AT-185	L
		14. TCM	AT-72	
		15. Control valve assembly	AT-237	M

TROUBLE DIAGNOSIS

Symptom	Condition	Diagnostic Item	Reference page
Shock is too large for kick down.	ON vehicle	1. Fluid level and state	AT-55
		2. Actual engine torque signal	AT-114
		3. Turbine revolution sensor	AT-106
		4. ATF temperature sensor	AT-96
		5. TCM power input signal	AT-199
		6. Shift solenoid valve A	AT-146
		7. Shift solenoid valve B	AT-151
		8. Shift solenoid valve C	AT-156
		9. Shift solenoid valve D	AT-166
		10. Shift solenoid valve E	AT-171
		11. Pressure control solenoid valve A	AT-141
		12. Pressure control solenoid valve B	AT-176
		13. Pressure control solenoid valve C	AT-185
		14. TCM	AT-72
		15. Control valve assembly	AT-237
Strange noise in "R", "N" or "D" position.	ON vehicle	1. Fluid level and state	AT-55
		2. Control valve assembly	AT-237
	OFF vehicle	3. Torque convertor	AT-247
		4. Parking component	AT-240
		5. Gear system	AT-247
With selector lever in P position, vehicle does not enter parking condition or, with selector lever in another position, parking condition is not cancelled.	ON vehicle	1. PNP switch	AT-91
		2. Control cable adjustment	AT-236
		3. Control valve assembly	AT-237
	OFF vehicle	4. Parking component	AT-240
Vehicle runs with transaxle in "P" position.	ON vehicle	1. Fluid level and state	AT-55
		2. PNP switch	AT-91
		3. Control cable and PNP switch adjustment	AT-236, AT-234
		4. Line pressure test	AT-57
Vehicle runs with transaxle in "N" position.	ON vehicle	1. Fluid level and state	AT-55
		2. PNP switch	AT-91
		3. Control cable and PNP switch adjustment	AT-236, AT-234
		4. Line pressure test	AT-57

TCM Input/Output Signal Reference Values TCM TERMINAL CONNECTOR LAYOUT

ECS00E74

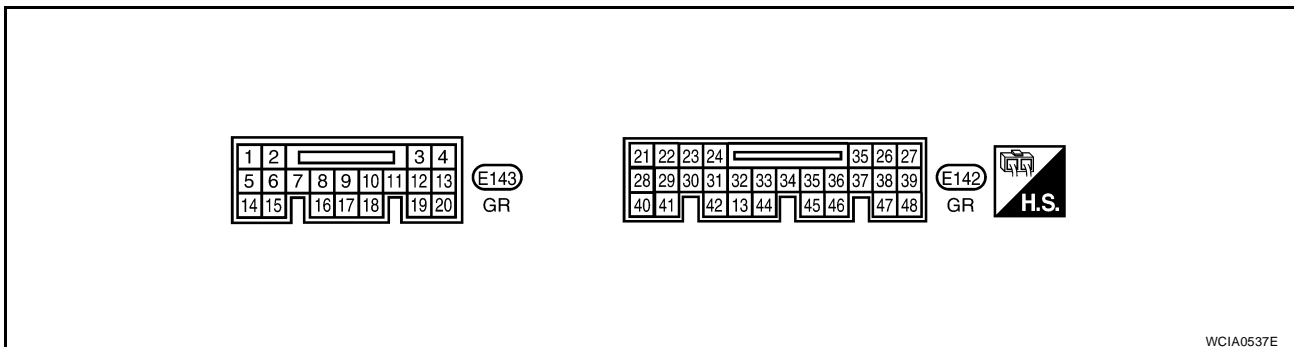


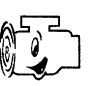











WCIA0537E








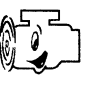


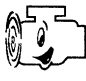


TROUBLE DIAGNOSIS

TCM INSPECTION TABLE

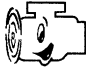


Data are reference value and are measured between each terminal and ground.

Terminal	Wire color	Item	Condition		Data (Approx.)
1	Y/W	A/T PV IGN relay		When turning ignition switch ON.	0 - 1.5V
				When turning ignition switch OFF.	0V
3	L	CAN-H	-		-
4	P	CAN-L	-		-
14	B	Ground	-		0V
16	O	Lever switch		Lever switch: "ON" position	0V
				Lever switch: "OFF" position	Battery voltage
21	G/B	Pressure control solenoid valve B ground		When engine is running with idle speed and setting selector lever to "P" position.	0V
22	L	Revolution sensor power supply		When turning ignition switch ON.	Battery voltage
					When turning ignition switch OFF.
23	G	Turbine revolution sensor power supply		When turning ignition switch ON.	Battery voltage
					When turning ignition switch OFF.
24	BR	PNP switch A		Selector lever: "P", "R" and "L" position	0V
				Other than the above	Battery voltage
25	G/R	Shift solenoid valve B		When shift solenoid valve B operates. (When driving in 1st or 5th gear.)	Battery voltage
26	W/B	Shift solenoid valve D		When shift solenoid valve B does not operate.	0V
				When shift solenoid valve D operates. (When driving in 3rd, 4th or 5th gear.)	Battery voltage
				When shift solenoid valve D does not operate.	0V
27	Y/R	Power supply (Memory back-up)		When turning ignition switch ON.	Battery voltage
					When turning ignition switch OFF.
28	W	Pressure control solenoid valve C ground		When engine is running with idle speed and setting selector lever to "P" position.	0V

TROUBLE DIAGNOSIS

Terminal	Wire color	Item		Condition	Data (Approx.)
29	B/W	Revolution sensor		When moving at 20 km/h (12 MPH) in 1st gear.	119Hz
30	R	Turbine revolution sensor		When moving at 20 km/h (12 MPH) in 1st gear.	371Hz
31	G/Y	PNP switch B		Selector lever: "R", "N", "D" and "L" position	0V
				Other than the above	Battery voltage
32	P/B	PNP switch C		Selector lever: "D" and "L" position	0V
				Other than the above	Battery voltage
33	R/V	PNP switch PN		Selector lever: "P" and "N" position	Battery voltage
				Other than the above	0V
34	P	Power supply		When turning ignition switch ON.	Battery voltage
				When turning ignition switch OFF.	0V
35	L/Y	Pressure control solenoid valve A		When engine is running with idle speed and setting selector lever to "P" position.	300Hz
36	W/L	Pressure control solenoid valve B		When engine is running with idle speed and setting selector lever to "P" position.	300Hz
37	R/B	Shift solenoid valve C		When shift solenoid valve C operates. (When driving in 1st, 2nd, 3rd or reverse gear.)	Battery voltage
				When shift solenoid valve C does not operate.	0V
38	Y/B	Power supply (A/T PV IGN relay)		When turning ignition switch ON.	Battery voltage
				Measure 3 seconds after switching "OFF" the ignition switch.	0V
39	Y/B	Power supply (A/T PV IGN relay)		When turning ignition switch ON.	Battery voltage
				Measure 3 seconds after switching "OFF" the ignition switch.	0V
40	L/G	Pressure control solenoid valve A ground		When engine is running with idle speed and setting selector lever to "P" position.	0V
41	R/Y	Fluid temperature sensor		When ATF temperature 0°C (32°F)	4.0V
				When ATF temperature 20°C (68°F)	3.0V
				When ATF temperature 80°C (176°F)	0.8V
				When ATF temperature 100°C (212°F)	0.5V
42	LG/B	Fluid temperature sensor ground		-	0V
43	V/W	PNP switch PA		Selector lever: "P", "N" and "L" position	0V
				Other than the above	Battery voltage

TROUBLE DIAGNOSIS

Terminal	Wire color	Item	Condition	Data (Approx.)
45	O/B	Pressure control solenoid valve C		When engine is running with idle speed and setting selector lever to "P" position. 300Hz
46	W/G	Shift solenoid valve A		When shift solenoid valve A operates. (When driving in 1st gear.) Battery voltage
				When shift solenoid valve A does not operate. 0V
47	BR/Y	Shift solenoid valve E		When shift solenoid valve E operates. (When driving in reverse gear.) Battery voltage
				When shift solenoid valve E does not operate. 0V
48	B	Ground	–	0V

CONSULT-II Function (TRANSMISSION)

ECS00E75

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.

A/T diagnostic mode	Description
WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the TCM for setting the status suitable for required operation, input/output signals are received from the TCM and received data is displayed.
SELF-DIAG RESULTS	Displays TCM self-diagnosis results.
DATA MONITOR	Displays TCM input/output data in real time.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
FUNCTION TEST	Conducted by CONSULT-II instead of a technician to determine whether each system is "OK" or "NG".
ECU PART NUMBER	TCM part number can be read.

CONSULT-II START PROCEDURE

Refer to [GI-37, "CONSULT-II Start Procedure"](#) .

WORK SUPPORT MODE

Work item

Work item	Condition	Usage
INITIALIZATION	Under the following conditions. <ul style="list-style-type: none"> ● Ignition switch "ON". ● Selector lever "P" or "N" position. ● Engine not running. ● Vehicle speed is 0 km/h (0 MPH). ● Ignition voltage is more than 10.5V. ● Malfunction was not detected. 	Use to initialize TCM in a case of replacing transaxle or TCM. Refer to AT-8, "Precautions for A/T Assembly or TCM Replacement" .

SELF-DIAG RESULT MODE

After performing "SELF-DIAGNOSTIC place check marks for results on the "Diagnostic Worksheet", [AT-49, "DIAGNOSTIC WORKSHEET"](#) . Reference pages are provide following the items.

Operation procedure


1. Perform "CONSULT-II START PROCEDURE". Refer to [GI-37, "CONSULT-II Start Procedure"](#) .

TROUBLE DIAGNOSIS

2. Touch "SELF-DIAG RESULTS".
Display shows malfunction experienced since the last erasing operation.

NOTE:

- The details for "TIME" are as follow:
 - "CRNT": Error currently detected with TCM.
 - "PAST": Error detected in the past and memorized with TCM.
- Touch "F.F.DATA" on "SELF-DIAG RESULTS" screen to display freeze frame data. Freeze frame data shows driving condition when malfunction is detected.
For freeze frame data items, refer to [AT-79, "Display item list"](#).

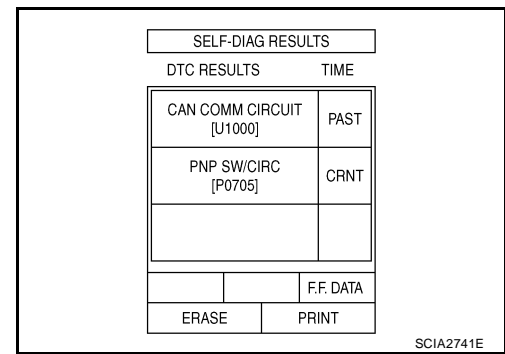

Display item list

X: Applicable —: Not applicable

Items (CONSULT-II screen terms)	Malfunction is detected when...	TCM self-diagnosis		OBD-II (DTC)
		O/D OFF indicator lamp ^{*3}	"TRANSMISSION" with CONSULT-II	MIL indicator lamp ^{*1} , "ENGINE" with CONSULT-II or GST
CAN COMM CIRCUIT	<ul style="list-style-type: none"> ● When TCM is not transmitting or receiving CAN communication signal for 2 seconds or more. 	X	U1000 ^{*4}	U1000 ^{*4}
VEH SPD SE/CIR-MTR	<ul style="list-style-type: none"> ● ECM detects a malfunction in vehicle speed sensor signal, after that TCM inputs the result by CAN communication. 	X	P0500	P0500
TCM PROCESSOR	<ul style="list-style-type: none"> ● TCM processor is malfunctioning. 	—	P0613	—
PNP SW/CIRC	<ul style="list-style-type: none"> ● PNP switch signals input with impossible pattern 	X	P0705	P0705
ATF TEMP SEN/CIRC	<ul style="list-style-type: none"> ● Normal voltage is not applied to ATF temperature sensor due to open, short, and so on. ● During running, the ATF temperature sensor signal voltage is excessively high or low. 	X	P0710	P0710
FLUID TEMP SEN	<ul style="list-style-type: none"> ● ATF temperature signal does not change. 	—	P0711	P0711 ^{*2}
TURBINE SENSOR	<ul style="list-style-type: none"> ● Signal from turbine revolution sensor does not input due to open, short, and so on. ● Unexpected signal input during running. 	X	P0717	P0717
VHCL SPEED SEN-A/T	<ul style="list-style-type: none"> ● Signal from revolution sensor does not input due to open, short, and so on. ● Unexpected signal input during running. 	X	P0722	P0722
ENG SPD INP PERFOR	<ul style="list-style-type: none"> ● Malfunction is detected in engine speed signal, actual engine torque signal or torque reduction signal that is output from ECM through CAN communication. 	X	P0726	P0726
A/T 1ST GR FNCTN	<ul style="list-style-type: none"> ● A/T cannot be shifted to the 1st gear position even if electrical circuit is good. 	X	P0731	P0731 ^{*2}
A/T 2ND GR FNCTN	<ul style="list-style-type: none"> ● A/T cannot be shifted to the 2nd gear position even if electrical circuit is good. 	X	P0732	P0732 ^{*2}
A/T 3RD GR FNCTN	<ul style="list-style-type: none"> ● A/T cannot be shifted to the 3rd gear position even if electrical circuit is good. 	X	P0733	P0733 ^{*2}
A/T 4TH GR FNCTN	<ul style="list-style-type: none"> ● A/T cannot be shifted to the 4th gear position even if electrical circuit is good. 	X	P0734	P0734 ^{*2}
A/T 5TH GR FNCTN	<ul style="list-style-type: none"> ● A/T cannot be shifted to the 5th gear position even if electrical circuit is good. 	X	P0735	P0735 ^{*2}
A/T TCC S/V FNCTN	<ul style="list-style-type: none"> ● A/T cannot perform lock-up even if electrical circuit is good. 	X	P0744	P0744 ^{*2}

TROUBLE DIAGNOSIS

Items (CONSULT-II screen terms)	Malfunction is detected when...	TCM self-diagnosis		OBD-II (DTC)	
		O/D OFF indicator lamp ^{*3}	"TRANSMISSION" with CONSULT-II	MIL indicator lamp ^{*1} , "ENGINE" with CONSULT-II or GST	
PC SOL A(L/PRESS)	<ul style="list-style-type: none"> ● Normal voltage is not applied to solenoid due to open, short, and so on. ● TCM detects as irregular by comparing target value with monitor value. 	X	P0745	P0745	A
SHIFT SOL A		X	P0750	P0750	B
SHIFT SOL B		X	P0755	P0755	AT
SHIFT SOL C		X	P0760	P0760	D
SFT SOL C STUCK ON	<ul style="list-style-type: none"> ● Condition of shift solenoid valve C is different from monitor value, and relation between gear position and actual gear ratio is irregular. 	X	P0762	P0762 ^{*2}	E
SHIFT SOL D	<ul style="list-style-type: none"> ● Normal voltage is not applied to solenoid due to open, short, and so on. ● TCM detects as irregular by comparing target value with monitor value. 	X	P0765	P0765	F
SHIFT SOL E		X	P0770	P0770	
PC SOL B(SFT/PRS)		X	P0775	P0775	
SHIFT	<ul style="list-style-type: none"> ● No rotation change occurs between input (turbine revolution sensor) and output (revolution sensor) and shifting time is long. ● Shifting ends immediately. ● Condition in malfunction engine revs up usually shifting. 	X	P0780	P0780 ^{*2}	G
PC SOL C(TCC&SFT)	<ul style="list-style-type: none"> ● Normal voltage is not applied to solenoid due to open, short, and so on. ● TCM detects as irregular by comparing target value with monitor value. 	X	P0795	P0795	H
PC SOL C STC ON	<ul style="list-style-type: none"> ● Condition of pressure control solenoid valve C is different from monitor value, and relation between gear position and actual gear ratio or lock-up status is irregular. 	X	P0797	P0797 ^{*2}	I
GEAR LEVER SWITCH	<ul style="list-style-type: none"> ● Lever switch signal is incorrectly input due to open, short, and so on. 	—	P0825	—	J
TCM POWER INPT SIG	<ul style="list-style-type: none"> ● Voltage supplied to TCM is too low. 	—	P0882	P0882	K
ELEC TH CONTROL	<ul style="list-style-type: none"> ● The electric throttle control system for ECM is in a malfunction, after that TCM inputs the result by CAN communication. 	X	P1726	P1726	L
NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.	<ul style="list-style-type: none"> ● No NG item has been detected. 	—	X	X	M

*1: Refer to [AT-43, "Malfunction Indicator Lamp \(MIL\)"](#) .

*2: These malfunctions cannot be displayed MIL if another malfunction is assigned to MIL.


*3: Indicate it when performing TCM SELF-DIAGNOSTIC PROCEDURE (NO TOOLS). Refer to [AT-82, "TCM SELF-DIAGNOSTIC PROCEDURE \(NO TOOLS\)"](#) .

*4: If DTC U1000 is displayed with other DTCs, first perform the trouble diagnosis for DTC U1000. Refer to [AT-84](#) .


TROUBLE DIAGNOSIS

HOW TO ERASE SELF-DIAGNOSTIC RESULTS

1. Perform [GI-37, "CONSULT-II Start Procedure"](#) .
2. Touch "SELF-DIAG RESULTS"

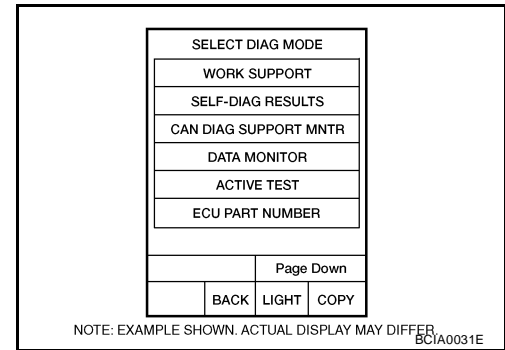


3. Touch "ERASE". (The self-diagnostic results will be erased.)

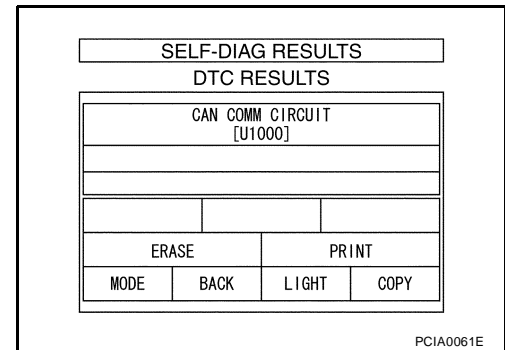

CAN DIAGNOSTIC SUPPORT MONITOR

Operation procedure

1. Perform "CONSULT-II START PROCEDURE". Refer to [GI-37, "CONSULT-II Start Procedure"](#) .
2. Touch "CAN DIAG SUPPORT MNTR". Refer to [LAN-44, "CAN Diagnostic Support Monitor"](#) .

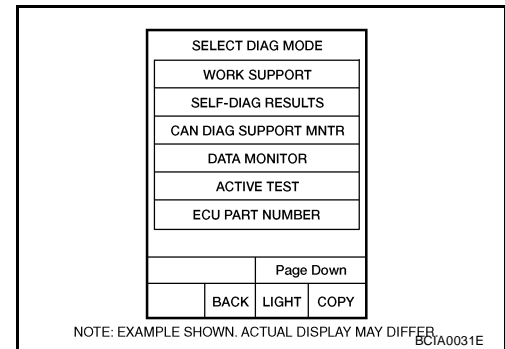

DATA MONITOR MODE

NOTICE:

1. The CONSULT-II electrically displays shift timing and lock-up timing (that is, operation timing of each solenoid).
Check for time difference between actual shift timing and the CONSULT-II display. If the difference is noticeable, mechanical parts (except solenoids, sensors, etc.) may be malfunctioning. Check mechanical parts using applicable diagnostic procedures.
2. Shift schedule (which implies gear position) displayed on CONSULT-II and that indicated in Service Manual may differ slightly. This occurs because of the following reasons:
 - Actual shift schedule has more or less tolerance or allowance,
 - Shift schedule indicated in Service Manual refers to the point where shifts start, and
 - Gear position displayed on CONSULT-II indicates the point where shifts are completed.
3. Display of solenoid valves on CONSULT-II changes at the start of shifting, while gear position is displayed upon completion of shifting (which is computed by TCM).

Operation procedure

1. Perform "CONSULT-II START PROCEDURE". Refer to [GI-37, "CONSULT-II Start Procedure"](#) .

TROUBLE DIAGNOSIS

2. Touch "DATA MONITOR".

NOTE:

When malfunction is detected, CONSULT-II performs REAL-TIME DIAGNOSIS.

Also, any malfunction detected while in this mode will be displayed at real time.

Display item list

X: Standard —: Not applicable

Monitored item (Unit)	Monitor item selection			Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
VHCL/S SE-A/T (km/h)	X	X	X	Vehicle speed recognized by the TCM.
VHCL/S SE-MTR* (km/h)	X	—	X	
FLUID TEMP SE* (V)	X	—	X	
FLUID TEMP* (°C)	—	—	X	
COOLAN TEMP* (°C)	—	—	X	Displays status of engine coolant temperature. Signal input with CAN communication line.
BATTERY VOLT* (V)	X	—	X	
ENGINE SPEED* (rpm)	X	X	X	Signal input with CAN communication line.
TURBINE REV* (rpm)	X	—	X	Turbine revolution computed from signal of turbine revolution sensor is displayed.
OUTPUT REV* (rpm)	—	—	X	Output revolution computed from signal of revolution sensor is displayed.
PNP SW A* (ON/OFF)	X	—	X	
PNP SW B* (ON/OFF)	X	—	X	
PNP SW C* (ON/OFF)	X	—	X	
PNP SW PA* (ON/OFF)	X	—	X	
PNP SW PN (ON/OFF)	X	—	X	
MANU MODE SW* (ON/OFF)	X	—	X	Not mounted but displayed.
NON M-MODE SW* (ON/OFF)	X	—	X	
UP SW* (ON/OFF)	X	—	X	
DOWN SW* (ON/OFF)	X	—	X	
RANGE SLCT SW (ON/OFF)	X	—	X	This means lever switch.
BRAKE SW* (ON/OFF)	X	—	X	This means stop lamp switch signal via CAN communication line.
CLSO THL POS (ON/OFF)	X	—	X	Signal input with CAN communication line.
ASCD SIGNAL (ON/OFF)	X	—	X	
ASCD OD OFF (ON/OFF)	X	—	X	
ABS SIGNAL (ON/OFF)	X	—	X	
TCS SIGNAL (ON/OFF)	X	—	X	
TCS GEAR HOLD (ON/OFF)	X	—	X	
TCS SFT CNG (ON/OFF)	—	—	X	Requests TCM for shift schedule change.
LOCK-UP* (ON/OFF)	—	—	X	Always "ON" during lock-up, regardless of types.
SLCT LVR POSI*	—	—	X	Displays "##" when TCM can not judge selector lever position.
MANU GR POSI	—	—	X	Always displays "##".

TROUBLE DIAGNOSIS

Monitored item (Unit)	Monitor item selection			Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
GEAR*	—	—	X	Indicates current gear position. When setting in P or N position, indicate by shift solenoid valves. When setting in R position, displays "1". Displays "##" when TCM can not judge gear position.
NEXT GR POSI	—	—	X	Displays "##" when TCM can not judge gear position.
REDCT DEM SIG (ON/OFF)	—	—	X	Displays status of engine torque reduction demand signal.
TC SLIP RATIO	—	—	X	
SLIP REV (rpm)	—	—	X	Difference between engine speed and torque converter input shaft speed.
ACCELE ANGLE* (%)	X	X	X	Degree of opening for accelerator recognized by the TCM. For fail-safe operation, the specific value used for control is displayed.
PC SOL A OUT* (A)	—	—	X	
PC SOL A MON* (A)	—	X	X	
PC SOL B OUT* (A)	—	—	X	
PC SOL B MON* (A)	—	X	X	
PC SOL C OUT* (A)	—	—	X	
PC SOL C MON* (A)	—	X	X	
SFT SOL A OUT* (ON/OFF)	—	—	X	
SFT SOL B OUT* (ON/OFF)	—	—	X	
SFT SOL C OUT* (ON/OFF)	—	—	X	
SFT SOL D OUT* (ON/OFF)	—	—	X	
SFT SOL E OUT* (ON/OFF)	—	—	X	
SFT SOL A MON* (ON/OFF)	—	X	X	
SFT SOL B MON* (ON/OFF)	—	X	X	
SFT SOL C MON* (ON/OFF)	—	X	X	
SFT SOL D MON* (ON/OFF)	—	X	X	
SFT SOL E MON* (ON/OFF)	—	X	X	
G-RATE (G)	—	—	X	
F-SAFE MODE (OK/1 to 10)	—	X	X	Numbers indicate types of fail-safe modes. Refer to AT-45, "Fail-safe mode list" .
VDC SIGNAL (ON/OFF)	X	—	X	Signal input with CAN communication line.
SHIFT SCHEDULE	—	—	X	The details for data of shift schedule are as follow: NOR: Normal mode UP1: Upslope 1 mode UP2: Upslope 2 mode (steeper than "UP1") DOWN: Downslope mode HOT1: Hot 1 mode HOT2: Hot 2 mode (higher temperature than "HOT1")

TROUBLE DIAGNOSIS

Monitored item (Unit)	Monitor item selection			Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
Voltage (V)	—	—	X	Displays the value measured by the voltage probe.
Frequency (Hz)	—	—	X	The value measured by the pulse probe is displayed.
DUTY-HI (high) (%)	—	—	X	
DUTY-LOW (low) (%)	—	—	X	
PLS WIDTH-HI (ms)	—	—	X	
PLS WIDTH-LOW (ms)	—	—	X	

*: Also, the items appear on CONSULT-II screen in freeze frame data mode of self-diagnostic results only if DTC is detected. For details, refer to [AT-75, "SELF-DIAG RESULT MODE"](#).

ACTIVE TEST MODE

Test item

Test item	Condition	Description
SHIFT SOLENOID A	Under the following conditions. <ul style="list-style-type: none"> ● Ignition switch "ON" ● Selector lever "P" or "N" position ● Engine not running ● Vehicle speed is 0 km/h (0 MPH). 	Each shift solenoid operate ON/OFF by receiving the drive signal.
SHIFT SOLENOID B		
SHIFT SOLENOID C		
SHIFT SOLENOID D		
SHIFT SOLENOID E		
PRESSURE CONTROL SOL A	<ul style="list-style-type: none"> ● Ignition voltage is more than 10.5V. ● Malfunction was not detected.* 	Each pressure control solenoid is activated by receiving the drive signal.
PRESSURE CONTROL SOL B		
PRESSURE CONTROL SOL C		

*: Except when P0711, P0731, P0732, P0733, P0734, P0735, P0744, P0762, P0780 or P0797 is detected.

NOTE:

Approximately 10 seconds after the operation is begun, "TEST IS STOPPED" will be displayed.

Diagnostic Procedure

ECS00E76

OBD-II SELF-DIAGNOSTIC PROCEDURE (WITH CONSULT-II)

Refer to [EC-119, "CONSULT-II Function \(ENGINE\)"](#).

OBD-II SELF-DIAGNOSTIC PROCEDURE (WITH GST)

Refer to [EC-131, "Generic Scan Tool \(GST\) Function"](#).

OBD-II SELF-DIAGNOSTIC PROCEDURE (NO TOOLS)

Refer to [EC-64, "Malfunction Indicator Lamp \(MIL\)"](#).

TCM SELF-DIAGNOSTIC PROCEDURE (WITH CONSULT-II)

Refer to [AT-75, "SELF-DIAG RESULT MODE"](#).

TROUBLE DIAGNOSIS

TCM SELF-DIAGNOSTIC PROCEDURE (NO TOOLS)

Description

As a method for locating the suspect system, when the self-diagnostics start signal is input, the memory for the malfunction location is output and the O/D OFF indicator lamp flashes to display the corresponding DTC.

Diagnostic procedure

1. CHECK O/D OFF INDICATOR LAMP

1. Start the engine with selector lever in "P" position. Warm engine to normal operating temperature.
2. Turn ignition switch "ON" and "OFF" at least twice, then leave it in the "OFF" position.
3. Wait 10 seconds.
4. Turn ignition switch "ON". (Do not start engine.)

Does O/D OFF indicator lamp come on for about 2 seconds?

YES >> GO TO 2.

NO >> GO TO [AT-204, "O/D OFF Indicator Lamp Does Not Come On"](#) .

2. JUDGEMENT PROCEDURE

NOTE:

After turning ignition switch "ON" (at step 6), perform within 2 seconds (while O/D OFF indicator lamp come on.).

1. Turn ignition switch "OFF".
2. Push shift lock release button.
3. Move selector lever from "P" to "D" position.
4. Release accelerator pedal. (Set the closed throttle position signal "ON".)
5. Depress brake pedal. (Stop lamp switch signal "ON".)
6. Turn ignition switch "ON".
7. Move the selector lever to the "N" position and release brake pedal. (Stop lamp switch signal "OFF".)
8. Move the selector lever to "D" position and depress brake pedal. (Stop lamp switch signal "ON".)
9. Release brake pedal. (Stop lamp switch signal "OFF".)
10. Depress accelerator pedal fully and release it.

>> GO TO 3.

3. CHECK SELF-DIAGNOSIS CODE

Check O/D OFF indicator lamp.

Refer to [AT-83, "Judgement self-diagnosis code"](#) .


If the system does not go into self-diagnostics, refer to [AT-224, "TCM Self-diagnosis Does Not Activate"](#) .

>> DIAGNOSIS END

TROUBLE DIAGNOSIS

Judgement self-diagnosis code

When a malfunction is detected, the malfunction route is indicated by longer illumination of the indicator lamp.

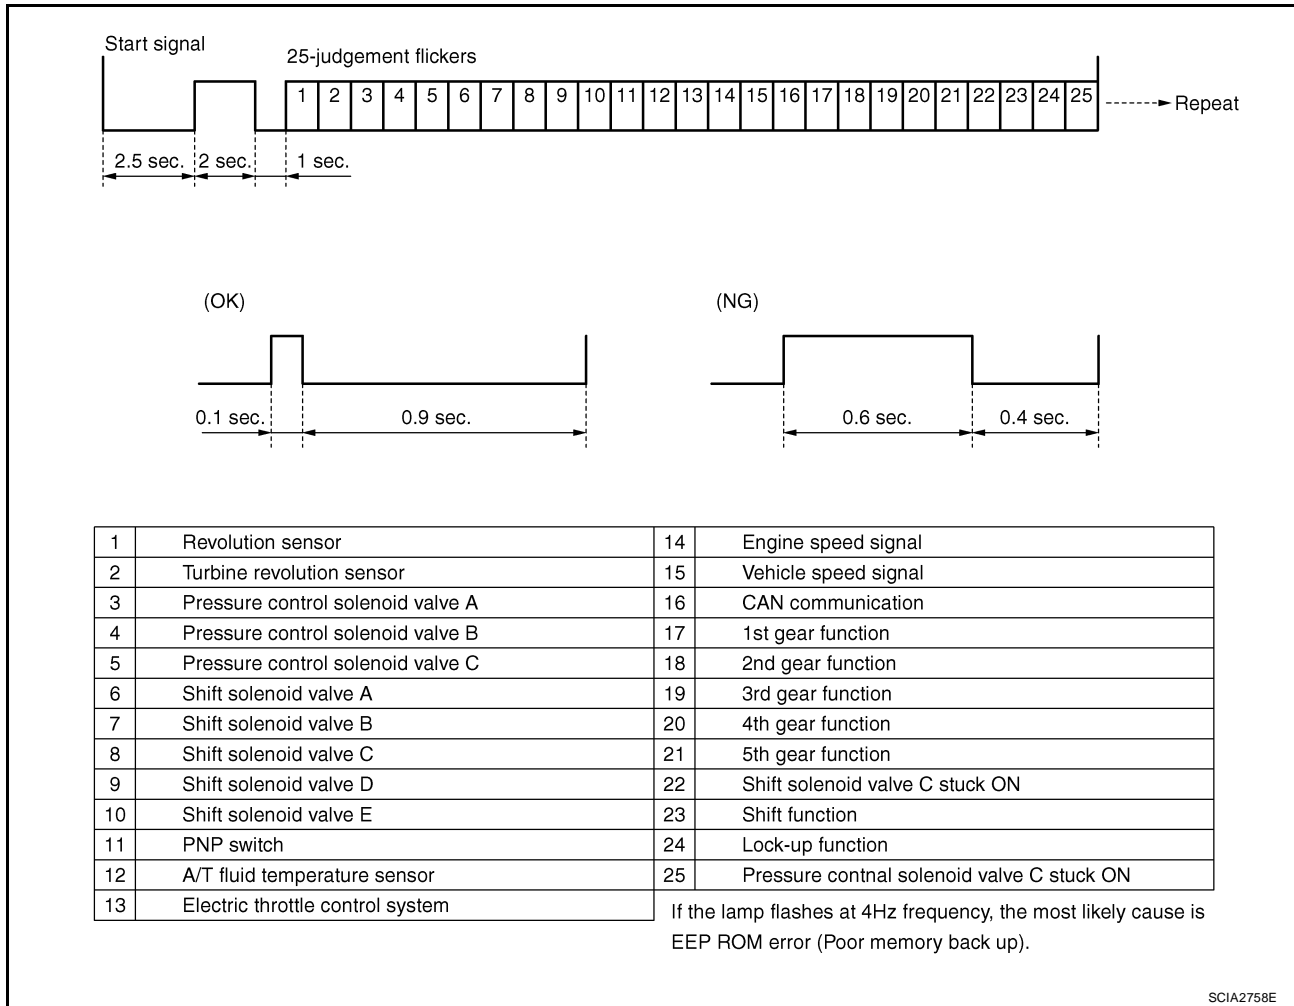

ERASE SELF-DIAGNOSIS

- In order to make it easier to find the cause of hard-to-duplicate malfunctions, malfunction information is stored into the control unit as necessary during use by the user. This memory is not erased no matter how many times the ignition switch is turned ON and OFF.
- However, this information is erased by turning ignition switch "OFF" after executing self-diagnostics or by erasing the memory using the CONSULT-II.

DTC U1000 CAN COMMUNICATION LINE

DTC U1000 CAN COMMUNICATION LINE

PFP:23710

Description

ECS00E77

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent malfunction detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

On Board Diagnosis Logic

ECS00E78

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "CAN COMM CIRCUIT" with CONSULT-II or U1000 without CONSULT-II is detected when TCM cannot communicate to other control units.

Possible Cause

ECS00E79

Harness or connectors
(CAN communication line is open or shorted.)

DTC Confirmation Procedure

ECS00E7A


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start engine.
4. Drive vehicle and maintain the following condition for at least 6 seconds.
SLCT LVR POSI: "D" position
5. If DTC is detected, go to [AT-86, "Diagnostic Procedure"](#).

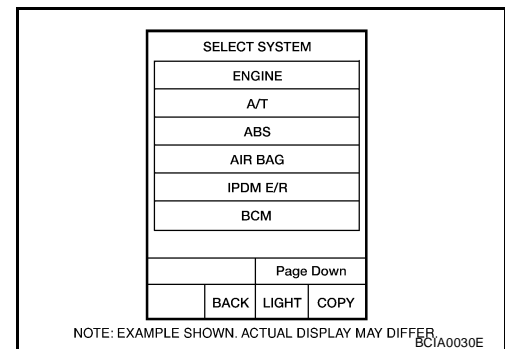

WITH GST




Follow the procedure "WITH CONSULT-II".



DTC U1000 CAN COMMUNICATION LINE

Wiring Diagram — AT — CAN

ECS00E7B

AT-CAN-01

-  : DETECTABLE LINE FOR DTC
-  : NON-DETECTABLE LINE FOR DTC
-  : DATA LINE

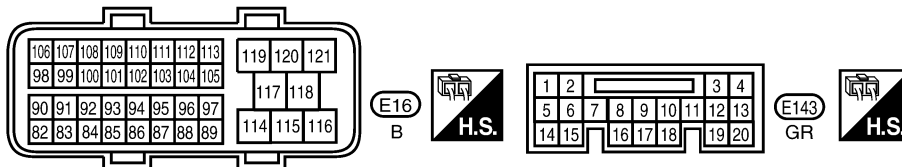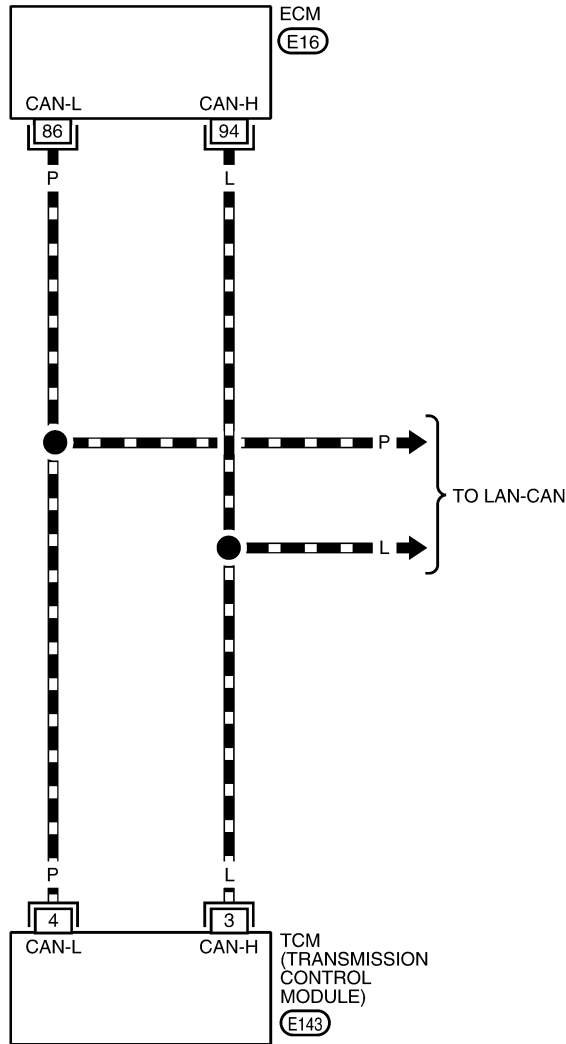

BCWA0604E

DTC U1000 CAN COMMUNICATION LINE

TCM terminals and data are reference value.

Terminal	Wire color	Item	Condition	Data (Approx.)
3	L	CAN-H	-	-
4	P	CAN-L	-	-

Diagnostic Procedure

ECS00E7C

1. CHECK CAN COMMUNICATION CIRCUIT

④ With CONSULT-II

- Turn ignition switch "ON" and start engine.
- Select "SELF-DIAG RESULTS" mode for "TRANSMISSION" with in CONSULT-II.

Is any malfunction of the "CAN COMM CIRCUIT" indicated?

- Yes >> Print out CONSULT-II screen, GO TO [LAN-49, "CAN System Specification Chart"](#) .
- No >> **INSPECTION END**

SELF-DIAG RESULTS	
DTC RESULTS	TIME
CAN COMM CIRCUIT [U1000]	CRNT
	F.F. DATA
ERASE	PRINT

SCIA2818E

DTC P0500 VEHICLE SPEED SENSOR MTR

DTC P0500 VEHICLE SPEED SENSOR MTR

PF:24814

Description

ECS00E7D

The vehicle speed sensor-MTR signal is transmitted from combination meter to TCM by CAN communication line. The signal functions as an auxiliary device to the revolution sensor when it is malfunctioning. The TCM will then use the vehicle speed sensor-MTR signal.

On Board Diagnosis Logic

ECS00E7E

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "VEH SPD SE/CIR-MTR" with CONSULT-II or 15th judgement flicker without CONSULT-II is detected when TCM does not receive the proper vehicle speed sensor MTR signal (input by CAN communication) from combination meter.

Possible Cause

ECS00E7F

- Harness or connectors
(The signal circuit is open or shorted.)
- Combination meter
- ABS actuator and electric unit (control unit)
- Wheel sensor

DTC Confirmation Procedure

ECS00E7G

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

④ WITH CONSULT-II

1. Turn ignition switch "ON" and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
2. Start engine.
3. Drive vehicle and maintain the following conditions for at least 5 consecutive seconds.
VHCL/S SE-A/T: 30 km/h (17 MPH) or more
ACCELE ANGLE: 10 % or less
4. If DTC is detected, go to [AT-88, "Diagnostic Procedure"](#).

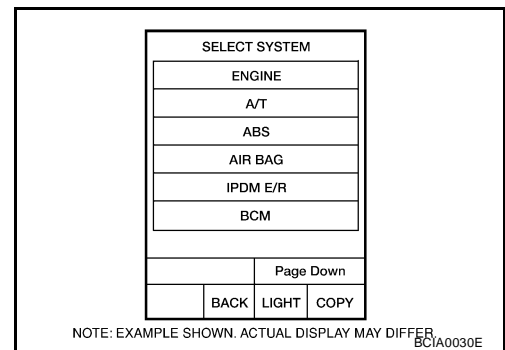

DTC P0500 VEHICLE SPEED SENSOR MTR

ECS00E7H

Diagnostic Procedure

1. CHECK INPUT SIGNALS

With CONSULT-II

1. Start engine.
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Drive vehicle, and then make sure that the values of "VHCL/S SE-A/T" and "VHCL/S SE-MTR" are same.

OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.

DATA MONITOR	
MONITOR	NO DTC
VHCL/S SE · A/T	xxx km/h
VHCL/S SE · MTR	xxx km/h

SCIA2922E

2. CHECK DTC WITH ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Refer to [BRC-10, "TROUBLE DIAGNOSIS"](#) (with TCS/ABS) or [BRC-55, "TROUBLE DIAGNOSIS"](#) (with VDC/TCS/ABS).

OK or NG

- OK >> GO TO 3.
NG >> If NG, recheck pin terminals for damage or loose connection with harness connector.

3. CHECK DTC WITH COMBINATION METER

Refer to [DI-5, "COMBINATION METERS"](#).

OK or NG

- OK >> GO TO 4.
NG >> If NG, recheck pin terminals for damage or loose connection with harness connector.

4. CHECK DTC

Perform "DTC Confirmation Procedure". Refer to [AT-87, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 5.

5. CHECK TCM

1. Check TCM input/output signal.
2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
NG >> Repair or replace damaged parts.

DTC P0613 TCM PROCESSOR


DTC P0613 TCM PROCESSOR

PFP:31036

Description

ECS00E7I

The TCM consists of a microcomputer and connectors for signal input and output and for power supply. The TCM controls the A/T.

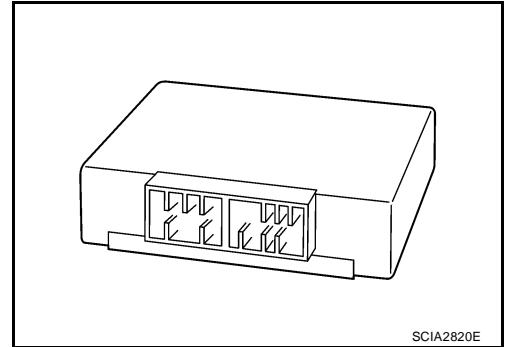

On Board Diagnosis Logic

ECS00E7J

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "TCM PROCESSOR" with CONSULT-II is detected when TCM processor is malfunctioning.

Possible Cause

ECS00E7K

TCM

DTC Confirmation Procedure

ECS00E7L


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start engine.
4. Run engine for at least 2 consecutive seconds at idle speed.
5. If DTC is detected, go to [AT-90, "Diagnostic Procedure"](#).

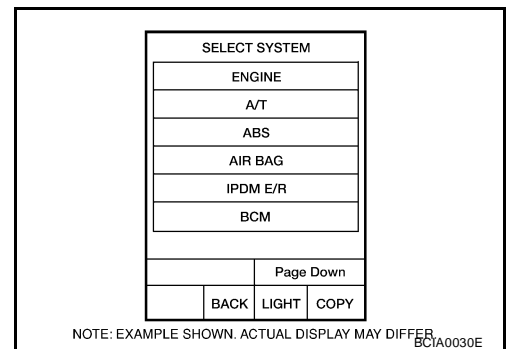

DTC P0613 TCM PROCESSOR

Diagnostic Procedure

ECS00E7M

1. CHECK DTC


④ With CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "SELF-DIAG RESULTS" mode for "TRANSMISSION" with CONSULT-II.
3. Touch "ERASE".
4. Turn ignition switch "OFF" and wait at least 10 seconds.
5. Perform DTC confirmation procedure, [AT-89, "DTC Confirmation Procedure"](#).

Is the "TCM PROCESSOR" displayed again?

YES >> Replace TCM.

NO >> **INSPECTION END**

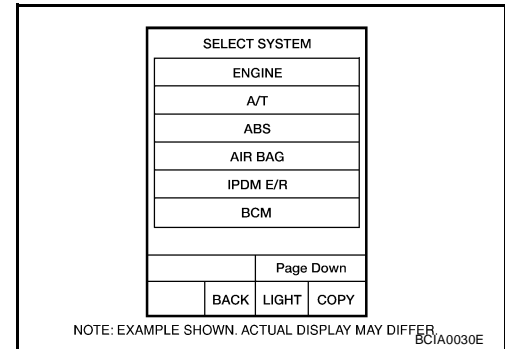

DTC P0705 PARK/NEUTRAL POSITION SWITCH

DTC P0705 PARK/NEUTRAL POSITION SWITCH

PDF:32006

Description

ECS00E7N

- The park/neutral position (PNP) switch includes a transmission range switch.
- The transmission range switch detects the selector lever position and sends a signal to the TCM.
- TCM judges the selector lever position by the park/neutral position (PNP) switch signal.

Selector lever	PNP switch A	PNP switch B	PNP switch C	PNP switch PA	PNP switch PN
P	ON	OFF	OFF	ON	ON
R	ON	ON	OFF	OFF	OFF
N	OFF	ON	OFF	ON	ON
D	OFF	ON	ON	OFF	OFF
L	ON	ON	ON	ON	OFF

On Board Diagnosis Logic

ECS00E7O

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "PNP SW/CIRC" with CONSULT-II or P0705 without CONSULT-II is detected when PNP switch signals input with impossible pattern.

Possible Cause

ECS00E7P

- Harness or connectors
[The park/neutral position (PNP) switch and TCM circuit is open or shorted.]
- Park/neutral position (PNP) switch

DTC Confirmation Procedure

ECS00E7Q


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Move selector lever to each position.
SLCT LVR POSI: "P", "R", "N", "D" or "L" position
4. Wait for at least 5 consecutive seconds at each position.
5. If DTC is detected, go to [AT-93, "Diagnostic Procedure"](#).

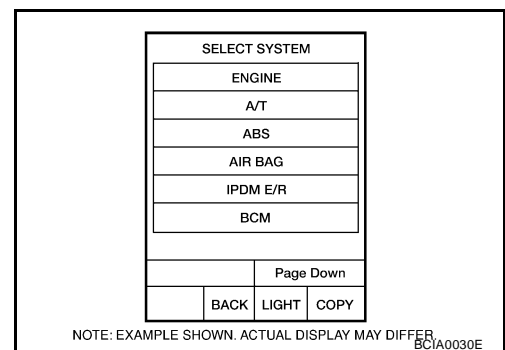

WITH GST

Follow the procedure "With CONSULT-II".





DTC P0705 PARK/NEUTRAL POSITION SWITCH

Wiring Diagram — AT — PNP/SW

ECS00E7R

AT-PNP/SW-01

— : DETECTABLE LINE FOR DTC
 — : NON-DETECTABLE LINE FOR DTC

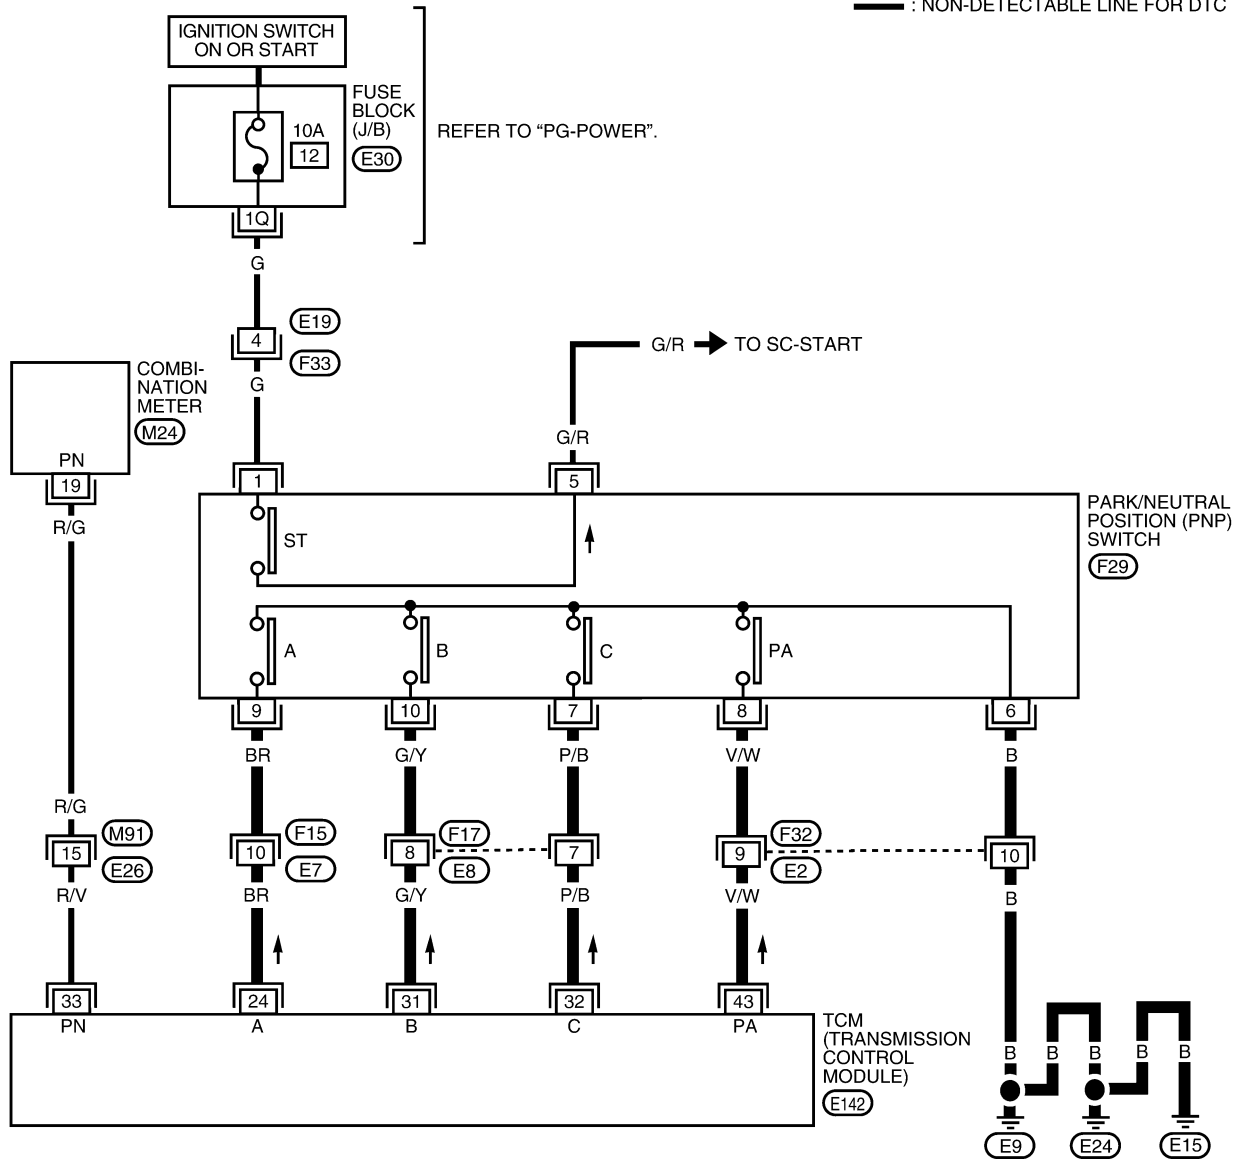

BCWA0595E

DTC P0705 PARK/NEUTRAL POSITION SWITCH

TCM Input/Output Signal Reference Values. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#).

Diagnostic Procedure

ECS00E7S

1. CHECK PNP SWITCH CIRCUIT

With CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Move selector lever to "P", "R", "N", "D" and "L" position and check the value of "PNP SW A", "PNP SW B", "PNP SW C", "PNP SW PA" and "PNP SW PN".


DATA MONITOR	
MONITOR	NO DTC
PNP SW A	OFF
PNP SW B	ON
PNP SW C	ON
PNP SW PA	OFF
PNP SW PN	OFF

SCIA2823E

Selector lever	"PNP SW A"	"PNP SW B"	"PNP SW C"	"PNP SW PA"	"PNP SW PN"
P	ON	OFF	OFF	ON	ON
R	ON	ON	OFF	OFF	OFF
N	OFF	ON	OFF	ON	ON
D	OFF	ON	ON	OFF	OFF
L	ON	ON	ON	ON	OFF

Without CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Move selector lever to "P", "R", "N", "D" and "L" position and check voltage between the TCM connector terminals and ground.

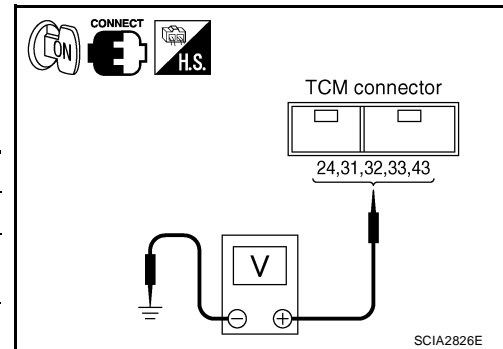

Selector lever	Connector No.		E142		
	Terminal				
	24 - Ground	31 - Ground	32 - Ground	33 - Ground	43 - Ground
P	0V	Battery voltage	Battery voltage	Battery voltage	0V
R	0V	0V	Battery voltage	0V	Battery voltage
N	Battery voltage	0V	Battery voltage	Battery voltage	0V
D	Battery voltage	0V	0V	0V	Battery voltage
L	0V	0V	0V	0V	0V

OK or NG

- OK >> GO TO 5.
 NG >> GO TO 2.

DTC P0705 PARK/NEUTRAL POSITION SWITCH

2. CHECK PNP SWITCH POWER SOURCE CIRCUIT

1. Turn ignition switch "OFF".
2. Disconnect the PNP switch connector.
3. Turn ignition switch "ON". (Do not start engine.)
4. Check the voltage between PNP switch connector terminal 1 and ground.

Connector	Terminal	Voltage
F29	1 - Ground	Battery voltage

5. Turn ignition switch "OFF".
6. Check voltage between PNP switch connector terminal 1 and ground.

Connector	Terminal	Voltage
F29	1 - Ground	0V


7. If OK, check harness for short-circuit to ground or power source.

OK or NG

OK >> GO TO 3.

NG >> Check the following. If any items are damaged, repair or replace damaged parts.

- Harness for short or open between ignition switch and PNP switch
- Ignition switch and fuse
Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#).

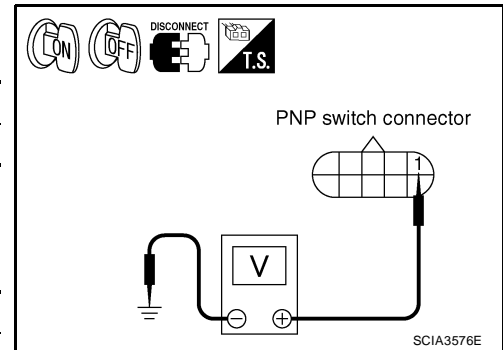

3. CHECK HARNESS BETWEEN TCM AND PNP SWITCH

1. Turn ignition switch "OFF".
2. Disconnect the TCM connector and PNP switch connector.
3. Check continuity between TCM connector terminals 24, 31, 32, 43 and ground.


Connector	Terminal	Condition	Continuity
E142	24 - Ground	Selector lever: "P", "R" and "L" position	Yes
		Other than the above	No
	31 - Ground	Selector lever: "R", "N", "D" and "L" position	Yes
		Other than the above	No
	32 - Ground	Selector lever: "D" and "L" position	Yes
		Other than the above	No
	43 - Ground	Selector lever: "P", "N" and "L" position	Yes
		Other than the above	No

4. If OK, check the following.
 - Harness for short-circuit to ground or power source.
 - Open or short-circuit in the harness between combination meter and TCM.

OK or NG

OK >> GO TO 5.

NG >> GO TO 4.

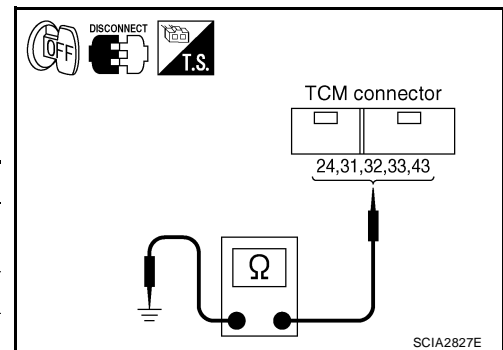

DTC P0705 PARK/NEUTRAL POSITION SWITCH

4. DETECT MALFUNCTIONING ITEM

Check the following.

- Open or short-circuit in the harness between TCM and PNP switch A, B, C, PA.
- Open or short-circuit in the harness for ground of PNP switch.
- PNP switch. Refer to [AT-95, "Component Inspection"](#).

OK or NG

- OK >> GO TO 6.
- NG >> Repair or replace damaged parts.

5. CHECK DTC

Perform "DTC Confirmation Procedure". Refer to [AT-91, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 6.

6. CHECK TCM

1. Check TCM input/output signal. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#).
2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

Component Inspection PNP SWITCH

ECS00E7T

1. Check continuity between PNP switch terminals while moving selector lever. Refer to the following table.

Circuit	Starter		Reverse		Position				
	+	-	+	-	-	A	B	C	PA
Terminal	1	5	2	4	6	9	10	7	8
Lever position									
P	○—○				○—○	○—○			○—○
R			○—○		○—○	○—○			
N	○—○				○—○	○—○			○—○
D					○—○	○—○			○—○
L					○—○	○—○	○—○		○—○

○—○ : Continuity

DISCONNECT T.S. PNP switch connector

4,5,6 1,2,7,8,9,10

5-1
4-2
6-7,8,9,10

SCIA3577E

2. If NG, check again with control cable disconnected. (Refer to step 1 above.)
3. If OK on step 2, adjust control cable. Refer to [AT-236, "Control Cable Adjustment"](#).
4. If NG on step 2, remove park/neutral position (PNP) switch from A/T and check continuity of park/neutral position (PNP) switch terminals. (Refer to step 1 above.)
5. If OK on step 4, adjust park/neutral position (PNP) switch. Refer to [AT-234, "Park/Neutral Position \(PNP\) Switch Adjustment"](#).
6. If NG on step 4, replace park/neutral position (PNP) switch.

DTC P0710 A/T FLUID TEMPERATURE SENSOR CIRCUIT

DTC P0710 A/T FLUID TEMPERATURE SENSOR CIRCUIT

PF3:31940

Description

ECS00E7U

The A/T fluid temperature sensor detects the A/T fluid temperature and sends a signal to the TCM.

On Board Diagnosis Logic

ECS00E7V

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "ATF TEMP SEN/CIRC" with CONSULT-II or P0710 without CONSULT-II is detected under the following conditions.
 - When normal voltage not applied to ATF temperature sensor due to open, short, and so on.
 - When during running, the ATF temperature sensor signal voltage is excessively high or low.

Possible Cause

ECS00E7W

- Harness or connectors
(The sensor circuit is open or shorted.)
- A/T fluid temperature sensor

DTC Confirmation Procedure

ECS00E7X


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

④ WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start engine.
4. Warm up engine so that engine coolant temperature is more than 50°C (122°F).
COOLAN TEMP: More than 50°C (122°F)
5. Maintain the following conditions for at least 16 minutes (Total).
(It is not necessary to drive vehicle.)
COOLAN TEMP: More than 50°C (122°F)
SLCT LVR POSI: "D" position
6. If DTC is detected, go to [AT-98, "Diagnostic Procedure"](#).

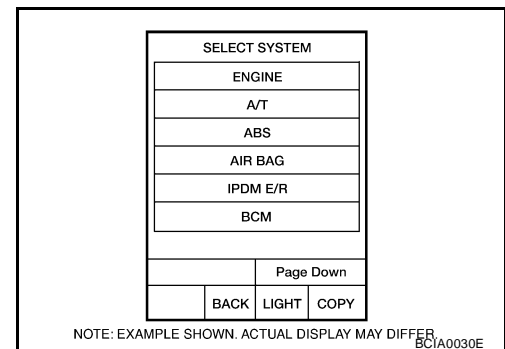

④ WITH GST

Follow the procedure "With CONSULT-II".


DTC P0710 A/T FLUID TEMPERATURE SENSOR CIRCUIT

Wiring Diagram — AT — FTS


ECS00E7Y

AT-FTS-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

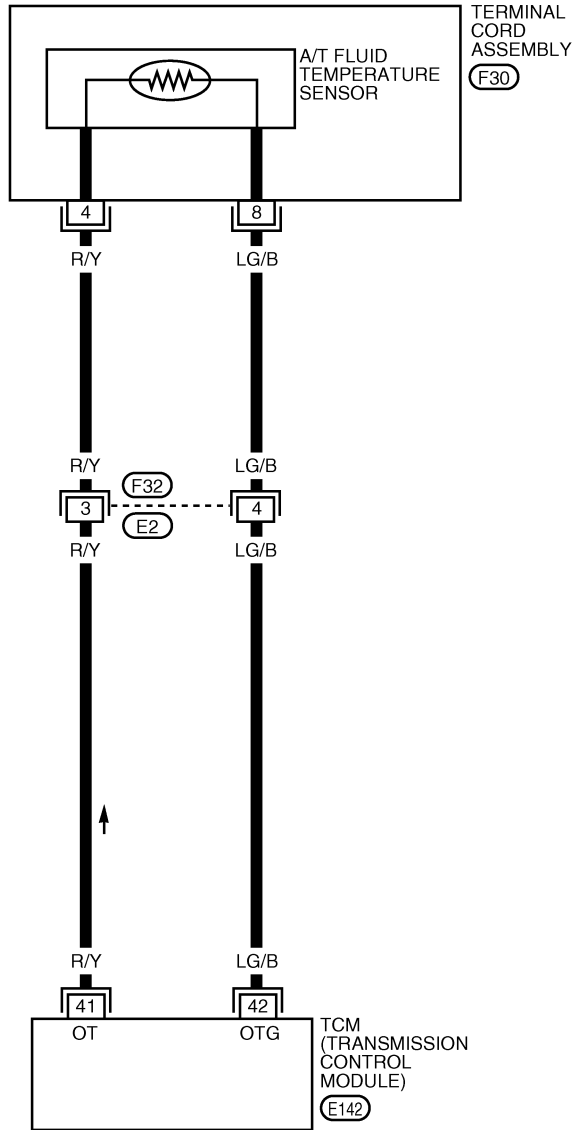

21	22	23	24	25	26	27					
28	29	30	31	32	33	34	35	36	37	38	39
40	41	42	43	44	45	46	47	48			



BCWA0340E

DTC P0710 A/T FLUID TEMPERATURE SENSOR CIRCUIT

TCM Input/Output Signal Reference Values. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#).

Diagnostic Procedure


ECS00E7Z

1. CHECK FLUID TEMPERATURE SENSOR SIGNAL

④ With CONSULT-II

1. Start engine.
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Read out the value of "FLUID TEMP SE".


Item name	Condition	Display value (Approx.)
Fluid temperature sensor	0°C (32°F)	4.0V
	20°C (68°F)	3.0V
	80°C (176°F)	0.8V
	100°C (212°F)	0.5V

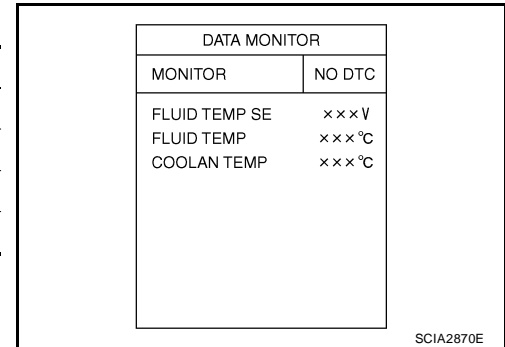

⊗ Without CONSULT-II

1. Start engine.
2. Check voltage between TCM connector terminals 41 and 42 while warming up A/T. Refer to [AT-97, "Wiring Diagram — AT — FTS"](#).

Connector	Terminal	Temperature	Voltage (Approx.)
E142	41 - 42 (ground)	0°C (32°F)	4.0V
		20°C (68°F)	3.0V
		80°C (176°F)	0.8V
		100°C (212°F)	0.5V

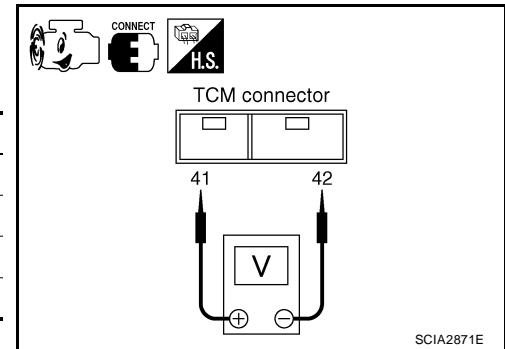

3. Turn ignition switch "OFF".
4. Disconnect the TCM connector.
5. Check if there is continuity between the connector terminal and ground.

OK or NG


- OK >> GO TO 6.
 NG >> GO TO 2.

DTC P0710 A/T FLUID TEMPERATURE SENSOR CIRCUIT

2. CHECK FLUID TEMPERATURE SENSOR CIRCUIT

1. Turn ignition switch "OFF".
2. Disconnect the TCM connector.
3. Check resistance between terminals 41 and 42.

Connector	Terminal	Temperature	Resistance (Approx.)
E142	41 - 42 (ground)	0°C (32°F)	9.8 kΩ
		20°C (68°F)	4.2 kΩ
		80°C (176°F)	0.54 kΩ
		100°C (212°F)	0.31 kΩ

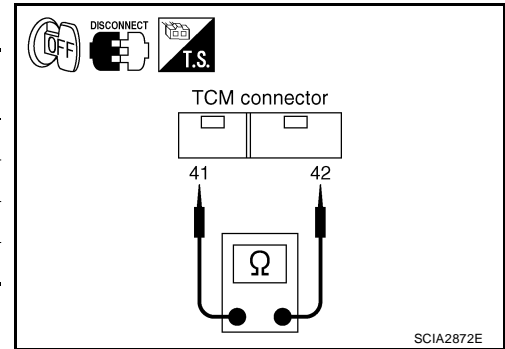

4. Check if there is continuity between the connector terminal and ground.


OK or NG

- OK >> GO TO 6.
 NG >> GO TO 3.

3. CHECK TERMINAL CORD ASSEMBLY WITH A/T FLUID TEMPERATURE SENSOR

1. Turn ignition switch "OFF".
2. Disconnect terminal cord assembly harness connector.
3. Check resistance between terminals 4 and 8.

Connector	Terminal	Temperature	Resistance (Approx.)
F30	4 - 8	0°C (32°F)	9.8 kΩ
		20°C (68°F)	4.2 kΩ
		80°C (176°F)	0.54 kΩ
		100°C (212°F)	0.31 kΩ

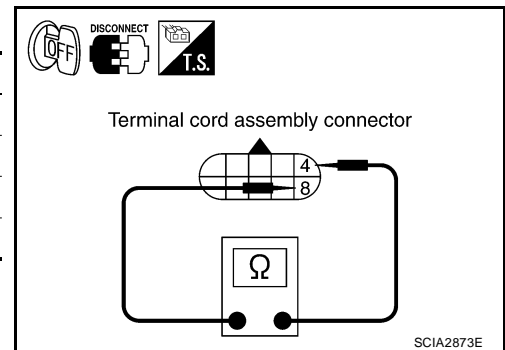

OK or NG

- OK >> GO TO 4.
 NG >> GO TO 5.

4. CHECK HARNESS BETWEEN TCM AND TERMINAL CORD ASSEMBLY

Check the following.

- Open or short-circuit in the harness between TCM and terminal cord assembly.

OK or NG

- OK >> GO TO 6.
 NG >> Repair or replace damaged parts.

DTC P0710 A/T FLUID TEMPERATURE SENSOR CIRCUIT


5. CHECK A/T FLUID TEMPERATURE SENSOR

1. Remove side cover. Refer to [AT-237, "Side cover"](#) .
2. Disconnect A/T fluid temperature sensor.
3. Check resistance between terminals 4 and 8.

Connector	Terminal	Temperature	Resistance
F30	4 - 8	10°C (°F)	5.80 - 7.09kΩ
		110°C (°F)	0.23 - 0.26kΩ

OK or NG

- OK >> GO TO 6.
 NG >> Repair or replace transmission wire. Refer to [AT-237, "Transmission wire"](#) .

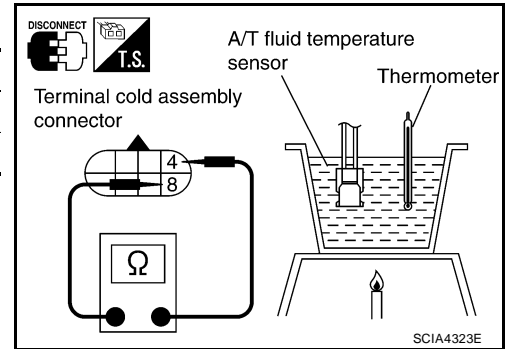

6. CHECK DTC

Perform "DTC Confirmation Procedure". Refer to [AT-96, "DTC Confirmation Procedure"](#) .

OK or NG

- OK >> **INSPECTION END**
 NG >> GO TO 7.

7. CHECK TCM

1. Check TCM input/output signal. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
 NG >> Repair or replace damaged parts.


Component Inspection A/T FLUID TEMPERATURE SENSOR

ECS00E80

1. Remove side cover. Refer to [AT-237, "Side cover"](#) .
2. Disconnect A/T fluid temperature sensor.
3. Check resistance between terminals 4 and 8.

Connector	Terminal	Temperature	Resistance
F30	4 - 8	10°C (°F)	5.80 - 7.09kΩ
		110°C (°F)	0.23 - 0.26kΩ

4. If NG, repair and replace transmission wire. Refer to [AT-237, "Transmission wire"](#) .

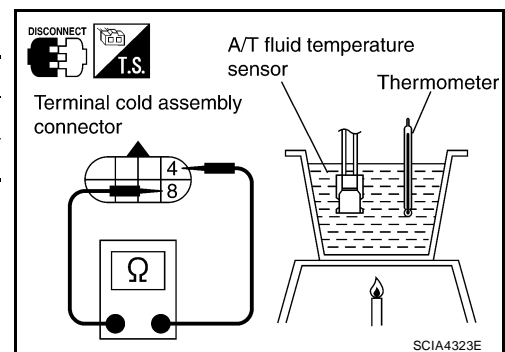

DTC P0711 FLUID TEMPERATURE SENSOR PERFORMANCE

DTC P0711 FLUID TEMPERATURE SENSOR PERFORMANCE

PFPP:31940

Description

ECS00E81

The A/T fluid temperature sensor detects the A/T fluid temperature and sends a signal to the TCM.

On Board Diagnosis Logic

ECS00E82

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "FLUID TEMP SEN" with CONSULT-II or P0711 without CONSULT-II is detected when ATF temperature signal does not change.

Possible Cause

ECS00E83

- Harness or connectors
(The sensor circuit is open or shorted.)
- A/T fluid temperature sensor

DTC Confirmation Procedure

ECS00E84

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start engine.
4. Drive vehicle and maintain the following conditions for at least 15 minutes (Total). (It is not necessary to maintain continuously.)
VHCL SPEED SE-A/T: 40 km/h (25 MPH) or more
SLCT LVR POSI: "D" position
5. If DTC is detected, go to [AT-103, "Diagnostic Procedure"](#).

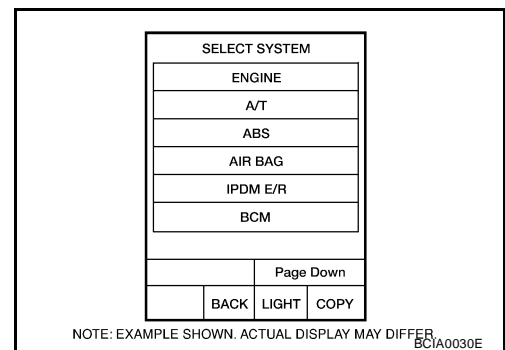

WITH GST

Follow the procedure "With CONSULT-II".


DTC P0711 FLUID TEMPERATURE SENSOR PERFORMANCE

Wiring Diagram — AT — FTSP


ECS00E85

AT-FTSP-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

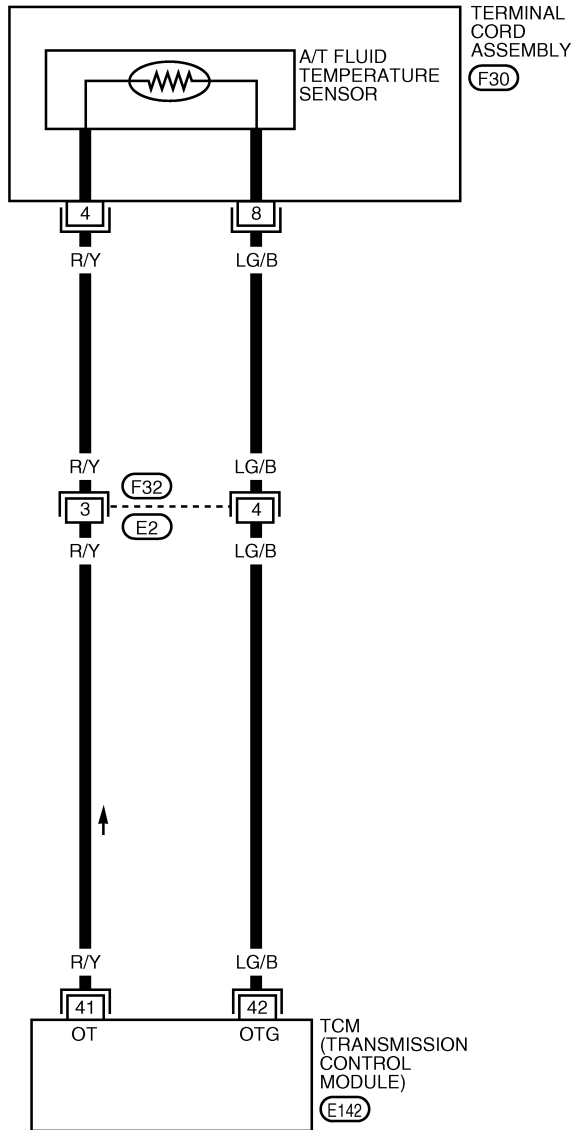

21	22	23	24	25	26	27					
28	29	30	31	32	33	34	35	36	37	38	39
40	41	42	43	44	45	46	47	48			



BCWA0341E

DTC P0711 FLUID TEMPERATURE SENSOR PERFORMANCE

TCM Input/Output Signal Reference Values. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#).

Diagnostic Procedure


ECS00E86

1. CHECK FLUID TEMPERATURE SENSOR SIGNAL

With CONSULT-II

1. Start engine.
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Read out the value of "FLUID TEMP SE".


Item name	Condition	Display value (Approx.)
Fluid temperature sensor	0°C (32°F)	4.0V
	20°C (68°F)	3.0V
	80°C (176°F)	0.8V
	100°C (212°F)	0.5V

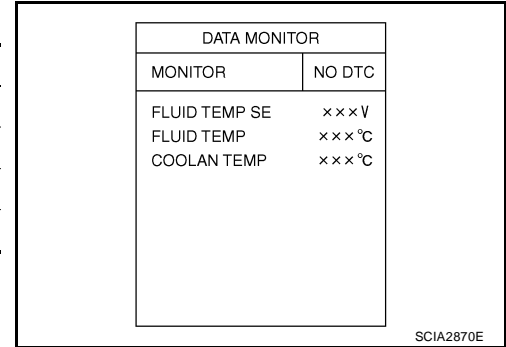

Without CONSULT-II

1. Start engine.
2. Check voltage between TCM connector terminals 41 and 42 while warming up A/T. Refer to [AT-102, "Wiring Diagram — AT — FTSP"](#).

Connector	Terminal	Temperature	Voltage (Approx.)
E142	41 - 42 (ground)	0°C (32°F)	4.0V
		20°C (68°F)	3.0V
		80°C (176°F)	0.8V
		100°C (212°F)	0.5V

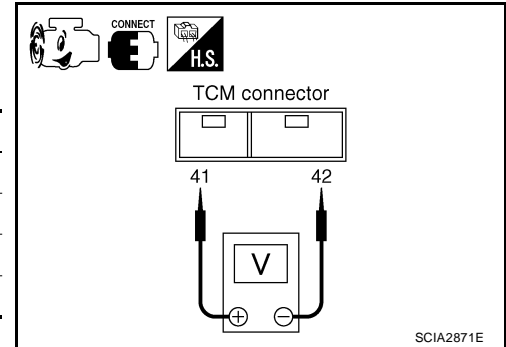

3. Turn ignition switch "OFF".
4. Disconnect the TCM connector.
5. Check if there is continuity between the connector terminal and ground.

OK or NG

- OK >> GO TO 6.
 NG >> GO TO 2.

DTC P0711 FLUID TEMPERATURE SENSOR PERFORMANCE

2. CHECK FLUID TEMPERATURE SENSOR CIRCUIT


1. Turn ignition switch "OFF".
2. Disconnect the TCM connector.
3. Check resistance between terminals 41 and 42.

Connector	Terminal	Temperature	Resistance (Approx.)
E142	41 - 42 (ground)	0°C (32°F)	9.8 kΩ
		20°C (68°F)	4.2 kΩ
		80°C (176°F)	0.54 kΩ
		100°C (212°F)	0.31 kΩ

4. Check if there is continuity between the connector terminal and ground.

OK or NG

- OK >> GO TO 6.
 NG >> GO TO 3.

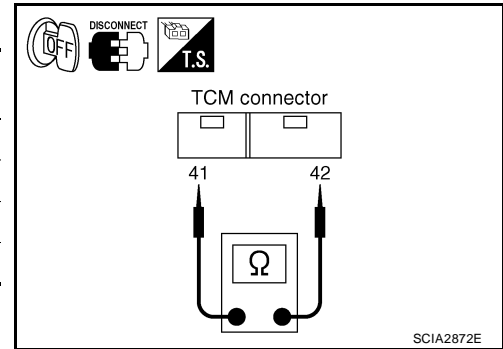

SCIA2872E

3. CHECK TERMINAL CORD ASSEMBLY WITH A/T FLUID TEMPERATURE SENSOR


1. Turn ignition switch "OFF".
2. Disconnect terminal cord assembly harness connector.
3. Check resistance between terminals 4 and 8.

Connector	Terminal	Temperature	Resistance (Approx.)
F30	4 - 8	0°C (32°F)	9.8 kΩ
		20°C (68°F)	4.2 kΩ
		80°C (176°F)	0.54 kΩ
		100°C (212°F)	0.31 kΩ

4. Reinstall any part removed.

OK or NG

- OK >> GO TO 4.
 NG >> GO TO 5.

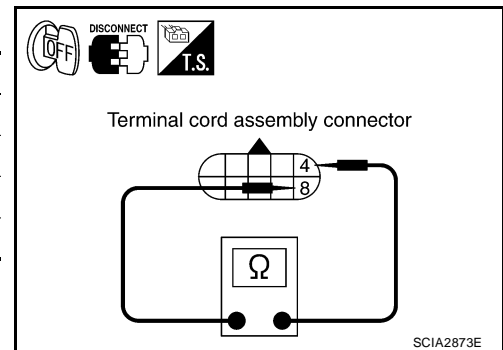

SCIA2873E

4. CHECK HARNESS BETWEEN TCM AND TERMINAL CORD ASSEMBLY

Check the following.

- Open or short-circuit in the harness between TCM and terminal cord assembly.

OK or NG

- OK >> GO TO 6.
 NG >> Repair or replace damaged parts.

DTC P0711 FLUID TEMPERATURE SENSOR PERFORMANCE

5. CHECK A/T FLUID TEMPERATURE SENSOR


1. Remove side cover. Refer to [AT-237, "Side cover"](#) .
2. Disconnect A/T fluid temperature sensor.
3. Check resistance between terminals 4 and 8.

Connector	Terminal	Temperature	Resistance
F30	4 - 8	10°C (°F)	5.80 - 7.09kΩ
		110°C (°F)	0.23 - 0.26kΩ

OK or NG

OK >> GO TO 6.

NG >> Repair or replace transmission wire. Refer to [AT-237, "Transmission wire"](#) .

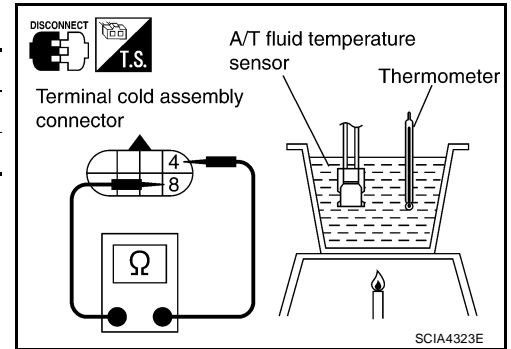

6. CHECK DTC

Perform "DTC Confirmation Procedure". Refer to [AT-101, "DTC Confirmation Procedure"](#) .

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 7.

7. CHECK TCM

1. Check TCM input/output signal. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> **INSPECTION END**

NG >> Repair or replace damaged parts.


Component Inspection A/T FLUID TEMPERATURE SENSOR

ECS00E87

1. Remove side cover. Refer to [AT-237, "Side cover"](#) .
2. Disconnect A/T fluid temperature sensor.
3. Check resistance between terminals 4 and 8.

Connector	Terminal	Temperature	Resistance
F30	4 - 8	10°C (°F)	5.80 - 7.09kΩ
		110°C (°F)	0.23 - 0.26kΩ

4. If NG, repair or replace transmission wire. Refer to [AT-237, "Transmission wire"](#) .

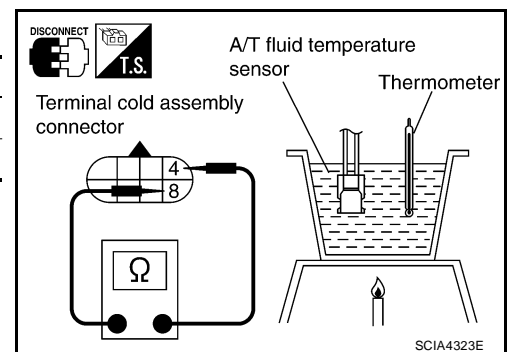

DTC P0717 TURBINE REVOLUTION SENSOR CIRCUIT


DTC P0717 TURBINE REVOLUTION SENSOR CIRCUIT

PF0:31935

Description

ECS00E88

- The turbine revolution sensor detects forward clutch drum rpm (revolutions per minute). It is located on the input side of the automatic transaxle. The revolution sensor is located on the output side of the automatic transaxle. With the two sensors, input and output rpms are accurately detected. The result is optimal shift timing during deceleration and improved shifting.
- Hall IC is installed in turbine revolution sensor, it itself handles in pulse of rectangular wave signal and transmits it to TCM due to hall effect. TCM recognizes the pulse with input rpm speed. Size of output doesn't depend on a rotation number and is fixed.

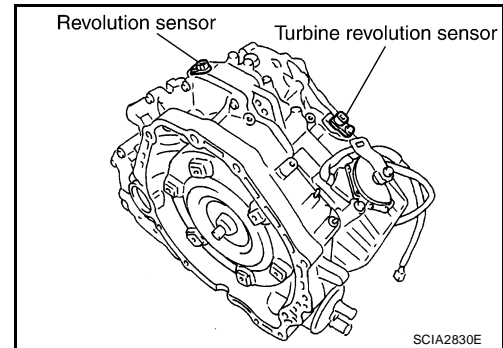

On Board Diagnosis Logic

ECS00E89

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "TURBINE SENSOR" with CONSULT-II or P0717 without CONSULT-II is detected under the following conditions.
 - When signal from turbine revolution sensor does not input due to open, short, and so on.
 - When unexpected signal input during running.

Possible Cause

ECS00E8A

- Harness or connectors
(The sensor circuit is open or shorted.)
- Turbine revolution sensor

DTC Confirmation Procedure

ECS00E8B

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start engine.
4. Drive vehicle and maintain the following conditions for at least 1 consecutive minute.

FLUID TEMP: More than 20°C (68°F)

VHCL/S SE-A/T: 70 km/h (43 MPH) or more


SLCT LVR POSI: "D" position

GEAR: Except 1st position

5. If DTC is detected, go to [AT-108, "Diagnostic Procedure"](#).

WITH GST

Follow the procedure "With CONSULT-II".

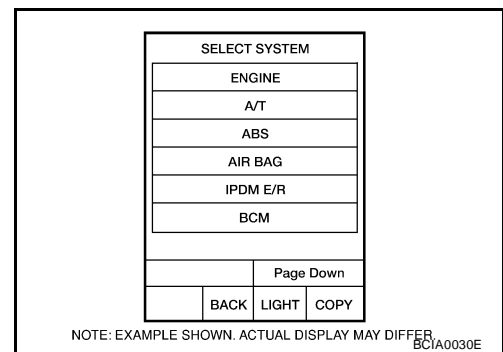


DTC P0717 TURBINE REVOLUTION SENSOR CIRCUIT

Wiring Diagram — AT — TRSC


ECS00E8C

AT-TRSC-01

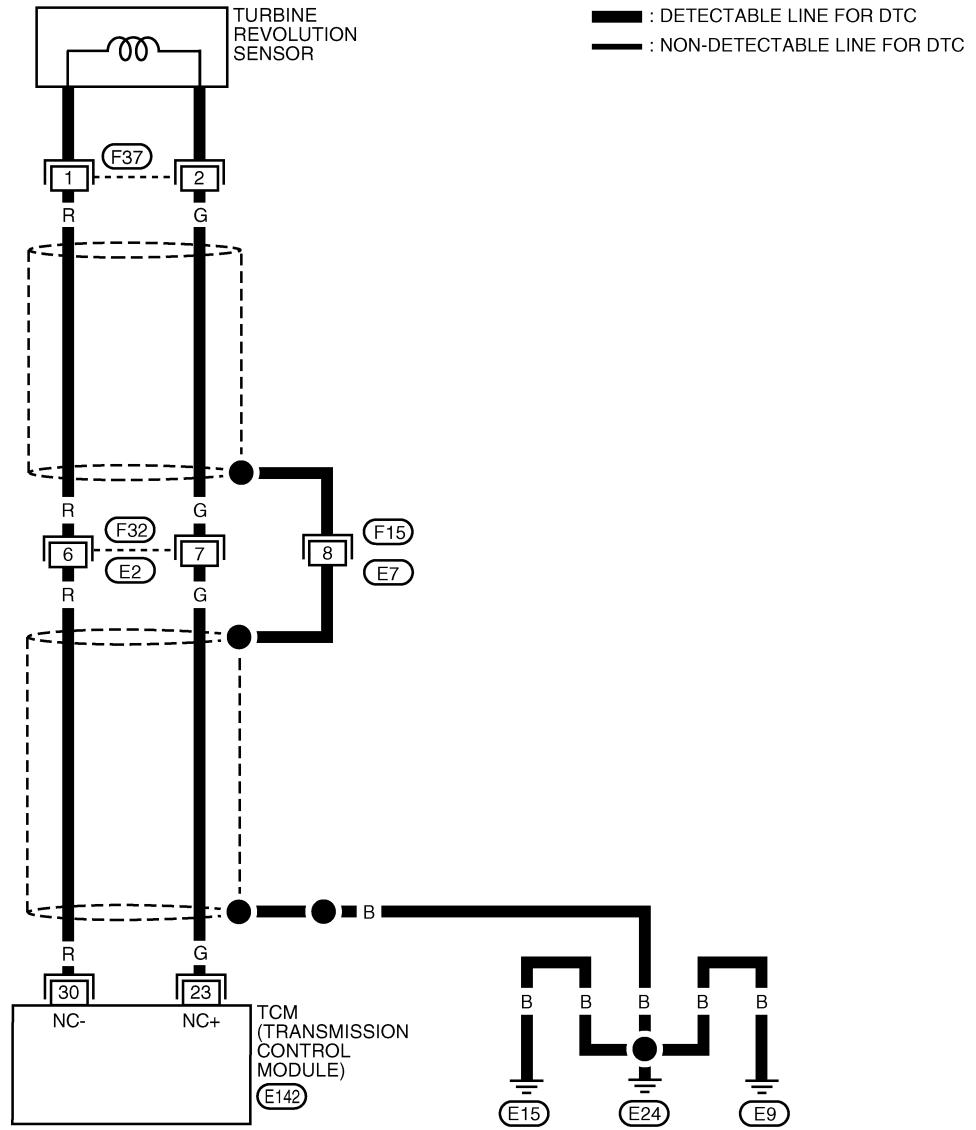

A
B
AT
D
E
F
G
H
I
J
K
L
M

21	22	23	24	25	26	27					
28	29	30	31	32	33	34	35	36	37	38	39
40	41	42	43	44	45	46	47	48			



BCWA0342E

DTC P0717 TURBINE REVOLUTION SENSOR CIRCUIT

TCM Input/Output Signal Reference Values. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#).

Diagnostic Procedure

ECS00E8D

1. CHECK TURBINE REVOLUTION SENSOR CIRCUIT

With CONSULT-II

1. Start engine.
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Drive vehicle and read out the value of "TURBINE REV".

Monitor item	Condition	Specification
TURBINE REV	During driving (lock-up ON)	Approximately matches the engine speed.


DATA MONITOR	
MONITOR	NO DTC
ENGINE SPEED	xxx rpm
TURBINE REV	xxx rpm
LOCK-UP	ON

SCIA2924E

Without CONSULT-II

1. Start the engine.
2. Check pulse between TCM connector terminals 23 and 30.

Connector	Terminal	Condition	Data (Approx.)
E142	23 - 30 (ground)	When moving at 20 km/h (12 MPH) in 1st gear.	371 Hz

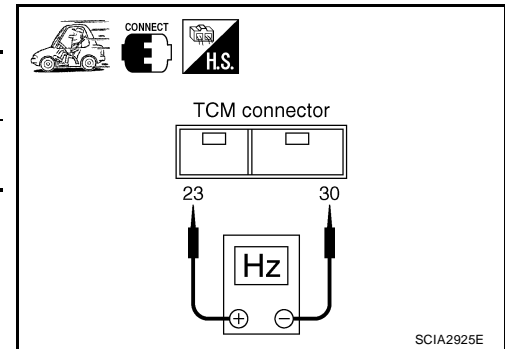

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 2.

2. DETECT MALFUNCTIONING ITEM

Check the following.

- Open or short-circuit in the harness between TCM and turbine revolution sensor.
- Turbine revolution sensor. Refer to [AT-109, "Component Inspection"](#).

OK or NG

- OK >> GO TO 3.
- NG >> Repair or replace damaged parts.

3. CHECK DTC

Perform "DTC Confirmation Procedure". Refer to [AT-106, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 4.

4. CHECK TCM

1. Check TCM input/output signal. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#).
2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

DTC P0717 TURBINE REVOLUTION SENSOR CIRCUIT


ECS00E8E

Component Inspection TURBINE REVOLUTION SENSOR

1. Remove turbine revolution sensor.
2. Connect 12V power supply and 100 Ω resistance to the terminal. (Do not mistake polarity)
3. Inspect the voltage of HIGH and LOW signal by shaking magnetic body from side to side at turbine revolution sensor tip [gap is within 5 mm (0.20 in)].

CAUTION:

Make sure to shake direction from bolt hole to sensor-self when shaking magnetic body. If not, voltage value cannot change.

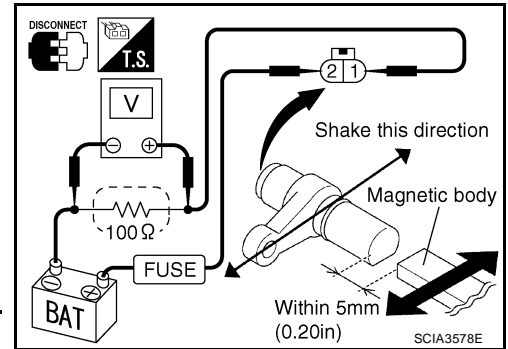

Signal	Voltage (Approx.)
HIGH	1.2 - 1.6V
LOW	0.4 - 0.8V

4. If NG, replace turbine revolution sensor.

A
B
AT
D
E
F
G
H
I
J
K
L
M

DTC P0722 VEHICLE SPEED SENSOR A/T (REVOLUTION SENSOR) CIRCUIT


DTC P0722 VEHICLE SPEED SENSOR A/T (REVOLUTION SENSOR) CIRCUIT

PFP:31935

Description

ECS00E8F

- The revolution sensor detects the revolution of the idler gear parking pawl lock gear and emits a pulse signal. The pulse signal is sent to the TCM which converts it into vehicle speed.
- Hall IC is installed in revolution sensor, it itself handles in pulse of rectangular wave signal and transmits it to TCM due to hall effect. TCM recognizes the pulse with vehicle speed. Size of output doesn't depend on a rotation number and is fixed.

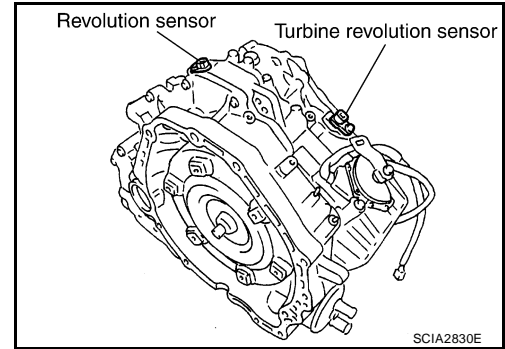

On Board Diagnosis Logic

ECS00E8G

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "VHCL SPEED SEN-A/T" with CONSULT-II or P0722 without CONSULT-II is detected under the following conditions.
 - When signal from revolution sensor does not input due to open, short, and so on.
 - When unexpected signal input during running.

Possible Cause

ECS00E8H

- Harness or connectors
(The sensor circuit is open or shorted.)
- Revolution sensor

DTC Confirmation Procedure

ECS00E8I

CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.

NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II


1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start engine.
4. Drive vehicle and check for an increase of "VHCL/S SE-A/T" value in response to "VHCL/S SE-MTR" value.
If the check result is NG, go to [AT-112, "Diagnostic Procedure"](#) .
If the check result is OK, go to following step.
5. Maintain the following conditions for at least 2 consecutive minutes.

FLUID TEMP: More than 20°C (68°F)

VHCL/S SE-A/T: 70 km/h (43 MPH) or more

SLCT LVR POSI: "D" position

If the check result is NG, go to [AT-112, "Diagnostic Procedure"](#) .

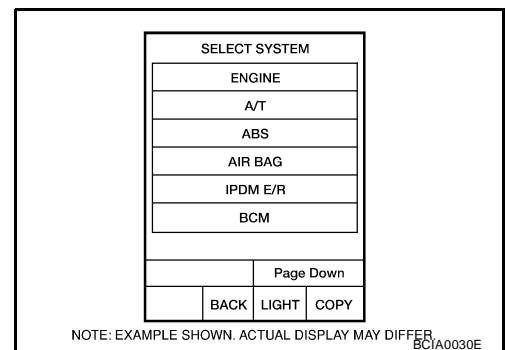

WITH GST



Follow the procedure "With CONSULT-II".

DTC P0722 VEHICLE SPEED SENSOR A/T (REVOLUTION SENSOR) CIRCUIT

Wiring Diagram — AT — VSSATC

ECS00E8J

AT-VSSATC-01

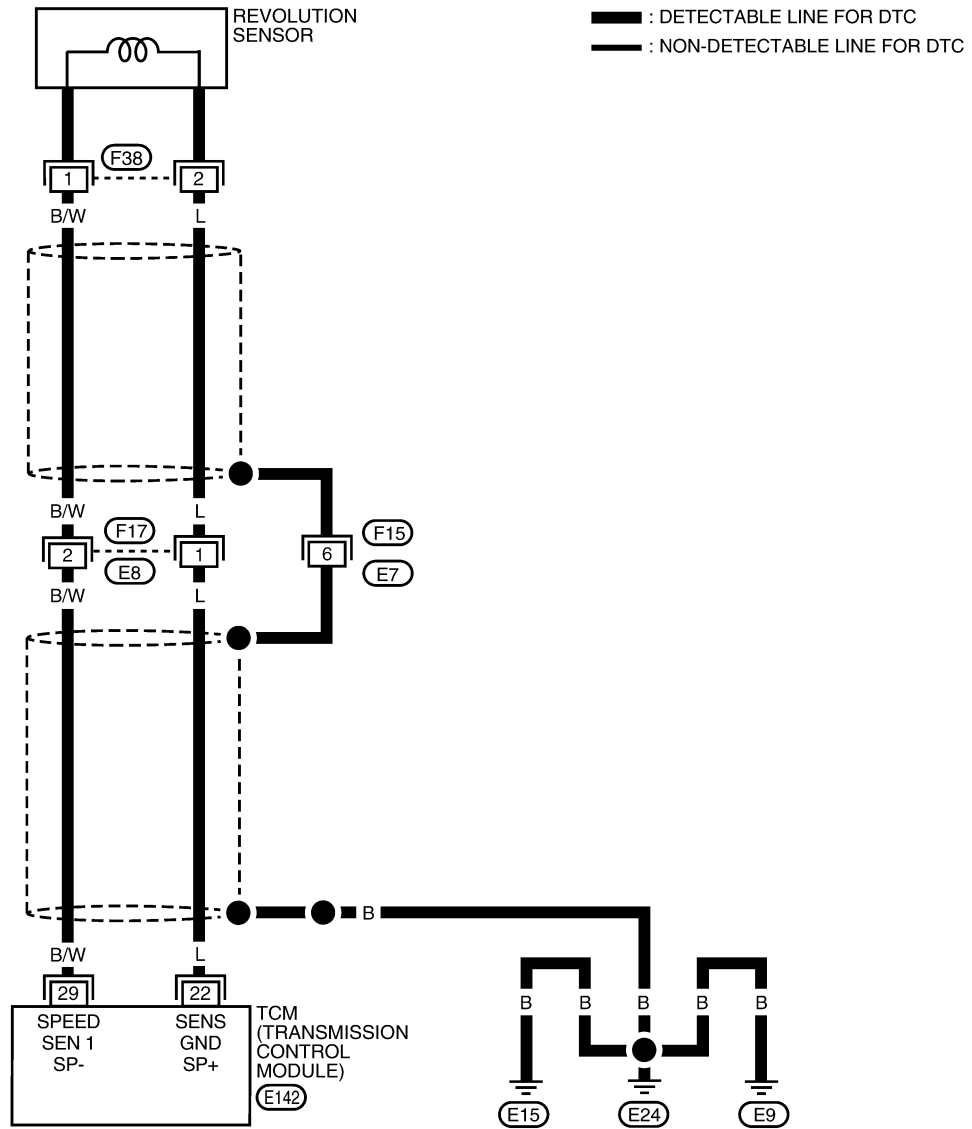

BCWA0596E

DTC P0722 VEHICLE SPEED SENSOR A/T (REVOLUTION SENSOR) CIRCUIT

TCM Input/Output Signal Reference Values. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#).

Diagnostic Procedure


ECS00E8K

1. CHECK REVOLUTION SENSOR CIRCUIT

With CONSULT-II

1. Start engine.
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Drive vehicle and read out the value of "VHCL/S SE-AT".


Monitor item	Condition	Specification
VHCL/S SE-AT	During driving	Approximately matches the speedometer reading.

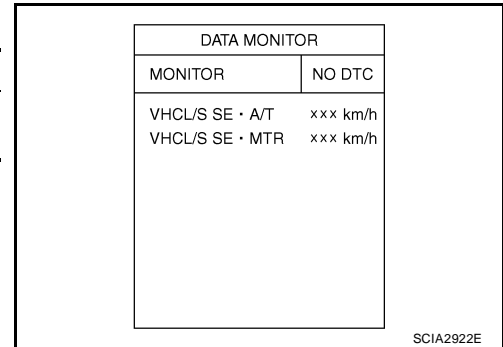

Without CONSULT-II

1. Start the engine.
2. Check pulse between TCM connector terminals 22 and 29.

Connector	Terminal	Condition	Data (Approx.)
E142	22 - 29 (ground)	When moving at 20 km/h (12 MPH) in 1st gear.	119 Hz

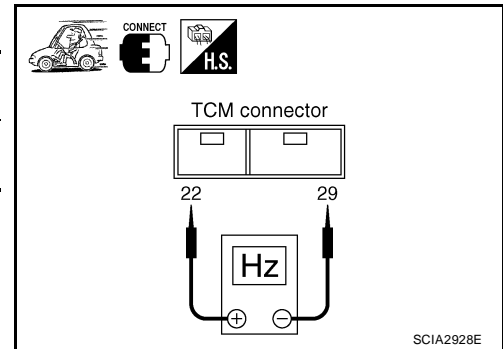

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 2.

2. DETECT MALFUNCTIONING ITEM

Check the following.

- Open or short-circuit in the harness between TCM and revolution sensor.
- Revolution sensor. Refer to [AT-113, "Component Inspection"](#).

OK or NG

- OK >> GO TO 3.
- NG >> Repair or replace damaged parts.

3. CHECK DTC

Perform "DTC Confirmation Procedure". Refer to [AT-110, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 4.

4. CHECK TCM

1. Check TCM input/output signal. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#).
2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

DTC P0722 VEHICLE SPEED SENSOR A/T (REVOLUTION SENSOR) CIRCUIT


ECS00E8L

Component Inspection REVOLUTION SENSOR

1. Remove revolution sensor.
2. Connect 12V power supply and 100 Ω resistance to the terminal. (Do not mistake polarity)
3. Inspect the voltage of HIGH and LOW signal by shaking magnetic body from side to side at revolution sensor tip [gap is within 5mm (0.20 in)].

CAUTION:

Make sure to shake direction from bolt hole to sensor-self when shaking magnetic body. If not, voltage value cannot change.

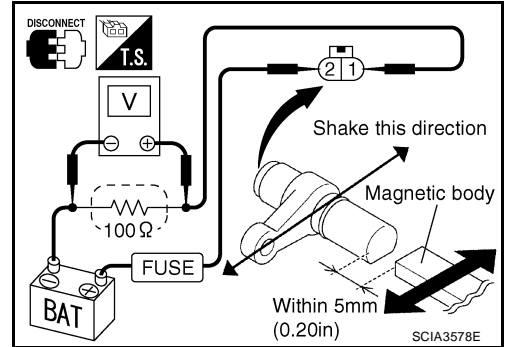

Signal	Voltage (Approx.)
HIGH	1.2 - 1.6V
LOW	0.4 - 0.8V

4. If NG, replace revolution sensor.

A
B
AT
D
E
F
G
H
I
J
K
L
M

DTC P0726 ENGINE SPEED INPUT CIRCUIT PERFORMANCE

DTC P0726 ENGINE SPEED INPUT CIRCUIT PERFORMANCE

PF3:31036

Description

ECS00E8M

The engine speed signal is sent from the ECM to the TCM.

On Board Diagnosis Logic

ECS00E8N

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code “ENG SPD INP PERFOR” with CONSULT-II or 14th judgement flicker without CONSULT-II is detected when malfunction is detected in engine speed signal, actual engine torque signal or torque reduction signal that is output from ECM through CAN communication.

Possible Cause

ECS00E8O

- Harness or connectors
(The signal circuit is open or shorted.)
- ECM

DTC Confirmation Procedure

ECS00E8P

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If “DTC Confirmation Procedure” has been previously performed, always turn ignition switch “OFF” and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch “ON”. (Do not start engine.)
2. Select “DATA MONITOR” mode for “TRANSMISSION” with CONSULT-II.
3. Start engine.
4. Drive vehicle and maintain the following conditions for at least 10 consecutive seconds.
VHCL/S SE-A/T: 10 km/h (6 MPH) or more
ACCELE ANGLE: More than 10 %
SLCT LVR POSI: “D” position
5. If DTC is detected, go to [AT-114, "Diagnostic Procedure"](#).

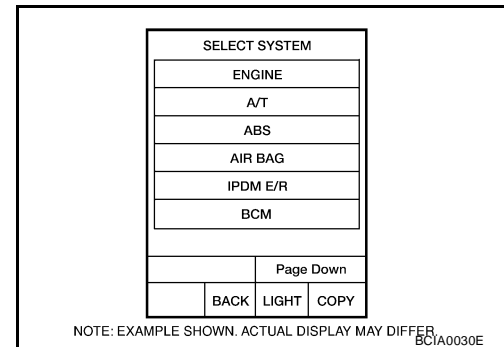

ECS00E8Q

Diagnostic Procedure


1. CHECK DTC WITH ECM

With CONSULT-II

1. Turn ignition switch “ON”. (Do not start engine.)
2. Select “SELF-DIAG RESULTS” mode for “ENGINE” with CONSULT-II. Refer to [EC-119, "CONSULT-II Function \(ENGINE\)"](#).

OK or NG

- OK >> GO TO 2.
- NG >> Check the DTC detected item, go to [EC-8, "INDEX FOR DTC"](#).
 - If CAN communication line is detected, go to [AT-84, "DTC U1000 CAN COMMUNICATION LINE"](#).

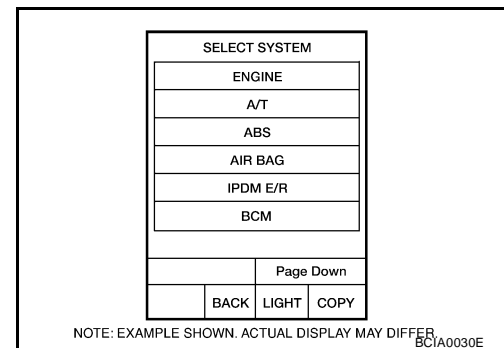

DTC P0726 ENGINE SPEED INPUT CIRCUIT PERFORMANCE

2. CHECK DTC WITH TCM

With CONSULT-II

1. Start engine.
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. While monitoring "ENGINE SPEED", check for engine speed change corresponding to "ACCELE ANGLE".

OK or NG

- OK >> GO TO 3.
NG >> Check the ignition signal circuit.
- Refer to [EC-691, "IGNITION SIGNAL"](#).

DATA MONITOR	
MONITOR	NO DTC
ENGINE SPEED	xxx rpm
ACCELE ANGLE	xxx %

SCIA2929E

3. CHECK DTC

Perform "DTC Confirmation Procedure". Refer to [AT-114, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 4.

4. CHECK TCM

1. Check TCM input/output signal. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#).
2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
NG >> Repair or replace damaged parts.

DTC P0731 A/T 1ST GEAR FUNCTION

DTC P0731 A/T 1ST GEAR FUNCTION

PF3:31940

Description

ECS00E8R

- This malfunction will not be detected while the O/D OFF indicator lamp is indicating another self-diagnosis malfunction.
- This malfunction is detected when the A/T does not shift into first gear position as instructed by the TCM. This is not caused by electrical malfunction (circuits open or shorted) but by mechanical malfunction such as control valve sticking, improper solenoid valve operation, etc.

Gear position		Shift solenoid valve				
		A	B	C	D	E
1st	D	ON (Closed)	ON (Open)	ON (Open)	OFF (Open)	OFF (Closed)
	L	ON (Closed)	ON (Open)	ON (Open)	OFF (Open)	OFF (Closed)

On Board Diagnosis Logic

ECS00E8S

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "A/T 1ST GR FNCTN" with CONSULT-II or P0731 without CONSULT-II is detected when A/T cannot be shifted to the 1st gear position even if electrical circuit is good.

Possible Cause

ECS00E8T

- Shift solenoid valve A (Off stick.)
- 2nd brake
- 2nd coast brake
- One-way clutch No.1
- One-way clutch No.2
- Hydraulic control circuit

DTC Confirmation Procedure

ECS00E8U

CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Start engine and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
2. Make sure that ATF temperature is within the range below.
FLUID TEMP: More than 20°C (68°F)
If out of range, drive the vehicle to warm up the fluid.
3. Accelerate vehicle to maintain the following conditions for at least 12 consecutive seconds.
SLCT LVR POSI: "D" position
GEAR: 1st position
[Vehicle speed and accelerator angle: 1st gear position retainable condition. (Refer to AT-307, "VEHICLE SPEED WHEN SHIFTING GEARS" .)]
Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.
4. If DTC is detected, go to [AT-118, "Diagnostic Procedure"](#) .

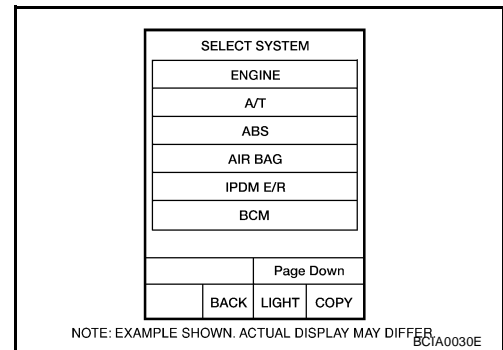

WITH GST

Follow the procedure "With CONSULT-II".



DTC P0731 A/T 1ST GEAR FUNCTION

Wiring Diagram — AT — 1ST SIG

ECS00E8V

AT-1STSIG-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

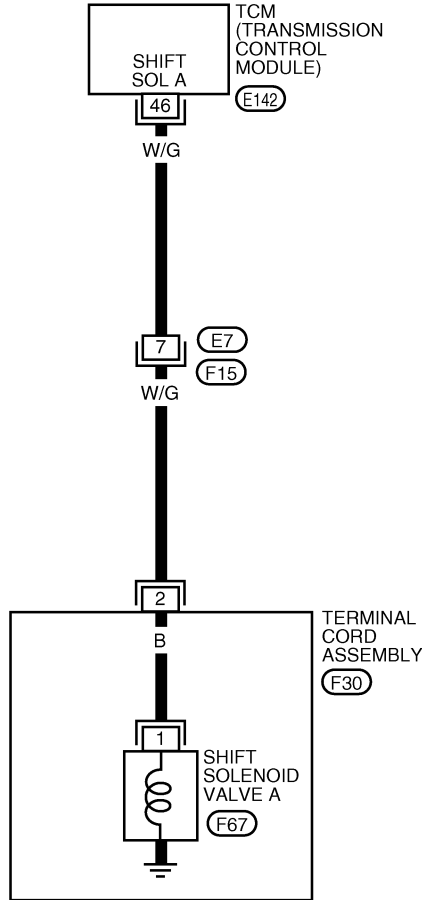

*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

BCWA0344E

DTC P0731 A/T 1ST GEAR FUNCTION

TCM Input/Output Signal Reference Values. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#) .

Diagnostic Procedure

ECS00E8W

1. CHECK SHIFT SOLENOID VALVE A CIRCUIT

Perform "Diagnostic Procedure" for DTC P0750. Refer to [AT-148, "Diagnostic Procedure"](#) .

OK or NG

- OK >> GO TO 2.
- NG >> Repair or replace damaged parts.

2. CHECK MALFUNCTIONING ITEM

1. Control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#) .
2. Disassemble A/T. Refer to [AT-247, "DISASSEMBLY"](#) .
3. Check the following item:
 - 2nd brake. Refer to [AT-266, "Oil Pump, 2nd Coast Brake & 2nd Brake"](#) .
 - 2nd coast brake. Refer to [AT-266, "Oil Pump, 2nd Coast Brake & 2nd Brake"](#) , [AT-272, "One-Way Clutch Outer Race Sub Assembly & 2nd Coast Brake Hub & One-Way Clutch No.1"](#) .
 - One-way clutch No.1. Refer to [AT-272, "One-Way Clutch Outer Race Sub Assembly & 2nd Coast Brake Hub & One-Way Clutch No.1"](#) .
 - One-way clutch No.2. Refer to [AT-247, "DISASSEMBLY"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> Repair or replace damaged parts.

3. CHECK DTC

Perform "DTC Confirmation Procedure". Refer to [AT-116, "DTC Confirmation Procedure"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> Replace control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#) .

DTC P0732 A/T 2ND GEAR FUNCTION

DTC P0732 A/T 2ND GEAR FUNCTION

PDF:31940

Description

ECS00E8X

- This malfunction will not be detected while the O/D OFF indicator lamp is indicating another self-diagnosis malfunction.
- This malfunction is detected when the A/T does not shift into second gear position as instructed by the TCM. This is not caused by electrical malfunction (circuits open or shorted) but by mechanical malfunction such as control valve sticking, improper solenoid valve operation, etc.

Gear position		Shift solenoid valve				
		A	B	C	D	E
2nd	D	OFF (Open)	OFF (Closed)	ON (Open)	OFF (Open)	OFF (Closed)
	L	OFF (Open)	OFF (Closed)	ON (Open)	OFF (Open)	OFF (Closed)

On Board Diagnosis Logic

ECS00E8Y

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "A/T 2ND GR FNCTN" with CONSULT-II or P0732 without CONSULT-II is detected when A/T cannot be shifted to the 2nd gear position even if electrical circuit is good.

Possible Cause

ECS00E8Z

- Shift solenoid valve A (On stick.)
- Shift solenoid valve B (On stick.)
- Shift solenoid valve C (Off stick.)
- Shift solenoid valve D (On stick.)
- Pressure control solenoid valve A (On stick.)
- Pressure control solenoid valve C (On stick.)
- U/D brake
- 2nd coast brake
- 2nd brake
- One-way clutch No.1
- One-way clutch No.2
- B5 brake
- Hydraulic control circuit

DTC Confirmation Procedure

ECS00E90

CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.

NOTE:


If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

DTC P0732 A/T 2ND GEAR FUNCTION

WITH CONSULT-II

1. Start engine and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
2. Make sure that ATF temperature is within the range below.
FLUID TEMP: More than 20°C (68°F)
If out of range, drive the vehicle to warm up the fluid.
3. Accelerate vehicle to maintain the following conditions for at least 12 consecutive seconds.
SLCT LVR POSI: "D" position
GEAR: 2nd position
[Vehicle speed and accelerator angle: 2nd gear position retainable condition. (Refer to [AT-307, "VEHICLE SPEED WHEN SHIFTING GEARS"](#) .)]
Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.
4. If DTC is detected, go to [AT-123, "Diagnostic Procedure"](#) .

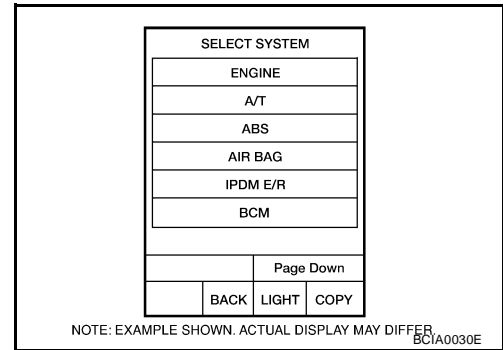

WITH GST

Follow the procedure "With CONSULT-II".



DTC P0732 A/T 2ND GEAR FUNCTION

Wiring Diagram — AT — 2NDSIG

ECS00E91

AT-2NDSIG-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

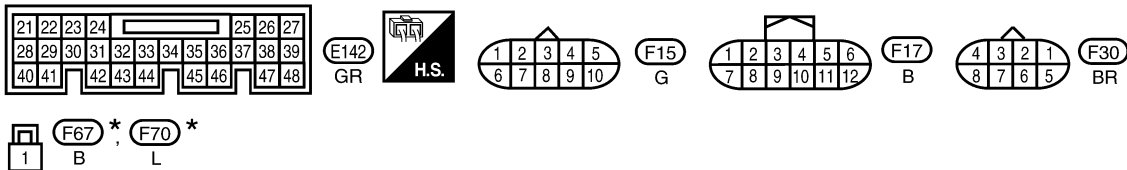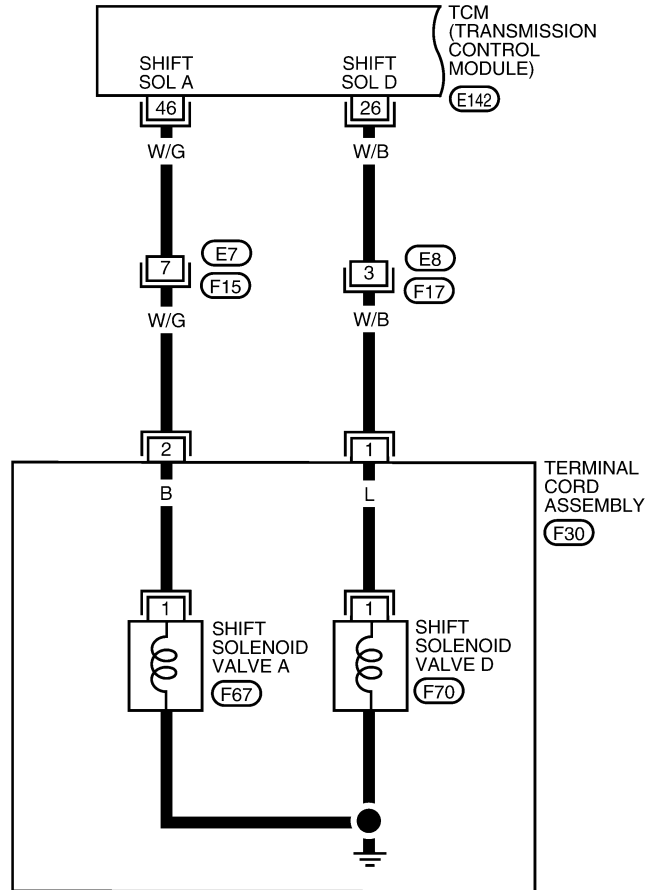







*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

BCWA0597E

DTC P0732 A/T 2ND GEAR FUNCTION

AT-2NDSIG-02

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

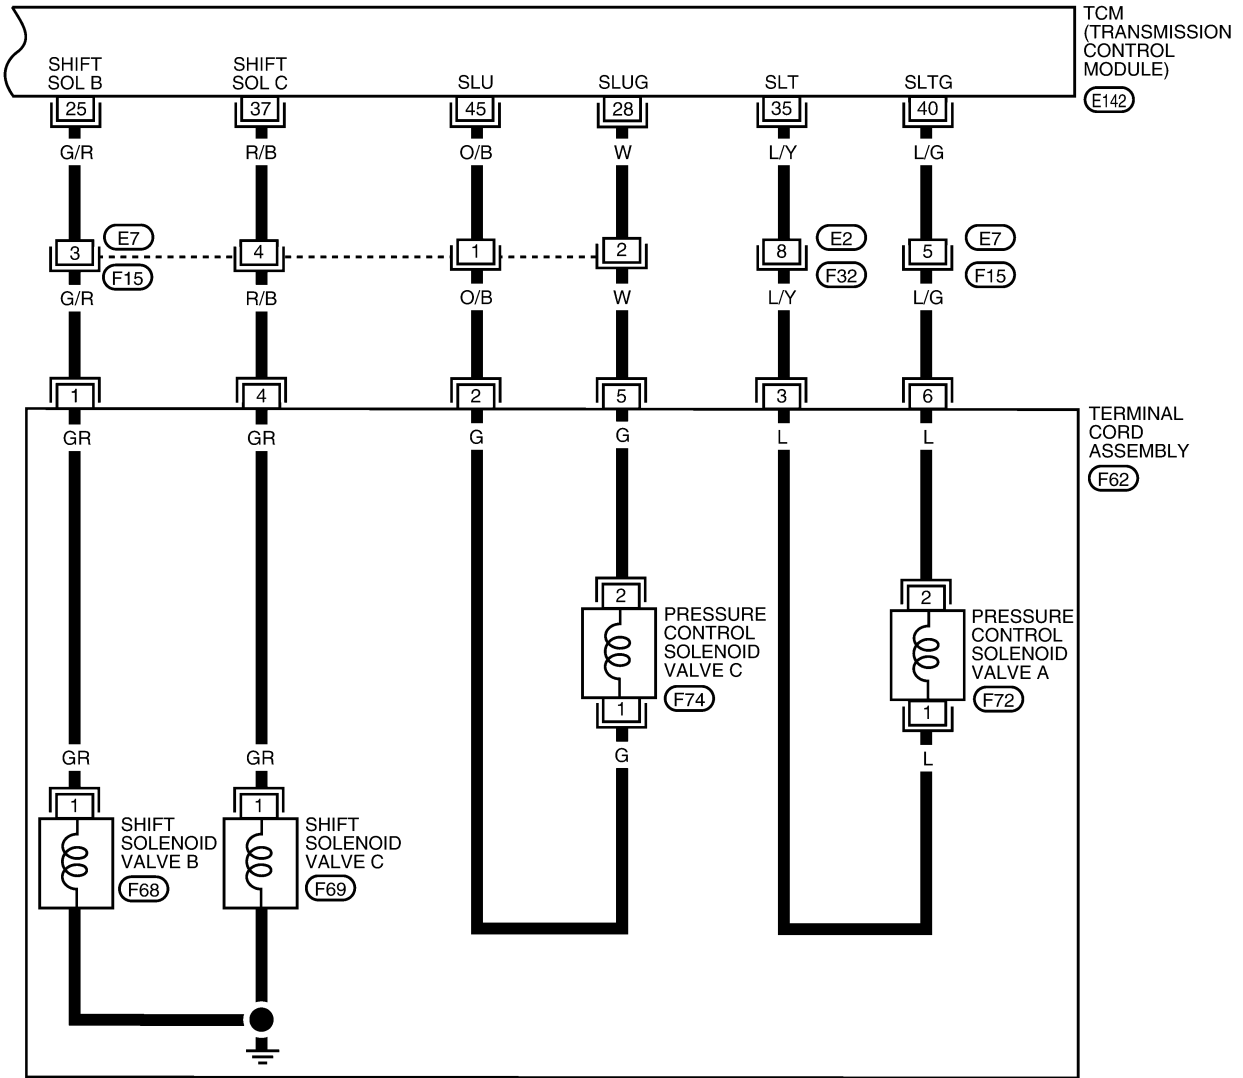

* : THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

BCWA0598E

DTC P0732 A/T 2ND GEAR FUNCTION

TCM Input/Output Signal Reference Values. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#) .

Diagnostic Procedure

ECS00E92

1. CHECK EACH SHIFT SOLENOID VALVE CIRCUIT

Perform "Diagnostic Procedure" for the following DTCs.

- "DTC P0750 SHIFT SOLENOID VALVE A" (Refer to [AT-148, "Diagnostic Procedure"](#) .)
- "DTC P0755 SHIFT SOLENOID VALVE B" (Refer to [AT-153, "Diagnostic Procedure"](#) .)
- "DTC P0760 SHIFT SOLENOID VALVE C" (Refer to [AT-158, "Diagnostic Procedure"](#) .)
- "DTC P0765 SHIFT SOLENOID VALVE D" (Refer to [AT-168, "Diagnostic Procedure"](#) .)

OK or NG

- OK >> GO TO 2.
- NG >> Repair or replace damaged parts.

2. CHECK EACH PRESSURE CONTROL SOLENOID VALVE CIRCUIT

Perform "Diagnostic Procedure" for the following DTCs.

- "DTC P0745 PRESSURE CONTROL SOLENOID VALVE A" (Refer to [AT-143, "Diagnostic Procedure"](#) .)
- "DTC P0795 PRESSURE CONTROL SOLENOID VALVE C" (Refer to [AT-187, "Diagnostic Procedure"](#) .)

OK or NG

- OK >> GO TO 3.
- NG >> Repair or replace damaged parts.

3. CHECK MALFUNCTIONING ITEM

1. Control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#) .
2. Disassemble A/T. Refer to [AT-247, "DISASSEMBLY"](#) .
3. Check the following item:
 - U/D brake. Refer to [AT-247, "DISASSEMBLY"](#) .
 - 2nd coast brake. Refer to [AT-266, "Oil Pump, 2nd Coast Brake & 2nd Brake"](#) , [AT-272, "One-Way Clutch Outer Race Sub Assembly & 2nd Coast Brake Hub & One-Way Clutch No.1"](#) .
 - 2nd brake. Refer to [AT-266, "Oil Pump, 2nd Coast Brake & 2nd Brake"](#) .
 - One-way clutch No.1. Refer to [AT-272, "One-Way Clutch Outer Race Sub Assembly & 2nd Coast Brake Hub & One-Way Clutch No.1"](#) .
 - One-way clutch No.2. Refer to [AT-247, "DISASSEMBLY"](#) .
 - B5 brake. Refer to [AT-274, "Transaxle Case Cover & B5 Brake"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform "DTC Confirmation Procedure". Refer to [AT-119, "DTC Confirmation Procedure"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> Replace control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#) .

DTC P0733 A/T 3RD GEAR FUNCTION

DTC P0733 A/T 3RD GEAR FUNCTION

PF3:31940

Description

ECS00E93

- This malfunction will not be detected while the O/D OFF indicator lamp is indicating another self-diagnosis malfunction.
- This malfunction is detected when the A/T does not shift into third gear position as instructed by the TCM. This is not caused by electrical malfunction (circuits open or shorted) but by mechanical malfunction such as control valve sticking, improper solenoid valve operation, etc.

Gear position		Shift solenoid valve				
		A	B	C	D	E
3rd	D	OFF (Open)	OFF (Closed)	ON (Open)	ON (Closed)	OFF (Closed)
	L	OFF (Open)	OFF (Closed)	ON (Open)	ON (Closed)	OFF (Closed)

On Board Diagnosis Logic

ECS00E94

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "A/T 3RD GR FNCTN" with CONSULT-II or P0733 without CONSULT-II is detected when A/T cannot be shifted to the 3rd gear position even if electrical circuit is good.

Possible Cause

ECS00E95

- Shift solenoid valve A (On stick.)
- Shift solenoid valve B (On stick.)
- Shift solenoid valve C (Off stick.)
- Shift solenoid valve D (Off stick.)
- Pressure control solenoid valve A (On stick.)
- B5 brake
- U/D clutch
- U/D brake
- Hydraulic control circuit

DTC Confirmation Procedure

ECS00E96

CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Start engine and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
2. Make sure that ATF temperature is within the range below.
FLUID TEMP: More than 20°C (68°F)
If out of range, drive the vehicle to warm up the fluid.
3. Accelerate vehicle to maintain the following conditions for at least 12 consecutive seconds.
SLCT LVR POSI: "D" position
GEAR: 3rd position

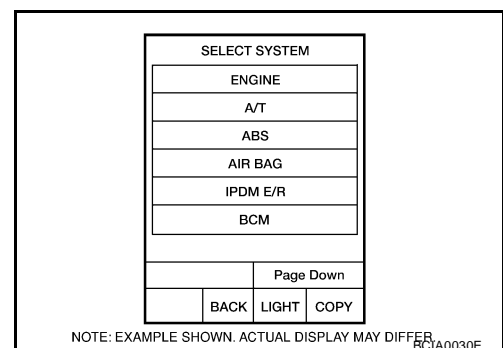

DTC P0733 A/T 3RD GEAR FUNCTION

[Vehicle speed and accelerator angle: 3rd gear position retainable condition. (Refer to [AT-307, "VEHICLE SPEED WHEN SHIFTING GEARS"](#) .)]

Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.

4. If DTC is detected, go to [AT-128, "Diagnostic Procedure"](#) .

WITH GST

Follow the procedure "With CONSULT-II".

A

B

AT

D

E

F

G

H

I

J

K

L

M



DTC P0733 A/T 3RD GEAR FUNCTION

Wiring Diagram — AT — 3RDSIG

ECS00E97

AT-3RDSIG-01

— : DETECTABLE LINE FOR DTC
— : NON-DETECTABLE LINE FOR DTC

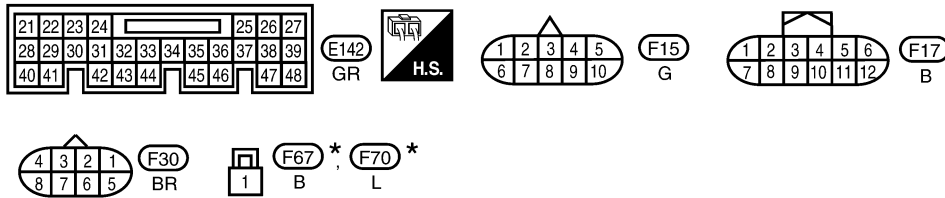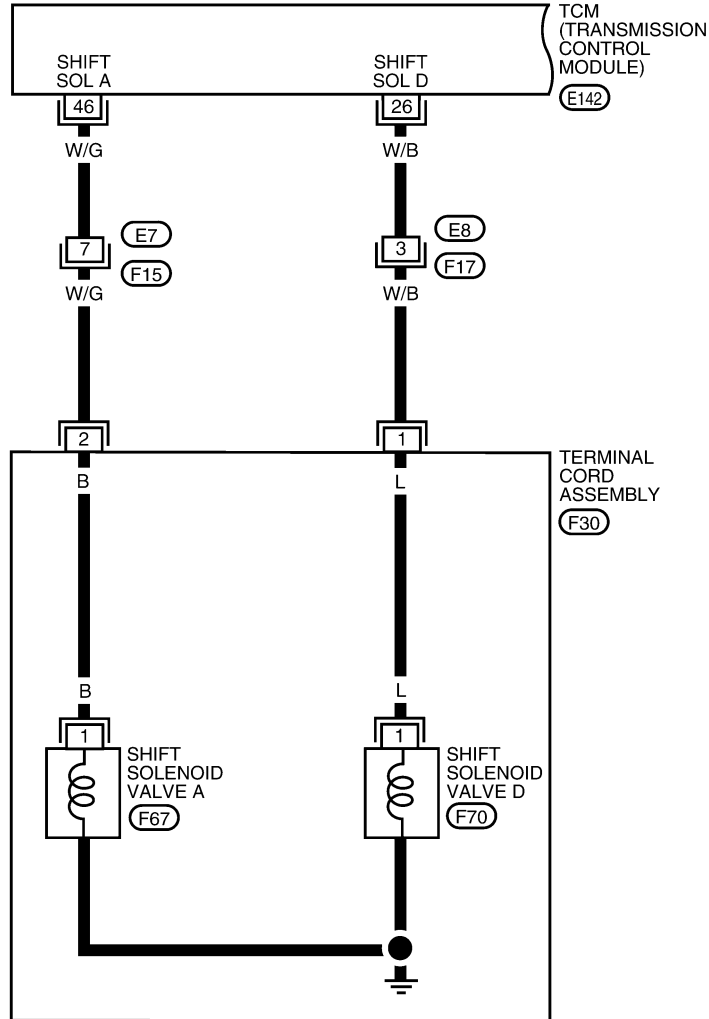



* : THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

BCWA0599E

DTC P0733 A/T 3RD GEAR FUNCTION

AT-3RDSIG-02

— : DETECTABLE LINE FOR DTC
 - - - : NON-DETECTABLE LINE FOR DTC

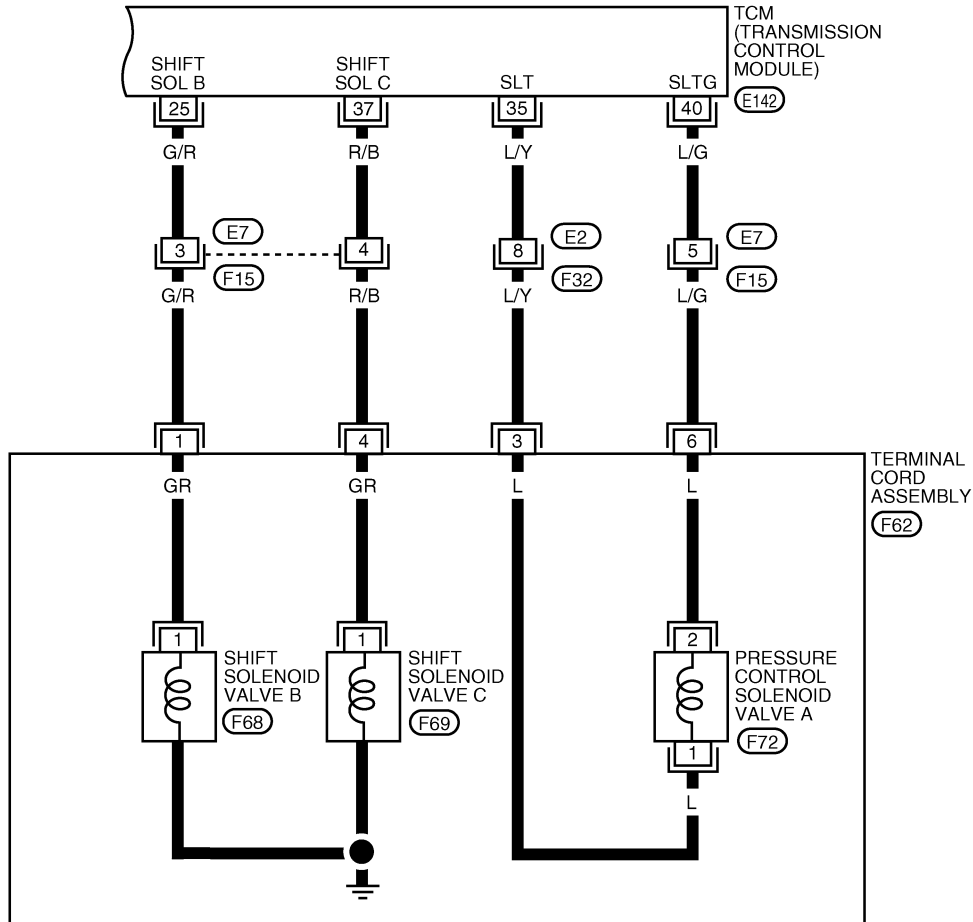

*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

BCWA0313E

DTC P0733 A/T 3RD GEAR FUNCTION

TCM Input/Output Signal Reference Values. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#) .

Diagnostic Procedure

ECS00E98

1. CHECK EACH SHIFT SOLENOID VALVE CIRCUIT

Perform "Diagnostic Procedure" for the following DTCs.

- "DTC P0750 SHIFT SOLENOID VALVE A" (Refer to [AT-148, "Diagnostic Procedure"](#) .)
- "DTC P0755 SHIFT SOLENOID VALVE B" (Refer to [AT-153, "Diagnostic Procedure"](#) .)
- "DTC P0760 SHIFT SOLENOID VALVE C" (Refer to [AT-158, "Diagnostic Procedure"](#) .)
- "DTC P0765 SHIFT SOLENOID VALVE D" (Refer to [AT-168, "Diagnostic Procedure"](#) .)

OK or NG

- OK >> GO TO 2.
- NG >> Repair or replace damaged parts.

2. CHECK PRESSURE CONTROL SOLENOID VALVE A CIRCUIT

Perform "Diagnostic Procedure" for DTC P0745. Refer to [AT-143, "Diagnostic Procedure"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> Repair or replace damaged parts.

3. CHECK MALFUNCTIONING ITEM

1. Control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#) .
2. Disassemble A/T. Refer to [AT-247, "DISASSEMBLY"](#) .
3. Check the following item:
 - B5 brake. Refer to [AT-274, "Transaxle Case Cover & B5 Brake"](#) .
 - U/D clutch. Refer to [AT-247, "DISASSEMBLY"](#) .
 - U/D brake. Refer to [AT-247, "DISASSEMBLY"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform "DTC Confirmation Procedure". Refer to [AT-124, "DTC Confirmation Procedure"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> Replace the control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#) .

DTC P0734 A/T 4TH GEAR FUNCTION

DTC P0734 A/T 4TH GEAR FUNCTION

PDF:31940

Description

ECS00E99

- This malfunction will not be detected while the O/D OFF indicator lamp is indicating another self-diagnosis malfunction.
- This malfunction is detected when the A/T does not shift into fourth gear position as instructed by the TCM. This is not caused by electrical malfunction (circuits open or shorted) but by mechanical malfunction such as control valve sticking, improper solenoid valve operation, etc.

Gear position		Shift solenoid valve				
		A	B	C	D	E
4th	D	OFF (Open)	OFF (Closed)	OFF (Closed)	ON (Closed)	OFF (Closed)

On Board Diagnosis Logic

ECS00E9A

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "A/T 4TH GR FNCTN" with CONSULT-II or P0734 without CONSULT-II is detected when A/T cannot be shifted to the 4th gear position even if electrical circuit is good.

Possible Cause

ECS00E9B

- Shift solenoid valve A (On stick.)
- Shift solenoid valve B (On stick.)
- Shift solenoid valve C (On stick.)
- Pressure control solenoid valve A (On stick.)
- Forward and direct clutch assembly
- U/D clutch
- U/D brake
- 2nd coast brake
- One-way clutch No.1
- Hydraulic control circuit

DTC Confirmation Procedure

ECS00E9C

CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Start engine and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
2. Make sure that ATF temperature is within the range below.
FLUID TEMP: More than 20°C (68°F)
If out of range, drive the vehicle to warm up the fluid.
3. Accelerate vehicle to maintain the following conditions for at least 12 consecutive seconds.
SLCT LVR POSI: "D" position
GEAR: 4th position
[Vehicle speed and accelerator angle: 4th gear position retainable condition. (Refer to AT-307, "VEHICLE SPEED WHEN SHIFTING GEARS" .)]

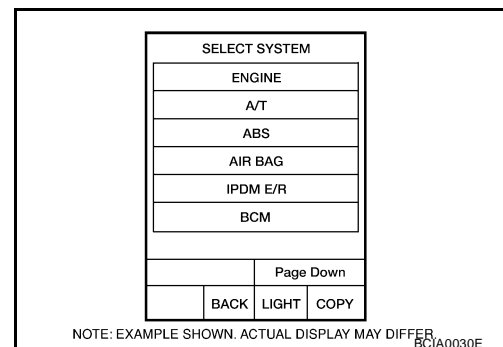

DTC P0734 A/T 4TH GEAR FUNCTION

Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.

4. If DTC is detected, go to [AT-132, "Diagnostic Procedure"](#).



WITH GST

Follow the procedure "With CONSULT-II".




DTC P0734 A/T 4TH GEAR FUNCTION

Wiring Diagram — AT — 4THSIG

ECS00E9D

AT-4THSIG-01

— : DETECTABLE LINE FOR DTC
 - - - : NON-DETECTABLE LINE FOR DTC

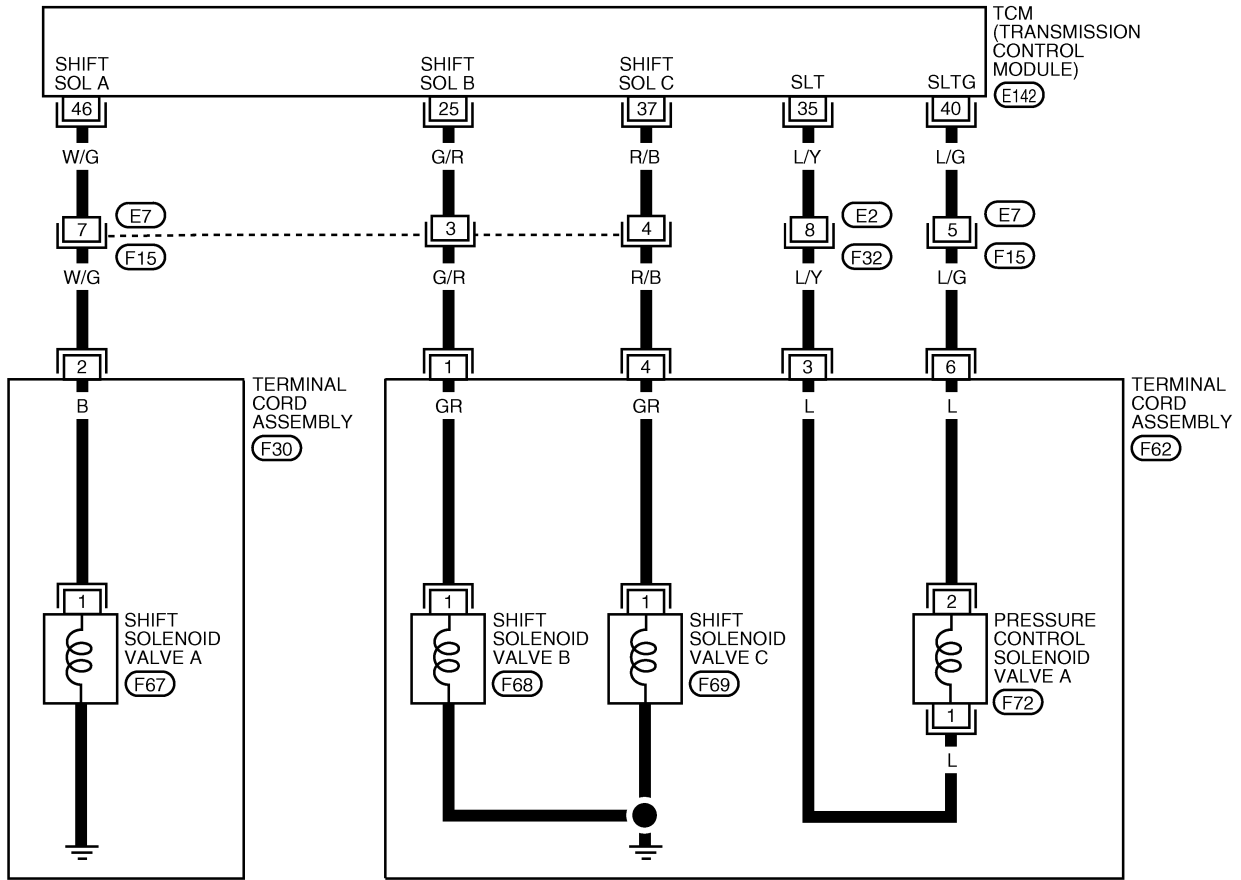

* : THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

BCWA0345E

DTC P0734 A/T 4TH GEAR FUNCTION

TCM Input/Output Signal Reference Values. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#) .

Diagnostic Procedure

ECS00E9E

1. CHECK EACH SHIFT SOLENOID VALVE CIRCUIT

Perform "Diagnostic Procedure" for the following DTCs.

- "DTC P0750 SHIFT SOLENOID VALVE A" (Refer to [AT-148, "Diagnostic Procedure"](#) .)
- "DTC P0755 SHIFT SOLENOID VALVE B" (Refer to [AT-153, "Diagnostic Procedure"](#) .)
- "DTC P0760 SHIFT SOLENOID VALVE C" (Refer to [AT-158, "Diagnostic Procedure"](#) .)

OK or NG

- OK >> GO TO 2.
- NG >> Repair or replace damaged parts.

2. CHECK PRESSURE CONTROL SOLENOID VALVE A CIRCUIT

Perform "Diagnostic Procedure" for DTC P0745. Refer to [AT-143, "Diagnostic Procedure"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> Repair or replace damaged parts.

3. CHECK MALFUNCTIONING ITEM

1. Control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#) .
2. Disassemble A/T. Refer to [AT-247, "DISASSEMBLY"](#) .
3. Check the following item:
 - Forward and direct clutch assembly. Refer to [AT-247, "DISASSEMBLY"](#) .
 - 2nd coast brake. Refer to [AT-266, "Oil Pump, 2nd Coast Brake & 2nd Brake"](#) , [AT-272, "One-Way Clutch Outer Race Sub Assembly & 2nd Coast Brake Hub & One-Way Clutch No.1"](#) .
 - U/D brake. Refer to [AT-247, "DISASSEMBLY"](#) .
 - U/D clutch. Refer to [AT-247, "DISASSEMBLY"](#) .
 - One-way clutch No.1. Refer to [AT-272, "One-Way Clutch Outer Race Sub Assembly & 2nd Coast Brake Hub & One-Way Clutch No.1"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform "DTC Confirmation Procedure". Refer to [AT-129, "DTC Confirmation Procedure"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> Replace the control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#) .

DTC P0735 A/T 5TH GEAR FUNCTION

DTC P0735 A/T 5TH GEAR FUNCTION

PF3:31940

Description

ECS00E9F

- This malfunction will not be detected while the O/D OFF indicator lamp is indicating another self-diagnosis malfunction.
- This malfunction is detected when the A/T does not shift into fifth gear position as instructed by the TCM. This is not caused by electrical malfunction (circuits open or shorted) but by mechanical malfunction such as control valve sticking, improper solenoid valve operation, etc.

Gear position		Shift solenoid valve				
		A	B	C	D	E
5th	D	OFF (Open)	ON (Open)	OFF (Closed)	ON (Closed)	OFF (Closed)

On Board Diagnosis Logic

ECS00E9G

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code “A/T 5TH GR FNCTN” with CONSULT-II or P0735 without CONSULT-II is detected when A/T cannot be shifted to the 5th gear position even if electrical circuit is good.

Possible Cause

ECS00E9H

- Shift solenoid valve B (Off stick.)
- Shift solenoid valve C (On stick.)
- Shift solenoid valve E (On stick.)
- Pressure control solenoid valve A (On stick.)
- Pressure control solenoid valve B (On stick.)
- Forward and direct clutch assembly
- Direct clutch
- 2nd coast brake
- One-way clutch No.1
- Hydraulic control circuit

DTC Confirmation Procedure

ECS00E9I

CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.


NOTE:

If “DTC Confirmation Procedure” has been previously performed, always turn ignition switch “OFF” and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Start engine and select “DATA MONITOR” mode for “TRANSMISSION” with CONSULT-II.
2. Make sure that ATF temperature is within the range below.
FLUID TEMP: More than 20°C (68°F)
If out of range, drive the vehicle to warm up the fluid.
3. Accelerate vehicle to maintain the following conditions for at least 12 consecutive seconds.
SLCT LVR POSI: “D” position
GEAR: 5th position

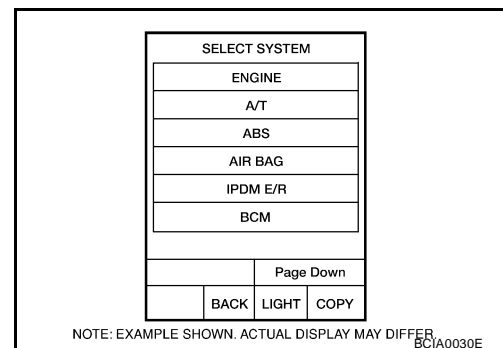

DTC P0735 A/T 5TH GEAR FUNCTION

[Vehicle speed and accelerator angle: 5th gear position retainable condition. (Refer to [AT-307, "VEHICLE SPEED WHEN SHIFTING GEARS"](#) .)]

Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.

4. If DTC is detected, go to [AT-137, "Diagnostic Procedure"](#) .



WITH GST

Follow the procedure "With CONSULT-II".


DTC P0735 A/T 5TH GEAR FUNCTION

Wiring Diagram — AT — 5THSIG

ECS00E9J

AT-5THSIG-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

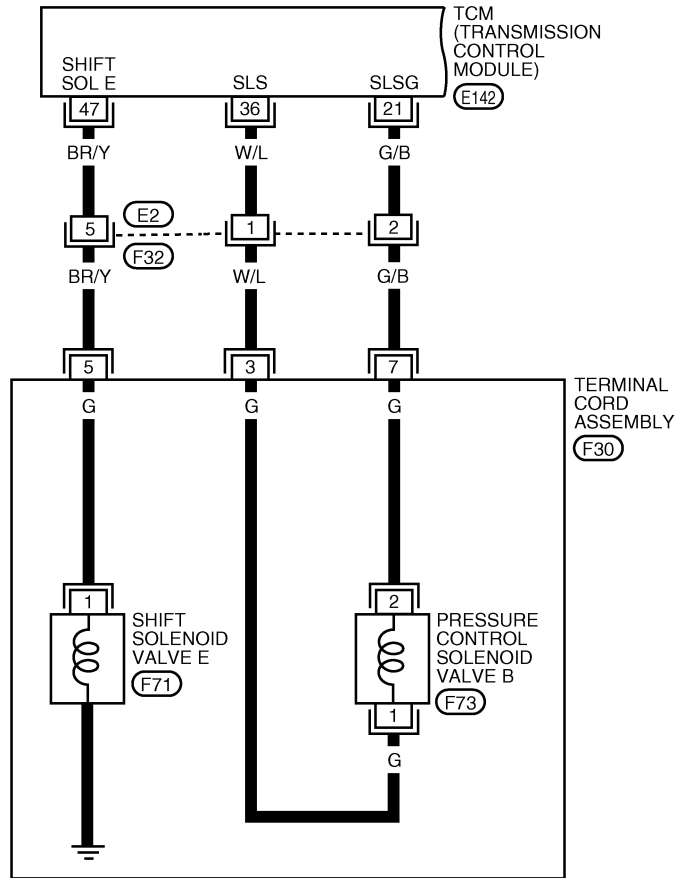

21	22	23	24	25	26	27					
28	29	30	31	32	33	34	35	36	37	38	39
40	41	42	43	44	45	46	47	48			

E142
GR



4	3	2	1
8	7	6	5

F30
BR

1	2	3	4	5
6	7	8	9	10

F32
GR

1

F71*
G

2	1
---	---

F73*
B



*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

BCWA0346E

DTC P0735 A/T 5TH GEAR FUNCTION

AT-5THSIG-02

— : DETECTABLE LINE FOR DTC
 - - - : NON-DETECTABLE LINE FOR DTC

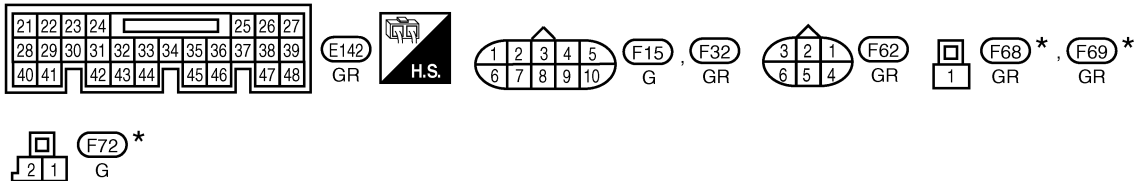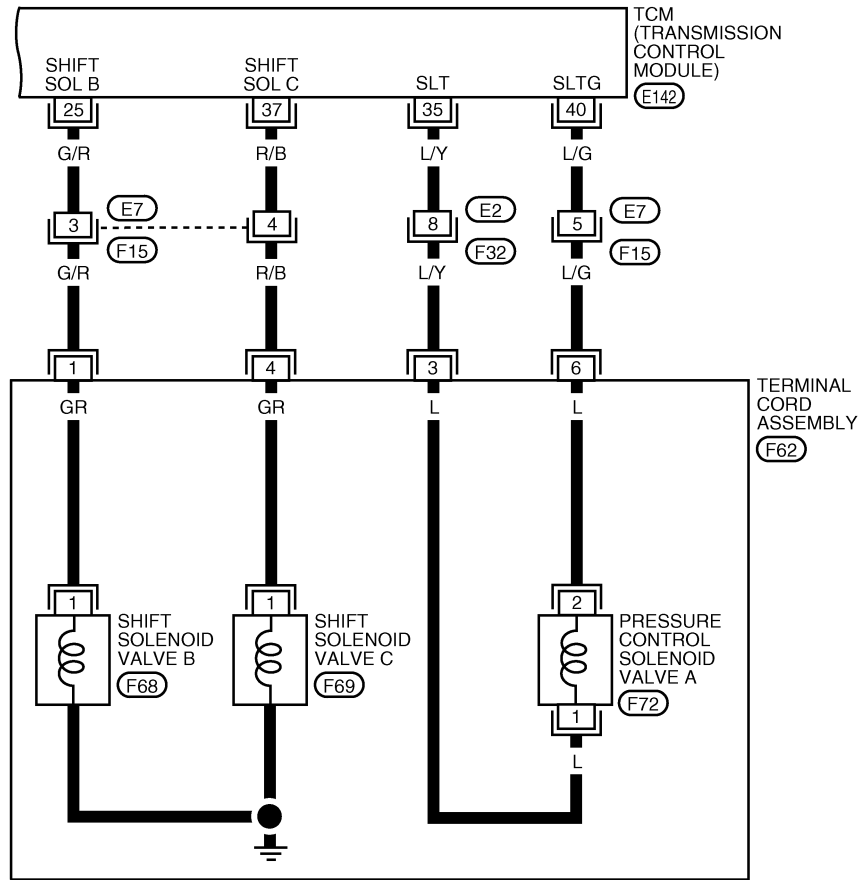

* : THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

BCWA0347E

DTC P0735 A/T 5TH GEAR FUNCTION

TCM Input/Output Signal Reference Values. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#) .

Diagnostic Procedure

ECS00E9K

1. CHECK EACH SHIFT SOLENOID VALVE CIRCUIT

Perform "Diagnostic Procedure" for the following DTCs.

- "DTC P0755 SHIFT SOLENOID VALVE B" (Refer to [AT-153, "Diagnostic Procedure"](#) .)
- "DTC P0760 SHIFT SOLENOID VALVE C" (Refer to [AT-158, "Diagnostic Procedure"](#) .)
- "DTC P0770 SHIFT SOLENOID VALVE E" (Refer to [AT-173, "Diagnostic Procedure"](#) .)

OK or NG

- OK >> GO TO 2.
- NG >> Repair or replace damaged parts.

2. CHECK EACH PRESSURE CONTROL SOLENOID VALVE CIRCUIT

Perform "Diagnostic Procedure" for the following DTCs.

- "DTC P0745 PRESSURE CONTROL SOLENOID VALVE A" (Refer to [AT-143, "Diagnostic Procedure"](#) .)
- "DTC P0775 PRESSURE CONTROL SOLENOID VALVE B" (Refer to [AT-178, "Diagnostic Procedure"](#) .)

OK or NG

- OK >> GO TO 3.
- NG >> Repair or replace damaged parts.

3. CHECK MALFUNCTIONING ITEM

1. Control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#) .
2. Disassemble A/T. Refer to [AT-247, "DISASSEMBLY"](#) .
3. Check the following item:
 - Forward and direct clutch assembly. Refer to [AT-247, "DISASSEMBLY"](#) .
 - 2nd brake. Refer to [AT-266, "Oil Pump, 2nd Coast Brake & 2nd Brake"](#) .
 - One-way clutch No.1. Refer to [AT-272, "One-Way Clutch Outer Race Sub Assembly & 2nd Coast Brake Hub & One-Way Clutch No.1"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform "DTC Confirmation Procedure". Refer to [AT-133, "DTC Confirmation Procedure"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> Replace the control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#) .

DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)

DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)

PFP:31940

Description

ECS00E9L

- This malfunction will not be detected while the O/D OFF indicator lamp is indicating another self-diagnosis malfunction.
- This malfunction is detected when the torque converter clutch does not lock up as instructed by the TCM. This is not caused by electrical malfunction (circuits open or shorted) but by mechanical malfunction such as control valve sticking, improper solenoid valve operation, malfunctioning oil pump or torque converter clutch, etc.

On Board Diagnosis Logic

ECS00E9M

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "A/T TCC S/V FNCTN" with CONSULT-II or P0744 without CONSULT-II is detected when A/T cannot perform lock-up even if electrical circuit is good.

Possible Cause

ECS00E9N

- Shift solenoid valve D
(Off stick.)
- Pressure control solenoid valve C
(Off stick.)
- Torque converter clutch
- Hydraulic control circuit

DTC Confirmation Procedure

ECS00E9O

CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Start engine and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
2. Make sure that ATF temperature is within the range below.
FLUID TEMP: More than 20°C (68°F)
If out of range, drive the vehicle to warm up the fluid.
3. Accelerate vehicle to more than 100 km/h (62 MPH) and maintain the following conditions for at least 12 consecutive seconds.
SLCT LVR POSI: "D" position
GEAR: 5th position
SLIP REV: Less than 100 rpm
ACCELE ANGLE: More than 5 %
LOCK-UP: ON (Refer to [AT-308](#), "VEHICLE SPEED WHEN PERFORMING AND RELEASING COMPLETE LOCK-UP" .)
[Vehicle speed: Constant speed of more than 100 km/h (62 MPH).]
Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.
4. If DTC is detected, go to [AT-140](#), "Diagnostic Procedure" .

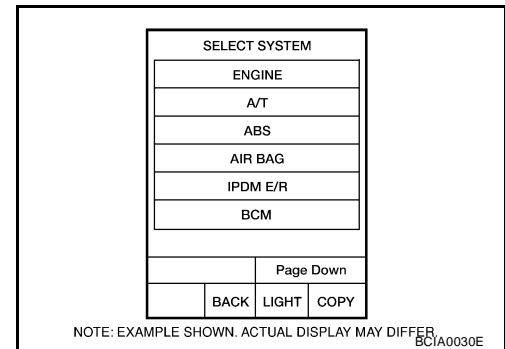

WITH GST

Follow the procedure "With CONSULT-II".



DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)

Wiring Diagram — AT — TCCSIG

ECS00E9P

AT-TCCSIG-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

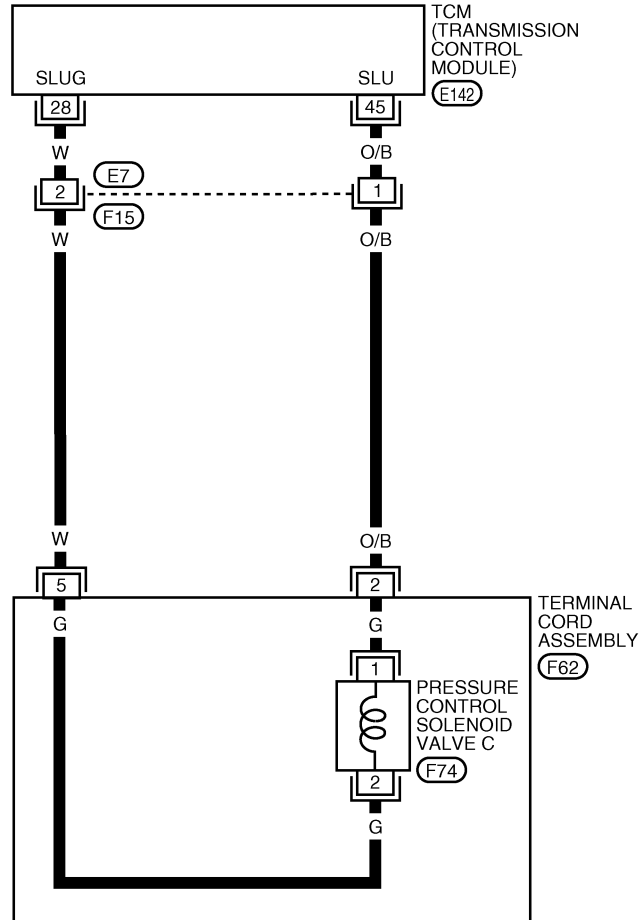

*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

BCWA0348E

DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)

TCM Input/Output Signal Reference Values. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#) .

Diagnostic Procedure

ECS00E90

1. CHECK SHIFT SOLENOID VALVE D CIRCUIT

Perform "Diagnostic Procedure" for DTC P0765. Refer to [AT-168, "Diagnostic Procedure"](#) .

OK or NG

- OK >> GO TO 2.
- NG >> Repair or replace damaged parts.

2. CHECK PRESSURE CONTROL SOLENOID VALVE C CIRCUIT

Perform "Diagnostic Procedure" for DTC P0795. Refer to [AT-187, "Diagnostic Procedure"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> Repair or replace damaged parts.

3. CHECK MALFUNCTIONING ITEM

1. Control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#) .
2. Disassemble A/T. Refer to [AT-247, "DISASSEMBLY"](#) .
3. Check the following item:
 - Torque converter clutch. Refer to [AT-247, "DISASSEMBLY"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform "DTC Confirmation Procedure". Refer to [AT-138, "DTC Confirmation Procedure"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> Replace the control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#) .

DTC P0745 PRESSURE CONTROL SOLENOID VALVE A (LINE PRESSURE)


DTC P0745 PRESSURE CONTROL SOLENOID VALVE A (LINE PRESSURE)

PFP:31940

ECS00E9R

Description

- The pressure control solenoid valve A is normally high, 3-port linear pressure control solenoid.
- The pressure control solenoid valve A regulates the oil pump discharge pressure to suit the driving condition in response to a signal sent from the TCM.

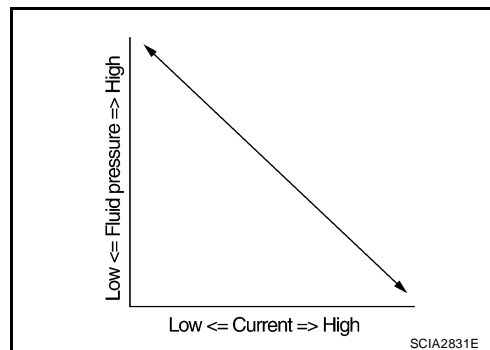

ECS00E9S

On Board Diagnosis Logic

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code “PC SOL A(L/PRESS)” with CONSULT-II or P0745 without CONSULT-II is detected under the following conditions.
 - When normal voltage is not applied to solenoid due to open, short, and so on.
 - When TCM detects as irregular by comparing target value with monitor value.

ECS00E9T

Possible Cause

- Harness or connectors
(The solenoid circuit is open or shorted.)
- Pressure control solenoid valve A

ECS00E9U

DTC Confirmation Procedure


NOTE:

If “DTC Confirmation Procedure” has been previously performed, always turn ignition switch “OFF” and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch “ON”. (Do not start engine.)
2. Select “DATA MONITOR” mode for “TRANSMISSION” with CONSULT-II.
3. Start engine.
4. Run engine for at least 13 consecutive seconds at idle speed.
5. If DTC is detected, go to [AT-143, "Diagnostic Procedure"](#).

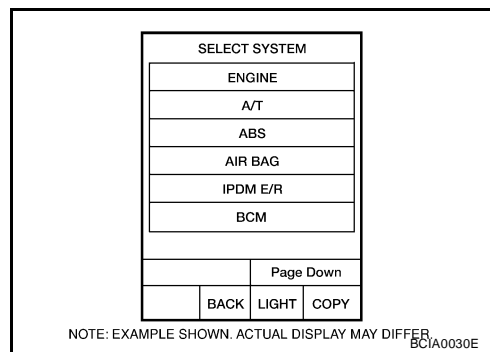

WITH GST

Follow the procedure “With CONSULT-II”.



DTC P0745 PRESSURE CONTROL SOLENOID VALVE A (LINE PRESSURE)

Wiring Diagram — AT — PC/A

ECS00E9V

AT-PC/A-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

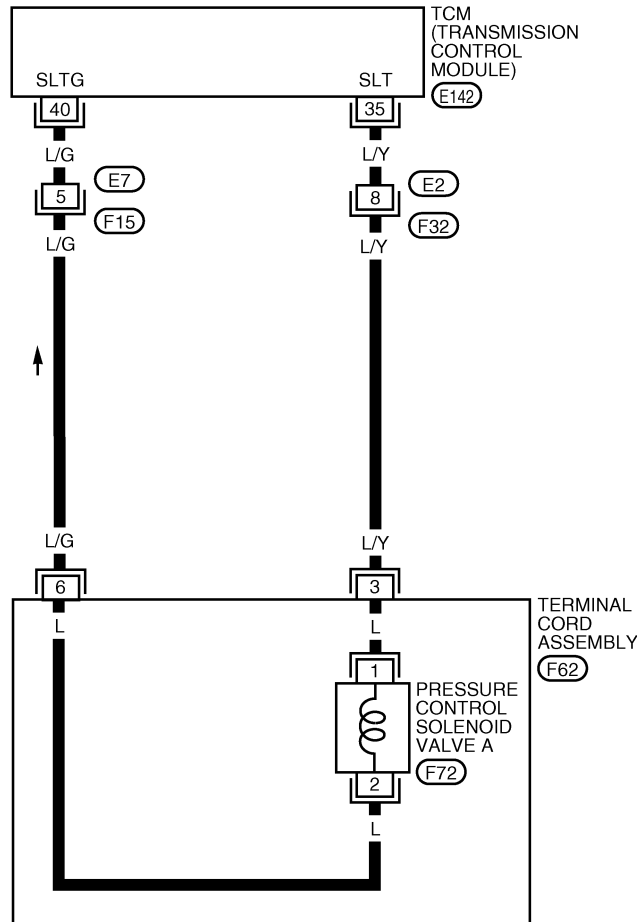

* : THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

BCWA0349E

DTC P0745 PRESSURE CONTROL SOLENOID VALVE A (LINE PRESSURE)

TCM Input/Output Signal Reference Values. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#).

Diagnostic Procedure

ECS00E9W

1. CHECK PRESSURE CONTROL SOLENOID VALVE A SIGNAL

With CONSULT-II

1. After warming up the engine and transaxle, turn ignition switch "OFF".
2. Turn ignition switch "ON". (Do not start engine.)
3. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
4. Read out the value of "PC SOL A OUT" and "PC SOL A MON".

Monitor item	Condition	Display value (Approx.)
<ul style="list-style-type: none"> ● PC SOL A OUT ● PC SOL A MON 	When releasing accelerator pedal with setting selector lever to "P" position.	1.00 A
	When depressing accelerator pedal fully setting selector lever to "P" position.	0.32 A


DATA MONITOR	
MONITOR	NO DTC
PC SOL A OUT	xxx A
PC SOL A MON	xxx A
PC SOL B OUT	xxx A
PC SOL B MON	xxx A
PC SOL C OUT	xxx A
PC SOL C MON	xxx A

SCIA2907E

Without CONSULT-II

1. Start the engine.
2. Check pulse between TCM connector terminals 35 and 40.

Connector	Terminal	Condition	Data (Approx.)
E142	35 - 40	When engine is running with idle speed and setting selector lever to "P" position.	300 Hz

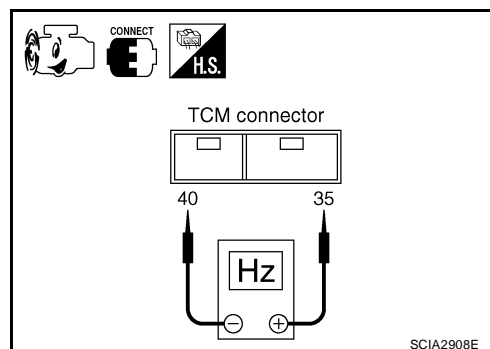


OK or NG

- OK >> GO TO 7.
 NG >> GO TO 2.

2. CHECK PRESSURE CONTROL SOLENOID VALVE A CIRCUIT

1. Turn ignition switch "OFF".
2. Disconnect the TCM connector.
3. Check resistance between TCM connector terminals 35 and 40.

Connector	Terminal	Condition	Resistance (Approx.)
E142	35 - 40	Temperature: 20°C (68°F)	5.0 - 5.6 Ω

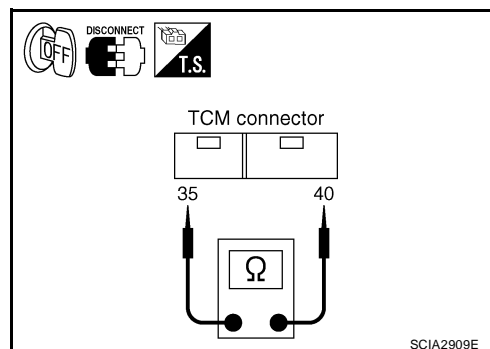

OK or NG

- OK >> GO TO 7.
 NG >> GO TO 3.

DTC P0745 PRESSURE CONTROL SOLENOID VALVE A (LINE PRESSURE)


3. CHECK TERMINAL CORD ASSEMBLY WITH PRESSURE CONTROL SOLENOID VALVE A

1. Turn ignition switch "OFF".
2. Disconnect terminal cord assembly harness connector.
3. Check resistance between terminals 3 and 6.

Connector	Terminal	Condition	Resistance (Approx.)
F62	3 - 6	Temperature: 20°C (68°F)	5.0 - 5.6 Ω

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 5.

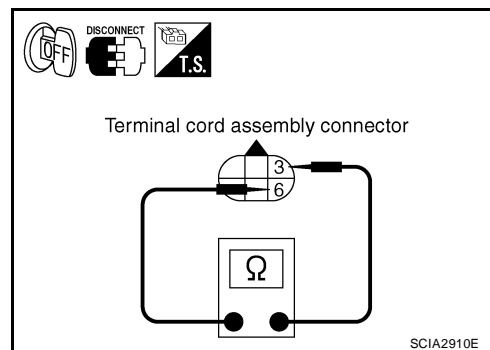

4. CHECK HARNESS BETWEEN TCM AND TERMINAL CORD ASSEMBLY

Check the following.

- Open or short-circuit in the harness between TCM and terminal cord assembly.

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.


5. CHECK PRESSURE CONTROL SOLENOID VALVE A

1. Remove side cover. Refer to [AT-237, "Side cover"](#).
2. Disconnect pressure control solenoid valve A harness connector.
3. Check resistance between terminals 1 and 2.

Connector	Terminal	Condition	Resistance (Approx.)
F72	1 - 2	Temperature: 20°C (68°F)	5.0 - 5.6 Ω

OK or NG

- OK >> GO TO 6.
- NG >> Replace the control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#).

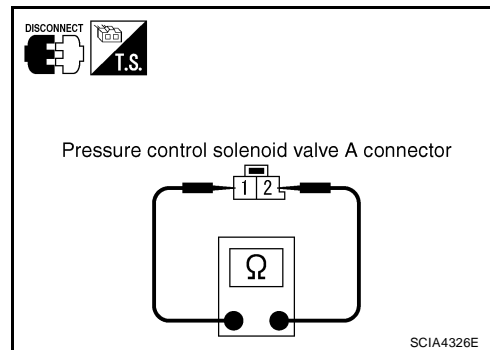

6. CHECK HARNESS BETWEEN TERMINAL CORD ASSEMBLY AND PRESSURE CONTROL SOLENOID VALVE A

Check the following.

- Open or short-circuit in the harness between terminal cord assembly and pressure control solenoid valve A.

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace transmission wire. Refer to [AT-237, "Transmission wire"](#).

7. CHECK DTC

Perform "DTC Confirmation Procedure". Refer to [AT-141, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 8.

DTC P0745 PRESSURE CONTROL SOLENOID VALVE A (LINE PRESSURE)

8. CHECK TCM

1. Check TCM input/output signal. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> **INSPECTION END**

NG >> Repair or replace damaged parts.


Component Inspection PRESSURE CONTROL SOLENOID VALVE A

ECS00E9X

1. Remove side cover. Refer to [AT-237, "Side cover"](#) .
2. Disconnect pressure control solenoid valve A harness connector.
3. Check resistance between terminals 1 and 2.

Connector	Terminal	Condition	Resistance (Approx.)
F72	1 - 2	Temperature: 20°C (68°F)	5.0 - 5.6 Ω

4. If NG, replace the control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#) .

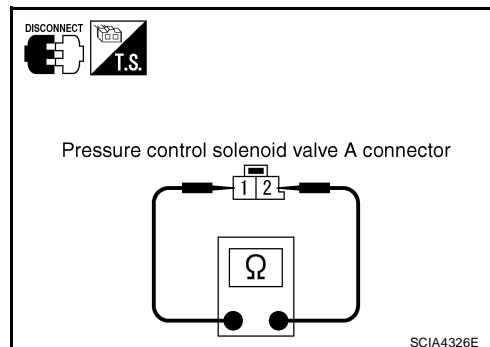

DTC P0750 SHIFT SOLENOID VALVE A

DTC P0750 SHIFT SOLENOID VALVE A

PFP:31940

Description

ECS00E9Y

- Shift solenoid valves are installed directly in control valve body. The shift solenoid valves operates of ON and OFF by the control signal from TCM. Combinations of 5 shift solenoid valves, A, B, C, D and E, shifts gear positions.
- The shift solenoid valve A is a normally open, ON-OFF type solenoid.

Gear position	D1 , L1	D2 , L2	D3 , L3	D4	D5	Reverse
Shift solenoid valve A	ON (Closed)	OFF (Open)	OFF (Open)	OFF (Open)	OFF (Open)	OFF (Open)

On Board Diagnosis Logic

ECS00E9Z

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code “SHIFT SOL A” with CONSULT-II or P0750 without CONSULT-II is detected under the following conditions.
 - When normal voltage is not applied to solenoid due to open, short, and so on.
 - When TCM detects as irregular by comparing target value with monitor value.

Possible Cause

ECS00EA0

- Harness or connectors
(The solenoid circuit is open or shorted.)
- Shift solenoid valve A

DTC Confirmation Procedure

ECS00EA1

CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.


NOTE:

If “DTC Confirmation Procedure” has been previously performed, always turn ignition switch “OFF” and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

Ⓟ WITH CONSULT-II

1. Turn ignition switch “ON”. (Do not start engine.)
2. Select “DATA MONITOR” mode for “TRANSMISSION” with CONSULT-II.
3. Start engine.
4. Drive vehicle and allow the following conditions.
SLCT LVR POSI: “D” position
GEAR: 1st ⇒ 2nd position
5. If DTC is detected, go to [AT-148, "Diagnostic Procedure"](#).

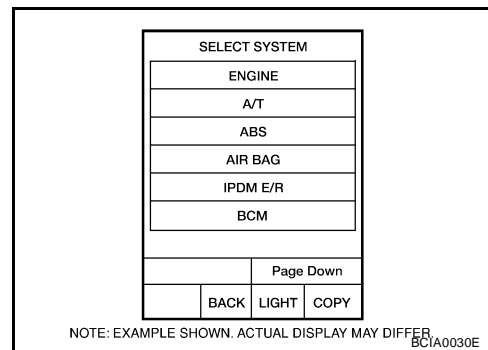

Ⓟ WITH GST

Follow the procedure “With CONSULT-II”.



DTC P0750 SHIFT SOLENOID VALVE A

Wiring Diagram — AT — SSV/A

ECS00EA2

AT-SSV/A-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

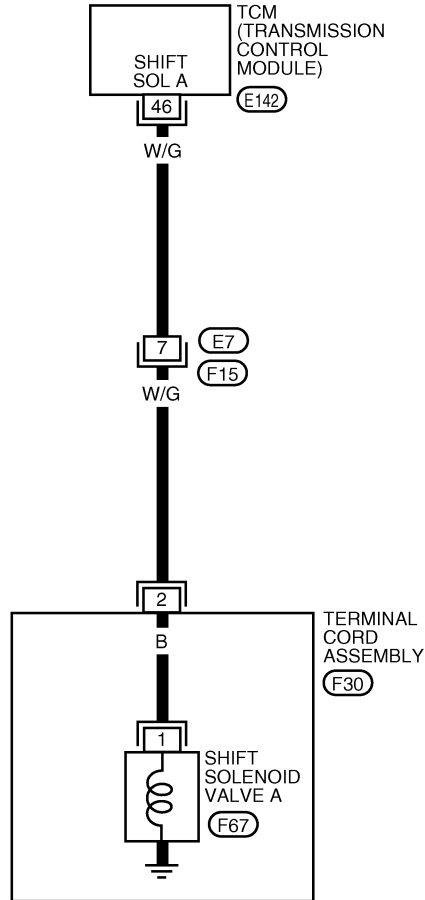

*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

BCWA0350E

DTC P0750 SHIFT SOLENOID VALVE A

TCM Input/Output Signal Reference Values. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#).

Diagnostic Procedure


ECS00EA3

1. CHECK SHIFT SOLENOID VALVE A SIGNAL

With CONSULT-II

1. Start engine.
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Drive vehicle and read out the value of "SFT SOL A OUT" and "SFT SOL A MON".


Monitor item	Condition	Indication
<ul style="list-style-type: none"> • SFT SOL A OUT • SFT SOL A MON 	When shift solenoid valve A operates. (When driving in 1st gear.)	ON
	When shift solenoid valve A does not operate.	OFF

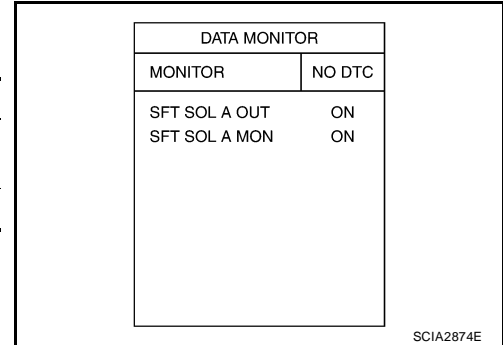

Without CONSULT-II

1. Drive vehicle.
2. Check voltage between TCM connector terminal and ground.

Connector	Terminal	Condition	Voltage (Approx.)
E142	46 - Ground	When shift solenoid valve A operates. (When driving in 1st gear.)	Battery voltage
		When shift solenoid valve A does not operate.	0V

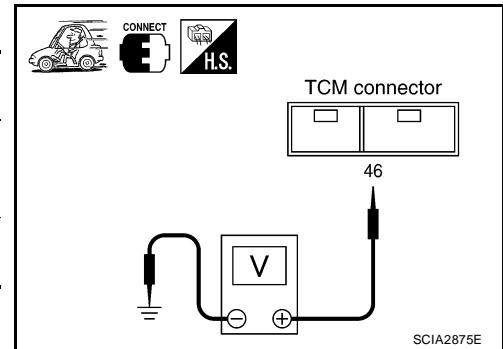

OK or NG

- OK >> GO TO 7.
NG >> GO TO 2.


2. CHECK SHIFT SOLENOID VALVE A CIRCUIT

1. Turn ignition switch "OFF".
2. Disconnect the TCM connector.
3. Check resistance between TCM connector terminal 46 and ground.

Connector	Terminal	Condition	Resistance (Approx.)
E142	46 - Ground	Temperature: 20°C (68°F)	11 - 16 Ω

OK or NG

- OK >> GO TO 7.
NG >> GO TO 3.

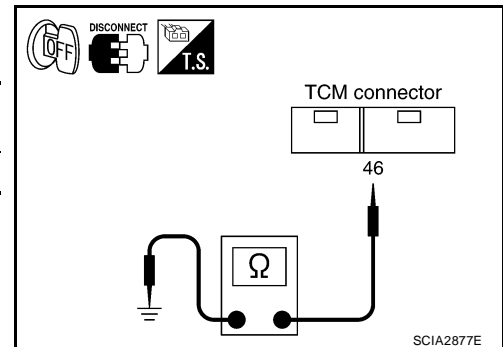

DTC P0750 SHIFT SOLENOID VALVE A


3. CHECK TERMINAL CORD ASSEMBLY WITH SHIFT SOLENOID VALVE A

1. Turn ignition switch "OFF".
2. Disconnect terminal cord assembly harness connector.
3. Check resistance between terminal 2 and ground.

Connector	Terminal	Condition	Resistance (Approx.)
F30	2 - Ground	Temperature: 20°C (68°F)	11 - 16 Ω

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 5.

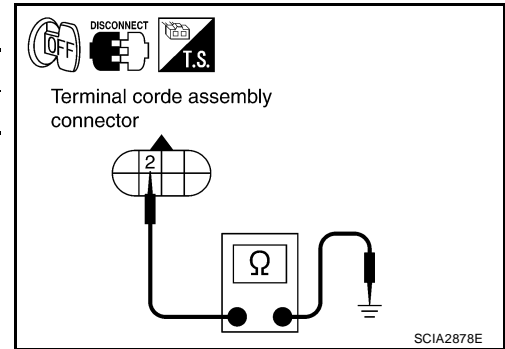

4. CHECK HARNESS BETWEEN TCM AND TERMINAL CORD ASSEMBLY

Check the following.

- Open or short-circuit in the harness between TCM and terminal cord assembly.

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.


5. CHECK SHIFT SOLENOID VALVE A

1. Remove side cover. Refer to [AT-237, "Side cover"](#).
2. Disconnect shift solenoid valve A harness connector.
3. Check resistance between terminal 1 and ground.

Connector	Terminal	Condition	Resistance (Approx.)
F67	1 - Ground	Temperature: 20°C (68°F)	11 - 16 Ω

OK or NG

- OK >> GO TO 6.
- NG >> Replace the control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#).

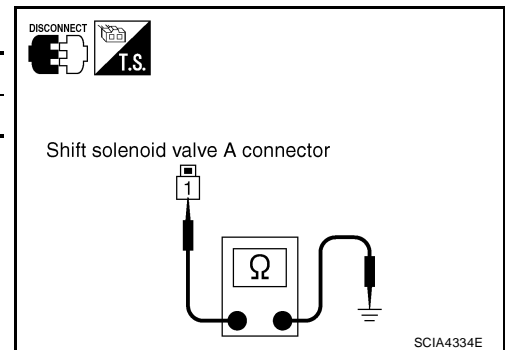

6. CHECK HARNESS BETWEEN TERMINAL CORD ASSEMBLY AND SHIFT SOLENOID VALVE A

Check the following.

- Open or short-circuit in the harness between terminal cord assembly and shift solenoid valve A.

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace transmission wire. Refer to [AT-237, "Transmission wire"](#).

7. CHECK DTC

Perform "DTC Confirmation Procedure". Refer to [AT-146, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 8.

DTC P0750 SHIFT SOLENOID VALVE A

8. CHECK TCM

1. Check TCM input/output signal. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> **INSPECTION END**

NG >> Repair or replace damaged parts.


Component Inspection SHIFT SOLENOID VALVE A

ECS00EA4

1. Remove side cover. Refer to [AT-237, "Side cover"](#) .
2. Disconnect shift solenoid valve A harness connector.
3. Check resistance between terminal 1 and ground.

Connector	Terminal	Condition	Resistance (Approx.)
F67	1 - Ground	Temperature: 20°C (68°F)	11 - 16 Ω

4. If NG, replace the control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#) .

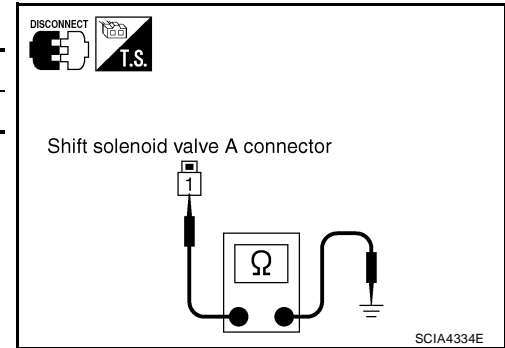

DTC P0755 SHIFT SOLENOID VALVE B

DTC P0755 SHIFT SOLENOID VALVE B

PDF:31940

Description

ECS00EA5

- Shift solenoid valves are installed directly in control valve body. The shift solenoid valves operates of ON and OFF by the control signal from TCM. Combinations of 5 shift solenoid valves, A, B, C, D and E, shifts gear positions.
- The shift solenoid valve B is a normally closed, ON-OFF type solenoid.

Gear position	D1 , L1	D2 , L2	D3 , L3	D4	D5	Reverse
Shift solenoid valve B	ON (Open)	OFF (Closed)	OFF (Closed)	OFF (Closed)	ON (Open)	OFF (Closed)

On Board Diagnosis Logic

ECS00EA6

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "SHIFT SOL B" with CONSULT-II or P0755 without CONSULT-II is detected under the following conditions.
 - When normal voltage is not applied to solenoid due to open, short, and so on.
 - When TCM detects as irregular by comparing target value with monitor value.

Possible Cause

ECS00EA7

- Harness or connectors
(The solenoid circuit is open or shorted.)
- Shift solenoid valve B

DTC Confirmation Procedure

ECS00EA8

CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start engine.
4. Drive vehicle and allow the following conditions.
SLCT LVR POSI: "D" position
GEAR: 1st ⇒ 2nd and 4th ⇒ 5th position
5. If DTC is detected, go to [AT-153, "Diagnostic Procedure"](#).

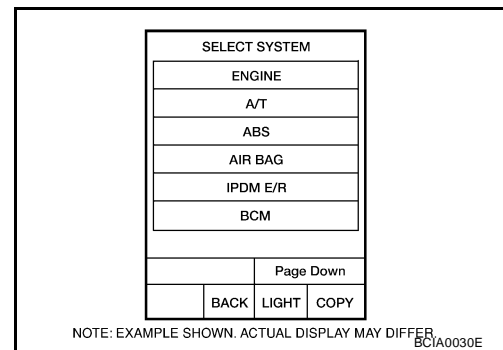

WITH GST



Follow the procedure "With CONSULT-II".

DTC P0755 SHIFT SOLENOID VALVE B

Wiring Diagram — AT — SSV/B

ECS00EA9

AT-SSV/B-01

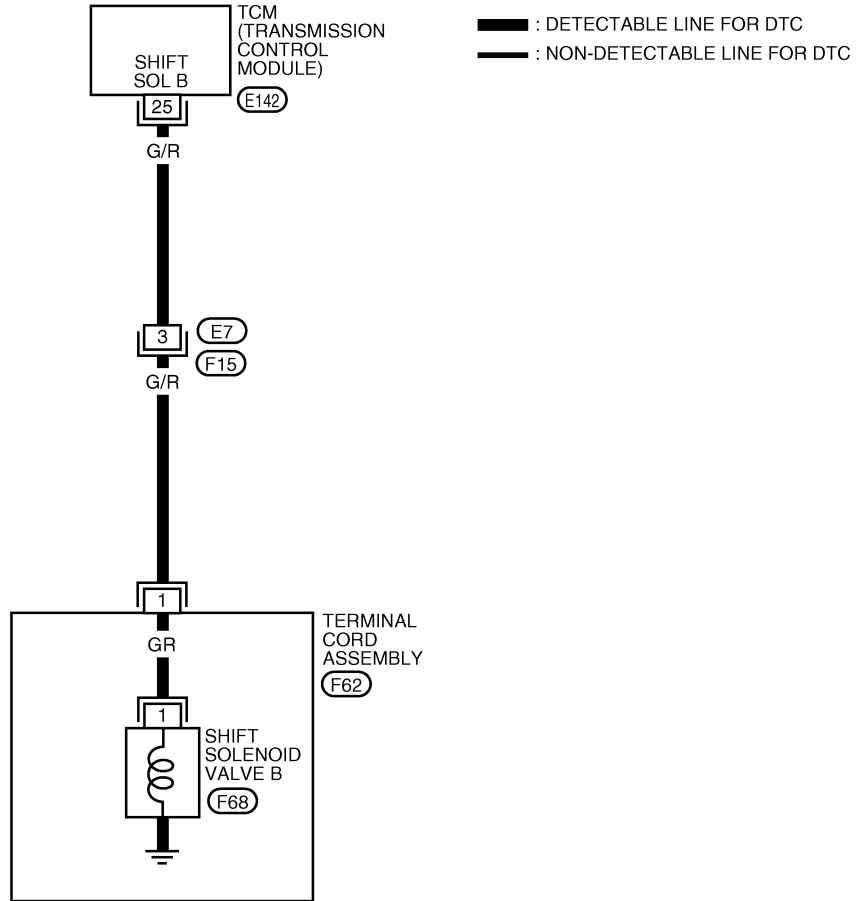

* : THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

BCWA0351E

DTC P0755 SHIFT SOLENOID VALVE B

TCM Input/Output Signal Reference Values. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#).

Diagnostic Procedure


ECS00EAA

1. CHECK SHIFT SOLENOID VALVE B SIGNAL

With CONSULT-II

1. Start engine.
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Drive vehicle and read out the value of "SFT SOL B OUT" and "SFT SOL B MON".


Monitor item	Condition	Indication
<ul style="list-style-type: none"> ● SFT SOL B OUT ● SFT SOL B MON 	When shift solenoid valve B operates. (When driving in 1st or 5th gear.)	ON
	When shift solenoid valve B does not operate.	OFF

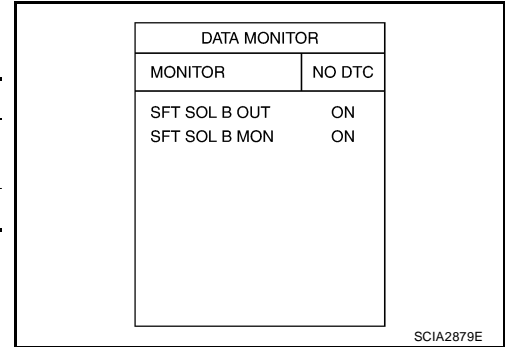

Without CONSULT-II

1. Drive vehicle.
2. Check voltage between TCM connector terminal and ground.

Connector	Terminal	Condition	Voltage (Approx.)
E142	25 - Ground	When shift solenoid valve B operates. (When driving in 1st or 5th gear.)	Battery voltage
		When shift solenoid valve B does not operate.	0V

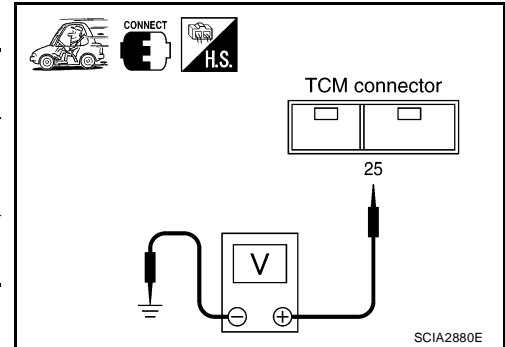

OK or NG

- OK >> GO TO 7.
NG >> GO TO 2.


2. CHECK SHIFT SOLENOID VALVE B CIRCUIT

1. Turn ignition switch "OFF".
2. Disconnect the TCM connector.
3. Check resistance between TCM connector terminal 25 and ground.

Connector	Terminal	Condition	Resistance (Approx.)
E142	25 - Ground	Temperature: 20°C (68°F)	11 - 16 Ω

OK or NG

- OK >> GO TO 7.
NG >> GO TO 3.

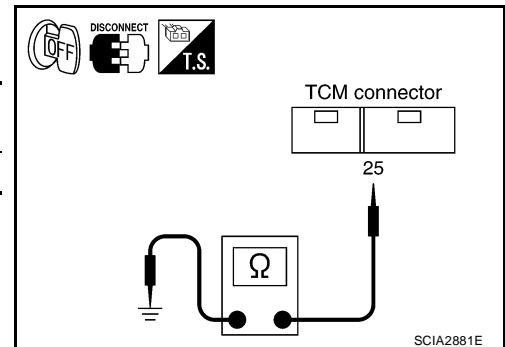

DTC P0755 SHIFT SOLENOID VALVE B


3. CHECK TERMINAL CORD ASSEMBLY WITH SHIFT SOLENOID VALVE B

1. Turn ignition switch "OFF".
2. Disconnect terminal cord assembly harness connector.
3. Check resistance between terminal 1 and ground.

Connector	Terminal	Condition	Resistance (Approx.)
F62	1 - Ground	Temperature: 20°C (68°F)	11 - 16 Ω

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 5.

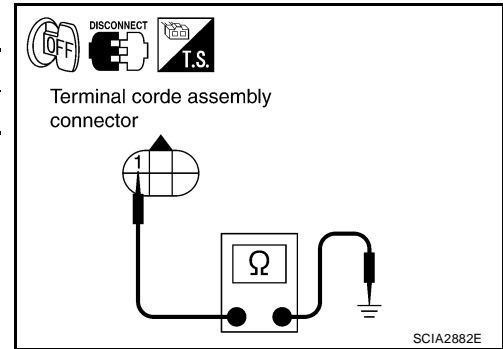

4. CHECK HARNESS BETWEEN TCM AND TERMINAL CORD ASSEMBLY

Check the following.

- Open or short-circuit in the harness between TCM and terminal cord assembly.

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.


5. CHECK SHIFT SOLENOID VALVE B

1. Remove side cover. Refer to [AT-237, "Side cover"](#).
2. Disconnect shift solenoid valve B harness connector.
3. Check resistance between terminal 1 and ground.

Connector	Terminal	Condition	Resistance (Approx.)
F68	1 - Ground	Temperature: 20°C (68°F)	11 - 16 Ω

OK or NG

- OK >> GO TO 6.
- NG >> Replace the control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#).

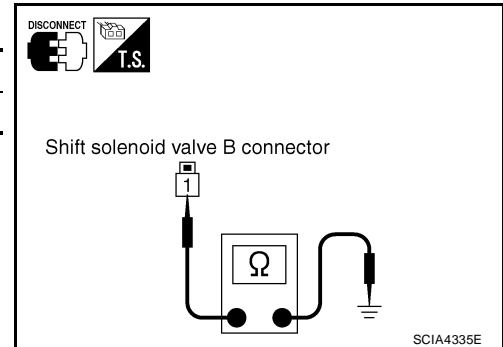

6. CHECK HARNESS BETWEEN TERMINAL CORD ASSEMBLY AND SHIFT SOLENOID VALVE B

Check the following.

- Open or short-circuit in the harness between terminal cord assembly and shift solenoid valve B.

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace transmission wire. Refer to [AT-237, "Transmission wire"](#).

7. CHECK DTC

Perform "DTC Confirmation Procedure". Refer to [AT-151, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 8.

DTC P0755 SHIFT SOLENOID VALVE B

8. CHECK TCM

1. Check TCM input/output signal. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> **INSPECTION END**

NG >> Repair or replace damaged parts.


Component Inspection SHIFT SOLENOID VALVE B

ECS00EAB

1. Remove side cover. Refer to [AT-237, "Side cover"](#) .
2. Disconnect shift solenoid valve B harness connector.
3. Check resistance between terminal 1 and ground.

Connector	Terminal	Condition	Resistance (Approx.)
F68	1 - Ground	Temperature: 20°C (68°F)	11 - 16 Ω

4. If NG, replace the control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#) .

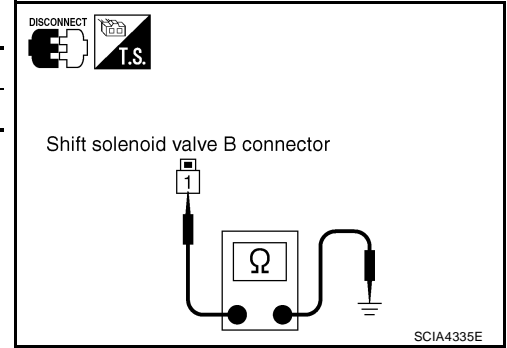

DTC P0760 SHIFT SOLENOID VALVE C

DTC P0760 SHIFT SOLENOID VALVE C

PF3:31940

Description

ECS00EAC

- Shift solenoid valves are installed directly in control valve body. The shift solenoid valves operates of ON and OFF by the control signal from TCM. Combinations of 5 shift solenoid valves, A, B, C, D and E, shifts gear positions.
- The shift solenoid valve C is a normally closed, ON-OFF type solenoid.

Gear position	D1 , L1	D2 , L2	D3 , L3	D4	D5	Reverse
Shift solenoid valve C	ON (Open)	ON (Open)	ON (Open)	OFF (Closed)	OFF (Closed)	ON (Open)

On Board Diagnosis Logic

ECS00EAD

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "SHIFT SOL C" with CONSULT-II or P0760 without CONSULT-II is detected under the following conditions.
 - When normal voltage is not applied to solenoid due to open, short, and so on.
 - When TCM detects as irregular by comparing target value with monitor value.

Possible Cause

ECS00EAE

- Harness or connectors
(The solenoid circuit is open or shorted.)
- Shift solenoid valve C

DTC Confirmation Procedure

ECS00EAF

CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

④ WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start engine.
4. Drive vehicle and allow the following conditions.
SLCT LVR POSI: "D" position
GEAR: 3rd ⇒ 4th position
5. If DTC is detected, go to [AT-158, "Diagnostic Procedure"](#).

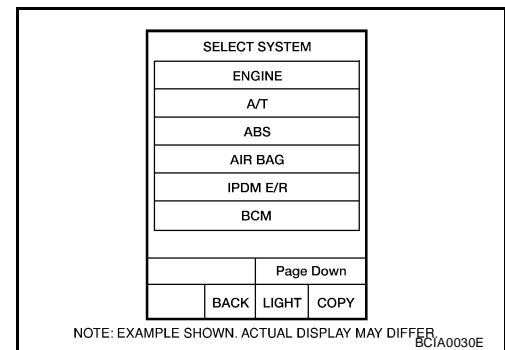

④ WITH GST

Follow the procedure "With CONSULT-II".



DTC P0760 SHIFT SOLENOID VALVE C

Wiring Diagram — AT — SSV/C

ECS00EAG

AT-SSV/C-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

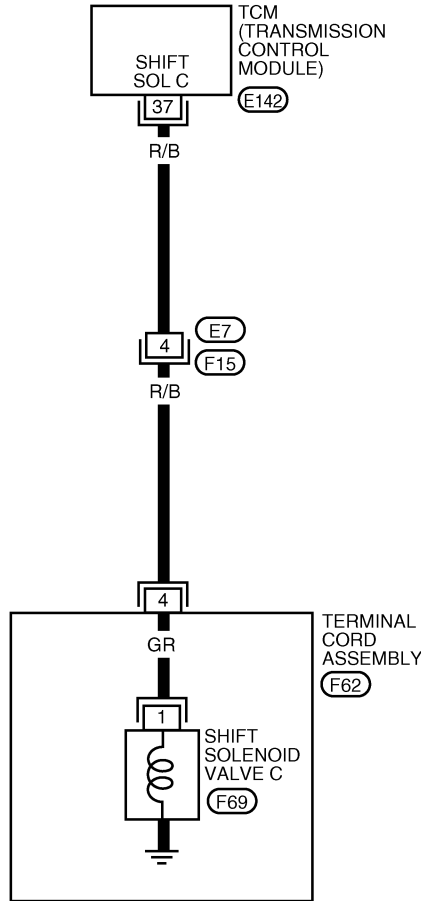

*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

BCWA0352E

DTC P0760 SHIFT SOLENOID VALVE C

TCM Input/Output Signal Reference Values. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#).

Diagnostic Procedure


ECS00EAH

1. CHECK SHIFT SOLENOID VALVE C SIGNAL

With CONSULT-II

1. Start engine.
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Drive vehicle and read out the value of "SFT SOL C OUT" and "SFT SOL C MON".


Monitor item	Condition	Indication
<ul style="list-style-type: none"> ● SFT SOL C OUT ● SFT SOL C MON 	When shift solenoid valve C operates. (When driving in 1st, 2nd, 3rd or reverse gear.)	ON
	When shift solenoid valve C does not operate.	OFF

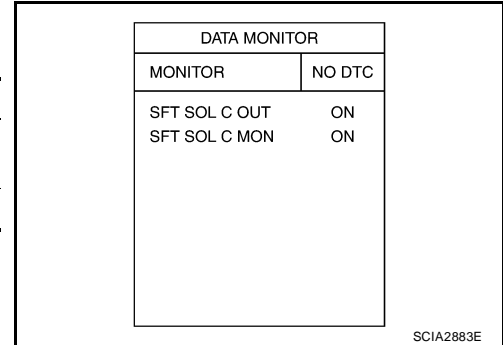

Without CONSULT-II

1. Drive vehicle.
2. Check voltage between TCM connector terminal and ground.

Connector	Terminal	Condition	Voltage (Approx.)
E142	37 - Ground	When shift solenoid valve C operates. (When driving in 1st, 2nd, 3rd or reverse gear.)	Battery voltage
		When shift solenoid valve C does not operate.	0V

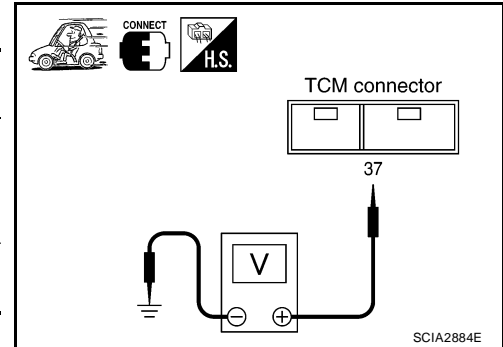

OK or NG

- OK >> GO TO 7.
NG >> GO TO 2.


2. CHECK SHIFT SOLENOID VALVE C CIRCUIT

1. Turn ignition switch "OFF".
2. Disconnect the TCM connector.
3. Check resistance between TCM connector terminal 37 and ground.

Connector	Terminal	Condition	Resistance (Approx.)
E142	37 - Ground	Temperature: 20°C (68°F)	11 - 16 Ω

OK or NG

- OK >> GO TO 7.
NG >> GO TO 3.

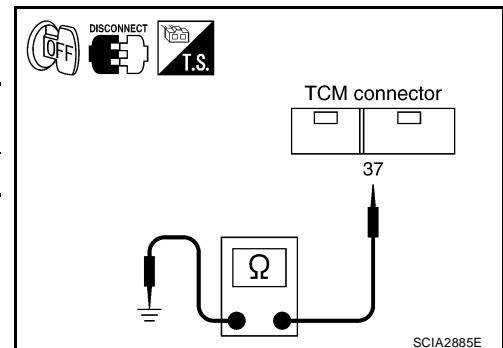

DTC P0760 SHIFT SOLENOID VALVE C


3. CHECK TERMINAL CORD ASSEMBLY WITH SHIFT SOLENOID VALVE C

1. Turn ignition switch "OFF".
2. Disconnect terminal cord assembly harness connector.
3. Check resistance between terminal 4 and ground.

Connector	Terminal	Condition	Resistance (Approx.)
F62	4 - Ground	Temperature: 20°C (68°F)	11 - 16 Ω

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 5.

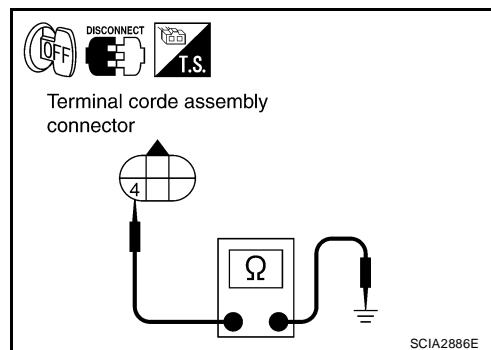

4. CHECK HARNESS BETWEEN TCM AND TERMINAL CORD ASSEMBLY

Check the following.

- Open or short-circuit in the harness between TCM and terminal cord assembly.

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.


5. CHECK SHIFT SOLENOID VALVE C

1. Remove side cover. Refer to [AT-237, "Side cover"](#).
2. Disconnect shift solenoid valve C harness connector.
3. Check resistance between terminal 1 and ground.

Connector	Terminal	Condition	Resistance (Approx.)
F69	1 - Ground	Temperature: 20°C (68°F)	11 - 16 Ω

OK or NG

- OK >> GO TO 6.
- NG >> Replace the control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#).

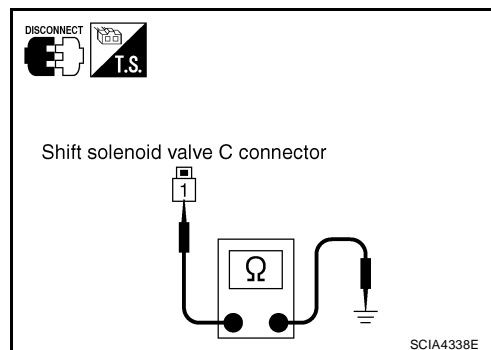

6. CHECK HARNESS BETWEEN TERMINAL CORD ASSEMBLY AND SHIFT SOLENOID VALVE C

Check the following.

- Open or short-circuit in the harness between terminal cord assembly and shift solenoid valve C.

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace transmission wire.

7. CHECK DTC

Perform "DTC Confirmation Procedure". Refer to [AT-156, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 8.

DTC P0760 SHIFT SOLENOID VALVE C

8. CHECK TCM

1. Check TCM input/output signal. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> **INSPECTION END**

NG >> Repair or replace damaged parts.


Component Inspection SHIFT SOLENOID VALVE C

ECS00EA1

1. Remove side cover. Refer to [AT-237, "Side cover"](#) .
2. Disconnect shift solenoid valve C harness connector.
3. Check resistance between terminal 1 and ground.

Connector	Terminal	Condition	Resistance (Approx.)
F69	1 - Ground	Temperature: 20°C (68°F)	11 - 16 Ω

4. If NG, replace the control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#) .

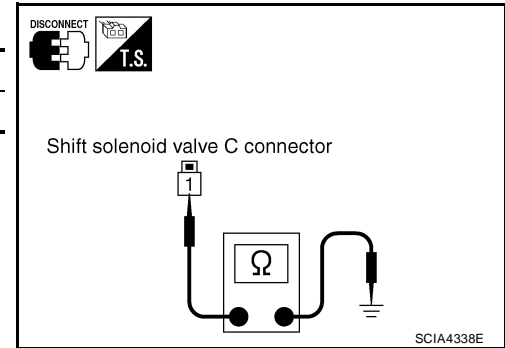

DTC P0762 SHIFT SOLENOID VALVE C STUCK ON

DTC P0762 SHIFT SOLENOID VALVE C STUCK ON

PF3:31940

Description

ECS00EAJ

- This malfunction will not be detected while the O/D OFF indicator lamp is indicating another self-diagnosis malfunction.
- This is not caused by electrical malfunction (circuits open or shorted) but by mechanical malfunction such as control valve sticking, improper solenoid valve operation, etc.
- Shift solenoid valves are installed directly in control valve body. The shift solenoid valves operates of ON and OFF by the control signal from TCM. Combinations of 5 shift solenoid valves, A, B, C, D and E, shifts gear positions.
- The shift solenoid valve C is a normally closed, ON-OFF type solenoid.

Gear position	D1 , L1	D2 , L2	D 3 , L3	D4	D5	Reverse
Shift solenoid valve C	ON (Open)	ON (Open)	ON (Open)	OFF (Closed)	OFF (Closed)	ON (Open)

On Board Diagnosis Logic

ECS00EAK

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code “SFT SOL C STUCK ON” with CONSULT-II or P0762 without CONSULT-II is detected when condition of shift solenoid valve C is different from monitor value, and relation between gear position and actual gear ratio is irregular.

Possible Cause

ECS00EAL

- Shift solenoid valve C
(On stick.)
- Hydraulic control circuit

DTC Confirmation Procedure

ECS00EAM

CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.


NOTE:

If “DTC Confirmation Procedure” has been previously performed, always turn ignition switch “OFF” and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch “ON”. (Do not start engine.)
2. Select “DATA MONITOR” mode for “TRANSMISSION” with CONSULT-II.
3. Start engine.
4. Drive vehicle and allow the following conditions.
SLCT LVR POSI: “D” position
GEAR: 3rd ⇒ 4th position
ACCELE ANGLE: More than 10 %
5. If DTC is detected, go to [AT-163, "Diagnostic Procedure"](#) .

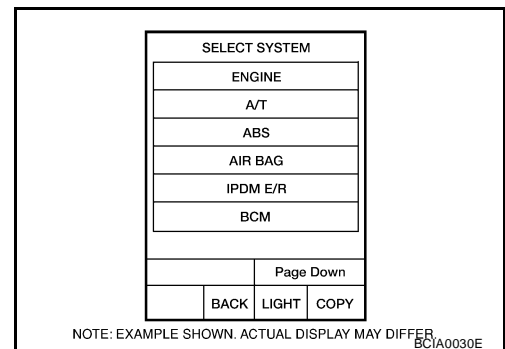

WITH GST

Follow the procedure “With CONSULT-II”.



DTC P0762 SHIFT SOLENOID VALVE C STUCK ON

Wiring Diagram — AT — SSV/CS

ECS00EAN

AT-SSV/CS-01

— : DETECTABLE LINE FOR DTC
— : NON-DETECTABLE LINE FOR DTC

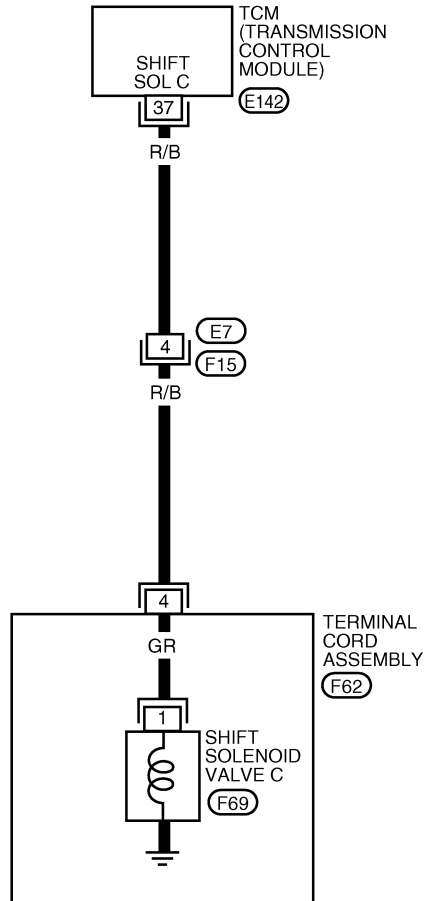

* : THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

BCWA0353E

DTC P0762 SHIFT SOLENOID VALVE C STUCK ON

TCM Input/Output Signal Reference Values. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#).

Diagnostic Procedure


ECS00EAO

1. CHECK SHIFT SOLENOID VALVE C SIGNAL

With CONSULT-II

1. Start engine.
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Drive vehicle and read out the value of "SFT SOL C OUT" and "SFT SOL C MON".


Monitor item	Condition	Indication
<ul style="list-style-type: none"> ● SFT SOL C OUT ● SFT SOL C MON 	When shift solenoid valve C operates. (When driving in 1st, 2nd, 3rd or reverse gear.)	ON
	When shift solenoid valve C does not operate.	OFF

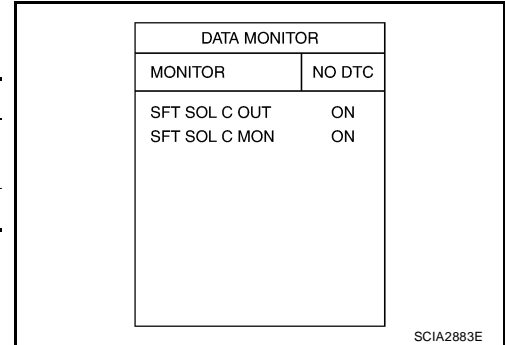

Without CONSULT-II

1. Drive vehicle.
2. Check voltage between TCM connector terminal and ground.

Connector	Terminal	Condition	Voltage (Approx.)
E142	37 - Ground	When shift solenoid valve C operates. (When driving in 1st, 2nd, 3rd or reverse gear.)	Battery voltage
		When shift solenoid valve C does not operate.	0V

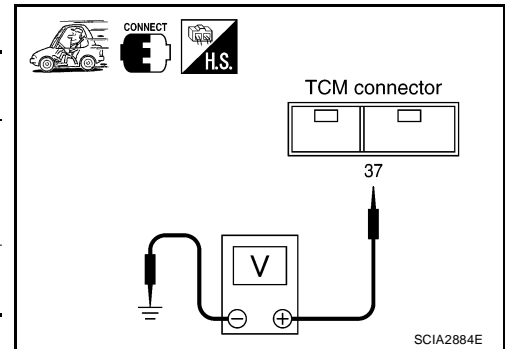

OK or NG

- OK >> GO TO 7.
NG >> GO TO 2.


2. CHECK SHIFT SOLENOID VALVE C CIRCUIT

1. Turn ignition switch "OFF".
2. Disconnect the TCM connector.
3. Check resistance between TCM connector terminal 37 and ground.

Connector	Terminal	Condition	Resistance (Approx.)
E142	37 - Ground	Temperature: 20°C (68°F)	11 - 16 Ω

OK or NG

- OK >> GO TO 7.
NG >> GO TO 3.

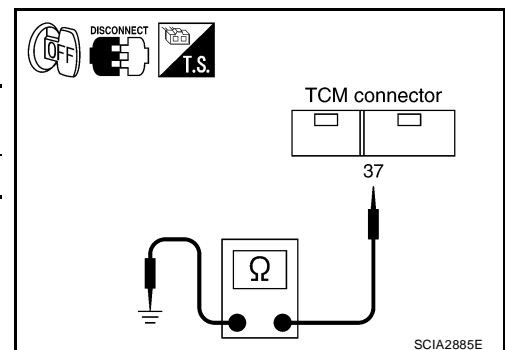

DTC P0762 SHIFT SOLENOID VALVE C STUCK ON


3. CHECK TERMINAL CORD ASSEMBLY WITH SHIFT SOLENOID VALVE C

1. Turn ignition switch "OFF".
2. Disconnect terminal cord assembly harness connector.
3. Check resistance between terminal 4 and ground.

Connector	Terminal	Condition	Resistance (Approx.)
F62	4 - Ground	Temperature: 20°C (68°F)	11 - 16 Ω

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 5.

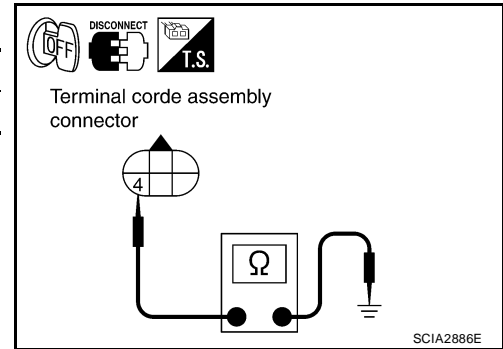

4. CHECK HARNESS BETWEEN TCM AND TERMINAL CORD ASSEMBLY

Check the following.

- Open or short-circuit in the harness between TCM and terminal cord assembly.

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.


5. CHECK SHIFT SOLENOID VALVE C

1. Remove side cover. Refer to [AT-237, "Side cover"](#).
2. Disconnect shift solenoid valve C harness connector.
3. Check resistance between terminal 1 and ground.

Connector	Terminal	Condition	Resistance (Approx.)
F69	1 - Ground	Temperature: 20°C (68°F)	11 - 16 Ω

OK or NG

- OK >> GO TO 6.
- NG >> Replace the control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#).

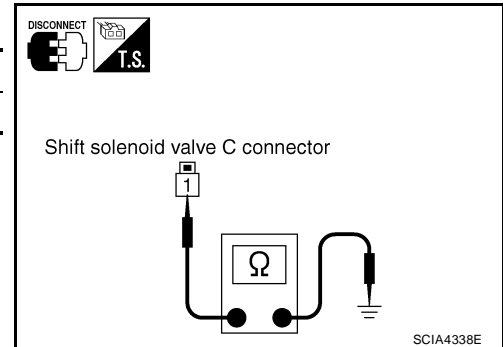

6. CHECK HARNESS BETWEEN TERMINAL CORD ASSEMBLY AND SHIFT SOLENOID VALVE C

Check the following.

- Open or short-circuit in the harness between terminal cord assembly and shift solenoid valve C.

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace transmission wire.

7. CHECK DTC

Perform "DTC Confirmation Procedure". Refer to [AT-161, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 8.

DTC P0762 SHIFT SOLENOID VALVE C STUCK ON

8. CHECK TCM

1. Check TCM input/output signal. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#).
2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> **INSPECTION END**

NG >> Repair or replace damaged parts.


Component Inspection SHIFT SOLENOID VALVE C

ECS00EAP

1. Remove side cover. Refer to [AT-237, "Side cover"](#).
2. Disconnect shift solenoid valve C harness connector.
3. Check resistance between terminal 1 and ground.

Connector	Terminal	Condition	Resistance (Approx.)
F69	1 - Ground	Temperature: 20°C (68°F)	11 - 16 Ω

4. If NG, replace the control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#).

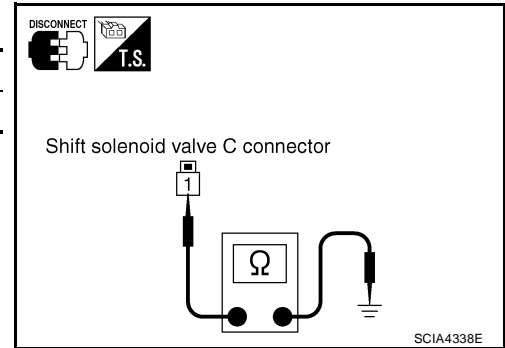

A
B
AT
D
E
F
G
H
I
J
K
L
M

DTC P0765 SHIFT SOLENOID VALVE D

DTC P0765 SHIFT SOLENOID VALVE D

PFP:31940

Description

ECS00EAO

- Shift solenoid valves are installed directly in control valve body. The shift solenoid valves operates of ON and OFF by the control signal from TCM. Combinations of 5 shift solenoid valves, A, B, C, D and E, shifts gear positions.
- The shift solenoid valve D is a normally open, ON-OFF type solenoid.

Gear position	D1 , L1	D2 , L2	D3 , L3	D4	D5	Reverse
Shift solenoid valve D	OFF (Open)	OFF (Open)	ON (Closed)	ON (Closed)	ON (Closed)	OFF (Open)

On Board Diagnosis Logic

ECS00EAR

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code “SHIFT SOL D” with CONSULT-II or P0765 without CONSULT-II is detected under the following conditions.
 - When normal voltage is not applied to solenoid due to open, short, and so on.
 - When TCM detects as irregular by comparing target value with monitor value.

Possible Cause

ECS00EAS

- Harness or connectors
(The solenoid circuit is open or shorted.)
- Shift solenoid valve D

DTC Confirmation Procedure

ECS00EAT

CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.


NOTE:

If “DTC Confirmation Procedure” has been previously performed, always turn ignition switch “OFF” and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

④ WITH CONSULT-II

1. Turn ignition switch “ON”. (Do not start engine.)
2. Select “DATA MONITOR” mode for “TRANSMISSION” with CONSULT-II.
3. Start engine.
4. Drive vehicle and allow the following conditions.
SLCT LVR POSI: “D” position
GEAR: 2nd ⇒ 3rd position
5. If DTC is detected, go to [AT-168, "Diagnostic Procedure"](#).

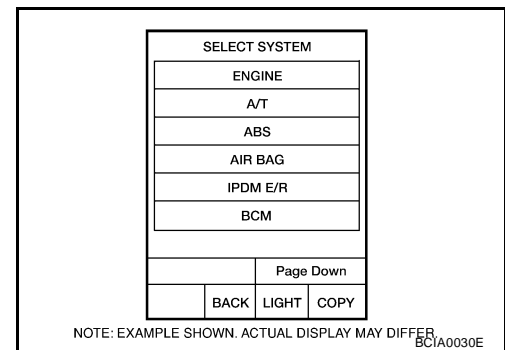

④ WITH GST

Follow the procedure “With CONSULT-II”.



DTC P0765 SHIFT SOLENOID VALVE D

Wiring Diagram — AT — SSV/D

ECS00EAU

AT-SSV/D-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

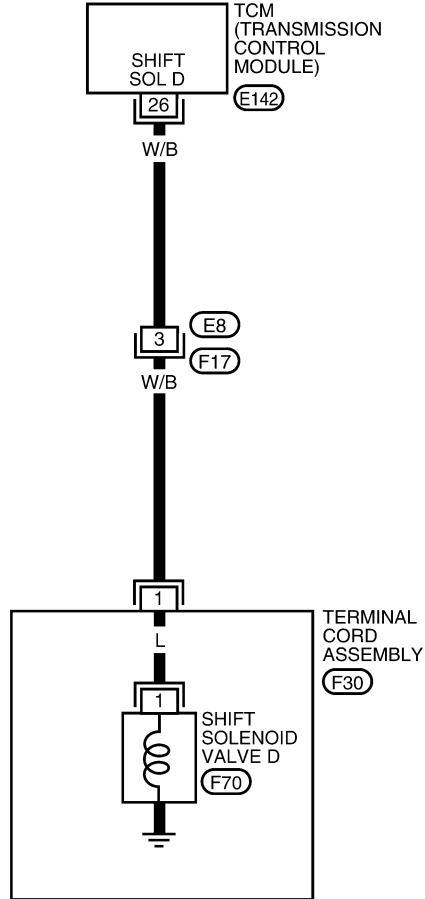

*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

BCWA0600E

DTC P0765 SHIFT SOLENOID VALVE D

TCM Input/Output Signal Reference Values. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#).

Diagnostic Procedure


ECS00EAV

1. CHECK SHIFT SOLENOID VALVE D SIGNAL

With CONSULT-II

1. Start engine.
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Drive vehicle and read out the value of "SFT SOL D OUT" and "SFT SOL D MON".


Monitor item	Condition	Indication
<ul style="list-style-type: none"> ● SFT SOL D OUT ● SFT SOL D MON 	When shift solenoid valve D operates. (When driving in 3rd, 4th or 5th gear.)	ON
	When shift solenoid valve D does not operate.	OFF

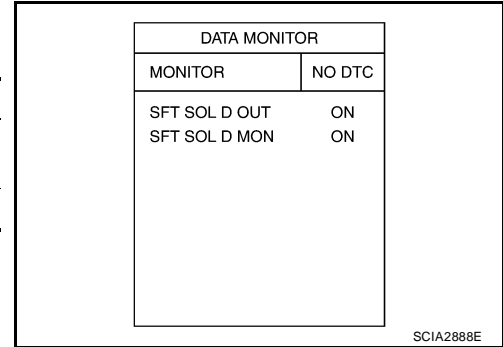

Without CONSULT-II

1. Drive vehicle.
2. Check voltage between TCM connector terminal and ground.

Connector	Terminal	Condition	Voltage (Approx.)
E142	26 - Ground	When shift solenoid valve D operates. (When driving in 3rd, 4th or 5th gear.)	Battery voltage
		When shift solenoid valve D does not operate.	0V

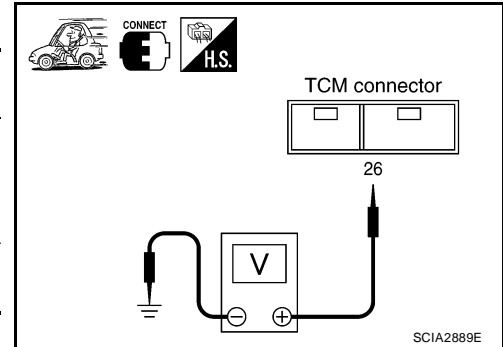

OK or NG

- OK >> GO TO 7.
NG >> GO TO 2.


2. CHECK SHIFT SOLENOID VALVE D CIRCUIT

1. Turn ignition switch "OFF".
2. Disconnect the TCM connector.
3. Check resistance between TCM connector terminal 26 and ground.

Connector	Terminal	Condition	Resistance (Approx.)
E142	26 - Ground	Temperature: 20°C (68°F)	11 - 16 Ω

OK or NG

- OK >> GO TO 7.
NG >> GO TO 3.

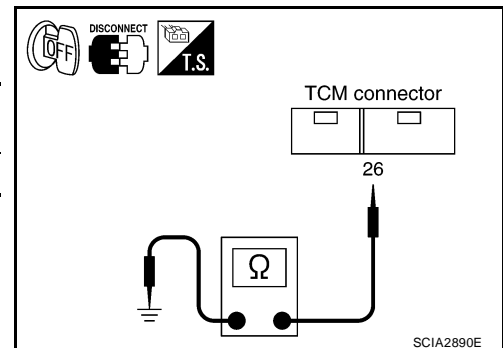

DTC P0765 SHIFT SOLENOID VALVE D


3. CHECK TERMINAL CORD ASSEMBLY WITH SHIFT SOLENOID VALVE D

1. Turn ignition switch "OFF".
2. Disconnect terminal cord assembly harness connector.
3. Check resistance between terminal 1 and ground.

Connector	Terminal	Condition	Resistance (Approx.)
F30	1 - Ground	Temperature: 20°C (68°F)	11 - 16 Ω

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 5.

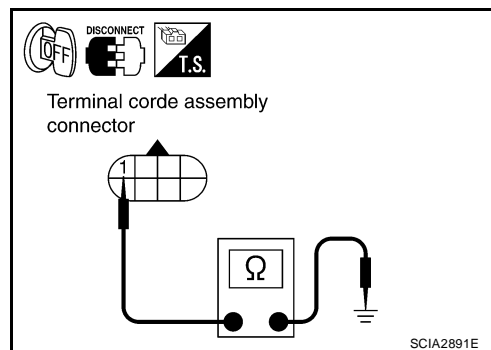

4. CHECK HARNESS BETWEEN TCM AND TERMINAL CORD ASSEMBLY

Check the following.

- Open or short-circuit in the harness between TCM and terminal cord assembly.

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.


5. CHECK SHIFT SOLENOID VALVE D

1. Remove side cover. Refer to [AT-237, "Side cover"](#).
2. Disconnect shift solenoid valve D harness connector.
3. Check resistance between terminal 1 and ground.

Connector	Terminal	Condition	Resistance (Approx.)
F70	1 - Ground	Temperature: 20°C (68°F)	11 - 16 Ω

OK or NG

- OK >> GO TO 6.
- NG >> Replace the control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#).

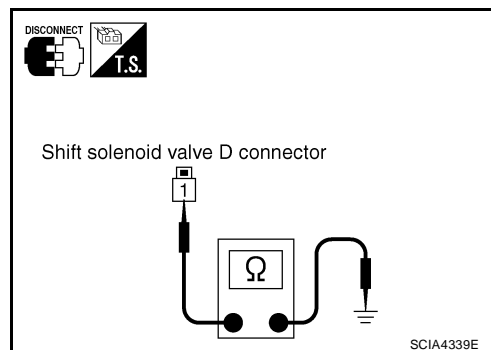

6. CHECK HARNESS BETWEEN TERMINAL CORD ASSEMBLY AND SHIFT SOLENOID VALVE D

Check the following.

- Open or short-circuit in the harness between terminal cord assembly and shift solenoid valve D.

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace transmission wire. Refer to [AT-237, "Transmission wire"](#).

7. CHECK DTC

Perform "DTC Confirmation Procedure". Refer to [AT-166, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 8.

DTC P0765 SHIFT SOLENOID VALVE D

8. CHECK TCM

1. Check TCM input/output signal. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> **INSPECTION END**

NG >> Repair or replace damaged parts.


Component Inspection SHIFT SOLENOID VALVE D

ECS00EAW

1. Remove side cover. Refer to [AT-237, "Side cover"](#) .
2. Disconnect shift solenoid valve D harness connector.
3. Check resistance between terminal 1 and ground.

Connector	Terminal	Condition	Resistance (Approx.)
F70	1 - Ground	Temperature: 20°C (68°F)	11 - 16 Ω

4. If NG, replace the control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#) .

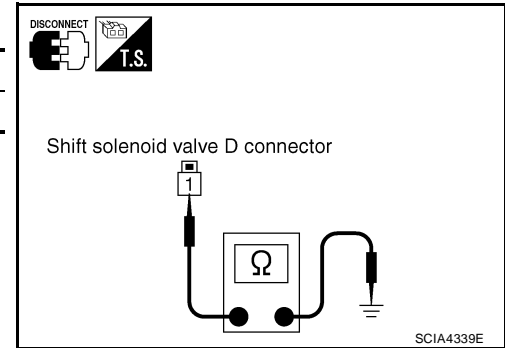

DTC P0770 SHIFT SOLENOID VALVE E

DTC P0770 SHIFT SOLENOID VALVE E

PDF:31940

Description

ECS00EAX

- Shift solenoid valves are installed directly in control valve body. The shift solenoid valves operates of ON and OFF by the control signal from TCM. Combinations of 5 shift solenoid valves, A, B, C, D and E, shifts gear positions.
- The shift solenoid valve E is a normally closed, ON-OFF type solenoid.

Gear position	D 1 , L1	D2 , L2	D3 , L3	D4	D5	Reverse
Shift solenoid valve E	OFF (Closed)	OFF (Closed)	OFF (Closed)	OFF (Closed)	OFF (Closed)	ON (Open)

NOTE:

The condition of shift solenoid valve E is ON (Open) with shifting D2 ↔ D3 (L2 ↔ L3) and D3 ↔ D4.

On Board Diagnosis Logic

ECS00EAY

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "SHIFT SOL E" with CONSULT-II or P0770 without CONSULT-II is detected under the following conditions.
 - When normal voltage is not applied to solenoid due to open, short, and so on.
 - When TCM detects as irregular by comparing target value with monitor value.

Possible Cause

ECS00EAZ

- Harness or connectors
(The solenoid circuit is open or shorted.)
- Shift solenoid valve E

DTC Confirmation Procedure

ECS00EB0

CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

- Turn ignition switch "ON". (Do not start engine.)
- Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
- Start engine.
- Move selector lever between "N" and "R".
SLCT LVR POSI: "N" ↔ "R" position
- If DTC is detected, go to [AT-173, "Diagnostic Procedure"](#).

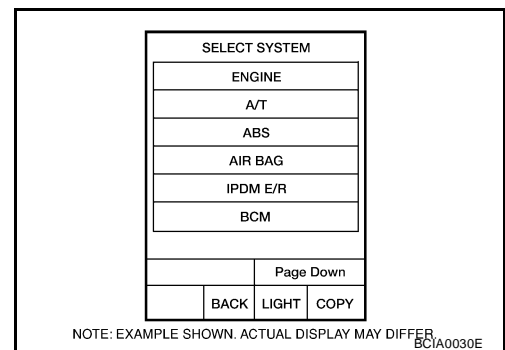

WITH GST

Follow the procedure "With CONSULT-II".



DTC P0770 SHIFT SOLENOID VALVE E

Wiring Diagram — AT — SSV/E

ECS00EB1

AT-SSV/E-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

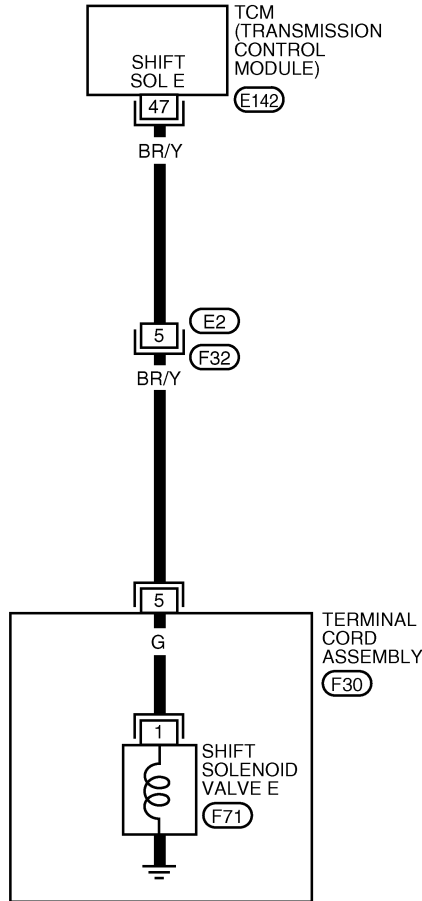

*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

BCWA0355E

DTC P0770 SHIFT SOLENOID VALVE E

TCM Input/Output Signal Reference Values. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#).

Diagnostic Procedure


ECS00EB2

1. CHECK SHIFT SOLENOID VALVE E SIGNAL

With CONSULT-II

1. Start engine.
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Drive vehicle and read out the value of "SFT SOL E OUT" and "SFT SOL E MON".


Monitor item	Condition	Indication
<ul style="list-style-type: none"> ● SFT SOL E OUT ● SFT SOL E MON 	When shift solenoid valve E operates. (When driving in reverse gear.)	ON
	When shift solenoid valve E does not operate.	OFF

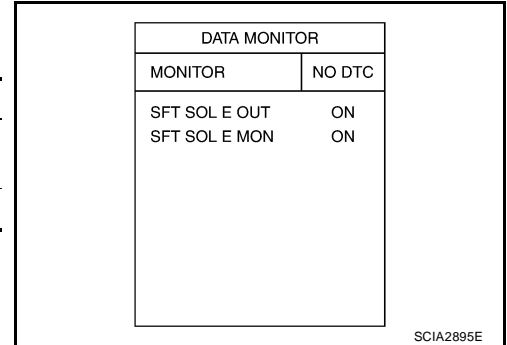

Without CONSULT-II

1. Drive vehicle.
2. Check voltage between TCM connector terminal and ground.

Connector	Terminal	Condition	Voltage (Approx.)
E142	47 - Ground	When shift solenoid valve E operates. (When driving in reverse gear.)	Battery voltage
		When shift solenoid valve E does not operate.	0V

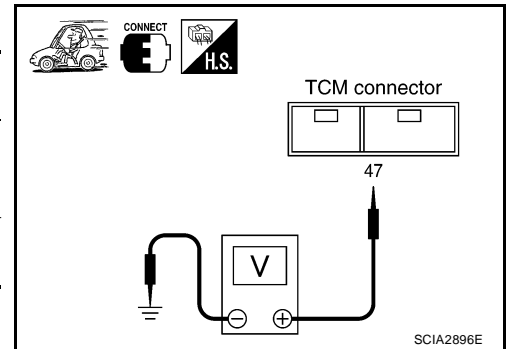


OK or NG

- OK >> GO TO 7.
NG >> GO TO 2.

2. CHECK SHIFT SOLENOID VALVE E CIRCUIT

1. Turn ignition switch "OFF".
2. Disconnect the TCM connector.
3. Check resistance between TCM connector terminal 47 and ground.

Connector	Terminal	Condition	Resistance (Approx.)
E142	47 - Ground	Temperature: 20°C (68°F)	11 - 16 Ω

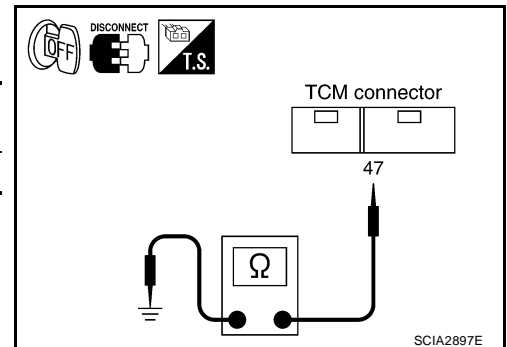

OK or NG

- OK >> GO TO 7.
NG >> GO TO 3.

DTC P0770 SHIFT SOLENOID VALVE E


3. CHECK TERMINAL CORD ASSEMBLY WITH SHIFT SOLENOID VALVE E

1. Turn ignition switch "OFF".
2. Disconnect terminal cord assembly harness connector.
3. Check resistance between terminal 5 and ground.

Connector	Terminal	Condition	Resistance (Approx.)
F30	5 - Ground	Temperature: 20°C (68°F)	11 - 16 Ω

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 5.

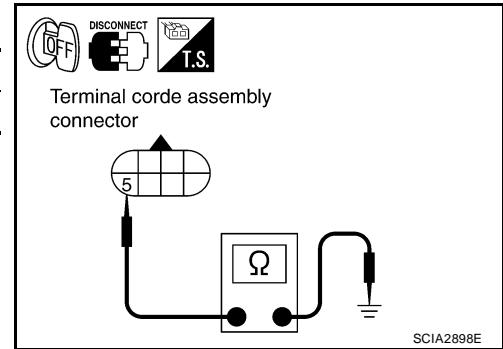

4. CHECK HARNESS BETWEEN TCM AND TERMINAL CORD ASSEMBLY

Check the following.

- Open or short-circuit in the harness between TCM and terminal cord assembly.

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.


5. CHECK SHIFT SOLENOID VALVE E

1. Remove side cover. Refer to [AT-237, "Side cover"](#).
2. Disconnect shift solenoid valve E harness connector.
3. Check resistance between terminal 1 and ground.

Connector	Terminal	Condition	Resistance (Approx.)
F71	1 - Ground	Temperature: 20°C (68°F)	11 - 16 Ω

OK or NG

- OK >> GO TO 6.
- NG >> Replace the control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#).

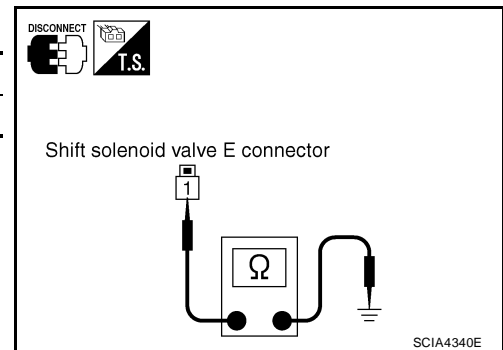

6. CHECK HARNESS BETWEEN TERMINAL CORD ASSEMBLY AND SHIFT SOLENOID VALVE E

Check the following.

- Open or short-circuit in the harness between terminal cord assembly and shift solenoid valve E.

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace transmission wire. Refer to [AT-237, "Transmission wire"](#).

7. CHECK DTC

Perform "DTC Confirmation Procedure". Refer to [AT-171, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 8.

DTC P0770 SHIFT SOLENOID VALVE E

8. CHECK TCM

1. Check TCM input/output signal. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> **INSPECTION END**

NG >> Repair or replace damaged parts.


Component Inspection SHIFT SOLENOID VALVE E

ECS00EB3

1. Remove side cover. Refer to [AT-237, "Side cover"](#) .
2. Disconnect shift solenoid valve E harness connector.
3. Check resistance between terminal 1 and ground.

Connector	Terminal	Condition	Resistance (Approx.)
F71	1 - Ground	Temperature: 20°C (68°F)	11 - 16 Ω

4. If NG, replace the control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#) .

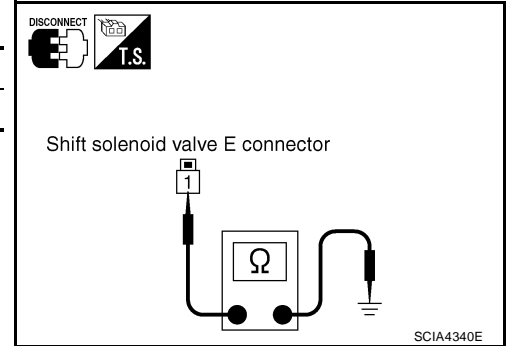

DTC P0775 PRESSURE CONTROL SOLENOID VALVE B (SHIFT PRESSURE)


DTC P0775 PRESSURE CONTROL SOLENOID VALVE B (SHIFT PRESSURE)

PFP:31940

Description

ECS00EB4

- The pressure control solenoid valve B is normally high, 3-port linear pressure control solenoid.
- The pressure control solenoid valve B controls linear shift pressure by control signal from TCM and controls 2nd coast brake directly under 2nd, 3rd, 4th and direct clutch directly under 5th and reverse.

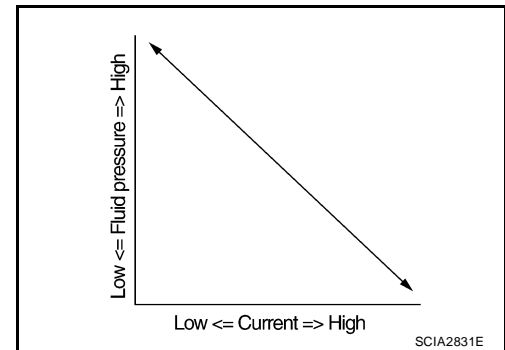

On Board Diagnosis Logic

ECS00EB5

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "PC SOL B(SFT/PRS)" with CONSULT-II or P0775 without CONSULT-II is detected under the following conditions.
 - When normal voltage is not applied to solenoid due to open, short, and so on.
 - When TCM detects as irregular by comparing target value with monitor value.

Possible Cause

ECS00EB6

- Harness or connectors
(The solenoid circuit is open or shorted.)
- Pressure control solenoid valve B

DTC Confirmation Procedure

ECS00EB7


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start engine.
4. Run engine for at least 13 consecutive seconds at idle speed.
5. If DTC is detected, go to [AT-178, "Diagnostic Procedure"](#).

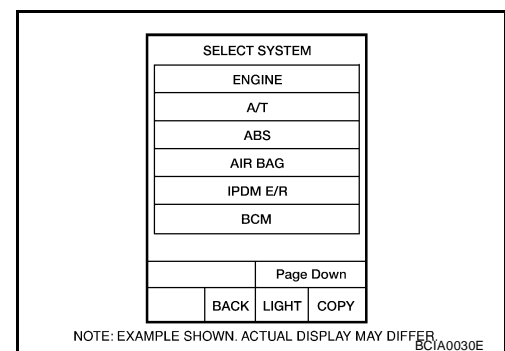

WITH GST



Follow the procedure "With CONSULT-II".



DTC P0775 PRESSURE CONTROL SOLENOID VALVE B (SHIFT PRESSURE)

Wiring Diagram — AT — PC/B

ECS00EB8

AT-PC/B-01

 : DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

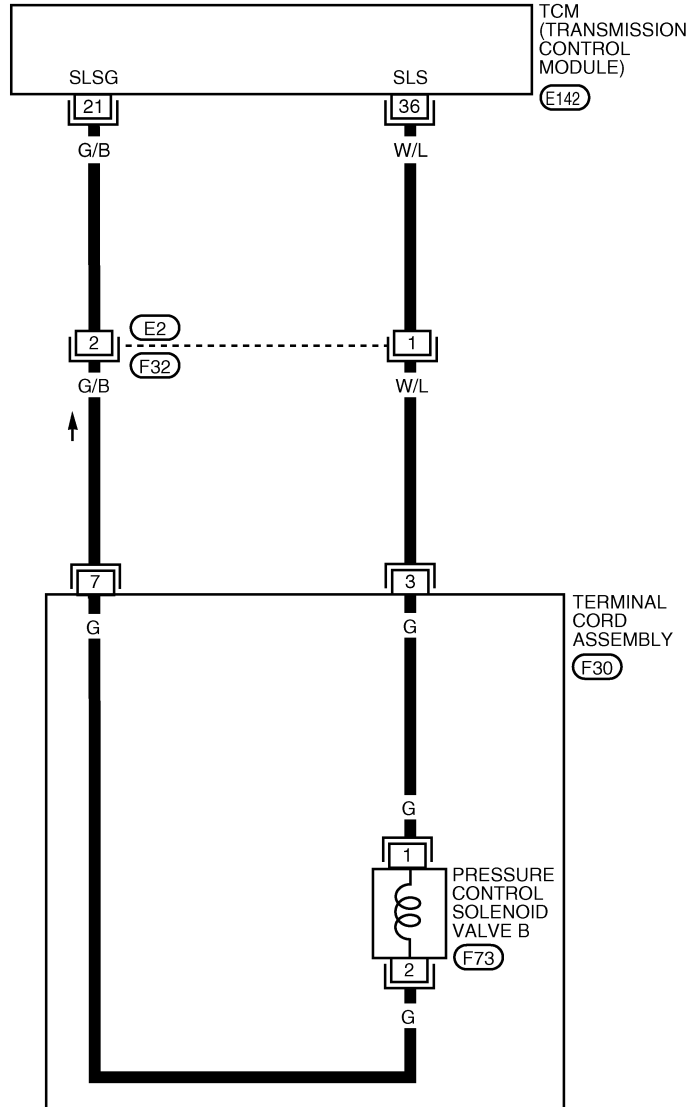

* : THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

BCWA0356E

DTC P0775 PRESSURE CONTROL SOLENOID VALVE B (SHIFT PRESSURE)

TCM Input/Output Signal Reference Values. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#).

Diagnostic Procedure

ECS00EB9

1. CHECK PRESSURE CONTROL SOLENOID VALVE B SIGNAL

With CONSULT-II

1. After warming up the engine and transaxle, turn ignition switch "OFF".
2. Turn ignition switch "ON". (Do not start engine.)
3. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
4. Read out the value of "PC SOL B OUT" and "PC SOL B MON".

Monitor item	Condition	Display value (Approx.)
● PC SOL B OUT	Selector lever: Manual shift gate position	1.00 A
● PC SOL B MON	Other than the above.	0.30 A


DATA MONITOR	
MONITOR	NO DTC
PC SOL A OUT	xxx A
PC SOL A MON	xxx A
PC SOL B OUT	xxx A
PC SOL B MON	xxx A
PC SOL C OUT	xxx A
PC SOL C MON	xxx A

SCIA2907E

Without CONSULT-II

1. Start the engine.
2. Check pulse between TCM connector terminals 21 and 36.

Connector	Terminal	Condition	Data (Approx.)
E142	36 - 21 (Ground)	When engine is running with idle speed and setting selector lever to "P" position.	300 Hz

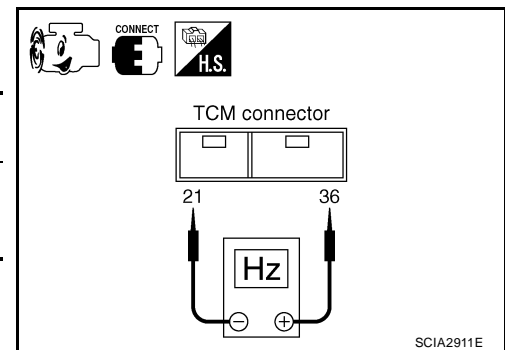

OK or NG

- OK >> GO TO 7.
NG >> GO TO 2.


2. CHECK PRESSURE CONTROL SOLENOID VALVE B CIRCUIT

1. Turn ignition switch "OFF".
2. Disconnect the TCM connector.
3. Check resistance between TCM connector terminals 21 and 36.

Connector	Terminal	Condition	Resistance (Approx.)
E142	36 - 21 (Ground)	Temperature: 20°C (68°F)	5.0 - 5.6 Ω

OK or NG

- OK >> GO TO 7.
NG >> GO TO 3.

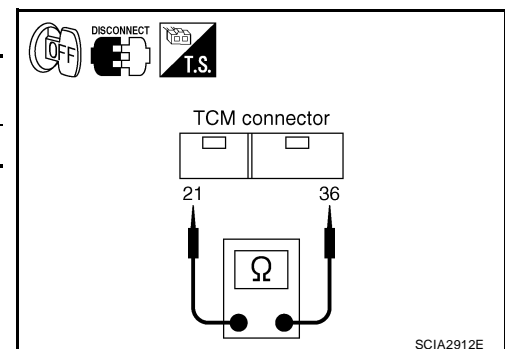

DTC P0775 PRESSURE CONTROL SOLENOID VALVE B (SHIFT PRESSURE)


3. CHECK TERMINAL CORD ASSEMBLY WITH PRESSURE CONTROL SOLENOID VALVE B

1. Turn ignition switch "OFF".
2. Disconnect terminal cord assembly harness connector.
3. Check resistance between terminals 3 and 7.

Connector	Terminal	Condition	Resistance (Approx.)
F30	3 - 7	Temperature: 20°C (68°F)	5.0 - 5.6 Ω

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 5.

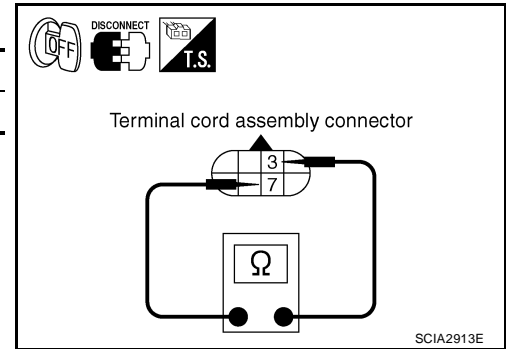

4. CHECK HARNESS BETWEEN TCM AND TERMINAL CORD ASSEMBLY

Check the following.

- Open or short-circuit in the harness between TCM and terminal cord assembly.

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.


5. CHECK PRESSURE CONTROL SOLENOID VALVE B

1. Remove side cover. Refer to [AT-237, "Side cover"](#).
2. Disconnect pressure control solenoid valve B harness connector.
3. Check resistance between terminals 1 and 2.

Connector	Terminal	Condition	Resistance (Approx.)
F73	1 - 2	Temperature: 20°C (68°F)	5.0 - 5.6 Ω

OK or NG

- OK >> GO TO 6.
- NG >> Replace the control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#).

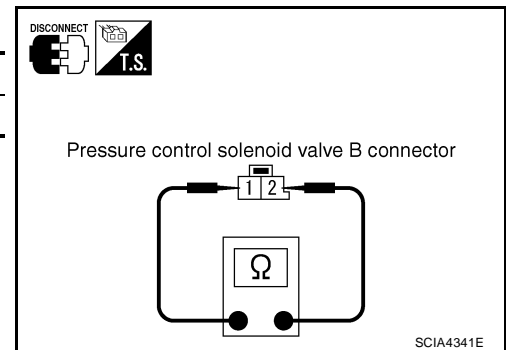

6. CHECK HARNESS BETWEEN TERMINAL CORD ASSEMBLY AND PRESSURE CONTROL SOLENOID VALVE B

Check the following.

- Open or short-circuit in the harness between terminal cord assembly and pressure control solenoid valve B.

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace transmission wire. Refer to [AT-237, "Transmission wire"](#).

7. CHECK DTC

Perform "DTC Confirmation Procedure". Refer to [AT-176, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 8.

DTC P0775 PRESSURE CONTROL SOLENOID VALVE B (SHIFT PRESSURE)

8. CHECK TCM

1. Check TCM input/output signal. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> **INSPECTION END**

NG >> Repair or replace damaged parts.


Component Inspection PRESSURE CONTROL SOLENOID VALVE B

ECS00EBA

1. Remove side cover. Refer to [AT-237, "Side cover"](#) .
2. Disconnect pressure control solenoid valve B harness connector.
3. Check resistance between terminals 1 and 2.

Connector	Terminal	Condition	Resistance (Approx.)
F73	1 - 2	Temperature: 20°C (68°F)	5.0 - 5.6 Ω

4. If NG, replace the control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#) .

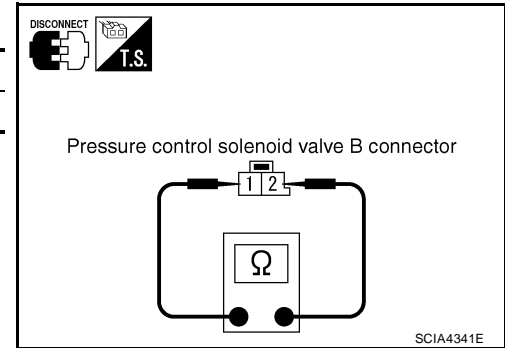

DTC P0780 SHIFT

DTC P0780 SHIFT

PF3:31940

Description

ECS00EBB

- This malfunction will not be detected while the O/D OFF indicator lamp is indicating another self-diagnosis malfunction.
- This malfunction is detected when the A/T does not shift as instructed by the TCM. This is not caused by electrical malfunction (circuits open or shorted) but by mechanical malfunction such as control valve sticking, improper solenoid valve operation, etc.

On Board Diagnosis Logic

ECS00EBC

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "SHIFT" with CONSULT-II or P0780 without CONSULT-II is detected under the following conditions.
 - When no rotation change occurs between input (turbine revolution sensor) and output (revolution sensor) and shifting time is long.
 - When shifting ends immediately.
 - When engine revs up unusually during shifting.

Possible Cause

ECS00EBD

- Shift solenoid valve D (Off error.)
- Shift solenoid valve E (Off error.)
- Pressure control solenoid valve A (On/Off error.)
- Pressure control solenoid valve B (On/Off error.)
- Pressure control solenoid valve C (On/Off error.)
- Hydraulic control circuit

DTC Confirmation Procedure

ECS00EBE

CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Start engine and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
2. Make sure that ATF temperature is within the range below.
FLUID TEMP: More than 60°C (140°F)
If out of range, drive the vehicle to warm up the fluid.
3. Drive vehicle and allow the following conditions.
SLCT LVR POSI: "D" position
GEAR: 1st ⇒ 2nd ⇒ 3rd ⇒ 4th ⇒ 5th position
(Vehicle speed: Refer to [AT-307, "VEHICLE SPEED WHEN SHIFTING GEARS"](#) .)
4. If DTC is detected, go to [AT-184, "Diagnostic Procedure"](#) .

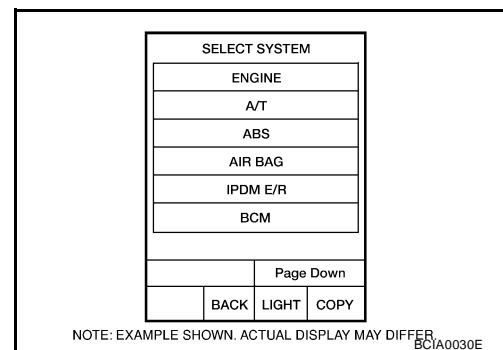

WITH GST

Follow the procedure "With CONSULT-II".



DTC P0780 SHIFT

Wiring Diagram — AT — SFTFNC

ECS00EBF

AT-SFTFNC-01

— : DETECTABLE LINE FOR DTC
— : NON-DETECTABLE LINE FOR DTC

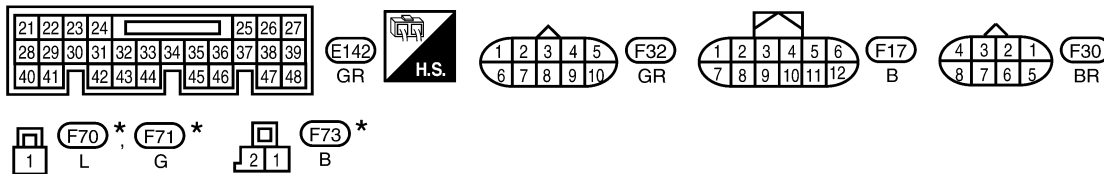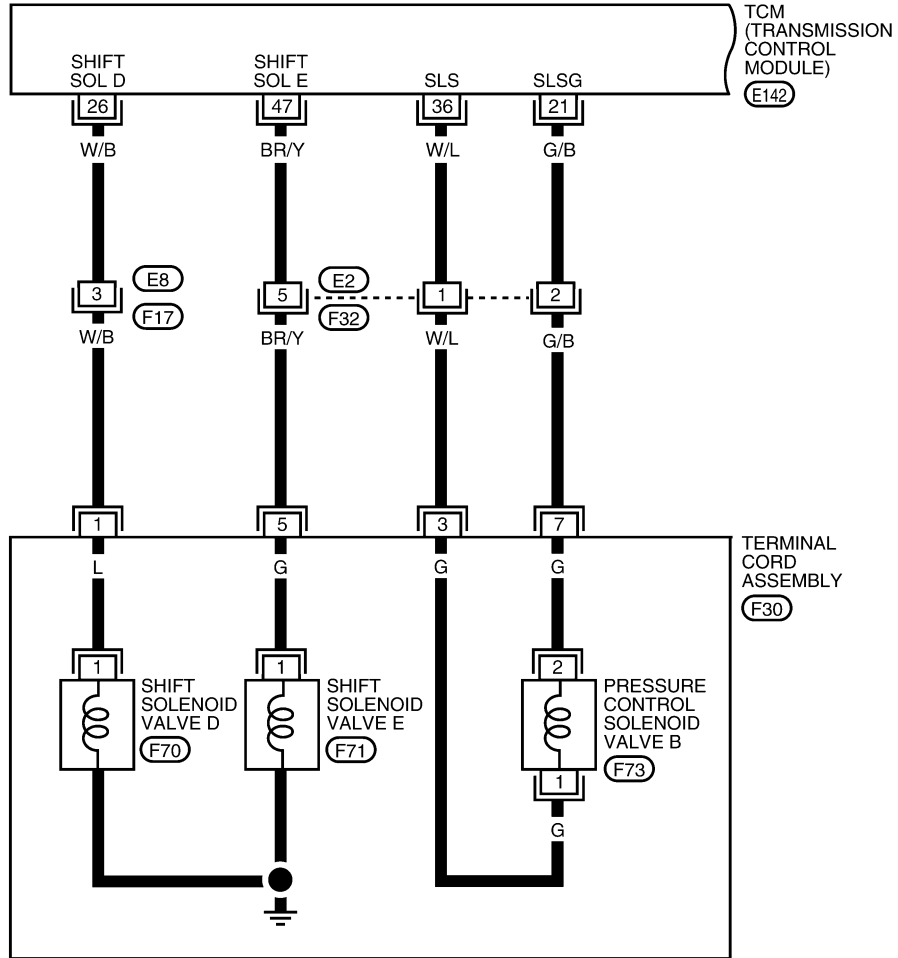



*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

BCWA0601E

DTC P0780 SHIFT

AT-SFTFNC-02

— : DETECTABLE LINE FOR DTC
— : NON-DETECTABLE LINE FOR DTC

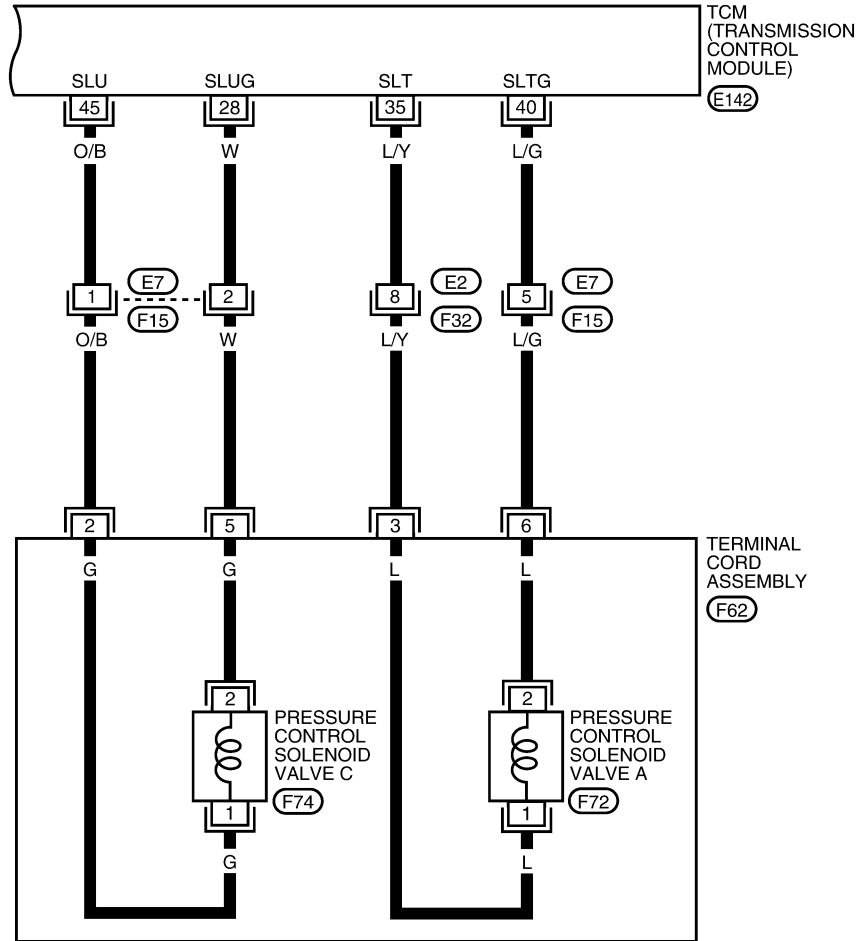

*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

BCWA0602E

DTC P0780 SHIFT

TCM Input/Output Signal Reference Values. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#) .

Diagnostic Procedure

ECS00EBG

1. CHECK EACH SHIFT SOLENOID VALVE CIRCUIT

Perform "Diagnostic Procedure" for the following DTCs.

- "DTC P0765 SHIFT SOLENOID VALVE D" (Refer to [AT-168, "Diagnostic Procedure"](#) .)
- "DTC P0770 SHIFT SOLENOID VALVE E" (Refer to [AT-173, "Diagnostic Procedure"](#) .)

OK or NG

- OK >> GO TO 2.
- NG >> Repair or replace damaged parts.

2. CHECK EACH PRESSURE CONTROL SOLENOID VALVE CIRCUIT

Perform "Diagnostic Procedure" for the following DTCs.

- "DTC P0745 PRESSURE CONTROL SOLENOID VALVE A" (Refer to [AT-143, "Diagnostic Procedure"](#) .)
- "DTC P0775 PRESSURE CONTROL SOLENOID VALVE B" (Refer to [AT-178, "Diagnostic Procedure"](#) .)
- "DTC P0795 PRESSURE CONTROL SOLENOID VALVE C" (Refer to [AT-187, "Diagnostic Procedure"](#) .)

OK or NG

- OK >> GO TO 3.
- NG >> Repair or replace damaged parts.

3. CHECK DTC

Perform "DTC Confirmation Procedure". Refer to [AT-181, "DTC Confirmation Procedure"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> Replace transmission wire or control valve assembly. Refer to [AT-237, "Transmission wire"](#) or [AT-237, "Control Valve Assembly"](#) .

DTC P0795 PRESSURE CONTROL SOLENOID VALVE C (TCC AND SHIFT PRESSURE)


DTC P0795 PRESSURE CONTROL SOLENOID VALVE C (TCC AND SHIFT PRESSURE)

PFP:31940

Description

ECS00EBH

- The pressure control solenoid valve C is normally low, 3-port linear pressure control solenoid.
- The pressure control solenoid valve C is activated to control the apply and release of the 2nd brake and 1st and reverse brake, and torque converter clutch.
- Lock-up operation, however, is prohibited when A/T fluid temperature is too low.
- When the accelerator pedal is depressed (less than 1/8) in lock-up condition, the engine speed should not change abruptly. If there is a big jump in engine speed, there is no lock-up.

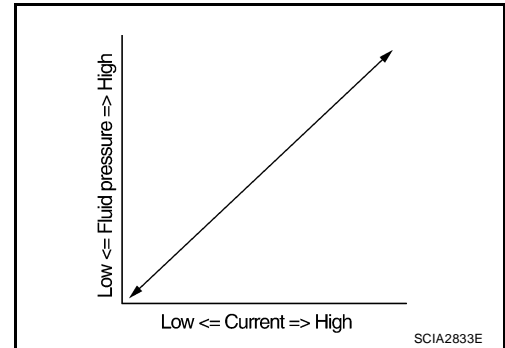

On Board Diagnosis Logic

ECS00EBI

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "PC SOL C(TCC&SFT)" with CONSULT-II or P0795 without CONSULT-II is detected under the following conditions.
 - When normal voltage is not applied to solenoid due to open, short, and so on.
 - When TCM detects as irregular by comparing target value with monitor value.

Possible Cause

ECS00EBJ

- Harness or connectors
(The solenoid circuit is open or shorted.)
- Pressure control solenoid valve C

DTC Confirmation Procedure

ECS00EBK


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start engine.
4. Run engine for at least 13 consecutive seconds at idle speed.
5. If DTC is detected, go to [AT-187, "Diagnostic Procedure"](#).

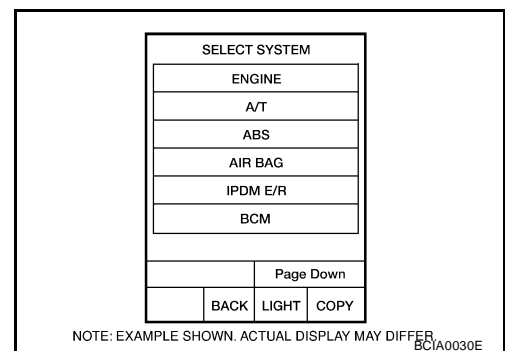

WITH GST

Follow the procedure "With CONSULT-II".



DTC P0795 PRESSURE CONTROL SOLENOID VALVE C (TCC AND SHIFT PRESSURE)

Wiring Diagram — AT — PC/C

ECS00EBL

AT-PC/C-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

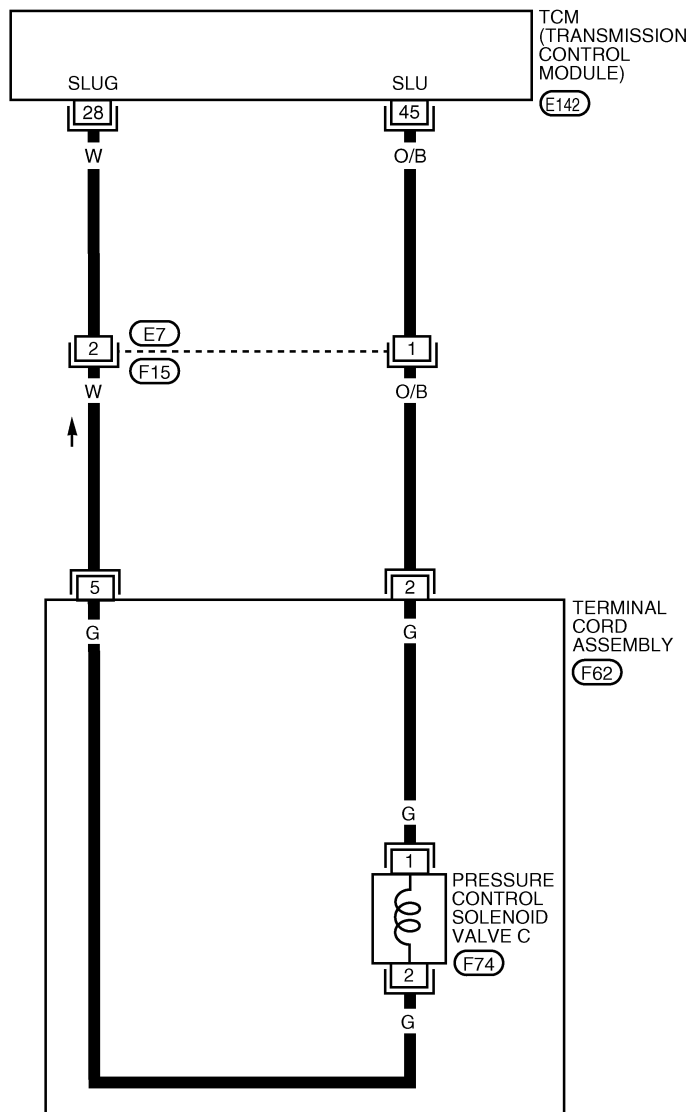

*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

BCWA0357E

DTC P0795 PRESSURE CONTROL SOLENOID VALVE C (TCC AND SHIFT PRESSURE)

TCM Input/Output Signal Reference Values. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#).

Diagnostic Procedure

ECS00EBM

1. CHECK PRESSURE CONTROL SOLENOID VALVE C SIGNAL

With CONSULT-II

1. After warming up the engine and transaxle, turn ignition switch "OFF".
2. Turn ignition switch "ON". (Do not start engine.)
3. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
4. Read out the value of "PC SOL C OUT" and "PC SOL C MON".

Monitor item	Condition	Display value (Approx.)
● PC SOL C OUT	Selector lever: Manual shift gate position	1.00 A
● PC SOL C MON	Other than the above.	0.20 A


DATA MONITOR	
MONITOR	NO DTC
PC SOL A OUT	xxx A
PC SOL A MON	xxx A
PC SOL B OUT	xxx A
PC SOL B MON	xxx A
PC SOL C OUT	xxx A
PC SOL C MON	xxx A

SCIA2907E

Without CONSULT-II

1. Start the engine.
2. Check pulse between TCM connector terminals 28 and 45.

Connector	Terminal	Condition	Data (Approx.)
E142	45 - 28 (Ground)	When engine is running with idle speed and setting selector lever to "P" position.	300 Hz

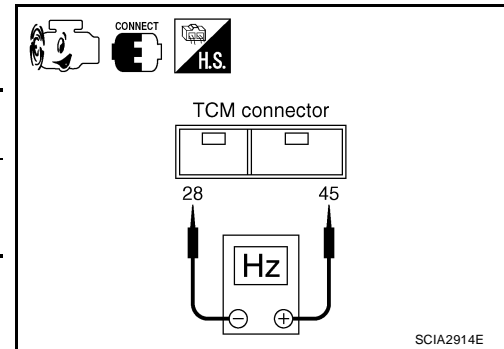


OK or NG

- OK >> GO TO 7.
NG >> GO TO 2.

2. CHECK PRESSURE CONTROL SOLENOID VALVE C CIRCUIT

1. Turn ignition switch "OFF".
2. Disconnect the TCM connector.
3. Check resistance between TCM connector terminals 28 and 45.

Connector	Terminal	Condition	Resistance (Approx.)
E142	45 - 28 (Ground)	Temperature: 20°C (68°F)	5.0 - 5.6 Ω

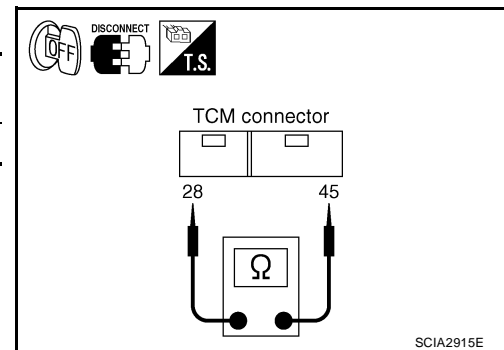

OK or NG

- OK >> GO TO 7.
NG >> GO TO 3.

DTC P0795 PRESSURE CONTROL SOLENOID VALVE C (TCC AND SHIFT PRESSURE)


3. CHECK TERMINAL CORD ASSEMBLY WITH PRESSURE CONTROL SOLENOID VALVE C

1. Turn ignition switch "OFF".
2. Disconnect terminal cord assembly harness connector.
3. Check resistance between terminals 2 and 5.

Connector	Terminal	Condition	Resistance (Approx.)
F62	2 - 5	Temperature: 20°C (68°F)	5.0 - 5.6 Ω

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 5.

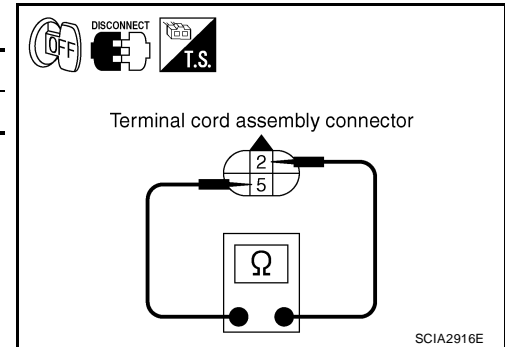

4. CHECK HARNESS BETWEEN TCM AND TERMINAL CORD ASSEMBLY

Check the following.

- Open or short-circuit in the harness between TCM and terminal cord assembly.

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.


5. CHECK PRESSURE CONTROL SOLENOID VALVE C

1. Remove side cover. Refer to [AT-237, "Side cover"](#).
2. Disconnect pressure control solenoid valve C harness connector.
3. Check resistance between terminals 1 and 2.

Connector	Terminal	Condition	Resistance (Approx.)
F74	1 - 2	Temperature: 20°C (68°F)	5.0 - 5.6 Ω

OK or NG

- OK >> GO TO 6.
- NG >> Replace the control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#).

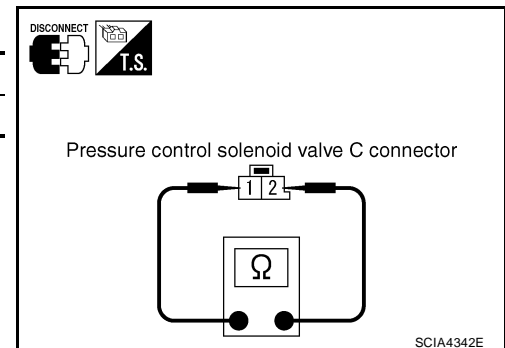

6. CHECK HARNESS BETWEEN TERMINAL CORD ASSEMBLY AND PRESSURE CONTROL SOLENOID VALVE C

Check the following.

- Open or short-circuit in the harness between terminal cord assembly and pressure control solenoid valve C.

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace transmission wire. Refer to [AT-237, "Transmission wire"](#).

7. CHECK DTC

Perform "DTC Confirmation Procedure". Refer to [AT-185, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 8.

DTC P0795 PRESSURE CONTROL SOLENOID VALVE C (TCC AND SHIFT PRESSURE)

8. CHECK TCM

1. Check TCM input/output signal. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> **INSPECTION END**

NG >> Repair or replace damaged parts.


Component Inspection PRESSURE CONTROL SOLENOID VALVE C

ECS00EBN

1. Remove side cover. Refer to [AT-237, "Side cover"](#) .
2. Disconnect pressure control solenoid valve C harness connector.
3. Check resistance between terminals 1 and 2.

Connector	Terminal	Condition	Resistance (Approx.)
F74	1 - 2	Temperature: 20°C (68°F)	5.0 - 5.6 Ω

4. If NG, replace the control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#) .

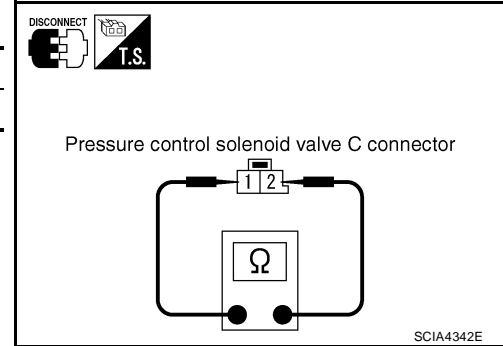

DTC P0797 PRESSURE CONTROL SOLENOID VALVE C STUCK ON

DTC P0797 PRESSURE CONTROL SOLENOID VALVE C STUCK ON

PF3:31940

Description

ECS00EBO

- This malfunction will not be detected while the O/D OFF indicator lamp is indicating another self-diagnosis malfunction.
- This is not caused by electrical malfunction (circuits open or shorted) but by mechanical malfunction such as control valve sticking, improper solenoid valve operation, etc.
- The pressure control solenoid valve C is normally low, 3-port linear pressure control solenoid.
- The pressure control solenoid valve C is activated to control the apply and release of the 2nd brake and 1st and reverse brake, and torque converter clutch.
- Lock-up operation, however, is prohibited when A/T fluid temperature is too low.
- When the accelerator pedal is depressed (less than 1/8) in lock-up condition, the engine speed should not change abruptly. If there is a big jump in engine speed, there is no lock-up.



On Board Diagnosis Logic

ECS00EBP

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "PC SOL C STC ON" with CONSULT-II or P0797 without CONSULT-II is detected when condition of pressure control solenoid valve C is different from monitor value, and relation between gear position and actual gear ratio or lock-up status is irregular.

Possible Cause

ECS00EBQ

- Pressure control solenoid valve C (On stick.)
- Hydraulic control circuit

DTC Confirmation Procedure

ECS00EBR


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start engine.
4. Run engine for at least 4 consecutive minutes at idle speed.
5. If DTC is detected, go to [AT-192, "Diagnostic Procedure"](#).

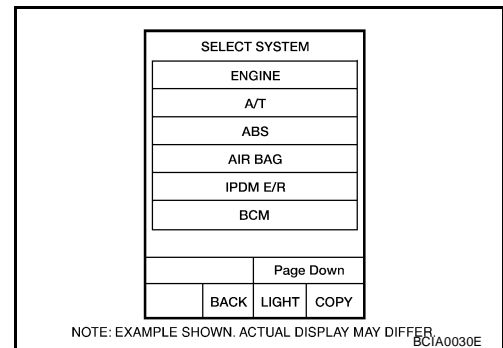

WITH GST

Follow the procedure "With CONSULT-II".


DTC P0797 PRESSURE CONTROL SOLENOID VALVE C STUCK ON

Wiring Diagram — AT — PC/CS

ECS00EBS

AT-PC/CS-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

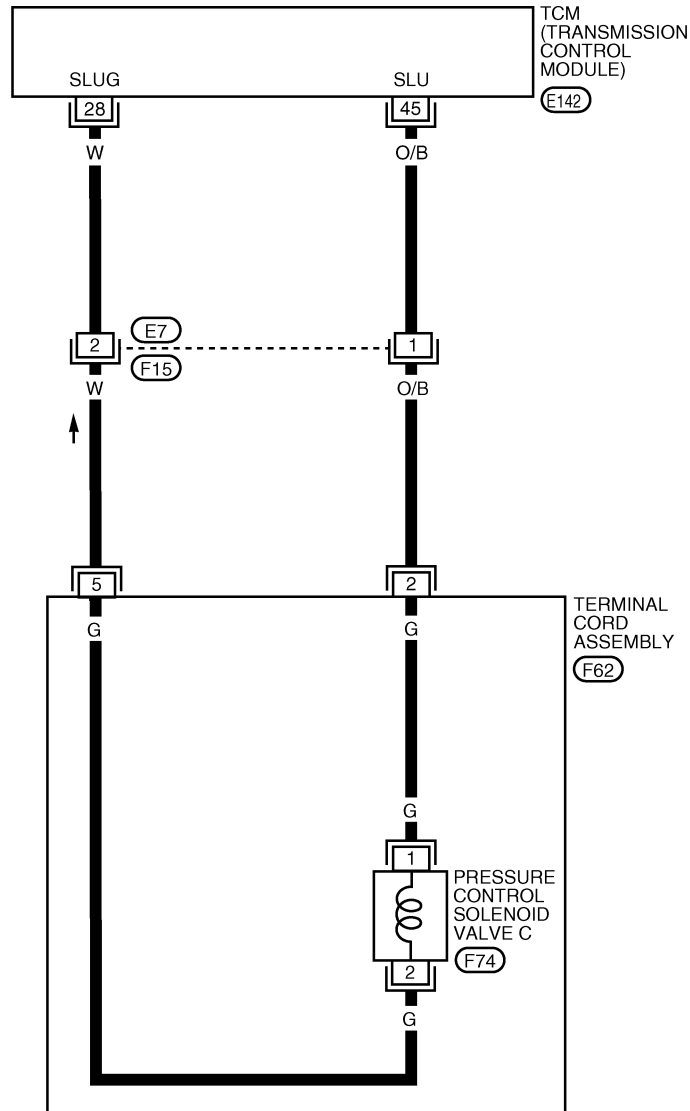

21	22	23	24	25	26	27					
28	29	30	31	32	33	34	35	36	37	38	39
40	41	42	43	44	45	46	47	48			

(E142) GR



1	2	3	4	5
6	7	8	9	10

(F15) GR

3	2	1
6	5	4

(F62) GR

2	1
---	---

(F74) L *

*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

BCWA0358E

DTC P0797 PRESSURE CONTROL SOLENOID VALVE C STUCK ON

TCM Input/Output Signal Reference Values. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#).

Diagnostic Procedure

ECS00EBT

1. CHECK PRESSURE CONTROL SOLENOID VALVE C SIGNAL

With CONSULT-II

1. After warming up the engine and transaxle, turn ignition switch "OFF".
2. Turn ignition switch "ON". (Do not start engine.)
3. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
4. Read out the value of "PC SOL C OUT" and "PC SOL C MON".

Monitor item	Condition	Display value (Approx.)
● PC SOL C OUT	Selector lever: Manual shift gate position	1.00 A
● PC SOL C MON	Other than the above.	0.20 A


DATA MONITOR	
MONITOR	NO DTC
PC SOL A OUT	xxx A
PC SOL A MON	xxx A
PC SOL B OUT	xxx A
PC SOL B MON	xxx A
PC SOL C OUT	xxx A
PC SOL C MON	xxx A

SCIA2907E

Without CONSULT-II

1. Start the engine.
2. Check pulse between TCM connector terminals 28 and 45.

Connector	Terminal	Condition	Data (Approx.)
E142	45 - 28 (Ground)	When engine is running with idle speed and setting selector lever to "P" position.	300 Hz

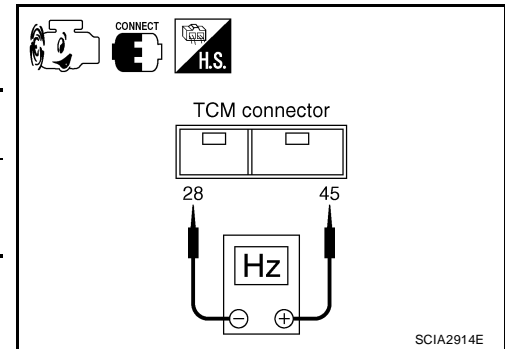

OK or NG

- OK >> GO TO 7.
 NG >> GO TO 2.


2. CHECK PRESSURE CONTROL SOLENOID VALVE C CIRCUIT

1. Turn ignition switch "OFF".
2. Disconnect the TCM connector.
3. Check resistance between TCM connector terminals 28 and 45.

Connector	Terminal	Condition	Resistance (Approx.)
E142	45 - 28 (Ground)	Temperature: 20°C (68°F)	5.0 - 5.6 Ω

OK or NG

- OK >> GO TO 7.
 NG >> GO TO 3.

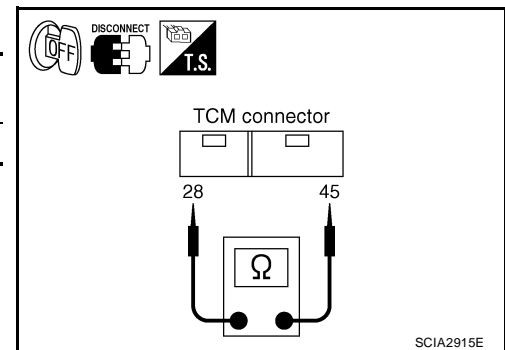

DTC P0797 PRESSURE CONTROL SOLENOID VALVE C STUCK ON


3. CHECK TERMINAL CORD ASSEMBLY WITH PRESSURE CONTROL SOLENOID VALVE C

1. Turn ignition switch "OFF".
2. Disconnect terminal cord assembly harness connector.
3. Check resistance between terminals 2 and 5.

Connector	Terminal	Condition	Resistance (Approx.)
F62	2 - 5	Temperature: 20°C (68°F)	5.0 - 5.6 Ω

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 5.

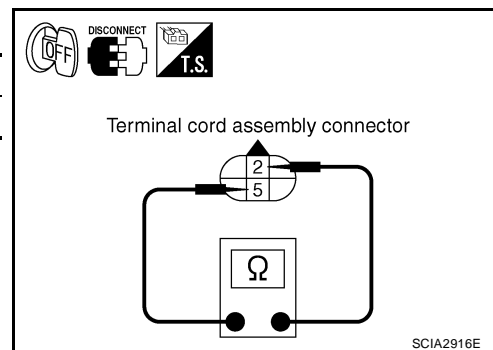

4. CHECK HARNESS BETWEEN TCM AND TERMINAL CORD ASSEMBLY

Check the following.

- Open or short-circuit in the harness between TCM and terminal cord assembly.

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.


5. CHECK PRESSURE CONTROL SOLENOID VALVE C

1. Remove side cover. Refer to [AT-237, "Side cover"](#).
2. Disconnect pressure control solenoid valve C harness connector.
3. Check resistance between terminals 1 and 2.

Connector	Terminal	Condition	Resistance (Approx.)
F74	1 - 2	Temperature: 20°C (68°F)	5.0 - 5.6 Ω

OK or NG

- OK >> GO TO 6.
- NG >> Replace the control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#).

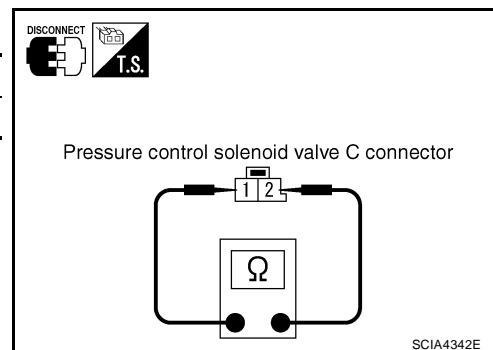

6. CHECK HARNESS BETWEEN TERMINAL CORD ASSEMBLY AND PRESSURE CONTROL SOLENOID VALVE C

Check the following.

- Open or short-circuit in the harness between terminal cord assembly and pressure control solenoid valve C.

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace transmission wire. Refer to [AT-237, "Transmission wire"](#).

7. CHECK TCM

1. Check TCM input/output signal. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#).
2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> GO TO 8.
- NG >> Repair or replace damaged parts.

DTC P0797 PRESSURE CONTROL SOLENOID VALVE C STUCK ON

8. CHECK DTC

Perform "DTC Confirmation Procedure". Refer to [AT-190, "DTC Confirmation Procedure"](#) .

OK or NG

OK >> **INSPECTION END**

NG >> Replace the control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#) .


Component Inspection PRESSURE CONTROL SOLENOID VALVE C

ECS00EBU

1. Remove side cover. Refer to [AT-237, "Side cover"](#) .
2. Disconnect pressure control solenoid valve C harness connector.
3. Check resistance between terminals 1 and 2.

Connector	Terminal	Condition	Resistance (Approx.)
F74	1 - 2	Temperature: 20°C (68°F)	5.0 - 5.6 Ω

4. If NG, replace the control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#) .

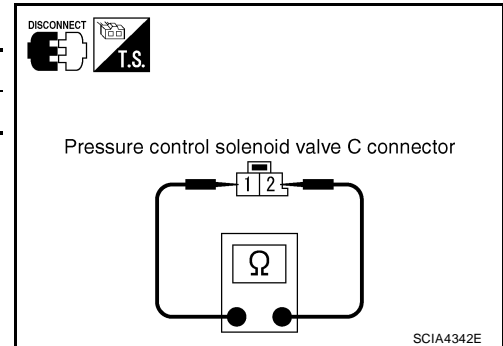

DTC P0825 LEVER SWITCH CIRCUIT

DTC P0825 LEVER SWITCH CIRCUIT

PFP:25130

Description

ECS00EBV

Lever switch is installed in A/T device. It sends lever switch position (ON or OFF) signals to TCM.

On Board Diagnosis Logic

ECS00EBW

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "GEAR LEVER SWITCH" with CONSULT-II is detected when TCM monitors lever switch signal, and judges as irregular when impossible input pattern occurs.

Possible Cause

ECS00EBX

- Harness or connectors
(Lever switch circuit is open or shorted.)
- Lever switch (built into A/T device)

DTC Confirmation Procedure

ECS00EBY


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

④ WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Set overdrive control switch to "OFF" position.
4. Wait for at least 30 consecutive seconds.
5. If DTC is detected, go to [AT-197, "Diagnostic Procedure"](#).

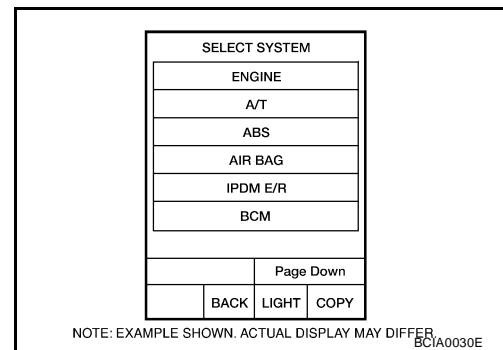



DTC P0825 LEVER SWITCH CIRCUIT

Wiring Diagram — AT — LVRSW

ECS00EBZ

AT-LVRSW-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

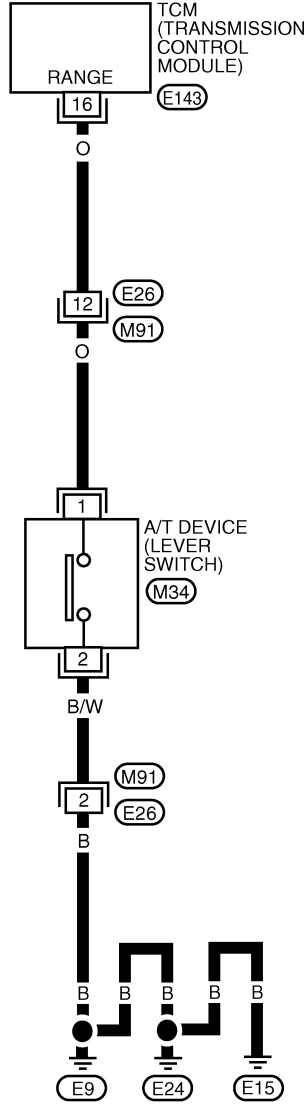

BCWA0606E

DTC P0825 LEVER SWITCH CIRCUIT

TCM Input/Output Signal Reference Values. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#).


Diagnostic Procedure

ECS00EC0

1. CHECK LEVER SWITCH CIRCUIT

With CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Read out ON/OFF switching action of the "RANGE SLCT SW".

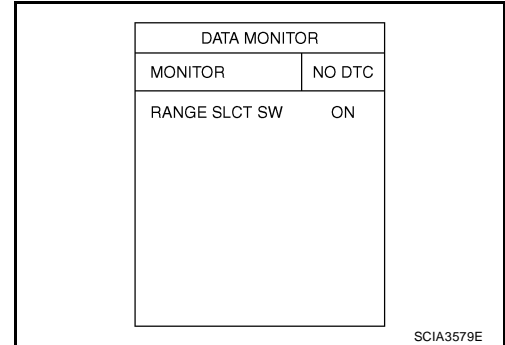

Without CONSULT-II


1. Turn ignition switch "ON". (Do not start engine.)
2. Check voltage between the TCM connector terminal and ground.

Connector No.	Terminal	Condition	Voltage (Approx.)
E143	16 - Ground	Lever switch: "ON" position	0V
		Lever switch: "OFF" position	Battery voltage

OK or NG

OK >> GO TO 4.

NG >> GO TO 2.

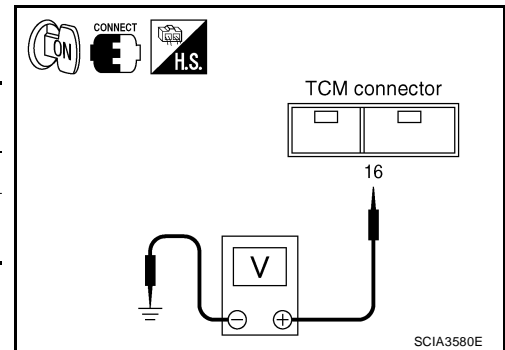

2. CHECK HARNESS BETWEEN TCM AND A/T DEVICE (LEVER SWITCH)

1. Turn ignition switch "OFF".
2. Disconnect the TCM connector.
3. Check the continuity between TCM connector terminal 16 and ground.


Connector No.	Terminal	Condition	Continuity
E143	16 - Ground	Lever switch: "ON" position	Yes
		Lever switch: "OFF" position	No

4. If OK, check harness for short-circuit to ground or power source.

OK or NG

OK >> GO TO 4.

NG >> GO TO 3.

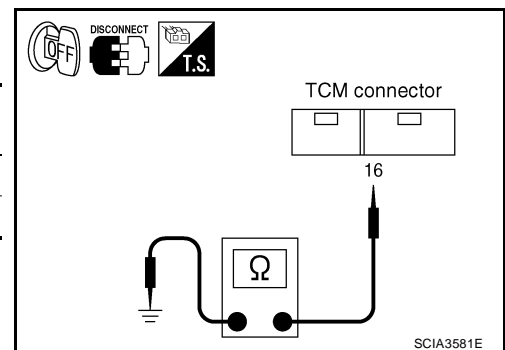

DTC P0825 LEVER SWITCH CIRCUIT

3. DETECT MALFUNCTIONING ITEM

Check the following.

- Open or short-circuit in the harness between TCM and A/T device (lever switch).
- Open or short-circuit in the harness for ground of lever switch.
- Lever switch. Refer to [AT-198, "Component Inspection"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform "DTC Confirmation Procedure". Refer to [AT-195, "DTC Confirmation Procedure"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 5.

5. CHECK TCM

1. Check TCM input/output signal.
2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG


- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

Component Inspection LEVER SWITCH

ECS00EC1

Check continuity between A/T device (lever switch) harness connector M34 terminals 1 and 2.

Switch position	Continuity
ON	Yes
OFF	No

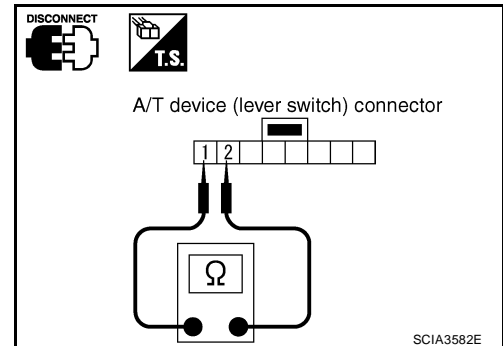

DTC P0882 TCM POWER INPUT SIGNAL

DTC P0882 TCM POWER INPUT SIGNAL

PFP:31036

Description

ECS00EC2

When the power supply to the TCM is cut "OFF", for example because the battery is removed, and the self-diagnostics memory function stops, malfunction is detected.

On Board Diagnosis Logic

ECS00EC3

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "TCM POWER INPT SIG" with CONSULT-II or P0882 without CONSULT-II is detected when voltage supplied to TCM is too low.

Possible Cause

ECS00EC4

- Harness or connectors
(Battery or ignition switch and TCM circuit is open or shorted.)
- A/T PV IGN relay

DTC Confirmation Procedure

ECS00EC5

CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start engine.
4. Depress accelerator pedal or drive vehicle and maintain the following condition for at least 20 consecutive seconds.
TURBINE REV: More than 800 rpm
5. If DTC is detected, go to [AT-201, "Diagnostic Procedure"](#).


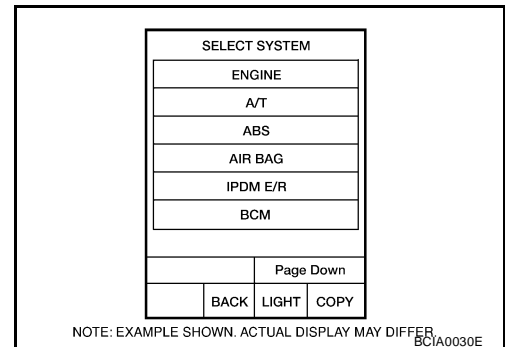


DTC P0882 TCM POWER INPUT SIGNAL

ECS00EC6

Wiring Diagram — AT — PWR/IN

AT-PWR/IN-01

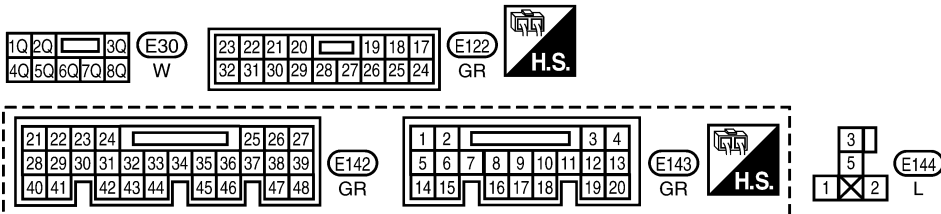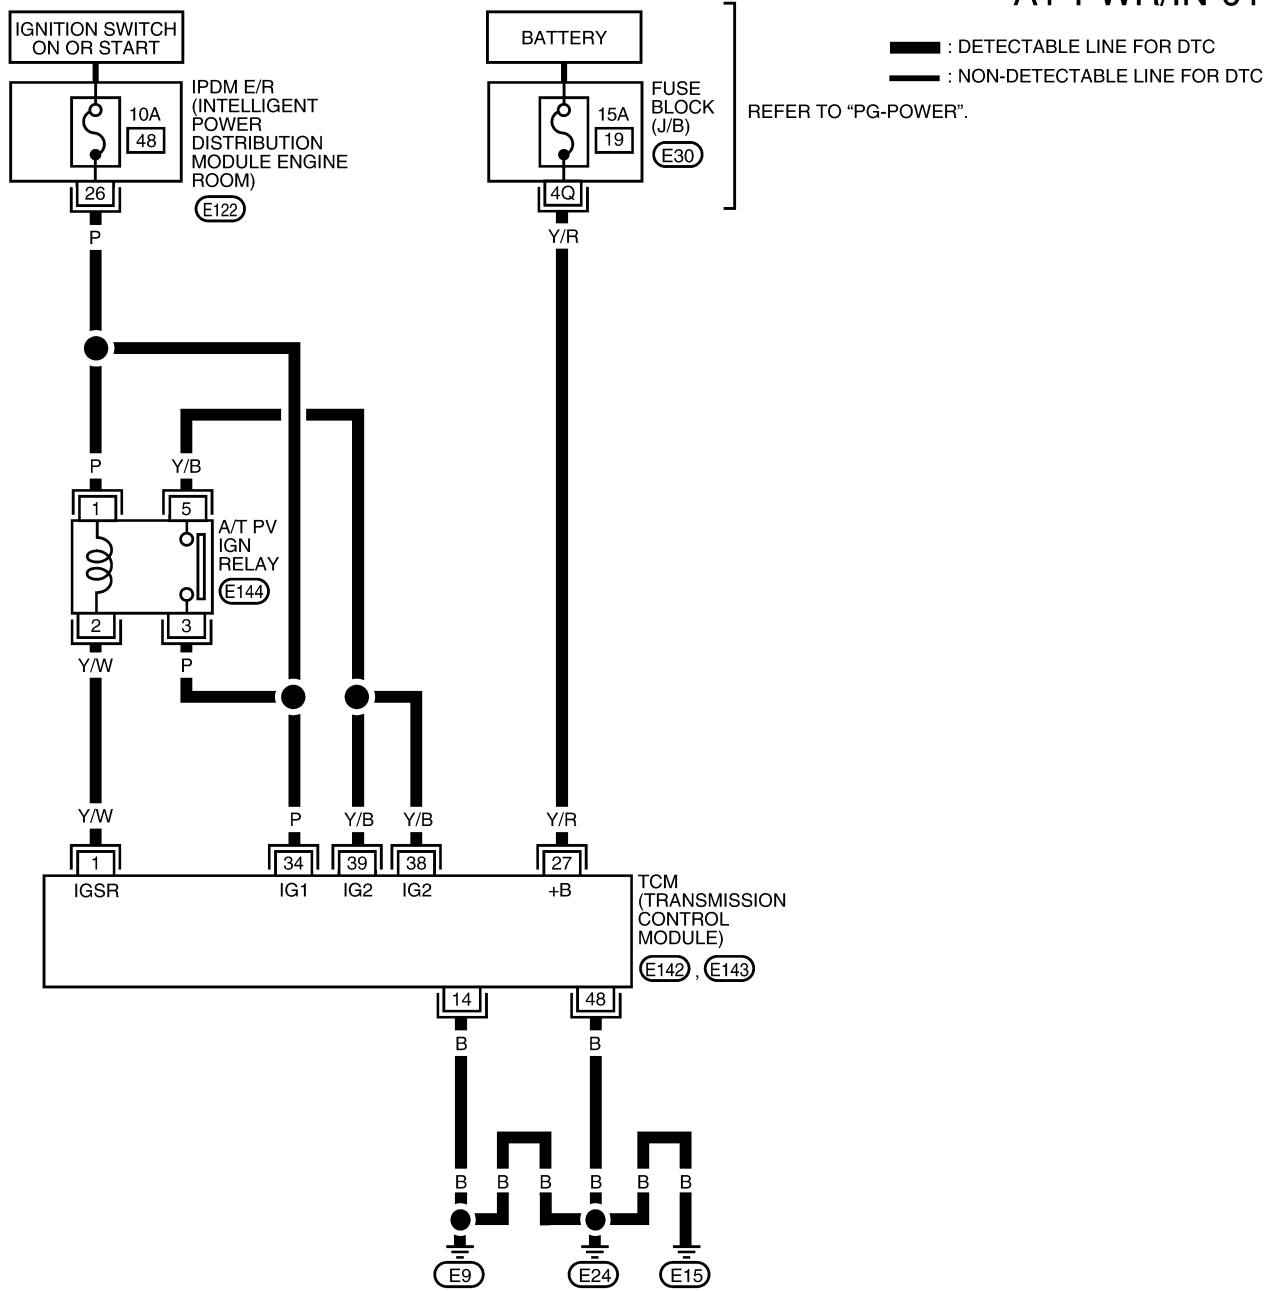

BCWA0605E

DTC P0882 TCM POWER INPUT SIGNAL

TCM Input/Output Signal Reference Values. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#) .


Diagnostic Procedure

ECS00EC7

1. CHECK TCM POWER SOURCE CIRCUIT

1. Turn ignition switch "ON". (Do not start engine.)
2. Check voltage between TCM terminals and ground.

Connector	Terminal	Voltage (Approx.)
E143	1 - Ground	0 - 1.5V
E142	27 - Ground	Battery voltage
	34 - Ground	
	38 - Ground	
	39 - Ground	

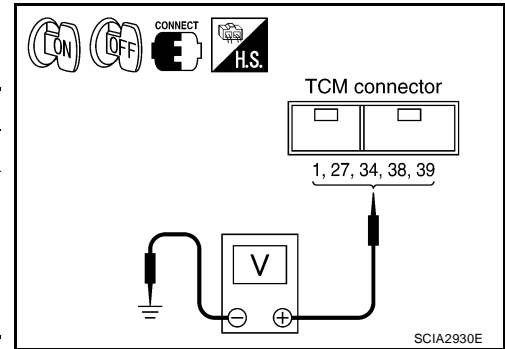

3. Turn ignition switch "OFF".
4. Check voltage between TCM terminals and ground.

Connector	Terminal	Voltage (Approx.)
E143	1 - Ground	0V
E142	27 - Ground	Battery voltage
	34 - Ground	0V
	38 - Ground	0V
	39 - Ground	0V

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 2.

2. DETECT MALFUNCTIONING ITEM

Check the following:

- Harness for short or open between battery and TCM terminal 27
- Harness for short or open between ignition switch and TCM terminals 1, 34, 38 and 39
- 15A fuse [No. 19, located in the fuse block (J/B)]
- 10A fuse (No. 48, located in the IPDM E/R)
- Ignition switch. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) .
- A/T PV IGN relay. Refer to [AT-202, "Component Inspection"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> Repair or replace damaged parts.

DTC P0882 TCM POWER INPUT SIGNAL

3. CHECK TCM GROUND CIRCUIT

1. Turn ignition switch "OFF".
2. Disconnect TCM harness connector.
3. Check continuity between TCM terminals 14, 48 and ground.


Continuity should exist.

If OK, check harness for short to ground and short to power.

OK or NG

OK >> GO TO 4.

NG >> Repair open circuit or short to ground or short to power in harness or connectors.

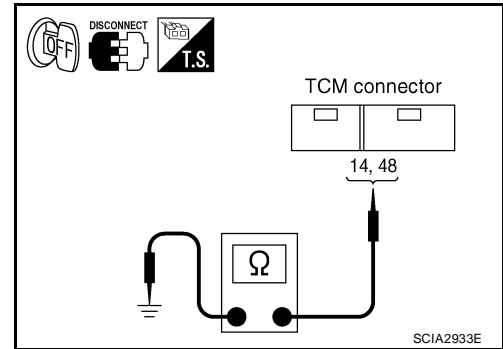

4. CHECK DTC

Check again. Refer to [AT-199, "DTC Confirmation Procedure"](#).

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 5.

5. CHECK TCM

1. Check TCM input/output signal.
2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> **INSPECTION END**

NG >> Repair or replace damaged parts.


Component Inspection A/T PV IGN RELAY

ECS00EC8

1. Apply 12V direct current between A/T PV IGN relay terminals 1 and 2.
2. Check continuity between relay terminals 3 and 5.

Condition	Continuity
12V direct current supply between terminals 1 and 2	Yes
OFF	No

3. If NG, replace A/T PV IGN relay.

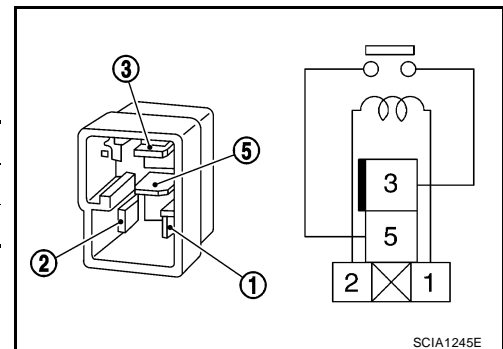

DTC P1726 ELECTRIC THROTTLE CONTROL SYSTEM

DTC P1726 ELECTRIC THROTTLE CONTROL SYSTEM

PFP:23710

Description

ECS00EC9

This DTC is displayed with other DTCs regarding ECM. Perform the trouble diagnosis for other DTCs displayed. Refer to [AT-44, "TROUBLE DIAGNOSIS"](#).

When this DTC is detected, lock-up operation and learning control are canceled.

A

B

AT

D

E

F

G

H

I

J

K

L

M

TROUBLE DIAGNOSIS FOR SYMPTOMS

PF0:00007

ECS00ECA

TROUBLE DIAGNOSIS FOR SYMPTOMS

O/D OFF Indicator Lamp Does Not Come On SYMPTOM:

O/D OFF indicator lamp does not come on for about 2 seconds when turning ignition switch to "ON".

DIAGNOSTIC PROCEDURE

1. CHECK CAN COMMUNICATION LINE

Perform the self-diagnosis.

Is a malfunction in the CAN communication indicated in the results?


YES >> Check the CAN communication line. Refer to [AT-84, "DTC U1000 CAN COMMUNICATION LINE"](#)

NO >> GO TO 2.

2. CHECK TCM POWER SOURCE CIRCUIT

1. Turn ignition switch "ON". (Do not start engine.)
2. Check voltage between TCM connector terminals and ground. Refer to [AT-200, "Wiring Diagram — AT — PWR/IN"](#).

Connector	Terminal	Voltage (Approx.)
E143	1 - Ground	0 - 1.5V
E142	27 - Ground	Battery voltage
	34 - Ground	
	38 - Ground	
	39 - Ground	

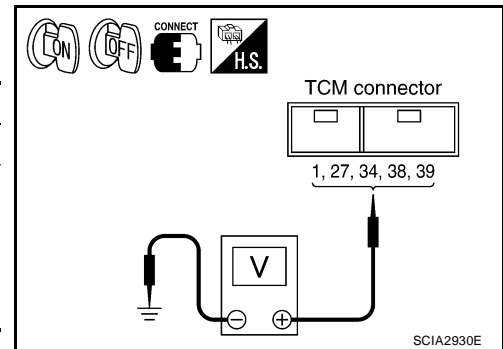

3. Turn ignition switch "OFF".
4. Check voltage between TCM connector terminals and ground. Refer to [AT-200, "Wiring Diagram — AT — PWR/IN"](#).

Connector	Terminal	Voltage (Approx.)
E143	1 - Ground	0V
E142	27 - Ground	Battery voltage
	34 - Ground	0V
	38 - Ground	0V
	39 - Ground	0V

OK or NG

- OK >> GO TO 4.
NG >> GO TO 3.

3. DETECT MALFUNCTIONING ITEM

Check the following:

- Harness for short or open between battery and TCM terminal 27
- Harness for short or open between ignition switch and TCM terminals 1, 34, 38 and 39
- 15A fuse [No. 19, located in the fuse block (J/B)]
- 10A fuse (No. 48, located in the IPDM E/R)
- Ignition switch. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#).
- A/T PV IGN relay. Refer to [AT-202, "Component Inspection"](#).

OK or NG

- OK >> GO TO 4.
NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

4. CHECK TCM GROUND CIRCUIT


1. Turn ignition switch "OFF".
2. Disconnect the TCM harness connector.
3. Check continuity between TCM terminals 14, 48 and ground.
Refer to [AT-200, "Wiring Diagram — AT — PWR/IN"](#) .

Continuity should exist.

4. If OK, check harness for short-circuit to ground or the power source.

OK or NG

- OK >> GO TO 5.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

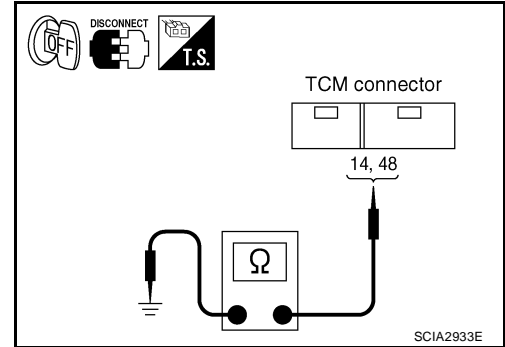

5. CHECK O/D OFF INDICATOR LAMP CIRCUIT

1. Turn ignition switch "OFF".
2. Check the combination meter.
Refer to [DI-5, "COMBINATION METERS"](#) .

OK or NG

- OK >> GO TO 6.
NG >> Replace the combination meter. Refer to [DI-25, "REMOVAL AND INSTALLATION"](#) .

6. SYMPTOM CHECK

Check again.

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 7.

7. CHECK TCM

1. Check TCM input/output signal.
2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

Engine Cannot Be Started In “P” or “N” Position

ECS00ECB

SYMPTOM:

- Engine cannot be started with selector lever in “P” or “N” position.
- Engine can be started with selector lever in “D”, “L” or “R” position.

DIAGNOSTIC PROCEDURE

1. CHECK STARTING SYSTEM

Check starting system. Refer to [SC-10, "STARTING SYSTEM"](#) .

OK or NG

- OK >> GO TO 2.
- NG >> Repair or replace damaged parts.

2. CHECK CONTROL CABLE

Check the control cable.

- Refer to [AT-236, "Control Cable Adjustment"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> Adjust control cable. Refer to [AT-236, "Control Cable Adjustment"](#) .

3. CHECK PNP SWITCH CIRCUIT

Perform self-diagnosis.

Do the self-diagnostic results indicate PNP switch?

- YES >> Check the malfunctioning system. Refer to [AT-91, "DTC P0705 PARK/NEUTRAL POSITION SWITCH"](#) .
- NO >> **INSPECTION END**

In “P” Position, Vehicle Moves When Pushed

ECS00ECC

SYMPTOM:

Even though the selector lever is set in the “P” position, the parking mechanism is not actuated, allowing the vehicle to be moved when it is pushed.

DIAGNOSTIC PROCEDURE

1. CHECK PNP SWITCH CIRCUIT

Perform self-diagnosis.

Do the self-diagnostic results indicate PNP switch?

- YES >> Check the malfunctioning system. Refer to [AT-91, "DTC P0705 PARK/NEUTRAL POSITION SWITCH"](#) .
- NO >> GO TO 2.

2. CHECK CONTROL CABLE

Check the control cable.

- Refer to [AT-236, "Control Cable Adjustment"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> Adjust control cable. Refer to [AT-236, "Control Cable Adjustment"](#) .

3. SYMPTOM CHECK

Check again.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

ECS00ECD

In "N" Position, Vehicle Moves

SYMPTOM:

Vehicle moves forward or backward when selecting "N" position.

DIAGNOSTIC PROCEDURE

1. CHECK A/T FLUID LEVEL

Check the A/T fluid level. Refer to [AT-55, "A/T FLUID CHECK"](#) .

OK or NG

- OK >> GO TO 2.
- NG >> Refill ATF.

2. CHECK PNP SWITCH CIRCUIT

Perform self-diagnosis.

Do the self-diagnostic results indicate PNP switch?

- YES >> Check the malfunctioning system. Refer to [AT-91, "DTC P0705 PARK/NEUTRAL POSITION SWITCH"](#) .
- NO >> GO TO 3.

3. CHECK CONTROL CABLE

Check the control cable.

- Refer to [AT-236, "Control Cable Adjustment"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> Adjust control cable. Refer to [AT-236, "Control Cable Adjustment"](#) .

4. CHECK SYMPTOM

Check again.

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 4.

5. CHECK TCM

1. Check TCM input/output signal. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

A

B

AT

D

E

F

G

H

I

J

K

L

M

TROUBLE DIAGNOSIS FOR SYMPTOMS

ECS00ECE

Large Shock (“N” to “D” Position)

SYMPTOM:

A noticeable shock occurs when the selector lever is shifted from the “N” to “D” position.

DIAGNOSTIC PROCEDURE

1. CHECK A/T FLUID LEVEL

Check the A/T fluid level. Refer to [AT-55, "A/T FLUID CHECK"](#) .

OK or NG

- OK >> GO TO 2.
- NG >> Refill ATF.

2. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis.

Is any malfunction detected by self-diagnostic?

- YES >> Check the malfunctioning system.
- NO >> GO TO 3.

3. DETECT MALFUNCTIONING ITEM

1. Control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#) .
2. Disassemble A/T. Refer to [AT-247, "DISASSEMBLY"](#) .
3. Check the following items:
 - Accumulator. Refer to [AT-247, "DISASSEMBLY"](#) .
 - Forward and direct clutch assembly. Refer to [AT-247, "DISASSEMBLY"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> Repair or replace damaged parts.

4. CHECK TCM

1. Check TCM input/output signal. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> GO TO 5.
- NG >> Repair or replace damaged parts.

5. CHECK SYMPTOM

Check again.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

ECS00ECF

Vehicle Does Not Creep Backward In "R" Position

SYMPTOM:

The vehicle does not creep in the "R" position. Or an extreme lack of acceleration is observed.

DIAGNOSTIC PROCEDURE

1. CHECK A/T FLUID LEVEL

Check the A/T fluid level. Refer to [AT-55, "A/T FLUID CHECK"](#) .

OK or NG

- OK >> GO TO 2.
- NG >> Refill ATF.

2. CHECK CONTROL CABLE AND PNP SWITCH POSITION

Check the control cable and PNP switch position.

- Refer to [AT-236, "Control Cable Adjustment"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> Adjust control cable and PNP switch position. Refer to [AT-236, "Control Cable Adjustment"](#) or [AT-234, "Park/Neutral Position \(PNP\) Switch Adjustment"](#) .

3. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis.

Is any malfunction detected by self-diagnostic?

- YES >> Check the malfunctioning system.
- NO >> GO TO 4.

4. DETECT MALFUNCTIONING ITEM

1. Control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#) .
2. Disassemble A/T. Refer to [AT-247, "DISASSEMBLY"](#) .
3. Check the following items:
 - Forward and direct clutch assembly. Refer to [AT-247, "DISASSEMBLY"](#) .
 - 1st and reverse brake. Refer to [AT-247, "DISASSEMBLY"](#) .
 - B5 brake. Refer to [AT-274, "Transaxle Case Cover & B5 Brake"](#) .
 - Torque convertor. Refer to [AT-247, "DISASSEMBLY"](#) .

OK or NG

- OK >> GO TO 5.
- NG >> Repair or replace damaged parts.

5. CHECK TCM

1. Check TCM input/output signal. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> GO TO 6.
- NG >> Repair or replace damaged parts.

6. CHECK SYMPTOM

Check again.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

ECS00ECG

Vehicle Does Not Creep Forward In “D” or “L” Position

SYMPTOM:

Vehicle does not creep forward when selecting “D” or “L” position.

DIAGNOSTIC PROCEDURE

1. CHECK A/T FLUID LEVEL

Check the A/T fluid level. Refer to [AT-55, "A/T FLUID CHECK"](#) .

OK or NG

- OK >> GO TO 2.
- NG >> Refill ATF.

2. CHECK CONTROL CABLE AND PNP SWITCH POSITION

Check the control cable and PNP switch position.

- Refer to [AT-236, "Control Cable Adjustment"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> Adjust control cable and PNP switch position. Refer to [AT-236, "Control Cable Adjustment"](#) or [AT-234, "Park/Neutral Position \(PNP\) Switch Adjustment"](#) .

3. CHECK PRESSURE CONTROL SOLENOID VALVE A CIRCUIT

Perform self-diagnosis.

Do the self-diagnostic results indicate pressure control solenoid valve A?

- YES >> Check the malfunctioning system. Refer to [AT-141, "DTC P0745 PRESSURE CONTROL SOLENOID VALVE A \(LINE PRESSURE\)"](#) .
- NO >> GO TO 4.

4. DETECT MALFUNCTIONING ITEM

1. Control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#) .
2. Disassemble A/T. Refer to [AT-247, "DISASSEMBLY"](#) .
3. Check the following items:
 - Forward and direct clutch assembly. Refer to [AT-247, "DISASSEMBLY"](#) .
 - One-way clutch No.2. Refer to [AT-247, "DISASSEMBLY"](#) .
 - B5 brake. Refer to [AT-274, "Transaxle Case Cover & B5 Brake"](#) .
 - Torque convertor. Refer to [AT-247, "DISASSEMBLY"](#) .

OK or NG

- OK >> GO TO 5.
- NG >> Repair or replace damaged parts.

5. CHECK TCM

1. Check TCM input/output signal. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> GO TO 6.
- NG >> Repair or replace damaged parts.

6. CHECK SYMPTOM

Check again.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

Vehicle Cannot Be Started From D1

ECS00ECH

SYMPTOM:

Vehicle cannot be started from D1 on cruise test - Part 1.

DIAGNOSTIC PROCEDURE

1. CONFIRM THE SYMPTOM

Check if vehicle creeps in "R" position.

OK or NG

OK >> GO TO 2.

NG >> Refer to [AT-209, "Vehicle Does Not Creep Backward In "R" Position"](#) .

2. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis.

Is any malfunction detected by self-diagnostic?

YES >> Check the malfunctioning system.

NO >> GO TO 3.

3. CHECK LINE PRESSURE

Check the line pressure at the engine stall point. Refer to [AT-57, "LINE PRESSURE TEST"](#) .

OK or NG

OK >> GO TO 4.

NG >> Check the malfunctioning item. Refer to [AT-58, "Judgement of line pressure test"](#) .

4. DETECT MALFUNCTIONING ITEM

1. Control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#) .

2. Disassemble A/T. Refer to [AT-247, "DISASSEMBLY"](#) .

3. Check the following items:

- Forward and direct clutch assembly. Refer to [AT-247, "DISASSEMBLY"](#) .

- One-way clutch No.2. Refer to [AT-247, "DISASSEMBLY"](#) .

- B5 brake. Refer to [AT-274, "Transaxle Case Cover & B5 Brake"](#) .

OK or NG

OK >> GO TO 5.

NG >> Repair or replace damaged parts.

5. CHECK TCM

1. Check TCM input/output signal. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#) .

2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> GO TO 6.

NG >> Repair or replace damaged parts.

6. CHECK SYMPTOM

Check again.

OK or NG

OK >> **INSPECTION END**

NG >> Repair or replace damaged parts.

A/T Does Not Shift: D1 → D2

ECS00ECI

SYMPTOM:

The vehicle does not shift-up from the D1 to D2 gear at the specified speed.

TROUBLE DIAGNOSIS FOR SYMPTOMS

DIAGNOSTIC PROCEDURE

1. CONFIRM THE SYMPTOM

Check if vehicle creeps forward in "D" or "L" position and vehicle can be started from D1.

OK or NG

OK >> GO TO 2.

NG >> Refer to [AT-210, "Vehicle Does Not Creep Forward In "D" or "L" Position"](#) , [AT-211, "Vehicle Cannot Be Started From D1"](#) .

2. CHECK A/T FLUID LEVEL

Check the A/T fluid level. Refer to [AT-55, "A/T FLUID CHECK"](#) .

OK or NG

OK >> GO TO 3.

NG >> Refill ATF.

3. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis.

Is any malfunction detected by self-diagnostic?

YES >> Check the malfunctioning system.

NO >> GO TO 4.

4. DETECT MALFUNCTIONING ITEM

1. Control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#) .

2. Disassemble A/T. Refer to [AT-247, "DISASSEMBLY"](#) .

3. Check the following items:

- One-way clutch No.1. Refer to [AT-272, "One-Way Clutch Outer Race Sub Assembly & 2nd Coast Brake Hub & One-Way Clutch No.1"](#) .

- One-way clutch No.2. Refer to [AT-247, "DISASSEMBLY"](#) .

- 2nd coast brake. Refer to [AT-266, "Oil Pump, 2nd Coast Brake & 2nd Brake"](#) , [AT-272, "One-Way Clutch Outer Race Sub Assembly & 2nd Coast Brake Hub & One-Way Clutch No.1"](#) .

- 2nd brake. Refer to [AT-266, "Oil Pump, 2nd Coast Brake & 2nd Brake"](#) .

OK or NG

OK >> GO TO 5.

NG >> Repair or replace damaged parts.

5. CHECK TCM

1. Check TCM input/output signal. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#) .

2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> GO TO 6.

NG >> Repair or replace damaged parts.

6. CHECK SYMPTOM

Check again.

OK or NG

OK >> **INSPECTION END**

NG >> Repair or replace damaged parts.

A/T Does Not Shift: D2 → D3

SYMPTOM:

The vehicle does not shift-up from D2 to D3 gear at the specified speed.

ECS00ECJ

TROUBLE DIAGNOSIS FOR SYMPTOMS

DIAGNOSTIC PROCEDURE

1. CONFIRM THE SYMPTOM

Check if vehicle creeps forward in "D" or "L" position and vehicle can be started from D1.

OK or NG

OK >> GO TO 2.

NG >> Refer to [AT-210, "Vehicle Does Not Creep Forward In "D" or "L" Position"](#) ,[AT-211, "Vehicle Cannot Be Started From D1"](#) .

2. CHECK A/T FLUID LEVEL

Check the A/T fluid level. Refer to [AT-55, "A/T FLUID CHECK"](#) .

OK or NG

OK >> GO TO 3.

NG >> Refill ATF.

3. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis.

Is any malfunction detected by self-diagnostic?

YES >> Check the malfunctioning system.

NO >> GO TO 4.

4. DETECT MALFUNCTIONING ITEM

1. Control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#) .

2. Disassemble A/T. Refer to [AT-247, "DISASSEMBLY"](#) .

3. Check the following items:

- U/D brake. Refer to [AT-247, "DISASSEMBLY"](#) .

- B5 brake. Refer to [AT-274, "Transaxle Case Cover & B5 Brake"](#) .

OK or NG

OK >> GO TO 5.

NG >> Repair or replace damaged parts.

5. CHECK TCM

1. Check TCM input/output signal. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#) .

2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> GO TO 6.

NG >> Repair or replace damaged parts.

6. CHECK SYMPTOM

Check again.

OK or NG

OK >> **INSPECTION END**

NG >> Repair or replace damaged parts.

A/T Does Not Shift: D3 → D4

SYMPTOM:

- The vehicle does not shift-up from the D3 to D4 gear at the specified speed.
- The vehicle does not shift-up from the D3 to D4 gear unless A/T is warmed up.

ECS00ECK

TROUBLE DIAGNOSIS FOR SYMPTOMS

DIAGNOSTIC PROCEDURE

1. CONFIRM THE SYMPTOM

Check if vehicle creeps forward in "D" or "L" position and vehicle can be started from D1.

OK or NG

OK >> GO TO 2.

NG >> Refer to [AT-210, "Vehicle Does Not Creep Forward In "D" or "L" Position"](#) , [AT-211, "Vehicle Cannot Be Started From D1"](#) .

2. CHECK A/T FLUID LEVEL

Check the A/T fluid level. Refer to [AT-55, "A/T FLUID CHECK"](#) .

OK or NG

OK >> GO TO 3.

NG >> Refill ATF.

3. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis.

Is any malfunction detected by self-diagnostic?

YES >> Check the malfunctioning system.

NO >> GO TO 4.

4. DETECT MALFUNCTIONING ITEM

1. Control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#) .

2. Disassemble A/T. Refer to [AT-247, "DISASSEMBLY"](#) .

3. Check the following items:

- U/D brake. Refer to [AT-247, "DISASSEMBLY"](#) .

- U/D clutch. Refer to [AT-247, "DISASSEMBLY"](#) .

OK or NG

OK >> GO TO 6.

NG >> Repair or replace damaged parts.

5. CHECK TCM

1. Check TCM input/output signal. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#) .

2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> GO TO 5.

NG >> Repair or replace damaged parts.

6. CHECK SYMPTOM

Check again.

OK or NG

OK >> **INSPECTION END**

NG >> Repair or replace damaged parts.

A/T Does Not Shift: D4 → D5

SYMPTOM:

- The vehicle does not shift-up from the D4 to D5 gear at the specified speed.
- The vehicle does not shift-up from the D4 to D5 gear unless A/T is warmed up.

ECS00ECL

TROUBLE DIAGNOSIS FOR SYMPTOMS

DIAGNOSTIC PROCEDURE

1. CONFIRM THE SYMPTOM

Check if vehicle creeps forward in "D" or "L" position and vehicle can be started from D1.

OK or NG

OK >> GO TO 2.

NG >> Refer to [AT-210, "Vehicle Does Not Creep Forward In "D" or "L" Position"](#) ,[AT-211, "Vehicle Cannot Be Started From D1"](#) .

2. CHECK A/T FLUID LEVEL

Check the A/T fluid level. Refer to [AT-55, "A/T FLUID CHECK"](#) .

OK or NG

OK >> GO TO 3.

NG >> Refill ATF.

3. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis.

Is any malfunction detected by self-diagnostic?

YES >> Check the malfunctioning system.

NO >> GO TO 4.

4. DETECT MALFUNCTIONING ITEM

1. Control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#) .

2. Disassemble A/T. Refer to [AT-247, "DISASSEMBLY"](#) .

3. Check the following items:

- Forward and direct clutch assembly. Refer to [AT-247, "DISASSEMBLY"](#) .

- 2nd coast brake. Refer to [AT-266, "Oil Pump, 2nd Coast Brake & 2nd Brake"](#) , [AT-272, "One-Way Clutch Outer Race Sub Assembly & 2nd Coast Brake Hub & One-Way Clutch No.1"](#) .

- One-way clutch No.1. Refer to [AT-272, "One-Way Clutch Outer Race Sub Assembly & 2nd Coast Brake Hub & One-Way Clutch No.1"](#) .

OK or NG

OK >> GO TO 5.

NG >> Repair or replace damaged parts.

5. CHECK TCM

1. Check TCM input/output signal. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#) .

2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> GO TO 6.

NG >> Repair or replace damaged parts.

6. CHECK SYMPTOM

Check again.

OK or NG

OK >> **INSPECTION END**

NG >> Repair or replace damaged parts.

A/T Does Not Perform Lock-up SYMPTOM:

A/T does not perform lock-up at the specified speed.

ECS00ECM

TROUBLE DIAGNOSIS FOR SYMPTOMS

DIAGNOSTIC PROCEDURE

1. CHECK A/T FLUID LEVEL

Check the A/T fluid level. Refer to [AT-55, "A/T FLUID CHECK"](#) .

OK or NG

- OK >> GO TO 2.
- NG >> Refill ATF.

2. CHECK STOP LAMP SWITCH CIRCUIT

Check the stop lamp switch circuit. Refer to [BRC-10, "TROUBLE DIAGNOSIS"](#) (with TCS/ABS) or [BRC-55, "TROUBLE DIAGNOSIS"](#) (with VDC/TCS/ABS).

OK or NG

- OK >> GO TO 3.
- NG >> Repair or replace damaged parts.

3. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis.

Is any malfunction detected by self-diagnostic?

- YES >> Check the malfunctioning system.
- NO >> GO TO 4.

4. DETECT MALFUNCTIONING ITEM

1. Control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#) .
2. Disassemble A/T. Refer to [AT-247, "DISASSEMBLY"](#) .
3. Check the following items:
 - Torque converter. Refer to [AT-247, "DISASSEMBLY"](#) .

OK or NG

- OK >> GO TO 5.
- NG >> Repair or replace damaged parts.

5. CHECK TCM

1. Check TCM input/output signal. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> GO TO 6.
- NG >> Repair or replace damaged parts.

6. CHECK SYMPTOM

Check again.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

A/T Does Not Hold Lock-up Condition

SYMPTOM:

ECS00ECN

The lock-up condition cannot be maintained for more than 30 seconds.

TROUBLE DIAGNOSIS FOR SYMPTOMS

DIAGNOSTIC PROCEDURE

1. CHECK A/T FLUID LEVEL

Check the A/T fluid level. Refer to [AT-55, "A/T FLUID CHECK"](#) .

OK or NG

- OK >> GO TO 2.
- NG >> Refill ATF.

2. CHECK STOP LAMP SWITCH CIRCUIT

Check the stop lamp switch circuit. Refer to [BRC-10, "TROUBLE DIAGNOSIS"](#) (with TCS/ABS) or [BRC-55, "TROUBLE DIAGNOSIS"](#) (with VDC/TCS/ABS).

OK or NG

- OK >> GO TO 3.
- NG >> Repair or replace damaged parts.

3. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis.

Is any malfunction detected by self-diagnostic?

- YES >> Check the malfunctioning system.
- NO >> GO TO 4.

4. DETECT MALFUNCTIONING ITEM

1. Control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#) .
2. Disassemble A/T. Refer to [AT-247, "DISASSEMBLY"](#) .
3. Check the following items:
 - Torque converter. Refer to [AT-247, "DISASSEMBLY"](#) .

OK or NG

- OK >> GO TO 5.
- NG >> Repair or replace damaged parts.

5. CHECK TCM

1. Check TCM input/output signal. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> GO TO 6.
- NG >> Repair or replace damaged parts.

6. CHECK SYMPTOM

Check again.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

Lock-up Is Not Released

SYMPTOM:

ECS00ECO

The lock-up condition cannot be cancelled even after releasing the accelerator pedal.

TROUBLE DIAGNOSIS FOR SYMPTOMS

DIAGNOSTIC PROCEDURE

1. CHECK A/T FLUID LEVEL

Check the A/T fluid level. Refer to [AT-55, "A/T FLUID CHECK"](#) .

OK or NG

- OK >> GO TO 2.
- NG >> Refill ATF.

2. CHECK STOP LAMP SWITCH CIRCUIT

Check the stop lamp switch circuit. Refer to [BRC-10, "TROUBLE DIAGNOSIS"](#) (with TCS/ABS) or [BRC-55, "TROUBLE DIAGNOSIS"](#) (with VDC/TCS/ABS).

OK or NG

- OK >> GO TO 3.
- NG >> Repair or replace damaged parts.

3. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis.

Is any malfunction detected by self-diagnostic?

- YES >> Check the malfunctioning system.
- NO >> GO TO 4.

4. DETECT MALFUNCTIONING ITEM

1. Control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#) .
2. Disassemble A/T. Refer to [AT-247, "DISASSEMBLY"](#) .
3. Check the following items:
 - Torque converter. Refer to [AT-247, "DISASSEMBLY"](#) .

OK or NG

- OK >> GO TO 5.
- NG >> Repair or replace damaged parts.

5. CHECK TCM

1. Check TCM input/output signal. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> GO TO 6.
- NG >> Repair or replace damaged parts.

6. CHECK SYMPTOM

Check again.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

A/T Does Not Shift: 5th gear → 4th gear, When Lever Switch “OFF” → “ON” ECS00ECP
SYMPTOM:

A/T does not shift from D5 to D4 , when pushed lever switch to “ON” position. (O/D OFF indicator lamp “ON” and A/T indicator “4”.)

TROUBLE DIAGNOSIS FOR SYMPTOMS

DIAGNOSTIC PROCEDURE

1. CHECK A/T FLUID LEVEL

Check the A/T fluid level. Refer to [AT-55, "A/T FLUID CHECK"](#) .

OK or NG

- OK >> GO TO 2.
- NG >> Refill ATF.

2. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis.

Is any malfunction detected by self-diagnostic?

- YES >> Check the malfunctioning system.
- NO >> GO TO 3.

3. DETECT MALFUNCTIONING ITEM

1. Control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#) .
2. Disassemble A/T. Refer to [AT-247, "DISASSEMBLY"](#) .
3. Check the following items:
 - Forward and direct clutch assembly. Refer to [AT-247, "DISASSEMBLY"](#) .
 - 2nd coast brake. Refer to [AT-266, "Oil Pump, 2nd Coast Brake & 2nd Brake"](#) , [AT-272, "One-Way Clutch Outer Race Sub Assembly & 2nd Coast Brake Hub & One-Way Clutch No.1"](#) .
 - One-way clutch No.1. Refer to [AT-272, "One-Way Clutch Outer Race Sub Assembly & 2nd Coast Brake Hub & One-Way Clutch No.1"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> Repair or replace damaged parts.

4. CHECK TCM

1. Check TCM input/output signal. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> GO TO 5.
- NG >> Repair or replace damaged parts.

5. CHECK SYMPTOM

Check again.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

A/T Does Not Shift: 4th gear → 3rd gear, When Selector Lever “D” → “L” Position

ECS00ECO

SYMPTOM:

A/T does not shift from D4 to L3 , when changed selector lever from “D” to “L” position. (A/T indicator “3”.)

TROUBLE DIAGNOSIS FOR SYMPTOMS

DIAGNOSTIC PROCEDURE

1. CHECK A/T FLUID LEVEL

Check the A/T fluid level. Refer to [AT-55, "A/T FLUID CHECK"](#) .

OK or NG

- OK >> GO TO 2.
- NG >> Refill ATF.

2. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis.

Is any malfunction detected by self-diagnostic?

- YES >> Check the malfunctioning system.
- NO >> GO TO 3.

3. DETECT MALFUNCTIONING ITEM

1. Control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#) .
2. Disassemble A/T. Refer to [AT-247, "DISASSEMBLY"](#) .
3. Check the following items:
 - U/D clutch. Refer to [AT-247, "DISASSEMBLY"](#) .
 - U/D brake. Refer to [AT-247, "DISASSEMBLY"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> Repair or replace damaged parts.

4. CHECK TCM

1. Check TCM input/output signal. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> GO TO 5.
- NG >> Repair or replace damaged parts.

5. CHECK SYMPTOM

Check again.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

A/T Does Not Shift: 3rd gear → 2nd gear, When Lever Switch “OFF” → “ON”

ECS00ECR

SYMPTOM:

A/T does not shift from L3 to L2 , when pushed lever switch to “ON” position. (A/T indicator “2”.)

DIAGNOSTIC PROCEDURE

1. CHECK A/T FLUID LEVEL

Check the A/T fluid level. Refer to [AT-55, "A/T FLUID CHECK"](#) .

OK or NG

- OK >> GO TO 2.
- NG >> Refill ATF.

2. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis.

Is any malfunction detected by self-diagnostic?

- YES >> Check the malfunctioning system.
- NO >> GO TO 3.

3. DETECT MALFUNCTIONING ITEM

1. Control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#) .
2. Disassemble A/T. Refer to [AT-247, "DISASSEMBLY"](#) .
3. Check the following items:
 - U/D brake. Refer to [AT-247, "DISASSEMBLY"](#) .
 - B5 brake. Refer to [AT-274, "Transaxle Case Cover & B5 Brake"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> Repair or replace damaged parts.

4. CHECK TCM

1. Check TCM input/output signal. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> GO TO 5.
- NG >> Repair or replace damaged parts.

5. CHECK SYMPTOM

Check again.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

A/T Does Not Shift: 2nd gear → 1st gear, When Release Accelerator Pedal

ECS00ECS

SYMPTOM:

A/T does not shift from L2 to L1, when releasing accelerator pedal.

DIAGNOSTIC PROCEDURE

1. CHECK A/T FLUID LEVEL

Check the A/T fluid level. Refer to [AT-55, "A/T FLUID CHECK"](#).

OK or NG

- OK >> GO TO 2.
- NG >> Refill ATF.

2. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis.

Is any malfunction detected by self-diagnostic?

- YES >> Check the malfunctioning system.
- NO >> GO TO 3.

3. DETECT MALFUNCTIONING ITEM

1. Control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#).
2. Disassemble A/T. Refer to [AT-247, "DISASSEMBLY"](#).
3. Check the following items:
 - 2nd coast brake. Refer to [AT-266, "Oil Pump, 2nd Coast Brake & 2nd Brake"](#), [AT-272, "One-Way Clutch Outer Race Sub Assembly & 2nd Coast Brake Hub & One-Way Clutch No.1"](#).
 - 2nd brake. Refer to [AT-266, "Oil Pump, 2nd Coast Brake & 2nd Brake"](#).
 - One-way clutch No.1. Refer to [AT-272, "One-Way Clutch Outer Race Sub Assembly & 2nd Coast Brake Hub & One-Way Clutch No.1"](#).
 - One-way clutch No.2. Refer to [AT-247, "DISASSEMBLY"](#).

OK or NG

- OK >> GO TO 4.
- NG >> Repair or replace damaged parts.

4. CHECK TCM

1. Check TCM input/output signal. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#).
2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> GO TO 5.
- NG >> Repair or replace damaged parts.

5. CHECK SYMPTOM

Check again.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

Vehicle Does Not Decelerate By Engine Brake

ECS00ECT

SYMPTOM:

No engine brake is applied when the gear is shifted from the 2nd to 1st gear in “L” position.

DIAGNOSTIC PROCEDURE

1. CHECK A/T FLUID LEVEL

Check the A/T fluid level. Refer to [AT-55, "A/T FLUID CHECK"](#) .

OK or NG

- OK >> GO TO 2.
- NG >> Refill ATF.

2. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis.

Do the self-diagnostic results indicate shift solenoid valve E, electric throttle control system?

- YES >> Check the malfunctioning system. Refer to [AT-171, "DTC P0770 SHIFT SOLENOID VALVE E"](#) , [AT-203, "DTC P1726 ELECTRIC THROTTLE CONTROL SYSTEM"](#) .
- NO >> GO TO 3.

3. DETECT MALFUNCTIONING ITEM

1. Control valve assembly. Refer to [AT-237, "Control Valve Assembly"](#) .
2. Disassemble A/T. Refer to [AT-247, "DISASSEMBLY"](#) .
3. Check the following items:
 - 2nd coast brake. Refer to [AT-266, "Oil Pump, 2nd Coast Brake & 2nd Brake"](#) , [AT-272, "One-Way Clutch Outer Race Sub Assembly & 2nd Coast Brake Hub & One-Way Clutch No.1"](#) .
 - U/D brake. Refer to [AT-247, "DISASSEMBLY"](#) .
 - B5 brake. Refer to [AT-274, "Transaxle Case Cover & B5 Brake"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> Repair or replace damaged parts.

4. CHECK TCM

1. Check TCM input/output signal. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> GO TO 5.
- NG >> Repair or replace damaged parts.

5. CHECK SYMPTOM

Check again.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

ECS00ECU

TCM Self-diagnosis Does Not Activate

SYMPTOM:

O/D OFF indicator lamp does not come on in TCM self-diagnostic procedure even if the lamp circuit is good.

DESCRIPTION

- **Park/neutral position (PNP) switch**
The park/neutral (PNP) switch assembly includes a transmission range switch. The transmission range switch detects the selector lever position and sends a signal to the TCM.
- **Stop lamp switch signal**
Detects the brake pedal state (stop lamp switch is ON or OFF) and sends a signal via CAN communication line to the TCM.
- **Closed throttle position signal**
ECM judges throttle opening based on a signal from accelerator pedal position sensor, and sends the signal via CAN communication line to TCM.

DIAGNOSTIC PROCEDURE

1. CHECK PARK/ NEUTRAL POSITION (PNP) SWITCH CIRCUIT

Check the park/neutral position (PNP) switch circuit. Refer to [AT-91, "DTC P0705 PARK/NEUTRAL POSITION SWITCH"](#).

OK or NG

- OK >> GO TO 2.
- NG >> Repair or replace damaged parts.

2. CHECK STOP LAMP SWITCH CIRCUIT

Check the stop lamp switch circuit. Refer to [BRC-10, "TROUBLE DIAGNOSIS"](#) (with TCS/ABS) or [BRC-55, "TROUBLE DIAGNOSIS"](#) (with VDC/TCS/ABS).

OK or NG

- OK >> GO TO 3.
- NG >> Repair or replace damaged parts.

3. CHECK CLOSED THROTTLE POSITION SIGNAL CIRCUIT

Perform self-diagnosis for ECM. Refer to [EC-49, "Emission-related Diagnostic Information"](#).

OK or NG

- OK >> GO TO 4.
- NG >> Repair or replace damaged parts.

4. CHECK DATA MONITOR (WITH CONSULT-II)

Ⓜ With CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "A/T" with "DATA MONITOR" mode in CONSULT-II.
3. Depress or release accelerator pedal and read out ON/OFF signaling action of the "CLSD THL POS".
4. Depress or release brake pedal and read out ON/OFF signaling action of the "BRAKE SW".

OK or NG

- OK >> GO TO 7.
- NG >> GO TO 5.

DATA MONITOR	
MONITOR	NO DTC
BRAKE SW	OFF
CLSD THL POS	ON

SCIA2946E

TROUBLE DIAGNOSIS FOR SYMPTOMS

5. CHECK TCM

1. Check TCM input/output signal. Refer to [AT-72, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> GO TO 6.

NG >> Repair or replace damaged parts.

6. CHECK CAN COMMUNICATION LINE

Check the CAN communication line. Refer to [AT-84, "DTC U1000 CAN COMMUNICATION LINE"](#) .

OK or NG

OK >> GO TO 7.

NG >> Repair or replace damaged parts.

7. CHECK SYMPTOM

Check again.

OK or NG

OK >> **INSPECTION END**

NG >> Replace the TCM.

A
B
AT
D
E
F
G
H
I
J
K
L
M

A/T SHIFT LOCK SYSTEM

A/T SHIFT LOCK SYSTEM

PFP:34950


Description

ECS00ECX

- The mechanical key interlock mechanism also operates as a shift lock:
With the ignition switch turned to ON, the selector lever cannot be shifted from "P" (parking) to any other position unless the brake pedal is depressed.
With the key removed, the selector lever cannot be shifted from "P" to any other position.
The key cannot be removed unless the selector lever is placed in "P".
- The shift lock and key interlock mechanisms are controlled by the ON-OFF operation of the shift lock solenoid and by the operation of the rotator and slider located inside the key cylinder.

Shift Lock System Electrical Parts Location

ECS00ECY

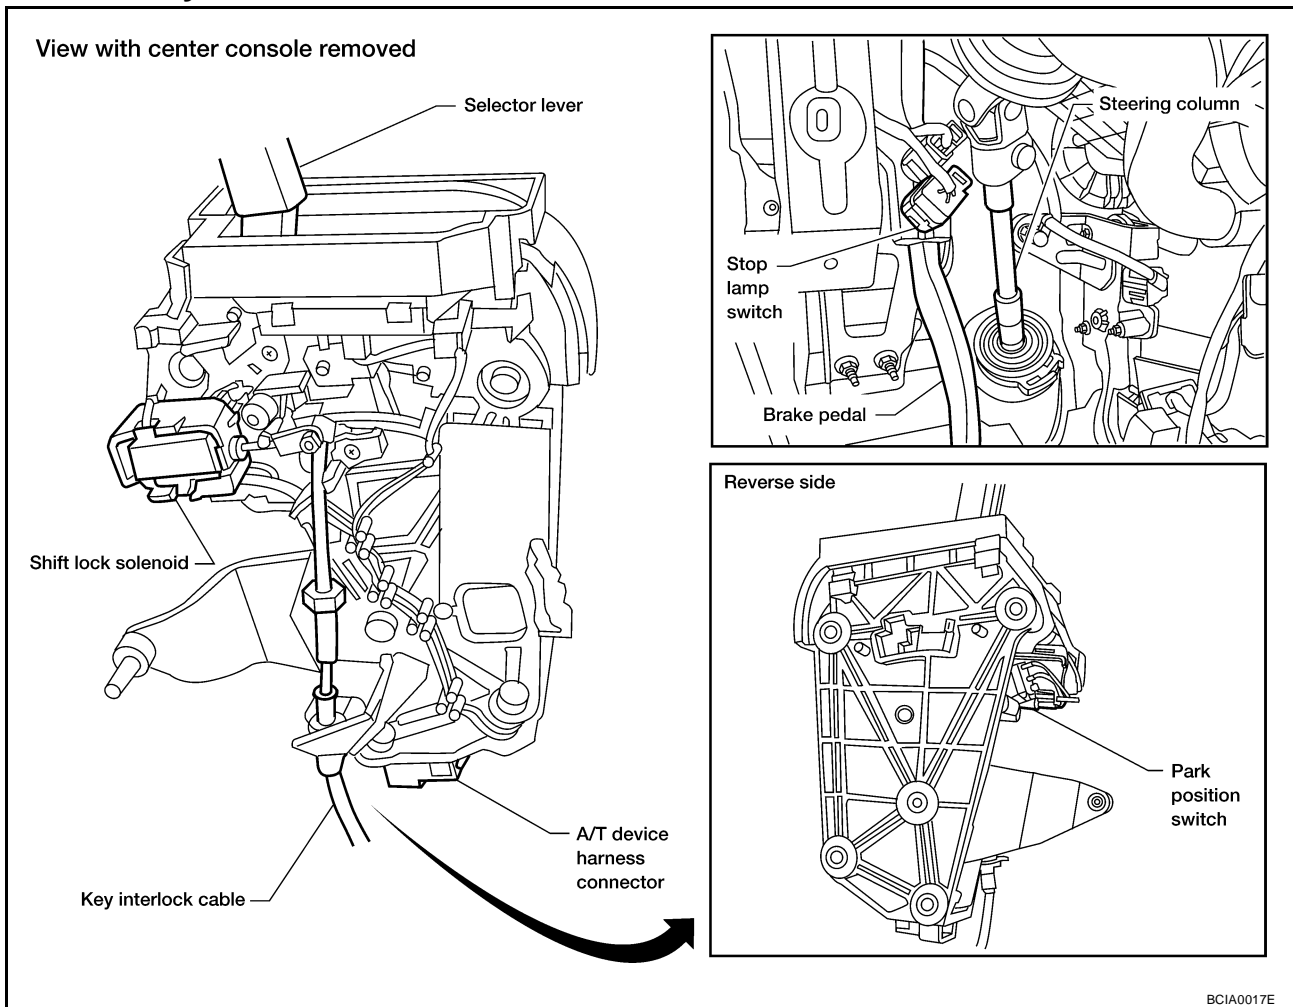


A/T SHIFT LOCK SYSTEM

Wiring Diagram — AT — SHIFT


ECS00ECZ

AT-SHIFT-01

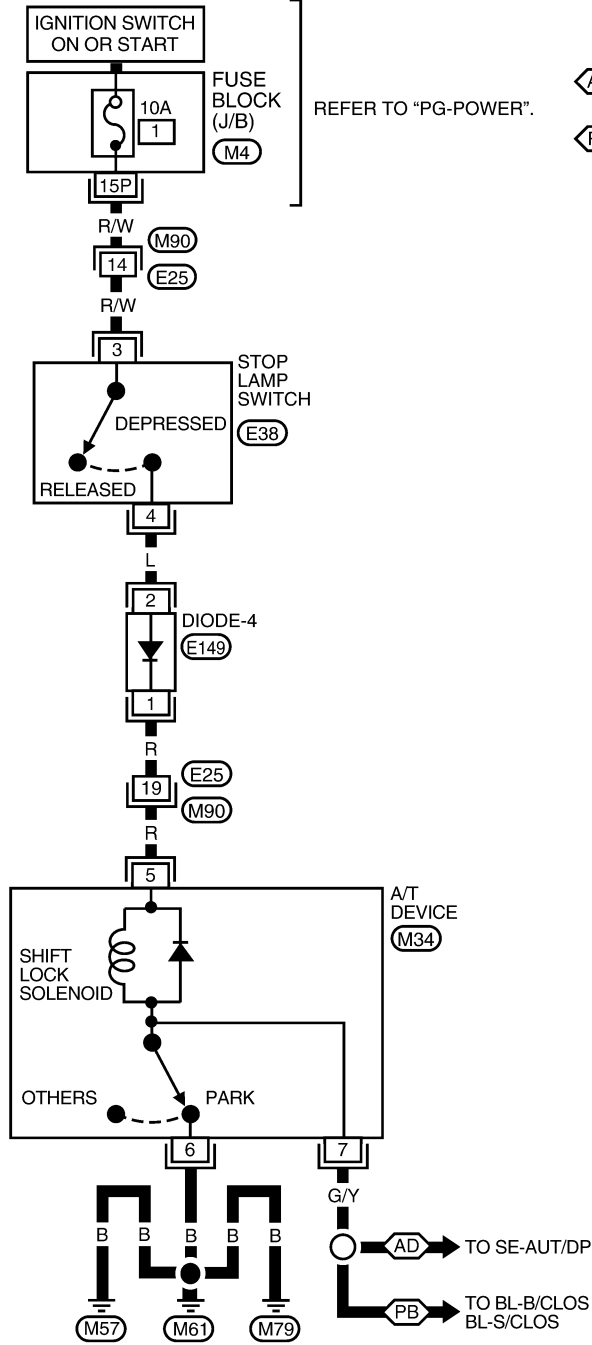

(AD) : WITH AUTOMATIC DRIVE POSITIONER
 (PB) : WITH POWER BACK DOOR

A
B
AT
D
E
F
G
H
I
J
K
L
M



BCWA0603E

A/T SHIFT LOCK SYSTEM

ECS00ED0

Diagnostic Procedure

SYMPTOM 1:

- Selector lever cannot be moved from “P” position with key in ON position and brake pedal applied.
- Selector lever can be moved from “P” position with key in ON position and brake pedal released.
- Selector lever can be moved from “P” position when key is removed from key cylinder.

SYMPTOM 2:

- Ignition key cannot be removed when selector lever is set to “P” position.
- Ignition key can be removed when selector lever is set to any position except “P”.

1. CHECK KEY INTERLOCK CABLE

Check the key interlock cable for damage.

OK or NG

OK >> GO TO 2.

NG >> Repair key interlock cable. Refer to [AT-232, "KEY INTERLOCK CABLE"](#) .

2. CHECK SELECTOR LEVER POSITION

Check the selector lever position for damage.

OK or NG

OK >> GO TO 3.

NG >> Check selector lever. Refer to [AT-236, "Control Cable Adjustment"](#) .

3. CHECK SHIFT LOCK SOLENOID AND PARK POSITION SWITCH

1. Connect A/T device harness connector.
2. Turn ignition switch “ON”.
3. Selector lever is set in “P” position.
4. Check operation sound.

Condition	Brake pedal	Operation sound
When ignition switch is turned to “ON” position and selector lever is set in “P” position.	Depressed	Yes
	Released	No

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 4.

4. CHECK POWER SOURCE


1. Turn ignition switch “ON”. (Do not start engine.)
2. Check the voltage between A/T device harness connector M34 terminal 5 and ground.

Condition	Brake pedal	Data (Approx.)
When ignition switch is turned to “ON” position.	Depressed	Battery voltage
	Released	0V

OK or NG

OK >> GO TO 7.

NG >> GO TO 5.

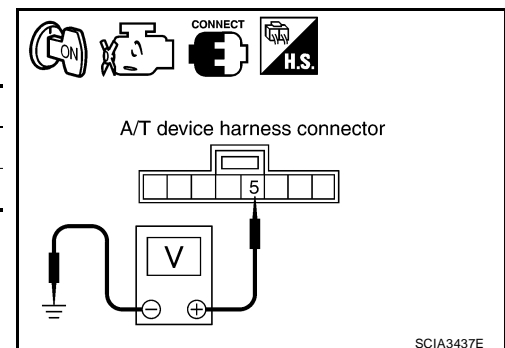

A/T SHIFT LOCK SYSTEM

5. CHECK STOP LAMP SWITCH


1. Turn ignition switch "OFF".
2. Disconnect stop lamp switch harness connector.
3. Check continuity between stop lamp switch harness connector E38 terminals 3 and 4.

Condition	Continuity
When brake pedal is depressed	Yes
When brake pedal is released	No

Check stop lamp switch after adjusting brake pedal — refer to [BR-6, "BRAKE PEDAL"](#) .

OK or NG

- OK >> GO TO 6.
- NG >> Repair or replace damaged parts.

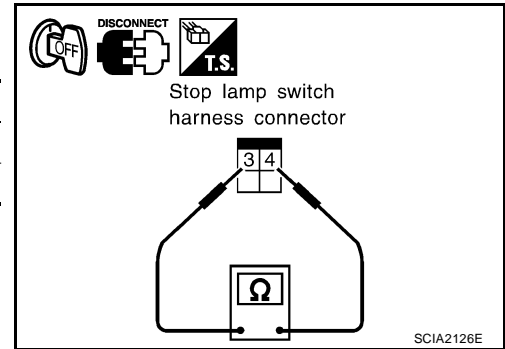

6. DETECT MALFUNCTIONING ITEM

Check the following items. If any items are damaged, repair or replace damaged parts.

- 10A fuse [No.1, located in the fuse block (J/B)]
- Harness for short or open between ignition switch and stop lamp switch harness connector E38 terminal 3.
- Harness for short or open between stop lamp switch harness connector E38 terminal 4 and diode-4 harness connector E149 terminal 2.
- Harness for short or open between diode-4 harness connector E149 terminal 1 and A/T device harness connector M34 terminal 5.
- Diode-4
- Ignition switch (Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) .)

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.

7. CHECK GROUND CIRCUIT


1. Turn ignition switch "OFF".
2. Disconnect A/T device harness connector.
3. Check continuity between A/T device harness connector M34 terminal 6 and ground.

Continuity should exist.

4. Connect A/T device harness connector.

OK or NG

- OK >> Replace shift lock solenoid or park position switch.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

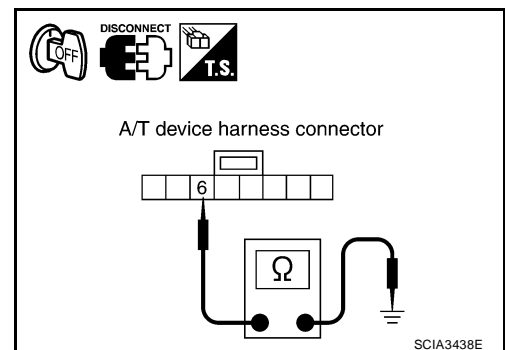


SHIFT CONTROL SYSTEM

SHIFT CONTROL SYSTEM

PF3:34901

Removal and Installation CONTROL DEVICE

ECS00ECV

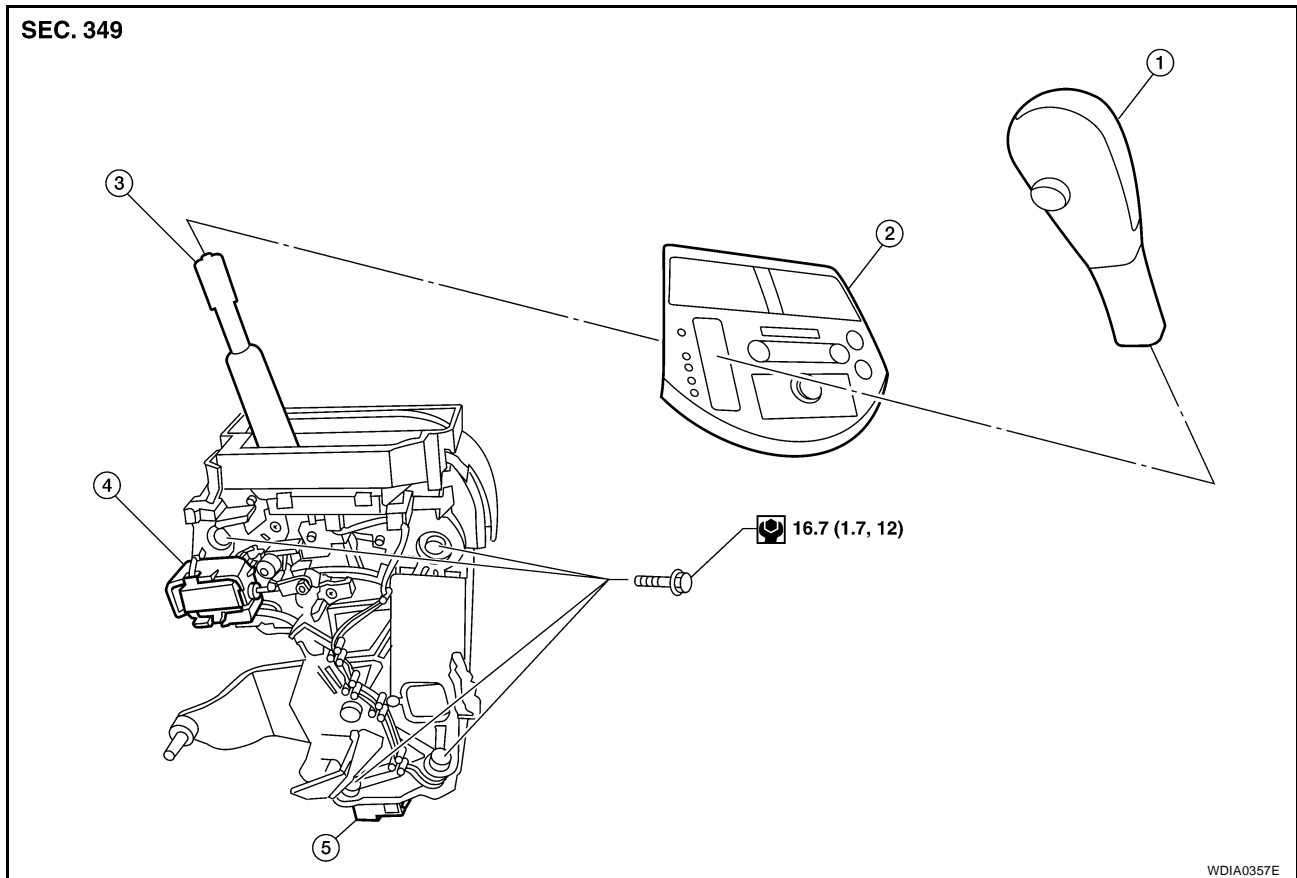


- | | | |
|------------------------|---------------------------------|-------------------|
| 1. Selector knob | 2. Cluster lid C | 3. Selector lever |
| 4. Shift lock solenoid | 5. A/T device harness connector | |

SELECTOR KNOB

Removal

- ← : Front of vehicle
1. Slide the selector knob cover (1) downwards with fingers to reveal the selector knob clip (2).
 2. Gently pry the selector knob clip (2) outward to remove it using suitable tool.
 3. Lift the selector knob up to remove.

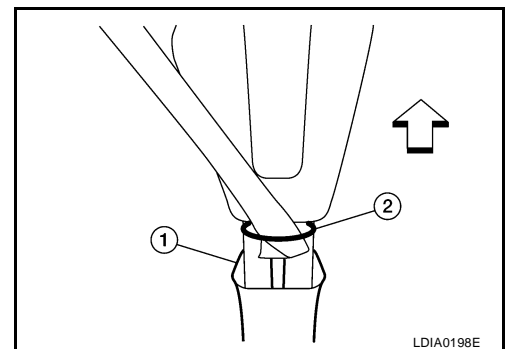


Installation

1. Set the selector knob in place on the selector lever and push the selector knob downward.
2. Install the selector knob clip into the groove on the selector knob.
3. Slide the selector knob cover upwards to conceal the selector knob clip.

SHIFT CONTROL SYSTEM

CONTROL CABLE

SEC. 349

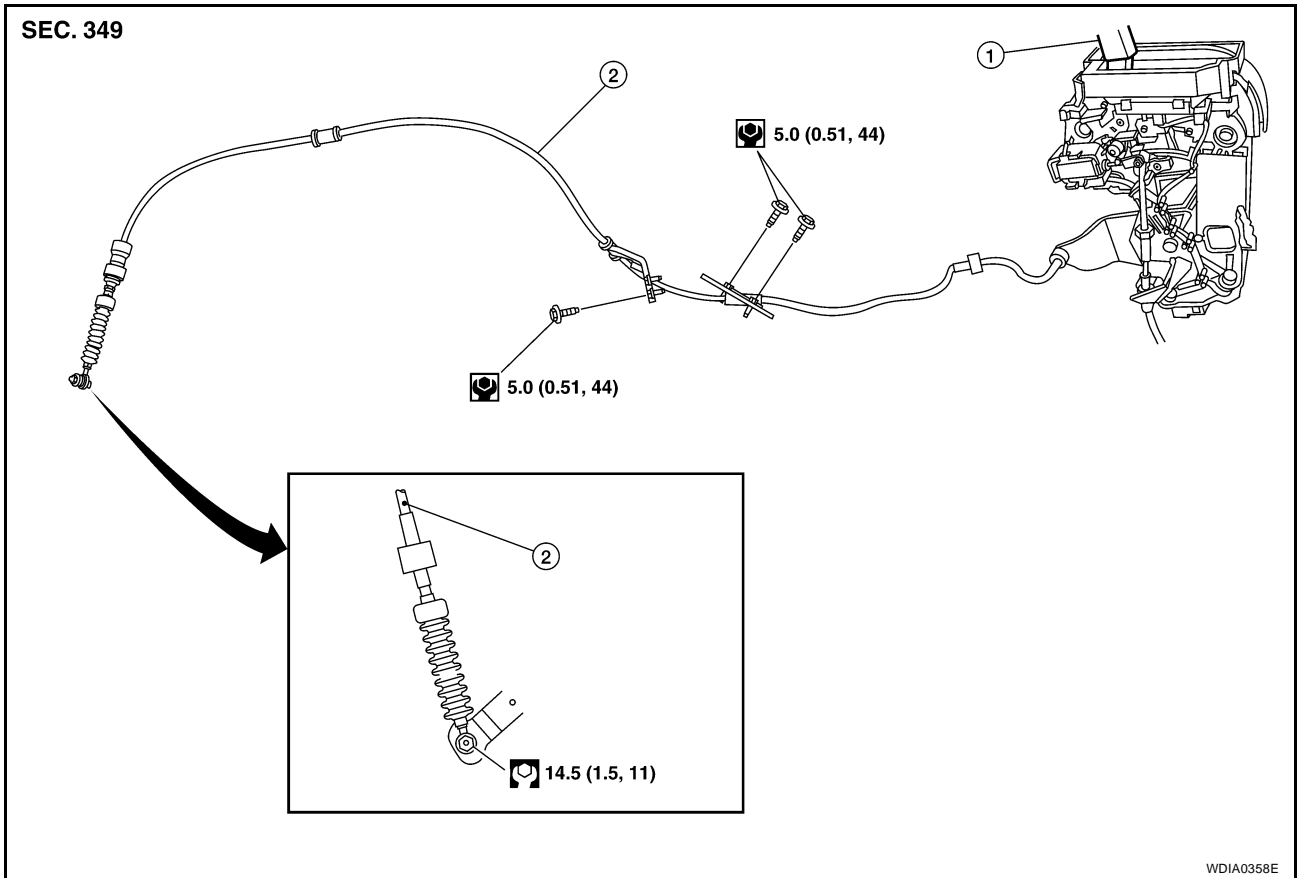

1. Selector lever

2. Control cable

A

B

AT

D

E

F

G

H

I

J

K

L

M


KEY INTERLOCK CABLE

KEY INTERLOCK CABLE

PFP:34908

Components

ECS00ED1

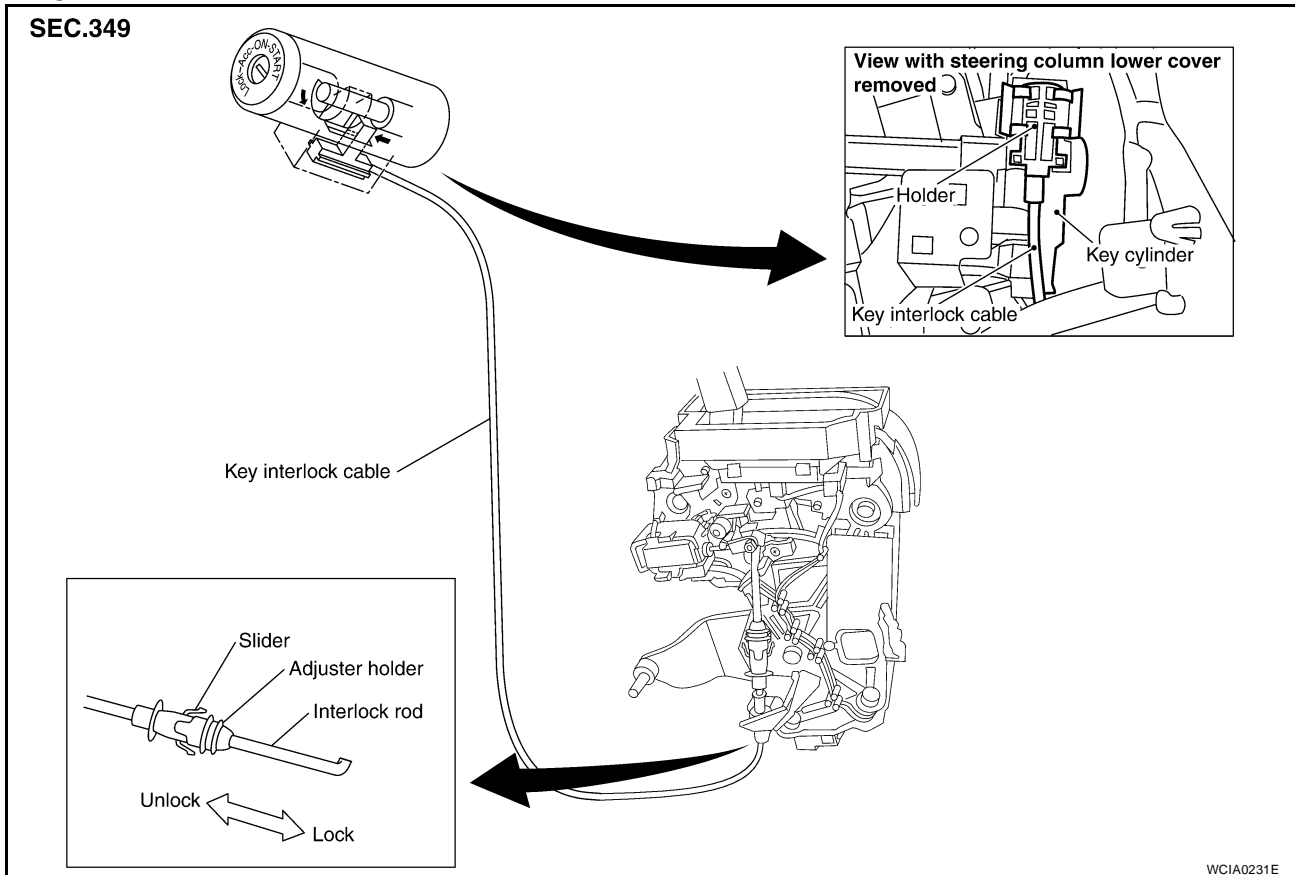


CAUTION:

- Install key interlock cable in such a way that it will not be damaged by sharp bends, twists or interference with adjacent parts.
- After installing key interlock cable to control device, make sure that casing cap and bracket are firmly secured in their positions. If casing cap can be removed with an external load of less than 39.2 N (4.0 kg, 8.8 lb), replace key interlock cable with new one.

Removal


ECS00ED2

1. Unlock slider by squeezing lock tabs on slider from adjuster holder.
2. Remove casing cap from bracket of control device and remove interlock rod from cable.

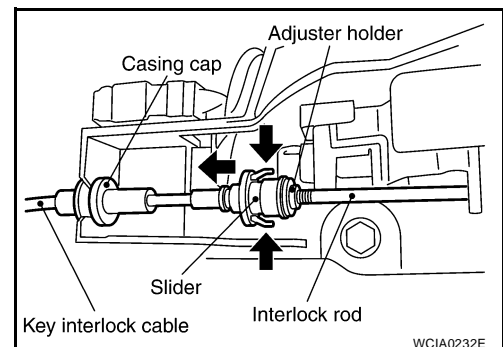


KEY INTERLOCK CABLE

3. Remove holder from key cylinder and remove key interlock cable.

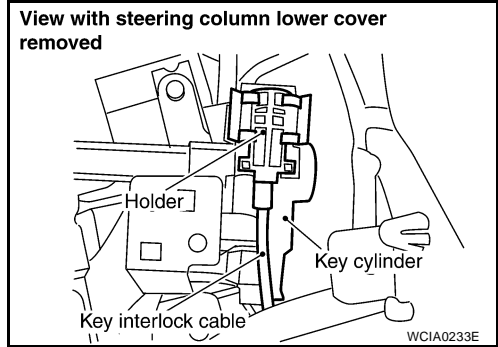


Installation

1. Set key interlock cable to key cylinder and install holder.
2. Turn ignition key to lock position.
3. Set selector lever to P position.

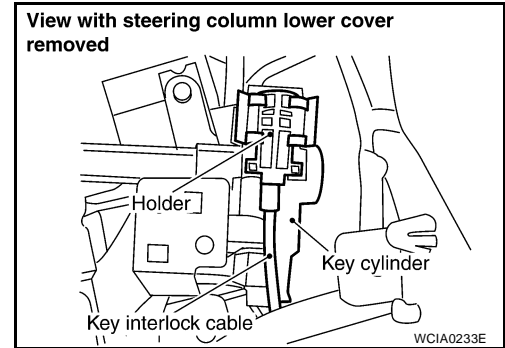

4. Insert interlock rod into adjuster holder.
5. Install casing cap to bracket.
6. Move slider in order to secure adjuster holder to interlock rod.

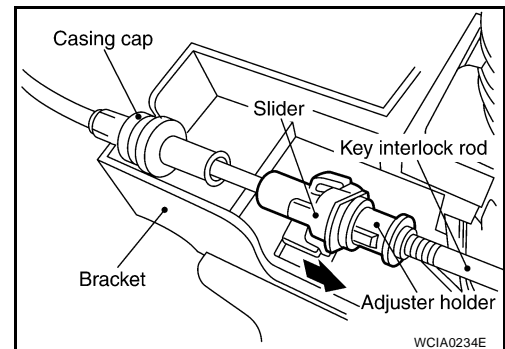

A
B
AT
D
ECS00ED3
E
F
G
H
I
J
K
L
M


ON-VEHICLE SERVICE

PFP:00000

Revolution Sensor Replacement

ECS00ED4


1. Remove intake air duct.
2. Disconnect electrical connector.
3. Remove revolution sensor from A/T.
4. Reinstall any part removed.
 - **Do not reuse seal bolt.**

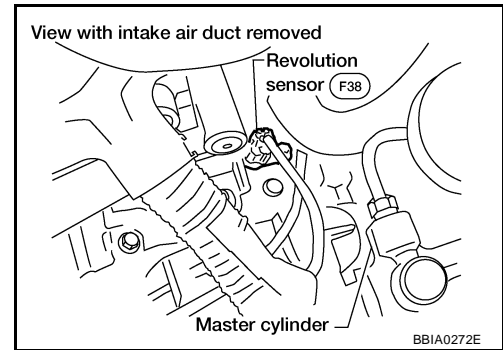

Turbine Revolution Sensor Replacement

ECS00ED5

1. Remove battery and bracket.
2. Disconnect electrical connector.
3. Remove bolt, and turbine revolution sensor from A/T.
4. Reinstall any part removed.
 - **Do not reuse seal bolt.**


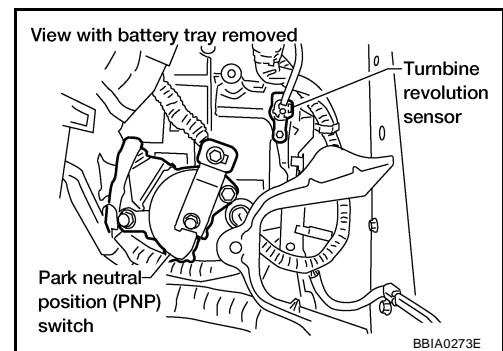


Park/Neutral Position (PNP) Switch Adjustment

ECS00ED6

1. Remove battery and bracket.
2. Remove cable from range lever.
3. Set range lever in neutral position.
4. Remove range lever and install Tool.

Tool number : KV911J0060 (J-45404)
5. Loosen park/neutral position (PNP) switch bolts.
6. Adjust PNP switch so that Tool pointer aligns with neutral base line on PNP switch body.
7. Tighten PNP switch bolts.
8. Reinstall range lever and cable.
9. Adjust control cable. Refer to [AT-236, "Control Cable Adjustment"](#) .
10. Reinstall battery and bracket.
11. Check continuity of PNP switch. Refer to [AT-95, "Component Inspection"](#) .

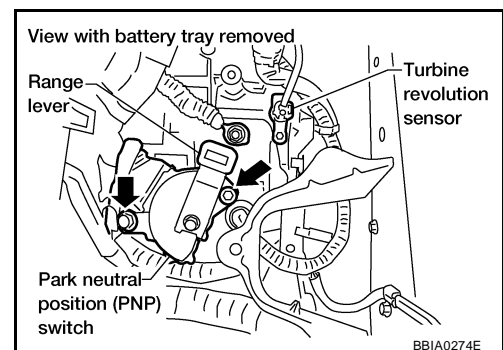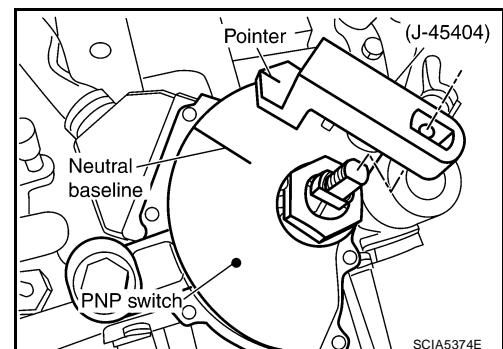

ON-VEHICLE SERVICE

ECS00ED7


ATF Cooler REMOVAL

1. Drain ATF.
2. Drain engine coolant. Refer to [MA-13, "Changing Engine Coolant"](#).
3. Remove hose clamps and hoses from ATF cooler.
4. Remove bolt from ATF cooler and remove ATF cooler.

INSTALLATION


Installation is the reverse order of removal.

- Do not reuse sealing parts.

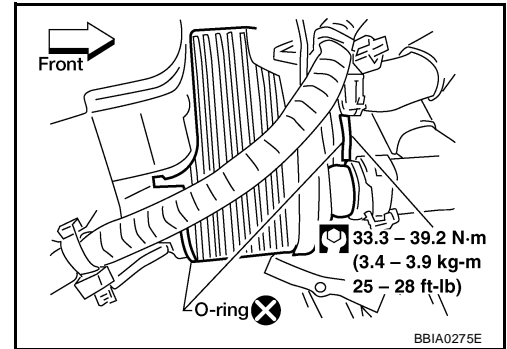

ATF Cooler Valve

ECS00ED8

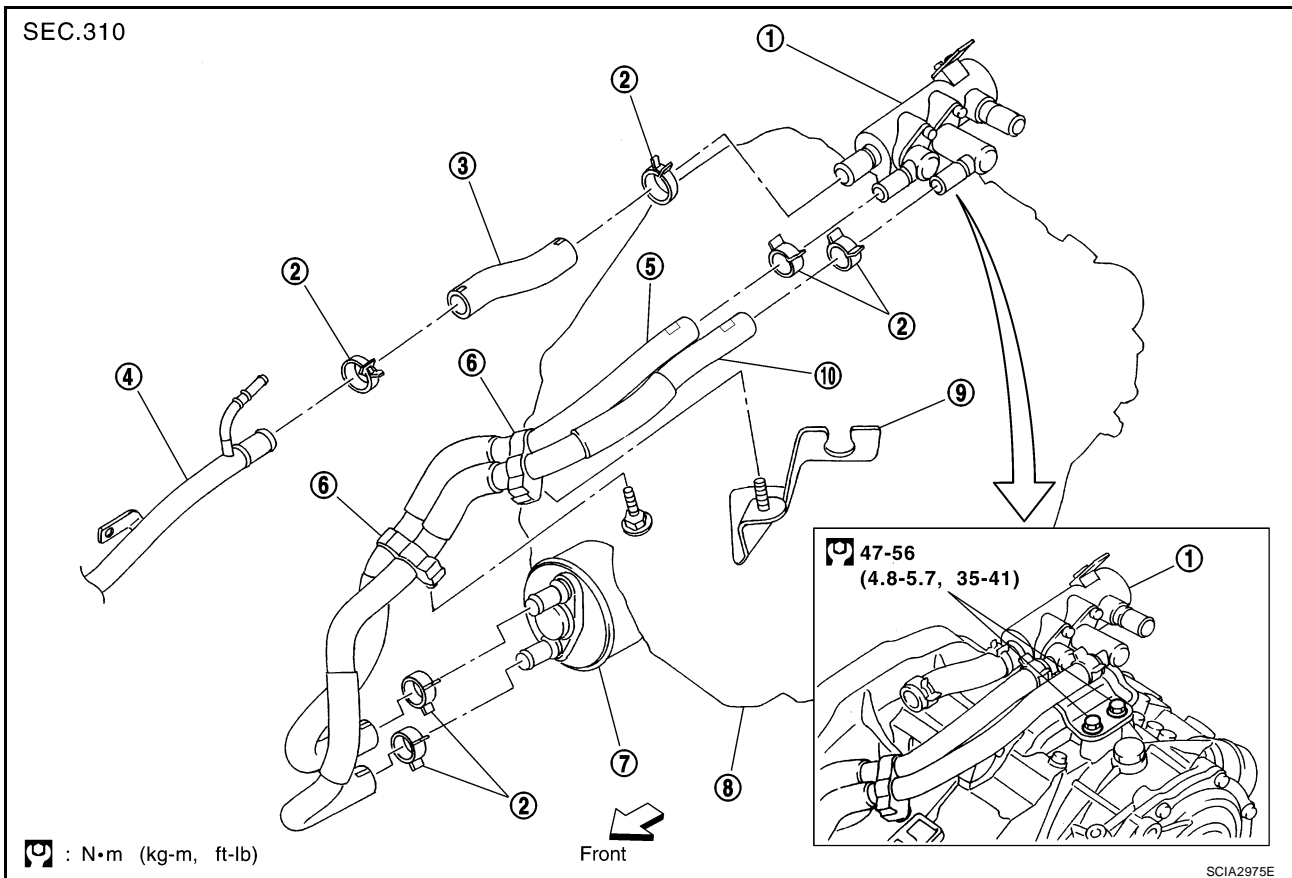

- | | | |
|------------------------------|-----------------------|--------------------------|
| 1. ATF cooler valve assembly | 2. Hose clamp | 3. Heater hose |
| 4. Heater pipe | 5. Outlet water hose | 6. Hose clip |
| 7. ATF cooler assembly | 8. Transaxle assembly | 9. Control cable bracket |
| 10. Inlet water hose | | |


ON-VEHICLE SERVICE

COMPONENT INSPECTION


1. Make sure that ATF cooler valve is fully opened at room temperature.

Dimension "A": More than 72.0 mm (2.835 in)

A: Distance between ATF cooler valve port end face and valve shaft end face.

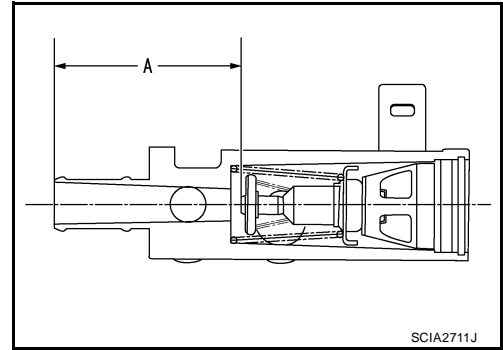


2. Submerge ATF cooler valve in a water-filled container, and then heat it up with temperature of over 82°C (180°F) for 10 minutes more.

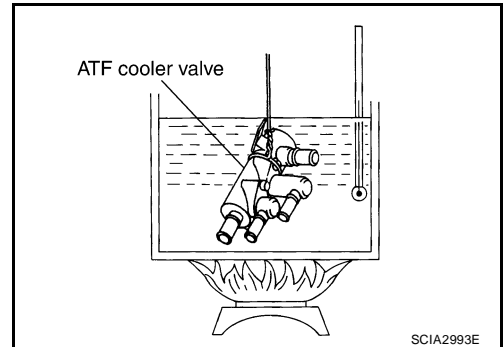

3. Make sure that ATF cooler valve is fully closed.

Dimension "A": Less than 66.5 mm (2.618 in)

A: Distance between ATF cooler valve port end face and valve shaft end face.

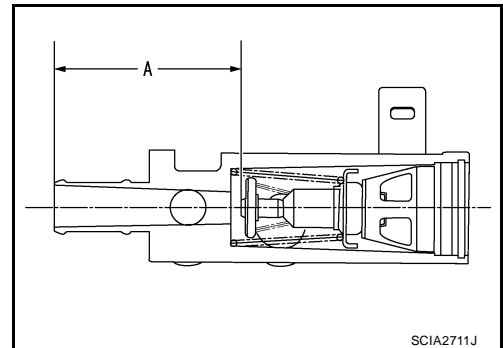

Control Cable Adjustment

Move selector lever from the P position to the D position. You should be able to feel the detent in each position. If the detent cannot be felt or the pointer indicating the position is improperly aligned, the control cable needs adjustment.

1. Place selector lever in the P position.


CAUTION:

Turn wheels more than 1/4 turn and apply the parking brake.

2. Loosen control cable lock nut.
3. Using the specified force, push control cable in the direction of the arrow shown.

Specified force : 9.8 N (1.0 kg, 2.2 lb)

4. Tighten control cable lock nut.
5. Move selector lever from P to D position. Make sure that selector lever moves smoothly.
 - Make sure that the starter operates when the selector lever is placed in the N or P position.
 - Make sure that the transmission is locked properly when the selector lever is placed in the P position.

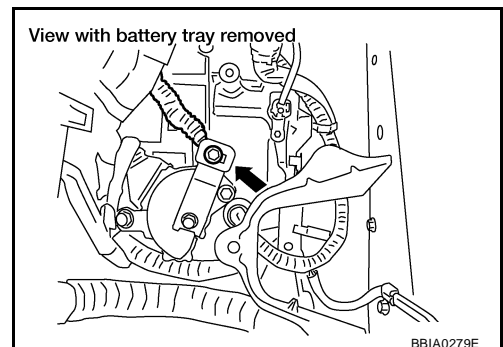


ON-VEHICLE SERVICE

Side cover REMOVAL

ECS00EDA

1. Remove engine under cover.
2. Drain ATF. Refer to [MA-24, "Changing A/T Fluid"](#).
3. Remove side cover bolts and side cover.

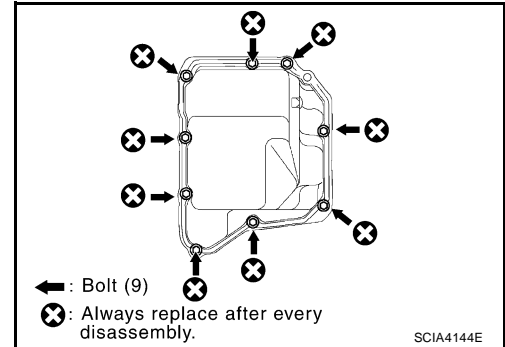


INSTALLATION

Installation is the reverse order of removal. Refer to [AT-240, "Components"](#).

Control Valve Assembly REMOVAL

ECS00EDB

1. Remove side cover. Refer to [AT-237, "Side cover"](#).
2. Disconnect solenoid valve connectors.
3. Disconnect control valve assembly bolts and remove control valve assembly.

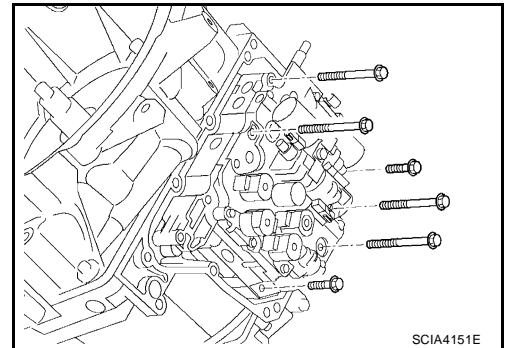


INSTALLATION

Installation is the reverse order of removal.

- Install bolts in sequence as shown. Refer to [AT-240, "Components"](#) for specified torque.

Bolt symbol	Length mm (in)	Number of bolts
A	55 (2.17)	2
B	50 (1.97)	2
C	16 (0.63)	2

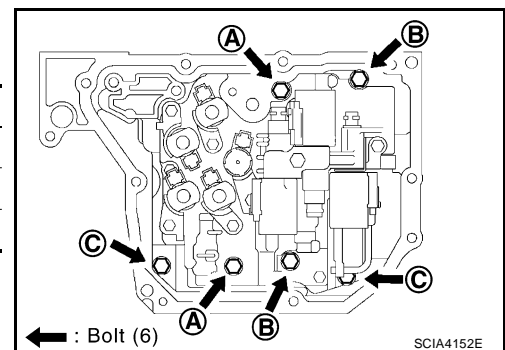


Transmission wire REMOVAL

ECS00EDC

1. Remove PNP switch. Refer to [AT-240, "Components"](#).
2. Remove side cover. Refer to [AT-237, "Side cover"](#).

ON-VEHICLE SERVICE

3. Disconnect solenoid valve connectors.
4. Remove transmission wire.

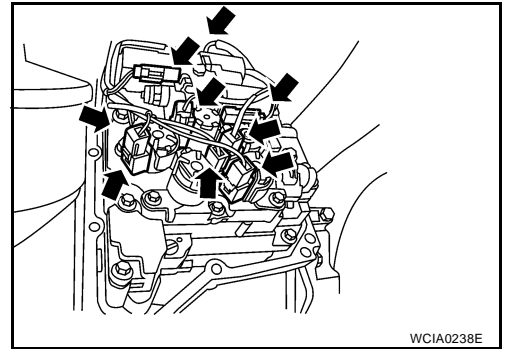

INSTALLATION

Installation is the reverse order of removal.

REMOVAL AND INSTALLATION

PFP:00000

REMOVAL AND INSTALLATION

ECS00EDD

Removal

Remove the engine and transaxle assembly from the vehicle. Refer to [EM-112, "ENGINE ASSEMBLY"](#) .

ECS00EDE

Inspection After Removal

- Drive plate runout

CAUTION:



Do not allow any magnetic materials to contact the ring gear teeth.

Maximum allowable runout: Refer to [EM-143, "DRIVE PLATE"](#) .

- If this runout is out of allowance, replace drive plate and ring gear.

- When connecting torque converter to transaxle, measure distance "A" to be certain that they are correctly assembled.

Distance "A" : 14 mm (0.55 in) or more

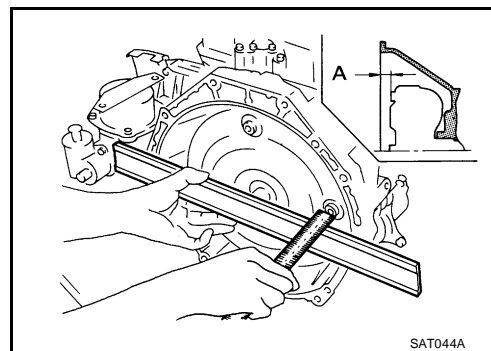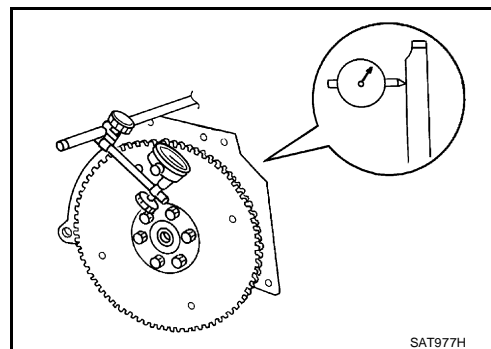

ECS00EDF

Installation

- Installation is in the reverse order of removal.
- When replacing the A/T assembly, initialize TCM. Refer to [AT-8, "Precautions for A/T Assembly or TCM Replacement"](#) .
- Perform road test. Refer to [AT-58, "ROAD TEST"](#) .

A
B
AT
D
E
F
G
H
I
J
K
L
M


OVERHAUL

PFP:00000

ECS00EDG

OVERHAUL Components

SEC.313 · 314 · 315 · 316

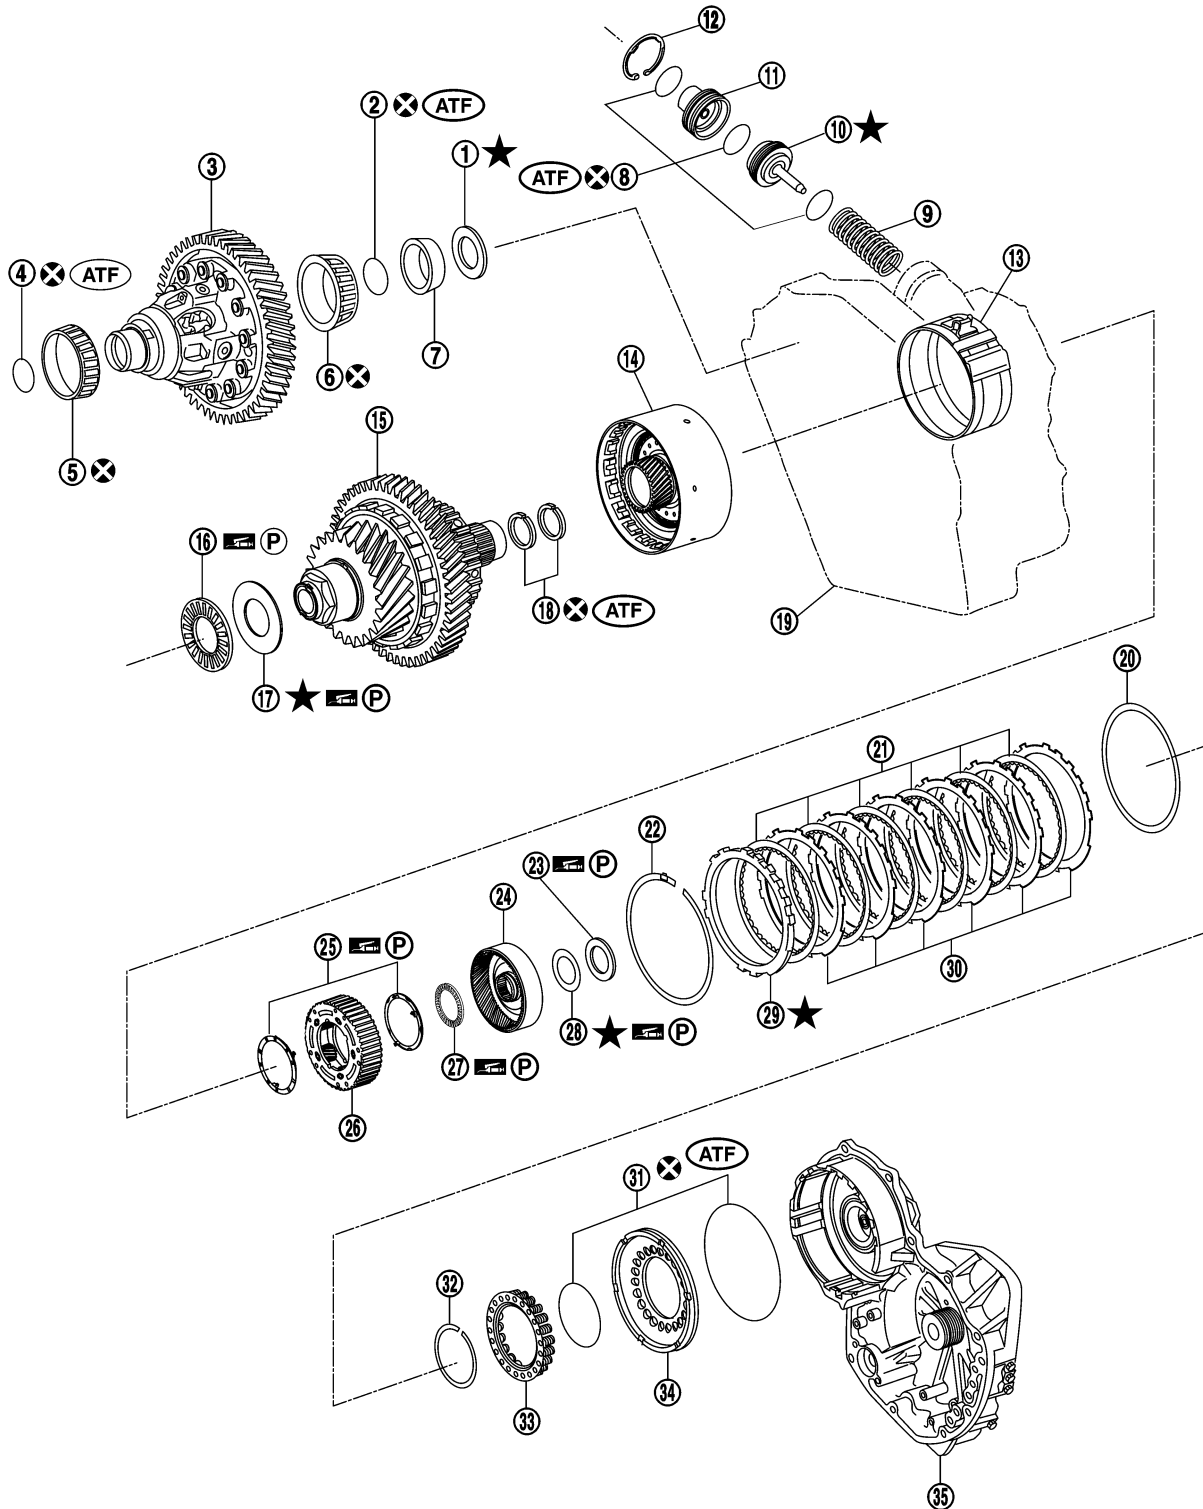

(P) : Apply petroleum jelly.

: Apply ATF.

★ : Select with proper thickness.

⊗ : Always replace after every disassembly.

SCIA5433E

OVERHAUL

-
- | | | | |
|----------------------------------|---------------------------------------|---|----|
| 1. Adjust shim | 2. O-ring | 3. Differential gear assembly | A |
| 4. O-ring | 5. Tapered roller bearing | 6. Tapered roller bearing | B |
| 7. Outer race | 8. O-ring | 9. Compression spring | B |
| 10. U/D brake piston assembly | 11. U/D brake damper assembly | 12. Snap ring | B |
| 13. U/D brake band assembly | 14. U/D clutch assembly | 15. U/D gear assembly | B |
| 16. Thrust needle roller bearing | 17. Thrust bearing race | 18. Seal ring | B |
| 19. Transaxle case | 20. B5 brake cushion plate | 21. B5 brake disc | AT |
| 22. Snap ring | 23. Thrust bearing race | 24. U/D RR planetary ring gear sub assembly | AT |
| 25. Thrust bearing race | 26. U/D RR planetary carrier assembly | 27. Thrust needle roller bearing | D |
| 28. Adjust shim | 29. B5 brake flange | 30. B5 brake plate | D |
| 31. O-ring | 32. Snap ring | 33. Return spring | D |
| 34. B5 brake piston | 35. Transaxle case cover | | E |

E

F

G

H

I

J


K

L

M

OVERHAUL

SEC.313 · 314 · 315 · 316

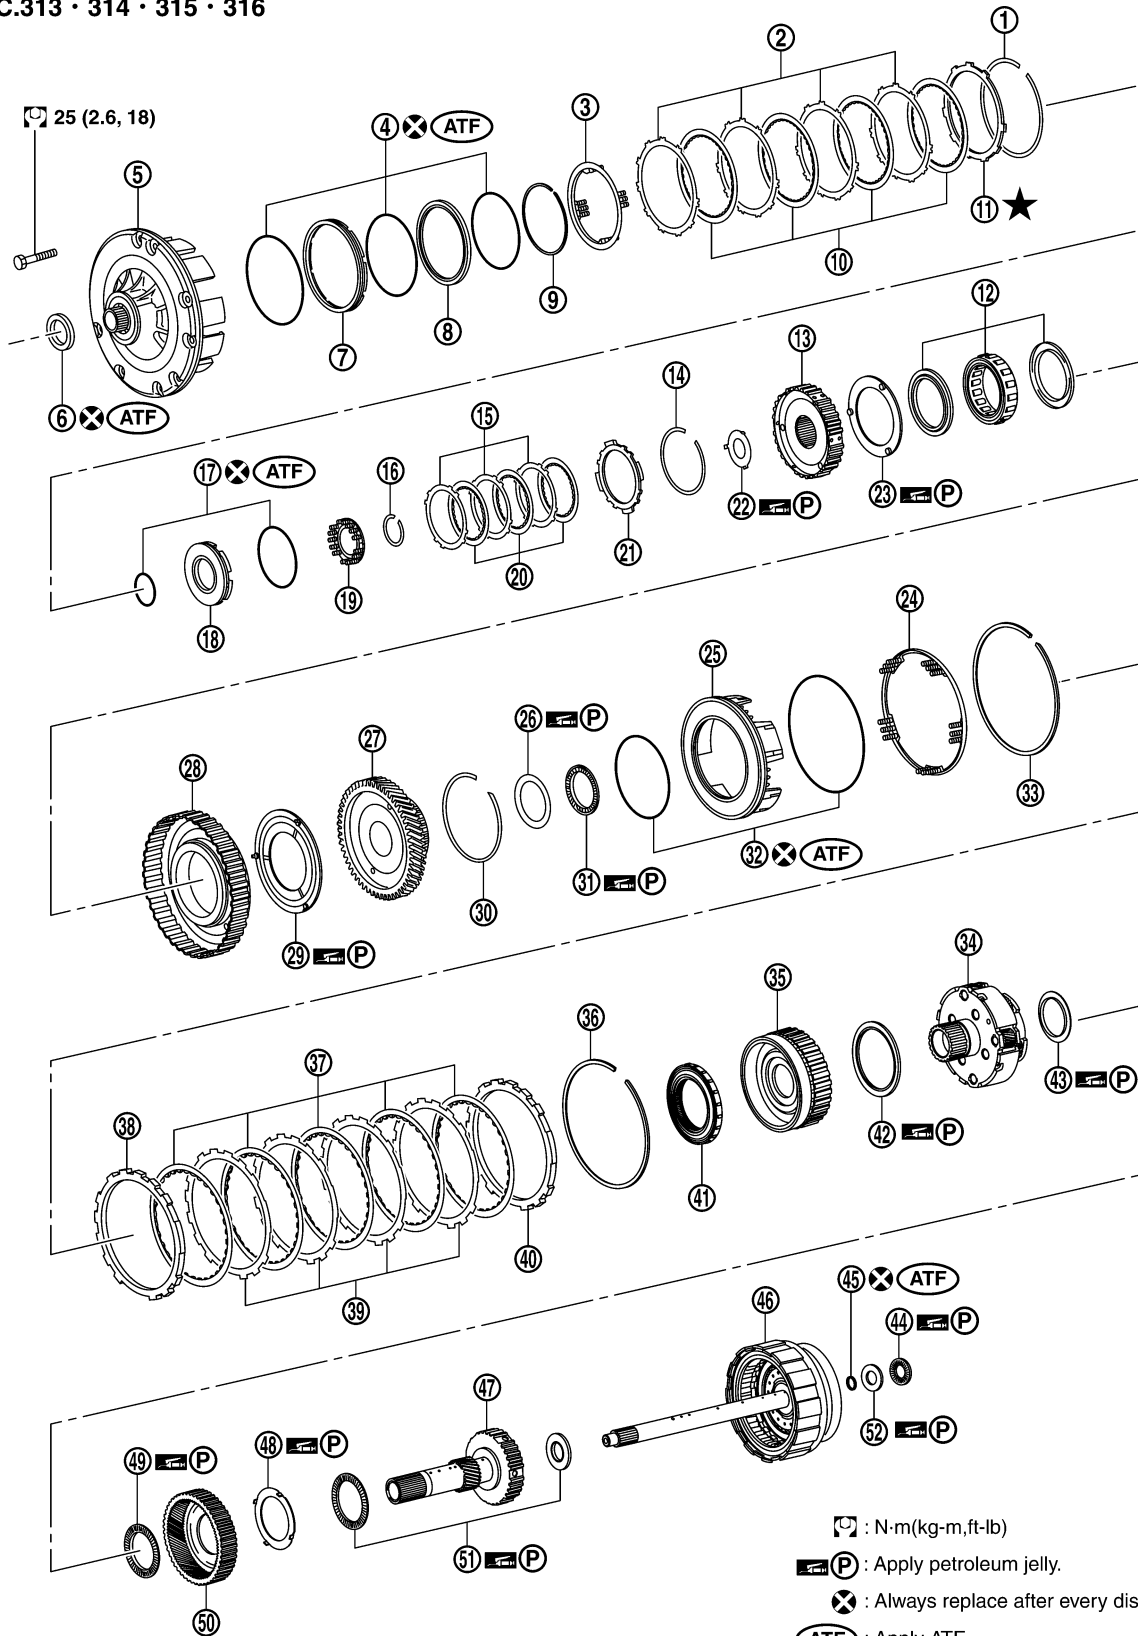

☞ : N·m(kg·m,ft·lb)

☞ (P) : Apply petroleum jelly.

☞ (X) : Always replace after every disassembly.

☞ (ATF) : Apply ATF.

★ : Select with proper thickness.

- 1. Snap ring
- 4. O-ring
- 7. 2nd brake piston

- 2. 2nd brake plate
- 5. Oil pump assembly
- 8. 2nd brake sleeve

- 3. Return spring
- 6. Oil seal
- 9. Snap ring

SCIA5434E


OVERHAUL

-
- | | | | |
|--|-------------------------------------|-------------------------------------|-----------|
| 10. 2nd brake disc | 11. 2nd brake flange | 12. One-way clutch No.1 | |
| 13. 2nd coast brake hub | 14. Snap ring | 15. 2nd coast brake plate | A |
| 16. Snap ring | 17. O-ring | 18. 2nd coast brake piston | |
| 19. Return spring | 20. 2nd coast brake disc | 21. 2nd coast brake flange | B |
| 22. Thrust washer | 23. Thrust washer | 24. Return spring | |
| 25. 1st and reverse brake piston | 26. Thrust bearing race | 27. Counter drive gear sub assembly | |
| 28. One-way clutch outer race sub assembly | 29. Thrust washer | 30. Snap ring | AT |
| 31. Thrust bearing | 32. O-ring | 33. Snap ring | |
| 34. Planetary gear assembly | 35. FR planetary ring gear assembly | 36. Snap ring | D |
| 37. 1st and reverse brake disc | 38. 1st and reverse brake flange | 39. 1st and reverse brake plate | |
| 40. 1st and reverse brake flange | 41. One-way clutch No.2 | 42. Thrust bearing | E |
| 43. Thrust bearing race | 44. Thrust needle roller bearing | 45. Seal ring | |
| 46. Forward and direct clutch assembly | 47. Planetary sun gear sub assembly | 48. Thrust bearing race | F |
| 49. Thrust needle roller bearing | 50. RR planetary ring gear assembly | 51. Thrust needle roller bearing | |
| 52. Thrust bearing race | | | G |

A
B
AT
D
E
F
G
H
I
J
K
L
M

OVERHAUL

SEC. 310·311·315·317·319·381

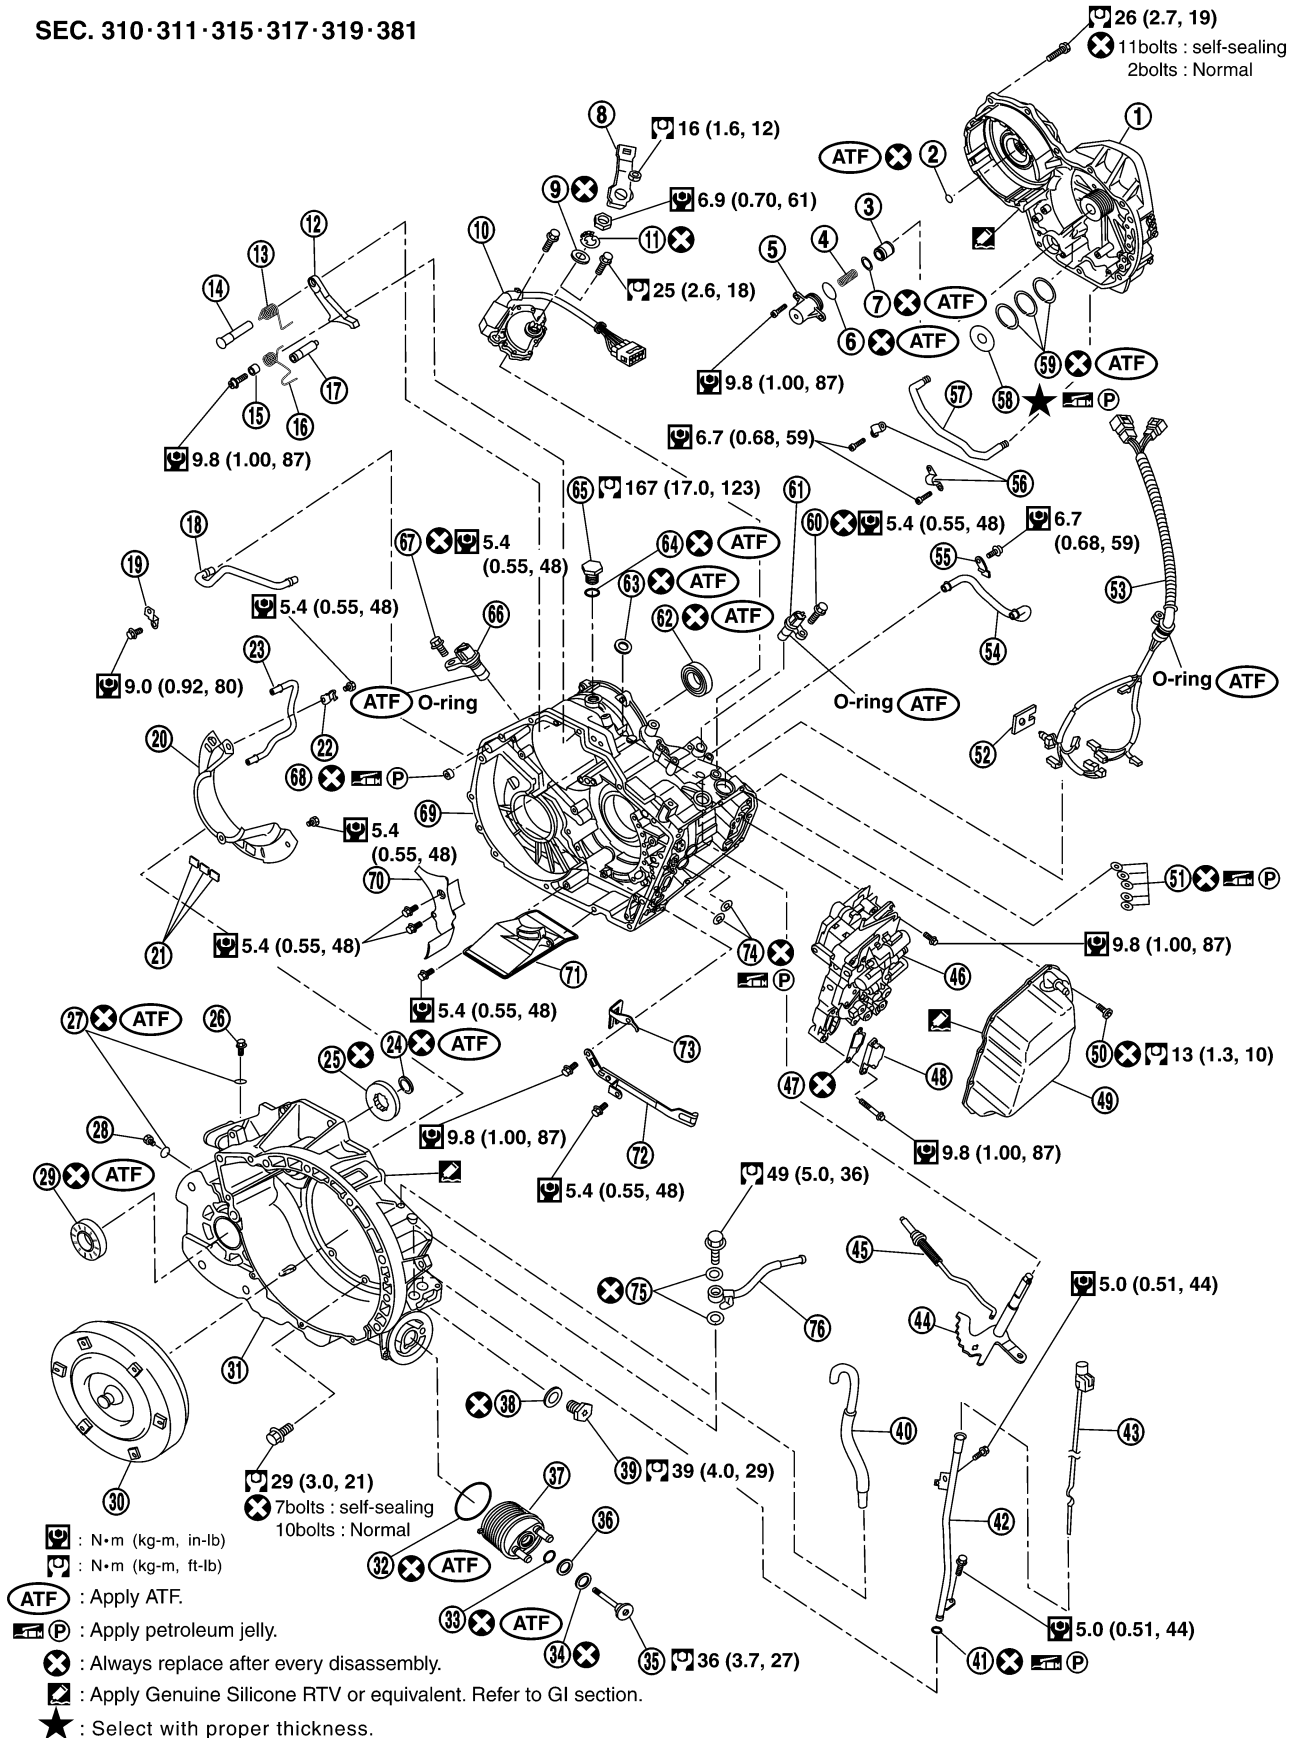

SCIA5435E

- | | | |
|-------------------------|----------------------|--------------------------------------|
| 1. Transaxle case cover | 2. Seal ring | 3. Forward clutch accumulator piston |
| 4. Compression spring | 5. Accumulator cover | 6. O-ring |
| 7. Seal ring | 8. Range lever | 9. Washer plate |

OVERHAUL

- | | | |
|--|---|--|
| <ul style="list-style-type: none"> 10. PNP switch 13. Torsion spring No.1 16. Torsion spring No.2 19. Tube clamp 22. Tube clamp 25. Thrust roller bearing 28. Straight screw plug 31. Transaxle housing 34. Spring washer 37. ATF cooler assembly 40. Air breather hose 43. A/T fluid level gauge 46. Control valve assembly 49. Side cover 52. Sensor clamp 55. Tube clamp 58. Bearing race 61. Turbine revolution sensor 64. O-ring 67. Seal bolt 70. Oil reservoir plate 73. Parking lock pawl bracket 76. Fluid cooler tube | <ul style="list-style-type: none"> 11. Lock washer 14. Parking lock pawl shaft 17. Parking lockpin sub assembly 20. Oil reservoir plate 23. Differential gear lube apply tube 26. Straight screw plug 29. Differential side oil seal 32. O-ring 35. Hexagon bolt 38. gasket 41. O-ring 44. Manual valve lever sub assembly 47. Suction cover gasket 50. Seal bolt 53. Transmission wire 56. Tube clamp 59. Seal ring 62. Differential side oil seal 65. Anchor bolt 68. Governor apply gasket 71. Oil strainer sub assembly 74. Governor apply gasket | <ul style="list-style-type: none"> 12. Parking lock pawl 15. Spring guide sleeve 18. U/D brake apply tube sub assembly 21. Oil cleaner magnet 24. Seal ring 27. O-ring 30. Torque converter 33. O-ring 36. Washer 39. Drain plug 42. A/T fluid charging pipe 45. Parking lock rod sub assembly 48. Suction cover 51. Governor apply gasket 54. Transaxle lube apply tube 57. U/D clutch apply tube sub assembly 60. Seal bolt 63. Manual valve oil seal 66. Revolution sensor 69. Transaxle case 72. Manual detent spring sub assembly 75. Copper washer |
|--|---|--|

A
 B
AT
 D
 E
 F
 G
 H
 I
 J
 K
 L
 M

OVERHAUL

Locations of Needle Bearings, Bearing Races and Thrust Washers


ECS00EDH

Outer and inner diameter of bearing races

Item number	Outer diameter mm (in)	Inner diameter mm (in)	Parts number*
A	57.70 (2.2716)	37.00 (1.4567)	31435 8Y020
B	77.60 (3.0551)	66.80 (2.6299)	31508 8Y010
C*	71.00 (2.7953)	49.10 (1.9331)	31435 8Y068
D*	41.00 (1.6142)	22.00 (0.8661)	31435 8Y060
E	41.00 (1.6142)	13.50 (0.5315)	31435 8Y011
F	74.00 (2.9134)	53.00 (2.0866)	31435 8Y001
G	61.00 (2.4016)	43.20 (1.7008)	31435 8Y002
H	58.00 (2.2835)	43.80 (1.7244)	31435 8Y022

Outer and inner diameter of thrust washers

Item number	Outer diameter mm (in)	Inner diameter mm (in)	Parts number*
Q	99.30 (3.9094)	56.50 (2.2244)	31508 8Y000
R	77.30 (3.0433)	56.50 (2.2244)	31508 8Y001
S	74.30 (2.9252)	47.00 (1.8504)	31508 8Y002

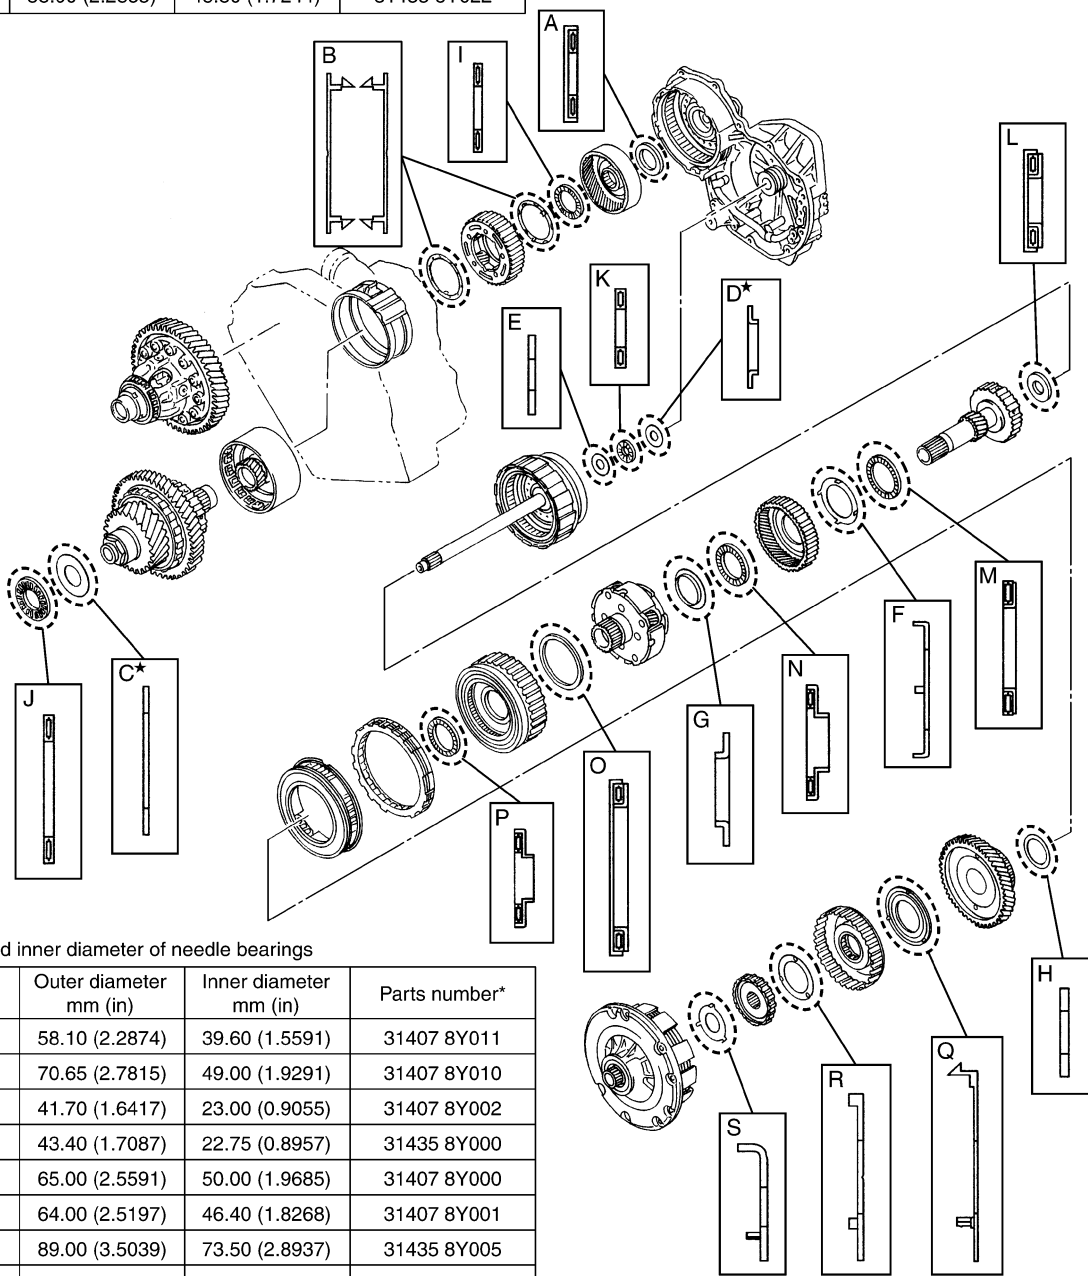

Outer and inner diameter of needle bearings

Item number	Outer diameter mm (in)	Inner diameter mm (in)	Parts number*
I	58.10 (2.2874)	39.60 (1.5591)	31407 8Y011
J	70.65 (2.7815)	49.00 (1.9291)	31407 8Y010
K	41.70 (1.6417)	23.00 (0.9055)	31407 8Y002
L	43.40 (1.7087)	22.75 (0.8957)	31435 8Y000
M	65.00 (2.5591)	50.00 (1.9685)	31407 8Y000
N	64.00 (2.5197)	46.40 (1.8268)	31407 8Y001
O	89.00 (3.5039)	73.50 (2.8937)	31435 8Y005
P	61.65 (2.4272)	45.80 (1.8031)	31435 8Y004

★ : Select with proper thickness.

* : Always check with the Parts Department for the latest parts information.

SCIA5436E

DISASSEMBLY


PFP:31020

ECS00EDI


DISASSEMBLY

Disassembly

1. Drain ATF through drain plug.
2. Remove torque converter from transaxle case by holding it firmly and turning while pulling straight out.

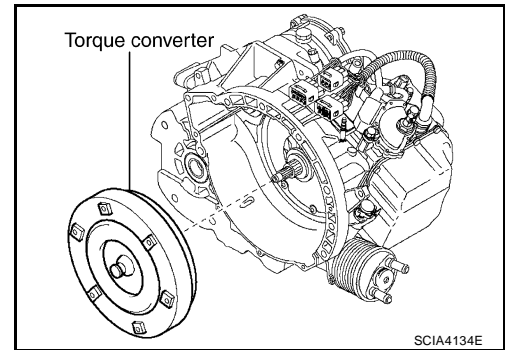


3. Remove A/T fluid level gauge.
4. Remove A/T fluid charging pipe.
5. Remove O-ring from A/T fluid charging pipe.
6. Remove air breather hose.
7. Remove fluid cooler tube.

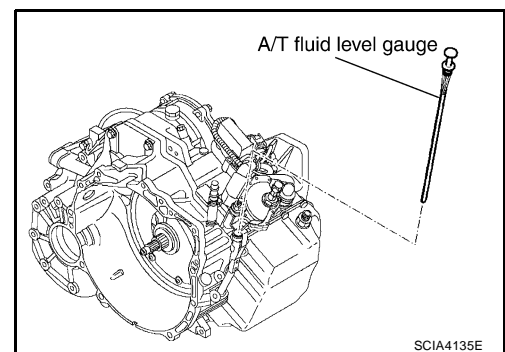

8. Remove turbine revolution sensor.

CAUTION:


Be careful not to damage the turbine revolution sensor and transaxle case.

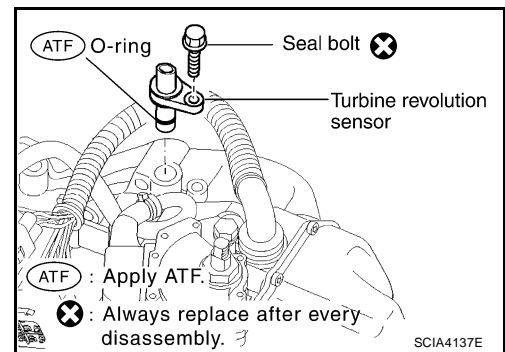

9. Remove revolution sensor.

CAUTION:


Be careful not to damage the revolution sensor and transaxle case.

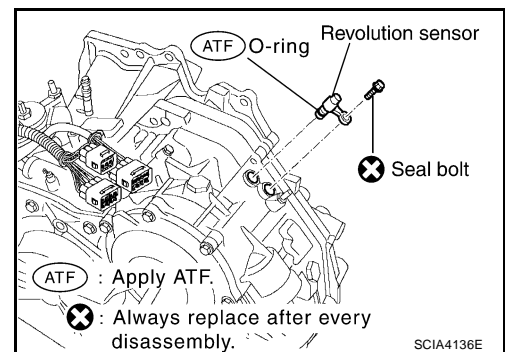


A
B
AT
D
E
F
G
H
I
J
K
L
M

DISASSEMBLY

10. Remove nut and range lever.

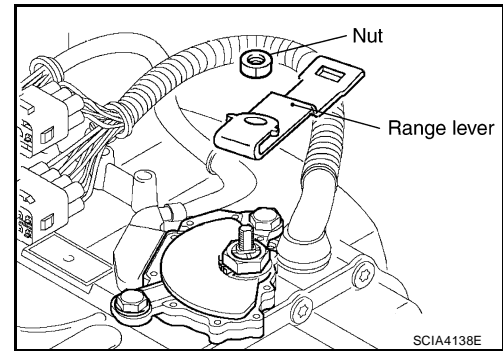


11. Pry off the lock washer using suitable tool.

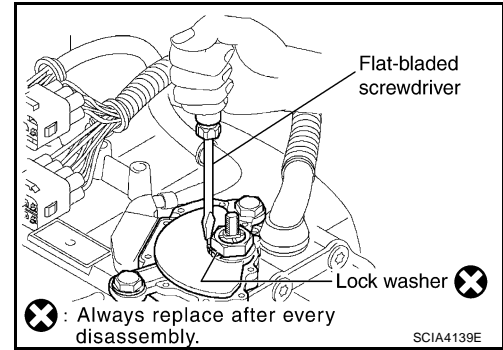


12. Loosen nut and remove lock washer.

13. Remove washer plate.

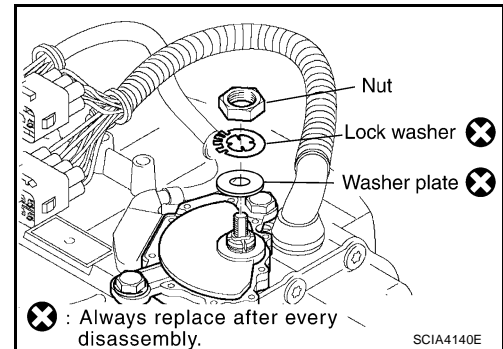


14. Remove PNP switch from transaxle case.

Bolt symbol	Length mm (in)	Number of bolts
A	20 (0.79)	1
B	33 (1.30)	1

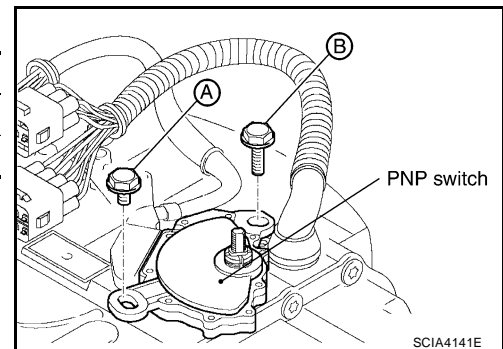



DISASSEMBLY

15. Remove hexagon bolt.
16. Remove ATF cooler assembly, washer and spring washer.
17. Remove O-rings from the ATF cooler assembly.

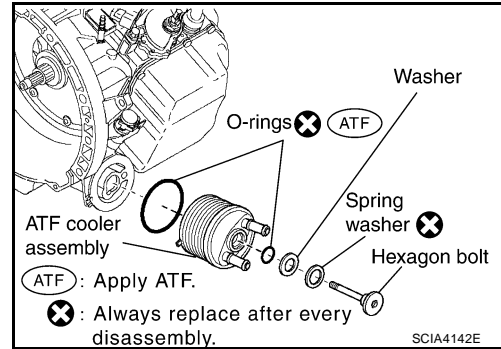


18. Remove side cover.

CAUTION:
Be careful not to damage side cover and transaxle case.

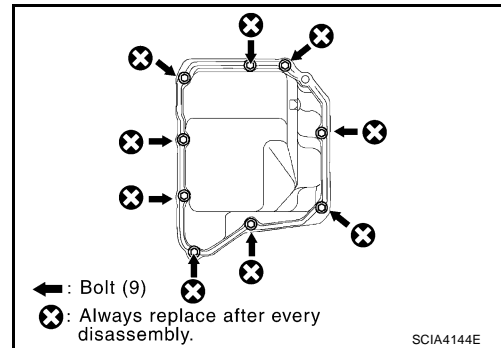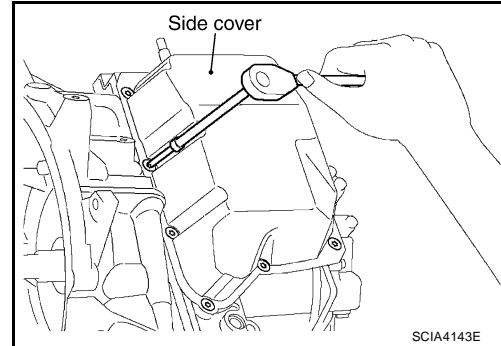

19. Disconnect solenoid connectors.

CAUTION:
Be careful not to damage connector.

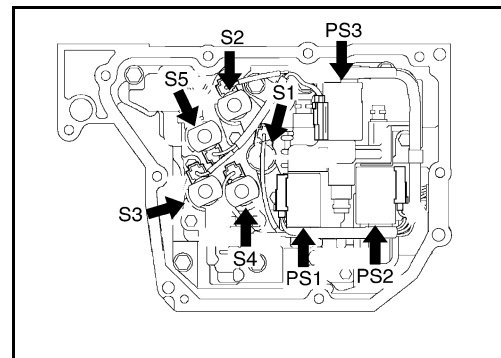


- S1 : Shift solenoid valve A
- S2 : Shift solenoid valve B
- S3 : Shift solenoid valve C
- S4 : Shift solenoid valve D
- S5 : Shift solenoid valve E
- PS1 : Pressure control solenoid valve A
- PS2 : Pressure control solenoid valve B
- PS3 : Pressure control solenoid valve C

SCIA4146E


DISASSEMBLY

20. Remove sensor clamp bolt.

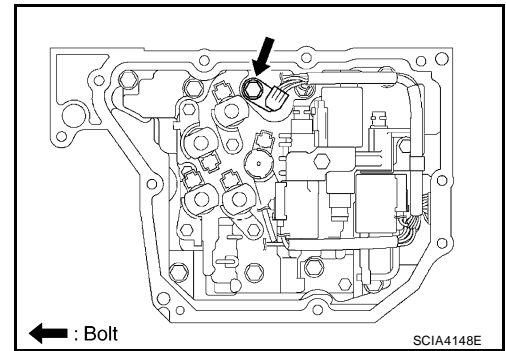


21. Remove sensor clamp and A/T fluid temperature sensor.


CAUTION:
Be careful not to damage A/T fluid temperature sensor.

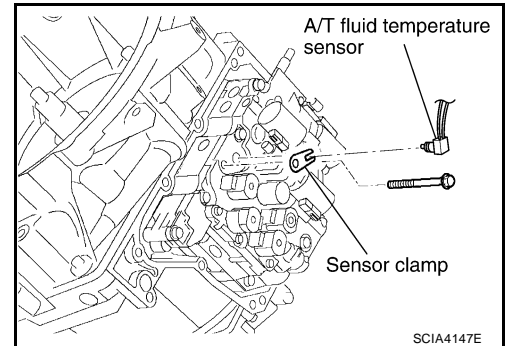

22. Remove suction cover bolts.

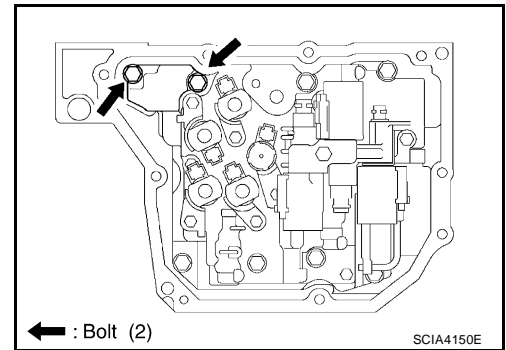


23. Remove suction cover and suction cover gasket.

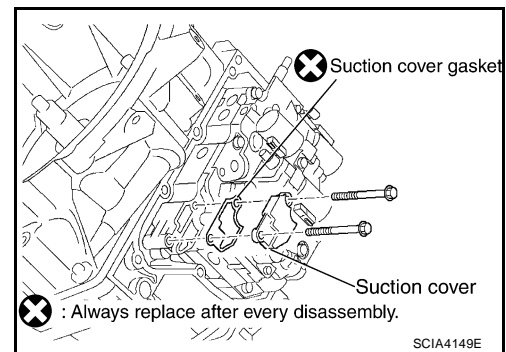

24. Remove control valve assembly bolts from transaxle case.

Bolt symbol	Length mm (in)	Number of bolts
A	55 (2.17)	2
B	50 (1.97)	2
C	16 (0.63)	2

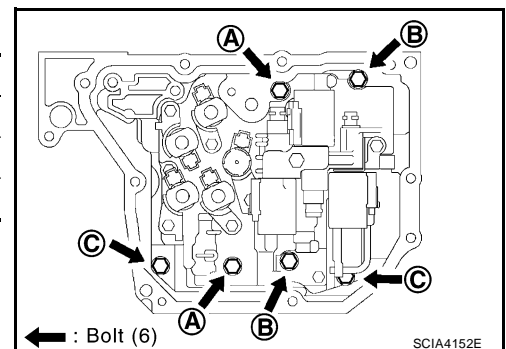


DISASSEMBLY


25. While holding control valve assembly, disconnect parking lock rod sub assembly from manual valve lever sub assembly and remove control valve assembly.

NOTE:

Shift position is "N".

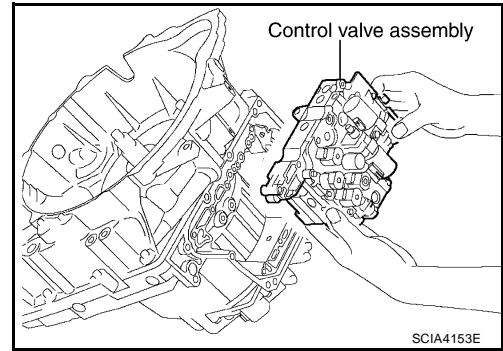


26. Remove governor apply gaskets.

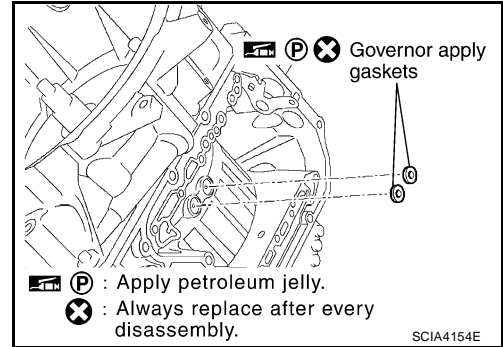


27. Remove transmission wire.

CAUTION:

Be careful not to damage solenoid connectors and A/T fluid temperature sensor.

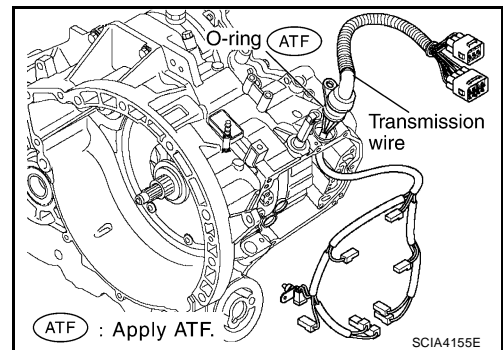

28. Remove oil pump assembly bolts from transaxle case.

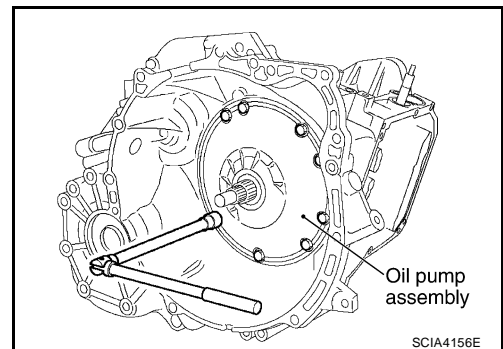


A
B
AT
D
E
F
G
H
I
J
K
L
M

DISASSEMBLY

29. Remove oil pump assembly using Tools.



Tool numbers : ST33290001 (J-34286)

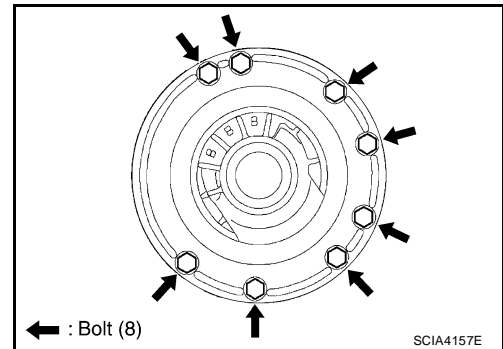

30. Remove oil seal from oil pump assembly using suitable tool.


CAUTION:

Be careful not to scratch oil pump assembly.

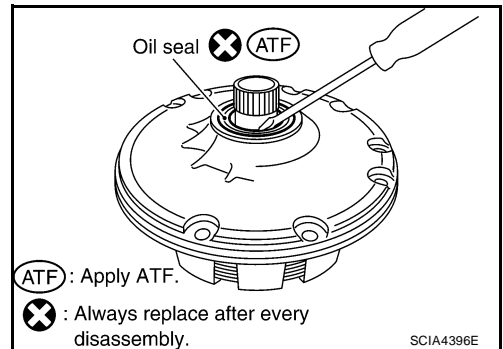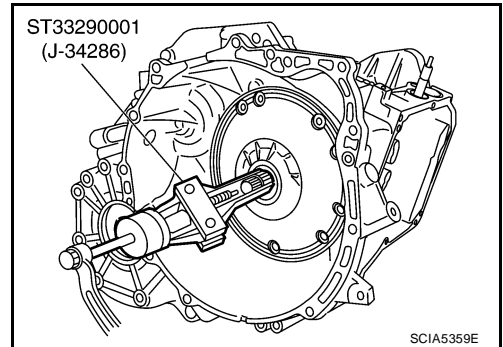


31. Remove one-way clutch outer race sub assembly.

32. Remove thrust washer.

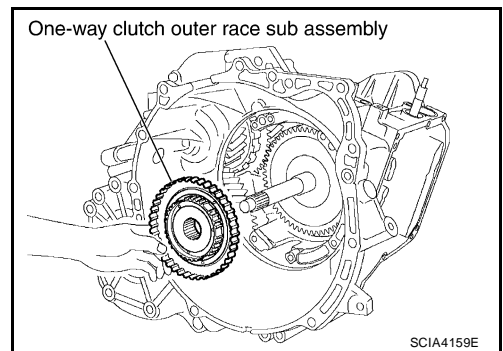


33. Remove transaxle housing bolts from transaxle case.

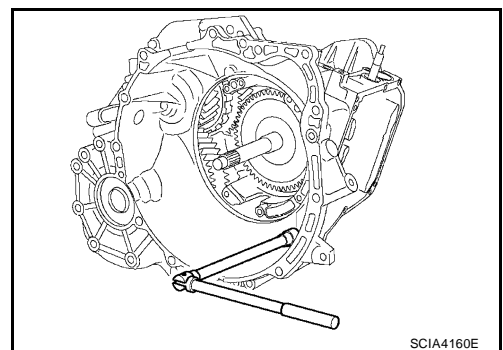


DISASSEMBLY

Bolt symbol	Length mm (in)	Number of bolts
A	30 (1.18)	13
B	35 (1.38)	2
C	45 (1.77)	1
D*	—	1

*:Torx bolt

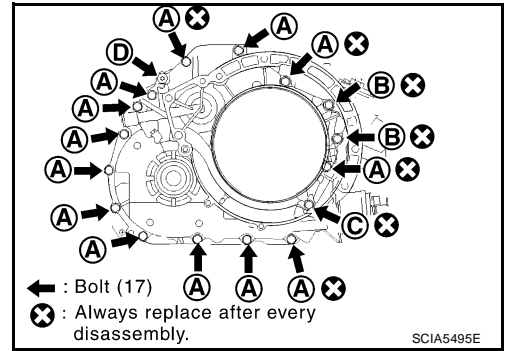


34. Remove transaxle housing using suitable tool.

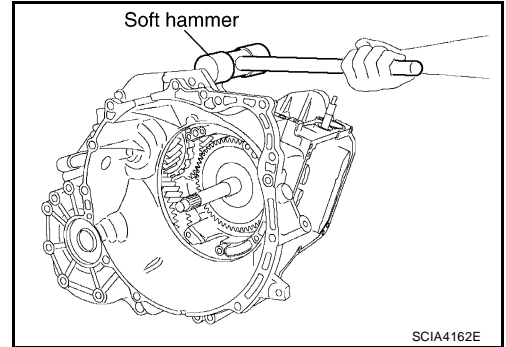


35. Remove governor apply gasket.

36. Remove seal ring.

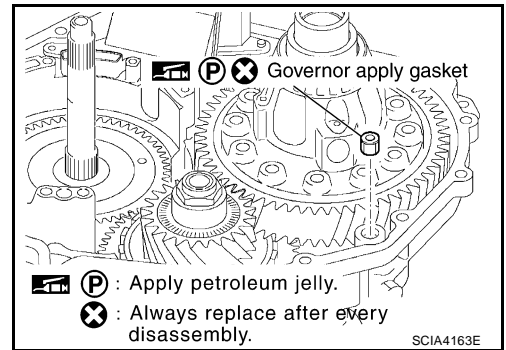

37. Remove tube clamp.

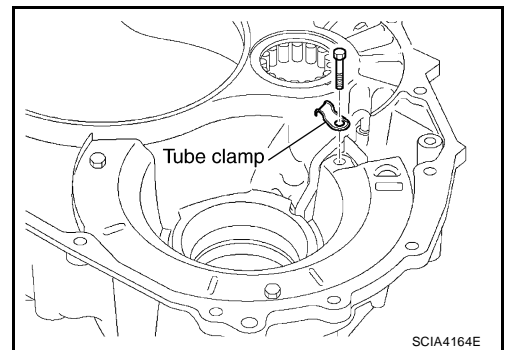


A
B
AT
D
E
F
G
H
I
J
K
L
M

DISASSEMBLY


38. Remove differential gear lube apply tube using suitable tool.

CAUTION:


- Be careful not to bend or damage differential gear lube apply tube.
- Be careful not to damage transaxle housing.

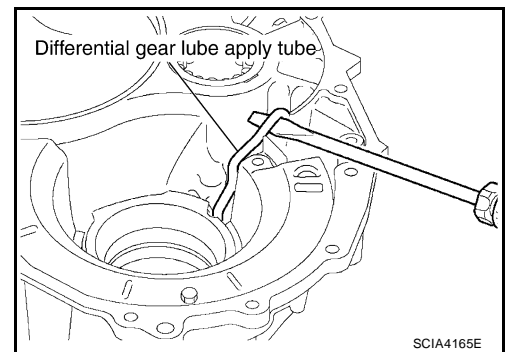


39. Remove oil reservoir plate.

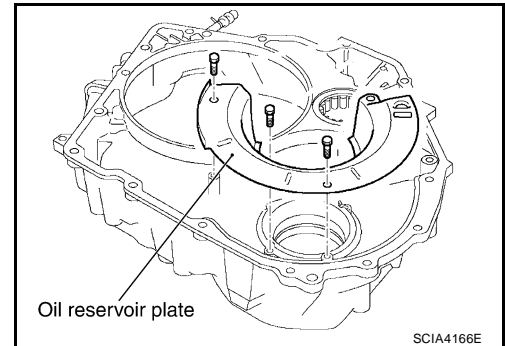


40. Remove oil cleaner magnets from oil reservoir plate.

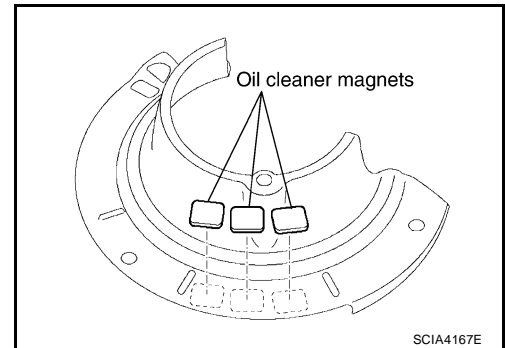

41. Remove differential gear assembly.

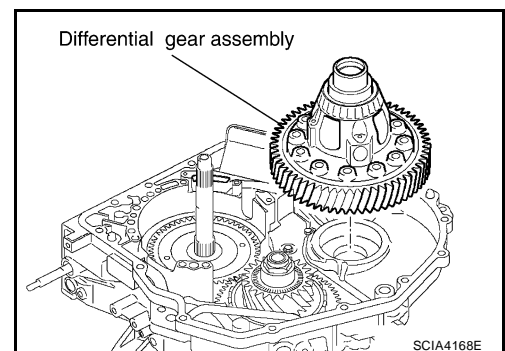


42. Remove oil strainer sub assembly.

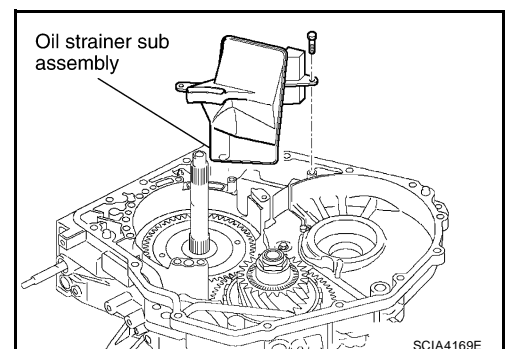


DISASSEMBLY

43. Remove oil reservoir plate.

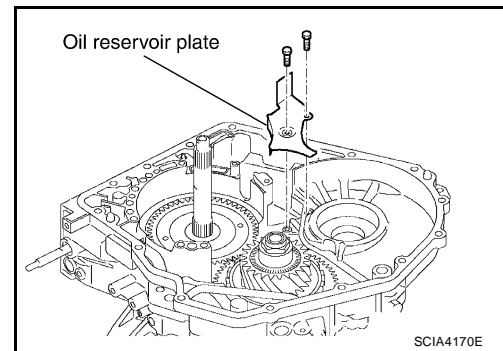


44. Remove tube clamp.

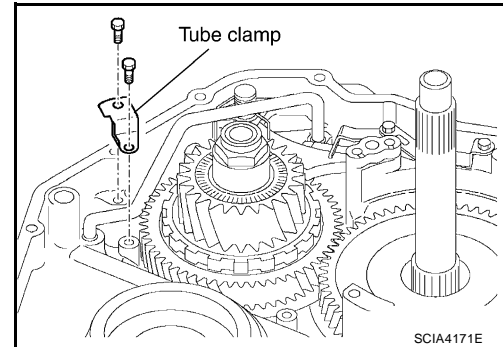


45. Remove U/D brake apply tube sub assembly using suitable tool.

CAUTION:


- Be careful not to bend or damage U/D brake apply tube sub assembly.
- Be careful not to damage transaxle case.

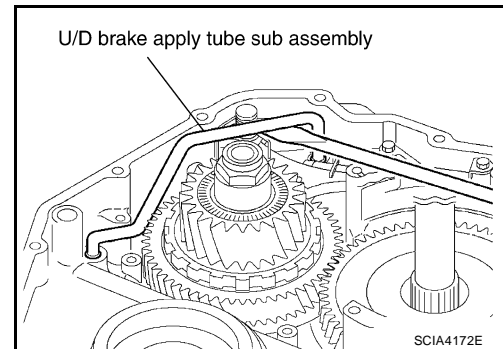

46. Disconnect manual detent spring sub assembly from manual valve lever sub assembly using suitable tool.

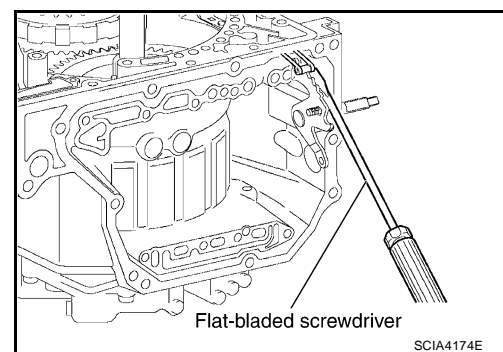


47. Remove manual valve lever sub assembly from parking lock rod sub assembly.

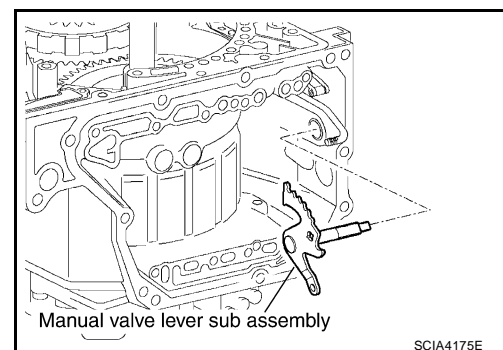

A
B
AT
D
E
F
G
H
I
J
K
L
M


DISASSEMBLY

48. Remove parking lock rod sub assembly.

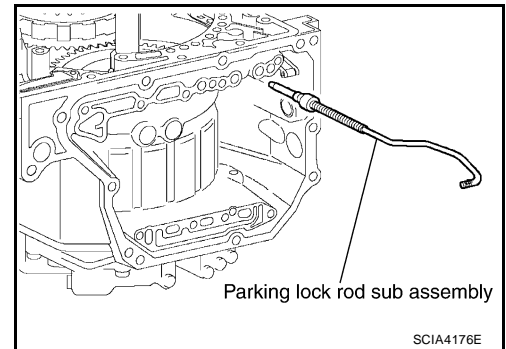


49. Remove bolts for manual detent spring sub assembly.


Bolt symbol	Length mm (in)	Number of bolts
A	16.7 (0.657)	1
B	14.0 (0.551)	1

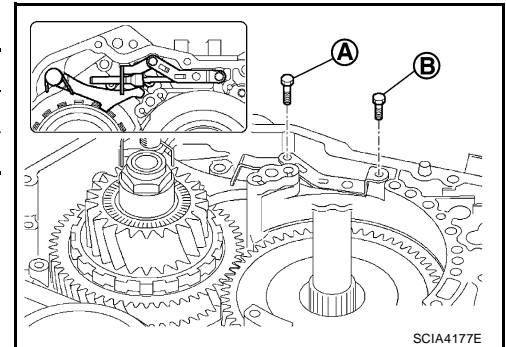


50. Remove manual detent spring sub assembly.

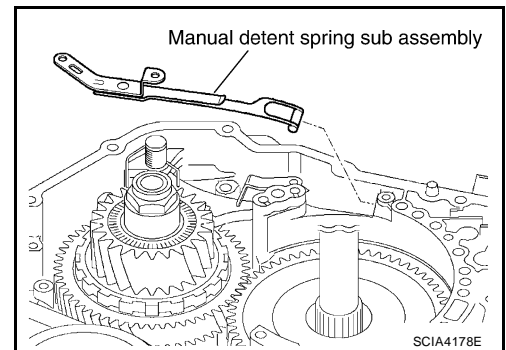

51. Remove parking lock pawl shaft and torsion spring No.1.

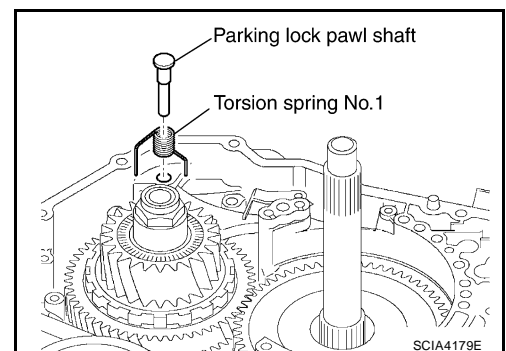


52. Remove parking lock pawl bracket and parking lock pawl.

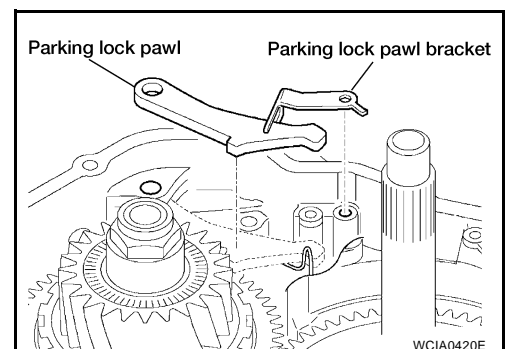


DISASSEMBLY

53. Remove parking lockpin sub assembly.

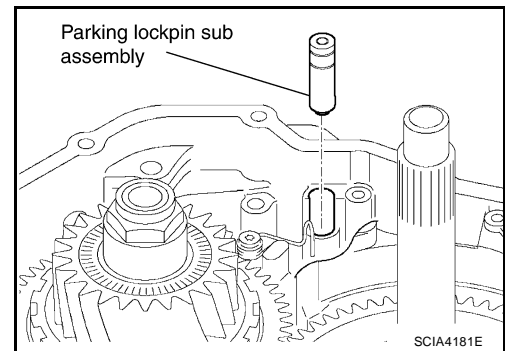


54. Remove spring guide sleeve and torsion spring No.2.

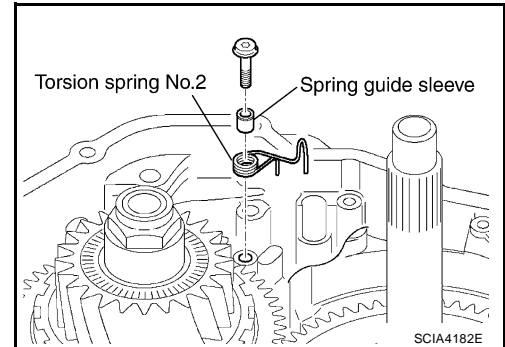


55. Remove manual valve oil seal using suitable tool.

CAUTION:
Be careful not to damage transaxle case.

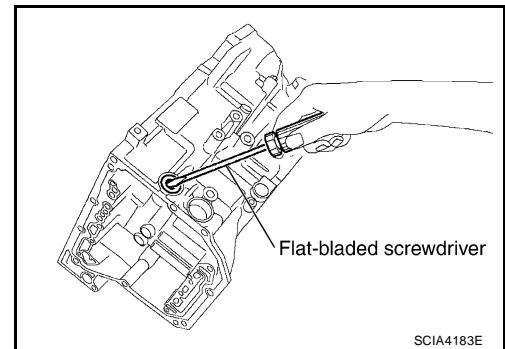


56. Remove thrust needle roller bearing and thrust bearing race from U/D gear assembly.

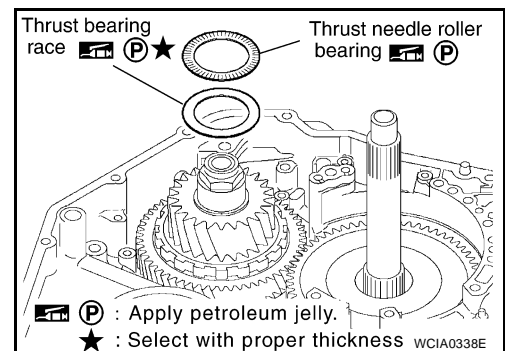


57. Remove U/D gear assembly.

58. Remove seal rings from U/D gear assembly.

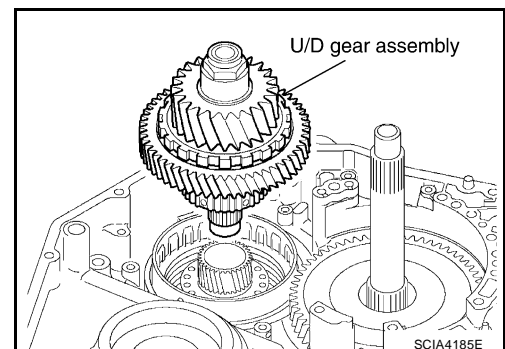


DISASSEMBLY

59. Remove U/D clutch assembly.

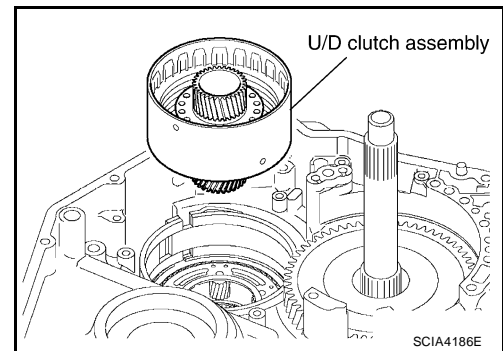


60. Remove anchor bolt.

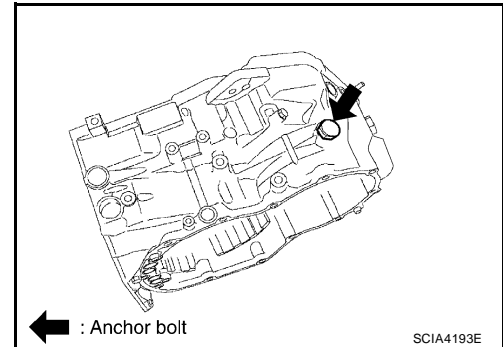


61. Remove U/D brake band assembly.

CAUTION:
Be careful not to damage transaxle case.

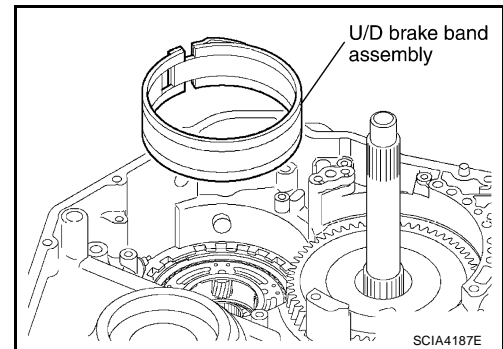


62. Remove U/D RR planetary carrier assembly and thrust bearing races.

63. Remove U/D RR planetary ring gear sub assembly.

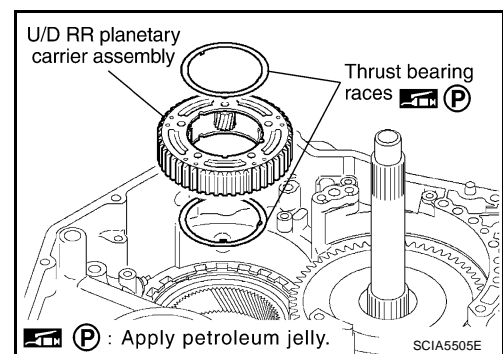


64. Remove thrust needle roller bearing, adjust shim and thrust bearing race from U/D RR planetary ring gear sub assembly.

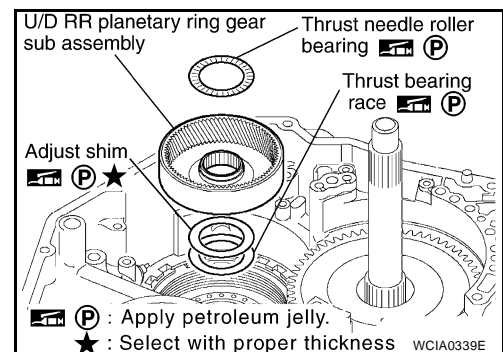


DISASSEMBLY


65. Remove snap ring using suitable tool.

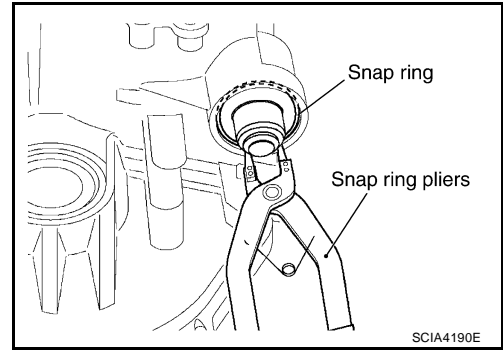


66. Remove U/D brake damper assembly.
67. Remove O-rings from U/D brake damper assembly.

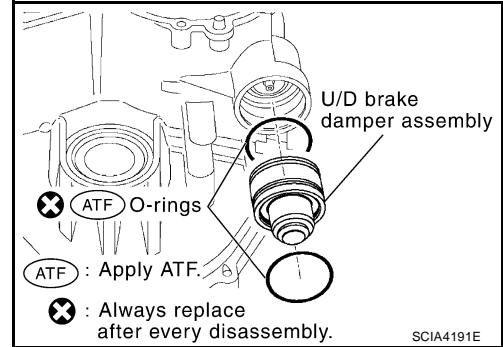

68. Remove U/D brake piston assembly and compression spring.
69. Remove O-ring from U/D brake piston assembly.

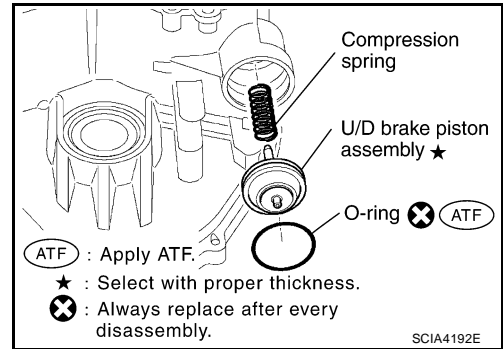


70. Remove transaxle case cover bolts from transaxle case.

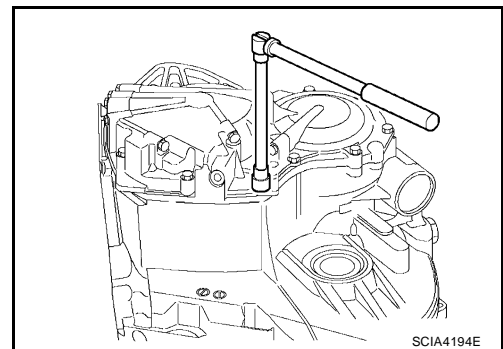

Bolt symbol	Length mm (in)	Number of bolts
A	30 (1.18)	8
B	45 (1.77)	2
C	48 (1.89)	2
D*	—	1

*:Stud bolt

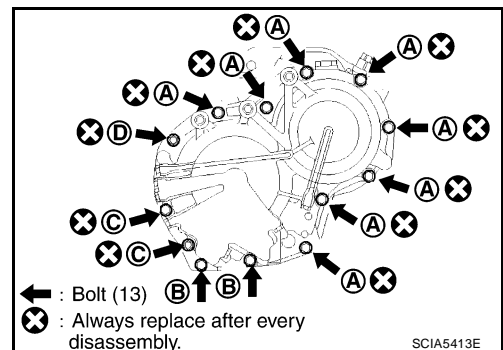


DISASSEMBLY


71. Tap transaxle case cover using suitable tool.

CAUTION:


Be careful not to damage transaxle case cover.

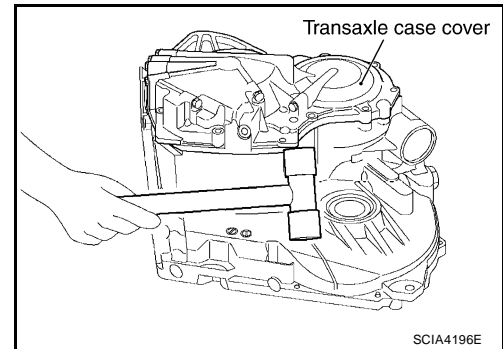


72. Remove transaxle case cover.

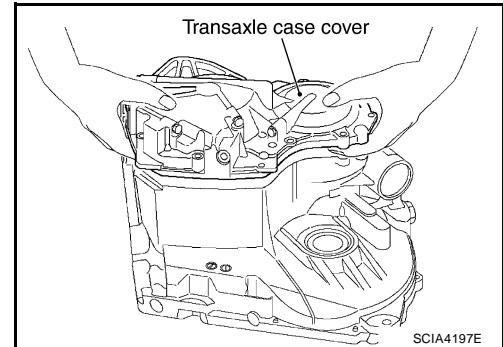

73. Remove governor apply gaskets from transaxle case.

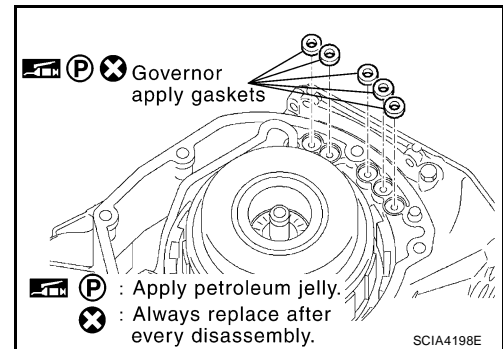


74. Remove tube clamp.

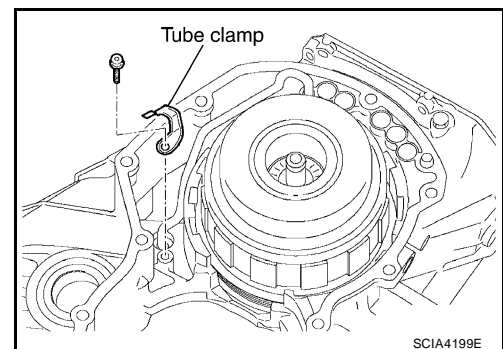

75. Remove transaxle lube apply tube using suitable tool.


CAUTION:

- Be careful not to bend or damage transaxle lube apply tube.
- Be careful not to damage transaxle case.

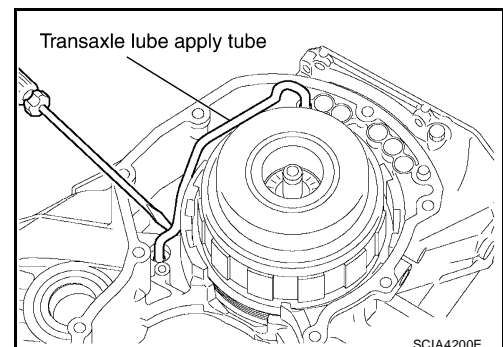


DISASSEMBLY

76. Remove forward and direct clutch assembly.
77. Remove thrust bearing race, thrust needle roller bearing and seal ring from forward and direct clutch assembly.

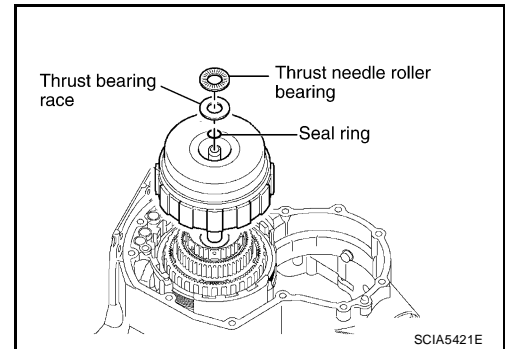

78. Remove planetary sun gear sub assembly and thrust needle roller bearings.

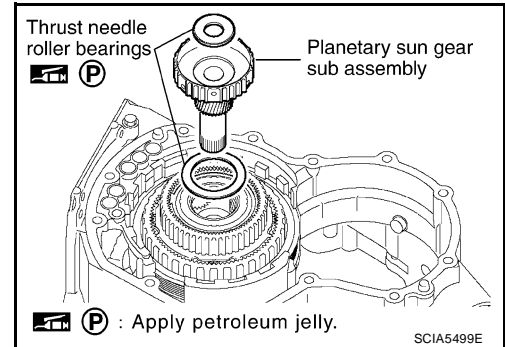



79. Using a bore gauge, measure the inner diameter of planetary sun gear sub assembly bushing.

CAUTION:


Measure at different places and take an average. If it is greater than the maximum, replace it with a new planetary sun gear sub assembly.

Standard :22.200 - 22.226mm (0.8740 - 0.8750in)

Allowable limit :22.276 (0.8770in)

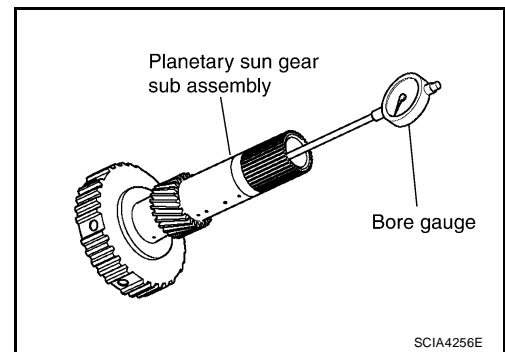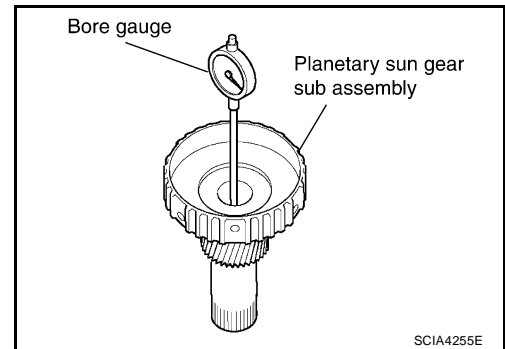


80. Remove RR planetary ring gear assembly.
81. Remove thrust needle roller bearing and thrust bearing race from RR planetary ring gear assembly.

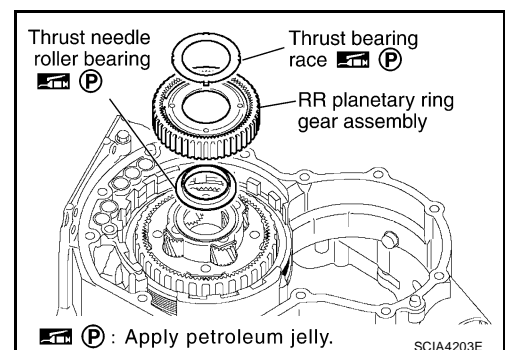

DISASSEMBLY

82. Remove planetary gear assembly.
 83. Remove thrust bearing race from planetary gear assembly.

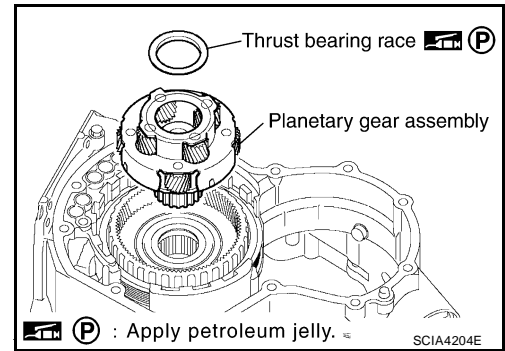


84. Using a bore gauge, measure the inner diameter of planetary gear assembly bushing.


CAUTION:

Measure at different places and take an average. If it is greater than the maximum, replace it with a new planetary gear assembly.


Standard :30.056 - 30.082mm (1.1833 - 1.1843in)
 Allowable limit :30.132 (1.1863in)

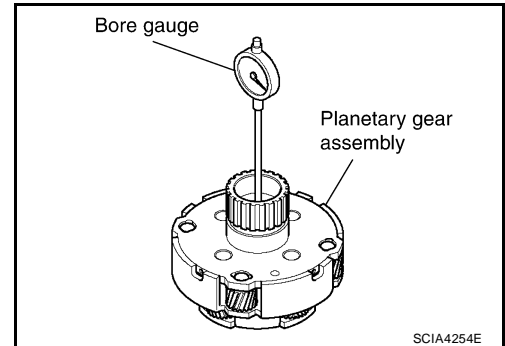

85. Remove thrust bearing.

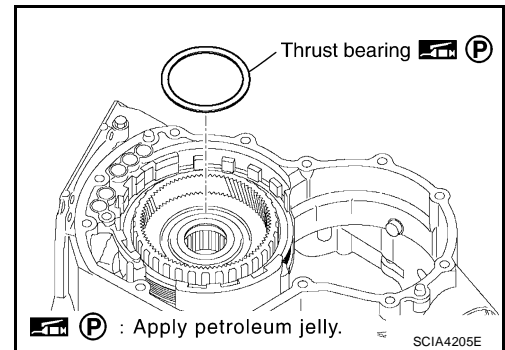

86. Remove snap ring using suitable tool.

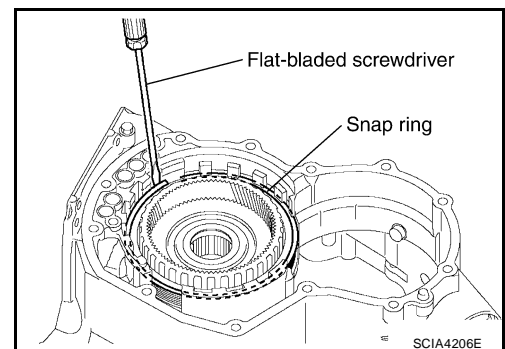


87. Remove 1st and reverse brake flanges, 1st and reverse brake discs and 1st and reverse brake plates.

● INSPECTION

- Check that the sliding surface of discs are not worn and burnt. If necessary, replace them.


CAUTION:

Replace new discs by soaking them at least 2 hours in A/T fluid.

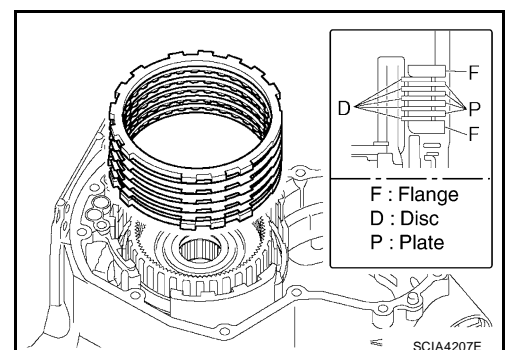


DISASSEMBLY


88. Remove FR planetary ring gear assembly with one-way clutch No.2.

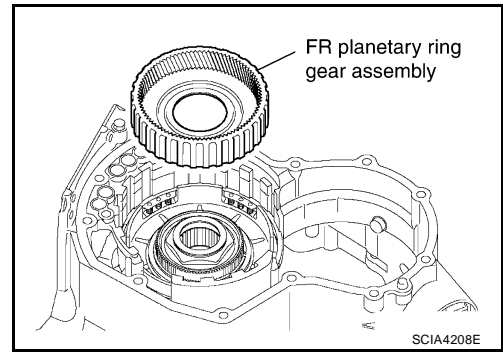


89. Make sure that the FR planetary ring gear assembly turns freely counterclockwise and locks clockwise.

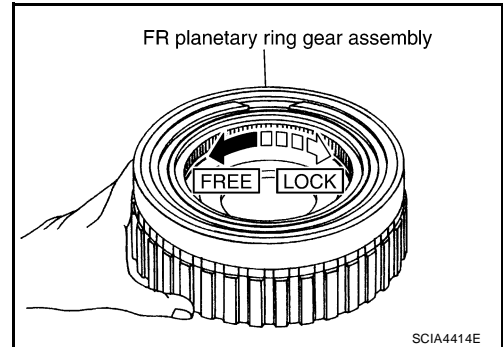


90. Remove snap ring using suitable tool.

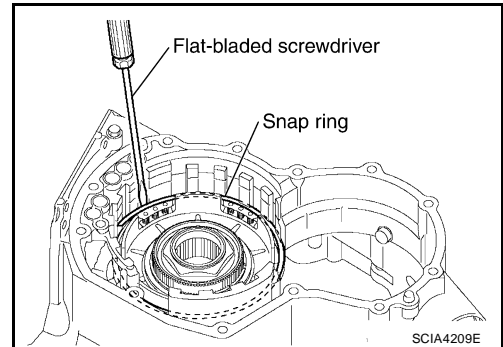

91. Remove return spring.

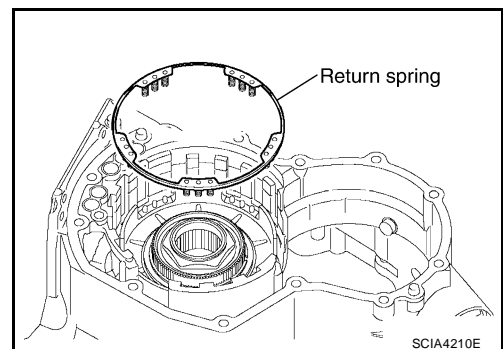


92. While pushing the piston by hand, apply compressed air (4Kg/cm²) into the oil passage of transaxle case as shown and remove 1st and reverse brake piston.

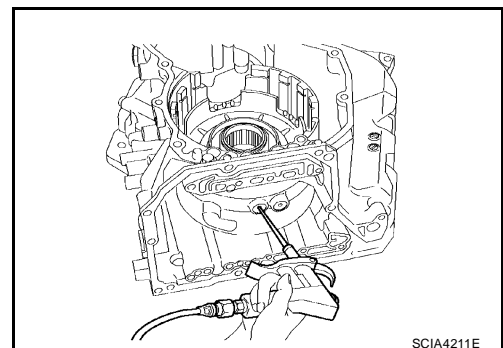


A
B
AT
D
E
F
G
H
I
J
K
L
M

DISASSEMBLY


93. Remove O-rings from 1st and reverse brake piston.

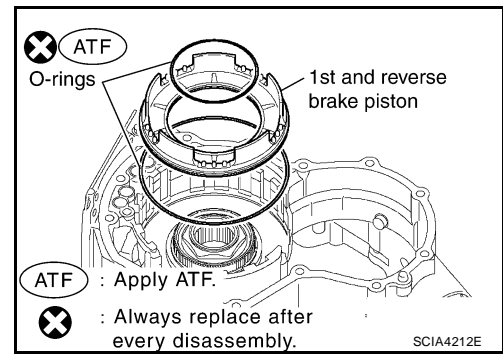


94. Remove thrust bearing and thrust bearing race from counter drive gear sub assembly.

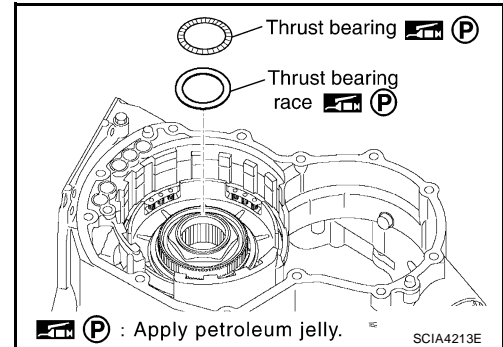

95. Remove snap ring using suitable tool.

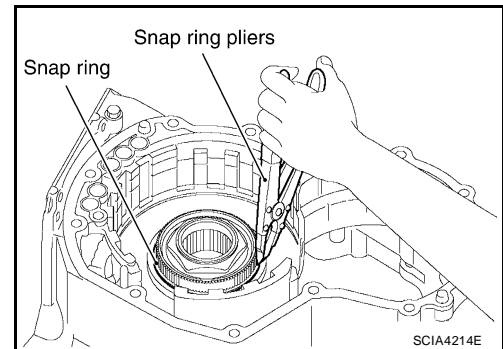


96. Remove counter drive gear sub assembly.

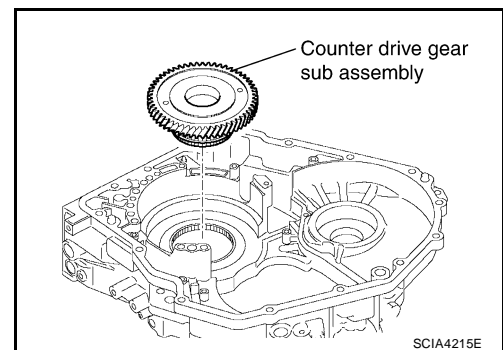

97. Remove differential side oil seal from transaxle case and transaxle housing using suitable tool.


CAUTION:

Be careful not to scratch transaxle case and transaxle housing.

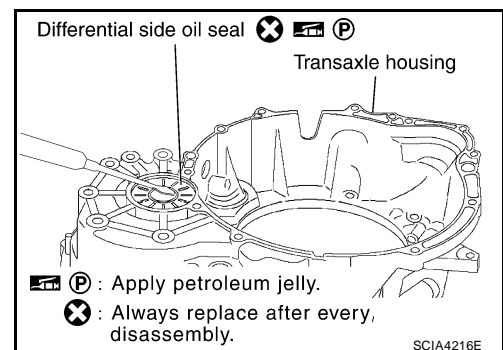


DISASSEMBLY

A
B
AT
D
E
F
G
H
I
J
K
L
M

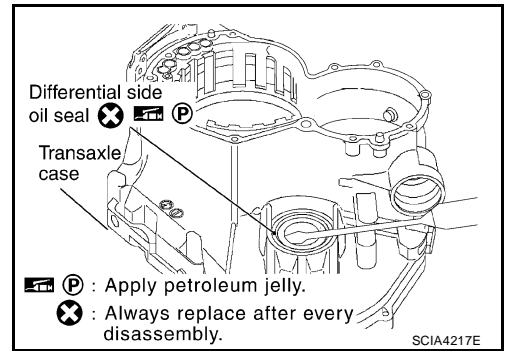


98. Remove outer race and adjust shim from transaxle case.

Tool number : ST30612000 (J-25742-2)

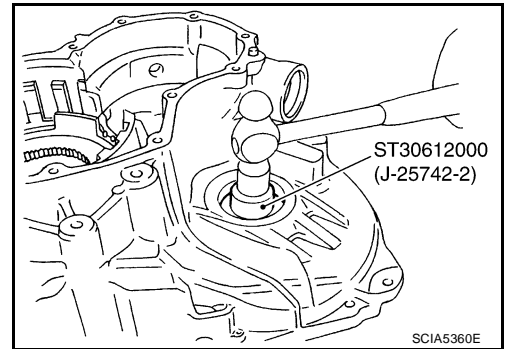

99. Remove thrust roller bearing from transaxle housing.

Tool number : ST33290001 (J-34286)

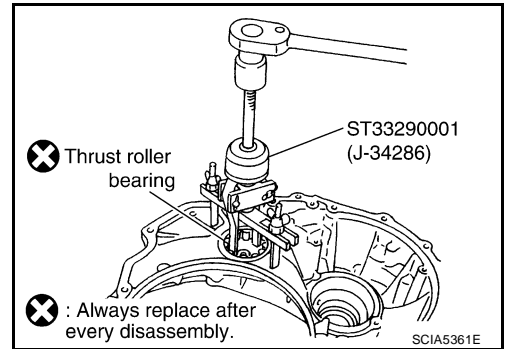


REPAIR FOR COMPONENT PARTS

PF0:0000

ECS00EDJ

REPAIR FOR COMPONENT PARTS

Oil Pump, 2nd Coast Brake & 2nd Brake COMPONENTS

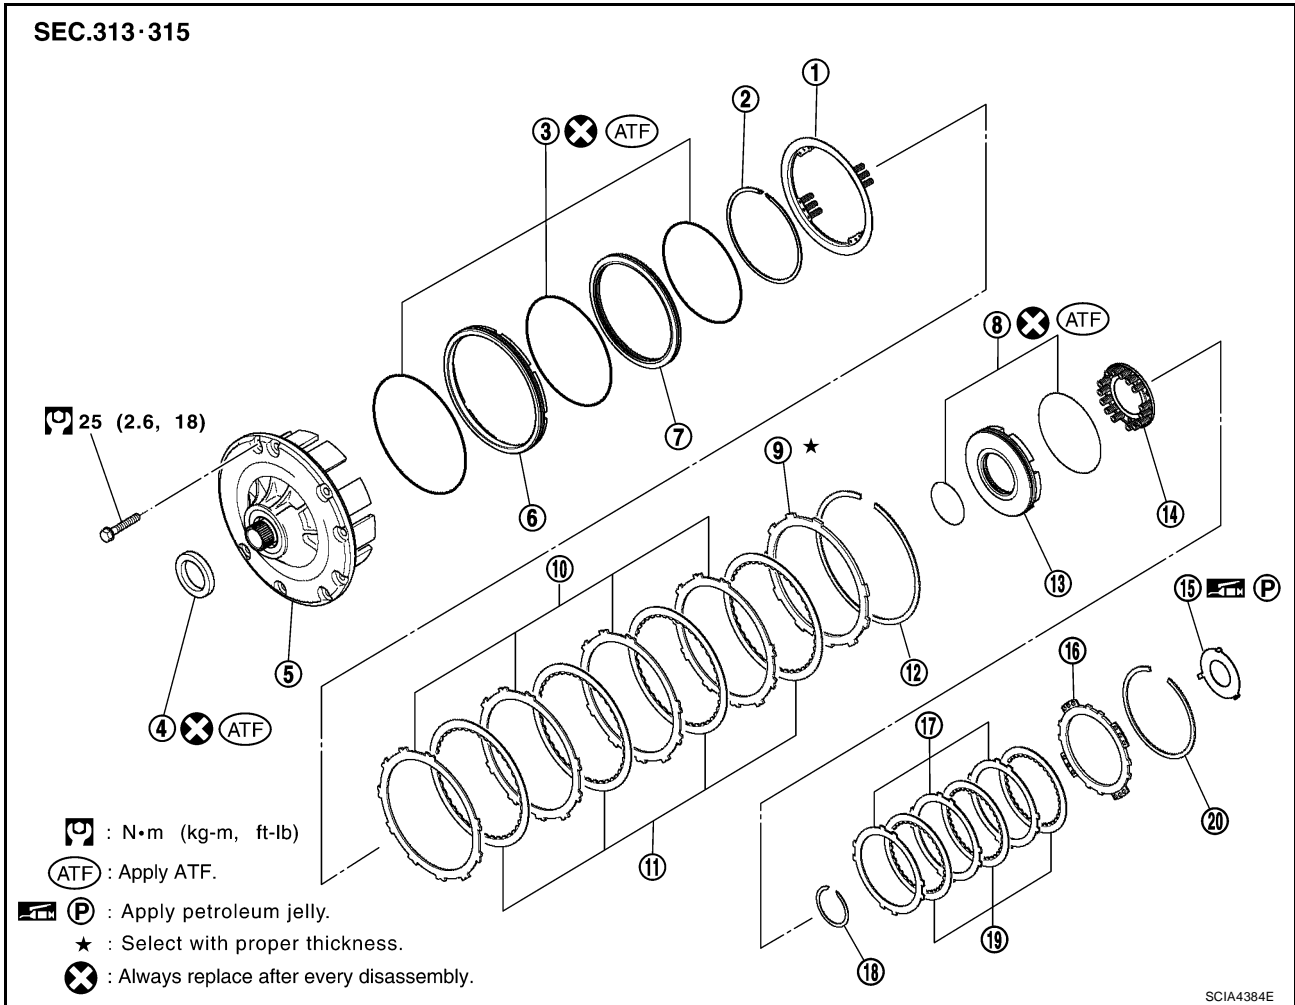


- | | | |
|----------------------------|---------------------------|---------------------|
| 1. Return spring | 2. Snap ring | 3. O-ring |
| 4. Oil seal | 5. Oil pump assembly | 6. 2nd brake piston |
| 7. 2nd brake sleeve | 8. O-ring | 9. 2nd brake flange |
| 10. 2nd brake plate | 11. 2nd brake disc | 12. Snap ring |
| 13. 2nd coast brake piston | 14. Return spring | 15. Thrust washer |
| 16. 2nd coast brake flange | 17. 2nd coast brake plate | 18. Snap ring |
| 19. 2nd coast brake disc | 20. Snap ring | |

DISASSEMBLY

1. Remove oil seal from oil pump assembly using suitable tool.


CAUTION:

Be careful not to scratch oil pump assembly.

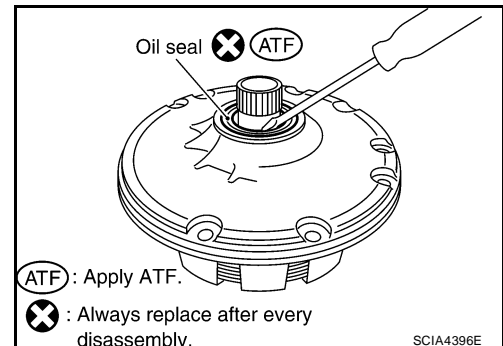


REPAIR FOR COMPONENT PARTS


2. Remove thrust washer from oil pump assembly.

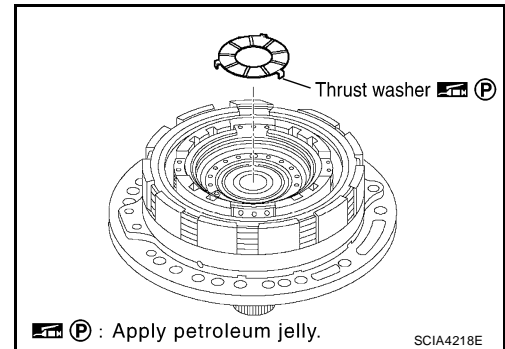

3. Remove snap ring using suitable tool.

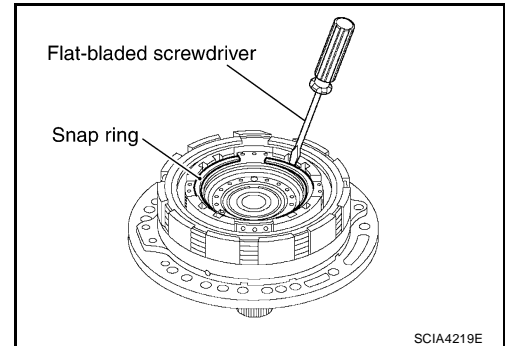


4. Remove 2nd coast brake flange, 2nd coast brake discs and 2nd coast brake plates.

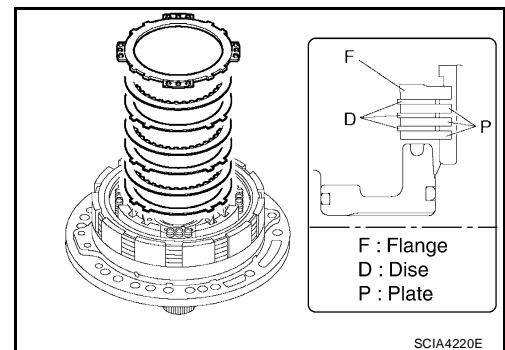


5. Place Tool on return spring, and compress return spring with a press.

Tool number : KV31102400 (J-34285 and J-34285-87)

6. Remove snap ring using suitable tool.

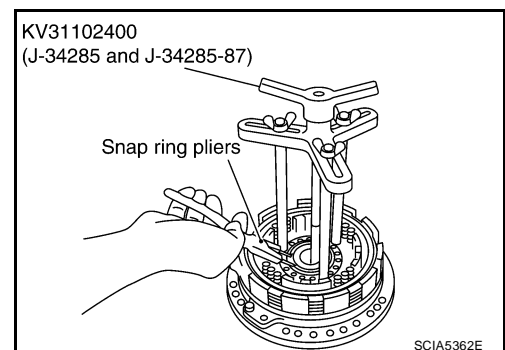

7. Remove return spring.

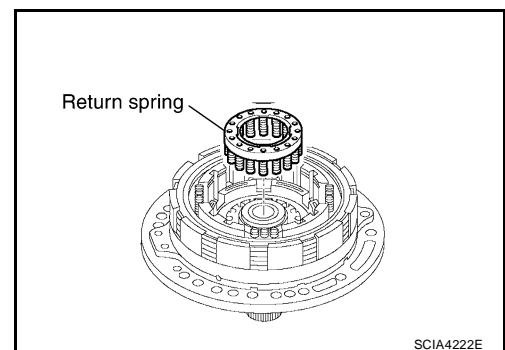

A
B
AT
D
E
F
G
H
I
J
K
L
M


REPAIR FOR COMPONENT PARTS

8. While pushing the 2nd coast brake piston by hand, apply compressed air (4kg/cm²) into the oil passage as shown and remove 2nd coast brake piston.


CAUTION:

Be careful not to damage the O-ring and 2nd coast brake piston.


9. Remove O-rings from 2nd coast brake piston.

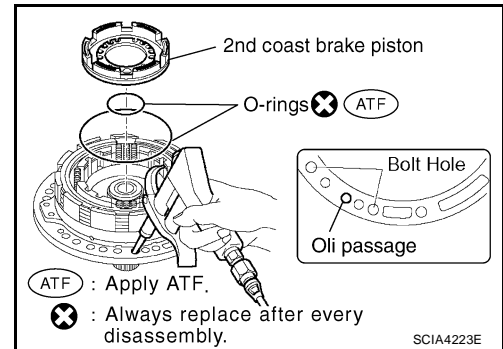


10. Remove snap ring using suitable tool.

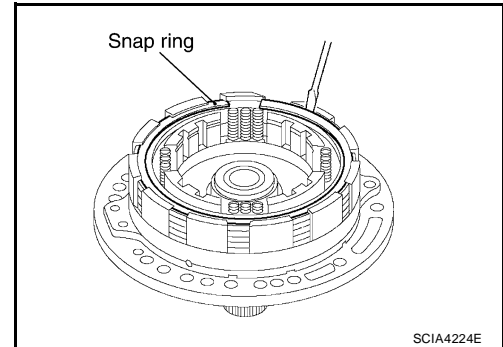

11. Remove 2nd brake flange, 2nd brake discs and 2nd brake plates.

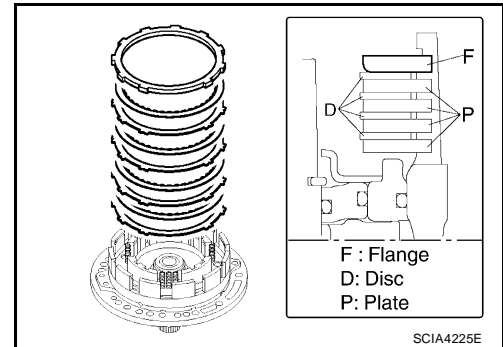


12. Remove return spring.

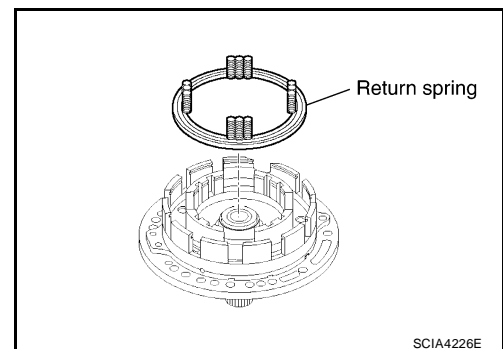

13. Remove snap ring using suitable tool.

CAUTION:

Be careful not to damage oil pump assembly and 2nd brake piston.

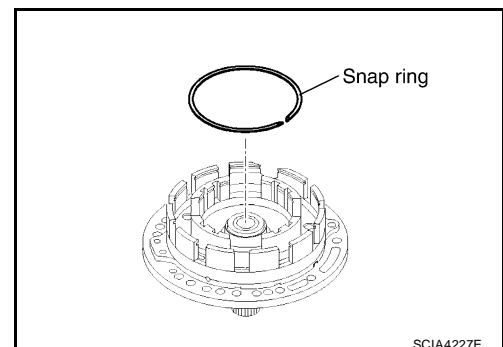


REPAIR FOR COMPONENT PARTS

14. While pushing the 2nd brake piston by hand, apply compressed air (4kg/cm²) into the oil passage as shown and remove 2nd brake piston (With 2nd brake sleeve).

CAUTION:

Be careful not to damage 2nd brake piston and 2nd brake sleeve.

15. Remove O-rings from 2nd brake piston and 2nd brake sleeve.

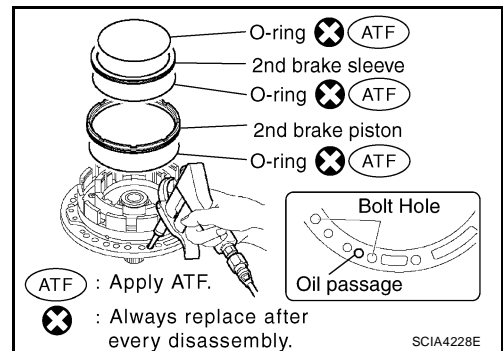

INSPECTION

- Check that the sliding surface of discs and plates is not worn or burnt. If the discs or plates is worn or burnt, replace it

CAUTION:

Replace new clutch discs by soaking them at least 2 hours in ATF.


ASSEMBLY

1. Install O-rings in 2nd brake sleeve and 2nd brake piston.

CAUTION:

- Do not reuse O-ring.
- Apply ATF to O-ring.


2. Coat the inner surfaces of oil pump assembly with ATF.
 3. Press 2nd brake piston and 2nd brake sleeve into oil pump assembly.

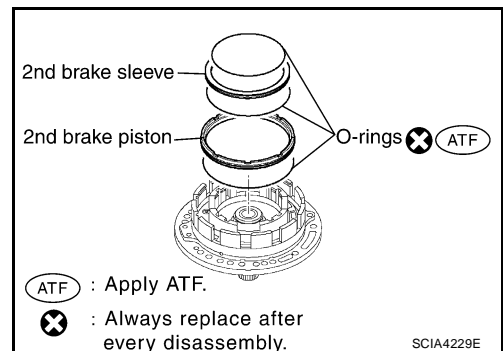


4. Install snap ring using suitable tool.

CAUTION:

Be careful not to damage oil pump assembly.

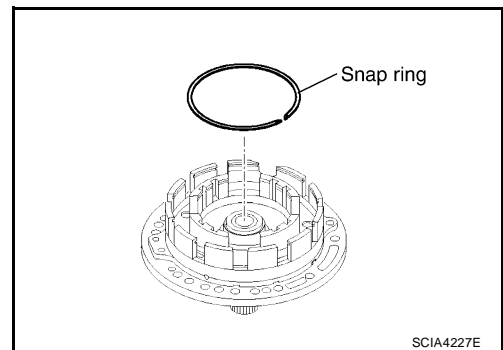


5. Place return spring on 2nd brake piston with the spring side up.

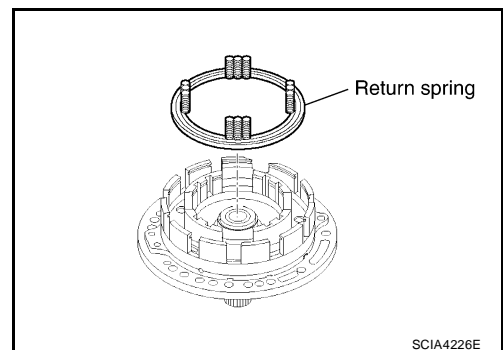


REPAIR FOR COMPONENT PARTS

6. Install 2nd brake flange, 2nd brake discs and 2nd brake plates.

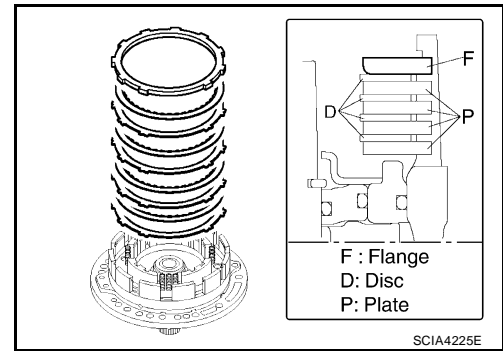

7. Install snap ring using suitable tool.

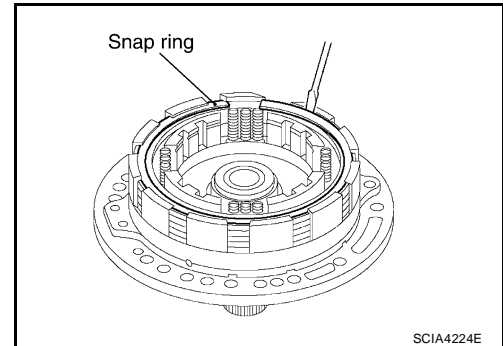


8. Install O-rings in 2nd coast brake piston.

CAUTION:


- Do not reuse O-rings.
- Apply ATF to O-rings.

9. Coat the inner surfaces of oil pump assembly with ATF.

10. Press 2nd coast brake piston into oil pump assembly.

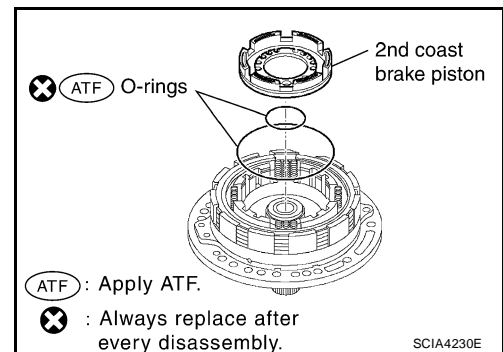


11. Install return spring.

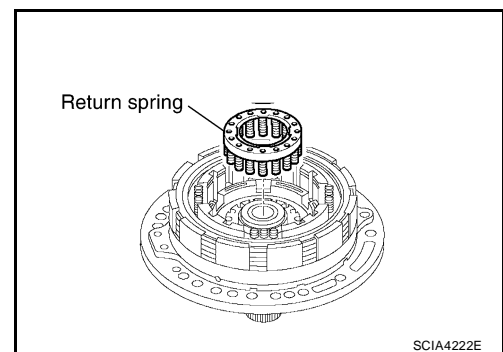

12. Place Tool on return spring, and compress return spring with a press.


Tool number : KV31102400 (J-34285 and J-34285-87)

13. Install snap ring using suitable tool.

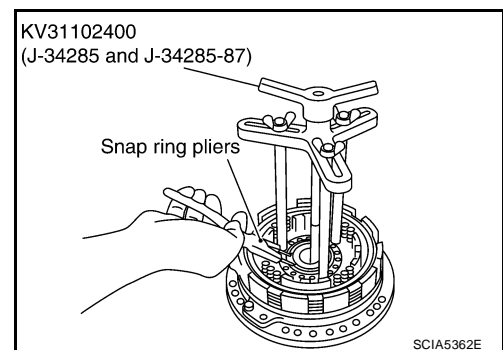

REPAIR FOR COMPONENT PARTS


14. Install 2nd coast brake flange, 2nd coast brake discs and 2nd coast brake plates.

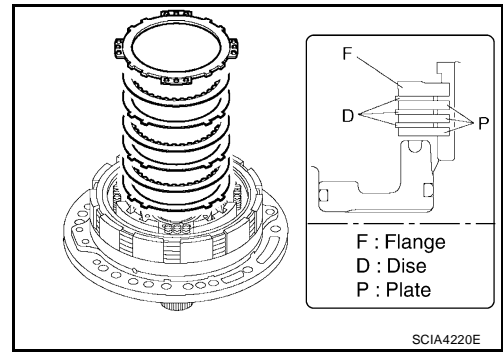

15. Place clutch spring compressor on 2nd coast brake flange, and compress return spring with a press.

Tool number : KV31102400 (J-34285 and J-34285-87)

16. Install snap ring using suitable tool.

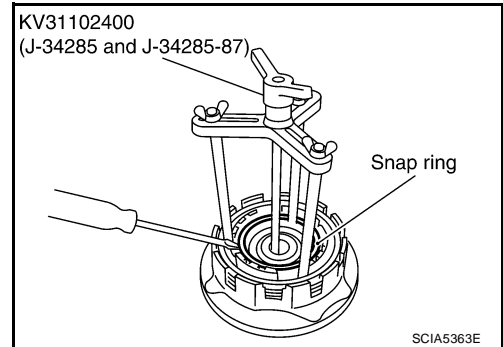


17. Set a dial indicator as shown.

18. When applying compressed air (4Kg/cm²) into the oil passage as shown, measure 2nd brake piston stroke and check 2nd brake piston moves smoothly.

Piston stroke :1.10 - 1.50mm (0.0433 - 0.0591in)


If 2nd brake piston stroke is out standards, select another flange. Refer to [AT-309, "2ND BRAKE"](#) .

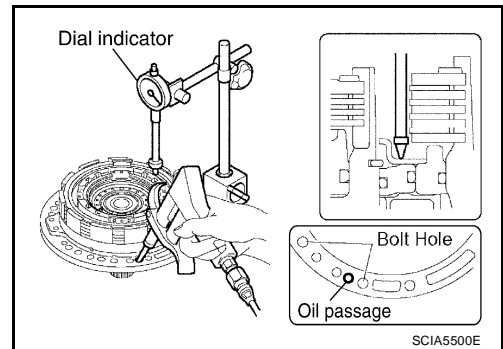

19. Set a dial indicator as shown.


20. When applying compressed air (4Kg/cm²) into the oil passage as shown, measure 2nd coast brake piston stroke and check 2nd coast brake piston moves smoothly.

Piston stroke :0.76 - 1.44mm (0.0299 - 0.0567in)

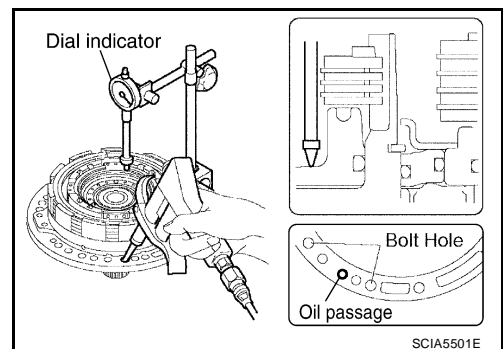

21. Install thrust washer facing the flat surface up.

CAUTION:
Apply petroleum jelly to thrust washer.

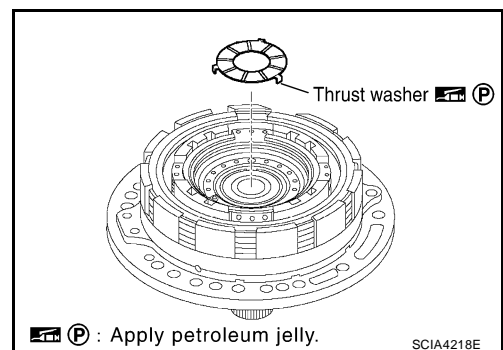


REPAIR FOR COMPONENT PARTS

22. Install oil seal into oil pump assembly until it is flush using Tool.

Tool number : **ST30720000 (J-25405)**


CAUTION:

- Do not reuse oil seal.
- Apply ATF to oil seal.

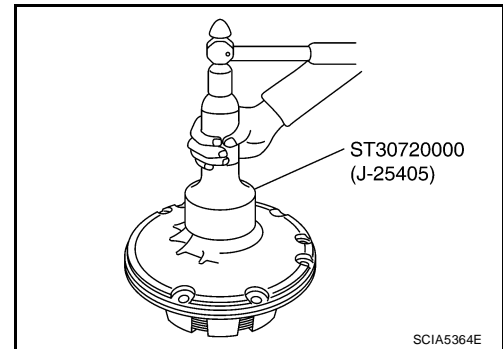

One-Way Clutch Outer Race Sub Assembly & 2nd Coast Brake Hub & One-Way Clutch No.1 COMPONENTS


ECS00EDK

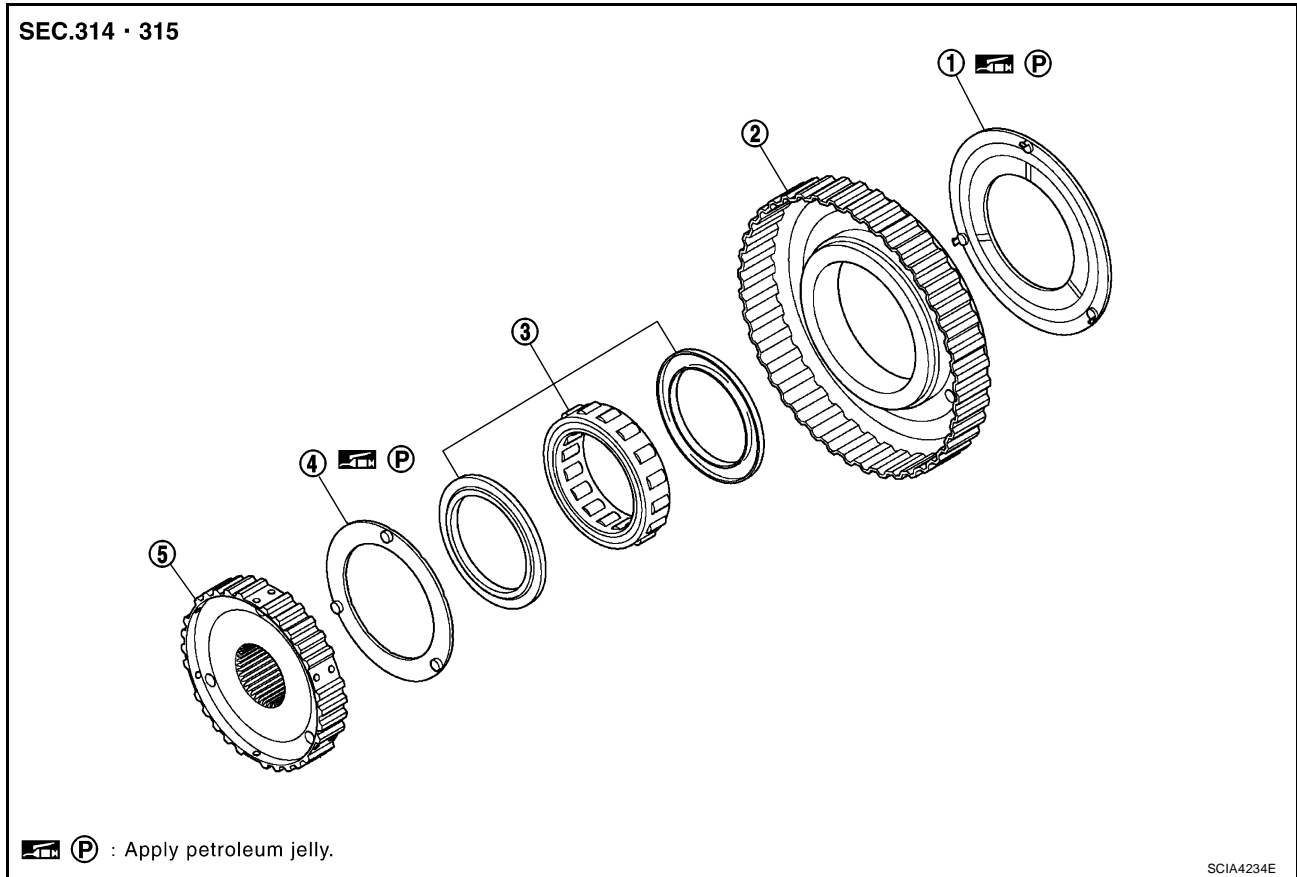

- | | | |
|------------------|---|------------------------|
| 1. Thrust washer | 2. One-way clutch outer race sub assembly | 3. One-way clutch No.1 |
| 4. Thrust washer | 5. 2nd coast brake hub | |


DISASSEMBLY

1. Remove thrust washer from one-way clutch outer race sub assembly.

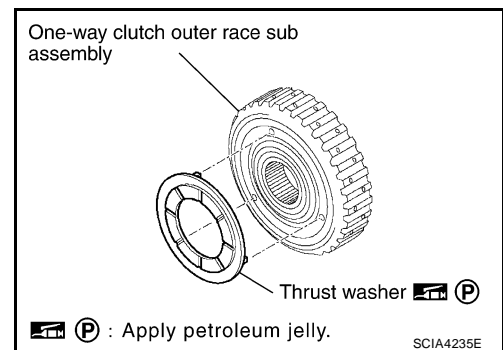


REPAIR FOR COMPONENT PARTS

2. Remove 2nd coast brake hub from one-way clutch outer race sub assembly.
3. Remove thrust washer from 2nd coast brake hub.

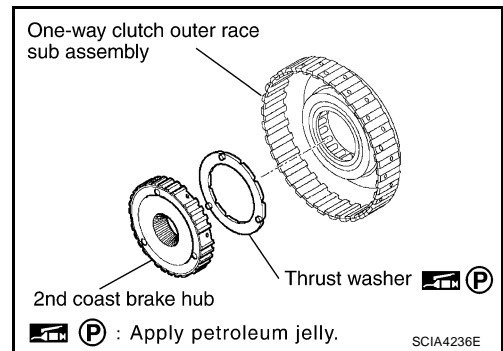

4. Remove one-way clutch No.1 from one-way clutch outer race sub assembly.

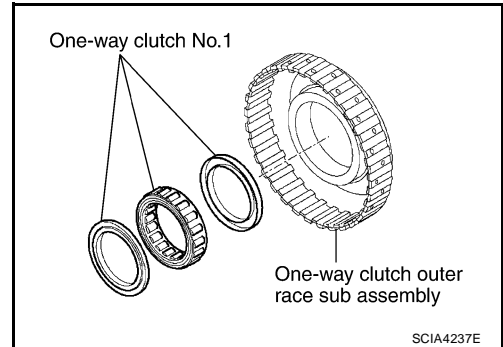


ASSEMBLY

1. Install one-way clutch No.1 into the one-way clutch outer race sub assembly.

CAUTION:

Do not mistake the direction of one-way clutch No.1.

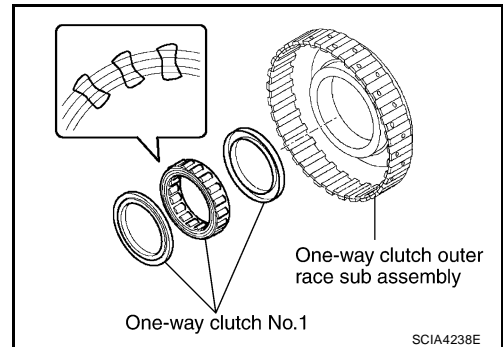

2. Install thrust washer into 2nd coast brake hub.


CAUTION:

Coat the thrust washer with petroleum jelly. Align the tab of the washer with the hollow of the 2nd coast brake hub.

3. Install 2nd coast brake hub into one-way clutch outer race sub assembly.

CAUTION:

While turning the 2nd coast brake hub, slide it into one-way clutch outer race sub assembly.

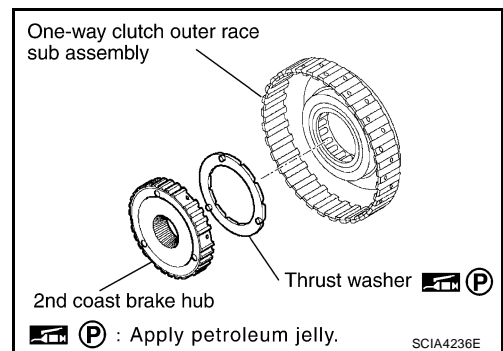


REPAIR FOR COMPONENT PARTS

- Coat the thrust washer with petroleum jelly. Align the tab of the washer with the hollow of the one-way clutch outer race sub assembly.

CAUTION:

Apply petroleum jelly to thrust washer.

One-way clutch outer race sub assembly

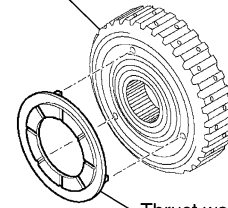

Thrust washer (P)


(P) : Apply petroleum jelly.

SCIA4235E

INSPECTION

- Hold one-way clutch outer race sub assembly, and check that 2nd coast brake hub turns freely clockwise and locks counter-clockwise.

One-way clutch outer race sub assembly

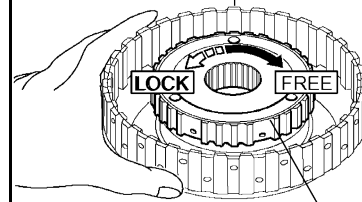


2nd coast brak hab

SCIA4239E

Transaxle Case Cover & B5 Brake COMPONENTS

ECS00EDL

SEC. 313 · 315 · 316 · 317

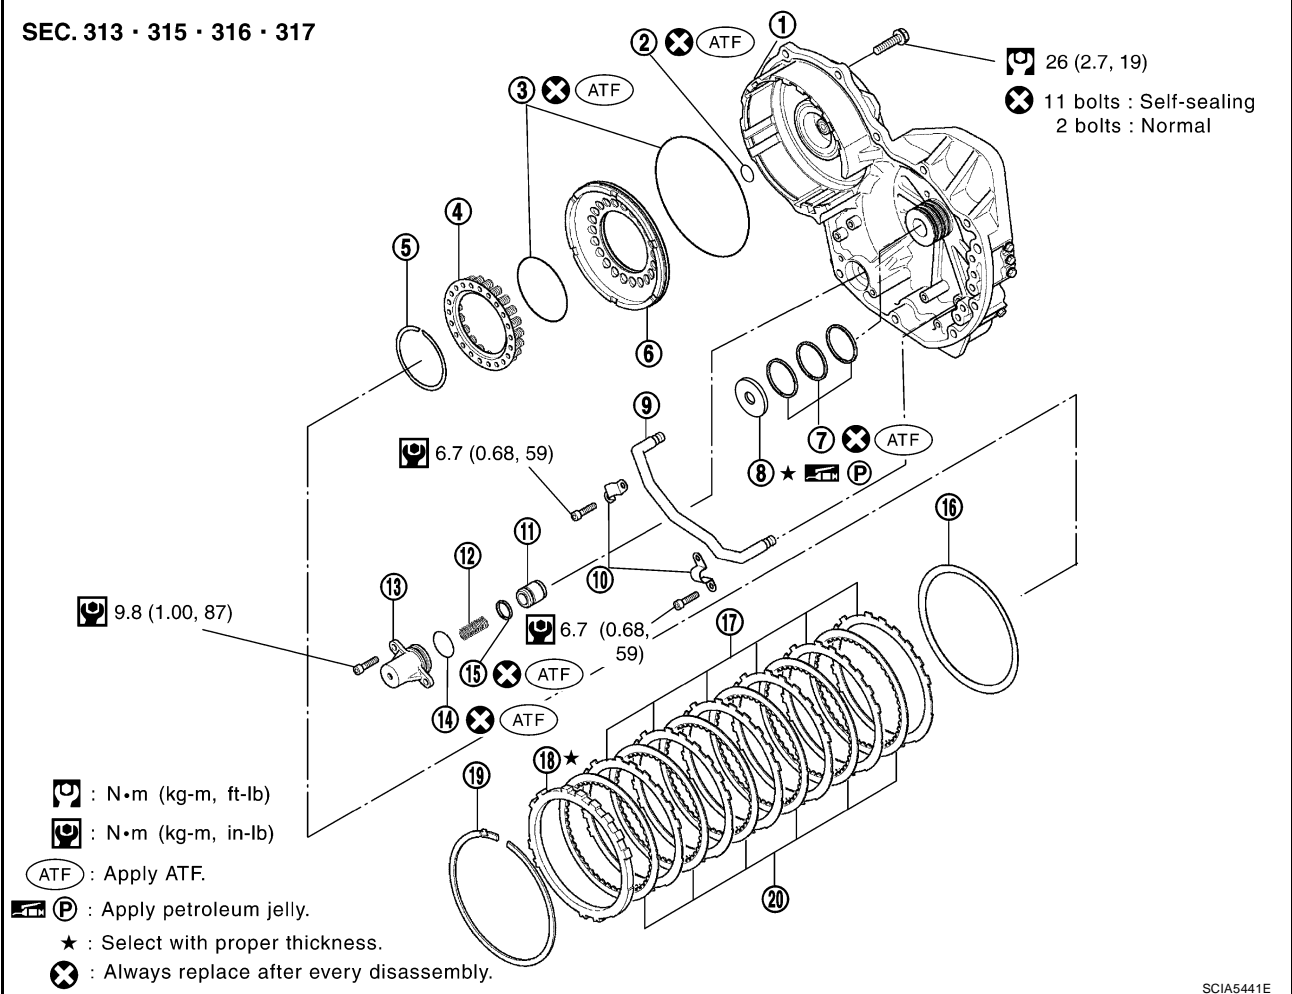

SCIA5441E


REPAIR FOR COMPONENT PARTS

- | | | |
|----------------------------|---------------------------------------|---------------------------------------|
| 1. Transaxle case cover | 2. Seal ring | 3. O-ring |
| 4. Return spring | 5. Snap ring | 6. B5 brake piston |
| 7. Seal ring | 8. Bearing race | 9. U/D clutch apply tube sub assembly |
| 10. Tube clamp | 11. Forward clutch accumulator piston | 12. Compression spring |
| 13. Accumulator cover | 14. O-ring | 15. Seal ring |
| 16. B5 brake cushion plate | 17. B5 brake plate | 18. B5 brake flange |
| 19. Snap ring | 20. B5 brake disc | |

A
B
AT
D
E
F
G
H
I
J
K
L
M

DISASSEMBLY


1. Remove tube clamps.

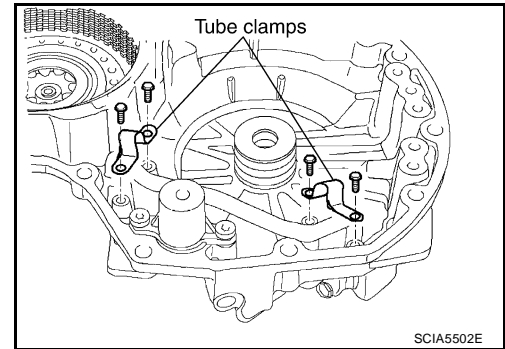


2. Remove the U/D clutch apply tube sub assembly using suitable tool.

CAUTION:


Be careful not to damage the U/D clutch apply tube sub assembly and transaxle case cover.

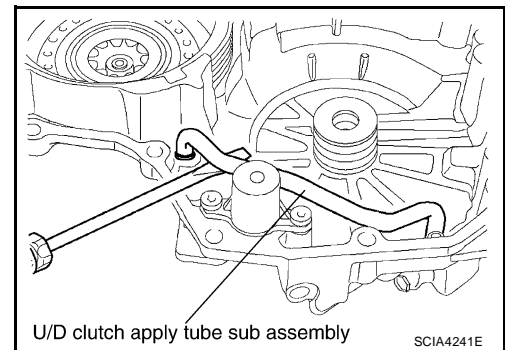

3. Remove bearing race and seal rings from transaxle case cover.

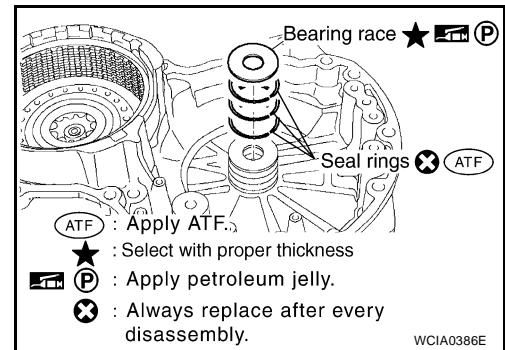


4. Remove accumulator cover, compression spring and forward clutch accumulator piston.
5. Remove O-ring from the accumulator cover.
6. Remove seal ring from the forward clutch accumulator piston.

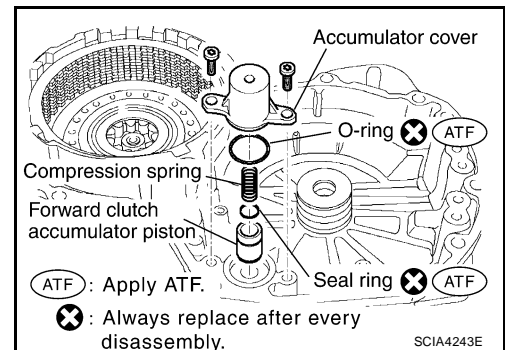


REPAIR FOR COMPONENT PARTS

7. Remove snap ring using suitable tool.

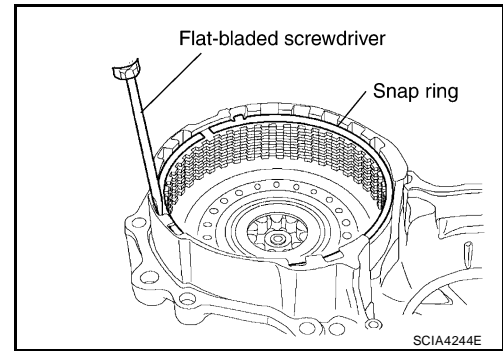

8. Remove B5 brake flange, B5 brake discs, B5 brake plates and B5 brake cushion plate.

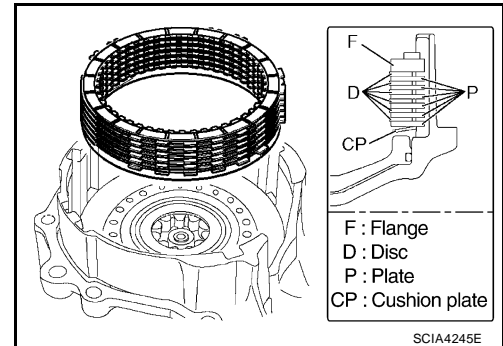


9. Place Tool on return spring, and compress return spring with a press.

Tool number : KV31102400 (J-34285 and J-34285-87)


CAUTION:

Do not press return spring too much to avoid deformation.


10. Remove snap ring using suitable tool.

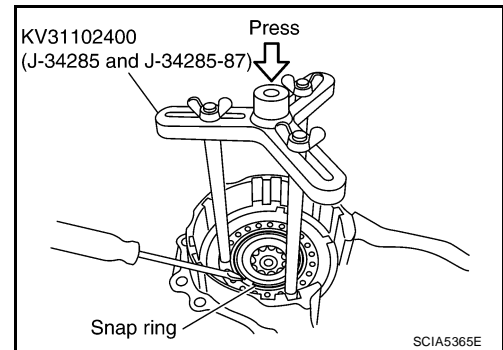

11. Remove return spring.

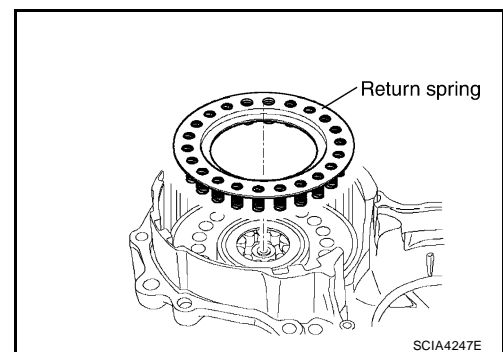


12. While pushing B5 brake piston by hand, apply compressed air (4Kg/cm²) into the oil passage as shown and remove B5 brake piston.

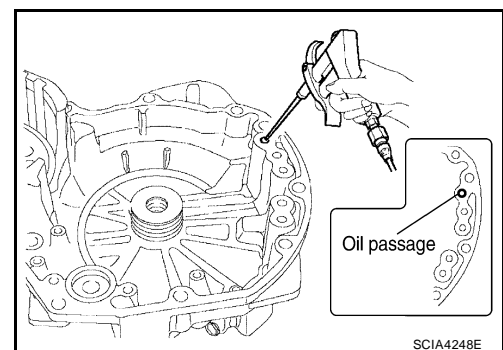

REPAIR FOR COMPONENT PARTS

13. Remove O-rings from B5 brake piston.
14. Remove seal ring from transaxle case cover.

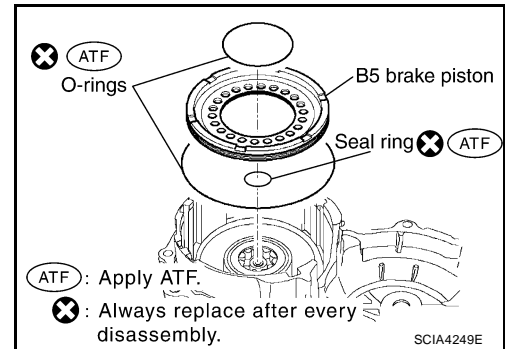

INSPECTION

- Check that the sliding surface of discs and plates are not worn or burnt. If the discs or plates are worn or burnt, replace them.

CAUTION:

Soak new clutch discs at least 2 hours in ATF.

ASSEMBLY

1. Install seal ring in transaxle case cover.

CAUTION:



- Do not reuse seal ring.
- Apply ATF to seal ring.

2. Install O-rings in B5 brake piston.

CAUTION:

- Do not reuse O-rings.
- Apply ATF to O-rings.

3. Coat the inner surface of transaxle case cover with ATF.
4. Press B5 brake piston into the transaxle case cover.
5. Place return spring on B5 brake piston.

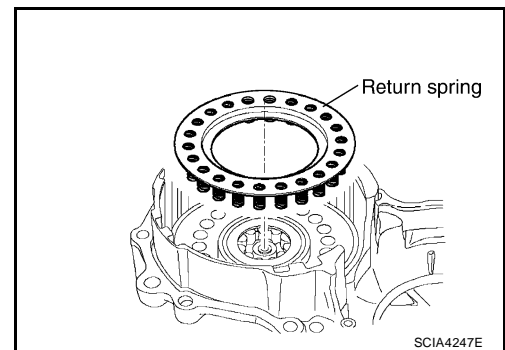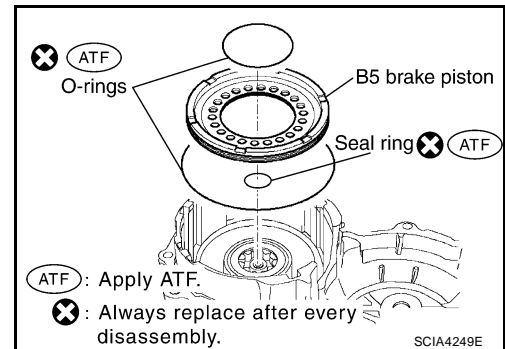


6. Place Tool on return spring, and compress return spring with a press.

Tool number : KV31102400 (J-34285 and J-34285-87)

CAUTION:

Do not press return spring too much to avoid deformation.

7. Install snap ring using suitable tool.

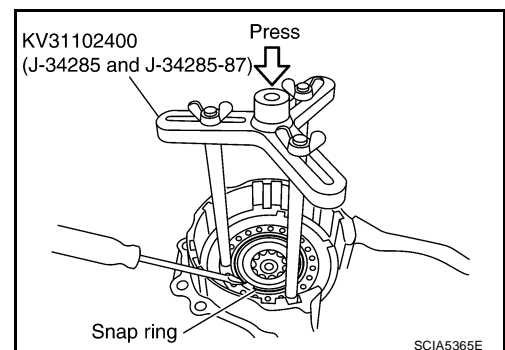


REPAIR FOR COMPONENT PARTS

8. Install B5 brake cushion plate.


CAUTION:

Be sure direction of B5 brake cushion plate.

9. Install B5 brake flange, B5 brake plates and B5 brake discs as shown.

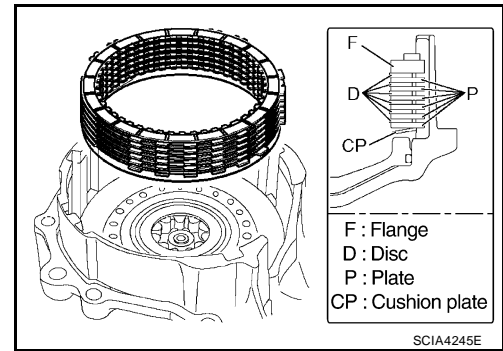

10. Install snap ring using suitable tool.

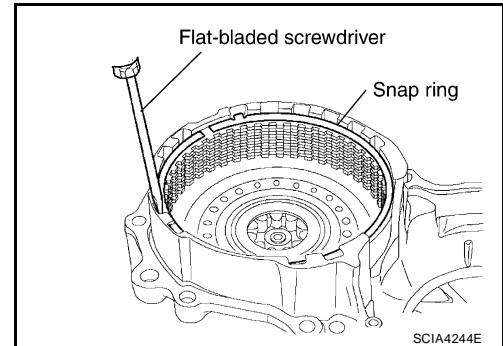

11. Install O-ring in accumulator cover.

CAUTION:

- Do not reuse O-ring.
- Apply ATF to O-ring.


12. Install seal ring in forward clutch accumulator piston.

CAUTION:

- Do not reuse seal ring.
- Apply ATF to seal ring.

13. Install forward clutch accumulator piston, compression spring and accumulator cover in transaxle case cover.


14. Tighten accumulator cover torx bolts to specified torque. Refer to [AT-274, "COMPONENTS"](#).

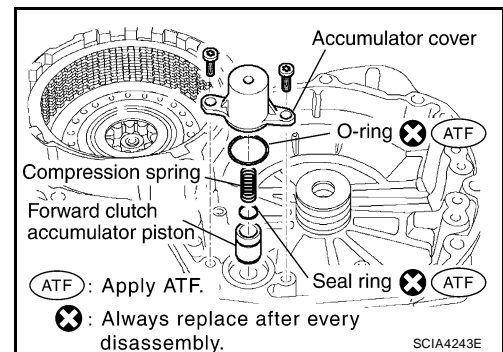

15. Install seal rings and bearing race in transaxle case cover.


CAUTION:

- Do not reuse seal rings.
- Apply ATF to seal rings.
- Apply petroleum jelly to bearing race.
- Assemble the selected bearing race in the correct order. Refer to [AT-282, "ASSEMBLY"](#).

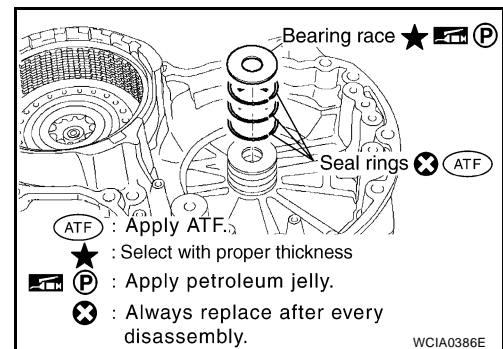


REPAIR FOR COMPONENT PARTS

16. Install the U/D clutch apply tube sub assembly using suitable tool.

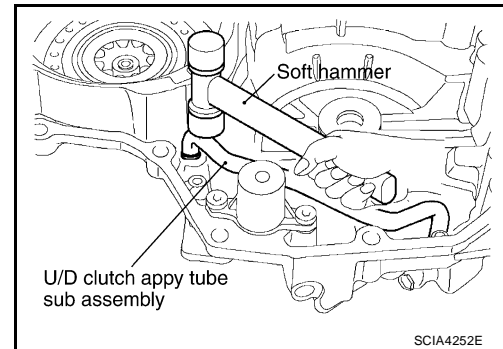

17. Tighten tube clamp bolts to specified torque. Refer to [AT-274, "COMPONENTS"](#).

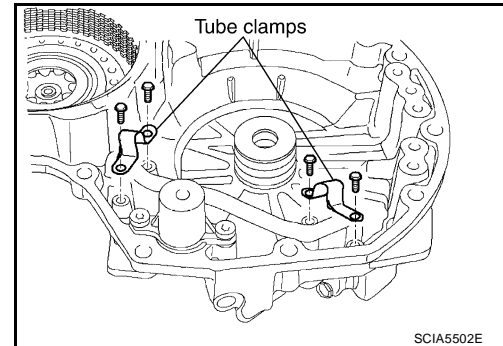


18. Set a dial indicator as shown.

19. When applying compressed air (4Kg/cm^2) into the oil passage as shown, measure the B5 brake piston stroke and check the B5 brake piston moves smoothly.

Piston stroke :2.34 - 2.70mm (0.0921 - 0.1063in)


If the B5 brake piston stroke is out standards, select another flange. Refer to [AT-310, "B5 BRAKE"](#).

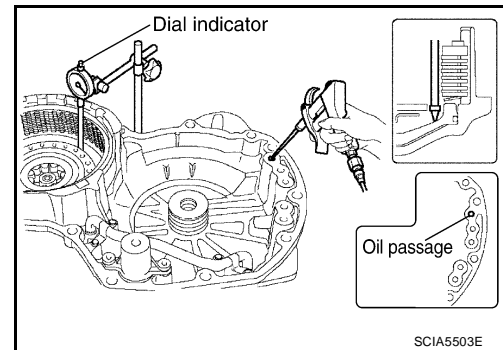

REPAIR FOR COMPONENT PARTS

Differential Gear Assembly COMPONENTS


ECS00EDM

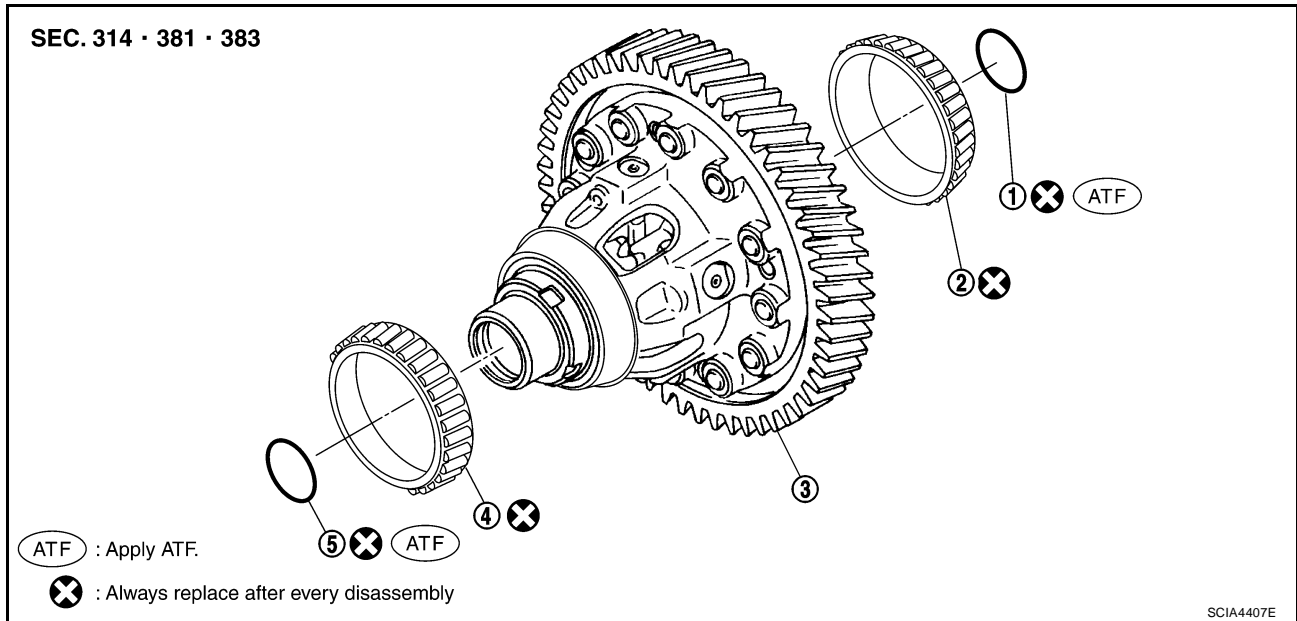

- | | | |
|---------------------------|---------------------------|-------------------------------|
| 1. O-ring | 2. Tapered roller bearing | 3. Differential gear assembly |
| 4. Tapered roller bearing | 5. O-ring | |

DISASSEMBLY


1. Remove O-rings from differential gear assembly.

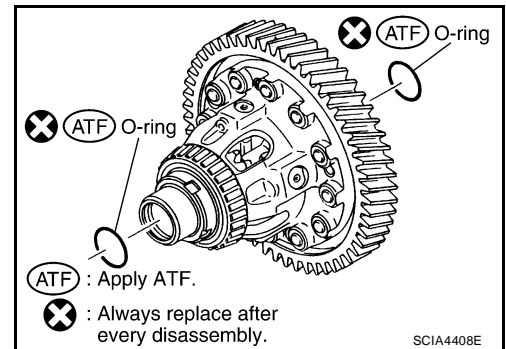

REPAIR FOR COMPONENT PARTS

2. Remove tapered roller bearings using Tool.

Tool number : ST33061000 (J-8107-2)

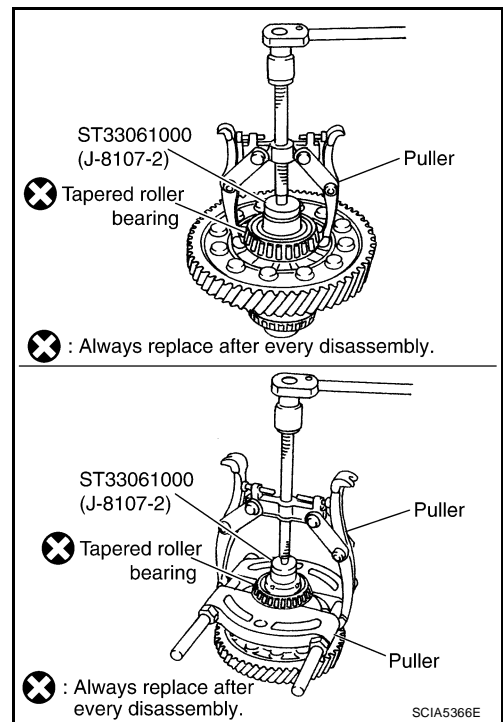


ASSEMBLY

1. Install tapered roller bearings in differential gear assembly using Tools.

Tool numbers : KV38100500 (—)
: ST30720000 (J-25405)

CAUTION:


Do not reuse tapered roller bearings.

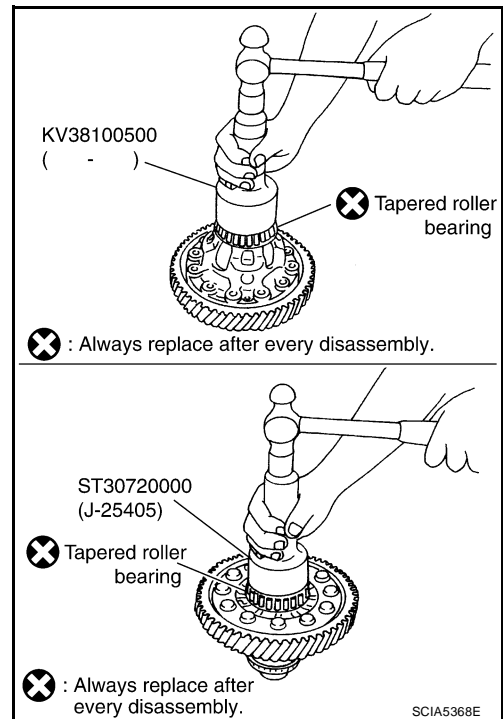

2. Install O-rings in differential gear assembly.

CAUTION:

- Do not reuse O-rings.
- Apply ATF to O-rings.

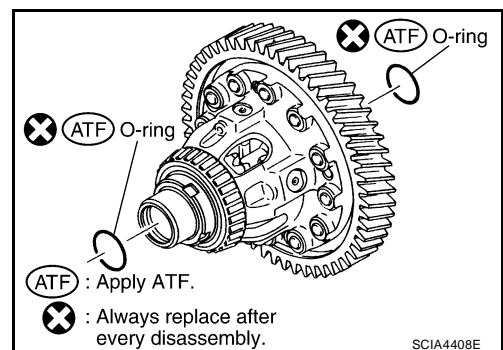

ASSEMBLY

ASSEMBLY

PF0:0000

Assembly (1)


ECS00EDN

1. Install the new differential side oil seal into transaxle case using Tool.


Tool number : ST33400001 (J-26082)

CAUTION:


- Do not reuse differential side oil seal.
- Apply ATF to differential side oil seal.

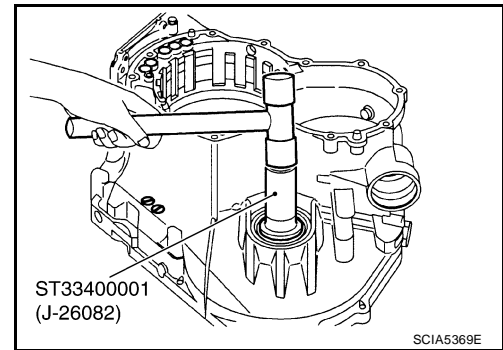


Distance : 3.0 - 4.0 mm (0.118 - 0.157 in)

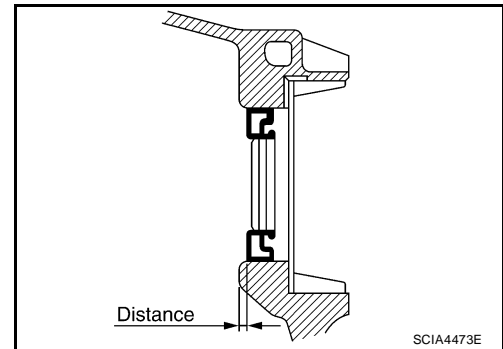

2. Install counter drive gear sub assembly.

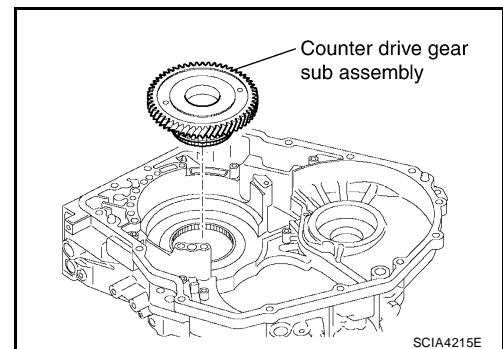

3. Install snap ring using suitable tool.

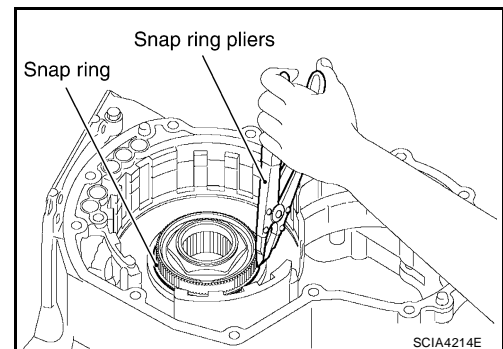


ASSEMBLY

4. Install new O-rings in 1st and reverse brake piston.


CAUTION:

- Do not reuse O-rings.
- Apply ATF to O-rings.


5. Coat the inner surface of transaxle case with ATF.
6. Install 1st and reverse brake piston in transaxle case.

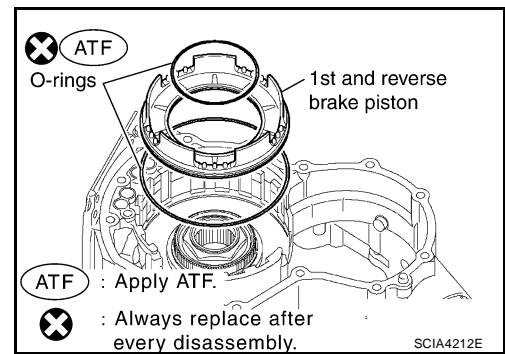

7. Put return spring on 1st and reverse brake piston.

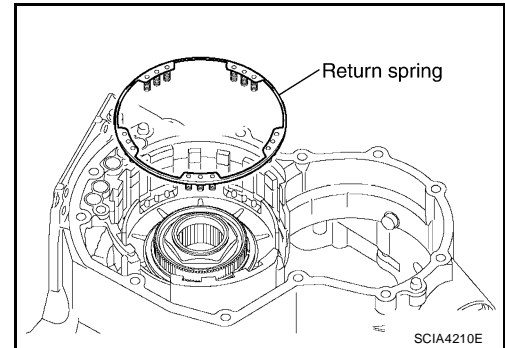


8. While compressing the return spring by hand, install the snap ring into groove using suitable tool.

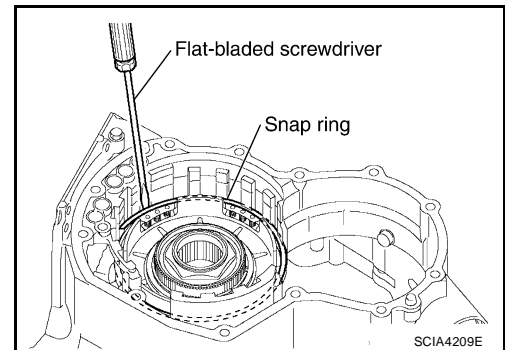


9. Put thrust bearing race and thrust bearing on counter drive gear sub assembly.

CAUTION:

Apply petroleum jelly to thrust bearing and thrust bearing race.

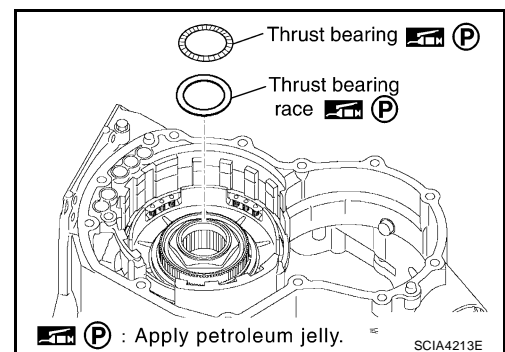


10. Install FR planetary ring gear assembly with one-way clutch No. 2.

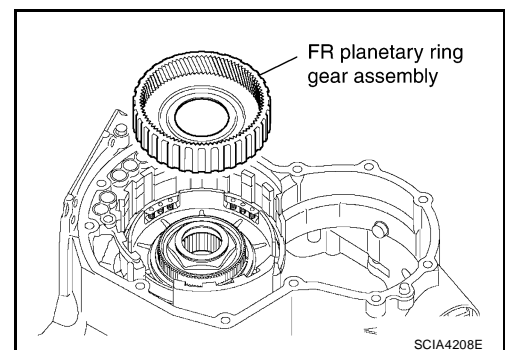


ASSEMBLY

11. Install 1st and reverse brake flanges, 1st and reverse brake discs and 1st and reverse brake plates.

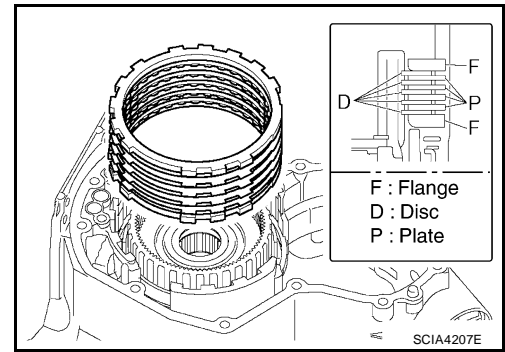

12. Install snap ring using suitable tool.

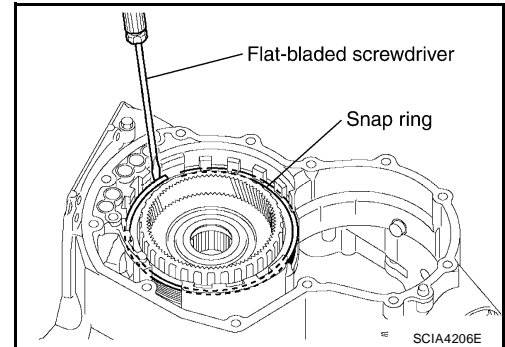


13. Set a dial indicator as shown.

14. Applying compressed air (4Kg/cm²) and measure the 1st and reverse brake piston stroke.

Piston stroke : 1.39 - 2.21 mm (0.0547 - 0.0870 in)


In a case that is out of reference, check the following items:

- Oil pressure leak
- Damage of O-ring
- Wear damage of discs

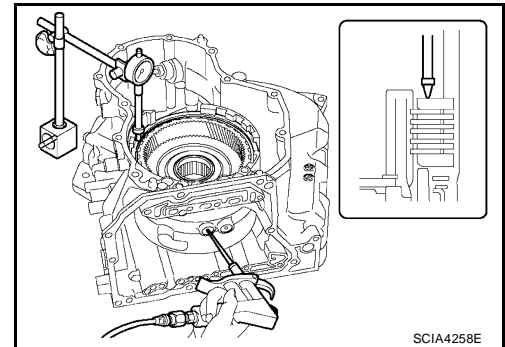

15. Install thrust bearing.


CAUTION:
Apply petroleum jelly to thrust bearing.

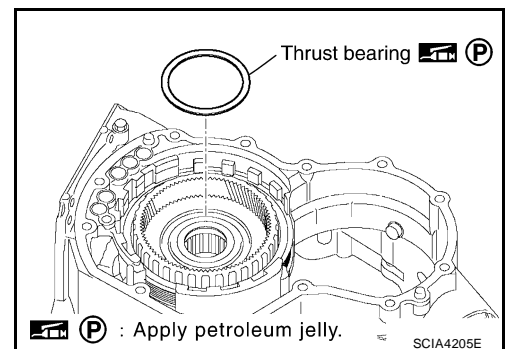

16. Install planetary gear assembly.

17. Install thrust bearing race in planetary gear assembly.

CAUTION:
Apply petroleum jelly to thrust bearing race.

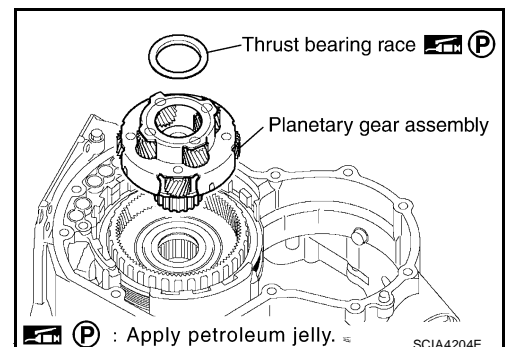


ASSEMBLY

18. Install thrust needle roller bearing and thrust bearing race in RR planetary ring gear assembly.

CAUTION:

Apply petroleum jelly to thrust needle roller bearing and thrust bearing race.


19. Install RR planetary ring gear assembly.

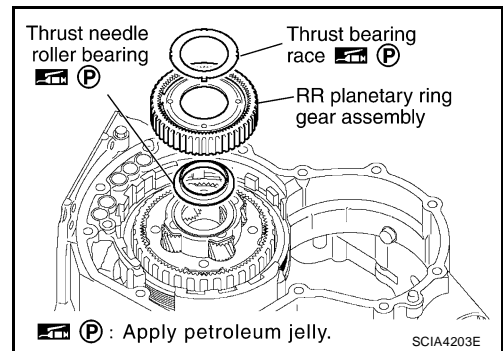

20. Install planetary sun gear sub assembly and thrust needle roller bearings.

CAUTION:

Apply petroleum jelly to thrust needle roller bearings.

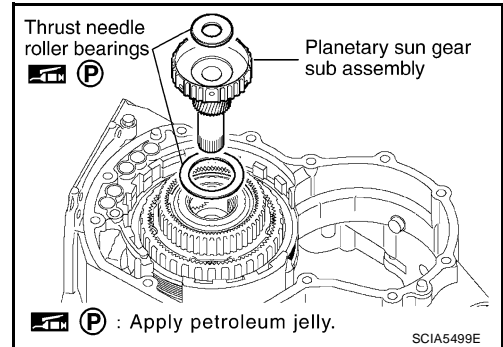


21. Install forward and direct clutch assembly.

22. Install thrust bearing race, thrust needle roller bearing and new seal ring in forward and direct clutch assembly.

CAUTION:

- Apply petroleum jelly to thrust needle roller bearing and thrust bearing race.
- Apply ATF to seal ring.
- Do not reuse seal ring.

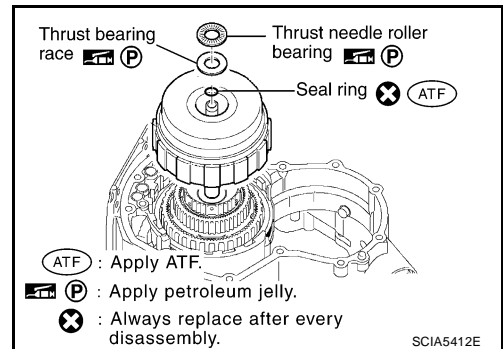


23. Check the distance of "A".

"A" : 50.850 - 51.825 mm (2.0020 - 2.0404 in)

CAUTION:

If the distance is out of standards, adjust with in standards again.

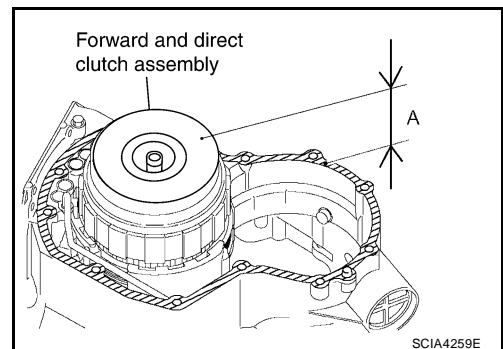


ASSEMBLY


24. Install transaxle lube apply tube using suitable tool.

CAUTION:

Be careful not to bend and damage transaxle lube apply tube.

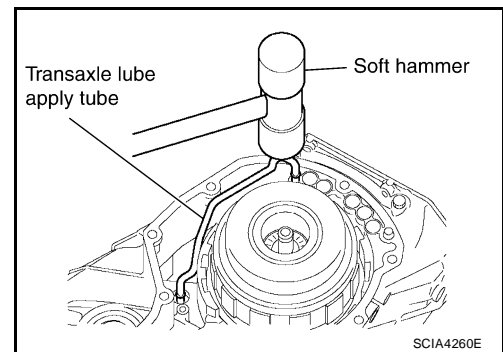


25. Tighten tube clamp bolt to specified torque. Refer to [AT-240, "Components"](#).

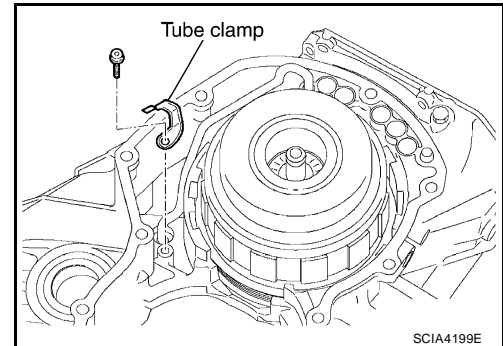


26. Install new governor apply gaskets in transaxle case.

CAUTION:

- Do not reuse governor apply gaskets.
- Apply petroleum jelly to governor apply gaskets.

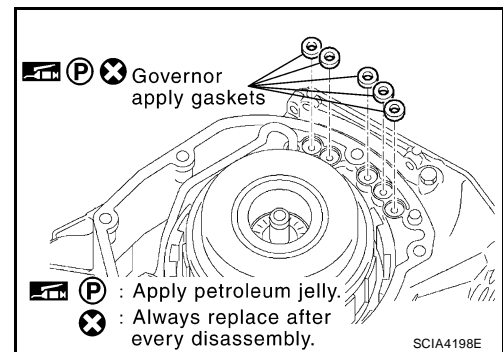


27. Install transaxle case cover in transaxle case.

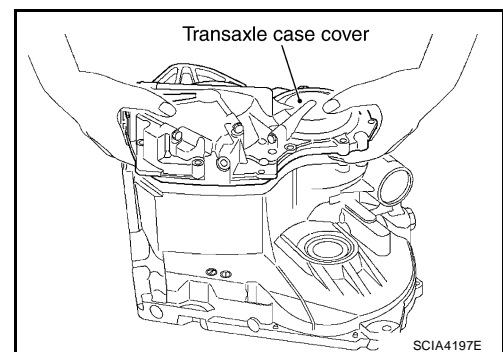

28. Tighten transaxle case cover bolts to specified torque. Refer to [AT-240, "Components"](#).

CAUTION:


Use old seal bolts for re-installing transaxle case cover when checking and adjusting the end play.

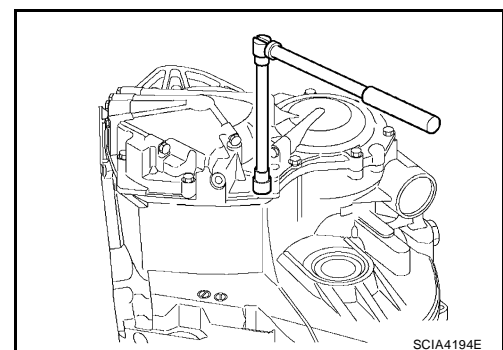


ASSEMBLY

Bolt symbol	Length mm (in)	Number of bolts
A	30 (1.18)	8
B	45 (1.77)	2
C	48 (1.89)	2
D*	—	1

*:Stud bolt

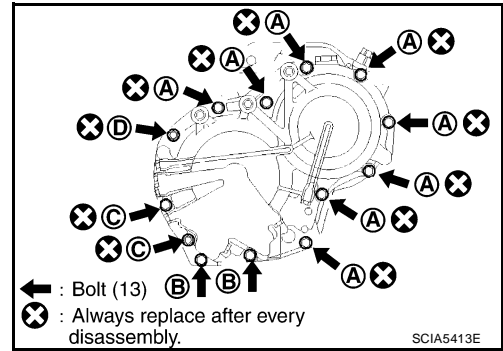

29. Tighten anchor bolt to specified torque. Refer to [AT-240, "Components"](#).

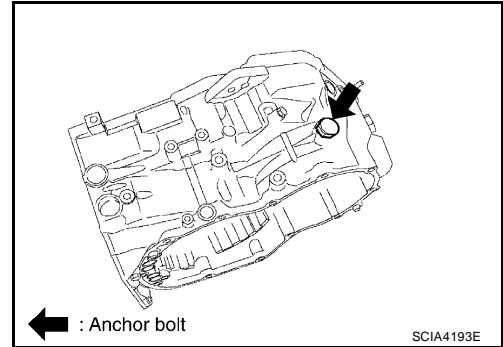


30. Install new O-ring in U/D brake piston assembly.

CAUTION:

- Do not reuse O-ring.
- Apply ATF to O-ring.

31. Coat the inner surface of transaxle case with ATF.

32. Install compression spring and U/D brake piston assembly.

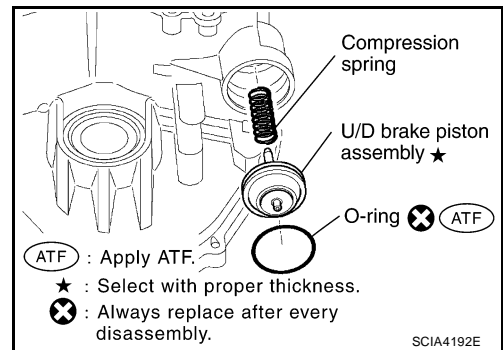


33. Install new O-rings in U/D brake damper assembly.

CAUTION:

- Do not reuse O-rings.
- Apply ATF to O-rings.


34. Install U/D brake damper assembly.

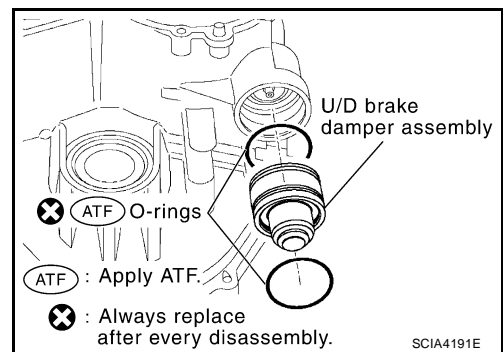

35. Install snap ring using suitable tool.

CAUTION:

If the snap ring is deformed, replace it.

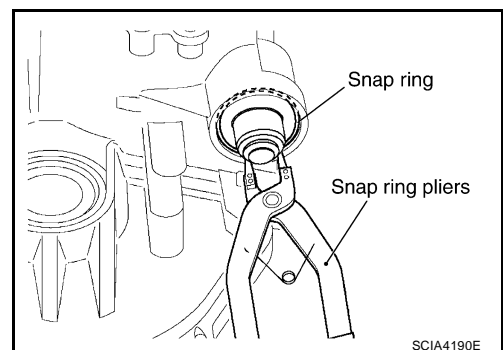


ASSEMBLY

36. Install thrust needle roller bearing, adjust shim and thrust bearing race in U/D RR planetary ring gear sub assembly.

CAUTION:

Apply petroleum jelly to adjust shim, thrust needle roller bearing and thrust bearing race.


37. Install U/D RR planetary ring gear sub assembly.

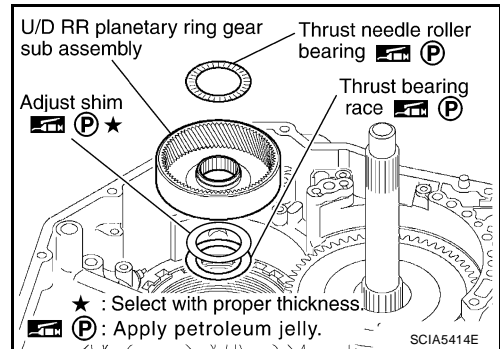


38. Install U/D RR planetary carrier assembly and thrust bearing races.

CAUTION:


Apply petroleum jelly to thrust bearing races.

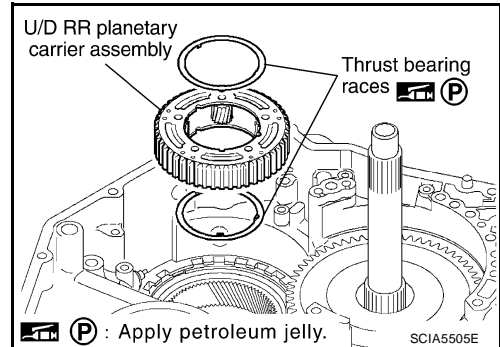

39. Install U/D brake band assembly.

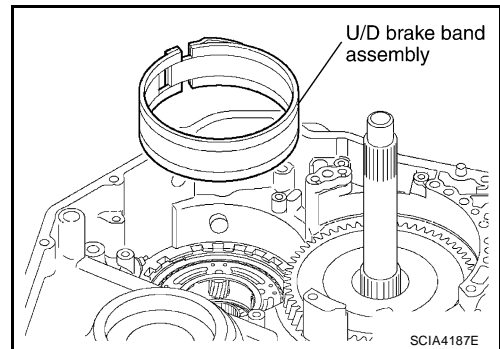

40. Install U/D clutch assembly.

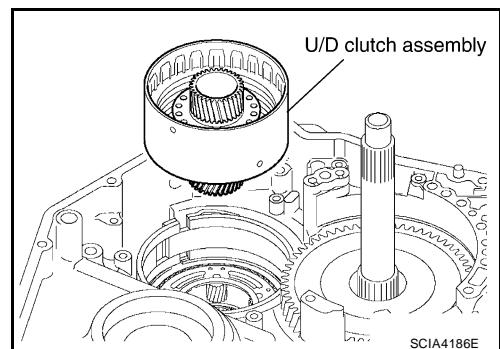


41. Measure the U/D brake piston stroke by applying and releasing the compressed air (4Kg/cm²) as shown.


CAUTION:

Measure U/D brake piston stroke after assembling U/D clutch assembly.


Piston Stroke : 5.76 - 6.76 mm (0.2268 - 0.2661 in)

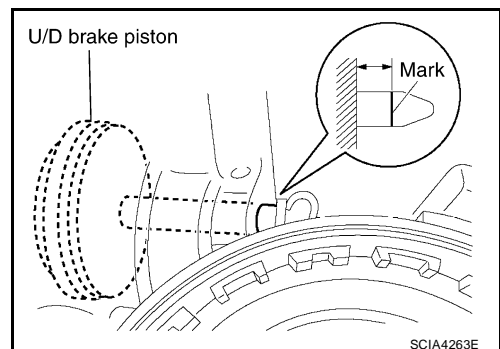

ASSEMBLY

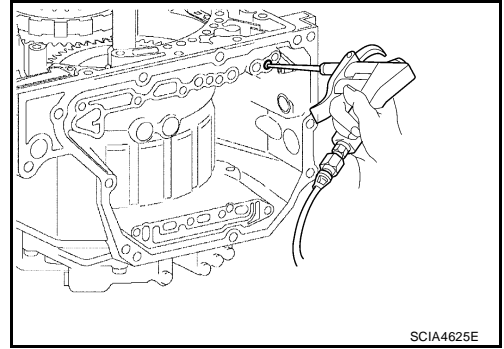

42. If the piston stroke is out of standards, select another U/D brake piston. Refer to [AT-310, "U/D BRAKE"](#) .

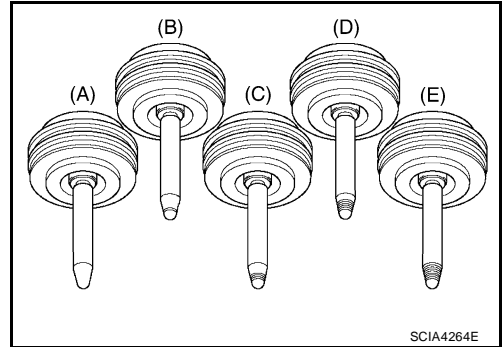

A
B
AT
D
E
F
G
H
I
J
K
L
M

ASSEMBLY


ECS00EDO

Adjustment


ADJUST PRELOAD OF TAPERED ROLLER BEARING

1. Install adjust shim and outer race in transaxle case using Tools.

Tool numbers : KV40100621 (J-25273)
: ST30022000 (—)

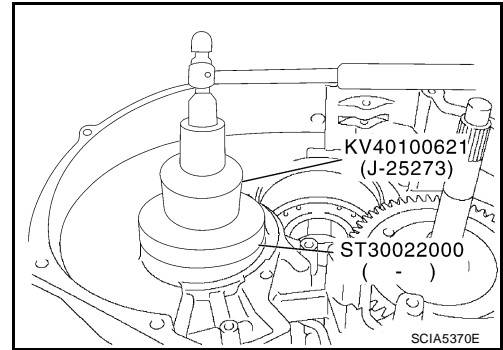

2. Install differential gear assembly in transaxle case.
3. Install transaxle housing into transaxle case.

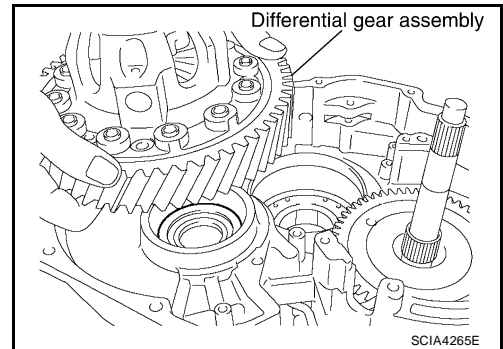



4. Tighten transaxle housing and transaxle case bolts to specified torque. Refer to [AT-240, "Components"](#).

CAUTION:

Use old seal bolts for re-installing transaxle housing when checking and adjusting preload.

Bolt symbol	Length mm (in)	Number of bolts
A	30 (1.18)	13
B	35 (1.38)	2
C	45 (1.77)	1
D*	—	1

*:Torx bolt

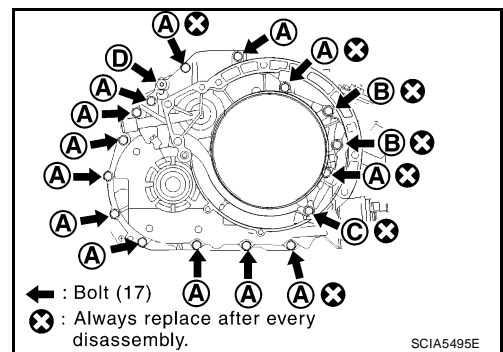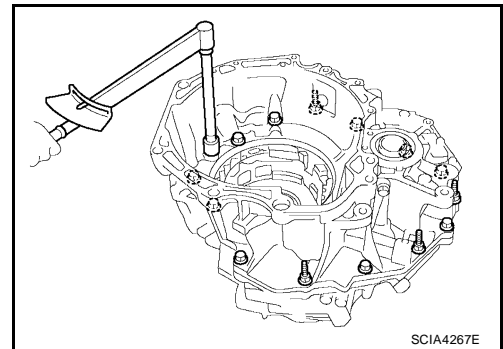

ASSEMBLY


5. Measure turning torque of differential gear assembly using Tools.

Tool numbers : **KV40102500 (J-28815)**
: **ST3127S000 (J-25765-A)**

6. Turn differential gear assembly in both directions several times to seat bearing rollers correctly.

Turning torque : **0.7 - 1.2 N·m**
(New bearing) (**0.08 - 0.12kg·m, 7 - 10 in-lb**)

If the preload is not within specification, remove differential gear assembly from transaxle case. Re-select adjust shim. Refer to [AT-311, "DIFFERENTIAL SIDE BEARING ADJUSTING SHIMS"](#).

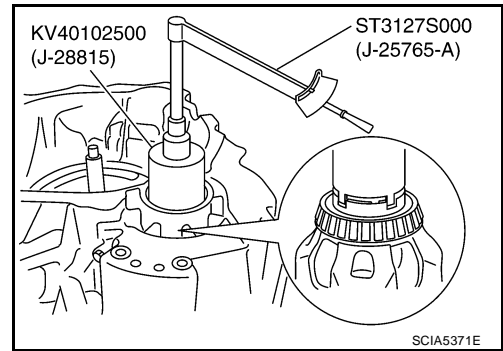

A

B

AT

D

E

F

G

H

I

J

K

L

M

ASSEMBLY

ECS00EDP


Assembly (2)

1. Remove transaxle housing and differential gear assembly from transaxle case.
2. Install new seal rings in U/D gear assembly.

CAUTION:

- Do not reuse seal rings.
- Apply ATF to seal rings.


3. Install U/D gear assembly.

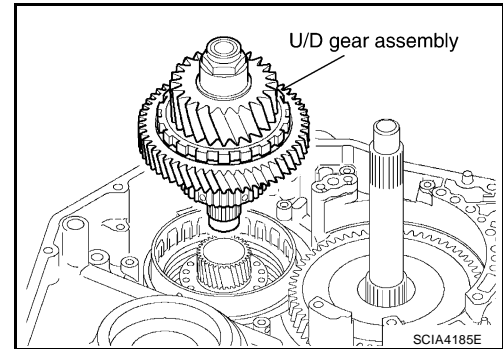

4. Install thrust needle roller bearing and thrust bearing race in U/D gear assembly.
 - a. Perform the following procedure for adjustment.

CAUTION:

Apply petroleum jelly to thrust needle roller bearing and thrust bearing race.


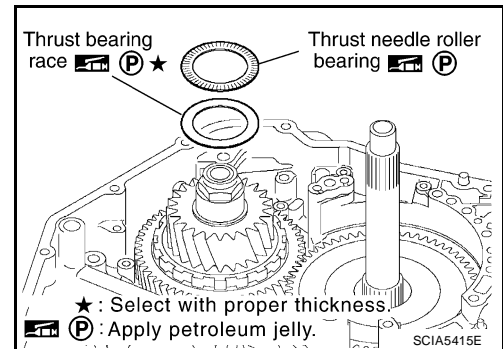


- b. Make sure that measurement "E" is within the specifications.

Specification E : 1.269 - 1.645 mm (0.0500 - 0.0648 in)

NOTE:

"E" is the height between the edge of transaxle case and the roller part of thrust needle roller bearing.

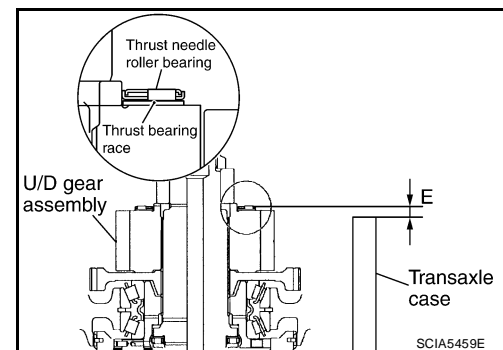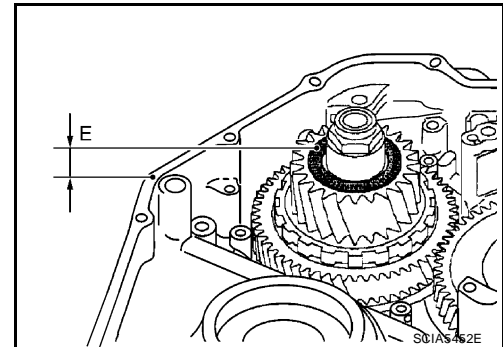

ASSEMBLY

- c. If measurement "E" is outside the specifications, replace "T" with one that has applicable thickness. Refer to [AT-311, "U/D GEAR ASSEMBLY"](#) .


CAUTION:

When adjusting "T", use "S" of thickness 0.81mm (0.032in).


- d. If all of "T" do not fit "E" within the specifications, replace "S" with one that has applicable thickness. Refer to [AT-311, "U/D RR PLANETARY RING GEAR SUB ASSEMBLY"](#) .

CAUTION:

When adjusting "S", use "T" of thickness 0.80mm (0.031in).

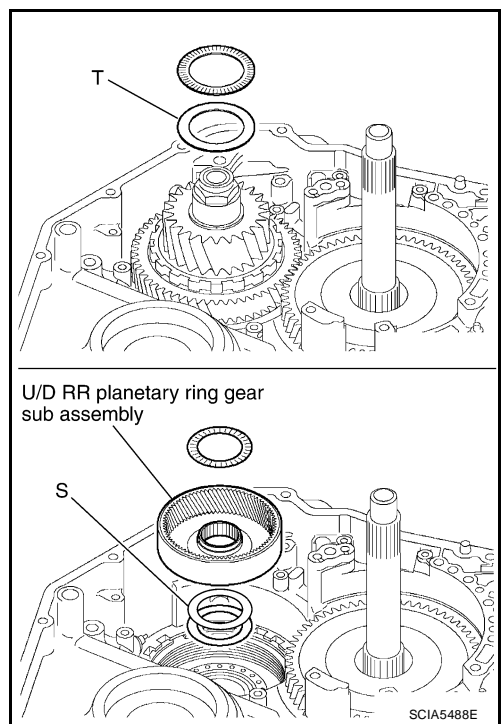

- e. Make sure that measurement "E" is within the specifications.

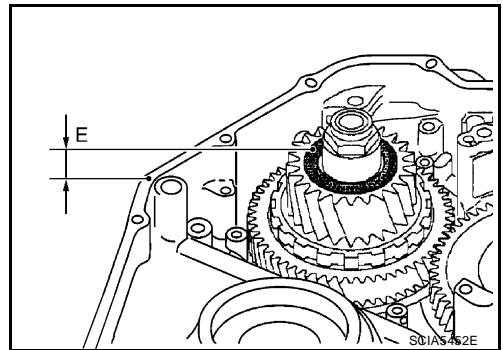


5. Install new manual valve oil seal into transaxle case until it is flush using Tool.


Tool number : ST33061000 (J-8107-2)

CAUTION:

- Do not reuse manual valve oil seal.
- Apply ATF to manual valve oil seal.

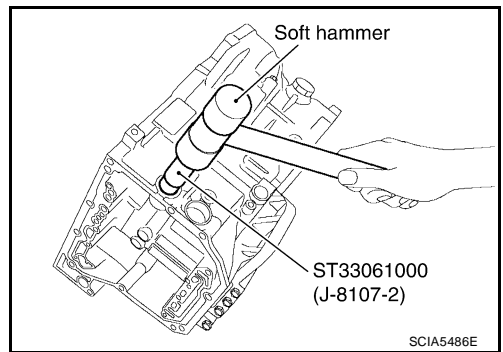


6. Install spring guide sleeve and torsion spring No. 2 in transaxle case.
7. Tighten spring guide sleeve and torsion spring No. 2 torx bolt to specified torque. Refer to [AT-240, "Components"](#) .

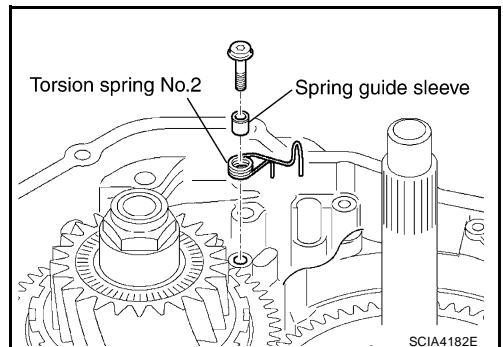


A
B
AT
D
E
F
G
H
I
J
K
L
M

ASSEMBLY


8. Install parking lockpin sub assembly.

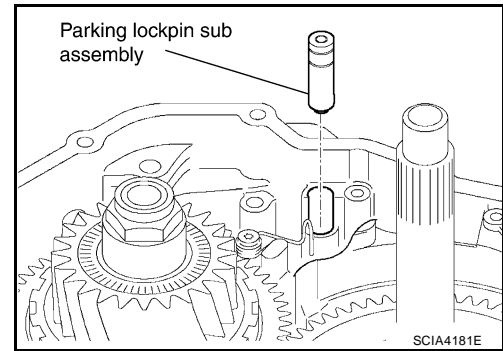


9. Install parking lock pawl bracket and parking lock pawl.

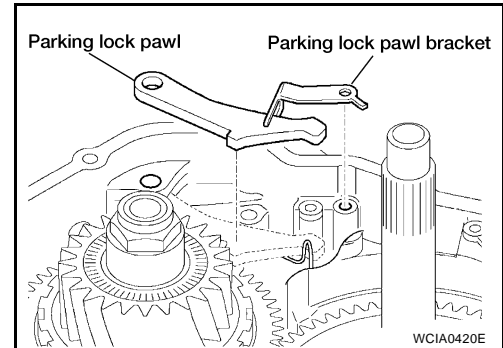

10. Install parking lock pawl shaft and torsion spring No. 1.

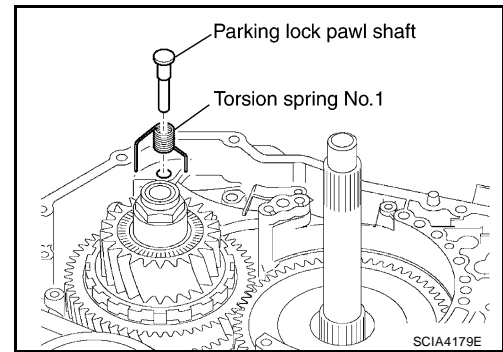


11. Install manual detent spring sub assembly.

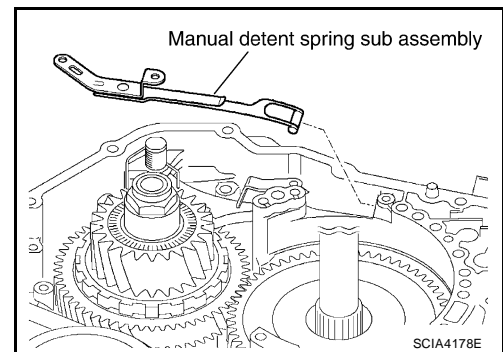


12. Temporarily tighten the bolts.

Bolt symbol	Length mm (in)	Number of bolts
A	16.7 (0.657)	1
B	14.0 (0.551)	1

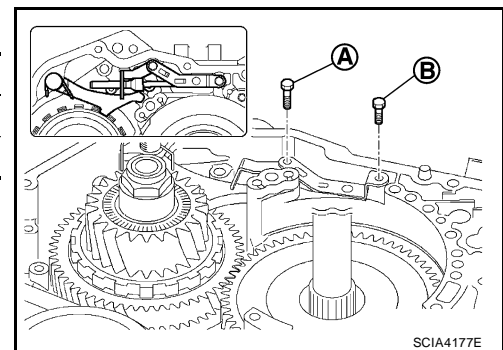


ASSEMBLY


13. Install parking lock rod sub assembly.

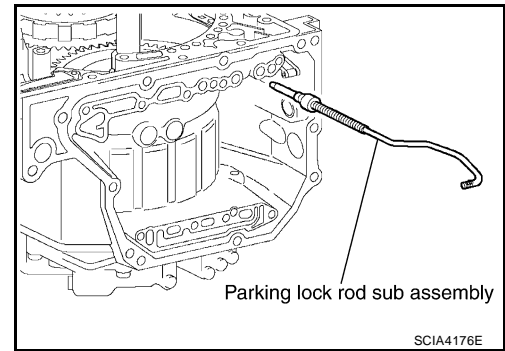


14. Install manual valve lever sub assembly connect parking lock rod sub assembly to it.

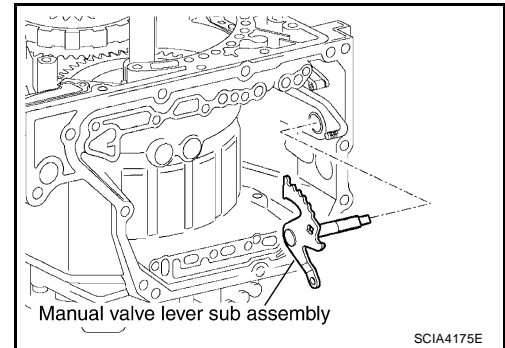

15. Connect manual detent spring sub assembly to manual valve lever sub assembly using suitable tool.

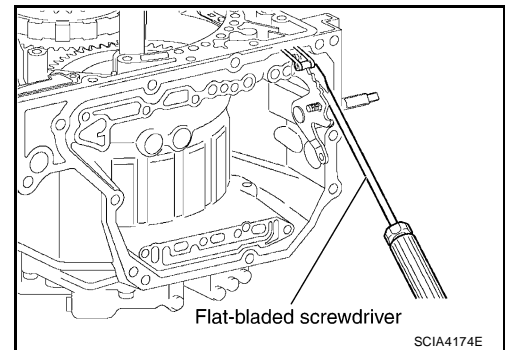


16. Tighten manual detent spring sub assembly bolts to specified torque. Refer to [AT-240, "Components"](#) .

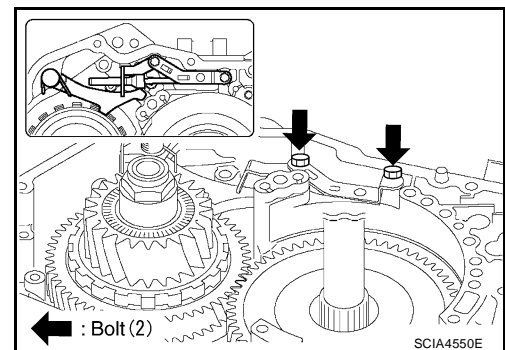

17. Install U/D brake apply tube sub assembly using suitable tool.

CAUTION:


Be careful not to damage U/D brake apply tube sub assembly.

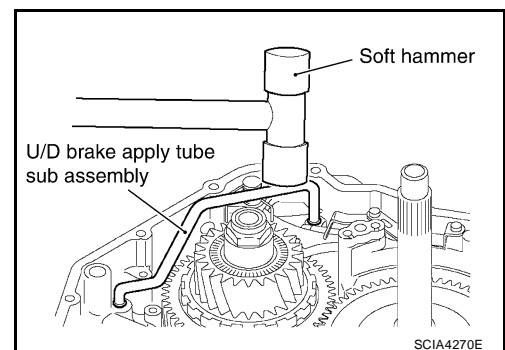


A
B
AT
D
E
F
G
H
I
J
K
L
M

ASSEMBLY


18. Tighten tube clamp bolts to specified torque. Refer to [AT-240, "Components"](#) .

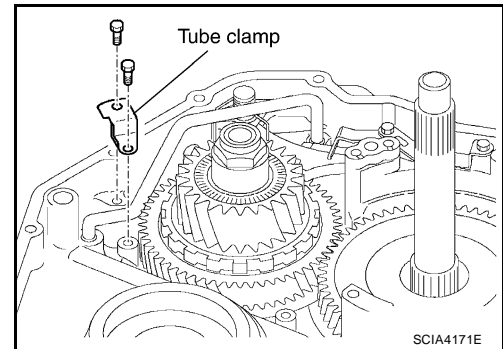


19. Install oil reservoir plate in transaxle case.
20. Tighten oil reservoir plate bolts to specified torque. Refer to [AT-240, "Components"](#) .

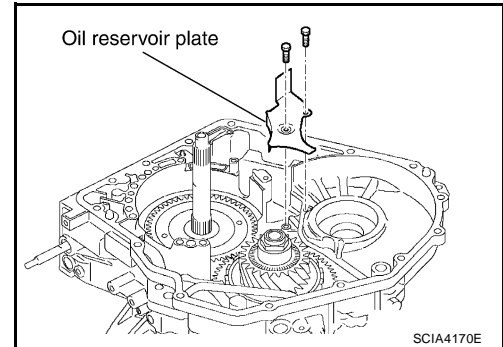

21. Install oil strainer sub assembly in transaxle case.
22. Tighten oil strainer sub assembly bolt to specified torque. Refer to [AT-240, "Components"](#) .

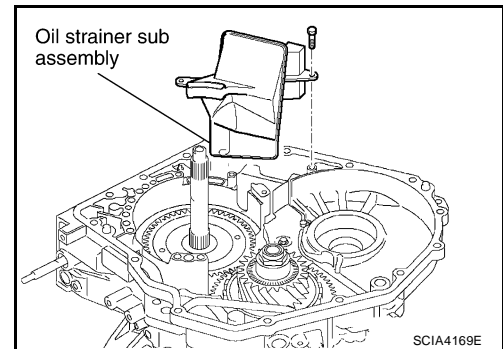

23. Install differential gear assembly.

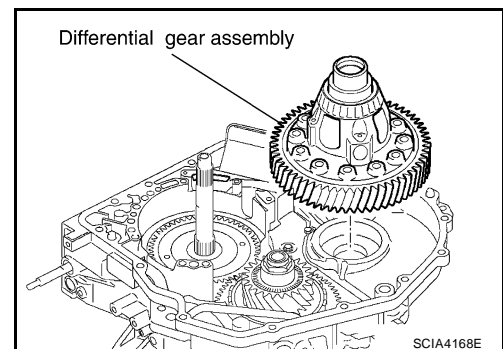


24. Drive new differential side oil seal into transaxle housing using Tool.

Tool number : ST33400001 (J-26082)

Distance : 14.8 - 15.8 mm (0.583 - 0.622 in)


CAUTION:

- Do not reuse differential side oil seal.
- Apply ATF to differential side oil seal.

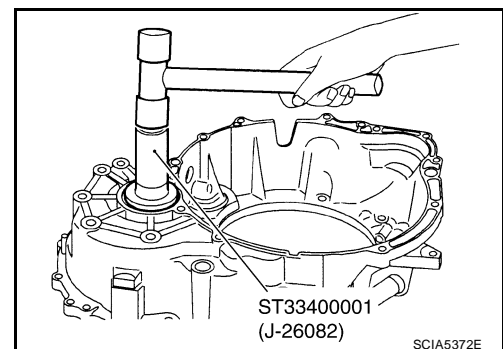

ASSEMBLY


A
B
AT

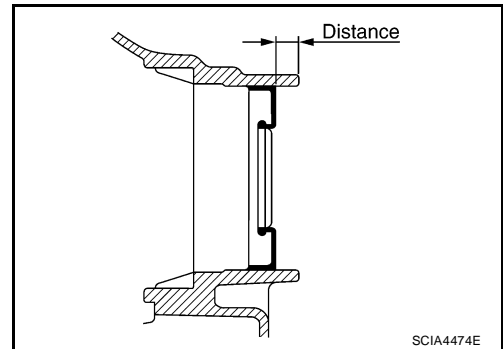

25. Install new thrust roller bearing in transaxle housing using Tool.


Tool number : ST30720000 (J-25405)

CAUTION:
Do not reuse thrust roller bearing.

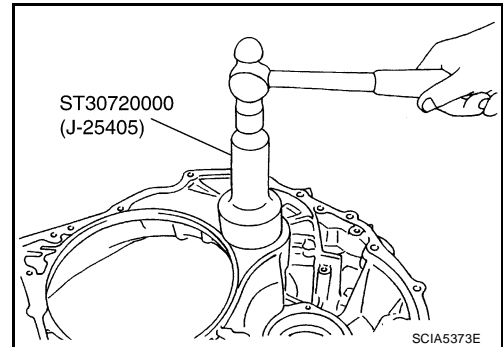

D
E
F
G


26. Install oil cleaner magnets on oil reservoir plate.

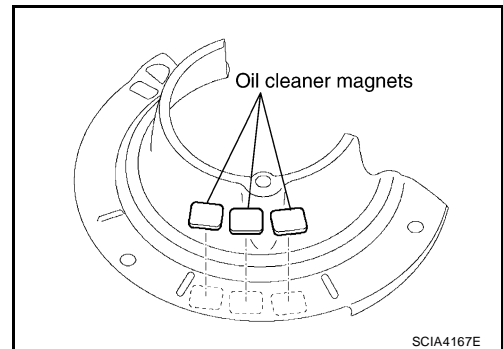

H
I
J

27. Install oil reservoir plate in transaxle housing.


28. Tighten oil reservoir plate bolts to specified torque. Refer to [AT-240, "Components"](#).

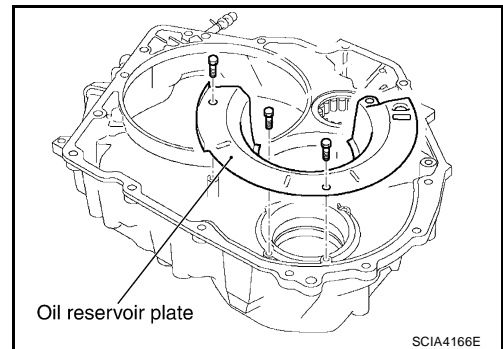

K
L
M


29. install differential gear lube apply tube using suitable tool.

CAUTION:
Be careful not to bend or damage differential gear lube apply tube.

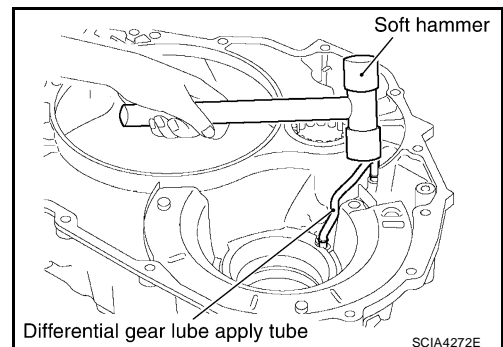

ASSEMBLY

30. Tighten tube clamp bolt to specified torque. Refer to [AT-240, "Components"](#).

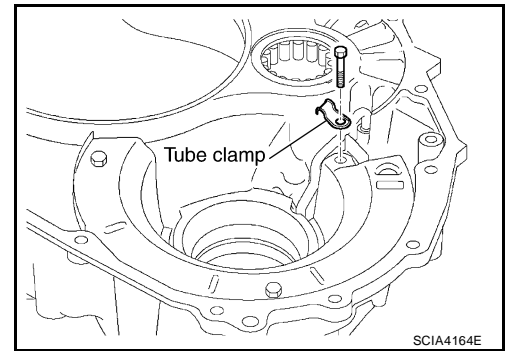

31. Install new governor apply gasket.


CAUTION:

- Do not reuse governor apply gasket.
- Apply petroleum jelly to governor apply gasket.

32. Install new seal ring.

CAUTION:


- Do not reuse seal ring.
- Apply ATF to seal ring.

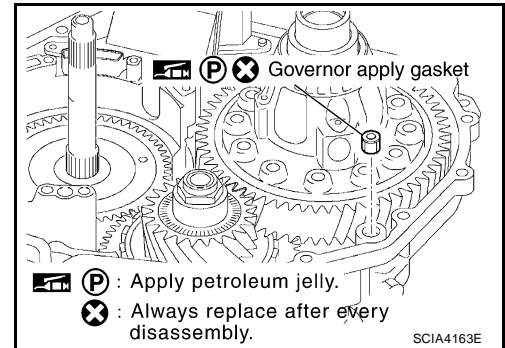

33. Apply silicone RTV to transaxle housing as shown. Refer to [GI-46, "Recommended Chemical Products and Sealants"](#).

CAUTION:

Completely remove all moisture, oil and sealant from transaxle housing and transaxle case.

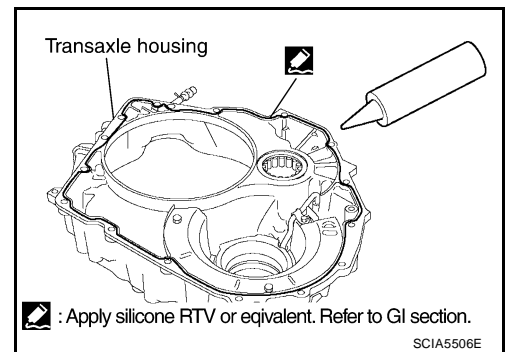


34. Install transaxle housing in transaxle case.

35. Tighten transaxle housing and transaxle case bolts to specified torque. Refer to [AT-240, "Components"](#).

CAUTION:


Do not reuse seal bolts.

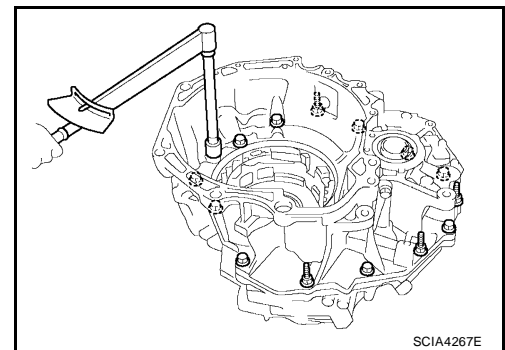

ASSEMBLY

Bolt symbol	Length mm (in)	Number of bolts
A	30 (1.18)	13
B	35 (1.38)	2
C	45 (1.77)	1
D*	—	1

*:Torx bolt

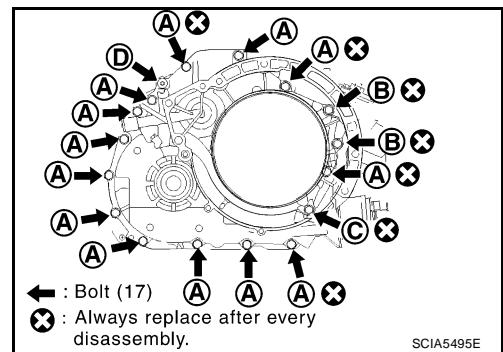


36. Install new oil seal into oil pump assembly until it is flush using Tool.

Tool number : ST30720000 (J-25405)

CAUTION:


- Do not reuse oil seal.
- Apply ATF to oil seal.

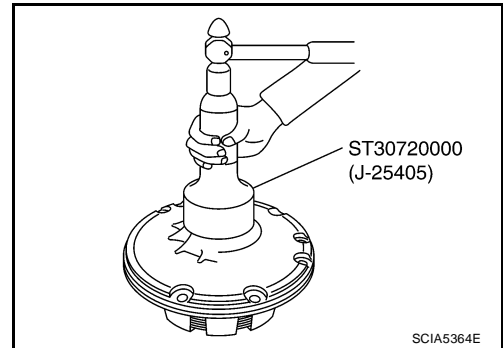

37. Install thrust washer and one-way clutch outer race sub assembly in oil pump assembly.

CAUTION:

Apply petroleum jelly to thrust washer.

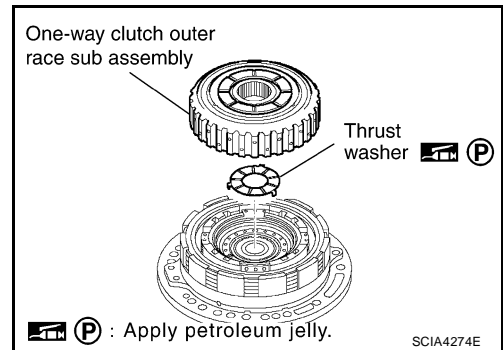


38. Check the distance of "B".

"B" : 51.09 - 51.71 mm (2.0114 - 2.0358 in)

CAUTION:


If the distance is out of standards, adjust within standards again.

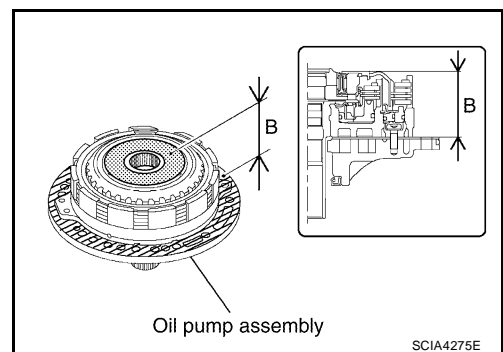

39. Place oil pump assembly through the input shaft in horizontal position, and align the bolt holes of the oil pump assembly with transaxle case. Lightly press oil pump assembly.



CAUTION:

Be careful not to drop one-way clutch outer race sub assembly.

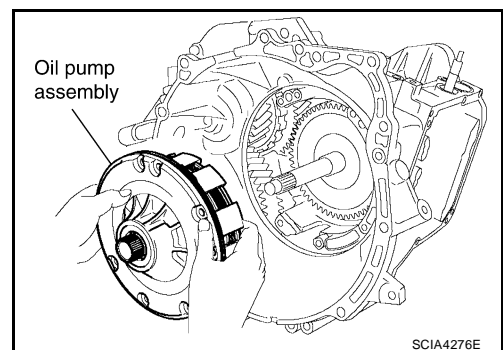


ASSEMBLY

40. Tighten oil pump assembly bolts to specified torque. Refer to [AT-240, "Components"](#) .

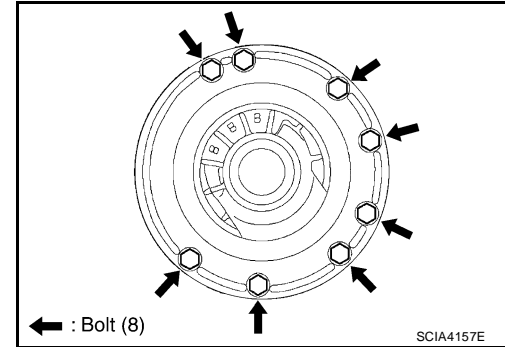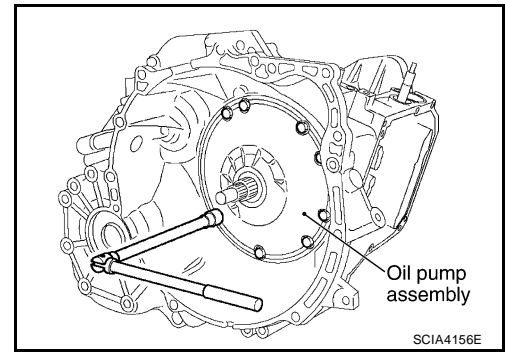


41. Set a dial indicator as shown, move the input shaft and measure the end play.

End play : 0.188 - 0.570 mm (0.0074 - 0.0224 in)

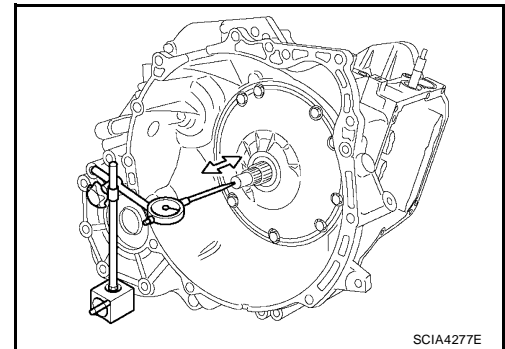


If the end play is out of standards, select another thrust bearing race. Refer to [AT-310, "FORWARD AND DIRECT CLUTCH ASSEMBLY"](#) .

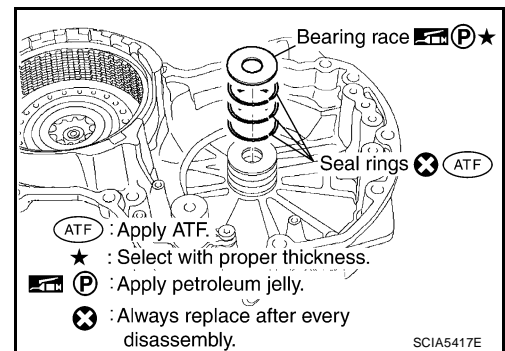


ASSEMBLY

42. Remove transaxle case cover.
 43. Apply silicone RTV to transaxle case cover as shown. Refer to [GI-46, "Recommended Chemical Products and Sealants"](#) .

CAUTION:
 Completely remove all moisture, oil and sealant from transaxle case cover and transaxle.

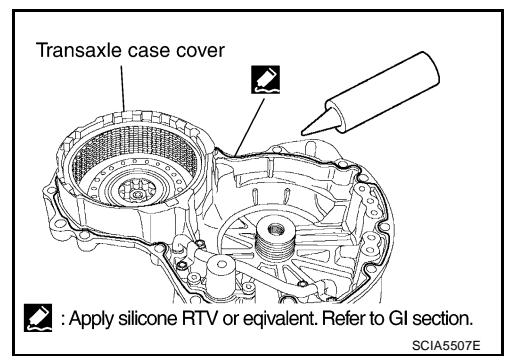


44. Install transaxle case cover in transaxle case.

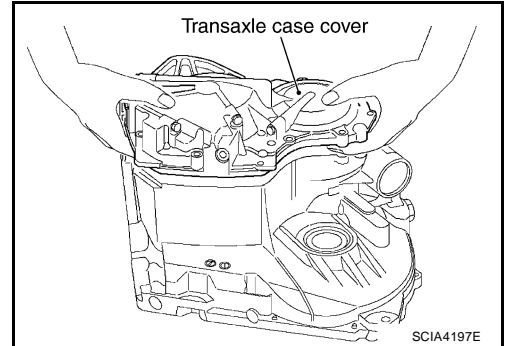


45. Tighten transaxle case cover bolts to specified torque. Refer to [AT-240, "Components"](#) .

CAUTION:
 Do not reuse seal bolts.

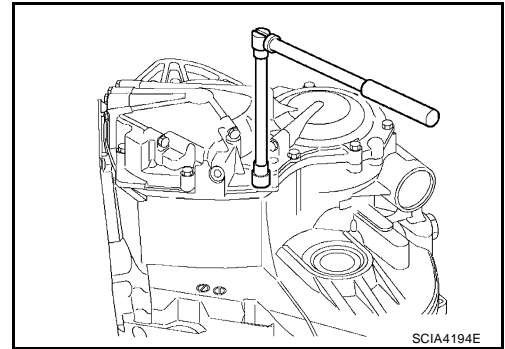

Bolt symbol	Length mm (in)	Number of bolts
A	30 (1.18)	8
B	45 (1.77)	2
C	48 (1.89)	2
D*	—	1


*:Stud bolt

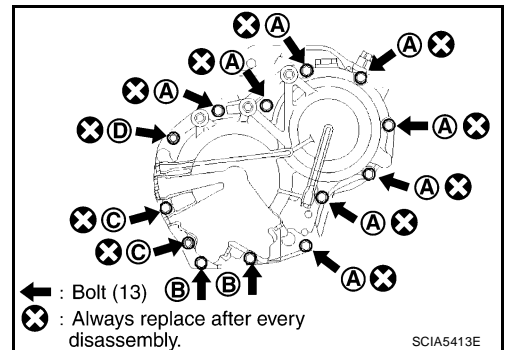

46. Install new governor apply gaskets.

CAUTION:

- Apply petroleum jelly to governor apply gaskets.
- Do not reuse governor apply gaskets.

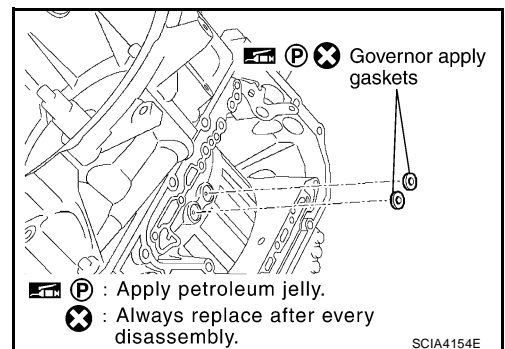


ASSEMBLY

47. Install transmission wire.

CAUTION:


- Be careful not to break the solenoid connector and A/T fluid temperature sensor.
- Apply ATF to O-ring.

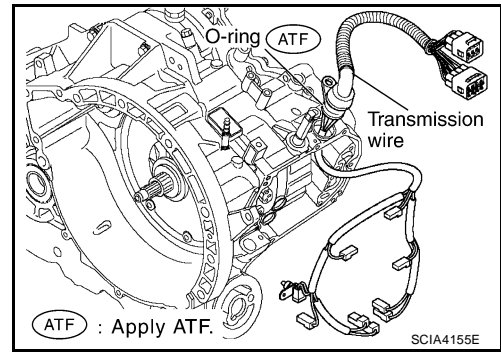

48. While holding control valve assembly, connect the parking lock rod sub assembly to manual valve lever sub assembly.


NOTE:

Shift position is "N".

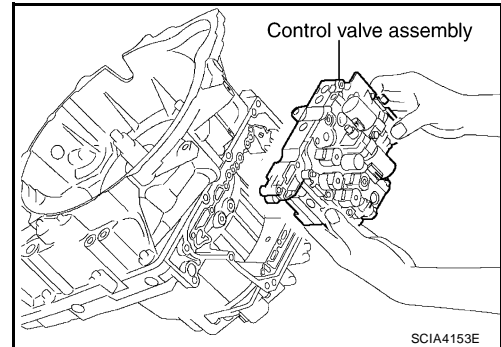

49. Tighten control valve assembly bolts to specified torque. Refer to [AT-240, "Components"](#).


Bolt symbol	Length mm (in)	Number of bolts
A	55 (2.17)	2
B	50 (1.97)	2
C	16 (0.63)	2

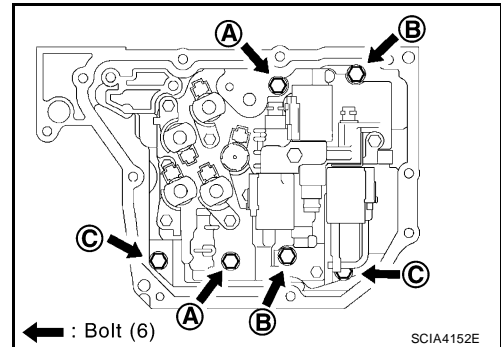


50. Install new suction cover and suction cover gasket in control valve assembly.

CAUTION:

Do not reuse suction cover gasket.

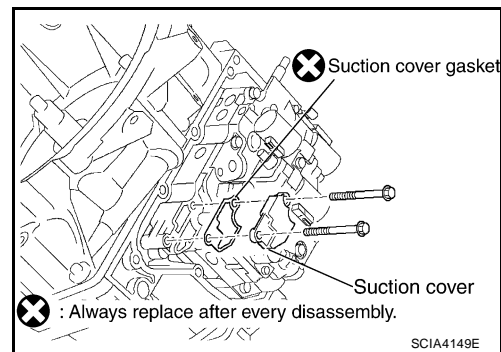


51. Tighten suction cover gasket and suction cover bolts to specified torque. Refer to [AT-240, "Components"](#).

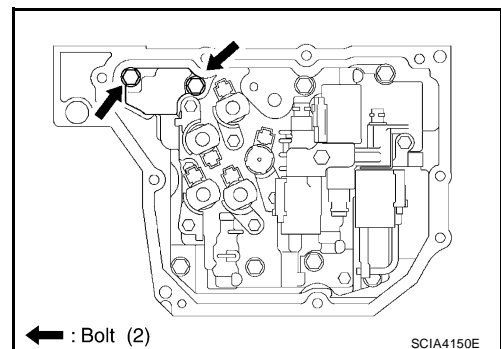


ASSEMBLY


52. Install sensor clamp and A/T fluid temperature sensor in control valve assembly.

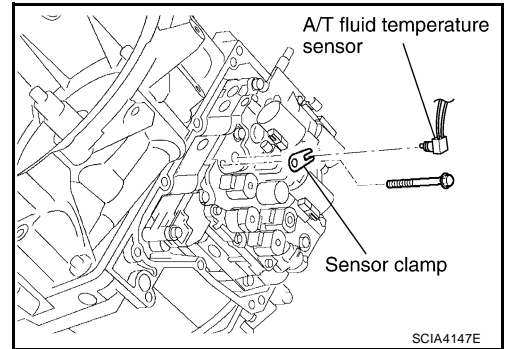

53. Tighten sensor clamp bolt to specified torque. Refer to [AT-240](#), "[Components](#)".

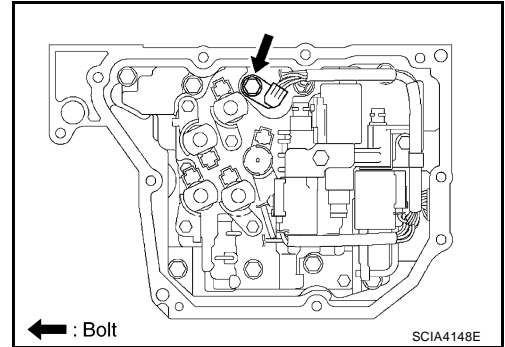


54. Connect the solenoid connectors.

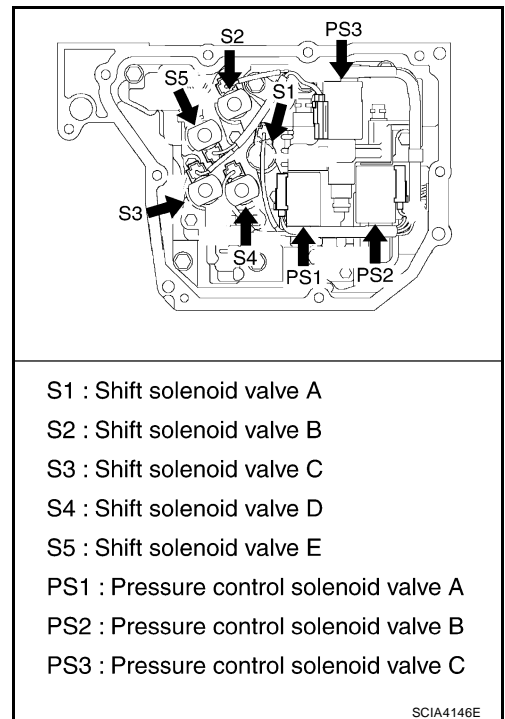


55. Apply silicone RTV to side cover as shown. Refer to [GI-46](#), "[Recommended Chemical Products and Sealants](#)".

CAUTION:
Completely remove all moisture, oil and sealant from side cover and transaxle case.

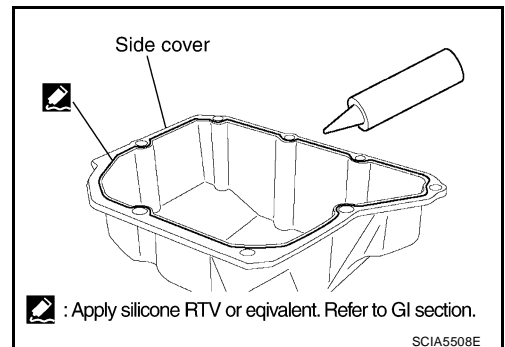


ASSEMBLY

56. Install side cover in transaxle case.

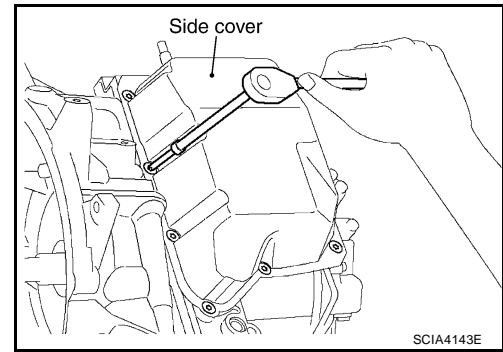

57. Tighten new side cover torx bolts to specified torque. Refer to [AT-240, "Components"](#).

CAUTION:
Do not reuse seal bolts.

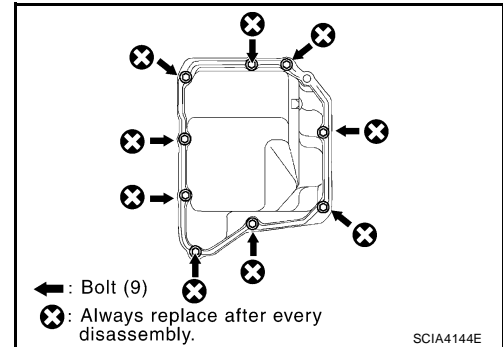


58. Install new O-rings in ATF cooler assembly.

CAUTION:
● Do not reuse O-rings.
● Apply ATF to O-rings.

59. Install ATF cooler assembly, washer and new spring washer.

CAUTION:
Do not reuse spring washer.


60. Tighten hexagon bolt to specified torque. Refer to [AT-240, "Components"](#).

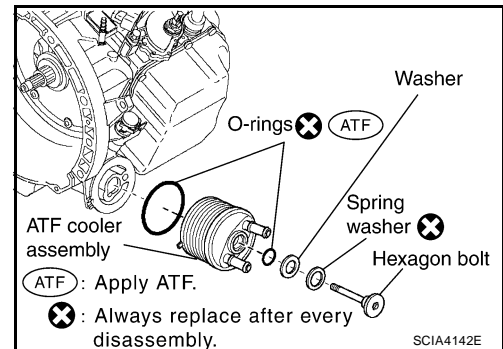

61. Install PNP switch to manual valve lever sub assembly.

62. Temporarily tighten the bolts.


Bolt symbol	Length mm (in)	Number of bolts
A	20 (0.79)	1
B	33 (1.30)	1

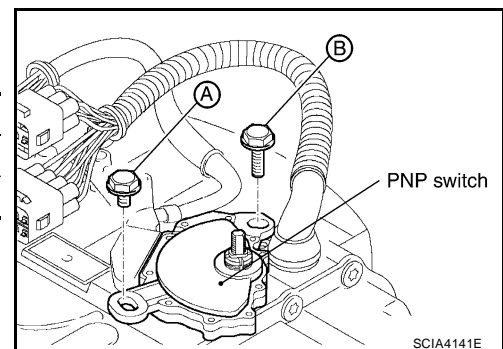

63. Install new washer plate and new lock washer.

CAUTION:
Do not reuse washer plate and lock washer.

64. Tighten nut to specified torque. Refer to [AT-240, "Components"](#).

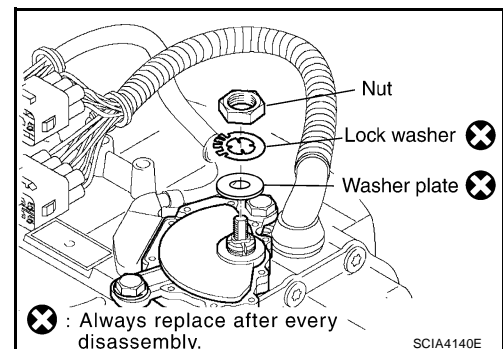


ASSEMBLY


65. Install Tool.

Tool number : KV991J0060 (J-45404)


66. Adjust PNP switch so that Tool pointer aligns with neutral base line on PNP switch body.

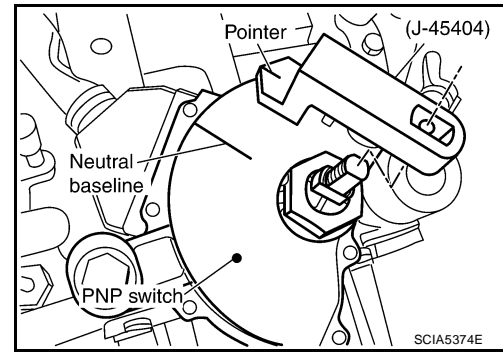

67. Tighten PNP switch torx bolts to specified torque. Refer to [AT-240, "Components"](#) .

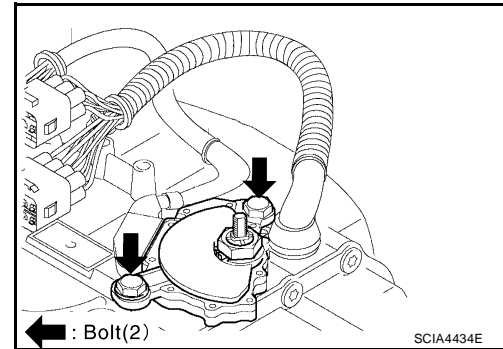


68. Bend the lock washer using suitable tool.

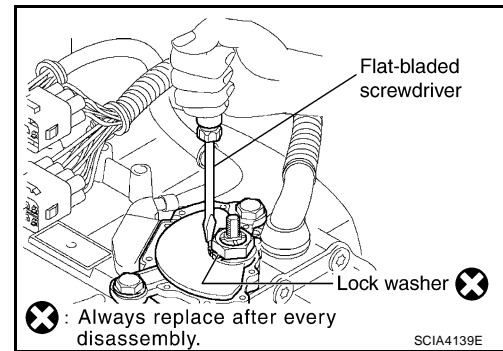

69. Install range lever in manual valve lever sub assembly.

70. Tighten range lever nut to specified torque. Refer to [AT-240, "Components"](#) .

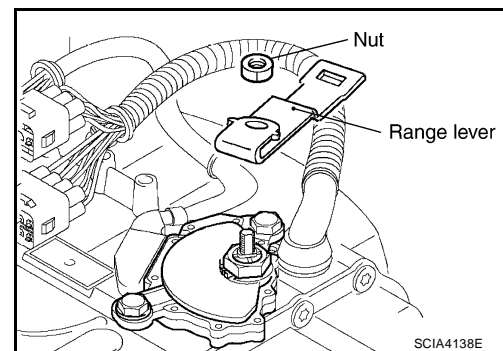


71. Install turbine revolution sensor in transaxle case.

72. Tighten new turbine revolution sensor bolt to specified torque. Refer to [AT-240, "Components"](#) .

CAUTION:

- Do not reuse seal bolt.
- Apply ATF to O-ring.

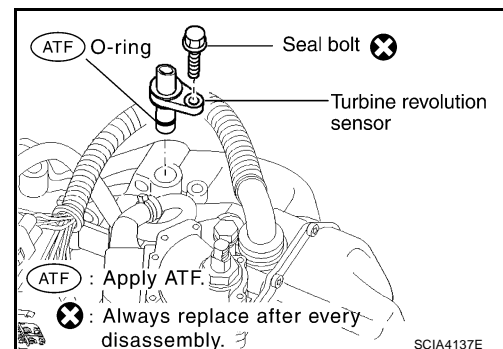


ASSEMBLY

73. Install revolution sensor in transaxle case.
74. Tighten new revolution sensor bolt to specified torque. Refer to [AT-240, "Components"](#) .

CAUTION:

- Do not reuse seal bolt.
- Apply ATF to O-ring.

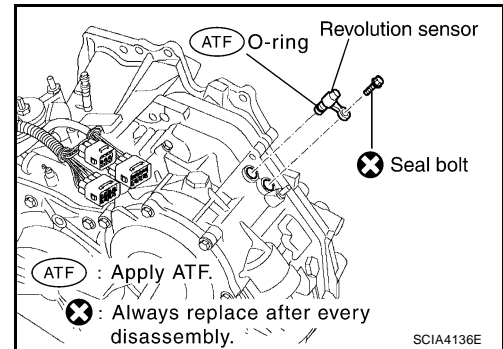

75. Install new O-ring in A/T fluid charging pipe.

CAUTION:

- Do not reuse O-ring.
- Apply petroleum jelly to O-ring.

76. Install A/T fluid charging pipe in transaxle housing.
77. Install fluid cooler tube with new copper washers.


CAUTION:

Do not reuse copper washer.

78. Tighten fluid cooler tube union to specified torque. Refer to [AT-240, "Components"](#) .

79. Install air breather hose.

80. Install A/T fluid level gauge.

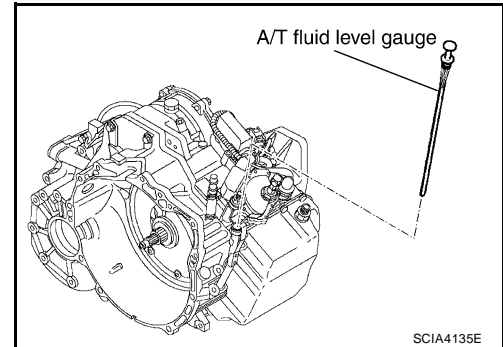


81. Install drain plug and new gasket in transaxle housing.

CAUTION:

Do not reuse gasket.

82. Tighten drain plug to specified torque. Refer to [AT-240, "Components"](#) .

83. Install torque converter.

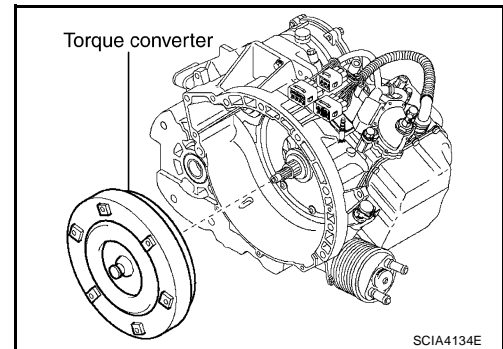


84. Check the distance of "C".

"C" : 14.0 mm (0.551 in)

CAUTION:

If the distance is out of standards, adjust within standards again.

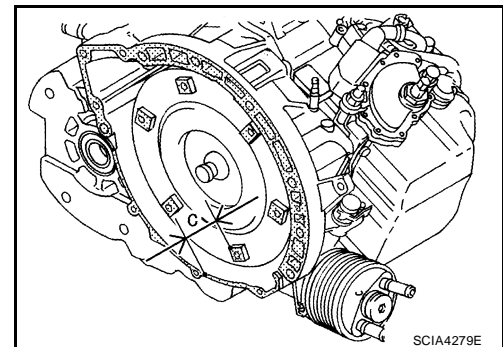

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

PFP:00030

General Specifications

ECS00EDQ

Engine		VQ35DE
Automatic transaxle model		RE5F22A
Automatic transaxle model code number		CK710
Stall torque ratio		1.8: 1
Transaxle gear ratio	1st	4.657
	2nd	3.032
	3rd	1.982
	4th	1.341
	5th	1.018
	Reverse	5.114
	Final drive	2.269
Recommended fluid		Genuine NISSAN Matic K ATF *
Fluid capacity		7.4 ℓ (7-7/8 US qt, 6-1/2 Imp qt)

CAUTION:

- Use only Genuine Nissan Matic K ATF. Do not mix with other fluid.
- Using automatic transaxle fluid other than Genuine Nissan Matic K ATF will deteriorate in driveability and automatic transaxle durability, and may damage the automatic transaxle, which is not covered by the warranty.

*: Refer to [MA-9, "RECOMMENDED FLUIDS AND LUBRICANTS"](#).

Shift Schedule

ECS00EDR

VEHICLE SPEED WHEN SHIFTING GEARS

Accelerator angle	Vehicle speed km/h (MPH) (Approx.)							
	D1 →D2	D2 →D3	D3 →D4	D4 →D5	D5 →D4	D4 →D3	D3 →D2	D2 →D1
100 %	67 (42)	105 (65)	170 (106)	241 (150)	230 (143)	160 (99)	92 (57)	45 (28)
90 %	67 (42)	105 (65)	170 (106)	241 (150)	230 (143)	160 (99)	92 (57)	45 (28)
80 %	65 (40)	100 (62)	152 (94)	227 (141)	178 (111)	142 (88)	86 (53)	45 (28)
70 %	53 (33)	80 (50)	125 (78)	185 (115)	147 (91)	137 (85)	68 (42)	38 (24)
60 %	46 (29)	71 (44)	106 (66)	156 (97)	108 (67)	78 (48)	46 (29)	22 (14)
50 %	43 (27)	67 (42)	97 (60)	145 (90)	98 (61)	68 (42)	40 (25)	18 (11)
40 %	38 (24)	60 (37)	89 (55)	130 (81)	89 (55)	56 (35)	30 (19)	13 (8)
30 %	33 (21)	50 (31)	70 (43)	108 (67)	68 (42)	45 (28)	25 (16)	12 (7)
20 %	23 (14)	35 (22)	49 (30)	77 (48)	49 (30)	32 (20)	22 (14)	8 (5)
10 %	17 (11)	29 (18)	39 (24)	58 (36)	44 (27)	32 (20)	22 (14)	8 (5)

SERVICE DATA AND SPECIFICATIONS (SDS)

VEHICLE SPEED WHEN PERFORMING AND RELEASING COMPLETE LOCK-UP

Accelerator angle	Vehicle speed km/h (MPH) (Approx.)	
	Lock-up "ON"	Lock-up "OFF"
50 %	190 (118)	137 (85)
15%	101 (63)	72 (45)
0 - 8 %	73 (45)	70 (43)

- Lock-up vehicle speed indicates the speed in D position.
- Perform lock-up inspection after warming up engine.
- Lock-up vehicle speed may vary depending on the driving conditions and circumstances.

VEHICLE SPEED WHEN PERFORMING AND RELEASING SLIP LOCK-UP

Accelerator angle	Gear position	Vehicle speed km/h (MPH) (Approx.)	
		Slip lock-up "ON"	Slip lock-up "OFF"
0 - 10 %	4th	45 (28)	42 (26)
	5th	58 (36)	55 (34)

- Slip lock-up vehicle speed indicates the speed in D position.
- Perform slip lock-up inspection after warming up engine.
- Slip lock-up vehicle speed may vary depending on the driving conditions and circumstances.

Stall Speed

ECS00EDS

Stall speed	2,430 - 2,730 rpm
-------------	-------------------

Line Pressure

ECS00EDT

Engine speed	Line pressure kPa (kg/cm ² , psi)	
	D, L positions	R position
At idle speed	333 - 392 (3.4 - 4.0, 48 - 57)	500 - 608 (5.1 - 6.2, 73 - 88)
At stall speed	1,285 - 1,393 (13.1 - 14.2, 186 - 202)	1,706 - 1,981 (17.4 - 20.2, 247 - 287)

Time Lag

ECS00EDU

Selector lever	Time
N to D position	Less than 0.7 sec.
N to R position	Less than 1.2 sec.

Shift Solenoid Valves

ECS00EDV

Shift position	Shift solenoid valve					Remarks
	A	B	C	D	E	
P	OFF (Open)	OFF (Closed)	OFF (Closed)	OFF (Open)	OFF (Closed)	PARK POSITION
R	OFF (Open)	OFF (Closed)	ON (Open)	OFF (Open)	ON (Open)	REVERSE POSITION
N	OFF (Open)	OFF (Closed)	OFF (Closed)	OFF (Open)	OFF (Closed)	NEUTRAL POSITION
D	1st	ON (Closed)	ON (Open)	ON (Open)	OFF (Open)	OFF (Closed)
	1 ⇔ 2	OFF (Open)	OFF (Closed)	ON (Open)	OFF (Open)	OFF (Closed)
	2nd	OFF (Open)	OFF (Closed)	ON (Open)	OFF (Open)	OFF (Closed)
	2 ⇔ 3	OFF (Open)	OFF (Closed)	ON (Open)	ON (Closed)	ON (Open)
	3rd	OFF (Open)	OFF (Closed)	ON (Open)	ON (Closed)	OFF (Closed)
	3 ⇔ 4	OFF (Open)	OFF (Closed)	OFF (Closed)	ON (Closed)	ON (Open)
	4th	OFF (Open)	OFF (Closed)	OFF (Closed)	ON (Closed)	OFF (Closed)
	4 ⇔ 5	OFF (Open)	ON (Open)	OFF (Closed)	ON (Closed)	OFF (Closed)
	5th	OFF (Open)	ON (Open)	OFF (Closed)	ON (Closed)	OFF (Closed)

Automatic shift
1 ⇔ 2 ⇔ 3 ⇔ 4 ⇔ 5

SERVICE DATA AND SPECIFICATIONS (SDS)

Shift position		Shift solenoid valve					Remarks
		A	B	C	D	E	
L	1st	ON (Closed)	ON (Open)	ON (Open)	OFF (Open)	OFF (Closed)	Automatic shift 1 ⇔ 2 ⇔ 3
	1 ⇔ 2	OFF (Open)	OFF (Closed)	ON (Open)	OFF (Open)	OFF (Closed)	
	2nd	OFF (Open)	OFF (Closed)	ON (Open)	OFF (Open)	OFF (Closed)	
	2 ⇔ 3	OFF (Open)	OFF (Closed)	ON (Open)	ON (Closed)	ON (Open)	
	3rd	OFF (Open)	OFF (Closed)	ON (Open)	ON (Closed)	OFF (Closed)	

NOTE:

When shifting D to L position or lever switch sets in "ON" position (indicated O/D OFF indicator lamp), down shift permission control is activated. Refer to [AT-37, "Down Shift Permission Control"](#) .

Solenoid Valves

ECS00EDW

Solenoid valves	Resistance (Approx.)	Connector (Color)	Terminal
Shift solenoid valve A	11 - 16 Ω	F30 (BR)	2
Shift solenoid valve B		F62(GR)	1
Shift solenoid valve C		F62(GR)	4
Shift solenoid valve D		F30 (BR)	1
Shift solenoid valve E		F30 (BR)	5
Pressure control solenoid valve A	5.0 - 5.6 Ω	F62(GR)	3 - 6
Pressure control solenoid valve B		F30 (BR)	3 - 7
Pressure control solenoid valve C		F62(GR)	2 - 5

Specified resistance at 20°C (68°F).

Clutch, Gear and Brakes

2ND BRAKE

ECS00EDX

Number of 2nd brake plates	4	
Number of 2nd brake discs	4	
Number of 2nd brake flange	1	
Piston stroke mm (in)	1.10 - 1.50 (0.0433 - 0.0591)	
Thickness of 2nd brake flanges	Thickness mm (in)	Part number*
	3.6 (0.142)	31537 8Y011
	3.8 (0.150)	31537 8Y012
	4.0 (0.157)	31537 8Y013

*: Always check with the Parts Department for the latest parts information.

2ND COAST BRAKE

Number of 2nd coast brake plates	3
Number of 2nd coast brake discs	3
Number of 2nd coast brake flange	1
Piston stroke mm (in)	0.76 - 1.44 (0.0299 - 0.0567)

SERVICE DATA AND SPECIFICATIONS (SDS)

B5 BRAKE

Number of B5 brake plates	6	
Number of B5 brake discs	6	
Number of B5 brake flange	1	
Number of B5 brake cushion plate	1	
Piston stroke mm (in)	2.34 - 2.70 (0.0921 - 0.1063)	
Thickness of B5 brake flanges	Thickness mm (in)	Part number*
	5.0 (0.197)	31667 8Y016
	5.1 (0.202)	31667 8Y017
	5.2 (0.205)	31667 8Y018
	5.3 (0.209)	31667 8Y019
	5.5 (0.217)	31667 8Y020

* : Always check with the Parts Department for the latest parts information.

1ST AND REVERSE BRAKE

Number of 1st and reverse brake plates	4
Number of 1st and reverse brake discs	5
Number of 1st and reverse brake flanges	2
Piston stroke mm (in)	1.39 - 2.21 (0.0547 - 0.0870)

FORWARD AND DIRECT CLUTCH ASSEMBLY

Thickness of thrust washer races	Thickness mm (in)	Part number*
	0.81 (0.0319)	31435 8Y060
	0.90 (0.0350)	31435 8Y061
	1.00 (0.0400)	31435 8Y062
	1.10 (0.0430)	31435 8Y063
	1.20 (0.0470)	31435 8Y064
	1.30 (0.0510)	31435 8Y065
	1.40 (0.0550)	31435 8Y066
	1.50 (0.0590)	31435 8Y067
End play mm (in)	0.188 - 0.570 mm (0.0074 - 0.0224)	

* : Always check with the Parts Department for the latest parts information.

U/D BRAKE

Piston type	Mark	Piston length mm (in)	Part number*
A	—	63.7 (2.508)	31615 8Y005
B	1	64.2 (2.528)	31615 8Y004
C	2	64.7 (2.547)	31615 8Y003
D	3	65.2 (2.567)	31615 8Y002
E	4	65.7 (2.587)	31615 8Y001
Piston stroke mm (in)		5.76 - 6.76 mm (0.2268 - 0.2661)	

*: Always check with the Parts Department for the latest parts information.

SERVICE DATA AND SPECIFICATIONS (SDS)

U/D RR PLANETARY RING GEAR SUB ASSEMBLY

Thickness of adjust shims	Thickness mm (in)	Part number*
	0.81 (0.0319)	31435 8Y100
0.90 (0.0350)	31435 8Y101	
1.00 (0.0400)	31435 8Y102	
1.10 (0.0430)	31435 8Y103	
1.20 (0.0470)	31435 8Y104	
1.30 (0.0510)	31435 8Y105	
1.40 (0.0550)	31435 8Y106	
1.50 (0.0590)	31435 8Y107	
1.60 (0.0630)	31435 8Y108	

* : Always check with the Parts Department for the latest parts information.

U/D GEAR ASSEMBLY

Thickness of thrust washer races	Thickness mm (in)	Part number*
	0.80 (0.0310)	31435 8Y021
0.90 (0.0350)	31435 8Y068	
1.00 (0.0400)	31435 8Y069	
1.10 (0.0430)	31435 8Y070	
1.20 (0.0470)	31435 8Y071	
1.30 (0.0510)	31435 8Y072	
1.40 (0.0550)	31435 8Y073	
1.50 (0.0590)	31435 8Y074	

* : Always check with the Parts Department for the latest parts information.

PLANETARY SUN GEAR SUB ASSEMBLY

Inner diameter of planetary sun gear sub assembly bushing mm (in)	Standard	22.200 - 22.226 (0.8740 - 0.8750)
	Allowable limit	22.276 (0.8770)

PLANETARY GEAR ASSEMBLY

Inner diameter of planetary gear assembly bushing mm (in)	Standard	30.056 - 30.082 (1.1833 - 1.1843)
	Allowable limit	30.132 (1.1863)

Final Drive DIFFERENTIAL SIDE BEARING ADJUSTING SHIMS

ECS00EDY

Thickness mm (in)	Part number*	Thickness mm (in)	Part number*
1.00 (0.0394)	31438 8Y001	1.48 (0.0583)	31438 8Y013
1.05 (0.0413)	31438 8Y002	1.51 (0.0594)	31438 8Y014
1.10 (0.0433)	31438 8Y003	1.54 (0.0606)	31438 8Y015
1.15 (0.0453)	31438 8Y004	1.57 (0.0618)	31438 8Y016
1.20 (0.0472)	31438 8Y005	1.60 (0.0630)	31438 8Y017
1.25 (0.0492)	31438 8Y006	1.65 (0.0650)	31438 8Y018
1.30 (0.0512)	31438 8Y007	1.70 (0.0669)	31438 8Y019
1.33 (0.0524)	31438 8Y008	1.75 (0.0689)	31438 8Y020
1.36 (0.0535)	31438 8Y009	1.80 (0.0709)	31438 8Y021
1.39 (0.0547)	31438 8Y010	1.85 (0.0728)	31438 8Y022
1.42 (0.0559)	31438 8Y011	1.90 (0.0748)	31438 8Y023
1.45 (0.0571)	31438 8Y012		

*: Always check with the Parts Department for the latest parts information.

TURNING TORQUE

Turning torque of final drive assembly	0.7 - 1.2 N·m (0.08 - 0.12kg-m, 7 - 10 in-lb)
--	---

SERVICE DATA AND SPECIFICATIONS (SDS)

A/T Fluid Temperature Sensor

ECS00EDZ

Condition	Voltage (Approx.)	Resistance (Approx.)	
ATF temperature	0°C (32°F)	4.0V	9.8 kΩ
	20°C (68°F)	3.0V	4.2 kΩ
	80°C (176°F)	0.8V	0.54 kΩ
	100°C (212°F)	0.5V	0.31 kΩ

Turbine Revolution Sensor

ECS00EE0

Condition	Signal	Voltage* (Approx.)
Connect 12V power supply and 100 Ω resistance, and then shake magnetic body.	HIGH	1.2 - 1.6V
	LOW	0.4 - 0.8V

*: Voltage with both end of 100 Ω resistance.

Revolution Sensor

ECS00EE1

Condition	Signal	Voltage* (Approx.)
Connect 12V power supply and 100 Ω resistance, and then shake magnetic body.	HIGH	1.2 - 1.6V
	LOW	0.4 - 0.8V

*: Voltage with both end of 100 Ω resistance.