

AUTOMATIC TRANSAXLE

SECTION AT

CONTENTS

TROUBLE DIAGNOSIS - INDEX	4	TROUBLE DIAGNOSIS - GENERAL	
Alphabetical & P No. Index for DTC	4	DESCRIPTION	86
PRECAUTIONS	6	Symptom Chart.....	86
Supplemental Restraint System (SRS) "AIR		TROUBLE DIAGNOSIS - GENERAL	
BAG" and "SEAT BELT PRE-TENSIONER"	6	DESCRIPTION	103
Precautions for On Board Diagnostic (OBD)		TCM Terminals and Reference Value.....	103
System of A/T and Engine.....	6	TROUBLE DIAGNOSIS FOR POWER SUPPLY	107
Precautions	6	Wiring Diagram - AT - MAIN.....	107
Service Notice or Precautions	8	Diagnostic Procedure	108
Wiring Diagrams and Trouble Diagnosis.....	9	DTC P0705 PARK/NEUTRAL POSITION (PNP)	
PREPARATION	10	SWITCH	110
Special Service Tools	10	Description	110
Commercial Service Tools	12	Wiring Diagram - AT - PNP/SW.....	111
OVERALL SYSTEM	14	Diagnostic Procedure	112
A/T Electrical Parts Location	14	Component Inspection.....	114
Circuit Diagram	15	DTC P0710 A/T FLUID TEMPERATURE SENSOR	
Cross-sectional View - RE4F03B	16	CIRCUIT	115
Hydraulic Control Circuit.....	17	Description	115
Shift Mechanism	18	Wiring Diagram - AT - FTS.....	117
Control System	27	Diagnostic Procedure	118
Control Mechanism.....	28	Component Inspection.....	120
Control Valve	33	DTC P0720 VEHICLE SPEED SENSOR.A/T	
ON BOARD DIAGNOSTIC SYSTEM		(REVOLUTION SENSOR)	121
DESCRIPTION	35	Description	121
Introduction	35	Wiring Diagram - AT - VSSA/T	123
OBD-II Function for A/T System.....	35	Diagnostic Procedure	124
One or Two Trip Detection Logic of OBD-II	35	DTC P0725 ENGINE SPEED SIGNAL	126
OBD-II Diagnostic Trouble Code (DTC)	35	Description	126
Malfunction Indicator Lamp (MIL).....	39	Wiring Diagram - AT - ENGSS	127
CONSULT-II	39	Diagnostic Procedure	128
TROUBLE DIAGNOSIS - INTRODUCTION	56	DTC P0731 A/T 1ST GEAR FUNCTION	130
Introduction	56	Description	130
Work Flow	60	Wiring Diagram - AT - 1ST	133
TROUBLE DIAGNOSIS - BASIC INSPECTION	62	Diagnostic Procedure	134
A/T Fluid Check	62	Component Inspection.....	135
Stall Test	62	DTC P0732 A/T 2ND GEAR FUNCTION	137
Line Pressure Test.....	66	Description	137
Road Test.....	67	Wiring Diagram - AT - 2ND.....	140
		Diagnostic Procedure	141

GI
MA
EM
LC
EC
FE
CL
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

CONTENTS (Cont'd)

Component Inspection.....	142	Diagnostic Procedure	201
DTC P0733 A/T 3RD GEAR FUNCTION	143	Component Inspection.....	204
Description	143	DTC VHCL SPEED SEN.MTR VEHICLE SPEED	
Wiring Diagram - AT - 3RD.....	146	SENSOR.MTR	205
Diagnostic Procedure	147	Description	205
Component Inspection.....	148	Wiring Diagram - AT - VSSMTR.....	207
DTC P0734 A/T 4TH GEAR FUNCTION	149	Diagnostic Procedure	208
Description	149	DTC CONTROL UNIT (RAM), CONTROL UNIT	
Wiring Diagram - AT - 4TH.....	152	(ROM)	209
Diagnostic Procedure	153	Description	209
Component Inspection.....	157	Diagnostic Procedure	209
DTC P0740 TORQUE CONVERTER CLUTCH		DTC CONTROL UNIT (EEP ROM)	211
SOLENOID VALVE	158	Description	211
Description	158	Diagnostic Procedure	212
Wiring Diagram - AT - TCV.....	159	TROUBLE DIAGNOSES FOR SYMPTOMS	213
Diagnostic Procedure	160	Wiring Diagram - AT - NONDTC	213
Component Inspection.....	161	1. O/D OFF Indicator Lamp Does Not Come On....	216
DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)	162	2. Engine Cannot Be Started In "P" and "N"	
Description	162	Position	219
Wiring Diagram - AT - TCCSIG	165	3. In "P" Position, Vehicle Moves Forward Or	
Diagnostic Procedure	166	Backward When Pushed	220
Component Inspection.....	172	4. In "N" Position, Vehicle Moves	221
DTC P0745 LINE PRESSURE SOLENOID VALVE	173	5. Large Shock. "N" -> "R" Position	223
Description	173	6. Vehicle Does Not Creep Backward In "R"	
Wiring Diagram - AT - LPSV.....	174	Position	225
Diagnostic Procedure	175	7. Vehicle Does Not Creep Forward In "D", "2"	
Component Inspection.....	177	Or "1" Position.....	228
DTC P0750 SHIFT SOLENOID VALVE A	178	8. Vehicle Cannot Be Started From D ₁	231
Description	178	9. A/T Does Not Shift: D ₁ -> D ₂ Or Does Not	
Wiring Diagram - AT - SSV/A	179	Kickdown: D ₄ -> D ₂	234
Diagnostic Procedure	180	10. A/T Does Not Shift: D ₂ -> D ₃	237
Component Inspection.....	181	11. A/T Does Not Shift: D ₃ -> D ₄	240
DTC P0755 SHIFT SOLENOID VALVE B	182	12. A/T Does Not Perform Lock-up	243
Description	182	13. A/T Does Not Hold Lock-up Condition	245
Wiring Diagram - AT - SSV/B	183	14. Lock-up Is Not Released.....	247
Diagnostic Procedure	184	15. Engine Speed Does Not Return To Idle (Light	
Component Inspection.....	185	Braking D ₄ -> D ₃).....	248
DTC P1705 THROTTLE POSITION SENSOR	186	16. Vehicle Does Not Start From D ₁	250
Description	186	17. A/T Does Not Shift: D ₄ -> D ₃ , When	
Wiring Diagram - AT - TPS.....	188	Overdrive Control Switch "ON" -> "OFF"	251
Diagnostic Procedure	189	18. A/T Does Not Shift: D ₃ -> 2 ₂ , When Selector	
Component Inspection.....	193	Lever "D" -> "2" Position.....	252
DTC P1760 OVERRUN CLUTCH SOLENOID		19. A/T Does Not Shift: 2 ₂ -> 1 ₁ , When Selector	
VALVE	194	Lever "2" -> "1" Position	253
Description	194	20. Vehicle Does Not Decelerate By Engine	
Wiring Diagram - AT - OVRCSV.....	195	Brake.....	254
Diagnostic Procedure	196	21. TCM Self-diagnosis Does Not Activate (PNP,	
Component Inspection.....	197	Overdrive Control and Throttle Position Switches	
DTC BATT/FLUID TEMP SEN (A/T FLUID TEMP		Circuit Checks)	254
SENSOR CIRCUIT AND TCM POWER SOURCE)	198	A/T SHIFT LOCK SYSTEM	263
Description	198	Description	263
Wiring Diagram - AT - BA/FTS	200	Shift Lock System Electrical Parts Location.....	263

CONTENTS (Cont'd)

Wiring Diagram - SHIFT	264	Band Servo Piston Assembly	348	GI
Diagnostic Procedure	265	Final Drive.....	353	
KEY INTERLOCK CABLE	269	ASSEMBLY	357	MA
Components.....	269	Assembly (1).....	357	EM
Removal.....	269	Adjustment (1)	358	EM
Installation.....	270	Assembly (2).....	363	EM
ON-VEHICLE SERVICE	271	Adjustment (2)	367	EM
Control Valve Assembly and Accumulators.....	271	Assembly (3).....	371	LC
Control Cable Adjustment.....	272	Assembly (4).....	373	LC
Park/Neutral Position (PNP) Switch Adjustment	272	SERVICE DATA AND SPECIFICATIONS (SDS)	378	
Differential Side Oil Seal Replacement.....	273	General Specifications.....	378	EC
Revolution Sensor Replacement.....	273	Shift Schedule.....	378	EC
REMOVAL AND INSTALLATION	274	Stall Revolution.....	379	FE
Removal.....	274	Line Pressure.....	379	FE
Installation.....	275	Control Valves.....	380	FE
OVERHAUL	277	Clutch, Brake and Brake Band.....	380	CL
Components.....	277	Clutch and Brake Return Springs.....	382	CL
Oil Channel	280	Oil Pump	382	CL
Locations of Adjusting Shims, Needle Bearings, Thrust Washers and Snap Rings	281	Input Shaft	383	MT
DISASSEMBLY	282	Planetary Carrier.....	383	MT
REPAIR FOR COMPONENT PARTS	296	Final Drive.....	383	
Manual Shaft.....	296	Reduction Pinion Gear	384	AT
Oil Pump	299	Output Shaft.....	386	AT
Control Valve Assembly.....	303	Bearing Retainer.....	386	AT
Control Valve Upper Body	312	Total End Play.....	387	AX
Control Valve Lower Body	316	Reverse Clutch End Play	387	AX
Reverse Clutch	319	Accumulator	387	SU
High Clutch	323	Band Servo	387	SU
Forward Clutch and Overrun Clutch.....	328	Removal and Installation	388	SU
Low & Reverse Brake.....	335	Shift Solenoid Valves.....	388	BR
Rear Internal Gear, Forward Clutch Hub and Overrun Clutch Hub.....	339	Solenoid Valve	388	BR
Output Shaft, Idler Gear, Reduction Pinion Gear and Bearing Retainer.....	343	A/T Fluid Temperature Sensor.....	388	ST
		Revolution Sensor	388	ST
		Dropping Resistor	388	ST
				RS
				BT
				HA
				SC
				EL
				IDX

TROUBLE DIAGNOSIS — INDEX

Alphabetical & P No. Index for DTC

Alphabetical & P No. Index for DTC ALPHABETICAL INDEX FOR DTC

NIAT0001

NIAT0001S01

Items (CONSULT-II screen terms)	DTC	Reference page
	CONSULT-II GST*1	
A/T 1ST GR FNCTN	P0731	AT-130
A/T 2ND GR FNCTN	P0732	AT-137
A/T 3RD GR FNCTN	P0733	AT-143
A/T 4TH GR FNCTN	P0734	AT-149
A/T TCC S/V FNCTN	P0744	AT-158
ATF TEMP SEN/CIRC	P0710	AT-115
ENGINE SPEED SIG	P0725	AT-126
L/PRESS SOL/CIRC	P0745	AT-173
O/R CLTCH SOL/CIRC	P1760	AT-194
PNP SW/CIRC	P0705	AT-110
SFT SOL A/CIRC*2	P0750	AT-178
SFT SOL B/CIRC*2	P0755	AT-182
TCC SOLENOID/CIRC	P0740	AT-158
TP SEN/CIRC A/T*2	P1705	AT-186
VEH SPD SEN/CIR AT*3	P0720	AT-121

*1: These numbers are prescribed by SAE J2012.

*2: When the fail-safe operation occurs, the MIL illuminates.

*3: The MIL illuminates when both the "Revolution sensor signal" and the "Vehicle speed sensor signal" meet the fail-safe condition at the same time.

TROUBLE DIAGNOSIS — INDEX

Alphabetical & P No. Index for DTC (Cont'd)

P NO. INDEX FOR DTC

—NIAT0001S02

DTC	Items (CONSULT-II screen terms)	Reference page
CONSULT-II GST*1		
P0705	PNP SW/CIRC	AT-110
P0710	ATF TEMP SEN/CIRC	AT-115
P0720	VEH SPD SEN/CIR AT*3	AT-121
P0725	ENGINE SPEED SIG	AT-126
P0731	A/T 1ST GR FNCTN	AT-130
P0732	A/T 2ND GR FNCTN	AT-137
P0733	A/T 3RD GR FNCTN	AT-143
P0734	A/T 4TH GR FNCTN	AT-149
P0740	TCC SOLENOID/CIRC	AT-158
P0744	A/T TCC S/V FNCTN	AT-162
P0745	L/PRESS SOL/CIRC	AT-173
P0750	SFT SOL A/CIRC*2	AT-178
P0755	SFT SOL B/CIRC*2	AT-182
P1705	TP SEN/CIRC A/T*2	AT-186
P1760	O/R CLTCH SOL/CIRC	AT-194

*1: These numbers are prescribed by SAE J2012.

*2: When the fail-safe operation occurs, the MIL illuminates.

*3: The MIL illuminates when both the "Revolution sensor signal" and the "Vehicle speed sensor signal" meet the fail-safe condition at the same time.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

PRECAUTIONS

Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

NIAT0002

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER" used along with a seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. The SRS system composition which is available to NISSAN B15 is as follows:

- For a frontal collision
The Supplemental Restraint System consists of driver air bag module (located in the center of the steering wheel), front passenger air bag module (located on the instrument panel on passenger side), front seat belt pre-tensioners, a diagnosis sensor unit, warning lamp, wiring harness and spiral cable.
- For a side collision
The Supplemental Restraint System consists of front side air bag module (located in the outer side of front seat), side air bag (satellite) sensor, diagnosis sensor unit (one of components of air bags for a frontal collision), wiring harness, warning lamp (one of components of air bags for a frontal collision).

Information necessary to service the system safely is included in the **RS section** of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance should be performed by an authorized NISSAN dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the RS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. Spiral cable and wiring harnesses covered with yellow insulation tape either just before the harness connectors or for the complete harness are related to the SRS.


Precautions for On Board Diagnostic (OBD) System of A/T and Engine

NIAT0003

The ECM has an on board diagnostic system. It will light up the malfunction indicator lamp (MIL) to warn the driver of a malfunction causing emission deterioration.

CAUTION:

- Be sure to turn the ignition switch "OFF" and disconnect the negative battery terminal before any repair or inspection work. The open/short circuit of related switches, sensors, solenoid valves, etc. will cause the MIL to light up.
- Be sure to connect and lock the connectors securely after work. A loose (unlocked) connector will cause the MIL to light up due to an open circuit. (Be sure the connector is free from water, grease, dirt, bent terminals, etc.)
- Be sure to route and secure the harnesses properly after work. Interference of the harness with a bracket, etc. may cause the MIL to light up due to a short circuit.
- Be sure to connect rubber tubes properly after work. A misconnected or disconnected rubber tube may cause the MIL to light up due to a malfunction of the EGR system or fuel injection system, etc.
- Be sure to erase the unnecessary malfunction information (repairs completed) from the TCM and ECM before returning the vehicle to the customer.

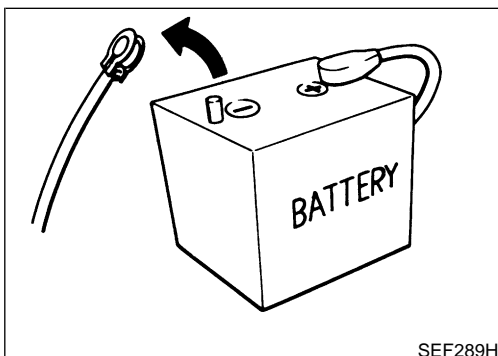

SEF289H




Precautions

NIAT0004

- Before connecting or disconnecting the TCM harness connector, turn ignition switch OFF and disconnect negative battery terminal. Failure to do so may damage the TCM. Because battery voltage is applied to TCM even if ignition switch is turned off.

PRECAUTIONS

Precautions (Cont'd)

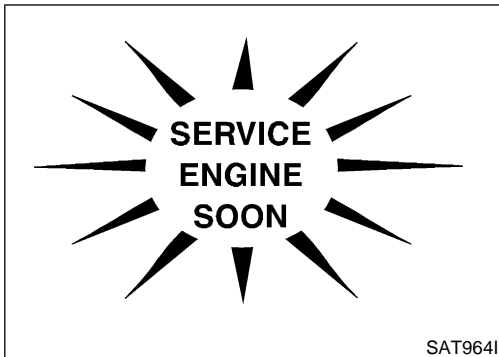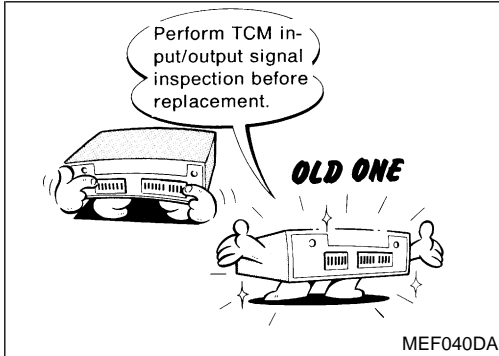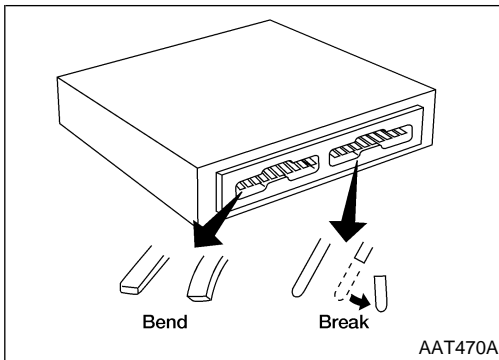

- When connecting or disconnecting pin connectors into or from TCM, take care not to damage pin terminals (bend or break).
Make sure that there are not any bends or breaks on TCM pin terminal, when connecting pin connectors.

GI

MA

EM

LC

- Before replacing TCM, perform TCM input/output signal inspection and make sure whether TCM functions properly or not. See page AT-103.

EC

FE

CL

MT

- After performing each TROUBLE DIAGNOSIS, perform “DTC (Diagnostic Trouble Code) CONFIRMATION PROCEDURE”.
The DTC should not be displayed in the “DTC CONFIRMATION PROCEDURE” if the repair is completed.

AT

AX

SU

BR

- Before proceeding with disassembly, thoroughly clean the outside of the transaxle. It is important to prevent the internal parts from becoming contaminated by dirt or other foreign matter.
- Disassembly should be done in a clean work area.
- Use lint-free cloth or towels for wiping parts clean. Common shop rags can leave fibers that could interfere with the operation of the transaxle.
- Place disassembled parts in order for easier and proper assembly.
- All parts should be carefully cleaned with a general purpose, non-flammable solvent before inspection or reassembly.
- Gaskets, seals and O-rings should be replaced any time the transaxle is disassembled.
- It is very important to perform functional tests whenever they are indicated.
- The valve body contains precision parts and requires extreme care when parts are removed and serviced. Place disassembled valve body parts in order for easier and proper assembly. Care will also prevent springs and small parts from becoming scattered or lost.
- Properly installed valves, sleeves, plugs, etc. will slide along bores in valve body under their own weight.
- Before assembly, apply a coat of recommended ATF to all

ST

RS

BT

HA

SC

EL

IDX

PRECAUTIONS

Precautions (Cont'd)

parts. Apply petroleum jelly to protect O-rings and seals, or hold bearings and washers in place during assembly. Do not use grease.

- Extreme care should be taken to avoid damage to O-rings, seals and gaskets when assembling.
- Replace ATF cooler if excessive foreign material is found in oil pan or clogging strainer. Refer to “ATF COOLER SERVICE”, AT-9.
- After overhaul, refill the transaxle with new ATF.
- When the A/T drain plug is removed, only some of the fluid is drained. Old A/T fluid will remain in torque converter and ATF cooling system.

Always follow the procedures under “Changing A/T Fluid” in the MA section when changing A/T fluid. Refer to **MA-36**, “Changing A/T Fluid”.

Service Notice or Precautions

NIAT0005

FAIL-SAFE

The TCM has an electronic Fail-Safe (limp home mode). This allows the vehicle to be driven even if a major electrical input/output device circuit is damaged.

Under Fail-Safe, the vehicle always runs in third gear, even with a shift lever position of “1”, “2” or “D”. The customer may complain of sluggish or poor acceleration.

When the ignition key is turned “ON” following Fail-Safe operation, O/D OFF indicator lamp blinks for about 8 seconds. [For “TCM Self-diagnostic Procedure (No Tools)”, refer to AT-49.]

The blinking of the O/D OFF indicator lamp for about 8 seconds will appear only once and be cleared. The customer may resume normal driving conditions.

Always follow the “Work Flow”. Refer to AT-60.

The SELF-DIAGNOSIS results will be as follows:

The first SELF-DIAGNOSIS will indicate damage to the vehicle speed sensor or the revolution sensor.

During the next SELF-DIAGNOSIS, performed after checking the sensor, no damages will be indicated.

TORQUE CONVERTER SERVICE

NIAT0005S02

The torque converter should be replaced under any of the following conditions:

- External leaks in the hub weld area.
- Converter hub is scored or damaged.
- Converter pilot is broken, damaged or fits poorly into crankshaft.
- Steel particles are found after flushing the cooler and cooler lines.
- Pump is damaged or steel particles are found in the converter.
- Vehicle has TCC shudder and/or no TCC apply. Replace only after all hydraulic and electrical diagnoses have been made. (Converter clutch material may be glazed.)
- Converter is contaminated with engine coolant containing antifreeze.
- Internal failure of stator roller clutch.
- Heavy clutch debris due to overheating (blue converter).
- Steel particles or clutch lining material found in fluid filter or on magnet when no internal parts in unit are worn or damaged — indicates that lining material came from converter.

The torque converter should not be replaced if:

- The fluid has an odor, is discolored, and there is no evidence of metal or clutch facing particles.
- The threads in one or more of the converter bolt holes are damaged.

PRECAUTIONS

Service Notice or Precautions (Cont'd)

- Transaxle failure did not display evidence of damaged or worn internal parts, steel particles or clutch plate lining material in unit and inside the fluid filter.
- Vehicle has been exposed to high mileage (only). The exception may be where the torque converter clutch dampener plate lining has seen excess wear by vehicles operated in heavy and/or constant traffic, such as taxi, delivery or police use.

GI

MA

ATF COOLER SERVICE

NIAT0005S03

Replace ATF cooler if excessive foreign material is found in oil pan or clogging strainer.

Replace radiator lower tank (which includes ATF cooler) with a new one and flush cooler line using cleaning solvent and compressed air.

EM

Refer to **LC-15** (QG18DE) or **LC-33** (SR20DE), "Radiator".

LC

OBD-II SELF-DIAGNOSIS

NIAT0005S04

- A/T self-diagnosis is performed by the TCM in combination with the ECM. The results can be read through the blinking pattern of the O/D OFF indicator or the malfunction indicator lamp (MIL). Refer to the table on AT-40 for the indicator used to display each self-diagnostic result.
- The self-diagnostic results indicated by the MIL are automatically stored in the ECM and TCM memories. **Always perform the procedure "HOW TO ERASE DTC" on AT-37 to complete the repair and avoid unnecessary blinking of the MIL.**
- The following self-diagnostic items can be detected using ECM self-diagnostic results mode* only when the O/D OFF indicator lamp does not indicate any malfunctions.
 - PNP switch
 - A/T 1st, 2nd, 3rd, or 4th gear function
 - A/T TCC S/V function (lock-up).

EC

FE

CL

MT

*: For details of OBD-II, refer to **EC-85** [QG18DE (Except Calif. CA Model)], **EC-757** [QG18DE (Calif. CA Model)], **EC-1421** (SR20DE), "ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION".

AT

- **Certain systems and components, especially those related to OBD, may use a new style slide-locking type harness connector.**
For description and how to disconnect, refer to EL-5, "HARNESSE CONNECTOR".

AX

Wiring Diagrams and Trouble Diagnosis

NIAT0006

When you read wiring diagrams, refer to the following:

SU

- **GI-11**, "HOW TO READ WIRING DIAGRAMS".
- **EL-9**, "POWER SUPPLY ROUTING".

BR

When you perform trouble diagnosis, refer to the following:

- **GI-35**, "How to Follow Test Groups in Trouble Diagnoses".
- **GI-24**, "HOW TO PERFORM EFFICIENT DIAGNOSIS FOR AN ELECTRICAL INCIDENT".

ST

RS

BT

HA

SC

EL

IDX







PREPARATION

Special Service Tools

Special Service Tools





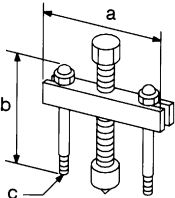
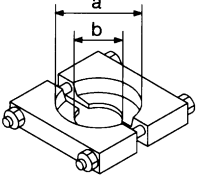
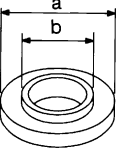
NIAT0007

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

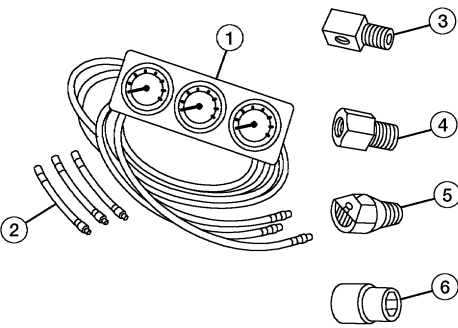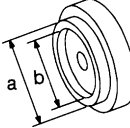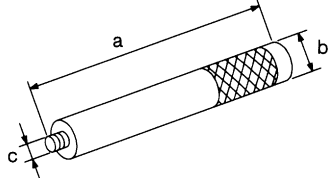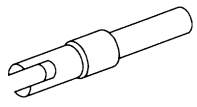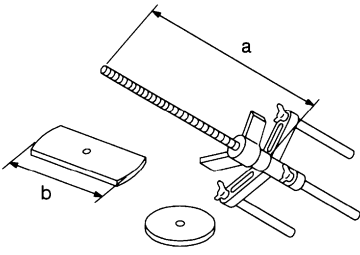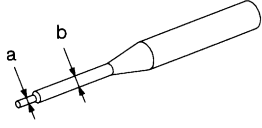Tool number (Kent-Moore No.) Tool name	Description
(J34301-C) Oil pressure gauge set 1 (J34301-1) Oil pressure gauge 2 (J34301-2) Hoses 3 (J34298) Adapter 4 (J34282) Adapter 5 (790-301-1230-A) 60° Adapter 6 (J34301-15) Square socket	 <p>Measuring line pressure</p> <p>AAT896</p>
KV31103000 (J38982) Drift	 <p>Installing differential oil seal (Use with ST35325000.) a: 59 mm (2.32 in) dia. b: 49 mm (1.93 in) dia.</p> <p>NT105</p>
ST35325000 (—) Drift	 <p>Installing differential oil seal (Use with KV31103000.) a: 215 mm (8.46 in) b: 25 mm (0.98 in) dia. c: M12 x 1.5P</p> <p>NT417</p>
KV38107700 (J39027) Preload adapter	 <ul style="list-style-type: none"> ● Measuring turning torque of final drive assembly ● Measuring clearance between side gear and differential case with washer ● Selecting differential side bearing adjusting shim <p>NT087</p>
KV31103200 (J34285-A and J34285-87) Clutch spring compressor	 <p>Removing and installing clutch return spring a: 320 mm (12.60 in) b: 174 mm (6.85 in)</p> <p>NT423</p>
ST23540000 (J25689-A) Pin punch	 <p>Removing and installing parking rod plate, manual plate and differential pinion mate shaft retaining pins a: 2.3 mm (0.091 in) dia. b: 4 mm (0.16 in) dia.</p> <p>NT442</p>







PREPARATION

Special Service Tools (Cont'd)

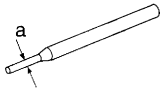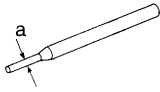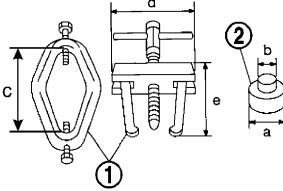Tool number (Kent-Moore No.) Tool name	Description		
KV32101000 (J25689-A) Pin punch	 NT410	Installing throttle lever and manual shaft retaining pins a: 4 mm (0.16 in) dia.	GI MA EM
ST25710000 (—) Pin punch	 NT410	Aligning groove of manual shaft and hole of transmission case a: 2 mm (0.08 in) dia.	LC EC
ST3306S001 (J22888-D) Differential side bearing puller set 1 ST33051001 (J22888-D) Puller 2 ST33061000 (J8107-2) Adapter	 NT745	Removing differential side bearing inner race a: 39 mm (1.54 in) dia. b: 29.5 mm (1.161 in) dia. c: 130 mm (5.12 in) d: 135 mm (5.31 in) e: 120 mm (4.72 in)	FE CL MT AT
KV381054S0 (J34286) Puller	 NT414	<ul style="list-style-type: none"> ● Removing idler gear bearing outer race ● Removing differential side oil seals ● Removing differential side bearing outer race ● Removing needle bearing from bearing retainer a: 250 mm (9.84 in) b: 160 mm (6.30 in)	AX SU BR
ST27180001 (J25726-B) Puller	 NT424	<ul style="list-style-type: none"> ● Removing idler gear a: 100 mm (3.94 in) b: 110 mm (4.33 in) c: M8 x 1.25P	ST RS BT
ST30031000 (J22912-O1) Puller	 NT411	Removing reduction gear bearing inner race a: 90 mm (3.54 in) dia. b: 50 mm (1.97 in) dia.	HA SC
ST35272000 (J26092) Drift	 NT426	<ul style="list-style-type: none"> ● Installing reduction gear bearing inner race ● Installing idler gear bearing inner race a: 72 mm (2.83 in) dia. b: 35.5 mm (1.398 in) dia.	EL IDX


PREPARATION

Special Service Tools (Cont'd)

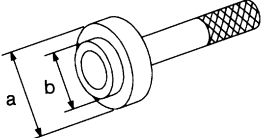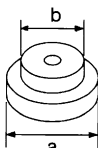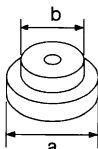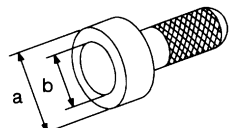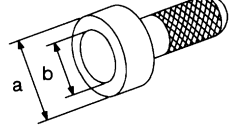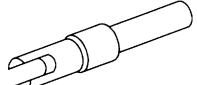Tool number (Kent-Moore No.) Tool name	Description	
ST37830000 (—) Drift		Installing idler gear bearing outer race a: 62 mm (2.44 in) dia. b: 39 mm (1.54 in) dia.
ST35321000 (—) Drift		Installing output shaft bearing a: 49 mm (1.93 in) dia. b: 41 mm (1.61 in) dia.
ST30633000 (—) Drift		Installing differential side bearing outer race a: 67 mm (2.64 in) dia. b: 49 mm (1.93 in) dia.
ST35271000 (J26091) Drift		<ul style="list-style-type: none"> ● Installing idler gear a: 72 mm (2.83 in) dia. b: 63 mm (2.48 in) dia.
ST33400001 (J26082) Drift		<ul style="list-style-type: none"> ● Installing oil pump housing oil seal a: 60 mm (2.36 in) dia. b: 47 mm (1.85 in) dia.
KV38105710 (—)		<ul style="list-style-type: none"> ● Measuring clearance between side gear and differential case




Commercial Service Tools

NIAT0008

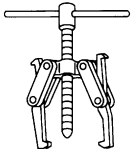Tool name	Description
Puller	 <ul style="list-style-type: none"> ● Removing idler gear bearing inner race ● Removing and installing band servo piston snap ring

PREPARATION

Commercial Service Tools (Cont'd)

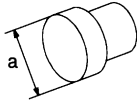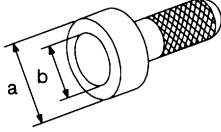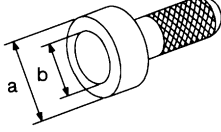Tool name	Description
Drift	 <p>Removing idler gear bearing inner race a: 34 mm (1.34 in) dia.</p> <p>NT109</p>
Drift	 <p>Installing differential left side bearing a: 86 mm (3.39 in) dia. b: 80 mm (3.15 in) dia.</p> <p>NT115</p>
Drift	 <p>Installing differential right side bearing a: 46 mm (1.81 in) dia. b: 40 mm (1.57 in) dia.</p> <p>NT115</p>

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA












SC

EL

IDX

OVERALL SYSTEM

A/T Electrical Parts Location

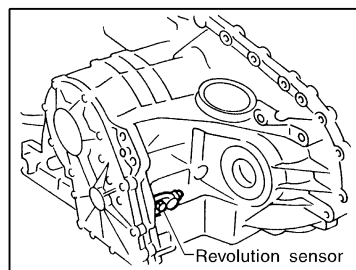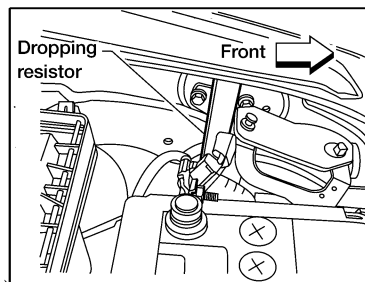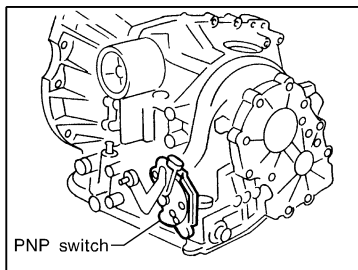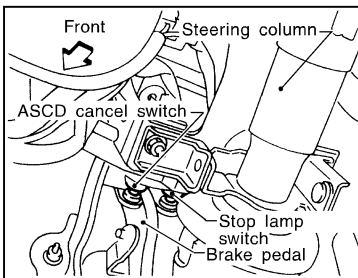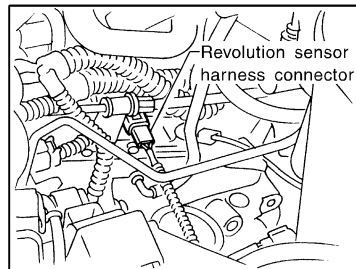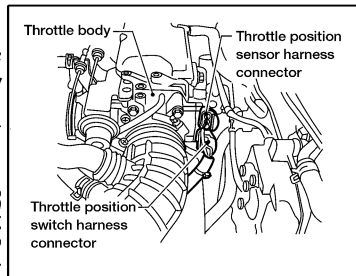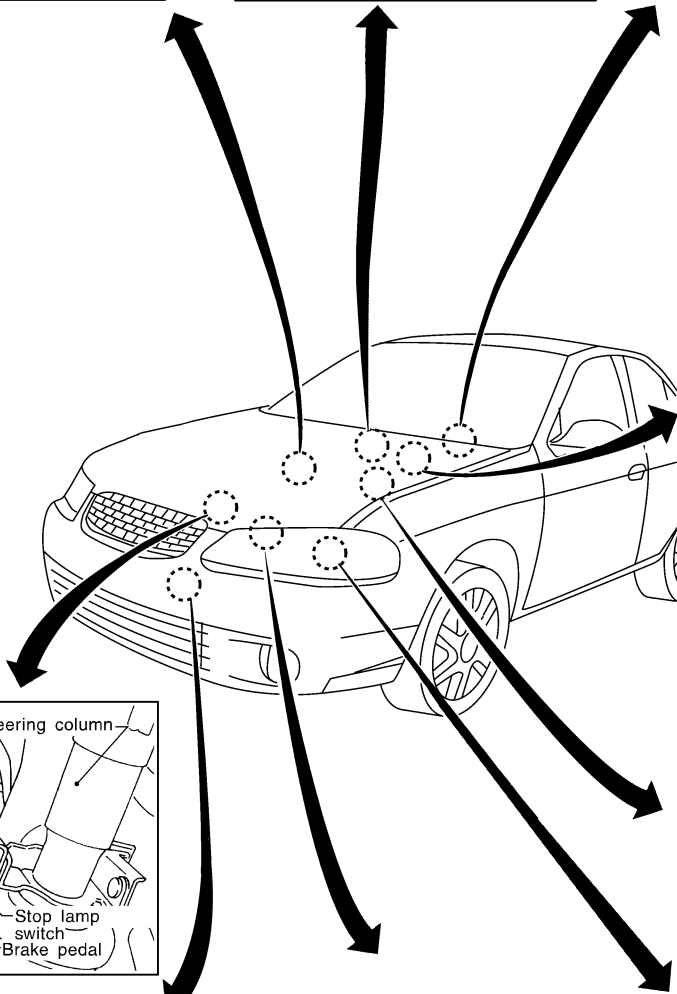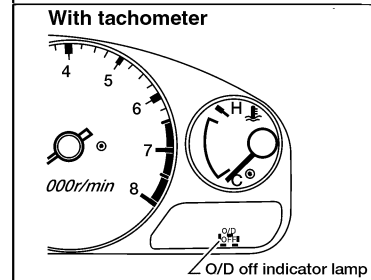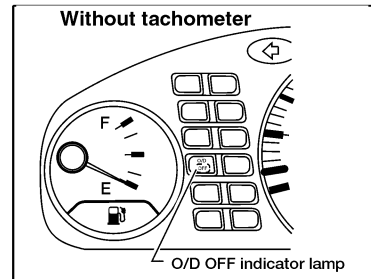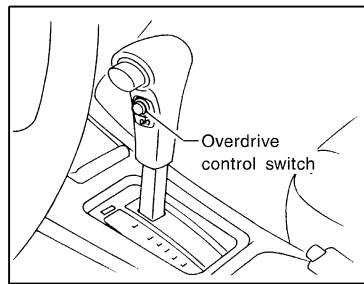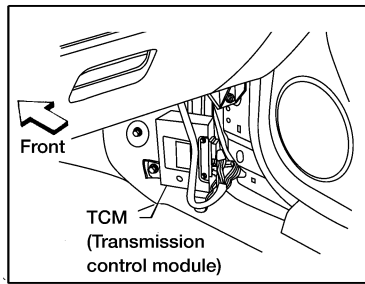


OVERALL SYSTEM

Circuit Diagram

Circuit Diagram

NIAT0010

GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

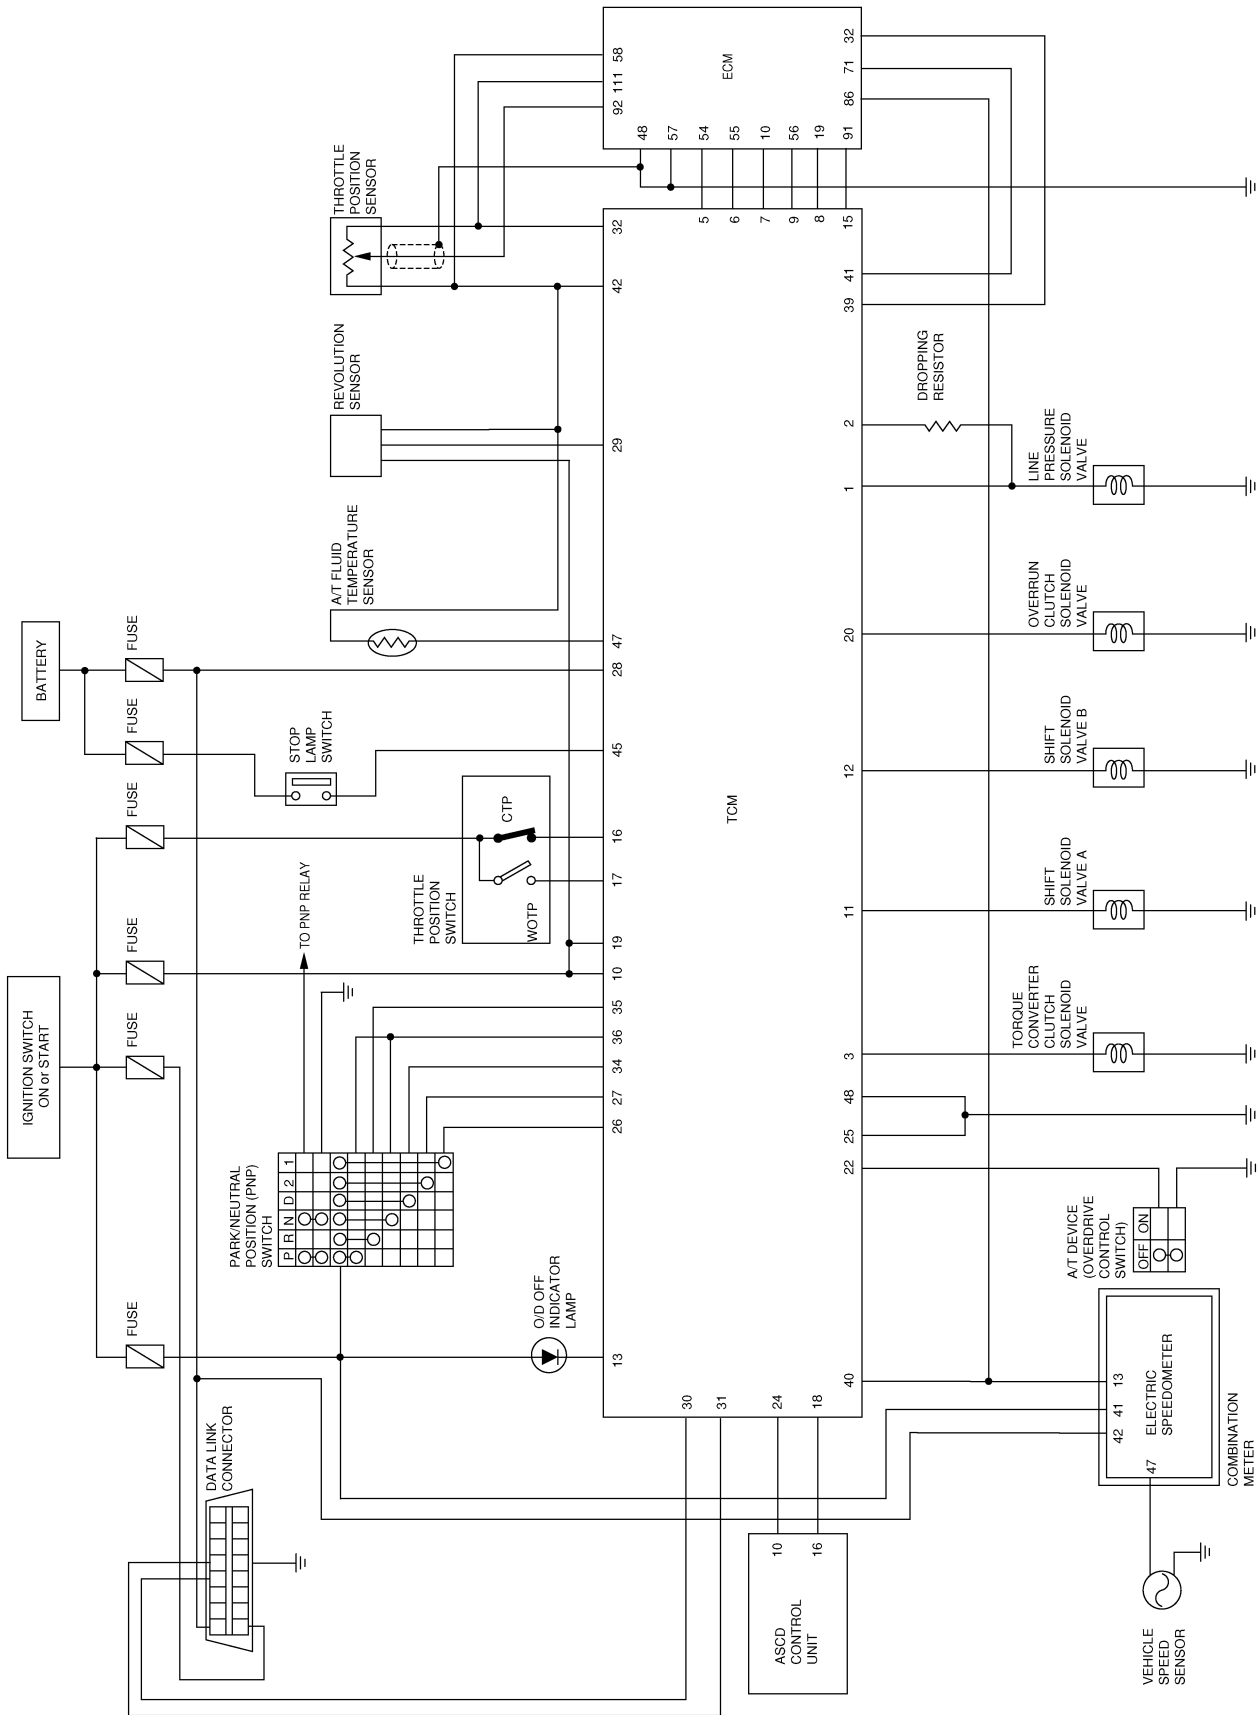


WAT529

OVERALL SYSTEM

Cross-sectional View — RE4F03B

Cross-sectional View — RE4F03B

NIAT0011

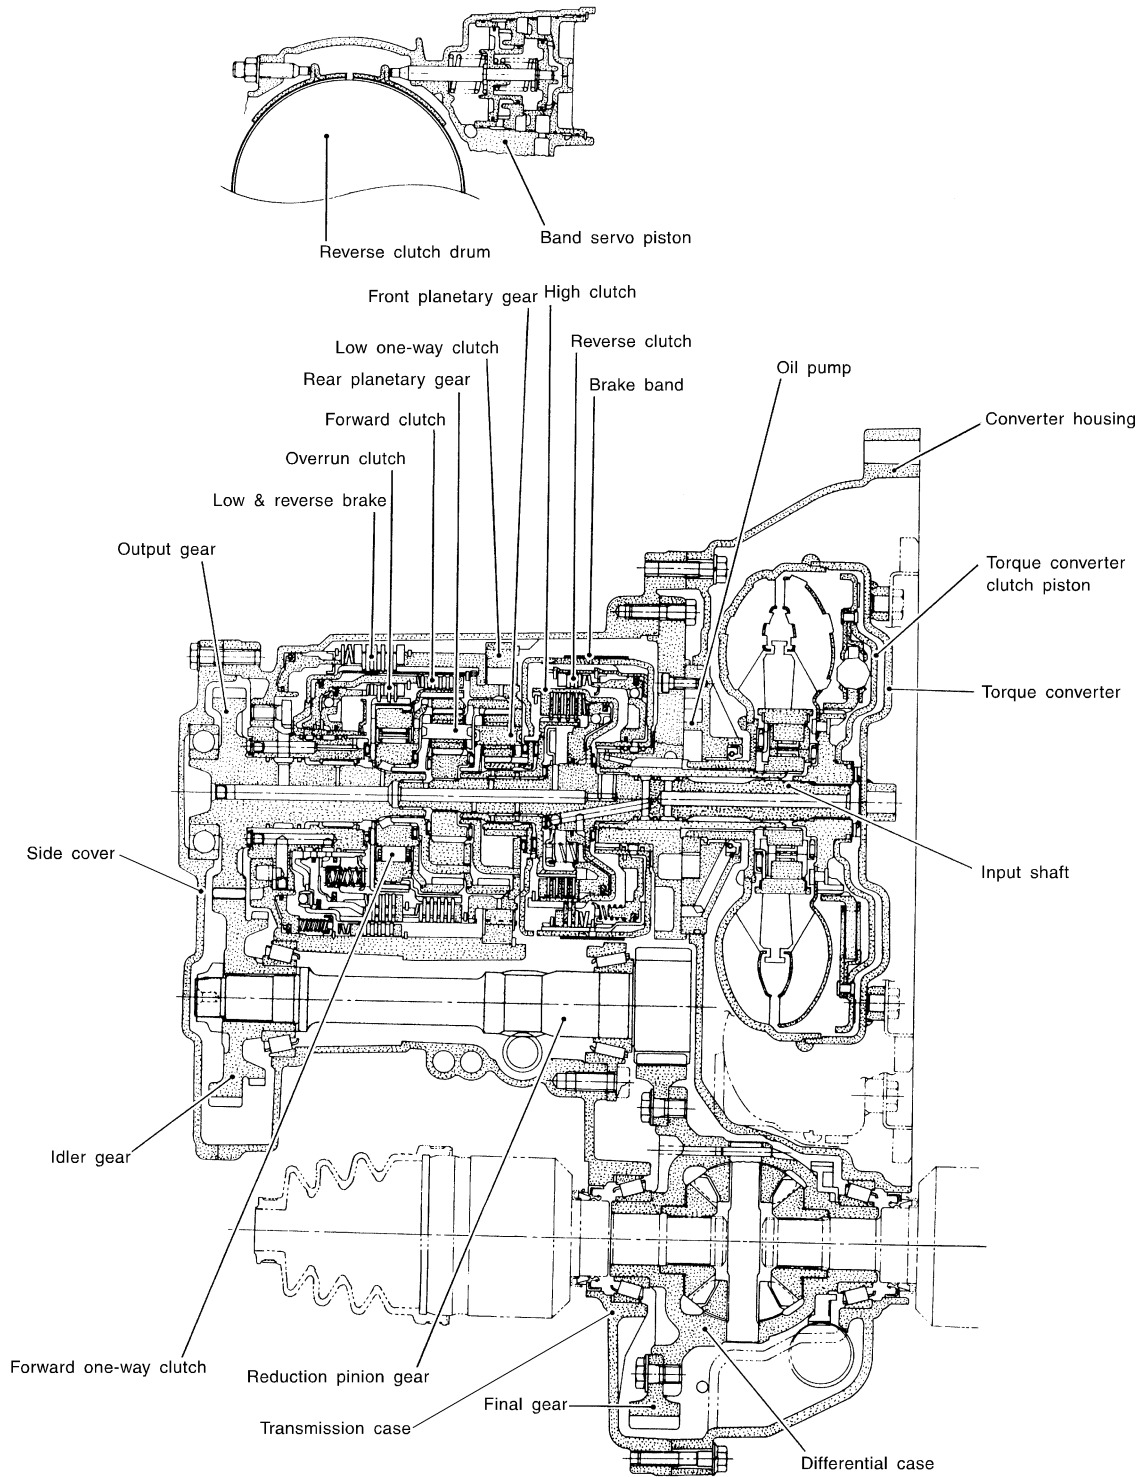


SAT842J

OVERALL SYSTEM

Hydraulic Control Circuit

Hydraulic Control Circuit

NIAT0013

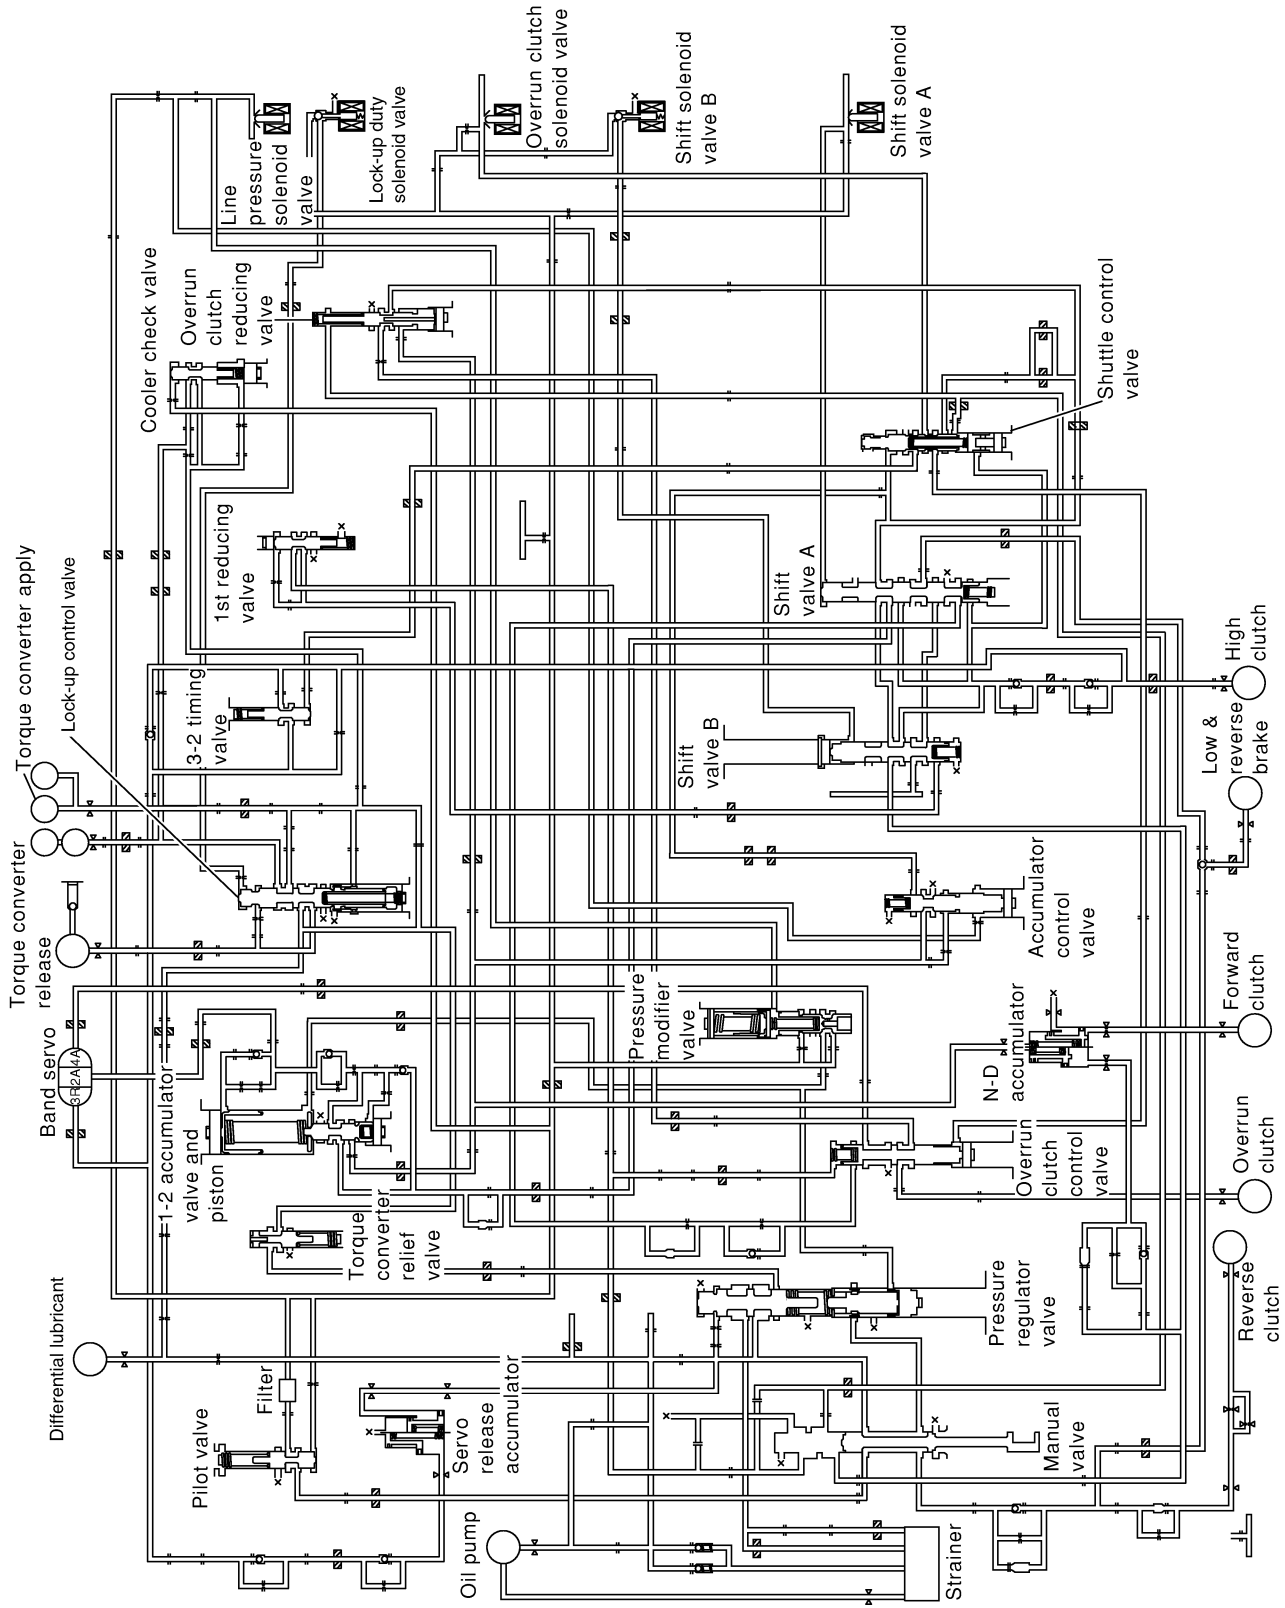

- GI
- MA
- EM
- LC
- EC
- FE
- CL
- MT
- AT**
- AX
- SU
- BR
- ST
- RS
- BT
- HA
- SC
- EL
- IDX

WAT408

OVERALL SYSTEM


Shift Mechanism

Shift Mechanism

NIAT0014

CONSTRUCTION

NIAT0014S01

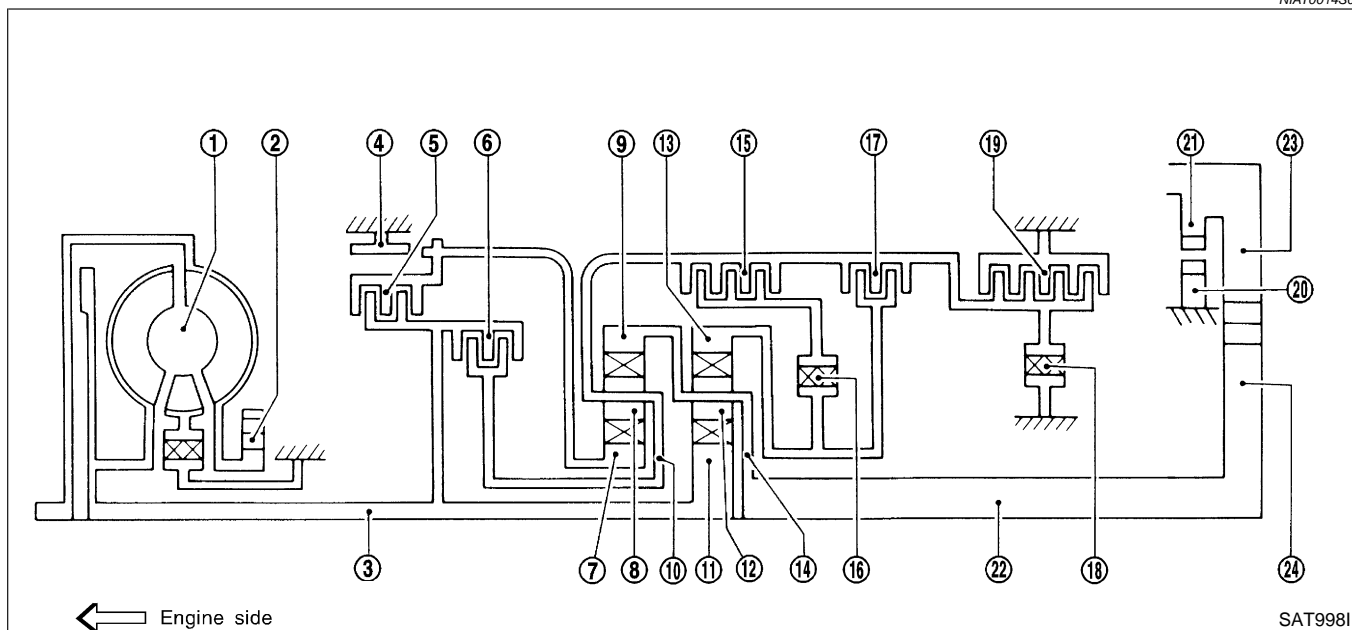

SAT998I

- | | | |
|----------------------|-----------------------------|-------------------------|
| 1. Torque converter | 9. Front internal gear | 17. Overrun clutch |
| 2. Oil pump | 10. Front planetary carrier | 18. Low one-way clutch |
| 3. Input shaft | 11. Rear sun gear | 19. Low & reverse brake |
| 4. Brake band | 12. Rear pinion gear | 20. Parking pawl |
| 5. Reverse clutch | 13. Rear internal gear | 21. Parking gear |
| 6. High clutch | 14. Rear planetary carrier | 22. Output shaft |
| 7. Front sun gear | 15. Forward clutch | 23. Idle gear |
| 8. Front pinion gear | 16. Forward one-way clutch | 24. Output gear |

FUNCTION OF CLUTCH AND BRAKE

NIAT0014S02

Clutch and brake components	Abbr.	Function
5 Reverse clutch	R/C	To transmit input power to front sun gear 7.
6 High clutch	H/C	To transmit input power to front planetary carrier 10.
15 Forward clutch	F/C	To connect front planetary carrier 10 with forward one-way clutch 16.
17 Overrun clutch	O/C	To connect front planetary carrier 10 with rear internal gear 13.
4 Brake band	B/B	To lock front sun gear 7.
16 Forward one-way clutch	F/O.C	When forward clutch 15 is engaged, to stop rear internal gear 13 from rotating in opposite direction against engine revolution.
18 Low one-way clutch	L/O.C	To stop front planetary carrier 10 from rotating in opposite direction against engine revolution.
19 Low & reverse brake	L & R/B	To lock front planetary carrier 10.

OVERALL SYSTEM

Shift Mechanism (Cont'd)

CLUTCH AND BAND CHART

NIAT0014S03

Shift position	Reverse clutch 5	High clutch 6	Forward clutch 15	Over-run clutch 17	Band servo			Forward one-way clutch 16	Low one-way clutch 18	Low & reverse brake 19	Lock-up	Remarks
					2nd apply	3rd release	4th apply					
P												PARK POSITION
R	○									○		REVERSE POSITION
N												NEUTRAL POSITION
D*4	1st		○	*1D				B	B			Automatic shift 1 ↔ 2 ↔ 3 ↔ 4
	2nd		○	*1A	○			B				
	3rd		○	○	*1A	*2C	C	B			*5○	
	4th		○	C		*3C	C	○			○	
2	1st		○	D				B	B			Automatic shift 1 ↔ 2
	2nd		○	A	○			B				
1	1st		○	○				B		○		Locks (held stationary) in 1st speed 1 ↔ 2
	2nd		○	○	○			B				

*1: Operates when overdrive control switch is set in "OFF" position.

*2: Oil pressure is applied to both 2nd "apply" side and 3rd "release" side of band servo piston. However, brake band does not contract because oil pressure area on the "release" side is greater than that on the "apply" side.

*3: Oil pressure is applied to 4th "apply" side in condition *2 above, and brake band contracts.

*4: A/T will not shift to 4th when overdrive control switch is set in "OFF" position.

*5: Operates when overdrive control switch is "OFF".

○ : Operates.

A: Operates when throttle opening is less than 3/16, activating engine brake.

B: Operates during "progressive" acceleration.

C: Operates but does not affect power transmission.

D: Operates when throttle opening is less than 3/16, but does not affect engine brake.

GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

OVERALL SYSTEM

Shift Mechanism (Cont'd)


POWER TRANSMISSION

-NIAT0014S04

NIAT0014S0401

"N" and "P" Positions

- "N" position
Power from the input shaft is not transmitted to the output shaft because the clutches do not operate.
- "P" position
Similar to the "N" position, the clutches do not operate. The parking pawl engages with the parking gear to mechanically hold the output shaft so that the power train is locked.

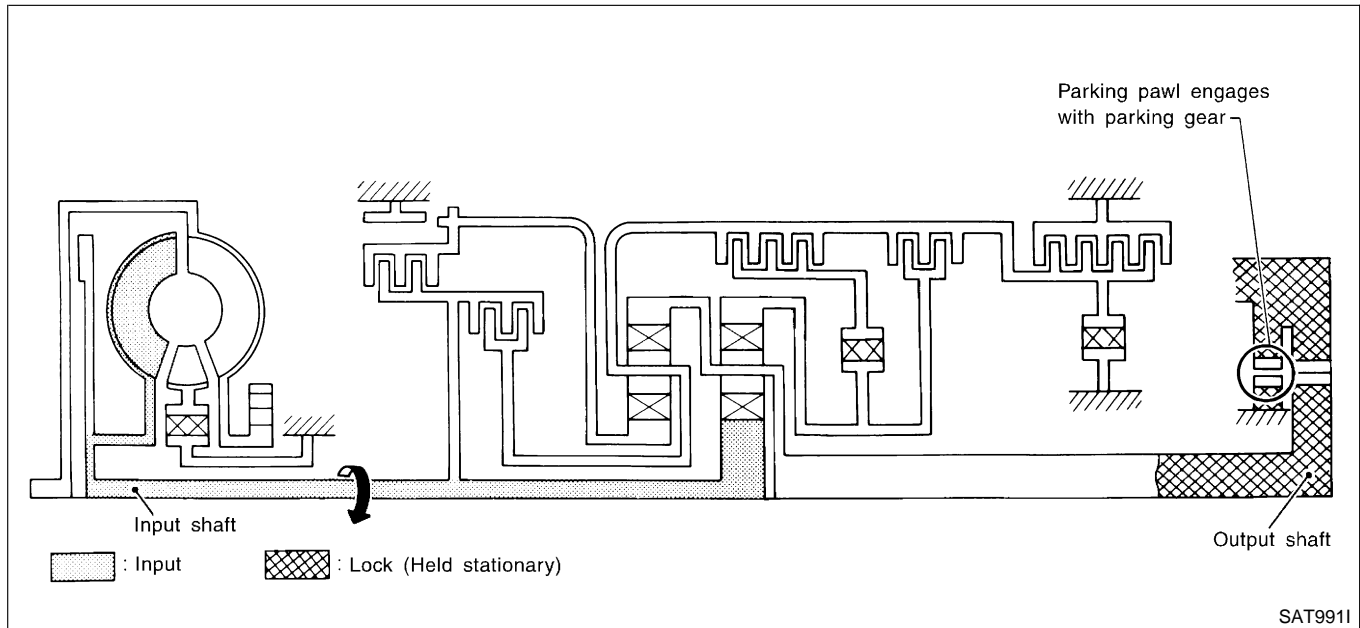


OVERALL SYSTEM

Shift Mechanism (Cont'd)

"1" Position

-NIAT0014S0402

<ul style="list-style-type: none"> ● Forward clutch ● Forward one-way clutch ● Overrun clutch ● Low and reverse brake 	<p>As overrun clutch engages, rear internal gear is locked by the operation of low and reverse brake. This is different from that of D₁ and 2₁.</p>
<p>Engine brake</p>	<p>Overrun clutch always engages, therefore engine brake can be obtained when decelerating.</p>

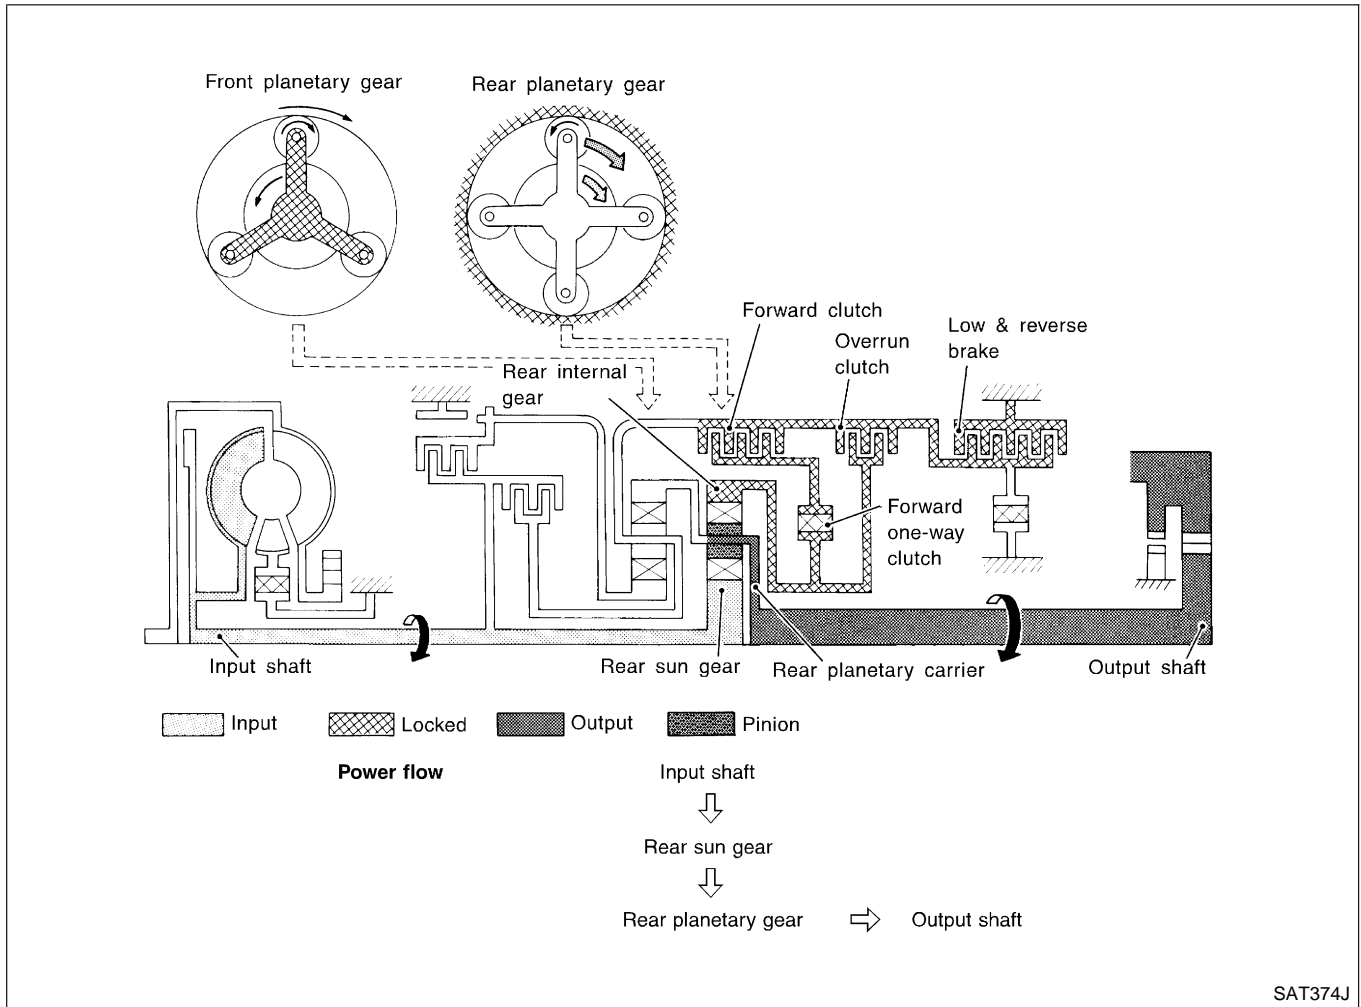

GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


OVERALL SYSTEM

Shift Mechanism (Cont'd)

"D₁" and "2₁" Positions

-NIAT0014S0403

<ul style="list-style-type: none"> ● Forward one-way clutch ● Forward clutch ● Low one-way clutch 	<p>Rear internal gear is locked to rotate counterclockwise because of the functioning of these three clutches.</p>
<p>Overrun clutch engagement conditions (Engine brake)</p>	<p>D₁: Overdrive control switch "OFF" and throttle opening is less than 3/16 2₁: Always engaged At D₁ and 2₁ positions, engine brake is not activated due to free turning of low one-way clutch.</p>

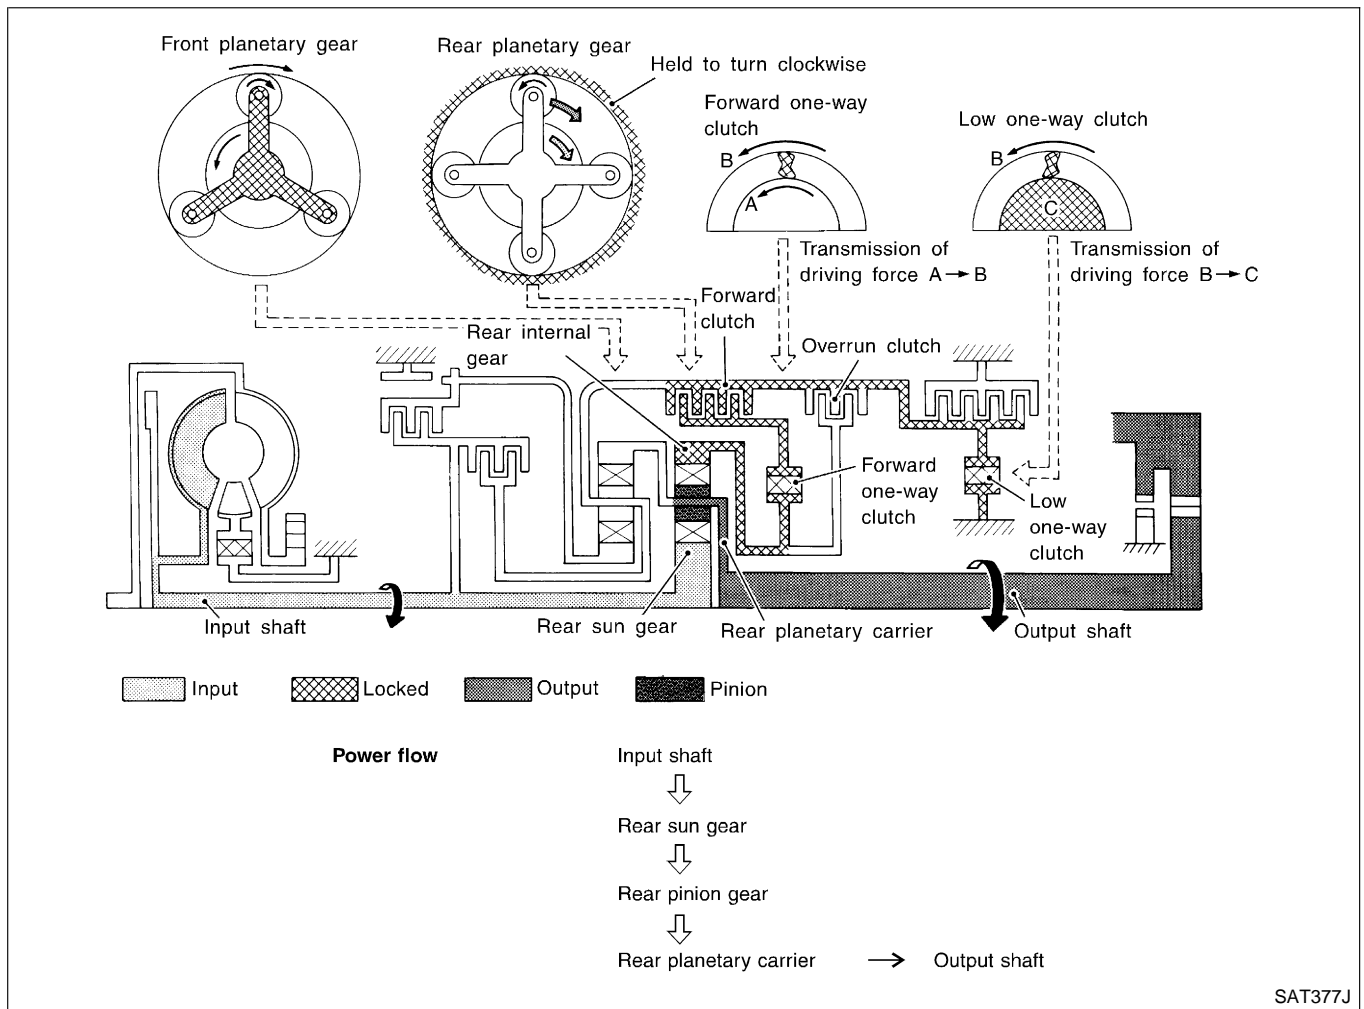

SAT377J


OVERALL SYSTEM

Shift Mechanism (Cont'd)

"D₂", "2₂" and "1₂" Positions

-NIAT0014S0404

<ul style="list-style-type: none"> ● Forward clutch ● Forward one-way clutch ● Brake band 	<p>Rear sun gear drives rear planetary carrier and combined front internal gear. Front internal gear now rotates around front sun gear accompanying front planetary carrier.</p> <p>As front planetary carrier transfers the power to rear internal gear through forward clutch and forward one-way clutch, this rotation of rear internal gear increases the speed of rear planetary carrier compared with that of the 1st speed.</p>
<p>Overrun clutch engagement conditions</p>	<p>D₂: Overdrive control switch "OFF" and throttle opening is less than 3/16 2₂ and 1₂: Always engaged</p>

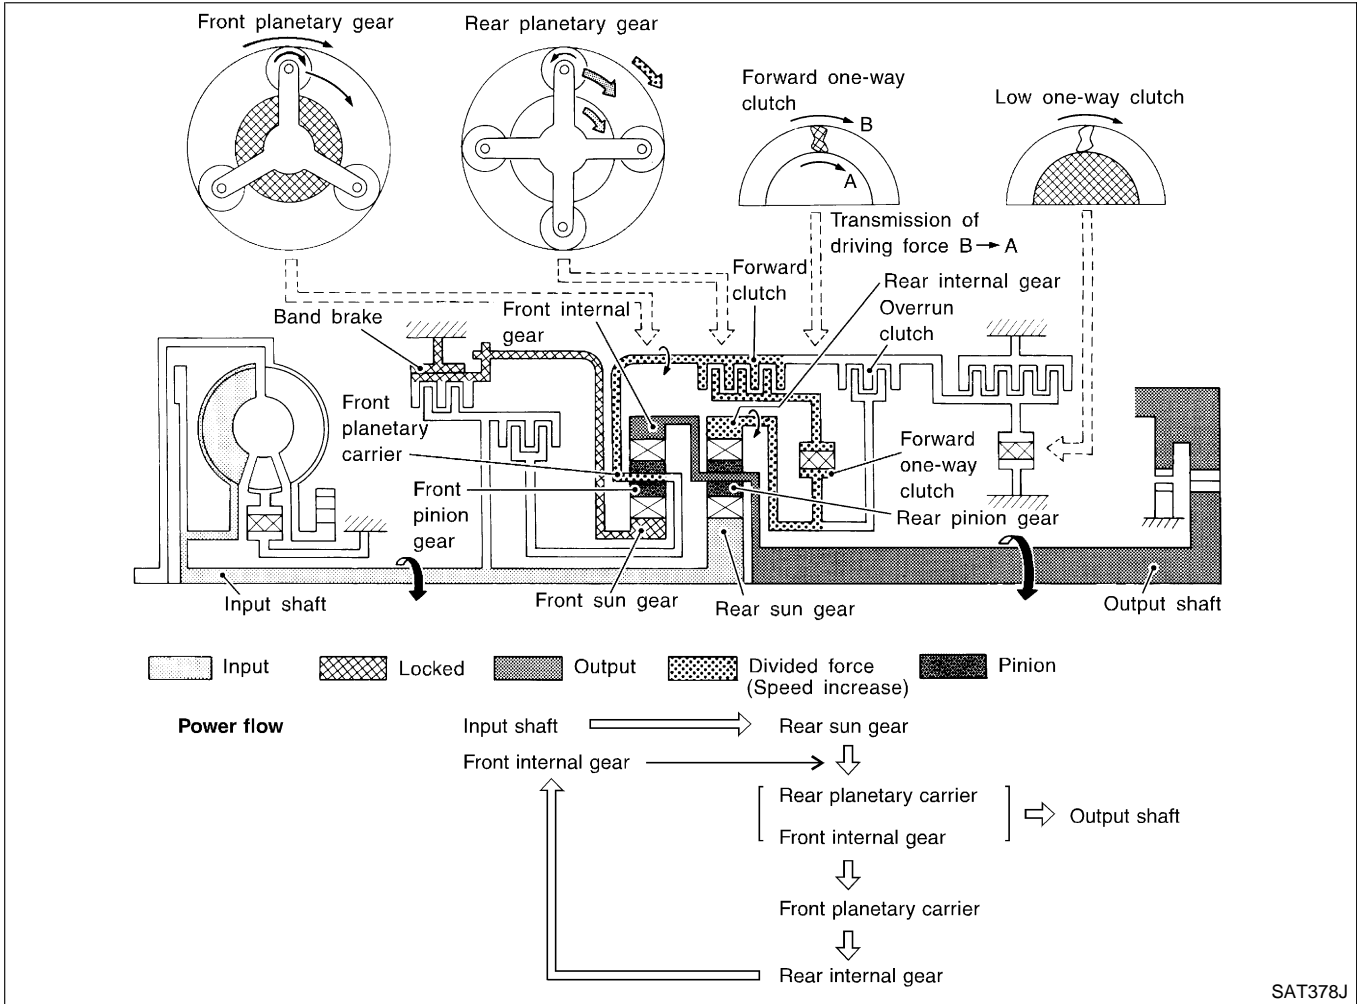

SAT378J

GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


OVERALL SYSTEM

Shift Mechanism (Cont'd)

-NIAT0014S0405

"D₃" Position

<ul style="list-style-type: none"> ● High clutch ● Forward clutch ● Forward one-way clutch 	<p>Input power is transmitted to front planetary carrier through high clutch. And front planetary carrier is connected to rear internal gear by operation of forward clutch and forward one-way clutch. This rear internal gear rotation and another input (the rear sun gear) accompany rear planetary carrier to turn at the same speed.</p>
<p>Overrun clutch engagement conditions</p>	<p>D₃: Overdrive control switch "OFF" and throttle opening is less than 3/16</p>

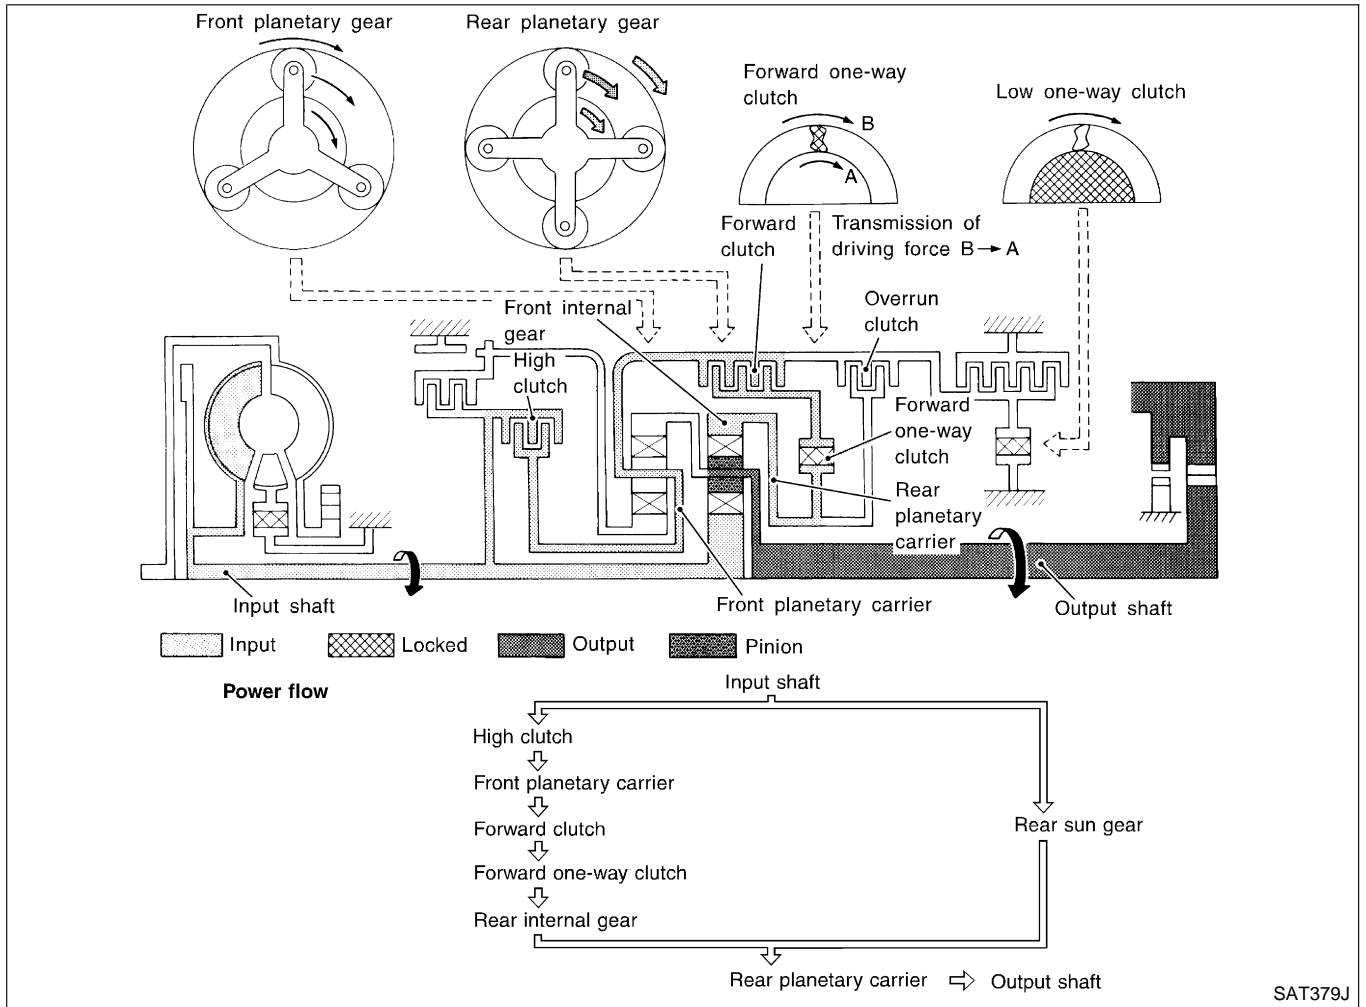

SAT379J


OVERALL SYSTEM

Shift Mechanism (Cont'd)

"D₄" (OD) Position

-NIAT0014S0406

<ul style="list-style-type: none"> ● High clutch ● Brake band ● Forward clutch (Does not affect power transmission) 	<p>Input power is transmitted to front carrier through high clutch. This front carrier turns around the sun gear which is fixed by brake band and makes front internal gear (output) turn faster.</p>
<p>Engine brake</p>	<p>At D₄ position, there is no one-way clutch in the power transmission line and engine brake can be obtained when decelerating.</p>

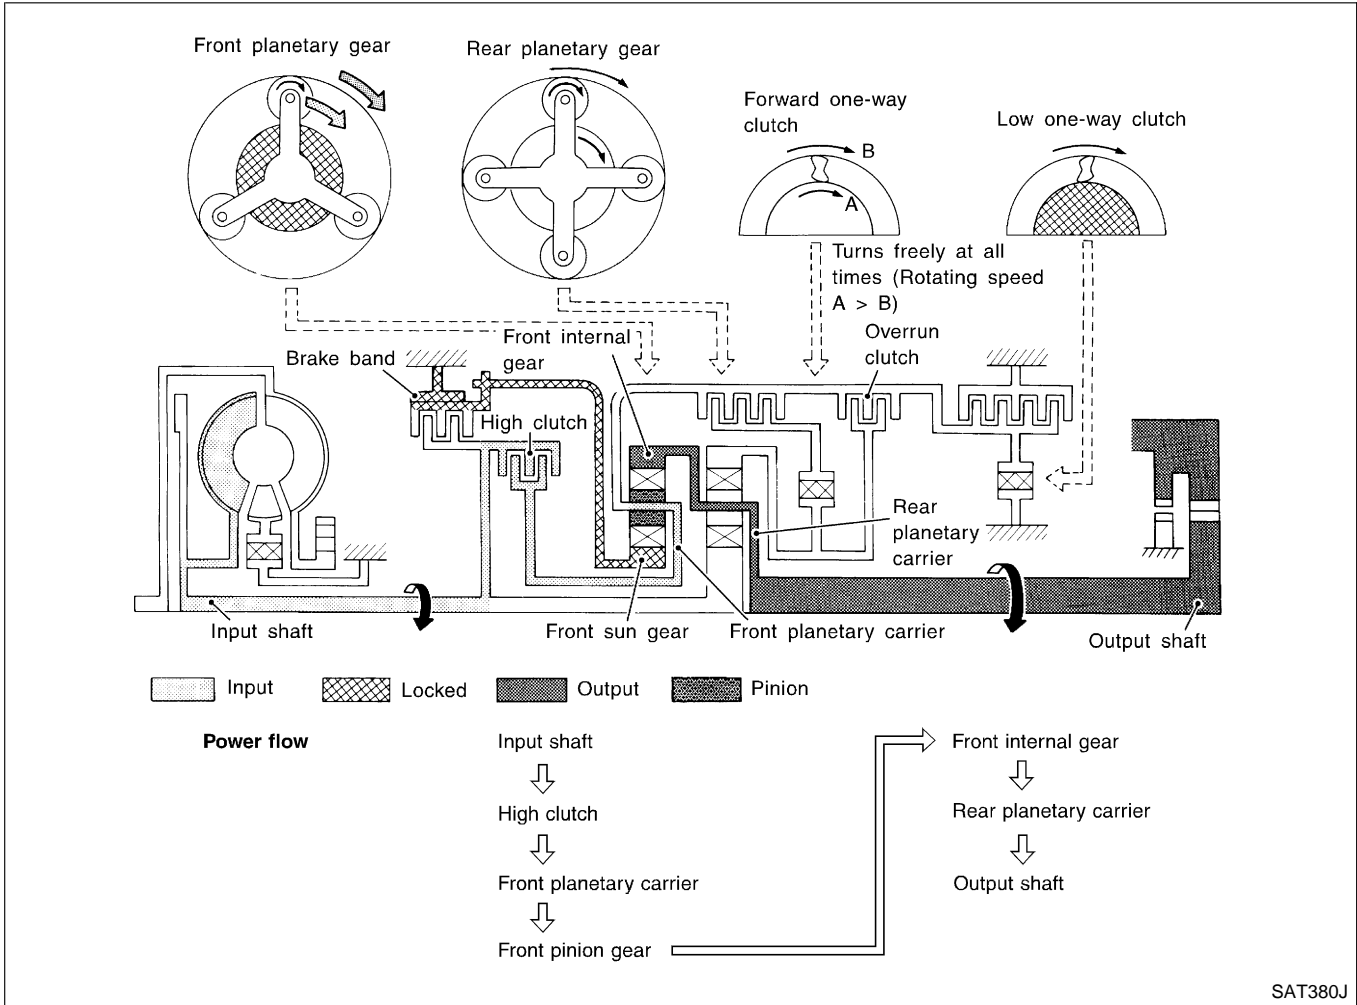

SAT380J

GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


OVERALL SYSTEM

Shift Mechanism (Cont'd)

-NIAT0014S0407

"R" Position

<ul style="list-style-type: none"> ● Reverse clutch ● Low and reverse brake 	<p>Front planetary carrier is stationary because of the operation of low and reverse brake.</p> <p>Input power is transmitted to front sun gear through reverse clutch, which drives front internal gear in the opposite direction.</p>
<p>Engine brake</p>	<p>As there is no one-way clutch in the power transmission line, engine brake can be obtained when decelerating.</p>

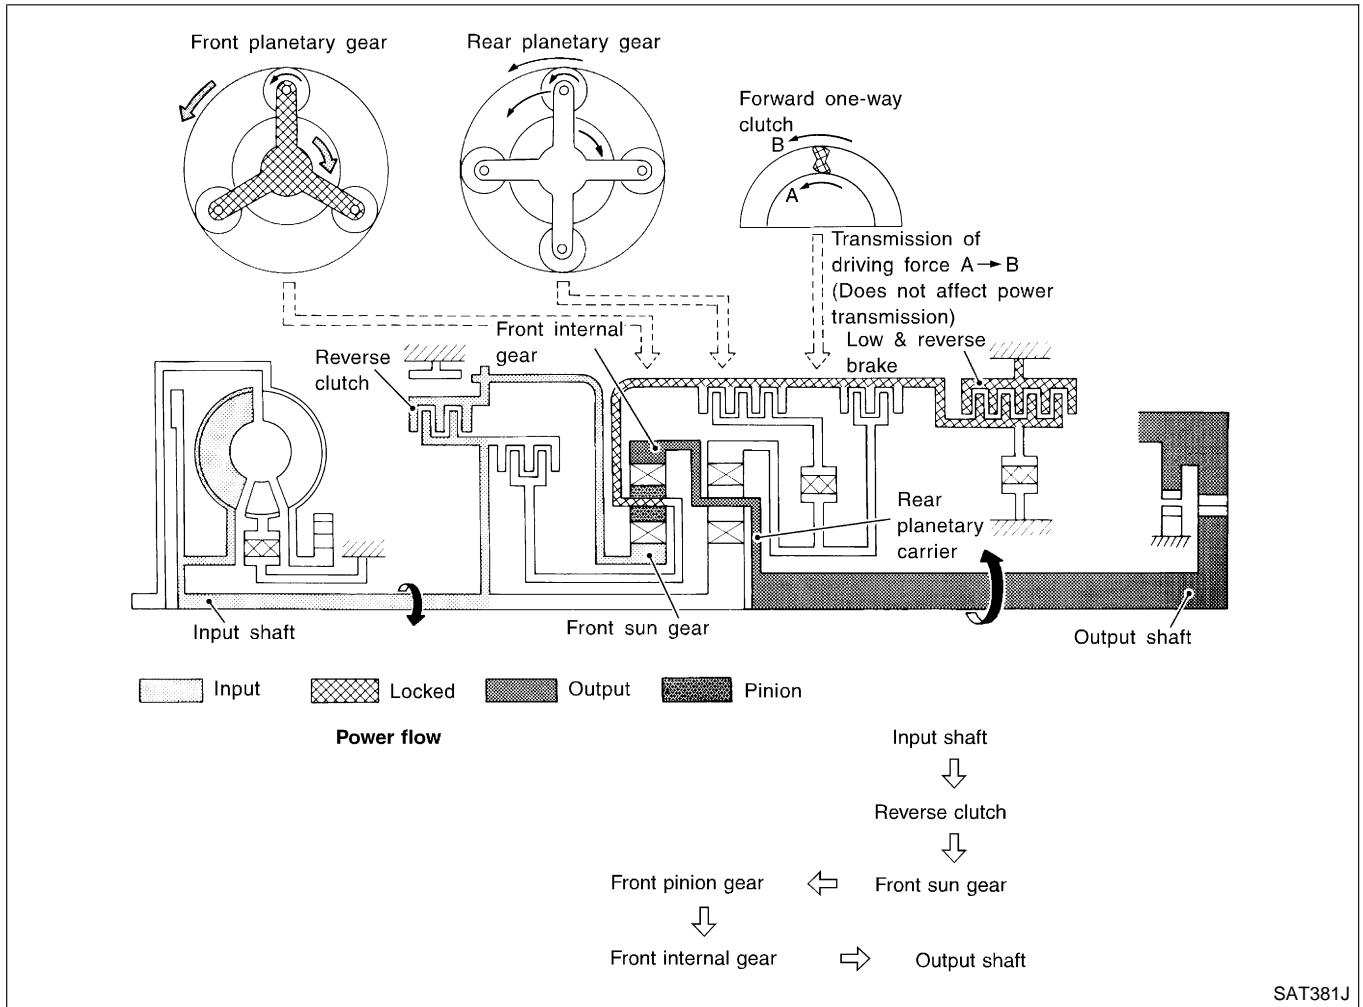

OVERALL SYSTEM

Control System

Control System

=NIAT0015

NIAT0015S01


OUTLINE

The automatic transaxle senses vehicle operating conditions through various switches and sensors. It always controls the optimum shift position and reduces shifting and lock-up shocks.

SWITCHES & SENSORS		TCM		ACTUATORS
PNP switch Throttle position sensor Closed throttle position switch Wide open throttle position switch Engine speed signal A/T fluid temperature sensor Revolution sensor Vehicle speed sensor Overdrive control switch ASCD control unit Stop lamp switch	▶	Shift control Line pressure control Lock-up control Overrun clutch control Timing control Fail-safe control Self-diagnosis CONSULT-II communication line control Duet-EA control	▶	Shift solenoid valve A Shift solenoid valve B Overrun clutch solenoid valve Torque converter clutch solenoid valve Line pressure solenoid valve O/D OFF indicator lamp

CONTROL SYSTEM

NIAT0015S02

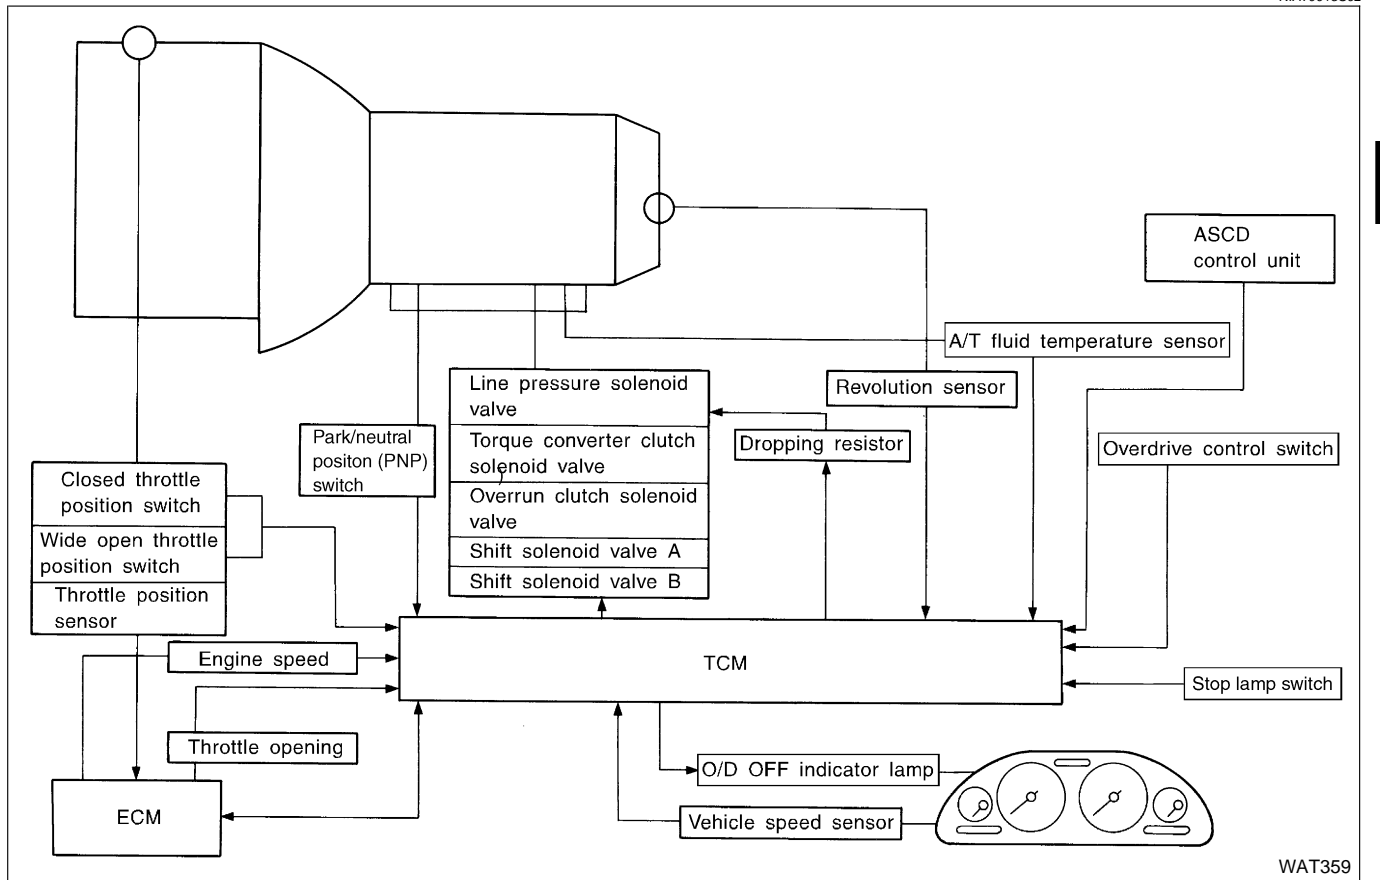

WAT359

OVERALL SYSTEM

Control System (Cont'd)

TCM FUNCTION

NIAT0015S03

The function of the TCM is to:

- Receive input signals sent from various switches and sensors.
- Determine required line pressure, shifting point, lock-up operation, and engine brake operation.
- Send required output signals to the respective solenoids.

INPUT/OUTPUT SIGNAL OF TCM

NIAT0015S04

	Sensors, switches and solenoid valves	Function
Input	PNP switch	Detects select lever position and sends a signal to TCM.
	Throttle position sensor	Detects throttle valve position and sends a signal to TCM.
	Closed throttle position switch	Detects throttle valve's fully-closed position and sends a signal to TCM.
	Wide open throttle position switch	Detects a throttle valve position of greater than 1/2 of full throttle and sends a signal to TCM.
	Engine speed signal	From ECM.
	A/T fluid temperature sensor	Detects transmission fluid temperature and sends a signal to TCM.
	Revolution sensor	Detects output shaft rpm and sends a signal to TCM.
	Vehicle speed sensor	Used as an auxiliary vehicle speed sensor. Sends a signal when revolution sensor (installed on transmission) malfunctions.
	Overdrive control switch	Sends a signal, which prohibits a shift to "D ₄ " (overdrive) position, to the TCM.
	ASCD control unit	Sends the cruise signal and "D ₄ " (overdrive) cancellation signal from ASCD control unit to TCM.
	Stop lamp switch	Releases lock-up system when depressing pedal in lock-up condition.
Output	Shift solenoid valve A/B	Selects shifting point suited to driving conditions in relation to a signal sent from TCM.
	Line pressure solenoid valve	Regulates (or decreases) line pressure suited to driving conditions in relation to a signal sent from TCM.
	Torque converter clutch solenoid valve	Regulates (or decreases) lock-up pressure suited to driving conditions in relation to a signal sent from TCM.
	Overrun clutch solenoid valve	Controls an "engine brake" effect suited to driving conditions in relation to a signal sent from TCM.
	O/D OFF indicator lamp	Shows TCM faults, when A/T control components malfunction.

Control Mechanism

NIAT0016


LINE PRESSURE CONTROL

NIAT0016S01

TCM has various line pressure control characteristics to match the driving conditions.


An ON-OFF duty signal is sent to the line pressure solenoid valve based on TCM characteristics.

Hydraulic pressure on the clutch and brake is electronically controlled through the line pressure solenoid valve to accommodate engine torque. This results in smooth shift operation.

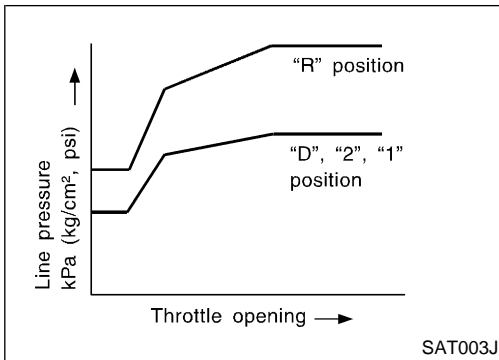


Normal Control

The line pressure to throttle opening characteristics is set for suitable clutch operation. NIAT0016S0101

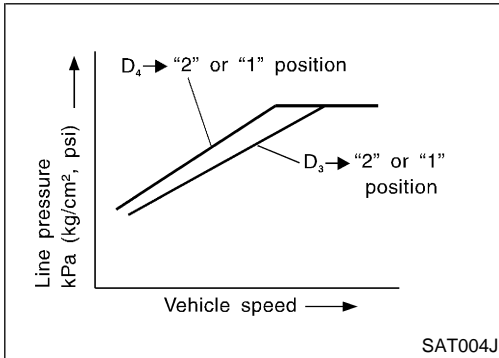


Back-up Control (Engine brake)

If the selector lever is shifted to '2' position while driving in D₄ (OD) or D₃, great driving force is applied to the clutch inside the transmission. Clutch operating pressure (line pressure) must be increased to deal with this driving force. NIAT0016S0102

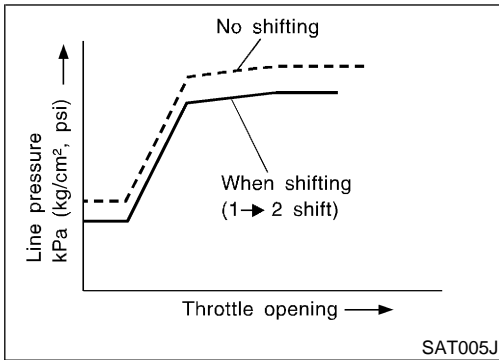

During Shift Change

The line pressure is temporarily reduced corresponding to a change in engine torque when shifting gears (that is, when the shift solenoid valve is switched for clutch operation) to reduce shifting shock. NIAT0016S0103

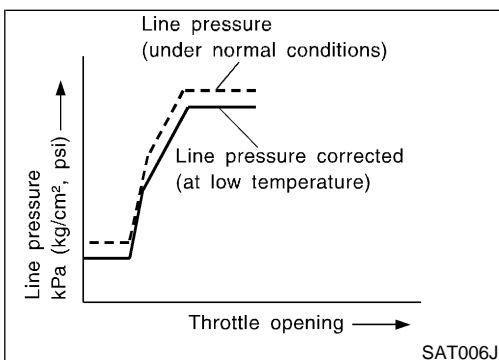

At Low Fluid Temperature

- Fluid viscosity and frictional characteristics of the clutch facing change with fluid temperature. Clutch engaging or band-contacting pressure is compensated for, according to fluid temperature, to stabilize shifting quality. NIAT0016S0104

- The line pressure is reduced below 60°C (140°F) to prevent shifting shock due to low viscosity of automatic transmission fluid when temperature is low.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA


SC

EL

IDX

OVERALL SYSTEM

Control Mechanism (Cont'd)

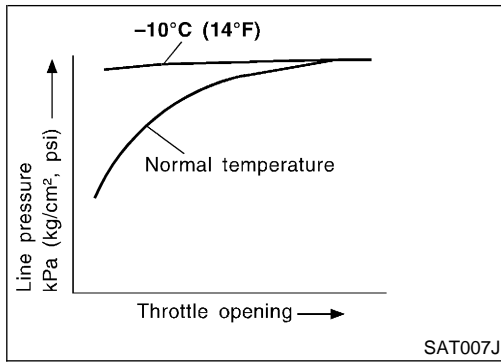


- Line pressure is increased to a maximum irrespective of the throttle opening when fluid temperature drops to -10°C (14°F). This pressure rise is adopted to prevent a delay in clutch and brake operation due to extreme drop of fluid viscosity at low temperature.

SHIFT CONTROL

NIAT0016S02

The shift is regulated entirely by electronic control to accommodate vehicle speed and varying engine operations. This is accomplished by electrical signals transmitted by the revolution sensor and throttle position sensor. This results in improved acceleration performance and fuel economy.

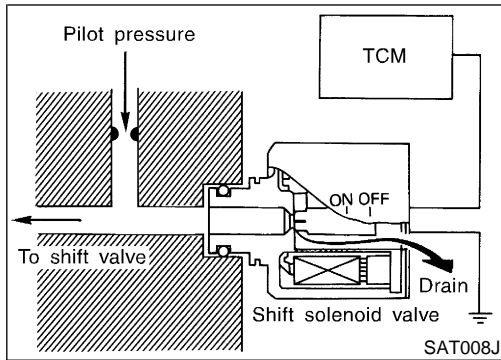

Control of Shift Solenoid Valves A and B

NIAT0016S0201

The TCM activates shift solenoid valves A and B according to signals from the throttle position sensor and revolution sensor to select the optimum gear position on the basis of the shift schedule memorized in the TCM.

The shift solenoid valve performs simple ON-OFF operation. When set to "ON", the drain circuit closes and pilot pressure is applied to the shift valve.


Relation Between Shift Solenoid Valves A and B and Gear Positions

NIAT0016S0202

Shift solenoid valve	Gear position				
	D ₁ , 2 ₁ , 1 ₁	D ₂ , 2 ₂ , 1 ₂	D ₃	D ₄ (OD)	N-P
A	ON (Closed)	OFF (Open)	OFF (Open)	ON (Closed)	ON (Closed)
B	ON (Closed)	ON (Closed)	OFF (Open)	OFF (Open)	ON (Closed)

Control of Shift Valves A and B

NIAT0016S0203

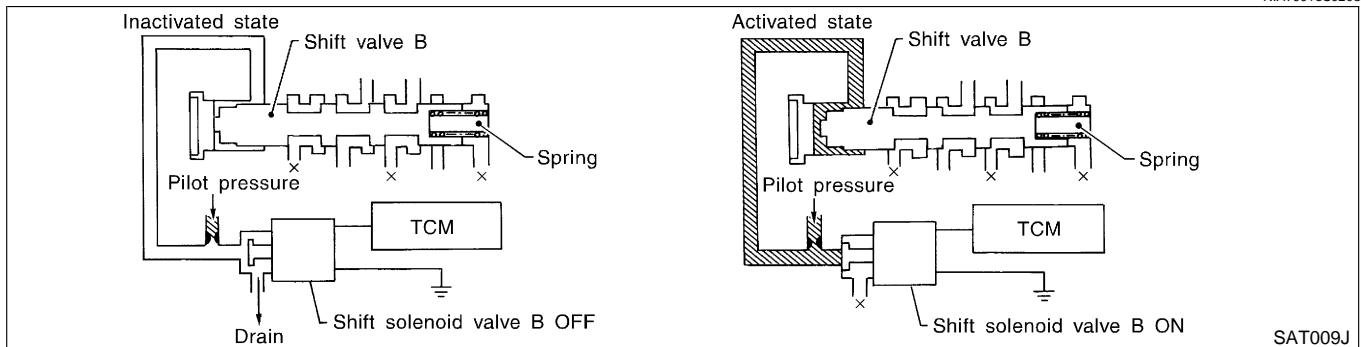

OVERALL SYSTEM

Control Mechanism (Cont'd)

Pilot pressure generated by the operation of shift solenoid valves A and B is applied to the end face of shift valves A and B.

The drawing above shows the operation of shift valve B. When the shift solenoid valve is "ON", pilot pressure applied to the end face of the shift valve overcomes spring force, moving the valve upward.


LOCK-UP CONTROL

The torque converter clutch piston in the torque converter is locked to eliminate torque converter slip to increase power transmission efficiency. The solenoid valve is controlled by an ON-OFF duty signal sent from the TCM. The signal is converted to an oil pressure signal which controls the torque converter clutch piston.

Conditions for Lock-up Operation

When vehicle is driven in 4th gear position, vehicle speed and throttle opening are detected. If the detected values fall within the lock-up zone memorized in the TCM, lock-up is performed.


Overdrive control switch	ON	OFF
Selector lever	"D" position	
Gear position	D ₄	D ₃
Vehicle speed sensor	More than set value	
Throttle position sensor	Less than set opening	
Closed throttle position switch	OFF	
A/T fluid temperature sensor	More than 40°C (104°F)	

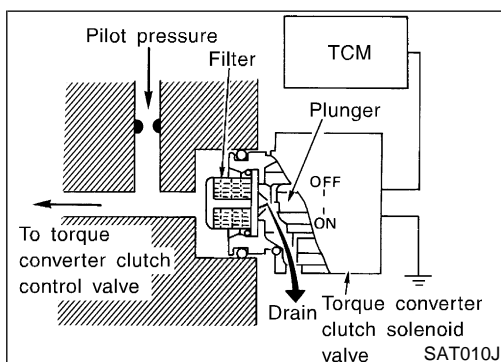

Torque Converter Clutch Solenoid Valve Control

The torque converter clutch solenoid valve is controlled by the TCM. The plunger closes the drain circuit during the "OFF" period, and opens the circuit during the "ON" period. If the percentage of OFF-time increases in one cycle, the pilot pressure drain time is reduced and pilot pressure remains high.

The torque converter clutch piston is designed to slip to adjust the ratio of ON-OFF, thereby reducing lock-up shock.

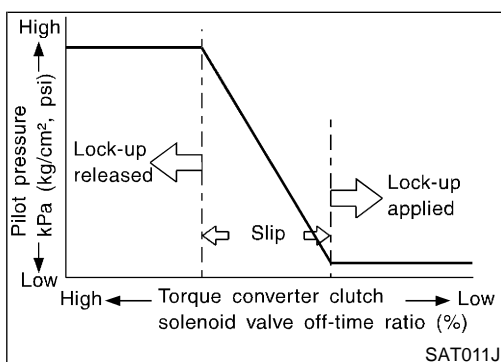


OFF-time INCREASING
 ↓
 Amount of drain DECREASING
 ↓
 Pilot pressure HIGH
 ↓
 Lock-up RELEASING

OVERALL SYSTEM

Control Mechanism (Cont'd)

Torque Converter Clutch Control Valve Operation

NIAT0016S0303

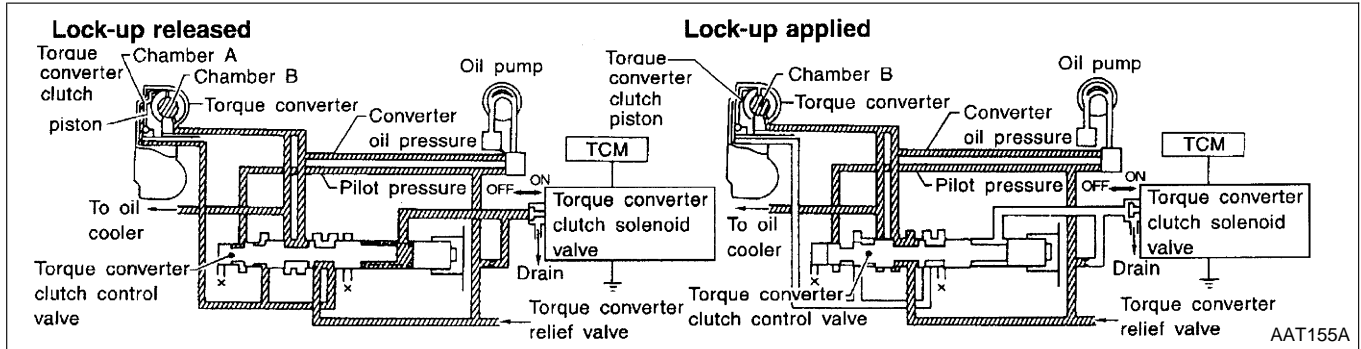

AAT155A

Lock-up released

The OFF-duration of the torque converter clutch solenoid valve is long, and pilot pressure is high. The pilot pressure pushes the end face of the torque converter clutch control valve in combination with spring force to move the valve to the left. As a result, converter pressure is applied to chamber A (torque converter clutch piston release side). Accordingly, the torque converter clutch piston remains unlocked.

Lock-up applied

When the OFF-duration of the torque converter clutch solenoid valve is short, pilot pressure drains and becomes low. Accordingly, the control valve moves to the right by the pilot pressure of the other circuit and converter pressure. As a result, converter pressure is applied to chamber B, keeping the torque converter clutch piston applied.

Also smooth lock-up is provided by transient application and release of the lock-up.

OVERRUN CLUTCH CONTROL (ENGINE BRAKE CONTROL)

NIAT0016S04


Forward one-way clutch is used to reduce shifting shocks in downshifting operations. This clutch transmits engine torque to the wheels. However, drive force from the wheels is not transmitted to the engine because the one-way clutch rotates idle. This means the engine brake is not effective.

The overrun clutch operates when the engine brake is needed.

Overrun Clutch Operating Conditions

NIAT0016S0401


Selector lever position	Gear position	Throttle opening
"D" position	D ₁ , D ₂ , D ₃ gear position	Less than 3/16
"2" position	2 ₁ , 2 ₂ gear position	
"1" position	1 ₁ , 1 ₂ gear position	At any position

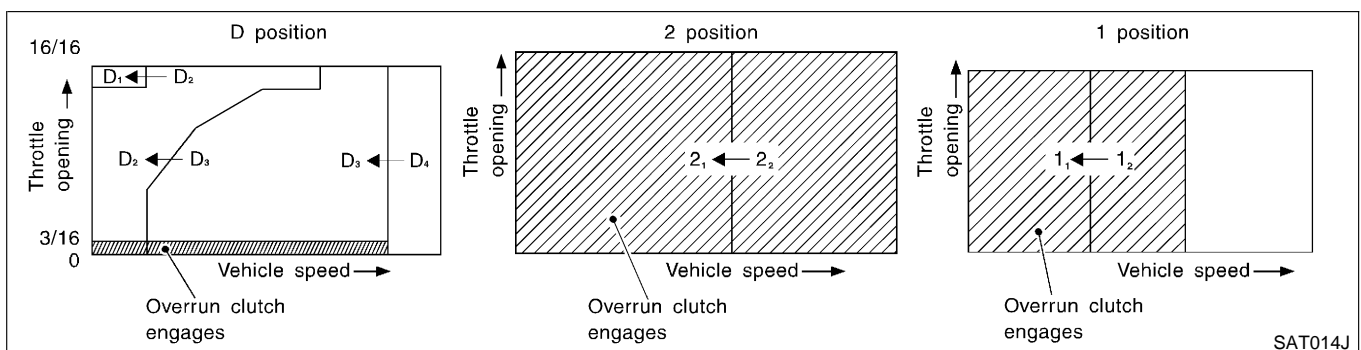

SAT014J

OVERALL SYSTEM

Control Mechanism (Cont'd)

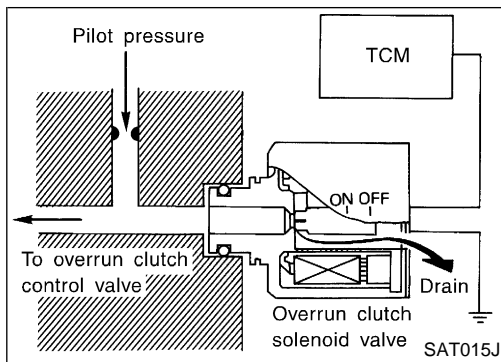

Overrun Clutch Solenoid Valve Control


NIAT0016SD402

The overrun clutch solenoid valve is operated by an ON-OFF signal transmitted by the TCM to provide overrun clutch control (engine brake control).

When this solenoid valve is "ON", the pilot pressure drain port closes. When it is "OFF", the drain port opens.

During the solenoid valve "ON" pilot pressure is applied to the end face of the overrun clutch control valve.

GI
MA
EM
LC

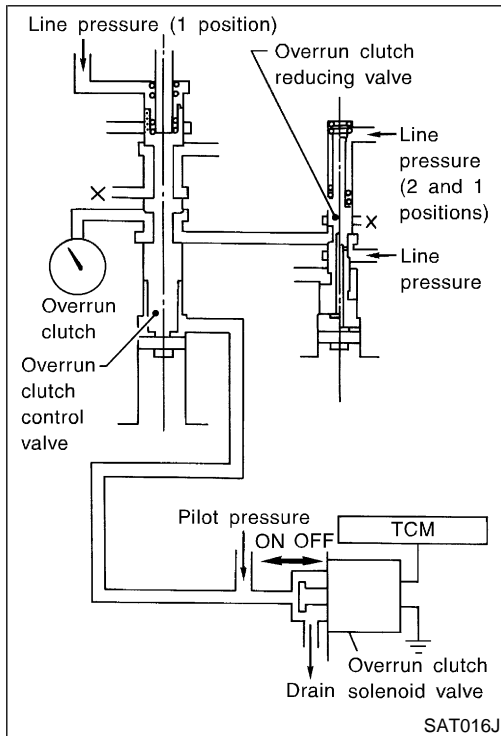

Overrun Clutch Control Valve Operation

NIAT0016SD403

When the solenoid valve is "ON", pilot pressure is applied to the overrun clutch control valve. This pushes up the overrun clutch control valve. The line pressure is then shut off so that the clutch does not engage.

When the solenoid valve is "OFF", pilot pressure is not generated. At this point, the overrun clutch control valve moves downward by spring force. As a result, overrun clutch operation pressure is provided by the overrun clutch reducing valve. This causes the overrun clutch to engage.

In the 1 position, the overrun clutch control valve remains pushed down so that the overrun clutch is engaged at all times.

EC
FE
CL
MT

AT

AX

SU

BR

Control Valve

NIAT0017

FUNCTION OF CONTROL VALVES

NIAT0017S01

Valve name	Function
Pressure regulator valve, plug and sleeve	Regulates oil discharged from the oil pump to provide optimum line pressure for all driving conditions.
Pressure modifier valve and sleeve	Used as a signal supplementary valve to the pressure regulator valve. Regulates pressure-modifier pressure (signal pressure) which controls optimum line pressure for all driving conditions.
Pilot valve	Regulates line pressure to maintain a constant pilot pressure level which controls lock-up mechanism, overrun clutch, shift timing.
Accumulator control valve	Regulates accumulator back-pressure to pressure suited to driving conditions.
Manual valve	Directs line pressure to oil circuits corresponding to select positions. Hydraulic pressure drains when the shift lever is in Neutral.
Shift valve A	Simultaneously switches four oil circuits using output pressure of shift solenoid valve A to meet driving conditions (vehicle speed, throttle opening, etc.). Provides automatic downshifting and up-shifting (1st → 2nd → 3rd → 4th gears/4th → 3rd → 2nd → 1st gears) in combination with shift valve B.

RS

BT

HA

SC

EL

IDX

OVERALL SYSTEM

Control Valve (Cont'd)

Valve name	Function
Shift valve B	Simultaneously switches three oil circuits using output pressure of shift solenoid valve B in relation to driving conditions (vehicle speed, throttle opening, etc.). Provides automatic downshifting and up-shifting (1st → 2nd → 3rd → 4th gears/4th → 3rd → 2nd → 1st gears) in combination with shift valve A.
Overrun clutch control valve	Switches hydraulic circuits to prevent engagement of the overrun clutch simultaneously with application of the brake band in D ₄ . (Interlocking occurs if the overrun clutch engages during D ₄ .)
1st reducing valve	Reduces low & reverse brake pressure to dampen engine-brake shock when down-shifting from the "1" position 1 ₂ to 1 ₁ .
Overrun clutch reducing valve	Reduces oil pressure directed to the overrun clutch and prevents engine-brake shock. In "1" and "2" positions, line pressure acts on the overrun clutch reducing valve to increase the pressure-regulating point, with resultant engine brake capability.
Torque converter relief valve	Prevents an excessive rise in torque converter pressure.
Torque converter clutch control valve, plug and sleeve	Activates or inactivates the lock-up function. Also provides smooth lock-up through transient application and release of the lock-up system.
1-2 accumulator valve and piston	Dampens the shock encountered when 2nd gear band servo contracts, and provides smooth shifting.
3-2 timing valve	Switches oil pressure with 3-2 timing valve according to throttle opening.
Shuttle control valve	Reduces shock when down-shifting from 3rd to 2nd and regulates overrun clutch.
Cooler check valve	Regulates oil pressure which causes lock-up when driving at low speeds.

Introduction

NIAT0018

The A/T system has two self-diagnostic systems.

The first is the emission-related on board diagnostic system (OBD-II) performed by the TCM in combination with the ECM. The malfunction is indicated by the MIL (malfunction indicator lamp) and is stored as a DTC in the ECM memory but not the TCM memory.

The second is the TCM original self-diagnosis indicated by the O/D OFF indicator lamp. The malfunction is stored in the TCM memory. The detected items are overlapped with OBD-II self-diagnostic items. For detail, refer to AT-40.

OBD-II Function for A/T System

NIAT0019

The ECM provides emission-related on board diagnostic (OBD-II) functions for the A/T system. One function is to receive a signal from the TCM used with OBD-related parts of the A/T system. The signal is sent to the ECM when a malfunction occurs in the corresponding OBD-related part. The other function is to indicate a diagnostic result by means of the MIL (malfunction indicator lamp) on the instrument panel. Sensors, switches and solenoid valves are used as sensing elements.

The MIL automatically illuminates in One or Two Trip Detection Logic when a malfunction is sensed in relation to A/T system parts.

One or Two Trip Detection Logic of OBD-II

NIAT0020

ONE TRIP DETECTION LOGIC

If a malfunction is sensed during the first test drive, the MIL will illuminate and the malfunction will be stored in the ECM memory as a DTC. The TCM is not provided with such a memory function.

TWO TRIP DETECTION LOGIC

When a malfunction is sensed during the first test drive, it is stored in the ECM memory as a 1st trip DTC (diagnostic trouble code) or 1st trip freeze frame data. At this point, the MIL will not illuminate. — First Trip
If the same malfunction as that experienced during the first test drive is sensed during the second test drive, the MIL will illuminate. — Second Trip

A/T-related parts for which the MIL illuminates during the first or second test drive are listed below.

Items	MIL	
	One trip detection	Two trip detection
Shift solenoid valve A — DTC: P0750	X	
Shift solenoid valve B — DTC: P0755	X	
Throttle position sensor or switch — DTC: P1705	X	
Except above		X

The “trip” in the “One or Two Trip Detection Logic” means a driving mode in which self-diagnosis is performed during vehicle operation.

OBD-II Diagnostic Trouble Code (DTC)

NIAT0021

HOW TO READ DTC AND 1ST TRIP DTC

DTC and 1st trip DTC can be read by the following methods.

(P) with CONSULT-II or (GST) GST CONSULT-II or GST (Generic Scan Tool) Examples: P0705, P0710, P0720, P0725, etc.

These DTCs are prescribed by SAE J2012.

(CONSULT-II also displays the malfunctioning component or system.)

- **1st trip DTC No. is the same as DTC No.**
- **Output of the diagnostic trouble code indicates that the indicated circuit has a malfunction. However, in case of the Mode II and GST they do not indicate whether the malfunction is still occurring or occurred in the past and returned to normal. CONSULT-II can identify them as shown below. Therefore, using CONSULT-II (if available) is recommended.**

A sample of CONSULT-II display for DTC and 1st trip DTC is shown in the following page. DTC or 1st trip DTC of a malfunction is displayed in SELF DIAGNOSIS mode for “ENGINE” with CONSULT-II. Time data indicates how many times the vehicle was driven after the last detection of a DTC.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

OBD-II Diagnostic Trouble Code (DTC) (Cont'd)

SELECT SYSTEM
A/T
ENGINE

SAT014K

If the DTC is being detected currently, the time data will be "0".

SELF-DIAG RESULTS	
DTC RESULTS	TIME
PNP SW/CIRC [P0705]	0

SAT015K

If a 1st trip DTC is stored in the ECM, the time data will be "1t".

SELF-DIAG RESULTS	
DTC RESULTS	TIME
PNP SW/CIRC [P0705]	1 t

SAT016K

Freeze Frame Data and 1st Trip Freeze Frame Data

N/A70021S0101

The ECM has a memory function, which stores the driving condition such as fuel system status, calculated load value, engine coolant temperature, short term fuel trim, long term fuel trim, engine speed and vehicle speed at the moment the ECM detects a malfunction.

Data which are stored in the ECM memory, along with the 1st trip DTC, are called 1st trip freeze frame data, and the data, stored together with the DTC data, are called freeze frame data and displayed on CONSULT-II or GST. The 1st trip freeze frame data can only be displayed on the CONSULT-II screen, not on the GST. For detail, refer to **EC-107** [QG18DE (Except Calif. CA Model)], **EC-778** [QG18DE (Calif. CA Model)], **EC-1442** (SR20DE), "CONSULT-II".

Only one set of freeze frame data (either 1st trip freeze frame data of freeze frame data) can be stored in the ECM. 1st trip freeze frame data is stored in the ECM memory along with the 1st trip DTC. There is no priority for 1st trip freeze frame data and it is updated each time a different 1st trip DTC is detected. However, once freeze frame data (2nd trip detection/MIL on) is stored in the ECM memory, 1st trip freeze frame data is no longer stored. Remember, only one set of freeze frame data can be stored in the ECM.

The ECM has the following priorities to update the data.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

OBD-II Diagnostic Trouble Code (DTC) (Cont'd)

Priority	Items	
1	Freeze frame data	Misfire — DTC: P0300 - P0306 Fuel Injection System Function — DTC: P0171, P0172, P0174, P0175
2		Except the above items (Includes A/T related items)
3	1st trip freeze frame data	

Both 1st trip freeze frame data and freeze frame data (along with the DTCs) are cleared when the ECM memory is erased.

HOW TO ERASE DTC

The diagnostic trouble code can be erased by CONSULT-II, GST or ECM DIAGNOSTIC TEST MODE as described following.

- If the battery terminal is disconnected, the diagnostic trouble code will be lost within 24 hours.
- When you erase the DTC, using CONSULT-II or GST is easier and quicker than switching the mode selector on the ECM.

The following emission-related diagnostic information is cleared from the ECM memory when erasing DTC related to OBD-II. For details, refer to **EC-86** [QG18DE (Except Calif. CA Model)], **EC-758** [QG18DE (Calif. CA Model)], **EC-1422** (SR20DE), "Emission-related Diagnostic Information".

- Diagnostic trouble codes (DTC)
- 1st trip diagnostic trouble codes (1st trip DTC)
- Freeze frame data
- 1st trip freeze frame data
- System readiness test (SRT) codes
- Test values

HOW TO ERASE DTC (WITH CONSULT-II)

- If a DTC is displayed for both ECM and TCM, it needs to be erased for both ECM and TCM.
1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 10 seconds and then turn it "ON" (engine stopped) again.
 2. Turn CONSULT-II "ON" and touch "A/T".
 3. Touch "SELF DIAGNOSIS".
 4. Touch "ERASE". (The DTC in the TCM will be erased.) Then touch "BACK" twice.
 5. Touch "ENGINE".
 6. Touch "SELF DIAGNOSIS".
 7. Touch "ERASE". (The DTC in the ECM will be erased.)

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX


ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

OBD-II Diagnostic Trouble Code (DTC) (Cont'd)


How to erase DTC (With CONSULT-II)

1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 10 seconds and then turn it "ON" (engine stopped) again.

DIAGNOSIS SYSTEM SELECTION
A/T
ENGINE

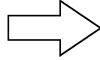

DIAGNOSIS MODE SELECTION
WORK SUPPORT
SELF DIAGNOSIS
DATA MONITOR
DTC WORK SUPPORT
TCM PART NUMBER

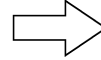


SELF DIAG RESULTS	
DTC RESULTS	
T/C CLUTCH SCL/V	

2. Turn CONSULT-II "ON", and touch "A/T".

3. Turn "SELF DIAGNOSIS".

4. Touch "ERASE". (The DTC in the TCM will be erased.)

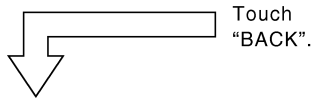

DIAGNOSIS SYSTEM SELECTION
A/T
ENGINE

5. Touch "ENGINE".

SELECT DIAG MODE
WORK SUPPORT
SELF-DIAG RESULTS
DATA MONITOR
DATA MONITOR (SPEC)
ACTIVE TEST
DTC & SRT CONFIRMATION

6. Touch "SELF DIAGNOSIS".

SELF DIAG RESULTS	
DTC RESULTS	TIME
PNP SW/CIRC [P0705]	0

7. Touch "ERASE". (The DTC in the ECM will be erased.)

SAT286K

Ⓢ HOW TO ERASE DTC (WITH GST)


1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 5 seconds and then turn it "ON" (engine stopped) again. NIAT0021S04
2. Perform "OBD-II Self-diagnostic Procedure (No Tools)". Refer to AT-48. (The engine warm-up step can be skipped when performing the diagnosis only to erase the DTC.)
3. Select Mode 4 with Generic Scan Tool (GST). For details, refer to **EC-121** [QG18DE (Except Calif. CA Model)], **EC-792** [QG18DE (Calif. CA Model)], **EC-1455** (SR20DE), "Generic Scan Tool (GST)".

Ⓢ HOW TO ERASE DTC (NO TOOLS)

1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 5 seconds and then turn it "ON" (engine stopped) again. NIAT0021S05
2. Perform "TCM Self-diagnostic Procedure (No Tools)". Refer to AT-49. (The engine warm-up step can be skipped when performing the diagnosis only to erase the DTC.)

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Malfunction Indicator Lamp (MIL)

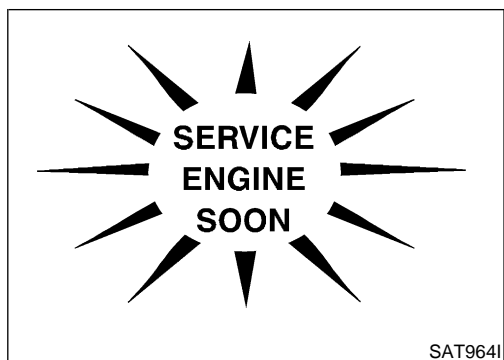

Malfunction Indicator Lamp (MIL)

^{=NIAT0022}

1. The malfunction indicator lamp will light up when the ignition switch is turned ON without the engine running. This is for checking the lamp.
 - If the malfunction indicator lamp does not light up, refer to **EL-103**, "WARNING LAMPS". (Or see MIL & CONSULT-II in EC section. Refer to **EC-100** [QG18DE (Except Calif. CA Model)], **EC-771** [QG18DE (Calif. CA Model)], **EC-1435** (SR20DE), "Malfunction Indicator Lamp (MIL)", and **EC-107** [QG18DE (Except Calif. CA Model)], **EC-778** [QG18DE (Calif. CA Model)], **EC-1442** (SR20DE), "CONSULT-II".)
2. When the engine is started, the malfunction indicator lamp should go off.

If the lamp remains on, the on board diagnostic system has detected an emission-related (OBD-II) malfunction. For detail, refer to **EC-85** [QG18DE (Except Calif. CA Model)], **EC-757** [QG18DE (Calif. CA Model)], **EC-1421** (SR20DE), "ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION".

GI

MA

EM

LC

EC

FE

CL

MT

CONSULT-II

^{NIAT0023}

After performing "SELF-DIAGNOSTIC PROCEDURE (WITH CONSULT-II)" (AT-40), place check marks for results on the "DIAGNOSTIC WORKSHEET", AT-58. Reference pages are provided following the items.

NOTICE:

- 1) The CONSULT-II electrically displays shift timing and lock-up timing (that is, operation timing of each solenoid). Check for time difference between actual shift timing and the CONSULT-II display. If the difference is noticeable, mechanical parts (except solenoids, sensors, etc.) may be malfunctioning. Check mechanical parts using applicable diagnostic procedures.
- 2) Shift schedule (which implies gear position) displayed on CONSULT-II and that indicated in Service Manual may differ slightly. This occurs because of the following reasons:
 - Actual shift schedule has more or less tolerance or allowance,
 - Shift schedule indicated in Service Manual refers to the point where shifts start, and
 - Gear position displayed on CONSULT-II indicates the point where shifts are completed.
- 3) Shift solenoid valve "A" or "B" is displayed on CONSULT-II at the start of shifting. Gear position is displayed upon completion of shifting (which is computed by TCM).
- 4) Additional CONSULT-II information can be found in the Operation Manual supplied with the CONSULT-II unit.

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

CONSULT-II (Cont'd)

SELECT SYSTEM
A/T
ENGINE

SAT014K



REAL-TIME DIAG
ENG SPEED SIG

SAT987J

④ SELF-DIAGNOSTIC PROCEDURE (WITH CONSULT-II) NIAT0023S01



1. Turn on CONSULT-II and touch "ENGINE" for OBD-II detected items or touch "A/T" for TCM self-diagnosis.
If A/T is not displayed, check TCM power supply and ground circuit. Refer to AT-103. If result is NG, refer to **EL-9**, "POWER SUPPLY ROUTING".
2. Touch "SELF DIAG RESULTS".
Display shows malfunction experienced since the last erasing operation.
CONSULT-II performs "REAL TIME DIAG".
Also, any malfunction detected while in this mode will be displayed at real time.

SELF-DIAGNOSTIC RESULT TEST MODE NIAT0023S02

Detected items (Screen terms for CONSULT-II, "SELF DIAGNOSIS" test mode)		Malfunction is detected when ...	TCM self-diagnosis	OBD-II (DTC)
"A/T"	"ENGINE"		 Available by O/D OFF indicator lamp or "A/T" on CONSULT-II	 Available by malfunction indicator lamp*2, "ENGINE" on CONSULT-II or GST
PNP switch circuit	—	● TCM does not receive the correct voltage signal (based on the gear position) from the switch.	—	P0705
—	PNP SW/CIRC			
Revolution sensor	—	● TCM does not receive the proper voltage signal from the sensor.	X	P0720
VHCL SPEED SEN-A/T	VEH SPD SEN/CIR AT			
Vehicle speed sensor (Meter)	—	● TCM does not receive the proper voltage signal from the sensor.	X	—
VHCL SPEED SEN-MTR	—			
A/T 1st gear function	—	● A/T cannot be shifted to the 1st gear position even if electrical circuit is good.	—	P0731*1
—	A/T 1ST GR FNCTN			
A/T 2nd gear function	—	● A/T cannot be shifted to the 2nd gear position even if electrical circuit is good.	—	P0732*1
—	A/T 2ND GR FNCTN			
A/T 3rd gear function	—	● A/T cannot be shifted to the 3rd gear position even if electrical circuit is good.	—	P0733*1
—	A/T 3RD GR FNCTN			



ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

CONSULT-II (Cont'd)

Detected items (Screen terms for CONSULT-II, "SELF DIAGNOSIS" test mode)		Malfunction is detected when ...	TCM self-diagnosis	OBD-II (DTC)	
"A/T"	"ENGINE"		 Available by O/D OFF indicator lamp or "A/T" on CONSULT-II	 Available by malfunction indicator lamp*2, "ENGINE" on CON- SULT-II or GST	
A/T 4th gear function		● A/T cannot be shifted to the 4th gear position even if electrical circuit is good.	—	P0734*1	GI
—	A/T 4TH GR FNCTN				MA
A/T TCC S/V function (lock-up)		● A/T cannot perform lock-up even if electrical circuit is good.	—	P0744*1	EM
—	A/T TCC S/V FNCTN				LC
Shift solenoid valve A		● TCM detects an improper voltage drop when it tries to operate the solenoid valve.	X	P0750	EC
SHIFT SOLENOID/V A	SFT SOL A/CIRC				FE
Shift solenoid valve B		● TCM detects an improper voltage drop when it tries to operate the solenoid valve.	X	P0755	CL
SHIFT SOLENOID/V B	SFT SOL B/CIRC				MT
Overrun clutch solenoid valve		● TCM detects an improper voltage drop when it tries to operate the solenoid valve.	X	P1760	AT
OVERRUN CLUTCH S/V	O/R CLUCH SOL/ CIRC				AX
T/C clutch solenoid valve		● TCM detects an improper voltage drop when it tries to operate the solenoid valve.	X	P0740	SU
T/C CLUTCH SOL/V	TCC SOLENOID/ CIRC				BR
Line pressure solenoid valve		● TCM detects an improper voltage drop when it tries to operate the solenoid valve.	X	P0745	ST
LINE PRESSURE S/V	L/PRESS SOL/ CIRC				RS
Throttle position sensor, Throttle position switch		● TCM receives an excessively low or high voltage from the sensor.	X	P1705	BT
THROTTLE POSI SEN	TP SEN/CIRC A/T				HA
Engine speed signal		● TCM does not receive the proper voltage signal from the ECM.	X	P0725	SC
ENGINE SPEED SIG					EL
A/T fluid temperature sensor		● TCM receives an excessively low or high voltage from the sensor.	X	P0710	IDX
BATT/FLUID TEMP SEN	ATF TEMP SEN/ CIRC				
TCM (RAM)		● TCM memory (RAM) is malfunctioning.	—	—	
CONTROL UNIT (RAM)	—				
TCM (ROM)		● TCM memory (ROM) is malfunctioning.	—	—	
CONTROL UNIT (ROM)	—				

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

CONSULT-II (Cont'd)

Detected items (Screen terms for CONSULT-II, "SELF DIAGNOSIS" test mode)		Malfunction is detected when ...	TCM self-diagnosis	OBD-II (DTC)
			 Available by O/D OFF indicator lamp or "A/T" on CONSULT-II	 Available by malfunction indicator lamp*2, "ENGINE" on CONSULT-II or GST
"A/T"	"ENGINE"			
TCM (EEP ROM)		<ul style="list-style-type: none"> TCM memory (EEP ROM) is malfunctioning. 	—	—
CONT UNIT (EEP ROM)				
Initial start		<ul style="list-style-type: none"> This is not a malfunction message (Whenever shutting off a power supply to the TCM, this message appears on the screen.) 	X	—
INITIAL START				
No failure (NO SELF DIAGNOSTIC FAILURE INDICATED FURTHER TESTING MAY BE REQUIRED**)		<ul style="list-style-type: none"> No failure has been detected. 	X	X

X: Applicable

—: Not applicable

*1: These malfunctions cannot be displayed by MIL  if another malfunction is assigned to MIL.

*2: Refer to **EC-100** [QG18DE (Except Calif. CA Model)], **EC-771** [QG18DE (Calif. CA Model)], **EC-1435** (SR20DE), "Malfunction Indicator Lamp (MIL)".

DATA MONITOR MODE (A/T)

NIAT0023S03

Item	Display	Monitor item		Description	Remarks
		TCM input signals	Main signals		
Vehicle speed sensor 1 (A/T) (Revolution sensor)	VHCL/S SE-A/T [km/h] or [mph]	X	—	<ul style="list-style-type: none"> Vehicle speed computed from signal of revolution sensor is displayed. 	When racing engine in "N" or "P" position with vehicle stationary, CONSULT-II data may not indicate 0 km/h (0 mph).
Vehicle speed sensor 2 (Meter)	VHCL/S SE-MTR [km/h] or [mph]	X	—	<ul style="list-style-type: none"> Vehicle speed computed from signal of vehicle speed sensor is displayed. 	Vehicle speed display may not be accurate under approx. 10 km/h (6 mph). It may not indicate 0 km/h (0 mph) when vehicle is stationary.
Throttle position sensor	THRTL POS SEN [V]	X	—	<ul style="list-style-type: none"> Throttle position sensor signal voltage is displayed. 	
A/T fluid temperature sensor	FLUID TEMP SE [V]	X	—	<ul style="list-style-type: none"> A/T fluid temperature sensor signal voltage is displayed. Signal voltage lowers as fluid temperature rises. 	
Battery voltage	BATTERY VOLT [V]	X	—	<ul style="list-style-type: none"> Source voltage of TCM is displayed. 	

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

CONSULT-II (Cont'd)

Item	Display	Monitor item		Description	Remarks
		TCM input signals	Main signals		
Engine speed	ENGINE SPEED [rpm]	X	X	<ul style="list-style-type: none"> Engine speed, computed from engine speed signal, is displayed. 	Engine speed display may not be accurate under approx. 800 rpm. It may not indicate 0 rpm even when engine is not running.
Overdrive control switch	OVERDRIVE SW [ON/OFF]	X	—	<ul style="list-style-type: none"> ON/OFF state computed from signal of overdrive control SW is displayed. 	
PN position switch	PN POSI SW [ON/OFF]	X	—	<ul style="list-style-type: none"> ON/OFF state computed from signal of PN position SW is displayed. 	
R position switch	R POSITION SW [ON/OFF]	X	—	<ul style="list-style-type: none"> ON/OFF state computed from signal of R position SW is displayed. 	
D position switch	D POSITION SW [ON/OFF]	X	—	<ul style="list-style-type: none"> ON/OFF state computed from signal of D position SW is displayed. 	
2 position switch	2 POSITION SW [ON/OFF]	X	—	<ul style="list-style-type: none"> ON/OFF status, computed from signal of 2 position SW, is displayed. 	
1 position switch	1 POSITION SW [ON/OFF]	X	—	<ul style="list-style-type: none"> ON/OFF status, computed from signal of 1 position SW, is displayed. 	
ASCD cruise signal	ASCD CRUISE [ON/OFF]	X	—	<ul style="list-style-type: none"> Status of ASCD cruise signal is displayed. ON ... Cruising state OFF ... Normal running state 	<ul style="list-style-type: none"> This is displayed even when no ASCD is mounted.
ASCD OD cut signal	ASCD OD CUT [ON/OFF]	X	—	<ul style="list-style-type: none"> Status of ASCD OD release signal is displayed. ON ... OD released OFF ... OD not released 	<ul style="list-style-type: none"> This is displayed even when no ASCD is mounted.
Kickdown switch	KICKDOWN SW [ON/OFF]	X	—	<ul style="list-style-type: none"> ON/OFF status, computed from signal of kickdown SW, is displayed. 	<ul style="list-style-type: none"> This is displayed even when no kickdown switch is equipped.
Closed throttle position switch	CLOSED THL/SW [ON/OFF]	X	—	<ul style="list-style-type: none"> ON/OFF status, computed from signal of closed throttle position SW, is displayed. 	
Wide open throttle position switch	W/O THRL/P-SW [ON/OFF]	X	—	<ul style="list-style-type: none"> ON/OFF status, computed from signal of wide open throttle position SW, is displayed. 	
Gear position	GEAR	—	X	<ul style="list-style-type: none"> Gear position data used for computation by TCM, is displayed. 	

GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

CONSULT-II (Cont'd)


Item	Display	Monitor item		Description	Remarks
		TCM input signals	Main signals		
Selector lever position	SLCT LVR POSI	—	X	<ul style="list-style-type: none"> Selector lever position data, used for computation by TCM, is displayed. 	<ul style="list-style-type: none"> A specific value used for control is displayed if fail-safe is activated due to error.
Vehicle speed	VEHICLE SPEED [km/h] or [mph]	—	X	<ul style="list-style-type: none"> Vehicle speed data, used for computation by TCM, is displayed. 	
Stop lamp switch	BRAKE SW [ON/OFF]	X	—	<ul style="list-style-type: none"> ON/OFF status are displayed. ON: Brake pedal is depressed. OFF: Brake pedal is released. 	
Throttle position	THROTTLE POSI [°]	—	X	<ul style="list-style-type: none"> Throttle position data, used for computation by TCM, is displayed. 	<ul style="list-style-type: none"> A specific value used for control is displayed if fail-safe is activated due to error.
Line pressure duty	LINE PRES DTY [%]	—	X	<ul style="list-style-type: none"> Control value of line pressure solenoid valve, computed by TCM from each input signal, is displayed. 	
Torque converter clutch solenoid valve duty	TCC S/V DUTY [%]	—	X	<ul style="list-style-type: none"> Control value of torque converter clutch solenoid valve, computed by TCM from each input signal, is displayed. 	
Shift solenoid valve A	SHIFT S/V A [ON/OFF]	—	X	<ul style="list-style-type: none"> Control value of shift solenoid valve A, computed by TCM from each input signal, is displayed. 	Control value of solenoid is displayed even if solenoid circuit is disconnected. The "OFF" signal is displayed if solenoid circuit is shorted.
Shift solenoid valve B	SHIFT S/V B [ON/OFF]	—	X	<ul style="list-style-type: none"> Control value of shift solenoid valve B, computed by TCM from each input signal, is displayed. 	
Overrun clutch solenoid valve	OVERRUN/C S/V [ON/OFF]	—	X	<ul style="list-style-type: none"> Control value of overrun clutch solenoid valve computed by TCM from each input signal is displayed. 	
Self-diagnosis display lamp (O/D OFF indicator lamp)	SELF-D DP LMP [ON/OFF]	—	X	<ul style="list-style-type: none"> Control status of O/D OFF indicator lamp is displayed. 	

X: Applicable

—: Not applicable

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

CONSULT-II (Cont'd)

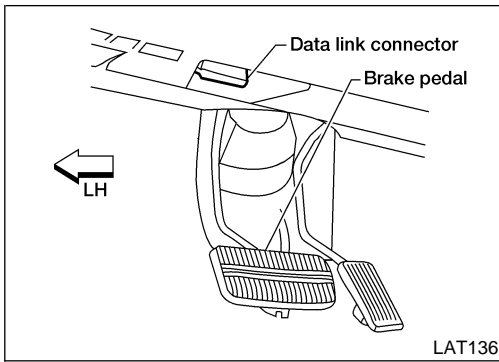

LAT136

DTC WORK SUPPORT MODE WITH CONSULT-II

NIAT0023S04

CONSULT-II Setting Procedure

NIAT0023S0401


1. Turn ignition switch "OFF".
2. Connect CONSULT-II to Data link connector which is located in left side lower dash panel.

GI

MA

EM

LC

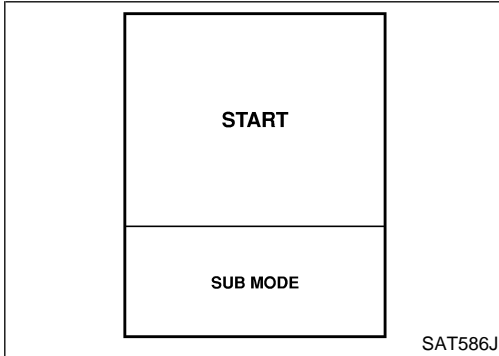


SAT586J

3. Turn ignition switch "ON".
4. Touch "START".

EC

FE

CL

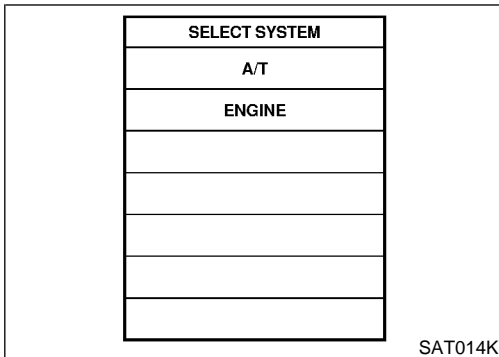

SAT014K


5. Touch "A/T".

AT

AX

SU

BR

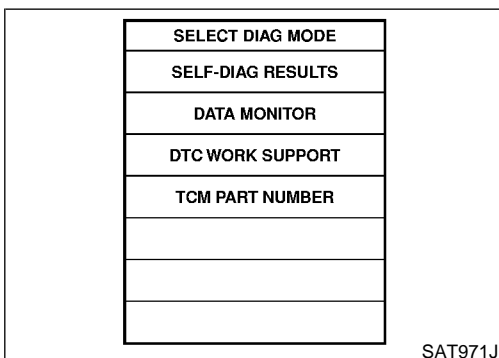

SAT971J


6. Touch "DTC WORK SUPPORT".

ST

RS

BT

HA

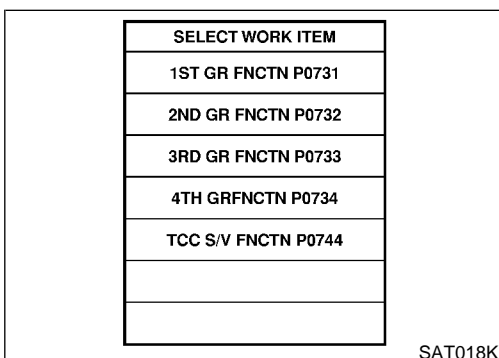

SAT018K

7. Touch select item menu (1ST, 2ND, etc.).


SC

EL


IDX

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

CONSULT-II (Cont'd)

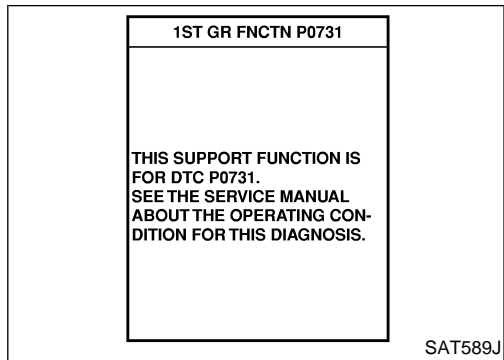


8. Touch "START".


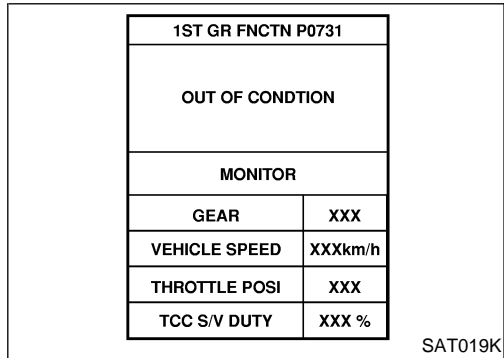


9. Perform driving test according to "DTC CONFIRMATION PROCEDURE" in "TROUBLE DIAGNOSIS FOR DTC".

- When testing conditions are satisfied, CONSULT-II screen changes from "OUT OF CONDITION" to "TESTING".

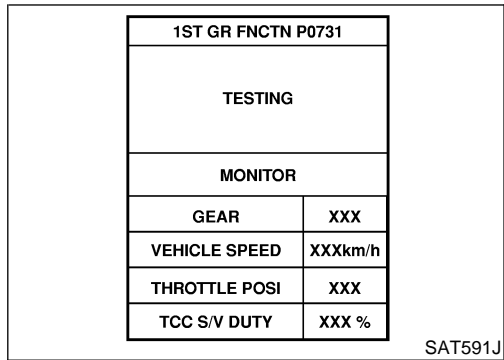


10. Stop vehicle. If "NG" appears on the screen, malfunction may exist. Go to "DIAGNOSTIC PROCEDURE".

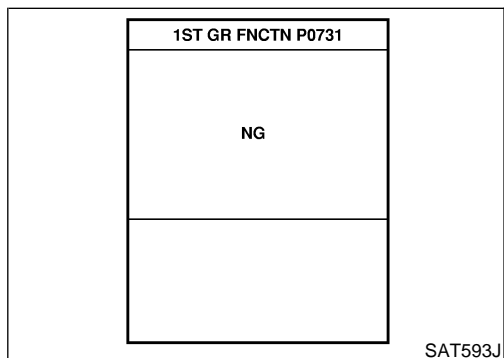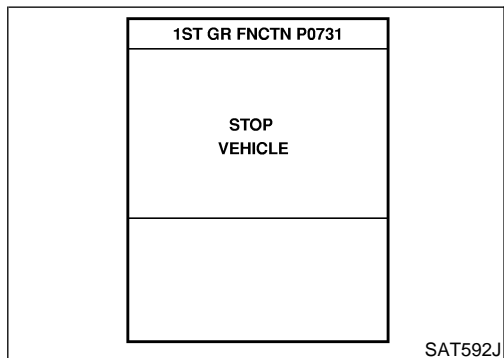

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

CONSULT-II (Cont'd)

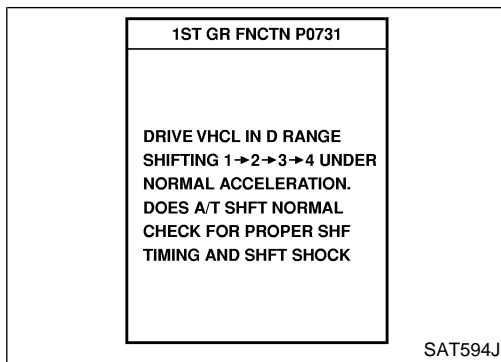


11. Perform test drive to check gear shift feeling in accordance with instructions displayed.

GI

MA

EM

LC

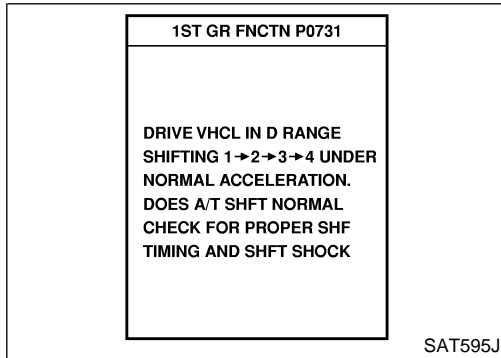


12. Touch "YES" or "NO".

EC

FE

CL

MT

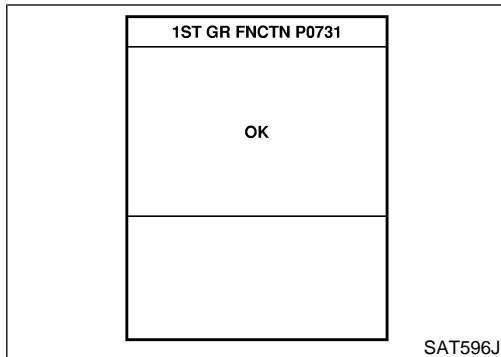


13. CONSULT-II procedure ended. If "NG" appears on the screen, a malfunction may exist. Go to "DIAGNOSTIC PROCEDURE".

AT

AX

SU

BR

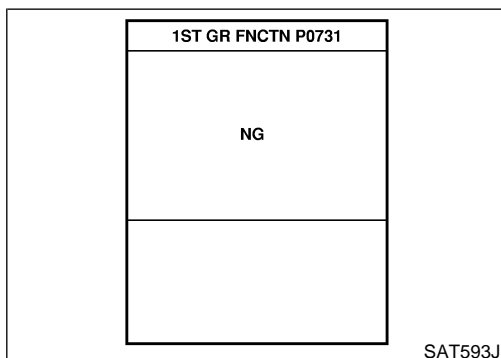

ST

RS

BT

HA

SC

DTC WORK SUPPORT MODE

NIAT0023S05

DTC work support item	Description	Check items (Possible cause)
1ST GR FNCTN P0731	Following items for "A/T 1st gear function (P0731)" can be confirmed. <ul style="list-style-type: none"> Self-diagnosis status (whether the diagnosis is being conducted or not) Self-diagnosis result (OK or NG) 	<ul style="list-style-type: none"> Shift solenoid valve A Shift solenoid valve B Each clutch Hydraulic control circuit

EL

IDX

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

CONSULT-II (Cont'd)

DTC work support item	Description	Check items (Possible cause)
2ND GR FNCTN P0732	Following items for "A/T 2nd gear function (P0732)" can be confirmed. <ul style="list-style-type: none"> ● Self-diagnosis status (whether the diagnosis is being conducted or not) ● Self-diagnosis result (OK or NG) 	<ul style="list-style-type: none"> ● Shift solenoid valve B ● Each clutch ● Hydraulic control circuit
3RD GR FNCTN P0733	Following items for "A/T 3rd gear function (P0733)" can be confirmed. <ul style="list-style-type: none"> ● Self-diagnosis status (whether the diagnosis is being conducted or not) ● Self-diagnosis result (OK or NG) 	<ul style="list-style-type: none"> ● Shift solenoid valve A ● Each clutch ● Hydraulic control circuit
4TH GR FNCTN P0734	Following items for "A/T 4th gear function (P0734)" can be confirmed. <ul style="list-style-type: none"> ● Self-diagnosis status (whether the diagnosis is being conducted or not) ● Self-diagnosis result (OK or NG) 	<ul style="list-style-type: none"> ● Shift solenoid valve A ● Shift solenoid valve B ● Overrun clutch solenoid valve ● Line pressure solenoid valve ● Each clutch ● Hydraulic control circuit
TCC S/V FNCTN P0744	Following items for "A/T TCC S/V function (lock-up) (P0744)" can be confirmed. <ul style="list-style-type: none"> ● Self-diagnosis status (whether the diagnosis is being conducted or not) ● Self-diagnosis result (OK or NG) 	<ul style="list-style-type: none"> ● Torque converter clutch solenoid valve ● Each clutch ● Hydraulic control circuit

DIAGNOSTIC PROCEDURE WITHOUT CONSULT-II



OBD-II Self-diagnostic Procedure (With GST)

NIAT0023S06



Refer to **EC-121** [QG18DE (Except Calif. CA Model)], **EC-792** [QG18DE (Calif. CA Model)], **EC-1455** (SR20DE), "Generic Scan Tool (GST)".



OBD-II Self-diagnostic Procedure (No Tools)

NIAT0023S0602

Refer to **EC-100** [QG18DE (Except Calif. CA Model)], **EC-771** [QG18DE (Calif. CA Model)], **EC-1435** (SR20DE), "Malfunction Indicator Lamp (MIL)".

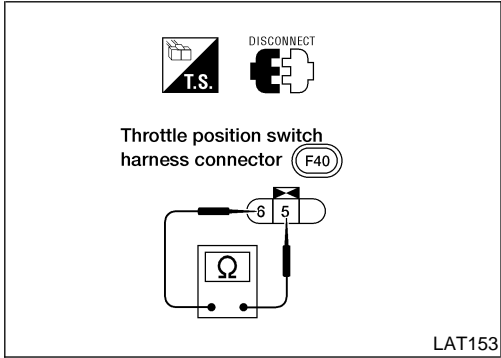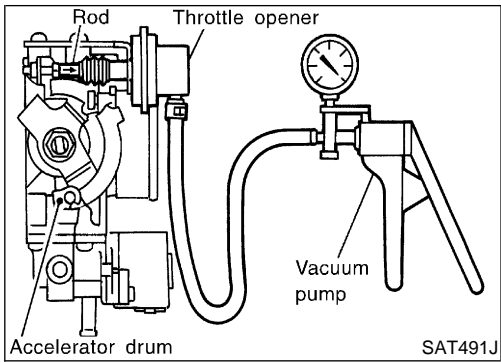

TCM Self-diagnostic Procedure (No Tools)

NIAT0023S0603

Preparation

1. Turn ignition switch to "OFF" position.
2. Connect the handy type vacuum pump to the throttle opener and apply vacuum -25.3 kPa (-190 mmHg , -7.48 inHg).
3. Disconnect the throttle position switch harness connector.
4. Turn ignition switch to "ON" position.
5. Check continuity of the closed throttle position switch.

Continuity should exist.

(If continuity does not exist, check throttle opener and closed throttle position switch. Then increase vacuum until closed throttle position switch shows continuity.)

6. Go to test group 1, "CHECK O/D OFF INDICATOR LAMP", AT-50.


GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

CONSULT-II (Cont'd)

1 CHECK O/D OFF INDICATOR LAMP


1. Move A/T selector lever in "P" position.
Start the engine.
Warm engine to normal operating temperature.
2. Turn ignition switch to "OFF" position.
3. Wait 5 seconds.

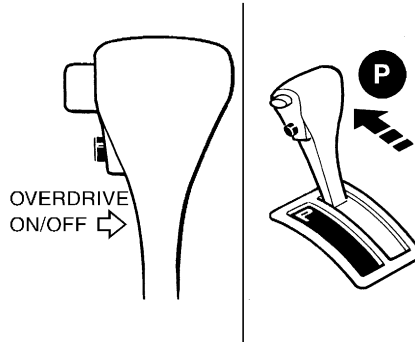


SAT967I

4. Turn ignition switch to "ON" position.
(Do not start engine.)
5. Does O/D OFF indicator lamp come on for about 2 seconds?

Without tachometer

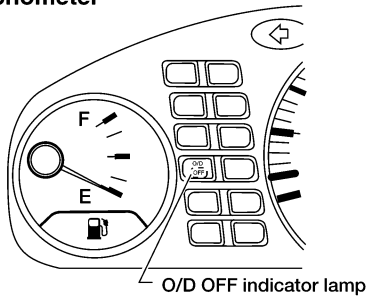

With tachometer

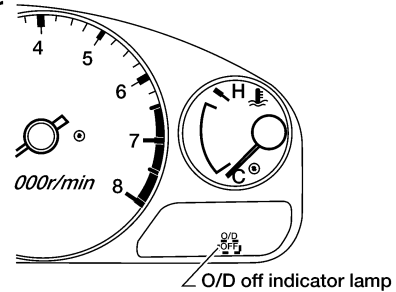

LAT154

Yes or No


Yes	▶	GO TO 2.
No	▶	Go to "1. O/D OFF Indicator Lamp Does Not Come On", AT-216.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

CONSULT-II (Cont'd)


2 JUDGEMENT PROCEDURE STEP 1

1. Turn ignition switch to "OFF" position.
2. Turn ignition switch to "ACC" position.
3. Move A/T selector lever from "P" to "D" position.
4. Turn ignition switch to "ON" position.
(Do not start engine.)
5. Depress and hold overdrive control switch in "OFF" position (the O/D OFF indicator lamp will be "ON") until directed to release the switch.
If O/D OFF indicator lamp does not come on, go to "21. TCM Self-diagnosis Does Not Activate (PNP, Overdrive Control and Throttle Position Switches Circuit Checks)" on AT-254.
6. Turn ignition switch to "OFF" position.

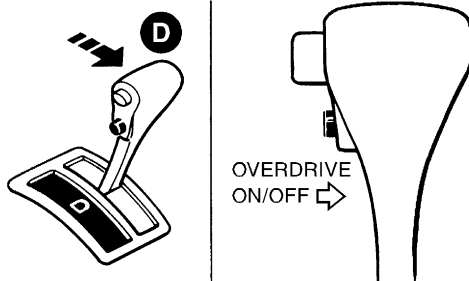

SAT968I

7. Turn ignition switch to "ON" position.
(Do not start engine.)
8. Release the overdrive control switch (the O/D OFF indicator lamp will be "OFF").
9. Wait 2 seconds.
10. Move A/T selector lever to "2" position.
11. Depress and release the overdrive control switch (the O/D OFF indicator lamp will be "ON").
12. Depress and hold the overdrive control switch (the O/D OFF indicator lamp will be "OFF") until directed to release the switch.

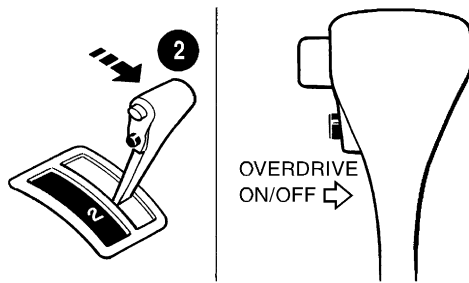

SAT969I



GO TO 3.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL


IDX

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

CONSULT-II (Cont'd)


3 JUDGEMENT PROCEDURE STEP 2

1. Move A/T selector lever to "1" position.
2. Release the overdrive control switch.
3. Depress and release the overdrive control switch (the O/D OFF indicator lamp will be "ON").
4. Depress and release the overdrive control switch (the O/D OFF indicator lamp will be "OFF").
5. Depress and hold the overdrive control switch (the O/D OFF indicator lamp will be "ON") until directed to release the switch.

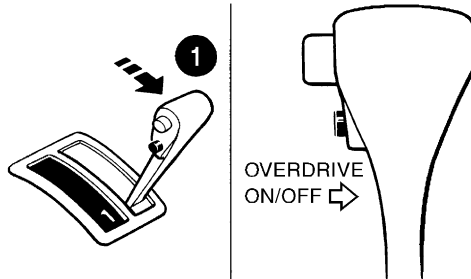

SAT970I

6. Depress accelerator pedal fully and release.

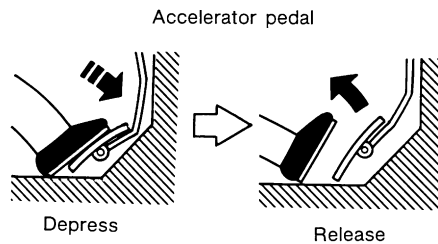

SAT981F


7. Release the overdrive control switch (the O/D OFF indicator lamp will begin to flash "ON" and "OFF").

▶ GO TO 4.


4 CHECK SELF-DIAGNOSIS CODE

Check O/D OFF indicator lamp. Refer to "Judgement of Self-diagnosis Code", AT-53.

Without tachometer

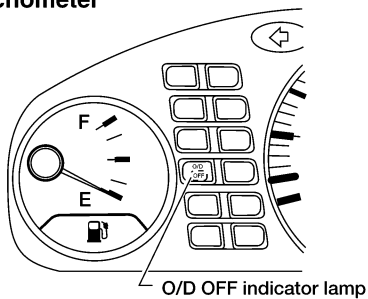

With tachometer

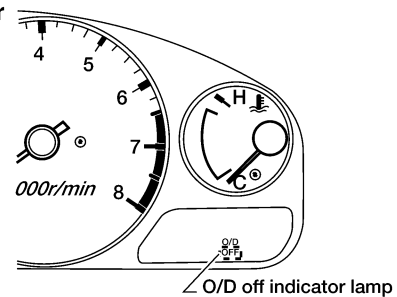

LAT154

▶ DIAGNOSIS END

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

CONSULT-II (Cont'd)


Judgement of Self-diagnosis Code

NIAT0023S0604

O/D OFF indicator lamp:

GI


All judgement flickers are the same.

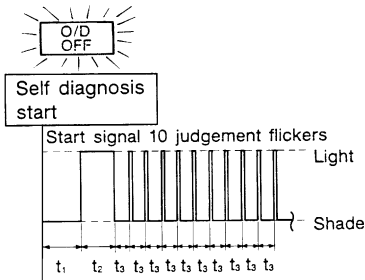

SAT436F

All circuits that can be confirmed by self-diagnosis are OK.

1st judgement flicker is longer than others.

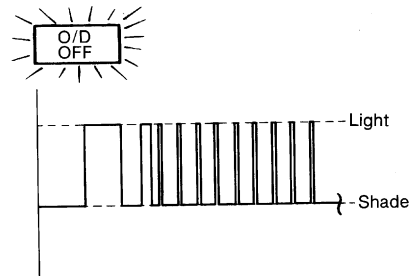

SAT437F

Revolution sensor circuit is short-circuited or disconnected.

⇒ Go to **VEHICLE SPEED SENSOR-A/T (REVOLUTION SENSOR), AT-121.**

MA


EM

LC

EC

FE

2nd judgement flicker is longer than others.

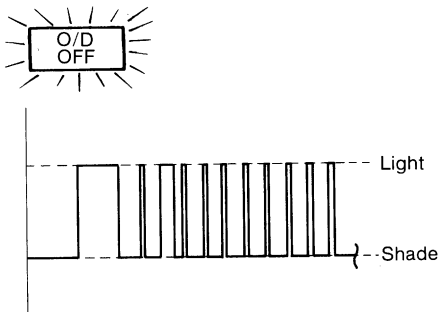


SAT439F

Vehicle speed sensor circuit is short-circuited or disconnected.

⇒ Go to **VEHICLE SPEED SENSOR-MTR, AT-205.**

3rd judgement flicker is longer than others.

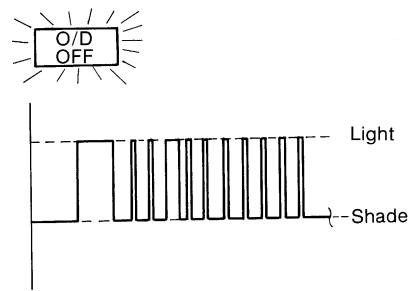

SAT441F

Throttle position sensor circuit is short-circuited or disconnected.

⇒ Go to **THROTTLE POSITION SENSOR, AT-186.**

CL


MT

AT

AX

SU

4th judgement flicker is longer than others.

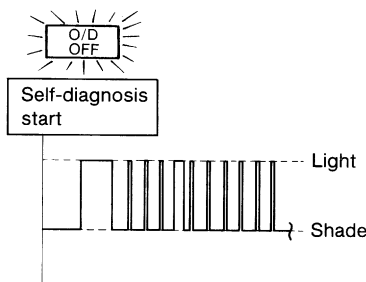


SAT443F

Shift solenoid valve A circuit is short-circuited or disconnected.

⇒ Go to **SHIFT SOLENOID VALVE A, AT-178.**

5th judgement flicker is longer than others.

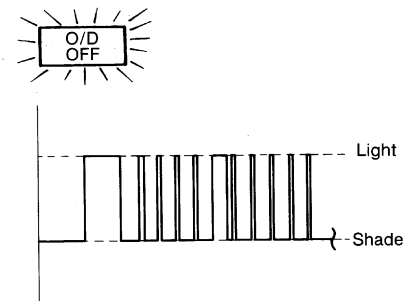

SAT445F

Shift solenoid valve B circuit is short-circuited or disconnected.

⇒ Go to **SHIFT SOLENOID VALVE B, AT-182.**

BR

ST

RS

BT

HA

SC

EL


IDX

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

CONSULT-II (Cont'd)

O/D OFF indicator lamp:

6th judgement flicker is longer than others.

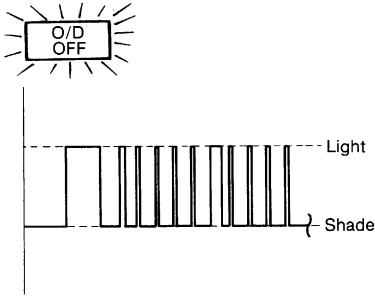


SAT447F

Overrun clutch solenoid valve circuit is short-circuited or disconnected.

⇒ Go to **OVERRUN CLUTCH SOLENOID VALVE, AT-194.**

7th judgement flicker is longer than others.

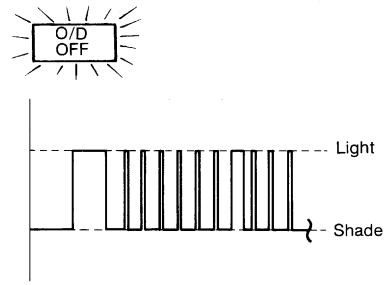


SAT449F

Torque converter clutch solenoid valve circuit is short-circuited or disconnected.

⇒ Go to **TORQUE CONVERTER CLUTCH SOLENOID VALVE, AT-158.**

8th judgement flicker is longer than others.

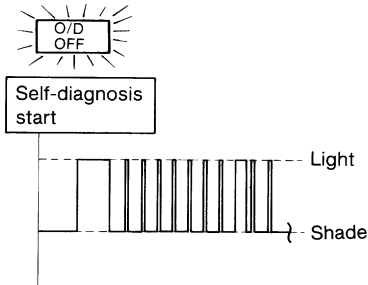


SAT451F

A/T fluid temperature sensor is disconnected or TCM power source circuit is damaged.

⇒ Go to **DTC BATT/FLUID TEMP SEN (A/T FLUID TEMP SENSOR CIRCUIT AND TCM POWER SOURCE), AT-198.**

9th judgement flicker is longer than others.

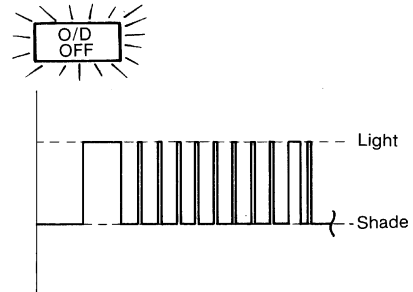


SAT453F

Engine speed signal circuit is short-circuited or disconnected.

⇒ Go to **ENGINE SPEED SIGNAL, AT-126.**

10th judgement flicker is longer than others.

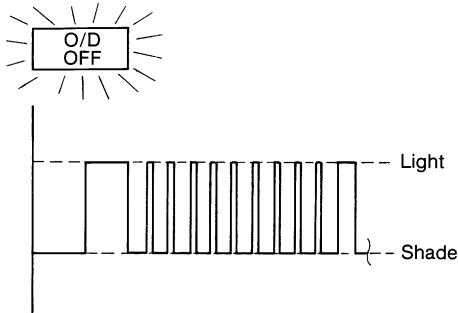


SAT455F

Line pressure solenoid valve circuit is short-circuited or disconnected.

⇒ Go to **LINE PRESSURE SOLENOID VALVE, AT-173.**

Flickers as shown below.

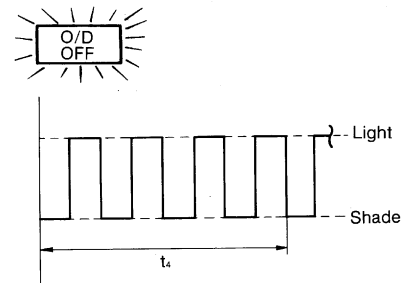

SAT457F

Battery power is low.

Battery has been disconnected for a long time.

Battery is connected conversely.


(When reconnecting TCM connectors. — This is not a problem.)

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

CONSULT-II (Cont'd)

O/D OFF indicator lamp:

Lamp comes on.

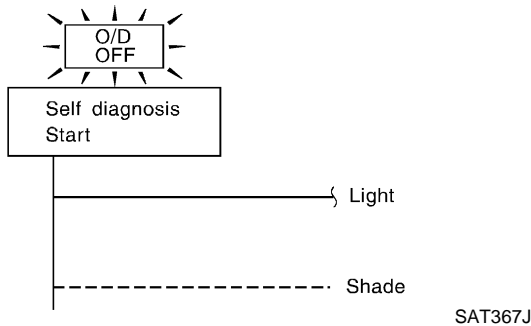

PNP switch, overdrive control switch or throttle position switch circuit is disconnected or TCM is damaged.

⇒ **Go to 21. TCM Self-diagnosis Does Not Activate (PNP, Overdrive Control and Throttle Position Switches Circuit Checks), AT-254.**

$t_1 = 2.5$ seconds $t_2 = 2.0$ seconds $t_3 = 1.0$ second $t_4 = 1.0$ second

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA




SC

EL

IDX

TROUBLE DIAGNOSIS — INTRODUCTION

Introduction

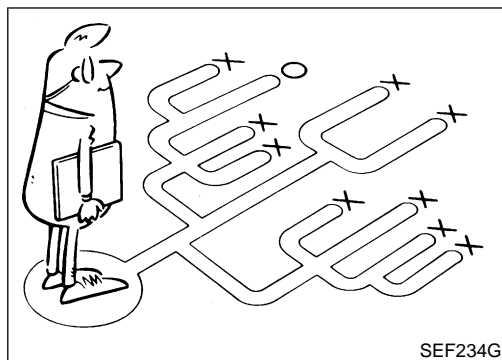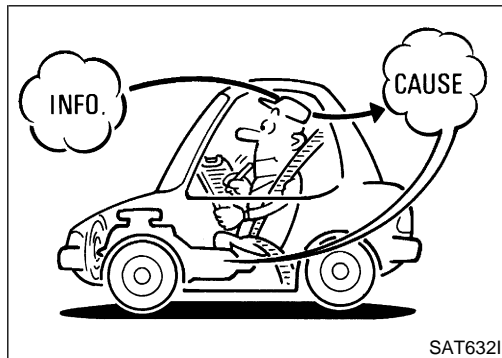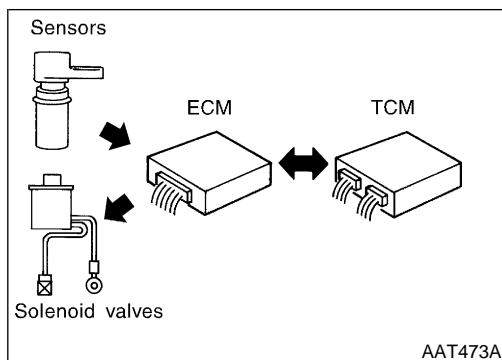

Introduction

NIAT0024

The TCM receives a signal from the vehicle speed sensor, throttle position sensor or PNP switch and provides shift control or lock-up control via A/T solenoid valves.

The TCM also communicates with the ECM by means of a signal sent from sensing elements used with the OBD-related parts of the A/T system for malfunction-diagnostic purposes. The TCM is capable of diagnosing malfunctioning parts while the ECM can store malfunctions in its memory.

Input and output signals must always be correct and stable in the operation of the A/T system. The A/T system must be in good operating condition and be free of valve seizure, solenoid valve malfunction, etc.

It is much more difficult to diagnose a problem that occurs intermittently rather than continuously. Most intermittent problems are caused by poor electric connections or improper wiring. In this case, careful checking of suspected circuits may help prevent the replacement of good parts.

A visual check only, may not find the cause of the problems. A road test with CONSULT-II (or GST) or a circuit tester connected should be performed. Follow the "Work Flow". Refer to AT-60.

Before undertaking actual checks, take a few minutes to talk with a customer who approaches with a driveability complaint. The customer can supply good information about such problems, especially intermittent ones. Find out what symptoms are present and under what conditions they occur. A "Diagnostic Worksheet" like the example (AT-58) should be used.

Start your diagnosis by looking for "conventional" problems first. This will help troubleshoot driveability problems on an electronically controlled engine vehicle.

Also check related Service bulletins for information.

TROUBLE DIAGNOSIS — INTRODUCTION

Introduction (Cont'd)

Diagnostic Worksheet

—NIAT0024S0102

1.	<input type="checkbox"/> Read the "FAIL-SAFE" and listen to customer complaints.	AT-8		
2.	<input type="checkbox"/> CHECK A/T FLUID <input type="checkbox"/> Leakage (Follow specified procedure) <input type="checkbox"/> Fluid condition <input type="checkbox"/> Fluid level	AT-62		
3.	<input type="checkbox"/> Perform STALL TEST and LINE PRESSURE TEST. <input type="checkbox"/> Stall test — Mark possible damaged components/others. <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%; vertical-align: top;"> <input type="checkbox"/> Torque converter one-way clutch <input type="checkbox"/> Reverse clutch <input type="checkbox"/> Forward clutch <input type="checkbox"/> Overrun clutch <input type="checkbox"/> Forward one-way clutch </td> <td style="width: 50%; vertical-align: top;"> <input type="checkbox"/> Low & reverse brake <input type="checkbox"/> Low one-way clutch <input type="checkbox"/> Engine <input type="checkbox"/> Line pressure is low <input type="checkbox"/> Clutches and brakes except high clutch and brake band are OK </td> </tr> </table> <input type="checkbox"/> Line Pressure test — Suspected parts:	<input type="checkbox"/> Torque converter one-way clutch <input type="checkbox"/> Reverse clutch <input type="checkbox"/> Forward clutch <input type="checkbox"/> Overrun clutch <input type="checkbox"/> Forward one-way clutch	<input type="checkbox"/> Low & reverse brake <input type="checkbox"/> Low one-way clutch <input type="checkbox"/> Engine <input type="checkbox"/> Line pressure is low <input type="checkbox"/> Clutches and brakes except high clutch and brake band are OK	AT-62, 66
<input type="checkbox"/> Torque converter one-way clutch <input type="checkbox"/> Reverse clutch <input type="checkbox"/> Forward clutch <input type="checkbox"/> Overrun clutch <input type="checkbox"/> Forward one-way clutch	<input type="checkbox"/> Low & reverse brake <input type="checkbox"/> Low one-way clutch <input type="checkbox"/> Engine <input type="checkbox"/> Line pressure is low <input type="checkbox"/> Clutches and brakes except high clutch and brake band are OK			
4.	<input type="checkbox"/> Perform all ROAD TEST and mark required procedures.	AT-67		
4-1.	Check before engine is started. <input type="checkbox"/> SELF-DIAGNOSTIC PROCEDURE — Mark detected items. <input type="checkbox"/> PNP switch, AT-110. <input type="checkbox"/> A/T fluid temperature sensor, AT-115. <input type="checkbox"/> Vehicle speed sensor-A/T (Revolution sensor), AT-121. <input type="checkbox"/> Engine speed signal, AT-126. <input type="checkbox"/> Torque converter clutch solenoid valve, AT-158. <input type="checkbox"/> Line pressure solenoid valve, AT-173. <input type="checkbox"/> Shift solenoid valve A, AT-178. <input type="checkbox"/> Shift solenoid valve B, AT-182. <input type="checkbox"/> Throttle position sensor, AT-186. <input type="checkbox"/> Overrun clutch solenoid valve, AT-194. <input type="checkbox"/> PNP, overdrive control and throttle position switches, AT-254. <input type="checkbox"/> A/T fluid temperature sensor and TCM power source, AT-198. <input type="checkbox"/> Vehicle speed sensor-MTR, AT-205. <input type="checkbox"/> Control unit (RAM), control unit (ROM), AT-209. <input type="checkbox"/> Control unit (EEP ROM), AT-211. <input type="checkbox"/> Battery <input type="checkbox"/> Others	AT-68		
4-2.	Check at idle <input type="checkbox"/> 1. O/D OFF Indicator Lamp Does Not Come On, AT-216. <input type="checkbox"/> 2. Engine Cannot Be Started In "P" And "N" Position, AT-219. <input type="checkbox"/> 3. In "P" Position, Vehicle Moves Forward Or Backward When Pushed, AT-220. <input type="checkbox"/> 4. In "N" Position, Vehicle Moves, AT-221. <input type="checkbox"/> 5. Large Shock. "N" → "R" Position, AT-223. <input type="checkbox"/> 6. Vehicle Does Not Creep Backward In "R" Position, AT-225. <input type="checkbox"/> 7. Vehicle Does Not Creep Forward In "D", "2" Or "1" Position, AT-228.	AT-69		

TROUBLE DIAGNOSIS — INTRODUCTION

Introduction (Cont'd)

4. (con t'd)	4-3 (con t'd)	Cruise test	AT-72 AT-76	
		Part-1		GI
		<input type="checkbox"/> 8. Vehicle Cannot Be Started From D ₁ , AT-231. <input type="checkbox"/> 9. A/T Does Not Shift: D ₁ → D ₂ Or Does Not Kickdown: D ₄ → D ₂ , AT-234. <input type="checkbox"/> 10. A/T Does Not Shift: D ₂ →D ₃ , AT-237. <input type="checkbox"/> 11. A/T Does Not Shift: D ₃ →D ₄ , AT-240. <input type="checkbox"/> 12. A/T Does Not Perform Lock-up, AT-243. <input type="checkbox"/> 13. A/T Does Not Hold Lock-up Condition, AT-245. <input type="checkbox"/> 14. Lock-up Is Not Released, AT-247. <input type="checkbox"/> 15. Engine Speed Does Not Return To Idle (Light Braking D ₄ → D ₃), AT-248.		MA EM LC
Part-2	AT-80			
		<input type="checkbox"/> 16. Vehicle Does Not Start From D ₁ , AT-250. <input type="checkbox"/> 9. A/T Does Not Shift: D ₁ → D ₂ Or Does Not Kickdown: D ₄ → D ₂ , AT-234. <input type="checkbox"/> 10. A/T Does Not Shift: D ₂ →D ₃ , AT-237. <input type="checkbox"/> 11. A/T Does Not Shift: D ₃ →D ₄ , AT-240.		EC FE
4. (con t'd)	4-3 (con t'd)	Part-3	AT-82	
		<input type="checkbox"/> 17. A/T Does Not Shift: D ₄ →D ₃ When Overdrive Control Switch "ON" → "OFF", AT-251. <input type="checkbox"/> 15. Engine Speed Does Not Return To Idle (Engine Brake In D ₃), AT-248. <input type="checkbox"/> 18. A/T Does Not Shift: D ₃ →2 ₂ , When Selector Lever "D" → "2" Position, AT-252. <input type="checkbox"/> 15. Engine Speed Does Not Return To Idle (Light Braking D ₄ → D ₂), AT-248. <input type="checkbox"/> 19. A/T Does Not Shift: 2 ₂ →1 ₁ , When Selector Lever "2" → "1" Position, AT-253. <input type="checkbox"/> 20. Vehicle Does Not Decelerate By Engine Brake, AT-254. <input type="checkbox"/> SELF-DIAGNOSTIC PROCEDURE — Mark detected items.		CL MT
		<input type="checkbox"/> PNP switch, AT-110. <input type="checkbox"/> A/T fluid temperature sensor, AT-115. <input type="checkbox"/> Vehicle speed sensor-A/T (Revolution sensor), AT-121. <input type="checkbox"/> Engine speed signal, AT-126. <input type="checkbox"/> Torque converter clutch solenoid valve, AT-158. <input type="checkbox"/> Line pressure solenoid valve, AT-173. <input type="checkbox"/> Shift solenoid valve A, AT-178. <input type="checkbox"/> Shift solenoid valve B, AT-182. <input type="checkbox"/> Throttle position sensor, AT-186. <input type="checkbox"/> Overrun clutch solenoid valve, AT-194. <input type="checkbox"/> PNP, overdrive control and throttle position switches, AT-254. <input type="checkbox"/> A/T fluid temperature sensor and TCM power source, AT-198. <input type="checkbox"/> Vehicle speed sensor-MTR, AT-205. <input type="checkbox"/> Control unit (RAM), control unit (ROM), AT-209. <input type="checkbox"/> Control unit (EEP ROM), AT-211. <input type="checkbox"/> Battery <input type="checkbox"/> Others		AT AX SU BR ST RS
5.		<input type="checkbox"/> For self-diagnosis NG items, inspect each component. Repair or replace the damaged parts.	AT-40	
6.		<input type="checkbox"/> Perform all ROAD TEST and re-mark required procedures.	AT-67	BT
7.		<input type="checkbox"/> Perform DTC CONFIRMATION PROCEDURE for following MIL indicating items and check out NG items. Refer to EC-86 [QG18DE (Except Calif. CA Model)], EC-758 [QG18DE (Calif. CA Model)], EC-1422 (SR20DE), "Emission-related Diagnostic Information".	EC section	HA
		<input type="checkbox"/> DTC (P0731) A/T 1ST GEAR FUNCTION, AT-130. <input type="checkbox"/> DTC (P0732) A/T 2ND GEAR FUNCTION, AT-137. <input type="checkbox"/> DTC (P0733) A/T 3RD GEAR FUNCTION, AT-143. <input type="checkbox"/> DTC (P0734) A/T 4TH GEAR FUNCTION, AT-149. <input type="checkbox"/> DTC (P0744) A/T TCC S/V FUNCTION (LOCK-UP), AT-162.		SC EL
8.		<input type="checkbox"/> Perform the Diagnostic Procedures for all remaining items marked NG. Repair or replace the damaged parts. Refer to the Symptom Chart when you perform the procedures. (The chart also shows some other possible symptoms and the component inspection orders.)	AT-103 AT-86	IDX
9.		<input type="checkbox"/> Erase DTC from TCM and ECM memories.	AT-37	

TROUBLE DIAGNOSIS — INTRODUCTION

Work Flow

Work Flow

NIAT0025

HOW TO PERFORM TROUBLE DIAGNOSES FOR QUICK AND ACCURATE REPAIR


NIAT0025S01

A good understanding of the malfunction conditions can make troubleshooting faster and more accurate. In general, each customer feels differently about a problem. It is important to fully understand the symptoms or conditions for a customer complaint.

Make good use of the two sheets provided, "Information from Customer" (AT-57) and "Diagnostic Worksheet" (AT-58), to perform the best troubleshooting possible.

WORK FLOW CHART

NIAT0025S02

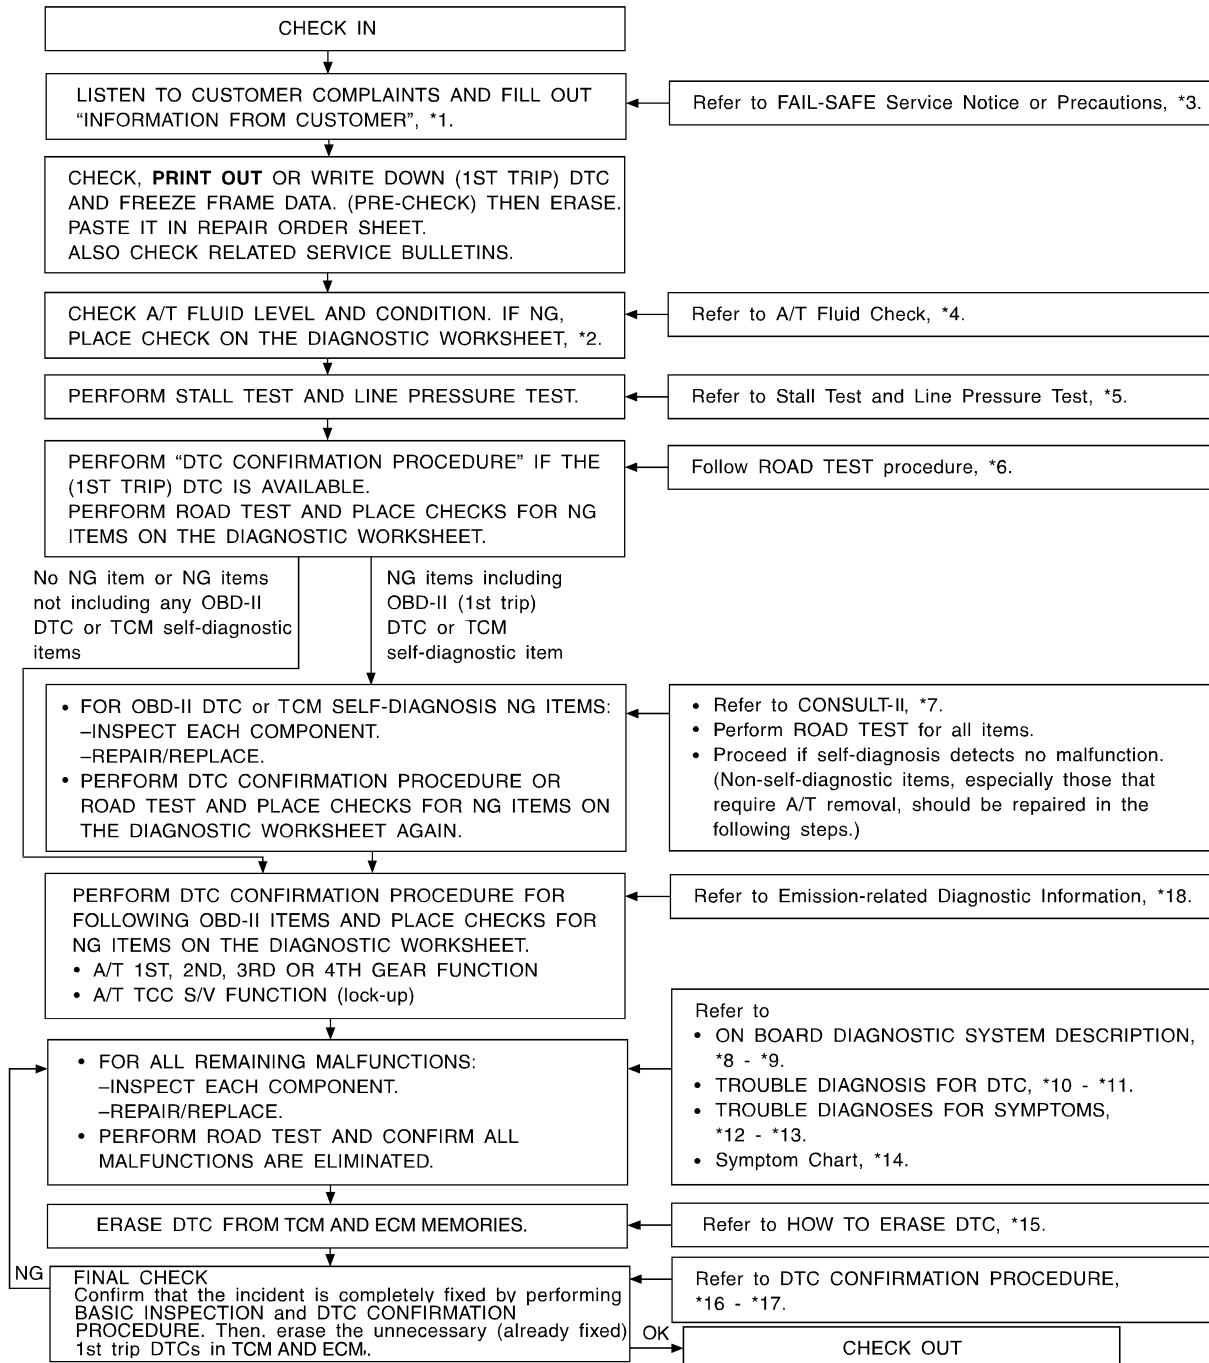

- *1: AT-57
- *2: AT-58
- *3: AT-8
- *4: AT-62
- *5: AT-62, 66

- *6: AT-67
- *7: AT-39
- *8: AT-35
- *9: AT-53
- *10: AT-110

- *11: AT-211
- *12: AT-216
- *13: AT-254
- *14: AT-86
- *15: AT-37

TROUBLE DIAGNOSIS — INTRODUCTION

Work Flow (Cont'd)

*16: AT-110

*17: AT-211

*18: **EC-86** [QG18DE (except. Calif. CA Model)], **EC-758** [QG18DE (Calif. CA Model)], **EC-1422** (SR20DE),

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA




SC

EL

IDX

TROUBLE DIAGNOSIS — BASIC INSPECTION

A/T Fluid Check

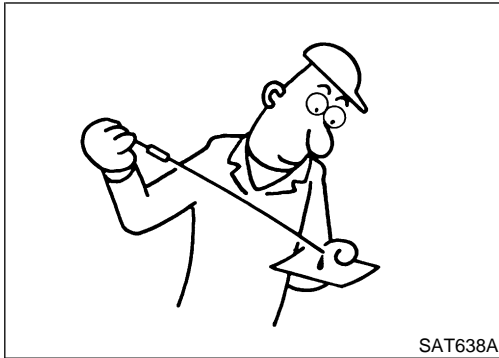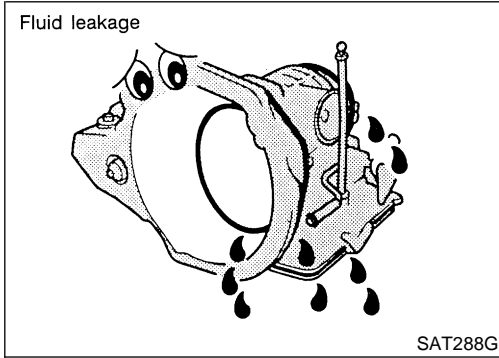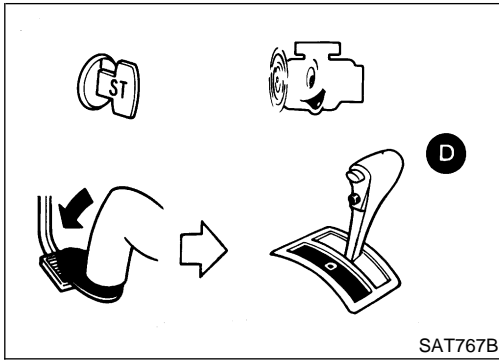

A/T Fluid Check

FLUID LEAKAGE CHECK

NIAT0026

NIAT0026S01

1. Clean area suspected of leaking. — for example, mating surface of converter housing and transmission case.
2. Start engine, apply foot brake, place selector lever in "D" position and wait a few minutes.
3. Stop engine.

4. Check for fresh leakage.

FLUID CONDITION CHECK


NIAT0026S02

Fluid color	Suspected problem
Dark or black with burned odor	Wear of frictional material
Milky pink	Water contamination — Road water entering through filler tube or breather
Varnished fluid, light to dark brown and tacky	Oxidation — Over or under filling, — Overheating

FLUID LEVEL CHECK

Refer to **MA-36**, "Checking A/T Fluid".

NIAT0026S03

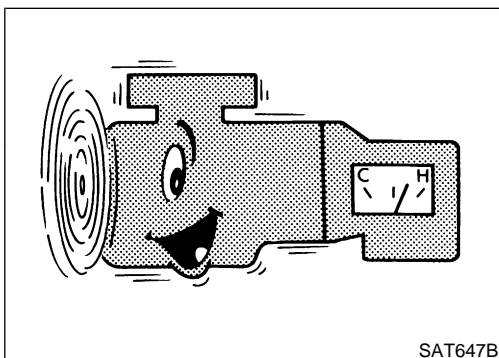

Stall Test

STALL TEST PROCEDURE

NIAT0027

NIAT0027S01




1. Check A/T fluid and engine oil levels. If necessary, add.
2. Drive vehicle for approx. 10 minutes or until fluid and oil reach operating temperature.

ATF operating temperature:

50 - 80°C (122 - 176°F)

TROUBLE DIAGNOSIS — BASIC INSPECTION

Stall Test (Cont'd)

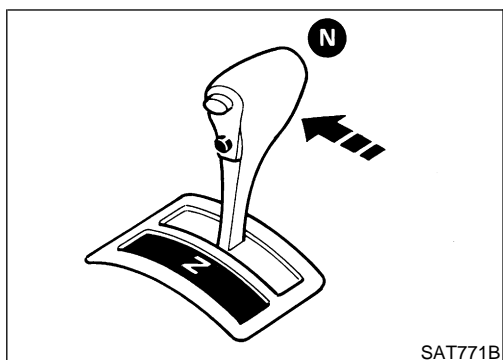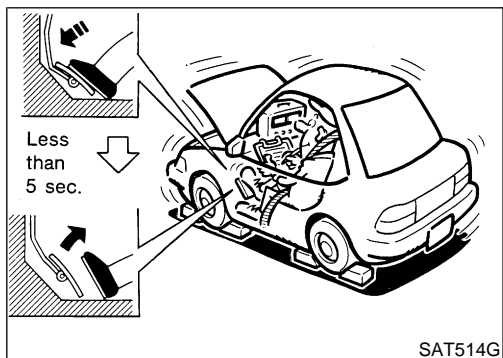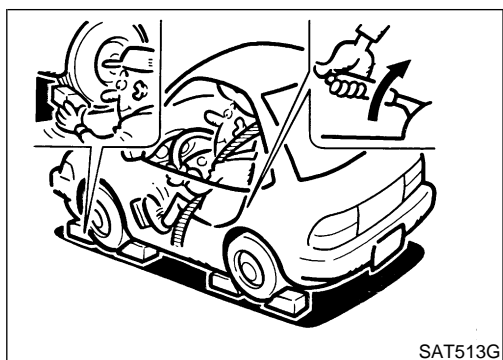

3. Set parking brake and block wheels.
4. Install a tachometer where it can be seen by driver during test.
 - It is good practice to mark the point of specified engine rpm on indicator.

GI

MA

EM

LC

5. Start engine, apply foot brake, and place selector lever in D position.
6. Accelerate to wide open throttle gradually while applying foot brake.
7. Quickly note the engine stall revolution and immediately release throttle.
 - During test, never hold throttle wide open for more than 5 seconds.

EC

FE

CL

Stall revolution:

QG18DE: 2,350 - 2,800 rpm

SR20DE: 2,350 - 2,850 rpm

MT

8. Move selector lever to "N" position.
9. Cool off ATF.
 - Run engine at idle for at least one minute.
10. Repeat steps 5 through 9 with selector lever in "2", "1" and "R" positions.

AT

AX

SU

BR

JUDGEMENT OF STALL TEST

The test result and possible damaged components relating to each result are shown in the illustrations on next page.

NIAT0027S02

In order to pinpoint the possible damaged components, follow the "Work Flow" shown in AT-60.

ST

RS

NOTE:

Stall revolution is too high in "D", "2" or "1" position:

- Slippage occurs in 1st gear but not in 2nd and 3rd gears. Low one-way clutch slippage
- Slippage occurs in the following gears:
 - 1st through 3rd gears in "D" position and engine brake functions with overdrive control switch set to "OFF".
 - 1st and 2nd gears in "2" position and engine brake functions with accelerator pedal released (fully closed throttle). Forward clutch or forward one-way clutch slippage

BT

HA

SC

EL

Stall revolution is too high in R position:

- Engine brake does not function in "1" position. Low & reverse brake slippage
- Engine brake functions in "1" position. Reverse clutch slippage

IDX

Stall revolution within specifications:

- Vehicle does not achieve speed of more than 80 km/h (50

TROUBLE DIAGNOSIS — BASIC INSPECTION

Stall Test (Cont'd)

MPH). One-way clutch seizure in torque converter housing

CAUTION:

Be careful since automatic fluid temperature increases abnormally.

- Slippage occurs in 3rd and 4th gears in “D” position. High clutch slippage
- Slippage occurs in 2nd and 4th gear in “D” position. Brake band slippage
- Engine brake does not function in 2nd and 3rd gears in “D” position, 2nd gear in “2” position, and 1st gear in “1” position with overdrive control switch set to “OFF”.

Stall revolution less than specifications:

- Poor acceleration during starts. One-way clutch seizure in torque converter


TROUBLE DIAGNOSIS — BASIC INSPECTION

Stall Test (Cont'd)

Selector lever position	Judgement		
	H	O	L
D	H	O	L
2	H	O	L
1	H	O </td <td>L</td>	L
R	O	H	L

O : Stall revolution is normal.
 H : Stall revolution is higher than specified.
 L : Stall revolution is lower than specified.

Damaged components

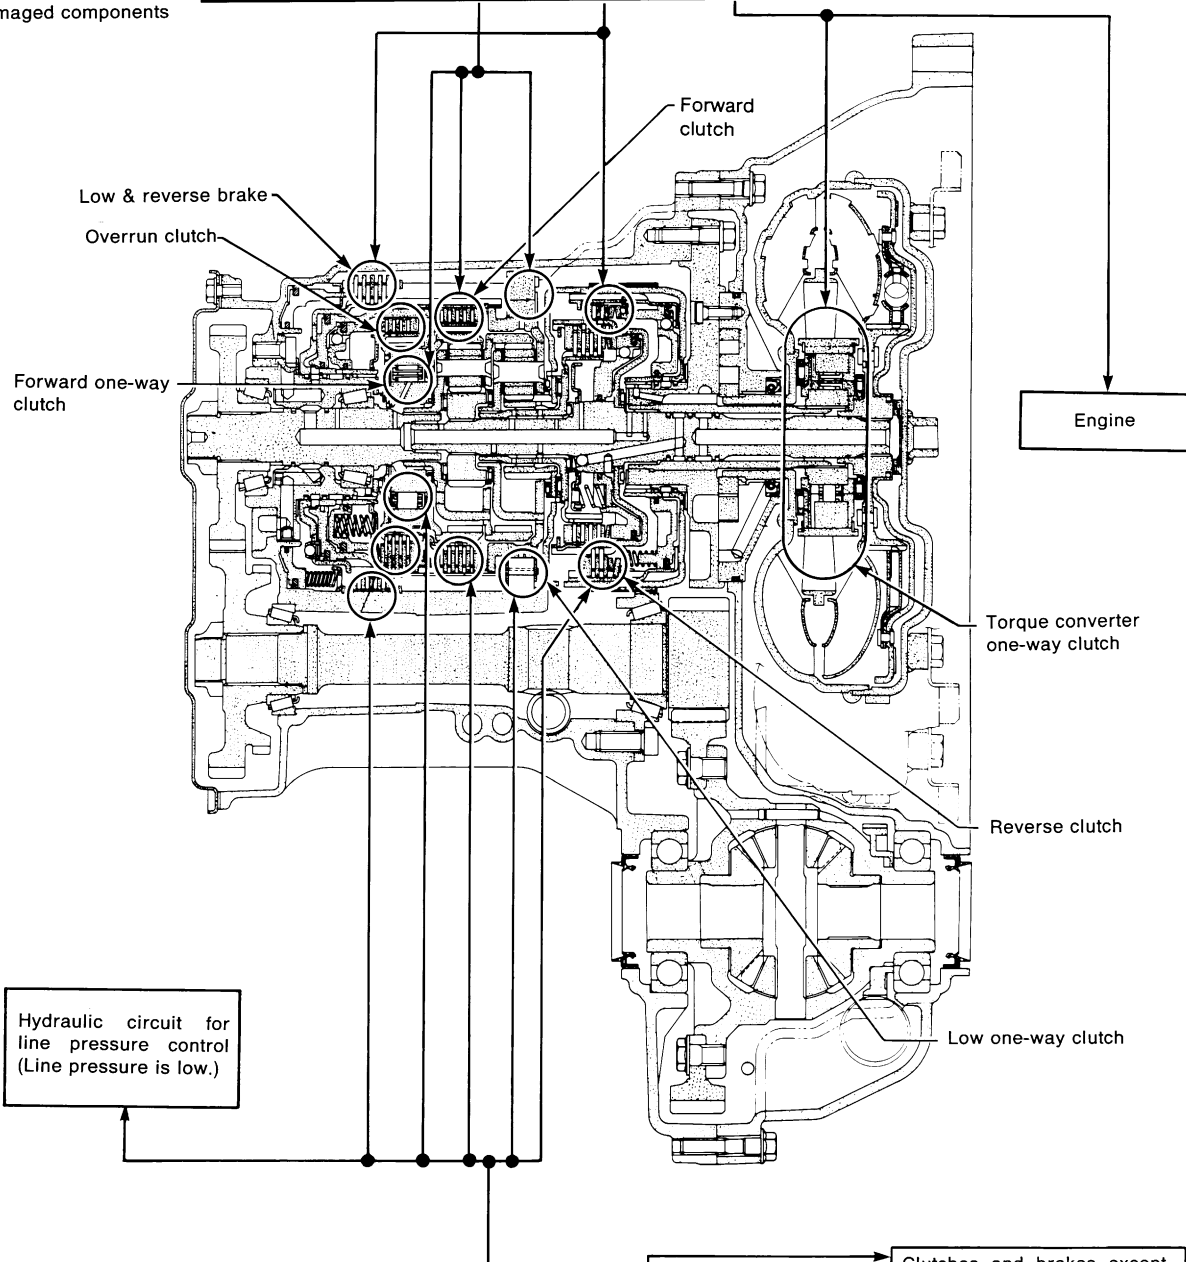

D	H	O
2	H	O
1	H	O
R	H	O
Selector lever position	Judgement	


Clutches and brakes except high clutch and brake band are OK. (Condition of high clutch and brake band cannot be confirmed by stall test.)

GI
 MA
 EM
 LC
 EC
 FE
 CL
 MT
AT
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

SAT871HA

TROUBLE DIAGNOSIS — BASIC INSPECTION

Line Pressure Test

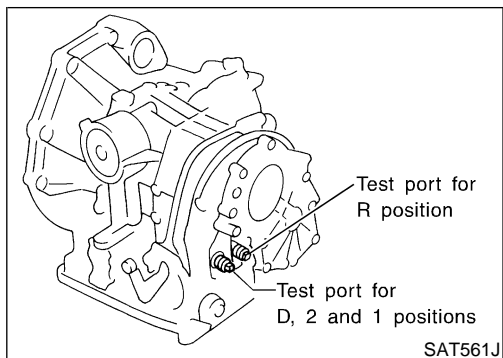

Line Pressure Test


LINE PRESSURE TEST PORTS

NIAT0028

NIAT0028S01

Location of line pressure test ports are shown in the illustration.

- Always replace pressure plugs as they are self-sealing bolts.

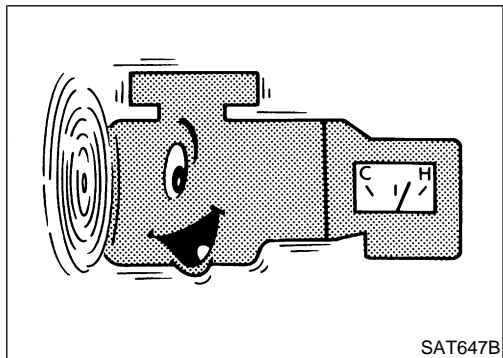


LINE PRESSURE TEST PROCEDURE

NIAT0028S02


1. Check A/T fluid and engine oil levels. If necessary, add fluid or oil.
2. Drive vehicle for approx. 10 minutes or until engine oil and ATF reach operating temperature.

ATF operating temperature:


50 - 80°C (122 - 176°F)

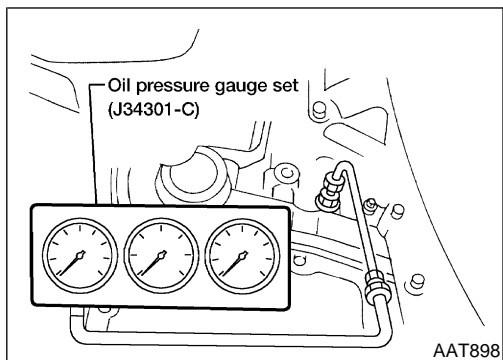

3. Install pressure gauge to corresponding line pressure port.

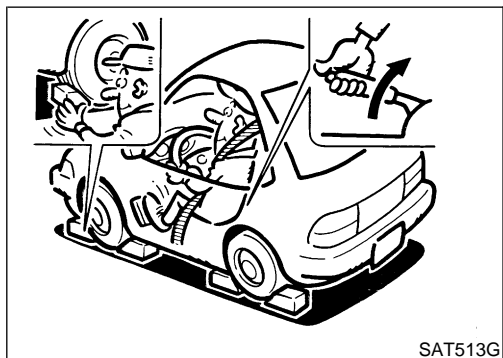

4. Set parking brake and block wheels.
 - Continue to depress brake pedal fully while line pressure test is being performed at stall speed.

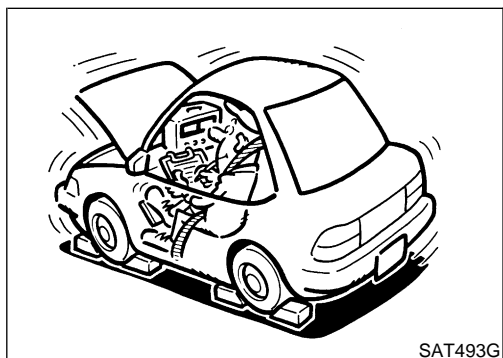

5. Start engine and measure line pressure at idle and stall speed.
 - When measuring line pressure at stall speed, follow the stall test procedure.

Refer to "Line Pressure", AT-379.

TROUBLE DIAGNOSIS — BASIC INSPECTION

Line Pressure Test (Cont'd)

JUDGEMENT OF LINE PRESSURE TEST

NIAT002BS03

Judgement		Suspected parts
At idle	Line pressure is low in all positions.	<ul style="list-style-type: none"> ● Oil pump wear ● Control piston damage ● Pressure regulator valve or plug sticking ● Spring for pressure regulator valve damaged ● Fluid pressure leakage between oil strainer and pressure regulator valve ● Clogged strainer
	Line pressure is low in particular position.	<ul style="list-style-type: none"> ● Fluid pressure leakage between manual valve and particular clutch ● For example, line pressure is: <ul style="list-style-type: none"> – Low in “R” and “1” positions, but – Normal in “D” and “2” positions. Therefore, fluid leakage exists at or around low and reverse brake circuit. Refer to “CLUTCH AND BAND CHART”, AT-19.
	Line pressure is high.	<ul style="list-style-type: none"> ● Maladjustment of throttle position sensor ● A/T fluid temperature sensor damaged ● Line pressure solenoid valve sticking ● Short circuit of line pressure solenoid valve circuit ● Pressure modifier valve sticking ● Pressure regulator valve or plug sticking ● Open in dropping resistor circuit
At stall speed	Line pressure is low.	<ul style="list-style-type: none"> ● Maladjustment of throttle position sensor ● Line pressure solenoid valve sticking ● Short circuit of line pressure solenoid valve circuit ● Pressure regulator valve or plug sticking ● Pressure modifier valve sticking ● Pilot valve sticking

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ROAD TEST PROCEDURE

1. Check before engine is started.




2. Check at idle.



3. Cruise test.

SAT786A

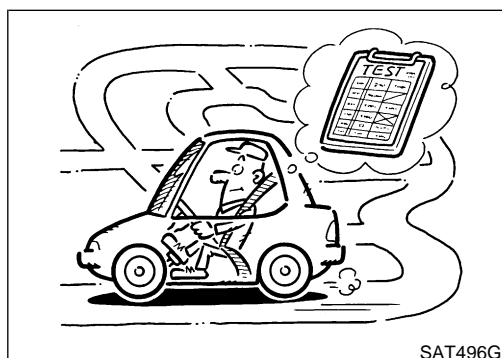

SAT496G

Road Test

DESCRIPTION

NIAT0029

NIAT0029S01




- The purpose of the test is to determine overall performance of A/T and analyze causes of problems.
- The road test consists of the following three parts:
 1. Check before engine is started
 2. Check at idle
 3. Cruise test
- Before road test, familiarize yourself with all test procedures and items to check.
- Conduct tests on all items until specified symptom is found. Troubleshoot items which check out No Good after road test. Refer to “ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION”, AT-35 - 53 and “TROUBLE DIAGNOSES FOR SYMPTOMS”, AT-216 - 254.



TROUBLE DIAGNOSIS — BASIC INSPECTION

Road Test (Cont'd)

1. CHECK BEFORE ENGINE IS STARTED

=NIAT0029S02

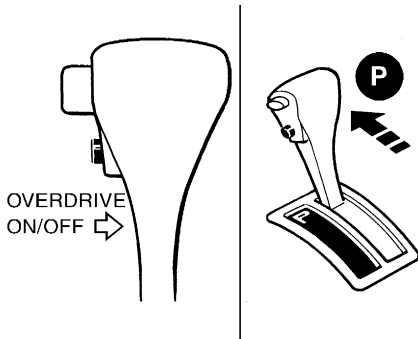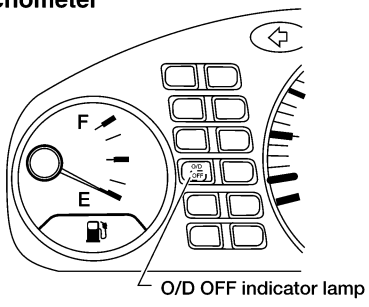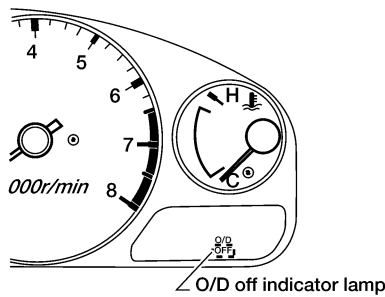1	CHECK O/D OFF INDICATOR LAMP	
<p>1. Park vehicle on flat surface. 2. Move A/T selector lever to "P" position.</p>		
		
<p>3. Turn ignition switch to "OFF" position. Wait at least 5 seconds. 4. Turn ignition switch to "ON" position. (Do not start engine.) 5. Does O/D OFF indicator lamp come on for about 2 seconds?</p>		
<p>Without tachometer</p>  <p style="text-align: right;">With tachometer</p> 		
LAT154		
Yes or No		
Yes	▶	GO TO 2.
No	▶	Stop ROAD TEST. Go to "1. O/D OFF Indicator Lamp Does Not Come On", AT-216.

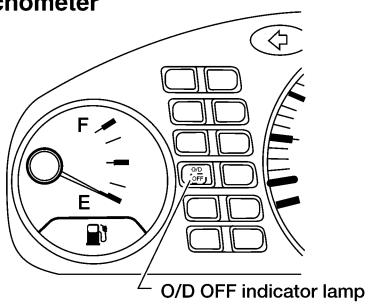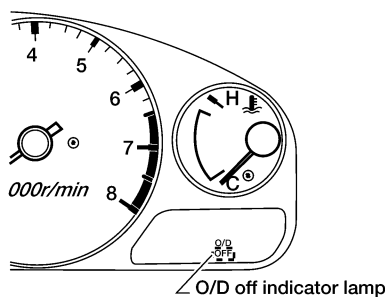
2	CHECK O/D OFF INDICATOR LAMP	
Does O/D OFF indicator lamp flicker for about 8 seconds?		
<p>Without tachometer</p>  <p style="text-align: right;">With tachometer</p> 		
LAT154		
Yes or No		
Yes	▶	Perform self-diagnosis and check NG items on the "Diagnostic Worksheet", AT-58. Refer to "TCM Self-diagnostic Procedure (No Tools)", AT-49.
No	▶	<p>1. Turn ignition switch to "OFF" position. 2. Perform self-diagnosis and note NG items. Refer to "TCM Self-diagnostic Procedure (No Tools)", AT-49. 3. Go to "2. CHECK AT IDLE", AT-69.</p>

TROUBLE DIAGNOSIS — BASIC INSPECTION


Road Test (Cont'd)

2. CHECK AT IDLE

-NIAT0029S03

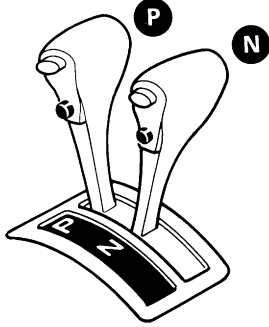1	CHECK ENGINE START	
<p>1. Park vehicle on flat surface. 2. Move A/T selector lever to "P" position.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SAT769B</p> <p>3. Turn ignition switch to "OFF" position. 4. Turn ignition switch to "START" position. 5. Is engine started?</p> <p style="text-align: center;">Yes or No</p>		
Yes	▶	GO TO 2.
No	▶	Mark the box on the DIAGNOSTIC WORKSHEET. Go to "2. Engine Cannot Be Started In "P" and "N" Position", AT-219. Continue ROAD TEST.


GI
MA
EM
LC
EC
FE
CL
MT

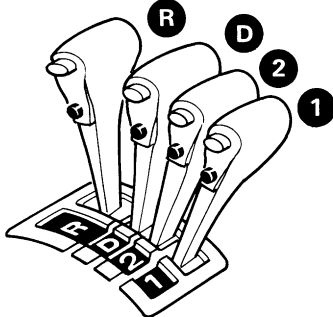
2	CHECK ENGINE START	
<p>1. Turn ignition switch to "ACC" position. 2. Move A/T selector lever to "D", "1", "2" or "R" position.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SAT770B</p> <p>3. Turn ignition switch to "START" position. 4. Is engine started?</p> <p style="text-align: center;">Yes or No</p>		
Yes	▶	Mark the box on the DIAGNOSTIC WORKSHEET. Go to "2. Engine Cannot Be Started In "P" and "N" Position", AT-219. Continue ROAD TEST.
No	▶	GO TO 3.

AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

TROUBLE DIAGNOSIS — BASIC INSPECTION


Road Test (Cont'd)

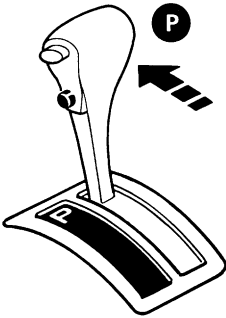3	CHECK VEHICLE MOVE
1. Move A/T selector lever to "P" position.	
	
2. Turn ignition switch to "OFF" position. 3. Release parking brake.	
SAT768B	
▶	GO TO 4.

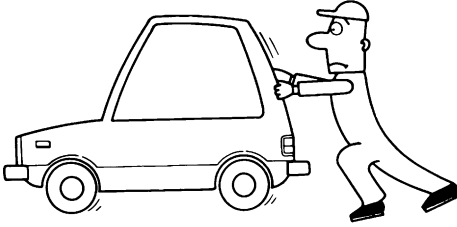
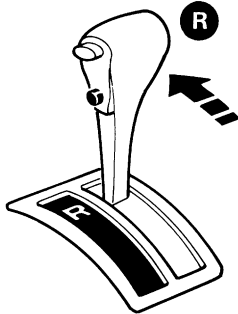
4	CHECK VEHICLE MOVE
1. Push vehicle forward or backward. 2. Does vehicle move when it is pushed forward or backward?	
	
3. Apply parking brake.	
Yes or No	
Yes	▶ Mark the box on the DIAGNOSTIC WORKSHEET. Go to "3. In "P" Position, Vehicle Moves Forward Or Backward When Pushed", AT-220. Continue ROAD TEST.
No	▶ GO TO 5.

TROUBLE DIAGNOSIS — BASIC INSPECTION

Road Test (Cont'd)

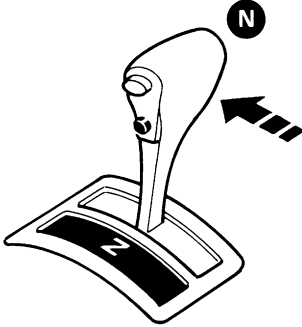5	CHECK VEHICLE MOVE	
<p>1. Start engine. 2. Move A/T selector lever to "N" position.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SAT771B</p> <p>3. Release parking brake. 4. Does vehicle move forward or backward?</p> <p style="text-align: center;">Yes or No</p>		
Yes	▶	Mark the box on the DIAGNOSTIC WORKSHEET. Go to "4. In "N" Position, Vehicle Moves", AT-221. Continue ROAD TEST.
No	▶	GO TO 6.


GI
MA
EM
LC
EC
FE
CL
MT


6	CHECK SHIFT SHOCK	
<p>1. Apply foot brake.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SAT797A</p> <p>2. Move A/T selector lever to "R" position.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SAT772B</p> <p>3. Is there large shock when changing from "N" to "R" position?</p> <p style="text-align: center;">Yes or No</p>		
Yes	▶	Mark the box on the DIAGNOSTIC WORKSHEET. Go to "5. Large Shock "N" → "R" Position", AT-223. Continue ROAD TEST.
No	▶	GO TO 7.


AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

TROUBLE DIAGNOSIS — BASIC INSPECTION

Road Test (Cont'd)

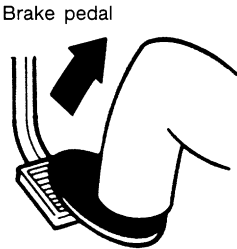7	CHECK VEHICLE MOVE	
1. Release foot brake for several seconds.		
 <p>Brake pedal</p> <p>For several seconds</p>		
SAT799A		
2. Does vehicle creep backward when foot brake is released?		
Yes or No		
Yes	▶	GO TO 8.
No	▶	Mark the box on the DIAGNOSTIC WORKSHEET. Go to "6. Vehicle Does Not Creep Backward In "R" Position", AT-225. Continue ROAD TEST.

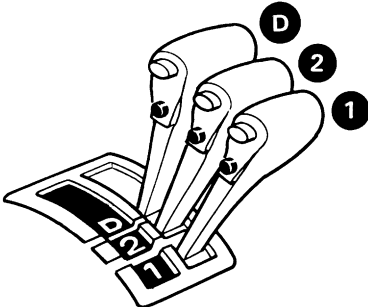8	CHECK VEHICLE MOVE	
1. Move A/T selector lever to "D", "2" and "1" positions and check if vehicle creeps forward.		
		
SAT773B		
2. Does vehicle creep forward in all three positions?		
Yes or No		
Yes	▶	Go to 3. CRUISE TEST, AT-72.
No	▶	Mark the box on the DIAGNOSTIC WORKSHEET. Go to "7. Vehicle Does Not Creep Forward In "D", "2" Or "1" Position", AT-228. Continue ROAD TEST.

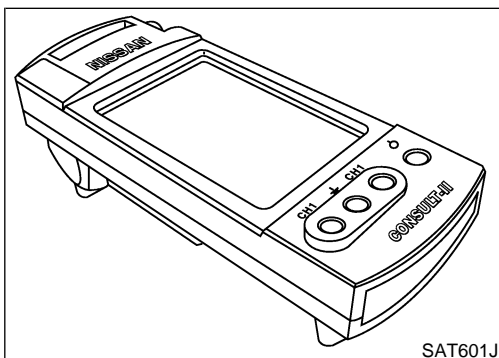

3. CRUISE TEST


NIAT0029S04

- Check all items listed in Parts 1 through 3.

With CONSULT-II

NIAT0029S0401

- Using CONSULT-II, conduct a cruise test and record the result.
- Print the result and ensure that shifts and lock-ups take place as per Shift Schedule.

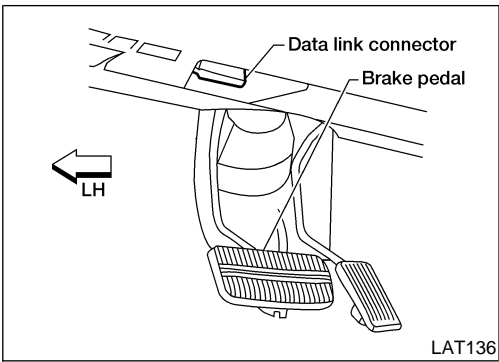

CONSULT-II Setting Procedure

NIAT0029S0402


1. Turn ignition switch "OFF".
2. Connect CONSULT-II to Data link connector which is located in left side lower dash panel.

GI

MA

EM

LC

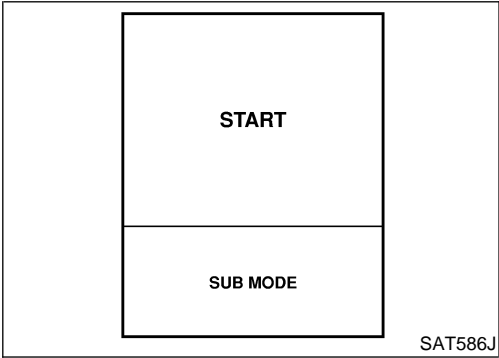


3. Turn ignition switch "ON".
4. Touch "START".

EC

FE

CL

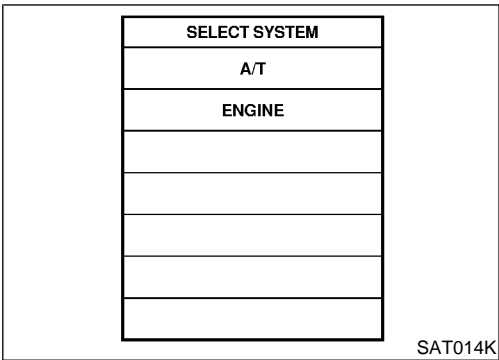


5. Touch "A/T".

AT

AX

SU

BR

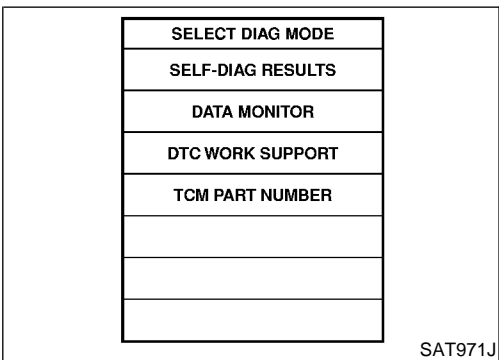


6. Touch "DATA MONITOR".

ST

RS

BT

HA

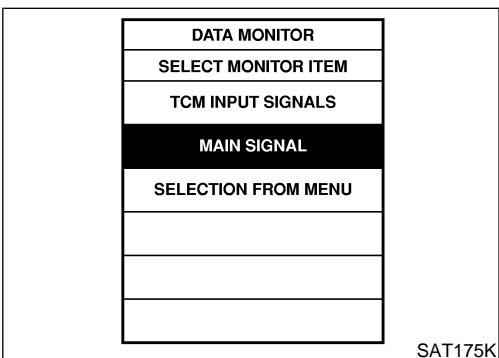

7. Touch "MAIN SIGNALS" or "TCM INPUT SIGNALS".
8. See "Numerical Display", "Barchart Display" or "Line Graph Display".

SC

EL

IDX

TROUBLE DIAGNOSIS — BASIC INSPECTION

Road Test (Cont'd)

SET RECORDING CONDITION						
AUTO TRIG						
MANU TRIG						
TRIGGER POINT						
<<	██████████	>>				
0%	20%	40%	60%	80%	100%	
Recording Speed						
MIN	MAX					
<<	██████████	>>				
/64	/32	/16	/8	/4	/2	FULL

SAT973J

9. Touch "SETTING" to recording condition ("AUTO TRIG" or "MANU TRIG") and touch "BACK".
10. Touch "START".

DATA MONITOR	
MONITOR	NO DTC
ENGINE SPEED	XXX rpm
GEAR	XXX
SLCT LVR POSI	N/P
VEHICLE SPEED	XXX km/h
THROTTLE POSI	XXX
LINE PRES DTY	XX%
TCC S/V DUTY	XX%
SHIFT S/V A	XX
SHIFT S/V B	XX

SAT134K

11. When performing cruise test, touch "RECORD".

DATA MONITOR		
Recording Data	X%	DTC
		DETECTED
ENGINE SPEED	XXX rpm	
GEAR	XXX	
SLCT LVR POSI	N/P	
VEHICLE SPEED	XXX km/h	
THROTTLE POSI	XXX	
LINE PRES DTY	XX%	
TCC S/V DUTY	XX%	
SHIFT S/V A	XX	
SHIFT S/V B	XX	

SAT135K

12. After finishing cruise test part 1, touch "STOP".

REAL-TIME DIAG	
ENG SPEED SIG	

SAT987J

13. Touch "STORE" and touch "BACK".

STORE	
SYSTEM	SAVE REC DATA

SAT974J


TROUBLE DIAGNOSIS — BASIC INSPECTION

Road Test (Cont'd)

Trigger	VHCL S/SEN A/T	VHCL S/SEN MTR	THRTL POSI SEN
	km/h	km/h	V

SAT975J

14. Touch "DISPLAY".
15. Touch "PRINT".
16. Check the monitor data printed out.
17. Continue cruise test part 2 and 3.

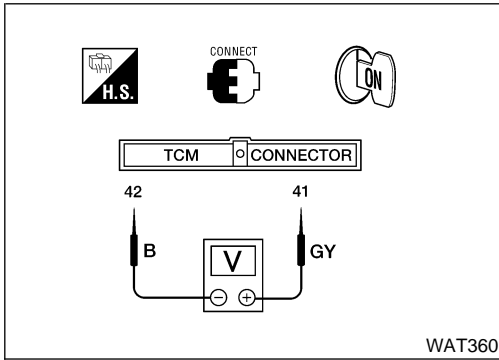

⊗ Without CONSULT-II

- Throttle position sensor can be checked by voltage across terminals 41 and 42 of TCM.

NIAT0029S0403

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

TROUBLE DIAGNOSIS — BASIC INSPECTION

Road Test (Cont'd)

Cruise Test — Part 1

—NIAT0029S0404


1 CHECK STARTING GEAR (D₁) POSITION

1. Drive vehicle for approx. 10 minutes to warm engine oil and ATF up to operating temperature.

ATF operating temperature:


50 - 80°C (122 - 176°F)

2. Park vehicle on flat surface.
3. Set overdrive control switch to "ON" position.
4. Move A/T selector lever to "P" position.

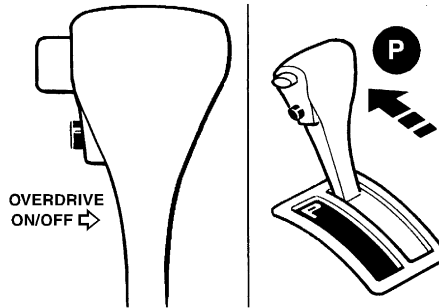


SAT001J

5. Start engine.
6. Move A/T selector lever to "D" position.

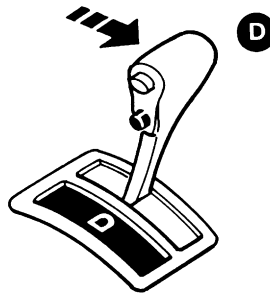

SAT775B

7. Accelerate vehicle by constantly depressing accelerator pedal halfway.

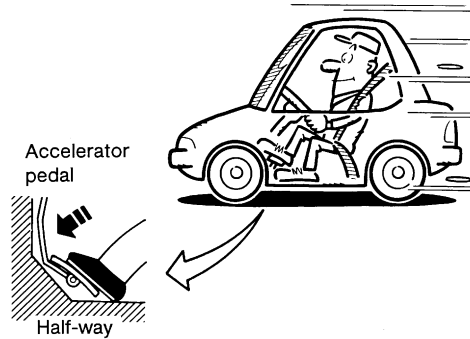

SAT495G

8. Does vehicle start from D₁?

Read gear position.


Yes or No

Yes GO TO 2.


No Go to "8. Vehicle Cannot Be Started From D₁", AT-231. Continue ROAD TEST.

TROUBLE DIAGNOSIS — BASIC INSPECTION

Road Test (Cont'd)

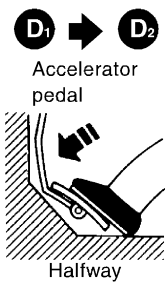2	CHECK SHIFT UP (D₁ TO D₂)	
Does A/T shift from D ₁ to D ₂ at the specified speed? <input type="checkbox"/> Read gear position, throttle opening and vehicle speed. Specified speed when shifting from D ₁ to D ₂ : Refer to "Shift Schedule", AT-378.		
		
Yes or No		
Yes	▶	GO TO 3.
No	▶	Go to "9. A/T Does Not Shift: D ₁ → D ₂ Or Does Not Kickdown: D ₄ → D ₂ ", AT-234. Continue ROAD TEST.

GI
 MA
 EM
 LC
 EC
 FE
 CL

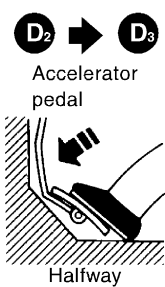
3	CHECK SHIFT UP (D₂ TO D₃)	
Does A/T shift from D ₂ to D ₃ at the specified speed? <input type="checkbox"/> Read gear position, throttle position and vehicle speed. Specified speed when shifting from D ₂ to D ₃ : Refer to "Shift Schedule", AT-378.		
		
Yes or No		
Yes	▶	GO TO 4.
No	▶	Go to "10. A/T Does Not Shift: D ₂ → D ₃ ", AT-237. Continue ROAD TEST.

MT
AT
 AX
 SU
 BR
 ST
 RS


BT
 HA
 SC
 EL
 IDX

TROUBLE DIAGNOSIS — BASIC INSPECTION

Road Test (Cont'd)

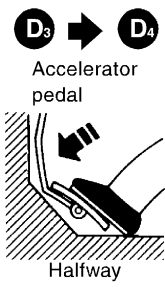4	CHECK SHIFT UP (D₃ TO D₄)	
Does A/T shift from D ₃ to D ₄ at the specified speed? <input type="checkbox"/> Read gear position, throttle position and vehicle speed. Specified speed when shifting from D₃ to D₄: Refer to "Shift Schedule", AT-378.		
		
Yes or No		
Yes	▶	GO TO 5.
No	▶	Go to "11. A/T Does Not Shift: D ₃ → D ₄ ", AT-240. Continue ROAD TEST.

SAT956I

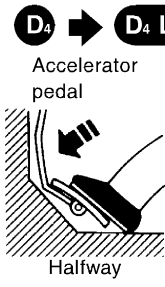5	CHECK LOCK-UP (D₄ TO D₄ L/U)	
Does A/T perform lock-up at the specified speed? <input type="checkbox"/> Read vehicle speed, throttle position when lock-up duty becomes 94%. Specified speed when lock-up occurs: Refer to Shift schedule, AT-378.		
		
Yes or No		
Yes	▶	GO TO 6.
No	▶	Go to "12. A/T Does Not Perform Lock-up", AT-243. Continue ROAD TEST.

SAT957I

6	CHECK HOLD LOCK-UP	
Does A/T hold lock-up condition for more than 30 seconds? <p style="text-align: center;">Yes or No</p>		
Yes	▶	GO TO 7.
No	▶	Go to "13. A/T Does Not Hold Lock-up Condition", AT-245.

TROUBLE DIAGNOSIS — BASIC INSPECTION

Road Test (Cont'd)

7	CHECK SHIFT DOWN (D₄ L/U TO D₄)	
<p>1. Release accelerator pedal. 2. Is lock-up released when accelerator pedal is released?</p> <div style="text-align: center;"> </div> <p style="text-align: right;">SAT958I</p>		
Yes or No		
Yes	▶	GO TO 8.
No	▶	Go to "14. Lock-up Is Not Released", AT-247. Continue ROAD TEST.

GI
MA
EM
LC
EC
FE

8	CHECK SHIFT DOWN (D₄ TO D₃)	
<p>1. Decelerate vehicle by applying foot brake lightly. 2. Does engine speed return to idle smoothly when A/T is shifted from D₄ to D₃?</p> <p> Read gear position and engine speed.</p> <div style="text-align: center;"> </div> <p style="text-align: right;">SAT959I</p>		
Yes or No		
Yes	▶	1. Stop vehicle. 2. Go to "Cruise Test — Part 2", AT-80.
No	▶	Go to "15. Engine Speed Does Not Return To Idle (Light Braking D ₄ → D ₃)", AT-248. Continue ROAD TEST.

CL
MT
AT
AX
SU
BR
ST
RS


BT
HA
SC
EL
IDX

TROUBLE DIAGNOSIS — BASIC INSPECTION


Road Test (Cont'd)

Cruise Test — Part 2

—NIAT0029S0405

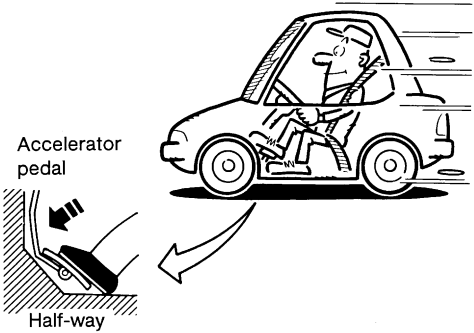1	CHECK STARTING GEAR (D₁) POSITION	
<p>1. Confirm overdrive control switch is in "ON" position. 2. Confirm A/T selector lever is in "D" position. 3. Accelerate vehicle by half throttle again. 4. Does vehicle start from D₁?</p> <p><input type="checkbox"/> Read gear position.</p>		
 <p>Accelerator pedal Half-way</p>		
Yes or No		
Yes	▶	GO TO 2.
No	▶	Go to "16. Vehicle Does Not Start From D ₁ ", AT-250. Continue ROAD TEST.


SAT495G


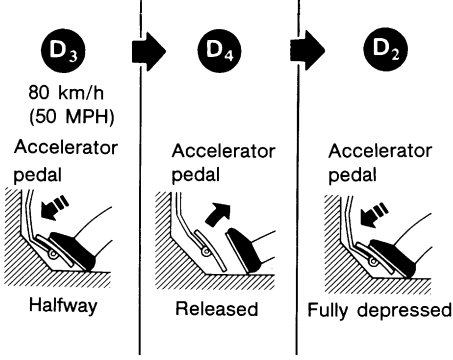
2	CHECK SHIFT UP AND SHIFT DOWN (D₃ TO D₄ TO D₂)	
<p>1. Accelerate vehicle to 80 km/h (50 MPH) as shown in illustration. 2. Release accelerator pedal and then quickly depress it fully. 3. Does A/T shift from D₄ to D₂ as soon as accelerator pedal is depressed fully?</p> <p><input type="checkbox"/> Read gear position and throttle position.</p>		
 <p>D₃ D₄ D₂</p> <p>80 km/h (50 MPH) Accelerator pedal Halfway</p> <p>Accelerator pedal Released</p> <p>Accelerator pedal Fully depressed</p>		
Yes or No		
Yes	▶	GO TO 3.
No	▶	Go to "9. A/T Does Not Shift: D ₁ → D ₂ Or Does Not Kickdown: D ₄ → D ₂ ", AT-234. Continue ROAD TEST.

SAT404H

TROUBLE DIAGNOSIS — BASIC INSPECTION

Road Test (Cont'd)

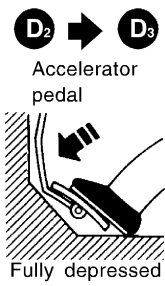3	CHECK SHIFT UP (D₂ TO D₃)	<p>Does A/T shift from D₂ to D₃ at the specified speed?</p> <p>Ⓜ Read gear position, throttle position and vehicle speed. Specified speed when shifting from D₂ to D₃: Refer to Shift schedule, AT-378.</p> <div style="text-align: center;">  <p style="text-align: center;">Accelerator pedal Fully depressed</p> </div> <p style="text-align: right;">SAT960I</p>
Yes or No		
Yes	▶	GO TO 4.
No	▶	Go to "10. A/T Does Not Shift: D ₂ → D ₃ ", AT-237. Continue ROAD TEST.

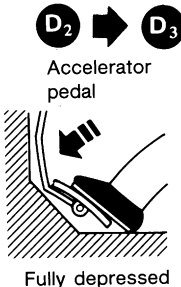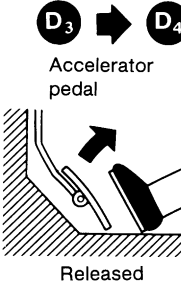4	CHECK SHIFT UP (D₃ TO D₄) AND ENGINE BRAKE	<p>Release accelerator pedal after shifting from D₂ to D₃.</p> <p>Does A/T shift from D₃ to D₄ and does vehicle decelerate by engine brake?</p> <p>Ⓜ Read gear position, throttle position and vehicle speed.</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">  <p style="text-align: center;">Accelerator pedal Fully depressed</p> </div> <div style="text-align: center;">  <p style="text-align: center;">Accelerator pedal Released</p> </div> </div> <p style="text-align: right;">SAT405H</p>
Yes or No		
Yes	▶	<ol style="list-style-type: none"> 1. Stop vehicle. 2. Go to "Cruise Test — Part 3", AT-82.
No	▶	Go to "11. A/T Does Not Shift: D ₃ → D ₄ ", AT-240. Continue ROAD TEST.


GI
 MA
 EM
 LC
 EC
 FE
 CL
 MT
AT
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX



TROUBLE DIAGNOSIS — BASIC INSPECTION

Road Test (Cont'd)

Cruise Test — Part 3

—NIAT0029S0406

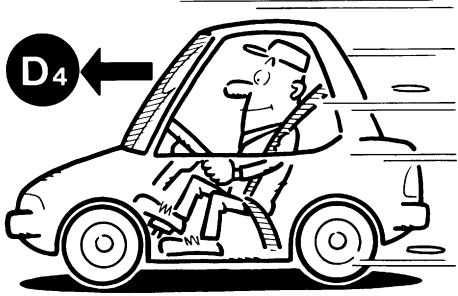1	VEHICLE SPEED D₄ POSITION	<p>1. Confirm overdrive control switch is in "ON" position. 2. Confirm selector lever is in "D" position. 3. Accelerate vehicle using half-throttle to D₄.</p> <div style="text-align: center;">  </div>	SAT812A
▶		GO TO 2.	

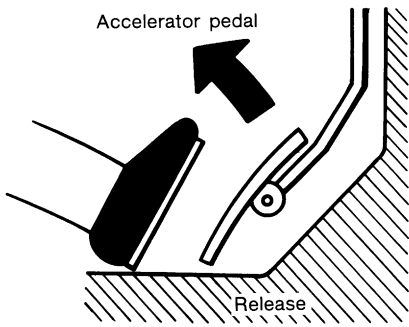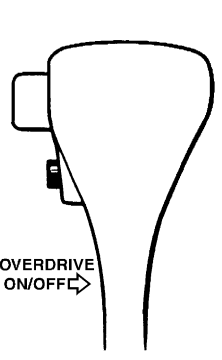
2	CHECK SHIFT DOWN (D₄ TO D₃)	<p>1. Release accelerator pedal.</p> <div style="text-align: center;">  </div> <p>2. Set overdrive control switch to "OFF" position while driving in D₄. 3. Does A/T shift from D₄ to D₃ (O/D OFF)? <input type="checkbox"/> Read gear position and vehicle speed.</p> <div style="display: flex; align-items: center; justify-content: center;"> <div style="text-align: center;">  <p>OVERDRIVE ON/OFF ↔</p> </div> <div style="margin-left: 20px; text-align: center;"> <p>D₄</p> <p>↓</p> <p>D₃ (OD OFF)</p> <p>Engine brake</p> </div> </div>	SAT813A
▶		Yes or No	
Yes	▶	GO TO 3.	
No	▶	Go to "17. A/T Does Not Shift: D ₄ → D ₃ , When Overdrive Control Switch "ON" → "OFF", AT-251. Continue ROAD TEST.	

SAT813A


SAT999I

TROUBLE DIAGNOSIS — BASIC INSPECTION

Road Test (Cont'd)

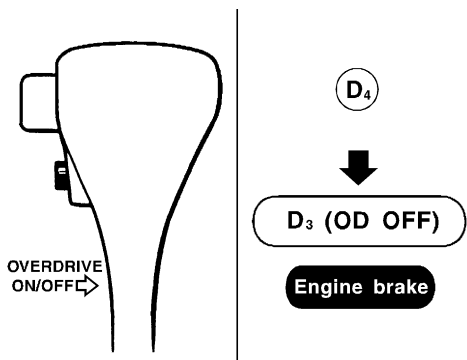
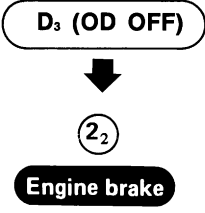
3	CHECK ENGINE BRAKE		
Does vehicle decelerate by engine brake?			
		SAT999I	
Yes or No			
Yes	▶	GO TO 4.	
No	▶	Go to "15. Engine Speed Does Not Return To Idle (Light Braking D ₄ → D ₃)", AT-248. Continue ROAD TEST.	


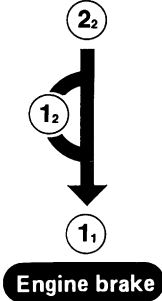
GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

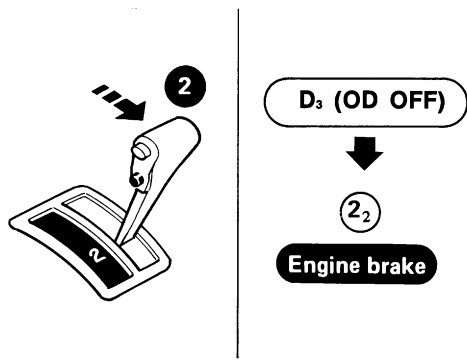4	CHECK SHIFT DOWN (D₃ TO D₂)		
1. Move A/T selector lever from "D" to "2" position while driving in D ₃ (O/D OFF). 2. Does A/T shift from D ₃ (O/D OFF) to 2 ₂ ? <input type="checkbox"/> Read gear position.			
		SAT791GA	
Yes or No			
Yes	▶	GO TO 5.	
No	▶	Go to "18. A/T Does Not Shift: D ₃ → D ₂ , When A/T Selector Lever "D" → "2" Position", AT-252. Continue ROAD TEST.	

TROUBLE DIAGNOSIS — BASIC INSPECTION



Road Test (Cont'd)

5	CHECK ENGINE BRAKE	Does vehicle decelerate by engine brake?	
			SAT791GA
Yes or No			
Yes	▶	GO TO 6.	
No	▶	Go to "15. Engine Speed Does Not Return To Idle (Light Braking D ₄ → D ₃)", AT-248. Continue ROAD TEST.	

6	CHECK SHIFT DOWN	1. Move A/T selector lever from "2" to "1" position while driving in 2 ₂ . 2. Does A/T shift from 2 ₂ to 1 ₁ position? ⓘ Read gear position.	
			SAT778B
Yes or No			
Yes	▶	GO TO 7.	
No	▶	Go to "19. A/T Does Not Shift: 2 ₂ → 1 ₁ , When A/T Selector Lever "2" → "1" Position", AT-253. Continue ROAD TEST.	

TROUBLE DIAGNOSIS — BASIC INSPECTION

Road Test (Cont'd)

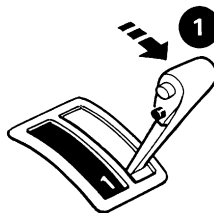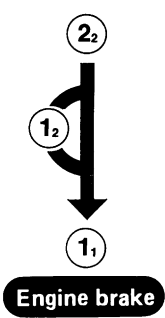7	CHECK ENGINE BRAKE	
<p>Does vehicle decelerate by engine brake?</p> <div style="display: flex; justify-content: space-around; align-items: center;">   </div> <p style="text-align: center;">Yes or No</p> <p style="text-align: right;">SAT778B</p>		
Yes	▶	<ol style="list-style-type: none"> 1. Stop vehicle. 2. Perform self-diagnosis. Refer to "TCM Self-diagnostic Procedure (No Tools)", AT-49.
No	▶	<p>Go to "20. Vehicle Does Not Decelerate By Engine Brake", AT-254. Continue ROAD TEST.</p>

GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

Symptom Chart

Symptom Chart

NIAT0030

Numbers are arranged in order of inspection.

Perform inspections starting with number one and work up.

Items	Symptom	Condition	Diagnostic Item	Reference Page		
				QG18DE (Calif. CA Model)	SR20DE	QG18DE (Except Calif. CA Model)
Not Used	Engine cannot start in "P" and "N" positions. AT-219,	ON vehicle	1. Ignition switch and starter	EL-9 , "POWER SUPPLY ROUTING" and SC-10 , "STARTING SYSTEM"		
			2. Control cable adjustment	AT-272		
			3. PNP switch adjustment	AT-272		
	Engine starts in position other than "N" and "P" positions. AT-219	ON vehicle	1. Control cable adjustment	AT-272		
			2. PNP switch adjustment	AT-272		
	Transaxle noise in "P" and "N" positions.	ON vehicle	1. Fluid level	AT-62		
			2. Line pressure test	AT-66		
			3. Throttle position sensor (Adjustment)	EC-871 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-1529 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-196 , "DTC P0120 THROTTLE POSITION SENSOR"
			4. Vehicle speed sensor-A/T (Revolution sensor) and vehicle speed sensor-MTR	AT-121, AT-205		
			5. Engine speed signal	AT-126		
		OFF vehicle	6. Oil pump	AT-299		
			7. Torque converter	AT-282		
	Vehicle moves when changing into "P" position, or parking gear does not disengage when shifted out of "P" position. AT-220	ON vehicle	1. Control cable adjustment	AT-272		
		OFF vehicle	2. Parking components	AT-277		
	Vehicle moves in "N" position. AT-221	ON vehicle	1. Control cable adjustment	AT-272		
OFF vehicle		2. Forward clutch	AT-328			
		3. Reverse clutch	AT-319			
		4. Overrun clutch	AT-328			

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

Symptom Chart (Cont'd)

Items	Symptom	Condition	Diagnostic Item	Reference Page			
				QG18DE (Calif. CA Model)	SR20DE	QG18DE (Except Calif. CA Model)	
Slips/Will Not Engage	Vehicle will not run in "R" position (but runs in "D", "2" and "1" positions). Clutch slips. Very poor acceleration. AT-225	ON vehicle	1. Control cable adjustment	AT-272			GI
			2. Line pressure test	AT-66			MA
			3. Line pressure solenoid valve	AT-173			EM
			4. Control valve assembly	AT-303			LC
		OFF vehicle	5. Reverse clutch	AT-319			EC
			6. High clutch	AT-323			FE
			7. Forward clutch	AT-328			CL
			8. Overrun clutch	AT-328			MT
			9. Low & reverse brake	AT-335			AT
Not Used	Vehicle braked when shifting into "R" position.	ON vehicle	1. Fluid level	AT-62			AX
			2. Control cable adjustment	AT-272			SU
			3. Line pressure test	AT-66			BR
			4. Line pressure solenoid valve	AT-173			ST
			5. Control valve assembly	AT-303			RS
		OFF vehicle	6. High clutch	AT-323			BT
			7. Brake band	AT-348			HA
			8. Forward clutch	AT-328			SC
			9. Overrun clutch	AT-328			EL
Shift Shock	Sharp shock in shifting from "N" to "D" position.	ON vehicle	1. Engine idling rpm	<i>EC-746</i> , "Idle Speed/ Ignition Timing/ Idle Mix- ture Ratio Adjust- ment"	<i>EC-1407</i> , "Idle Speed/ Ignition Timing/ Idle Mix- ture Ratio Adjust- ment"	<i>EC-71</i> , "Idle Speed/ Ignition Timing/ Idle Mix- ture Ratio Adjust- ment"	RS
			2. Throttle position sensor (Adjustment)	<i>EC-871</i> , "DTC P0120 THROTTLE POSITION SENSOR"	<i>EC-1529</i> , "DTC P0120 THROTTLE POSITION SENSOR"	<i>EC-196</i> , "DTC P0120 THROTTLE POSITION SENSOR"	BT
			3. Line pressure test	AT-66			HA
			4. A/T fluid temperature sensor	AT-115			SC
			5. Engine speed signal	AT-126			EL
			6. Line pressure solenoid valve	AT-173			IDX
			7. Control valve assembly	AT-303			
			8. Accumulator N-D	AT-303			
		OFF vehicle	9. Forward clutch	AT-328			

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

Symptom Chart (Cont'd)

Items	Symptom	Condition	Diagnostic Item	Reference Page		
				QG18DE (Calif. CA Model)	SR20DE	QG18DE (Except Calif. CA Model)
Slips/Will Not Engage	Vehicle will not run in "D" and "2" positions (but runs in "1" and "R" positions).	ON vehicle	1. Control cable adjustment	AT-272		
		OFF vehicle	2. Low one-way clutch	AT-277		
	Vehicle will not run in "D", "1", "2" positions (but runs in "R" position). Clutch slips. Very poor acceleration. AT-228	ON vehicle	1. Fluid level	AT-62		
			2. Line pressure test	AT-66		
			3. Line pressure solenoid valve	AT-173		
			4. Control valve assembly	AT-303		
			5. Accumulator N-D	AT-303		
	OFF vehicle	6. Reverse clutch	AT-319			
		7. High clutch	AT-323			
		8. Forward clutch	AT-328			
		9. Forward one-way clutch	AT-339			
		10. Low one-way clutch	AT-277			
	Clutches or brakes slip somewhat in starting.	ON vehicle	1. Fluid level	AT-62		
			2. Control cable adjustment	AT-272		
			3. Throttle position sensor (Adjustment)	EC-871 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-1529 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-196 , "DTC P0120 THROTTLE POSITION SENSOR"
		OFF vehicle	4. Line pressure test	AT-66		
			5. Line pressure solenoid valve	AT-173		
			6. Control valve assembly	AT-303		
7. Accumulator N-D			AT-303			
8. Forward clutch			AT-328			
9. Reverse clutch			AT-319			
10. Low & reverse brake			AT-335			
11. Oil pump			AT-299			
12. Torque converter			AT-282			
Not Used	Excessive creep.	ON vehicle	1. Engine idling rpm	EC-746 , "Idle Speed/ Ignition Timing/ Idle Mix- ture Ratio Adjust- ment"	EC-1407 , "Idle Speed/ Ignition Timing/ Idle Mix- ture Ratio Adjust- ment"	EC-71 , "Idle Speed/ Ignition Timing/ Idle Mix- ture Ratio Adjust- ment"

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

Symptom Chart (Cont'd)

Items	Symptom	Condition	Diagnostic Item	Reference Page			
				QG18DE (Calif. CA Model)	SR20DE	QG18DE (Except Calif. CA Model)	
Slips/Will Not Engage	No creep at all. AT-225, 228	ON vehicle	1. Fluid level	AT-62			GI
			2. Line pressure test	AT-66			MA
			3. Control valve assembly	AT-303			EM
		OFF vehicle	4. Forward clutch	AT-328			LC
			5. Oil pump	AT-299			EC
			6. Torque converter	AT-282			
No Up Shift	Failure to change gear from "D ₁ " to "D ₂ ".	ON vehicle	1. PNP switch adjustment	AT-272			FE
			2. Control cable adjustment	AT-272			CL
			3. Shift solenoid valve A	AT-178			MT
			4. Control valve assembly	AT-303			
			5. Vehicle speed sensor-A/T (Revolution sensor) and vehicle speed sensor-MTR	AT-121, AT-205			AT
		6. Brake band	AT-348				
	Failure to change gear from "D ₂ " to "D ₃ ".	ON vehicle	1. PNP switch adjustment	AT-272			AX
			2. Control cable adjustment	AT-272			SU
			3. Shift solenoid valve B	AT-182			BR
			4. Control valve assembly	AT-303			ST
			5. Vehicle speed sensor-A/T (Revolution sensor) and vehicle speed sensor-MTR	AT-121, AT-205			
		OFF vehicle	6. High clutch	AT-323			RS
			7. Brake band	AT-348			BT
	Failure to change gear from "D ₃ " to "D ₄ ".	ON vehicle	1. PNP switch adjustment	AT-272			HA
			2. Control cable adjustment	AT-272			
3. Shift solenoid valve A			AT-178			SC	
4. Vehicle speed sensor-A/T (Revolution sensor) and vehicle speed sensor-MTR			AT-121, AT-205			EL	
5. A/T fluid temperature sensor			AT-115			IDX	
OFF vehicle		6. Brake band	AT-348				

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

Symptom Chart (Cont'd)

Items	Symptom	Condition	Diagnostic Item	Reference Page		
				QG18DE (Calif. CA Model)	SR20DE	QG18DE (Except Calif. CA Model)
Improper Shift Timing	Too high a gear change point from "D ₁ " to "D ₂ ", from "D ₂ " to "D ₃ ", from "D ₃ " to "D ₄ ". AT-234, AT-237, AT-240	ON vehicle	1. Throttle position sensor (Adjustment)	EC-871 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-1529 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-196 , "DTC P0120 THROTTLE POSITION SENSOR"
			2. Vehicle speed sensor-A/T (Revolution sensor) and vehicle speed sensor-MTR	AT-121, AT-205		
			3. Shift solenoid valve A	AT-178		
			4. Shift solenoid valve B	AT-182		
	Gear change directly from "D ₁ " to "D ₃ " occurs.	ON vehicle	1. Fluid level	AT-62		
			2. Accumulator servo release	AT-303		
		OFF vehicle	3. Brake band	AT-348		
Not Used	Engine stops when shifting lever into "R", "D", "2" and "1".	ON vehicle	1. Engine idling rpm	EC-746 , "Idle Speed/ Ignition Timing/ Idle Mix- ture Ratio Adjust- ment"	EC-1407 , "Idle Speed/ Ignition Timing/ Idle Mix- ture Ratio Adjust- ment"	EC-71 , "Idle Speed/ Ignition Timing/ Idle Mix- ture Ratio Adjust- ment"
			2. Torque converter clutch sole- noid valve	AT-158		
			3. Control valve assembly	AT-303		
		OFF vehicle	4. Torque converter	AT-282		

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

Symptom Chart (Cont'd)

Items	Symptom	Condition	Diagnostic Item	Reference Page			
				QG18DE (Calif. CA Model)	SR20DE	QG18DE (Except Calif. CA Model)	
Shift Shock	Too sharp a shock in change from "D ₁ " to "D ₂ ".	ON vehicle	1. Throttle position sensor (Adjustment)	EC-871 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-1529 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-196 , "DTC P0120 THROTTLE POSITION SENSOR"	GI MA EM LC
			2. Line pressure test	AT-66			
			3. Accumulator servo release	AT-303			EC
			4. Control valve assembly	AT-303			
			5. A/T fluid temperature sensor	AT-115			FE
		OFF vehicle	6. Brake band	AT-348			
	Too sharp a shock in change from "D ₂ " to "D ₃ ".	ON vehicle	1. Throttle position sensor (Adjustment)	EC-871 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-1529 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-196 , "DTC P0120 THROTTLE POSITION SENSOR"	CL MT AT
			2. Line pressure test	AT-66			
			3. Control valve assembly	AT-303			AX
		OFF vehicle	4. High clutch	AT-323			
			5. Brake band	AT-348			SU
	Too sharp a shock in change from "D ₃ " to "D ₄ ".	ON vehicle	1. Throttle position sensor (Adjustment)	EC-871 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-1529 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-196 , "DTC P0120 THROTTLE POSITION SENSOR"	BR ST
			2. Line pressure test	AT-66			
			3. Control valve assembly	AT-303			RS
		OFF vehicle	4. Brake band	AT-348			
		5. Overrun clutch	AT-339			BT	

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

Symptom Chart (Cont'd)

Items	Symptom	Condition	Diagnostic Item	Reference Page			
				QG18DE (Calif. CA Model)	SR20DE	QG18DE (Except Calif. CA Model)	
Slips/Will Not Engage	Almost no shock or clutches slipping in change from "D ₁ " to "D ₂ ".	ON vehicle	1. Fluid level	AT-62			
			2. Throttle position sensor (Adjustment)	EC-871 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-1529 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-196 , "DTC P0120 THROTTLE POSITION SENSOR"	
			3. Line pressure test	AT-66			
			4. Accumulator servo release	AT-303			
			5. Control valve assembly	AT-303			
			OFF vehicle	6. Brake band	AT-348		
	Almost no shock or slipping in change from "D ₂ " to "D ₃ ".	ON vehicle	1. Fluid level	AT-62			
			2. Throttle position sensor (Adjustment)	EC-871 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-1529 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-196 , "DTC P0120 THROTTLE POSITION SENSOR"	
			3. Line pressure test	AT-66			
			4. Control valve assembly	AT-303			
			OFF vehicle	5. High clutch	AT-323		
			6. Brake band	AT-348			
	Almost no shock or slipping in change from "D ₃ " to "D ₄ ".	ON vehicle	1. Fluid level	AT-62			
			2. Throttle position sensor (Adjustment)	EC-871 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-1529 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-196 , "DTC P0120 THROTTLE POSITION SENSOR"	
			3. Line pressure test	AT-66			
			4. Control valve assembly	AT-303			
			OFF vehicle	5. High clutch	AT-323		
			6. Brake band	AT-348			

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

Symptom Chart (Cont'd)

Items	Symptom	Condition	Diagnostic Item	Reference Page			
				QG18DE (Calif. CA Model)	SR20DE	QG18DE (Except Calif. CA Model)	
Not Used	Vehicle braked by gear change from "D ₁ " to "D ₂ ".	ON vehicle	1. Fluid level	AT-62			GI
		OFF vehicle	2. Reverse clutch	AT-319			MA
			3. Low & reverse brake	AT-335			EM
			4. High clutch	AT-323			LC
			5. Low one-way clutch	AT-277			EC
	Vehicle braked by gear change from "D ₂ " to "D ₃ ".	ON vehicle	1. Fluid level	AT-62			FE
		OFF vehicle	2. Brake band	AT-348			CL
	Vehicle braked by gear change from "D ₃ " to "D ₄ ".	ON vehicle	1. Fluid level	AT-62			MT
		OFF vehicle	2. Overrun clutch	AT-328			AT
			3. Forward one-way clutch	AT-339			AX
			4. Reverse clutch	AT-319			SU
	Maximum speed not attained. Acceleration poor.	ON vehicle	1. Fluid level	AT-62			BR
			2. PNP switch adjustment	AT-272			ST
			3. Shift solenoid valve A	AT-178			RS
			4. Shift solenoid valve B	AT-182			BT
5. Control valve assembly			AT-303			HA	
OFF vehicle		6. Reverse clutch	AT-319			SC	
		7. High clutch	AT-323			EL	
		8. Brake band	AT-348			IDX	
		9. Low & reverse brake	AT-335				
		10. Oil pump	AT-299				
		11. Torque converter	AT-282				

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

Symptom Chart (Cont'd)

Items	Symptom	Condition	Diagnostic Item	Reference Page		
				QG18DE (Calif. CA Model)	SR20DE	QG18DE (Except Calif. CA Model)
No Down Shift	Failure to change gear from "D ₄ " to "D ₃ ".	ON vehicle	1. Fluid level	AT-62		
			2. Throttle position sensor (Adjustment)	EC-871 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-1529 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-196 , "DTC P0120 THROTTLE POSITION SENSOR"
			3. Overrun clutch solenoid valve	AT-194		
			4. Shift solenoid valve A	AT-178		
			5. Line pressure solenoid valve	AT-173		
			6. Control valve assembly	AT-303		
		OFF vehicle	7. Low & reverse brake	AT-335		
			8. Overrun clutch	AT-328		
	Failure to change gear from "D ₃ " to "D ₂ " or from "D ₄ " to "D ₂ ".	ON vehicle	1. Fluid level	AT-62		
			2. Throttle position sensor (Adjustment)	EC-871 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-1529 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-196 , "DTC P0120 THROTTLE POSITION SENSOR"
			3. Shift solenoid valve A	AT-178		
			4. Shift solenoid valve B	AT-182		
			5. Control valve assembly	AT-303		
		OFF vehicle	6. High clutch	AT-323		
			7. Brake band	AT-348		
Failure to change gear from "D ₂ " to "D ₁ " or from "D ₃ " to "D ₁ ".	ON vehicle	1. Fluid level	AT-62			
		2. Throttle position sensor (Adjustment)	EC-871 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-1529 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-196 , "DTC P0120 THROTTLE POSITION SENSOR"	
		3. Shift solenoid valve A	AT-178			
		4. Shift solenoid valve B	AT-182			
		5. Control valve assembly	AT-303			
	OFF vehicle	6. Low one-way clutch	AT-277			
		7. High clutch	AT-323			
		8. Brake band	AT-348			

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

Symptom Chart (Cont'd)

Items	Symptom	Condition	Diagnostic Item	Reference Page			
				QG18DE (Calif. CA Model)	SR20DE	QG18DE (Except Calif. CA Model)	
Shift Shock	Gear change shock felt during deceleration by releasing accelerator pedal.	ON vehicle	1. Throttle position sensor (Adjustment)	EC-871 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-1529 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-196 , "DTC P0120 THROTTLE POSITION SENSOR"	GI MA EM LC
			2. Line pressure test	AT-66			
			3. Overrun clutch solenoid valve	AT-194			EC
			4. Control valve assembly	AT-303			FE
Improper Shift Timing	Too high a change point from "D ₄ " to "D ₃ ", from "D ₃ " to "D ₂ ", from "D ₂ " to "D ₁ ".	ON vehicle	1. Throttle position sensor (Adjustment)	EC-871 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-1529 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-196 , "DTC P0120 THROTTLE POSITION SENSOR"	CL MT
			2. Vehicle speed sensor-A/T (Revolution sensor) and vehicle speed sensor-MTR	AT-121, AT-205			AT
	Kickdown does not operate when depressing pedal in "D ₄ " within kickdown vehicle speed.	ON vehicle	1. Throttle position sensor (Adjustment)	EC-871 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-1529 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-196 , "DTC P0120 THROTTLE POSITION SENSOR"	AX SU
			2. Revolution sensor and vehicle speed sensor	AT-121, AT-205			BR
			3. Shift solenoid valve A	AT-178			
			4. Shift solenoid valve B	AT-182			ST
	Kickdown operates or engine overruns when depressing pedal in "D ₄ " beyond kickdown vehicle speed limit.	ON vehicle	1. Vehicle speed sensor-A/T (Revolution sensor) and vehicle speed sensor-MTR	AT-121, AT-205			RS
			2. Throttle position sensor (Adjustment)	EC-871 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-1529 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-196 , "DTC P0120 THROTTLE POSITION SENSOR"	BT HA
			3. Shift solenoid valve A	AT-178			SC
			4. Shift solenoid valve B	AT-182			

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

Symptom Chart (Cont'd)

Items	Symptom	Condition	Diagnostic Item	Reference Page		
				QG18DE (Calif. CA Model)	SR20DE	QG18DE (Except Calif. CA Model)
Slips/Will Not Engage	Races extremely fast or slips in changing from "D ₄ " to "D ₃ " when depressing pedal.	ON vehicle	1. Fluid level	AT-62		
			2. Throttle position sensor (Adjustment)	EC-871 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-1529 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-196 , "DTC P0120 THROTTLE POSITION SENSOR"
			3. Line pressure test	AT-66		
			4. Line pressure solenoid valve	AT-173		
			5. Control valve assembly	AT-303		
		OFF vehicle	6. High clutch	AT-323		
			7. Forward clutch	AT-328		
	Races extremely fast or slips in changing from "D ₄ " to "D ₂ " when depressing pedal.	ON vehicle	1. Fluid level	AT-62		
			2. Throttle position sensor (Adjustment)	EC-871 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-1529 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-196 , "DTC P0120 THROTTLE POSITION SENSOR"
			3. Line pressure test	AT-66		
			4. Line pressure solenoid valve	AT-173		
			5. Shift solenoid valve A	AT-178		
			6. Control valve assembly	AT-303		
		OFF vehicle	7. Brake band	AT-348		
			8. Forward clutch	AT-328		
	Races extremely fast or slips in changing from "D ₃ " to "D ₂ " when depressing pedal.	ON vehicle	1. Fluid level	AT-62		
			2. Throttle position sensor (Adjustment)	EC-871 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-1529 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-196 , "DTC P0120 THROTTLE POSITION SENSOR"
			3. Line pressure test	AT-66		
			4. Line pressure solenoid valve	AT-173		
			5. Control valve assembly	AT-303		
			6. A/T fluid temperature sensor	AT-115		
OFF vehicle		7. Brake band	AT-348			
		8. Forward clutch	AT-328			
		9. High clutch	AT-323			

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

Symptom Chart (Cont'd)

Items	Symptom	Condition	Diagnostic Item	Reference Page			
				QG18DE (Calif. CA Model)	SR20DE	QG18DE (Except Calif. CA Model)	
Slips/Will Not Engage	Races extremely fast or slips in changing from "D ₄ " or "D ₃ " to "D ₁ " when depressing pedal.	ON vehicle	1. Fluid level	AT-62			GI
			2. Throttle position sensor (Adjustment)	EC-871 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-1529 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-196 , "DTC P0120 THROTTLE POSITION SENSOR"	MA EM LC
			3. Line pressure test	AT-66			EC
			4. Line pressure solenoid valve	AT-173			FE
			5. Control valve assembly	AT-303			FE
		6. Forward clutch	AT-328			CL	
		7. Forward one-way clutch	AT-339			CL	
		8. Low one-way clutch	AT-277			MT	
	Vehicle will not run in any position.	ON vehicle	1. Fluid level	AT-62			AT
			2. Control cable adjustment	AT-272			AX
			3. Line pressure test	AT-66			AX
			4. Line pressure solenoid valve	AT-173			AX
		OFF vehicle	5. Oil pump	AT-299			SU
			6. High clutch	AT-323			SU
7. Brake band			AT-348			BR	
8. Low & reverse brake			AT-335			BR	
9. Torque converter			AT-282			ST	
10. Parking components			AT-277			ST	
Not Used	Transmission noise in "D", "2", "1" and "R" positions.	ON vehicle	1. Fluid level	AT-62			RS
		OFF vehicle	2. Torque converter	AT-282			RS
No Down Shift	Failure to change from "D ₃ " to "2" when changing lever into "2" position. AT-252	ON vehicle	1. PNP switch adjustment	AT-272			BT
			2. Throttle position sensor (Adjustment)	EC-871 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-1529 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-196 , "DTC P0120 THROTTLE POSITION SENSOR"	HA SC
			3. Overrun clutch solenoid valve	AT-194			SC
			4. Shift solenoid valve B	AT-182			EL
			5. Shift solenoid valve A	AT-178			EL
			6. Control valve assembly	AT-303			IDX
			7. Control cable adjustment	AT-272			IDX
		OFF vehicle	8. Brake band	AT-348			
			9. Overrun clutch	AT-328			

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

Symptom Chart (Cont'd)

Items	Symptom	Condition	Diagnostic Item	Reference Page		
				QG18DE (Calif. CA Model)	SR20DE	QG18DE (Except Calif. CA Model)
Improper Shift Timing	Gear change from "2 ₂ " to "2 ₃ " in "2" position.	ON vehicle	1. PNP switch adjustment	AT-272		
Not Used	Engine brake does not operate in "1" position. AT-253	ON vehicle	1. PNP switch adjustment	AT-272		
			2. Control cable adjustment	AT-272		
			3. Throttle position sensor (Adjustment)	EC-871 , "DTC" P0120 THROTTLE POSITION SENSOR"	EC-1529 , "DTC" P0120 THROTTLE POSITION SENSOR"	EC-196 , "DTC" P0120 THROTTLE POSITION SENSOR"
			4. Vehicle speed sensor-A/T (Revolution sensor) and vehicle speed sensor-MTR	AT-121, AT-205		
			5. Shift solenoid valve A	AT-178		
			6. Control valve assembly	AT-303		
			7. Overrun clutch solenoid valve	AT-194		
		OFF vehicle	8. Overrun clutch	AT-339		
		9. Low & reverse brake	AT-335			
Improper Shift Timing	Gear change from "1 ₁ " to "1 ₂ " in "1" position.	ON vehicle	1. PNP switch adjustment	AT-272		
No Down Shift	Does not change from "1 ₂ " to "1 ₁ " in "1" position.	ON vehicle	2. Control cable adjustment	AT-272		
			1. PNP switch adjustment	AT-272		
			2. Vehicle speed sensor-A/T (Revolution sensor) and vehicle speed sensor-MTR	AT-121, AT-205		
			3. Shift solenoid valve A	AT-178		
			4. Control valve assembly	AT-303		
		5. Overrun clutch solenoid valve	AT-194			
		OFF vehicle	6. Overrun clutch	AT-328		
7. Low & reverse brake	AT-335					
Shift Shock	Large shock changing from "1 ₂ " to "1 ₁ " in "1" position.	ON vehicle	1. Control valve assembly	AT-303		
		OFF vehicle	2. Low & reverse brake	AT-335		

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

Symptom Chart (Cont'd)

Items	Symptom	Condition	Diagnostic Item	Reference Page			
				QG18DE (Calif. CA Model)	SR20DE	QG18DE (Except Calif. CA Model)	
Not used	Transaxle overheats.	ON vehicle	1. Fluid level	AT-62			GI
			2. Engine idling rpm	EC-746 , "Idle Speed/ Ignition Timing/ Idle Mix- ture Ratio Adjust- ment"	EC-1407 , "Idle Speed/ Ignition Timing/ Idle Mix- ture Ratio Adjust- ment"	EC-71 , "Idle Speed/ Ignition Timing/ Idle Mix- ture Ratio Adjust- ment"	MA EM LC EC
			3. Throttle position sensor (Adjustment)	EC-871 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-1529 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-196 , "DTC P0120 THROTTLE POSITION SENSOR"	FE CL
			4. Line pressure test	AT-66			MT
			5. Line pressure solenoid valve	AT-173			AT
			6. Control valve assembly	AT-303			AX
		OFF vehicle	7. Oil pump	AT-299			SU
			8. Reverse clutch	AT-319			BR
			9. High clutch	AT-323			ST
			10. Brake band	AT-348			RS
			11. Forward clutch	AT-328			BT
			12. Overrun clutch	AT-328			HA
			13. Low & reverse brake	AT-335			SC
			14. Torque converter	AT-282			EL IDX

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

Symptom Chart (Cont'd)

Items	Symptom	Condition	Diagnostic Item	Reference Page		
				QG18DE (Calif. CA Model)	SR20DE	QG18DE (Except Calif. CA Model)
Not Used	ATF shoots out during operation. White smoke emitted from exhaust pipe during operation.	ON vehicle	1. Fluid level	AT-62		
		OFF vehicle	2. Reverse clutch	AT-319		
			3. High clutch	AT-323		
			4. Brake band	AT-348		
			5. Forward clutch	AT-328		
			6. Overrun clutch	AT-328		
			7. Low & reverse brake	AT-335		
	Offensive smell at fluid charging pipe.	ON vehicle	1. Fluid level	AT-62		
		OFF vehicle	2. Torque converter	AT-282		
			3. Oil pump	AT-299		
			4. Reverse clutch	AT-319		
			5. High clutch	AT-323		
			6. Brake band	AT-348		
			7. Forward clutch	AT-328		
			8. Overrun clutch	AT-328		
9. Low & reverse brake	AT-335					

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

Symptom Chart (Cont'd)

Items	Symptom	Condition	Diagnostic Item	Reference Page			
				QG18DE (Calif. CA Model)	SR20DE	QG18DE (Except Calif. CA Model)	
No Lockup Engagement/ TCC Inopera- tive	Torque converter is not locked up.	ON vehicle	1. Throttle position sensor (Adjustment)	EC-871 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-1529 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-196 , "DTC P0120 THROTTLE POSITION SENSOR"	GI MA EM LC
			2. Vehicle speed sensor-A/T (Revolution sensor) and vehicle speed sensor-MTR	AT-121, AT-205			EC
			3. PNP switch adjustment	AT-272			FE
			4. Engine speed signal	AT-126			
			5. A/T fluid temperature sensor	AT-115			CL
			6. Line pressure test	AT-66			
			7. Torque converter clutch sole- noid valve	AT-158			MT
			8. Control valve assembly	AT-303			
		OFF vehicle	9. Torque converter	AT-282			AT
	Torque converter clutch pis- ton slip.	ON vehicle	1. Fluid level	AT-62			AX
			2. Throttle position sensor (Adjustment)	EC-871 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-1529 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-196 , "DTC P0120 THROTTLE POSITION SENSOR"	SU BR
			3. Line pressure test	AT-66			
			4. Torque converter clutch sole- noid valve	AT-158			ST
			5. Line pressure solenoid valve	AT-173			
			6. Control valve assembly	AT-303			RS
		OFF vehicle	7. Torque converter	AT-282			BT
	Lock-up point is extremely high or low. AT-243	ON vehicle	1. Throttle position sensor (Adjustment)	EC-871 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-1529 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-196 , "DTC P0120 THROTTLE POSITION SENSOR"	HA SC
			2. Vehicle speed sensor-A/T (Revolution sensor) and vehicle speed sensor-MTR	AT-121, AT-205			EL
			3. Torque converter clutch sole- noid valve	AT-158			
			4. Control valve assembly	AT-303			IDX


TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

Symptom Chart (Cont'd)

Items	Symptom	Condition	Diagnostic Item	Reference Page		
				QG18DE (Calif. CA Model)	SR20DE	QG18DE (Except Calif. CA Model)
No Up Shift	A/T does not shift to "D ₄ " when driving with overdrive control switch "ON".	ON vehicle	1. Throttle position sensor (Adjustment)	EC-871 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-1529 , "DTC P0120 THROTTLE POSITION SENSOR"	EC-196 , "DTC P0120 THROTTLE POSITION SENSOR"
			2. PNP switch adjustment	AT-272		
			3. Vehicle speed sensor-A/T (Revolution sensor) and vehicle speed sensor-MTR	AT-121, AT-205		
			4. Shift solenoid valve A	AT-178		
			5. Overrun clutch solenoid valve	AT-194		
			6. Control valve assembly	AT-303		
			7. A/T fluid temperature sensor	AT-115		
			8. Line pressure test	AT-66		
		OFF vehicle	9. Brake band	AT-348		
			10. Overrun clutch	AT-328		
Not Used	Engine is stopped at "R", "D", "2" and "1" positions.	ON vehicle	1. Fluid level	AT-62		
			2. Torque converter clutch solenoid valve	AT-158		
			3. Shift solenoid valve B	AT-182		
			4. Shift solenoid valve A	AT-178		
			5. Control valve assembly	AT-303		

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

TCM Terminals and Reference Value

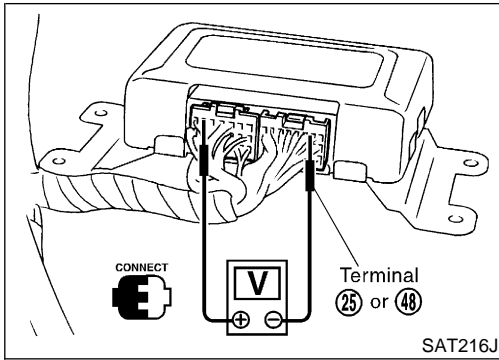

TCM Terminals and Reference Value

NIAT0033


PREPARATION

NIAT0033S01

- Measure voltage between each terminal and terminal 25 or 48 by following "TCM INSPECTION TABLE".

TCM HARNESS CONNECTOR TERMINAL LAYOUT

NIAT0033S02

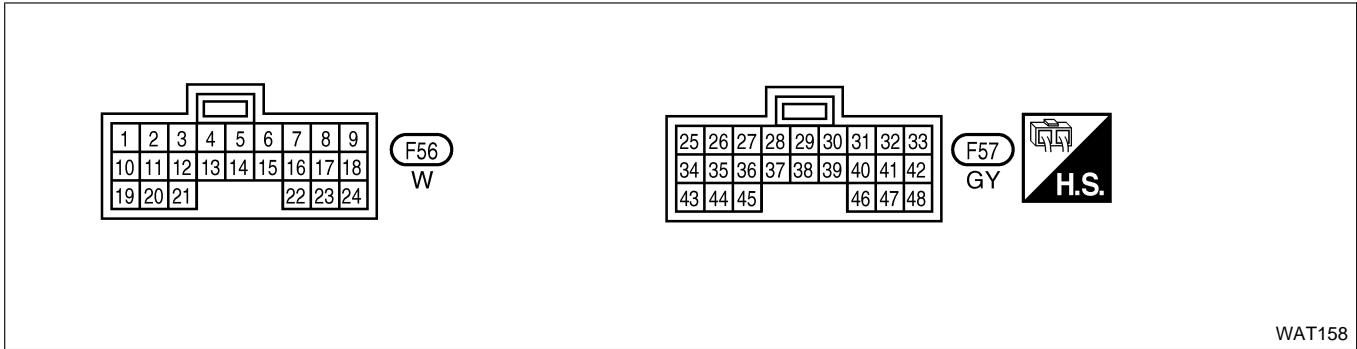

TCM INSPECTION TABLE










(Data are reference values.)

NIAT0033S03

Terminal No.	Wire color	Item	Condition	Judgement standard (Approx.)	
1	R/W	Line pressure solenoid valve		When releasing accelerator pedal after warming up engine.	1.5 - 3.0V
				When depressing accelerator pedal fully after warming up engine.	0V
2	P/B	Line pressure solenoid valve (with dropping resistor)		When releasing accelerator pedal after warming up engine.	4 - 14V
				When depressing accelerator pedal fully after warming up engine.	0V
3	GY/R	Torque converter clutch solenoid valve		When A/T performs lock-up.	8 - 15V
				When A/T does not perform lock-up.	0V
5 *2	Y/R	—	—	—	
6 *2	Y/G	—	—	—	
7 *2	Y/B	—	—	—	
8*2	BR/W	—		—	
9*2	G/Y	—		—	
10	BR/R	Power source		When turning ignition switch to "ON".	Battery voltage
				When turning ignition switch to "OFF".	0V







TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

TCM Terminals and Reference Value (Cont'd)

Terminal No.	Wire color	Item	Condition		Judgement standard (Approx.)
11	L/W	Shift solenoid valve A		When shift solenoid valve A operates. (When driving in "D ₁ " or "D ₄ ".)	Battery voltage
				When shift solenoid valve A does not operate. (When driving in "D ₂ " or "D ₃ ".)	0V
12	L/Y	Shift solenoid valve B		When shift solenoid valve B operates. (When driving in "D ₁ " or "D ₂ ".)	Battery voltage
				When shift solenoid valve B does not operate. (When driving in "D ₃ " or "D ₄ ".)	0V
13	G/R	O/D OFF indicator lamp		When setting overdrive control switch in "OFF" position.	0V
				When setting overdrive control switch in "ON" position.	Battery voltage
15 *2	PU	OBD-II		—	—
16	Y/PU	Closed throttle position switch (in throttle position switch)		When releasing accelerator pedal after warming up engine. Refer to "TCM SELF-DIAGNOSTIC PROCEDURE (No tools)", AT-49.	Battery voltage
				When depressing accelerator pedal after warming up engine. Refer to "TCM SELF-DIAGNOSTIC PROCEDURE (No tools)", AT-49.	0V
17	LG	Wide open throttle position switch (in throttle position switch)		When depressing accelerator pedal more than half-way after warming up engine.	Battery voltage
				When releasing accelerator pedal after warming up engine.	0V
18	OR	ASCD cruise switch		When ASCD cruise is being performed. ("CRUISE" light comes on.)	Battery voltage
				When ASCD cruise is not being performed. ("CRUISE" light does not come on.)	0V
19	BR/R	Power source		When turning ignition switch to "ON".	Battery voltage
				When turning ignition switch to "OFF".	0V
20	L/B	Overrun clutch solenoid valve		When overrun clutch solenoid valve operates.	Battery voltage
				When overrun clutch solenoid valve does not operate.	0V
22	OR/B	Overdrive control switch		When setting overdrive control switch in "ON" position	Battery voltage
				When setting overdrive control switch in "OFF" position	0V






TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

TCM Terminals and Reference Value (Cont'd)

Terminal No.	Wire color	Item	Condition		Judgement standard (Approx.)	
24	W/PU	ASCD OD cut signal		When "ACCEL" set switch on ASCD cruise is in "D ₄ " position.	5 - 10V	GI
				When "ACCEL" set switch on ASCD cruise is in "D ₃ " position.	Less than 2V	MA
25	B	Ground		—	0V	EM
26	BR/Y	PNP switch "1" position		When setting selector lever to "1" position.	Battery voltage	LC
				When setting selector lever to other positions.	0V	EC
27	L	PNP switch "2" position		When setting selector lever to "2" position.	Battery voltage	FE
				When setting selector lever to other positions.	0V	CL
28	R/B	Power source (Memory back-up)	 or 	When turning ignition switch to "OFF".	Battery voltage	MT
				When turning ignition switch to "ON".	Battery voltage	AT
29	W	Revolution sensor		When moving at 20 km/h (12 MPH), use the CONSULT-II pulse frequency measuring function.*1 CAUTION: Connect the diagnosis data link cable to the vehicle diagnosis connector. *1: A circuit tester cannot be used to test this item.	150Hz	AX
				When vehicle parks.	Under 1.3V or over 4.5V	SU
						BR
						ST
						RS
						BT
						HA
						SC
						EL
						IDX

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

TCM Terminals and Reference Value (Cont'd)

Terminal No.	Wire color	Item	Condition	Judgement standard (Approx.)	
30 *3	G/B	Data link connector	—	—	
31 *3	GY/L	Data link connector	—	—	
32	R	Throttle position sensor (Power source)	When turning ignition switch to "ON".	4.5 - 5.5V	
			When turning ignition switch to "OFF".	0V	
34	W/G	PNP switch "D" position		When setting selector lever to "D" position.	Battery voltage
				When setting selector lever to other positions.	0V
35	G/W	PNP switch "R" position		When setting selector lever to "R" position.	Battery voltage
				When setting selector lever to other positions.	0V
36	G	PNP switch "N" or "P" position		When setting selector lever to "N" or "P" position.	Battery voltage
				When setting selector lever to other positions.	0V
39	L/OR	Engine speed signal	 Refer to EC-154 [QG18DE (except Calif. CA Model)], EC-824 [QG18DE (Calif. CA Model)], EC-1487 (SR20DE), "ECM Inspection Table".	—	
40	PU/R	Vehicle speed sensor		When moving vehicle at 2 to 3 km/h (1 to 2 MPH) for 1 m (3 ft) or more.	Voltage varies between less than 1V and more than 4.5V
41	GY	Throttle position sensor		When depressing accelerator pedal slowly after warming up engine. (Voltage rises gradually in response to throttle position.)	Fully-closed throttle: 0.5 - 0.7V Fully-open throttle: 4V
42	B	Throttle position sensor (Ground)		—	0V
45	R/G	Stop lamp switch		When depressing brake pedal.	Battery voltage
				When releasing brake pedal.	0V
47	BR	A/T fluid temperature sensor		When ATF temperature is 20°C (68°F).	1.5V
				When ATF temperature is 80°C (176°F).	0.5V
48	B	Ground	—	0V	

*2: This terminal is connected to the ECM.

*3: These terminals are connected to the Data link connector.



TROUBLE DIAGNOSIS FOR POWER SUPPLY

Wiring Diagram — AT — MAIN

Wiring Diagram — AT — MAIN

NIAT0034

AT-MAIN-01

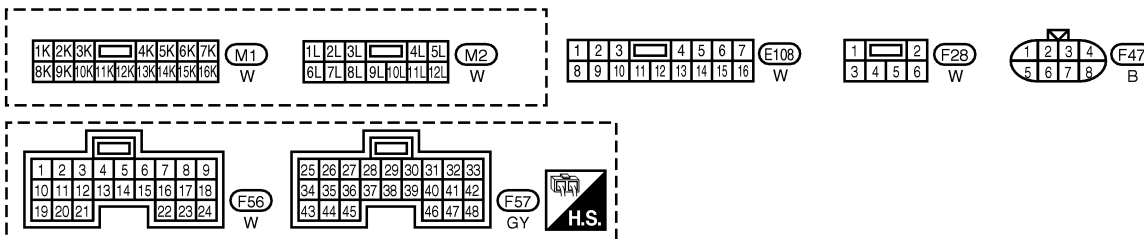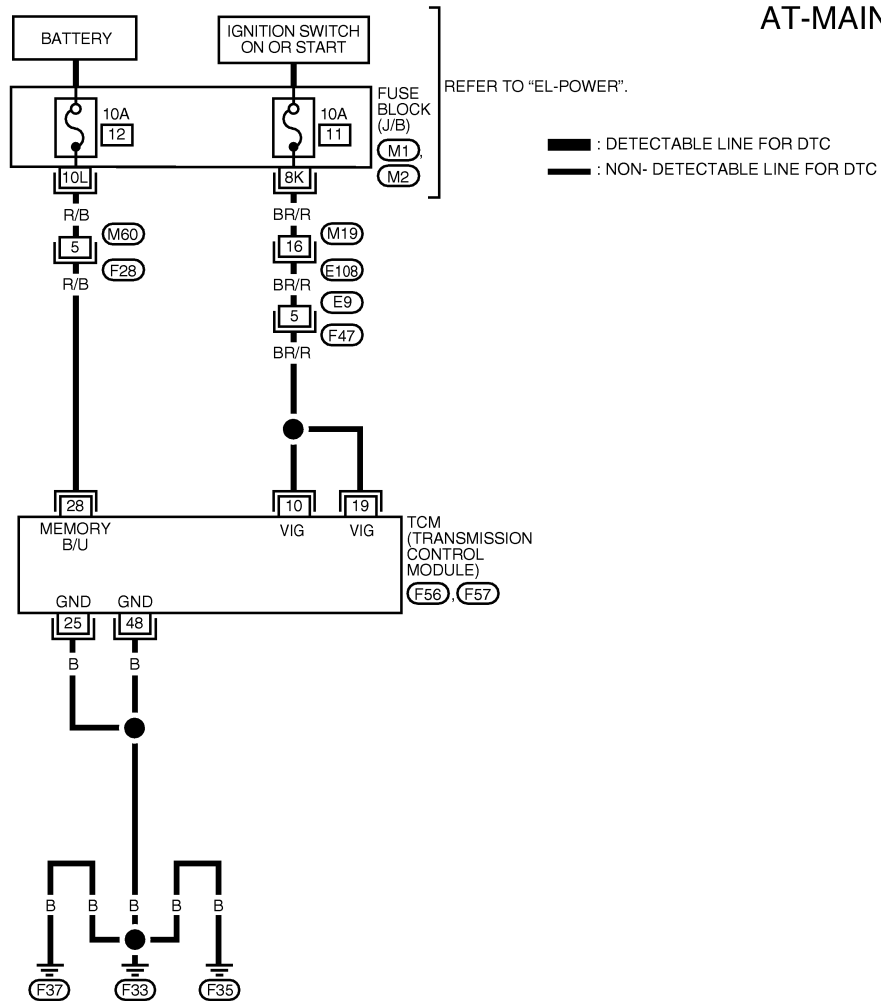

WAT113

TRANSMISSION CONTROL MODULE TERMINALS AND REFERENCE VALUE BETWEEN TERMINAL AND GROUND

TERMINAL	WIRE COLOR	ITEM	CONDITION	DATA (DC) (Approx.)
10	BR/R	POWER SOURCE	WHEN TURNING IGNITION SWITCH TO "ON"	BATTERY VOLTAGE
			WHEN TURNING IGNITION SWITCH TO "OFF"	0V
19	BR/R	POWER SOURCE	WHEN TURNING IGNITION SWITCH TO "ON"	BATTERY VOLTAGE
			WHEN TURNING IGNITION SWITCH TO "OFF"	0V
25	B	GROUND	—	0C
28	R/B	POWER SOURCE (MEMORY BACKUP)	WHEN TURNING IGNITION SWITCH TO "OFF"	BATTERY VOLTAGE
			WHEN TURNING IGNITION SWITCH TO "ON"	BATTERY VOLTAGE
48	B	GROUND	—	0V

WAT338

TROUBLE DIAGNOSIS FOR POWER SUPPLY

Diagnostic Procedure

Diagnostic Procedure

NIAT0330

1	CHECK TCM POWER SOURCE STEP 1	
<p>1. Turn ignition switch to ON position. (Do not start engine.)</p> <p>2. Check voltage between TCM terminals 10, 19, 28 and ground.</p>		
OK	▶	GO TO 2.
NG	▶	GO TO 3.

SAT611J

2	CHECK TCM POWER SOURCE STEP 2	
<p>1. Turn ignition switch to OFF position.</p> <p>2. Check voltage between TCM terminal 28 and ground.</p>		
OK	▶	GO TO 4.
NG	▶	GO TO 3.

LAT253

3	DETECT MALFUNCTIONING ITEM	
<p>Check the following items:</p> <ul style="list-style-type: none"> ● Harness for short or open between ignition switch and TCM terminals 10, 19 and 28 (Main harness) ● Fuse ● Ignition switch <p>Refer to EL-9, "POWER SUPPLY ROUTING".</p>		
OK or NG		
OK	▶	GO TO 4.
NG	▶	Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR POWER SUPPLY


Diagnostic Procedure (Cont'd)

4	CHECK TCM GROUND CIRCUIT	
	<p>1. Turn ignition switch to OFF position.</p> <p>2. Disconnect TCM harness connector.</p> <p>3. Check continuity between TCM terminals 25, 48 and ground. Refer to wiring diagram, AT-107.</p> <p style="padding-left: 20px;">Continuity should exist.</p> <p style="padding-left: 20px;">If OK, check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶	INSPECTION END
NG	▶	Repair open circuit or short to ground or short to power in harness connectors.

- GI
- MA
- EM
- LC
- EC
- FE
- CL
- MT
- AT
- AX
- SU
- BR
- ST
- RS
- BT
- HA
- SC
- EL
- IDX

DTC P0705 PARK/NEUTRAL POSITION (PNP) SWITCH

Description

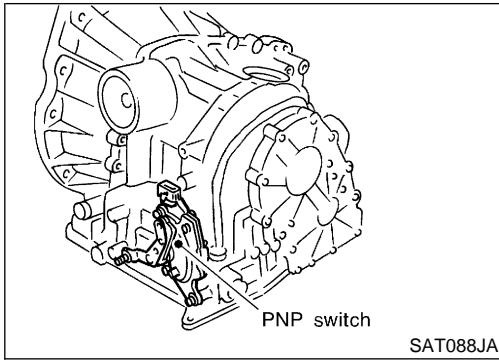


Description

- The PNP switch assembly includes a transmission range switch. NIAT0035
- The transmission range switch detects the selector lever position and sends a signal to the TCM.

ON BOARD DIAGNOSIS LOGIC

NIAT0035S02

Diagnostic trouble code	Malfunction is detected when ...	Check items (Possible cause)
(P) : PNP SW/CIRC (P) : P0705	TCM does not receive the correct voltage signal from the switch based on the gear position.	<ul style="list-style-type: none"> • Harness or connectors (The PNP switch circuit is open or shorted.) • PNP switch

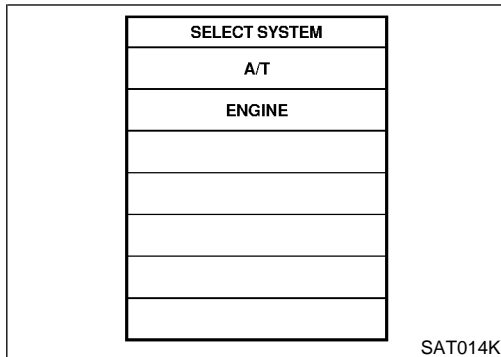

DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE

NIAT0035S03

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.


After the repair, perform the following procedure to confirm the malfunction is eliminated.

(P) With CONSULT-II

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode for "ENGINE" with CONSULT-II.
- 3) Start engine and maintain the following conditions for at least 5 consecutive seconds.
VHCL SPEED SE: 10 km/h (6 MPH) or more
THRTL POS SEN: More than 1.3V
Selector lever: D position (OD "ON" or "OFF")

(G) With GST

Follow the procedure "With CONSULT-II".

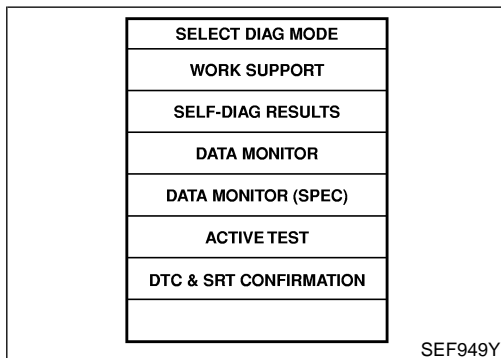





DTC P0705 PARK/NEUTRAL POSITION (PNP) SWITCH

Wiring Diagram — AT — PNP/SW

Wiring Diagram — AT — PNP/SW

NIAT0036

AT-PNP/SW-01

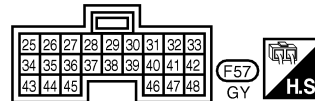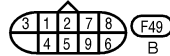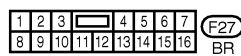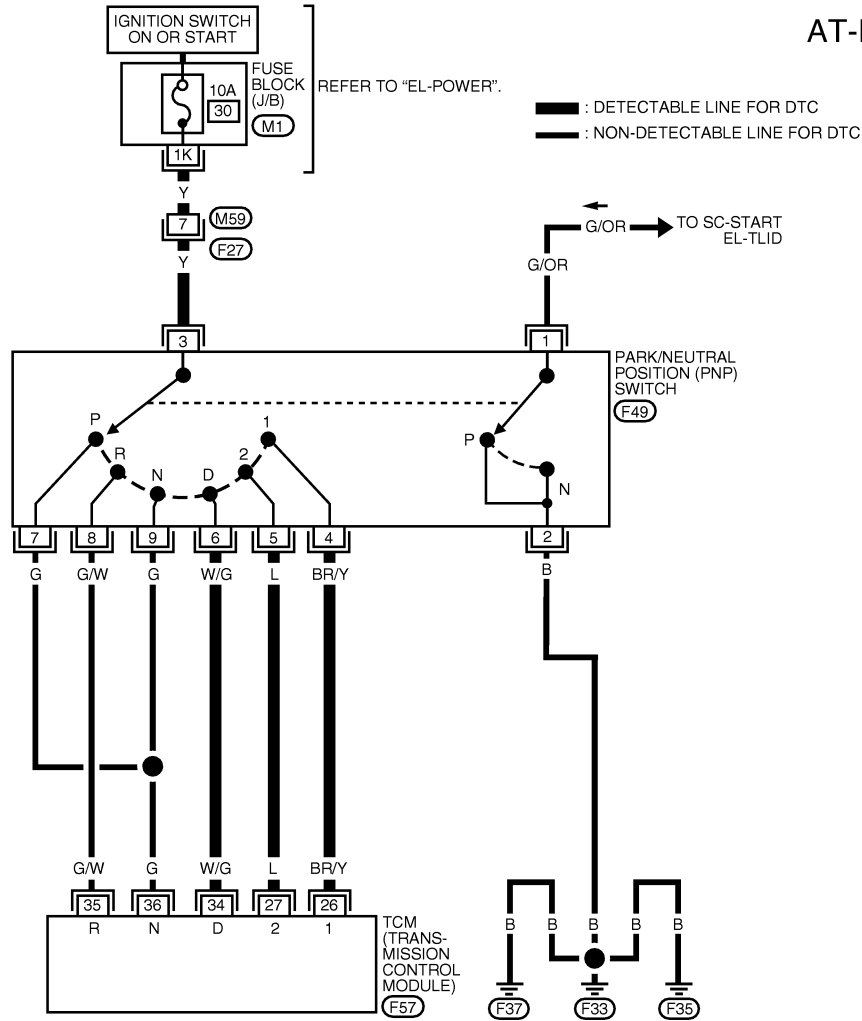

WAT114

TRANSMISSION CONTROL MODULE TERMINALS AND REFERENCE VALUE

TERMINAL	WIRE COLOR	ITEM	CONDITION	DATA (DC)(Approx.)
26	BR/Y	PNP SWITCH "1" POSITION	WHEN SETTING SELECTOR LEVER TO "1" POSITON	BATTERY VOLTAGE
			WHEN SETTING SELECTOR LEVER TO OTHER POSITIONS	0V
27	L	PNP SWITCH "2" POSITION	WHEN SETTING SELECTOR LEVER TO "2" POSITION	BATTERY VOLTAGE
			WHEN SETTING SELECTOR LEVER TO OTHER POSITIONS	0V
34	W/G	PNP SWITCH "D" POSITION	WHEN SETTING SELECTOR LEVER TO "D" POSITION	BATTERY VOLTAGE
			WHEN SETTING SELECTOR LEVER TO OTHER POSITIONS	0V
35	G/W	PNP SWITCH "R" POSITION	WHEN SETTING SELECTOR LEVER TO "R" POSTION	BATTERY VOLTAGE
			WHEN SETTING SELECTOR LEVER TO OTHER POSITIONS	0V
36	G	PNP SWITCH "N" OR "P" POSITION	WHEN SETTING SELECTOR LEVER TO "N" OR "P" POSITION	BATTERY VOLTAGE
			WHEN SETTING SELECTOR LEVER TO OTHER POSITIONS	0V


WAT339

DTC P0705 PARK/NEUTRAL POSITION (PNP) SWITCH

Diagnostic Procedure

Diagnostic Procedure

NIAT0037

1		CHECK PNP SWITCH CIRCUIT (With CONSULT-II)														
<p> With CONSULT-II</p> <ol style="list-style-type: none">Turn ignition switch to "ON" position. (Do not start engine.)Select "TCM INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.Read out "P/N", "R", "D", "2" and "1" position switches moving selector lever to each position. Check the signal of the selector lever position is indicated properly.																
<table border="1"><thead><tr><th colspan="2">DATA MONITOR</th></tr><tr><th>MONITORING</th><th></th></tr></thead><tbody><tr><td>PN POSI SW</td><td>OFF</td></tr><tr><td>R POSITION SW</td><td>OFF</td></tr><tr><td>D POSITION SW</td><td>OFF</td></tr><tr><td>2 POSITION SW</td><td>ON</td></tr><tr><td>1 POSITION SW</td><td>OFF</td></tr></tbody></table>			DATA MONITOR		MONITORING		PN POSI SW	OFF	R POSITION SW	OFF	D POSITION SW	OFF	2 POSITION SW	ON	1 POSITION SW	OFF
DATA MONITOR																
MONITORING																
PN POSI SW	OFF															
R POSITION SW	OFF															
D POSITION SW	OFF															
2 POSITION SW	ON															
1 POSITION SW	OFF															
SAT701J																
OK or NG																
OK	▶	GO TO 3.														
NG	▶	Check the following items: <ul style="list-style-type: none">PNP switch Refer to "Component Inspection", AT-114.Harness for short or open between ignition switch and PNP switch (Main harness)Harness for short or open between PNP switch and TCM (Main harness)Ignition switch and fuse Refer to EL-9, "POWER SUPPLY ROUTING".														

DTC P0705 PARK/NEUTRAL POSITION (PNP) SWITCH

Diagnostic Procedure (Cont'd)

2 CHECK PNP SWITCH CIRCUIT (Without CONSULT-II)

⊗ Without CONSULT-II

1. Turn ignition switch to "ON" position.
(Do not start engine.)
2. Check voltage between TCM terminals 26, 27, 34, 35, 36 and ground while moving selector lever through each position.


Voltage:

B: Battery voltage

0: 0V

Lever position	Terminal No.				
	36	35	34	27	26
P, N	B	0	0	0	0
R	0	B	0	0	0
D	0	0	B	0	0
2	0	0	0	B	0
1	0	0	0	0	B

MTBL0136

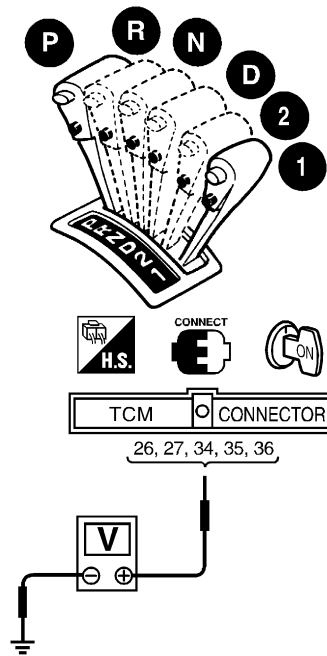

SAT425J

OK or NG

OK ► GO TO 3.



- NG ► **Check the following items:**
- PNP switch
Refer to "Component Inspection", AT-114.
 - Harness for short or open between ignition switch and PNP switch (Main harness)
 - Harness for short or open between PNP switch and TCM (Main harness)
 - Ignition switch and fuse
Refer to **EL-9**, "POWER SUPPLY ROUTING".

GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0705 PARK/NEUTRAL POSITION (PNP) SWITCH

Diagnostic Procedure (Cont'd)

3	CHECK DTC	
Perform "DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE", AT-110.		
OK or NG		
OK	▶	INSPECTION END
NG	▶	<ol style="list-style-type: none"> 1. Perform TCM input/output signal inspection. 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

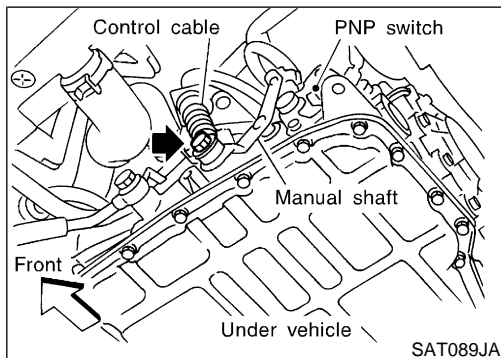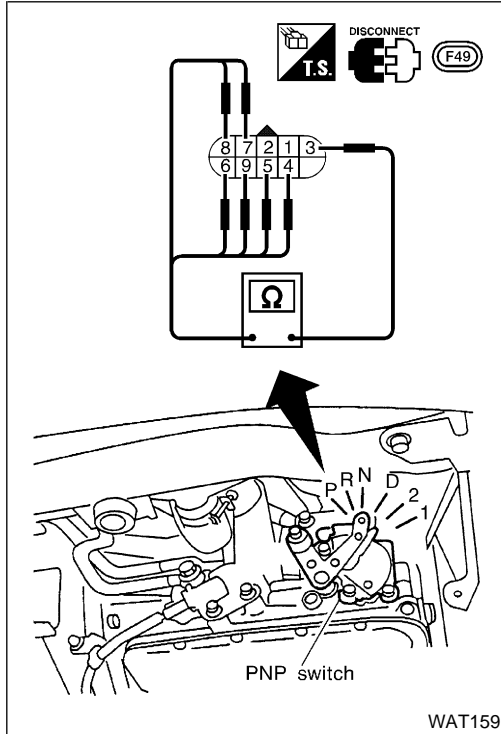

Component Inspection PARK/NEUTRAL POSITION SWITCH

NIAT0038

NIAT0038S01


1. Check continuity between terminals 1 and 3 and between terminals 2 and 4, 5, 6, 7, 8, 9 while moving manual shaft through each position.

Lever position	Terminal No.	
P	3 — 7	1 — 2
R	3 — 8	
N	3 — 9	1 — 2
D	3 — 6	
2	3 — 5	
1	3 — 4	

2. If NG, check again with control cable disconnected from manual shaft of A/T assembly. Refer to step 1.
3. If OK on step 2, adjust control cable. Refer to AT-272.
4. If NG on step 2, remove PNP switch from A/T and check continuity of PNP switch terminals. Refer to step 1.
5. If OK on step 4, adjust PNP switch. Refer to AT-272.
6. If NG on step 4, replace PNP switch.


DTC P0710 A/T FLUID TEMPERATURE SENSOR CIRCUIT

Description

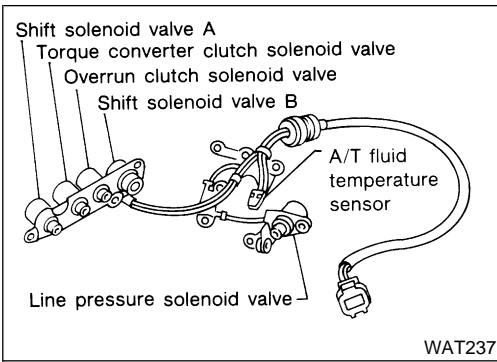

Description

The A/T fluid temperature sensor detects the A/T fluid temperature and sends a signal to the TCM. NIAT0039

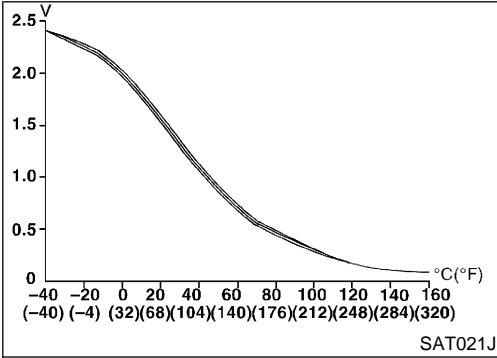

CONSULT-II REFERENCE VALUE IN DATA MONITOR MODE

NIAT0039S01

Remarks: Specification data are reference values.

Monitor item	Condition	Specification (Approx.)	
		Reference Value 1	Reference Value 2
A/T fluid temperature sensor	Cold [20°C (68°F)]	1.5V	2.5 kΩ
	Hot [80°C (176°F)]	0.5V	0.3 kΩ

ON BOARD DIAGNOSIS LOGIC

NIAT0039S03

Diagnostic trouble code	Malfunction is detected when ...	Check items (Possible cause)
P0710 : ATF TEMP SEN/CIRC P0710 : P0710	TCM receives an excessively low or high voltage from the sensor.	<ul style="list-style-type: none"> Harness or connectors (The sensor circuit is open or shorted.) A/T fluid temperature sensor

DTC P0710 A/T FLUID TEMPERATURE SENSOR CIRCUIT

Description (Cont'd)

SELECT SYSTEM
A/T
ENGINE

SAT014K

SELECT DIAG MODE
WORK SUPPORT
SELF-DIAG RESULTS
DATA MONITOR
DATA MONITOR (SPEC)
ACTIVE TEST
DTC & SRT CONFIRMATION

SEF949Y

DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE

NIAT0039S04

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

With CONSULT-II

- 1) Turn ignition switch "ON" and select "DATA MONITOR" mode for "ENGINE" with CONSULT-II.
- 2) Start engine and maintain the following conditions for at least 10 minutes (Total). (It is not necessary to maintain continuously.)

CMPS-RPM (REF): 450 rpm or more

VHCL SPEED SE: 10 km/h (6 MPH) or more

THRTL POS SEN: More than 1.2V

Selector lever: D position (OD "ON")

With GST

Follow the procedure "With CONSULT-II".



DTC P0710 A/T FLUID TEMPERATURE SENSOR CIRCUIT

Wiring Diagram — AT — FTS

Wiring Diagram — AT — FTS

NIAT0040

AT-FTS-01

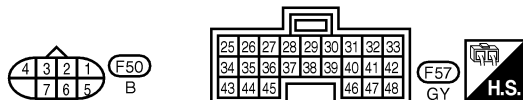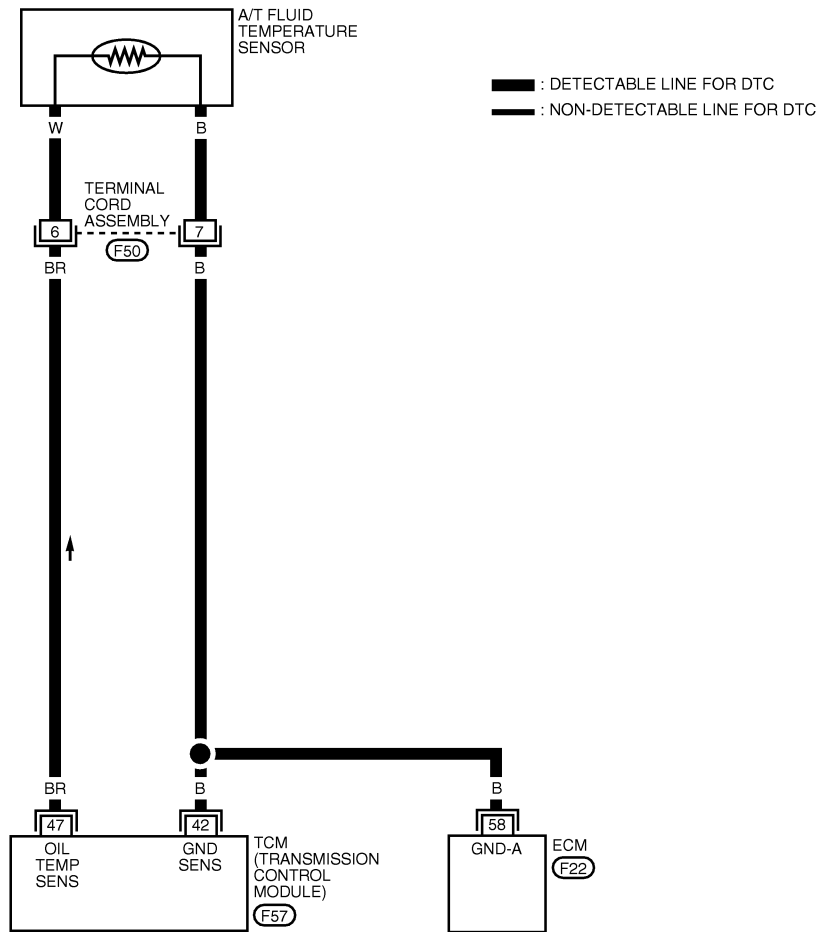

REFER TO THE FOLLOWING.
 F22 - ELECTRICAL UNITS

WAT115

TRANSMISSION CONTROL MODULE TERMINALS AND REFERENCE VALUE BETWEEN TERMINAL AND GROUND

TERMINAL	WIRE COLOR	ITEM	CONDITION	DATA (DC) (Approx.)
42	B	THROTTLE POSITION SENSOR (GROUND)	—	0V
47	BR	A/T FLUID TEMPERATURE SENSOR	WHEN ATF TEMPERATURE IS 20 ° C (68° F)	1.5V
			WHEN ATF TEMPERATURE IS 80 ° C (176° F)	0.5V

WAT340


DTC P0710 A/T FLUID TEMPERATURE SENSOR CIRCUIT

Diagnostic Procedure

Diagnostic Procedure

NIAT0041

1	INSPECTION START	
Do you have CONSULT-II?		
Yes or No		
Yes	▶	GO TO 2.
No	▶	GO TO 3.

2	CHECK INPUT SIGNAL OF A/T FLUID TEMPERATURE SENSOR (With CONSULT-II)															
<p> With CONSULT-II</p> <ol style="list-style-type: none"> Start engine. Select "TCM INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II. Read out the value of "FLUID TEMP SE". <p>Voltage: Cold [20°C (68°F)] → Hot [80°C (176°F)]: Approximately 1.5V → 0.5V</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th colspan="2">DATA MONITOR</th> </tr> <tr> <th>MONITORING</th> <th></th> </tr> </thead> <tbody> <tr> <td>VHCL/S SE-A/T</td> <td>XXX km/h</td> </tr> <tr> <td>VHCL/S SE-MTR</td> <td>XXX km/h</td> </tr> <tr> <td>THRTL POS SEN</td> <td>XXX V</td> </tr> <tr> <td>FLUID TEMP SE</td> <td>XXX V</td> </tr> <tr> <td>BATTERY VOLT</td> <td>XXX V</td> </tr> </tbody> </table> <p style="text-align: right;">SAT614J</p> <p style="text-align: center;">OK or NG</p>			DATA MONITOR		MONITORING		VHCL/S SE-A/T	XXX km/h	VHCL/S SE-MTR	XXX km/h	THRTL POS SEN	XXX V	FLUID TEMP SE	XXX V	BATTERY VOLT	XXX V
DATA MONITOR																
MONITORING																
VHCL/S SE-A/T	XXX km/h															
VHCL/S SE-MTR	XXX km/h															
THRTL POS SEN	XXX V															
FLUID TEMP SE	XXX V															
BATTERY VOLT	XXX V															
OK	▶	GO TO 4.														
NG	▶	GO TO 5.														

DTC P0710 A/T FLUID TEMPERATURE SENSOR CIRCUIT

Diagnostic Procedure (Cont'd)


3	CHECK INPUT SIGNAL OF A/T FLUID TEMPERATURE SENSOR (Without CONSULT-II)	
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> Start engine. Check voltage between TCM terminal 47 and ground while warming up A/T. Voltage: Cold [20°C (68°F)] → Hot [80°C (176°F)]: Approximately 1.5V → 0.5V 		
SAT937J		
<ol style="list-style-type: none"> Turn ignition switch to "OFF" position. Disconnect TCM harness connector. Check continuity between terminal 42 and ground. Continuity should exist. 		
SAT421J		
<p>If OK, check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 4.
NG	▶	GO TO 5.


4	CHECK DTC	
<p>Perform "DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE", AT-116.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	INSPECTION END
NG	▶	<ol style="list-style-type: none"> Perform TCM input/output signal inspection. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0710 A/T FLUID TEMPERATURE SENSOR CIRCUIT

Diagnostic Procedure (Cont'd)

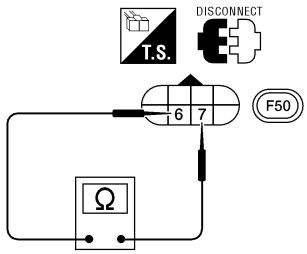5	CHECK A/T FLUID TEMPERATURE SENSOR WITH TERMINAL CORD ASSEMBLY
<p>1. Turn ignition switch to "OFF" position. 2. Disconnect terminal cord assembly connector in engine compartment. 3. Check resistance between terminals 6 and 7 when A/T is cold.</p> <div style="display: flex; justify-content: space-around; align-items: center;">  <div style="text-align: right;"> <p>Resistance: Cold [20°C (68°F)] Approximately 2.5 kΩ</p> </div> </div> <p style="text-align: right;">LAT160</p> <p>4. Reinstall any part removed.</p> <p style="text-align: center;">OK or NG</p>	
OK (With CONSULT-II) ▶	GO TO 2.
OK (Without CONSULT-II) ▶	GO TO 3.
NG ▶	<p>1. Remove oil pan. 2. Check the following items:</p> <ul style="list-style-type: none"> ● A/T fluid temperature sensor Refer to "Component Inspection", AT-120. ● Harness of terminal cord assembly for short or open

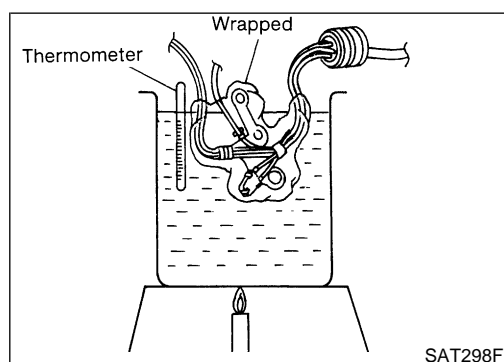

Component Inspection A/T FLUID TEMPERATURE SENSOR

NIAT0042


NIAT0042S01

- For removal, refer to AT-271.
- Check resistance between two terminals while changing temperature as shown at left.

Temperature °C (°F)	Resistance (Approx.)
20 (68)	2.5 kΩ
80 (176)	0.3 kΩ

DTC P0720 VEHICLE SPEED SENSOR-A/T (REVOLUTION SENSOR)

Description

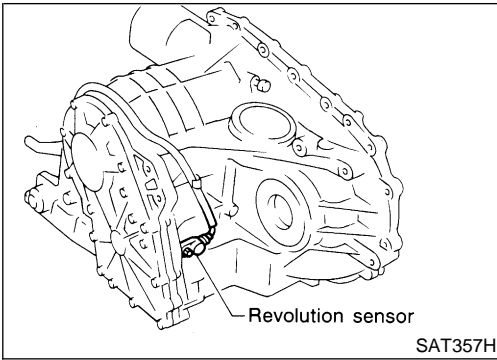

Description

The revolution sensor detects the revolution of the idler gear parking pawl lock gear and emits a pulse signal. The pulse signal is sent to the TCM which converts it into vehicle speed.

NIAT0043

GI

MA

EM

LC

ON BOARD DIAGNOSIS LOGIC

NIAT0043S02

Diagnostic trouble code	Malfunction is detected when ...	Check items (Possible cause)
(P) : VEH SPD SEN/CIR AT (P) : P0720	TCM does not receive the proper voltage signal from the sensor.	<ul style="list-style-type: none"> • Harness or connectors (The sensor circuit is open or shorted.) • Revolution sensor

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P0720 VEHICLE SPEED SENSOR-A/T (REVOLUTION SENSOR)

Description (Cont'd)

SELECT SYSTEM
A/T
ENGINE

SAT014K

SELECT DIAG MODE
SELF-DIAG RESULTS
DATA MONITOR
DTC WORK SUPPORT
TCM PART NUMBER

SAT971J

SELECT SYSTEM
A/T
ENGINE

SAT014K

SELECT DIAG MODE
WORK SUPPORT
SELF-DIAG RESULTS
DATA MONITOR
DATA MONITOR (SPEC)
ACTIVE TEST
DTC & SRT CONFIRMATION

SEF949Y

DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE

NIAT0043S03

CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

With CONSULT-II

- 1) Turn ignition switch "ON" and select "DATA MONITOR" mode for "A/T" with CONSULT-II.
- 2) Drive vehicle and check for an increase of "VHCL/S SE-MTR" value increase.
If the check result is NG, go to "DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE", AT-206.
If the check result is OK, go to following step.
- 3) Select "DATA MONITOR" mode for "ENGINE" with CONSULT-II.
- 4) Start engine and maintain the following conditions for at least 5 consecutive seconds.
VHCL SPEED SE: 30 km/h (19 MPH) or more
THRTL POS SEN: More than 1.2V
Selector lever: D position (OD "ON")
Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.
If the check result is NG, go to "Diagnostic Procedure", AT-124.
If the check result is OK, go to following step.
- 5) Maintain the following conditions for at least 5 consecutive seconds.
CMPS-RPM (REF): 3,500 rpm or more
THRTL POS SEN: More than 1.2V
Selector lever: D position (OD "ON")
Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.

With GST

Follow the procedure "With CONSULT-II".



DTC P0720 VEHICLE SPEED SENSOR-A/T (REVOLUTION SENSOR)

Wiring Diagram — AT — VSSA/T

Wiring Diagram — AT — VSSA/T

NIAT0044

AT-VSSA/T-01

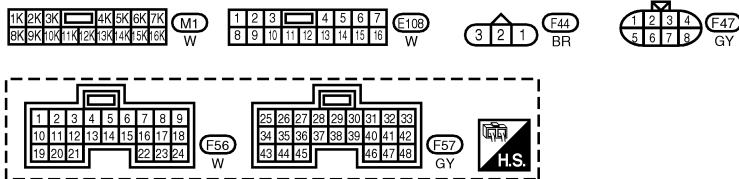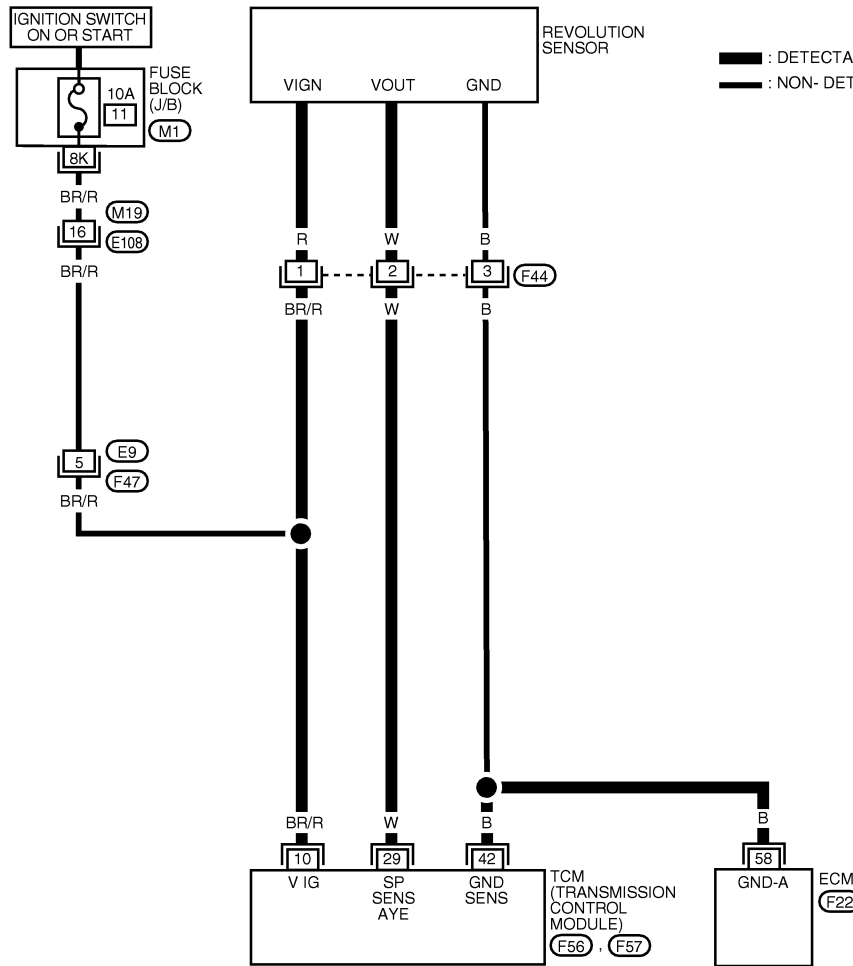

REFER TO THE FOLLOWING.
 F22 - ELECTRICAL UNITS

WAT116

TRANSMISSION CONTROL MODULE TERMINALS AND REFERENCE VALUE BETWEEN TERMINAL AND GROUND

TERMINAL	WIRE COLOR	ITEM	CONDITION	DATA (DC) (Approx.)
10	BR/R	POWER SOURCE	WHEN TURNING IGNITION SWITCH TO "ON"	BATTERY VOLTAGE
			WHEN TURNING IGNITION SWITCH TO "OFF"	0V
29	W	REVOLUTION SENSOR	WHEN MOVING AT 20 KM/H (12 MPH), USE THE CONSULT-II PULSE FREQUENCY MEASURING FUNCTION	150 Hz
42	B	THROTTLE POSITION SENSOR (GROUND)	—	0V


WAT341


DTC P0720 VEHICLE SPEED SENSOR-A/T (REVOLUTION SENSOR)

Diagnostic Procedure

Diagnostic Procedure

NIAT0045

1	CHECK INPUT SIGNAL (With CONSULT-II)															
<p> With CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine. 2. Select "TCM INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II. 3. Read out the value of "VHCL/S SE-A/T" while driving. Check the value changes according to driving speed. 																
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th colspan="2">DATA MONITOR</th> </tr> <tr> <th>MONITORING</th> <th></th> </tr> </thead> <tbody> <tr> <td>VHCL/S SE-A/T</td> <td>XXX km/h</td> </tr> <tr> <td>VHCL/S SE-MTR</td> <td>XXX km/h</td> </tr> <tr> <td>THRTL POS SEN</td> <td>XXX V</td> </tr> <tr> <td>FLUID TEMP SE</td> <td>XXX V</td> </tr> <tr> <td>BATTERY VOLT</td> <td>XXX V</td> </tr> </tbody> </table>			DATA MONITOR		MONITORING		VHCL/S SE-A/T	XXX km/h	VHCL/S SE-MTR	XXX km/h	THRTL POS SEN	XXX V	FLUID TEMP SE	XXX V	BATTERY VOLT	XXX V
DATA MONITOR																
MONITORING																
VHCL/S SE-A/T	XXX km/h															
VHCL/S SE-MTR	XXX km/h															
THRTL POS SEN	XXX V															
FLUID TEMP SE	XXX V															
BATTERY VOLT	XXX V															
SAT614J																
OK or NG																
OK	▶	GO TO 3.														
NG	▶	GO TO 2.														

2	CHECK REVOLUTION SENSOR (With CONSULT-II)							
<p> With CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine. 								
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="width: 60%;">Condition</th> <th>Judgement standard (Approx.)</th> </tr> </thead> <tbody> <tr> <td> When moving at 20 km/h (12 MPH, use the CONSULT-II pulse frequency measuring function. *1 CAUTION: Connect the diagnosis data link cable to the vehicle diagnosis connector. *1: A circuit tester cannot be used to test this item. </td> <td style="text-align: center; vertical-align: middle;">150 Hz</td> </tr> <tr> <td>When vehicle is not moving</td> <td style="text-align: center;">Under 1.3V or over 4.5V</td> </tr> </tbody> </table>			Condition	Judgement standard (Approx.)	When moving at 20 km/h (12 MPH, use the CONSULT-II pulse frequency measuring function. *1 CAUTION: Connect the diagnosis data link cable to the vehicle diagnosis connector. *1: A circuit tester cannot be used to test this item.	150 Hz	When vehicle is not moving	Under 1.3V or over 4.5V
Condition	Judgement standard (Approx.)							
When moving at 20 km/h (12 MPH, use the CONSULT-II pulse frequency measuring function. *1 CAUTION: Connect the diagnosis data link cable to the vehicle diagnosis connector. *1: A circuit tester cannot be used to test this item.	150 Hz							
When vehicle is not moving	Under 1.3V or over 4.5V							
WAT402								
<ul style="list-style-type: none"> ● Harness for short or open between TCM, ECM and revolution sensor (Main harness). Refer to wiring diagram, AT-123. 								
OK or NG								
OK	▶	GO TO 3.						
NG	▶	Repair or replace damaged parts.						

3	CHECK DTC	
Perform "DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE", AT-122.		
OK or NG		
OK	▶	INSPECTION END
NG	▶	GO TO 4.

DTC P0720 VEHICLE SPEED SENSOR-A/T (REVOLUTION SENSOR)

Diagnostic Procedure (Cont'd)

4	CHECK TCM INSPECTION
1. Perform TCM input/output signal inspection. 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.	
OK or NG	
OK	▶ INSPECTION END
NG	▶ Repair or replace damaged parts.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P0725 ENGINE SPEED SIGNAL



Description


Description

The engine speed signal is sent from the ECM to the TCM. NIAT0047

ON BOARD DIAGNOSIS LOGIC

NIAT0047S02

Diagnostic trouble code	Malfunction is detected when ...	Check item (Possible cause)
 : ENGINE SPEED SIG  : P0725	TCM does not receive the proper voltage signal from ECM.	<ul style="list-style-type: none"> Harness or connectors (The sensor circuit is open or shorted.)

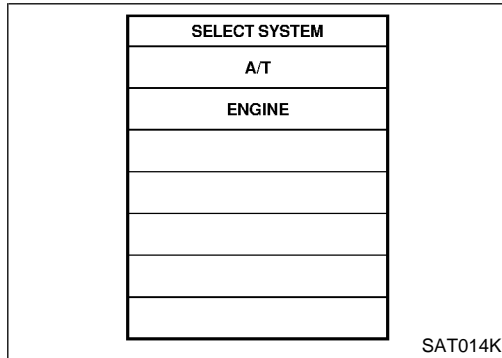

DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE

NIAT0047S03

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

With CONSULT-II

- Turn ignition switch "ON" and select "DATA MONITOR" mode for "ENGINE" with CONSULT-II.
- Start engine and maintain the following conditions for at least 10 consecutive seconds.


VHCL SPEED SE: 10 km/h (6 MPH) or more

THRTL POS SEN: More than 1.2V

Selector lever: D position (OD "ON")

With GST

Follow the procedure "With CONSULT-II".

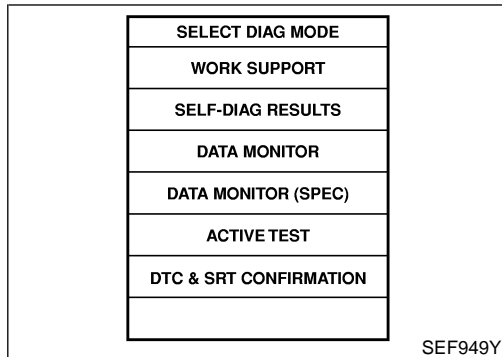


DTC P0725 ENGINE SPEED SIGNAL

Wiring Diagram — AT — ENGSS

Wiring Diagram — AT — ENGSS

NIAT0048


AT-ENGSS-01

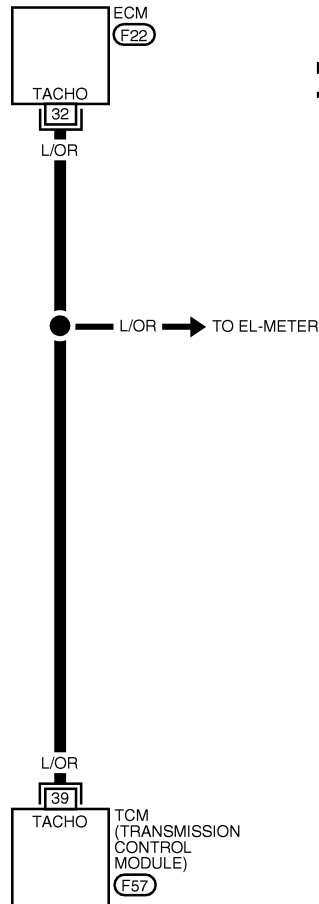

— : DETECTABLE LINE FOR DTC
 — : NON-DETECTABLE LINE FOR DTC

GI
 MA
 EM
 LC
 EC
 FE
 CL
 MT
AT

AX
 SU
 BR
 ST

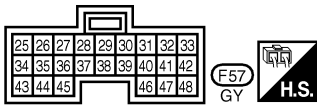

REFER TO THE FOLLOWING.
 (F22) - ELECTRICAL UNITS

WAT117

RS
 BT
 HA

TRANSMISSION CONTROL MODULE TERMINALS AND REFERENCE VALUE BETWEEN TERMINAL AND GROUND

TERMINAL	WIRE COLOR	ITEM	CONDITION	DATA (DC) (Approx.)
39	L/OR	ENGINE SPEED SIGNAL	REFER TO ECM INSPECTION TABLE	—

SC
 EL
 IDX

WAT342

DTC P0725 ENGINE SPEED SIGNAL

Diagnostic Procedure

Diagnostic Procedure

NIAT0049


1	CHECK DTC WITH ECM	
Perform diagnostic test mode II (self- diagnostic results) for engine control. Check ignition signal circuit condition.		
OK or NG		
OK (With CONSULT-II)	▶	GO TO 2.
OK (Without CONSULT-II)	▶	GO TO 3.
NG	▶	Check ignition signal circuit for engine control. Refer to EC-547 [QG18DE (except Calif. CA Model)], EC-1228 [QG18DE (Calif. CA Model)], EC-1899 (SR20DE), "DTC P1320 IGNITION SIGNAL".

2	CHECK INPUT SIGNAL (With CONSULT-II)															
<p>Ⓜ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine. 2. Select "TCM INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II. 3. Read out the value of "ENGINE SPEED". <p>Check engine speed changes according to throttle position.</p>																
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th colspan="2">DATA MONITOR</th> </tr> <tr> <th colspan="2">MONITORING</th> </tr> </thead> <tbody> <tr> <td>ENGINE SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>TURBINE REV</td> <td>XXX rpm</td> </tr> <tr> <td>OVERDRIVE SW</td> <td>ON</td> </tr> <tr> <td>PN POSI SW</td> <td>OFF</td> </tr> <tr> <td>R POSITION SW</td> <td>OFF</td> </tr> </tbody> </table>			DATA MONITOR		MONITORING		ENGINE SPEED	XXX rpm	TURBINE REV	XXX rpm	OVERDRIVE SW	ON	PN POSI SW	OFF	R POSITION SW	OFF
DATA MONITOR																
MONITORING																
ENGINE SPEED	XXX rpm															
TURBINE REV	XXX rpm															
OVERDRIVE SW	ON															
PN POSI SW	OFF															
R POSITION SW	OFF															
OK or NG																
OK	▶	GO TO 4.														
NG	▶	<p>Check the following items:</p> <ul style="list-style-type: none"> ● Harness for short or open between TCM and ECM ● Resistor and ignition coil <p>Refer to EC-547 [QG18DE (except Calif. CA Model)], EC-1228 [QG18DE (Calif. CA Model)], EC-1899 (SR20DE), "DTC P1320 IGNITION SIGNAL".</p>														

SAT645J

DTC P0725 ENGINE SPEED SIGNAL

Diagnostic Procedure (Cont'd)

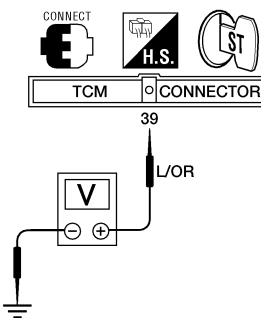3	CHECK INPUT SIGNAL (Without CONSULT-II)	
<p>⊗ Without CONSULT-II</p> <p>1. Start engine.</p> <p>2. Check voltage between TCM terminal 39 and ground.</p> <p style="color: blue;">Voltage (Idle speed): Refer to "TCM Terminals and Reference Value", AT-103.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">LAT162</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 4.
NG	▶	<p>Check the following items:</p> <ul style="list-style-type: none"> ● Harness for short or open between TCM and ECM ● Resistor and ignition coil <p>Refer to EC-547 [QG18DE (except Calif. CA Model)], EC-1228 [QG18DE (Calif. CA Model)], EC-1899 (SR20DE), "DTC P1320 IGNITION SIGNAL".</p>

4	CHECK DTC	
<p>Perform "DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE", AT-126.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	INSPECTION END
NG	▶	<p>1. Perform TCM input/output signal inspection.</p> <p>2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.</p>

GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0731 A/T 1ST GEAR FUNCTION

Description

Description

- This is an OBD-II self-diagnostic item and not available in TCM self-diagnosis. NIAT0050
- This malfunction will not be detected while the O/D OFF indicator lamp is indicating another self-diagnosis malfunction.
- This malfunction is detected when the A/T does not shift into first gear position as instructed by the TCM. This is not caused by electrical malfunction (circuits open or shorted) but by mechanical malfunction such as control valve sticking, improper solenoid valve operation, etc.

Gear position	1	2	3	4
Shift solenoid valve A	ON (Closed)	OFF (Open)	OFF (Open)	ON (Closed)
Shift solenoid valve B	ON (Closed)	ON (Closed)	OFF (Open)	OFF (Open)

ON BOARD DIAGNOSTIC LOGIC

This diagnosis monitors actual gear position by checking the torque converter slip ratio calculated by TCM as follows: NIAT0050S02

Torque converter slip ratio = A x C/B

A: Output shaft revolution signal from revolution sensor

B: Engine speed signal from ECM



C: Gear ratio determined as gear position which TCM supposes

If the actual gear position is higher than the position (1st) supposed by TCM, the slip ratio will be more than normal. In case the ratio exceeds the specified value, TCM judges this diagnosis malfunction.

This malfunction will be caused when either shift solenoid valve A is stuck open or shift solenoid valve B is stuck open.

Gear position supposed by TCM	1	2	3	4
In case of gear position with no malfunctions	1	2	3	4
In case of gear position with shift solenoid valve A stuck open	2*	2	3	3
In case of gear position with shift solenoid valve B stuck open	4*	3	3	4

*: P0731 is detected.

Diagnostic trouble code	Malfunction is detected when ...	Check items (Possible cause)
 : A/T 1ST GR FNCTN	A/T cannot be shifted to the 1st gear position even if electrical circuit is good.	<ul style="list-style-type: none"> ● Shift solenoid valve A ● Shift solenoid valve B ● Each clutch ● Hydraulic control circuit
 : P0731		

DTC P0731 A/T 1ST GEAR FUNCTION


Description (Cont'd)

SELECT SYSTEM
A/T
ENGINE

SAT014K

SELECT DIAG MODE
SELF-DIAG RESULTS
DATA MONITOR
DTC WORK SUPPORT
TCM PART NUMBER

SAT971J

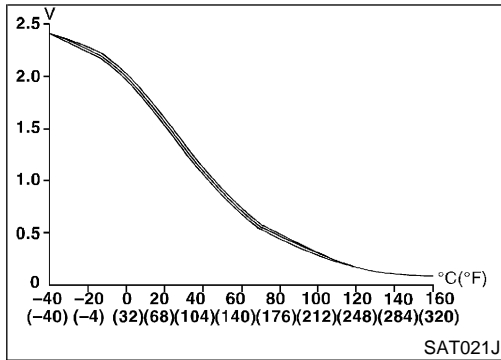

DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE

NIAT0050S03

CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Always drive vehicle on a level road to improve the accuracy of test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

Ⓜ With CONSULT-II

- 1) Start engine and select "DATA MONITOR" mode for "A/T" with CONSULT-II.
- 2) Make sure that output voltage of A/T fluid temperature sensor is within the range below.

FLUID TEMP SEN: 0.4 - 1.5V

If out of range, drive the vehicle to decrease the voltage (warm up the fluid) or stop engine to increase the voltage (cool down the fluid).

- 3) Select "1ST GR FNCTN P0731" of "DTC WORK SUPPORT" mode for "A/T" with CONSULT-II and touch "START".
- 4) Accelerate vehicle to 20 to 25 km/h (12 to 16 MPH) under the following condition and release the accelerator pedal completely.

THROTTLE POSI: Less than 1.0/8 (at all times during step 4)

Selector lever: D position (OD "ON")

- Check that "GEAR" shows "2" after releasing pedal.
- 5) Depress accelerator pedal to WOT (more than 7.0/8 of "THROTTLE POSI") quickly from a speed of 20 to 25 km/h (12 to 16 MPH) until "TESTING" changes to "STOP VEHICLE" or "COMPLETED". (It will take approximately 3 seconds.)
If the check result NG appears on CONSULT-II screen, go to "Diagnostic Procedure", AT-134.
If "STOP VEHICLE" appears on CONSULT-II screen, go to the following step.
 - Check that "GEAR" shows "1" when depressing accelerator pedal to WOT.
 - If "TESTING" does not appear on CONSULT-II for a long time, select "SELF-DIAGNOSIS" for "ENGINE". In case a 1st trip DTC other than P0731 is shown, refer to applicable "TROUBLE DIAGNOSIS FOR DTC".
 - 6) Stop vehicle.
 - 7) Follow the instruction displayed. (Check for normal shifting referring to the table below.)

Vehicle condition	Gear on actual transmission shift pattern when screen is changed to 1 → 2 → 3 → 4
No malfunction exists	1 → 2 → 3 → 4

GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0731 A/T 1ST GEAR FUNCTION

Description (Cont'd)

Malfunction for P0731 exists.	2 → 2 → 3 → 3
	4 → 3 → 3 → 4

- 8) Make sure that "OK" is displayed. (If "NG" is displayed, refer to "Diagnostic Procedure".)
Refer to "Diagnostic Procedure", AT-134.
Refer to "Shift Schedule", AT-378.



With GST

Follow the procedure "With CONSULT-II".



DTC P0731 A/T 1ST GEAR FUNCTION

Wiring Diagram — AT — 1ST

Wiring Diagram — AT — 1ST

=NIAT0051

AT-1STSIG-01

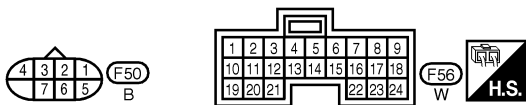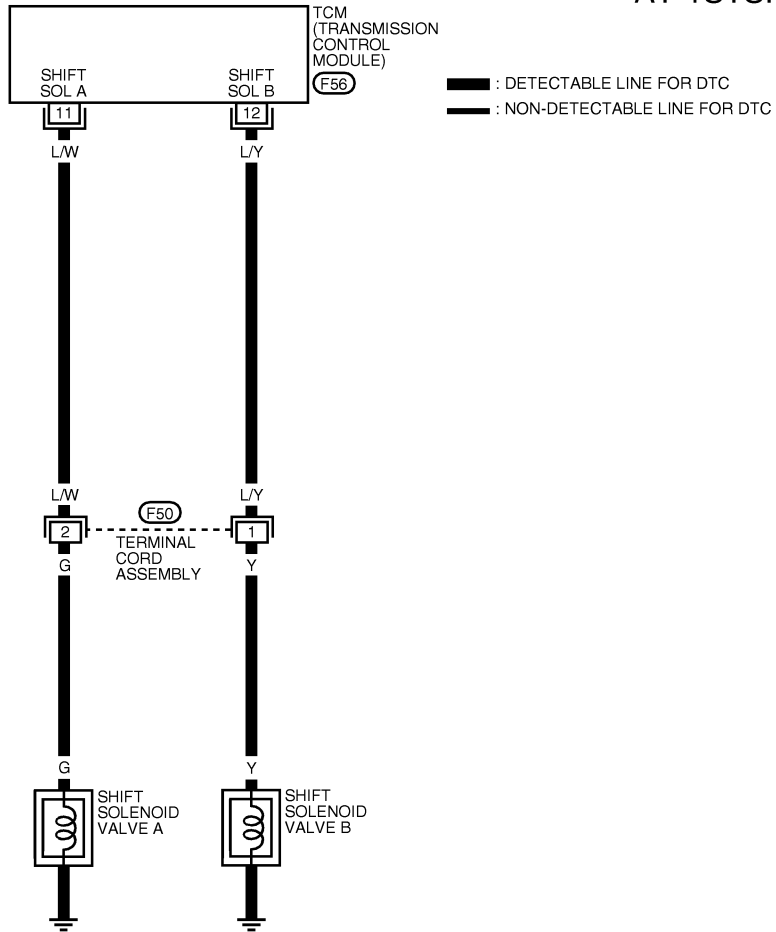

WAT118

TRANSMISSION CONTROL MODULE TERMINALS AND REFERENCE VALUE

TERMINAL	WIRE COLOR	ITEM	CONDITION	DATA (DC) (Approx.)
11	L/W	SHIFT SOLENOID VALVE A	WHEN SHIFT SOLENOID VALVE A OPERATES	BATTERY VOLTAGE
			WHEN SHIFT SOLENOID VALVE A DOES NOT OPERATE	0V
12	L/Y	SHIFT SOLENOID VALVE B	WHEN SHIFT SOLENOID VALVE B OPERATES	BATTERY VOLTAGE
			WHEN SHIFT SOLENOID VALVE B DOES NOT OPERATE	0V

WAT343

GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0731 A/T 1ST GEAR FUNCTION


Diagnostic Procedure

Diagnostic Procedure

NIAT0052

1 CHECK SHIFT SOLENOID VALVE

1. Remove control valve assembly. Refer to "Removal", AT-271.
 2. Check shift solenoid valve operation.
 - Shift solenoid valve A
 - Shift solenoid valve B
- Refer to "Component Inspection", AT-135.

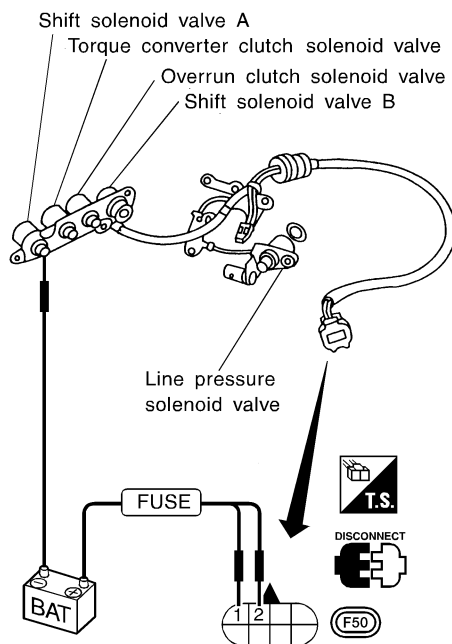


WAT163

OK or NG


OK	▶	GO TO 2.
NG	▶	Repair or replace shift solenoid valve assembly.

DTC P0731 A/T 1ST GEAR FUNCTION

Diagnostic Procedure (Cont'd)

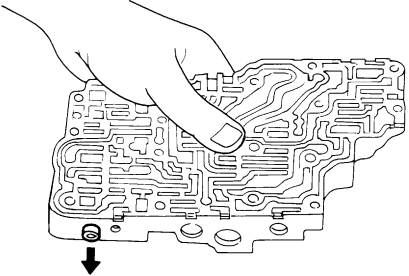2	CHECK CONTROL VALVE
<p>1. Disassemble control valve assembly. Refer to "Control Valve Assembly", AT-303.</p> <p>2. Check to ensure that:</p> <ul style="list-style-type: none"> ● Valve, sleeve and plug slide along valve bore under their own weight. ● Valve, sleeve and plug are free from burrs, dents and scratches. ● Control valve springs are free from damage, deformation and fatigue. ● Hydraulic line is free from obstacles. 	
	
SAT367H	
OK or NG	
OK	▶ GO TO 3.
NG	▶ Repair control valve assembly.

3	CHECK DTC
Perform "DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE", AT-131.	
OK or NG	
OK	▶ INSPECTION END
NG	▶ Check control valve again. Repair or replace control valve assembly.

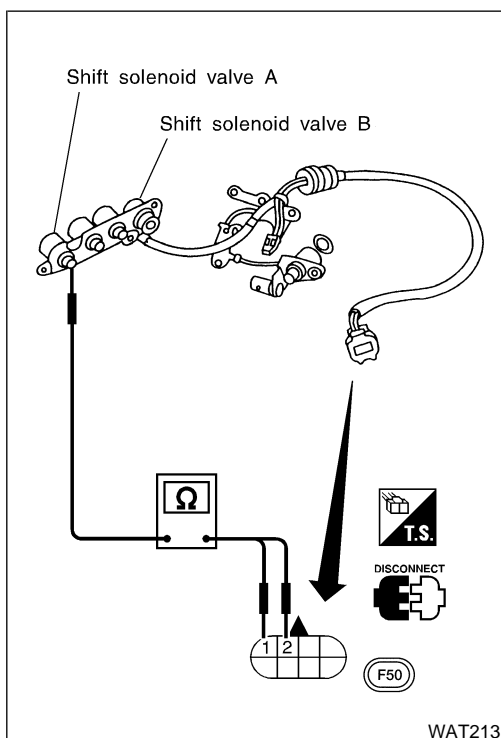

Component Inspection SHIFT SOLENOID VALVE A AND B

- Refer to "Removal", AT-271.

Resistance Check


- Check resistance between two terminals.

Solenoid valve	Terminal No.		Resistance (Approx.)
Shift solenoid valve A	2	Ground	20 - 30Ω
Shift solenoid valve B	1		5 - 20Ω

GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0731 A/T 1ST GEAR FUNCTION

Component Inspection (Cont'd)

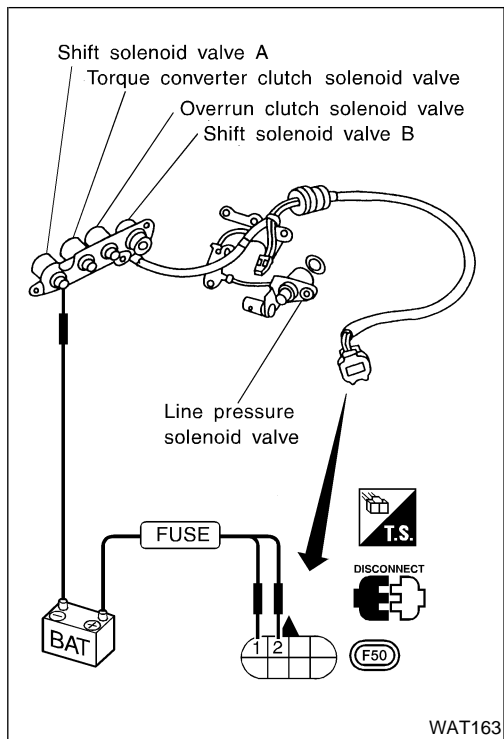

Operation Check

NIAT0053S0102

- Check solenoid valve by listening for its operating sound while applying battery voltage to the terminal and ground.

DTC P0732 A/T 2ND GEAR FUNCTION

Description

Description

- This is an OBD-II self-diagnostic item and not available in TCM self-diagnosis. NIAT0054
- This malfunction will not be detected while the O/D OFF indicator lamp is indicating another self-diagnosis malfunction. GI
- This malfunction is detected when the A/T does not shift into second gear position as instructed by the TCM. This is not caused by electrical malfunction (circuits open or shorted) but by mechanical malfunction such as control valve sticking, improper solenoid valve operation, etc. MA

Gear position	1	2	3	4
Shift solenoid valve A	ON (Closed)	OFF (Open)	OFF (Open)	ON (Closed)
Shift solenoid valve B	ON (Closed)	ON (Closed)	OFF (Open)	OFF (Open)

ON BOARD DIAGNOSTIC LOGIC

This diagnosis monitors actual gear position by checking the torque converter slip ratio calculated by TCM as follows: NIAT0054S02

Torque converter slip ratio = A x C/B

A: Output shaft revolution signal from revolution sensor FE

B: Engine speed signal from ECM CL



C: Gear ratio determined as gear position which TCM supposes MT

If the actual gear position is higher than the position (2nd) supposed by TCM, the slip ratio will be more than normal. In case the ratio exceeds the specified value, TCM judges this diagnosis malfunction. **AT**

This malfunction will be caused when shift solenoid valve B is stuck open. AX

Gear position supposed by TCM	1	2	3	4
In case of gear position with no malfunctions	1	2	3	4
In case of gear position with shift solenoid valve B stuck open	4	3*	3	4

*: P0732 is detected. BR

Diagnostic trouble code	Malfunction is detected when ...	Check items (Possible cause)
 : A/T 2ND GR FNCTN	A/T cannot be shifted to the 2nd gear position even if electrical circuit is good.	<ul style="list-style-type: none"> ● Shift solenoid valve B ● Each clutch ● Hydraulic control circuit
 : P0732		

DTC P0732 A/T 2ND GEAR FUNCTION


Description (Cont'd)

SELECT SYSTEM
A/T
ENGINE

SAT014K

SELECT DIAG MODE
SELF-DIAG RESULTS
DATA MONITOR
DTC WORK SUPPORT
TCM PART NUMBER

SAT971J

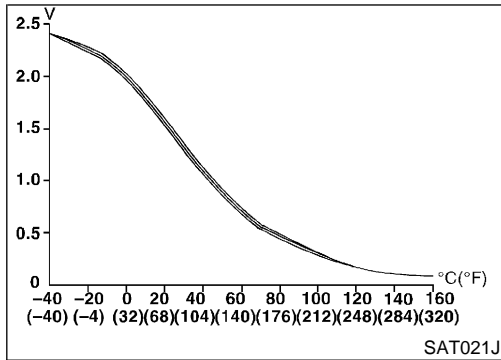

DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE

NIAT0054S03

CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Always drive vehicle on a level road to improve the accuracy of test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

With CONSULT-II

- 1) Start engine and select "DATA MONITOR" mode for "A/T" with CONSULT-II.
- 2) Make sure that output voltage of A/T fluid temperature sensor is within the range below.

FLUID TEMP SEN: 0.4 - 1.5V

If out of range, drive the vehicle to decrease the voltage (warm up the fluid) or stop engine to increase the voltage (cool down the fluid).

- 3) Select "2ND GR FNCTN P0732" of "DTC WORK SUPPORT" mode for "A/T" with CONSULT-II and touch "START".
- 4) Accelerate vehicle to 50 to 55 km/h (31 to 34 MPH) –QG18DE– or 59 to 64 km/h (37 to 40 MPH) –SR20DE– under the following condition and release the accelerator pedal completely.

THROTTLE POSI: Less than 1.0/8 (at all times during step 4)

Selector lever: D position (OD "ON")

- Check that "GEAR" shows "3" or "4" after releasing pedal.
- 5) Depress accelerator pedal to WOT (more than 7.0/8 of "THROTTLE POSI") quickly from a speed of 50 to 55 km/h (31 to 34 MPH) –QG18DE– or 59 to 64 km/h (37 to 40 MPH) –SR20DE– until "TESTING" changes to "STOP VEHICLE" or "COMPLETED". (It will take approximately 3 seconds.)

If the check result NG appears on CONSULT-II screen, go to "Diagnostic Procedure", AT-141.

If "STOP VEHICLE" appears on CONSULT-II screen, go to following step.

- Check that "GEAR" shows "2" when depressing accelerator pedal to WOT.
- If "TESTING" does not appear on CONSULT-II for a long time, select "SELF-DIAGNOSIS" for "ENGINE". In case a 1st trip DTC other than P0732 is shown, refer to applicable "TROUBLE DIAGNOSIS FOR DTC".

- 6) Stop vehicle.
- 7) Follow the instruction displayed. (Check for normal shifting referring to the table below.)


Vehicle condition	Gear on actual transmission shift pattern when screen is changed to 1 → 2 → 3 → 4
-------------------	-----------------------------------------------------------------------------------

DTC P0732 A/T 2ND GEAR FUNCTION

Description (Cont'd)

No malfunction exists	1 → 2 → 3 → 4
Malfunction for P0732 exists.	4 → 3 → 3 → 4

- 8) Make sure that "OK" is displayed. (If "NG" is displayed, refer to "DIAGNOSTIC PROCEDURE".)
 Refer to "Diagnostic Procedure", AT-141.
 Refer to "Shift Schedule", AT-378.

 **With GST**
 Follow the procedure "With CONSULT-II".

- GI
- MA
- EM
- LC
- EC
- FE
- CL
- MT
- AT**
- AX
- SU
- BR
- ST
- RS
- BT
- HA
- SC
- EL
- IDX



DTC P0732 A/T 2ND GEAR FUNCTION

Wiring Diagram — AT — 2ND

Wiring Diagram — AT — 2ND

=NIAT0055

AT-2NDSIG-01

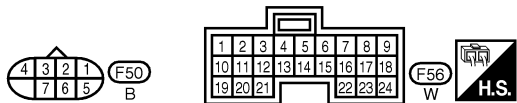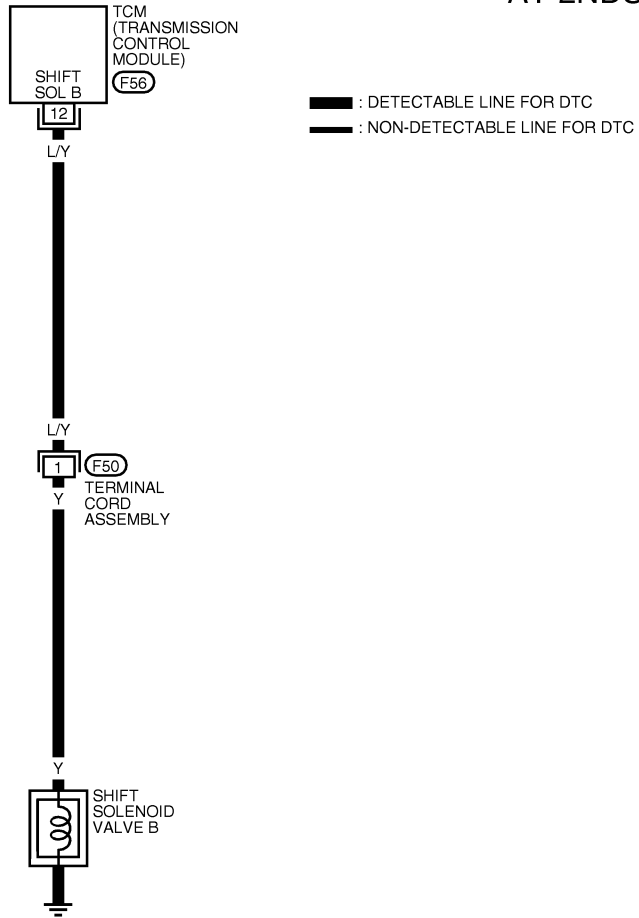

WAT119


TRANSMISSION CONTROL MODULE TERMINALS AND REFERENCE VALUE BETWEEN TERMINAL AND GROUND

TERMINAL	WIRE COLOR	ITEM	CONDITION	DATA (DC) (Approx.)
12	L/Y	SHIFT SOLENOID VALVE B	WHEN SHIFT SOLENOID VALVE B OPERATES	BATTERY VOLTAGE
			WHEN SHIFT SOLENOID VALVE B DOES NOT OPERATE	0V


WAT344

Diagnostic Procedure

NIAT0056

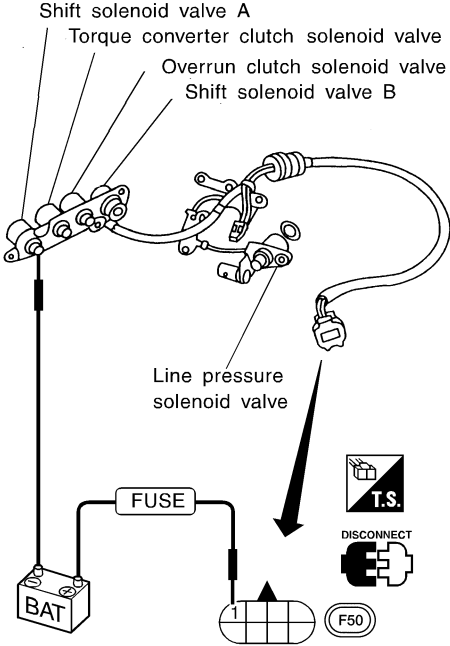1	CHECK SHIFT SOLENOID VALVE	<p>1. Remove control valve assembly. Refer to "Removal", AT-271.</p> <p>2. Check shift solenoid valve operation.</p> <ul style="list-style-type: none"> ● Shift solenoid valve B <p>Refer to "Component Inspection", AT-142.</p> <div style="text-align: center;">  <p>OK or NG</p> </div>	<p>GI</p> <p>MA</p> <p>EM</p> <p>LC</p> <p>EC</p> <p>FE</p> <p>CL</p> <p>MT</p> <p>AT</p> <p>AX</p> <p>SU</p>
OK	▶	GO TO 2.	
NG	▶	Repair or replace shift solenoid valve assembly.	

WAT164

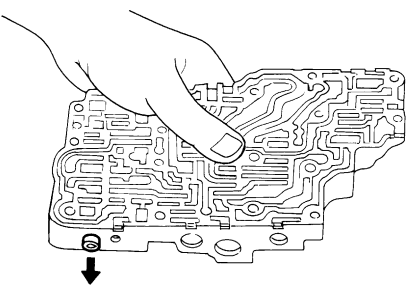
2	CHECK CONTROL VALVE	<p>1. Disassemble control valve assembly. Refer to "Control Valve Assembly", AT-303.</p> <p>2. Check to ensure that:</p> <ul style="list-style-type: none"> ● Valve, sleeve and plug slide along valve bore under their own weight. ● Valve, sleeve and plug are free from burrs, dents and scratches. ● Control valve springs are free from damage, deformation and fatigue. ● Hydraulic line is free from obstacles. <div style="text-align: center;">  <p>OK or NG</p> </div>	<p>ST</p> <p>RS</p> <p>BT</p> <p>HA</p> <p>SC</p> <p>EL</p> <p>IDX</p>
OK	▶	GO TO 3.	
NG	▶	Repair control valve assembly.	

SAT367H

DTC P0732 A/T 2ND GEAR FUNCTION

Diagnostic Procedure (Cont'd)

3	CHECK DTC
Perform "DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE", AT-138.	
OK or NG	
OK	▶ INSPECTION END
NG	▶ Check control valve again. Repair or replace control valve assembly.

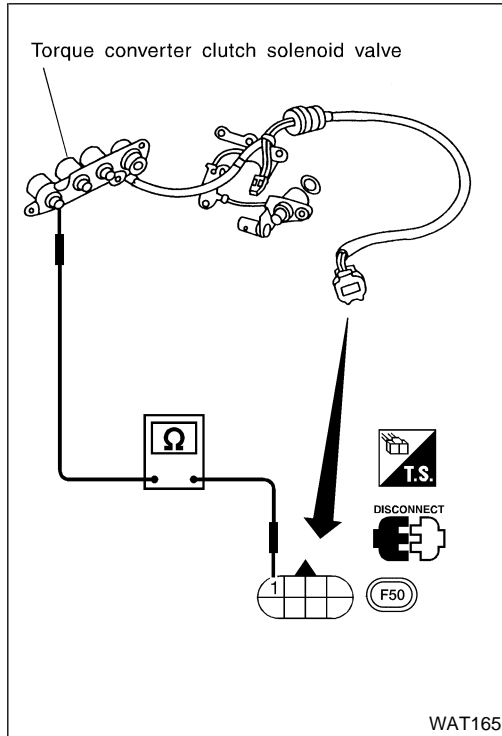

Component Inspection SHIFT SOLENOID VALVE B

NIAT0057

NIAT0057S01


- Refer to "Removal", AT-271.

Resistance Check

NIAT0057S0101

- Check resistance between two terminals.

Solenoid valve	Terminal No.		Resistance (Approx.)
Shift solenoid valve B	1	Ground	5 - 20Ω

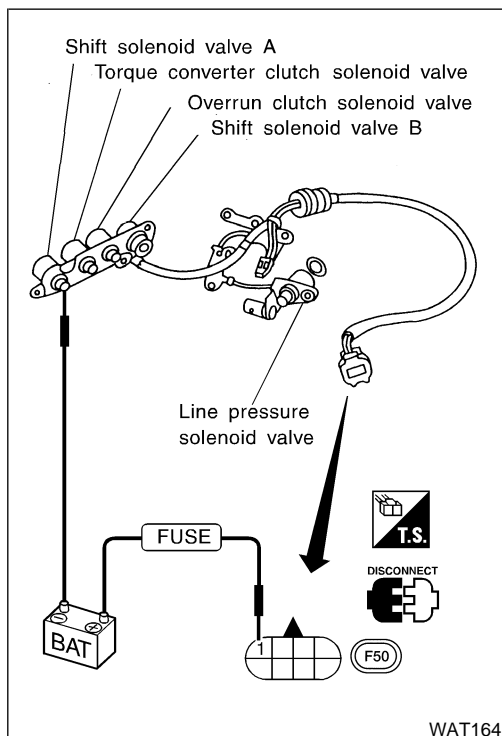

Operation Check

NIAT0057S0102

- Check solenoid valve by listening for its operating sound while applying battery voltage to the terminal and ground.

DTC P0733 A/T 3RD GEAR FUNCTION

Description

Description

- This is an OBD-II self-diagnostic item and not available in TCM self-diagnosis. NIAT0058
- This malfunction will not be detected while the O/D OFF indicator lamp is indicating another self-diagnosis malfunction.
- This malfunction is detected when the A/T does not shift into third gear position as instructed by the TCM. This is not caused by electrical malfunction (circuits open or shorted) but by mechanical malfunction such as control valve sticking, improper solenoid valve operation, malfunctioning servo piston or brake band, etc.

Gear position	1	2	3	4
Shift solenoid valve A	ON (Closed)	OFF (Open)	OFF (Open)	ON (Closed)
Shift solenoid valve B	ON (Closed)	ON (Closed)	OFF (Open)	OFF (Open)

ON BOARD DIAGNOSTIC LOGIC

This diagnosis monitors actual gear position by checking the torque converter slip ratio calculated by TCM as follows:

Torque converter slip ratio = $A \times C/B$

A: Output shaft revolution signal from revolution sensor

B: Engine speed signal from ECM



C: Gear ratio determined as gear position which TCM supposes

If the actual gear position is higher than the position (3rd) supposed by TCM, the slip ratio will be more than normal. In case the ratio exceeds the specified value, TCM judges this diagnosis malfunction.

This malfunction will be caused when shift solenoid valve A is stuck closed.

Gear position supposed by TCM	1	2	3	4
In case of gear position with no malfunctions	1	2	3	4
In case of gear position with shift solenoid valve A stuck closed	1	1	4*	4

*: P0733 is detected.

Diagnostic trouble code	Malfunction is detected when ...	Check items (Possible cause)
 : A/T 3RD GR FNCTN	A/T cannot be shifted to the 3rd gear position even if electrical circuit is good.	<ul style="list-style-type: none"> ● Shift solenoid valve A ● Each clutch ● Hydraulic control circuit
 : P0733		

DTC P0733 A/T 3RD GEAR FUNCTION


Description (Cont'd)

SELECT SYSTEM
A/T
ENGINE

SAT014K

SELECT DIAG MODE
SELF-DIAG RESULTS
DATA MONITOR
DTC WORK SUPPORT
TCM PART NUMBER

SAT971J

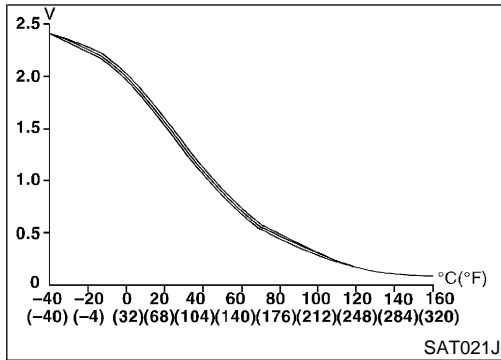

DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE

NIAT0058S03

CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Always drive vehicle on a level road to improve the accuracy of test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

With CONSULT-II

- 1) Start engine and select "DATA MONITOR" mode for "A/T" with CONSULT-II.
- 2) Make sure that output voltage of A/T fluid temperature sensor is within the range below.

FLUID TEMP SEN: 0.4 - 1.5V

If out of range, drive the vehicle to decrease the voltage (warm up the fluid) or stop engine to increase the voltage (cool down the fluid).

- 3) Select "3RD GR FNCTN P0733" of "DTC WORK SUPPORT" mode for "A/T" with CONSULT-II and touch "START".
- 4) Accelerate vehicle to 70 to 85 km/h (43 to 53 MPH) under the following condition and release the accelerator pedal completely.

THROTTLE POSI: Less than 1.0/8 (at all times during step 4)

Selector lever: D position (OD "ON")

- Check that "GEAR" shows "4" after releasing pedal.
- 5) Depress accelerator pedal steadily with 3.5/8 - 4.5/8 of "THROTTLE POSI" from a speed of 70 to 85 km/h (43 to 53 MPH) until "TESTING" changes to "STOP VEHICLE" or "COMPLETED". (It will take approximately 3 seconds.)
If the check result NG appears on CONSULT-II screen, go to "Diagnostic Procedure", AT-147.
If "STOP VEHICLE" appears on CONSULT-II screen, go to following step.
 - Check that "GEAR" shows "3" when depressing accelerator pedal with 3.5/8 - 4.5/8 of "THROTTLE POSI".
 - If "TESTING" does not appear on CONSULT-II for a long time, select "SELF-DIAGNOSIS" for "ENGINE". In case a 1st trip DTC other than P0733 is shown, refer to applicable "TROUBLE DIAGNOSIS FOR DTC".
 - 6) Stop vehicle.
 - 7) Follow the instruction displayed. (Check for normal shifting referring to the table below.)

Vehicle condition	Gear on actual transmission shift pattern when screen is changed to 1 → 2 → 3 → 4
No malfunction exists.	1 → 2 → 3 → 4
Malfunction for P0733 exists.	1 → 1 → 4 → 4

DTC P0733 A/T 3RD GEAR FUNCTION

Description (Cont'd)

- 8) Make sure that "OK" is displayed. (If "NG" is displayed, refer to "DIAGNOSTIC PROCEDURE".)
Refer to "Diagnostic Procedure", AT-147.
Refer to "Shift Schedule", AT-378.

GI

 **With GST**

Follow the procedure "With CONSULT-II".

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX



DTC P0733 A/T 3RD GEAR FUNCTION

Wiring Diagram — AT — 3RD

Wiring Diagram — AT — 3RD

=NIAT0059

AT-3RDSIG-01

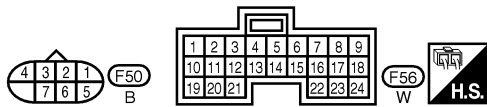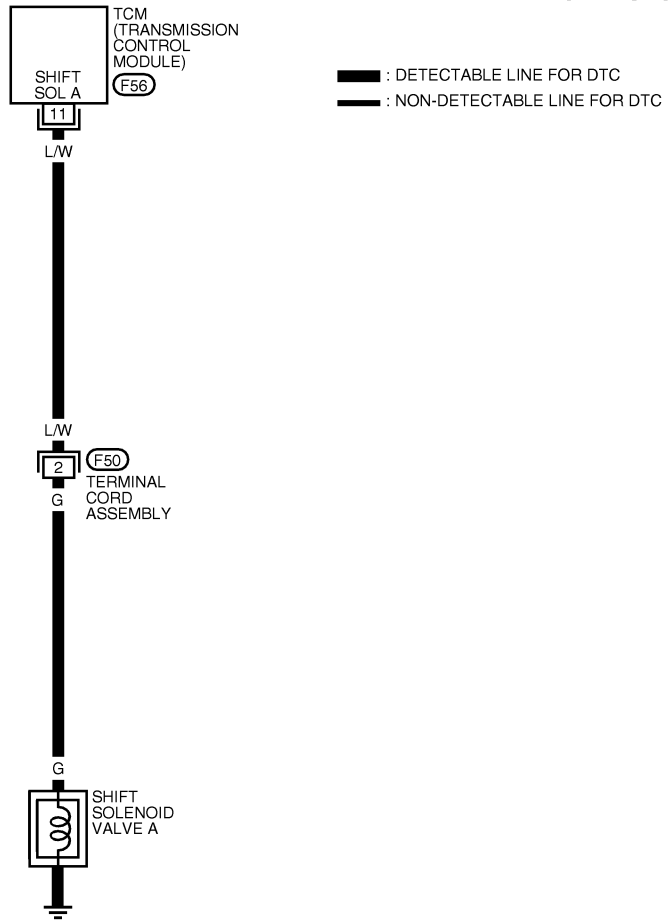

WAT120

TRANSMISSION CONTROL MODULE TERMINALS AND REFERENCE VALUE BETWEEN TERMINAL AND GROUND

TERMINAL	WIRE COLOR	ITEM	CONDITION	DATA (DC) (Approx.)
11	L/W	SHIFT SOLENOID VALVE A	WHEN SHIFT SOLENOID VALVE A OPERATES	BATTERY VOLTAGE
			WHEN SHIFT SOLENOID VALVE A DOES NOT OPERATE	0V

WAT345

Diagnostic Procedure

NIAT0060


1	CHECK SHIFT SOLENOID VALVE	<p>1. Remove control valve assembly. Refer to "Removal", AT-271.</p> <p>2. Check shift solenoid valve operation.</p> <ul style="list-style-type: none"> ● Shift solenoid valve A Refer to "Component Inspection" below. 	GI MA EM LC EC FE CL MT AT AX SU BR						
		<p style="text-align: center;">OK or NG</p>	WAT166						
		<table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 15%;">OK</td> <td style="width: 10%; text-align: center;">▶</td> <td>GO TO 2.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>Repair or replace shift solenoid valve assembly.</td> </tr> </table>	OK	▶	GO TO 2.	NG	▶	Repair or replace shift solenoid valve assembly.	
OK	▶	GO TO 2.							
NG	▶	Repair or replace shift solenoid valve assembly.							

2	CHECK CONTROL VALVE	<p>1. Disassemble control valve assembly. Refer to "Control Valve Assembly", AT-303.</p> <p>2. Check to ensure that:</p> <ul style="list-style-type: none"> ● Valve, sleeve and plug slide along valve bore under their own weight. ● Valve, sleeve and plug are free from burrs, dents and scratches. ● Control valve springs are free from damage, deformation and fatigue. ● Hydraulic line is free from obstacles. 	ST RS BT HA SC EL IDX						
		<p style="text-align: center;">OK or NG</p>	SAT367H						
		<table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 15%;">OK</td> <td style="width: 10%; text-align: center;">▶</td> <td>GO TO 3.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>Repair control valve assembly.</td> </tr> </table>	OK	▶	GO TO 3.	NG	▶	Repair control valve assembly.	
OK	▶	GO TO 3.							
NG	▶	Repair control valve assembly.							

DTC P0733 A/T 3RD GEAR FUNCTION

Diagnostic Procedure (Cont'd)

3	CHECK DTC
Perform "DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE", AT-144.	
OK or NG	
OK	▶ INSPECTION END
NG	▶ Check control valve again. Repair or replace control valve assembly.

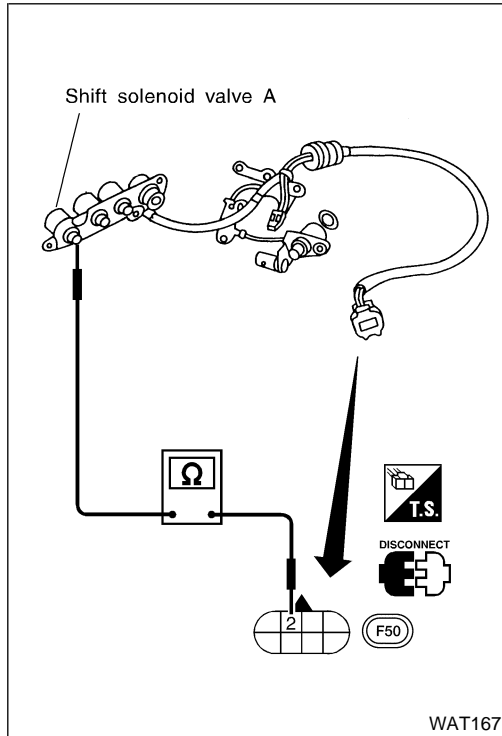

Component Inspection SHIFT SOLENOID VALVE A

NIAT0061

NIAT0061S01


- Refer to "Removal", AT-271.

Resistance Check

NIAT0061S0101

- Check resistance between two terminals.

Solenoid valve	Terminal No.		Resistance (Approx.)
Shift solenoid valve A	2	Ground	20 - 30Ω

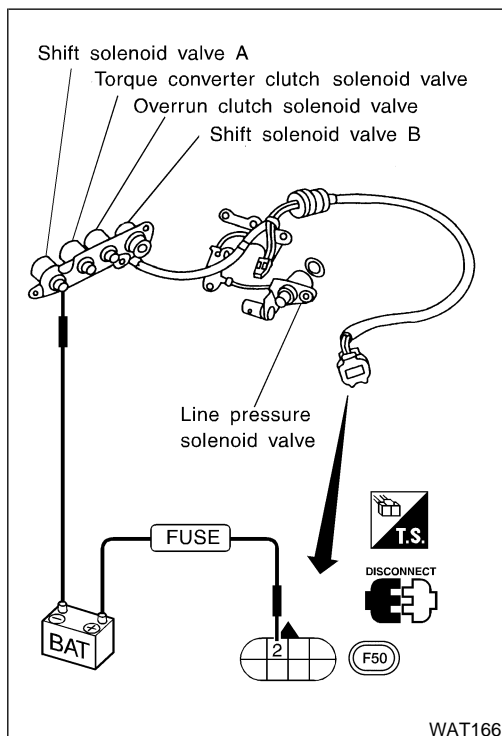

Operation Check

NIAT0061S0102

- Check solenoid valve by listening for its operating sound while applying battery voltage to the terminal and ground.

DTC P0734 A/T 4TH GEAR FUNCTION

Description

Description

- This is an OBD-II self-diagnostic item and not available in TCM self-diagnosis. NIAT0062
- This malfunction will not be detected while the O/D OFF indicator lamp is indicating another self-diagnosis malfunction.
- This malfunction is detected when the A/T does not shift into fourth gear position or the torque converter clutch does not lock up as instructed by the TCM. This is not caused by electrical malfunction (circuits open or shorted) but by mechanical malfunction such as control valve sticking, improper solenoid valve operation, malfunctioning oil pump or torque converter clutch, etc.

Gear position	1	2	3	4
Shift solenoid valve A	ON (Closed)	OFF (Open)	OFF (Open)	ON (Closed)
Shift solenoid valve B	ON (Closed)	ON (Closed)	OFF (Open)	OFF (Open)

CONSULT-II REFERENCE VALUE IN DATA MONITOR MODE

NIAT0062S01

Remarks: Specification data are reference values.

Monitor item	Condition	Specification (Approx.)
Line pressure solenoid valve duty	Small throttle opening (Low line pressure)	24%
	↓ Large throttle opening (High line pressure)	↓ 95%

ON BOARD DIAGNOSTIC LOGIC

NIAT0062S03

This diagnosis monitors actual gear position by checking the torque converter slip ratio calculated by TCM as follows:

Torque converter slip ratio = A x C/B

A: Output shaft revolution signal from revolution sensor

B: Engine speed signal from ECM



C: Gear ratio determined as gear position which TCM supposes

If the actual gear position is much lower than the position (4th) supposed by TCM, the slip ratio will be much less than normal. In case the ratio does not reach the specified value, TCM judges this diagnosis malfunction.

This malfunction will be caused when shift solenoid valve B is stuck closed.

Gear position supposed by TCM	1	2	3	4
In case of gear position with no malfunctions	1	2	3	4
In case of gear position with shift solenoid valve B stuck closed	1	2	2	1*

*: P0734 is detected.

Diagnostic trouble code	Malfunction is detected when ...	Check items (Possible cause)
 : A/T 4TH GR FNCTN	A/T cannot be shifted to the 4th gear position even if electrical circuit is good.	<ul style="list-style-type: none"> ● Shift solenoid valve A ● Shift solenoid valve B ● Line pressure solenoid valve ● Each clutch ● Hydraulic control circuit
 : P0734		

DTC P0734 A/T 4TH GEAR FUNCTION


Description (Cont'd)

SELECT SYSTEM
A/T
ENGINE

SAT014K

SELECT DIAG MODE
SELF-DIAG RESULTS
DATA MONITOR
DTC WORK SUPPORT
TCM PART NUMBER

SAT971J

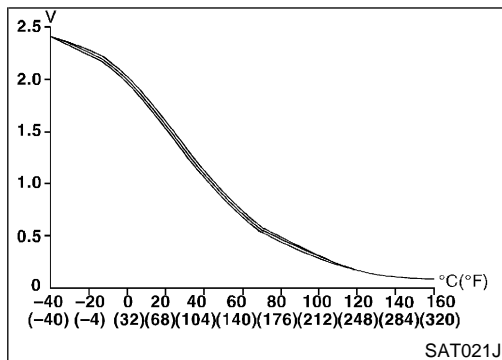

DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE

NIAT0062S04

CAUTION:

- Always drive vehicle at a safe speed.
- If conducting this “DTC CONFIRMATION PROCEDURE” again, always turn ignition switch “OFF” and wait at least 5 seconds before continuing.
- Be careful not to rev engine into the red zone on the tachometer.

NOTE:

If “DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE” has been previously conducted, always turn ignition switch “OFF” and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Always drive vehicle on a level road to improve the accuracy of test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

With CONSULT-II

- 1) Start engine and select “DATA MONITOR” mode for “A/T” with CONSULT-II.
- 2) Make sure that output voltage of A/T fluid temperature sensor is within the range below.

FLUID TEMP SEN: 0.4 - 1.5V

If out of range, drive the vehicle to decrease the voltage (warm up the fluid) or stop engine to increase the voltage (cool down the fluid).

- 3) Select “4TH GR FNCTN P0734” of “DTC WORK SUPPORT” mode for “A/T” with CONSULT-II and touch “START”.
- 4) Accelerate vehicle to 45 to 55 km/h (28 to 34 MPH) –QG18DE– or 40 to 50 km/h (25 to 31 MPH) –SR20DE– under the following condition and release the accelerator pedal completely.

THROTTLE POSI: Less than 5.5/8 (at all times during step 4)

Selector lever: D position (OD “ON”)

- Check that “GEAR” shows “3” after releasing pedal.
- 5) Depress accelerator pedal steadily with 1.0/8 - 2.0/8 of “THROTTLE POSI” from a speed of 45 to 55 km/h (28 to 34 MPH) –QG18DE– or 40 to 50 km/h (25 to 31 MPH) –SR20DE– until “TESTING” has turned to “STOP VEHICLE” or “COMPLETED”. (It will take approximately 3 seconds.)

If the check result NG appears on CONSULT-II screen, go to “Diagnostic Procedure”, AT-153.

If “STOP VEHICLE” appears on CONSULT-II screen, go to following step.

- Check that “GEAR” shows “4” when depressing accelerator pedal with 1.0/8 - 2.0/8 of “THROTTLE POSI”.
- If “TESTING” does not appear on CONSULT-II for a long time, select “SELF-DIAGNOSIS” for “ENGINE”. In case a 1st trip DTC other than P0734 is shown, refer to applicable “TROUBLE DIAGNOSIS FOR DTC”.

- 6) Stop vehicle.
- 7) Follow the instruction displayed. (Check for normal shifting referring to the table below.)

DTC P0734 A/T 4TH GEAR FUNCTION

Description (Cont'd)

Vehicle condition	Gear on actual transmission shift pattern when screen is changed to 1 → 2 → 3 → 4	GI
No malfunction exists	1 → 2 → 3 → 4	
Malfunction for P0734 exists.	1 → 2 → 2 → 1	MA

- 8) Make sure that "OK" is displayed. (If "NG" is displayed, refer to "Diagnostic Procedure".)
 Refer to "Diagnostic Procedure", AT-153.
 Refer to "Shift Schedule", AT-378.

 **With GST**

Follow the procedure "With CONSULT-II".

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P0734 A/T 4TH GEAR FUNCTION



Wiring Diagram — AT — 4TH

Wiring Diagram — AT — 4TH

NIAT0063

AT-4THSIG-01

— : DETECTABLE LINE FOR DTC
 — : NON-DETECTABLE LINE FOR DTC

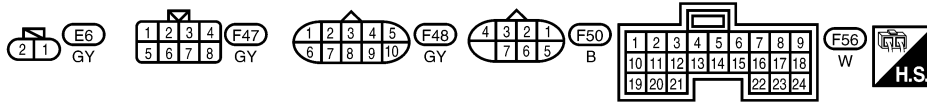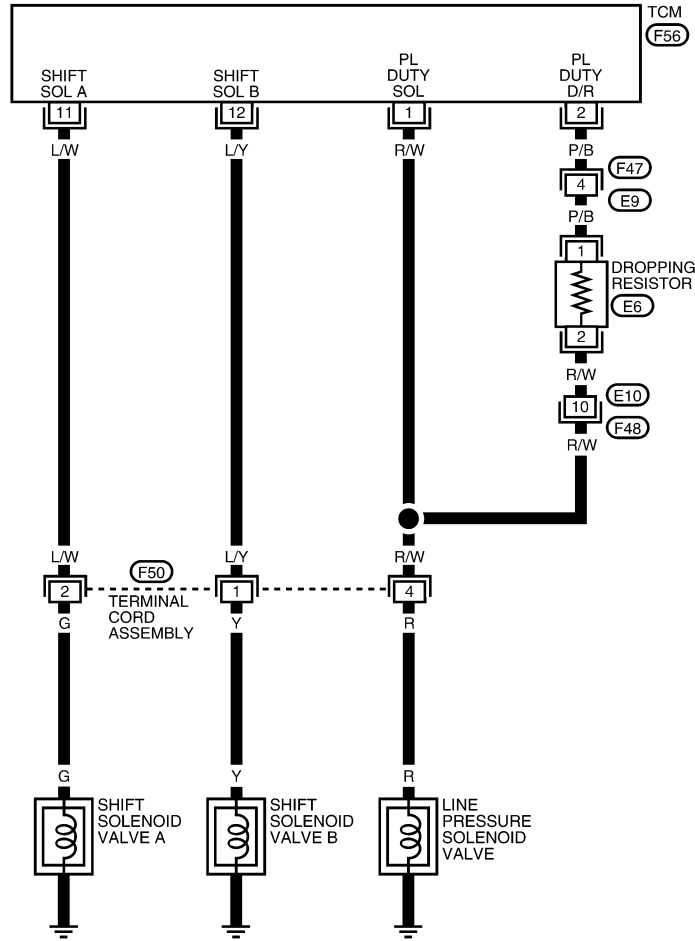

WAT458


TRANSMISSION CONTROL MODULE TERMINALS AND REFERENCE VALUE BETWEEN TERMINAL AND GROUND

TERMINAL	WIRE COLOR	ITEM	CONDITION	DATA (DC) (Approx.)
1	R/W	LINE PRESSURE SOLENOID VALVE	WHEN RELEASING ACCELERATOR PEDAL (ENGINE WARM)	1.5 - 2.5V
			WHEN DEPRESSING ACCELERATOR PEDAL (ENGINE WARM)	0V
2	P/B	LINE PRESSURE SOLENOID VALVE (WITH DROPPING RESISTOR)	WHEN RELEASING ACCELERATOR PEDAL (ENGINE WARM)	5 - 14V
			WHEN DEPRESSING ACCELERATOR PEDAL (ENGINE WARM)	0.5V OR LESS
11	L/W	SHIFT SOLENOID VALVE A	WHEN SHIFT SOLENOID VALVE A OPERATES	BATTERY VOLTAGE
			WHEN SHIFT SOLENOID VALVE A DOES NOT OPERATE	0V
12	L/Y	SHIFT SOLENOID VALVE B	WHEN SHIFT SOLENOID VALVE B OPERATES	BATTERY VOLTAGE
			WHEN SHIFT SOLENOID VALVE B DOES NOT OPERATE	0V

WAT346

Diagnostic Procedure

NIAT0064

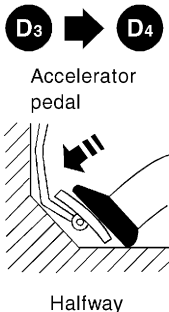1	CHECK SHIFT UP (D₃ TO D₄)	
During "Cruise Test – Part 1" (AT-76), does A/T shift from D ₃ to D ₄ at the specified speed?		
 <p style="text-align: center;">Accelerator pedal</p> <p style="text-align: center;">Halfway</p>		
Yes or No		
Yes	▶	GO TO 9.
No	▶	GO TO 2.

GI
MA
EM
LC
EC
FE
CL

2	CHECK LINE PRESSURE												
Perform line pressure test. Refer to AT-66.													
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th rowspan="2">Engine speed rpm</th> <th colspan="2">Line pressure kPa (kg/cm², psi)</th> </tr> <tr> <th>D, 2 and 1 positions</th> <th>R position</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">Idle</td> <td style="text-align: center;">500 (5.1, 73)</td> <td style="text-align: center;">778 (7.9, 113)</td> </tr> <tr> <td style="text-align: center;">Stall</td> <td style="text-align: center;">1,167 (11.9, 169)</td> <td style="text-align: center;">1,816 (18.5, 263)</td> </tr> </tbody> </table>			Engine speed rpm	Line pressure kPa (kg/cm ² , psi)		D, 2 and 1 positions	R position	Idle	500 (5.1, 73)	778 (7.9, 113)	Stall	1,167 (11.9, 169)	1,816 (18.5, 263)
Engine speed rpm	Line pressure kPa (kg/cm ² , psi)												
	D, 2 and 1 positions	R position											
Idle	500 (5.1, 73)	778 (7.9, 113)											
Stall	1,167 (11.9, 169)	1,816 (18.5, 263)											
OK or NG													
OK	▶	GO TO 3.											
NG	▶	GO TO 6.											

MT
AT
AX
SU
BR
ST
RS


BT
HA
SC
EL
IDX

DTC P0734 A/T 4TH GEAR FUNCTION

Diagnostic Procedure (Cont'd)

3 CHECK SOLENOID VALVES

1. Remove control valve assembly.
Refer to "Removal", AT-271.
2. Refer to "Component Inspection", AT-157.

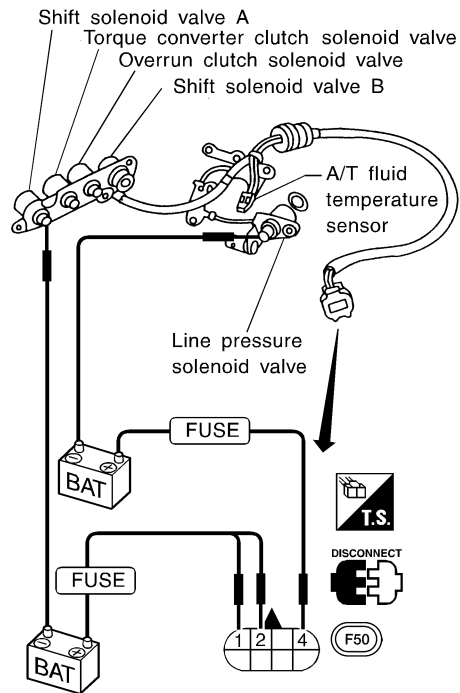

OK or NG


WAT168

OK ► GO TO 4.

NG ► Replace solenoid valve assembly.

4 CHECK CONTROL VALVE

1. Disassemble control valve assembly.
Refer to "Components", AT-303.
2. Check to ensure that:
 - Valve, sleeve and plug slide along valve bore under their own weight.
 - Valve, sleeve and plug are free from burrs, dents and scratches.
 - Control valve springs are free from damage, deformation and fatigue.
 - Hydraulic line is free from obstacles.

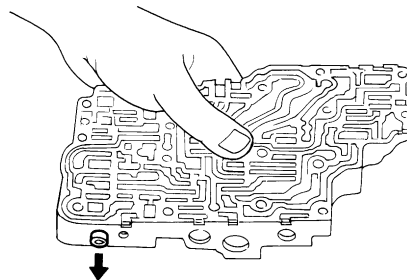

OK or NG

SAT367H

OK ► GO TO 5.

NG ► Repair control valve.

DTC P0734 A/T 4TH GEAR FUNCTION

Diagnostic Procedure (Cont'd)

5	CHECK SHIFT UP (D₃ TO D₄)
Does A/T shift from D ₃ to D ₄ at the specified speed?	
OK or NG	
OK	▶ GO TO 9.
NG	▶ Check control valve again. Repair or replace control valve assembly.


6	CHECK LINE PRESSURE SOLENOID VALVE
<ol style="list-style-type: none"> Remove control valve assembly. Refer to AT-271. Refer to "Component Inspection", AT-157. 	
<p style="text-align: center;">Line pressure solenoid valve</p> <p style="text-align: center;">BAT</p> <p style="text-align: center;">FUSE</p> <p style="text-align: center;">4</p> <p style="text-align: center;">F50</p> <p style="text-align: center;">DISCONNECT</p> <p style="text-align: center;">T.S.</p>	
OK or NG	
OK	▶ GO TO 7.
NG	▶ Replace solenoid valve assembly.

WAT170

GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX



DTC P0734 A/T 4TH GEAR FUNCTION

Diagnostic Procedure (Cont'd)

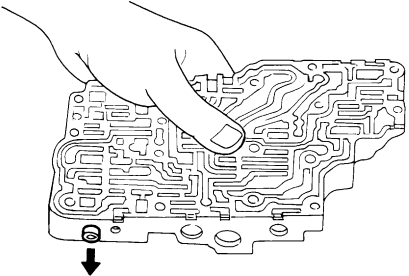7	CHECK CONTROL VALVE	
<p>1. Disassemble control valve assembly. Refer to "Components", AT-303.</p> <p>2. Check line pressure circuit valves for sticking.</p> <ul style="list-style-type: none"> ● Pressure regulator valve ● Pilot valve ● Pressure modifier valve 		
		
SAT367H		
OK or NG		
OK	▶	GO TO 8.
NG	▶	Repair control valve.

8	CHECK SHIFT UP (D₃ TO D₄)	
Does A/T shift from D ₃ to D ₄ at the specified speed?		
Yes or No		
Yes	▶	GO TO 9.
No	▶	Check control valve again. Repair or replace control valve assembly.

9	CHECK DTC	
Perform "DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE", AT-150.		
OK or NG		
OK	▶	INSPECTION END
NG	▶	Perform "Cruise Test — Part 1" again and return to the start point of this test group.

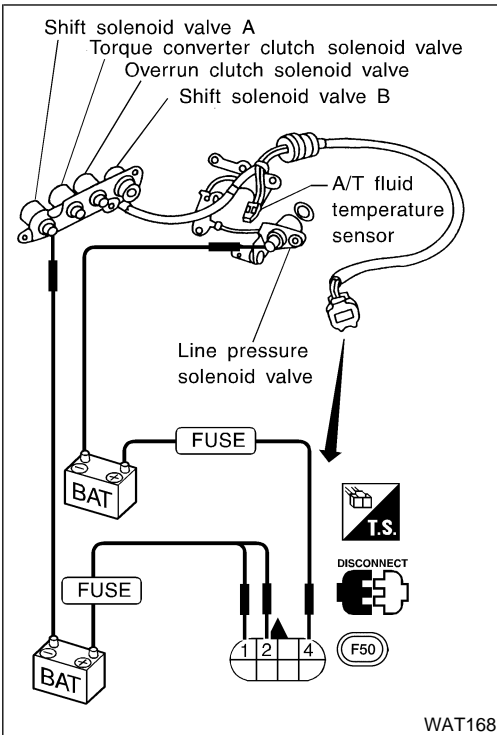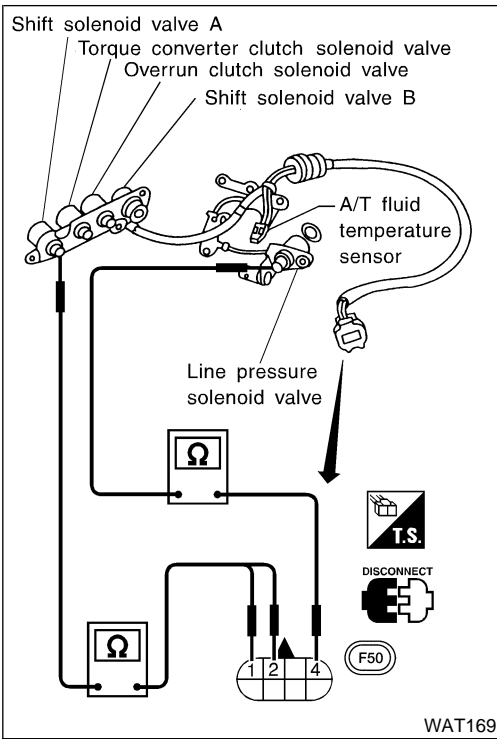

Component Inspection

SOLENOID VALVES

=NIAT0065

NIAT0065S01

- Refer to "REMOVAL", AT-271.

Resistance Check

NIAT0065S0101

- Check resistance between two terminals.

Solenoid valve	Terminal No.		Resistance (Approx.)
Shift solenoid valve A	2	Ground	20 - 30Ω
Shift solenoid valve B	1		5 - 20Ω
Line pressure solenoid valve	4		2.5 - 5Ω

Operation Check

NIAT0065S0102

- Check solenoid valve by listening for its operating sound while applying battery voltage to the terminal and ground.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA


SC

EL

IDX

DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE

Description

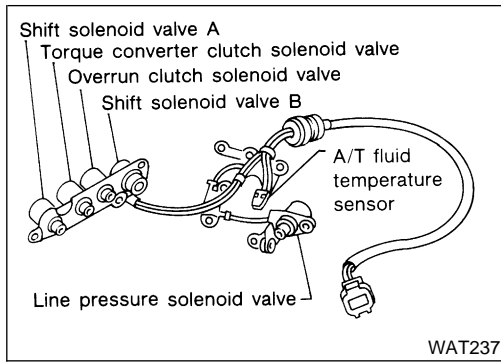

Description

The torque converter clutch solenoid valve is activated, with the gear in "D₄", by the TCM in response to signals sent from the vehicle speed and throttle position sensors. Lock-up piston operation will then be controlled.

Lock-up operation, however, is prohibited when A/T fluid temperature is too low.

When the accelerator pedal is depressed (less than 2/8) in lock-up condition, the engine speed should not change abruptly. If there is a big jump in engine speed, there is no lock-up.


CONSULT-II REFERENCE VALUE IN DATA MONITOR MODE

Remarks: Specification data are reference values.


Monitor item	Condition	Specification (Approx.)
Torque converter clutch solenoid valve duty	Lock-up "OFF"	4%
	Lock-up "ON"	94%

ON BOARD DIAGNOSIS LOGIC

Diagnostic trouble code	Malfunction is detected when ...	Check items (Possible cause)
(P) : TCC SOLENOID/CIRC (G) : P0740	TCM detects an improper voltage drop when it tries to operate the solenoid valve.	<ul style="list-style-type: none"> ● Harness or connectors (The solenoid circuit is open or shorted.) ● T/C clutch solenoid valve

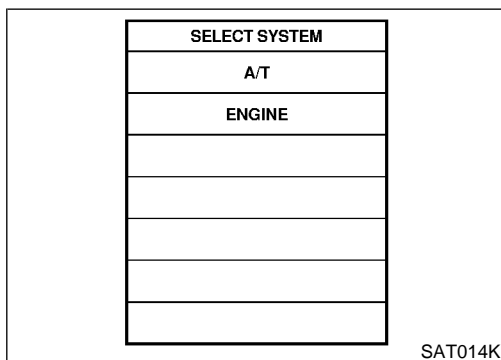

SAT014K

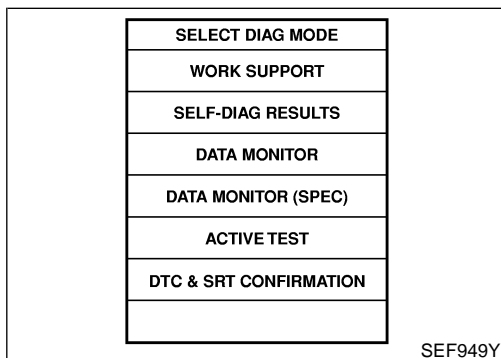

SEF949Y

DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

(P) With CONSULT-II

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode for "ENGINE" with CONSULT-II and wait at least 1 second.

(G) With GST

Follow the procedure "With CONSULT-II".


DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE

Wiring Diagram — AT — TCV

Wiring Diagram — AT — TCV

NIAT0067

AT-TCV-01

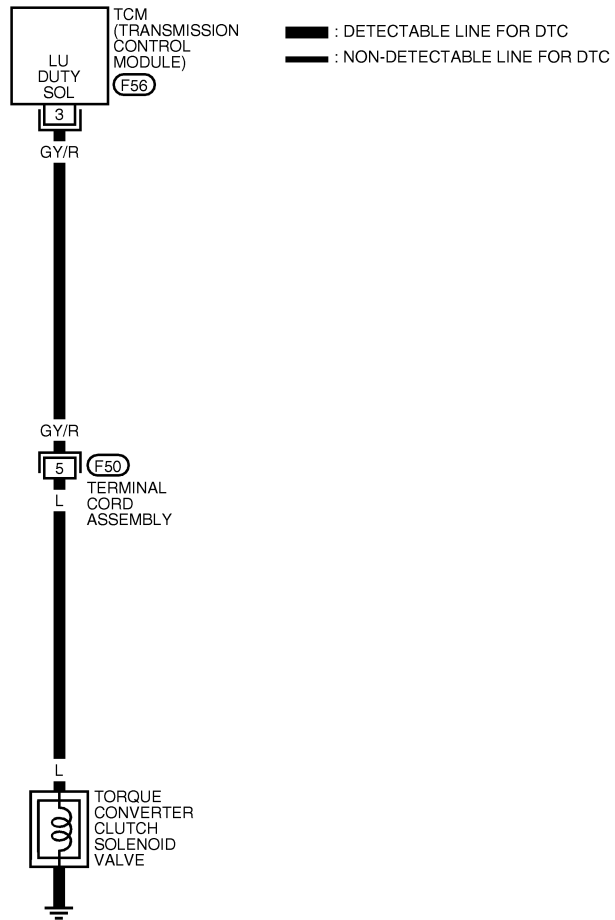

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR


ST

RS

BT

WAT122

HA

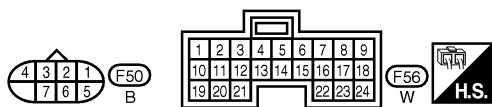

TRANSMISSION CONTROL MODULE TERMINALS AND REFERENCE VALUE BETWEEN TERMINAL AND GROUND

TERMINAL	WIRE COLOR	ITEM	CONDITION	DATA (DC) (Approx.)
3	GY/R	TORQUE CONVERTER CLUTCH SOLENOID VALVE	WHEN A/T PERFORMS LOCK-UP	8 - 15V
			WHEN A/T DOES NOT PERFORM LOCK-UP	0V

SC

EL

IDX


WAT347


DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE

Diagnostic Procedure

Diagnostic Procedure

NIAT0068

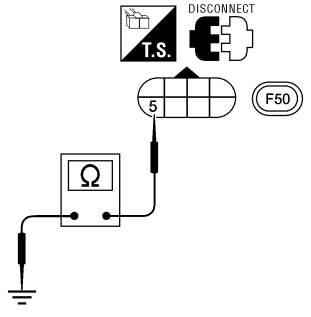
1	CHECK VALVE RESISTANCE
<p>1. Turn ignition switch to "OFF" position. 2. Disconnect terminal cord assembly connector in engine compartment. 3. Check resistance between terminal 5 and ground.</p> <div style="display: flex; justify-content: space-around; align-items: center;">  <div style="text-align: center;"> <p>Resistance: 5 - 20Ω</p> </div> </div> <p style="text-align: right;">LAT171</p>	
OK or NG	
OK	▶ GO TO 2.
NG	▶ <ol style="list-style-type: none"> 1. Remove oil pan. Refer to "Removal", AT-271. 2. Check the following items: <ul style="list-style-type: none"> ● Torque converter clutch solenoid valve Refer to "Component Inspection", AT-161. ● Harness of terminal cord assembly for short or open

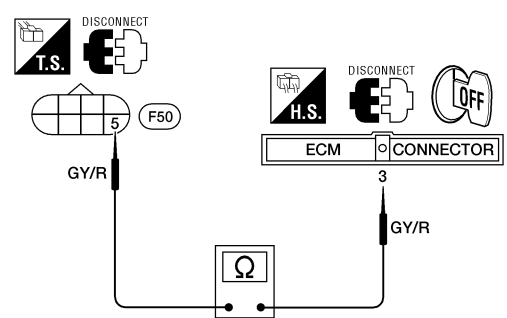2	CHECK POWER SOURCE CIRCUIT
<p>1. Turn ignition switch to "OFF" position. 2. Disconnect TCM harness connector. 3. Check continuity between terminal 5 and TCM harness connector terminal 3.</p> <div style="display: flex; justify-content: space-around; align-items: center;">  <div style="text-align: center;"> <p>Continuity should exist.</p> </div> </div> <p style="text-align: right;">LAT172</p> <p>If OK, check harness for short to ground and short to power.</p> <p>4. Reinstall any part removed.</p>	
OK or NG	
OK	▶ GO TO 3.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

3	CHECK DTC
<p>Perform "DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE", AT-158.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ INSPECTION END
NG	▶ <ol style="list-style-type: none"> 1. Perform TCM input/output signal inspection. 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE

Component Inspection

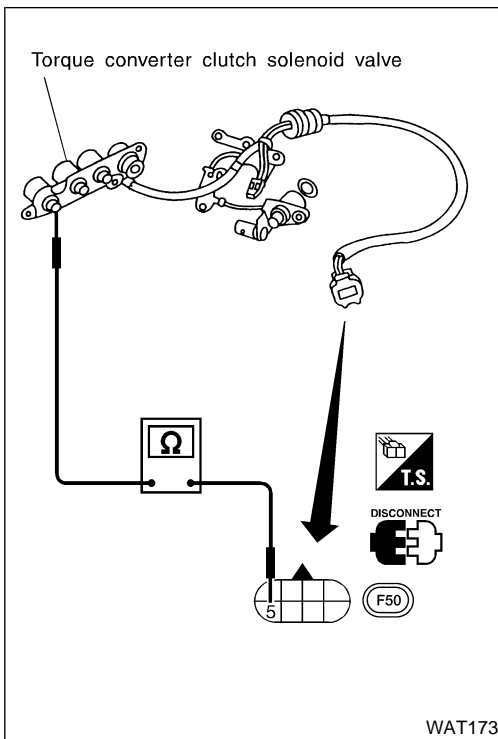

Component Inspection

TORQUE CONVERTER CLUTCH SOLENOID VALVE

NIAT0069

NIAT0069S01


- Refer to "Removal", AT-271.

Resistance Check

NIAT0069S0101

- Check resistance between two terminals.

Solenoid valve	Terminal No.		Resistance (Approx.)
Torque converter clutch solenoid valve	5	Ground	5 - 20Ω

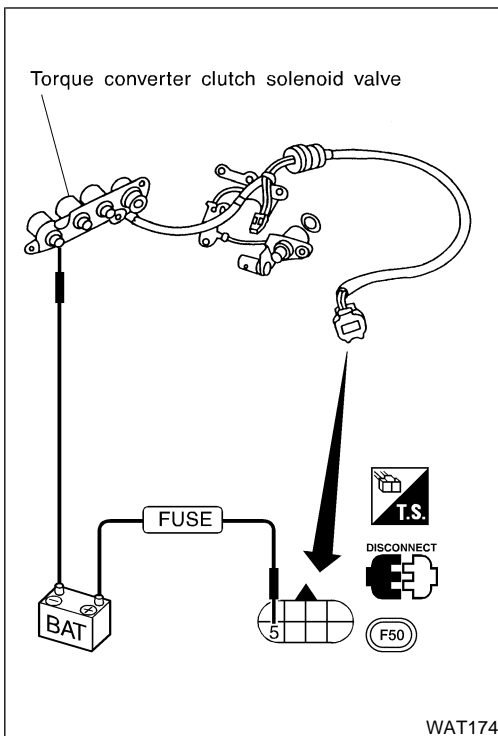

Operation Check

NIAT0069S0102

- Check solenoid valve by listening for its operating sound while applying battery voltage to the terminal and ground.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)

Description

Description

- This is an OBD-II self-diagnostic item and not available in TCM self-diagnosis. NIAT0070
- This malfunction will not be detected while the O/D OFF indicator lamp is indicating another self-diagnosis malfunction.
- This malfunction is detected when the A/T does not shift into fourth gear position or the torque converter clutch does not lock up as instructed by the TCM. This is not caused by electrical malfunction (circuits open or shorted) but by mechanical malfunction such as control valve sticking, improper solenoid valve operation, malfunctioning oil pump or torque converter clutch, etc.

CONSULT-II REFERENCE VALUE IN DATA MONITOR MODE

NIAT0070S01

Remarks: Specification data are reference values.

Monitor item	Condition	Specification (Approx.)
Torque converter clutch solenoid valve duty	Lock-up "OFF"	4%
	↓ Lock-up "ON"	↓ 94%

DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)

Description (Cont'd)

ON BOARD DIAGNOSTIC LOGIC

-NIAT0070S03

This diagnosis monitors actual gear position by checking the torque converter slip ratio calculated by TCM as follows:

Torque converter slip ratio = A x C/B

A: Output shaft revolution signal from revolution sensor

B: Engine speed signal from ECM



C: Gear ratio determined as gear position which TCM supposes



If the actual gear position is much lower than the position (4th) supposed by TCM, the slip ratio will be much less than normal. In case the ratio does not reach the specified value, TCM judges this diagnosis malfunction.

This malfunction will be caused when shift solenoid valve B is stuck closed.

Gear position supposed by TCM	1	2	3	4
In case of gear position with no malfunctions	1	2	3	4
In case of gear position with shift solenoid valve B stuck closed	1	2	2	1*

*: P0744 is detected.

Diagnostic trouble code	Malfunction is detected when ...	Check items (Possible cause)
 : A/T TCC S/V FNCTN	A/T cannot perform lock-up even if electrical circuit is good.	<ul style="list-style-type: none"> • Torque converter clutch solenoid valve • Line pressure solenoid valve • Each clutch • Hydraulic control circuit
 : P0744		

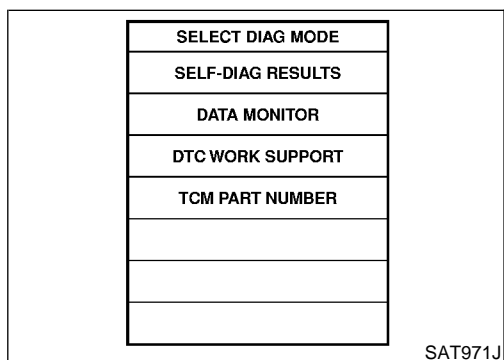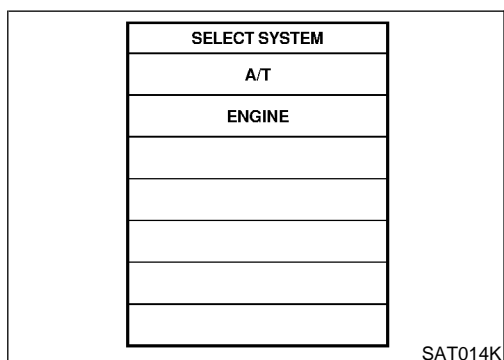

DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE

NIAT0070S04

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.


After the repair, perform the following procedure to confirm the malfunction is eliminated.

With CONSULT-II

- 1) Start engine and select "DATA MONITOR" mode for "A/T" with CONSULT-II.
- 2) Make sure that output voltage of A/T fluid temperature sensor is within the range below.
FLUID TEMP SEN: 0.4 - 1.5V
 If out of range, drive the vehicle to decrease the voltage (warm up the fluid) or stop engine to increase the voltage (cool down the fluid).
- 3) Select "TCC S/V FNCTN P0744" of "DTC WORK SUPPORT" mode for "A/T" with CONSULT-II and touch "START".

DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)

Description (Cont'd)

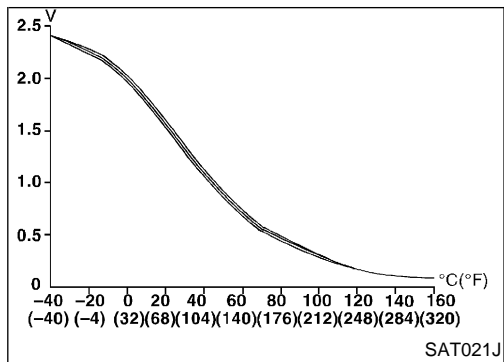

- 4) Accelerate vehicle to more than 80 km/h (50 MPH) and maintain the following condition continuously until "TESTING" has turned to "COMPLETE". (It will take approximately 30 seconds after "TESTING" shows.)
THROTTLE POSI: 1.0/8 - 2.0/8 (at all times during step 4)
Selector lever: D position (OD "ON")
TCC S/V DUTY: More than 94%
VHCL/S SE-A/T: Constant speed of more than 80 km/h (50 MPH) -QG18DE (Calif. CA Model) or 70 km/h (43 MPH) -SR20DE
 - Check that "GEAR" shows "4".
 - For "Shift Schedule", refer to SDS, AT-378.
 - If "TESTING" does not appear on CONSULT-II for a long time, select "SELF-DIAGNOSIS". In case a 1st trip DTC other than P0744 is shown, refer to applicable "TROUBLE DIAGNOSIS FOR DTC".
- 5) Make sure that "OK" is displayed. (If "NG" is displayed, refer to "DIAGNOSTIC PROCEDURE".)
Refer to "Diagnostic Procedure", AT-166.
Refer to "Shift Schedule", AT-378.



With GST

Follow the procedure "With CONSULT-II".

DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)


Wiring Diagram — AT — TCCSIG

Wiring Diagram — AT — TCCSIG

NIAT0071

AT-TCCSIG-01

— : DETECTABLE LINE FOR DTC
 - - - : NON-DETECTABLE LINE FOR DTC

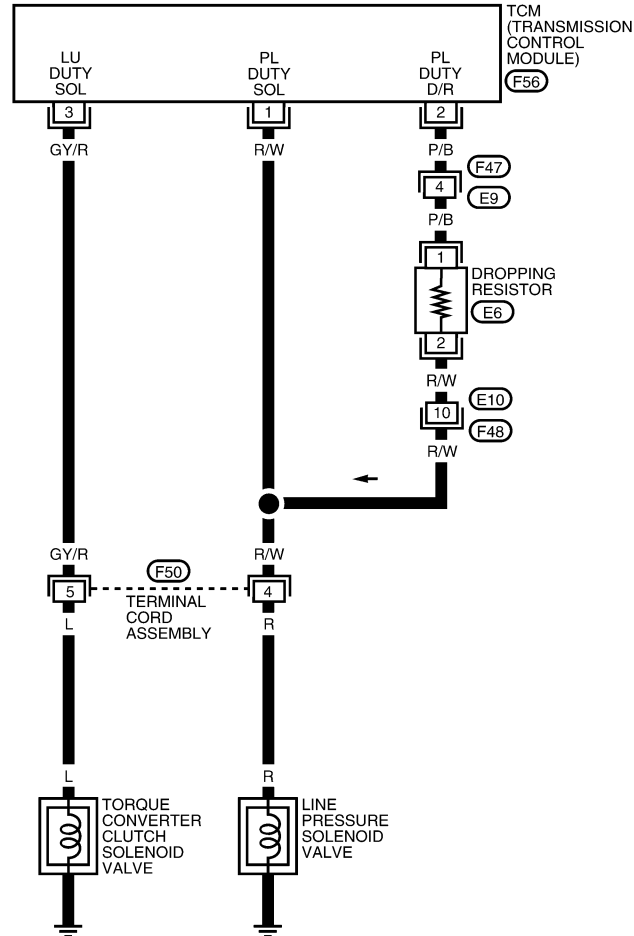

GI
 MA
 EM
 LC
 EC
 FE
 CL
 MT
AT

AX
 SU
 BR
 ST

RS
 BT

WAT459

HA
 SC
 EL
 IDX



TRANSMISSION CONTROL MODULE TERMINALS AND REFERENCE VALUE BETWEEN TERMINAL AND GROUND

TERMINAL	WIRE COLOR	ITEM	CONDITION	DATA (DC) (Approx.)
1	R/W	LINE PRESSURE SOLENOID VALVE	WHEN RELEASING ACCELERATOR PEDAL (ENGINE WARM)	1.5 - 2.5V
			WHEN DEPRESSING ACCELERATOR PEDAL (ENGINE WARM)	0.5V OR LESS
2	P/B	LINE PRESSURE SOLENOID VALVE (WITH DROPPING RESISTOR)	WHEN RELEASING ACCELERATOR PEDAL (ENGINE WARM)	5 - 14V
			WHEN DEPRESSING ACCELERATOR PEDAL (ENGINE WARM)	0.5V OR LESS
3	GY/R	TORQUE CONVERTER CLUTCH SOLENOID VALVE	WHEN A/T PERFORMS LOCK-UP	8 - 14V
			WHEN A/T DOES NOT PERFORM LOCK-UP	0V


WAT348

DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)

Diagnostic Procedure

Diagnostic Procedure


NIAT0072

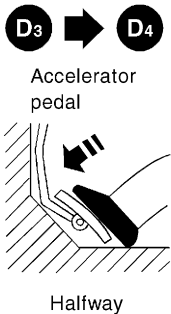1	CHECK SHIFT UP (D₃ TO D₄)
<p>During "Cruise Test – Part 1" (AT-76), does A/T shift from D₃ to D₄ at the specified speed?</p> <div style="text-align: center;">  <p>Accelerator pedal</p> <p>Halfway</p> </div> <p>Yes or No</p>	
SAT988H	
Yes	▶ GO TO 10.
No	▶ GO TO 2.

2	CHECK LINE PRESSURE											
<p>Perform line pressure test. Refer to "Line Pressure Test", AT-66.</p>												
<table border="1" style="margin: auto;"> <thead> <tr> <th rowspan="2">Engine speed rpm</th> <th colspan="2">Line pressure kPa (kg/cm², psi)</th> </tr> <tr> <th>D, 2 and 1 positions</th> <th>R position</th> </tr> </thead> <tbody> <tr> <td>Idle</td> <td>500 (5.1, 73)</td> <td>778 (7.9, 113)</td> </tr> <tr> <td>Stall</td> <td>1,167 (11.9, 169)</td> <td>1,816 (18.5, 263)</td> </tr> </tbody> </table>		Engine speed rpm	Line pressure kPa (kg/cm ² , psi)		D, 2 and 1 positions	R position	Idle	500 (5.1, 73)	778 (7.9, 113)	Stall	1,167 (11.9, 169)	1,816 (18.5, 263)
Engine speed rpm	Line pressure kPa (kg/cm ² , psi)											
	D, 2 and 1 positions	R position										
Idle	500 (5.1, 73)	778 (7.9, 113)										
Stall	1,167 (11.9, 169)	1,816 (18.5, 263)										
LAT236												
OK or NG												
OK	▶ GO TO 3.											
NG	▶ GO TO 6.											

DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)

Diagnostic Procedure (Cont'd)

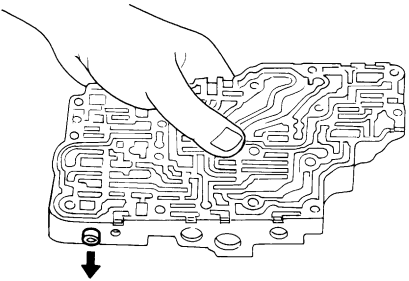3	CHECK CONTROL VALVE	
<p>1. Disassemble control valve assembly. Refer to "DISASSEMBLY", AT-304.</p> <p>2. Check to ensure that:</p> <ul style="list-style-type: none"> ● Valve, sleeve and plug slide along valve bore under their own weight. ● Valve, sleeve and plug are free from burrs, dents and scratches. ● Control valve springs are free from damage, deformation and fatigue. ● Hydraulic line is free from obstacles. 		
		
SAT367H		
OK or NG		
OK	▶	GO TO 4.
NG	▶	Repair control valve.

4	CHECK SHIFT UP (D₃ TO D₄)	
Does A/T shift from D ₃ to D ₄ at the specified speed?		
Yes or No		
Yes	▶	GO TO 5.
No	▶	Check control valve again. Repair or replace control valve assembly.

5	CHECK DTC	
Perform "DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE", AT-163.		
OK or NG		
OK	▶	INSPECTION END
NG	▶	GO TO 10.CHECK LOCK-UP CONDITION.


GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)

Diagnostic Procedure (Cont'd)

6 CHECK LINE PRESSURE SOLENOID VALVE

1. Remove control valve assembly.
Refer to "REMOVAL", AT-271.
2. Check line pressure solenoid valve operation.
Refer to "Component Inspection", AT-172.

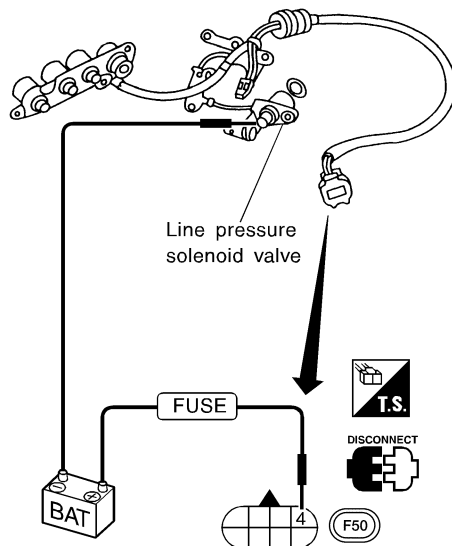

WAT175


OK or NG

OK ► GO TO 7.

NG ► Replace solenoid valve assembly.

7 CHECK CONTROL VALVE

1. Disassemble control valve assembly.
Refer to "DISASSEMBLY", AT-304.
2. Check line pressure circuit valves for sticking.
 - Pressure regulator valve
 - Pilot valve
 - Pressure modifier valve

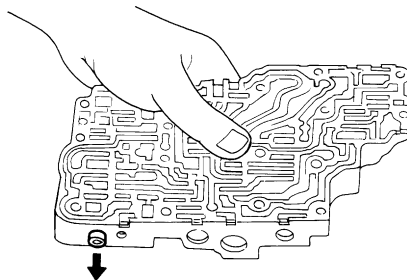

SAT367H

OK or NG

OK ► GO TO 8.


NG ► Repair control valve.

DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)

Diagnostic Procedure (Cont'd)

8	CHECK SHIFT UP (D₃ TO D₄)	
Does A/T shift from D ₃ to D ₄ at the specified speed?		
Yes or No		
Yes	▶	GO TO 9.
No	▶	Check control valve again. Repair or replace control valve assembly.

9	CHECK DTC	
Perform Diagnostic Trouble Code (DTC) confirmation procedure, AT-163.		
OK or NG		
OK	▶	INSPECTION END
NG	▶	GO TO 10. And check for proper lock-up.

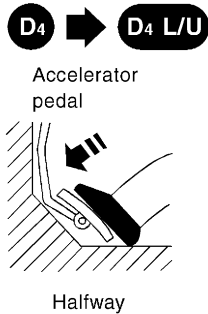10	CHECK LOCK-UP CONDITION	
During "Cruise Test – Part 1" (AT-76), does A/T perform lock-up at the specified speed?		
		
SAT989H		
Yes or No		
Yes	▶	Perform "Cruise Test – Part 1" again and return to the start point of this test group.
No	▶	GO TO 11.


GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)

Diagnostic Procedure (Cont'd)

11 CHECK TORQUE CONVERTER CLUTCH SOLENOID VALVE

1. Remove control valve assembly.
Refer to "REMOVAL", AT-271.
2. Check torque converter clutch solenoid valve operation. Refer to "Component Inspection", AT-172.

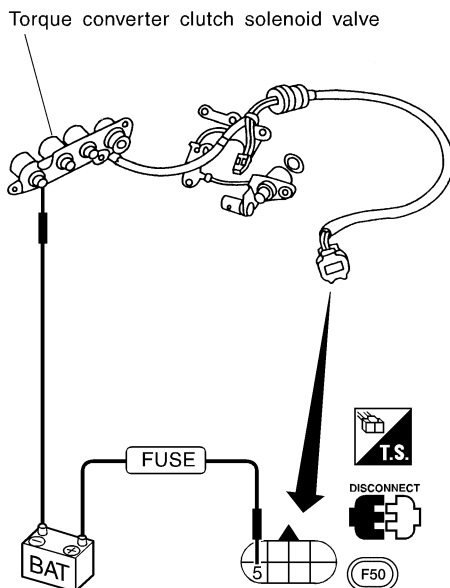


WAT176

OK or NG

- | | | |
|----|---|----------------------------------|
| OK | ▶ | GO TO 12. |
| NG | ▶ | Replace solenoid valve assembly. |

12 CHECK CONTROL VALVE

1. Disassemble control valve assembly.
Refer to "DISASSEMBLY", AT-304.
2. Check control valves for sticking.
 - Torque converter clutch control valve
 - Torque converter clutch relief valve

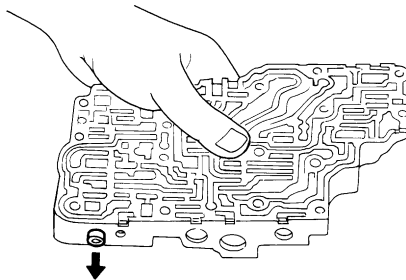

SAT367H

OK or NG

- | | | |
|----|---|-----------------------|
| OK | ▶ | GO TO 13. |
| NG | ▶ | Repair control valve. |

DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)

Diagnostic Procedure (Cont'd)

13	CHECK LOCK-UP CONDITION
Does A/T perform lock-up at the specified speed?	
Yes or No	
Yes	▶ GO TO 14.
No	▶ Check control valve again. Repair or replace control valve assembly.

14	CHECK DTC
Perform "DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE", AT-163.	
OK or NG	
OK	▶ INSPECTION END
NG	▶ Perform "Cruise Test — Part 1" again and return to the start point of this test group.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA


SC

EL

IDX

DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)

Component Inspection

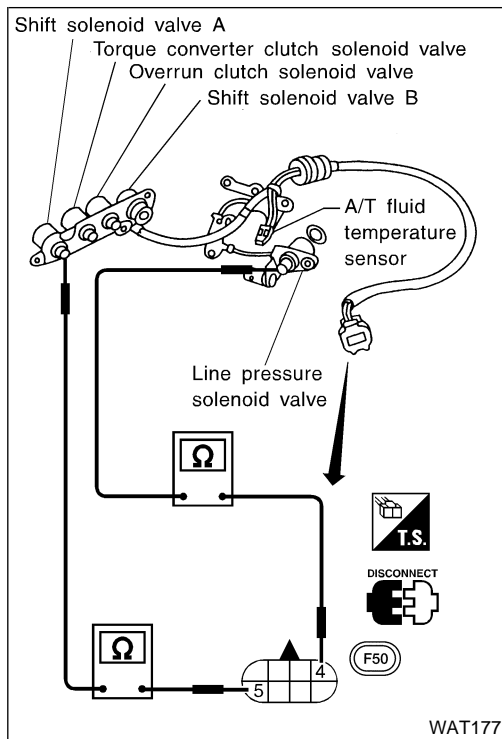

Component Inspection

SOLENOID VALVES

=NIAT0073

NIAT0073S01


- Refer to "REMOVAL", AT-271.

Resistance Check

NIAT0073S0101

- Check resistance between two terminals.

Solenoid valve	Terminal No.		Resistance (Approx.)
Line pressure solenoid valve	4	Ground	2.5 - 5Ω
Torque converter clutch solenoid valve	5		5 - 20Ω

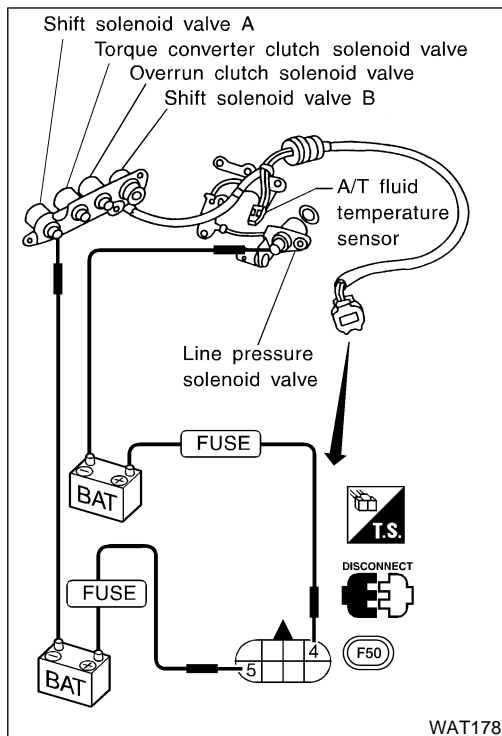


Operation Check

NIAT0073S0102

- Check solenoid valve by listening for its operating sound while applying battery voltage to the terminal and ground.

DTC P0745 LINE PRESSURE SOLENOID VALVE

Description

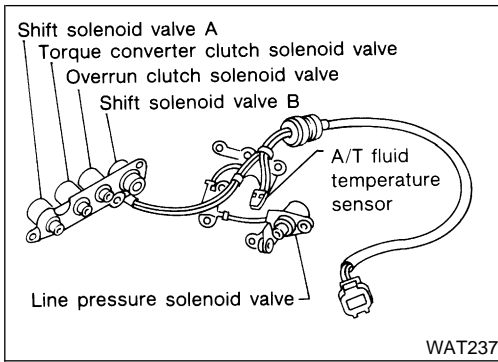

Description

The line pressure solenoid valve regulates the oil pump discharge pressure to suit the driving condition in response to a signal sent from the TCM. NIAT0074

The line pressure duty cycle value is not consistent when the closed throttle position switch is "ON". To confirm the line pressure duty cycle at low pressure, the accelerator (throttle) should be open until the closed throttle position switch is "OFF".

CONSULT-II REFERENCE VALUE IN DATA MONITOR MODE

NIAT0074S01

Remarks: Specification data are reference values.

Monitor item	Condition	Specification (Approx.)
Line pressure solenoid valve duty	Small throttle opening (Low line pressure)	24%
	Large throttle opening (High line pressure)	95%


NOTE:

The line pressure duty cycle value is not consistent when the closed throttle position switch is "ON". To confirm the line pressure duty cycle at low pressure, the accelerator (throttle) should be open until the closed throttle position switch is "OFF".

ON BOARD DIAGNOSIS LOGIC

NIAT0074S03

Diagnostic trouble code	Malfunction is detected when ...	Check items (Possible cause)
(P) : L/PRESS SOL/CIRC (GST) : P0745	TCM detects an improper voltage drop when it tries to operate the solenoid valve.	<ul style="list-style-type: none"> Harness or connectors (The solenoid circuit is open or shorted.) Line pressure solenoid valve

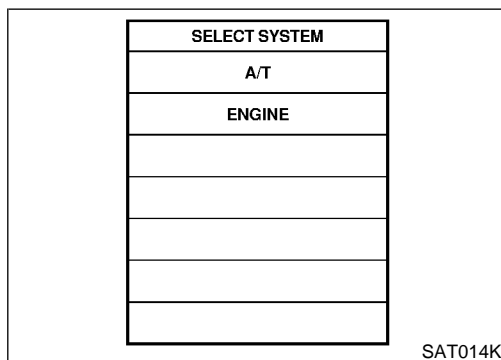

DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE

NIAT0074S04

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.


After the repair, perform the following procedure to confirm the malfunction is eliminated.

(P) With CONSULT-II

- Turn ignition switch "ON" and select "DATA MONITOR" mode for "ENGINE" with CONSULT-II.
- Depress accelerator pedal completely and wait at least 1 second.

(GST) With GST

Follow the procedure "With CONSULT-II".

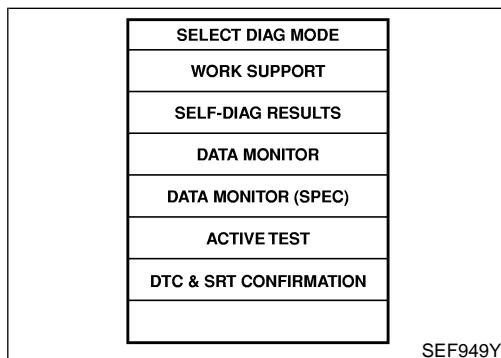



DTC P0745 LINE PRESSURE SOLENOID VALVE

Wiring Diagram — AT — LPSV

Wiring Diagram — AT — LPSV

NIAT0075

AT-LPSV-01

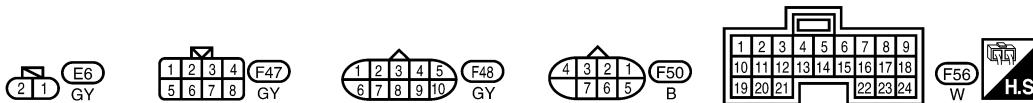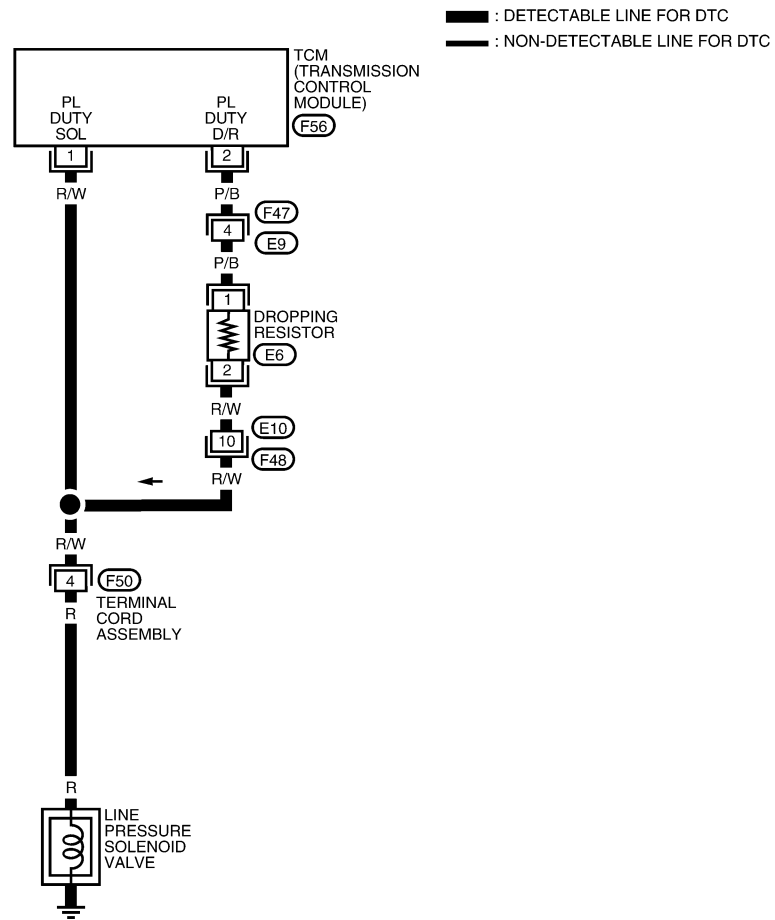

WAT460

TRANSMISSION CONTROL MODULE TERMINALS AND REFERENCE VALUE BETWEEN TERMINAL AND GROUND

TERMINAL	WIRE COLOR	ITEM	CONDITION	DATA (DC) (Approx.)
1	R/W	LINE PRESSURE SOLENOID VALVE	WHEN RELEASING ACCELERATOR PEDAL (ENGINE WARM)	1.5 - 3.0V
			WHEN DEPRESSING ACCELERATOR PEDAL (ENGINE WARM)	0.5V OR LESS
2	P/B	LINE PRESSURE SOLENOID VALVE (WITH DROPPING RESISTOR)	WHEN RELEASING ACCELERATOR PEDAL (ENGINE WARM)	5 - 14V
			WHEN DEPRESSING ACCELERATOR PEDAL (ENGINE WARM)	0.5V OR LESS


WAT349

DTC P0745 LINE PRESSURE SOLENOID VALVE


Diagnostic Procedure

Diagnostic Procedure

NIAT0076

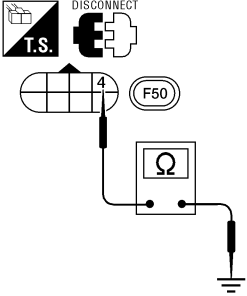1	CHECK VALVE RESISTANCE		
		<ol style="list-style-type: none"> Turn ignition switch to "OFF" position. Disconnect terminal cord assembly connector in engine compartment. Check resistance between terminal 4 and ground. 	
		 <p style="text-align: center;">Resistance: 2.5 - 5Ω</p>	LAT179
		OK or NG	
OK	▶	GO TO 2.	
NG	▶	<ol style="list-style-type: none"> Remove control valve assembly. Refer to "REMOVAL", AT-271. Check the following items: <ul style="list-style-type: none"> Line pressure solenoid valve Refer to "Component Inspection", AT-177. Harness of terminal cord assembly for short or open 	


GI
MA
EM
LC
EC
FE
CL
MT
AT

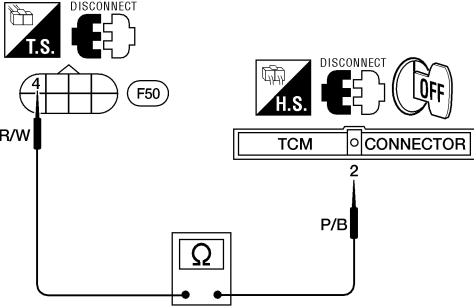2	CHECK POWER SOURCE CIRCUIT		
		<ol style="list-style-type: none"> Turn ignition switch to "OFF" position. Disconnect TCM harness connector. Check resistance between terminal 4 and TCM harness connector terminal 2. 	
		 <p style="text-align: center;">Resistance: 10 - 15Ω</p>	LAT180
		OK or NG	
OK	▶	GO TO 3.	
NG	▶	<p>Check the following items:</p> <ul style="list-style-type: none"> Dropping resistor Refer to "Component Inspection", AT-177. Harness for short or open between TCM terminal 2 and terminal cord assembly (Main harness) 	

AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0745 LINE PRESSURE SOLENOID VALVE

Diagnostic Procedure (Cont'd)

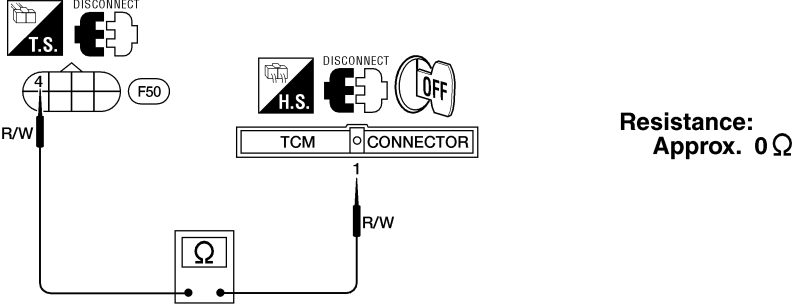
3	CHECK POWER SOURCE CIRCUIT	
<p>1. Turn ignition switch to "OFF" position. 2. Check resistance between terminal 4 and TCM harness connector terminal 1.</p>		
		
<p>If OK, check harness for short to ground and short to power. 3. Reinstall any part removed.</p>		
OK or NG		
OK	▶	GO TO 4.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

LAT181

4	CHECK DTC	
<p>Perform "DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE", AT-173.</p>		
OK or NG		
OK	▶	INSPECTION END
NG	▶	<p>1. Perform TCM input/output signal inspection. 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.</p>

DTC P0745 LINE PRESSURE SOLENOID VALVE

Component Inspection

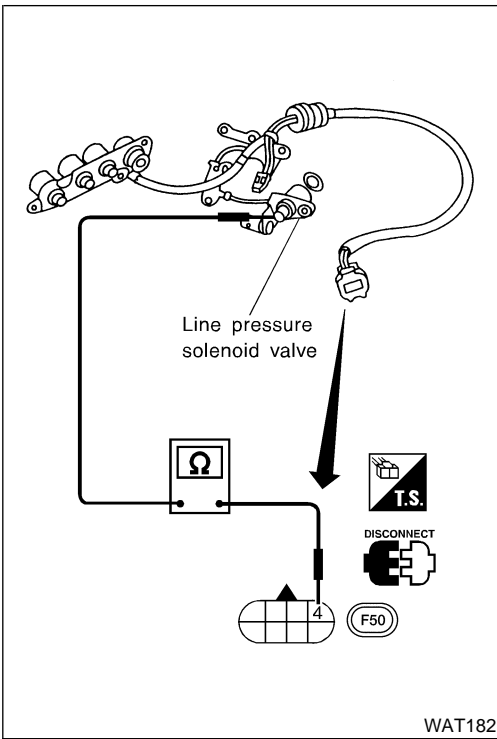

Component Inspection

LINE PRESSURE SOLENOID VALVE

=NIAT0077

NIAT0077S01


- Refer to "REMOVAL", AT-271.

Resistance Check

NIAT0077S0101

- Check resistance between two terminals.


Solenoid valve	Terminal No.		Resistance (Approx.)
Line pressure solenoid valve	4	Ground	2.5 - 5Ω

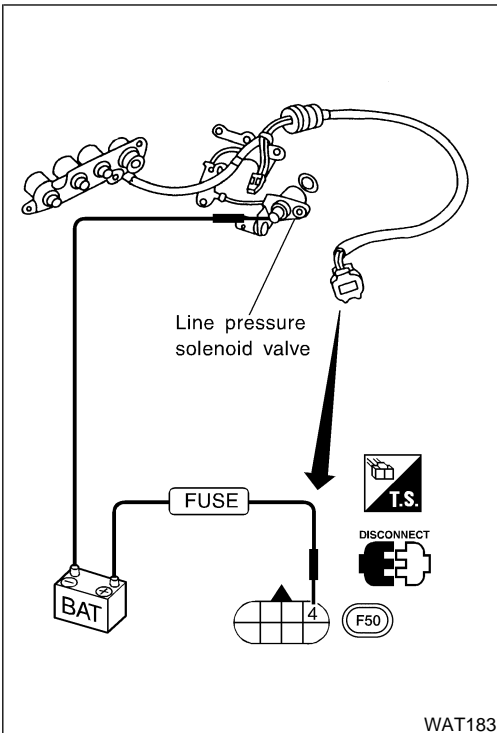

Operation Check

NIAT0077S0102

- Check solenoid valve by listening for its operating sound while applying battery voltage to the terminal and ground.

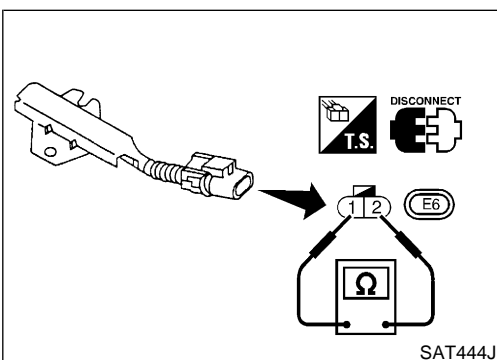

DROPPING RESISTOR

NIAT0077S02

- Check resistance between two terminals.

Resistance:

10 - 15Ω

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA


SC

EL

IDX

DTC P0750 SHIFT SOLENOID VALVE A

Description

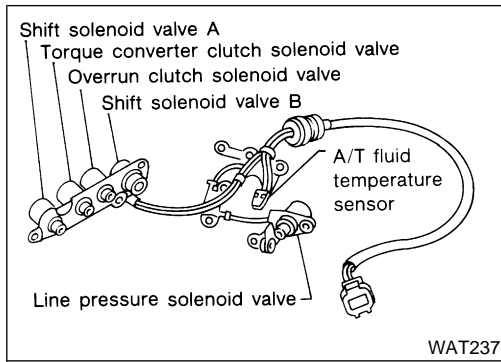

Description



Shift solenoid valves A and B are turned “ON” or “OFF” by the TCM^{NIAT0078} in response to signals sent from the PNP switch, vehicle speed and throttle position sensors. Gears will then be shifted to the optimum position.

Gear position	1	2	3	4
Shift solenoid valve A	ON (Closed)	OFF (Open)	OFF (Open)	ON (Closed)
Shift solenoid valve B	ON (Closed)	ON (Closed)	OFF (Open)	OFF (Open)

ON BOARD DIAGNOSIS LOGIC

NIAT0078S02

Diagnostic trouble code	Malfunction is detected when ...	Check items (Possible cause)
(P) : SFT SOL A/CIRC (P) : P0750	TCM detects an improper voltage drop when it tries to operate the solenoid valve.	<ul style="list-style-type: none"> • Harness or connectors (The solenoid circuit is open or shorted.) • Shift solenoid valve A

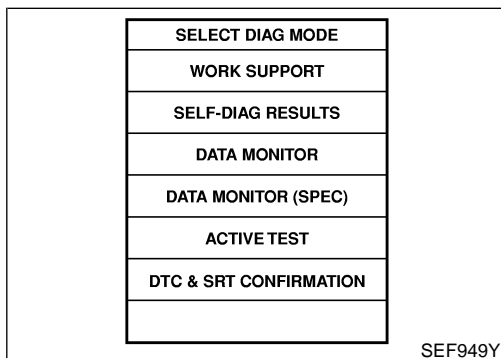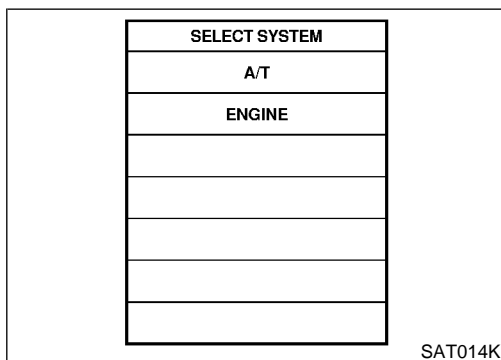

DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE

NIAT0078S03

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If “DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE” has been previously conducted, always turn ignition switch “OFF” and wait at least 5 seconds before conducting the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

(P) With CONSULT-II

- 1) Turn ignition switch “ON” and select “DATA MONITOR” mode for “ENGINE” with CONSULT-II.
- 2) Start engine.
- 3) Drive vehicle in D position and allow the transmission to shift “1” → “2” (“GEAR”).

(P) With GST

Follow the procedure “With CONSULT-II”.



DTC P0750 SHIFT SOLENOID VALVE A

Wiring Diagram — AT — SSV/A

Wiring Diagram — AT — SSV/A

NIAT0079

AT-SSV/A-01

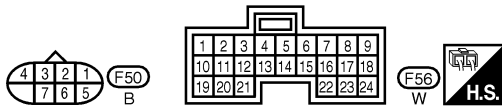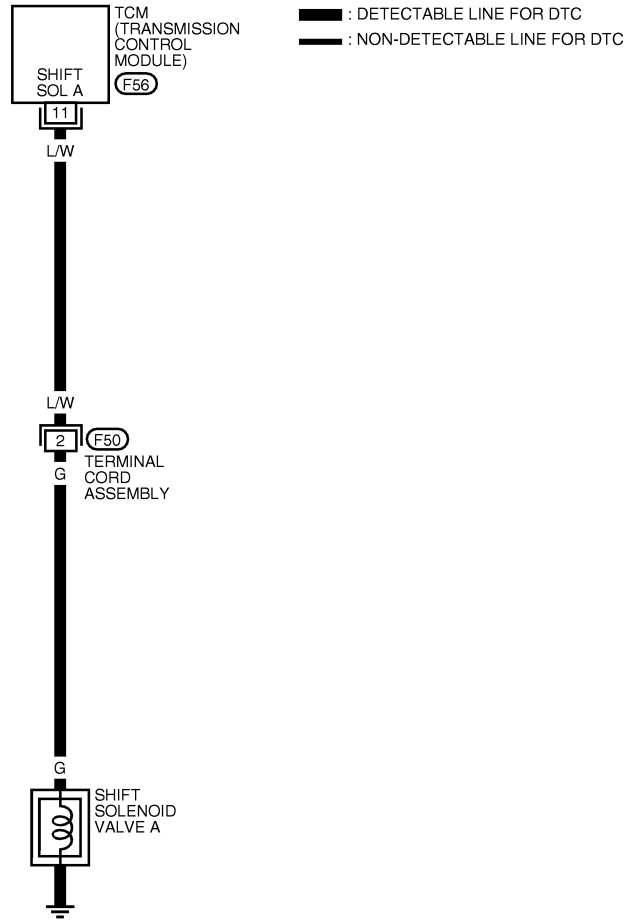

WAT125

TRANSMISSION CONTROL MODULE TERMINALS AND REFERENCE VALUE BETWEEN TERMINAL AND GROUND

TERMINAL	WIRE COLOR	ITEM	CONDITION	DATA (DC) (Approx.)
11	L/W	SHIFT SOLENOID VALVE A	WHEN SHIFT SOLENOID VALVE A OPERATES	BATTERY VOLTAGE
			WHEN SHIFT SOLENOID VALVE A DOES NOT OPERATE	0V

WAT345


GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


DTC P0750 SHIFT SOLENOID VALVE A

Diagnostic Procedure

Diagnostic Procedure

NIAT0080

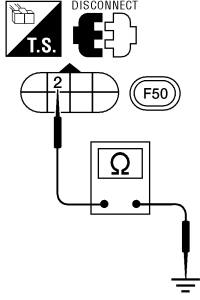
1	CHECK VALVE RESISTANCE
<p>1. Turn ignition switch to "OFF" position. 2. Disconnect terminal cord assembly connector in engine compartment. 3. Check resistance between terminal 2 and ground.</p>	
	
<p>Resistance: 20 - 30 Ω</p>	
<p>LAT184</p>	
<p>OK or NG</p>	
OK	▶ GO TO 2.
NG	▶ <ol style="list-style-type: none"> 1. Remove control valve assembly. Refer to AT-271. 2. Check the following items: <ul style="list-style-type: none"> ● Shift solenoid valve A Refer to "Component Inspection", AT-181. ● Harness of terminal cord assembly for short or open

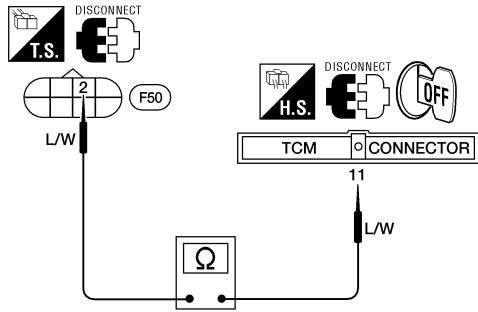2	CHECK POWER SOURCE CIRCUIT
<p>1. Turn ignition switch to "OFF" position. 2. Disconnect TCM harness connector. 3. Check continuity between terminal 2 and TCM harness connector terminal 11.</p>	
	
<p>Continuity should exist.</p>	
<p>LAT185</p>	
<p>If OK, check harness for short to ground and short to power.</p>	
<p>4. Reinstall any part removed.</p>	
<p>OK or NG</p>	
OK	▶ GO TO 3.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

3	CHECK DTC
<p>Perform "DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE", AT-178.</p>	
<p>OK or NG</p>	
OK	▶ INSPECTION END
NG	▶ <ol style="list-style-type: none"> 1. Perform TCM input/output signal inspection. 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

DTC P0750 SHIFT SOLENOID VALVE A

Component Inspection

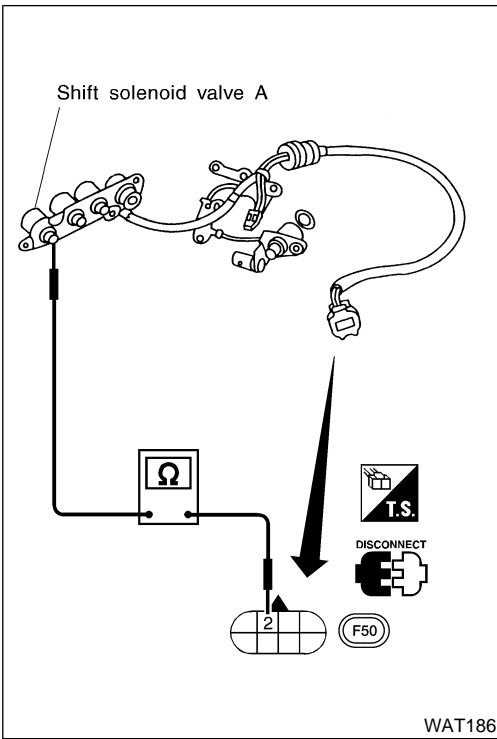

Component Inspection SHIFT SOLENOID VALVE A

NIAT0081

NIAT0081S01


- Refer to "REMOVAL", AT-271.

Resistance Check

NIAT0081S0101

- Check resistance between two terminals.

Solenoid valve	Terminal No.		Resistance (Approx.)
Shift solenoid valve A	2	Ground	20 - 30Ω

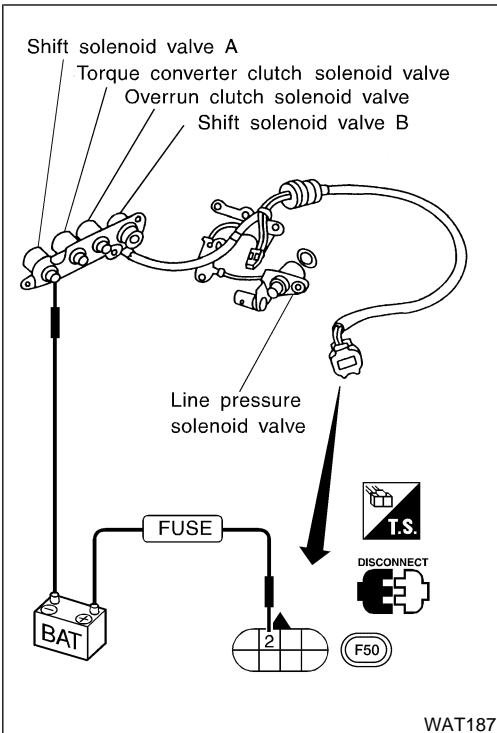

Operation Check

NIAT0081S0102

- Check solenoid valve by listening for its operating sound while applying battery voltage to the terminal and ground.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA


SC

EL

IDX

DTC P0755 SHIFT SOLENOID VALVE B

Description

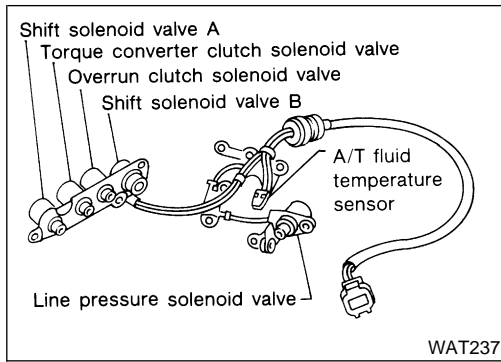

Description



Shift solenoid valves A and B are turned "ON" or "OFF" by the TCM^{NIAT0082} in response to signals sent from the PNP switch, vehicle speed and throttle position sensors. Gears will then be shifted to the optimum position.

Gear position	1	2	3	4
Shift solenoid valve A	ON (Closed)	OFF (Open)	OFF (Open)	ON (Closed)
Shift solenoid valve B	ON (Closed)	ON (Closed)	OFF (Open)	OFF (Open)

ON BOARD DIAGNOSIS LOGIC

NIAT0082S02

Diagnostic trouble code	Malfunction is detected when ...	Check items (Possible cause)
(P) : SFT SOL B/CIRC (P) : P0755	TCM detects an improper voltage drop when it tries to operate the solenoid valve.	<ul style="list-style-type: none"> • Harness or connectors (The solenoid circuit is open or shorted.) • Shift solenoid valve B

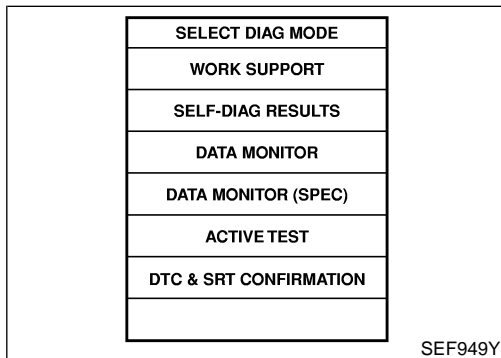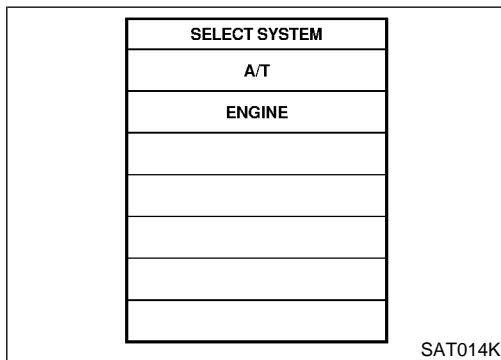

DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE

NIAT0082S03

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

(P) With CONSULT-II

- 1) Turn ignition switch "ON" and select "DATA MONITOR" mode for "ENGINE" with CONSULT-II.
- 2) Start engine.
- 3) Drive vehicle in D position and allow the transmission to shift 1 → 2 → 3 ("GEAR").

(P) With GST

Follow the procedure "With CONSULT-II".


DTC P0755 SHIFT SOLENOID VALVE B

Wiring Diagram — AT — SSV/B


Wiring Diagram — AT — SSV/B

NIAT0083

AT-SSV/B-01

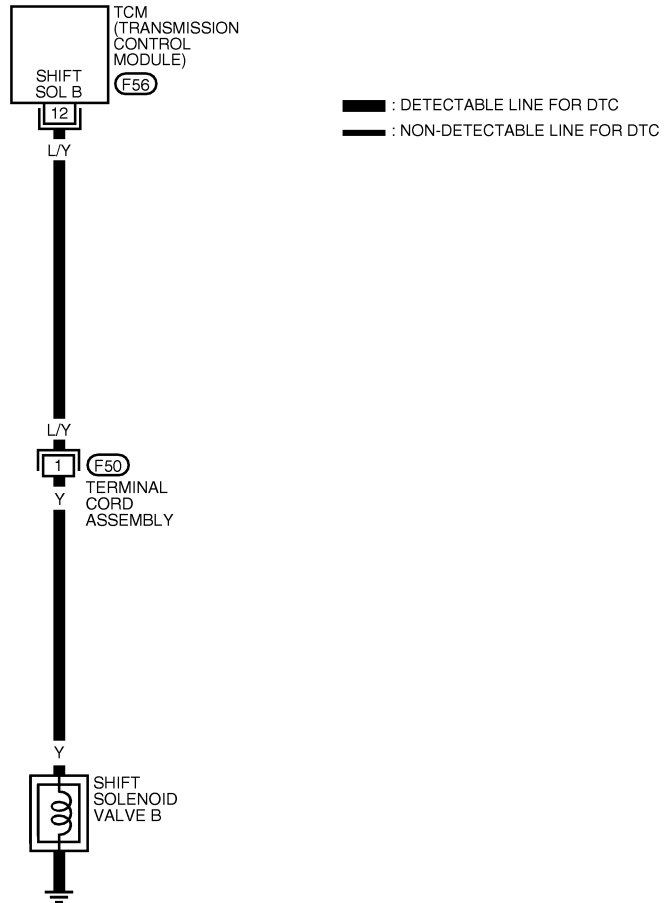

- GI
- MA
- EM
- LC
- EC
- FE
- CL
- MT
- AT**
- AX
- SU
- BR
- ST
- RS
- BT
- HA
- SC
- EL
- IDX

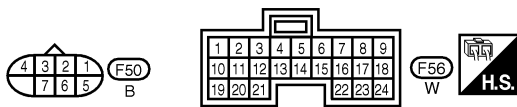

WAT126

TRANSMISSION CONTROL MODULE TERMINALS AND REFERENCE VALUE BETWEEN TERMINAL AND GROUND

TERMINAL	WIRE COLOR	ITEM	CONDITION	DATA (DC) (Approx.)
12	L/Y	SHIFT SOLENOID VALVE B	WHEN SHIFT SOLENOID VALVE B OPERATES	BATTERY VOLTAGE
			WHEN SHIFT SOLENOID VALVE B DOES NOT OPERATE	0V


WAT344


DTC P0755 SHIFT SOLENOID VALVE B

Diagnostic Procedure

Diagnostic Procedure

NIAT0084

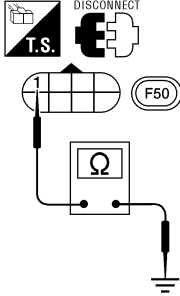
1	CHECK VALVE RESISTANCE	
<p>1. Turn ignition switch to "OFF" position. 2. Disconnect terminal cord assembly connector in engine compartment. 3. Check resistance between terminal 1 and ground.</p>		
		
<p>Resistance: 5 - 20 Ω</p>		
<p>LAT188</p>		
<p>OK or NG</p>		
OK	▶	GO TO 2.
NG	▶	<p>1. Remove control valve assembly. Refer to "REMOVAL", AT-271. 2. Check the following items:</p> <ul style="list-style-type: none"> ● Shift solenoid valve B Refer to "Component Inspection", AT-185. ● Harness of terminal cord assembly for short or open

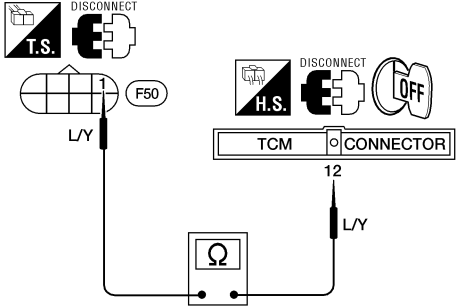2	CHECK POWER SOURCE CIRCUIT	
<p>1. Turn ignition switch to "OFF" position. 2. Disconnect TCM harness connector. 3. Check continuity between terminal 1 and TCM harness connector terminal 12.</p>		
		
<p>Continuity should exist.</p>		
<p>LAT189</p>		
<p>If OK, check harness for short to ground and short to power.</p>		
<p>4. Reinstall any part removed.</p>		
<p>OK or NG</p>		
OK	▶	GO TO 3.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

3	CHECK DTC	
<p>Perform "DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE", AT-182.</p>		
<p>OK or NG</p>		
OK	▶	INSPECTION END
NG	▶	<p>1. Perform TCM input/output signal inspection. 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.</p>

DTC P0755 SHIFT SOLENOID VALVE B

Component Inspection

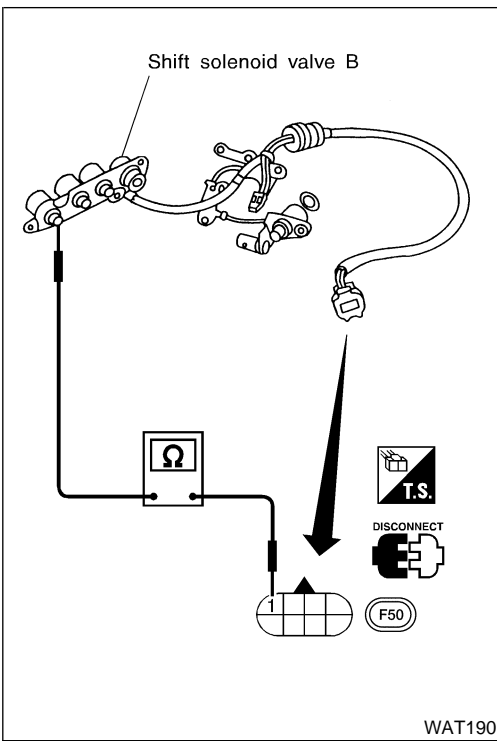

Component Inspection SHIFT SOLENOID VALVE B

NIAT0085

NIAT0085S01


- Refer to "REMOVAL", AT-271.

Resistance Check

NIAT0085S0101

- Check resistance between two terminals.

Solenoid valve	Terminal No.		Resistance (Approx.)
Shift solenoid valve B	1	Ground	5 - 20Ω

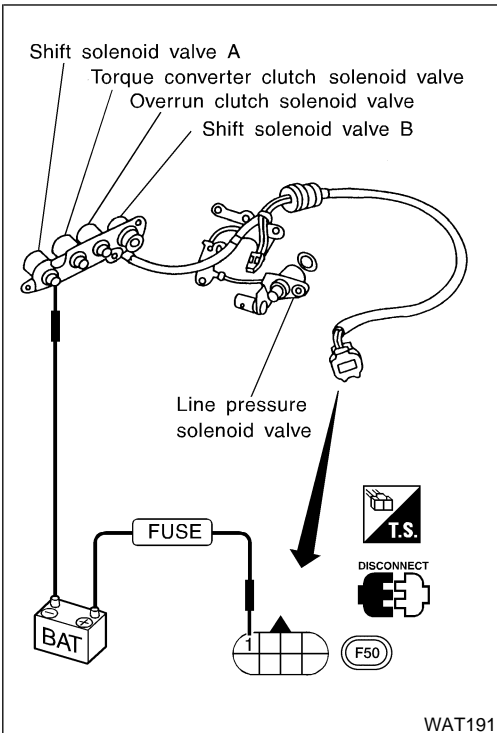

Operation Check

NIAT0085S0102

- Check solenoid valve by listening for its operating sound while applying battery voltage to the terminal and ground.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA


SC

EL

IDX

DTC P1705 THROTTLE POSITION SENSOR

Description

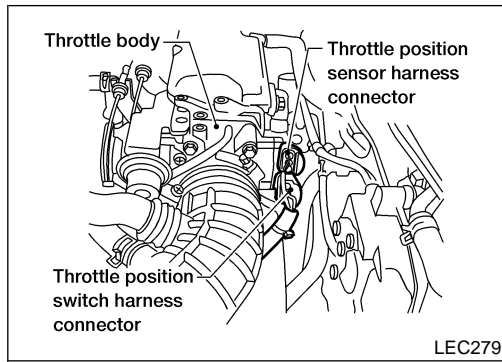

Description

NIAT0086

- Throttle position sensor
The throttle position sensor detects the throttle valve position and sends a signal to the TCM.
- Throttle position switch
Consists of a wide open throttle position switch and a closed throttle position switch.
The wide open throttle position switch sends a signal to the TCM when the throttle valve is open at least 1/2 of the full throttle position. The closed throttle position switch sends a signal to the TCM when the throttle valve is fully closed.

CONSULT-II REFERENCE VALUE IN DATA MONITOR MODE

NIAT0086S01

Remarks: Specification data are reference values.

Monitor item	Condition	Specification (Approx.)
Throttle position sensor	Fully-closed throttle	0.5V
	Fully-open throttle	4V

ON BOARD DIAGNOSIS LOGIC

NIAT0086S03

Diagnostic trouble code	Malfunction is detected when ...	Check items (Possible cause)
: TP SEN/CIRC A/T : P1705	TCM receives an excessively low or high voltage from the sensor.	<ul style="list-style-type: none"> ● Harness or connectors (The sensor circuit is open or shorted.) ● Throttle position sensor ● Throttle position switch

DTC P1705 THROTTLE POSITION SENSOR

Description (Cont'd)

SELECT SYSTEM
A/T
ENGINE

SAT014K

DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE

NIAT0086S04

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

SELECT DIAG MODE
SELF-DIAG RESULTS
DATA MONITOR
DTC WORK SUPPORT
TCM PART NUMBER

SAT971J

With CONSULT-II

- 1) Apply vacuum to the throttle opener, then check the following. Refer to steps from 1 to 5 of "Preparation", "TCM Self-diagnostic Procedure (No Tools)", AT-49.
- 2) Turn ignition switch "ON" and select "DATA MONITOR" mode for "A/T" with CONSULT-II.
- 3) Check the following.

Accelerator pedal condition	THRTL POS SEN	CLOSED THL/SW	W/O THRL/P-SW
Fully released	Less than 4.7V	ON	OFF
Partially depressed	0.1 - 4.6V	OFF	OFF
Fully depressed	1.9 - 4.6V	OFF	ON

SELECT SYSTEM
A/T
ENGINE

SAT014K

If the check result is NG, go to "Diagnostic Procedure", AT-189. If the check result is OK, go to following step.

- 4) Turn ignition switch "ON" and select "DATA MONITOR" mode for "ENGINE" with CONSULT-II.
- 5) Start engine and maintain the following conditions for at least 3 consecutive seconds. Then release accelerator pedal completely.

VHCL SPEED SE: 10 km/h (6 MPH) or more
THRTL POS SEN: Approximately 3V or less
Selector lever: D position (OD "ON")

If the check result is NG, go to "Diagnostic Procedure", AT-189. If the check result is OK, go to following step.

- 6) Maintain the following conditions for at least 3 consecutive seconds. Then release accelerator pedal completely.

VHCL SPEED SE: 10 km/h (6 MPH) or more
Accelerator pedal: Wide open throttle
Selector lever: D position (OD "ON")

SELECT DIAG MODE
WORK SUPPORT
SELF-DIAG RESULTS
DATA MONITOR
DATA MONITOR (SPEC)
ACTIVE TEST
DTC & SRT CONFIRMATION

SEF949Y

With GST

Follow the procedure "With CONSULT-II".

GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX



DTC P1705 THROTTLE POSITION SENSOR

Wiring Diagram — AT — TPS

Wiring Diagram — AT — TPS

=NIAT0087

AT-TPS-01

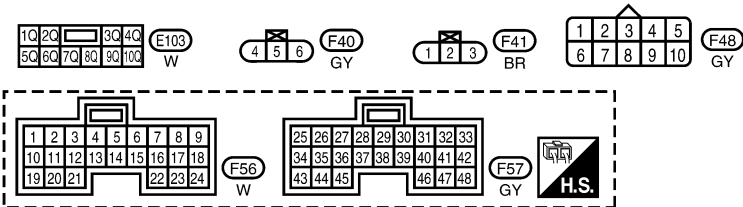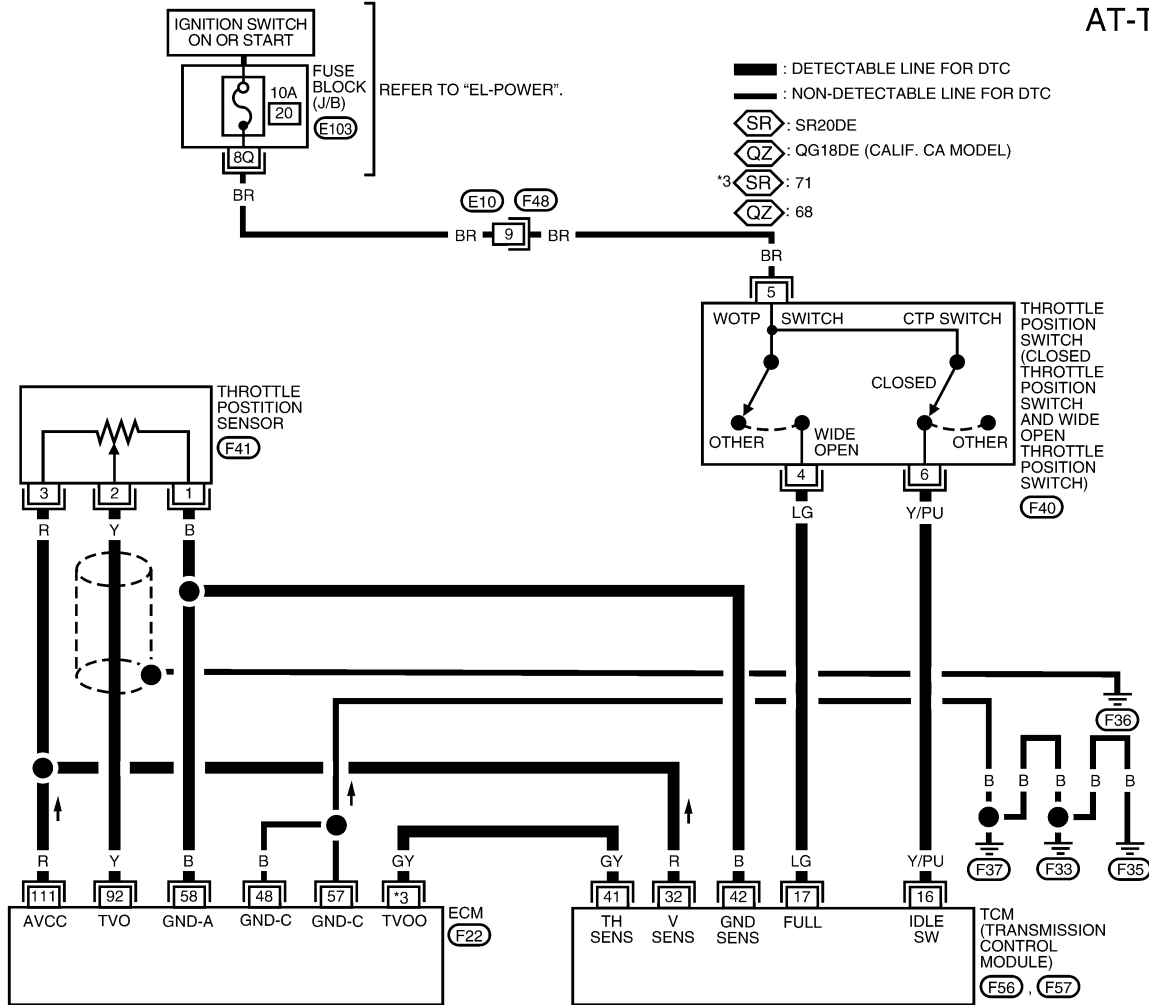

REFER TO THE FOLLOWING.
 (F22) - ELECTRICAL UNITS

WAT461

TRANSMISSION CONTROL MODULE TERMINALS AND REFERENCE VALUE BETWEEN TEMINAL AND GROUND

TERMINAL	WIRE COLOR	ITEM	CONDITION	DATA (DC) (Approx.)
16	Y/PU	CLOSED THROTTLE POSITION SWITCH	WHEN RELEASING ACCELERATOR PEDAL (ENGINE WARM)	BATTERY VOLTAGE
			WHEN DEPRESSING ACCELERATOR PEDAL (ENGINE WARM)	0V
17	LG	WIDE OPEN THROTTLE POSITION SWITCH	WHEN DEPRESSING ACCELERATOR PEDAL MORE THAN HALF-WAY (ENGINE WARM)	BATTERY VOLTAGE
			WHEN RELEASING ACCELERATOR PEDAL (ENGINE WARM)	0V
32	B/W	THROTTLE POSITION SENSOR (POWER SOURCE)	WHEN TURNING IGNITION SWITCH TO "ON"	4.5 - 5.5V
			WHEN TURNING IGNITION SWITCH TO "OFF"	0V
41	GY	THROTTLE POSITION SENSOR	WHEN DEPRESSING ACCELERATOR PEDAL SLOWLY (ENGINE WARM)	CLOSED: APPROX 0.5V OPEN : APPROX 4V
42	B	GROUND (THROTTLE POSITION SENSOR)	—	0V

WAT350

DTC P1705 THROTTLE POSITION SENSOR

Diagnostic Procedure

Diagnostic Procedure

NIAT0088

1	CHECK DTC WITH ECM	
Perform diagnostic test mode II (self-diagnostic results) for engine control. Refer to EC-100 [QG18DE (except Calif. CA Model)], EC-771 [QG18DE (Calif. CA Model)], EC-1435 (SR20DE), "Malfunction Indicator Lamp (MIL)".		
OK or NG		
OK (With CONSULT-II)	▶	GO TO 2.
OK (Without CONSULT-II)	▶	GO TO 3.
NG	▶	Check throttle position sensor circuit for engine control. Refer to EC-196 [QG18DE (except Calif. CA Model)], EC-871 [QG18DE (Calif. CA Model)], EC-1529 (SR20DE), "DTC P0120 THROTTLE POSITION SENSOR".

2	CHECK INPUT SIGNAL (WITH CONSULT-II)															
④ With CONSULT-II 1. Apply vacuum to the throttle opener then check the following. Refer to steps 1 through 5 of "TCM Self-diagnostic Procedure (No Tools)", AT-49. 2. Turn ignition switch to "ON" position. (Do not start engine.) 3. Select "TCM INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II. 4. Read out the value of "THRTL POS SEN". Voltage: Fully-closed throttle: Approximately 0.5V Fully-open throttle: Approximately 4V																
<table border="1" style="margin: auto;"> <thead> <tr> <th colspan="2">DATA MONITOR</th> </tr> <tr> <th>MONITORING</th> <th></th> </tr> </thead> <tbody> <tr> <td>VHCL/S SE-A/T</td> <td>XXX km/h</td> </tr> <tr> <td>VHCL/S SE-MTR</td> <td>XXX km/h</td> </tr> <tr> <td>THRTL POS SEN</td> <td>XXX V</td> </tr> <tr> <td>FLUID TEMP SE</td> <td>XXX V</td> </tr> <tr> <td>BATTERY VOLT</td> <td>XXX V</td> </tr> </tbody> </table>			DATA MONITOR		MONITORING		VHCL/S SE-A/T	XXX km/h	VHCL/S SE-MTR	XXX km/h	THRTL POS SEN	XXX V	FLUID TEMP SE	XXX V	BATTERY VOLT	XXX V
DATA MONITOR																
MONITORING																
VHCL/S SE-A/T	XXX km/h															
VHCL/S SE-MTR	XXX km/h															
THRTL POS SEN	XXX V															
FLUID TEMP SE	XXX V															
BATTERY VOLT	XXX V															
OK or NG																
OK	▶	GO TO 4.														
NG	▶	Check harness for short or open between ECM and TCM regarding throttle position sensor circuit. (Main harness)														

SAT614J

GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P1705 THROTTLE POSITION SENSOR

Diagnostic Procedure (Cont'd)

3 CHECK INPUT SIGNAL (WITHOUT CONSULT-II)

⊗ Without CONSULT-II

1. Apply vacuum to the throttle opener then check the following. Refer to steps 1 through 5 of "TCM Self-diagnostic Procedure (No Tools)", AT-49.
2. Turn ignition switch to "ON" position.
(Do not start engine.)
3. Check voltage between TCM terminals 41 and 42 while accelerator pedal is depressed slowly.

Voltage:


Fully-closed throttle valve:

Approximately 0.5V

Fully-open throttle valve:

Approximately 4V

(Voltage rises gradually in response to throttle position)

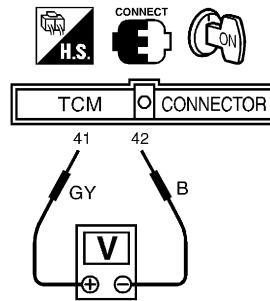

SAT453J

OK or NG

OK	▶	GO TO 5.
NG	▶	Check harness for short or open between ECM and TCM regarding throttle position sensor circuit. (Main harness)

DTC P1705 THROTTLE POSITION SENSOR

Diagnostic Procedure (Cont'd)

4	CHECK THROTTLE POSITION SWITCH CIRCUIT (WITH CONSULT-II)															
<p>Ⓜ With CONSULT-II</p> <ol style="list-style-type: none"> Apply vacuum to the throttle opener, then check the following. Refer to steps 1 through 5 of "TCM Self-diagnostic Procedure (No Tools)", AT-49. Turn ignition switch to "ON" position. (Do not start engine.) Select "TCM INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II. Read out "CLOSED THL/SW" and "W/O THRL/P-SW" depressing and releasing accelerator pedal. Check the signal of throttle position switch is indicated properly. 																
<table border="1" style="margin: auto;"> <thead> <tr> <th rowspan="2">Accelerator pedal condition</th> <th colspan="2">Data monitor</th> </tr> <tr> <th>CLOSED THL/SW</th> <th>W/O THRL/P-SW</th> </tr> </thead> <tbody> <tr> <td>Released</td> <td>ON</td> <td>OFF</td> </tr> <tr> <td>Fully depressed</td> <td>OFF</td> <td>ON</td> </tr> </tbody> </table>			Accelerator pedal condition	Data monitor		CLOSED THL/SW	W/O THRL/P-SW	Released	ON	OFF	Fully depressed	OFF	ON			
Accelerator pedal condition	Data monitor															
	CLOSED THL/SW	W/O THRL/P-SW														
Released	ON	OFF														
Fully depressed	OFF	ON														
MTBL0011																
<table border="1" style="margin: auto;"> <thead> <tr> <th colspan="2">DATA MONITOR</th> </tr> <tr> <th colspan="2">MONITORING</th> </tr> </thead> <tbody> <tr> <td>POWERSHIFT SW</td> <td>OFF</td> </tr> <tr> <td>CLOSED THL/SW</td> <td>OFF</td> </tr> <tr> <td>W/O THRL/P-SW</td> <td>OFF</td> </tr> <tr> <td>HOLD SW</td> <td>OFF</td> </tr> <tr> <td>BRAKE SW</td> <td>ON</td> </tr> </tbody> </table>			DATA MONITOR		MONITORING		POWERSHIFT SW	OFF	CLOSED THL/SW	OFF	W/O THRL/P-SW	OFF	HOLD SW	OFF	BRAKE SW	ON
DATA MONITOR																
MONITORING																
POWERSHIFT SW	OFF															
CLOSED THL/SW	OFF															
W/O THRL/P-SW	OFF															
HOLD SW	OFF															
BRAKE SW	ON															
SAT702J																
OK or NG																
OK	▶	GO TO 6.														
NG	▶	<p>Check the following items:</p> <ul style="list-style-type: none"> Throttle position switch — Refer to "Component Inspection", AT-193. Harness for short or open between ignition switch and throttle position switch (Main harness) Harness for short or open between throttle position switch and TCM (Main harness) 														

GI
 MA
 EM
 LC
 EC
 FE
 CL
 MT
AT
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

DTC P1705 THROTTLE POSITION SENSOR


Diagnostic Procedure (Cont'd)

5		CHECK THROTTLE POSITION SWITCH CIRCUIT (WITHOUT CONSULT-II)											
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> Apply vacuum to the throttle opener, then check the following. Refer to steps 1 through 5 of "TCM Self-diagnostic Procedure (No Tools)", AT-49. Turn ignition switch to "ON" position. (Do not start engine.) Check voltage between TCM terminals 16, 17 and ground while depressing, and releasing accelerator pedal slowly. (After warming up engine) 													
		<table border="1"> <thead> <tr> <th rowspan="2">Accelerator pedal condition</th> <th colspan="2">Voltage (Approx.)</th> </tr> <tr> <th>Terminal No. 16</th> <th>Terminal No. 17</th> </tr> </thead> <tbody> <tr> <td>Released</td> <td>Battery voltage</td> <td>0V</td> </tr> <tr> <td>Fully depressed</td> <td>0V</td> <td>Battery voltage</td> </tr> </tbody> </table>	Accelerator pedal condition	Voltage (Approx.)		Terminal No. 16	Terminal No. 17	Released	Battery voltage	0V	Fully depressed	0V	Battery voltage
Accelerator pedal condition	Voltage (Approx.)												
	Terminal No. 16	Terminal No. 17											
Released	Battery voltage	0V											
Fully depressed	0V	Battery voltage											
		WAT357											
		LAT192											
OK or NG													
OK	▶	GO TO 6.											
NG	▶	<p>Check the following items:</p> <ul style="list-style-type: none"> Throttle position switch — Refer to "Component Inspection", AT-193. Harness for short or open between ignition switch and throttle position switch (Main harness) Harness for short or open between throttle position switch and TCM (Main harness) 											

6		CHECK DTC
Perform "DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE", AT-187.		
OK or NG		
OK	▶	INSPECTION END
NG	▶	<ol style="list-style-type: none"> Perform TCM input/output signal inspection. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

DTC P1705 THROTTLE POSITION SENSOR

Component Inspection

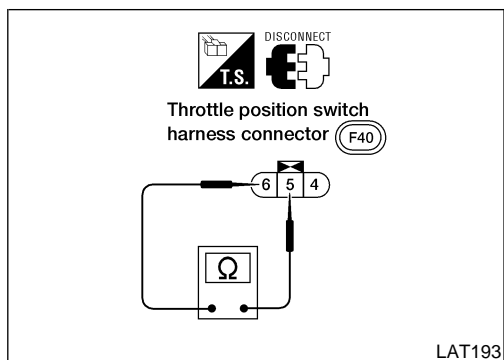

Component Inspection

THROTTLE POSITION SWITCH

=NIAT0089

NIAT0089S01


NIAT0089S0101

Closed Throttle Position Switch (Idle position)

- Check continuity between terminals 5 and 6.
[Refer to "TCM Self-diagnostic Procedure (No Tools)", AT-49.]

Accelerator pedal condition	Continuity
Released	Yes
Depressed	No

- To adjust closed throttle position switch, refer to **EC-461** [QG18DE (except Calif. CA Model)], **EC-1114** [QG18DE (Calif. CA Model)], **EC-1773** (SR20DE), "DTCP0510CLOSEDTHROTTLE POSITION SWITCH".

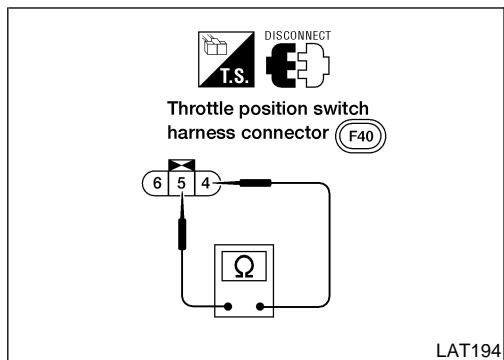

Wide Open Throttle Position Switch

NIAT0089S0102

- Check continuity between terminals 4 and 5.

Accelerator pedal condition	Continuity
Released	No
Depressed	Yes

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA


SC

EL

IDX

DTC P1760 OVERRUN CLUTCH SOLENOID VALVE

Description

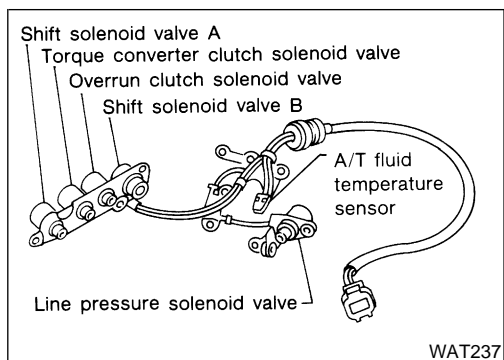



Description

The overrun clutch solenoid valve is activated by the TCM^{NIAT0090} in response to signals sent from the inhibitor switch, overdrive control switch, vehicle speed and throttle position sensors. The overrun clutch operation will then be controlled.

ON BOARD DIAGNOSIS LOGIC

NIAT0090S02

Diagnostic trouble code	Malfunction is detected when ...	Check items (Possible cause)
: O/R CLTCH SOL/CIRC	TCM detects an improper voltage drop when it tries to operate the solenoid valve.	<ul style="list-style-type: none"> • Harness or connectors (The solenoid circuit is open or shorted.) • Overrun clutch solenoid valve
: P1760		

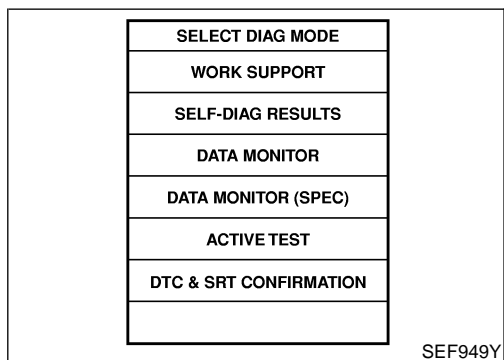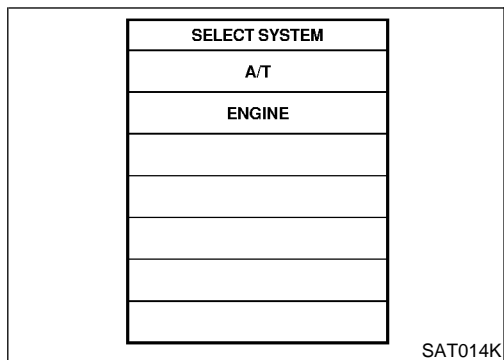

DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE

NIAT0090S03

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Always drive vehicle on a level road to improve accuracy of test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

With CONSULT-II

- 1) Turn ignition switch "ON" and select "DATA MONITOR" mode for "ENGINE" with CONSULT-II.
- 2) Start engine.
- 3) Accelerate vehicle to a speed of more than 10 km/h (6 MPH) with "D" position (OD "ON").
- 4) Release accelerator pedal completely with "D" position (OD "OFF").

With GST

Follow the procedure "With CONSULT-II".


DTC P1760 OVERRUN CLUTCH SOLENOID VALVE

Wiring Diagram — AT — OVRCSV

Wiring Diagram — AT — OVRCSV

=NIAT0091

AT-OVRCSV-01

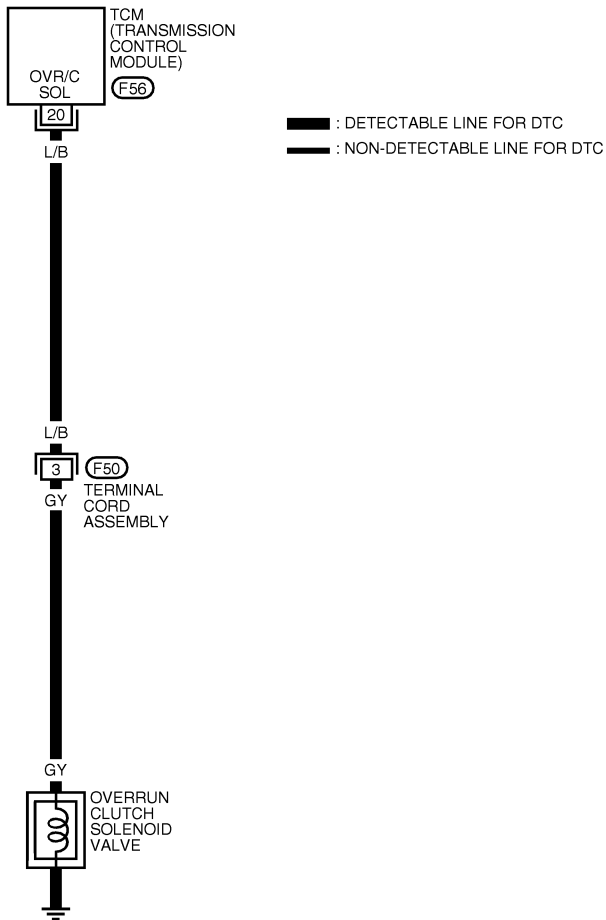

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR


ST

RS

BT

WAT128

HA

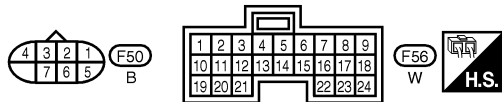

TRANSMISSION CONTROL MODULE TERMINALS AND REFERENCE VALUE BETWEEN TERMINAL AND GROUND

TERMINAL	WIRE COLOR	ITEM	CONDITION	DATA (DC) (Approx.)
20	L/B	OVERRUN CLUTCH SOLENOID VALVE	WHEN OVERRUN CLUTCH SOLENOID VALVE OPERATES	BATTERY VOLTAGE
			WHEN OVERRUN CLUTCH SOLENOID VALVE DOES NOT OPERATE	0V

SC

EL

IDX


WAT351


DTC P1760 OVERRUN CLUTCH SOLENOID VALVE

Diagnostic Procedure

Diagnostic Procedure

NIAT0092

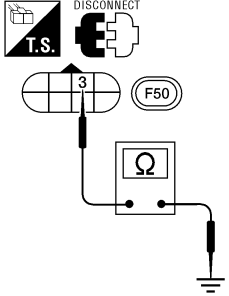
1	CHECK VALVE RESISTANCE
<p>1. Turn ignition switch to "OFF" position. 2. Disconnect terminal cord assembly connector in engine compartment. 3. Check resistance between terminal 3 and ground.</p>	
 <p style="margin-left: 200px;">Resistance: 20 - 30Ω</p>	
LAT195	
OK or NG	
OK	▶ GO TO 2.
NG	▶ <ol style="list-style-type: none"> 1. Remove control valve assembly. Refer to "REMOVAL", AT-271. 2. Check the following items: <ul style="list-style-type: none"> ● Overrun clutch solenoid valve Refer to "Component Inspection", AT-197. ● Harness of terminal cord assembly for short or open

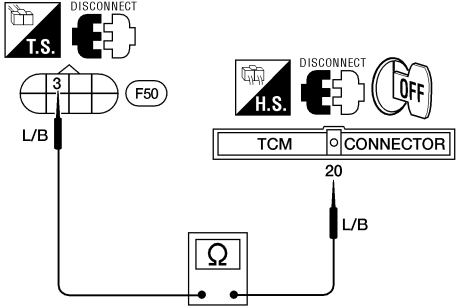2	CHECK POWER SOURCE CIRCUIT
<p>1. Turn ignition switch to "OFF" position. 2. Disconnect TCM harness connector. 3. Check continuity between terminal 3 and TCM harness connector terminal 20.</p>	
 <p style="margin-left: 200px;">Continuity should exist.</p>	
LAT196	
<p>If OK, check harness for short to ground and short to power. 4. Reinstall any part removed.</p>	
OK or NG	
OK	▶ GO TO 3.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

3	CHECK DTC
<p>Perform "DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE", AT-194.</p>	
OK or NG	
OK	▶ INSPECTION END
NG	▶ <ol style="list-style-type: none"> 1. Perform TCM input/output signal inspection. 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

DTC P1760 OVERRUN CLUTCH SOLENOID VALVE

Component Inspection

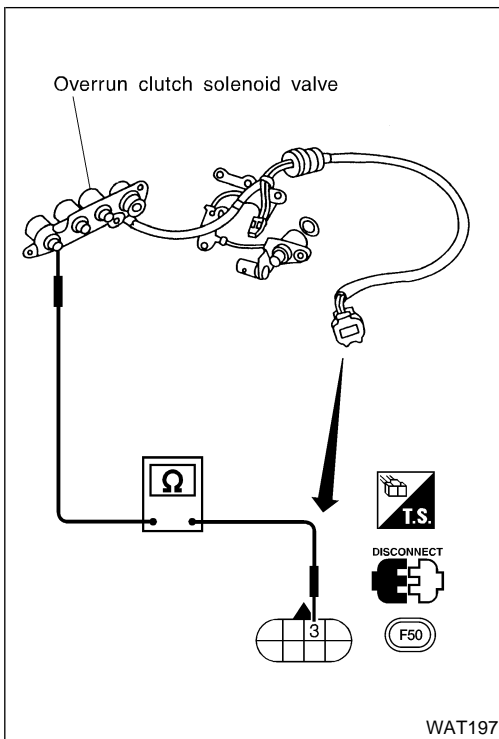

Component Inspection

OVERRUN CLUTCH SOLENOID VALVE

NIAT0093

NIAT0093S01


- Refer to "REMOVAL", AT-271.

Resistance Check

NIAT0093S0101

- Check resistance between two terminals.

Solenoid valve	Terminal No.		Resistance (Approx.)
	3	Ground	
Overrun clutch solenoid valve	3	Ground	20 - 30Ω

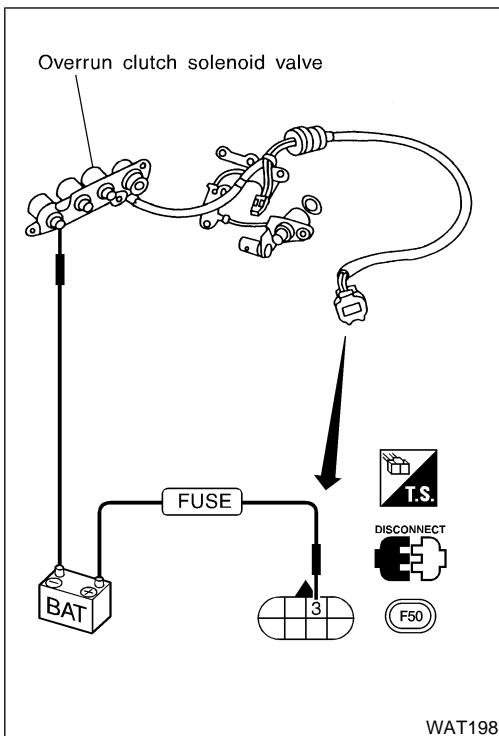

Operation Check

NIAT0093S0102

- Check solenoid valve by listening for its operating sound while applying battery voltage to the terminal and ground.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA


SC

EL

IDX


DTC BATT/FLUID TEMP SEN (A/T FLUID TEMP SENSOR CIRCUIT AND TCM POWER SOURCE)

Description

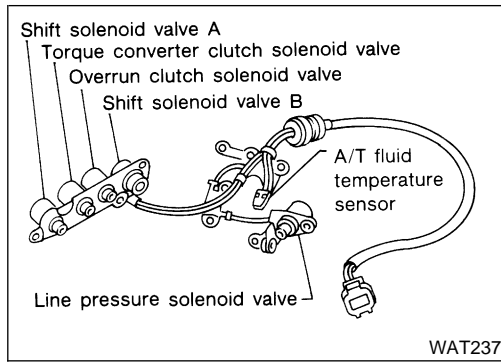

Description

The A/T fluid temperature sensor detects the A/T fluid temperature and sends a signal to the TCM. NIAT0094

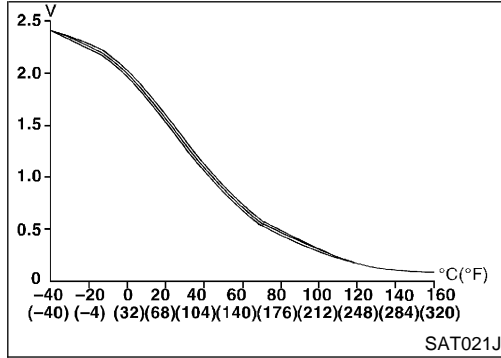

CONSULT-II REFERENCE VALUE IN DATA MONITOR MODE

Remarks: Specification data are reference values. NIAT0094S01


Monitor item	Condition	Specification (Approx.)	
		Reference Value	Resistance
A/T fluid temperature sensor	Cold [20°C (68°F)]	1.5V	2.5 kΩ
	Hot [80°C (176°F)]	0.5V	0.3 kΩ

ON BOARD DIAGNOSIS LOGIC

Diagnostic trouble code	Malfunction is detected when ...	Check items (Possible cause)
P : BATT/FLUID TEMP SEN X : 8th judgement flicker	TCM receives an excessively low or high voltage from the sensor.	<ul style="list-style-type: none"> Harness or connectors (The sensor circuit is open or shorted.) A/T fluid temperature sensor

DTC BATT/FLUID TEMP SEN (A/T FLUID TEMP SENSOR CIRCUIT AND TCM POWER SOURCE)

Description (Cont'd)

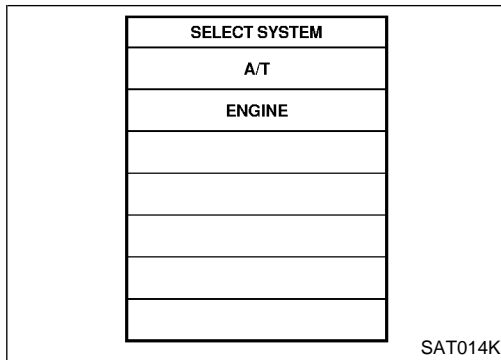

DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE



After the repair, perform the following procedure to confirm the malfunction is eliminated. NIAT0094S04 GI

Ⓜ With CONSULT-II

- 1) Start engine. MA
- 2) Select "DATA MONITOR" mode for "A/T" with CONSULT-II. EM
- 3) Drive vehicle under the following conditions:
Selector lever in "D", vehicle speed higher than 20 km/h (12 MPH). LC

ⓧ Without CONSULT-II

- 1) Start engine. EC
- 2) Drive vehicle under the following conditions:
Selector lever in "D", vehicle speed higher than 20 km/h (12 MPH). FE
- 3) Perform self-diagnosis.
Refer to TCM Self-diagnostic Procedure (No Tools), AT-49. CL

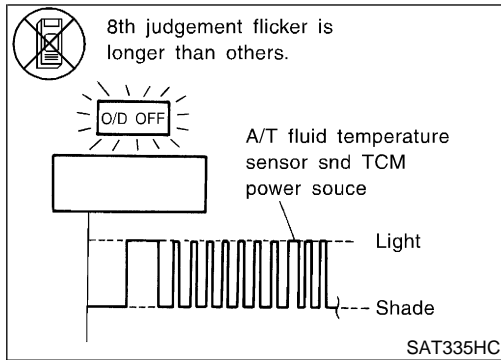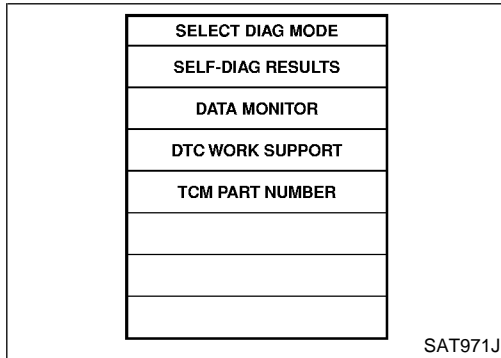

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX



DTC BATT/FLUID TEMP SEN (A/T FLUID TEMP SENSOR CIRCUIT AND TCM POWER SOURCE)

Wiring Diagram — AT — BA/FTS

Wiring Diagram — AT — BA/FTS

NIAT0095

AT-BA/FTS-01

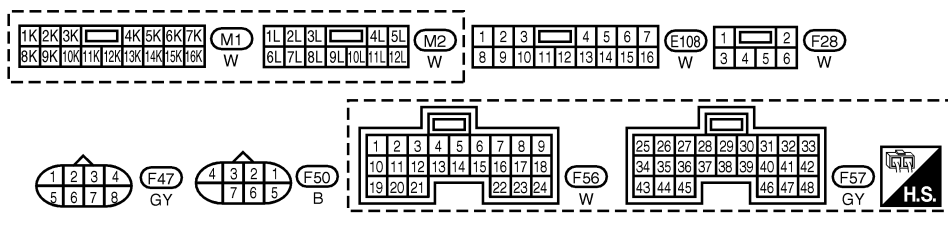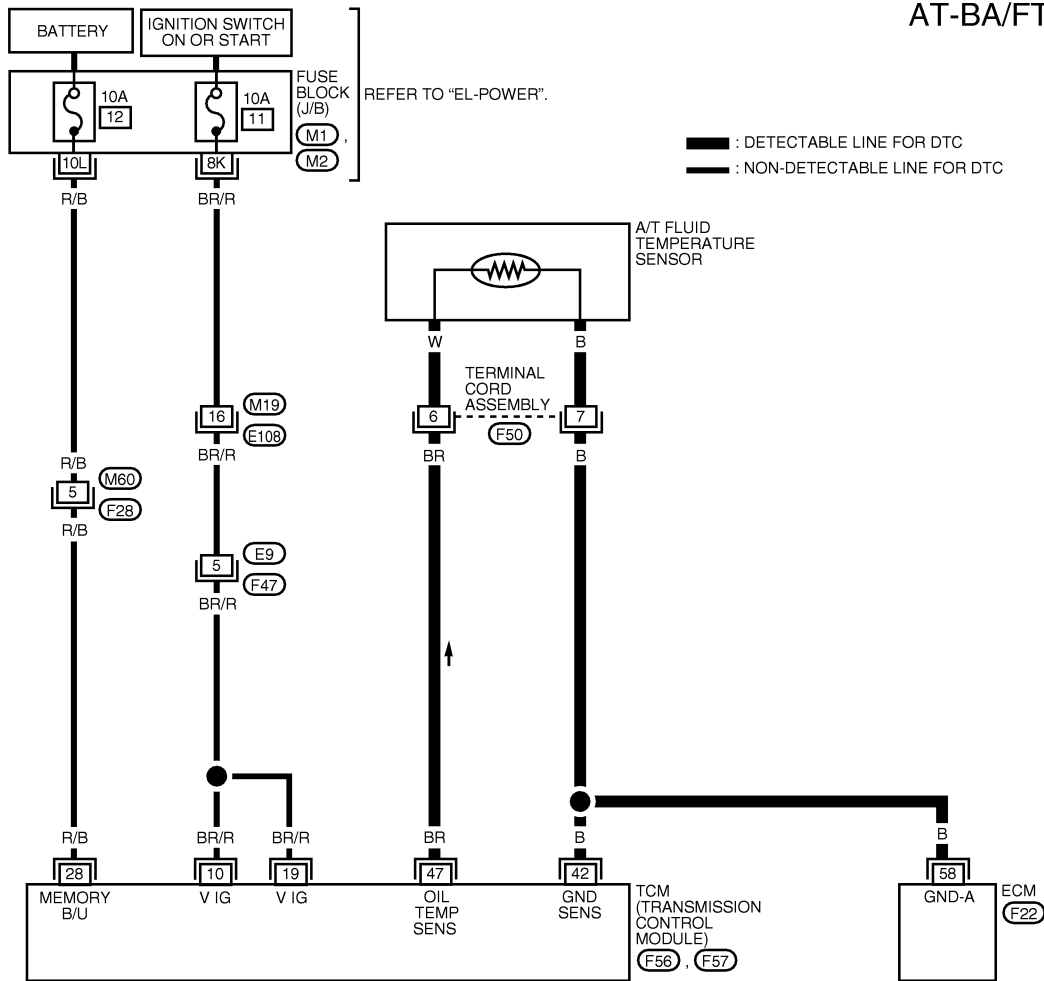

REFER TO THE FOLLOWING.
 (F22) - ELECTRICAL UNITS

WAT129

TRANSMISSION CONTROL MODULE TERMINALS AND REFERENCE VALUE BETWEEN TERMINAL AND GROUND

TERMINAL	WIRE COLOR	ITEM	CONDITION	DATA (DC) (Approx.)
10	BR/R	POWER SOURCE	WHEN TURNING IGNITION SWITCH TO "ON"	BATTERY VOLTAGE
			WHEN TURNING IGNITION SWITCH TO "OFF"	0V
19	BR/R	POWER SOURCE	WHEN TURNING IGNITION SWITCH TO "ON"	BATTERY VOLTAGE
			WHEN TURNING IGNITION SWITCH TO "OFF"	0V
28	R/B	POWER SOURCE (MEMORY BACK-UP)	WHEN TURNING IGNITION SWITCH TO "OFF"	BATTERY VOLTAGE
			WHEN TURNING IGNITION SWITCH TO "ON"	BATTERY VOLTAGE
42	B	GROUND (A/T FLUID TEMPERATURE SENSOR)	—	0V
47	BR	A/T FLUID TEMPERATURE SENSOR	WHEN ATF TEMPERATURE IS 20 ° C (68 ° F)	APPROX. 1.5V
			WHEN ATF TEMPERATURE IS 80 ° C (176 ° F)	APPROX. 0.5V


WAT352


DTC BATT/FLUID TEMP SEN (A/T FLUID TEMP SENSOR CIRCUIT AND TCM POWER SOURCE)

Diagnostic Procedure

Diagnostic Procedure

NIAT0096

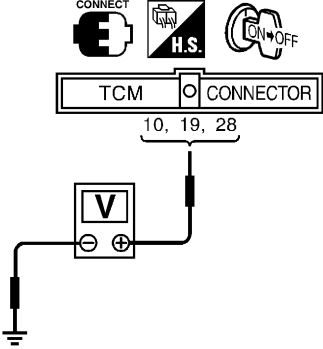1	CHECK TCM POWER SOURCE	<p>1. Turn ignition switch to "ON" position. (Do not start engine.)</p> <p>2. Check voltage between TCM terminals 10, 19, 28 and ground. Voltage: Battery voltage</p> <p>3. Turn ignition switch to "OFF" position.</p> <p>4. Check voltage between TCM terminal 28 and ground. Voltage: Battery voltage</p> <div style="text-align: center;">  <p style="text-align: center;">OK or NG</p> </div>	<p>GI</p> <p>MA</p> <p>EM</p> <p>LC</p> <p>EC</p> <p>FE</p> <p>CL</p> <p>MT</p>
OK	▶	GO TO 2.	AT
NG	▶	<p>Check the following items:</p> <ul style="list-style-type: none"> ● Harness for short or open between ignition switch and TCM (Main harness) ● Ignition switch and fuse <p>Refer to EL-9, "POWER SUPPLY ROUTING".</p>	AX

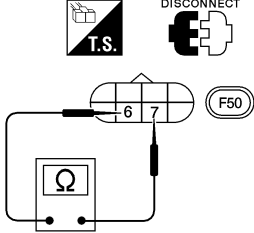2	CHECK A/T FLUID TEMPERATURE SENSOR WITH TERMINAL CORD ASSEMBLY	<p>1. Turn ignition switch to "OFF" position.</p> <p>2. Disconnect terminal cord assembly connector in engine compartment.</p> <p>3. Check resistance between terminals 6 and 7 when A/T is cold.</p> <div style="text-align: center;">  </div>	<p>BR</p> <p>ST</p> <p>RS</p> <p>BT</p> <p>HA</p>
4. Reinstall any part removed.		OK or NG	LAT200
OK (With CONSULT-II)	▶	GO TO 3.	SC
OK (Without CONSULT-II)	▶	GO TO 4.	EL
NG	▶	<p>1. Remove oil pan.</p> <p>2. Check the following items:</p> <ul style="list-style-type: none"> ● A/T fluid temperature sensor <p>Refer to "Component Inspection", AT-204.</p> <ul style="list-style-type: none"> ● Harness of terminal cord assembly for short or open 	IDX

DTC BATT/FLUID TEMP SEN (A/T FLUID TEMP SENSOR CIRCUIT AND TCM POWER SOURCE)

Diagnostic Procedure (Cont'd)

3	CHECK INPUT SIGNAL OF A/T FLUID TEMPERATURE SENSOR (WITH CONSULT-II)															
<p>Ⓜ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine. 2. Select "TCM INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II. 3. Read out the value of "FLUID TEMP SE". <p style="margin-left: 20px;">Voltage: Cold [20°C (68°F)] → Hot [80°C (176°F)]: Approximately 1.5V → 0.5V</p> <table border="1" style="margin-left: auto; margin-right: auto; border-collapse: collapse; text-align: center;"> <thead> <tr> <th colspan="2">DATA MONITOR</th> </tr> <tr> <th>MONITORING</th> <th></th> </tr> </thead> <tbody> <tr> <td>VHCL/S SE-A/T</td> <td>XXX km/h</td> </tr> <tr> <td>VHCL/S SE-MTR</td> <td>XXX km/h</td> </tr> <tr> <td>THRTL POS SEN</td> <td>XXX V</td> </tr> <tr> <td>FLUID TEMP SE</td> <td>XXX V</td> </tr> <tr> <td>BATTERY VOLT</td> <td>XXX V</td> </tr> </tbody> </table> <p style="text-align: right; margin-right: 20px;">SAT614J</p> <p style="text-align: center;">OK or NG</p>			DATA MONITOR		MONITORING		VHCL/S SE-A/T	XXX km/h	VHCL/S SE-MTR	XXX km/h	THRTL POS SEN	XXX V	FLUID TEMP SE	XXX V	BATTERY VOLT	XXX V
DATA MONITOR																
MONITORING																
VHCL/S SE-A/T	XXX km/h															
VHCL/S SE-MTR	XXX km/h															
THRTL POS SEN	XXX V															
FLUID TEMP SE	XXX V															
BATTERY VOLT	XXX V															
OK	▶	GO TO 5.														
NG	▶	<p>Check the following items:</p> <ul style="list-style-type: none"> ● Harness for short or open between TCM, ECM and terminal cord assembly (Main harness) ● Ground circuit for ECM <p>Refer to EC-168 [QG18DE (except Calif. CA Model)], EC-839 [QG18DE (Calif. CA Model)], EC-1500 (SR20DE), "TROUBLE DIAGNOSIS FOR POWER SUPPLY".</p>														

DTC BATT/FLUID TEMP SEN (A/T FLUID TEMP SENSOR CIRCUIT AND TCM POWER SOURCE)

Diagnostic Procedure (Cont'd)


4	CHECK INPUT SIGNAL OF A/T FLUID TEMPERATURE SENSOR (WITHOUT CONSULT-II)	
<p>⊗ Without CONSULT-II</p> <p>1. Start engine.</p> <p>2. Check voltage between TCM terminal 47 and ground while warming up A/T.</p> <p style="color: blue;">Voltage: Cold [20°C (68°F)] → Hot [80°C (176°F)]: Approximately 1.5V → 0.5V</p> <div style="text-align: center;"> </div> <p>3. Turn ignition switch to "OFF" position.</p> <p>4. Disconnect TCM harness connector.</p> <p>5. Check resistance between terminal 42 and ground.</p> <p style="color: blue;">Continuity should exist.</p> <div style="text-align: center;"> </div> <p style="text-align: center;">OK or NG</p>		
OK		▶ GO TO 5.
NG		▶ Check the following items: <ul style="list-style-type: none"> ● Harness for short or open between TCM, ECM and terminal cord assembly (Main harness) ● Ground circuit for ECM Refer to EC-168 [QG18DE (except Calif. CA Model)], EC-839 [QG18DE (Calif. CA Model)], EC-1500 (SR20DE), "TROUBLE DIAGNOSIS FOR POWER SUPPLY".

GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

5	CHECK DTC	
Perform "DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE", AT-199.		
OK or NG		
OK		▶ INSPECTION END
NG		▶ <ol style="list-style-type: none"> 1. Perform TCM input/output signal inspection. 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

DTC BATT/FLUID TEMP SEN (A/T FLUID TEMP SENSOR CIRCUIT AND TCM POWER SOURCE)

Component Inspection

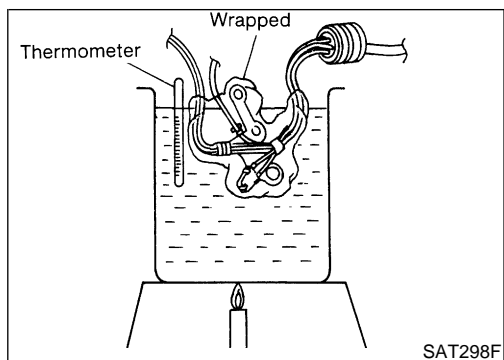

Component Inspection A/T FLUID TEMPERATURE SENSOR

NIAT0097


NIAT0097S01

- Refer to "REMOVAL", AT-271.
- Check resistance between two terminals while changing temperature as shown at left.

Temperature °C (°F)	Resistance
20 (68)	Approximately 2.5 kΩ
80 (176)	Approximately 0.3 kΩ

DTC VHCL SPEED SEN-MTR VEHICLE SPEED SENSOR-MTR

Description

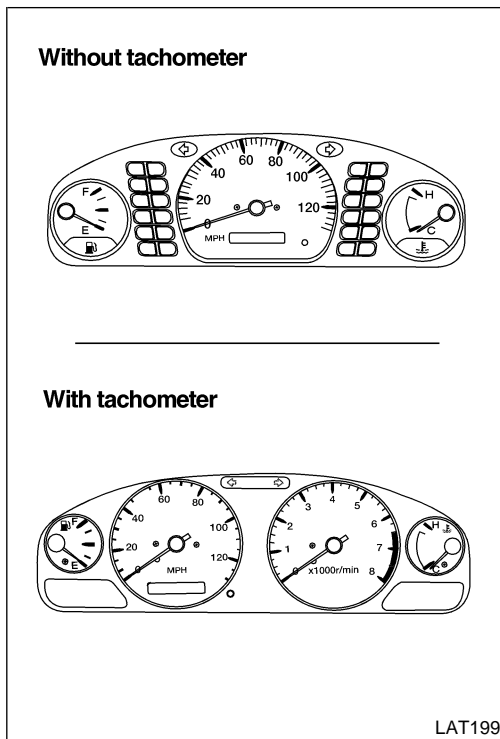

Description

The vehicle speed sensor-MTR is built into the speedometer assembly. The sensor functions as an auxiliary device to the revolution sensor when it is malfunctioning. The TCM will then use a signal sent from the vehicle speed sensor-MTR.

NIAT0098

GI
MA
EM
LC
EC
FE
CL
MT

AT

AX

SU

BR

ON BOARD DIAGNOSIS LOGIC

NIAT0098S02

Diagnostic trouble code	Malfunction is detected when ...	Check items (Possible cause)
<p> : VHCL SPEED SEN-MTR</p> <p> : 2nd judgement flicker</p>	TCM does not receive the proper voltage signal from the sensor.	<ul style="list-style-type: none"> • Harness or connectors (The sensor circuit is open or shorted.) • Vehicle speed sensor

ST

RS

BT

HA


SC

EL


IDX

DTC VHCL SPEED SEN-MTR VEHICLE SPEED SENSOR-MTR


Description (Cont'd)

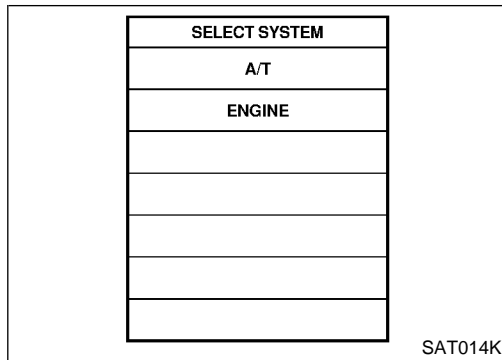

SAT014K

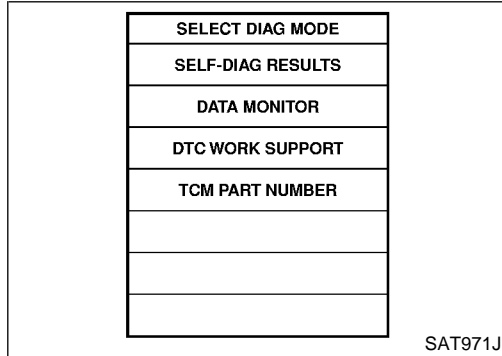

SAT971J

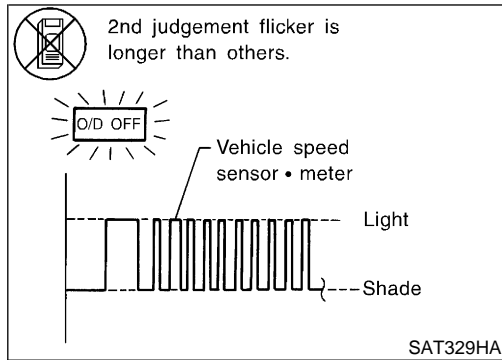

SAT329HA

DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE

NIAT009BS03

CAUTION:

- Always drive vehicle at a safe speed.
- If conducting this "DTC CONFIRMATION PROCEDURE" again, always turn ignition switch "OFF" and wait at least 5 seconds before continuing.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

With CONSULT-II

- 1) Turn ignition switch "ON" and select "DATA MONITOR" mode for "A/T" with CONSULT-II.
- 2) Start engine and accelerate vehicle from 0 to 25 km/h (0 to 16 MPH).

Without CONSULT-II

- 1) Start engine.
- 2) Drive vehicle under the following conditions:
Selector lever in "D" and vehicle speed higher than 25 km/h (16 MPH).
- 3) Perform self-diagnosis.
Refer to "TCM Self-diagnostic Procedure (No Tools)", AT-49.


DTC VHCL SPEED SEN-MTR VEHICLE SPEED SENSOR-MTR

Wiring Diagram — AT — VSSMTR


Wiring Diagram — AT — VSSMTR

NIAT0099

AT-VSSMTR-01

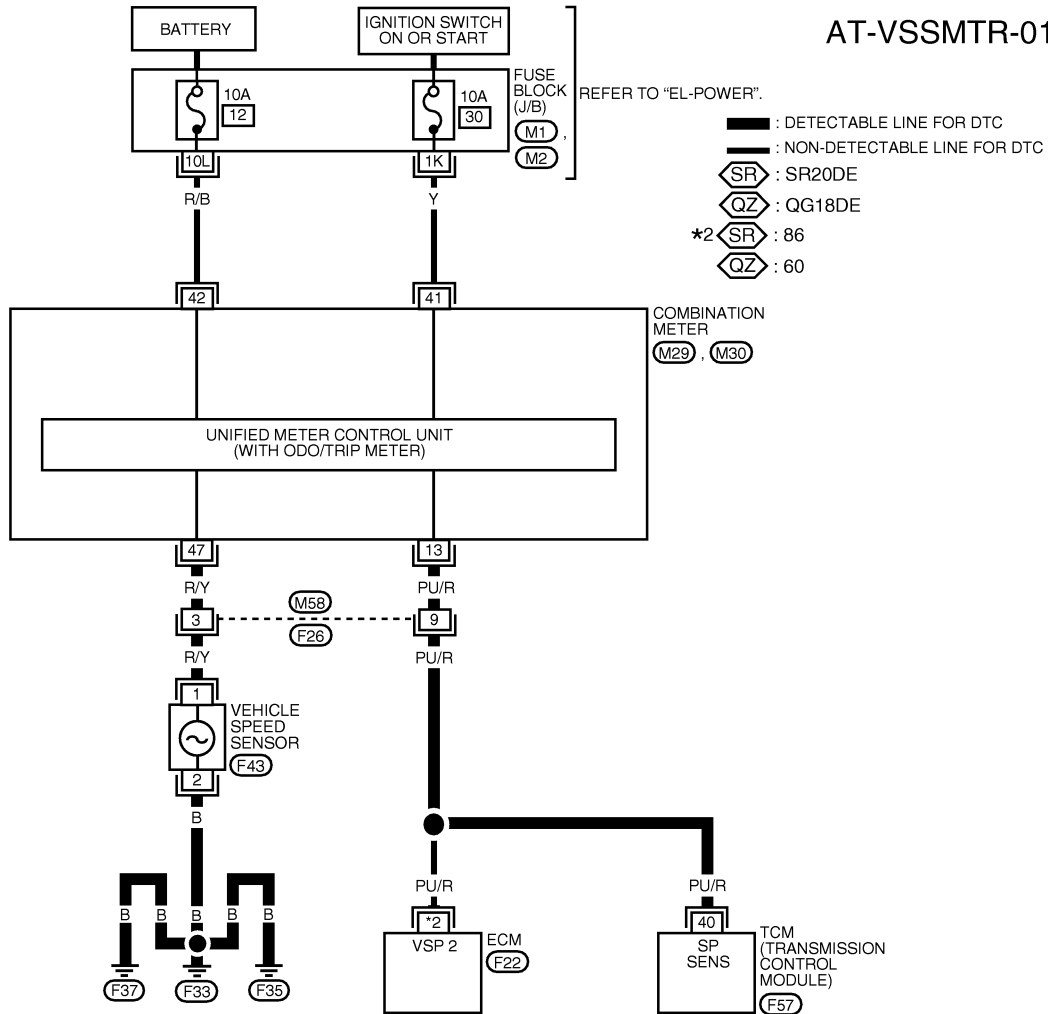

GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

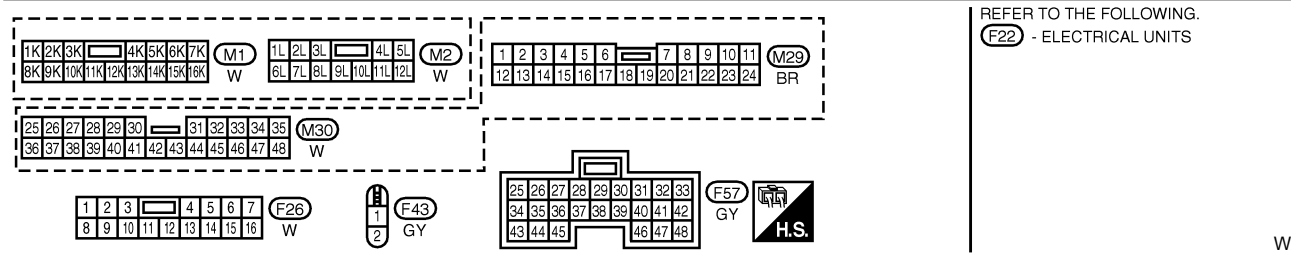

WAT130

TRANSMISSION CONTROL MODULE TERMINALS AND REFERENCE VALUE BETWEEN TERMINAL AND GROUND

TERMINAL	WIRE COLOR	ITEM	CONDITION	DATA (DC) (Approx.)
40	PU/R	VEHICLE SPEED SENSOR	WHEN MOVING VEHICLE AT 2 TO 3 KM/H (1 TO 2 MPH) FOR 1 m (3 ft) OR MORE	VOLTAGE VARIES FROM GREATER THAN 1V TO LESS THAN 4.5V




WAT353

DTC VHCL SPEED SEN-MTR VEHICLE SPEED SENSOR-MTR

Diagnostic Procedure

Diagnostic Procedure


NIAT0100

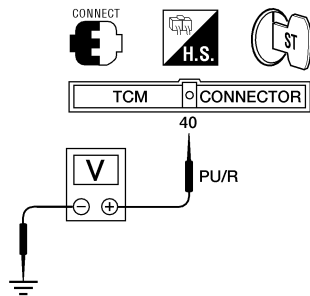1	CHECK INPUT SIGNAL														
<p> With CONSULT-II</p> <ol style="list-style-type: none"> Start engine. Select "TCM INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II. Read out the value of "VHCL/S SE-MTR" while driving. Check the value changes according to driving speed. 															
<table border="1"> <thead> <tr> <th colspan="2">DATA MONITOR</th> </tr> <tr> <th>MONITORING</th> <th></th> </tr> </thead> <tbody> <tr> <td>VHCL/S SE-A/T</td> <td>XXX km/h</td> </tr> <tr> <td>VHCL/S SE-MTR</td> <td>XXX km/h</td> </tr> <tr> <td>THRTL POS SEN</td> <td>XXX V</td> </tr> <tr> <td>FLUID TEMP SE</td> <td>XXX V</td> </tr> <tr> <td>BATTERY VOLT</td> <td>XXX V</td> </tr> </tbody> </table>		DATA MONITOR		MONITORING		VHCL/S SE-A/T	XXX km/h	VHCL/S SE-MTR	XXX km/h	THRTL POS SEN	XXX V	FLUID TEMP SE	XXX V	BATTERY VOLT	XXX V
DATA MONITOR															
MONITORING															
VHCL/S SE-A/T	XXX km/h														
VHCL/S SE-MTR	XXX km/h														
THRTL POS SEN	XXX V														
FLUID TEMP SE	XXX V														
BATTERY VOLT	XXX V														
SAT614J															
<p> Without CONSULT-II</p> <ol style="list-style-type: none"> Start engine. Check voltage between TCM terminal 40 and ground while driving at 2 to 3 km/h (1 to 2 MPH) for 1 m (3 ft) or more. 															
 <p>Voltage: Voltage varies between less than 1V and more than 4.5V.</p>															
LAT201															
OK or NG															
OK	▶ GO TO 2.														
NG	▶ Check the following items:														
	<ul style="list-style-type: none"> Vehicle speed sensor and ground circuit for vehicle speed sensor Refer to EL-85, "METERS AND GAUGES". Harness for short or open between TCM and vehicle speed sensor (Main harness) 														

2	CHECK DTC
Perform "DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE", AT-206.	
OK or NG	
OK	▶ INSPECTION END
NG	▶
	<ol style="list-style-type: none"> Perform TCM input/output signal inspection. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

DTC CONTROL UNIT (RAM), CONTROL UNIT (ROM)

Description

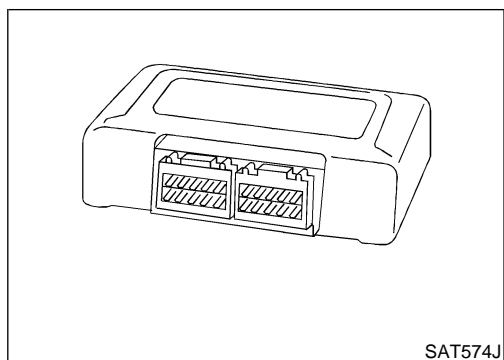

Description

The TCM consists of a microcomputer and connectors for signal ^{NIAT0101} input and output and for power supply. The unit controls the A/T.

GI

MA

EM

LC

ON BOARD DIAGNOSIS LOGIC

NIAT0101S01


Diagnostic Trouble Code No.	Malfunction is detected when	Check Item (Possible Cause)
Ⓜ : CONTROL UNIT (RAM), CONTROL UNIT (ROM)	TCM memory (RAM) or (ROM) is mal-functioning.	• TCM

EC

FE

CL

MT

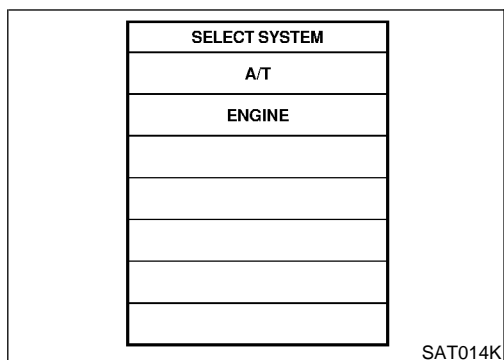

DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE

NIAT0101S02

AT

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.


AX

Ⓜ With CONSULT-II

SU

- 1) Turn ignition switch "ON" and select "DATA MONITOR" mode for A/T with CONSULT-II.
- 2) Start engine.
- 3) Run engine for at least 2 seconds at idle speed.

BR

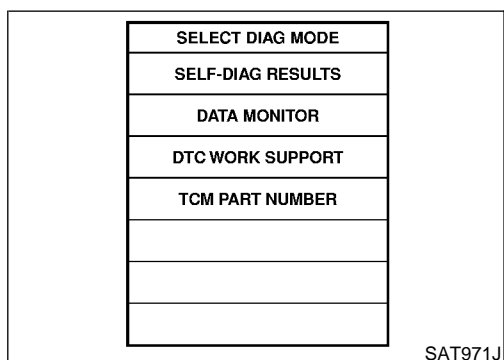

ST

RS

BT

HA

Diagnostic Procedure

NIAT0102

1	INSPECTION START (WITH CONSULT-II)
Ⓜ With CONSULT-II 1. Turn ignition switch "ON" and select "SELF DIAGNOSIS" mode for A/T with CONSULT-II. 2. Touch "ERASE".	
▶	GO TO 2.

EL

IDX

DTC CONTROL UNIT (RAM), CONTROL UNIT (ROM)


Diagnostic Procedure (Cont'd)

2	CHECK DTC
PERFORM DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE. See above.	
	▶ GO TO 3.

3	CHECK DTC AGAIN
Is the "CONTROL UNIT (RAM)" or "CONTROL UNIT (ROM)" displayed again?	
Yes or No	
Yes	▶ Replace TCM.
No	▶ INSPECTION END

DTC CONTROL UNIT (EEP ROM)

Description

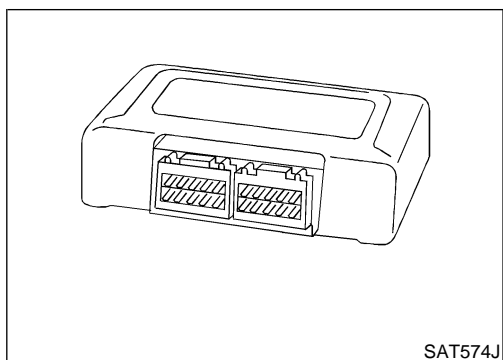

Description

The TCM consists of a microcomputer and connectors for signal ^{NIAT0103} input and output and for power supply. The unit controls the A/T.

GI

MA

EM

LC

ON BOARD DIAGNOSIS LOGIC

NIAT0103S01


Diagnostic trouble code	Malfunction is detected when ...	Check item (Possible cause)
Ⓜ : CONT UNIT (EEP ROM)	TCM memory (EEP ROM) is malfunctioning.	<ul style="list-style-type: none"> • TCM

EC

FE

CL

MT

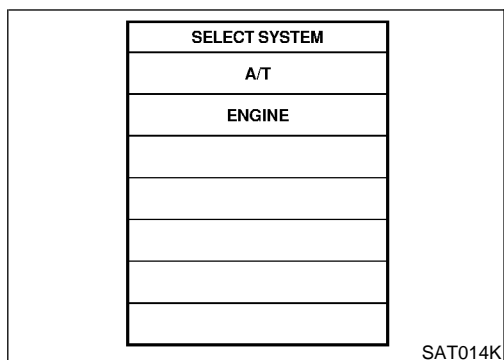

DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE

NIAT0103S02

AT

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

AX


Ⓜ With CONSULT-II

SU

- 1) Turn ignition switch "ON" and select "DATA MONITOR" mode for A/T with CONSULT-II.
- 2) Start engine.
- 3) Run engine for at least 2 seconds at idle speed.

BR

ST

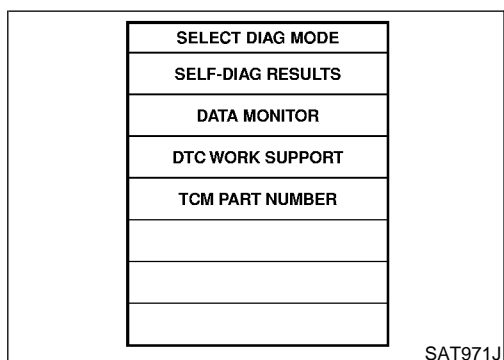

RS

BT

HA

SC

EL


IDX

DTC CONTROL UNIT (EEP ROM)

Diagnostic Procedure

Diagnostic Procedure

NIAT0104

1	CHECK DTC
<p> With CONSULT-II</p> <ol style="list-style-type: none">1. Turn ignition switch "ON" and select "SELF DIAGNOSIS" mode for A/T with CONSULT-II.2. Move selector lever to "R" position.3. Depress accelerator pedal (Full throttle position).4. Touch "ERASE".5. Turn ignition switch "OFF" position for 10 seconds. <p>Perform "DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE", AT-211.</p> <p style="text-align: center;">Is the "CONT UNIT (EEP ROM)" displayed again?</p>	
Yes	▶ Replace TCM.
No	▶ INSPECTION END





TROUBLE DIAGNOSES FOR SYMPTOMS

Wiring Diagram — AT — NONDTC

Wiring Diagram — AT — NONDTC

NIAT0105

AT-NONDTC-01

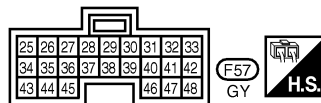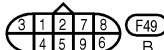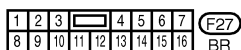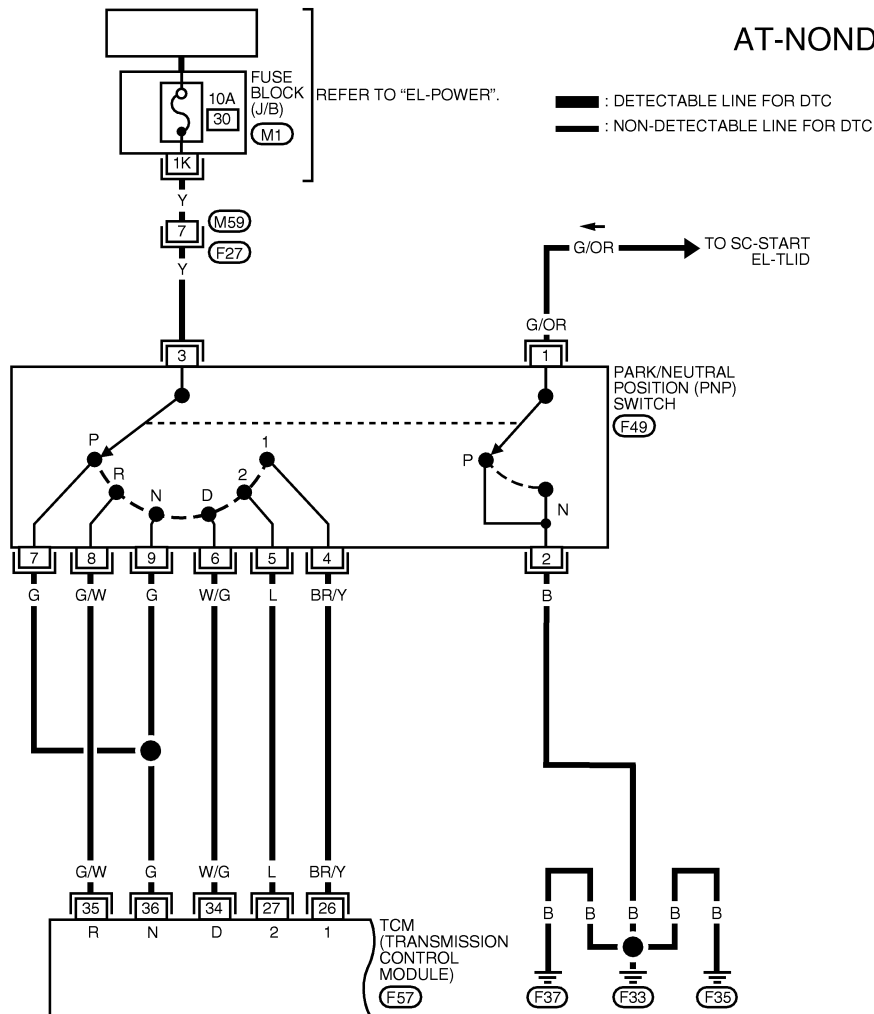

WAT131

TRANSMISSION CONTROL MODULE TERMINALS AND REFERENCE VALUE BETWEEN TERMINAL AND GROND



TERMINAL	WIRE COLOR	ITEM	CONDITION		DATA (DC) (Approx.)
			WHEN SETTING SELECTOR LEVER TO "1" POSITION	WHEN SETTING SELECTOR LEVER TO OTHER POSITIONS	
26	BR/Y	PNP SWITCH "1" POSITION	WHEN SETTING SELECTOR LEVER TO "1" POSITION	WHEN SETTING SELECTOR LEVER TO OTHER POSITIONS	BATTERY VOLTAGE 0V
			WHEN SETTING SELECTOR LEVER TO "2" POSITION	WHEN SETTING SELECTOR LEVER TO OTHER POSITIONS	BATTERY VOLTAGE 0V
27	L	PNP SWITCH "2" POSITION	WHEN SETTING SELECTOR LEVER TO "2" POSITION	WHEN SETTING SELECTOR LEVER TO OTHER POSITIONS	BATTERY VOLTAGE 0V
			WHEN SETTING SELECTOR LEVER TO "D" POSITION	WHEN SETTING SELECTOR LEVER TO OTHER POSITIONS	BATTERY VOLTAGE 0V
34	W/G	PNP SWITCH "D" POSITION	WHEN SETTING SELECTOR LEVER TO "D" POSITION	WHEN SETTING SELECTOR LEVER TO OTHER POSITIONS	BATTERY VOLTAGE 0V
			WHEN SETTING SELECTOR LEVER TO "R" POSITION	WHEN SETTING SELECTOR LEVER TO OTHER POSITIONS	BATTERY VOLTAGE 0V
35	G/W	PNP SWITCH "R" POSITION	WHEN SETTING SELECTOR LEVER TO "R" POSITION	WHEN SETTING SELECTOR LEVER TO OTHER POSITIONS	BATTERY VOLTAGE 0V
			WHEN SETTING SELECTOR LEVER TO "N" OR "P" POSITION	WHEN SETTING SELECTOR LEVER TO OTHER POSITIONS	BATTERY VOLTAGE 0V
36	G	PNP SWITCH "N" OR "P" POSITION	WHEN SETTING SELECTOR LEVER TO "N" OR "P" POSITION	WHEN SETTING SELECTOR LEVER TO OTHER POSITIONS	BATTERY VOLTAGE 0V

WAT354

TROUBLE DIAGNOSES FOR SYMPTOMS

Wiring Diagram — AT — NONDTC (Cont'd)

AT-NONDTC-02

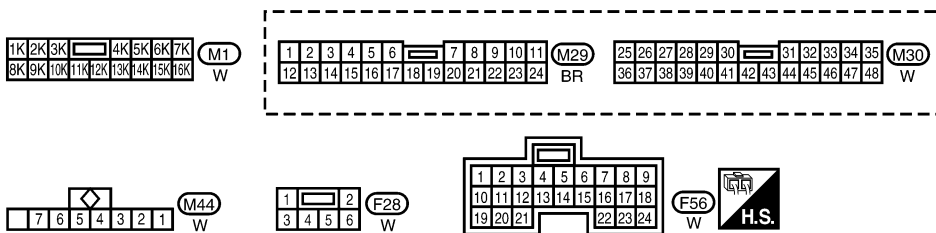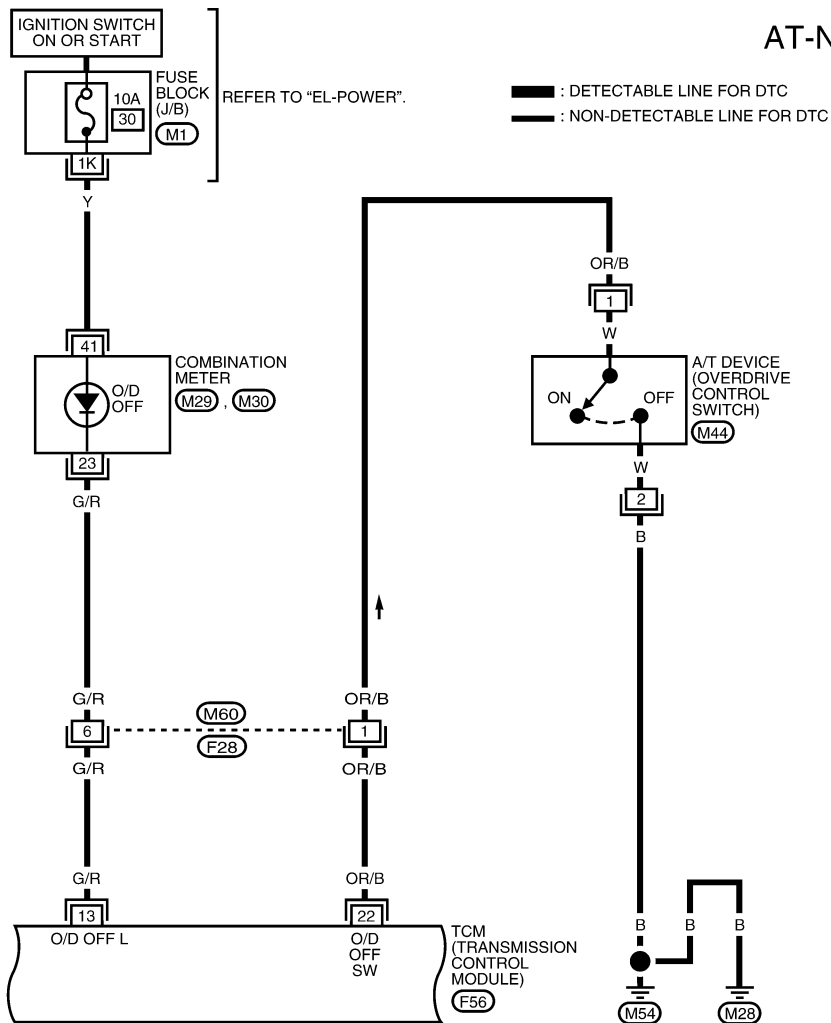

WAT530



TRANSMISSION CONTROL MODULE TERMINALS AND REFERENCE VALUE BETWEEN TERMINAL AND GROUND

TERMINAL	WIRE COLOR	ITEM	CONDITION	DATA (DC) (Approx.)
13	G/R	O/D OFF INDICATOR LAMP	WHEN SETTING OVERDRIVE CONTROL SWITCH "OFF"	0V
			WHEN SETTING OVERDRIVE CONTROL SWITCH "ON"	BATTERY VOLTAGE
22	OR/B	OVERDRIVE CONTROL SWITCH	WHEN SETTING OVERDRIVE CONTROL SWITCH "ON"	BATTERY VOLTAGE
			WHEN SETTING OVERDRIVE CONTROL SWITCH "OFF"	0V

WAT355

TROUBLE DIAGNOSES FOR SYMPTOMS

Wiring Diagram — AT — NONDTC (Cont'd)

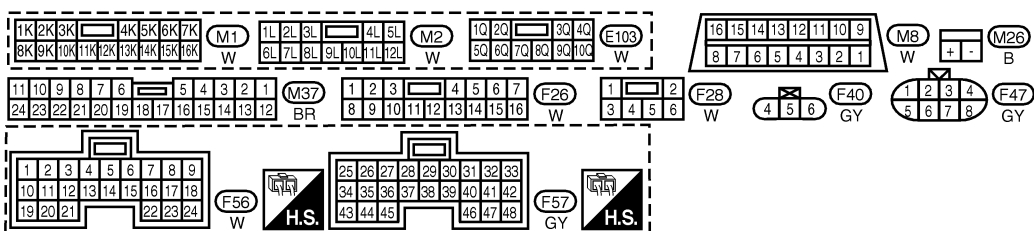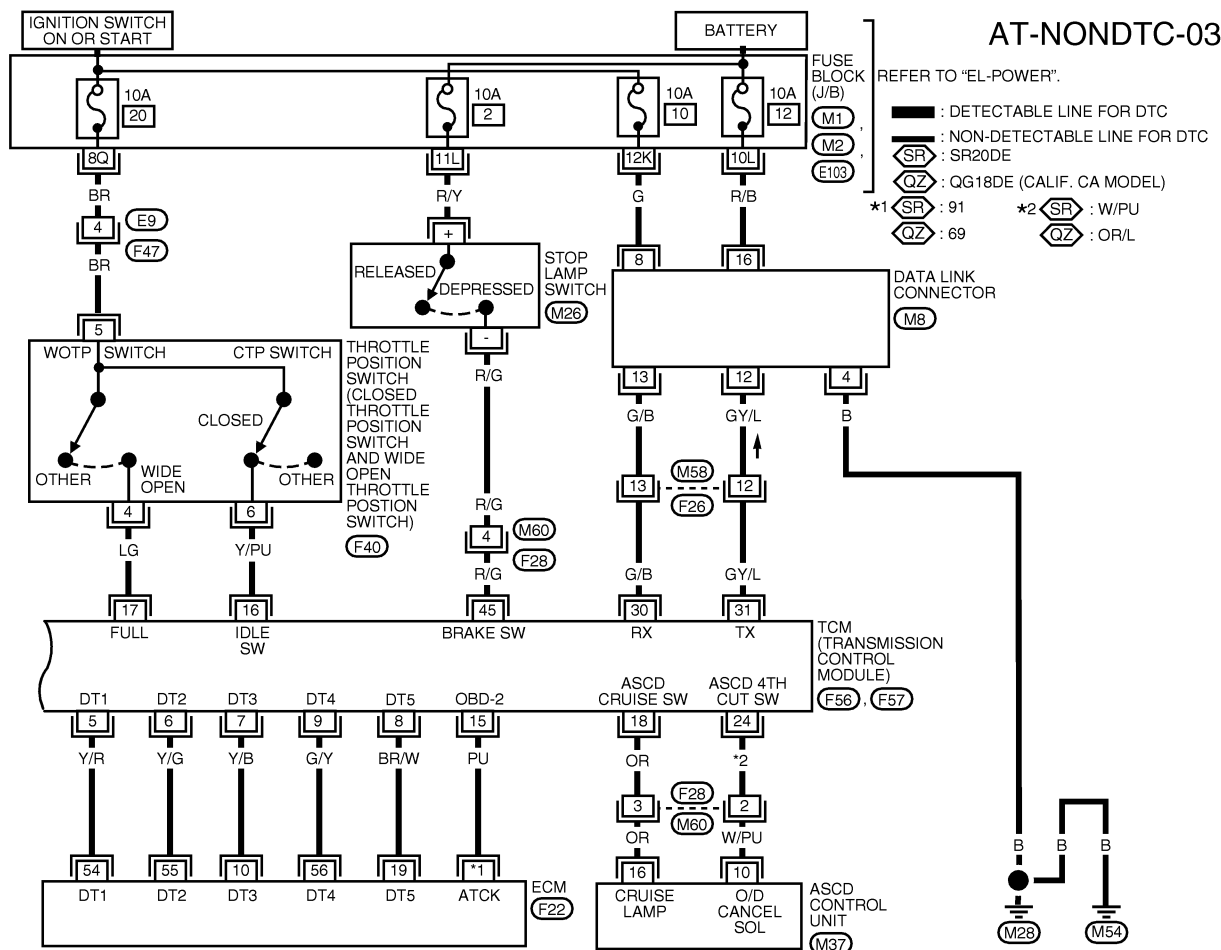

REFER TO THE FOLLOWING.
F22 - ELECTRICAL UNITS

TRANSMISSION CONTROL MODULE TERMINALS AND REFERENCE VALUE BETWEEN TERMINAL AND GROUND


TERMINAL	WIRE COLOR	ITEM	CONDITION	DATA (DC) (Approx.)
5	Y/R	—	—	—
6	Y/G	—	—	—
7	Y/B	—	—	—
8	BR/W	—	—	—
9	G/Y	—	—	—
15	PU	—	—	—
16	Y/PU	CLOSED THROTTLE POSITION SWITCH	WHEN RELEASING ACCELERATOR PEDAL (ENGINE WARM)	BATTERY VOLTAGE
			WHEN DEPRESSING ACCELERATOR PEDAL (ENGINE WARM)	0V
17	LG	WIDE OPEN THROTTLE POSITION SWITCH	WHEN DEPRESSING ACCELERATOR PEDAL > 1/2 (WARM)	BATTERY VOLTAGE
			WHEN RELEASING ACCELERATOR PEDAL (ENGINE WARM)	0V
18	OR	ASCD CRUISE SWITCH	WHEN ASCD CRUISE IS BEING PERFORMED	BATTERY VOLTAGE
			WHEN ASCD CRUISE IS NOT BEING PERFORMED	0V
24	W/PU	ASCD OD CUT SIGNAL	WHEN "ACCEL" SET SWITCH ON ASCD CRUISE IS IN "D ₄ "	5 - 10V
			WHEN "ACCEL" SET SWITCH ON ASCD CRUISE IS IN "D ₃ "	LESS THAN 2V
30	G/B	—	—	—
31	GY/L	—	—	—
45	R/G	STOP LAMP SWITCH	WHEN DEPRESSING BRAKE PEDAL	BATTERY VOLTAGE
			WHEN RELEASING BRAKE PEDAL	0V

WAT133

WAT356

TROUBLE DIAGNOSES FOR SYMPTOMS

1. O/D OFF Indicator Lamp Does Not Come On

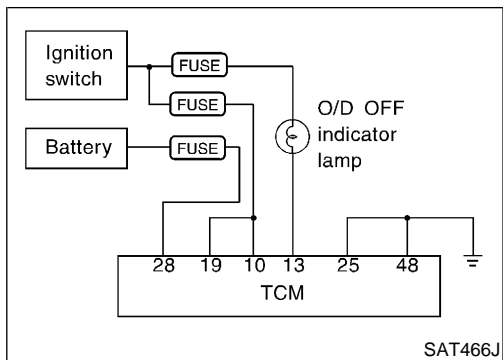

1. O/D OFF Indicator Lamp Does Not Come On =NIAT0106


SYMPTOM:

O/D OFF indicator lamp does not come on for about 2 seconds when turning ignition switch to "ON".

1 CHECK TCM POWER SOURCE

1. Turn ignition switch to "ON" position.
(Do not start engine.)
2. Check voltage between TCM terminals 10, 19, 28 and ground.

Voltage: Battery voltage

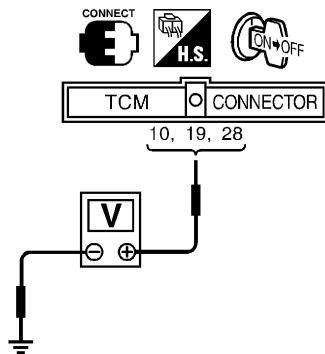

3. Turn ignition switch to "OFF" position.
4. Check voltage between TCM terminal 28 and ground.

Voltage: Battery voltage

OK or NG

OK



GO TO 2.

NG



Check the following items:

- Harness for short or open between ignition switch and TCM (Main harness) Refer to "Wiring Diagram — AT — MAIN", AT-107.
- Ignition switch and fuse Refer to **EL-9**, "POWER SUPPLY ROUTING".

TROUBLE DIAGNOSES FOR SYMPTOMS

1. O/D OFF Indicator Lamp Does Not Come On (Cont'd)

2	CHECK TCM GROUND CIRCUIT	<p>1. Turn ignition switch to "OFF" position. 2. Disconnect TCM harness connector. 3. Check continuity between TCM terminals 25, 48 and ground.</p> <div style="text-align: center;"> </div> <p style="text-align: right;">SAT468J</p> <p>Continuity should exist. If OK, check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>	GI MA EM LC EC FE CL MT
OK	▶	GO TO 3.	
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors. Refer to "Wiring Diagram — AT — MAIN", AT-107.	

3	CHECK LAMP CIRCUIT	<p>1. Turn ignition switch to "OFF" position. 2. Check resistance between TCM terminals 13 and 10.</p> <div style="text-align: center;"> </div> <p style="text-align: right;">Resistance: 50 - 100 Ω</p> <p style="text-align: right;">LAT202</p> <p>3. Reinstall any part removed.</p> <p style="text-align: center;">OK or NG</p>	AT AX SU BR ST RS BT HA SC EL IDX
OK	▶	GO TO 4.	
NG	▶	<p>Check the following items:</p> <ul style="list-style-type: none"> ● O/D OFF indicator lamp. Refer to EL-85, "METERS AND GAUGES". ● Harness and fuse for short or open between ignition switch and O/D OFF indicator lamp (Main harness) Refer to EL-9, "POWER SUPPLY ROUTING". ● Harness for short or open between O/D OFF indicator lamp and TCM. 	

TROUBLE DIAGNOSES FOR SYMPTOMS

1. O/D OFF Indicator Lamp Does Not Come On (Cont'd)

4	CHECK SYMPTOM
Check again.	
OK or NG	
OK	▶ INSPECTION END
NG	▶ 1. Perform TCM input/output signal inspection. 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

TROUBLE DIAGNOSES FOR SYMPTOMS




2. Engine Cannot Be Started In "P" and "N" Position


2. Engine Cannot Be Started In "P" and "N" Position

=NIAT0107

SYMPTOM:

- Engine cannot be started with selector lever in "P" or "N" position.
- Engine can be started with selector lever in "D", "2", "1" or "R" position.

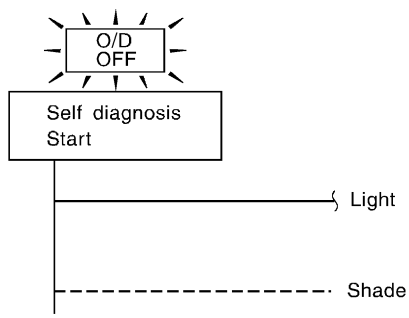1	CHECK PNP SWITCH CIRCUIT	
<p> With CONSULT-II Does "TCM INPUT SIGNALS" in "DATA MONITOR" show damage to PNP switch circuit?</p>		
<p> Without CONSULT-II Does self-diagnosis show damage to PNP switch circuit?</p>		
		
SAT367J		
Yes or No		
Yes	▶	Check PNP switch circuit. Refer to "DTC P0705", AT-110.
No	▶	GO TO 2.

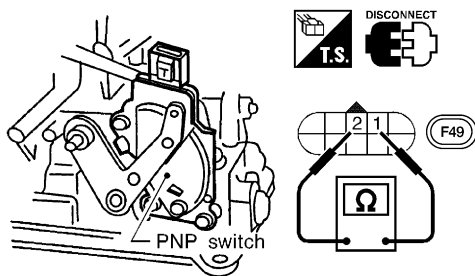2	CHECK PNP SWITCH INSPECTION	
<p>Check for short or open of PNP switch harness connector terminals 1 and 2. Refer to "Component Inspection", AT-114.</p>		
		
WAT203		
OK or NG		
OK	▶	GO TO 3.
NG	▶	Repair or replace PNP switch.

3	CHECK STARTING SYSTEM	
<p>Check starting system. Refer to SC-10, "STARTING SYSTEM".</p>		
OK or NG		
OK	▶	INSPECTION END
NG	▶	Repair or replace damaged parts.

GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

TROUBLE DIAGNOSES FOR SYMPTOMS


3. In "P" Position, Vehicle Moves Forward Or Backward When Pushed

3. In "P" Position, Vehicle Moves Forward Or Backward When Pushed

=NIAT0108

SYMPTOM:

Vehicle moves when it is pushed forward or backward with selector lever in "P" position.

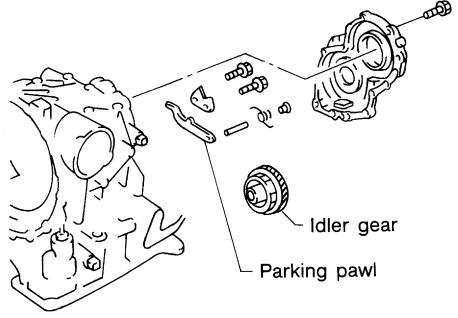1	CHECK PARKING COMPONENTS
<p>Check parking components. Refer to "Parking Pawl Components", AT-277.</p>  <p style="text-align: right;">SAT282F</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ INSPECTION END
NG	▶ Repair or replace damaged parts.

TROUBLE DIAGNOSES FOR SYMPTOMS

4. In "N" Position, Vehicle Moves

4. In "N" Position, Vehicle Moves

=NIAT0109

SYMPTOM:


Vehicle moves forward or backward when selecting "N" position.


1	CHECK PNP SWITCH CIRCUIT
<p><input type="checkbox"/> With CONSULT-II Does "TCM INPUT SIGNALS" in "DATA MONITOR" show damage to PNP switch circuit?</p>	
<p><input checked="" type="checkbox"/> Without CONSULT-II Does self-diagnosis show damage to PNP switch circuit?</p>	
SAT367J	
Yes or No	
Yes	▶ Check PNP switch circuit. Refer to "DTC P0705", AT-110.
No	▶ GO TO 2.

2	CHECK CONTROL CABLE
<p>Check control cable. Refer to "Control Cable Adjustment", AT-272.</p>	
SAT023JB	
OK or NG	
OK	▶ GO TO 3.
NG	▶ Adjust control cable. Refer to "Control Cable Adjustment", AT-272.

TROUBLE DIAGNOSES FOR SYMPTOMS

4. In "N" Position, Vehicle Moves (Cont'd)

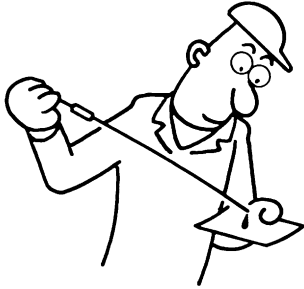3	CHECK A/T FLUID LEVEL	Check A/T fluid level again.	
		SAT638A	
OK or NG			
OK	▶	GO TO 4.	
NG	▶	Refill ATF.	

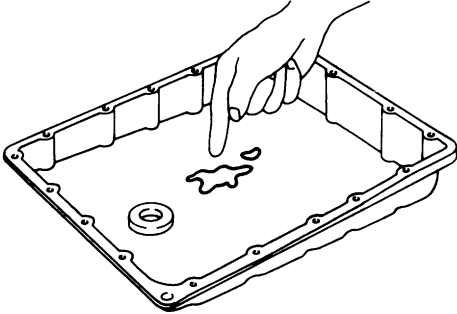4	CHECK A/T FLUID CONDITION	1. Remove oil pan. 2. Check A/T fluid condition.	
		SAT171B	
OK or NG			
OK	▶	GO TO 5.	
NG	▶	1. Disassemble A/T. 2. Check the following items: <ul style="list-style-type: none"> ● Forward clutch assembly ● Overrun clutch assembly ● Reverse clutch assembly 	

5	CHECK SYMPTOM	Check again.	
OK or NG			
OK	▶	INSPECTION END	
NG	▶	1. Perform TCM input/output signal inspection. 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.	

TROUBLE DIAGNOSES FOR SYMPTOMS

5. Large Shock. "N" → "R" Position

5. Large Shock. "N" → "R" Position

=NIAT0110

SYMPTOM:

There is large shock when changing from "N" to "R" position.

1	CHECK SELF-DIAGNOSTIC RESULTS	
Does self-diagnosis show damage to A/T fluid temperature sensor, line pressure solenoid valve or throttle position sensor circuit?		
SAT345HA		
Yes or No		
Yes	▶	Check damaged circuit. Refer to "DTC P0710, P0745 or P1705", AT-115, 173 or 186.
No	▶	GO TO 2.

2	CHECK THROTTLE POSITION SENSOR	
Check throttle position sensor. Refer to EC-196 [QG18DE (except Calif. CA Model)], EC-871 [QG18DE (Calif. CA Model)], EC-1529 (SR20DE), "DTC P0120 THROTTLE POSITION SENSOR".		
LEC279		
OK or NG		
OK	▶	GO TO 3.
NG	▶	Repair or replace throttle position sensor.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA


SC

EL

IDX

TROUBLE DIAGNOSES FOR SYMPTOMS

5. Large Shock. "N" → "R" Position (Cont'd)

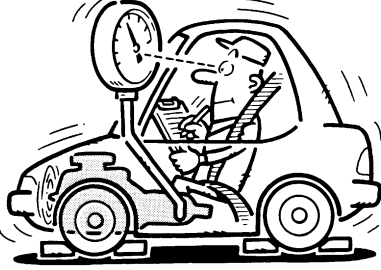3	CHECK LINE PRESSURE		
<p>Check line pressure at idle with selector lever in "D" position. Refer to "Line Pressure Test", AT-66.</p>			
			
SAT494G			
OK or NG			
OK	▶	GO TO 4.	
NG	▶	<ol style="list-style-type: none"> 1. Remove control valve assembly. Refer to "REMOVAL", AT-271. 2. Check the following items: <ul style="list-style-type: none"> ● Valves to control line pressure (Pressure regulator valve, pressure modifier valve, pilot valve and pilot filter) ● Line pressure solenoid valve 	

4	CHECK SYMPTOM		
<p>Check again.</p>			
OK or NG			
OK	▶	INSPECTION END	
NG	▶	<ol style="list-style-type: none"> 1. Perform TCM input/output signal inspection. 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector. 	

TROUBLE DIAGNOSES FOR SYMPTOMS


6. Vehicle Does Not Creep Backward In "R" Position


6. Vehicle Does Not Creep Backward In "R" Position

=NIAT0111

SYMPTOM:

Vehicle does not creep backward when selecting "R" position.

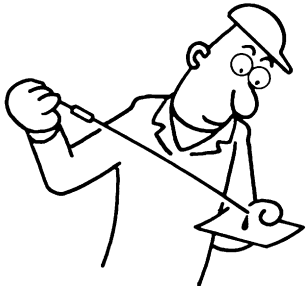1	CHECK A/T FLUID LEVEL	
Check A/T fluid level again.		
		
SAT638A		
OK or NG		
OK	▶	GO TO 2.
NG	▶	Refill ATF.

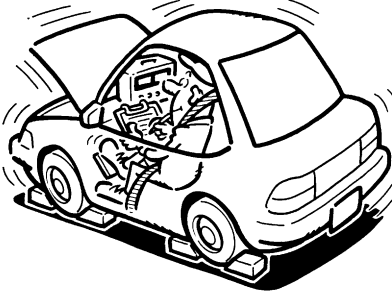2	CHECK STALL TEST	
Check stall revolution with selector lever in "1" and "R" positions.		
		
SAT493G		
OK or NG		
OK	▶	GO TO 3.
OK in "1" position, NG in "R" position	▶	<ol style="list-style-type: none"> 1. Remove control valve assembly. Refer to "REMOVAL", AT-271. 2. Check the following items: <ul style="list-style-type: none"> ● Valves to control line pressure (Pressure regulator valve, pressure modifier valve, pilot valve and pilot filter) ● Line pressure solenoid valve 3. Disassemble A/T. 4. Check the following items: <ul style="list-style-type: none"> ● Oil pump assembly ● Torque converter ● Reverse clutch assembly ● High clutch assembly
NG in both "1" and "R" positions	▶	GO TO 6.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA


SC


EL

IDX

TROUBLE DIAGNOSES FOR SYMPTOMS

6. Vehicle Does Not Creep Backward In "R" Position (Cont'd)

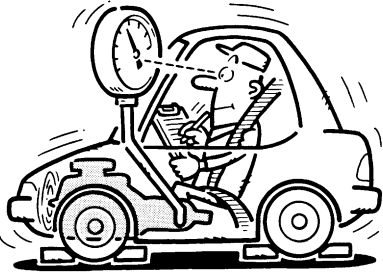3	CHECK LINE PRESSURE	<p>Check line pressure at idle with selector lever in "R" position. Refer to "Line Pressure Test", AT-66.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SAT494G</p> <p style="text-align: center;">OK or NG</p>	
OK	▶	GO TO 4.	
NG	▶	<ol style="list-style-type: none"> 1. Remove control valve assembly. Refer to "REMOVAL", AT-271. 2. Check the following items: <ul style="list-style-type: none"> ● Valves to control line pressure (Pressure regulator valve, pressure modifier valve, pilot valve and pilot filter) ● Line pressure solenoid valve 3. Disassemble A/T. 4. Check the following item: <ul style="list-style-type: none"> ● Oil pump assembly 	

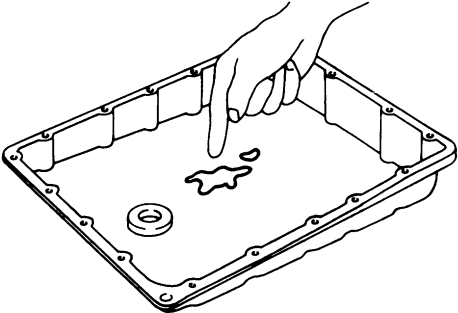4	CHECK A/T FLUID CONDITION	<ol style="list-style-type: none"> 1. Remove oil pan. 2. Check A/T fluid condition. <div style="text-align: center;">  </div> <p style="text-align: right;">SAT171B</p> <p style="text-align: center;">OK or NG</p>	
OK	▶	GO TO 5.	
NG	▶	GO TO 6.	

5	CHECK SYMPTOM	<p>Check again.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶	INSPECTION END	
NG	▶	<ol style="list-style-type: none"> 1. Perform TCM input/output signal inspection. 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector. 	

TROUBLE DIAGNOSES FOR SYMPTOMS

6. Vehicle Does Not Creep Backward In "R" Position (Cont'd)

6	DETECT MALFUNCTIONING ITEM	
	<p>1. Remove control valve assembly. Refer to "REMOVAL", AT-271.</p> <p>2. Check the following items:</p> <ul style="list-style-type: none"> ● Valves to control line pressure (Pressure regulator valve, pressure modifier valve, pilot valve and pilot filter) ● Line pressure solenoid valve <p>3. Disassemble A/T.</p> <p>4. Check the following items:</p> <ul style="list-style-type: none"> ● Oil pump assembly ● Torque converter ● Reverse clutch assembly ● High clutch assembly ● Low & reverse brake assembly ● Low one-way clutch <p style="text-align: center;">OK or NG</p>	
OK	▶	GO TO 5.
NG	▶	Repair or replace damaged parts.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

TROUBLE DIAGNOSES FOR SYMPTOMS


7. Vehicle Does Not Creep Forward In "D", "2" Or "1" Position


7. Vehicle Does Not Creep Forward In "D", "2" Or "1" Position

=NIAT0112

SYMPTOM:


Vehicle does not creep forward when selecting "D", "2" or "1" position.

1	CHECK A/T FLUID LEVEL
Check A/T fluid level again.	
	
SAT638A	
OK or NG	
OK	▶ GO TO 2.
NG	▶ Refill ATF.

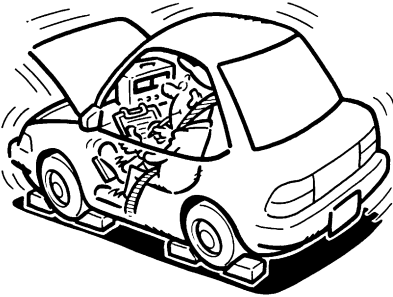
2	CHECK STALL TEST
Check stall revolution with selector lever in "D" position. Refer to "Stall Test", AT-62.	
	
SAT493G	
OK or NG	
OK	▶ GO TO 3.
NG	▶ GO TO 6.

TROUBLE DIAGNOSES FOR SYMPTOMS

7. Vehicle Does Not Creep Forward In "D", "2" Or "1" Position (Cont'd)

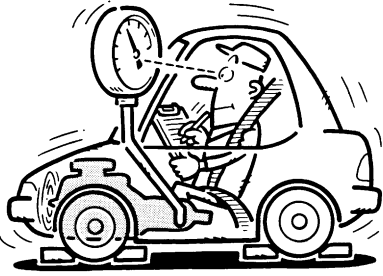3	CHECK LINE PRESSURE	<p>Check line pressure at idle with selector lever in "D" position. Refer to "Line Pressure Test", AT-66.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SAT494G</p> <p style="text-align: center;">OK or NG</p>	
OK	▶	GO TO 4.	
NG	▶	<ol style="list-style-type: none"> 1. Remove control valve assembly. Refer to "REMOVAL", AT-271. 2. Check the following items: <ul style="list-style-type: none"> ● Valves to control line pressure (Pressure regulator valve, pressure modifier valve, pilot valve and pilot filter) ● Line pressure solenoid valve 3. Disassemble A/T. 4. Check the following item: <ul style="list-style-type: none"> ● Oil pump assembly 	

GI
MA
EM
LC
EC
FE
CL
MT
AT

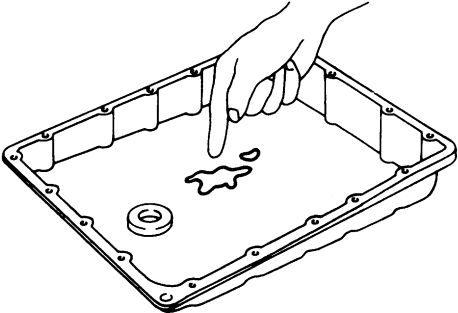4	CHECK A/T FLUID CONDITION	<ol style="list-style-type: none"> 1. Remove oil pan. 2. Check A/T fluid condition. <div style="text-align: center;">  </div> <p style="text-align: right;">SAT171B</p> <p style="text-align: center;">OK or NG</p>	
OK	▶	GO TO 5.	
NG	▶	GO TO 6.	

AX
SU
BR
ST
RS
BT
HA

5	CHECK SYMPTOM	<p>Check again.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶	INSPECTION END	
NG	▶	<ol style="list-style-type: none"> 1. Perform TCM input/output signal inspection. 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector. 	

SC
EL
IDX

TROUBLE DIAGNOSES FOR SYMPTOMS

7. Vehicle Does Not Creep Forward In "D", "2" Or "1" Position (Cont'd)

6	DETECT MALFUNCTIONING ITEM
<p>1. Remove control valve assembly. Refer to "REMOVAL", AT-271.</p> <p>2. Check the following items:</p> <ul style="list-style-type: none">● Valves to control line pressure (Pressure regulator valve, pressure modifier valve, pilot valve and pilot filter)● Line pressure solenoid valve <p>3. Disassemble A/T.</p> <p>4. Check the following items:</p> <ul style="list-style-type: none">● Oil pump assembly● Forward clutch assembly● Forward one-way clutch● Low one-way clutch● Low & reverse brake assembly● Torque converter <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 5.
NG	▶ Repair or replace damaged parts.

TROUBLE DIAGNOSES FOR SYMPTOMS

8. Vehicle Cannot Be Started From D₁

8. Vehicle Cannot Be Started From D₁

=NIAT0113

SYMPTOM:

Vehicle cannot be started from D₁ on Cruise Test — Part 1.


1	CHECK SYMPTOM
Is "6. Vehicle Does Not Creep Backward In R Position" OK?	
Yes or No	
Yes	▶ GO TO 2.
No	▶ Go to "6. Vehicle Does Not Creep Backward In R Position", AT-225.


2	CHECK SELF-DIAGNOSTIC RESULTS
Does self-diagnosis show damage to vehicle speed sensor-A/T (revolution sensor), shift solenoid valve A, B or vehicle speed sensor-MTR after cruise test?	
<p>Vehicle speed sensor-A/T (revolution sensor) Vehicle speed sensor-MTR Shift solenoid valve A Shift solenoid valve B</p> <p>Self-diagnosis start</p> <p>Light Shade</p>	
SAT934FB	
Yes or No	
Yes	▶ Check damaged circuit. Refer to "DTC P0720, P0750, P0755 or VHCL SPEED SEN-MTR", AT-121, 178, 182 or 205.
No	▶ GO TO 3.

3	CHECK THROTTLE POSITION SENSOR
Check throttle position sensor. Refer to EC-196 [QG18DE (except Calif. CA Model)], EC-871 [QG18DE (Calif. CA Model)], EC-1529 (SR20DE), "DTC P0120 THROTTLE POSITION SENSOR".	
<p>Throttle body</p> <p>Throttle position sensor harness connector</p> <p>Throttle position switch harness connector</p>	
LEC279	
OK or NG	
OK	▶ GO TO 4.
NG	▶ Repair or replace throttle position sensor.

TROUBLE DIAGNOSES FOR SYMPTOMS

8. Vehicle Cannot Be Started From D₁ (Cont'd)

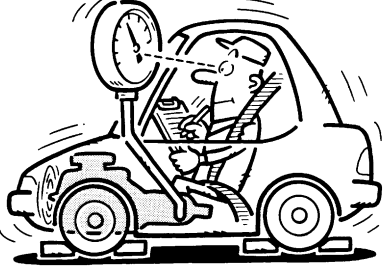4	CHECK LINE PRESSURE	
<p>Check line pressure at stall point with selector lever in "D" position. Refer to "Line Pressure Test", AT-66.</p>		
		
SAT494G		
OK or NG		
OK	▶	GO TO 5.
NG	▶	GO TO 8.

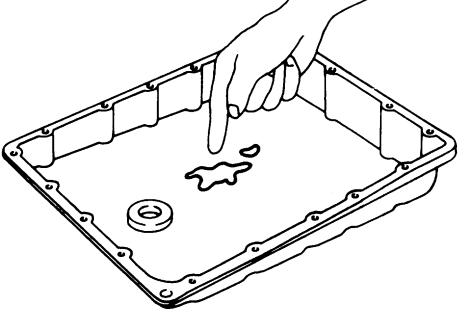5	CHECK A/T FLUID CONDITION	
<p>1. Remove oil pan. 2. Check A/T fluid condition.</p>		
		
SAT171B		
OK or NG		
OK	▶	GO TO 6.
NG	▶	GO TO 8.

6	DETECT MALFUNCTIONING ITEM	
<p>1. Remove control valve assembly. Refer to "REMOVAL", AT-271. 2. Check the following items:</p> <ul style="list-style-type: none"> ● Shift valve A ● Shift valve B ● Shift solenoid valve A ● Shift solenoid valve B ● Pilot valve ● Pilot filter 		
OK or NG		
OK	▶	GO TO 7.
NG	▶	Repair or replace damaged parts.

TROUBLE DIAGNOSES FOR SYMPTOMS

8. Vehicle Cannot Be Started From D₁ (Cont'd)

7	CHECK SYMPTOM	
Check again.		
OK or NG		
OK	▶	INSPECTION END
NG	▶	<ol style="list-style-type: none"> 1. Perform TCM input/output signal inspection. 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

GI

MA

EM

8	DETECT MALFUNCTIONING ITEM	
<ol style="list-style-type: none"> 1. Remove control valve assembly. Refer to "REMOVAL", AT-271. 2. Check the following items: <ul style="list-style-type: none"> ● Shift valve A ● Shift valve B ● Shift solenoid valve A ● Shift solenoid valve B ● Pilot valve ● Pilot filter 3. Disassemble A/T. 4. Check the following items: <ul style="list-style-type: none"> ● Forward clutch assembly ● Forward one-way clutch ● Low one-way clutch ● High clutch assembly ● Torque converter ● Oil pump assembly 		
OK or NG		
OK	▶	GO TO 7.
NG	▶	Repair or replace damaged parts.

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

TROUBLE DIAGNOSES FOR SYMPTOMS

9. A/T Does Not Shift: $D_1 \rightarrow D_2$ Or Does Not Kickdown: $D_4 \rightarrow D_2$

9. A/T Does Not Shift: $D_1 \rightarrow D_2$ Or Does Not Kickdown: $D_4 \rightarrow D_2$


=NIAT0114

SYMPTOM:

A/T does not shift from D_1 to D_2 at the specified speed.

A/T does not shift from D_4 to D_2 when depressing accelerator pedal fully at the specified speed.

1	CHECK SYMPTOM	
Are "7. Vehicle Does Not Creep Forward In D, 2 Or 1 Position" and "8. Vehicle Cannot Be Started From D_1 " OK?		
Yes or No		
Yes	▶	GO TO 2.
No	▶	Go to "7. Vehicle Does Not Creep Forward In D, 2 Or 1 Position" and "8. Vehicle Cannot Be Started From D_1 ", AT-228, 231.

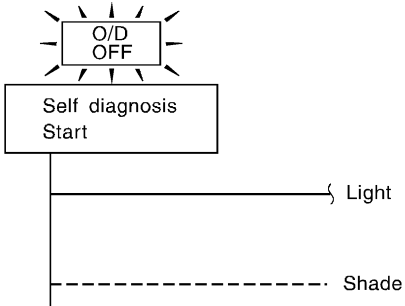
2	CHECK PNP SWITCH CIRCUIT	
<input checked="" type="checkbox"/> With CONSULT-II Does "TCM INPUT SIGNALS" in "DATA MONITOR" show damage to PNP switch circuit?		
<input type="checkbox"/> Without CONSULT-II Does self-diagnosis show damage to PNP switch circuit?		
		
Yes or No		
Yes	▶	Check PNP switch circuit. Refer to "DTC P0705", AT-110.
No	▶	GO TO 3.


SAT367J

3	CHECK VEHICLE SPEED SENSOR-A/T AND CHECK VEHICLE SPEED SENSOR-MTR CIRCUIT	
Check vehicle speed sensor-A/T (revolution sensor) and vehicle speed sensor-MTR circuit. Refer to "DTC P0720 and VHCL SPEED SEN-MTR", AT-121, AT-205.		
OK or NG		
OK	▶	GO TO 4.
NG	▶	Repair or replace vehicle speed sensor-A/T (revolution sensor) and vehicle speed sensor-MTR circuits.

TROUBLE DIAGNOSES FOR SYMPTOMS

9. A/T Does Not Shift: $D_1 \rightarrow D_2$ Or Does Not Kickdown: $D_4 \rightarrow D_2$ (Cont'd)

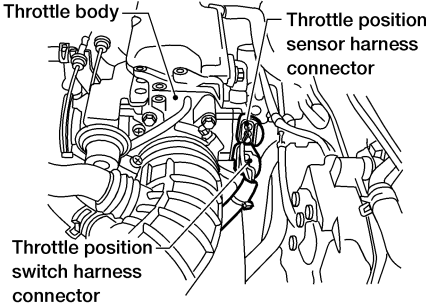4	CHECK THROTTLE POSITION SENSOR	
<p>Check throttle position sensor. Refer to EC-196 [QG18DE (except Calif. CA Model)], EC-871 [QG18DE (Calif. CA Model)], EC-1529 (SR20DE), "DTC P0120 THROTTLE POSITION SENSOR".</p>		
		
LEC279		
OK or NG		
OK	▶	GO TO 5.
NG	▶	Repair or replace throttle position sensor.

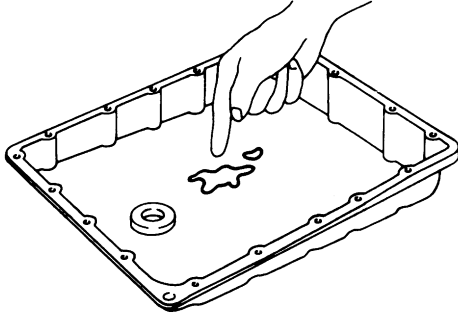5	CHECK A/T FLUID CONDITION	
<p>1. Remove oil pan. 2. Check A/T fluid condition.</p>		
		
SAT171B		
OK or NG		
OK	▶	GO TO 6.
NG	▶	GO TO 8.

6	DETECT MALFUNCTIONING ITEM	
<p>1. Remove control valve. Refer to "REMOVAL", AT-271. 2. Check the following items:</p> <ul style="list-style-type: none"> ● Shift valve A ● Shift solenoid valve A ● Pilot valve ● Pilot filter 		
OK or NG		
OK	▶	GO TO 7.
NG	▶	Repair or replace damaged parts.

GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

TROUBLE DIAGNOSES FOR SYMPTOMS

9. A/T Does Not Shift: $D_1 \rightarrow D_2$ Or Does Not Kickdown: $D_4 \rightarrow D_2$ (Cont'd)

7	CHECK SYMPTOM	
Check again.		
OK or NG		
OK	▶	INSPECTION END
NG	▶	<ol style="list-style-type: none"> 1. Perform TCM input/output signal inspection. 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

8	DETECT MALFUNCTIONING ITEM	
<ol style="list-style-type: none"> 1. Remove control valve. Refer to "REMOVAL", AT-271. 2. Check the following items: <ul style="list-style-type: none"> ● Shift valve A ● Shift solenoid valve A ● Pilot valve ● Pilot filter 3. Disassemble A/T. 4. Check the following items: <ul style="list-style-type: none"> ● Servo piston assembly ● Brake band ● Oil pump assembly 		
OK or NG		
OK	▶	GO TO 7.
NG	▶	Repair or replace damaged parts.

TROUBLE DIAGNOSES FOR SYMPTOMS

10. A/T Does Not Shift: D₂ → D₃

10. A/T Does Not Shift: D₂ → D₃

=NIAT0115

SYMPTOM:

A/T does not shift from D₂ to D₃ at the specified speed.

1	CHECK SYMPTOM	
Are "7. Vehicle Does Not Creep Forward In D, 2 Or 1 Position" and "8. Vehicle Cannot Be Started From D ₁ " OK?		
Yes or No		
Yes	▶	GO TO 2.
No	▶	Go to "7. Vehicle Does Not Creep Forward In D, 2 Or 1 Position" and "8. Vehicle Cannot Be Started From D ₁ ", AT-228, 231.


2	CHECK PNP SWITCH CIRCUIT	
<input type="checkbox"/> With CONSULT-II Does "TCM INPUT SIGNALS" in "DATA MONITOR" show damage to PNP switch circuit?		
<input checked="" type="checkbox"/> Without CONSULT-II Does self-diagnosis show damage to PNP switch circuit?		
SAT367J		
Yes or No		
Yes	▶	Check PNP switch circuit. Refer to "DTC P0705", AT-110.
No	▶	GO TO 3.

3	CHECK THROTTLE POSITION SENSOR	
Check throttle position sensor. Refer to EC-196 [QG18DE (except Calif. CA Model)], EC-871 [QG18DE (Calif. CA Model)], EC-1529 (SR20DE), "DTC P0120 THROTTLE POSITION SENSOR".		
LEC279		
OK or NG		
OK	▶	GO TO 4.
NG	▶	Repair or replace throttle position sensor.

GI
 MA
 EM
 LC
 EC
 FE
 CL
 MT
AT
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

TROUBLE DIAGNOSES FOR SYMPTOMS

10. A/T Does Not Shift: $D_2 \rightarrow D_3$ (Cont'd)

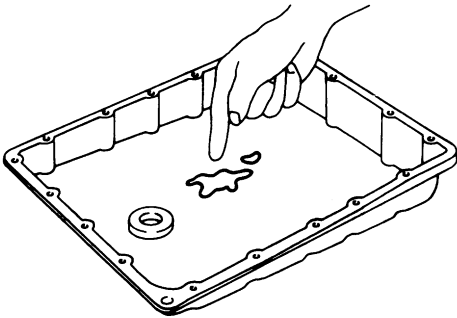4	CHECK A/T FLUID CONDITION	
<p>1. Remove oil pan. 2. Check A/T fluid condition.</p>		
		
SAT171B		
OK or NG		
OK	▶	GO TO 5.
NG	▶	GO TO 7.

5	DETECT MALFUNCTIONING ITEM	
<p>1. Remove control valve assembly. Refer to "REMOVAL", AT-271. 2. Check the following items:</p> <ul style="list-style-type: none"> ● Shift valve B ● Shift solenoid valve B ● Pilot valve ● Pilot filter 		
OK or NG		
OK	▶	GO TO 6.
NG	▶	Repair or replace damaged parts.

6	CHECK SYMPTOM	
Check again.		
OK or NG		
OK	▶	INSPECTION END
NG	▶	<p>1. Perform TCM input/output signal inspection. 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.</p>

TROUBLE DIAGNOSES FOR SYMPTOMS

10. A/T Does Not Shift: D₂ → D₃ (Cont'd)

7	DETECT MALFUNCTIONING ITEM	
	<p>1. Remove control valve assembly. Refer to "REMOVAL", AT-271.</p> <p>2. Check the following items:</p> <ul style="list-style-type: none"> ● Shift valve B ● Shift solenoid valve B ● Pilot valve ● Pilot filter <p>3. Disassemble A/T.</p> <p>4. Check the following items:</p> <ul style="list-style-type: none"> ● Servo piston assembly ● High clutch assembly ● Oil pump assembly <p style="text-align: center;">OK or NG</p>	
OK	▶	GO TO 6.
NG	▶	Repair or replace damaged parts.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

TROUBLE DIAGNOSES FOR SYMPTOMS

11. A/T Does Not Shift: D₃ → D₄

11. A/T Does Not Shift: D₃ → D₄

=NIAT0116

SYMPTOM:


- A/T does not shift from D₃ to D₄ at the specified speed.
- A/T must be warm before D₃ to D₄ shift will occur.

1	CHECK SYMPTOM	
Are "7. Vehicle Does Not Creep Forward In D, 2 Or 1 Position" and "8. Vehicle Cannot Be Started From D ₁ " OK?		
Yes or No		
Yes	▶	GO TO 2.
No	▶	Go to "7. Vehicle Does Not Creep Forward In D, 2 Or 1 Position" and "8. Vehicle Cannot Be Started From D ₁ ", AT-228, 231.


2	CHECK SELF-DIAGNOSTIC RESULTS	
<p>Ⓜ With CONSULT-II Does self-diagnosis, after cruise test, show damage to any of the following circuits?</p> <ul style="list-style-type: none"> ● PNP switch ● Overdrive control switch ● A/T fluid temperature sensor ● Vehicle speed sensor-A/T (revolution sensor) ● Shift solenoid valve A or B ● Vehicle speed sensor-MTR 		
SAT363HC		
Yes or No		
Yes	▶	Check damaged circuit. Refer to "DTC P0705, P0710, P0720, P0750, P0755 or VHCL SPEED SEN-MTR", AT-110, 115, 121, 178, 182 or 205.
No	▶	GO TO 3.

TROUBLE DIAGNOSES FOR SYMPTOMS

11. A/T Does Not Shift: D₃ → D₄ (Cont'd)

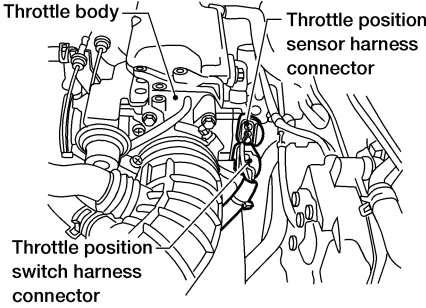3	CHECK THROTTLE POSITION SENSOR	
<p>Check throttle position sensor. Refer to EC-196 [QG18DE (except Calif. CA Model)], EC-871 [QG18DE (Calif. CA Model)], EC-1529 (SR20DE), "DTC P0120 THROTTLE POSITION SENSOR".</p>		
 <p>Throttle body Throttle position sensor harness connector Throttle position switch harness connector</p>		
LEC279		
OK or NG		
OK	▶	GO TO 4.
NG	▶	Repair or replace throttle position sensor.

GI
MA
EM
LC
EC
FE
CL

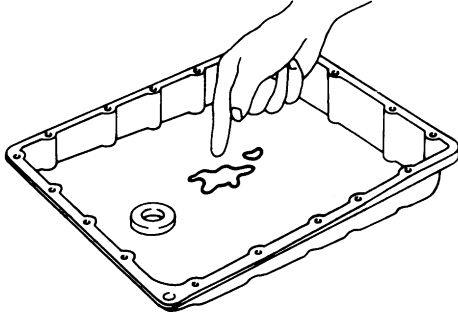4	CHECK A/T FLUID CONDITION	
<p>1. Remove oil pan. 2. Check A/T fluid condition.</p>		
		
SAT171B		
OK or NG		
OK	▶	GO TO 5.
NG	▶	GO TO 7.

MT
AT
AX
SU
BR
ST
RS

5	DETECT MALFUNCTIONING ITEM	
<p>1. Remove control valve assembly. Refer to "REMOVAL", AT-271. 2. Check the following items:</p> <ul style="list-style-type: none"> ● Shift valve B ● Overrun clutch control valve ● Shift solenoid valve B ● Pilot valve ● Pilot filter 		
OK or NG		
OK	▶	GO TO 6.
NG	▶	Repair or replace damaged parts.

BT
HA
SC
EL
IDX

TROUBLE DIAGNOSES FOR SYMPTOMS

11. A/T Does Not Shift: $D_3 \rightarrow D_4$ (Cont'd)

6	CHECK SYMPTOM	
Check again.		
OK or NG		
OK	▶	INSPECTION END
NG	▶	<ol style="list-style-type: none"> 1. Perform TCM input/output signal inspection. 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

7	DETECT MALFUNCTIONING ITEM	
<ol style="list-style-type: none"> 1. Remove control valve assembly. Refer to "REMOVAL", AT-271. 2. Check the following items: <ul style="list-style-type: none"> ● Shift valve B ● Overrun clutch control valve ● Shift solenoid valve B ● Pilot valve ● Pilot filter 3. Disassemble A/T. 4. Check the following items: <ul style="list-style-type: none"> ● Servo piston assembly ● Brake band ● Torque converter ● Oil pump assembly 		
OK or NG		
OK	▶	GO TO 6.
NG	▶	Repair or replace damaged parts.

TROUBLE DIAGNOSES FOR SYMPTOMS

12. A/T Does Not Perform Lock-up

12. A/T Does Not Perform Lock-up

=NIAT0117

SYMPTOM:

A/T does not perform lock-up at the specified speed.

1	CHECK SELF-DIAGNOSTIC RESULTS	
Does self-diagnosis show damage to torque converter clutch solenoid valve circuit after cruise test?		
SAT346H		
Yes or No		
Yes	▶	Check torque converter clutch solenoid valve circuit. Refer to "DTC P0740", AT-158.
No	▶	GO TO 2.

2	CHECK THROTTLE POSITION SENSOR	
Check throttle position sensor. Refer to EC-196 [QG18DE (except Calif. CA Model)], EC-871 [QG18DE (Calif. CA Model)], EC-1529 (SR20DE), "DTC P0120 THROTTLE POSITION SENSOR".		
SAT413J		
OK or NG		
OK	▶	GO TO 3.
NG	▶	Repair or replace throttle position sensor.

3	DETECT MALFUNCTIONING ITEM	
<ol style="list-style-type: none"> 1. Remove control valve. Refer to "REMOVAL", AT-271. 2. Check following items: <ul style="list-style-type: none"> ● Torque converter clutch control valve ● Torque converter relief valve ● Torque converter clutch solenoid valve ● Pilot valve ● Pilot filter 		
OK or NG		
OK	▶	GO TO 4.
NG	▶	Repair or replace damaged parts.

GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

TROUBLE DIAGNOSES FOR SYMPTOMS

12. A/T Does Not Perform Lock-up (Cont'd)

4	CHECK SYMPTOM
Check again.	
OK or NG	
OK	▶ INSPECTION END
NG	▶ 1. Perform TCM input/output signal inspection. 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

TROUBLE DIAGNOSES FOR SYMPTOMS

13. A/T Does Not Hold Lock-up Condition

13. A/T Does Not Hold Lock-up Condition

=NIAT0118

SYMPTOM:

A/T does not hold lock-up condition for more than 30 seconds.

1	CHECK DIAGNOSTIC RESULTS	
Does self-diagnosis show damage to engine speed signal circuit after cruise test?		
SAT347H		
Yes or No		
Yes	▶	Check engine speed signal circuit. Refer to "DTC P0725", AT-126.
No	▶	GO TO 2.

2	CHECK A/T FLUID CONDITION	
<ol style="list-style-type: none"> 1. Remove oil pan. 2. Check A/T fluid condition. 		
SAT171B		
OK or NG		
OK	▶	GO TO 3.
NG	▶	GO TO 5.

3	DETECT MALFUNCTIONING ITEM	
<ol style="list-style-type: none"> 1. Remove control valve assembly. Refer to "REMOVAL", AT-271. 2. Check the following items: <ul style="list-style-type: none"> ● Torque converter clutch control valve ● Pilot valve ● Pilot filter 		
OK or NG		
OK	▶	GO TO 4.
NG	▶	Repair or replace damaged parts.

GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

TROUBLE DIAGNOSES FOR SYMPTOMS

13. A/T Does Not Hold Lock-up Condition (Cont'd)

4	CHECK SYMPTOM	
Check again.		
OK or NG		
OK	▶	INSPECTION END
NG	▶	1. Perform TCM input/output signal inspection. 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

5	DETECT MALFUNCTIONING ITEM	
1. Remove control valve assembly. Refer to "REMOVAL", AT-271. 2. Check the following items: <ul style="list-style-type: none"> ● Torque converter clutch control valve ● Pilot valve ● Pilot filter 3. Disassemble A/T. 4. Check torque converter and oil pump assembly.		
OK or NG		
OK	▶	GO TO 4.
NG	▶	Repair or replace damaged parts.

TROUBLE DIAGNOSES FOR SYMPTOMS

14. Lock-up Is Not Released

14. Lock-up Is Not Released

=NIAT0119

SYMPTOM:

Lock-up is not released when accelerator pedal is released.

1	CHECK THROTTLE POSITION SWITCH CIRCUIT	
<p><input type="checkbox"/> With CONSULT-II Does "TCM INPUT SIGNALS" in "DATA MONITOR" show damage to closed throttle position switch circuit?</p>		
<p><input checked="" type="checkbox"/> Without CONSULT-II Does self-diagnosis show damage to closed throttle position switch circuit?</p>		
<p>The diagram shows a box labeled "Self diagnosis Start" with a vertical line extending downwards. From this line, a solid horizontal line branches to the right, ending at a symbol for a light labeled "Light". A dashed horizontal line also branches to the right from the vertical line, ending at a symbol for a shaded area labeled "Shade". Above the "Light" label is a rectangular box with "O/D OFF" written inside, with several short lines radiating from its corners, indicating a light.</p>		
SAT367J		
Yes or No		
Yes	▶	Check closed throttle position switch circuit. Refer to "DTC P0705", AT-110.
No	▶	GO TO 2.

2	CHECK SYMPTOM	
Check again.		
OK or NG		
OK	▶	INSPECTION END
NG	▶	<ol style="list-style-type: none"> 1. Perform TCM input/output signal inspection. 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

TROUBLE DIAGNOSES FOR SYMPTOMS


15. Engine Speed Does Not Return To Idle (Light Braking D₄ → D₃)


15. Engine Speed Does Not Return To Idle (Light Braking D₄ → D₃)

=NIAT0120

SYMPTOM:


- Engine speed does not smoothly return to idle when A/T shifts from D₄ to D₃.
- Vehicle does not decelerate by engine brake when turning overdrive control switch OFF.
- Vehicle does not decelerate by engine brake when shifting A/T from “D” to “2” position.

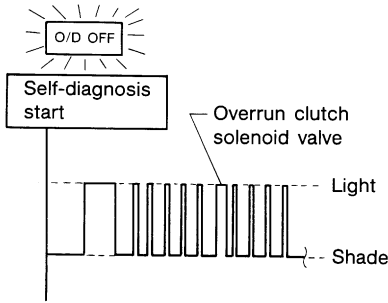1	CHECK SELF-DIAGNOSTIC RESULTS	
Does self-diagnosis show damage to overrun clutch solenoid valve circuit after cruise test?		
		
SAT348H		
Yes or NO		
Yes	▶	Check overrun clutch solenoid valve circuit. Refer to “DTC P1760”, AT-194.
No	▶	GO TO 2.

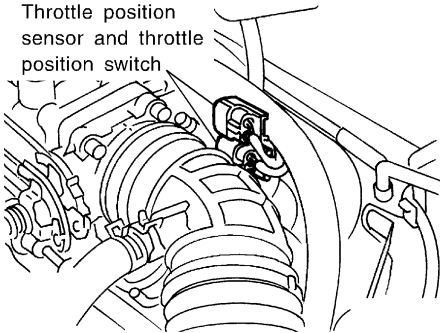2	CHECK THROTTLE POSITION SENSOR	
Check throttle position sensor. Refer to EC-196 [QG18DE (except Calif. CA Model)], EC-871 [QG18DE (Calif. CA Model)], EC-1529 (SR20DE), “DTC P0120 THROTTLE POSITION SENSOR”.		
		
SAT413J		
OK or NG		
OK	▶	GO TO 3.
NG	▶	Repair or replace throttle position sensor.

TROUBLE DIAGNOSES FOR SYMPTOMS

15. Engine Speed Does Not Return To Idle (Light Braking $D_4 \rightarrow D_3$) (Cont'd)

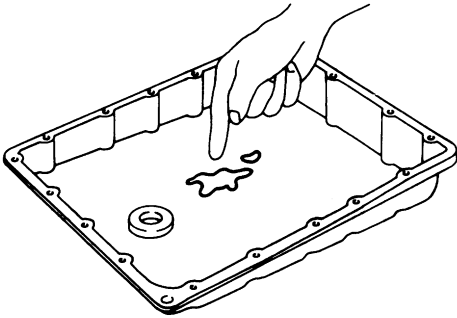3	CHECK A/T FLUID CONDITION
<p>1. Remove oil pan. 2. Check A/T fluid condition.</p>	
	
SAT171B	
OK or NG	
OK	▶ GO TO 4.
NG	▶ GO TO 6.

4	DETECT MALFUNCTIONING ITEM
<p>1. Remove control valve assembly. Refer to "REMOVAL", AT-271. 2. Check the following items:</p> <ul style="list-style-type: none"> ● Overrun clutch control valve ● Overrun clutch reducing valve ● Overrun clutch solenoid valve 	
OK or NG	
OK	▶ GO TO 5.
NG	▶ Repair or replace damaged parts.

5	CHECK SYMPTOM
Check again.	
OK or NG	
OK	▶ INSPECTION END
NG	▶ <ul style="list-style-type: none"> 1. Perform TCM input/output signal inspection. 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

6	DETECT MALFUNCTIONING ITEM
<p>1. Remove control valve assembly. Refer to "REMOVAL", AT-271. 2. Check the following items:</p> <ul style="list-style-type: none"> ● Overrun clutch control valve ● Overrun clutch reducing valve ● Overrun clutch solenoid valve <p>3. Disassemble A/T. 4. Check the following items:</p> <ul style="list-style-type: none"> ● Overrun clutch assembly ● Oil pump assembly 	
OK or NG	
OK	▶ GO TO 5.
NG	▶ Repair or replace damaged parts.

GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

TROUBLE DIAGNOSES FOR SYMPTOMS

16. Vehicle Does Not Start From D₁

16. Vehicle Does Not Start From D₁

NIAT0121

SYMPTOM:

Vehicle does not start from D₁ on Cruise test — Part 2.

1	CHECK SELF-DIAGNOSTIC RESULTS	
<p>Does self-diagnosis show damage to vehicle speed sensor-A/T (revolution sensor), shift solenoid valve A, B or vehicle speed sensor-MTR after cruise test?</p>		
SAT934FA		
Yes or No		
Yes	▶	Check damaged circuit. Refer to "DTC P0720, P0750, P0755 or VHCL SPEED SEN-MTR", AT-121, 178, 182 or 205.
No	▶	GO TO 2.

2	CHECK SYMPTOM	
Check again.		
OK or NG		
OK	▶	Go to "8. Vehicle Cannot Be Started From D ₁ ", AT-231.
NG	▶	<ol style="list-style-type: none"> 1. Perform TCM input/output signal inspection. 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

TROUBLE DIAGNOSES FOR SYMPTOMS


17. A/T Does Not Shift: D₄ → D₃, When Overdrive Control Switch "ON" → "OFF"

17. A/T Does Not Shift: D₄ → D₃, When Overdrive Control Switch "ON" → "OFF"

=NIAT0122

SYMPTOM:

A/T does not shift from D₄ to D₃ when changing overdrive control switch to "OFF" position.

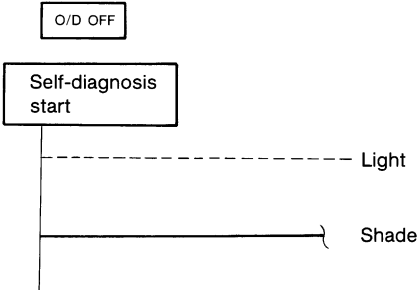1	CHECK OVERDRIVE CONTROL SWITCH CIRCUIT	
<p><input type="checkbox"/> With CONSULT-II Does "TCM INPUT SIGNALS" in "DATA MONITOR" show damage to overdrive control switch circuit?</p>		
<p><input checked="" type="checkbox"/> Without CONSULT-II Does self-diagnosis show damage to overdrive control switch circuit?</p>		
 <p style="text-align: right;">SAT344H</p>		
Yes or No		
Yes	▶	Check overdrive control switch circuit. Refer to "DIAGNOSTIC PROCEDURE", AT-255.
No	▶	Go to "10. A/T Does Not Shift: D ₂ → D ₃ ", AT-237.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

TROUBLE DIAGNOSES FOR SYMPTOMS

18. A/T Does Not Shift: $D_3 \rightarrow 2_2$, When Selector Lever "D" \rightarrow "2" Position

18. A/T Does Not Shift: $D_3 \rightarrow 2_2$, When Selector Lever "D" \rightarrow "2" Position

=NIAT0123

SYMPTOM:

A/T does not shift from D_3 to 2_2 when changing selector lever from "D" to "2" position.

1	CHECK PNP SWITCH CIRCUIT
<p><input type="checkbox"/> With CONSULT-II Does "TCM INPUT SIGNALS" in "DATA MONITOR" show damage to PNP switch circuit?</p>	
<p><input checked="" type="checkbox"/> Without CONSULT-II Does self-diagnosis show damage to PNP switch circuit?</p> <div style="text-align: center; margin: 20px 0;"> </div> <p style="text-align: right;">SAT367J</p>	
Yes or No	
Yes	▶ Check PNP switch circuit. Refer to "DTC P0705", AT-110.
No	▶ Go to "9. A/T Does Not Shift: $D_1 \rightarrow D_2$ or Does Not Kickdown: $D_4 \rightarrow D_2$ ", AT-234.

TROUBLE DIAGNOSES FOR SYMPTOMS




19. A/T Does Not Shift: 2₂ → 1₁, When Selector Lever "2" → "1" Position


19. A/T Does Not Shift: 2₂ → 1₁, When Selector Lever "2" → "1" Position

=NIAT0124

SYMPTOM:

A/T does not shift from 2₂ to 1₁ when changing selector lever from "2" to "1" position.

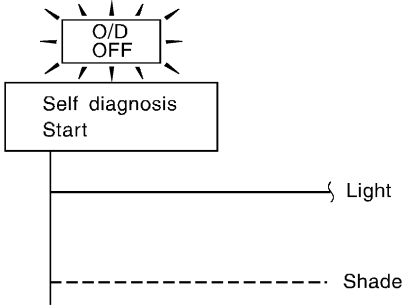1 CHECK PNP SWITCH CIRCUIT	
<p> With CONSULT-II Does "TCM INPUT SIGNALS" in "DATA MONITOR" show damage to PNP switch circuit?</p>	
<p> Without CONSULT-II Does self-diagnosis show damage to PNP switch circuit?</p>	
	
SAT367J	
Yes or No	
Yes	▶ Check PNP switch circuit. Refer to "DTC P0705", AT-110.
No	▶ GO TO 2.

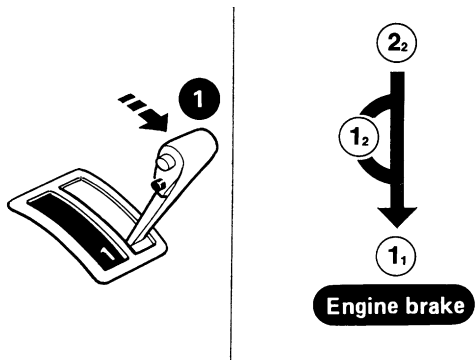2 CHECK SYMPTOM	
Check again.	
	
OK or NG	
SAT778B	
OK	▶ INSPECTION END
NG	▶ <ol style="list-style-type: none"> 1. Perform TCM input/output signal inspection. 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

TROUBLE DIAGNOSES FOR SYMPTOMS

20. Vehicle Does Not Decelerate By Engine Brake


20. Vehicle Does Not Decelerate By Engine Brake

=NIAT0125

SYMPTOM:

Vehicle does not decelerate by engine brake when shifting from 2₂ (1₂) to 1₁.

1 CHECK SYMPTOM	
Is "6. Vehicle Does Not Creep Backward In R Position" OK?	
Yes or No	
Yes	▶ Go to "15. Engine Speed Does Not Return To Idle (Light Braking D ₄ → D ₃)", AT-248.
No	▶ Go to "6. Vehicle Does Not Creep Backward In R Position", AT-225.

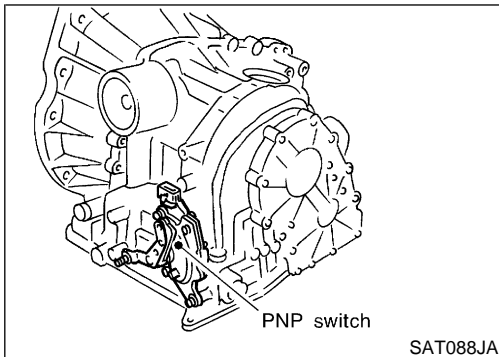

21. TCM Self-diagnosis Does Not Activate (PNP, Overdrive Control and Throttle Position Switches Circuit Checks)

NIAT0126



SYMPTOM:

O/D OFF indicator lamp does not come on in TCM self-diagnostic procedure even if the lamp circuit is good.

DESCRIPTION

NIAT0126S01

- PNP switch
The PNP switch assembly includes a transmission range switch. The transmission range switch detects the selector lever position and sends a signal to the TCM.
- Overdrive control switch
Detects the overdrive control switch position (ON or OFF) and sends a signal to the TCM.
- Throttle position switch
Consists of a wide open throttle position switch and a closed throttle position switch.
The wide open throttle position switch sends a signal to the TCM when the throttle valve is open at least 1/2 of the full throttle position. The closed throttle position switch sends a signal to the TCM when the throttle valve is fully closed.

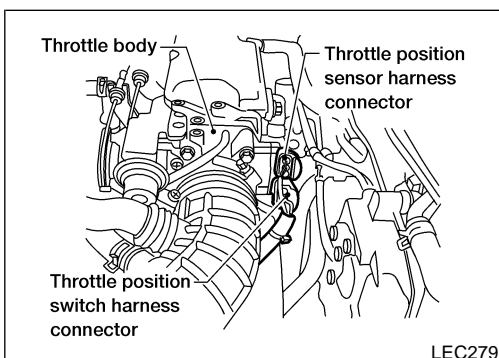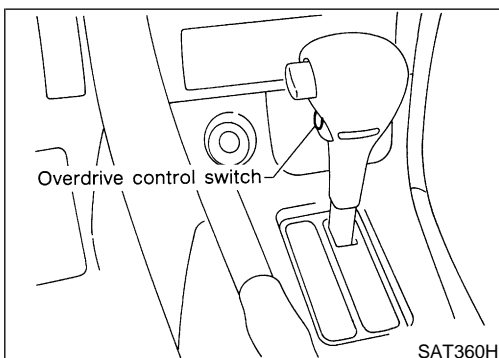

TROUBLE DIAGNOSES FOR SYMPTOMS

21. TCM Self-diagnosis Does Not Activate (PNP, Overdrive Control and Throttle Position Switches Circuit Checks) (Cont'd)

DIAGNOSTIC PROCEDURE

NIAT0126S02

1	CHECK PNP SWITCH CIRCUIT (With CONSULT-II)															
	<p>With CONSULT-II</p> <ol style="list-style-type: none"> 1. Turn ignition switch to "ON" position. (Do not start engine.) 2. Select "TCM INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II. 3. Read out "PN", "R", "D", "2" and "1" position switches moving selector lever to each position. Check that the signal of the selector lever position is indicated properly. <div style="text-align: center; margin: 10px 0;"> <table border="1" style="border-collapse: collapse;"> <thead> <tr> <th colspan="2" style="text-align: center;">DATA MONITOR</th> </tr> <tr> <th style="text-align: left;">MONITORING</th> <th style="text-align: left;"></th> </tr> </thead> <tbody> <tr> <td>PN POSI SW</td> <td>OFF</td> </tr> <tr> <td>R POSITION SW</td> <td>OFF</td> </tr> <tr> <td>D POSITION SW</td> <td>OFF</td> </tr> <tr> <td>2 POSITION SW</td> <td>ON</td> </tr> <tr> <td>1 POSITION SW</td> <td>OFF</td> </tr> </tbody> </table> </div> <p style="text-align: right; margin-right: 20px;">SAT701J</p> <p style="text-align: center; margin-top: 10px;">OK or NG</p>		DATA MONITOR		MONITORING		PN POSI SW	OFF	R POSITION SW	OFF	D POSITION SW	OFF	2 POSITION SW	ON	1 POSITION SW	OFF
DATA MONITOR																
MONITORING																
PN POSI SW	OFF															
R POSITION SW	OFF															
D POSITION SW	OFF															
2 POSITION SW	ON															
1 POSITION SW	OFF															
OK	▶	GO TO 3.														
NG	▶	<p>Check the following items:</p> <ul style="list-style-type: none"> ● PNP switch (Refer to "Component Inspection", AT-261.) ● Harness for short or open between ignition switch and PNP switch (Main harness) ● Harness for short or open between PNP switch and TCM (Main harness) 														

GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

TROUBLE DIAGNOSES FOR SYMPTOMS

21. TCM Self-diagnosis Does Not Activate (PNP, Overdrive Control and Throttle Position Switches Circuit Checks) (Cont'd)

2 CHECK PNP SWITCH CIRCUIT (Without CONSULT-II)

⊗ Without CONSULT-II

1. Turn ignition switch to "ON" position. (Do not start engine.)
2. Check voltage between TCM terminals 26, 27, 34, 35, 36 and ground while moving selector lever through each position.


Voltage:

B: Battery voltage

0: 0V

Lever position	Terminals				
	36	35	34	27	26
P, N	B	0	0	0	0
R	0	B	0	0	0
D	0	0	B	0	0
2	0	0	0	B	0
1	0	0	0	0	B

MTBL0138

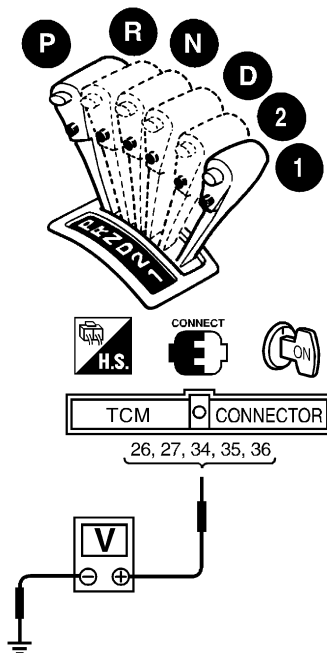

SAT470J

OK or NG

OK ► GO TO 4.

- NG ► **Check the following items:**
- PNP switch (Refer to "Component Inspection", AT-261.)
 - Harness for short or open between ignition switch and PNP switch (Main harness)
 - Harness for short or open between PNP switch and TCM (Main harness)

TROUBLE DIAGNOSES FOR SYMPTOMS


21. TCM Self-diagnosis Does Not Activate (PNP, Overdrive Control and Throttle Position Switches Circuit Checks) (Cont'd)

3	CHECK OVERDRIVE CONTROL SWITCH CIRCUIT (With CONSULT-II)															
<p>Ⓜ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Turn ignition switch to "ON" position. (Do not start engine.) 2. Select "TCM INPUT SIGNALS" in "DATA MONITOR" mode for "AT" with CONSULT-II. 3. Read out "OVERDRIVE SW". <p>Check the signal of the overdrive control switch is indicated properly. (Overdrive control switch "ON" displayed on CONSULT-II means overdrive "OFF".)</p> <div style="text-align: center; margin: 10px 0;"> <table border="1" style="border-collapse: collapse;"> <thead> <tr> <th colspan="2" style="padding: 2px;">DATA MONITOR</th> </tr> <tr> <th style="padding: 2px;">MONITORING</th> <th style="padding: 2px;"></th> </tr> </thead> <tbody> <tr> <td style="padding: 2px;">ENGINE SPEED</td> <td style="padding: 2px;">XXX rpm</td> </tr> <tr> <td style="padding: 2px;">TURBINE REV</td> <td style="padding: 2px;">XXX rpm</td> </tr> <tr> <td style="padding: 2px;">OVERDRIVE SW</td> <td style="padding: 2px;">ON</td> </tr> <tr> <td style="padding: 2px;">PN POSI SW</td> <td style="padding: 2px;">OFF</td> </tr> <tr> <td style="padding: 2px;">R POSITION SW</td> <td style="padding: 2px;">OFF</td> </tr> </tbody> </table> </div> <p style="text-align: right; margin-right: 20px;">SAT645J</p> <p style="text-align: center; margin-top: 10px;">OK or NG</p>			DATA MONITOR		MONITORING		ENGINE SPEED	XXX rpm	TURBINE REV	XXX rpm	OVERDRIVE SW	ON	PN POSI SW	OFF	R POSITION SW	OFF
DATA MONITOR																
MONITORING																
ENGINE SPEED	XXX rpm															
TURBINE REV	XXX rpm															
OVERDRIVE SW	ON															
PN POSI SW	OFF															
R POSITION SW	OFF															
OK	▶	GO TO 5.														
NG	▶	<p>Check the following items:</p> <ul style="list-style-type: none"> ● Overdrive control switch (Refer to "Component Inspection", AT-261.) ● Harness for short or open between TCM and overdrive control switch (Main harness) ● Harness of ground circuit for overdrive control switch (Main harness) for short or open 														

GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

TROUBLE DIAGNOSES FOR SYMPTOMS

21. TCM Self-diagnosis Does Not Activate (PNP, Overdrive Control and Throttle Position Switches Circuit Checks) (Cont'd)

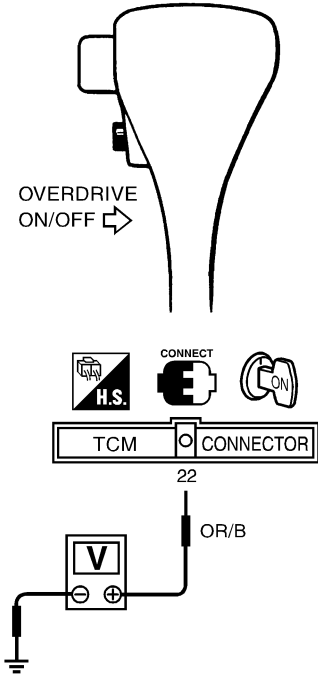4		CHECK OVERDRIVE CONTROL SWITCH CIRCUIT (Without CONSULT-II)
<p>⊗ Without CONSULT-II</p> <p>1. Turn ignition switch to "ON" position. (Do not start engine.)</p> <p>2. Check voltage between TCM terminal 22 and ground when overdrive control switch is "ON" and "OFF".</p> <p>Voltage:</p> <p style="padding-left: 20px;">Switch position "ON": Battery voltage</p> <p style="padding-left: 20px;">Switch position "OFF": 1V or less</p> <div style="text-align: center; margin: 20px 0;">  </div> <p style="text-align: right; margin-right: 20px;">SAT471JA</p> <p style="text-align: center; margin-top: 10px;">OK or NG</p>		
OK	▶	GO TO 6.
NG	▶	<p>Check the following items:</p> <ul style="list-style-type: none"> ● Overdrive control switch (Refer to "Component Inspection", AT-261.) ● Harness for short or open between TCM and overdrive control switch (Main harness) ● Harness of ground circuit for overdrive control switch (Main harness) for short or open

TROUBLE DIAGNOSES FOR SYMPTOMS



21. TCM Self-diagnosis Does Not Activate (PNP, Overdrive Control and Throttle Position Switches Circuit Checks) (Cont'd)

5	CHECK THROTTLE POSITION SWITCH CIRCUIT (With CONSULT-II)															
<p>Ⓜ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Apply vacuum to the throttle opener, then check the following. Refer to step 1 through 5 of "TCM Self-diagnostic Procedure (No Tools)", AT-49. 2. Turn ignition switch to "ON" position. (Do not start engine.) 3. Select "TCM INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II. 4. Read out "CLOSED THL/SW" and "W/O THRL/P-SW" depressing and releasing accelerator pedal. Check the signal of throttle position switch is indicated properly. 																
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th rowspan="2" style="text-align: center;">Accelerator pedal condition</th> <th colspan="2" style="text-align: center;">Data monitor</th> </tr> <tr> <th style="text-align: center;">CLOSED THL/SW</th> <th style="text-align: center;">W/O THRL/P-SW</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">Released</td> <td style="text-align: center;">ON</td> <td style="text-align: center;">OFF</td> </tr> <tr> <td style="text-align: center;">Fully depressed</td> <td style="text-align: center;">OFF</td> <td style="text-align: center;">ON</td> </tr> </tbody> </table>			Accelerator pedal condition	Data monitor		CLOSED THL/SW	W/O THRL/P-SW	Released	ON	OFF	Fully depressed	OFF	ON			
Accelerator pedal condition	Data monitor															
	CLOSED THL/SW	W/O THRL/P-SW														
Released	ON	OFF														
Fully depressed	OFF	ON														
MTBL0011																
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th colspan="2" style="text-align: center;">DATA MONITOR</th> </tr> <tr> <th colspan="2" style="text-align: center;">MONITORING</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">POWERSHIFT SW</td> <td style="text-align: center;">OFF</td> </tr> <tr> <td style="text-align: center;">CLOSED THL/SW</td> <td style="text-align: center;">OFF</td> </tr> <tr> <td style="text-align: center;">W/O THRL/P-SW</td> <td style="text-align: center;">OFF</td> </tr> <tr> <td style="text-align: center;">HOLD SW</td> <td style="text-align: center;">OFF</td> </tr> <tr> <td style="text-align: center;">BRAKE SW</td> <td style="text-align: center;">ON</td> </tr> </tbody> </table>			DATA MONITOR		MONITORING		POWERSHIFT SW	OFF	CLOSED THL/SW	OFF	W/O THRL/P-SW	OFF	HOLD SW	OFF	BRAKE SW	ON
DATA MONITOR																
MONITORING																
POWERSHIFT SW	OFF															
CLOSED THL/SW	OFF															
W/O THRL/P-SW	OFF															
HOLD SW	OFF															
BRAKE SW	ON															
SAT702J																
OK or NG																
OK	▶	GO TO 7.														
NG	▶	<p>Check the following items:</p> <ul style="list-style-type: none"> ● Throttle position switch — Refer to "Component Inspection", AT-261. ● Harness for short or open between ignition switch and throttle position switch (Main harness) ● Harness for short or open between throttle position switch and TCM (Main harness) 														

GI
 MA
 EM
 LC
 EC
 FE
 CL
 MT
AT
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

TROUBLE DIAGNOSES FOR SYMPTOMS


21. TCM Self-diagnosis Does Not Activate (PNP, Overdrive Control and Throttle Position Switches Circuit Checks) (Cont'd)

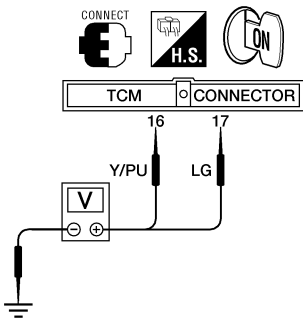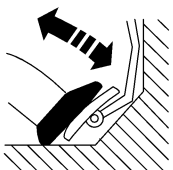6	CHECK THROTTLE POSITION SWITCH CIRCUIT (Without CONSULT-II)											
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Apply vacuum to the throttle opener, then check the following. Refer to step 1 through 5 of "TCM Self-diagnostic Procedure (No Tools)", AT-49. 2. Turn ignition switch to "ON" position. (Do not start engine.) 3. Check voltage between TCM terminals 16, 17 and ground while depressing, and releasing accelerator pedal slowly. (After warming up engine) 	<table border="1" style="margin: 0 auto; border-collapse: collapse; text-align: center;"> <thead> <tr> <th rowspan="2" style="padding: 5px;">Accelerator pedal condition</th> <th colspan="2" style="padding: 5px;">Voltage (Approx.)</th> </tr> <tr> <th style="padding: 5px;">Terminal No. 16</th> <th style="padding: 5px;">Terminal No. 17</th> </tr> </thead> <tbody> <tr> <td style="padding: 5px;">Released</td> <td style="padding: 5px;">Battery voltage</td> <td style="padding: 5px;">0V</td> </tr> <tr> <td style="padding: 5px;">Fully depressed</td> <td style="padding: 5px;">0V</td> <td style="padding: 5px;">Battery voltage</td> </tr> </tbody> </table> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">  </div> <div style="text-align: center;">  </div> </div> <p style="text-align: right; margin-top: 10px;">WAT357</p> <p style="text-align: right; margin-top: 10px;">LAT192</p> <p style="text-align: center; margin-top: 10px;">OK or NG</p>	Accelerator pedal condition	Voltage (Approx.)		Terminal No. 16	Terminal No. 17	Released	Battery voltage	0V	Fully depressed	0V	Battery voltage
Accelerator pedal condition	Voltage (Approx.)											
	Terminal No. 16	Terminal No. 17										
Released	Battery voltage	0V										
Fully depressed	0V	Battery voltage										
OK	▶ GO TO 7.											
NG	<p>▶ Check the following items:</p> <ul style="list-style-type: none"> ● Throttle position switch — Refer to "Component Inspection", AT-261. ● Harness for short or open between ignition switch and throttle position switch (Main harness) ● Harness for short or open between throttle position switch and TCM (Main harness) 											

7	CHECK DTC
Perform "DIAGNOSTIC PROCEDURE", AT-255	
OK or NG	
OK	▶ INSPECTION END
NG	<p>▶</p> <ul style="list-style-type: none"> ● Perform TCM input/output signal inspection. ● If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

TROUBLE DIAGNOSES FOR SYMPTOMS

21. TCM Self-diagnosis Does Not Activate (PNP, Overdrive Control and Throttle Position Switches Circuit Checks) (Cont'd)

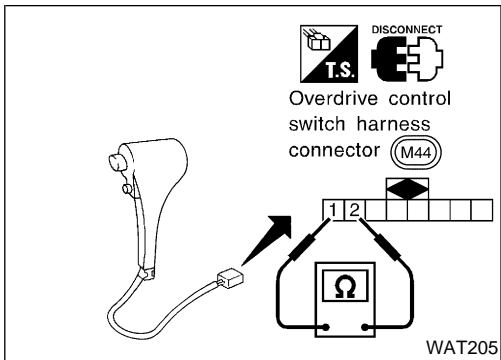

COMPONENT INSPECTION


NIAT0126S03

Overdrive Control Switch

NIAT0126S0301

- Check continuity between terminals 1 and 2.

Switch position	Continuity
RELEASED	No
DEPRESSED	Yes

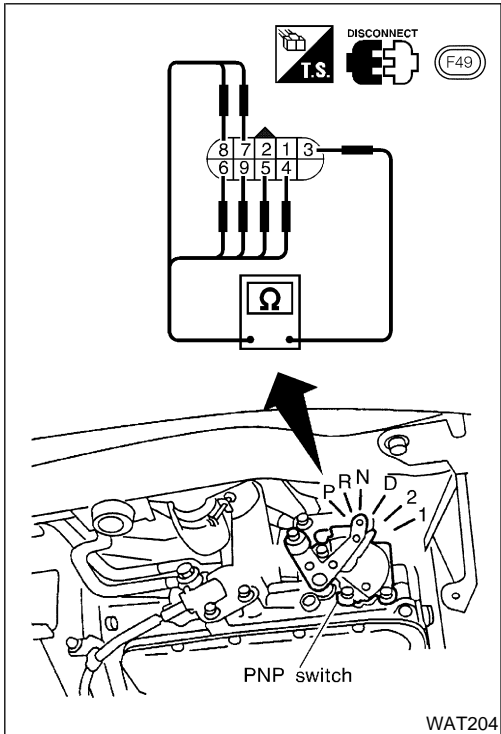


PNP Switch


NIAT0126S0302

- Check continuity between terminals 1 and 2 and between terminals 3 and 4, 5, 6, 7, 8, 9 while moving manual shaft through each position.

Lever position	Terminal No.	
P	3 — 7	1 — 2
R	3 — 8	
N	3 — 9	1 — 2
D	3 — 6	
2	3 — 5	
1	3 — 4	

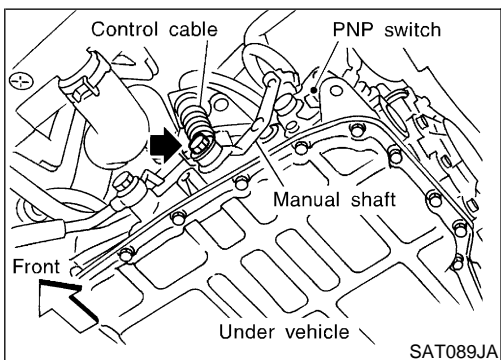

- If NG, check again with manual control cable disconnected from manual shaft of A/T assembly. Refer to step 1.
- If OK on step 2, adjust manual control cable. Refer to "Control Cable Adjustment", AT-272.
- If NG on step 2, remove PNP switch from A/T and check continuity of PNP switch terminals. Refer to step 1.
- If OK on step 4, adjust PNP switch. Refer to "Park/Neutral Position (PNP) Switch Adjustment", AT-272.
- If NG on step 4, replace PNP switch.

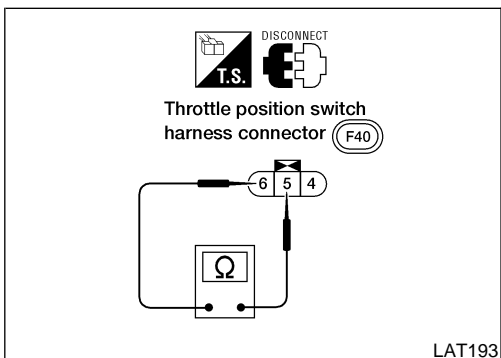

Throttle Position Switch

NIAT0126S0303

Closed throttle position switch (idle position)

- Check continuity between terminals 5 and 6. Refer to "Preparation", "TCM Self-diagnostic Procedure (No Tools)", AT-49.

Accelerator pedal condition	Continuity
Released	Yes
Depressed	No


- To adjust closed throttle position switch, refer to **EC-461**

GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

TROUBLE DIAGNOSES FOR SYMPTOMS

21. TCM Self-diagnosis Does Not Activate (PNP, Overdrive Control and Throttle Position Switches Circuit Checks) (Cont'd)

[QG18DE (except Calif. CA Model)], **EC-1114**[QG18DE (Calif. CA Model)], **EC-1773**(SR20DE), "DTCP0510CLOSEDTHROTTLE POSITION SWITCH".

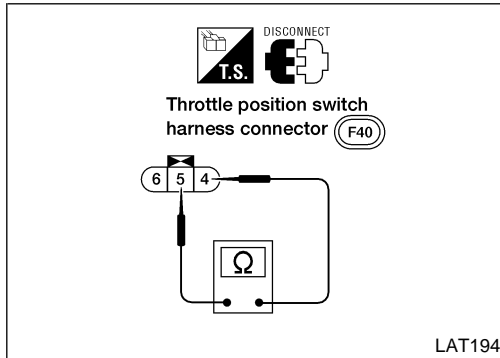

Wide Open Throttle Position Switch

- Check continuity between terminals 4 and 5.

Accelerator pedal condition	Continuity
Released	No
Depressed	Yes

A/T SHIFT LOCK SYSTEM

Description


Description

NIAT0127

- The mechanical key interlock mechanism also operates as a shift lock:
With the key switch turned to ON, the selector lever cannot be shifted from "P" (parking) to any other position unless the brake pedal is depressed.
With the key removed, the selector lever cannot be shifted from "P" to any other position.
The key cannot be removed unless the selector lever is placed in "P".
- The shift lock and key interlock mechanisms are controlled by the ON-OFF operation of the shift lock solenoid and by the operation of the rotator and slider located inside the key cylinder.

Shift Lock System Electrical Parts Location

NIAT0128

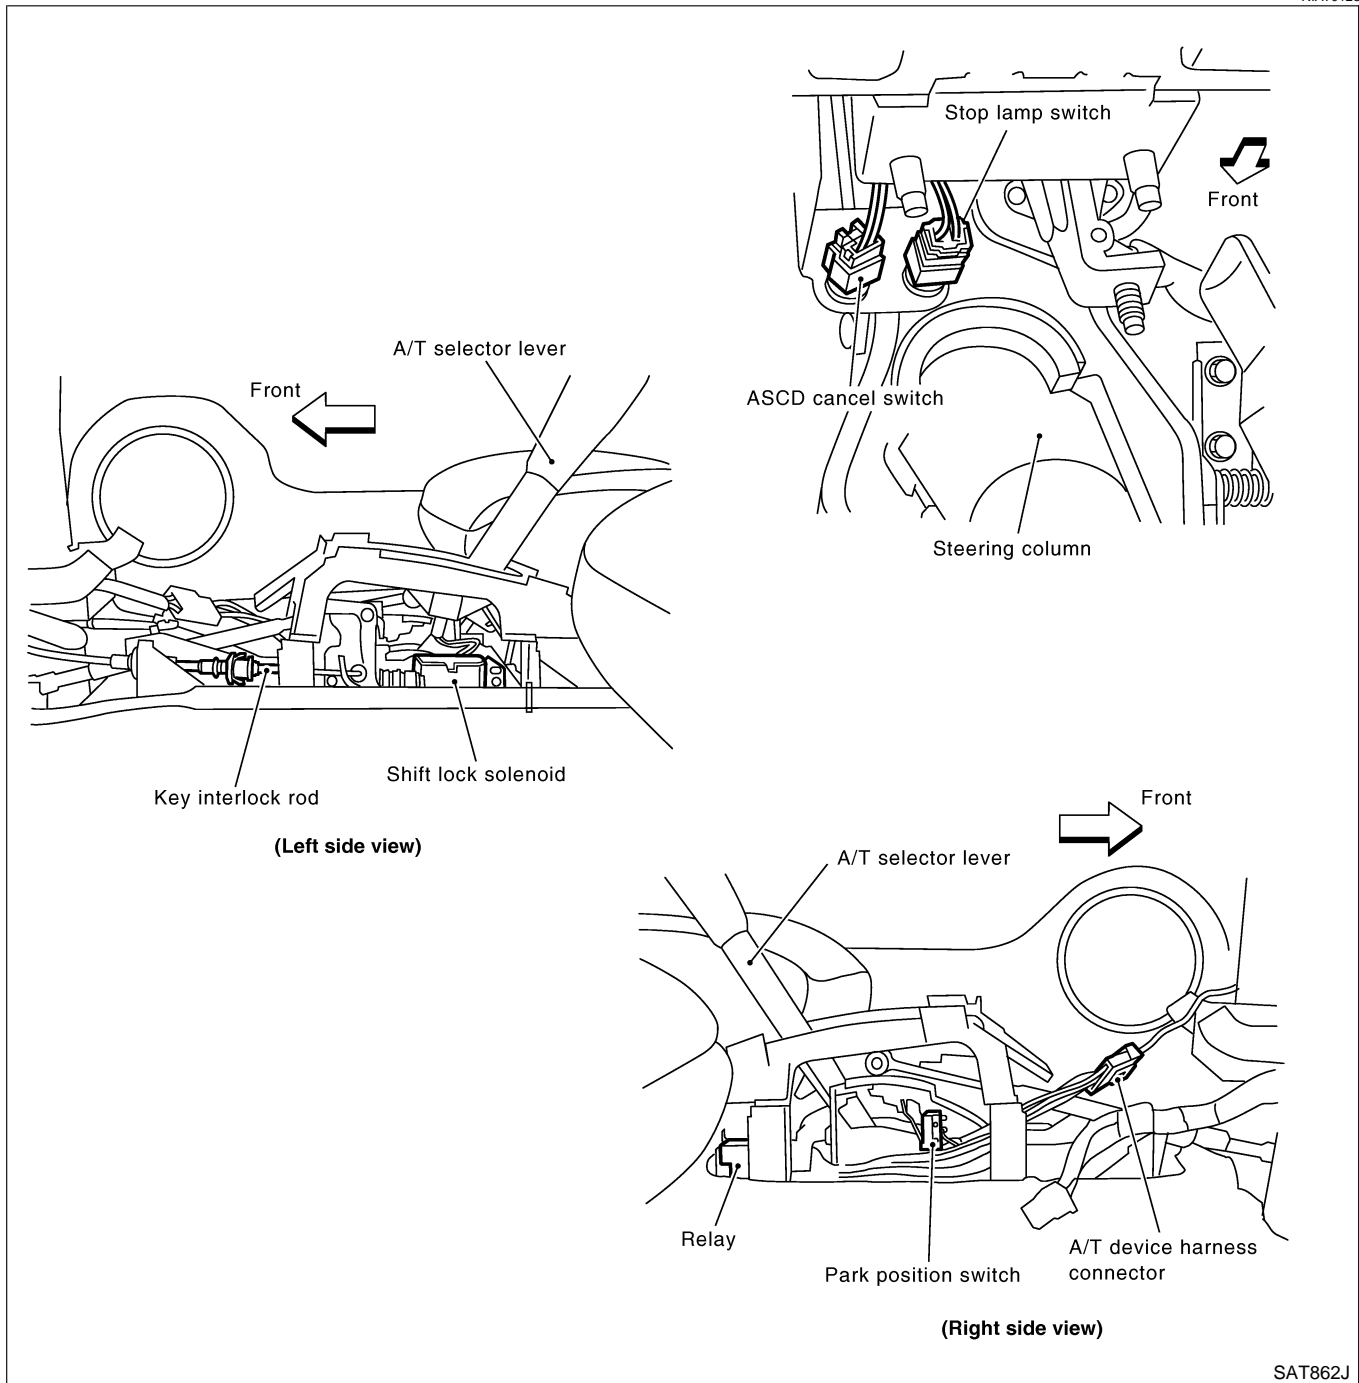

SAT862J

GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX



A/T SHIFT LOCK SYSTEM

Wiring Diagram — SHIFT —

Wiring Diagram — SHIFT —

NIAT0129

AT-SHIFT-01

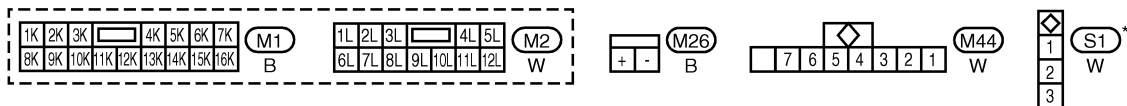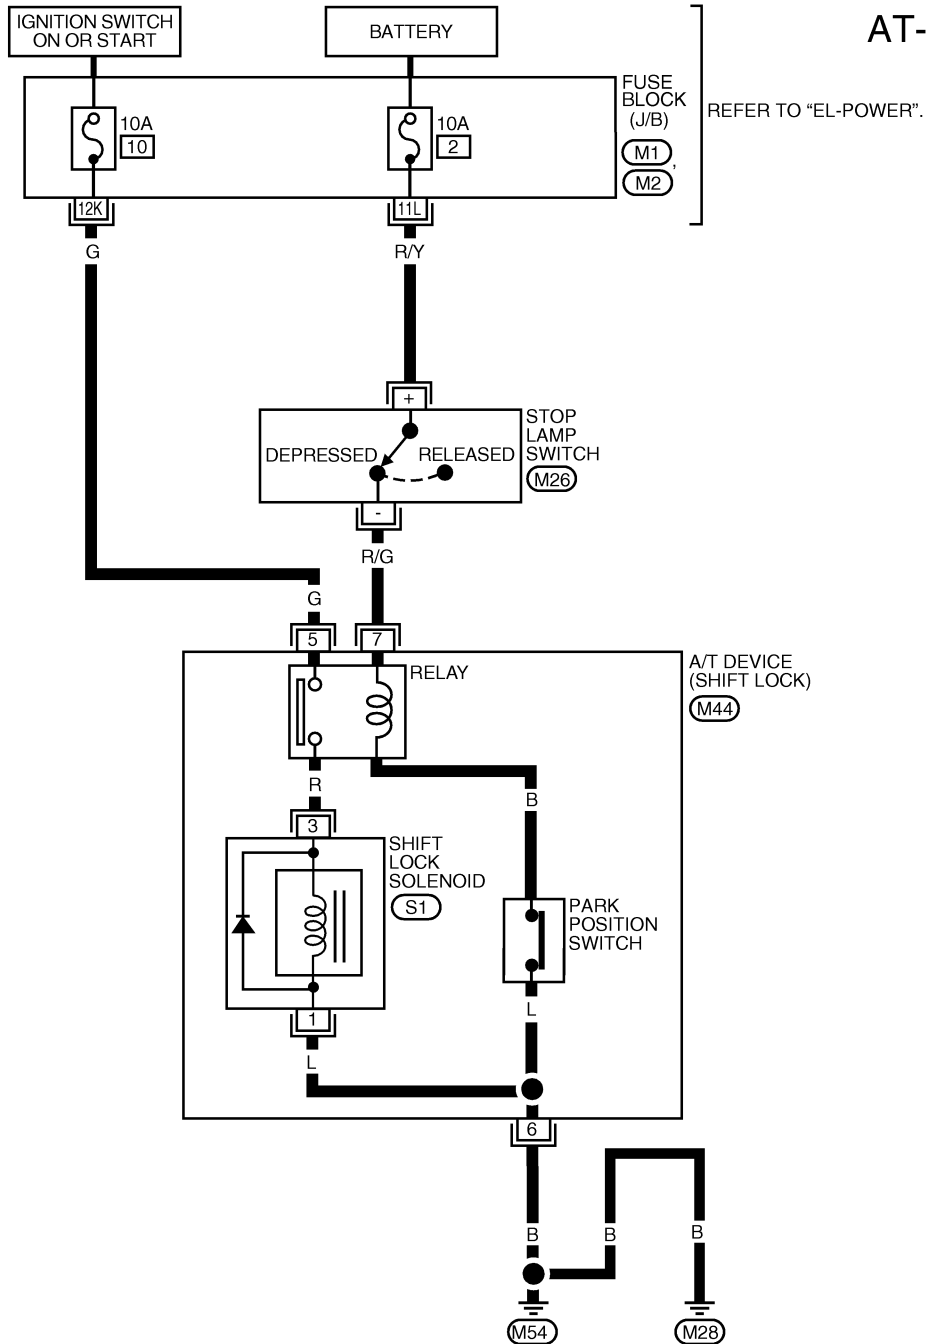

*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF EL SECTION.

A/T SHIFT LOCK SYSTEM

Diagnostic Procedure

Diagnostic Procedure

NIAT0130

SYMPTOM 1:


- Selector lever cannot be moved from “P” position with key in ON position and brake pedal applied.
- Selector lever can be moved from “P” position with key in ON position and brake pedal released.
- Selector lever can be moved from “P” position when key is removed from key cylinder.

SYMPTOM 2:

Ignition key cannot be removed when selector lever is set to “P” position. It can be removed when selector lever is set to any position except “P”.


1	CHECK KEY INTERLOCK CABLE
Check key interlock cable for damage.	
OK or NG	
OK	▶ GO TO 2.
NG	▶ Repair key interlock cable. Refer to “Components”, AT-269.


2	CHECK SELECTOR LEVER POSITION
Check selector lever position for damage.	
OK or NG	
OK	▶ GO TO 3.
NG	▶ Check selector lever. Refer to “Control Cable Adjustment”, AT-272.

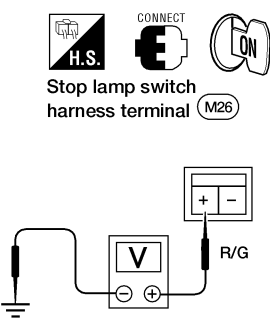3	CHECK POWER SOURCE
<p>1. Turn ignition switch to “ON” position. (Do not start engine.)</p> <p>2. Check voltage between stop lamp switch harness terminal + and ground.</p>	
 <p>Stop lamp switch harness terminal (M26)</p> <p>Voltage: Battery voltage</p>	
LAT228	
OK or NG	
OK	▶ GO TO 4.
NG	▶ Check the following items: <ol style="list-style-type: none"> 1. Harness for short or open between battery and stop lamp switch harness terminal + 2. 10A fuse No. 2 [located in the fuse block (J/B)] 3. Ignition switch (Refer to EL-9, “POWER SUPPLY ROUTING”).

A/T SHIFT LOCK SYSTEM


Diagnostic Procedure (Cont'd)

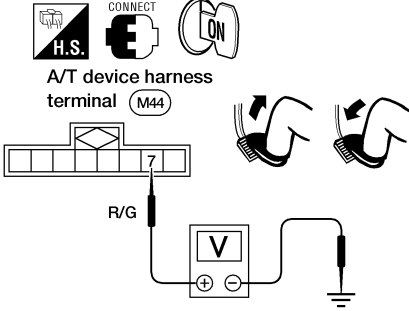4	CHECK INPUT SIGNAL (A/T DEVICE)	
<p>Turn ignition switch to "ON" position. (Do not start engine.)</p> <ul style="list-style-type: none"> Check voltage between A/T device harness terminal 7 and ground. 		
<div style="display: flex; justify-content: space-between; align-items: flex-start;"> <div style="text-align: center;">  <p>A/T device harness terminal (M44)</p> </div> <div style="text-align: right;"> <p>Voltage: Brake pedal depressed: 0V Brake pedal released: Battery voltage</p> </div> </div>		
LAT229		
OK or NG		
OK	▶	GO TO 5.
NG	▶	<p>Check the following items:</p> <ol style="list-style-type: none"> Harness for short and open between battery and stop lamp switch harness connector 1. Harness for short or open between stop lamp switch harness connector 2 and A/T device harness connector 7. Fuse Stop lamp switch (Refer to "Component Check", AT-268.)

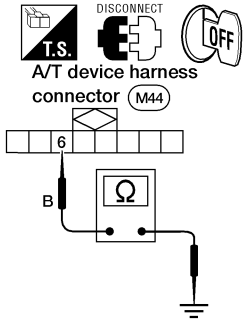5	CHECK GROUND CIRCUIT	
<ol style="list-style-type: none"> Turn ignition switch to "OFF" position. Disconnect A/T device harness connector. Check continuity between A/T device harness terminal 6 and ground. If OK, check harness for short to ground and short to power. 		
<div style="display: flex; justify-content: space-between; align-items: flex-start;"> <div style="text-align: center;">  <p>A/T device harness connector (M44)</p> </div> <div style="text-align: right;"> <p>Continuity should exist.</p> </div> </div>		
LAT230		
OK or NG		
OK	▶	GO TO 6.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

A/T SHIFT LOCK SYSTEM

Diagnostic Procedure (Cont'd)

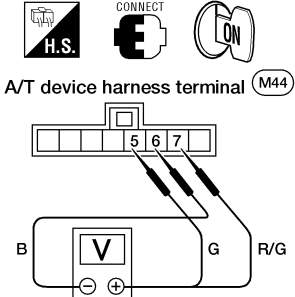6	CHECK RELAY CIRCUIT											
<p>1. Turn ignition switch to ON.</p> <ul style="list-style-type: none"> Check voltage between terminal 7 - 6 and 5 - 6. 												
												
<table border="1" style="margin: auto;"> <thead> <tr> <th>Condition</th> <th>Ignition switch</th> <th>Terminal No.</th> <th>Voltage</th> </tr> </thead> <tbody> <tr> <td rowspan="2">When selector lever is set in "P" position and depressed brake pedal.</td> <td rowspan="2">ON</td> <td>7 - 6</td> <td>Battery voltage</td> </tr> <tr> <td>5 - 6</td> <td>Battery voltage</td> </tr> </tbody> </table>			Condition	Ignition switch	Terminal No.	Voltage	When selector lever is set in "P" position and depressed brake pedal.	ON	7 - 6	Battery voltage	5 - 6	Battery voltage
Condition	Ignition switch	Terminal No.	Voltage									
When selector lever is set in "P" position and depressed brake pedal.	ON	7 - 6	Battery voltage									
		5 - 6	Battery voltage									
LAT231												
OK or NG												
OK	▶	GO TO 7.										
NG	▶	Replace A/T device.										

7	CHECK PARK POSITION SWITCH	
Refer to "A/T DEVICE CHECK", AT-268.		
OK or NG		
OK	▶	GO TO 8.
NG	▶	Replace A/T device.

8	CHECK SHIFT LOCK SOLENOID	
Refer to "A/T DEVICE CHECK", AT-268.		
OK or NG		
OK	▶	GO TO 9.
NG	▶	Replace A/T device.

9	SHIFT LOCK OPERATION	
<p>1. Reconnect shift lock harness connector.</p> <p>2. Turn ignition switch from "OFF" to "ON" position. (Do not start engine.)</p> <p>3. Recheck shift lock operation.</p>		
OK or NG		
OK	▶	INSPECTION END
NG	▶	<p>1. Perform A/T device input/output signal inspection test.</p> <p>2. If NG, recheck harness connector connection.</p>

GI
 MA
 EM
 LC
 EC
 FE
 CL
 MT
 AT
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

A/T SHIFT LOCK SYSTEM

Diagnostic Procedure (Cont'd)

A/T DEVICE CHECK


—NIAT0130S01

1. Shift Lock Solenoid

NIAT0130S0101

- Check operation sound.
When ignition switch is turned to “ON” position and selector lever is set in “P” position.

Brake pedal	Operation sound
Depressed	No
Released	Yes

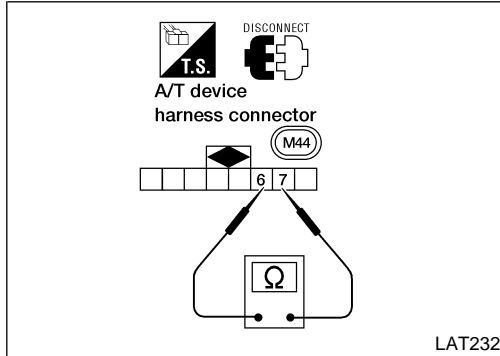


2. Park Position Switch

NIAT0130S0102

- Check resistance between A/T device harness terminal 6 and 7.

Condition	Resistance
When selector lever is set in “P” position and selector lever button is released	111Ω
Except above	0Ω

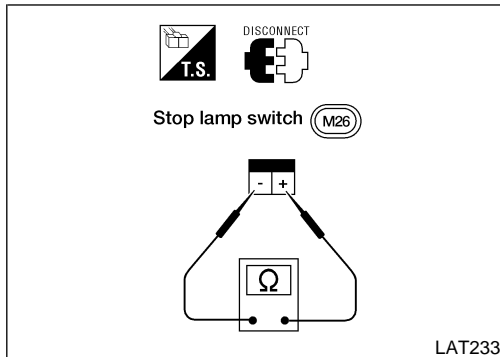

STOP LAMP SWITCH

NIAT0130S02

- Check continuity between terminals + and –.

Condition	Continuity
When brake pedal is depressed	No
When brake pedal is released	Yes


Check stop lamp switch after adjusting brake pedal — refer to BR-12, “BRAKE PEDAL AND BRACKET” .

KEY INTERLOCK CABLE

Components

Components


NIAT0131

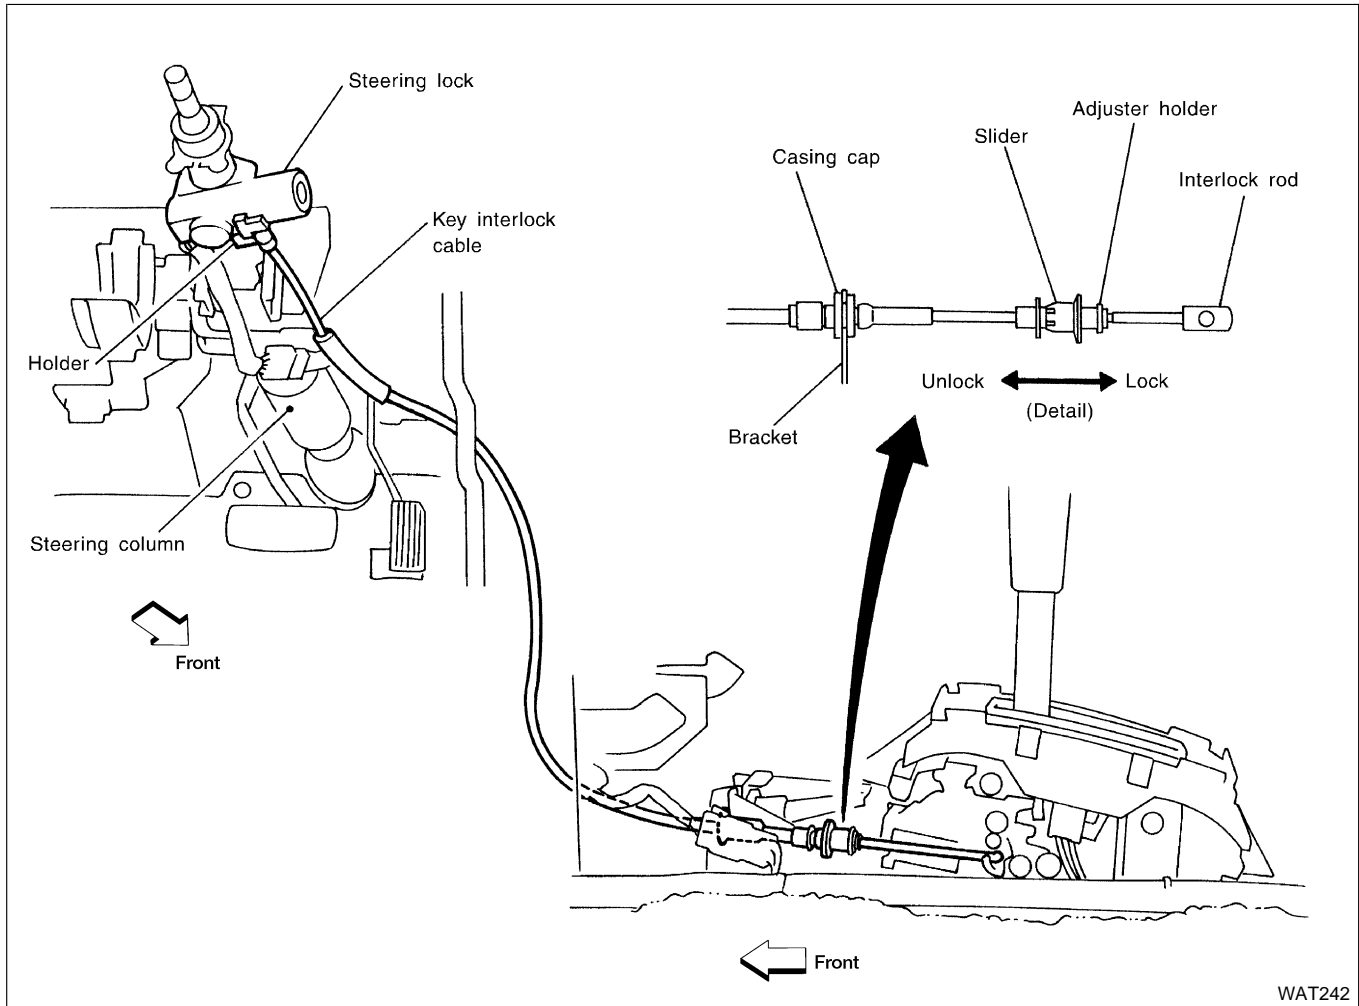

WAT242

CAUTION:

- Install key interlock cable in such a way that it will not be damaged by sharp bends, twists or interference with adjacent parts.
- After installing key interlock cable to control device, make sure that casing cap and bracket are firmly secured in their positions.

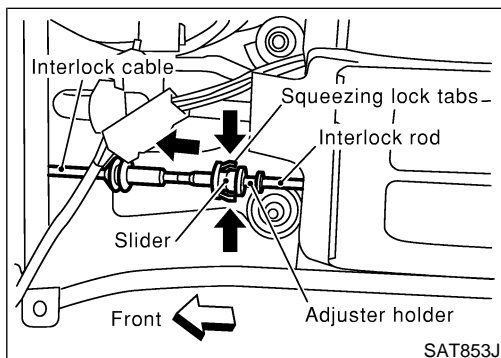

SAT853J

Removal


NIAT0132

1. Unlock slider by squeezing lock tabs on slider from adjuster holder and remove interlock rod from cable.


GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

KEY INTERLOCK CABLE

Removal (Cont'd)

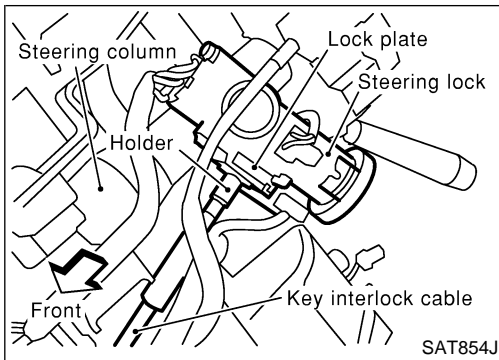


2. Remove lock plate from steering lock assembly and remove key interlock cable.

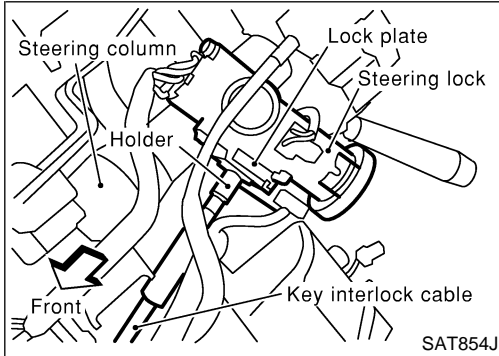


Installation

NIAT0133

1. Turn ignition key to lock position.
2. Set A/T selector lever to P position.
3. Set key interlock cable to steering lock assembly and install lock plate.
4. Clamp cable to steering column and attach to control cable with band.

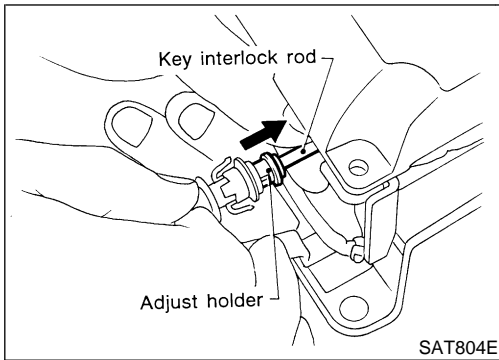





5. Insert interlock rod into adjuster holder.

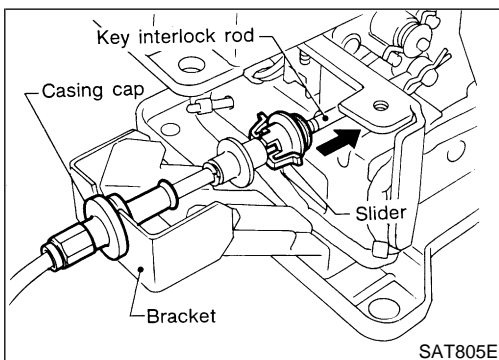

6. Install casing cap to bracket.
7. Move slider in order to connect adjuster holder to interlock rod.

ON-VEHICLE SERVICE

Control Valve Assembly and Accumulators

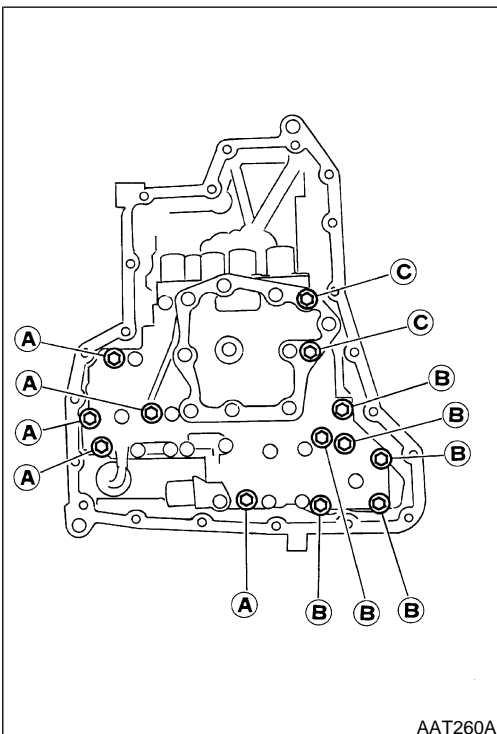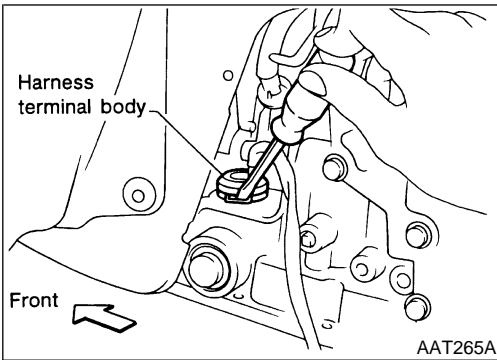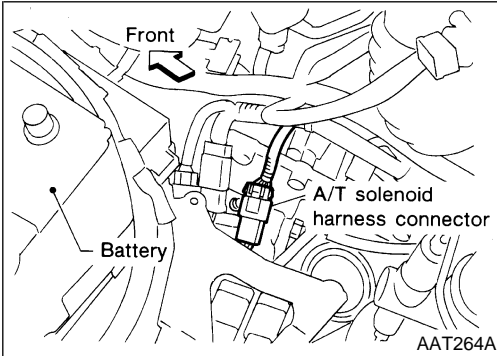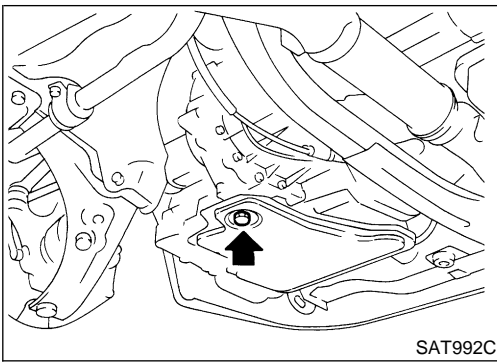

Control Valve Assembly and Accumulators REMOVAL

NIAT0235

NIAT0235S01

1. Drain ATF from transaxle.
2. Remove oil pan and gasket.
 - **Always replace oil pan bolts as they are self-sealing bolts.**

3. Disconnect A/T solenoid valve harness connector.

4. Remove stopper ring from A/T solenoid harness terminal body.
5. Remove A/T solenoid harness by pushing terminal body into transmission case.

6. Remove control valve assembly by removing fixing bolts.

Bolt length, number and location:

Bolt symbol	A	B	C
Bolt length "ℓ" ℓ	40.0 mm (1.575 in)	33.0 mm (1.299 in)	43.5 mm (1.713 in)
Number of bolts	5	6	2

- **Be careful not to drop manual valve and servo release accumulator return springs.**

7. Disassemble and inspect control valve assembly if necessary. Refer to "COMPONENTS", AT-303.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA


SC

EL


IDX

ON-VEHICLE SERVICE

Control Valve Assembly and Accumulators (Cont'd)

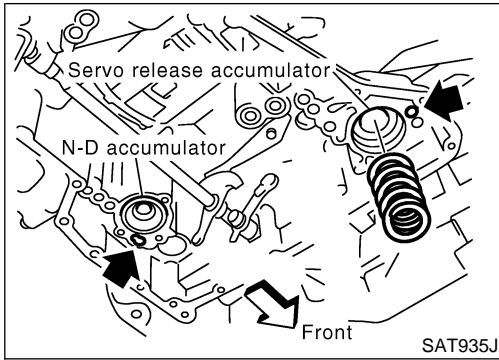


8. Remove servo release and N-D accumulators by applying compressed air if necessary.
- **Hold each piston with a clean, lint-free towel.**

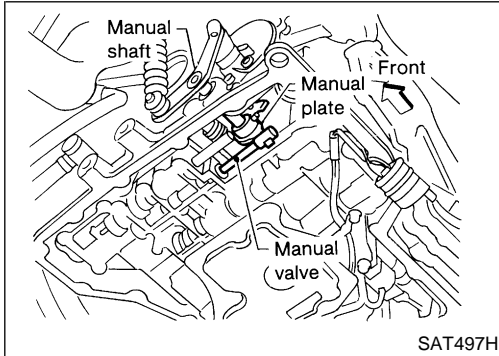

INSTALLATION

NIAT0235S02

- **Tighten fixing bolts to specification.**
🔧 : 7 - 9 N·m (0.7 - 0.9 kg·m, 61 - 78 in-lb)
- **Set manual shaft in Neutral position, then align manual plate with groove in manual valve.**
- **After installing control valve assembly to transmission case, make sure that selector lever can be moved to all positions.**

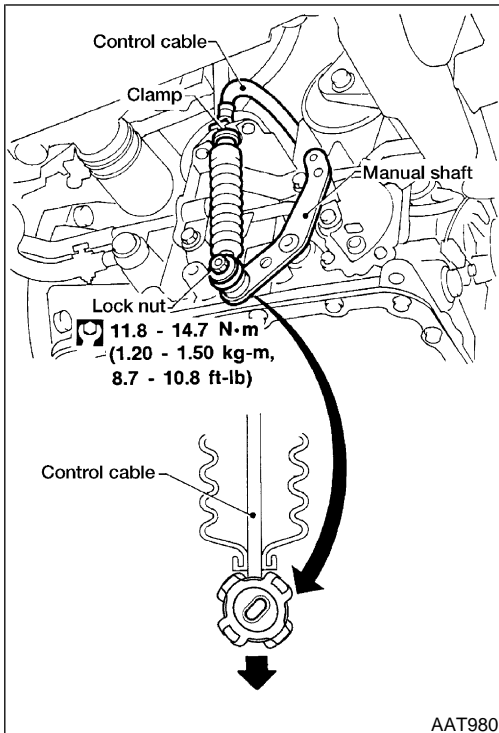


Control Cable Adjustment

NIAT0236

Move selector lever from the "P" position to the "1" position. You should be able to feel the detents in each position. If the detents cannot be felt or if the pointer indicating the position is improperly aligned, the control cable needs adjustment.

1. Place selector lever in "P" position.
2. Loosen control cable lock nut and place manual shaft in "P" position.
3. Push control cable, by specified force, in the direction of the arrow shown in the illustration.
Specified force: 9.8 N (1.0 kg, 2.2 lb)
4. Release control cable in the opposite direction of the arrow for 1.0 mm (0.039 in).
5. Tighten control cable lock nut by hand.
6. Tighten control cable lock nut.
🔧 : 11.8 - 14.7 N·m (1.20 - 1.50 kg·m, 8.7 - 10.8 ft-lb)
7. Move selector lever from "P" to "1" position again. Make sure that selector lever moves smoothly.
8. Apply grease to contacting areas of selector lever and control cable. Install any part removed.

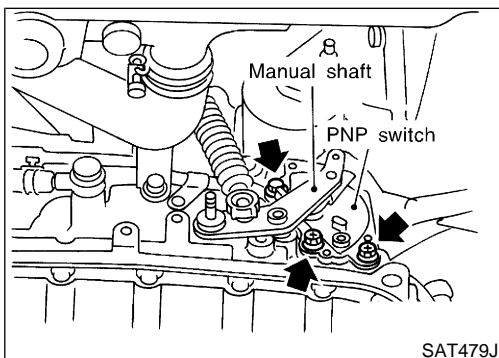


Park/Neutral Position (PNP) Switch Adjustment

NIAT0237

1. Remove control cable end from manual shaft.
2. Set manual shaft in "N" position.
3. Loosen PNP switch fixing bolts.


ON-VEHICLE SERVICE

Park/Neutral Position (PNP) Switch Adjustment (Cont'd)

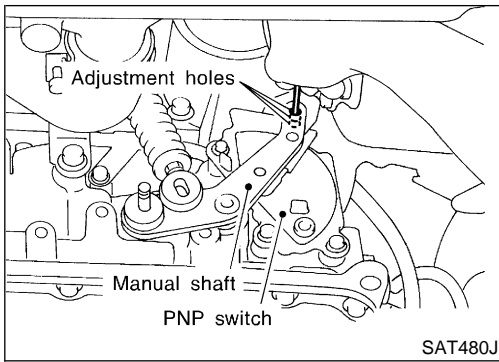

4. Use a 4 mm (0.157 in) pin for this adjustment.
 - a. Insert the pin straight into the manual shaft adjustment hole.
 - b. Rotate PNP switch until the pin can also be inserted straight into hole in PNP switch.
5. Tighten PNP switch fixing bolts.
6. Remove pin from adjustment hole after adjusting PNP switch.
7. Reinstall any part removed.
8. Adjust control cable. Refer to "Control Cable Adjustment", AT-272.
9. Check continuity of PNP switch. Refer to "Component Inspection", AT-114.


GI
MA
EM
LC

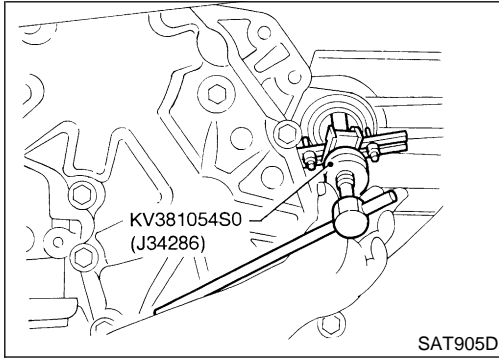

Differential Side Oil Seal Replacement


1. Remove drive shaft assemblies using Tool. Refer to ^{NIAT0238} **AX-10**, "DRIVE SHAFT".
2. Remove oil seals.

EC
FE
CL
MT

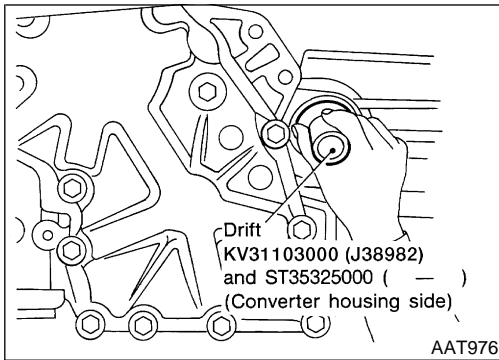

3. Install oil seals using Tool.
 - **Apply ATF to oil seal surface before installing.**

AT
AX
SU
BR

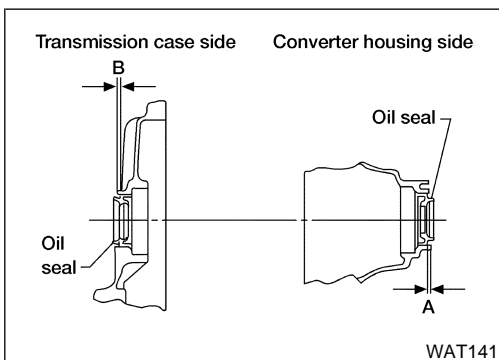


- **Install oil seals so that dimensions "A" and "B" are within specifications.**

Unit: mm (in)

A	B
5.5 - 6.5 (0.217 - 0.256)	-0.5 to 0.5 (-0.020 to 0.020)

ST
RS
BT
HA

4. Reinstall any part removed.

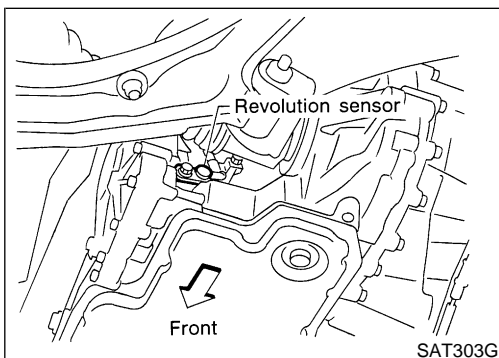

Revolution Sensor Replacement

1. Disconnect revolution sensor harness connector.
2. Remove harness bracket from A/T.
3. Remove revolution sensor from A/T.
4. Reinstall any part removed.





Always use new sealing parts.

NIAT0239

SC
EL
IDX

REMOVAL AND INSTALLATION

Removal

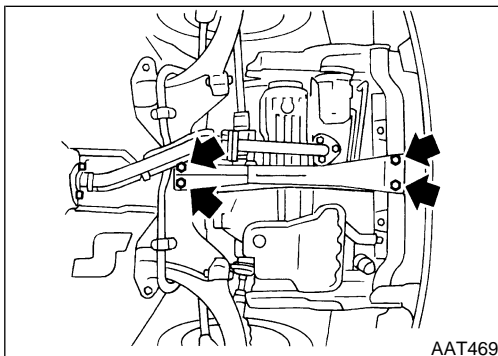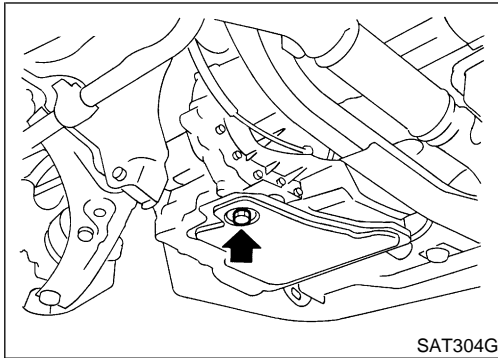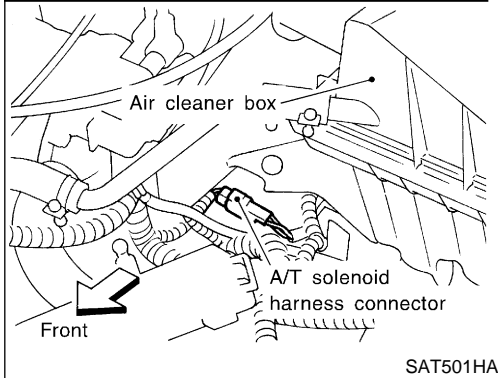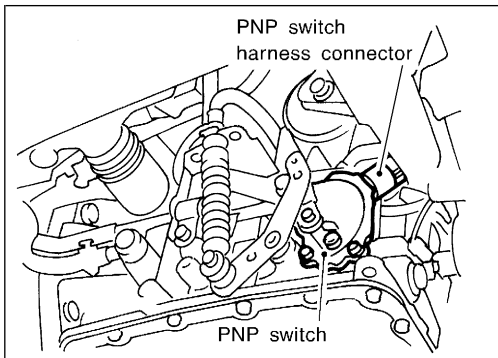

Removal

NIAT0240

CAUTION:

Before separating transaxle from engine, remove the crankshaft position sensor (OBD) from transaxle. Be careful not to damage sensor.


1. Remove battery and bracket.
2. Remove air duct between throttle body and air cleaner.
3. Disconnect terminal cord assembly, PNP switch harness connector and revolution sensor harness connector.
4. Remove crankshaft position sensor (OBD) from transaxle (SR20DE).

5. Drain ATF from transaxle.
6. Disconnect control cable from transaxle.
7. Disconnect oil cooler hoses.
8. Remove drive shafts. Refer to **AX-10**, "DRIVE SHAFT".
9. Remove the intake manifold support bracket. Refer to **EM-12** (QG18DE), **EM-84** (SR20DE), "OUTER COMPONENT PARTS".
10. Remove starter motor from transaxle.
Tighten bolts to specified torque.
⚙️ : 33.3 - 46.1 N·m (3.4 - 4.7 kg·m, 25 - 34 ft·lb)
11. Remove upper bolts fixing transaxle to engine.
12. Support transaxle with a jack.

13. Remove center member.
 - Tighten center member fixing bolts to specified torque, Refer to **EM-49** (QG18DE), **EM-127** (SR20DE), "Removal and Installation".


REMOVAL AND INSTALLATION

Removal (Cont'd)

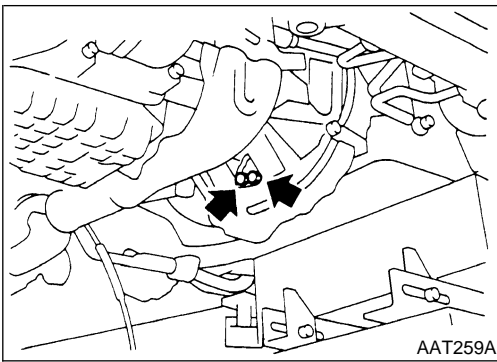

14. Remove rear plate cover.
15. Remove torque converter bolts.
Rotate crankshaft to gain access to securing bolts.
16. Remove rear transaxle to engine bracket. Refer to **EM-49** (QG18DE), **EM-127** (SR20DE), "Removal and Installation".
17. Support engine with a jack.
18. Remove rear transaxle mount. Refer to **EM-49** (QG18DE), **EM-127** (SR20DE), "Removal and Installation".
19. Remove lower bolts fixing transaxle to engine.
20. Lower transaxle while supporting it with a jack.

GI
MA
EM
LC

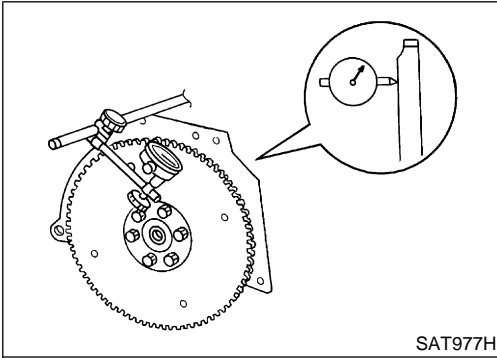

Installation

NIAT0241

1. Check drive plate runout.

CAUTION:


Do not allow any magnetic materials to contact the ring gear teeth.

Maximum allowable runout:

Refer to **EM-76** (QG18DE), **EM-153** (SR20DE), "FLYWHEEL/DRIVE PLATE RUNOUT".

- If this runout is out of allowance, replace drive plate with ring gear.

EC
FE

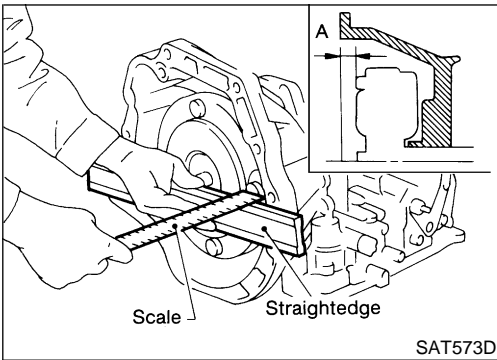

2. When connecting torque converter to transaxle, measure distance "A" to be certain that they are correctly assembled.


Distance "A":

QG18DE: 21.1 mm (0.831 in)

SR20DE: 15.9 mm (0.626 in) or more

AT

AX

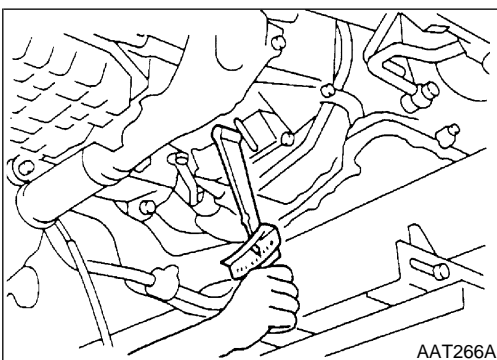

3. Install torque converter to drive plate.

- **With converter installed, rotate crankshaft several turns to check that transaxle rotates freely without binding.**

SU


BR

ST

RS

BT

HA

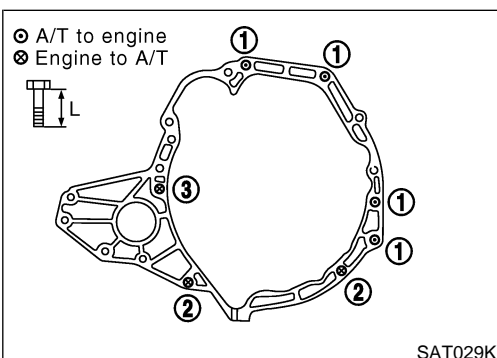

4. Tighten bolts fixing transaxle.

QG18DE Model

Bolt No.	Tightening torque N·m (kg·m, ft·lb)	Bolt length "ℓ" mm (in)
1	30 - 40 (3.1 - 4.1, 23 - 29)	50 (1.97)
2	16 - 20 (1.6 - 2.1, 12 - 15)	25 (0.98)
3	31 - 40 (3.1 - 4.1, 23 - 29)	30 (1.18)



SC

EL

IDX

REMOVAL AND INSTALLATION

Installation (Cont'd)

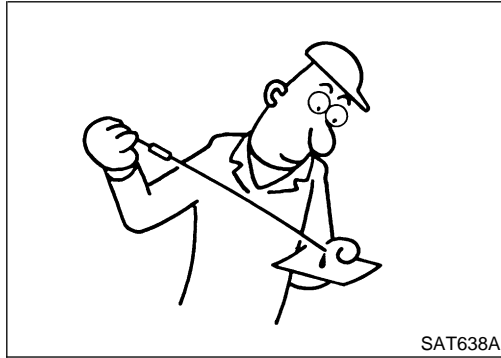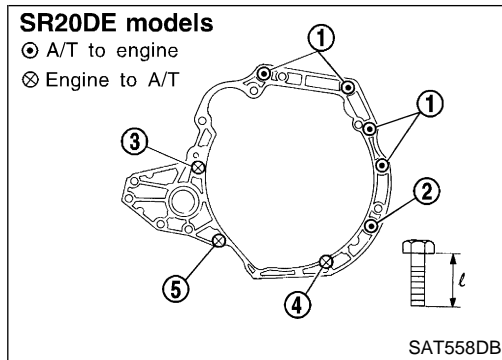

SR20DE Model

Bolt No.	Tightening torque N·m (kg·m, ft·lb)	Bolt length "ℓ" mm (in)
1	70 - 79 (7.1 - 8.1, 51 - 59)	55 (2.17)
2	70 - 79 (7.1 - 8.1, 51 - 59)	50 (1.97)
3	70 - 79 (7.1 - 8.1, 51 - 59)	65 (2.56)
4	16 - 21 (1.6 - 2.1, 12 - 15)	35 (1.38)
5	16 - 21 (1.6 - 2.1, 12 - 15)	45 (1.77)

5. Reinstall any part removed.
6. Adjust control cable. Refer to "Control Cable Adjustment", AT-272.
7. Check continuity of PNP switch. Refer to "PARK NEUTRAL POSITION SWITCH", AT-114.
8. Refill transaxle with ATF and check fluid level.
9. Move selector lever through all positions to be sure that transaxle operates correctly. With parking brake applied, idle engine. Move selector lever through "N" to "D", to "2", to "1" and "R" positions. A slight shock should be felt through the hand gripping the selector each time the transaxle is shifted.
10. Perform road test. Refer to "Road Test", AT-67.


OVERHAUL

Components

Components

NIAT02-42

SEC. 311•313•327•381

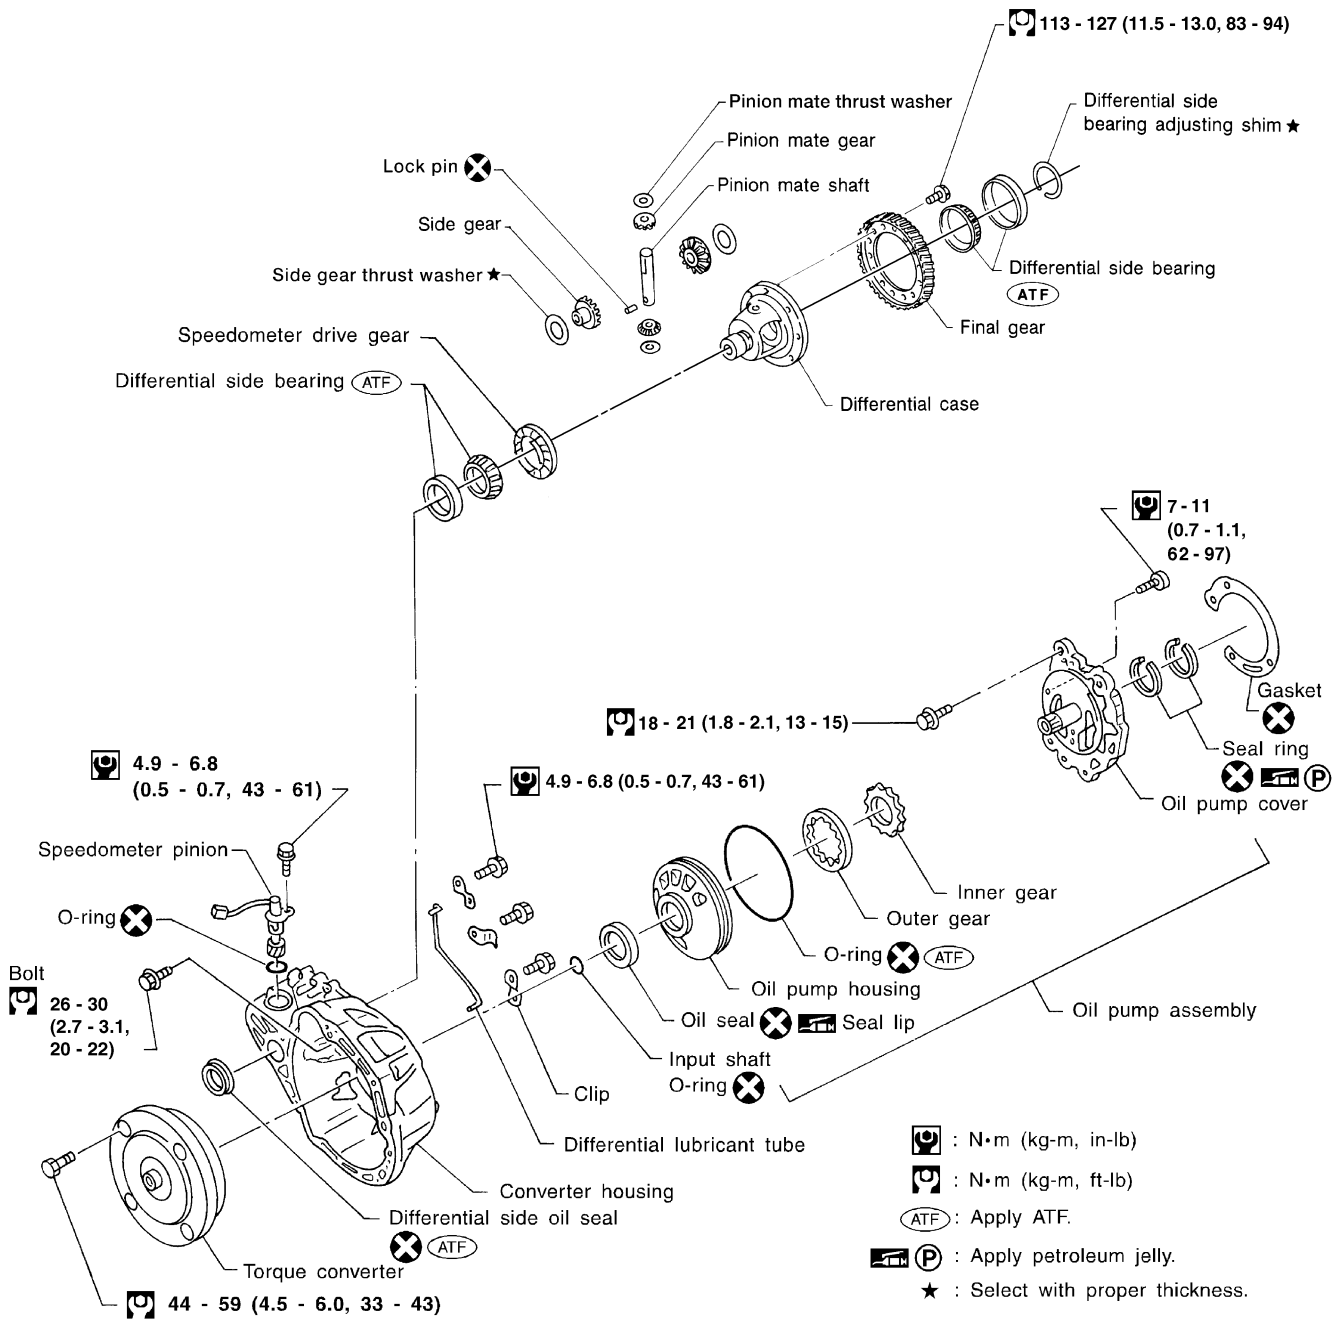


GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

WAT404

OVERHAUL

Components (Cont'd)


SEC. 315

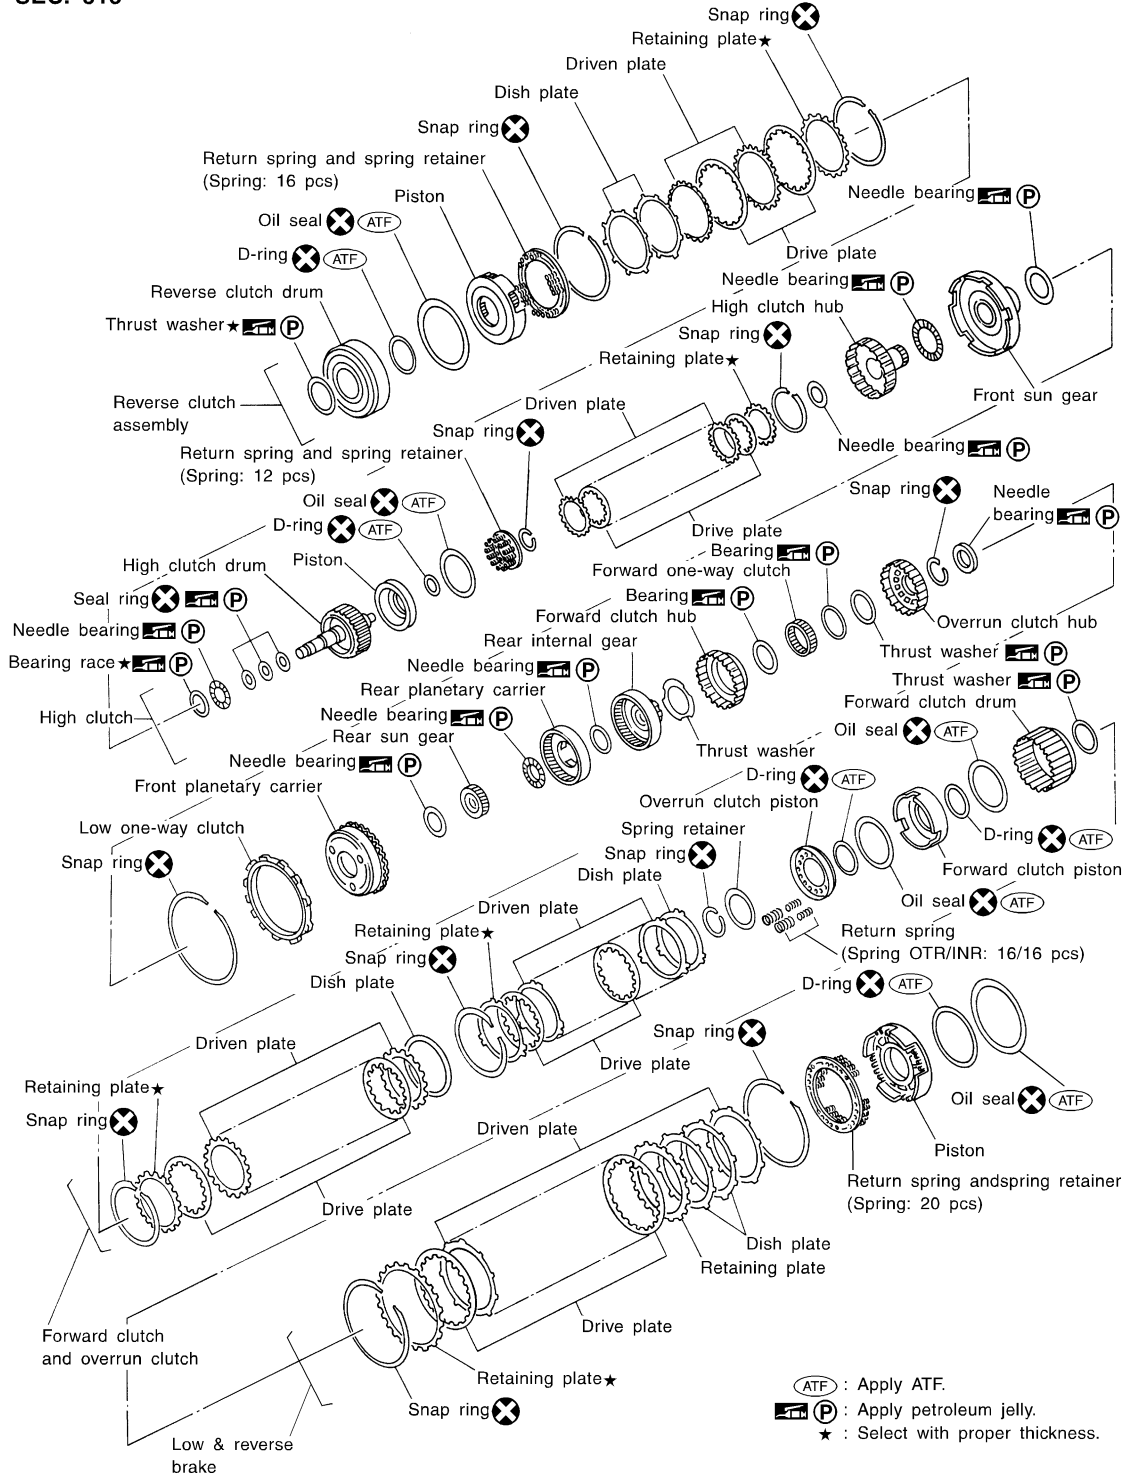

SAT936J

OVERHAUL

Oil Channel

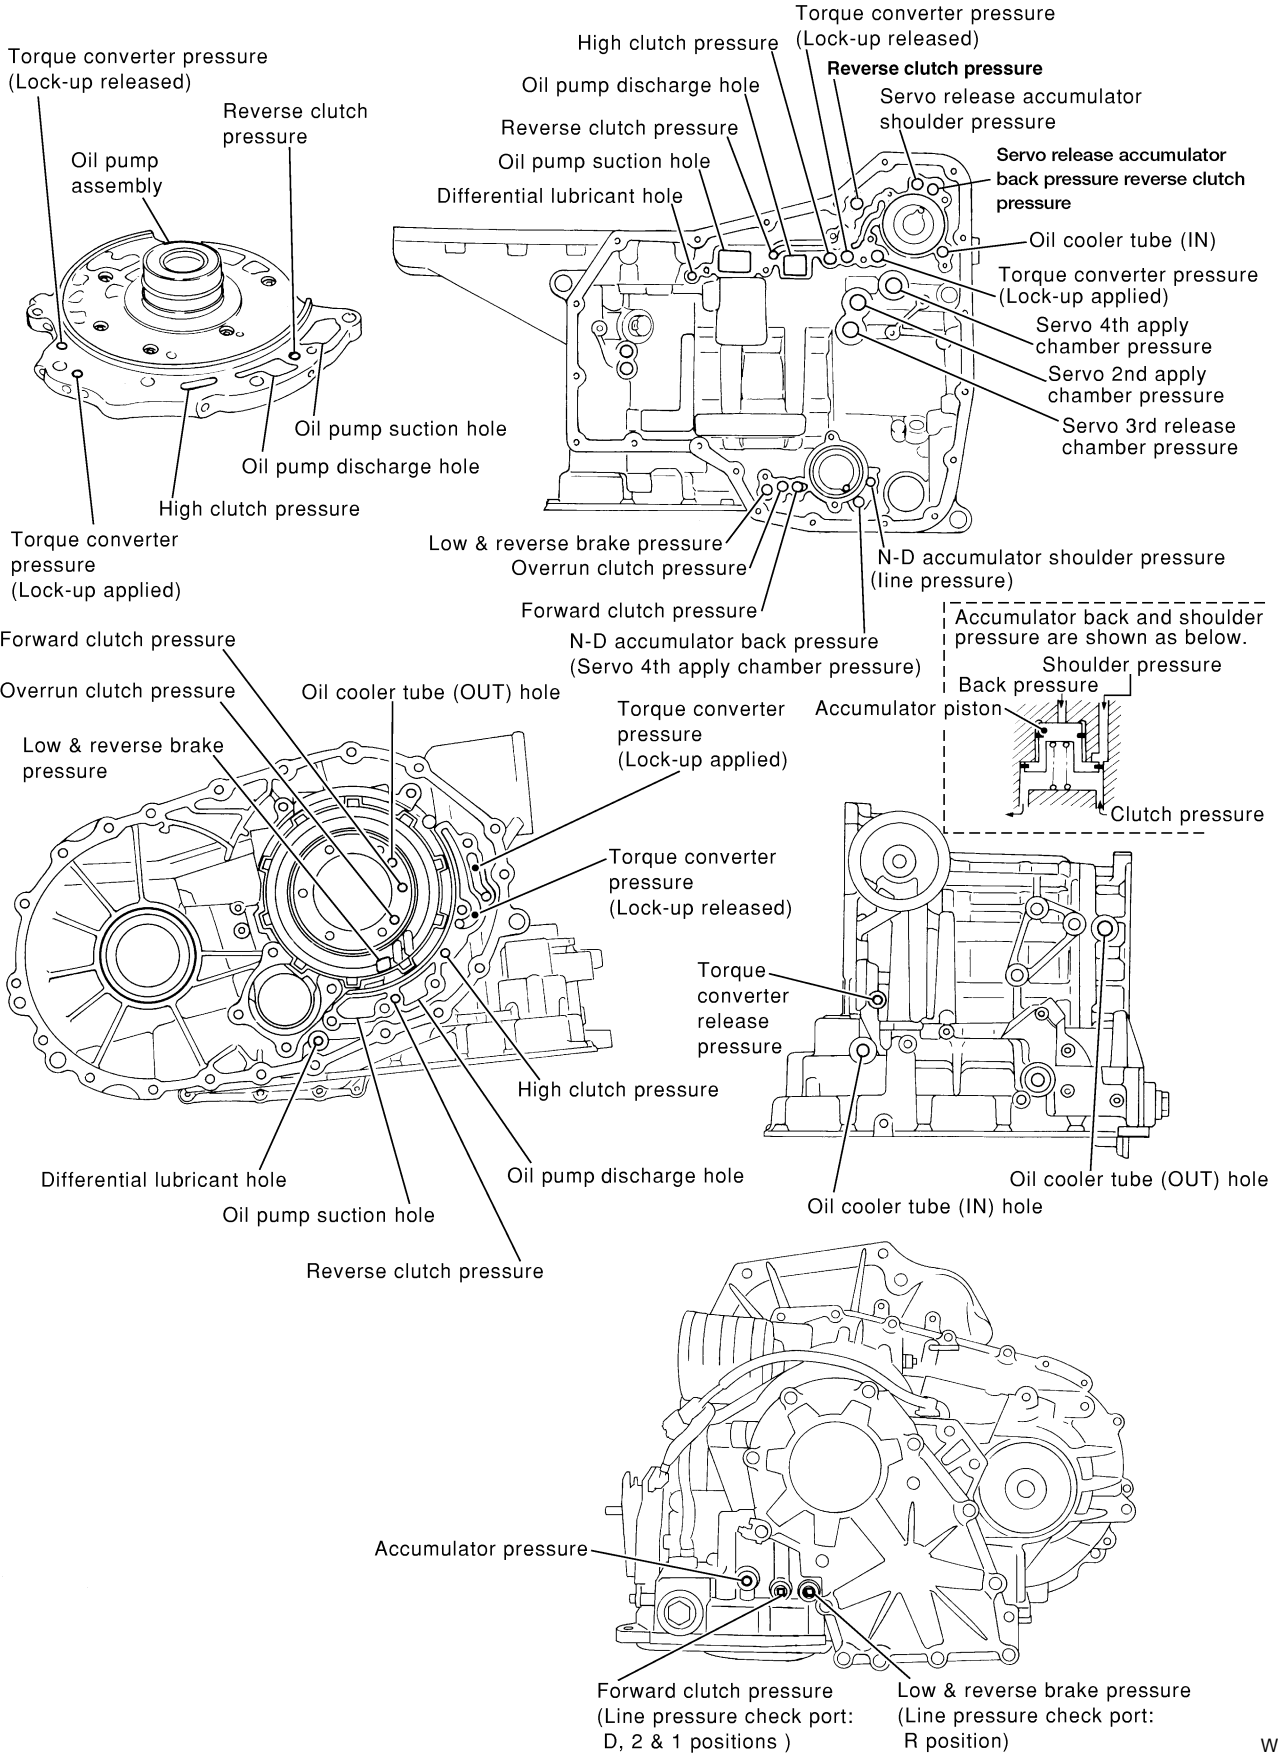

OVERHAUL

Locations of Adjusting Shims, Needle Bearings, Thrust Washers and Snap Rings

Locations of Adjusting Shims, Needle Bearings, Thrust Washers and Snap Rings


NIAT0244

Outer diameter and color of thrust washers

Item number	Outer diameter mm (in)	Color
(17)	72.0 (2.835)	Black
(18)	78.5 (3.091)	

Outer and inner diameter of needle bearings

Item number	Outer diameter mm (in)	Inner diameter mm (in)
(8)	47.0 (1.850)	32.0 (1.260)
(9)	35.0 (1.378)	20.1 (0.791)
(10)	60.0 (2.362)	42.0 (1.657)
(11)	60.0 (2.362)	45.0 (1.772)
(12)	47.0 (1.850)	30.0 (1.181)
(13)	42.6 (1.677)	26.0 (1.024)
(14)	48.0 (1.890)	33.5 (1.319)
(15)	55.0 (2.165)	40.5 (1.594)
(16)	60.0 (2.362)	40.0 (1.579)

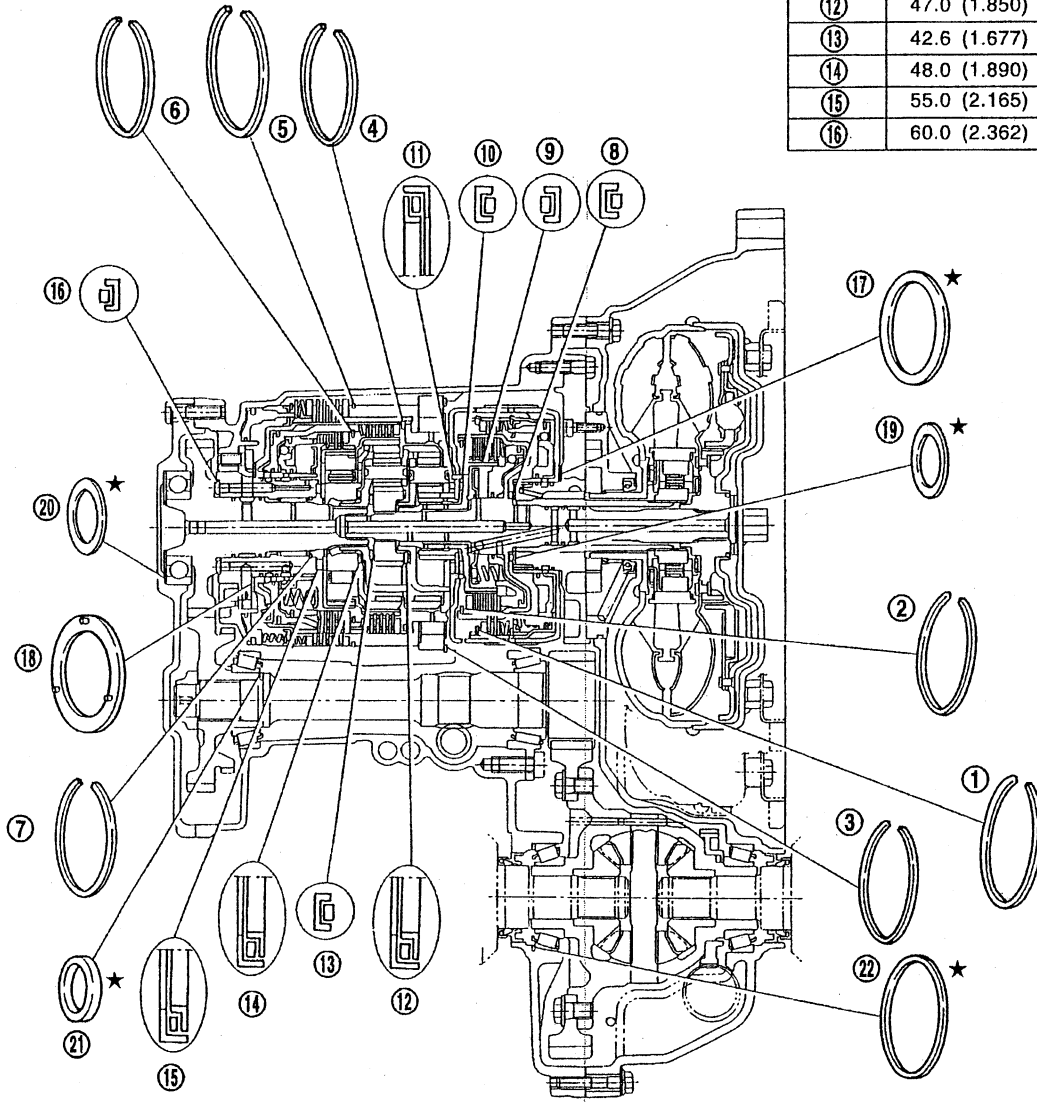

★ : Select proper thickness.

Outer and inner diameter of bearing race and adjusting shims

Item number	Outer diameter mm (in)	Inner diameter mm (in)
(19)	48.0 (1.890)	33.0 (1.299)
(20)	72.0 (2.835)	61.0 (2.402)
(21)	34.5 (1.358)	26.1 (1.028)
(22)	68.0 (2.677)	60.0 (2.362)

Outer diameter of snap rings

Item number	Outer diameter mm (in)
(1)	142.0 (5.59)
(2)	113.0 (4.45)
(3)	162.4 (6.39)
(4)	135.4 (5.33)
(5)	162.3 (6.39)
(6)	126.0 (4.96)
(7)	40.5 (1.594)

WAT246

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT


HA

SC


EL

IDX


DISASSEMBLY

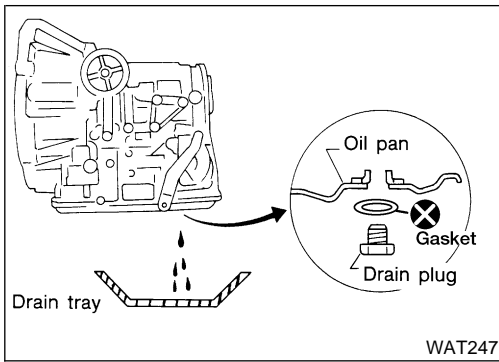

1. Drain ATF through drain plug.

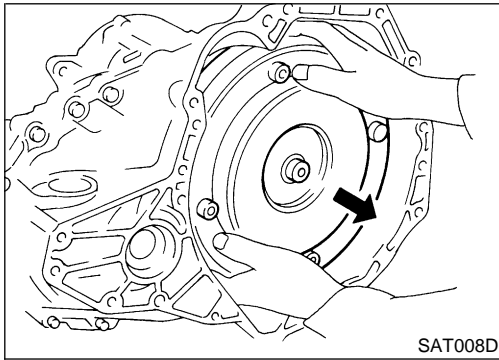


2. Remove torque converter.

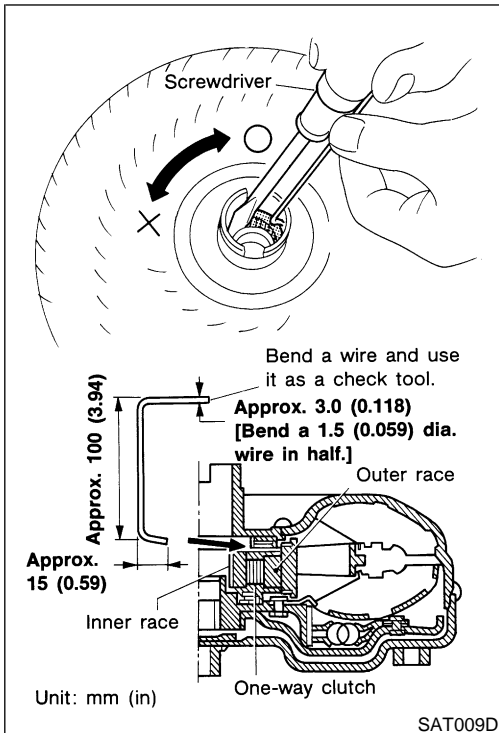



3. Check torque converter one-way clutch using check tool as shown at left.

- a. Insert check tool into the groove of bearing support built into one-way clutch outer race.
- b. While fixing bearing support with check tool, rotate one-way clutch spline using flat-bladed screwdriver.
- c. Check inner race rotates clockwise only. If not, replace torque converter assembly.

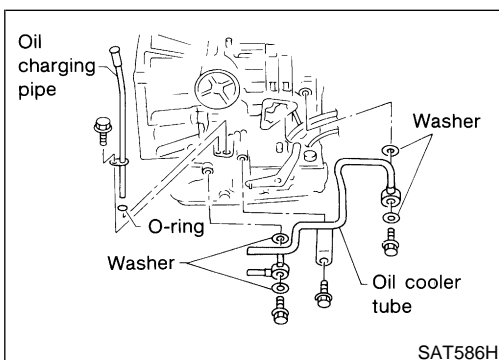


4. Remove oil charging pipe and oil cooler tube.

DISASSEMBLY

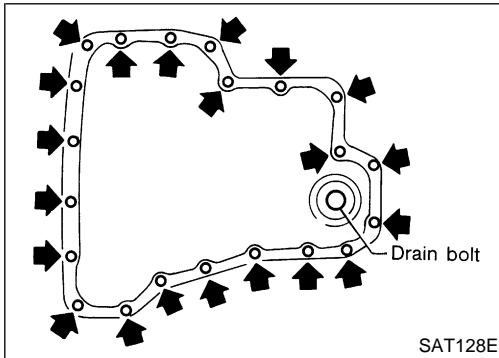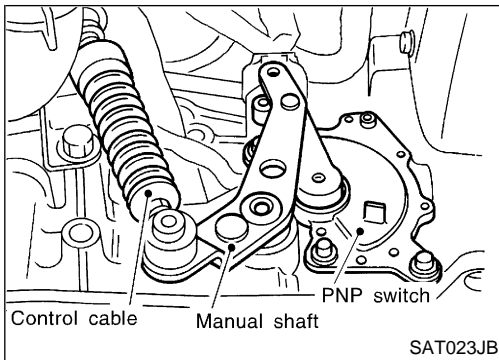

5. Set manual shaft to "P" position.
6. Remove PNP switch.


7. Remove oil pan and oil pan gasket.
 - **Always replace oil pan bolts as they are self-sealing bolts.**
8. Check foreign materials in oil pan to help determine cause of malfunction. If the fluid is very dark, smells burned, or contains foreign particles, the frictional material (clutches, band) may need replacement. A tacky film that will not wipe clean indicates varnish build up. Varnish can cause valves, servo, and clutches to stick and may inhibit pump pressure.
 - **If frictional material is detected, replace radiator after repair of A/T. Refer to LC-15 (QG18DE), LC-33 (SR20DE), "Radiator".**
9. Remove control valve assembly according to the following procedures.

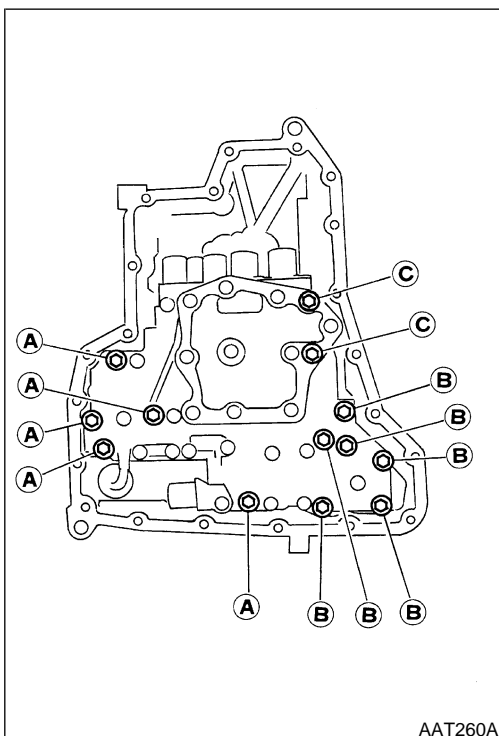


- a. Remove control valve assembly mounting bolts A, B and C.

GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


DISASSEMBLY

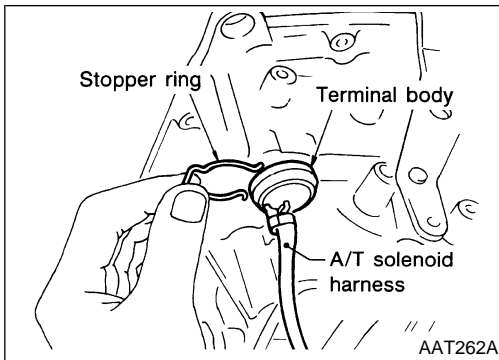


- b. Remove stopper ring from terminal body.
- c. Push terminal body into transmission case and draw out solenoid harness.

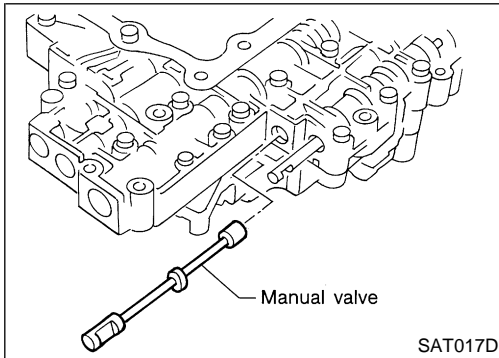


10. Remove manual valve from control valve assembly as a precaution.

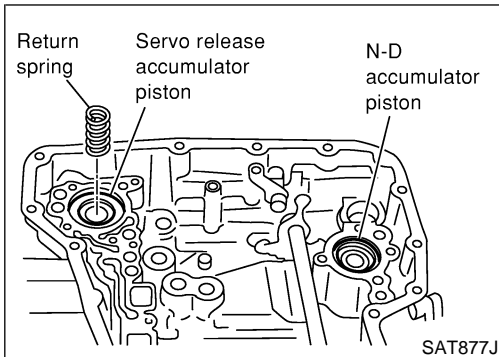

11. Remove return spring from servo release accumulator piston.

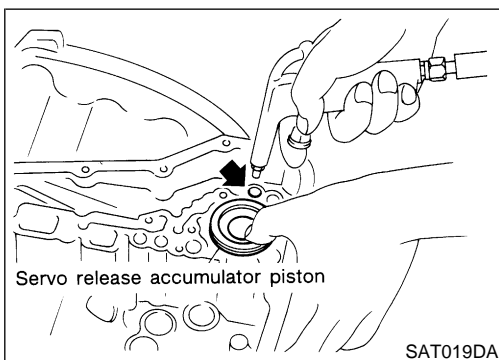


12. Remove servo release accumulator piston with compressed air.
13. Remove O-rings from servo release accumulator piston.

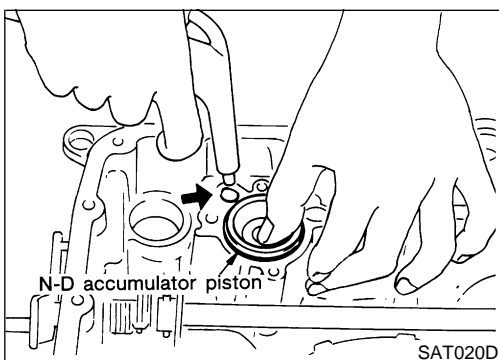

14. Remove N-D accumulator piston and return spring with compressed air.
15. Remove O-rings from N-D accumulator piston.

DISASSEMBLY

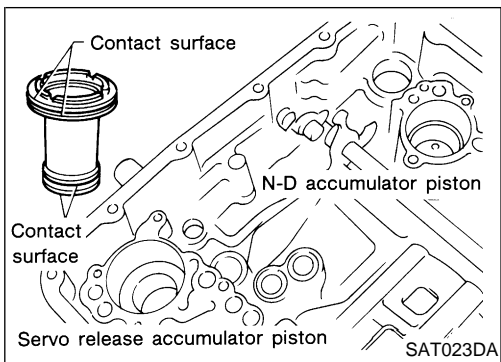

16. Check accumulator pistons and contact surface of transmission case for damage.

17. Check accumulator return springs for damage and free length.

Return springs:


Refer to "RETURN SPRING", AT-387.

GI

MA

EM

LC

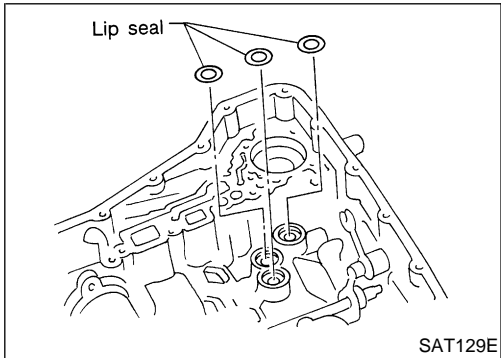


18. Remove lip seals from band servo oil port.

EC

FE

CL

MT

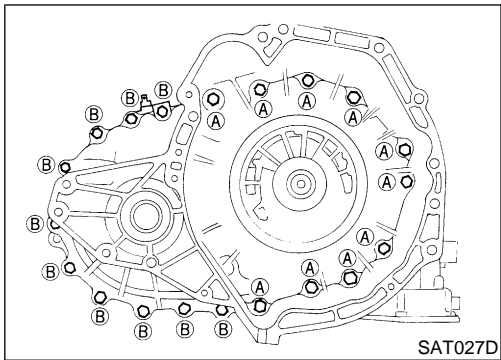

19. Remove converter housing according to the following procedures.


a. Remove converter housing mounting bolts A and B.

AT

AX

SU

BR

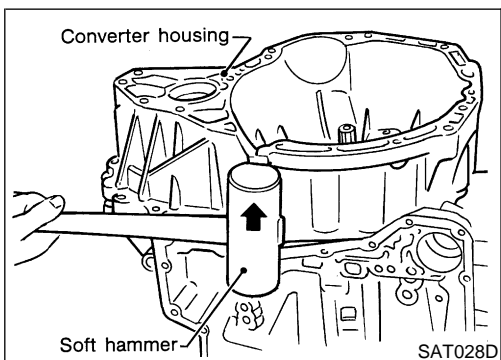


b. Remove converter housing.

ST

RS

BT

HA

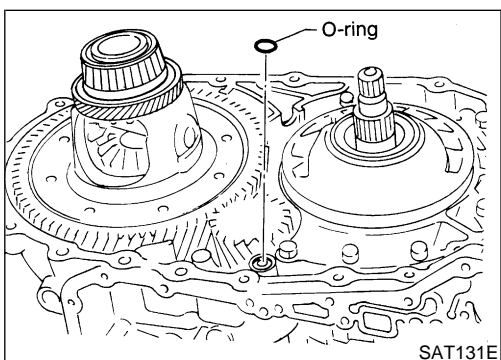


c. Remove O-ring from differential oil port.

SC


EL

IDX


DISASSEMBLY

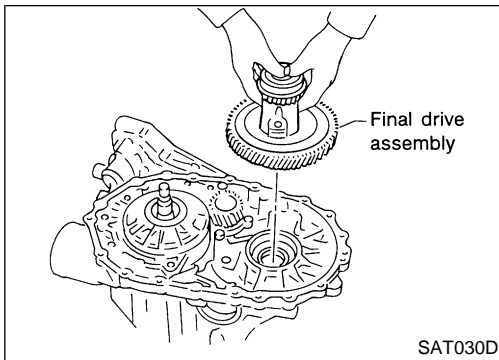


20. Remove final drive assembly from transmission case.

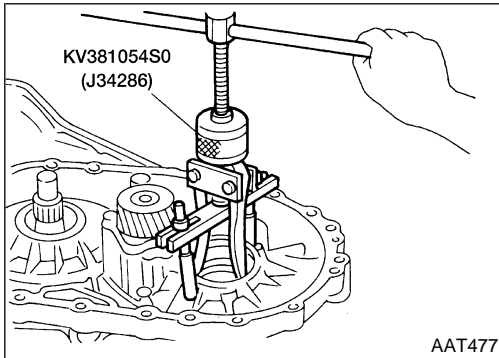


21. Remove differential side bearing outer race from transmission case using Tool.

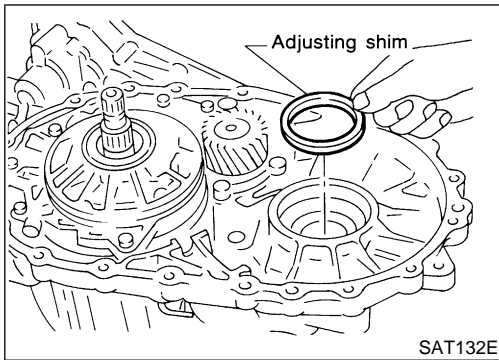

22. Remove differential side bearing adjusting shim from transmission case.

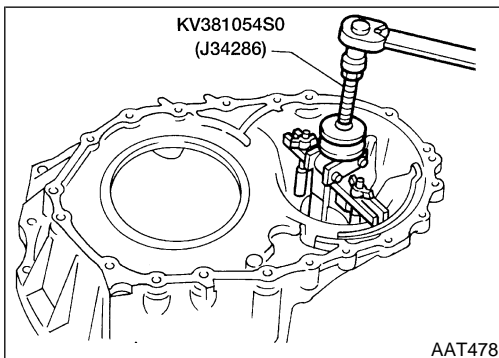


23. Remove differential side bearing outer race from converter housing using Tool.

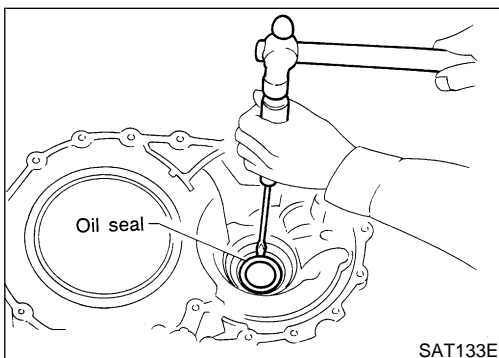


24. Remove oil seal from converter housing using a screwdriver.
● **Be careful not to damage case.**


DISASSEMBLY

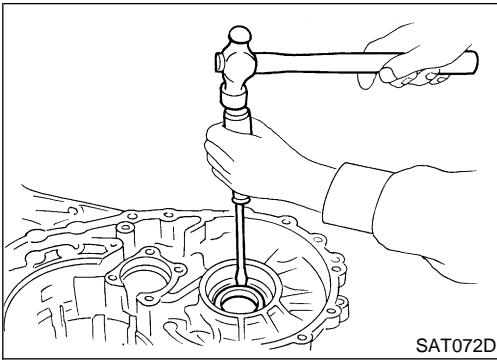


25. Remove side oil seal from transmission case using a screwdriver.

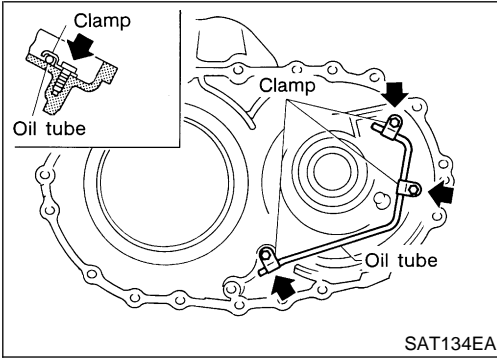


26. Remove oil tube from converter housing.

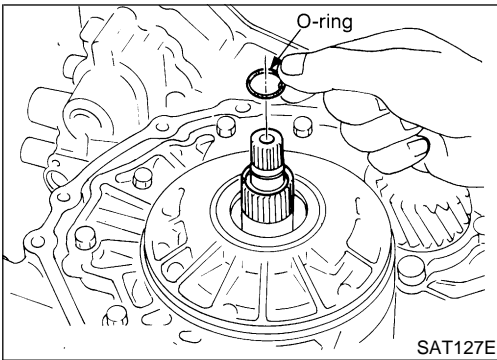

27. Remove oil pump according to the following procedures.
a. Remove O-ring from input shaft.

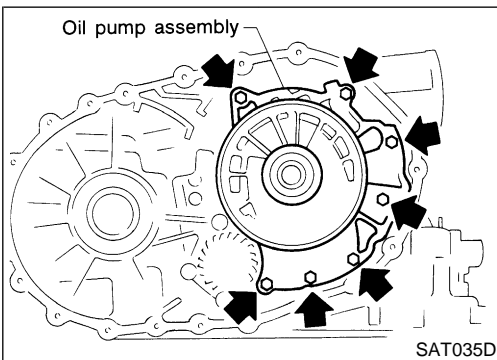

b. Remove oil pump assembly from transmission case.

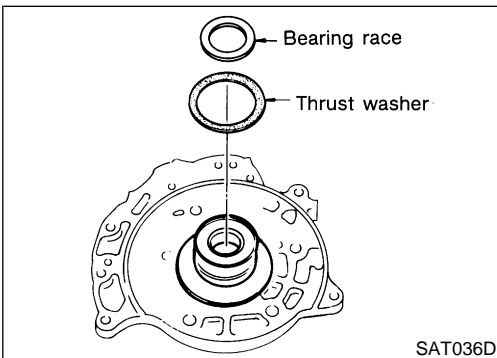

c. Remove thrust washer and bearing race from oil pump assembly.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT


HA

SC


EL

IDX


DISASSEMBLY

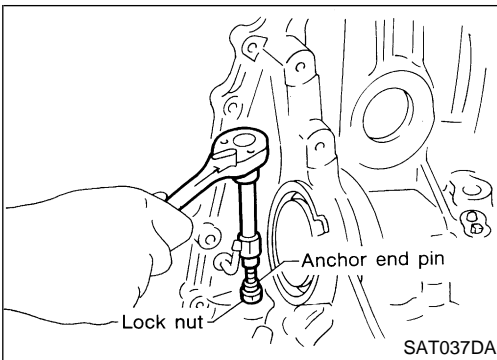


28. Remove brake band according to the following procedures.
- Loosen lock nut, then back off anchor end pin.
 - Do not reuse anchor end pin.**

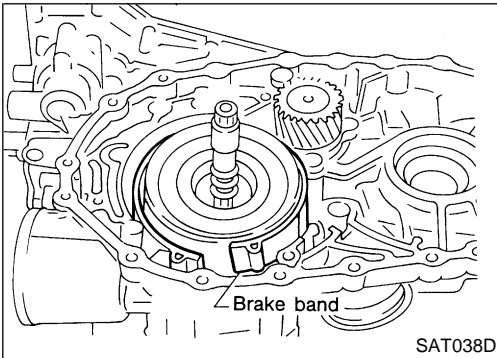


- Remove brake band from transmission case.

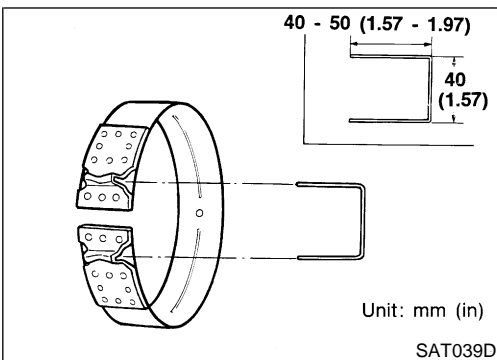

- To prevent brake linings from cracking or peeling, do not stretch the flexible band unnecessarily. When removing the brake band, always secure it with a clip as shown in the figure at left. Leave the clip in position after removing the brake band.**

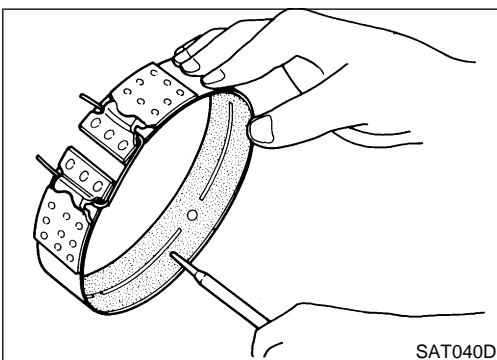


- Check brake band facing for damage, cracks, wear or burns.

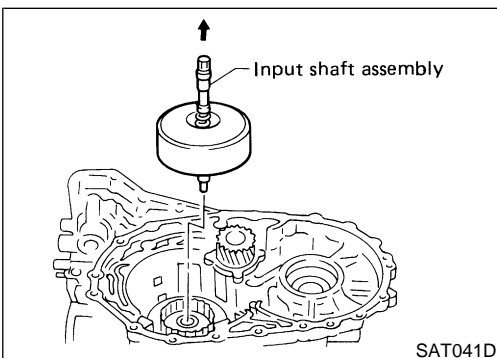


29. Remove input shaft assembly (high clutch) and reverse clutch according to the following procedures.
- Remove input shaft assembly (high clutch) with reverse clutch.


DISASSEMBLY

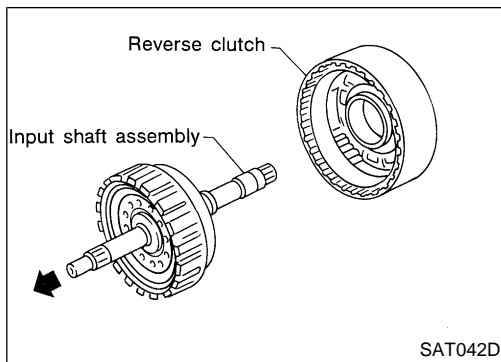


- b. Remove input shaft assembly (high clutch) from reverse clutch.

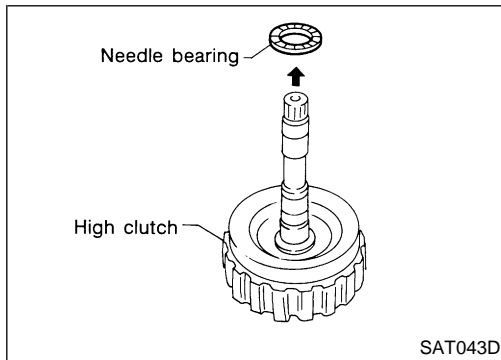


- c. Remove needle bearing from high clutch drum.
d. Check input shaft assembly and needle bearing for damage or wear.

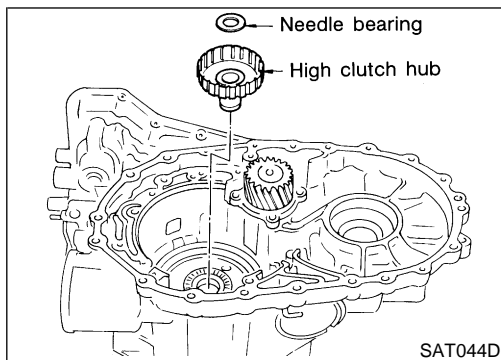

30. Remove high clutch hub and needle bearing from transmission case.
31. Check high clutch hub and needle bearing for damage or wear.

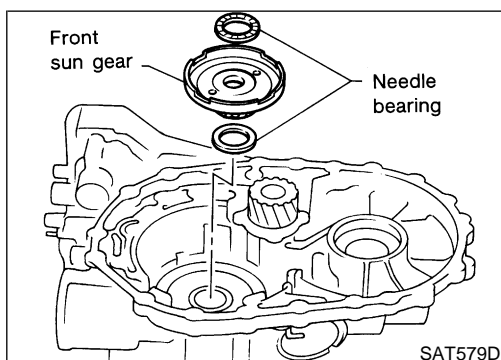

32. Remove front sun gear and needle bearings from transmission case.
33. Check front sun gear and needle bearings for damage or wear.

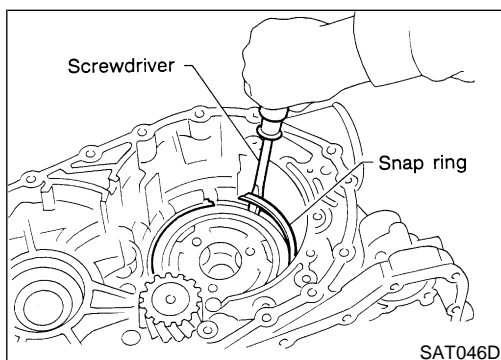

34. Remove front planetary carrier assembly and low one-way clutch according to the following procedures.
a. Remove snap ring using a screwdriver.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT


HA

SC


EL

IDX


DISASSEMBLY

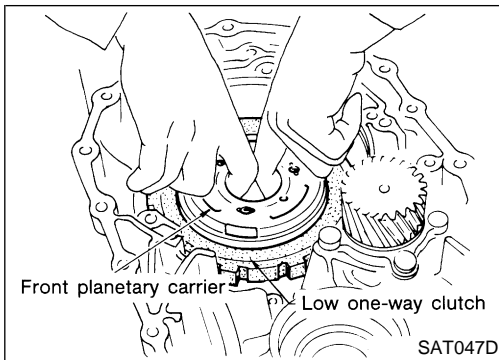


- b. Remove front planetary carrier with low one-way clutch.

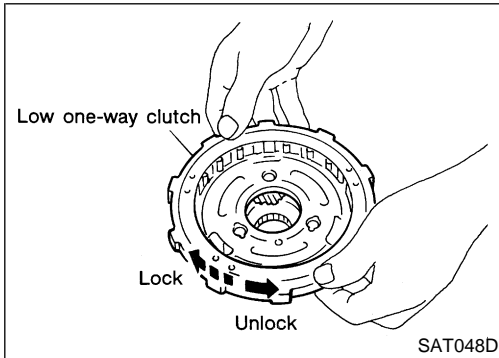

- c. Check that low one-way clutch rotates in the direction of the arrow and locks in the opposite direction.
- d. Remove low one-way clutch from front planetary carrier by rotating it in the direction of unlock.

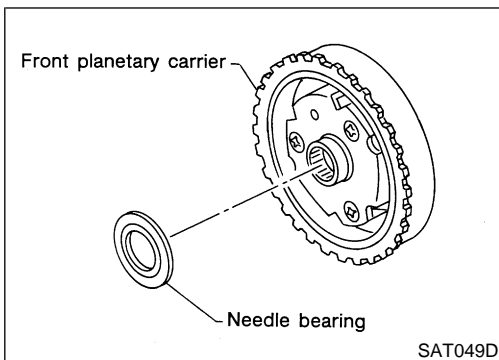

- e. Remove needle bearing from front planetary carrier.

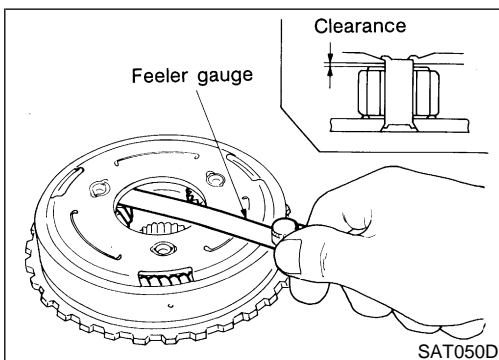

- f. Check front planetary carrier, low one-way clutch and needle bearing for damage or wear.
- g. Check clearance between pinion washer and planetary carrier using feeler gauge.


Standard clearance:

0.15 - 0.70 mm (0.0059 - 0.0276 in)

Allowable limit:


0.80 mm (0.0315 in)

Replace front planetary carrier if the clearance exceeds allowable limit.

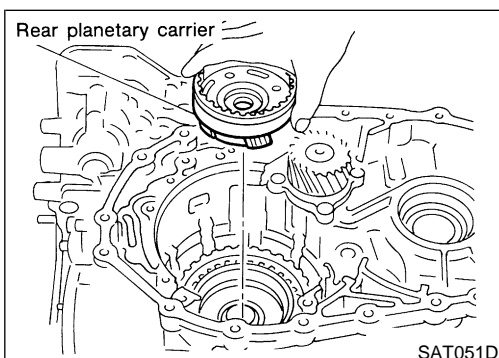


35. Remove rear planetary carrier assembly and rear sun gear according to the following procedures.
- a. Remove rear planetary carrier assembly from transmission case.


DISASSEMBLY

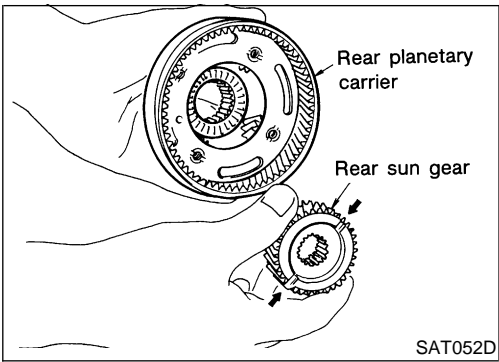

b. Remove rear sun gear from rear planetary carrier.

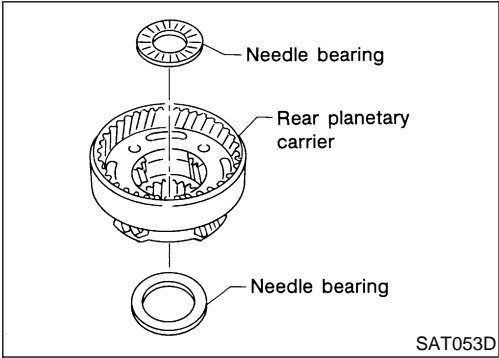

c. Remove needle bearings from rear planetary carrier assembly.

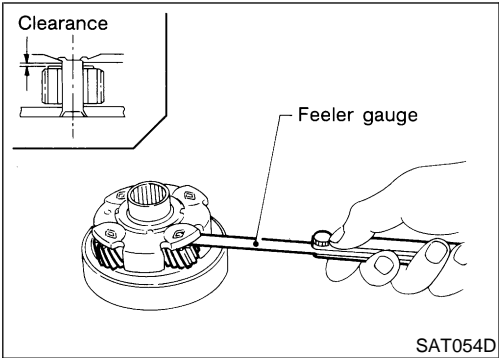

d. Check rear planetary carrier, rear sun gear and needle bearings for damage or wear.

e. Check clearance between pinion washer and rear planetary carrier using feeler gauge.


Standard clearance:

0.15 - 0.70 mm (0.0059 - 0.0276 in)


Allowable limit:

0.80 mm (0.0315 in)

Replace rear planetary carrier if the clearance exceeds allowable limit.

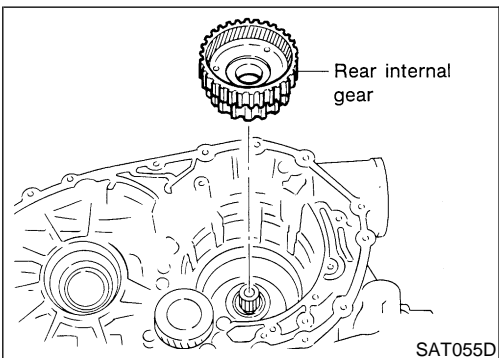

36. Remove rear internal gear from transmission case.

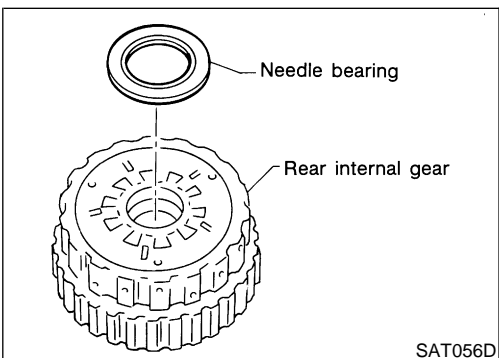

37. Remove needle bearing from rear internal gear.

- Check needle bearing for damage or wear.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT


HA

SC


EL

IDX


DISASSEMBLY

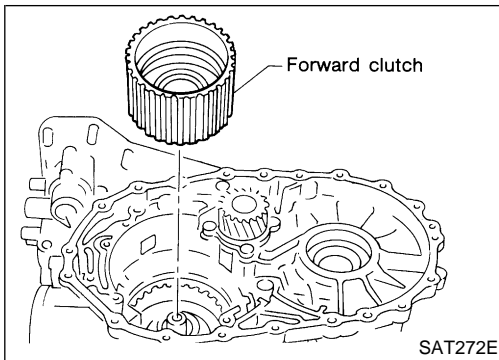

38. Remove forward clutch assembly from transmission case.

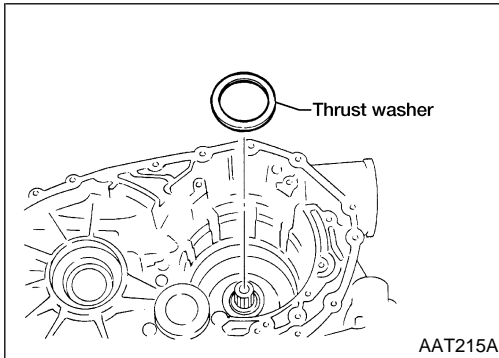


39. Remove thrust washer from transmission case.

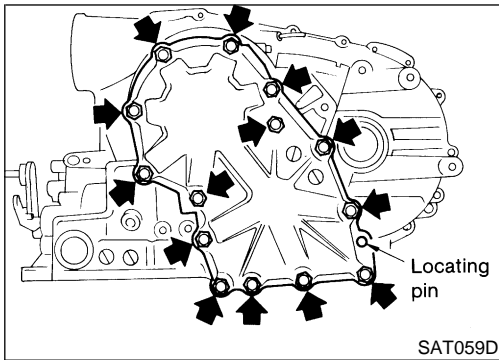


40. Remove output shaft assembly according to the following procedures.

a. Remove side cover bolts.

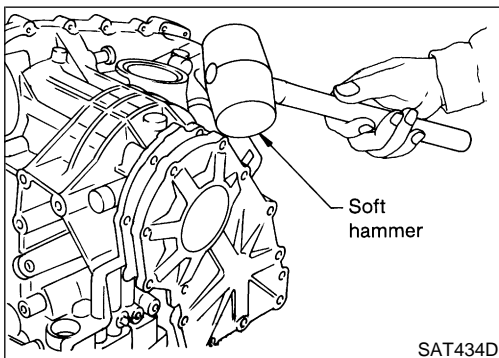


b. Remove side cover by lightly tapping it with a soft hammer.

● **Be careful not to drop output shaft assembly. It might come out when removing side cover.**

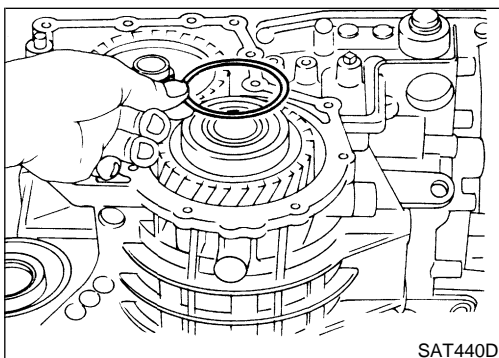


c. Remove adjusting shim.


DISASSEMBLY

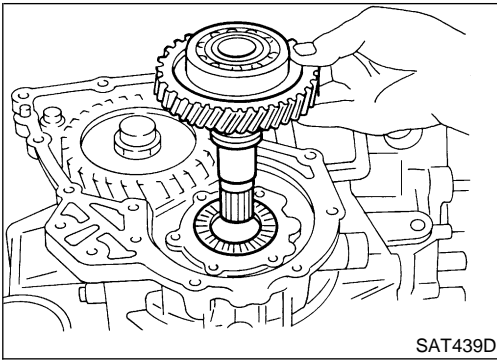


d. Remove output shaft assembly.

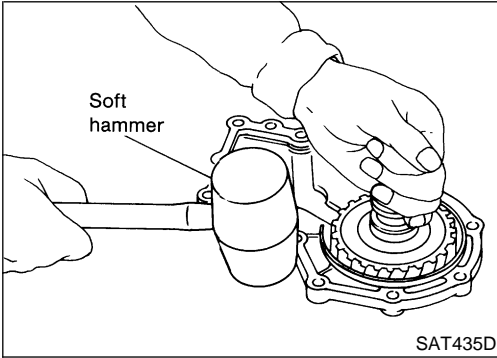

- If output shaft assembly came off with side cover, tap cover with a soft hammer to separate.

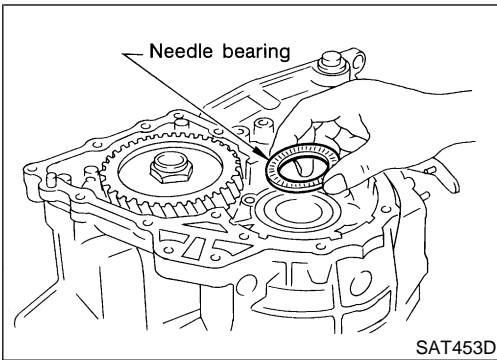


e. Remove needle bearing.

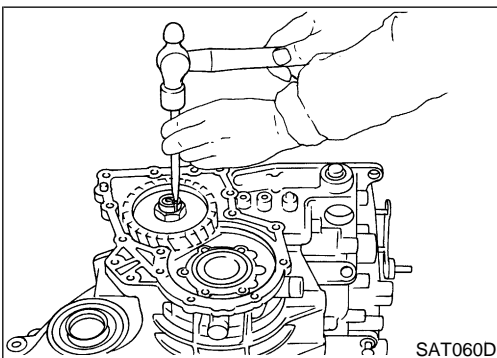

41. Disassemble reduction pinion gear according to the following procedures.

- a. Set manual shaft to position "P" to fix idler gear.
- b. Unlock idler gear lock nut using a pin punch.

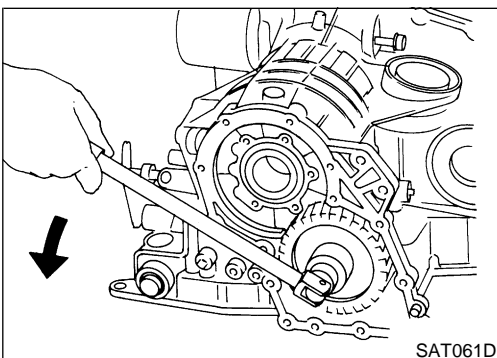

c. Remove idler gear lock nut.

- Do not reuse idler gear lock nut.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT


HA

SC


EL

IDX

DISASSEMBLY

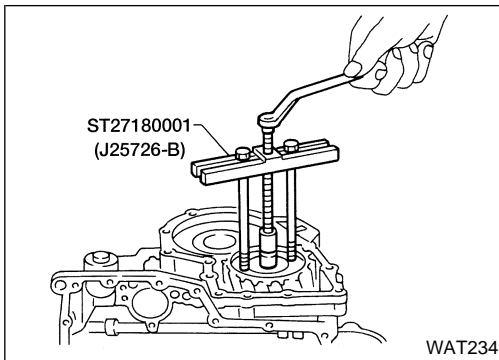


d. Remove idler gear with puller using Tool.

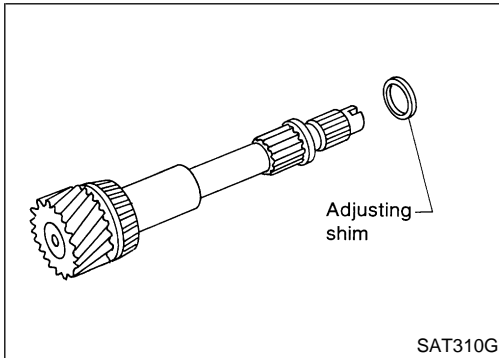


e. Remove reduction pinion gear.

f. Remove adjusting shim from reduction pinion gear.

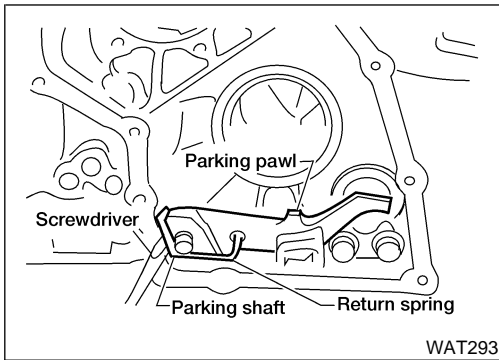


42. Remove return spring from parking shaft using a screwdriver.

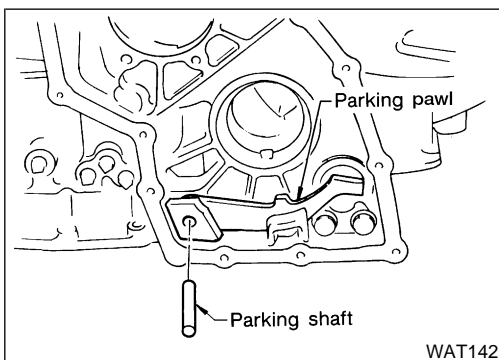

43. Draw out parking shaft and remove parking pawl from transmission case.


44. Check parking pawl and shaft for damage or wear.

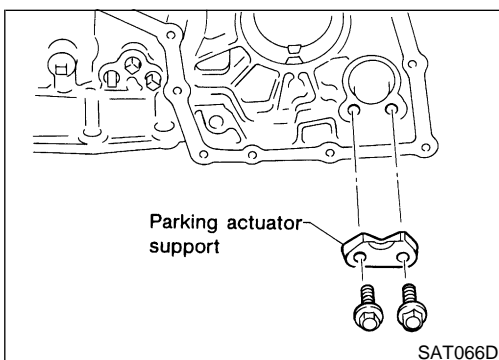

45. Remove parking actuator support from transmission case.

- Check parking actuator support for damage or wear.

DISASSEMBLY

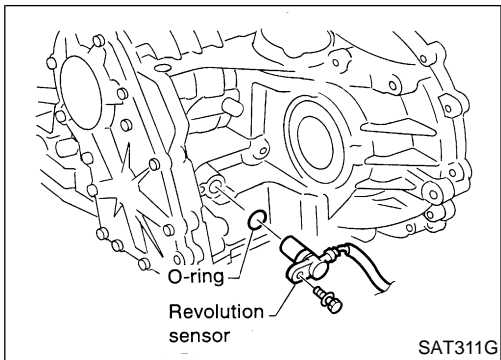

46. Remove revolution sensor from transmission case.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL



IDX

REPAIR FOR COMPONENT PARTS

Manual Shaft

Manual Shaft COMPONENTS


NIAT0246

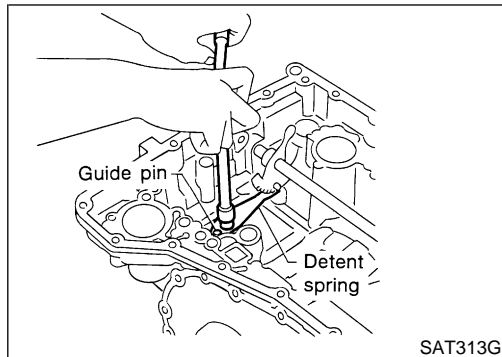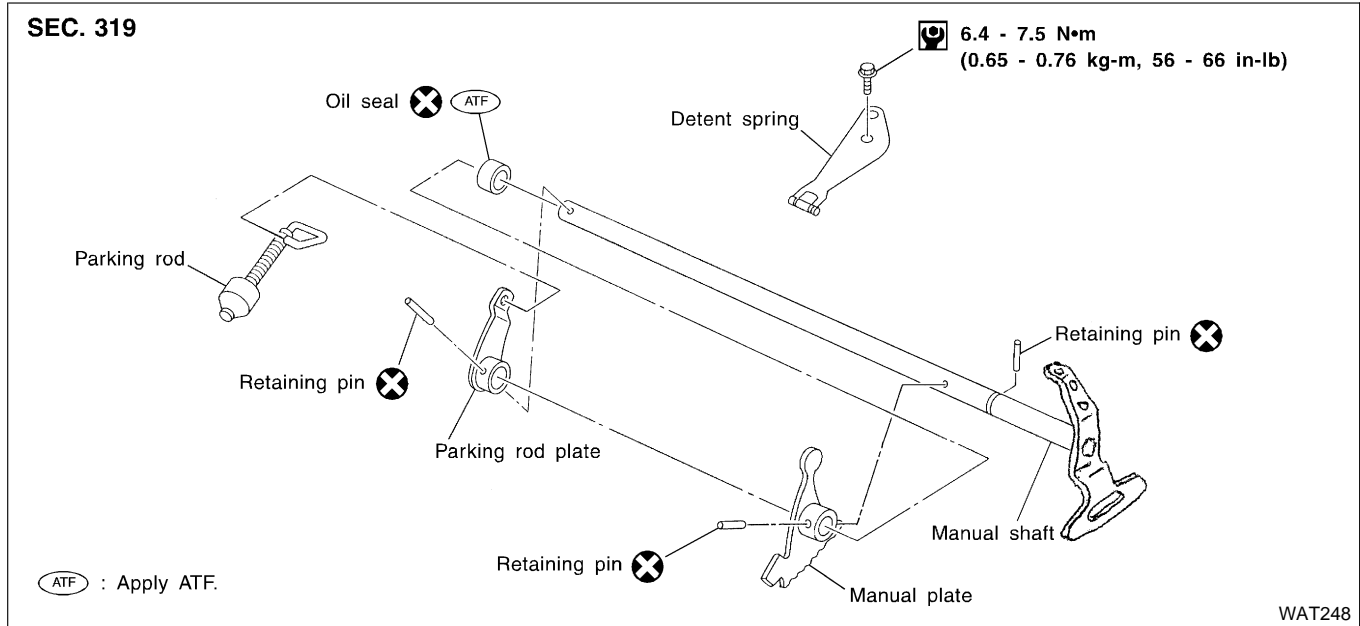


REMOVAL

NIAT0247

1. Remove detent spring from transmission case.

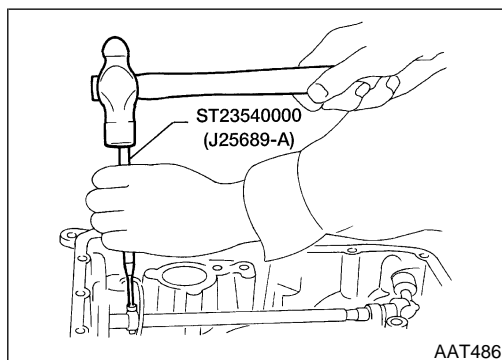


2. Drive out manual plate retaining pin using Tool.

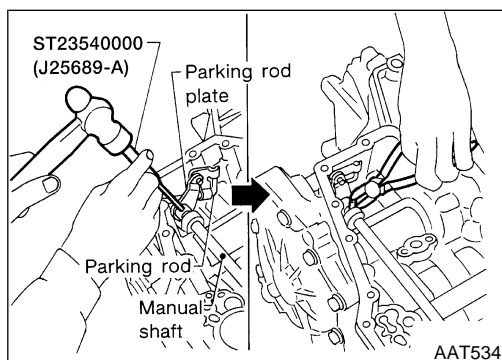


3. Drive and pull out parking rod plate retaining pin using Tool.
4. Remove parking rod plate from manual shaft.
5. Draw out parking rod from transmission case.

REPAIR FOR COMPONENT PARTS

Manual Shaft (Cont'd)

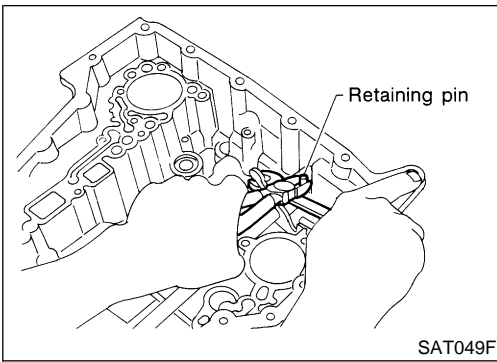


6. Pull out manual shaft retaining pin.
7. Remove manual shaft and manual plate from transmission case.

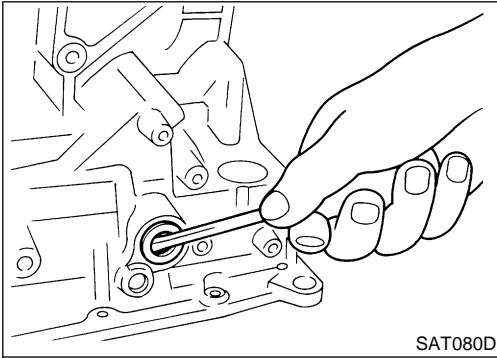

8. Remove manual shaft oil seal.


INSPECTION

- Check component parts for wear or damage. Replace if necessary. ^{NIAT02.48}

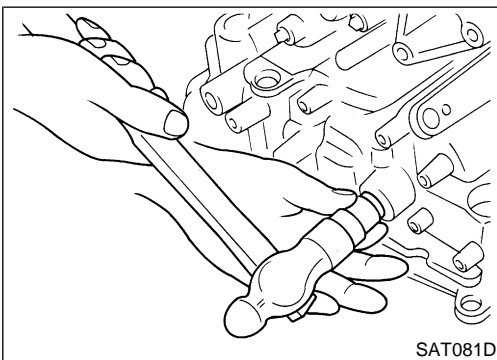

INSTALLATION

1. Install manual shaft oil seal using a suitable tool.
- Apply ATF to outer surface of oil seal.

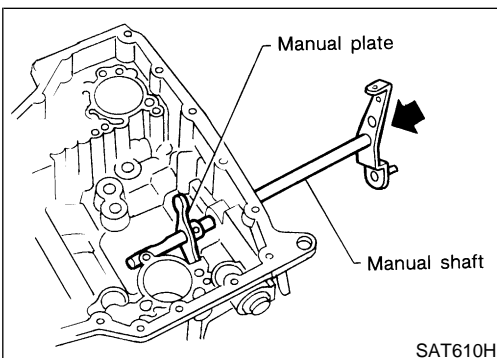

2. Install manual shaft and manual plate.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA


SC

EL


IDX

REPAIR FOR COMPONENT PARTS


Manual Shaft (Cont'd)

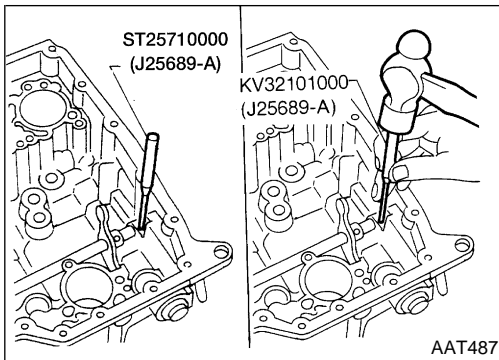


3. Align groove of manual shaft and hole of transmission case.
4. Install manual shaft retaining pin using Tool.

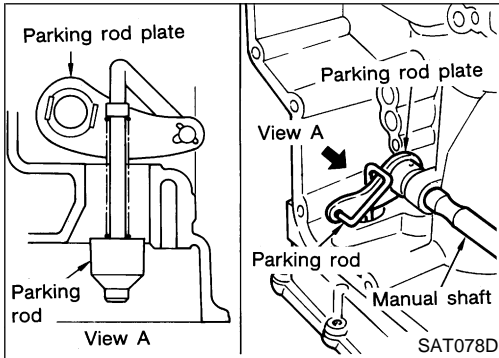

5. Install parking rod to parking rod plate.
6. Set parking rod assembly onto manual shaft.

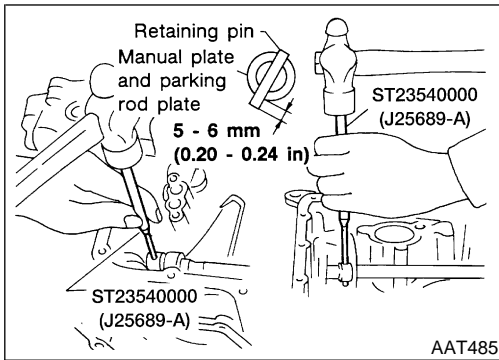


7. Drive in manual plate retaining pin and parking rod plate retaining pin using Tool.

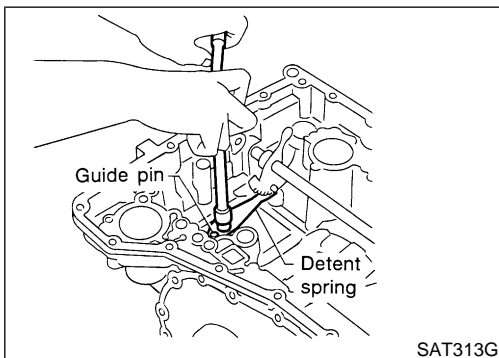


8. Install detent spring.
🔩 : 6.4 - 7.5 N·m (0.65 - 0.76 kg·m, 56.4 - 66.0 in·lb)

Oil Pump COMPONENTS

NIAT0250

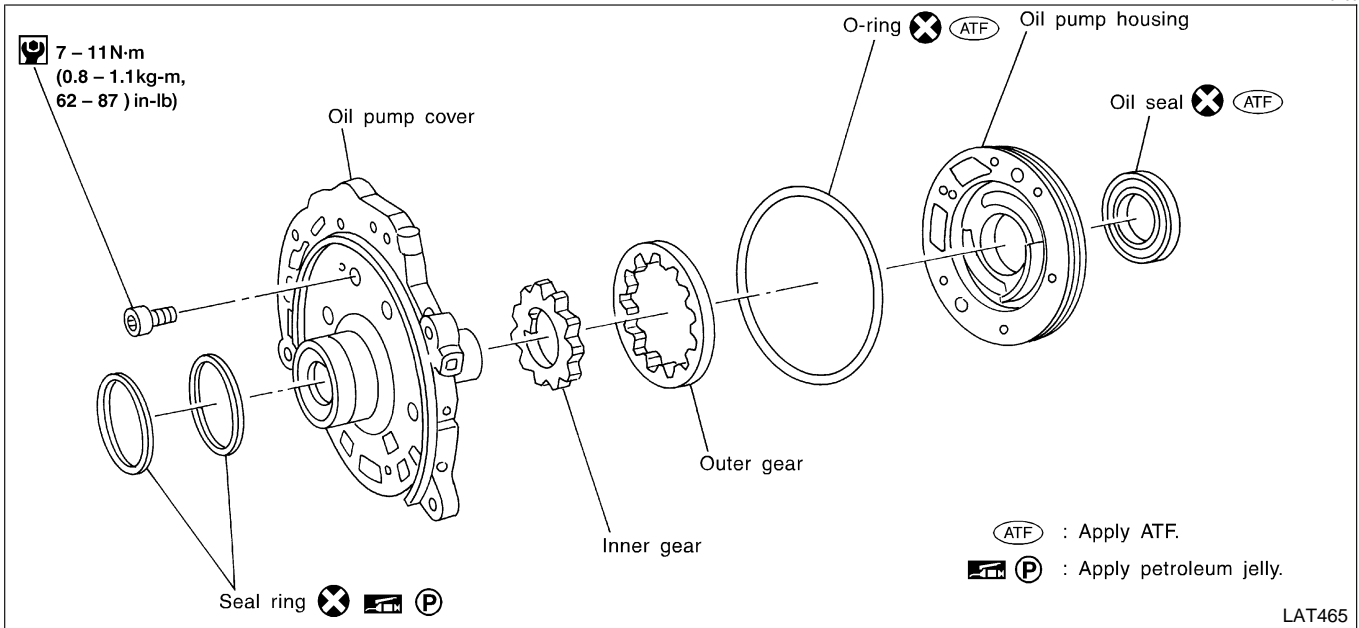

GI
MA
EM
LC
EC
FE
CL
MT

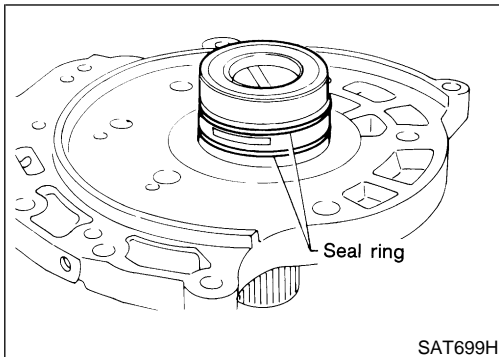


DISASSEMBLY


1. Remove seal rings.

NIAT0251

AT

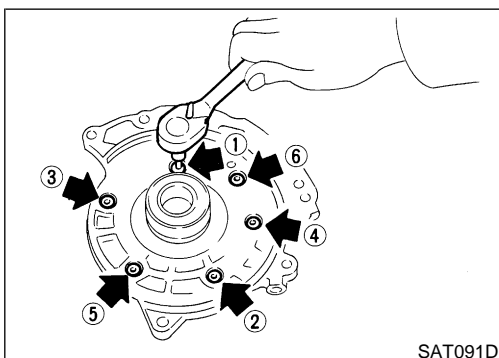

2. Loosen bolts in numerical order and remove oil pump cover.

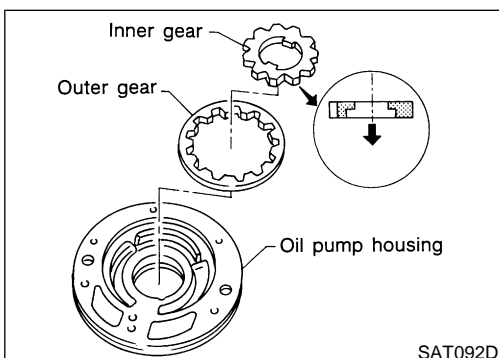


3. Remove inner and outer gear from oil pump housing.


AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

REPAIR FOR COMPONENT PARTS

Oil Pump (Cont'd)

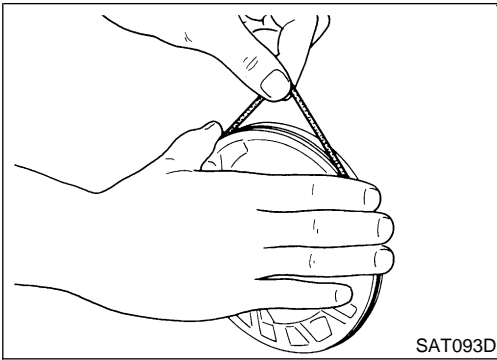

4. Remove O-ring from oil pump housing.

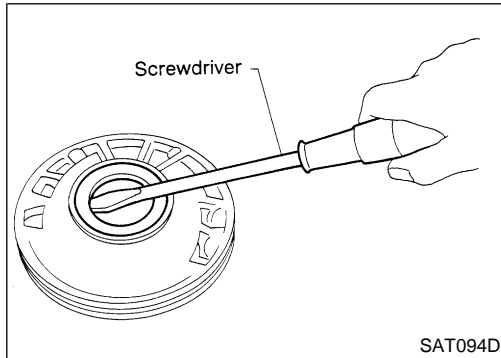

5. Remove oil pump housing oil seal.


INSPECTION

Oil Pump Housing, Oil Pump Cover, Inner Gear and Outer Gear

NIAT0252

NIAT0252S01

- Check for wear or damage.

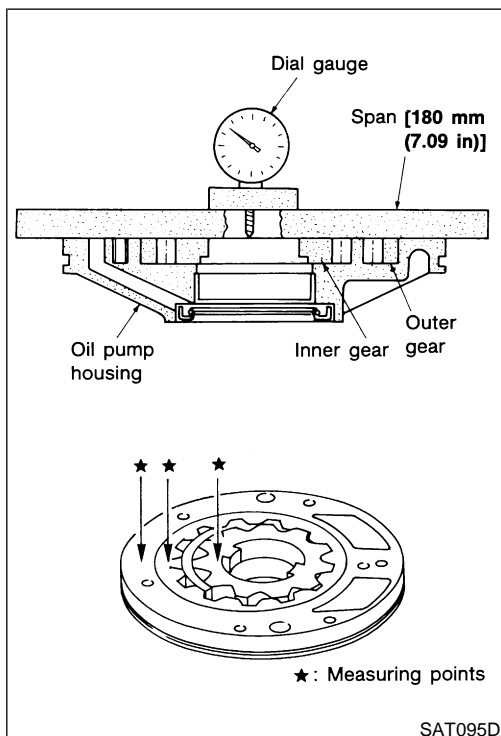

Side Clearances

NIAT0252S02

- Measure side clearance of inner and outer gears in at least four places around each outside edge. Maximum measured values should be within specified range.

Standard clearance:

0.02 - 0.04 mm (0.0008 - 0.0016 in)

- If clearance is less than standard, select inner and outer gear as a set so that clearance is within specifications.


Inner and outer gear:

Refer to "Oil Pump", AT-382.

- If clearance is more than standard, replace whole oil pump assembly except oil pump cover.


REPAIR FOR COMPONENT PARTS

Oil Pump (Cont'd)

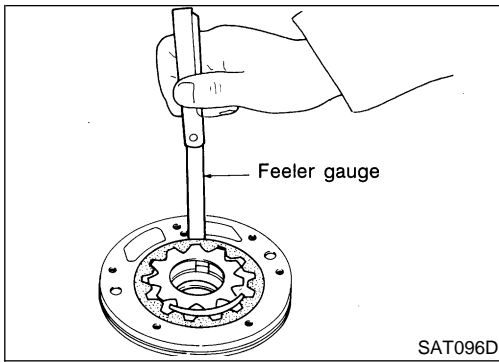

- Measure clearance between outer gear and oil pump housing.
Standard clearance:
0.08 - 0.15 mm (0.0031 - 0.0059 in)
Allowable limit:
0.15 mm (0.0059 in)
- If not within allowable limit, replace whole oil pump assembly except oil pump cover.

GI
MA
EM
LC

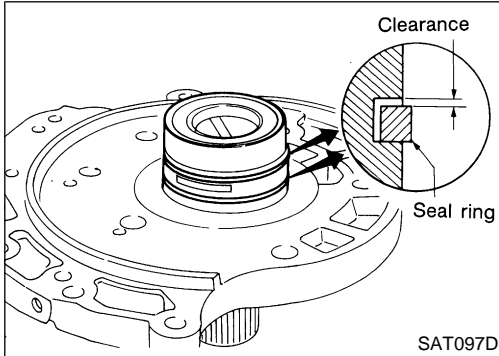

Side Ring Clearance


NIAT0252S03

- Install new seal rings onto oil pump cover.
- Measure clearance between seal ring and ring groove.

Standard clearance:
0.1 - 0.25 mm (0.0039 - 0.0098 in)
Allowable limit:
0.25 mm (0.0098 in)

- If not within allowable limit, replace oil pump cover assembly.

EC
FE
CL
MT

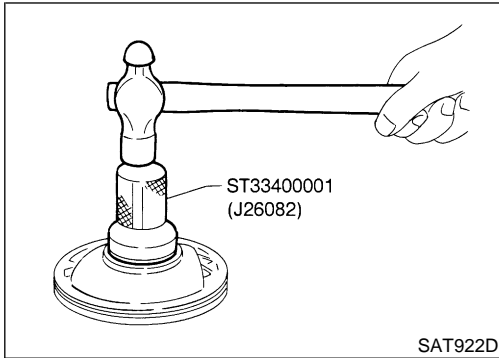


ASSEMBLY

NIAT0253


1. Install oil seal on oil pump housing using Tool.

AT
AX

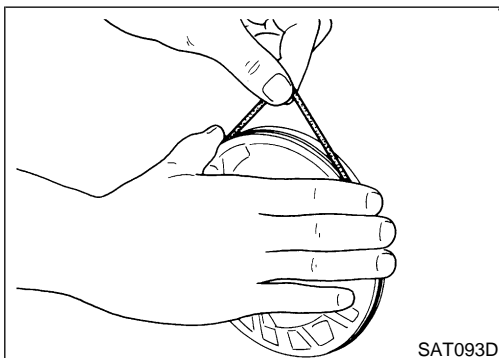

2. Install O-ring on oil pump housing.
 - **Apply ATF to O-ring.**

ST
RS
BT
HA

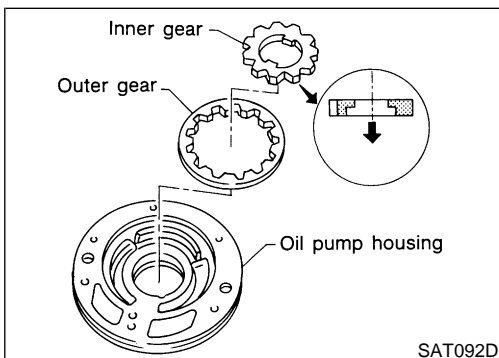


3. Install inner and outer gears on oil pump housing.
 - **Take care with the direction of the inner gear.**


SC
EL
IDX

REPAIR FOR COMPONENT PARTS

Oil Pump (Cont'd)

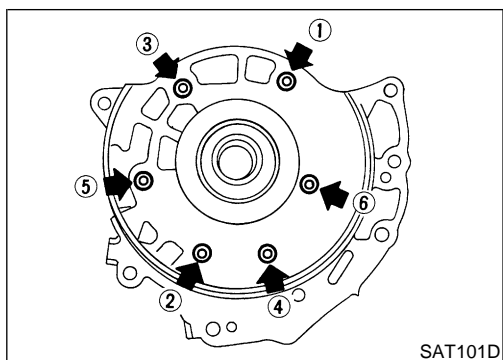


4. Install oil pump cover on oil pump housing.
 - a. Wrap masking tape around splines of oil pump cover assembly to protect seal. Position oil pump cover assembly on oil pump housing assembly, then remove masking tape.
 - b. Tighten bolts in numerical order.

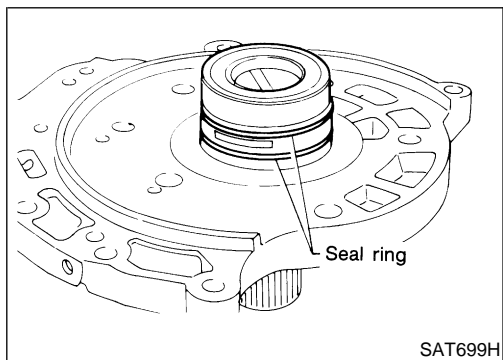

5. Install new seal rings carefully after packing ring groove with petroleum jelly.
 - **Do not spread gap of seal ring excessively while installing. It may deform the ring.**

Control Valve Assembly COMPONENTS

=NIAT0254

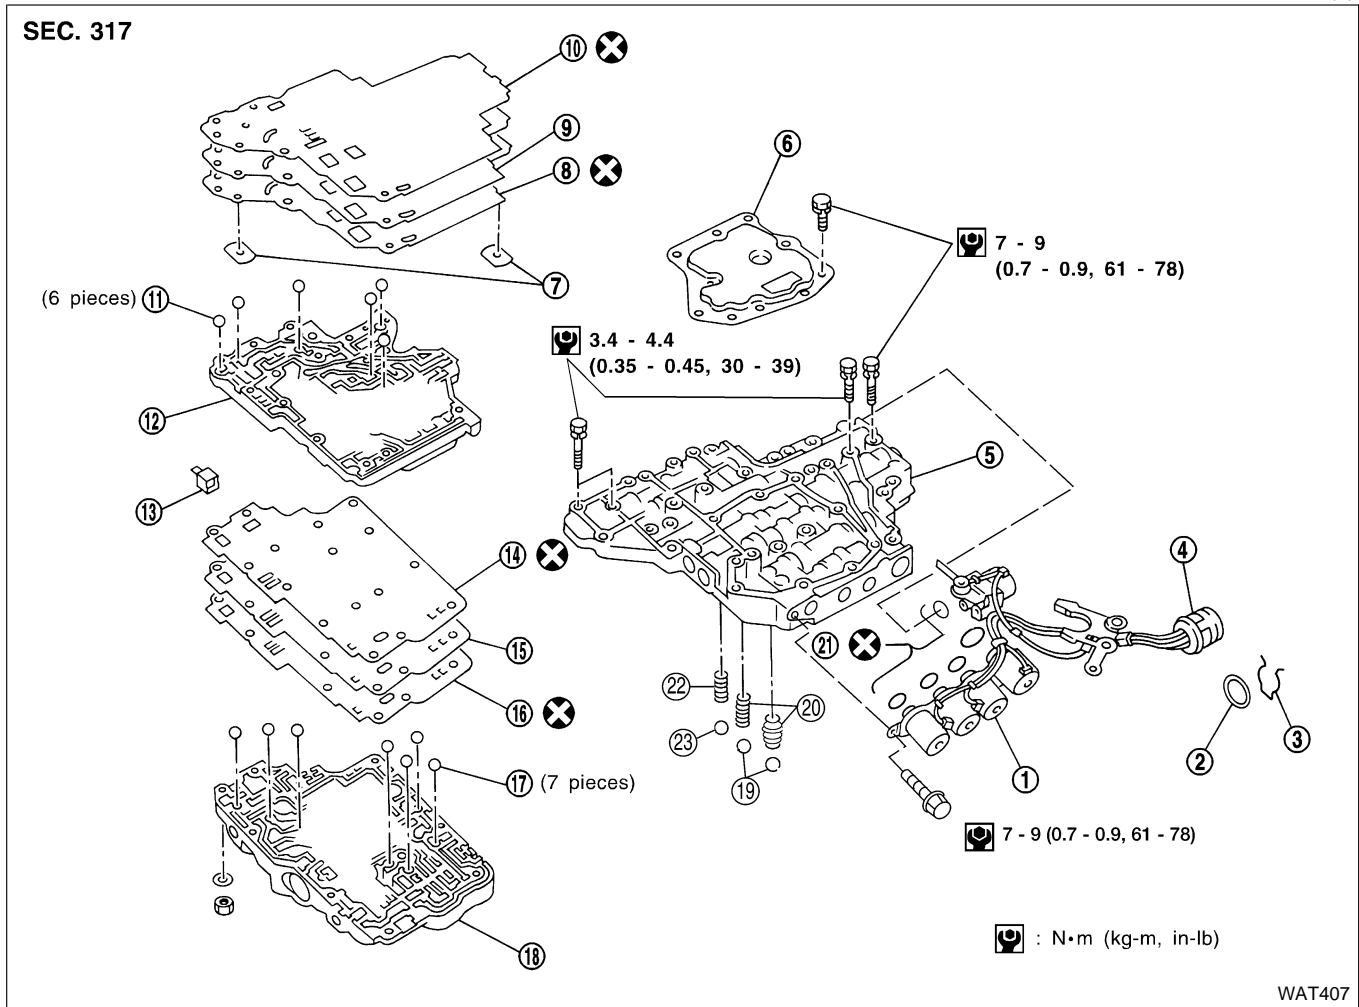

- | | | |
|----------------------------------|-----------------------------------|------------------------------------|
| 1. Solenoid valve assembly | 9. Separating plate | 17. Steel ball |
| 2. O-ring | 10. Lower separating gasket | 18. Control valve upper body |
| 3. Snap ring | 11. Steel ball | 19. Check ball |
| 4. Terminal body | 12. Control valve inter body | 20. Oil cooler relief valve spring |
| 5. Control valve lower body | 13. Pilot filter | 21. O-ring |
| 6. Oil strainer | 14. Upper inter separating gasket | 22. T/C pressure holding spring |
| 7. Support plate | 15. Separating plate | 23. Check ball |
| 8. Lower inter separating gasket | 16. Upper separating gasket | |

REPAIR FOR COMPONENT PARTS


Control Valve Assembly (Cont'd)

DISASSEMBLY


=NIAT0255

- Disassemble upper, inter and lower bodies.


Bolt length, number and location:

Bolt symbol	A	B	C	D	E	F	G
Bolt length "ℓ" 	13.5 mm (0.531 in)	58.0 mm (2.283 in)	40.0 mm (1.575 in)	66.0 mm (2.598 in)	33.0 mm (1.299 in)	78.0 mm (3.071 in)	18.0 mm (0.709 in)
Number of bolts	6	3	6	11	2	2	1


F: Reamer bolt with nut

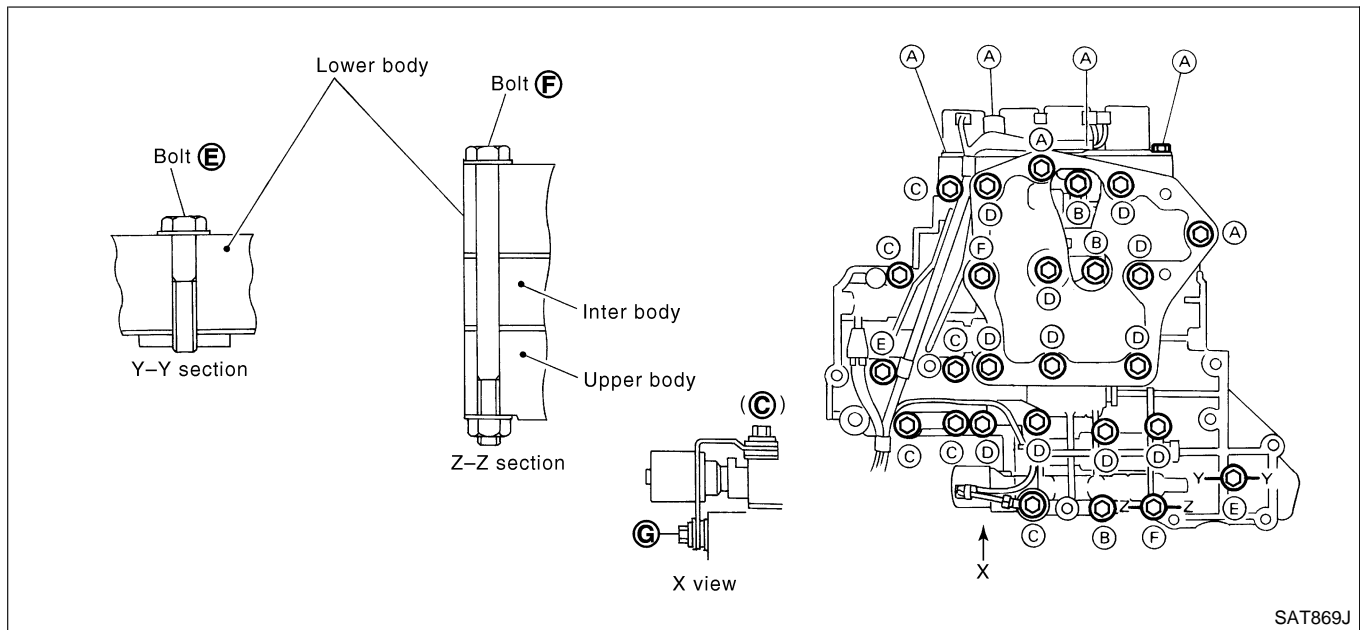

SAT869J

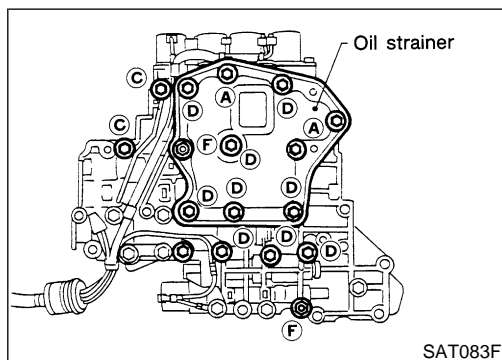


- Remove bolts A, D and F, and remove oil strainer from control valve assembly.

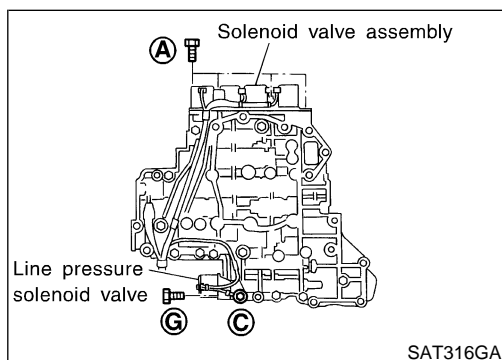


- Remove solenoid valve assembly and line pressure solenoid valve from control valve assembly.
 - Be careful not to lose the line pressure solenoid valve spring.

REPAIR FOR COMPONENT PARTS


Control Valve Assembly (Cont'd)

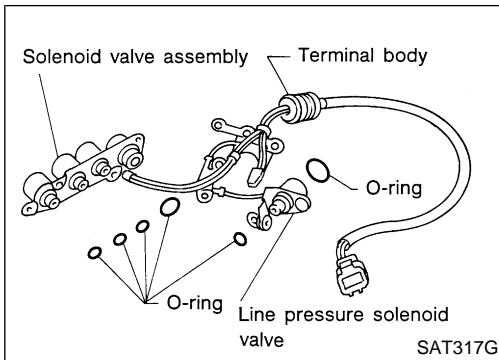


3. Remove O-rings from solenoid valves and terminal body.

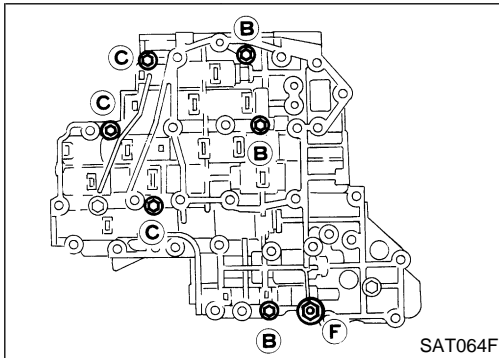


4. Place upper body face down, and remove bolts B, C and F.

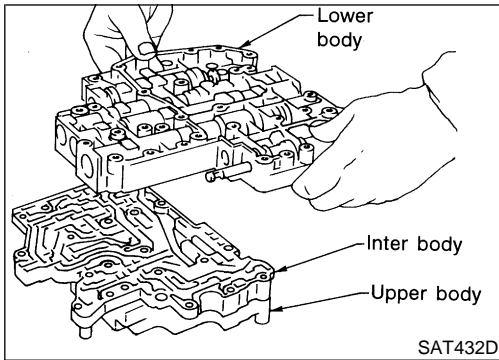

5. Remove lower body from inter body.

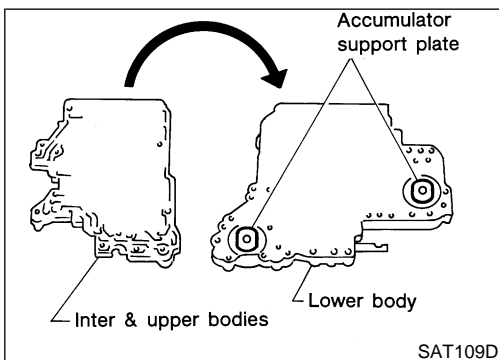

6. Turn over lower body, and accumulator support plates.

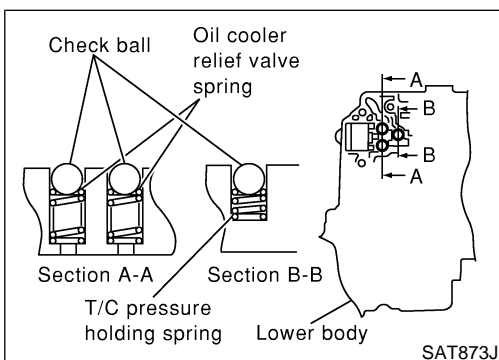

7. Remove bolts E, separating plate and separating gaskets from lower body.

8. Remove check balls, oil cooler relief valve springs and T/C pressure holding spring from lower body.

● **Be careful not to lose steel balls and relief valve springs.**

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA


SC

EL


IDX

REPAIR FOR COMPONENT PARTS

Control Valve Assembly (Cont'd)

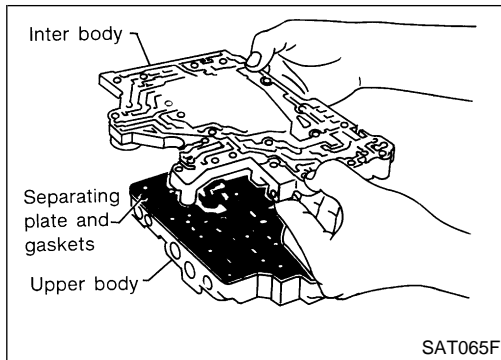


9. Remove inter body from upper body.
10. Remove pilot filter, separating plate and gaskets from upper body.

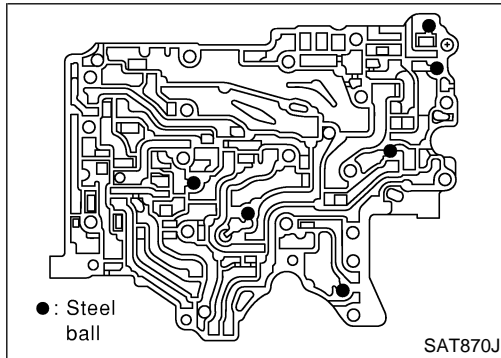


11. Check to see that steel balls are properly positioned in inter body and then remove them.

- **Be careful not to lose steel balls.**

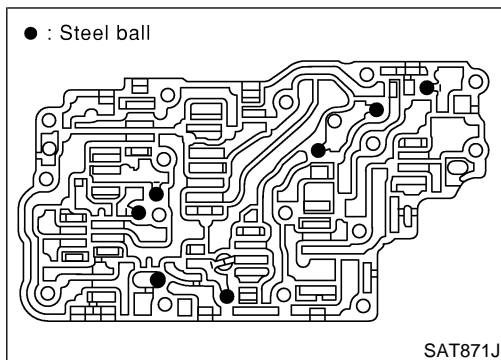

12. Check to see that steel balls are properly positioned in upper body and then remove them.

- **Be careful not to lose steel balls.**

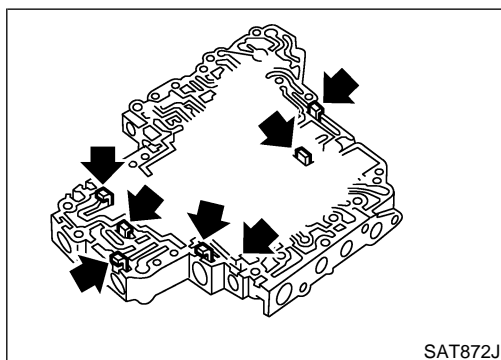


INSPECTION Lower and Upper Bodies

NIAT0256

NIAT0256S01


- Check to see that retainer plates are properly positioned in lower body.

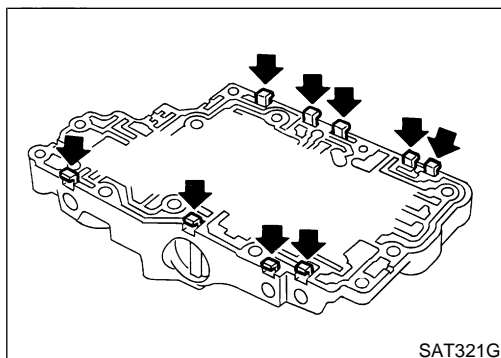

- Check to see that retainer plates are properly positioned in upper body.

REPAIR FOR COMPONENT PARTS


Control Valve Assembly (Cont'd)

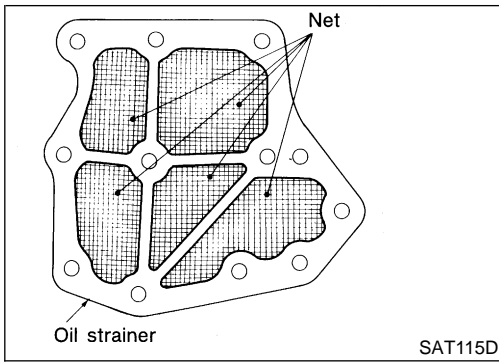

Oil Strainer

NIAT0256S02


- Check wire netting of oil strainer for damage.

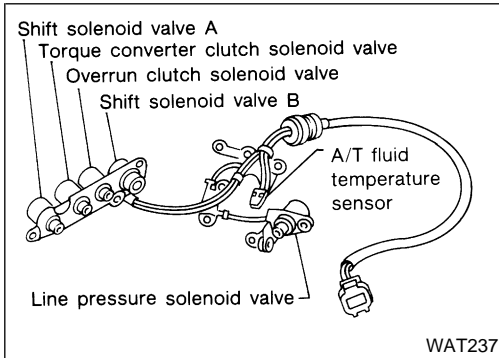

Shift Solenoid Valves A and B, Line Pressure Solenoid valve, Torque Converter Clutch Solenoid Valve and Overrun Clutch Solenoid Valve

NIAT0256S03

- Refer to "Resistance Check", AT-161, 181 and 185.

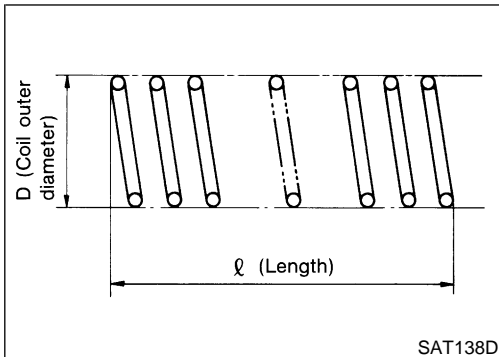

Oil Cooler Relief Valve Spring


NIAT0256S04

- Check springs for damage or deformation.
- Measure free length and outer diameter.

Inspection standard:

Unit: mm (in)


Part No.	ℓ	D
31872 31X00	17.0 (0.669)	8.0 (0.315)

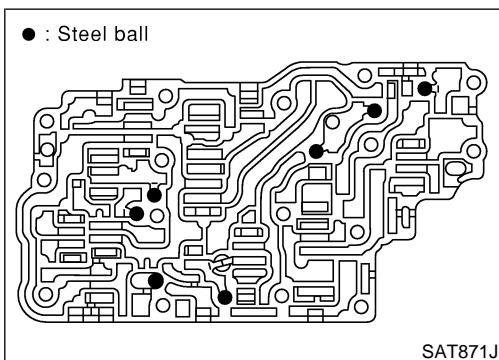

ASSEMBLY

NIAT0257

1. Install upper, inter and lower body.
 - a. Place oil circuit of upper body face up. Install steel balls in their proper positions.

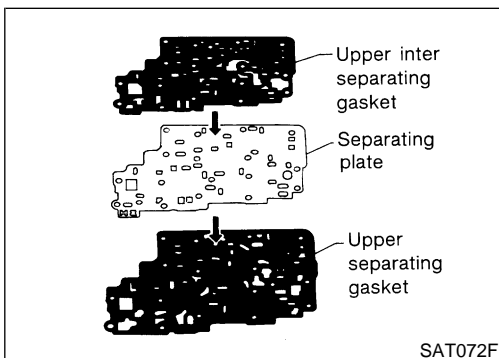


- b. Install upper separating gasket, upper inter separating gasket and upper separating plate in order shown in illustration.

- Always use new gaskets.


GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

REPAIR FOR COMPONENT PARTS


Control Valve Assembly (Cont'd)

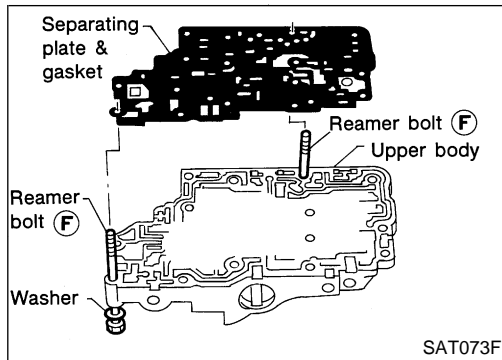


- c. Install reamer bolts **F** from bottom of upper body. Using reamer bolts as guides, install separating plate and gaskets as a set.

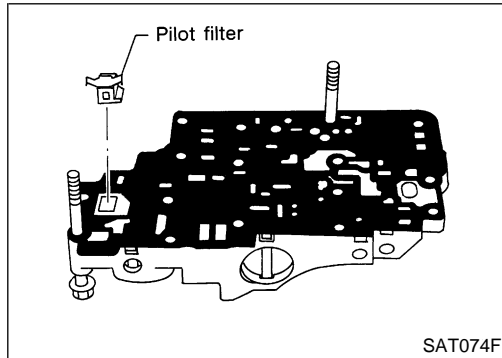


- d. Install pilot filter.

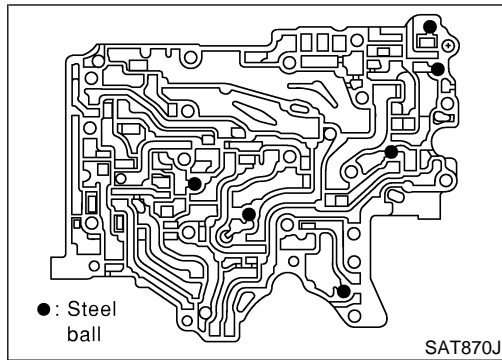

- e. Place inter body as shown in the illustration. Install steel balls in their proper positions.

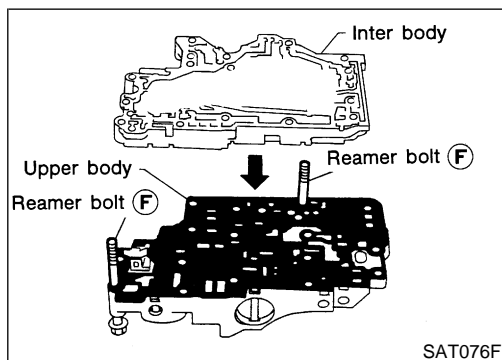


- f. Install inter body on upper body using reamer bolts **F** as guides.
- **Be careful not to dislocate or drop steel balls.**

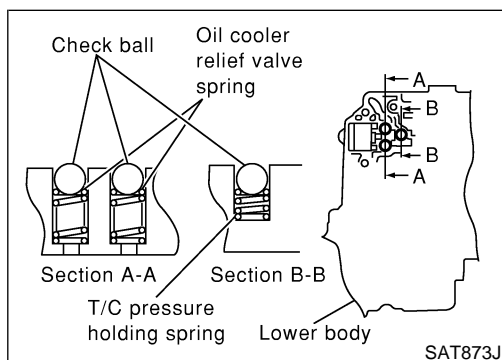


- g. Install steel balls, oil cooler relief valve springs and T/C pressure holding spring in their proper positions in lower body.

REPAIR FOR COMPONENT PARTS


Control Valve Assembly (Cont'd)

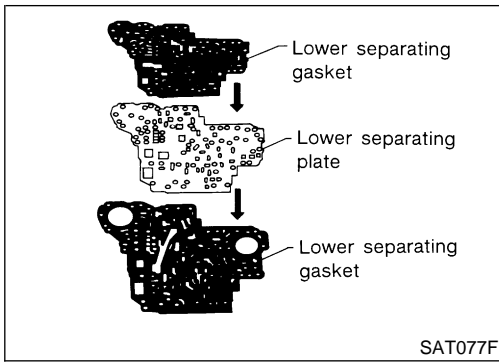


- h. Install lower separating gasket, inter separating gasket and lower separating plate in order shown in the illustration.

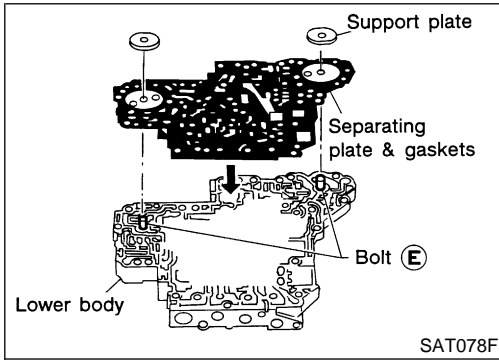

- i. Install bolts **E** from bottom of lower body. Using bolts **E** as guides, install separating plate and gaskets as a set.
j. Install support plates on lower body.

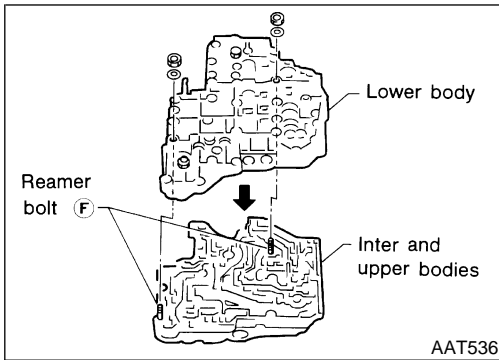


- k. Install lower body on inter body using reamer bolts **F** as guides and tighten reamer bolts **F** slightly.

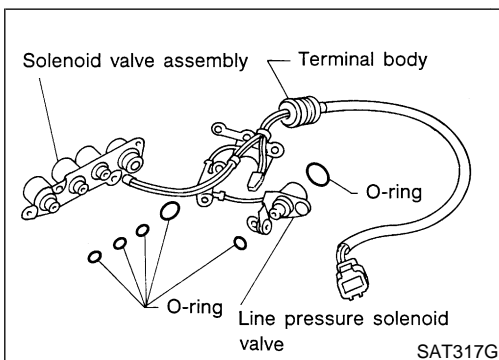

2. Install O-rings to solenoid valves and terminal body.
● **Apply ATF to O-rings.**

3. Install and tighten bolts.

Bolt length, number and location:



Bolt symbol	A	B	C	D	E	F	G
Bolt length "ℓ" 	13.5 mm (0.531 in)	58.0 mm (2.283 in)	44.0 mm (1.732 in)	66.0 mm (2.598 in)	33.0 mm (1.299 in)	78.0 mm (3.071 in)	18.0 mm (0.709 in)
Number of bolts	6	3	6	11	2	2	1

F: Reamer bolt with nut


GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

REPAIR FOR COMPONENT PARTS


Control Valve Assembly (Cont'd)

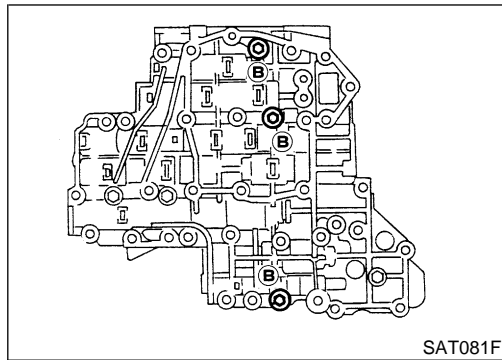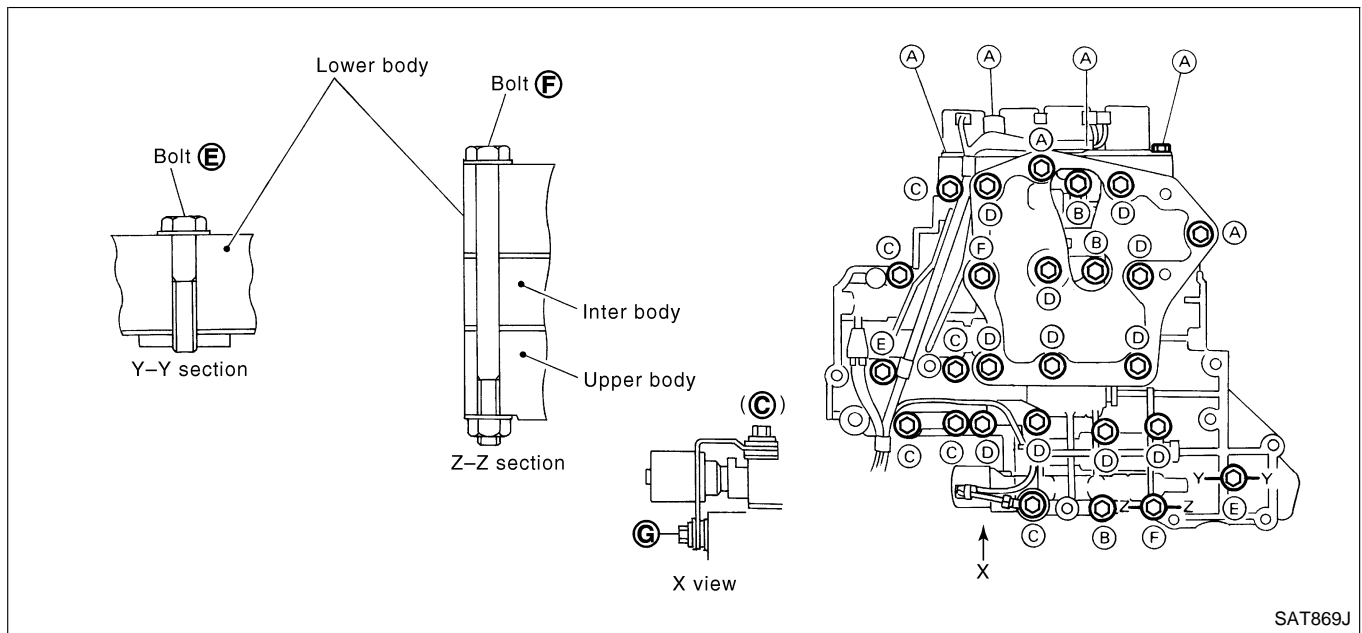

- a. Install and tighten bolts **B** to specified torque.
🔩 : 7 - 9 N·m (0.7 - 0.9 kg·m, 61 - 78 in·lb)

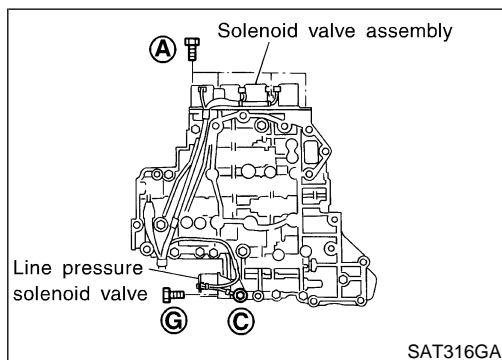


- b. Install solenoid valve assembly and line pressure solenoid valve to lower body.

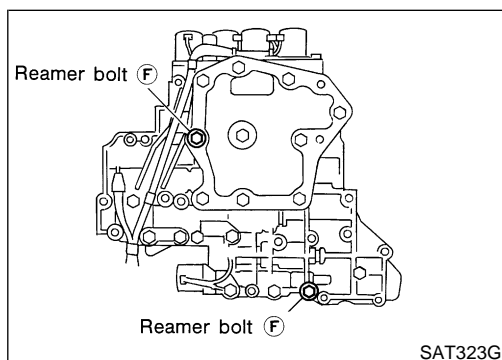


- c. Remove reamer bolts **F** and set oil strainer on control valve assembly.
- d. Reinstall reamer bolts **F** from lower body side.

REPAIR FOR COMPONENT PARTS

Control Valve Assembly (Cont'd)

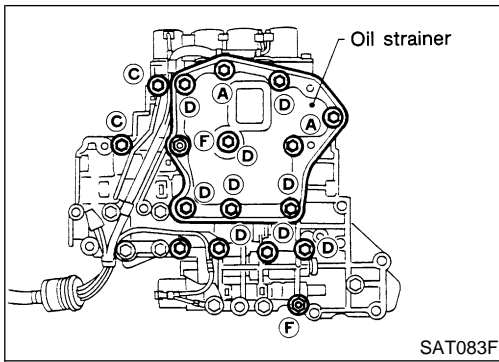

- e. Tighten bolts A, C, D and F to specified torque.
🔩 : 7 - 9 N·m (0.7 - 0.9 kg·m, 61 - 78 in·lb)

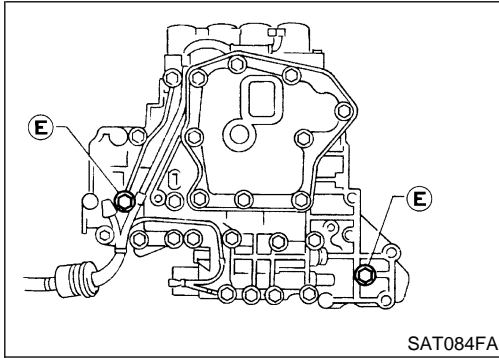

- f. Tighten bolts E to specified torque.
🔩 : 3.4 - 4.4 N·m (0.35 - 0.45 kg·m, 30.4 - 39.1 in·lb)

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

REPAIR FOR COMPONENT PARTS


Control Valve Upper Body

Control Valve Upper Body

COMPONENTS

Numbers preceding valve springs correspond with those shown in "CONTROL VALVE AND PLUG RETURN SPRINGS" table on page AT-380. =NIAT0258

SEC. 317

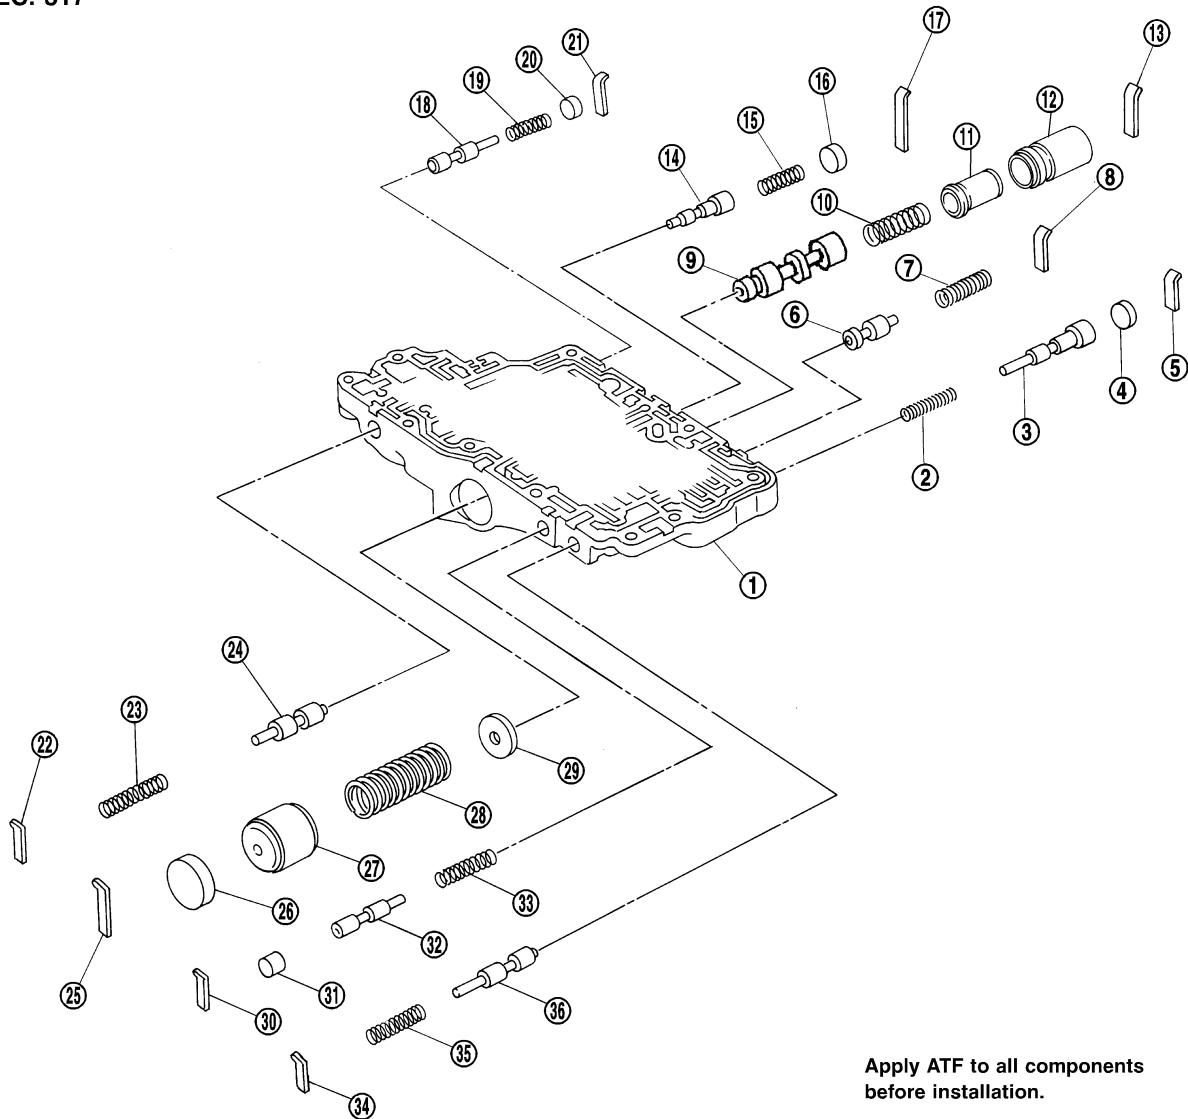

Apply ATF to all components before installation.


WAT250

- | | | |
|------------------------------------------|----------------------------------|------------------------------------|
| 1. Control valve upper body | 12. Sleeve | 25. Retainer plate |
| 2. Overrun clutch reducing valve spring | 13. Retainer plate | 26. Plug |
| 3. Overrun clutch reducing valve | 14. 1-2 accumulator valve | 27. 1-2 accumulator piston |
| 4. Plug | 15. 1-2 accumulator valve spring | 28. 1-2 accumulator piston spring |
| 5. Retainer plate | 16. Plug | 29. 1-2 accumulator retainer plate |
| 6. Torque converter relief valve | 17. Retainer plate | 30. Retainer plate |
| 7. Torque converter relief valve spring | 18. Cooler check valve | 31. Plug |
| 8. Retainer plate | 19. Cooler check valve spring | 32. 1st reducing valve |
| 9. Torque converter clutch control valve | 20. Plug | 33. 1st reducing valve spring |
| 10. Return spring | 21. Retainer plate | 34. Retainer plate |
| 11. Plug | 22. Retainer plate | 35. Return spring |
| | 23. Pilot valve spring | 36. 3-2 timing valve spring |
| | 24. Pilot valve | |

REPAIR FOR COMPONENT PARTS

Control Valve Upper Body (Cont'd)


NIAT0259

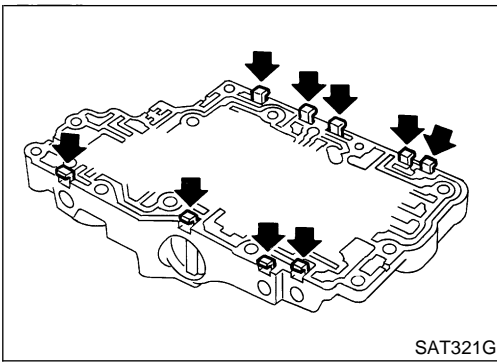

SAT321G


DISASSEMBLY

1. Remove valves at retainer plates.
 - Do not use a magnetic "hand".

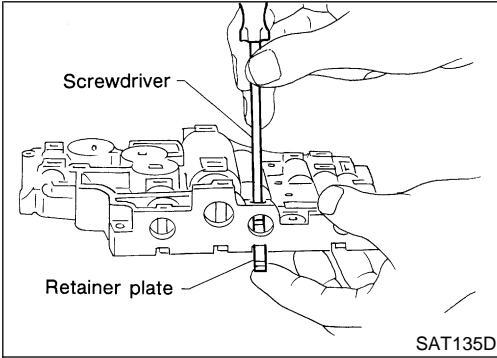


SAT135D

- a. Use a screwdriver to remove retainer plates.

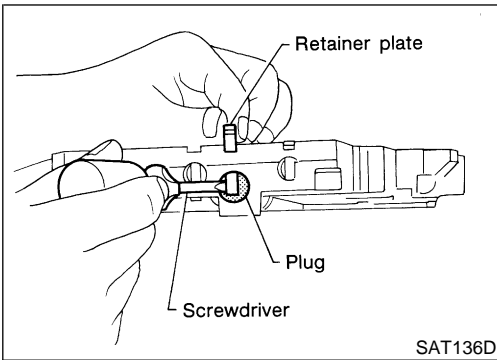


SAT136D

- b. Remove retainer plates while holding spring, plugs or sleeves.
 - Remove plugs slowly to prevent internal parts from jumping out.

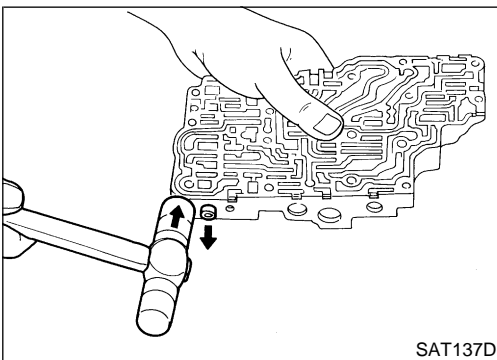

SAT137D

- c. Place mating surface of valve body face down, and remove internal parts.
 - If a valve is hard to remove, place valve body face down and lightly tap it with a soft hammer.
 - Be careful not to drop or damage valves and sleeves.

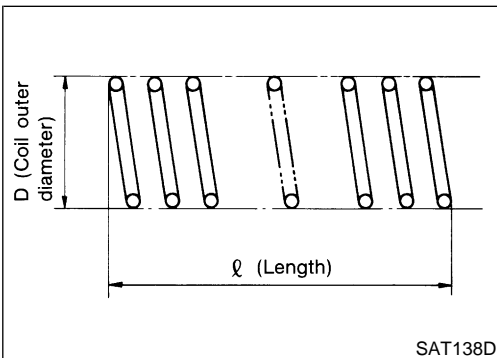

SAT138D

INSPECTION

Valve Spring

- Measure free length and outer diameter of each valve spring. Also check for damage or deformation.

Inspection standard:

Refer to "CONTROL VALVE AND PLUG RETURN SPRINGS", AT-380.

- Replace valve springs if deformed or fatigued.

Control Valves

- Check sliding surfaces of valves, sleeves and plugs.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC


EL

IDX

NIAT0260S02


REPAIR FOR COMPONENT PARTS

Control Valve Upper Body (Cont'd)

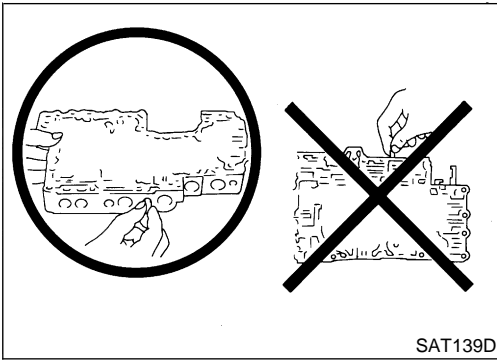


ASSEMBLY


- Lay control valve body down when installing valves. Do not stand the control valve body upright. NIAT0261

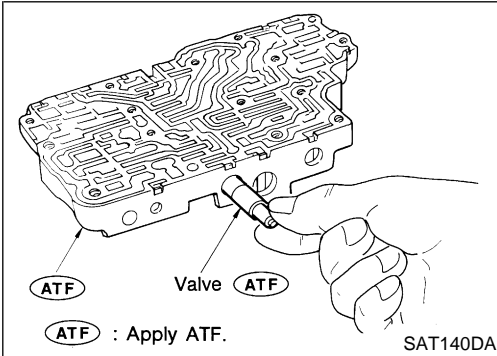

1. Lubricate the control valve body and all valves with ATF. Install control valves by sliding them carefully into their bores.
- Be careful not to scratch or damage valve body.

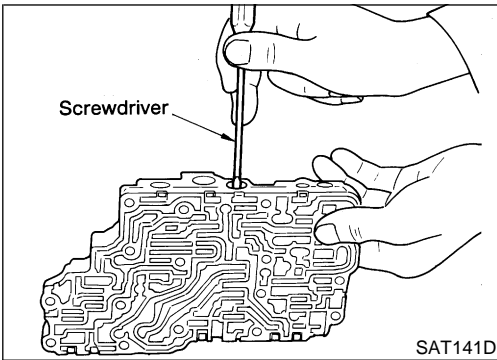


- Wrap a small screwdriver with vinyl tape and use it to insert the valves into their proper positions.

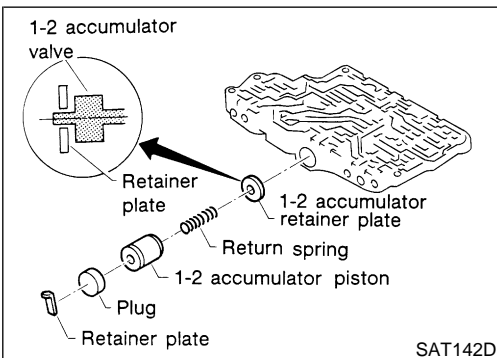

1-2 Accumulator Valve


- Install 1-2 accumulator valve. Align 1-2 accumulator retainer plate from opposite side of control valve body. NIAT0261S01
- Install return spring, 1-2 accumulator piston and plug.

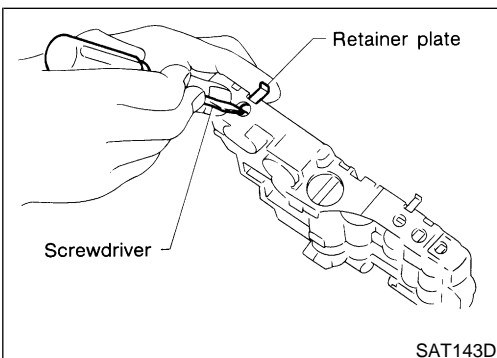

1. Install retainer plates.
- Install retainer plate while pushing plug or return spring.

REPAIR FOR COMPONENT PARTS

Control Valve Upper Body (Cont'd)

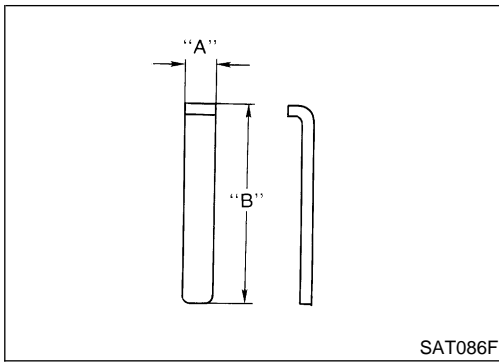

Retainer Plate (for control valve upper body)

NIAT0261S02

Refer to "Control Valve Upper Body", AT-312.

Unit: mm (in)

Name of valve and piston	No.	Width A	Length B
Pilot valve	22	6.0 (0.236)	21.5 (0.846)
1-2 accumulator valve	17		40.5 (1.594)
1-2 accumulator piston	25		21.5 (0.846)
1st reducing valve	30		24.0 (0.945)
Overrun clutch reducing valve	5		21.5 (0.846)
Torque converter relief valve	8		28.0 (1.102)
Torque converter clutch control valve	13		21.5 (0.846)
3-2 timing valve	34		24.0 (0.945)
Cooler check valve	21		

- Install proper retainer plates.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

REPAIR FOR COMPONENT PARTS


Control Valve Lower Body

Control Valve Lower Body

COMPONENTS

Numbers preceding valve springs correspond with those shown in "CONTROL VALVE AND PLUG RETURN SPRINGS" table on page AT-380. =NIAT0262

SEC. 317

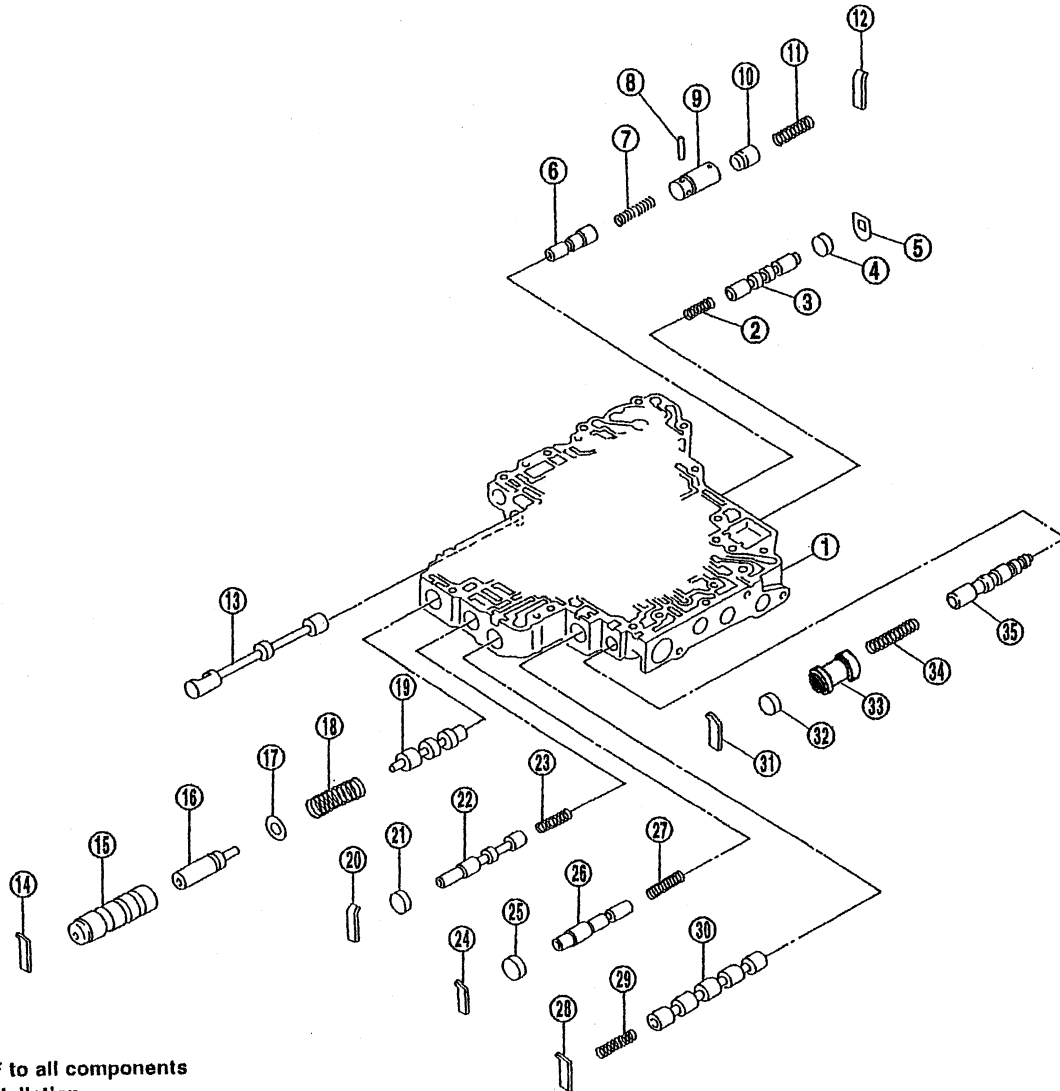


Apply ATF to all components before installation.

WAT251

- | | | |
|------------------------------------|-----------------------------------------|--------------------------------------|
| 1. Control valve lower body | 13. Manual valve | 25. Plug |
| 2. Shift valve B spring | 14. Retainer plate | 26. Accumulator control valve |
| 3. Shift valve B | 15. Sleeve | 27. Accumulator control valve spring |
| 4. Plug | 16. Plug | 28. Retainer plate |
| 5. Retainer plate | 17. Spring seat | 29. Shift valve A spring |
| 6. Pressure modifier valve | 18. Pressure regulator valve spring | 30. Shift valve A |
| 7. Pressure modifier valve spring | 19. Pressure regulator valve | 31. Retainer plate |
| 8. Parallel pin | 20. Retainer plate | 32. Plug |
| 9. Sleeve | 21. Plug | 33. Plug |
| 10. Piston | 22. Overrun clutch control valve | 34. Shuttle control valve spring |
| 11. Pressure modifier valve spring | 23. Overrun clutch control valve spring | 35. Shuttle control valve |
| 12. Retainer plate | 24. Retainer plate | |

REPAIR FOR COMPONENT PARTS

Control Valve Lower Body (Cont'd)

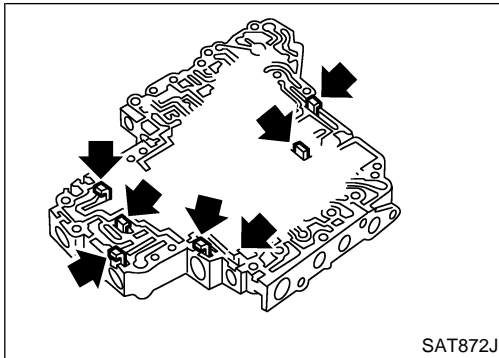

DISASSEMBLY

Remove valves at retainer plate.
For removal procedures, refer to "DISASSEMBLY", AT-304.


NIAT0263

GI

MA

EM

LC

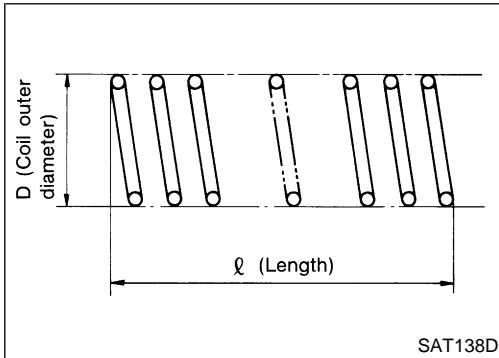

INSPECTION

Valve Springs

- Check each valve spring for damage or deformation. Also measure free length and outer diameter.

Inspection standard:

Refer to "CONTROL VALVE AND PLUG RETURN SPRINGS", AT-380.

- Replace valve springs if deformed or fatigued.

Control Valves

- Check sliding surfaces of control valves, sleeves and plugs for damage.

NIAT0264

NIAT0264S01

EC

FE

CL


MT

AT

AX

SU

BR

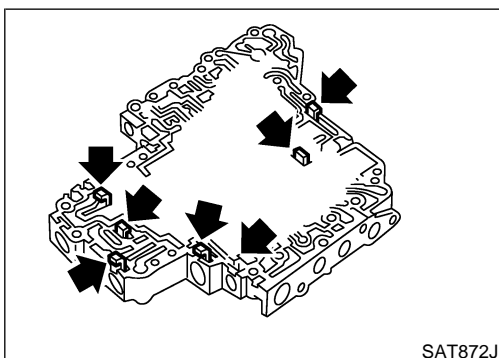

ASSEMBLY

- Install control valves.
For installation procedures, refer to "ASSEMBLY", AT-307.


NIAT0265

ST

RS

BT

HA

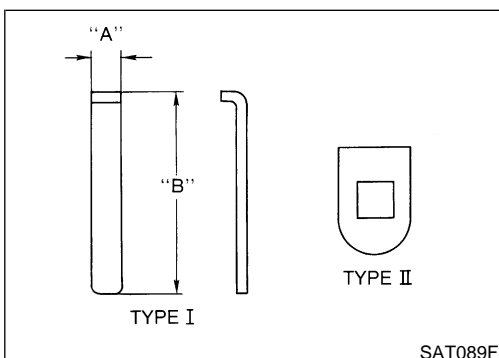

Retainer Plate (for control valve lower body)

Refer to "Control Valve Lower Body", AT-316.

NIAT0265S01

SC

EL

IDX

REPAIR FOR COMPONENT PARTS

Control Valve Lower Body (Cont'd)


Unit: mm (in)

Name of control valve	No.	Width A	Length B	Type
Pressure regulator valve	14	6.0 (0.236)	28.0 (1.102)	I
Accumulator control valve	24			
Shift valve A	28			
Overrun clutch control valve	20			
Pressure modifier valve	12			
Shuttle control valve	31	—	—	II
Shift valve B	5			




- Install proper retainer plates.

Reverse Clutch COMPONENTS

=NIAT0266

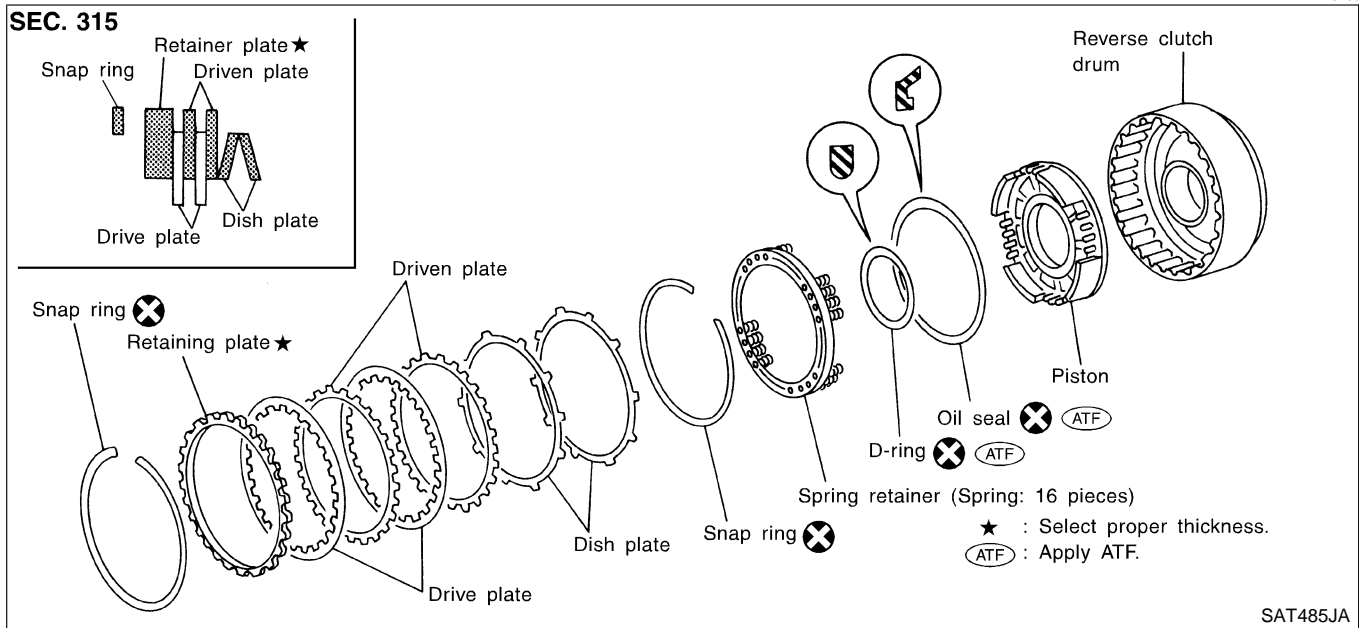

GI
MA
EM
LC
EC
FE
CL
MT

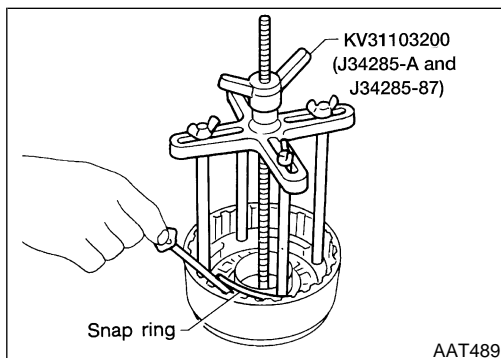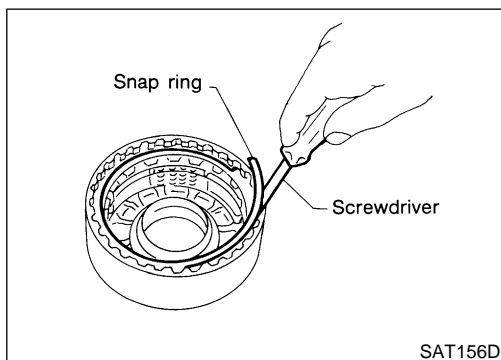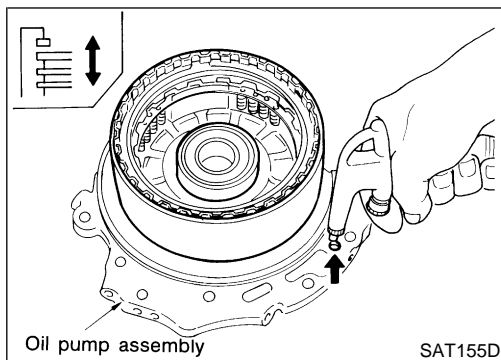

DISASSEMBLY


NIAT0267

1. Check operation of reverse clutch.
 - a. Install seal ring onto drum support of oil pump cover and install reverse clutch assembly. Apply compressed air to oil hole.
 - b. Check to see that retaining plate moves to snap ring.
 - c. If retaining plate does not contact snap ring:
 - D-ring might be damaged.
 - Oil seal might be damaged.
 - Fluid might be leaking past piston check ball.
2. Remove snap ring.
3. Remove drive plates, driven plates, retaining plate, and dish plates.
4. Set Tool on spring retainer and remove snap ring from reverse clutch drum while compressing return springs.
 - **Set Tool directly above springs.**
 - **Do not expand snap ring excessively.**
5. Remove spring retainer and return springs.


AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

REPAIR FOR COMPONENT PARTS


Reverse Clutch (Cont'd)

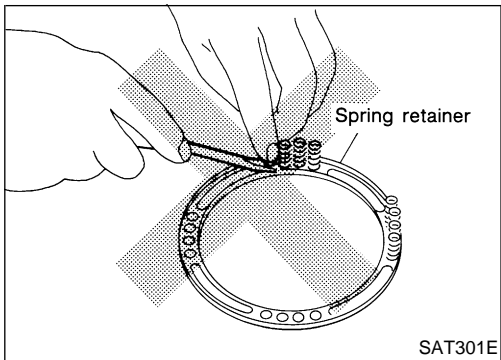

- Do not remove return springs from spring retainer.

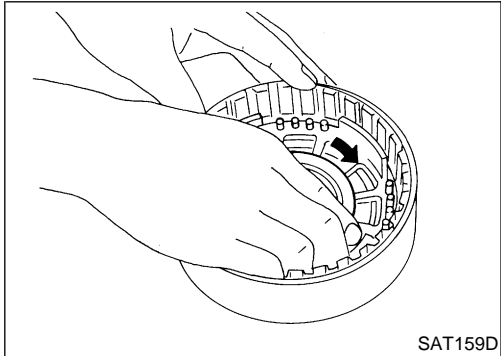

6. Remove piston from reverse clutch drum by turning it.

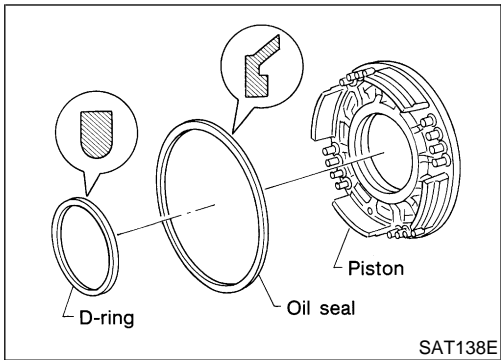


7. Remove D-ring and oil seal from piston.

INSPECTION

Reverse Clutch Snap Ring, Spring Retainer and Return Springs NIAT0268

- Check for deformation, fatigue or damage. NIAT0268S01
- Replace if necessary.
- **When replacing spring retainer and return springs, replace them as a set.**

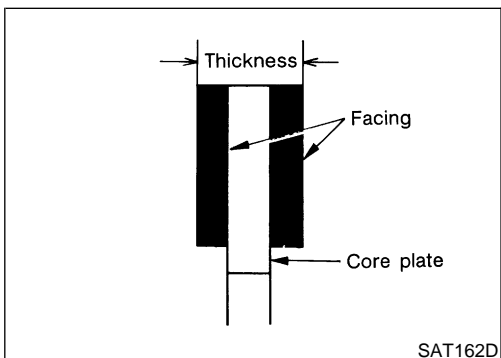


Reverse Clutch Drive Plates NIAT0268S02

- Check facing for burns, cracks or damage.
- Measure thickness of facing.
 - Thickness of drive plate:**
 - Standard value: 2.0 mm (0.079 in)**
 - Wear limit: 1.8 mm (0.071 in)**
- If not within wear limit, replace.

REPAIR FOR COMPONENT PARTS

Reverse Clutch (Cont'd)

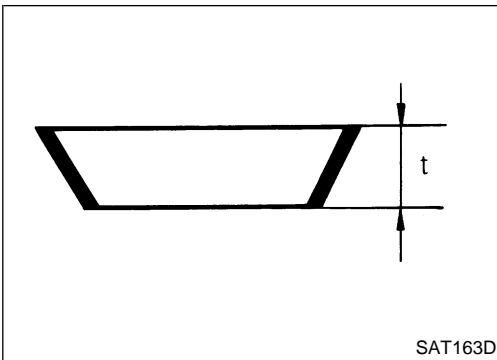

Reverse Clutch Dish Plates

NIAT0268S03


- Check for deformation or damage.
- Measure thickness of dish plate.
Thickness of dish plate "t": 2.8 mm (0.110 in)
- If deformed or fatigued, replace.

GI

MA

EM

LC

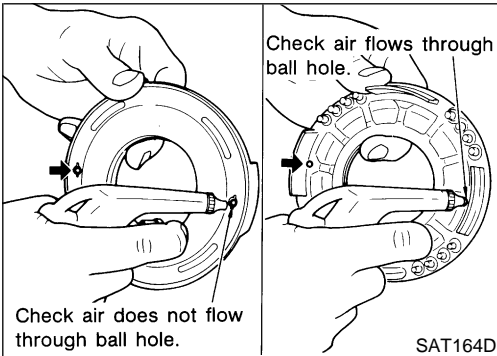

Reverse Clutch Piston

NIAT0268S04


- Make sure check balls are not fixed.
- Apply compressed air to check ball oil hole opposite the return spring. Make sure that there is no air leakage.
- Apply compressed air to oil hole on return spring side to make sure air leaks past ball.

EC

FE

CL

MT

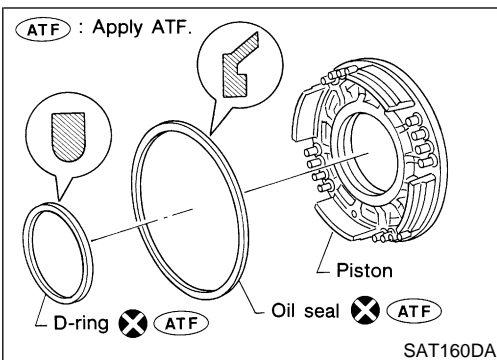

ASSEMBLY

NIAT0269


1. Install D-ring and oil seal on piston.
 - Take care with the direction of the oil seal.
 - Apply ATF to both parts.

AT

AX

SU

BR

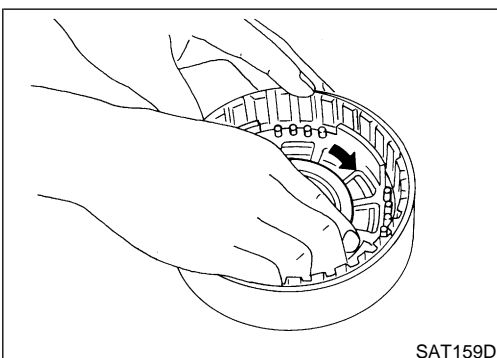


2. Install piston assembly by turning it slowly.
 - Apply ATF to inner surface of drum.

ST

RS

BT

HA

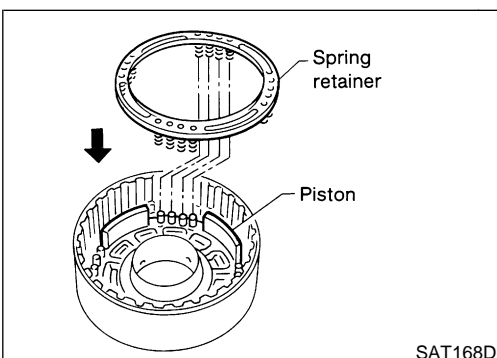

3. Install return springs and spring retainer on piston.
Return spring:
Refer to "Clutch and Brake Return Spring", AT-382.


SC

EL


IDX

REPAIR FOR COMPONENT PARTS


Reverse Clutch (Cont'd)

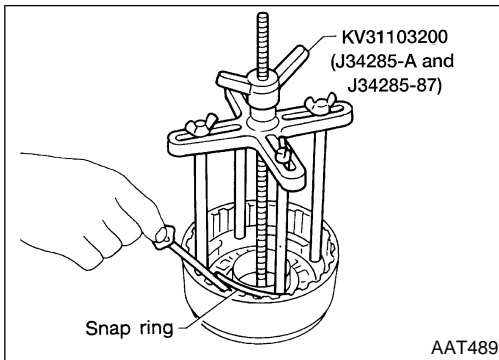


4. Set Tool on spring retainer and install snap ring while compressing return springs.
 - **Set Tool directly above return springs.**

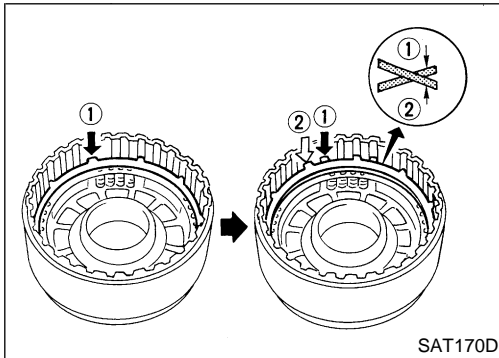

5. Install drive plates, driven plates, retaining plate and dish plates.
 - **Do not align the projections of any two dish plates.**
 - **Take care with the order and direction of plates.**

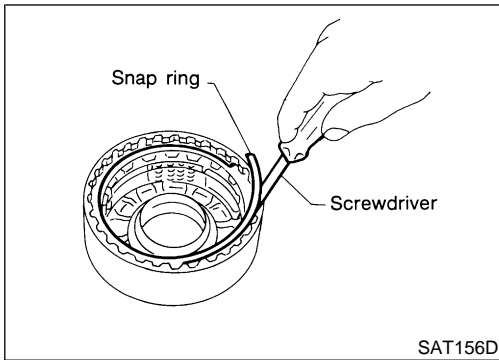

6. Install snap ring.

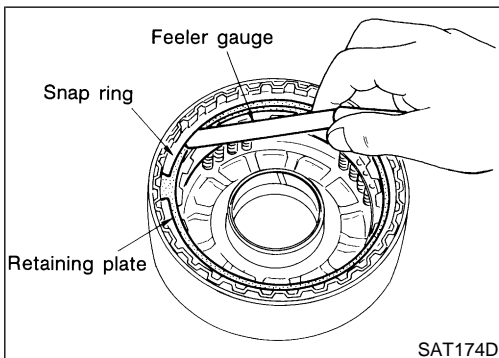


7. Measure clearance between retaining plate and snap ring. If not within allowable limit, select proper retaining plate.

Specified clearance:

Standard: 0.5 - 0.8 mm (0.020 - 0.031 in)

Allowable limit: 1.2 mm (0.047 in)

Retaining plate: Refer to "REVERSE CLUTCH", AT-380.

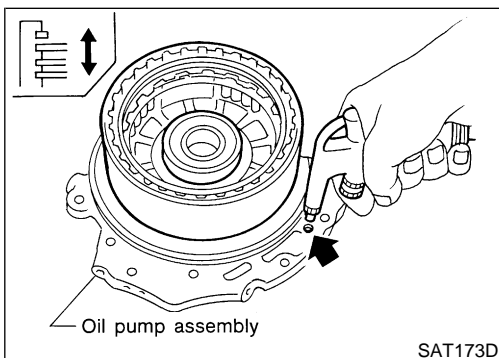


8. Check operation of reverse clutch. Refer to "Reverse Clutch", AT-319.

High Clutch COMPONENTS


=NIAT0270

SEC. 315

For the number of clutch sheets (drive plates and driven plates), refer to the below cross-section.

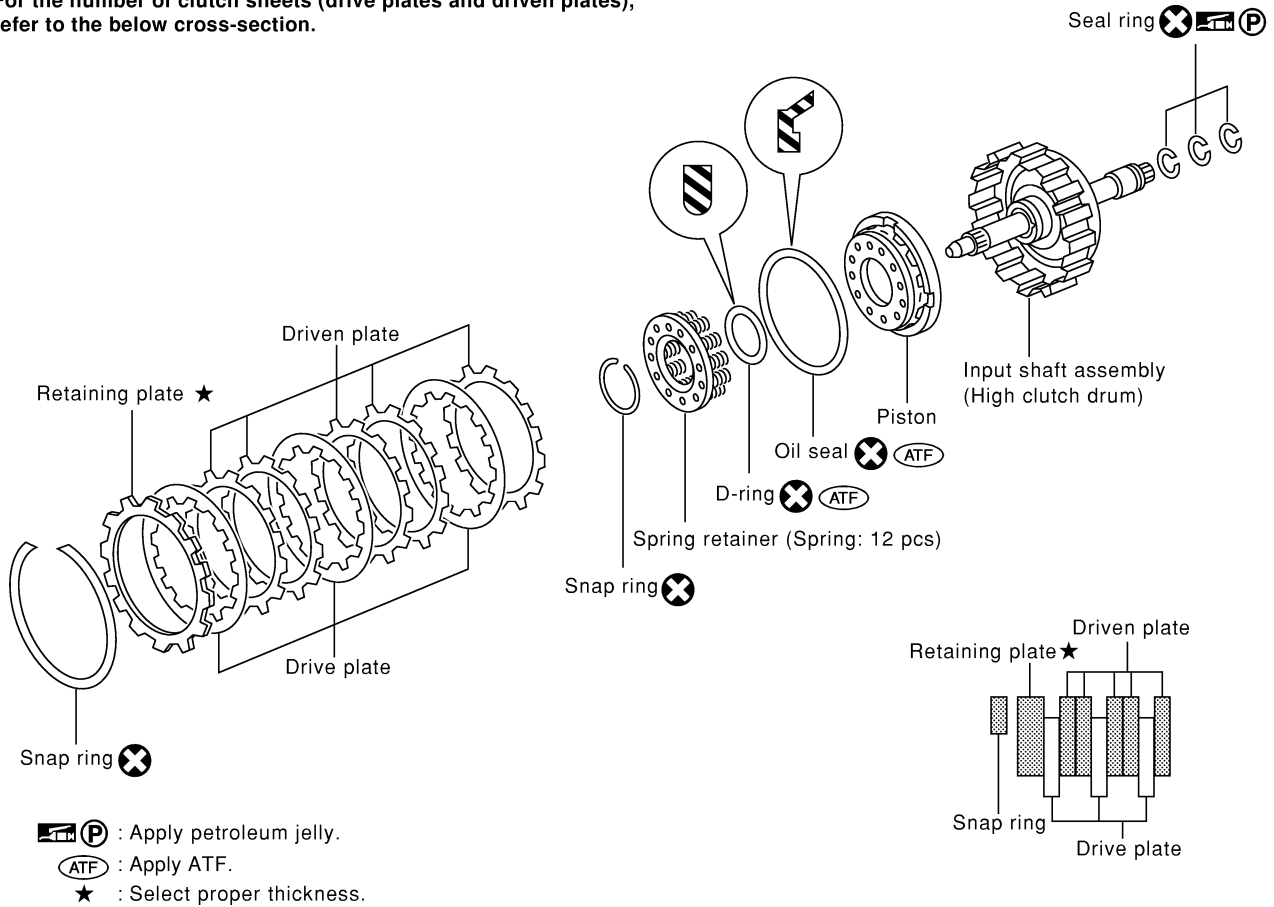


SAT874J

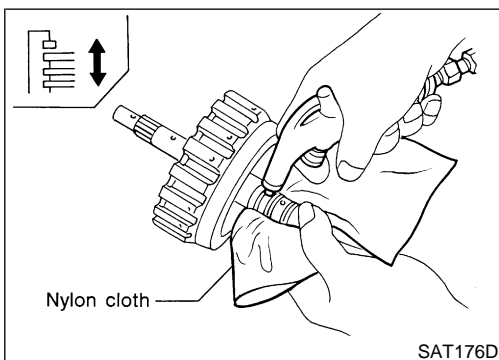

DISASSEMBLY

NIAT0271






- Check operation of high clutch.
 - Apply compressed air to oil hole of input shaft.
 - **Stop up a hole on opposite side of input shaft.**
 - Check to see that retaining plate moves to snap ring.
 - If retaining plate does not contact snap ring:
 - D-ring might be damaged.
 - Oil seal might be damaged.
 - Fluid might be leaking past piston check ball.
- Remove seal rings from input shaft.

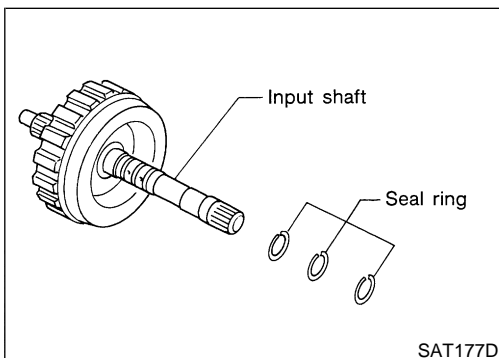

GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

REPAIR FOR COMPONENT PARTS

High Clutch (Cont'd)

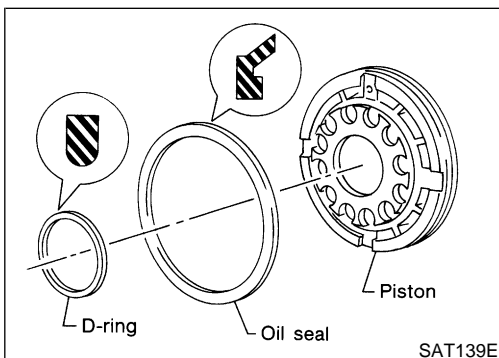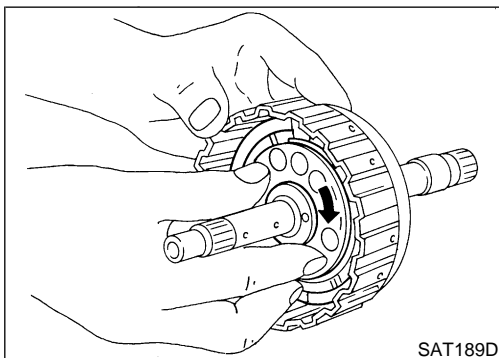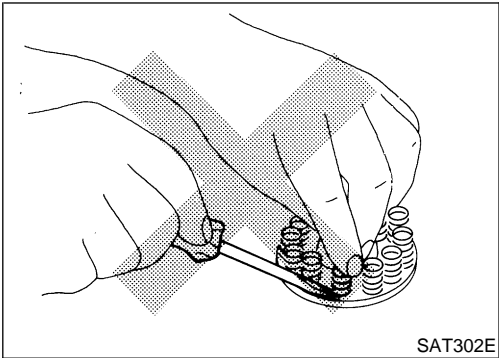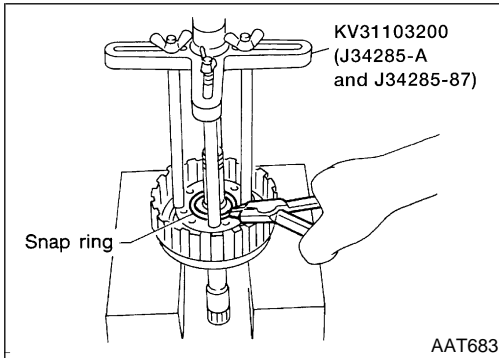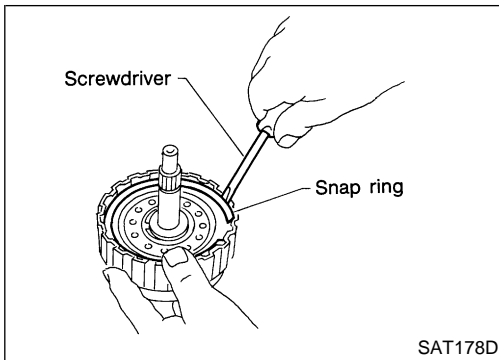

3. Remove snap ring.
4. Remove drive plates, driven plates and retaining plate.

5. Set Tool on spring retainer and remove snap ring from high clutch drum while compressing return springs.
 - **Set Tool directly above springs.**
 - **Do not expand snap ring excessively.**
6. Remove spring retainer and return springs.

- **Do not remove return spring from spring retainer.**

7. Remove piston from high clutch drum by turning it.

8. Remove D-ring and oil seal from piston.


INSPECTION

Reverse Clutch Snap Ring, Spring Retainer and Return Springs

NIAT0272
NIAT0272S01

- Check for deformation, fatigue or damage.
- Replace if necessary.
- **When replacing spring retainer and return springs, replace them as a set.**

GI
MA
EM

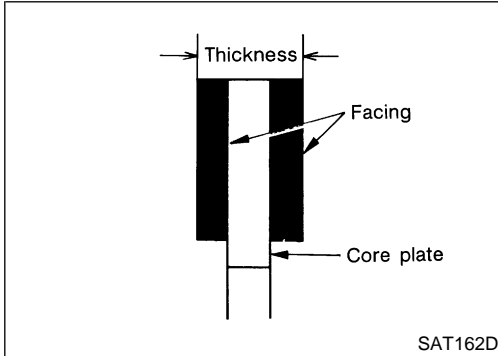

High Clutch Drive Plates

NIAT0272S02

- Check facing for burns, cracks or damage.
- Measure thickness of facing.


Thickness of drive plate:

Standard value: 2.0 mm (0.079 in)

Wear limit: 1.8 mm (0.071 in)

- If not within wear limit, replace.

LC
EC
FE
CL

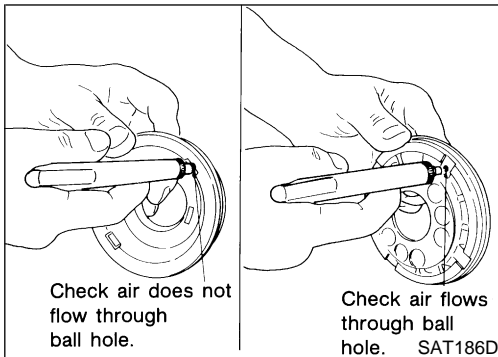


High Clutch Piston

NIAT0272S03

- Make sure check balls are not fixed.
- Apply compressed air to check ball oil hole opposite the return spring. Make sure there is no air leakage.
- Apply compressed air to oil hole on return spring side to make sure air leaks past ball.

AT
AX
SU
BR

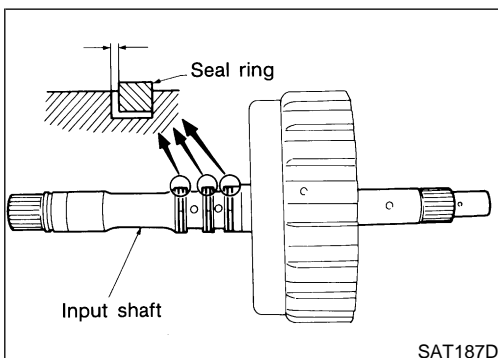

Seal Ring Clearance

NIAT0272S04

- Install new seal rings onto input shaft.
- Measure clearance between seal ring and ring groove.

Standard clearance:


0.08 - 0.23 mm (0.0031 - 0.0091 in)

Allowable limit:

0.23 mm (0.0091 in)

- If not within wear limit, replace input shaft assembly.

ST
RS
BT
HA

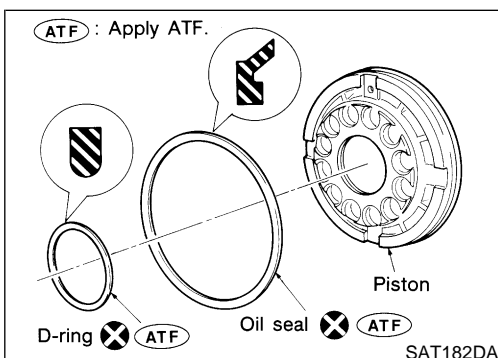

ASSEMBLY


NIAT0273

1. Install D-ring and oil seal on piston.
- **Take care with the direction of the oil seal.**
 - **Apply ATF to both parts.**


SC
EL
IDX

REPAIR FOR COMPONENT PARTS


High Clutch (Cont'd)

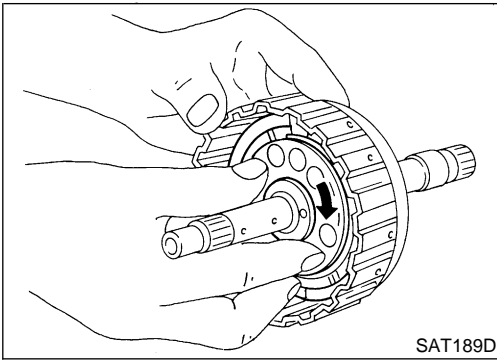


2. Install piston assembly by turning it slowly.
 - Apply ATF to inner surface of drum.

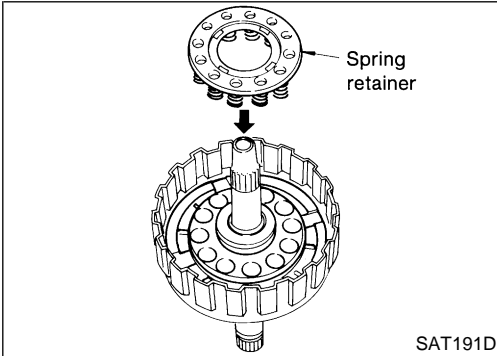


3. Install return springs and spring retainer on piston.
Return spring:
Refer to "Clutch and Brake Return Spring", AT-382.

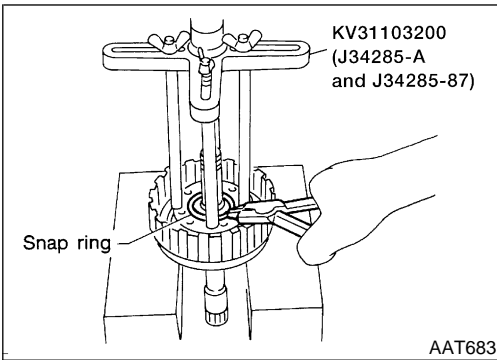

4. Set Tool on spring retainer and install snap ring while compressing return springs.
 - Set Tool directly above return springs.

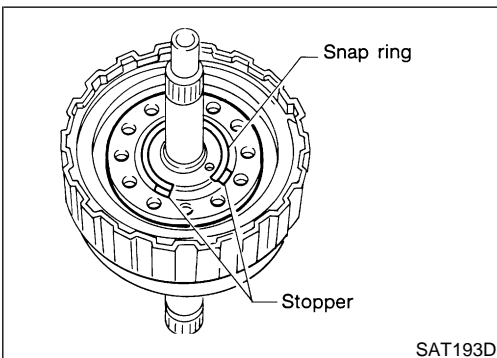


- Do not align snap ring gap with spring retainer stopper.

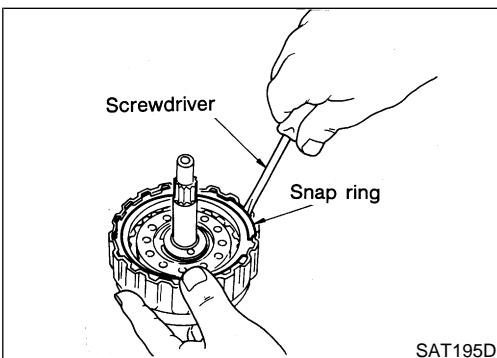

5. Install drive plates, driven plates and retaining plate.
Take care with the order and direction of plates.
6. Install snap ring.

REPAIR FOR COMPONENT PARTS

High Clutch (Cont'd)

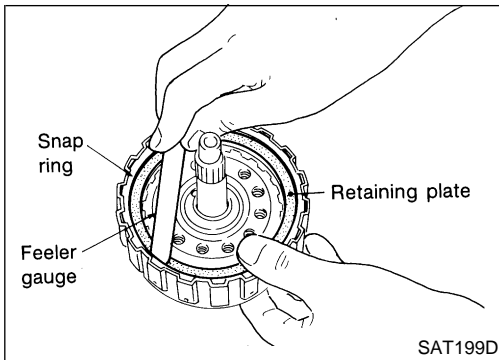

7. Measure clearance between retaining plate and snap ring. If not within allowable limit, select proper retaining plate.

Specified clearance:

Standard: 1.4 - 1.8 mm (0.055 - 0.071 in)

Allowable limit: 2.4 mm (0.094 in)

Retaining plate:


Refer to "HIGH CLUTCH", AT-381.

GI

MA

EM

LC

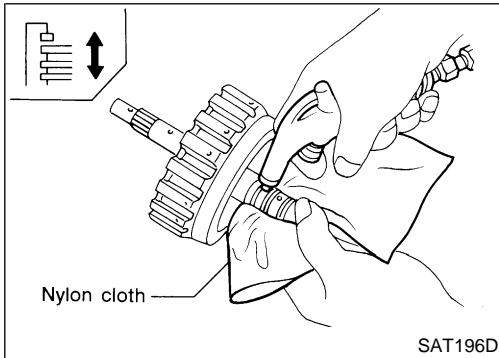


8. Check operation of high clutch. Refer to "High Clutch", AT-323.

EC

FE

CL

MT

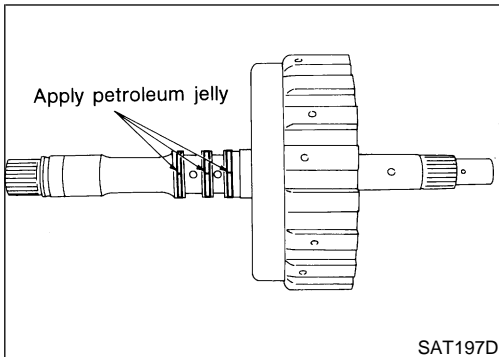

9. Install seal rings to input shaft.


- **Apply petroleum jelly to seal rings.**

AT

AX

SU

BR

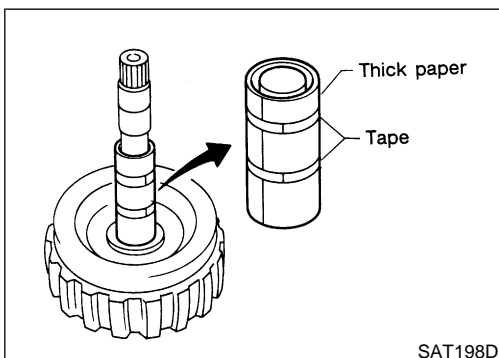

- **Roll paper around seal rings to prevent seal rings from spreading.**

ST

RS

BT

HA

SC

EL




IDX

REPAIR FOR COMPONENT PARTS

Forward Clutch and Overrun Clutch

Forward Clutch and Overrun Clutch COMPONENTS

NIAT0274

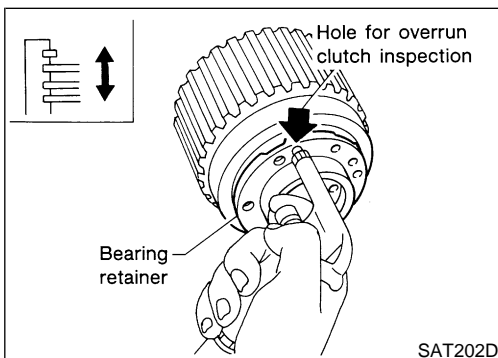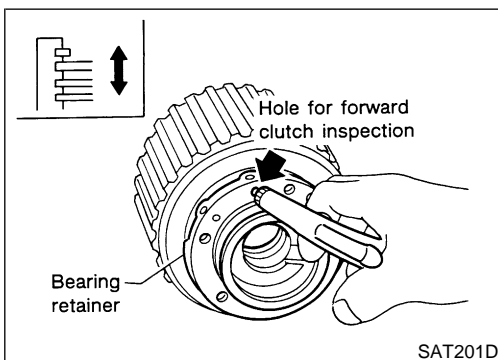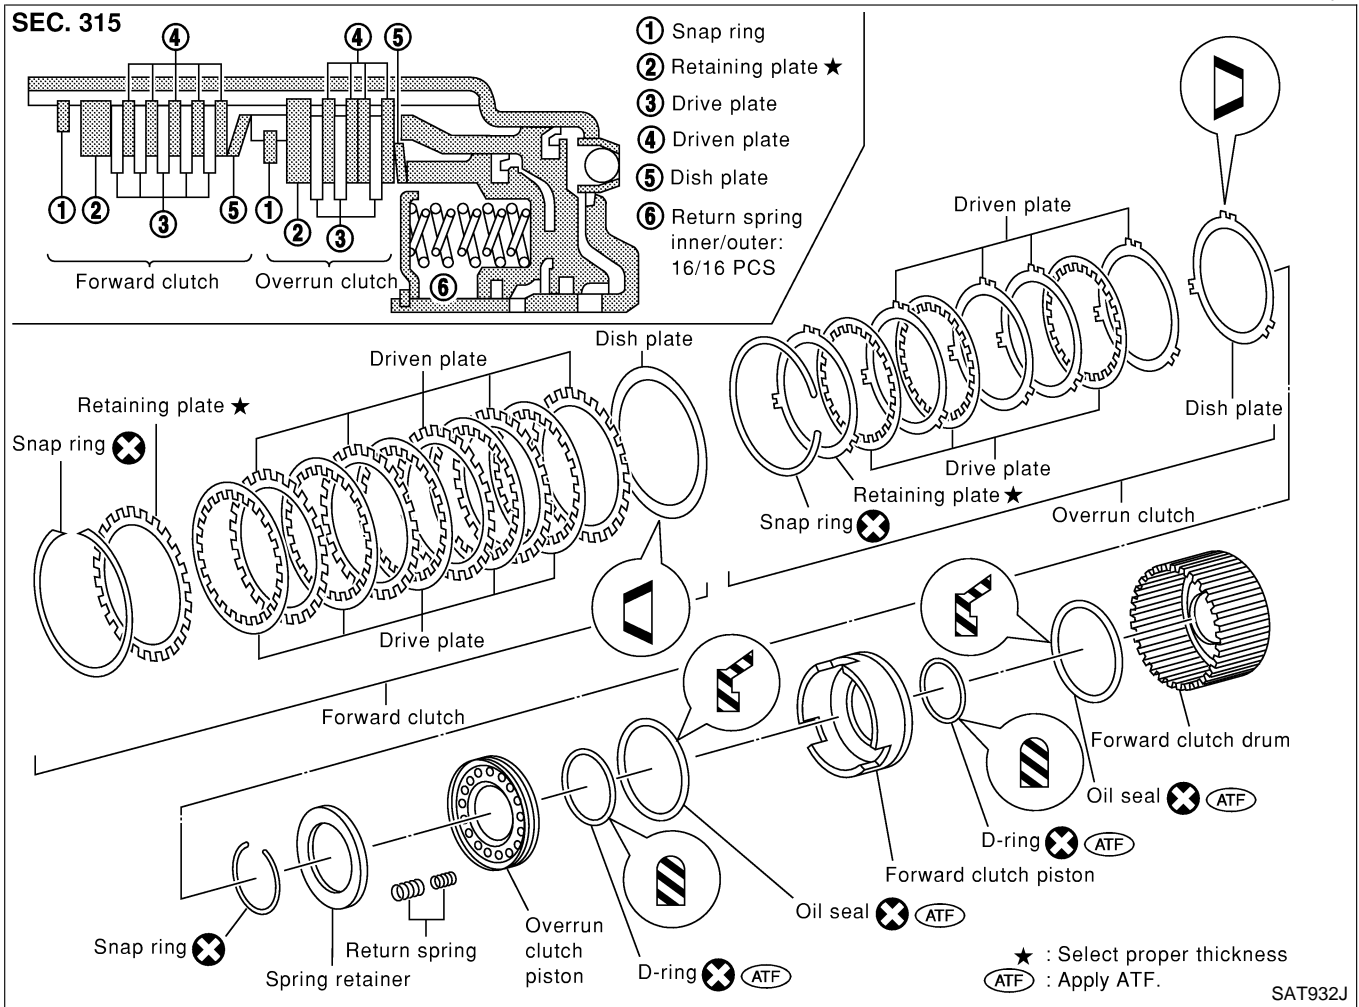


DISASSEMBLY

NIAT0275

1. Check operation of forward clutch and overrun clutch.
 - a. Install bearing retainer on forward clutch drum.
 - b. Apply compressed air to oil hole of forward clutch drum.
 - c. Check to see that retaining plate moves to snap ring.
- d. If retaining plate does not contact snap ring:
 - D-ring might be damaged.
 - Oil seal might be damaged.
 - Fluid might be leaking past piston check ball.

REPAIR FOR COMPONENT PARTS

Forward Clutch and Overrun Clutch (Cont'd)

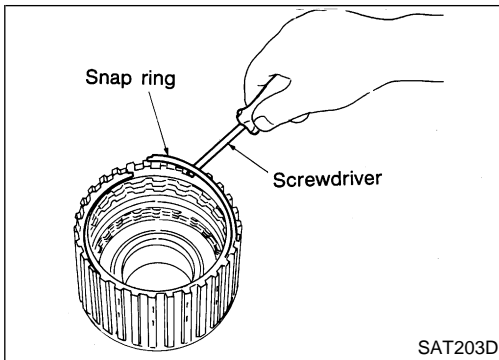


2. Remove snap ring for forward clutch.
3. Remove drive plates, driven plates, retaining plate and dish plate for forward clutch.

GI

MA

EM

LC

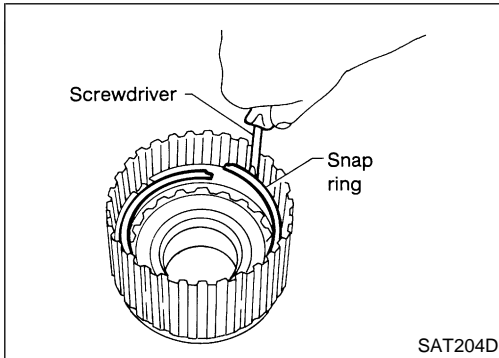


4. Remove snap ring for overrun clutch.
5. Remove drive plates, driven plates, retaining plate and dish plate for overrun clutch.

EC

FE

CL

MT

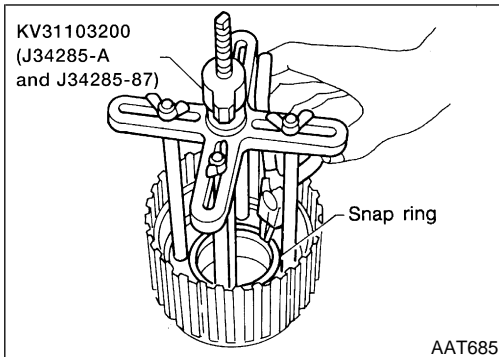

6. Set Tool on spring retainer and remove snap ring from forward clutch drum while compressing return springs.

AT


- **Set Tool directly above return springs.**
- **Do not expand snap ring excessively.**

AX

7. Remove spring retainer and return springs.

SU

BR

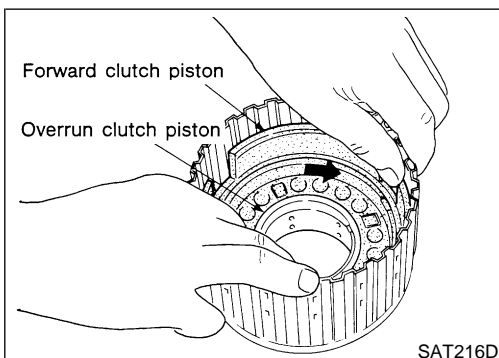


8. Remove forward clutch piston with overrun clutch piston from forward clutch drum by turning it.

ST

RS

BT

HA

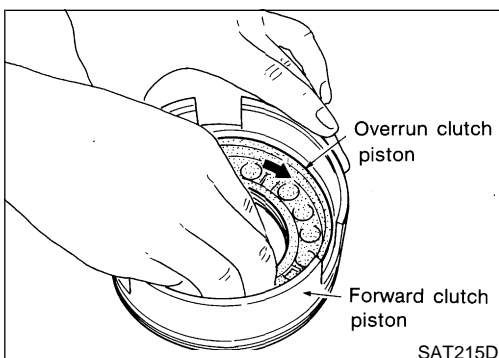

9. Remove overrun clutch piston from forward clutch piston by turning it.


SC

EL

IDX

REPAIR FOR COMPONENT PARTS

Forward Clutch and Overrun Clutch (Cont'd)

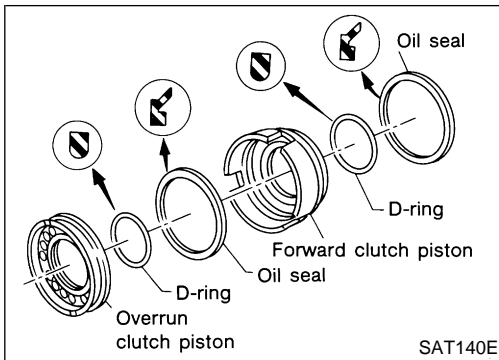

- Remove D-rings and oil seals from forward clutch piston and overrun clutch piston.


INSPECTION

Snap Rings and Spring Retainer

- Check for deformation, fatigue or damage.

NIAT0276

NIAT0276S01

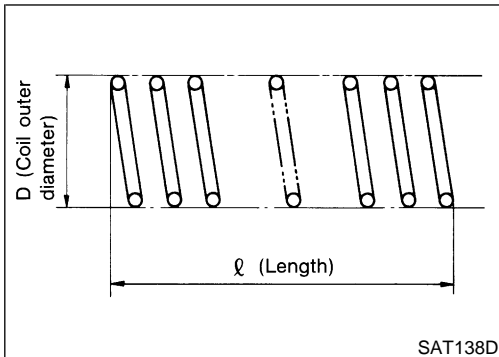

Forward Clutch and Overrun Clutch Return Springs


NIAT0276S02

- Check for deformation or damage.
- Measure free length and outer diameter.

Inspection standard:

Refer to "Clutch and Brake Return Springs", AT-382.

- Replace if deformed or fatigued.

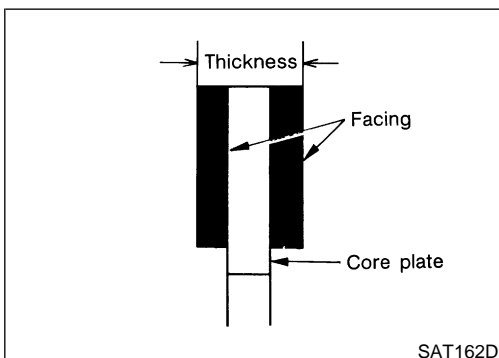

Forward Clutch and Overrun Clutch Drive Plates

NIAT0276S03

- Check facing for burns, cracks or damage.
- Measure thickness of facing.

Thickness of drive plate:

Forward clutch

Standard value: 1.8 mm (0.071 in)

Wear limit: 1.6 mm (0.063 in)

Overrun clutch


Standard value: 1.6 mm (0.063 in)

Wear limit: 1.4 mm (0.055 in)

- If not within wear limit, replace.

REPAIR FOR COMPONENT PARTS

Forward Clutch and Overrun Clutch (Cont'd)

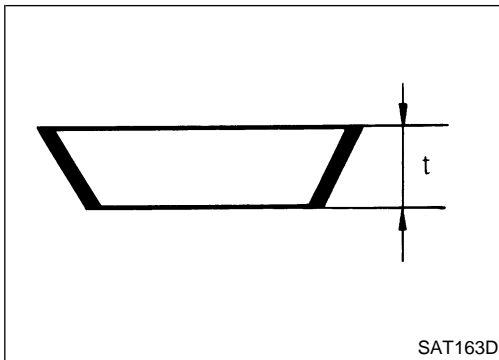

Forward Clutch and Overrun Clutch Dish Plates

NIAT0276S04

- Check for deformation or damage.
- Measure thickness of dish plate.

Thickness of dish plate "t":

Forward clutch: 2.5 mm (0.098 in)

Overrun clutch: 2.15 mm (0.0846 in)


- If deformed or fatigued, replace.

GI

MA

EM

LC

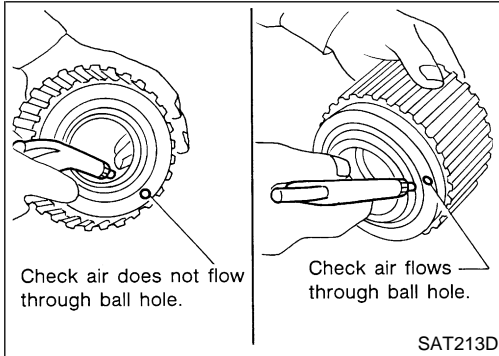

Forward Clutch Drum

NIAT0276S05


- Make sure check balls are not fixed.
- Apply compressed air to check ball oil hole from outside of forward clutch drum. Make sure air leaks past ball.
- Apply compressed air to oil hole from inside of forward clutch drum. Make sure there is no air leakage.

EC

FE

CL

MT

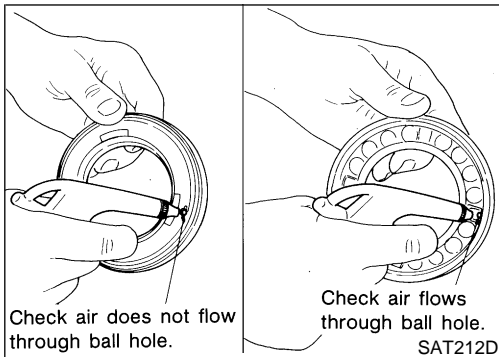

Overrun Clutch Piston

NIAT0276S06


- Make sure check balls are not fixed.
- Apply compressed air to check ball oil hole opposite the return spring. Make sure there is no air leakage.
- Apply compressed air to oil hole on return spring side. Make sure air leaks past ball.

AT

AX

SU

BR

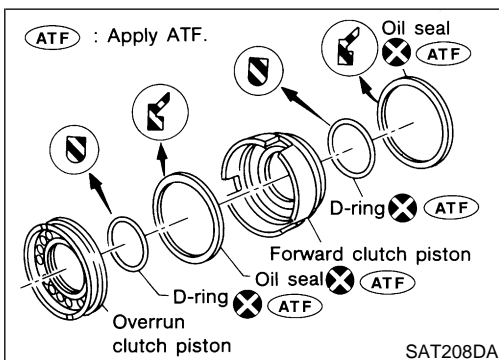

ASSEMBLY

NIAT0277

1. Install D-rings and oil seals on forward clutch piston and overrun clutch piston.


- Take care with direction of oil seal.
- Apply ATF to both parts.

ST

RS

BT

HA

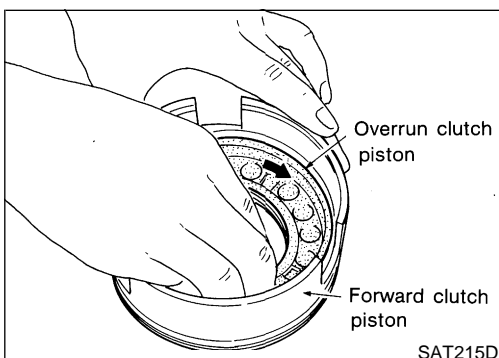

2. Install overrun clutch piston assembly on forward clutch piston while turning it slowly.

- Apply ATF to inner surface of forward clutch piston.


SC

EL


IDX

REPAIR FOR COMPONENT PARTS


Forward Clutch and Overrun Clutch (Cont'd)

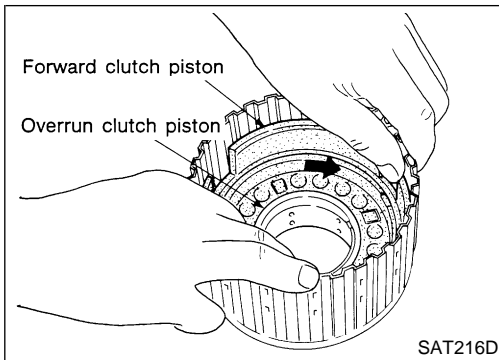


3. Install forward clutch piston assembly on forward clutch drum while turning it slowly.
 - **Apply ATF to inner surface of drum.**

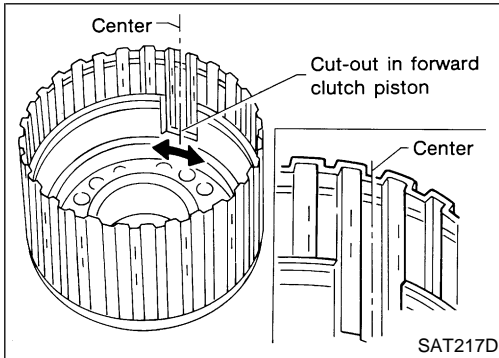


4. Align notch in forward clutch piston with groove in forward clutch drum.

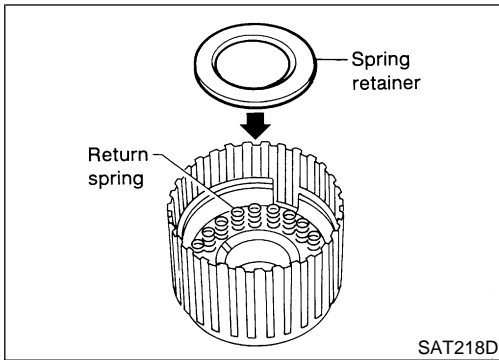

5. Install return spring on piston.
6. Install spring retainer on return springs.
Return spring:
Refer to "Clutch and Brake Return Spring", AT-382.

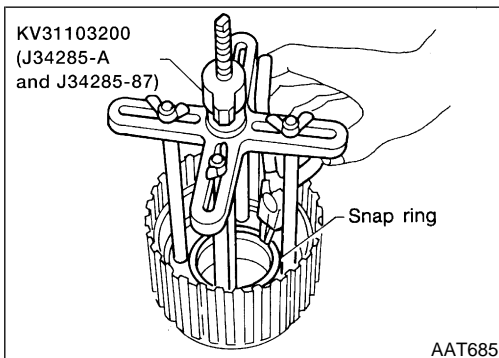


7. Set Tool on spring retainer and install snap ring while compressing return springs.
 - **Set Tool directly above return springs.**

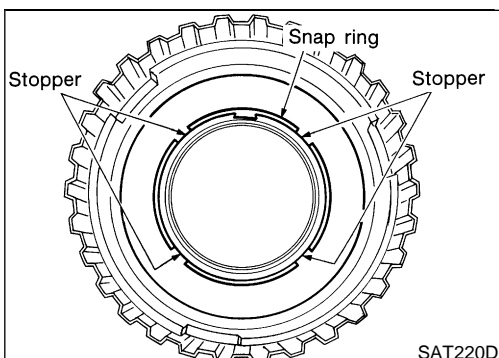

- **Do not align snap ring gap with spring retainer stopper.**

REPAIR FOR COMPONENT PARTS

Forward Clutch and Overrun Clutch (Cont'd)

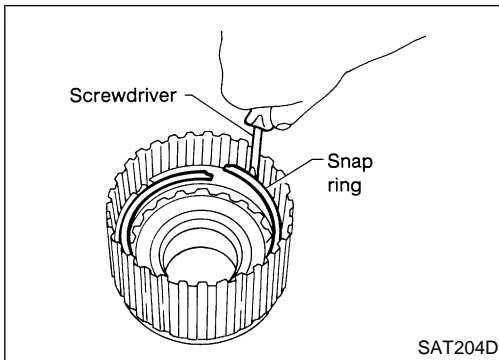


8. Install drive plates, driven plates, retaining plate and dish plate for overrun clutch.
9. Install snap ring for overrun clutch.

GI

MA

EM

LC

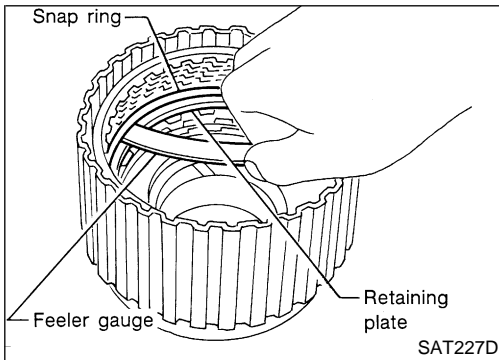

10. Measure clearance between overrun clutch retaining plate and snap ring.
If not within allowable limit, select proper retaining plate.

Specified clearance:

Standard: 1.0 - 1.4 mm (0.039 - 0.055 in)

Allowable limit: 2.0 mm (0.079 in)

Overrun clutch retaining plate:


Refer to "OVERRUN CLUTCH", AT-381.

EC

FE

CL

MT

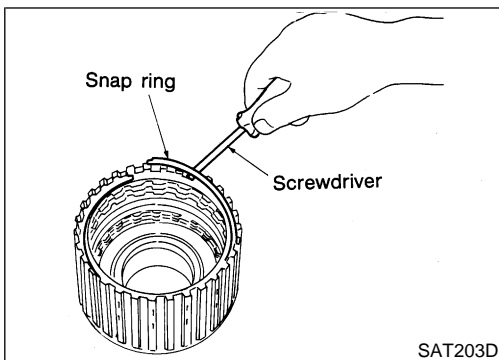

11. Install drive plates, driven plates, retaining plate and dish plate for forward clutch.

Take care with the order and direction of plates.


12. Install snap ring for forward clutch.

AT

AX

SU

BR

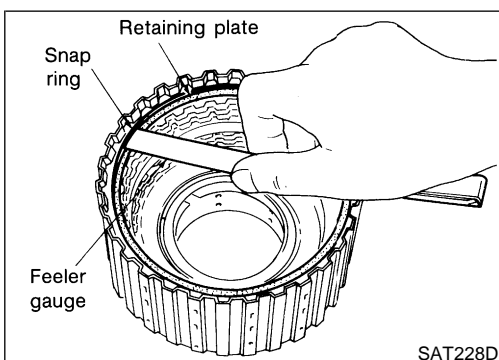

13. Measure clearance between forward clutch retaining plate and snap ring.

If not within allowable limit, select proper retaining plate.

Specified clearance:

Standard: 0.45 - 0.85 mm (0.0177 - 0.0335 in)

Allowable limit: 1.85 mm (0.0728 in)

Forward clutch retaining plate:


Refer to "FORWARD CLUTCH", AT-381.

ST

RS

BT

HA

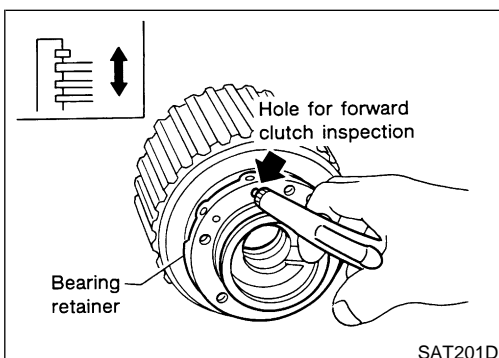

14. Check operation of forward clutch.

Refer to "Forward Clutch and Overrun Clutch", AT-328.


SC

EL

IDX

REPAIR FOR COMPONENT PARTS



Forward Clutch and Overrun Clutch (Cont'd)

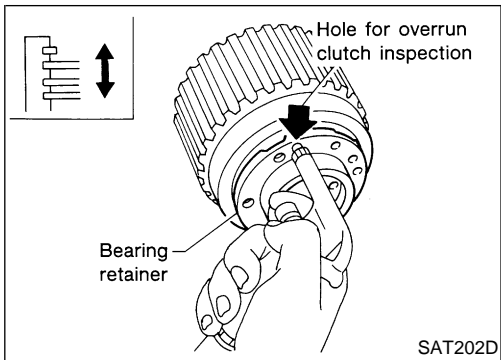

15. Check operation of overrun clutch.
Refer to "Forward Clutch and Overrun Clutch", AT-328.

Low & Reverse Brake COMPONENTS


=NIAT0278

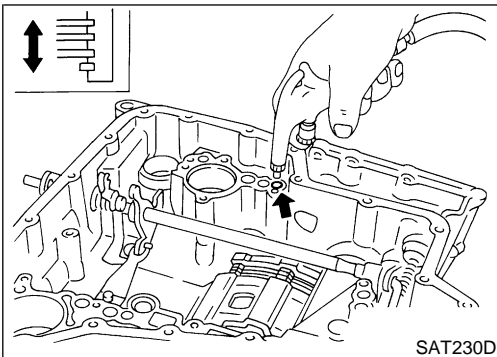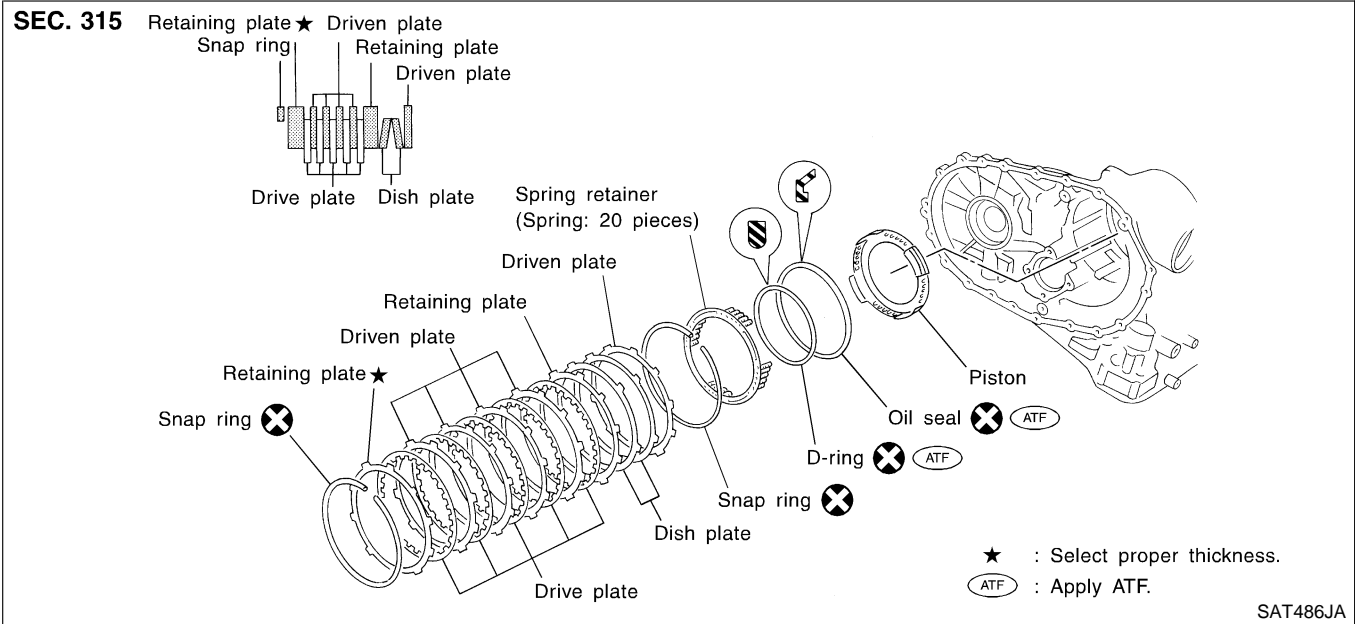


DISASSEMBLY

NIAT0279

1. Check operation of low & reverse brake.
 - a. Apply compressed air to oil hole of transmission case.
 - b. Check to see that retaining plate moves to snap ring.
 - c. If retaining plate does not contact snap ring:
 - D-ring might be damaged.
 - Oil seal might be damaged.
 - Fluid might be leaking past piston check ball.

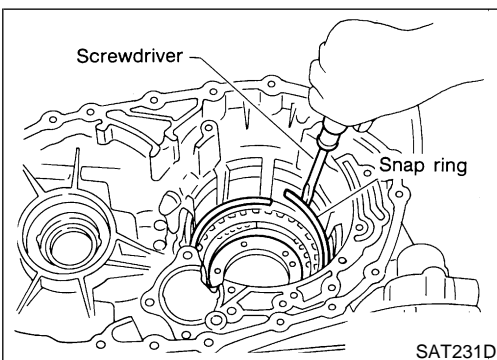

2. Stand transmission case.
3. Remove snap ring.
4. Remove drive plates, driven plates, retaining plate from transmission case.

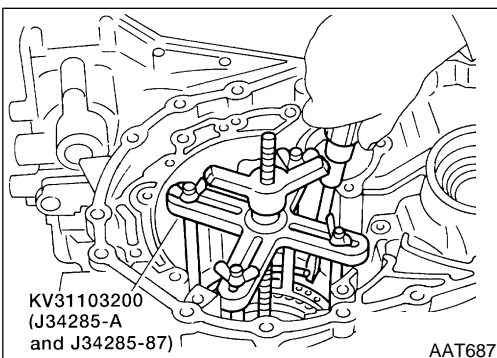

5. Set Tool on spring retainer and remove snap ring while compressing return springs.
 - **Set Tool directly above return springs.**
 - **Do not expand snap ring excessively.**
6. Remove spring retainer and return springs.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA


SC

EL


IDX

REPAIR FOR COMPONENT PARTS


Low & Reverse Brake (Cont'd)

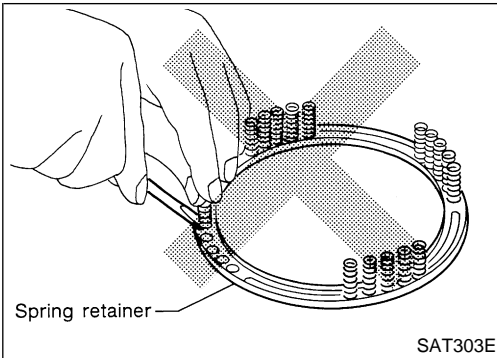

- Do not remove return springs from spring retainer.

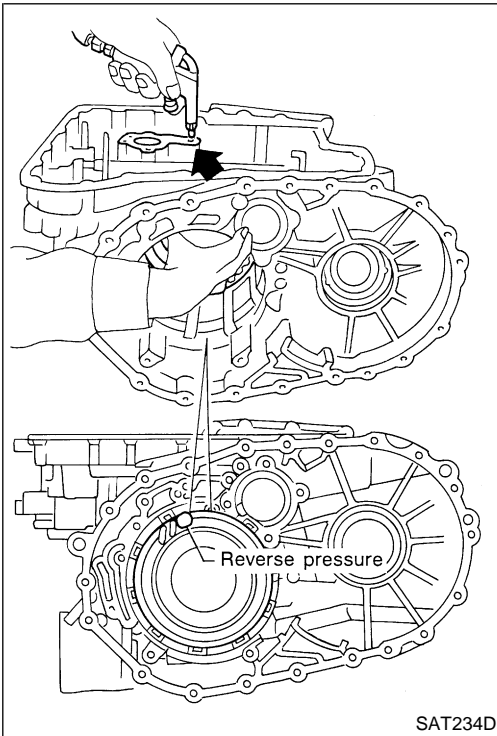

7. Apply compressed air to oil hole of transmission case while holding piston.
8. Remove piston from transmission case by turning it.

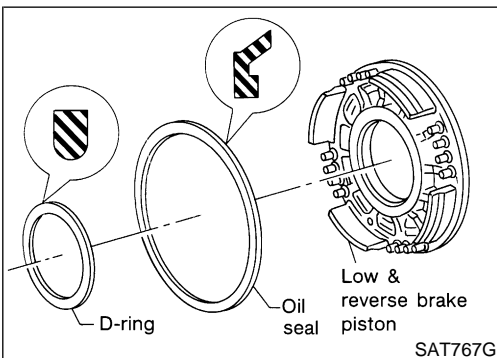

9. Remove D-ring and oil seal from piston.

INSPECTION

Low & Reverse Clutch Snap Ring, Spring Retainer and Return Springs


NIAT0280

NIAT0280S01

- Check for deformation, fatigue or damage.
- Replace if necessary.
- When replacing spring retainer and return springs, replace them as a set.

REPAIR FOR COMPONENT PARTS

Low & Reverse Brake (Cont'd)

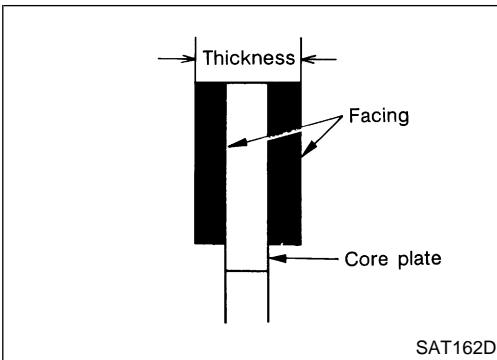


Low & Reverse Brake Drive Plates

NIAT0280S02

- Check facing for burns, cracks or damage.
- Measure thickness of facing.
 - Thickness of drive plate:**
 - Standard value: 2.0 mm (0.079 in)**
 - Wear limit: 1.8 mm (0.071 in)**
- If not within wear limit, replace.

GI
MA
EM
LC

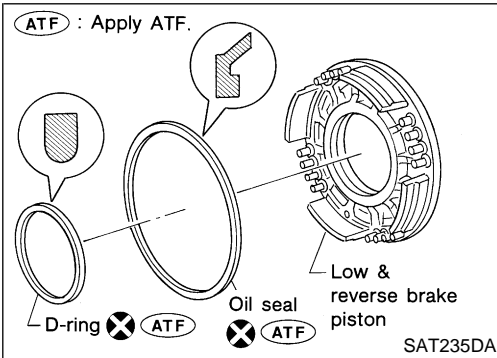


ASSEMBLY

NIAT0281


1. Install D-ring and oil seal on piston.
 - **Take care with the direction of the oil seal.**
 - **Apply ATF to both parts.**

EC
FE
CL
MT

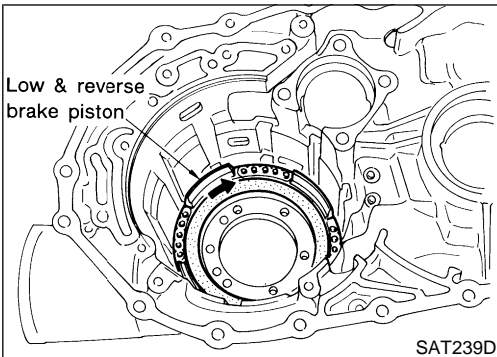


2. Stand transmission case.
3. Install piston assembly on transmission case while turning it slowly.
 - **Apply ATF to inner surface of transmission case.**

AT
AX

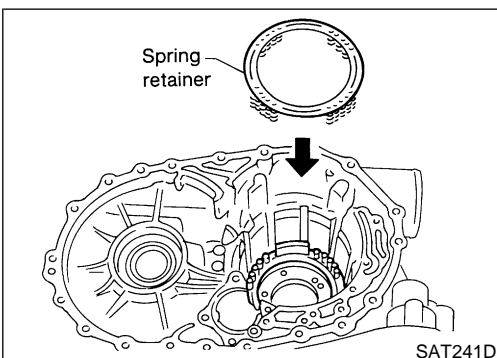

4. Install return springs and spring retainer on piston.
 - Return spring:**
 - Refer to "Clutch and Brake Return Spring", AT-382.**

ST
RS
BT
HA

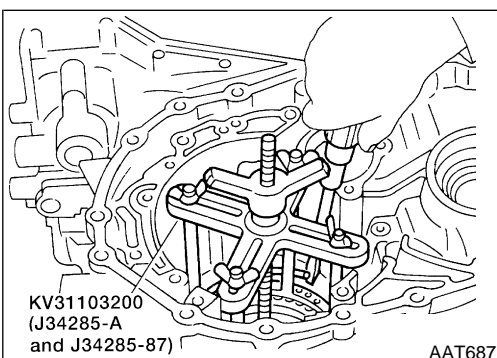


5. Install snap ring while compressing return springs.
 - **Set Tool directly above return springs.**


SC
EL
IDX

REPAIR FOR COMPONENT PARTS


Low & Reverse Brake (Cont'd)

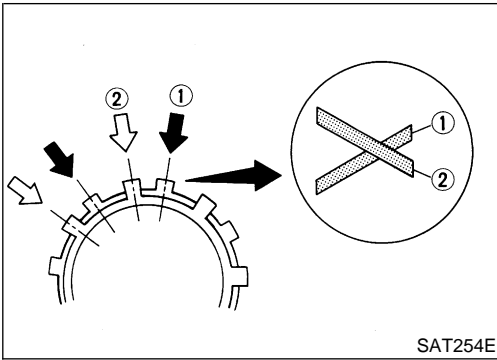

6. Install drive plates, driven plates, retaining plates and dished plates.
 - Do not align the projections on the two dished plates.
 - Make sure to put the plates in the correct order and direction.

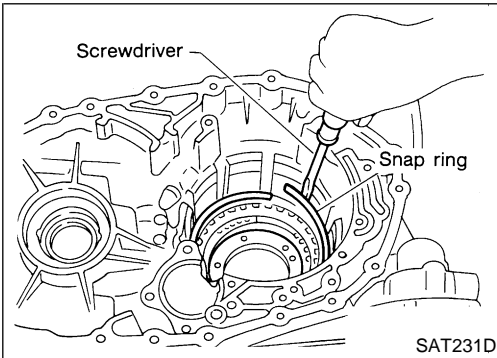

7. Install snap ring.

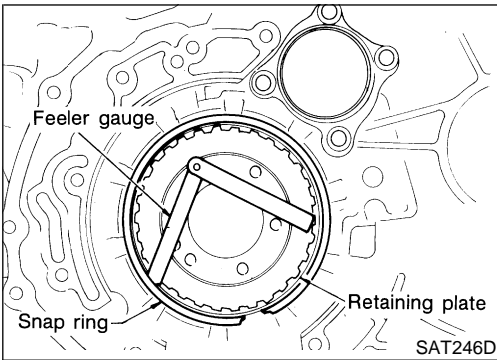

8. Measure clearance between retaining plate and snap ring. If not within allowable limit, select proper retaining plate (front side).

Specified clearance:


Standard: 1.4 - 1.8 mm (0.055 - 0.071 in)

Allowable limit:

2.8 mm (0.110 in)

Retaining plate:

Refer to "LOW AND REVERSE BRAKE", AT-382.

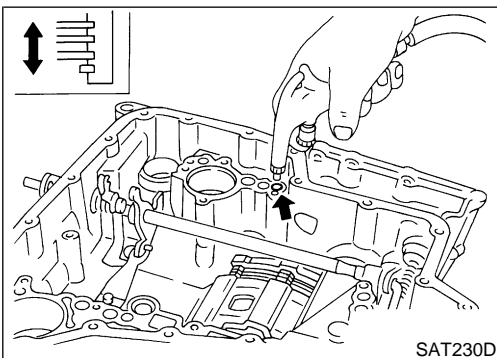

9. Check operation of low and reverse brake. Refer to "DISASSEMBLY", AT-335.


REPAIR FOR COMPONENT PARTS

Rear Internal Gear, Forward Clutch Hub and Overrun Clutch Hub

Rear Internal Gear, Forward Clutch Hub and Overrun Clutch Hub COMPONENTS

NIAT0282

SEC. 315

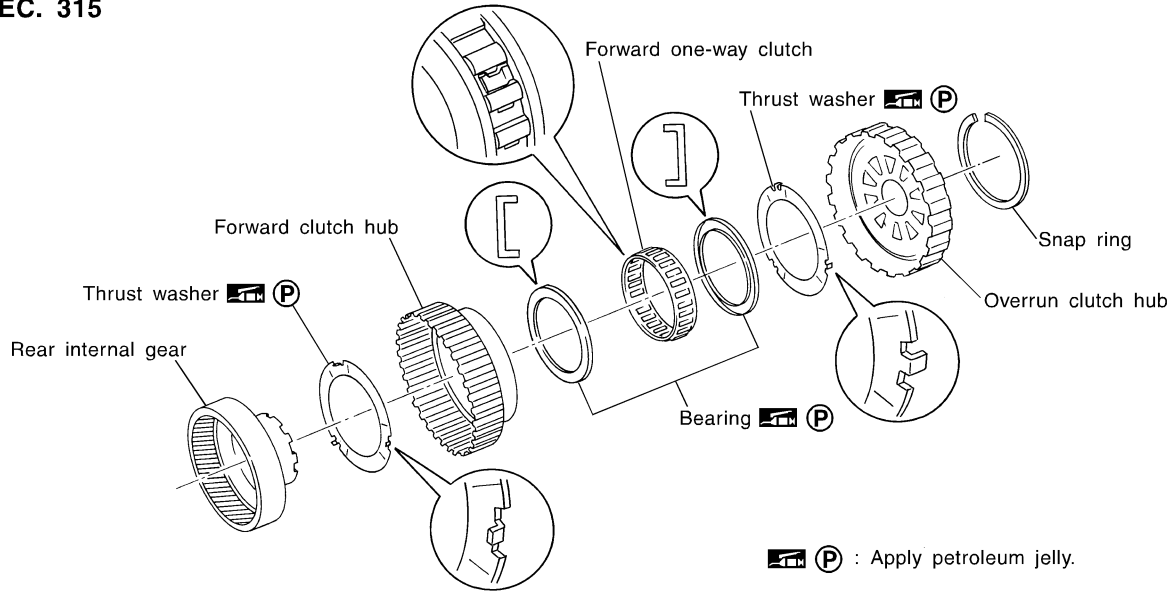

SAT875J

GI
MA
EM
LC
EC
FE
CL
MT

AT

AX

SU

BR

ST

RS


BT

HA

SC

EL


IDX

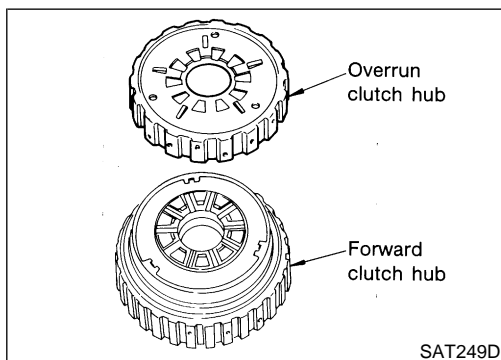

DISASSEMBLY

1. Remove snap ring from overrun clutch hub.
2. Remove overrun clutch hub from forward clutch hub.


NIAT0283

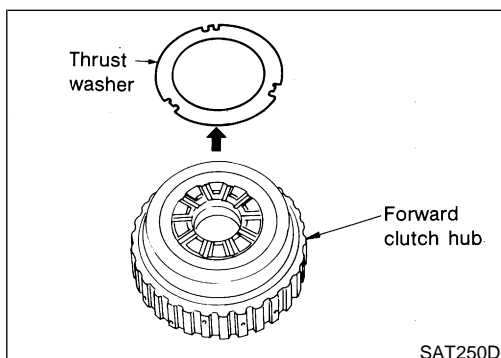


3. Remove thrust washer from forward clutch hub.

REPAIR FOR COMPONENT PARTS


Rear Internal Gear, Forward Clutch Hub and Overrun Clutch Hub (Cont'd)

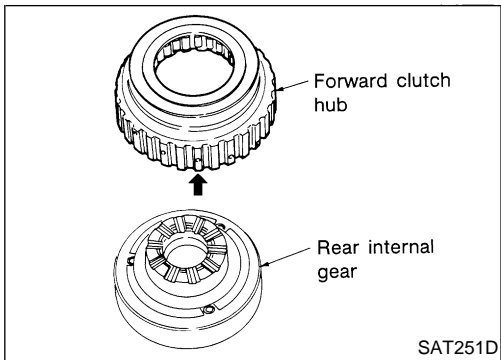


4. Remove forward clutch hub from rear internal gear.

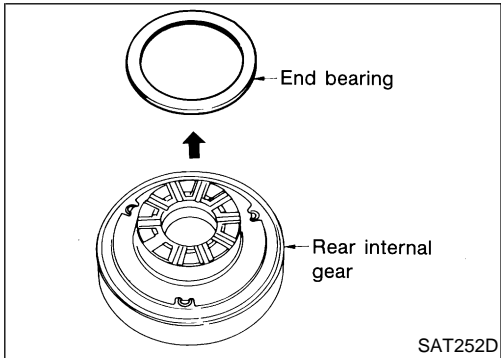


5. Remove end bearing from rear internal gear.

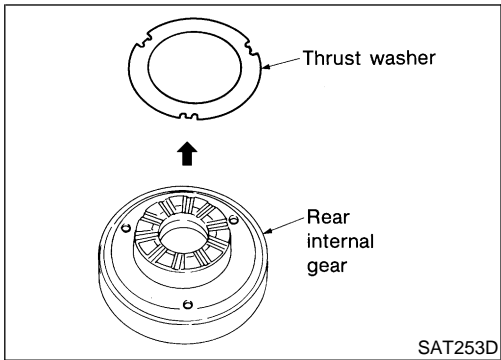

6. Remove thrust washer from rear internal gear.

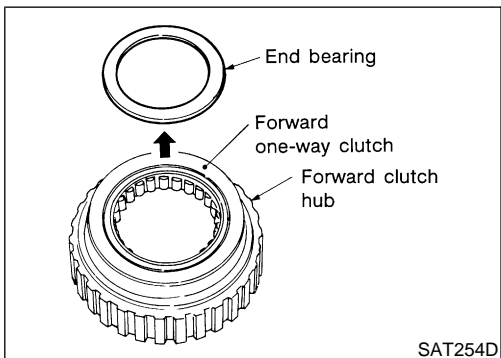


7. Remove end bearing from forward one-way clutch.

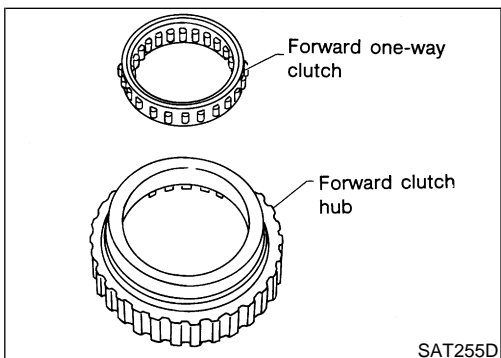

8. Remove one-way clutch from forward clutch hub.

REPAIR FOR COMPONENT PARTS

Rear Internal Gear, Forward Clutch Hub and Overrun Clutch Hub (Cont'd)

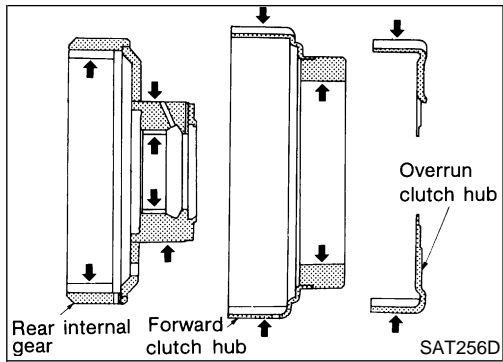


INSPECTION

Rear Internal Gear, Forward Clutch Hub and Overrun Clutch Hub

NIAT0284
NIAT0284S01


- Check rubbing surfaces for wear or damage.

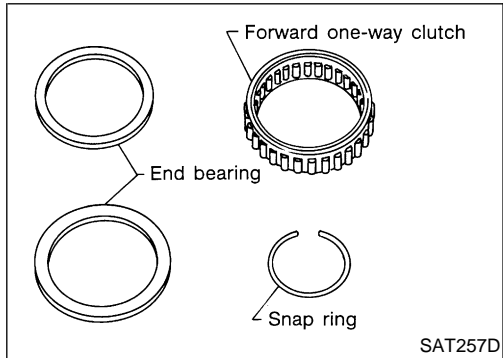

Snap Ring, End Bearings and Forward One-way Clutch

NIAT0284S02


- Check snap ring and end bearings for deformation and damage.
- Check forward one-way clutch for wear and damage.

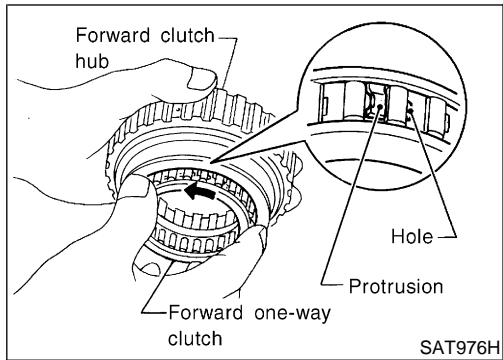


ASSEMBLY

NIAT0285

1. Install forward one-way clutch on forward clutch.
 - Take care with the direction of forward one-way clutch.

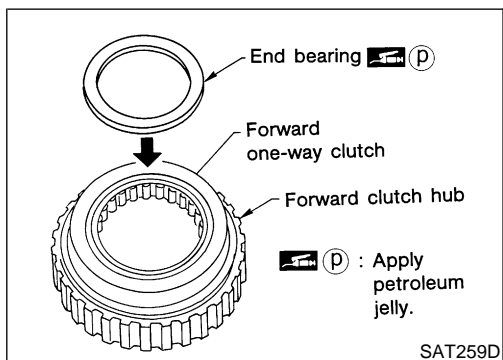

2. Install end bearing on forward one-way clutch.
 - Apply petroleum jelly to end bearing.

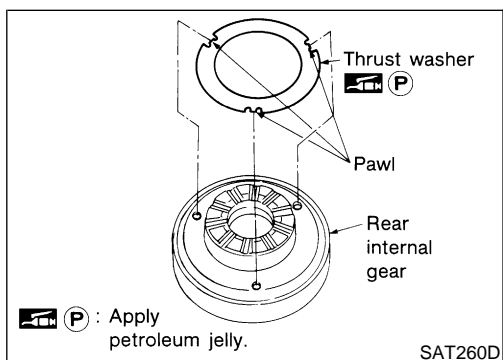


3. Install thrust washer on rear internal gear.
 - Apply petroleum jelly to thrust washer.
 - Align pawls of thrust washer with holes of rear internal gear.


GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

REPAIR FOR COMPONENT PARTS


Rear Internal Gear, Forward Clutch Hub and Overrun Clutch Hub (Cont'd)

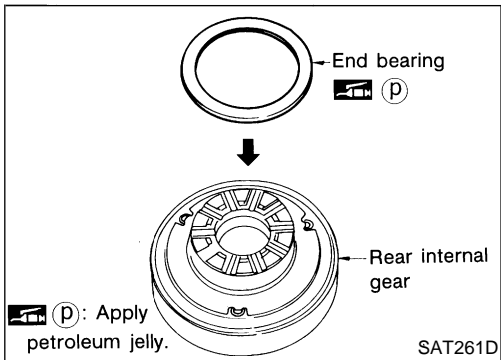


4. Install end bearing on rear internal gear.
 - Apply petroleum jelly to end bearing.

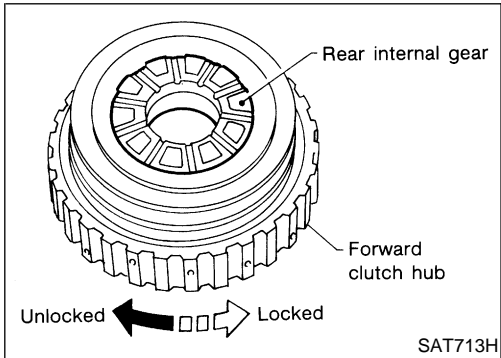


5. Install forward clutch hub on rear internal gear.
 - Check operation of forward one-way clutch. Hold rear internal gear and turn forward clutch hub. Check forward clutch hub for correct locking and unlocking directions.
 - If not as shown in illustration, check installation direction of forward one-way clutch.

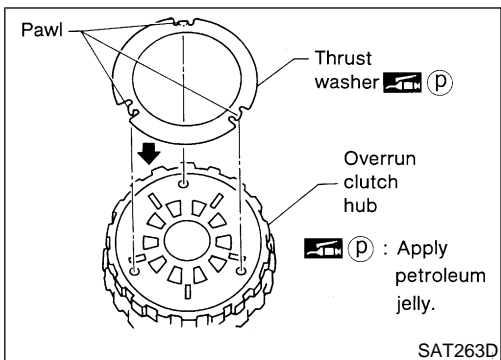

6. Install thrust washer and overrun clutch hub.
 - Apply petroleum jelly to thrust washer.
 - Align pawls of thrust washer with holes of overrun clutch hub.

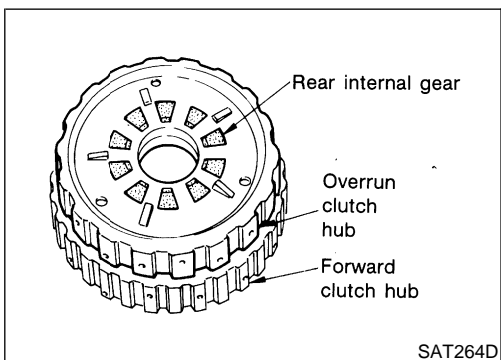

7. Install overrun clutch hub on rear internal gear.
 - Align projections of rear internal gear with holes of overrun clutch hub.

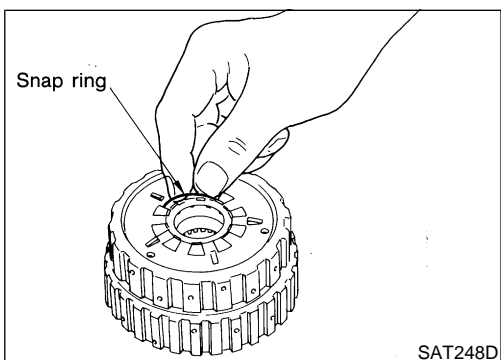

8. Install snap ring to groove of rear internal gear.

REPAIR FOR COMPONENT PARTS

Output Shaft, Idler Gear, Reduction Pinion Gear and Bearing Retainer

Output Shaft, Idler Gear, Reduction Pinion Gear and Bearing Retainer COMPONENTS

NIAT0286

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT


HA

SC


EL

IDX

SEC. 314

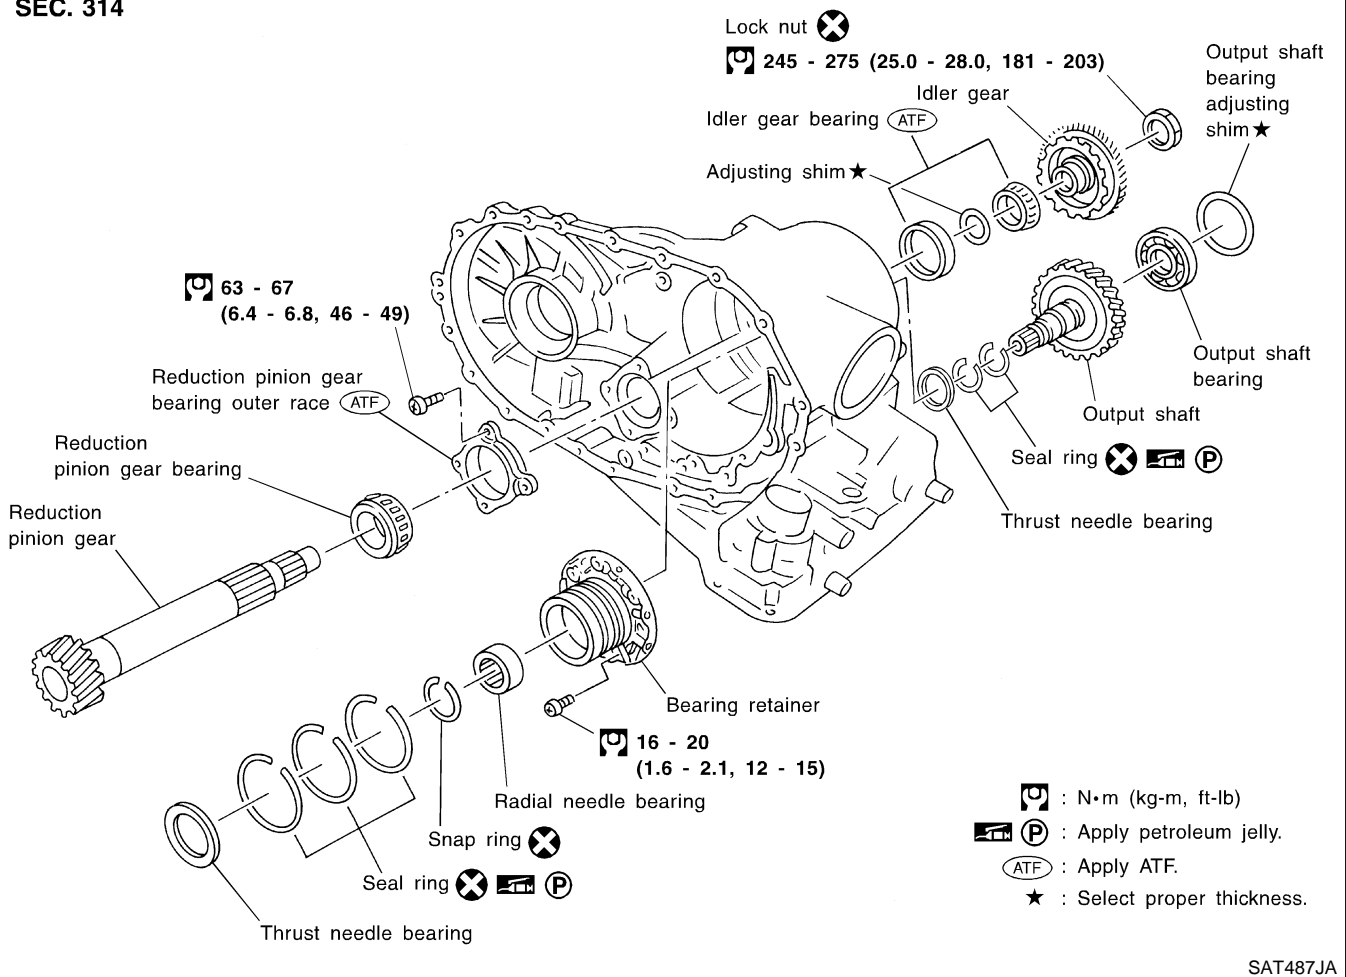

SAT487JA

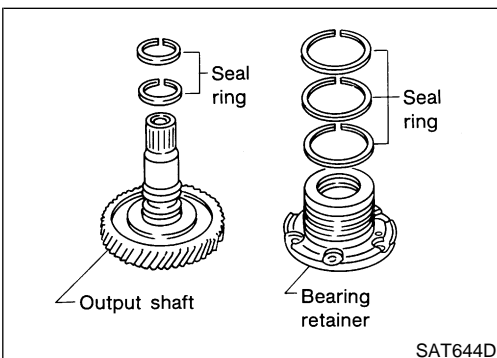


DISASSEMBLY

NIAT0287


1. Remove seal rings from output shaft and bearing retainer.

REPAIR FOR COMPONENT PARTS


Output Shaft, Idler Gear, Reduction Pinion Gear and Bearing Retainer (Cont'd)

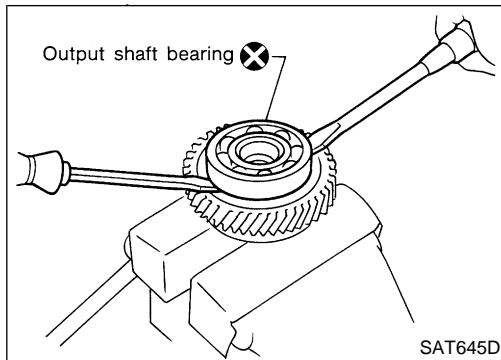


2. Remove output shaft bearing with screwdrivers.
 - Always replace bearing with a new one when removed.
 - Do not damage output shaft.

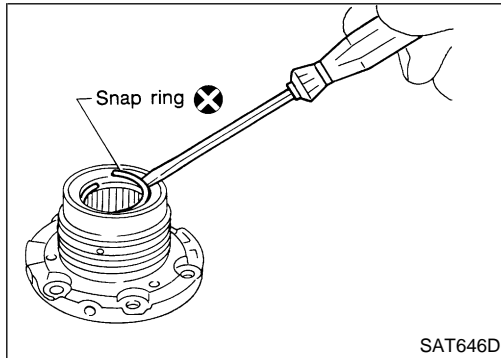


3. Remove snap ring from bearing retainer.

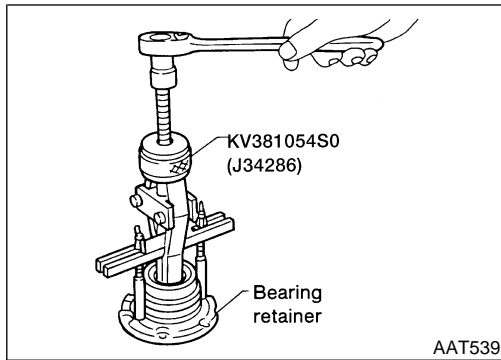

4. Remove needle bearing from bearing retainer.

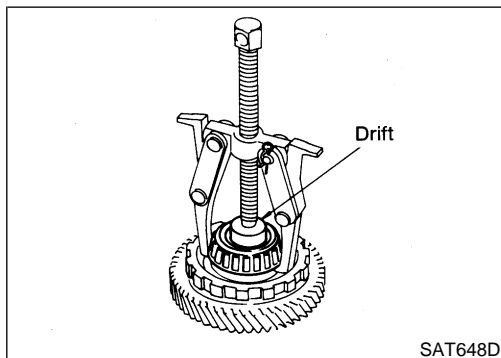


5. Remove idler gear bearing inner race from idler gear.

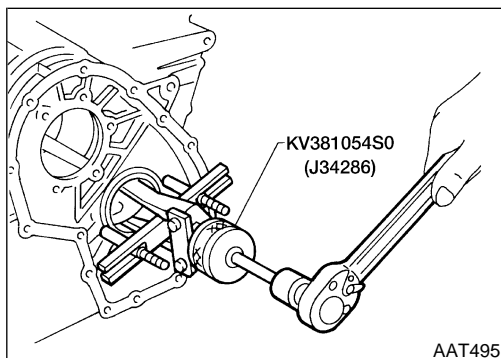


6. Remove idler gear bearing outer race from transmission case.

REPAIR FOR COMPONENT PARTS

Output Shaft, Idler Gear, Reduction Pinion Gear and Bearing Retainer (Cont'd)

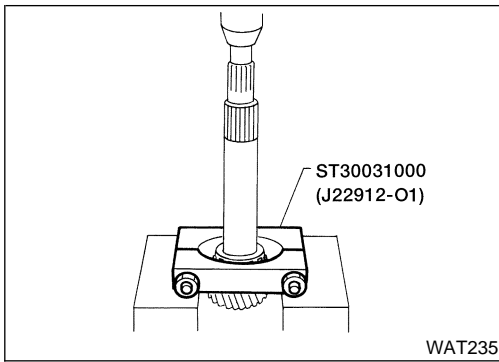

- Press out reduction pinion gear bearing from reduction pinion gear.

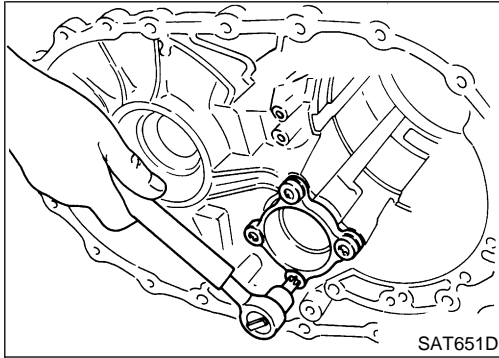


- Remove reduction pinion gear bearing outer race from transmission case.

INSPECTION

Output Shaft, Idler Gear and Reduction Pinion Gear


NIAT0288
NIAT0288S01

- Check shafts for cracks, wear or bending.
- Check gears for wear, chips and cracks.

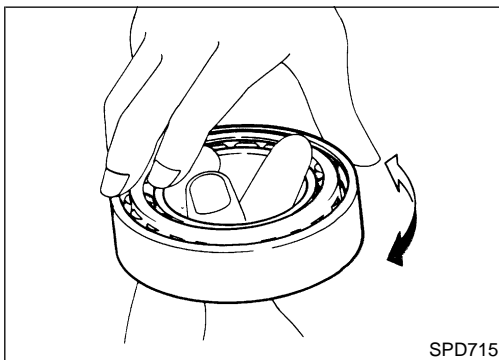

Bearing

- Make sure bearings roll freely and are free from noise, cracks, pitting or wear.
- When replacing taper roller bearing, replace outer and inner race as a set.**

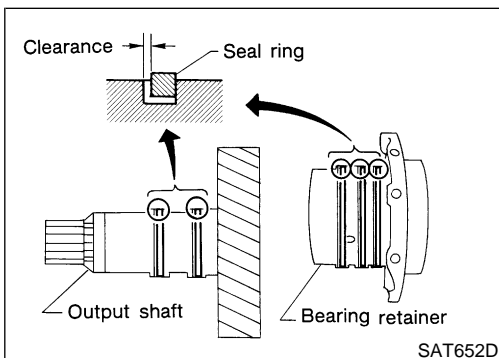

Seal Ring Clearance

- Install new seal rings to output shaft.
- Measure clearance between seal ring and ring groove of output shaft.

Standard clearance:

0.10 - 0.25 mm (0.0039 - 0.0098 in)

Allowable limit:

0.25 mm (0.0098 in)

- If not within allowable limit, replace output shaft.
- Install new seal rings to bearing retainer.

GI
MA
EM
LC
EC
FE
CL
MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

REPAIR FOR COMPONENT PARTS

Output Shaft, Idler Gear, Reduction Pinion Gear and Bearing Retainer (Cont'd)

- Measure clearance between seal ring and ring groove of bearing retainer.





Standard clearance:

0.10 - 0.25 mm (0.0039 - 0.0098 in)

Allowable limit:

0.25 mm (0.0098 in)

- If not within allowable limit, replace bearing retainer.

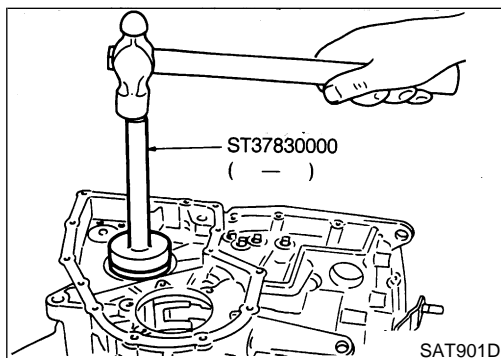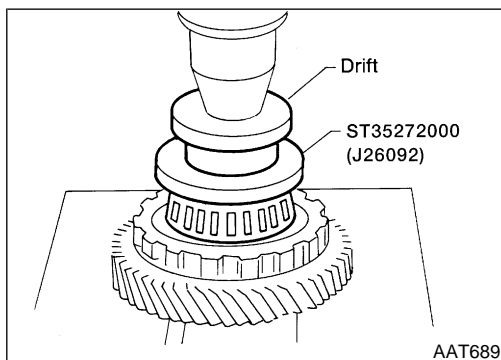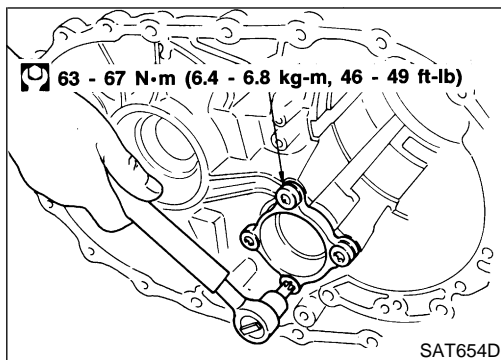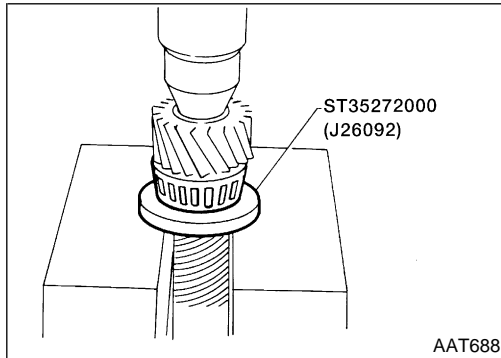

ASSEMBLY

1. Press reduction pinion gear bearing on reduction pinion gear. NIAT0289


2. Install reduction pinion gear bearing outer race on transmission case.

3. Press idler gear bearing inner race on idler gear.


4. Install idler gear bearing outer race on transmission case.

REPAIR FOR COMPONENT PARTS


Output Shaft, Idler Gear, Reduction Pinion Gear and Bearing Retainer (Cont'd)

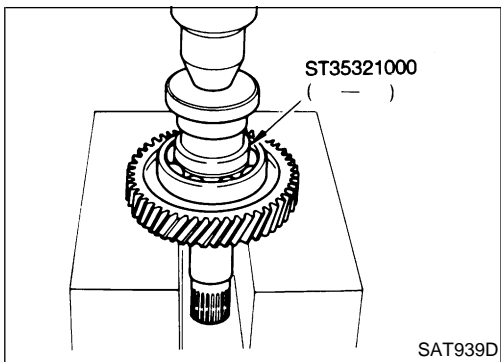


5. Press output shaft bearing on output shaft.

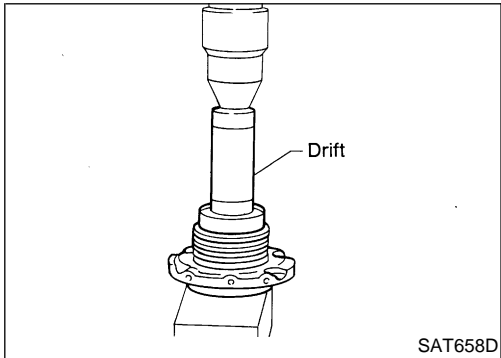

6. Press needle bearing on bearing retainer.

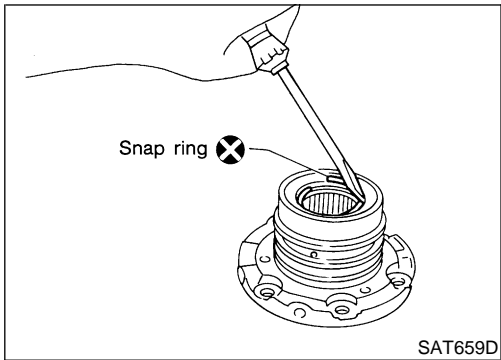


7. Install snap ring to bearing retainer.

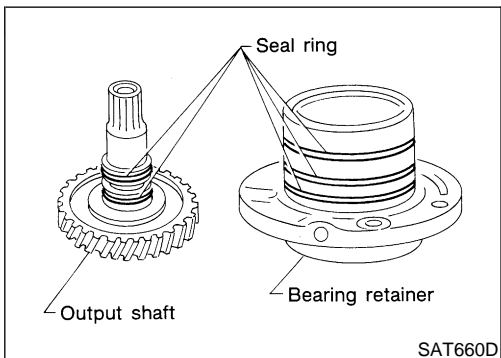

8. After packing ring grooves with petroleum jelly, carefully install new seal rings on output shaft and bearing retainer.

NOTE:
Do not align gaps in seal rings.

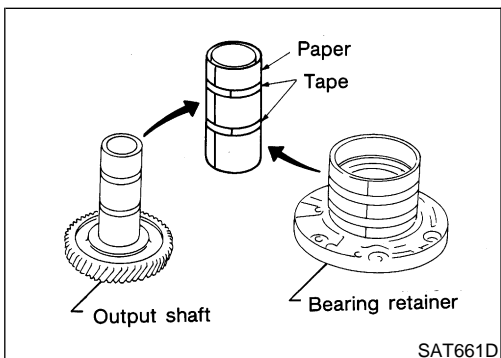

● Roll paper around seal rings to prevent seal rings from spreading.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL



IDX

REPAIR FOR COMPONENT PARTS

Band Servo Piston Assembly

Band Servo Piston Assembly COMPONENTS


NIAT0290

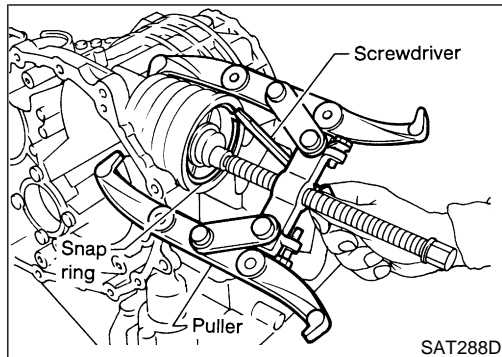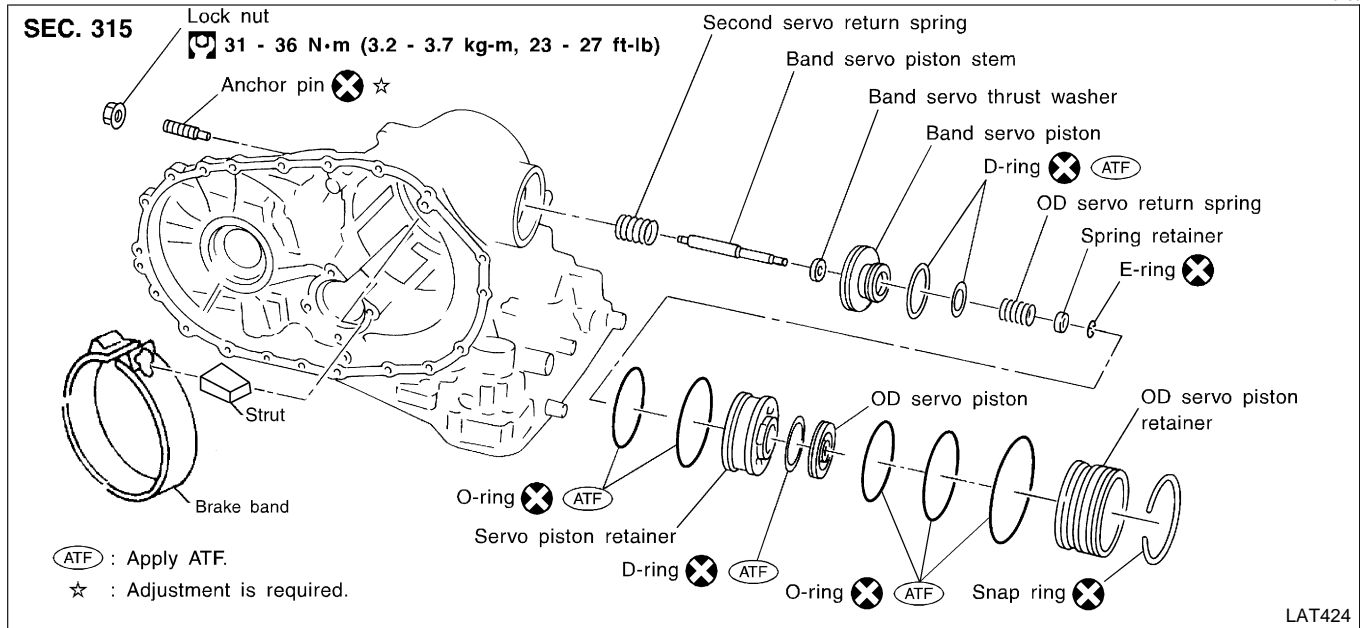

DISASSEMBLY


NIAT0291

1. Remove band servo piston snap ring.

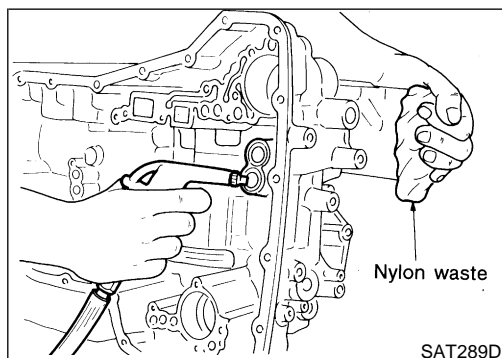

2. Apply compressed air to oil hole in transmission case to remove OD servo piston retainer and band servo piston assembly.

- Hold band servo piston assembly with a rag or nylon waste.

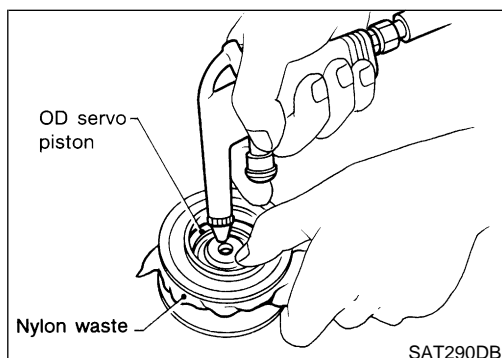


3. Apply compressed air to oil hole in OD servo piston retainer to remove OD servo piston from retainer.


- Hold OD servo piston while applying compressed air.

REPAIR FOR COMPONENT PARTS


Band Servo Piston Assembly (Cont'd)

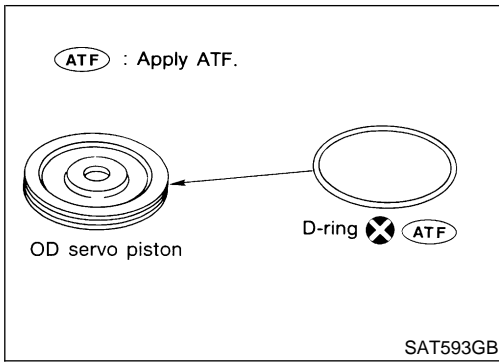


4. Remove D-ring from OD servo piston.

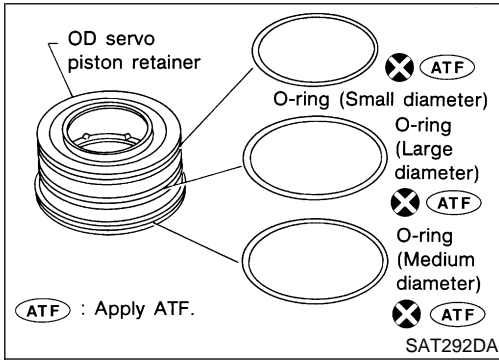


5. Remove O-rings from OD servo piston retainer.

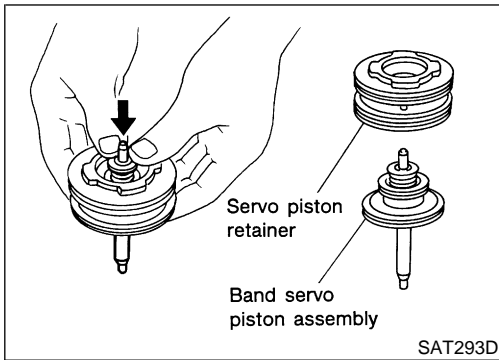

6. Remove band servo piston assembly from servo piston retainer by pushing it forward.

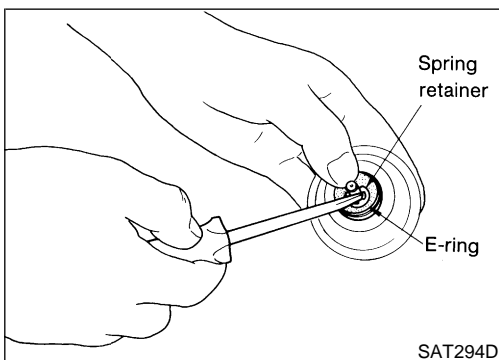

7. Place piston stem end on a wooden block. While pushing servo piston spring retainer down, remove E-ring.

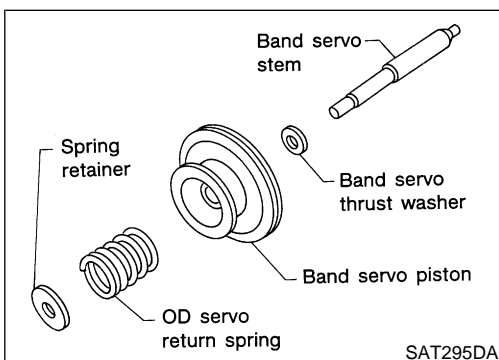

8. Remove OD servo return spring, band servo thrust washer and band servo piston stem from band servo piston.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA


SC

EL


IDX

REPAIR FOR COMPONENT PARTS


Band Servo Piston Assembly (Cont'd)

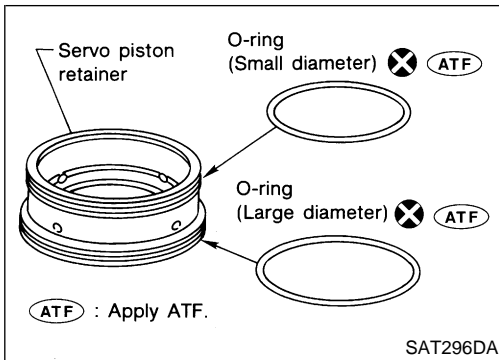

9. Remove O-rings from servo piston retainer.

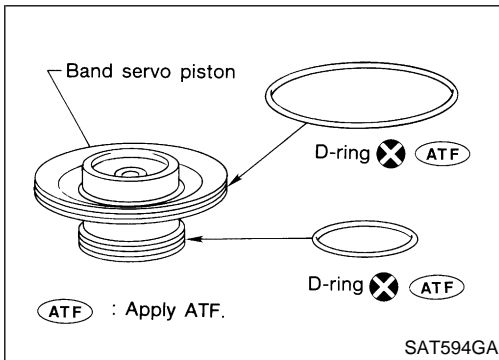

10. Remove D-rings from band servo piston.

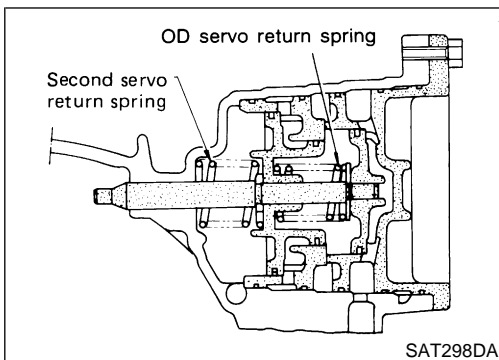


INSPECTION

Pistons, Retainers and Piston Stem

- Check frictional surfaces for abnormal wear or damage.

NIAT0292

NIAT0292S01

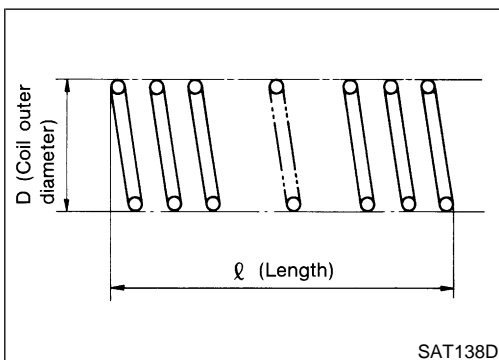


Return Springs

- Check for deformation or damage.
- Measure free length and outer diameter.

Band servo inspection standard:
Refer to "Band Servo", AT-387.

NIAT0292S02

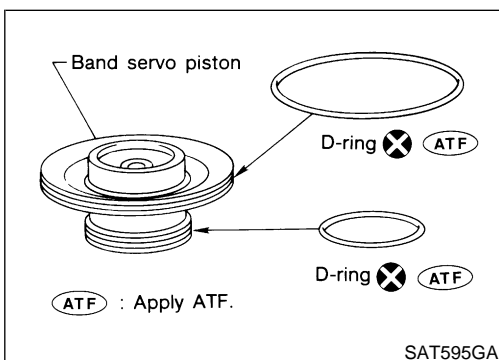


ASSEMBLY

1. Install D-rings to band servo piston retainer.
 - Apply ATF to D-rings.
 - Pay attention to position of each D-ring.

NIAT0293

REPAIR FOR COMPONENT PARTS

Band Servo Piston Assembly (Cont'd)

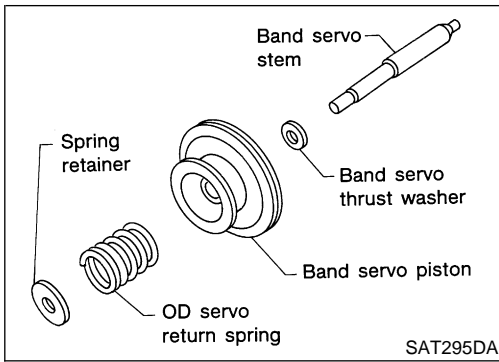


2. Install band servo piston stem, band servo thrust washer, OD servo return spring and spring retainer to band servo piston.

GI

MA

EM

LC

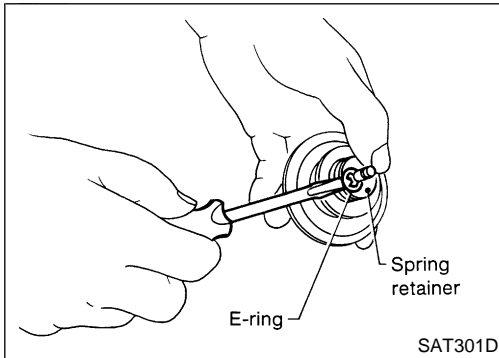


3. Place piston stem end on a wooden block. While pushing servo piston spring retainer down, install E-ring.

EC

FE

CL

MT

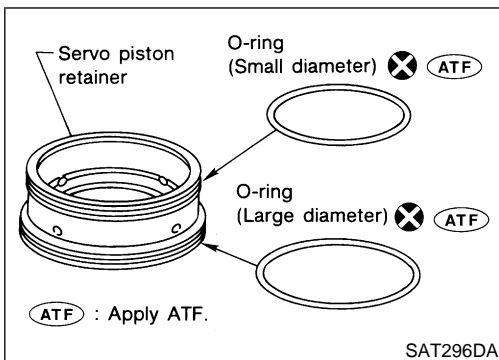


4. Install O-rings to servo piston retainer.
 - Apply ATF to O-rings.
 - Pay attention to the positions of the O-rings.

AT

AX

SU

BR

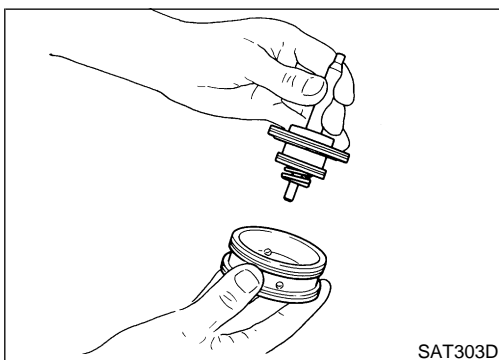


5. Install band servo piston assembly to servo piston retainer by pushing it inward.

ST

RS

BT

HA

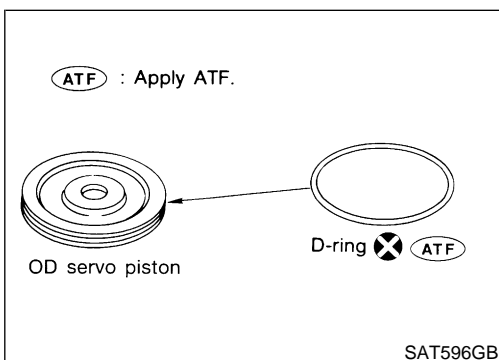

6. Install D-ring to OD servo piston.
 - Apply ATF to D-ring.


SC

EL


IDX

REPAIR FOR COMPONENT PARTS


Band Servo Piston Assembly (Cont'd)

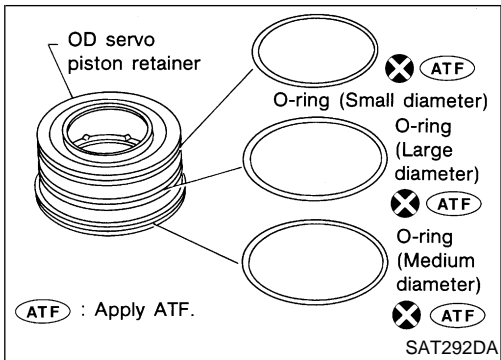


7. Install O-rings to OD servo piston retainer.
 - Apply ATF to O-rings.
 - Pay attention to the positions of the O-rings.

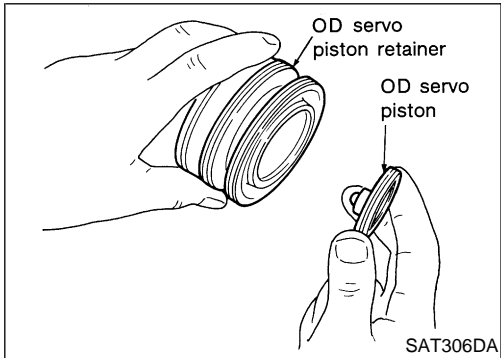


8. Install OD servo piston to OD servo piston retainer.

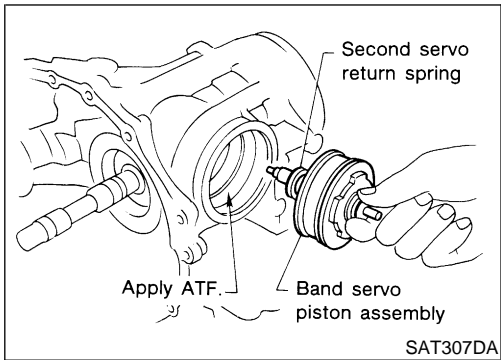

9. Install band servo piston assembly and 2nd servo return spring to transmission case.
 - Apply ATF to O-ring of band servo piston and transmission case.

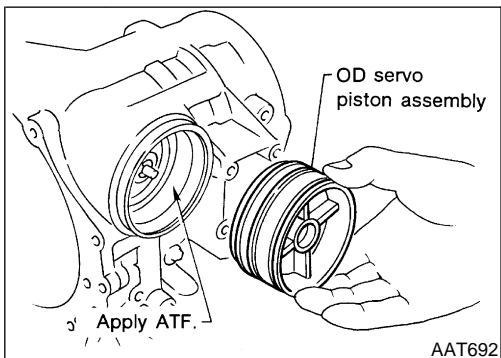


10. Install OD servo piston assembly to transmission case.
 - Apply ATF to O-ring of band servo piston and transmission case.

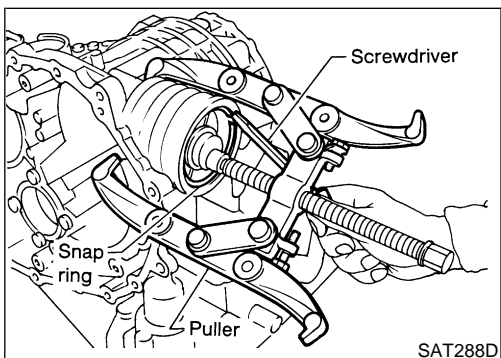


11. Install band servo piston snap ring to transmission case.

Final Drive COMPONENTS

NIAT0294

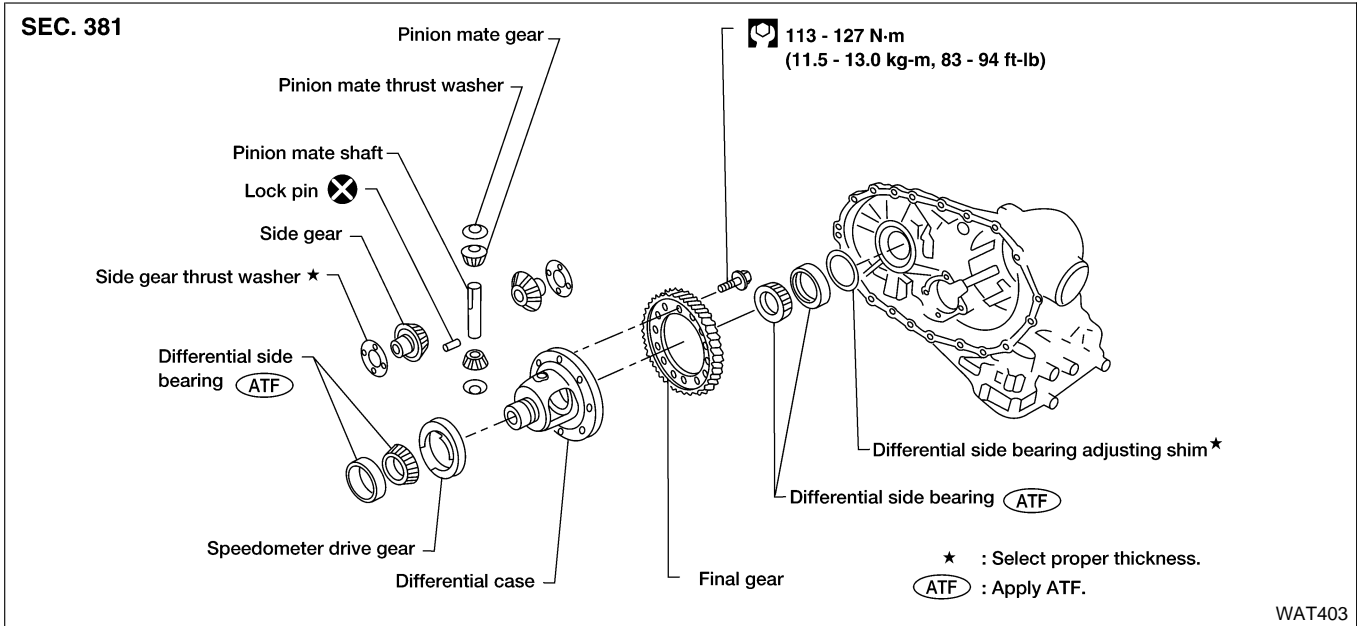

GI
MA
EM
LC
EC
FE
CL
MT

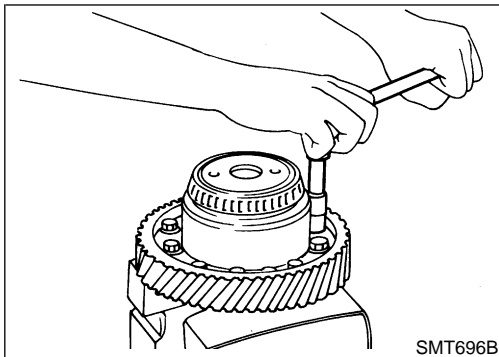


DISASSEMBLY


1. Remove final gear.

NIAT0295

AT

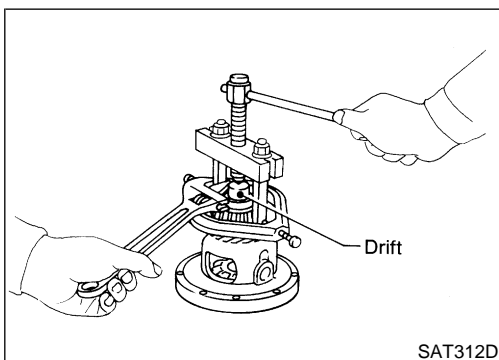


2. Press out differential side bearings.

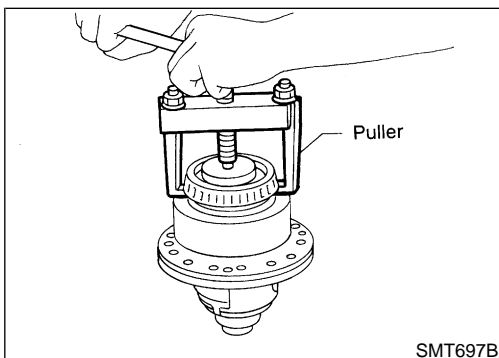


AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

REPAIR FOR COMPONENT PARTS


Final Drive (Cont'd)

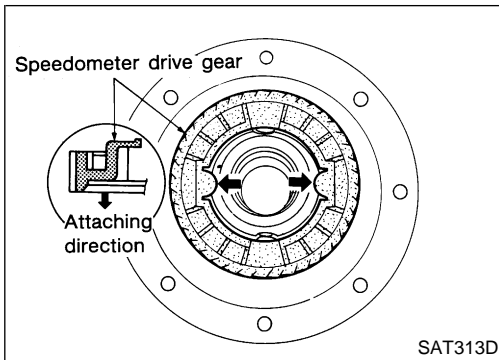

3. Remove speedometer drive gear.

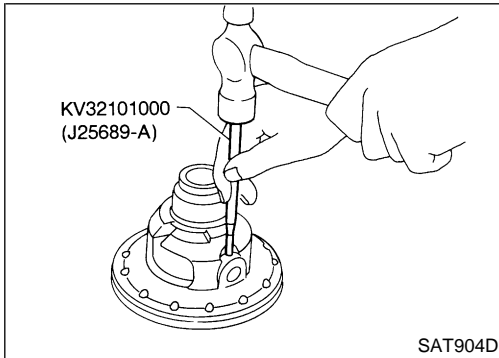


4. Drive out pinion mate shaft lock pin.

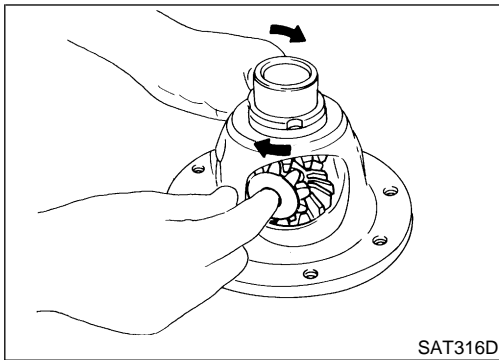

5. Draw out pinion mate shaft from differential case.

6. Remove pinion mate gears and side gears.

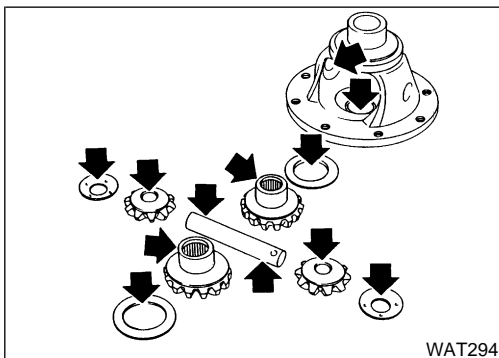


INSPECTION

Gear, Washer, Shaft and Case

NIAT0296

NIAT0296S01

- Check mating surfaces of differential case, side gears and pinion mate gears.
- Check washers for wear.

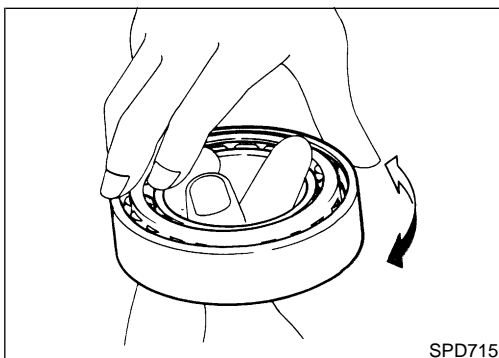






Bearings

NIAT0296S03

- Make sure bearings roll freely and are free from noise, cracks, pitting or wear.
- **When replacing taper roller bearing, replace outer and inner race as a set.**

REPAIR FOR COMPONENT PARTS

Final Drive (Cont'd)

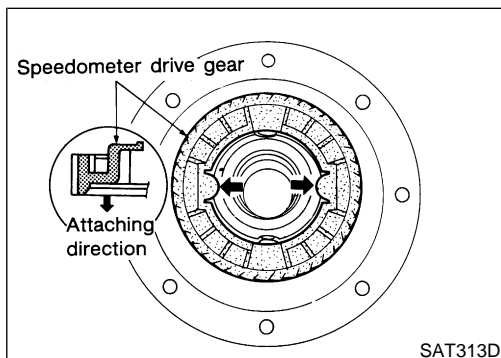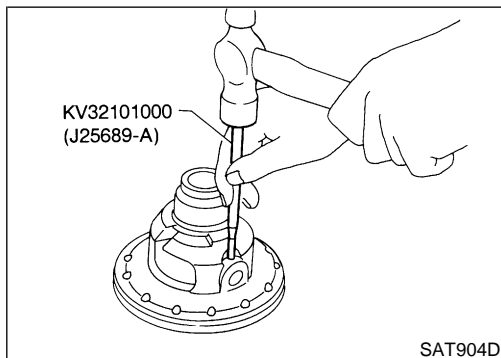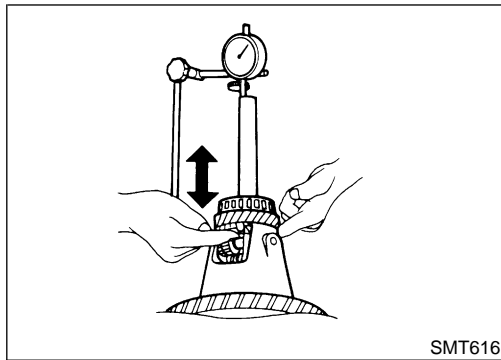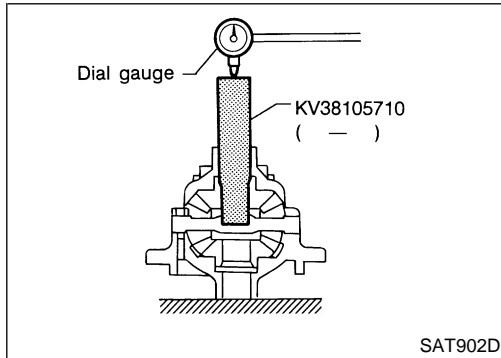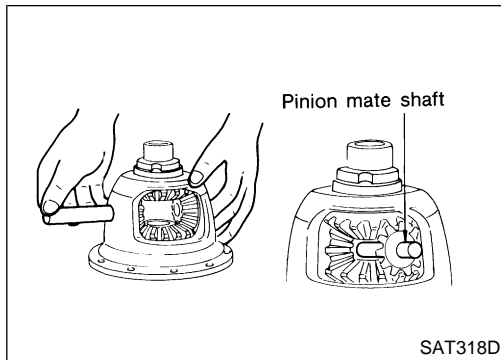

ASSEMBLY

NIAT0297

1. Install side gear and thrust washers in differential case.
2. Install pinion mate gears and thrust washers in differential case while rotating them.

- **When inserting, be careful not to damage pinion mate gear washers.**
- **Apply ATF to any parts.**

3. Measure clearance between side gear and differential case with washers using the following procedure.

- a. Set Tool and dial indicator on side gear.
- b. Move side gear up and down to measure dial indicator deflection. Always measure indicator deflection on both side gears.

Clearance between side gear and differential case with washers:

0.1 - 0.2 mm (0.004 - 0.008 in)

- c. If not within specification adjust clearance by changing thickness of side gear thrust washers.

Side gear thrust washer:

Refer to "DIFFERENTIAL SIDE GEAR THRUST WASHERS", AT-383.

4. Install lock pin.

- **Make sure that lock pin is flush with case.**

5. Install speedometer drive gear on differential case.

- **Align the projection of speedometer drive gear with the groove of differential case.**

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA


SC

EL

IDX


REPAIR FOR COMPONENT PARTS

Final Drive (Cont'd)

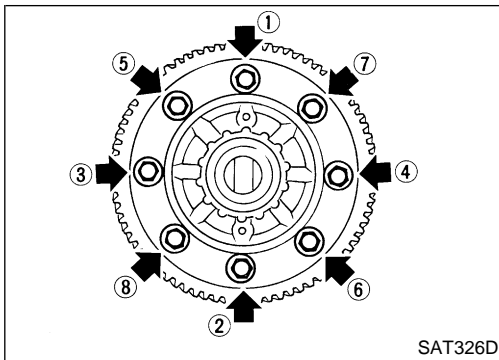

6. Install final gear and tighten fixing bolts in numerical order.

 : 113 - 127 N·m (11.5 - 13.0 kg·m, 83 - 94 ft·lb)

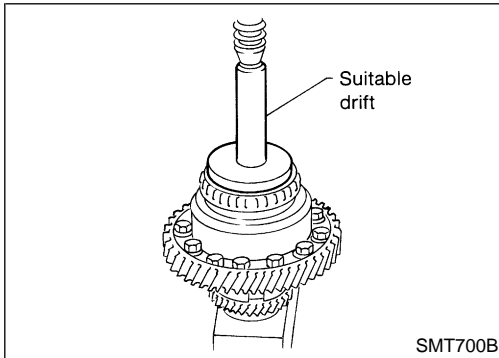


7. Press on differential side bearings.

ASSEMBLY


Assembly (1)

NIAT0298

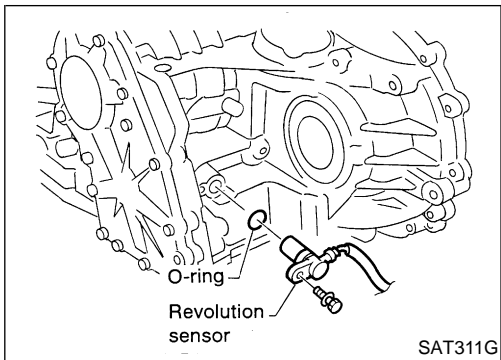


Assembly (1)

1. Install revolution sensor onto transmission case.
Always use new sealing parts.

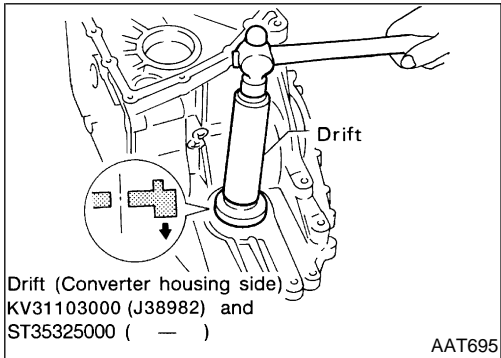


2. Install differential side oil seals on transmission case and converter housing, so that "A" and "B" are within specifications.

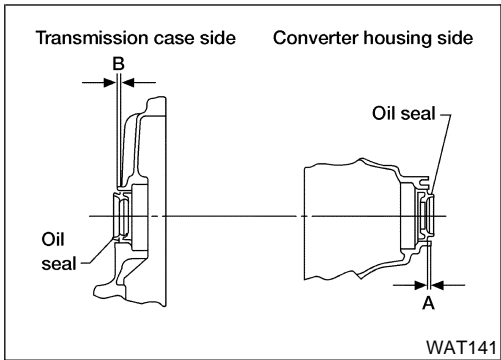


Unit: mm (in)

A	B
5.5 - 6.5 (0.217 - 0.256)	-0.5 to 0.5 (-0.020 to 0.020)

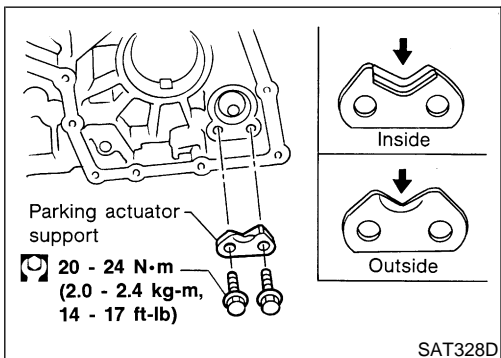

3. Install parking actuator support to transmission case.
● **Pay attention to direction of parking actuator support.**

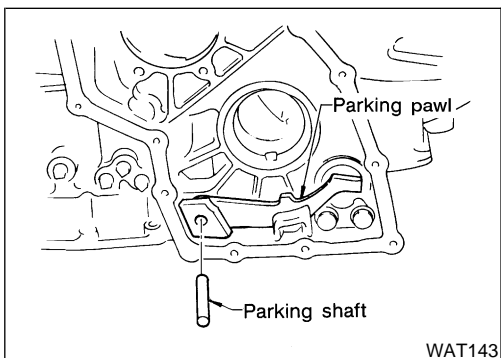


4. Install parking pawl on transmission case and fix it with parking shaft.


GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

ASSEMBLY

Assembly (1) (Cont'd)

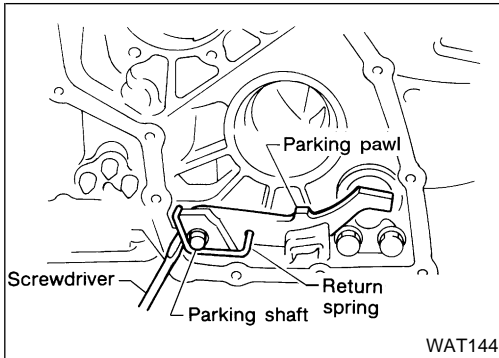

5. Install return spring.

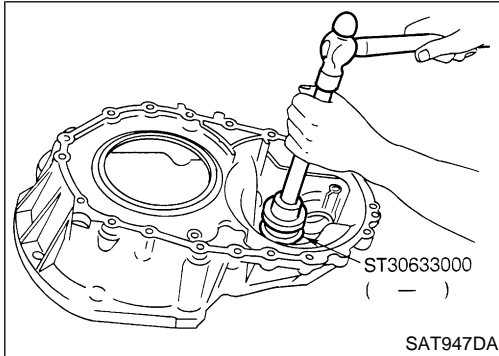


Adjustment (1)

DIFFERENTIAL SIDE BEARING PRELOAD


NIAT0299

NIAT0299S01

1. Install differential side bearing outer race without adjusting shim on transmission case.
2. Install differential side bearing outer race on converter housing.

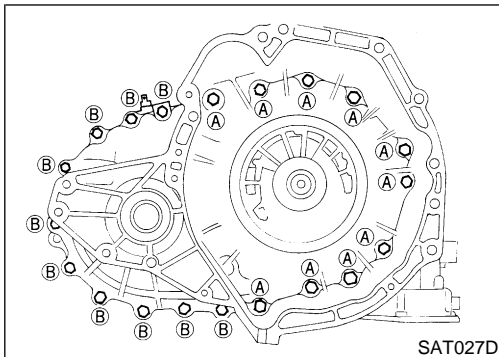

3. Place final drive assembly on transmission case.
4. Install transmission case on converter housing. Tighten transmission case fixing bolts **A** and **B** to the specified torque.

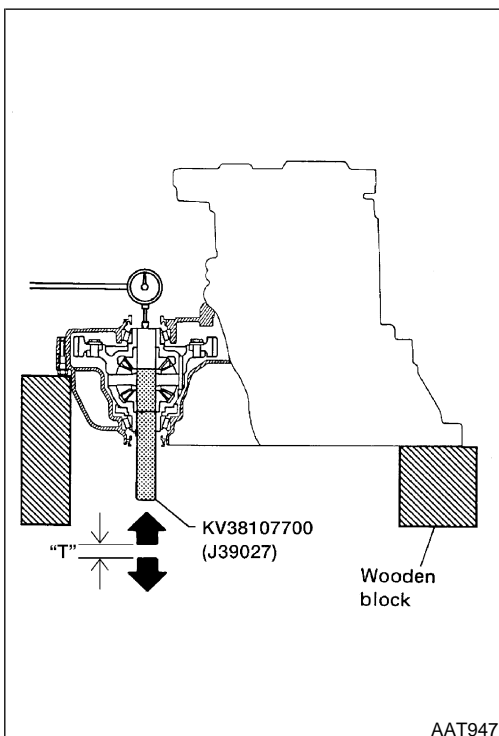

5. Attach dial indicator on differential case at transmission case side.
6. Insert Tool into differential side gear from converter housing.
7. Move Tool up and down and measure dial indicator deflection.
8. Select proper thickness of differential side bearing adjusting shim(s) using SDS table as a guide.

Differential side bearing preload "T":






0.04 - 0.09 mm (0.0016 - 0.0035 in)

Differential side bearing adjusting shim:

Refer to "DIFFERENTIAL SIDE BEARING ADJUSTING SHIM", AT-383.

ASSEMBLY

Adjustment (1) (Cont'd)

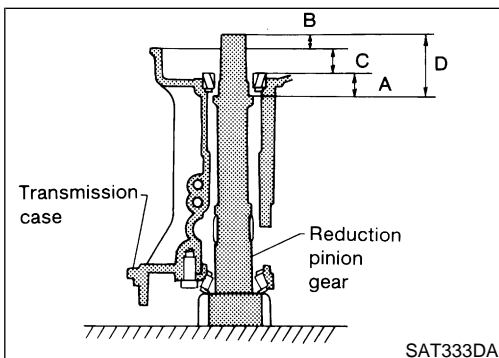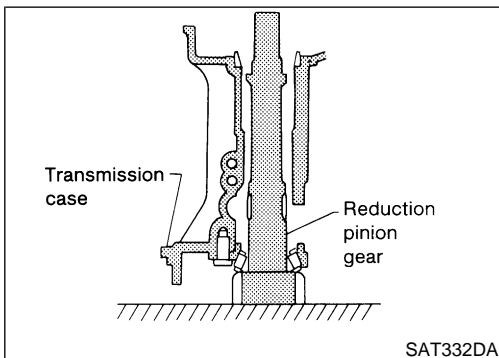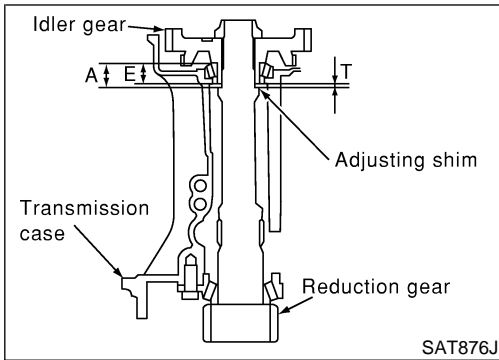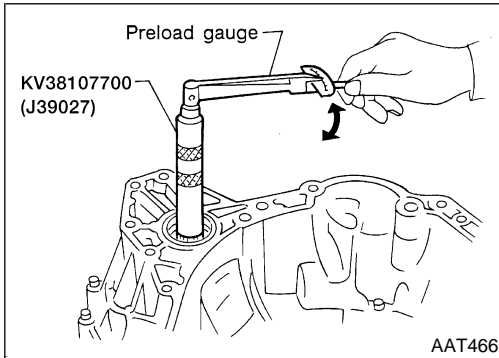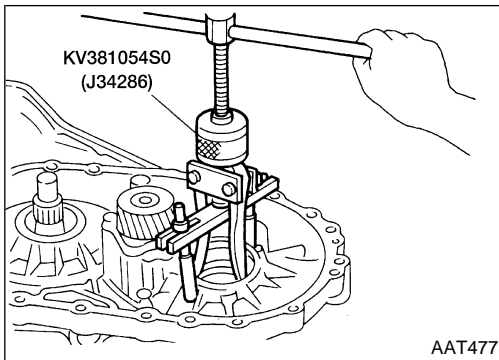

9. Remove converter housing from transmission case.
 10. Remove final drive assembly from transmission case.
 11. Remove differential side bearing outer race from transmission case.
 12. Reinstall differential side bearing outer race and shim(s) selected from SDS table on transmission case.
 13. Reinstall converter housing on transmission case and tighten transmission case fixing bolts to the specified torque.
14. Insert Tool into differential case and measure turning torque of final drive assembly.
 - Turn final drive assembly in both directions several times to seat bearing rollers correctly.
 - Turning torque of final drive assembly (New bearing): **0.49 - 1.08 N-m (5.0 - 11.0 kg-cm, 4.3 - 9.5 in-lb)**
 - When old bearing is used again, turning torque will be slightly less than the above.
 - Make sure torque is within the specified range.

REDUCTION PINION GEAR BEARING PRELOAD

NIAT0299S02

- Be sure to remove final drive assembly before doing this procedure.
- Using caliper and straightedge, calculate a dimension "T" (adjuster shim thickness) in the left figure by the following formula. And adjust the inspection standard for pre-load (rotating slide torque) as shown below.

$$T = A - E$$

Inspection standard for preload:

$$0.1 - 0.69 \text{ N-m (1.1 - 7.0 kg-cm, 0.95 - 6.08 in-lb)}$$

1. Remove transmission case and final drive assembly from converter housing.
2. Select proper thickness of reduction pinion gear bearing adjusting shim using the following procedures.
 - a. Place reduction pinion gear on transmission case as shown.
- b. Place idler gear bearing on transmission case.
- c. Measure dimensions "B", "C" and "D" and calculate dimension "A".


$$A = D - (B + C)$$

"A": Distance between the surface of idler gear bearing inner race and the adjusting shim mating surface of reduction pinion gear.


GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

ASSEMBLY


Adjustment (1) (Cont'd)

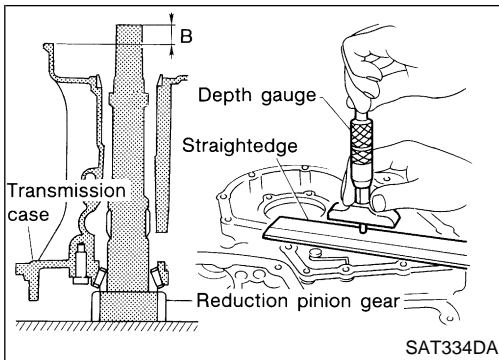

- Measure dimension "B" between the end of reduction pinion gear and the surface of transmission case.
- **Measure dimension "B" in at least two places.**

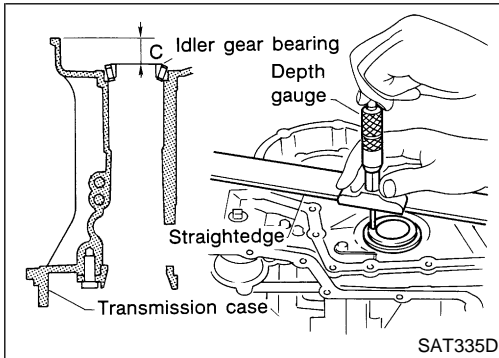


- Measure dimension "C" between the surface of idler gear bearing inner race and the surface of transmission case.
- **Measure dimension "C" in at least two places.**

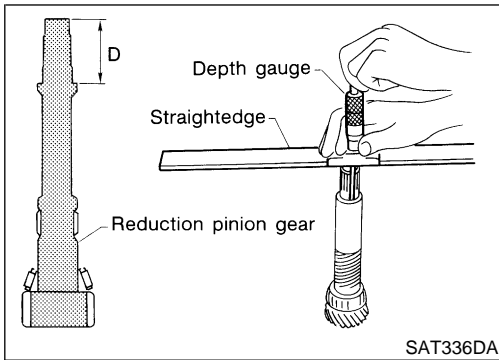

- Measure dimension "D" between the end of reduction pinion gear and the adjusting shim mating surface of reduction pinion gear.
- **Measure dimension "D" in at least two places.**
- Calculate dimension "A".

$$A = D - (B + C)$$

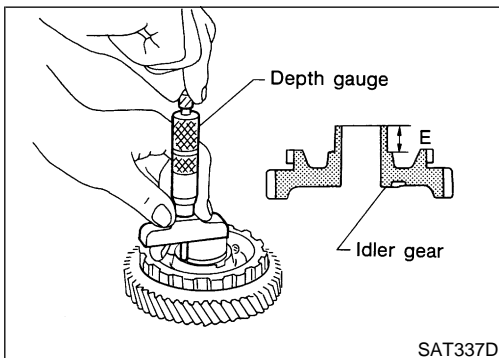

- d. Measure dimension "E" between the end of idler gear and the idler gear bearing inner race mating surface of idler gear.
- **Measure dimension "E" in at least two places.**

- e. Calculate "T" and select proper thickness of reduction pinion gear bearing adjusting shim using SDS table as a guide.

$$T = A - E - 0.05 \text{ mm (0.0020 in)*}$$


Reduction pinion gear bearing adjusting shim:

Refer to "REDUCTION PINION GEAR BEARING ADJUSTING SHIM", AT-385.


*: Bearing preload

ASSEMBLY


Adjustment (1) (Cont'd)

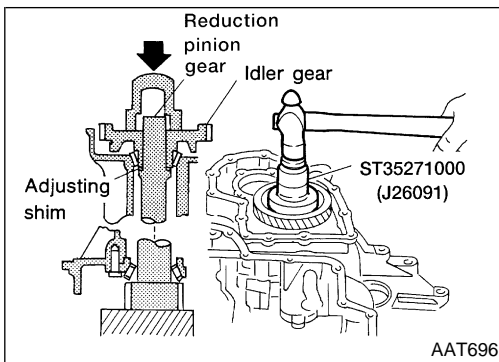

3. Install reduction pinion gear and reduction pinion gear bearing adjusting shim selected in step 2-e on transmission case using Tool.
4. Press idler gear bearing inner race on idler gear.
5. Press idler gear on reduction pinion gear.
 - **Press idler gear so that idler gear can be locked by parking pawl.**

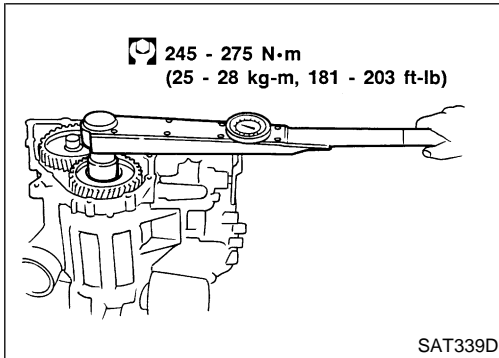


6. Tighten idler gear lock nut to the specified torque.
 - **Lock idler gear with parking pawl when tightening lock nut.**

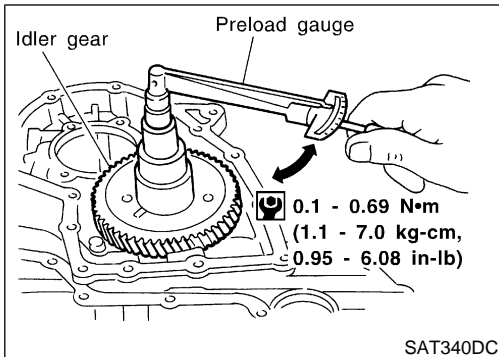


7. Measure turning torque of reduction pinion gear.
 - **When measuring turning torque, turn reduction pinion gear in both directions several times to seat bearing rollers correctly.**

Turning torque of reduction pinion gear:
0.1 - 0.69 N·m (1.1 - 7.0 kg-cm, 0.95 - 6.08 in-lb)

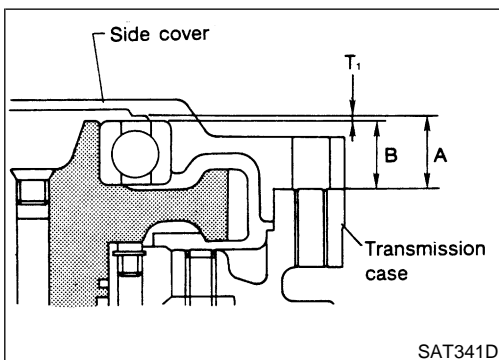

OUTPUT SHAFT END PLAY

- Measure clearance between side cover and the end of the output shaft bearing.
- Select proper thickness of adjusting shim so that clearance is within specifications.

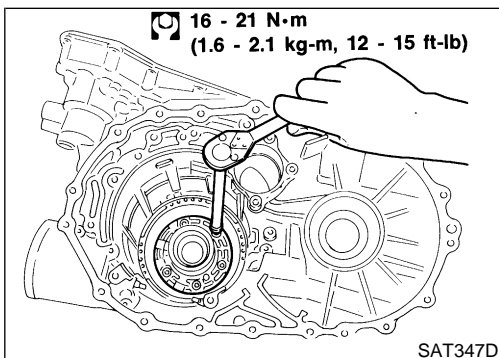


1. Install bearing retainer for output shaft.


GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

ASSEMBLY


Adjustment (1) (Cont'd)

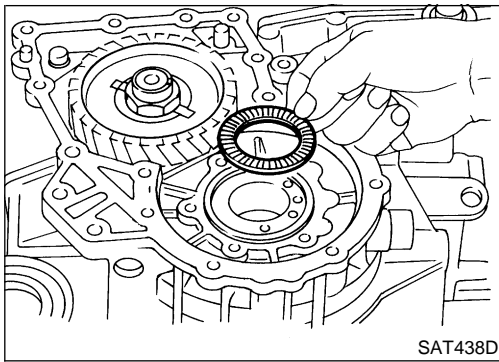

2. Install output shaft thrust needle bearing on bearing retainer.

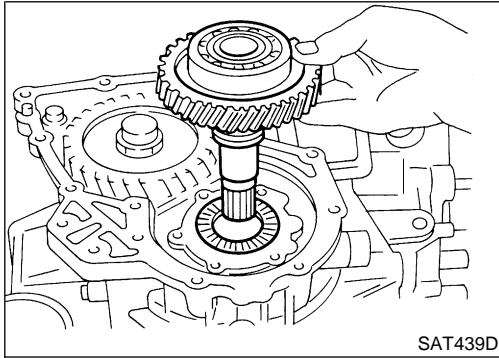

3. Install output shaft on transmission case.

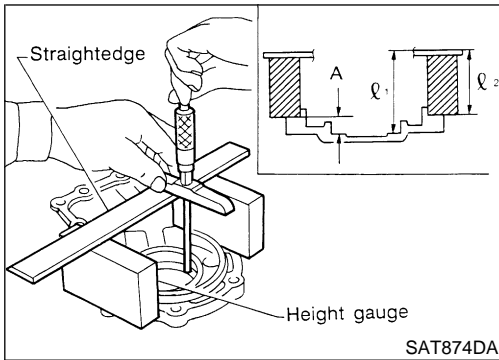


4. Measure dimensions " l_1 " and " l_2 " at side cover and then calculate dimension "A".

- Measure dimension " l_1 " and " l_2 " in at least two places
"A": Distance between transmission case fitting surface and adjusting shim mating surface

$$A = l_1 - l_2$$

l_2 : Height of gauge

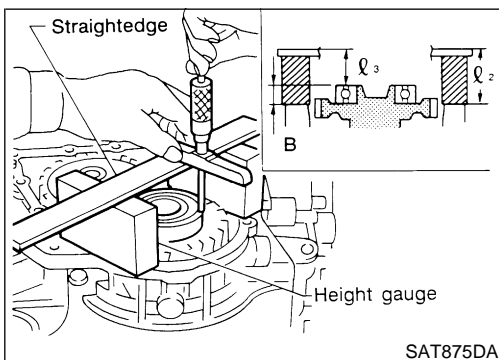


5. Measure dimensions " l_2 " and " l_3 " and then calculate dimension "B".

Measure " l_2 " and " l_3 " in at least two places.

"B": Distance between the end of output shaft bearing outer race and the side cover fitting surface of transmission case

$$B = l_2 - l_3$$

l_2 : Height of gauge

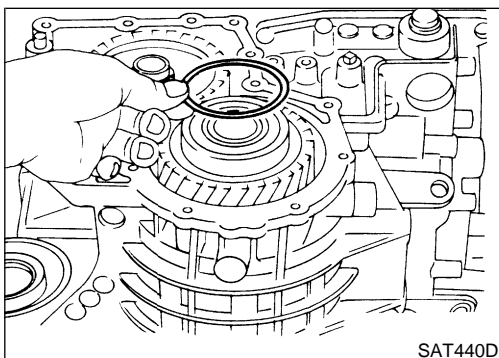

6. Select proper thickness of adjusting shim so that output shaft end play (clearance between side cover and output shaft bearing) is within specifications.

Output shaft end play (A - B):

0 - 0.5 mm (0 - 0.020 in)


Output shaft end play adjusting shim:

Refer to "Output Shaft", AT-386.


7. Install adjusting shim on output shaft bearing.

ASSEMBLY


Adjustment (1) (Cont'd)

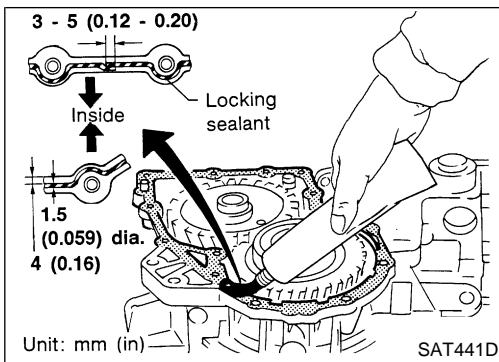

- Apply locking sealant (Loctite 5/8 or equivalent) to transmission case as shown in illustration.

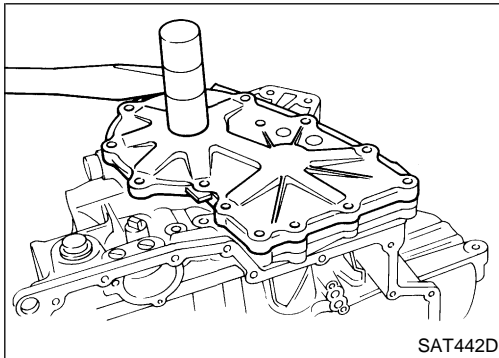


- Install side cover on transmission case.
 - Apply locking sealant to the mating surface of transmission case.

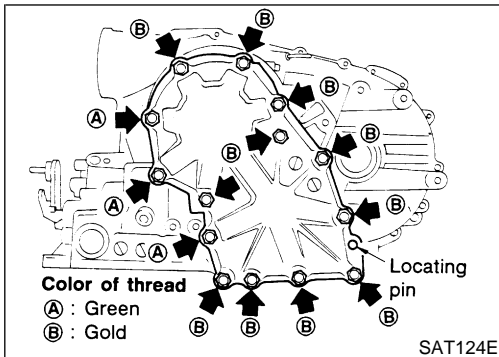

- Tighten side cover fixing bolts to specified torque.


: 26 - 30 N-m (2.7 - 3.1 kg-m, 20 - 22 ft-lb)

- Do not mix bolts A and B.
- Always replace bolts A as they are self-sealing bolts.

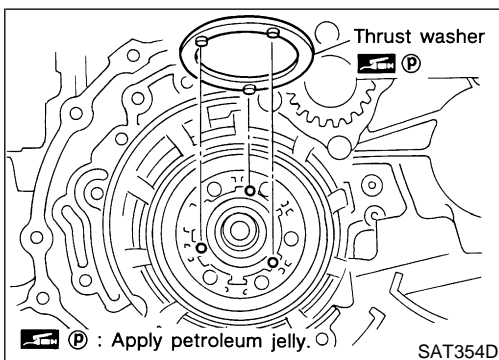

Assembly (2)

- Remove paper rolled around bearing retainer.
- Install thrust washer on bearing retainer.
 - Apply petroleum jelly to thrust washer.

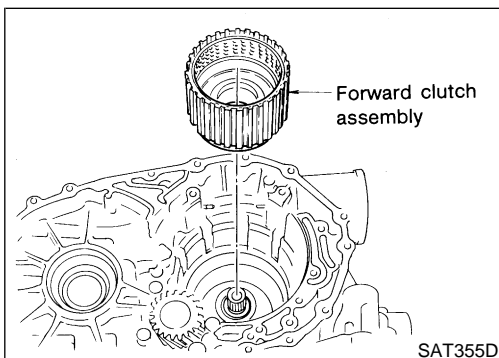

- Install forward clutch assembly.
 - Align teeth of low & reverse brake drive plates before installing.
 - Make sure that bearing retainer seal rings are not spread.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA


SC

EL


IDX

ASSEMBLY


Assembly (2) (Cont'd)

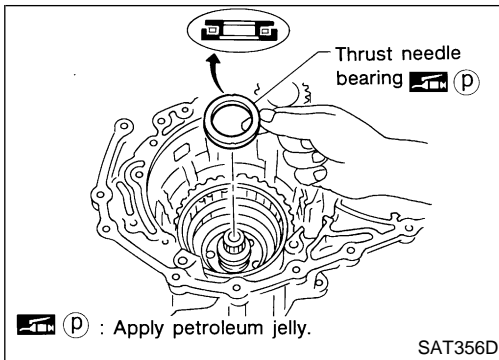


4. Install thrust needle bearing on bearing retainer.
 - Apply petroleum jelly to thrust bearing.
 - Pay attention to direction of thrust needle bearing.

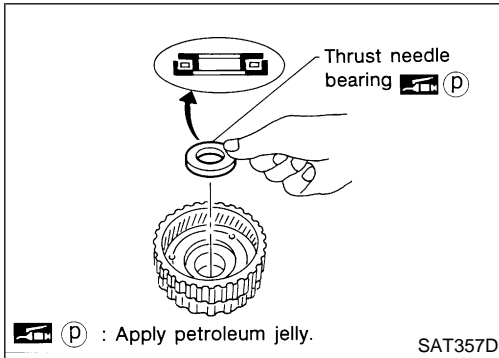


5. Install thrust needle bearing on rear internal gear.
 - Apply petroleum jelly to thrust needle bearing.
 - Pay attention to direction of thrust needle bearing.

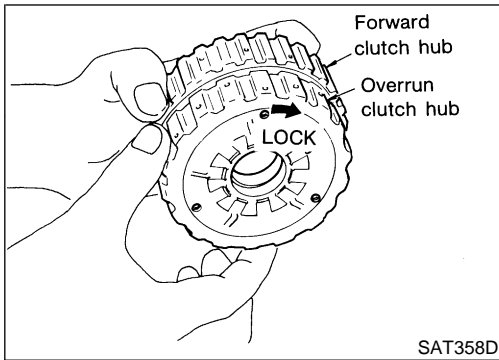

6. Hold forward clutch hub and turn overrun clutch hub. Check overrun clutch hub for directions of lock and unlock.
 - If not as shown in illustration, check installed direction of forward one-way clutch.

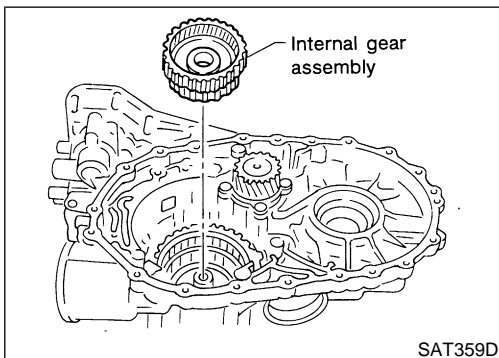


7. Install rear internal gear assembly.
 - Align teeth of forward clutch and overrun clutch drive plate.

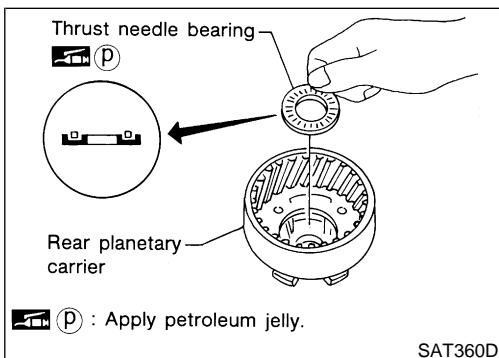


8. Install needle bearing on rear planetary carrier.
 - Apply petroleum jelly to needle bearing.
 - Pay attention to direction of needle bearing.

ASSEMBLY


Assembly (2) (Cont'd)

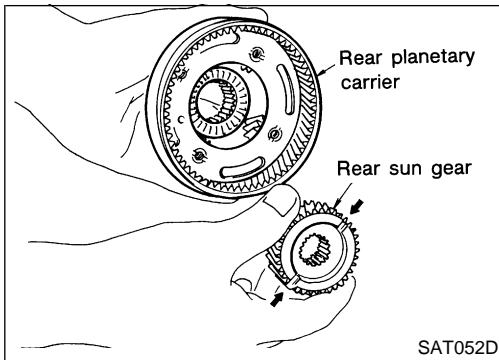


9. Install rear sun gear on rear planetary carrier.
 - Pay attention to direction of rear sun gear.

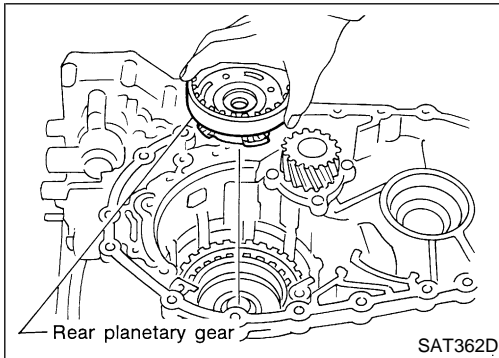


10. Install rear planetary carrier on transmission case.

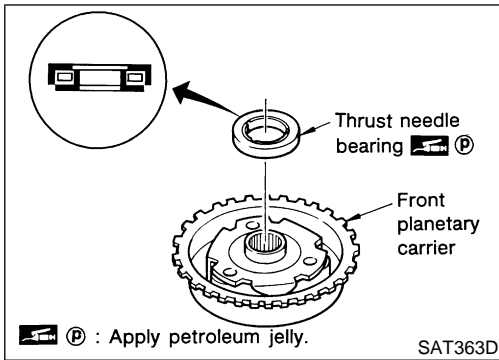

11. Install thrust needle bearing on front planetary carrier.
 - Apply petroleum jelly to thrust needle bearing.
 - Pay attention to direction of thrust needle bearing.

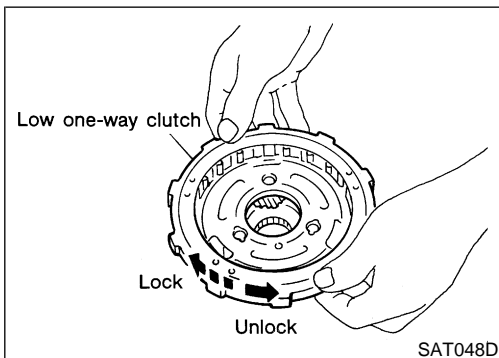

12. Install low one-way clutch to front planetary carrier by turning it in the direction of the arrow as shown.
13. While holding front planetary carrier, turn low one-way clutch. Check low one-way clutch for correct directions of lock and unlock.

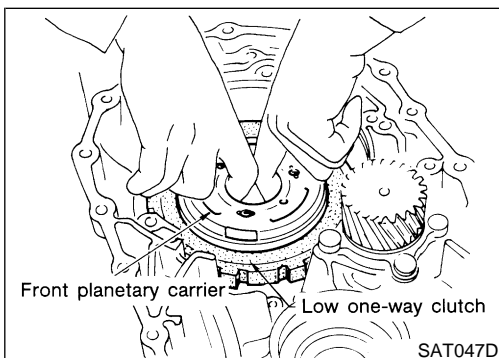

14. Install front planetary carrier assembly on transmission case.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA


SC

EL


IDX

ASSEMBLY


Assembly (2) (Cont'd)

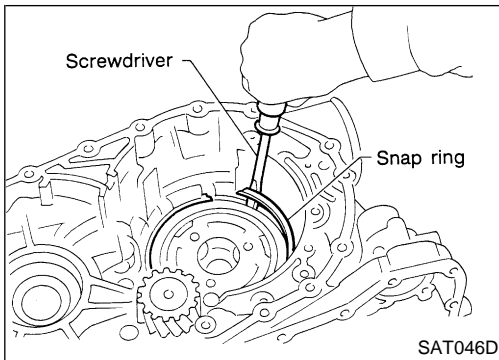


15. Install snap ring with screwdriver.
- **Forward clutch and bearings must be correctly installed for snap ring to fit groove of transmission case.**

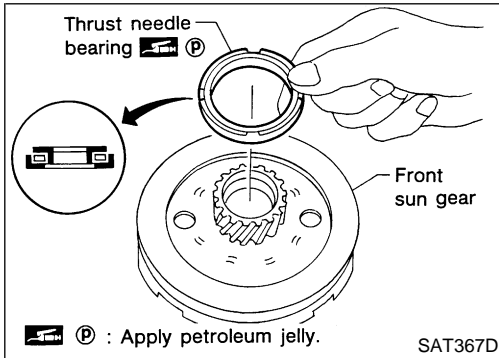


16. Install needle bearing on front sun gear.
- **Apply petroleum jelly to needle bearing.**
 - **Pay attention to direction of needle bearing.**

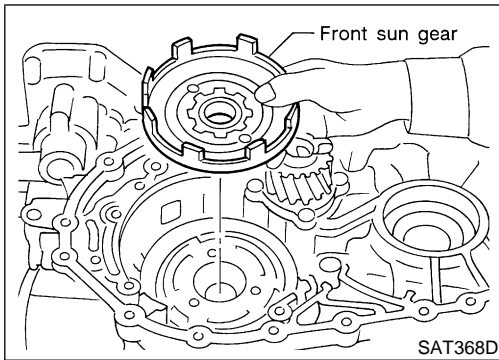

17. Install front sun gear on front planetary carrier.

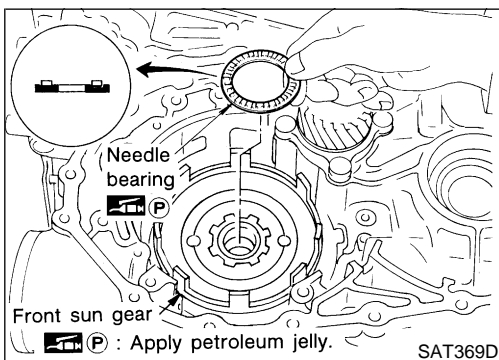


18. Install needle bearing on front sun gear.
- **Apply petroleum jelly to needle bearing.**
 - **Pay attention to direction of needle bearing.**

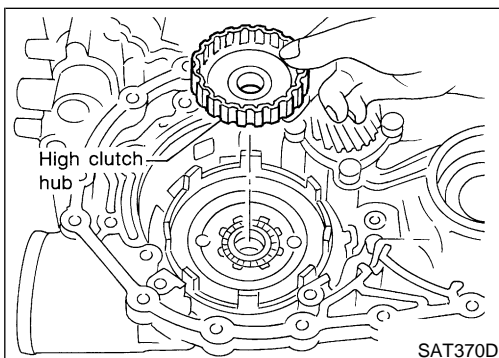


19. Install high clutch hub on front sun gear.

ASSEMBLY


Assembly (2) (Cont'd)

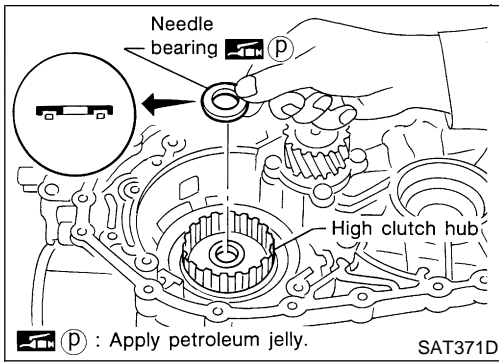

20. Install needle bearing on high clutch hub.
- Apply petroleum jelly to needle bearing.
 - Pay attention to direction of needle bearing.

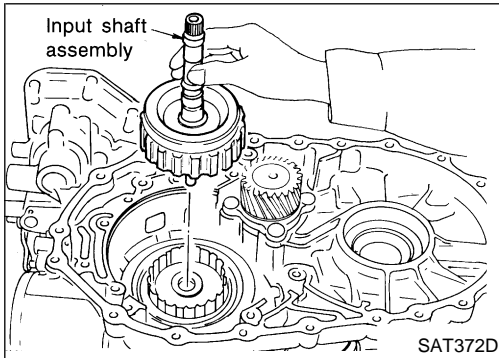

21. Remove paper rolled around input shaft.
22. Install input shaft assembly.
- Align teeth of high clutch drive plates before installing.

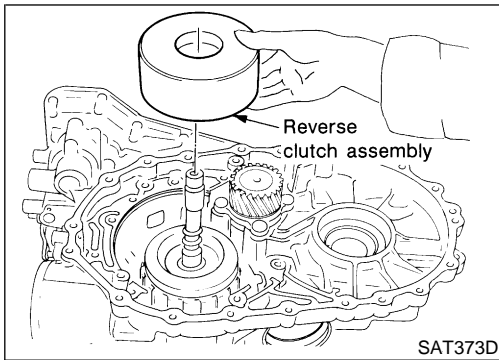

23. Install reverse clutch assembly.
- Align teeth of reverse clutch drive plates before installing.

Adjustment (2)

NIAT0301

When any parts listed below are replaced, adjust total end play and reverse clutch end play.

Part name	Total end play	Reverse clutch end play
Transmission case	●	●
Overrun clutch hub	●	●
Rear internal gear	●	●
Rear planetary carrier	●	●
Rear sun gear	●	●
Front planetary carrier	●	●
Front sun gear	●	●
High clutch hub	●	●
High clutch drum	●	●
Oil pump cover	●	●
Reverse clutch drum	—	●

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA






SC

EL

IDX

ASSEMBLY

Adjustment (2) (Cont'd)

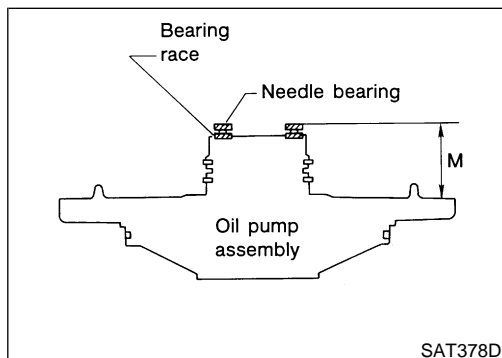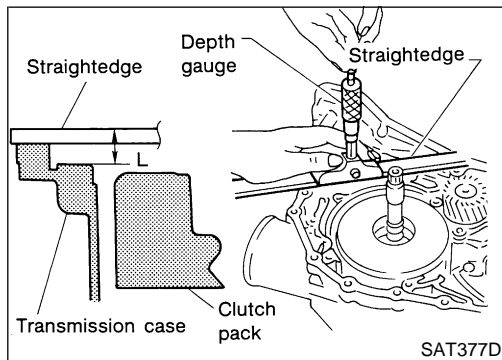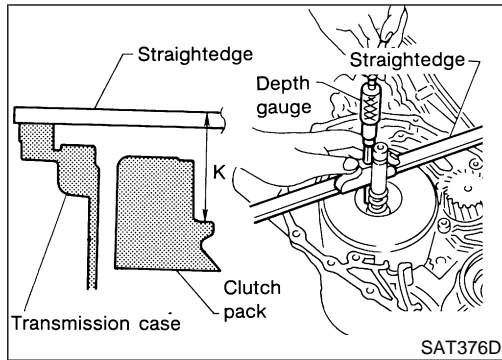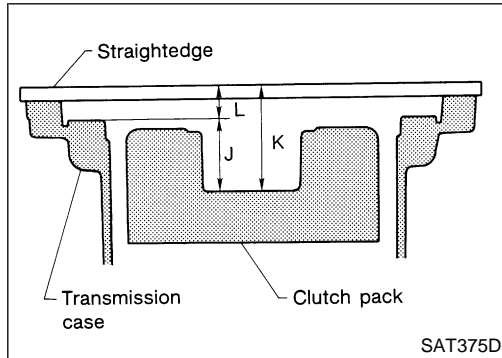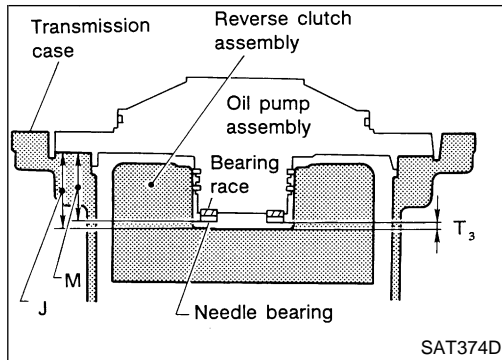

TOTAL END PLAY

NIAT0301S01

- Measure clearance between reverse clutch drum and needle bearing for oil pump cover.
- Select proper thickness of bearing race so that end play is within specifications.

1. Measure dimensions "K" and "L" and then calculate dimension "J".

- a. Measure dimension "K".

- b. Measure dimension "L".
- c. Calculate dimension "J".


"J": Distance between oil pump fitting surface of transmission case and needle bearing mating surface of high clutch drum

$$J = K - L$$

2. Measure dimension "M".
 - a. Place bearing race and needle bearing on oil pump assembly.

ASSEMBLY

Adjustment (2) (Cont'd)

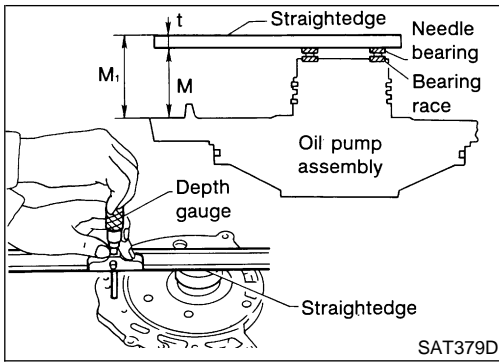


- b. Measure dimension "M".
"M": Distance between transmission case fitting surface and needle bearing on oil pump cover
"M₁": Indication of gauge

GI

MA

EM

LC

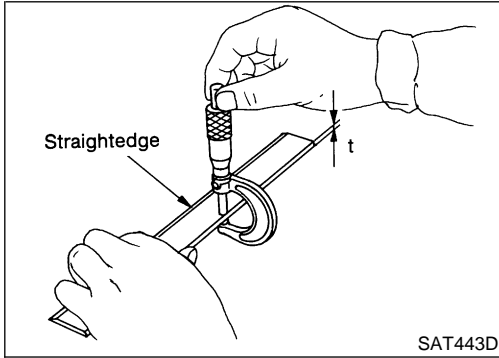

- c. Measure thickness of straightedge "t".
 $M = M_1 - t$

EC

FE

CL

MT

3. Adjust total end play "T₃".

$$T_3 = J - M$$

Total end play "T₃":

0.25 - 0.55 mm (0.0098 - 0.0217 in)

- Select proper thickness of bearing race so that total end play is within specifications.


Bearing races: Refer to "Total End Play", AT-387.

AT

AX

SU

BR

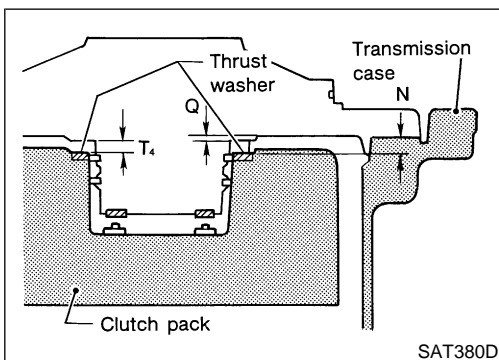

REVERSE CLUTCH END PLAY

NIAT0301S02


- Measure clearance between oil pump cover and thrust washer for reverse clutch drum.
- Select proper thickness of thrust washer so that end play is within specifications.

ST

RS

BT

HA

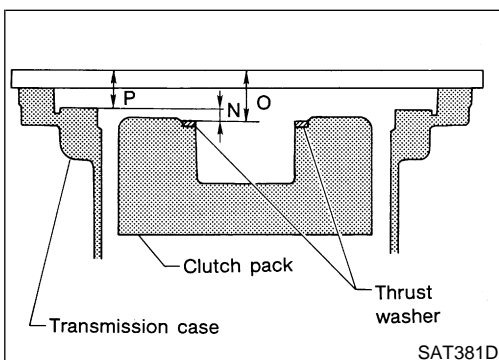

1. Measure dimensions "O" and "P" and then calculate dimension "N".


SC

EL


IDX

ASSEMBLY

Adjustment (2) (Cont'd)

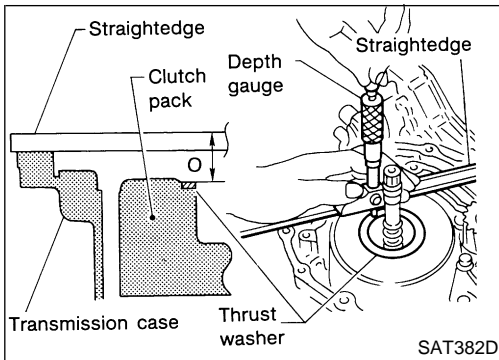


- a. Place thrust washer on reverse clutch drum.
- b. Measure dimension "O".

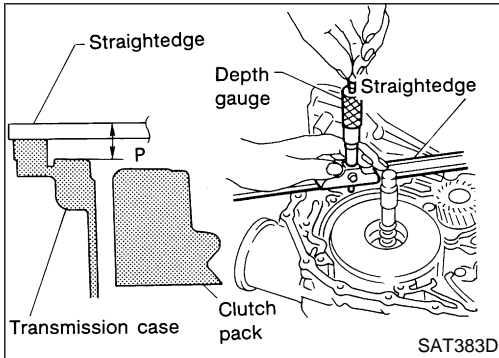


- c. Measure dimension "P".
- d. Calculate dimension "N".
"N": Distance between oil pump fitting surface of transmission case and thrust washer on reverse clutch drum


$$N = O - P$$

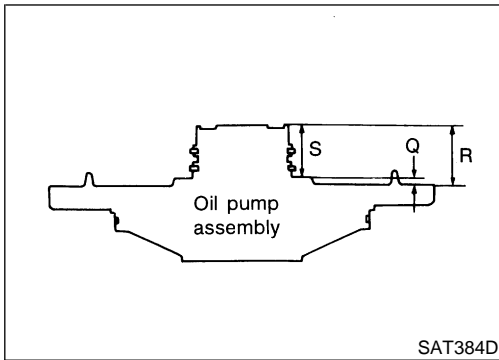

2. Measure dimensions "R" and "S" and then calculate dimension "Q".

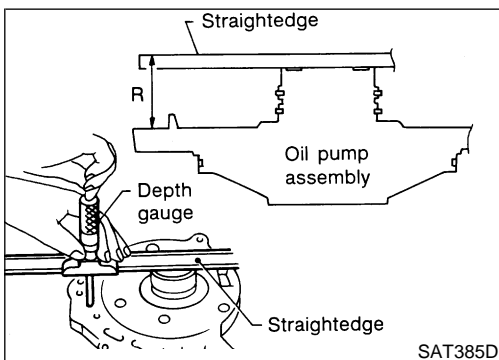

- a. Measure dimension "R".

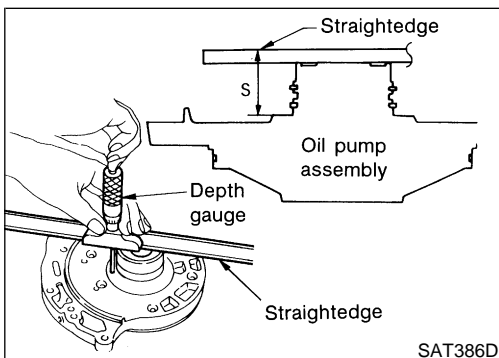

- b. Measure dimension "S".
- c. Calculate dimension "Q".
"Q": Distance between transmission case fitting surface and thrust washer mating surface

$$Q = R - S$$

ASSEMBLY

Adjustment (2) (Cont'd)

- Adjust reverse clutch end play "T₄".


$$T_4 = N - Q$$

Reverse clutch end play:

0.65 - 1.00 mm (0.0256 - 0.0394 in)

- Select proper thickness of thrust washer so that reverse clutch end play is within specifications.

Thrust washer: Refer to "Reverse Clutch End Play", AT-387.

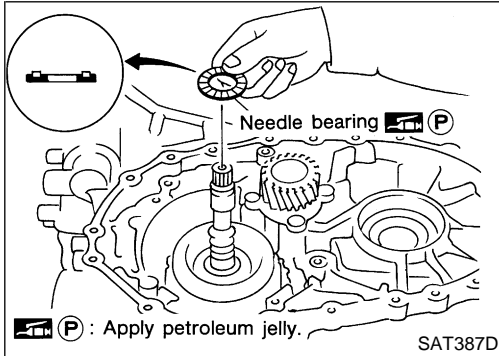


Assembly (3)


NIAT0302

- Remove reverse clutch assembly and install needle bearing on high clutch assembly.
- Install reverse clutch assembly.

- Pay attention to direction of needle bearing.**

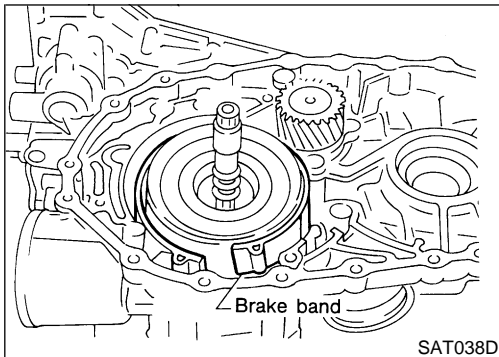


- Install anchor end pin and lock nut on transmission case.
- Place brake band on outside of reverse clutch drum. Tighten anchor end pin just enough so that brake band is evenly fitted on reverse clutch drum.

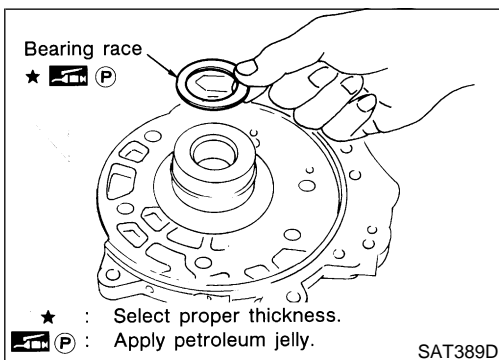

- Place bearing race selected in total end play adjustment step on oil pump cover.

- Apply petroleum jelly to bearing race.**

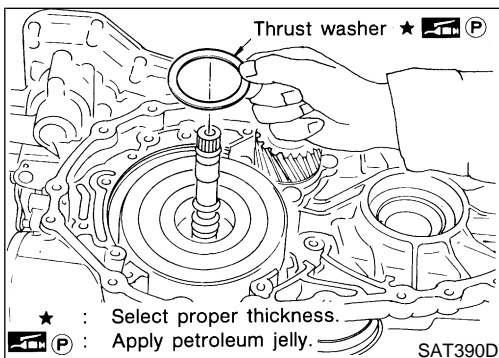

- Place thrust washer selected in reverse clutch end play step on reverse clutch drum.

- Apply petroleum jelly to thrust washer.**

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA


SC

EL


IDX

ASSEMBLY


Assembly (3) (Cont'd)

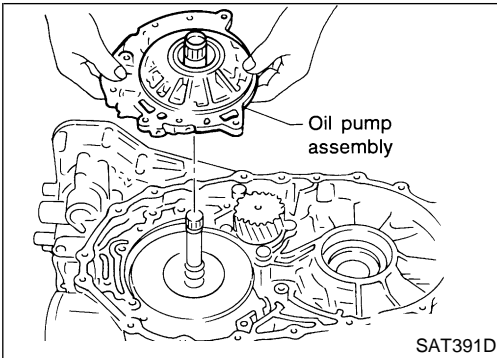


7. Install oil pump assembly on transmission case.

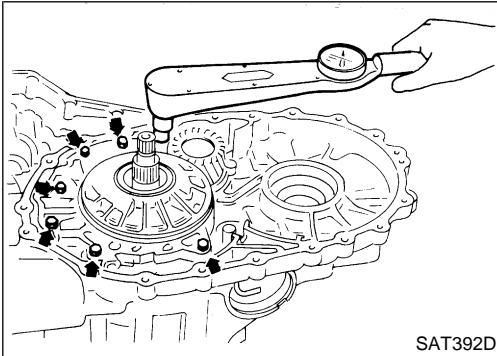


8. Tighten oil pump fixing bolts to specified torque.
☑ : 18 - 21 N·m (1.8 - 2.1 kg·m, 13 - 15 ft·lb)

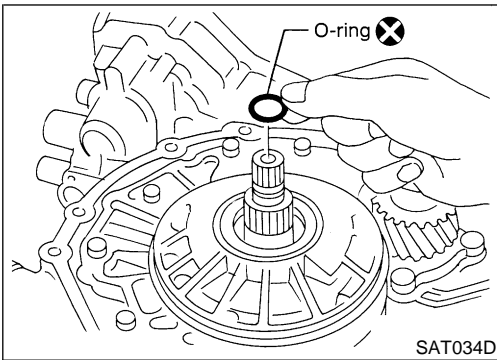

9. Install O-ring to input shaft.
● **Apply ATF to O-ring.**

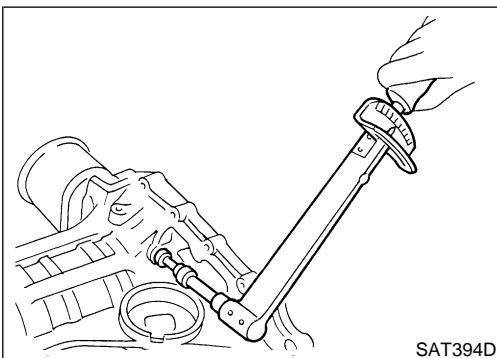


10. Adjust brake band.
a. Tighten anchor end pin to specified torque.
Anchor end pin:
☑ : 3.9 - 5.9 N·m (0.4 - 0.6 kg·m, 35 - 52 in·lb)

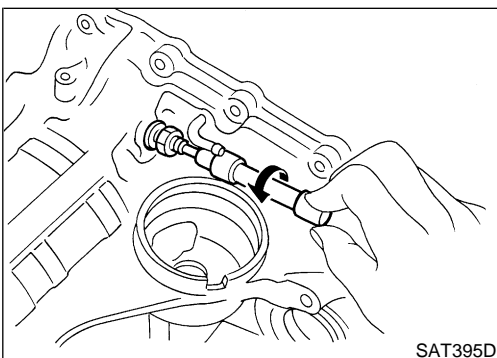


b. Back off anchor end pin two and a half turns.

ASSEMBLY


Assembly (3) (Cont'd)

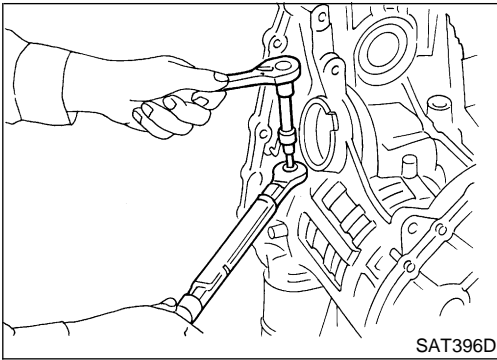

- c. While holding anchor end pin, tighten lock nut.

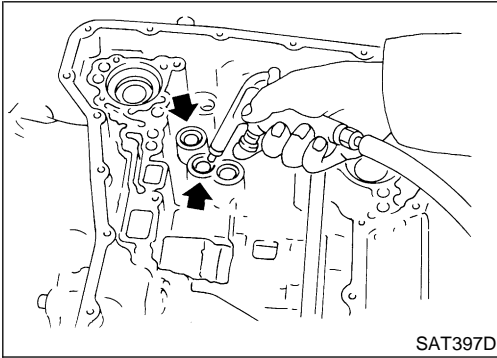


11. Apply compressed air to oil holes of transmission case and check operation of brake band.

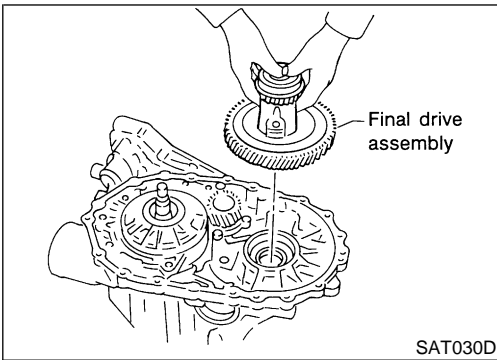

Assembly (4)

1. Install final drive assembly on transmission case.

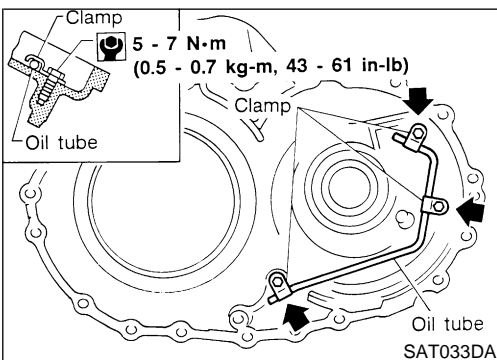

2. Install oil tube on converter housing.

GI

MA

EM

LC

EC

FE

CL

MT

NIAT0303

AT

AX

SU

BR

ST

RS

BT

HA


SC

EL

IDX


ASSEMBLY

Assembly (4) (Cont'd)

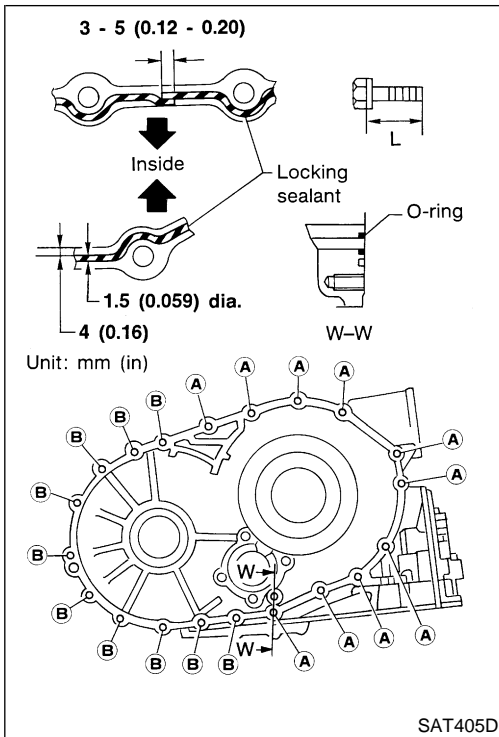


3. Install O-ring on differential oil port of transmission case.
4. Install converter housing on transmission case.
- **Apply locking sealant to mating surface of converter housing.**


Bolt	Length mm (in)
A	32.8 (1.291)
B	40 (1.57)

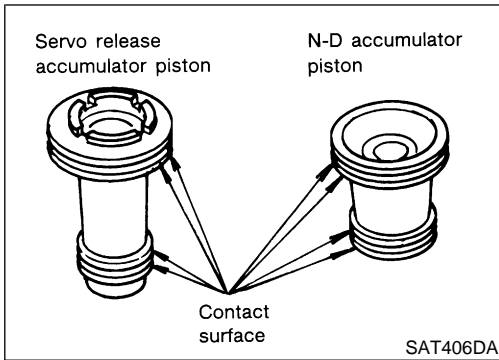

5. Install accumulator piston.
 - a. Check contact surface of accumulator piston for damage.

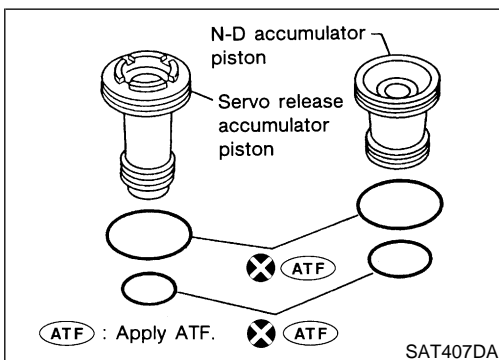


- b. Install O-rings on accumulator piston.
 - Apply ATF to O-rings.
 - Accumulator piston O-rings:**
Refer to "Accumulator", AT-387.

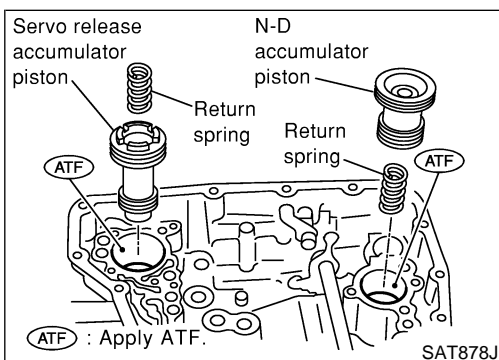



- c. Install accumulator pistons and return springs on transmission case.
 - **Apply ATF to inner surface of transmission case.**
Return springs:
Refer to "Accumulator", AT-387.

ASSEMBLY


Assembly (4) (Cont'd)

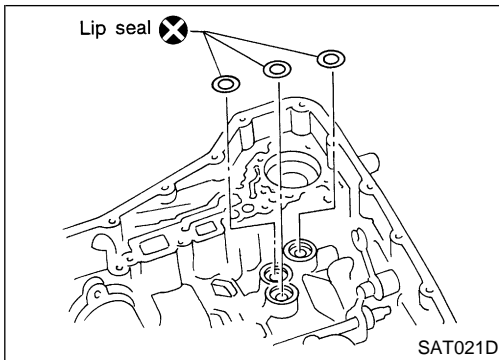

6. Install lip seals for band servo oil holes on transmission case.
 - Apply petroleum jelly to lip seals.

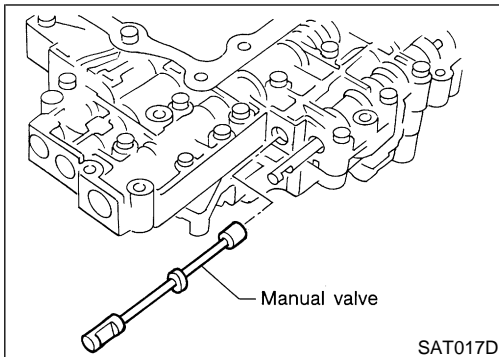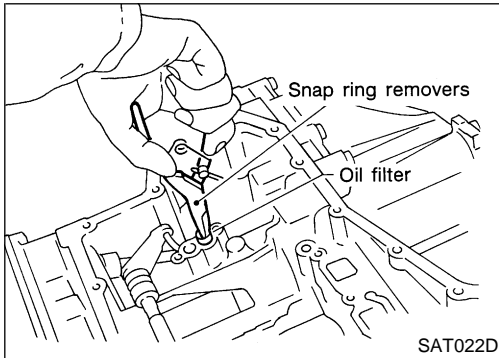

7. Install control valve assembly.
 - a. Insert manual valve into control valve assembly.
 - Apply ATF to manual valve.

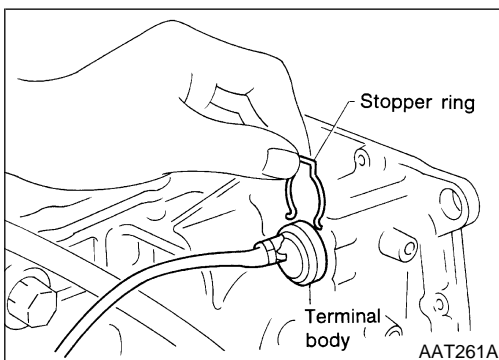

- b. Pass solenoid harness through transmission case and install terminal body on transmission case by pushing it.
 - c. Install stopper ring to terminal body.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA


SC

EL

IDX

ASSEMBLY


Assembly (4) (Cont'd)

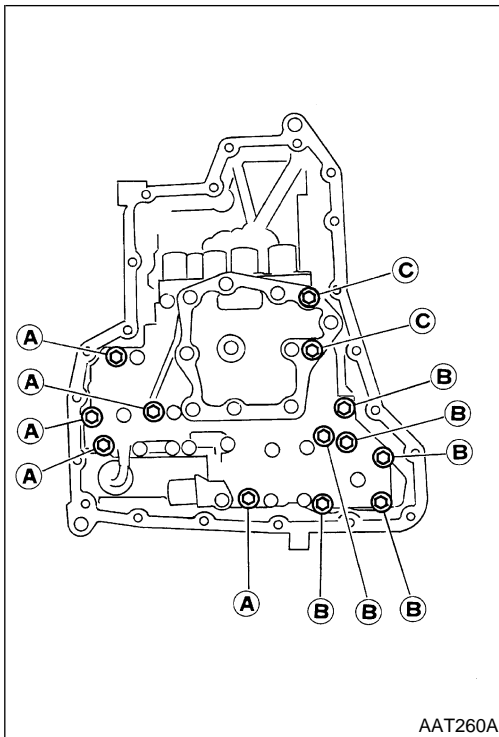


d. Tighten bolts A, B and C.

 : 7 - 9 N·m (0.7 - 0.9 kg-m, 61 - 78 in-lb)


Bolt length, number and location

Bolt symbol	A	B	C
Bolt length "ℓ" 	40.0 mm (1.575 in)	33.0 mm (1.299 in)	43.5 mm (1.713 in)
Number of bolts	5	6	2

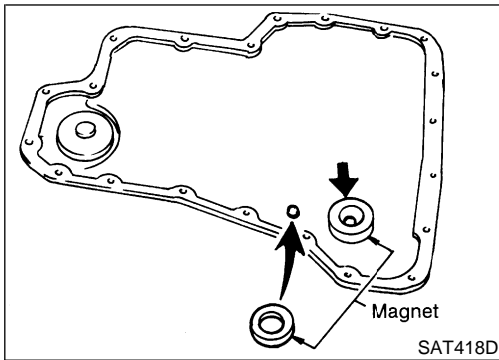

8. Install oil pan.

a. Attach magnet to oil pan.

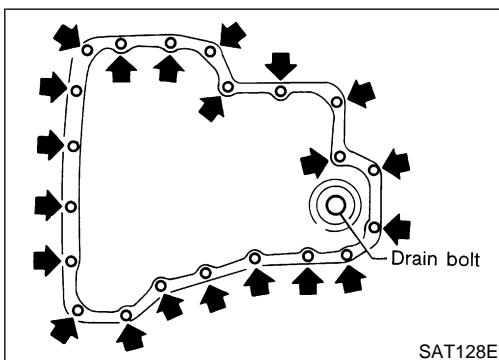


b. Install new oil pan gasket on transmission case.

c. Install oil pan on transmission case.

- **Always replace oil pan bolts as they are self-sealing bolts.**
- **Tighten the bolts in a criss-cross pattern to prevent dislocation of gasket.**

d. Tighten drain plug to specified torque.

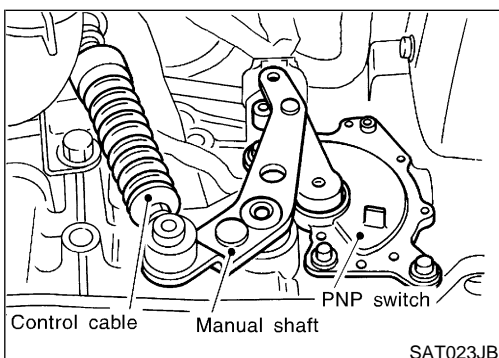

9. Install PNP switch.


a. Set manual shaft in "P" position.

b. Temporarily install PNP switch on manual shaft.

c. Move selector lever to "N" position.


ASSEMBLY

Assembly (4) (Cont'd)

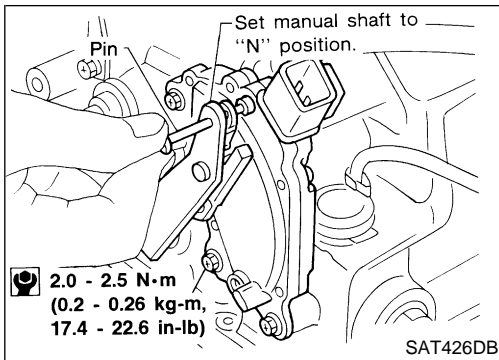


- d. Use a 4 mm (0.157 in) pin for this adjustment.
 - 1) Insert the pin straight into the manual shaft adjustment hole.
 - 2) Rotate PNP switch until the pin can also be inserted straight into hole in PNP switch.
- e. Tighten PNP switch fixing bolts.
- f. Remove pin from adjustment hole after adjusting PNP switch.

GI
MA
EM

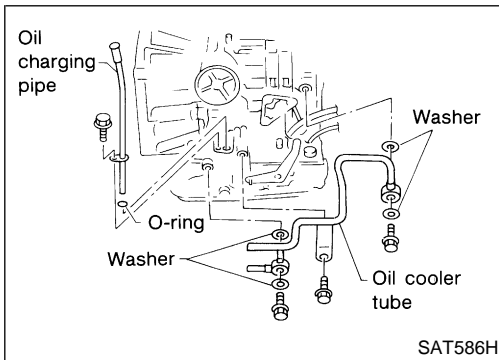

10. Install oil charging pipe and oil cooler tube to transmission case.

LC
EC

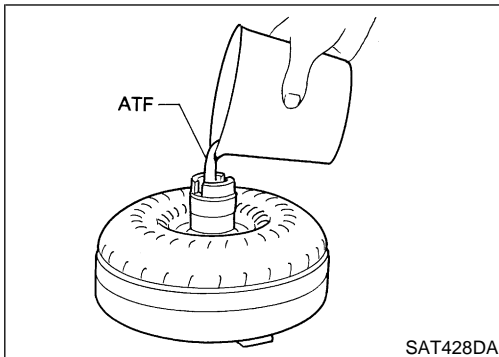

11. Install torque converter.
 - a. Pour ATF into torque converter.
 - **Approximately 1 liter (1-1/8 US qt, 7/8 Imp qt) of fluid is required for a new torque converter.**
 - **When reusing old torque converter, add the same amount of fluid as was drained.**


FE
CL
MT

AT

AX

SU

BR

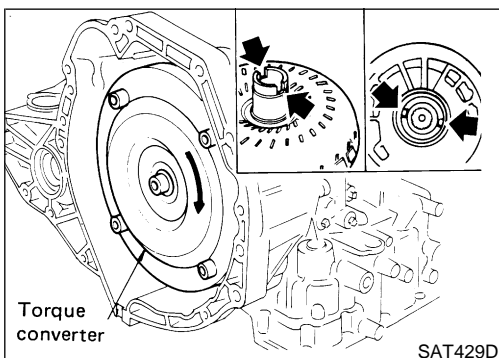


- b. Install torque converter while aligning notches of torque converter with notches of oil pump.

ST

RS

BT

HA

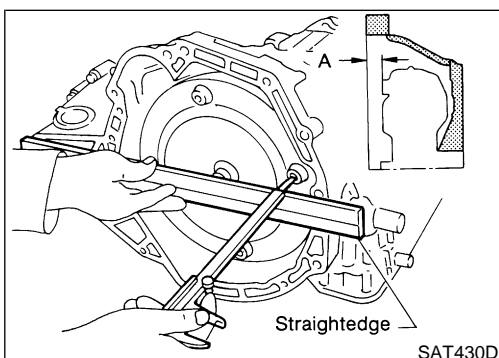

- c. Measure distance "A" to check that torque converter is in proper position.

Distance "A":

QG18DE: 21.1 mm (0.831 in)

SR20DE: 15.9 mm (0.626 in) or more

SC

EL

IDX

SERVICE DATA AND SPECIFICATIONS (SDS)

General Specifications

General Specifications

NIAT0304

Engine		QG18DE	SR20DE
Automatic transaxle model		RE4F03B	
Automatic transaxle assembly	Model code number	3AX60	3AX11
Transaxle gear ratio	1st	2.861	
	2nd	1.562	
	3rd	1.000	
	4th	0.697	
	Reverse	2.310	
	Final drive	3.827	4.072
Recommended fluid	Nissan Matic "D" (Continental U.S. and Alaska) or Genuine Nissan Automatic Transmission Fluid (Canada)*1		
Fluid capacity	7.0ℓ (7-3/8 US qt, 6-1/8 Imp qt)		

*1: Refer to **MA-13**, "Fluids and Lubricants".

Shift Schedule

NIAT0305

VEHICLE SPEED WHEN SHIFTING GEARS

NIAT0305S01

QG18DE (Calif. CA Model)

Throttle position	Shift pattern	Vehicle speed km/h (MPH)						
		D ₁ → D ₂	D ₂ → D ₃	D ₃ → D ₄	D ₄ → D ₃	D ₃ → D ₂	D ₂ → D ₁	1 ₂ → 1 ₁
Full throttle	Comfort	54 - 62 (34 - 39)	103 - 111 (64 - 69)	163 - 171 (101 - 106)	159 - 167 (99 - 104)	93 - 101 (58 - 63)	41 - 49 (25 - 30)	54 - 62 (34 - 39)
Half throttle	Comfort	32 - 40 (20 - 25)	60 - 68 (37 - 42)	124 - 132 (77 - 82)	70 - 78 (43 - 48)	35 - 43 (22 - 27)	25 - 33 (16 - 21)	54 - 62 (34 - 39)

SR20DE

Throttle position	Shift pattern	Vehicle speed km/h (MPH)						
		D ₁ → D ₂	D ₂ → D ₃	D ₃ → D ₄	D ₄ → D ₃	D ₃ → D ₂	D ₂ → D ₁	1 ₂ → 1 ₁
Full throttle	Comfort	51 - 59 (32 - 37)	97 - 105 (60 - 65)	153 - 161 (95 - 100)	149 - 157 (93 - 98)	87 - 95 (54 - 59)	41 - 49 (25 - 30)	51 - 59 (32 - 37)
Half throttle	Comfort	33 - 41 (21 - 25)	58 - 66 (36 - 41)	121 - 129 (75 - 80)	72 - 80 (45 - 50)	34 - 42 (21 - 26)	9 - 17 (6 - 11)	51 - 59 (32 - 37)

QG18DE (Except Calif. CA Model)

Throttle position	Shift pattern	Vehicle speed km/h (MPH)						
		D ₁ → D ₂	D ₂ → D ₃	D ₃ → D ₄	D ₄ → D ₃	D ₃ → D ₂	D ₂ → D ₁	1 ₂ → 1 ₁
Full throttle	Comfort	52 - 60 (32 - 37)	100 - 108 (62 - 67)	158 - 166 (98 - 103)	154 - 162 (96 - 101)	70 - 98 (56 - 61)	41 - 49 (25 - 30)	52 - 60 (32 - 37)
Half throttle	Comfort	31 - 39 (19 - 24)	58 - 66 (36 - 41)	119 - 127 (74 - 79)	68 - 76 (42 - 47)	34 - 42 (21 - 26)	24 - 32 (15 - 20)	52 - 60 (32 - 37)

SERVICE DATA AND SPECIFICATIONS (SDS)

Shift Schedule (Cont'd)

VEHICLE SPEED WHEN PERFORMING LOCK-UP QG18DE (Calif. CA Model)

NIAT0305S02

Throttle opening	OD switch	Shift pattern	Vehicle speed km/h (MPH)	
			Lock-up ON	Lock-up OFF
2/8	ON (D ₄)	Comfort	97 - 105 (60 - 65)	63 - 71 (39 - 44)
	OFF (D ₃)	Comfort	86 - 94 (53 - 58)	83 - 91 (52 - 57)

SR20DE

Throttle opening	OD switch	Shift pattern	Vehicle speed km/h (MPH)	
			Lock-up ON	Lock-up OFF
2/8	ON (D ₄)	Comfort	105 - 113 (65 - 70)	74 - 82 (46 - 51)
	OFF (D ₃)	Comfort	86 - 94 (53 - 58)	83 - 91 (52 - 57)

QG18DE (Except Calif. CA Model)

Throttle opening	OD switch	Shift pattern	Vehicle speed km/h (MPH)	
			Lock-up ON	Lock-up OFF
2/8	ON (D ₄)	Comfort	94 - 102 (58 - 63)	61 - 69 (38 - 43)
	OFF (D ₃)	Comfort	86 - 94 (53 - 58)	83 - 91 (52 - 57)

Stall Revolution

NIAT0306

Engine model	Stall revolution rpm
QG18DE	2,350 - 2,800
SR20DE	2,350 - 2,850

Line Pressure

NIAT0307

Engine speed rpm	Line pressure kPa (kg/cm ² , psi)			
	R position	D position	2 position	1 position
Idle	778 (7.9, 113)	500 (5.1, 73)	500 (5.1, 73)	500 (5.1, 73)
Stall	1,816 (18.5, 263)	1,167 (11.9, 169)	1,167 (11.9, 169)	1,167 (11.9, 169)

GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

SERVICE DATA AND SPECIFICATIONS (SDS)

Control Valves

Control Valves

NIAT0308

CONTROL VALVE AND PLUG RETURN SPRINGS

NIAT0308S01

Unit: mm (in)

	No.	Parts	Part No.*	Free length	Outer diameter
Upper body Refer to "Control Valve Upper Body", AT-312.	35	3-2 timing valve spring	31736-01X00	23.29 (0.917)	6.65 (0.2618)
	19	Cooler check valve spring	31742-3AX05	28.04 (1.1039)	7.15 (0.2815)
	23	Pilot valve spring	31742-3AX03	38.98 (1.5346)	8.9 (0.350)
	15	1-2 accumulator valve spring	31742-3AX00	20.5 (0.807)	6.95 (0.2736)
	28	1-2 accumulator piston spring	31742-3AX09	55.66 (2.1913)	19.5 (0.7677)
	33	1st reducing valve spring	31742-80X05	27.0 (1.063)	7.0 (0.276)
	2	Overrun clutch reducing valve spring	31742-80X06	37.5 (1.476)	7.0 (0.276)
	7	Torque converter relief valve spring	31742-3AX04	33.3 (1.3110)	9.0 (0.354)
	10	Torque converter clutch control valve spring	31742-3AX02	53.01 (2.0870)	6.5 (0.256)
Lower body Refer to "Control Valve Lower Body", AT-316.	34	Shuttle control valve spring	31762-41X04	51.0 (2.0079)	5.65 (0.2224)
	18	Pressure regulator valve spring	31742-80X13	45.0 (1.772)	15.0 (0.591)
	23	Overrun clutch control valve spring	31762-80X00	21.7 (0.854)	7.0 (0.276)
	27	Accumulator control valve spring	31742-80X02	22.0 (0.866)	6.5 (0.256)
	29	Shift valve A spring	31762-80X00	21.7 (0.854)	7.0 (0.276)
	2	Shift valve B spring	31762-80X00	21.7 (0.854)	7.0 (0.276)
	11	Pressure modifier valve spring	31742-41X15	30.5 (1.201)	9.8 (0.386)
	7	Pressure modifier valve spring	31742-80X16	32.0 (1.260)	6.9 (0.272)
	—	Oil cooler relief valve spring	31872-31X00	17.02 (0.6701)	8.0 (0.315)
—	T/C pressure spring	31742-3AX11	9.0 (0.354)	7.3 (0.287)	

*: Always check with the Parts Department for the latest parts information.

Clutch, Brake and Brake Band

NIAT0309

REVERSE CLUTCH

NIAT0309S01

Number of drive plates		2
Number of driven plates		2
Drive plate thickness mm (in)	Standard	2.0 (0.079)
	Allowable limit	1.8 (0.071)
Clearance mm (in)	Standard	0.5 - 0.8 (0.020 - 0.031)
	Allowable limit	1.2 (0.047)
Thickness of retaining plates	Thickness mm (in)	Part number*
	4.4 (0.173)	31537-31X00
	4.6 (0.181)	31537-31X01
	4.8 (0.189)	31537-31X02
	5.0 (0.197)	31537-31X03
	5.2 (0.205)	31537-31X04

*: Always check with the Parts Department for the latest parts information.

SERVICE DATA AND SPECIFICATIONS (SDS)

Clutch, Brake and Brake Band (Cont'd)

HIGH CLUTCH

—NIAT0309S02

Number of drive plates		3	GI
Number of driven plates		5	
Drive plate thickness mm (in)	Standard	2.0 (0.079)	MA
	Allowable limit	1.8 (0.071)	
Clearance mm (in)	Standard	1.4 - 1.8 (0.055 - 0.071)	EM
	Allowable limit	2.4 (0.094)	
Thickness of retaining plates	Thickness mm (in)	Part number*	LC
	4.8 (0.189)	31537-32X05	
	5.0 (0.197)	31537-32X06	EC
	5.2 (0.205)	31537-32X07	
	5.4 (0.213)	31537-32X08	
	5.6 (0.220)	31537-32X09	
	5.8 (0.228)	31537-32X10	FE
6.0 (0.236)	31537-32X11		

*: Always check with the Parts Department for the latest parts information.

FORWARD CLUTCH

NIAT0309S03

Number of drive plates		5	CL
Number of driven plates		5	MT
Drive plate thickness mm (in)	Standard	1.8 (0.071)	AT
	Allowable limit	1.6 (0.063)	
Clearance mm (in)	Standard	0.45 - 0.85 (0.0177 - 0.0335)	AX
	Allowable limit	1.85 (0.0728)	
Thickness of retaining plate	Thickness mm (in)	Part number*	SU
	3.6 (0.142)	31537-31X60	
	3.8 (0.150)	31537-31X61	
	4.0 (0.157)	31537-31X62	BR
	4.2 (0.165)	31537-31X63	
	4.4 (0.173)	31537-31X64	
	4.6 (0.181)	31537-31X65	ST

*: Always check with the Parts Department for the latest parts information.

OVERRUN CLUTCH

NIAT0309S04

Number of drive plates		3	RS
Number of driven plates		4	BT
Drive plate thickness mm (in)	Standard	1.6 (0.063)	HA
	Allowable limit	1.4 (0.055)	
Clearance mm (in)	Standard	1.0 - 1.4 (0.039 - 0.055)	SC
	Allowable limit	2.0 (0.079)	
Thickness of retaining plate	Thickness mm (in)	Part number*	EL
	3.6 (0.142)	31567-31X79	
	3.8 (0.150)	31567-31X80	
	4.0 (0.157)	31567-31X81	
	4.2 (0.165)	31567-31X82	
	4.4 (0.173)	31567-31X83	IDX

*: Always check with the Parts Department for the latest parts information.

SERVICE DATA AND SPECIFICATIONS (SDS)

Clutch, Brake and Brake Band (Cont'd)

LOW & REVERSE BRAKE

NIAT0309S05

Number of drive plates		5
Number of driven plates		4 + 1
Drive plate thickness mm (in)	Standard	2.0 (0.079)
	Allowable limit	1.8 (0.071)
Clearance mm (in)	Standard	1.4 - 1.8 (0.055 - 0.071)
	Allowable limit	2.8 (0.110)
Thickness of retaining plate	Thickness mm (in)	Part number*
	3.6 (0.142)	31667-31X16
	3.8 (0.150)	31667-31X17
	4.0 (0.157)	31667-31X18
	4.2 (0.165)	31667-31X19
	4.4 (0.173)	31667-31X20
	4.6 (0.181)	31667-31X21

*: Always check with the Parts Department for the latest parts information.

BRAKE BAND

NIAT0309S06

Anchor end pin tightening torque	3.5 - 5.9 N·m (0.35 - 0.6 kg·m, 31 - 52 in·lb)
Number of returning revolutions for anchor end pin	2.5±0.125
Lock nut tightening torque	31 - 36 N·m (3.2 - 3.7 kg·m, 23 - 27 ft·lb)

Clutch and Brake Return Springs

NIAT0310
Unit: mm (in)

Parts		Free length	Outer diameter	Part number*
Forward clutch (Overrun clutch)	Outer (16 pcs)	26.6 (1.047)	10.6 (0.417)	31505-31X02
	Inner (16 pcs)	26.3 (1.035)	7.7 (0.303)	31505-31X03
Reverse clutch (16 pcs)		18.6 (0.732)	8.0 (0.315)	31505-31X00
High clutch (12 pcs)		19.7 (0.776)	11.1 (0.437)	31505-31X01
Low reverse brake (20 pcs)		25.1 (0.988)	7.6 (0.299)	31505-31X04

*: Always check with the Parts Department for the latest parts information.

Oil Pump

NIAT0311

Oil pump side clearance mm (in)		0.02 - 0.04 (0.0008 - 0.0016)
Thickness of inner gears and outer gears	Inner gear	
	Thickness mm (in)	Part number*
	9.99 - 10.00 (0.3933 - 0.3937)	31346-31X00
	9.98 - 9.99 (0.3929 - 0.3933)	31346-31X01
	9.97 - 9.98 (0.3925 - 0.3929)	31346-31X02
	Outer gear	
	Thickness mm (in)	Part number*
	9.99 - 10.00 (0.3933 - 0.3937)	31347-31X00
	9.98 - 9.99 (0.3929 - 0.3933)	31347-31X01
	9.97 - 9.98 (0.3925 - 0.3929)	31347-31X02
Clearance between oil pump housing and outer gear mm (in)	Standard	0.08 - 0.15 (0.0031 - 0.0059)
	Allowable limit	0.15 (0.0059)
Oil pump cover seal ring clearance mm (in)	Standard	0.1 - 0.25 (0.0039 - 0.0098)
	Allowable limit	0.25 (0.0098)

SERVICE DATA AND SPECIFICATIONS (SDS)

Input Shaft

*: Always check with the Parts Department for the latest parts information.

Input Shaft

NIAT0312
Unit: mm (in)

Input shaft seal ring clearance	Standard	0.08 - 0.23 (0.0031 - 0.0091)
	Allowable limit	0.23 (0.0091)

Planetary Carrier

NIAT0313
Unit: mm (in)

Clearance between planetary carrier and pin-ion washer	Standard	0.15 - 0.70 (0.0059 - 0.0276)
	Allowable limit	0.80 (0.0315)

Final Drive

DIFFERENTIAL SIDE GEAR CLEARANCE

NIAT0314

NIAT0314S01

Clearance between side gear and differential case with washer	0.1 - 0.2 mm (0.004 - 0.008 in)
---------------------------------------------------------------	---------------------------------

DIFFERENTIAL SIDE GEAR THRUST WASHERS

NIAT0314S02

Thickness mm (in)	Part number*
0.75 - 0.80 (0.0295 - 0.0315)	38424-D2111
0.80 - 0.85 (0.0315 - 0.0335)	38424-D2112
0.85 - 0.90 (0.0335 - 0.0354)	38424-D2113
0.90 - 0.95 (0.0354 - 0.0374)	38424-D2114
0.95 - 1.00 (0.0374 - 0.0394)	38424-D2115

*: Always check with the Parts Department for the latest parts information.

BEARING PRELOAD

NIAT0314S04

Differential side bearing preload "T"	0.04 - 0.09 mm (0.0016 - 0.0035 in)
---------------------------------------	-------------------------------------

TURNING TORQUE

NIAT0314S05

Turning torque of final drive assembly	0.49 - 1.08 N·m (5.0 - 11.0 kg·cm, 4.3 - 9.5 in·lb)
----------------------------------------	-----------------------------------------------------

DIFFERENTIAL SIDE BEARING ADJUSTING SHIMS

NIAT0314S06

Thickness mm (in)	Part number*
0.40 (0.0157)	31499-21X07
0.44 (0.0173)	31499-21X08
0.48 (0.0189)	31499-21X09
0.52 (0.0205)	31499-21X10
0.56 (0.0220)	31499-21X11
0.60 (0.0236)	31499-21X12
0.64 (0.0252)	31499-21X13
0.68 (0.0268)	31499-21X14
0.72 (0.0283)	31499-21X15
0.76 (0.0299)	31499-21X16
0.80 (0.0315)	31499-21X17
0.84 (0.0331)	31499-21X18
0.88 (0.0346)	31499-21X19
0.92 (0.0362)	31499-21X20
1.44 (0.0567)	31499-21X21

*: Always check with the Parts Department for the latest parts information.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

SERVICE DATA AND SPECIFICATIONS (SDS)

Final Drive (Cont'd)

TABLE FOR SELECTING DIFFERENTIAL SIDE BEARING ADJUSTING SHIMS

NIAT0314S08
Unit: mm (in)

Dial indicator deflection	Suitable shim(s)
0.31 - 0.35 (0.0122 - 0.0138)	0.40 (0.0157)
0.35 - 0.39 (0.0138 - 0.0154)	0.44 (0.0173)
0.39 - 0.43 (0.0154 - 0.0169)	0.48 (0.0189)
0.43 - 0.47 (0.0169 - 0.0185)	0.52 (0.0205)
0.47 - 0.51 (0.0185 - 0.0201)	0.56 (0.0220)
0.51 - 0.55 (0.0201 - 0.0217)	0.60 (0.0236)
0.55 - 0.59 (0.0217 - 0.0232)	0.64 (0.0252)
0.59 - 0.63 (0.0232 - 0.0248)	0.68 (0.0268)
0.63 - 0.67 (0.0248 - 0.0264)	0.72 (0.0283)
0.67 - 0.71 (0.0264 - 0.0280)	0.76 (0.0299)
0.71 - 0.75 (0.0280 - 0.0295)	0.80 (0.0315)
0.75 - 0.79 (0.0295 - 0.0311)	0.84 (0.0331)
0.79 - 0.83 (0.0311 - 0.0327)	0.88 (0.0346)
0.83 - 0.87 (0.0327 - 0.0343)	0.92 (0.0362)
0.87 - 0.91 (0.0343 - 0.0358)	0.48 (0.0189) + 0.48 (0.0189)
0.91 - 0.95 (0.0358 - 0.0374)	0.48 (0.0189) + 0.52 (0.0205)
0.95 - 0.99 (0.0374 - 0.0390)	0.52 (0.0205) + 0.52 (0.0205)
0.99 - 1.03 (0.0390 - 0.0406)	0.52 (0.0205) + 0.56 (0.0220)
1.03 - 1.07 (0.0406 - 0.0421)	0.56 (0.0220) + 0.56 (0.0220)
1.07 - 1.11 (0.0421 - 0.0437)	0.56 (0.0220) + 0.60 (0.0236)
1.11 - 1.15 (0.0437 - 0.0453)	0.60 (0.0236) + 0.60 (0.0236)
1.15 - 1.19 (0.0453 - 0.0469)	0.60 (0.0236) + 0.64 (0.0252)
1.19 - 1.23 (0.0469 - 0.0484)	0.64 (0.0252) + 0.64 (0.0252)
1.23 - 1.27 (0.0484 - 0.0500)	0.64 (0.0252) + 0.68 (0.0268)
1.27 - 1.31 (0.0500 - 0.0516)	0.68 (0.0268) + 0.68 (0.0268)
1.31 - 1.35 (0.0516 - 0.0531)	0.68 (0.0268) + 0.72 (0.0283)
1.35 - 1.39 (0.0531 - 0.0547)	1.44 (0.0567)
1.39 - 1.43 (0.0547 - 0.0563)	0.72 (0.0283) + 0.76 (0.0299)
1.43 - 1.47 (0.0563 - 0.0579)	0.76 (0.0299) + 0.76 (0.0299)
1.47 - 1.51 (0.0579 - 0.0594)	0.76 (0.0299) + 0.80 (0.0315)
1.51 - 1.55 (0.0594 - 0.0610)	0.80 (0.0315) + 0.80 (0.0315)
1.55 - 1.59 (0.0610 - 0.0626)	0.80 (0.0315) + 0.84 (0.0331)
1.59 - 1.63 (0.0626 - 0.0642)	0.84 (0.0331) + 0.84 (0.0331)
1.63 - 1.67 (0.0642 - 0.0657)	0.84 (0.0331) + 0.88 (0.0346)
1.67 - 1.71 (0.0657 - 0.0673)	0.88 (0.0346) + 0.88 (0.0346)
1.71 - 1.75 (0.0673 - 0.0689)	0.88 (0.0346) + 0.92 (0.0362)
1.75 - 1.79 (0.0689 - 0.0705)	0.92 (0.0362) + 0.92 (0.0362)
1.79 - 1.83 (0.0705 - 0.0720)	0.92 (0.0362) + 0.96 (0.0378)
1.83 - 1.87 (0.0720 - 0.0736)	0.96 (0.0378) + 0.96 (0.0378)
1.87 - 1.91 (0.0736 - 0.0752)	0.52 (0.0205) + 1.44 (0.0567)
1.91 - 1.95 (0.0752 - 0.0768)	0.56 (0.0220) + 1.44 (0.0567)

Reduction Pinion Gear

NIAT0315

BEARING PRELOAD

NIAT0315S01

Reduction pinion gear bearing preload	0.05 mm (0.0020 in)
---------------------------------------	---------------------

TURNING TORQUE

NIAT0315S02

Turning torque of reduction pinion gear	0.1 - 0.69 N·m (1.1 - 7.0 kg·cm, 0.95 - 6.08 in·lb)
-----------------------------------------	-----------------------------------------------------

SERVICE DATA AND SPECIFICATIONS (SDS)

Reduction Pinion Gear (Cont'd)

REDUCTION PINION GEAR BEARING ADJUSTING SHIMS

NIAT0315S03

Thickness mm (in)	Part number*	
1.74 (0.0685)	31438-31X16	GI
1.78 (0.0701)	31438-31X17	
1.82 (0.0717)	31438-31X18	MA
1.86 (0.0732)	31438-31X19	
1.90 (0.0748)	31438-31X20	
1.92 (0.0756)	31439-31X60	EM
1.94 (0.0764)	31438-31X21	
1.96 (0.0772)	31439-31X61	
1.98 (0.0780)	31438-31X22	
2.00 (0.0787)	31439-31X62	LC
2.02 (0.0795)	31438-31X23	
2.04 (0.0803)	31439-31X63	
2.06 (0.0811)	31438-31X24	
2.08 (0.0819)	31439-31X64	EC
2.10 (0.0827)	31438-31X60	
2.12 (0.0835)	31439-31X65	
2.14 (0.0843)	31438-31X61	FE
2.16 (0.0850)	31439-31X66	
2.18 (0.0858)	31438-31X62	
2.20 (0.0866)	31439-31X67	CL
2.22 (0.0874)	31438-31X63	
2.24 (0.0882)	31439-31X68	
2.26 (0.0890)	31438-31X64	
2.28 (0.0898)	31439-31X69	MT
2.30 (0.0906)	31438-31X65	
2.34 (0.0921)	31438-31X66	
2.38 (0.0937)	31438-31X67	
2.42 (0.0953)	31438-31X68	AT
2.46 (0.0969)	31438-31X69	
2.50 (0.0984)	31438-31X70	
2.54 (0.1000)	31438-31X71	AX
2.58 (0.1016)	31438-31X72	
2.62 (0.1031)	31438-31X73	
2.66 (0.1047)	31438-31X74	SU

*: Always check with the Parts Department for the latest parts information.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

SERVICE DATA AND SPECIFICATIONS (SDS)

Reduction Pinion Gear (Cont'd)

TABLE FOR SELECTING REDUCTION PINION GEAR BEARING ADJUSTING SHIM

NIAT0315S04
Unit: mm (in)

Dimension "T"	Suitable shim(s)
1.77 - 1.81 (0.0697 - 0.0713)	1.74 (0.0685)
1.81 - 1.85 (0.0713 - 0.0728)	1.78 (0.0701)
1.85 - 1.89 (0.0728 - 0.0744)	1.82 (0.0717)
1.89 - 1.93 (0.0744 - 0.0760)	1.86 (0.0732)
1.93 - 1.96 (0.0760 - 0.0772)	1.90 (0.0748)
1.96 - 1.98 (0.0772 - 0.0780)	1.92 (0.0756)
1.98 - 2.00 (0.0780 - 0.0787)	1.94 (0.0764)
2.00 - 2.02 (0.0787 - 0.0795)	1.96 (0.0772)
2.02 - 2.04 (0.0795 - 0.0803)	1.98 (0.0780)
2.04 - 2.06 (0.0803 - 0.0811)	2.00 (0.0787)
2.06 - 2.08 (0.0811 - 0.0819)	2.02 (0.0795)
2.08 - 2.10 (0.0819 - 0.0827)	2.04 (0.0803)
2.10 - 2.12 (0.0827 - 0.0835)	2.06 (0.0811)
2.12 - 2.14 (0.0835 - 0.0843)	2.08 (0.0819)
2.14 - 2.16 (0.0843 - 0.0850)	2.10 (0.0827)
2.16 - 2.18 (0.0850 - 0.0858)	2.12 (0.0835)
2.18 - 2.20 (0.0858 - 0.0866)	2.14 (0.0843)
2.20 - 2.22 (0.0866 - 0.0874)	2.16 (0.0850)
2.22 - 2.24 (0.0874 - 0.0888)	2.18 (0.0858)
2.24 - 2.26 (0.0882 - 0.0890)	2.20 (0.0866)
2.26 - 2.28 (0.0890 - 0.0898)	2.22 (0.0874)
2.28 - 2.30 (0.0898 - 0.0906)	2.24 (0.0882)
2.30 - 2.32 (0.0906 - 0.0913)	2.26 (0.0890)
2.32 - 2.34 (0.0913 - 0.0921)	2.28 (0.0898)
2.34 - 2.37 (0.0921 - 0.0933)	2.30 (0.0906)
2.37 - 2.41 (0.0933 - 0.0949)	2.34 (0.0921)
2.41 - 2.45 (0.0949 - 0.0965)	2.38 (0.0937)
2.45 - 2.49 (0.0965 - 0.0980)	2.42 (0.0953)
2.49 - 2.53 (0.0980 - 0.0996)	2.46 (0.0969)
2.53 - 2.57 (0.0996 - 0.1012)	2.50 (0.0984)
2.57 - 2.61 (0.1012 - 0.1028)	2.54 (0.1000)
2.61 - 2.65 (0.1028 - 0.1043)	2.58 (0.1016)
2.65 - 2.69 (0.1043 - 0.1059)	2.62 (0.1031)
2.69 - 2.73 (0.1059 - 0.1075)	2.66 (0.1047)

Output Shaft

NIAT0316

SEAL RING CLEARANCE

NIAT0316S01
Unit: mm (in)

Output shaft seal ring clearance	Standard	0.10 - 0.25 (0.0039 - 0.0098)
	Allowable limit	0.25 (0.0098)

END PLAY

NIAT0316S02

Output shaft end play	0 - 0.5 mm (0 - 0.020 in)
-----------------------	---------------------------

OUTPUT SHAFT END PLAY ADJUSTING SHIMS

NIAT0316S03

Thickness mm (in)	Part number*
0.56 (0.0220)	31438-31X46
0.96 (0.0378)	31438-31X47
1.36 (0.0535)	31438-31X48

*: Always check with the Parts Department for the latest parts information.

Bearing Retainer

NIAT0317

SEAL RING CLEARANCE

NIAT0317S01
Unit: mm (in)

Bearing retainer seal ring clearance	Standard	0.10 - 0.25 (0.0039 - 0.0098)
	Allowable limit	0.25 (0.0098)

SERVICE DATA AND SPECIFICATIONS (SDS)

Total End Play

Total End Play

NIAT0318

Total end play "T ₃ "	0.25 - 0.55 mm (0.0098 - 0.0217 in)
----------------------------------	-------------------------------------

BEARING RACE FOR ADJUSTING TOTAL END PLAY

NIAT0318S01

Thickness mm (in)	Part number*
0.6 (0.024)	31435-31X01
0.8 (0.031)	31435-31X02
1.0 (0.039)	31435-31X03
1.2 (0.047)	31435-31X04
1.4 (0.055)	31435-31X05
1.6 (0.063)	31435-31X06
1.8 (0.071)	31435-31X07
2.0 (0.079)	31435-31X08

*: Always check with the Parts Department for the latest parts information.

Reverse Clutch End Play

NIAT0319

Reverse clutch end play "T ₄ "	0.65 - 1.00 mm (0.0256 - 0.0394 in)
-------------------------------------------	-------------------------------------

THRUST WASHERS FOR ADJUSTING REVERSE CLUTCH END PLAY

NIAT0319S01

Thickness mm (in)	Part number*
0.65 (0.0256)	31508-31X10
0.80 (0.0315)	31508-31X11
0.95 (0.0374)	31508-31X12
1.10 (0.0433)	31508-31X13
1.25 (0.0492)	31508-31X14
1.40 (0.0551)	31508-31X15

*: Always check with the Parts Department for the latest parts information.

Accumulator

NIAT0320

O-RING

NIAT0320S01
Unit: mm (in)

Accumulator	Diameter (Small)	Part number*	Diameter (Large)	Part number*
Servo release accumulator	26.9 (1.059)	31526-41X03	44.2 (1.740)	31526-41X02
N-D accumulator	34.6 (1.362)	31526-31X08	39.4 (1.551)	31672-21X00

*: Always check with the Parts Department for the latest parts information.

RETURN SPRING

NIAT0320S02
Unit: mm (in)

Accumulator	Free length	Outer diameter	Part number*
Servo release accumulator spring	52.5 (2.067)	20.1 (0.791)	31605-80X00
N-D accumulator spring	45.0 (1.772)	27.6 (1.087)	31605-33X01

*: Always check with the Parts Department for the latest parts information.

Band Servo

NIAT0321

RETURN SPRING

NIAT0321S01
Unit: mm (in)

Return spring	Free length	Outer diameter	Part number*
2nd servo return spring	32.5 (1.280)	25.9 (1.020)	31605-31X20
OD servo return spring	38.52 (1.5165)	22.0 (0.866)	31605-31X21

*: Always check with the Parts Department for the latest parts information.

SERVICE DATA AND SPECIFICATIONS (SDS)

Removal and Installation

Removal and Installation

Unit: mm (in) NIAT0322

	QG18DE	SR20DE
Distance between end of converter housing and torque converter	21.1 (0.831)	15.9 (0.626)

Shift Solenoid Valves

NIAT0323

Gear	Solenoid A	Solenoid B
1st	ON	ON
2nd	OFF	ON
3rd	OFF	OFF
4th	ON	OFF

Solenoid Valve

NIAT0324

Solenoid valve	Resistance (Approx.)	Terminal number
Shift solenoid A	20 - 30Ω	2
Shift solenoid B	5 - 20Ω	1
Ovr. clutch sol.	20 - 30Ω	3
Line pres. sol.	2.5 - 5Ω	4
T/conv. clutch sol.	5 - 20Ω	5

A/T Fluid Temperature Sensor

NIAT0325

Monitor Item	Condition	Specification (Approx.)	
A/T fluid temperature sensor	Cold [20°C (68°F)]	1.5V	2.5 kΩ
	↓	↓	↓
	Hot [80°C (176°F)]	0.5V	0.3 kΩ

Revolution Sensor

NIAT0326

Condition	Judgement standard
When moving at 20 km/h (12 MPH), use the CONSULT-II pulse frequency measuring function. *1 CAUTION: Connect the diagnosis data link cable to the vehicle diagnosis connector. *1: A circuit tester cannot be used to test this item.	Approximately 150 Hz
When vehicle not moving.	Under 1.3V or over 4.5V

Dropping Resistor

NIAT0327

Resistance	
	10 - 15Ω